




Brother Color Laser Printer **SERVICE MANUAL**

MODEL: HL-2400C / 2400Ce

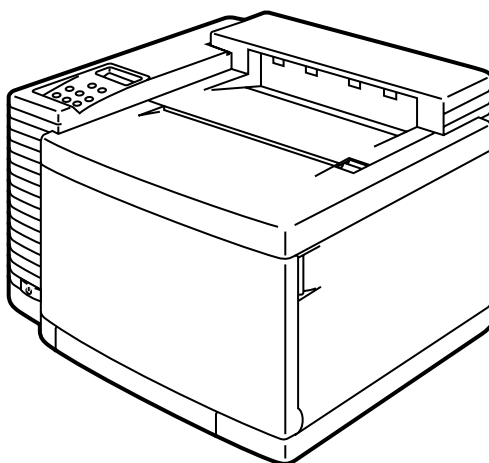

Read this manual thoroughly before maintenance work.

Keep this manual in a convenient place for quick and easy reference at all times.

© Copyright Brother 2000

All rights reserved.

No part of this publication may be reproduced in any form or by any means without permission in writing from the publisher.

Specifications are subject to change without notice.

Trademarks:

The brother logo is a registered trademark of Brother Industries, Ltd.

Apple, the Apple Logo, and Macintosh are trademarks, registered in the United States and other countries, and True Type is a trademark of Apple computer, Inc.

Epson is a registered trademark and FX-80 and FX-850 are trademarks of Seiko Epson Corporation.

Hewlett Packard is a registered trademark and HP Laser Jet is a trademark of Hewlett Packard Company.

IBM, IBM PC and Proprinter are registered trademarks of International Business Machines Corporation.

Microsoft and MS-DOS are registered trademarks of Microsoft Corporation.

Windows is a registered trademark of Microsoft Corporation in the U.S. and other countries.

PREFACE

This service manual contains basic information required for after-sales service of the color laser printer (here-in-after referred to as "this machine" or "the printer"). This information is vital to the service technician to maintain the high printing quality and performance of the printer.

This service manual covers the HL-2400C / 2400Ce color laser printer.

This manual consists of the following chapters:

CHAPTER I : OUTLINE OF PRODUCT

Features, parts names, internal structure, and description of the control panel.

CHAPTER II : SPECIFICATIONS

Specifications, etc.

CHAPTER III : INSTALLATION

Installation conditions and installation procedures.

CHAPTER IV : STRUCTURE OF SYSTEM COMPONENTS

Basic operation of the mechanical system, the electrical system and the electrical circuits and their timing information.

CHAPTER V : CONTROL PANEL OPERATION

Operation and setting procedures on the control panel.

CHAPTER VI : PERIODIC MAINTENANCE

Description of periodic maintenance parts, and procedures for periodic replacement and cleaning.

CHAPTER VII : DISASSEMBLY

Procedures for replacement of the mechanical system parts.

CHAPTER VIII : TROUBLESHOOTING

Description of error messages on the control panel, troubleshooting image failure, etc.

APPENDICES : SERIAL NO. DESCRIPTIONS, ETC.

Information in this manual is subject to change due to improvement or re-design of the product. All relevant information in such cases will be supplied in service information bulletins (Technical Information).

A thorough understanding of this printer, based on information in this service manual and service information bulletins, is required for maintaining its print quality performance and for improving the practical ability to find the cause of problems.

CONTENTS

CHAPTER I PRODUCT OUTLINE.....	I-1
1. FEATURES.....	I-1
2. PARTS NAMES & FUNCTIONS.....	I-4
3. INTERNAL STRUCTURE	I-6
4. DESCRIPTION OF CONTROL PANEL	I-7
4.1 Video Controller Mode.....	I-7
4.2 Engine Controller Mode.....	I-7
CHAPTER II SPECIFICATIONS	II-1
1. RATING	II-1
2. GENERAL SPECIFICATIONS.....	II-2
2.1. Printing	II-2
2.2. Functions.....	II-3
2.3. Electrical and Mechanical	II-3
2.4. Paper Specification	II-4
3. ENVIRONMENTAL CONDITION.....	II-8
3.1 Ambient Temperature / Humidity / Altitude.....	II-8
CHAPTER III INSTALLATION.....	III-1
1. CONDITIONS REQUIRED FOR INSTALLATION	III-1
1.1. Environmental Conditions	III-1
1.2. Basic Layout of Printer Set-up Location.....	III-1
2. UNPACKING	III-2
2.1 Unpacking of Printer.....	III-2
2.2 Unpack the Starter Kit.....	III-4
3. INSTALLATION WORK	III-5
3.1 Install the OPC Belt Cartridge	III-5
3.2 Install the Toner Cartridge to the Printer	III-6
3.3 Install the Oil Bottle and Fuser Cleaner	III-7
3.4 Test Print.....	III-8
CHAPTER IV STRUCTURE OF SYSTEM COMPONENTS.....	IV-1
1. BASIC STRUCTURE	IV-1
1.1 Print System and Transfer System	IV-6
1.2 Scanning System	IV-21
1.3 Paper Transportation System	IV-23
1.4 Fusing Unit.....	IV-25

2. STRUCTURE OF THE CONTROL SYSTEM	IV-27
2.1 Basic Structure.....	IV-27
2.2 Control System.....	IV-36
2.3 Main PCB (Video Controller PCB)	IV-46
2.4 Power Supply Unit.....	IV-70
2.5 High Voltage Power Supply Unit.....	IV-73
2.6 Wiring Diagram.....	IV-76

CHAPTER V CONTROL PANEL OPERATION V-1

1. PANEL LAYOUT	V-1
2. VIDEO CONTROLLER MODE	V-2
2.1 Configuration of Operational Mode	V-2
2.2 Toner Save Mode / Power Save Mode	V-3
2.3 Line Test Mode	V-4
2.4 DRAM Test Mode.....	V-8
2.5 Program Version Display Mode	V-9
2.6 Test Print Mode.....	V-10
2.7 NVRAM Reset Mode	V-10
3. ENGINE CONTROLLER MODE	V-11
3.1 Configuration of Operational Mode	V-11
3.2 Operation of Normal Mode	V-13
3.3 Service Mode	V-19
3.4 Adjustment Work Procedures	V-39

CHAPTER VI PERIODIC MAINTENANCE VI-1

1. GENERAL	VI-1
1.1 Handling Precautions.....	VI-1
1.2 Periodic Maintenance Cleaning.....	VI-4
1.3 Periodic Maintenance Parts and Maintenance Cycle.....	VI-15
2. PERIODIC MAINTENANCE PROCEDURES	VI-18
2.1 OPC Belt Cartridge Replacement	VI-18
2.2 Fusing Unit Replacement	VI-20
2.3 Transfer Roller Replacement.....	VI-22
2.4 Paper Discharger Unit Replacement.....	VI-24
2.5 Drum Cleaner Replacement	VI-26
2.6 Ozone Filter Replacement.....	VI-28
2.7 Paper Feed Roller and Separator Pad Replacement.....	VI-29
2.8 Transfer Drum Replacement.....	VI-30

CHAPTER VII DISASSEMBLY.....VII-1

1. BEFORE STARTING DISASSEMBLY.....	VII-1
1.1 Precautions	VII-1
1.2 Preparation of Disassembly	VII-1
2. PARTS NAME	VII-3
2.1 Cover.....	VII-3
2.2 Circuit Boards (PCBs)	VII-4
2.3 Motor Units.....	VII-4
2.4 Clutches and Solenoids	VII-5
2.5 Sensors	VII-6
3. DISASSEMBLY FLOW	VII-7
4. DISASSEMBLY PROCEDURE.....	VII-8
4.1 Right Side of the Printer	VII-8
4.2 Top of the Printer	VII-17
4.3 Left Side of the Printer.....	VII-26
4.4 Paper Exit Unit	VII-33
4.5 Front of the Printer	VII-38
4.6 Rear of the Printer.....	VII-40
4.7 Fusing Unit.....	VII-44

CHAPTER VIII TROUBLESHOOTINGVIII-1

1. OUTLINE OF TROUBLESHOOTING	VIII-2
2. OPERATOR CALL.....	VIII-3
2.1 Video Controller Mode.....	VIII-3
2.2 Engine Controller Mode.....	VIII-6
3. PAPER TRANSPORT ERROR.....	VIII-8
3.1 Feed Jam	VIII-8
3.2 Inner Jam	VIII-9
3.3 Outer Jam	VIII-9
3.4 Others	VIII-9
4. SERVICE CALL	VIII-10
4.1 Video Controller Mode.....	VIII-11
4.2 Engine Controller Mode.....	VIII-13
5. IMAGE FAILURE	VIII-41

APPENDIX A.....A-1

REGULATIONS

LASER SAFETY (FOR 110-120 V MODEL ONLY)

This printer is certified as a Class I laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

Since radiation emitted inside the printer is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

FDA REGULATIONS (FOR 110-120 V MODEL ONLY)


U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. One of the following labels on the back of the printer indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

Caution

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

IEC 825 SPECIFICATION (FOR 220-240 V MODEL ONLY)

This printer is a Class 1 laser product as defined in IEC 825 specifications. The label shown below is attached in countries where required.

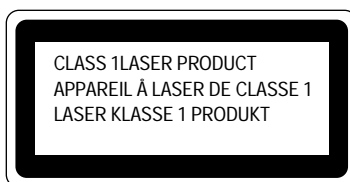


This printer has a Class 3B Laser Diode which emits invisible laser radiation in the Scanner Unit. The Scanner Unit should not be opened under any circumstances.

Caution

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

The following caution label is attached near the scanner unit.

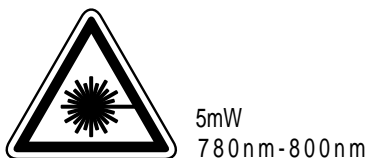

For Finland and Sweden

LUOKAN 1 LASERLAITE

KLASS 1 LASER APPARAT

Varoitus! Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

Varning – Om apparaten används på annat sätt än i denna Bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

SAFETY INSTRUCTIONS

SAFETY PRINCIPLE

- 1) Before starting any operations, read this manual thoroughly. Especially read the safety instructions in this section carefully and ensure that you understand the contents.
- 2) Perform all the operations by following the procedures described in this manual. Follow all the cautions and warnings set out in the procedures and on safety labels affixed to the machine. Failure to do so may result in human injury or equipment damage.
- 3) Perform only the procedures explained in this manual. Refrain from opening or touching any portions that are not related to your required operation(s).
- 4) Repair and replacement of parts should be performed by trained and qualified persons only. Operators should not attempt to do such repair or replacement work.
- 5) It must be appreciated that the above-mentioned cautions and warnings do not cover everything because it is impossible to evaluate all the circumstances of repair situations.

SPECIAL SAFETY INFORMATION

Introductory Information

Cautions and warnings are made clear by following the 'Safety Alert Symbols' or 'Signal Words' such as DANGER, WARNING and CAUTION.

<SAFETY ALERT SYMBOL>

This is the safety alert. When you find this symbol placed on the equipment or marked in this manual, be aware of the potential of human injuries. Follow the recommended precautions and safety operation practices.

<Understanding Signal Words>

DANGER is used to indicate the presence of a hazard which will cause severe human injuries or a fatal accident if the warning is ignored.

WARNING is used to indicate the presence of a hazard or unsafe practices which may cause severe human injuries or a fatal accident if the warning is ignored.

CAUTION is used to indicate the presence of a hazard or unsafe practices which may cause minor human injuries if the warning is ignored. CAUTION also calls your attention to safety messages in this manual.

<Follow Safety Instructions>

Carefully read all the safety messages set out in this manual and also in the safety warning signs placed on the equipment. In this manual, the safety instructions (safety alert symbols and signal words) are enclosed in a rectangular enclosure to bring them to your attention. Keep the safety signs on the equipment in good condition and ensure none are missing or damaged. Replace the safety signs if unreadable or damaged. Learn how to operate the equipment and how to use the controls properly. Do not let anyone operate this equipment without following the instructions. Keep the equipment in proper working condition. Unauthorized modification to the equipment may impair the function & safety and affect the life of the equipment.

Listed below are the various kinds of "WARNING" messages contained in this manual.



WARNING

HAZARDOUS VOLTAGE

May cause serious injuries or fatal accidents. Voltage is now applied from the power supply of printer. There is a danger of electrical shock if you touch the active area inside the printer.

Be sure to turn the power supply switch OFF and pull the plug out from the power outlet before starting maintenance work on the printer.



WARNING

HARMFUL OZONE GAS

Inhalation of an excessive amount of ozone gas may adversely affect the respiratory organs.

An Ozone Filter is fitted to this printer to reduce the exhausted ozone. This filter must be replaced with a new filter periodically in accordance with the manual supplied with the printer.



WARNING

HOT SURFACE

The Fusing Unit reaches a temperature of approx. 160°C and adjacent parts are also very hot.

When you need to change the cleaning pad or remove jammed paper, wait about 20 minutes after opening the paper exit unit to allow the unit to cool down.



CAUTION

ROTATING PARTS

Be aware of the potential danger of various rollers and take care not to get your fingers or hand caught into the machine, this can cause serious injuries. Note that the exit roller that ejects the printed paper is rotating while printing.

Be careful not to get your hair, fingers, hands, sleeve or necktie caught in the machine while operating the machine.



CAUTION

HAZARDOUS POWDER

Toner is a fine powder which can cause a powder explosion if disposed of into a fire. Under no circumstances dispose of toner into a fire.



CAUTION

HAZARDOUS POWDER

Toner is a fine powder which may cause irritation to the eyes and respiratory organs if inhaled.

Handle the toner cartridge, waste toner pack and developing unit carefully so as not to spill the toner.



CAUTION

POWER CORDS & PLUGS

This printer is equipped with a 3-wire power cord fitted with a 3-pronged plug (bi-polar plug with grounding) for the user's safety.

Use these power cords in conjunction with a properly grounded electrical outlet to avoid an electrical shock.




CAUTION






SAFETY INTERLOCK

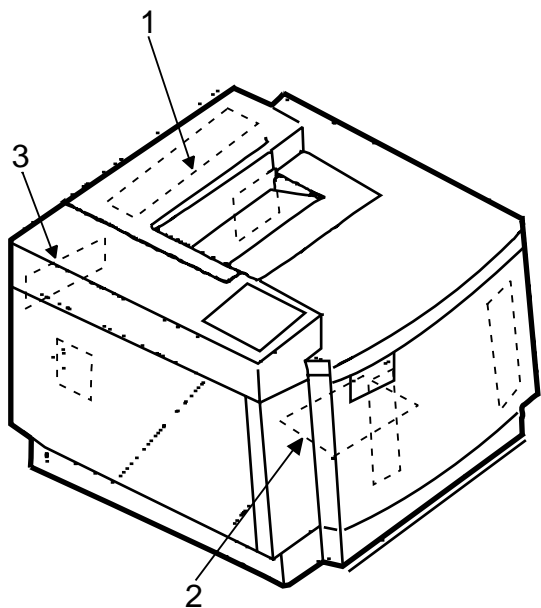The front cover, paper exit unit and transfer unit of this printer have electrical safety interlocks to turn the power off whenever they are opened. Do not attempt to circumvent these safety interlocks.

<Label Location>



1. Hot Caution Label

	 WARNING	 WARNUNG	 AVERTISSEMENT	 高圧注意
	Hot surface. Avoid contact.	Heiße oberfläche. Bei beseitigung.	Surface chaude. Eviter tout contact.	火傷の恐れがあります。 触れないでください。

2. Laser Caution Label






5mW
780nm-800nm








 

DANGER-	INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.
VORSICHT-	UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN.
DANGER-	RAYON LASER INVISIBLE LORS DE L'OUVERTURE. EVITER L'EXPOSITION DIRECTE.
PELIGRO-	RADIACION LASER INVISIBLE AL ABRIR. EVITAR LA EXPOSICION DIRECTA AL HAZ.
危険	開けたときレーザー放射の危険有り。 ビームに直接当たらないように注意して下さい。 MAS

3. Rating Label

(For US)

 MODEL HL-C1 SER. NO.  U 5 2 4 9 2 L 7 H 1 1 1 1 0 1 120V ~ 50/60Hz 8.0A BROTHER INDUSTRIES, LTD. MADE IN JAPAN BROTHER PRINTER HL SERIES COVERED BY ONE OR MORE FOLLOWING PATENTS: USP4, 968, 159 USPS, 050, 228 USPS, 068, 805 USPS, 086, 481 USPS, 093, 904 USPS, 126, 788	 CLASS 1 LASER PRODUCT APPAREIL À LASER DE CLASSE 1 LASER KLASSE 1 PRODUKT MANUFACTURED: NOVEMBER 1997 HTJ BROTHER INDUSTRIES, LTD. 15-1, Nishino-cho, Maizumi-ku, Nagoya 467, Japan. This product complies with FCC radiation performance standards, 21 CFR Subchapter J. FCC ID: B3QHLCT1 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
---	--

(For Europe)


 MODEL HL-C1 SER. NO.  E 5 2 6 1 9 L 7 H 1 1 1 1 0 1 220V-240V ~ 50/60Hz 4.0A BROTHER INDUSTRIES, LTD.     	 CLASS 1 LASER PRODUCT APPAREIL À LASER DE CLASSE 1 LASER KLASSE 1 PRODUKT  ACN 001 393 835 MADE IN JAPAN
---	--

SHIPMENT OF THE PRINTER

If for any reason you must ship the printer, carefully package the printer to avoid any damage during transit. It is recommended that you save and use the original packaging. The printer should also be adequately insured with the carrier.

CAUTION

- *When shipping the printer, remove the toner cartridges, the OPC belt cartridge and the waste toner pack from the printer to prevent toner spill in the printer or damage of the toner cartridge and the OPC belt cartridge.*
- *When shipping the printer, remove the oil bottle and the fuser cleaner from the fusing unit. After removing the oil bottle, be sure to remove the oil remaining in the fusing unit with the supplied syringe. Failure to do so will cause severe damage to the printer.*

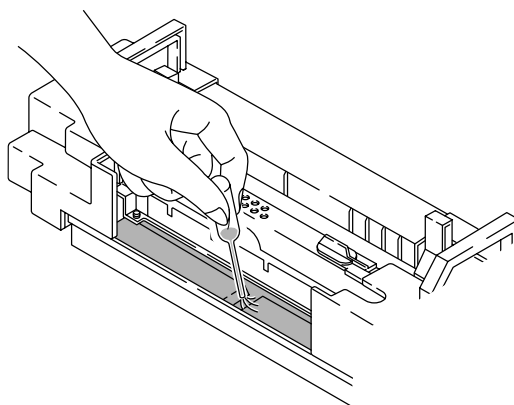

CHAPTER I

PRODUCT OUTLINE

CONTENTS

CHAPTER I PRODUCT OUTLINE.....	I-1
1. FEATURES.....	I-1
2. PARTS NAMES & FUNCTIONS.....	I-4
3. INTERNAL STRUCTURE	I-6
4. DESCRIPTION OF CONTROL PANEL	I-7
4.1 Video Controller Mode	I-7
4.2 Engine Controller Mode.....	I-7

CHAPTER I PRODUCT OUTLINE

1. FEATURES

This printer has the following features:

2400 x 600 dpi Class Resolution

The printer prints pages with a resolution of 600 dots per inch (dpi) as default. It also provides higher quality printout which is the equivalent of 2400 x 600 dpi resolution when using HRC or CAPT.

High Speed Color Laser Printing

The printer allows crisp printing in 24 bit brilliant color. The printer prints at a speed of 16 pages per minute in monochrome mode and 4 pages per minute in full color mode. The controller utilizes a high speed 32-bit RISC microprocessor and special hardware chips, which provides a very fast processing speed.

High Resolution Control (HRC)

The high resolution control (HRC) technology provides clear and crisp printouts and improves even the 600 dpi resolution. This mode is effective when printing text data.

Color Advanced Photoscale Technology (CAPT)

The printer can print graphics in 256 shades for each color in HP® color printer PCL5C™ and BR-Script level 2 emulations, producing nearly photographic quality. This mode is effective when printing photographic images.

Maintenance-Free Toner Cartridge

A toner cartridge can print up to 10,000 (Black) and 6,000 (Cyan, Magenta and Yellow) single-sided pages at 5% coverage. The one piece, easy-to-replace toner cartridges do not require difficult maintenance.

Universal Media Cassette

This printer loads paper automatically from the media cassette. Since the media cassette is a universal type, a number of different sizes of paper can be used. Even envelopes can be loaded from the media cassette.

Three Interfaces

This printer has a high speed IEEE 1284 compliant bi-directional parallel interface, an RS-232C serial interface, and a modular input/output (MIO) compatible interface.

If the application software supports the bi-directional parallel interface, you can monitor the printer status. It is fully compatible with the industry-standard IEEE 1284 bi-directional parallel interface.

The RS-232C serial interface is an industry standard so that you can connect it to any computer using a standard serial cable.

The MIO interface allows you to install a commercial MIO-compatible card. If the card is installed, this interface port can be used for features such as networking or printer sharing.

Automatic Interface Selection

The printer can automatically select the bi-directional parallel, RS-232C serial, or MIO interface depending on the interface port through which it receives data. With this feature, the printer can be connected to more than one computer.

Five Emulation Modes

The printer can emulate Hewlett-Packard Color PCL® 5C (PCL6® in monochrome mode) and PostScript® Level 2 language emulation (Brother BR-Script Level 2) printers, the industry-standard HP-GL™ plotter as well as EPSON® FX-850™, and IBM® Proprinter XL® printers (in monochrome mode). It is possible to print with all application programs that support one of these printers.

Automatic Emulation Selection

The printer can automatically select the printer emulation mode depending on the print commands it receives from the computer software. With this feature, many users can share the printer on a network.

Data Compression Technology

The printer can internally compress the received graphics and font data in its memory so that it can print larger graphics and more fonts without additional memory.

Various Fonts

The printer has 75 scalable fonts and 12 bitmapped fonts. The fonts that can be used vary according to the current emulation mode.

CCITT G3/G4

Since the printer supports the CCITT G3/G4 format in addition to HP-compatible formats, it can quickly receive and print data compressed in this format.

Lock Panel

If the panel button settings have been changed, the printer may not work as expected. It is possible for the administrator of the printer to lock the settings to prevent changes from being made.

Power Save Mode

The printer has a power saving mode. As laser printers consume power to keep the fixing assembly at a high temperature, this feature can save electricity when the printer is on but not being used. The factory setting of the Power Save mode is ON so that it complies with the EPA Energy Star new specification. Compared with conventional laser printers, this printer consumes less power even when the power saving mode is turned off.

Toner Save Mode

The printer has an economical toner save mode. This mode allows you to reduce the printer running cost substantially in addition to the improved life expectancy of the toner cartridge.

Reprint Function

A touch of a panel button allows reprinting of the last print job without sending the data again from the computer. When there is not enough memory to print the last complete job out, the last print page can be reprinted.

PCMCIA Card Slot

The printer has two PCMCIA card slots (Type II cards: 2 slots available, Type III cards: 1 slot available). The following cards can be installed;

- PCMCIA-compatible flash memory card
- HDD card
- PCMCIA Fax Modem card

Saving User Settings

It is possible to operate the printer differently from other users with the panel button settings. Two sets of user settings can be stored.

2. PARTS NAMES & FUNCTIONS

<Front View>

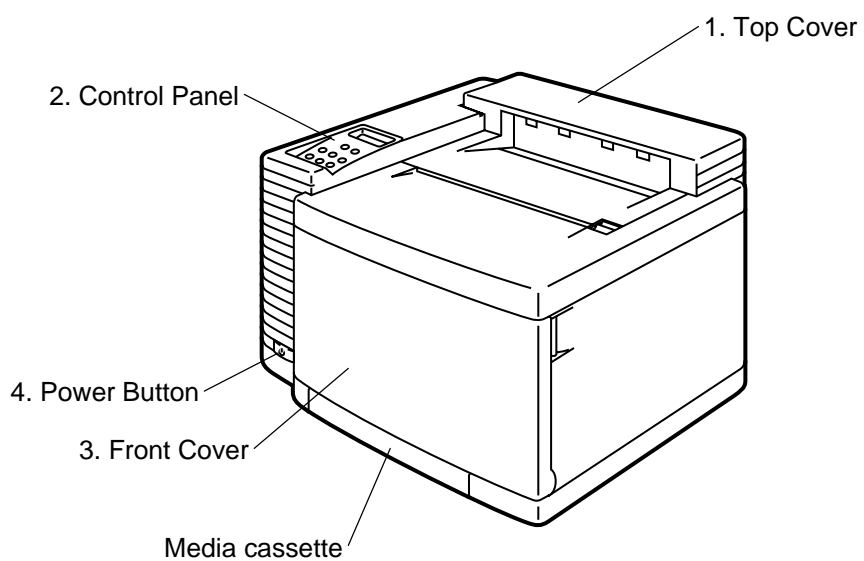


Fig.1-1

<Rear View>

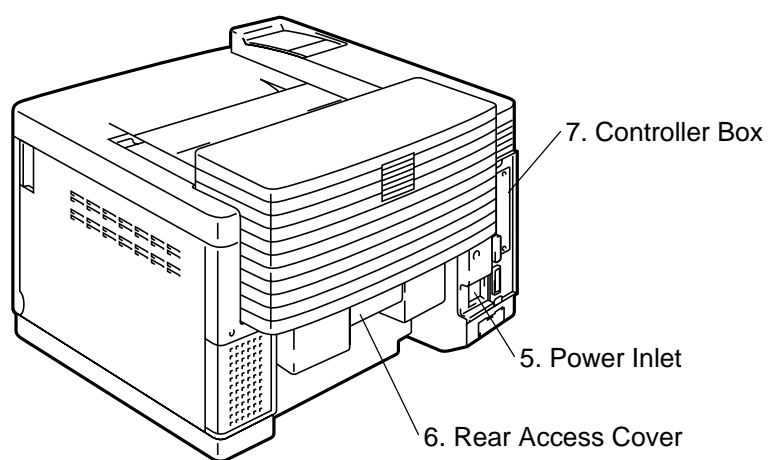


Fig.1-2

No.	Part Name	Outline of Functions
1	Top Cover	To act as an upper enclosure and also as a paper tray for printed paper.
2	Control Panel	To display the status of printer operation.
3	Front Cover	To act as a front enclosure, opened when replacing a toner cartridge or waste toner pack.
4	Power Button	To operate power-on and off to the printer. (Push for On/Off operation)
5	Power Inlet	To connect a power supply cable.
6	Rear Access Cover	To act as a rear enclosure, opened when clearing an internal jam or doing maintenance work.
7	Controller Box	Space where the main (video controller) PCB is installed.

3. INTERNAL STRUCTURE

<Cross Sectional View >

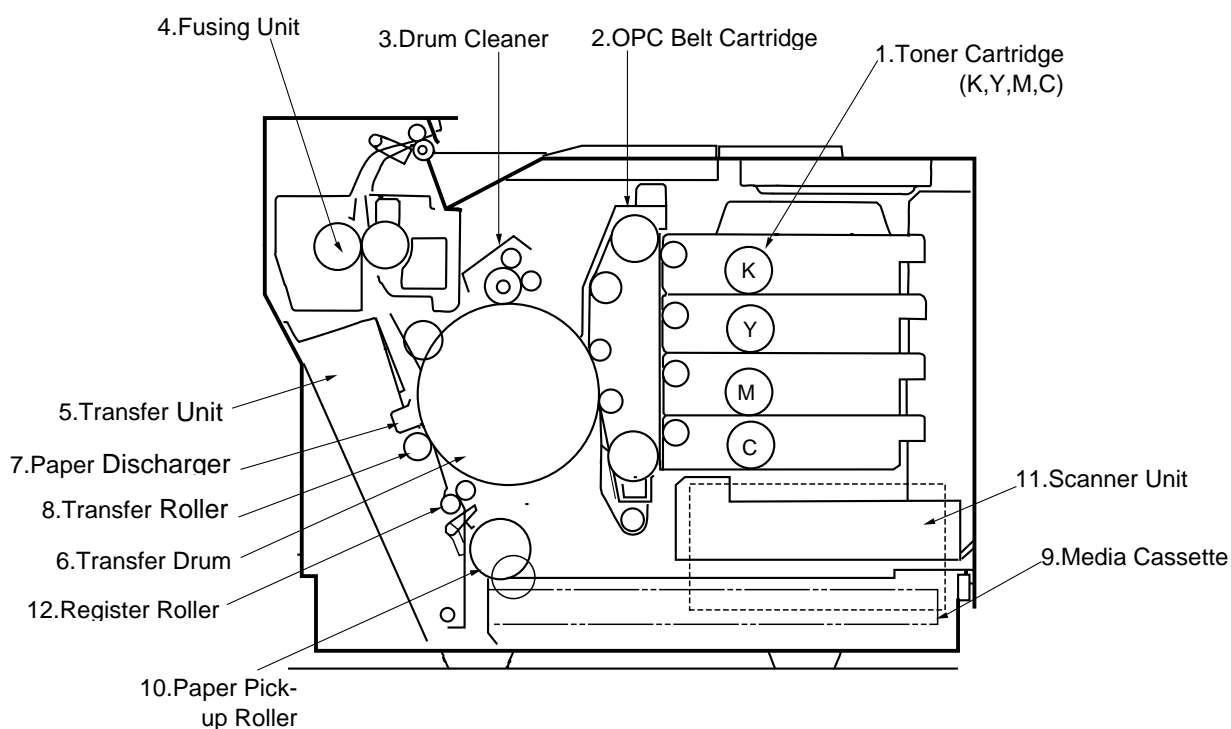


Fig.1-3

No.	Components Name	Outline of Functions
1	Toner Cartridge	Contain the toner (K, Y, M, C) for developing. Each toner cartridge (K, Y, M, C) is independent.
2	OPC Belt Cartridge	Forms images and includes the photoconductive belt.
3	Drum Cleaner	Cleans and collects waste toner adhering to the transfer drum.
4	Fusing Unit	Fixes by heat and pressure the toner image onto the paper.
5	Transfer unit	Transfers toner images from the transfer drum to the paper.
6	Transfer Drum	Forms color images, combining the toner images from the OPC belt on the drum.
7	Paper Discharger	Emits a corona charge for separating the paper from the transfer drum.
8	Transfer Roller	Transfer the toner image on the transfer drum to the paper.
9	Media Cassette	Feeds paper automatically.
10	Paper Pick-up Roller	Feeds paper automatically from the paper cassette.
11	Scanner Unit	Generates a laser beam and scans the OPC belt.
12	Register roller	Aligns the paper correctly ready for printing

4. DESCRIPTION OF CONTROL PANEL

The printer control panel provides control of the printer including test printing, maintenance operations performed by the video controller and also the ones which are performed by the engine controller.

The Video Controller Mode and the Engine Controller Mode have some common functions. Under normal circumstances the functions in the Video controller mode will be used. Refer to Chapter V for further information.

4.1 Video Controller Mode

The printer goes into the Video Controller Mode when the power is turned on by pressing the power button.

The Video Controller Mode supplies the general test printing and setting functions and some of the maintenance operations. If further engine settings are required, use the Engine Controller Mode.

4.2 Engine Controller Mode

The printer goes into the Engine Controller Mode when power is turned on by pressing the power button at the same time as holding down the Mode, Set and ▼ buttons. (Refer to Fig.1-4.)

Note:

This mode provides unique control panel display and operation functions which are completely different from the ones described on the actual control panel or in the user's guide. Refer to Chapter V for detailed information.

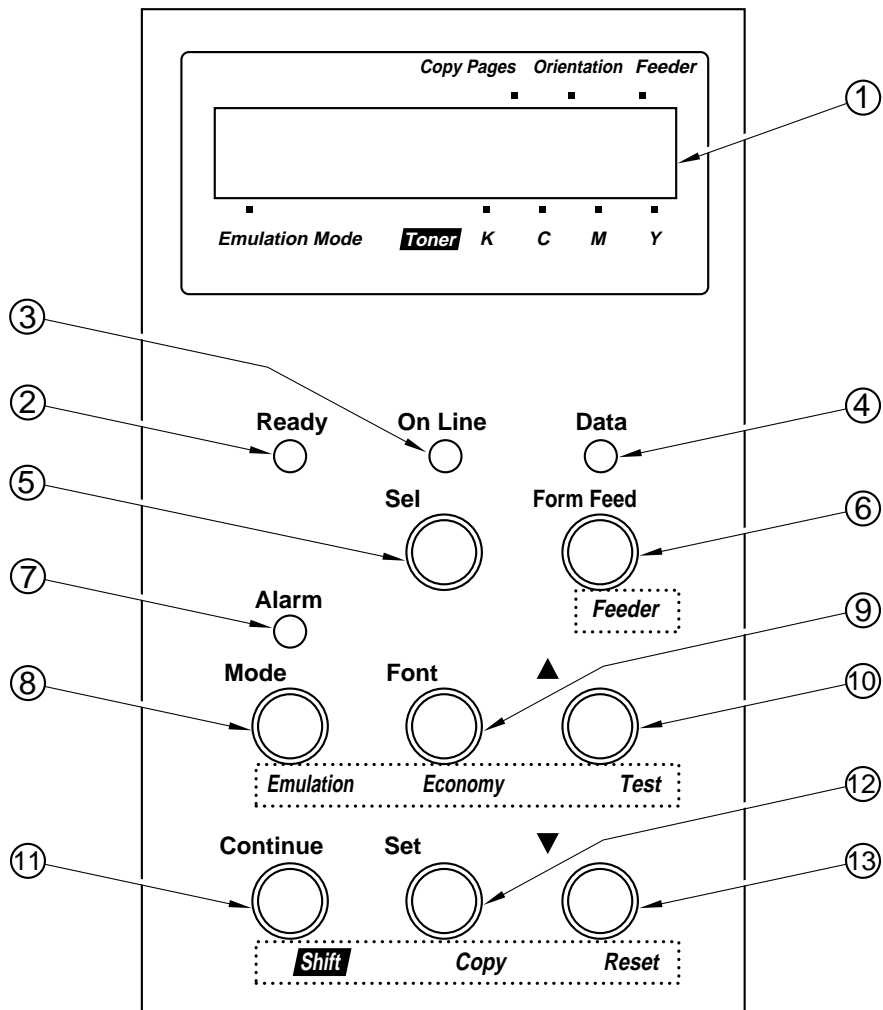


Fig.1-4

No.	LED / Button Name
1	LCD: 16 character by 2 lines
2	Ready LED
3	On Line LED
4	Data LED
5	Select button
6	Form Feed / Feeder button
7	Alarm LED
8	Mode / Emulation button
9	Font / Economy button
10	▲ / Test button
11	Continue / Shift button
12	Set / Copy button
13	▼ / Reset button

CHAPTER II


SPECIFICATIONS

CONTENTS

CHAPTER II SPECIFICATIONS	II-1
1. RATING	II-1
2. GENERAL SPECIFICATIONS	II-2
2.1. Printing.....	II-2
2.2. Functions	II-3
2.3. Electrical and Mechanical	II-3
2.4. Paper Specification.....	II-4
2.4.1 Printable Media & Cassette Capacity	II-4
2.4.2 Printed Output	II-5
2.4.3 Recommended Paper Specifications.....	II-5
2.4.4 Effective Printing Area.....	II-5
2.4.5 Paper Feed Jam Rate.....	II-7
3. ENVIRONMENTAL CONDITION	II-8
3.1 Ambient Temperature / Humidity / Altitude	II-8

CHAPTER II SPECIFICATIONS

1. RATING



WARNING
*Use the power supply cable supplied with the printer, or a similar cable complying with the following specification (3-wire power cable with ground).
Use of an “out of specification” cable may result in an electric shock.*

Destination	Voltage (V)	Frequency (Hz)	Input Current (A)	Power Cord (Piece)
US / Canada	120	50/60	8	1
Europe	220 - 240	50/60	4	1 *

* For the model for Europe, the power supply cable depends on the country as follows;

Figure	Rating	Approval Agency	Applicable Area
A	250VAC, 6A	VDE, DEMKO, SEV	Europe (Continent)
B		BS	UK

Figure A: For Europe (Sample)


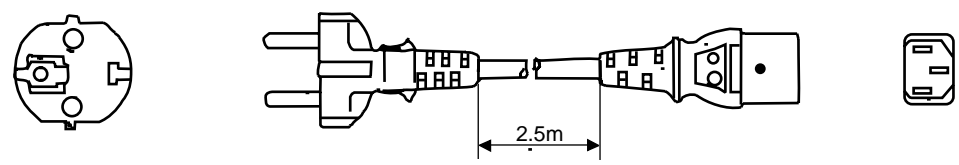


Figure B: For UK

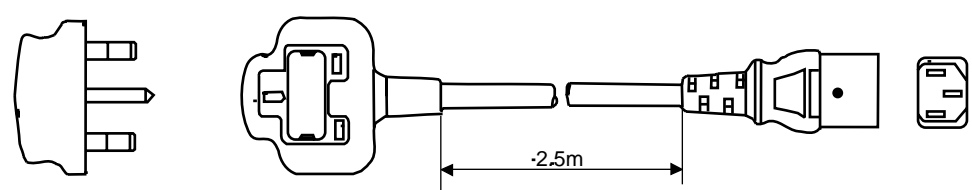

Note:
For details of other power supply cables, refer to the parts reference list.

** For rating labels, refer to the Safety Instruction on Page vi.

2. GENERAL SPECIFICATIONS

2.1. Printing

Print method: Electrophotography by semiconductor laser beam scanning

Resolution: 300 x 300 dots per inch (Normal)
600 x 600 dots per inch (Fine)
The resolution can be enhanced to 2400 dpi class by using the HRC(High Resolution Control) and CAPT (Color Advanced Photoscale Technology) features.

Print speed: Monochrome mode: 16 page/minute (A4/Letter-size)
Full color mode: 4 page/minute (A4/Letter-size)

Warm-up: Max. 3 minute at 20°C (68°F)

First print: Monochrome mode: 19 seconds or less
Full color mode: 30 seconds or less
(when loading A4/Letter-size paper by face down print delivery from standard upper cassette feed)

Print media: Toner in a single-color single-component cartridge
Life Expectancy: 10,000 single-sided pages/cartridge (Black)
6,000 single-sided pages/cartridge (Cyan, Magenta, Yellow)

Note: These figures are based on an average of 5% coverage of the printable area for one color using laser paper. The frequency of replacement will vary, depending on the complexity of the prints, the percentage of coverage, and the type of media. Transparencies, glossy coated paper and other special media will result in shortened consumable life.

Resident Printer Fonts:
<HP PCL, EPSON FX-850, and IBM Proprinter XL modes>
66 scalable fonts and 12 bitmapped fonts
<BR-Script Level 2 mode>
66 scalable fonts

2.2. Functions

CPU:	<i>HL-2400C:</i> MB86832 (SPARC architecture) <i>HL-2400Ce:</i> uPD30210 (VR4310-167MHz)
Emulation:	Automatic emulation selection HP Color Printer (PCL5C) including HP LaserJet 4+ (PCL5e) and HP LaserJet 5 (PCL6 monochrome) BR-Script Level 2 (Adobe PostScript Level 2 compatible) HP-GL EPSON FX-850 IBM Proprinter XL
Interface:	Automatic interface selection between the bi-directional parallel, RS-232C serial and MIO interface.
RAM:	<i>HL-2400C:</i> Standard model: 16Mbytes Network model: 32Mbytes (Expandable up to 112Mbytes with SIMMs) <i>HL-2400Ce:</i> Standard model: 32Mbytes (Expandable up to 288Mbytes with DIMMs) The standard memory fitted can vary depending on the printer model and country
Card Slots:	2 card slots: PCMCIA Type I, II 1 card slot: PCMCIA Type III Compatible for Flash Memory or HDD cards Optional internal 6GB HDD unit (HL-2400Ce only)
Control panel:	8 buttons, 4 LEDs and a 16-column x 2 lines liquid crystal display
Diagnostics:	Self-diagnostic program

2.3. Electrical and Mechanical

Power source:	U.S.A. and Canada: AC 120V, 50/60Hz Europe and Australia: AC 220 to 240V, 50/60Hz
Power consumption:	Printing: 450W or less Standing by: 150W or less Sleep: 25W or less (HL-2400C) / 35W or less (HL-2400Ce)
Noise:	Printing: 55dB A or less Standing by: 48dB A or less
Temperature:	Operating: 10 to 32.5°C (50 to 90.5°F) Non Operating: 5 to 35°C (41 to 95°F) Storage: 0 to 35°C (38 to 95°F)
Humidity:	Operating: 20 to 80% (non condensation) Storage: 20 to 80% (non condensation)
Dimensions (W x D x H):	500 x 490 x 388 mm (19.7 x 19.3 x 15.3 inches) 500 x 490 x 493 mm (19.7 x 19.3 x 19.4 inches) with the optional lower tray unit fitted
Weight:	Approx. 32kg (70.5lbs.) Approx. 36kg (79.4lbs.) with the optional lower tray unit and toner cartridges fitted

2.4. Paper Specification

2.4.1 Printable Media & Cassette Capacity


The standard media cassette (upper cassette) is supplied with the printer. The optional lower tray unit and the optional Legal cassette can also be installed.

Note:

The standard cassettes (including the optional lower tray unit) and the optional Legal cassette are interchangeable between the upper and the lower feeder.

- 1) Printable Media: Plain paper / Envelope / Transparency / Label
- 2) Printable size: (Refer to the list below.)
- 3) Feedable paper weight: 60 (16lb.) to 160 (43lb.) g/m²
- 4) Maximum load height : 27mm
 - Plain paper: 250 sheets of 75g/m² (20lb) paper
 - Envelopes : 15 sheets
 - Transparency: 50 sheets
 - Label: 80 sheets
- 5) Setting method: Pull the media cassette out of the printer toward you, insert the paper into the cassette after aligning the top edge of the sheets, then push the cassette back into its original position.

Paper Source	Printable Media Size
The Standard Media Cassette (Upper/Lower feeder)	Plain paper: A4, Letter, B5, Executive Envelope: COM10, DL Other size: width 105-216mm (4.1"-8.5") length 220-297mm (8.7"-11.7")
The Optional Legal Cassette	Plain paper: Legal, A4, Letter, B5, Executive Envelope: COM10, DL Other size: width 105-216mm (4.1"-8.5") length 220-355.6mm (8.7"-14")

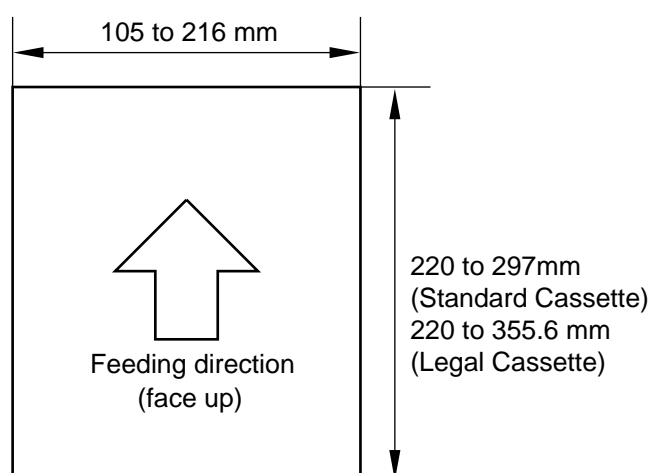

2.4.2 Printed Output

250 sheets of 75g/m² (20lb) paper / plain paper can be stacked in the output tray.

Face-down print delivery

Note: Face down: Delivers the printed side of the paper downwards

Environment: 17.5 ~ 27.0°C, 50 ~ 70%RH

2.4.3 Recommended Paper Specifications


Item	Description
Basis Weight (g/m ²)	82 ± 5
Thickness (μ m)	95 ± 6
Smoothness (Bekk) (seconds)	90 ± 20
Stiffness (Clark)	100 ± 15
Brightness (%)	85 ± 2
Surface Resistance (Ω)	10 ¹⁰ ~ 10 ¹¹
Grain Direction	Long

Measurement Condition: 17.5 ~ 27.0°C, 50 ~ 70%RH

Note: Keep the paper sealed in the bag as supplied and do not open the paper bag until the paper is required for use.

2.4.4 Effective Printing Area

(1) Printable area

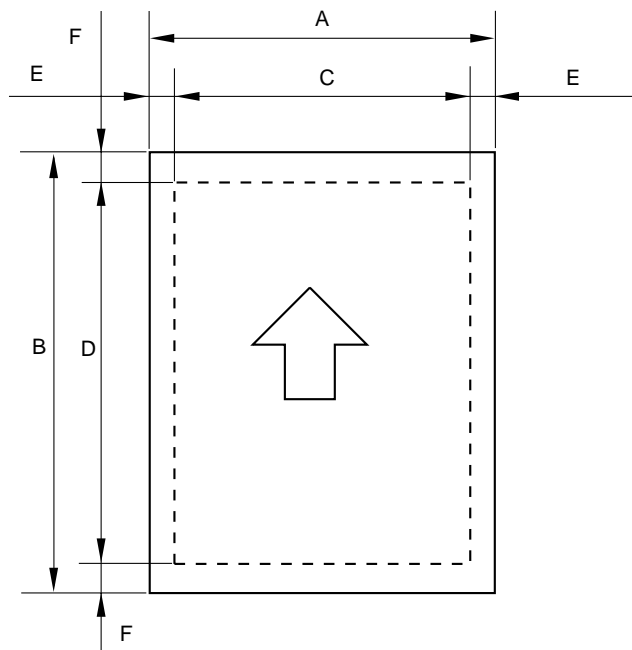

The effective printing area means the area within which the printing of all the data received without any omissions can be guaranteed. (Refer to Table 2-1 for details.)

Table 2-1: Effective Printing Areas


Size	A	B	C	D	E	F
A 4	210.0mm 8.27" (2,480 dots)	297.0mm 11.69" (3,507 dots)	203.2mm 8.0" (2,400 dots)	288.5mm 11.36" (3,407 dots)	3.4mm 0.13" (40 dots)	4.23mm 0.17" (50 dots)
Letter	215.9mm 8.5" (2,550 dots)	279.4mm 11.0" (3,300 dots)	207.44mm 8.16" (2,450 dots)	271.0mm 10.67" (3,200 dots)	4.23mm 0.17" (50 dots)	↑
Legal	215.9mm 8.5" (2,550 dots)	355.6mm 14.0" (4,200 dots)	207.44mm 8.16" (2,450 dots)	347.1mm 13.67" (4,100 dots)	↑	↑
B5 (JIS)	182.0mm 7.16" (2,149 dots)	257.0mm 10.12" (3,035 dots)	173.54mm 6.82" (2,049 dots)	248.5mm 9.78" (2,935 dots)	↑	↑
B5 (ISO)	176.0mm 6.93" (2,078 dots)	250.0mm 9.84" (2,952 dots)	167.54mm 6.59" (1,978 dots)	241.5mm 9.5" (2,852 dots)	↑	↑
Executive	184.2mm 7.25" (2,175 dots)	266.7mm 10.5" (3,150 dots)	175.74mm 6.91" (2,075 dots)	258.3mm 10.17" (3,050 dots)	↑	↑
COM-10	104.8mm 4.125" (1,237 dots)	241.3mm 9.5" (2,850 dots)	96.34mm 3.785" (1,137 dots)	232.8mm 9.16" (2,750 dots)	↑	↑
D L	110.1mm 4.33" (1,299 dots)	221mm 8.66" (2,598 dots)	101.64mm 3.99" (1,199 dots)	211.5mm 8.33" (2,498 dots)	↑	↑

(Note that the paper sizes indicated here should conform to the nominal dimensions specified by JIS.)


A4 paper must accommodate 80 characters printed in pica pitch (203.2 mm).

The dot size is based on 300 dpi resolution.

- (2) Print guarantee area
<Plain paper>

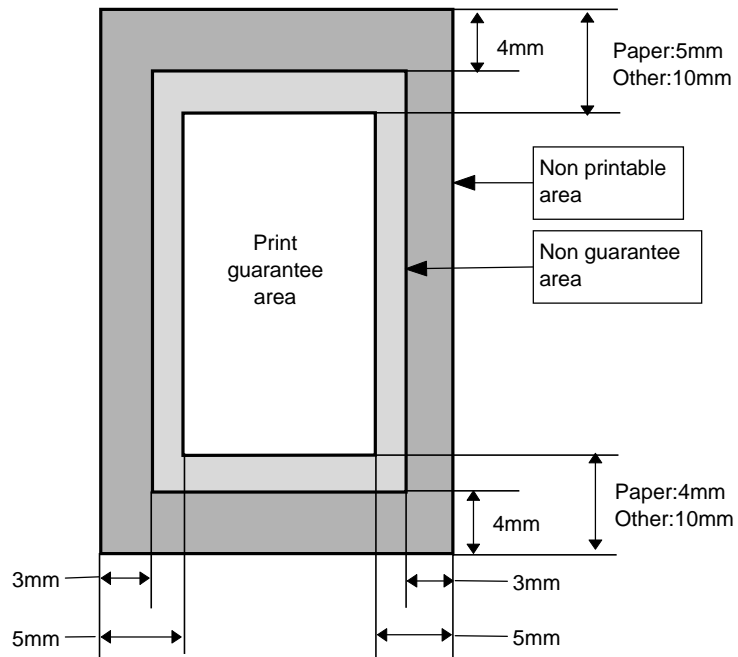

<Envelope>

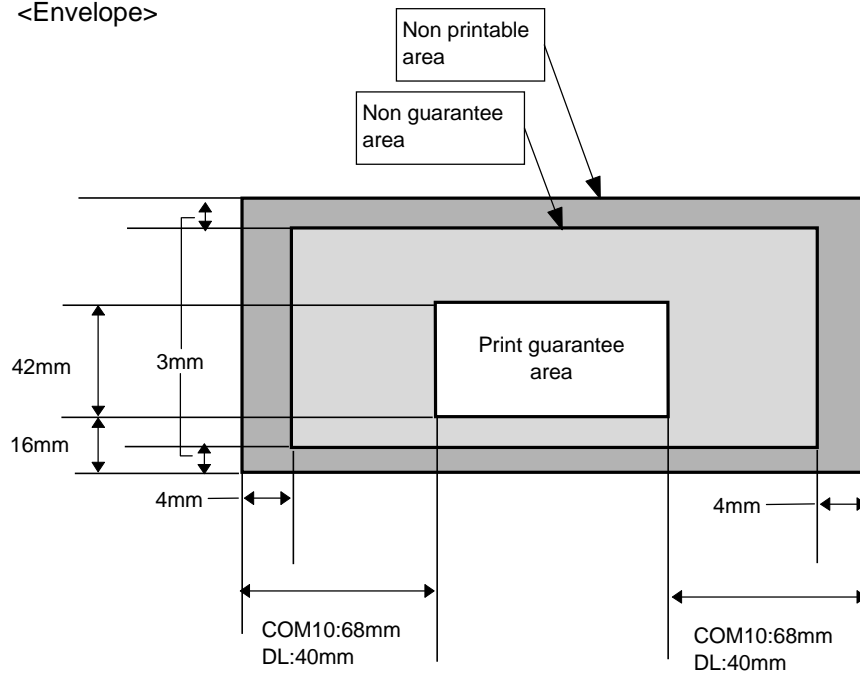

2.4.5 Paper Feed Jam Rate

Less than 1 misfeed per 2000 pages under normal environmental conditions.

Less than 1 misfeed per 1000 pages outside the normal environmental conditions.


Note:

These figures are based on the paper whose specification is recommended. For the recommended specifications, refer to Section 2.4.3 of this chapter.


3. ENVIRONMENTAL CONDITION

3.1 Ambient Temperature / Humidity / Altitude

- (1) Under Operational conditions: 10.0 ~ 32.5°C, 20 ~ 80%RH (See the figure below.)

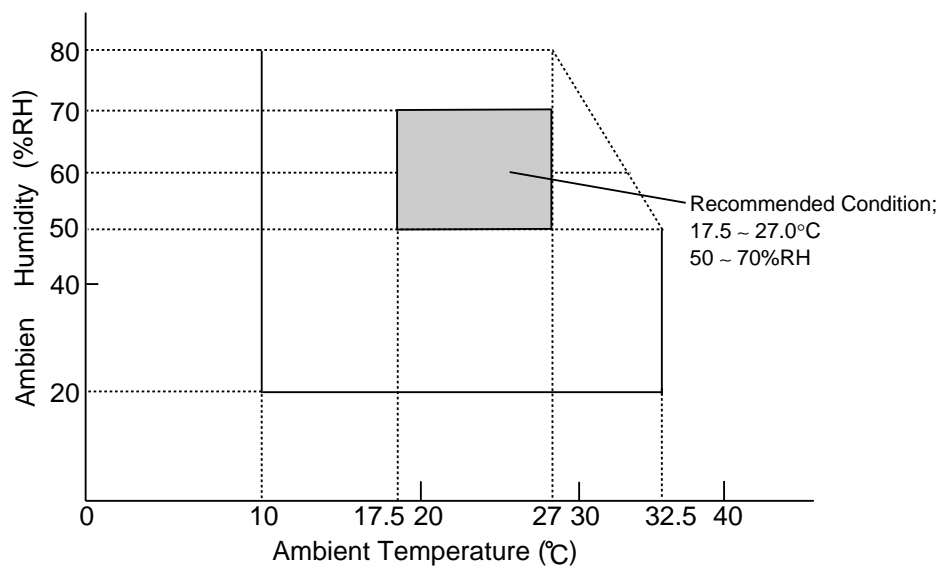

- (2) Under Non Operational conditions: 5.0 ~ 35.0°C, 10 ~ 80%RH (See the figure below.)

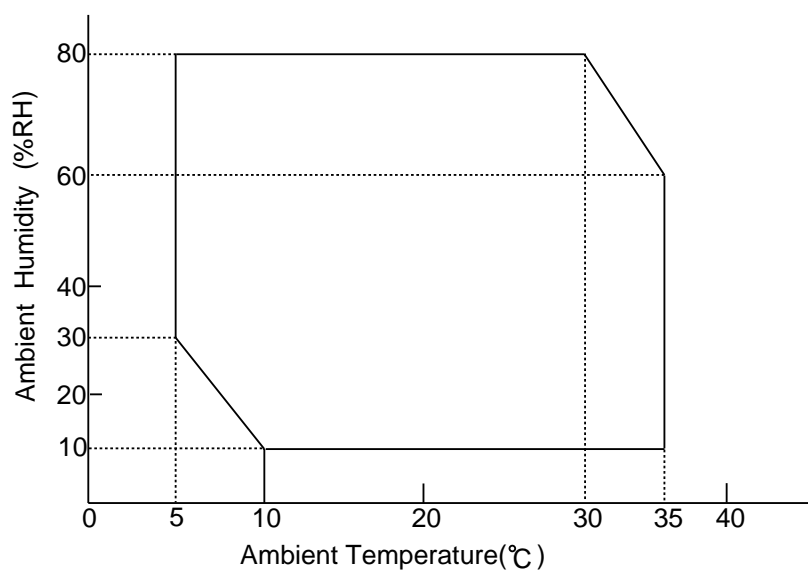

(3) Storage and Transportation Environment of Printer

The following defines the storage and transportation environment of printers that have been packed according to Brother specification. However, this section does not cover the OPC belt cartridge and toner cartridges.

Temperature	Normal Conditions	0°C ~ 35°C (35°F ~ 95°F)
	Severe Conditions	High Temperature: 35°C ~ 40°C (95°F ~ 104°F) Low Temperature: -10°C ~ 0°C (14°F ~ 32°F)
Humidity	10% ~ 90%RH	
Period of Storage	One Year	
Other	No Condensation	
Atmosphere	613 ~ 1,067hpa (460 ~ 880mmHg)	

The period under the severe conditions should not be continuous, and is assumed as an accumulation of intermittent time. However, an individual period of intermittent time under severe conditions should not be allowed to exceed 48 hours.

Note:

Normal conditions should occupy more than 90% of total storage period.

Severe conditions should be less than 10% of total storage period.

CHAPTER III

INSTALLATION

CONTENTS

CHAPTER III INSTALLATION	III-1
1. CONDITIONS REQUIRED FOR INSTALLATION.....	III-1
1.1. Environmental Conditions.....	III-1
1.2. Basic Layout of Printer Set-up Location	III-1
2. UNPACKING	III-2
2.1 Unpacking of Printer	III-2
2.2 Unpack the Starter Kit.....	III-4
3. INSTALLATION WORK	III-5
3.1 Install the OPC Belt Cartridge.....	III-5
3.2 Install the Toner Cartridge to the Printer.....	III-6
3.3 Install the Oil Bottle and Fuser Cleaner	III-7
3.4 Test Print	III-8
3.4.1 Test Print.....	III-8
3.4.2 On-line Printing (Video Controller Mode only).....	III-10

CHAPTER III INSTALLATION

1. CONDITIONS REQUIRED FOR INSTALLATION

Any Laser beam printer is likely to be influenced by the environment of the set-up location. If the printer is set-up in an inappropriate location, the printer may not perform as expected. Therefore, the following factors should be taken into consideration before deciding where to set-up the printer.

1.1. Environmental Conditions

The printer should not be set up in the locations referred to in the following items (a) through (d) which specify inappropriate locations for set-up.

- (a) Where it is likely to receive direct sunlight or similar light. (For example, next to a window)
- (b) Where it is likely to suffer a big difference in temperature and humidity between the maximum and minimum levels. (Normal operation environment is within 10°C ~ 32.5°C, 20 ~ 80%RH and without any condensation.)
- (c) Where it is likely to be in a draft of cold air from an air-conditioner or warm air from a heater, or to receive direct radiant heat.
- (d) Where it is likely to be excessively dusty or be subject to corrosive gases such as ammonia.
- (e) Users should select a location with good ventilation and set the printer on a flat surface.
- (f) Users should check that the maximum angle of the set-up location is horizontal to within $\pm 1^\circ$.

1.2. Basic Layout of Printer Set-up Location

Fig.3-1 shows the basic layout of the printer set-up location that is suitable for smooth operation and maintenance of the printer.

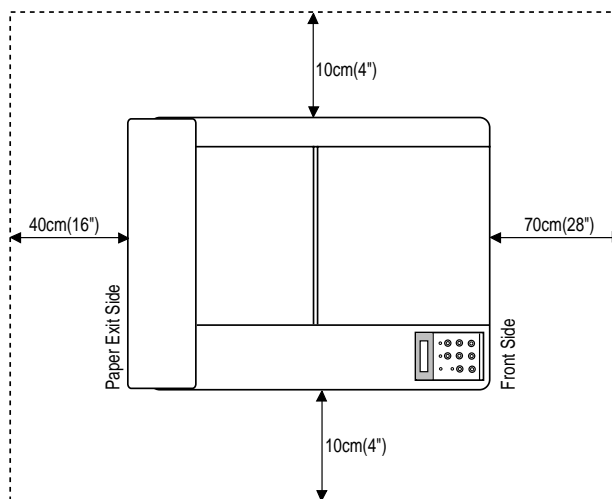


Fig.3-1

- The space in front of the printer (70cm) is necessary to open the front cover.
- The space at back of the printer (40cm) is necessary to open / close the rear access cover.
- The space on both sides of the printer (10cm) is necessary for general access.

2. UNPACKING



WARNING

- *The package containing a printer weighs approximately 40kg (80lbs), so it is too heavy for one person to carry. It needs two adults to move the printer. Since the printer is a precision machine, make sure that it is carried slowly with care so that no impact occurs to the printer while moving it.*
- *Do not attempt to lift a printer when it is covered by the vinyl bag because it is slippery and may result in damage and injury if dropped.*

2.1 Unpacking the Printer

Refer to Fig.3-2 on the next page.

- 1) Remove the binding tape from the top of the package.
- 2) Open the top of the package and take the starter kit out.
- 3) Remove the upper packing.
- 4) Take the customize kit** out.
- 5) Remove the plastic joints (4 locations).
- 6) Lift the outer box up from around the printer.
- 7) Take the power cable. (for US / Canada only).
- 8) Open up the vinyl bag enclosing the printer.
- 9) Lift up the printer with another person's help, and move it away from the vinyl bag.
- 10) Set up the printer in a suitable location.

** For USA/Canada, it contains the user's guide and printer driver disks.
For other countries, it contains the user's guide, printer driver disks and the power cable.

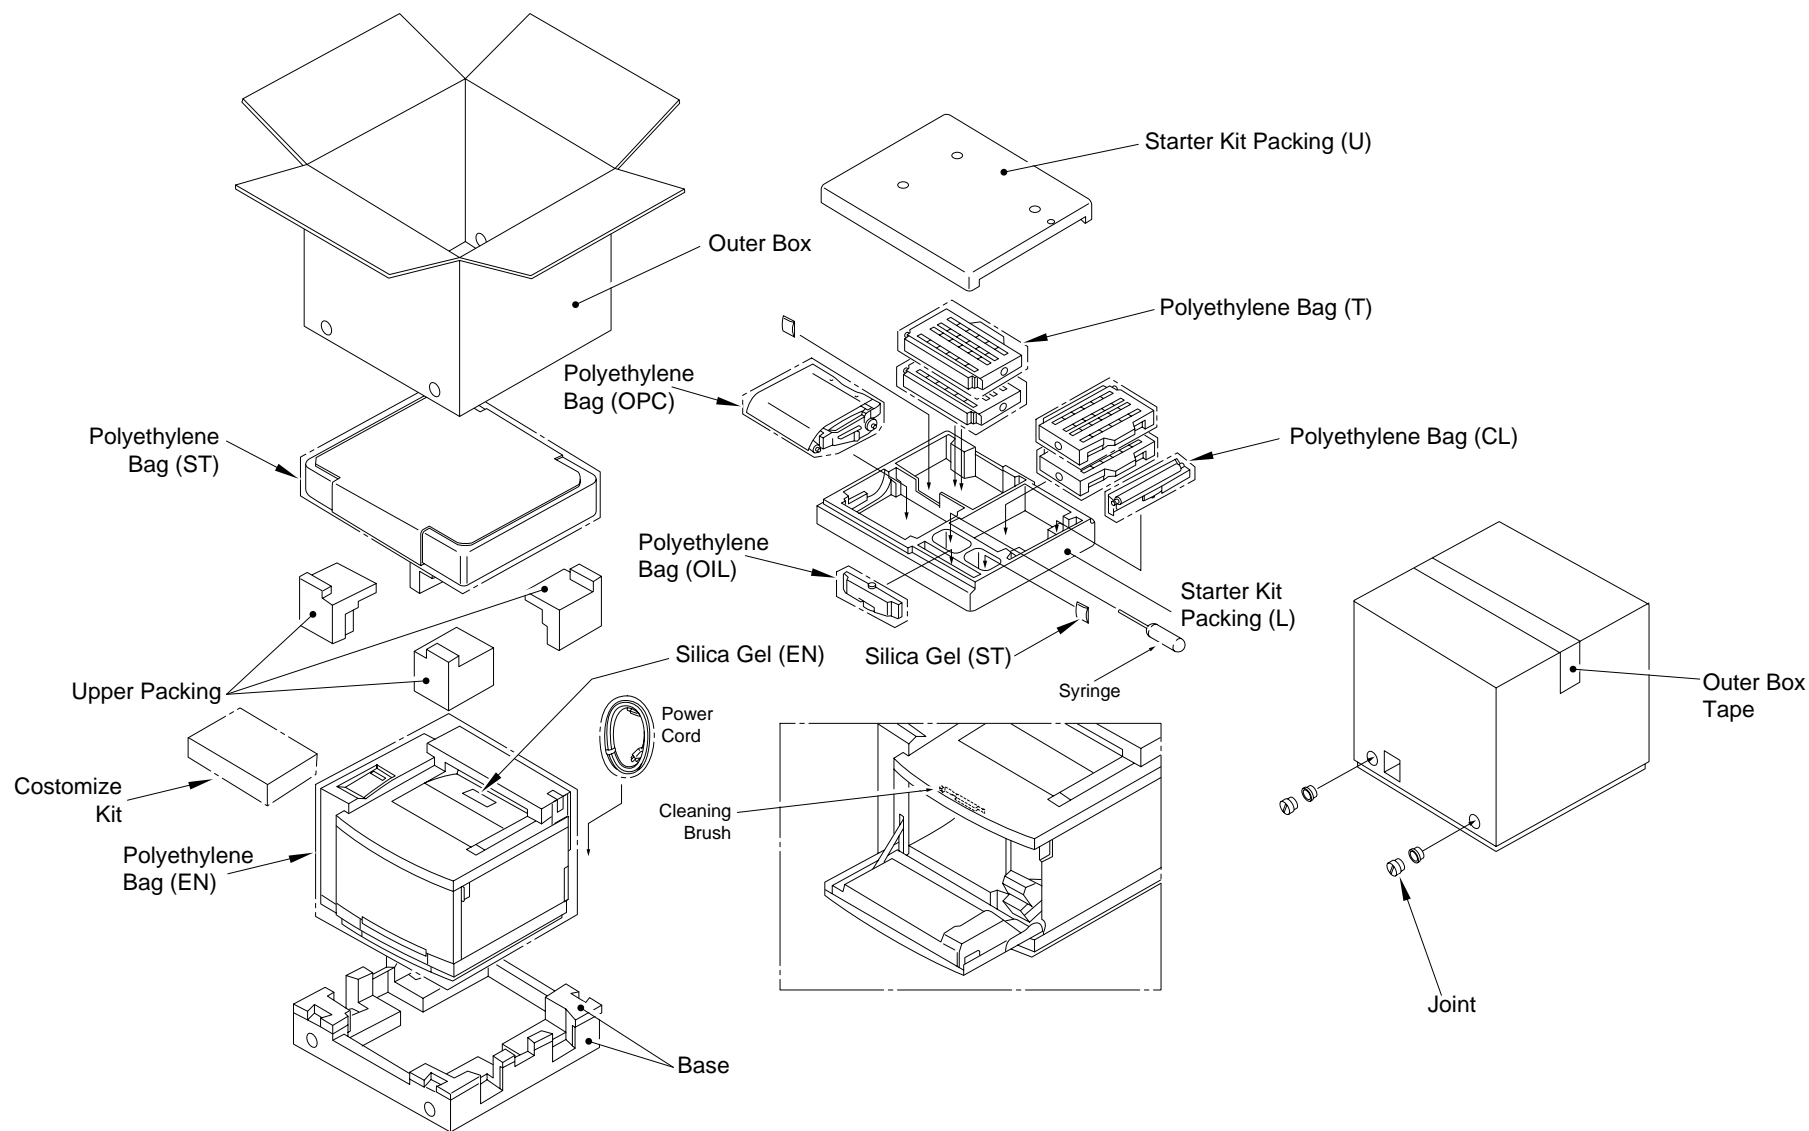
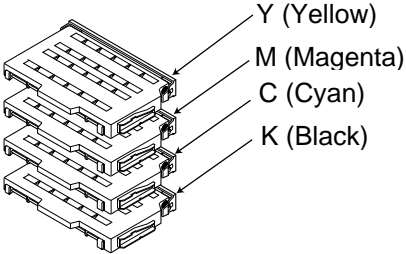
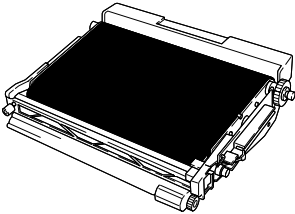
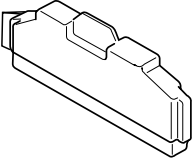
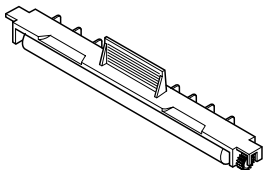
 


Fig.3-2

2.2 Unpack the Starter Kit

<Unpacking Procedure>

- 1) Open the vinyl bag and slide off the cardboard sleeve covering the starter kit.
- 2) Confirm all of the following parts are inside the starter kit packing box.

No.	Kit Name	Appearance	Quantity
1	Toner Cartridge (Y,M,C,K)		4
2	OPC Belt Cartridge		1
3	Oil Bottle		1
4	Fuser Cleaner		1
5	Syringe		1



PRECAUTION

When shipping the printer, remove the oil bottle and the fuser cleaner from the fusing unit. After removing the oil bottle, be sure to remove the oil remaining in the fusing unit with the supplied syringe. Failure to do so will cause severe damage to the printer.

3. INSTALLATION WORK



Install the unit parts of the starter kit into the printer according to the following procedures:

3.1 Install the OPC Belt Cartridge



PRECAUTION

- Do not directly touch the OPC belt surface with bare hands or gloves.
- If the belt is exposed for more than two minutes to a light source of 800 lux, the belt may be damaged.

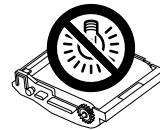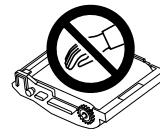

- 1) Open the front cover and the top cover by releasing the latches.



CAUTION

When installing or removing the OPC belt, be sure to open the front cover first. Failure to do so will cause the OPC belt to be damaged due to contact with the toner cartridges.

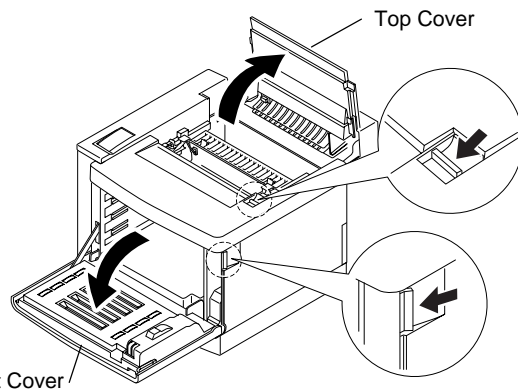


Fig.3-3

- 2) Release the belt cartridge lock levers (left & right).

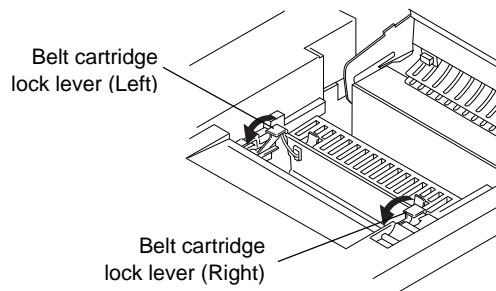


Fig.3-4

- 3) Pull and remove the tension release pins on both sides (left & right) of the OPC belt cartridge.
- 4) Remove the protective sheet from the new OPC belt cartridge.

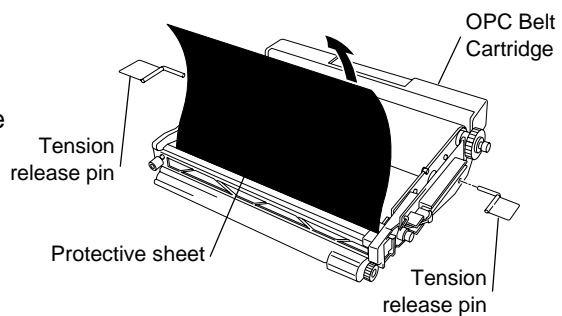


Fig.3-5

- 5) Install the new OPC belt cartridge into the guides at both sides in the printer.

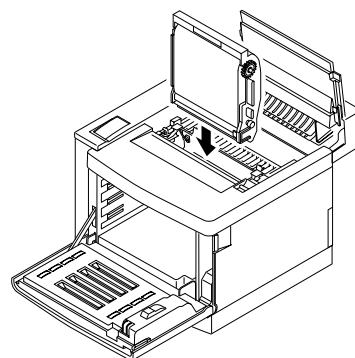


Fig.3-6

- 6) Set the belt cartridge lock lever at both sides (left and right).

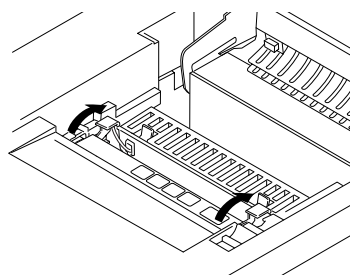


Fig.3-7

3.2 Install the Toner Cartridges into the Printer

- 1) Rock each of the cartridges 3 to 4 times through 30° to the horizontal.

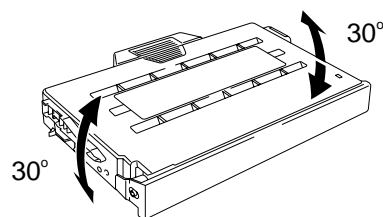


Fig.3-8

- 2) Remove the tape fixing the protective cover and remove the protective cover from the new toner cartridge.

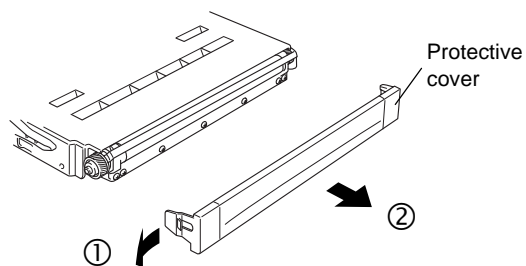


Fig.3-9

- 3) Install the new toner cartridge along the guide into the printer.

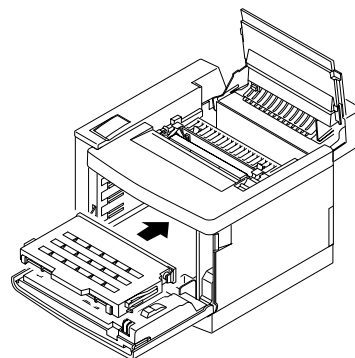


Fig.3-10

Note:

The installation order of the four toner cartridges should be from the bottom to the top, in terms of colors this is in the order Cyan (C), Magenta (M), Yellow (Y), and Black (K).

- 4) Close the front cover.

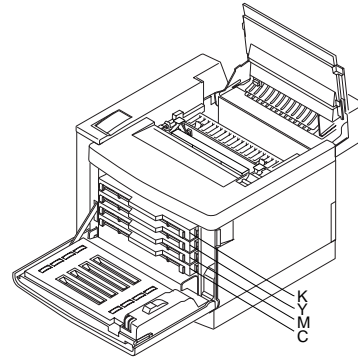


Fig.3-11

3.3 Install the Oil Bottle and Fuser Cleaner

- 1) Pull out and remove the orange protective parts fitted between the rollers of the fusing unit.

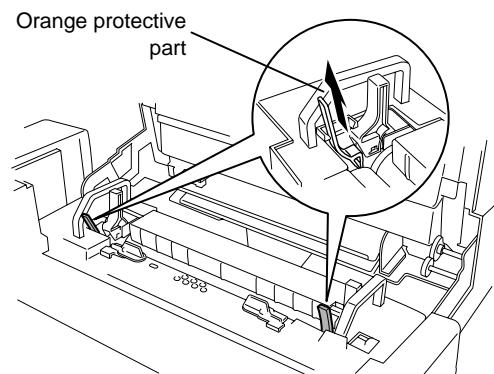


Fig.3-12

- 2) Install the oil bottle into the fusing unit.

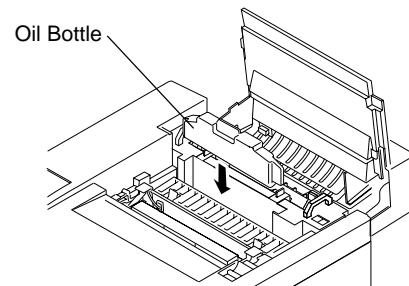


Fig.3-13

- 3) Install the fuser cleaner into the fusing unit.
- 4) Secure the oil bottle and the fuser cleaner with the retainer lock levers.
- 5) Close the top cover.

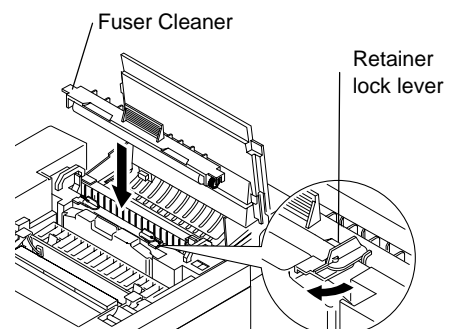


Fig.3-14


3.4 Test Print

After completing the installation work, perform a test print. The test print should be done in the Video Controller Mode and checked for correct print output. If there appear to be any print problems then the test print in the Engine Controller Mode should be used if necessary.


Note: The test print pattern differs between these two modes.

3.4.1 Test Print


- 1) Before connecting a power cable to the printer, ensure that the power button located on the front of the printer projects from the cover surface. This means that the printer is in the power-off status.

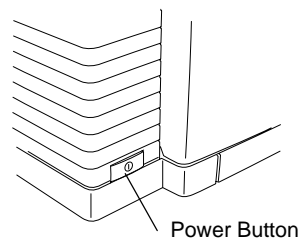

- 2) Connect the connector of the power cable to the printer.

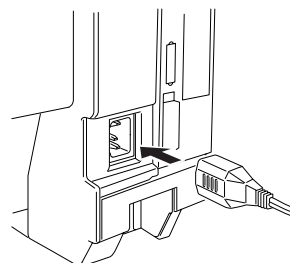


- 3) Insert the plug of the power cable into the power outlet.

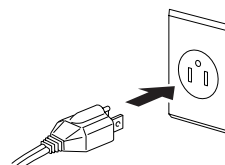

- 4) Press the power button, and confirm that the SELF TEST LCD panel screen is displayed during printer initialization.

The printer checks the RAM size and then goes into warming-up mode.

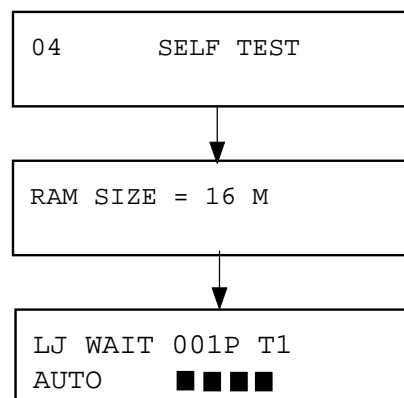

- 5) The Ready LED lights within 210 seconds maximum, before which the screen shown on the right appears on the control panel display.
- 6) Press the Select button to set the printer off-line.
- 7) Hold down the Shift button and press the Test button so that the printer enters the test mode.
- 8) The printer has built-in print patterns for test printing. The display shows the first test mode item.
- 9) Press the ▲ or ▼ button until the desired test mode appears on the display, then press the SET button to print the desired test page.

Note: Refer to the table below for each test mode item.


Display Message	Test Mode Description
DEMO PAGE	Prints out the demonstration.
TEST PRINT	Performs the printer test and prints out the test pattern.
PRINT CONFIG	Prints out a list of panel button settings you have configured as user settings for the printer.
PRINT FONTS I	Prints out a list of internal or resident fonts.
PRINT FONTS C	Prints out a list of optional fonts stored in the font cartridge/card.
PRINT FONTS P	Prints out a list of permanent download fonts.
exit	Exits from the test mode. The printer does not perform any test.

10) Push the power button in order to shut off the power supply to the printer.

Note: use the following procedures to identify the problem if the test print is incorrect.


11) Press and hold down the Mode, Set and ▼ buttons and press the power button to go into the Engine Controller Mode. The Ready LED lights within 210 seconds maximum, when the screen (a) on the right appears on the control panel display.

 (a)



12) Press the Select key, then the screen (b) on the right appears on the control panel display.

 
(b)



13) The printer has two built-in print patterns for test printing in the Engine Controller Mode as follows. Use the Set or ▼ button to scroll through the menu options and then press the Continue key to perform the selected test print. Press Font to stop the test print.

1. Grid Pattern:

Available in mono color print of Y, M, C, K, and two color print of R, G, B.

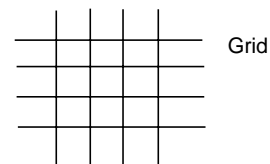

Grid

2. Stripe Pattern:


Available in color print of Y, M, C, K, R, G, B.




Stripe

- 14) Press the Font button to stop the test print and then push the power button in order to shut off the power supply to the printer.

(This switch is push-on/push-off type.)

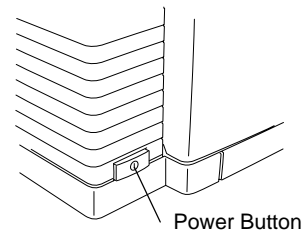

- 15) Unplug the power cable from the outlet.

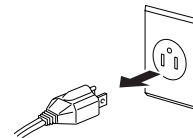


PRECAUTION

- Before unplugging the power cable, confirm that the main power button located on the front of the printer is set to Off.
- Under no circumstances power off or unplug the printer while it is performing any printing operations.
- Do not turn the printer power back on until at least 5 seconds after powering off.

3.4.2 On-line Printing (Video Controller Mode only)

Upon confirmation of correct printing by the test print modes, proceed with normal On-Line Printing according to the following procedures. Since this service manual does not refer to the interface connection or operation of the host computer, read the printer User's Guide and any manuals detailing the operation procedure of the host computer before starting normal On-Line Printing.

- 1) Connect the interface cable to the host computer.
- 2) Push the power button to turn on the printer.

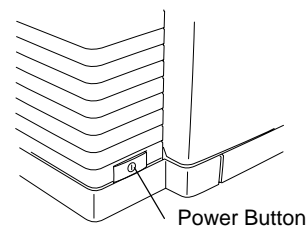

- 3) Confirm that the printer is set to the On-Line mode. (On Line LED is lit.)
- 4) Upon completion of the warming-up process, the Ready LED lights.

This warming-up process takes 210 seconds maximum.

- 5) The printer starts printing upon receipt of print data transmitted from the host PC.

**** Confirm what is indicated on the control panel.**

LJ WAIT 001P T1
AUTO ■ ■ ■ ■

CHAPTER IV

STRUCTURE OF SYSTEM COMPONENTS

CONTENTS

CHAPTER IV STRUCTURE OF SYSTEM COMPONENTS..... IV-1

1. BASIC STRUCTURE.....	IV-1
1.1 Print System and Transfer System.....	IV-6
1.1.1 Structure of the Printer.....	IV-7
1.1.2 Basic Structure of the Printing System.....	IV-8
1.1.3 Details of Each Process.....	IV-10
1.2 Scanning System.....	IV-21
1.3 Paper Transportation System.....	IV-23
1.4 Fusing Unit.....	IV-25
2. STRUCTURE OF THE CONTROL SYSTEM	IV-27
2.1 Basic Structure	IV-27
2.1.1 Electrical System and Functions.....	IV-27
2.2 Control System	IV-36
2.2.1 Control of the Print Process	IV-36
2.3 Main PCB (Video Controller PCB).....	IV-46
2.3.1 Outline.....	IV-46
2.3.2 Circuit.....	IV-49
2.4 Power Supply Unit	IV-70
2.5 High Voltage Power Supply Unit.....	IV-73
2.6 Wiring Diagram	IV-76

CHAPTER IV STRUCTURE OF SYSTEM COMPONENTS

1. BASIC STRUCTURE

<Mechanical & Electrical Structures>

This laser beam color printer (hereinafter called "Printer") consists of five mechanical systems; Print, Transfer, Scanning, Paper Transport and Control System. The printer produces color printing through the interactive operations of these five systems as shown in Fig.4-1.

(1) Print System

The print system consists of the following 6 (six) functional parts located around the OPC belt which form a toner image on the OPC Belt.

- Charger Part
- Exposure Part
- Development Part
- First Transfer Part
- Discharger Part
- Cleaner Part

(2) Scanning System

The scanning system consists of the following 2 (two) functional parts which form an electrostatic latent image on the OPC Belt by scanning it with a laser beam.

Scanner Unit

Scanner Motor (SCM)

(3) Transfer System

The transfer system consists of the following 3 (three) functional parts and transfers the toner image formed on the transfer drum onto the page.

- Transfer Drum
- Second Transfer Part
- Drum Cleaner Unit

(4) Paper Transport System

The paper transport system consists of the following 5 (five) functional parts and picks up paper from the media cassette, separates the paper from the transfer drum and exits it from the printer body after fusing the toner image on the paper.

- Media Cassette
- Transport rollers
- Paper Discharger
- Fusing unit
- Paper Exit

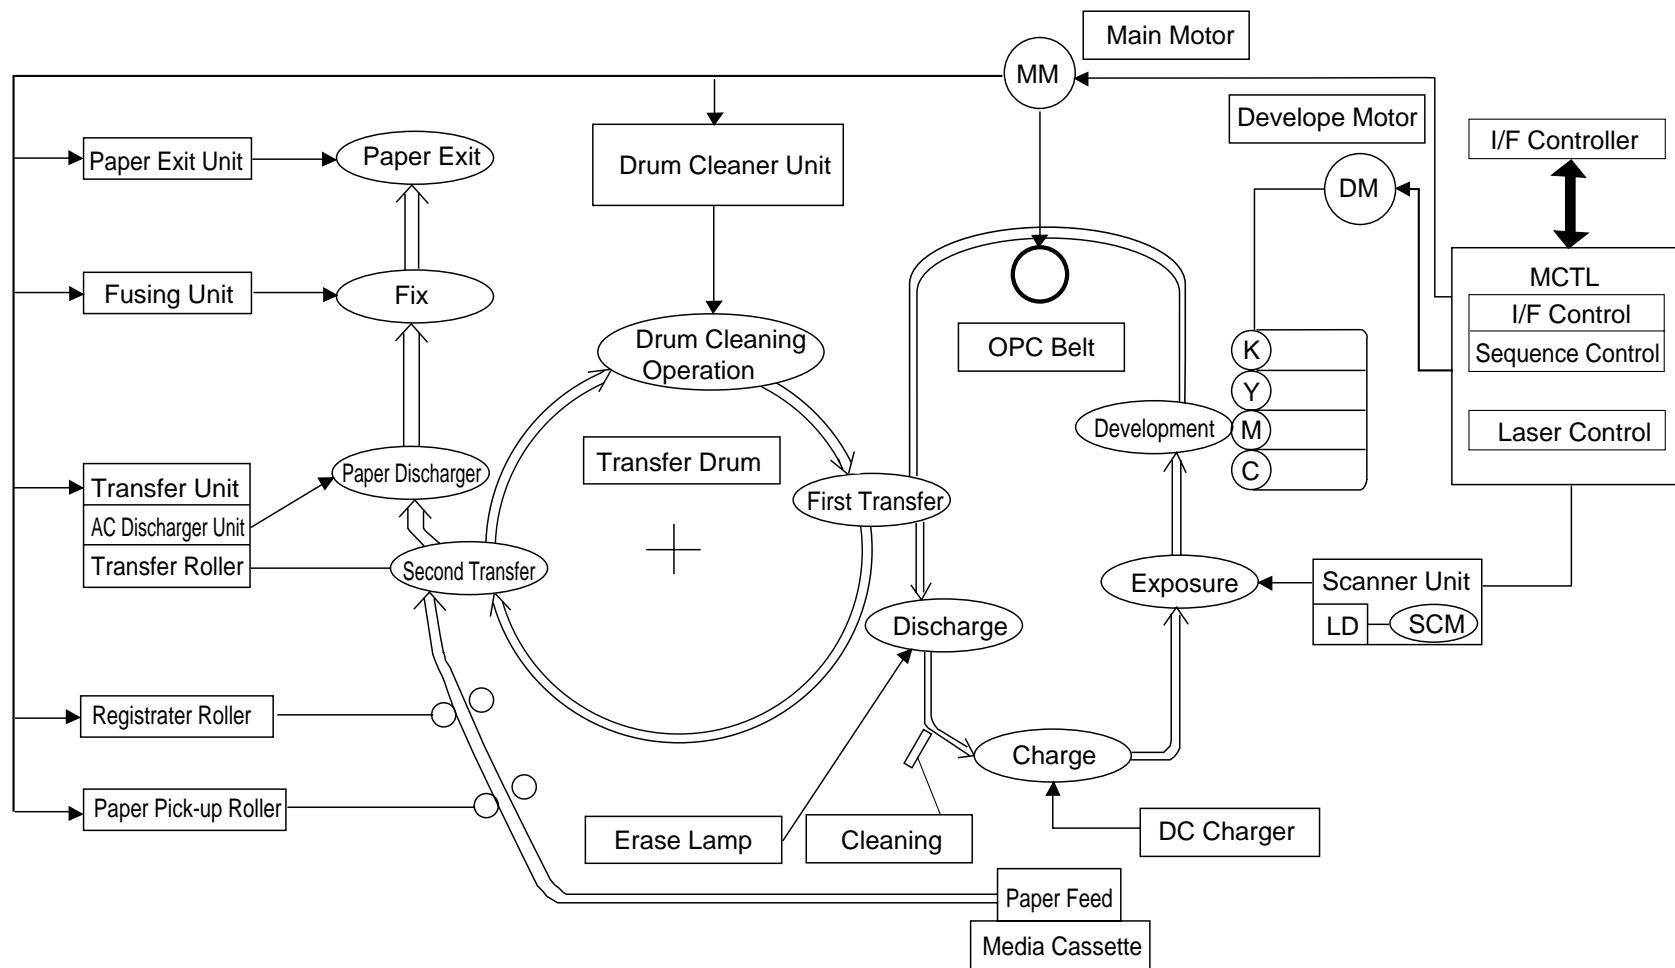


Fig.4-1

(5) Control System

The control system consists of the following 4 (four) control parts and runs the printer by processing the interface signals transmitted from the Host computer and interfacing to the print, transfer, scanning and transport systems.

- Sequence Control
- Laser Control
- Fusing Temperature Control
- Interface Control

<Basic Mechanism of Color Printing>

(1) Principle of Color Printing

Color printing is made through the subtractive process by combining the three primary colors, yellow, magenta, and cyan. Fig.4-2 shows the three primary colors and subtractive process:

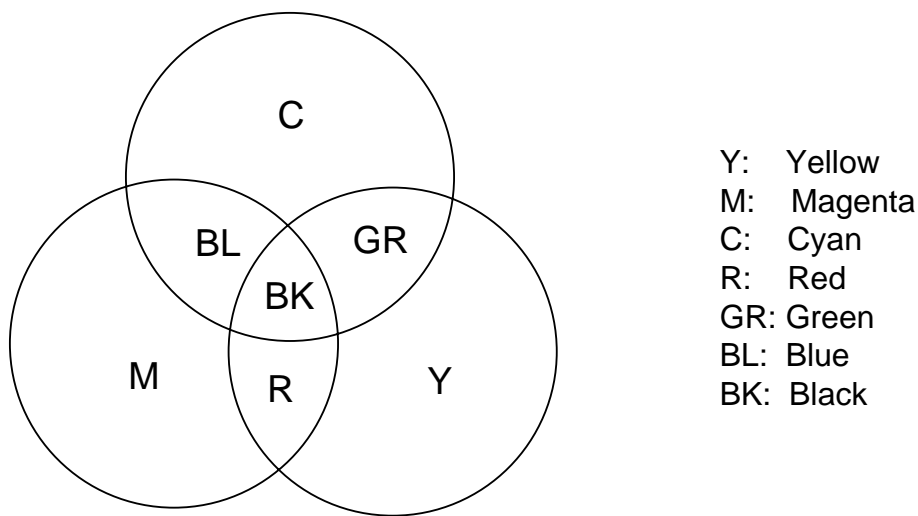


Fig.4-2

(2) Basic Color Printing Process

- The printer has a Toner Cartridge of each color yellow, magenta, cyan and black as shown in Fig.4-3.
- The toner image developed using the primary colors is transferred to the transfer drum for the printed color combination as shown in Fig.4-4 (a).
- The toner image formed on the transfer drum is transferred to the transported paper as shown in Fig.4-4 (b).
- The toner on the paper is fused by the thermal fixing unit to fix the toner image onto the paper as shown in Fig.4-4 (c).

Summarizing the above processes, a toner color layer is formed on the transported paper, and subsequently, the color image is made through the subtractive process.

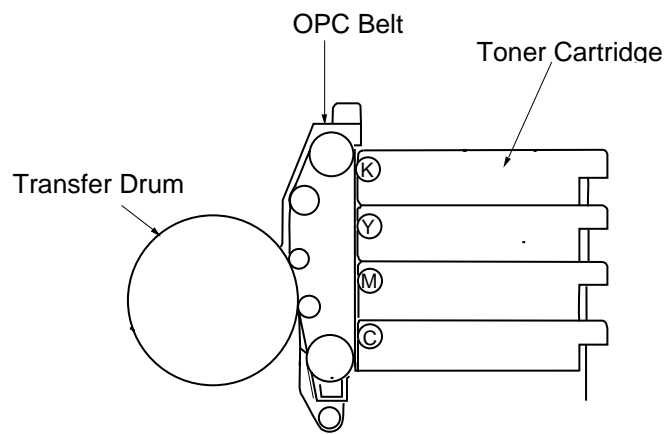


Fig.4-3

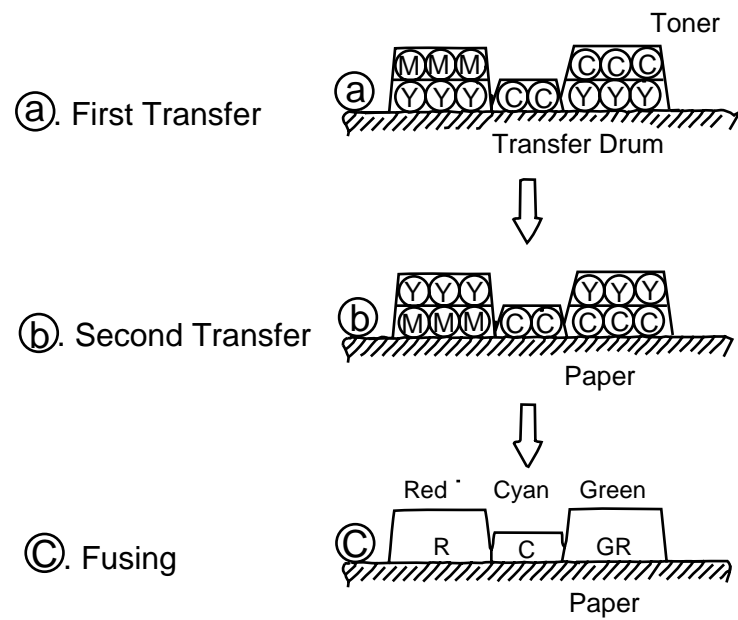


Fig.4-4

<Structure of the OPC Belt>

The OPC belt consists of a surface layer having a photoconductor (OPC) of organic material, the inner layer of an insulator material (PET / Mylar) and an aluminum deposit layer in between. The OPC belt is located as shown in Fig.4-5 as the main part of the print system.

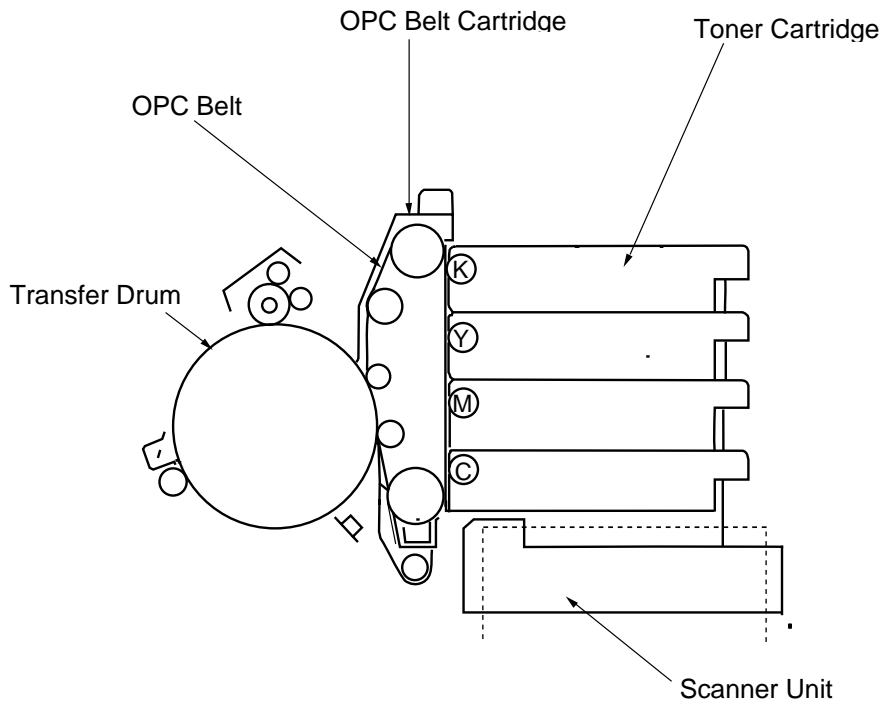


Fig.4-5

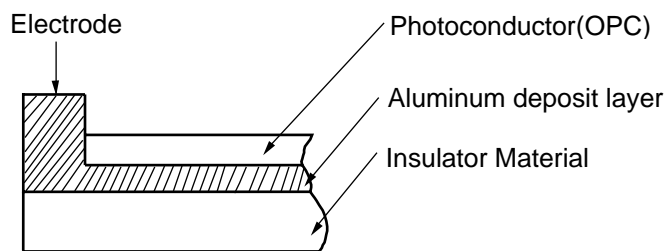


Fig.4-6

1.1 Print System and Transfer System

Fig.4-7 shows the basic structure of the print system having the OPC belt as the main part and the transfer system having the transfer drum as the main part. Color printing is achieved by actuating in sequence each process in the print system and transfer system.

4 cycles of actions 1 to 6 are required to form a full 24 bit color image on the transfer drum, only one cycle of actions 7, 8 and 9 is required to transfer the image to the paper from the transfer drum ready for fixing by actions 10 and 11.

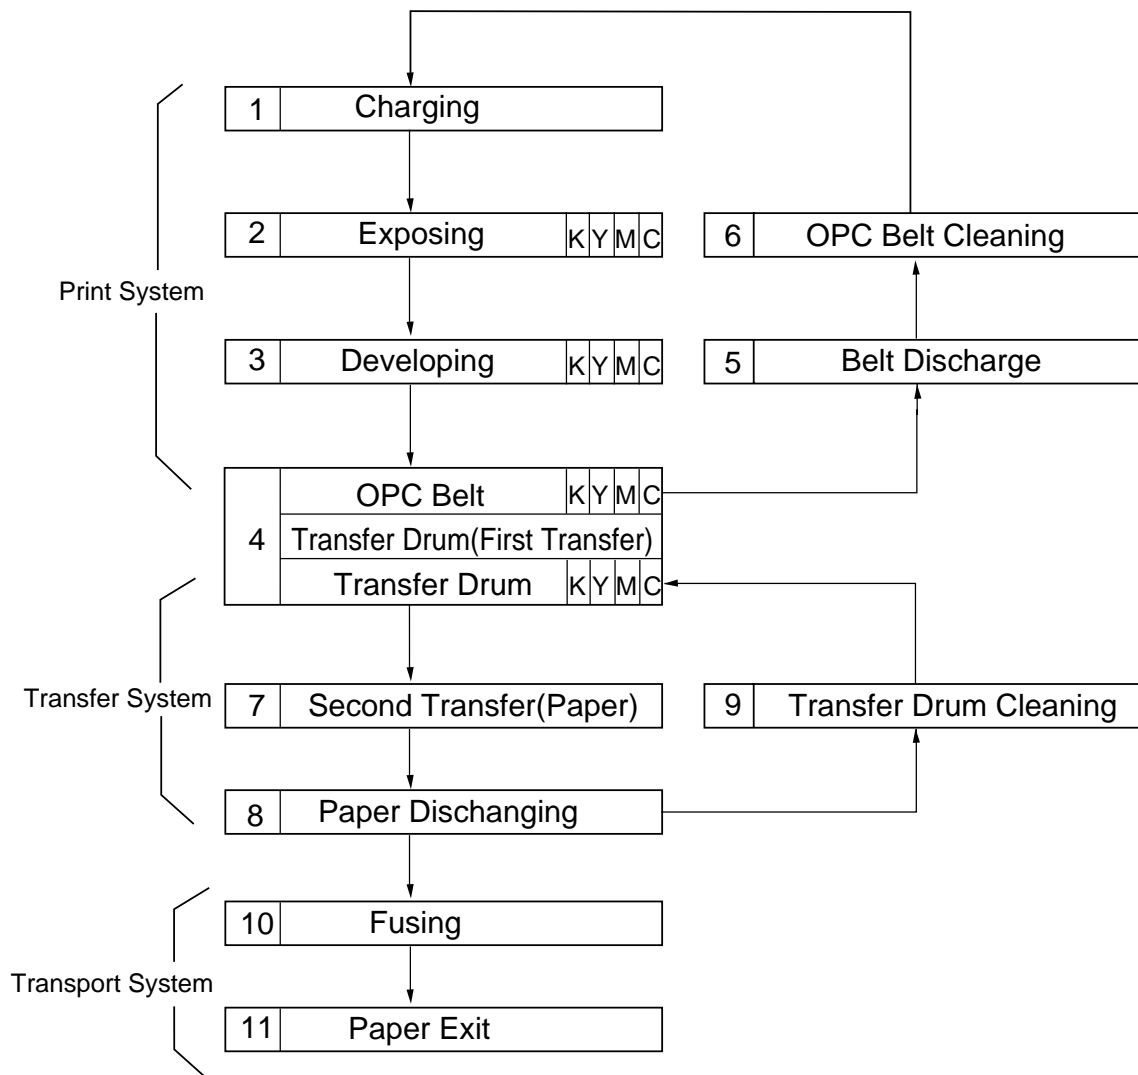


Fig.4-7

1.1.1 Structure of the Printer

No.	Component Part	Process
1	Charger	Charging
2	Scanner Unit	Exposing
3	Toner Cartridge	Developing
4	OPC Belt	Receives the Image
5	Transfer Drum	Transfers the Image
6	Belt Discharger Erase Lamp	Discharges the Belt
7	Cleaning Blade	Cleaning the Belt
8	Transfer Roller	Transferring
9	Paper Discharger	Discharges the Paper
10	Drum Cleaner	Cleans the Drum
11	Fusing Unit	Fusing
12	Paper Exit Unit	Exits the Paper
13	Register Roller	Paper Alignment

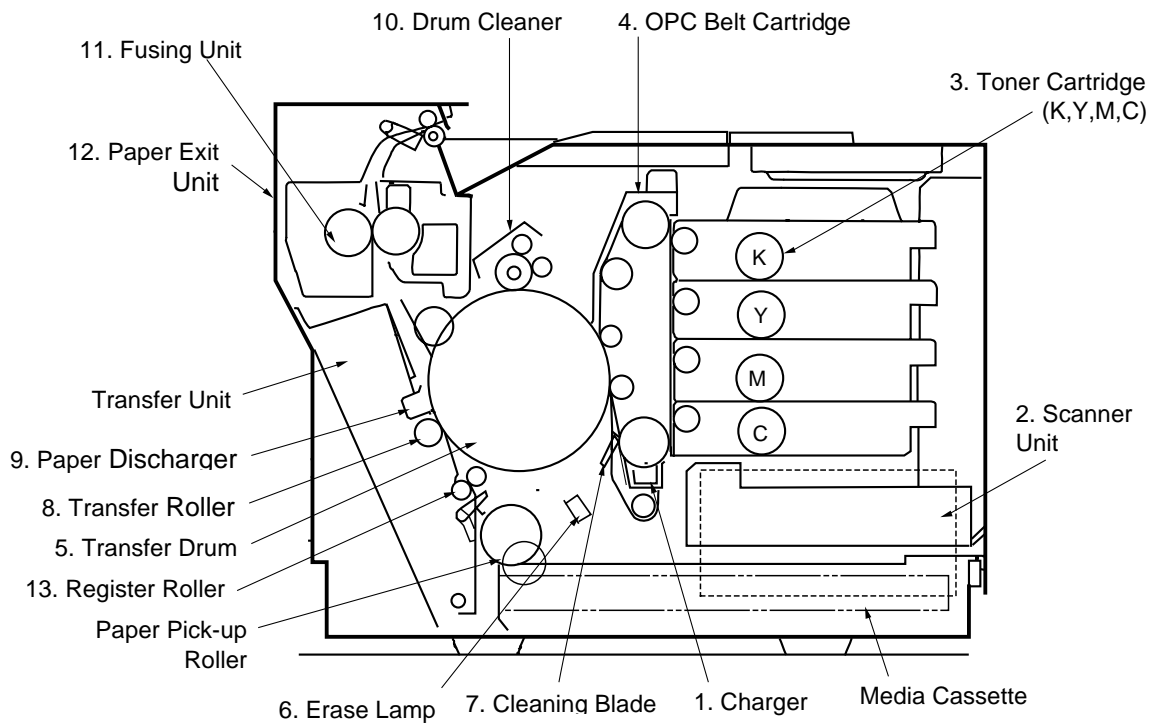


Fig.4-8

1.1.2 Basic Structure of the Printing System

A toner image is formed through the potential of the OPC belt varying in each of the charger, exposure, development, transfer and cleaning processes.

(1) Process of Print System (See Fig.4-9.)

- i) The OPC belt is biased to the voltage -CBV(V) by the power supply CBV.
- ii) A negative high voltage is applied to the charger unit by the power supply CHV, and a corona is generated as the result.
- iii) The developer magnetic roller of the toner cartridges is biased to -DBV(V) by the power supply DBV.
- iv) The frame potential of the transfer drum is GND.

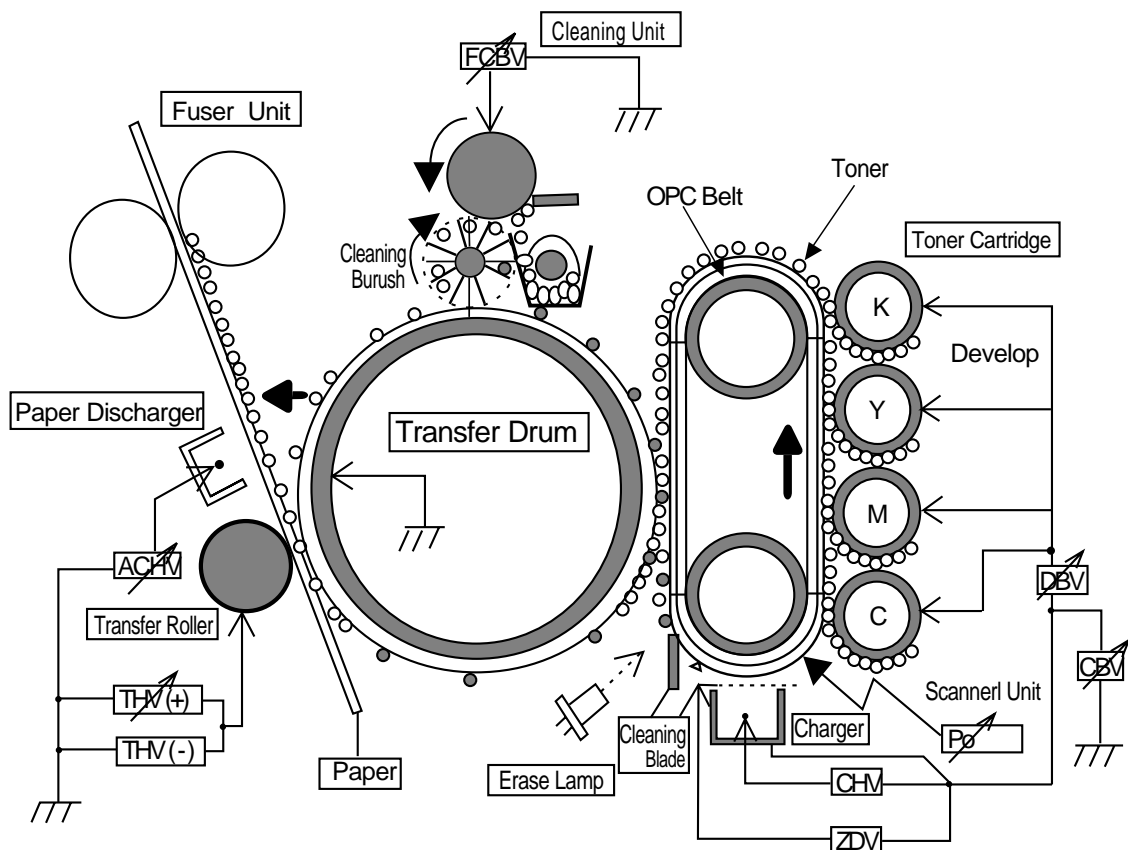


Fig.4-9

No.	Function		Power Supply (P/S)	
			P/S Name	Approx. Output Voltage
1	Charging		CHV(-)	4.6KV
			HVRD6190	619V
2	First Transfer		CBV(-)	200V ~ 900V
3	Developing Bias	Y,M	DBV(-A)	200V ~ 400V
		C,K	DBV(-B)	200V ~ 400V
4	Second Transfer		THV(+)	400V ~ 3,000V
5	Transfer Roller Cleaning		THV(-)	600V
6	Paper Discharging		ACV(-)	4.9KV
			DCV(+)	200V
7	Drum Cleaning		FCBV	200V ~ 1,500V

- (2) Variation of OPC Belt Potential (See Fig.4-10.)
- The OPC belt is initially biased to $-CBV(V)$.
 - The OPC belt surface is evenly charged to $V_0(V)$ in the charging process.
 - The potential of the exposure part of the OPC belt is reduced to $-VR(V)$ as it is exposed to the laser beam in the process of exposing, and an electrostatic latent image is formed on the OPC belt as the result.
 - Negatively charged toner is moved onto the exposed part of the OPC belt in the development process due to the difference of potential between $-VR(V)$ (the latent image) and $-DBV(V)$, and a visible toner image is formed as the result.
 - Negatively charged toner on the OPC belt moves to the transfer drum surface in the transfer process because the GND potential of the transfer drum is greater than $-VR(V)$ of the OPC belt.
 - The OPC belt is discharged by the erase lamp.

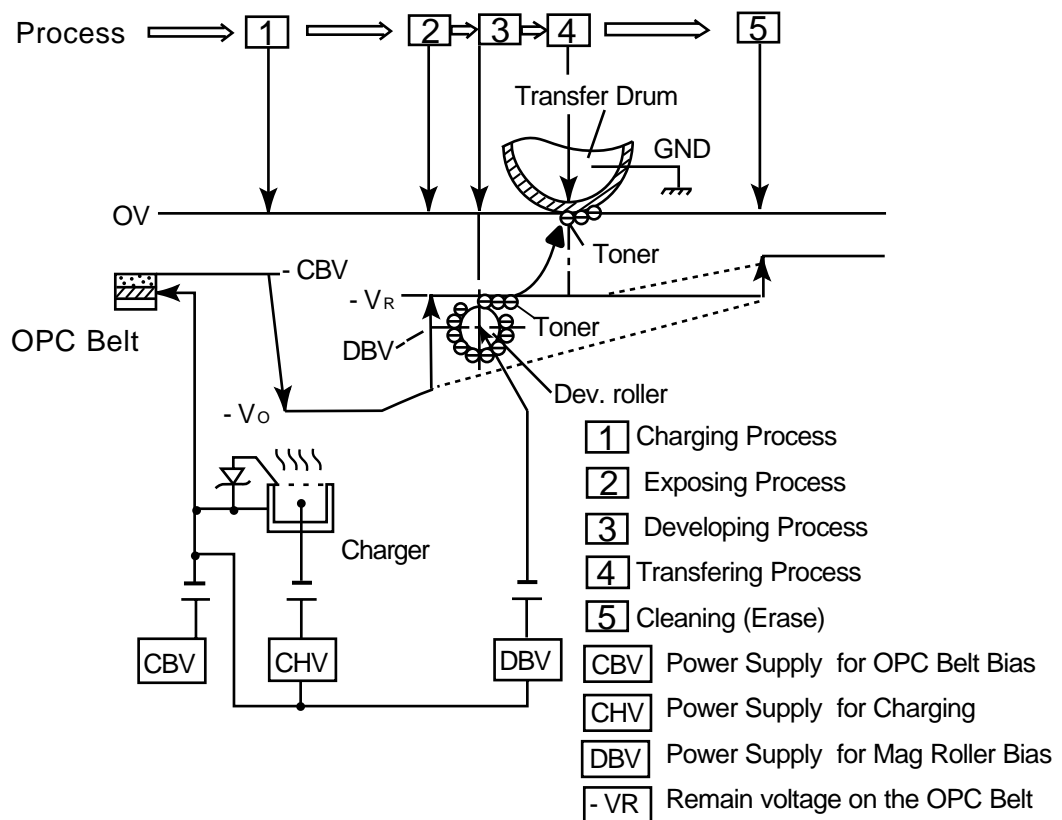


Fig.4-10

1.1.3 Details of Each Process

1	Charging
---	----------

The charging process ensures that the OPC belt is evenly charged by the charger system.

- (1) Structure of the Charger Unit (Refer to Fig.4-8 and Fig.4-11)
 - i) The charger unit is located as shown in Fig.4-8.
 - ii) The charger unit consists of the case, corona wire and grid.
 - iii) The charger unit charges the OPC belt surface to the potential $-V_0(V)$ with the corona charge.
 - iv) The charger unit has the grid controlled to the constant voltage $ZD(V)$ for even charging.
- (2) Process of Charging (Refer to Fig.4-12.)
 - i) The status of the OPC belt surface before charging is $-CBV(V)$.
 - ii) The charger unit charges the OPC belt surface evenly to $-V_0(V)$ by generating a negative charge.

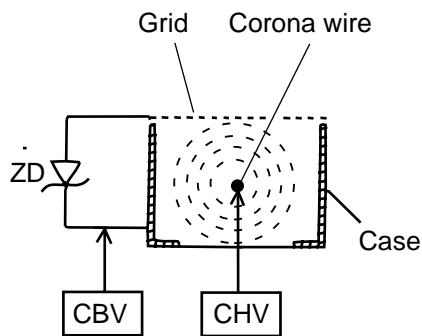


Fig.4-11

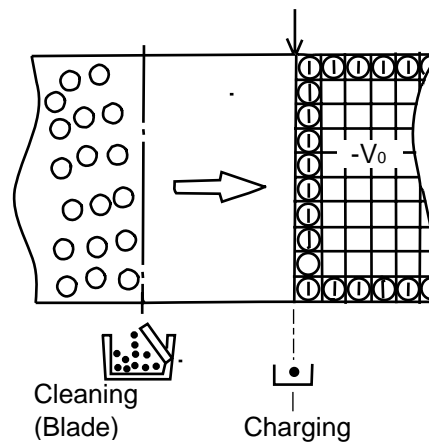


Fig.4-12

2	Exposing
---	----------

The exposing process means that the OPC belt surface is exposed to the laser beam to form an electrostatic latent image.

(1) Structure of Scanner Unit

- i) The scanner unit is located as shown in Fig.4-8.
- ii) The source of the laser beam is a semiconductor laser.
- iii) The laser light is scanned onto the OPC belt by converting the laser light to a beam of light through the lens and reflective mirror to form an electrostatic latent image.

(2) Process of Exposing (Refer to Fig.4-13.)

- i) The OPC belt surface has been charged to the potential $-V_o(V)$ in the charging process.
- ii) The laser light is scanned at right angles to the forward direction of the OPC belt.
- iii) High speed switching of the laser is made according to the transmitted image data.
- iv) The charge of the areas radiated by the laser light is reduced to the potential $-V_R(V)$.
- v) An invisible electrostatic latent image is formed on the OPC belt as shown in Fig. 4-13.

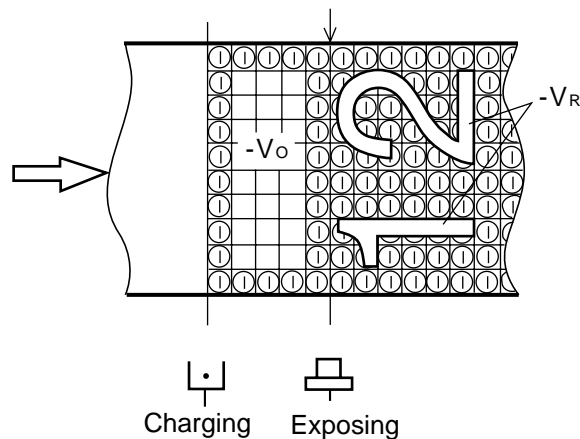


Fig.4-13

The developing process means that an electrostatic latent image on the OPC belt is made visible by depositing toner onto the exposed areas of the OPC belt.

- (1) Structure of the Toner Cartridge (Refer to Fig.4-8 & 4.14.)
 - i) The toner cartridge is located as shown in Fig.4-8.
 - ii) Four toner cartridges are made available from the top to bottom in the order black, yellow, magenta and cyan.
 - iii) Each color toner is loaded in the corresponding toner cartridge.
- (2) Process of Developing (Refer to Fig.4-8, 4-14, 4-15, and 4-16)
 - i) Toner adheres to the developer roller of the toner cartridge.
Developing is processed by this roller contacting the OPC belt surface.
 - ii) The developer roller has been biased to the potential $-DBV(V)$. Fig.4-15 describes the relationship established between the potential of the toner, the potential $-V_o(V)$ at the non-exposed area of OPC belt and the potential $-VR(V)$ on the exposed area of the OPC belt.
 - iii) Developing is processed by the toner adhering to the OPC belt due to the attraction between the potential of the toner and the potential $-VR(V)$ on the exposed area of the OPC belt. A visible Toner image is formed on the OPC belt.
 - iv) No developing takes place on the non-exposed area because the potential of the toner and that of the OPC belt is the same polarity and therefore repel each other.

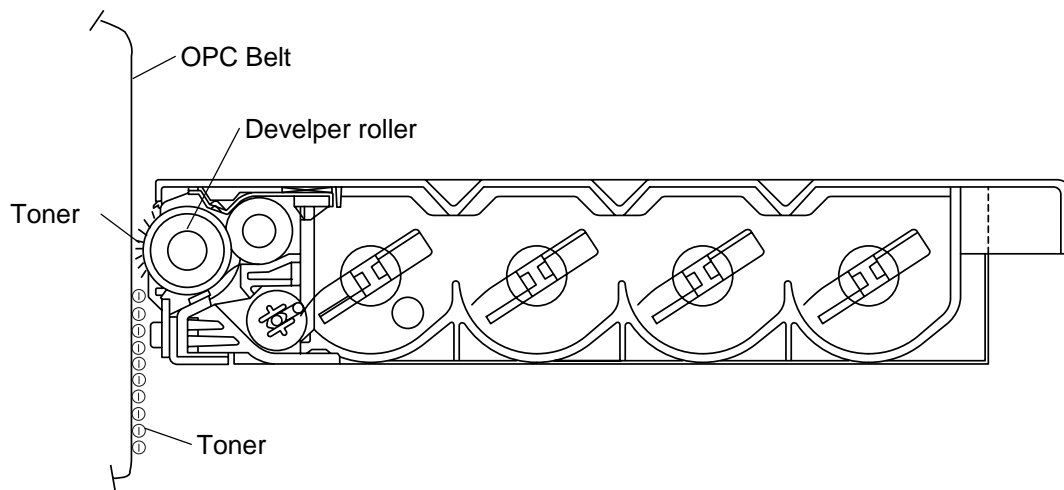


Fig.4-14

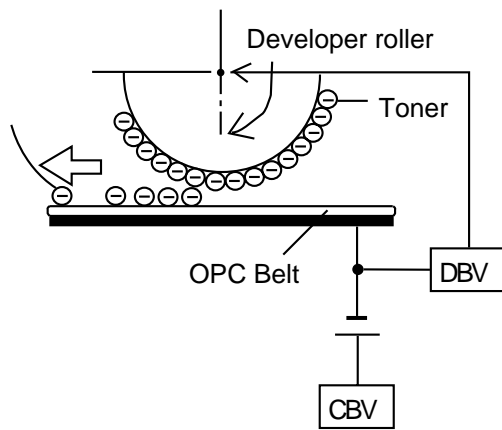


Fig.4-15

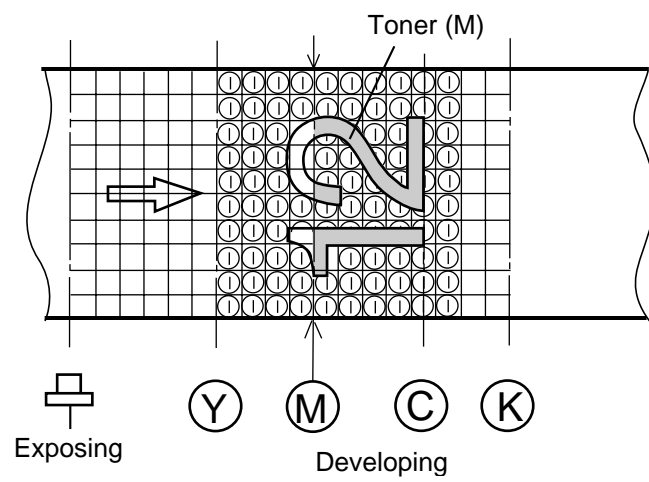


Fig.4-16

4	First Transfer (Drum)
---	-----------------------

The first transfer process means that the toner image on the OPC belt is transferred onto the transfer drum.

- (1) Structure of the Transfer Drum (Refer to Fig.4-8.)
 - i) The drum is located as shown in Fig.4-8.
 - ii) Material of the drum is aluminum.
 - iii) Semiconductor rubber is used to provide the drum surface as shown in Fig.4-17.
 - iv) The transfer drum rotates by contacting and synchronizing with the OPC belt.

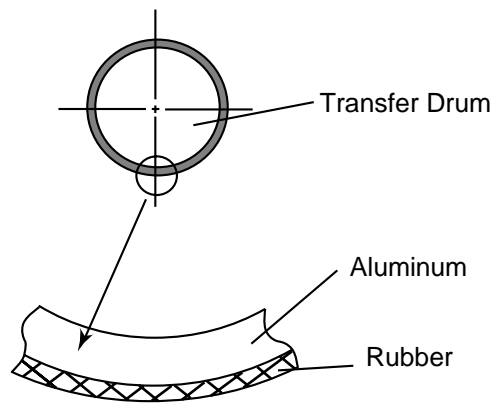


Fig.4-17

- (2) First Transfer Process (Refer to Fig.4-18.)
- i) The OPC belt has been through the development process and contacts and synchronizes with the transfer drum.
 - ii) The OPC belt has been biased to the potential of $-CBV(V)$. The potential of the transfer drum is nearly GND.
 - iii) Toner on the OPC belt is moved onto the transfer drum due to the difference of potential between the OPC belt and the transfer drum.
 - iv) Toner that has been developed by each color in sequence is moved from the OPC belt onto the transfer drum and the color toner images overlap on the transfer drum.
 - v) Upon completion of the drum transfer process, the complete toner image is transferred onto paper in the paper transfer process.

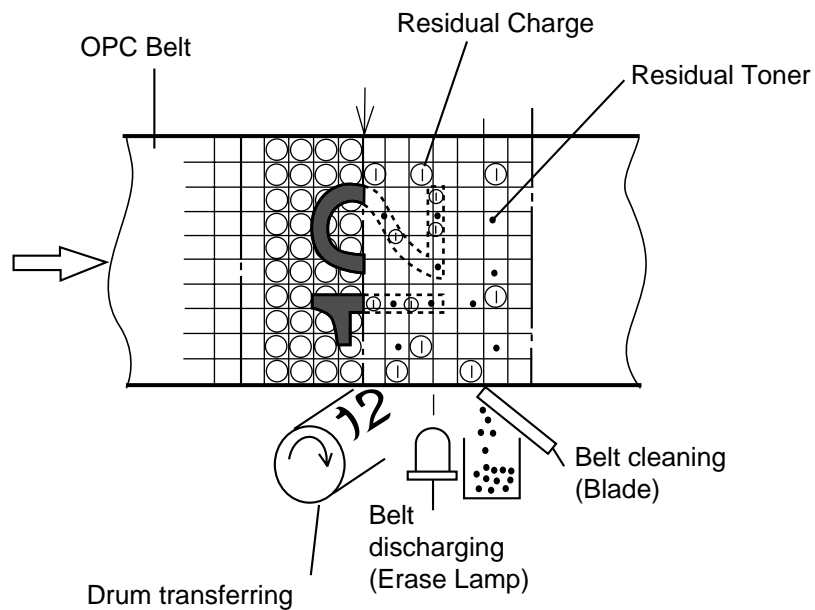


Fig.4-18

5	Belt Discharging (Erase Lamp)
---	-------------------------------

The belt discharging process means that upon completion of the drum transfer process, an LED light is radiated onto the OPC belt prior to mechanically cleaning the belt to discharge the residual charge.

- (1) Structure of Erase Lamp
 - i) The erase lamp is located as shown in Fig.4-8.
 - ii) The light source of the erase lamp is 24 light emitting diodes (LEDs).
- (2) Process of Discharging (Refer to Fig.4-19.)
 - i) Though the toner image was transferred to the transfer drum in the drum transfer process, there is still a residual charge on the OPC belt.
 - ii) The residual charge (-VR) on the OPC belt is discharged by the radiation of the erase lamp light prior to cleaning the belt.

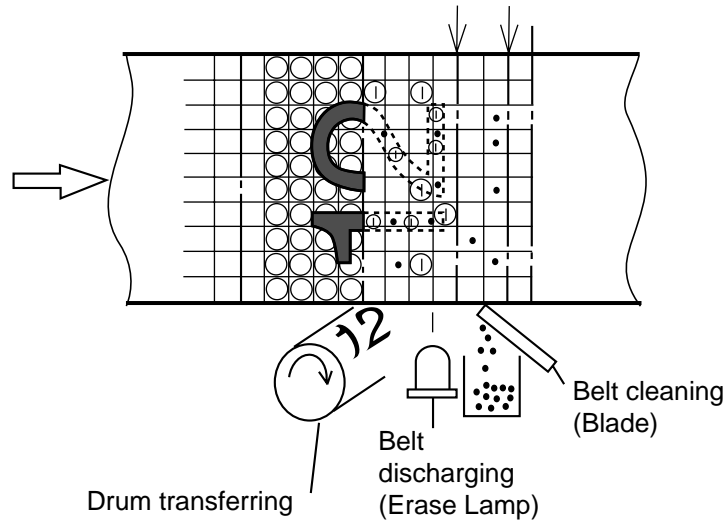


Fig.4-19

The belt cleaning process means that the residual toner adhering to the OPC belt surface is mechanically scavenged.

(1) Structure of Belt Cleaning

The blade for the belt cleaning is located relative to the OPC belt cartridge as shown in Fig.4-8.

(2) Process of Belt Cleaning (Refer to Fig.4-20.)

There is residual toner on the OPC belt as it has not been completely transferred in the drum transfer process.

Residual toner is mechanically scavenged by the blade edge.

The scavenged residual toner is collected in the waste toner pack by the waste toner feeder.

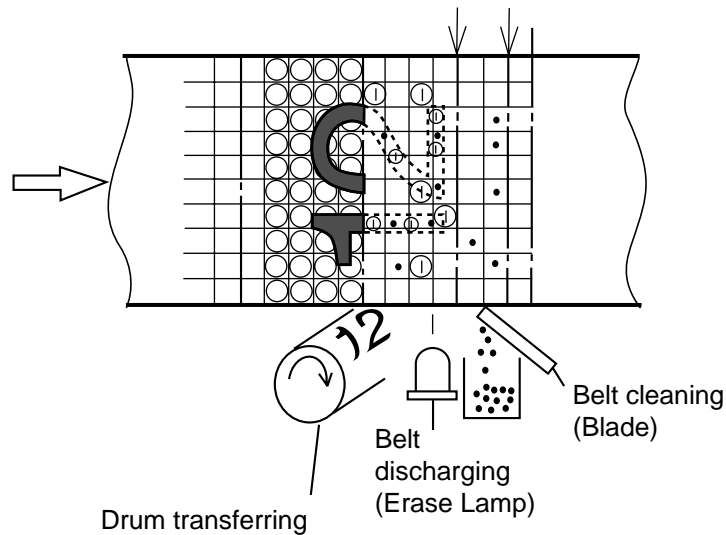


Fig.4-20

The second transfer process is where the toner image on the transfer drum is transferred onto the transported paper.

(1) Second Transfer Structure

- i) The transfer roller for the paper transfer is located as shown in Fig.4-8.
- ii) The transfer roller is normally kept out of contact with the transfer drum until the second transfer process starts.
- iii) The transfer roller is positively biased by the power supply THV.
- iv) The transfer roller is in contact with the transfer drum only in the second transfer process.
- v) Transported paper passes between the transfer roller and transfer drum.

(2) Second Transfer Process (Refer to Fig.4-21.)

- i) Paper is transported and is synchronized with the transfer drum.
- ii) The transfer roller operates and is synchronized with the transported paper and is in contact with the transfer drum through the transported paper.
- iii) The transported paper passes between the transfer roller and transfer drum.
At this time the positive high voltage (THV) is fed to the transfer roller.
- iv) Negatively charged toner on the transfer drum is moved to the positively charged paper.
- v) The transported paper with the toner transferred to it is moved to the paper discharging process.

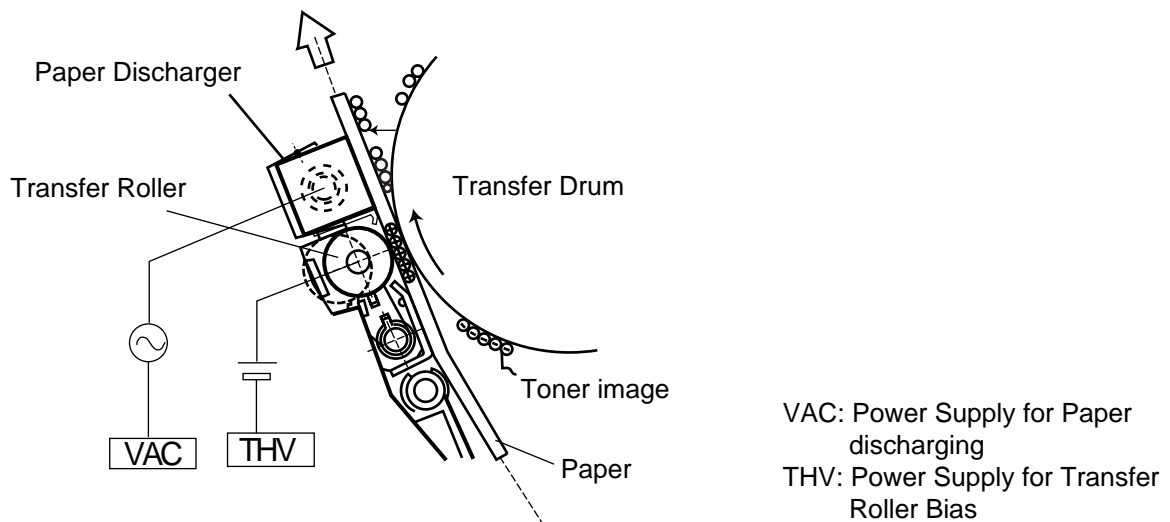


Fig.4-21

The paper discharging process is where the transported paper onto which the toner transfer has been completed is separated from the transfer drum by applying an AC charge to the paper.

- (1) Structure of Paper Discharger (Refer to Fig.4-22.)
 - i) The AC charger unit for discharge the paper is located as shown in Fig.4-8.
 - ii) The AC charger unit consists of the case and a charger wire.
 - iii) A high alternating voltage (VAC) is fed to the AC charger unit.
- (2) Process of Paper Discharging (Refer to Fig.4-22.)
 - i) The paper adheres to the transfer drum in the transfer process.
 - ii) The paper is neutralized (discharged) in terms of any electrical charge by the alternate voltage generated by the discharger.
 - iii) Paper is separated from the transfer drum and subsequently transported to the fusing (fixing) process.

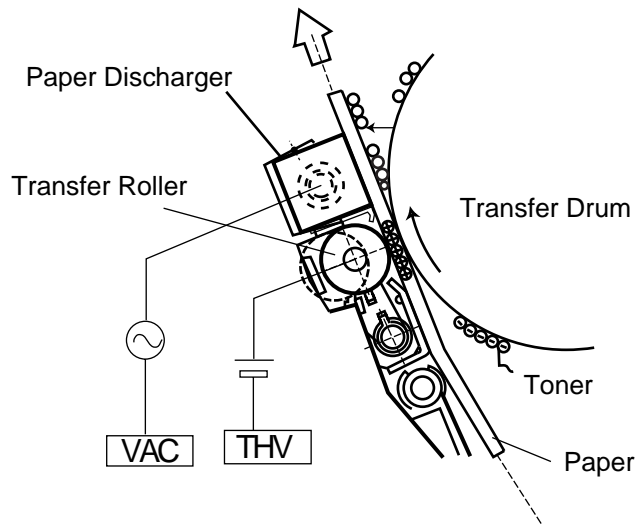


Fig.4-22

The drum cleaning process is where the residual toner on the transfer drum is removed.

- (1) Structure of Drum Cleaning (Refer to Fig.4-23.)
 - i) The drum cleaning unit is located as shown in Fig.4-8.
 - ii) The drum cleaning brush is a semiconductor type so that the brush can clean the surface of the rotating transfer drum. The Drum cleaning brush is kept out of contact with the transfer drum when the print image on the transfer drum is being created.
 - iii) The drum cleaning roller is positively biased by the positive voltage FCBV(V).
 - iv) FCBV(V) is fed to the cleaning brush in contact with the roller and the cleaning brush is self-biased by the resistance of the brush.
 - v) The drum cleaning roller rotates in contact with the drum cleaning brush.
- (2) Process of Belt Cleaning (Refer to Fig.4-23.)
 - i) There is residual toner on the surface of the transfer drum after the paper transfer process.
 - ii) The Drum cleaning brush is positively self-biased and so the negatively charged residual toner is removed from the surface of the transfer drum onto the drum cleaning brush.
 - iii) The Drum cleaning roller has been biased to the positive voltage FCBV(V). As the cleaning brush rotates, the residual toner absorbed into the brush from the transfer drum is attracted by the positive FCBV(V) voltage on the roller and adheres to the surface of the drum cleaning roller.
 - iv) Waste toner adhering to the surface of the drum cleaning roller is scavenged by the cleaning blade and collected into the waste toner pack by the waste toner feeder.

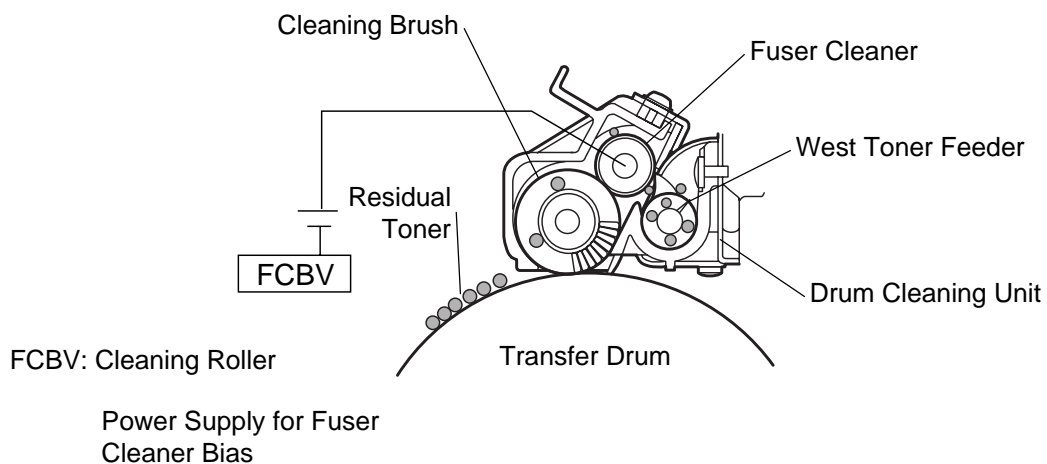


Fig.4-23

1.2 Scanning System

This printer employs a semiconductor laser diode as a light source. This laser diode is switched according to the transmitted image data (video signal).

The generated laser light scans over the OPC belt through a polygon mirror and lens, by which method electrostatic latent images will be formed on the OPC belt.

(1) Structure of the Scanning System (Refer to Fig.4-24.)

The scanner unit is located as shown in Fig.4-8.

The scanner unit consists of the following parts;

- | | | |
|---|-------------------|---|
| ① | Laser Unit: | Light emitting source incorporating a laser diode. |
| ② | Cylinder Lens: | Condenser for the laser beam. |
| ③ | Polygon Mirror: | Hexahedral mirror for scanning the laser beam. |
| ④ | F- θ Lens: | Focus lens for the laser beam. |
| ⑤ | Scanner Motor: | Motor to rotate the polygon mirror. |
| ⑥ | Mirror: | Reflecting mirror for the laser beam path. |
| ⑦ | LDC: | Laser diode control circuit. |
| ⑧ | PD: | Beam detector. |
| ⑨ | BTD Mirror: | Beam timing detector mirror to guide the laser beam to the PD sensor. |

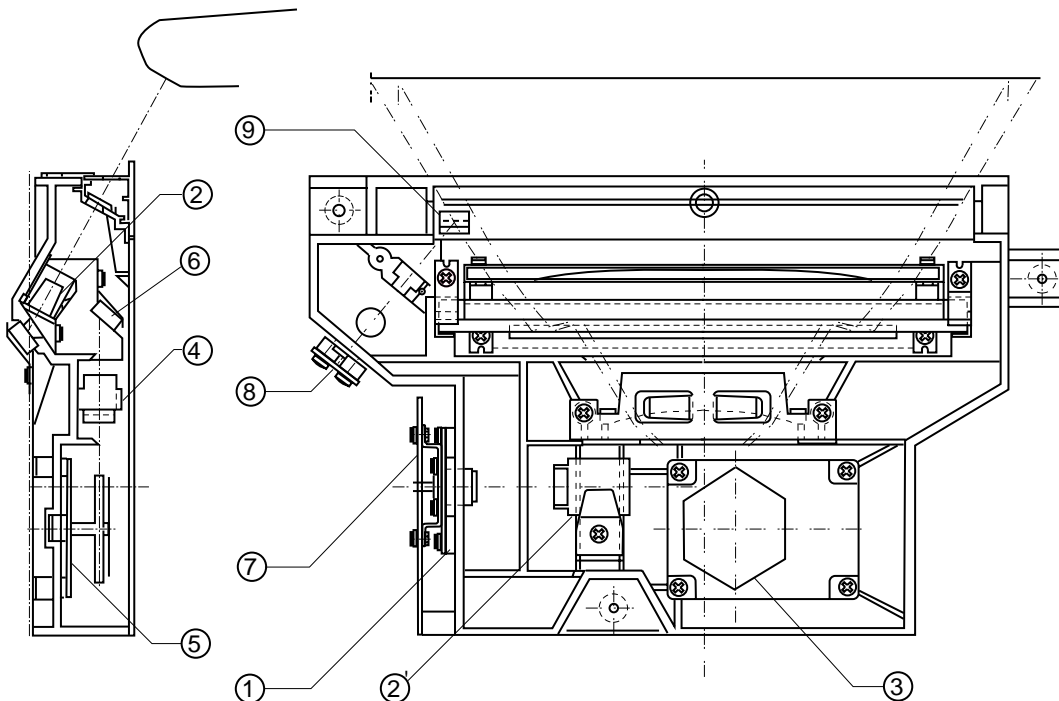


Fig.4-24

(2) Specification:

Specification of the Scanner Unit is as follows;

Item	Specifications
Rated Output of Laser Diode	5mW.
Wave Length of Laser Beam	Approx.785nm.
Scanning Density	600dpi
Scanning Width	220mm
Scanner Motor speed	23,936rpm
Number of Polygon Mirror Faces	6

1.3 Paper Transportation System

(1) Outline


This printer employs automatic paper feeding from the media cassette.

When toner images are formed on the transfer drum through the operations of the print system and transfer system, paper is fed by the pick-up roller and transported to the register roller. The transported paper is further transported to the transfer, fuser and exit parts by the register roller synchronizing with the rotation of the transfer drum.

(2) Structure of Paper Transportation System (Refer to Fig.4-25.)

The paper transportation system consists of the following parts;

- | | |
|--------------------------|---|
| ① Media Cassette: | Case to accommodate paper to be fed automatically. |
| ② Paper Pick-up Roller: | Roller to feed sheets of paper one by one, preventing multi-feed. |
| ③ Register Roller: | Roller to transport papers synchronized with the transfer drum. |
| ④ Transfer System: | Print processing part consisting of transfer drum and transfer roller to transfer the toner image onto the paper. |
| ⑤ Paper Discharger Unit: | Corona generator to generate AC corona for separating paper from the transfer drum. |
| ⑥ Fusing Unit: | Mechanical part to fuse the toner image with heat rollers and fix it on the paper. |
| ⑦ Paper Exit Unit: | Mechanical part to exit the fused paper from the printer. |
| ⑧ Paper Exit Roller: | Roller to feed paper from the printer. |

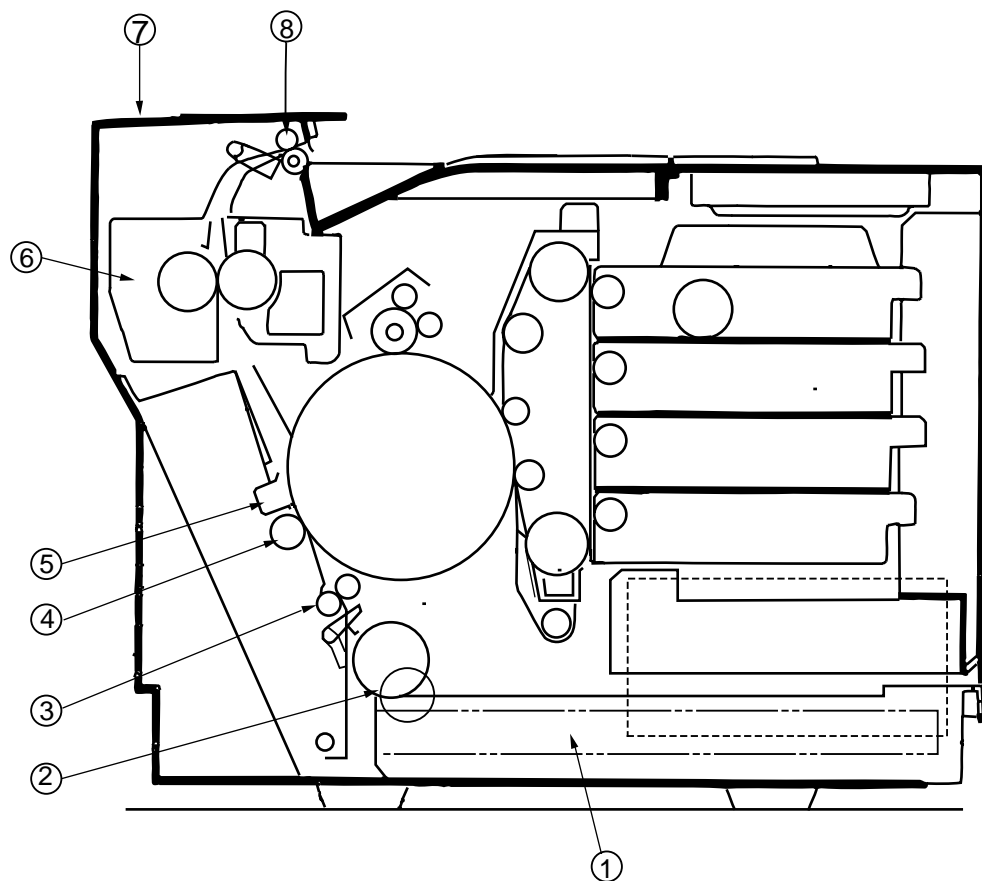

- | | |
|------------------------|-------------------------|
| ① Media Cassette | ⑤ Paper Discharger Unit |
| ② Paper Pick-up Roller | ⑥ Fusing Unit |
| ③ Register Roller | ⑦ Paper Exit Unit |
| ④ Transfer Part | ⑧ Paper Exit Roller |

Fig.4-25

1.4 Fusing Unit

The fusing unit employs a thermal fusing system using heater lamps in the rollers. Paper carrying the combined toner image passes between the heat rollers. Heat and pressure is applied to the paper when passing between the heat rollers so that the toner image is melted and fused onto the paper.

(1) Structure

The fusing unit consists of the following component parts; (Refer to Fig.4-26.)

- | | | |
|---|-----------------|--|
| ① | Back-up Roller: | is a pressure roller and incorporates a heater lamp. |
| ② | Fuser Roller: | incorporates a heater lamp. |
| ③ | Fusing Heaters: | halogen lamps to heat the rollers. |
| ④ | Thermal Fuse: | prevent the fuser roller from being excessively heated up. |
| ⑤ | Thermistor: | is a sensor to detect the temperature of the fuser roller's surface. |
| ⑥ | Oil Bottle: | contains silicone oil for fusing. |
| ⑦ | Fuser Cleaner: | cleans the fuser roller. |

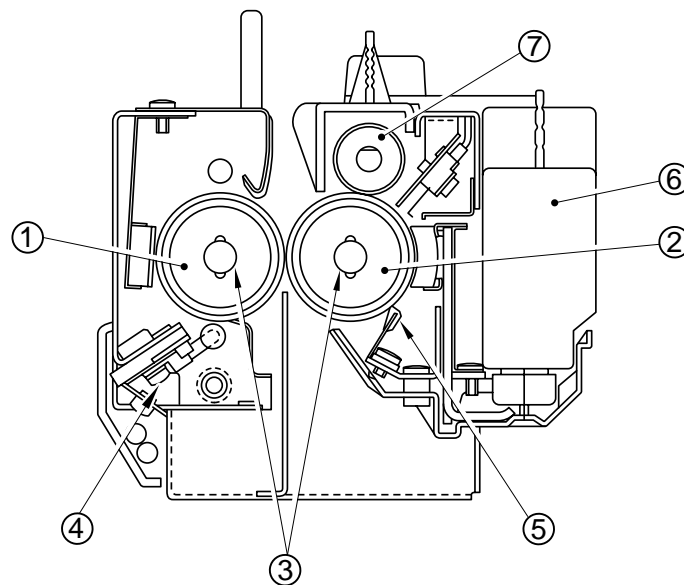


Fig.4-26

(2) Fusing Process (Refer to Fig.4-27.)

- ① Silicone oil supplied from the oil bottle is applied to the surface of fuser roller.
- ② The toner image has been transferred onto the paper, but not yet fused.
- ③ Transported paper passes between the heater roller and back-up roller.
- ④ Each roller is heated up to approx.140°C, and receives approximately 156N pressure from the opposite heat roller.
- ⑤ When the paper carrying the toner images passes between the two heat rollers, the toner images are melted and fused on the transported paper.
- ⑥ The paper carrying the fused image is separated from the heat rollers, and ejected from the printer.

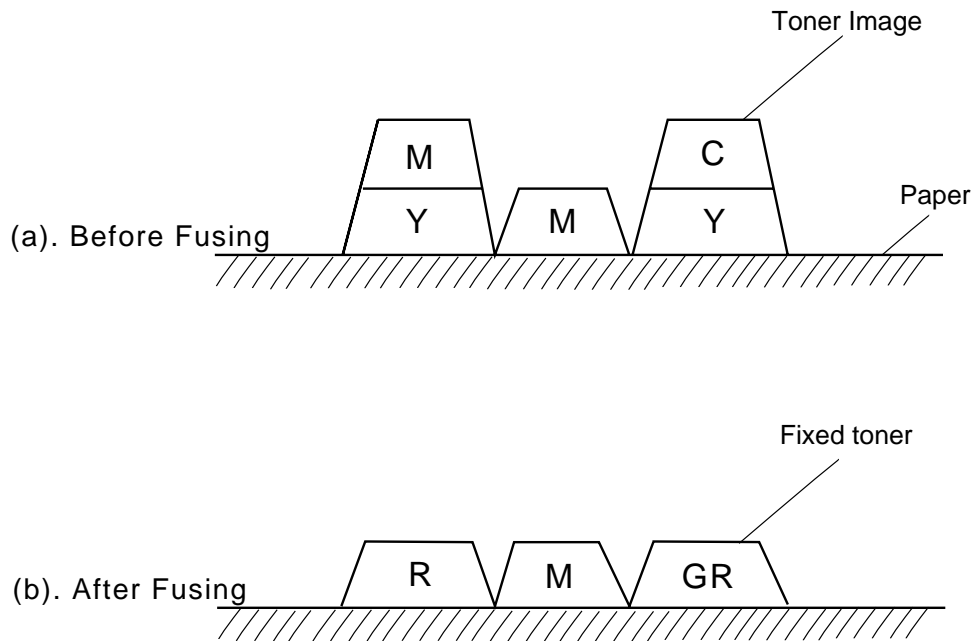


Fig.4-27

2. STRUCTURE OF THE CONTROL SYSTEM

2.1 Basic Structure

2.1.1 Electrical System and Functions

Most of the main electrical parts of this printer are controlled by the MCTL (engine controller) PCB.

<Structure of the Sequence Control>

The basic structure of the sequence control is shown in Fig.4-28.

- | | | |
|---|--------------------------------------|---|
| ① | Print Process Control: | To control the print process from the paper feed through to the paper exit. |
| ② | Laser Output Control: | To automatically control the laser output. |
| ③ | Fuser Temperature Control: | To control the fixer heater so that the temperature of the fuser roller and back-up roller will be correct. |
| ④ | Toner Sensing Control: | To control the sensing of the toner empty status. |
| ⑤ | Interface Control:
(Video Signal) | To process the input and output signals to and from the external controller (host). |
| ⑥ | Control Panel Indicator: | To display the printer operational status on the control panel indicator. |
| ⑦ | Error Control: | To control the safety stop procedures when errors occur in the printer. |

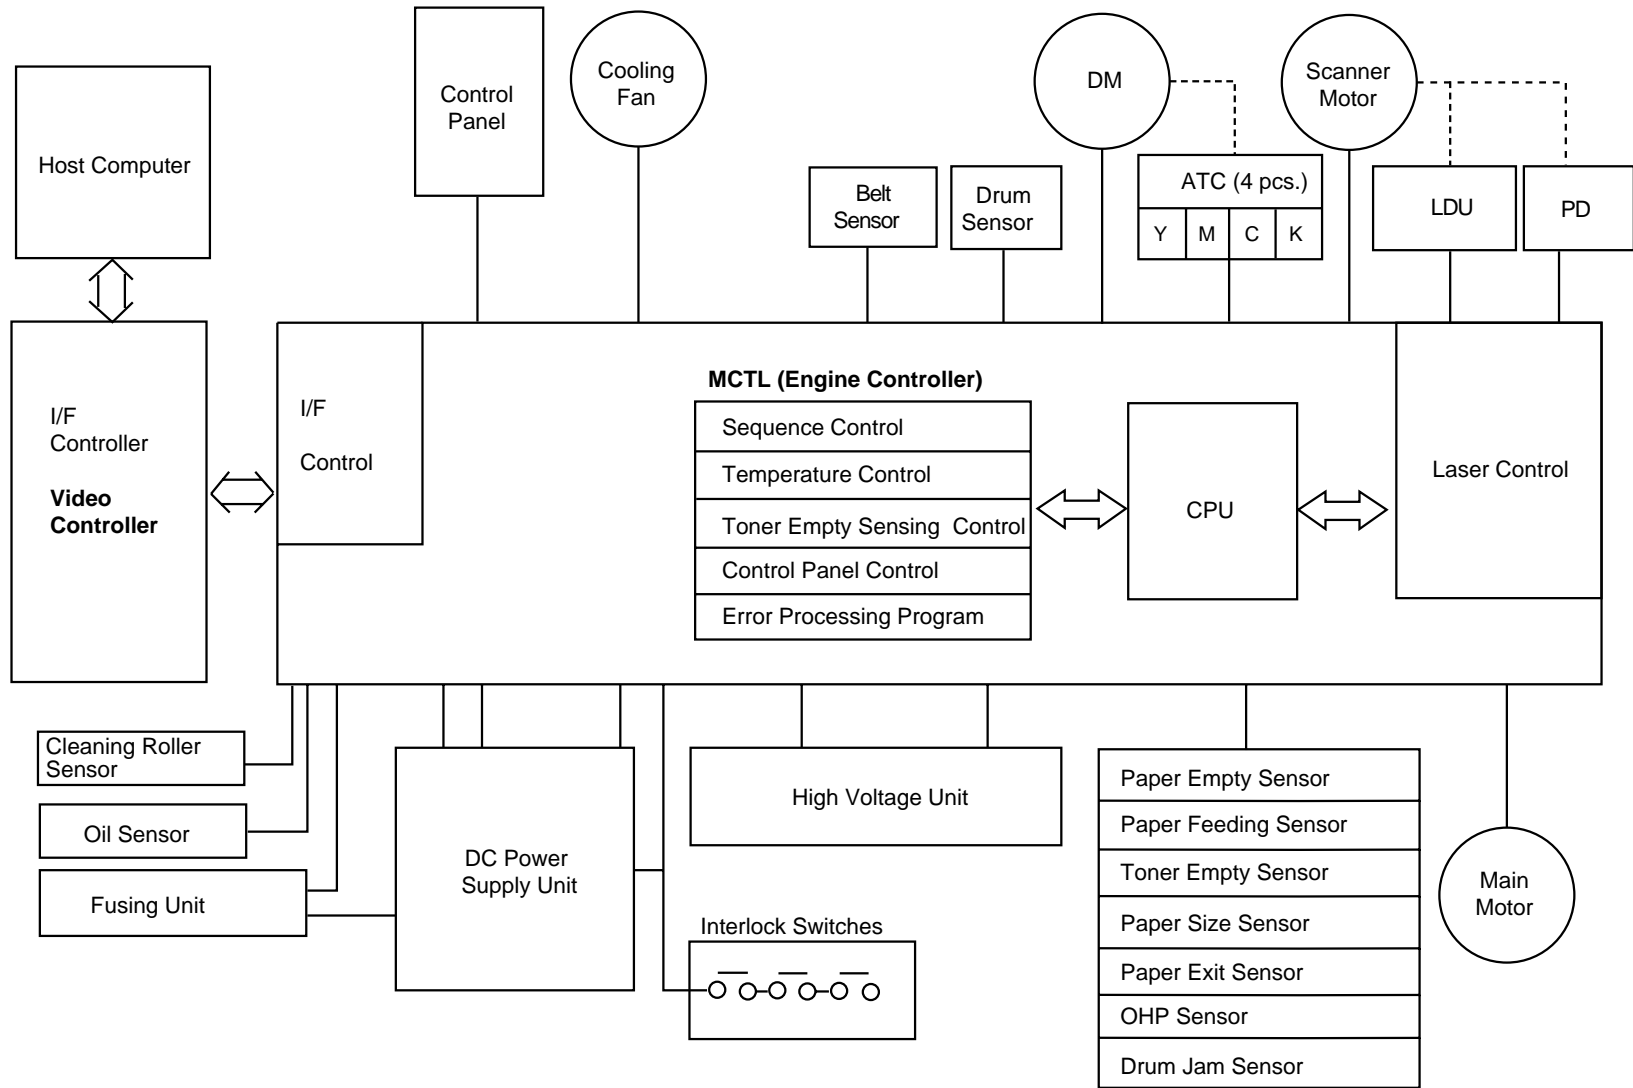


Fig.4-28

<Layout & Function of the Electrical Parts>

(1) Print PCB (Refer to Fig. 4-29.)

No.	Name	Function
1	Video Controller PCB	To receive the print data from the host computer, convert it into image data and then send the printing image data to the MCTL PCB.
2	Engine Controller (MCTL) PCB	To control the sequence of processes of the printer: Fusing Temperature Control, Laser Output Control, Control Panel Indications, Toner Empty Sensing Control, Error Processing Control, Interface Control.
3	Control Panel PCB	To display the printer's operation status and support the control panel switches.
4	LDU PCB	To control the drive and output to the laser diode in the scanner unit.
5	PDU PCB	To sense the emission of the laser diode and the beam position in the scanner unit.
6	Erase Lamp	To discharge the OPC belt with the LEDs.
7	IOD1 PCB	To send the signals from the sensors to the MCTL PCB, and to drive the outputs from the MCTL PCB to the motors, clutches and solenoids.
8	IOD2 PCB	- Ditto -
9	DC Power Supply (LVPS) PCB	To provide the printer with the power for printer control.
10	High-voltage Power Supply (HVU) PCB	To provide the printer with the high voltage power supplies necessary for the printing process.

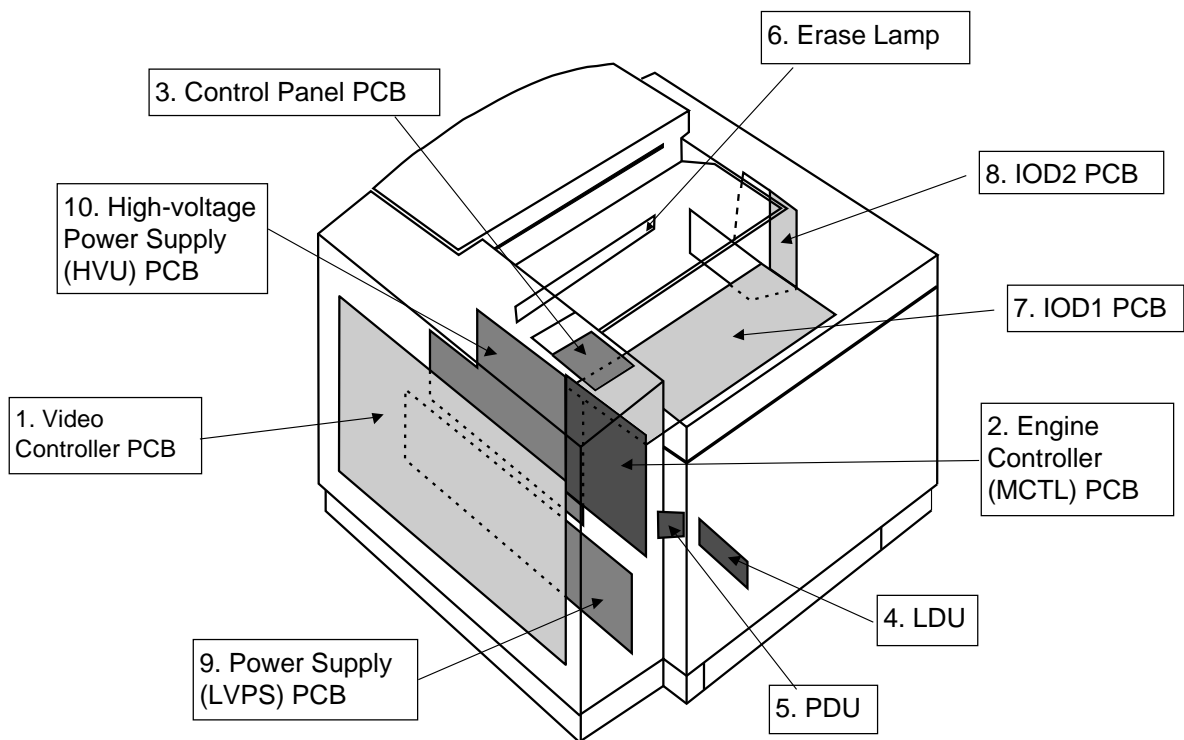


Fig.4-29

(2) Motors (Refer to Fig.4-30.)

No.	Name	Code	Function
1	Main Motor	MM	To drive the OPC belt and the paper transport system.
2	Developing Motor	DM	To drive the toner cartridge and the developing system.
3	Scanner Motor	SCM	To scan the laser beam
4	Ozone Fan Motor	OZFAN	To exhaust the ozone from the printer (charger unit).
5	Heater Fan Motor	HTFAN	To exhaust the heat of the fusing unit.
6	Controller Fan Motor	CTLFAN	To exhaust the heat of the power supply unit and Interface Controller.

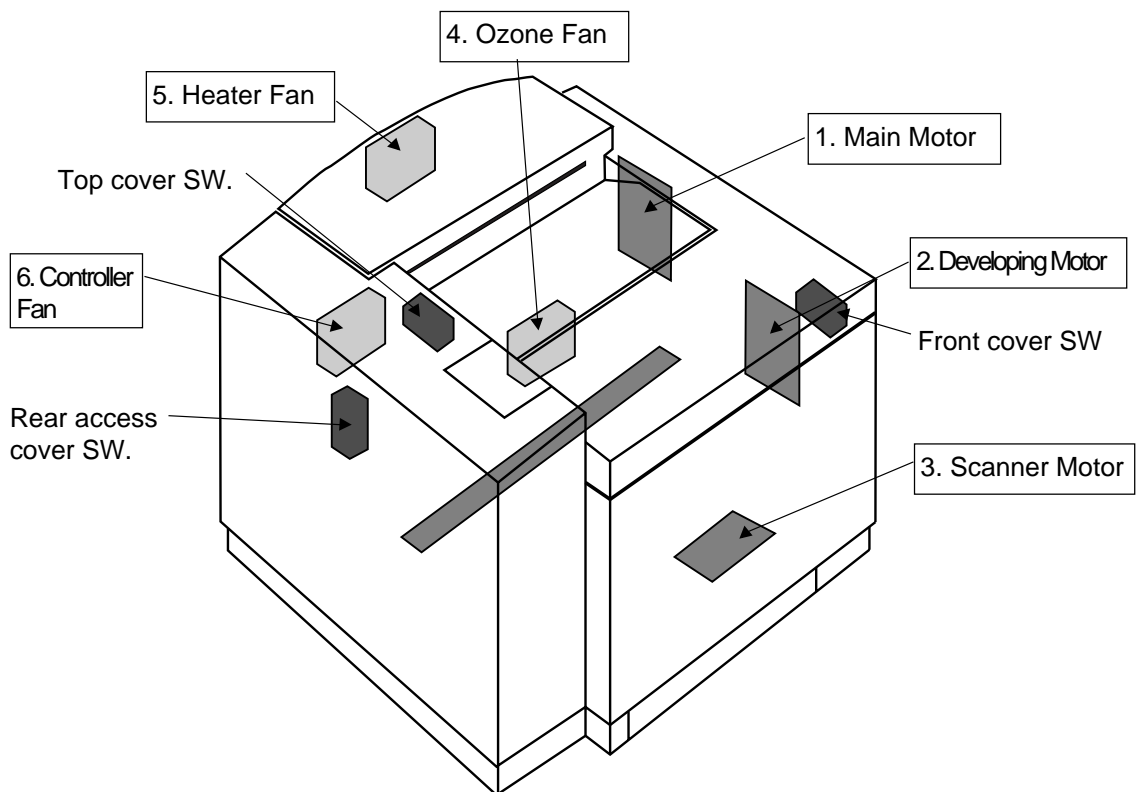


Fig.4-30

(3) Clutches and Solenoids (Refer to Fig.4-31.)

No.	Name	Code	Function
1	Paper Feed Clutch	PCLU	To feed paper by coupling the feeding roller to the main gear unit at the correct timing for paper feeding.
2	Registration Clutch	RECL	To transport paper by coupling the register roller to the main gear unit synchronized with the rotation of the transfer drum.
3	Fuser Clutch	FUCL	To drive the fusing rollers by coupling the fusing unit to the main gear unit.
4	Cleaner Clutch	FBCL	To drive the brush of the drum cleaner by coupling the cleaner clutch to the main gear unit at the correct timing for drum cleaning.
5 ~ 8	Developer Clutch	DVCL (Y,M,C,K)	To drive the magnetic roller of the desired color toner cartridge by coupling that toner cartridge to the developer gear unit during developing.
9	Developer Solenoid Unit	DVSOL	To position the desired color toner cartridge in the developing position during developing.
10	Transfer Solenoid	TRSOL	To make the transfer roller contact the transfer drum surface at the time of the second transfer.
11	Drum Cleaner Solenoid	FBSOL	To make the drum cleaner contact the transfer drum surface at the correct timing for drum cleaning.

Layout of Clutches and Solenoids

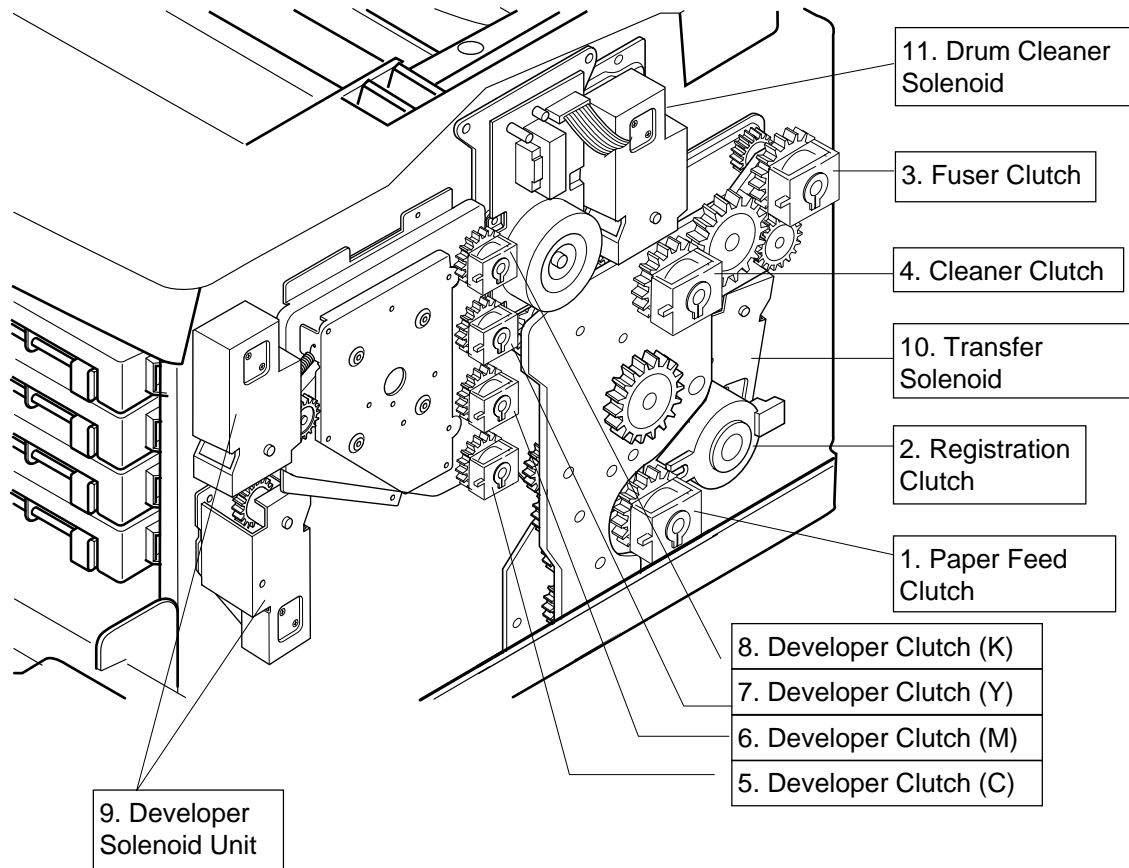


Fig.4-31

(4) Sensors

No.	Name	Code	Function
1	Paper Size Sensor	PSU	Photo sensor to detect the paper size.
2	Paper Feeding Sensor	PT1	Photo sensor to detect when paper is fed from the media cassette.
3	Paper Exit Sensor	PT2	Photo sensor to detect that paper is exited from the paper exit unit.
4	Paper Empty Sensor	PE	Photo sensor to detect if paper is loaded in the media cassette.
5	Oil Sensor	OIL	Photo sensor to detect if the fusing unit oil is empty.
6	OHP Sensor	OHP	Photo sensor to detect if media in the media cassette is an OHP.
7	Drum Jam Sensor	DPJ	Photo sensor to detect if paper is wound around the transfer drum.
8	Drum Encoder Sensor	EN	Photo sensor to detect rotation of the transfer drum.
9	Belt Sensor	PBS	Photo sensor to detect the home position of the OPC belt.
10	Toner Empty Sensor	TPD/TTR	Photo sensor to detect if the toner is empty for each toner cartridge.
11	Waste Toner Sensor	WTS	Photo sensor to detect if the waste toner bottle is full of toner.
12	Developing Photo Sensor	DHP1, DHP2	Photo sensor to detect the position of the toner cartridge.
13	Cleaning Roller Sensor	CRS	Photo sensor to detect if the fuser cleaner is fitted in the fixing unit.
14	Temperature Sensor for Fusing Unit	TH	Thermistor to detect the fuser temperature.

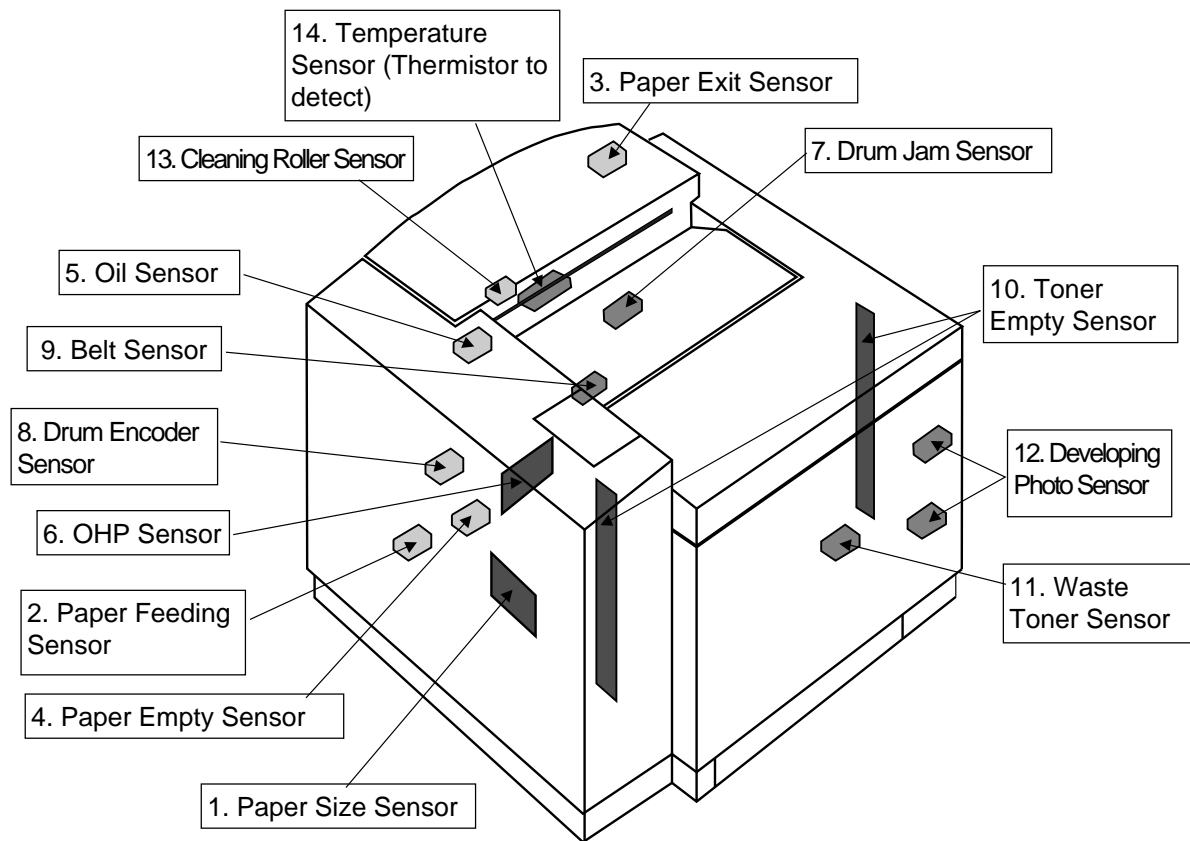


Fig.4-32

2.2 Control System

2.2.1 Control of the Print Process

A Micro CPU mounted on the MCTL PCB controls the print processes.

<Print Sequence Diagram>

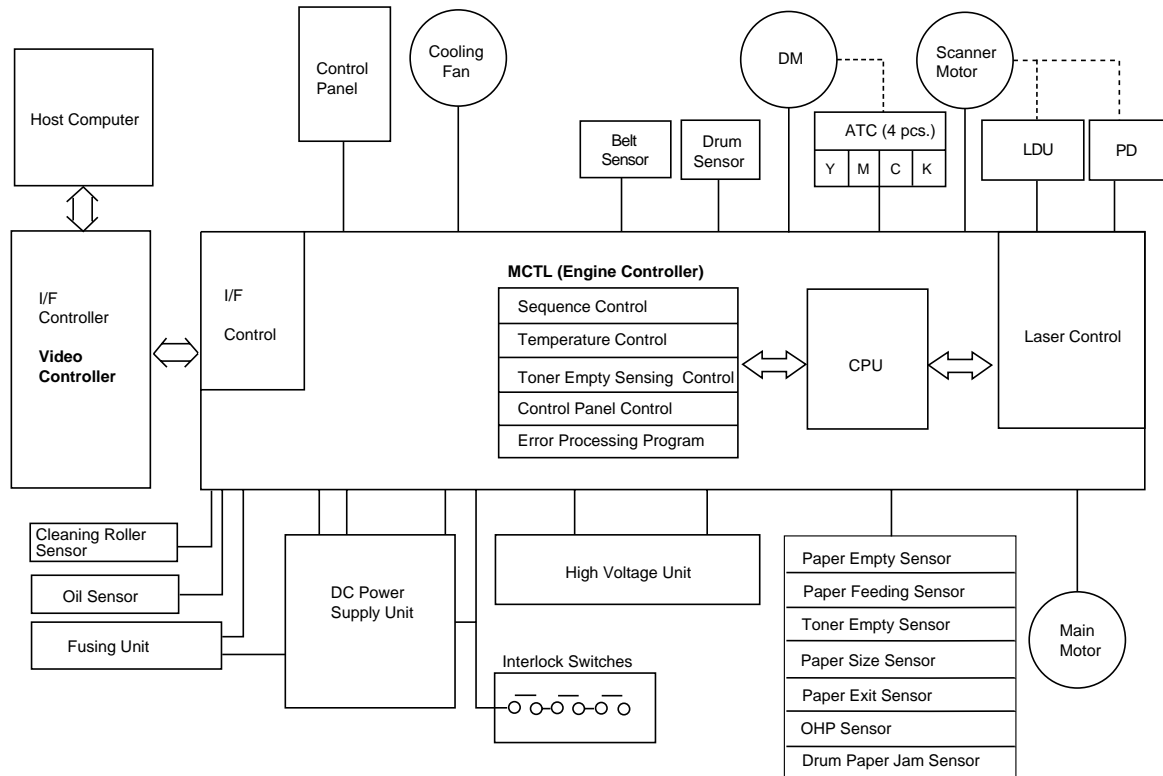


Fig.4-33

(1) Control Block Diagram (Refer to Fig.4-33.)

No.	Name	Function
1	Sequence Control	To control the sequence of printer operations.
2	Temperature Control	To control the temperature of the fixing unit.
3	Toner Empty Sensing Control	To detect the toner empty status of each toner cartridge.
4	Control Panel Control	To control the control panel indications and the operational signals.
5	Error Processing Control	To sense errors occurring in the printer and control the stop procedures.
6	Interface Control	To control the receipt and transmission of the interface signals from the external controller.
7	Laser Control	To control laser scanning and laser power.

(2) Laser Drive Control Circuit

Laser Drive Control Circuit (LDC) consists of the video signal input circuit, laser drive circuit, laser diode, output sensing circuit and output control circuit, as shown in Fig.4-34.

<Operation>

- (1) When the video signal is received, the laser drive control circuit switches the laser diode according to the video signal data.
- (2) The radiated laser beam is sensed by the photo detector (PD) and the signal is fed back to the output control circuit.
- (3) The output control circuit controls the laser output to make the level constant by comparing the laser output with the feed-back value transmitted from the output sensing circuit.
- (4) The scanning laser beam is sensed by the beam detector (PD), then the beam detecting timing (BDT) signal is output.

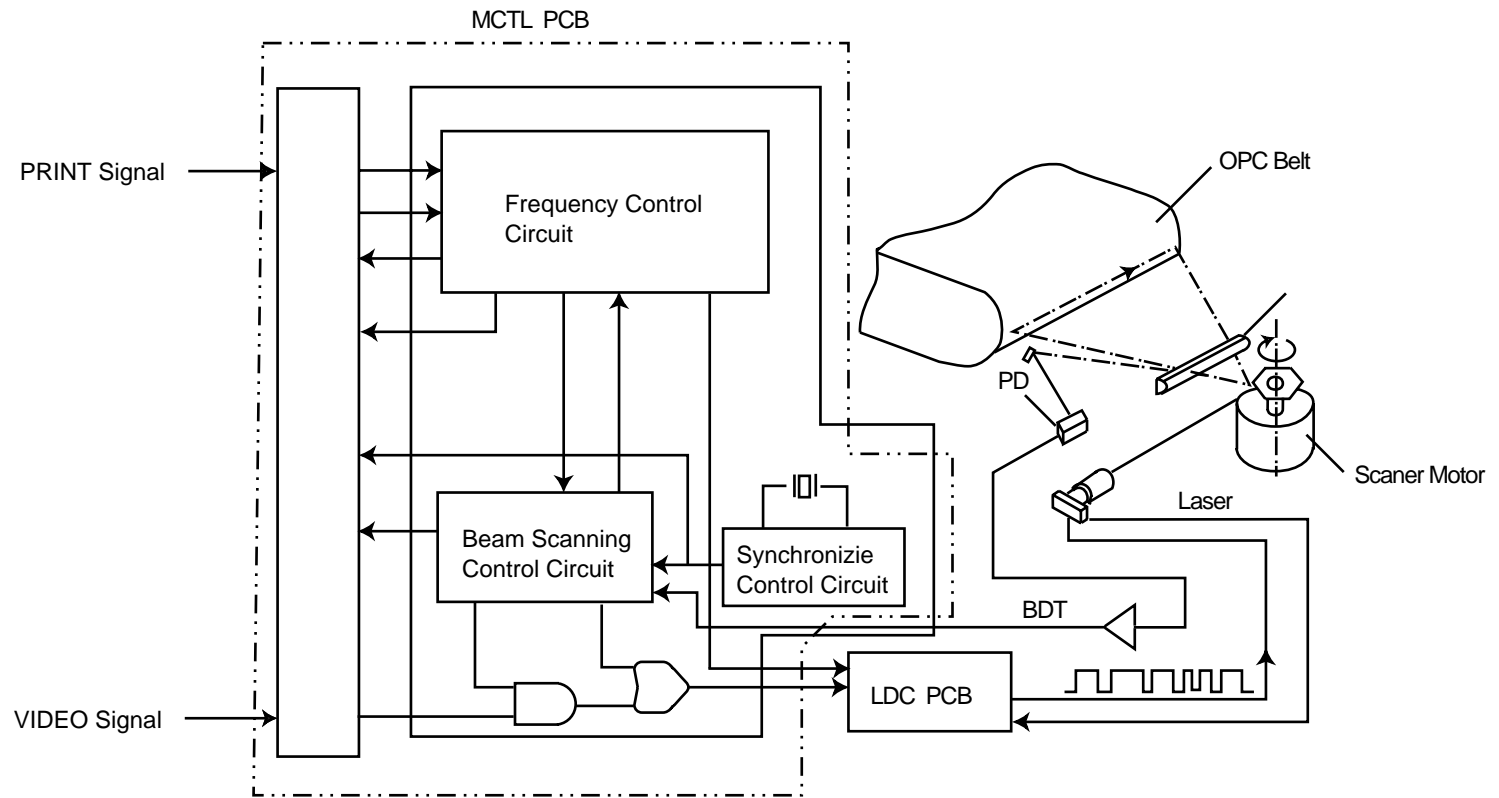


Fig.4-34

(3) Control of the Fusing Temperature

Each roller of the fusing unit is controlled to maintain the appropriate temperature so that toner will be fixed correctly onto the print paper.


<Basic Structure of Temperature Control (Fig.4-35)>

FLS:	Thyristor to switch the power supply to the heat lamp.
TFU1/TFU2 :	Temperature fuse to shut down the circuit for safety when the temperature becomes too hot within the fixing unit.
TH:	Temperature sensor to detect the surface temperature of the heat roller (HR).
RY:	Relay to prevent further heating when it becomes hotter than the set temperature within the fixing unit.
GA/CPU:	Process circuit to control the temperature signal (micro computer).
CM1:	Sensor circuit for temperature signal (for ACOFF signal).
CM2:	Sensor circuit for temperature signal (for HON signal).
CM3:	Sensor circuit for temperature signal (for processing).
Q:	Sensor circuit for shut-down by the thermistor (for THERR signal).
HR:	Heat lamp for the heat roller.
BR:	Heat lamp for the back-up roller.

< Signal Functions >

HON-N	To turn on/off the heater inside the fuser roller.
ACOFF	To turn off the relay RY1 if overheat occurs.
THERR	To detect the shut-down by the thermistor.
AD	To convert the temperature sensing signal to AD.

<Controlled Temperature and Safety>

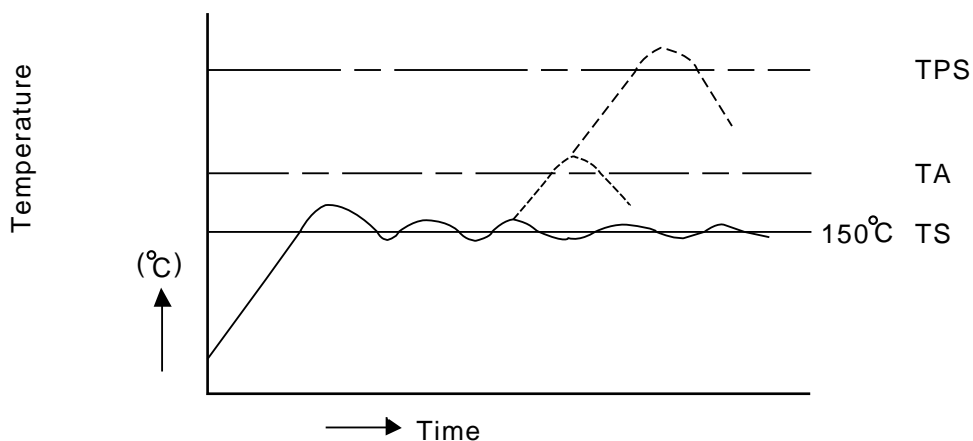

<Basic Structure of Fuser Control>

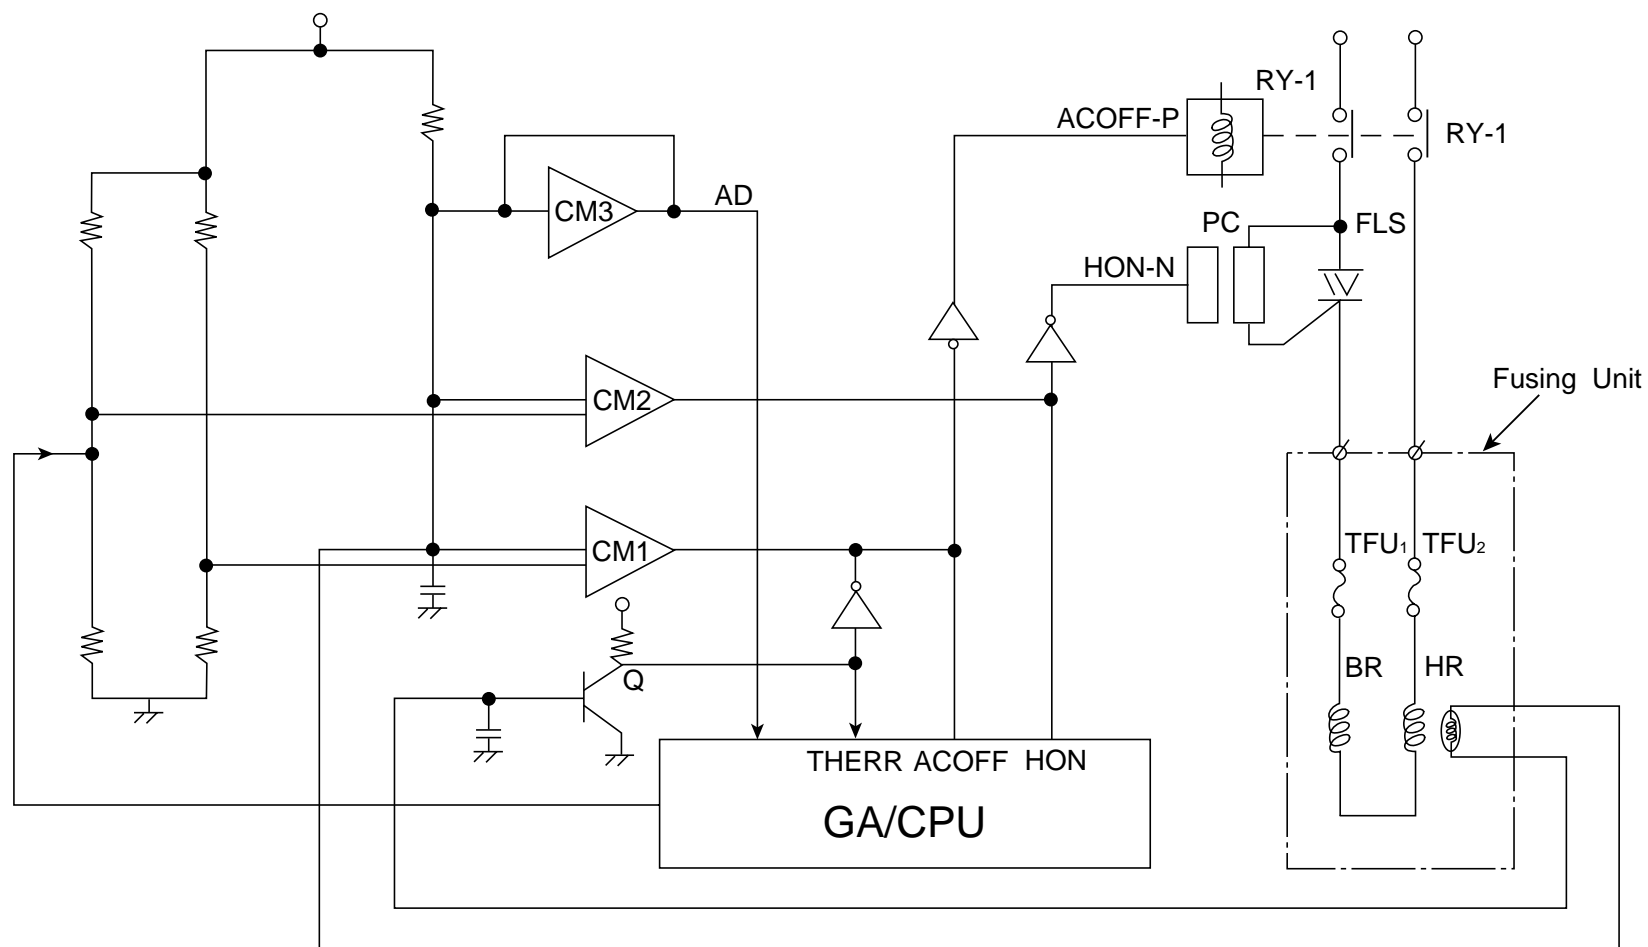


Fig.4-35

- TS: To maintain the temperature for fixing of the toner at 140°C by turning the thyristor on and off.
- TA: Reference temperature (°C) to identify that it is excessively hot inside the fusing unit. When it reaches this point (°C), the relay RY turns off, the power supply to the heat lamp is shut down and the printer stops operating.
- TPS: Limit temperature when the thermal fuse will start to melt and shut down the power supply to the heat lamp if the temperature control circuit should break down. When the thermal fuse melts, the printer will stop operating.

<Safety Control by Temperature Control Signal>

- H0: When the THERR signal is input, the control panel indicates "H0", and the printer will stop operating.
- H2: If the temperature of the fixing unit does not reach the required point "T1" after a certain time, the control panel indicates "H2" and the printer will stop operating.
- H3: If the "Heater On" signal still continues after a certain time, the control panel indicates "H3", and the printer will stop operating.
- H4: If the temperature within the fusing unit becomes unusually hot and when ACOFF signal is input, the control panel indicates "H4", and the printer will stop operating.

(4) Interface Control

<General>

(a) Interface Type

The video interface handles laser image data that corresponds to dots for printing but does not store image data in a buffer. The video data signals of the input image data switches the semiconductor laser diode to form a print image.

(b) Interface Connection

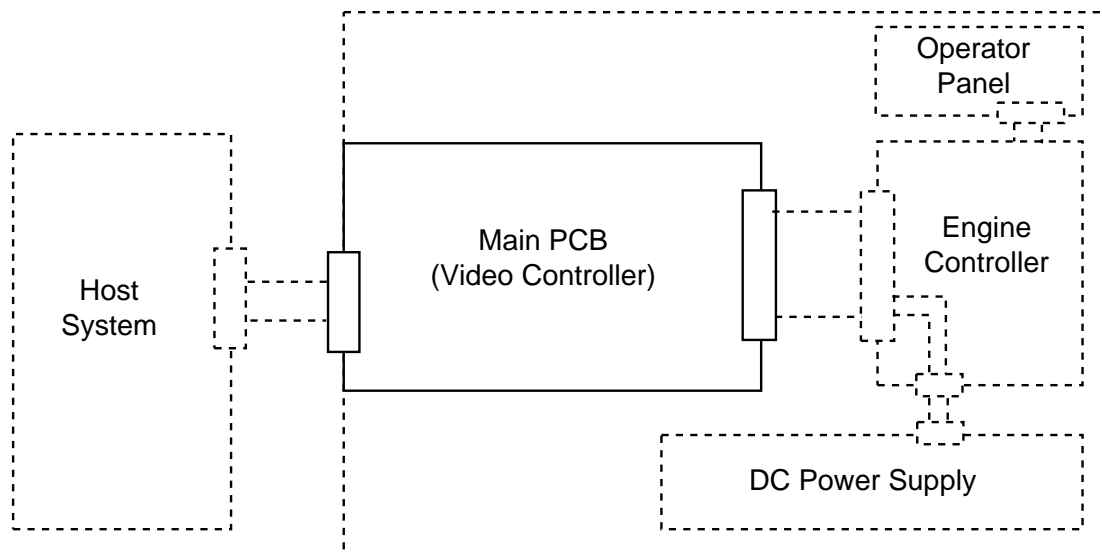
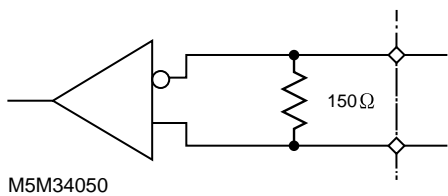
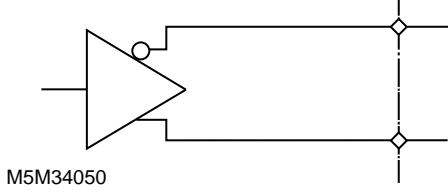
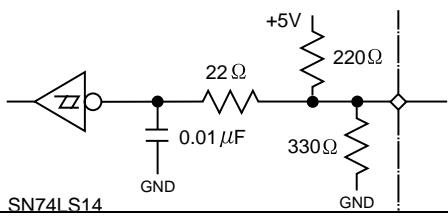
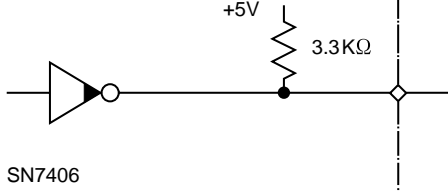


Fig.4-36

The interface connector of this laser printer is connected to the host system as shown in Fig.4-36.

(c) Interface Circuit (Printer side)

Table 4-1: Interface Circuit

No.	Interface Circuit	Signal Name
1	 <p>M5M34050</p>	<ul style="list-style-type: none"> • VIDEO-N • VIDEO-P
2	 <p>M5M34050</p>	<ul style="list-style-type: none"> • HSYNC-N • HSYNC-P
3	 <p>SN74LS14</p>	<ul style="list-style-type: none"> • PRREQ-N • COMMAND-N • ID1-N • ID2-N
4	 <p>SN7406</p>	<ul style="list-style-type: none"> • VSYNC-N • IREADY-N • STATUS-N • KEY-STATUS-N

(d) Connector Pin Assignment

The connector in the printer to connect to the controller board is type 128A-064S2B-:13A(DDK) or the equivalent.

Table 4-2: Connector Pin Assignment

Pin No.	Signal Name	Pin No.	Signal Name
1A	PSGND	1B	+5V
2A	PSGND	2B	+5V
3A	PSGND	3B	+5V
4A	PSGND	4B	+5V
5	PSGND	5B	+5V
6A	PSGND	6B	+5V
7A	PSGND	7B	+5V
8A	PSGND	8B	+5V
9A	VIDEO-P	9B	VIDEO-N
10A	RET(GND)	10B	Reserve
11A	HSYNC-P	11B	HSYNC-N
12A	ID2-N	12B	Reserve
13A	RET(GND)	13B	VSYNC-N
14A	RET(GND)	14B	Reserve
15A	RET(GND)	15B	STATUS
16A	RET(GND)	16B	IREADY-N
17A	RET(GND)	17B	Reserve
18A	RET(GND)	18B	COMMAND
19A	RET(GND)	19B	PRREQ-N
20A	RET(GND)	20B	Reserve
21A	ID1-N	21B	Reserve
22A	RET(GND)	22B	KEY_STATUS-N
23A	Reserve	23B	Reserve
24A	Reserve	24B	Reserve
25A	RET(GND)	25B	Reserve
26A	RET(GND)	26B	Reserve
27A	RET(GND)	27B	Reserve
28A	RET(GND)	28B	Reserve
29A	RET(GND)	29B	Reserve
30A	RET(GND)	30B	Reserve
31A	RET(GND)	31B	Reserve
32A	RET(GND)	32B	Reserve

2.3 Main PCB (Video Controller PCB)

2.3.1 Outline

The Main PCB consists of the circuits which perform the following functions;

- Receive the printing data from the computer.
- Convert the received data to the bitmap data such as characters or graphics.
- Control the engine and send the generated bitmap data as a video signal.

The control panel is controlled by communicating with the engine CPU to display LCD messages, light the LEDs and display the button status, etc.

The power for the Main PCB is supplied from the engine through the engine interface connector.

<Main PCB Block Diagram>

HL-2400C

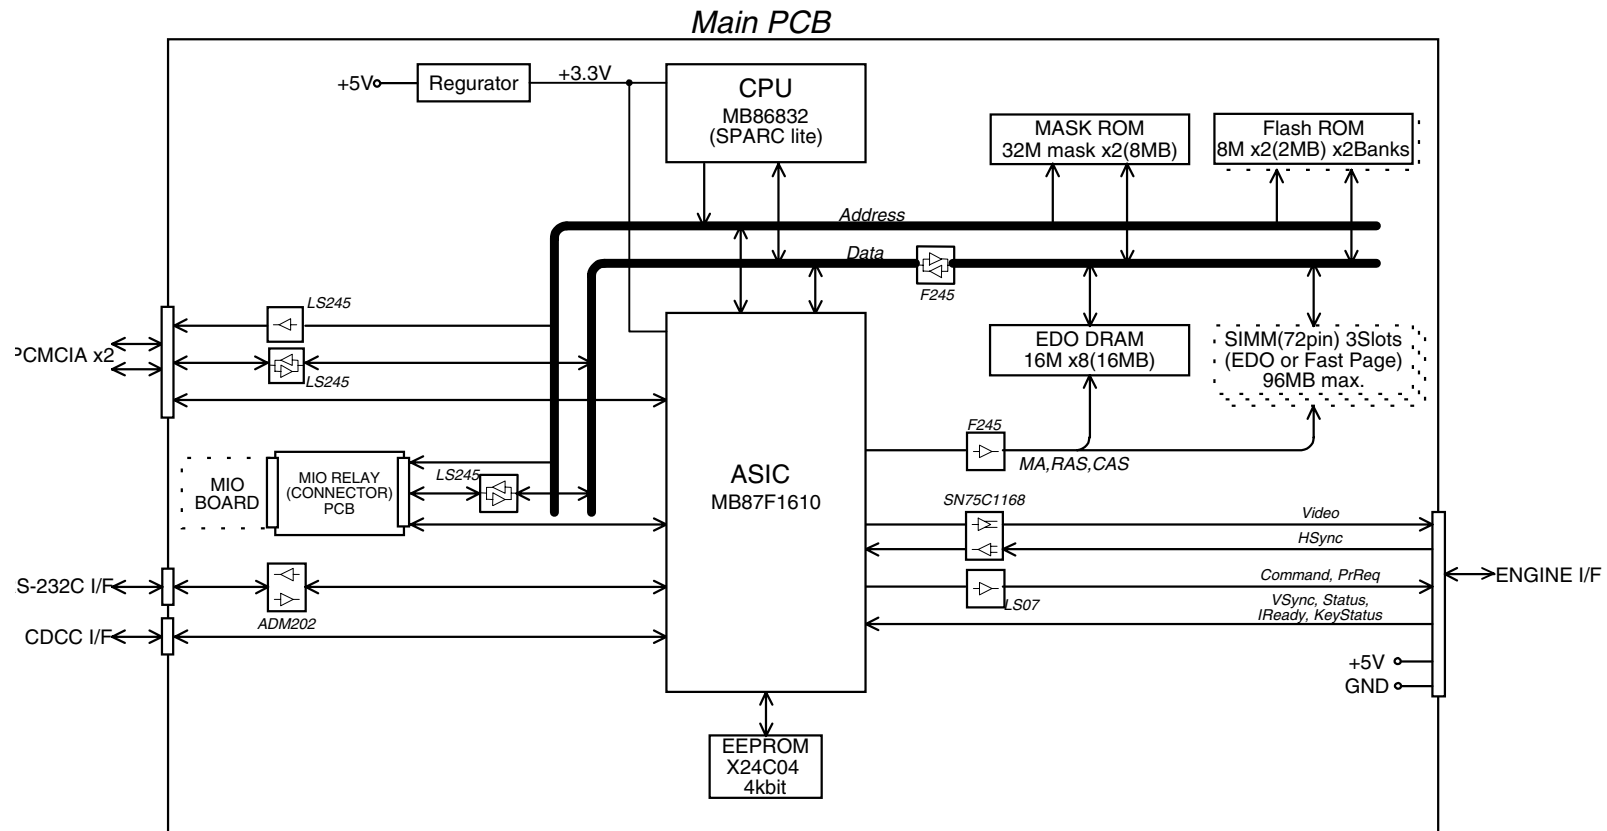


Fig.4-37

<Main PCB Block Diagram>

HL-2400Ce

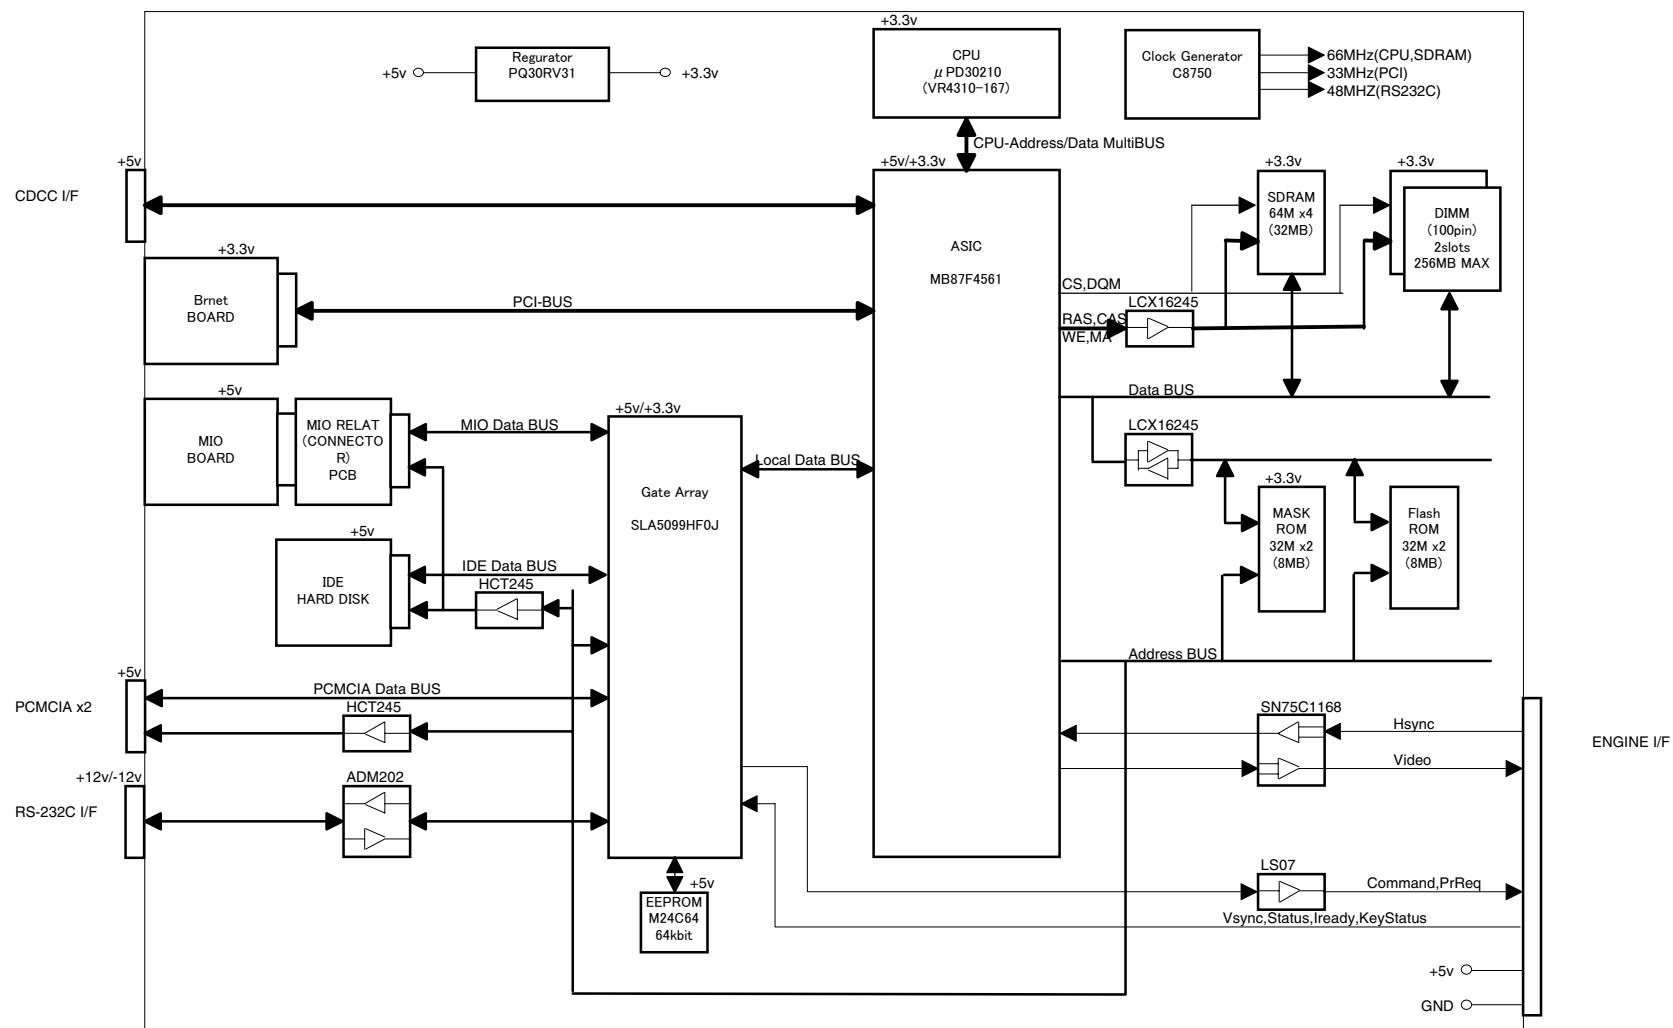


Fig.4-38

2.3.2 Circuit

(1) CPU block

HL-2400C:

- Model name: MB86832-100 (SPARC lite), RISC CPU manufactured by Fujitsu
- Clock speed: 33.1776MHz (external) / 99.5328MHz (internal)
- Cache memory: 8KB (Command cache) / 8KB (Data cache)
- Appearance: 176-pin QFP

HL-2400Ce:

- Model name: uPD30210-167 (VR4310-167), MIPS 64bit RISC CPU manufactured by NEC
- Clock speed: 66.7MHz (external) / 166.75MHz (internal)
- Cache memory: 16KB (Command cache) / 8KB (Data cache)
- Bus width: 32bit (external) / 64bit (internal)
Internal Floating Point Unit (FPU)
- Appearance: 120-pin QFP

(2) ASIC block

HL-2400C:

- Model name: MF87F1610 manufactured by Fujitsu
- Appearance: 240-pin QFP
- Functions:
 - * Controls CPU
 - * Controls memory
 - * Controls interrupts
 - * Timer
 - * External interfaces (Centronics, RS-232C, PCMCIA, MIO)
 - * Engine interface (Engine control, Video signal control)
 - * Supports Software

HL-2400Ce:

- Model name: MF87F4561 manufactured by Fujitsu
- Appearance: 420pin BGA
- Functions:
 - * Controls CPU
 - * Controls memory
 - * Controls interrupts
 - * Timer
 - * External interfaces (Centronics, BR-NET, IDE, PCMCIA, MIO)
 - * Engine interface (Video signal control)
 - * Supports Software

(3) Gate Array block (for HL-2400Ce only)

- Model name: SLA5099H FOJ manufactured by Epson
- Appearance: 160pin QFP
- Functions: Engine control
RS-232C

(4) ROM block

HL-2400C:

The ROM stores the CPU control program and font data. ROMs used are an 8Mbytes masked ROM, and a 2 Mbytes flash ROM which can be rewritten on the board.

<Masked ROM>

- Access time: less than 120nsec.
- Appearance: 42-pin DIP

<Flash ROM>

- Model name: MBM29F800T-120 manufactured by Fujitsu
- Access time: less than 120nsec.
- Appearance: 48-pin TSOP

HL-2400Ce:

The ROM stores the CPU control program and font data. ROMs used are an 8Mbytes masked ROM, and an 8 Mbytes flash ROM which can be rewritten on the board.

<Masked ROM>

- Access time: less than 120nsec. (page access: less than 50nsec)
- Appearance: 44pin SOP

<Flash ROM>

- Model name: MBM29DL32BD-90 manufactured by Fujitsu
- Access time: less than 90nsec.
- Appearance: 48-pin TSOP

(5) DRAM block

HL-2400C:

DRAMs are used for the receiving buffer and the working area of the CPU. The DRAM block contains eight 16Mbit EDO RAM, thus having 16MB memory capacity in total.

- Model name: M5M41705CJ-6 manufactured Mitsubishi (or equivalent).
- Type: 16Mbit EDO DRAM (4x4, 164,304bit)
- Access time: less than 80nsec.
- Appearance: 26-pin SOJ

HL-2400Ce:

DRAMs are used for the receiving buffer and the working area of the CPU. The DRAM block contains eight 64Mbit SDRAM, thus having 32MB memory capacity in total.

- Model name: HM5264805FTI manufactured by Hitachi (or equivalent).
- Type: 64Mbit SDRAM
- Access time: CL2 PC66 or higher
- Appearance: 54pin TSOP

(6) SIMM block (for HL-2400C only)

SIMM (Single-Inline-Memory-Module) allows memory extension by up to 96MB.

3 SIMM sockets are available.

The following type of SIMM can be installed into each slot.

- Appearance: 72-pin
- Memory type: Fast page or EDO (automatic selection)
- Access time: less than 80nsec.
- Parity: either Parity or Non-parity can be used
- Memory capacity: 1MB, 2MB, 4MB, 8MB, 16MB, 32MB

<Recommended SIMM type>

- * 1MB: HITACHI HB56D25632B-6A, -7A, -8A
MITSUBISHI MH25632BJ-7, -8
- * 2MB: HITACHI HB56D51232B-6A, -7A, -8A
MITSUBISHI MH51232BJ-7, 8
- * 4MB: HITACHI HB56A132BV-7A, -7AL, -7B, -7BL, -8AL, -8B, -8BL
MITSUBISHI MH1M32ADJ-7, -8
- * 8MB: HITACHI HB56A232BT-7A, -7AL, -7B, -7BL
MITSUBISHI MH1M32ADJ-7, -8
- * 16MB: TOSHIBA THM324000BSG-60, -70, -80
- * 32MB: TOSHIBA THM328020BSG-60, -70, -80

Any combination of SIMM size can be installed into any slot in any order.

Note:

Fast page type and EDO type can be used together although it is not recommended.

(7) DIMM block (for HL-2400Ce only)

DIMM (Dual-inline-Memory-Module) allows memory extension by up to 256MB.

2 DIMM sockets are available.

The following type of DIMM can be installed into each slot.

- Appearance: 100-pin
- Memory type: SDRAM
- Access time: PC66, CL2
- Parity: either Parity or Non-parity can be used
- Memory capacity: 16MB, 32MB, 64MB, 128MB

<Recommended DIMM type>

- * 16MB: Techworks PM-HP 16M
- * 32MB: Techworks PM-HP 32M
- * 64MB: Techworks PM-HP 64M
- * 128MB: Techworks PM-HP 128M

Any combination of DIMM size can be installed into any slot in any order but it is recommended that the larger DIMM is installed in Slot 1.

- (8) External interface block
- Centronics Interface
 - RS-232C Interface
 - PCMCIA Interface
 - MIO Interface
 - IDE Interface (for HL-2400Ce only)
- (9) Engine interface block
- The engine interface consists of the following signals;

<IREADY>

The signal indicating the engine is ready

<PRREQ>

Signal requesting printing from the controller

<KEY_STATUS>

Signal indicating that a key switch status on the control panel has changed.

<VSYNC>

Vertical synchronization signal for printing

<HSYNC>

Horizontal synchronization signal for printing

<VIDEO>

Video data signal

<COMMAND>

Command signal sent from the controller to the engine

<STATUS>

Status signal sent from the engine to the controller

Fig.4-39 shows the timing of each signal after the power switch is turned on.

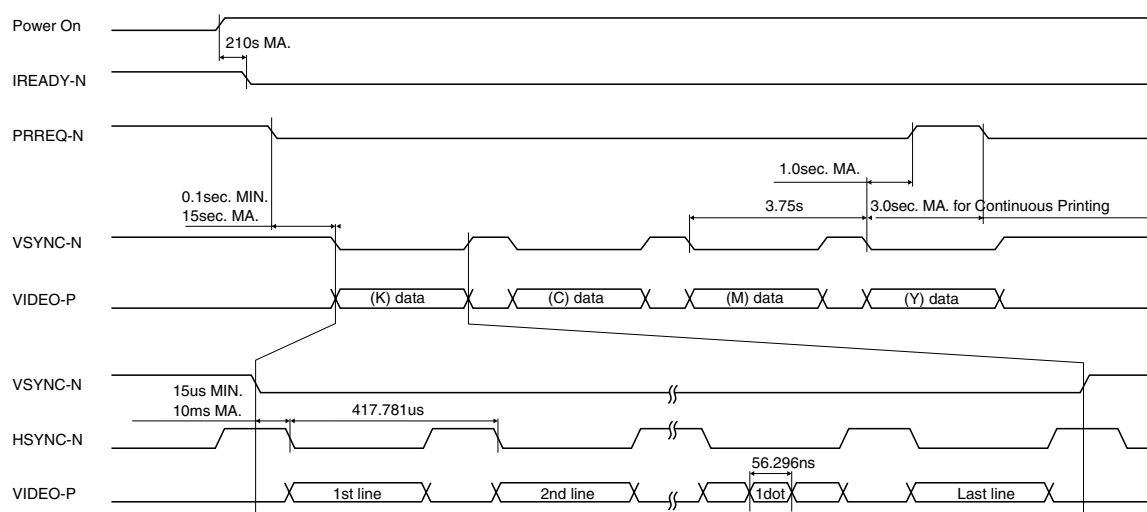


Fig.4-39

The COMMAND signal and STATUS signal are the signals that are used to transfer the data between the controller and the engine, which perform as a half-duplex asynchronous serial communication. Refer to Fig.4-40.

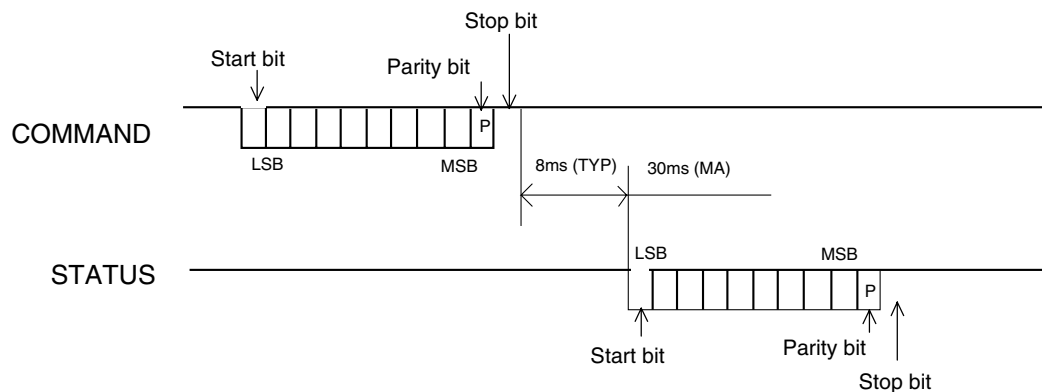



Fig.4-40

Note:


- Based on "Asynchronous Communication" method.
- Command/Status communication must keep the "Handshake Rule".
- Baud rate is 9600 bps.
- Frame format:
 - one (1) start bit,
 - eight (8) data bits
(Start bit side is LSB, Parity bit is MSB),
 - one (1) odd parity bit,
 - one (1) stop bit.
- The video controller has to send an "Initialize Command" to the engine controller after power on in order to establish communication.

The power for the Main PCB is supplied through the engine interface connector.


HL-2400C Main PCB Circuit Diagram (2/7)

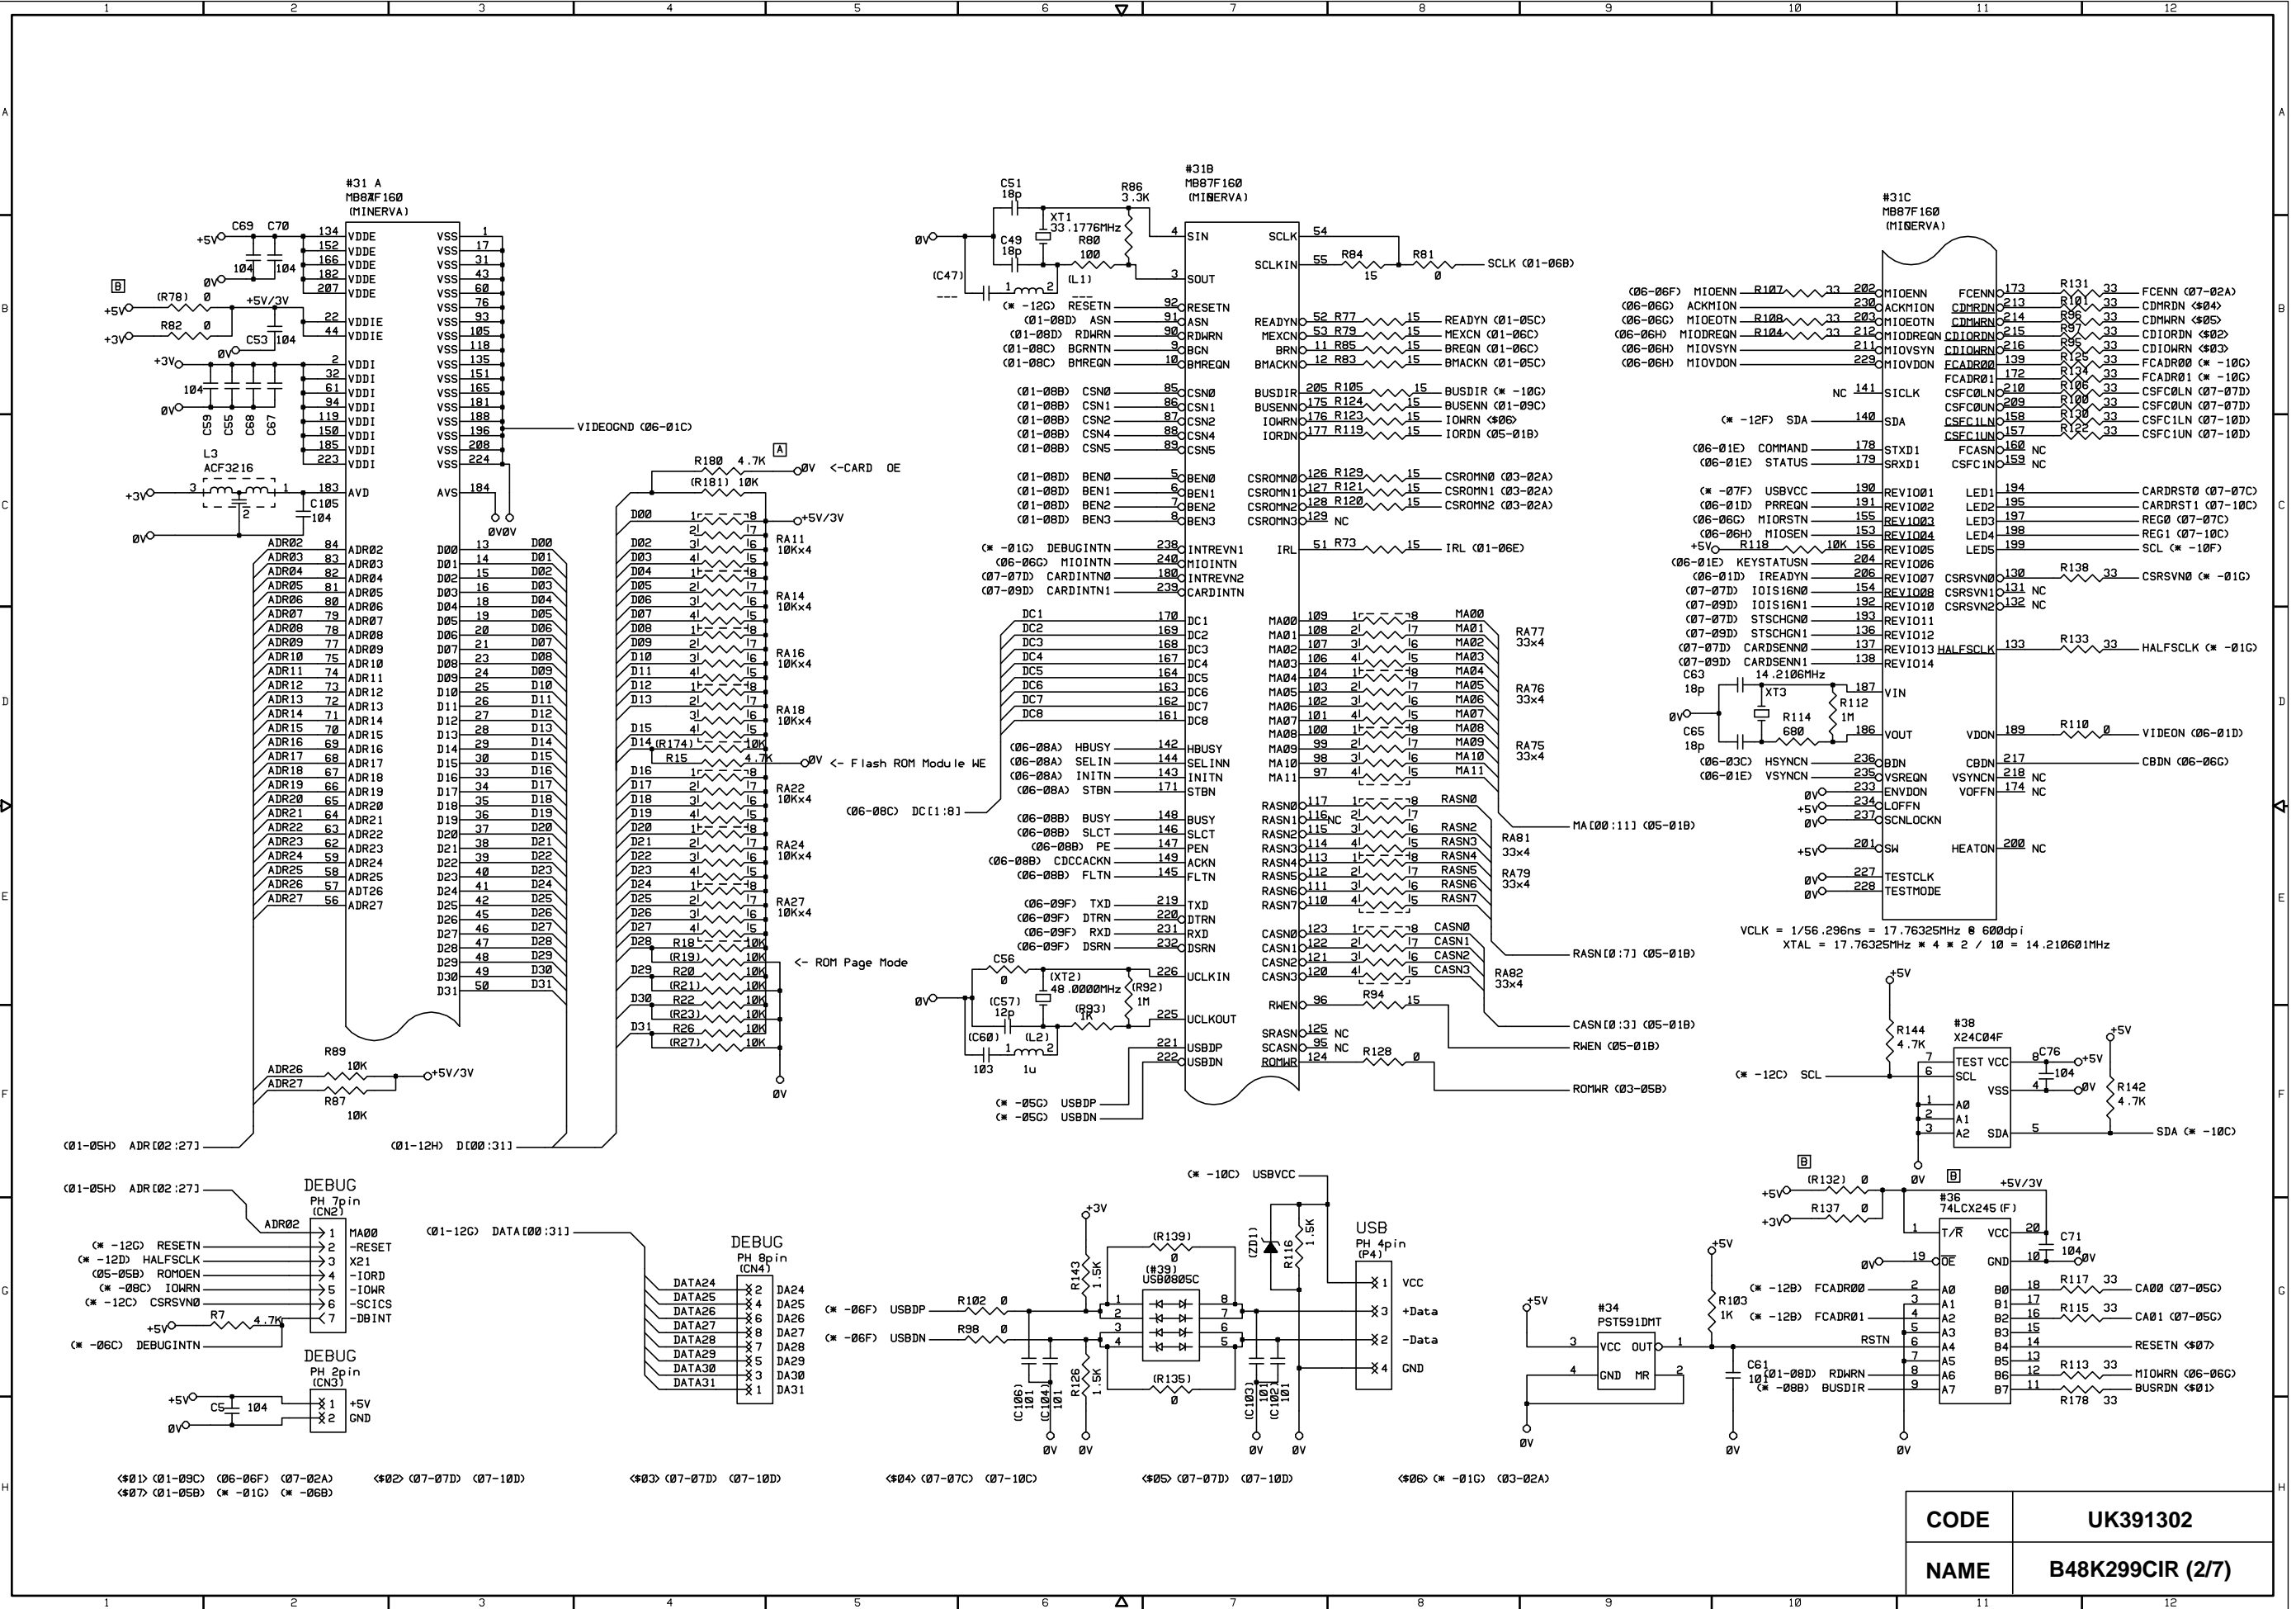


HL-2400C Main PCB Circuit Diagram (3/7)

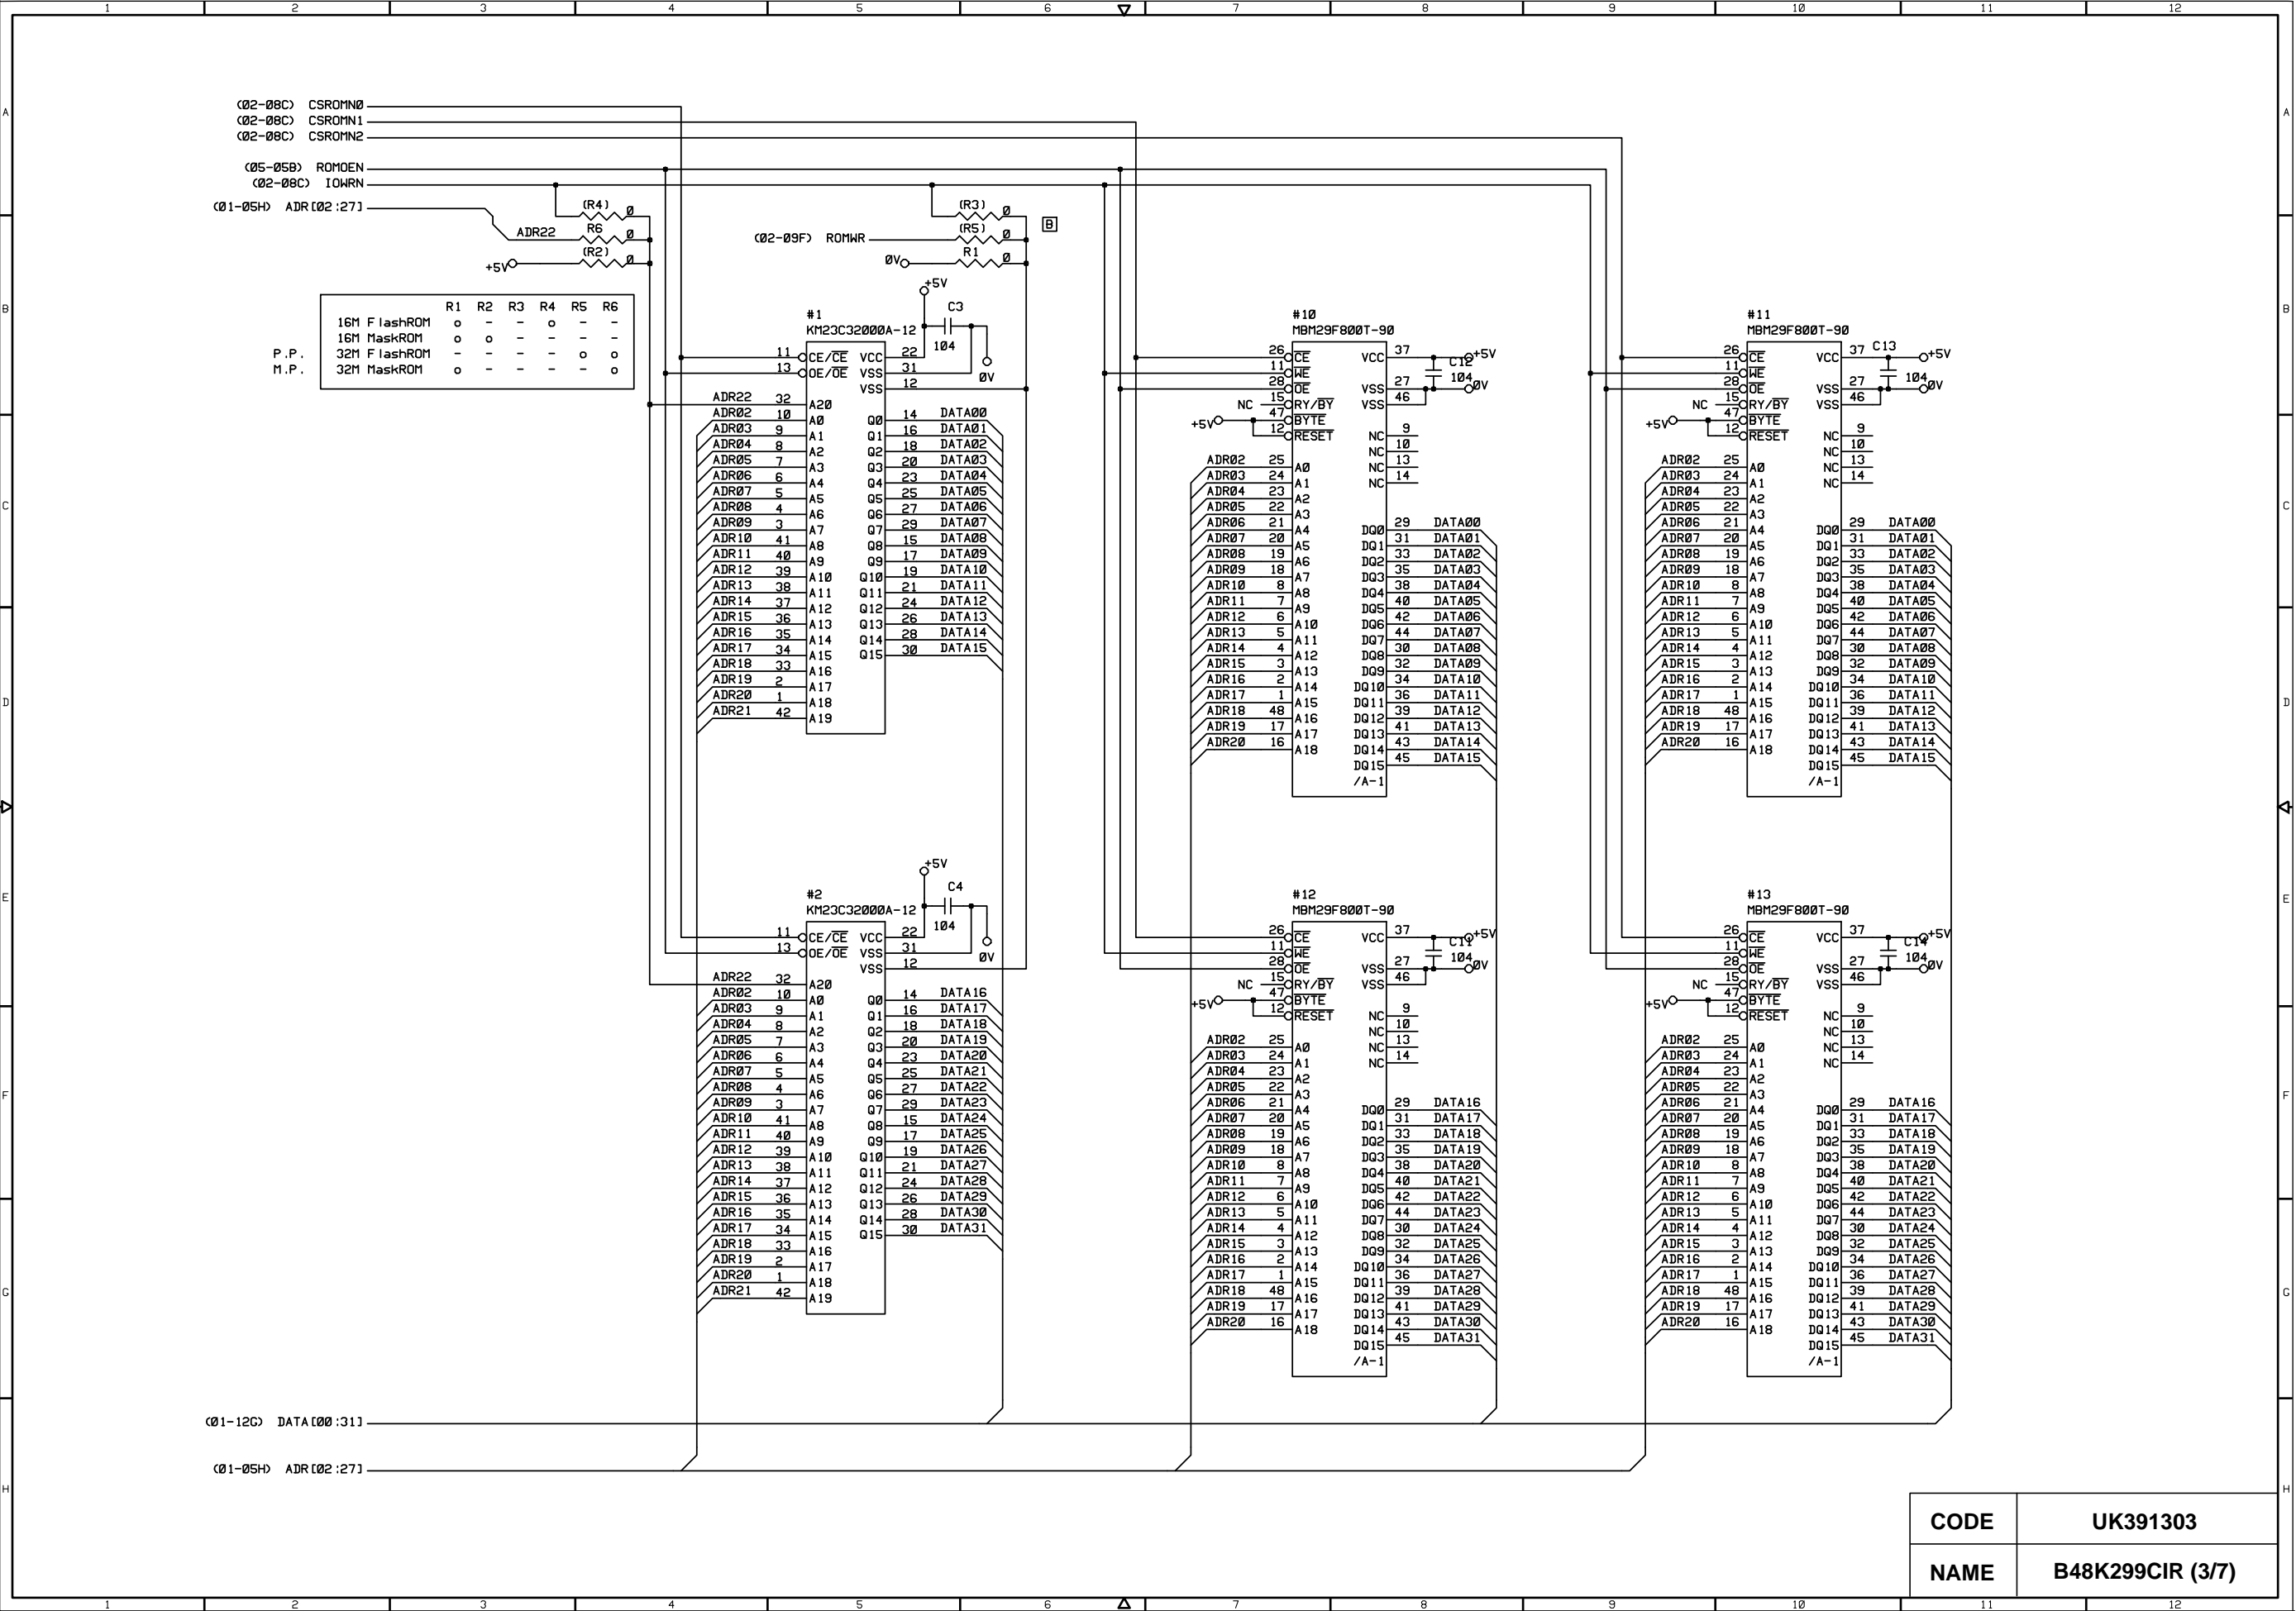

CODE	UK391303
NAME	B48K299CIR (3/7)

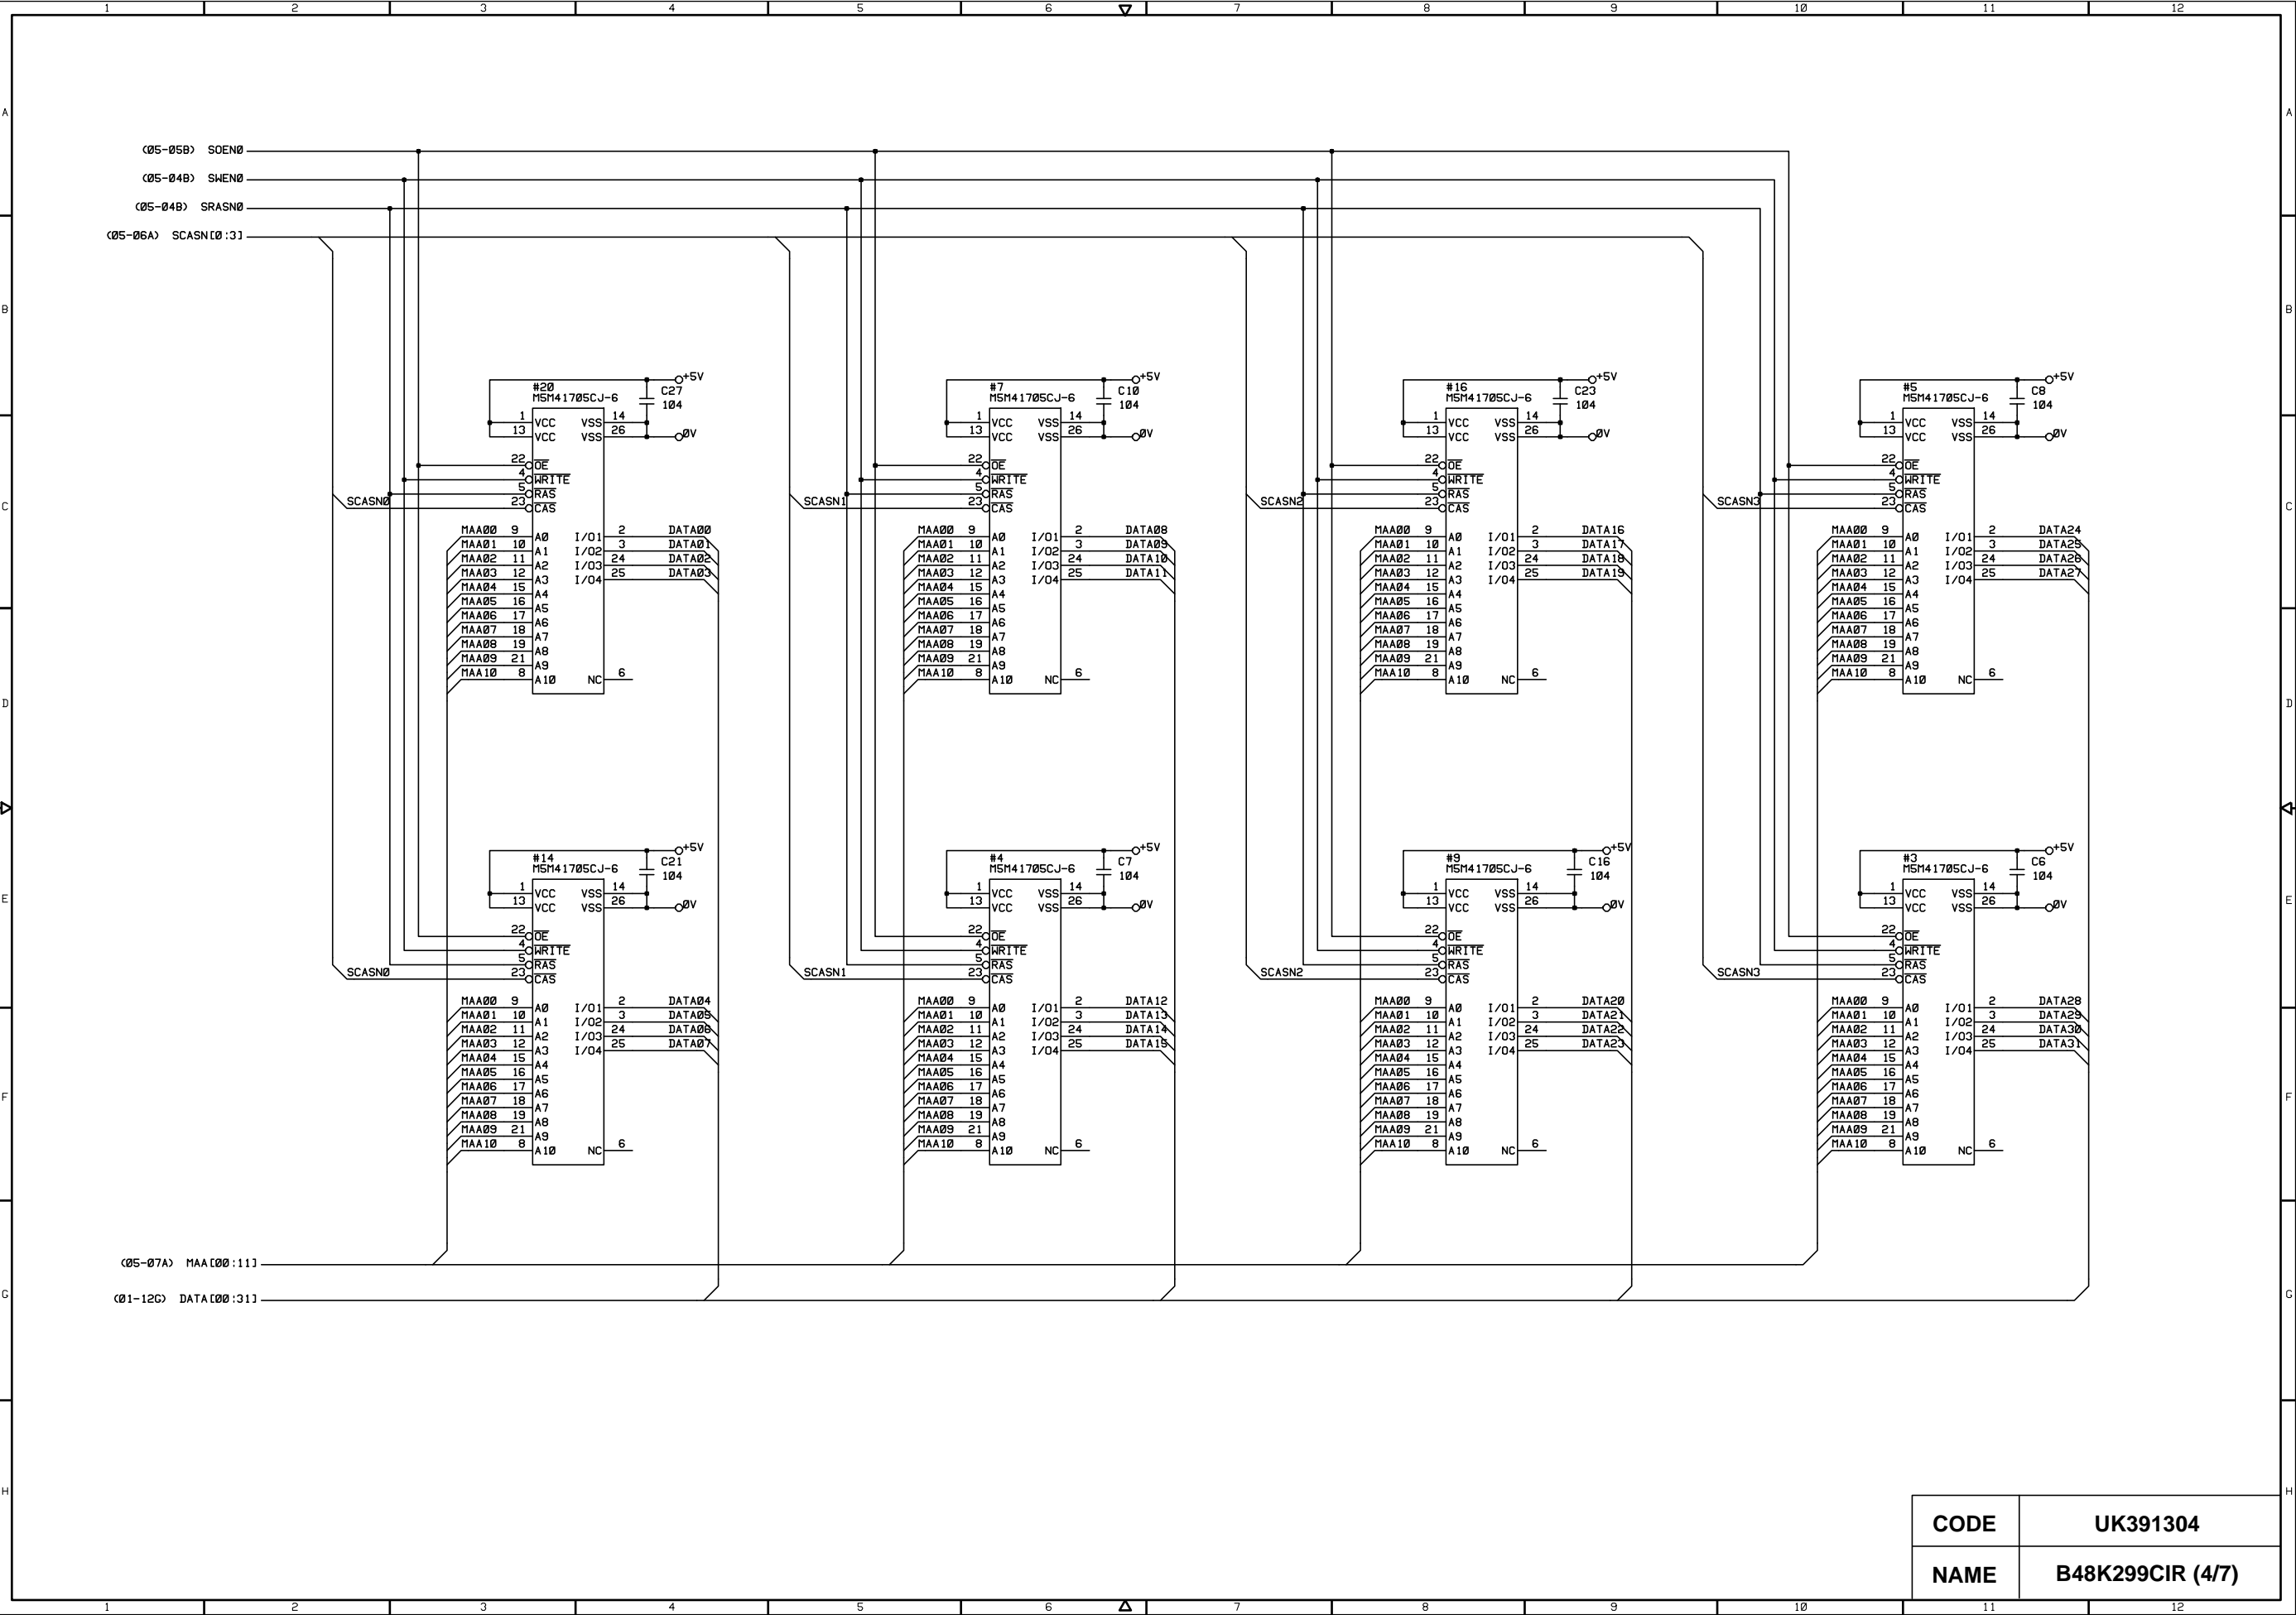

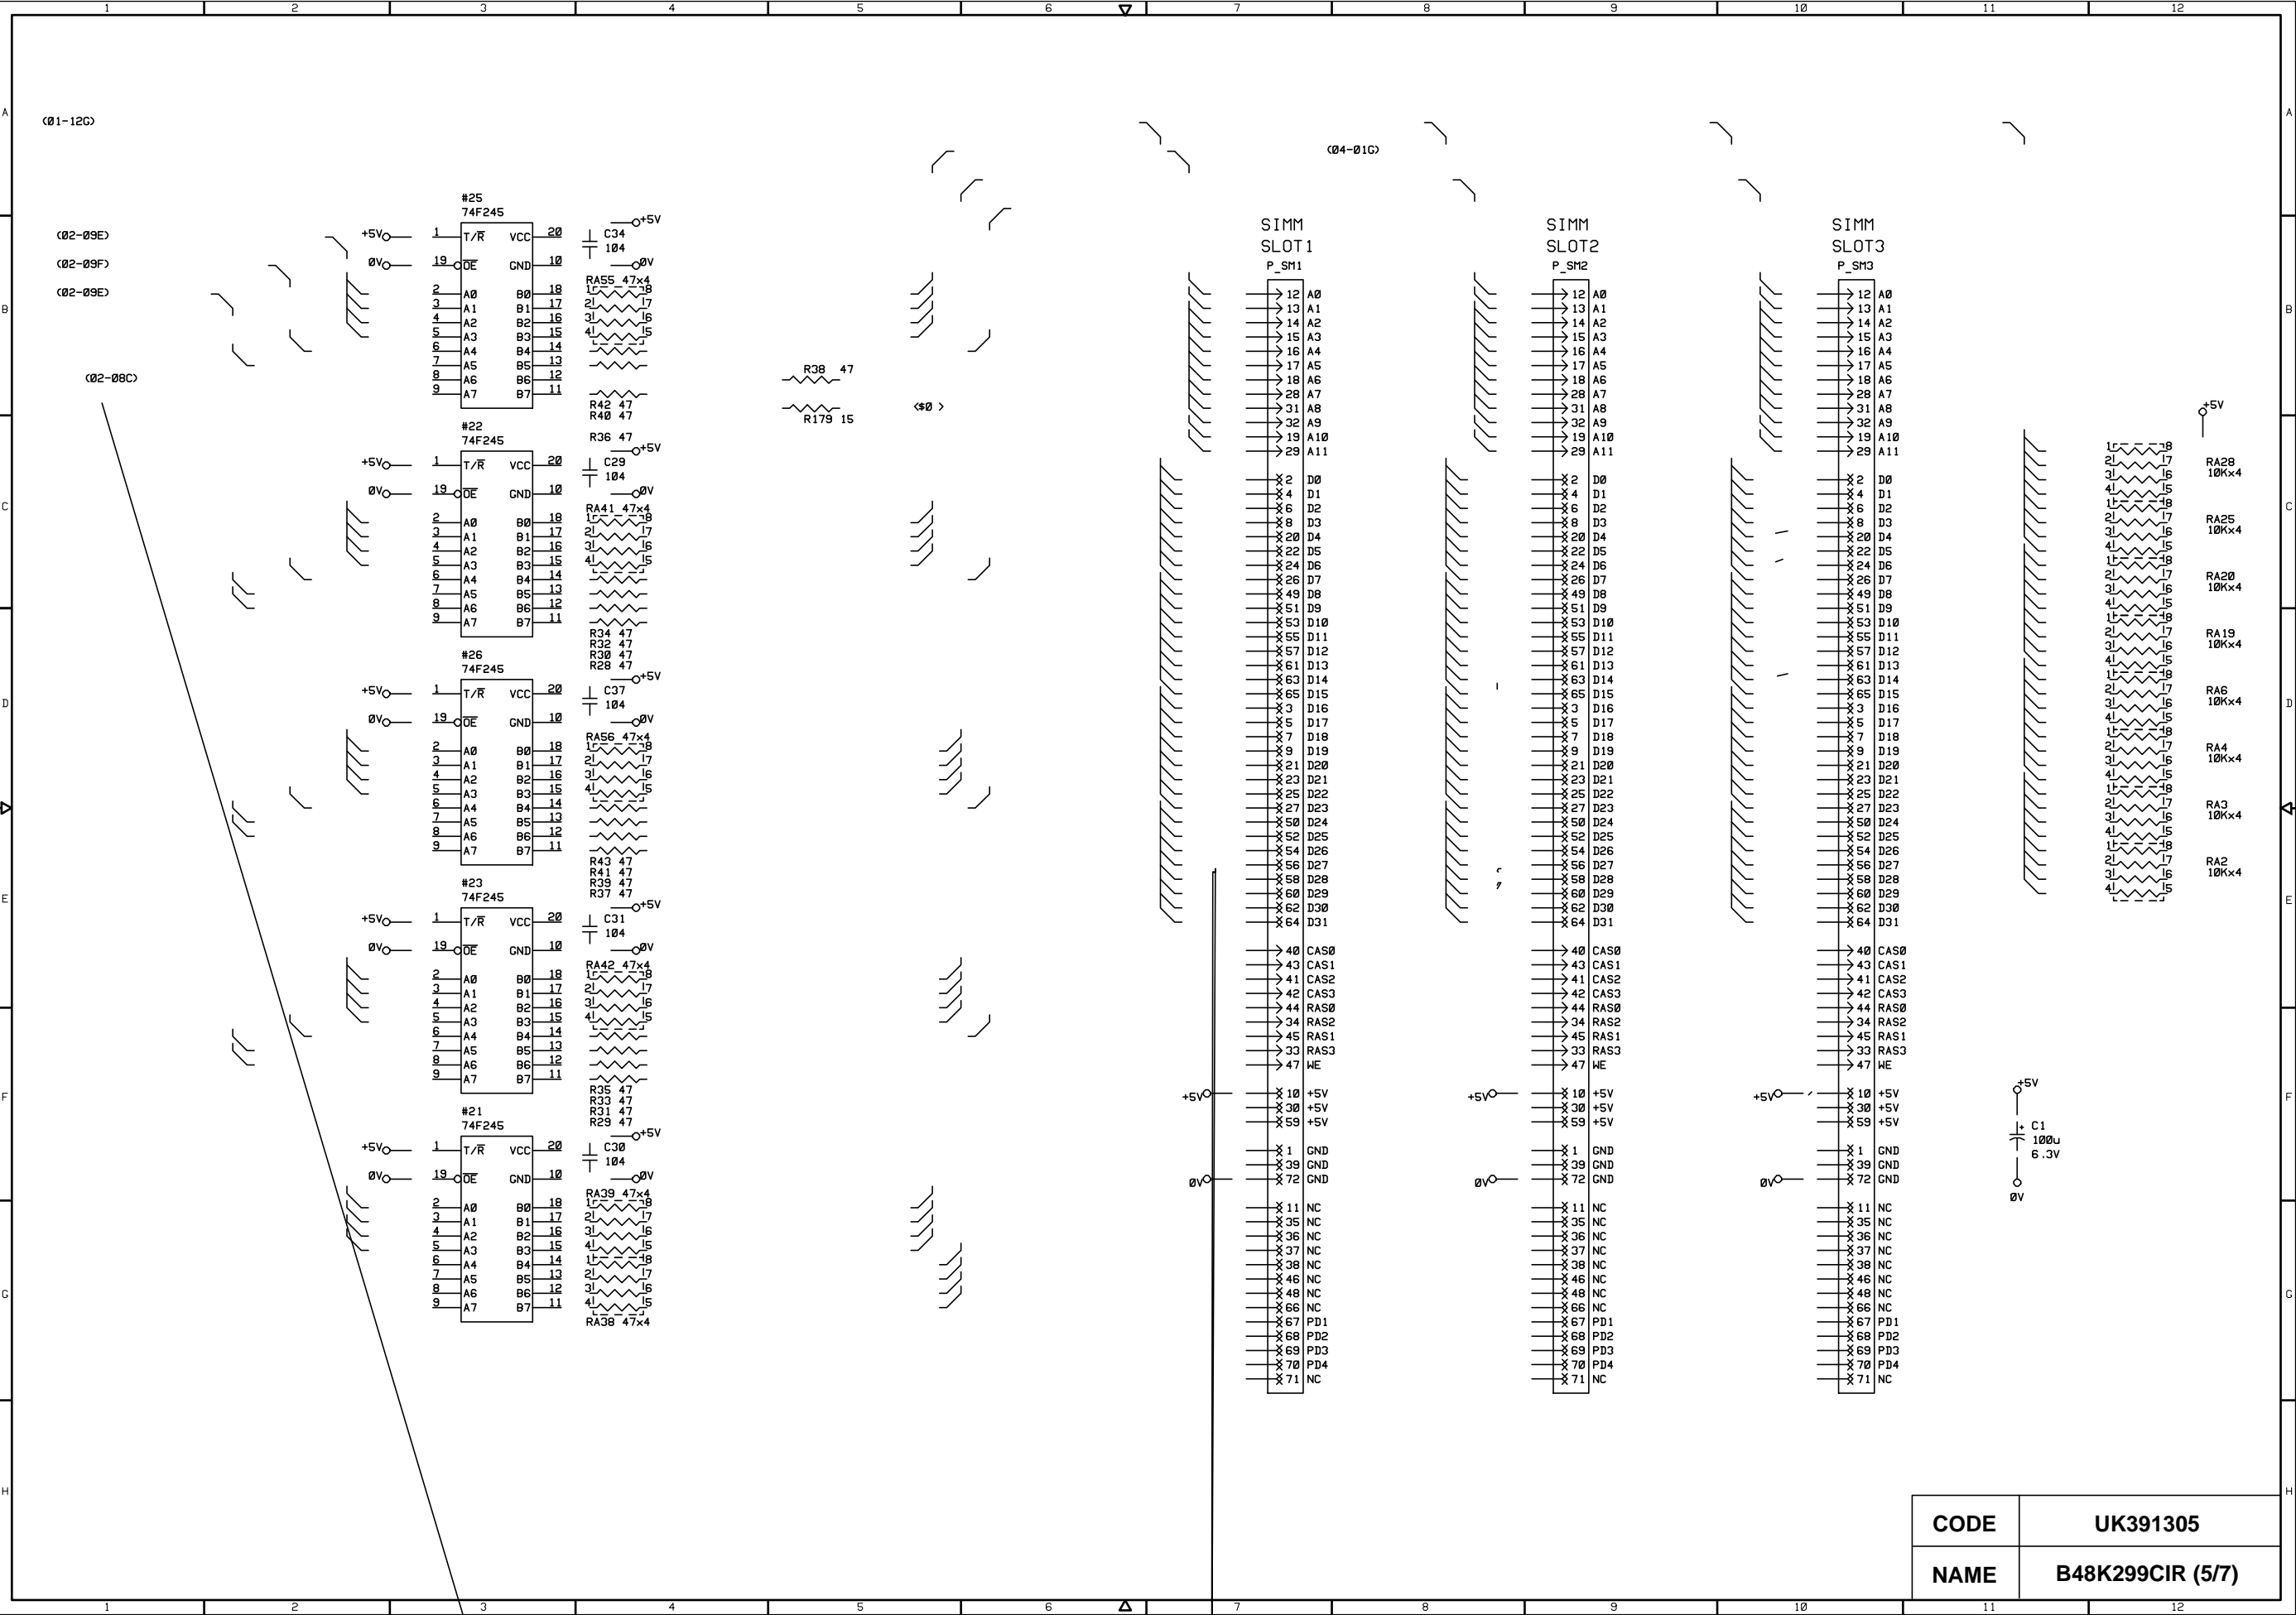

[illegible][illegible]

CODE UK391307

NAME B48K299CIR (7/7)

The schematic diagram illustrates the electrical connections between the CPU (VR4310) and the ASIC (MB87F4560). The CPU is represented by a large block on the left, and the ASIC is represented by a large block on the right. The connections are organized into several sections, each corresponding to a specific function or signal type.

Power and Ground Connections:

- VDD:** Connected to the CPU's VDD pins (1, 5, 8, 19, 23, 29, 32, 36, 40, 44, 49, 54, 60, 62, 68, 72, 76, 85, 90, 91, 96, 101, 107, 113, 119) and the ASIC's VDD pins (2, 6, 17, 20, 25, 30, 31, 35, 39, 43, 48, 53, 59, 61, 67, 71, 75, 79, 84, 89, 92, 97, 102, 108, 114, 120).
- GND:** Connected to the CPU's GND pins (3, 4, 7, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120) and the ASIC's GND pins (3, 4, 7, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120).


Signal Connections:

- AD31, AD30, AD29, AD28, AD27, AD26, AD25, AD24, AD23, AD22, AD21, AD20, AD19, AD18, AD17, AD16, AD15, AD14, AD13, AD12, AD11, AD10, AD09, AD08, AD07, AD06, AD05, AD04, AD03, AD02, AD01, AD00:** These pins are connected to the CPU's AD31, AD30, AD29, AD28, AD27, AD26, AD25, AD24, AD23, AD22, AD21, AD20, AD19, AD18, AD17, AD16, AD15, AD14, AD13, AD12, AD11, AD10, AD09, AD08, AD07, AD06, AD05, AD04, AD03, AD02, AD01, AD00 pins.
- CPURSTN, COLDSTN, VDDOK, INTN, EOKN, EVALDN, MODEIN, ADR25, ADR24, ADR23, ADR22, ADR21, ADR20, ADR19, ADR18, ADR17, ADR16, ADR15, ADR14, ADR13, ADR12, ADR11, ADR10, ADR09, ADR08, ADR07, ADR06, ADR05, ADR04, ADR03, ADR02:** These pins are connected to the CPU's CPURSTN, COLDSTN, VDDOK, INTN, EOKN, EVALDN, MODEIN, ADR25, ADR24, ADR23, ADR22, ADR21, ADR20, ADR19, ADR18, ADR17, ADR16, ADR15, ADR14, ADR13, ADR12, ADR11, ADR10, ADR09, ADR08, ADR07, ADR06, ADR05, ADR04, ADR03, ADR02 pins.
- DATA31, DATA30, DATA29, DATA28, DATA27, DATA26, DATA25, DATA24, DATA23, DATA22, DATA21, DATA20, DATA19, DATA18, DATA17, DATA16, DATA15, DATA14, DATA13, DATA12, DATA11, DATA10, DATA09, DATA08, DATA07, DATA06, DATA05, DATA04, DATA03, DATA02, DATA01, DATA00:** These pins are connected to the CPU's DATA31, DATA30, DATA29, DATA28, DATA27, DATA26, DATA25, DATA24, DATA23, DATA22, DATA21, DATA20, DATA19, DATA18, DATA17, DATA16, DATA15, DATA14, DATA13, DATA12, DATA11, DATA10, DATA09, DATA08, DATA07, DATA06, DATA05, DATA04, DATA03, DATA02, DATA01, DATA00 pins.
- IOCARSTN, TCLOCK, JTD0, CH4, R205, R206, R207, R208, R209, R210, R211, R212, R213, R214, R215, R216, R217, R218, R219, R220, R221, R222, R223, R224, R225, R226, R227, R228, R229, R230, R231, R232, R233, R234, R235, R236, R237, R238, R239, R240, R241, R242, R243, R244, R245, R246, R247, R248, R249, R250, R251, R252, R253, R254, R255, R256, R257, R258, R259, R260, R261, R262, R263, R264, R265, R266, R267, R268, R269, R270, R271, R272, R273, R274, R275, R276, R277, R278, R279, R280, R281, R282, R283, R284, R285, R286, R287, R288, R289, R290, R291, R292, R293, R294, R295, R296, R297, R298, R299, R300, R301, R302, R303, R304, R305, R306, R307, R308, R309, R310, R311, R312, R313, R314, R315, R316, R317, R318, R319, R320, R321, R322, R323, R324, R325, R326, R327, R328, R329, R330, R331, R332, R333, R334, R335, R336, R337, R338, R339, R340, R341, R342, R343, R344, R345, R346, R347, R348, R349, R350, R351, R352, R353, R354, R355, R356, R357, R358, R359, R360, R361, R362, R363, R364, R365, R366, R367, R368, R369, R370, R371, R372, R373, R374, R375, R376, R377, R378, R379, R380, R381, R382, R383, R384, R385, R386, R387, R388, R389, R390, R391, R392, R393, R394, R395, R396, R397, R398, R399, R400, R401, R402, R403, R404, R405, R406, R407, R408, R409, R410, R411, R412, R413, R414, R415, R416, R417, R418, R419, R420, R421, R422, R423, R424, R425, R426, R427, R428, R429, R430, R431, R432, R433, R434, R435, R436, R437, R438, R439, R440, R441, R442, R443, R444, R445, R446, R447, R448, R449, R450, R451, R452, R453, R454, R455, R456, R457, R458, R459, R460, R461, R462, R463, R464, R465, R466, R467, R468, R469, R470, R471, R472, R473, R474, R475, R476, R477, R478, R479, R480, R481, R482, R483, R484, R485, R486, R487, R488, R489, R490, R491, R492, R493, R494, R495, R496, R497, R498, R499, R500, R501, R502, R503, R504, R505, R506, R507, R508, R509, R510, R511, R512, R513, R514, R515, R516, R517, R518, R519, R520, R521, R522, R523, R524, R525, R526, R527, R528, R529, R530, R531, R532, R533, R534, R535, R536, R537, R538, R539, R540, R541, R542, R543, R544, R545, R546, R547, R548, R549, R550, R551, R552, R553, R554, R555, R**

The schematic diagram illustrates the internal circuitry of the B512050CIR (2/9) component. It features a central core with various peripheral components and connections. Key elements include:

- Power Regulation:** A voltage regulator (U1) is shown at the top left, converting a 5V input to a 3.3V output. It includes a feedback network with resistors R118, R119, and R120, and a compensation capacitor C5. A diode D1 is connected to the output.
- Timing and Clocking:** A crystal oscillator (XT1) is connected to the core. Various timing capacitors (C1, C2, C3, C4, C5, C6, C7, C8, C9, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C29, C30, C31, C32, C33, C34, C35, C36, C37, C38, C39, C40, C41, C42, C43, C44, C45, C46, C47, C48, C49, C50, C51, C52, C53, C54, C55, C56, C57, C58, C59, C60, C61, C62, C63, C64, C65, C66, C67, C68, C69, C70, C71, C72, C73, C74, C75, C76, C77, C78, C79, C80, C81, C82, C83, C84, C85, C86, C87, C88, C89, C90, C91, C92, C93, C94, C95, C96, C97, C98, C99, C100, C101, C102, C103, C104, C105, C106, C107, C108, C109, C110, C111, C112, C113, C114, C115, C116, C117, C118, C119, C120, C121, C122, C123, C124, C125, C126, C127, C128, C129, C130, C131, C132, C133, C134, C135, C136, C137, C138, C139, C140, C141, C142, C143, C144, C145, C146, C147, C148, C149, C150, C151, C152, C153, C154, C155, C156, C157, C158, C159, C160, C161, C162, C163, C164, C165, C166, C167, C168, C169, C170, C171, C172, C173, C174, C175, C176, C177, C178, C179, C180, C181, C182, C183, C184, C185, C186, C187, C188, C189, C190, C191, C192, C193, C194, C195, C196, C197, C198, C199, C200, C201, C202, C203, C204, C205, C206, C207, C208, C209, C210, C211, C212, C213, C214, C215, C216, C217, C218, C219, C220, C221, C222, C223, C224, C225, C226, C227, C228, C229, C230, C231, C232, C233, C234, C235, C236, C237, C238, C239, C240, C241, C242, C243, C244, C245, C246, C247, C248, C249, C250, C251, C252, C253, C254, C255, C256, C257, C258, C259, C260, C261, C262, C263, C264, C265, C266, C267, C268, C269, C270, C271, C272, C273, C274, C275, C276, C277, C278, C279, C280, C281, C282, C283, C284, C285, C286, C287, C288, C289, C290, C291, C292, C293, C294, C295, C296, C297, C298, C299, C300, C301, C302, C303, C304, C305, C306, C307, C308, C309, C310, C311, C312, C313, C314, C315, C316, C317, C318, C319, C320, C321, C322, C323, C324, C325, C326, C327, C328, C329, C330, C331, C332, C333, C334, C335, C336, C337, C338, C339, C340, C341, C342, C343, C344, C345, C346, C347, C348, C349, C350, C351, C352, C353, C354, C355, C356, C357, C358, C359, C360, C361, C362, C363, C364, C365, C366, C367, C368, C369, C370, C371, C372, C373, C374, C375, C376, C377, C378, C379, C380, C381, C382, C383, C384, C385, C386, C387, C388, C389, C390, C391, C392, C393, C394, C395, C396, C397, C398, C399, C400, C401, C402, C403, C404, C405, C406, C407, C408, C409, C410, C411, C412, C413, C414, C415, C416, C417, C418, C419, C420, C421, C422, C423, C424, C425, C426, C427, C428, C429, C430, C431, C432, C433, C434, C435, C436, C437, C438, C439, C440, C441, C442, C443, C444, C445, C446, C447, C448, C449, C450, C451, C452, C453, C454, C455, C456, C457, C458, C459, C460, C461, C462, C463, C464, C465, C466, C467, C468, C469, C470, C471, C472, C473, C474, C475, C476, C477, C478, C479, C480, C481, C482, C483, C484, C485, C486, C487, C488, C489, C490, C491, C492, C493, C494, C495, C496, C497, C498, C499, C500, C501, C502, C503, C504, C505, C506, C507, C508, C509, C510, C511, C512, C513, C514, C515, C516, C517, C518, C519, C520, C521, C522, C523, C524, C525, C526, C527, C528, C529, C530, C531, C532, C533, C534, C535, C536, C537, C538, C539, C540, C541, C542, C543, C544, C545, C546, C547, C548, C549, C550, C551, C552, C553, C554, C555, C556, C557, C558, C559, C560, C561, C562, C563, C564, C565, C566, C567, C568, C569, C570, C571, C572, C573, C574, C575, C576, C577, C578, C579, C580, C581, C582, C583, C584, C585, C586, C587, C588, C589, C590, C591, C592, C593, C594, C595, C596, C597, C598, C599, C600, C601, C602, C603, C604, C605, C606, C607, C608, C609, C610, C611, C612, C613, C614, C615, C616, C617, C618, C619, C620, C621, C622, C623, C624, C625, C626, C627, C628, C629, C630, C631, C632, C633, C634, C635, C636, C637, C638, C639, C640, C641, C642, C643, C644, C645, C646, C647, C648, C649, C650, C651, C652, C653, C654, C655, C656, C657, C658, C659, C660, C661, C662, C663, C664, C665, C666, C667, C668, C669, C670, C671, C672, C673, C674, C675, C676, C677, C678, C679, C680, C681, C682, C683, C684, C685, C686, C687, C688, C689, C690, C691, C692, C693, C694, C695, C696, C697, C698, C699, C700, C701, C702, C703, C704, C705, C706, C707, C708, C709, C710, C711, C712, C713, C714, C715, C716, C717, C718, C719, C720, C721, C722, C723, C724, C725, C726, C727, C728, C729, C730, C731, C732, C733, C734, C735, C736, C737, C738, C739, C740, C741, C742, C743, C744, C745, C746, C747, C748, C749, C750, C751, C752, C753, C754, C755, C756, C757, C758, C759, C760, C761, C762, C763, C764, C765, C766, C767, C768, C769, C770, C771, C772, C773, C774, C775, C776, C777, C778, C779, C780, C781, C782, C783, C784, C785, C786, C787, C788, C789, C790, C791, C792, C793, C794, C795, C796, C797, C798, C799,

HL-2400Ce Main PCB Circuit Diagram (3/9)

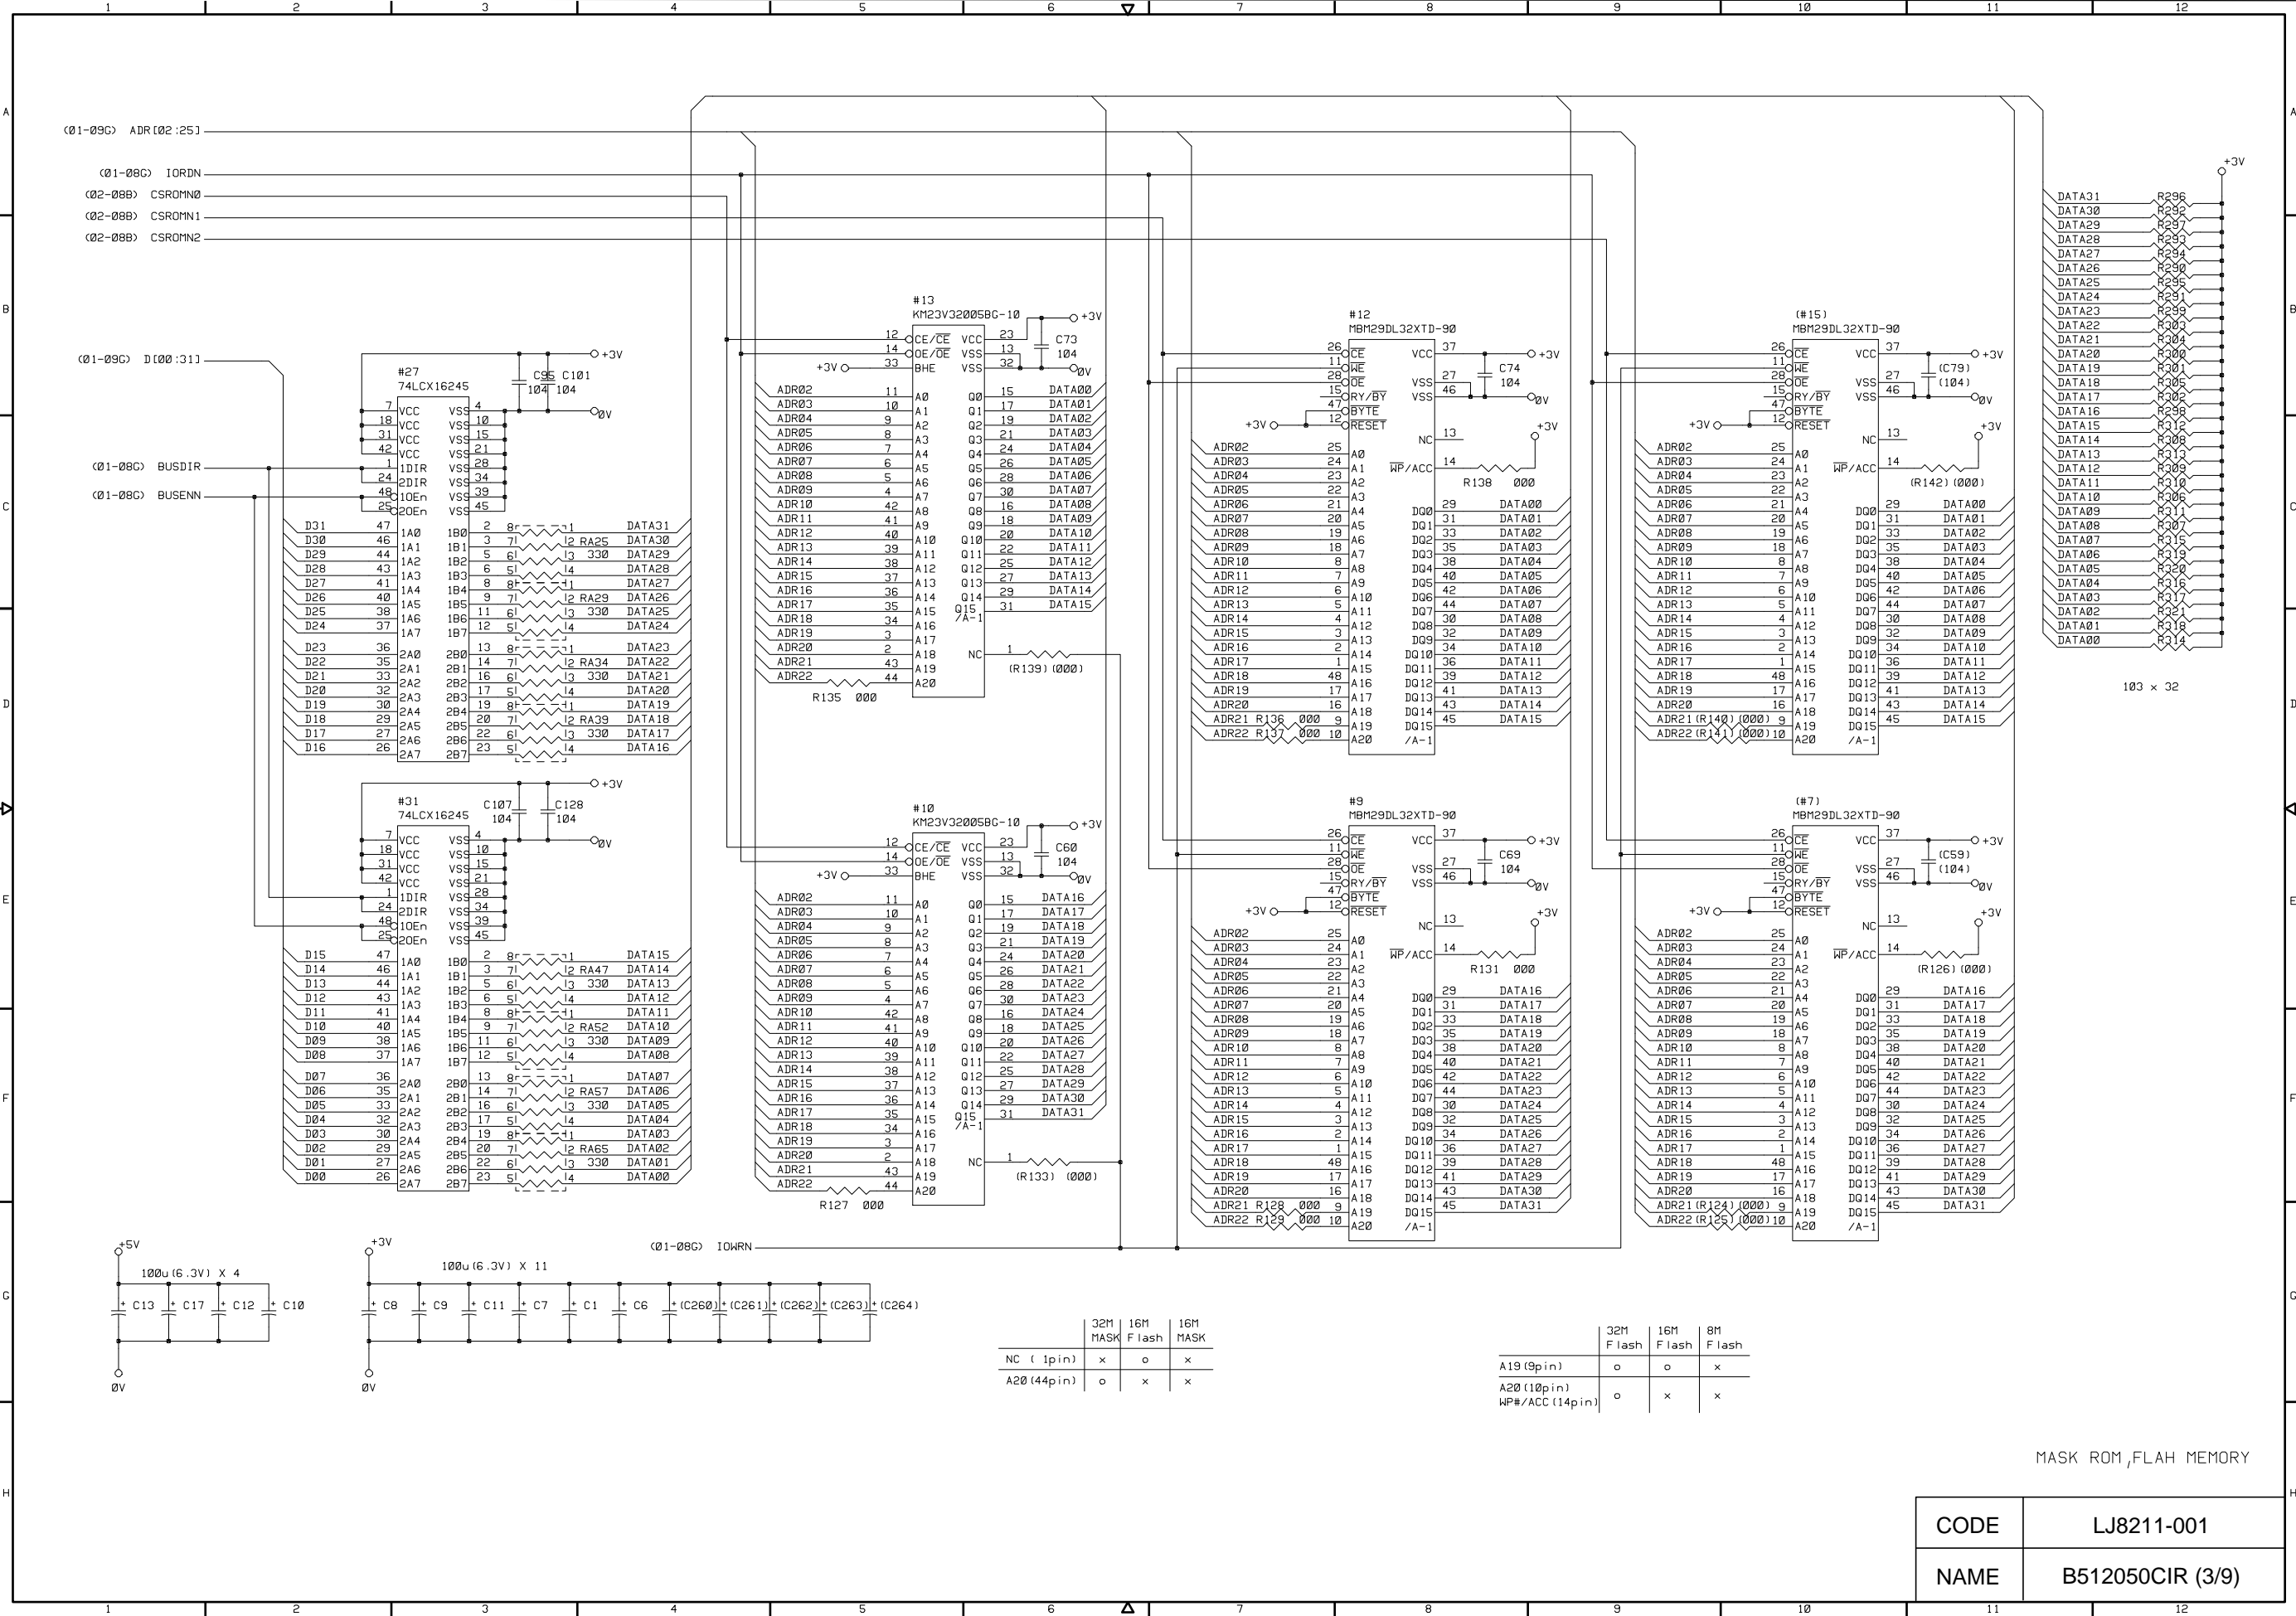


	32M MASK	16M Flash	16M MASK
NC (1pin)	x	o	x
A20 (44pin)	o	x	x


	32M Flash	16M Flash	8M Flash
A19 (9pin)	o	o	x
A20 (10pin)	o	x	x
WP#/ACC (14pin)			

MASK ROM,FLAH MEMORY

CODE	LJ8211-001
NAME	B512050CIR (3/9)

HL-2400Ce Main PCB Circuit Diagram (4/9)

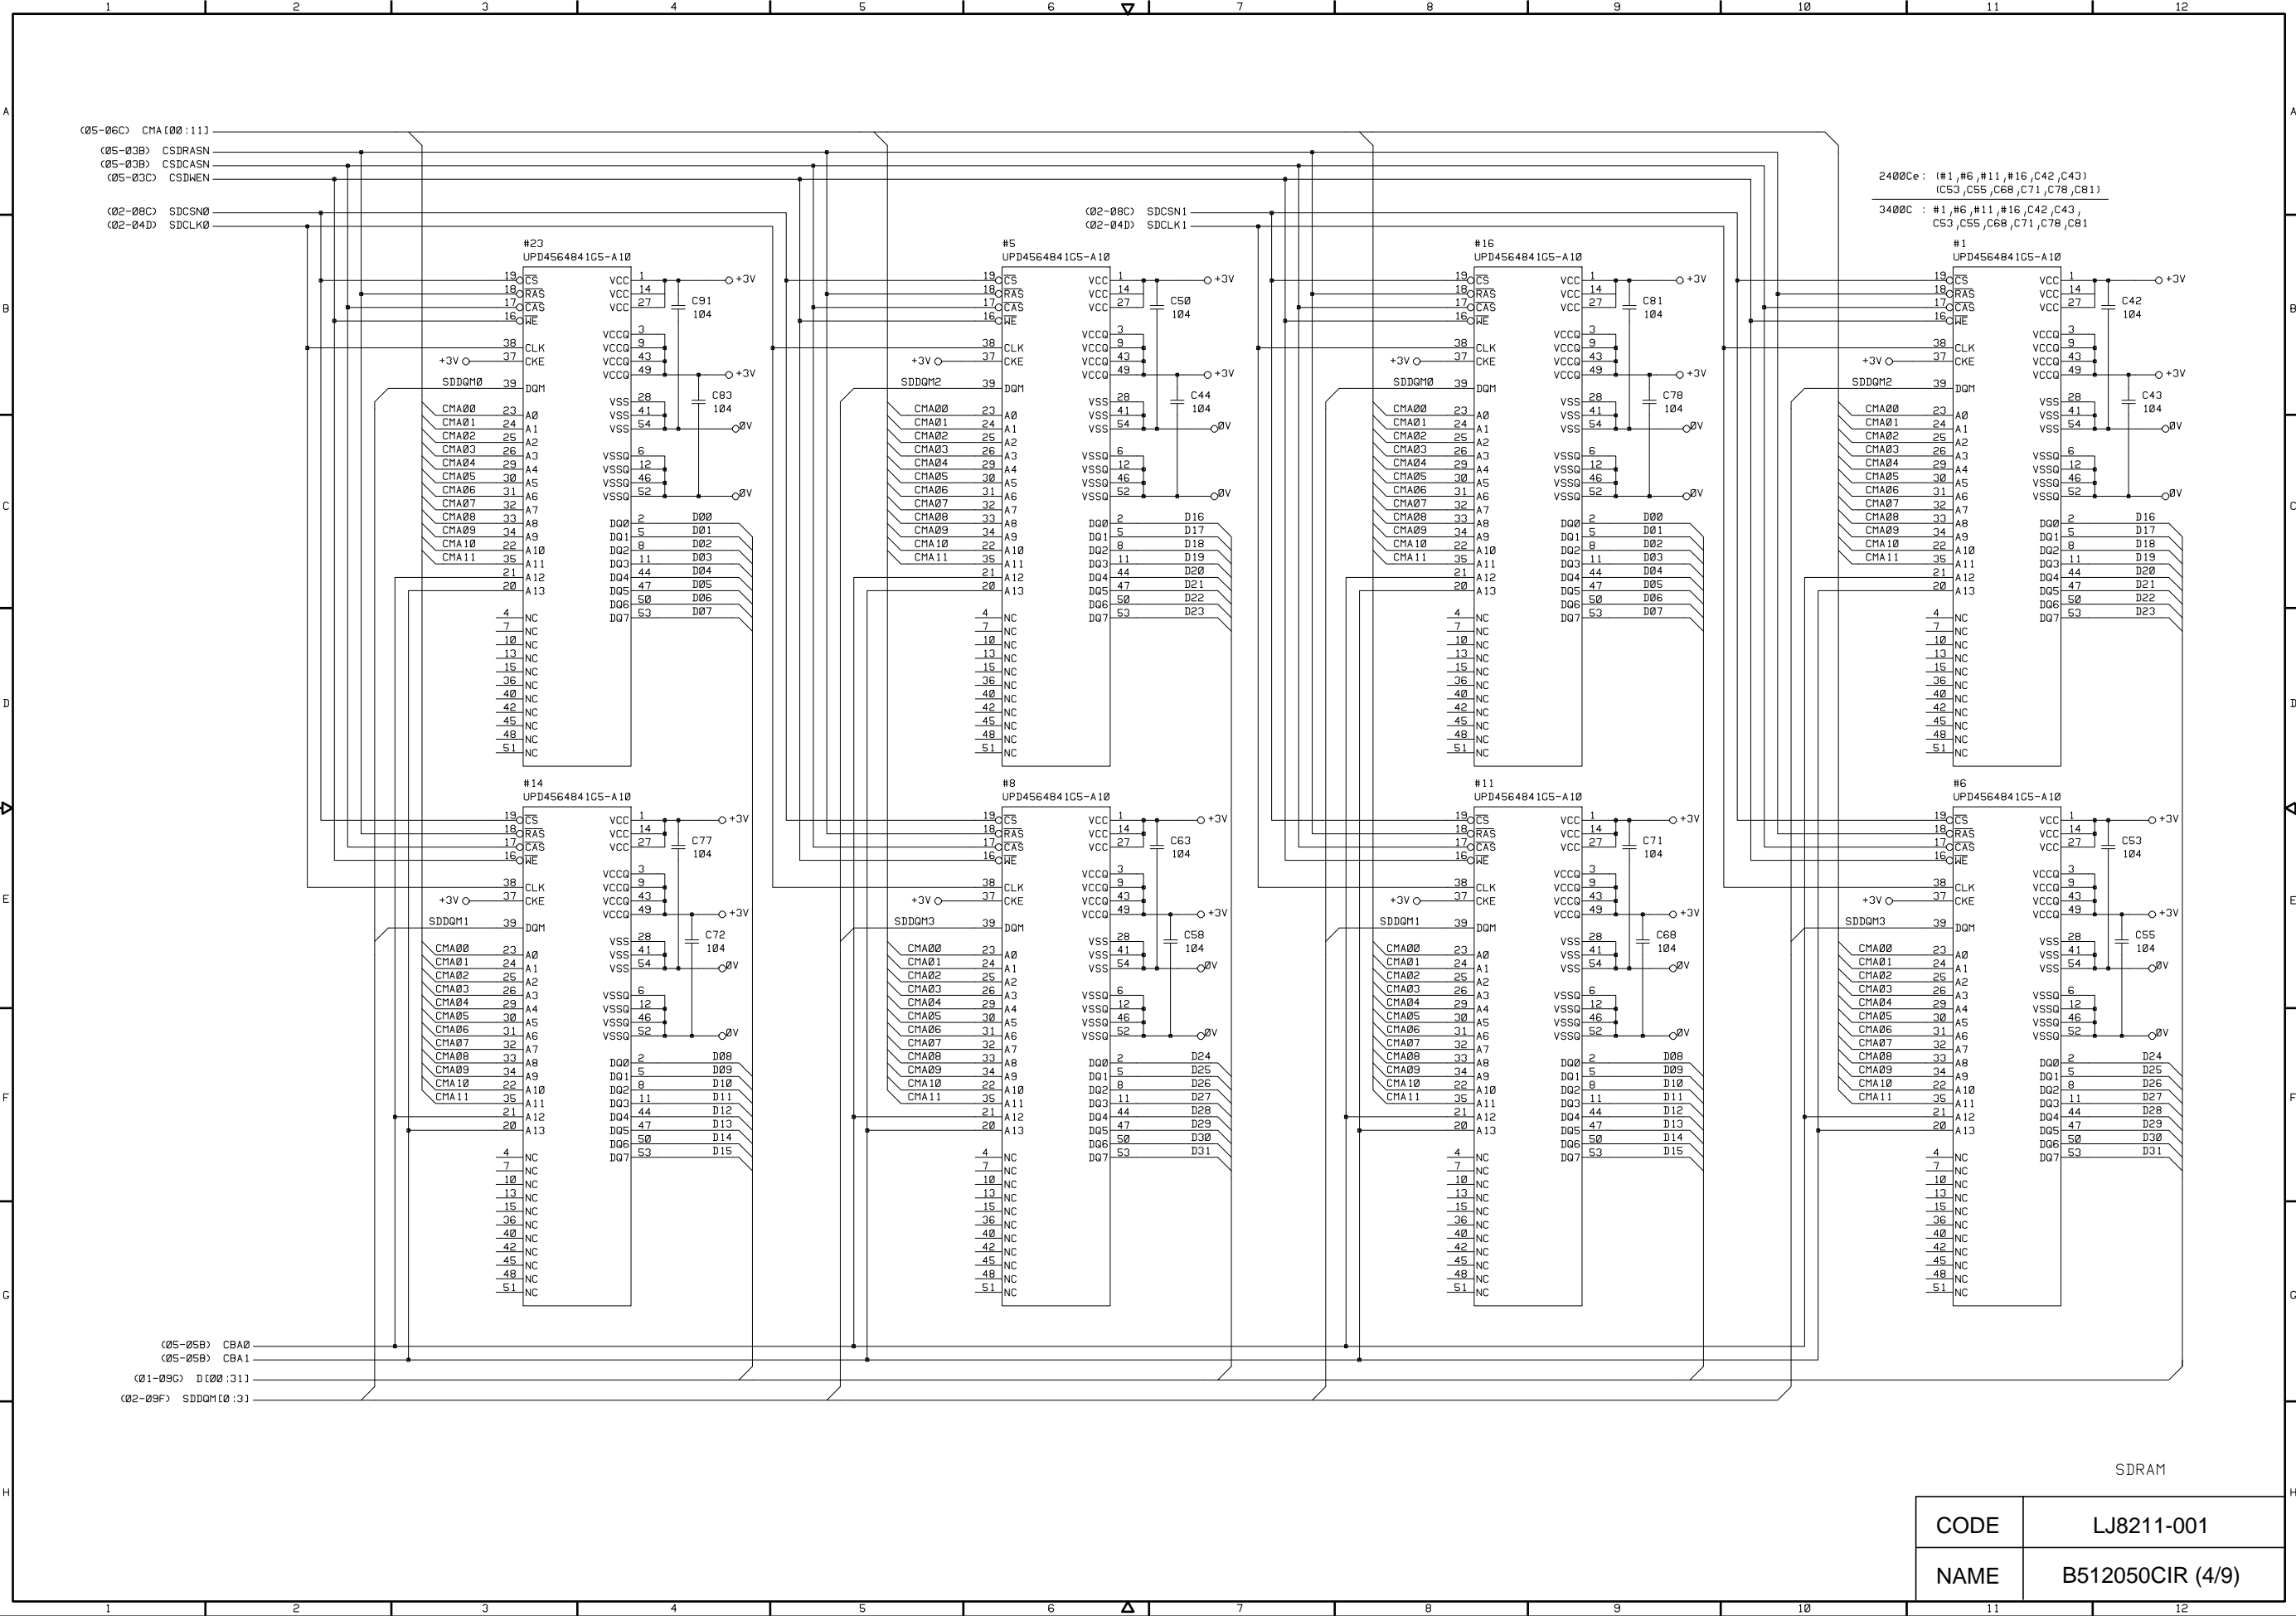


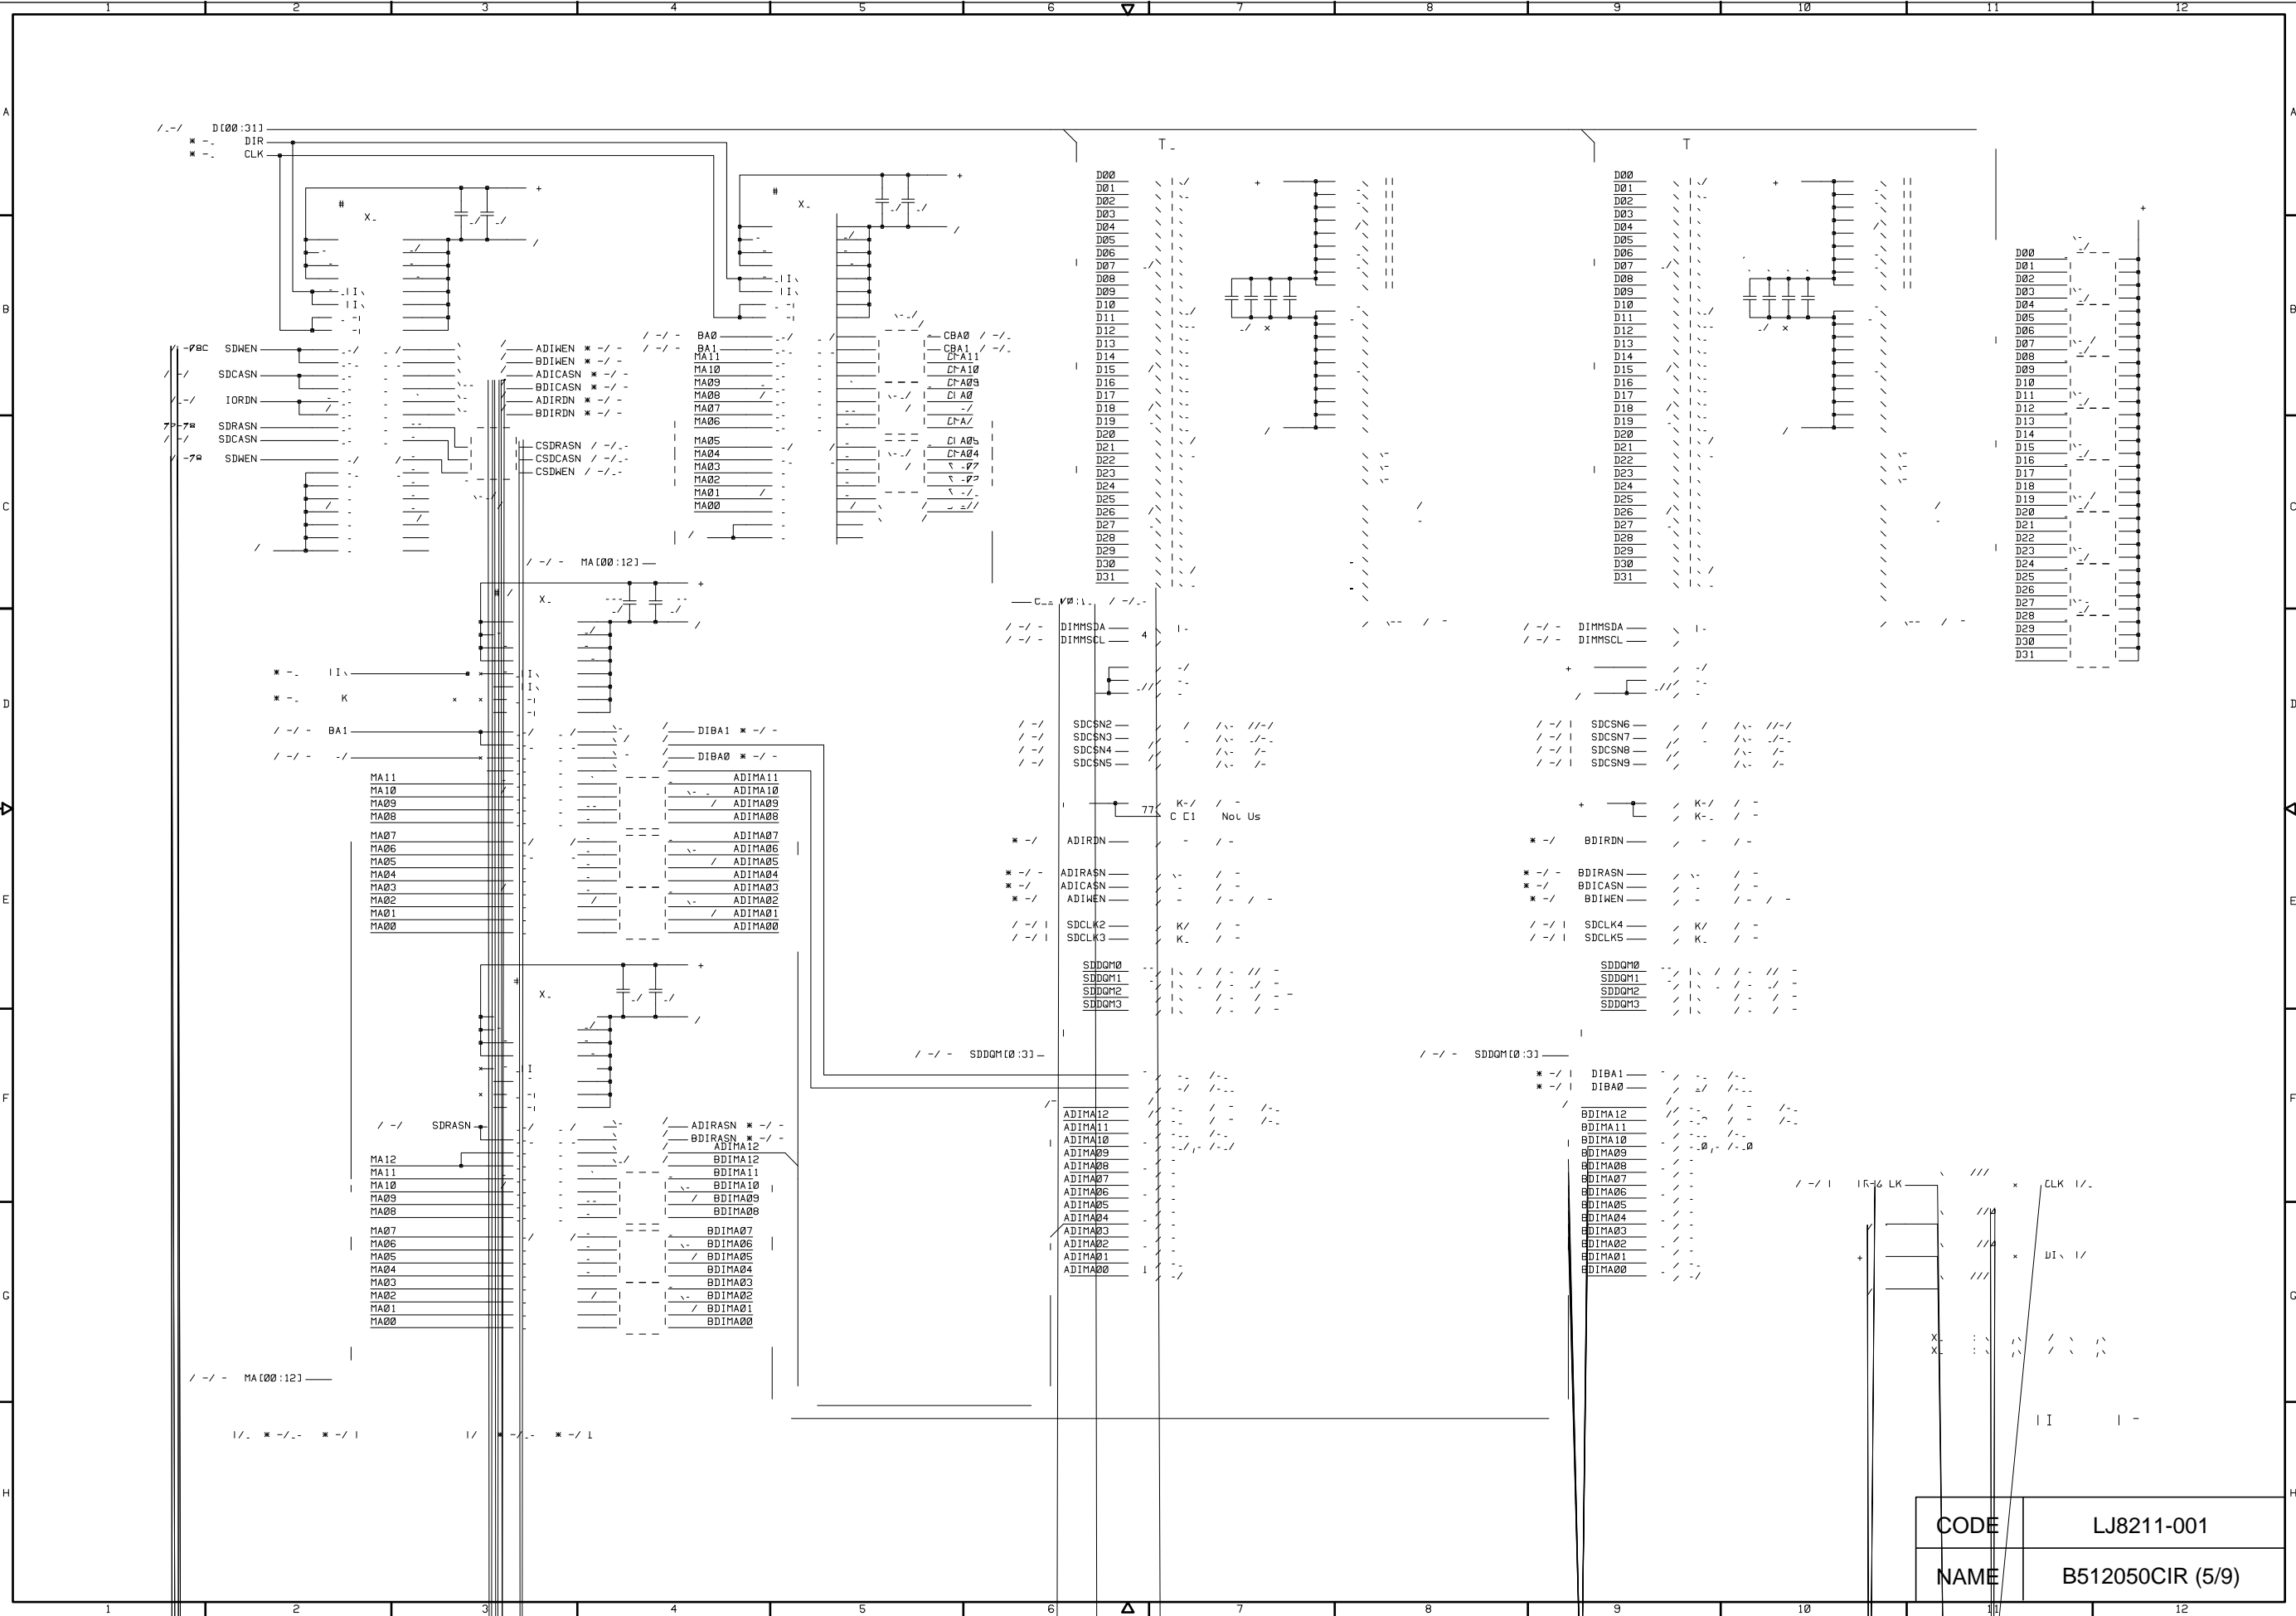

PCB layout diagram for the B512050CIR (6/9) board. The diagram shows the connection of various components including the P1 ENGINE connector, P2 MIO connector, P5 CDCC (IEEE1284B), P6 RS232C, and P4 USB. It includes numerous integrated circuits like SN75C1168NS, 74LS07, 74HCT245, and ADM202JRN, along with resistors, capacitors, and connectors. The layout is organized into sections labeled A through H and 1 through 12.

CODE	LJ8211-001
NAME	B512050CIR (6/9)

HL-2400Ce Main PCB Circuit Diagram (7/9)

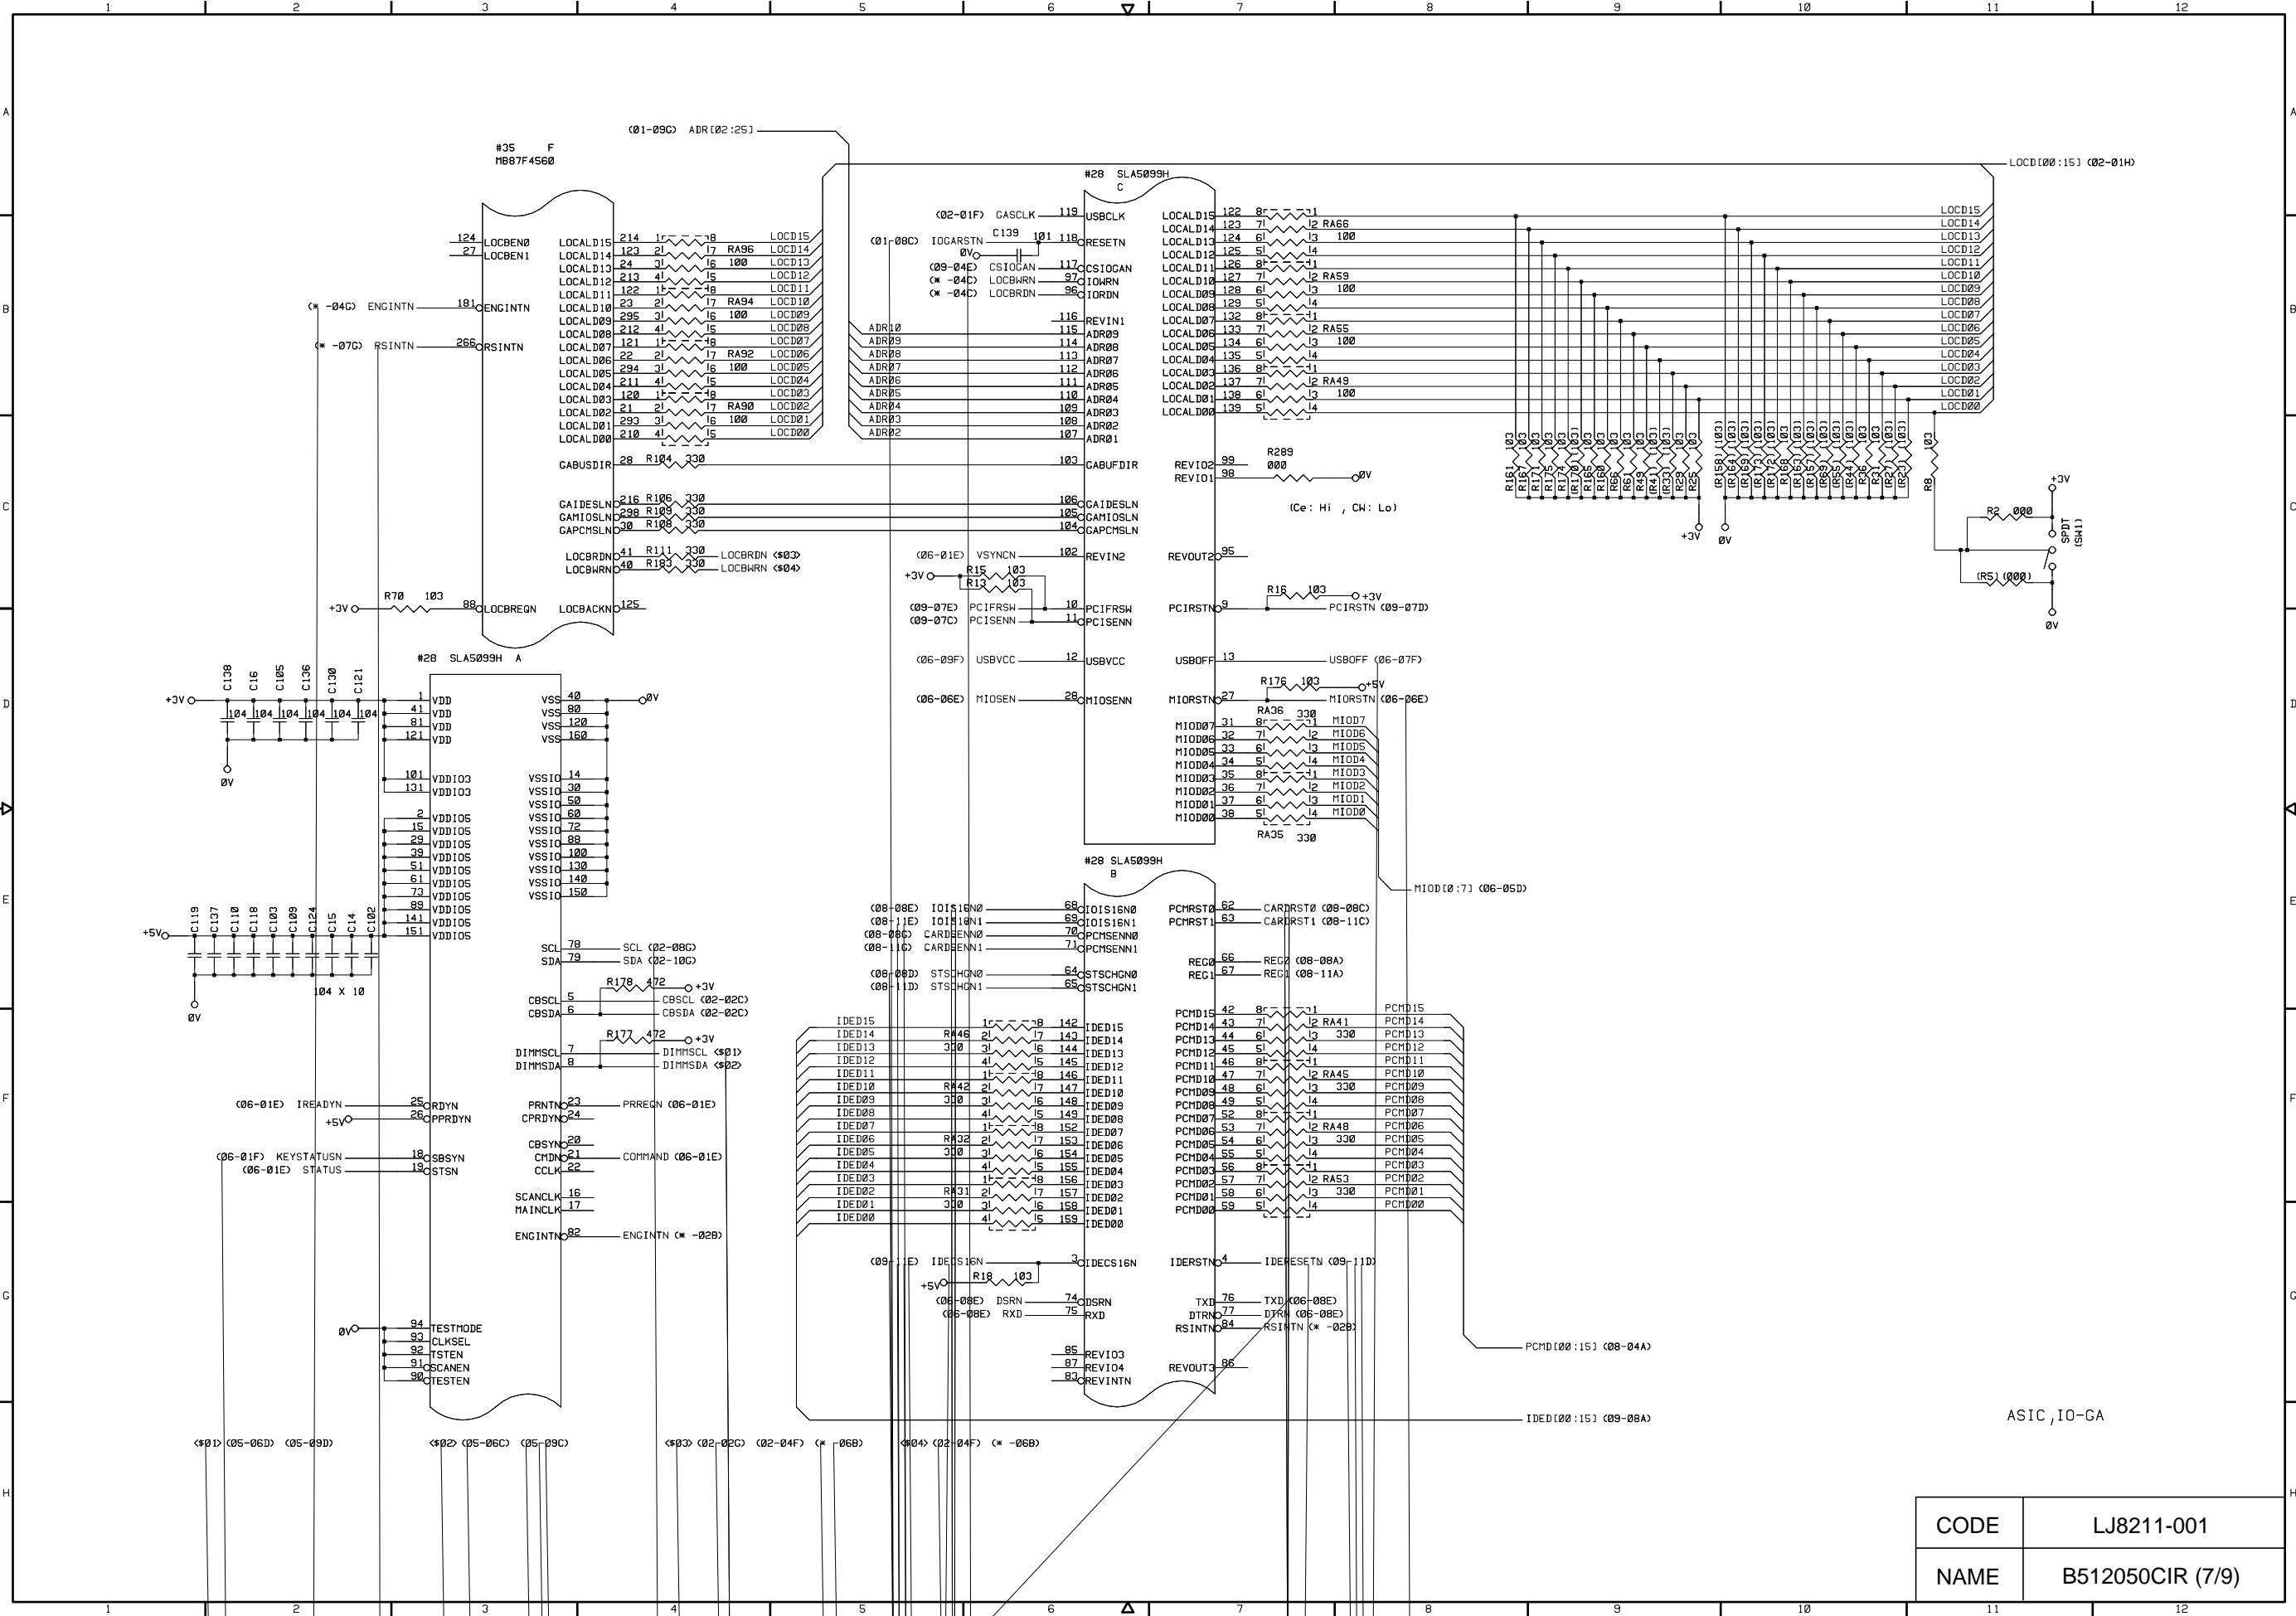


The diagram illustrates the PCB layout for the B512050CIR (8/9) component. It shows the internal connections of the component, including the microcontroller (U1), memory chips (U2, U3, U4, U5, U6, U7, U8, U9, U10, U11, U12, U13, U14, U15, U16, U17, U18, U19, U20, U21, U22, U23, U24, U25, U26, U27, U28, U29, U30, U31, U32, U33, U34, U35, U36, U37, U38, U39, U40, U41, U42, U43, U44, U45, U46, U47, U48, U49, U50, U51, U52, U53, U54, U55, U56, U57, U58, U59, U60, U61, U62, U63, U64, U65, U66, U67, U68, U69, U70, U71, U72, U73, U74, U75, U76, U77, U78, U79, U80, U81, U82, U83, U84, U85, U86, U87, U88, U89, U90, U91, U92, U93, U94, U95, U96, U97, U98, U99, U100), and the PC card (P3). The diagram includes various components like resistors (R1, R2, R3, R4, R5, R6, R7, R8, R9, R10, R11, R12, R13, R14, R15, R16, R17, R18, R19, R20, R21, R22, R23, R24, R25, R26, R27, R28, R29, R30, R31, R32, R33, R34, R35, R36, R37, R38, R39, R40, R41, R42, R43, R44, R45, R46, R47, R48, R49, R50, R51, R52, R53, R54, R55, R56, R57, R58, R59, R60, R61, R62, R63, R64, R65, R66, R67, R68, R69, R70, R71, R72, R73, R74, R75, R76, R77, R78, R79, R80, R81, R82, R83, R84, R85, R86, R87, R88, R89, R90, R91, R92, R93, R94, R95, R96, R97, R98, R99, R100), capacitors (C1, C2, C3, C4, C5, C6, C7, C8, C9, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C29, C30, C31, C32, C33, C34, C35, C36, C37, C38, C39, C40, C41, C42, C43, C44, C45, C46, C47, C48, C49, C50, C51, C52, C53, C54, C55, C56, C57, C58, C59, C60, C61, C62, C63, C64, C65, C66, C67, C68, C69, C70, C71, C72, C73, C74, C75, C76, C77, C78, C79, C80, C81, C82, C83, C84, C85, C86, C87, C88, C89, C90, C91, C92, C93, C94, C95, C96, C97, C98, C99, C100), and integrated circuits (U1, U2, U3, U4, U5, U6, U7, U8, U9, U10, U11, U12, U13, U14, U15, U16, U17, U18, U19, U20, U21, U22, U23, U24, U25, U26, U27, U28, U29, U30, U31, U32, U33, U34, U35, U36, U37, U38, U39, U40, U41, U42, U43, U44, U45, U46, U47, U48, U49, U50, U51, U52, U53, U54, U55, U56, U57, U58, U59, U60, U61, U62, U63, U64, U65, U66, U67, U68, U69, U70, U71, U72, U73, U74, U75, U76, U77, U78, U79, U80, U81, U82, U83, U84, U85, U86, U87, U88, U89, U90, U91, U92, U93, U94, U95, U96, U97, U98, U99, U100). The diagram also shows the connections to the PC card (P3) and the microcontroller (U1).

CODE	LJ8211-001
NAME	B512050CIR (8/9)

CODE	LJ8211-001
NAME	B512050CIR (8/9)

HL-2400Ce Main PCB Circuit Diagram (9/9)

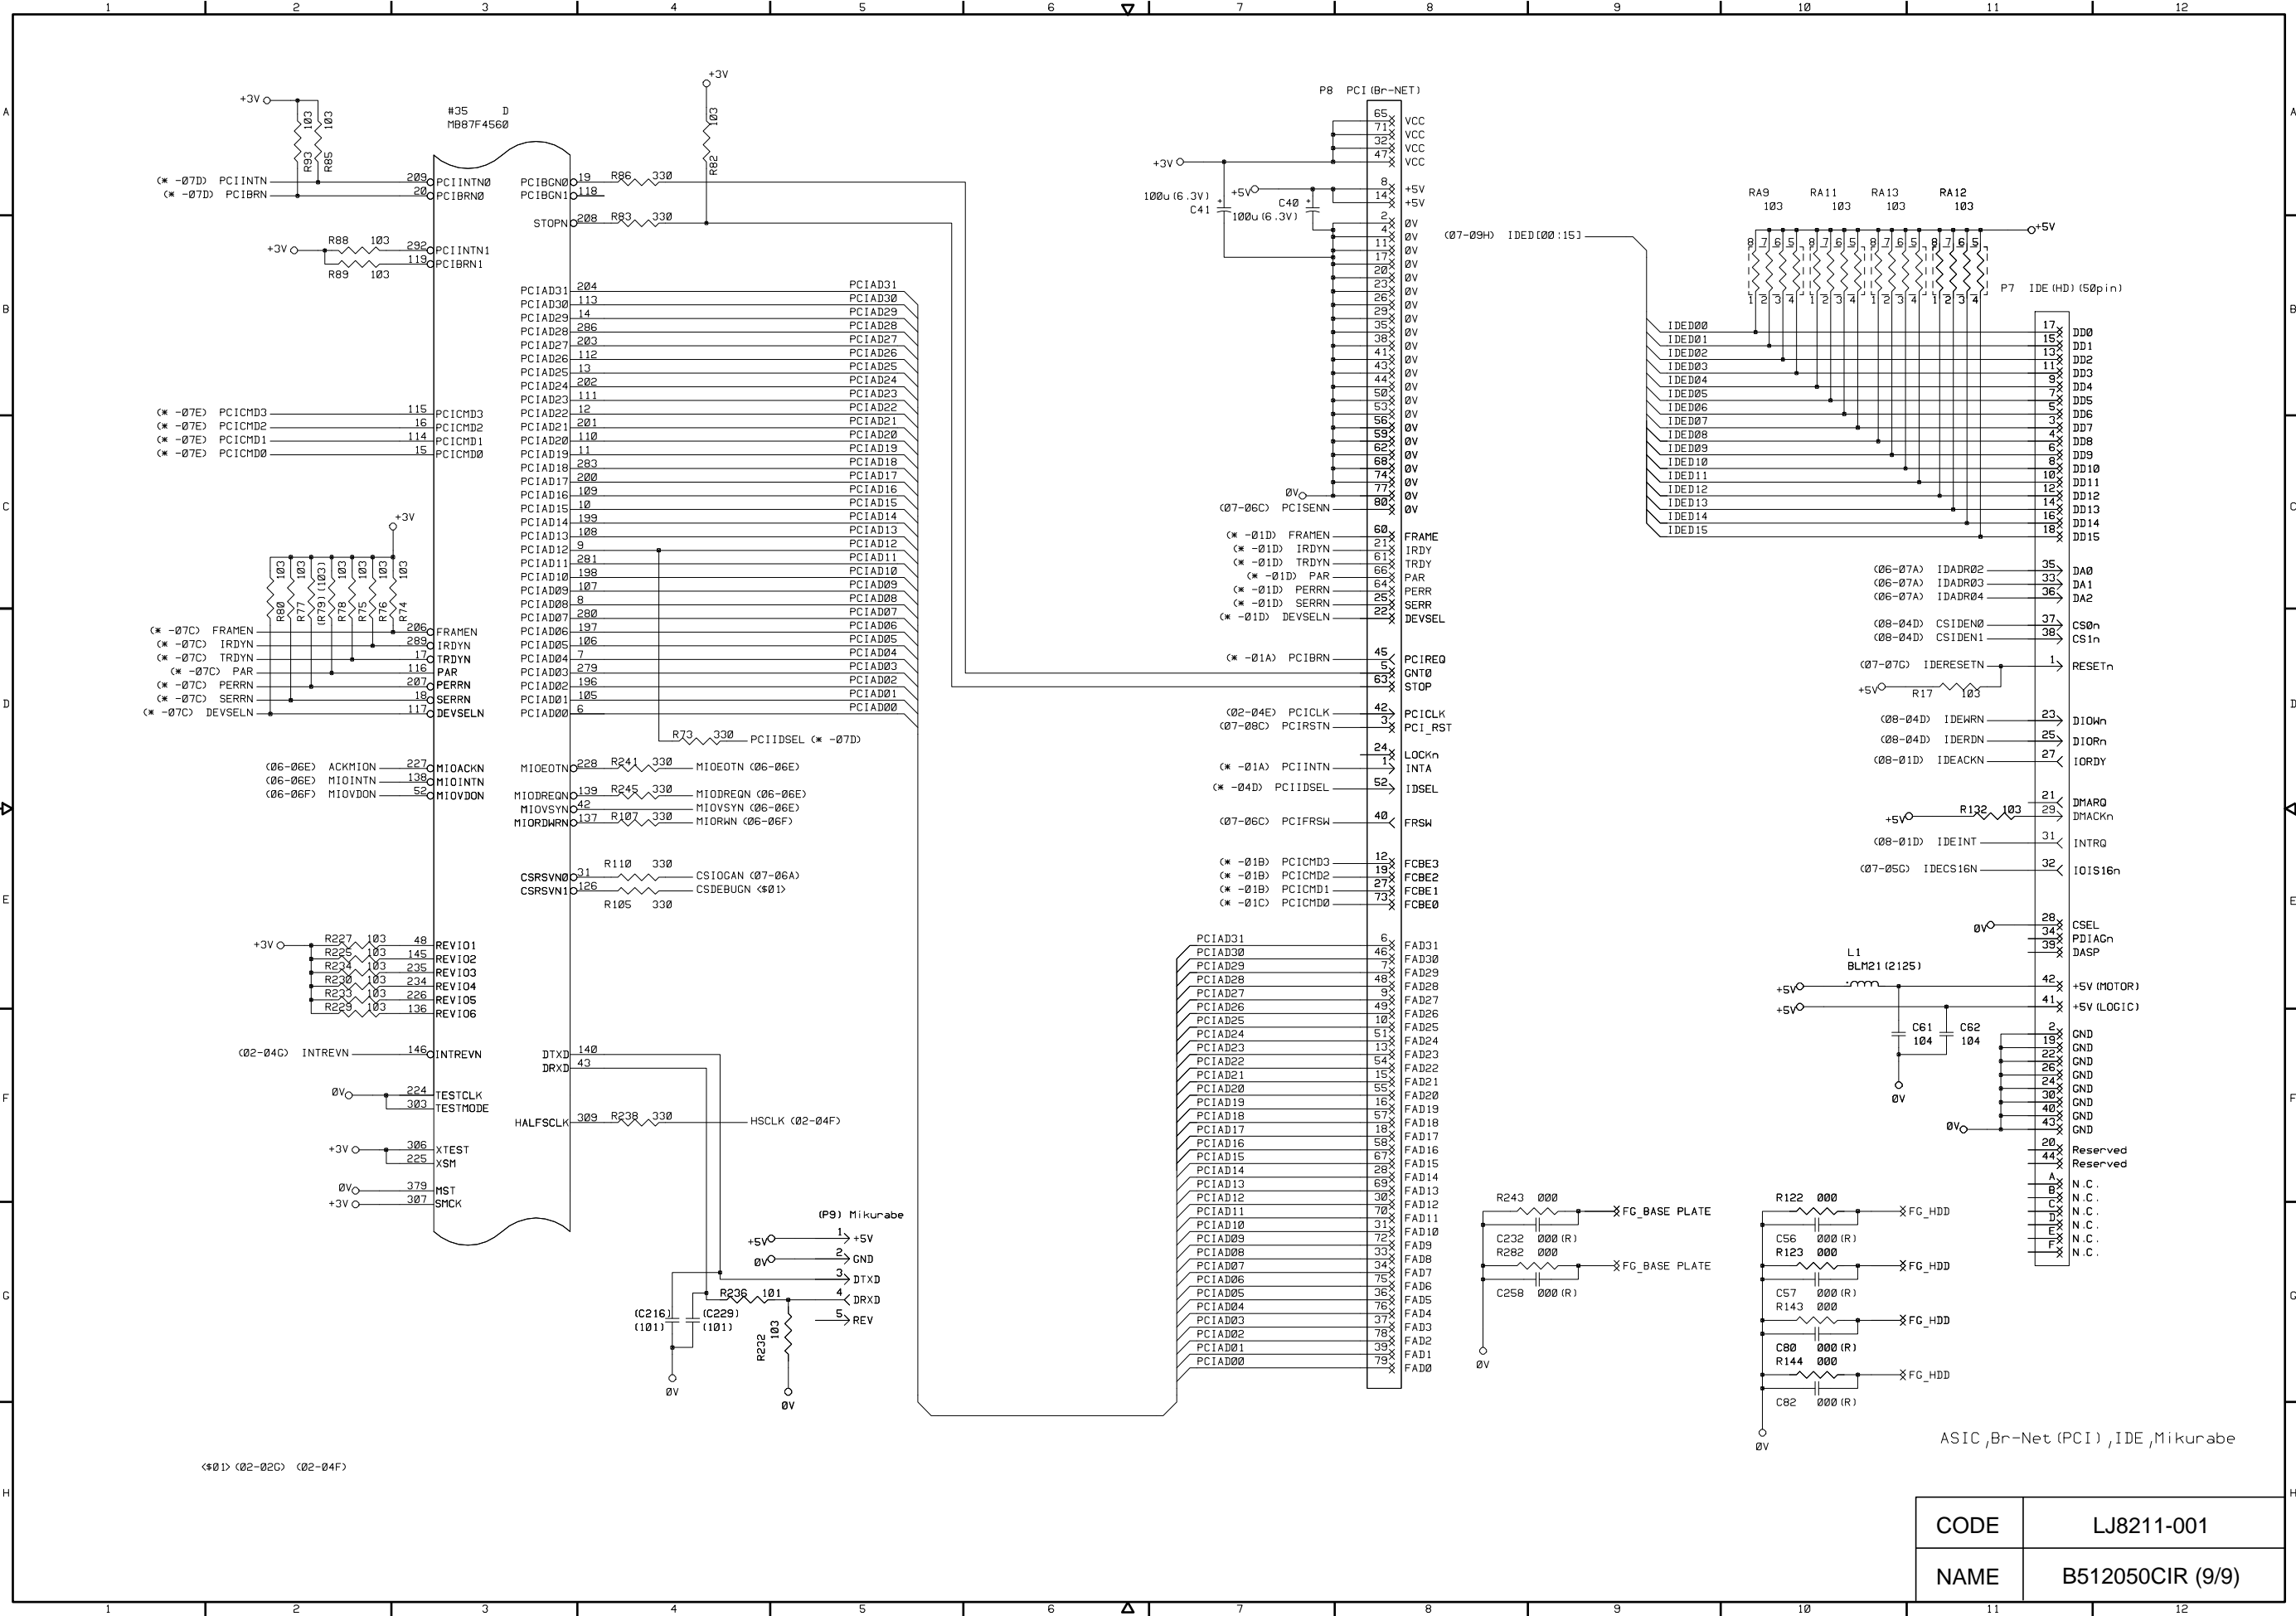

CODE	LJ8211-001
NAME	B512050CIR (9/9)

2.4 Power Supply Unit


(1) Outputs and Use

Output Terminal	Rated Output	Use
+5V-1	4.8 ~ 5.3V, 7.5A	For control of the printer
+5V-1R		For control of the laser
+5V-2		For control of the interface
+24V-1	+24V, 4.5A	For control of printer charging.
HP HN	120V, 8A (For USA) 220V, 5A (For Europe)	For connection of the fuser heater (HP). For connection of the fuser heater (HN).

(2) Layout of Connector Pin Assignment

See Fig.4-41 on the following page.

Layout of Connector Pin Assignment - Power Supply Unit -

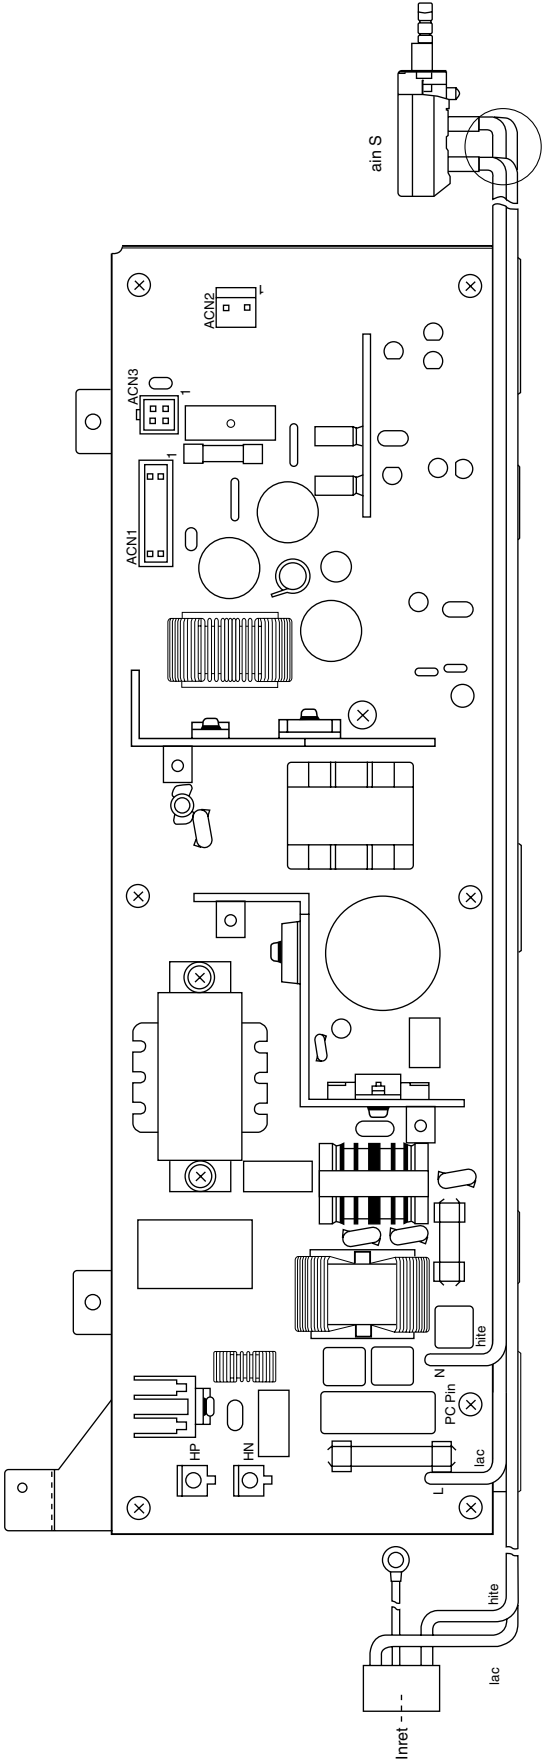

(3) Connector Pin Assignment

ACN1

Manufacture: MoLex

Type: 53313-2215

Pin #	Signal Name	Interface
1	+5V-1	+5V-1 Output
2	SGND	Signal Ground (+5V type ground)
3	+5V-1	+5V-1 Output
4	SGND	Signal Ground (+5V type ground)
5	ACSYNC-N	AC Zero-Cross Signal (Open Collector Output)
6	SGND	Signal Ground (+5V type ground)
7	+24V	+24V Output not through Door Switch
8	SGND	Signal Ground (+5V type ground)
9	+5V-1R	+5V through the relay when +24V-1 is shut down,
10	ACOFF-P	AC Forced Shut-Down Signal(Pull-up required)
11	HON-N	Heater On Signal (Pull-up required)
12	Test I2	Terminal for Dielectric Strength Test
13	+24V-1	+24V Output corresponding to Door Switch.
14	Test O2	Terminal for Dielectric Strength Test
15	+24V-1	+24V Output through Door Switch
16	Test I1	Terminal for Dielectric Strength Test
17	+24V-1	+24V Output through Door Switch
18	Test O1	Terminal for Dielectric Strength Test
19	PGND	Power Ground (+24V type ground)
20	PGND	Power Ground (+24V type ground)
21	PGND	Power Ground (+24V type ground)
22	PGND	Power Ground (+24V type ground)

ACN2

Manufacture: MoLex

Type: 5277-02A

Pin #	Signal Name	Interface
1	DSW-O	+24V Output through Door Switch
2	DSW-I	+24V Output through Door Switch

ACN3

Manufacture: MoLex

Type: 5566-04A

Pin #	Signal Name	Interface
1	+5V-2	+5v-2 Output
2	+5V-2	+5v-2 Output
3	SGND	Signal Ground (+5V type ground)
4	SGND	Signal Ground (+5V type ground)

2.5 High Voltage Power Supply Unit


(1) Outputs and Function

No.	Function		Power Supply (P/S)	
			P/S Name	Approx. Output Voltage
1	Charging		CHV(-)	4.6KV
			HVRD6190	619V
2	First Transfer		CBV(-)	200V ~ 900V
3	Developing Bias	Y,M	DBV(-A)	200V ~ 400V
		C,K	DBV(-B)	200V ~ 400V
4	Second Transfer		THV(+)	400V ~ 3,000V
5	Transfer Roller Cleaning		THV(-)	600V
6	Paper Discharging		ACV(~)	4.9KV
			DCV(+)	200V
7	Drum Cleaning		FCBV	200V ~ 1,500V

(2) Layout of Connector Pin Assignment

See Fig.4-42 on the following page.

Layout of Connector Pin Assignment - High Voltage Power Supply Unit -

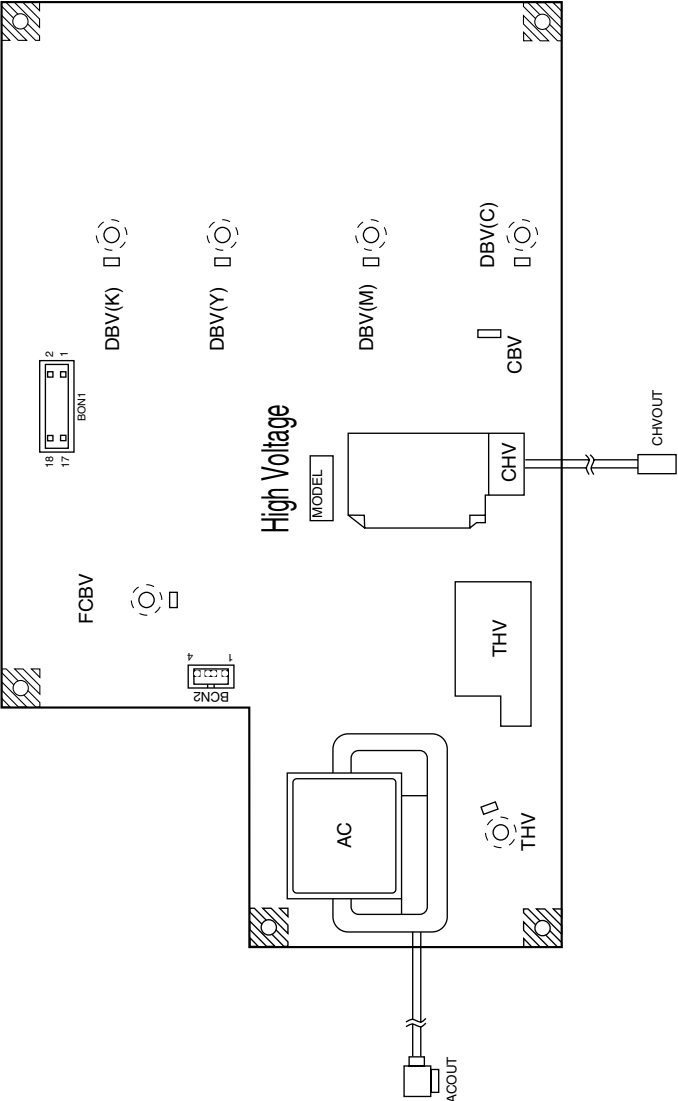

ig.442

(3) Connector Pin Assignment

BCN1

Manufacture: MoLex

Type: 53313-1815


Pin #	Signal Name	Interface
1	+24V-1	+24V-1
2	PGND	PGND
3	FUCHK	Sensor Signal of Fusing Unit Installation.
4	PGND	PGND
5	ACVON-N	AC Output ON Signal
6	PWMON-N	PWM Control ON Signal
7	CHVON-ON	CHV Output ON Signal
8	CHVERR	CHV ERROR Sensor Signal
9	CBVPWM-N	CBV PWM Control Signal
10	THVRON-N	THV ON Signal
11	DBVMPWM-N	DBV PWM Control Signal
12	THVPWM-N	THV PWM Control ON Signal
13	DBVCKPWM-N	CBV PWM Control Signal
14	THV-1	Transfer Voltage Select Signal
15	FCBVPWM-N	FCBV PWM Control Signal
16	TH1	Termistor Temperature Sensor
17	NC	NC
18	TH2	Termistor Temperature Sensor

BCN2

Manufacture: MoLex

Type: 53324-0410

Pin #	Signal Name	Interface
1	TH1	Thermistor 1
2	TH2	Thermistor 2
3	FUCHK	Fuser Check
4	FUCHKGND	GND

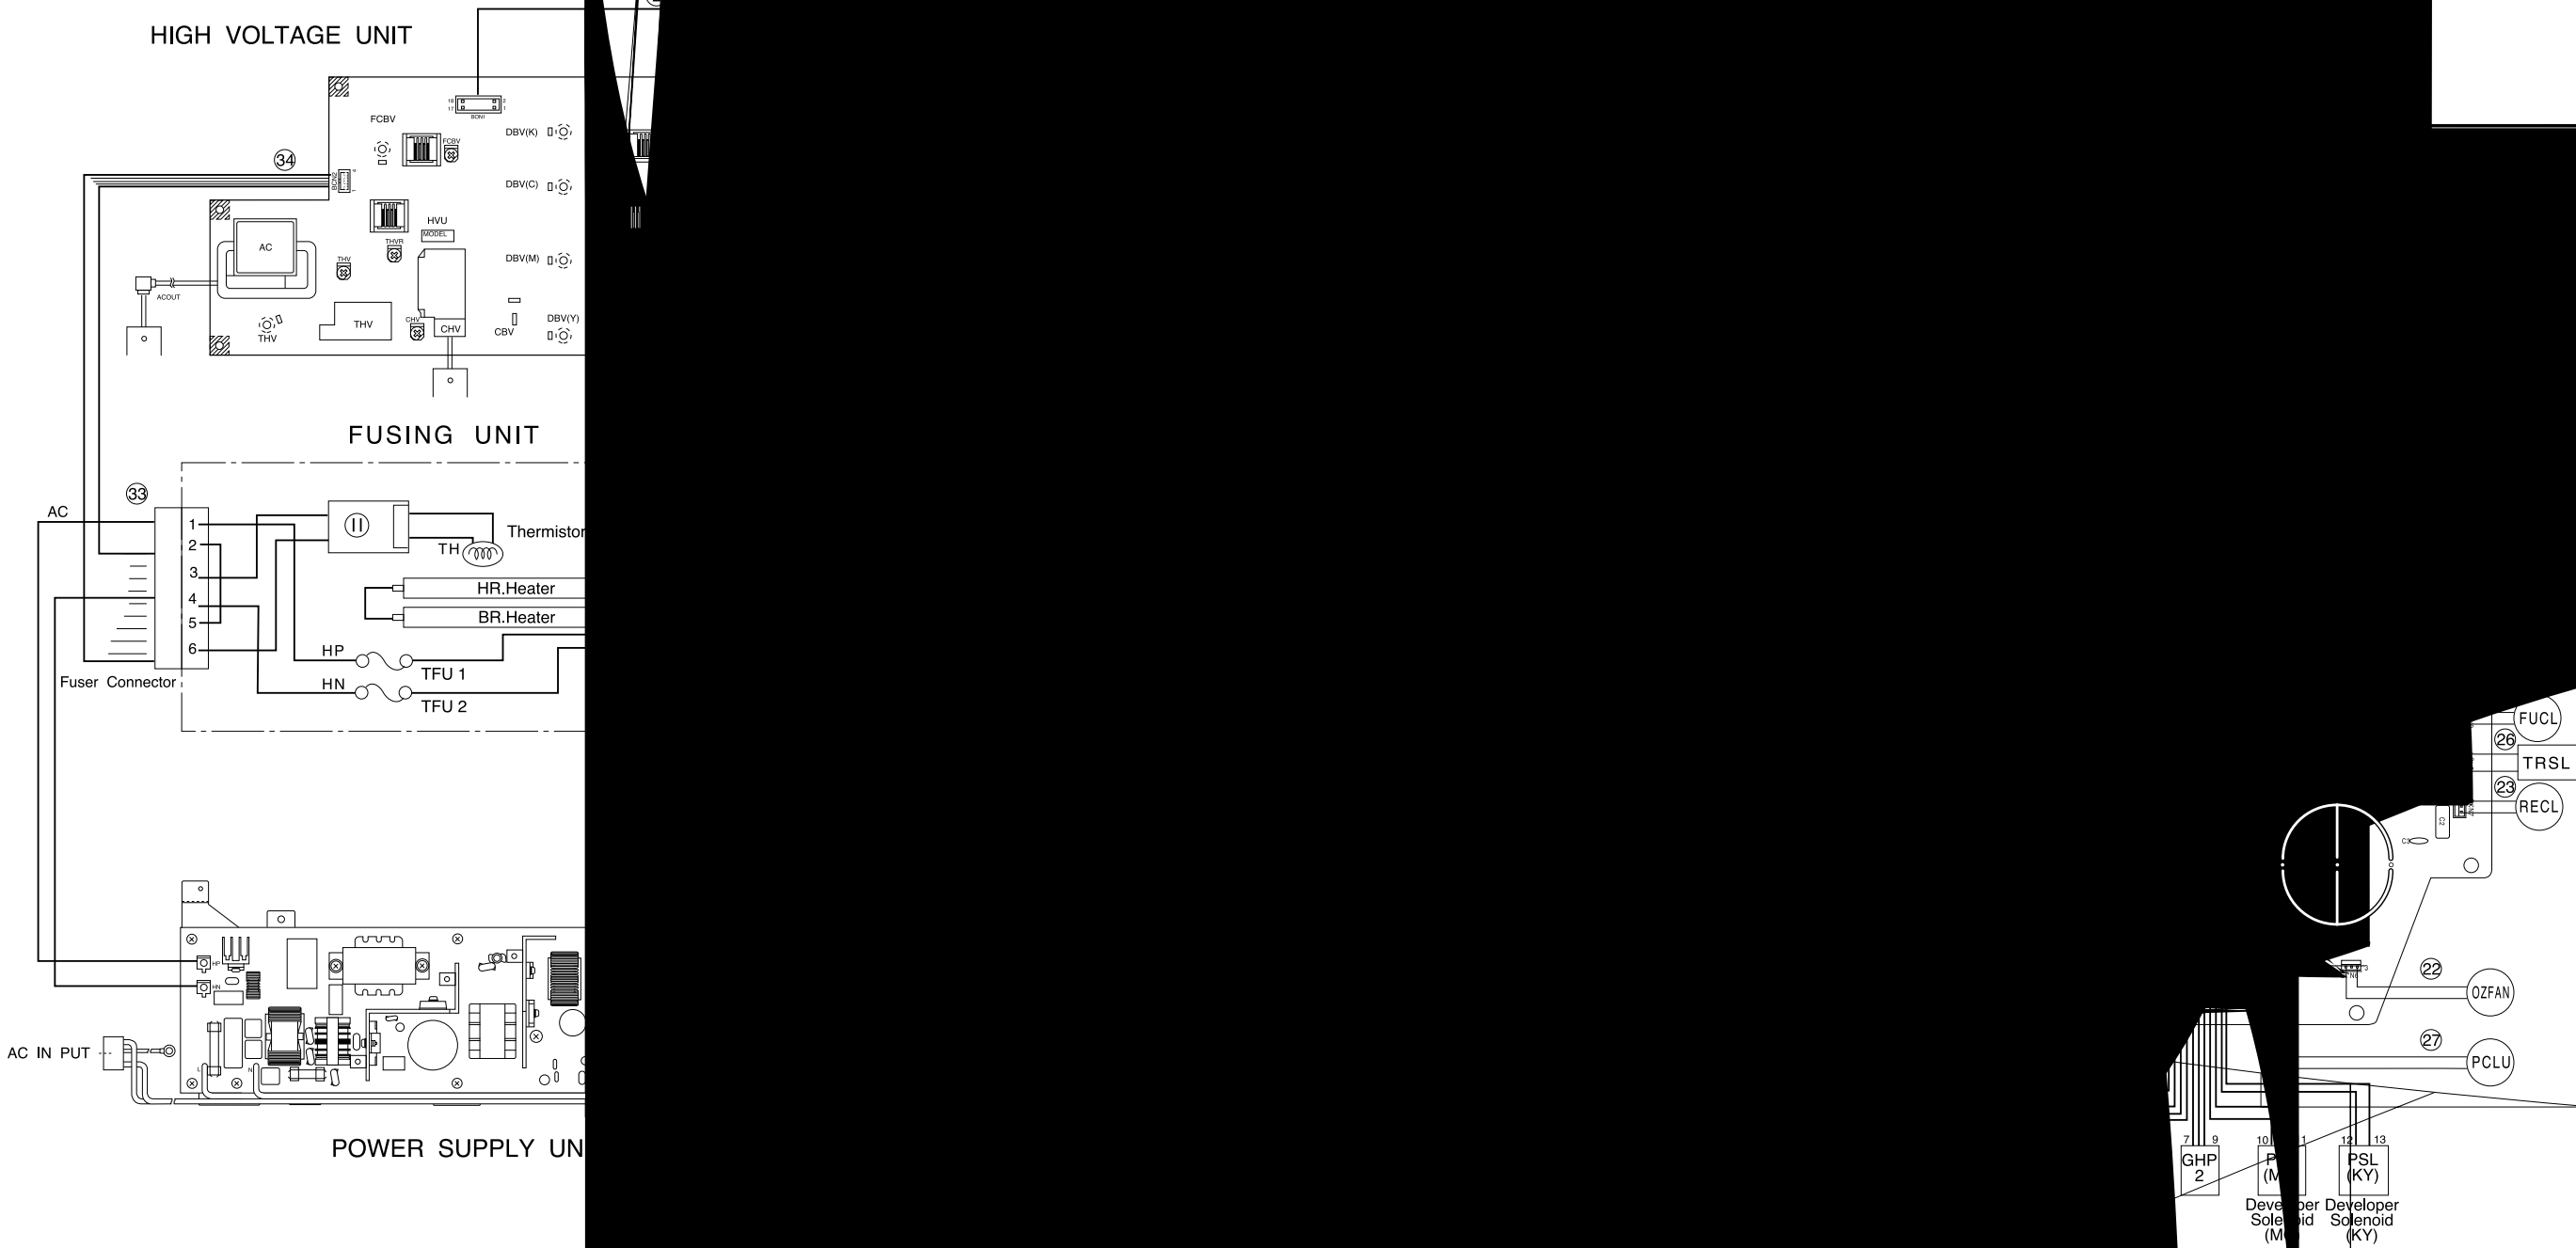

(1) DCN2: IOD1 PCB - Power Supply Unit (22 pins)

Pin No.	Signal	Pin No.	Signal
1	+5v - 1	2	SGND
3	+5v - 1	4	SGND
5	ACSYNC - N	6	SGND
7	+24V	8	SGND
9	+5v - 1R	10	ACOFF - P
11	HON - N	12	TESTI2
13	+24V - 1	14	TESTO2
15	+24V - 1	16	TESTI1
17	+24V - 1	18	TESTO1
19	PGND	20	PGND
21	PGND	22	PGND

(2) DCN14: IOD1 PCB - High Voltage Unit (18 pins)

Pin No.	Signal	Pin No.	Signal
1	+24v - 1	2	PGND
3	FUCHK	4	PGND
5	ACVON - N	6	PWMON - N
7	CHVON - N	8	CHVERR
9	CBVPWM - N	10	THVRON - N
11	DBV(MC)PWM - N	12	THVPWM - N
13	DBV(KY)PWM - N	14	THV - I
15	FCBVPWM - N	16	TH1
17	NC	18	TH2

(3) DCN3: For Factory Use Only (4 pins)

Pin No.	Signal
1	TESTO1
2	TESTI1
3	TESTO2
4	TESTI1

(4) DCN4: IOD1 - Interlock Switch

Pin No.	Signal
1	REARDOPEN - P
2	NC
3	TOPDOPEN - P

(5) DCN1: MCTL PCB - IOD1 PCB (50 pins)

Pin No.	Signal	Pin No.	Signal
1	SGND	2	PGND
3	SGND	4	PGND
5	+5v - 1	6	+24v - 1
7	+5v - 1	8	HON - N
9	+5v - 1	10	SGND
11	+5v - 1	12	ACOFF - P
13	I/OAD2	14	+5v - 1R
15	I/OAD1	16	+24v
17	I/OAD0	18	RHSON
19	I/ODATA3	20	AHUMB
21	I/ODATA2	22	ACVON - N
23	I/ODATA1	24	CHVON - N
25	I/ODATA0	26	PWMON - P
27	TMLEDON - P	28	CBVPWM - N
29	LEDON - N	30	DBV(MC)PWM - N
31	TRSLON - P	32	DBV(KY)PWM - N
33	FBSLON - P	34	FCBVPWM - N
35	FBCLON - P	36	THVRON - N
37	SPSLLON - P	38	THVPWM - N
39	PKCLLON - P	40	THV - I
41	ELON - P	42	TH2
43	PBSEN - N	44	TH1
45	HPSEN - N	46	OILLES - P
47	CTFANON - P	48	TMASEN1
49	HTFANON - P	50	TMASEN2

(6) DCN9: IOD1 PCB - IOD2 PCB (14 pins)

Pin No.	Signal
1	FBCLON - P
2	FBSLON - P
3	TRSLON - P
4	OZFANERR
5	+24v - 1
6	+24v - 1
7	+24v - 1
8	PGND
9	PGND
10	PGND
11	+5v - 1
12	SGND
13	PHSON - P
14	AHUMB

(7) DCN5: IOD1 - Upper Paper Empty Sensor

IOD1 - Paper Feeding Sensor

IOD1 - Drum Encoder Sensor

Pin No.	Signal
1	+5v - 1
2	HPSEN - N
3	SGND
4	+5v - 1
5	PEU - P
6	SGND
7	+5v - 1
8	PT1 - N
9	SGND

(8) DCN6: IOD1 - Upper Paper Size Sensor
IOD1 - OHP Sensor

Pin No.	Signal
1	+5v - 1
2	PSU1
3	PSU2
4	PSU3
5	PSU4
6	SGND
7	+5v - 1
8	OHPSENU
9	SGND
10	SGND

(9) DCN7: IOD1 PCB - Toner Empty Sensor(Y,M,C,K)

Pin No.	Signal
1	TLES(K) - P
2	TLES(Y) - P
3	TLES(M) - P
4	TLES(C) - P
5	TLES - G
6	SGND
7	LEDON - P
8	TLESCHK
9	SGND
10	+24v - 1
11	ELON - N

(10) DCN13: IOD1 PCB - Controller Fan

Pin No.	Signal
1	CTFANON - P
2	PGND
3	CTFANERR

(11) DCN8: IOD1 - Lower Feeder Unit

Pin No.	Signal
1	+24v - 1
2	+24v - 1
3	PKCLLON - N
4	SPSLLON - N
5	+5v - 1
6	+5v - 1
7	PEL - P
8	PSL1
9	SGND
10	PSL2
11	+5v - 1
12	PSL3
13	OHPSENL
14	PSL4
15	SGND
16	SGND
17	OCST - N
18	NC

(12) DCN10: IOD1 PCB - Paper Exit Sensor
IOD1 PCB - Heater Fan

Pin No.	Signal
1	+5v - 1
2	PT2 - N
3	SGND
4	HTFANON - P
5	PGND
6	HTFANERR

(13) DCN11: IOD1 PCB - Belt Sensor
IOD1 PCB - Oil Sensor
IOD1 PCB - Drum Paper Jam
Sensor

Pin No.	Signal
1	PBSEN - N
2	+5v - 1
3	SGND
4	OILLES - P
5	+5v - 1
6	SGND
7	E4SEN - N
8	+5v - 1
9	SGND

(14) ECN1: MCTL PCB - IOD1 (20 pins)

Pin No.	Signal
1	DCL(C)ON - P
2	DCL(M)ON - P
3	DCL(Y)ON - P
4	DCL(K)ON - P
5	PSL(KY)ON - P
6	PSL(MC)ON - P
7	MMCLK
8	MMON - N
9	MMREV - N
10	MMENC
11	DMCLK
12	DMON - N
13	ISCK
14	IDATA
15	ILOAD
16	PKCLUON - P
17	RECLON - P
18	SPSLUON - P
19	OZFANON - P
20	FUCLON - P

(15) ECN17: IOD2 - Developer Clutch (Y)

Pin No.	Signal
1	+24v - 1
2	NC
3	DCL(Y)ON - N

(16) ECN16: IOD2 - Developer Clutch (M)

Pin No.	Signal
1	+24v - 1
2	NC
3	DCL(M)ON - N

(17) ECN14: IOD2 - Developer Clutch (C)

Pin No.	Signal
1	+24v - 1
2	NC
3	DCL(C)ON - N

(18) ECN13: IOD2 - Developer Clutch (K)

Pin No.	Signal
1	+24v - 1
2	NC
3	DCL(K)ON - N

(19) ECN3: IOD2 - Developer Solenoid

Pin No.	Signal
1	+5v - 1
2	TBFL2 - N
3	SGND
4	+5v - 1
5	GHPSEN1
6	SGND
7	+5v - 1
8	GHPSEN2
9	SGND
10	PSL(YM)
11	+24v - 1
12	+24v - 1
13	PSL(KC)

(20) ECN9: IOD2 - Fuser Clutch

Pin No.	Signal
1	+24v - 1
2	NC
3	FUCLON - N

(21) ECN11: IOD2 - Cleaner Clutch

Pin No.	Signal
1	+24v - 1
2	NC
3	FBCLON - N

(22) ECN6: IOD2 - Ozone Fan

Pin No.	Signal
1	OZFANON - P
2	PGND
3	OZFANERR

(23) ECN7: IOD2 - Registration Clutch

Pin No.	Signal
1	+24v - 1
2	NC
3	NC
4	RECLON - N

(25) ECN10: IOD2 - Cleaner Solenoid

Pin No.	Signal
1	+24v - 1
2	NC
3	NC
4	FBSLON - N

(26) ECN8: IOD2 - Transfer Solenoid

Pin No.	Signal
1	+24v - 1
2	NC
3	NC
4	TRSLON - N

(27) ECN5: IOD2 - Paper Feeding Clutch

Pin No.	Signal
1	+24v - 1
2	NC
3	PKCLUON - N

(28) ECN12: IOD2 - Main Motor

Pin No.	Signal
1	MMRDY - N
2	MMON - N
3	MMCLK
4	PGND
5	+24v - 1
6	SGND
7	+5v - 1
8	MMENC
9	MMREV - N

(29) ECN15: IOD2 - Developer Motor

Pin No.	Signal
1	DMRDY - N
2	DMON - N
3	DMCLK
4	PGND
5	+24v - 1
6	SGND
7	+5v - 1
8	NC
9	DMREV - N

(31) ACN3: Power Supply Unit - MCTL

Pin No.	Signal
1	+5v - 2
2	+5v - 2
3	SGND

(32) ACN2: Power Supply Unit - Interlock Switch (2 pins)

Pin No.	Signal
1	DSW - O
2	DSW - I

(33) Fusing Unit - MCTL PCB POCN(6 pins)

Pin No.	Signal
1	ACOUT - HP
2	FUCHKGND
3	TH2
4	ACOUT - HN
5	FUCHK
6	TH1

(34) BCN2: High Voltage Unit - Fusing Unit(4 pins)

Pin No.	Signal
1	TH1
2	TH2
3	FUCHK
4	FUCHKGND

(35) DCN15: IOD1 - Cleaning Roller Sensor

Pin No.	Signal
1	+5v - 1
2	CLROL - N
3	SGND

(30) LCN: MCTL - LDU (20 pins)

Pin No.	Signal
1	+5v - R
2	LDREF2
3	LDREF3
4	+5v - 1
5	LDREF1
6	LDREF0
7	LREADY
8	LCONT2
9	LCONT1
10	VIDEO - P
11	VIDEO - N
12	BDT - P
13	BDT - N
14	SGND
15	SGND
16	SCMCLK
17	SCMRDY - N
18	SCMON - N
19	PGND
20	+24v - 1

CHAPTER V

CONTROL PANEL OPERATION

CONTENTS

CHAPTER V CONTROL PANEL OPERATION..... V-1

1. PANEL LAYOUT	V-1
2. VIDEO CONTROLLER MODE.....	V-2
2.1 Configuration of Operational Mode	V-2
2.2 Toner Save Mode / Power Save Mode	V-3
2.3 Line Test Mode	V-4
2.4 DRAM Test Mode	V-8
2.5 Program Version Display Mode	V-9
2.6 Test Print Mode.....	V-10
2.7 NVRAM Reset Mode.....	V-10
3. ENGINE CONTROLLER MODE	V-11
3.1 Configuration of Operational Mode	V-11
3.2 Operation of Normal Mode.....	V-13
3.3 Service Mode	V-19
3.4 Adjustment Work Procedures	V-39
3.4.1 Adjustment of Top and Left Margin	V-39
3.4.2 Setting of Engine NVRAM Data.....	V-40
3.4.3 Confirmation and Setting of Total Number of Printouts	V-41
3.4.4 Setting of Number of Images for Each Color	V-41
3.4.5 Initial Setting of Engine NVRAM.....	V-42

CHAPTER V CONTROL PANEL OPERATION

1. PANEL LAYOUT

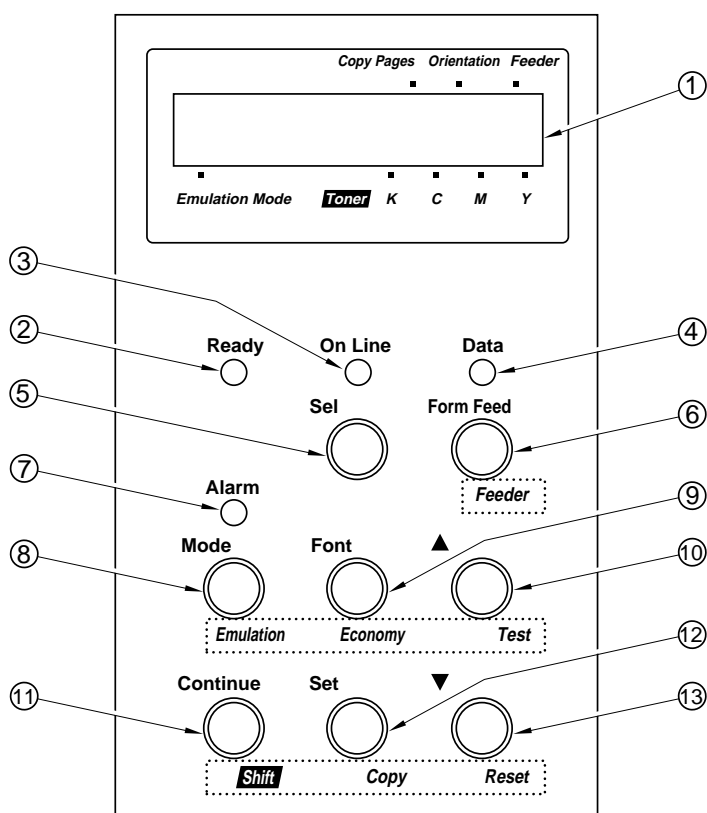


Fig.5-1

No.	LED / Button Name
1	LCD: 16 character by 2 lines
2	Ready LED
3	On Line LED
4	Data LED
5	Sel button
6	Form Feed / Feeder button
7	Alarm LED
8	Mode / Emulation button
9	Font / Economy button
10	▲ / Test button
11	Continue / Shift button
12	Set / Copy button
13	▼ / Reset button

2. VIDEO CONTROLLER MODE







This section describes the operation and maintenance functions in the Video Controller Mode.

2.1 Configuration of Operational Mode

This printer has various functions as set out in Table 5-1 for users to easily perform general test printing, general settings and some maintenance work.

- (1) Normal Mode: After turning on the printer, the printer goes into Normal Mode. This mode provides normal printing for the end user. The following section describes the toner save mode and the power save mode. For other modes, refer to the user's guide.
- (2) Line Test Mode: This mode provides a self-test for each function in the Video Controller Mode mainly for use when replacing the main (video controller) PCB. Whenever the video controller is replaced, these checks should be carried out. This mode provides performance tests for the engine LCD, control panel buttons and various sensors.
- (3) DRAM Test Mode: This mode is provided to test the memory and any installed SIMM(s) on the main (video controller) PCB.
- (4) Program Version Display Mode
This mode displays the firmware version of the video controller and engine controller.
- (5) Test Print Mode: This mode allows you to print the selected test pattern continuously in order to check the engine.
- (6) NVRAM Reset Mode:
This mode forces the NVRAM values of the video controller to be reset to the factory settings. When replacing the main PCB, the NVRAM value is automatically reset to the factory setting. However, this mode is effective when the video controller does not work due to errors.

  Table 5-1

Power on	→	Normal Mode
 + Power on	→	Line Test Mode
 + Power on	→	DRAM Test Mode
 + Power on	→	Program Version Display Mode
 +  Power on	→	Test Print Mode
 + Power on	→	NVRAM Reset Mode

2.2 Toner Save Mode / Power Save Mode

The toner save mode allows you to reduce the printer running cost and improve the life expectancy of the toner cartridge.

The power save mode allows you to save electricity when the printer is on but not being used.

<Procedure>

- 1) Turn on the printer to enter normal mode.
- 2) Press the Shift and Economy buttons at the same time.
- 3) The display shows the menu as follows;

ECONOMY TONER SAVE MODE

- 4) Select the toner save mode or the power save mode using the scroll buttons or by pressing the Shift and Economy buttons again. Then, press the Set button.
- 5) Select the setting (ON/OFF) with the scroll buttons, then press the Set button.
- 6) When turning on the power save mode, the display shows the next sub-setting menu as follows;

POWER SAVE=ON TIME OUT=30m

- 7) You need to set the time out from 1 to 99 minutes with the scroll buttons. (The factory setting is 30 minutes.)

Note:

The time out is the duration after which the fusing unit of the print engine is turned off to save power.

2.3 Line Test Mode

This mode tests the following items:

Item	Self-test Description
LCD TEST	Displays the checker pattern
LED TEST	Checks that all LEDs are on / off.
SW TEST	Checks that all buttons work correctly.
SENSOR TEST	Checks that all sensors work correctly.
RAM SIZE TEST	Displays the NVRAM size
TRAY 1 CHECK	Displays the paper size of the upper cassette (Tray 1).
TRAY 2 CHECK	Displays the paper size of the lower cassette (Tray 2).
FLASH CARD1 R/W TEST	Check/delete/import/export (read/write) on Card 1 ID.
FLASH CARD2 R/W TEST	Check/delete/import/export (read/write) on Card 2 ID.
MIO TEST	Checks that the installed MIO card is initialized.

<Procedure>

Note:

If any errors occur during the following procedures, an error message appears. By pressing the Continue button, it is possible to proceed with the tests.

- 1) Install flash memory cards 1 & 2 and an MIO card into the printer.
- 2) Turn on the power while holding down the ▲ button. When the message below appears, release the ▲ button.

LINE TEST

- 3) Press the Set button to make the printer start the self-test.
- 4) Press the Continue button to implement the LCD TEST.


Check that the LCDs are all displayed correctly and none of the dots have dropped out.

[illegible]


Also, check that the LEDs are all on.

5) Press the Continue button to implement SW TEST.

The LEDs are all off, and then the following display appears. Check that the corresponding number appears when pressing the buttons on the control panel.

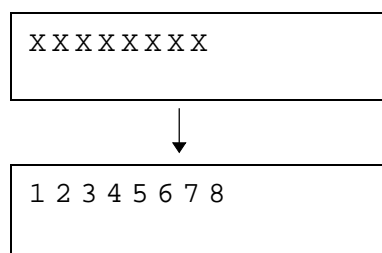


Corresponding button number on the panel

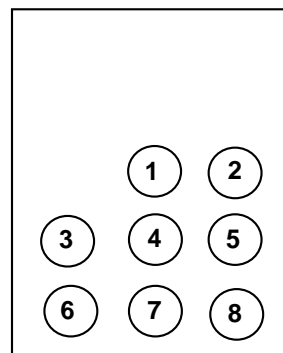

6) Press the Continue button to implement the SENSOR TEST.

The LEDs are all off, then the following display appears.

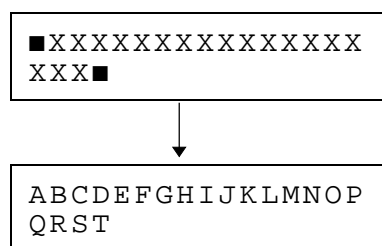

Corresponding sensor code

A:	Front Cover
B:	Top Cover
C:	Rear Cover (Transfer Unit)
D:	Toner Cartridge (K)
E:	Toner Cartridge (C)
F:	Toner Cartridge (M)
G:	Toner Cartridge (Y)
H:	OPC Belt Cartridge
I:	Fuser Cleaner
J:	Fusing Unit
K:	Waste Toner
L:	Upper Cassette
M:	Lower Cassette
N:	Upper Cassette Paper
O:	Lower Cassette Paper
P:	Upper Cassette Media
Q:	Lower Cassette Media
R:	Paper Sensor 1
S:	Paper Sensor 2
T:	Paper Sensor 3

Check that the display of each sensor is changed to the corresponding character.

<Ex. Toner cartridge (K)>


■ → (Open the cover) → (Remove the toner cartridge.) → (Close the cover **and wait for 20 seconds.**) → (Open the cover.) → (Install the toner cartridge.) → (Close the cover **and wait for 20 seconds.**) → 'D'

Note:

- Since the sensors respond only when the cover is closed, be sure to close the cover before re-installing any items.
- The sensors tests, especially the OPC test, require time to respond on the LCD panel. Operate a sensor in one sense for at least **20 seconds** before restoring it to the original condition for reliable operation of these tests.

- 7) Press the Continue button to implement the RAM SIZE CHECK.


The RAM size installed into the printer is displayed as follows;

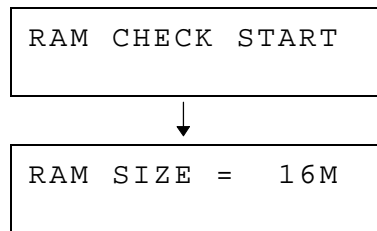

Standard Model: RAM SIZE = 16 MB
Network Model: RAM SIZE = 32 MB


- 8) Press the Continue button to implement the TRAY 1 CHECK.

The paper size of the installed cassette is displayed.

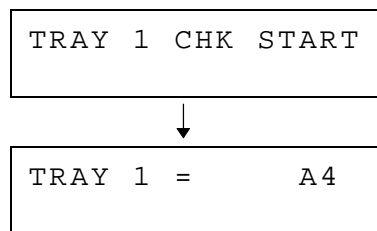


TRAY 1 = A4: A4 size cassette is installed.
TRAY 1 = LETTER: Letter size cassette is installed.
TRAY 1 = NO: The upper cassette is not installed.
TRAY 1 = SIZE ERR: The paper size is other than A4 or Letter size.

- 9) Press the Continue button to implement the TRAY 2 CHECK.

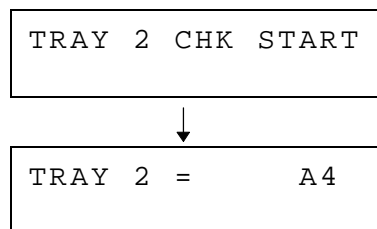


TRAY 2 = A4: A4 size cassette is installed.
TRAY 2 = LETTER: Letter size cassette is installed.
TRAY 2 = NO: The lower cassette is not installed.
TRAY 2 = SIZE ERR: The paper size is other than A4 or Letter size.

- 10) Press the Continue button to implement the FLASH CARD1 R/W TEST.

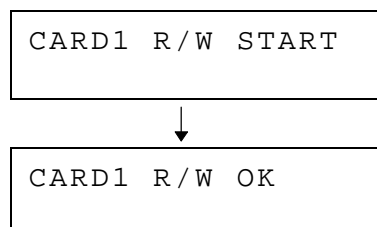


CARD1 R/W OK: The flash memory card works correctly.
CARD1 R/W ERROR: The flash memory card has a problem.
NO FLASH CARD1: The flash memory card is not installed.
WP FLASH CARD1: The write protect switch on the flash memory card is On.


11) Press the Continue button to implement FLASH CARD2 R/W TEST.

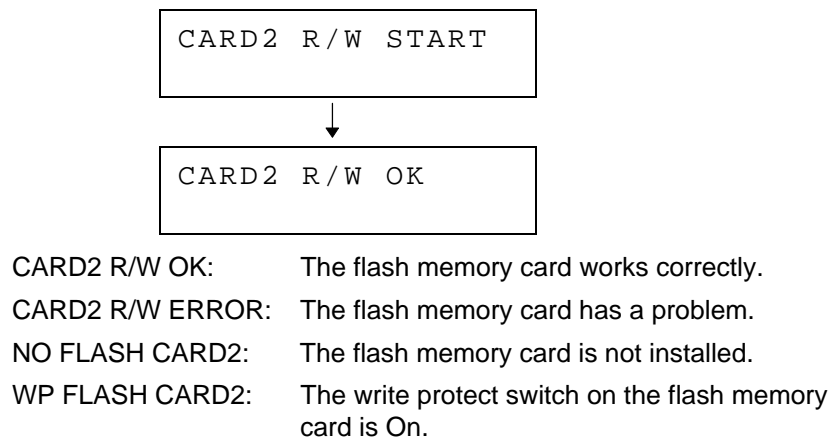

12) Press the Continue button to implement the MIO CHECK.

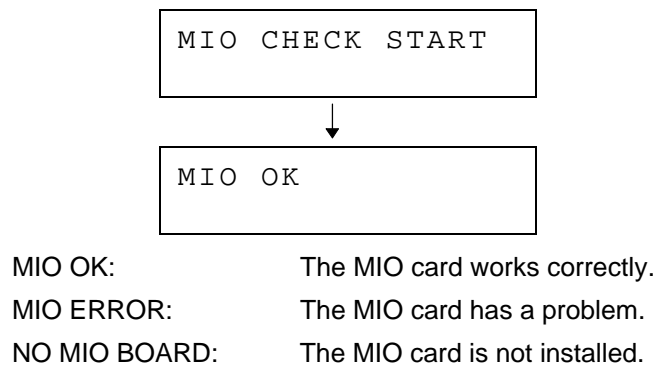

13) Press the Continue button to exit the Line Test Mode. The printer is reset as follows;

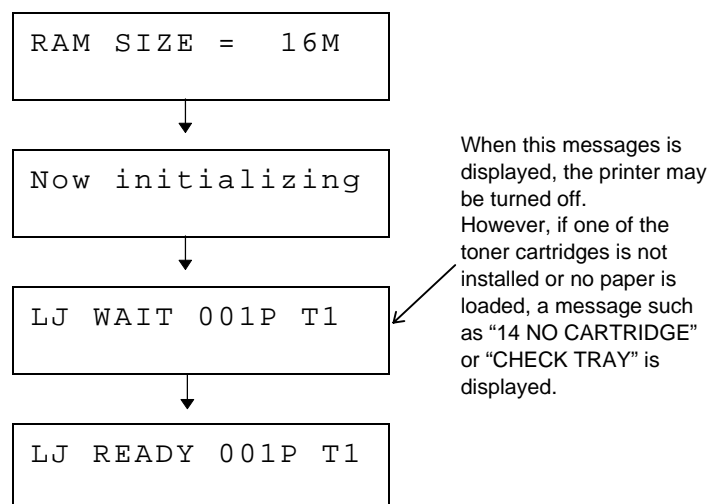

14) Turn off the power.

2.4 DRAM Test Mode

This mode tests the memory and optional SIMMs installed on the main (video controller) PCB.

<Procedure>

- 1) To start the test program:

While holding down the ▼ button, turn on the power. “DRAM CHECK START” will be displayed. Press the Continue button to start the DRAM check.

- 2) The LCD will display “START DRAM TEST”, and the Data LED blinks.
- 3) On satisfactory completion of all the RAM tests, the LCD will display: “DRAM OK!!”, and the Alarm LED is on.
- 4) If any DRAM error has occurred, the LCD will display a fail message as follows;



- 5) Enter the hidden menu mode as follows to confirm the current memory map;
 - i) Press the Form Feed, Mode and Continue buttons at the same time in the off-line status.
 - ii) The LCD will display “HIDDEN PANEL”
 - iii) Select the “DRAM ADDRESS” menu using the scroll buttons.
 - iv) Whenever the Set button is pressed, the LCD will display the DRAM error address on the main PCB, Slot 1, Slot 2, and Slot 3 in turn.
- 6) If a SIMM DRAM has an error, replace the SIMM corresponding to the above memory map information.

If the DRAM on the main PCB has an error, replace referring to the table below;

Lower order address (where an error occurs)	DRAM chip to be replaced	
	*A	*B
0, 4, 8, C	#3	#5
1, 5, 9, D	#9	#16
2, 6, A, E	#4	#7
3, 7, B, F	#14	#20

*A: If the upper digit of the data is wrong.

*B: If the lower digit of the data is wrong.

Note:


- There may be a case where the above sequence does not work correctly due to complete RAM failure, or in faulty assembly such as a solder bridge or ineffective soldering etc.
- “PRINT CHECK” may be displayed when exiting from the Test mode. It will disappear in 20 or 30 seconds, displaying “READY” on the LCD. It is not a fault.

2.5 Program Version Display Mode


This mode displays the firmware version of the controllers.

<Procedure>


- 1) While holding down the Font button, turn on the power.
- 2) Hold down the Font button until Year/Month/Date of the program is displayed.

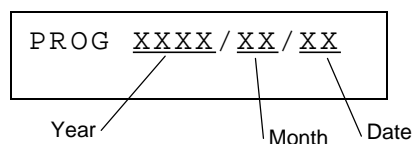


- 3) Press the Continue button. Hour/Minute/Second of the program is displayed.

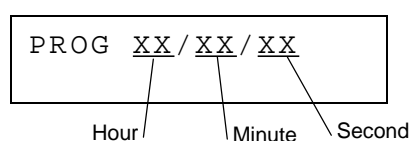


- 4) Press the Continue button. Year/Month/Date of the font data is displayed.

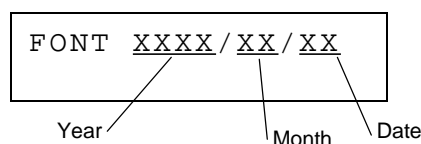


- 5) Press the Continue button. Hour/Minute/Second of the font data is displayed.

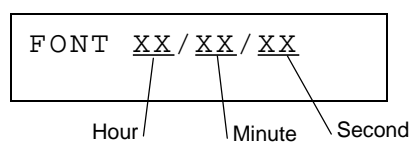

- 6) Press the Continue button. The version of the program and font data is displayed.

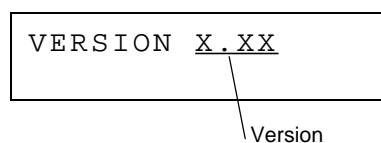

- 7) Press the Continue button. The version of the engine firmware is displayed.

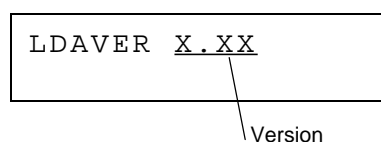

2.6 Test Print Mode

This mode prints the specified pattern continuously in order to check the engine.

<Procedure>

- 1) Turn the printer to off-line.
- 2) While holding down the Shift button, press the Sel button. The message 'TEST PATTERN' appears. Press the SET button to enter the test mode and use the ▲ and ▼ buttons to select a test. One of the following menu displays appears;

LCD Display	Check item
TEST PRN = A - H	Halftone reproduction
TEST PTN = G - H	Line reproduction
TEST PTN = K2	Color reproduction, registration and jitter
TEST PTN = STRIPE	Fusing

2.7 NVRAM Reset Mode

This mode forces the NVRAM value of the video controller to be reset to the factory settings.

<Procedure>

- 1) While holding down the Set button, turn on the power.
- 2) Hold down the Set button until "RAM SIZE" is displayed on the LCD panel and the LEDs are all on momentarily.
- 3) The printer is reset to the factory setting.

3. ENGINE CONTROLLER MODE

This section describes the operation and setting procedures for each engine test in the Engine Controller Mode.

In order to go into the Engine Controller Mode, turn on the printer while holding down the Mode, Set and ▼ buttons.

3.1 Configuration of Operational Mode

This printer has the various functions as set out in Table 5-2 for the user to easily understand the operation status of the printer engine during maintenance work.

- (1) Normal Mode: After removing the main PCB from the printer and pressing the On Line button under the Engine Controller Mode, the printer goes into the Engine Normal Mode.

This mode provides functions to indicate the operation status of the printer and also messages relating to normal operations which the operator is controlling.

Note:


Be sure to remove the main PCB before the printer goes into the Engine Normal Mode. If you fail to do so, the printer goes into the sleep mode.

- (2) Service Mode: After turning on the printer in the off-line status, the printer goes into Service Mode.

This mode is a unique mode for the serviceman only and provides additional functions (codes 31 through 37) to confirm the operational status during maintenance work and '39 FACTORY MODE' to confirm and set the operational status of the main components.

Table 5-2

Turn on the printer while pressing the Mode, Set and ▼ buttons.

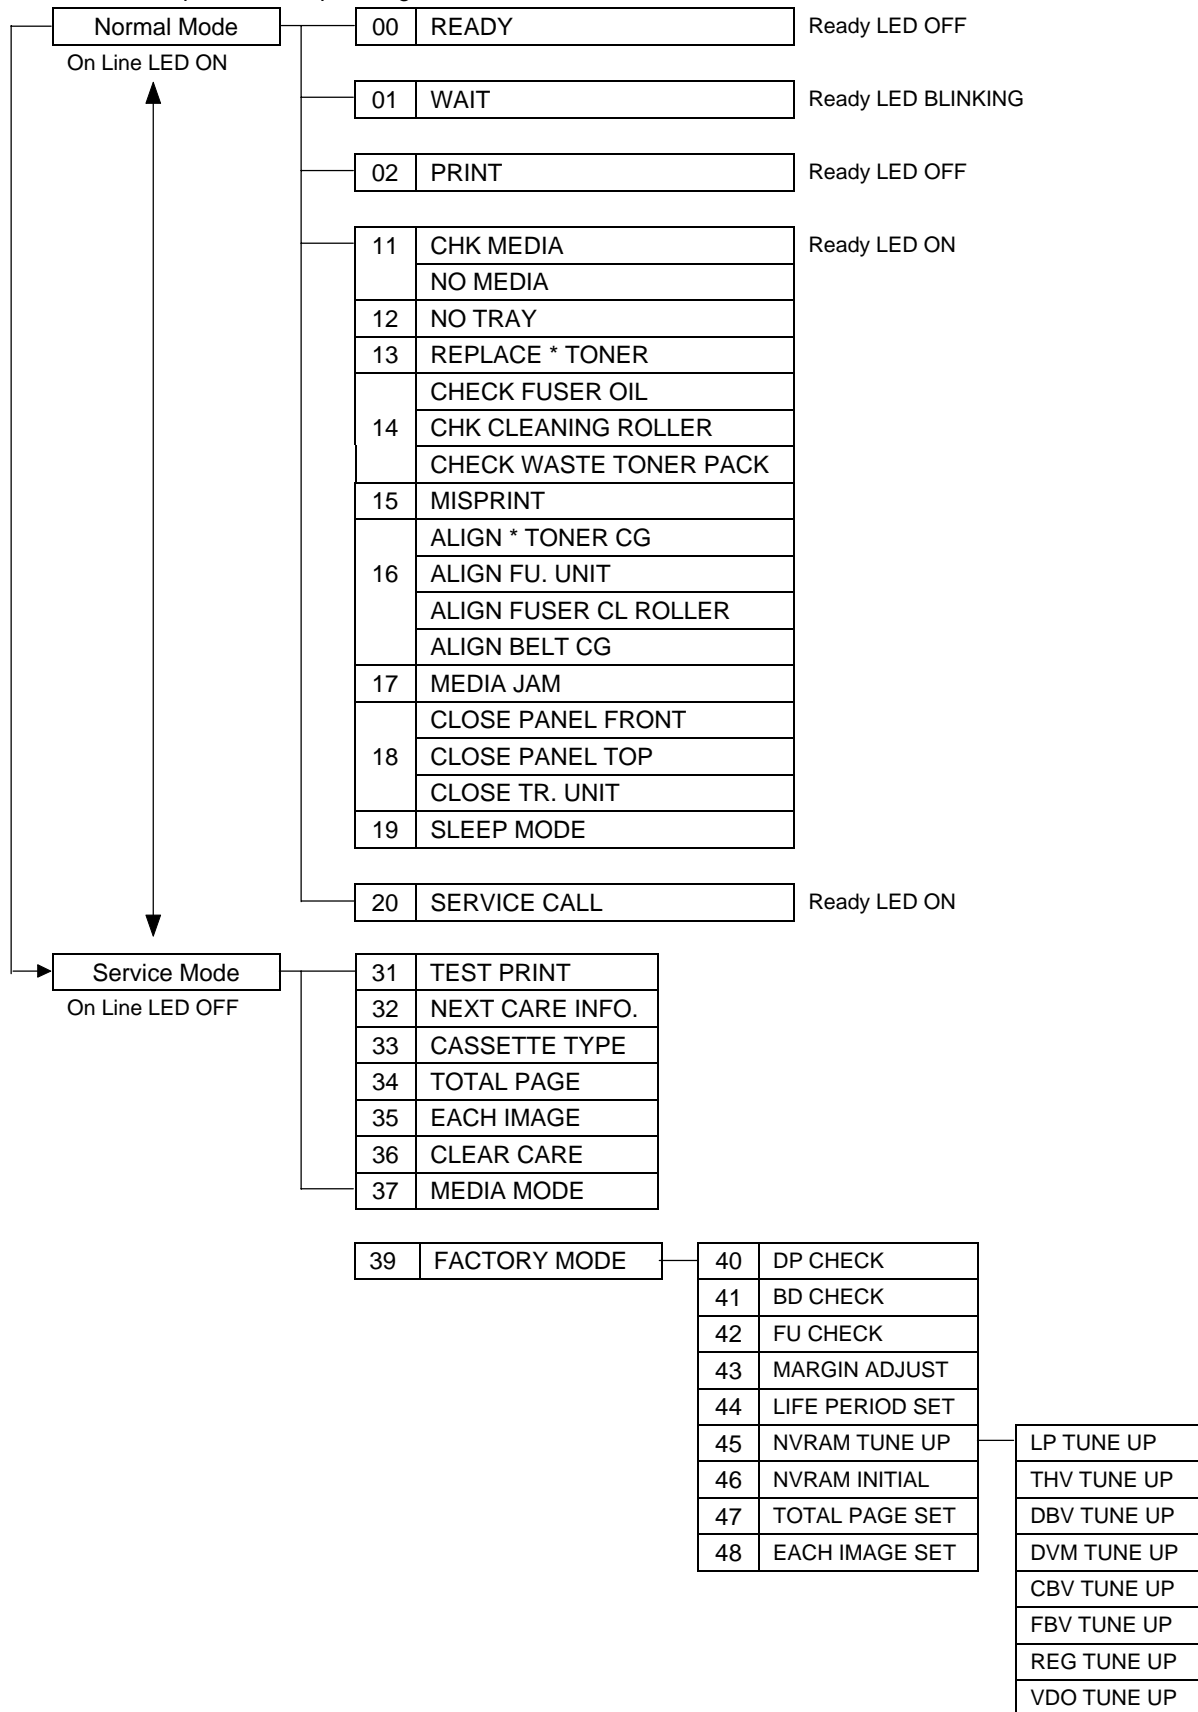

3.2 Operation of Normal Mode

Normal Mode displays on the control panel the operational status of the printer when in the "ONLINE" state and the necessary information for the operator to implement ordinary maintenance work.

Operation Procedures

- 1) Press the power button to turn on the printer while holding down the Mode, Set and ▼ buttons. Refer to Fig.5-1.
- 2) Press the On Line button so that the printer is on-line and the Ready LED starts to flash.
- 3) The Ready LED lights approximately 250 seconds after power-on and the printer is ready to print.

Normal Mode

See Table 5-2 for details of indications available in normal mode.

Code No.	LCD Message	Description of Message
00	<div>00 READY [*1] U: [*2] L: [*3] [*4]</div>	<ul style="list-style-type: none"> The Ready LED is lit. The engine has completed the warming-up process and is now ready to print. <p>[*1]: Applicable paper feeder is indicated as follows; /UPP: Upper Cassette /LOW: Lower Cassette</p> <p>[*2] / [*3]: Size of the paper loaded in the upper or lower cassette is indicated as follows; LT: Letter size DL: Envelope EX: Executive size CM: Envelope Commercial #10 LG: Legal size FR: Free size A4: A4 size UK: UK Quarto B5: B5 size FO: OHP</p> <p>[*4]: The code numbers of consumables or periodical replacement parts will be indicated if they have reached their life or should be replaced now. If no periodical replacement is required, there will be no indication in the LCD.</p> <p>For details of the periodical replacement parts, see 36. CLEAR CARE in the next section.</p>
01	<div>01 WAIT [*1] U: [*2] L: [*3] [*4]</div>	<ul style="list-style-type: none"> The Ready LED is lit. The engine is in the process of warming-up. For messages [*1], [*2], [*3] and [*4] that appear on the LCD, see the description for code number 00 above.
03	<div>02 PRINT [*5] [*1] U: [*2] L: [*3] [*4]</div>	<ul style="list-style-type: none"> The Ready LED lit. The engine is ready to print. For messages [*1], [*2], [*3] and [*4] that appear on the LCD, see the description for code number 00 above. <p>[*5]: Print color is indicated as follows; Y: Yellow M: Magenta C: Cyan K: Black YM: Yellow & Magenta YMCK Full Color</p>

Code No.	LCD Message	Description of Message
11-1	<div>11 CHK MEDIA [*1] [*4]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. <p>[*1]: Applicable paper feeder is indicated as follows; /UPP: Upper Cassette /LOW: Lower Cassette</p> <ul style="list-style-type: none"> Confirm whether the applicable paper cassette is loaded with paper. Press the Feeder button if the media needs to be changed.
11-2	<p>NO PAPER</p> <div>11 NO MEDIA [*1] [*4]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. <p>[*1]: Applicable paper feeder paper empty condition is indicated as follows; /UPP: Upper Cassette /LOW: Lower Cassette</p> <ul style="list-style-type: none"> Replenish the empty cassette with paper. Press the Form Feed button if the media needs to be changed.
12	<p>NO TRAY</p> <div>12 NO TRAY [*1] [*4]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. <p>[*1]: Paper feeder without the paper cassette is indicated as follows; /UPP: Upper Cassette /LOW: Lower Cassette</p> <ul style="list-style-type: none"> Install the applicable media cassette to the paper feeder indicated on the LCD.
13	<p>REPLACE TONER</p> <div>13 REPLACE [*5] TONER [*4]</div>	<ul style="list-style-type: none"> The engine is ready to print. The Ready LED is lit. <p>[*5]: The toner empty condition is indicated by the color code as follows; Y: Yellow M: Magenta C: Cyan K: Black</p> <ul style="list-style-type: none"> Replace the indicated toner cartridge with a new one of the correct color.

Code No.	LCD Message	Description of Message
14-1	<p>CHECK FUSER OIL</p> <div>14 CHECK [*5] FUSER OIL[*F0]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. Replace the fuser oil bottle with a new one. This message will be automatically cleared by opening & closing the paper exit cover.
14-2	<div>14 CHECK CLEANING ROLLER[*4][*FC]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. Replace the cleaning roller with a new one. Execute the Clear Care Mode after the replacement of the cleaning roller to clear the Care Code [FC].
14-3	<p>CHECK WASTE TONER PACK</p> <div>14 CHECK TONER PACK[*4]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. Replace the waste toner pack with a new one. This message will be automatically cleared by opening & closing the front cover while replacing the waste toner pack. The message can also be cleared by pressing the Font button.
15	<p>MISPRINT</p> <div>15 MISPRINT [*6][*4]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. <p>[*6] The type of misprint error is indicated as follows;</p> <p>NOPQR: No PRREQ-N signal is available.</p> <p>PAPER: No paper is available in the feeder while executing the print operation after receipt of the print command.</p> <ul style="list-style-type: none"> This message can be cleared by pressing the Font button.
16-1	<div>16 ALIGN FU.UNIT [*4]</div>	<ul style="list-style-type: none"> The engine is stopped. The Ready LED is lit. The fusing unit is not installed. Reconfirm the installation status of the fusing unit. This message will be automatically cleared by opening & closing the paper exit cover. The message can also be cleared by pressing the Font button.

Code No.	LCD Message	Description of Message
16-2	ALIGN FUSER CL ROLLER <div>16 ALIGN FUSER CL ROLLER [*4]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. The cleaning roller is not installed. Reconfirm the installation status of the cleaning roller. This message will be automatically cleared by opening & closing the paper exit cover. The message can also be cleared by pressing the Font button.
16-3	ALIGN TONER CG <div>16 ALIGN [*5] TONER CG [*4]</div>	<ul style="list-style-type: none"> The engine is ready to print. The Ready LED is lit. <p>[*5]: The color of the incorrectly installed toner cartridge will be indicated as follows; Y: Yellow M: Magenta C: Cyan K: Black</p> <ul style="list-style-type: none"> Reinstall the toner cartridge correctly. This message will be automatically cleared by opening & closing the front cover.
16-4	<div>16 ALIGN BELT CG [*4]</div>	<ul style="list-style-type: none"> The engine is stopped. The Ready LED is lit. The OPC belt cartridge is not installed. Reconfirm the installation status of the OPC belt cartridge. This message will be automatically cleared by opening & closing either the paper exit cover or front cover.
17	PAPER JAM <div>17 PAPER JAM [*7] [*4]</div>	<ul style="list-style-type: none"> The engine is stopped. The Ready LED is lit. <p>[*7]: The kind of jam (location of jam) is indicated as follows; FEED: Yellow INNER: Magenta OUTER: Cyan DRUM: Black</p> <ul style="list-style-type: none"> This message can be cleared by pressing the Font button after opening & closing the front cover, back cover and paper exit cover.

Code No.	LCD Message	Description of Message
18-1	<p>CLOSE PANEL</p> <div>18 CLOSE PANEL [*8] [*4]</div>	<ul style="list-style-type: none"> The engine is in standby. The Ready LED is lit. <p>[*8]: The open cover is indicated as follows; FRONT: Front Cover TOP: Paper Exit Cover</p> <ul style="list-style-type: none"> This message can be cleared by opening & closing the indicated cover.
18-2	<p>SET TR.UNIT</p> <div>18 CLOSE TR.UNIT [*4]</div>	<ul style="list-style-type: none"> The engine is stopped. The Ready LED is lit. The transfer unit is open. Reconfirm the installation status of the transfer unit. This message can be cleared by opening and closing the rear access cover.
19	<p>SLEEP MODE</p> <div>19 SLEEP MODE [*4]</div>	<ul style="list-style-type: none"> The engine is idling. The Ready LED is lit. This mode is cleared by sending a WAKE-UP command (EC24) from the video controller. The printer is ready to print after the warming-up process of the engine.
20	<p>SERVICE CALL</p> <div>20 SERVICE CALL [*9]</div>	<ul style="list-style-type: none"> The engine is in standby. The Ready LED is lit. <p>[*9]: Service Call error code is indicated as follows; For the details of error codes, refer to Chapter VIII "Troubleshooting" in this manual.</p>

3.3 Service Mode


Service mode is a unique mode for the maintenance of the printer only, without the video controller card. In this mode, you can check the operation status of the printer engine Off-line and also carry out maintenance work for each of the printer components.

Procedure

- 1) Hold down the Mode, Set and ▼ buttons and turn the printer Power on.
- 2) Using the Font, Continue, Set and ▼ buttons, select the mode necessary for the maintenance work from the test list shown in Table 5-2.

How to designate the necessary mode

- 1) Press the Set or ▼ button so that service modes (a), (b) and (c) show up in sequence to be selected.
- 2) After selecting the desired mode, execute the selected mode by pressing the Continue button.
- 3) Press the Font button to exit the mode.

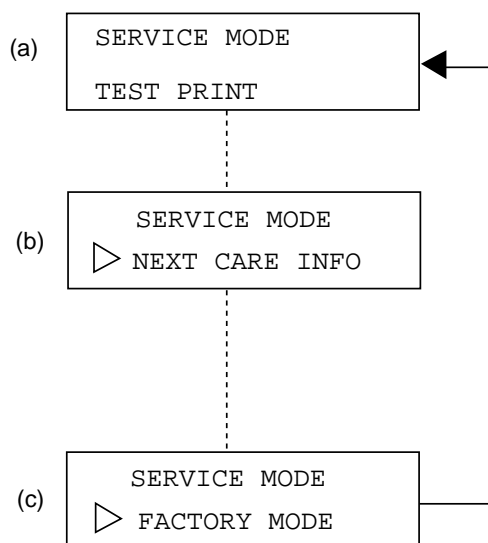

31	GRID PRINT
----	------------

A single color or two color (R,G,B) Grid Pattern and a full color Stripe Pattern can be printed as Test Prints.







Procedure

Description of Procedures	LCD Message
1) Press the Continue button. (a) → (b)	a) <div>SERVICE MODE ▶ TEST PRINT/NEXT</div>
2) Using the Set or ▼ button, select the desired pattern (ex. grid pattern), and then press the Continue button. (b) → (c)	b) <div>31 GRID PRINT ▶ GRID PRINT/STRIPE</div>
3) Using the Set or ▼ button, select the desired color (ex. red color), and then, press the Select button. (c) → (d)	c) <div>31 GRID PRINT ▶ Y/M/C/K/R/G/B</div>
4) After completion of the warming-up process, the desired pattern of the selected color will be continuously printed. (d)	R:YM G:YC B:MC
5) Print operation is suspended by pressing the Font button. (d) → (e)	d) <div>31 GRID PRINT [YM] U:[] L:[] []</div>
If it is desired to return to the previous screen (message), press the Font button one more time. (e) → (d)	e) <div>31 GRID PRINT ▶ Y/M/C/K/R/G/B</div>
6) If it is desired to return to On-line mode, press the On Line button. (f) → (g)	f) <div>SERVICE MODE TEST PRINT</div>
	g) <div>01 WAIT [] U:[] L:[] []</div>

32	NEXT CARE INFORMATION
----	-----------------------

Information relating to the replacement timing of periodical replacement parts can be obtained. This is the life for each of the components in images or pages.

      Procedure

Description of Procedures	LCD Message
<p>1) Press the Continue button after selecting Screen (a) "NEXT CARE INFO". (a) → (b)</p> <p>2) Using the Set or ▼ button, select the care code for which you need the information. 2: Fuser Cleaner (FC) 7: OPC Belt Cartridge (BL) 8: Fusing Unit (FU) 9: Replacement Kit 120K (120K) (b)</p> <p>3) After selecting the code, press the Continue button. Then, the number of images or printouts corresponding to the selected code is displayed. (b) → (c) through (f)</p> <p>4) Screen (c) through (f) can be cleared by pressing the Font button. (f) → (e) → (d) → (c) → (b) Press the Font button one more time at screen (b) to return to the service mode. (b) → (a)</p>	<p>a) </p> <p>b) </p> <p>c) </p> <p>d) </p> <p>e) </p> <p>f) </p>

33	CASSETTE TYPE
----	---------------

The type of paper feeding cassette can be selected. Type A is for the USA, type B is for Europe and type C is for Japan.

Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "CASSETTE TYPE". (a) → (b)	a) <div>SERVICE MODE ▷ CASSETTE TYPE</div>
2) Using the Set or ▼ button, select the code of the desired cassette (A, B or C), and then press the Continue button.	b) <div>33 CASSETTE TYPE TYPE=<A / B / C></div>
3) Press the Font button to exit the mode from screen (b). (b) → (c)	c) <div>SERVICE MODE ▷ CASSETTE TYPE</div>

34	TOTAL PAGE
----	------------

The total number of printouts can be confirmed.

Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "TOTAL PAGE" mode. (a) → (b)	a) <div>SERVICE MODE ▷ TOTAL PAGE</div>
2) A 6 digit number is displayed. This number represents the total number of pages that have been printed out. (b)	b) <div>34 TOTAL PAGE 003600 P</div>
3) Press the Font button to exit the mode from screen (b). (b) → (c)	c) <div>SERVICE MODE TEST PRINT</div>

35	EACH IMAGE
----	------------

Number of created images for each color used in printing can be confirmed.

Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "EACH IMAGE" mode. (a) → (b)	a) <div>SERVICE MODE ▷ EACH IMAGE</div>
2) Using the Set or ▼ button, select the required color and then press the Continue button. (b) → (c)	b) <div>35 IMAGE OF ▷ Y/M/C/K</div>
3) The number of images created in the selected color is displayed. (Ex. Yellow) (c)	c) <div>35 IMAGE OF Y 000098P</div>
4) Press the Font button to exit this mode from screen (c). (c) → (d)	d) <div>35 IMAGE OF ▷ Y / M / C / K</div>
5) Using the Set or ▼ button, select another color and then press the Continue button to confirm the number of images created in that color.	
6) Press the Font button to return to the Service mode. (d) → (e)	e) <div>SERVICE MODE ▷ TEST PRINT</div>

Care Code counters displayed on the LCD can be cleared. Make sure that you clear the relevant CLEAR CARE mode whenever replacing periodical replacement parts with new ones. This mode should only be used to reset the counters after replacement of faulty consumables before their life expectancy is reached. For normal life replacement use the resets available in the Video controller mode




Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "CLEAR CARE" mode. (a) → (b)	a) <div>SERVICE MODE ▷ CLEAR CARE</div>
2) Using the Set or ▼ button, move the cursor to select the applicable CARE code and then press the Continue button. (b) → (c)	b) <div>36 CLEAR CARE No. =<1, 2, 3, 4, 5, 6, 7, 8, 9></div>
3) To clear the counter in CLEAR CARE, use the Set or ▼ button to select YES and then press the Continue button.	c) <div>CARED FC ROLL ▷ YES/NO</div>
<div> <div>Fuser cleaner (c)</div> <div>OPC belt cartridge (d)</div> <div>Fusing Unit (e)</div> <div>120K replacement kit (f)</div> </div> <div> <div>→ (g)</div> </div>	d) <div>CARED BC UNIT ▷ YES/NO</div>
6) Press the Font button to exit the CLEAR CARE mode. (g) → (h)	e) <div>CARED FU UNIT ▷ YES/NO</div>
	f) <div>CARED 120K UNIT ▷ YES/NO</div>
	g) <div>36 CLEAR CARE No. =<1, 2, 3, 4, 5, 6, 7, 8, 9></div>
	h) <div>SERVICE MODE ▷ TEST PRINT</div>

37	MEDIA MANAGE
----	--------------

The signal from the OHP sensor can be ignored when the media is selected to OHP. However, this mode should not be used under normal circumstances.

   Procedure

Description of Procedures	LCD Message
<p>1) Press the Continue button after selecting Screen (a) "MEDIA MANAGE". (a) → (b)</p> <p>2) Select DEFIANCE and then press the Continue button if the OHP sensor signal should be ignored. (b) → (c) In normal operation, the mode is preset to MANAGE.</p>	<p>a) </p> <p>b) </p> <p>c) </p>


39	FACTORY MODE
----	--------------

This mode consists of 9 (nine) modes for the confirmation of operation and the resetting functions necessary for maintenance work.


CAUTION

Before using this mode, ensure that you have the information available to reset the Page and Image counters to the correct values. See 34 TOTAL PAGES and 35 EACH IMAGE for information on how to get the readings before starting working with these functions.

Basic Configuration

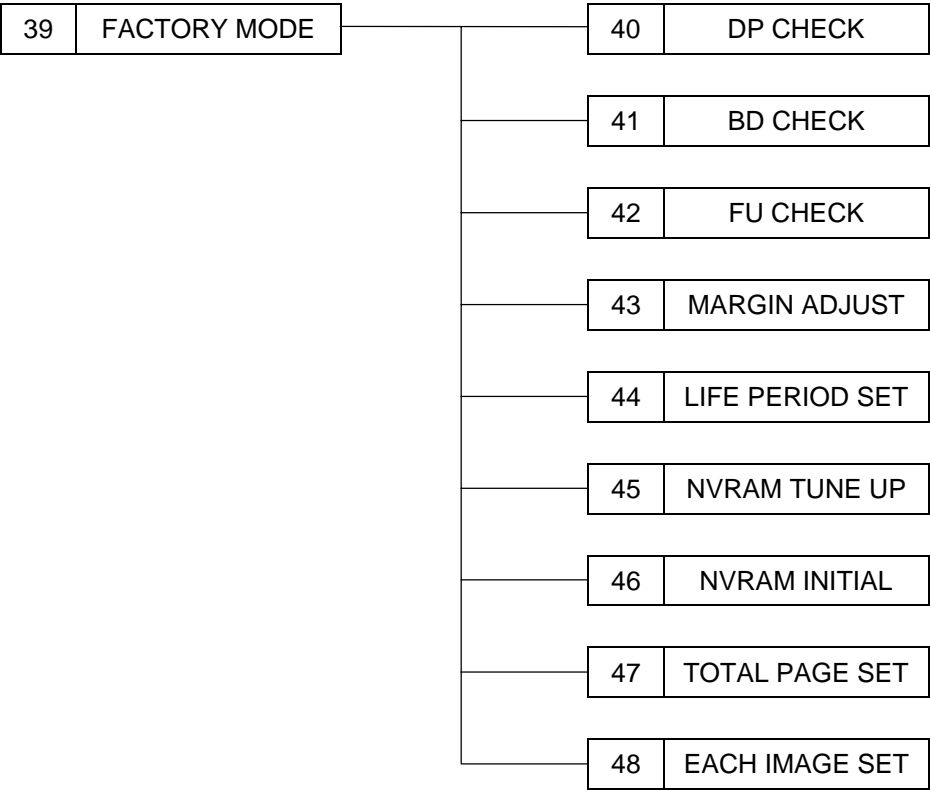

40	DP CHECK
----	----------

Each individual colour Toner cartridge can be driven.

Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "DP CHECK". (a) → (b)	a) <div>39 FACTORY MODE ▷ DP CHECK</div>
2) Using the Set or ▼ button, select the desired color and then press the Continue button. (b) → (c)	b) <div>40 DP CHECK ▷ Y/M/C/K</div>
3) The selected color toner cartridge starts to drive. If no error occurs in driving, the message "GOOD" is displayed in the LCD, otherwise "FAIL". (c) Toner cartridge drive will automatically stop after 60 seconds. (c) → (d)	c) <div>40 DP CHECK Y GOOD</div>
4) Press the Font button to stop the DP CHECK mode. (d) Press the Font button one more time to return to screen (a). (d) → (e)	d) <div>40 DP CHECK ▷ Y/M/C/K</div> e) <div>FACTORY MODE ▷ DP CHECK</div>

41	BD CHECK
----	----------

Laser beam position and laser power can be checked.

Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting screen (a) "BD CHECK". (a) → (b)	a) <div>39 FACTORY MODE ▷ BD CHECK</div>
2) The scanner motor scans the laser beam as it is rotating. If the scanning position of the laser beam is normal, "GOOD" is displayed on the LCD, otherwise "FAIL". (b) or (c) Scanner motor automatically stops rotating after 60 seconds. (d)	b) <div>41 BD CHECK GOOD</div>
3) Press the Font button to exit the BD CHECK mode. (b) → (d)	c) <div>41 BD CHECK FAIL</div>
	d) <div>39 FACTORY MODE ▷ DP CHECK</div>

42	FU CHECK
----	----------

Availability of oil in the fusing unit can be checked.

Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting screen (a) "FU CHECK". (a)	a) <div>39 FACTORY MODE ▷ FU CHECK</div>
2) The fusing unit starts the heat-up process, and checks the availability of fuser oil. If oil is available in the fusing unit, "GOOD" is displayed in the LCD, otherwise, "FAIL". (b)	b) <div>43 FU CHECK OIL:GOOD</div>
3) Press the Font button to exit the FU CHECK mode. (c)	c) <div>39 FACTORY MODE ▷ DP CHECK</div>

43	MARGIN ADJUST
----	---------------

The position of the top margin and left margin can be confirmed and adjusted within the range -3.5mm max. and +3.5mm max.

Note:

It is recommended to use the default value in normal use. Do not perform this mode frequently.

Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "MARGIN ADJUST". (a) → (b)	a) <div>39 FACTORY MODE ▷ MARGIN ADJUST</div>
2) Using the Set or ▼ button, select either TOP or LEFT and then press the Continue button. (b) → (c)	b) <div>43 MARGIN ADJUST ▷ TOP/LEFT/LEFT2</div>
3) The margins can be adjusted by up to 3.5mm left and right in 0.5mm steps from the reference value "0". Using the Set or ▼ button, select the amount of adjustment by selecting a number displayed in screen (c) or (d). The amount of adjustment selected will be displayed at the upper right corner of Screen (c) or (d). After confirming the desired amount of adjustment is displayed, press the Continue button to set the adjustment.	c) <div>43 TOP -2.0mm -<765432101>+</div>
	d) <div>43 TOP +2.5mm -<101234567>+</div>
4) Press the Font button to exit the MARGIN ADJUST mode. (b) → (d)	e) <div>43 MARGIN ADJUST ▷ TOP/LEFT/LEFT2</div>
5) Press the Font button one more time to return to FACTORY MODE. (e) → (f)	f) <div>39 FACTORY MODE ▷ DP CHECK</div>

Replacement life of the periodical replacement parts can be set.

Note:

It is recommended to use the default value in normal use. Do not adjust these settings without authorization.

Procedure

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "LIFE PERIOD" mode. (a) → (b)	a) <div>39 FACTORY MODE ▷ LIFE PERIOD SET</div>
2) Using the Set or ▼ button, select the desired code to be set and then press the Continue button. 2: Fuser Cleaner (a) → (b) 7: OPC Belt Cartridge (d) 8: Fusing Unit (e) 9: 120K Replacement Kit (f)	b) <div>44 LIFE PERIOD No.=<123456789></div> c) <div>PERIOD FC ROLL 012000 P SET</div> d) <div>PERIOD BC UNIT 05000 P SET</div> e) <div>PERIOD FU UNIT 040000 P SET</div> f) <div>PERIOD 120K UNIT 120000 P SET</div>
3) Use the Set or ▼ button to select the desired digit. Use the Continue button to input a new value to the selected (blinking) digit. Upon completion of inputting the values to be set, use the Set or ▼ button to select SET on the LCD and then press the Continue button to register the set value.	g) <div>44 LIFE PERIOD No.=<123456789></div> h) <div>39 FACTORY MODE ▷ DP CHECK</div>
4) Press the Font button to complete the setting work. (g)	
5) Press the Font button one more time to return to FACTORY MODE. (g) → (h)	

45	NVRAM TUNE UP
----	---------------

This mode is not used in normal operations, but is used when fine adjustment of the HVPSU voltage values is required. Do not use this mode unless you are sure that you understand the effects of making adjustments to the various charge voltages in the HVPSU.

This mode consists of following 5 (five) subordinate modes:

Configuration of NVRAM TUNE UP

		<Factory Setting>	
		HL-2400C	HL-2400Ce
45	NVRAM TUNE UP		
	45-1 LP TUNE UP	- 3	+ 1
	45-2 THV TUNE UP	0	0
	45-3 DBV TUNE UP	0	- 2
	45-4 CBV TUNE UP	0	0
	45-5 FBV TUNE UP	0	0

Note:

After performing NVRAM INITIAL in the next section, be sure to set the LP TUNE UP value to '- 3' as for HL-2400C and "+1" as for HL-2400Ce.

45-1	LP TUNE UP
------	------------

This mode should be used when optical density, line thickness and/or color reproduction needs to be adjusted. The adjustment is made by changing the laser power against the reference value 0 (zero) in the range -4 to +4.

Note: Do not perform this mode frequently.

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "NVM TUNE UP".(a) → (b)	a) <div>39 FACTORY MODE NVM TUNE UP</div>
2) After selecting LP TUNE UP Code 1, press the Continue button. (b) → (c)	b) <div>45 NVM TUNE UP No. =<123456789></div>
3) After selecting the color to be adjusted, press the Continue button. (Ex. Yellow). (c) → (d)	c) <div>45 LP TUNE UP Y/M/C/K</div>
4) The adjustment value can be adjusted in 8 steps between the -4 and +4. After selecting the required number press the Continue button. (d)	d) <div>45 YELLOW [0] -<432101234>+</div>
5) Press the Font button to finish the adjustment for yellow. (d) → (e) Repeat steps 3 to 5 if adjustment work is required for another color.	e) <div>45 LP TUNE UP Y/M/C/K</div>
6) Press the Font button to finish the adjustments. (e) → (f)	f) <div>45 NVM TUNE UP No. =<123456789></div>

45-2	THV TUNE UP
------	-------------

This mode shall be used when the transfer voltage needs to be adjusted due to errors such as transfer failure onto the media. The adjustment is used to change the transfer voltage, subject to the media to be used, against the reference value 0 (zero) in the range -4 to +4.

Note: Do not perform this mode frequently.

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "NVM TUNE UP".(a) → (b)	a) <div>39 FACTORY MODE NVM TUNE UP</div>
2) After selecting THV TUNE UP Code 2, press the Continue button. (b) → (c)	b) <div>45 NVM TUNE UP No. =<123456789></div>
3) After selecting the media to be adjusted, press the Continue button. (Ex. PPC). (c) → (d)	c) <div>45 THV TUNE UP PPC/OHP/LABEL</div>
4) Adjustment can be made in 8 steps between -4 and +4. After selecting a given number, press the Continue button. (d)	d) <div>45 THV PPC [] -<432101234>+</div>
5) Press the Font button to finish the adjustment for PPC. (d) → (e) Repeat steps 3 to 5 for other media such as OHP or Labels.	e) <div>45 THV TUNE UP PPC/OHP/LABEL</div>
6) Press the Font button to finish the adjustments. (e) → (f)	f) <div>45 NVM TUNE UP No. =<123456789></div>

45-3	DBV TUNE UP
------	-------------

This mode shall be used when the image optical density needs to be adjusted.
Adjustment of the developer bias voltage against the reference value 0 (zero) in the range -4 and +4.

Note: Do not perform this mode frequently.

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "NVM TUNE UP".(a) → (b)	a) <div>39 FACTORY MODE NVM TUNE UP</div>
2) After selecting DBV TUNE UP Code 3, press the Continue button. (b) → (c)	
3) After selecting the color to be adjusted, press the Continue button. (Ex. Magenta). (c) → (d)	b) <div>45 NVM TUNE UP No. =<123456789></div>
4) The adjustment value can be adjusted in 8 steps between -4 and +4. After selecting a given number, press the Continue button. (d)	c) <div>45 DBV TUNE UP Y/M/C/K</div>
5) Press the Font button to finish the adjustment work for Magenta. (d) → (e) Repeat steps 3 to 5 for each color.	d) <div>45 MAGENTA [] -<432101234>+</div>
6) Press the Font button to finish the DBV adjustment work. (e) → (f)	e) <div>45 DBV TUNE UP Y/M/C/K</div>
	f) <div>45 NVM TUNE UP No. =<123456789></div>

45-4	CBV TUNE UP
------	-------------

This mode should be used when image defects attributed to the OPC belt need to be improved. Adjustment is to alter the OPC belt bias voltage against the reference value 0 (zero) in the range -4 to +4.

Note: Do not perform this mode frequently.

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "NVM TUNE UP".(a) → (b)	a) <div>39 FACTORY MODE NVM TUNE UP</div>
2) After selecting CBV TUNE UP Code 5, press the Continue button. (b) → (c)	b) <div>45 NVM TUNE UP No. =<123456789></div>
3) The adjustment value can be adjusted in 8 steps between -4 and +4. After selecting a given number, press the Continue button. (c)	c) <div>45 CBV TUNE UP -<432101234>+</div>
4) Press the Font button to finish the adjustment work for CBV. (c) → (d)	d) <div>45 NVM TUNE UP No. =<123456789></div>

45-5	FBV TUNE UP
------	-------------

This mode should be used when image defects attributed to the transfer drum need to be improved. Adjustment is to adjust the drum cleaner bias voltage against the reference value 0 (zero) in the range -4 and +4.

Note: Do not perform this mode frequently.

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "NVM TUNE UP".(a) → (b)	a) <div>39 FACTORY MODE NVM TUNE UP</div>
2) After selecting FBV TUNE UP Code 6, press the Continue button. (b) → (c)	b) <div>45 NVM TUNE UP No. =<123456789></div>
3) The adjustment value can be adjusted in 8 steps between -4 and +4. After selecting a given number, press the Continue button. (c)	c) <div>45 FBV TUNE UP -<432101234>+</div>
4) Press the Font button to finish the adjustment work for FBV. (c) → (d)	d) <div>45 NVM TUNE UP No. =<123456789></div>

46	NVRAM INITIAL
----	---------------

This mode can initialize (data clear) all the data in the NVRAM on the MCTL PCB.



CAUTION

BEFORE USING THIS MODE, THE VALUES FROM '34 TOTAL PAGES' AND '35 EACH IMAGE' MUST BE READ TO ENABLE THE CORRECT VALUES TO BE RESET USING FUNCTIONS 47 AND 48.

Note:

- Do not perform this mode other than when replacing the MCTL PCB.
- After performing this mode, be sure to set the LP TUNE UP value to '- 3'.

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "NVRAM INITIAL". (a) → (b)	a) <div>39 FACTORY MODE NVM TUNE UP</div>
2) Select YES if NVRAM INITIAL should be executed. If not select NO. Press the Continue button so that the RAM INITIAL will be executed. (All the data will be cleared.) (b) → (c)	b) <div>46 NVRAM INITIAL YES / NO</div>
3) For the RAM data setting information, refer to Section 3.4.5 "Initial Setting of NVRAM" in this chapter.	c) <div>39 FACTORY MODE DP CHECK</div>

47	TOTAL PAGE SET
----	----------------

This mode can reset the number of total pages in the NVRAM whenever NVRAM INITIAL has been executed or the MCTL PCB is replaced.

Note: Do not perform this mode other than when replacing the MCTL PCB.

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "TOTAL PAGE SET". (a) → (b)	a) <div>39 FACTORY MODE TOTAL PAGE SET</div>
2) Use the Set or ▼ button to select the desired digit. Use the Shift button to input values to the selected (blinking) digit. Upon completing the input of the values, use the Set or ▼ button to select SET displayed on the LCD and then press the Continue button to store the set value.	b) <div>47 TOTAL PAGE 0 1 2 3 4 5 P SET</div>
	c) <div>39 FACTORY MODE DP CHECK</div>

48	EACH IMAGE SET
----	----------------

This mode can reset the number of total pages of each color in the NVRAM whenever NVRAM INITIAL is executed or the MCTL PCB is replaced.

Note: Do not perform this mode other than when replacing the MCTL PCB.

Description of Procedures	LCD Message
1) Press the Continue button after selecting Screen (a) "EACH IMAGE SET". (a) → (b)	a) <div>39 FACTORY MODE EACH IMAGE SET</div>
2) Select the desired color to reset in EACH IMAGE SET. (b) → (c)	b) <div>48 IMAGE OF Y/M/C/K</div>
3) Use the Set or ▼ button to select the desired digit. Use the Continue button to input values to the selected (blinking) digit. Upon completing the input of the values, use the Set or ▼ button to select SET on the LCD and then press the select button to store the set value. (c) → (d)	c) <div>48 IMAGE OF C 005432 P SET</div>
	d) <div>48 IMAGE OF Y/M/C/K</div>
4) Press the Font button to exit the EACH IMAGE SET mode.	e) <div>39 FACTORY MODE DP CHECK</div>

3.4 Adjustment Work Procedures

3.4.1 Adjustment of Top and Left Margin

The top and left margins can be adjusted by button operation on the control panel.

<Purpose>

If there is no top margin or left margin set for the print guarantee area or when the MCTL PCB is replaced, the adjustment of top and left margin will be required.

<Adjustment Method>

- 1) Execute "GRID PRINT" in Service Mode.
- 2) Measure the position 'A' and 'B' of top margin.
[Leading edge] $(A + B) / 2 \leq \text{Specification Value } 4.5 \pm 1.5\text{mm}$
- 3) Measure the position 'C' and 'D' of left margin.
[Left edge] $(C + D) / 2 \leq \text{Specification Value } 3.5 \pm 1.5\text{mm}$
- 4) If the specification value is not met, implement the adjustment.
 - i) Execute "43 MARGIN ADJUST" in the FACTORY MODE.
- 5) After adjustment execute "GRID PRINT" and confirm the margins.

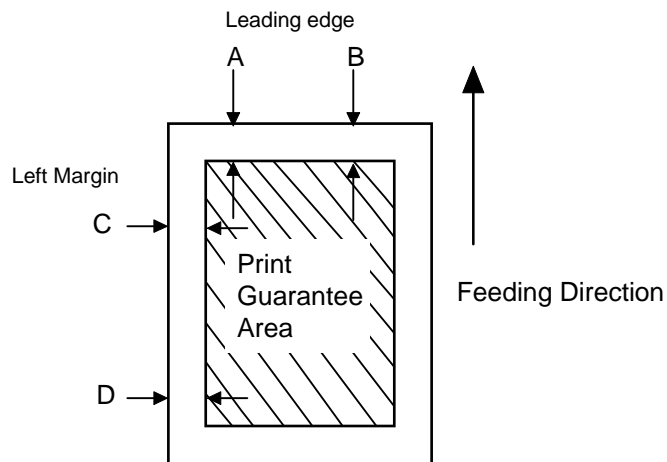


Fig.5-2

3.4.2 Setting of Engine NVRAM Data

As data in the NVRAM has been preset to the optimum value at the factory, it is not necessary to change the preset values under normal conditions. However, fine adjustment may be required subject to the media or operational conditions.

<Purpose>

Print quality can be improved by changing the preset value in the engine NVRAM.

<Procedures of Setting>

- 1) Follow the procedures set out in Section 2.3 'Service Mode' in this chapter.
- 2) Select RAM TUNE UP mode.
- 3) Select the desired TUNE UP mode.
- 4) Adjust the preset value to the appropriate value (step).
- 5) Carry out a test print to confirm the print quality.

<Subject TUNE UP Mode>

Mode	Subject of Adjustment	Purpose
LP TUNE UP	Adjustment of laser power	Optical density
THV TUNE UP	Adjustment of transfer voltage	Transfer efficiency
DBV TUNE UP	Adjustment of developer bias	Optical density
CBV TUNE UP	Adjustment of OPC belt bias	Optical density
FBV TUNE UP	Adjustment of cleaning roller bias	Drum cleaning efficiency

3.4.3 Confirmation and Setting of Total Number of Printouts

The total number of printouts is stored in the RAM. Confirmation and setting of total number of printouts can be carried out on the control panel.

<Purpose>

Total number of printouts will be reset when changing the MCTL PCB or executing an NVRAM INITIAL.

<Procedures of Setting>

- 1) Execute 47 TOTAL PAGE in the Factory Mode.
- 2) Reset the total number of printouts.
- 3) After making the setting, execute 34 TOTAL PAGE to confirm that the desired number of printouts is now set.

3.4.4 Setting of Number of Images for Each Color

The number of printouts for each color (4 colors) is stored in the RAM. Confirmation and setting of the number of images for each color can be carried out on the control panel.

<Purpose>

Number of images for each color will be reset when changing the MCTL PCB or executing NVRAM INITIAL.

<Procedures of Setting>

- 1) Execute 48 EACH IMAGE in the Factory Mode.
- 2) Reset the number of printouts for each color.
- 3) After making the setting, execute 35 EACH IMAGE SET to confirm that the desired number of images is now set.

3.4.5 Initial Setting of Engine NVRAM

Implement the initial setting at the replacement of MCTL PCB after clearing the contents of NVRAM.

<Purpose>

The number of images for each color will be reset when changing the MCTL PCB or executing NVRAM INITIAL.

<Procedures of Setting>

- 1) Before replacing the MCTL PCB, confirm the contents of the NVRAM for the following items.

“Factory Mode”

Code	Subject	Confirmation Value
43	MARGIN ADJUST	Top Margin Set Value (Default in ordinary case)
43	MARGIN ADJUST	Left Margin Set Value(Default in ordinary case)
44	LIFE PERIOD SET	Life Period Set Value(Default in ordinary case)
45	LP TUNE UP	Adjustment Value (“-3” for HL-2400C and “+1” for HL-2400Ce in ordinary case)
45	THV TUNE UP	Adjustment Value (“0” in ordinary case)
45	DBV TUNE UP	Adjustment Value (“0” for HL-2400C and “-2” for HL-2400Ce in ordinary case)
45	CBV TUNE UP	Adjustment Value (“0” in ordinary case)
45	FBV TUNE UP	Adjustment Value (“0” in ordinary case)
47	TOTAL PAGE SET	Total Print Count
48	EACH IMAGE SET	Image Count of 4 Colors

- 2) Execute 46 NVRAM INITIAL in the Factory Mode.
- 3) After implementing the NVRAM INITIAL, input the values obtained in procedure 1) into the NVRAM to complete the settings.

CHAPTER VI

PERIODIC MAINTENANCE

CONTENTS

CHAPTER VI PERIODIC MAINTENANCE VI-1

1. GENERAL.....	VI-1
1.1 Handling Precautions.....	VI-1
1.1.1 List of Maintenance Tools.....	VI-2
1.1.2 List of Consumables for Maintenance	VI-3
1.2 Periodic Maintenance Cleaning.....	VI-4
1.2.1 Cleaning the Register Roller.....	VI-7
1.2.2 Cleaning the Paper Guide	VI-8
1.2.3 Cleaning the Paper Exit Roller	VI-8
1.2.4 Cleaning the Transfer Roller.....	VI-9
1.2.5 Cleaning the Paper Discharger	VI-10
1.2.6 Cleaning the OPC Belt Cartridge.....	VI-11
1.2.7 Cleaning the Transfer Drum	VI-12
1.2.8 Cleaning the Dustproof Glass in the Scanner Unit.....	VI-13
1.2.9 Cleaning the Printer Interior.....	VI-14
1.3 Periodic Maintenance Parts and Maintenance Cycle	VI-15
2. PERIODIC MAINTENANCE PROCEDURES	VI-18
2.1 OPC Belt Cartridge Replacement.....	VI-18
2.2 Fusing Unit Replacement	VI-20
2.3 Transfer Roller Replacement.....	VI-22
2.4 Paper Discharger Unit Replacement	VI-24
2.5 Drum Cleaner Replacement	VI-26
2.6 Ozone Filter Replacement	VI-28
2.7 Paper Feed Roller and Separator Pad Replacement	VI-29
2.8 Transfer Drum Replacement	VI-30

CHAPTER VI PERIODIC MAINTENANCE

1. GENERAL

1.1 Handling Precautions

Since this high quality laser printer is a precision equipment, daily checking and periodic maintenance is indispensable to maintain the expected high performance.

The following is the list of important precautions & action items for maintenance and periodic replacement parts:

- 1) Refrain from any operation, disassembly or modification that is not set out in this manual.
- 2) When assembling or disassembling the printer, turn off the power supply and unplug the power cable from the power outlet before commencing any work.
- 3) Whenever any parts are replaced, confirm that all the removed and replaced parts are re-installed correctly prior to testing the printer.
- 4) Read carefully and take note of any precaution or warning labels affixed to any parts.
- 5) Unless otherwise specified, follow exactly the reverse order of the disassembly procedures for re-assembly. Do not get the types of removed screws mixed up and check that the screw is the correct length.
- 6) Do not use any solvent for cleaning, both inside and outside the printer.
- 7) It is strictly forbidden to dump waste toner with flammable substances or throw it into a fire. This is a very important caution to respect.

1.1.1 List of Maintenance Tools

Table 6-1 below lists the maintenance tools required for the printer.

Table 6-1

No.	Tool Name	Function
1	Phillips Screwdriver #1	For M3
2	Phillips Screwdriver #2	For M4
3	Phillips Screwdriver (short shank) #2	For M4
4	Slotted Screwdriver #1	For slotted head screw (M3)
5	Slotted Screwdriver #2	For slotted head screw (M4, M5)
6	Long-Nose Pliers	For general use
7	Pincette	For general use
8	Precision Driver Set (#1 ~ #6)	For general use
9	Pliers for C Ring	C Ring
10	Ruler (150mm)	For general use
11	Slide Caliper	For general use
12	Digital Meter	For general use
13	Handy Type Cleaner unique for toner	For cleaning
14	Soft Fur Brush	For cleaning

1.1.2 List of Consumables for Maintenance

Table 6-2 below lists the consumables for maintenance.

Table 6-2

No.	Tool Name	Quantity	Function
1	Toner Cartridge (Y)	1 piece	Test Print
2	Toner Cartridge (M)	1 piece	Test Print
3	Toner Cartridge (C)	1 piece	Test Print
4	Toner Cartridge (K)	1 piece	Test Print
5	Fuser Cleaner / Oil Bottle	1 piece	Test Print
6	OPC Belt Cartridge	1 piece	Test Print
7	Recommended Paper (A4 or letter)	5 sheets	Test Print
8	Recommended Paper (Transparency)	2 sheets	Test Print
9	Cotton Cloth	10~15 pcs	Cleaning
10	Cotton Swab	10~15 pcs	Cleaning
11	Grease	10 gram	M.G** PS265
12	Vinyl Bag	2 bags	Disposal

** M.G stands for Molybdenum Grease.

1.2 Periodic Maintenance Cleaning

See Table 6-3 for details of periodic maintenance cleaning for the following parts.

- 1) Register Roller
- 2) Paper Guide
- 3) Paper Exit Roller
- 4) Transfer Roller
- 5) Paper Discharger
- 6) OPC Belt Cartridge
- 7) Transfer Drum
- 8) Dustproof Glass of the Scanner Unit
- 9) Printer Interior



WARNING

- *Before starting any maintenance work, make sure you have unplugged the power cable from the power outlet*
- *There is a risk of electric shock working on the printer with the power connected.*

Periodic Maintenance Cleaning Work

Table 6-3

No.	Parts Name	Cleaning Work		Cleaning Cycle *1 (Condition or Case)
		Description	Section	
1	Register Roller	1. Open the transfer unit. 2. Clean roller and surrounding area using a dry cloth.	1.2.1	<ul style="list-style-type: none"> Defective image Smeared paper 20K prints
2	Paper Guide	1. Remove the media cassette from the printer. 2. Clean the paper guide using a dry cloth.	1.2.2	20K prints
3	Paper Exit Roller	1. Open the top cover. 2. Clean the paper exit roller using a dry cloth.	1.2.3	20K prints
4	Transfer Roller	1. Open the transfer unit. 2. Clean roller and surrounding area using a dry cloth.	1.2.4	<ul style="list-style-type: none"> Defective image Smeared paper Periodic maintenance
5	Paper Discharging Roller	1. Open the transfer unit. 2. Remove the paper discharger unit. 3. Clean the corona wire and case, using a cotton swab.	1.2.5	<ul style="list-style-type: none"> Defective image Paper jam Periodic maintenance
6	OPC Belt Cartridge	1. Remove the OPC belt cartridge. 2. Clean up spilt toner around the OPC belt cartridge and cleaning blade. 3. Clean the charger unit.	1.2.6	<ul style="list-style-type: none"> Defective image Periodic maintenance

Periodic Maintenance Cleaning Work

Table 6-3

No.	Parts Name	Cleaning Work		Cleaning Cycle *1 (Condition or Case)
		Description	Page	
7	Transfer Drum	1. Remove the transfer drum. 2. Clean the dirt from the transfer drum surface using a cloth.	1.2.7	<ul style="list-style-type: none"> • Defective image • Periodic maintenance
8	Dustproof Glass of Scanner Unit	1. Remove the toner cartridges and the OPC belt cartridge. 2. Remove the dust-proof glass. 3. Using a dry cloth and swab, clean the dirt from the dust-proof glass.	1.2.8	<ul style="list-style-type: none"> • Defective image • Periodic maintenance
9	Printer Interior Unit	1. Remove the toner cartridges and OPC belt cartridge. 2. Clean the printer's base, using a toner vacuum cleaner and dry cloth.	1.2.9	<ul style="list-style-type: none"> • Defective image • Periodic maintenance
[Note] *1: If a periodic maintenance agreement has been made, checks will be made at every periodic maintenance service to prevent any problems from occurring.				



CAUTION

The register roller, paper guide, and paper exit roller should be cleaned every 20K prints. Failure to do so may cause paper jams inside or outside of the printer.

1.2.1 Cleaning the Register Roller

The register roller should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

<Tools to Prepare>

Cotton cloth (2 ~ 3 pieces)

<Cleaning Procedure>

- 1) Turn off the power supply, and unplug the power cable.
- 2) Open the rear access cover (transfer unit).
- 3) Using a cotton cloth, clean the register roller incorporated in the transfer unit to remove the paper dust.

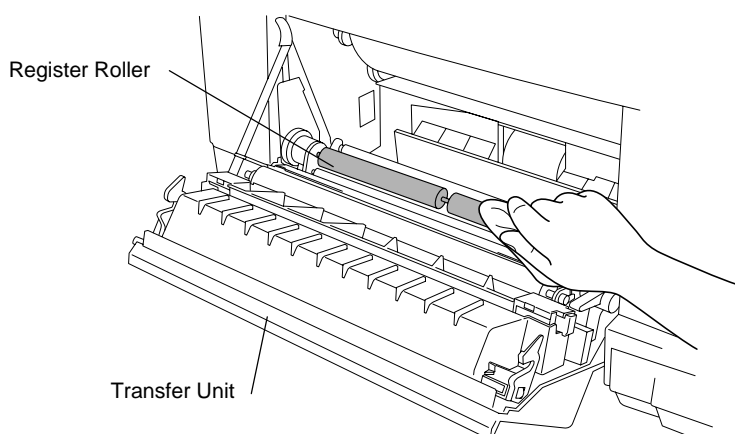


Fig.6-1



NEVER use alcohol or similar solvents for cleaning the register roller.

1.2.2 Cleaning the Paper Guide

The paper guide should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

<Tools to Prepare>

Cotton cloth (2 ~ 3 pieces)

<Cleaning Procedure>

- 1) Remove the media cassette from the printer.
- 2) Remove paper in the media cassette.
- 3) Using a dry cotton cloth, clean the paper guide to remove paper dust.

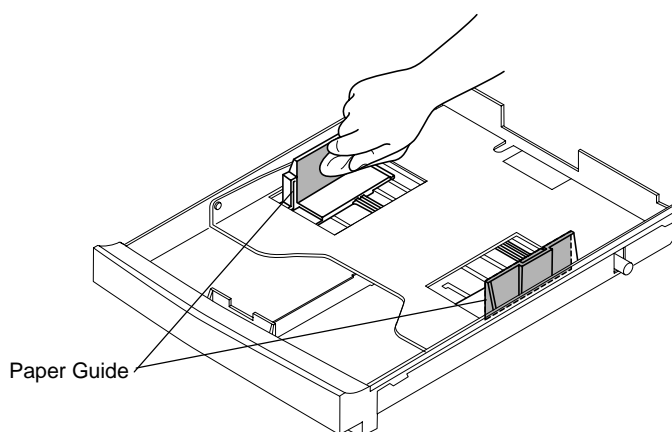


Fig.6-2

1.2.3 Cleaning the Paper Exit Roller

The paper exit roller should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

<Tools to Prepare>

Cotton cloth (2 ~ 3 pieces)

<Cleaning Procedure>

- 1) Turn off the power supply, and unplug the power cable.
- 2) Open the top cover (paper exit unit).
- 3) Using a dry cotton cloth, clean the paper exit roller to remove paper dust.

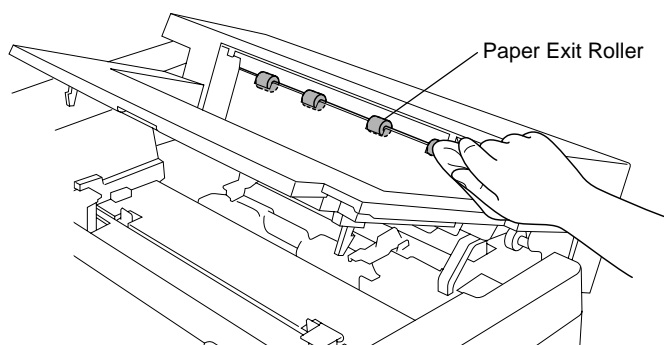


Fig.6-3

1.2.4 Cleaning the Transfer Roller

The transfer roller should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

<Tools to Prepare>

Cotton cloth (2 ~ 3 pieces)

<Cleaning Procedure>

- 1) Turn off the power supply, and unplug the power cable.
- 2) Open the rear access cover (transfer unit).
- 3) Using a cotton cloth, clean the transfer roller.

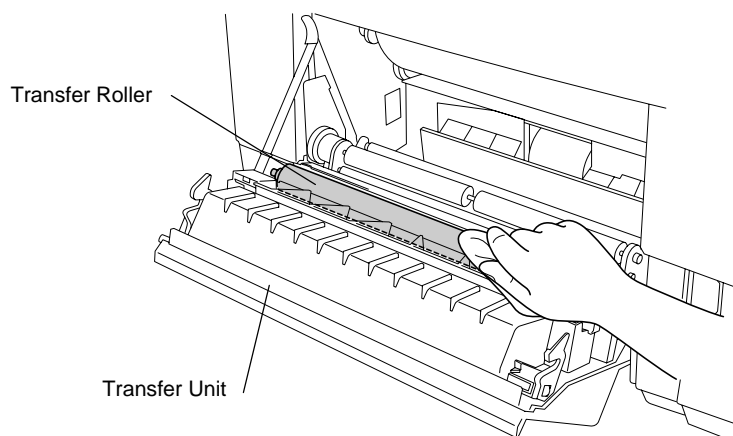


Fig.6-4



NEVER use alcohol or similar solvents for cleaning the transfer roller.

1.2.5 Cleaning the Paper Discharger

The paper discharger should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

<Tools to Prepare>

- 1) Cotton cloth (2 ~ 3 pieces)
- 2) Cotton swab (2 ~ 3 pieces)

<Cleaning Procedure>

- 1) Turn off the power supply, and unplug the power cable.
- 2) Open the transfer unit.
- 3) Remove the paper discharger unit.
(Fig.6-5)

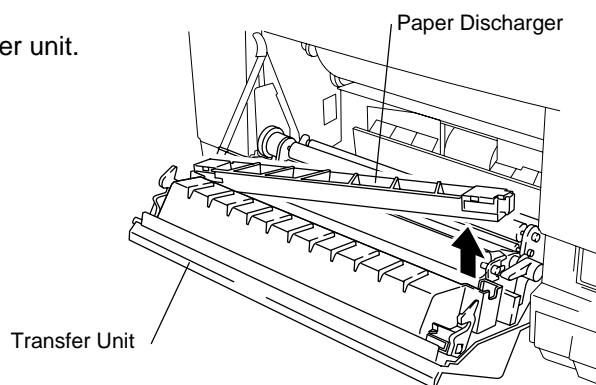


Fig.6-5

- 4) Clean the discharger case housing with a cotton cloth.
- 5) Clean the corona wire and the inside of the charger case with a cotton swab. (Fig.6-6)
- 6) Re-install the charger unit into the transfer unit.

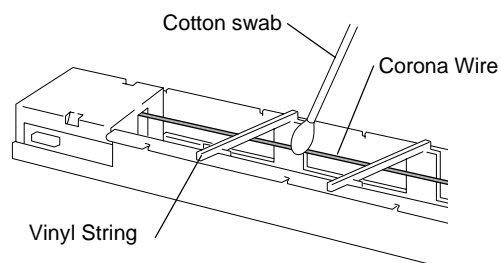


Fig.6-6





- Do not break the vinyl string on top of the case when cleaning the discharger unit.
- Do not break the corona wire.

1.2.6 Cleaning the OPC Belt Cartridge

The OPC belt cartridge should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

PRECAUTION

- Do not directly touch the OPC belt surface with bare hands or gloves.
- If the belt is exposed for more than two minutes to a light source of 800 lux, the belt may be damaged.

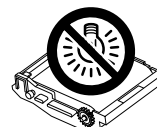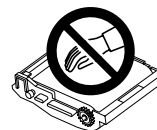

<Tools to Prepare>

- 1) Cotton cloth (2 ~ 3 pieces)
- 2) Cleaning brush (supplied with the printer)

<Cleaning Procedure>

- 1) Turn off the power supply.
- 2) Open the top cover and the front cover.
- 3) Release the belt cartridge lock levers to pull out the OPC belt cartridge.
- 4) Clean the OPC belt cartridge.
 - i) Remove any toner on the corona wire with the brush supplied with the printer. (Fig.6-7)
 - ii) Clean the OPC belt cartridge case with a cotton cloth.

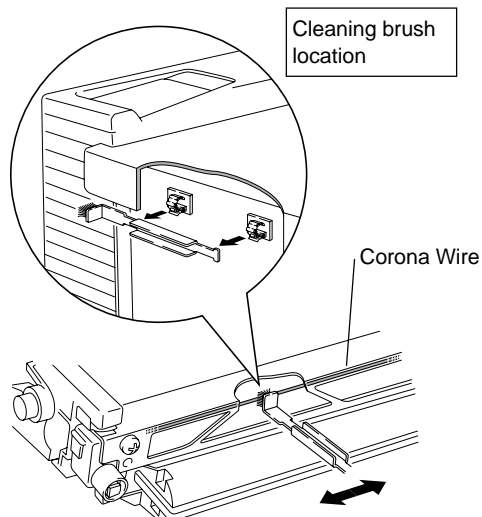


Fig.6-7

CAUTION

- Be sure to dry the OPC belt cartridge completely when cleaning it with a damp cotton cloth.
- Do not clean the OPC belt cartridge by using any solvents.

1.2.7 Cleaning the Transfer Drum

The transfer drum should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

<Tools to Prepare>

Cotton cloth (2 ~ 3 pieces)

<Cleaning Procedure>

- 1) Turn off the power supply.
- 2) Open the rear access cover.
- 3) Clean the surface of the transfer drum with a dry or damp cotton cloth.

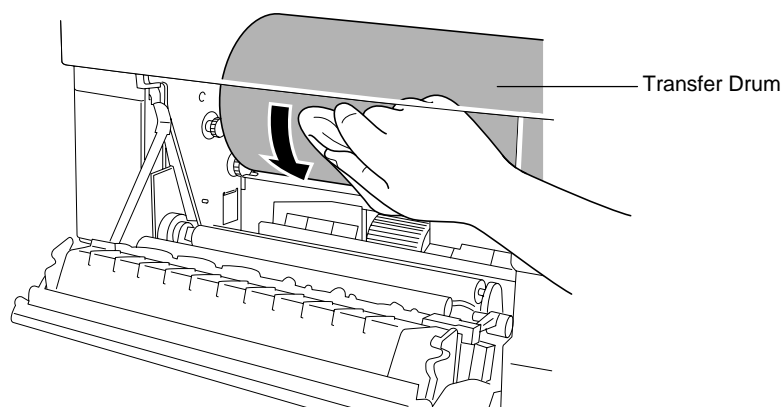


Fig.6-8

CAUTION

- *Be sure to dry the transfer drum completely after cleaning it with a damp cotton cloth.*
- *Do not clean the transfer drum by using solvent.*
- *Do not touch the transfer drum surface with bare hands, or scratch it.*

1.2.8 Cleaning the Dustproof Glass in the Scanner Unit

The dustproof glass in the scanner unit should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

<Tools to Prepare>

- 1) Cotton cloth (2 ~ 3 pieces)
- 2) Cotton swab (2 ~ 3 pieces)

<Cleaning Procedure>

- 1) Turn off the power supply.
- 2) Open the top cover and the front cover.
- 3) Remove the toner cartridges and the OPC belt cartridge.
- 4) Remove the dust-proof glass from the scanner unit.
- 5) Clean the surface of the dustproof glass with a cotton swab.
- 6) Replace the dustproof glass by aligning the ▲ marks on the scanner unit and the dustproof glass, ensuring it is locked correctly into place and cannot move.



CAUTION

NEVER use alcohol or similar solvents for cleaning the dustproof glass, otherwise it will be a cause of image failures.

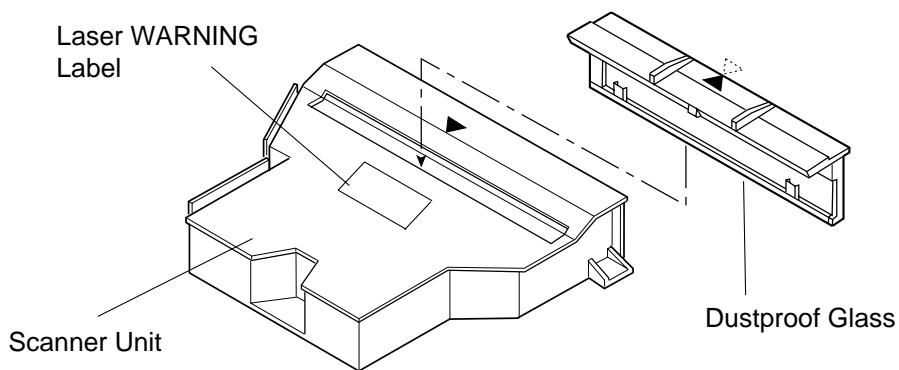


Fig.6-9

1.2.9 Cleaning the Printer Interior

The printer interior (bottom) should be cleaned according to the periodic maintenance cleaning cycle set out in Table 6-3.

<Tools to Prepare>

- 1) Toner vacuum cleaner
- 2) Cotton cloth (2 ~ 3 pieces)

<Cleaning Procedure>

- 1) Open the top cover and the front cover.
- 2) Remove the toner cartridges and the OPC belt cartridge.
- 3) Vacuum up toner scattered on the bottom of printer interior with a vacuum cleaner designed to handle toner particles.
- 4) Clean the printer interior with a cotton cloth and swab.
- 5) Replace the removed items.



CAUTION

Be sure not to contact the nozzle of the vacuum cleaner with the terminals of the interior. Failure to do so will cause damage to the electrical parts in the printer.

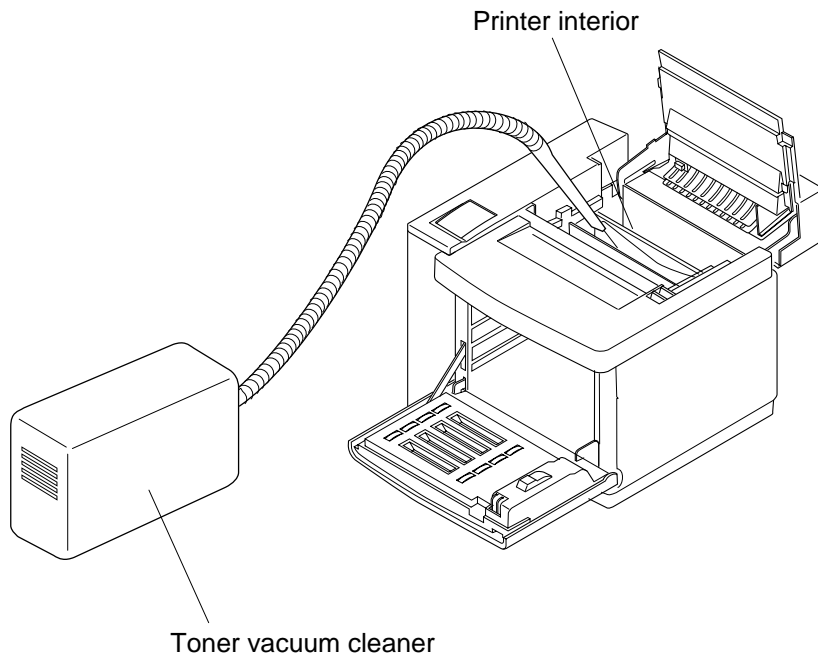


Fig.6-10

1.3 Periodic Maintenance Parts and Maintenance Cycle



Maintenance Work should be implemented according to the “Periodic Maintenance Parts and Maintenance Cycle” set out in Table 6-4.

Table 6-4: Periodic Maintenance Parts and Maintenance Cycle

No.	Maintenance Parts		Description		Replacement Cycle *1 (Condition or Case)
	Parts Name	No.	Function	Section	
1	OPC Belt Cartridge	Accessory	Consists of the OPC belt and forms an electrostatic latent image.	2.1	50K images or 12 months whichever comes first.
2	Fusing Unit *2	UH3470001(US) UH3471001(EC)	Fixes the toner image onto the transported paper.	2.2	40K prints
3	Transfer Roller *3	UH3480001	Transfers the toner image from the transfer drum onto the transported paper.	2.3	120K prints
4	Paper Discharger Unit *3	UH3481001	Separates paper from the transfer drum.	2.4	120K prints
5	Drum Cleaner *3	UH3483001	Cleans residual toner from the transfer drum.	2.5	120K prints
6	Ozone Filter *3	UH1945001	Absorbs ozone.	2.6	Every 12 months
7	Paper Feeding Roller / Separator Pad *3	UH3485001 UH3486001	Picks up sheets of paper one by one from the media cassette.	2.7	120K prints
8	Transfer Drum *3	UH3484001	Forms the toner image and transfers it onto paper.	2.8	300K images (120K prints)

- *1: These figures are based on an average of 5% coverage of the printable area for one color using laser paper. The frequency of replacement will vary, depending on the complexity of the prints, the percentage of coverage, and the type of media. Transparencies, glossy coated paper, and other specialty media will result in shortened consumable life.
- *2: You can order it as a 40K Kit (UH3508001 (US) / UH3509001 (EC))
- *3: You can order these item as a 120K Kit (includ. transfer roller / paper discharger unit / drum cleaner / ozone filter / paper feeding roller / separator pad / transfer drum) (UH3510001)

** After completing maintenance work, clear the message displayed on the control panel. (Refer to the list below.)

LCD Maintenance Message	Consumables
(Toner nearly empty)  K C M Y	Toner cartridge Black
(Toner nearly empty)  K C M Y	Toner cartridge Cyan, Magenta, or Yellow
FUSER OIL LOW	Oil Bottle
REPLACE FCR	Fuser Cleaner
REPLACE OPC BELT	OPC Belt Cartridge
REPLACE FUSER	Fusing Unit
REPLACE 120K KIT	Drum Cleaner / Paper Discharger / Transfer Roller / Paper Feed Roller / Separator Pad
REPLACE FILTER	Ozone Filter

LCD Operator Call Message	Consumables
TONER EMPTY K COLOR	Toner cartridge Black
TONER EMPTY CMY COLOR	Toner cartridge Cyan, Magenta, or Yellow
22 WASTE TONER	Waste Toner Pack
23 OIL EMPTY	Oil Bottle
24 CHANGE FCR	Fuser Cleaner
72 CHANGE FILTER	Ozone Filter

2. PERIODIC MAINTENANCE PROCEDURES

The printer displays messages on the control panel screen to indicate replacement is due for most of the periodic maintenance parts in both the Video Controller Mode and the Engine Controller Mode.

However, the procedure to clear the message differs between the two modes. The following sections describe the Video Controller Mode messages only and should be used when replacing parts that have reached their life.

If replacement parts have to be replaced for Service reasons before their life cycle is completed then the Engine Controller Mode should be used to reset the part life.

2.1 OPC Belt Cartridge Replacement

<Criterion of Replacement>

The OPC belt cartridge should be replaced with a new one at 50,000 images or 12 months whichever comes first.


When time is due for replacement of the OPC belt cartridge, the following message appears on the control panel.

LJ READY 001P T1
REPLACE OPC BELT



PRECAUTION

- *Do not directly touch the OPC belt surface with bare hands or gloves.*
- *If the belt is exposed for more than two minutes to a light source of 800 lux, the belt may be damaged.*

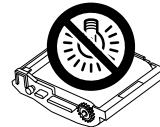

<Replacement Procedure>

- 1) Press the power button to turn off the printer.
- 2) Open the front cover and the top cover.



CAUTION

When installing or removing the OPC belt, be sure to open the front cover first. Failure to do so will cause the OPC belt to be damaged due to contact with the toner cartridges.

- 3) Release the belt cartridge lock levers at both sides (left & right). (Fig.6-11)
- 4) Pull out the OPC belt cartridge.

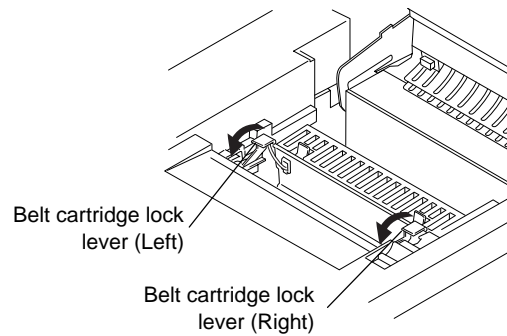


Fig.6-11

- 5) Prepare a new belt cartridge.
Remove the protective sheet from a new OPC belt cartridge, and then pull and remove the tension release pins from both sides (left & right). (Fig.6-12)

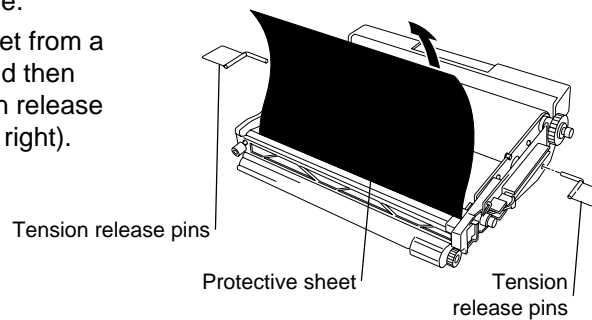


Fig.6-12

- 6) Install the new OPC belt cartridge into the guides at both sides in the printer. (Fig.6-13)

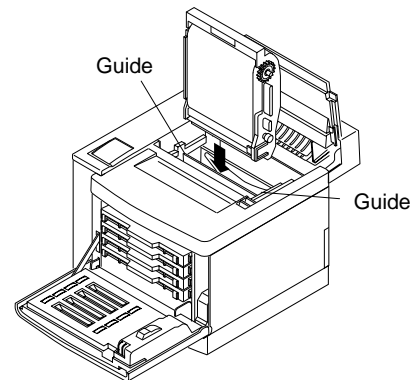


Fig.6-13

- 7) Set the belt cartridge lock levers at both sides (left and right).
- 8) Close the top cover and the front cover.
- 9) Press the power button to turn on the printer.
- 10) The printer starts the warming-up process.
- 11) When the printer has completed warming up, press the Reset button while holding down the Shift button, and select "RESET PARTS LIFE" and then "OPC BC".

2.2 Fusing Unit Replacement

<Criterion of Replacement>

The fusing unit should be replaced with a new one according to the periodical maintenance cycle set out in Table 6-4.

When the time is due for replacement of the fusing unit, the following message appears on the control panel.

LJ READY 001P T1
REPLACE FUSER

<Purpose of Replacement>

To prevent the print quality from declining due to the deterioration of the fixing unit's fuser rollers.



WARNING

The fusing unit and its surrounding area are very hot. Make sure prior to starting the replacement work that the fusing unit and its surrounding area are well cooled down, otherwise you may get burned.

<Necessary Tools and Replacement Materials>

- 1) Two or three pieces of cotton cloth for cleaning
- 2) Fusing Unit (one unit)

<Work Procedure>

Sequence of Disassembling

- 1) After turning off the printer, unplug the power cable from the power outlet.
- 2) Open the top cover.
- 3) Open the rear access cover and slacken the fusing unit securing screws (2 pcs.). (Fig.6-14)

Note:

Place paper on the transfer drum surface to protect it when slackening the screws.

- 4) Holding the handles at both ends of the fusing unit and remove the fusing unit from the printer. (Fig.6-15)
- 5) Remove the oil bottle and the fuser cleaner.

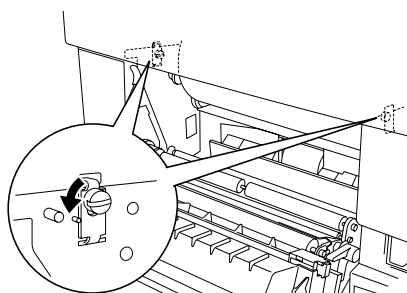


Fig.6-14

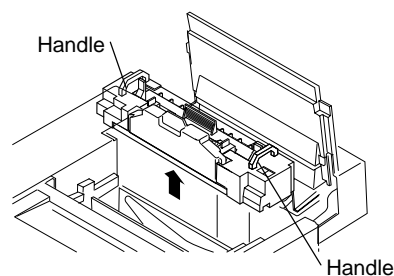


Fig.6-15

CAUTION

- When removing the fusing unit, take care to keep the unit level so that no oil leakage or spillage occurs.
- When shipping the printer, remove the oil bottle and the fuser cleaner from the fusing unit. After removing the oil bottle, be sure to remove the oil remaining in the fusing unit with the supplied syringe. Failure to do so will cause severe damage to the printer.

Sequence of Replacement

- 1) Prepare a new fusing unit before starting the replacement work.
- 2) Pull out the orange protective parts fitted between the rollers of the fusing unit out. (Fig.6-16)
- 3) Install the oil bottle and fuser cleaner to the new fusing unit.

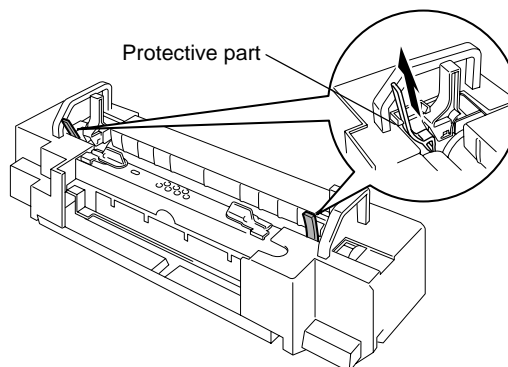


Fig.6-16

Sequence of Assembling

- 1) Install the new fusing unit onto the printer.
 - i) After setting the fusing unit in place, lightly press down the unit to firmly connect to the connector on the base. (Fig.6-17)
 - ii) Tighten the securing screws while pressing down the fusing unit. Check the metal hook of the screw at the left hand secures the fusing unit correctly.
 - iii) Close the rear cover and top cover.

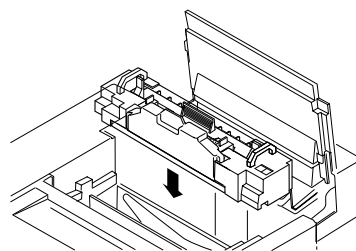


Fig.6-17

PRECAUTION

When replacing the fusing unit, take time and great care to complete the job properly. Application of strong force to the fusing unit may result in the failure of the fusing unit and other parts.

- 2) Plug the power cable into the power outlet and turn on the printer.
- 3) Upon completion of the warming-up process;
Press the Reset button while holding down the Shift button, and select "RESET PARTS LIFE" and then "FUSING UNIT".

Note:

When installing the new fusing unit into the printer, you have to wait approximately for 30 minutes after the unit is installed to allow the fusing oil to circulate in the unit.

2.3 Transfer Roller Replacement

<Criterion of Replacement>

The transfer roller should be replaced at the same time as a new discharger unit according to the periodical maintenance cycle set out in Table 6-4.

When time is due for replacement of the transfer roller, the following message appears on the control panel.

LJ READY 001P T1
REPLACE 120K KIT

<Purpose of Replacement>

To prevent the transfer efficiency declining due to deterioration of the transfer roller.

<Necessary Tools and Replacement Materials>

- 1) Two or three pieces of cotton cloth for cleaning.
- 2) Transfer roller (one unit)

<Work Procedures>

Sequence of Disassembling

- 1) After turning off the printer, unplug the power cable from the power outlet.
- 2) Open the rear access cover. (Fig.6-18)

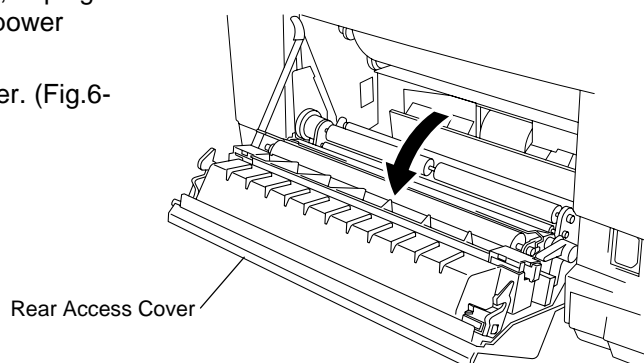


Fig.6-18

Sequence of Replacement

- 1) Lift the transfer roller lock lever to release the right hand end of the roller. The angle of lifting the lock lever is approx. 80° from the horizontal. (Fig.6-19)

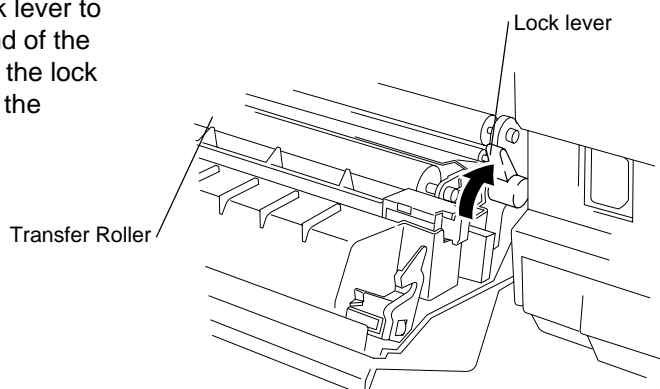


Fig.6-19

- 2) Push the tab of the left hand side to remove the shaft from the installation hole at the right side first, then remove the transfer roller. (Fig.6-20)
- 3) Install a new transfer roller into the printer.
- 4) Fix the transfer roller with the lock lever.

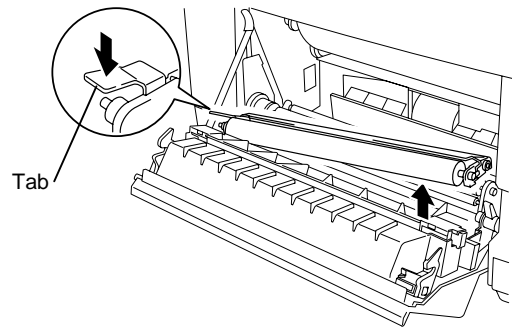


Fig.6-20

Sequence of Assembling

- 1) Close the rear access cover.
- 2) Plug the power cable into the power outlet and turn on the printer.
- 3) Upon completion of the warming-up process;
Press the Reset button while holding down the Shift button, and select "RESET PARTS LIFE" and then "TRANSFER ROLLER".

2.4 Paper Discharger Unit Replacement

<Criterion of Replacement>

The paper discharger should be replaced with a new discharger unit at the same time as the Transfer roller according to the periodical maintenance cycle set out in Table 6-4.

When time is due for replacement of paper discharger unit, the following message appears on the control panel.

LJ READY 001P T1
REPLACE 120K KIT

<Purpose of Replacement>

To prevent the discharging efficiency from declining due to deterioration of the paper discharger unit.



PRECAUTION

Do not touch the corona wire of the paper discharger unit.

<Necessary Tools and Replacement Materials>

- 1) Two or three pieces of cotton cloth for cleaning
- 2) Paper discharger (one unit)

<Work Procedures>

Sequence of Disassembling

- 1) After turning off the printer, unplug the power cable from the power outlet.
- 2) Open the rear access cover. (Fig.6-21)

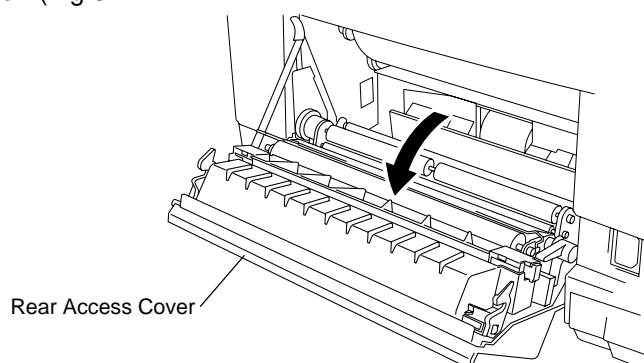


Fig.6-21

Sequence of Replacement

- 1) Pull the right hand side of the paper discharger slightly, then lift it out of the transfer unit to remove the paper discharger. (Fig.6-22)

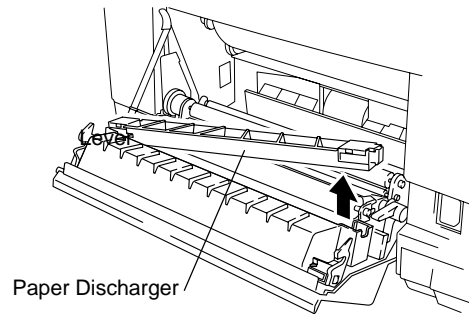


Fig.6-22

- 2) Clean the area where the paper discharger unit is mounted. (Fig.6-23)
- 3) Install the new paper discharger unit into the transfer unit.

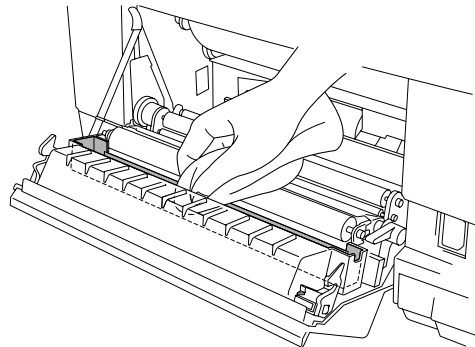


Fig.6-23

Sequence of Assembling

- 1) Close the rear access cover.
- 2) Plug the power cable into the printer, and turn on the printer.
- 3) Upon completion of the warming-up process;
Press the Reset button while holding down the Shift button, and select "RESET PARTS LIFE" and then "120K KIT".

2.5 Drum Cleaner Replacement

<Criterion of Replacement>

The drum cleaner should be replaced with a new one according to the periodical maintenance cycle set out in Table 6-4.

When time is due for replacement of the drum cleaner, the following message appears on the control panel.

LJ READY 001P T1
REPLACE 120K KIT

<Purpose of Replacement>

To prevent the cleaning efficiency from declining due to deterioration of the drum cleaner.



PRECAUTION

When installing the drum cleaner, firstly locate the bearing and the bias pole into the contacts. Reconfirm this connection prior to testing the printer.

<Necessary Tools and Replacement Materials>

- 1) Two or three pieces of cotton cloth for cleaning.
- 2) Drum cleaner (one unit)

<Work Procedure>

Sequence of Disassembling

- 1) Turn off the printer.
- 2) Open the top cover.

Sequence of Replacement

- 1) Remove the cleaner cover by releasing the two hooks.(Fig.6-24)

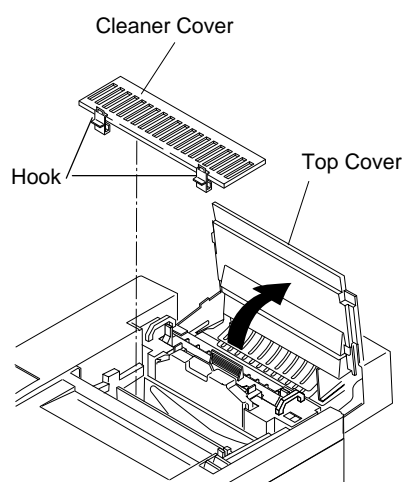


Fig.6-24

- 2) Holding the handle located on the top of the drum cleaner, push it backwards.
- 3) Remove the drum cleaner by lifting it out. (Fig.6-25)

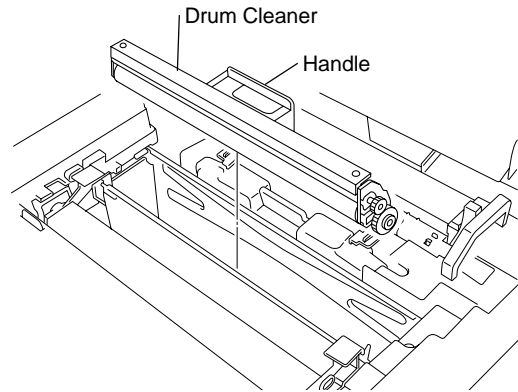


Fig.6-25

- 4) Clean the area where the drum cleaner is mounted. (Fig.6-26)
- 5) Install a new drum cleaner into the printer.

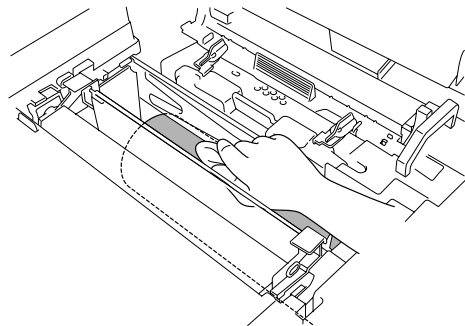


Fig.6-26



When installing the drum cleaner, be sure to put it into the printer correctly, indicated by a click.

Sequence of Assembling

- 1) Install the cleaner cover.
- 2) Close the top cover.
- 3) Press the power button to turn on the printer.
- 4) Upon completion of the warming-up process;
Press the Reset button while holding down the Shift button, and select "RESET PARTS LIFE" and then "120K KIT".

2.6 Ozone Filter Replacement

<Criterion of Replacement>

The ozone filter should be replaced with a new one according to the periodical maintenance cycle set out in Table 6-4. This is to prevent ozone from being exhausted due to the deterioration of the ozone filter.



PRECAUTION

Ozone filter should be replaced with a new filter every 12 months, otherwise it may cause an offensive smell.

<Necessary Tools and Replacement Materials>

No special tools and equipment are necessary for the replacement of the ozone filter.

<Work Procedure>

- 1) Remove the ozone filter case provided at the rear of the side cover (R).
- 2) Remove the ozone filter from the ozone filter case.
- 3) Install a new ozone filter to the filter case.
- 4) Install the ozone filter case to the side cover (R).

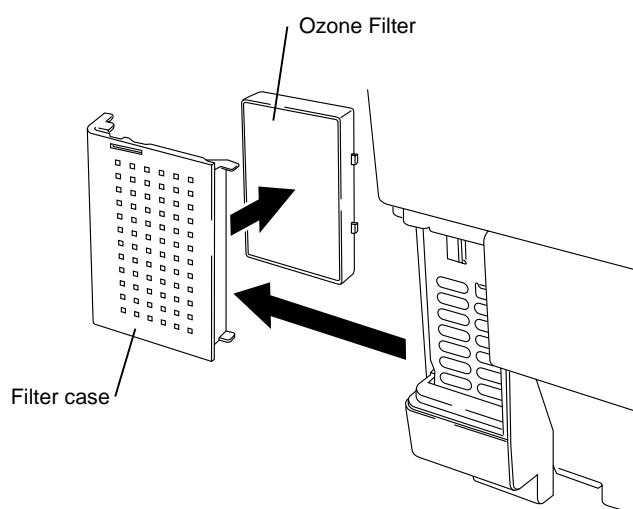


Fig.6-27

2.7 Paper Feed Roller and Separator Pad Replacement

<Criterion of Replacement>

The paper feeding roller and separator pad should be replaced with new ones according to the periodical maintenance cycle set out in Table 6-4.

When time is due for replacement of the paper feed roller and separator pad, the following message appears on the control panel.

LJ READY 001P T1
REPLACE 120K KIT

They also should be replaced when paper feed jams occur.

<Work Procedure>

- 1) Whenever paper feed jams occur, confirm the cause by following the information in Section 3 of Chapter VIII.
- 2) If the paper jam still occurs, replace the paper feeding roller and separator pad referring to Section 4.6.5 of Chapter VII.

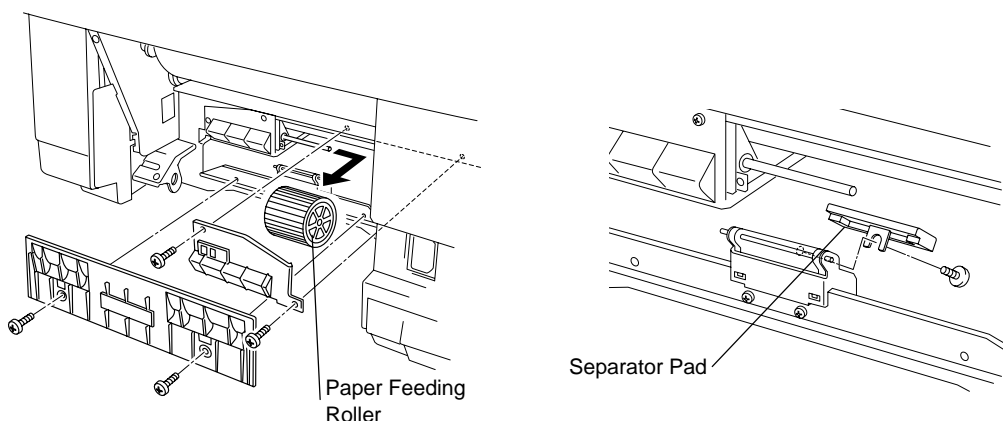


Fig.6-28

CAUTION

- *This is one of the periodic replacement items, not customer service. It should be implemented upon request of the customer or at periodic maintenance.*
- *After replacement, confirm the improvement of image failure by test printing.*

2.8 Transfer Drum Replacement

<Criterion of Replacement>

The transfer drum should be replaced with a new one according to the periodical maintenance cycle set out in the Table 6-4.

When time is due for replacement of the transfer drum, the following message appears on the control panel.

LJ READY 001P T1
REPLACE 120K KIT

It should be also replaced when an image failure occurs due to transfer drum damage.

<Work Procedure>

- 1) Whenever an image failure occurs, confirm the cause by following the information in Section 5 of Chapter VIII.
- 2) If the image failure still occurs, replace the transfer drum referring to Section 4.2.11 of Chapter VII.

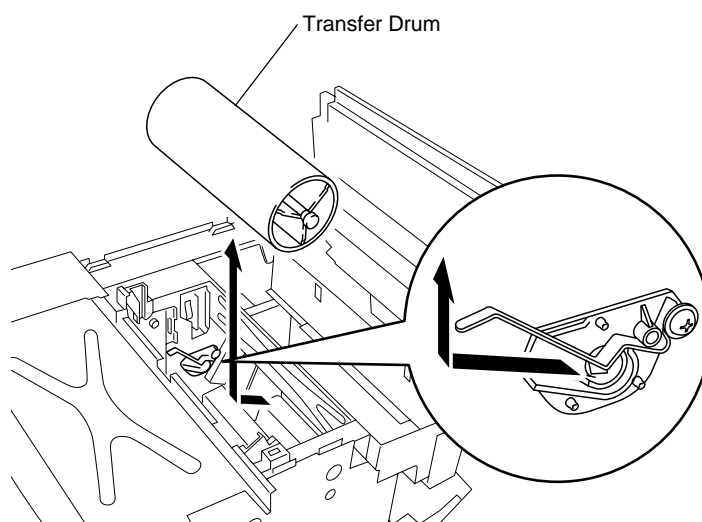


Fig.6-29



CAUTION

- *This is one of the periodic replacement items, not customer service. It should be implemented upon request of the customer or at periodic maintenance.*
- *After replacement, confirm the improvement of print quality failure by test printing.*

CHAPTER VII

DISASSEMBLY

CONTENTS

CHAPTER VII DISASSEMBLY..... VII-1

1. BEFORE STARTING DISASSEMBLY	VII-1
1.1 Precautions	VII-1
1.2 Preparation of Disassembly	VII-1
2. PARTS NAME	VII-3
2.1 Cover	VII-3
2.2 Circuit Boards (PCBs)	VII-4
2.3 Motor Units	VII-4
2.4 Clutches and Solenoids	VII-5
2.5 Sensors	VII-6
3. DISASSEMBLY FLOW	VII-7
4. DISASSEMBLY PROCEDURE	VII-8
4.1 Right Side of the Printer	VII-8
4.1.1 Side Cover (R)	VII-8
4.1.2 Base Cover (R)	VII-9
4.1.3 Registration Clutch (RECL)	VII-9
4.1.4 Fuser Clutch (FUCL)	VII-9
4.1.5 Drum Cleaner Clutch (FBCL)	VII-9
4.1.6 IOD2 PCB (with base)	VII-10
4.1.7 Developer Drive Motor (DM)	VII-11
4.1.8 Main Motor (MM)	VII-11
4.1.9 Paper Feeding Clutch (PCLU)	VII-12
4.1.10 Developer Clutch (K, Y, M, C)	VII-12
4.1.11 Developer Drive Unit	VII-13
4.1.12 Drum Cleaner Solenoid (FBSOL)	VII-13
4.1.13 Main Gear Unit	VII-14
4.1.14 Transfer Solenoid (TRSOL)	VII-14
4.1.15 Ozone Fan (OZFAN)	VII-15
4.1.16 Toner Sensor Assembly (TPD)	VII-15
4.1.17 Waste Toner Sensor (WTS)	VII-16
4.1.18 Waste Toner Feeder (L)	VII-16
4.2 Top of the Printer	VII-17
4.2.1 Upper Side Cover (LU)	VII-17
4.2.2 Panel PCB (including LCD)	VII-18
4.2.3 Side Cover (L)	VII-18
4.2.4 Base Cover (L)	VII-19
4.2.5 Upper Cover	VII-19
4.2.6 IOD1 PCB	VII-20
4.2.7 Control Fan (CTFAN)	VII-20
4.2.8 Interlock Switch (Top) (Paper Exit Unit)	VII-21
4.2.9 Drum Cleaner	VII-21
4.2.10 Waste Toner Feeder Unit / Belt Sensor (PBS)	VII-22
4.2.11 Transfer Drum	VII-22
4.2.12 Erase Lamp	VII-23
4.2.13 Drum Jam Sensor (DPJ)	VII-24


4.2.14 Oil Sensor (OIL)	VII-24
4.2.15 Interlock Switch (Front) (for Front Cover).....	VII-25
4.3 Left Side of the Printer	VII-26
4.3.1 MCTL PCB	VII-26
4.3.2 High Voltage Unit.....	VII-27
4.3.3 Interlock Switch (Rear)	VII-28
4.3.4 Drum Encoder Sensor (EN)	VII-29
4.3.5 Fuser Connector.....	VII-29
4.3.6 Rear Cover (R)	VII-30
4.3.7 Power Supply Unit.....	VII-30
4.3.8 Paper Size Sensor (PSU).....	VII-32
4.3.9 Toner Sensor (TTR)	VII-32
4.4 Paper Exit Unit	VII-33
4.4.1 Rear Cover (U)	VII-33
4.4.2 Top Cover (Paper Exit Cover) / Fuser Fan (FUFAN)	VII-33
4.4.3 Cleaning Roller Sensor (CRS).....	VII-36
4.4.4 Discharger Brush.....	VII-36
4.4.5 Paper Exit Roller.....	VII-37
4.4.6 Paper Exit Sensor (PT2)	VII-37
4.5 Front of the Printer	VII-38
4.5.1 Front Cover Unit	VII-38
4.5.2 Scanner Unit (Scanner Motor inclusive).....	VII-39
4.6 Rear of the Printer.....	VII-40
4.6.1 Rear Access Cover (L) / Transfer Unit	VII-40
4.6.2 Transfer Roller.....	VII-41
4.6.3 Register Roller.....	VII-41
4.6.4 Paper Feed Roller / Separator Pad	VII-42
4.6.5 Paper Empty Sensor (PE) / OHP Sensor (OHP).....	VII-43
4.6.6 Paper Feeding Sensor (PT1)	VII-43
4.7 Fusing Unit.....	VII-44
4.7.1 Fusing Heater Lamp	VII-44

CHAPTER VII DISASSEMBLY

1. BEFORE STARTING DISASSEMBLY

1.1 Precautions

Follow the precautions described below during maintenance work.

- (1) Do not implement any operation, disassembly or modification which is not set out in this manual.
- (3) This printer incorporates dangerous parts subject to warnings such as “High Temperature”, “High Voltage” and “Laser Radiation”. Before starting any work on this printer, make sure you have read and understand the warnings set out in this manual.
- (4) Collect and dispose of any waste toner cartridges removed during maintenance correctly in accordance with local regulations. Do not dispose of them with inflammable materials or dispose of them into a fire.
- (5) The grounding wire is disconnected when replacing or removing the DC power supply unit. After completing the replacement work, confirm that the grounding wire is reconnected correctly to the earth mark  .
- (6) Ensure that the type and length of screws removed during replacement of maintenance parts is noted and the correct screws are used during re-assembly. (See Table 7-1.)
- (7) Do not use any solvent such as alcohol for the maintenance of this printer.
- (8) Confirm that all the parts and covers are installed or assembled correctly before starting the test run after replacement of maintenance parts.
- (9) The re-assembly order is the reverse of the dis-assembly order. In all cases, follow the flow chart in reverse to re-assemble the printer. Where there is any change to the order, this is noted in the relevant section.

1.2 Preparation of Disassembly

Follow the procedure described below for preparation before commencing any work.

- (1) Ensure that the power cable is disconnected from the power outlet.
- (2) Remove **all consumable parts** (OPC belt cartridge, fuser cleaner, oil bottle, all toner cartridges, ozone filter) and **the Main (Video Controller) PCB**, and then store them correctly before starting dis-assembly.



PRECAUTION

- *Do not directly touch the OPC belt surface with bare hands or gloves.*
- *If the belt is exposed for more than two minutes to a light source of 800 lux, the belt may be damaged.*





 
 
 

 


Table 7-1: Table of Screw Sizes Used in the Printer

Class Code	Name of Screw	Size and Shape of Screw			Remarks
		M-Thread TS	Length	Sharp	
BT3X8	Cross recessed head tapping screw	T3	8mm		Used for plastic parts.
BT3X12		T3	10mm		
		T4	6mm		
BT4X8		T4	8mm		
BT4X10		T4	10mm		
ST3X6	S tight screw	ST	6mm		Used for steel parts fitted to steel plates.
M4X6	Cross recessed head tapping screw (Pan head)	M4	6mm		Used for frame and GND.
SP3	Unique screw for heater connector.	M3	10mm		Used for the fusing unit connector.
F4X6	Cross recessed head screw with flange.	F4	6mm		Used for the fusing unit.
FST3X10	Cross recessed head S tight screw with flange.	FST	10mm		Used for the fusing unit.
M2X10	Cross recessed head screw (Pan head)	M2	10mm		Used for the fusing unit.

2. PARTS NAME

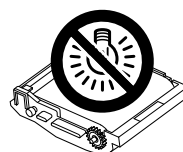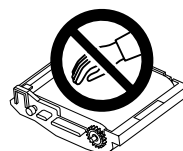2.1 Cover

<Front View>

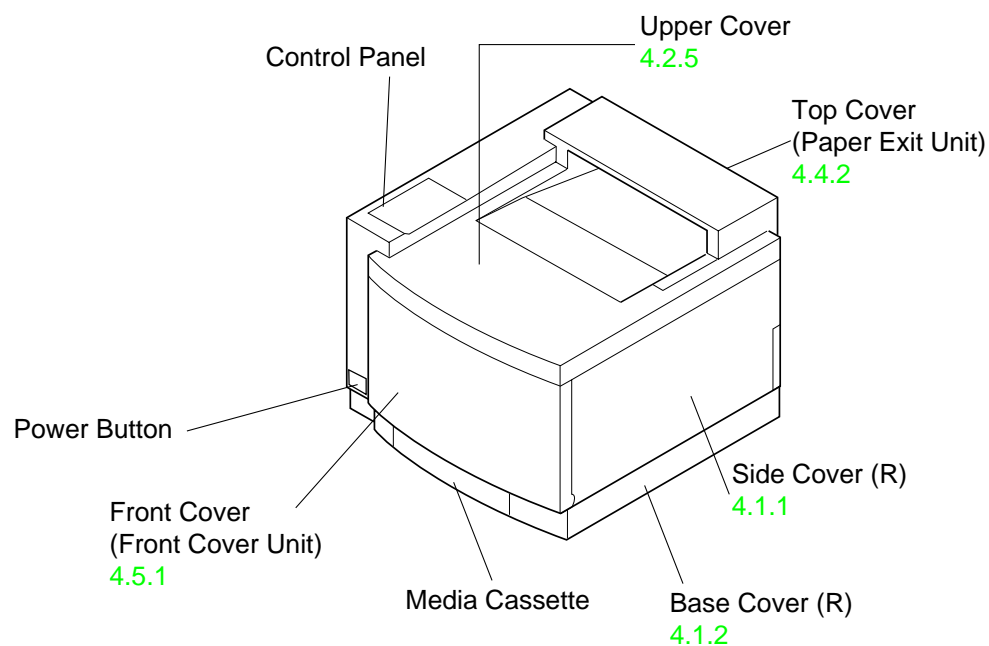


Fig.7-1

<Rear View>

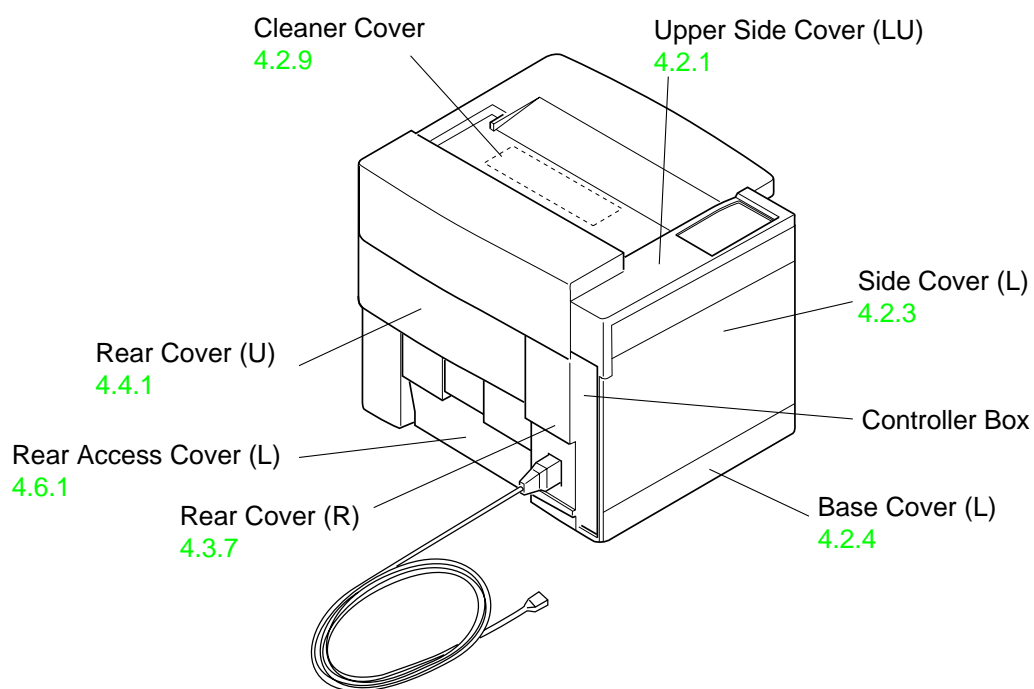


Fig.7-2

2.2 Circuit Boards (PCBs)

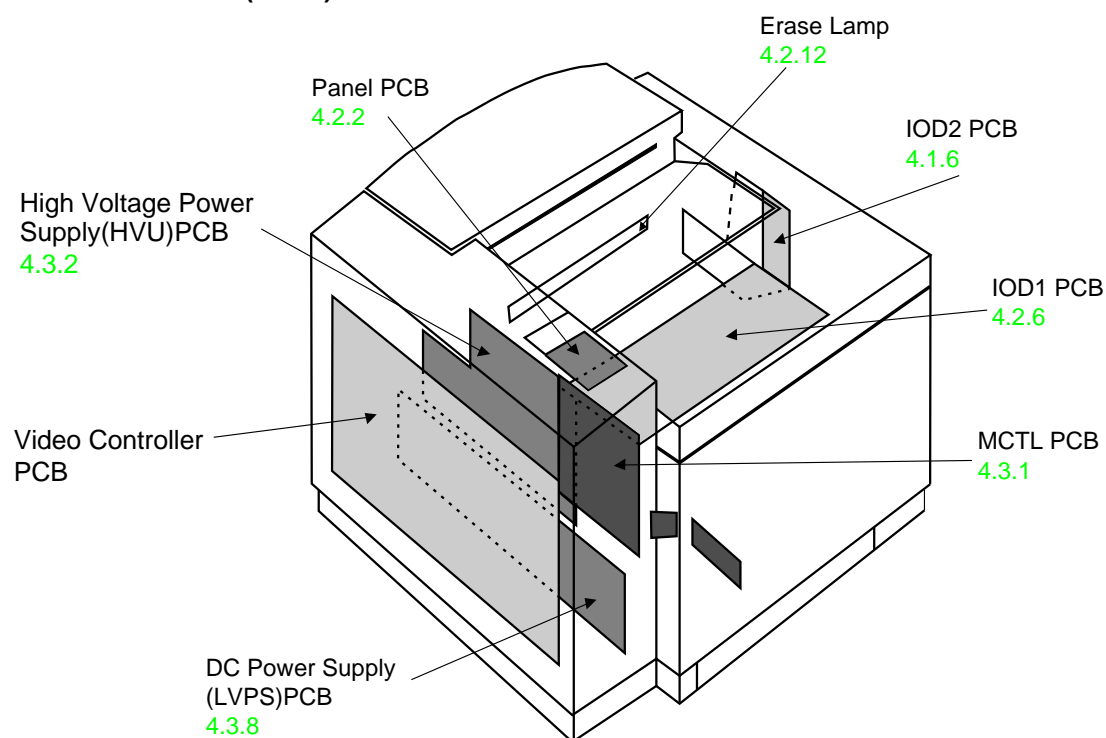


Fig.7-3

2.3 Motor Units

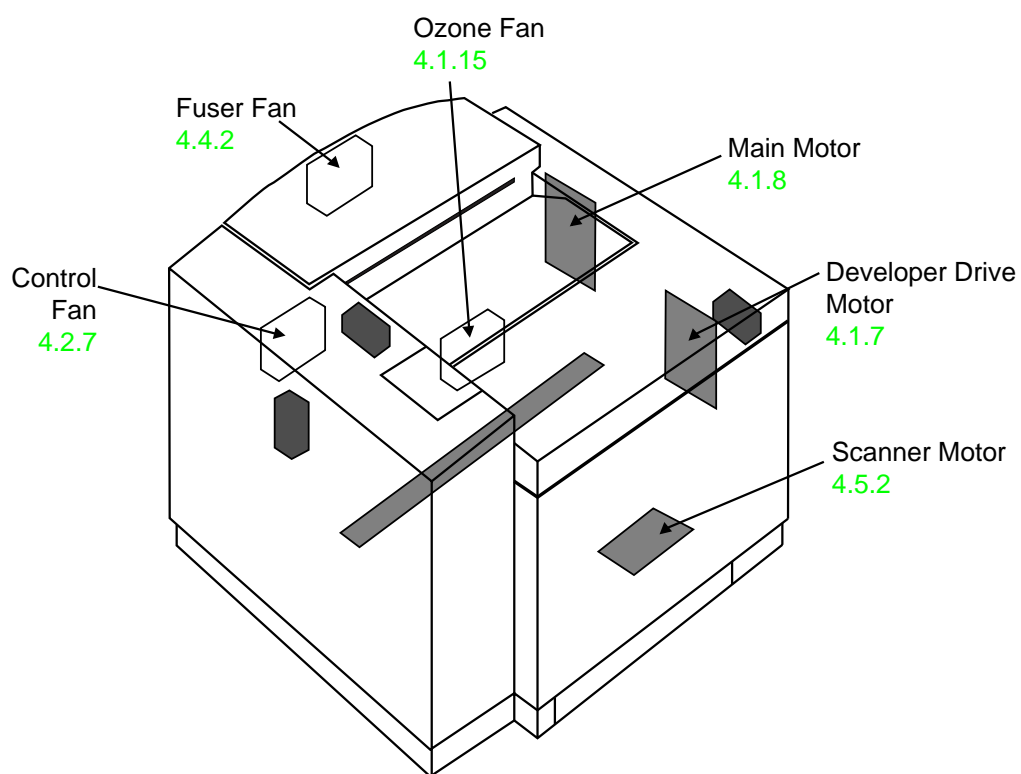


Fig.7-4

2.4 Clutches and Solenoids

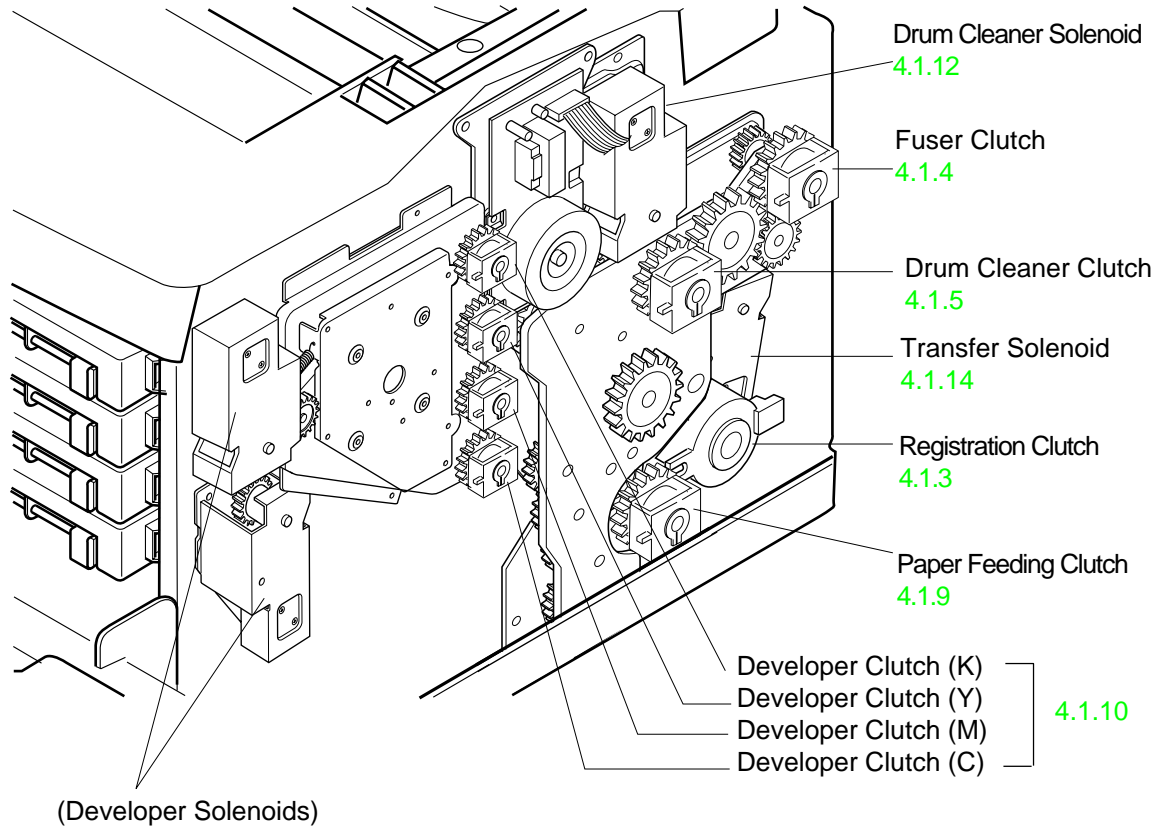


Fig.7-5

2.5 Sensors


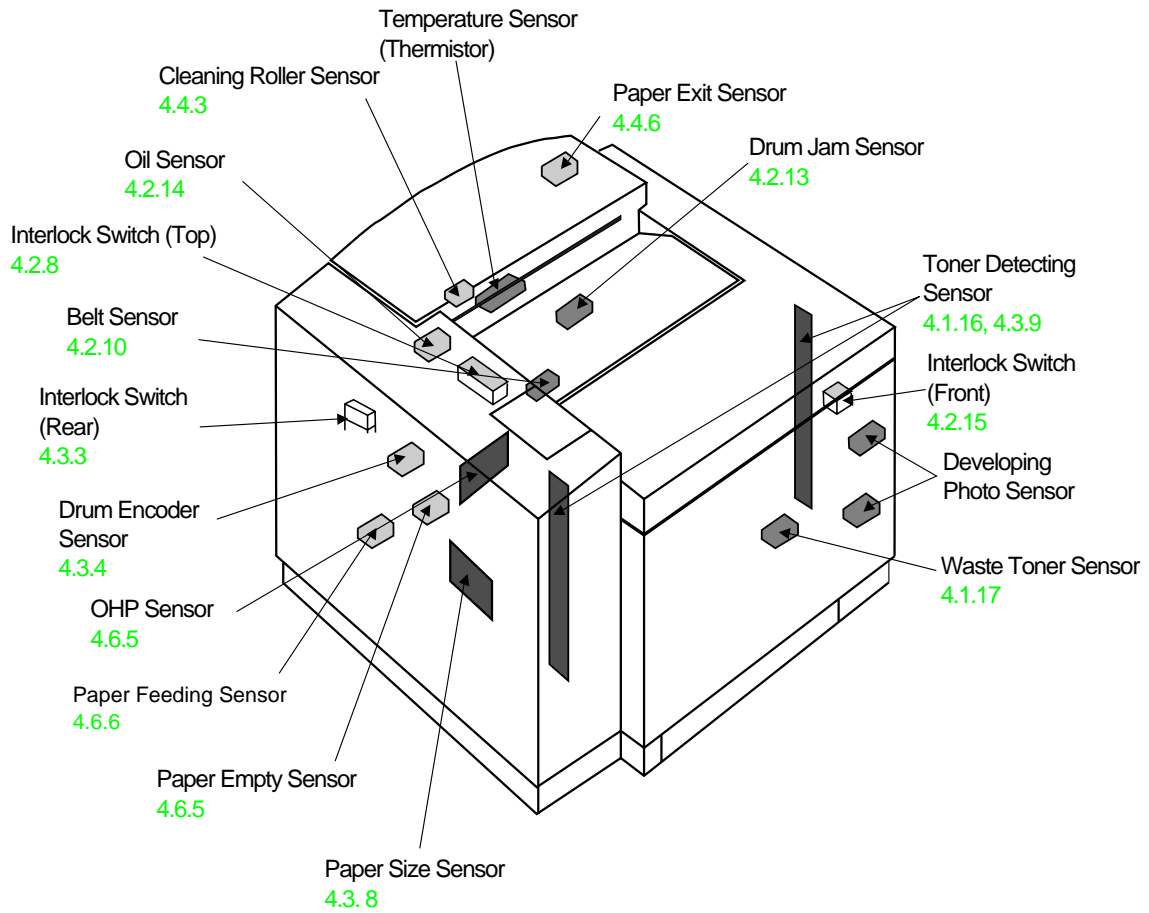


Fig.7-6

3. DISASSEMBLY FLOW

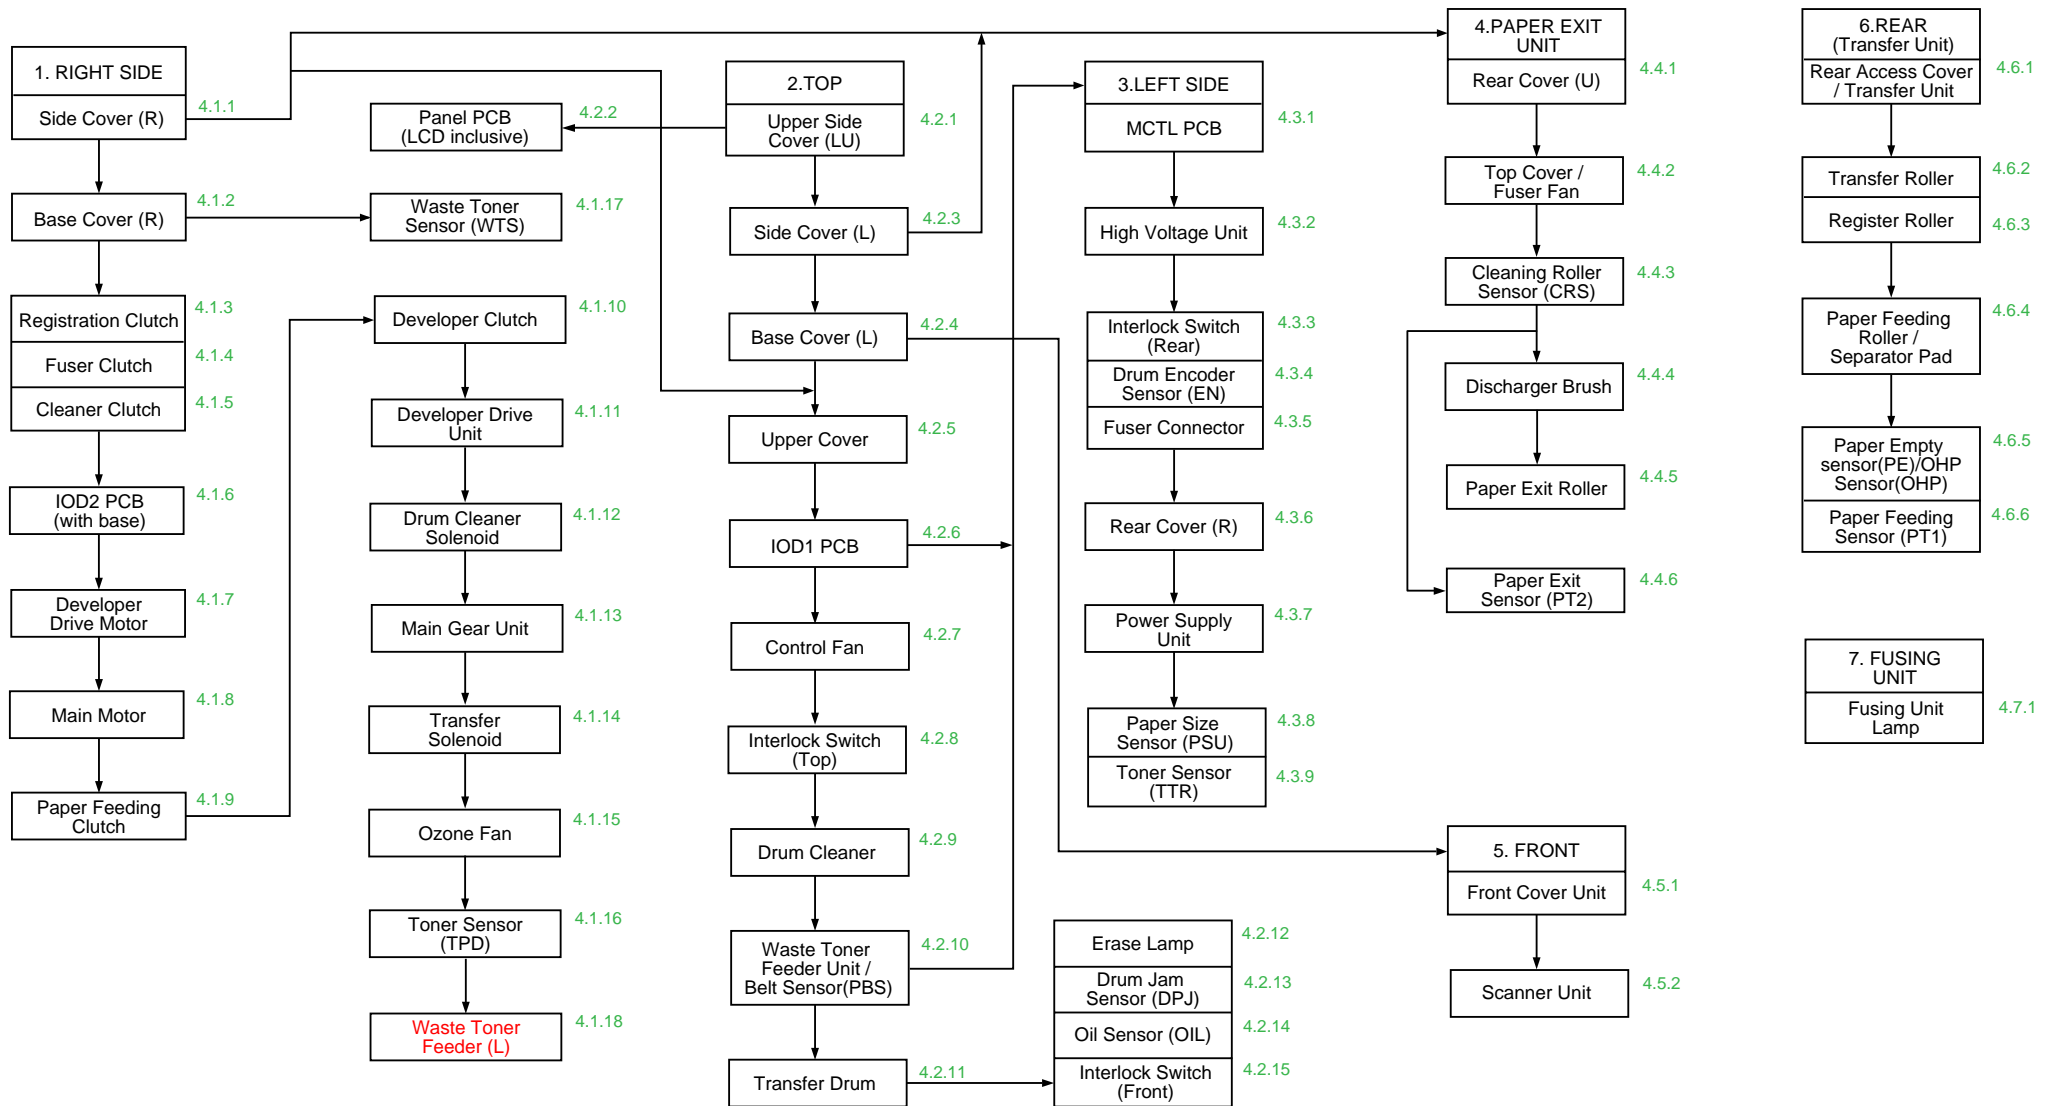

4. DISASSEMBLY PROCEDURE

4.1 Right Side of the Printer

4.1.1 Side Cover (R)

- 1) Remove the set screw BT4X8 (1 pc.) of side cover (R) at the rear of the printer.

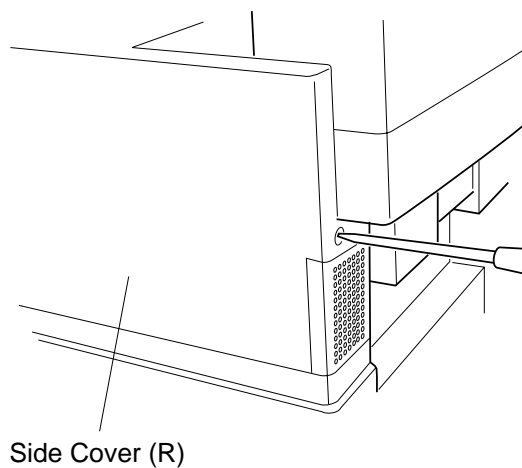


Fig.7-7

- 2) Slide the side cover (R) in the direction of the arrows as shown in Fig.7-8.
- 3) Remove the side cover (R) by releasing the two hooks.

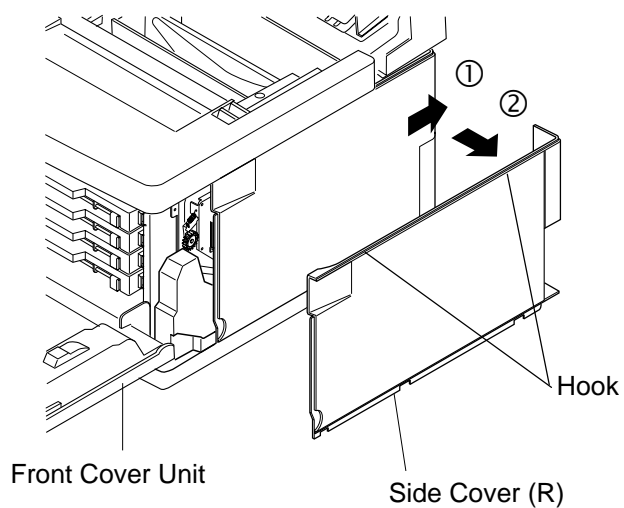


Fig.7-8

4.1.2 Base Cover (R)

- 1) Remove the set screws BT4X8 (2 pcs.) from the base cover (R).
- 2) Remove the base cover (R) from the base.

Note:

If the optional lower tray unit is fitted, it will be necessary to remove the lower tray clamp screw and locking bar to release the base cover (R).

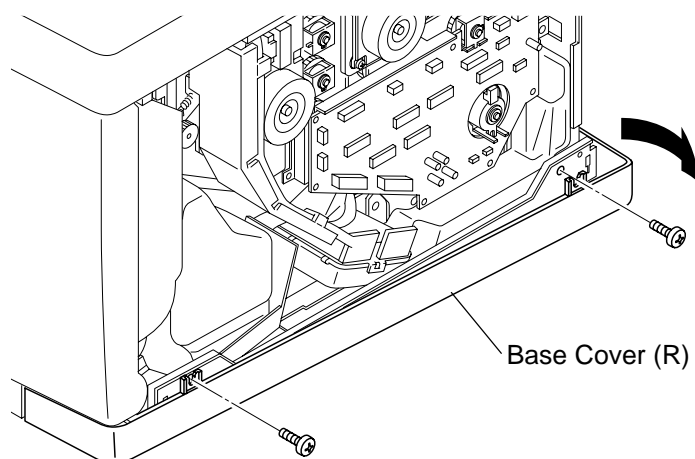


Fig.7-9



PRECAUTION

- When assembling the base cover, insert the leading edge of the base cover (R) into the hook provided at the bottom (left and right) of the base plate.
- Ensure that projecting part (□) of the base cover (R) goes into the hole in the base plate bottom.

4.1.3 Registration Clutch (RECL)

- 1) Remove the connector (1 pc.) from the IOD2 PCB.
- 2) Remove the outer plastic C ring from the shaft.
- 3) Pull out the registration clutch from the shaft.

4.1.4 Fuser Clutch (FUCL)

- 1) Remove the connector (1 pc.) from the IOD2 PCB.
- 2) Remove the outer plastic C ring from the shaft.
- 3) Pull out the fuser clutch from the shaft.

4.1.5 Drum Cleaner Clutch (FBCL)

- 1) Remove the connector (1 pc.) from the IOD2 PCB.
- 2) Remove the outer plastic C ring from the shaft.
- 3) Pull out the drum cleaner clutch from the shaft.

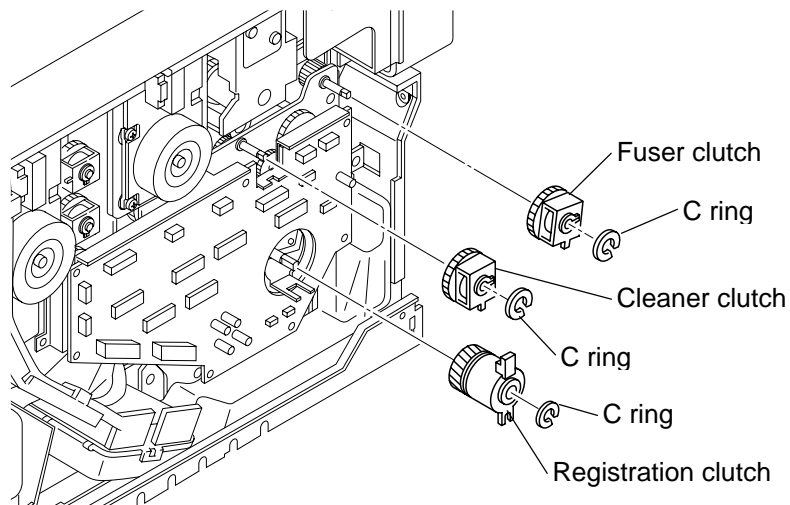


Fig.7-10

4.1.6 IOD2 PCB (with base)

- 1) Disconnect all the harness connectors (13 pcs.) connected to the IOD2 PCB.
- 2) Remove the set screws ST3X6 (2 pcs.) from the IOD2 PCB base.
- 3) Remove the IOD2 PCB (with base) from the main body.



PRECAUTION

When handling the IOD2 PCB take care not to cause electrostatic damage to the PCB.

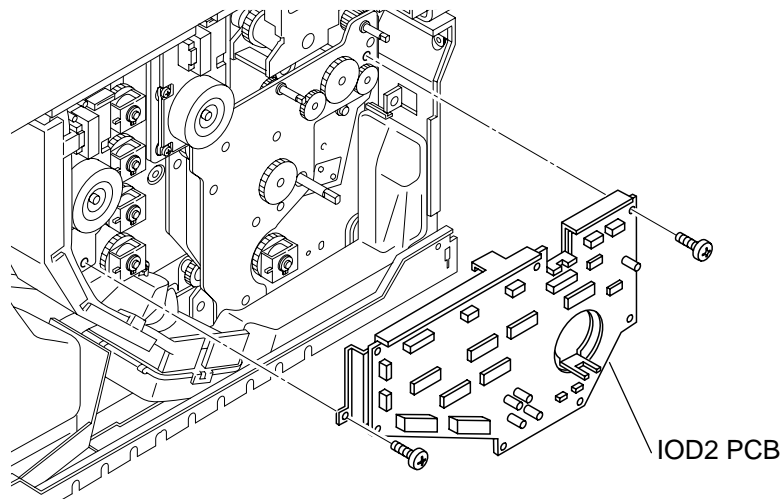


Fig.7-11

4.1.7 Developer Drive Motor (DM)



CAUTION

Take care not to stress the motor drive PCB when removing the connector or handling the motor / PCB assembly.

- 1) Remove the connector (1 pc.) from the developer drive motor PCB.
- 2) Remove the set screws ST3X6 (4 pcs.) holding the developer drive motor to the developer drive unit.
- 3) Remove the developer drive motor.

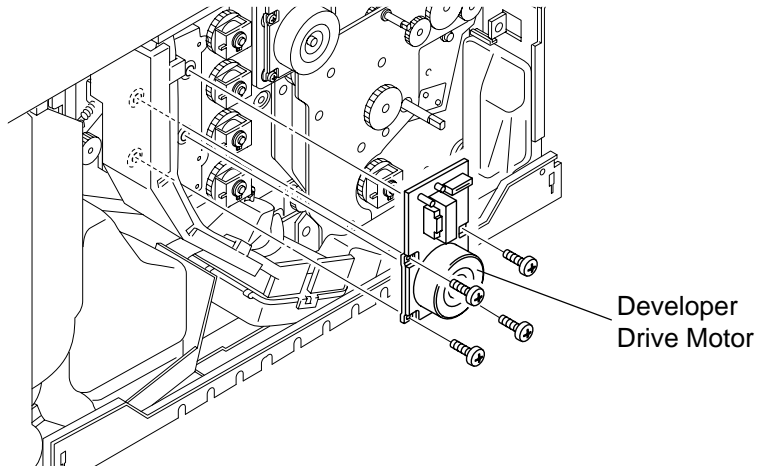


Fig.7-12

4.1.8 Main Motor (MM)

- 1) Remove the connector (1 pc.) from the main motor PCB.
- 2) Remove the screws ST3X6 (4 pcs.) holding the main motor to the mounting plate.
- 3) Remove the main motor from the mounting plate.
- 4) Remove the screws ST3X6 (3 pcs.) holding the mounting plate.
- 5) Remove the mounting plate.

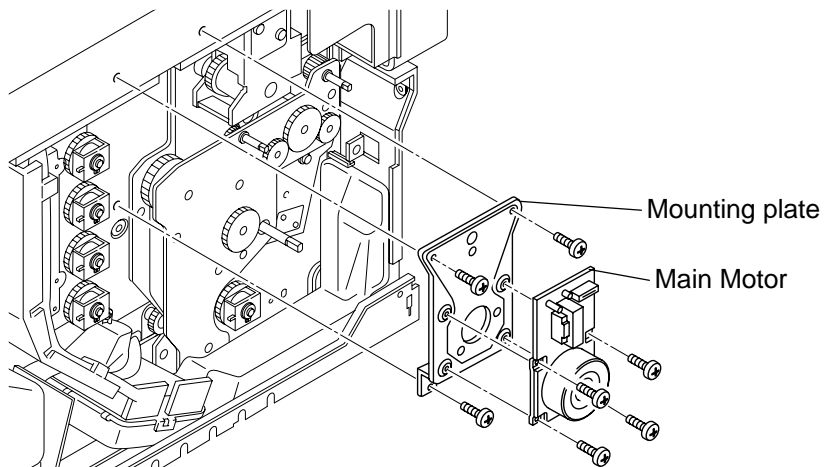


Fig.7-13

4.1.9 Paper Feeding Clutch (PCLU)

- 1) Remove the outer plastic C ring from the shaft.
- 2) Remove the paper feeding clutch from the shaft.

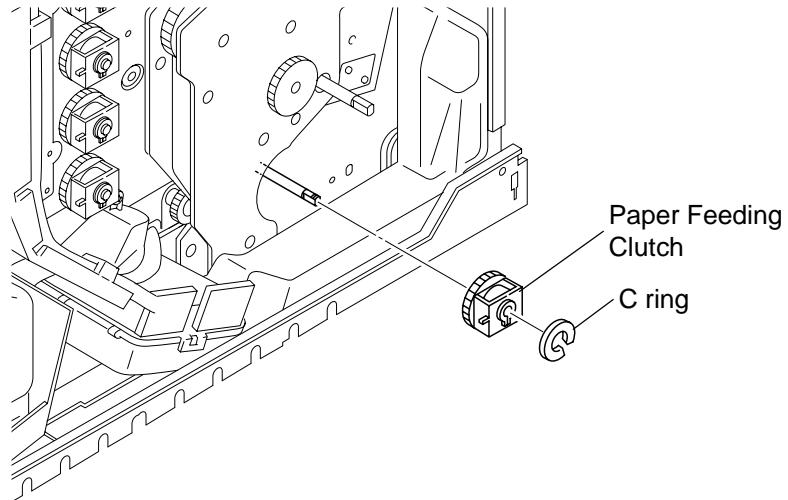


Fig.7-14

4.1.10 Developer Clutch (K, Y, M, C)

- 1) Remove the outer plastic C ring of each developer clutch from the shaft.
- 2) Pull out the developer clutch from the shaft.

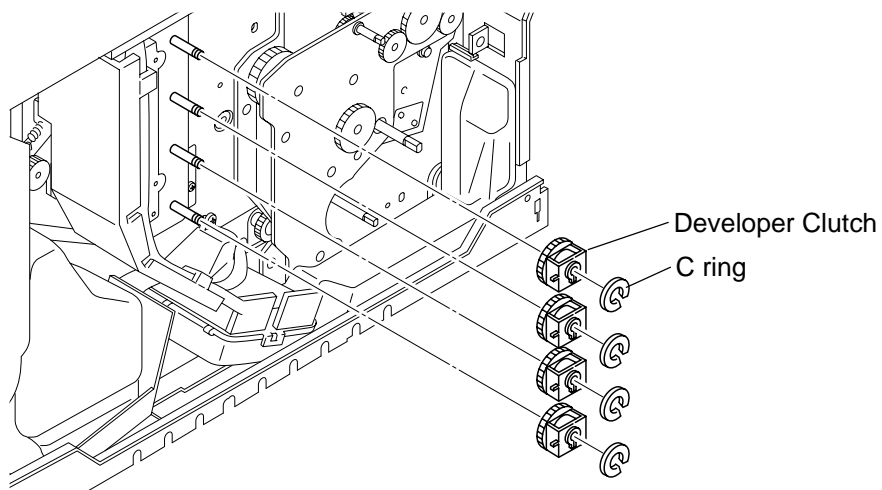


Fig.7-15

4.1.11 Developer Drive Unit

- 1) Open the front cover.
- 2) Remove the waste toner box.
- 3) Remove the harness guide.
- 4) Remove the set screws ST3X6 (4 pcs.) from the developer drive unit.
- 5) Remove the developer drive unit.

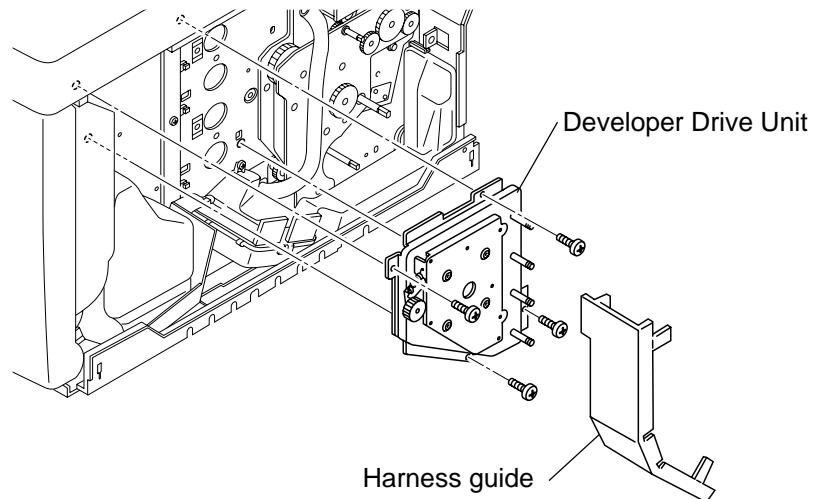


Fig.7-16

4.1.12 Drum Cleaner Solenoid (FBSOL)

- 1) Remove the set screws ST3X6 (2 pcs.) from the drum cleaner solenoid.
- 2) Remove the drum cleaner solenoid.

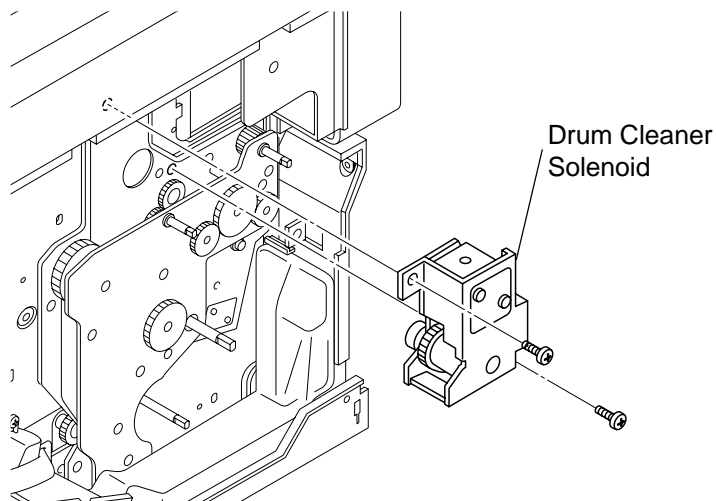


Fig.7-17

4.1.13 Main Gear Unit

- 1) Remove the screws ST3X6 (3 pcs.) and loosen the screw BT4X8 (1 pc.) holding the rear plastic cover plate and then remove the stay (R).
- 2) Remove the upper set screw ST3X6 (1 pc.) from the ozone fan case.
- 3) Remove the ozone fan duct.
- 4) Remove the set screws ST3X6 (5 pcs.) from the main gear unit.
- 5) Remove the top cover securing screw to release the top of the gear unit plate.
- 6) Remove the main gear unit from the frame.

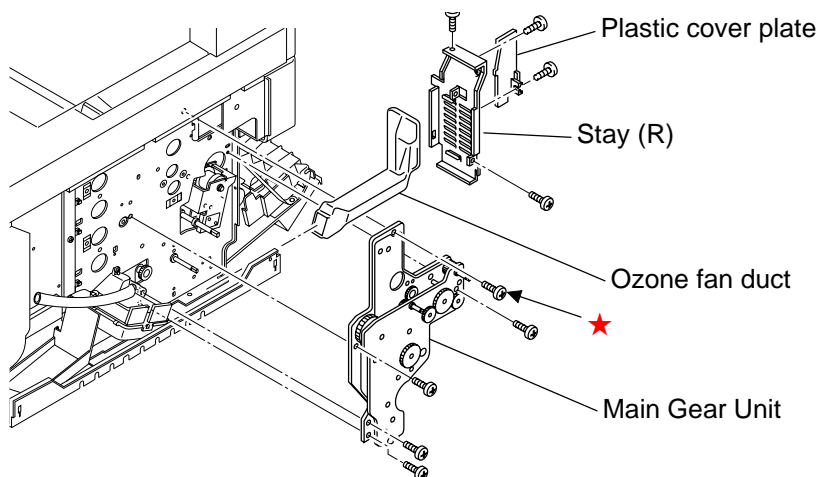


Fig.7-18

Note:

The black plastic cap covers the thread of the screw marked ★. Be sure not to lose the cap when removing the screw.

4.1.14 Transfer Solenoid (TRSOL)

- 1) Remove the set screws ST3X6 (2 pcs.) from the transfer solenoid.
- 2) Open the rear access cover.
- 3) Remove the transfer solenoid.

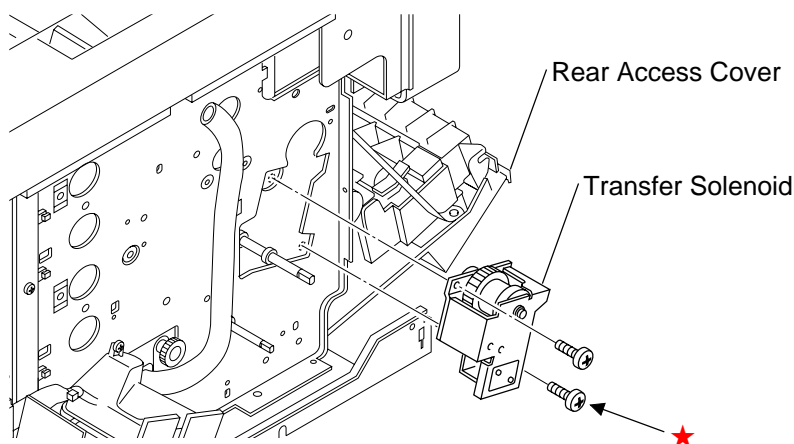


Fig.7-19

Note:

The black plastic cap covers the thread of the screw marked ★. Be sure not to lose the cap when removing the screw.

4.1.15 Ozone Fan (OZFAN)

- 1) Remove the lower set screw ST3X6 (1 pc.) from the fan case assembly. (Fig.7-20)
- 2) Remove the fan case assembly.
- 3) Remove the ozone fan from the fan case. (Fig.7-21)

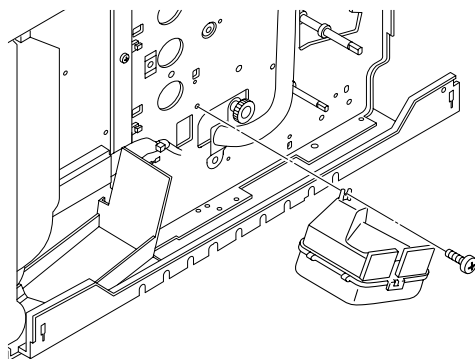


Fig.7-20

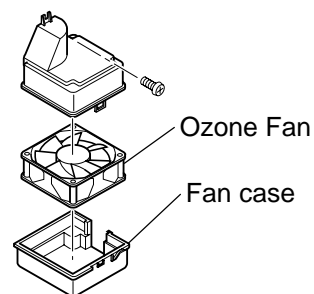


Fig.7-21

4.1.16 Toner Sensor Assembly (TPD)

- 1) Remove the set screws ST3X6 (3 pcs.) from the toner sensor PCB.
- 2) Disconnect the connector to the toner sensor PCB.

Note:

If the optional lower tray unit is fitted, remove the left hand screw of the front cross rail to release the media cassette guide.

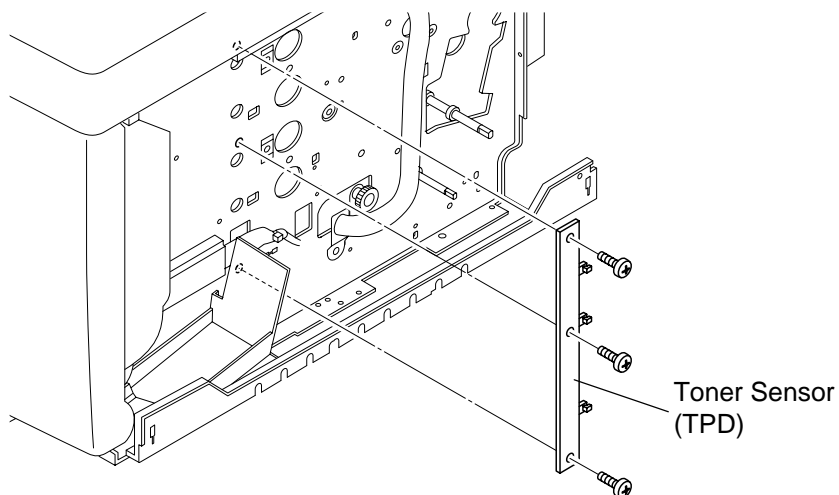


Fig.7-22

4.1.17 Waste Toner Sensor (WTS)

- 1) Lift up the bottle holder.
- 2) Remove the screws (2 pcs.) from the bottle holder and waste toner sensor assembly.
- 3) Disconnect the connector from the waste toner sensor.
- 4) Remove the sensor assembly with the bottle holder.
- 5) Remove the waste toner sensor by removing the hooked pawl.

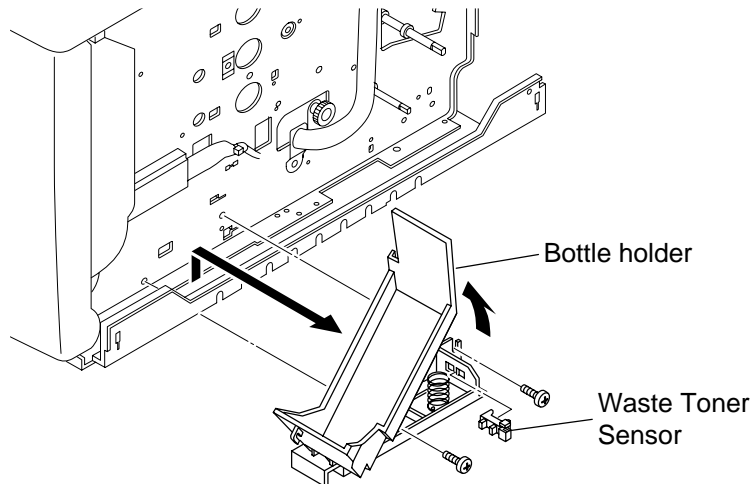


Fig.7-23

4.1.18 Waste Toner Feeder (L)

Note:

The waste toner feeder (L) is composed of plastic tube and auger spring gear unit.

- 1) Remove the set screw ST3x6 (1 pc.) to remove the waste toner feeder plate.
- 2) Remove the plastic tube from the frame.

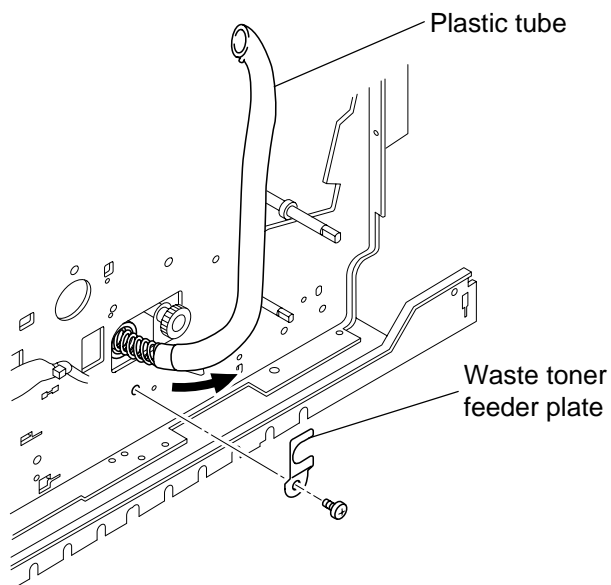


Fig.7-23a

**CAUTION**

Be sure to vacuum up waste toner remaining inside the plastic tube with a vacuum cleaner before removing the plastic tube.

- 4) Remove the set screw ST3x6 (2 pcs.) from the auger spring gear unit.
- 5) Take the auger spring out of the frame, then remove the auger spring gear unit from the printer inside .

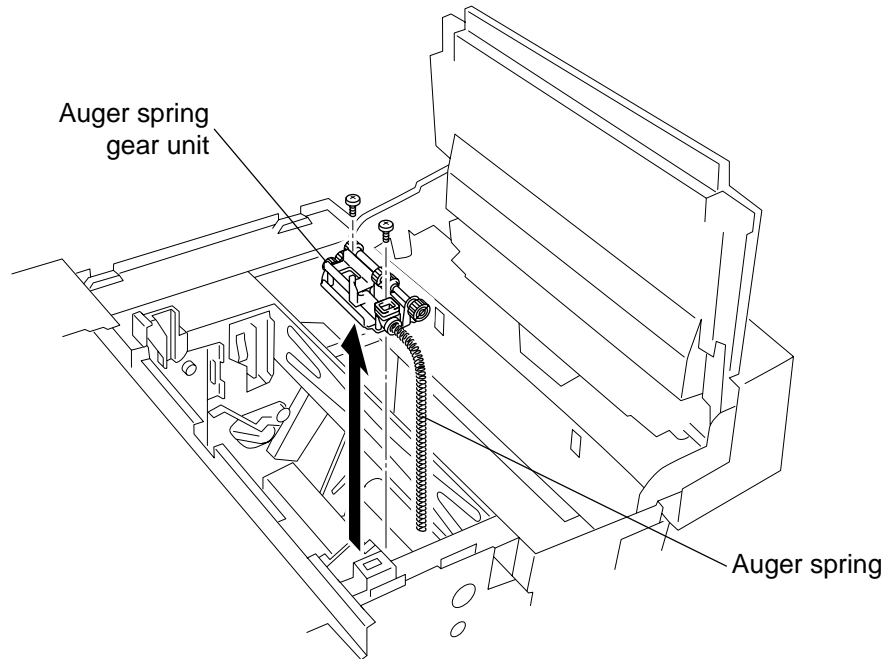


Fig.7-23b

**CAUTION**

When removing the auger spring gear unit, attach paper onto the transfer drum to prevent touching it.

Note:

- When removing the screws from the auger spring gear unit, use the screw driver whose shaft is long enough to reach the screws. If it is not available, remove the transfer drum before removing the screws.
- When re-assembling the auger spring gear unit into the frame, fix the notch to the side frame and fix the boss into the hole of the base frame referring to the figure below;.

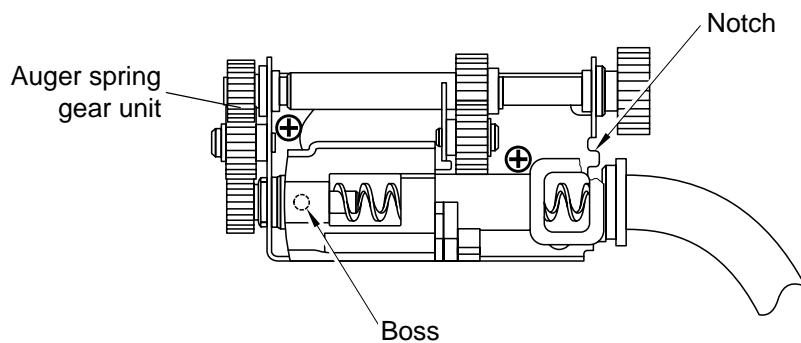


Fig.7-23c

4.2 Top of the Printer

4.2.1 Upper Side Cover (LU)

- 1) Open the top cover.
- 2) Remove the set screw BT4X8 securing the side cover (LU)
- 3) Press the exterior of the side cover inwards(L) and unlock the hooks (three locations) from the side cover (LU). (Fig.7-25)

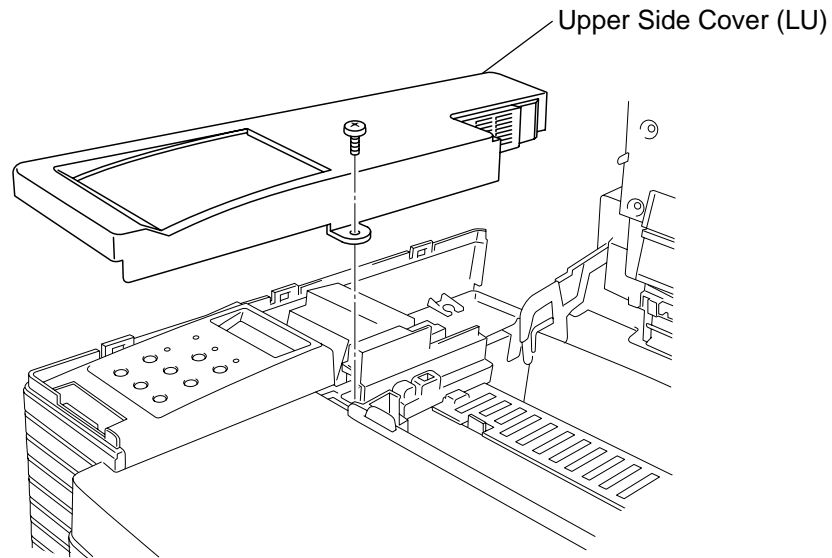


Fig.7-24

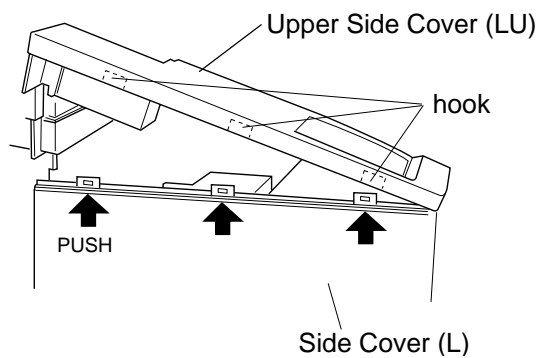


Fig.7-25

4.2.2 Panel PCB (including LCD)

- 1) Remove the set screw BT4X10 (1 pc.) from the panel case assembly and disconnect the connector. (Refer to Figure 7-26 below.)
- 2) Remove the set screws BT3X8 (4 pcs.) from the panel PCB and remove the panel shield plate, PCB and LCD from the panel case assembly.

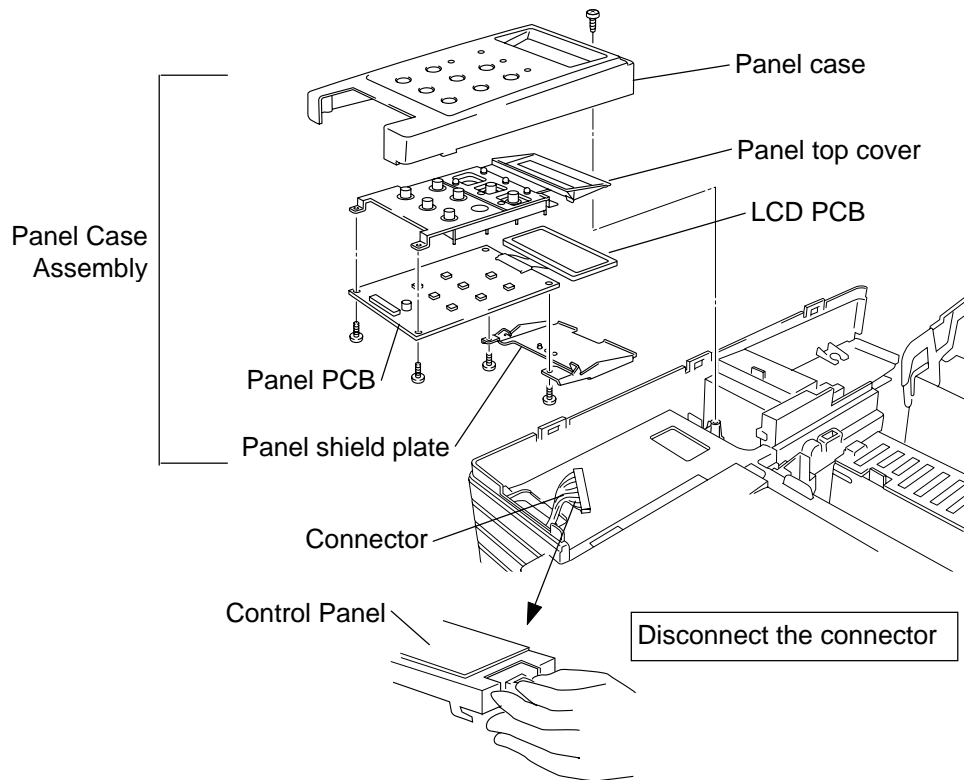


Fig.7-26

4.2.3 Side Cover (L)

- 1) Remove the set screw BT4X8 (2 pcs.) of side cover (L).
- 2) Remove the side cover (L).
(Slowly pull up the side cover (L), and release the hook from the front of the Upper cover.)

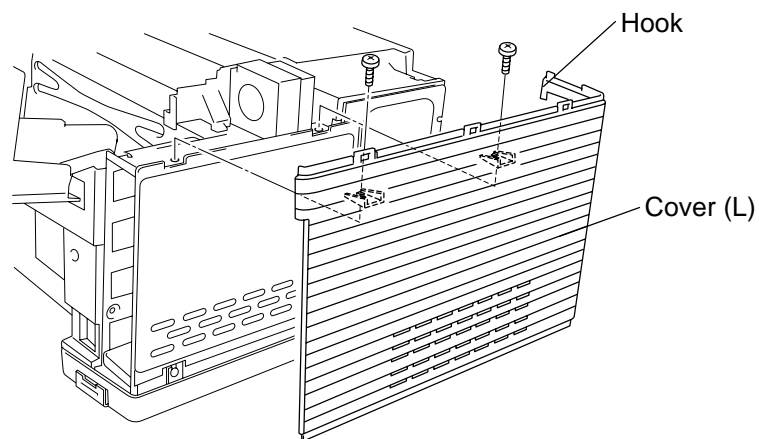


Fig.7-27

4.2.4 Base Cover (L)

- 1) Remove the set screws TS4X8 (2 pcs.) from the base cover (L).
- 2) Remove the base cover (L) from the base.

Note:

If the optional lower tray unit is fitted, it will be necessary to remove the lower tray clamp screw and locking bar to release the base cover (R). For further information, refer to the User Guide.


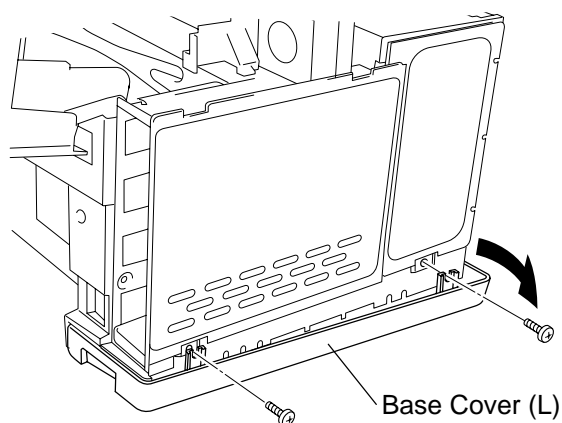


Fig.7-28

 

PRECAUTION

- When re-assembling the base cover, insert the leading edge of the base cover (L) into the hook provided at the bottom (left and right) of the base plate.
- Ensure that the projecting part () of the base cover (L) goes into the hole in the base plate bottom.

4.2.5 Upper Cover

- 1) Open the front cover and release the belt cartridge lock levers.
- 2) Remove the side cover (R).
- 3) Remove the set screws BT4X8 (2 pcs.) securing the upper cover. (Top X 1 and Right hand side X 1)
- 4) Slightly lift up the rear edge of the upper cover.
- 5) Pull the upper cover toward you and unhook the hook at the front of the cover from the frame.

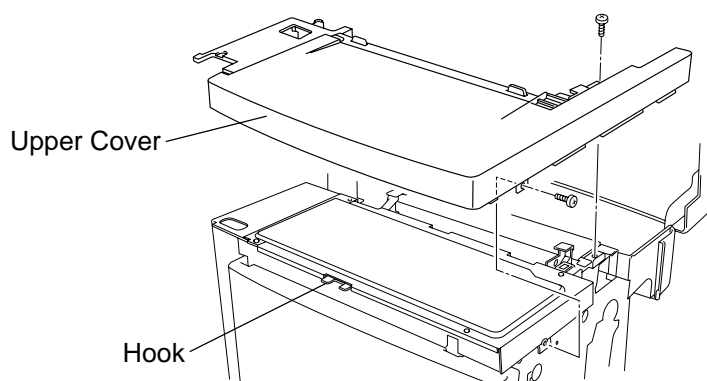


Fig.7-29

4.2.6 IOD1 PCB

- 1) Remove the set screws ST3X6 (3 pcs.) from the shield (upper).
- 2) Disconnect all the harness connectors (14 pcs.) connected to the IOD1 PCB. Note that the DCN3 connector is a link plug and need not be removed unless necessary.
- 3) Remove the set screws ST3X6 (6 pcs.) from the IOD1 PCB.
- 4) Remove the IOD1 PCB.

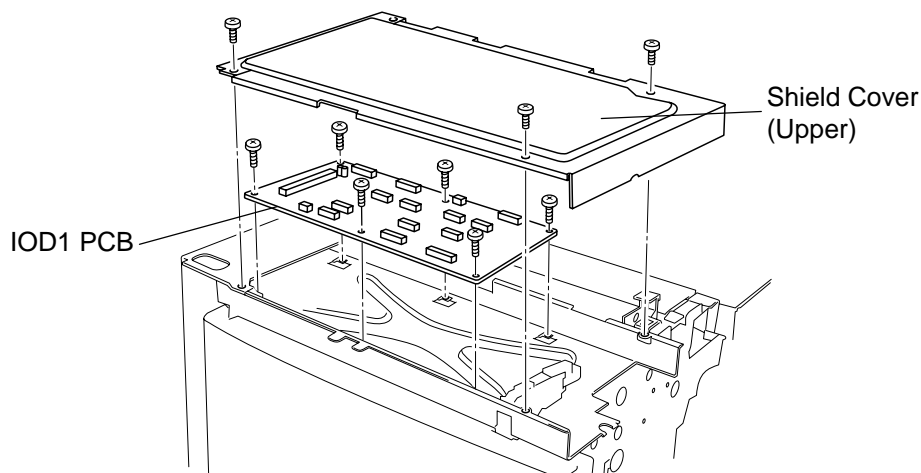


Fig.7-30



PRECAUTION

When handling the IOD1 PCB, take care that no damage is caused due to electrostatic charges.

4.2.7 Control Fan (CTFAN)

- 1) Remove the set screw BT3X8 (2 pcs) and washer holding the fan and interlock assembly. (Fig.7-31)
- 2) Remove the fan and interlock assembly.
- 3) Remove the fan motor from the fan case after releasing the fan cover plastic clips. (Fig.7-32)

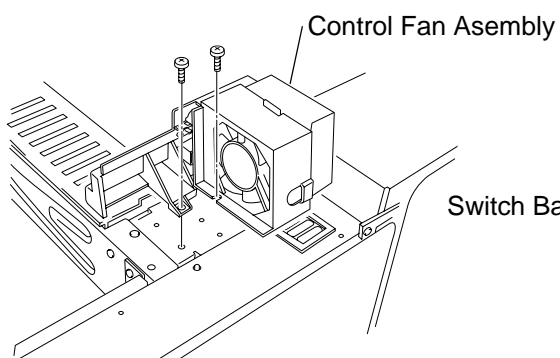


Fig.7-31

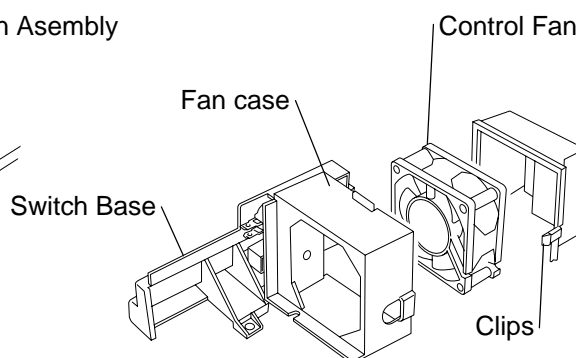


Fig.7-32

4.2.8 Interlock Switch (Top) (Paper Exit Unit)

- 1) Remove the set screw BT3X8 (1 pc.) and remove the switch base from the control fan case.
- 2) Remove the interlock switch from the switch base.



CAUTION

Since the interlock switch is an important safety item, after installation confirm that the switch operates correctly.

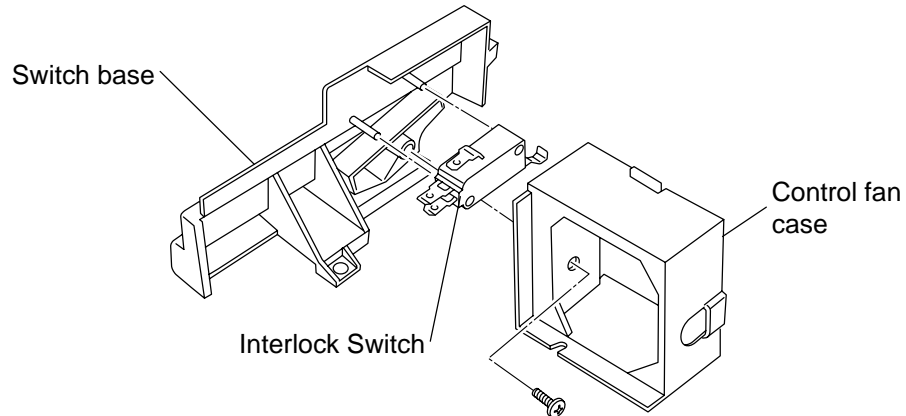


Fig.7-33

4.2.9 Drum Cleaner

- 1) Push the two hooks on the cleaner cover rearward to release them and remove the cleaner cover.
- 2) Remove the drum cleaner by pushing the handle backwards until it releases from the contacts at the left and right hand ends, then lift out the drum cleaner assembly.

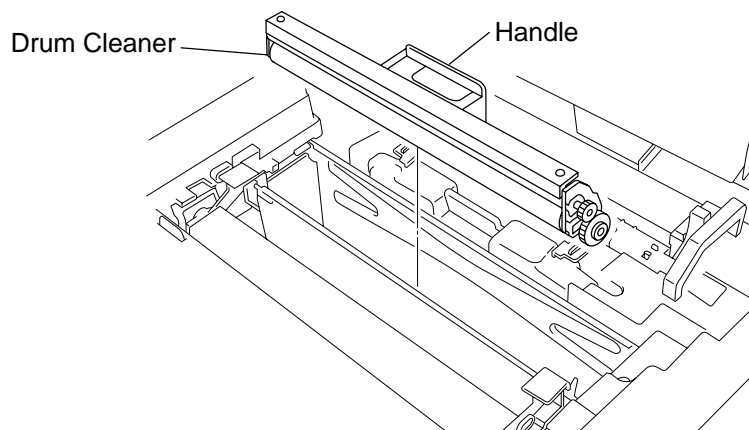


Fig.7-34

4.2.10 Waste Toner Feeder Unit / Belt Sensor (PBS)

- 1) Remove the set screws ST3X6 (2 pcs.) from the waste toner feeder unit.
- 2) Remove the waste toner feeder unit complete with the belt sensor.
- 3) Disconnect the connector (1 pc.) to the belt sensor.
- 4) Remove the belt sensor from the waste toner feeder unit.

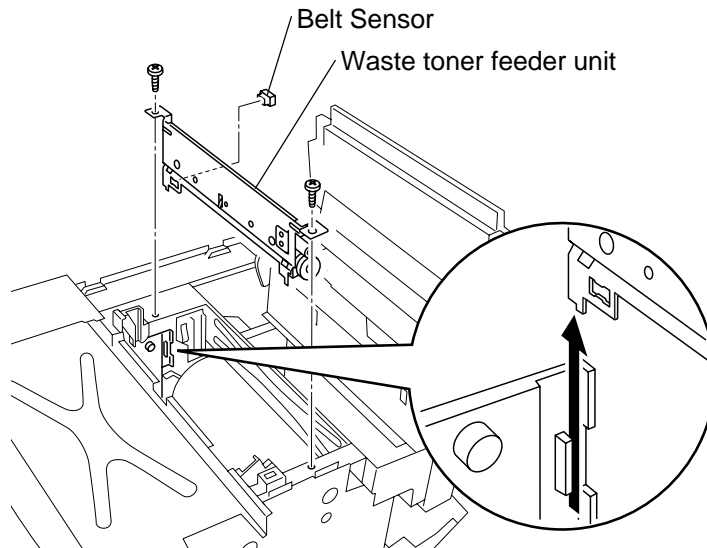


Fig.7-35

4.2.11 Transfer Drum

- 1) Open the rear access cover.
- 2) Protect the surface of the transfer drum by covering it with paper.
- 3) Push the transfer drum up and forwards from the transfer unit side. (Refer to Fig.7-36.)
- 4) Release the transfer drum from the shaft supports.
- 5) Pull up and remove the transfer drum from the top of the printer.

Note:

- For easier removal, push the drum upwards and diagonally forwards.
- When re-assembling the transfer drum, slide the drum shaft between the metal plates and ensure the drum is fully located into the correct retaining position.



PRECAUTION

Do not touch the transfer drum surface with your bare hands or scratch it. Protect the drum surface during handling.

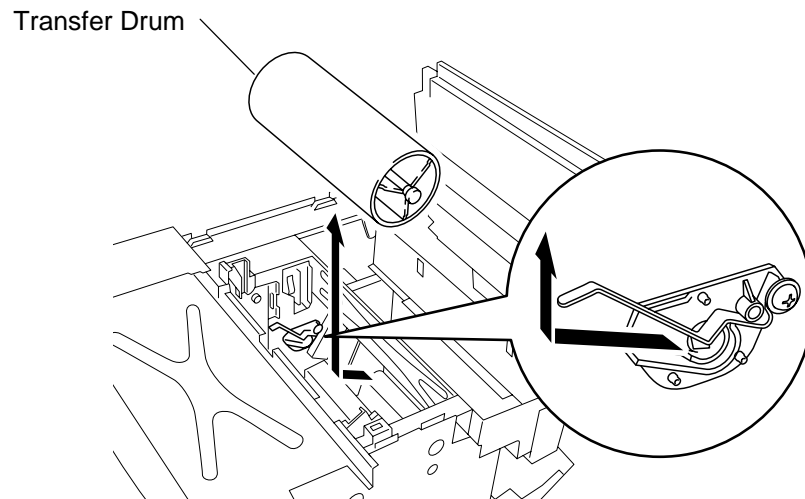


Fig.7-36

4.2.12 Erase Lamp

- 1) Disconnect the harness (1 pc.) connected to the erase lamp.
- 2) Remove the erase lamp from the holder.

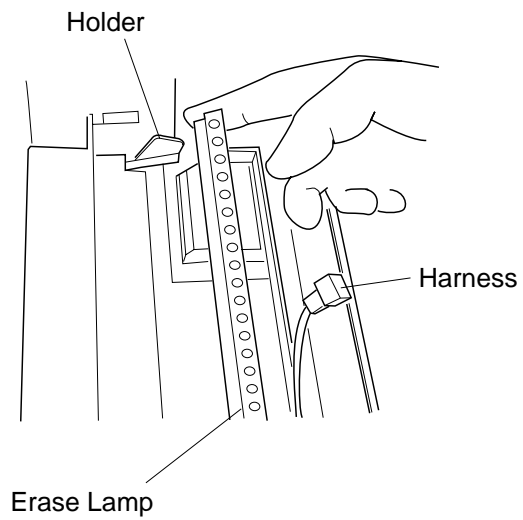


Fig.7-37

4.2.13 Drum Jam Sensor (DPJ)

- 1) Remove the cover F by lifting the left hand end of the cover and sliding the cover to the right to release the catches.
- 2) Disconnect the drum jam sensor connector.
- 3) Remove the drum jam sensor.

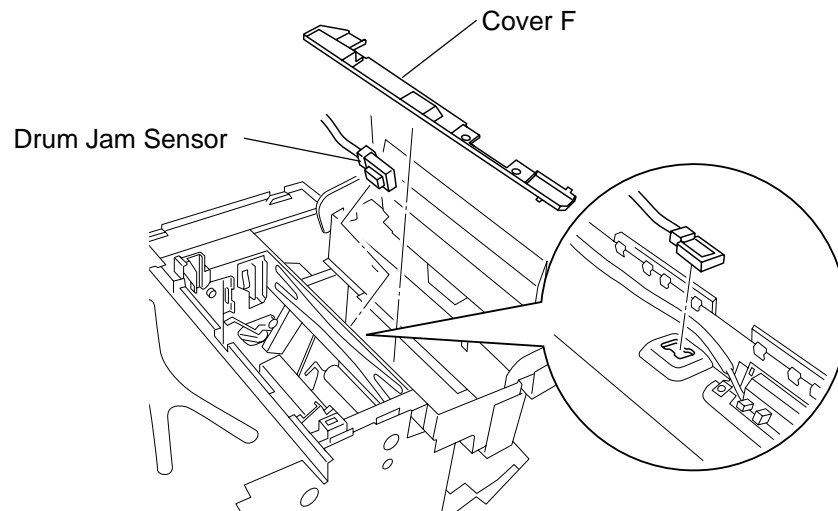


Fig.7-38

4.2.14 Oil Sensor (OIL)

- 1) Remove the set screw ST3X6 (2 pcs.) from the oil sensor.
- 2) Disconnect the oil sensor connector.
- 3) Remove the oil sensor assembly.

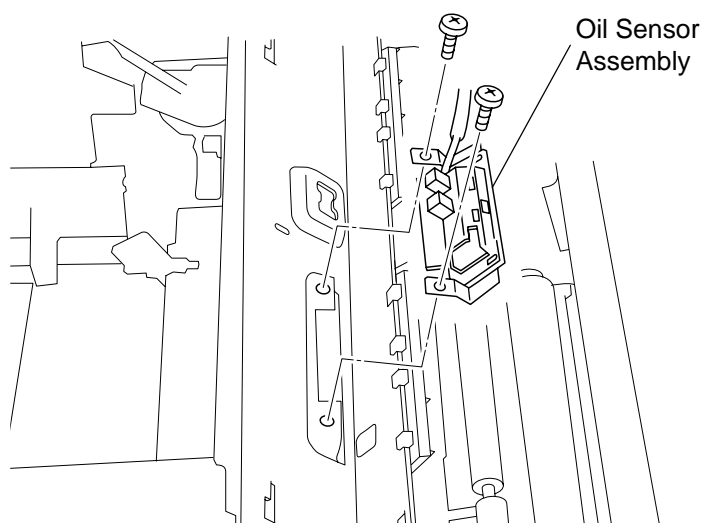


Fig.7-39

4.2.15 Interlock Switch (Front) (for Front Cover)

- 1) Remove the set screw (1 pc.) and washer to remove the switch assembly from the stay U.
- 2) Remove the connector.
- 3) Remove the interlock switch from the switch case.

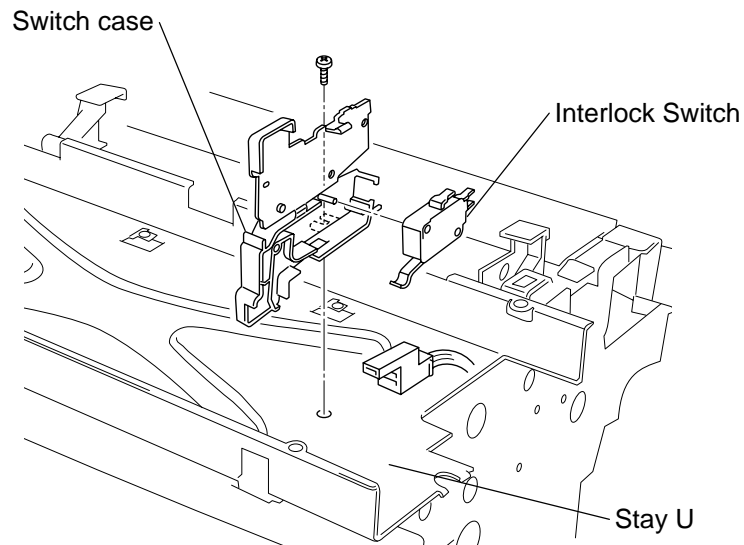


Fig.7-40



CAUTION

Since the interlock switch is an important safety item, after installation confirm that the switch operates correctly.

4.3 Left Side of the Printer

4.3.1 MCTL PCB



CAUTION

Remove the Main (Video Controller) PCB before starting this disassembly.

- 1) Remove the set screws ST3X6 (3 pcs.) from shield cover 'A'.
- 2) Remove the shield cover 'A'.
- 3) Remove the set screw ST3X6 (1 pc.) from shield cover 'B'. Slide the cover upwards and remove it
- 4) Disconnect all the harness connectors (5 pcs.) connected to the MCTL PCB.
- 5) Remove the set screws ST3X6 (4 pcs.) from the MCTL PCB.
- 6) Remove the MCTL PCB.



PRECAUTION

- *Read the internal RAM counter information from the MCTL PCB prior to replacing the MCTL PCB.*
- *When handling the MCTL PCB, ensure that no damage is caused due to electrostatic charges.*

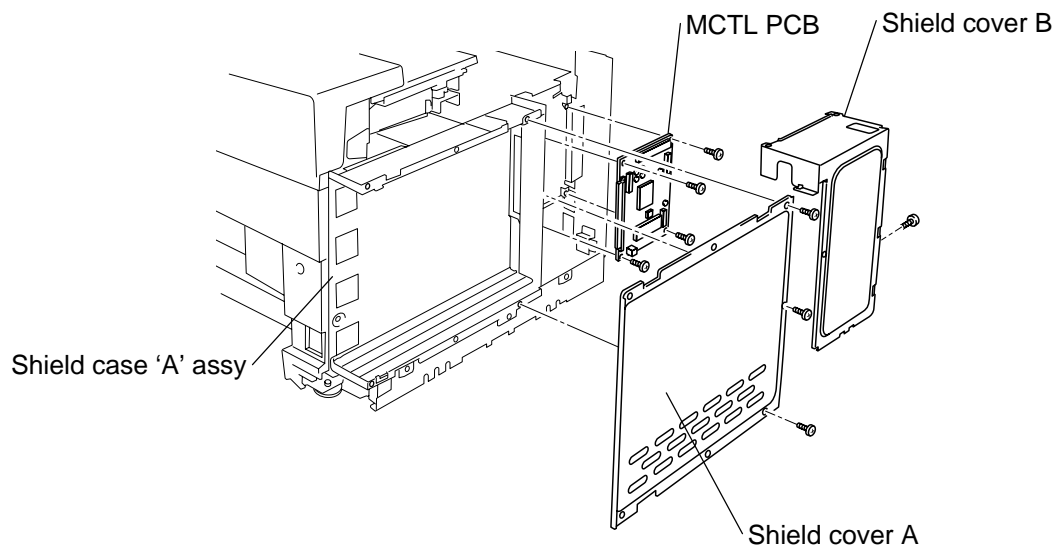


Fig.7-41

4.3.2 High Voltage Unit

- 1) Remove the Main (Video Controller) PCB guide rail (upper).

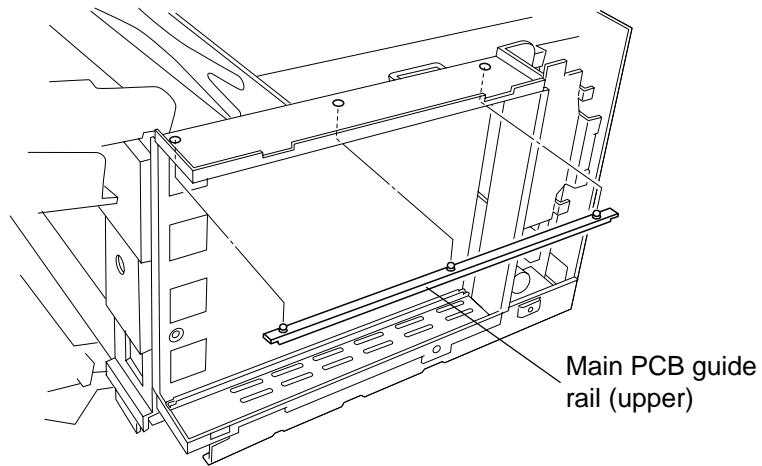


Fig.7-42

- 2) Remove the set screws ST3X6 (5 pcs.) from shield case 'A' assembly.
- 3) Remove the fan duct from the power supply.

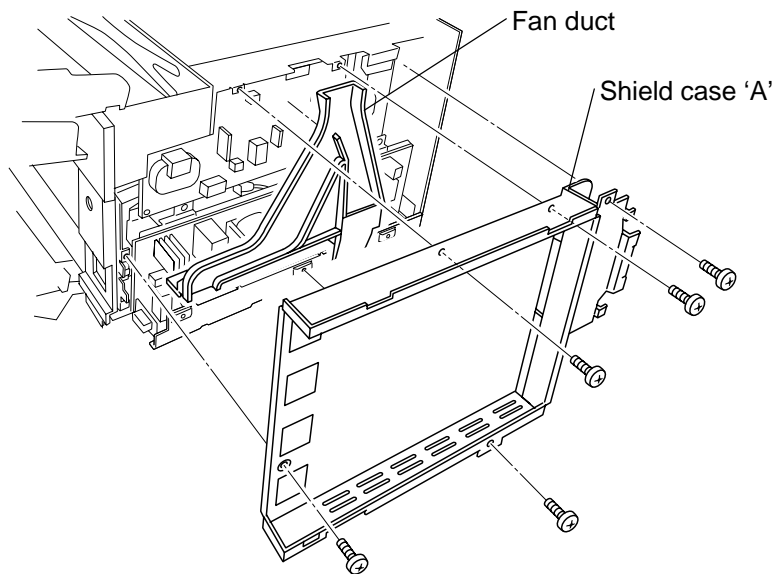


Fig.7-43

- 4) Disconnect all the harnesses (5 pcs.) connected to the high voltage unit.
- 5) Remove the set screws ST3X6 (1 pc.) and BT3X8 (6 pcs.) from the high voltage power supply unit.
- 6) Remove the high voltage power supply unit.

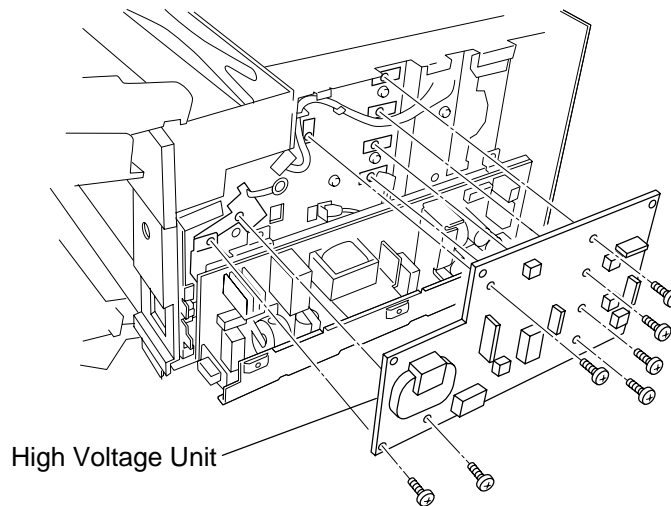


Fig.7-44



CAUTION

When disconnecting the connector from the CBV terminal, push both sides of the connector as shown in Fig.7-302. Pulling it hard may cause connector damage.



WARNING

*The high voltage power supply unit generates high voltages of up to 5KV. You can get an electric shock if you touch the unit while it is powered on.
Turn on the power to the unit only after having refitted and secured side cover (L).*

4.3.3 Interlock Switch (Rear)

- 1) Remove the set screws ST3X6 (2 pcs.) from the transfer electrode base.
- 2) Remove the transfer electrode base from the frame.
- 3) Disconnect the harness (1 pc.) connected to the interlock switch.
- 4) Remove the interlock switch from the transfer electrode base.

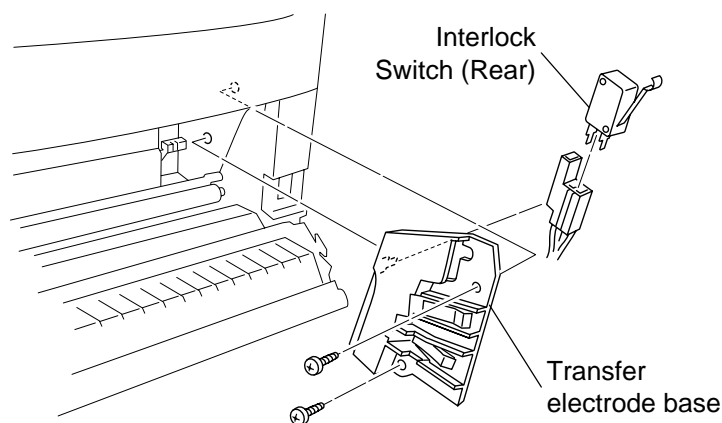


Fig.7-45



CAUTION

Since the interlock switch is an important safety item, after installation confirm that the switch operates correctly.

4.3.4 Drum Encoder Sensor (EN)

- 1) Remove the sensor case assembly from the frame (L).
- 2) Disconnect the connector (1 pc.) to the encoder sensor.
- 3) Remove the encoder sensor from the sensor holder.

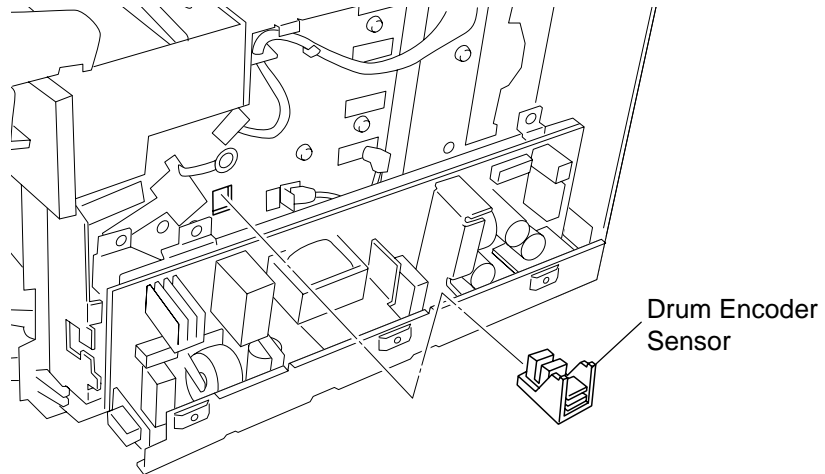


Fig.7-46

4.3.5 Fuser Connector

- 1) Remove the PN/PH connectors connected to the DC power supply unit.
- 2) Remove the shoulder screws SP3* (2 pcs.) from the fuser connector.
- 3) Remove the fuser connector.

* The set screw of the fuser connector is unique.

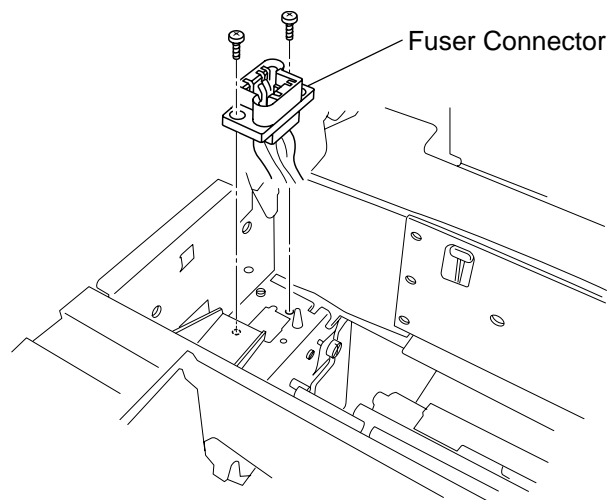


Fig.7-47

4.3.6 Rear Cover (R)

- 1) Remove the set screw BT4X8 (1 pc.) of rear cover (R).
- 2) Remove the rear cover (R).

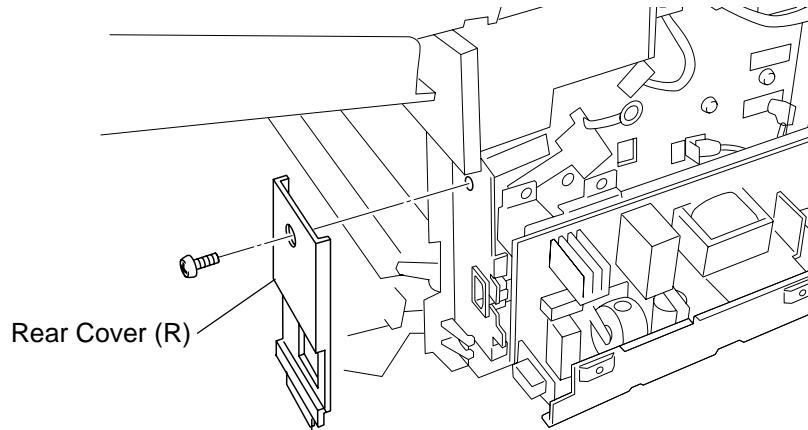


Fig.7-48

4.3.7 Power Supply Unit

- 1) Disconnect the harnesses (4 pcs.) connected to the power supply unit.
- 2) Remove the power switch key.
- 3) Remove the set screws ST3X6 (2 pcs.) holding the power switch and metal bracket to the printer.
- 4) Remove the power switch and metal switch bracket.
- 5) Remove the set screws ST3X6 (2 pcs.) holding the power switch to the switch bracket.
- 6) Remove the power switch.

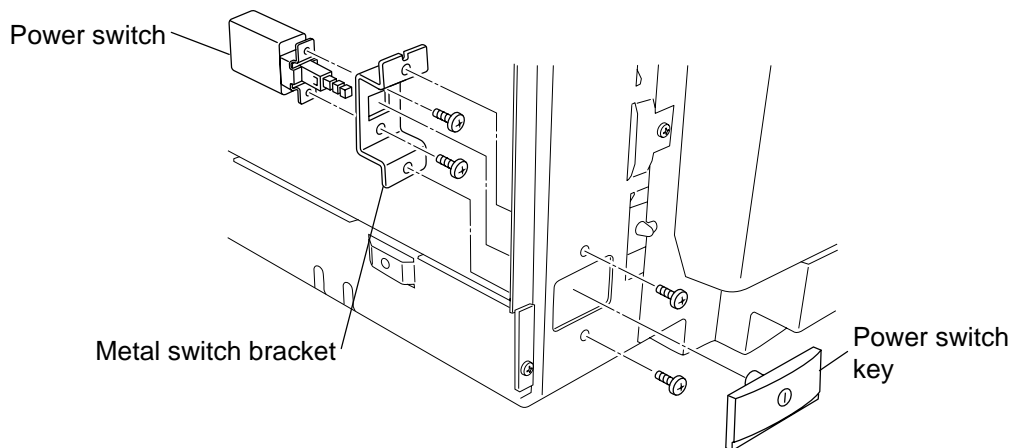


Fig.7-49

- 7) Remove the set screw M4X6 (1 pc.) complete with the shakeproof washer to release the earthing harness.
- 8) Remove the power outlet from the frame.

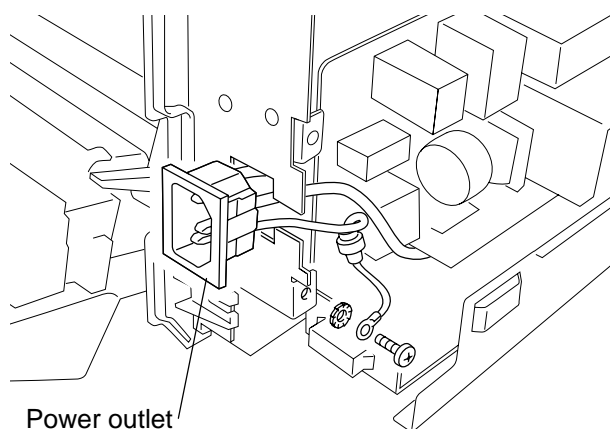


Fig.7-50

- 9) Remove the set screws ST3X6 (2 pcs.) from the power supply unit frame.
- 10) Remove the power supply unit complete with the frame.

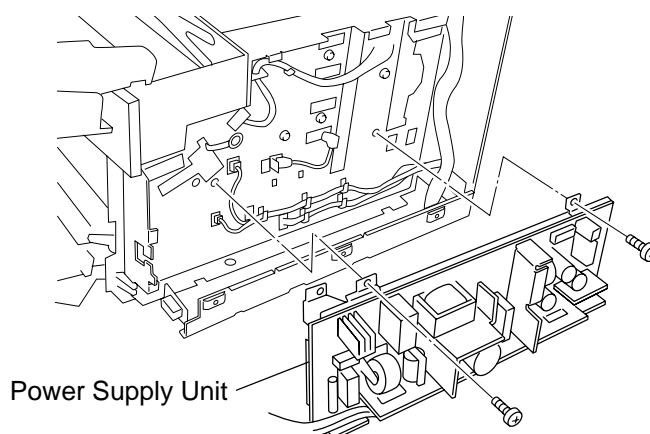



Fig.7-51



WARNING

*The earthing wire is very important for the safety of users.
Upon replacement of the power supply unit, confirm that the earthing wire (green and yellow color) is securely connected to the  connector, the shakeproof washer is fitted and the screw is tightly fastened.*

4.3.8 Paper Size Sensor (PSU)

Note:

If the optional lower tray unit is fitted, remove the left hand screw of the front cross rail to release the media cassette guide.

- 1) Remove the media cassette.
- 2) Remove the set screws ST3X6 (1 pc.) from the media cassette guide (L) assembly.
- 3) Pull the media cassette guide toward you while pushing the front catch to release the guide from the plastic catches (4 pcs.).
- 4) Remove the paper size sensor connector.
- 5) Remove the media cassette guide (L) assembly from the frame.
- 6) Remove the set screws BT3X8 (2 pcs.) holding the paper size sensor to the cassette guide (L).
- 7) Remove the paper size sensor.

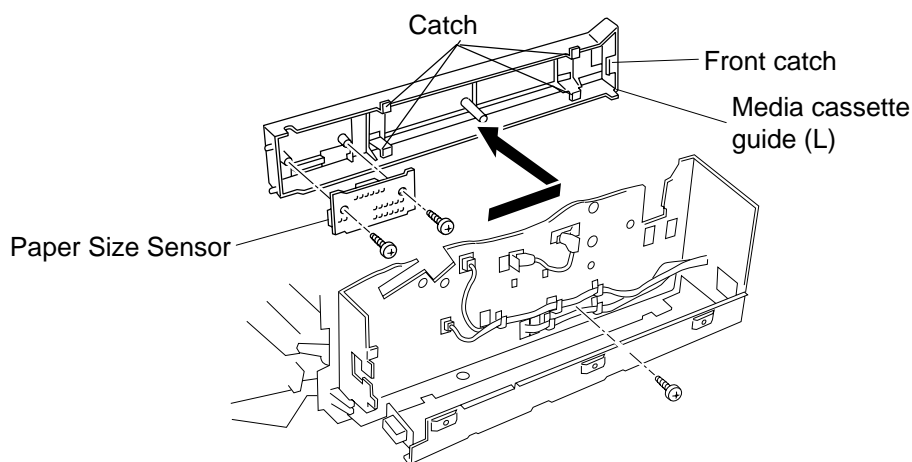


Fig.7-52

Note:

When assembling the media cassette guide, be sure to correctly locate the front catch and other 4 catches.

4.3.9 Toner Sensor (TTR)

- 1) Remove the set screws ST3X6 (3 pcs.) from the toner sensor PCB.
- 2) Disconnect and remove the toner sensor PCB.

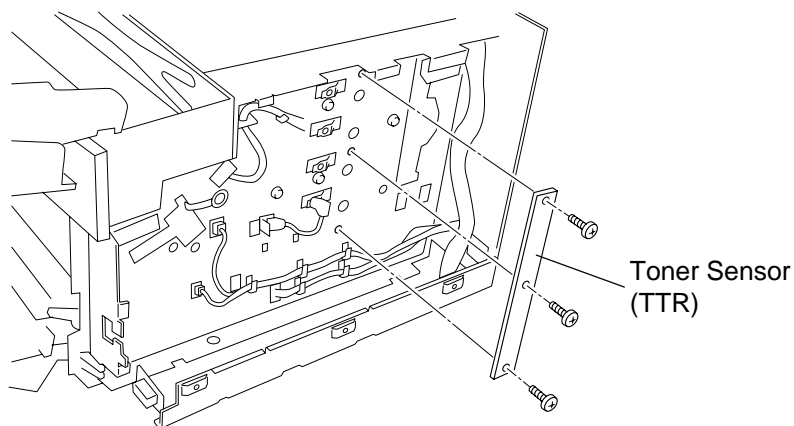


Fig.7-53

4.4 Paper Exit Unit

4.4.1 Rear Cover (U)

- 1) Remove the rear cover (R). (Refer to Section 4.3.6 in this chapter.)
- 2) Remove the set screw BT4X6 (1 pc.) of rear cover (U).
- 3) Remove the rear cover (U).

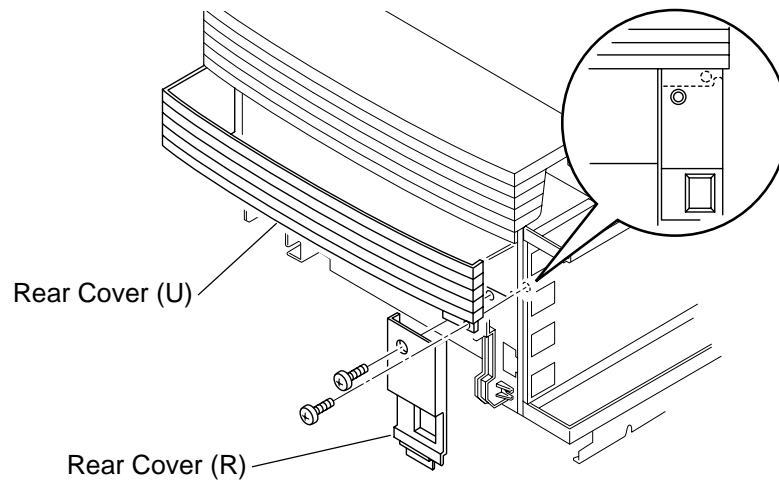


Fig.7-54

4.4.2 Top Cover (Paper Exit Cover) / Fuser Fan (FUFAN)

- 1) Remove the set screws BT4X8 (2 pcs.) that act as the paper exit unit hinges.
- 2) Remove the set screw ST3X6 (1 pc.) of the inner cover (R) and remove the inner cover (R).
- 3) Disconnect the 3 cable joint connectors in the cover assembly.
- 4) Remove the paper exit unit from the printer.
- 5) Remove the arm edge cover.

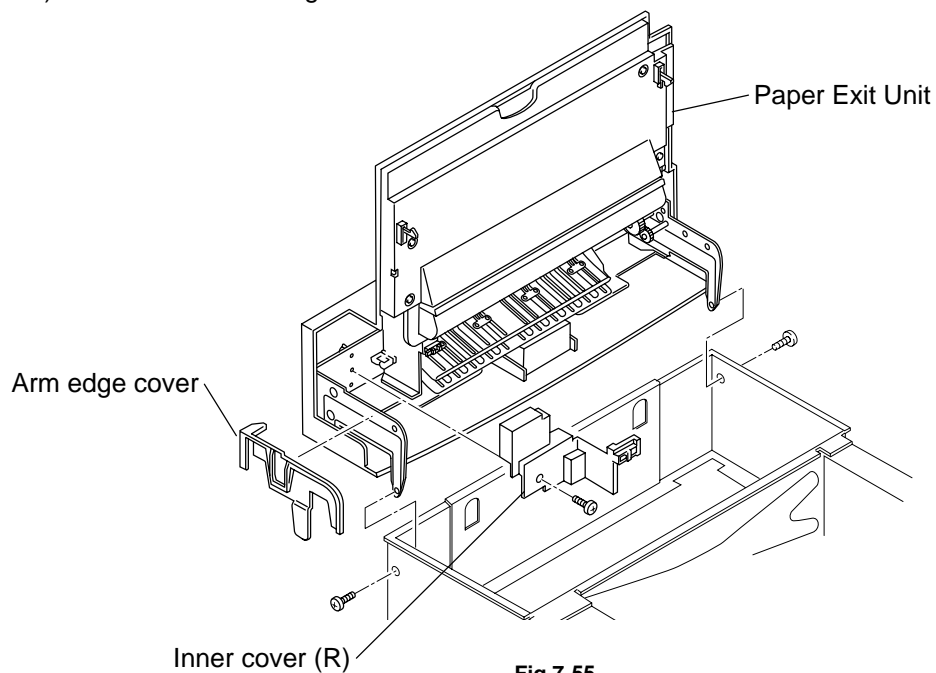


Fig.7-55

- 6) Remove the paper exit inner cover by removing the set screws BT3X8 (4 pcs.), release arm, hook (R) & (L) and spring.

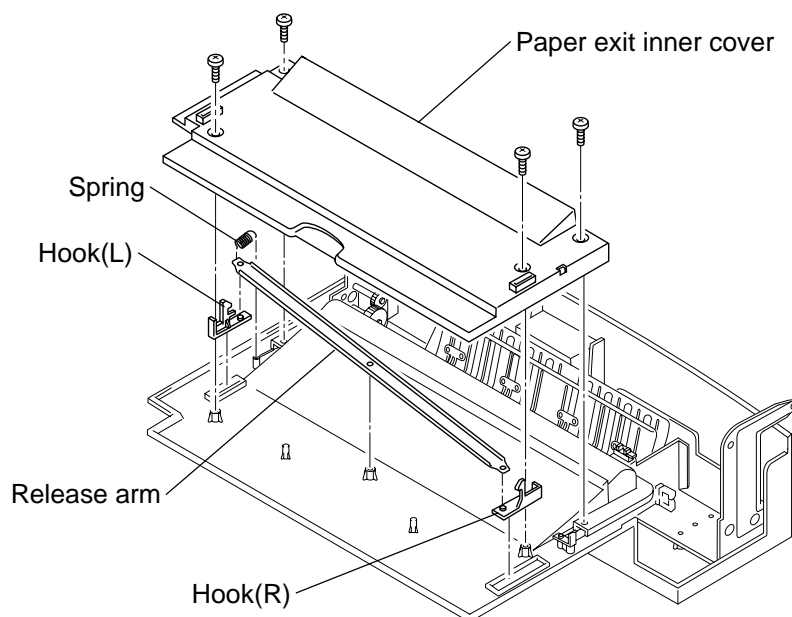


Fig.7-56

- 7) Press the sides of the fan case to release the fan motor assembly from the paper exit guide unit.
- 8) Remove the fuser fan motor from the case.

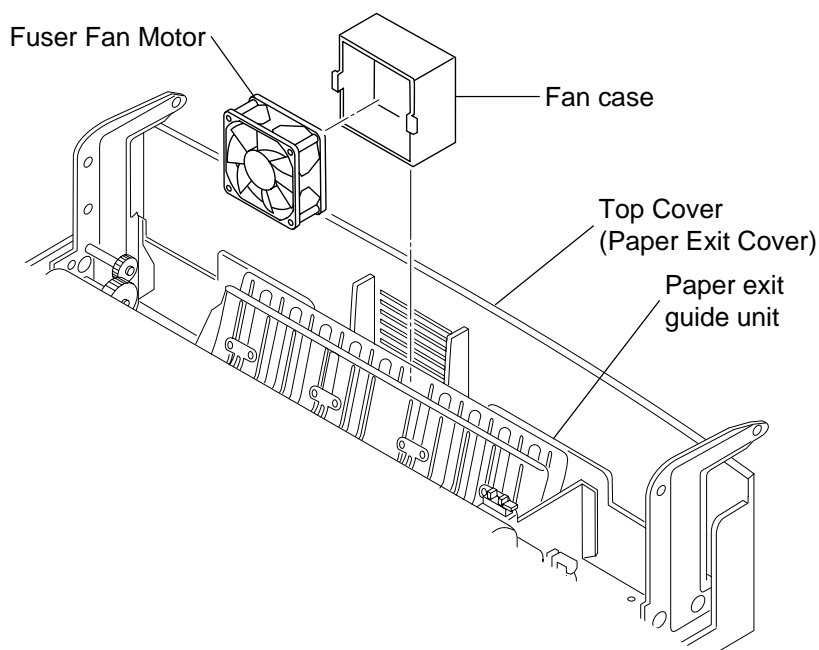


Fig.7-57

- 9) Remove the set screws BT3X8 (4 pcs.) from the paper exit guide unit.
- 10) Remove the top cover (paper exit cover) from the paper exit guide unit.

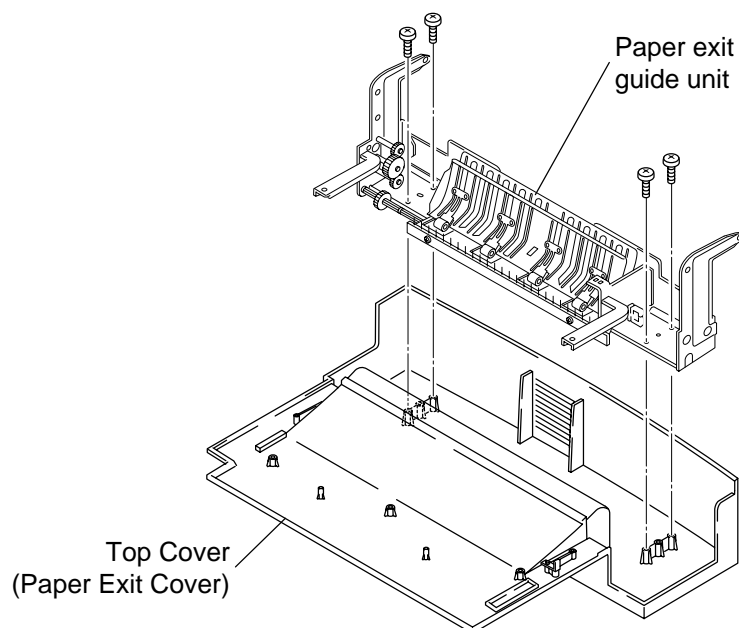


Fig.7-58

Note:

- When re-assembling, ensure the hooks are fitted facing in the correct direction on the release arm. The two hook assembly sliders are of different widths to ensure correct assembly. (Refer to Fig.7-59 below.)

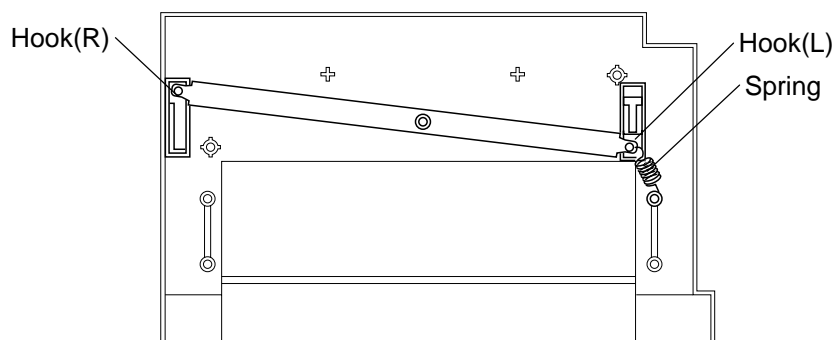


Fig.7-59

- When refitting the paper exit inner cover, fit it onto the top cover while holding the release arm in position with a screw driver for easier and correct assembly.

4.4.3 Cleaning Roller Sensor (CRS)

- 1) Disconnect the harnesses connected to the cleaning roller sensor.
- 2) Remove the cleaning roller sensor from the paper exit guide (paper exit stay).

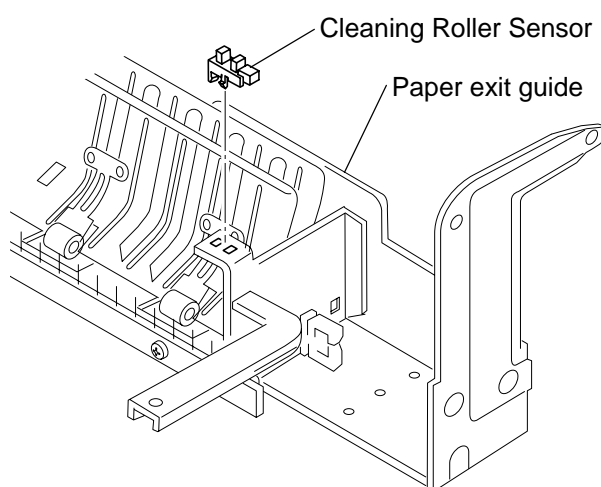


Fig.7-60

4.4.4 Discharger Brush

- 1) Remove the set screws BT4X6 (2 pcs.) from the discharger brush.
- 2) Remove the discharger brush and the plastic retainer.



PRECAUTION

Do not deform the fur brush of the discharger brush.

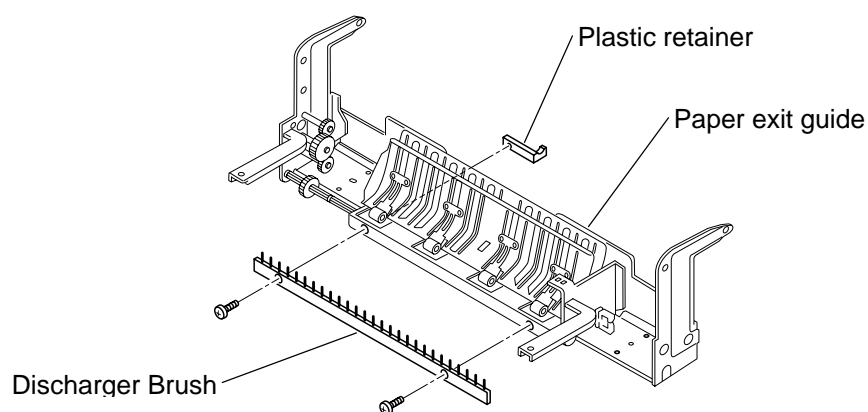


Fig.7-61

4.4.5 Paper Exit Roller

- 1) Remove the C ring, washer, and plastic bush from the left and right hand sides.
- 2) Remove the shaft support at both sides.
- 3) Remove the paper exit roller from the paper exit guide.

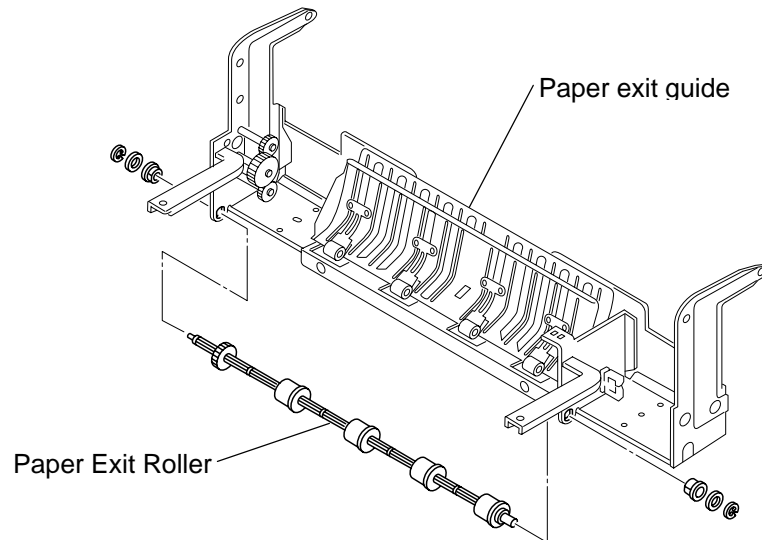


Fig.7-62

4.4.6 Paper Exit Sensor (PT2)

- 1) Disconnect the harnesses connected to the paper exit sensor.
- 2) Remove the paper exit sensor from the paper exit guide.

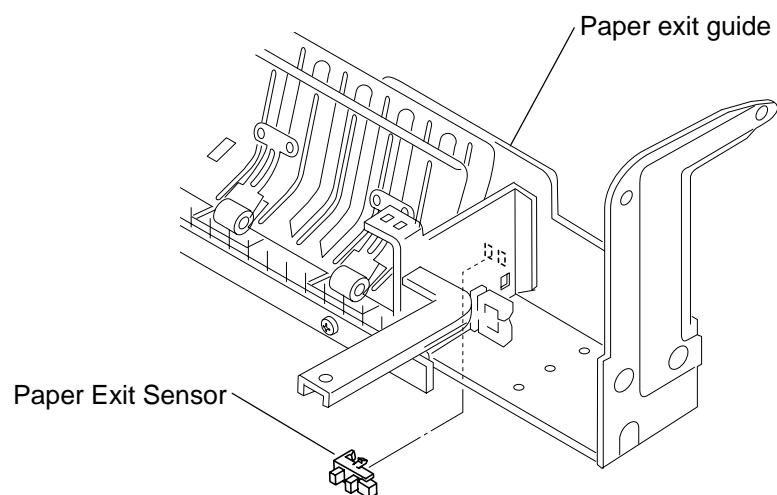


Fig.4-63

4.5 Front of the Printer

4.5.1 Front Cover Unit

- 1) Open the front cover unit.
- 2) Remove the set screws BT4X8 (2 pcs.) from the front inner cover.
- 3) Release the two hooks at the front edge of the inner cover and lift it up.
- 4) Release the hinge pin lock lever.
- 5) Pull the hinge pin slightly to the right to release the hinge arm.

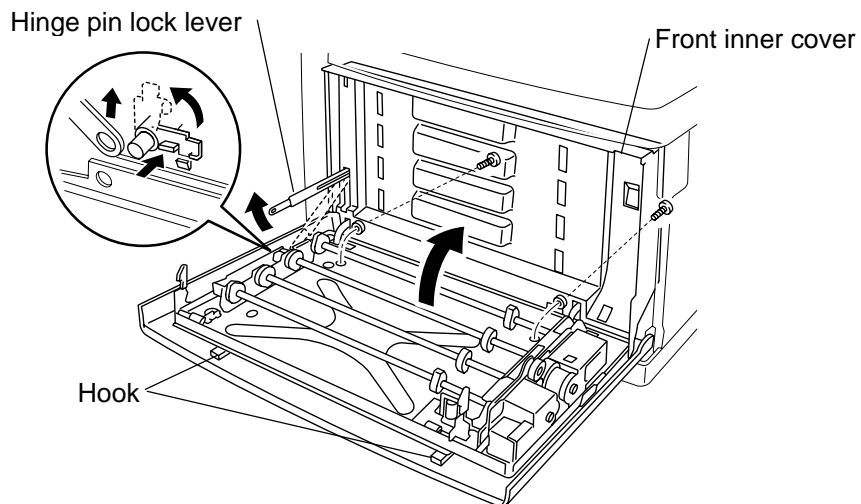


Fig.7-64

- 6) Remove the front inner cover.
- 7) Disconnect all the harnesses (4 pcs.) connected to the developer position sensor and developer solenoids.
- 8) Remove the set screws ST3X6 (2 pcs.) from the front hinge (L).
- 9) Remove the front hinge (L) from the frame.
- 10) Sliding the front cover unit to the right, release the hinge pin at the right hand side.
- 11) Remove the set screws BT4X8 (4 pcs.) to remove the front cover from the assembly base plate.
- 12) Remove the front cover.

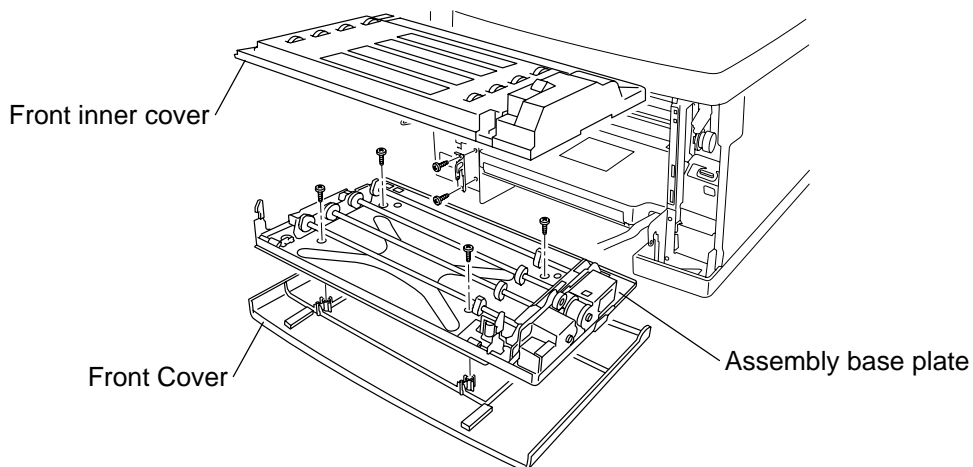


Fig.7-65

4.5.2 Scanner Unit (Scanner Motor inclusive)

- 1) Cover 'C' is fixed by plastic projections and hooks at three locations at the front and three locations at the rear. Release the hooks at the rear.
- 2) Release the fixings at the front by pulling cover 'C' forwards.
- 3) Remove the harness from the harness holder, and the cover 'C' from the printer.
- 4) Remove the set screws ST3X6 (3 pcs.) from the scanner unit.
- 5) Disconnect the harness connector (1 pc.) from the scanner unit.
- 6) Remove the scanner unit from the printer.

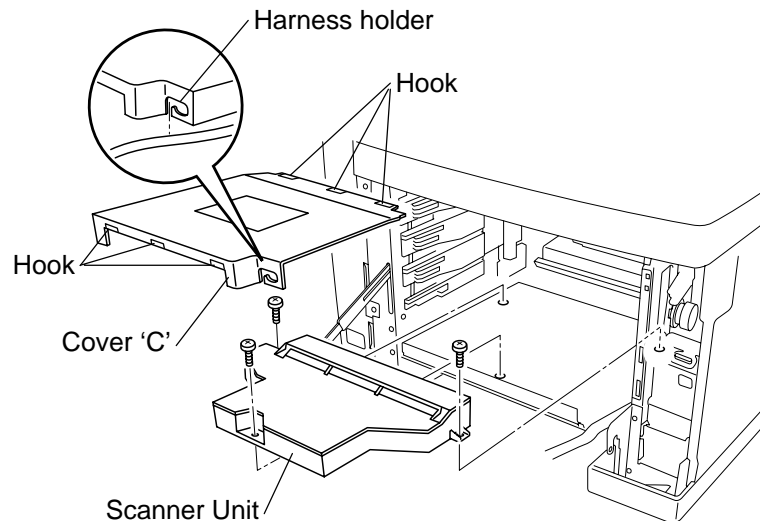


Fig.7-66



WARNING

- *There is a class IIIb laser within the scanner unit. Do not attempt to disassemble the laser.*
- *The scanner unit is replaced as a complete unit. No adjustment is required to the replacement scanner unit.*
- *Confirm that all the covers have been correctly installed prior to any test run or operation in order to prevent any laser radiation escaping from the printer.*

4.6 Rear of the Printer

4.6.1 Rear Access Cover (L) / Transfer Unit

- 1) Open the rear access cover.
- 2) Remove the upper screw of the retaining strap supporting the transfer unit to the printer body.
- 3) Remove the set screw ST3X6 (1 pc.) from the left hand side transfer unit metal retaining plate.
- 4) Remove the metal retaining plate.
- 5) Remove the support shaft from the installation hole at the right hand side while lifting the unit slightly.

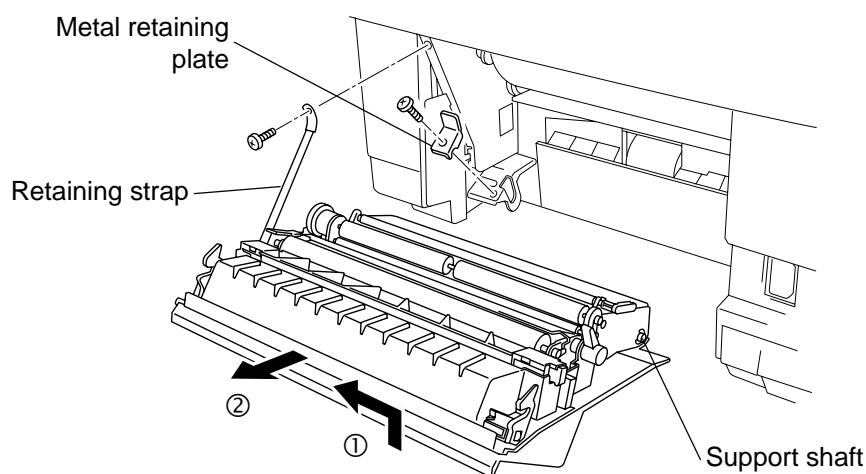


Fig.7-67

- 6) Remove the transfer unit with the rear access cover.
- 7) Remove the set screws ST3X8 (4 pcs.) from the transfer unit.
- 8) Remove the transfer unit from the rear access cover.

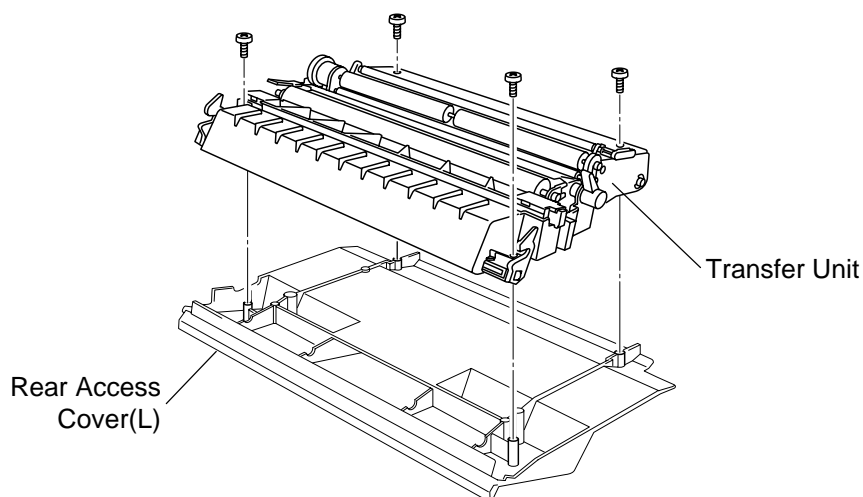


Fig.7-68

Note:

When reassembling the transfer unit, install the support shaft into the right hand hole first.

4.6.2 Transfer Roller

- 1) Lift the transfer roller lock lever to release the right hand end of the roller. The angle of lifting the lock lever is approx. 80° from the horizontal.
- 2) Push the tab of the left hand side to remove the shaft from the installation hole at the right side first, then remove the transfer roller.
- 3) Remove the transfer roller.

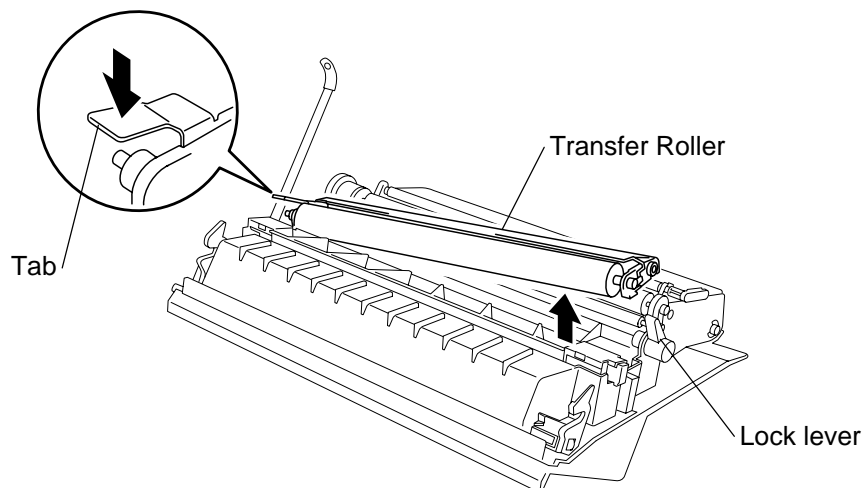


Fig.7-69

4.6.3 Register Roller

- 1) Remove the roller fixing C rings from both ends of the roller.
- 2) Remove the gear from the shaft (left hand side).
- 3) Remove the plastic bushes at both ends.
- 4) Remove the shaft support from the frame while pressing down on the pressure roller to release the pressure from the register roller.
- 5) Remove the register roller.

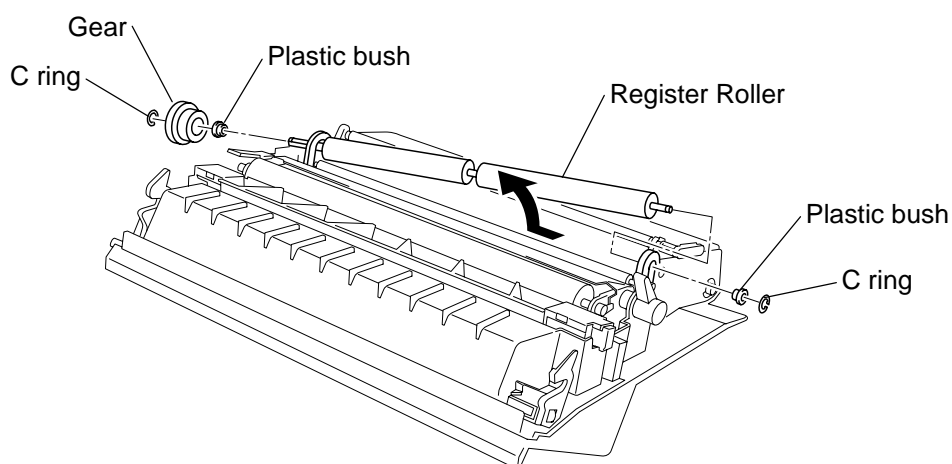


Fig.7-70

4.6.4 Paper Feed Roller / Separator Pad

- 1) Remove the media cassette.
- 2) Remove the set screws ST3X6 (2 pcs.) from the paper guide (L).
- 3) Remove the paper guide (L).
- 4) Remove the set screws ST3X6 (2 pcs.) from the paper guide (UR).
- 5) Remove the paper guide (UR).
- 6) Disconnect the harnesses (2 pcs.) connected to the OHP sensor and paper empty sensor.
- 7) Remove the paper feed roller by pushing it to the right viewed from the rear of the printer.

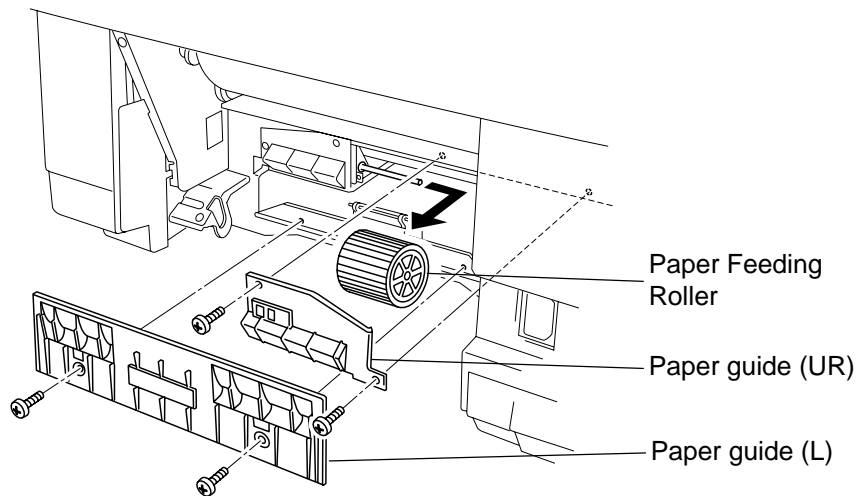


Fig.7-71

- 8) Pull up and remove the separator pad.

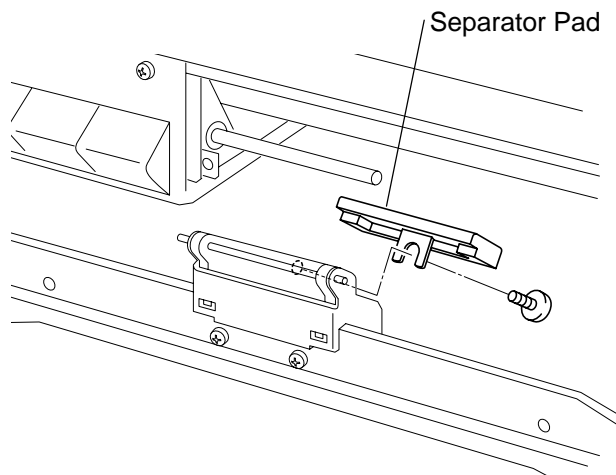


Fig.7-72



PRECAUTION

Do not touch the surface of the paper feed roller and separator pad.

4.6.5 Paper Empty Sensor (PE) / OHP Sensor (OHP)

- 1) Remove the sensor connector.
- 2) Remove the set screws BT3X8 (2 pcs.) from the OHP sensor and remove the (OHP) sensor from the paper guide assembly (UR).
- 3) Remove the paper empty sensor (PE) from the paper guide assembly (UR)

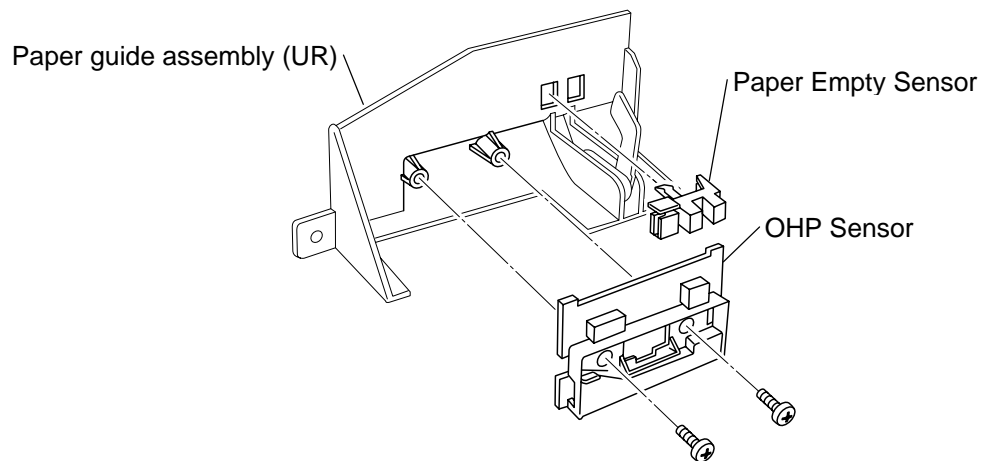


Fig.7-73

4.6.6 Paper Feeding Sensor (PT1)

- 1) Remove the paper feeding sensor from the stay feeder.
- 2) Disconnect the connector on the paper feeding sensor.

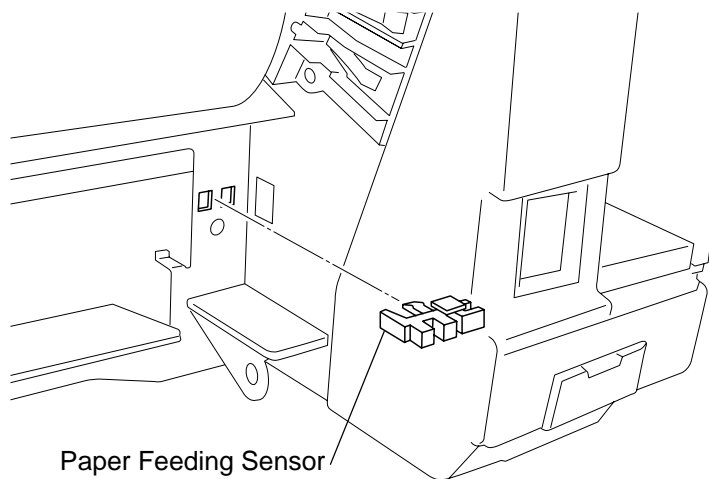


Fig.7-74

4.7 Fusing Unit



DANGER

[Note in Parts Replacement]

- *The fuser unit consists of important safety parts. Replacement of parts or disassembly and maintenance work should only be done at an appropriate service facility by skilled service personnel acquainted with electrical safety. After re-assembly the product safety should be reconfirmed.*
- *Since the fuser unit is very hot, make sure that the fuser unit and surrounding area are well cooled down prior to starting the replacement of parts. You may get burned when touching hot areas.*
- *The fusing unit contains silicone oil. Take care not to spill the silicone oil, especially on the floor, as the floor will become very slippery and dangerous.*

4.7.1 Fusing Heater Lamp

- 1) Remove the set screw ST3X6 (1 pc.) from the F. cover (L).
- 2) Remove the set screw ST3X6 (1 pc.) from the F. cover (R).

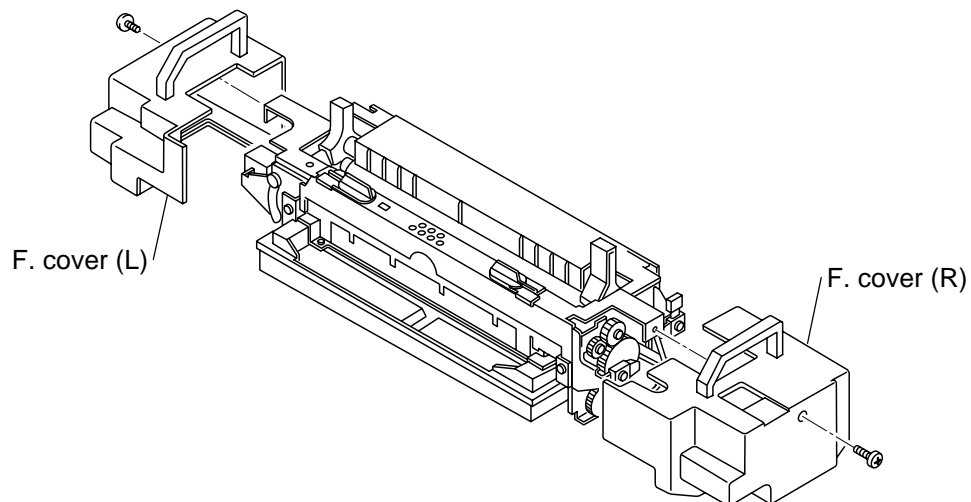


Fig.7-75

- 3) Pull the F. terminal (L) of the fuser roller side toward you and release the fusing heater lamp (400W) from the F. terminal.
- 4) Pull out the fusing heater lamp (400W) from the inside of the fuser roller.
- 5) Pull the F. terminal (L) of the back-up roller side toward you and release the fusing heater lamp (300W) from the F. terminal.
- 6) Pull out the fusing heater lamp (300W) from the inside of the back-up roller.

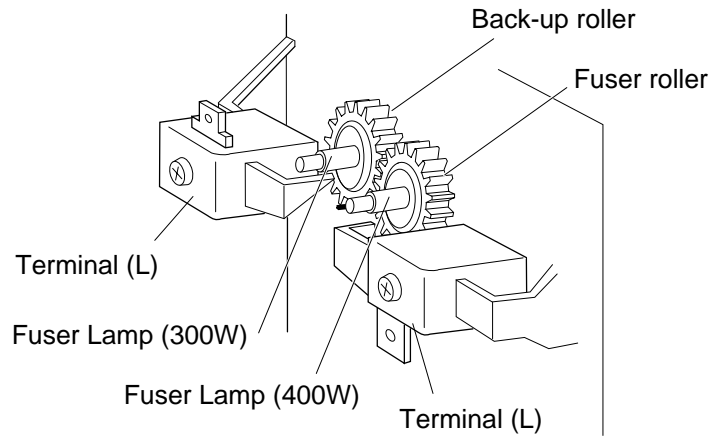


Fig.7-76

**PRECAUTION**

- Do not touch the surface of the heater lamp with your hands, the small traces of oil you leave on the lamp will affect the life of the lamp.
- The wattage and length of the heater lamp is different between the fuser roller and the back-up roller. The wattage is marked on the insulator of the lamp electrode.

Fuser roller:	400W (Length;342mm)
Back-up roller :	300W (Length;332mm)

Note:

When installing the new fusing unit into the printer, you have to wait approximately for 30 minutes after the unit is installed to allow the fusing oil to circulate in the unit.

CHAPTER VIII

TROUBLESHOOTING

CONTENTS

CHAPTER VIII TROUBLESHOOTING	VIII-1
1. OUTLINE OF TROUBLESHOOTING	VIII-2
2. OPERATOR CALL	VIII-3
2.1 Video Controller Mode	VIII-3
2.2 Engine Controller Mode	VIII-6
3. PAPER TRANSPORT ERROR	VIII-8
3.1 Feed Jam	VIII-8
3.2 Inner Jam	VIII-9
3.3 Outer Jam	VIII-9
3.4 Others	VIII-9
4. SERVICE CALL	VIII-10
4.1 Video Controller Mode	VIII-11
4.2 Engine Controller Mode	VIII-13
5. IMAGE FAILURE	VIII-41

CHAPTER VIII TROUBLESHOOTING

This chapter contains troubleshooting information for both the Video Controller Mode and the Engine Controller Mode.

If any problem occurs during the normal usage of the printer, which means the printer is being used in the Video Controller Mode, clear the problem by referring to the troubleshooting information in the following sections for the Video Controller Mode or the user's guide.


However, if a problem occurs in the video controller itself, use the Engine Controller Mode information as it may be easy to understand the cause of the problem because the Engine Controller mode can separate the problem in the video controller from the printing operations.

The error messages used in the Video Controller Mode basically contain the same ones that are used in the Engine Controller Mode. All error status messages are displayed in the Video Controller Mode other than when an error occurs in the video controller itself or in the communication between the video controller and the engine controller.

Note:

The operation of the control panel and the display on the LCD vary depending on the mode selected.

1. OUTLINE OF TROUBLESHOOTING

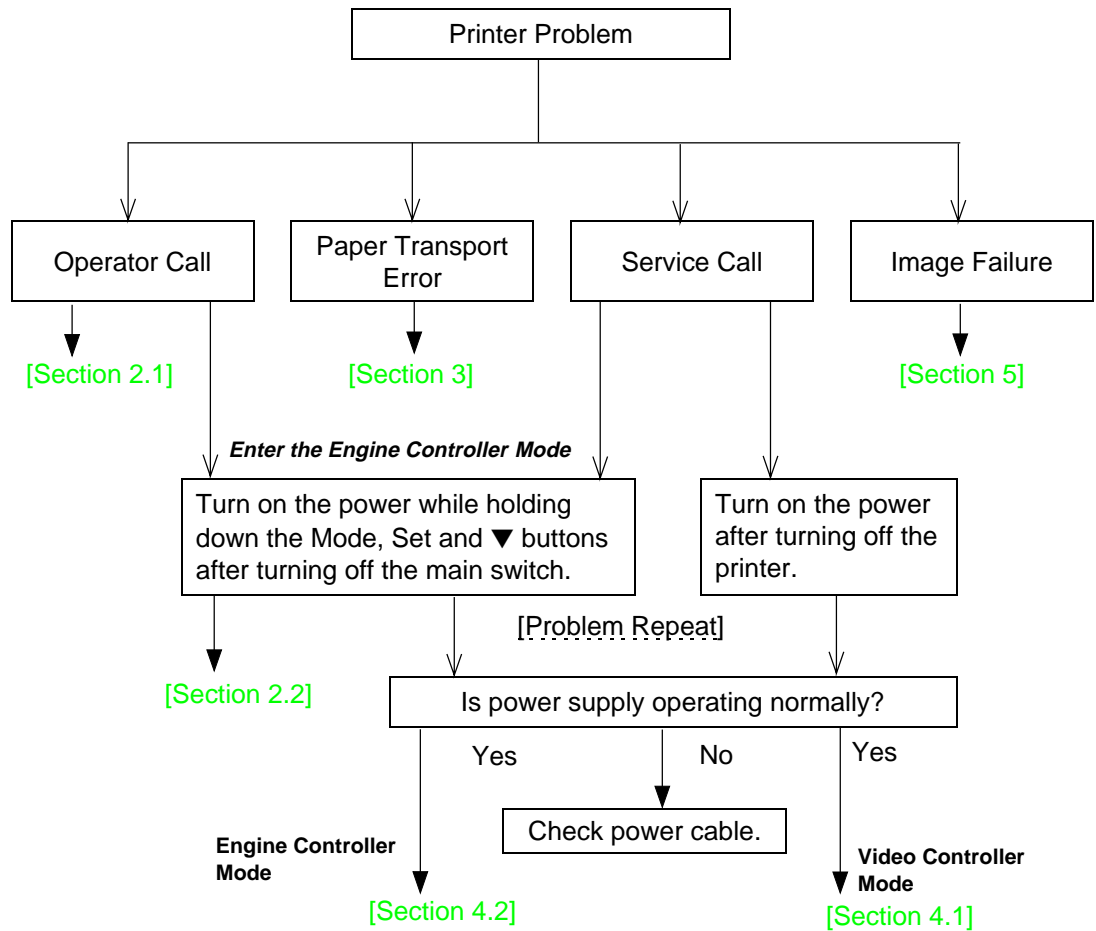

2. OPERATOR CALL

2.1 Video Controller Mode

The Ready LED is lit and an applicable message appears on the liquid crystal display (LCD) in the following cases;

- 1) Consumables require to be replenished.
- 2) Waste toner pack is full of waste toner.
- 3) Paper jam.
- 4) Periodic maintenance.
- 5) Maintenance work incomplete.

The above cases are not regarded as a breakdown, and should be treated in accordance with Table 8-1;

Table 8-1

Display Message	Meaning	Countermeasure
CHECK XX TRAY	No paper in the media cassette (XX is TRAY1 / TRAY2)	Check the adjustment lever at the bottom of the upper media cassette and adjust to the correct setting when the CHECK TRAY1 message appears. Load a stack of paper into the cassette.
12 COVER OPEN FRONT	The front cover is open	Close the front cover.
12 COVER OPEN TOP	The top cover is open.	Close the top cover.
12 COVER OPEN REAR	The rear access cover is open.	Close the rear access cover.
13 JAM XXXXXX	Paper jam in the printer. XXXXXX is DRUM / FEEDER / INSIDE / REAR.	Remove the jammed paper from the indicated area.
14 NO CARTRIDGE XXXX COLOR	No toner cartridge in the printer.	Install the requested toner cartridge.
XX NO CASSETTE	No media cassette. XX is T1 / T2.	Install the requested media cassette.
16 TONER EMPTY XXXX COLOR	Toner almost empty: Another 50 pages may be printed. (The Alarm LED is lit at the same time.)	Remove the toner cartridge, rock it several times by 45°, and install it again or replace the toner cartridge with a new one.
XX LOAD PAPER ***** SIZE	Incorrect size of paper in the media cassette XX. XX is T1 / T2. (The message appears alternately to show a particular size.)	Load the requested size of paper in the media cassette and press the Form Feed button.

Display Message	Meaning	Countermeasure
T1 MANUAL FEED ***** SIZE	Request to load paper manually. (The message appears alternately to show a particular size.)	Load the requested size of paper into the standard media cassette and press the Select button.
19 CHECK FONT	An error occurred in the optional font card.	Turn off the printer, and reinstall or replace the optional font card.
20 FONT REMOVAL	Font card removed while the printer is on-line.	Turn off the printer, re-install the font card, and turn on the printer. The Continue button will allow you to temporarily ignore this message.
22 WASTE TONER	Waste toner pack full of toner	Replace with a new one.
23 OIL EMPTY	No oil in the oil bottle	Replace with a new one.
24 CHANGE FCR	Change the fuser cleaner.	Replace with a new one.
25 NO FUSER UNIT	Fusing unit not installed	Remove fusing unit and then refit it. Confirm correctly installed and clamped.
27 NO OPC BC	OPC belt cartridge not installed	Remove the OPC belt cartridge and then refit it. Confirm correctly installed and locked.
28 NO FC ROLLER	Fuser cleaner not installed	Remove fuser cleaner and then refit it. Confirm correctly installed and clamped.
72 CHANGE FILTER	Change the ozone filter.	Replace with a new one.
TONER LOW XXXX	The toner of the color indicated by XXXX is nearly empty.	Replace the toner cartridge which has nearly run out.
FUSER OIL LOW	Oil in the oil bottle is almost empty.	Replace with a new one.
REPLACE FCR	Change the fuser cleaner.	Replace with a new one.
REPLACE OPC BC	Change the OPC belt cartridge.	Replace with a new one.
REPLACE FUSER	Change the fusing unit.	Replace with a new one.
REPLACE 120K KIT	Change the drum cleaner, paper discharger and transfer roller.	Replace with new ones.
REPLACE FILTER	Change the ozone filter.	Replace with a new one.

Display Message	Meaning	Countermeasure
31 PRINT OVERRUN	Print overrun	Press the Continue button to start printing the next page. Data which overran the print area on the page cannot be printed. Check your page protection setting with the Mode button. Setting page protection to the correct size could solve this problem. If printing at 600dpi, you may need to add optional SIMM memory.
32 BUFFER ERROR	Input buffer overflow	Press the Continue button to resume printing. Data lost in buffer overflow cannot be printed.
34 MEMORY FULL	Work memory overflow	Press the Continue button to resume printing. If the same error should occur after you press the Continue button, turn off the printer. Wait a few seconds, then turn it on again. Reduce the input buffer size. Turn off "KEEP PCL". Add SIMM memory with printer power off. Download font and the fonts saved in the HDD card might cause the error, for these occupy the same work area as the RAM. Memory expansion is recommended in that case.
40 LINE ERROR	Error in the communications circuit	When the serial interface is used, check the communications parameters such as baud rate, code type, parity, and handshake protocols. When the parallel interface is used, check the interface cable communication.
41 PRINT CHECK	Error in communication with the engine controller	Turn off the printer. Wait a few seconds, then turn it on again.
42 CARD 1(2) FULL	Card overflow	Delete unnecessary macros or fonts, or use a new card.
43 CARD 1(2)W ERROR	Card write error	Set the write protect button of the card to OFF if it has been set to ON. Use a new card.

Display Message	Meaning	Countermeasure
44 SIMM ERROR	Incorrect installation of SIMMs	Install SIMMs correctly, referring to the printed error message.
45 MIO ERROR	Error in communication with the MIO card	Install the MIO card correctly.
47 CARD1(2)R ERROR	Card read error	Use a new card. If the same error occurs, consult your dealer or service personnel.
XX SIZE ERROR	Paper of incorrect size is loaded into XX. XX is T1/2.	Set the correct size of paper in T1/2.
IGNORE DATA	Data is ignored because of an error in the PostScript language program.	Press the Reset button. If the same error occurs, you may need to add optional SIMM memory.

2.2 Engine Controller Mode

The Ready LED is lit, and applicable messages appear on the liquid crystal display (LCD) in the following cases;

- 1) Consumables require to be replenished.
- 2) Waste toner pack is full of waste toner.
- 3) Paper jam.
- 4) Periodic maintenance.
- 5) Maintenance work being incomplete.

The above cases are not regarded as a breakdown, and should be treated in accordance with Table 8-2;

Table 8-2

Display Message	Meaning	Countermeasure
11 NO MEDIA UPP/LOW	No paper in the upper cassette / lower cassette	Replenish paper.
11 CHK MEDIA UPP/LOW	Inconsistency of media	Change media.
12 NO TRAY UPP/LOW	No upper / lower media cassette	Install cassette(s).
13 REPLACE TONER Y/M/C/K	Toner (Y, M, C, K) empty	Replace with new toner cartridge(s).
14 CHECK WASTE TONER	Waste toner pack full of toner	Replace with a new waste toner pack.
14 CHECK FUSER OIL	Change the oil bottle	Replace with a new oil bottle.

Display Message	Meaning	Countermeasure
14 CHK CLEANING ROLLER	Change the fuser cleaner	Replace with a new fuser cleaner
15 MISPRINT PAPER/PRREQ/MEDIA	Misprinting occurred	Confirm status of media cassette. Confirm correct paper size. Confirm consistency of media.
16 ALIGN TONER CG Y/M/C/K	Toner cartridge not installed	Confirm the installation of the toner cartridge(s).
16 ALIGN FU UNIT	Fusing unit not installed	Remove the fusing unit and refit it. Confirm it is correctly installed.
16 ALIGN BELT CG	OPC belt cartridge not installed	Confirm the installation of the OPC belt cartridge.
17 MEDIA JAM FEED	Paper jam at feeding area	Remove the media cassette, and remove paper jammed at feeding entrance.
17 MEDIA JAM INNER	Paper jam inside printer	Open the transfer unit, and remove paper jammed inside.
17 MEDIA JAM OUTER	Paper jam at paper exit area	Open the transfer unit / paper exit unit and remove paper jammed inside.
17 MEDIA JAM DRUM	Paper jam wound around the transfer drum	Open the transfer unit and remove the OPC belt cartridge. Remove the paper jam by unwinding the paper from the transfer drum.
18 CLOSE PANEL FRONT/TOP	Covers open	Confirm that the covers are firmly closed.
18 CLOSE TR UNIT	Transfer unit open	Confirm that the transfer unit is firmly closed.
19 SLEEP MODE	Printer under idling condition	Printer automatically returns to the operating condition when a PRINT signal is sent.
01 WAIT	Printer warming-up	These are normal operation modes.
00 READY	Printer ready to print in standby status	
02 PRINT	Printing in progress	

3. PAPER TRANSPORT ERROR

Paper is transported through the path shown in Fig.8-1. Paper jams at the following locations are easily cleared.

- Paper Feeding Roller
- Transfer Unit
- Fusing Unit
- Paper Exit Unit

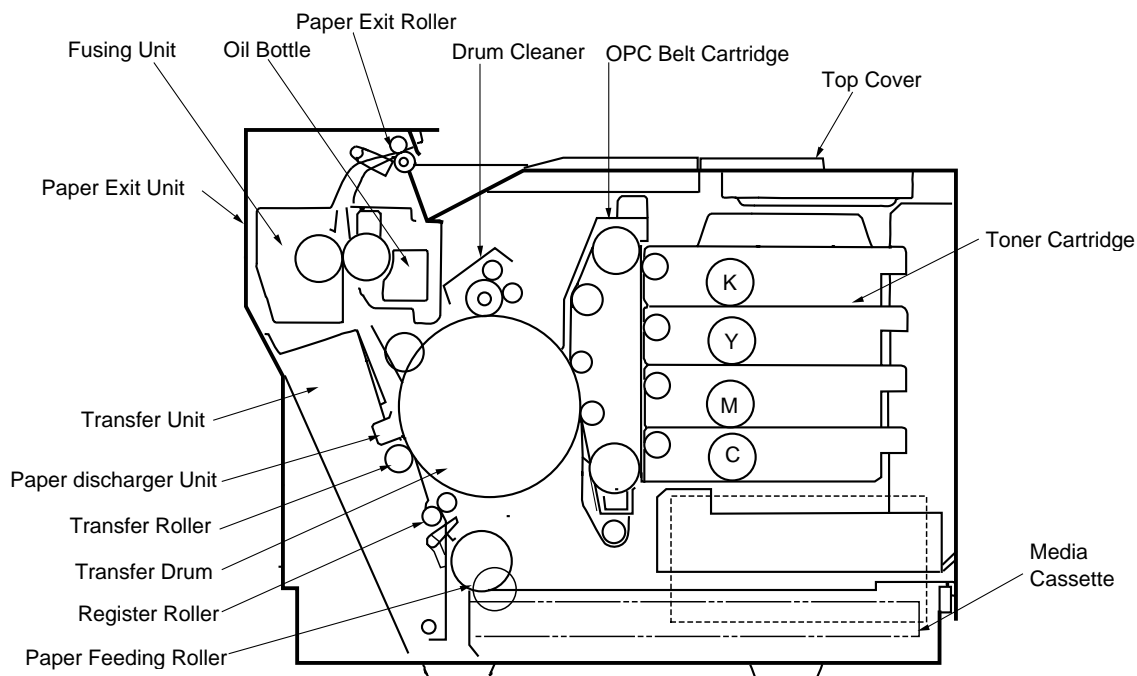


Fig.8-1

3.1 Feed Jam

Table 8-3-1

Problem Item	Step	Check Item	Result	Action
Print Paper	1	Is the print paper a recommended paper?	NO	Use a recommended paper.
	2	Is the print paper damp?	YES	Replace the existing paper with new.
	3	Was the paper fanned before loading in the media cassette?	NO	Fan the paper before loading.
Media Cassette	4	Is the print paper set in place?	NO	Set the paper in the correct place.
	5	Is the end plate properly set up?	NO	Set the end plate to meet the paper size.
	6	Is the paper stacked above the line on the paper guide?	YES	Stack the paper below the line.
	7	Is there paper dust around the paper guide?	YES	Clean the paper guide with a cotton cloth.
Pick-up Roller / Separation Pad	8	Is the print paper caught in the paper feeding part?	YES	Remove the paper.
	9	Is the pick-up roller damaged?	YES	Service call required to replace the damaged pick-up roller.

3.2 Inner Jam

Table 8-3-2

Problem Item	Step	Check Item	Result	Action
Transfer Unit		Open the transfer unit and check.		
	1	Is there any paper inside the unit?	YES	Remove the paper inside.
	2	Is the transfer roller firmly locked by the lock lever?	NO	Fix the transfer roller with the lock lever.
	3	Is the paper discharger unit installed in place?	NO	Install the paper discharger unit firmly in place.
	4	Is there paper dust around the registration roller?	YES	Clean the registration roller with a cotton cloth.
	5	Is the wire of the paper discharger unit damaged?	YES	Replace the existing paper discharger unit with a new one.
Fusing Unit	6	Is the fusing unit installed in place?	NO	Install the fusing unit firmly in place.
	7	Is there any paper trapped between the rollers?	YES	Remove the trapped paper.
	8	Is there fuser oil still in the oil bottle?	NO	Replace the existing oil bottle with a new one.

3.3 Outer Jam

Table 8-3-3

Problem Item	Step	Check Item	Result	Action
Print Paper	1	Is the print paper a recommended paper?	NO	Use a recommended paper.
Paper Exit Unit	1	Is the paper exit unit firmly locked by the lock lever?	NO	Open and close the paper exit unit again.
	2	Is there paper dust around the exit roller?	YES	Clean the exit roller with a cotton cloth.


3.4 Others

Table 8-3-4

Problem Item	Cause	Result	Action
The edge of print paper is creased.	Is the curled paper edge creased when the paper is loaded through the pick-up roller?	YES	Turn over the paper in the media cassette.

4. SERVICE CALL

If errors or failures occurred inside the printer, the applicable error message will be displayed on the control panel, and the printer stops. If errors or failures repeat even after resetting the power button, confirm the error code and then call your Service provider.

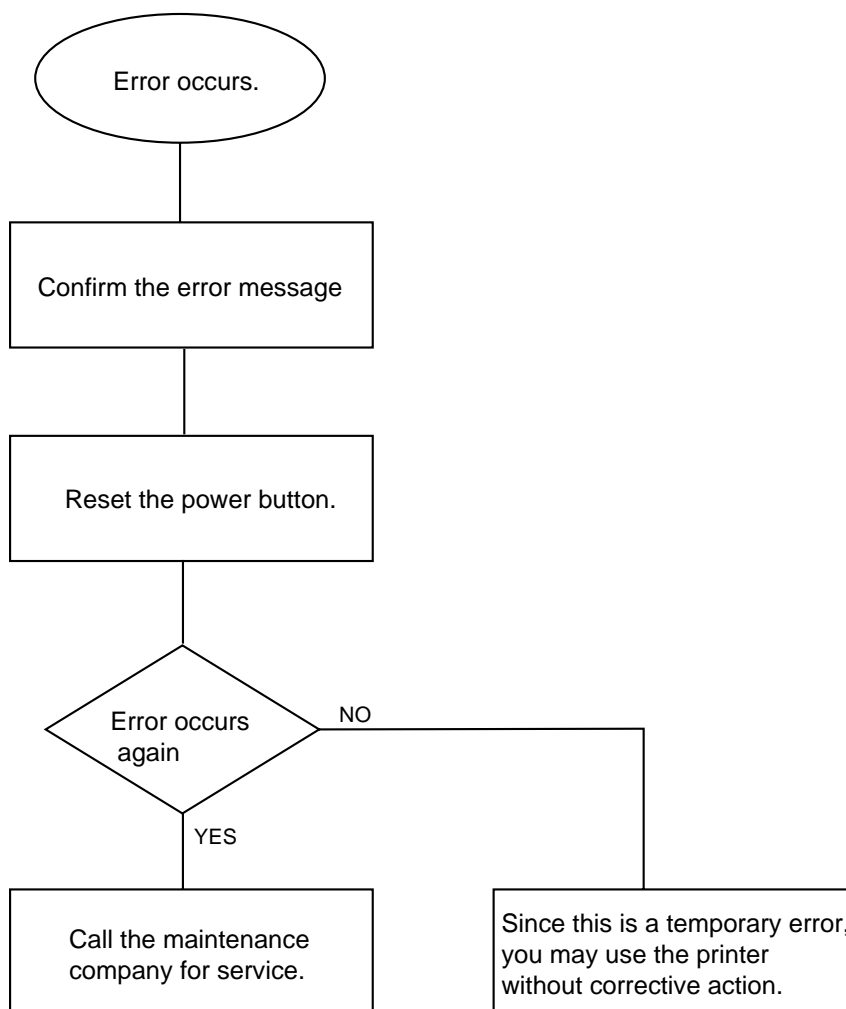

4.1 Video Controller Mode

Table 8-4-1

Service Call Message	Meaning	Countermeasure
61 PROG ERROR	Program ROM checksum error	Replace with a new ROM.
62 FONT ERROR	Font ROM checksum error	Replace with a new ROM.
63 D-RAM ERROR	D-RAM error	Replace with a new SIMM.
66 NV-W ERROR	NVRAM write error	Replace with a new main (video controller) PCB.
67 NR-R ERROR	NVRAM read error	Replace with a new main (video controller) PCB.
68 NV-B ERROR	NVRAM write/read error	Replace with a new main (video controller) PCB.
60 SYSTEM ERROR	System error	Replace with a new main (video controller) PCB.
99 SERVICE 2	Instruction access error	Replace with a new main (video controller) PCB.
99 SERVICE 3	error	Replace with a new main (video controller) PCB.
99 SERVICE 4	Instruction bus error	Replace with a new main (video controller) PCB.
99 SERVICE 5	Data bus error	Replace with a new main (video controller) PCB.
99 SERVICE 6	Privileged instruction	Replace with a new main (video controller) PCB.
99 SERVICE 8	Illegal instruction	Replace with a new main (video controller) PCB.
99 SERVICE 9	No fpu	Replace with a new main (video controller) PCB.

Table 8-4-2

Service Call Message	Description
99 SERVICE C3	NVRAM Error (MCTL PCB)
99 SERVICE C4	Engine Controller MCTL PCB Hardware Error
99 SERVICE C7	Process Timing Clock Error (Main Motor Clock Error)
99 SERVICE D1	Clutch Error of the Yellow Developing Unit
99 SERVICE D2	Clutch Error of the Magenta Developing Unit
99 SERVICE D3	Clutch Error of the Cyan Developing Unit
99 SERVICE D4	Clutch Error of the Black Developing Unit
99 SERVICE D5	HPSI Signal Error (Retract Error of Black and Yellow Toner Cartridge)

Service Call Message	Description
99 SERVICE D6	HPSI Signal Error (Retract Error of Cyan and Magenta Toner Cartridge)
99 SERVICE E1	Developing Motor Error
99 SERVICE E2	Main Motor Error
99 SERVICE E3	Transfer Drum Rotational Error
99 SERVICE E4	Toner Sensor PCB Error
99 SERVICE E5	Transfer Roller Solenoid Error
99 SERVICE E6	Brush Cleaner Solenoid Error
99 SERVICE E7	Brush Cleaner Clutch Error
99 SERVICE E8	Fusing Unit Clutch error
99 SERVICE E9	Belt Sensor Error
99 SERVICE EL	Erase Lamp Error
99 SERVICE F0	Control Fan Error
99 SERVICE F2	Ozone Fan (1) Error
99 SERVICE F4	Fuser Fan Error
99 SERVICE F5	Charging HV (DC High Voltage) Error
99 SERVICE H0	Fuser Thermistor Error
99 SERVICE H2	Fusing Temperature Error (Warming-up Time Error)
99 SERVICE H3	Fusing Temperature (3) Error (Heater Continuous ON Time Error)
99 SERVICE H4	Fusing Temperature (4) Error (Heater Continuous ON Time Error)
99 SERVICE L1	Beam Sensor Error
99 SERVICE L2	Scanner Motor Error
99 SERVICE LL	Laser Power Error

Note:

For further actions for the error messages described in Table 8-4-2, refer to the flow charts later in this section.

4.2 Engine Controller Mode

Table 8-4-3


Code	Description
C3	NVRAM Error (MCTL PCB)
C4	Engine Controller MCTL PCB Hardware Error
C7	Process Timing Clock Error (Main Motor Clock Error)
D1	Clutch Error of the Yellow Developing Unit
D2	Clutch Error of the Magenta Developing Unit
D3	Clutch Error of the Cyan Developing Unit
D4	Clutch Error of the Black Developing Unit
D5	HPSI Signal Error (Retract Error of Black and Yellow Toner Cartridge)
D6	HPSI Signal Error (Retract Error of Cyan and Magenta Toner Cartridge)
E1	Developing Motor Error
E2	Main Motor Error
E3	Transfer Drum Rotational Error
E4	Toner Sensor PCB Error
E5	Transfer Roller Solenoid Error
E6	Brush Cleaner Solenoid Error
E7	Brush Cleaner Clutch Error
E8	Fusing Unit Clutch error
E9	Belt Sensor Error
EL	Erase Lamp Error
F0	Control Fan Error
F2	Ozone Fan (1) Error
F4	Fuser Fan Error
F5	Charging HV (DC High Voltage) Error
H0	Fuser Thermistor Error
H2	Fusing Temperature Error (Warming-up Time Error)
H3	Fusing Temperature (3) Error (Heater Continuous ON Time Error)
H4	Fusing Temperature (4) Error (Heater Continuous ON Time Error)
L1	Beam Sensor Error
L2	Scanner Motor Error
LL	Laser Power Error

Note:


For further actions for the error messages described in Table 8-4-3, refer to [the flow charts later in this section](#).

Chart 8-4 Troubleshooting


Code	Description of Error	Cause of Error	Clearance Method
C3	NVRAM Error	1. Failure of MCTL PCB. • CPU • EEPROM	1. Turn off and on the power switch. 2. If method 1 does not work, carry out the "C3 Error Clearance Procedure". 3. Replace the failed MCTL PCB with a new one.

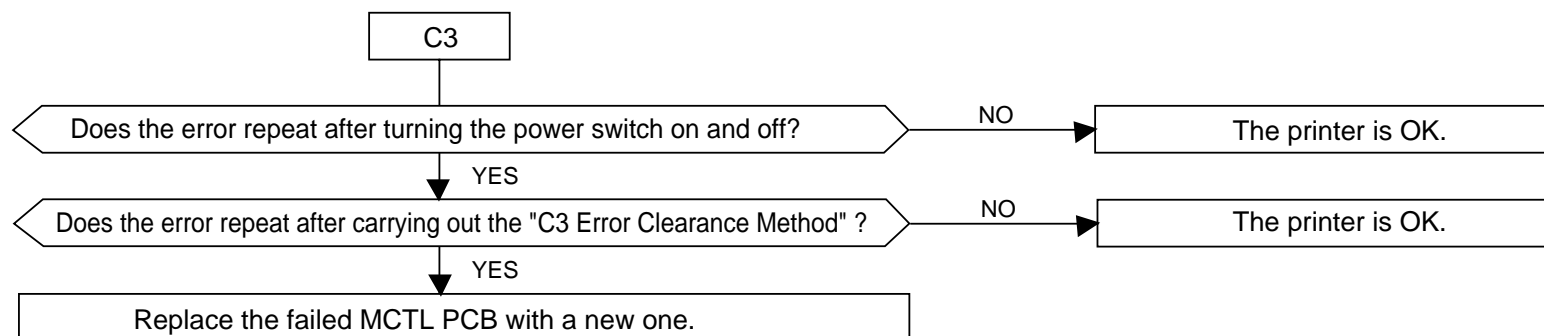



Code	Description of Error	Cause of Error	Clearance Method
C4	Hard Error of MCTL Control Circuit.	1. Failure of MCTL PCB.	1. Turn off and on the power switch. 2. Replace the failed MCTL PCB with a new MCTL PCB.

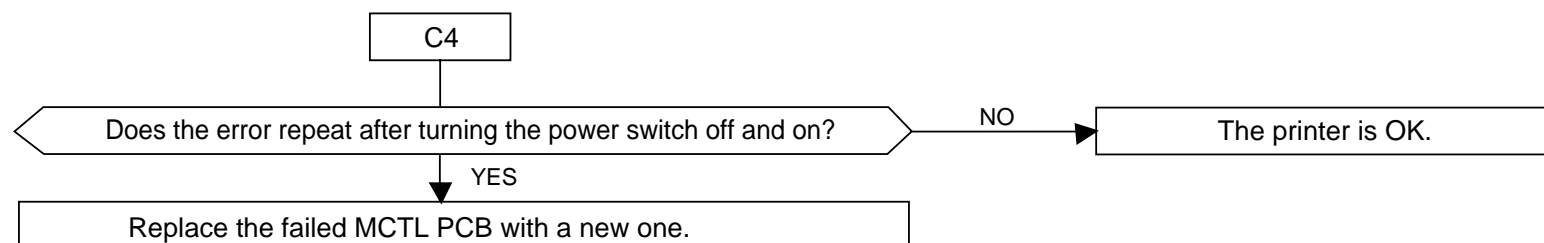




Code	Description of Error	Cause of Error	Clearance Method
C7	Process Timing Error.	1. Power Feeding Failure 2. MM Failure 3. MM Input Circuit Failure	1. Implement the same clearance procedures employed for E2 error. [Note]: MM stands for OPC Belt Drive Main Motor.


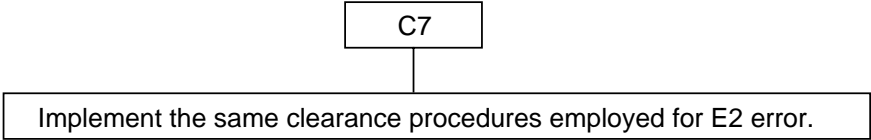



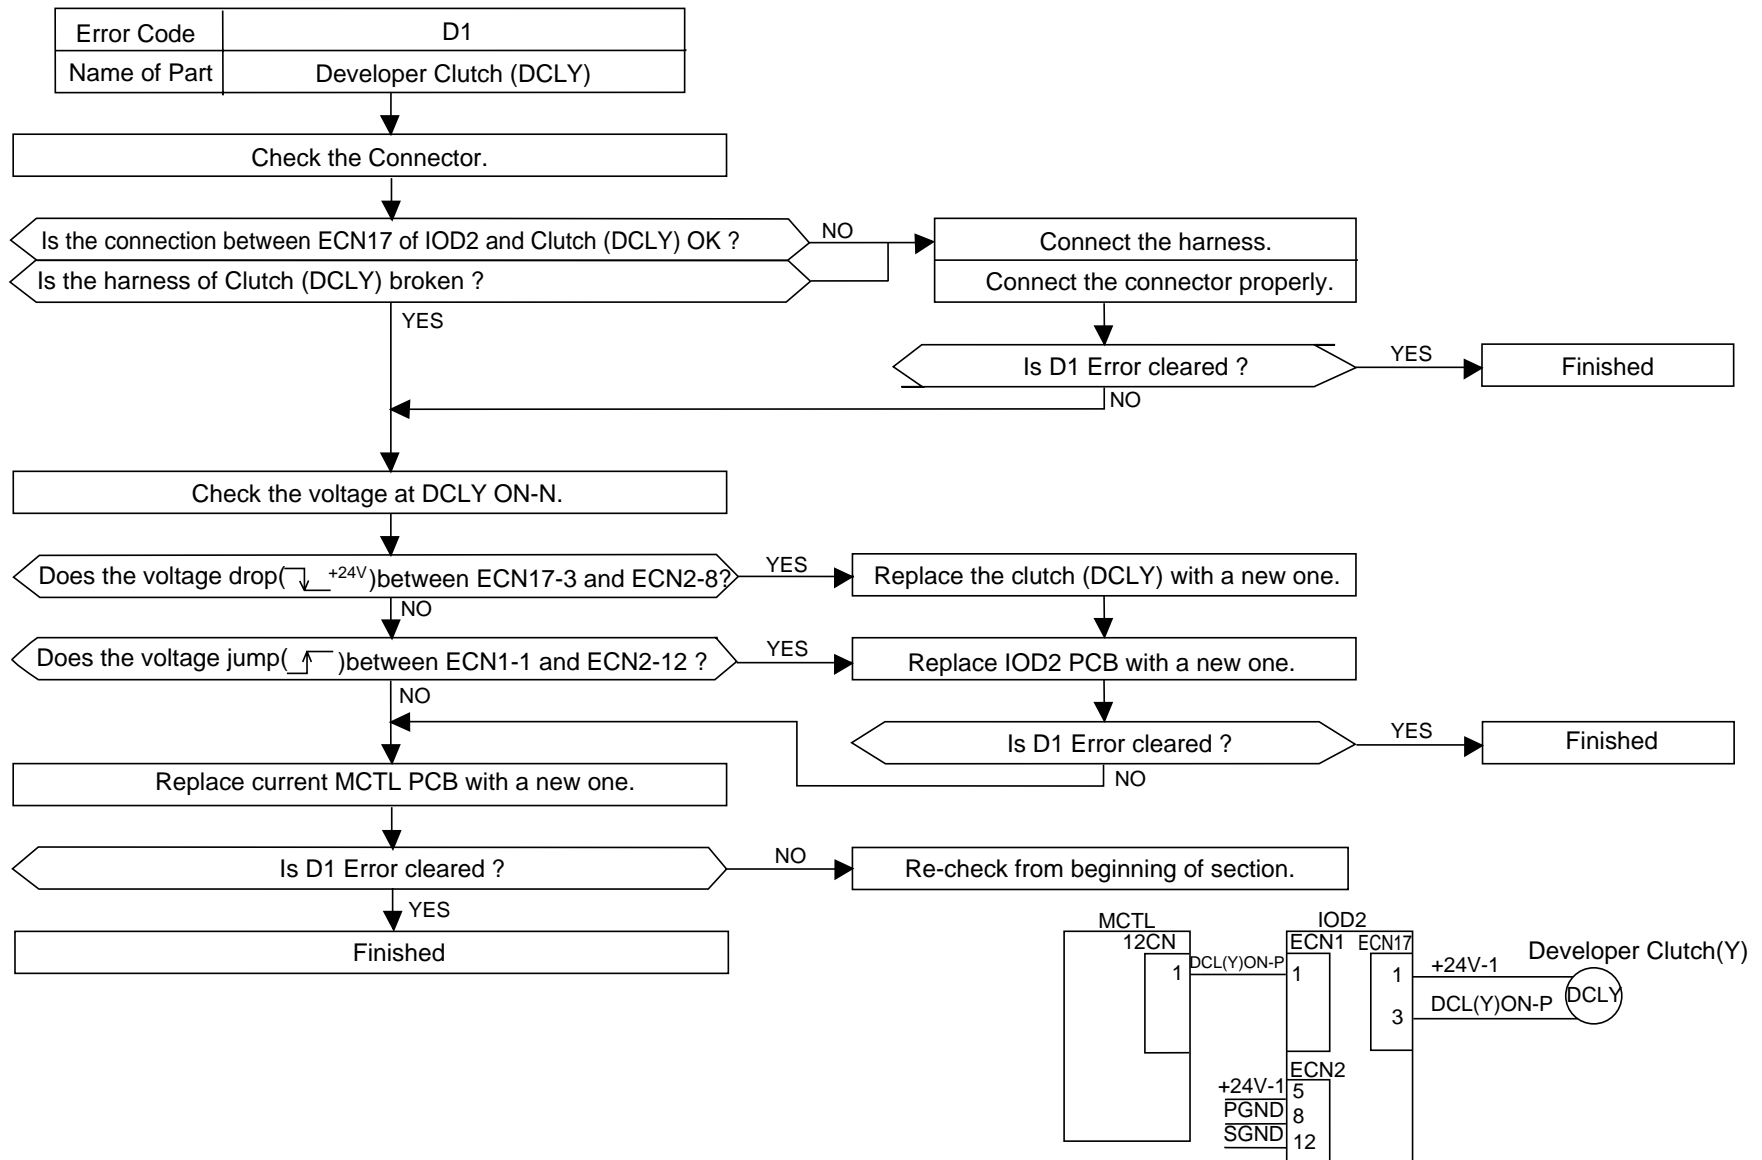



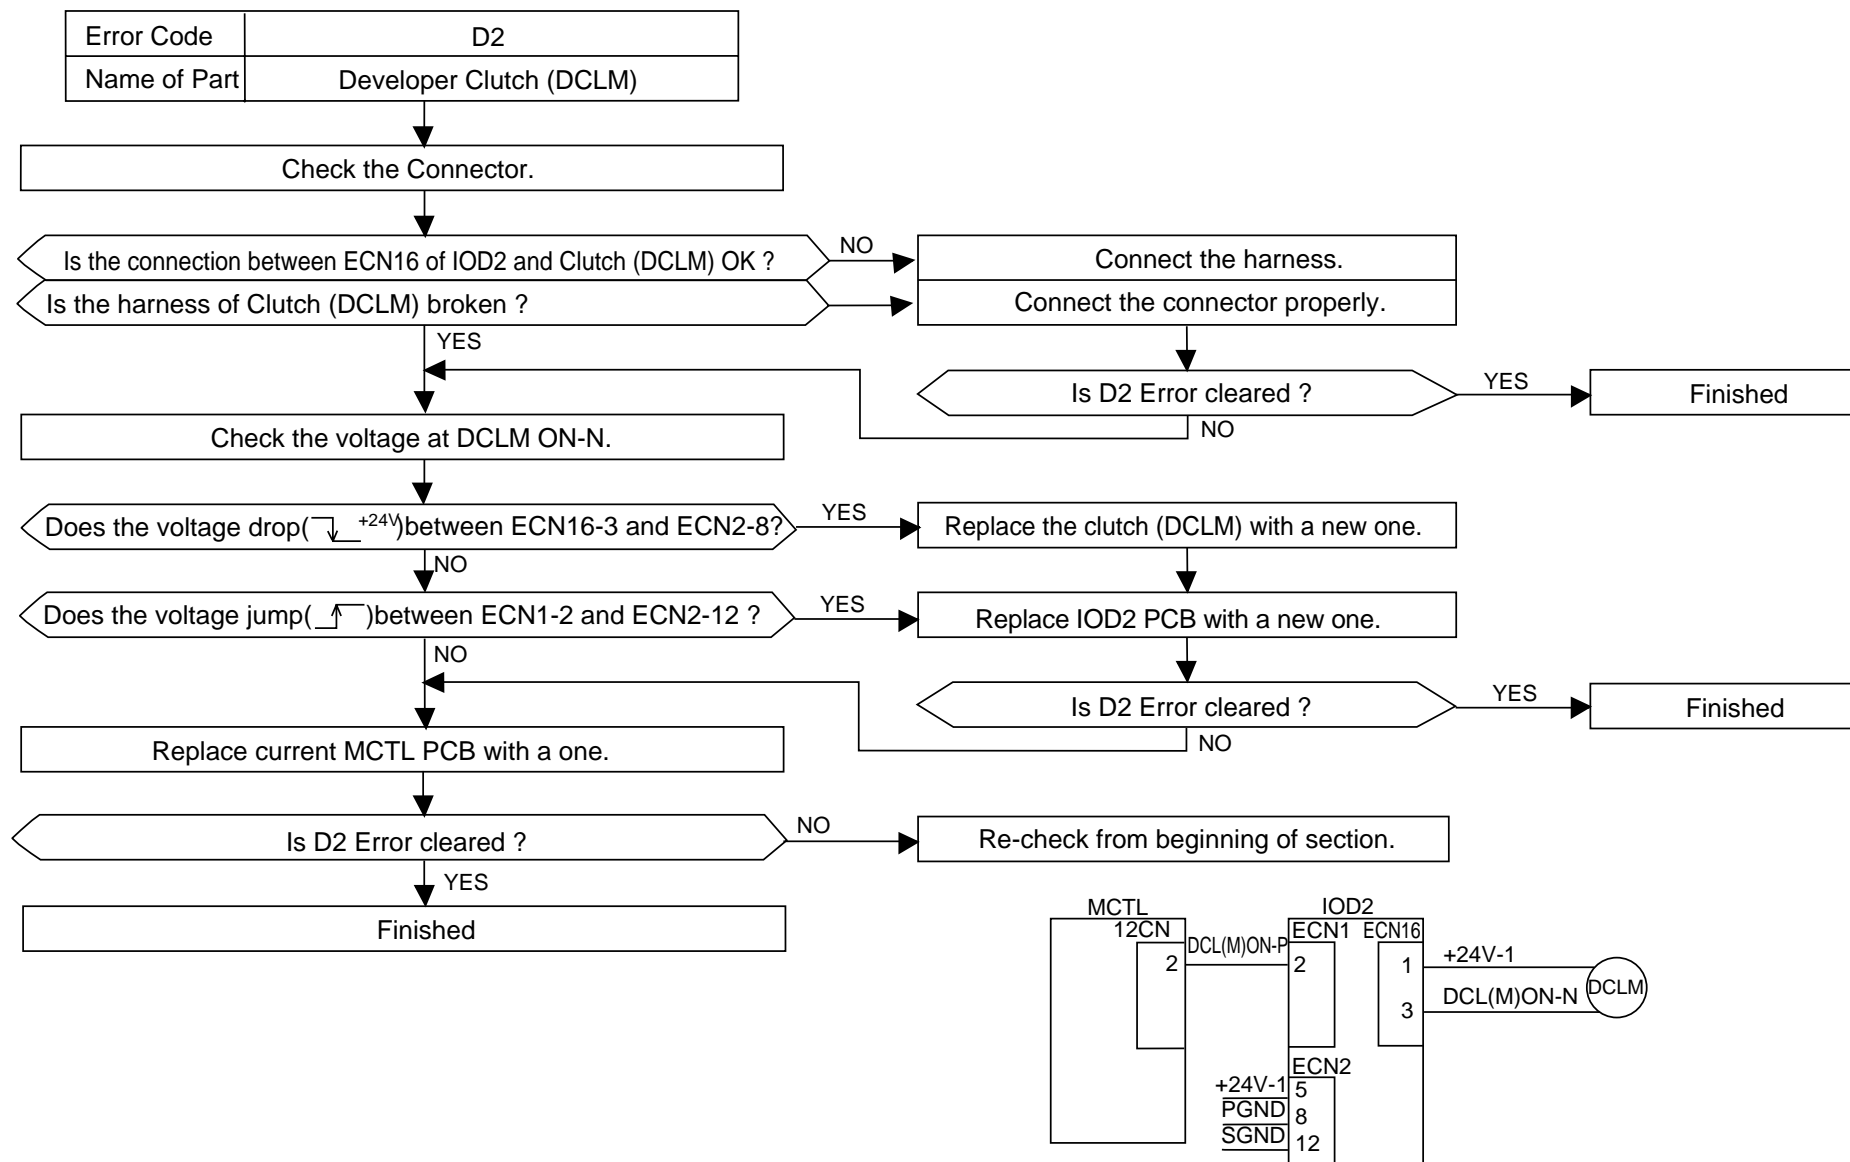


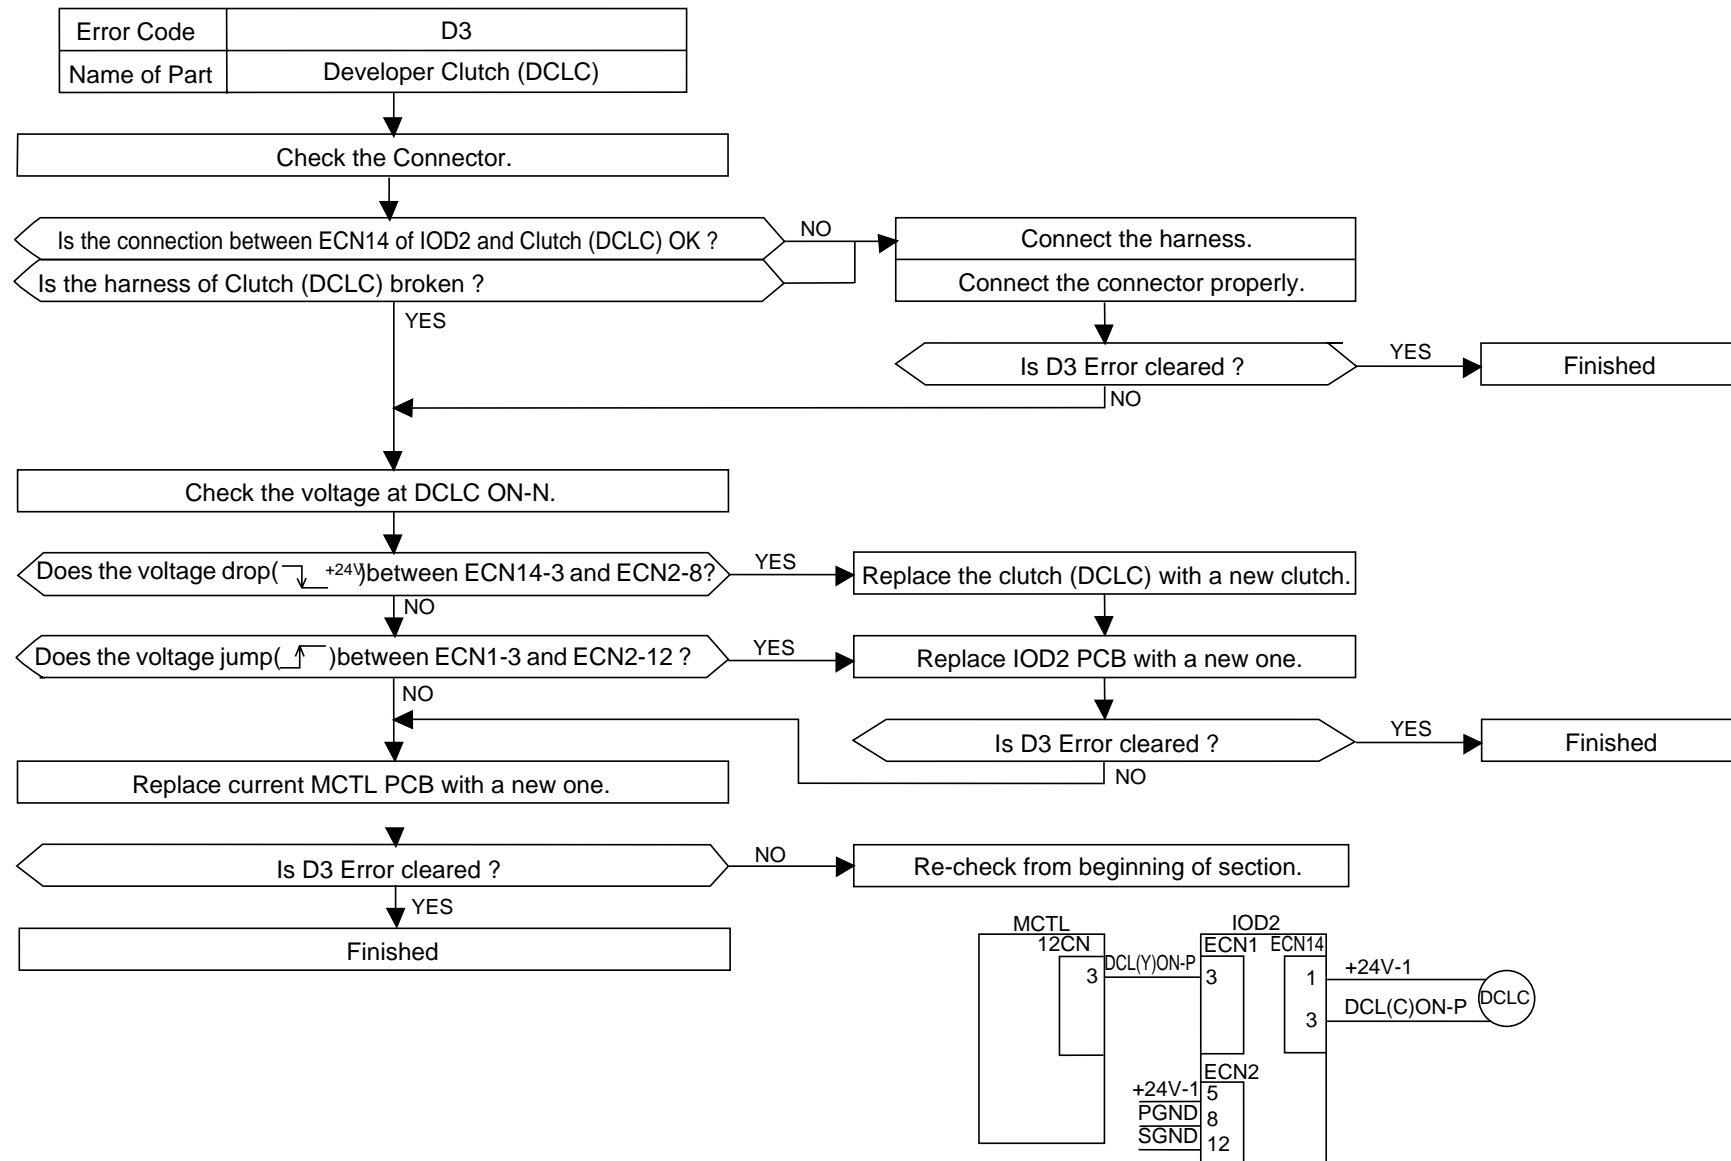


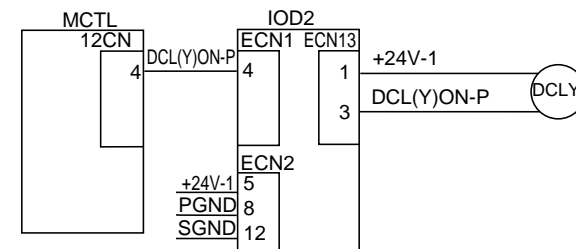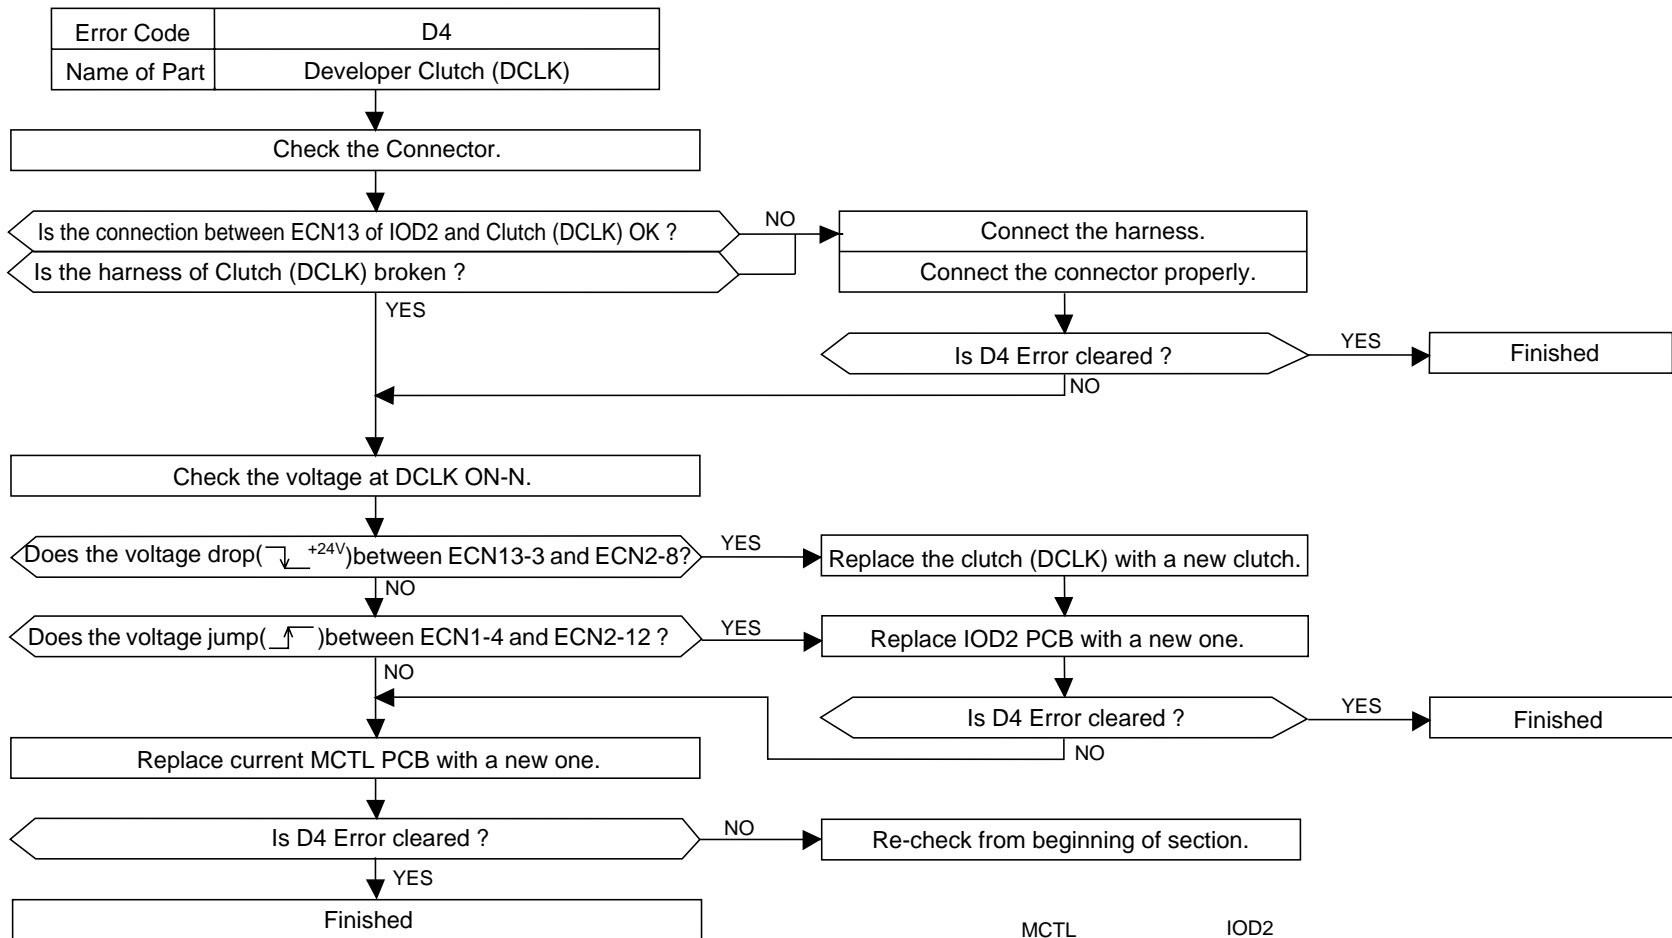


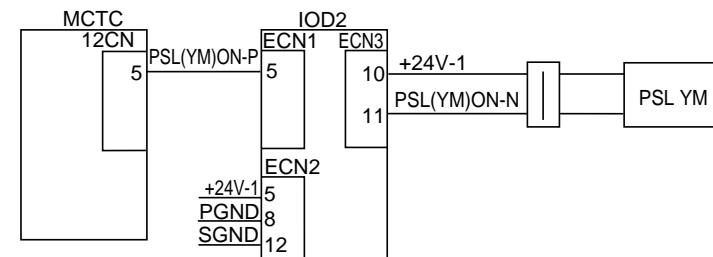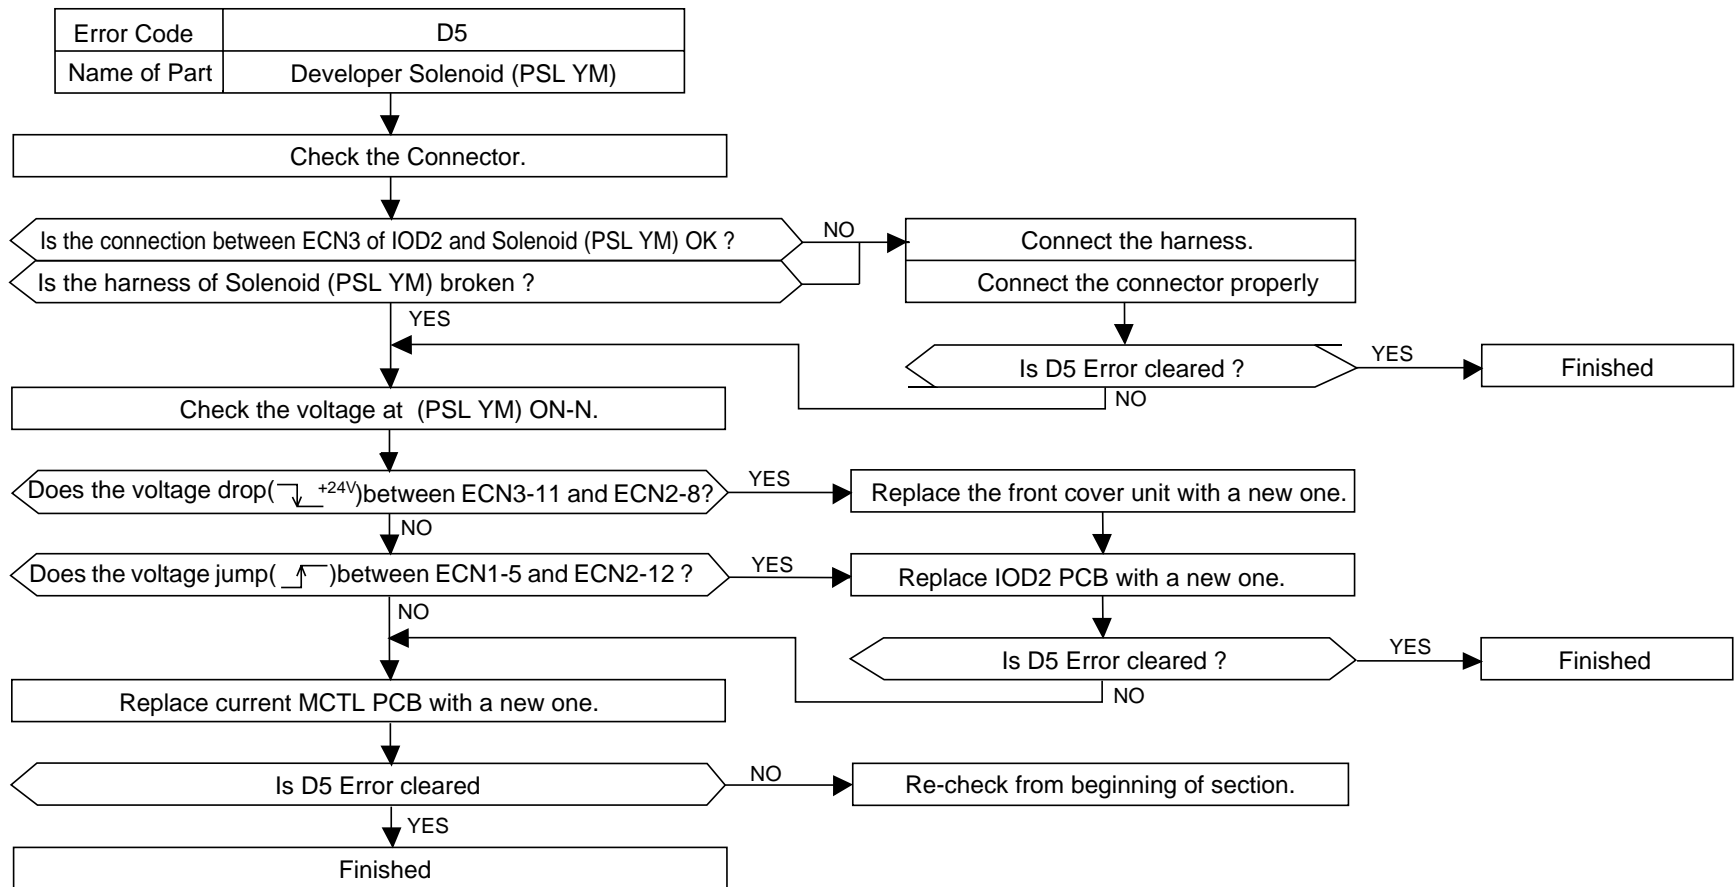

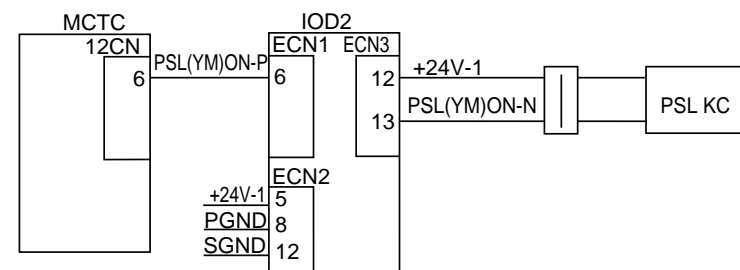
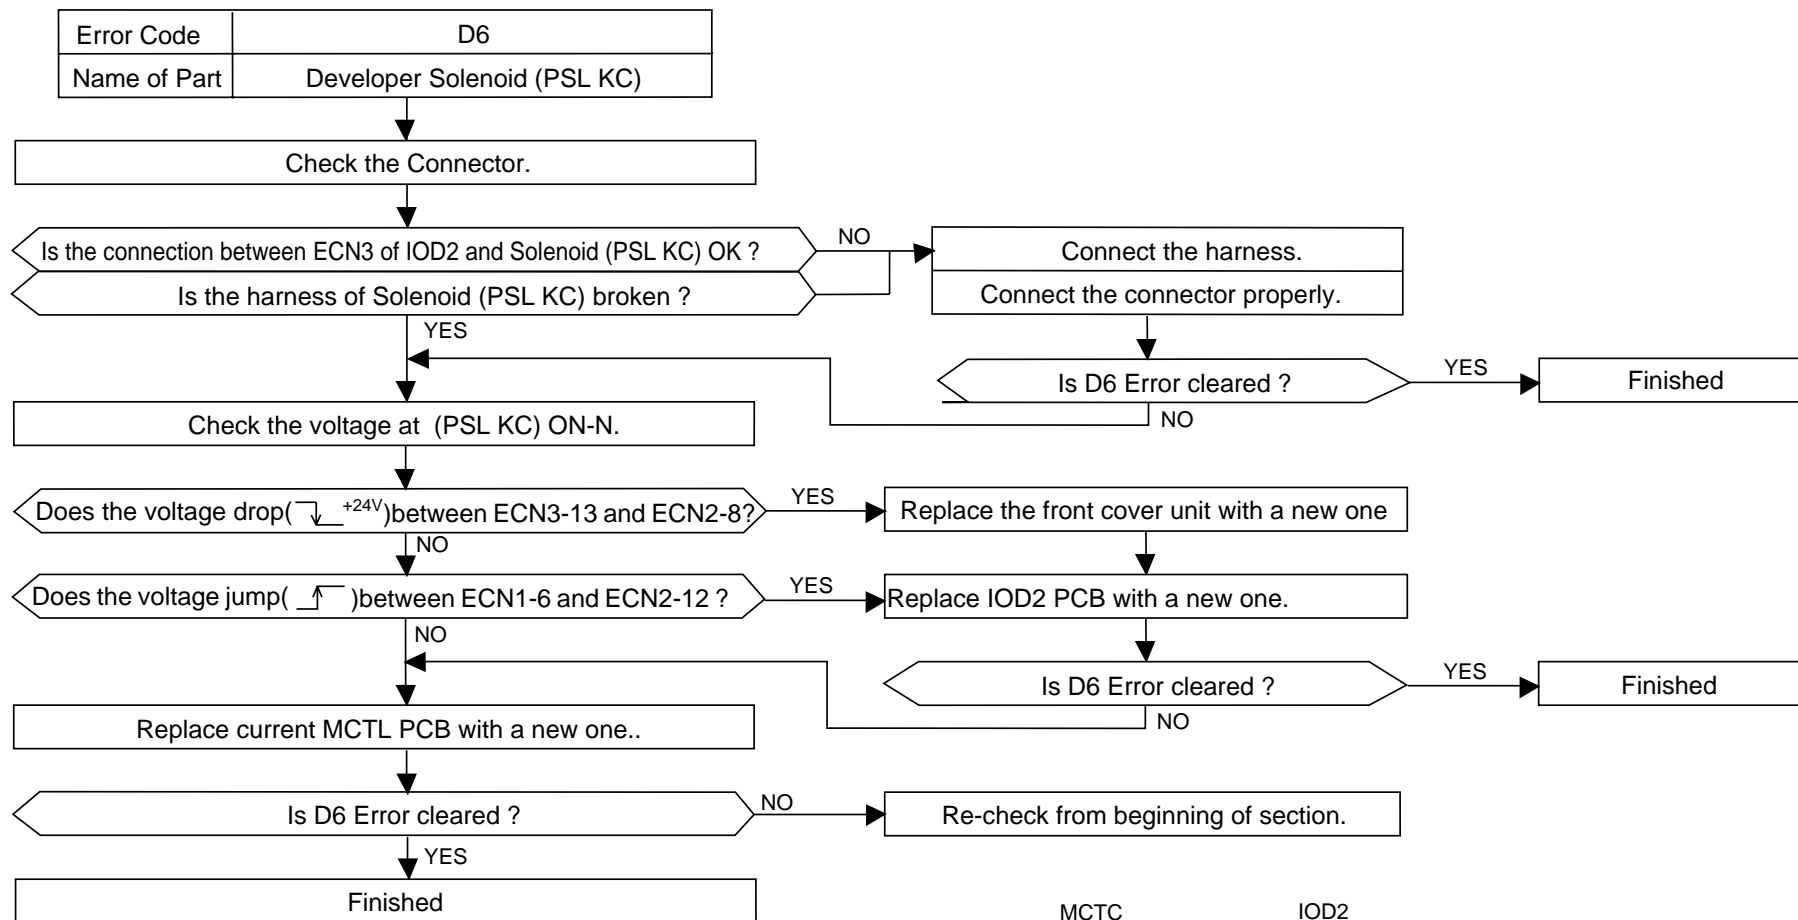


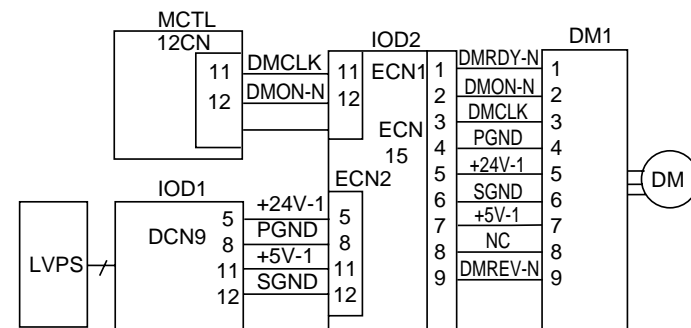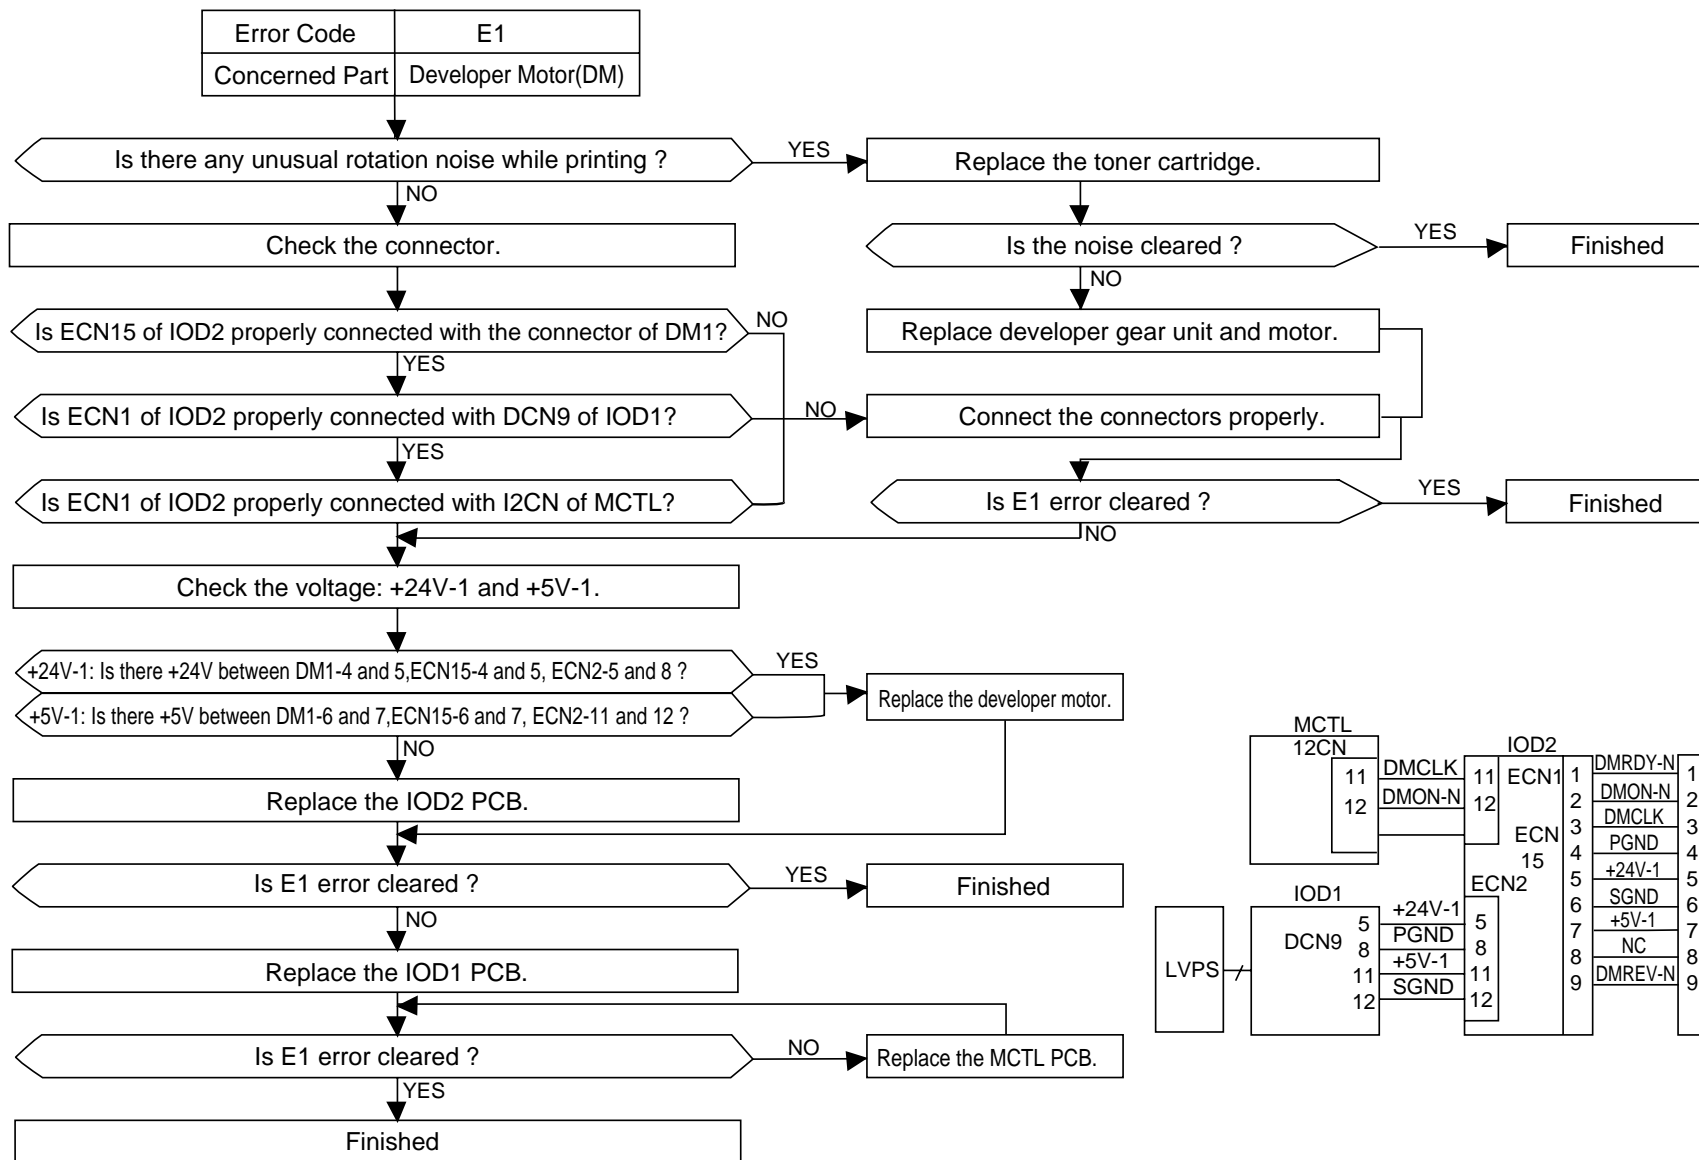


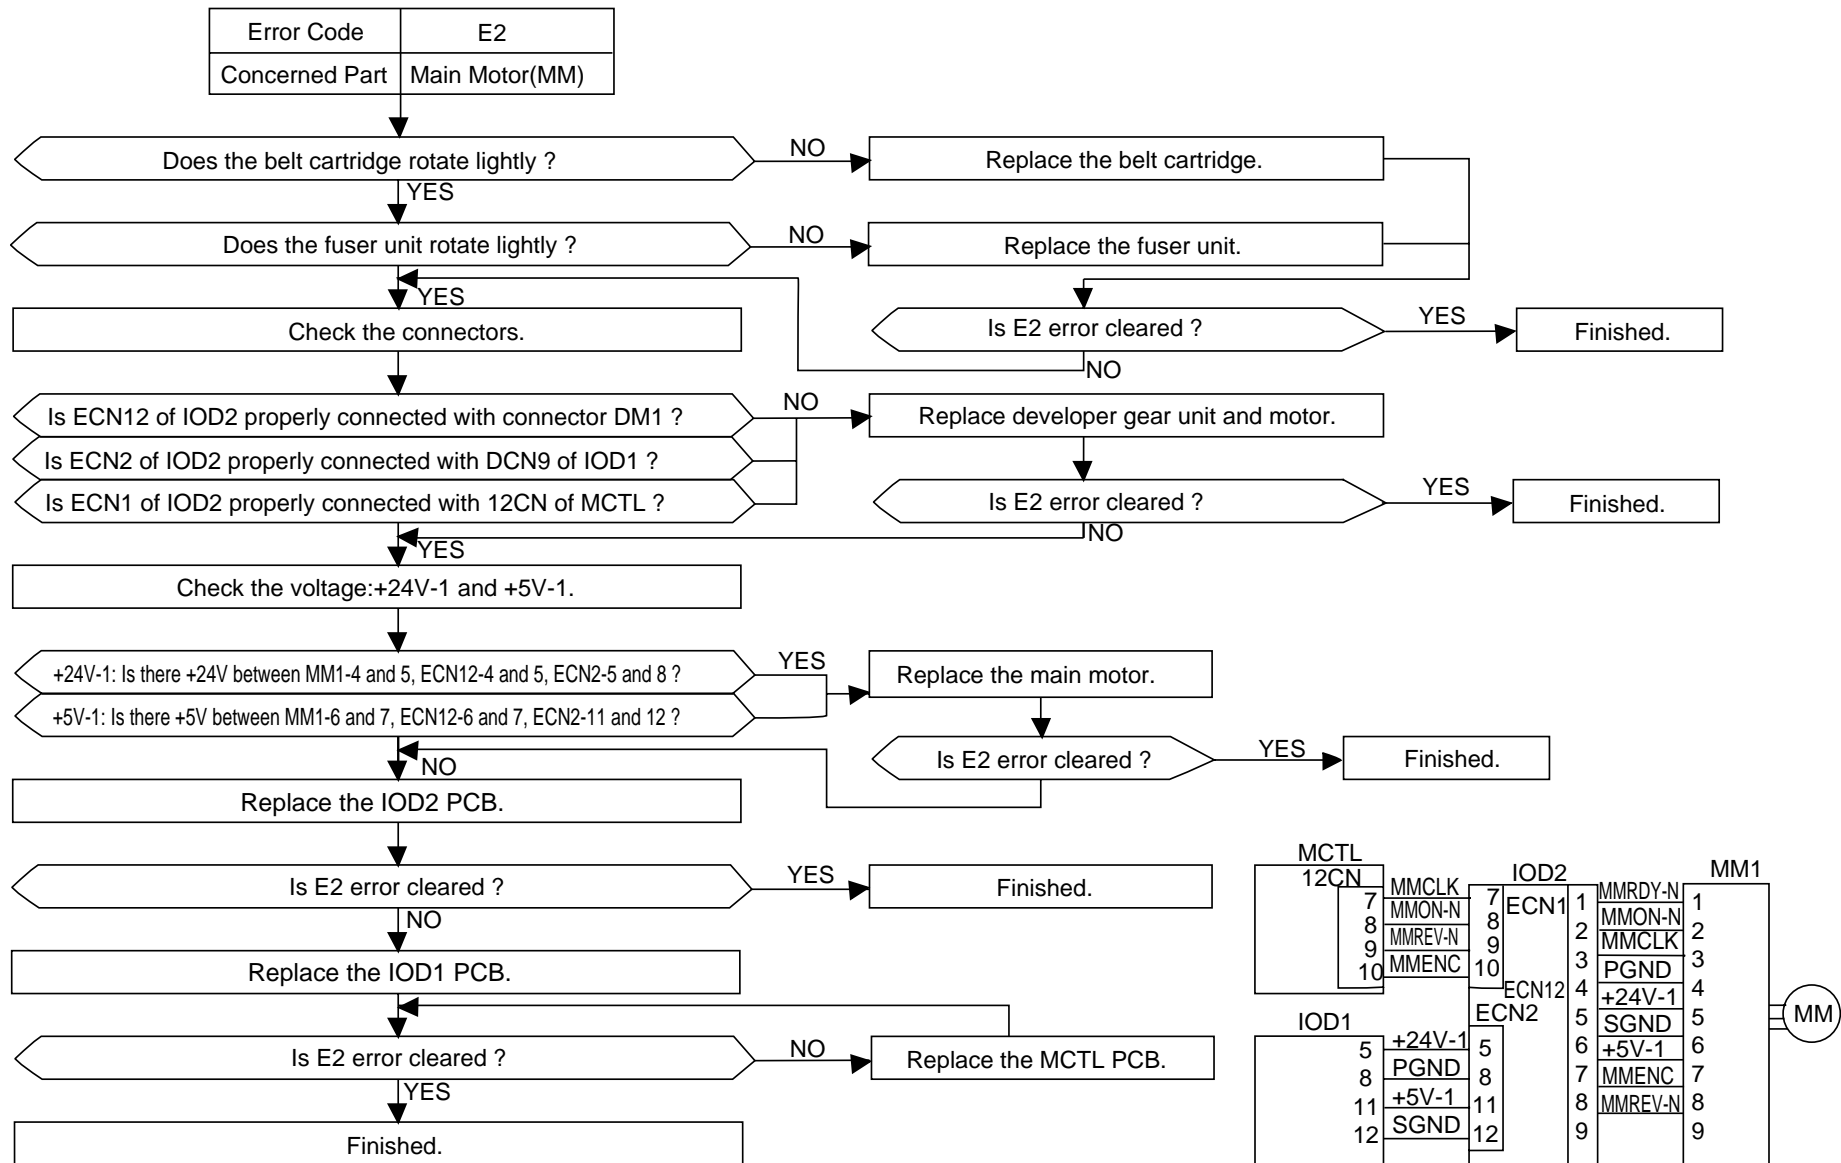


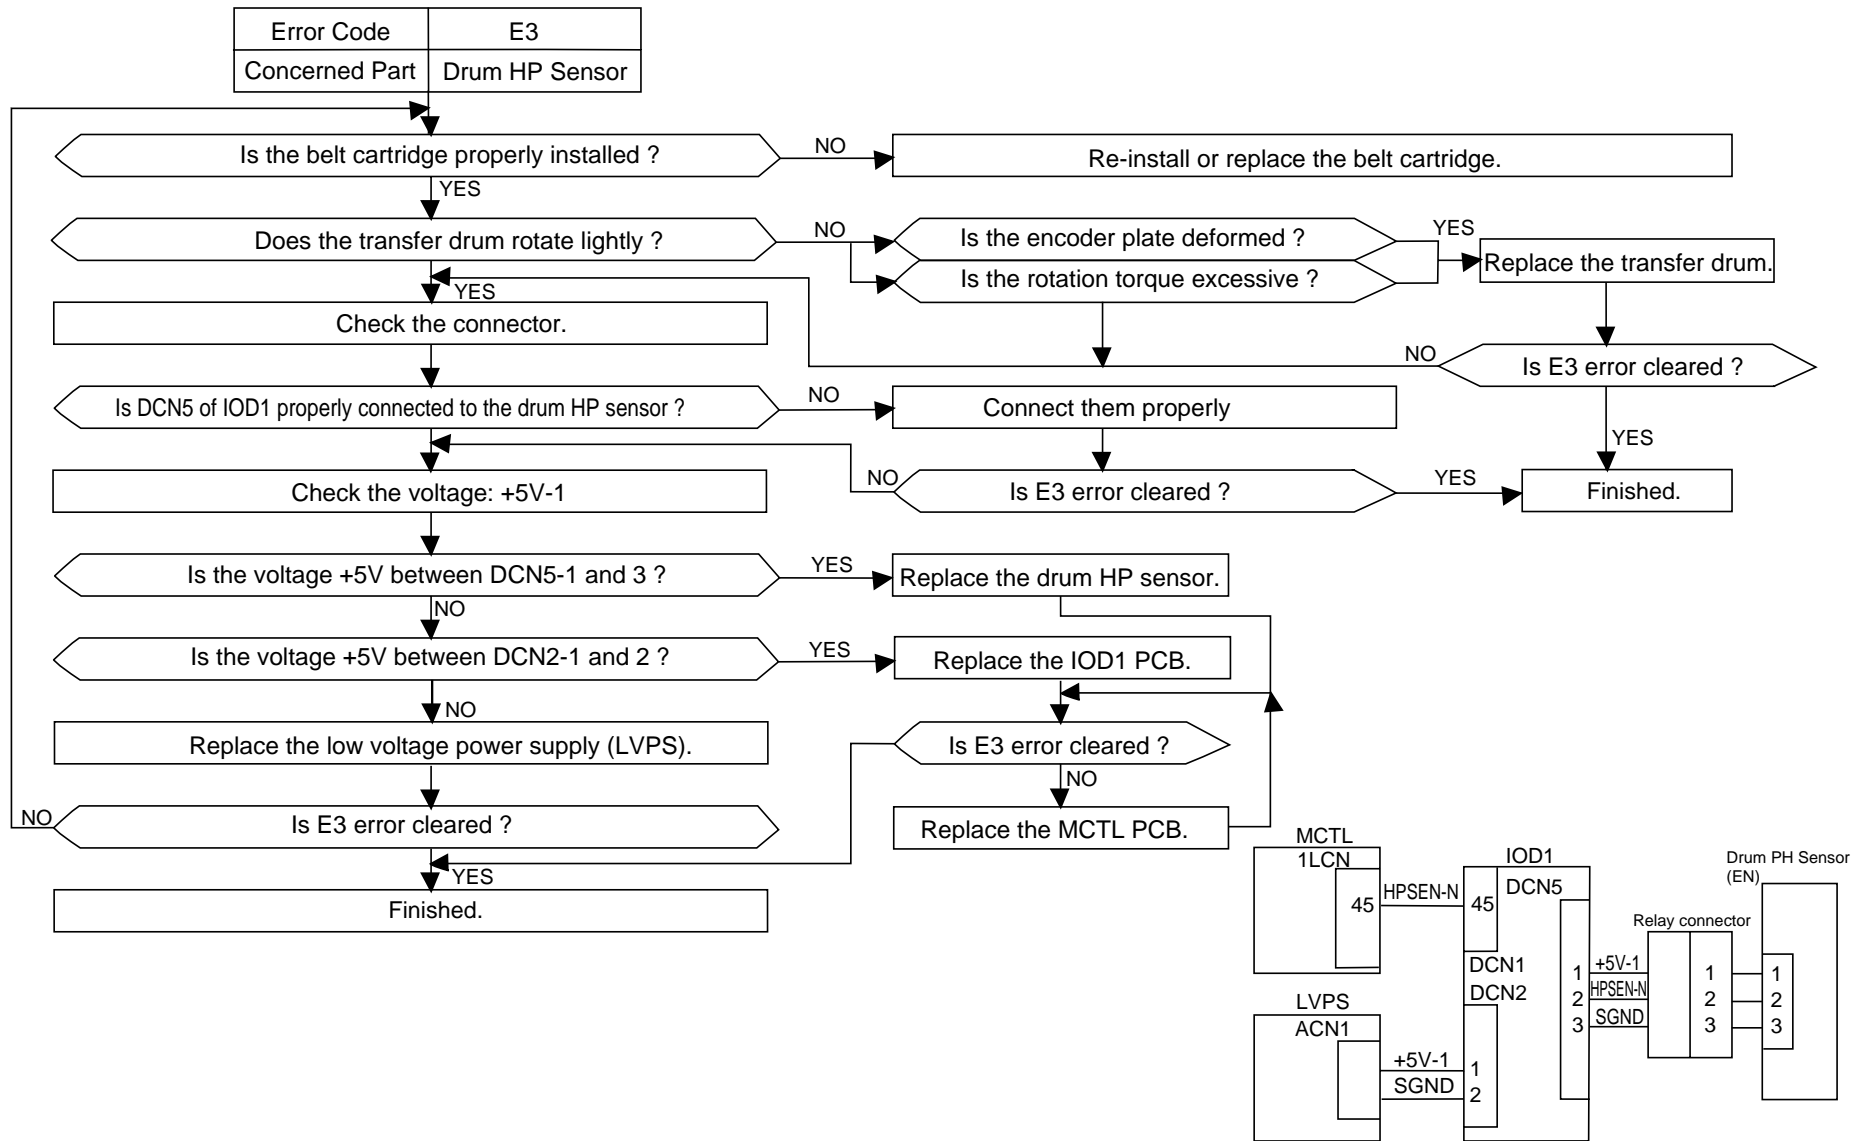

Error Code	E4
Concerned Part	Toner Sensor PCB (LED side)

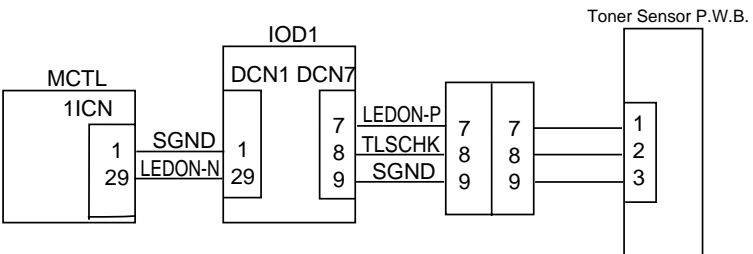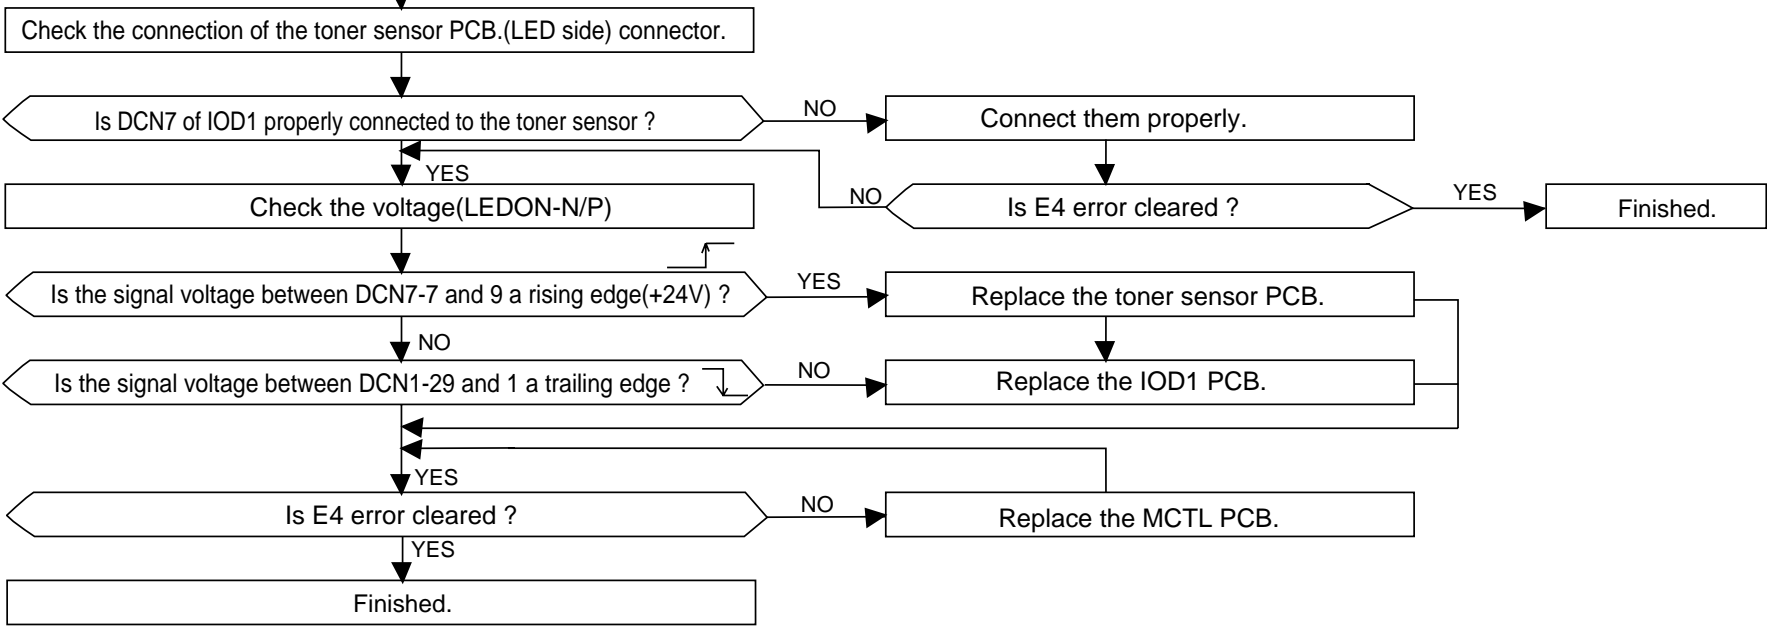


Error Code	E5
Concerned Part	Transfer Solenoid

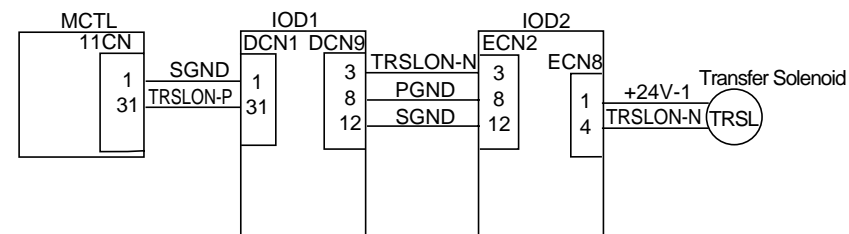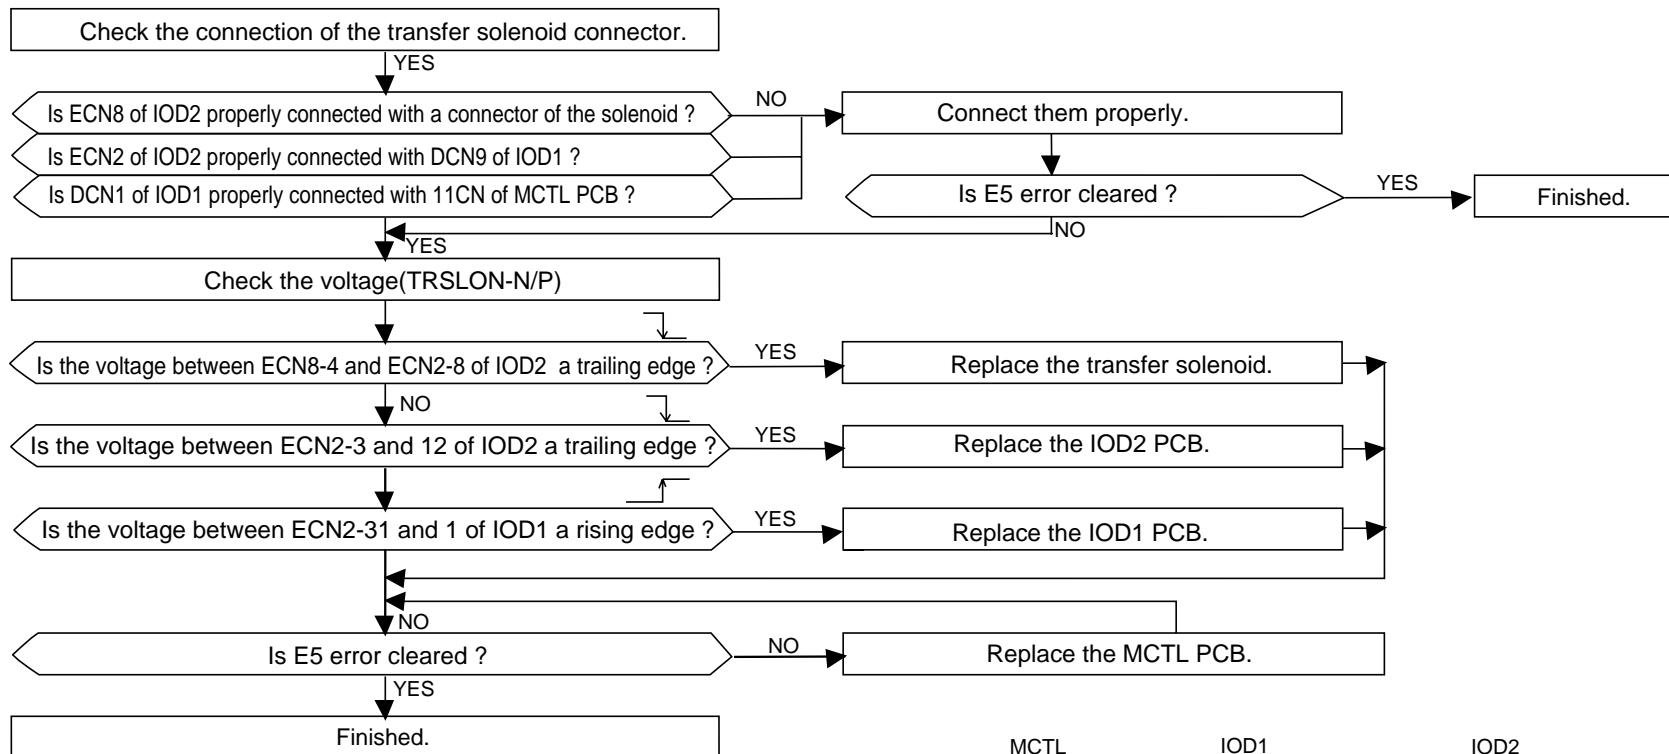

Error Code	E6
Concerned Part	Cleaning Brush Solenoid

Check the connection of the cleaning brush solenoid connector.

YES

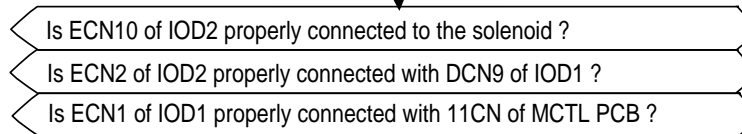

NO

Connect them properly.

Is E6 error cleared ?

YES

Finished.

NO

YES

Check the voltage (FBSLON-N/P).

Is the voltage between ECN10-4 and 8 of IOD2 a trailing edge ?

YES

Replace the transfer solenoid.

Is the voltage between ECN2-2 and 12 of IOD2 a rising edge ?

YES

Replace the IOD2 PCB.

Is the voltage between ECN1-33 and 1 of IOD1 a rising edge ?

YES

Replace the IOD1 PCB.

NO


Is E6 error cleared ?


NO



Replace the MCTL PCB.


YES



Finished.


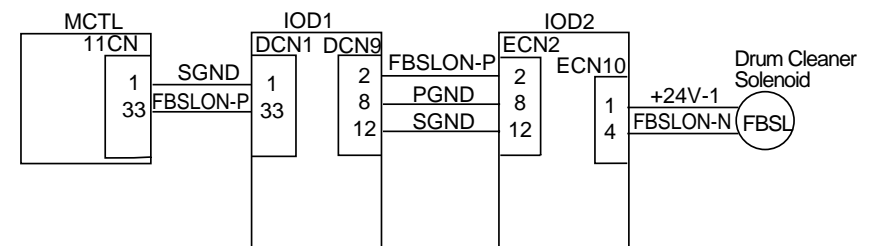



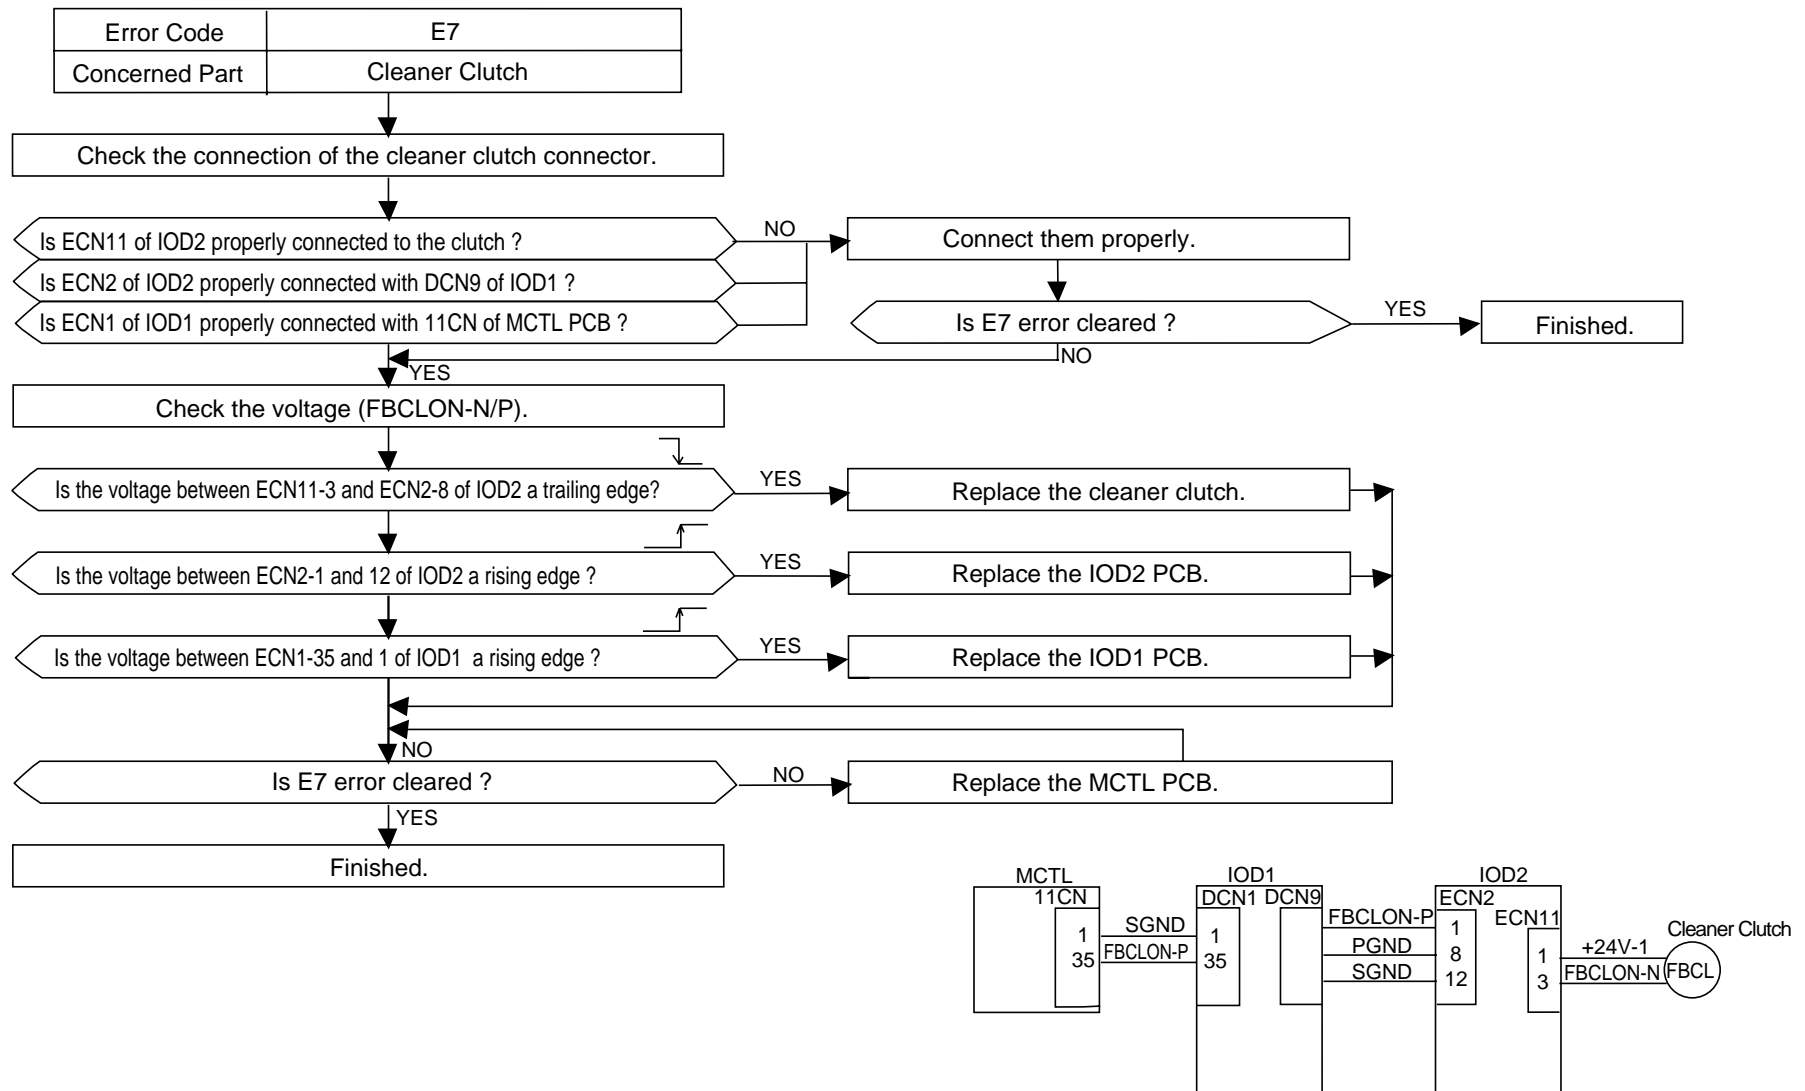


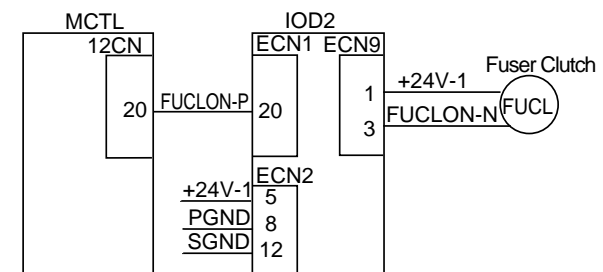
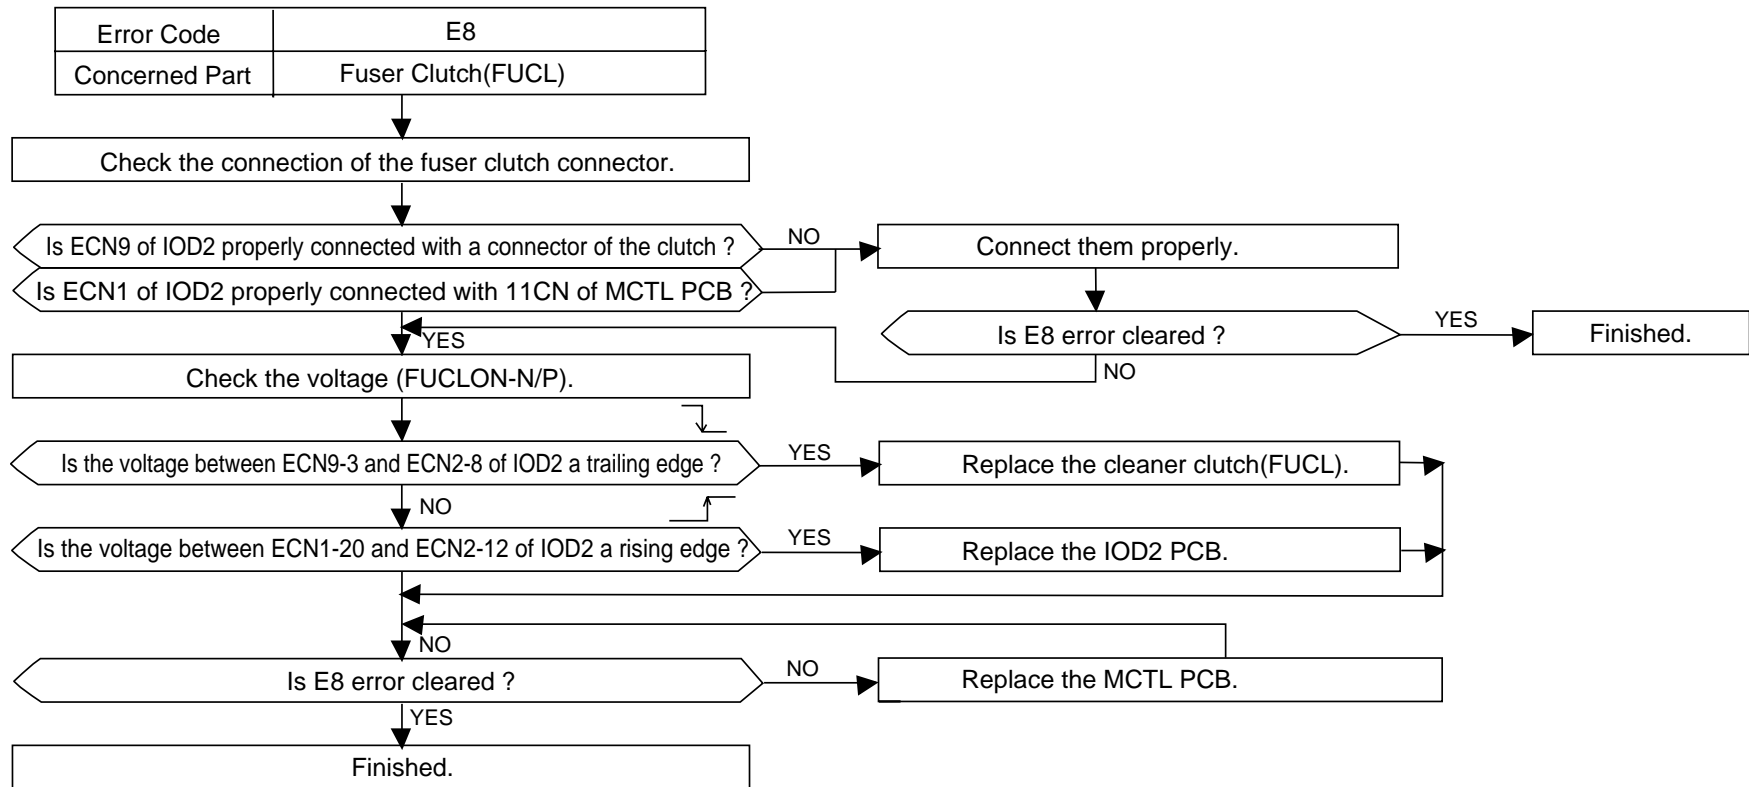


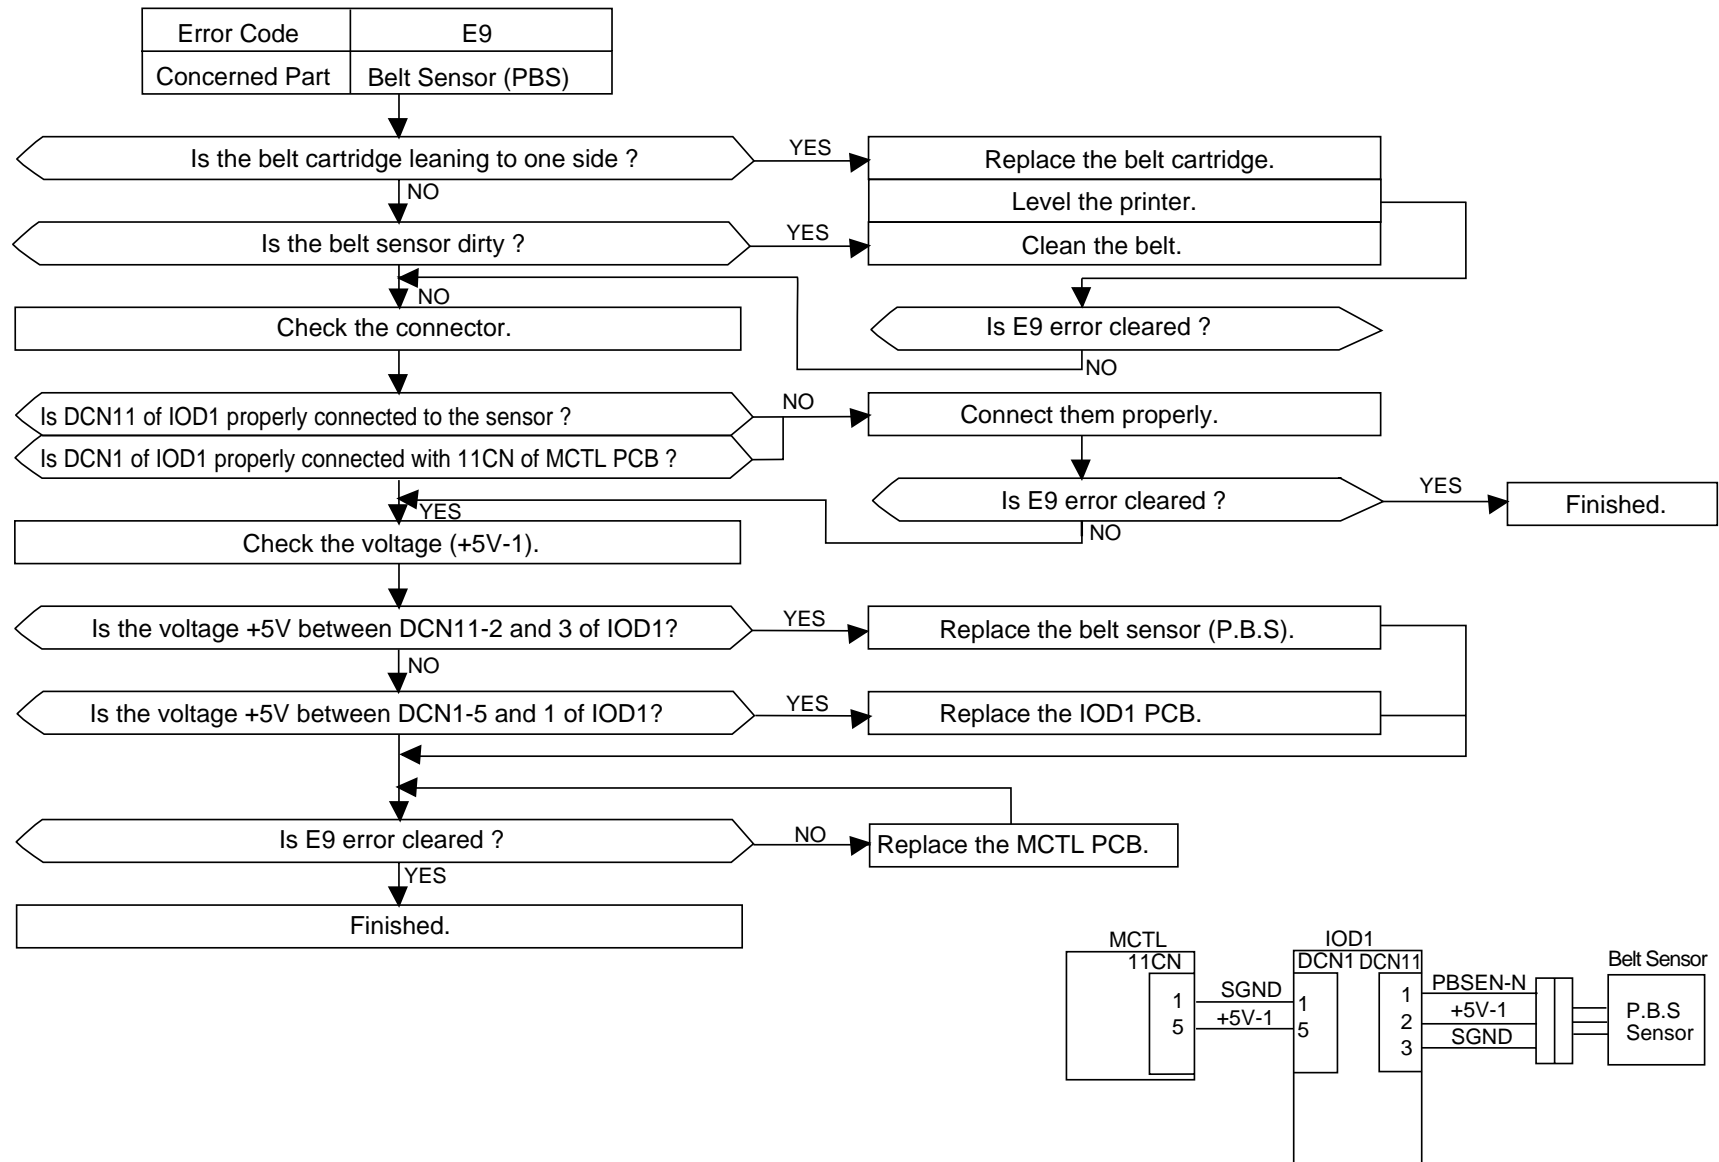

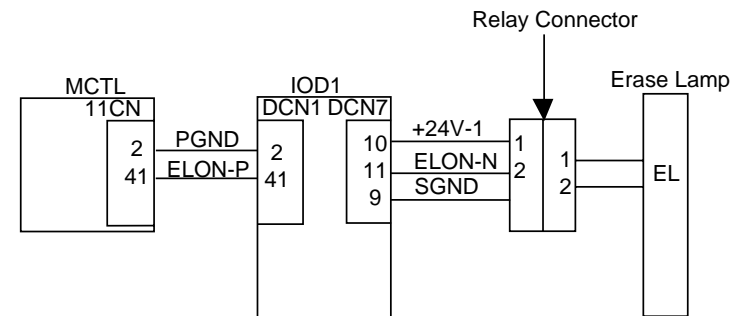
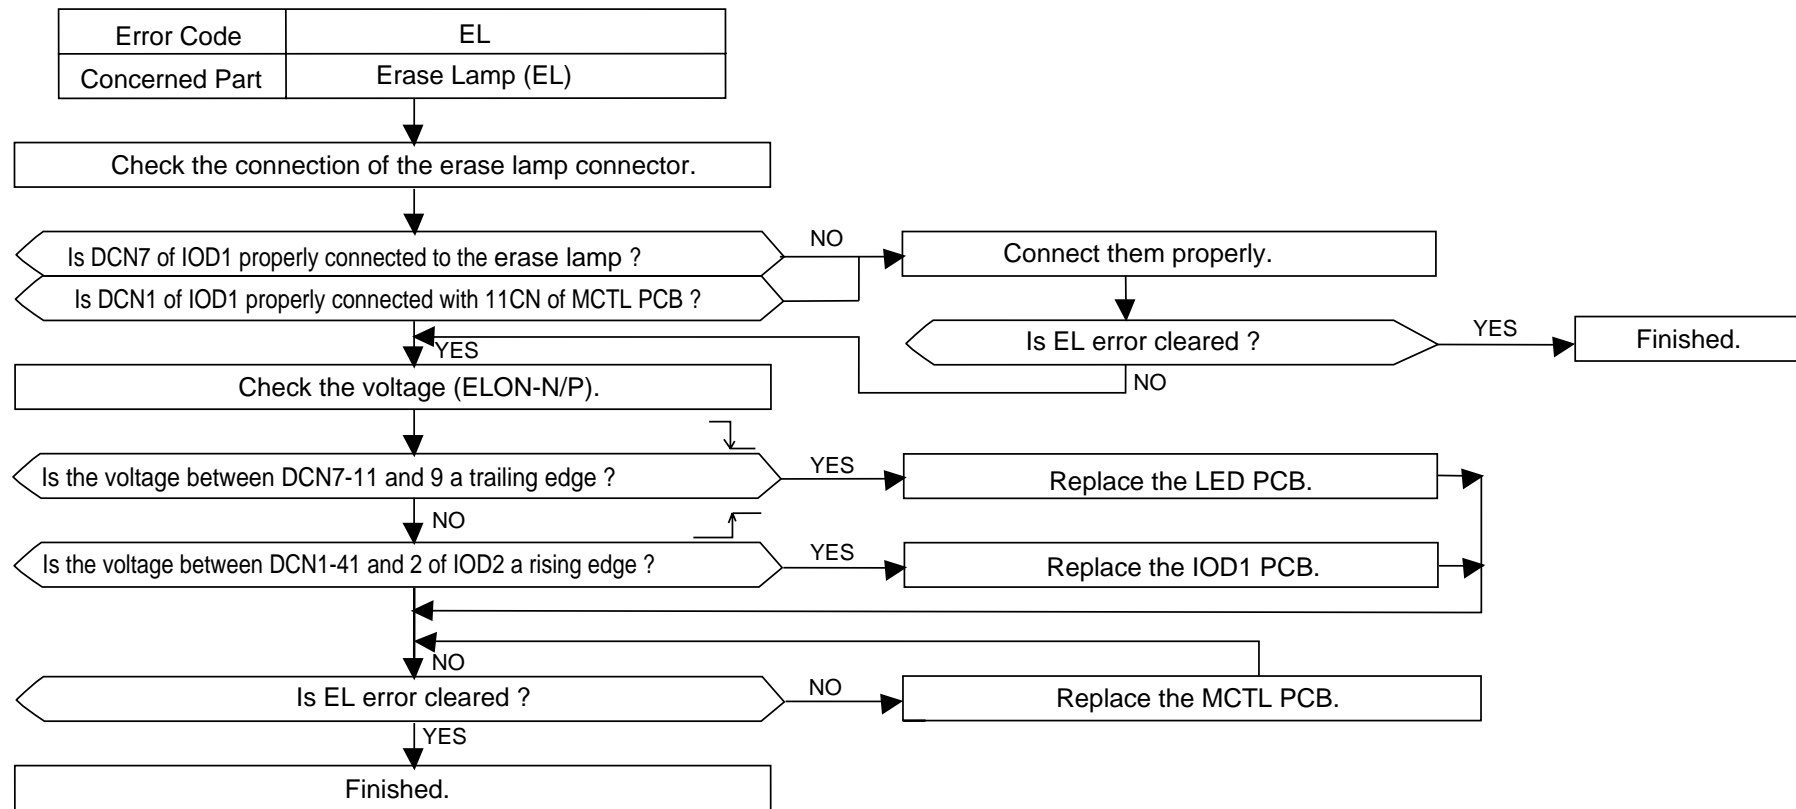


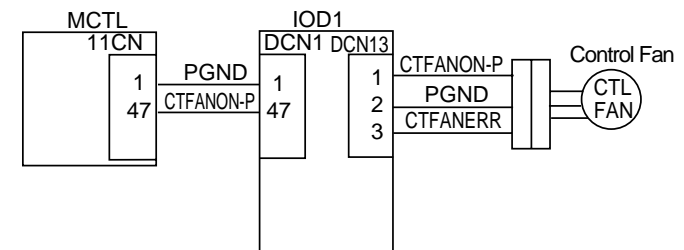
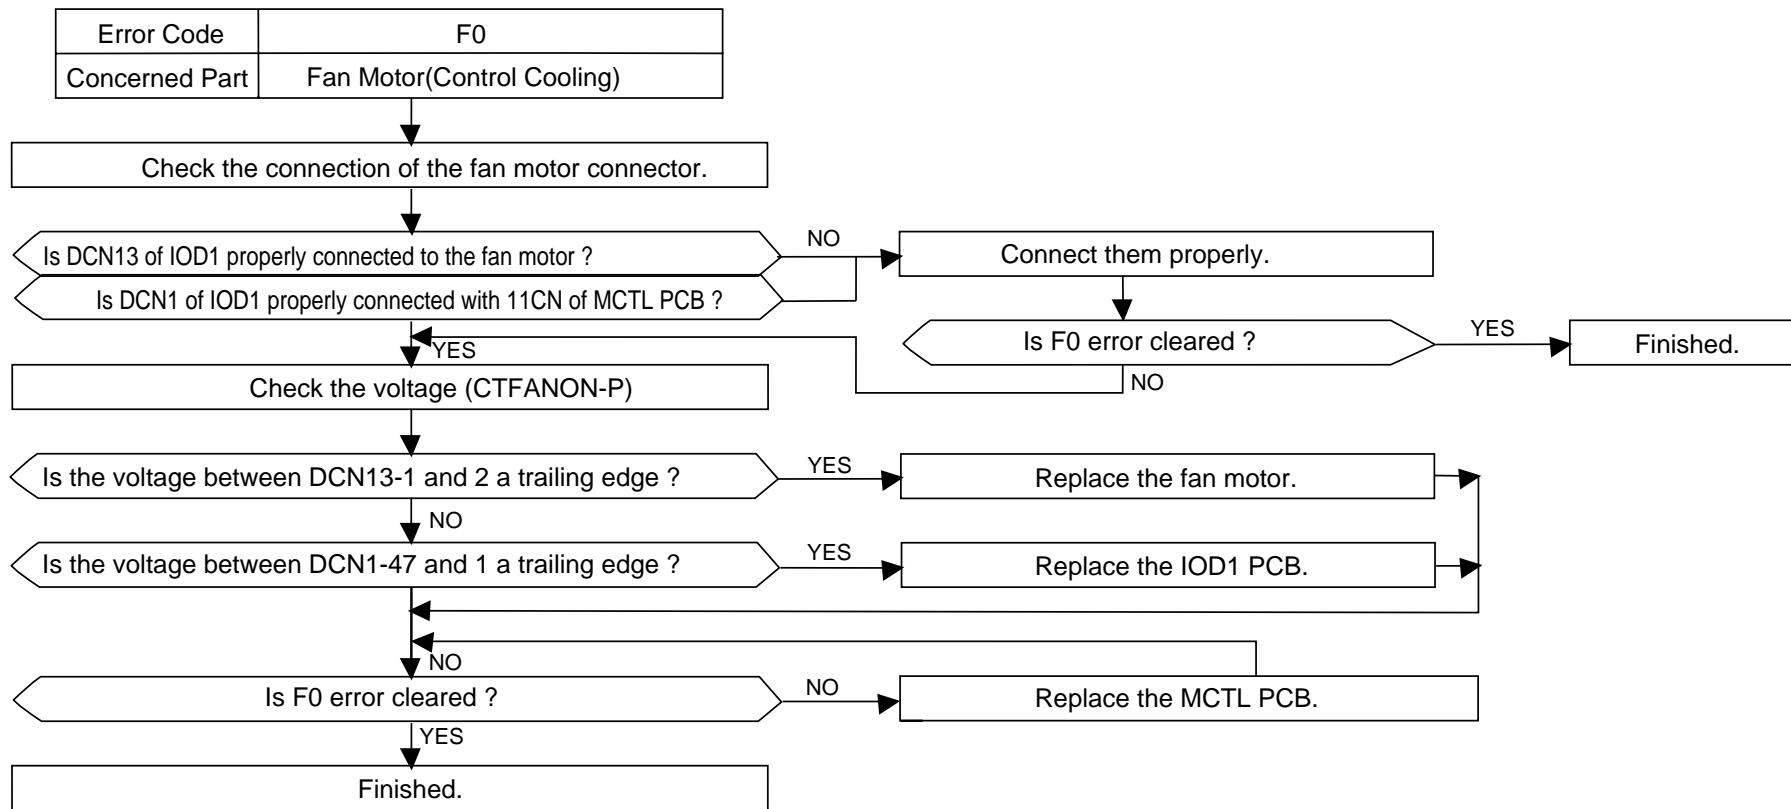


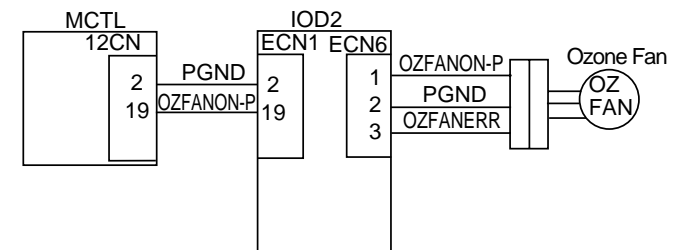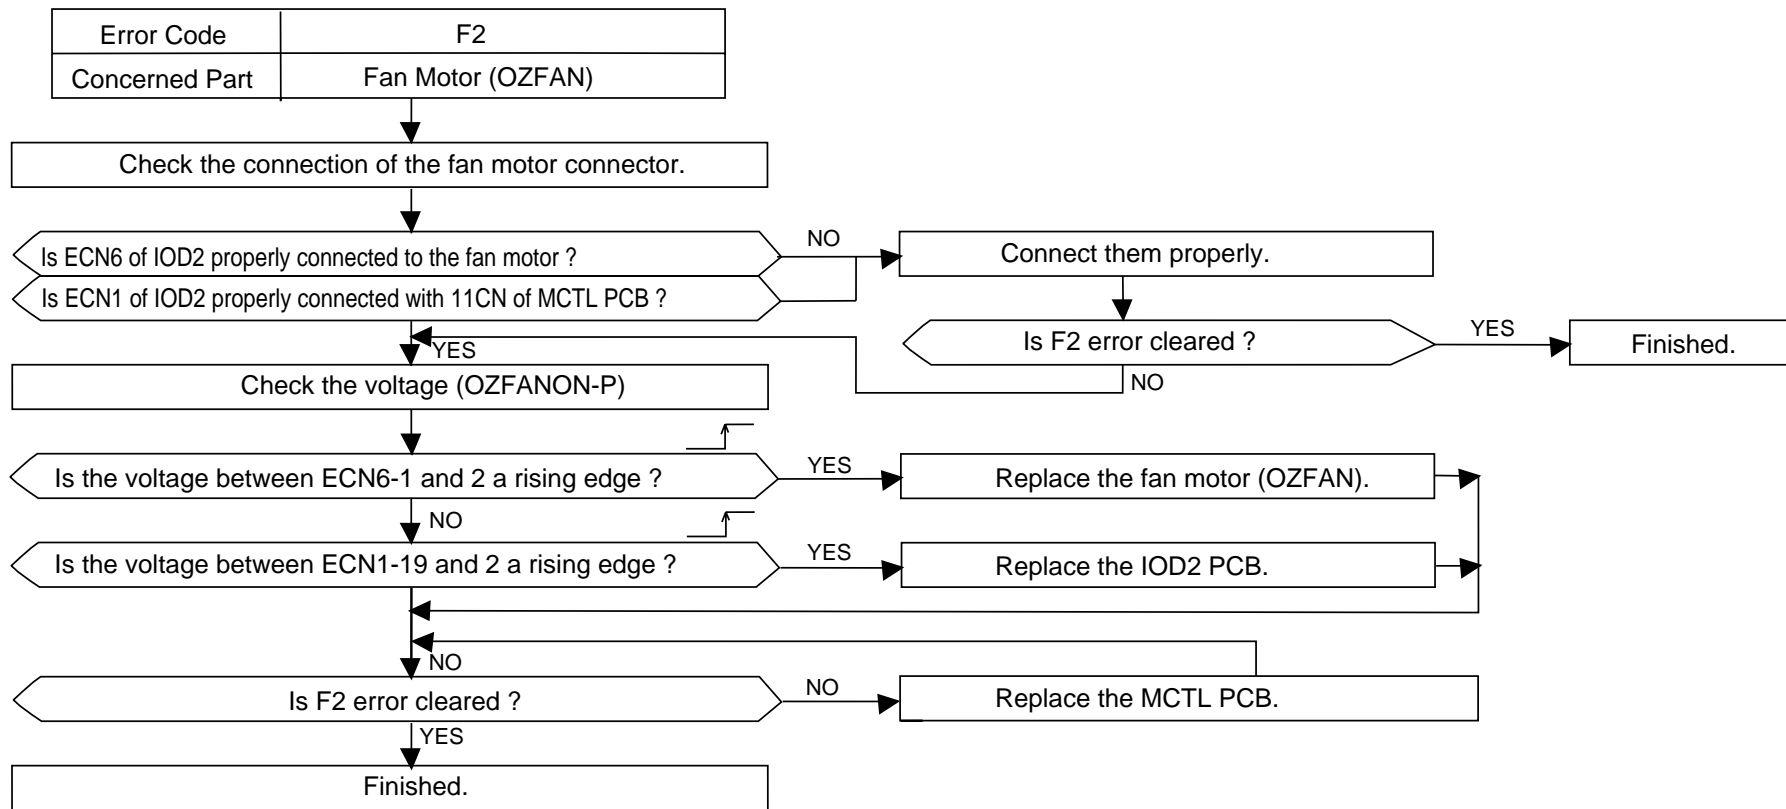

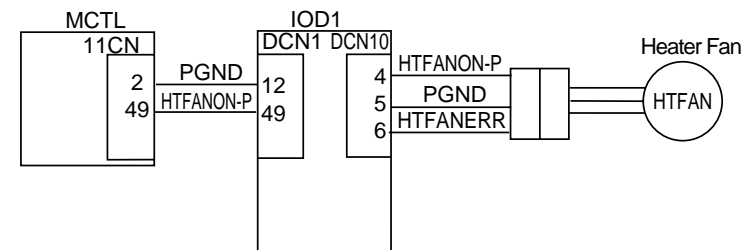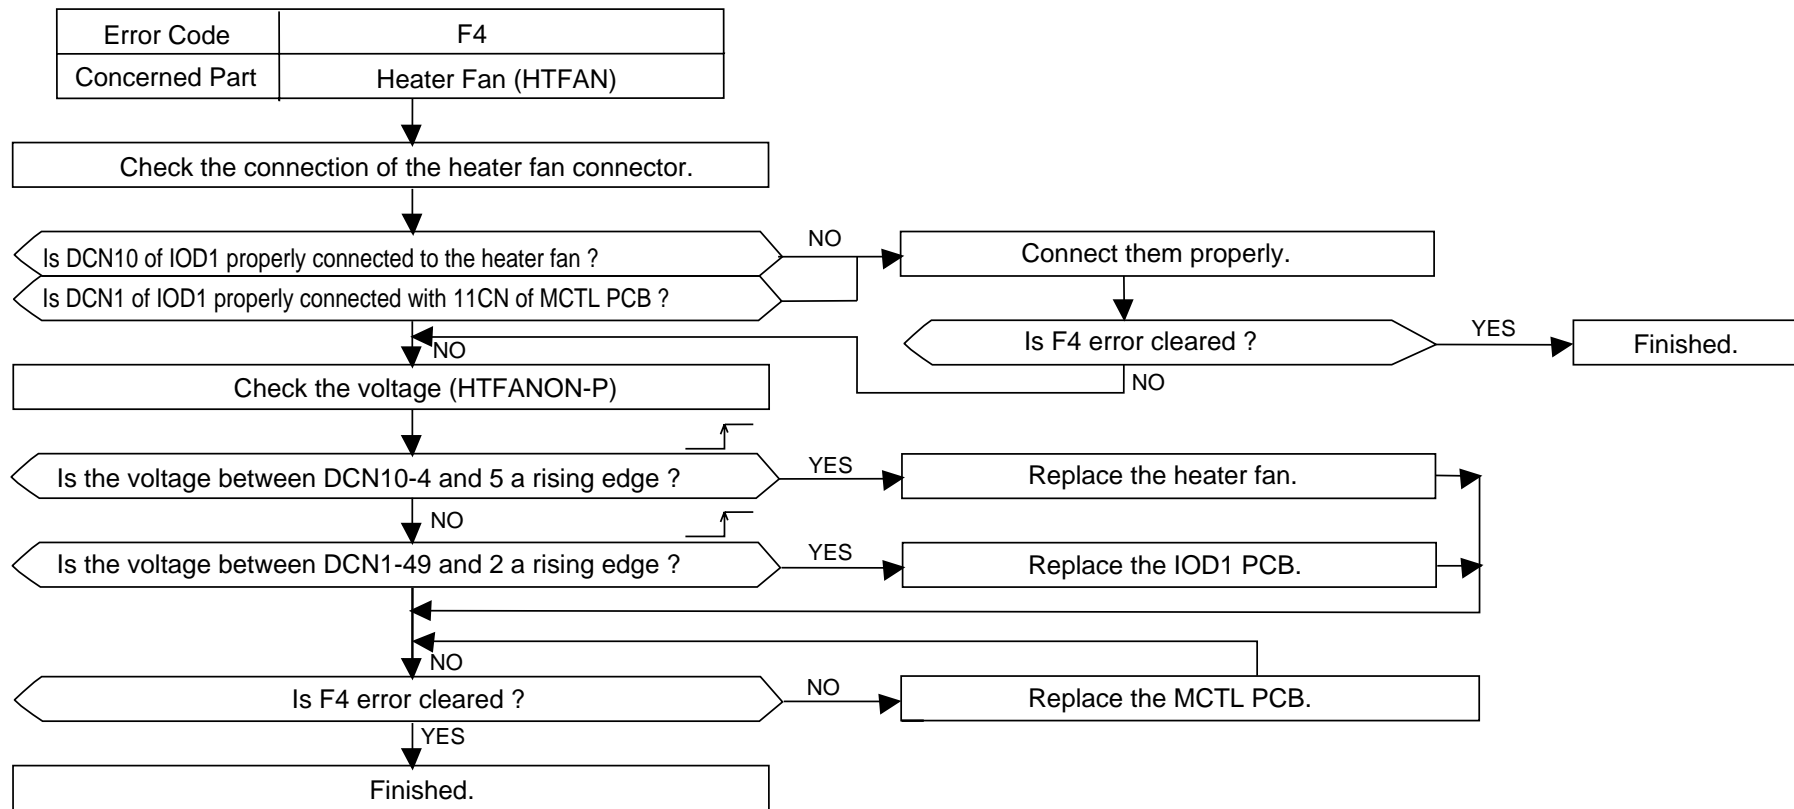


Error Code	F5
Concerned Part	High Voltage Unit (HVU)

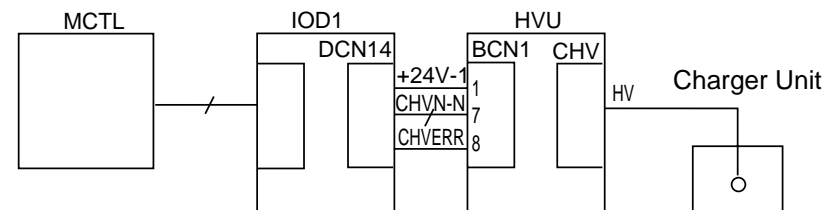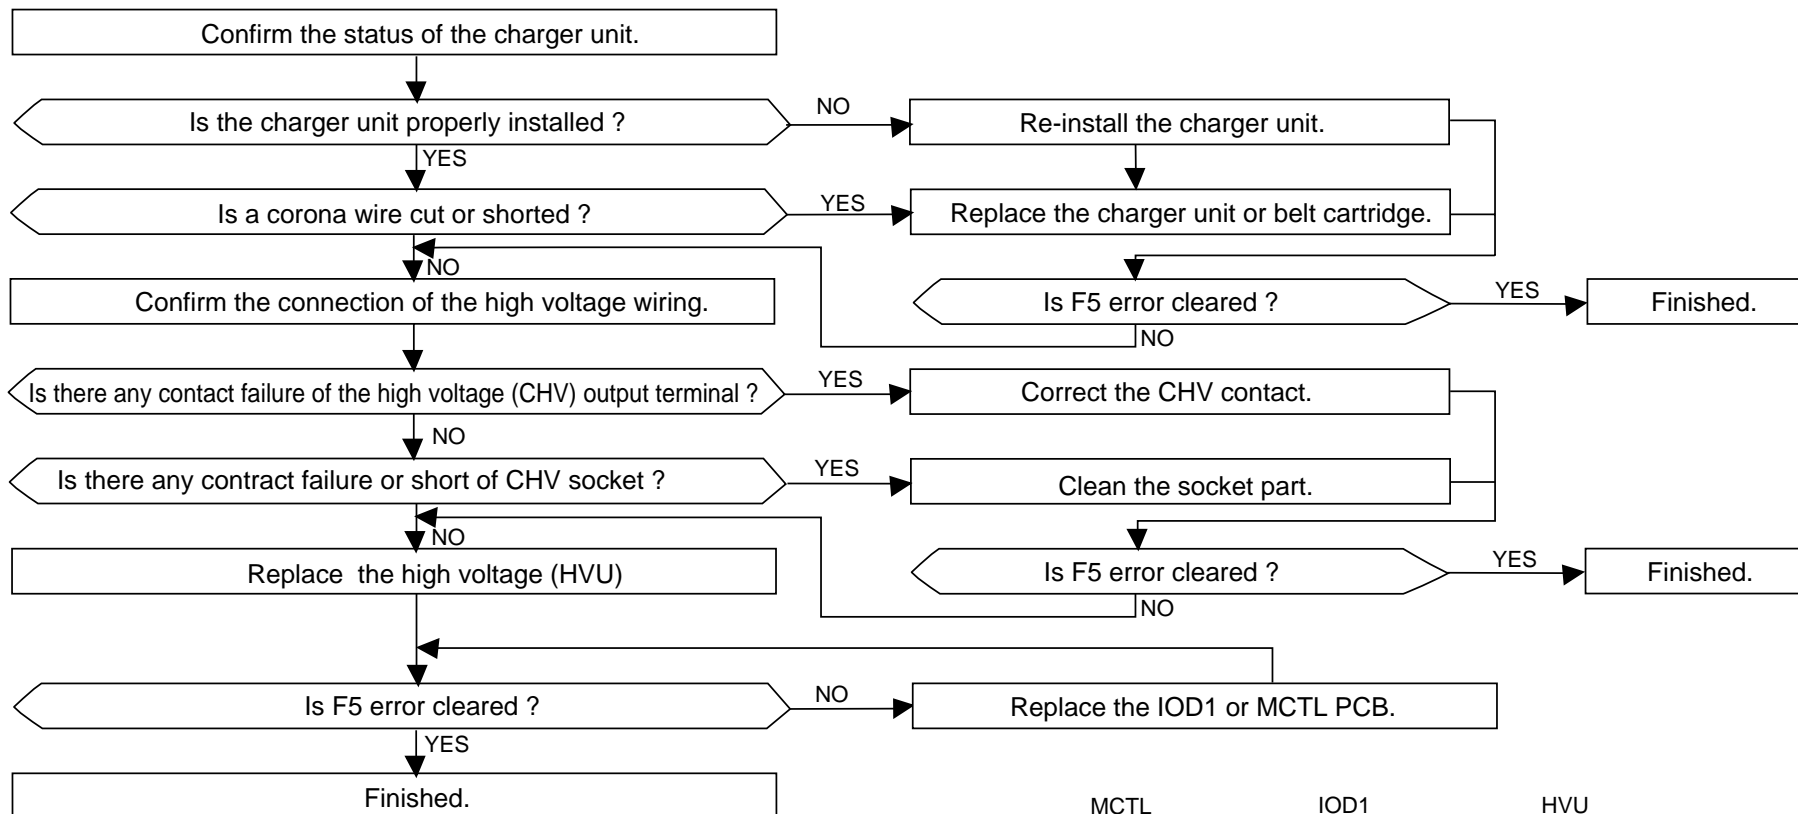


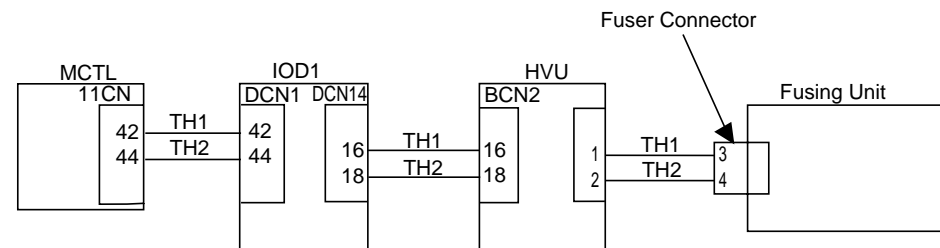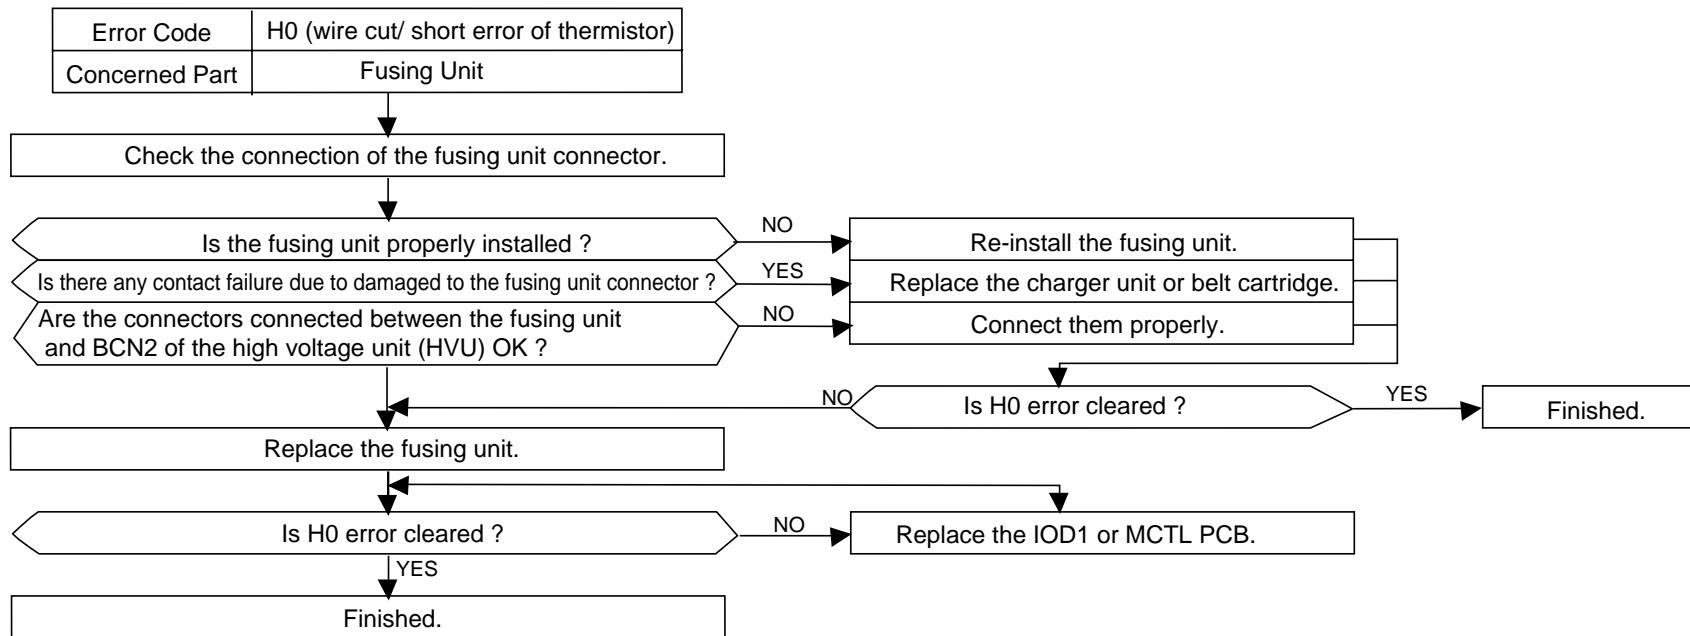


Error Code	H2,H3,H4
Concerned Part	Fusing Unit and Others


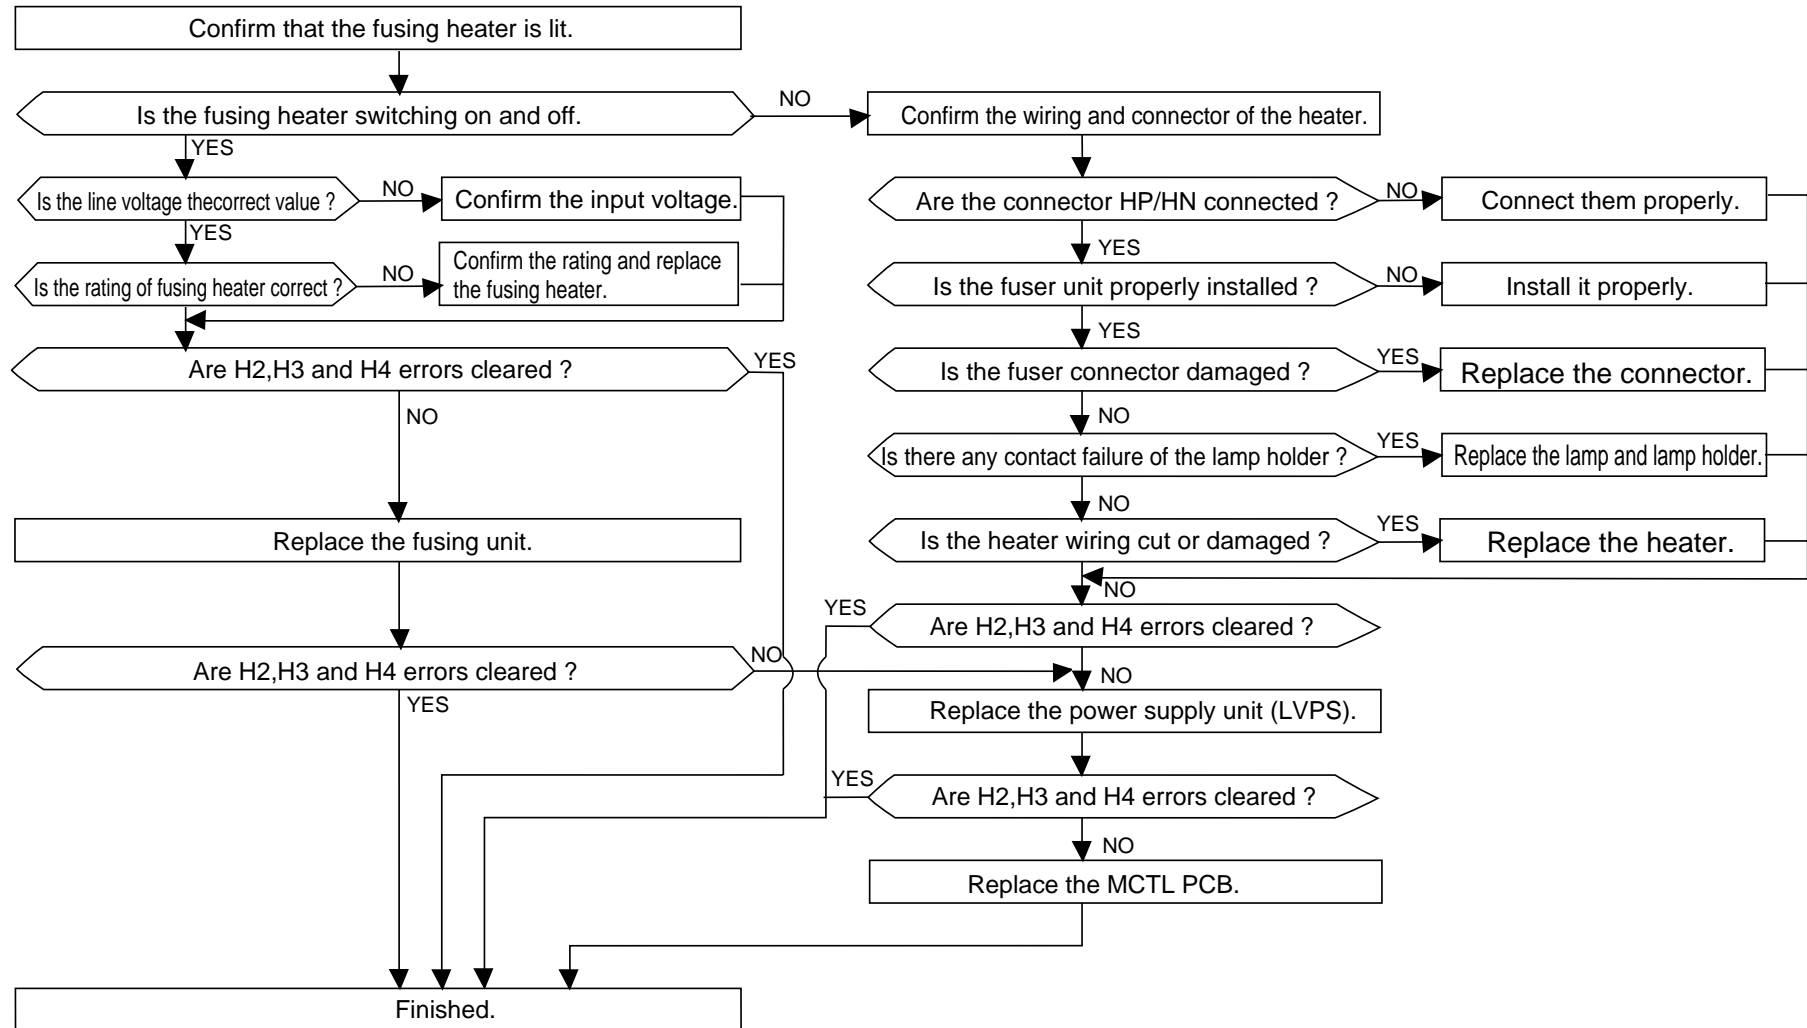


Error Code	L1 (Beam Detecting Error)
Concerned Part	Scanner Unit

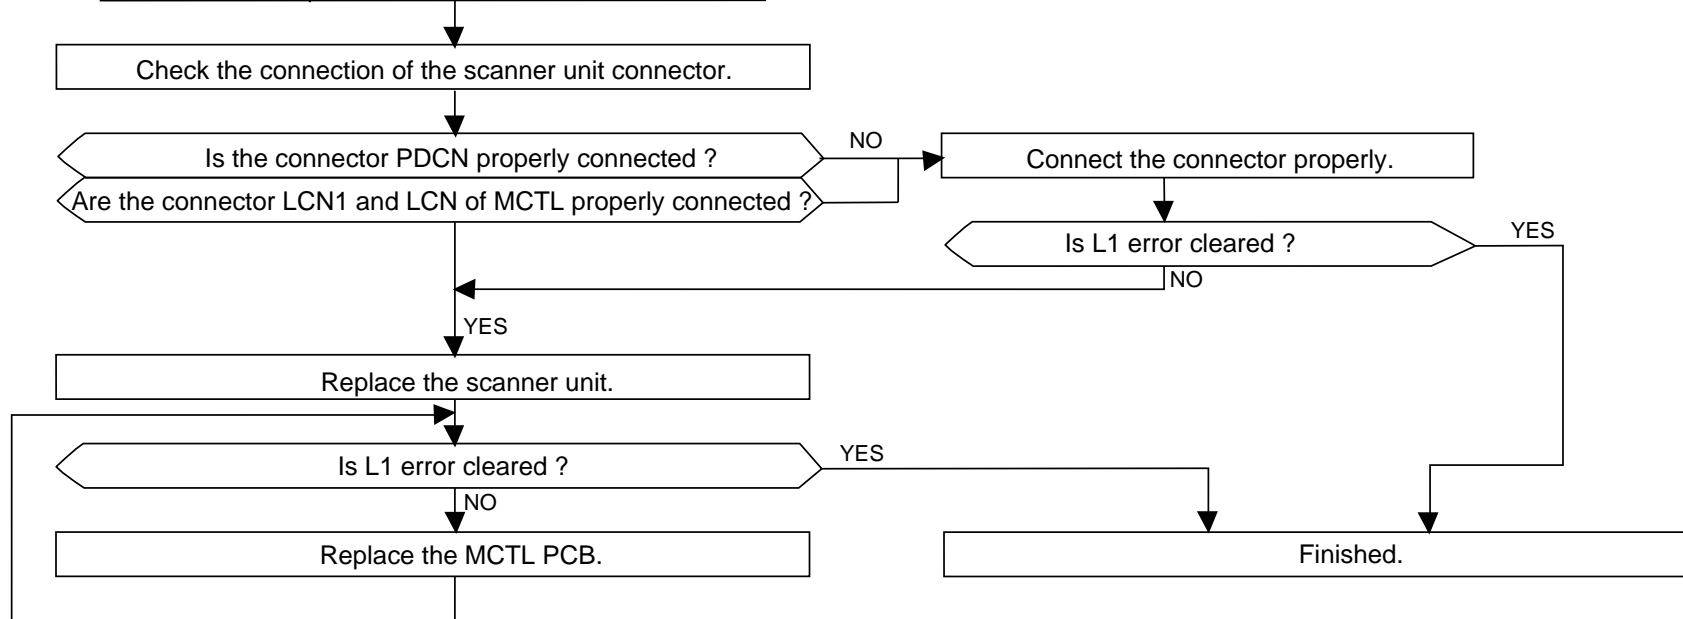


VIII-38

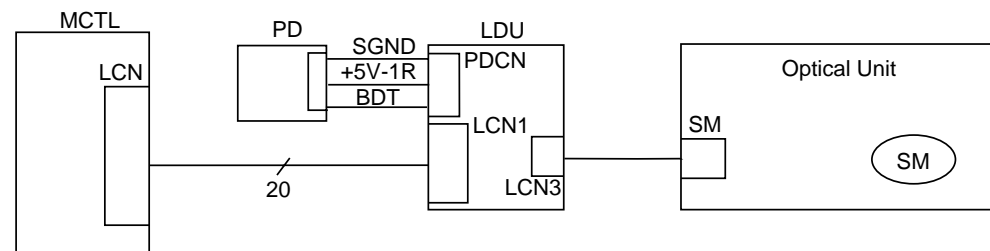


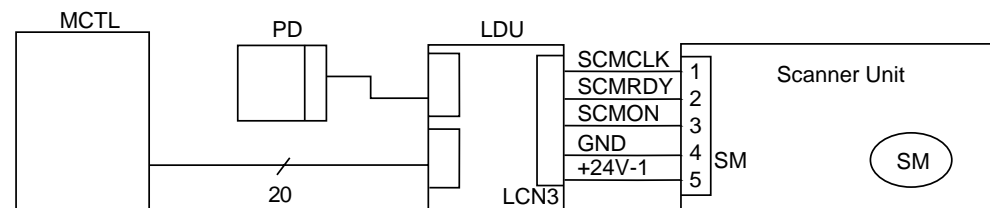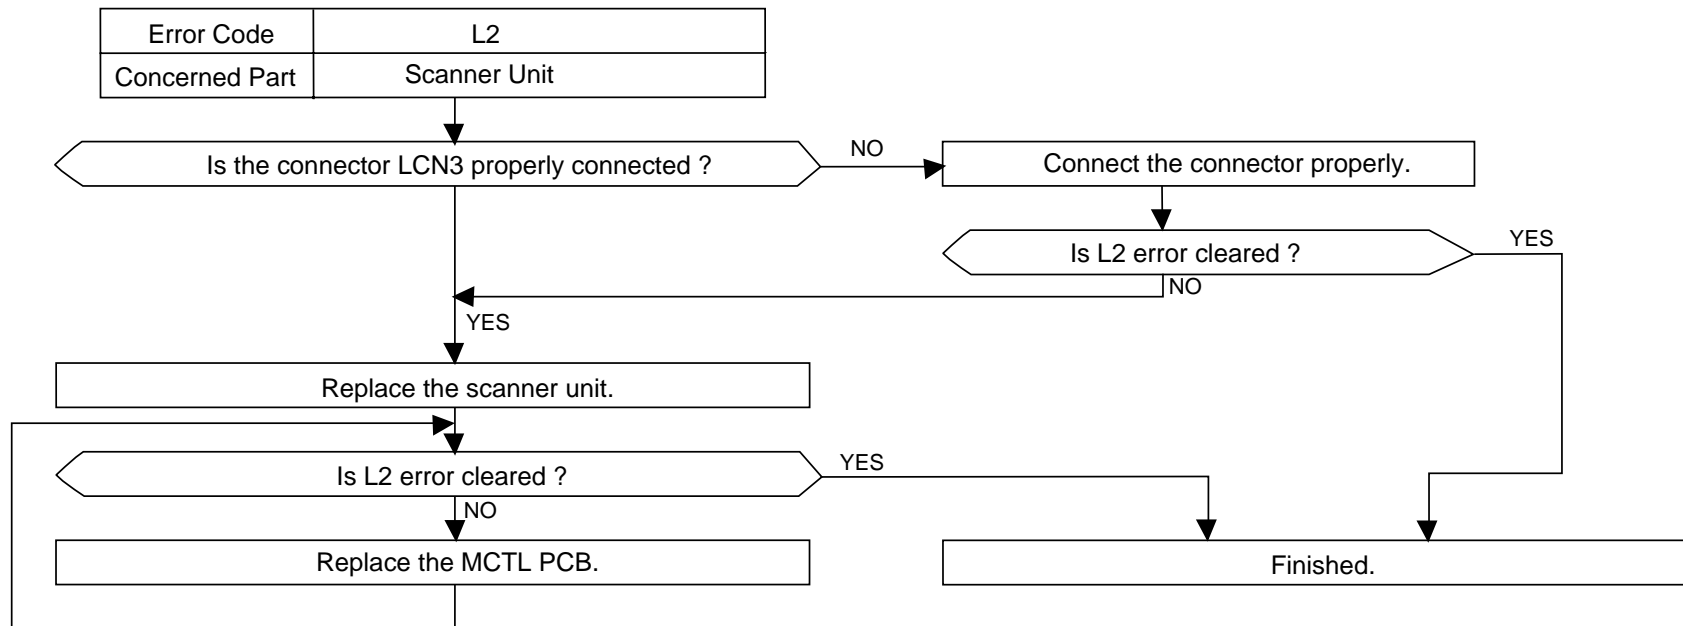

Error Code	LL
Concerned Part	Scanner Unit

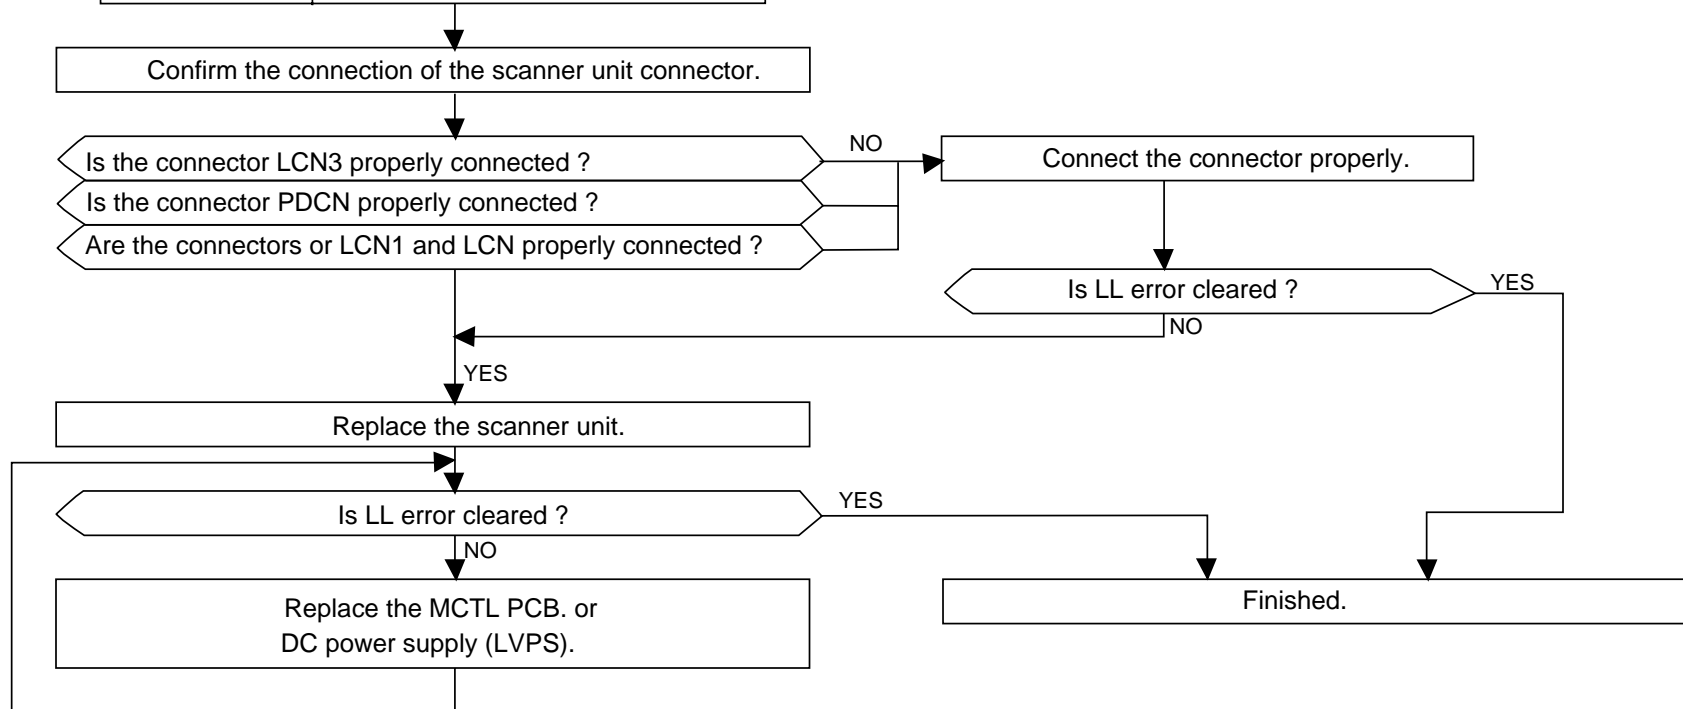

VIII-40

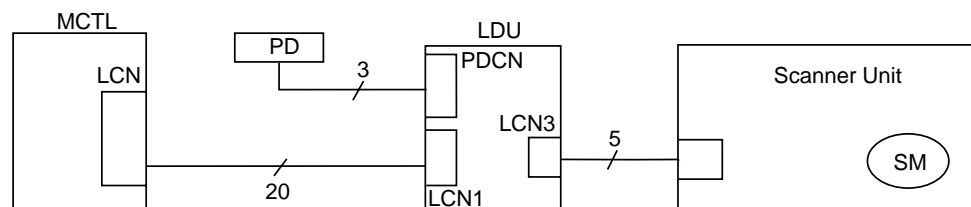


5. IMAGE FAILURE


(1)



(2)

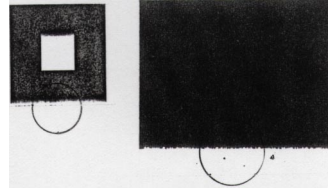


(3)

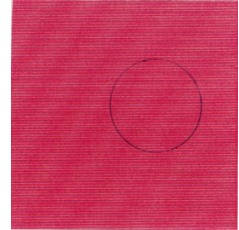


(4)




(5)

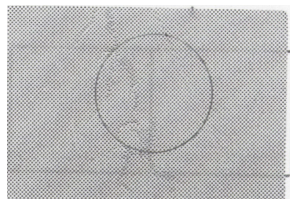


(6)

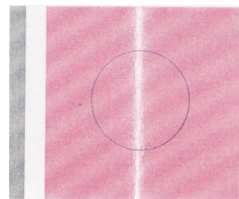

(7)

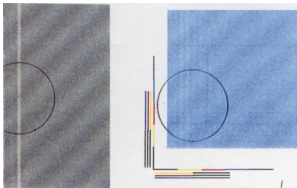


(8)

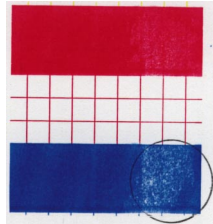


(9)-a




(9)-b

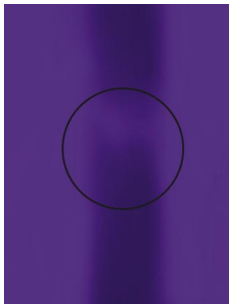


(10)

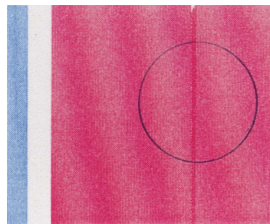


(11)

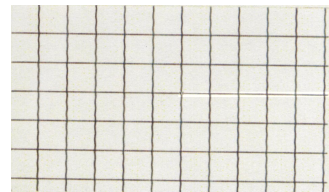


(12)

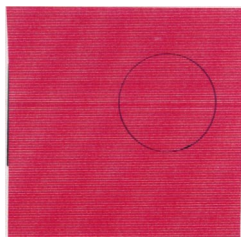

(13)

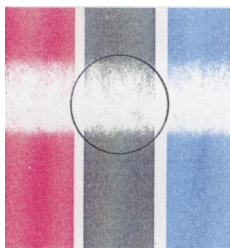

(14)

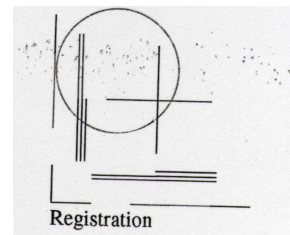

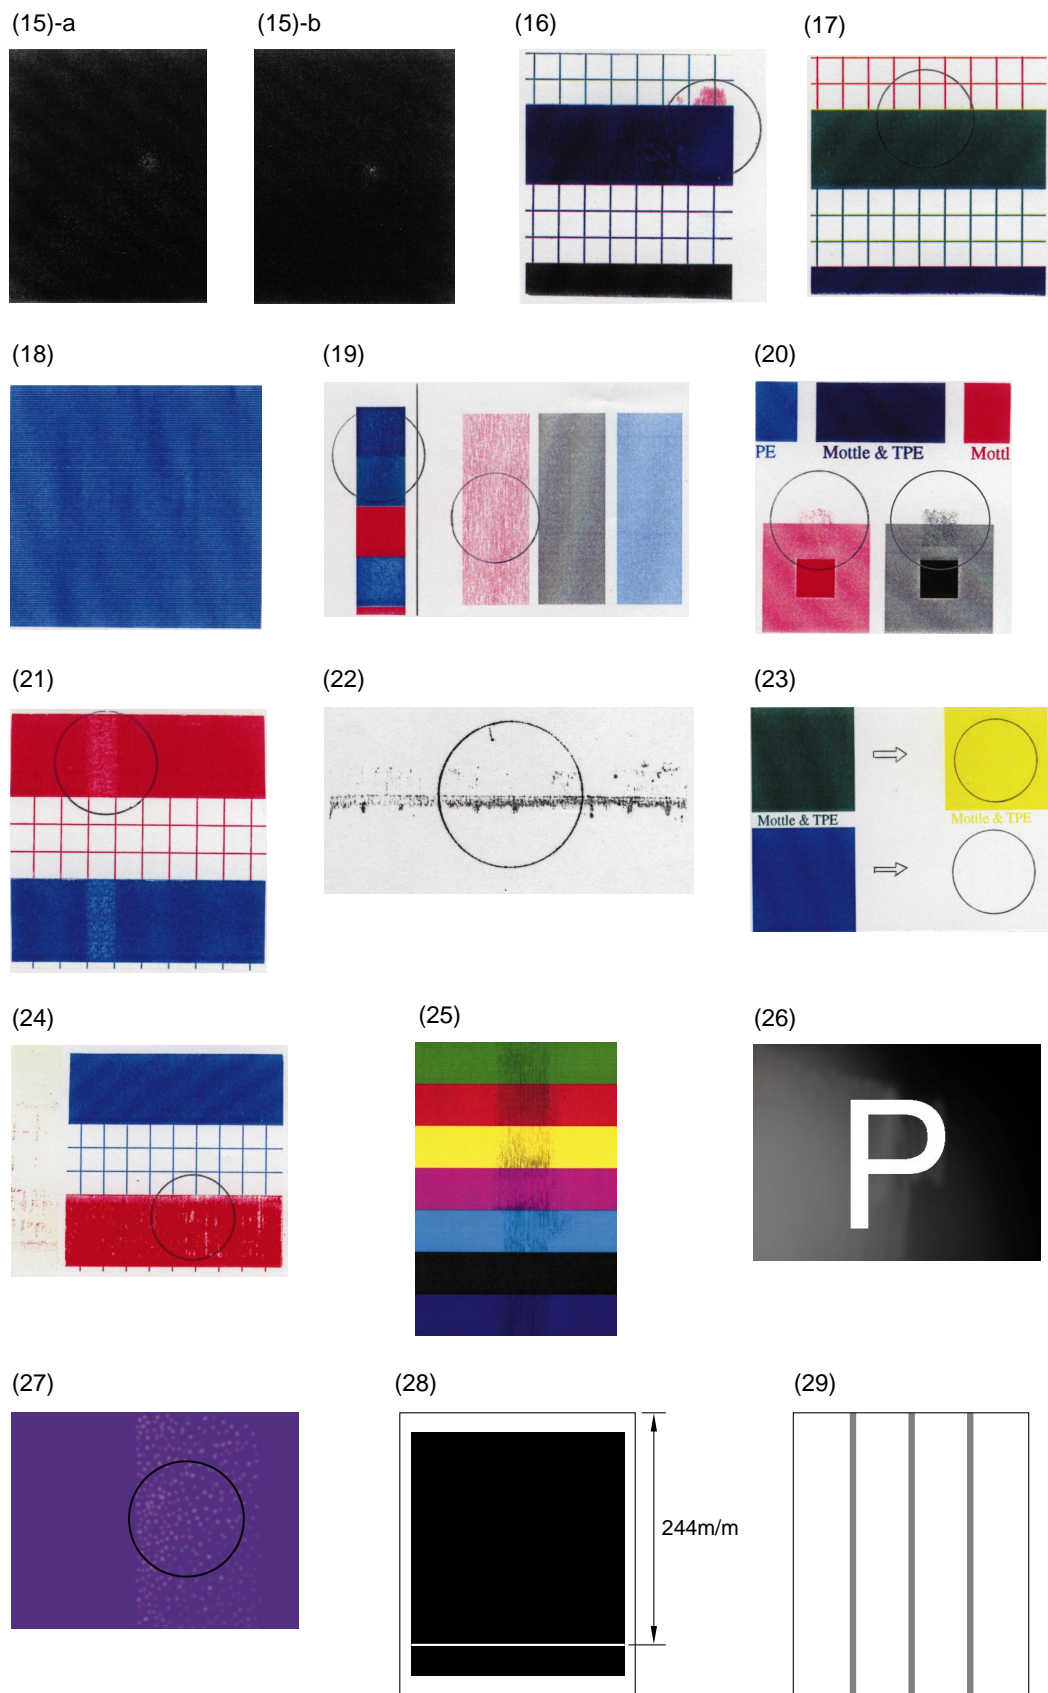


Fig.8-2

I-1	Background
-----	------------

Phenomenon

Background is smeared due to toner spread as shown in [print sample \(1\) of Fig.8-2](#).

Main Causes

- 1) Too small toner mass and charging level in the developing process.
- 2) Poor contact of the developer roller's bias pole.
- 3) Life expired or failure of the OPC belt cartridge.

Countermeasures

- 1) Replace the toner cartridge. (See [Section 3.2 of Chapter III](#).)
- 2) Confirm if the developer bias pole is deformed or not.
- 3) Replace the OPC belt cartridge. (See [Section 2.1 of Chapter VI](#).)

I-2	Missing Image at Edge
-----	-----------------------

Phenomenon

There is missing or peeling toner found in the image at the edge as shown in [print sample \(2\) of Fig.8-2](#).

Main Causes

- 1) Too small toner mass and charging level in the developing process.
- 2) The OPC belt is deformed (waving).

Countermeasures

- 1) Replace the toner cartridge with a new one.
- 2) Replace the OPC belt cartridge with a new one.

I-3	Jitter
-----	--------

Phenomenon

Uneven optical density appears periodically in the horizontal direction on the printed image as shown in [print sample \(3\) of Fig.8-2](#).

Main Causes

Failure of main motor.

- 1) Irregular rotation of the drive motor.
- 2) Failure of the gears.
- 3) Variation of OPC belt running speed due to above reasons.
- 4) Too much rotational load of the OPC belt.

Countermeasures

- 1) Replace the main motor with a new one. (See [Section 4.1.8 of Chapter VII](#).)
- 2) Replace the OPC belt cartridge with a new one. (See [Section 2.1 of Chapter VI](#).)

Note:

If the print mode is set to CAPT (Color Advanced Photoscale Technology) in the driver, this problem might occur. Change the mode setting to normal mode.

I-4	Ribbing
-----	---------

Phenomenon

Light print occurs on the right or left hand side of the image as shown in [print sample \(4\) of Fig.8-2](#).

Main Causes

- 1) Slight tilt on the surface of printer installation table.
(Tilt should be less than 1°.)
- 2) Toner amount in the toner cartridge is insufficient.
(The amount in a full cartridge should be 175g for Y, M, & C and 275g for K.)

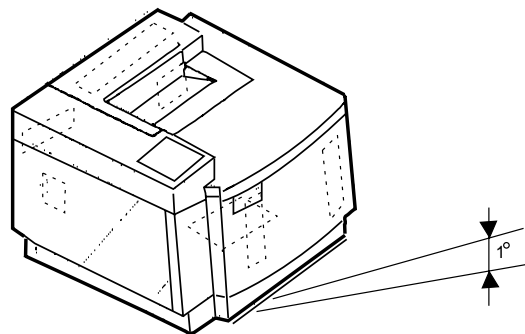


Fig.8-3

Countermeasures

- 1) Confirm that the printer installation table is flat and level.
- 2) Replace the toner cartridge with a new one.

I-5	Wrinkle / Image Migration
-----	---------------------------

Phenomenon

Banding shadows of different optical density appear due to wrinkle, image migration and color misregistration occurring on the print paper as shown in [print sample \(5\) of Fig.8-2](#).

Main Causes

- 1) Print paper other than the recommended paper is being used.
- 2) The paper discharger unit of the transfer unit is not functioning.
- 3) Fuser oil in the fusing unit is nearly running out.
- 4) One side of the fusing unit is lifted up slightly.

Countermeasures

- 1) Use a recommended paper.
- 2) Confirm if the transfer unit is properly installed to the paper discharger unit and functioning normally.
 - 2-1) Confirm the installation status.
 - 2-2) Clean the paper discharger unit, or replace it with a new one. (See [Section 1.2.5](#) and [2.4 of Chapter VI](#).)
- 3) Refit the fusing unit correctly and lock it in position or replace the fusing unit with a new one. (See [Section 2.2 of Chapter VI](#).)

Phenomenon

Vertical white line appears in the specific color area when test-printed in the four color mode (Stripe Mode), as shown in [print sample \(6\) of Fig.8-2](#).

Main Causes

- 1) Foreign particles adhering to the following places around the developer roller. (Refer to Fig.8-8.)
 - Between the cartridge cover and developer roller (a)
 - On the surface of the developer roller (b)
 - Between the blade fixing plate and the developer roller (c)
 - Between the blade and the developer roller (d)
- 2) Foreign particles adhering to the toner cartridge's main blade of the color in question.

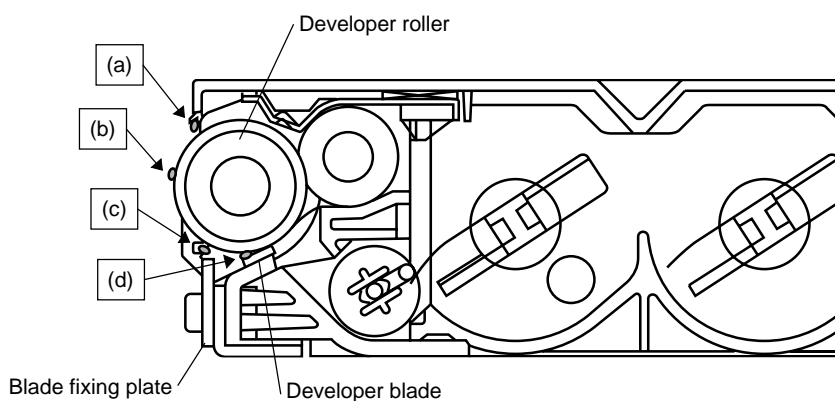


Fig.8-4

Countermeasures

- 1) Implement the test print.
- 2) Confirm the color of the toner cartridge in question that has caused the white line.
- 3) Remove the foreign particles adhering to the developer roller.

If foreign particles adhere to (d) of Fig.8-8, remove them referring to one of the figures below.

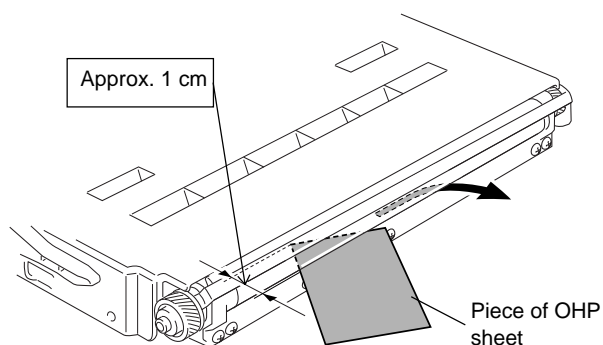


Fig.8-5

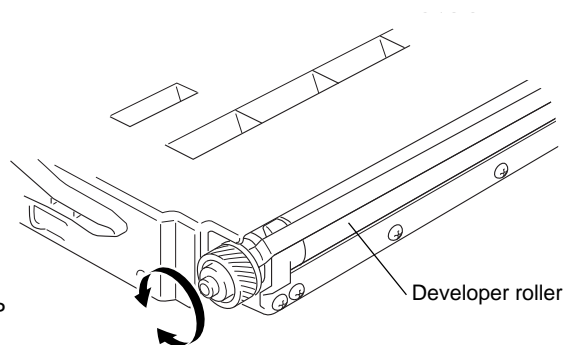


Fig.8-6

I-7	White Line (2)
-----	----------------

Phenomenon

Vertical white line appears from the leading edge to the trailing edge of the printed image as shown in [print sample \(7\) of Fig.8-2](#).

Main Causes

The dustproof glass of the scanner unit is smeared with toner or foreign particles.

Countermeasures

Clean the dustproof glass.

- 1) Remove the OPC belt cartridge and toner cartridges. (See [Section 2.1 of Chapter VI](#).)
- 2) Remove the dustproof glass from the scanner unit.
- 3) Clean the dustproof glass. (See [Section 1.2.8 of Chapter VI](#).)

I-8	Vertical White Band
-----	---------------------

Phenomenon

White band appears in the vertical direction of printed image as shown in [print sample \(8\) of Fig.8-2](#).

Main Causes

Silicone oil adhering to the transfer drum.

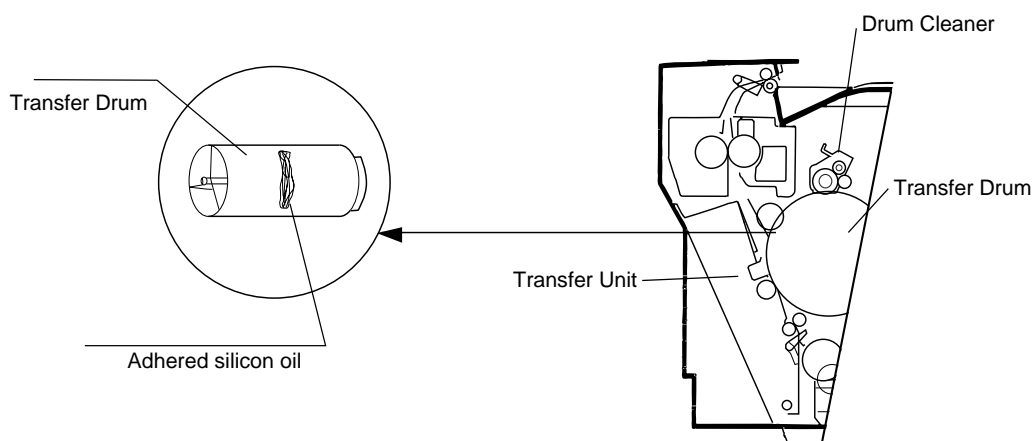


Fig.8-7

Countermeasures

- 1) Wipe off the oil adhering to the transfer unit and its perimeter.
- 2) Replace the transfer drum with a new one. (See [Section 2.8 of Chapter VI](#).)
- 3) If the oil adhesion is excessive, replace the OPC belt cartridge and drum cleaner with new ones. (See [Section 2.1 and 2.5 of Chapter VI](#).)

I-9	Black Line / Blur in the Image
-----	--------------------------------

Phenomenon

Fine black line or blur appears in the printed image as shown in [print sample \(9\) of Fig.8-2](#).

Main Causes

- 1) The corona wire of the charger unit is dirty.
- 2) OPC belt surface is damaged.
- 3) Foreign particles (paper dust, etc.) are stuck between the cleaning blade and OPC belt.
- 4) Debris adhering to the base of the toner cartridge's developer roller where it contacts with the OPC belt.

Countermeasures

- 1) Remove the OPC belt cartridge.
 - 1-1) Clean the charger unit (corona wire). (See [Section 1.2.6 of Chapter VI](#).)
 - 1-2) Replace the OPC belt cartridge with a new one. (See [Section 2.1 of Chapter VI](#).)
- 2) Clean the surface of the developer roller.

I-10	Vertical Line
------	---------------

Phenomenon

Vertical line appears in the printed image as shown in [print sample \(10\) of Fig.8-2](#).

Main Causes

- 1) Foreign particles (dust, etc.) adhering to the parts located around the transfer drum, and consequently in contact with the toner image on the transfer drum.
- 2) Damage of the OPC belt due to foreign particles adhering to the blade of the OPC belt.

Countermeasures

- 1) Clean the paper discharger unit. (See [Section 1.2.5 of Chapter VI](#).)
- 2) Clean the charger unit (corona wire) of the OPC belt cartridge. (See [Section 1.2.6 of Chapter VI](#).)
- 3) Clean the rear face of the waste toner feeder.
- 4) Replace the OPC belt cartridge with a new one.

I-11	Vertically Staggered Image
------	----------------------------

Phenomenon

Printed image staggered in the vertical direction as shown in [print sample \(11\) of Fig.8-2](#).

Main Causes

- 1) Shock or vibration applied to the printer.
- 2) Failure of the scanner unit; Vibration from rotation of the scanner motor.

Countermeasures

- 1) Do not apply shock or vibration to the printer body.
- 2) Installation location should be appropriate with no possibility of shock or vibration.
- 3) Replace the scanner unit with a new one. (See [Section 4.5.2 of Chapter VII](#).)

I-12	Banding
------	---------

Phenomenon

Banding line appears in the horizontal direction as shown in [print sample \(12\) of Fig.8-2](#).

Main Causes

This is a transfer failure due to the shock caused when the OPC belt seam passes over the cleaning blade.

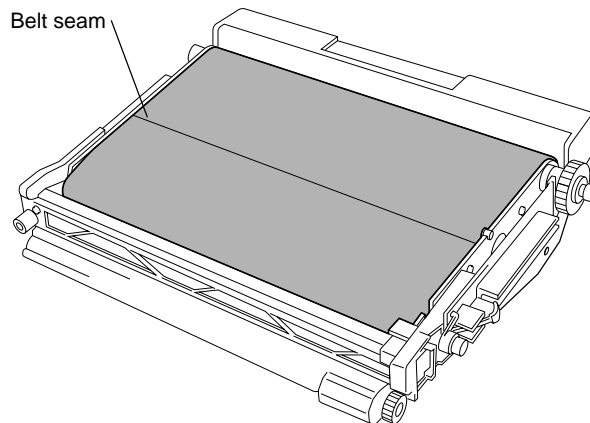


Fig.8-8

Countermeasures

Replace the OPC belt cartridge with a new one. (See [Section 2.1 of Chapter VI](#).)

I-13	White Band
------	------------

Phenomenon

White banding line appears in the horizontal direction, and consequently causes a missing image as shown in [print sample \(13\) of Fig.8-2](#).

Main Causes

- 1) Installation failure of the transfer unit, and deformation of the transfer roller.
- 2) Contact failure of the transfer roller bias pole.
- 3) Transfer solenoid failure.

Countermeasures

- 1) Confirm if the transfer unit is properly locked in position and that both ends of the transfer unit are held by the hooks.
- 2) Confirm if the transfer unit is properly installed or not.
- 3) Replace the transfer solenoid with a new one. (See [Section 4.1.14 of Chapter VII](#).)
- 4) Replace the transfer unit with a new one. (See [Section 4.6.1 of Chapter VII](#).)

I-14	Toner Drop
------	------------

Phenomenon

Toner spot stain is caused on the print by toner dropping within the printer engine as shown in [print sample \(14\) of Fig.8-2](#).

Main Causes

- 1) Toner drops onto the transfer drum due to the breakdown of the waste toner feeder.
 - 1-1) Mylar of the waste toner feeder is deformed.
 - 1-2) Waste toner is not properly collected by the waste toner feeder.

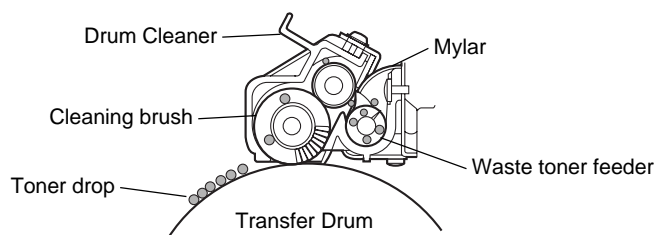


Fig.8-9

- 2) Toner adhering to the developer roller drops on the OPC belt .

Countermeasures

- 1) Check the cleaning brush and waste toner feeder.
 - 1-1) Clean the perimeter of the cleaning brush installation location.
 - 1-2) Check if the seal is deformed or damage. If there is any deformation or damage, replace the waste toner feeder with a new one.
 - 1-3) Check if waste toner is stuck in the printer engine. Remove the waste toner with a vacuum cleaner designed to manage toner.
- 2) Remove the toner cartridge.
 - 2-1) Clean the surface of the developer roller.
 - 2-2) Replace the toner cartridge with a new one.

I-15	White Spot / Black Spot
------	-------------------------

Phenomenon

White spots and black spots appear on the print as shown in [print sample \(15\) of Fig.8-2](#).

Main Causes

- 1) Foreign particles adhering to the OPC belt or transfer drum.
- 2) The OPC belt or transfer drum is damaged.
- 3) Foreign particles mixed in the toner.
- 4) Foreign particles adhering to the transfer roller, or local deformation of the transfer roller.

Countermeasures

- 1) Remove the OPC belt cartridge.
 - 1-1) Lightly wipe off the foreign particles adhering to the OPC belt using a cotton cloth.
 - 1-2) Replace the damaged OPC belt cartridge with a new one. (See [Section 2.1 of Chapter VI](#).)
- 2) Open the transfer unit, and check the transfer drum.
 - 2-1) Lightly wipe off the foreign particles adhering to the transfer drum using a cotton cloth.
 - 2-2) Replace the damaged transfer drum with a new one. (See [Section 4.2.11 of Chapter VII](#).)
- 3) Remove the toner cartridge.
 - 3-1) Clean the surface of the developer roller.
 - 3-2) Replace the toner cartridge with a new one.
- 4) Replace the transfer unit with a new one. (See [Section 4.6.1 of Chapter VII](#).)

I-16	Mixed Color Image
------	-------------------

Phenomenon

Mixed color image appears in the print as shown in [print sample \(16\) of Fig.8-2](#).

Main Causes

- 1) Failure of toner cartridge: Blade pressure of the developer roller is incorrect or the blade is deformed.
- 2) Restitution error of toner cartridge.

Countermeasures

- 1) Confirm the toner cartridge can be inserted smoothly.
- 2) Replace the toner cartridge with a new one.
- 3) Reconfirm that the front cover unit is locked.

I-17	Color Misregistration
------	-----------------------

Phenomenon

Color misregistration is caused between two colors as shown in [print sample \(17\) of Fig.8-2](#).

Main Causes

- 1) The OPC belt cartridge is not properly installed.
 - 2) The OPC belt cartridge is deformed.
 - 3) The cleaning brush of the drum cleaner is unstable in operation.
 - 4) Rotational load on the OPC belt cartridge is excessive.
- ** This problem might occur in the first page printed in color mode immediately after printing in monochrome mode, or the first page immediately after turning on the printer.

Countermeasures

- 1) Reset the OPC belt cartridge properly.
- 2) Replace the OPC belt cartridge with a new one. (See [Section 2.1 of Chapter VI](#).)
- 3) Replace the drum cleaner with a new one.

I-18	Toner Streak
------	--------------

Phenomenon

Brush mark line of uneven scanning density is caused in the image as shown in [print sample \(18\) of Fig.8-2](#).

Main Causes

- 1) Main blade of the developer unit and the reset roller is not normal.
- 2) Location of the toner cartridge is not correct.
- 3) Transport paddle in the toner cartridge is deformed.
- 4) Brush mark line appears in the continuous printing of high coverage (solid) patterns.

Countermeasures

- 1) Replace the toner cartridge with a new one.
- 2) Temporarily suspending the printing, agitate the toner cartridge and stabilize the replenishment of toner.

I-19	Mottle
------	--------

Phenomenon

Variation of the scanning density is found in the image as shown in [print sample \(19\) of Fig.8-2](#).

Main Causes

- 1) The transfer unit is not fixed in place.
- 2) Assembly of the transfer roller is inaccurate.
- 3) THV output of DC high voltage unit is not normal.
- 4) Failure of the toner cartridge.
- 5) Deformation of the print paper.

Countermeasures

- 1) Confirm that the transfer unit is firmly locked in place.
- 2) Confirm that the transfer roller is properly installed.
- 3) Replace the DC high voltage unit with a new one. (See [Section 4.3.2 of Chapter VII](#).)
- 4) Replace the toner cartridge with a new one.
- 5) Replace the paper with new paper from a freshly opened ream.

I-20	Residual Image
------	----------------

Phenomenon

Image of the preceding page appears on every other page as shown in [print sample \(20\) of Fig.8-2](#).

Main Causes

- 1) Cleaning failure due to lifting of the cleaning brush of the drum cleaner.
- 2) Contact failure of the drum cleaner's bias pole.
- 3) Failure of DC high voltage unit.

Countermeasures

- 1) Check if the drum cleaner is properly installed or not.
- 2) Replace the failed DC high voltage unit with a new one. (See [Section 4.3.2 of Chapter VII](#).)

I-21	Insufficient Gloss
------	--------------------

Phenomenon

Gloss of the print is not sufficient as shown in [print sample \(21\) of Fig.8-2](#).

Main Causes

- 1) The fuser cleaner is stained.
- 2) The fuser roller is deteriorated.

Countermeasures

- 1) Replace the fuser cleaner with a new one. (See [Section 3.3 of Chapter III](#).)
- 2) Replace the fusing unit with a new one. (See [Section 2.2 of Chapter VI](#).)

Note:

When replacing the fusing unit, wait approximately for 30 minutes after the new unit is installed to allow the fusing oil to circulate in the new fusing unit.

I-22	Back Stain
------	------------

Phenomenon

Back side of the print paper is stained as shown in [print sample \(22\) of Fig.8-2](#).

Main Causes

Fusing unit:

- 1) The cleaning pad of the fuser cleaner is stained.
- 2) Silicone oil in the oil bottle is short.
- 3) The fuser roller and back-up roller are dirty.

Countermeasures

- 1) Replace the fuser cleaner with a new one. (See [Section 3.3 of Chapter III](#).)
- 2) Clean the fuser roller and back-up roller.
- 3) Replace the fusing unit with a new one. (See [Section 2.2 of Chapter VI](#).)

I-23	White Print
------	-------------

Phenomenon

A blank page (no print at all) is output or a specific color is missing (not printed) as shown in [print sample \(23\) of Fig.8-2](#).

Main Causes

- 1) Laser light path is blocked by paper or other material stuck at the opening of the scanner unit.
- 2) The transfer solenoid is broken (not functioning).
- 3) There is no belt bias voltage (CBV).
- 4) There is no output from the high voltage unit (HVU) due to breakdown.

Countermeasures

- 1) Confirm that there are no foreign objects stuck in the opening of the scanner unit.
- 2) Replace the transfer solenoid with a new one. (See [Section 4.1.14 of Chapter VII](#).)
- 3) Replace the OPC belt cartridge with a new one. (See [Section 2.1 of Chapter VI](#).)
- 4) Replace the high voltage unit with a new one. (See [Section 4.3.2 of Chapter VII](#).)

I-24	Insufficient Fusing
------	---------------------

Phenomenon

Printed image is partially missing as shown in [print sample \(24\) of Fig.8-2](#). This proves that the fusing is insufficient.

Main Causes

- 1) Wrong selection of print media (label or envelope, etc.) at the Host (driver) side.
- 2) Recommended paper is not being used.
- 3) Double-feed paper.
- 4) Failure of the fusing unit.

Countermeasures

- 1) Adjust the mode of Host side to suit the print media in use.
- 2) Use the recommended paper.
- 3) Fan the paper before loading in the media cassette.
- 4) Replace the failed fusing unit with a new one. (See [Section 2.2 of Chapter VI](#).)

I-25	Vertical Smear
------	----------------

Phenomenon

Printed image is smeared vertically as shown in [print sample \(25\) of Fig.8-2](#).

Main Causes

- 1) Paper dust between the cleaning blade and OPC belt.
- 2) Debris adhering to the base of a toner cartridge's developer roller where it contacts with the OPC belt.

Countermeasures

- 1) Remove paper dust between the cleaning blade and OPC belt referring to the figure below.

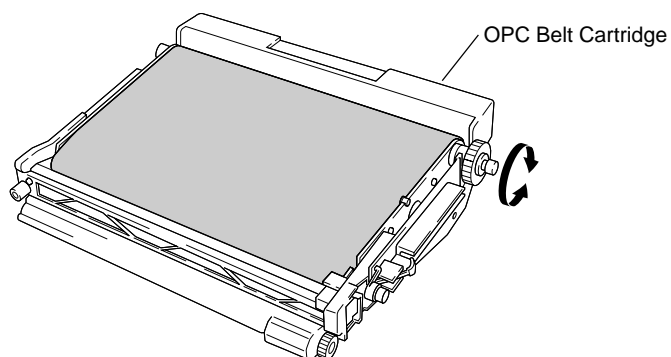


Fig.8-10

- 2) Replace the OPC belt cartridge with a new one.

I-26	Black Toner Light
------	-------------------

Phenomenon

Black color of printed image is light as shown in [print sample \(26\) of Fig.8-2](#), and the printer clatters at the same time.

Main Causes

Black toner in the cartridge has solidified because the printer is used under high temperature circumstance or due to continuous printing.

Countermeasures

Replace the black toner cartridge with a new one.

I-27	Color Missing
------	---------------

Phenomenon

Color is missing in the printed image as shown in [print sample \(27\) of Fig.8-2](#).

Main Causes

Fusing failure due to using damp paper or using the printer under high humidity conditions.

Countermeasures

- 1) Use the paper immediately after open the paper bag.
- 2) Change the NVRAM setting. (Refer to 'THV TUNE UP' in Section 3.3 of Chapter V.)

I-28	Horizontal Line 244mm from the Edge of Paper
------	--

Phenomenon

A horizontal line appears 244mm from the edge of the printed paper as shown in [print sample \(28\) of Fig.8-2](#).

Main Causes

Vibration is caused when an OPC belt and the transfer drum contact.

Countermeasures

Change the resolution to 600 dpi.

I-29	Vertical Lines on OHP
------	-----------------------

Phenomenon

Vertical lines appear when printing the OHP sheet as shown in [print sample \(29\) of Fig.8-2](#).

Main Causes

Paper dust around the paper exit roller adhering to the OHP sheet.

Countermeasures

- 1) Use the recommended OHP sheet.
- 2) Clean the paper exit roller.

APPENDIX A

1. SERIAL NO. DESCRIPTIONS

The descriptions as below shows how to read labels on each place.

< ID for production month of Printer >

A:	January	E:	May	J:	September
B:	February	F:	June	K:	October
C:	March	G:	July	L:	November
D:	April	H:	August	M:	December

< ID for production month of other parts than the printer >


1:	January	5:	May	9:	September
2:	February	6:	June	X:	October
3:	March	7:	July	Y:	November
4:	April	8:	August	Z:	December

(1) Printer

XXXXXXL7S111101

MODEL NO. MONTH YEAR FACTORY NO. SERIAL NO.

<Location>

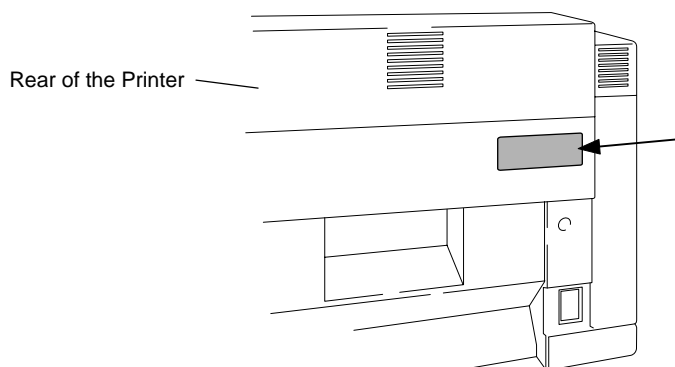


(2) Toner Cartridge

1 2 X X X X X X X X X X

YEAR MONTH SERIAL NO.

<Location>

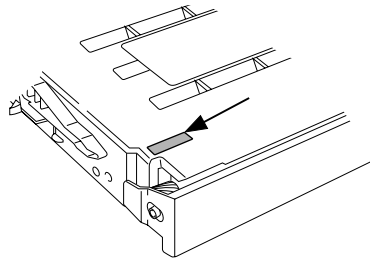


(3) OPC Belt Cartridge

1 2 X X X X

YEAR MONTH SERIAL NO.

<Location>

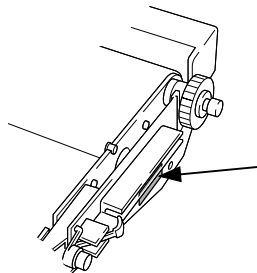

(4) Fusing Unit

XXXX 7 1 2 3 A — REV.(-, A - Z)


DATE

MONTH

YEAR

VOLTAGE (100V, 120V, 240V)


<Location>

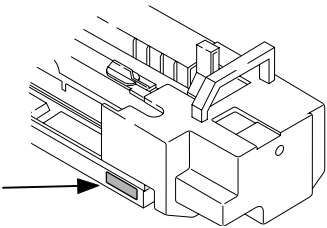

(5) Scanner Unit

7 1 2 3 A — REV.(-, A - Z)
DATE
MONTH
YEAR


<Location>

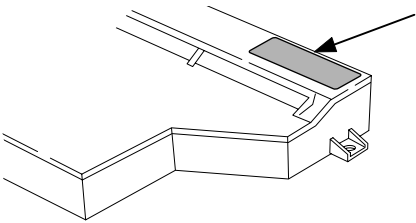

(6) Transfer Drum (Hand-writing)

XXXXXX - 7 1 2 3
SERIAL NO. YEAR MONTH DATE

<Location>

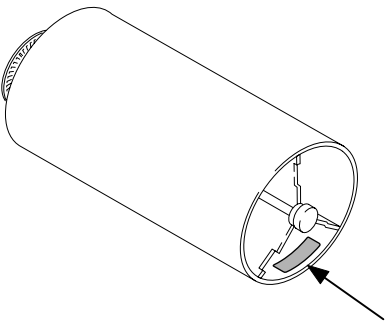

2. DIAMETER / CIRCUMFERENCE OF ROLLERS

The diameter or circumference of each roller is listed below;

No.	Parts Name	Diameter (Circumference)
1	OPC Belt	(380 mm)
2	Developer Roller	φ 18 mm (56.52 mm)
3	Transfer Roller	φ 20 mm (62.80 mm)
4	Paper Pick-up Roller	φ 40 mm (125.60 mm)
5	Transfer Drum	φ 121 mm (379.94 mm)
6	Back-up Roller	φ 32 mm (100.48 mm)
7	Fuser Roller	φ 32 mm (100.48 mm)
8	Drum Cleaner	φ 25 mm (78.50 mm)
9	Cleaning Roller	φ 18 mm (56.52 mm)
10	Register Roller	φ 13.5 mm (42.39 mm)
11	Paper Exit Roller	φ 16 mm (50.24 mm)

3. SHELF LIFE OF EACH CONSUMABLE

Each consumable follows has its own shelf life. Shelf life varies whether the package of consumable is unpacked or not.

Consumable	Before unpacking *1	After unpacking *2
Toner cartridge (all colors)	3 years	1 year
OPC belt cartridge	3 years	1 year
Fuser cleaner	N/A	N/A

Note:

**1: It means that the consumable life is 1 year if it is stored for 2 years.*

**2: Even though shelf life is one year after unpacking, the consumable life will be getting less than one year if it is stored more than 2 years before unpacking.*

4. CONSUMABLES REPLACEMENT

Each consumable follows should be replaced according its own life.

- 1) Toner Cartridge
 Life: K = 10,000 pages, CYM = 6,000 pages
 Condition: Above figures are based on 5% coverage. Life is detected by the toner empty sensor.

Note:

Life of the starter toner cartridge is half of the above figures.

- 2) Oil Bottle
 Life: 12,000 pages
 Condition: Life is detected by the oil empty sensor.
- 3) Waste Toner Pack
 Life: 12,000 images
 Condition: Above figure is based on 5% coverage. Life is detected by the waste toner sensor.
- 4) 120K Kit
 Life: 120,000 pages
 Condition: None
- 5) OPC Belt Cartridge
 Life: 50,000 images
 Condition: Above figure varies depending on pages/job. Refer to the list below.

Pages per job	1 page	2 pages	3 pages	4 pages	5 pages	6 pages
Life	20,000	22,000	24,000	29,000	31,000	34,000


Pages per job	7 page	8 pages	9 pages	10 pages	25 pages
Life	36,000	37,000	39,000	40,000	50,000

- 5) Cleaning Roller
 Life: 12,000 pages
 Condition: Above figure varies depending on coverage. Refer to the list below.

Coverage	~ 20%	20% ~ 40%	40% ~
Additional life deleted	0	1	2
Life (pages)	12,000	6,000	4,000

- 6) Fusing Unit (40K Kit)
 Life: 40,000 pages
 Condition: Above figure varies depending on coverage. Refer to the list below.

Coverage	~ 12.5%	12.5% ~ 20%	20% ~ 40%	40% ~ 60%	60% ~
Additional life deleted	0	0.2	0.5	1	2
Life (pages)	40,000	33,333	26,666	20,000	13,333

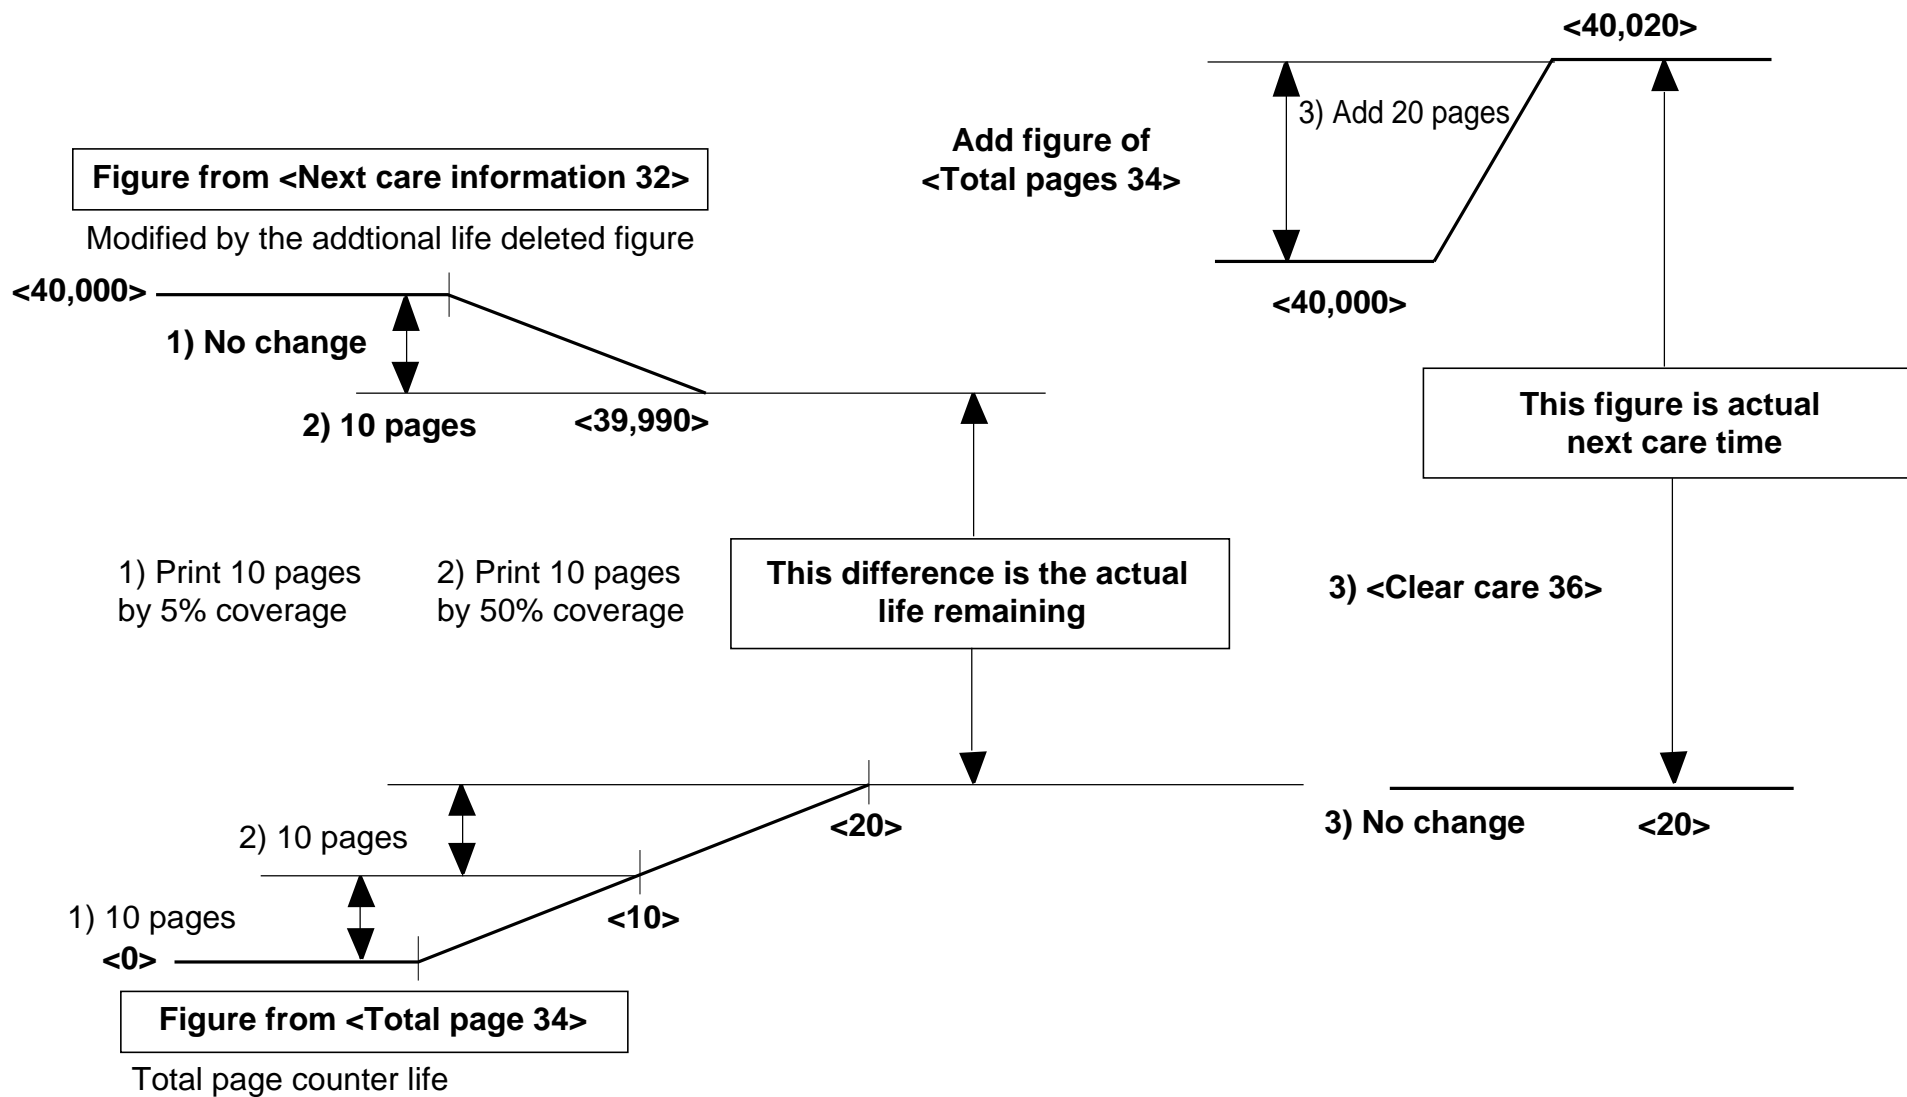

5. HOW TO RE-ENTER ORIGINAL DATA TO THE MCTL PCB



CAUTION

Actions 1) and 2) MUST be carried out BEFORE the MCTL PCB is removed or the NVRAM initialized otherwise ALL READINGS WILL BE LOST.

- 1) Go into the Engine Controller Mode. (Refer to Section 3 "ENGINE CONTROLLER MODE" of Chapter V.)
- 2) Before initializing the NV-RAM or replacing the MCTL PCB, record the following values;
 - i) Display **TOTAL PAGE** to record the value.
(i.e.) TOTAL PAGE (T) = 412P
 - ii) Display **EACH IMAGE** to record the values.
(i.e.) EACH IMAGE (IY)=348P
(IM)=353P
(IC)=365P
(IK)=439P
 - iii) Display **NEXT CARE** to record the values.
(i.e.) FC ROLL (NC2) = 12,050P
BL UNIT (NC7) = 49,135P
FU UNIT (NC8) = 39,684P
120K KIT (NC9) = 120,000P
 - iv) Display **LIFE PERIOD SET** of FACTORY MODE to record the values.
(i.e.) FC ROLL (LP2) = 12,000P
BL UNIT (LP7) = 50,000P
FU UNIT (LP8) = 60,100P
120K KIT (LP9) = 120,000P
- 3) When you have recorded all the values above, initialize the data in the NV-RAM on the MCTL PCB or replace the MCTL PCB.

After initializing all the data in the NV-RAM on the MCTL PCB, or replacing the MCTL PCB, all the original counter values for the cleaning roller, OPC belt cartridge, fusing unit, and 120K kit should be re-entered as below;

The method used to correct the counters is to reset the page counter to a calculated TOTAL PAGE value and then to perform a CLEAR CARE for the item to reset the NEXT CARE for that item to the value recorded in 2) iii).

The basic formula used in these calculations is:-

$$\text{TOTAL PAGE} = \text{NEXT CARE} - \text{LIFE PERIOD}$$

Where this formula would result in a negative number, the LIFE PERIOD should be temporarily set to a lower value so that the result is a positive number and then this number and LIFE PERIOD used to perform the CLEAR CARE to reset the NEXT CARE counter.

- 4) Re-enter the FC ROLL (NC2) value as follows;
 - i) Enter the value of NC2 - LP2 into the TOTAL PAGE counter.
 (i.e.) $NC2 - LP2 \Rightarrow 12,050P - 12,000P = 50$
 Enter the value '50' in the TOTAL PAGE counter.
 - ii) Perform CLEAR CARE 2. (Refer to '36 CLEAR CARE' in page V-24 of Chapter V.)
 - iii) Check that the value of NEXT CARE is reset to the recorded value in 2) iii).
 (i.e.) $NC2 = 12,050P$

- 5) Re-enter the BL UNIT (NC7) value as follows;
 - i) After calculating the values so that they work in the following formula
 $(IY + IM + IC + IK) = NC7 - LP7$,
 enter each value of LP7, IY, IM, IC, IK.
 (i.e.) $(IY + IM + IC + IK) = NC7 - LP7$
 $\Rightarrow (348 + 353 + 365 + 439) = 49,135 - 50,000$
 Since the above result is minus, reduce the value of LP7 is 40,000P in order to make the result plus, then enter it into the LIFE PERIOD SET counter in FACTORY MODE.
 The formula is as follows;
 $(IY + IM + IC + IK) = NC7 - LP7$
 $\Rightarrow (348 + 353 + 365 + 439) = 49,135 - 40,000$
 $\Rightarrow (348 + 353 + 365 + 439) = 9,135$
 Change the value of IK from 439 to 8,069 so that the formula works out.
 $(348 + 353 + 365 + 8,069) = 9,135$
 Then, enter each value for IY=348, IM=353, IC=365, and IK=8,069 in the EACH IMAGE SET counter in FACTORY MODE.
 - ii) Perform CLEAR CARE 7. (Refer to '36 CLEAR CARE' in page V-24 of Chapter V.)
 - iii) Check that the value of NEXT CARE is reset correctly.
 (i.e.) $NC7 = 49,135P$
 - iv) Reset the LIFE PERIOD counter in FACTORY MODE to 50,000.

- 6) Re-enter the FU UNIT (NC8) value as follows;
 - i) Enter the value of NC8 - LP8 into the TOTAL PAGE counter.
 (i.e.) $NC8 - LP8 = 39,684 - 60,100 = - 20,416$
 Since the above result is minus, reduce the value of LP8 is 30,000P in order to make the result plus, then enter it into the LIFE PERIOD SET counter in FACTORY MODE.
 The formula is as follows;
 $NC8 - LP8 = 39,684 - 30,000 = 9,684$
 Enter the value '9,684' in TOTAL PAGE.
 - ii) Perform CLEAR CARE 8. (Refer to '36 CLEAR CARE' in page V-24 of Chapter V.)

- iii) Check that the value of NEXT CARE is reset correctly.
(i.e.) $NC8 = 39,684P$
 - iv) Reset the LIFE PERIOD counter in FACTORY MODE to 60,100.
- 7) Re-enter the 120K KIT (NC9) value as follows;
 - i) Enter the value of NC9 - LP9 into the TOTAL PAGE counter.
(i.e.) $NC9 - LP9 = 120,000 - 120,000 = 0$
Enter the value '0' into the TOTAL PAGE counter.
 - ii) Perform CLEAR CARE 9. (Refer to '36 CLEAR CARE' in page V-24 of Chapter V.)
 - iii) Check that the value of NEXT CARE is reset correctly.
(i.e.) $NC9 = 120,000P$
- 8) Re-enter the original TOTAL PAGE (T) value in TOTAL PAGE SET in FACTORY MODE.
(i.e.) $T = 412P$
- 9) Re-enter the original EACH IMAGE (IY, IM, IC, IK) values in EACH IMAGE SET in FACTORY MODE.
(i.e.) $(IY)=348P, (IM)=353P, (IC)=365P, (IK)=439P$
- 10) Ensure that the values in the LIFE PERIOD SET counters in FACTORY MODE are correct.
(i.e.) $FC\ ROLL\ (LP2)=12,000P$
 $BL\ UNIT\ (LP7)=50,000P$
 $FU\ UNIT\ (LP8)=60,100P$
 $120K\ KIT\ (LP9)=120,000P$
- 11) Completed.

6. RE-PACKING INSTRUCTIONS




PRECAUTION


When re-packing the printer before shipping, be sure to follow the steps and cautions below. Failure to do so will cause toner or oil spill in the printer and severe damage to the printer.

6.1 Toner Cartridge

- 1) Open the front cover and remove all the toner cartridges (K, Y, M, C) from the printer.
- 2) Put the original protective cover (orange) onto each cartridge and put it into the polyethylene bag.

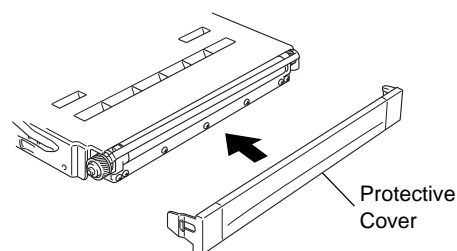

- 3) Put the toner cartridges into the original starter kit packing.

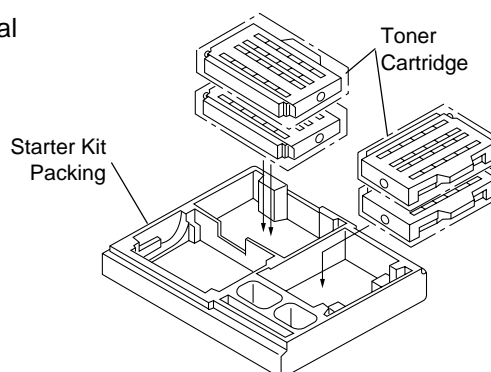


CAUTION


- If you do not have the original protective cover, cover each toner cartridge with bubble sheet to protect the developer roller.
- If you do not have the original starter kit packing, pack each toner cartridge firmly with bubble sheet and put them into the outer carton.

6.2 OPC Belt Cartridge

- 1) Open the top cover and remove the OPC belt cartridge from the printer.
- 2) Open the shutter on the OPC belt cartridge and remove toner in the cartridge with a vacuum cleaner.
- 3) Cover the OPC belt cartridge with the original protective sheet (black).
- 4) Put the cartridge into the polyethylene bag.

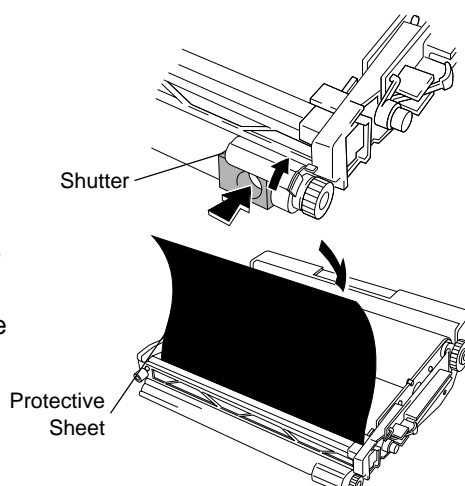

- 5) Put the OPC belt cartridge into the original starter kit packing.

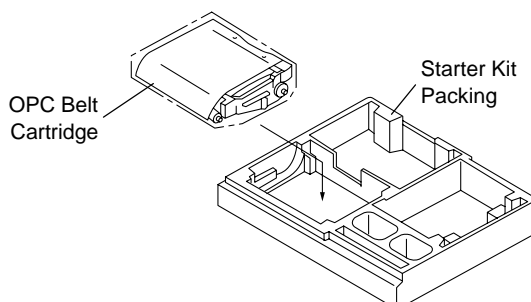


CAUTION


- Do not directly touch the OPC belt surface with bare hands or gloves.
- If the belt is exposed for more than two minutes to a light source of 800 lux, the belt may be damaged.
- If you do not have the original starter kit packing, pack the OPC belt cartridge firmly with bubble sheet and put it into the outer carton.

6.3 Fusing Unit

- 1) Open the rear access cover and slacken the fusing unit securing screws (2 pcs.)

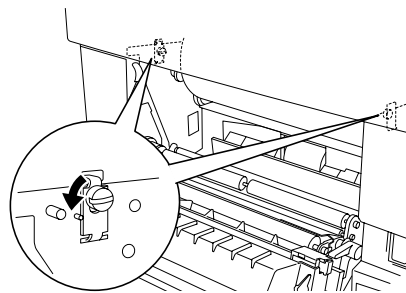


- 2) Holding the handles at both ends of the fusing unit and remove the fusing unit from the printer.
- 3) Remove the oil bottle and the fuser cleaner from the fusing unit and put each of them into the polyethylene bag.

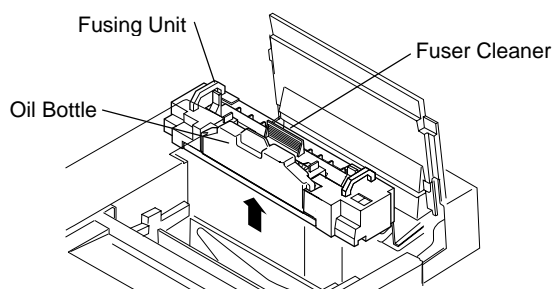

CAUTION

Pack the oil bottle in the polyethylene bag and seal it firmly. Failure to do so will cause oil spill during shipping and damage to the printer.


- 4) Put the oil bottle and the fuser cleaner into the original starter kit packing.

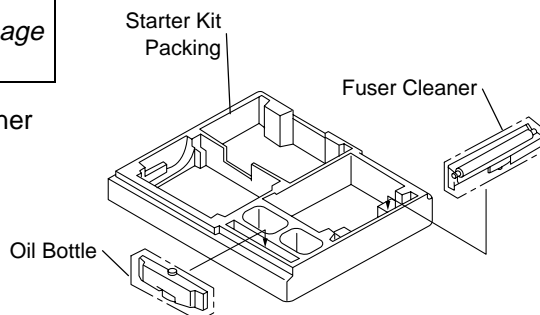

- 5) Remove the oil remaining in the fusing unit with the supplied syringe to avoid oil spill in the printer.


Note:

Re-install the fusing unit into the printer after cleaning the printer as instructed in the following section. For re-install of the fusing unit, see Section 6.6 'Packing'.

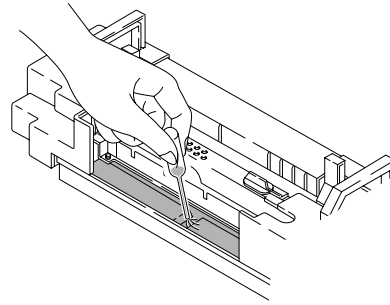


6.4 Waste Toner Pack

- 1) Remove the waste toner pack from the printer.

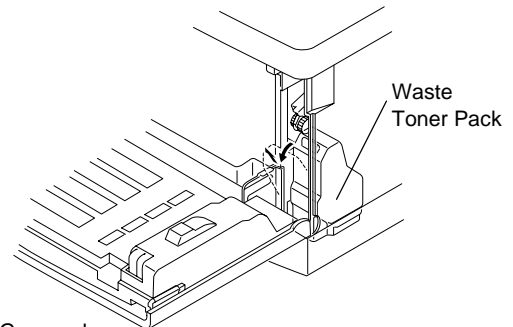



- 2) Clean toner around the pack and cover the hole of the waste toner pack firmly with gummed paper tape.
- 3) Put the waste toner pack into the polyethylene bag and seal it firmly.

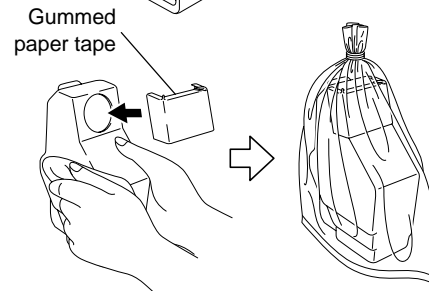

6.5 Cleaning


Clean the following areas with a vacuum cleaner to remove toner.

- 1) Around the waste toner pack / Waste toner feeder tube.
 - i) Remove the one screw of side cover (R) at the rear of the printer to remove the side cover (R).
 - ii) Vacuum toner from the exit of the waste toner feeder tube and around the waste toner pack holder.
 - iii) Cover the exit of the waste toner feeder tube with vinyl wrap.

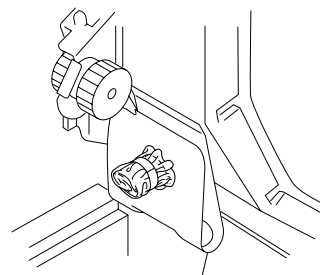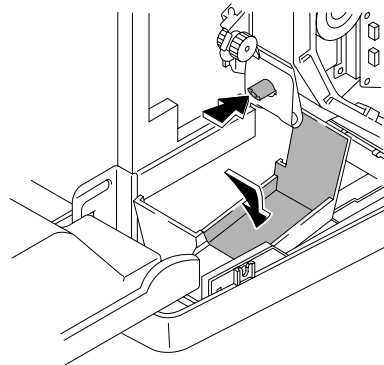


2) Drum cleaner

- i) Remove the cleaner cover by releasing the two hooks.
- ii) Holding the handle located on the top of the drum cleaner, push it backwards.
- iii) Remove the drum cleaner by lifting it out.

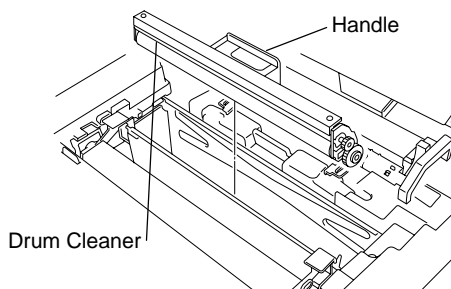

- iv) Clean the area where the drum cleaner is mounted with a vacuum cleaner and a cloth. (Refer to the figure as shown on the right.)

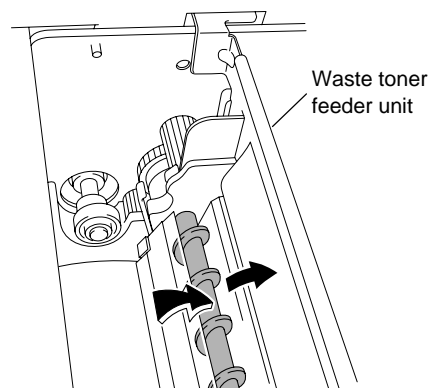


3) Inside the printer

- i) Remove the upper side cover, side cover (L), and upper cover from the printer.
- ii) Remove the control fan, and then remove the waste toner feeder unit.

- iii) Vacuum toner around the other side of the waste toner feeder tube and inside the printer. (Refer to the figure as shown on the right.)

- iv) Reassemble the waste toner feeder unit, control fan, upper cover, side cover (L), and upper side cover.

- v) Re-install the drum cleaner and cleaner cover.

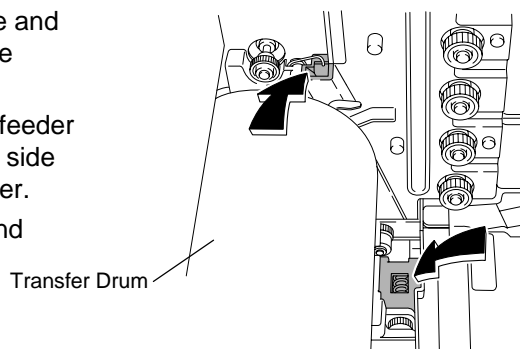


CAUTION

- Be sure not to damage the surface of the transfer drum with a vacuum cleaner when cleaning the areas around the transfer drum.
- Be sure not to contact the nozzle of the vacuum cleaner with the terminals of the interior. Failure to do so will cause damage to the electrical parts in the printer.
- It is recommended to ground the nozzle of the vacuum cleaner by using the earth wire.




4) Paper cassette

- i) Remove the paper cassette from the printer and remove paper from the cassette.
- ii) Vacuum paper dust in the paper cassette.
- iii) Reinstall the paper cassette.

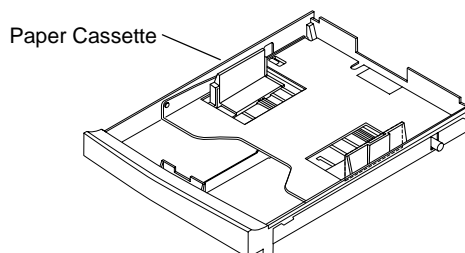


6.6 Packing

- 1) Re-install the fusing unit into the printer.
 - i) After setting the fusing unit in place, lightly press down the unit to firmly connect to the connector on the base.
 - ii) Tighten the securing screws while pressing down the fusing unit. Check the metal hook of the screw at the left hand secures the fusing unit correctly.
 - iii) Close the rear access cover and top cover.
- 2) Check the following items are packed in the starter kit packing;
Four toner cartridges (K, Y, M, C), OPC belt cartridge, Oil bottle, Fuser cleaner. (Refer to the figure as shown on the right.)
- 3) Put the printer into the polyethylene bag.
- 4) Pack the printer, the starter kit packing, the waste toner pack, and power cable in the carton using the original packing material.
- 5) Seal the outer carton firmly.

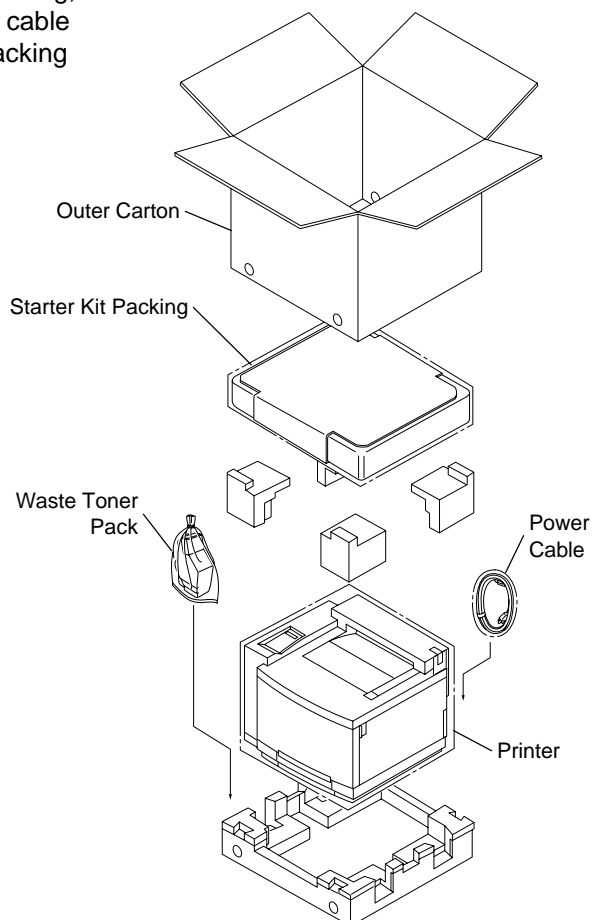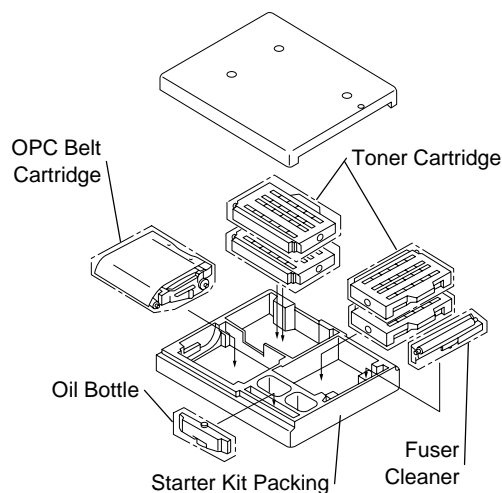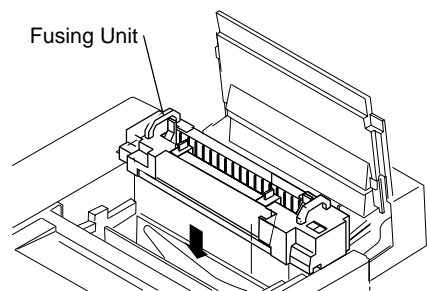

- 6) Fix the four joints, then band the carton with two plastic bands.

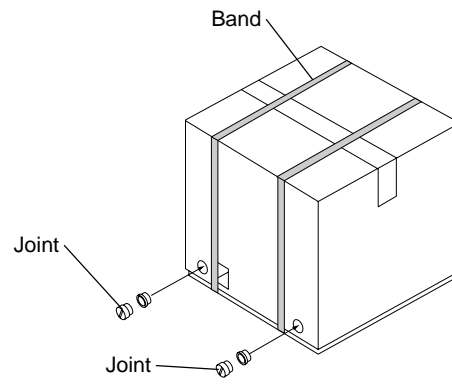

7. Hidden Function Menu

1. Hold down the  key and turn the printer ON

LINE TEST

- LCD TEST
- SWITCH TEST
- SENSOR TEST
- RAM SIZE
- TRAY 1 SETTING
- TRAY 2 SETTING
- PCMCIA 1 TEST
- PCMCIA 2 TEST
- MIO TEST
- exit to ONLINE

All LCD segments turned ON
Press switches to check operation on LCD

Shows installed RAM size
Shows current Tray 1 size
Shows current Tray 2 size if installed
Test PCMCIA card if installed (Flash card only, not ATA card)
Test PCMCIA card if installed (Flash card only, not ATA card)
Test MIO card if installed

DRAM CHECK START

- exit to ONLINE

DRAM test mode

NV-RAM CLEAR

- SURE? (SET/ELSE)
- exit to ONLINE

 


NV-RAM clear

ROM/RAM WAIT SET


- CARD/CART SEL
- WAIT LEVEL=4*
- exit to ONLINE


ROM/RAM wait setting
0 to 15


2. Hold down the following key combinations and turn the printer ON, keep the button(s) pressed until the display changes.

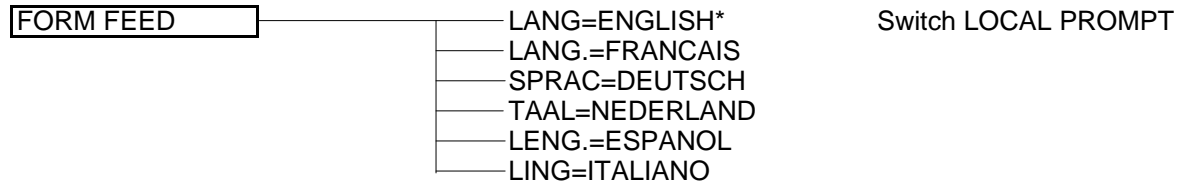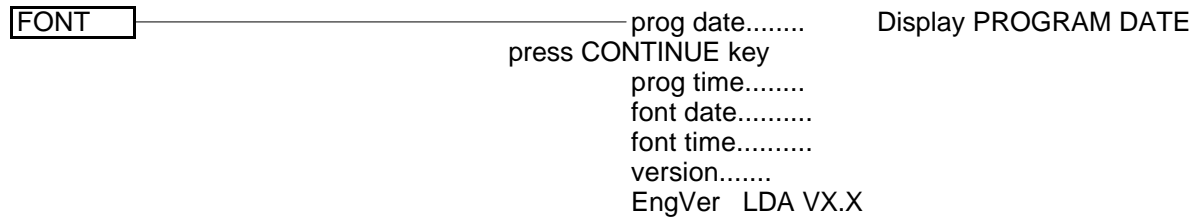



3. Go off-line and press the following keys simultaneously

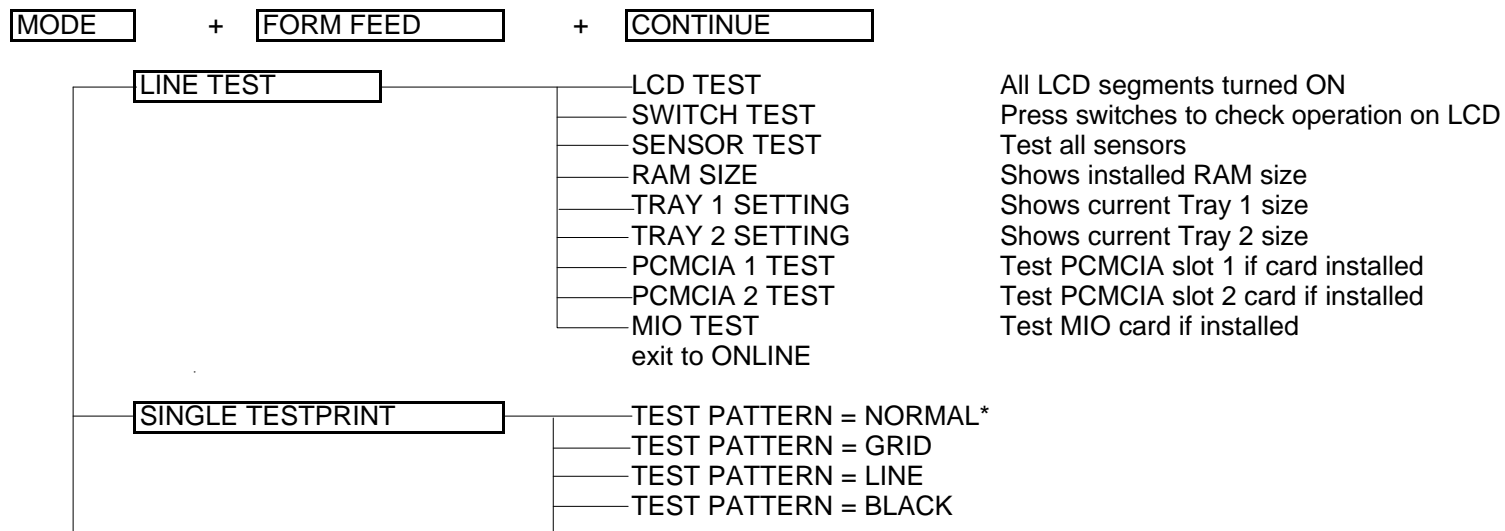


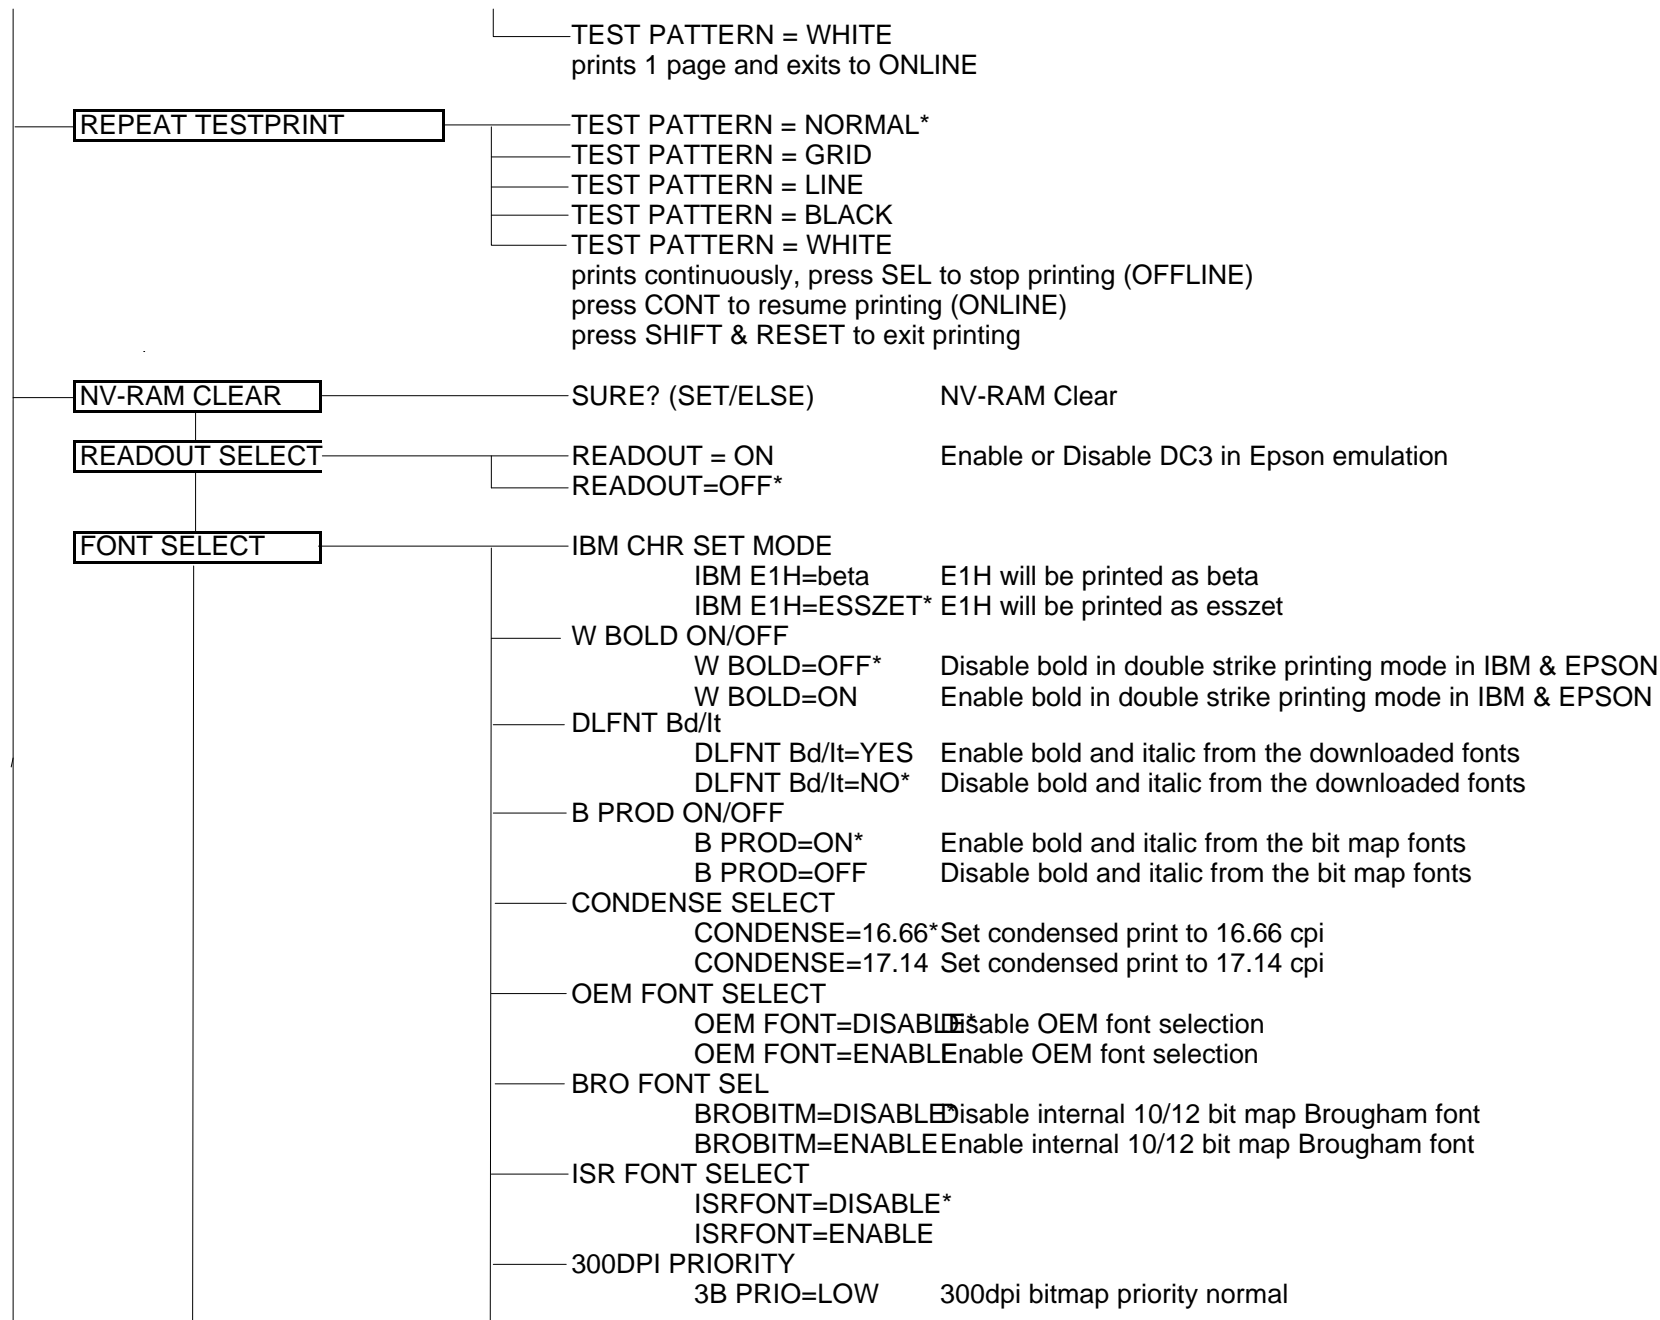

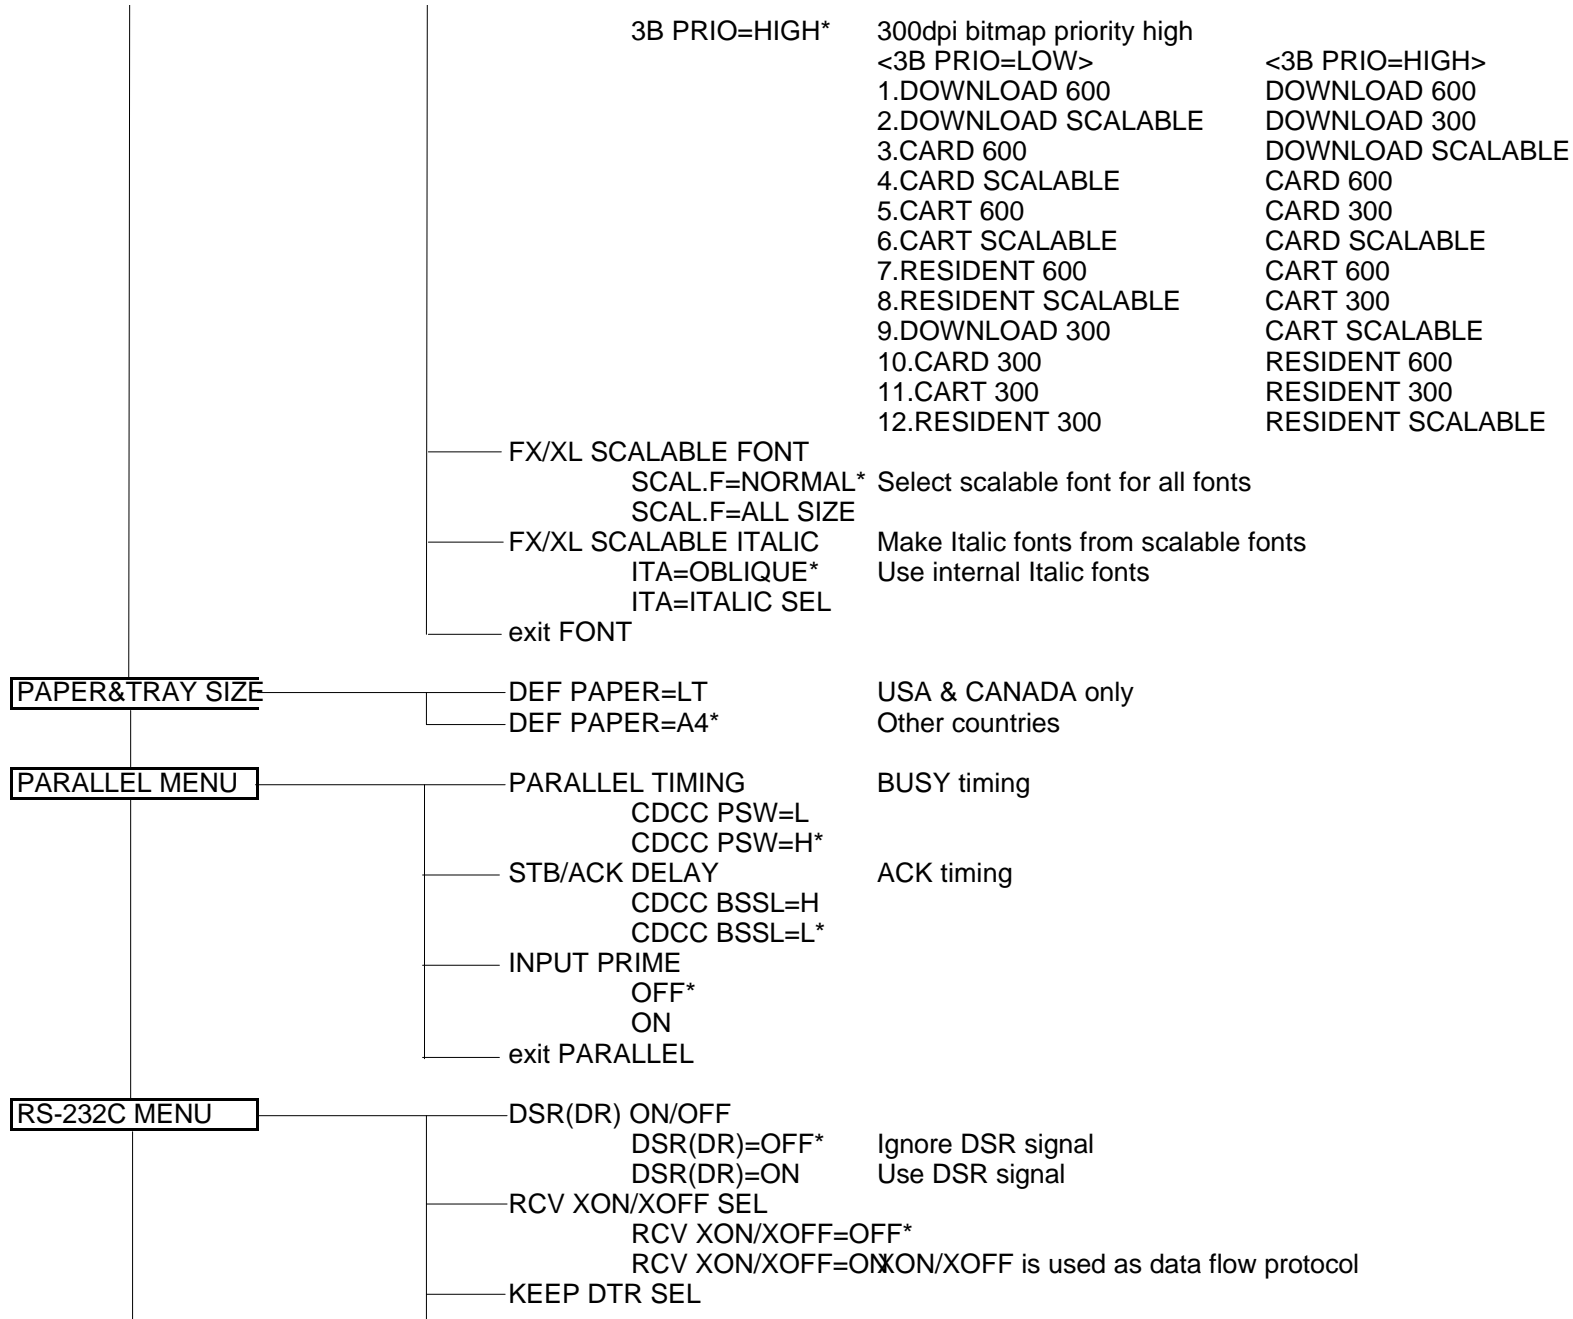

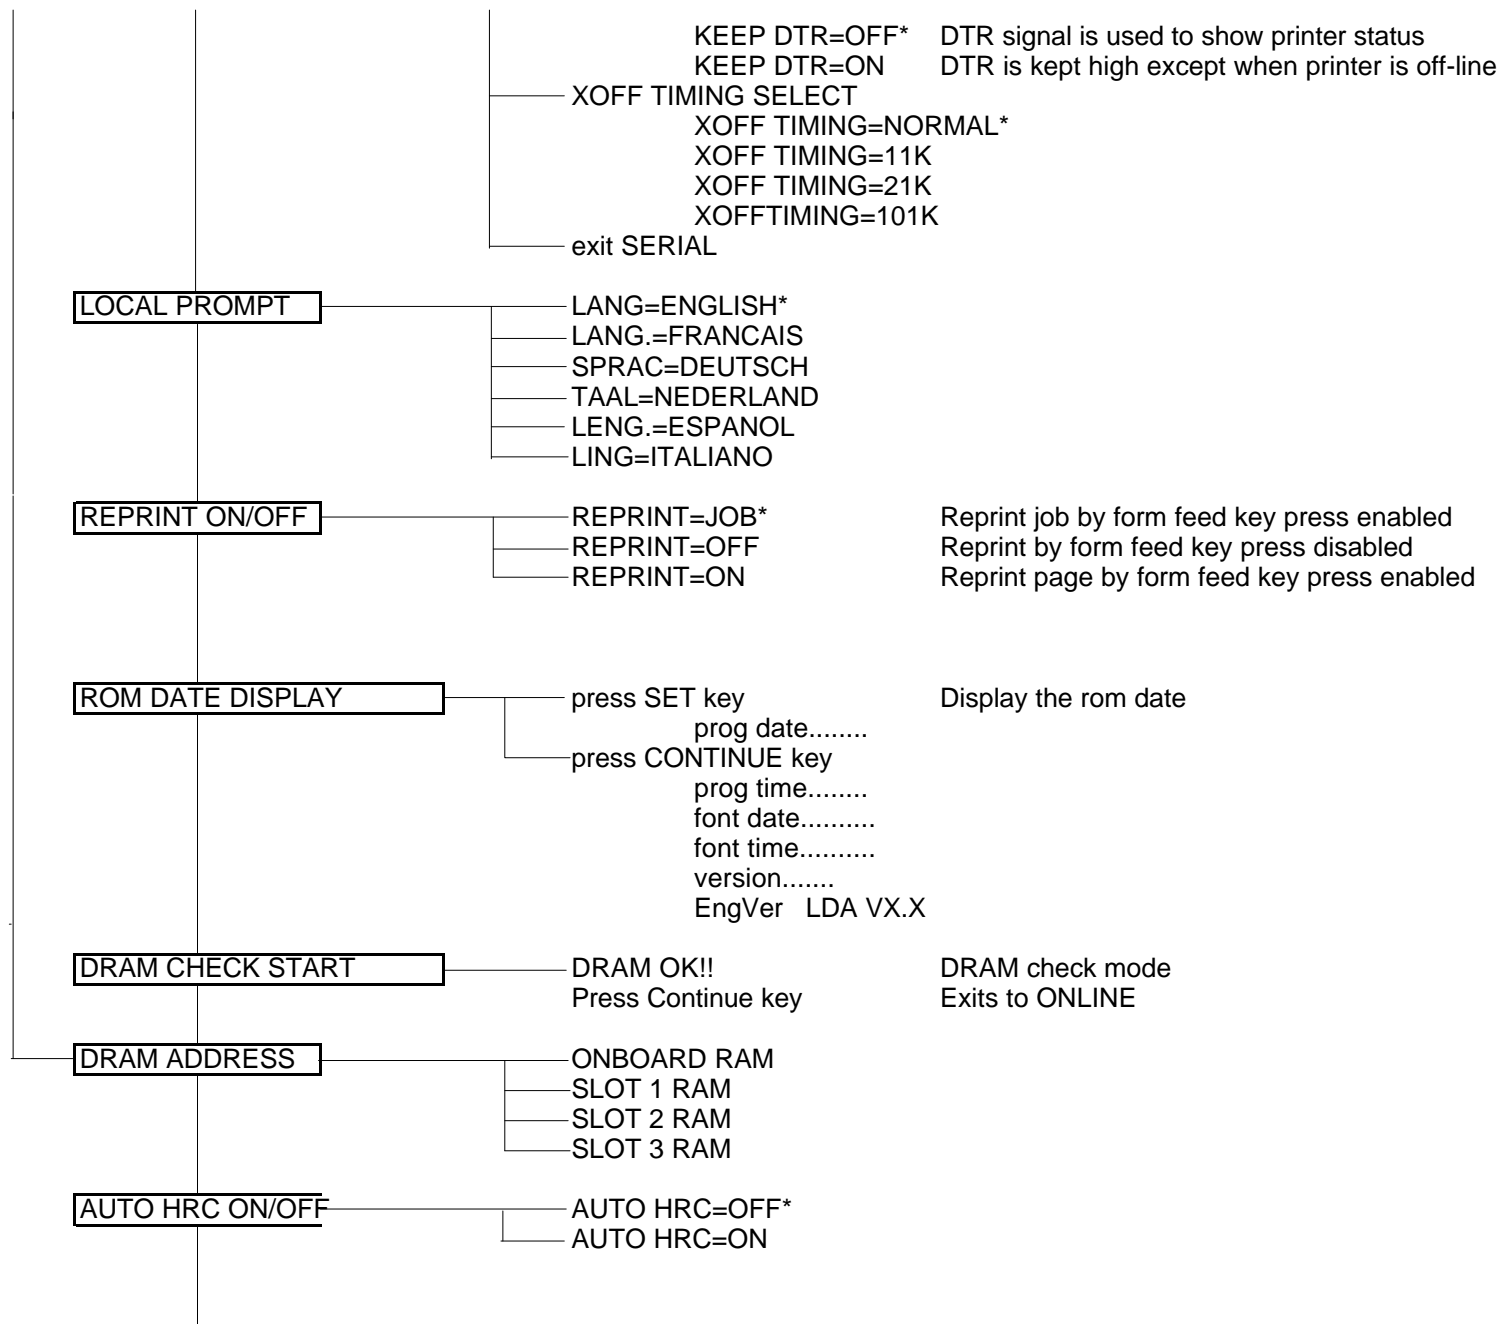

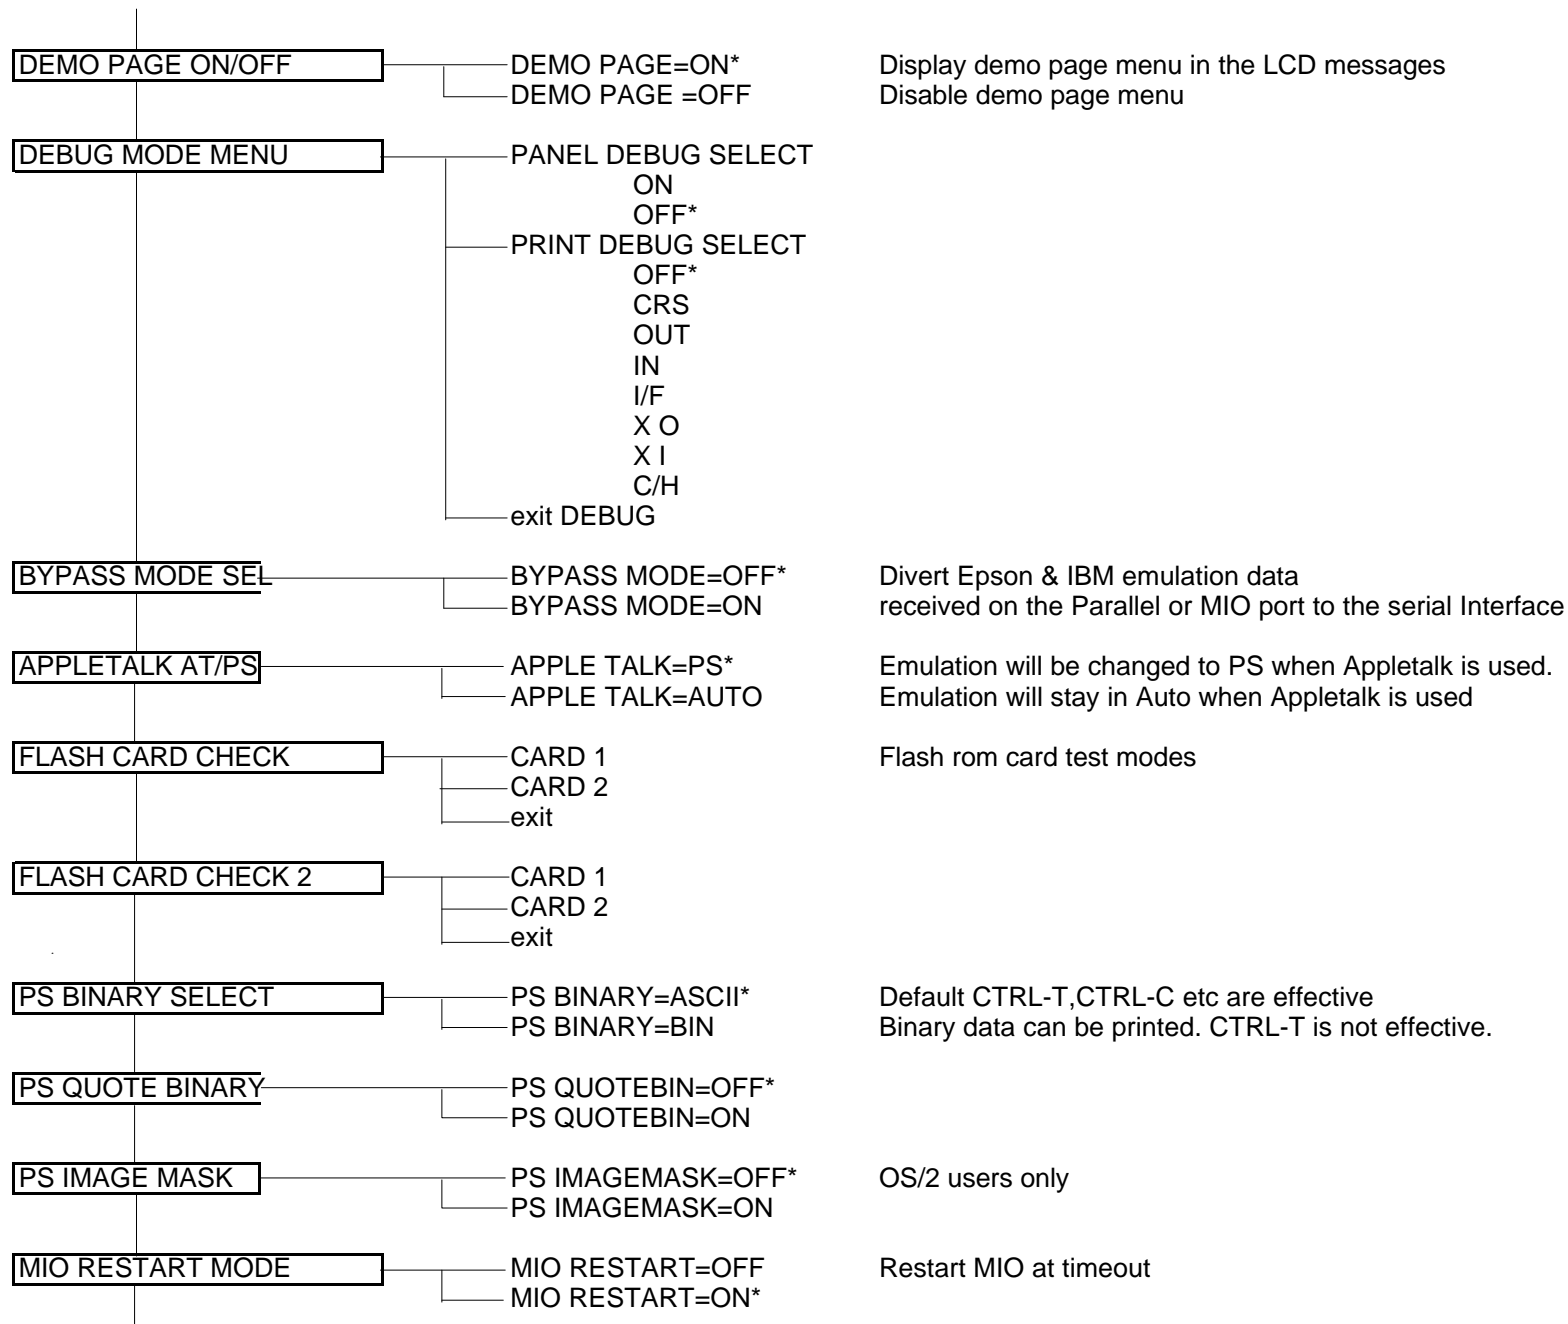


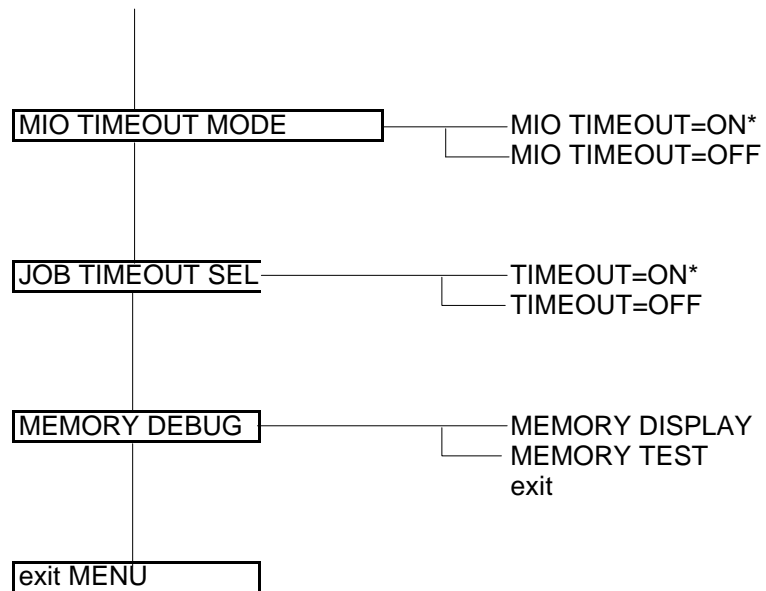

Exit the hidden function menu.

4) Go off-line and press the following keys simultaneously

CONT + SEL

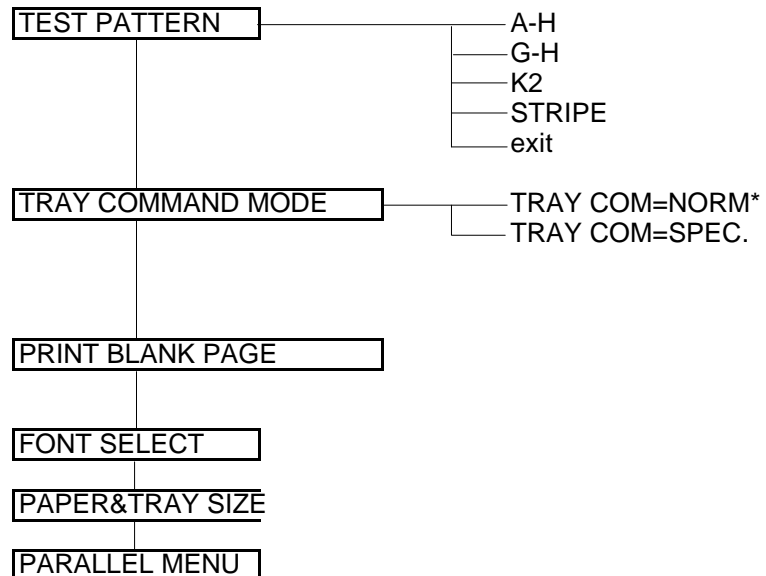



Test pattern print select

LJ4 compatible
LJ3 compatible

Prints 5 blank pages

ALL SETTINGS WITHOUT DESCRIPTIONS
ARE DESCRIBED PREVIOUSLY IN THE
DOCUMENT

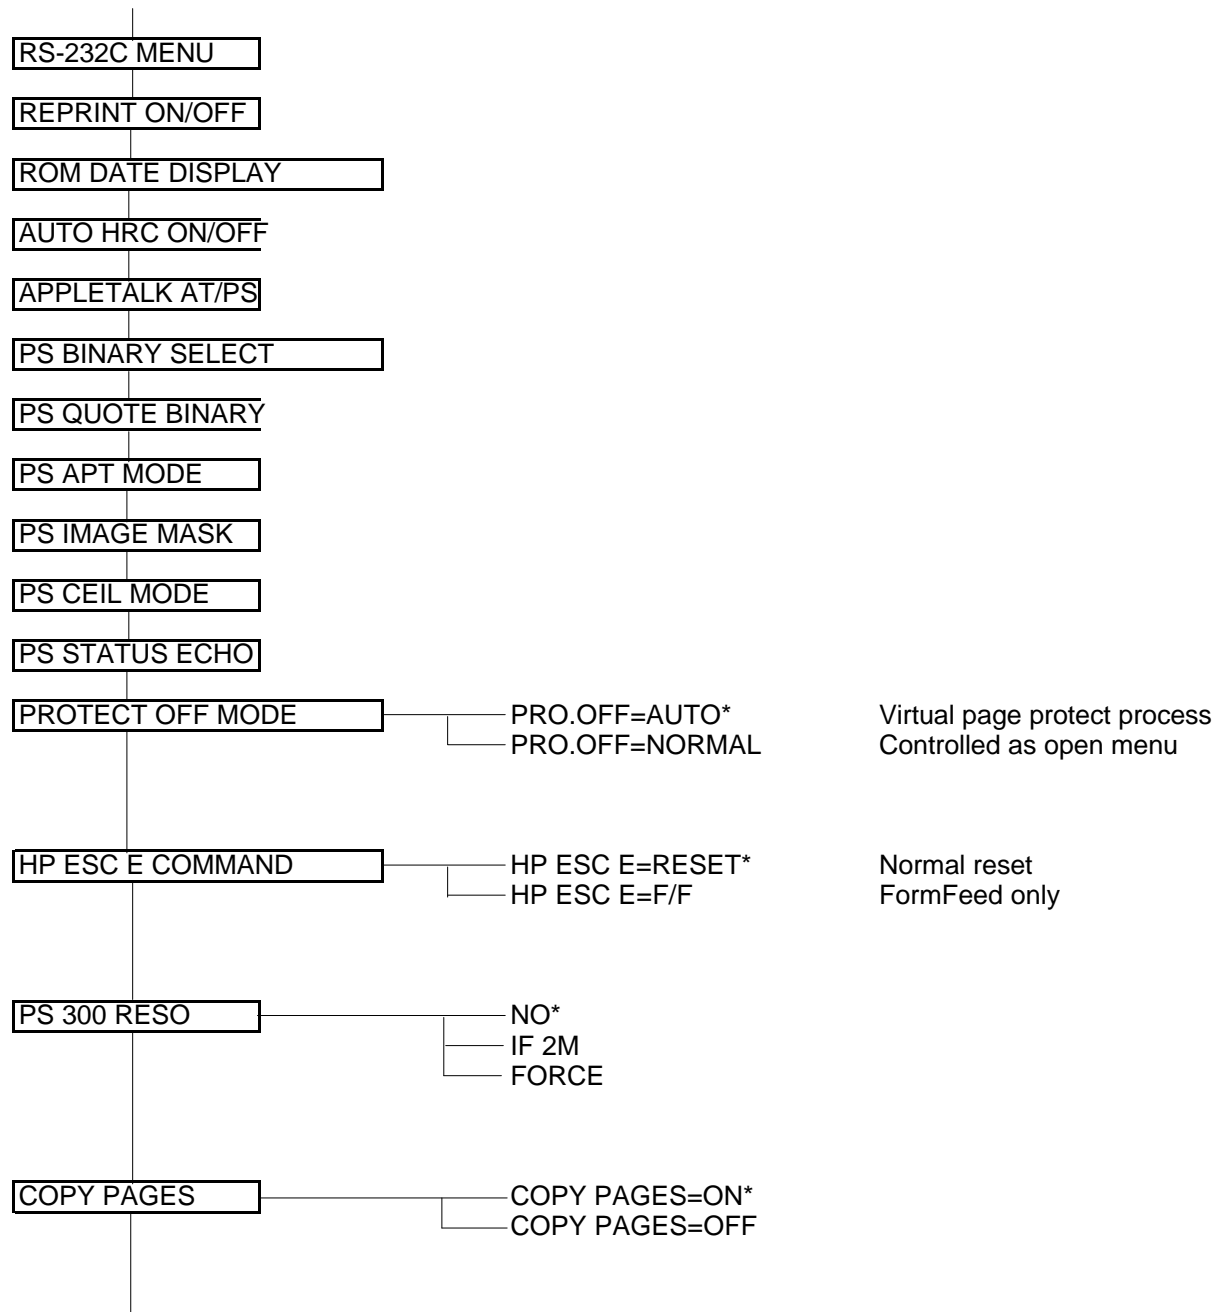

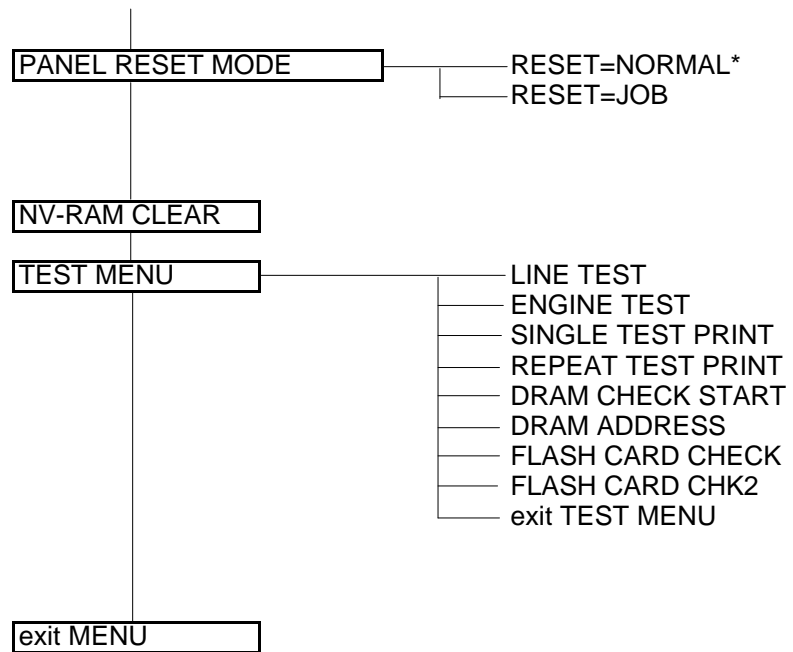


Exit the hidden function menu.

8. TO INSTALL THE PRINTER CORRECTLY


Please read the installation steps described below carefully.

If the printer is not installed correctly, image failures may occur or the life expectancy of the OPC belt cartridge may be shortened.


- 1) Turn ON the power switch of the printer.

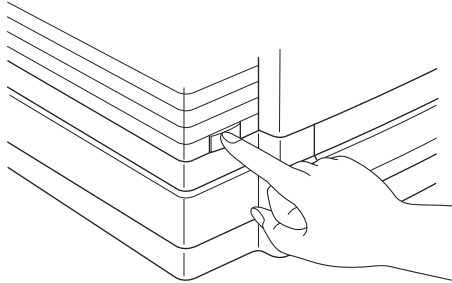

- 2) After the printer has initialized, open the front cover and then the top cover of the printer and pull up the OPC belt cartridge from the printer.

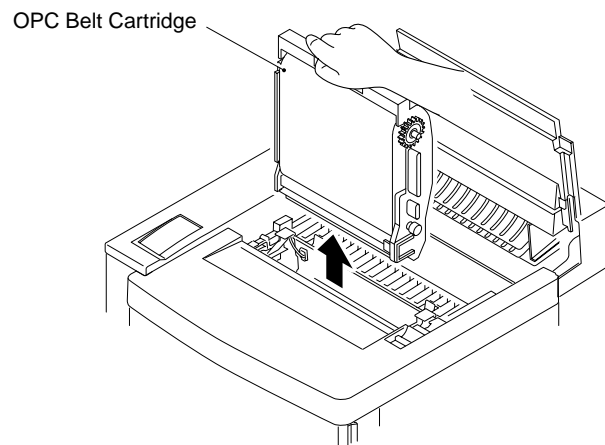

- 3) Measure the gap on the OPC belt cartridge shown in the figure below. If the gap is in the range of 5 ± 2 mm, the printer is installed correctly.

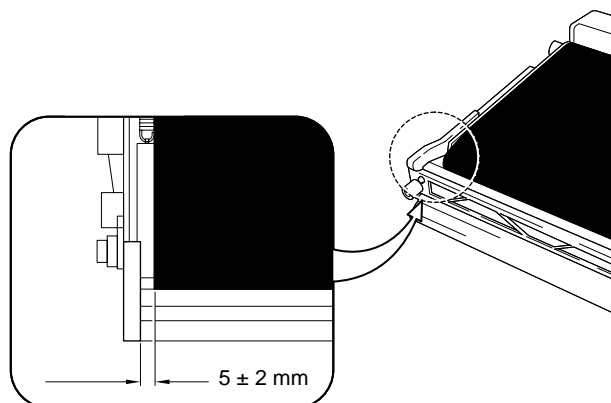


- 4) If the gap is NOT in the range of 5 ± 2 mm, check the following items;


Note:

If the printer is inclined at 1° as shown in the figures below, the printer is approximately 9mm out of level from one side to the other.


- i) Is the printer inclined because the table the printer is installed on is unlevel?

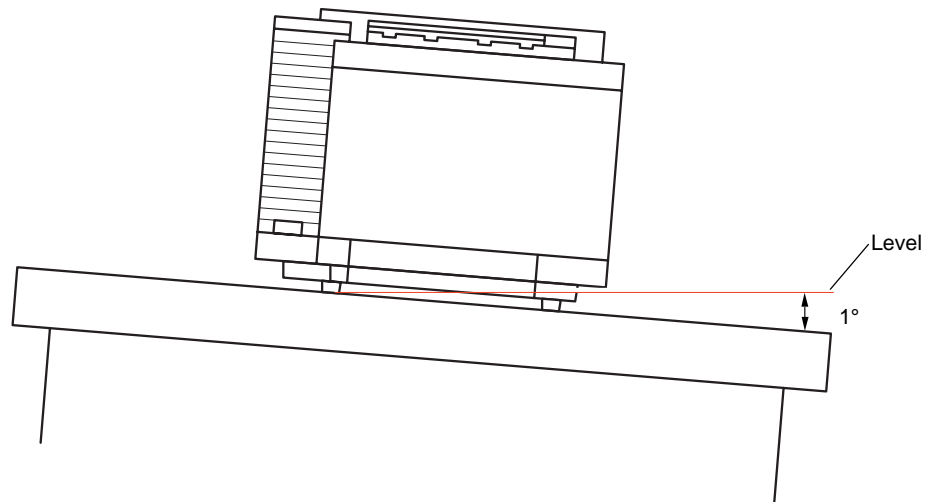


- ii) Is the printer inclined because the table surface the printer is installed on is not strong enough?

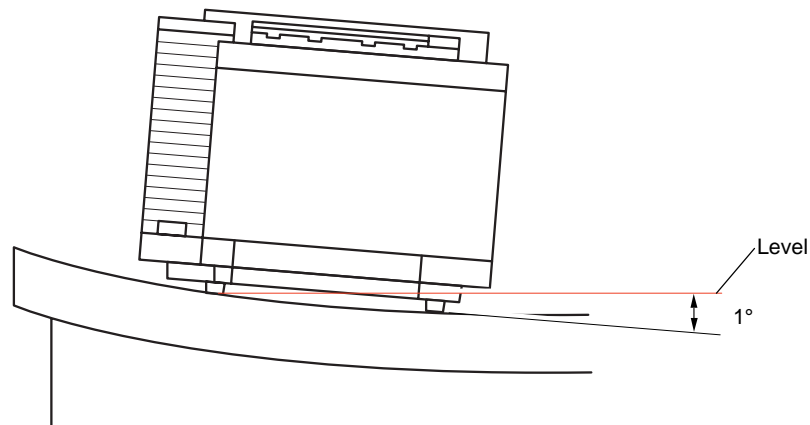

iii) Is the printer inclined because it is installed across two or more tables?

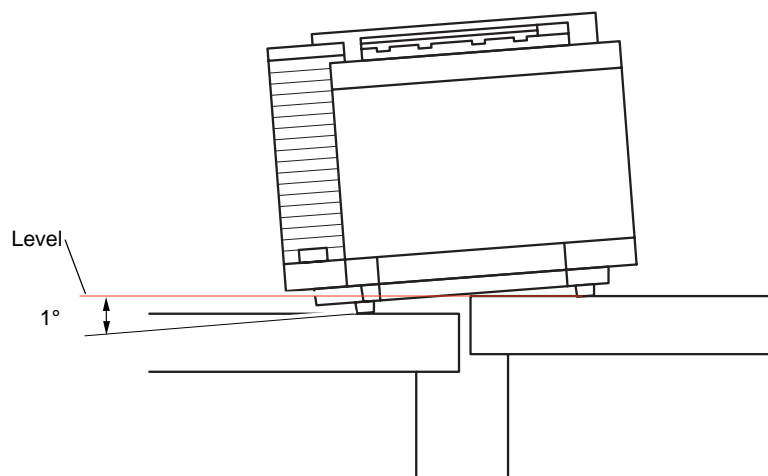

iv) Is there anything under the printer, or is there something stuck to the printer base?

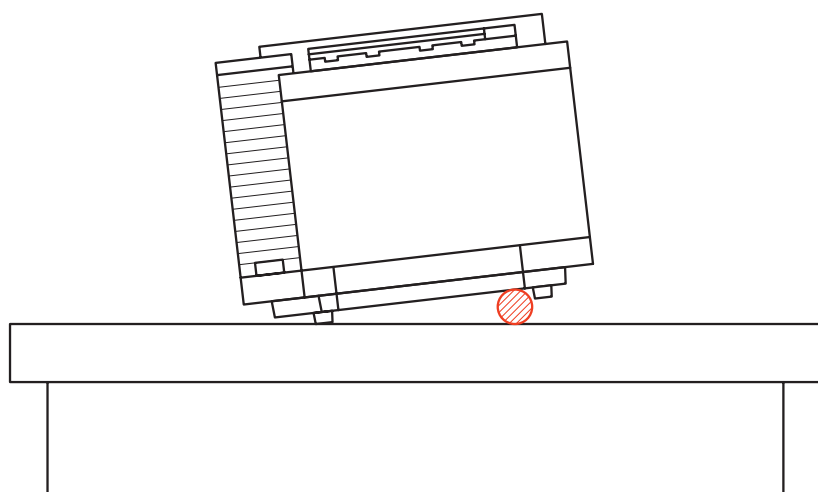

- 5) After checking these items, initialize the printer again (opening/closing the top cover automatically initializes the OPC belt cartridge), and measure the gap on the OPC belt cartridge again.


If the gap is in the range of 5 ± 2 mm, the printer is installed correctly. (Refer to the figure for Step 3.)

6) If the gap is NOT in the range of 5 ± 2 mm, follow the steps below;

- i) When the gap is more than 7 mm;
(the OPC belt has moved to the right.)

Place something 1 cm thick such as a book under the right hand side of the printer as shown in the figure on the right.


Initialize the printer again and then measure the gap on the OPC belt cartridge. If the gap is in the range of 5 ± 2 mm, the printer is installed correctly.

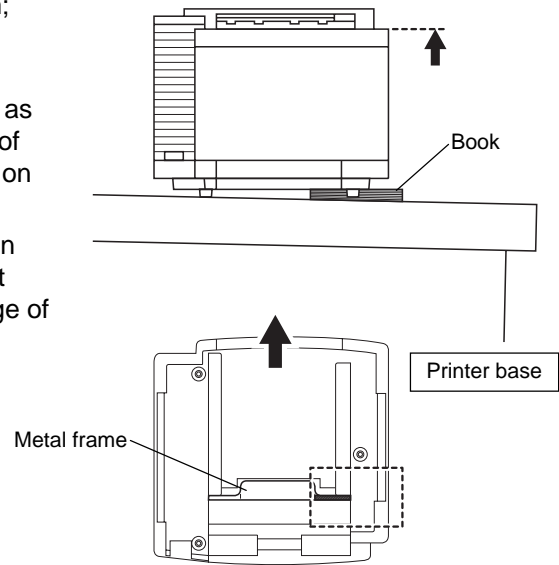

- ii) When the gap is less than 3 mm;
(the OPC belt has moved to the left.)

Place something 1 cm thick such as a book under the left hand side of the printer as shown in the figure on the right.

Initialize the printer again and then measure the gap on the OPC belt cartridge. If the gap is in the range of 5 ± 2 mm, the printer is installed correctly.

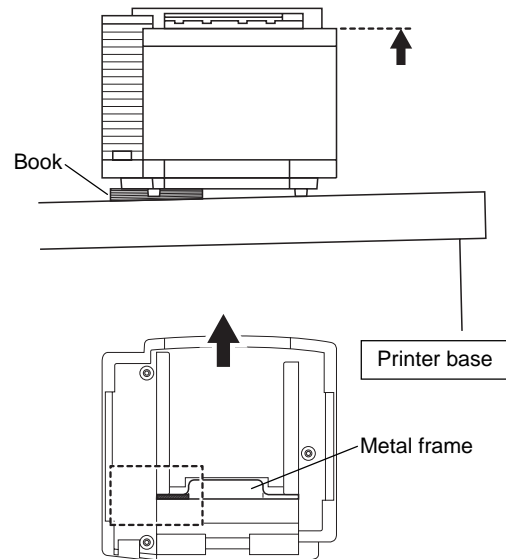

Note:

- Place the book or other object 1 cm thick under the printer metal frame as shown in the figures above. Even if the Lower Tray unit is installed onto the printer, the book should be positioned in the same position.
- If you have a spirit level, put it on the output tray and install the printer as level as possible referring to the level.
- The surface that the printer is placed on should have its level corrected properly.
- The temporary action with a 1 cm thick object should only be used to determine the correct leveling action required and should not be used as a permanent solution.

