

# Dell 2150cn **Service Manual**

Information in this document is subject to change without notice. 2010 Dell Inc. All rights reserved.				
Tgr tqf wevkqp'kp''cp{ "o cppgt''y j cwqgxgt''y ky qwi'y g''y tkwgp''r gto kuukqp''qh''F gm''Kpe(ku''untkevn(''hqtdkf f gp0 Vtcf go ctmu''wugf 'kp''y ku''yzvk'F gm''cpf ''y g'F GNN''nqi q''ctg''vtcf go ctmu''qh'F gm''Kpe0				
Qý gt'\tcf go ctmı'cpf '\tcf g'pco gu'o c $\{$ ''dg'\wugf '\kp''ý ku''f qewo gp\'\q'\tghgt'\q'\ý g''gp\k\kgu''encko kpi '\ý g''o ctmı''cpf pco gu''qh'\ý gkt''r tqf wew0''F gm'\kpe0'f kuencko u''cp $\{$ ''r tqr t\kg\ct $\{$ ''\kp\gtgu\'\kp'\\tcf go ctmı''cpf '\tcf g''pco gu''q\ý gt'\ý cp ku''qy p0				

### Version record

Refer to the portion indicated by change bar in each section.

Also refer to the reasons in table below.

Version	Issue date	Note
1 <sup>st</sup>	March 19, 2010	1 <sup>st</sup> issued
1.1st	April 30, 2010	Introduction - The content was reviewed. Chapter 1:Troubleshooting - The content was reviewed. Chapter 2:Operation of Diagnostic - The content was reviewed. Chapter 3:RRP - The content was reviewed. Chapter 4:Plug/Jack Connector Locations - The illustration was changed. Chapter 6:Principles of Operation - The content was reviewed. Chapter 8:Printer Specifications - The content was reviewed.
1.2st	May 19, 2010	<ul> <li>1.2st version issued</li> <li>Introduction <ul> <li>The content of "4.5.2 Caution label for toner cartridges" was updated.</li> </ul> </li> <li>Chapter 5: Parts List <ul> <li>Correction according to change of spare parts.</li> </ul> </li> </ul>
2nd	June 16, 2010	2nd version issued  Chapter 1:Troubleshooting

### **Cautions**

Operation contents of this document may be subject to modification without notice.

Dell Inc. will not assume responsibility for accidental or incidental damages resulting from technical or editorial errors or omissions in this manual, the issue of this manual, the execution of descriptions in this manual, or the use of this manual.

This document is protected by copyright. Do not photocopy or duplicate any part of this document in any form without written permission from Dell Inc.

#### 1. About this manual

This manual is a standard service manual of Dell Inc. containing information required for maintenance of this laser printer (standard specifications).

### 2. Marks giving caution

Maintenance operations requiring special cautions or additional information regarding descriptions in this manual are presented as "Warning," "Caution," or "Note," depending on their nature.



If instructions are not observed, death or serious injury may result.



If instructions are not observed, injuries to workers or physical damage to assets (including this laser printer) may result.



Essentials for procedures, steps, rules, and others.

Reference Incidental information to descriptions.

#### 3. Related documents

- Instruction manuals (standard manuals)

Describe the operation and handling of this laser printer.

- Performance specifications

Describe in detail various specifications of this laser printer.

(In the event of a discrepancy between this manual and the performance specifications, the performance specifications take precedence.)

- Spare parts list

Information on maintenance parts (spare parts) for this laser printer.

### 4. Safety

To prevent possible accidents during maintenance operation, you should observe strictly the "Warning" and "Caution" information in this manual.

Avoid dangerous operations and operations out of the scope of this manual.

Various processes not covered by this manual may be required in actual operations, and should be performed carefully, always giving attention to safety.

#### 4.1 Power source

Keep the power plug disconnected during the maintenance operation to prevent electric shock, burns and other damages.

If the power supply should be kept connected to measure voltage or for other similar reasons, take sufficient care to prevent electric shock, by following the procedures in this manual.




While the printer is on, never touch live parts if not required.



Power is supplied to the power switch / inlet even while the printer is off. Never touch its live components.



Do not touch live parts unless otherwise specified.

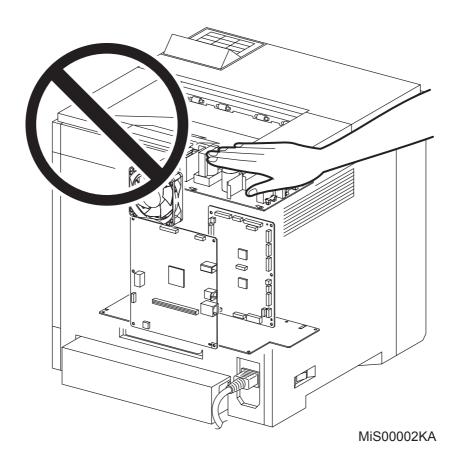

#### 4.2 Driving units

When servicing gears or other driving units, be sure to turn off the power switch and unplug the power cord. Drive them manually when required.



Do not do the print work removing the cover of the printer to confirm the operation of driving part.

#### 4.3 High-temperature units

When servicing high-temperature units (securing unit, etc.), be sure to turn them off to prevent burns, injuries and other troubles. Remove the power plug and start service processes after they have cooled down sufficiently.



Because high-temperature units are still hot after they complete an operation, wait at least 40 minutes before starting maintenance service.

#### 4.4 Laser beams




- If your eyes are exposed to laser beams, you may lose your eyesight.
- Never open the cover if the warning label for laser beams is attached there.
- Before disassembling and reassembling this laser printer, be sure to turn it OFF.
- When servicing this laser printer while it is running, be sure to follow the procedures specified in this manual.
- You should be well aware that the laser beams are capable of injuring you and other people near the printer.

NOTE

Laser beams have features as follows:

- Frequencies are smaller in width than other beams (sun and electric bulbs) and phases are uniform so that high monochromatic and convergence performance can be obtained and thin beams of light can reach places at a long distance.
- Being highly converged, the laser beams exert a heating action that may be harmful to human body.


Reference: The laser beams of this laser printer are invisible rays.

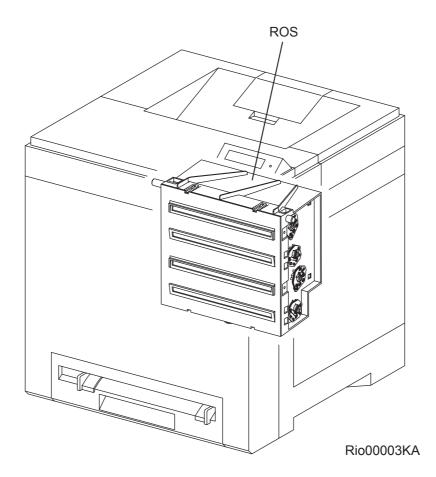

### 4.5 Warning/caution labels


Warning labels and caution labels are attached to this laser printer to prevent accidents. Check those labels for peeling or stains when servicing the printer.


#### 4.5.1 Caution label for high-temperature units

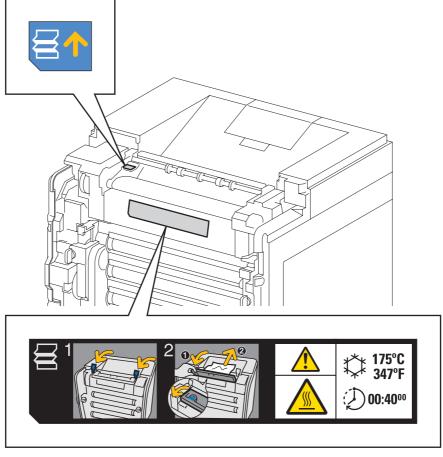


Rio00004KA

### 4.5.2 Caution label for toner cartridges

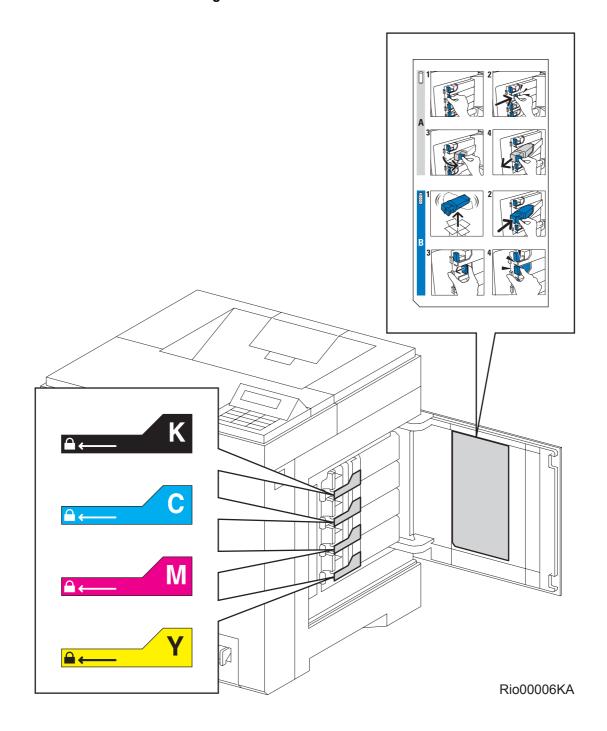

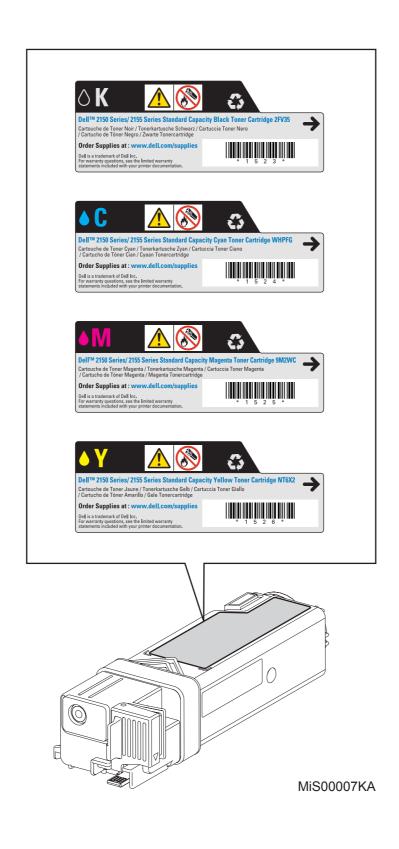


### 4.5.3 Caution label for SSI and tray

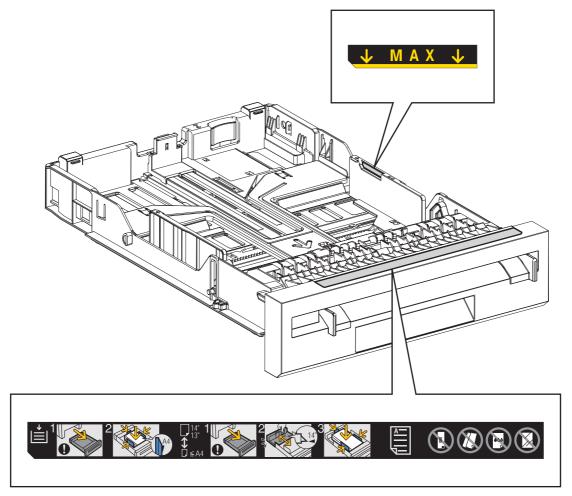



Rio00008KA

#### 4.5.4 Caution label for ROS

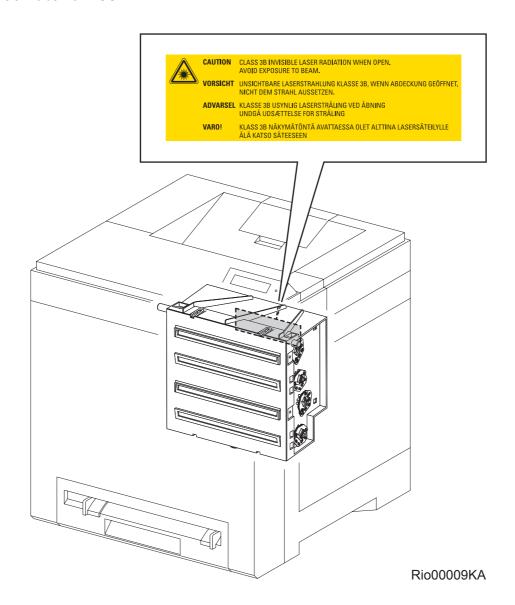


#### 4.5.5 Caution label for transfer belt and PHD unit

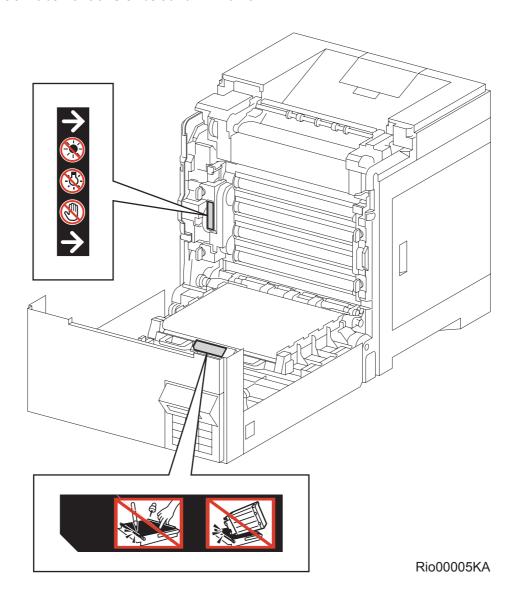

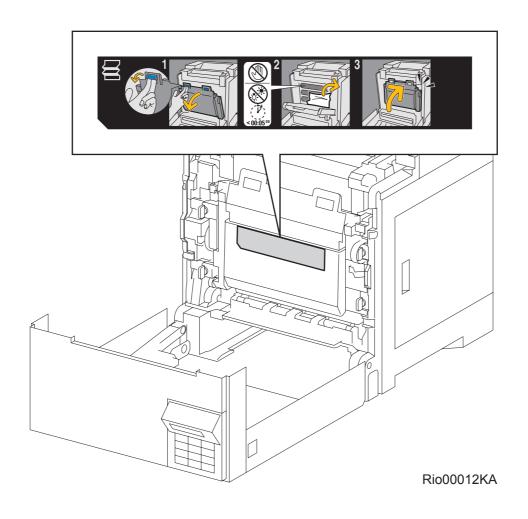

### 4.5.6 Caution label for duplex

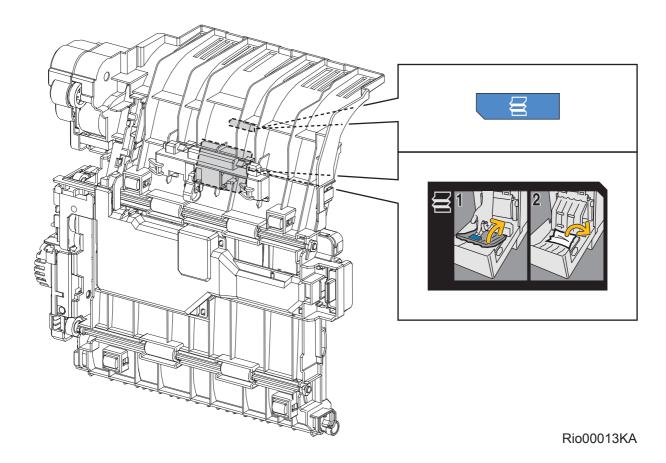


### Blank Page


## **Unpacking the Printer**



Take extreme care to avoid personal injuries.

Check the printer for evidence of any damages. Peel all tapes off the printer.

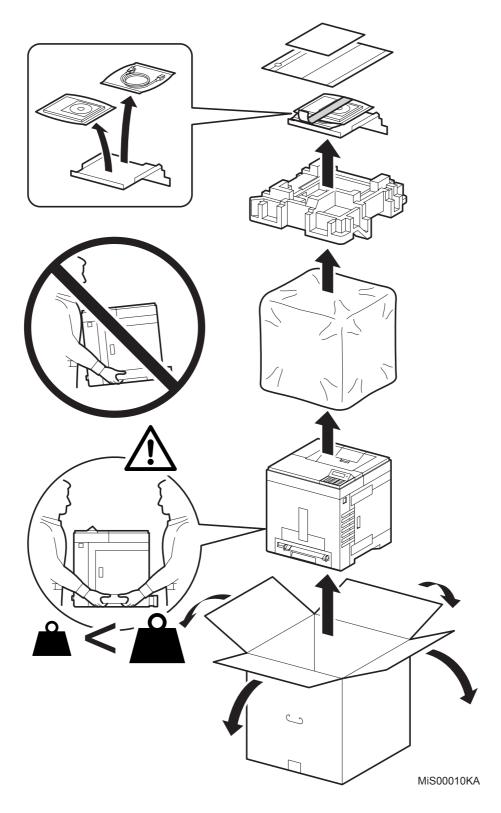

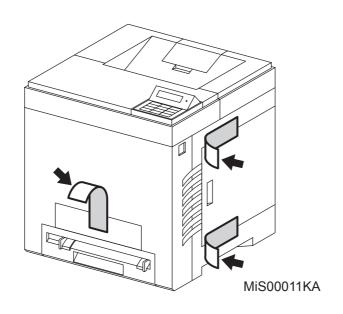

### TABLE OF CONTENTS

1. About this manual	ii
2. Marks giving caution	
3. Related documents	
4. Safety	
4.1 Power source	
4.2 Driving units	
4.3 High-temperature units	
4.4 Caser beams	
4.5.1 Caution label for high-temperature units	
4.5.2 Caution label for toner cartridges	
4.5.3 Caution label for SSI and tray	
4.5.4 Caution label for ROS	
4.5.5 Caution label for transfer belt and PHD unit	
4.5.6 Caution label for duplex	
Unpacking the Printer	
Chapter 1 Troubleshooting	1 - 1
Chapter 2 Operation of Diagnostic	2 - 1
Chapter 3 Removal and Replacement Procedures	3 - 1
Chapter 4 Plug/Jack(P/J) Connector Locations	4 - 1
Chapter 5 Parts List	5 - 1
Chapter 6 Principles of Operation	6 - 1
Chapter 7 Wiring Diagrams and Signal Information	7 - 1
Chapter 8 Printer Specifications	8 - 1