

# Order parts, accessories, and supplies

## Ordering

Order supplies and paper	<a href="http://www.hp.com/go/suresupply">www.hp.com/go/suresupply</a>
Order genuine HP parts or accessories	<a href="http://www.hp.com/buy/parts">www.hp.com/buy/parts</a>
	or
	<a href="http://partsurfer.hp.com">partsurfer.hp.com</a>
Order through service or support providers	Contact an HP-authorized service or support provider.
Order using the HP Embedded Web Server (EWS)	To access, in a supported web browser on your computer, enter the printer IP address or host name in the address/URL field. The EWS contains a link to the HP SureSupply website, which provides options for purchasing original HP supplies.

## Orderable parts

Not all of the parts shown in the diagrams in this chapter can be ordered. Refer to the table following the diagram or the parts lists at the end of this chapter to determine if a part is orderable.

## Supplies

Following are the part numbers for the supplies available for the printers.

**Table 2-1** Supplies

Item	Description	Cartridge number	Part number
<b>Supplies</b>			
HP 30A Black LaserJet Toner Cartridge	Standard-capacity replacement black toner cartridge	30A	CF230A (new) CF230-67901 (service)
HP 30X Black LaserJet Toner Cartridge	High-capacity replacement black toner cartridge	30x	CF230X (new) CF230-67902 (service)
HP 31A Black LaserJet Toner Cartridge	Extra high-capacity replacement black toner cartridge	31A	CF231A (new) CF231-67901 (service)
HP 32A Original LaserJet Imaging Drum	Imaging drum	32A	CF232A (new) CF232-67901 (service)

## Customer self-repair parts

Customer Self-Repair (CSR) parts are available for many HP LaserJet printers to reduce repair time. More information about the CSR program and benefits can be found at [www.hp.com/go/csr-support](http://www.hp.com/go/csr-support) and [www.hp.com/go/csr-faq](http://www.hp.com/go/csr-faq).


Genuine HP replacement parts can be ordered at [www.hp.com/buy/parts](http://www.hp.com/buy/parts) or by contacting an HP-authorized service or support provider. When ordering, one of the following will be needed: part number, serial number (found on back of printer), printer number, or printer name.


- Parts listed as **Mandatory** self-replacement are to be installed by customers, unless you are willing to pay HP service personnel to perform the repair. For these parts, on-site or return-to-depot support is not provided under the HP printer warranty.
- Parts listed as **Optional** self-replacement can be installed by HP service personnel at your request for no additional charge during the printer warranty period.

Item	Description	Self-replacement options	Part number
Pickup roller	Replacement pickup roller with instruction guide	Mandatory	RL1-2593-000CN
Sheet plate assembly (MFP printers only)	Replacement sheet plate assembly (MFP) with instruction guide	Mandatory	RM2-1185-000CN

## How to use the parts lists and diagrams

The figures in this chapter show the major subassemblies in the printer and their component parts. A parts list table follows each exploded view assembly diagram. Each table lists the item number, the associated part number, and the description of each part. If a part is not listed in the table, then it is not a field replacement unit (FRU).

 **CAUTION:** Be sure to order the correct part. When looking for part numbers for electrical components, pay careful attention to the voltage that is listed in the description column. Doing so will ensure that the part number selected is for the correct model.

 **NOTE:** In this manual, the abbreviation “PCA” stands for “printed circuit-board assembly.” Components described as a PCA might consist of a single circuit board or a circuit board plus other parts, such as cables and sensors.

**Table 2-2 4-in-1 scanner assembly**

Ref	Description	Part number	Qty
1	Automatic document feeder (M227)	RM2-1179-000CN	1
1	Automatic document feeder (M230)	RM2-1664-000CN	1
2	4-in-1 scanner assembly	RM2-6989-000CN	1
3	Sheet plate assembly	RM2-1185-000CN	1
4	Cover, document feeder top	RM2-1180-000CN	1
5	Pre-pick arm assembly	RM2-1187-000CN	1
6	Input tray, document feeder (M227)	RM2-1181-000CN	1
6	Input tray, document feeder (M230)	RM2-1665-000CN	1
7	Core assembly, ADF	RM2-1184-000CN	1
8	ADF base	RM2-1183-000CN	1

**Table 2-3** 3-in-1 scanner assembly

Ref	Description	Part number	Qty
1	Lid, 3-in-1 scanner assembly	RM2-6982-000CN	1
2	3-in-1 scanner assembly	RM2-6983-000CN	1

**Table 2-4 Covers (SFP models)**

Ref	Description	Part number	Qty
1	Cover, multipurpose (SFP)	RL2-5015-000CN	1
2	Door, duplexing assembly (SFP)	RM2-0809-000CN	1
3	Cover, right (SFP)	RC4-8058-000CN	1
4	Cover, left (SFP)	RL2-2925-000CN	1
5	Door, cartridge (M203; SFP)	RL2-5011-000CN	1
5	Door, cartridge (M206; SFP)	RL2-5018-000CN	1
6	Cover, front assembly (SFP)	RM2-0816-000CN	1
7	Cover, front top assembly (network model) (M203; SFP)	RM2-0822-000CN	1
7	Cover, front top assembly (wireless model) (M203; SFP)	RM2-0823-000CN	1
7	Cover, front top assembly (no LED) (M203; SFP)	RM2-2082-000CN	1
7	Cover, front top assembly (network model) (M206; SFP)	RM2-2083-000CN	1
7	Cover, front top assembly (no LED) (M206; SFP)	RM2-2084-000CN	1
8	Cover, top rear (SFP)	RC4-8057-000CN	1
9	Guide, feed front (SFP)	RC4-7985-000CN	1
10	Button, switch (SFP)	RL2-1664-000CN	1
11	Switch, power PCA (SFP)	RM2-8273-000CN	1
12	Control panel assembly (non—wireless model) (M203; SFP)	RM2-0824-000CN	1
12	Control panel assembly (wireless model) (M203; SFP)	RM2-0825-000CN	1
12	Control panel assembly (M206; SFP)	RM2-2085-000CN	1
14	Cover, front (no power switch) (SFP)	RC4-8059-000CN	1

**Table 2-5 Covers (MFP models)**

Ref	Description	Part number	Qty
1	Cover, multipurpose (MFP)	RL2-5015-000CN	1
2	Door, duplexing assembly (MFP)	RM2-0809-000CN	1
3	Cover, right (MFP)	RC4-8067-000CN	1
4	Cover, left (MFP)	RC4-8070-000CN	1
5	Door, cartridge (MFP)	RL2-5012-000CN	1
6	Cover, front (wireless model; USB port) (MFP)	RM2-0827-000CN	1
6	Cover, front (except wireless model; no USB port) (MFP)	RM2-0826-000CN	1
7	Cover, top front assembly (wireless model) (MFP)	RM2-0834-000CN	1
7	Cover, top front assembly (except wireless model) (MFP)	RM2-2087-000CN	1
8	Cover, top (MFP)	RL2-2927-000CN	1
9	Cover, USB (MFP) USB models	RC4-8021-000CN	1
9	Cover, USB (MFP) USB/LAN models	RC4-8020-000CN	1
9	Cover, USB (MFP) USB/LAN/FAX models	RC4-8019-000CN	1
10	Cover, cable (MFP)	RC5-0436-000CN	1
11	Cap, FAX	RC5-0437-000CN	1
12	Frame, control panel (adaptor) (M227d/sdn/fdn, M230sdn)	RC4-8125-000CN	1
13	Cover, frame (MFP)	RC5-3760-000CN	1
14	Button, switch (MFP)	RL2-1661-000CN	1
15	Switch, power PCA (MFP)	RM2-8273-000CN	1
16	Cover, front (no power switch) (MFP)	RC4-8068-000CN	1
18	Hinge assembly (MFP)	RM2-1182-000CN	1
19	Guide, feed front (MFP)	RC4-7985-000CN	1
Not shown	Control panel, 2-Line LCD (M227d/sdn; MFP)	G3Q74-60101	
Not shown	Control panel, 2-Line LCD (M230sdn; MFP)	G3Q76-60101	1
Not shown	Control panel, 2-Line LCD (M230fdn; MFP)	G3Q79-60102	1
Not shown	Control panel, touchscreen (M227fdw, M230fdw; MFP)	G3Q74-60103	1

**Table 2-6 Internal components, printer base (1 of 3; SFP)<sup>1</sup>**

Ref	Description	Part number	Qty
1	Cable, flat flexible (SFP)	RK2-8416-000CN	1
2	Cable, flat flexible (SFP)	RK2-8522-000CN	1
3	Low-voltage power supply (LVPS) (110-127V) (SFP)	RM2-0837-000CN	1
3	Low-voltage power supply (LVPS) (220-240V; China) (SFP)	RM2-0839-000CN	1
3	Low-voltage power supply (LVPS) (220-240V; except China) (SFP)	RM2-0838-000CN	1
4	Cable, flat flexible (SFP)	RK2-8510-000CN	1
5	Cable, flat flexible (SFP)	RK2-8513-000CN	1
6	Engine control unit (ECU) PCA (SFP)	RM2-8334-000CN	1
7	Holder, Wi-Fi PCA (SFP)	RC4-7851-000CN	1
Not shown	Formatter assembly (base model; SFP)	G3Q47-60001	1
Not shown	Formatter assembly (wireless model; SFP)	G3Q50-60001	1
Not shown	Wi-Fi PCA (SFP)	0960-3662	1

<sup>1</sup> Some assemblies are common between the SFP printers and the MFP printers. Make sure that the correct part number is used to order assemblies.

**Table 2-7 Internal components, printer base (2 of 3; SFP)<sup>1</sup>**

Ref	Description	Part number	Qty
3	Roller, paper pickup (SFP)	RL1-2593-000CN	1
4	Pad, separation holder assembly (SFP)	RM2-0812-000CN	1
5	Sensor, environmental PCA (SFP)	RM2-8376-000CN	1
6	Transfer assembly (SFP)	RM2-0843-000CN	1
7	Fixing (fuser) assembly (110-120V) (SFP)	RM2-0805-000CN	1
7	Fixing (fuser) assembly (220-240V) (SFP)	RM2-0806-000CN	1
8	Fixing (fuser) film assembly (110-120V) (SFP)	RM2-0814-000CN	1
8	Fixing (fuser) film assembly (220-240V) (SFP)	RM2-0815-000CN	1
9	Sensor, delivery PCA (SFP)	RM2-8378-000CN	1
10	Roller, transfer (SFP)	RM2-1660-000CN	1
11	Laser scanner assembly (SFP)	RM2-6911-000CN	1
12	Motor PCA (SFP)	RM2-8351-000CN	1
13	Paper pickup sensor PCA assembly (SFP)	RM2-8377-000CN	1

<sup>1</sup> Some assemblies are common between the SFP printers and the MFP printers. Make sure that the correct part number is used to order assemblies.



**Table 2-8** Internal components, printer base (3 of 3; SFP)<sup>1</sup>

Ref	Description	Part number	Qty
1	Fan (SFP)	RK2-1378-000CN	1
2	Solenoid (SFP)	RK2-7601-000CN	1
4	Duplex paper feed assembly (SFP)	RM2-2086-000CN	1
5	Guide, end (SFP)	RL2-5016-000CN	1

<sup>1</sup> Some assemblies are common between the SFP printers and the MFP printers. Make sure that the correct part number is used to order assemblies.

**Table 2-9 Internal components, printer base (1 of 3; MFP)<sup>1</sup>**

Ref	Description	Part number	Qty
1	Cable, flat flexible (MFP)	RK2-8419-000CN	1
2	Cable, flat flexible (USB/LAN/FAX model) (MFP)	RK2-8440-000CN	1
3	Low-voltage power supply (LVPS) (110-127V) (MFP)	RM2-0840-000CN	1
3	Low-voltage power supply (LVPS) (220-240V; China) (MFP)	RM2-0842-000CN	1
3	Low-voltage power supply (LVPS) (220-240V; except China) (MFP)	RM2-0841-000CN	1
4	Cable, flat flexible (MFP)	RK2-8510-000CN	1
5	Cable, flat flexible (MFP)	RK2-8513-000CN	1
6	Engine control unit (ECU) PCA (MFP)	RM2-8334-000CN	1
8	Holder, Wi-Fi PCA (MFP)	RC5-0500-000CN	1
Not shown	Formatter assembly (without Fax; MFP)	G3Q74-60001	1
Not shown	Formatter assembly (with Fax; MFP)	G3Q75-60001	1
Not shown	Wi-Fi board (wireless models only; MFP)	0960-3662	1
Not shown	Fax board (WW) (fax models only; MFP)	G3Q60-60001	1
Not shown	Fax board (EU) (fax models only; MFP)	G3Q61-60001	1
Not shown	PCA, front USB	CF368-60001	1
Not shown	NFC module	BK493-60001	1

<sup>1</sup> Some assemblies are common between the SFP printers and the MFP printers. Make sure that the correct part number is used to order assemblies.

**Table 2-10** Internal components, printer base (2 of 3; MFP)<sup>1</sup>

Ref	Description	Part number	Qty
3	Roller, paper pickup (MFP)	RL1-2593-000CN	1
4	Pad, separation holder assembly (MFP)	RM2-0812-000CN	1
5	Sensor, environmental PCA (MFP)	RM2-8376-000CN	1
6	Transfer assembly (MFP)	RM2-0843-000CN	1
7	Fixing (fuser) assembly (110-120V) (MFP)	RM2-0805-000CN	1
7	Fixing (fuser) assembly (220-240V) (MFP)	RM2-0806-000CN	1
8	Fixing (fuser) film assembly (110-120V) (MFP)	RM2-0814-000CN	1
8	Fixing (fuser) film assembly (220-240V) (MFP)	RM2-0815-000CN	1
9	Sensor, delivery PCA (MFP)	RM2-8378-000CN	1
10	Roller, transfer (MFP)	RM2-1660-000CN	1
11	Laser scanner assembly (MFP)	RM2-6911-000CN	1
12	Motor PCA (MFP)	RM2-8351-000CN	1
13	Paper pickup sensor PCA assembly (MFP)	RM2-8377-0000CN	1

<sup>1</sup> Some assemblies are common between the SFP printers and the MFP printers. Make sure that the correct part number is used to order assemblies.

**Table 2-11** Internal components, printer base (3 of 3; MFP)<sup>1</sup>

Ref	Description	Part number	Qty
1	Fan (MFP)	RK2-1378-000CN	1
2	Solenoid (MFP)	RK2-7601-000CN	1
4	Duplex paper feed assembly (MFP)	RM2-2086-000CN	1
7	Guide, end (MFP)	RL2-5016-000CN	1

<sup>1</sup> Some assemblies are common between the SFP printers and the MFP printers. Make sure that the correct part number is used to order assemblies.

# Alphabetical parts list

**Table 2-12 Alphabetical parts list**

Description	Part number	Table and page
3-in-1 scanner assembly	RM2-6983-000CN	<a href="#">3-in-1 scanner assembly on page 1183</a>
4-in-1 scanner assembly	RM2-6989-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
ADF base	RM2-1183-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Automatic document feeder (M227)	RM2-1179-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Automatic document feeder (M230)	RM2-1664-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Button, switch (MFP)	RL2-1661-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Button, switch (SFP)	RL2-1664-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cable, flat flexible (MFP)	RK2-8419-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Cable, flat flexible (MFP)	RK2-8510-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Cable, flat flexible (MFP)	RK2-8513-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Cable, flat flexible (SFP)	RK2-8416-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Cable, flat flexible (SFP)	RK2-8522-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Cable, flat flexible (SFP)	RK2-8510-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Cable, flat flexible (SFP)	RK2-8513-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Cable, flat flexible (USB/LAN/FAX model) (MFP)	RK2-8440-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Cap, FAX	RC5-0437-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Control panel assembly (M206; SFP)	RM2-2085-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Control panel assembly (non—wireless model) (M203; SFP)	RM2-0824-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Control panel assembly (wireless model) (M203; SFP)	RM2-0825-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Control panel, 2-Line LCD (M227d/sdn; MFP)	G3Q74-60101	<a href="#">Covers (MFP models) on page 1187</a>

**Table 2-12 Alphabetical parts list (continued)**

Description	Part number	Table and page
Control panel, 2-Line LCD (M230fdn; MFP)	G3Q79-60102	<a href="#">Covers (MFP models) on page 1187</a>
Control panel, 2-Line LCD (M230sdn; MFP)	G3Q76-60101	<a href="#">Covers (MFP models) on page 1187</a>
Control panel, touchscreen (M227fdw, M230fdw; MFP)	G3Q74-60103	<a href="#">Covers (MFP models) on page 1187</a>
Core assembly, ADF	RM2-1184-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Cover, cable (MFP)	RC5-0436-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, document feeder top	RM2-1180-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Cover, frame (MFP)	RC5-3760-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, front (except wireless model; no USB port) (MFP)	RM2-0826-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, front (no power switch) (MFP)	RC4-8068-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, front (no power switch) (SFP)	RC4-8059-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, front (wireless model; USB port) (MFP)	RM2-0827-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, front assembly (SFP)	RM2-0816-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, front top assembly (network model) (M203; SFP)	RM2-0822-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, front top assembly (network model) (M206; SFP)	RM2-2083-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, front top assembly (no LED) (M203; SFP)	RM2-2082-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, front top assembly (no LED) (M206; SFP)	RM2-2084-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, front top assembly (wireless model) (M203; SFP)	RM2-0823-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, left (MFP)	RC4-8070-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, left (SFP)	RL2-2925-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, multipurpose (MFP)	RL2-5015-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, multipurpose (SFP)	RL2-5015-000CN	<a href="#">Covers (SFP models) on page 1185</a>

**Table 2-12 Alphabetical parts list (continued)**

Description	Part number	Table and page
Cover, right (MFP)	RC4-8067-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, right (SFP)	RC4-8058-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, top (MFP)	RL2-2927-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, top front assembly (except wireless model) (MFP)	RM2-2087-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, top front assembly (wireless model) (MFP)	RM2-0834-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, top rear (SFP)	RC4-8057-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Cover, USB (MFP) USB models	RC4-8021-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, USB (MFP) USB/LAN models	RC4-8020-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Cover, USB (MFP) USB/LAN/FAX models	RC4-8019-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Door, cartridge (M203; SFP)	RL2-5011-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Door, cartridge (M206; SFP)	RL2-5018-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Door, cartridge (MFP)	RL2-5012-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Door, duplexing assembly (MFP)	RM2-0809-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Door, duplexing assembly (SFP)	RM2-0809-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Duplex paper feed assembly (MFP)	RM2-2086-000CN	<a href="#">Internal components, printer base (3 of 3; MFP)<sup>1</sup> on page 1199</a>
Duplex paper feed assembly (SFP)	RM2-2086-000CN	<a href="#">Internal components, printer base (3 of 3; SFP)<sup>1</sup> on page 1193</a>
Engine control unit (ECU) PCA (MFP)	RM2-8334-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Engine control unit (ECU) PCA (SFP)	RM2-8334-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Fan (MFP)	RK2-1378-000CN	<a href="#">Internal components, printer base (3 of 3; MFP)<sup>1</sup> on page 1199</a>
Fan (SFP)	RK2-1378-000CN	<a href="#">Internal components, printer base (3 of 3; SFP)<sup>1</sup> on page 1193</a>
Fax board (EU) (fax models only; MFP)	G3Q61-60001	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>

**Table 2-12 Alphabetical parts list (continued)**

Description	Part number	Table and page
Fax board (WW) (fax models only; MFP)	G3Q60-60001	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Fixing (fuser) assembly (110-120V) (MFP)	RM2-0805-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Fixing (fuser) assembly (110-120V) (SFP)	RM2-0805-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Fixing (fuser) assembly (220-240V) (MFP)	RM2-0806-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Fixing (fuser) assembly (220-240V) (SFP)	RM2-0806-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Fixing (fuser) film assembly (110-120V) (MFP)	RM2-0814-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Fixing (fuser) film assembly (110-120V) (SFP)	RM2-0814-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Fixing (fuser) film assembly (220-240V) (MFP)	RM2-0815-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Fixing (fuser) film assembly (220-240V) (SFP)	RM2-0815-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Formatter assembly (base model; SFP)	G3Q47-60001	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Formatter assembly (wireless model; SFP)	G3Q50-60001	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Formatter assembly (with Fax; MFP)	G3Q75-60001	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Formatter assembly (without Fax; MFP)	G3Q74-60001	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Frame, control panel (adaptor) (M227d/sdn/fdn, M230sdn)	RC4-8125-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Guide, end (MFP)	RL2-5016-000CN	<a href="#">Internal components, printer base (3 of 3; MFP)<sup>1</sup> on page 1199</a>
Guide, end (SFP)	RL2-5016-000CN	<a href="#">Internal components, printer base (3 of 3; SFP)<sup>1</sup> on page 1193</a>
Guide, feed front (MFP)	RC4-7985-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Guide, feed front (SFP)	RC4-7985-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Hinge assembly (MFP)	RM2-1182-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Holder, Wi-Fi PCA (MFP)	RC5-0500-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Holder, Wi-Fi PCA (SFP)	RC4-7851-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>



**Table 2-12 Alphabetical parts list (continued)**

Description	Part number	Table and page
Input tray, document feeder (M227)	RM2-1181-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Input tray, document feeder (M230)	RM2-1665-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Laser scanner assembly (MFP)	RM2-6911-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Laser scanner assembly (SFP)	RM2-6911-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Lid, 3-in-1 scanner assembly	RM2-6982-000CN	<a href="#">3-in-1 scanner assembly on page 1183</a>
Low-voltage power supply (LVPS) (110-127V) (MFP)	RM2-0840-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Low-voltage power supply (LVPS) (110-127V) (SFP)	RM2-0837-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Low-voltage power supply (LVPS) (220-240V; China) (MFP)	RM2-0842-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Low-voltage power supply (LVPS) (220-240V; China) (SFP)	RM2-0839-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Low-voltage power supply (LVPS) (220-240V; except China) (MFP)	RM2-0841-000CN	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Low-voltage power supply (LVPS) (220-240V; except China) (SFP)	RM2-0838-000CN	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
Motor PCA (MFP)	RM2-8351-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Motor PCA (SFP)	RM2-8351-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
NFC module	BK493-60001	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Pad, separation holder assembly (MFP)	RM2-0812-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Pad, separation holder assembly (SFP)	RM2-0812-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Paper pickup sensor PCA assembly (MFP)	RM2-8377-0000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Paper pickup sensor PCA assembly (SFP)	RM2-8377-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
PCA, front USB	CF368-60001	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Pre-pick arm assembly	RM2-1187-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Roller, paper pickup (MFP)	RL1-2593-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>

**Table 2-12 Alphabetical parts list (continued)**

Description	Part number	Table and page
Roller, paper pickup (SFP)	RL1-2593-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Roller, transfer (MFP)	RM2-1660-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Roller, transfer (SFP)	RM2-1660-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Sensor, delivery PCA (MFP)	RM2-8378-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Sensor, delivery PCA (SFP)	RM2-8378-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Sensor, environmental PCA (MFP)	RM2-8376-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Sensor, environmental PCA (SFP)	RM2-8376-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Sheet plate assembly	RM2-1185-000CN	<a href="#">4-in-1 scanner assembly on page 1181</a>
Solenoid (MFP)	RK2-7601-000CN	<a href="#">Internal components, printer base (3 of 3; MFP)<sup>1</sup> on page 1199</a>
Solenoid (SFP)	RK2-7601-000CN	<a href="#">Internal components, printer base (3 of 3; SFP)<sup>1</sup> on page 1193</a>
Switch, power PCA (MFP)	RM2-8273-000CN	<a href="#">Covers (MFP models) on page 1187</a>
Switch, power PCA (SFP)	RM2-8273-000CN	<a href="#">Covers (SFP models) on page 1185</a>
Transfer assembly (MFP)	RM2-0843-000CN	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
Transfer assembly (SFP)	RM2-0843-000CN	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
Wi-Fi board (wireless models only; MFP)	0960-3662	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
Wi-Fi PCA (SFP)	0960-3662	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>

# Numerical parts list

**Table 2-13 Numerical parts list**

Part number	Description	Table and page
0960-3662	Wi-Fi PCA (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
0960-3662	Wi-Fi board (wireless models only; MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
BK493-60001	NFC module	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
CF368-60001	PCA, front USB	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
G3Q47-60001	Formatter assembly (base model; SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
G3Q50-60001	Formatter assembly (wireless model; SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
G3Q60-60001	Fax board (WW) (fax models only; MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
G3Q61-60001	Fax board (EU) (fax models only; MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
G3Q74-60001	Formatter assembly (without Fax; MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
G3Q74-60101	Control panel, 2-Line LCD (M227d/sdn; MFP)	<a href="#">Covers (MFP models) on page 1187</a>
G3Q74-60103	Control panel, touchscreen (M227fdw, M230fdw; MFP)	<a href="#">Covers (MFP models) on page 1187</a>
G3Q75-60001	Formatter assembly (with Fax; MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
G3Q76-60101	Control panel, 2-Line LCD (M230sdn; MFP)	<a href="#">Covers (MFP models) on page 1187</a>
G3Q79-60102	Control panel, 2-Line LCD (M230fdn; MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RC4-7851-000CN	Holder, Wi-Fi PCA (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
RC4-7985-000CN	Guide, feed front (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RC4-7985-000CN	Guide, feed front (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RC4-8019-000CN	Cover, USB (MFP) USB/LAN/FAX models	<a href="#">Covers (MFP models) on page 1187</a>
RC4-8020-000CN	Cover, USB (MFP) USB/LAN models	<a href="#">Covers (MFP models) on page 1187</a>
RC4-8021-000CN	Cover, USB (MFP) USB models	<a href="#">Covers (MFP models) on page 1187</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RC4-8057-000CN	Cover, top rear (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RC4-8058-000CN	Cover, right (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RC4-8059-000CN	Cover, front (no power switch) (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RC4-8067-000CN	Cover, right (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RC4-8068-000CN	Cover, front (no power switch) (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RC4-8070-000CN	Cover, left (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RC4-8125-000CN	Frame, control panel (adaptor) (M227d/sdn/fdn, M230sdn)	<a href="#">Covers (MFP models) on page 1187</a>
RC5-0436-000CN	Cover, cable (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RC5-0437-000CN	Cap, FAX	<a href="#">Covers (MFP models) on page 1187</a>
RC5-0500-000CN	Holder, Wi-Fi PCA (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RC5-3760-000CN	Cover, frame (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RK2-1378-000CN	Fan (SFP)	<a href="#">Internal components, printer base (3 of 3; SFP)<sup>1</sup> on page 1193</a>
RK2-1378-000CN	Fan (MFP)	<a href="#">Internal components, printer base (3 of 3; MFP)<sup>1</sup> on page 1199</a>
RK2-7601-000CN	Solenoid (SFP)	<a href="#">Internal components, printer base (3 of 3; SFP)<sup>1</sup> on page 1193</a>
RK2-7601-000CN	Solenoid (MFP)	<a href="#">Internal components, printer base (3 of 3; MFP)<sup>1</sup> on page 1199</a>
RK2-8416-000CN	Cable, flat flexible (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
RK2-8419-000CN	Cable, flat flexible (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RK2-8440-000CN	Cable, flat flexible (USB/LAN/FAX model) (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RK2-8510-000CN	Cable, flat flexible (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
RK2-8510-000CN	Cable, flat flexible (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RK2-8513-000CN	Cable, flat flexible (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RK2-8513-000CN	Cable, flat flexible (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RK2-8522-000CN	Cable, flat flexible (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
RL1-2593-000CN	Roller, paper pickup (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RL1-2593-000CN	Roller, paper pickup (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RL2-1661-000CN	Button, switch (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RL2-1664-000CN	Button, switch (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RL2-2925-000CN	Cover, left (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RL2-2927-000CN	Cover, top (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RL2-5011-000CN	Door, cartridge (M203; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RL2-5012-000CN	Door, cartridge (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RL2-5015-000CN	Cover, multipurpose (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RL2-5015-000CN	Cover, multipurpose (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RL2-5016-000CN	Guide, end (SFP)	<a href="#">Internal components, printer base (3 of 3; SFP)<sup>1</sup> on page 1193</a>
RL2-5016-000CN	Guide, end (MFP)	<a href="#">Internal components, printer base (3 of 3; MFP)<sup>1</sup> on page 1199</a>
RL2-5018-000CN	Door, cartridge (M206; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-0805-000CN	Fixing (fuser) assembly (110-120V) (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-0805-000CN	Fixing (fuser) assembly (110-120V) (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-0806-000CN	Fixing (fuser) assembly (220-240V) (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-0806-000CN	Fixing (fuser) assembly (220-240V) (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-0809-000CN	Door, duplexing assembly (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-0809-000CN	Door, duplexing assembly (MFP)	<a href="#">Covers (MFP models) on page 1187</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-0812-000CN	Pad, separation holder assembly (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-0812-000CN	Pad, separation holder assembly (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-0814-000CN	Fixing (fuser) film assembly (110–120V) (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-0814-000CN	Fixing (fuser) film assembly (110–120V) (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-0815-000CN	Fixing (fuser) film assembly (220–240V) (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-0815-000CN	Fixing (fuser) film assembly (220–240V) (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-0816-000CN	Cover, front assembly (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-0822-000CN	Cover, front top assembly (network model) (M203; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-0823-000CN	Cover, front top assembly (wireless model) (M203; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-0824-000CN	Control panel assembly (non—wireless model) (M203; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-0825-000CN	Control panel assembly (wireless model) (M203; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-0826-000CN	Cover, front (except wireless model; no USB port) (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RM2-0827-000CN	Cover, front (wireless model; USB port) (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RM2-0834-000CN	Cover, top front assembly (wireless model) (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RM2-0837-000CN	Low-voltage power supply (LVPS) (110–127V) (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
RM2-0838-000CN	Low-voltage power supply (LVPS) (220–240V; except China) (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
RM2-0839-000CN	Low-voltage power supply (LVPS) (220–240V; China) (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
RM2-0840-000CN	Low-voltage power supply (LVPS) (110–127V) (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RM2-0841-000CN	Low-voltage power supply (LVPS) (220–240V; except China) (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RM2-0842-000CN	Low-voltage power supply (LVPS) (220–240V; China) (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RM2-0843-000CN	Transfer assembly (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-0843-000CN	Transfer assembly (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-1179-000CN	Automatic document feeder (M227)	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-1180-000CN	Cover, document feeder top	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-1181-000CN	Input tray, document feeder (M227)	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-1182-000CN	Hinge assembly (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RM2-1183-000CN	ADF base	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-1184-000CN	Core assembly, ADF	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-1185-000CN	Sheet plate assembly	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-1187-000CN	Pre-pick arm assembly	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-1660-000CN	Roller, transfer (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-1660-000CN	Roller, transfer (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-1664-000CN	Automatic document feeder (M230)	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-1665-000CN	Input tray, document feeder (M230)	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-2082-000CN	Cover, front top assembly (no LED) (M203; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-2083-000CN	Cover, front top assembly (network model) (M206; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-2084-000CN	Cover, front top assembly (no LED) (M206; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-2085-000CN	Control panel assembly (M206; SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-2086-000CN	Duplex paper feed assembly (SFP)	<a href="#">Internal components, printer base (3 of 3; SFP)<sup>1</sup> on page 1193</a>
RM2-2086-000CN	Duplex paper feed assembly (MFP)	<a href="#">Internal components, printer base (3 of 3; MFP)<sup>1</sup> on page 1199</a>
RM2-2087-000CN	Cover, top front assembly (except wireless model) (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RM2-6911-000CN	Laser scanner assembly (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>

**Table 2-13 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-6911-000CN	Laser scanner assembly (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-6982-000CN	Lid, 3-in-1 scanner assembly	<a href="#">3-in-1 scanner assembly on page 1183</a>
RM2-6983-000CN	3-in-1 scanner assembly	<a href="#">3-in-1 scanner assembly on page 1183</a>
RM2-6989-000CN	4-in-1 scanner assembly	<a href="#">4-in-1 scanner assembly on page 1181</a>
RM2-8273-000CN	Switch, power PCA (SFP)	<a href="#">Covers (SFP models) on page 1185</a>
RM2-8273-000CN	Switch, power PCA (MFP)	<a href="#">Covers (MFP models) on page 1187</a>
RM2-8334-000CN	Engine control unit (ECU) PCA (SFP)	<a href="#">Internal components, printer base (1 of 3; SFP)<sup>1</sup> on page 1189</a>
RM2-8334-000CN	Engine control unit (ECU) PCA (MFP)	<a href="#">Internal components, printer base (1 of 3; MFP)<sup>1</sup> on page 1195</a>
RM2-8351-000CN	Motor PCA (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-8351-000CN	Motor PCA (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-8376-000CN	Sensor, environmental PCA (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-8376-000CN	Sensor, environmental PCA (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-8377-000CN	Paper pickup sensor PCA assembly (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>
RM2-8377-000CN	Paper pickup sensor PCA assembly (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-8378-000CN	Sensor, delivery PCA (SFP)	<a href="#">Internal components, printer base (2 of 3; SFP)<sup>1</sup> on page 1191</a>
RM2-8378-000CN	Sensor, delivery PCA (MFP)	<a href="#">Internal components, printer base (2 of 3; MFP)<sup>1</sup> on page 1197</a>