

KONICA MINOLTA

PARTS GUIDE MANUAL

AUGUST 2018

bizhub 4422
AAFM

 
INFORMATION FOR PARTS GUIDE MANUAL

To find correct Parts No., refer to the "HOW TO MAKE THE BEST USE OF THIS MANUAL" in the following page.

HOW TO MAKE THE BEST USE OF THIS MANUAL

- 1 When you order, please check the proper figures beforehand that are on Our Parts Guide Manual, and order with the appropriate figures.
- 2 For screws, Nuts, Washers, retaining rings and Pins which are used in this model, one letter is shown on the Standard parts column of Parts list and exploded diagrams.
- 3 In order to maintain safety of the product, some specific parts composed of this product are set up as "essential safety parts".
- 4 The assigned parts number for the "essential safety parts" is indicated as "SP00-****".
When replacing these parts, follow precautions for disassembling and installing which are listed in the Service Manual.
Do not use any parts that are not set up as
- 5 ♣ means that there are exclusive parts for each destination.
Please check the appropriate destination when you order.
- 6 Revision Mark
Marked as ▲ on the illustration shows that the revision has been made.
- 7 All rights reserved. (any reprints or quotations are prohibited.)
Use of this parts guide manual should be strictly supervised to avoid disclosure of confidential information.


System Configuration

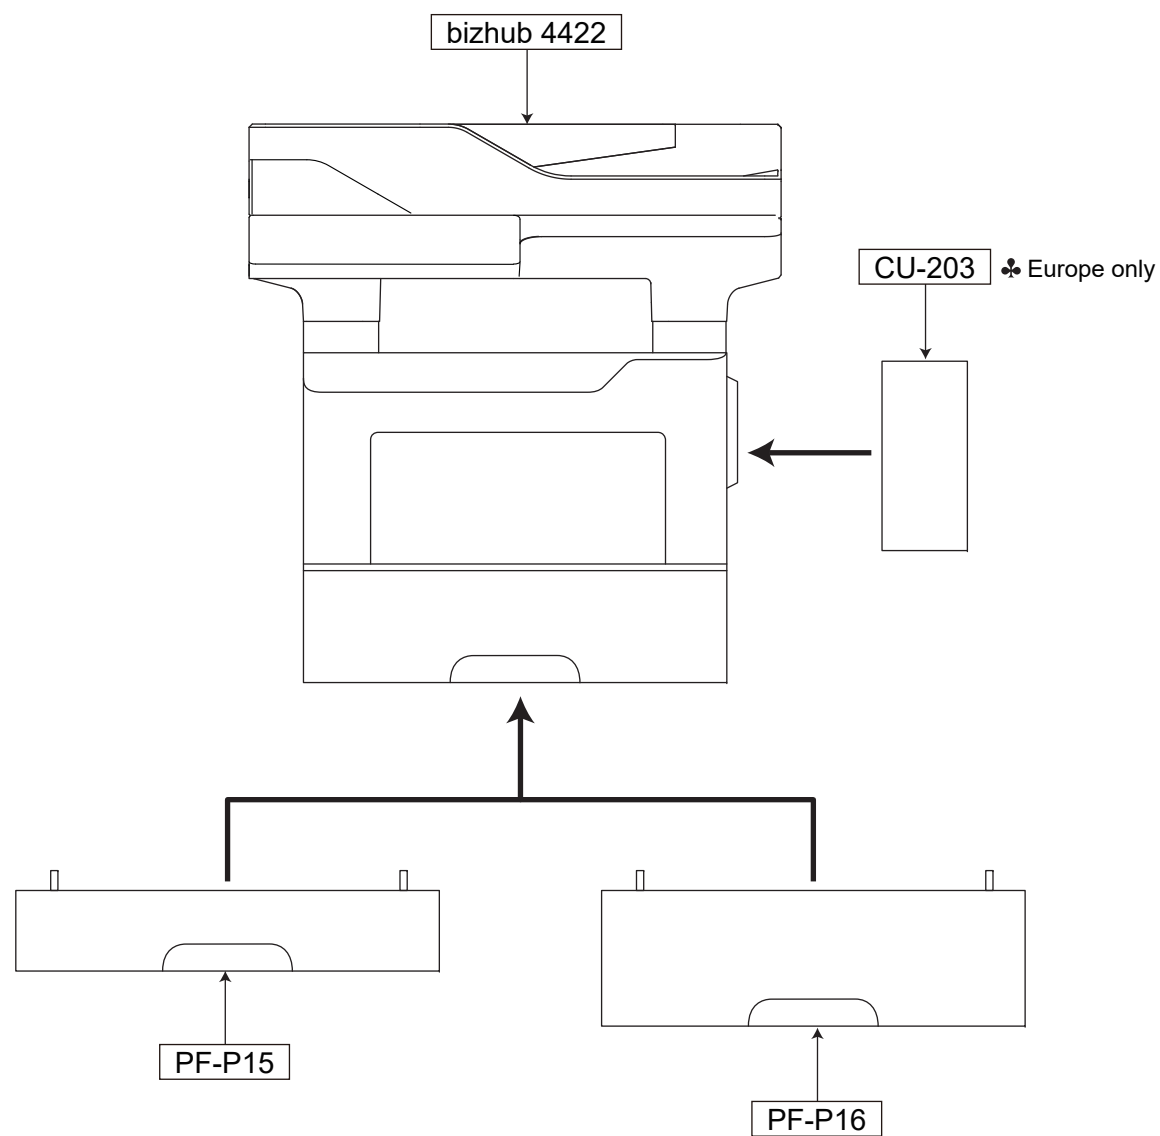

GENERAL CONTENTS

No.	Description	Model
1	Printer B/W	bizhub 4422
2	Paper Feeder	PF-P15
3	Paper Feeder	PF-P16
4	Other Option	CU-203

 Section Configuration

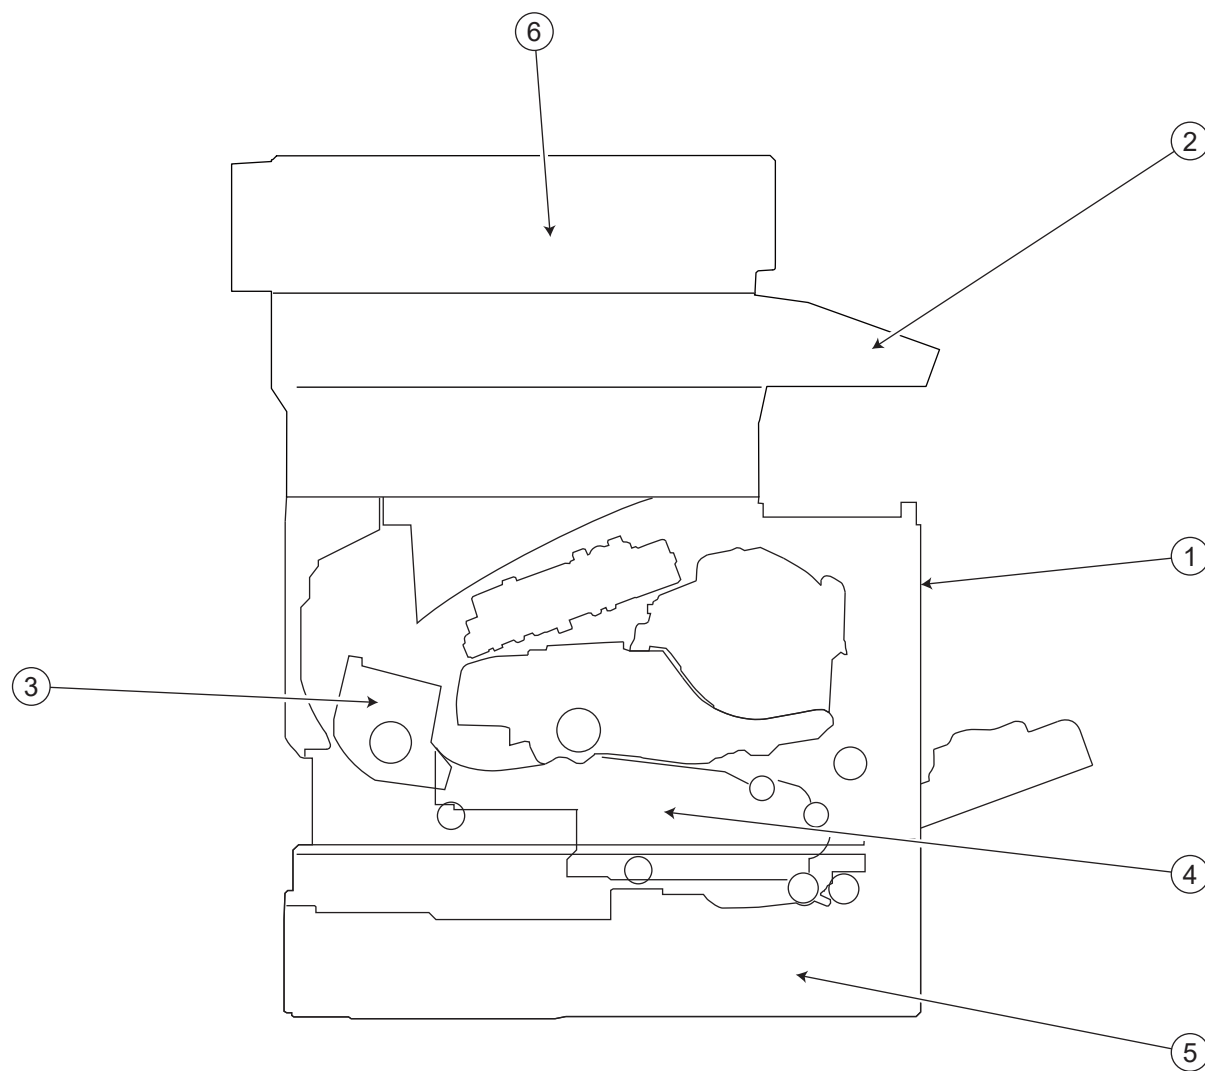

CONTENTS

No.	DESCRIPTION	PAGE No.
1	External Parts	P1
2	Operation Panel section	P2
3	Electrical Components Section	P3 P4 P5 P6
4	Paper Transport Section	P7 P8
5	Tray Section	P9
6	ADF/ Scanner Section	P10
7	Accessory Parts	P11


INDEX

1/1

Parts No.	Page No.
4136N30000	11-1
9381420021	11-1
A1UDN30200	11-1
A2UPN30100	11-1
A2UPN30300	11-1
A2UPN30501	11-1
A63NPP0Q00	6-3
A63NPP0Y00	8-1
A63NPP1R00	11-1
A63PPP0G02	8-4
A6WDPP0601	1-5
A6WDPP1600	10-10
AA1PPP0A00	4-1
AA1PPP0B00	5-1
AA1PPP0D00	7-1
AA1PPP0E00	7-3
AA1PPP0M00	10-4
AAFHPP1100	5-2
AAFHPP1300	3-2
AAFHPP1400	3-2
AAFHPP1700	7-4
AAFHPP1900	7-2
AAFHPP1A00	3-1
AAFHPP1B00	8-2
AAFHPP1C01	3-4
AAFHPP1D01	3-4
AAFHPP1E00	6-1
AAFHPP1F00	5-4
AAFHPP1G00	5-7
AAFHPP1K00	3-5
AAFHPP1M00	5-5
AAFHPP1N00	5-6
AAFHPP2100	1-7
AAFHPP2300	4-2
AAFHPP2400	4-5
AAFHPP2500	4-4
AAFHPP2T00	7-5
AAFJPP1200	8-3
AAFJPP1300	6-2
AAFJPP1600	1-9

Parts No.	Page No.
AAFJPP1700	1-3
AAFJPP1900	9-2
AAFJPP1A00	4-3
AAFJPP1E00	1-4
AAFJPP1H00	7-6
AAFMPP1101	10-6
AAFMPP1201	2-5
AAFMPP1800	1-10
AAFMPP1C00	10-5
AAFMPP1E01	10-8
AAFMPP1G01	2-2
AAFMPP1H01	3-3
AAFMPP1J00	1-1
AAFMPP1P00	10-1
AAFMPP1Q00	10-11
AAFMPP1T00	1-2
AAFMPP2300	5-3
AAFMPP2400	6-4
AAFMPP2500	8-5
AAFMPP2600	10-3
AAFNPP1A00	2-3
AAFNPP1D00	10-2
AAFNPP1F00	1-6
AAFNPP1G00	1-8
AAFNPP1H00	2-1
AAFNPP1K00	2-4
AAFNPP1M00	10-7
AAFNPP1N00	10-9
AAFNPP1P00	10-12

 External Parts

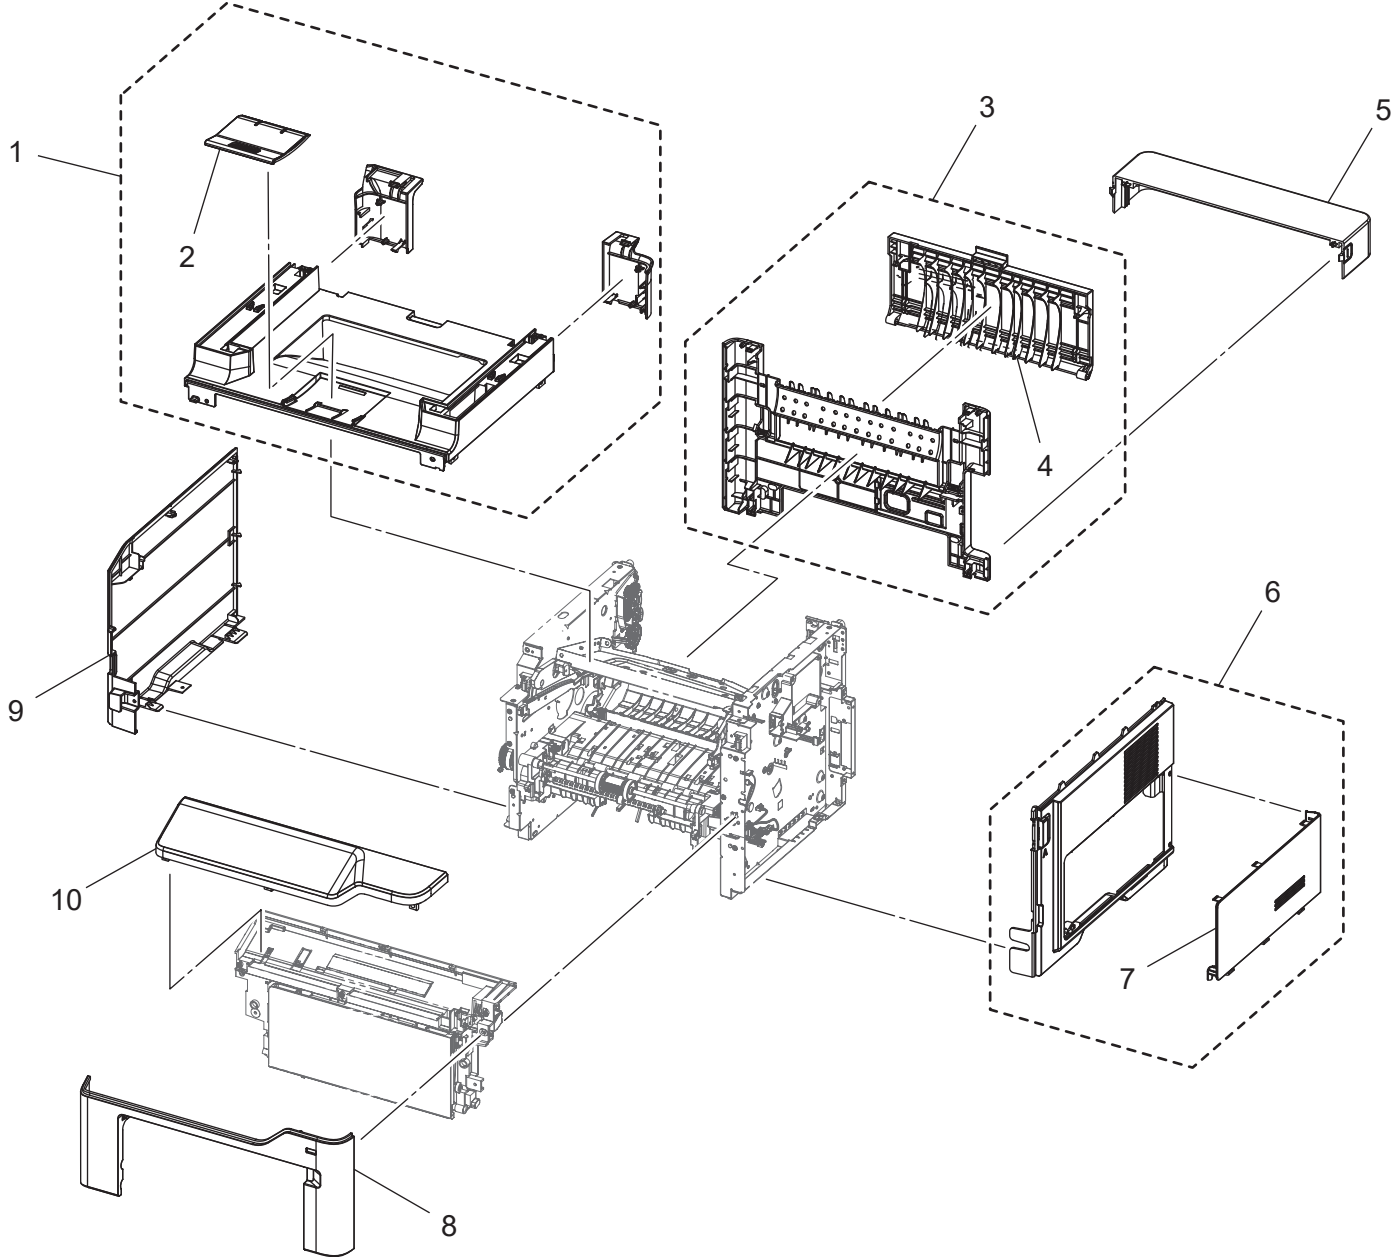


External Parts

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	AAFMPP1J00	Top Cover Assy		C	1	
2	AAFMPP1T00	Tray		D	1	
3	AAFJPP1700	Cover/Rear Assy		D	1	
4	AAFJPP1E00	Door/Rear		D	1	
5	A6WDPP0601	Cover		C	1	
6	AAFNPP1F00	Cover/Right Assy		D	1	
7	AAFHPP2100	Cover		D	1	
8	AAFNPP1G00	Cover/Front		D	1	
9	AAFJPP1600	Cover/Left		D	1	
10	AAFMPP1800	Front Cover/ Upper		D	1	


Operation Panel section

改訂版 REVISED EDITION	日付 DATE
	AUGUST 2018

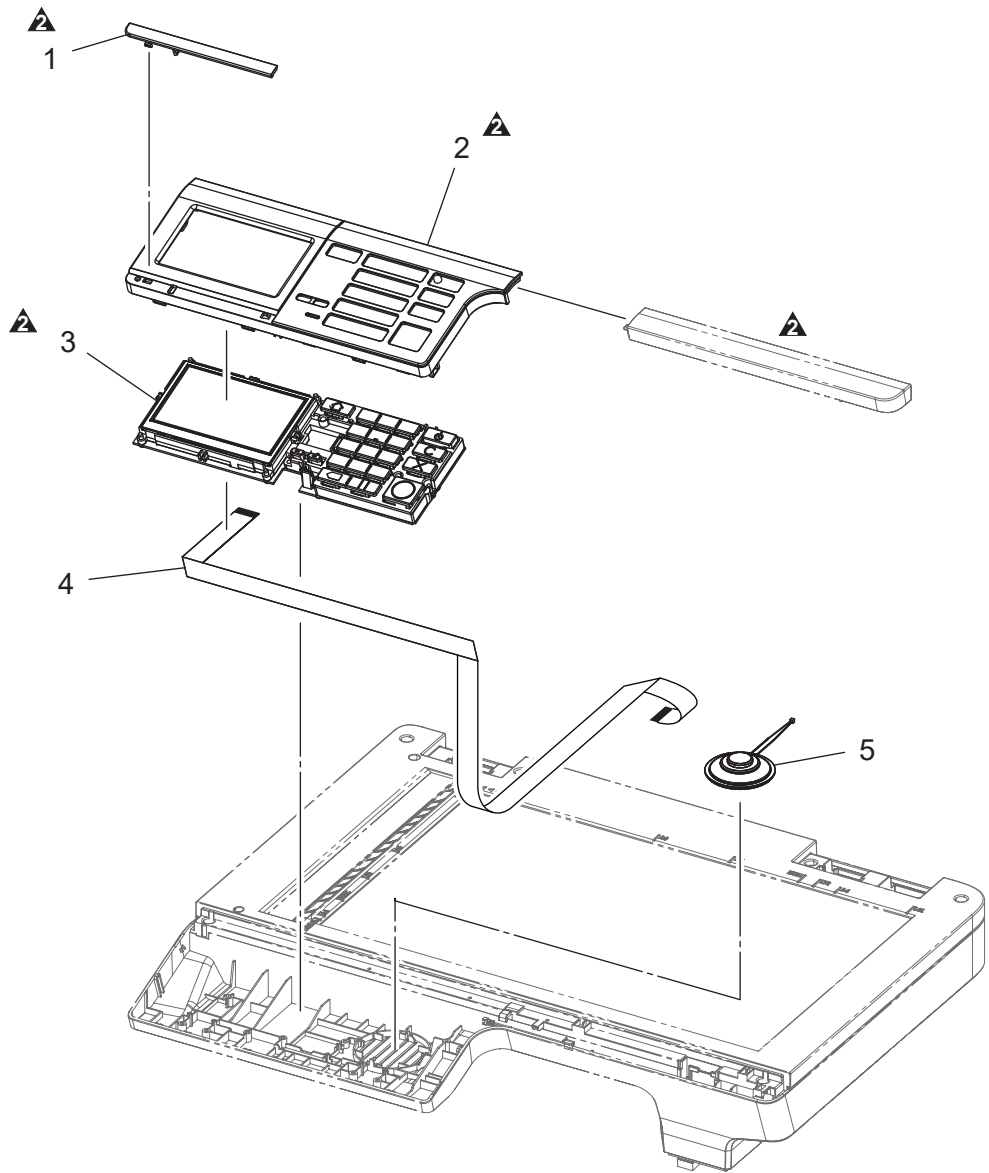 


Operation Panel section

 [illegible]

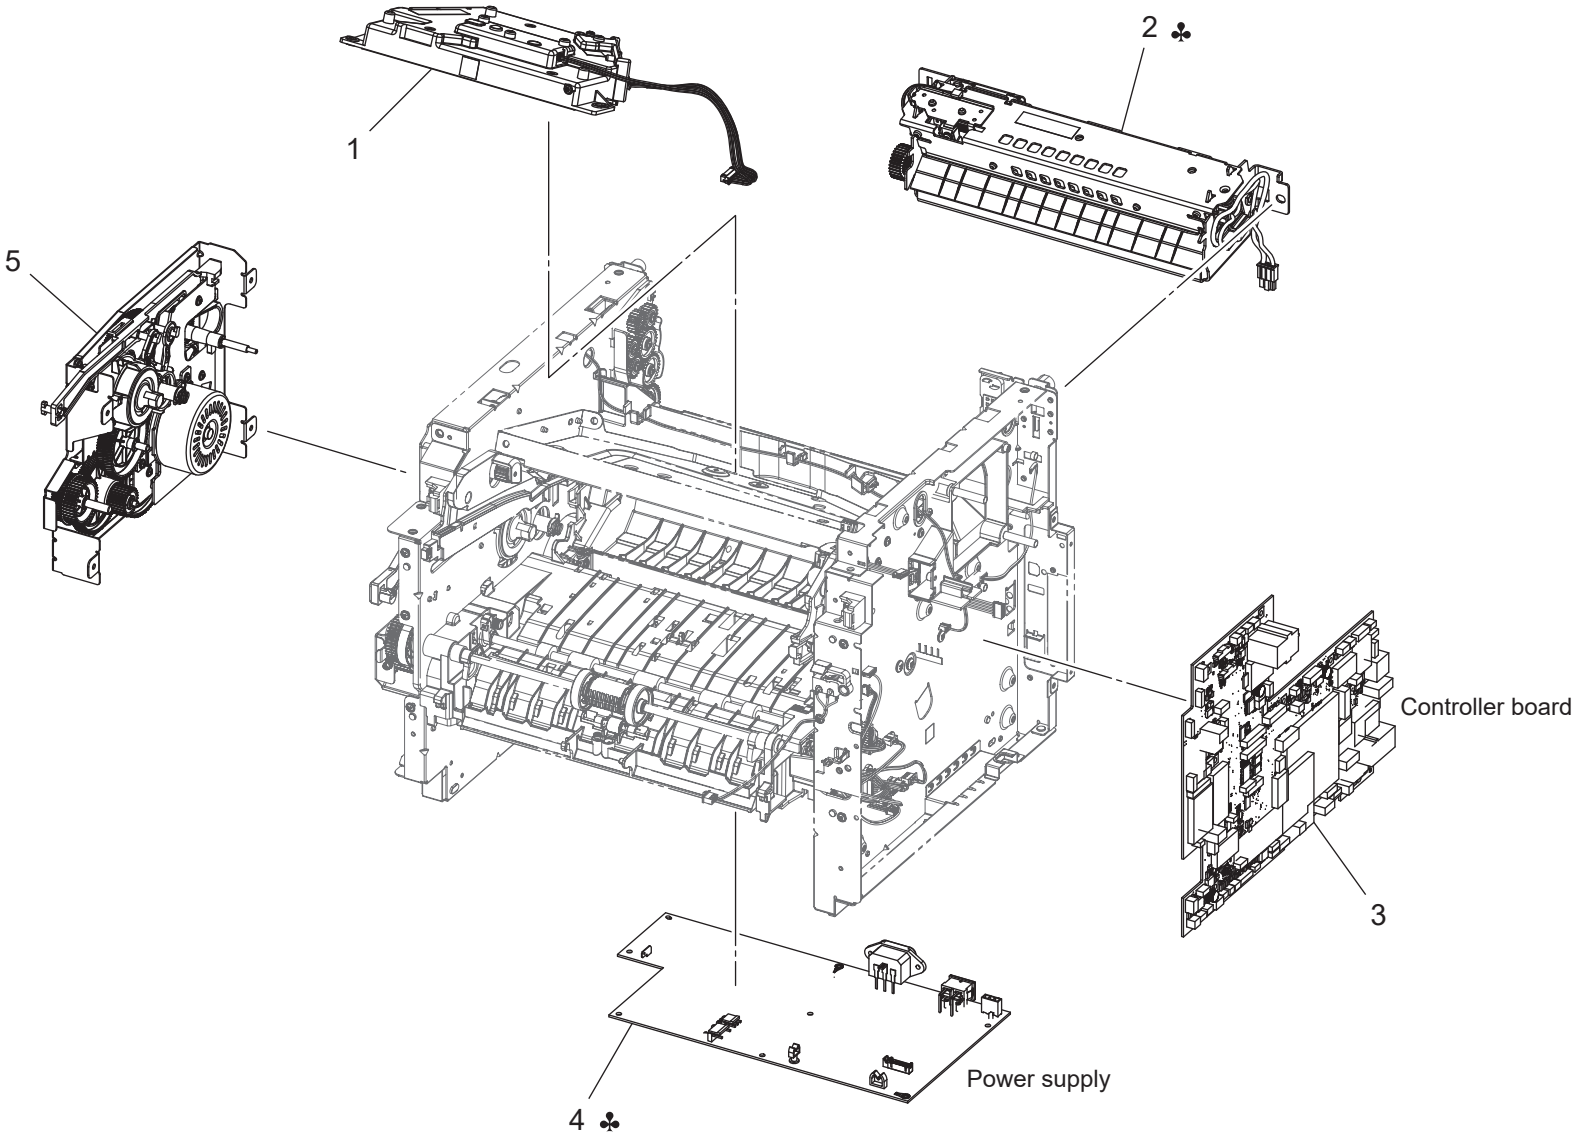


Electrical Components Section

 [illegible]

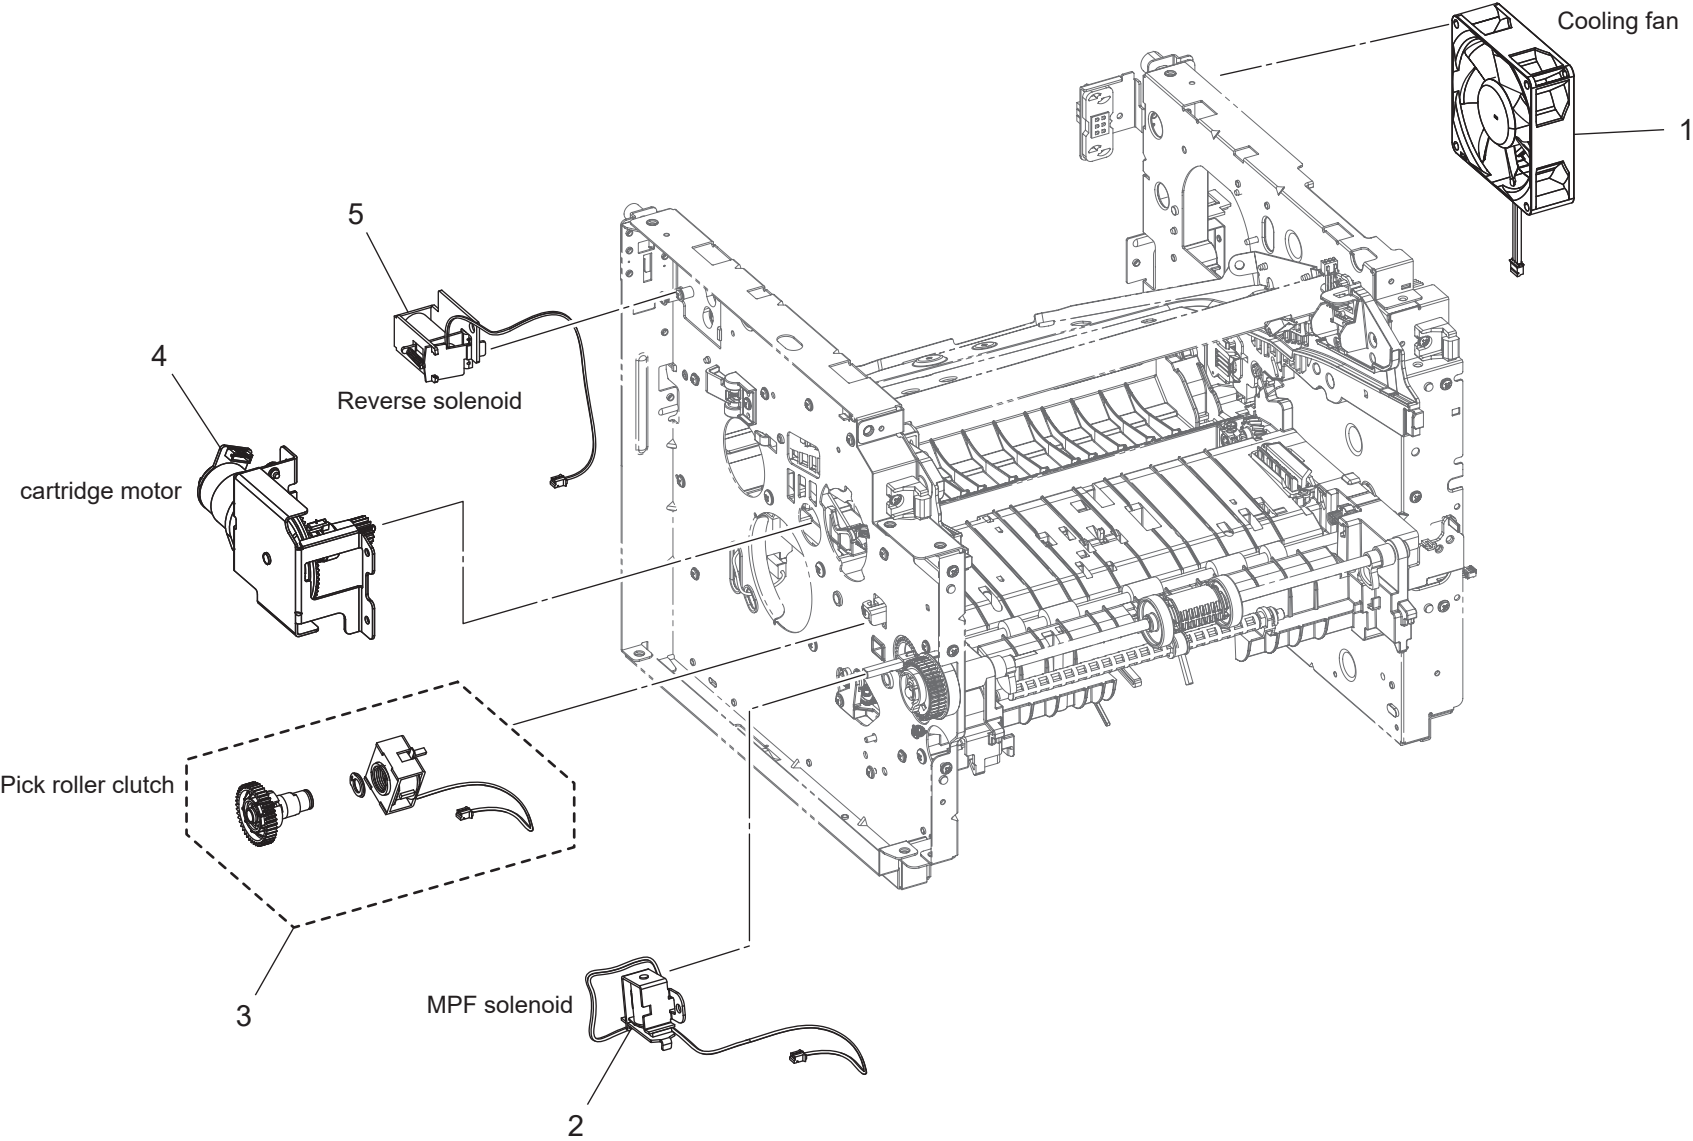


Electrical Components Section

 [illegible]

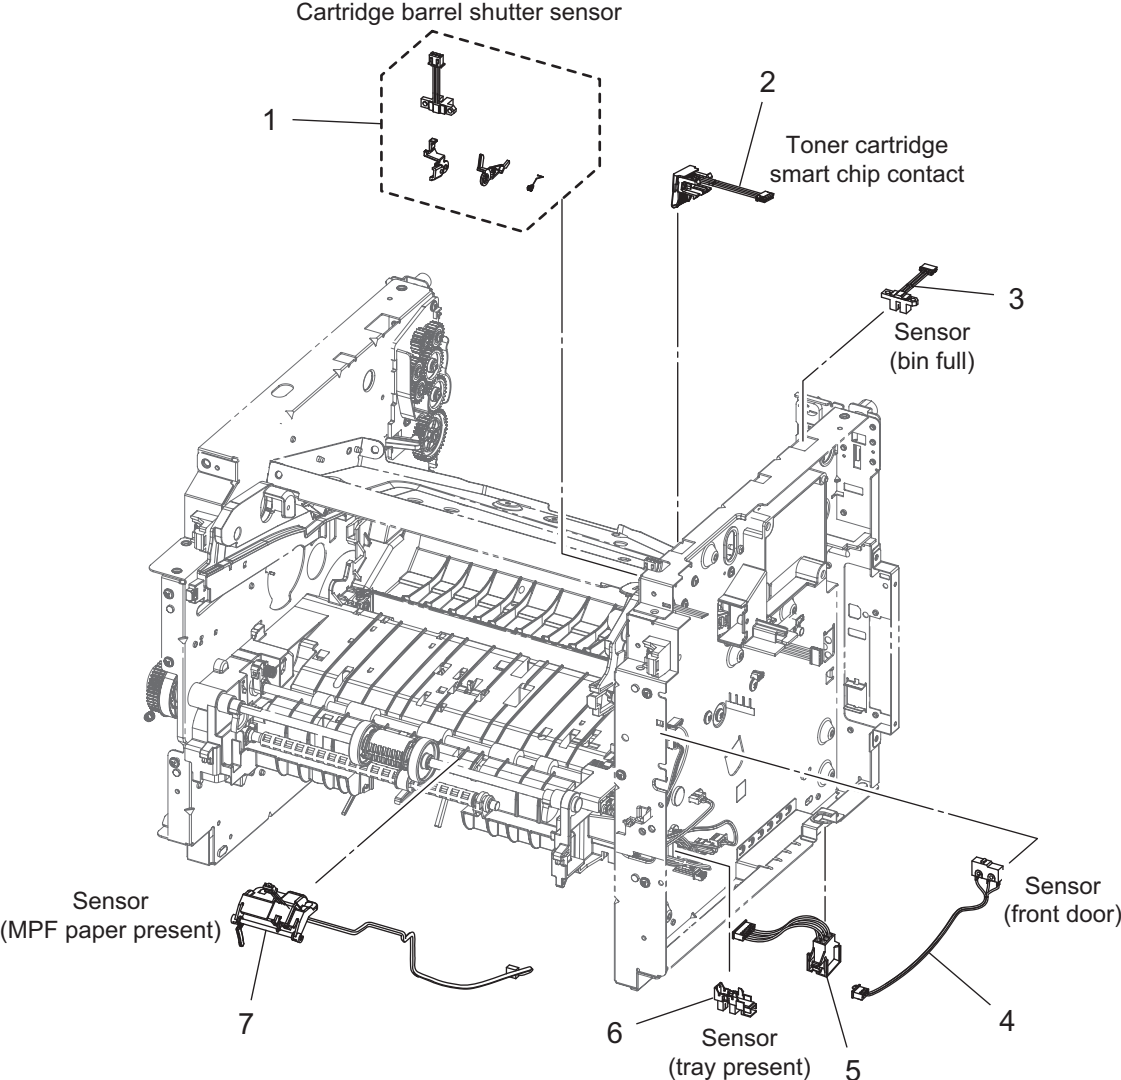


Electrical Components Section

 [illegible]

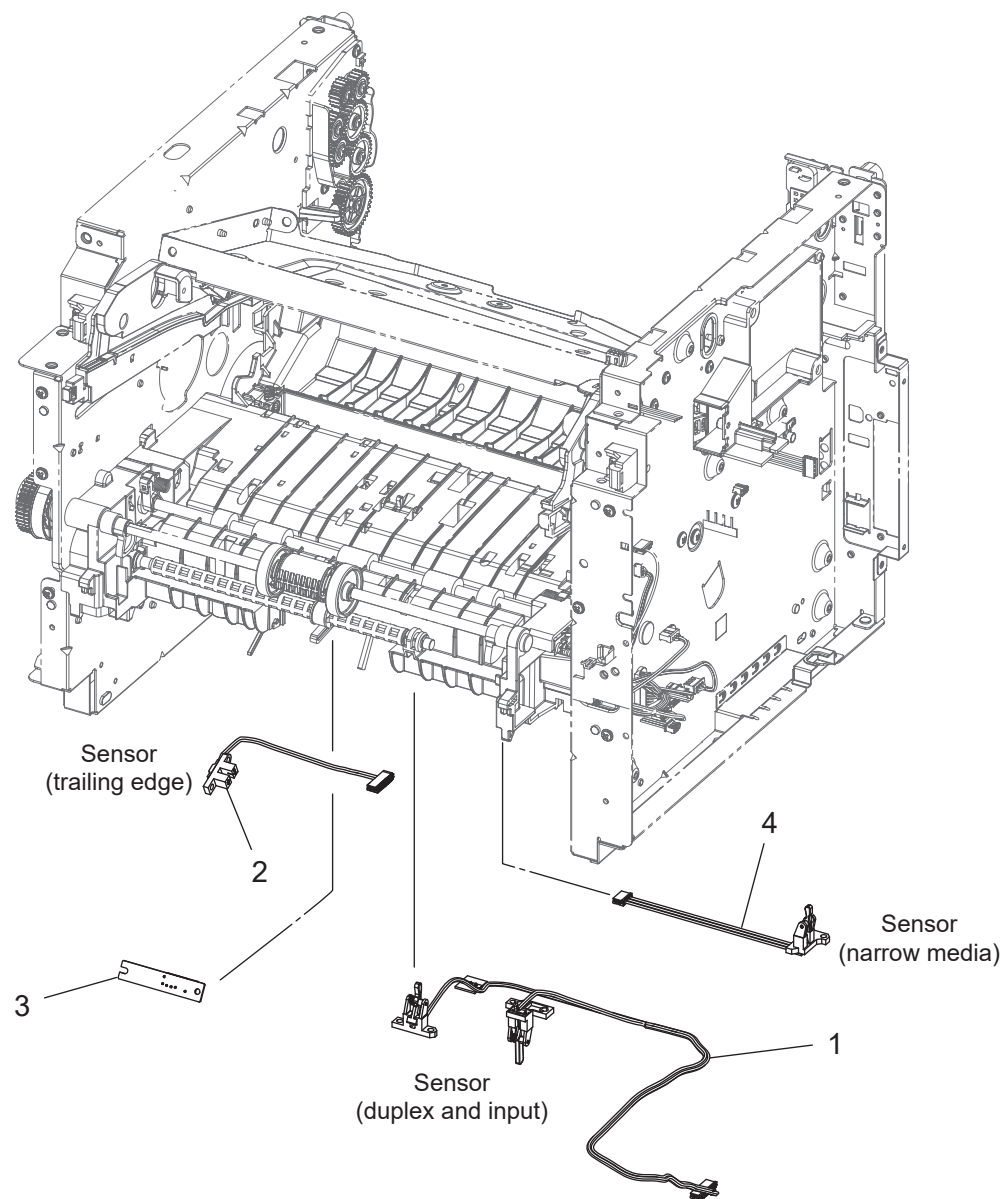

Electrical Components Section


Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	AAFHPP1E00	Sensor Assy		C	1	
2	AAFJPP1300	Sensor		C	1	
3	A63NPP0Q00	Sensor		I	1	
4	AAFMP2400	Sensor		C	1	

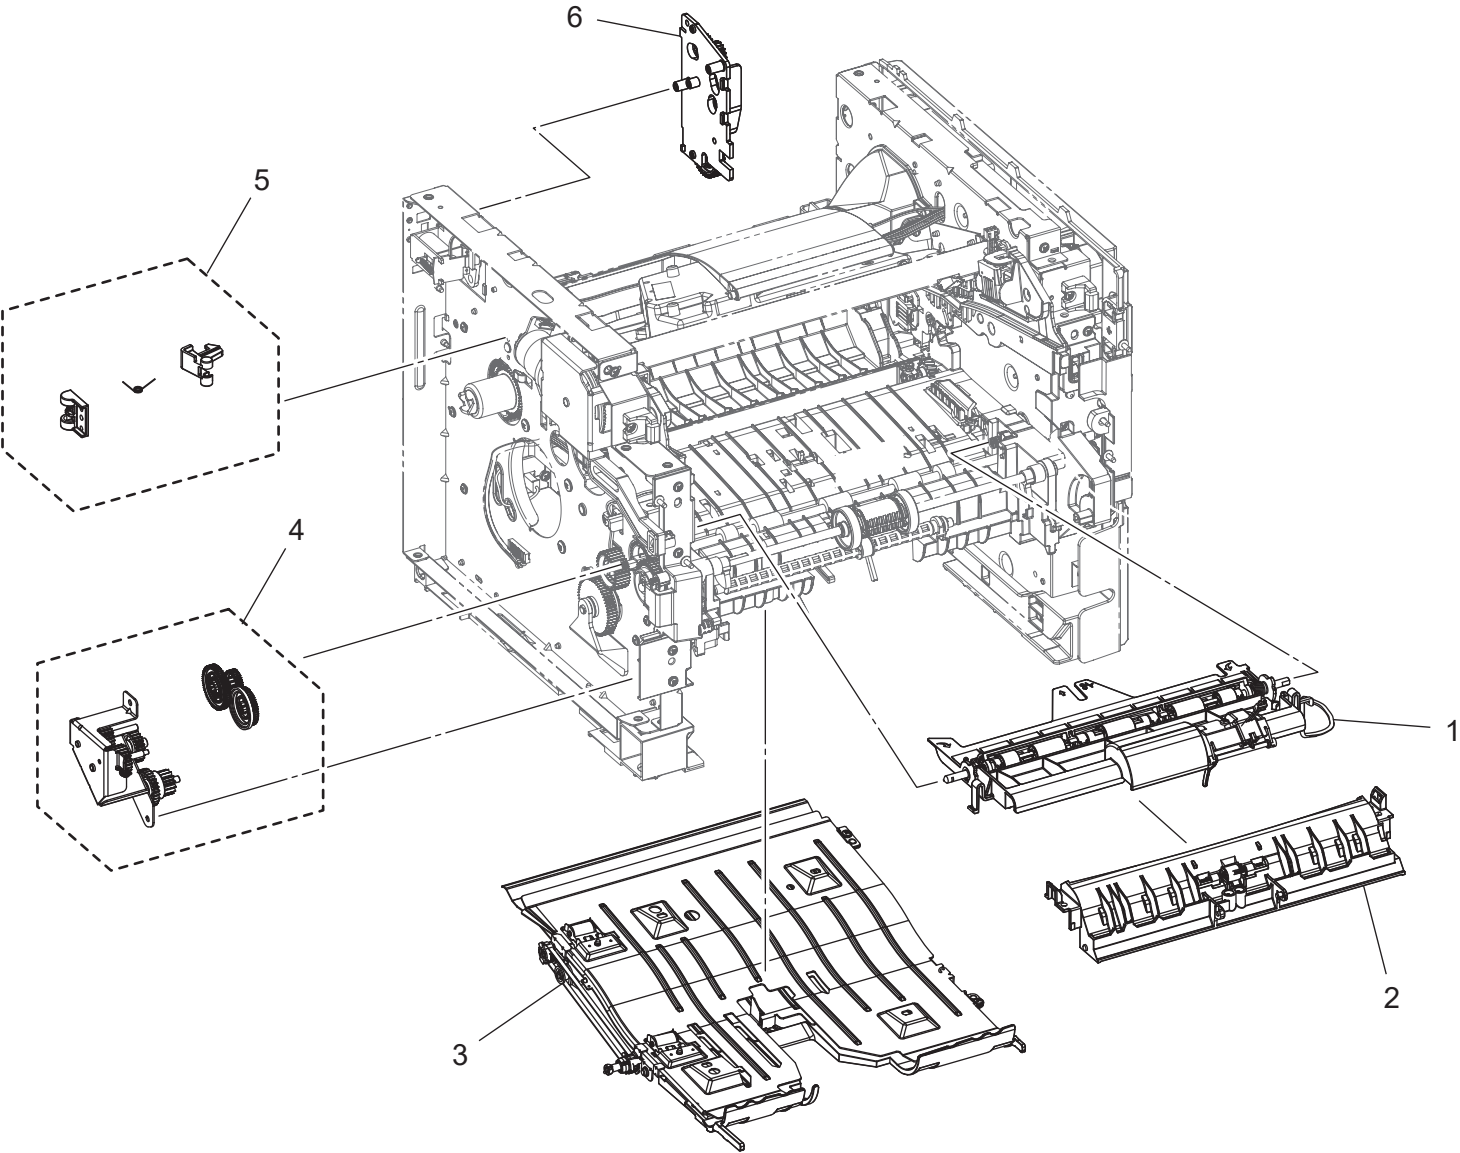 

Paper Transport Section

[illegible]

 Paper Transport Section

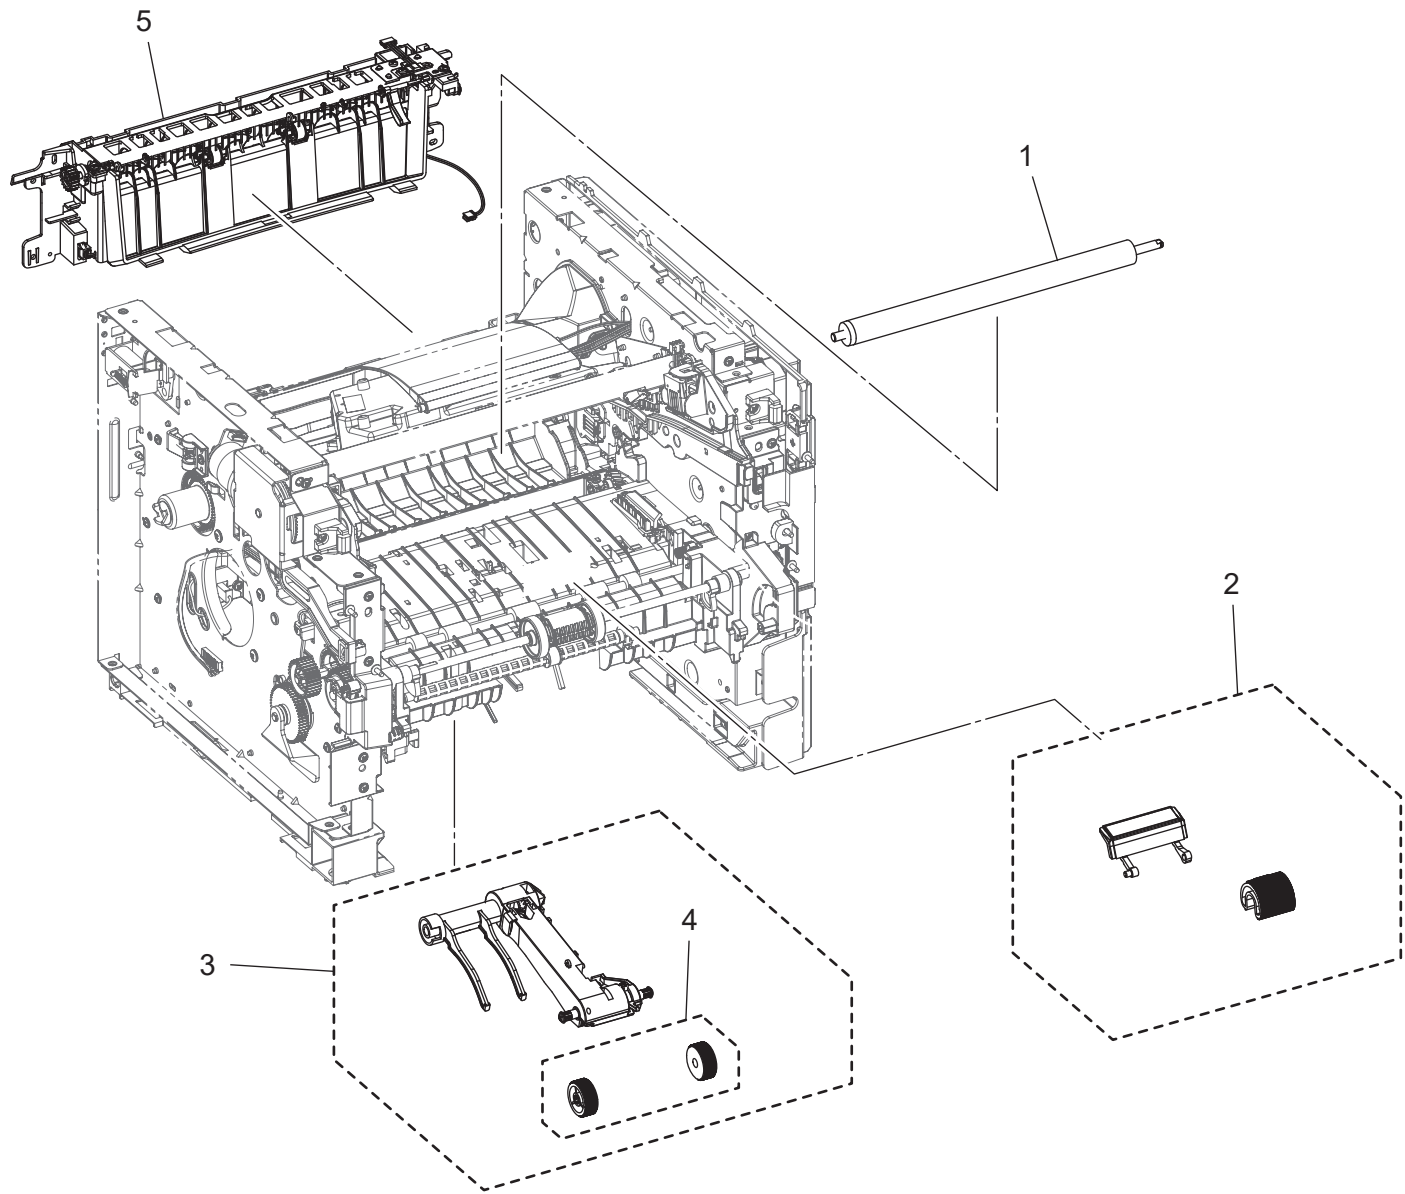


Paper Transport Section


[illegible]

Tray Section

改訂版 REVISED EDITION	日付 DATE
	APRIL 2018

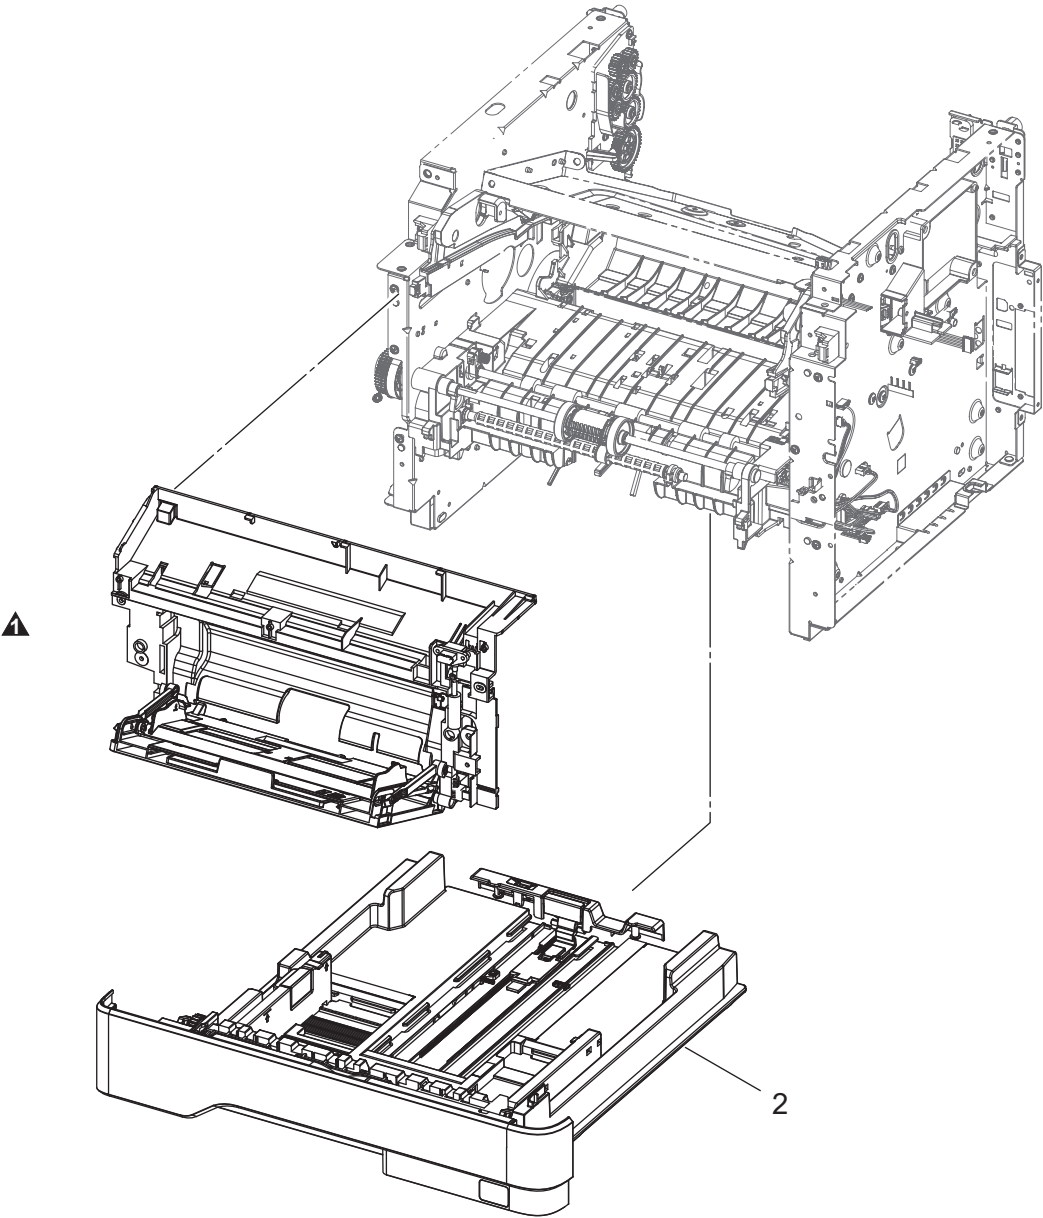 


Key	Part No.	Description	Destinations	Class	QTY	Standard parts
2	AAFJPP1900	Cassette Assy/250 Sheet		C	1	

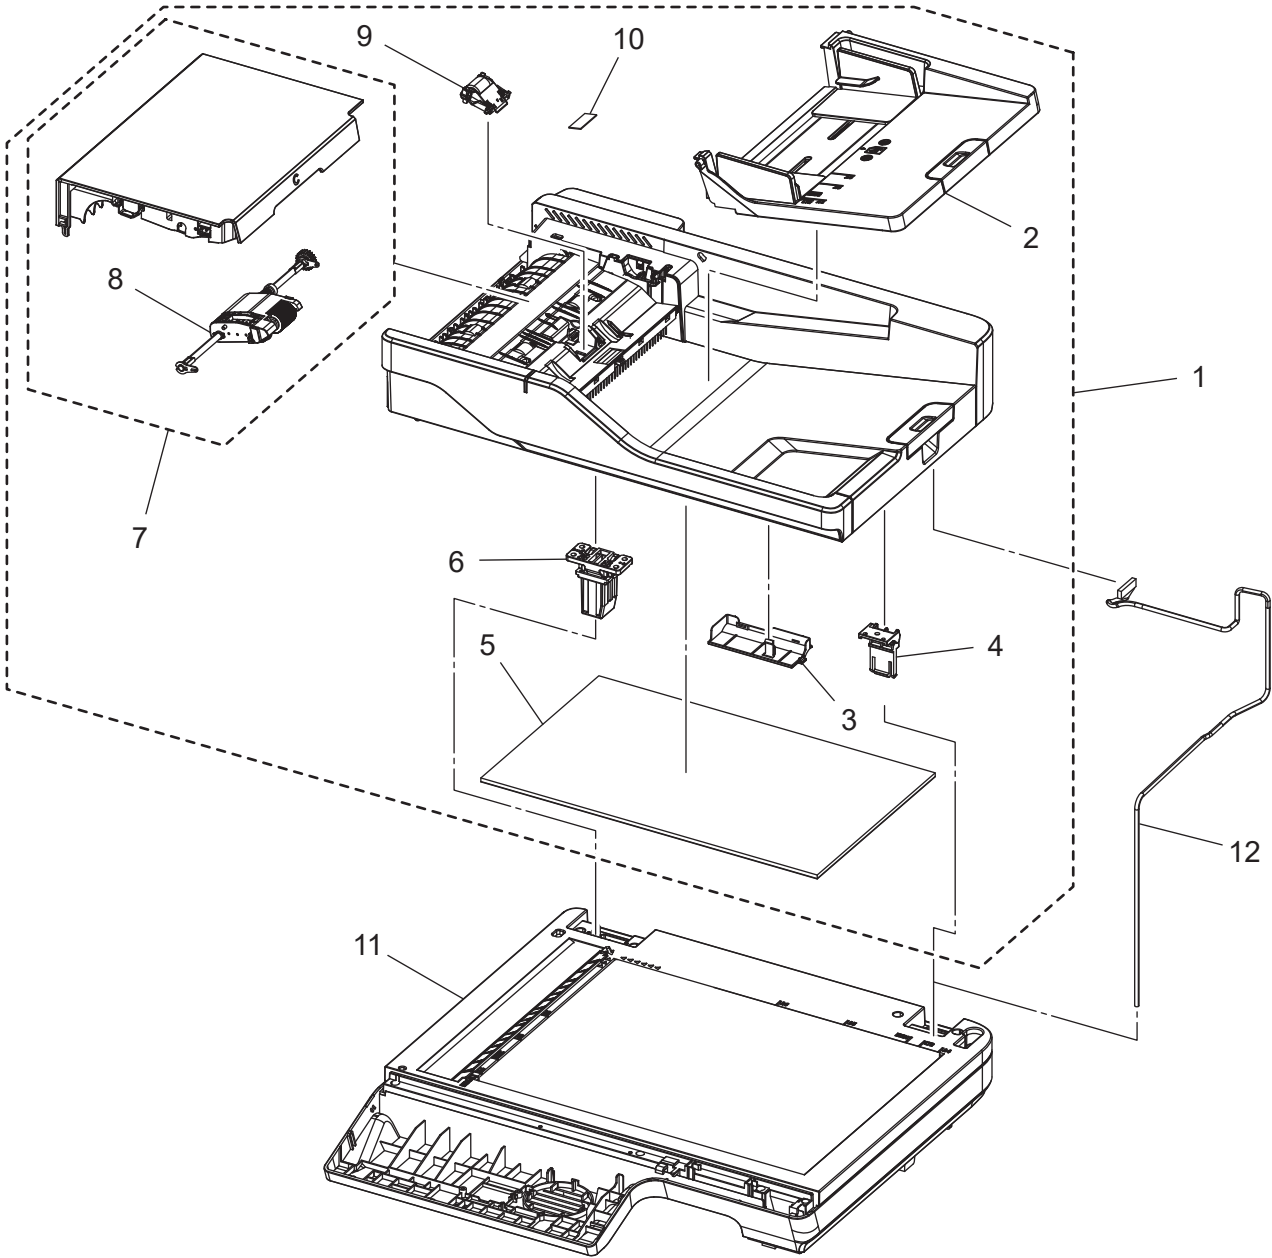 

ADF/ Scanner Section

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	AAFMPP1P00	ADF Unit		C	1	
2	AAFNPP1D00	Tray		C	1	
3	AAFMPP2600	Cover		D	1	
4	AA1PPP0M00	Hinge/Right		C	1	
5	AAFMPP1C00	Pad		C	1	
6	AAFMPP1101	Hinge/Left		C	1	
7	AAFNPP1M00	Top Cover Assy		C	1	
8	AAFMPP1E01	Pick-up Roller Assy		C	1	
9	AAFNPP1N00	Separator Roller		C	1	
10	A6WDPP1600	Separating Pad		C	1	
11	AAFMPP1Q00	Scanner Unit		C	1	
12	AAFNPP1P00	Harness/ ADF		D	1	

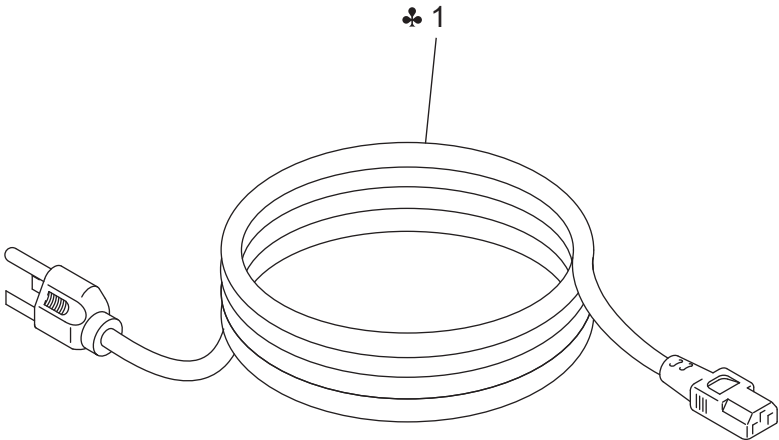 

Accessory Parts

[illegible]

MAINTENANCE LIST

● The items with no Page/Key numbers are not handled as spare parts.

No.	Section	PM Parts Description	Maintenance Cycle (K=1,000)		Parts No.	Destinations	Page/Key	Note
			QTY	Replace				
1	Electrical Components Section	Fusing Unit	1	200K	AAFHPP1300	B,G2	P3-2	
2			1	200K	AAFHPP1400	C,D1,D3,E,F2,G1,I,J	P3-2	
3	Paper Transport Section	Transfer Roller	1	200K	A63NPP0Y00		P8-1	
4		Paper Feed/Separation Pad Kit	1	200K	AAFHPP1B00		P8-2	
5		Pick tire Set(2 pcs/set)	1	200K	A63PPP0G02		P8-4	

*: The part names used on this page follow the ones used in the Service Manual and they are occasionally different from those written in other pages.

DESTINATION

Destination No.		Destinations		V	Hz	Model No.
A	A1	JAPAN				
	A2	JAPAN				
B		USA, CANADA		120	60	AAFM011
C		EUROPEAN TYPE		220-240	50/60	AAFM021
D	D1	S.E ASIA TYPE	THAILAND, SRI LANKA, SINGAPORE, MALAYSIA, HONG KONG, PAKISTAN, INDIA, BANGLADESH, INDONESIA	220-240	50/60	AAFM041
	D3	OCEANIA TYPE	AUSTRALIA, NEW ZEALAND	220-240	50/60	AAFM041
E		PHILIPPINES		220-240	50/60	AAFM041
F	F1	SAUDI ARABIA				
	F2	SAUDI ARABIA		220-240	50/60	AAFM041
G	G1	C.S AMERICA		220-240	50/60	AAFM041
	G2	C.S AMERICA		120	60	AAFM011
H		TAIWAN				
I		JORDAN, LEBANON, SYRIA, SOUTH AFRICA, IRAQ, IRAN, N.YEMEN, CAMEROON, UAE, BAHRAIN, OMAN, QATAR, KUWAIT, KENYA, TUNISIA, IVORY COAST, MOROCCO		220-240	50/60	AAFM021 AAFM041
J		CHINA		220-240	50/60	AAFM081
K		KOREA				