



Lexmark™

B3340, B3442, MS331, MS431, MS439 Printers

4601-2xx, -4xx

Service Manual

- [Start diagnostics](#)
- [Maintenance](#)
- [Safety and notices](#)
- [Index](#)

November 04, 2020

www.lexmark.com

Product information

Product name:

Lexmark B3340dw; Lexmark B3442dw; Lexmark MS331dn; Lexmark MS431dn, Lexmark MS431dw; Lexmark MS439dn printers

Machine type:

4601

Model(s):

230, 280, 4a0, 480

Edition notice

November 04, 2020

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Trademarks

Lexmark and the Lexmark logo are trademarks or registered trademarks of Lexmark International, Inc. in the United States and/or other countries.

All other trademarks are the property of their respective owners.

© 2020 Lexmark International, Inc.

All rights reserved.

P/N

Table of contents

Product information.....	2
Edition notice.....	2
Notices, conventions, and safety information.....	9
Laser notice.....	9
Conventions.....	10
Safety information.....	11
Change history.....	15
Change history.....	15
General information.....	17
Printer model configurations.....	17
Supported paper sizes, types, and weights.....	17
Supported paper sizes.....	17
Supported paper types.....	19
Supported paper weights.....	20
Tools required for service.....	20
Diagnostics and troubleshooting.....	23
Troubleshooting precautions.....	23
Troubleshooting overview.....	25
Performing the initial troubleshooting check.....	25
Using Safe Mode.....	25
Fixing print quality issues.....	26
Gray background or toner fog check.....	26
Blank page check.....	27
Print is too dark check.....	29
Print is too light check.....	30
Paper curl check.....	33
Folded or wrinkled paper check.....	34
Solid black pages check.....	35
Skewed print check.....	37
Streaked vertical lines appear on prints during a print job check.....	39
Horizontal light bands check.....	40
Vertical light bands check.....	41
Vertical dark bands check.....	42

Vertical dark streaks with print missing check	43
White streaks and voided areas check	44
Clipped pages or images check.....	45
Incorrect margins on prints check	47
Toner rubs off check.....	47
Toner specks appear on prints during a print job check	48
Repeating defects check.....	50
Paper jams.....	51
200 paper jams.....	51
202 paper jams.....	58
232 paper jams	64
242 paper jams	66
User attendance messages.....	66
User attendance messages.....	66
Unsupported or unresponsive toner cartridge service check	68
Unsupported or unresponsive imaging unit service check	69
Mismatched supplies error service check	70
Supplies low service check	70
Printer hardware errors.....	71
111 errors.....	71
121 errors.....	73
126 errors.....	75
140 errors.....	76
162 errors.....	77
6yy errors.....	79
Procedure before starting the 9yy service checks	80
912 errors.....	82
938-992 errors.....	86
Other symptoms.....	87
Base printer symptoms	87
Tray near empty service check.....	88
False bin full error service check	89
Service menus.....	91
Understanding the printer control panel.....	91
Using the control panel	91
Understanding the status of the indicator light.....	91
Diagnostics Menu.....	92
Entering the Diagnostics Menu	92
Reports	92
Advanced Print Quality Samples.....	92
Event Log.....	92
Input tray quick print.....	93

Output bin quick feed	94
Printer Setup	94
Printer diagnostics & adjustments	96
Config Menu.....	97
Entering the Config Menu	97
Config Menu	98
Service Engineer (SE) menu.....	99
Entering the SE Menu.....	99
General SE Menu.....	99
Network SE Menu.....	99
Entering invalid engine mode.....	100
Entering Recovery mode.....	101

Parts removal.....103

Data security notice.....	103
Removal precautions.....	103
Handling ESD-sensitive parts.....	105
Critical information for controller board or control panel replacement	106
Updating the printer firmware	106
Ribbon cable connectors	108
Low insertion force (LIF) connector	108
Removal procedures.....	109
Left side removals.....	109
Left cover removal	109
Main drive gears removal.....	110
Pick roller clutch removal.....	114
Left front door link removal.....	115
Right side removals.....	117
Right cover removal.....	117
Controller board removal	119
LVPS removal.....	120
HVPS removal	120
Sensor (MPF paper present) removal	122
Sensor (front door interlock) removal	123
Right front door link removal.....	124
MPF solenoid cable removal.....	124
Main fan removal.....	125
Front removals.....	126
Control panel removal.....	126
Control panel cable removal	127
Upper front cover removal.....	128
Front door removal	128

Transfer roller removal	129
MPF pick roller removal	130
Pick separator roller removal	131
Rear removals.....	132
Rear door removal.....	132
Fuser removal.....	133
Top removals.....	134
Top cover removal.....	134
Printhead removal	135
Redrive removal.....	137
Bin full sensor actuator removal.....	138
Bottom removals.....	140
Duplex guide removal.....	140
Component locations.....	143
Printer configuration.....	143
Controller board connectors.....	143
Maintenance.....	149
Cleaning printer parts.....	149
Cleaning the printer	149
Parts catalog.....	150
Legend.....	150
Assembly 1: Covers.....	151
Assembly 2: Electronics.....	153
Assembly 3: Gears.....	155
Assembly 4: Paper path.....	157
Assembly 5: 550-sheet optional tray.....	159
Assembly 6: Miscellaneous.....	161
Printer specifications.....	163
Power consumption.....	163
Product power consumption	163
Sleep Mode.....	163
Hibernate Mode.....	164
Off mode	164
Total energy usage	164
Selecting a location for the printer.....	164
Noise emission levels.....	165

Temperature information.....	165
Theory of operation.....	167
POR sequence.....	167
Print cycle operation.....	167
Print engine layout	167
Print cycle	168
Printer operation.....	174
Printer sections	174
Printer paper path	175
Printer paper path sensors	177
Main drive	178
Tray drive	179
Index.....	180
Part number index.....	183
Part name index.....	185

Notices, conventions, and safety information

Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, Chapter I, Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 60825-1: 2014.

Class I laser products are not considered to be hazardous. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service conditions. The printer has a non-serviceable printhead assembly that contains a laser with the following specifications:

Class: IIIb (3b) AlGaInP

Nominal output power (milliwatts): 25

Wavelength (nanometers): 775–800

Avis relatif à l'utilisation du laser

Cette imprimante est certifiée conforme aux exigences de la réglementation des Etats-Unis relative aux produits laser de classe I (1) (DHHS 21 CFR, Chapitre I, Sous-chapitre J). Pour les autres pays, elle est certifiée conforme aux exigences des normes CEI 60825-1:2014 relatives aux produits laser de classe I.

Les produits laser de classe I ne sont pas considérés comme dangereux. Le système laser ainsi que l'imprimante ont été conçus de manière à ce que personne ne soit jamais exposé à des radiations laser dépassant le niveau de classe I dans le cadre d'un fonctionnement normal, de l'entretien par l'utilisateur ou de la maintenance. L'imprimante dispose d'un ensemble de têtes d'impression non réparable contenant un laser doté des caractéristiques suivantes :

Class: IIIb (3b) AlGaInP

Nominal output power (milliwatts): 25

Wavelength (nanometers): 775–800

Aviso de láser

Esta impresora se ha certificado en EE.UU. cumpliendo con los requisitos de DHHS 21 CFR, capítulo I, subcapítulo J para los productos láser de Clase I (1) y en otros países está certificada como un producto láser de Clase I de acuerdo con los requisitos de IEC 60825-1: 2014.

Los productos láser de Clase I no se consideran peligrosos. El sistema láser y la impresora se han diseñado para que el ser humano no acceda nunca a las radiaciones láser por encima del nivel de Clase I durante su uso normal, ni en tareas de mantenimiento o intervenciones de servicio técnico prescritas. El conjunto de cabezal de impresión de la impresora no se puede reparar y contiene un láser con las siguientes especificaciones:

Class: IIIb (3b) AlGaInP

Nominal output power (milliwatts): 25

Wavelength (nanometers): 775–800

Laser-Hinweis

Der Drucker wurde in den USA zertifiziert und entspricht den Anforderungen der Vorschriften DHHS 21 CFR Kapitel I für Laserprodukte der Klasse I (1), andernorts ist er als Laserprodukt der Klasse I zertifiziert, das den Anforderungen von IEC 60825-1 entspricht: 2014.

Laserprodukte der Klasse I werden nicht als gefährlich betrachtet. Das Lasersystem und der Drucker sind so konstruiert, dass unter normalen Betriebsbedingungen, bei der Wartung durch den Benutzer oder bei den vorgeschriebenen Wartungsbedingungen Menschen keiner Laserstrahlung ausgesetzt sind, die die Werte für Klasse I überschreitet. Der Drucker verfügt über eine Druckkopfeinheit, die nicht gewartet werden kann und mit einem Laser mit den folgenden Spezifikationen ausgestattet ist.

Class: IIIb (3b) AlGaInP

Nominal output power (milliwatts): 25

Wavelength (nanometers): 775–800

Conventions

Note: A *note* identifies information that could help you.


Warning: A *warning* identifies something that could damage the product hardware or software.

CAUTION: A *caution* indicates a potentially hazardous situation that could injure you.


Different types of caution statements include:

 **CAUTION—POTENTIAL INJURY:** Indicates a risk of injury.

 **CAUTION—SHOCK HAZARD:** Indicates a risk of electrical shock.

 **CAUTION—HOT SURFACE:** Indicates a risk of burn if touched.

 **CAUTION—TIPPING HAZARD:** Indicates a crush hazard.

 **CAUTION—PINCH HAZARD:** Indicates a risk of being caught between moving parts.

Conventions

Remarque : Une *Remarque* fournit des informations pouvant vous être utiles.

Avertissement : Un *Avertissement* signale un danger susceptible d'endommager le logiciel ou le matériel.

ATTENTION : La mention *Attention* vous signale un risque de blessure corporelle.


Il existe différentes mises en garde :

 **ATTENTION—RISQUE DE BLESSURE :** Signale un risque de blessure.

 **ATTENTION—RISQUE D'ELECTROCUTION :** Signale un risque d'électrocution.

 **ATTENTION—SURFACE CHAUDE :** Signale un risque de brûlure de contact.

 **ATTENTION—RISQUE DE BASCULEMENT :** Signale un risque d'écrasement.

 **ATTENTION : RISQUE DE PINCEMENT :** Signale un risque de pincement entre des pièces mobiles.

Convenciones

Nota: Las *notas* señalan información que puede serle útil.


Aviso: Las *advertencias* indican algo que podría dañar el software o el hardware del producto.


PRECAUCIÓN: Las *precauciones* indican una situación de posible peligro que puede implicar lesiones para el usuario.

Estos son los tipos de avisos de precaución que existen:

 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** Indica que existe riesgo de lesiones.

 **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Indica que existe riesgo de descarga eléctrica.

 **PRECAUCIÓN: SUPERFICIE CALIENTE:** Indica que existe riesgo de sufrir quemaduras por contacto.

 **PRECAUCIÓN: RIESGO DE CAÍDA:** Indica que existe peligro de aplastamiento.

 **PRECAUCIÓN: PELIGRO DE ATRAPAMIENTO:** Existe riesgo de atrapamiento entre las piezas en movimiento.

Konventionen

Hinweis: Ein *Hinweis* enthält nützliche Informationen.


Warnung: Durch eine *Warnung* werden Sie auf einen Umstand hingewiesen, durch den die Produkthardware oder -software beschädigt werden könnte.

VORSICHT: *Vorsicht* weist auf eine mögliche gefährliche Situation hin, die ein Verletzungsrisiko birgt.


Verschiedene Vorsichtshinweise:

 **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Weist auf ein Verletzungsrisiko hin.

 **VORSICHT – STROMSCHLAGGEFAHR:** Weist auf das Risiko eines elektrischen Schlags hin.

 **VORSICHT – HEISSE OBERFLÄCHE:** Weist auf das Risiko von Verbrennungen bei Berührung hin.


 **VORSICHT – KIPPGEFAHR:** Weist auf Quetschgefahr hin.


 **VORSICHT – QUETSCHGEFAHR:** Weist auf das Risiko hin, zwischen beweglichen Komponenten eingequetscht zu werden.


Safety information


- The safety of this product is based on testing and approvals of the original design and specific components. The manufacturer is not responsible for safety in the event of use of unauthorized replacement parts.
- The maintenance information for this product has been prepared for use by a professional service person and is not intended to be used by others.


- There may be an increased risk of electrical shock and personal injury during disassembly and servicing of this product. Professional service personnel should understand this risk and take necessary precautions.


 **CAUTION—SHOCK HAZARD:** When you see this symbol on the product, there is a danger from hazardous voltage in the area of the product where you are working. Unplug the product before you begin, or use caution if the product must receive power in order to perform the task.

 **CAUTION—POTENTIAL INJURY:** To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

 **CAUTION—POTENTIAL INJURY:** To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.


 **CAUTION—POTENTIAL INJURY:** Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or UPS devices. The power capacity of these types of accessories can be easily overloaded by a laser printer and may result in a risk of fire, property damage, or poor printer performance.


 **CAUTION—POTENTIAL INJURY:** Only a Lexmark Inline Surge Protector that is properly connected between the printer and the power cord provided with the printer may be used with this product. The use of non-Lexmark surge protection devices may result in a risk of fire, property damage, or poor printer performance.


 **CAUTION—POTENTIAL INJURY:** If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.


Consignes de sécurité


- La sécurité de ce produit est basée sur des tests et certifications de sa conception d'origine et de ses composants spécifiques. Le fabricant décline toute responsabilité en cas d'utilisation de pièces de rechange non autorisées.
- Les informations de maintenance de ce produit sont destinées à des professionnels qualifiés et ne sont pas conçues pour être utilisées par d'autres personnes.
- Il existe un risque potentiel de choc électrique et de blessures lors du démontage et de la maintenance de ce produit. Le personnel professionnel de maintenance doit comprendre les risques et prendre les précautions nécessaires.


 **ATTENTION—RISQUE D'ELECTROCUTION :** Ce symbole indique un danger lié à des niveaux de tension dangereux dans la zone du produit à manipuler. Débranchez le produit avant de commencer, ou agissez avec prudence si le produit doit être alimenté pour effectuer l'opération.

 **ATTENTION—RISQUE DE BLESSURE :** Pour éviter tout risque d'électrocution ou d'incendie, branchez le câble d'alimentation directement à une prise électrique répondant aux exigences requises et correctement mise à la terre, proche du produit et facile d'accès.

 **ATTENTION—RISQUE DE BLESSURE :** Pour éviter tout risque d'incendie ou d'électrocution, utilisez uniquement le câble d'alimentation fourni avec ce produit ou un câble de remplacement autorisé par le fabricant.


 **ATTENTION—RISQUE DE BLESSURE :** Ce produit ne doit pas être utilisé avec des rallonges, des barres multiprises, des rallonges multiprises ou des périphériques UPS. La capacité de ces types d'accessoires peut être facilement dépassée par une imprimante laser, d'où un risque de dégâts matériels, d'incendie ou de performances d'impression amoindries.


 **ATTENTION—RISQUE DE BLESSURE** : Utilisez uniquement un parasurtenseur correctement raccordé à l'imprimante et au câble d'alimentation fourni avec la machine. L'utilisation de parasurtenseurs non fabriqués par Lexmark comporte un risque d'incendie et de dégâts matériels, et peut amoindrir les performances de l'imprimante.


 **ATTENTION—RISQUE DE BLESSURE** : Si votre imprimante pèse plus de 20 kg (44 lb), l'intervention d'au moins deux personnes est nécessaire pour la soulever sans risque.


Información de seguridad


- La seguridad de este producto se basa en las pruebas y comprobaciones del diseño original y los componentes específicos. El fabricante no se hace responsable de la seguridad en caso de uso de piezas de repuesto no autorizadas.
- La información de mantenimiento de este producto se ha preparado para su uso por parte de un profesional de asistencia técnica y no está diseñada para su uso por parte de otros usuarios.
- Es posible que haya un mayor riesgo de descarga eléctrica y daños personales durante el desmontaje y el mantenimiento de este producto. El personal de asistencia profesional debe conocer este riesgo y tomar las precauciones necesarias.

 **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Cuando vea este símbolo en el producto, existe peligro de tensiones peligrosas en el área del producto en la que está trabajando. Desconecte el producto antes de empezar o tenga cuidado si el producto debe recibir alimentación a fin de realizar la tarea.

 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** Para evitar el riesgo de incendio o descarga eléctrica, conecte el cable de alimentación a una toma de corriente debidamente conectada a tierra con la potencia adecuada que se encuentre cerca del dispositivo y resulte fácilmente accesible.

 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** Para evitar el riesgo de incendio o descarga eléctrica, utilice exclusivamente el cable de alimentación que se suministra junto con este producto o el repuesto autorizado por el fabricante.

 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** No utilice este producto con cables alargadores, regletas de varias tomas, cables alargadores de varias tomas o sistemas de alimentación ininterrumpida. La potencia de este tipo de accesorios puede sobrecargarse fácilmente si se utiliza una impresora láser, lo que puede dar lugar a que el rendimiento de la impresora sea bajo, a daños materiales o a posibles incendios.







 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** Solo debe usarse con este producto un protector de sobretensión insertable Lexmark debidamente conectado entre la impresora y el cable de alimentación que con ella se suministra. El uso de protectores de sobretensión de marcas distintas a Lexmark puede dar lugar a que el rendimiento de la impresora sea bajo, a daños materiales o a posibles incendios.

 **PRECAUCIÓN: POSIBLES DAÑOS PERSONALES:** si el peso de la impresora es superior a 20 kg (44 lb), pueden ser necesarias dos o más personas para levantarla de forma segura.

Sicherheitshinweise

- Die Sicherheit dieses Produkts basiert auf Tests und Zulassungen des Originaldesigns und der spezifischen Komponenten. Sofern nicht autorisierte Ersatzteile eingesetzt werden, übernimmt der Hersteller keinerlei Verantwortung in Bezug auf die Sicherheit dieses Produkts.
- Die Wartungsinformationen für dieses Produkt wurden für ausgebildete Servicemitarbeiter zusammengestellt und dürfen nicht von anderen verwendet werden.

- Möglicherweise besteht bei der Demontage und Wartung dieses Produkts eine erhöhte Stromschlag- und Verletzungsgefahr. Ausgebildete Servicemitarbeiter sollten sich dieser Gefahr bewusst sein und die notwendigen Vorsichtsmaßnahmen ergreifen.

-  **VORSICHT – STROMSCHLAGGEFAHR:** Wenn Sie dieses Symbol sehen, besteht eine Gefahr durch gefährliche Spannungen in dem Produktbereich, in dem Sie arbeiten. Trennen Sie das Produkt von seiner Stromverbindung, bevor Sie beginnen, oder gehen Sie vorsichtig vor, wenn das Produkt für die Durchführung der Aufgabe mit Strom versorgt werden muss.
-  **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Um Feuer- und Stromschlaggefahr zu vermeiden, schließen Sie das Netzkabel direkt an eine ordnungsgemäß geerdete Steckdose an, die sich in der Nähe des Geräts befindet und leicht zugänglich ist.
-  **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Um das Risiko eines Feuers oder elektrischen Schlags zu vermeiden, verwenden Sie ausschließlich das diesem Produkt beiliegende Netzkabel bzw. ein durch den Hersteller zugelassenes Ersatzkabel.
-  **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Verwenden Sie das Produkt nicht mit Verlängerungskabeln, Mehrfachsteckdosen, Mehrfachverlängerungen oder Geräten für unterbrechungsfreie Stromversorgung. Die Belastbarkeit solcher Zubehörteile kann durch Laserdrucker schnell überschritten werden, was zu Brandgefahr, Beschädigung von Eigentum oder einer eingeschränkten Druckerleistung führen kann.
-  **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Mit diesem Produkt darf nur ein Lexmark Inline Surge Protector verwendet werden, der vorschriftsgemäß zwischen dem Drucker und dem mitgelieferten Netzkabel angeschlossen ist. Die Verwendung von nicht von Lexmark stammenden Überspannungsschutzgeräten kann zu Brandgefahr, Beschädigung von Eigentum oder einer eingeschränkten Druckerleistung führen.
-  **VORSICHT – MÖGLICHE VERLETZUNGSGEFAHR** Wenn der Drucker mehr als 20 kg wiegt, sind zum sicheren Anheben mindestens zwei Personen notwendig.

Change history

Change history

November 5, 2020

- Updated the description of PN 41X2860 in the Parts catalog chapter.

October 23, 2020

- Added the False bin full error service check in the Diagnostics and troubleshooting chapter.
- Added the Bin full sensor actuator removal topic in the Parts removal chapter.

September 29, 2020

- Updated the Using Safe Mode topic in the Diagnostics and troubleshooting chapter.

September 7, 2020

- Updated the Critical information for controller board or control panel replacement topic in the Parts removal chapter.
- Updated the 938–992 error messages table in the Diagnostics and troubleshooting chapter.
- Added the NVRAM mismatch failure service check topic in the Diagnostics and troubleshooting chapter.

August 3, 2020

- Removed the following topics in the Parts removal chapter:
 - Restoring the printer configuration after replacing the controller board
 - Restoring solutions, licenses, and configuration settings

June 8, 2020

- Added the Entering Recovery Mode topic in the Service menus chapter.

May 18, 2020

- Added the following topics in the Diagnostics and troubleshooting chapter:
 - Base printer symptoms
 - Tray near empty service check
- Added PN 41X2860 in the Parts catalog chapter.
- Added the printer model MS439dn.

May 12, 2020

- Updated the description of the following parts in the Electronics topic in the Parts catalog chapter:
 - PN 41X2655
 - PN 41X2656
 - PN 41X2861

April 14, 2020

- First release.

General information

Printer model configurations

The Lexmark MS331, Lexmark B3340, Lexmark MS431, Lexmark MS439, and Lexmark B3442 printers are small, monochrome, network-capable, laser printers.

Model	Configurations	Machine type/model
MS331dn	Network-ready monochrome laser printer with 2-line LCD display, 40 ppm, 10/100 Ethernet, and internal duplex printing for small workgroups.	4601-230
B3340dw	Network-ready monochrome laser printer with 2-line LCD display, 40 ppm, wireless, 10/100 Ethernet, and internal duplex printing for small workgroups.	4601-280
MS431dw B3442dw	Network-ready monochrome laser printer with 2-line LCD display, 42 ppm, wireless, 10/100 Ethernet, and internal duplex printing for small workgroups.	4601-480
MS431dn MS439dn	Network-ready monochrome laser printer with 2-line LCD display, 42 ppm, Gigabit Ethernet, and internal duplex printing for small workgroups.	4601-4a0

Supported paper sizes, types, and weights

Supported paper sizes

Paper size	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing
A4 210 x 297 mm (8.27 x 11.7 in.)	✓	✓	✓	✓
A5 Portrait (SEF) 148 x 210 mm (5.83 x 8.27 in.)	✓	✓	✓	X
A5 Landscape (LEF)¹ 210 x 148 mm (8.27 x 5.83 in.)	✓	✓	✓	X

¹ The default support is long-edge feed.

² Paper must at least be 210 mm (8.27in.) wide and 279.4 mm (11 in.) long for two-sided printing.

³ When Universal is selected, the page is formatted for 215.90 x 355.60 mm (8.5 x 14 in.) unless specified by the application.

Paper size	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing
A6 105 x 148 mm (4.13 x 5.83 in.)	✓	✓	✓	X
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	✓	✓	✓	X
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	✓	✓	✓	✓
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	✓	X	✓	X
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	✓	✓	✓	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	✓	✓	✓	X
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	✓	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	✓	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	✓	✓	✓	✓
Universal³ 99 x 148 mm to 215.9 x 359.92 mm (3.9 x 5.83 in. to 8.5 x 14.17 in.)	✓	✓	✓	✓ ²
7 3/4 Envelope 98.4 x 190.5 mm (3.875 x 7.5 in.)	X	X	✓	X

¹ The default support is long-edge feed.

² Paper must at least be 210 mm (8.27in.) wide and 279.4 mm (11 in.) long for two-sided printing.

³ When Universal is selected, the page is formatted for 215.90 x 355.60 mm (8.5 x 14 in.) unless specified by the application.

Paper size	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing
9 Envelope 98.4 x 225.4 mm (3.875 x 8.9 in.)	X	X	✓	X
10 Envelope 104.8 x 241.3 mm (4.12 x 9.5 in.)	X	X	✓	X
DL Envelope 110 x 220 mm (4.33 x 8.66 in.)	X	X	✓	X
C5 Envelope 162 x 229 mm (6.38 x 9.01 in.)	X	X	✓	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	X	X	✓	X
Other Envelope 98.4 x 162 mm to 176 x 250 mm (3.87 x 6.38 in. to 6.93 x 9.84 in.)	X	X	✓	X

¹ The default support is long-edge feed.

² Paper must at least be 210 mm (8.27in.) wide and 279.4 mm (11 in.) long for two-sided printing.

³ When Universal is selected, the page is formatted for 215.90 x 355.60 mm (8.5 x 14 in.) unless specified by the application.

Supported paper types

Paper type	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing
Plain paper	✓	✓	✓	✓
Card stock	X	X	✓	X
Recycled	✓	✓	✓	✓
Paper labels*	✓	✓	✓	X

* One-sided paper labels are supported for occasional use of less than 20 pages per month. Vinyl, pharmacy, or two-sided labels are not supported.

Paper type	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing
Bond	✓	✓	✓	✓
Letterhead	✓	✓	✓	✓
Preprinted	✓	✓	✓	✓
Colored Paper	✓	✓	✓	✓
Light Paper	✓	✓	✓	✓
Heavy Paper	✓	✓	✓	✓
Rough/Cotton	✓	✓	✓	✓
Envelope	X	X	✓	X
Rough envelope	X	X	✓	X

* One-sided paper labels are supported for occasional use of less than 20 pages per month. Vinyl, pharmacy, or two-sided labels are not supported.

Supported paper weights

	Standard 250-sheet tray	Optional 550-sheet tray	Multipurpose feeder	Two-sided printing
Paper weight	60–120 g/m ² (16–32 lb)	60–120 g/m ² (16–32 lb)	60–217 g/m ² (16–58 lb)	60–90 g/m ² (16–24 lb)







Tools required for service

- Flat-blade screwdrivers, various sizes
- #1 Phillips screwdriver, magnetic
- #2 Phillips screwdriver, magnetic
- #2 Phillips screwdriver, magnetic short-blade
- Torx screwdriver (T20 head)
- Needle-nose pliers
- Diagonal side cutters
- Spring hook







- Feeler gauges
- Analog or digital multimeter
- 3-mm ball hex wrench
- Toner vacuum
- Flashlight

Diagnostics and troubleshooting







Troubleshooting precautions

-  **CAUTION—SHOCK HAZARD:** When you see this symbol on the product, there is a danger from hazardous voltage in the area of the product where you are working. Unplug the product before you begin, or use caution if the product must receive power in order to perform the task.
-  **CAUTION—SHOCK HAZARD:** This product uses an electronic power switch. It does not physically disconnect the input AC voltage. To avoid the risk of electrical shock, always remove the power cord from the printer when removal of the input AC voltage is required.
-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock while troubleshooting with covers removed or doors open, do not touch the exposed wires or circuits while the printer is connected to an electrical outlet.
-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock and to prevent damage to the printer, remove the power cord from the electrical outlet and disconnect all connections to any external devices before you connect or disconnect any cable, electronic board, or assembly.
-  **CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.
-  **CAUTION—PINCH HAZARD:** To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, doors, trays, and covers.






Précautions de dépannage

-  **ATTENTION—RISQUE D'ELECTROCUTION :** Ce symbole indique un danger lié à des niveaux de tension dangereux dans la zone du produit à manipuler. Débranchez le produit avant de commencer, ou agissez avec prudence si le produit doit être alimenté pour effectuer l'opération.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Ce produit utilise un commutateur d'alimentation électronique. Il ne déconnecte pas physiquement la tension d'alimentation CA. Pour éviter tout risque d'électrocution, débranchez toujours le cordon d'alimentation de l'imprimante lorsque vous devez déconnecter la tension d'alimentation CA.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Pour éviter tout risque d'électrocution lors du dépannage de l'imprimante avec les capots retirés ou les portes ouvertes, prenez garde de ne pas toucher les fils ou circuits dénudés si l'imprimante est connectée à une prise électrique.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Pour éviter tout risque d'électrocution et éviter d'endommager l'imprimante, débranchez le cordon d'alimentation de la prise électrique et déconnectez toute connexion à tout périphérique externe avant de brancher ou débrancher des câbles ou circuits et assemblages électroniques.
-  **ATTENTION—SURFACE CHAUDE :** L'intérieur de l'imprimante risque d'être brûlant. Pour réduire le risque de brûlure, laissez la surface ou le composant refroidir avant d'y toucher.
-  **ATTENTION : RISQUE DE PINCEMENT :** Pour éviter tout risque de blessure par pincement, agissez avec précaution au niveau des zones signalées par cette étiquette. Les blessures par pincement peuvent se produire autour des pièces mobiles telles que les engrenages, portes, tiroirs et capots.

Precauciones durante la solución de problemas

-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Cuando vea este símbolo en el producto, existe peligro de tensiones peligrosas en el área del producto en la que está trabajando. Desconecte el producto antes de empezar o tenga cuidado si el producto debe recibir alimentación a fin de realizar la tarea.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Este producto utiliza un interruptor de corriente electrónico. No desconecta físicamente la entrada de voltaje de CA. Para evitar el riesgo de descarga eléctrica, desenchufe siempre el cable de alimentación de la impresora cuando sea necesario retirar la entrada de voltaje de CA.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descarga eléctrica al solucionar problemas sin las cubiertas o con las puertas abiertas, no toque los cables ni los circuitos expuestos mientras la impresora está conectada a una toma de corriente.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descargas eléctricas y daños en la impresora, retire el cable de alimentación de la toma eléctrica y desconecte todas las conexiones a dispositivos externos antes de conectar o desconectar cualquier cable, placa electrónica o conjunto.
-  **PRECAUCIÓN: SUPERFICIE CALIENTE:** El interior de la impresora podría estar caliente. Para evitar el riesgo de heridas producidas por el contacto con un componente caliente, deje que la superficie se enfríe antes de tocarlo.
-  **PRECAUCIÓN: PELIGRO DE ATRAPAMIENTO:** Para evitar el riesgo de lesión por atrapamiento, preste atención en las áreas marcadas con esta etiqueta. Las lesiones por atrapamiento se pueden producir en torno a partes móviles, tales como engranajes, puertas, bandejas y cubiertas.

Vorsichtsmaßnahmen bei der Fehlerbehebung

-  **VORSICHT – STROMSCHLAGGEFAHR:** Wenn Sie dieses Symbol sehen, besteht eine Gefahr durch gefährliche Spannungen in dem Produktbereich, in dem Sie arbeiten. Trennen Sie das Produkt von seiner Stromverbindung, bevor Sie beginnen, oder gehen Sie vorsichtig vor, wenn das Produkt für die Durchführung der Aufgabe mit Strom versorgt werden muss.
-  **VORSICHT – STROMSCHLAGGEFAHR:** Dieses Produkt verwendet einen elektronischen Leistungsschalter. Er trennt die Eingangswchselspannung nicht physikalisch. Um das Risiko eines elektrischen Schlags zu vermeiden, ziehen Sie stets das Netzkabel vom Drucker ab, wenn eine Abtrennung der Eingangswchselspannung erforderlich ist.
-  **VORSICHT – STROMSCHLAGGEFAHR:** Um die Gefahr eines Stromschlags während der Fehlerbehebung bei entfernten Abdeckungen oder offenen Klappen zu vermeiden, berühren Sie die freiliegenden Drähte oder Stromkreise nicht, wenn der Drucker an eine Steckdose angeschlossen ist.
-  **VORSICHT – STROMSCHLAGGEFAHR:** Um das Risiko eines elektrischen Schlags und Schäden am Drucker zu vermeiden, ziehen Sie das Netzkabel aus der Steckdose und trennen Sie alle Verbindungen zu jeglichen externen Geräten, bevor Sie Kabel, Elektronikplatinen oder Baugruppen einstecken oder abziehen.
-  **VORSICHT – HEISSE OBERFLÄCHE:** Das Innere des Druckers kann sehr heiß sein. Vermeiden Sie Verletzungen, indem Sie heiße Komponenten stets abkühlen lassen, bevor Sie ihre Oberfläche berühren.



VORSICHT – QUETSCHGEFAHR: Um das Risiko einer Quetschung zu vermeiden, gehen Sie in Bereichen, die mit diesem Etikett gekennzeichnet sind, mit Vorsicht vor. Quetschungen können im Bereich von beweglichen Komponenten auftreten, wie z. B. Zahnrädern, Klappen, Fächern und Abdeckungen.

Troubleshooting overview

Performing the initial troubleshooting check

- With the power cord unplugged from the electrical outlet, check if the cord is free from breakage, short circuits, disconnected wires, or incorrect connections.
- Make sure that the printer is properly grounded.
- Make sure that the power supply line voltage is within 10% of the rated line voltage.
- Make sure that the printer is securely installed on a level surface in a well-ventilated area.
- Make sure that the temperature and relative humidity are within the specifications. See [“Temperature information” on page 165](#).
- Avoid locations that:
 - Generate ammonia gas
 - Are exposed to direct sunlight
 - Are near open flames
 - Are dusty
- Make sure that the recommended paper for this printer is used.
- Do a test print with paper from a newly opened package, and then check the result.

Using Safe Mode

Safe Mode lets the printer continue to operate in a special limited mode in which it attempts to continue offering as much functionality as possible despite known issues.

Notes:

- When in Safe Mode, the printer only prints in simplex mode from tray 1 at the slowest operating point.
- This setting cannot be used if the sensor (tray present) is damaged.


Warning—Potential Damage: Safe Mode is intended as a short-term workaround and must be used only in the case of a non-critical error when a print job must be completed before service can be arranged to repair the printer. The printer must be returned to standard operating mode before diagnostics can be run or full-function printing can continue.

Enter Safe Mode from the Configuration menu, and then POR the printer. See [“Config Menu” on page 98](#).

Return the printer to standard operating mode to service the printer and return to full-function printing.

Fixing print quality issues

Gray background or toner fog check

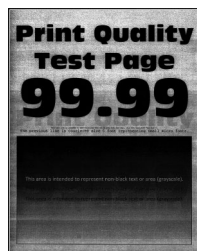


Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>a Remove any packing material left on the imaging unit.</p> <p>Note: You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>b Make sure that there are no obstructions between the charge roller and photoconductor drum.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2</p> <p>a Turn off the printer, wait for 10 seconds, and then turn on the printer.</p> <p>b Set the toner darkness to a lighter setting.</p> <p>From the control panel, navigate to Settings > Print > Quality > Toner Darkness.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p>Step 4</p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p>Step 5 Remove any packing material left on the imaging unit.</p> <p>Note: You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6 Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p>Step 8 Replace the HVPS. See “HVPS removal” on page 120.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

 Blank page check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25.](#)

Action	Yes	No
<p>Step 1 Verify that the toner cartridge is not empty.</p> <p>Is the toner cartridge empty?</p>	Go to step 2.	Go to step 3.
<p>Step 2 Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>a Remove any packing material left on the imaging unit.</p> <p>Note: You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>b Firmly shake the imaging unit to redistribute the toner, and then insert it.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>a Make sure that the transfer roller is properly installed.</p> <p>b Check the transfer roller for contamination and damage.</p> <p>Is the transfer roller free of contamination and damage?</p>	Go to step 9.	Go to step 7.
<p>Step 7 Remove, and then install the transfer roller. See “Transfer roller removal” on page 129.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p>Step 8 Replace the transfer roller.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.

Action	Yes	No
<p>Step 9</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p>Step 10</p> <p>Replace the HVPS. See “HVPS removal” on page 120.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p>Step 11</p> <p>Replace the printhead. See “Printhead removal” on page 135.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Print is too dark check




Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25.](#)

Action	Yes	No
<p>Step 1</p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.

Action	Yes	No
<p>Step 3</p> <p>a Remove any packing material left on the imaging unit.</p> <p>Note: You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>b Make sure that there are no obstructions between the charge roller and photoconductor drum.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>a Turn off the printer, wait for 10 seconds, and then turn on the printer.</p> <p>b Set the toner darkness to a lighter setting.</p> <p>From the control panel, navigate to Settings > Print > Quality > Toner Darkness.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>Replace the HVPS. See “HVPS removal” on page 120.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Print is too light check

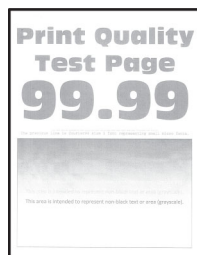

Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1 Check if the toner cartridge is empty or if it has reached its end of life.</p> <p>Is the toner cartridge empty or has reached its end of life?</p>	Go to step 2.	Go to step 3.
<p>Step 2 Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>a Turn off the printer, wait for 10 seconds, and then turn on the printer.</p> <p>b Do the following:</p> <ol style="list-style-type: none"> 1 Set the toner darkness to a darker setting. From the control panel, navigate to Settings > Print > Quality > Toner Darkness. 2 Set the paper type, texture, and weight to match the paper loaded. From the control panel, navigate to Settings > Paper > Media Configuration > Media Types. <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.

Action	Yes	No
<p>Step 6</p> <p>a Remove the imaging unit.</p> <p>b Push either side of the transfer roller, and then check if it depresses and bounces back into place.</p> <p>c If the transfer roller does not depress and bounce back into place, then reinstall the transfer roller.</p> <p>d Firmly shake the toner cartridge to redistribute the toner, and then insert it.</p> <p>e Turn off the printer, wait for 10 seconds, and then turn on the printer.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>a Make sure that the transfer roller is properly installed.</p> <p>b Check the transfer roller for contamination and damage.</p> <p>Is the transfer roller free of contamination and damage?</p>	Go to step 9.	Go to step 8.
<p>Step 8</p> <p>Reinstall or replace the transfer roller. See “Transfer roller removal” on page 129.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p>Step 9</p> <p>Replace the imaging unit. See “Transfer roller removal” on page 129.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p>Step 10</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p>Step 11</p> <p>Replace the HVPS. See “HVPS removal” on page 120.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Paper curl check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1 Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Check if the printer is using a genuine and supported Lexmark fuser.</p> <p>Is the printer using a genuine and supported Lexmark fuser?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Insert a genuine and supported Lexmark fuser.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 Make sure that the paper guide setting matches the size of the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.

Action	Yes	No
<p>Step 6</p> <p>Set the paper type, texture, and weight to match the paper loaded.</p> <p>From the control panel, navigate to Settings > Paper > Media Configuration > Media Types.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>a Make sure that the paper loaded is from a fresh package.</p> <p>Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.</p> <p>b Make sure that the printer supports the paper loaded.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Folded or wrinkled paper check




Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).


Action	Yes	No
<p>Step 1</p> <p>a Check if the printer is using a non-Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>b Make sure that the toner cartridge is compatible with the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2</p> <p>a Check if the paper loaded is from a fresh package.</p> <p>Note: Paper absorbs moisture due to high humidity. Store paper in its original wrapper until you use it.</p> <p>b Make sure that the printer supports the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.

Action	Yes	No
<p>Step 3</p> <p>a Check the toner cartridge for leaks.</p> <p>b Using an approved toner vacuum, completely remove the stray toner from the printer, toner cartridge, and imaging unit.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>a Remove the fuser. See “Fuser removal” on page 133.</p> <p>b Make sure that the fuser entry guide is free of waste toner and dust.</p> <p>Warning—Potential Damage: Clean the fuser entry guide with a toner vacuum and cloth. Do not use compressed air.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Replace the fuser.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

 Solid black pages check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a Remove any packing material left on the imaging unit.</p> <p>Note: You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>b Check the charge roller contact on the right side of the imaging unit for damage and contamination.</p>  <p>Is the charge roller contact free of damage and contamination?</p>	Go to step 6.	Go to step 4.
<p>Step 4</p> <p>a Perform a POR.</p> <p>b Perform a print test.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.

Action	Yes	No
<p>Step 6</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the HVPS1 cable on the controller board and HVPS is properly connected.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>Replace the HVPS. See “HVPS removal” on page 120.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Skewed print check




Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25.](#)

Action	Yes	No
<p>Step 1</p> <p>Check the guides in the tray where the skewed prints are printed from.</p> <p>Note: If the paper source is the MPF, then proceed to step 6.</p> <p>Does the position of the guides match the paper loaded?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Adjust the guides to match the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>Check if the printer supports the paper loaded.</p> <p>Is the paper supported?</p>	Go to step 5.	Go to step 4.

Action	Yes	No
<p>Step 4 Remove the paper, and then load a supported one.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 Perform a print test.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6 Check the guides in the MPF tray.</p> <p>Does the position of the guides match the paper loaded?</p>	Go to step 8.	Go to step 7.
<p>Step 7 Adjust the guides to match the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p>Step 8 Make sure that the printer supports the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p>Step 9 Check the MPF pick roller for excess wear and contamination.</p> <p>Is the MPF pick roller free from excess wear and contamination?</p>	Go to step 11.	Go to step 10.
<p>Step 10 Replace the front door with MPF pick roller. See “Front door removal” on page 128.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p>Step 11 Reinstall or replace the transfer roller. See “Transfer roller removal” on page 129.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.
<p>Step 12 Replace the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Streaked vertical lines appear on prints during a print job check

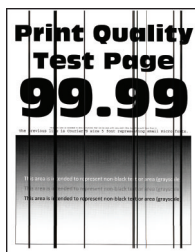

Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>a Make sure that the printer is not placed in a cold and damp area.</p> <p>b Print 15 simplex pages to dry the transfer roller.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2</p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 4.	Go to step 3.
<p>Step 3</p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Check the status of the imaging unit.</p> <p>Is the imaging unit near its end of life?</p>	Go to step 6.	Go to step 5.
<p>Step 5</p> <p>Remove, and then insert the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Horizontal light bands check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1 Check if the banding is along the edge of the paper.</p> <p>Is the banding along the edge of the paper?</p>	Go to step 2.	Go to step 3.
<p>Step 2 Replace the fuser. See “Fuser removal” on page 133.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Check if the toner cartridge is empty or if it has reached its end of life.</p> <p>Is the toner cartridge empty or has reached its end of life?</p>	Go to step 4.	Go to step 5
<p>Step 4 Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Contact the next level of support.	Go to step 6.
<p>Step 6 Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.


Vertical light bands check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1 Check if the banding is along the edge of the paper.</p> <p>Is the banding along the edge of the paper?</p>	Go to step 2.	Go to step 3.
<p>Step 2 Replace the fuser. See “Fuser removal” on page 133.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <ul style="list-style-type: none"> a Remove the imaging unit. b Clean the printhead laser glass window with a soft cloth. <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Vertical dark bands check

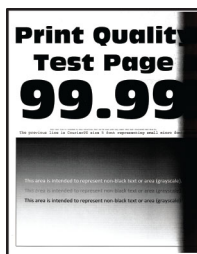


Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>Check if the banding is along the edge of the paper.</p> <p>Is the banding along the edge of the paper?</p>	Go to step 2.	Go to step 3.
<p>Step 2</p> <p>Replace the fuser. See “Fuser removal” on page 133.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a Remove any packing material left on the imaging unit.</p> <p>Note: You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>b Make sure that there are no obstructions between the charge roller and photoconductor drum.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 6.	Go to step 5.
<p>Step 5</p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.


Action	Yes	No
<p>Step 6 Remove, and then insert the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Vertical dark streaks with print missing check

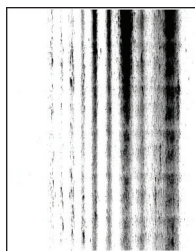

Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1 Check if the toner cartridge is empty or if it has reached its end of life.</p> <p>Is the toner cartridge empty or has reached its end of life?</p>	Go to step 2.	Go to step 3.
<p>Step 2 Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p>Step 5</p> <p>a Remove any packing material left on the imaging unit.</p> <p>Note: You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>b Check the charge roller contact on the right side of the imaging unit for damage and contamination.</p>  <p>Is the charge roller contact free of damage and contamination?</p>	Contact the next level of support.	Go to step 6.
<p>Step 6</p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.


White streaks and voided areas check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1 Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a Perform a POR. b Perform a print test.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4 Check the status of the imaging unit.</p> <p>Is the imaging unit near its end of life?</p>	Go to step 5.	Contact the next level of support.
<p>Step 5 Replace the imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Clipped pages or images check

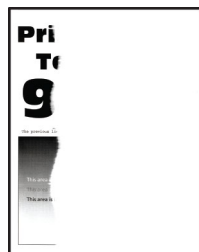

Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>a Remove any packing material left on the imaging unit.</p> <p>Note: You may need a pair of pliers to remove pieces of plastic inside the imaging unit.</p> <p>b Make sure that there are no obstructions between the charge roller and photoconductor drum.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2</p> <p>Remove, and then insert the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 5.	Go to step 4.
<p>Step 4</p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Remove, and then insert the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>a Remove the imaging unit.</p> <p>b Clean the printhead laser glass window with a soft cloth.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.


Incorrect margins on prints check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>Adjust the guides in the tray to match the size of the paper loaded.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2</p> <p>Do either of the following:</p> <ul style="list-style-type: none"> Set the paper size to match the paper loaded in the tray. Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Printer registration adjustments Change the paper loaded in the tray to match the paper size set in the tray. <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Toner rubs off check

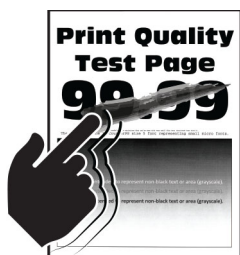

Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>Set the paper type, texture, and weight to match the paper loaded.</p> <p>From the control panel, navigate to Settings > Paper > Media Configuration > Media Types.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Remove, and then install the fuser. See “Fuser removal” on page 133.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Replace the fuser.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Toner specks appear on prints during a print job check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>Check if the printer is using a genuine and supported Lexmark toner cartridge.</p> <p>Note: If the printer is using a third-party cartridge, then refer the users to their cartridge supplier.</p> <p>Is the printer using a genuine and supported Lexmark toner cartridge?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Insert a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a From the control panel, navigate to Settings > Reports > Device > Device Statistics.</p> <p>b From the Supply Information section of the pages printed, check the status of the imaging unit.</p> <p>Is the imaging unit near its end of life or showing signs of toner leakage?</p>	Go to step 4.	Go to step 5.
<p>Step 4</p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Check if toner specks appear only on the edges or back side of the paper.</p> <p>Do toner specks appear only on the edges or back side of the paper?</p>	Go to step 6.	Go to step 7.
<p>Step 6</p> <p>Replace the transfer roller. See “Transfer roller removal” on page 129.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>Check the printer for stray toner contamination.</p> <p>Is the printer contaminated with stray toner?</p>	Go to step 8.	Contact the next level of support.
<p>Step 8</p> <p>Using an approved toner vacuum, completely remove the stray toner from the printer, toner cartridge, and imaging unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Repeating defects check



Note: Before performing this print quality check, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**, and then perform the initial print quality check. See [“Performing the initial troubleshooting check” on page 25](#).

Action	Yes	No
<p>Step 1</p> <p>Using the Print Quality Test Pages, check if the distance between the repeating defects is equal to any of the following:</p> <ul style="list-style-type: none"> • 37.7 mm (1.48 in.) • 96 mm (3.78 in.) <p>Does the distance between the repeating defects match any of the measurements?</p>	Go to step 2.	Go to step 3.
<p>Step 2</p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>Check if the distance between the repeating defects is equal to any of the following:</p> <ul style="list-style-type: none"> • 37.5 mm (1.48 in.) • 43.5 mm (1.71 in.) <p>Does the distance between the repeating defects match any of the measurements?</p>	Go to step 4.	Go to step 5.
<p>Step 4</p> <p>Replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Check if the distance between the repeating defects is equal to 52 mm (2.05 in.).</p> <p>Does the distance between the repeating defects match the measurement?</p>	Go to step 6.	Go to step 7.

Action	Yes	No
<p>Step 6 Replace the transfer roller. See “Transfer roller removal” on page 129.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7 Check if the distance between the repeating defects is equal to any of the following:</p> <ul style="list-style-type: none"> • 62.5 mm (2.46 in.) • 79.8 mm (3.14 in.) <p>Does the distance between the repeating defects match any of the measurements?</p>	Go to step 8.	Contact the next level of support.
<p>Step 8 Replace the fuser. See “Fuser removal” on page 133.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Paper jams

200 paper jams

200 paper jam messages

Error code	Description	Action
200.02	Paper fed from the MPF was detected earlier than expected at the sensor (input).	See “Sensor (input): Paper arrived too early jam service check” on page 52 .
200.04	Paper fed from the MPF cleared the sensor (input) earlier than expected.	See “Sensor (input): Paper cleared too early jam service check” on page 53 .
200.05	Paper fed from the MPF never cleared the sensor (input).	See “Sensor (input): Paper failed to clear jam service check” on page 56 .
200.06	Paper fed from the MPF was detected later than expected or was never detected at the sensor (input).	See “Sensor (input): Paper failed to arrive jam service check” on page 54 .
200.12	Paper fed from tray 1 was detected earlier than expected at the sensor (input).	See “Sensor (input): Paper arrived too early jam service check” on page 52 .
200.13	Paper fed from tray 1 was detected later than expected or was never detected at the sensor (input).	See “Sensor (input): Paper failed to arrive jam service check” on page 54 .
200.14	Paper fed from tray 1 cleared the sensor (input) earlier than expected.	See “Sensor (input): Paper cleared too early jam service check” on page 53 .

Error code	Description	Action
200.15	Paper fed from tray 1 never cleared the sensor (input).	See “Sensor (input): Paper failed to clear jam service check” on page 56.
200.22	Paper fed from tray 2 was detected earlier than expected at the sensor (input).	See “Sensor (input): Paper arrived too early jam service check” on page 52.
200.23	Paper fed from tray 2 was detected later than expected or was never detected at the sensor (input).	See “Sensor (input): Paper failed to arrive jam service check” on page 54.
200.24	Paper fed from tray 2 cleared the sensor (input) earlier than expected.	See “Sensor (input): Paper cleared too early jam service check” on page 53.
200.25	Paper fed from tray 2 never cleared the sensor (input).	See “Sensor (input): Paper failed to clear jam service check” on page 56.
200.91	Paper remains detected at the sensor (input) after the printer is turned on.	See “Sensor (input): Static jam service check” on page 58.

Sensor (input): Paper arrived too early jam service check

Action	Yes	No
<p>Step 1 Identify the source tray.</p> <p>Is MPF the source tray?</p>	Go to step 2.	Go to step 4.
<p>Step 2 <ul style="list-style-type: none"> a Make sure that the MPF pick roller is free of contamination. b Clean the MPF pick roller. </p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Replace the front door. See “Front door removal” on page 128.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.
<p>Step 4 Make sure that the paper is properly loaded in the tray.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 Make sure that each tray is free of paper fragments and partially fed paper.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.

Action	Yes	No
<p>Step 6</p> <p>a Make sure that the pick roller and separator roller are free from contamination.</p> <p>b Clean the pick roller and separator roller.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>a Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests</p> <p>b Find the sensor (input).</p> <p>c Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 9.	Go to step 8.
<p>Step 8</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p>Step 9</p> <p>Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Sensor (input): Paper cleared too early jam service check

Action	Yes	No
<p>Step 1</p> <p>a Remove the tray insert.</p> <p>b Make sure that the paper is properly loaded in the tray.</p> <p>c From the printer control panel or Printing Preferences or Print dialog, verify the paper size settings.</p> <p>Note: The tray has no size sensing mechanism. Manually set the paper size through the printer control panel or Printing Preferences or Print dialog.</p> <p>Does the paper size match the settings that you want?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Change the paper size or adjust the size setting in the tray.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.

Action	Yes	No
<p>Step 3</p> <p>a Make sure that the tray is not overfilled.</p> <p>b Make sure that the paper guides are not set too tight against the paper.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Check the tray for crumpled, damaged, or deformed paper.</p> <p>Are there crumpled, damaged, or deformed paper in the tray?</p>	Go to step 5.	Go to step 6.
<p>Step 5</p> <p>Replace the crumpled, damaged, or deformed paper.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>a Enter theDiagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests</p> <p>b Find the sensor (input).</p> <p>c Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 8.	Go to step 7.
<p>Step 7</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p>Step 8</p> <p>Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Sensor (input): Paper failed to arrive jam service check

Note: This service check is not applicable to tray 2.

Action	Yes	No
<p>Step 1</p> <p>a Remove the tray insert.</p> <p>b Make sure that the paper is properly loaded in the tray.</p> <p>c From the printer control panel or Printing Preferences or Print dialog, verify the paper size settings.</p> <p>Note: The tray has no size sensing mechanism. Manually set the paper size through the printer control panel or Printing Preferences or Print dialog.</p> <p>Does the paper size match the settings that you want?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Change the paper size or adjust the size setting in the tray.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a Make sure that the tray is not overfilled.</p> <p>b Make sure that the paper guides are not set too tight against the paper.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Check the tray for crumpled, damaged, or deformed paper.</p> <p>Are there crumpled, damaged, or deformed paper in the tray?</p>	Go to step 5.	Go to step 6.
<p>Step 5</p> <p>Replace the crumpled, damaged, or deformed paper.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>a Enter theDiagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests</p> <p>b Find the sensor (input).</p> <p>c Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 8.	Go to step 7.
<p>Step 7</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.

Action	Yes	No
<p>Step 8 Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Sensor (input): Paper failed to clear jam service check

Action	Yes	No
<p>Step 1</p> <p>a Remove the tray insert.</p> <p>b Make sure that the paper is properly loaded in the tray.</p> <p>c From the printer control panel or Printing Preferences or Print dialog, verify the paper size settings.</p> <p>Note: The tray has no size sensing mechanism. Manually set the paper size through the printer control panel or Printing Preferences or Print dialog.</p> <p>Does the paper size match the settings that you want?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Change the paper size or adjust the size setting in the tray.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a Make sure that the tray is not overfilled.</p> <p>b Make sure that the paper guides are not set too tight against the paper.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Check the tray for crumpled, damaged, or deformed paper.</p> <p>Are there crumpled, damaged, or deformed paper in the tray?</p>	Go to step 5.	Go to step 6.
<p>Step 5</p> <p>Replace the crumpled, damaged, or deformed paper.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>Identify the source tray.</p> <p>Is MPF the source tray?</p>	Go to step 7.	Go to step 9.

Action	Yes	No
<p>Step 7 Make sure that the MPF pick roller is free of contamination.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p>Step 8 Replace the front door. See “Front door removal” on page 128.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p>Step 9 Make sure that the pick roller is free of contamination.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p>Step 10</p> <ul style="list-style-type: none"> a Replace the pick roller. b Replace the separator roller. <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.
<p>Step 11</p> <ul style="list-style-type: none"> a Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests b Find the sensor (input). c Make sure that the sensor actuator freely moves and is not stuck. <p>Does the sensor status change while toggling the sensor?</p>	Go to step 13.	Go to step 12.
<p>Step 12</p> <ul style="list-style-type: none"> a Remove the right cover. See “Right cover removal” on page 117. b Make sure that the JMTR1 sensor cable is properly connected to the controller board. <p>Does the problem remain?</p>	Go to step 13.	The problem is solved.
<p>Step 13 Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Sensor (input): Static jam service check

Action	Yes	No
<p>Step 1 Check the paper path for paper fragments and partially fed paper.</p> <p>Is the paper path free of paper fragments and partially fed paper?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Remove the paper fragments and partially fed paper.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests</p> <p>b Find the sensor (input).</p> <p>c Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 5.	Go to step 4.
<p>Step 4</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

202 paper jams

202 paper jam messages

Error code	Description	Action
202.03	Paper fed from the MPF never arrived at the sensor (fuser exit).	See “Sensor (fuser exit): Paper failed to arrive jam service check” on page 59.
202.13	Paper fed from tray 1 never arrived at the sensor (fuser exit).	
202.23	Paper fed from tray 2 never arrived at the sensor (fuser exit).	
202.x4	Paper cleared the sensor (fuser exit) too soon.	See “Sensor (fuser exit): Paper cleared too early jam service check” on page 61.

Error code	Description	Action
202.05	Paper fed from the MPF never cleared the sensor (fuser exit).	See “Sensor (fuser exit): Paper failed to clear jam service check” on page 61.
202.15	Paper fed from tray 1 never cleared the sensor (fuser exit).	
202.25	Paper fed from tray 2 never cleared the sensor (fuser exit).	
202.91	Paper remains detected at the sensor (fuser exit) after the printer is turned on.	See “Sensor (fuser exit): Static jam service check” on page 63.
202.93	The sensor (fuser exit) detected a jam during or after a flush action.	
202.95	Paper fed from an unknown tray never cleared the sensor (fuser exit).	

Sensor (fuser exit): Paper failed to arrive jam service check

Action	Yes	No
<p>Step 1</p> <p>Check the fuser paper path for paper fragments and partially fed paper.</p> <p>Is the fuser paper path free of paper fragments and partially fed paper?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Remove the paper fragments and partially fed paper.</p> <p>Warning—Potential Damage: Do not remove any paper or paper fragments from the fuser using tools.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a Remove paper in the tray, flip it over, and then reload paper.</p> <p>b Resend the print job.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Replace the paper in the tray, and then resend the print job.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p>Step 5</p> <p>a Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests</p> <p>b Find the sensor (fuser exit).</p> <p>c Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 7.	Go to step 6.
<p>Step 6</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the JEXIT1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>a Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Motor tests</p> <p>b Find the main motor (forward).</p> <p>c Open the front door, remove the imaging unit, and then close the front door.</p> <p>d Activate the motor test.</p> <p>e Open the rear door, and then check if the fuser belt is properly rotating.</p> <p>Is the fuser belt properly rotating?</p>	Go to step 9.	Go to step 8.
<p>Step 8</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p>Step 9</p> <p>Replace the fuser. See “Fuser removal” on page 133.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p>Step 10</p> <p>Perform a print job.</p> <p>Does the problem remain?</p>	Go to step 11.	The problem is solved.

Action	Yes	No
<p>Step 11 Replace the main drive gears. See “Main drive gears removal” on page 110.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.
<p>Step 12 a Make sure that the metal shutter in the printer frame is not stuck. b Check the metal shutter for fuser entry.</p> <p>Does the metal shutter freely move?</p>	Contact the next level of support.	The problem is solved.

Sensor (fuser exit): Paper cleared too early jam service check

Action	Yes	No
<p>Step 1 Remove all paper from the bin.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2 Check the fuser exit area, rear door, and redrive area for jammed paper or paper fragments.</p> <p>Are there jammed paper or paper fragments?</p>	Go to step 3.	Contact the next level of support.
<p>Step 3 Remove the jammed paper or paper fragments.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Sensor (fuser exit): Paper failed to clear jam service check

Action	Yes	No
<p>Step 1 a Make sure that the fuser exit area, rear door, and redrive area are free of jammed paper or paper fragments b Make sure that the rear door can properly close. c Check the rear door for damage.</p> <p>Is the rear door functional and free of damage?</p>	Go to step 3.	Go to step 2.

Action	Yes	No
<p>Step 2</p> <p>a Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests</p> <p>b Find the sensor (fuser exit).</p> <p>c Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 5.	Go to step 3.
<p>Step 3</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the JEXIT1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Replace the rear door. See “Rear door removal” on page 132.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Replace the fuser. See “Fuser removal” on page 133.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>Check the redrive for damage.</p> <p>Is the redrive free of damage?</p>	Go to step 8.	Go to step 7.
<p>Step 7</p> <p>Replace the redrive. See “Redrive removal” on page 137.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p>Step 8</p> <p>Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Sensor (fuser exit): Static jam service check

Action	Yes	No
<p>Step 1 Remove paper fragments and partially fed paper.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2 a Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests b Find the sensor (fuser exit). c Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 4.	Go to step 3.
<p>Step 3 a Remove the right cover. See “Right cover removal” on page 117. b Make sure that the JEXIT1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4 Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

232 paper jams

232 paper jam messages

Error code	Description	Action
232.03	Paper fed from MPF was detected later than expected or was never detected at the sensor (input) during a duplex print job.	See “Sensor (input): Paper (duplex job) failed to arrive jam service check” on page 64.
232.13	Paper fed from tray 1 was detected later than expected or was never detected at the sensor (input) during a duplex print job.	
232.23	Paper fed from tray 2 was detected later than expected or was never detected at the sensor (input) during a duplex print job.	
232.05	Paper fed from the MPF never cleared the sensor (input) during a duplex print job.	
232.15	Paper fed from tray 1 never cleared the sensor (input) during a duplex print job.	
232.25	Paper fed from tray 2 never cleared the sensor (input) during a duplex print job.	
232.93	Paper fed from an unknown tray was detected later than expected or was never detected at the sensor (input) during a duplex print job.	
232.95	Paper fed from an unknown tray never cleared the sensor (input) during a duplex print job.	

Sensor (input): Paper (duplex job) failed to arrive jam service check

Action	Yes	No
<p>Step 1</p> <p>Remove all paper from the bin, and then resend the print job.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2</p> <p>Check the fuser access area for jammed paper and obstructions.</p> <p>Is the fuser access area free of jammed paper and obstructions?</p>	Go to step 4.	Go to step 3.
<p>Step 3</p> <p>Remove the jammed paper and obstructions.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.

Action	Yes	No
<p>Step 4</p> <p>Check the duplex path area for jammed paper and obstructions.</p> <p>Is the duplex path area free of jammed paper and obstructions?</p>	Go to step 6.	Go to step 5.
<p>Step 5</p> <p>Remove the jammed paper and obstructions.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>Check the duplex guide for proper installation.</p> <p>Is the duplex guide properly installed?</p>	Go to step 8.	Go to step 7.
<p>Step 7</p> <p>Reseat the duplex guide, and then make sure that it is properly closed.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p>Step 8</p> <p>Check the duplex guide for damage.</p> <p>Is the duplex guide free of damage?</p>	Go to step 10.	Go to step 9.
<p>Step 9</p> <p>Replace the duplex guide. See “Duplex guide removal” on page 140.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.
<p>Step 10</p> <p>a Enter the Diagnostics menu, and then navigate to: Printer diagnostics & adjustments > Sensor tests</p> <p>b Find the sensor (input).</p> <p>c Make sure that the sensor actuator freely moves and is not stuck.</p> <p>Does the sensor status change while toggling the sensor?</p>	Go to step 12.	Go to step 11.
<p>Step 11</p> <p>a Remove the right cover. See “Right cover removal” on page 117.</p> <p>b Make sure that the JMTR1 sensor cable is properly connected to the controller board.</p> <p>Does the problem remain?</p>	Go to step 12.	The problem is solved.

Action	Yes	No
<p>Step 12 Perform a print test.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

242 paper jams

242 paper jam messages

Error code	Description	Action
242.26	Paper fed from tray 2 was picked but it never reached the sensor (input).	See “Optional tray pick drive failure service check” on page 78.
242.80	Paper jam caused by the motor (tray 2) not turning on.	
242.81	Paper jam caused by the motor (tray 2) not turning off.	
242.82	Paper jam caused by the motor (tray 2) speed not ramping up to the required level.	
242.83	Paper jam caused by the motor (tray 2) stalling.	
242.84	Paper jam caused by the motor (tray 2) running too slow.	
242.85	Paper jam caused by the motor (tray 2) running too fast.	
242.86	Paper jam caused by the motor (tray 2) running too long.	

User attendance messages

User attendance messages

Error code	Description	Action
29.xx	Packing material present on supplies.	Remove the packing material from the supplies.
31.40	The toner cartridge is missing or unresponsive.	See “Unsupported or unresponsive toner cartridge service check” on page 68.
31.60	The imaging unit is missing or unresponsive.	See “Unsupported or unresponsive imaging unit service check” on page 69.
32.40	The toner cartridge is unsupported.	See “Unsupported or unresponsive toner cartridge service check” on page 68.
32.60	The imaging unit is unsupported.	See “Unsupported or unresponsive imaging unit service check” on page 69.

Error code	Description	Action
33.40	A non-Lexmark black toner cartridge was detected.	See “Unsupported or unresponsive toner cartridge service check” on page 68.
33.60		
41.60	The imaging unit and toner cartridge are mismatched or incompatible.	See “Mismatched supplies error service check” on page 70.
42.xx	The toner cartridge is incompatible due to printer region mismatch.	Install the correct toner cartridge for the region.
43.40	A toner cartridge sensor error was detected.	
80.0x	The remaining life of the fuser, pick roller, or transfer roller are nearly low.	See “Supplies low service check” on page 70.
80.1x	The remaining life of the fuser, pick roller, or transfer roller are low.	
80.2x	The remaining life of the fuser, pick roller, or transfer roller are very low.	
80.3x	The life of the fuser, pick roller, or transfer roller has ended.	
84.0x	The remaining life of the imaging unit is nearly low.	
84.1x	The remaining life of the imaging unit is low.	
84.2x	The remaining life of the imaging unit is very low.	
84.3x	The imaging unit life has ended.	
84.4x	The imaging unit life has ended. The printer forces a hard stop on the imaging unit.	
88.0x	The remaining life of the toner cartridge is nearly low.	
88.1x	The remaining life of the toner cartridge is low.	
88.2x	The remaining life of the toner cartridge is very low.	
88.3x	The toner cartridge life has ended.	
88.4x	The toner cartridge life has ended. The printer forces a hard stop on the toner cartridge.	

Unsupported or unresponsive toner cartridge service check

Action	Yes	No
<p>Step 1 Check whether the toner cartridge installed is genuine.</p> <p>Is the cartridge a genuine and supported Lexmark unit?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Install a genuine and supported Lexmark toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 a Check the toner cartridge contacts for contamination. b Check the toner cartridge for leaks and damage.</p> <p>Are the toner cartridge and its contacts free of contamination and damage?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Clean or replace the toner cartridge.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 Check the toner cartridge smart chip contacts for contamination.</p> <p>Are the contacts free of contamination?</p>	Go to step 7.	Go to step 6.
<p>Step 6 Clean the smart chip contact.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7 Reseat the smart chip contact cable on the controller board.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Unsupported or unresponsive imaging unit service check

Action	Yes	No
<p>Step 1 Check whether the imaging unit installed is genuine and supported by the printer model.</p> <p>Is the imaging unit a genuine and supported Lexmark unit?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Install a genuine and supported Lexmark imaging unit.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 a Check the imaging unit contacts for contamination. b Check the imaging unit for leaks and damage.</p> <p>Are the imaging unit and its contacts free of contamination and damage?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Clean or replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 a Check the imaging unit smart chip contacts for contamination. b Check if the contacts are bent or damaged.</p> <p>Are the contacts free of contamination and damage?</p>	Go to step 7.	Go to step 6.
<p>Step 6 Clean or repair the smart chip contact.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7 Reseat the smart chip contact cable on the controller board.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Mismatched supplies error service check

Action	Yes	No
<p>Step 1 Check whether the supplies installed are genuine and supported by the printer model.</p> <p>Are the supplies genuine and supported Lexmark units?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Install genuine and supported Lexmark units.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Replace the affected supply with the correct unit.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Supplies low service check

Action	Yes	No
<p>Step 1 Perform a print test on paper from a fresh package, and then check the result.</p> <p>Are there print quality defects on the test page?</p>	Go to step 2.	Go to step 3.
<p>Step 2 Identify, and then resolve the print quality defects. See “Fixing print quality issues” on page 26.</p> <p>Note: If a supply was replaced, then make sure that the maintenance kit counter is reset.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Perform a feed test to check if the printer has paper feed problems.</p> <p>Does the printer have a problem feeding paper during the test?</p>	Go to step 4.	Go to step 5.
<p>Step 4 Resolve the feed problem.</p> <p>Note: If a transfer roller was replaced, then make sure that the maintenance kit counter is reset.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.

Action	Yes	No
<p>Step 5</p> <p>Replace the affected part with a new one.</p> <ul style="list-style-type: none"> • Fuser • Pick roller • Transfer roller <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Printer hardware errors

111 errors

111 error messages

Error code	Description	Action
111.20	Printhead error (mirror motor lock) was detected before the motor was turned on.	See “Printhead service check” on page 72.
111.21	No printhead power (+5 V) when the laser servo started.	
111.30	The printhead failed during power-on tests.	
111.31	Printhead error (no first HSYNC) was detected.	
111.32	Printhead error (lost HSYNC) was detected.	
111.33	Printhead error (lost HSYNC) was detected during servo.	
111.34	Printhead error (mirror motor lost lock) was detected.	
111.35	Printhead error (mirror motor never got first lock) was detected.	
111.36	Printhead error (mirror motor lock never stabilized) was detected.	
111.37	Paper reached the sensor but the mirror motor was not locked.	
111.38	Paper reached the sensor (input) but the printhead startup was not complete.	
111.40	The wrong printhead is installed.	
111.91	Printhead error (bad facet time reading).	

Printhead service check

Action	Yes	No
<p>Step 1 Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2 a Make sure that the JVD01 and JMIR1 cables are properly connected on the controller board. b Check the cables for damage.</p> <p>Are the cables properly connected and free of damage?</p>	Go to step 4.	Go to step 3.
<p>Step 3 Replace the printhead. See “Printhead removal” on page 135.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4 Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 Replace the controller board. See “Controller board removal” on page 119.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

121 errors

121 error messages

Error code	Description	Action
121.00	Fuser did not reach the required temperature.	See “Fuser service check” on page 74.
121.02	Fuser went over the required temperature during EWC/line voltage detection.	
121.04	During an attempt to heat up, the fuser relay was open and the micro-controller was not reporting an error.	
121.05	During an attempt to heat up, the fuser relay was open and the micro-controller was reporting an error.	
121.10	Fuser did not reach the required temperature during the start of EWC/line voltage detection.	
121.11	Fuser reached the required temperature too late during the final EWC/line voltage detection.	
121.12	Fuser did not reach the required temperature during the final EWC/line voltage detection.	
121.13	Fuser reached the required temperature too fast during the final EWC/line voltage detection.	
121.14	Fuser is heating too fast.	
121.20	Fuser did not reach the required temperature during steady state control. This can occur during printing or in standby mode.	
121.22	Open fuser relay was detected.	
121.23	Fuser relay was turned off, but the feedback to the engine code indicated that it was still open.	
121.24	Fuser did not reach the required temperature during the final EWC/line voltage detection.	
121.28	Fuser did not reach the required temperature during EP warm-up.	
121.32	Fuser did not reach the required temperature at 100% power.	
121.33	Fuser did not reach the required temperature while page is in the fuser).	
121.34	Fuser did not reach the required temperature during steady state control.	
121.50	Fuser went over the required temperature during global over-temp check.	
121.52	Main thermistor temperature is out of range.	
121.53	Main thermistor temperature change rate is out of range.	
121.71	Open fuser main heater thermistor was detected.	

Fuser service check

Action	Yes	No
<p>Step 1 Make sure that the fuser is properly installed.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2 Check whether the fuser installed is genuine and supported by the printer model.</p> <p>Is the fuser a genuine and supported Lexmark unit?</p>	Go to step 3.	Go to step 5.
<p>Step 3 Check if the fuser type is compatible with the printer model.</p> <p>Are the fuser and printer compatible?</p>	Go to step 4.	Go to step 5.
<p>Step 4 Check the fuser life.</p> <p>Has the fuser reached its end of life?</p>	Go to step 5.	Go to step 6.
<p>Step 5 Replace the fuser. See “Fuser removal” on page 133.</p> <p>Note: Make sure that the new fuser is supported by the printer model.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6 Make sure that the voltage output of the electrical outlet matches the voltage rating of the printer.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7 Make sure that the JFUSER1 and JEXIT1 cables are properly connected on the controller board.</p> <p>Does the problem remain?</p>	Go to step 8.	The problem is solved.
<p>Step 8 Make sure that the high voltage cable is properly connected to the LVPS.</p> <p>Does the problem remain?</p>	Go to step 9.	The problem is solved.
<p>Step 9 Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 10.	The problem is solved.

Action	Yes	No
Step 10 Replace the LVPS. See “LVPS removal” on page 120. Does the problem remain?	Go to step 11.	The problem is solved.
Step 11 Replace the fuser. See “Fuser removal” on page 133. Does the problem remain?	Contact the next level of support.	The problem is solved.

126 errors

126 error messages

Error code	Description	Action
126.01	Line frequency has gone outside the operating range.	See “LVPS service check” on page 75.
126.02	No line frequency was detected.	
126.05	The LVPS power dropped but the printer was not in sleep mode.	
126.06	LVPS 25 V line error was detected.	
126.07	LVPS 5 V rail was down during power-on.	
126.10	No line frequency was detected.	
126.11	Line frequency exceeded the operating range.	
126.14	LVPS relay is stuck or closed.	

LVPS service check

Action	Yes	No
Step 1 Make sure that the printer is directly plugged into the electrical outlet. Does the problem remain?	Go to step 2.	The problem is solved.
Step 2 Make sure that the voltage output of the electrical outlet matches the voltage rating of the printer. Does the problem remain?	Go to step 3.	The problem is solved.

Action	Yes	No
<p>Step 3</p> <p>a Make sure that the PCN1 cable on the LVPS is properly connected.</p> <p>b Make sure that the JLVPS1 cable on the controller board is properly connected.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4</p> <p>Make sure that the voltage output of the electrical outlet matches the voltage rating of the LVPS.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Perform a POR.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6</p> <p>Replace the LVPS. See “LVPS removal” on page 120.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7</p> <p>Perform a POR.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

140 errors

140 error messages

Error code	Description	Action
140.80	Motor (main drive) does not turn on.	See “Motor (main drive) service check” on page 77 .
140.81	Motor (main drive) does not turn off.	
140.82	Motor (main drive) speed did not ramp up to the required level.	
140.83	Motor (main drive) stalled.	
140.85	Motor (main drive) ran too fast.	
140.86	Motor (main drive) ran too long.	

Motor (main drive) service check

Action	Yes	No
<p>Step 1</p> <p>a Remove the imaging unit.</p> <p>b Manually turn the photoconductor gear, and then check the cleaning blade for damage or failure.</p> <p>Does the photoconductor drum rotate?</p>	Go to step 3.	Go to step 2.
<p>Step 2</p> <p>Replace the imaging unit.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3</p> <p>a Make sure that the JMTR1 cable is properly connected to the controller board.</p> <p>b Check the cable for damage.</p> <p>Is the cable free of damage?</p>	Go to step 5.	Go to step 4.
<p>Step 4</p> <p>Replace the JMTR1 cable.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5</p> <p>Perform a POR.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

162 errors

162 error messages

Error code	Description	Action
162.80	The motor (tray 2 pick) does not turn on.	See “Optional tray pick drive failure service check” on page 78.
162.81	The motor (tray 2 pick) does not turn off.	
162.82	The motor (tray 2 pick) speed did not ramp up to the required level.	
162.83	The motor (tray 2 pick) stalled.	
162.84	The motor (tray 2 pick) ran too slow.	
162.85	The motor (tray 2 pick) ran too fast.	
162.86	The motor (tray 2 pick) ran too long.	

Optional tray pick drive failure service check

Action	Yes	No
<p>Step 1 Check if the optional tray motor (pick) runs.</p> <p>Does the motor run?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Reseat the motor cable, and then reseat the cable on the optional tray controller board.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 a Remove the optional tray. b Under the printer, check the interconnect cable for damage.</p> <p>Is the cable free of damage?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Insert the optional tray.</p> <p>Note: Make sure that the interconnect cable properly fits with the socket on the optional tray.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 a Remove the tray insert from the optional tray. b Check if the lift plate moves properly. c Check the lift plate gears for damage.</p> <p>Is the tray insert functional and free of damage?</p>	Contact the next level of support.	Go to step 6.
<p>Step 6 Replace the tray insert.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

6yy errors

600–680 error messages

Error code	Description	Action	
600.01	Toner tally from the RIP was not received.	Resend the print job. If the problem remains, then contact the next level of support.	
600.02	Video did not start.		
600.04	Duplex page was not picked.		
600.05	Invalid PH NVRAM Type error was detected.		
600.06	Paper port driver is unresponsive.		
600.07	Page is at image point before EP is ready.		
600.09	EP update error was detected.		
600.10	EP late run-in error was detected.		
600.11	Packing material was detected by the sensor (toner density).		Remove the imaging unit and toner cartridge, and then make sure that all packing material are properly removed.
600.95	RIP intentionally declared a jam error, usually to prevent a kiosk user from printing free pages.		Resend the print job. If the problem remains, then contact the next level of support.
602.29	Tray 2 was not ready for picking.	See “Optional tray pick drive failure service check” on page 78.	
611.02	An Input ISR error occurred and the printhead was not ready.	See “Printhead service check” on page 72.	
611.32	Lost Hsync errors were detected. Laser safety interlock system may be the cause.		
611.33	Lost Hsync errors were detected during servo.		
611.34	A mirror motor lock error was detected.		
611.35	Mirror motor never got first lock.		
611.36	Mirror motor lock never stabilized.		
611.37	Paper reached the sensor (input) but the mirror motor was not locked.		
611.38	Paper reached the sensor (input) but the printhead startup was not complete.		
621.01	Fuser heater was too cold when paper entered the fuser nip.	Resend the print job. If the problem remains, then contact the next level of support.	
640.84	The motor (main drive) stalled or ran too slow.	See “Motor (main drive) service check” on page 77.	

Error code	Description	Action
662.23	The tray 2 lift plate failed to lift.	See “Optional tray pick drive failure service check” on page 78.
662.80	Jam detection caused by motor (tray 2) not turning on.	
662.81	Jam detection caused by motor (tray 2) not turning off.	
662.82	Jam detection caused by motor (tray 2) speed not ramping up to the required level.	
662.83	Jam detection caused by motor (tray 2) stalling.	
662.84	Jam detection caused by motor (tray 2) running too slow.	
662.85	Jam detection caused by motor (tray 2) running too fast.	
662.86	Jam detection caused by motor (tray 2) running too long.	

Fuser overheated service check

Action	Yes	No
<p>Step 1</p> <p>a Allow fuser to cool for three minutes.</p> <p>b Resend the print job.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2</p> <p>Replace the fuser. See “Fuser removal” on page 133.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Procedure before starting the 9yy service checks

Retrieve certain information that helps your next level of support in diagnosing the problem before replacing the controller board.

Warning—Potential Damage: Do not replace the controller board unless instructed by your next level of support.

- 1 Collect the history information and firmware logs (Fwdebug and logs.tar.gz) from the SE menu.
- 2 Collect the settings from the Menu Settings Page.
- 3 Collect information from the user.

Note: Not all of the items are retrievable from the printer that you are working on.

A. Collecting the history information from the SE menu

Note: Make sure that your printer is connected to a network or to a print server.

- 1 Open a web browser, type **http://printer_IP_address/se**, and then press **Enter**.

Notes:

- **printer_IP_address** is the TCP/IP address of the printer.
- **se** is required to access the printer diagnostic information.

- 2 Click **History Information**, copy all information, and then save it as a text file.
- 3 E-mail the text file to your next level of support.

B. Collecting the firmware logs (Fwdebug and logs.tar.gz) from the SE menu

Notes:

- Make sure that your printer is connected to a network or to a print server.
- Some printers are designed to restart automatically after a 9yy error. On these printers, you can retrieve the secondary crash code information using the SE menu.

- 1 Open a web browser, type **http://printer_IP_address/se**, and then press **Enter**.
- 2 Click **Logs Gzip Compressed**.

Note: A logs.tar.gz file is saved to the Downloads folder. The file may take several minutes to save. You may rename the file if a logs.tar.gz already exists in the Downloads folder.

- 3 E-mail the logs to your next level of support.

Note: To download the FWdebug log to a flash drive, see [“General SE Menu” on page 99](#).

C. Collecting the settings from the Menu Settings Page

Note: The Menu Settings Page is different for each printer. For more information, see the printer *User's Guide*. Your next level of support will tell you which page they want to see.

Copying the Menu Settings Page from the Embedded Web Server (EWS)

Note: Make sure that your printer is connected to a network or to a print server.

- 1 Open a web browser, type **http://printer_IP_address**, and then press **Enter**.
- 2 Click Settings, and then select one of the settings pages from the links shown on the page.
- 3 Copy all the information, and then save it as a text file.
- 4 E-mail the text file to your next level of support.

Printing the Menu Settings Page

- 1 From the home screen, navigate to:
Settings > Reports > Menu Settings Page
- 2 E-mail the report to your next level of support.

D. Collecting information from the user

Ask the user for information about the following:

- Print job being run
- Operating system being used
- Print driver being used
- Other information on what was happening when the 9yy error occurred

912 errors

912 error messages

Error code	Description	Action
912.01	An engine error occurred.	Resend the print job. If the problem remains, then contact the next level of support.
912.02	An engine error occurred.	
912.04	An engine error occurred.	
912.05	An engine error occurred.	
912.06	An engine error occurred.	
912.07	An engine error occurred.	See “Optional tray communication error service check” on page 85.

Error code	Description	Action
912.08	An engine error occurred.	Resend the print job. If the problem remains, then contact the next level of support.
912.09	An engine error occurred.	
912.10	An engine error occurred.	
912.13	An engine error occurred.	
912.14	An engine error occurred.	
912.15	An engine error occurred.	
912.16	An engine error occurred.	
912.17	An engine error occurred.	
912.18	An engine error occurred.	
912.19	An engine error occurred.	
912.20	An engine error occurred.	
912.21	An engine error occurred.	
912.28	An engine error occurred.	
912.30	An engine error occurred.	
912.31	An engine error occurred.	
912.32	An engine error occurred.	
912.33	An engine error occurred.	
912.34	An engine error occurred.	
912.35	An engine error occurred.	
912.36	An engine error occurred.	
912.38	An engine error occurred.	See “Optional tray communication error service check” on page 85.

Error code	Description	Action
912.39	An engine error occurred.	Resend the print job. If the problem remains, then contact the next level of support.
912.40	An engine error occurred.	
912.42	An engine error occurred.	
912.43	An engine error occurred.	
912.44	An engine error occurred.	
912.45	An engine error occurred.	
912.46	An engine error occurred.	
912.48	An engine error occurred.	
912.49	An engine error occurred.	
912.51	An engine error occurred.	
912.52	An engine error occurred.	
912.53	An engine error occurred.	
912.54	An engine error occurred.	
912.55	An engine error occurred.	
912.56	An engine error occurred.	
912.57	An engine error occurred.	
912.58	An engine error occurred.	
912.60	An engine error occurred.	
912.61	An engine error occurred.	
912.64	An engine error occurred.	
912.65	An engine error occurred.	
912.66	An engine error occurred.	
912.69	An engine error occurred.	
912.70	An engine error occurred.	
912.72	An engine error occurred.	
912.73	An engine error occurred.	
912.74	An engine error occurred.	
912.75	An engine error occurred.	
912.77	An engine error occurred.	
912.86	An engine error occurred.	

Optional tray communication error service check

Action	Yes	No
<p>Step 1 Check the paper path and trays for paper fragments and partially fed paper.</p> <p>Is the paper path free of paper fragments and partially fed paper?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Remove the paper fragments and partially fed paper.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Make sure that all the trays and tray inserts are properly inserted.</p> <p>Does the problem remain?</p>	Go to step 4.	The problem is solved.
<p>Step 4 Enter the Diagnostics menu, and then select Input tray quick print. Perform a print test on the optional tray.</p> <p>Does the error occur in the optional tray?</p>	Go to step 5.	Contact the next level of support.
<p>Step 5</p> <ul style="list-style-type: none"> a Remove the optional tray. b Make sure that the interconnect cable of the tray is properly installed. c Check the interconnect cable and its connector pins for damage. d Make sure that the tray controller board is properly installed. e Reseat all the cables on the tray controller board. f Check the optional tray controller board and its connector pins for damage. <p>Are the tray interconnect cable and controller board free of damage?</p>	Contact the next level of support.	Go to step 6.
<p>Step 6 Replace the optional tray.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

938-992 errors

938–992 error messages

Error code	Description	Action
938.yy	Supplies security is not enabled.	Restart the printer. If the problem remains, then contact the next level of support.
950.10	Non-Generic FRU installed. Mismatch between system NVRAM part and mirror NVRAM part. Note: .xx points to the setting that does not match.	See “NVRAM mismatch failure service check” on page 86.
953.99	NVRAM chip failure with mirror part.	
980.yy	An option communication error occurred.	See “Optional tray communication error service check” on page 85.
981.yy	An invalid paper port protocol error occurred.	
982.yy	A paper port error occurred.	
983.yy	An unsupported paper port command error occurred.	
984.yy	An invalid paper port parameter error occurred.	
992.yy	An option device software error occurred.	

NVRAM mismatch failure service check

Warning—Potential Damage: To avoid NVRAM mismatch issues, replace only one of the following components at a time:

- Control panel
- Controller board

To replace a component and to test whether the problem is resolved:

- 1 Replace the affected component.

Warning—Potential Damage: Do not perform a Power-On Reset (POR) until the problem is resolved. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

- 2 Enter the Diagnostics menu. The Diagnostics menu allows you to use temporarily the replacement part.

Warning—Potential Damage: Some printers perform automatically a POR if the Diagnostics menu is not opened within five seconds. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

- 3 Use the Diagnostics menu to test the replacement part. Perform a feed test to check if the problem is resolved.
 - If the problem is not resolved—Turn off the printer, and then install the old part.
 - If the problem is resolved—Perform a POR.

Action	Yes	No
<p>Step 1 Check if the control panel was recently replaced.</p> <p>Was the control panel recently replaced?</p>	Go to step 2.	Go to step 4.
<p>Step 2 Replace the current control panel with the original control panel. See “Top cover removal” on page 134.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Replace the original control panel with a new control panel.</p> <p>Note: Make sure that the new control panel is not previously installed from another printer.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.
<p>Step 4 Check if the controller board was recently replaced.</p> <p>Was the controller board recently replaced?</p>	Go to step 5.	Contact the next level of support.
<p>Step 5 Replace the current controller board with the original controller board. See “Controller board removal” on page 119.</p> <p>Does the problem remain?</p>	Go to step 6.	The problem is solved.
<p>Step 6 Replace the original controller board with a new controller board.</p> <p>Note: Make sure that the new controller board is not previously installed from another printer.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Other symptoms

Base printer symptoms

Symptom	Action
A false tray paper low message appears.	See “Tray near empty service check” on page 88.
A false bin full message appears	See “False bin full error service check” on page 89.

Tray near empty service check

Action	Yes	No
<p>Step 1 Check the actuator in the tray insert for damage.</p> <p>Is the actuator free of damage?</p>	Go to step 3.	Go to step 2.
<p>Step 2 Replace the tray insert.</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 a Make sure that the sensor (tray near empty) is properly installed. b Check the sensor for damage.</p> <p>Is the sensor free of damage?</p>	Go to step 5.	Go to step 4.
<p>Step 4 Replace the sensor (tray near empty) assembly.</p> <p>Does the problem remain?</p>	Go to step 5.	The problem is solved.
<p>Step 5 a Make sure that the sensor cable is properly connected to the controller board. b Check the sensor cable for damage.</p> <p>Is the sensor cable free of damage?</p>	Go to step 7.	Go to step 6.
<p>Step 6 Replace the sensor cable.</p> <p>Does the problem remain?</p>	Go to step 7.	The problem is solved.
<p>Step 7 Perform a POR.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.


False bin full error service check

Action	Yes	No
<p>Step 1 Remove, and then install the bin full sensor actuator. See “Bin full sensor actuator removal” on page 138.</p> <p>Does the problem remain?</p>	Go to step 2.	The problem is solved.
<p>Step 2 Check the bin full sensor actuator for damage, and replace if necessary</p> <p>Does the problem remain?</p>	Go to step 3.	The problem is solved.
<p>Step 3 Check the sensor (bin full) for damage, and replace if necessary.</p> <p>Does the problem remain?</p>	Contact the next level of support.	The problem is solved.

Service menus

Understanding the printer control panel

Using the control panel

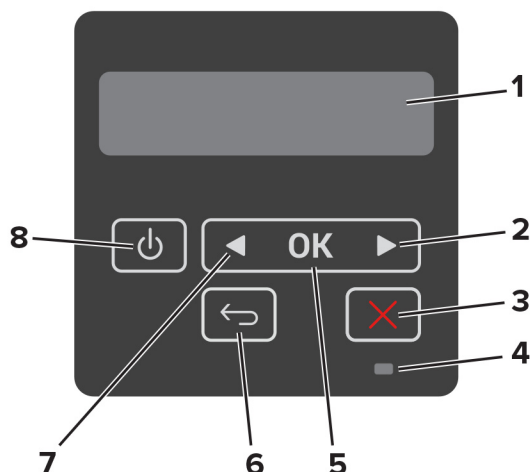

	Control panel part	Function
1	Display	<ul style="list-style-type: none"> View printer messages and supply status. Set up and operate the printer.
2	Right arrow button	<ul style="list-style-type: none"> Scroll through menus or move between screens and menu options. Increase the numeric value of a setting.
3	Stop or Cancel button	Stop the current job.
4	Indicator light	Check the status of the printer.
5	Select button	<ul style="list-style-type: none"> Select a menu option. Save the changes in a setting.
6	Back button	Return to the previous screen.
7	Left arrow button	<ul style="list-style-type: none"> Scroll through menus or move between screens and menu options. Decrease the numeric value of a setting.
8	Power button	Turn on or turn off the printer. Note: To turn off the printer, press and hold the power button for five seconds.

Understanding the status of the indicator light

Indicator light	Printer status
Off	The printer is off or in Hibernate mode.
Blue	The printer is ready or processing data.

Indicator light	Printer status
Blinking red	The printer requires user intervention.
Solid amber	The printer is in Sleep mode.

Diagnostics Menu

Entering the Diagnostics Menu

The Diagnostics Menu contains tests that are used to help isolate printer issues.

- To access the menu from POST, on the control panel, press and hold the **Left arrow** and **OK** buttons.
- To access the menu from the home screen, on the control panel, press the following buttons in this sequence: **Back, Right arrow, Back, Right arrow**.

Reports

Device Settings

This report lists all the current printer settings.

Enter the Diagnostics menu, and then navigate to:

Reports > Device > Device Settings

For non-touch-screen printer models, press **OK** to navigate through the settings.

Installed Licenses

This setting lists all the installed licenses and their feature data.

Enter the Diagnostics menu, and then navigate to:

Reports > Licenses > Installed Licenses

For non-touch-screen printer models, press **OK** to navigate through the settings.

Advanced Print Quality Samples

This setting prints the Print Quality Test Pages.

Enter the Diagnostics menu, and then select **Advanced Print Quality Samples**.

Event Log

Display Log

This setting shows a history of printer events.

Enter the Diagnostics menu, and then navigate to:

Event Log > Display Log

For non-touch-screen printer models, press **OK** to navigate through the settings.

Print Log

This setting shows additional information about the printer events.

Enter the Diagnostics menu, and then navigate to:

Event Log > Print Log

For non-touch-screen printer models, press **OK** to navigate through the settings.

Note: The events that appear in the report vary depending on the operational history of the printer.

Print Log Summary

This setting lists a brief summary of the various printer events.

Enter the Diagnostics menu, and then navigate to:

Event Log > Print Log Summary

For non-touch-screen printer models, press **OK** to navigate through the settings.

Note: The events that appear in the report vary depending on the operational history of the printer.

Mark Log

This setting allows you to create a service, maintenance, or custom log entry. Each log entry is added in the printer event log.

1 Enter the Diagnostics menu, and then navigate to:

Event Log > Mark Log

For non-touch-screen printer models, press **OK** to navigate through the settings.

2 Select a log that you want to create.

Input tray quick print

This setting lets you print a single or continuous Quick Test page in either duplex or simplex mode.

1 Enter the Diagnostics menu, and then select **Input tray quick print**.

2 Select a paper source.

3 Select whether to print a single or continuous test page.

Output bin quick feed

This setting lets you feed a single or continuous page from the standard bin.

- 1 Enter the Diagnostics menu, and then navigate to:

Output bin quick feed > Standard bin

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 2 Select whether to print a single or continuous test page.

Printer Setup

Printed page count (mono)

This setting displays the amount of pages printed in mono.

- 1 Enter the Diagnostics menu, and then navigate to:

Printer Setup > Printed page count (mono)

- 2 View the printed page count for mono.

Permanent page count

This setting displays the total number of pages printed. After all the print tests are completed, this value resets to zero.

- 1 Enter the Diagnostics menu, and then navigate to:

Printer Setup > Permanent page count

- 2 View the permanent page count.

Enable edge-to-edge (printing)

This setting allows print jobs to include the edges of the page.

- 1 Enter the Diagnostics menu, and then navigate to:

Printer Setup > Enable edge-to-edge (printing)

- 2 Select a setting.

Processor ID

This setting indicates the ID of the processor on the controller board.

- 1 Enter the Diagnostics menu, and then navigate to:

Printer Setup > Processor ID

- 2 View the processor ID.

Serial number

This setting shows the printer serial number.

- 1 Enter the Diagnostics menu, and then navigate to:

Printer Setup > Serial number

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 2 View the serial number.

Model name

This setting shows the model name of the printer.

- 1 Enter the Diagnostics menu, and then navigate to:

Printer Setup > Model name

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 2 View the model name.

Engine setting [x]

Warning—Potential Damage: Do not change this setting without specific instructions from the next level of support.

This setting allows you to select a printer engine setting. Possible values are 0–255. 0 is the default.

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 1 Enter the Diagnostics menu, and then navigate to:

Printer Setup > Engine setting [x]

- 2 Select a setting, and then enter a value.

EP setup

Warning—Potential Damage: Do not change this setting without specific instructions from the next level of support.

This setting allows you to adjust the EP setup of the printer.

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 1 Enter the Diagnostics menu, and then navigate to:

Printer Setup > EP setup

- 2 Select a setting.

Printer diagnostics & adjustments

Sensor tests

- 1 Enter the Diagnostics menu, and then select **Printer diagnostics & adjustments**.

A list of sensor tests appears.

- 2 Find, and then manually toggle the sensor.

Notes:

- The sensor status on the screen toggles between **1** and **0** when the sensor is properly working.
- If a sensor test fails, the test failure may not indicate a failed sensor. Further troubleshooting may be required. Check the boards and cables for possible issues.
- For the fuser exit sensor actuator, toggle it toward the rear door.

List of sensor tests

MPF media present
Tray1 present
Input
Output bin/Narrow media
Fuser exit
Front door interlock

Motor tests

- 1 Enter the Diagnostics menu, and then navigate to:

Printer diagnostics & adjustments > Motor tests

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 2 Select a motor.

Notes:

- If the motor is activated, then it is properly working.
- Some motors require automatic deactivation to avoid secondary issues such as possible damage and contamination.
- Some tests require a special action to activate a motor such as removing a major component.
- If the motor fails, the test failure may not indicate a failed motor. Further troubleshooting may be required. Check the boards and cables for possible issues.
- To stop a running motor in non-touch-screen printer models, press **OK**.

List of motor tests

Main Motor
MPF Pick Solenoid

Media Pick Clutch
Fan (main)

Registration adjust

This setting lets you adjust the skew and margins or print a Quick Test page.

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 1 Enter the Diagnostics menu, and then navigate to:
Printer diagnostics and adjustments > Registration adjust
- 2 Select a setting to adjust.

Margin Offset

This setting allows you to adjust the margin offset and to print or reset the default settings.

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 1 Enter the Diagnostics menu, and then navigate to:
Printer diagnostics & adjustments > Margin Offset
- 2 Select a setting.

Universal Override

This setting allows the user to load custom paper sizes into a paper source.

For non-touch-screen printer models, press **OK** to navigate through the settings.

- 1 Enter the Diagnostics menu, and then navigate to:
Printer diagnostics and adjustments > Universal Override
- 2 Select a setting to adjust.

Config Menu

Entering the Config Menu

The Config menu consists of menus, settings, and operations that are used to configure the printer.

To access the Config menu, press and hold **Right arrow** and **OK** on the control panel, and then turn on the printer.

Config Menu

Menu item	Description
USB Configuration USB PnP 1* 2	Change the USB driver mode of the printer to improve its compatibility with a personal computer.
USB Configuration USB Speed Full Auto*	Set the USB port to run at full speed and disable its high-speed capabilities.
Tray Configuration Show Tray Insert Message Off Only for unknown sizes* Always	Show a message about the tray status.
Tray Configuration A5 Loading Short Edge* Long Edge	Specify the page orientation when loading A5 paper size.
Tray Configuration Paper Prompts Auto* Manual Paper	Set the paper source that the user fills when a prompt to load paper appears.
Tray Configuration Envelope Prompts Auto* Manual Envelope	Set the paper source that the user fills when a prompt to load envelope appears.
Tray Configuration Action for Prompts Prompt user* Continue Use current	Set the printer to resolve paper- or envelope-related change prompts.
Reports Menu Settings Page Event Log Event Log Summary	Print reports about printer menu settings, status, and event logs.
Supply Usage And Counters Clear Supply Usage History Reset Black Cartridge Counter Reset Black Imaging Unit Counter	Clear the supply usage history or reset the counter after installing new supplies.
Note: An asterisk (*) next to a value indicates the factory default setting.	

Menu item	Description
Print Configuration Font Sharpening 0–150(24*)	Set a text point-size value below which the high-frequency screens are used when printing font data. For example, if the value is 24, then all fonts sized 24 points or less use the high-frequency screens.
Print Configuration Print Density 1–5 (3*)	Adjust the toner density when printing documents.
Device Operations Quiet Mode On Off*	Set the printer to reduce the amount of noise that it makes when printing. Note: Enabling this setting slows down the printer performance.
Device Operations Panel Menu Enable* Disable	Enable access to the control panel menus.
Device Operations Clear Custom Status	Erase user-defined strings for the Default or Alternate custom messages.
Clear all remotely-installed messages	Erase messages that were remotely installed.
Note: An asterisk (*) next to a value indicates the factory default setting.	

Service Engineer (SE) menu

Entering the SE Menu

To access the menu from the home screen, on the control panel, press the following buttons in this sequence:
Back, Left arrow, Back, Left arrow

General SE Menu

- Capture Logs to USB Drive
Note: This setting allows you to save a log file to a USB drive.
- Code Versions
- Debug Level

Network SE Menu

Enter the SE menu, and then select **Network SE Menu**.

Note: Use these settings as directed by the next level of support.


Top-level menu	Intermediate menu
HISTORY	<ul style="list-style-type: none"> • Print History • Mark History
MAC	<ul style="list-style-type: none"> • Set Card Speed • LAA • Keep Alive
NPAP	Print Alerts
TCP/IP	<ul style="list-style-type: none"> • DHCP Request Options • netstat • arp • Allow SNMP Set • MTU • Meditech Mode • RAW LPR Mode • Garp Interval
Wireless Settings	<ul style="list-style-type: none"> • Wireless Performance Enhancement • Unset Wireless Region
Ping Test	<ul style="list-style-type: none"> • Ping Address • Attempts • Packet Size • Ping
Other Actions	<ul style="list-style-type: none"> • ifconfig • IPtables [Firewall Dump] • IP6tables [Firewall Dump] • IPsec Dump
Enable DHCPCD Debugging	N/A
Enable wpa-supPLICANT Debugging	N/A
Enable Ethernet Gigabit	N/A

Entering invalid engine mode

This mode allows the printer to load the correct firmware code.

- 1 Unplug the power cord from the electrical outlet.
- 2 Open tray 1.
- 3 Connect the power cord to the electrical outlet.

When the display shows the following icon, close tray 1.

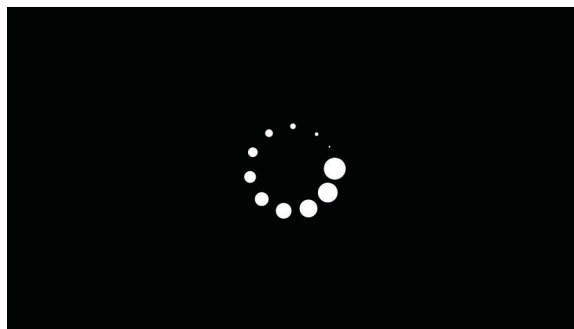

- 4 From the menu that appears on the display, press the arrow buttons to navigate the menu, and then select **ENGINE_FLASH**.

Entering Recovery mode

This mode allows the printer to boot from a secondary set of instructions and flash firmware code. While in this mode, you can only flash firmware code through a USB cable directly connected to a PC.


Depending on your printer model, do any of the following:

For LED display

- 1 Turn off the printer.
- 2 Open the front door.
- 3 Press and hold the **Stop** button.
- 4 Turn on the printer.
- 5 When all the icons flash, release the button.


For 2-line display

- 1 Turn off the printer.
- 2 Press and hold the **OK** and **Back** buttons.
- 3 Turn on the printer.
- 4 When the display shows the following icon, release the buttons.

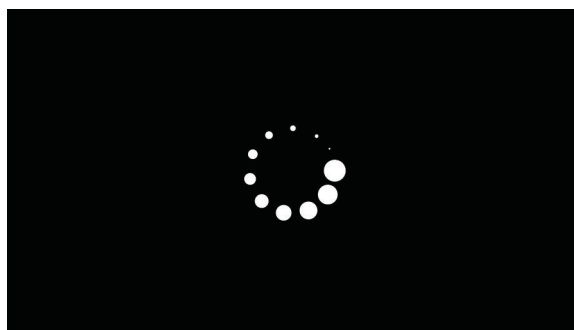


For 2.4-, 4.3-, 7-, and 10-inch displays

- 1 Turn off the printer.
- 2 Press and hold the **2**, **7**, and **8** buttons.
- 3 Turn on the printer.
- 4 When the display shows the following icon, release the buttons.

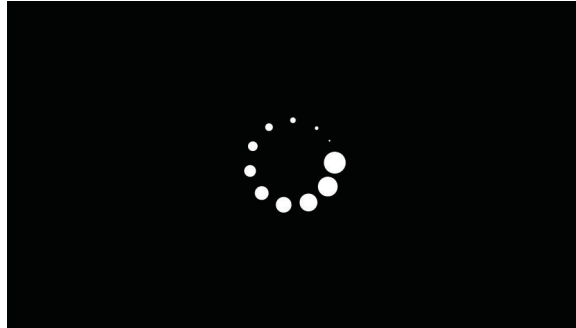

For 2.8-inch display

- 1 Turn off the printer.
- 2 Open tray 1.
- 3 Make sure that paper is loaded in tray 1.
- 4 Turn on the printer.
- 5 When the display shows the following icon, close tray 1.

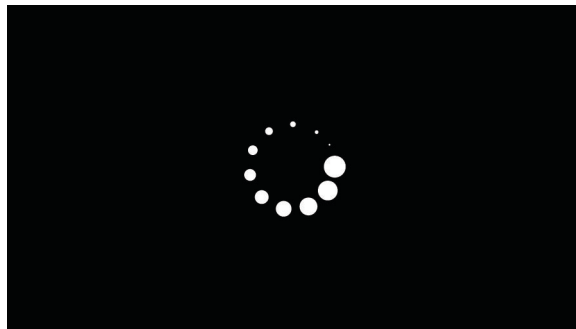

Note: If tray 1 is not closed, then the printer will boot normally.

- 6 A screen with red selection items appears.
Touch **->** to navigate to Recovery mode.
- 7 Touch **Boot** or **RECOVERY**.

Parts removal

Data security notice

Identifying printer memory

- **Volatile memory**—The printer uses standard random access memory (RAM) to buffer user data temporarily during simple print and copy jobs.
- **Nonvolatile memory**—The printer may use two forms of nonvolatile memory: EEPROM and NAND (flash memory). Both types are used to store the operating system, printer settings, network information, scanner and bookmark settings, and embedded solutions.
- **Hard disk memory**—Some printers have a hard disk drive installed. The hard disk is designed for printer-specific functionality and cannot be used for long-term storage of data that is not print-related. The hard disk does not let users extract information, create folders, create disk or network file shares, or transfer FTP information directly from a client device. The hard disk can retain buffered user data from complex print jobs, form data, and font data.

The following parts can store memory:

- Printer control panel
- User interface controller card (UICC)
- Controller board
- Optional hard disks

Note: The printer control panel and controller board contain NVRAM.


Erasing printer memory


To erase volatile memory or buffered data, turn off the printer.




To erase non-volatile memory or individual settings, device and network settings, security settings, and embedded solutions, do the following:

- 1 From the control panel, navigate to:
Settings > Device > Maintenance > Out of Service Erase > Sanitize all information on nonvolatile memory > Yes
- 2 Select either **Start initial setup** or **Leave printer offline**.






Removal precautions

 **CAUTION—SHOCK HAZARD:** The low-voltage power supply (LVPS) and the high-voltage power supply (HVPS) may have residual voltage present. To avoid the risk of electrical shock, do not touch their circuit components or the solder side of the board. Only handle them by their outer edges or metal housing.



 **CAUTION—SHOCK HAZARD:** This product uses an electronic power switch. It does not physically disconnect the input AC voltage. To avoid the risk of electrical shock, always remove the power cord from the printer when removal of the input AC voltage is required.


-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock and to prevent damage to the printer, remove the power cord from the electrical outlet and disconnect all connections to any external devices before you connect or disconnect any cable, electronic board, or assembly.
-  **CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.
-  **CAUTION—PINCH HAZARD:** To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, doors, trays, and covers.

Précautions de retrait


-  **ATTENTION—RISQUE D'ELECTROCUTION :** Une tension résiduelle peut être présente dans le bloc d'alimentation basse tension (LVPS) et le bloc d'alimentation haute tension (HVPS). Pour éviter tout risque d'électrocution, ne touchez pas les composants du circuit ou le côté soudure de la carte. Tenez-les uniquement par leurs extrémités ou le boîtier en métal.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Ce produit utilise un commutateur d'alimentation électronique. Il ne déconnecte pas physiquement la tension d'alimentation CA. Pour éviter tout risque d'électrocution, débranchez toujours le cordon d'alimentation de l'imprimante lorsque vous devez déconnecter la tension d'alimentation CA.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Pour éviter tout risque d'électrocution et éviter d'endommager l'imprimante, débranchez le cordon d'alimentation de la prise électrique et déconnectez toute connexion à tout périphérique externe avant de brancher ou débrancher des câbles ou circuits et assemblages électroniques.
-  **ATTENTION—SURFACE CHAUDE :** L'intérieur de l'imprimante risque d'être brûlant. Pour réduire le risque de brûlure, laissez la surface ou le composant refroidir avant d'y toucher.
-  **ATTENTION : RISQUE DE PINCEMENT :** Pour éviter tout risque de blessure par pincement, agissez avec précaution au niveau des zones signalées par cette étiquette. Les blessures par pincement peuvent se produire autour des pièces mobiles telles que les engrenages, portes, tiroirs et capots.


Precauciones durante la extracción


-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** La fuente de alimentación de bajo voltaje (LVPS) y la fuente de alimentación de alto voltaje (HVPS) pueden presentar voltaje residual. Para evitar el riesgo de descarga eléctrica, no toque los componentes del circuito ni el lateral soldado de la placa. Manipule solo los bordes exteriores o la carcasa metálica.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Este producto utiliza un interruptor de corriente electrónico. No desconecta físicamente la entrada de voltaje de CA. Para evitar el riesgo de descarga eléctrica, desenchufe siempre el cable de alimentación de la impresora cuando sea necesario retirar la entrada de voltaje de CA.
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descargas eléctricas y daños en la impresora, retire el cable de alimentación de la toma eléctrica y desconecte todas las conexiones a dispositivos externos antes de conectar o desconectar cualquier cable, placa electrónica o conjunto.
-  **PRECAUCIÓN: SUPERFICIE CALIENTE:** El interior de la impresora podría estar caliente. Para evitar el riesgo de heridas producidas por el contacto con un componente caliente, deje que la superficie se enfríe antes de tocarlo.


 **PRECAUCIÓN: PELIGRO DE ATRAPAMIENTO:** Para evitar el riesgo de lesión por atrapamiento, preste atención en las áreas marcadas con esta etiqueta. Las lesiones por atrapamiento se pueden producir en torno a partes móviles, tales como engranajes, puertas, bandejas y cubiertas.


Vorsichtsmaßnahmen bei der Demontage

 **VORSICHT – STROMSCHLAGGEFAHR:** Im Niederspannungsnetzteil (LVPS) und Hochspannungsnetzteil (HVPS) liegt unter Umständen Restspannung vor. Um das Risiko eines elektrischen Schlags zu vermeiden, berühren Sie keine umliegenden Bauteile oder die Lötseite der Platine. Fassen Sie sie nur an den Außenkanten oder am Metallgehäuse an.

 **VORSICHT – STROMSCHLAGGEFAHR:** Dieses Produkt verwendet einen elektronischen Leistungsschalter. Er trennt die Eingangswchselspannung nicht physikalisch. Um das Risiko eines elektrischen Schlags zu vermeiden, ziehen Sie stets das Netzkabel vom Drucker ab, wenn eine Abtrennung der Eingangswchselspannung erforderlich ist.

 **VORSICHT – STROMSCHLAGGEFAHR:** Um das Risiko eines elektrischen Schlags und Schäden am Drucker zu vermeiden, ziehen Sie das Netzkabel aus der Steckdose und trennen Sie alle Verbindungen zu jeglichen externen Geräten, bevor Sie Kabel, Elektronikplatinen oder Baugruppen einstecken oder abziehen.

 **VORSICHT – HEISSE OBERFLÄCHE:** Das Innere des Druckers kann sehr heiß sein. Vermeiden Sie Verletzungen, indem Sie heiße Komponenten stets abkühlen lassen, bevor Sie ihre Oberfläche berühren.

 **VORSICHT – QUETSCHGEFAHR:** Um das Risiko einer Quetschung zu vermeiden, gehen Sie in Bereichen, die mit diesem Etikett gekennzeichnet sind, mit Vorsicht vor. Quetschungen können im Bereich von beweglichen Komponenten auftreten, wie z. B. Zahnrädern, Klappen, Fächern und Abdeckungen.

Handling ESD-sensitive parts

Many electronic products use parts that are known to be sensitive to electrostatic discharge (ESD). To prevent damage to ESD-sensitive parts, do the following:

- Turn off the printer before removing logic boards.
- Keep the parts in their original packing material until you are ready to install them into the printer.
- Make the least possible movements with your body to prevent an increase of static electricity from clothing fibers, carpets, and furniture.
- Put the ESD wrist strap on your wrist. Connect the wrist band to the system ground point. This action discharges any static electricity in your body to the printer.
- Hold the parts by their edge connector shroud. Do not touch its pins. If you are removing a pluggable module, then use the correct tool.
- If possible, keep all parts in a grounded metal cabinet.
- Do not place the parts on the printer cover or on a metal table. If you need to put down the parts, then put them into their packing material.
- Prevent parts from being accidentally touched by other personnel. Cover the printer when you are not working on it.
- Be careful while working with the parts when cold-weather heating is used. Low humidity increases static electricity.

Critical information for controller board or control panel replacement

Warning—Potential Damage: Observe all precautions when handling ESD sensitive parts. See [“Handling ESD-sensitive parts” on page 105](#).

Warning—Potential Damage: Carefully remove cables and connectors. Make sure they are not damaged.

Warning—Potential Damage: To avoid damaging the part or experience NVRAM mismatch issues, replace only one of the following components at a time:

- Control panel
- Controller board

To replace a component and to test whether the problem is resolved:

1 Replace the affected component.

Warning—Potential Damage: Do not perform a Power-On Reset (POR) until the problem is resolved. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

2 Enter the Diagnostics menu. The menu allows you to temporarily use the replacement part.

Warning—Potential Damage: Some printers perform a POR automatically if the Diagnostics menu is not opened within five seconds. If a POR is performed at this point, then the replacement part can no longer be used in another printer and must be returned to the manufacturer.

3 Use the Diagnostics menu to test the replacement part. Do a feed test to check if the problem is resolved.

- If the problem is not resolved—Turn off the printer, and then install the old part.
- If the problem is resolved—Perform a POR.
- If NVRAM error occurs during the replacement, then see [“NVRAM mismatch failure service check” on page 86](#).

Updating the printer firmware

Warning—Potential Damage: Before updating the printer firmware, ask the next level of support for the correct code. Using an incorrect code level may damage the printer.

Using a flash drive

Note: The printer must be in ready state to update the firmware.

This option is available only in printer models with front USB port.

1 Insert the flash drive into the USB port.

2 Depending on the printer model, do any of the following:

- From the control panel, navigate to **USB Menu: Print from USB > Accept** or **OK**, and then select the file that you need to flash.
- Select the firmware file.

Note: Do not turn off the printer while the update is going on.

Using a network computer

Using the File Transfer Protocol (FTP)

Note: The printer must be in ready state to update the firmware.

- 1 Turn on the printer.
- 2 Obtain the IP address from the home screen.
- 3 From the command prompt of a network computer, open an FTP session to the printer IP address.
- 4 Use a PUT command to place the firmware file on the printer.
The printer performs a POR sequence and terminates the FTP session.

Using the Embedded Web Server

Note: The printer must be in ready state to update the firmware.

- 1 Open a web browser, and then type the printer IP address.
- 2 Click **Settings > Device > Update Firmware**.
- 3 Select the file to use.
The printer performs a POR sequence and terminates the EWS session.

Using a USB cable connection

Note: Make sure that the cable is connected to the rear USB port.

Using USB Flash Utility

- 1 Go to support.lexmark.com, and then download USB Flash Utility.
- 2 Extract, and then run the utility.
- 3 Click **Browse Files**, and then browse to the firmware file directory.
- 4 Select the firmware file.
- 5 Select the source printer.
- 6 Click **Start**.

Using USButil

- 1 Go to support.lexmark.com, and then download USButil.
- 2 Extract, and then drag and drop the firmware file onto the USButil icon.
- 3 A command prompt window appears briefly.

Note: Make sure to disconnect other USB devices when using USButil.


Ribbon cable connectors

Low insertion force (LIF) connector

Warning—Potential Damage: When installing a cable into an LIF connector, avoid bending the edges of the cables and damaging the contacts on the cables.


Inserting the cable

- 1 Make sure that the contacts of the controller board and connectors are on the same side.

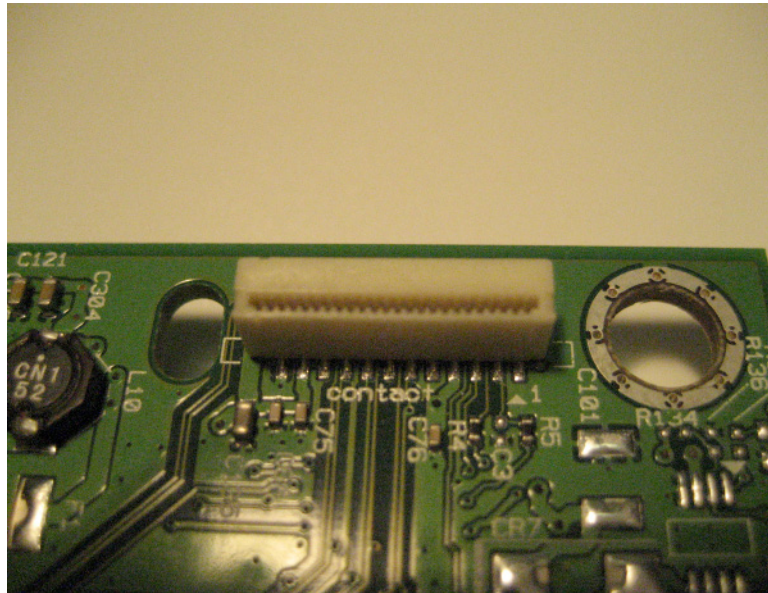

- 2 Insert the cable.

Note: Make sure that the cable is installed straight into the connector to avoid intermittent failures.

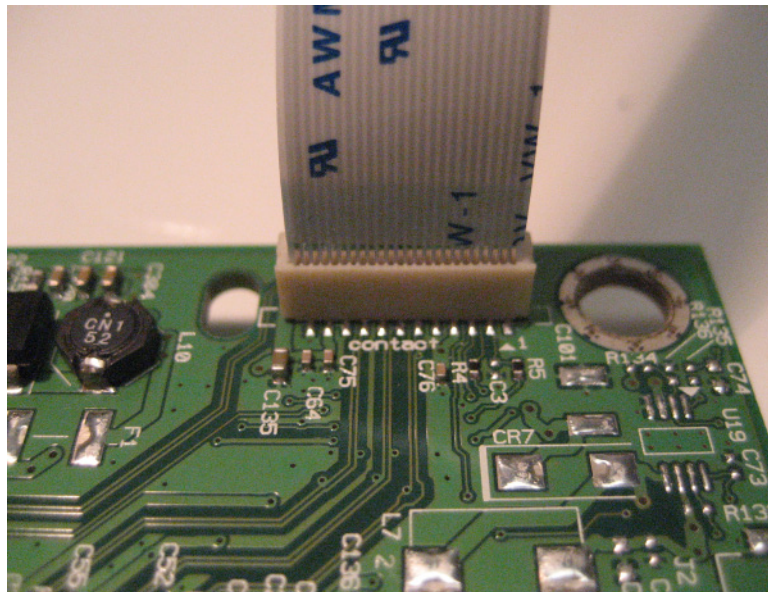

Removal procedures

Keep the following tips in mind as you replace parts:

- Some removal procedures require removing cable ties. You must replace cable ties during reassembly to avoid pinching wires, obstructing the paper path, or restricting mechanical movement.
- Remove the toner cartridges, imaging unit, and trays before removing other printer parts. The imaging kit must be carefully set on a clean, smooth, and flat surface. It must also be protected from light while out of the printer.
- Disconnect all external cables from the printer to prevent possible damage during service.
- Unless otherwise stated, install the parts in reverse order of removal.
- When installing a part held with several screws, start all screws before the final tightening.
- For printers that have an electronic power switch, make sure to unplug the power cord after powering off.


Left side removals

Left cover removal


- 1 Remove the screw at the front, and then remove the screw at the rear of the cover.



- 2 Open the front door, and then release the left front door link.

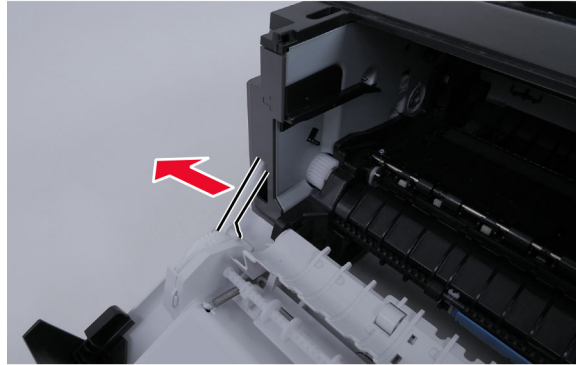

- 3 Place the printer on its right side.
- 4 Release the three latches (A) at the bottom of the cover, and then remove the cover.

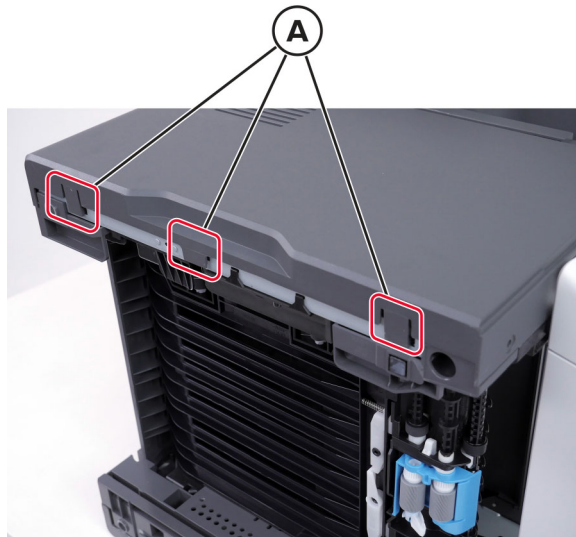


Main drive gears removal

Note: For a video demonstration, see [Main drive gears removal](#).

- 1 Remove the left cover. See [“Left cover removal” on page 109](#).
- 2 Place the printer on its right side.


Warning—Potential Damage: If the printer is not placed on its right side, then the gears fall out of place when the gear plates are removed.

- 3 Remove the 12 screws, remove the gear covers, and then remove the gears.

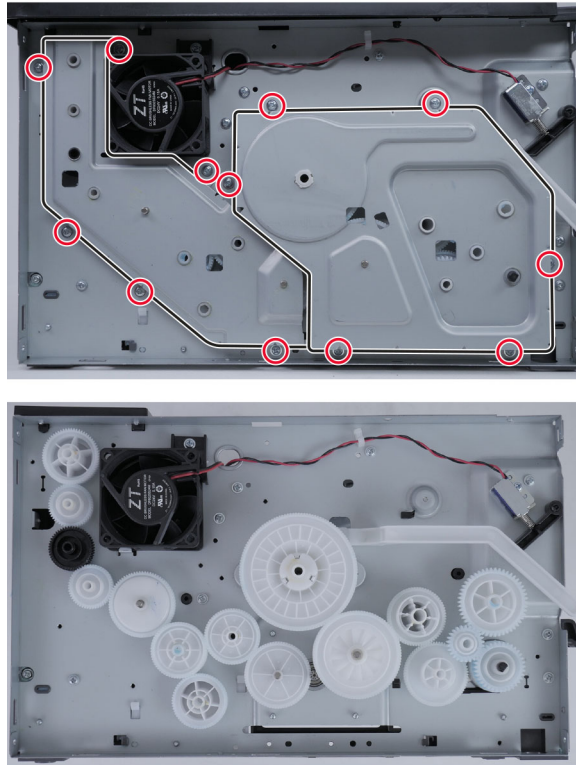


Installation notes:

- Pay attention to the position of the gears.
- Most gears have a molded letter for identification.

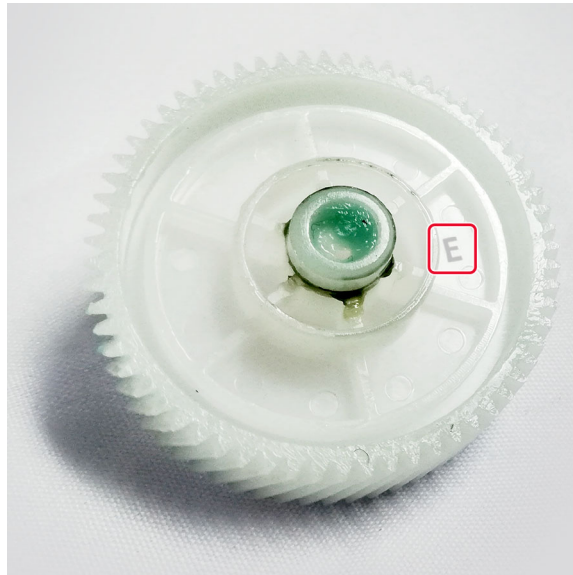


- Note the letter or number on the gears, and then use the following illustration to match their proper location and position in the printer.

- Some locations have multiple gears stacked on top of each other.

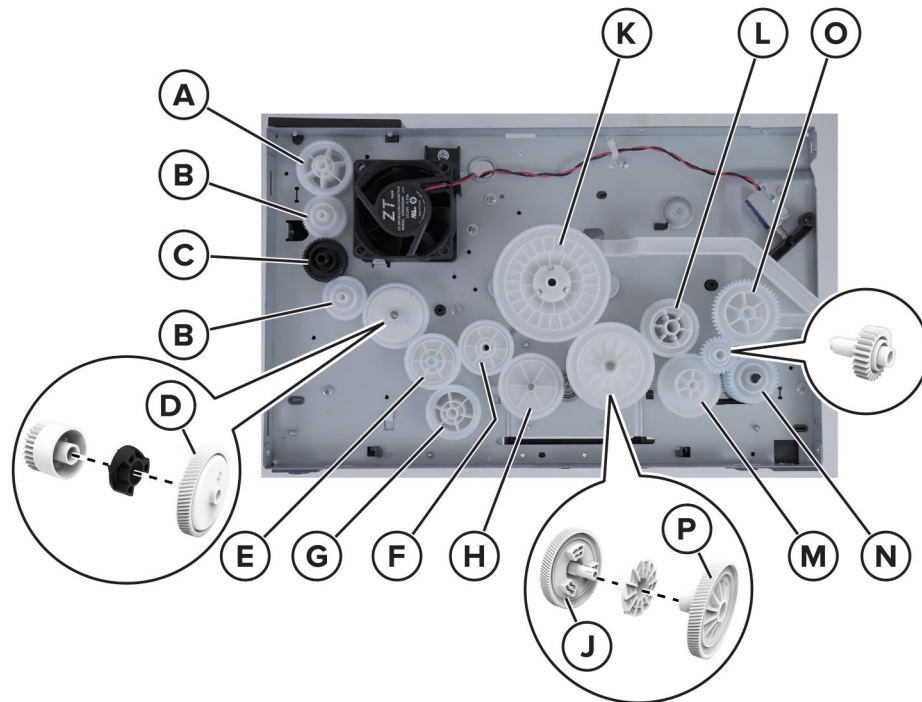


4 Remove the left front door link. See [“Left front door link removal” on page 115](#).

5 Remove the two screws (A), and then remove the coupling (B).

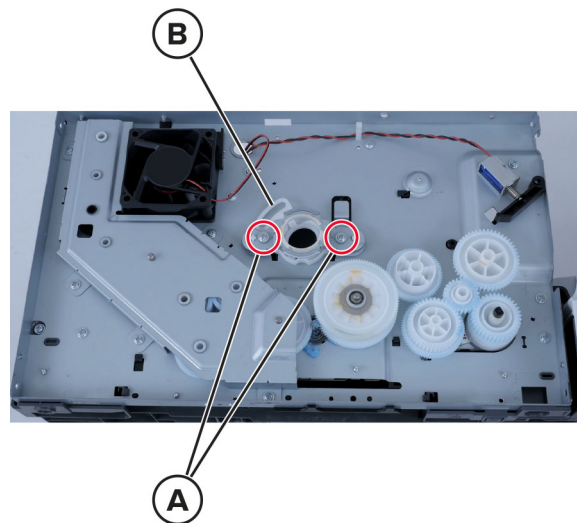


- 6 Place the printer on its left side, remove the screw (C), and then remove the duplex swing arm assembly (D).

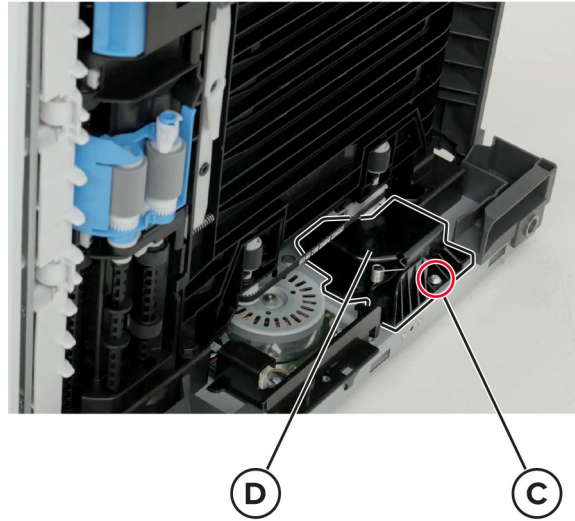


Installation notes:

- a Make sure that the gears assembly is properly installed in the housing.

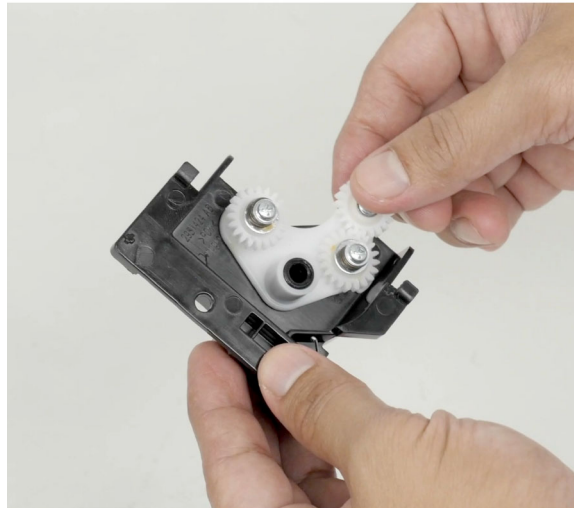


- b** Align the tab on the housing to the notch in the frame, and then install the duplex swing arm assembly.

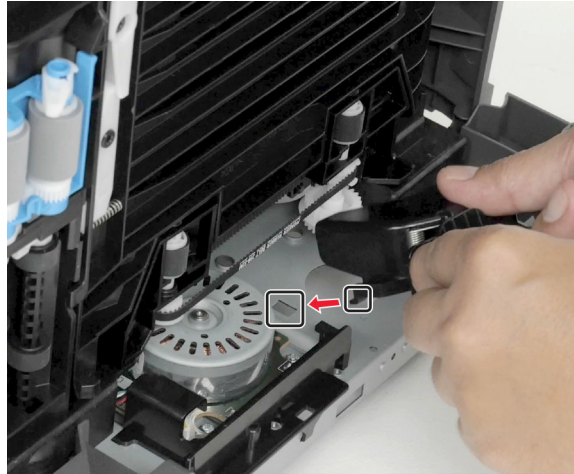


Pick roller clutch removal

- 1 Remove the left cover. See [“Left cover removal” on page 109](#).
- 2 Remove the six screws, and then remove the gear cover.

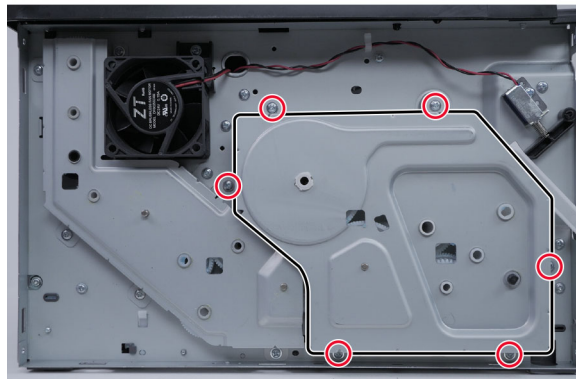


- 3 Remove the three gears.

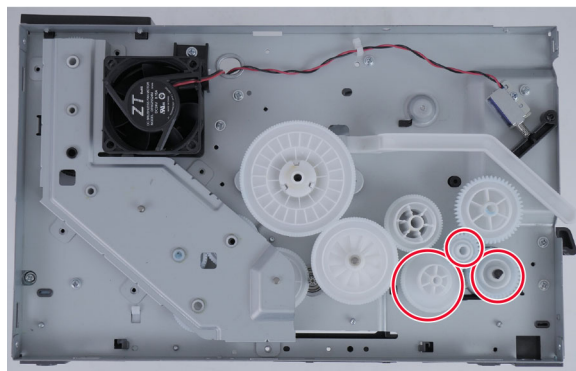


Installation note: Pay attention to the position of the gears.

- 4 Remove the clutch (A), and then disconnect the cable (B).

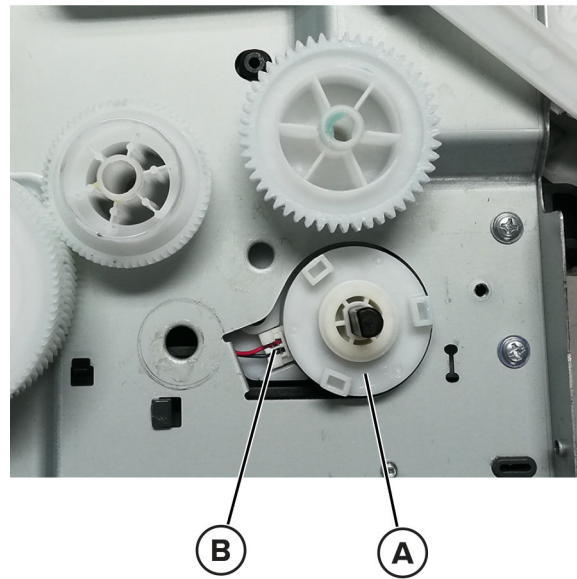


Left front door link removal


- 1 Remove the left cover. See [“Left cover removal” on page 109](#).
- 2 Remove the six screws, and then remove the gear cover.

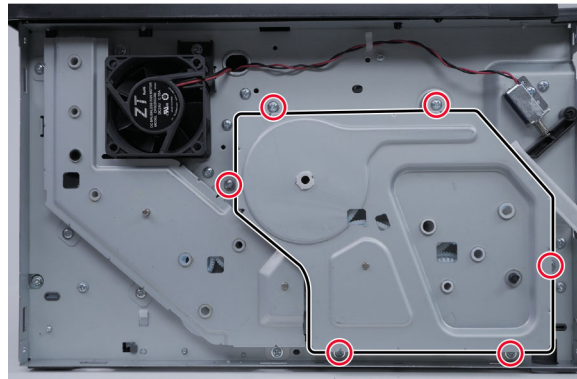

- 3 Remove the gear.

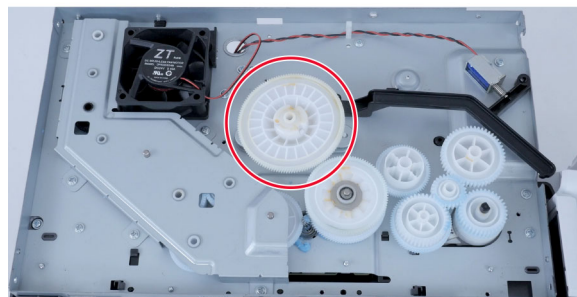

- 4 Release the left front door link (A) from the retainer (B), and then remove the left front door link.

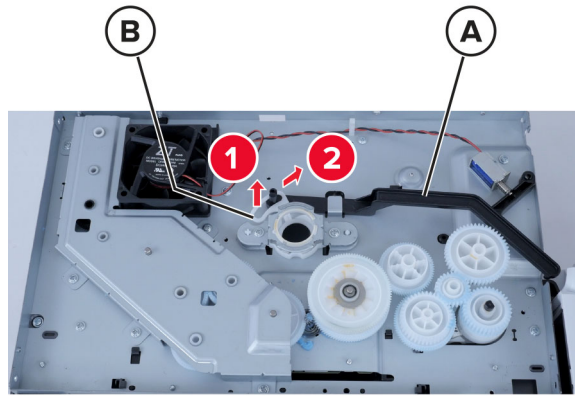

Right side removals

Right cover removal

- 1 Remove the screw at the front, and then remove the screw at the rear of the cover.




- 2 Open the front door, and then place the printer on its left side.

3 Release the three latches at the bottom (A).



4 Release the latch at the front, and then remove the cover.

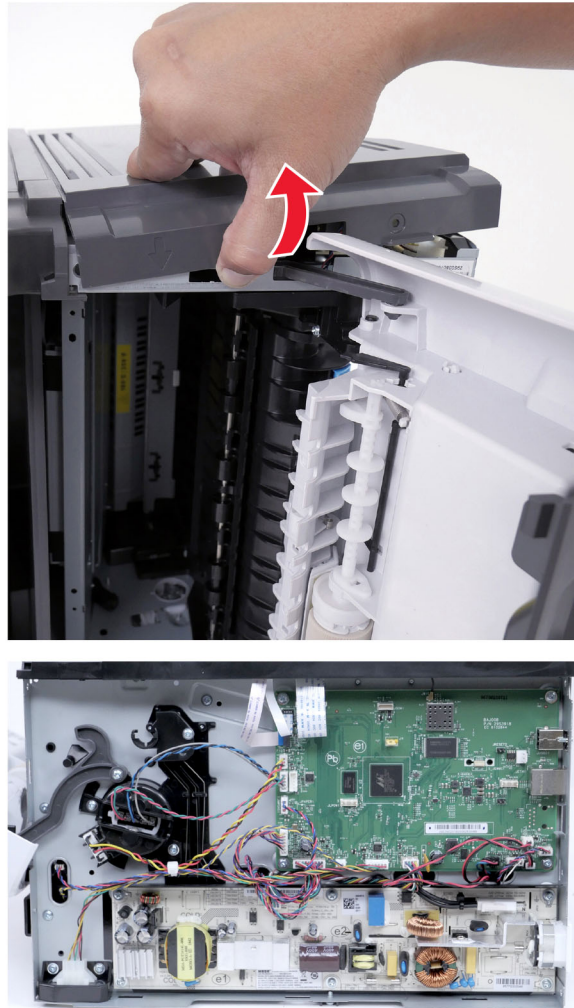


Parts removal


Controller board removal

Note: For a video demonstration, see [Controller board removal](#).

- 1 Remove the right cover. See [“Right cover removal”](#) on page 117.
- 2 Disconnect all the cables from the controller board.

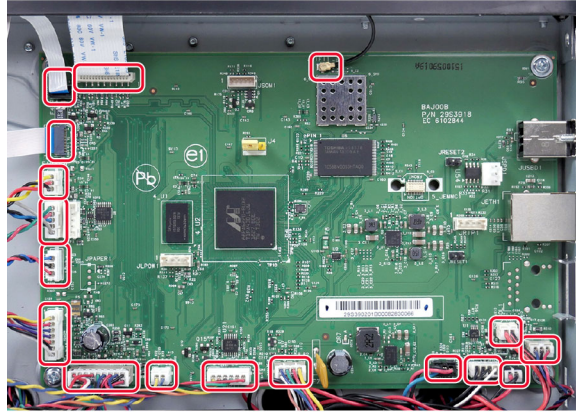


- 3 Remove the five screws, and then remove the controller board.

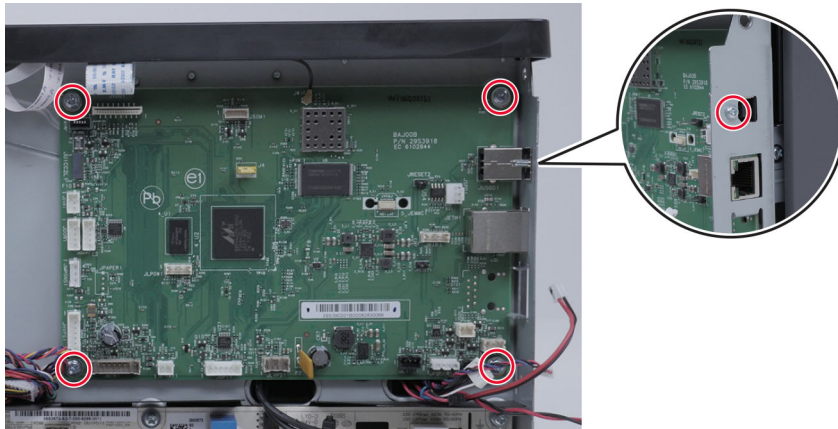





LVPS removal

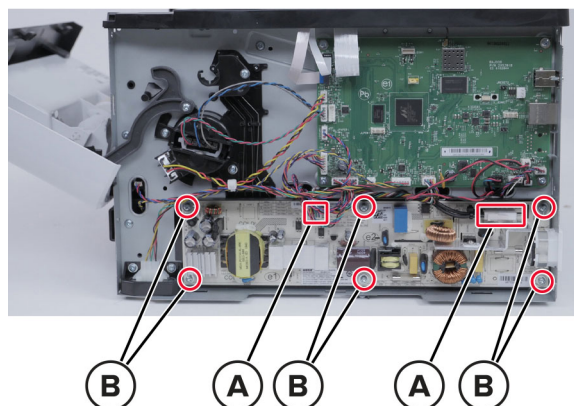Note: For a video demonstration, see [LVPS removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 117](#).
- 2 Disconnect the two cables (A), remove the six screws (B), and then remove the LVPS.






-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock, do not remove the shield from the back of the LVPS.
-  **ATTENTION—RISQUE D'ELECTROCUTION :** Pour éviter tout risque d'électrocution, ne retirez pas la protection de l'arrière du bloc d'alimentation basse tension (LVPS).
-  **PRECAUCIÓN: PELIGRO DE DESCARGAS ELÉCTRICAS:** Para evitar el riesgo de descarga eléctrica, no retire la protección de la parte trasera de la fuente de alimentación de bajo voltaje (LVPS).
-  **VORSICHT – STROMSCHLAGGEFAHR:** Um die Gefahr eines elektrischen Schlags zu vermeiden, entfernen Sie die Abdeckung nicht von der Rückseite des Niederspannungsnetzteils.

HVPS removal

Note: For a video demonstration, see [HVPS removal](#).

- 1 Remove the left cover. See [“Left cover removal” on page 109](#).
- 2 Remove the right cover. See [“Right cover removal” on page 117](#).
- 3 Remove the rear door. See [“Rear door removal” on page 132](#).
- 4 Place the printer on its left side.


5 Remove the three screws (A), release the HVPS, and then disconnect the cable (B).

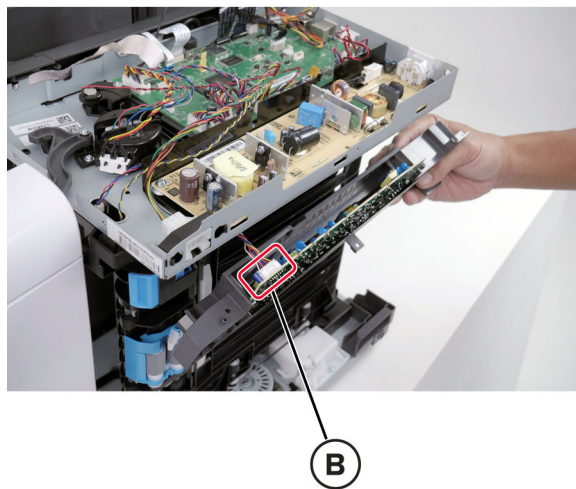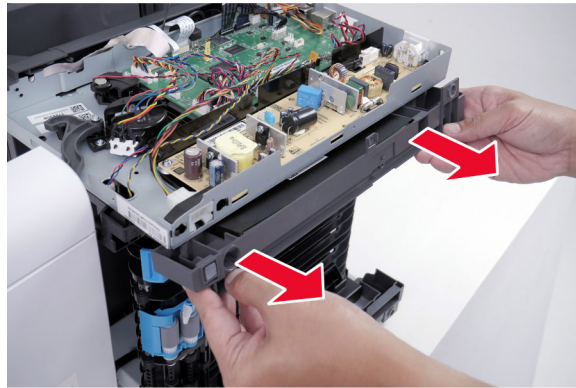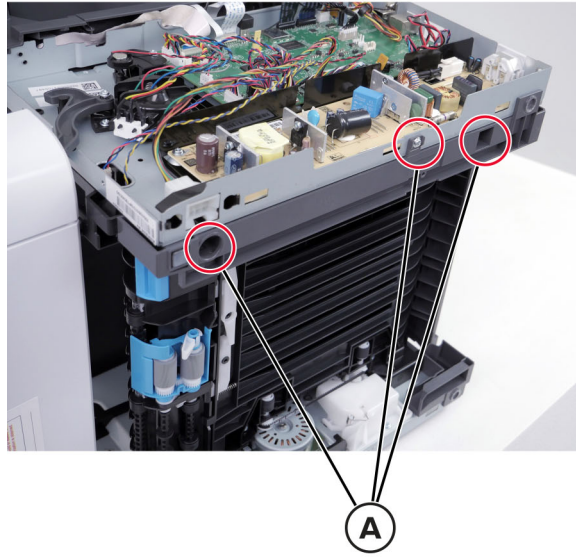


Sensor (MPF paper present) removal

Note: For a video demonstration, see [Sensor \(MPF paper present\) removal](#).

- 1 Remove the right cover. See [“Right cover removal”](#) on page 117.
- 2 Open the front door, and then remove the screw.

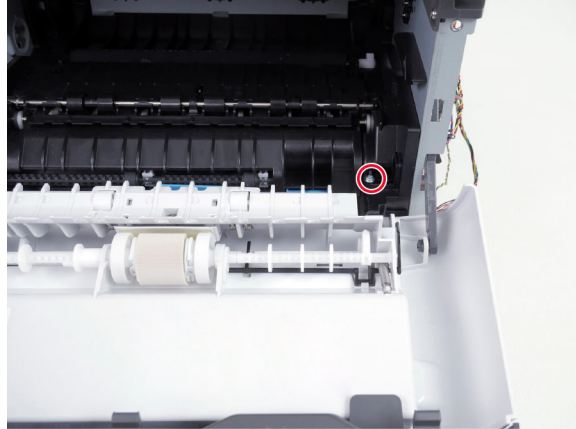


- 3 Release the latches securing the sensor, and then disconnect the sensor cable.

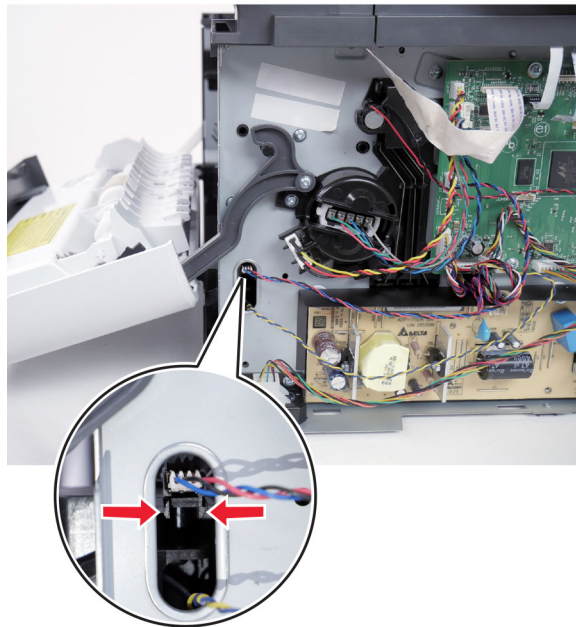



Sensor (front door interlock) removal

- 1 Remove the right cover. See [“Right cover removal” on page 117.](#)
- 2 Disconnect the cable (A), and then remove the sensor (B).

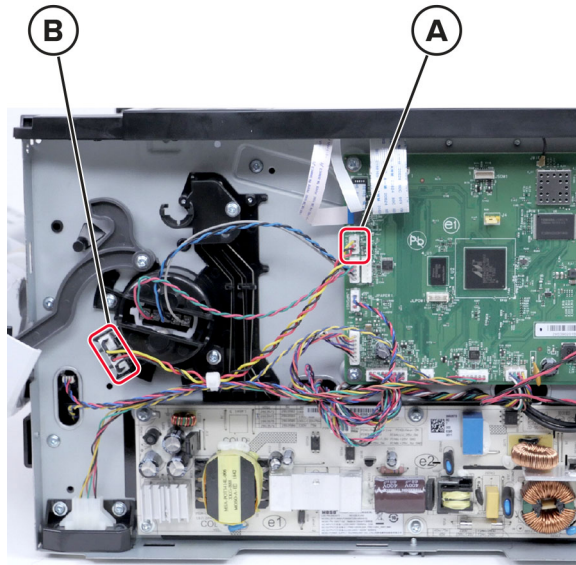

Right front door link removal

- 1 Remove the right cover. See [“Right cover removal” on page 117.](#)
- 2 Remove the screw, and then remove the link from the front door.

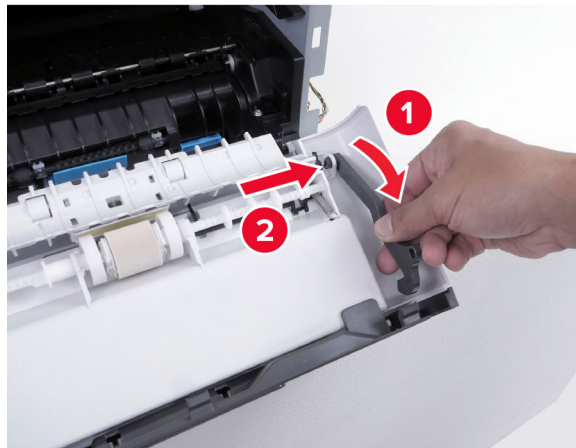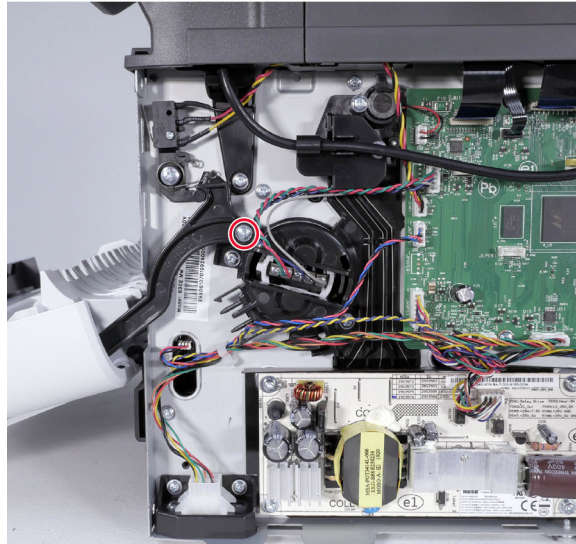


MPF solenoid cable removal

Note: For a video demonstration, see [MPF solenoid cable removal.](#)

- 1 Remove the left cover. See [“Left cover removal” on page 109.](#)
- 2 Remove the right cover. See [“Right cover removal” on page 117.](#)
- 3 Remove the top cover. See [“Top cover removal” on page 134.](#)

- 4 Disconnect the cable, and then remove the screw to remove the solenoid cable.

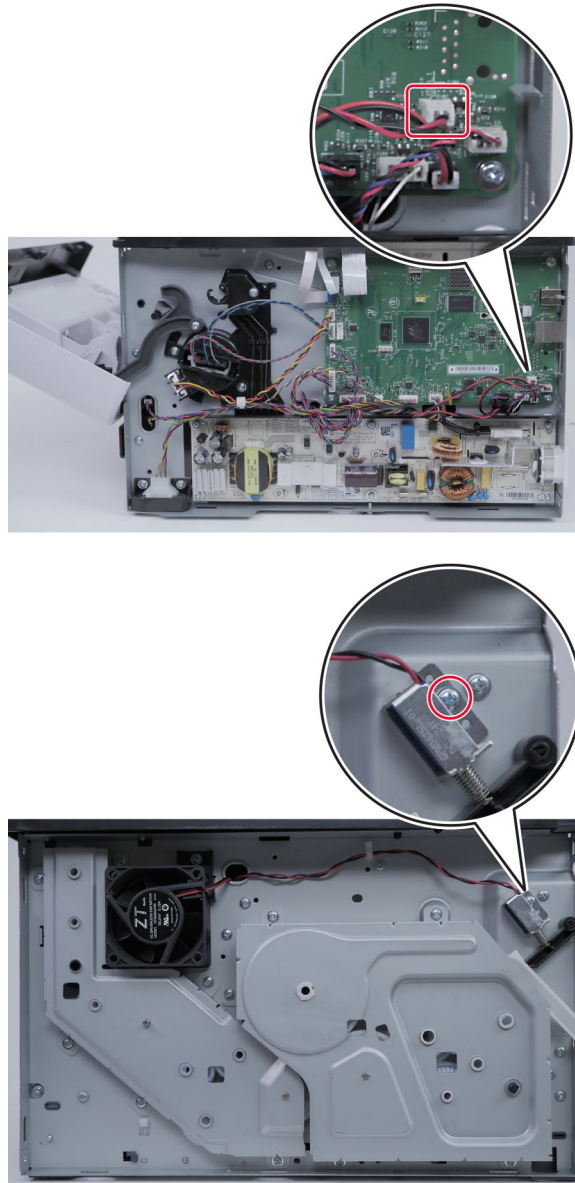


Main fan removal

Note: For a video demonstration, see [Main fan removal](#).

- 1 Remove the left cover. See [“Left cover removal” on page 109](#).
- 2 Remove the right cover. See [“Right cover removal” on page 117](#).
- 3 Remove the top cover. See [“Top cover removal” on page 134](#).

- 4 Disconnect the cable, and then remove the screw to remove the fan.

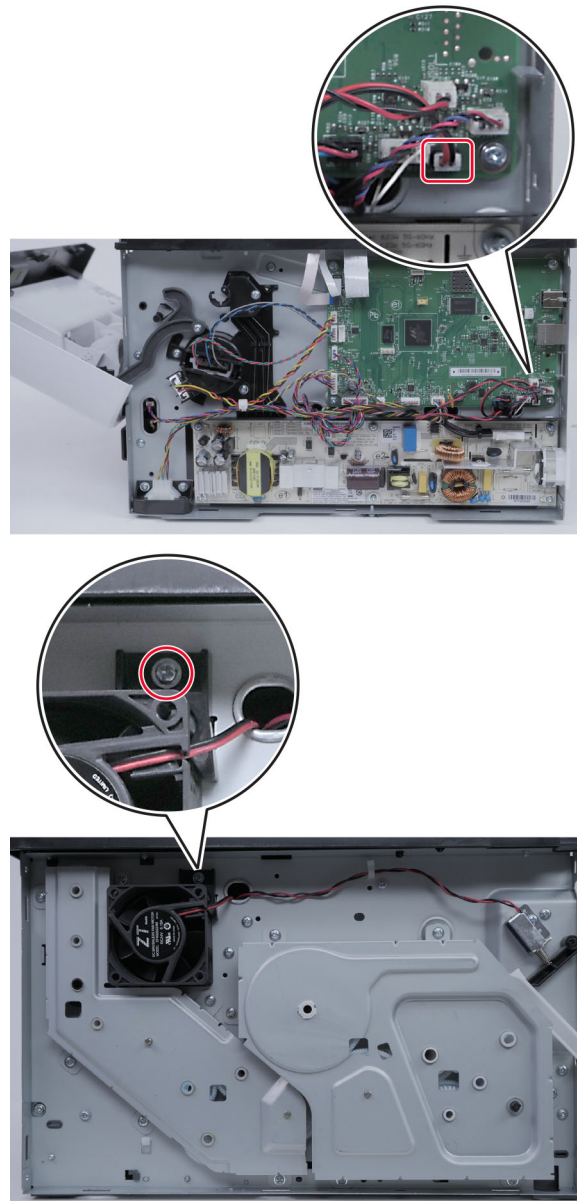

Front removals

Control panel removal


- 1 Remove the left cover. See [“Left cover removal” on page 109](#).
- 2 Remove the right cover. See [“Right cover removal” on page 117](#).
- 3 Remove the top cover. See [“Top cover removal” on page 134](#).

- 4 Remove the two screws, and then remove the control panel.



Control panel cable removal


- 1 Remove the left cover. See [“Left cover removal” on page 109.](#)
- 2 Remove the right cover. See [“Right cover removal” on page 117.](#)
- 3 Remove the top cover. See [“Top cover removal” on page 134.](#)
- 4 Remove the control panel. See [“Control panel removal” on page 126.](#)
- 5 Remove the control panel cable.

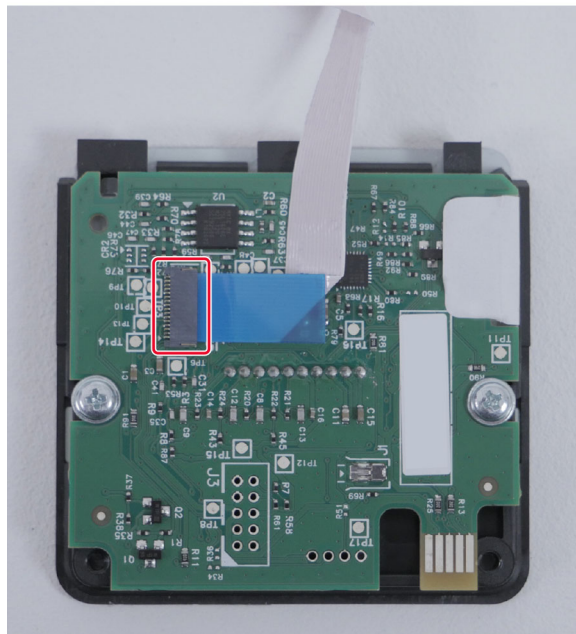

Upper front cover removal

Note: For a video demonstration, see [Upper front cover removal](#).

- 1 Open the front door.
- 2 Release the two latches.

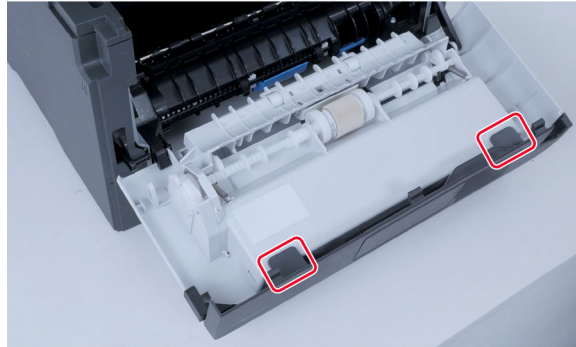

- 3 Remove the cover.




Front door removal

Note: For a video demonstration, see [Front door removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 117](#).
- 2 Remove the right front door link. See [“Right front door link removal” on page 124](#).


- 3 Release the left front door link, and then remove the front door.

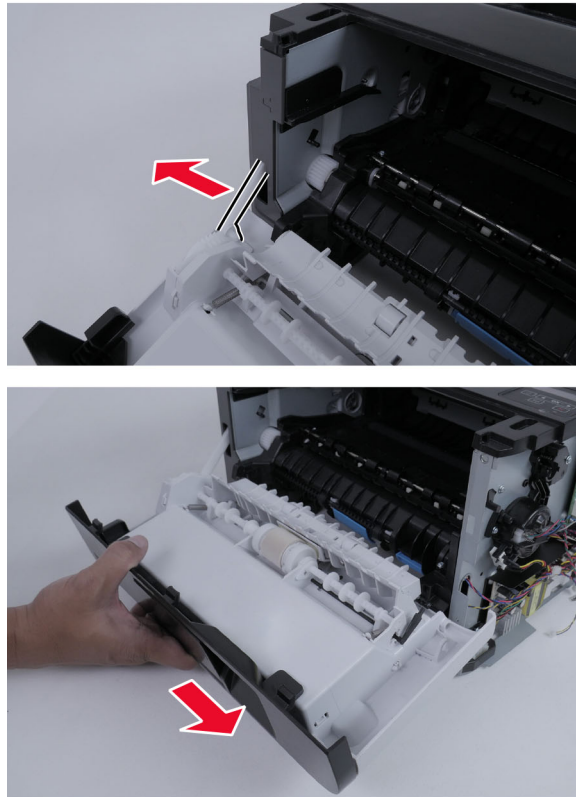

Transfer roller removal

Note: For a video demonstration, see [Transfer roller removal](#).

- 1 Open the front door.
- 2 Release the two latches, and then remove the transfer roller.



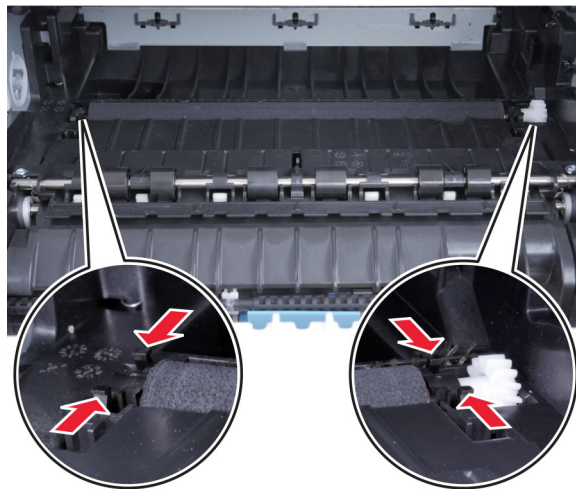


Installation notes:

- Do not touch the foam on the roller.
- The shaft has grease. To avoid contaminating the roller, do not touch the shaft.
- Make sure that the spring is properly installed on the left side of the roller.


MPF pick roller removal

- 1 Open the front door.
- 2 Remove the MPF pick roller.

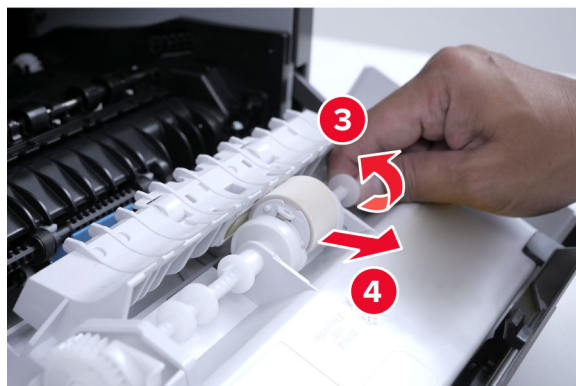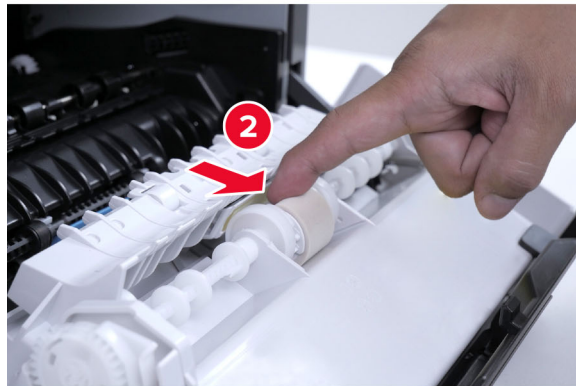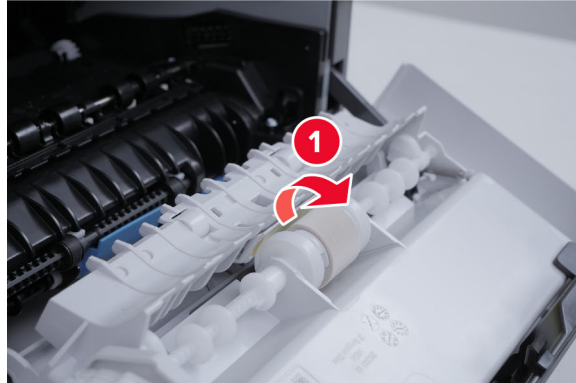

Pick separator roller removal


- 1 Remove the tray insert.
- 2 Remove the pick separator roller.

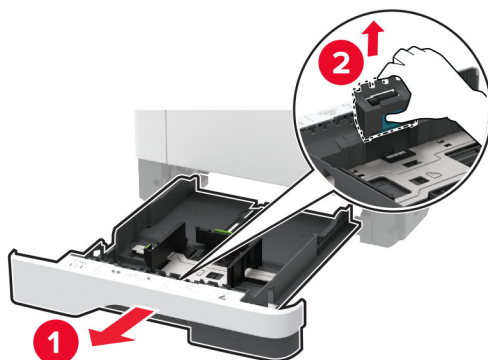


Rear removals

Rear door removal

- 1 Remove the left cover. See [“Left cover removal” on page 109.](#)
- 2 Remove the screw, and then remove the rear door.

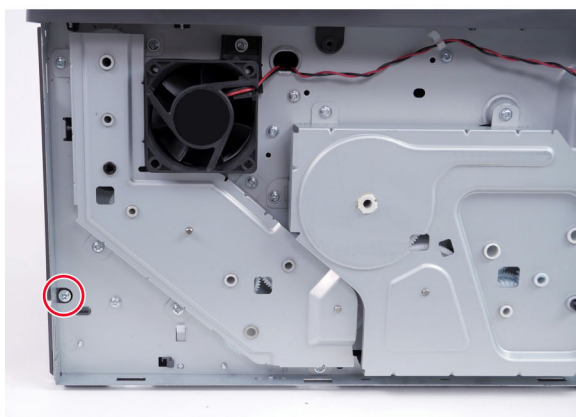


Note: Pay attention to the position of the locating feature on the right side before removing the door.

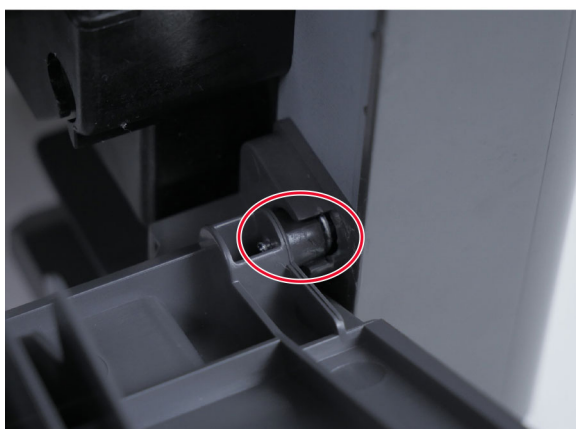


Fuser removal

Note: For a video demonstration, see [Fuser removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 117](#).
- 2 Disconnect the three cables.

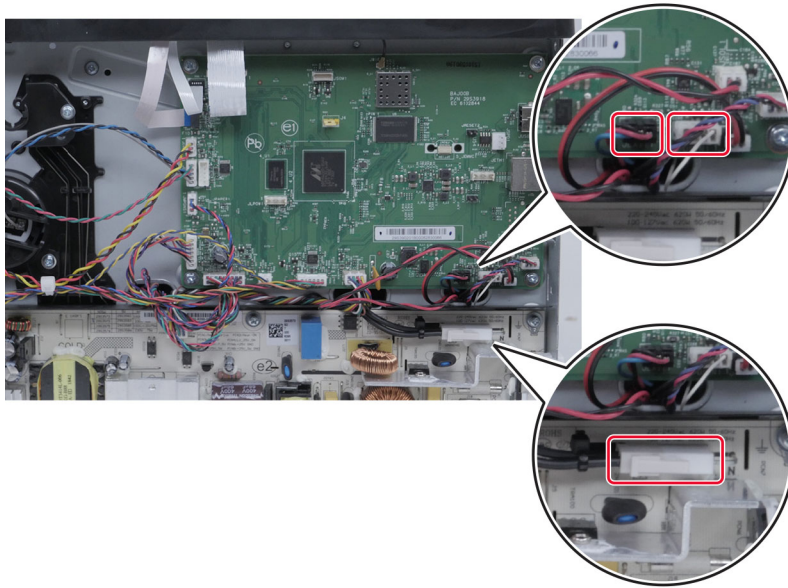

- 3 Open the rear door, remove the four screws, and then remove the fuser.

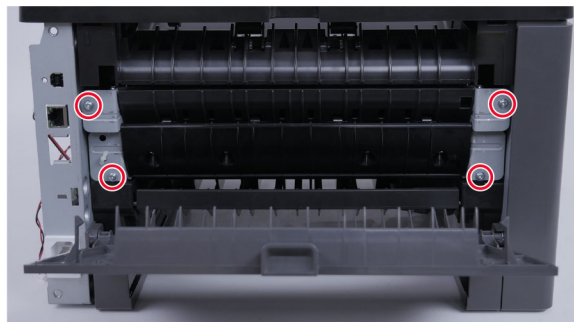


Top removals

Top cover removal


Note: For a video demonstration, see [Top cover removal](#).

- 1 Remove the right cover. See [“Right cover removal” on page 117](#).
- 2 Disconnect the cable.

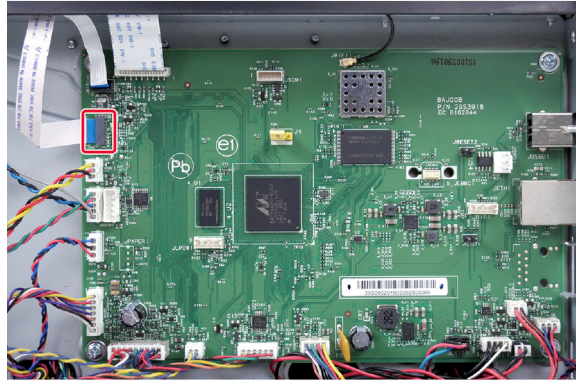

- 3 Open the front door.
- 4 Open the rear door.

- 5 Remove the two screws, and then remove the cover.

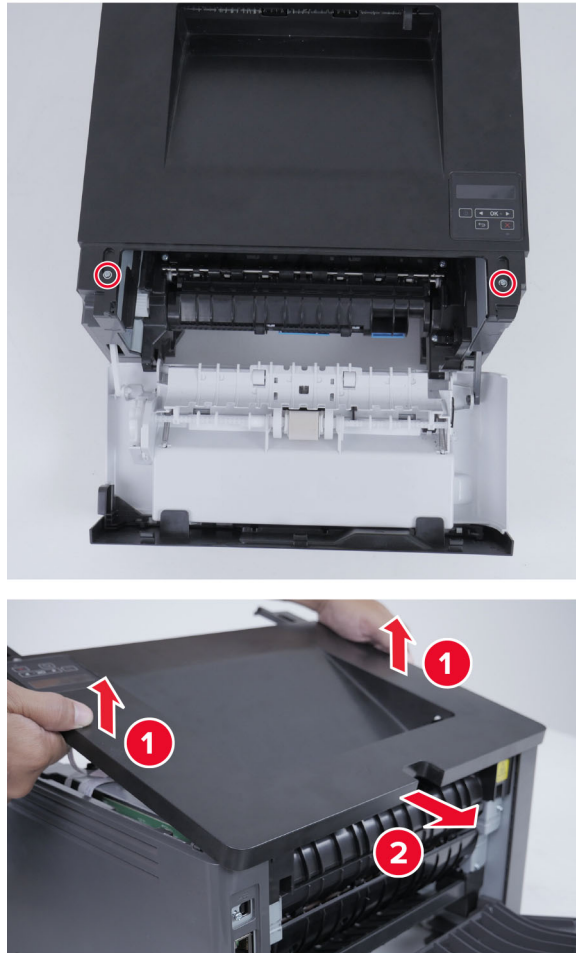


Printhead removal

Note: For a video demonstration, see [Printhead removal](#).


- 1 Remove the right cover. See [“Right cover removal” on page 117](#).
- 2 Remove the left cover. See [“Left cover removal” on page 109](#).
- 3 Disconnect the control panel cables. See [“Control panel removal” on page 126](#).

Note: Do not remove the control panel from the top cover.
- 4 Remove the top cover. See [“Top cover removal” on page 134](#).


5 Disconnect the two cables.

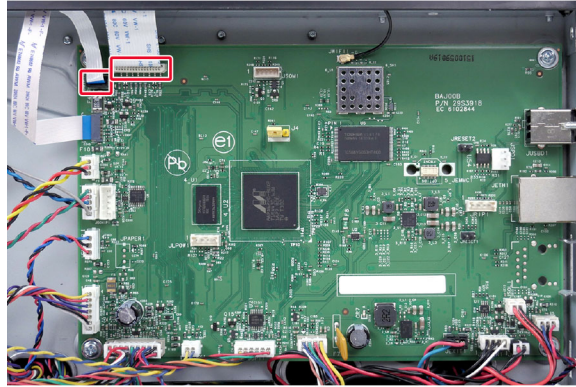

6 Remove the three screws (A), remove the two cables (B) from the toroid (C), and then remove the printhead.

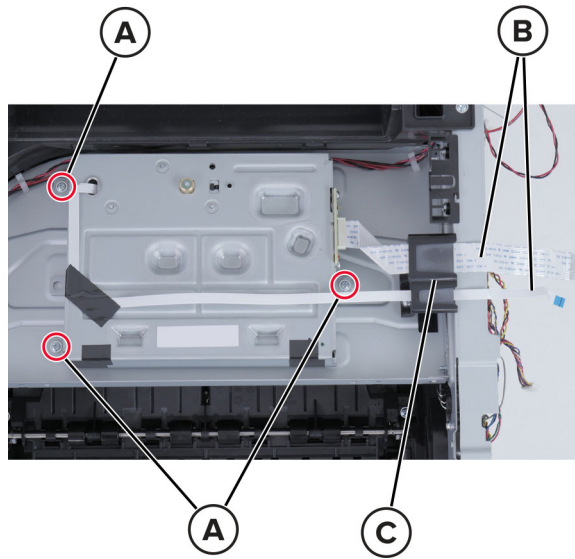

Installation note: When installing the printhead, tighten the screws in the following the order:

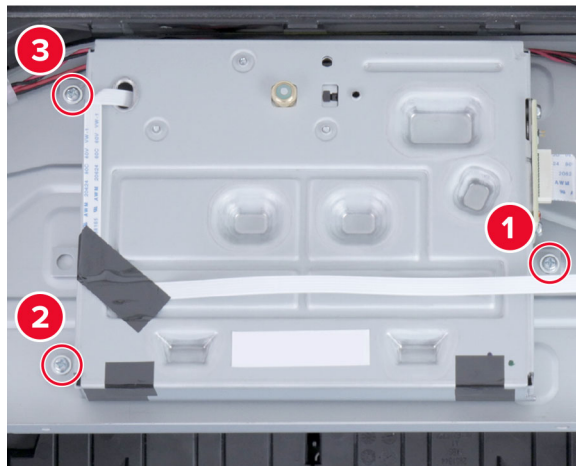


Redrive removal

Note: For a video demonstration, see [Redrive removal](#).


- 1 Remove the right cover. See [“Right cover removal” on page 117](#).
- 2 Remove the left cover. See [“Left cover removal” on page 109](#).
- 3 Disconnect the control panel cables. See [“Control panel removal” on page 126](#).

Note: Do not remove the control panel from the top cover.

- 4 Remove the top cover. See [“Top cover removal” on page 134](#).
- 5 Remove the four screws.

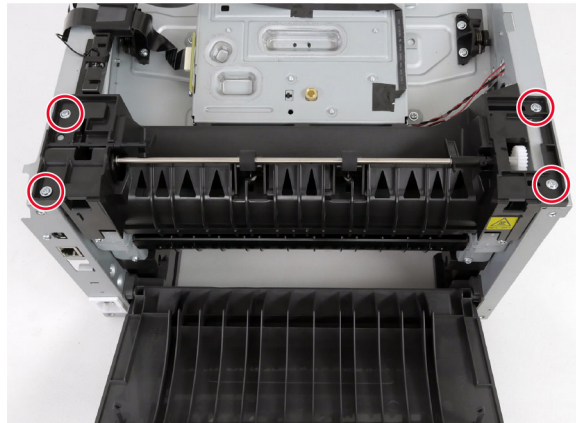


- 6 Lift the redrive, and then disconnect the cable from the redrive.

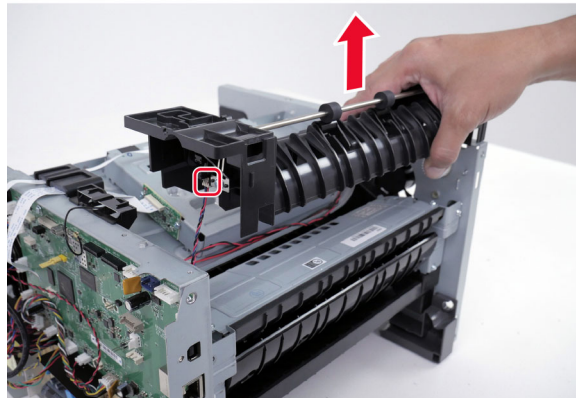

Bin full sensor actuator removal


- 1 Remove the top cover. See [“Top cover removal” on page 134](#).
- 2 Firmly pull the bin full actuator to the left until it is disengaged from the printer frame.

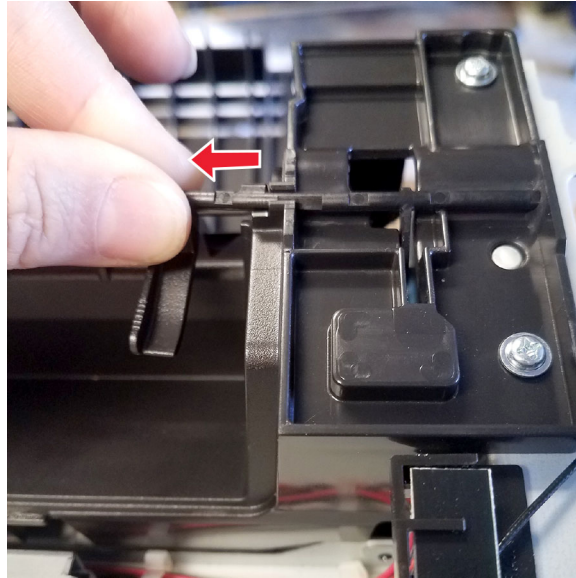


- 3 Remove the actuator.

Installation notes:

- a Make sure that the actuator is properly positioned as shown.

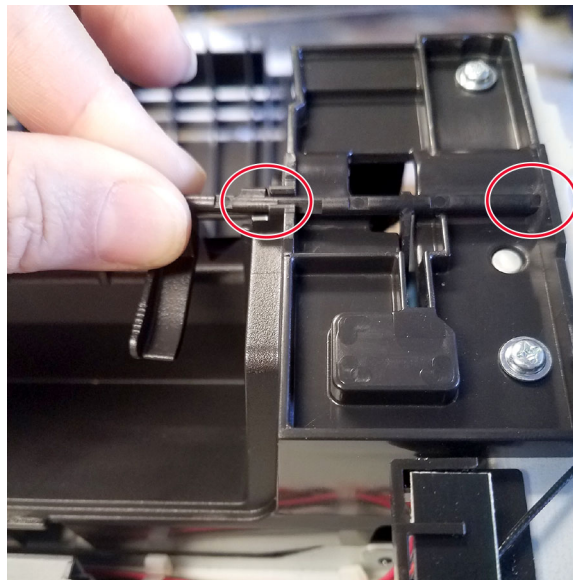

- b** Carefully rotate the actuator upward until it is engaged to the printer frame.


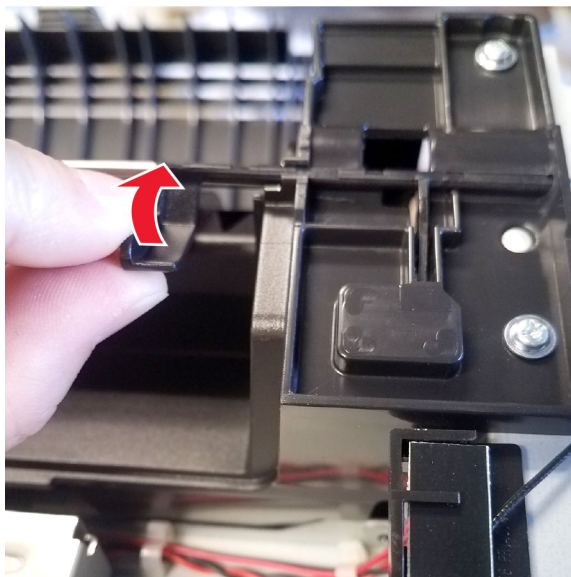


- c** Make sure that the actuator is properly installed and freely rotates without binding.


Bottom removals

Duplex guide removal

- 1 Place the printer on its left side.
- 2 Remove the duplex guide.

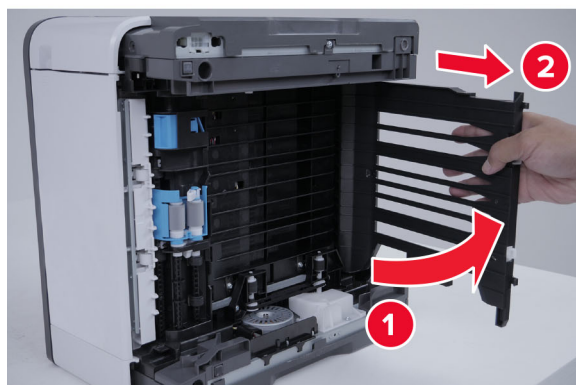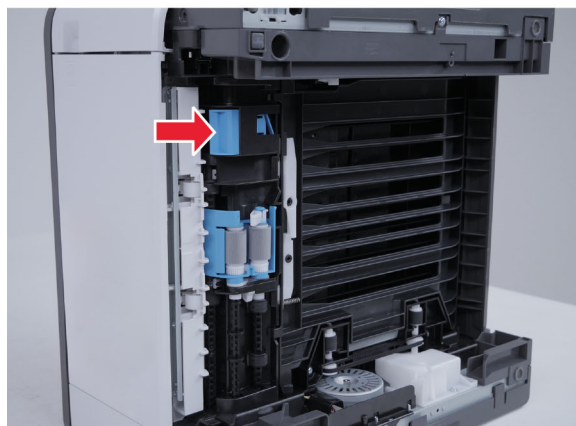

Installation note: Make sure that the duplex guide is properly inserted into the locating features inside the printer.

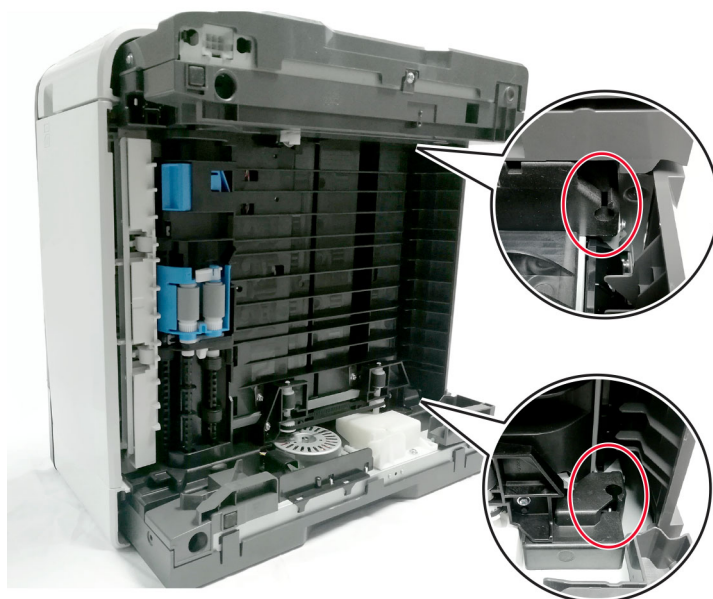

Parts removal

Component locations

Printer configuration



1	Control panel
2	Multipurpose feeder
3	Standard 250-sheet tray
4	Optional 550-sheet tray
5	Standard bin

Controller board connectors

Connector	Connects to	Pin number	Signal
JWIF1	Wi-Fi antenna	1	WIFI_ANT
		2	GND

Connector	Connects to	Pin number	Signal
JVDO1	Printhead video	1	VDO_HSYNC-
		2	GND
		3	VDO_K1+
		4	VDO_K1-
		5	GND
		6	VDO_LPOW_K
		7	VDO_LADJ_K1
		8	VDO_BOOST_K
		9	+3.3 V_PHRAIL_SW
		10	GND
		11	VDO_LEN_K-
		12	+3.3 V_PHRAIL_SW
		13	VDO_K0+
		14	VDO_K0-
		15	GND
		16	VDO_LADJ_K0
JMIR1	Motor (printhead mirror)	1	+25 V_SW
		2	GND
		3	MM_START
		4	MM_LOCK
		5	MM_REFCLK

Connector	Connects to	Pin number	Signal
JUICC2L	2-line control panel LCD	1	LED_DRIVE
		2	+5 V_CONT
		3	MIR_TXD
		4	MIR_CS-
		5	POWER_BUTTON
		6	GND
		7	MIR_RXD
		8	+5 V_UI
		9	MIR_CLK
		10	GND
		11	I2C_DAT
		12	I2C_CLK
		13	+3.3 V_UI
		14	RESET-
		15	IRQ-
		16	+3.3 V_UI
JSCHIP1	Toner cartridge and imaging unit smart chip	1	I2C_DAT
		2	+3.3 V_SCHIP
		3	I2C_CLK
		4	GND
		5	TONER_EMPTY
JCVR1	Front door laser safety switch	1	+3.3 V_PHRAIL
		2	+3.3 V
		3	GND
JMPSNS1	Sensor (MPF paper present)	1	SNS_MPS
		2	GND
		3	PWR_MPF
JPAPER1	Sensor (tray near empty)	1	OUTPUT
		2	GND
		3	ANODE


Connector	Connects to	Pin number	Signal
JHVPS1	HVPS	1	+25 V_SW
		2	DEV_PWM
		3	ADC_HV_SERVO
		4	XFER_EN
		5	TX_PWM
		6	GND
		7	CHG_PWM
JMTR1	Motor (main drive)	1	+25 V_SW
		2	GND
		3	BRAKE
		4	PWM
		5	DIR
		6	FG
		7	+25 V_SW
		8	GND
	Sensor (toner density)	9	LED_PWM_TDS
		10	THERM_TDS
		11	SNS_TDS
		12	GND
		13	PWR_TDS
	Pick clutch	14	+25 V_SW
		15	CLUTCH_SINK
	Sensor (input)	16	SNS_INPUT
		17	GND
		18	PWR_INPUT
JTRAY1	Tray present switch	1	PWR_TRAY
		2	TRAY_DETECT
JOPT1	Paper handling option	1	+25 V_SW
		2	TXD_OPT
		3	TRAY_PULLED_N
		4	RXD_OPT
		5	GND
		6	5 V_OPT

Connector	Connects to	Pin number	Signal
JLVPS1	LVPS	1	RELAY_ON
		2	HEAT_ON
		3	ZERO_CROSS
		4	+25 V_SW_ON
		5	+25 V_CONT_RAIL
		6	GND
		7	+25 V_SW_RAIL
		8	GND
JEXIT1	Sensor (fuser exit)	1	SNS_EXIT
		2	GND
		3	PWR_EXIT
JFUSER1	Fuser thermistor	1	THERM_FUSER
		2	GND
		3	AC_RELAY_ON_TCO
		4	AC_RELAY_ON
JFAN1	Fan	1	+25 V_SW
		2	FAN_SINK
JBIN1	Sensor (bin full)	1	SNS_BF
		2	GND
		3	PWR_BF
JSOL1	MPF pick solenoid	1	+25 V_SW
		2	SOL_SINK

Maintenance

Cleaning printer parts

Cleaning the printer

 **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

Notes:


- Perform this task after every few months.
- Damage to the printer caused by improper handling is not covered by the printer warranty.

- 1** Turn off the printer, and then unplug the power cord from the electrical outlet.
- 2** Remove paper from the standard bin and multipurpose feeder.
- 3** Remove any dust, lint, and pieces of paper around the printer using a soft brush or vacuum.
- 4** Wipe the outside of the printer with a damp, soft, lint-free cloth.

Notes:

- Do not use household cleaners or detergents, as they may damage the finish of the printer.
- Make sure that all areas of the printer are dry after cleaning.

- 5** Connect the power cord to the electrical outlet, and then turn on the printer.

 **CAUTION—POTENTIAL INJURY:** To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

Parts catalog

Legend


The following column headings are used in the parts catalog:

- **Asm-index**—Identifies the item in the illustration.
- **Part number**—Identifies the unique number that correlates with the part.
- **Units/mach**—Refers to the number of units actually used in the base machine or product.
- **Units/FRU**—Refers to the number of units in a particular FRU.
- **Description**—Describes the part.

The following abbreviations are used in the parts catalog:

- **NS** (not shown) in the Asm-index column indicates that the part is procurable but is not pictured in the illustration.
- **PP** (parts packet) in the Description column indicates that the part is contained in a parts packet.


Assembly 1: Covers

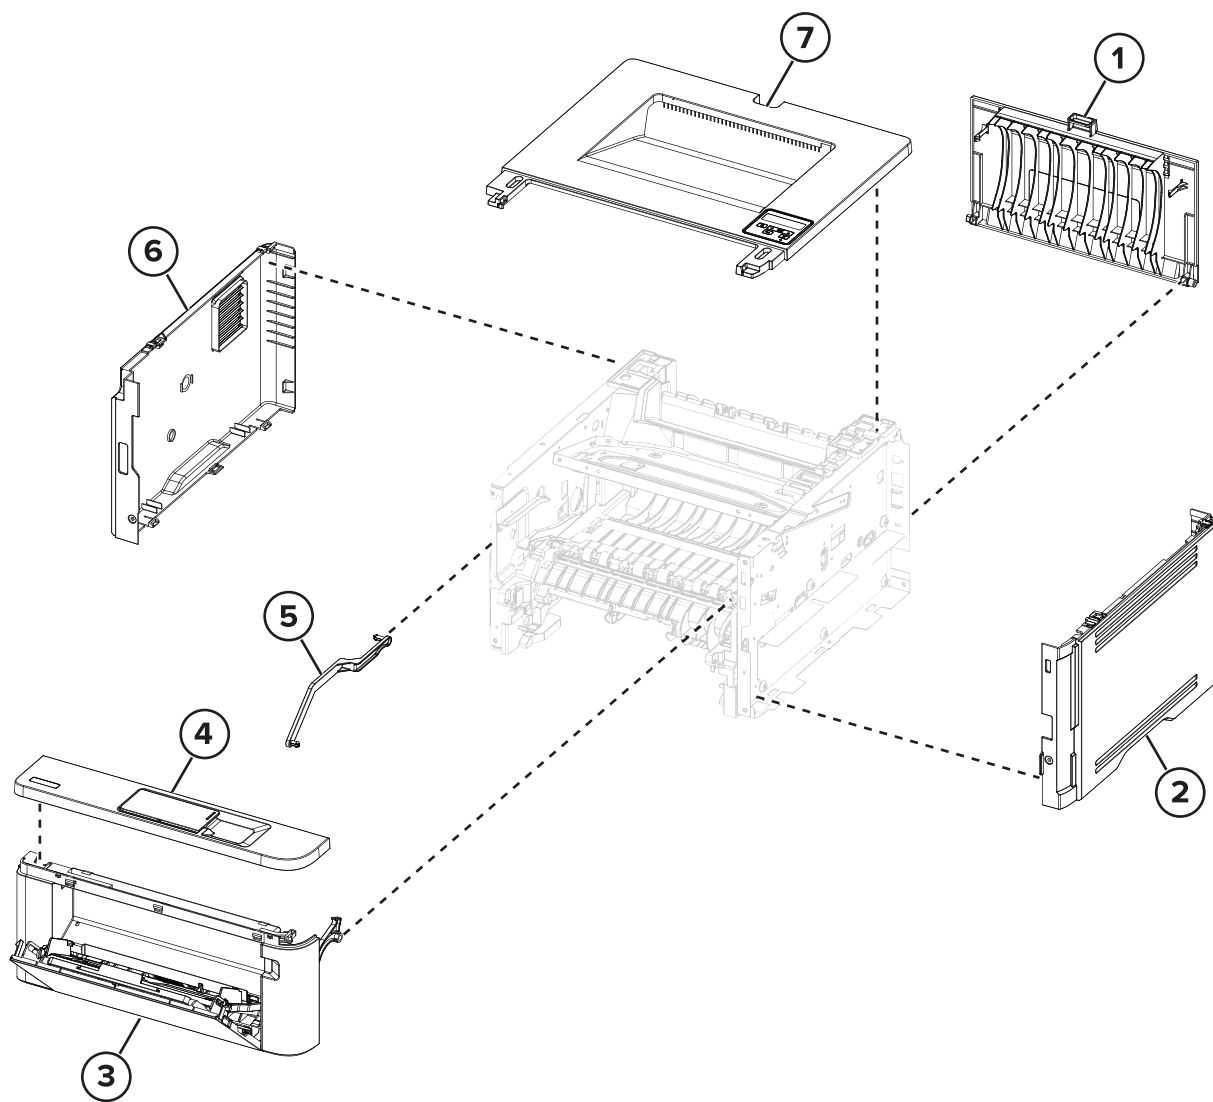

Assembly 1: Covers

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2582	1	1	Rear door	“Rear door removal” on page 132
2	41X2580	1	1	Right cover	“Right cover removal” on page 117
3	41X2584	1	1	Front door with MPF pick roller	“Front door removal” on page 128
4	41X2583	1	12	Upper front cover with decals	“Upper front cover removal” on page 128
5	41X2578	1	1	Left front door link	“Left front door link removal” on page 115
6	41X2579	1	1	Left cover	“Left cover removal” on page 109
7	41X2581	1	1	Top cover with control panel	“Top cover removal” on page 134


Assembly 2: Electronics

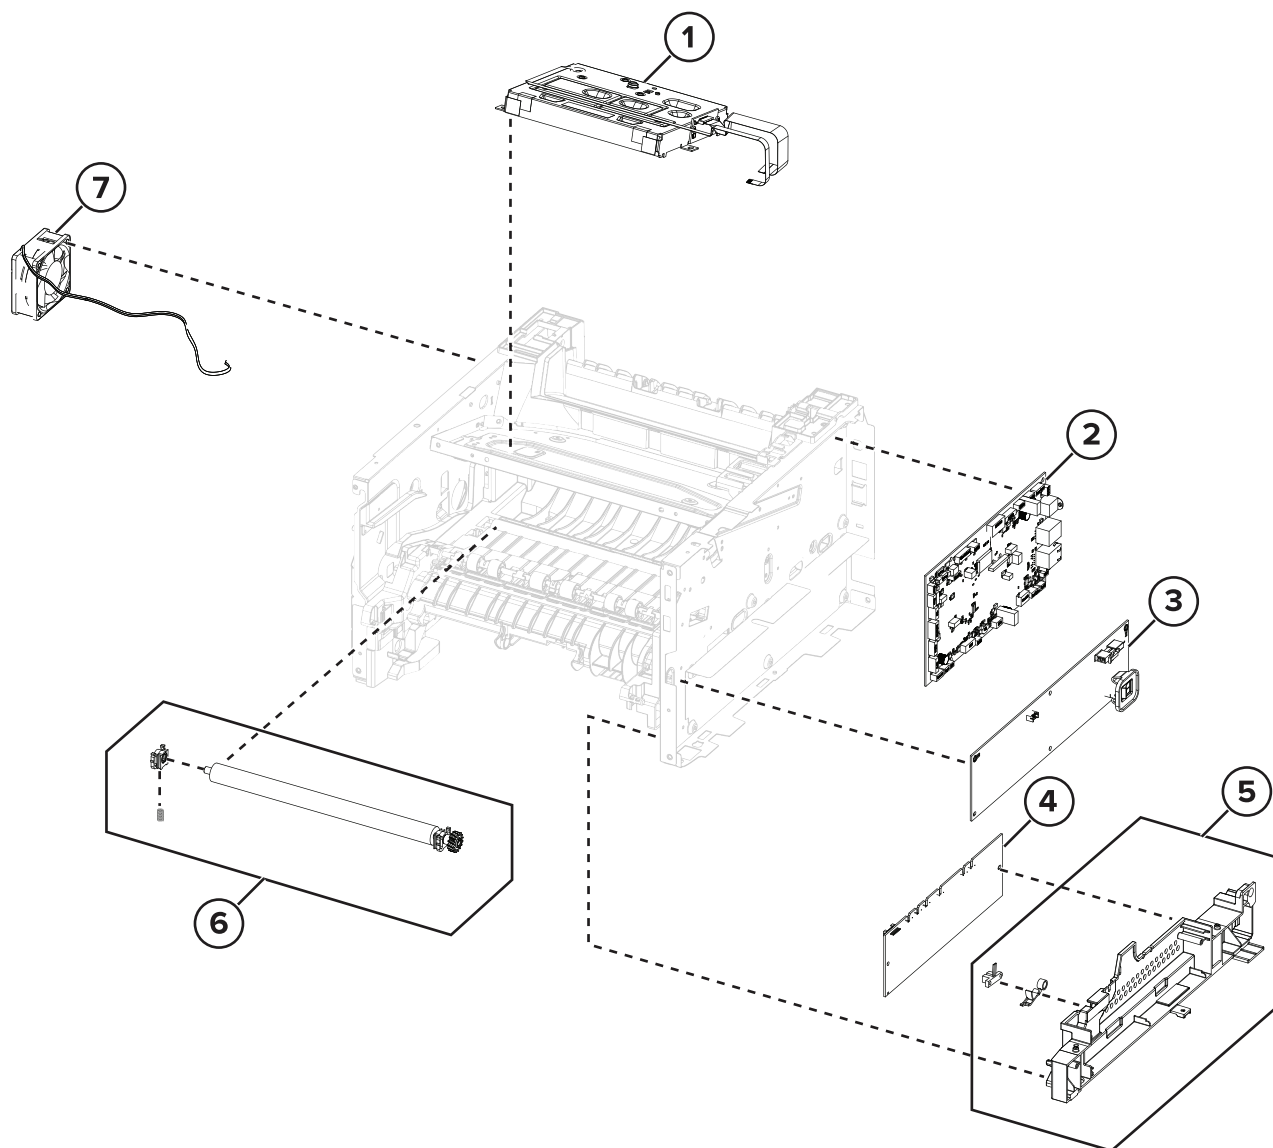

Assembly 2: Electronics

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2573	1	1	Printhead	“Printhead removal” on page 135
2	41X2655	1	1	Controller board (MS331dw)	“Controller board removal” on page 119
2	41X2656	1	1	Controller board (B3340dw, MS431dw, B3442dw)	“Controller board removal” on page 119
2	41X2861	1	1	Controller board (MS431dn, MS439dn)	“Controller board removal” on page 119
3	41X2588	1	1	LVPS, 60 W and 120 V	“LVPS removal” on page 120
3	41X2589	1	1	LVPS, 60 W and 230 V	“LVPS removal” on page 120
4	41X2592	1	1	HVPS	“HVPS removal” on page 120
5	41X2860	1	1	Sensor (tray near empty) assembly (MS439)	--
6	41X2587	1	3	Transfer roller, bearing, and spring	“Transfer roller removal” on page 129
7	41X2636	1	1	Main fan	“Main fan removal” on page 125


Assembly 3: Gears

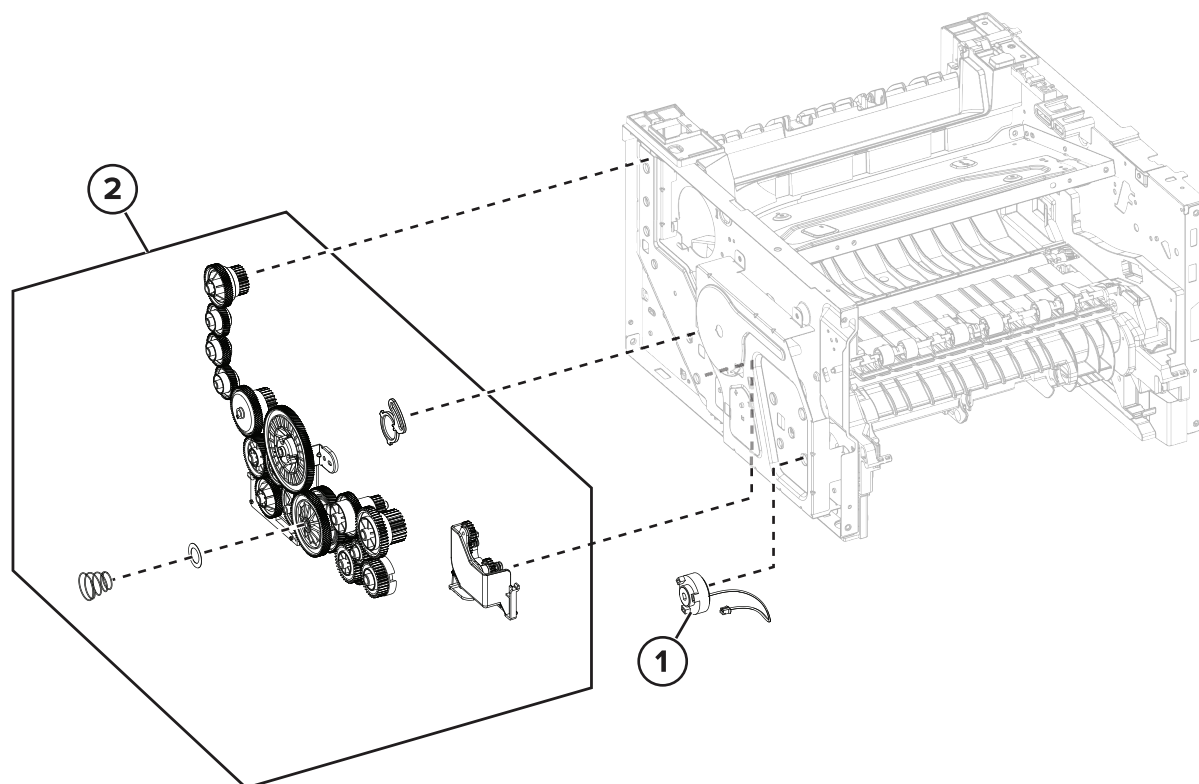

Assembly 3: Gears

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2391	1	1	Pick roller clutch	“Pick roller clutch removal” on page 114
2	41X2576	1	24	Main drive gears kit	“Main drive gears removal” on page 110


Assembly 4: Paper path

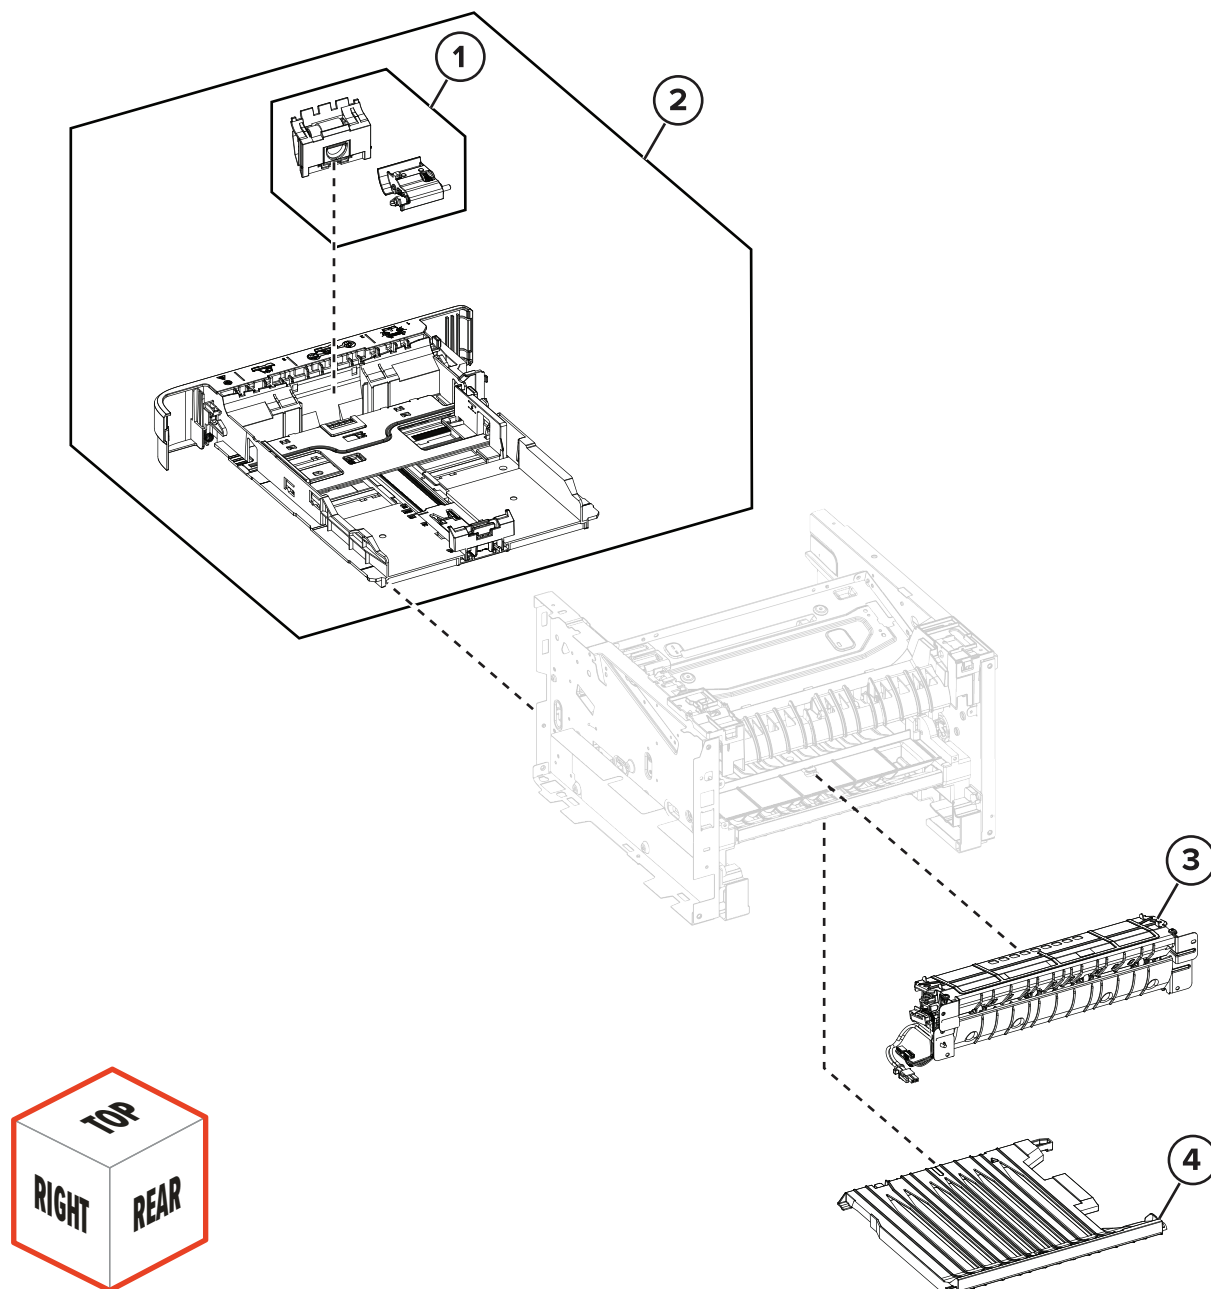

Assembly 4: Paper path

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2575	1	1	Pick separator roller	“Pick separator roller removal” on page 131
2	41X2585	1	1	250-sheet tray	--
3	41X2599	1	1	Fuser, 100 V	“Fuser removal” on page 133
3	41X2586	1	1	Fuser, 115 V	“Fuser removal” on page 133
3	41X2600	1	1	Fuser, 230 V	“Fuser removal” on page 133
4	41X2712	1	1	Duplex guide	“Duplex guide removal” on page 140

Assembly 5: 550-sheet optional tray

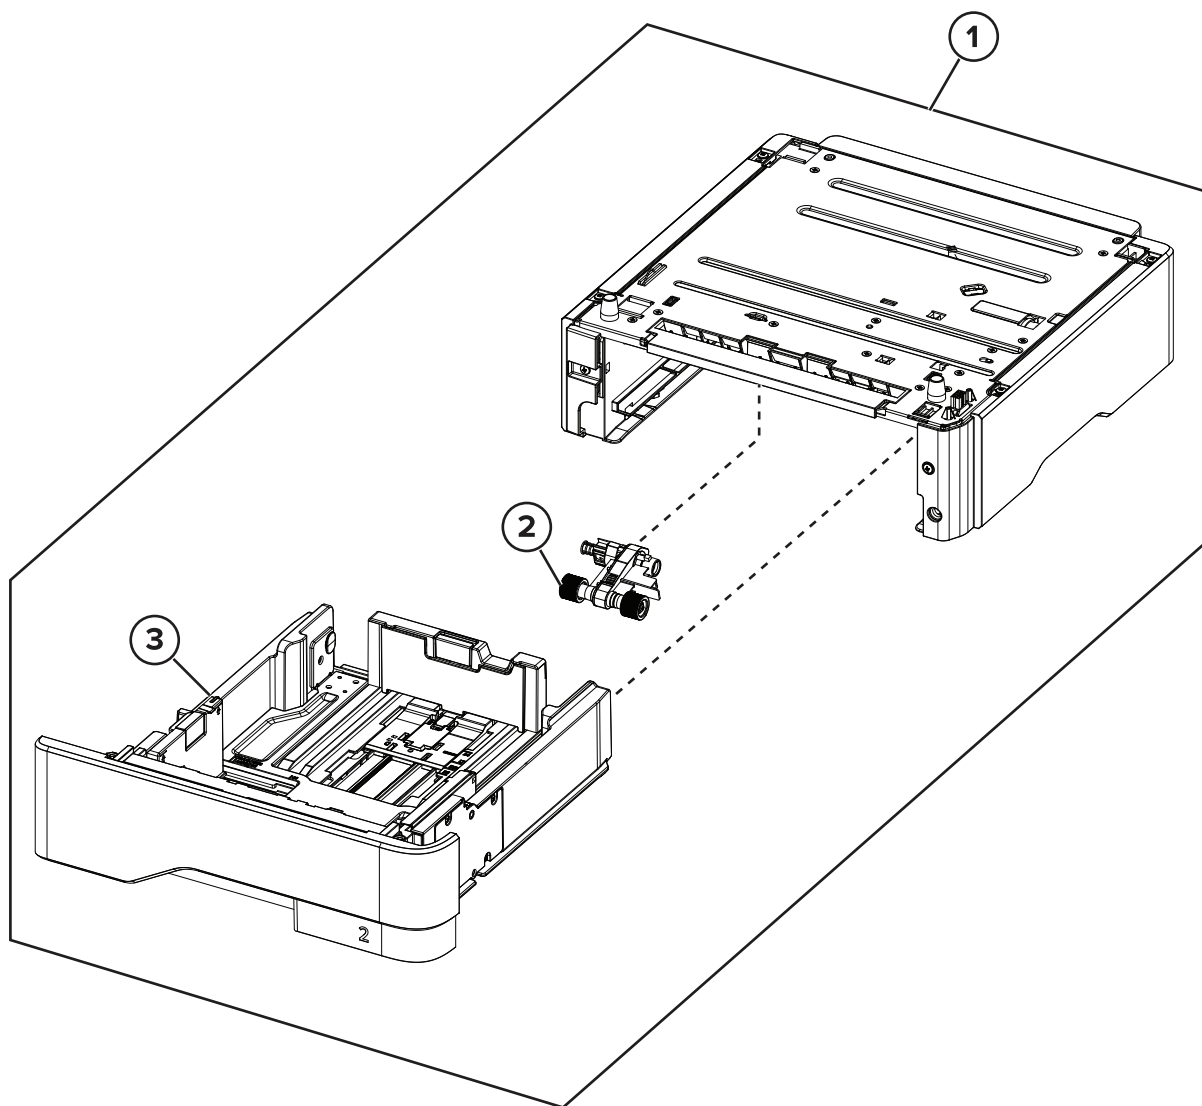

Assembly 5: 550-sheet optional tray

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X2612	1	1	550-sheet tray	--
2	41X2614	1	1	550-sheet tray pick roller	--
3	41X2613	1	1	550-sheet tray insert	--

Assembly 6: Miscellaneous

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
NS	40X0288	1	1	Power cord, Argentina	N/A
NS	40X1767	1	1	Power cord, Europe	N/A
NS	40X1766	1	1	Power cord, Bolivia and Peru	N/A
NS	40X0259	1	1	Power cord, Brazil	N/A
NS	40X0273	1	1	Power cord, Chile and Uruguay	N/A
NS	40X1792	1	1	Power cord, Korea	N/A
NS	40X0303	1	1	Power cord, PRC	N/A
NS	40X1791	1	1	Power cord, Taiwan	N/A
NS	40X0301	1	1	Power cord, Australia and New Zealand	N/A
NS	40X0271	1	1	Power cord, United Kingdom, Asian, Brunei, Cambodia, Indonesia, Laos, Malaysia, Myanmar, Philippines, Singapore, Thailand, Vietnam, Afghanistan, Bangladesh, Bhutan, India, Nepal, Pakistan, Sri Lanka, Tibet, and Hong Kong	N/A
NS	40X7229	1	1	Power cord, India	N/A

Printer specifications

Power consumption

Product power consumption

The following table documents the power consumption characteristics of the product.

Note: Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)
Printing	The product is generating hard-copy output from electronic inputs.	One-sided: 550 (MS331, B3340), 570 (MS431, MS439, B3442); Two-sided: 300 (MS331, B3340), 305 (MS431, MS439, B3442)
Copy	The product is generating hard-copy output from hard-copy original documents.	N/A
Scan	The product is scanning hard-copy documents.	N/A
Ready	The product is waiting for a print job.	5.5 (MS331, B3340), 4.9 (MS431, MS439, B3442)
Sleep Mode	The product is in a high-level energy-saving mode.	0.9
Hibernate	The product is in a low-level energy-saving mode.	0.1
Off	The product is plugged into an electrical outlet, but the power switch is turned off.	0.1

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average.

Values are subject to change. See www.lexmark.com for current values.

Sleep Mode

This product is designed with an energy-saving mode called *Sleep Mode*. The Sleep Mode saves energy by lowering power consumption during extended periods of inactivity. The Sleep Mode is automatically engaged after this product is not used for a specified period of time, called the *Sleep Mode Timeout*.

Factory default Sleep Mode Timeout for this product (in minutes):	15
---	----

By using the configuration menus, the Sleep Mode Timeout can be modified between 1 minute and 120 minutes. If the print speed is less than or equal to 30 pages per minute, then you can set the timeout only up to 60 minutes. Setting the Sleep Mode Timeout to a low value reduces energy consumption, but may increase the response time of the product. Setting the Sleep Mode Timeout to a high value maintains a fast response, but uses more energy.

Hibernate Mode

This product is designed with an ultra-low power operating mode called *Hibernate mode*. When operating in Hibernate Mode, all other systems and devices are powered down safely.

The Hibernate mode can be entered in any of the following methods:

- Using the Hibernate Timeout
- Using the Schedule Power modes

Factory default Hibernate Timeout for this product in all countries or regions	3 days
--	--------

The amount of time the printer waits after a job is printed before it enters Hibernate mode can be modified between one hour and one month.

Off mode


If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the electrical outlet.


Total energy usage

It is sometimes helpful to estimate the total product energy usage. Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage.

Selecting a location for the printer

- Leave enough room to open trays, covers, and doors and to install hardware options.
- Set up the printer near an electrical outlet.


 **CAUTION—POTENTIAL INJURY:** To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

 **CAUTION—SHOCK HAZARD:** To avoid the risk of electrical shock, do not place or use this product near water or wet locations.

- Make sure that airflow in the room meets the latest revision of the ASHRAE 62 standard or the CEN Technical Committee 156 standard.
- Provide a flat, sturdy, and stable surface.
- Keep the printer:
 - Clean, dry, and free of dust
 - Away from stray staples and paper clips
 - Away from the direct airflow of air conditioners, heaters, or ventilators
 - Free from direct sunlight and humidity extremes
- Observe the recommended temperatures and avoid fluctuations.

Ambient temperature	10 to 32.2°C (50 to 90°F)
Storage temperature	-40 to 40°C (-40 to 104°F)

- Allow the following recommended amount of space around the printer for proper ventilation:

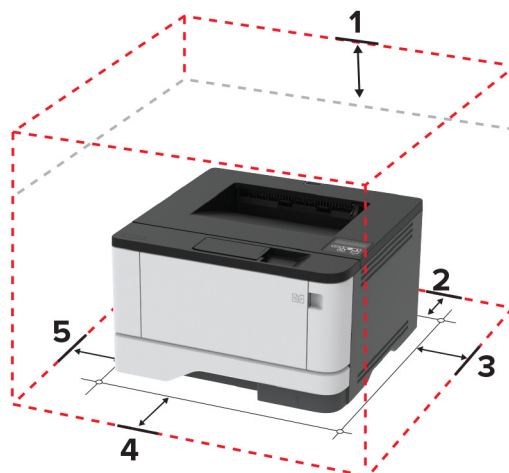

1	Top	305 mm (12 in.)
2	Rear	100 mm (3.94 in.)
3	Right side	76.2 mm (3 in.)
4	Front	305 mm (12 in.) Note: The minimum space needed in front of the printer is 76 mm (3 in.).
5	Left side	110 mm (4.33 in.)

Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

Note: Some modes may not apply in your product.

1-meter average sound pressure, dBA	
Printing	One-sided: 53; Two-sided: 50
Ready	14

Values are subject to change. See www.lexmark.com for current values.

Temperature information

Ambient operating temperature	10 to 32.2°C (50 to 90°F)
Shipping temperature	-40 to 40°C (-40 to 104°F)
Storage temperature and relative humidity	-40 to 40°C (-40 to 104°F) 8 to 80% RH


Theory of operation

POR sequence

As the printer is turned on, the engine code goes through a series of tests to verify hardware integrity. If a hardware failure is detected, then it is reported to the printer. If the POR sequence cannot be completed successfully, then the printer may post an error message. The message states that service may be needed.

Print cycle operation


Print engine layout

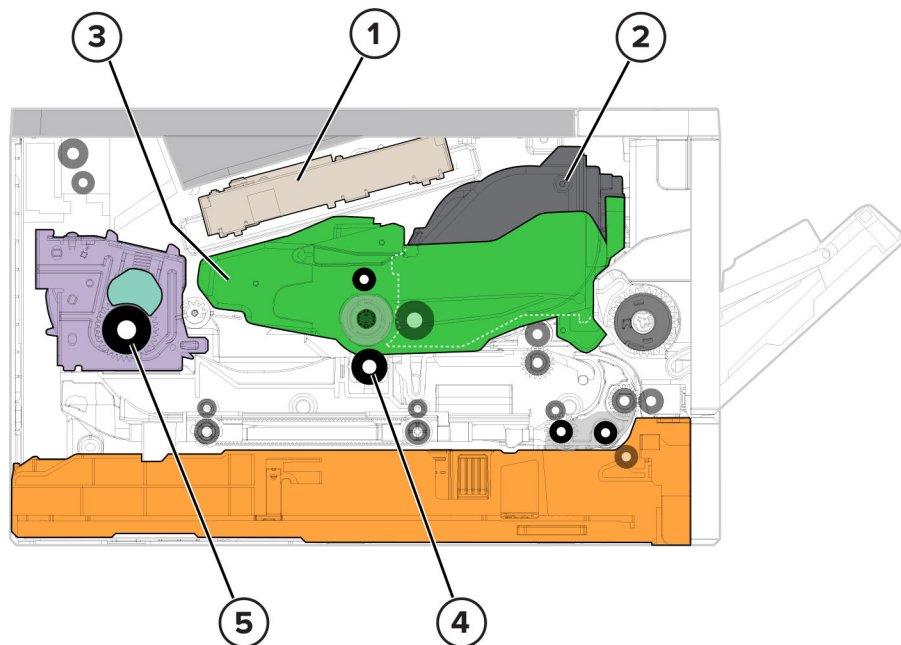


1	Printhead
2	Toner cartridge
3	Imaging unit
4	Transfer roller
5	Fuser

Print cycle

Flowchart

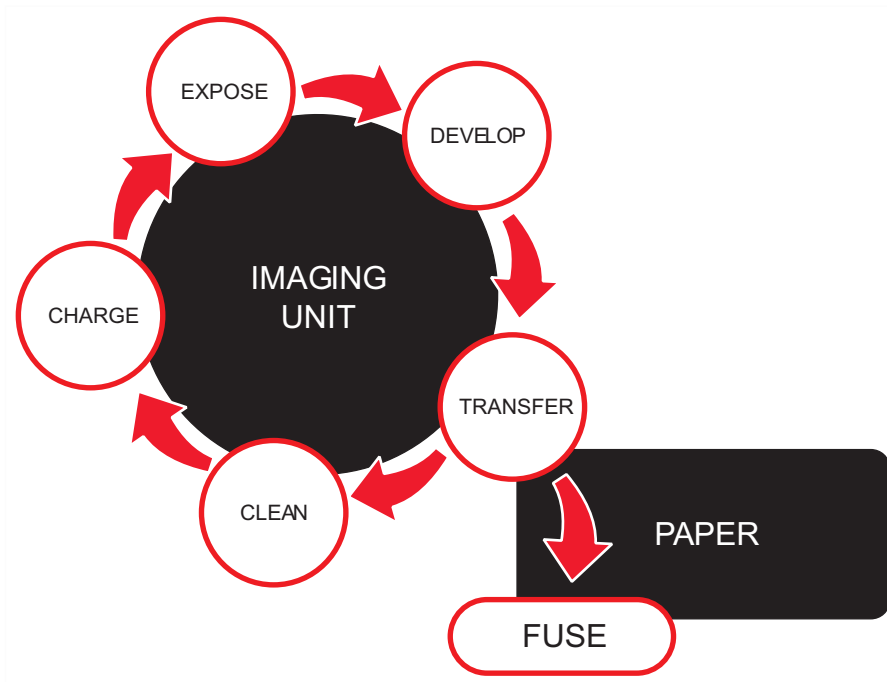


Charge

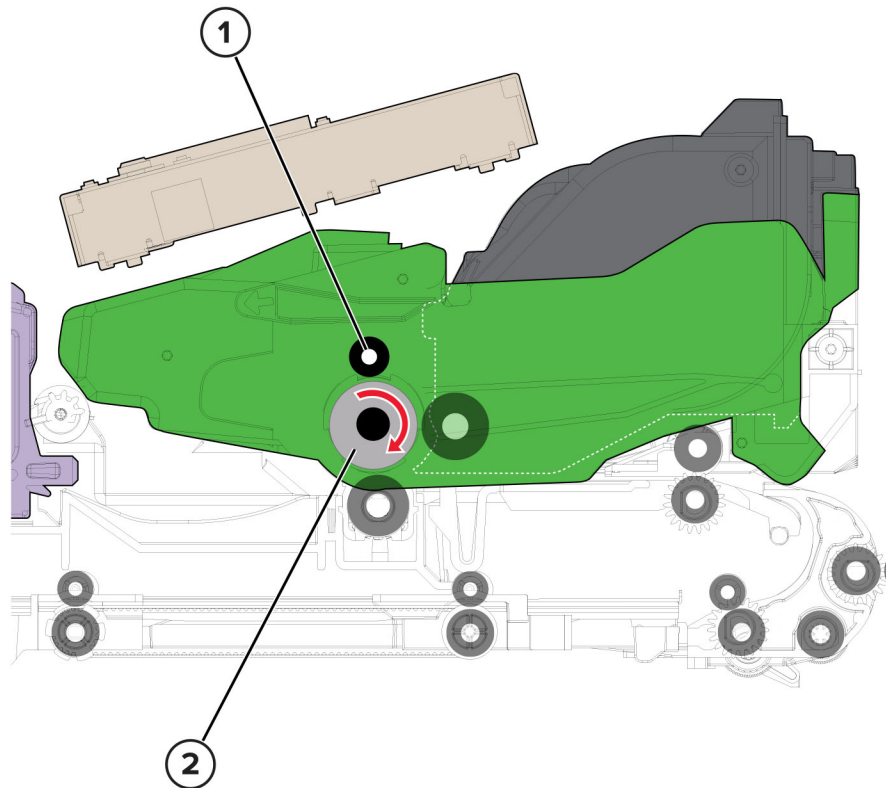

1	Charge roller
2	Photoconductor

The charge roller applies a uniform negative electrical charge to the surface of the photoconductor. The insulative properties of the photoconductor allow it to hold a charge and its photoconductive properties allow it to discharge when exposed to light.


Expose

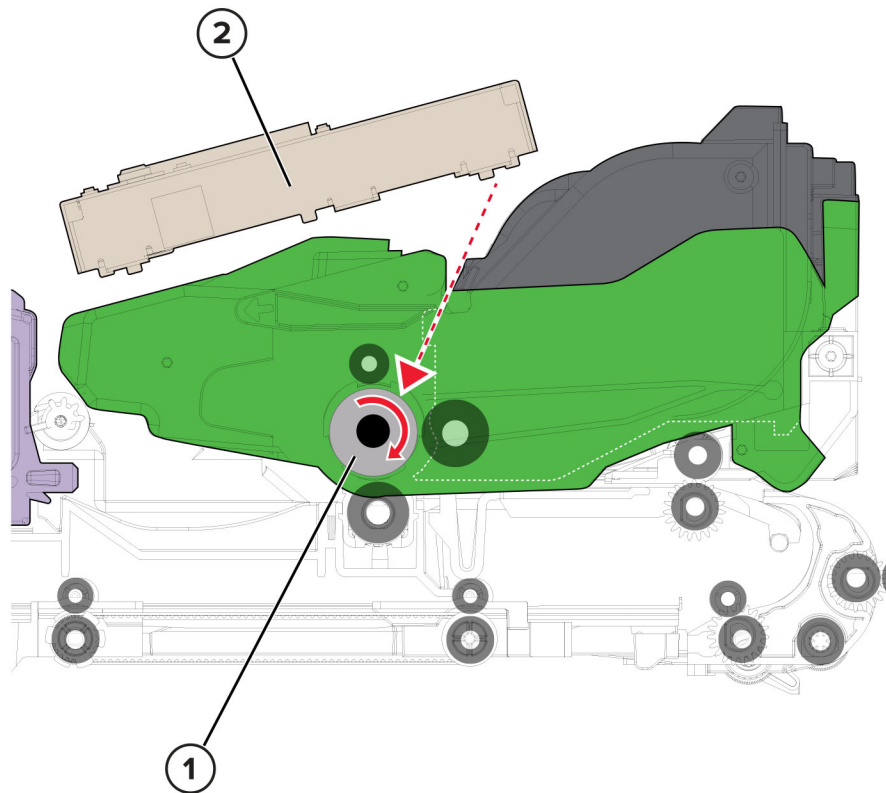

1	Photoconductor
2	Printhead

The printhead emits a laser that exposes the surface of the photoconductor. The laser pulses coincide with the digital latent image. The exposed areas of the photoconductor surface are discharged, resulting in a photoconductor surface potential that is less negative than the non-exposed areas.


Develop

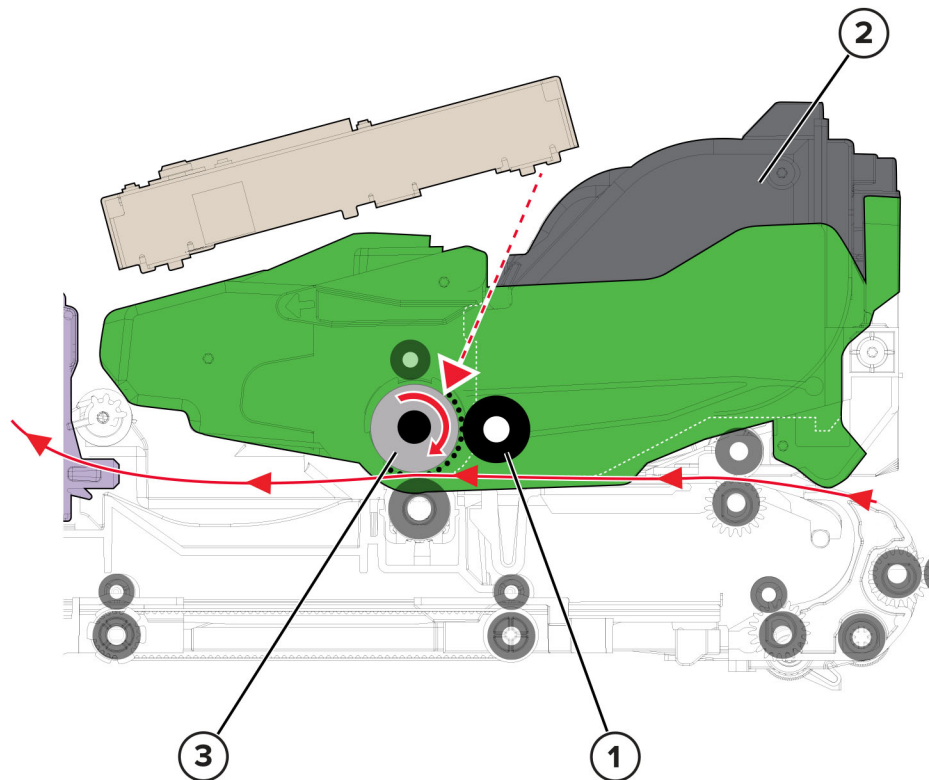

1	Developer roller
2	Toner cartridge
3	Photoconductor

The developer roller applies the toner from the toner cartridge to the photoconductor during the development process. The difference in surface potential creates an electric field that causes the toner particles to move to the photoconductor according to the pattern of the latent image.

Transfer

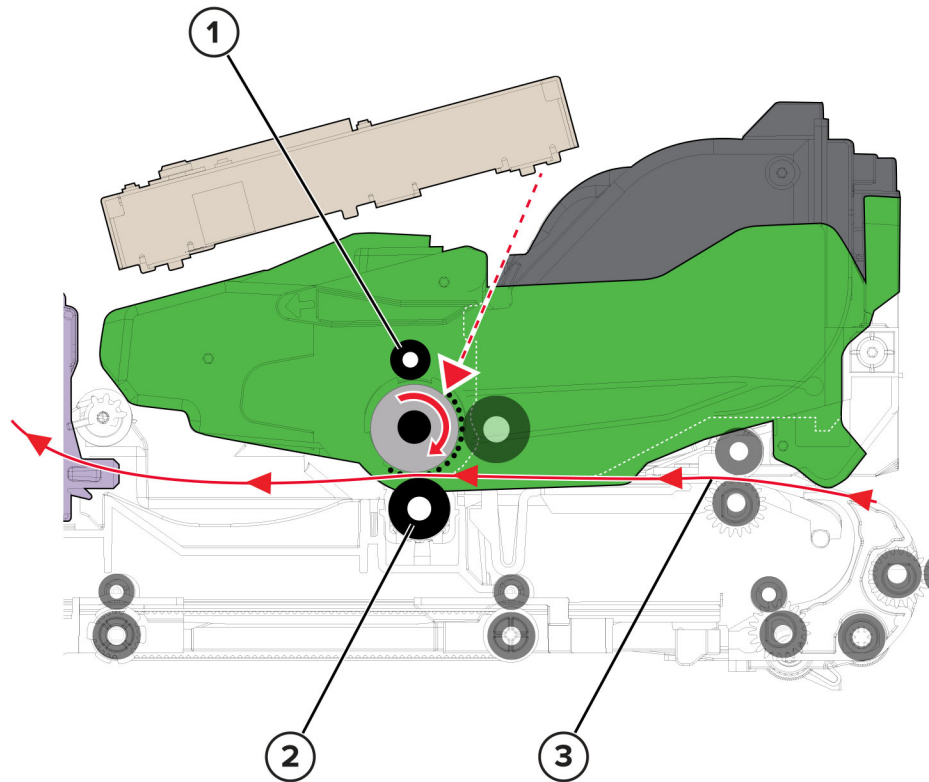


1	Charge roller
2	Transfer roller
3	Paper

A positive potential relative to the toned image formed on the photoconductor is applied to the transfer roller. This allows the transfer roller to move the developed toner from the surface of the photoconductor to the paper as the paper is passed between the transfer roller and photoconductor.

Clean

The cleaning blade removes the residual toner from the photoconductor after the transfer. After cleaning, the process moves again to the charge process and repeats each cycle until the entire image is transferred to a side of the paper.

Fuse

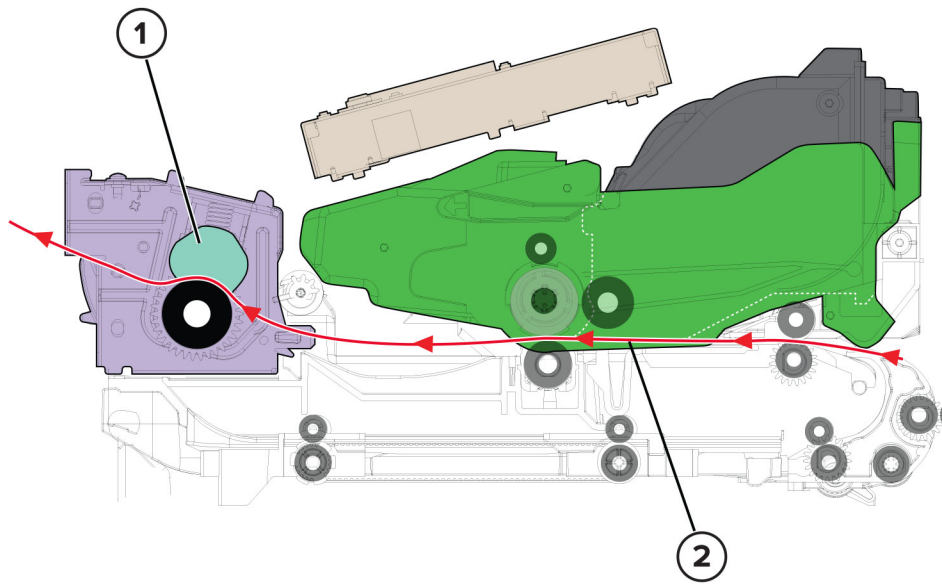


1	Fuser
2	Paper

After the toner image is transferred to the paper, the toner particles are not yet permanently bonded to the paper. For the final step in the print process, paper is transported to the fuser where heat and pressure are applied to it. As a result, the toner particles melt and are permanently fused to the paper, completing the print process. The print cycle repeats for the succeeding pages.

Printer operation


Printer sections

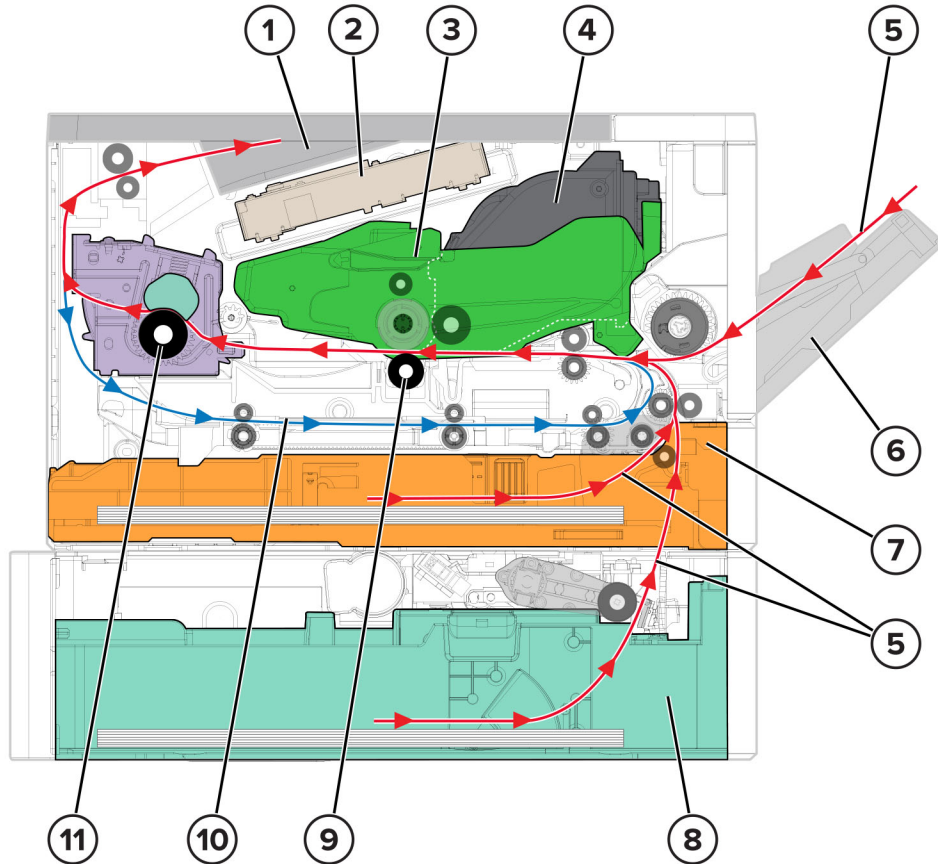

1	Output bin
2	Printhead
3	Imaging unit
4	Toner cartridge
5	Simplex paper path
6	MPF
7	Standard tray
8	Optional tray
9	Transfer roller
10	Duplex paper path
11	Fuser

Printer paper path

Simplex print job

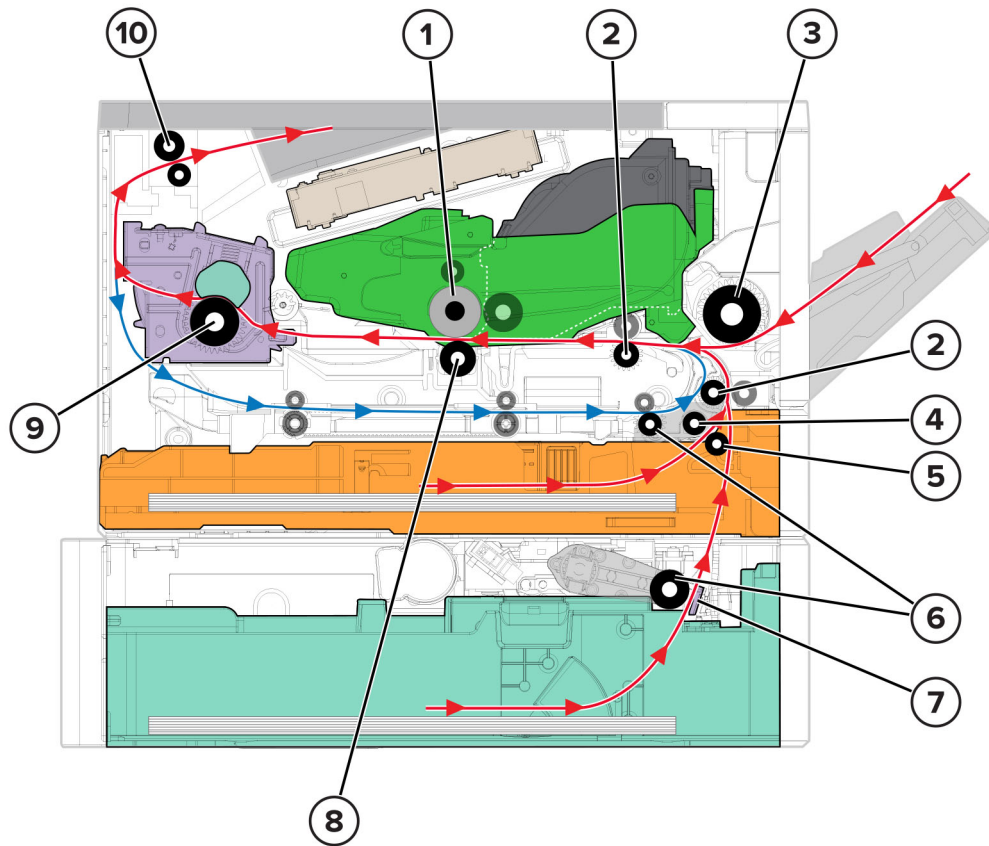


1	Photoconductor
2	Transport roller
3	MPF pick roller
4	Feed roller
5	Separator roller
6	Pick roller
7	Separator pad
8	Transfer roller
9	Fuser
10	Paper exit roller

The pick roller picks and the feed roller feeds the paper to the separator roller or separator pad. The feed roller feeds the paper to the transport roller. For MPF print jobs, the MPF pick roller picks and feeds the paper to the transport roller.

The transport rollers feed the paper to the transfer roller. At the transfer roller, the photoconductor transfers the developed image to the paper to create the printed image.

As the paper passes the fuser, heat and pressure are applied to permanently bond the toner to the paper. After printing, the paper exit roller ejects the paper to the output bin.


Duplex print job

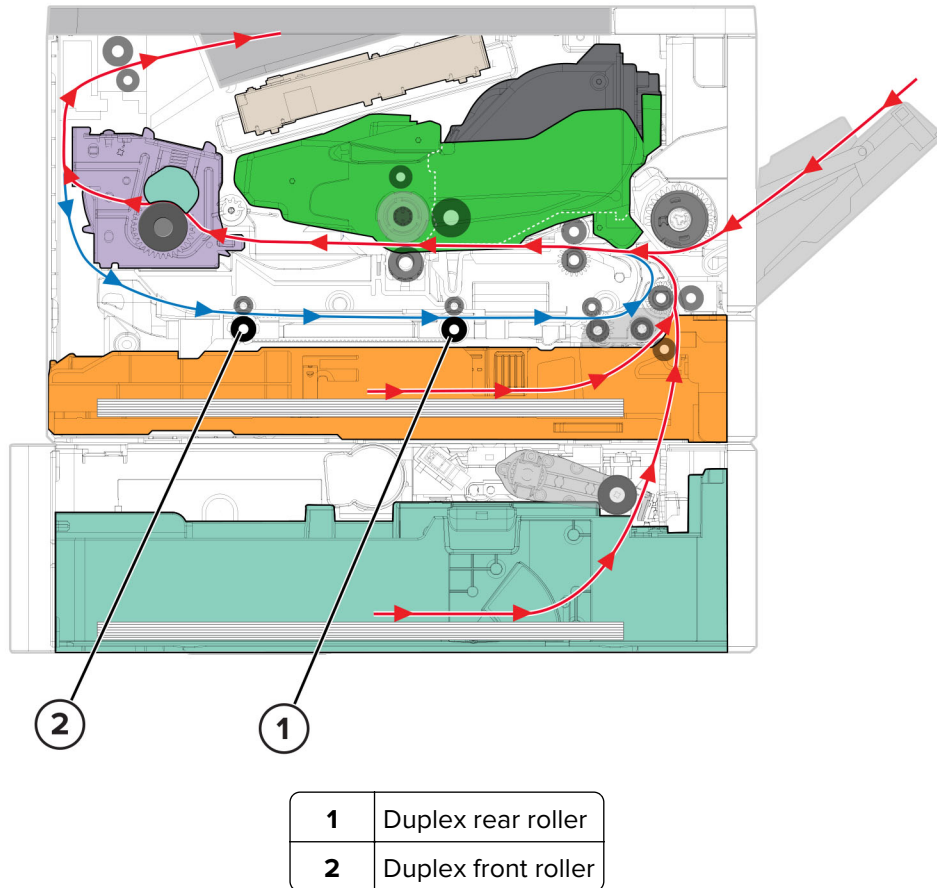

After the first side is printed, the paper stops at the output bin while still in the paper exit roller. The paper is fed again into the duplex paper path to have the opposite side printed.


The paper travels along the duplex path until it enters again the transport roller. From there, the paper continues its path until the print job is done.

Printer paper path sensors

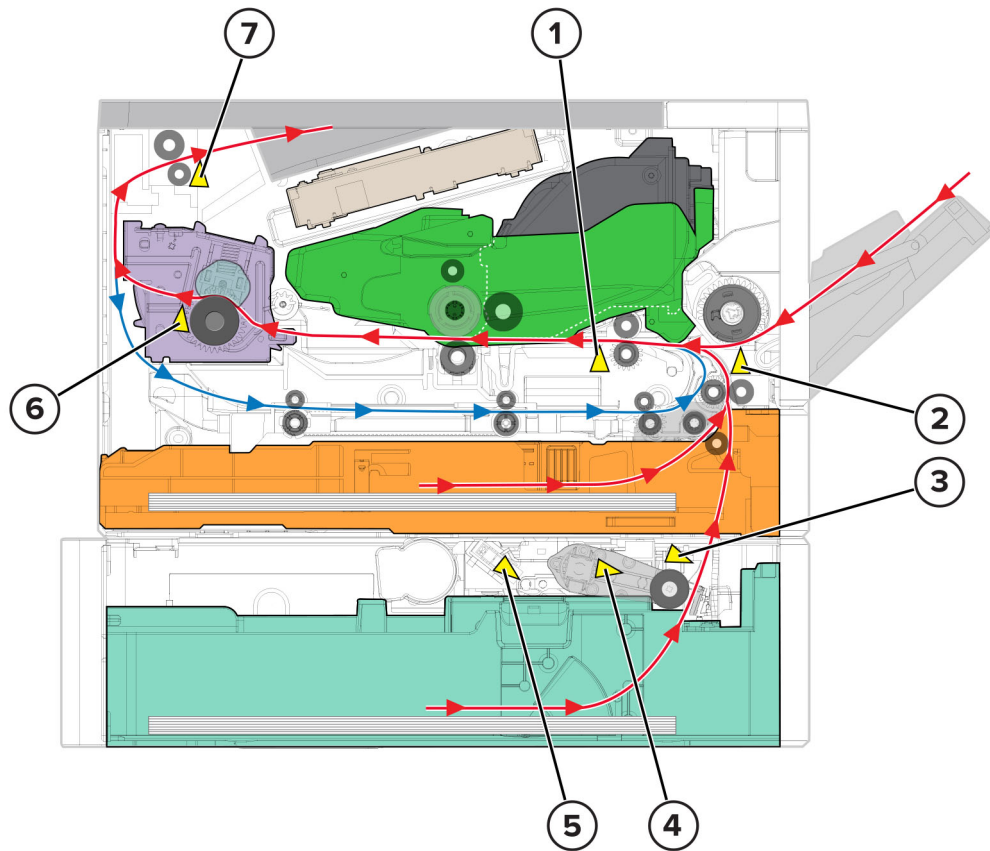

#	Sensor	Function
1	Sensor (input)	Detects paper that is traveling from the transport roller
2	Sensor (MPF paper present)	Detects paper presence in the MPF
3	Sensor (trailing edge)	Detects the trailing edge of the paper that is fed from the optional tray
4	Sensor (index)	Detects if the pick roller is at the correct height to pick paper from the optional tray
5	Sensor (paper present)	Detects paper presence in the optional tray
6	Sensor (fuser exit)	Detects paper that is exiting the fuser
7	Sensor (narrow media/bin full)	<ul style="list-style-type: none"> • Detects if paper is narrow • Detects if the bin is full

Main drive

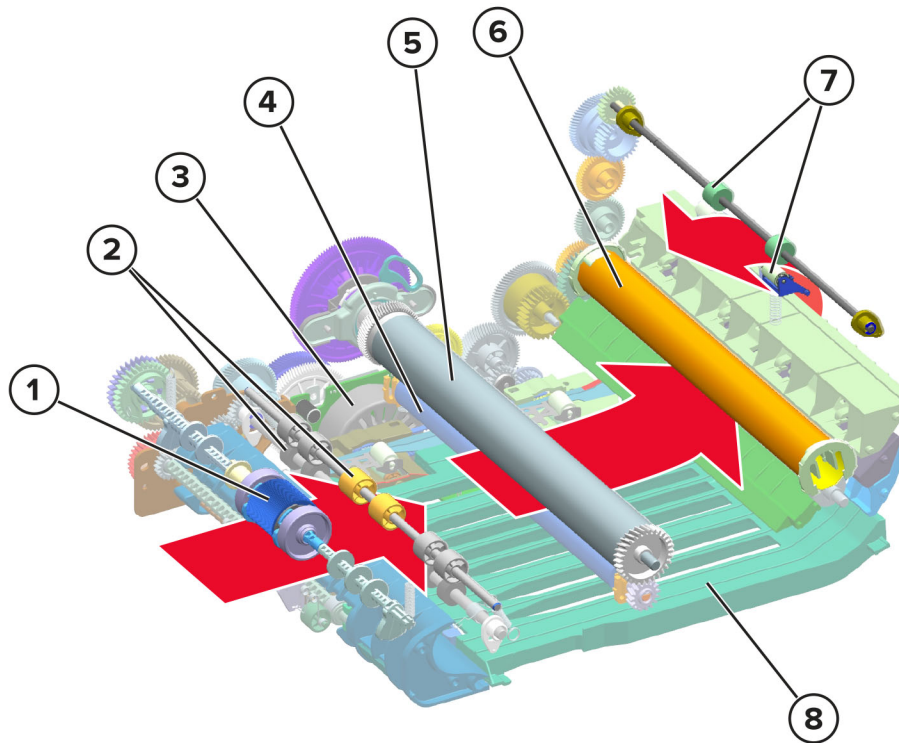

1	MPF pick roller
2	Transport roller
3	Motor (main drive)
4	Transfer roller
5	Photoconductor
6	Fuser
7	Paper exit roller
8	Duplex


The motor (main drive) provides mechanical power to the printer.

The motor transfers power through several gears to the following parts:

- MPF pick roller
- Transport roller
- Transfer roller
- Photoconductor

- Fuser
- Paper exit roller
- Duplex

Tray drive

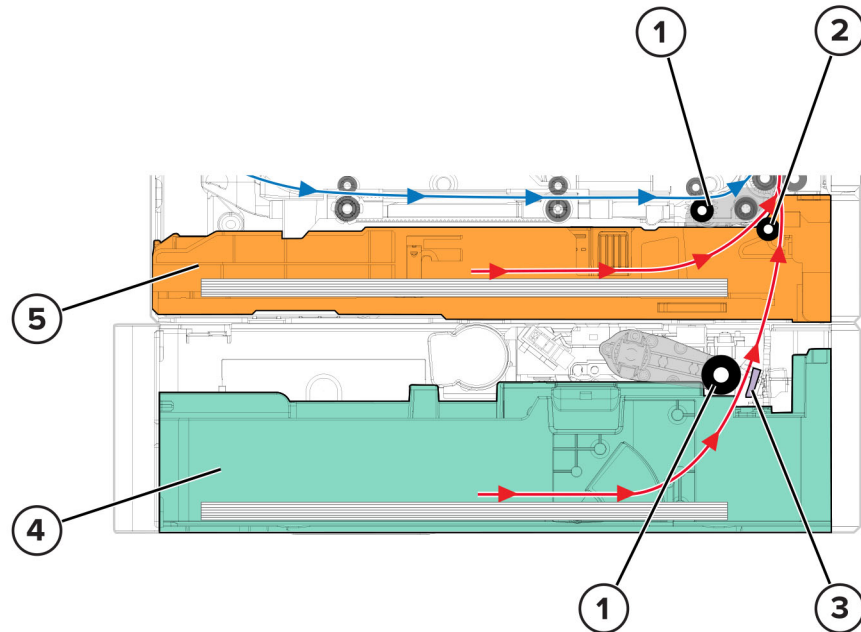

1	Pick roller
2	Separator roller
3	Separator pad
4	Optional tray
5	Standard tray

The motor (main drive) in the printer drives the standard tray. The lift plate in the tray is spring loaded and is not driven by a motor. The spring raises the lift plate until the paper is in contact with the pick roller.

The motor inside the optional tray drives the optional tray. The motor drives the lift plate to a specified height in the tray.

To prepare for feeding, the lift plate raises to push the paper against the pick roller. The lift plate stops pushing at the point where the pick roller is at the proper height for picking. After the pick roller is in position, it feeds the topmost paper. The separator roller and separator pad ensures that only one sheet is fed at a time.

Index

A

advanced print quality samples 92

C

charge 169

clean 172

cleaning

exterior of the printer 149

interior of the printer 149

cleaning the printer 149

config menu

accessing 97

configurations

printer models 17

connectors

controller board 143

control panel

critical information 106

using 91

controller board

critical information 106

D

data security notice 103

develop 171

diagnostics menu

accessing 92

E

electrostatic-sensitive parts 105

emission notices 165

error codes

0-99.99 66

121 error messages 73

126 error messages 75

140 error messages 76

162 error messages 77

200 paper jam messages 51

202 paper jam messages 58

232 paper jam messages 64

242 paper jam messages 66

600 error messages 79

602 error messages 79

611 error messages 79

621 error messages 79

640 error messages 79

662 error messages 79

912 error messages 82

938–992 error messages 86

ESD-sensitive parts 105

event log

display log 92

mark log 93

print log 93

print log summary 93

expose 170

F

fuse 173

I

indicator light

understanding the status 91

invalid code, fixing 100

invalid engine mode

accessing 100

L

low insertion force (LIF) connector 108

M

menu

Configuration Menu 98

moving the printer 164

N

noise emission levels 165

notices 163, 164, 165

P

paper path, duplex 175

paper path, simplex 175

paper sizes, supported 17

paper types, supported 19

paper weights, supported 20

parts catalog legend 150

print cycle 168

charge 169

clean 172

develop 171

expose 170

flowchart 168

fuse 173

- transfer 172
- print engine layout 167
- printer
 - minimum clearances 164
 - selecting a location 164
- printer configuration 143
- printer diagnostics
 - input tray quick print 93
 - output bin quick feed 94
- printer diagnostics & adjustments
 - motor tests 96
 - sensor tests 96
- printer diagnostics and adjustments
 - margin offset 97
 - registration adjust 97
 - universal override 97
- printer model
 - configurations 17
- printer sections 174
- printer setup
 - enable edge-to-edge (printing) 94
 - engine setting [x] 95
 - EP setup 95
 - model name 95
 - permanent page count 94
 - printed page count (mono) 94
 - process ID 94
 - serial number 95
- printer status 91

R

- recovery mode
 - accessing 101
- removal procedures
 - tips 109
- removals
 - bin full sensor actuator 138
 - control panel 126
 - control panel cable 127
 - controller board 119
 - duplex guide 140
 - front door 128
 - fuser 133
 - HVPS 120
 - left cover 109
 - left front door link 115
 - LVPS 120
 - main drive gears 110
 - main fan 125
 - MPF pick roller 130
 - MPF solenoid cable 124
 - pick roller clutch 114

- pick separator roller 131
- printhead 135
- rear door 132
- redrive 137
- right cover 117
- right front door link 124
- sensor (front door interlock) 123
- sensor (MPF paper present) 122
- top cover 134
- transfer roller 129
- upper front cover 128
- reports
 - device settings 92
 - installed licenses 92

S

- safe mode 25
- selecting a location for the printer 164
- sensors, paper path 177
- service checks troubleshooting
 - 111 service error messages 71
- service engineer (SE) menu
 - accessing 99
 - general SE 99
 - network SE menu 99
- supported paper sizes 17
- supported paper types 19
- supported paper weights 20
- symptoms
 - printer 87

T

- theory
 - duplex paper path 175
 - main drive 178
 - paper path sensors 177
 - simplex paper path 175
 - tray drive 179
- theory of operation
 - POR sequence 167
- tools, required 20
- transfer 172
- troubleshooting
 - initial check 25
- troubleshooting, service checks
 - 111 service error messages 71

U

- updating the printer firmware
 - using a flash drive 106
 - using a network computer 106

using a USB cable connection 106
using the control panel 91

Part number index

P/N	Part name	Page
40X0259	Power cord, Brazil.....	161
40X0271	Power cord, United Kingdom, Asian, Brunei, Cambodia, Indonesia, Laos, Malaysia, Myanmar, Philippines, Singapore, Thailand, Vietnam, Afghanistan, Bangladesh, Bhutan, India, Nepal, Pakistan, Sri Lanka, Tibet, and Hong Kong.....	161
40X0273	Power cord, Chile and Uruguay.....	161
40X0288	Power cord, Argentina.....	161
40X0301	Power cord, Australia and New Zealand.....	161
40X0303	Power cord, PRC.....	161
40X1766	Power cord, Bolivia and Peru.....	161
40X1767	Power cord, Europe.....	161
40X1791	Power cord, Taiwan.....	161
40X1792	Power cord, Korea.....	161
40X7229	Power cord, India.....	161
41X2391	Pick roller clutch.....	156
41X2573	Printhead.....	154
41X2575	Pick separator roller.....	158
41X2576	Main drive gears kit.....	156
41X2578	Left front door link.....	152
41X2579	Left cover.....	152
41X2580	Right cover.....	152
41X2581	Top cover with control panel.....	152
41X2582	Rear door.....	152
41X2583	Upper front cover with decals.....	152
41X2584	Front door with MPF pick roller.....	152
41X2585	250-sheet tray.....	158
41X2586	Fuser, 115 V.....	158
41X2587	Transfer roller, bearing, and spring.....	154
41X2588	LVPS, 60 W and 120 V.....	154
41X2589	LVPS, 60 W and 230 V.....	154
41X2592	HVPS.....	154
41X2599	Fuser, 100 V.....	158
41X2600	Fuser, 230 V.....	158

P/N	Part name	Page
41X2612	550-sheet tray.....	160
41X2613	550-sheet tray insert.....	160
41X2614	550-sheet tray pick roller.....	160
41X2636	Main fan.....	154
41X2655	Controller board (MS331dw).....	154
41X2656	Controller board (B3340dw, MS431dw, B3442dw).....	154
41X2712	Duplex guide.....	158
41X2860	Sensor (tray near empty) assembly (MS439).....	154
41X2861	Controller board (MS431dn, MS439dn).....	154

Part name index

P/N	Part name	Page
41X2585	250-sheet tray.....	158
41X2612	550-sheet tray.....	160
41X2613	550-sheet tray insert.....	160
41X2614	550-sheet tray pick roller.....	160
41X2656	Controller board (B3340dw, MS431dw, B3442dw).....	154
41X2655	Controller board (MS331dw).....	154
41X2861	Controller board (MS431dn, MS439dn).....	154
41X2712	Duplex guide.....	158
41X2584	Front door with MPF pick roller.....	152
41X2599	Fuser, 100 V.....	158
41X2586	Fuser, 115 V.....	158
41X2600	Fuser, 230 V.....	158
41X2592	HVPS.....	154
41X2579	Left cover.....	152
41X2578	Left front door link.....	152
41X2588	LVPS, 60 W and 120 V.....	154
41X2589	LVPS, 60 W and 230 V.....	154
41X2576	Main drive gears kit.....	156
41X2636	Main fan.....	154
41X2391	Pick roller clutch.....	156
41X2575	Pick separator roller.....	158
40X0288	Power cord, Argentina.....	161
40X0301	Power cord, Australia and New Zealand.....	161
40X1766	Power cord, Bolivia and Peru.....	161
40X0259	Power cord, Brazil.....	161
40X0273	Power cord, Chile and Uruguay.....	161
40X1767	Power cord, Europe.....	161
40X7229	Power cord, India.....	161
40X1792	Power cord, Korea.....	161
40X0303	Power cord, PRC.....	161
40X1791	Power cord, Taiwan.....	161

P/N	Part name	Page
40X0271	Power cord, United Kingdom, Asian, Brunei, Cambodia, Indonesia, Laos, Malaysia, Myanmar, Philippines, Singapore, Thailand, Vietnam, Afghanistan, Bangladesh, Bhutan, India, Nepal, Pakistan, Sri Lanka, Tibet, and Hong Kong.....	161
41X2573	Printhead.....	154
41X2582	Rear door.....	152
41X2580	Right cover.....	152
41X2860	Sensor (tray near empty) assembly (MS439).....	154
41X2581	Top cover with control panel.....	152
41X2587	Transfer roller, bearing, and spring.....	154
41X2583	Upper front cover with decals.....	152

B3340dw, B3442dw, MS331dn,
MS431dn, MS431dw, MS439dn

WIRING DIAGRAM

