

OKI


READ THIS BOOK

First

MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS

Quick Start Guide


ES9465 MFP/ES9475 MFP

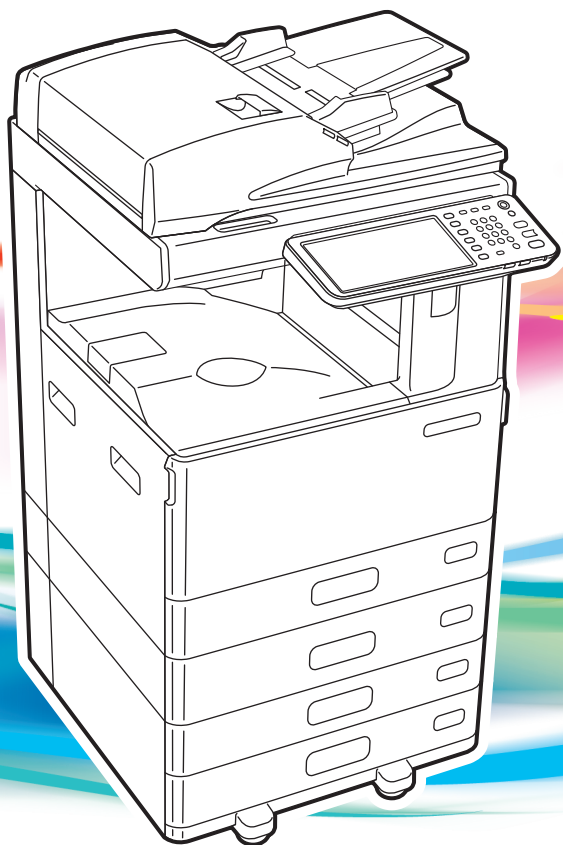

Lineup of Our Manuals

Some of these manuals are printouts and others are PDF files recorded in the Software DVD-ROM. In the printouts, precautions and basic operations are described. Be sure to read "Safety Information" before using the equipment. In the PDF files, detailed copying functions and other settings are described. Select and read those best suited to your needs.

Printouts

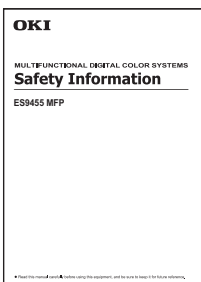


Safety Information

This Safety Information describes the necessary precautions for use. For your added security, be sure to read this booklet first. PDF files recorded in the "Software DVD-ROM".



Installation Safety

This Installation Safety describes the necessary precautions for use. For your added security, be sure to read this booklet first.

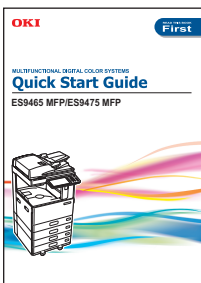

Quick Start Guide (This manual)

This Quick Start Guide describes the preparations, basic and advanced usage, maintenance and regular cleaning of the equipment. PDF files recorded in the "Software DVD-ROM".

How to use the Software DVD-ROM

Windows:

1. Insert the "Software DVD-ROM" into the computer.
2. Click [Run Setup.exe] after [AutoPlay] is displayed.
If the [User Account Control] dialog box is displayed, click [Yes].
3. Select the language.
4. Select the device of your machine, and then click [Next].
5. Read the license agreement and then click [I Agree].
6. Read "Environmental advice for Users" and click [Next].
7. Click [Online Manuals] and then [User's Manual].
8. Click the button of the manual which you want to view.

Macintosh:

1. Insert the "Software DVD-ROM" into the computer.
2. Open the [Manuals] folder and then the desired language folder.
3. Double-click the index file.
4. Click the button of the manual which you want to view.

Copying Guide

This Copying Guide describes the operations and settings enabled with the [COPY] button on the control panel.

Scanning Guide

This Scanning Guide describes the operations and settings enabled with the [SCAN] button on the control panel and those of Internet Fax.

e-Filing Guide

This e-Filing Guide describes the operations and settings enabled with the [Filing Box] button on the control panel and the e-Filing web utility.

This e-Filing web utility enables you to operate e-Filing using the browser on your computer.

MFP Management Guide

This MFP Management Guide describes the operations and settings enabled with the [SETTING] button and the [COUNTER] button on the control panel.

Software Installation Guide

This Software Installation Guide describes the installation procedures for printer drivers and utilities.

Printing Guide

This Printing Guide describes the settings of printer drivers required for printing and the various procedures.

TopAccess Guide

This TopAccess Guide describes procedures for remote setup and management from a web-based utility, "TopAccess".

This "TopAccess" web utility enables you to manage the equipment using the browser on your computer.

Troubleshooting Guide

This Troubleshooting Guide describes how to deal with problems, such as paper misfeeds, as well as how to react to messages displayed on the touch panel.

Network Fax Guide

This Network Fax Guide describes the operations of the Fax Driver.

The Fax driver enables you to send electronic documents as faxes or Internet faxes from your computer.

High Security Mode Management Guide

This High Security Mode Management Guide describes the conditions and settings to use the equipment in the high security mode.

GD-1320/GD-1260 Operator's Manual for FAX Unit

This Operator's Manual describes how to use the fax functions.

Help menu for client software

To run the following client software, refer to the Help menu of each:

- AddressBook Viewer
- e-Filing Backup/Restore Utility
- TWAIN Driver / File Downloader

Operator's manuals of options

In the following options sold separately, the corresponding operator's manuals are co-packed.

- GN-1060 Operator's Manual for Wireless LAN Module
- GP-1070 Operator's Manual for Data Overwrite Enabler
- KP-2004 Operator's Manual for OKI IC Card Reader
- KP-2005 Operator's Manual for OKI IC Card Reader

To read manuals in PDF (Portable Document Format) files

Viewing and printing manuals in PDF files require that you install Adobe Reader or Adobe Acrobat Reader on your PC. If Adobe Reader or Adobe Acrobat Reader is not installed on your PC, download and install it from the website of Adobe Systems Incorporated.

How to Read This Manual

Symbols in this manual

In this manual, some important items are described with the symbols shown below. Be sure to read these items before using this equipment.

WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding objects.

CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage to the equipment or surrounding objects, or loss of data.

Note Indicates information to which you should pay attention when operating the equipment.

Read the following description as required.

Tip Describes handy information that is useful to know when operating the equipment.




Indicates the pages describing items related to what you are currently doing.


Description of original/paper direction

Paper or originals of A4 or B5 / LT size can be placed either in a portrait direction or in a landscape direction. In this manual, “-R” is added to this paper size when this size of paper or original is placed in a landscape direction.

Example: A4 / LT size original on the original glass

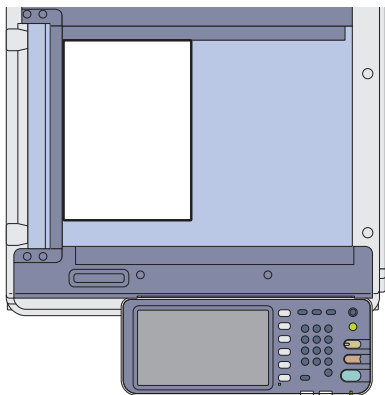

Placed in a portrait direction: A4 / LT

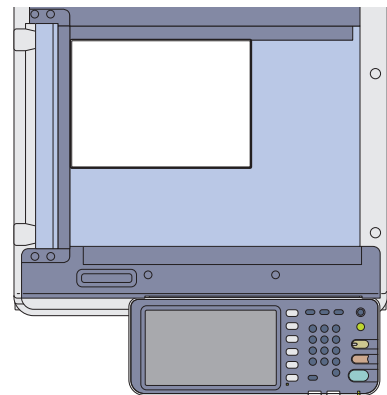

Placed in a landscape direction: A4-R / LT-R

Paper or originals of A3 or B4 / LD or LG size can only be placed in a landscape direction, therefore “-R” is not added to these sizes.

Screens and Operation Procedures

- In this manual, the screens and the operation procedures in Windows are described for Windows 7. The details on the screens may differ depending on how the equipment is used, such as the status of the installed options, the OS version and the applications.
- The illustration screens used in this manual are for paper in the A/B format. If you use paper in the LT format, the display or the order of buttons in the illustrations may differ from that of your equipment.

CONTENTS

| | |
|-----------------------------------|---|
| How to Read This Manual | 2 |
| Recommended toner cartridges..... | 4 |

Chapter 1 PREPARATIONS

| | |
|------------------------------------|----|
| Description of Each Component..... | 6 |
| Turning Power ON/OFF | 12 |
| Placing Paper and Originals | 15 |
| Installing Client Software | 17 |

Chapter 2 BASIC OPERATION

| | |
|--------------------------------|----|
| Basic Copying Operation..... | 24 |
| Basic Fax Operation..... | 28 |
| Basic Scanning Operation..... | 32 |
| Basic e-Filing Operation..... | 34 |
| Basic Printing Operation | 36 |
| Basic Menu Operation | 38 |

Chapter 3 MAINTENANCE

| | |
|---------------------------------|----|
| Replacing Toner Cartridge | 40 |
| Replacing Waste Toner Box..... | 41 |
| Replacing Staple Cartridge..... | 42 |
| Regular Cleaning | 47 |

Chapter 4 TROUBLESHOOTING

| | |
|----------------------|----|
| Troubleshooting..... | 50 |
|----------------------|----|

Chapter 5 ADVANCED FUNCTIONS

| | |
|--------------------------|----|
| Advanced Functions | 54 |
|--------------------------|----|

Chapter 6 INFORMATION ABOUT EQUIPMENT

| | |
|--------------------------------------|----|
| Items Included in This Product | 64 |
| Software DVD-ROM..... | 65 |
| Client Software | 66 |
| Options | 68 |
| Logging in..... | 71 |
| Specifications of Equipment | 74 |
| Specifications of Options..... | 77 |

| | |
|-------------|----|
| INDEX | 83 |
|-------------|----|

Recommended toner cartridges

To assure optimal printing performance, we recommend that you use only genuine OKI toner cartridges. If you use an OKI-recommended toner cartridge, you can utilize the following three functions of this equipment:

- **Cartridge detecting function:**

This function checks if the toner cartridge is correctly installed and notifies you if it is not.

- **Toner remaining check function:**

This function notifies you when there is little toner remaining in the cartridge, as well as informing this to your authorized service representative automatically by the remote service.

- **Image quality optimization function:**

This function controls image quality according to the characteristics of the toner to be used and enables you to print images of an optimal quality.

If you are using a toner cartridge other than the one we recommend, the equipment may not be able to detect whether it is installed or not. Therefore, even if the toner cartridge is correctly installed, the error message "TONER NOT RECOGNIZED" appears on the touch panel and printing may not be performed. You may also not be able to utilize the image quality optimization function, the toner remaining check function and the remote service function notifying your authorized service representative automatically.

If you are using a toner cartridge other than the one we recommend, the toner will not be recognized. If this is a problem for you, please contact your service representative. Remember you will not be able to utilize the toner remaining check function and Image quality optimization function as we mentioned.

Trademarks

- The official name of Windows XP is Microsoft Windows XP Operating System.
- The official name of Windows Vista is Microsoft Windows Vista Operating System.
- The official name of Windows 7 is Microsoft Windows 7 Operating System.
- The official name of Windows 8 is Microsoft Windows 8 Operating System.
- The official name of Windows Server 2003 is Microsoft Windows Server 2003 Operating System.
- The official name of Windows Server 2008 is Microsoft Windows Server 2008 Operating System.
- The official name of Windows Server 2012 is Microsoft Windows Server 2012 Operating System.
- Microsoft, Windows, Windows NT, and the brand names and product names of other Microsoft products are trademarks of Microsoft Corporation in the US and other countries.
- Apple, AppleTalk, Macintosh, Mac, Mac OS, Safari, and TrueType are trademarks of Apple Inc. in the US and other countries.
- Adobe, Acrobat, Reader, and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- Mozilla, Firefox and the Firefox logo are trademarks or registered trademarks of Mozilla Foundation in the U.S. and other countries.
- IBM, AT and AIX are trademarks of International Business Machines Corporation.
- NOVELL, NetWare and NDS are trademarks of Novell, Inc. in the US.
- Other company and product names given in this manual or displayed in this software may be the trademarks of their respective companies.

Chapter 1


PREPARATIONS

| | |
|------------------------------------|----|
| Description of Each Component..... | 6 |
| Turning Power ON/OFF..... | 12 |
| Placing Paper and Originals | 15 |
| Installing Client Software..... | 17 |

Description of Each Component

This section describes the names and operations of the equipment, control panel and touch panel.

Front / Right side

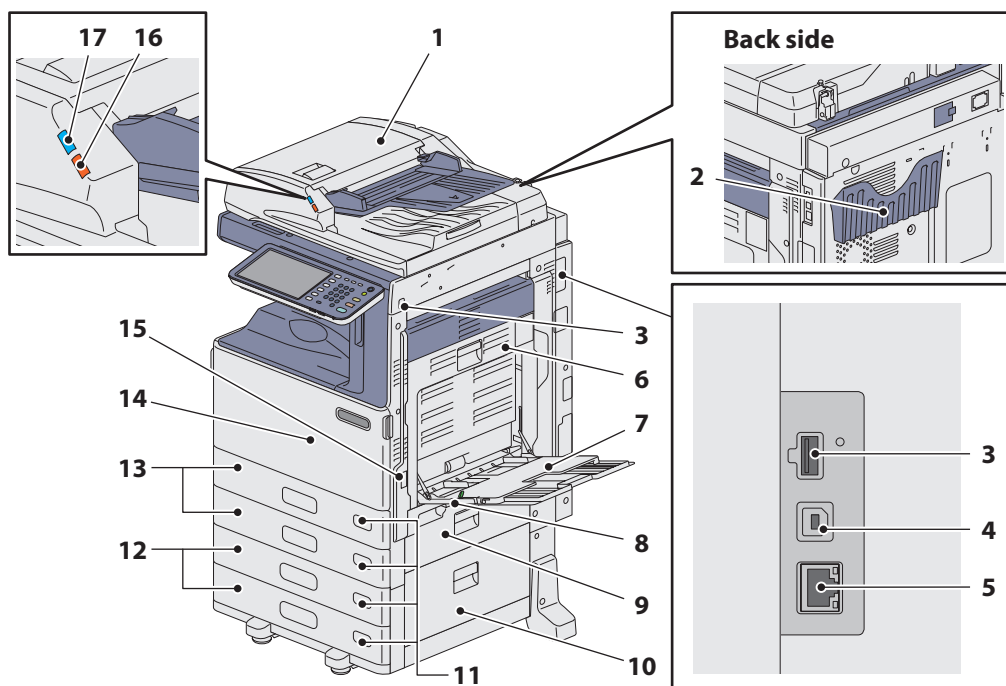

1. Reversing Automatic Document Feeder

The stack of originals is scanned one sheet at a time. Both sides of the originals can be scanned. A maximum of 100 sheets (80 g/m² or 20 lb. Bond) can be placed in one go. (The maximum number of sheets that can be set may vary depending on the media type of the originals.)

2. Operator's Manual Pocket (back side)

Keep the manual in this pocket.

3. USB port

Use this connector when printing files stored in a USB device or storing scanned data into the USB device. The Front USB Cable is required for using the USB port.

4. USB terminal (4-pin)

Use this terminal when connecting this equipment to a PC with a commercially available USB cable.

5. Network interface connector

Use this connector when connecting this equipment to a network.

6. Automatic duplexing unit

This unit makes copies on both sides of the paper. Open it when paper misfeeds occur.

7. MPT

Use this to perform printing on special media types such as OHP film, etc.

P.27 "Copying from MPT" in this manual

8. Paper holding lever

Use this to place paper on the MPT.

9. Paper feed cover (of the equipment)

Open this cover when releasing paper misfed in the tray feeding area.

10. Paper feed cover

Open this cover when releasing paper misfed in the Paper Feed Pedestal or Large Capacity Feeder.

11. Paper size indicator

The size of the paper set in the tray can be checked.

12. Paper Feed Pedestal and Additional Drawer Module or Large Capacity Feeder

Use the Paper Feed Pedestal to add one tray. The Additional Drawer Module can be installed in this device. A maximum of 550 sheets (80 g/m² or 20 lb. Bond) of plain paper can be placed in one go.

A maximum of 2000 sheets (80 g/m² or 20 lb. Bond) of plain paper can be placed in the Large Capacity Feeder.

13. Tray

A maximum of 250 sheets of plain paper can be placed in one go.

P.15 "Placing paper" in this manual

14. Front cover

Open this cover when you replace the toner cartridge and clean the charger.

15. Main power switch

Use this switch to turn the power of the equipment ON or OFF.


📖 P.12 "Turning Power ON/OFF" in this manual

16. ATTENTION lamp

This orange lamp lights when a paper misfeed has occurred in the Reversing Automatic Document Feeder.

17. Document lamp

This blue lamp lights when the originals are placed on the original feeder tray. It also blinks while the originals are being scanned.

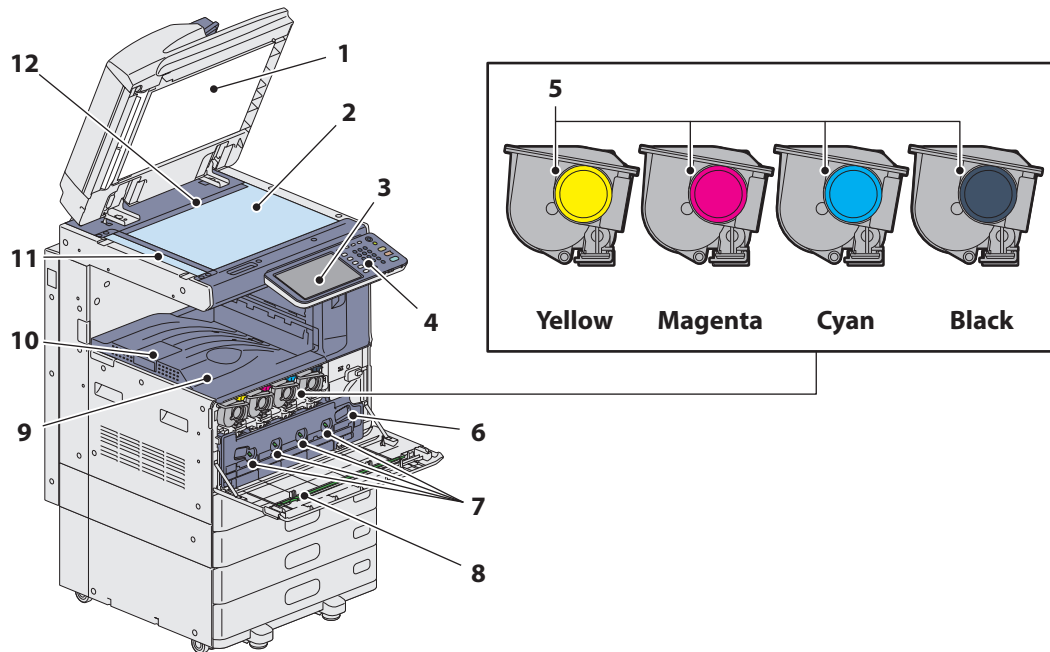Left / Inner side**1. Platen sheet**

Use this to hold the original on the original glass to scan it.

📖 P.47 "Regular Cleaning" in this manual

2. Original glass

Use this to copy three-dimensional originals, book-type originals and special paper such as OHP film or tracing paper, as well as plain paper.

3. Touch panel

Use this to set and operate various types of functions such as copying, scanning and faxing. This also displays messages, such as when paper runs out or paper misfeeds occur.

📖 P.10 "Touch panel" in this manual

4. Control panel

Use this to set and operate various types of functions such as copying and faxing.

📖 P.8 "Control panel" in this manual

5. Toner cartridge

When toner runs out, the message appears on the touch panel. Replace the cartridge following the procedure below.

📖 P.40 "Replacing Toner Cartridge" in this manual

6. Waste toner box

When "Dispose of used toner" appears on the touch panel, replace the waste toner box according to the following procedures.

📖 P.41 "Replacing Waste Toner Box" in this manual

7. Main charger cleaners

If unevenness occurs on the copied or printed paper, clean the main chargers according to the following procedures.

📖 P.48 "Cleaning the main chargers and LED print heads" in this manual

8. LED print head cleaner

If unevenness occurs on the copied or printed paper, clean the LED print head according to the following procedures.

📖 P.48 "Cleaning the main chargers and LED print heads" in this manual

9. Stacker

Printed paper exits into this stacker.

10. Paper exit stopper

Use this to prevent the exiting paper from falling. Open this when you make many copies or prints on a larger size of paper such as A3, B4, LD and LG.

11. Scanning area

The data of originals transported from the Reversing Automatic Document Feeder are scanned here.


📖 P.47 "Regular Cleaning" in this manual

12. Original scale

Use this to check the size of an original placed on the original glass.

Control panel

Use the buttons on the control panel for various operations and settings in the equipment.

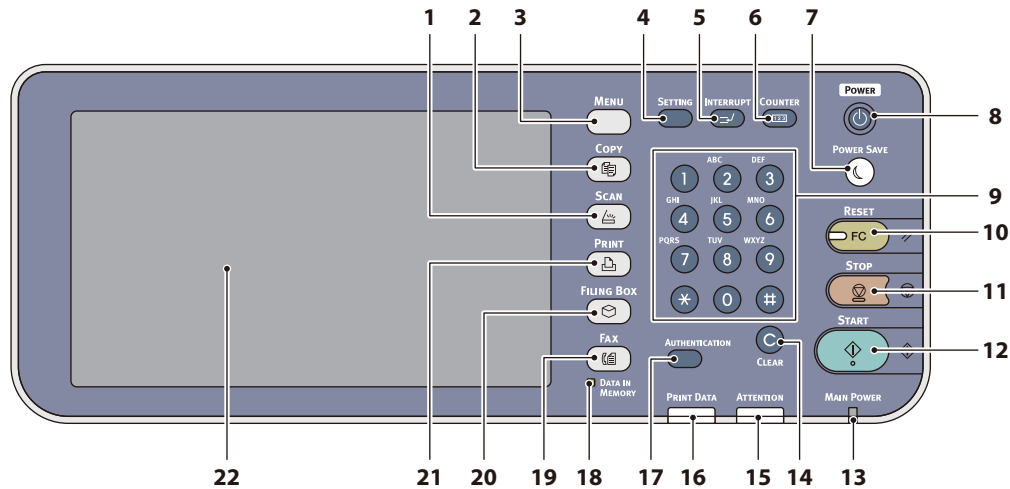

1. [SCAN] button

Use this button to access the scanning function.

2. [COPY] button

Use this button to access the copying function.

3. [MENU] button

Use this button to display frequently used templates.

4. [SETTING] button

Use this button for paper size or media type setting of trays, and registration of the copy, scan and fax settings including a default setting change.

MFP Management Guide (PDF): "Chapter 1: SETTING ITEMS (USER)"

MFP Management Guide (PDF): "Chapter 2: SETTING ITEMS (ADMIN)"

5. [INTERRUPT] button

Use this button to interrupt print processing and perform a copy job. The interrupted job is resumed through your pressing this button again.

6. [COUNTER] button

Use this button to display the counter.

MFP Management Guide (PDF): "Chapter 3: MANAGING COUNTERS (COUNTER MENU)"

7. [POWER SAVE] button

Use this button for the equipment to enter the power saving mode.

8. [POWER] button

Use this button to turn the power of the equipment ON or OFF (shutdown).

9. Digital keys

Use these keys to enter any numbers such as the number of copies, telephone numbers or passwords.

10. [RESET] button

When this button is pressed, all selected functions are cleared and returned to the default settings. If the default setting is changed on the control panel, and then copying, scanning, faxing or similar is performed, the lamp of this button (orange) blinks.

11. [STOP] button

Use this button to stop any scanning and copying operations in progress.

12. [START] button

Use this button to start copying, scanning and faxing operations.

13. MAIN POWER lamp

This green lamp lights when the main power switch is ON.

14. [CLEAR] button

Use this button to correct the numbers keyed in, such as the number of copy sets.

15. ATTENTION lamp

This orange lamp lights when an error occurs and some action needs to be taken.

16. DATA lamp

This blue lamp lights during reception of data such as print data.

17. [AUTHENTICATION] button

Use this button when the department code or user information has been set. If this button is pressed after copying, etc., the next user needs to enter the department code or user information.

P.71 "Logging in" in this manual

18. DATA IN MEMORY lamp

This green lamp lights in the status of the fax data reception and fax communication. The equipment can be operated even while these lamps are lit.

19. [FAX] button

Use this button to access the Fax / Internet Fax function.

20. [Filing Box] button

Use this button to access stored image data.

21. [PRINT] button


Use this button to access the printing functions such as private printing, in this equipment.

22. Touch panel

Use this panel for the various settings of the copying, scanning and Fax functions. This also displays messages, such as when paper runs out or paper misfeeds occur.

Adjusting the angle of the control panel

The angle of the control panel is adjustable at any angle between 7 and 90 degrees from the horizontal position.

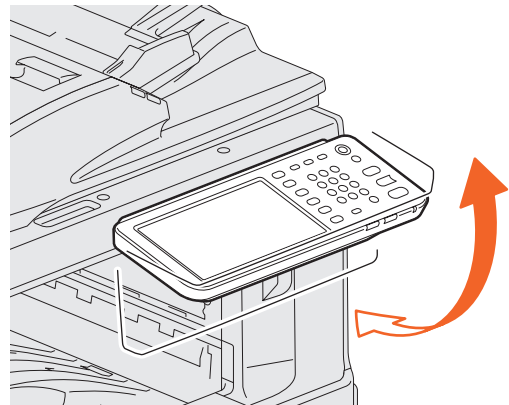** CAUTION**


When changing the angle of the control panel, be careful not to catch your hands in the gap between the equipment and the control panel.

This could injure you.

Touch panel

When the power is turned ON, the basic menu for copying functions is displayed on this touch panel. The status of the equipment is also displayed on the touch panel with messages and illustrations.

The menu shown at the time of turning the power ON can be changed to one for functions other than copying, for example, Fax function. Contact your service technician or representative for details.

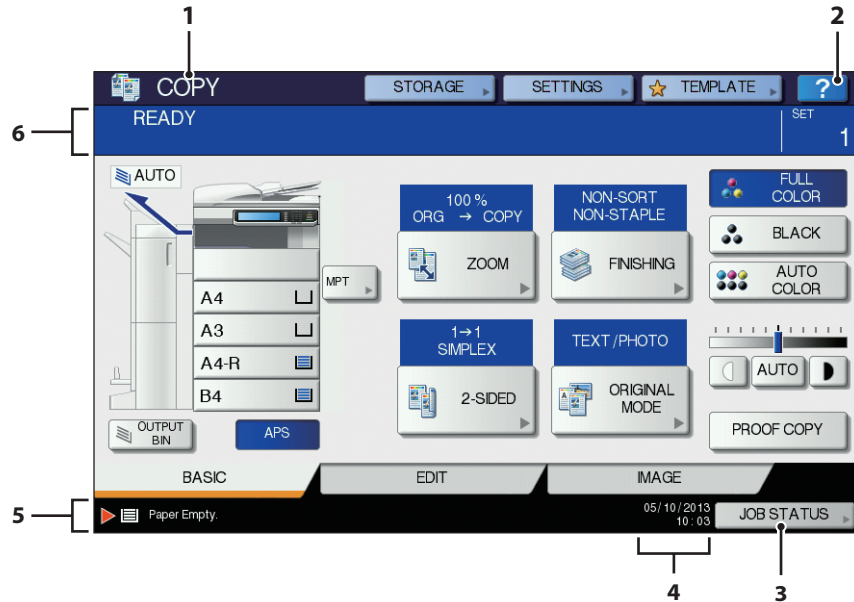

1. Function display

The function being used, such as copying or faxing, is displayed.

2. [?] (HELP) button

Use this button to view the explanation of each function or the buttons on the touch panel.

📖 P.51 "Using the Help functions" in this manual

3. [JOB STATUS] button

This indicates the processing status of copy, fax, scan or print jobs, and also allows you to view their performance history.

4. Date and time

The present date and time are displayed.

5. Alert message indication area

This shows alert messages such as when the toner cartridges must be replaced.

6. Message indication area

The explanation of each operation or the current status is displayed in message form.

Message displayed

The following information appears on the touch panel:

- Equipment status
- Operational instructions
- Cautionary messages
- Reproduction ratios
- Number of copy sets
- Paper size and amount of paper remaining in a selected tray
- Date and time

Touch buttons

Press these buttons on the touch panel lightly to set various functions.




Adjusting the contrast of the touch panel

You can set the contrast of the touch panel in the SETTING menu entered by pressing the [SETTING] button on the control panel.

📖 *MFP Management Guide* (PDF): "Chapter 1: SETTING ITEMS (USER)" - "Setting General Functions"

Setting letters

The following menu is displayed when the entry of any letter is required for scanning or e-Filing, etc. Use the buttons on the touch panel for letter entry. After entering the letters, press [OK]. The menu will be changed.

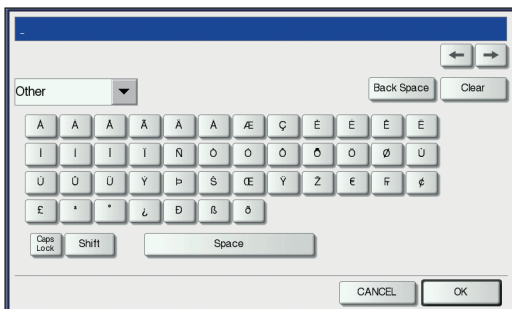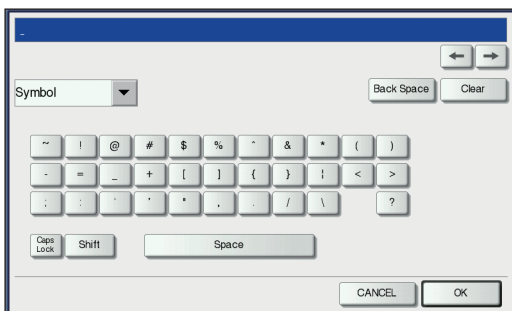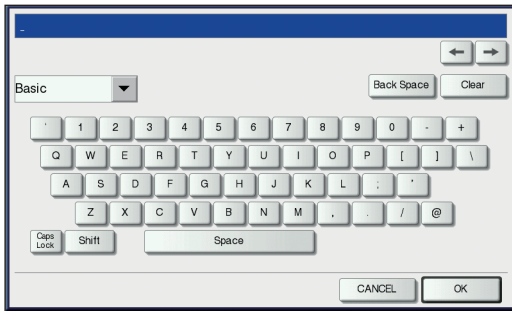

The following buttons are used for letter entry.

- [Basic]: Press this to access the basic keys.
- [Symbol]: Press this to access the symbol keys.
- [Other]: Press this to access the special keys.

- [Caps Lock]: Press this to switch capital letters and small letters.
- [Shift]: Press this to enter capital letters.
- [Space]: Press this to enter a space.



: Press these to move the cursor.

[Back Space]: Press this to delete the letter before the cursor.

[Clear]: Press this to delete all letters entered.

[CANCEL]: Press this to cancel the entry of letters.



[OK]: Press this to fix all entered letters.

Turning Power ON/OFF

This section explains how to turn the power ON and OFF as well as the power saving mode. How to turn the power ON differs between when the MAIN POWER lamp (green) on the control panel is lit and when it is not.


Turning the power ON

When the MAIN POWER lamp (green) on the control panel does not light:

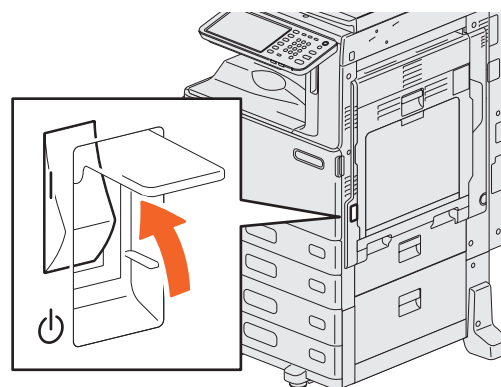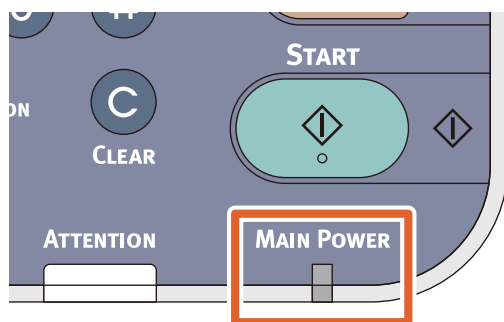

Turn the power ON there.

When the MAIN POWER lamp (green) on the control panel lights:

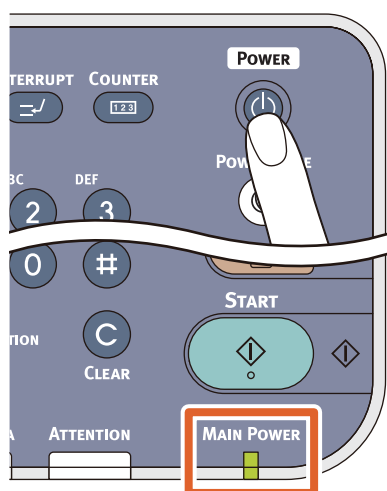

Press the [POWER] button.

- The equipment starts warming-up during which “Wait Warming Up” appears. This may take longer than normally depending on the status and condition.
- While the equipment is warming up, you can use the auto job start function. For details, refer to the following guide: [☰ Copying Guide \(PDF\): “Chapter 2: HOW TO MAKE COPIES” - “Making Copies”](#)

The equipment will be ready for copying after about 27 seconds and “READY” appears.

When you turn the power of the equipment OFF, be sure also to shut it down by pressing the [POWER] button on the control panel. Do not simply turn the main power switch OFF. For details, see the following page:

☰ P.13 “Turning the power OFF (Shutdown)” in this manual

When “ERASING DATA” appears

This message appears when the Data Overwrite Enabler has been installed. It appears immediately after the power is turned ON or after the equipment has been operated. You can operate the equipment even if it is displayed.

Tip

When the equipment is controlled under the department or user management function, enter the department code or user information first. For details, see the following page:

☰ P.71 “Logging in” in this manual


Turning the power OFF (Shutdown)

When turning the power of the equipment OFF, be sure to shut it down according to the procedure below. Check the following three points before shutdown.

- No jobs should be left in the print job list.
- None of the DATA lamp (blue) or the DATA IN MEMORY / LINE lamp (green) should be blinking.
(If the equipment is shut down while any of the above lamps is blinking, jobs in progress such as FAX reception will be aborted.)
- No computer should access the equipment via the network, such as TopAccess.

Notes


- When the [POWER SAVE] button (green) lights or blinks on the control panel, or the touch panel screen is still ON, do not simply press the main power switch to turn the power OFF. The stored data may be lost or the hard disk may be damaged.
- If a job in process exists when the [POWER] button of the control panel is pressed, "Processing job will be deleted. Are you sure you want to shutdown?" appears.

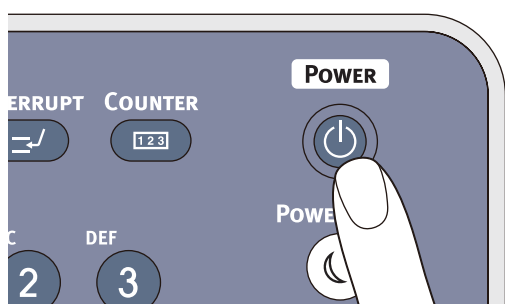

Press the [POWER] button until a "pip" sound is heard.

"Shutdown is in progress:" appears for a while, and then the power is turned OFF.

When the equipment is not used for a long period of time:

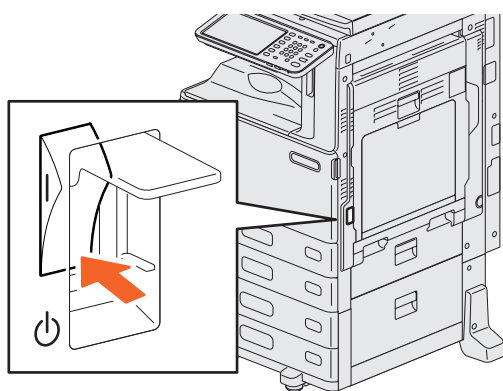

Press the [POWER] button on the control panel to shut down the equipment. Be sure to check that the [POWER SAVE] button (green) has stopped blinking and the touch panel screen has gone off. Then turn the power OFF with the main power switch.

When the power is turned OFF with the main power switch, the MAIN POWER lamp (green) will go out.

Saving power when not in use – power saving modes –

This equipment supports three power saving modes; the Automatic Power Save mode, Sleep mode and Super Sleep mode. The table below shows the procedures to switch modes manually and the conditions under which the equipment enters into or recovers from each mode.

| Power saving modes | Procedure to switch modes | Conditions to enter into the mode | Status of equipment | Conditions to recover from the mode |
|---------------------------|---|--|---|--|
| Automatic Power Save mode | When a specified period of time ^{*1} has passed since the last use of the equipment. | — | “Saving power - press START button.” appears on the touch panel. | When a button on the control panel ^{*2} is pressed or when print data or fax data are received. |
| Sleep mode | When the [POWER SAVE] button ^{*3} is pressed or when a specified period of time ^{*4} has passed since the last use of the equipment. | When a particular option ^{*5} is installed or when a particular protocol ^{*6} is enabled. | The touch panel display goes off and the [POWER SAVE] button lights in green. | Same as the Automatic Power Save mode. |
| Super Sleep mode | When the [POWER SAVE] button ^{*3} is pressed or when a specified period of time ^{*4*} has passed since the last use of the equipment. | When a particular option ^{*5} is not installed and also when a particular protocol ^{*6} is disabled. | Only the MAIN POWER lamp (green) lights. | When the [POWER] button is pressed, when print or fax data are received through a wired LAN or when the time set for Scheduled Print has come. |

*1 The default value set at the factory shipment is 1 minute.

*2 Any of the [START], [POWER SAVE], [COPY], [Filing Box], [SCAN], [PRINT] and [FAX] buttons.

*3 [POWER SAVE] button on the control panel.

*4 The default value set at the factory shipment is 1 minute (The default value set at the factory shipment of the European version is 10 minutes).

*5 The Wireless LAN Module and/or OKI IC Card Reader.

*6 Any of IPX, AppleTalk and other protocols. When the IPsec function is enabled or the Ethernet speed is set to [AUTO (-1000MB)] or [1000BASE FULL], the equipment enters into the Sleep mode. For details, refer to the following guide:

 **TopAccess Guide** (PDF): “Chapter 8: [Administration] Tab Page” - “[Setup] Item list”

*7 Depending on the network environment of the user, the time for switching to the Super Sleep mode may take more than 10 minutes even though it has been set to 10 minutes or less.

For changing the set period of time for entering into each mode, refer to the following guide:

Note

For the European version

Contact your service representative to change the default settings noted above.


 **MFP Management Guide** (PDF): “Chapter 2: SETTING ITEMS (ADMIN)” - “Setting General Functions”

When the set period of time for switching to the Automatic Power Save mode is the same as that for the Sleep mode or the Super Sleep mode, the equipment enters into the Sleep mode or the Super Sleep mode after the set period of time.


Placing Paper and Originals

This section explains how to set paper and originals. Incorrect setting causes image skews or paper misfeeds. Follow the procedure below.


Placing paper

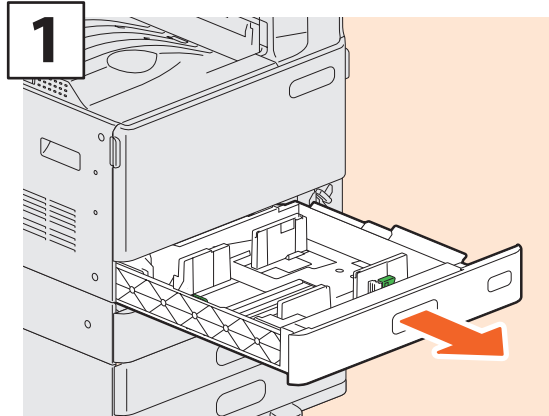


Pull out the tray.

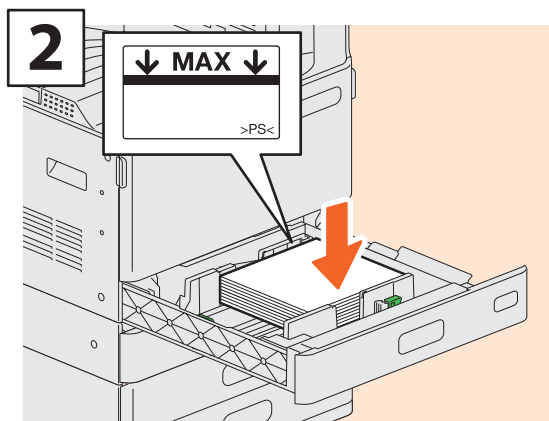


Place paper face up.

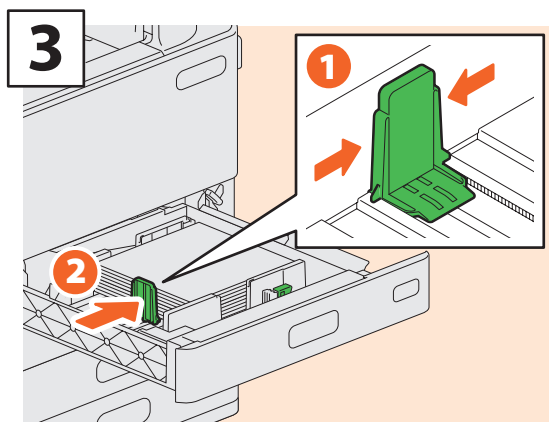

Set the end guide so that it matches the paper size.

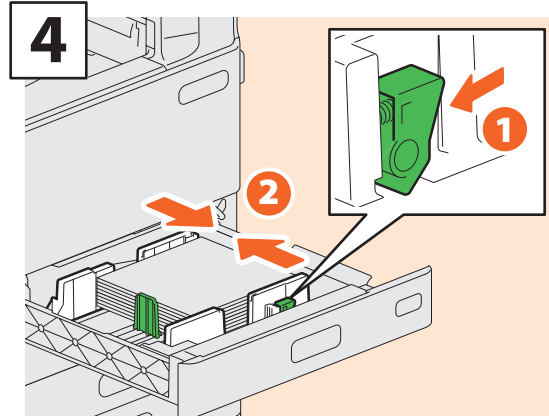

Set the side guides so that they match the paper size.

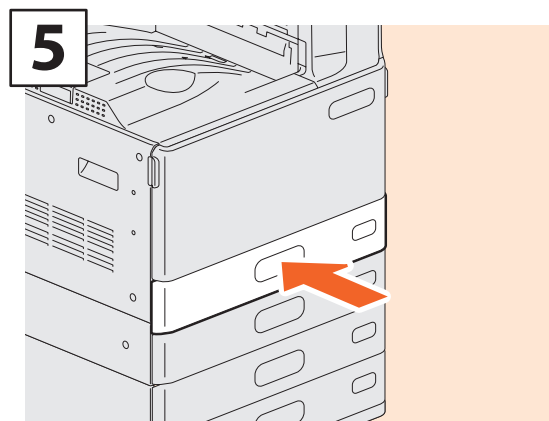

Push in the tray.

CAUTION

Be careful not to catch your fingers when pushing the tray back.

This could injure you.

Note


Be sure that the height of the stacked paper does not exceed the MAX line indicated on the side guides.

Tips


- For paper available for the equipment, see the following page:
 - 📖 P.74 "Specifications of Equipment" in this manual
- Paper can be placed in the Paper Feed Pedestal and the Additional Drawer Module following the procedure above. For placing paper in the Large Capacity Feeder, refer to the following guide:
 - 📖 **Copying Guide** (PDF): "Chapter 1: BEFORE USING EQUIPMENT" - "Placing Paper"

Placing originals


Original glass

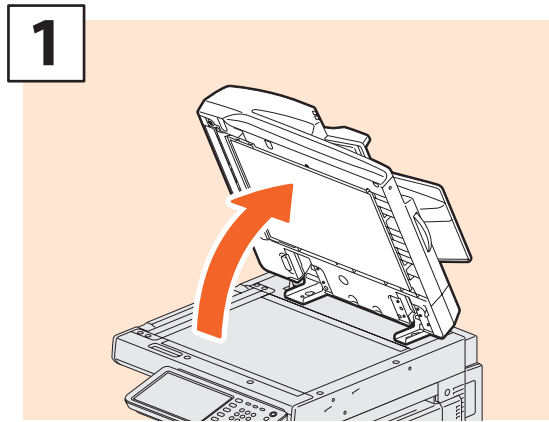

1 Raise the Original Cover or the Reversing Automatic Document Feeder.

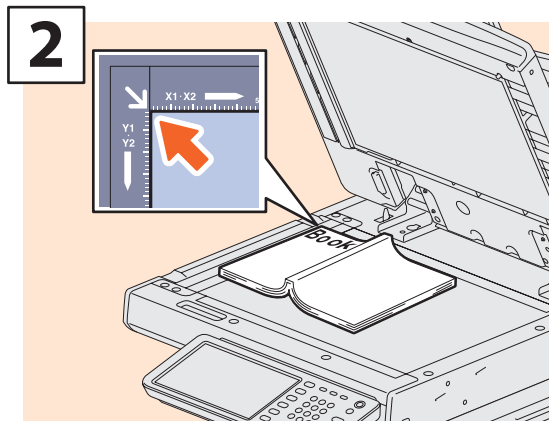


2 Place the original with its face down on the original glass and align it against the left rear corner.

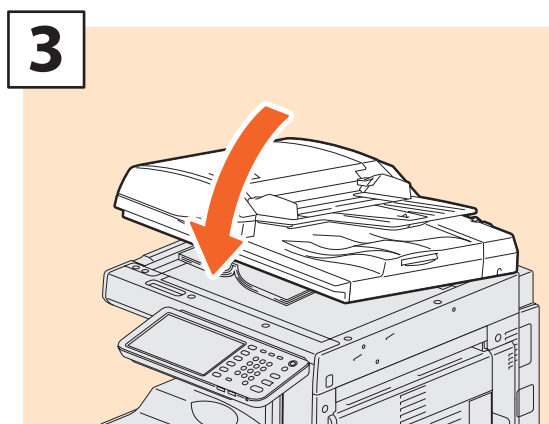


3 Lower the Original Cover or the Reversing Automatic Document Feeder carefully.

Copying Guide (PDF): "Chapter 3: BASIC COPY MODES" - "Enlargement and Reduction Copying"

Reversing Automatic Document Feeder

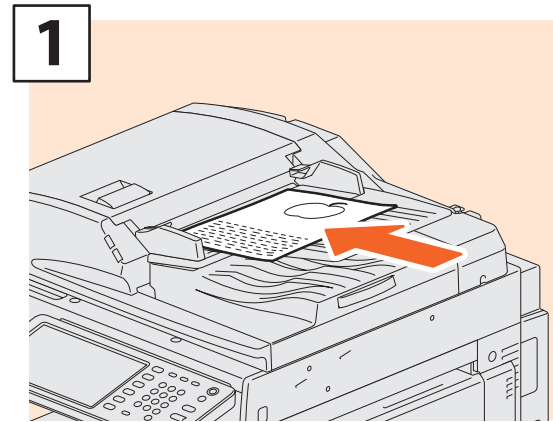


1 Place the originals face up on the original feeder tray. Be sure that the document lamp (blue) lights up, which is provided on the Reversing Automatic Document Feeder.

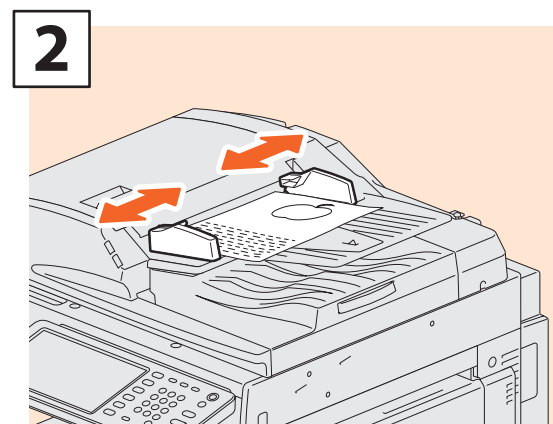

2 Align the side guides to the original length.

Tips

- When the Original Cover or the Reversing Automatic Document Feeder is being closed, the scanner lamp flashes to detect the original size.
- When placing mixed-size originals on the Reversing Automatic Document Feeder, adjust its side guides to the widest original, and then align the originals against the guide on the front side.

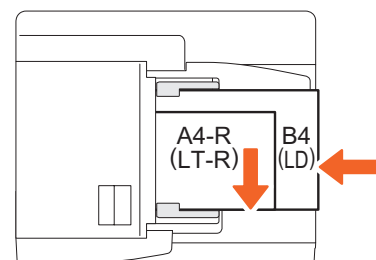

CAUTION

Do not place any heavy objects (4 kg (9 lb.) or over) on the original glass and do not press on it with force.

Breaking the glass could injure you.


Installing Client Software

How to install the client software such as the printer driver from the Software DVD-ROM co-packed with the equipment is described as follows.


Installing the printer drivers by using Software Installer

1


Notes

- Please refer to the following guides to connect with a USB cable:
 **Software Installation Guide** (PDF): "Chapter 2: INSTALLING PRINTER DRIVERS FOR WINDOWS"
- To complete this procedure, you must be logged in as an administrator.

- 1 Check that your machine and the computer are turned on and connected, and then insert the "Software DVD-ROM" into the computer.
- 2 Click [Run Setup.exe] after [AutoPlay] is displayed.
If the [User Account Control] dialog box is displayed, click [Yes].
- 3 Select the language.

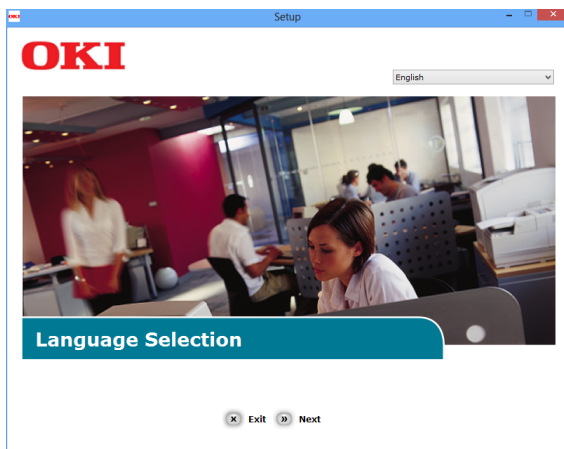


- 4 Select the device of your machine, and then click [Next].

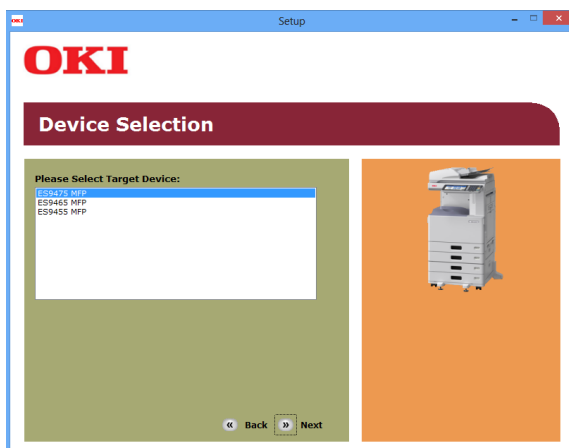


Continued on next page 

5 Read the license agreement and then click [I Agree].

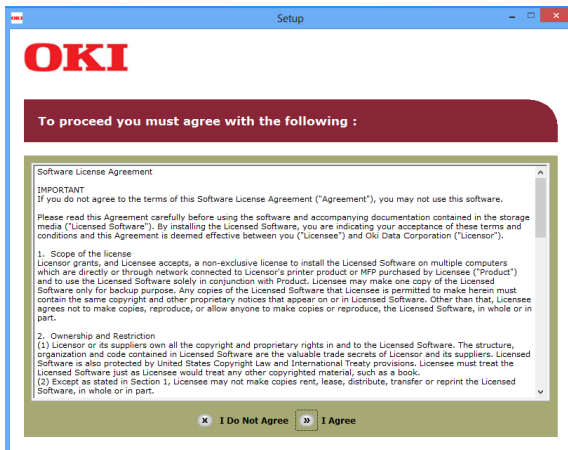

6 Read the "Environmental advice for Users" and click [Next].

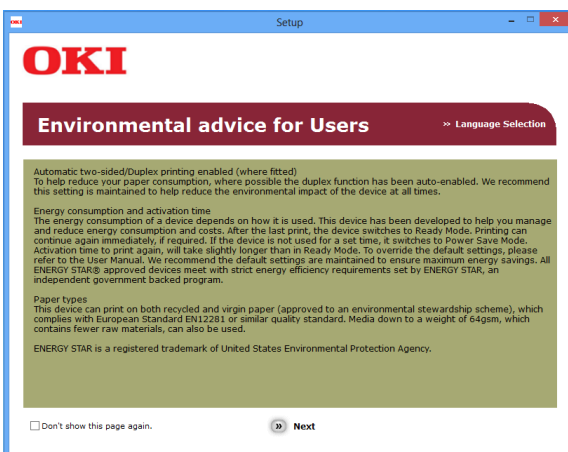

7 Select the checkbox for the printer driver you want to install, and click the "Multi Installation" button.

Note


By factory default, [PCL driver] is selected.



8 If the [Windows Security] dialog box is displayed, click [Install this driver software anyway].


9 Click the [Network] button.

The device search starts.

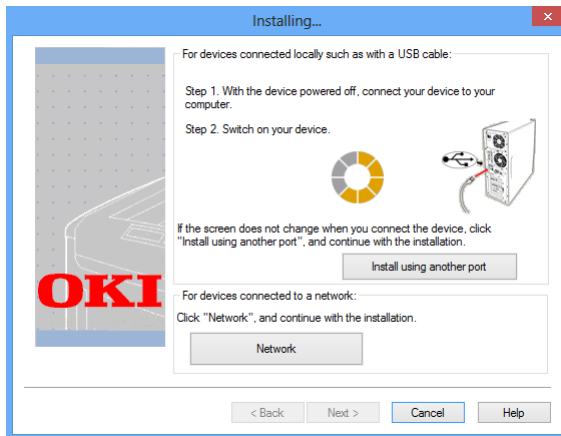


- If the machine is detected, it is automatically installed. Proceed to step 11.
- If the machine is not detected, the [Review your installation settings.] screen is displayed. Proceed to step 10.

10 Click [Restart search] to restart the device search.

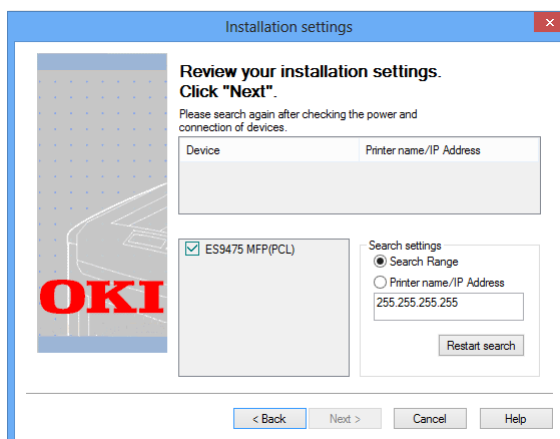

After the machine is displayed, select the machine and click [Next].

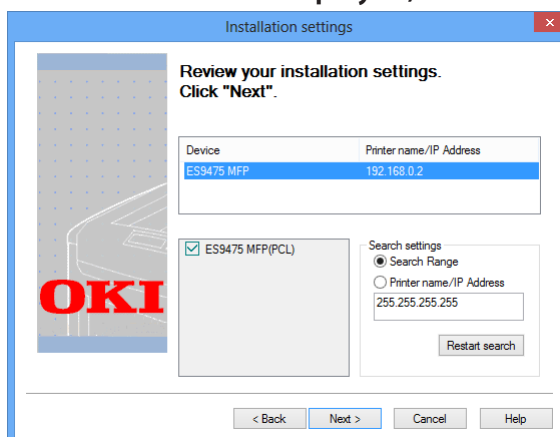


Note

If the machine is not displayed by clicking [Restart search], select [Printer name/IP Address] and enter the IP address assigned to your machine, and then click [Next].

Continued on next page 

11 If the [Windows Security] dialog box is displayed, click [Install this driver software anyway].

12 Click the [Exit] button.

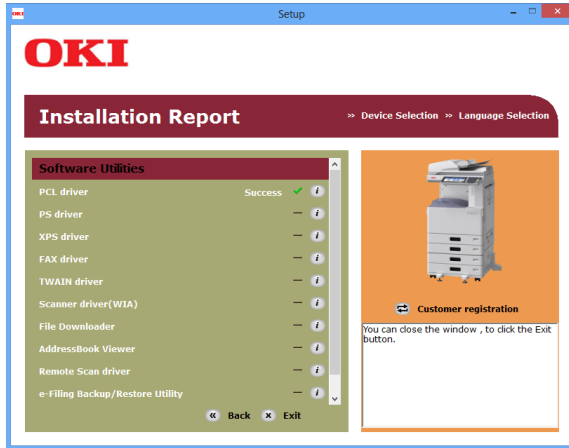


13 Remove the "Software DVD-ROM" from the computer.

The installation is complete.

Setting the printer driver

Before using the printer driver, you must configure the options installed in the equipment.

- 1 Select [Devices and Printers] in the [Start] menu.
- 2 Select OKI PCL Driver, right-click and then click [Printer properties].
- 3 The configuration data of the options can be obtained automatically by opening the [Device Settings] tab menu.

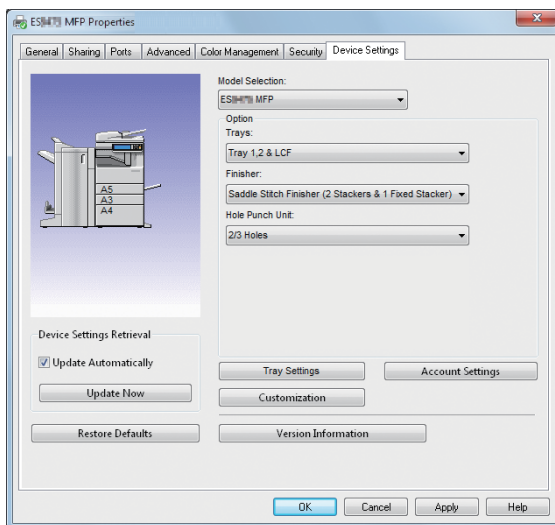

- 4 Click [OK]. The setting is completed.

MEMO

Chapter 2

BASIC OPERATION


| | |
|--------------------------------|----|
| Basic Copying Operation | 24 |
| Basic Fax Operation | 28 |
| Basic Scanning Operation | 32 |
| Basic e-Filing Operation | 34 |
| Basic Printing Operation | 36 |
| Basic Menu Operation..... | 38 |

Basic Copying Operation

The basic copying procedures, such as enlargement/reduction copying and duplex copying as well as copying from MPT, are as follows.


Making copies

- 1 Press the [COPY] button on the control panel.

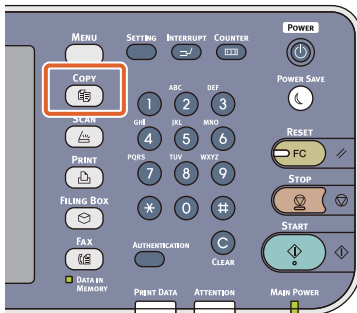

- 2 Place the original(s).
 P.16 "Placing originals" in this manual

- 3 Select the copy modes as required.

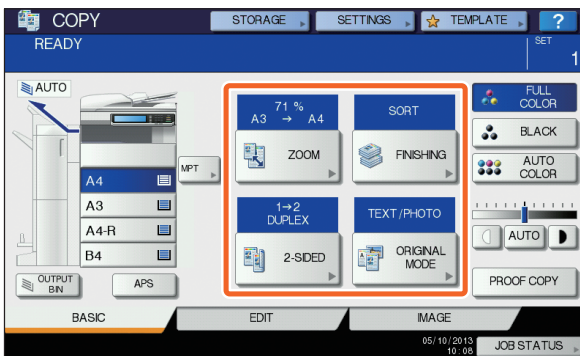


Tip

You can switch the color mode. There are 3 color modes as shown below.

- FULL COLOR:** All originals are copied in full color. (Default)
- BLACK:** All originals are copied in black and white.
- AUTO COLOR:** The equipment automatically judges the type of each color on originals. Colored originals are copied in full color and black-and-white originals are copied in black and white.

- 4
 - 1 Key in the desired number of copies, and then
 - 2 press the [START] button on the control panel. Copying starts.

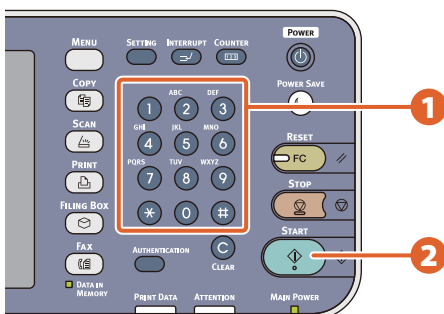


Tips


- To stop copying, press the [STOP] button on the control panel and then [MEMORY CLEAR] on the touch panel.
- Printed paper exits to the stacker of the equipment or the receiving tray of the Finisher. The tray to which the paper exits is indicated by the arrow on the touch panel.

Enlargement and reduction copying

1 Press [ZOOM].

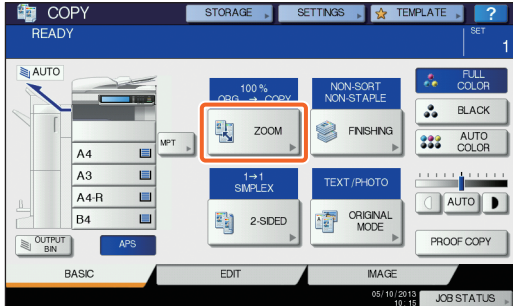

2 **1** Select the desired paper size, **2** press [AMS], and then **3** [OK].

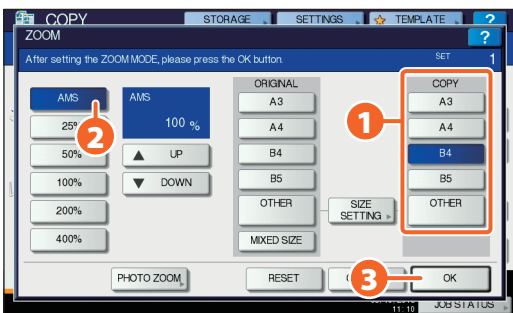


Tips

- Align the originals according to the desired paper size and direction. The size of the originals will be automatically determined.
- When copying a set of originals whose sizes and directions are different, press [MIXED SIZE].

Selecting finishing mode (sorting)


1 Press [FINISHING].

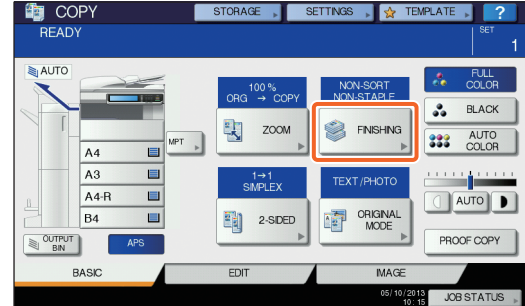

Tip

When you use the Reversing Automatic Document Feeder, the sorting mode is automatically set.


2 **1** Press [SORT] and then **2** [OK].

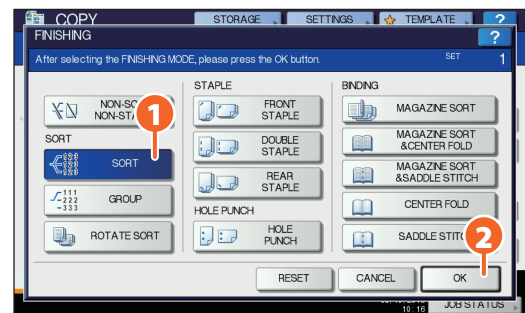


Tips

- To set the staple and the hole punch mode, the optional finishing devices are needed. For the necessary options, see the following page. P.68 "Options" in this manual
- For example, when "Original 1", "Original 2" and "Original 3" are copied in 2 sets, they can be made as follows.

Sort

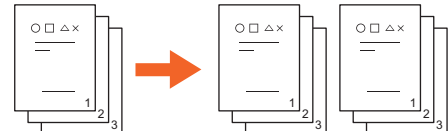


Group

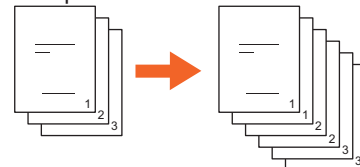


2

Setting duplex copy

1 Press [2-SIDED].

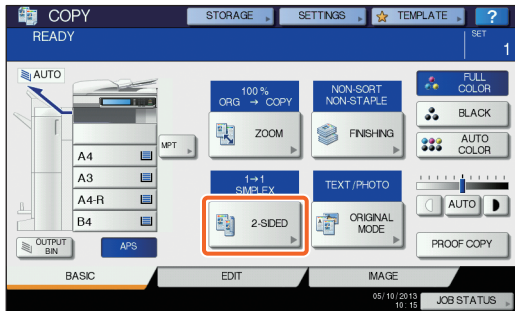

2 **1** Select the desired duplex mode and then **2** press [OK].

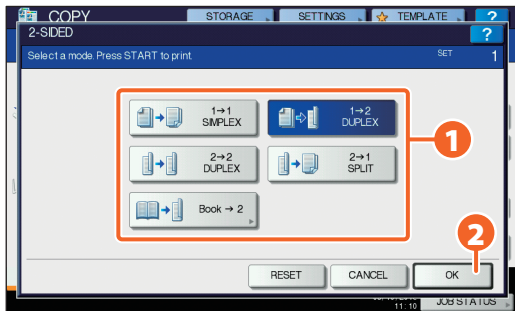

Tip


You can choose from 5 types.
For example, the following settings can be made.

1-sided original to 2-sided copy: 


2-sided original to 2-sided copy: 

Setting original mode

1 Press [ORIGINAL MODE].

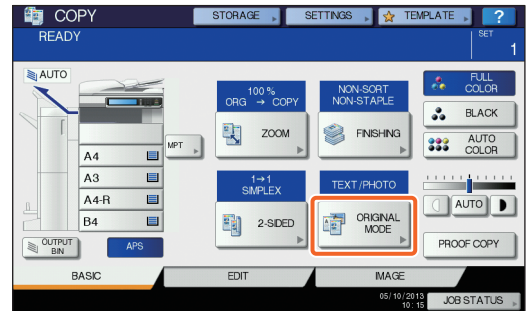

2 **1** Select the desired original mode and then **2** press [OK].

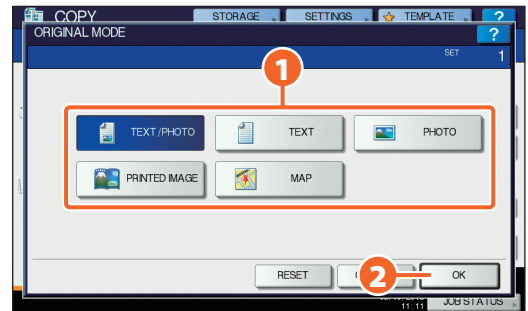



Tip

The selectable original mode differs depending on the color mode. In the full color mode, you can choose from 5 types.

For example, the following settings can be made.

Originals with text and photographs mixed: 

Density adjustment


You can manually adjust the density by pressing either  or .



Tip

To lighten the density, press , to darken it, press .

Press [AUTO] to adjust the density automatically.

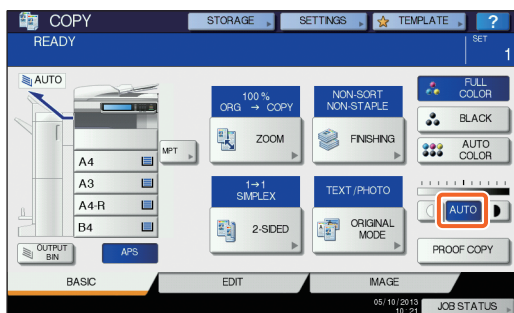


Tip

By default, density adjustment is set to [AUTO] when the color mode is "BLACK".

Copying from MPT


- 1 **1** Move the paper holding lever toward the outside and then **2** place paper face down on the MPT.

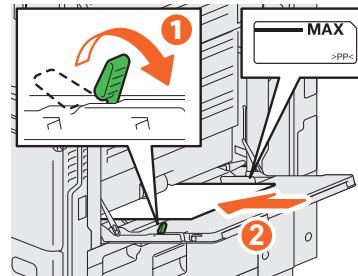

- 2 **2** Align the side guides to the paper length and then move the paper holding lever toward the equipment.



- 3 **1** Press the button corresponding to the size of paper set on the MPT and then **2** [OK].

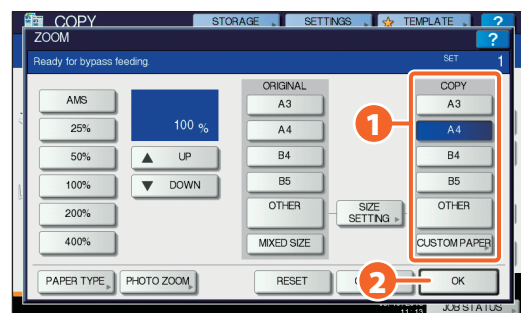

Tip

Press [PAPER TYPE] if the type of the paper you placed on the MPT is other than plain paper.

- 4 **4** Press the [START] button. Copying from MPT starts.


2

Basic Fax Operation

The basic procedures for sending a fax, such as specifying fax numbers in the address book or setting the transmission conditions, are as follows.

Sending a fax

- 1 Press the [FAX] button on the control panel.

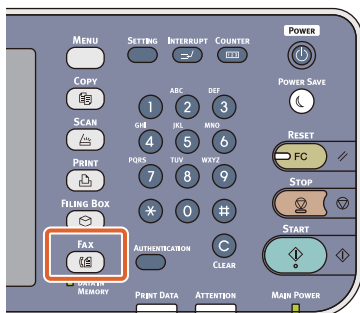

- 2 Place the original(s).
 P.16 "Placing originals" in this manual

- 3 Key in the fax number of the recipient by pressing [INPUT FAX No.] on the touch panel or the digital keys on the control panel.



Tip

If you make a mistake when entering a fax number, press [BACK SPACE] on the touch panel to delete them one by one.
 Or press the [CLEAR] button on the control panel or [CLEAR] on the touch panel to delete all the numbers you entered.

- 4 Press [SEND] on the touch panel. The fax starts being sent.



Tip

Alternatively, you can press the [START] button on the control panel to send a fax.

Specifying recipients in the address book


Specifying recipients one by one

1 Press the [SINGLE] tab to display the list of addresses, and then 2 the recipient's fax icon.



Specifying recipients in groups

1 Press [GROUP] tab to display the list of the groups, and then 2 the group name.

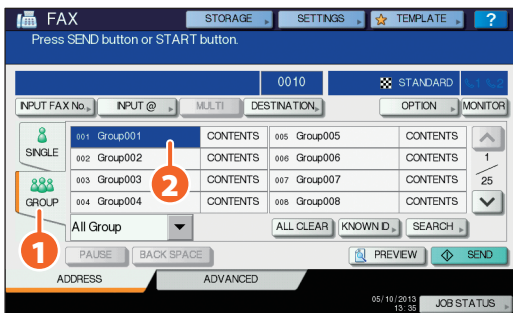


Tips


- You can specify up to a total of 400 recipients (single and group).
- To cancel a selected recipient, press it again.

Confirming recipients

1 Press [DESTINATION].

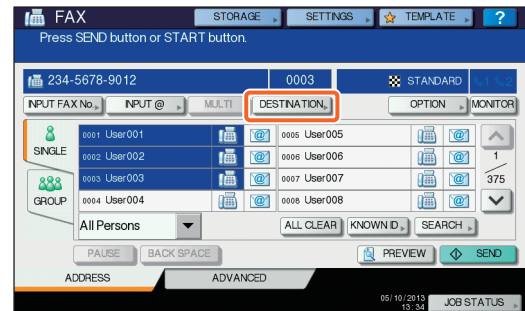

2 The recipient list screen is displayed.

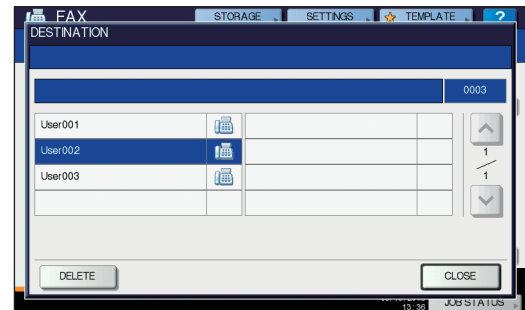

Tip


Select the recipient you want to delete, and then press [DELETE].

Setting the transmission conditions

1 Press [OPTION].



2 The transmission condition setting screen is displayed. Press \uparrow or \downarrow to switch the pages.

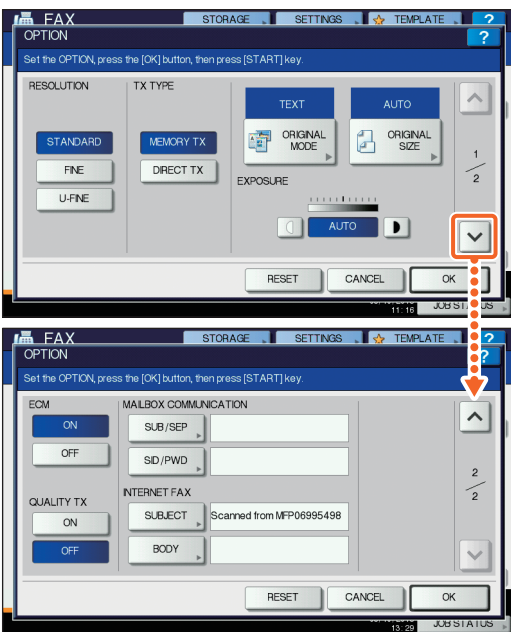

Tip

RESOLUTION: Set the resolution based on the fineness of the original.
ORIGINAL SIZE: Set the scan size of the original.


3 After each item is set, press [OK].

Canceling reserved transmissions

1 Press [JOB STATUS].



2 **1** Press [FAX], **2** select the reserved transmission you want to delete, and then **3** press [DELETE].

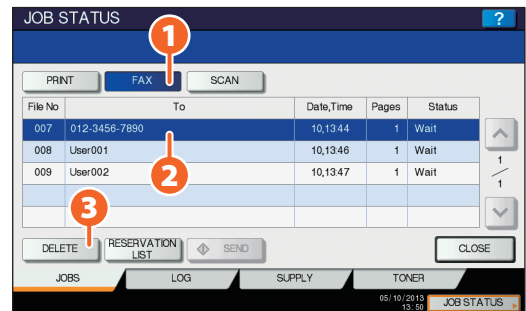

3 Press [DELETE] on the confirmation screen. The reserved transmission is deleted.




Checking communication status (log)

1 Press [JOB STATUS].




2 **1** Select the [LOG] tab and then **2** press [SEND].

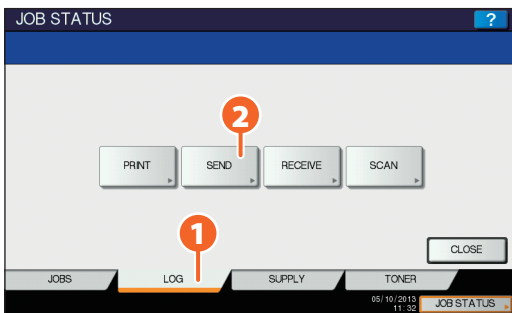

Tip

Press [RECEIVE] to check the fax reception log.

3 The communication status list is displayed. If [OK] is indicated in the "Status", the transmission succeeded.

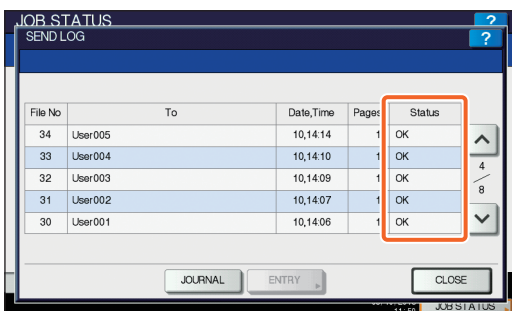


Tip

To register recipients in the address book from the send/receive log screen, select the record in the send or receive log, and then press [ENTRY].

Registering recipients


1 Press the [SETTING] button on the control panel and then [ADDRESS] on the touch panel.

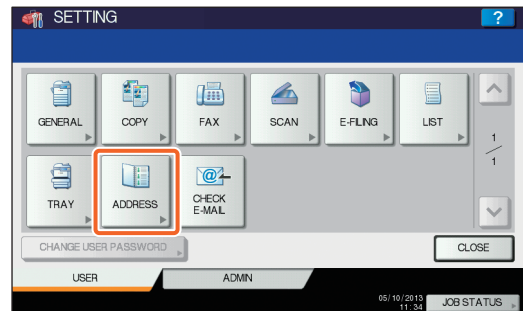

2 **1** Press an open button to create a new recipient and then **2** [ENTRY].



3 **1** Press each button on the touch panel to enter the following recipient information, and then **2** [OK] to register it.

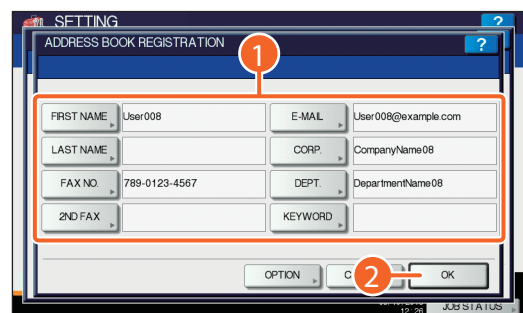

Tip

For registering a group in the address book, refer to the following guide:

MFP Management Guide (PDF): "Chapter 1: SETTING ITEMS (USER)" - "ADDRESS"


2

Basic Scanning Operation

The basic operation of the scanning function, how to store the scanned data in a shared folder and store these data in a Windows computer is described as follows.


Storing the scanned data in a shared folder

- 1 Press the [SCAN] button on the control panel.

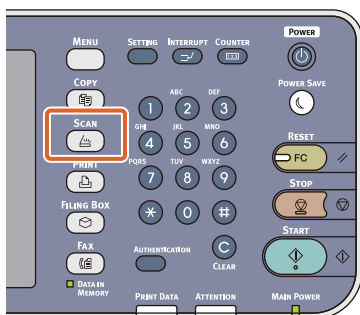


- 2 Place the original(s).
 P.16 "Placing originals" in this manual

- 3 Press [FILE] on the touch panel.

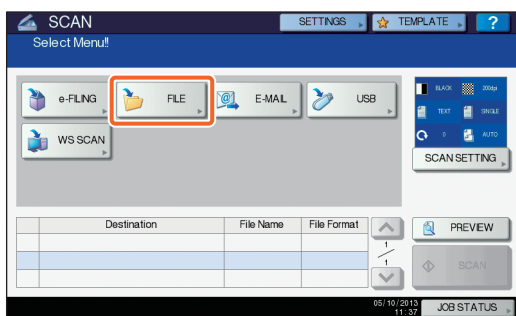


- 4
 - 1 Set [FILE NAME],
 - 2 FILE FORMAT, etc. and then
 - 3 press [OK].

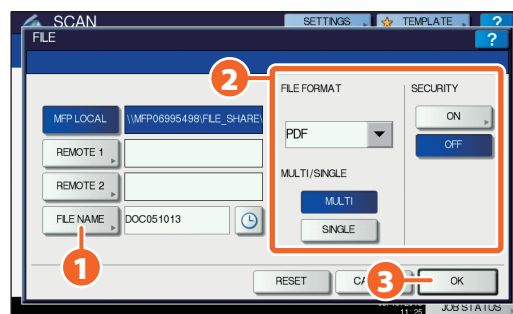

- 5 Change the scan settings as required.

- 6 Press [SCAN] on the touch panel. Scanning starts.

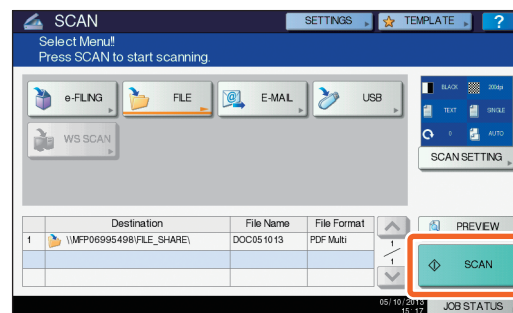


To store the scanned data of a shared folder in a Windows computer

1 Start up Windows Explorer.

2 Enter the name of the shared folder, in which the IP address of the equipment and the scanned data are stored, in the address bar with the following format, and then press the [Enter] button.

Format: \\[IP address of the equipment] \file_share


e.g.) When the IP address of the equipment is 172.16.16.110, enter \\172.16.16.110\file_share in the address bar of Windows Explorer.

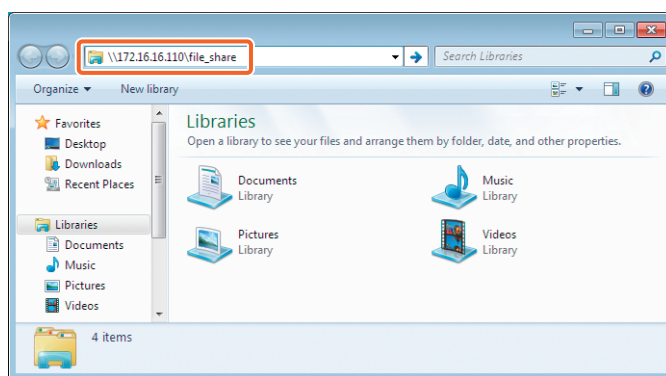

Tips

- For the IP address of the equipment, ask your network administrator.
- It is convenient to make a shortcut of the "file_share" folder, since step 2 can be omitted.

3 Store the scanned data in a Windows computer.

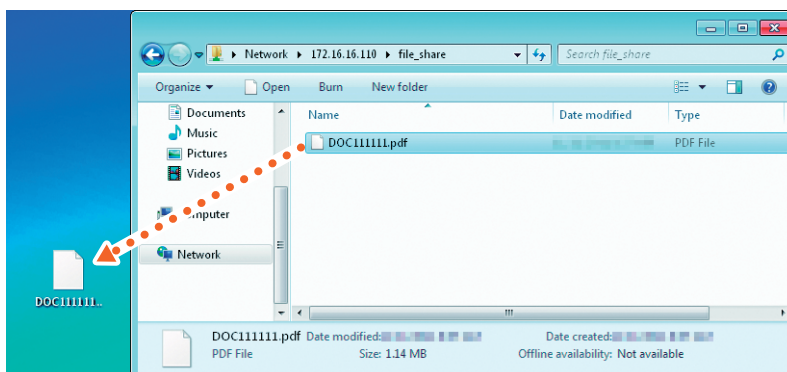

Note

The scanned data stored in the shared folder will be automatically deleted in 30 days by default. Be sure to store them in a Windows computer before that.


Basic e-Filing Operation

e-Filing is a function to store documents in the hard disk of the equipment, they can then be printed as required.

Storing documents


The originals are stored as e-Filing documents in the equipment.

- 1 Press the [COPY] button on the control panel.

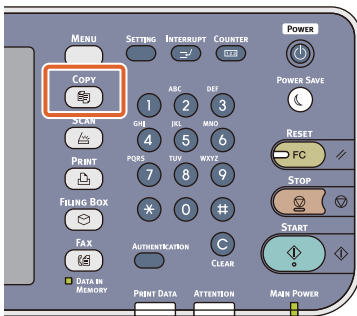


- 2 Place the original(s).
 📖 P.16 "Placing originals" in this manual

- 3
 - 1 Press [STORAGE] and then
 - 2 [STORE TO E-FILING] on the touch panel.

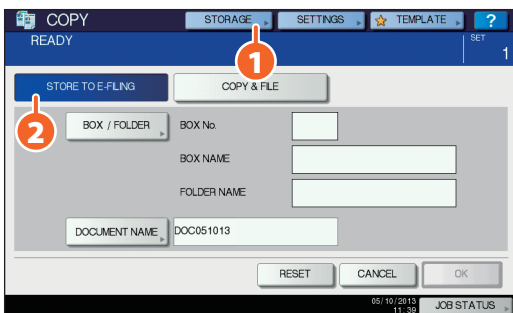

- 4
 - 1 Specify the box to be stored and the document name, and then
 - 2 press [OK].

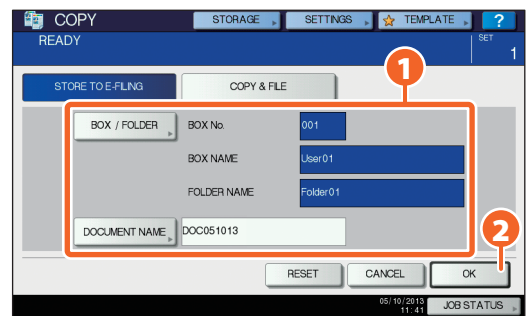

Tip

When "Print this document?" appears, press [YES] if you want to do this as well as store it.

- 5 Press the [START] button on the control panel to store the documents.

Tip

You can store documents not only by copying them but also by scanning them or using the printer driver. For details, refer to the following guides:


📖 **Scanning Guide** (PDF): "Chapter 2: BASIC OPERATION" - "Scan to e-Filing"

📖 **Printing Guide** (PDF): "Chapter 2: PRINTING FROM WINDOWS" - "Printing with the Best Functions for Your Needs"

Printing Documents


The procedure for printing documents stored in e-Filing is as follows.

- 1 Press the [Filing Box] button on the control panel.

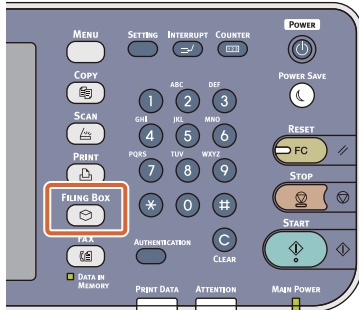

- 2 Select the box on the touch panel that contains the document you want to print.

- 3
 - 1 Select the document you want to print, and then
 - 2 press [PRINT]. Printing starts.

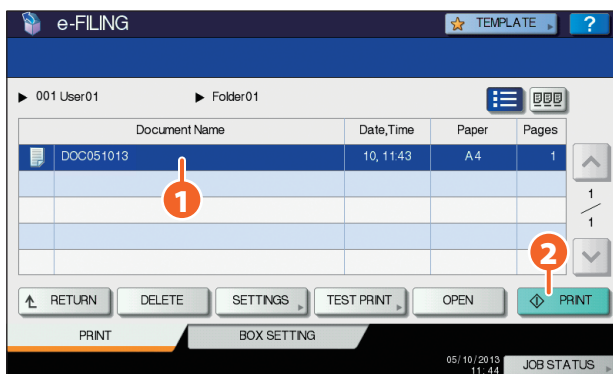

Tip



Selected documents can be previewed in thumbnail form.

DELETE

Selected documents can be deleted from e-Filing.

SETTINGS

This enables you to make print settings, such as selecting the duplex printing mode or adding page numbers.

TEST PRINT


Specified pages of the document can be printed for confirmation.

Basic Printing Operation


The basic operation of the printer function is as follows. This is for printing from a Windows computer with a PCL Driver which needs to be installed in advance.

1 Select [Print] in the [File] menu of the application.


2 **1** Select the printer driver of the equipment, and then **2** click [Preferences] ([Properties]).

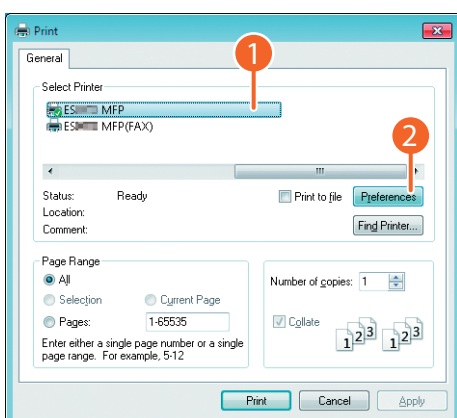

3 Set the print options as required and click [OK].

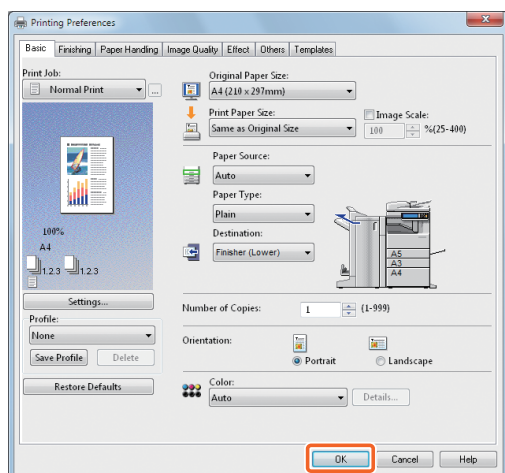

4 Click [Print] ([OK]). Printing starts.

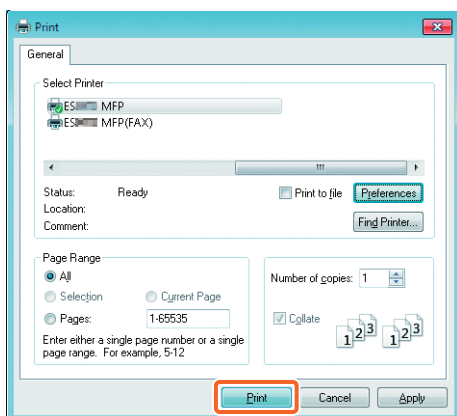

Tip


To install the printer driver in a Windows computer, refer to the following guide:

📖 P.17 "Installing Client Software" in this manual
 📖 **Software Installation Guide** (PDF): "Chapter 2: INSTALLING PRINTER DRIVERS FOR WINDOWS"

To install the printer driver in a Macintosh computer, refer to the following guide:

📖 **Software Installation Guide** (PDF): "Chapter 3: INSTALLING PRINTER DRIVERS FOR MACINTOSH"

Setting OKI PCL Driver

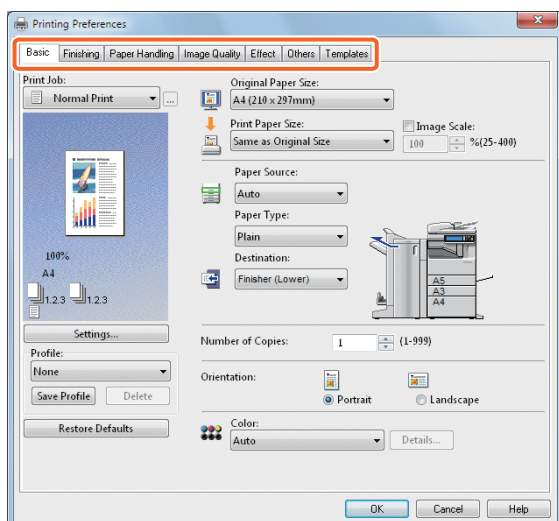

To specify paper size or number of copy sets


Click the [Basic] tab.

To specify 2-sided printing or N-up printing

Click the [Finishing] tab. If the Finisher is installed, "Staple" or "Hole Punch" can be selected.

Tip

Select "Number of pages per Sheet" to print several pages on one sheet. The pages are reduced to fit the selected paper size automatically and printed.

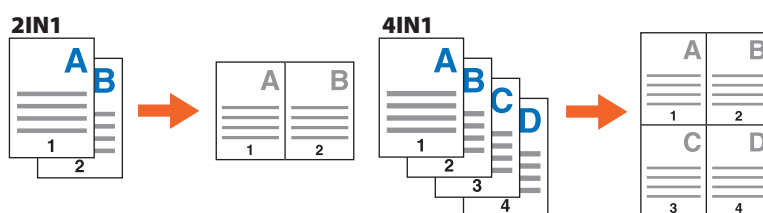

To specify Front cover printing

Click the [Paper Handling] tab.

To adjust Image Quality

Click the [Image Quality] tab.

To print with character strings or graphics on the background of the paper

Click the [Effect] tab.

To set not to print blank pages

Click the [Others] tab.

To print with templates

Click the [Templates] tab.


Basic Menu Operation

Press the [MENU] button on the control panel to use templates and check the print counter.

When the user management function is enabled, log in and press the [MENU] button on the control panel. The menu screen for a logged in user is displayed.

You can register frequently used templates, a group of templates or the shortcut of the External Interface Enabler. Registration or deletion of the shortcut can also be enabled in the TopAccess mode. For details, refer to the following guide:

 **TopAccess Guide** (PDF): "Chapter 9: [My Account] Tab Page"

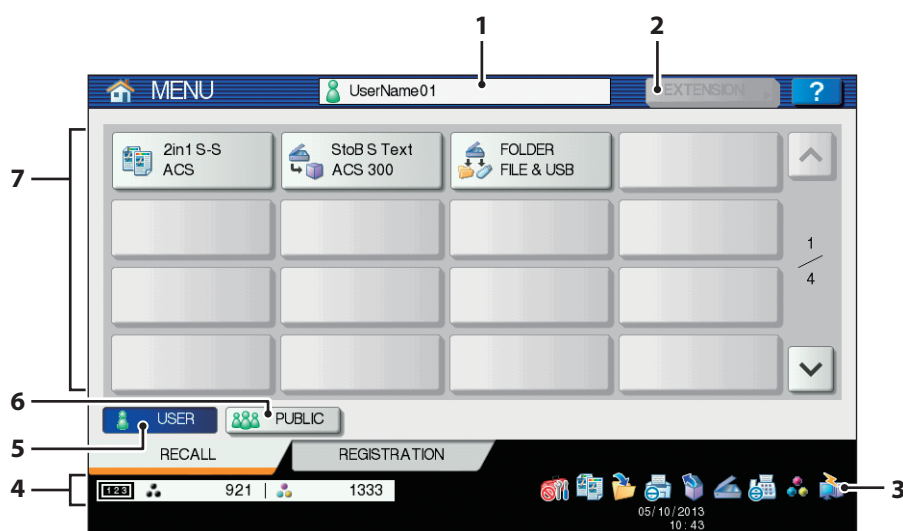



- 1. User name display area**
The name of the user logging in is displayed.
- 2. [EXTENSION] button**
This is enabled when the External Interface Enabler is installed. Contact your service technician or representative for details.
- 3. Role Information Displayed Area**
Available role information for a user who has logged in is displayed.
- 4. Total print counter**
The total print counter of the user logging in is displayed. Available printing numbers are displayed depending on the settings of the equipment.
- 5. [USER] button**
The shortcut which a user logging in can employ is displayed.
- 6. [PUBLIC] button**
The shortcut which all users can employ is displayed.
- 7. Shortcut display area**
The shortcut registered in the menu screen is displayed.

Note

According to the authority for each user, the mark  or  appears on the icons in the role information displayed area. The functions with the  mark cannot be used. Some of the functions with the  mark cannot be used.

Tips

- You can create a template with several functions that are frequently used so that they can be employed whenever you want, thus eliminating the need to perform complicated settings every time. Templates can be used in copying, scanning and sending a fax. For details, refer to the following guides:
 -  **Copying Guide** (PDF): "Chapter 6: TEMPLATES"
 -  **TopAccess Guide** (PDF): "Chapter 5: [Registration] Tab Page" - "[Registration] Tab Page Overview"
- When the user management function is not used, the public template group and the total print counter are displayed.
- [USER] and [PUBLIC] are displayed when the user management function is enabled.


Chapter 3

MAINTENANCE


| | |
|---------------------------------|----|
| Replacing Toner Cartridge..... | 40 |
| Replacing Waste Toner Box..... | 41 |
| Replacing Staple Cartridge..... | 42 |
| Regular Cleaning..... | 47 |

Replacing Toner Cartridge


When "Install new *** toner cartridge" appears on the touch panel, replace the toner cartridge according to the following procedures.

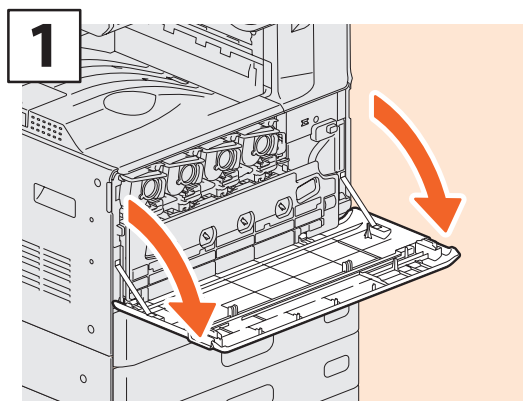


1 Open the front cover.

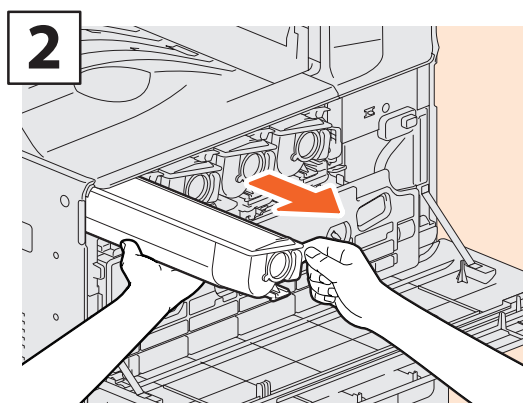


2 Remove the color toner cartridge you want to replace.

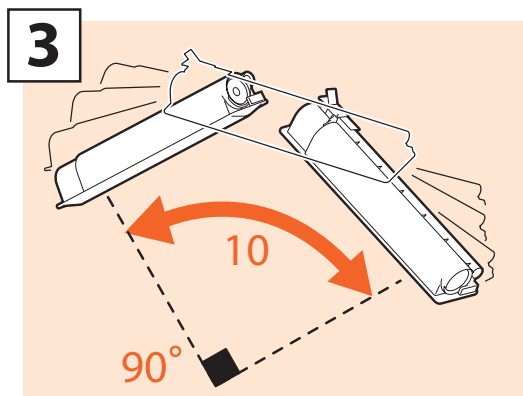


3 Shake the new toner cartridge well to loosen the toner inside.

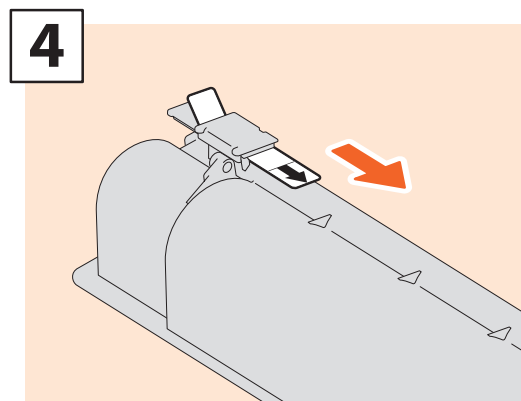

4 Pull the seal straight out in the direction of the arrow.

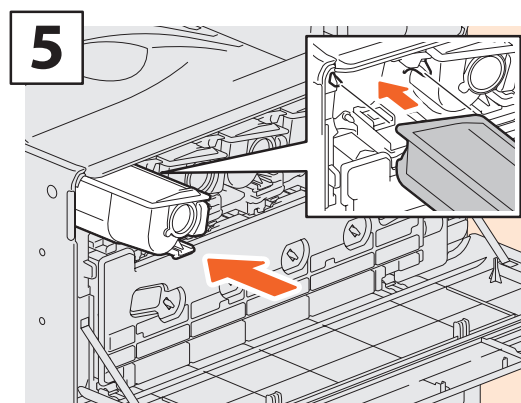

5 Insert the new toner cartridge straight along the guide until it stops.

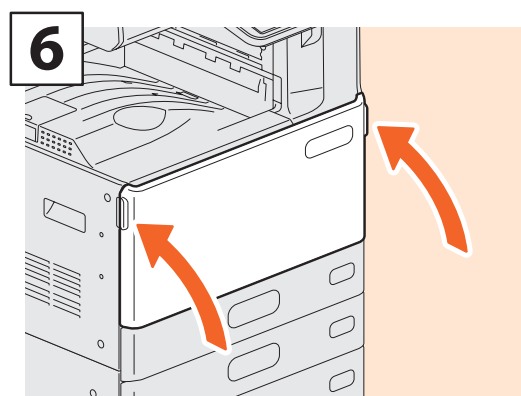

6 Close the front cover pressing both edges.


WARNING

Never attempt to incinerate toner cartridges.


Dispose of used toner cartridges and waste toner boxes in accordance with local regulations.

Replacing Waste Toner Box


When "Dispose of used toner" appears on the touch panel, replace the waste toner box according to the following procedures.

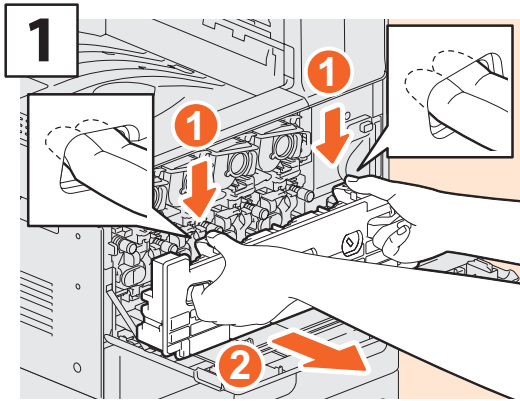


Open the front cover and put your fingers in the waste toner box front grooves, then take it out toward you while pushing down the top latch.

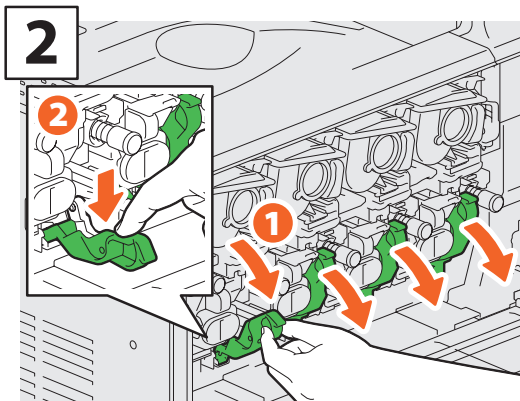


Fully pull down the 4 green levers located under the toner cartridges.

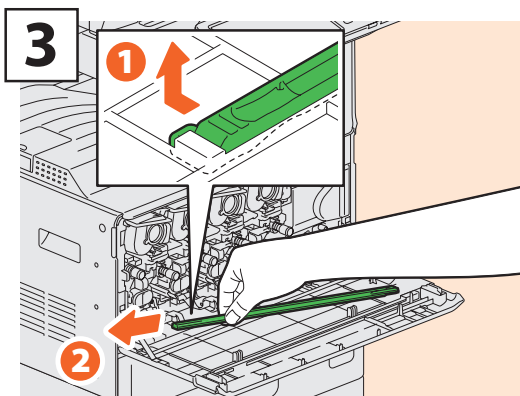


Take out the LED print head cleaner inside the cover.

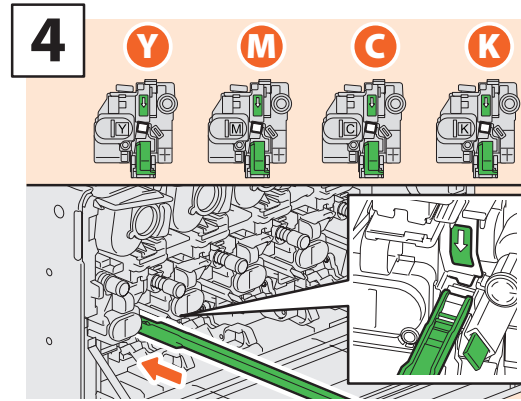

Insert the cleaner through the service hole of the developer until you reach the end.

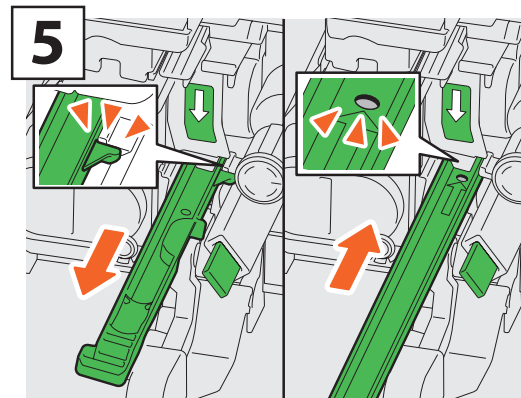

Pull the cleaner back out until the round hole appears. Repeat this 3 times for each one of the 4 colors. When you finish cleaning the LED print head, return the 4 green levers located under the toner cartridges and attach the cleaner to the inside of the cover.

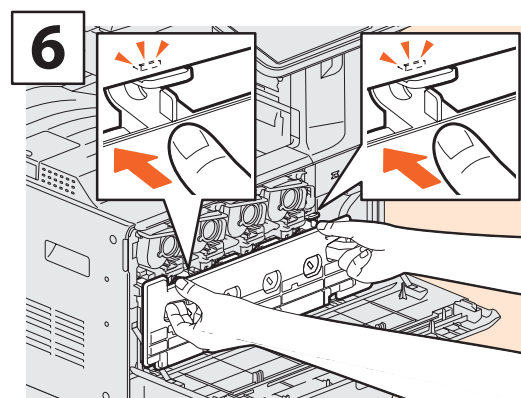

Be sure to push the waste toner box until the top latches click. Then close the front cover by pressing both edges.

CAUTION


Never attempt to incinerate waste toner boxes.

Dispose of used toner cartridges and waste toner boxes in accordance with local regulations.


Replacing Staple Cartridge

When "Check staple cartridge" appears on the touch panel, replace the staple cartridge according to the following procedures.


Stapler Unit of Finisher

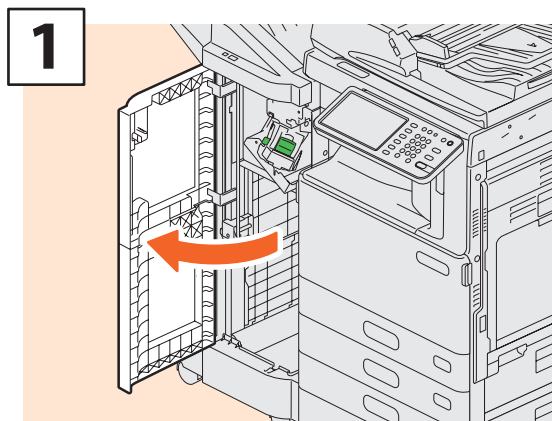


Open the front cover of the Finisher.

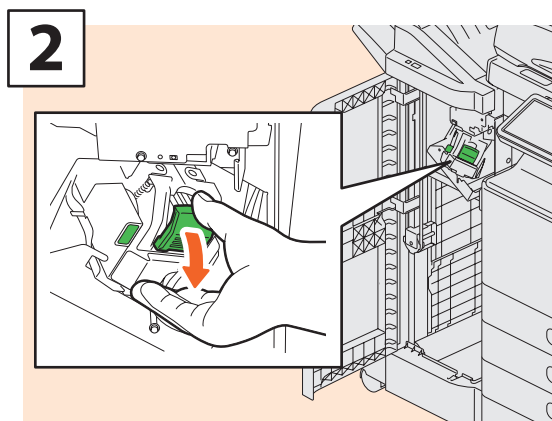


Take off the staple cartridge.

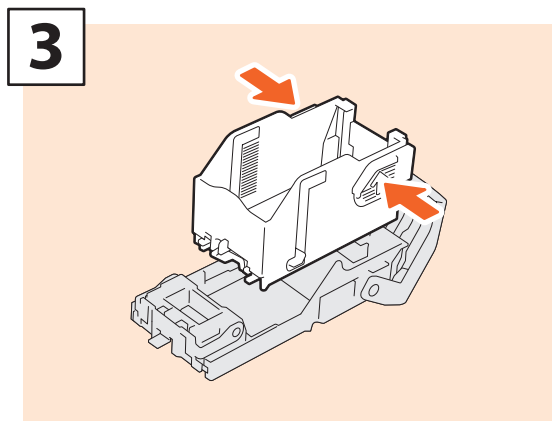


Take the empty staple case out of the staple cartridge.

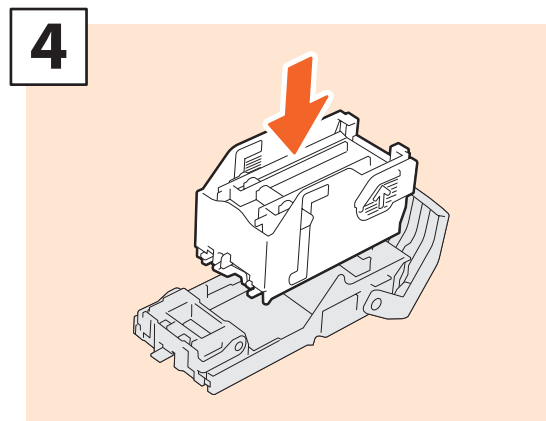

Install a new staple case into the staple cartridge.

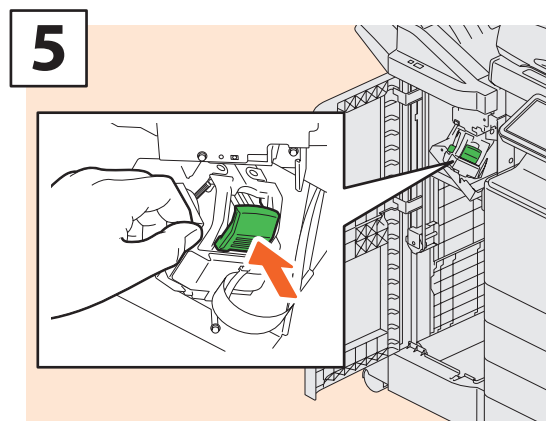


Install the staple cartridge.

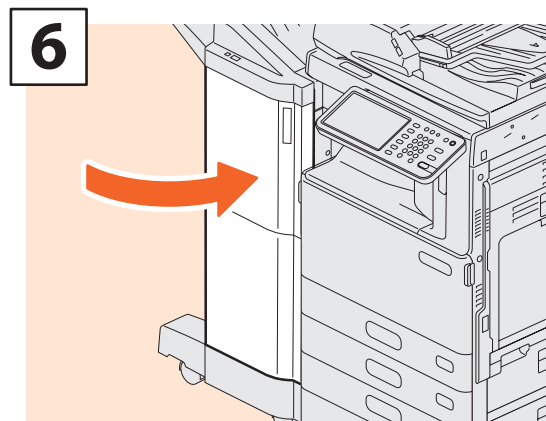

Close the front cover of the Finisher.


Stapler Unit of Saddle Stitch Finisher

1

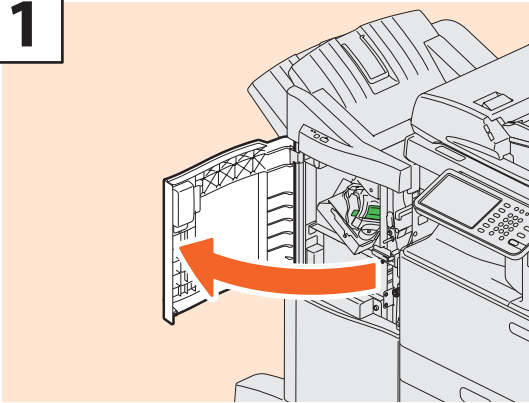


Open the front cover of the Finisher.

2

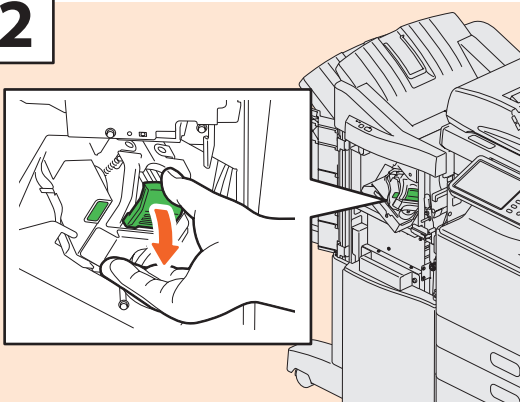


Take off the staple cartridge.

3

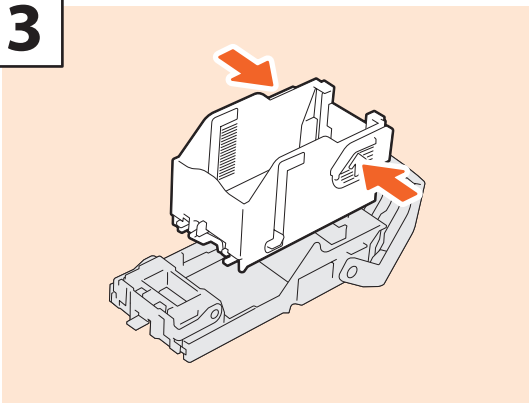


Take the empty staple case out of the staple cartridge.

4

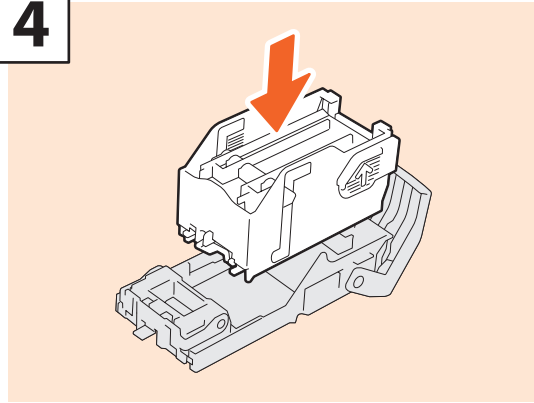


Install a new staple case into the staple cartridge.

5

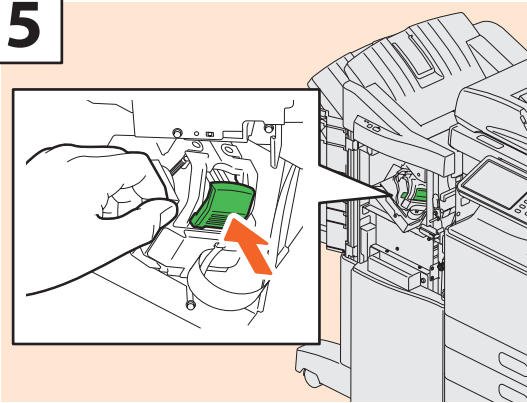


Install the staple cartridge.

6

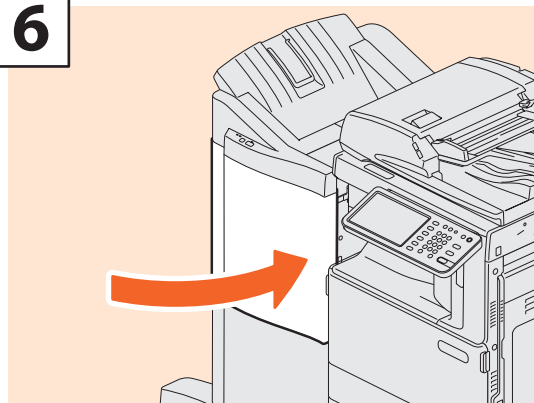


Close the front cover of the Finisher.


Saddle Stitch Unit of Saddle Stitch Finisher

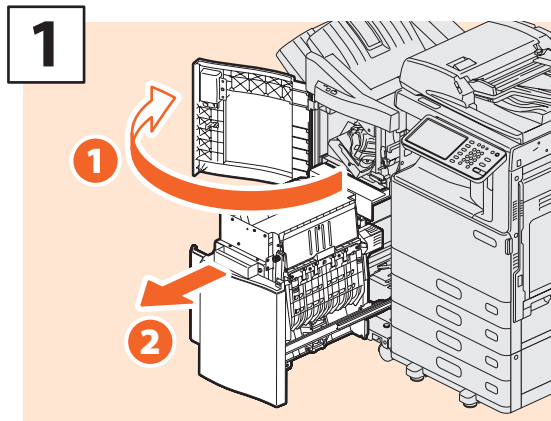


Open the front cover of the Finisher, and then pull out the saddle stitch unit.

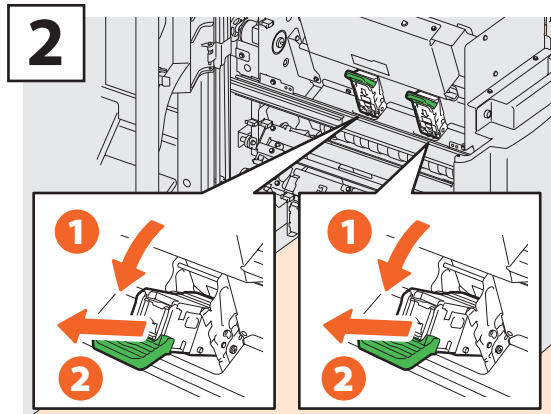


Take out two empty staple cartridges.

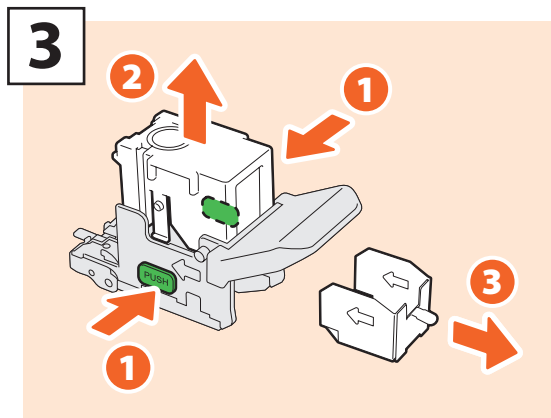


Take the empty staple case out of the staple cartridge.

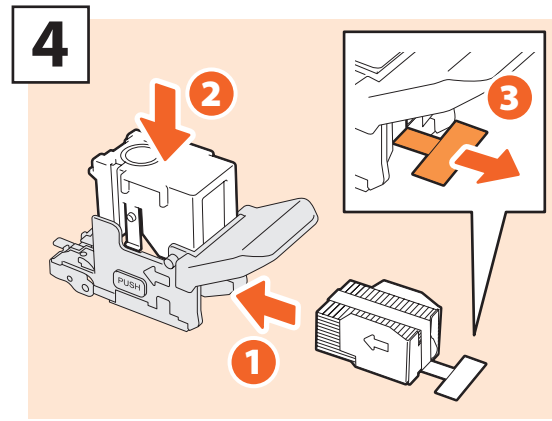

Install a new staple case into the staple cartridge and remove the seal bundling the staples.

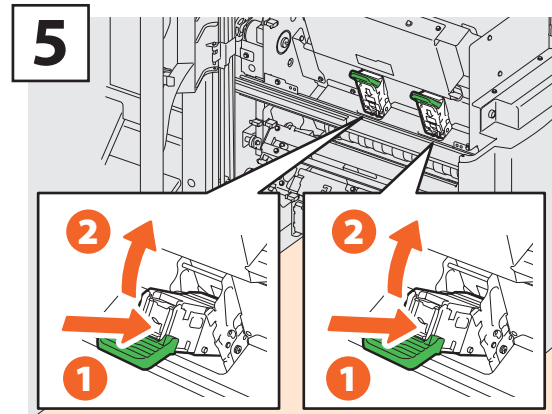


Install two new staple cartridges.

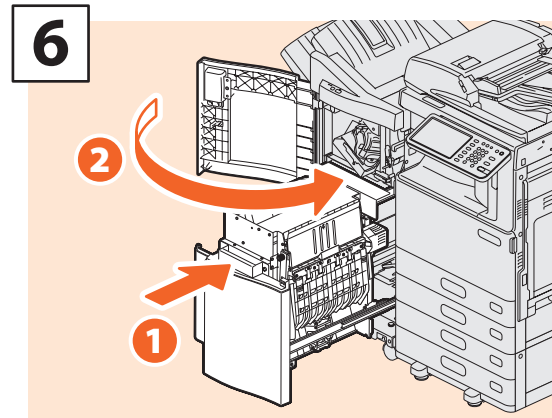


Insert the saddle stitch unit into the Finisher, and then close the front cover of the Finisher.


Stapler Unit of Inner Finisher

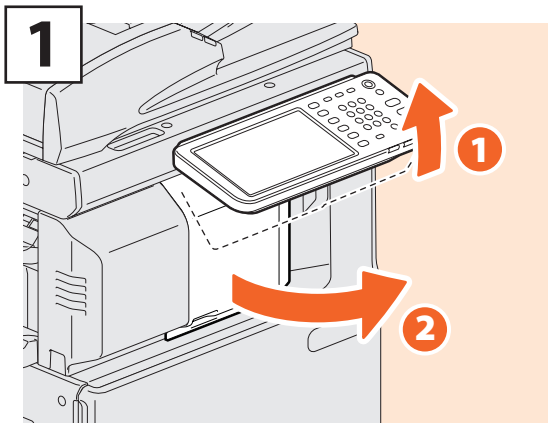


Lift up the control panel, and open the front cover of the Finisher.

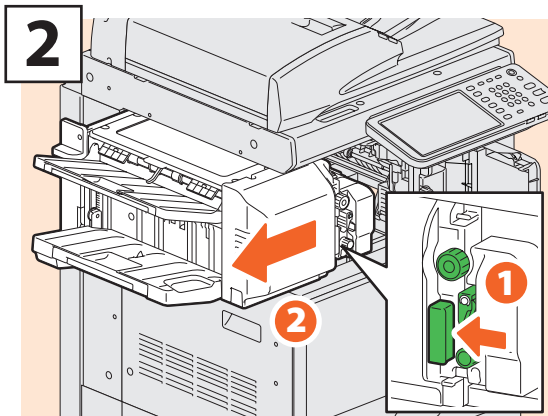


Holding the lever, move the finisher to the left until it comes to a stop.

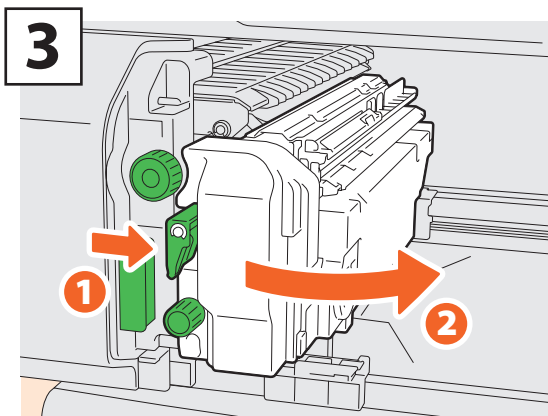


Open the Hole Punch Unit while pushing the lever.

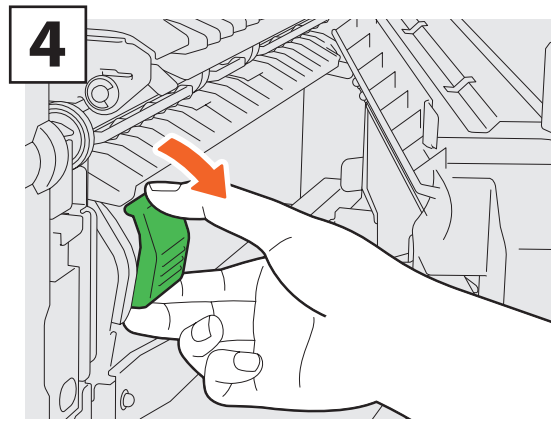

Take off the staple cartridge.

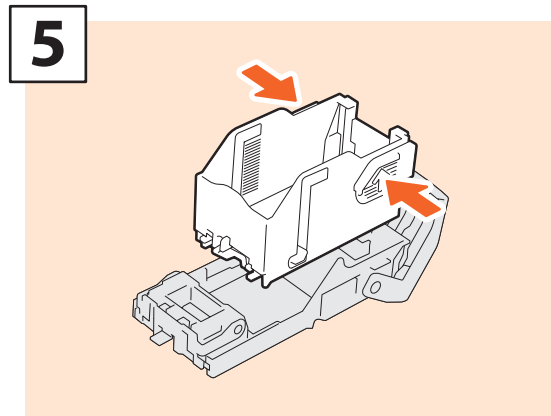


Push the buttons of both side of the cartridge to take off the staple case.

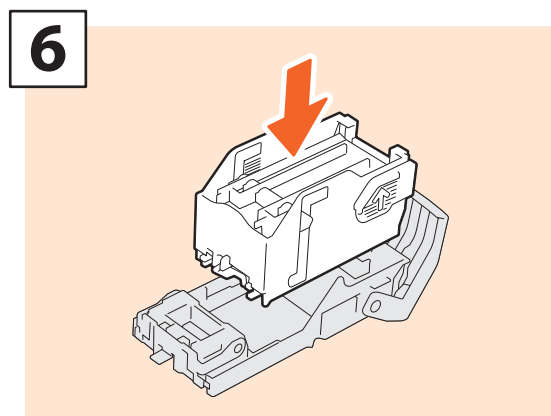


Install a new staple case.

3


Continued on next page 

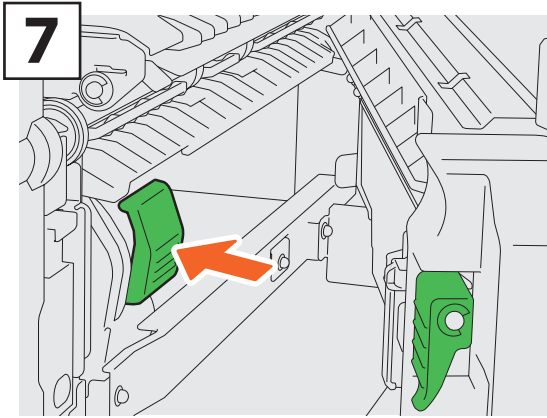


Install the staple cartridge.

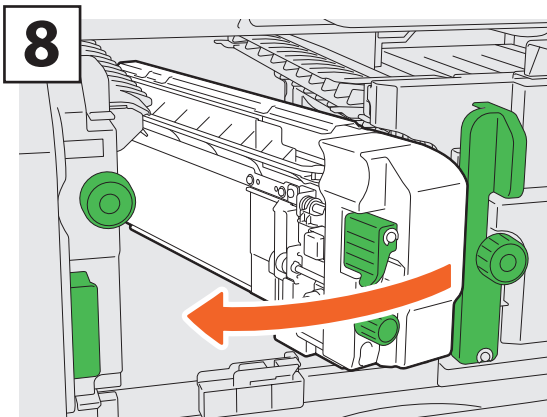

Return the Hole Punch Unit to its original position.

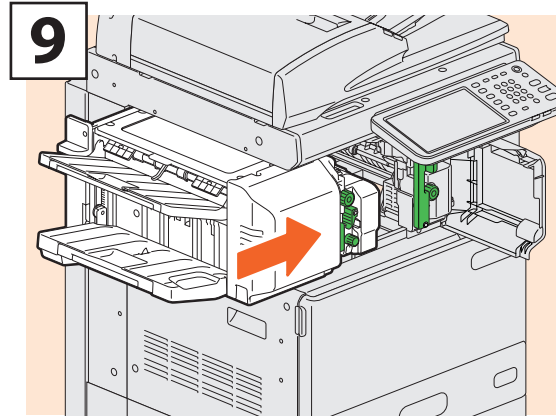

Carefully return the finisher to its original position.

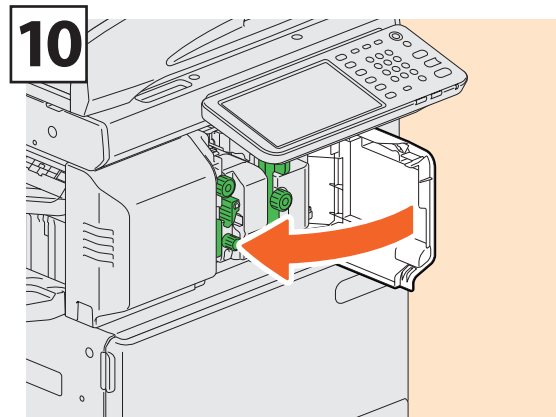

Close the front cover of the Finisher.

CAUTION

Do not put your hand or fingers on the top of the finisher when closing it.

They could be caught and this could injure you.

Regular Cleaning


Poor quality printing such as uneven and soiled images can be improved by simple cleaning. This section describes the cleaning methods for the equipment.

Cleaning for the scanning area, original glass, guide and platen sheet

We recommend you to clean the following items weekly, so that the originals can be scanned in unsoiled conditions. Be careful not to scratch the parts that you are cleaning.

Notes

- Be careful not to scratch the portions in cleaning.
- When cleaning the surface of the equipment, do not use such organic solvents as thinner or benzene.
 - This could warp the shape of the surface or leave it discolored.
- When using a chemical cleaning pad to clean it, follow the instruction.

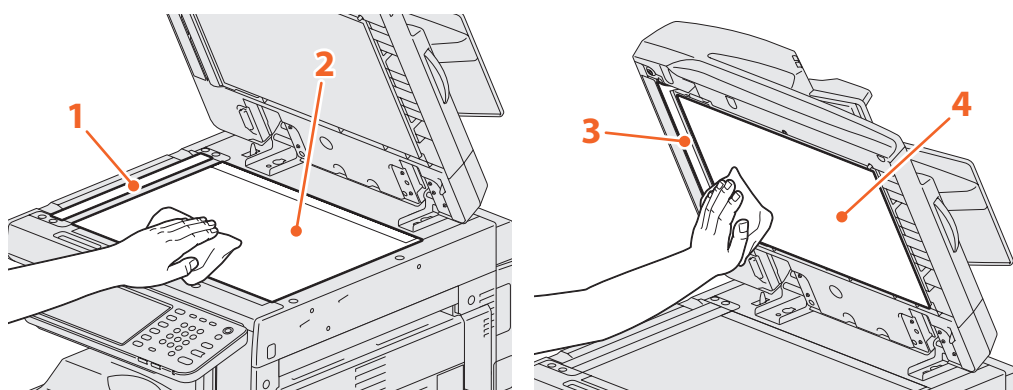

1. Scanning area (surface of the long rectangular glass) / 2. Original glass

Wipe it with a soft dry cloth. If there are still stains remaining, wipe clean with a piece of soft cloth which has been moistened with water and then squeezed well.
Do not use liquids other than water (such as alcohol, organic solvents or neutral detergent).


3. Guide / 4. Platen sheet

Clean the surface as follows depending on the staining.


- Clean it with a soft cloth.
- Clean it with a soft cloth lightly moistened with water.
- Clean it with a soft cloth lightly moistened with alcohol, and then wipe it with a dry cloth.
- Clean it with a soft cloth lightly moistened with watered-down neutral detergent, and then wipe it with a dry cloth.

Cleaning the main chargers and LED print heads


If the inside of the main chargers and the print heads of the LED are dirty, the dirt will be transferred to the copied image. Clean them following the procedure below.

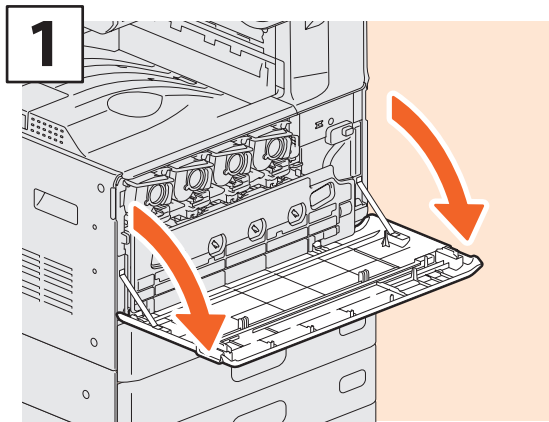

1 Open the front cover.

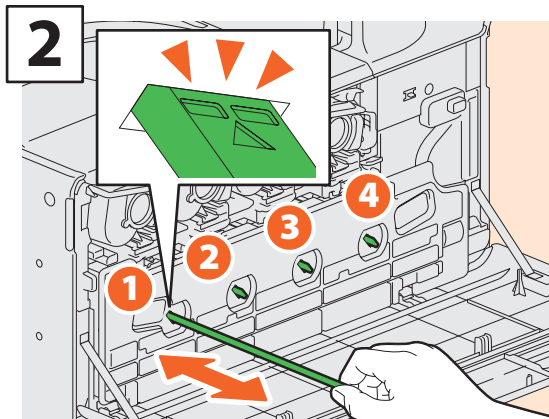


2 Pull out the cleaner until the mark appears and return it. Repeat this 3 times for each of the 4 colors.

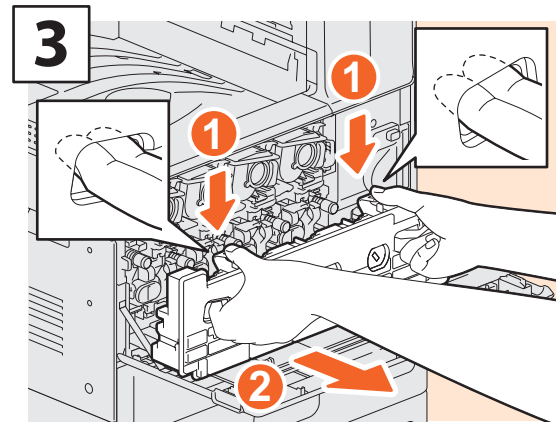

3 Put your fingers in the waste toner box front grooves and take it out toward you pushing down the top latch, and then clean the LED print heads. For instructions on how to clean the LED print heads, see the following:

 P.41 "Replacing Waste Toner Box" (Steps 2 to 6)

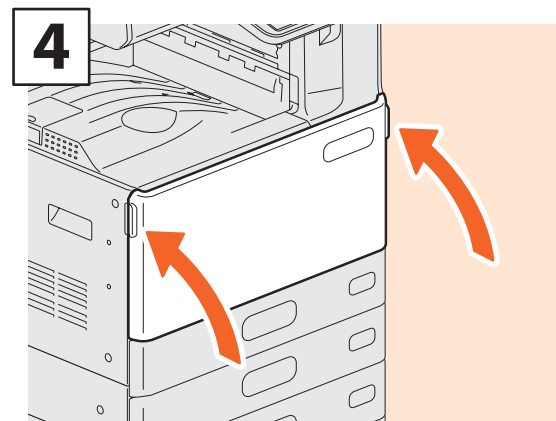

4 Close the front cover pressing both edges.

Chapter 4

TROUBLESHOOTING

| | |
|-----------------------|----|
| Troubleshooting | 50 |
|-----------------------|----|


Troubleshooting

When problems such as paper misfeeds occur, see the following explanation or refer to the *Troubleshooting Guide* (PDF) according to  P.52 "References to the Troubleshooting Guide" in this manual.


Symbols and messages appear on the touch panel


Symbols or messages of such as for paper misfeeds occasionally appear on the touch panel.

For details of the paper misfeed symbols, refer to the following guide:

 *Troubleshooting Guide* (PDF): "Chapter 1: TROUBLESHOOTING FOR THE HARDWARE" - "Clearing a Paper Misfeed"

For details of the messages on the touch panel, refer to the following guide:

 *Troubleshooting Guide* (PDF): "Chapter 1: TROUBLESHOOTING FOR THE HARDWARE" - "Messages Displayed on the Touch Panel"

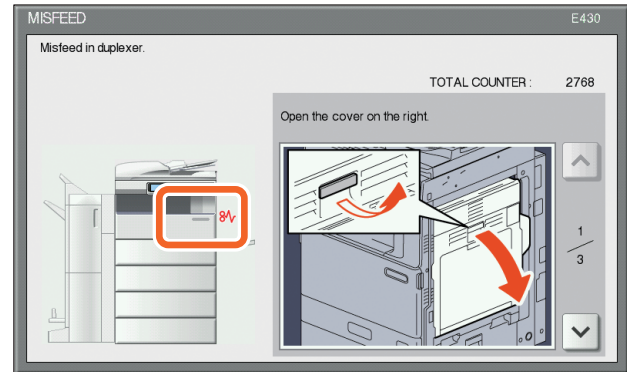


When paper misfeeds occur

When paper misfeeds occur, refer to the guidance displayed on the touch panel of the equipment or refer to the following guide:

 *Troubleshooting Guide* (PDF): "Chapter 1: TROUBLESHOOTING FOR THE HARDWARE" - "Clearing a Paper Misfeed"

Covers of the equipment and the options to be opened when paper misfeeds occur are as indicated by the arrows in the following illustrations.


The covers of the equipment and the options to be opened when paper misfeeds occur are as indicated by the arrows in the following illustrations.

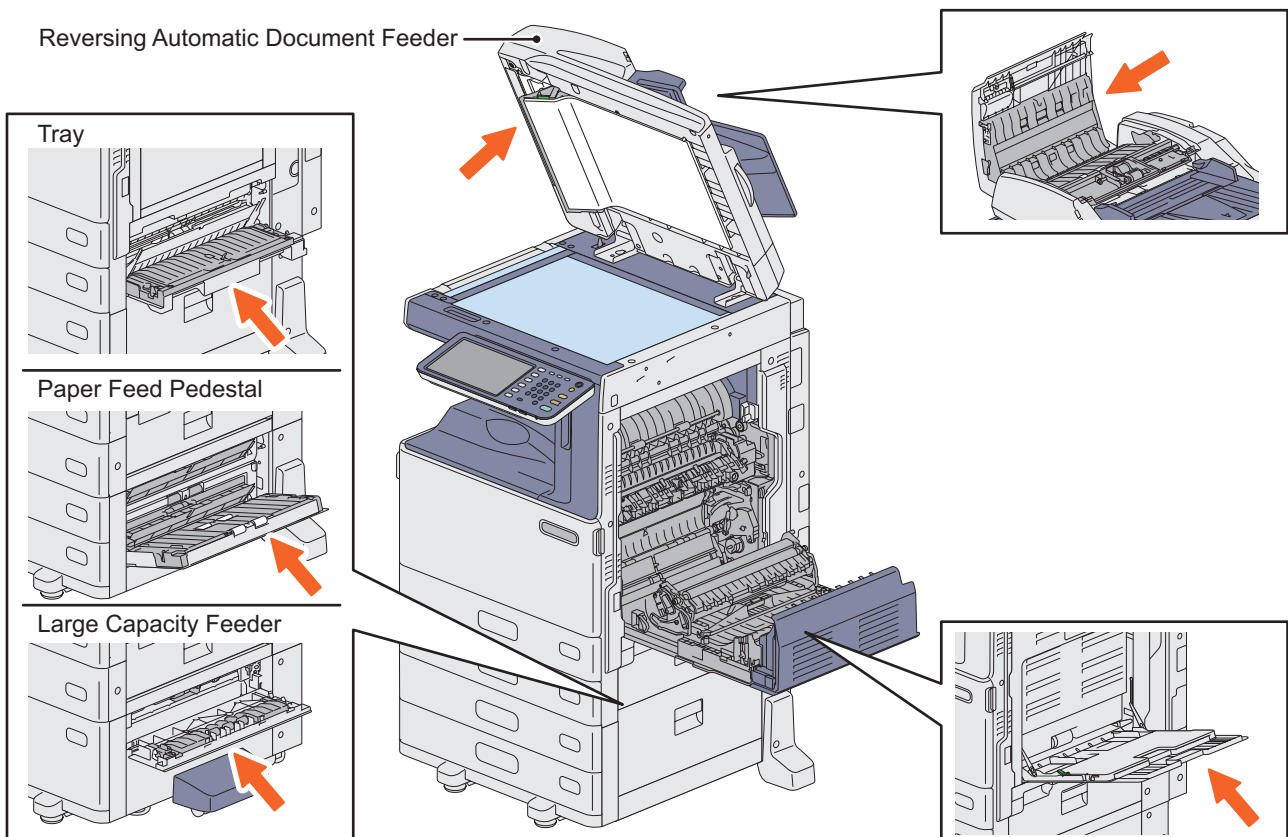


Covers of the Finisher, the Hole Punch Unit and the Bridge Unit

The covers of the Finisher, Hole Punch Unit and Bridge Unit to be opened when paper misfeeds occur are as indicated by the arrows in the following illustrations.


The Finisher, the Hole Punch Unit and the Bridge Unit

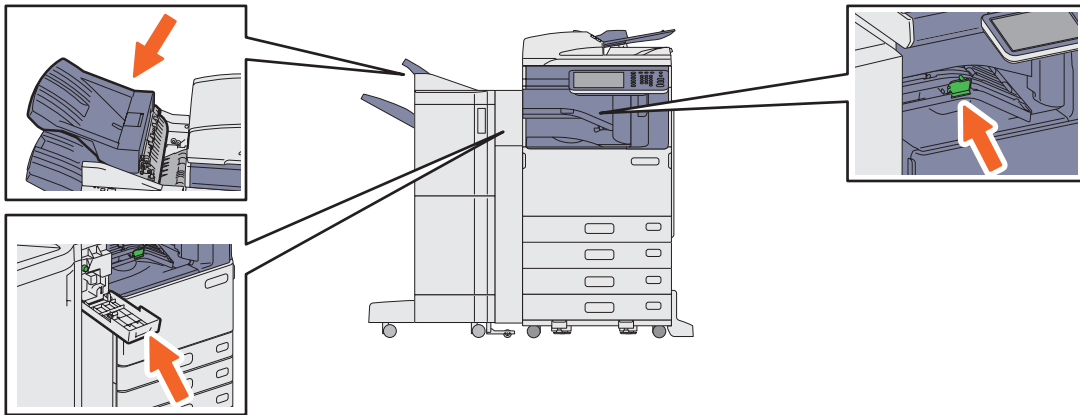

The Saddle Stitch Finisher, the Hole Punch Unit and the Bridge Unit

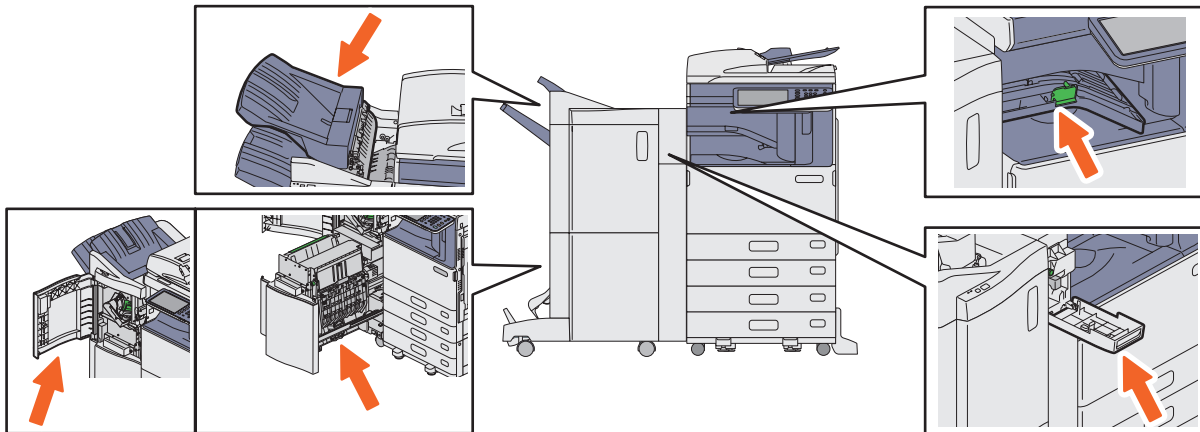


The Inner Finisher and the Hole Punch Unit

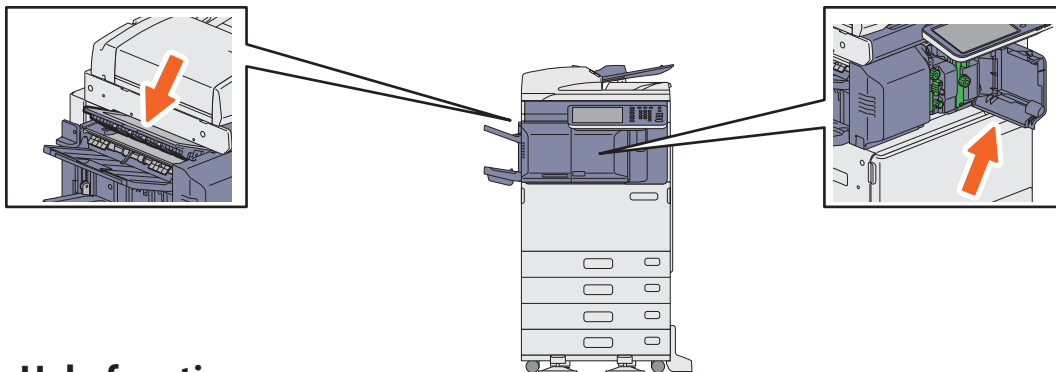

Using the Help functions

If you press **?** on the upper right of the touch panel, explanations of the functions and buttons on the screen are displayed.

If you press **i** on the lower left of the Help screen, supplementary information about the functions appears.

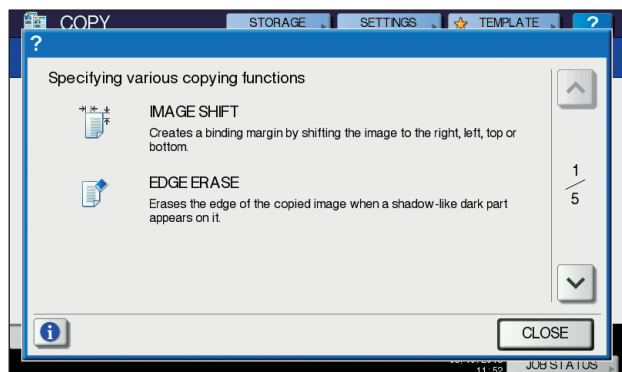

About Troubleshooting Guide


The *Troubleshooting Guide* (PDF) describes the causes and the troubleshooting of problems when you use the equipment.


| References to the Troubleshooting Guide | | |
|---|--|--|
| Chapter | Title | Section |
| Chapter 1 | TROUBLESHOOTING FOR THE HARDWARE | When This Screen Is Displayed |
| | | Messages Displayed on the Touch Panel |
| | | Clearing a Paper Misfeed |
| | | Clearing a Staple Jam |
| | | Replacing a Toner Cartridge |
| | | Replacing the Waste Toner Box |
| | | Refilling With Staples |
| | | Cleaning the Main Chargers and LED Print Heads |
| | | Cleaning the Hole Punch Dust Bin |
| | | When Printed Sheets Overflow from the Stacker |
| Chapter 2 | TROUBLESHOOTING FOR COPYING | Copying Problems |
| Chapter 3 | TROUBLESHOOTING FOR PRINTING | Print Job Problems |
| | | Printer Driver Problems |
| | | Network Connection Problems |
| | | Client Problems |
| | | Hardware Problems |
| Chapter 4 | TROUBLESHOOTING FOR SCANNING | Scanning Problems |
| Chapter 5 | TROUBLESHOOTING FOR e-Filing | e-Filing Web Utility Problems |
| Chapter 6 | TROUBLESHOOTING FOR NETWORK CONNECTIONS | Locating the Equipment in the Network |
| | | LDAP Search and Authentication Problems |
| | | Printing Problems (Network Related) |
| | | Fax Driver Problems |
| | | Client Software Authentication Problems |
| Chapter 7 | CHECKING THE EQUIPMENT STATUS WITH TopAccess | Hardware Status Icons on TopAccess [Device] Tab |
| | | Error Messages |
| | | Error Codes |
| Chapter 8 | WHEN SOMETHING IS WRONG WITH THE EQUIPMENT | When You Think Something Is Wrong With the Equipment |
| | | Regular Maintenance |

Error codes

Press [JOB STATUS] and then the [LOG] tab on the touch panel; the LOG menu is displayed. The job history and error codes are displayed in the LOG menu.

For details of the error codes, refer to the following guide:

 *Troubleshooting Guide* (PDF): "Chapter 7: CHECKING THE EQUIPMENT STATUS WITH TopAccess" - "Error Codes"

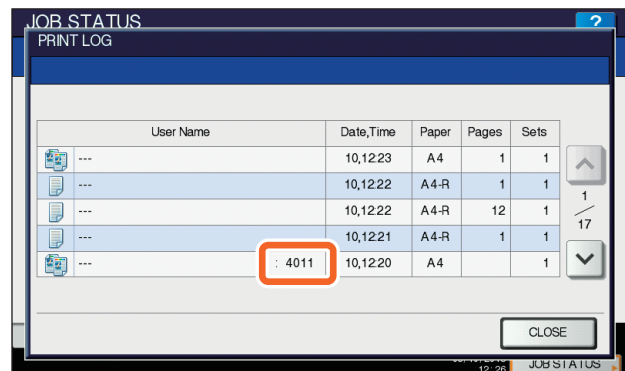

Chapter 5

ADVANCED FUNCTIONS

Advanced Functions54

Advanced Functions

In Chapter 2 in this manual, the basic functions are described. This section describes the advanced functions to help you get the best out of your equipment.


Examples of the advanced functions describing in this section

Copying different-sized originals and stapling copies




P.55 in this manual

Attaching the scanned data to an E-mail

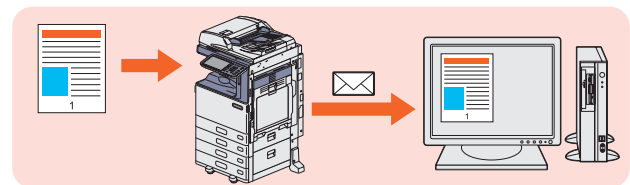


P.59 in this manual

Copying or scanning originals without blank sheets

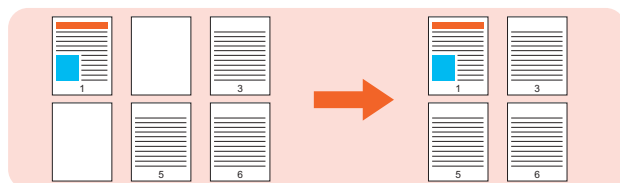


P.56 in this manual

Adding date and time to document files

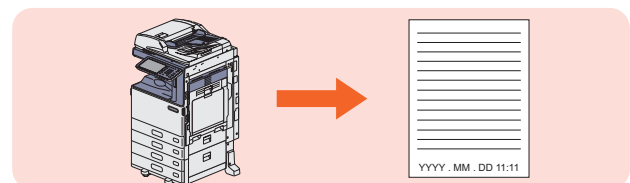


P.60 in this manual

Storing data in a shared folder as well as sending a fax

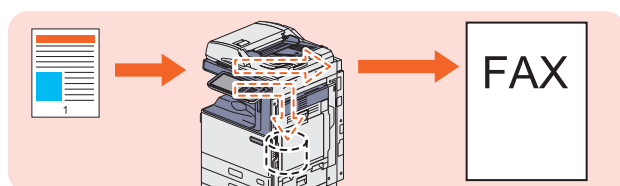


P.57 in this manual

Printing a PDF file stored in the USB device

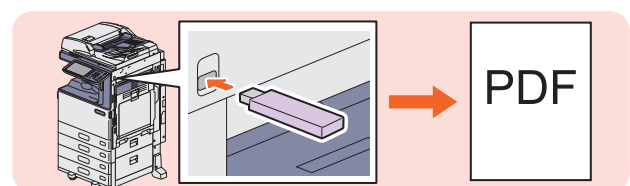


P.61 in this manual

Registering frequently used scan settings in templates

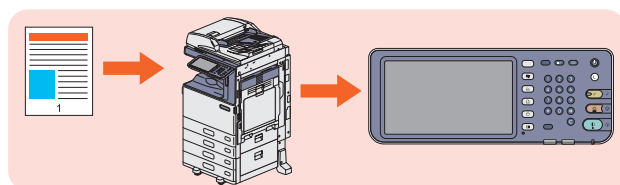

P.58 in this manual

Printing only allowed data set on the control panel

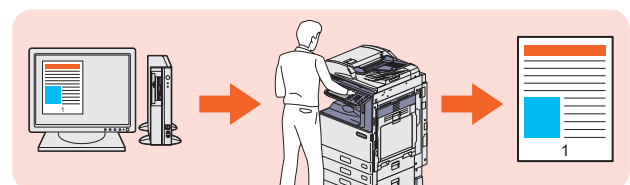

P.62 in this manual

COPY


FAX

SCAN

e-FILING

PRINT

Copying different-sized originals and stapling copies

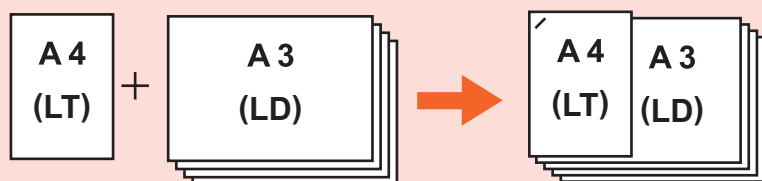

The procedure of how to copy 5 sets of different-sized originals (A4 or LT: 1 sheet, A3 or LD: 4 sheets) and staple the copies is as follows. The Reversing Automatic Document Feeder and the Finisher are required.

- 1 Place the originals on the Reversing Automatic Document Feeder.

P.16 "Placing originals" in this manual

Note

If you want to copy different-sized originals and staple the copies, select only those having the same width.


- 2 Press [ZOOM] on the touch panel.

- 3
 - 1 Press [MIXED SIZE] and then
 - 2 [OK] on the touch panel.



- 4 Press [FINISHING] on the touch panel.

- 5
 - 1 Press [FRONT STAPLE] and then
 - 2 [OK] on the touch panel.

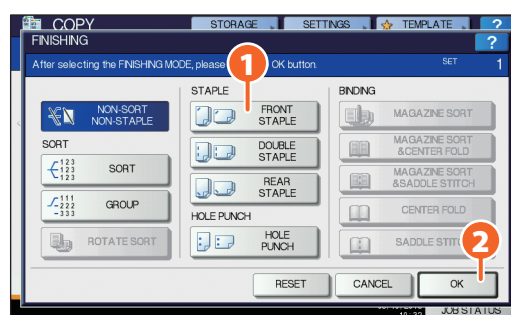

- 6 Key in 5 for the number of copy sets, and then press the [START] button on the control panel.

COPY


FAX

SCAN

e-FILING

PRINT

Copying or scanning originals without blank sheets

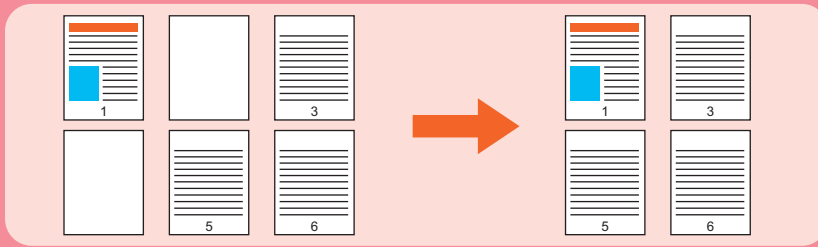

You can copy or scan originals omitting blank sheets while maintaining the original page sequence.


When copying

- 1 Place the originals on the Reversing Automatic Document Feeder.

P.16 "Placing originals" in this manual

- 2 Press the [EDIT] tab, and then in the basic menu for the copying functions.

- 3 Press [OMIT BLANK PAGE] and then [OK].

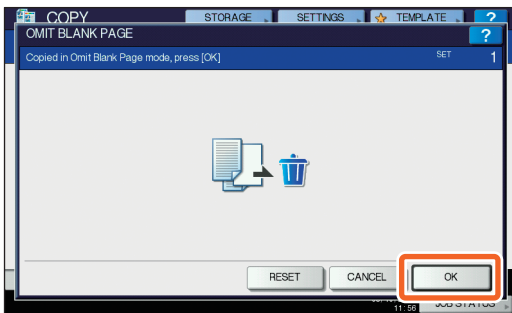

- 4 Press the [START] button on the control panel. Copying starts.


When scanning

- 1 Place the originals on the Reversing Automatic Document Feeder.

P.16 "Placing originals" in this manual

- 2 Press [SCAN SETTING], and then in the basic menu for the scanning functions.

- 3 Press **1** [ON] in the "OMIT BLANK PAGE" setting and then **2** [OK].

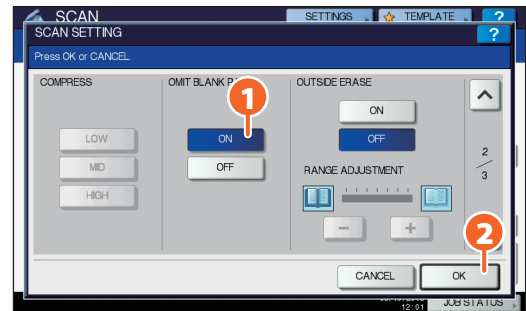

- 4 In the basic menu for the scanning functions, specify details such as the destination for saving the data.

- 5 Press [SCAN] on the touch panel. Scanning starts.

COPY


FAX

SCAN

e-FILING

PRINT

Storing data in a shared folder as well as sending a fax

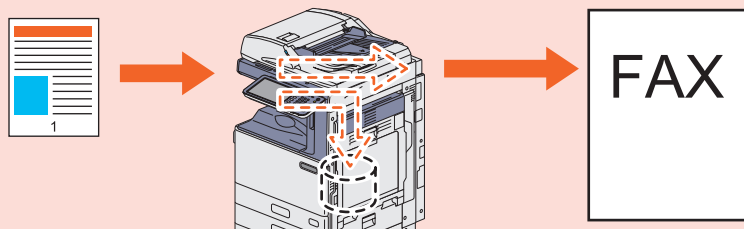

You can store documents in a shared folder in the equipment or in a computer connected to the network as well as sending a fax.

- 1** Place the original(s).
📖 P.16 "Placing originals" in this manual

- 2** Press [STORAGE] on the touch panel.



- 3** **1** Specify details such as the file name, shared folder and file format and then **2** press [OK].



- 4** Specify the recipient and press [SEND]. Sending a fax starts.

5

COPY


FAX

SCAN

e-FILING

PRINT


Registering frequently used scan settings in templates

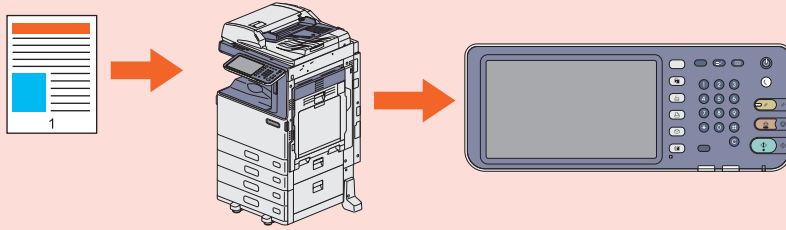

If you register frequently used scan settings in templates, you can easily perform scan operations only by recalling the templates. How to register scan settings (scan data are stored in PDF format in a shared folder) in templates (PUBLIC TEMPLATE GROUP) is described here.

1 Press [FILE] on the touch panel.


2 **1** Select "PDF" in the file format, and then **2** press [OK].

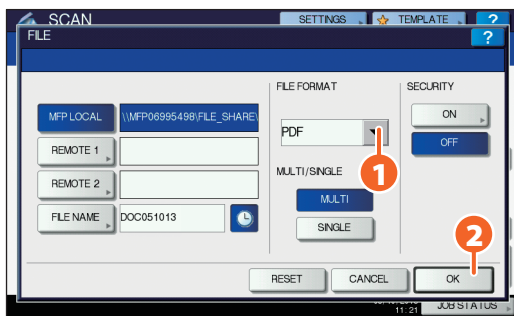

3 Change the scan setting as required.


4 Press [TEMPLATE] on the touch panel, and then [REGISTRATION] tab.

5 **1** Press [PUBLIC TEMPLATE GROUP] on the touch panel, and then **2** [OPEN].

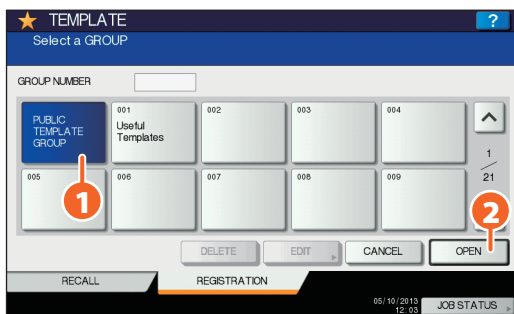


6 Press [PASSWORD], enter the administrator password and press [OK].

7 **1** Select an empty template button, and then **2** press [SAVE].

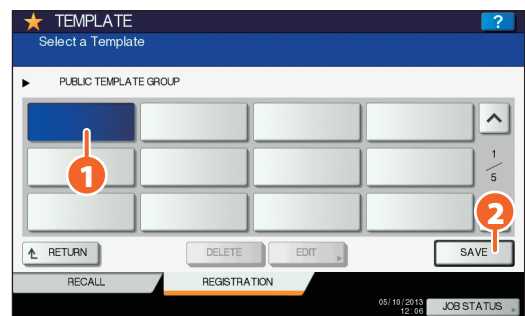

8 **1** Make the settings such as the template name, and then **2** press [SAVE] to complete the registration.

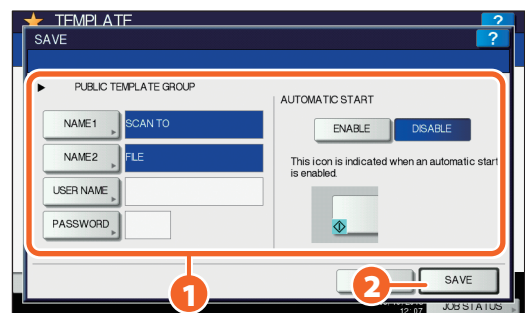

COPY


FAX

SCAN

e-FILING


PRINT

Attaching the scanned data to an E-mail

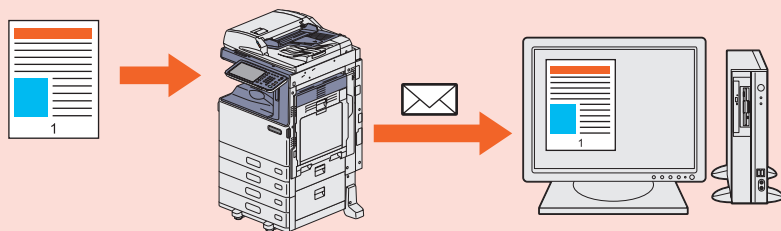


The procedure for attaching the scanned data to an E-mail and sending it to the specified E-mail address is as follows.

- 1** Place the original(s).
 ⓘ P.16 "Placing originals" in this manual
- 2** Press [E-MAIL] and then [TO] on the touch panel.
- 3** **1** Specify the E-mail address and then **2** press [OK].

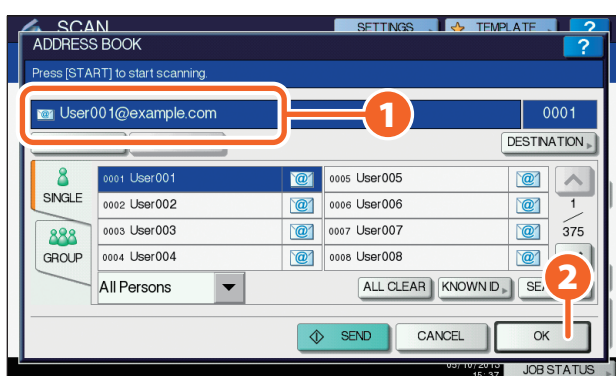

- 4** Define the settings for the file as required and then press [OK].
- 5** Press [SCAN] on the touch panel. Scanning starts.

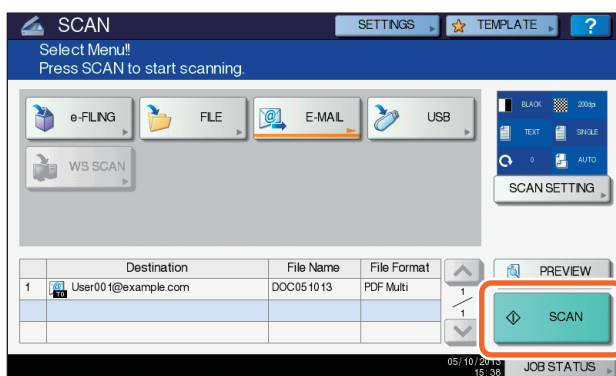

COPY



FAX

SCAN

e-FILING

PRINT


Adding date and time to document files

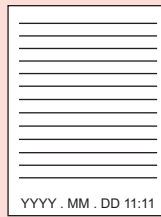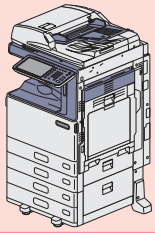

The procedure for printing a document file stored in e-Filing with the date and time added at the bottom is as follows.


1 Select the box in which the desired document is stored.

2 **1** Select the document and then **2** press [SETTINGS].

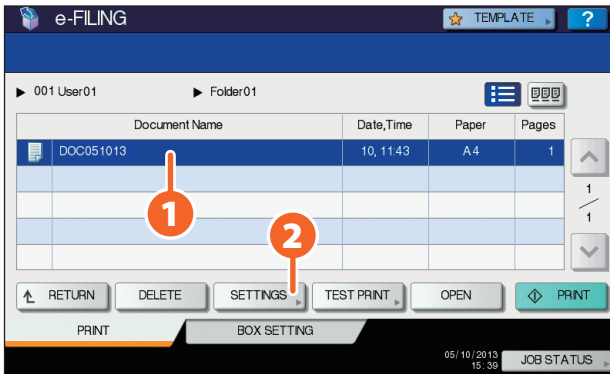

3 Press [TIME STAMP].

4 **1** Press [LOWER] and then **2** [OK].

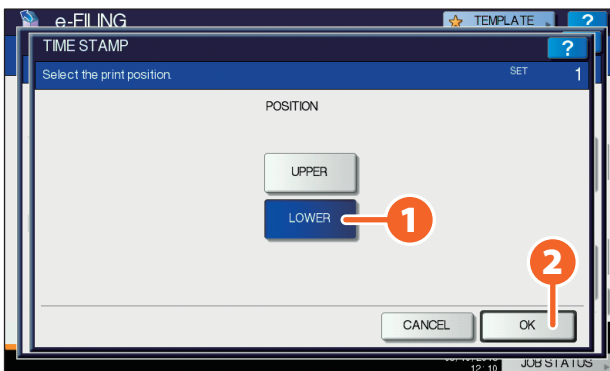

5 Press [PRINT] on the touch panel. Printing starts.

COPY


FAX

SCAN

e-FILING


PRINT

Printing a PDF file stored in the USB device

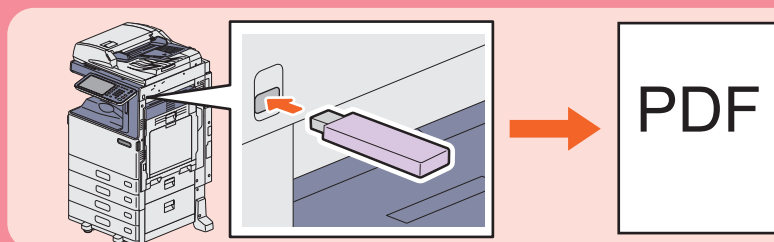

The procedure for printing 1 set of a PDF file stored in the USB device is as follows.


- 1 Connect the USB device to the USB port.

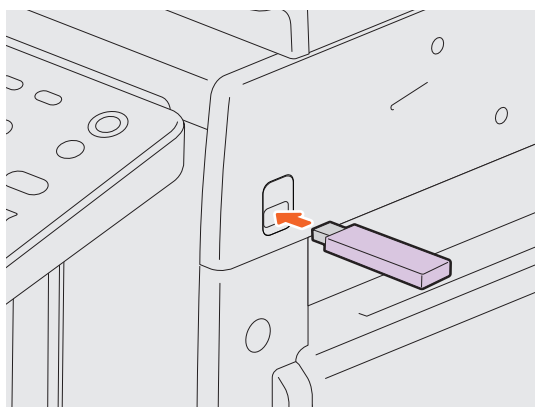

- 2 Press the [PRINT] button on the control panel.

- 3 Click the pull-down menu, and then select [USB].

- 4
 - 1 Select a PDF file to be printed and then
 - 2 press [PRINT]. Printing starts.

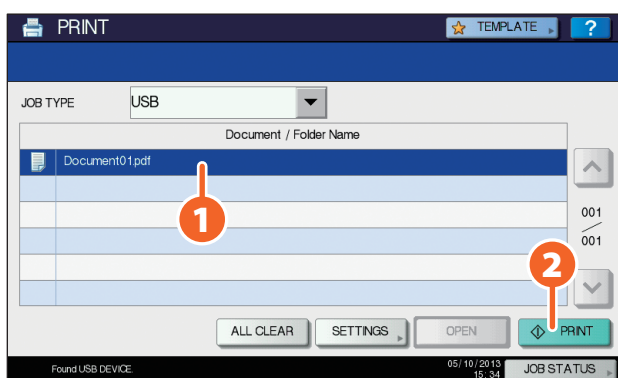

Tips

- Press [SETTINGS], then you can set such as duplex printing and stapling.
- The following types of files are also available for printing:
 - JPEG file
 - PRN file
 - PS file
 - XPS file

COPY


FAX

SCAN

e-FILING


PRINT

Printing only allowed data set on the control panel

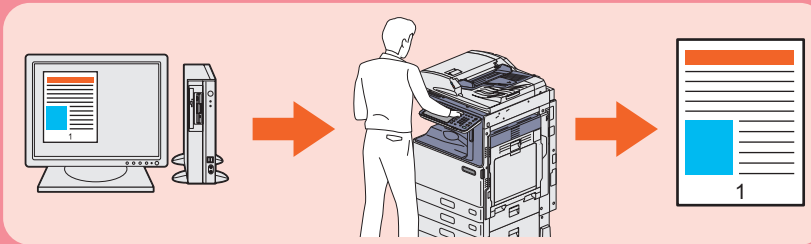


The procedure for printing only allowed data set on the control panel is as follows. This will stop you from forgetting to remove printed sheets.

- 1** Open a file to be printed on a Windows computer, and then select [Print] from the file menu of the application.
- 2** Select the printer driver of the equipment, and then click [Preferences] ([Properties]).
- 3** Select "Hold Print" for the job type in the [Basic] tab menu.

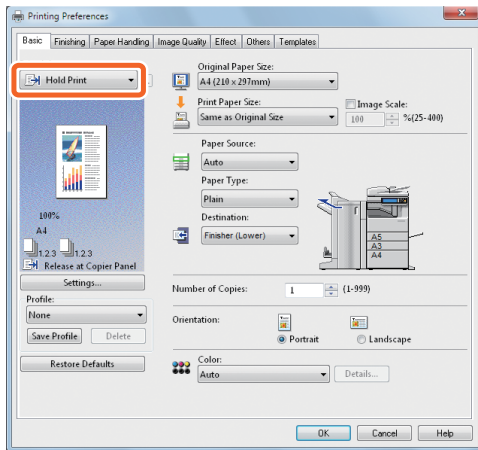

- 4** Click [OK] to return to the print dialog box and then [Print] ([OK]).
- 5** Press the [PRINT] button on the control panel of the equipment.

- 6** Click the pull-down menu, and then select [HOLD].
- 7** Select the user name, and then press [OK].
- 8**
 - 1** Select the file to be printed and then
 - 2** press [PRINT]. Printing starts.

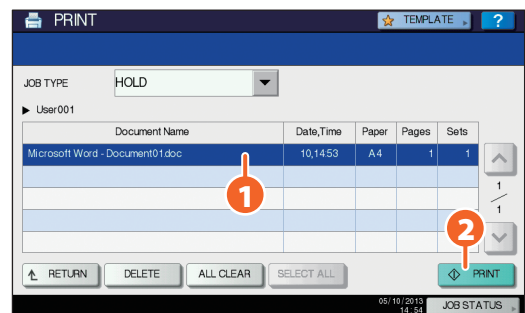

Chapter 6


INFORMATION ABOUT EQUIPMENT

| | |
|-------------------------------------|----|
| Items Included in This Product..... | 64 |
| Software DVD-ROM | 65 |
| Client Software | 66 |
| Options..... | 68 |
| Logging in..... | 71 |
| Specifications of Equipment..... | 74 |
| Specifications of Options..... | 77 |

Items Included in This Product

The following items are co-packed with the equipment. Check that you have them all. Contact your service technician or representative if any are missing or damaged.

Items included in this product

| | |
|--|---|
| Safety Information | The Safety Information describes the necessary precautions for use. For your added security, be sure to read this booklet first. |
| Quick Start Guide (This manual) | The Quick Start Guide describes the preparations, basic and advanced usage, maintenance and regular cleaning of the equipment. |
| Software DVD-ROM | The Software DVD-ROM contains the client software such as the printer drivers and the utility software. It also contains pdf files of the Operator's Manuals such as the <i>Copying Guide</i> and the <i>Troubleshooting Guide</i> . For details, see the following page:  P.65 "Software DVD-ROM" in this manual |


Software DVD-ROM

The Software DVD-ROM contains pdf files of the Operator's Manuals and the following client software such as the printer drivers and the utility software.

| Client software | |
|-----------------|---|
| For Windows | Client Software Installer |
| | PCL Driver |
| | PS Driver |
| | XPS Driver |
| | TWAIN driver |
| | File downloader |
| | Fax driver |
| | AddressBook Viewer |
| | Remote Scan driver |
| | SCANNER driver (WIA) |
| | e-Filing Backup/Restore Utility |
| For Macintosh | PPD file for Mac OS X 10.4 to Mac OS X 10.6.x |
| | PPD file for Mac OS X 10.7 or later |
| | Plug-in for Mac OS X 10.4 to Mac OS X 10.6.x |

Tips

For installing the client software, refer to the following guide:

 **Software Installation Guide** (PDF): "Chapter 1: OVERVIEW"










For details of the client software, see the following page:

 P.66 "Client Software" in this manual




Client Software

This section describes the outlines of the client software of the equipment. It is necessary to install software except e-Filing Web utility and TopAccess in the computer before it is used.





Client software for the printing functions

| | |
|-------------------------------|--|
| PCL Driver | This driver is generally used. For details, refer to the following guides:  Software Installation Guide (PDF): "Chapter 2: INSTALLING PRINTER DRIVERS FOR WINDOWS"  P.36 "Basic Printing Operation" in this manual  Printing Guide (PDF): "Chapter 2: PRINTING FROM WINDOWS" |
| PS Driver | This driver enables you to print documents in the high quality mode with applications such as Adobe Systems Incorporated. For details, refer to the following guides:  Software Installation Guide (PDF): "Chapter 2: INSTALLING PRINTER DRIVERS FOR WINDOWS"  Printing Guide (PDF): "Chapter 2: PRINTING FROM WINDOWS" |
| XPS Driver | This printer driver enables you to print documents from the WPF applications created for Windows Vista or Windows 7. For details, refer to the following guides:  Software Installation Guide (PDF): "Chapter 2: INSTALLING PRINTER DRIVERS FOR WINDOWS"  Printing Guide (PDF): "Chapter 2: PRINTING FROM WINDOWS" |
| PPD file for Macintosh | This printer driver enables you to print documents from Macintosh computers (Mac OS X 10.4 or later). For details, refer to the following guides:  Software Installation Guide (PDF): "Chapter 3: INSTALLING PRINTER DRIVERS FOR MACINTOSH"  Printing Guide (PDF): "Chapter 3: PRINTING FROM Macintosh" |


Client software for the scanning functions

| | |
|-----------------------------|--|
| Remote Scan driver | This driver enables you to scan documents remotely and obtain scanned data as an image in the applications supporting TWAIN on Windows computers. For details, refer to the following guide:  Software Installation Guide (PDF): "Chapter 4: INSTALLING SCAN DRIVER AND UTILITIES" |
| SCANNER driver (WIA) | This driver enables you to scan documents remotely and obtain scanned data as an image in the applications supporting WIA (Windows Imaging Acquisition) on Windows computers. For details, refer to the following guides:  Software Installation Guide (PDF): "Chapter 4: INSTALLING SCAN DRIVER AND UTILITIES"  Scanning Guide (PDF): "Chapter 5: OTHER SCANNING METHODS" |




Client software for the e-Filing functions

| | |
|--|--|
| TWAIN driver | This driver enables you to obtain documents stored in e-Filing as an image in application supporting TWAIN on Windows computers. For details, refer to the following guide:  Software Installation Guide (PDF): "Chapter 4: INSTALLING SCAN DRIVER AND UTILITIES" |
| File downloader | File downloader enables you to obtain documents stored in e-Filing as an image in your Windows computer. For details, refer to the following guide:  Software Installation Guide (PDF): "Chapter 4: INSTALLING SCAN DRIVER AND UTILITIES" |
| e-Filing Web utility | This utility enables you to operate or make settings for e-Filing using a browser on your computer. Since this utility has been already installed to the equipment, enter the IP address of the equipment into a browser and turn ON the power. For details, refer to the following guide:  e-Filing Guide (PDF): "Chapter 3: OVERVIEW ON e-FILING WEB UTILITY" |
| e-Filing Backup/Restore Utility | This utility enables you to back up and restore the data stored in e-Filing. For details, refer to the following guide:  Software Installation Guide (PDF): "Chapter 6: INSTALLING e-FILING BACKUP/RESTORE UTILITIES" |

Client software for the network management functions


| | |
|------------------|--|
| TopAccess | TopAccess enables you to view the device information, display logs, create templates and an address book, and manage the equipment using a browser. Since TopAccess has been already installed to the equipment, enter the IP address of the equipment into a browser and turn ON the power. For details, refer to the following guide:  TopAccess Guide (PDF): "Chapter 1: OVERVIEW" |
|------------------|--|

Client software for the network fax functions

| | |
|---------------------------|--|
| Fax driver | This driver enables you to send faxes or Internet faxes from your computer. For details, refer to the following guides:  Software Installation Guide (PDF): "Chapter 5: INSTALLING FAX DRIVER AND UTILITY"  Network Fax Guide (PDF): "Chapter 1: OVERVIEW" |
| AddressBook Viewer | This viewer enables you to manage the address book (such as fax numbers and E-mail addresses) and upload the address book from your computer to the equipment. For details, refer to the following guide:  Software Installation Guide (PDF): "Chapter 5: INSTALLING FAX DRIVER AND UTILITY" |

Options

The following options are sold separately, and upgrade the performance of the equipment if installed. For details, contact your service technician or representative.

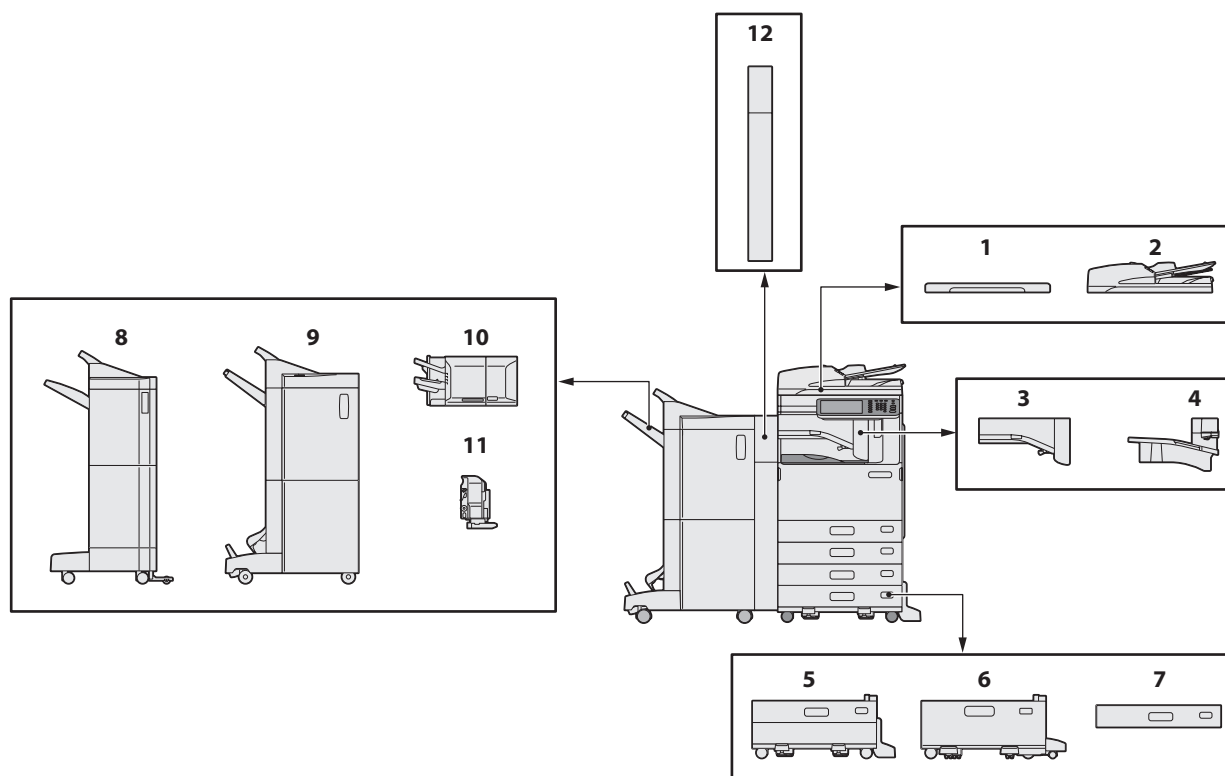

- 1. Original Cover (KA-1640PC)**
This is used to hold an original.
- 2. Reversing Automatic Document Feeder (MR-3025)**
This unit automatically feeds a stack of originals one by one to have them copied.
- 3. Bridge Unit (KN-2550)**
This unit acts as a relay for the Finisher and this equipment.
- 4. Job Separator (MJ-5006)**
Enables Faxes, copies and prints to be output onto separate paper trays.
- 5. Paper Feed Pedestal (KD-1032)**
This pedestal enables you to install the Additional Drawer Module.
- 6. Large Capacity Feeder (KD-1031)**
This feeder enables you to feed up to 2000 sheets (80 g/m² or 20 lb. Bond) of A4 or LT paper.
- 7. Additional Drawer Module (MY-1039)**
This tray can be added to the Paper Feed Pedestal.
- 8. Finisher (MJ-1107)**
This Finisher enables sort/group finishing and stapling. The Hole Punch Unit can be installed in this Finisher. The Bridge Unit is required for the installation of this Finisher.
- 9. Saddle Stitch Finisher (MJ-1108)**
This Finisher enables saddle stitching in addition to sort/group finishing and stapling. The Hole Punch Unit can be installed in this Finisher. The Bridge Unit is required for the installation of this Finisher.
- 10. Inner Finisher (MJ-1036)**
This Finisher enables sort/group finishing and stapling. The Hole Punch Unit can be installed in this Finisher. This Finisher can be installed in ES9465 MFP.
- 11. Hole Punch Unit (MJ-6007)**
This unit enables you to punch holes on printed sheets. Install it in the Inner Finisher to use it.
- 12. Hole Punch Unit (MJ-6104)**
This Unit enables you to punch holes on printed sheets. Install it in the Finisher or the Saddle Stitch Finisher to use it.

Other options available are as follows. Contact your service technician or representative for details.

Work Table (KK-4550)

This is a small table for placing originals while the equipment is being operated.

Installed on the right-hand side of the equipment.

FAX Unit (GD-1320)

This is a unit for using the equipment as a Fax machine.

Installed in the rear side of the equipment.

2nd Line for FAX Unit (GD-1260)

This unit enables you to add a line to the Fax, making a 2nd line available.

- Installed inside of the equipment.
- The FAX Unit is required.

Desk (MH-2050)

This is a desk for the equipment.

Accessible Arm (KK-2550)

This enables a user in a wheelchair to close the Reversing Automatic Document Feeder while remaining seated.

 P.70 "How to use the Accessible Arm" in this manual

Operator's Manual Pocket (KK-1660)

Keep the manual in this pocket.

Wireless LAN Module (GN-1060)

This module enables the equipment to be used in a wireless LAN environment.

- Installed inside of the equipment.
- The Antenna is required.
- The equipment cannot be connected to the wireless and wired LAN at the same time.

Antenna (GN-3010)

This is used when the Wireless LAN Module is installed.

OKI IC Card Reader (KP-2004/KP-2005)

You can log in and use the equipment simply by holding the IC card over the OKI IC Card Reader.

- Installed on the right-hand side of the equipment.
- This cannot be installed with the Work Table at the same time.

Data Overwrite Enabler (GP-1070)

This is an enabler to erase the data stored temporarily when copying, printing, scanning, faxing, Internet Fax or network Fax is performed. It overwrites temporarily stored data with random data.

IPsec Enabler (GP-1080)

This enables the IPsec function in this equipment.

Meta Scan Enabler (GS-1010)

This enables the Meta Scan function in this equipment.

Unicode Font Enabler (GS-1007)

This enables printing from the SAP environment using Unicode font with this equipment.

Damp Heater (MF-2050)


This is a pre-heating unit to prevent dew from forming inside of the equipment.

Note


Depending on the model, options have been already installed and the functions can be used.

How to use the Accessible Arm

A person in a wheelchair can close the Reversing Automatic Document Feeder using the Accessible Arm. Store it near the equipment.

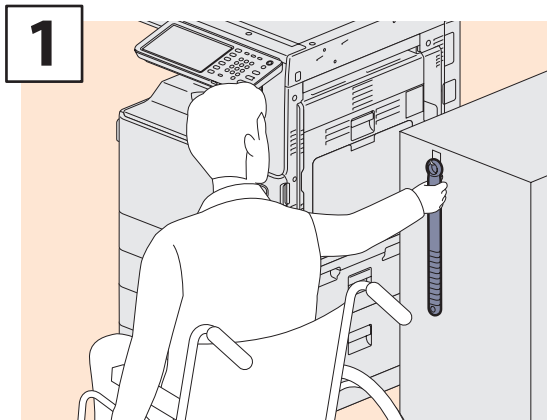

Hold the Accessible Arm.

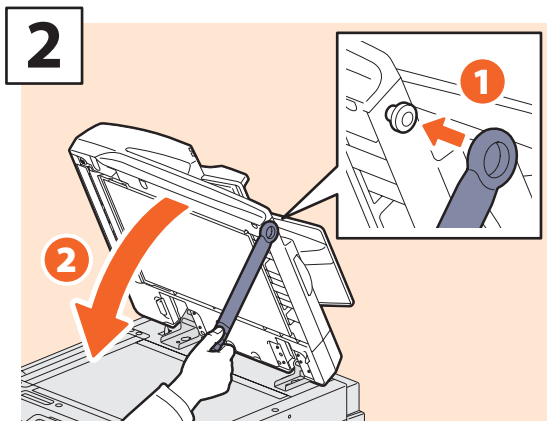

Hook the Accessible Arm on the right-hand side of the Reversing Automatic Document Feeder to close it.

Note

Do not store the Accessible Arm by attaching it on the equipment.

Logging in


When the equipment is controlled under department or user management, copying and other functions can be performed if you log in according to the following procedure.

Department management

You can restrict users or manage copy volumes made by an individual group or department in your company using the department codes. When the equipment is controlled under the department code, turn the power ON and enter the code.

When the power of the equipment is turned ON, the following menu appears.

This menu also appears when the [AUTHENTICATION] button on the control panel is pressed or the automatic function clear has worked.

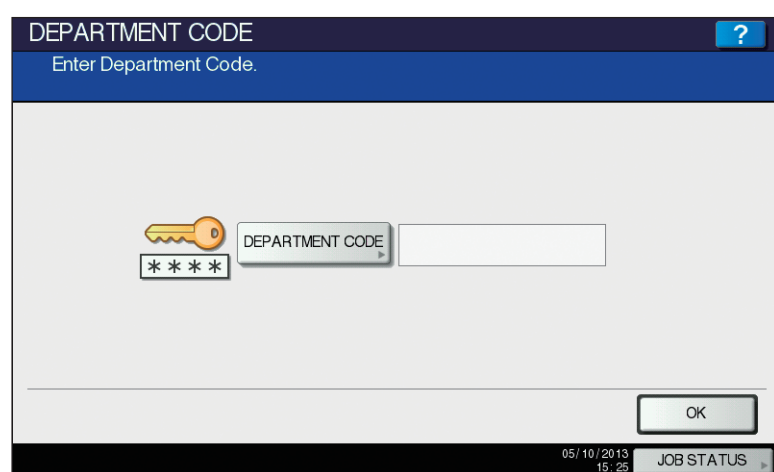

Tips

Automatic function clear:

- This function returns all settings to default without the need to press the [RESET] button on the control panel. It works when a specified period of time has passed since the last paper exit or the last entry of any button. When department or user management is being used, the display returns to the department code or user information input menu. When they are not being used, the display returns to the basic menu for the copying function.
- The period is set at 45 seconds by default at the time of installation of the equipment. To change the setting, refer to the following guide:
[MFP Management Guide \(PDF\): "Chapter 2: SETTING ITEMS \(ADMIN\)" - "Setting General Functions"](#)
- When connecting to equipment with department or user management enabled using client software, you may need to log in. For details, ask your administrator.

Key in a department code (max. 63 digits) previously registered and press [OK] on the touch panel. The menu will switch and the equipment will be ready for use.

If the department code keyed in is incorrect, the menu does not change. Key in the correct one.

After the operation

To prevent unauthorized use of the equipment, return the display to the department code input menu by following either of the procedures below after you finish all operations.

- Press the [AUTHENTICATION] button on the control panel.
- Press the [RESET] button on the control panel twice.

User management

You can restrict users or manage available functions and past records by means of user management. When the equipment is managed under this function, turn the power ON and enter the information required (e.g. user name, password). The menu for entering user information also appears when you press the [AUTHENTICATION] button on the control panel or automatic function clear has worked. Enter the information according to the procedure below.

Note

If you enter an invalid password several times, you may not log in for a certain period since it will be regarded as an unauthorized access.

When "User account is locked" or "User Name and Password are not recognized." appears and logging in cannot be performed, ask your administrator.

Tips

- If a guest user is enabled in the user management function, [GUEST] is displayed on the touch panel. Press [GUEST] to log in as a guest user. For the types of functions available, consult the administrator.

MFP local authentication


Windows Domain authentication

LDAP authentication

- When prompted for a PIN code, enter it (up to 32 digits) using the digital keys on the control panel. For details, ask your administrator.

1 The menu for user authentication appears.

MFP local authentication

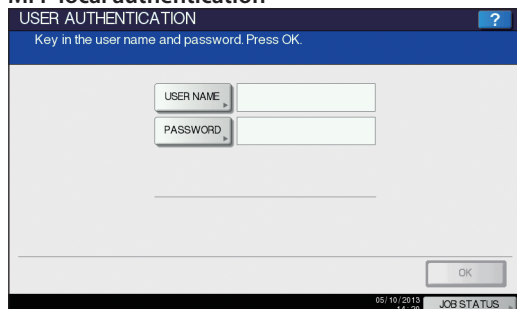


Windows Domain authentication, LDAP authentication



The domain name previously set by the network administrator is displayed in [DOMAIN]. For LDAP authentication, the LDAP server name is displayed in [LDAP] instead of [DOMAIN].

Tip

If the displayed domain name or LDAP server name is not yours, press  to select one belonging to you.

2 Press [USER NAME].




3 Enter the user name (maximum 128 letters) and then press [OK].




4 Press [PASSWORD].




5 Enter the password (maximum 64 letters) and then press [OK].

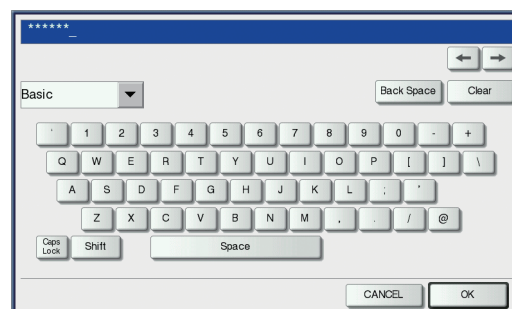

6 Press [OK].

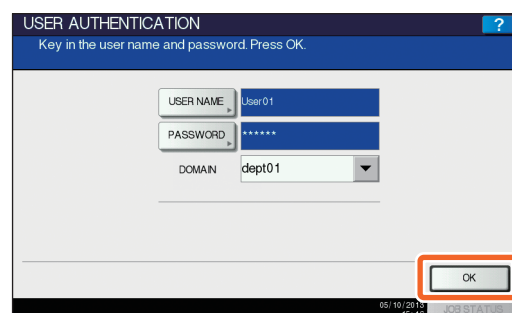

7 The equipment becomes being ready to perform copying and other functions.

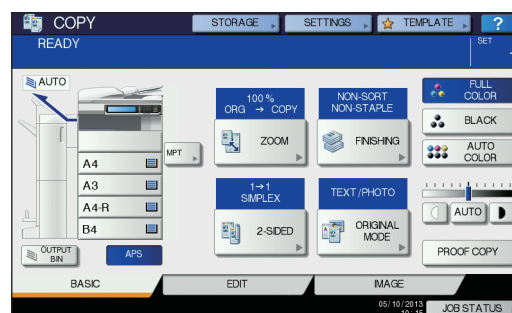

Specifications of Equipment

This section describes the types of acceptable paper, sheet capacity of each feeder and the specifications of the equipment.

Acceptable paper

| Feeder | Media type | Weight | Maximum sheet capacity | Paper size | |
|--|-----------------------|---|---|--|--|
| Tray, Paper Feed Pedestal, Additional Drawer Module *1 | PLAIN, RECYCLED PAPER | 60 - 105 g/m ² 17 - 28 lb. Bond | 600 sheets (64 g/m ² , 17 lb. Bond) 550 sheets (80 g/m ² , 20 lb. Bond) 500 sheets (81 - 105 g/m ² , 24 lb. Bond, 28 lb. Bond) | A/B format: A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, 305 mm x 457 mm *8, 320 mm x 450 mm *8,*15, 320 mm x 460 mm *8,*15 | |
| | THICK1 | 106 - 163 g/m ² - 90 lb. Index | 300 sheets | LT format: LD, LG, LT, LT-R, ST-R, COMP, 13"LG, 8.5"SQ, 12" x 18" *8 | |
| | THICK2 | 164 - 209 g/m ² - 110 lb. Index | 250 sheets | | |
| | THICK3 | 210 - 256 g/m ² - 140 lb. Index | 200 sheets | K format: 8K, 16K, 16K-R | |
| Large Capacity Feeder | PLAIN, RECYCLED PAPER | 64 - 105 g/m ² 17 - 28 lb. Bond | 2360 sheets (64 g/m ² , 17 lb. Bond) 2000 sheets (80 g/m ² , 20 lb. Bond) 1660 sheets (81 - 105 g/m ² , 21 - 28 lb. Bond) | A4, LT | |
| MPT | THIN PAPER *6,*12 | 52 - 59 g/m ² 14 - 16 lb. Bond | 1 sheet | A/B format: A3, A4, A4-R, A5-R, A6-R *6, B4, B5, B5-R, FOLIO, 305 mm x 457 mm *9, 320 mm x 450 mm *10,*11,*15, 320 mm x 460 mm *9,*11,*15 LT format: LD, LG, LT, LT-R, ST-R, COMP, 13"LG, 8.5"SQ, 12" x 18" *9 K format: 8K, 16K, 16K-R Non-Standard size: Length: 100 mm - 297 mm (3.9 - 11.7"), Width: 148 mm - 432 mm (5.8 - 17") | |
| | PLAIN, RECYCLED PAPER | 60 - 105 g/m ² 17 - 28 lb. Bond | 100 sheets (64 - 80 g/m ² , 17 - 20 lb. Bond) 80 sheets (81 - 105 g/m ² , 21 - 28 lb. Bond) | | |
| | THICK1 | 106 - 163 g/m ² - 90 lb. Index | 40 sheets | | |
| | THICK2 *2 | 164 - 209 g/m ² - 110 lb. Index | 30 sheets | | |
| | THICK3 | 210 - 256 g/m ² - 140 lb. Index | 30 sheets | | |
| | THICK4 *3,*4 | 257 - 280 g/m ² - 150 lb. Index | 30 sheets *6 | | |
| | SPECIAL1, SPECIAL2 *5 | 230 g/m ² | 30 sheets *7 | | |
| | SPECIAL3 *14 | 106 - 163 g/m ² - 90 lb. Index | 40 sheets | | |
| | TRANSPARENCY | — | 30 sheets *6 | | A3, A4, LD, LT |
| | ENVELOPE *6,*13 | — | 1 sheet | | DL (110 mm x 220 mm), COM10 (4 1/8" x 9 1/2"), Monarch (3 7/8" x 7 1/2") CHO-3: 120 mm x 235 mm (4.72" x 9.25") YOU-4: 105 mm x 235 mm (4.13" x 9.25") |
| TAB PAPER | — | — | A4, LT | | |

*1 To print on the back side of THICK1 to 3, use the MPT.

*2 For printing the sticker labels, select "THICK2" as the media type.

*3 Only the upper receiving tray of the Finisher, the upper receiving tray of the Saddle Stitch Finisher and the receiving tray of the equipment are available for paper exiting.

*4 When duplex copying is performed on THICK4, black streaks may appear on the copied image. They are highly visible on an image with high or uneven density.

*5 SPECIAL1 and SPECIAL2 represent "Waterproof paper".

*6 Automatic duplex copying is not available.

*7 For duplex copying, use waterproof paper for duplex copying.

*8 Can be placed in the second tray, Paper Feed Pedestal or the Additional Drawer Module.

*9 When the Finisher is installed, the receiving tray of the equipment is not available for paper exiting. The upper receiving tray of the installed Finisher or the upper receiving tray of the Saddle Stitch Finisher is available for paper exiting.

*10 If an optional finisher has been installed, the upper receiving tray of the Finisher, upper receiving tray of the Saddle Stitch Finisher and the receiving tray of the equipment are available for paper exiting.

*11 Note that black streaks may appear on the edge of the printed paper.

*12 When the Finisher or Saddle Stitch Finisher is installed, printed paper exits to the upper stacker of the Finisher.

*13 When the Finisher or Saddle Stitch Finisher is installed, paper exits to the receiving tray of the equipment. When the Inner Finisher is installed, paper exits to the receiving tray of the Finisher.

*14 SPECIAL3 refers to "coated paper". Contact your service technician or representative for details.

*15 Automatic duplex copying and printing are not available.

Paper only acceptable for printing functions

| Feeder | Media type | Weight | Maximum sheet capacity | Paper size |
|--------|------------|---|--------------------------|---------------------------------------|
| MPT | PLAIN | 90 - 105 g/m ² 24 - 28 lb. Bond | 1 sheet ^{*1,*2} | 305 mm x 1200 mm (12.00" x 47.24") |
| | THICK1 | 106 - 163 g/m ² - 90 lb. Index | | |

*1 Place the sheets one by one on the MPT.

*2 When the Finisher is installed, the receiving tray of the equipment is not available for paper exiting. The upper receiving tray of the installed Finisher, the upper receiving tray of the installed Saddle Stitch Finisher or upper receiving tray of the installed Inner Finisher is available for paper exiting.

Recommended paper for each media type

| Media Type | Oki recommendations/Manufacturer | Weight |
|----------------------------|---|--------------------------------------|
| PLAIN | A/B format: ColorCopy/mondi | 90 g/m ² , 24 lb. Bond |
| | LT format: Laser Print/Hammermill, Color Copy Paper/Hammermill | 100 g/m ² , 28 lb. Bond |
| THICK1 | A/B format: ColorCopy/mondi | 120 g/m ² , 32 lb. Bond |
| | LT format: Laser Print/Hammermill, Color Copy Paper/Hammermill | 160 g/m ² , 60 lb. Cover |
| THICK2 | A/B format: ColorCopy/mondi | 200 g/m ² |
| | A/B format: 3478/ZWECK-AVERY LT format: 5165/AVERY | — |
| THICK3 | A/B format: ColorCopy/mondi | 220 g/m ² , 80 lb. Cover |
| | LT format: Color Copy Cover/Hammermill | 250 g/m ² |
| THICK4 | A/B format: ColorCopy/mondi LT format: Color Copy Cover/Hammermill | 280 g/m ² , 100 lb. Cover |
| SPECIAL1 | A/B format: Water Proof Paper Duplex ^{*3,*4,*5} LT format: Weather Resistance Paper ^{*3,*4,*5} | 230 g/m ² |
| SPECIAL2 | AquaAce ^{*5} | 230 g/m ² |
| TRANSPARENCY ^{*1} | A/B format: BG72/FOLEX LT format: CG3700/3M | — |
| ENVELOPE ^{*2} | COM10/Westvaco Columbian CO138/Westvaco Monarch/Mailwell No.553/Mailwell | — |

*1 Only Oki-recommended OHP film should be used. Using any other film may cause a malfunction.

*2 Printing on the back side of an envelope is possible only when the envelope is not a self-sealing envelope.

*3 This type of paper is available for automatic duplex copying (A4/LT or smaller sizes are recommended).

*4 Place the sheets one by one on the MPT.

*5 When copy paper is exiting, remove it every time about 10 sheets have accumulated on the receiving tray or the tray of the Finisher.

ES9465 MFP/ES9475 MFP Specifications


| | | |
|---|--|---|
| Model name | | ES9465 MFP/ES9475 MFP |
| Type | | Desktop type |
| Original glass | | Fixed |
| Printing (copying) system | | Indirect electrophotographic method |
| Developing system | | 2-component magnetic brush developing |
| Fixing method | | External IH belt fusing |
| Photosensor type | | OPC |
| Original scanning system | | Flat surface scanning system (When the Reversing Automatic Document Feeder is installed: Fixed scanning system by feeding the original) |
| Original scanning sensor | | Linear CCD sensor |
| Scanning light source | | LED |
| Resolution | Scanning | 600 dpi x 600 dpi |
| | Writing | Color and black-and-white (grayscale): 600 dpi x 600 dpi, 5 bits |
| Acceptable originals | | Sheets, books |
| Acceptable original size | | Max. A3 or LD |
| Acceptable copy paper size | Tray | A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, 320 mm x 450 mm, 320 mm x 460 mm, LD, LG, LT, LT-R, ST-R, COMP, 13"LG, 8.5"SQ, 8K, 16K, 16K-R |
| | MPT | Paper size within 100 mm - 320 mm (5.5" - 12.6") (length), 148 mm - 460 mm (8.5" - 18.1") (width) (For printing functions, within 461 mm - 1200 mm (18.15" - 47.24") (length) *) |
| Acceptable copy paper weight | Tray | 60 - 256 g/m ² (16 lb. Bond - 80 lb. Cover (140 lb. Index)) |
| | MPT | 52 - 280 g/m ² (14 lb. Bond - 100 lb. Cover (150 lb. Index)) |
| Warm-up time | | Approx. 27 seconds |
| First copy time (A4 or LT portrait) | Black-and-white | ES9465 MFP: 6.4 seconds ES9475 MFP: 4.7 seconds |
| | Color | ES9465 MFP: 8.1 seconds ES9475 MFP: 6.1 seconds |
| Continuous copy speed | | Refer to the <i>Copying Guide</i> . |
| Multiple copying | | Up to 999 sheets (digital key entry) |
| Excluded image width | Black-and-white | Leading edge: 4.2 mm +2.8 mm - 1.2 mm (0.17" +0.11" -0.05"), Trailing edge: 3.0 mm ±2.0 mm (0.12"±0.08"), Both edges: 2.0 mm ±2.0 mm (0.08"±0.08") |
| | Color | Leading edge: 5.0 mm +2.0 mm (0.20"±0.08"), Trailing edge: 3.0 mm ±2.0 mm (0.12"±0.08"), Both edges: 2.0 mm ±2.0 mm (0.08"±0.08") |
| | Printer (Black-and-white/Color) | Leading edge: 4.2 mm +2.8 mm - 1.2 mm (0.17" +0.11" -0.05"), Trailing edge: 4.2 mm +1.2 mm -2.8 mm (0.17" +0.05" -0.11"), Both edges: 4.2 mm ±2.0 mm (0.08"±0.08") |
| Reproduction ratio | Actual size | 100±0.5% |
| | Zoom | 25 - 400% (in 1% increments) For the Reversing Automatic Document Feeder 25 - 200% (in 1% increments) |
| Paper supply | Tray | Approx. 550 sheets (80 g/m ² , 20 lb. Bond) |
| | MPT | Approx. 100 sheets (80 g/m ² , 20 lb. Bond) |
| Stacker loading capacity | | Approx. 400 sheets (80 g/m ² , 20 lb. Bond) |
| Toner density adjustment | | Magnetic auto-toner system + Pixel count system |
| Exposure control | | Automatic plus manual selection from 11 exposure step |
| USB interface | | USB 2.0 (Hi-Speed) |
| Environment (for normal use) | | Temperature: 10 ° - 30 °C (50 ° - 86 °F), Humidity: 20 - 85% (No Condensation) |
| Power requirements and Power consumption (including optional equipments) | | AC 220-240 V±10%, 8 A (50/60 Hz): 1.6 kW or less AC 120 V±10%, 12 A (50/60 Hz): 1.5 kW or less |
| Dimensions (equipment only) | | 585 mm (23.0") (W) x 644 mm (25.4") (D) x 787 mm (31.0") (H) (At 90 degrees of the control panel angle) 585 mm (23.0") (W) x 762 mm (30.0") (D) x 787 mm (31.0") (H) (At 7 degrees of the control panel angle) |
| Weight | | Approx. 80 kg (176.4 lb.) (equipment including developer and drum) |
| Space occupied (equipment only) | | 973 mm (38.3") (W) x 806 mm (31.7") (D) (At 7 degrees of the control panel angle) |
| Storage capacity | | Max. 1000 sheets or until the memory is full (Okī's own chart) |

* This specification varies depending on the printing conditions and the environment.

* Specifications and appearance are subject to change without notice in the interest of product improvement.

*1 Sheets of paper longer than 461 mm (18.15") are printed in 300 dpi resolution.

Specifications of Options

This section describes the specifications of the options sold separately. For details other than the specifications, see  P.68 "Options" in this manual.

Reversing Automatic Document Feeder

| | |
|---------------------------------------|---|
| Model name | MR-3025 |
| Copy sides | 1-side, Duplex |
| Number of originals (A4 or LT) | 100 originals (35 - 80 g/m ² , 9.3 - 20 lb. Bond) or 16 mm/0.63" or less in height (more than 80 g/m ² , 20 lb. Bond) |
| Feeding speed | 50 sheets/min. (600 dpi) |
| Acceptable originals | A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, ST-R, COMP (A5 and ST size are not acceptable.) |
| Paper weight | 1-sided original: 35 - 157 g/m ² , 9.3 - 41.8 lb., 2-sided original: 50 - 157 g/m ² , 13.3 - 41.8 lb. |
| Power source | DC 5V, DC 54V (supplied from the equipment) |
| Dimensions | 575 mm (22.6") (W) x 531 mm (20.9") (D) x 135 mm (5.3") (H) |
| Weight | Approx. 11 kg (24.3 lb.) |
| Power consumption | 49.5 W max. |

Large Capacity Feeder

| | |
|------------------------------|--|
| Model name | KD-1031 |
| Acceptable paper size | A4 or LT |
| Paper weight | 64 - 105 g/m ² , 17-28 lb. Bond |
| Maximum capacity | 2000 sheets (80 g/m ² , 20 lb. Bond) (Height: approx. 110 mm or 4.3" x 2) |
| Power source | DC 5 V, DC 24 V (supplied from the equipment) |
| Dimensions | 668 mm (26.3") (W) x 735 mm (28.9") (D) x 292 mm (11.5") (H) (incl. Stabilizer) |
| Weight | Approx. 26 kg (57.3 lb.) |

Paper Feed Pedestal (1 tray type)

| | |
|------------------------------|---|
| Model name | KD-1032 |
| Acceptable paper size | A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, 320 mm x 450 mm, 320 mm x 460 mm, LD, LG, LT, LT-R, ST-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R (A5, ST and non-standard size are not acceptable.) |
| Paper weight | 60 - 256 g/m ² (16 lb. Bond - 80 lb. Bond, -140 lb. Index) |
| Maximum capacity | 550 sheets (80 g/m ² , 20 lb. Bond) |
| Power source | DC 5 V, DC 24 V (supplied from the equipment) |
| Dimensions | 668 mm (26.3") (W) x 701 mm (27.6") (D) x 292 mm (11.5") (H) (incl. Stabilizer) |
| Weight | Approx. 16.3 kg (35.9 lb.) |

Additional Drawer Module

| | |
|------------------------------|---|
| Model name | MY-1039 |
| Acceptable paper size | A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, ST-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R (A5, ST and non-standard size are not acceptable.) |
| Paper weight | 60 - 256 g/m ² (16 lb. Bond - 80 lb. Bond, -140 lb. Index) |
| Maximum capacity | 550 sheets (80 g/m ² , 20 lb. Bond), 500 sheets (105 g/m ² , 24 or 28 lb. Bond) |
| Weight | Approx. 3.5 kg (7.7 lb.) |

Finisher

| | | | | |
|---|--|--|--|---|
| Model name | MJ-1107 | | | |
| Type | Floor type (Console type) | | | |
| Acceptable paper size | A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, 305 mm x 457 mm, 320 mm x 450 mm, 320 mm x 460 mm, LD, LG, LT, LT-R, ST-R, COMP, 8.5"SQ, 13"LG, 12" x 18", 8K, 16K, 16K-R | | | |
| Acceptable paper weight | 52 - 280 g/m ² , 17 lb. Bond - 150 lb. Index | | | |
| Number of sheets stapled at a time (Including 2 covers (60-256 g/m², 16 lb. Bond to 140 lb. Index)) | Paper size | 60 - 80 g/m ² 16 - 20 lb. Bond | 81 - 90 g/m ² 21 - 24 lb. Bond | 91 - 105 g/m ² 25 - 28 lb. Bond |
| | A4, B5, LT, 8.5"SQ, 16K | 50 sheets | 50 sheets | 30 sheets |
| | A3, A4-R, B4, FOLIO, LD, LG, LT-R, COMP, 13"LG, 8K | 30 sheets | 30 sheets | 15 sheets |
| Stapling position | Front, Rear, Double | | | |
| Power source | Supplied from the equipment | | | |
| Dimensions | 535 mm (21.4") (W) x 598 mm (23.92") (D) x 1092 mm (43.68") (H) | | | |
| Weight | Approx. 34 kg (74.8 lb.) | | | |
| Power consumption | 70 W max. | | | |

Tray loading capacity of Finisher

Unit: mm (with allowable error of ±7 mm or 0.276")
 Values in parentheses: Number of sheets (80 g/m² or 20 lb. Bond)

Stacker (Upper)

| MJ-1101 with mixed paper not loaded | |
|---|--------------------------|
| Mode | Non-Sort |
| A4, A5-R, B5, LT, ST-R, 8.5"SQ, 16K | 36.75 mm, 1.45" (250) |
| A3, A4-R, B4, B5-R, FOLIO, 305 mm x 457 mm, LD, LG, LT-R, COMP, 13"LG, 12" x 18", 8K, 16K-R | 18.4 mm, 0.72" (125) |

Stacker

| MJ-1101 with mixed paper not loaded | | | |
|--|-------------------------|-------------------------|--|
| Mode | Non-Sort | Sort/Group | Staples loaded |
| A4, B5, LT, 8.5"SQ, 16K | 250 mm, 9.84" (2000) | 250 mm, 9.84" (2000) | Whichever of 250 mm (9.84"), 2000 sheets or 30 sets is reached first |
| A3, A4-R, B4, FOLIO, LD, LG, LT-R, COMP, 13"LG, 8K | 140 mm, 5.51" (1000) | 140 mm, 5.51" (1000) | Whichever of 140 mm (5.51"), 1000 sheets or 30 sets is reached first |

When mixed-size paper is loaded, the tray loading capacity should follow the specifications for larger paper sizes in the above tables.

Saddle Stitch Finisher

| | | | | |
|---|--|------------------------------------|------------------------------------|-------------------------------------|
| Model name | MJ-1108 | | | |
| Type | Floor type (Console type) | | | |
| Acceptable paper size | A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, 305 mm x 457 mm, 320 mm x 450 mm, 320 mm x 460 mm, LD, LG, LT, LT-R, ST-R, COMP, 8.5"SQ, 13"LG, 12" x 18", 8K, 16K, 16K-R | | | |
| Acceptable paper weight | 52 - 280 g/m ² (14 lb. Bond - 150 lb. Index) | | | |
| Number of sheets stapled at a time (including 2 covers (60 - 256 g/m², 16 lb. Bond to 140 lb. Index)) | Paper size | 80 g/m ² 20 lb. Bond | 90 g/m ² 24 lb. Bond | 105 g/m ² 28 lb. Bond |
| | A4, B5, LT, 8.5"SQ, 16K | 50 sheets | 50 sheets | 30 sheets |
| | A3, A4-R, B4, FOLIO, LD, LG, LT-R, COMP, 13"LG, 8K | 30 sheets | 30 sheets | 15 sheets |
| Stapling position | Front, Rear, Double | | | |
| Number of sheets saddle stitched at a time | Paper size | 80 g/m ² 20 lb. Bond | 90 g/m ² 24 lb. Bond | 105 g/m ² 28 lb. Bond |
| | A3, B4, A4-R, LD, LG, LT-R, 8K | 15 sheets | 15 sheets | 10 sheets |
| Number of sheets center-folded at a time | Paper size | 80 g/m ² 20 lb. Bond | 90 g/m ² 24 lb. Bond | 105 g/m ² 28 lb. Bond |
| | A3, B4, A4-R, LD, LG, LT-R, 8K | 5 sheets | 5 sheets | 5 sheets |
| Power source | Supplied from the equipment | | | |
| Dimensions | 617 mm (24.29") (W) x 603 mm (23.74") (D) x 1085 mm (42.72") (H) | | | |
| Weight | Approx. 70 kg (154.3 lb.) | | | |
| Power consumption | 100 W max. | | | |

Tray loading capacity of Saddle Stitch Finisher

Unit: mm (with allowable error of ±7 mm or 0.28")

Values in parentheses: Number of sheets (80 g/m² or 20 lb. Bond)

Stacker (Upper)

| With mixed paper not loaded | |
|---|-------------------|
| Mode | Non-Sort |
| A4, A5-R, B5, LT, ST-R, 8.5"SQ, 16K | 36.75 mm (250) |
| A3, A4-R, B4, B5-R, FOLIO, 305 mm x 457 mm, 320 mm x 450 mm, 320 mm x 460 mm, LD, LG, LT-R, COMP, 13"LG, 12"x18", 8K, 16K-R | 18.4 mm (125) |

Stacker

| With mixed paper not loaded | | | | |
|--|------------------|------------------|---|---|
| Mode | Non-sort | Sort/Group | Front/Rear Single Position Stapling | Two Positions Stapling |
| A4, B5, LT, 8.5"SQ, 16K | 350 mm (3000) | 350 mm (3000) | Whichever of 100 sets or 2000 sheets is reached first | Whichever of 150 sets or 2000 sheets is reached first |
| A3, A4-R, B4, FOLIO, 305 mm x 457 mm, LD, LG, LT-R, COMP, 13"LG, 12" x 18", 8K | 175 mm (1500) | 175 mm (1500) | Whichever of 50 sets or 1000 sheets is reached first | Whichever of 75 sets or 1000 sheets is reached first |

- When mixed-size paper is loaded, the tray loading capacity should follow the specifications for larger paper sizes in the above tables.
- For the loading capacity of the saddle stitch tray, refer to the following guide:
 - 📄 **Copying Guide** (PDF): "Chapter 3: BASIC COPY MODES" - "Selecting Finishing Mode"

Inner Finisher

| | | | | |
|---|---|--|--|---|
| Model name | MJ-1036 | | | |
| Type | Inner Finisher | | | |
| Acceptable paper size | A3, A4, A4-R, A5-R, A6-R, B4, B5, B5-R, FOLIO, 305 mm x 457 mm, 320 mm x 450 mm, 320 mm x 460 mm, CHO-3 (120 mm x 235 mm), YOU-4 (105 mm x 235 mm), LD, LG, LT, LT-R, ST-R, COMP, 8.5"SQ, DL (110 mm x 220 mm), COM10 (4 1/8" x 9 1/2"), Monarch (3 7/8" x 7 1/2"), 13"LG, 8K, 16K, 16K-R | | | |
| Acceptable paper weight | 52 - 280 g/m ² , 16 lb. Bond - 150 lb. Index | | | |
| Number of sheets stapled at a time (Including 2 covers (106 - 256 g/m², 29 lb. Bond - 140 lb. Index)) | Paper size | 60 - 80 g/m ² , 16 - 20 lb. Bond | 81 - 90 g/m ² , 21 - 24 lb. Bond | 91 - 105 g/m ² , 25 - 28 lb. Bond |
| | A4, A4-R, B5, B5-R, LT, LT-R, 8.5" SQ, 16K, 16K-R | 50 sheets | 50 sheets | 30 sheets |
| | A3, B4, FOLIO, LD, LG, COMP, 13" LG, 8K | 30 sheets | 30 sheets | 15 sheets |
| Stapling position | Front, Rear, Double | | | |
| Power source | Supplied from the equipment | | | |
| Dimensions | 481.6 mm (18.96") (W) x 507.5 mm (19.98") (D) x 232.1 mm (9.14") (H) (When the sub-tray is retracted) | | | |
| Weight | Approx. 15.3 kg (33.7 lb.) | | | |
| Power consumption | 53 W max. | | | |

Tray loading capacity of Inner Finisher

Upper Receiving Tray

Unit: mm (with allowable error of ±4 mm or 0.158")
Values in parentheses: Number of sheets (80 g/m² or 20 lb. Bond)

| (MJ-1032 with mixed paper not loaded) | |
|--|-----------------------|
| Mode | Non-Sort |
| A4, A4-R, B5, B5-R, A5-R, LT, LT-R, ST-R, 8.5"SQ, 16k, 16K-R | 14 mm, 0.55" (100) |
| A3, B4, FOLIO, LD, LG, COMP, 13"LG, 8K | 7 mm, 0.28" (50) |

Lower Receiving Tray

| (MJ-1032 with mixed paper not loaded) | | | |
|--|-----------------------|-----------------------|--|
| Mode | Non-Sort | Sort | Stapled |
| A4, A4-R, B5, B5-R, A5-R, LT, LT-R, ST-R, 8.5"SQ, 16k, 16K-R | 73 mm, 2.87" (500) | 73 mm, 2.87" (500) | Whichever of 73 mm (2.87"), 500 sheets or 50 sets is reached first |
| A3, B4, FOLIO, LD, LG, COMP, 13"LG, 8K | 36 mm, 1.42" (250) | 36 mm, 1.42" (250) | Whichever of 36 mm (1.42"), 250 sheets or 25 sets is reached first |

When mixed-size paper is loaded, the tray loading capacity should follow the specifications for larger paper sizes in the above tables.

Job Separator

| | | |
|--------------------------------|-----------------------------|---|
| Model name | MJ-5006 | |
| Acceptable paper size | Standard size | A3, A4, A4-R, A5-R ^{*1} , A6-R ^{*2} , B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, ST-R ^{*1} , COMP, 13"LG, 8.5"SQ, 8K, 16K, 16K-R ^{*1} |
| | Non-Standard size | Length: 100 mm - 297 mm (3.9 - 11.7"), Width: 148 mm - 432 mm (5.8 - 17") ^{*1} |
| Acceptable paper weight | Upper stacker | 52 - 105 g/m ² , 14 - 28 lb. Bond |
| | Lower stacker | 52 - 280 g/m ² , 14 lb. Bond - 150 lb. Index |
| Loading capacity | Upper stacker | 25 mm, 0.98" (150 sheets) ^{*3} |
| | Lower stacker | 40 mm, 1.57" (250 sheets) ^{*3} |
| Power source | Supplied from the equipment | |
| Weight | Approx. 1.5 kg (3.3 lb.) | |

*1 The upper stacker is used for paper exiting.

*2 The lower stacker is used for paper exiting.

*3 The value in the parentheses is the number of 80 g/m² or 20 lb. Bond sheets.

Hole Punch Unit

| | |
|--------------------------------|--|
| Model name | MJ-6104 Series |
| Acceptable paper size | A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R |
| Acceptable paper weight | 60 - 256 g/m ² , 16 lb. Bond - 140 lb. Index (OHP film and specially treated paper are not available.) |
| Dimensions | 112 mm (4.41") (W) x 573 mm (22.56") (D) x 323 mm (12.72") (H) (excl. Lower cover) |
| Weight | Approx. 7 kg (15.4 lb.) |

| | Number of punching holes and hole diameter | Available paper size |
|-------------------------------------|---|--|
| Japan and most of Europe (MJ-6104E) | 2 holes (6.5 mm or 0.26" dia.) | A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R |
| North America (MJ-6104N) | 2/3 holes switchable (8.0 mm or 0.32" dia.) | 2 holes: A4-R, LG, LT-R, COMP, 8.5"SQ, 13"LG, B4, B5, B5-R, FOLIO, 16K-R 3 holes: A3, A4, LD, LT, 8K, 16K |
| France (MJ-6104F) | 4 holes (6.5 mm or 0.26" dia.; 80 mm or 3.15" pitch) | A3, A4, LD, LT, 8K, 16K |
| Sweden (MJ-6104S) | 4 holes (6.5 mm or 0.26" dia.; 70 mm and 21 mm or 2.76" and 0.83" pitch) | A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R |

Hole Punch Unit

| | |
|--------------------------------|--|
| Model name | MJ-6007 Series |
| Acceptable paper size | A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, COMP, 8.5" SQ, 13"LG, 8K, 16K, 16K-R |
| Acceptable paper weight | 60 - 128 g/m ² , 16 lb. Bond - 34 lb. Bond (OHP film and specially treated paper are not available.) |
| Weight | Approx. 3.3 kg (7.3 lb.) |

| | Number of punching holes and hole diameter | Available paper size |
|-------------------------------------|---|--|
| Japan and most of Europe (MJ-6007E) | 2 holes (6.5 mm or 0.26" dia.) | A3, A4, A4-R, B4, B5, B5-R, FOLIO, LT, LT-R, LD, LG, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R |
| North America (MJ-6007N) | 2/3 holes switchable (8.0 mm or 0.32" dia.) | 2 holes: A4-R, B4, B5, B5-R, FOLIO, LG, LT-R, COMP, 8.5"SQ, 13"LG, 16K-R 3 holes: A3, A4, LD, LT, 8K, 16K |
| France (MJ-6007F) | 4 holes (6.5 mm or 0.26" dia.; 80 mm or 3.15" pitch) | A3, A4, LD, LT, 8K, 16K |
| Sweden (MJ-6007S) | 4 holes (6.5 mm or 0.26" dia.; 70 mm and 21 mm or 2.76" and 0.83" pitch) | A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R |

Bridge Unit

| | |
|-------------------|---------|
| Model name | KN-2550 |
|-------------------|---------|

FAX Unit

| | |
|--|---|
| Model Name | GD-1320 |
| Size of Original | A3, A4, A4-R, A5, A5-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, ST, ST-R, COMP |
| Recording Paper Size | 297 mm x 420 mm (A3), 210 mm x 297 mm (A4), 148 mm x 210 mm (A5), 257 mm x 364 mm (B4), 182 mm x 257 mm (B5), 210 mm x 330 mm (FOLIO), 11" x 17" (LD), 8.5" x 14" (LG), 8.5" x 11" (LT), 5.5" x 8.5" (ST), 0. 1/8" x 14" (COMP) |
| Compatibility Communication Modes | Exclusive Mode, ECM, G3 |
| Communication Resolution | Horizontal: 8 dots/mm, 16 dots/mm, 300 dots/inch Vertical: 3.85 lines/mm, 7.7 lines/mm, 15.4 lines/mm, 300 dpi |
| Transmission Rate | 33,600/31,200/28,800/26,400/24,000/21,600/19,200/16,800/14,400/12,000/9,600/7,200/4,800/2,400 bps |
| Encoding Systems | JBIG/MMR/MR/MH |
| Memory Capacity | Transmission/Reception: 1 GB (HDD) *1 |
| Unit Type | Desktop type, transmitting/receiving dual type |
| Applicable Network | Public Switched Telephone Network (PSTN) |

*1 For hard drives, MB means 1 million bytes.
(Total HDD accessible capacity may vary depending on operating environment.)

For details of the FAX Unit (GD-1320), refer to the following guide:

 *GD-1320/GD-1260 Operator's Manual for FAX Unit: "Chapter 1: BEFORE USING FAX"*

Oki-recommended paper is used for the values above. Specifications and appearance are subject to change without notice in the interest of product improvement.

INDEX

A,B

| | |
|--|--------|
| Acceptable paper | 74 |
| Additional Drawer Module | 77 |
| Adjusting the angle of the control panel | 9 |
| Alert message indication area | 10 |
| ATTENTION lamp | 7, 8 |
| [AUTHENTICATION] button | 8 |
| Automatic duplexing unit | 6 |
| Bridge Unit | 68, 81 |

C,D

| | |
|---|------------|
| Charger cleaner | 6 |
| [CLEAR] button | 8 |
| Client Software | 66 |
| Client Utilities/User Documentation DVD | 65 |
| Control panel | 7, 8 |
| [COPY] button | 8 |
| Copying | 24, 55, 56 |
| [COUNTER] button | 8 |
| DATA IN MEMORY lamps | 8 |
| DATA lamp | 8 |
| Date and time | 10 |
| Department management | 71 |
| Description of Each Component | 6 |
| Digital keys | 8 |
| Document lamp | 7 |

E,F

| | |
|---------------------|--------|
| e-Filing | 34, 60 |
| Error codes | 52 |
| [EXTENSION] button | 38 |
| [FAX] button | 9 |
| Faxing | 28, 57 |
| FAX Unit | 69, 82 |
| [Filing Box] button | 9 |
| Finisher | 78 |
| Front cover | 6 |
| Function display | 10 |

H,I

| | |
|--------------------------------|--------|
| [?] (HELP) button | 10 |
| Hole Punch Unit | 81 |
| Inner Finisher | 68, 80 |
| [INTERRUPT] button | 8 |
| Items Included in This Product | 64 |

J,L

| | |
|------------------------|-----------|
| Job Separator | 68, 80 |
| [JOB STATUS] button | 10 |
| Large Capacity Feeder | 6, 68, 77 |
| LED print head cleaner | 7 |

M,N

| | |
|-----------------------------|----|
| Main charger cleaners | 7 |
| MAIN POWER lamp | 8 |
| Main power switch | 7 |
| Menu | 38 |
| [MENU] button | 8 |
| Message indication area | 10 |
| MPT | 6 |
| Network interface connector | 6 |

O,P

| | |
|--------------------------|-----------|
| Operator's Manual Pocket | 6 |
| Options | 68 |
| Original Cover | 68 |
| Original glass | 7 |
| Original scale | 7 |
| Paper exit stopper | 7 |
| Paper feed cover | 6 |
| Paper Feed Pedestal | 6, 68, 77 |
| Paper size indicator | 6 |
| Placing paper | 15 |
| Platen sheet | 7 |
| [POWER] button | 8 |
| [POWER SAVE] button | 8 |
| power saving mode | 14 |
| [PRINT] button | 9 |
| Printing | 36, 61 |

R,S

| | |
|-------------------------------------|----------------|
| Recommended paper | 75 |
| Regular Cleaning | 47 |
| Replacing Staple Cartridge | 42 |
| Replacing Toner Cartridge | 40 |
| Replacing Waste Toner Box | 41 |
| [RESET] button | 8 |
| Reversing Automatic Document Feeder | 6, 68, 77 |
| Role Information Displayed Area | 38 |
| Saddle Stitch Finisher | 79 |
| [SCAN] button | 8 |
| Scanning | 32, 56, 58, 59 |
| Scanning area | 7 |
| [SETTING] button | 8 |
| Setting letters | 11 |
| Shutdown | 13 |
| Software DVD-ROM | 65 |
| Specifications | 76 |
| Specifications of Options | 77 |
| Stacker | 7 |
| [START] button | 8 |
| [STOP] button | 8 |
| Symbols | 50 |

T,U,W

| | |
|------------------------|----------|
| Toner Cartridge | 40 |
| Touch panel | 7, 9, 10 |
| Tray | 6 |
| Turning the power OFF | 13 |
| Turning the power ON | 12 |
| USB port | 6 |
| USB terminal | 6 |
| User management | 72 |
| User name display area | 38 |
| Waste toner box | 7 |

Oki contact details

Oki Systems (UK) Ltd

Blays House
Wick Road
Egham
Surrey
TW20 0HJ

Tel: +44 (0) 1784 274300
Fax: +44 (0) 1784 274301
<http://www.oki.co.uk>

Oki Systems Ireland Limited

The Square Industrial Complex
Tallaght
Dublin 24

Tel:+353 (0) 1 4049590
Fax:+353 (0)1 4049591
<http://www.oki.ie>

Oki Systems Ireland Limited - Northern Ireland

19 Ferndale Avenue
Glengormley
BT36 5AL
Northern Ireland

Tel:+44 (0) 7767 271447
Fax:+44 (0) 1 404 9520
<http://www.oki.ie>

Technical Support for all Ireland:

Tel:+353 1 4049570
Fax:+353 1 4049555
E-mail: tech.support@oki.ie

Oki Systems (Czech and Slovak), s.r.o.

IBC – Pobřežní 3
186 00 Praha 8
Czech Republic

Tel: +420 224 890158
Fax:+420 22 232 6621
Website: www.oki.cz, www.oki.sk

Oki Systems (Deutschland) GmbH

Hansaallee 187
40549 Düsseldorf

Tel: 01805/6544357**
01805/OKIHELP**
Fax: +49 (0) 211 59 33 45
Website:
www.okiprintingsolutions.de
info@oki.de

**0,14€/Minute aus dem dt.
Festnetz der T-Com (Stand
11.2008)

Διανομέας των συστημάτων OKI

CPI S.A1 Rafailidou str.
177 78 Tavros
Athens
Greece

Tel: +30 210 48 05 800
Fax:+30 210 48 05 801
EMail:sales@cpigr

Oki Systèmes (France) S.A.

44-50 Av. du Général de Gaulle
94246 L'Hay les Roses
Paris

Tel:+33 01 46 15 80 00
Télécopie:+33 01 46 15 80 60
Website: www.oki.fr

Oki Systems (Magyarország) Kft.

Capital Square
Tower 2
7th Floor
H-1133 Budapest,
Váci út 76
Hungary

Telefon: +36 1 814 8000
Telefax: +36 1 814 8009
Website: www.okihu.hu

Oki Systems (Italia) S.p.A.

via Milano, 11,
20084 Lacchiarella (MI)

Tel:+39 (0) 2 900261
Fax:+39 (0) 2 90026344
Website: www.oki.it

Oki Printing Solutions

Platinum Business Park II, 3rd
Floor
ul. Domaniewska 42
02-672 Warsaw
Poland

Tel:+48 22 448 65 00
Fax:+48 22 448 65 01
Website: www.oki.com.pl
E-mail: oki@oki.com.pl
Hotline: 0800 120066
E-mail: tech@oki.com.pl

Oki Systems (Ibérica) S.A.

Sucursal Portugal
Edifício Prime -
Av. Quinta Grande 53
7º C Alfragide
2614-521 Amadora
Portugal

Tel:+351 21 470 4200
Fax:+351 21 470 4201
Website:www.oki.pt
E-mail : oki@oki.pt

Oki Service Serviço de apoio técnico ao Cliente

Tel: 808 200 197
E-mail : okiserv@oki.pt

OKI Europe Ltd. (Russia)

Office 702, Bldg 1
Zagorodnoye shosse
117152, Moscow

Tel: +74 095 258 6065
Fax: +74 095 258 6070
e-mail: info@oki.ru
Website: www.oki.ru

Technical support:

Tel: +7 495 564 8421
e-mail: tech@oki.ru

Oki Systems (Österreich)

Campus 21
Businesszentrum Wien Sued
Liebermannstrasse A02 603
22345 Brun am Gebirge

Tel: +43 223 6677 110
Drucker Support:
+43 (0) 2236 677110-501
Fax Support:
+43 (0) 2236 677110-502
Website: www.oki.at

OKI Europe Ltd. (Ukraine)

Raisy Opkinoy Street,8
Building B, 2nd Floor,
Kiev 02002
Ukraine

Tel: +380 44 537 5288
e-mail: info@oki.ua
Website: www.oki.ua

OKI Sistem ve Yazıcı Çözümleri Tic. Ltd. Şti.

Harman sok Duran Is Merkezi,
No:4, Kat:6,
34394, Levent
İstanbul

Tel: +90 212 279 2393
Faks: +90 212 279 2366
Web: www.oki.com.tr
www.okiprintingsolutions.com.tr

Oki Systems (Belgium)

Medialaan 24
1800 Vilvoorde

Helpdesk: 02-2574620
Fax: 02 2531848
Website: www.oki.be

AlphaLink Bulgaria Ltd.

2 Kukush Str.
Building "Antim Tower", fl. 6
1463 Sofia, Bulgaria

tel: +359 2 821 1160
fax: +359 2 821 1193
Website: <http://bulgaria.oki.com>

OKI Printing Solutions

Herstedøstervej 27
2620 Albertslund
Danmark

Adm.: +45 43 66 65 00
Hotline: +45 43 66 65 40
Salg: +45 43 66 65 30
Fax: +45 43 66 65 90
Website: www.oki.dk

Oki Systems (Finland) Oy

Polaris Capella
Vänrikinkuja 3
02600 Espoo

Tel: +358 (0) 207 900 800
Fax: +358 (0) 207 900 809
Website: www.oki.fi

Oki Systems (Holland) b.v.

Neptunstraat 27-29
2132 JA Hoofddorp

Helpdesk: 0800 5667654
Tel:+31 (0) 23 55 63 740
Fax:+31 (0) 23 55 63 750
Website: www.oki.nl

Oki Systems (Norway) AS

Tevlingveien 23
N-1081 Oslo

Tel:+47 (0) 63 89 36 00
Telefax:+47 (0) 63 89 36 01
Ordrefax:+47 (0) 63 89 36 02
Website: www.oki.no

General Systems S.R.L. (Romania)

Sos. Bucuresti-Ploiesti Nr. 135.
Bucharest 1
Romania

Tel: +40 21 303 3138
Fax: +40 21303 3150
Website: http://romania.oki.com

Var vänlig kontakta din
Återförsäljare i första hand, för
konsultation. I andra hand kontakta

Oki Systems (Sweden) AB

Borgafjordsgatan 7
Box 1191
164 26 Kista

Tel. +46 (0) 8 634 37 00
e-mail:
info@oki.se för allmänna frågor om
Oki produkter

support@oki.se för teknisk support
gällandes Oki produkter

Vardagar: 08.30 - 12.00,
13.00 - 16.00
Website: www.oki.se

Oki Systems (Schweiz)

Baslerstrasse 15
CH-4310 Rheinfelden

Support deutsch +41 61 827 94 81
Support français +41 61 827 94 82
Support italiano +41 061 827 9473
Tel: +41 61 827 9494
Website: www.oki.ch

Oki Data Americas Inc.(United States • États-Unis)

2000 Bishops Gate Blvd.
Mt. Laurel, NJ 08054
USA

Tel: 1-800-654-3282
Fax: 1-856-222-5247
http://WWW.OKIPRINTINGSOLUTIONS.COM
http://my.okidata.com

Oki Data Americas Inc.(Canada • Canadá)

4140B Sladeview Crescent Unit 7 & 8
Mississauga, Ontario
Canada L5L 6A1

Tél: 1-905-608-5000
Télééc: 1-905-608-5040
http://WWW.OKIPRINTINGSOLUTIONS.COM

Oki Data Americas Inc.(América Latina (OTRO))

2000 Bishops Gate Blvd.
Mt. Laurel, NJ 08054
USA

Tel (Español): 1-856-222-7496
1-856-222-5276
Fax: 1-856-222-5260
Email: LASatisfaction@okidata.com

Oki Data de Mexico, S.A. de C.V.

Mariano Escobedo #748, Piso 8
Col. Nueva Anzures
C.P. 11590, México, D.F.

Tel: 52-555-263-8780
Fax: 52-555-250-3501
http://WWW.OKIPRINTINGSOLUTIONS.COM

Oki Data do Brasil, Ltda.

Rua Alexandre Dumas, 2220-80
andar Chácara Santo Antonio
04717-004, São Paulo, SP Brasil

Tel: 55-11-3444-6747 (Grande São Paulo)
0800-11-5577 (Demais localidades)

Fax: 5511-3444-3501
e-mail: okidata@okidata.com.br
http://WWW.OKIPRINTINGSOLUTIONS.COM

Oki Data (Singapore) Pte. Ltd.

438A Alexandra Road #02-11/12,
Lobby 3, Alexandra Technopark
Singapore(119967)

Tel:(65) 6221 3722
Fax:(65) 6594 0609
http://www.okidata.com.sg

Oki Systems (Thailand) Ltd.

1168/81-82 Lumpini Tower,
27th Floor Rama IV Road
Tungmahamek, Sathorn
Bangkok 10120

Tel:(662) 679 9235
Fax:(662) 679 9243/245
http://www.okisysthai.com

Oki Data(Australia) Pty Ltd.

Level1 67 Epping Road, Macquarie
Park
NSW 2113, Australia

Tel: +61 2 8071 0000
(Support Tel: 1800 807 472)
Fax: +61 2 8071 0010
http://www.oki.com.au

Comworth Systems Ltd.

8 Antares Place Rosedale,
Auckland 0632, New Zealand

Tel:(64) 9 477 0500
Fax:(64) 9 477 0549
http://www.comworth.co.nz

Oki Data(S) P Ltd. Malaysia Rep

Office
Suite 21.03, 21st Floor Menara IGB,
Mid Valley City,
Lingkaran Syed Pura 59200,
Kuala Lumpur, Malaysia

Tel: (60) 3 2287 1177
Fax: (60) 3 2287 1166

Oki Data Corporation

4-11-22 Shibaura, Minato-ku, Tokyo
108-8551, Japan

www.okiprintingsolutions.com

