

KD-1031

Large Capacity Feeder


Illustrated Parts Manual

ES9465 / ES9475 MFP

060214A


CONTENTS

COVER	1
FRAME.....	2
DRIVE	3
FEEDER-TRANSPORT-1	4
FEEDER-TRANSPORT-2	5
DRAWER-1	6
DRAWER-2	7
DRWAER-3-TRAY.....	8
ACCESSORIES	9
ROLLER-KIT	10

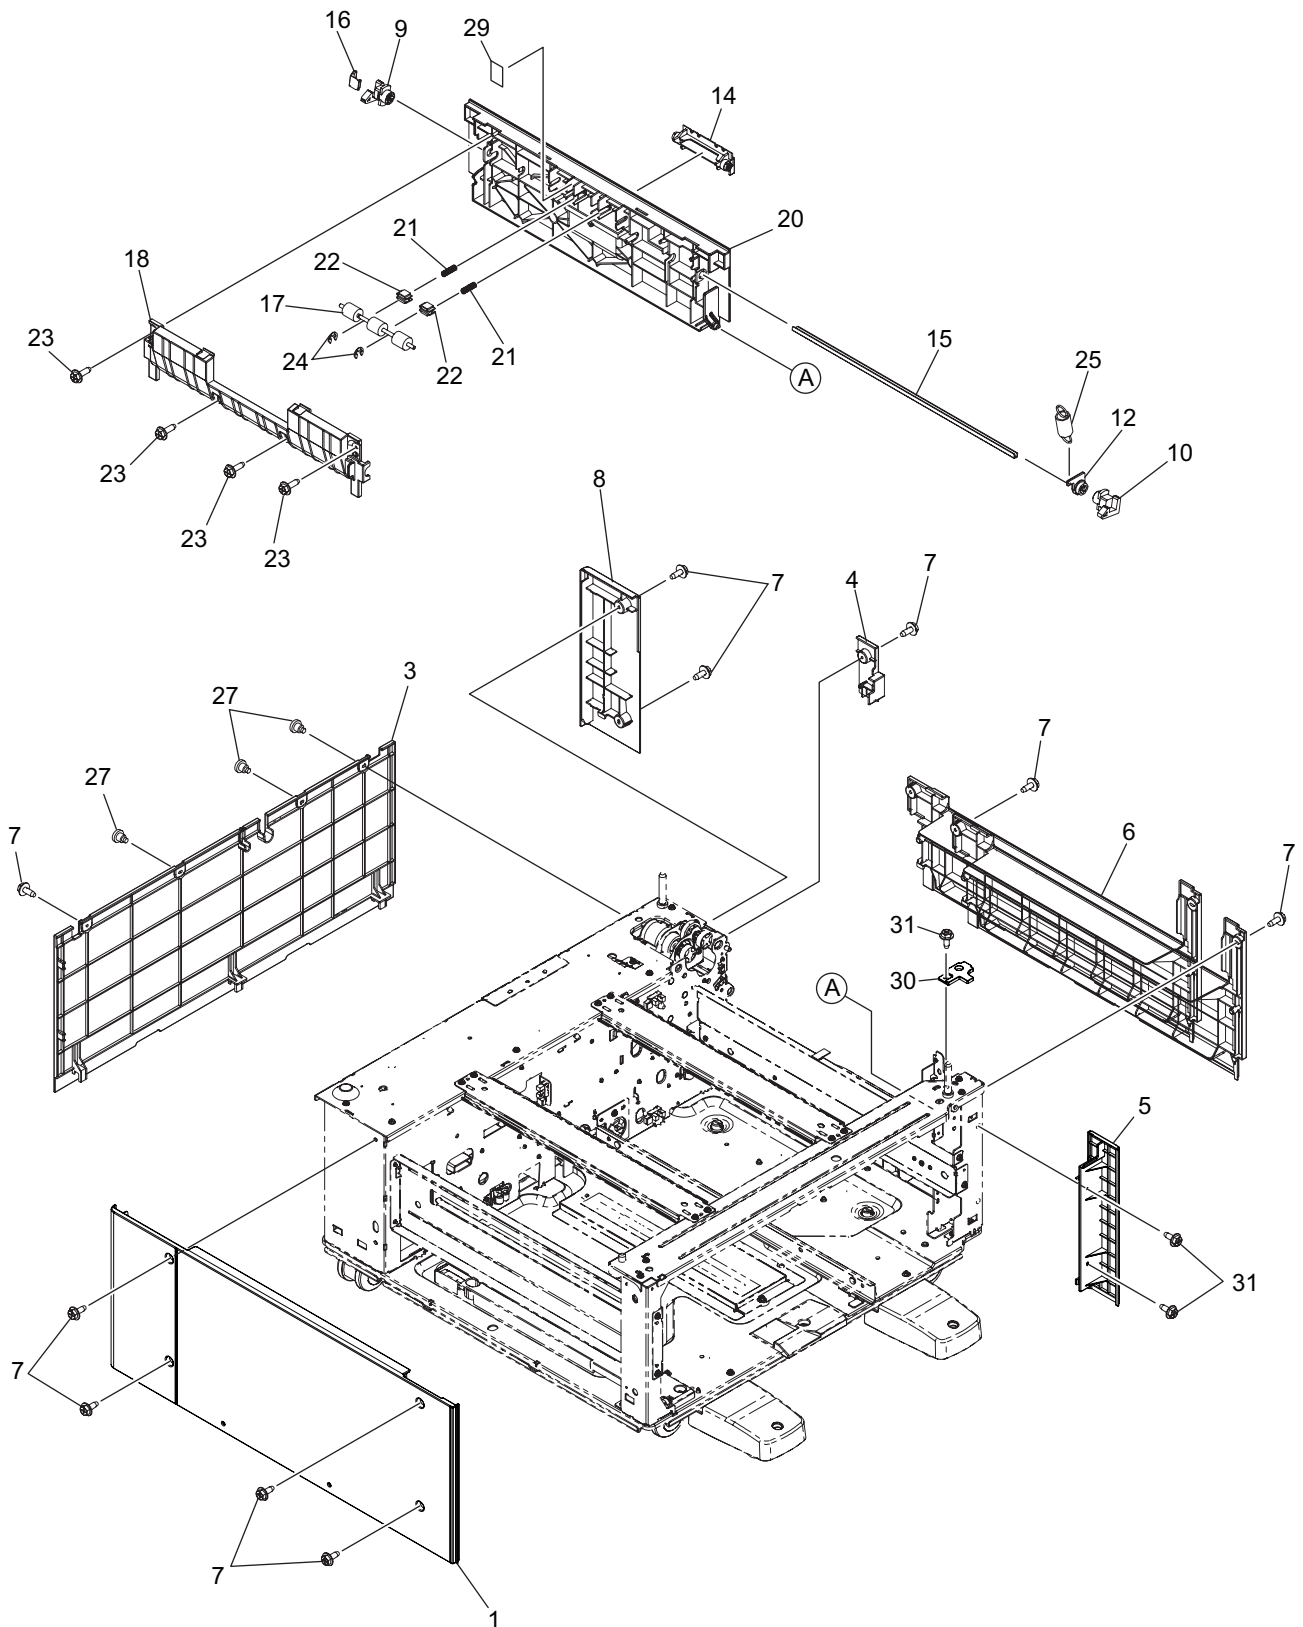


No.	Unit Name	Part Number	Description	Remarks	Reference
1	COVER		COV-LEFT		6LJ66204000
3	COVER		COVER-REAR		6LE99510000
4	COVER		COVER-RIGHT-HRNES		6LE99297000
5	COVER		COV-R-F		6LJ66202000
6	COVER		COVER-RIGHT		6LE99163000
7	COVER		TPHEX30X08-S-P		6LE68386000
8	COVER		COVER-RIGHT-REAR		6LE99509000
9	COVER		HOOK-HANDLE-R		6LE99170000
10	COVER		HOOK-HANDLE-F		6LE99169000
12	COVER		LINK-HANDLE		6LE99171000
14	COVER		HANDLE-COV-FEED		6LE99168000
15	COVER		SHAFT-HANDLE-COV-FEED		6LE99256000
16	COVER		SPL-EARTH-COV-FEED		6LE99199000
17	COVER		ROLLER-FEED		6LE99312000
18	COVER		GUIDE-FEED-U		6LE99167000
20	COVER		COVER-RIGHT-FEED		6LE99166000
21	COVER		SPC-COV-FEED-6.5N		6LE99257000
22	COVER		BUSH-PRESS-4		6LE99311000
23	COVER		TPHEX30X10-G-M		6LE68384000
24	COVER		ERR030-BLK		6LE68390000
25	COVER		SPE-057-060-0177		6LE99310000
27	COVER		TPHEX30X08-S-P		6LE68386000
29	COVER		SEAL-FEED-SENSOR		6LE99198000
30	COVER		STAND-R-F		6LJ66200000
31	COVER		TPHEX30X06-S-P		6LE68385000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

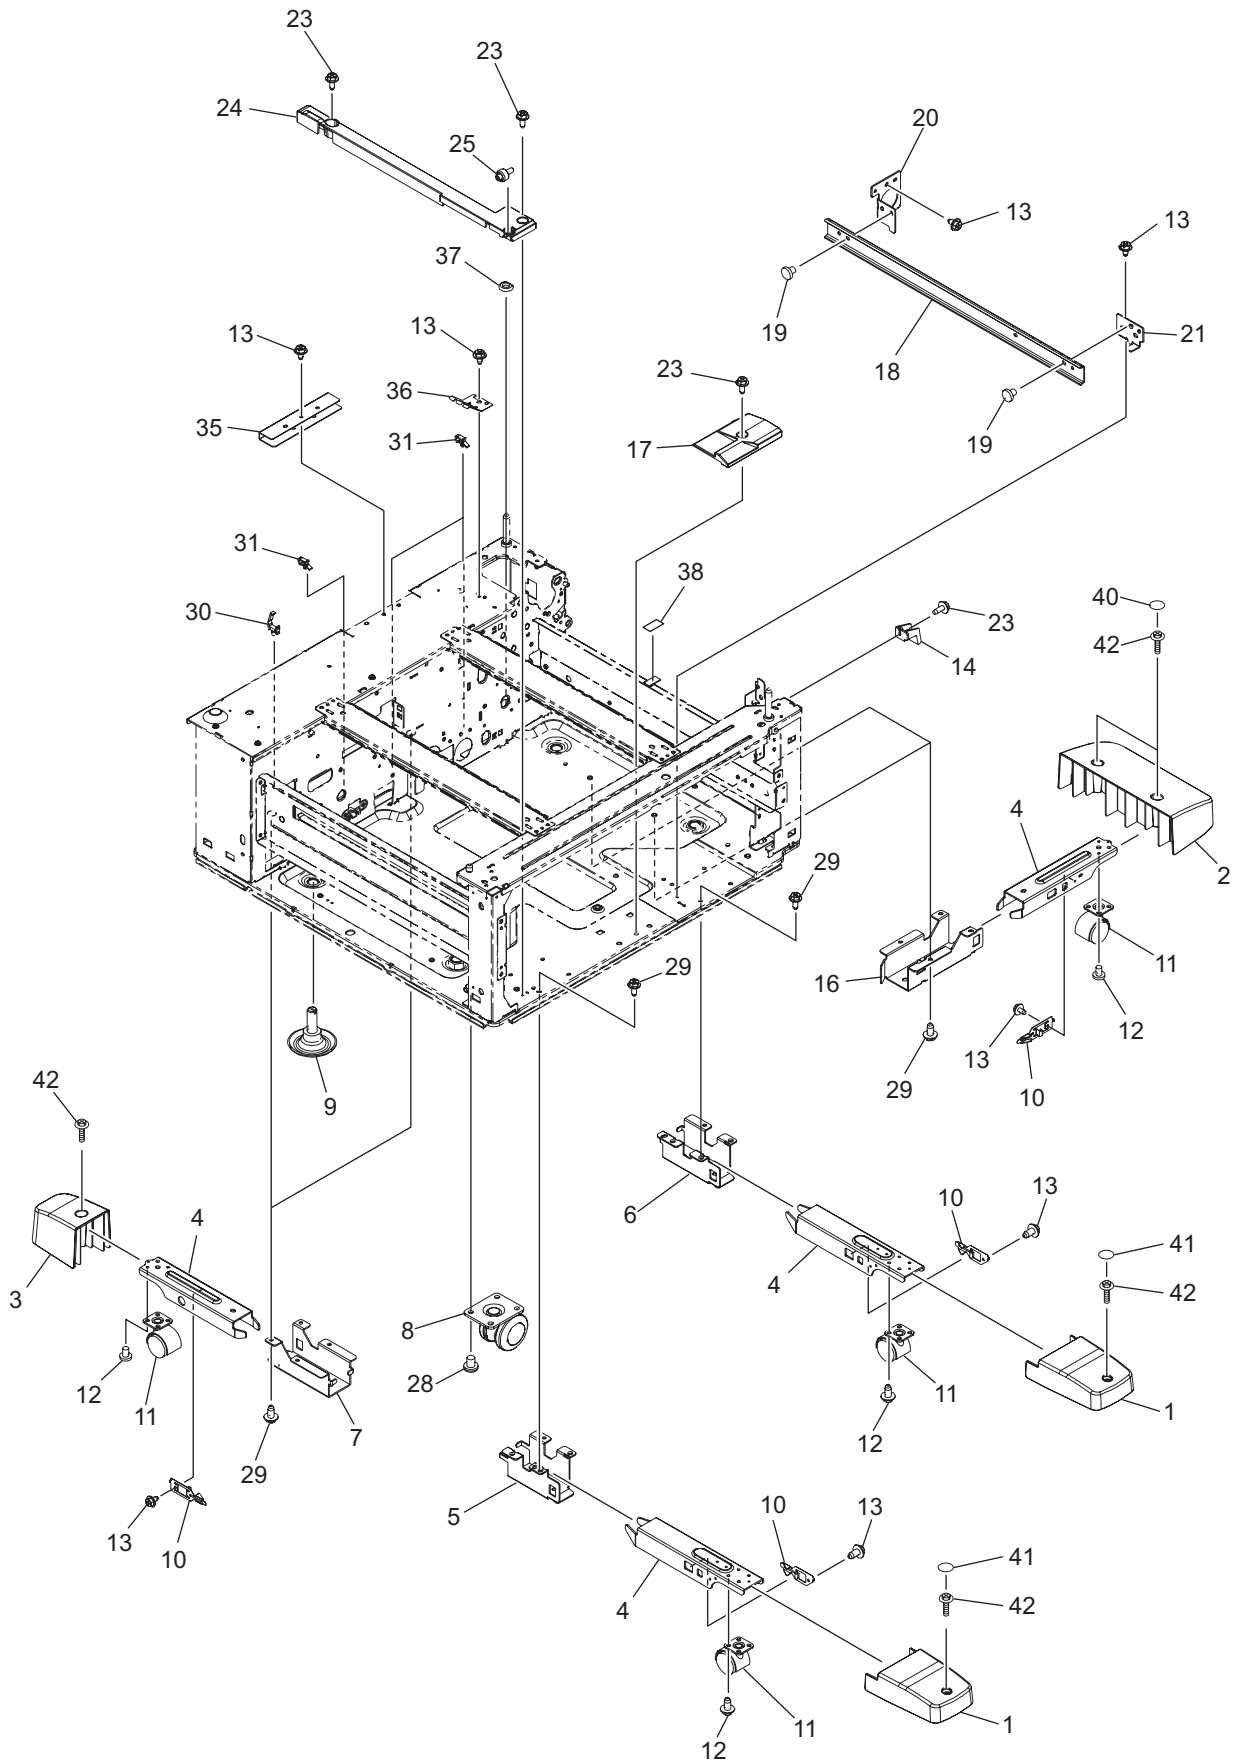


No.	Unit Name	Part Number	Description	Remarks	Reference
1	FRAME		COVER-FOOT-F-LCF		6LE99292000
2	FRAME		COVER-SIDE-FOOT-MID		6LH58088000
3	FRAME		COVER-FOOT-LCF		6LH58086100
4	FRAME		FOOT-SUB		6LA93701000
5	FRAME		BKT-FT-FRONT-R		6LE99138000
6	FRAME		BKT-FT-FRONT-L		6LE99137000
7	FRAME		BKT-FT-REAR		6LE99136000
8	FRAME		CASTER-LCF-N		6LE67483000
9	FRAME		ASY-STAND		6LE68357000
10	FRAME		SPL-STP-FOOT		6LA93754000
11	FRAME		CASTOR-FOOT		6LA93702000
12	FRAME		SCREW-M4-7-R		6LE68404000
13	FRAME		TPHEX30X06R		6LE99417000
14	FRAME		STOPPER-COV-FEED		6LE99197000
16	FRAME		BKT-FT-RIGHT		6LE99135000
17	FRAME		STOPPER-TRAY-LEFT		6LE99196000
18	FRAME		SLIDE-RAILE-C		6LE99308000
19	FRAME		SCREW-M4X5		6LE99396000
20	FRAME		BKT-SLIDE-RAIL-R		6LE99195000
21	FRAME		BKT-SLIDE-RAIL-F		6LE99194000
23	FRAME		TPHEX30X08R		6LE99387000
24	FRAME		GUIDE-TRAY-LEFT-LOW		6LE99159000
25	FRAME		ROLLER-TRAY-LEFT		6LE99307000
28	FRAME		SCREW-M5X6		6LE68393000
29	FRAME		SCREW-M4X10RP		6LE99189000
30	FRAME		CLP-LWS-1S		6LA93823000
31	FRAME		CLP-LWSM-0511		6LE99385000
35	FRAME		BKT-IF-CABLE		6LE99149000
36	FRAME		SPL-EARTH-LCF		6LA93751000
37	FRAME		SPACER-BASE		6LE99139000
38	FRAME		CUSHION-SPR		6LE99405000
40	FRAME		LID-SCREW-PFP-W		6LA47828100
41	FRAME		LID-SCREW		6LA29556000
42	FRAME		TPHEX30X08-S-P		6LE68386000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

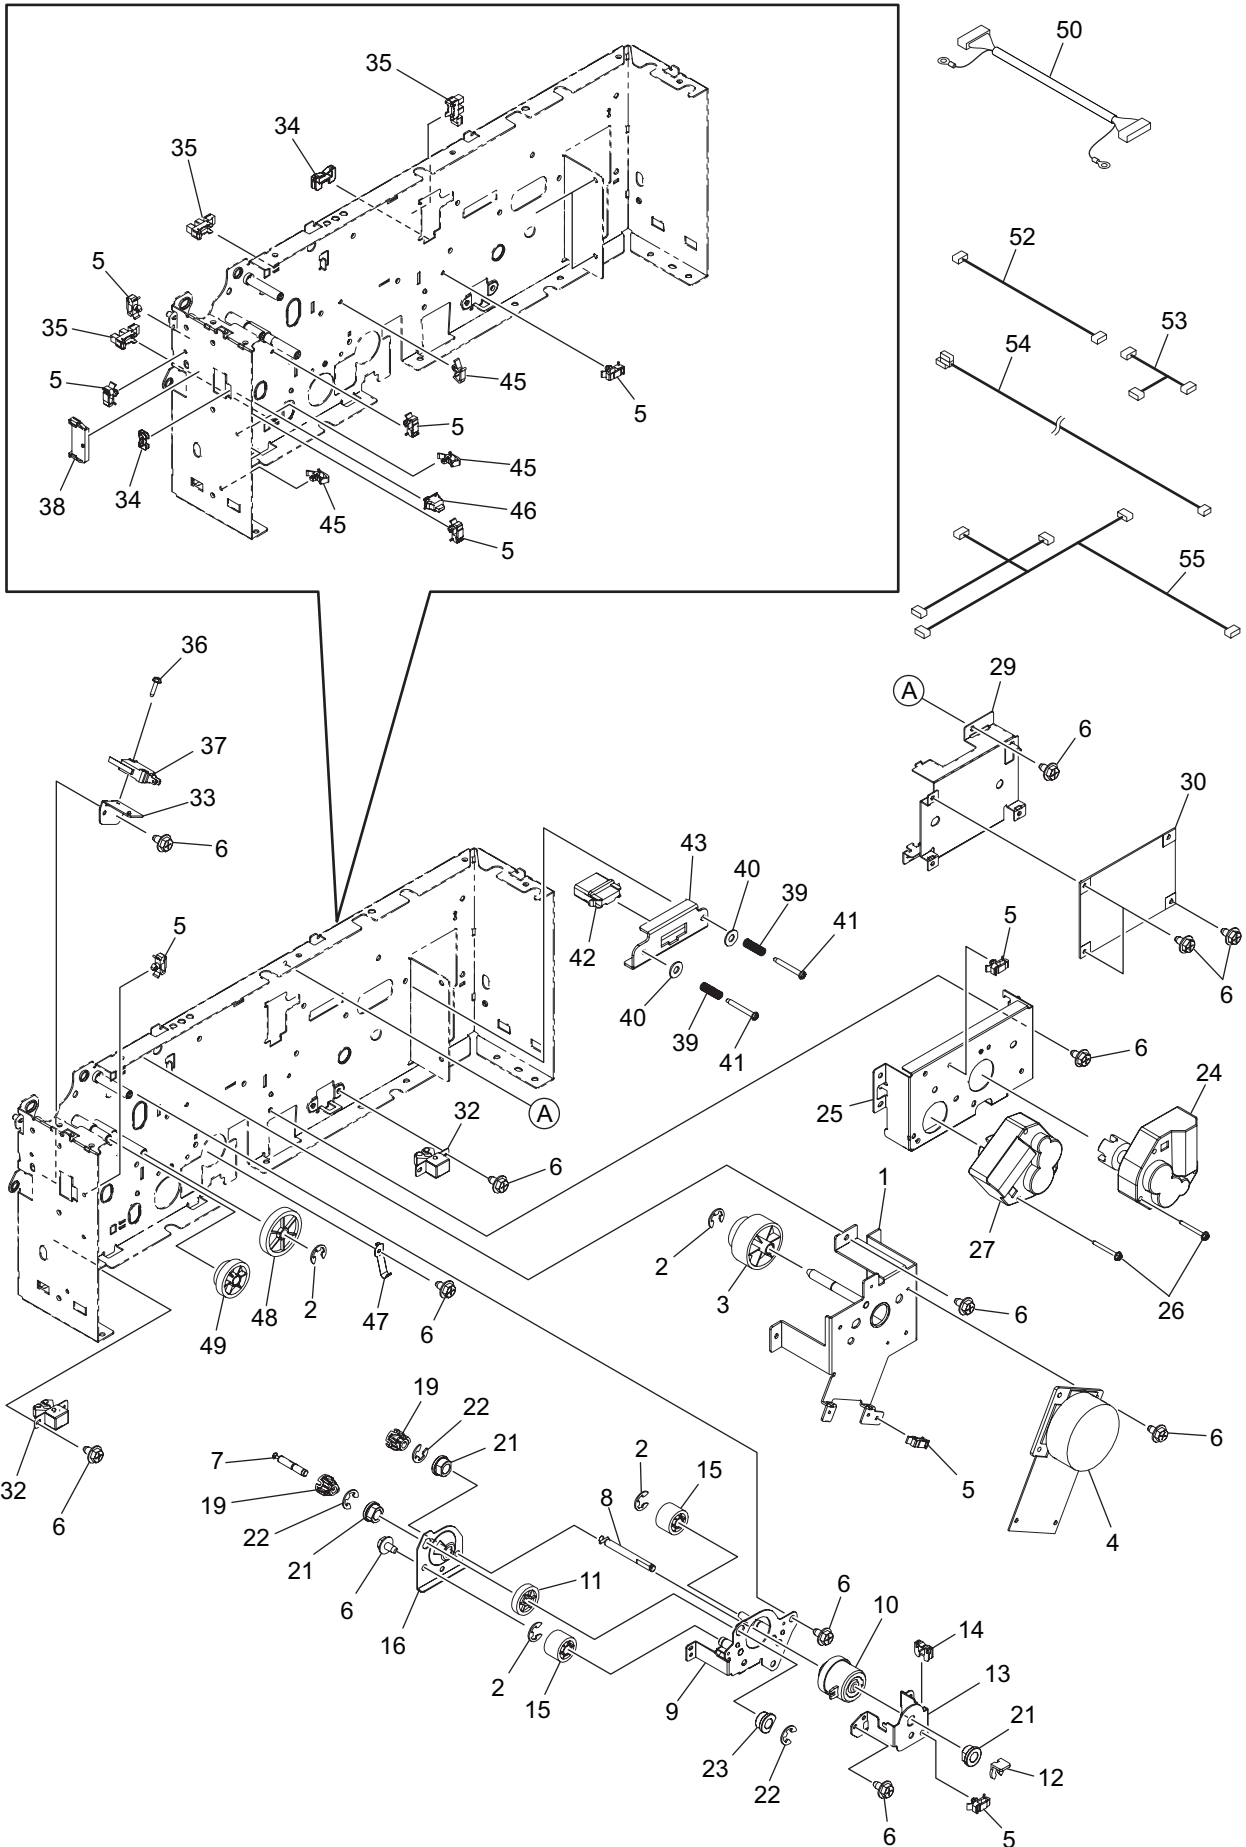


No.	Unit Name	Part Number	Description	Remarks	Reference
1	DRIVE		ASYS-BKT-MOT-FEED		6LE99242000
2	DRIVE		ERR060-BLK		6LE68392000
3	DRIVE		GEAR-IDLER-7H60_1S27-8		6LE99157000
4	DRIVE		M/DC-DRIVE-LCF		6LE93485000
5	DRIVE		CLP-LWSM-0306		6LE99386000
6	DRIVE		TPHEX30X06R		6LE99417000
7	DRIVE		ASYS-SHAFT-GRIP		6LE99253000
8	DRIVE		ASYS-SHAFT-FEED		6LE99251000
9	DRIVE		ASYS-BKT-DRIVE-UNIT		6LE99243000
10	DRIVE		CLUTCH-PICK-UP		6LE99288000
11	DRIVE		GEAR-IDLER-8S32-6		6LE99153000
12	DRIVE		STOP-RING-SEP		6LA93898000
13	DRIVE		BKT-CLUTCH		6LE99155000
14	DRIVE		CLP-ES-0505		6LA93824000
15	DRIVE		GEAR-IDLER-8S27-8		6LE99154000
16	DRIVE		DRUM-STAY-DRIVE-UNIT		6LE99152000
19	DRIVE		JOINT-DRIVE		6LE99306000
21	DRIVE		BUSH-6X10X6		6LE99365000
22	DRIVE		ERR040-BLK		6LE68391000
23	DRIVE		BUSH-6X10X6F		6LE99371000
24	DRIVE		M/DC-SLIDER		6LE73304000
25	DRIVE		BKT-MOT-TANDEM-TRAY		6LE99187000
26	DRIVE		TPHEX30X30		6LE99390000
27	DRIVE		M/DC-TRAY-UP		6LE73303000
29	DRIVE		BKT-PWA-LCF		6LE99183000
30	DRIVE		PWA-LCF-KD1026		6LE99186000
32	DRIVE		HOLDER-TRAY		6LE68366000
33	DRIVE		BKT-SW-COV-FEED		6LE99191000
34	DRIVE		CLP-ES-0510		6LA93825000
35	DRIVE		PHD-EE		6LE68394000
36	DRIVE		TPHEX30X14		6LE99389000
37	DRIVE		MICRO-SW		6LA93828000
38	DRIVE		HRNS-FEED-UNIT-R		6LE99277000
39	DRIVE		SPC-DRAWER-4.5N		6LE99286000
40	DRIVE		1HWAS040		6LE99403000
41	DRIVE		SCREW-DRAWER		6LE99146000
42	DRIVE		HRNS-TRAY-L-CNT		6LE99279000
43	DRIVE		BKT-DRAWER		6LE99145000
45	DRIVE		CLP-LWSM-0511		6LE99385000
46	DRIVE		PUSH-SW		6LA93850000
47	DRIVE		SPL-SLIDE-RAIL		6LE99190000
48	DRIVE		GEAR-IDLER-41Z		6LA93787000
49	DRIVE		GEAR-IDLER-1S23_8S40-8		6LE99158000
50	DRIVE		HRNS-I/F-KD1031		6LE99512000
52	DRIVE		HRNS-BLM		6LE99278000
53	DRIVE		HRNS-DCM		6LE99281000
54	DRIVE		HRNS-SW-COV-FEED		6LE99283000
55	DRIVE		HRNS-CL/SS		6LE99282000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

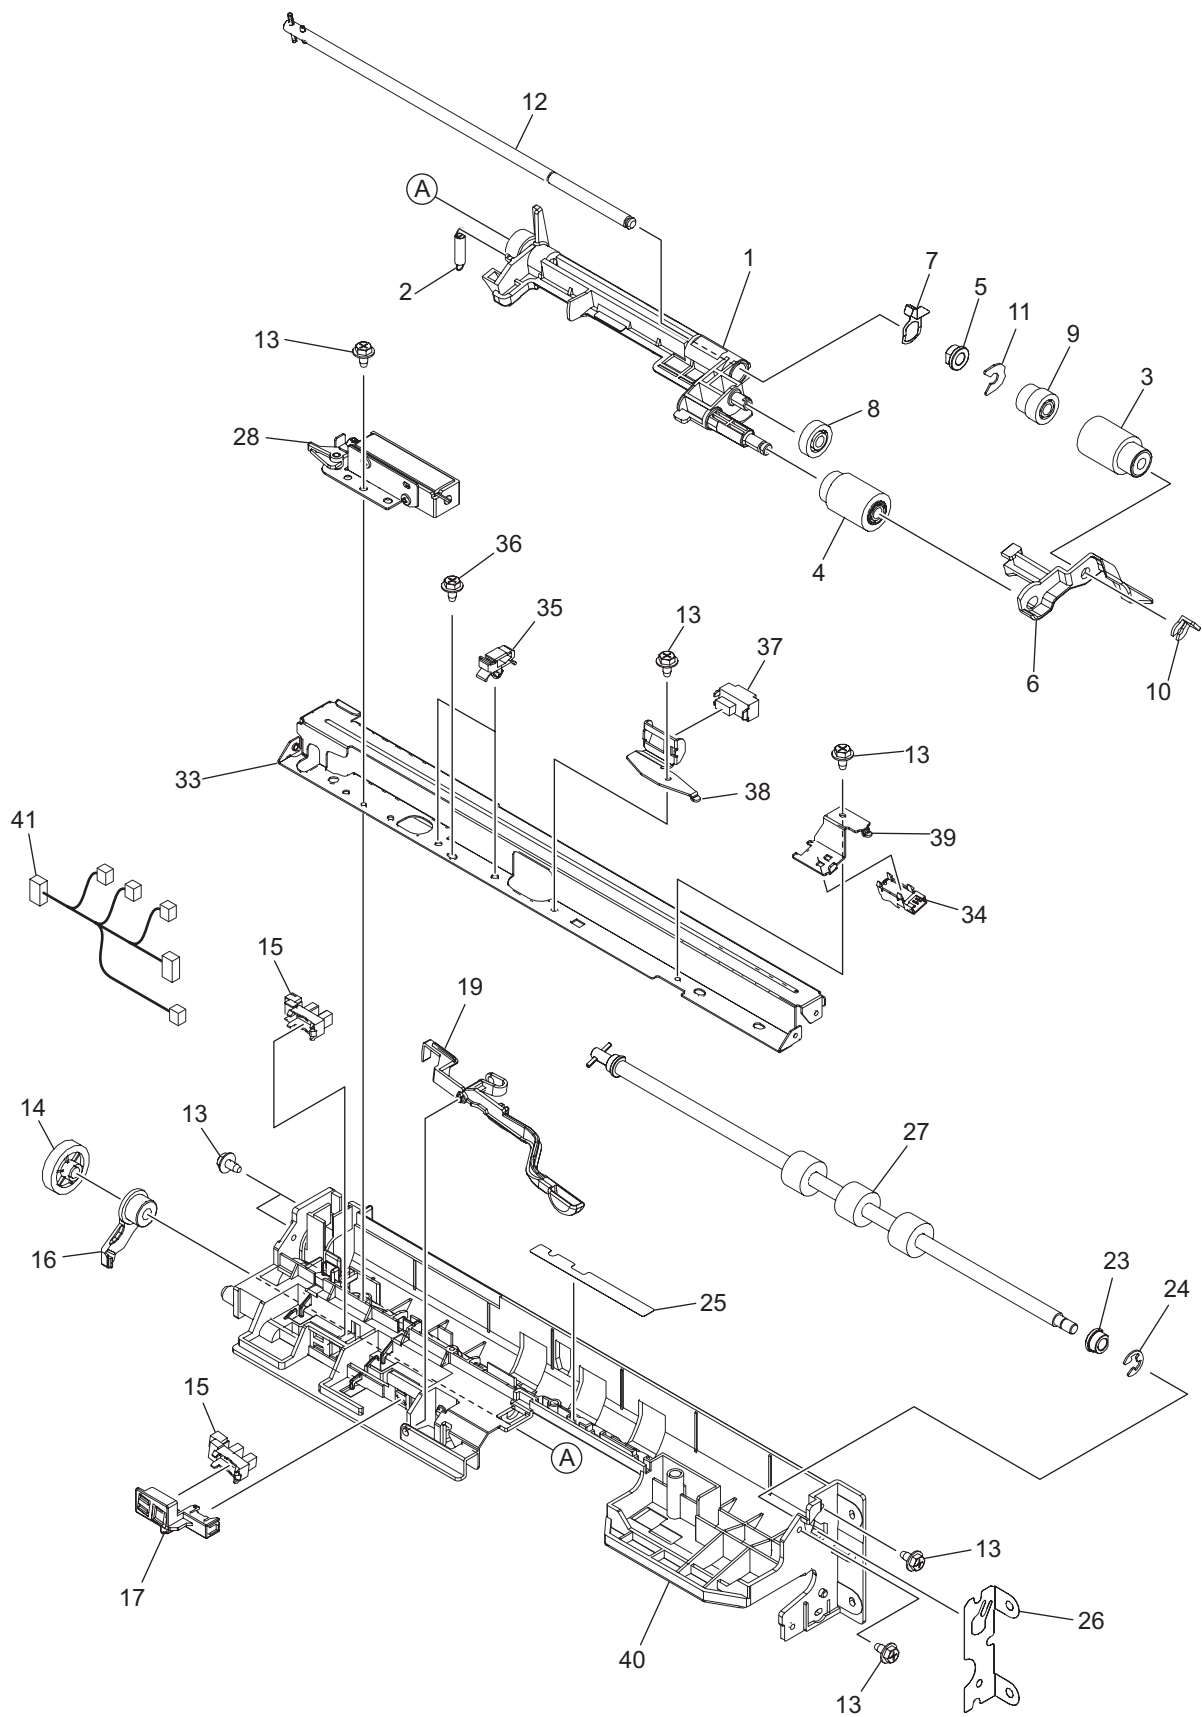


No.	Unit Name	Part Number	Description	Remarks	Reference
1	FEEDER-TRANSPORT-1		ARM-PICK-UP		6LE99355000
2	FEEDER-TRANSPORT-1		SPE-050-050-0171		6LE99350000
3	FEEDER-TRANSPORT-1	45735717	ASYS-ROL-FEED-KD1026		6LE99347000
4	FEEDER-TRANSPORT-1	45735716	ASYS-ROL-PICK-KD1026		6LE99346000
5	FEEDER-TRANSPORT-1		BUSH-6X10X6		6LE99365000
6	FEEDER-TRANSPORT-1		GUIDE-FEED		6LE99349000
7	FEEDER-TRANSPORT-1		PLT-EARTH-FEED		6LE99359000
8	FEEDER-TRANSPORT-1		GEAR-8S20-6		6LE99352000
9	FEEDER-TRANSPORT-1		GEAR-8S18-6		6LE99351000
10	FEEDER-TRANSPORT-1		STOP-RING-SEP		6LA93898000
11	FEEDER-TRANSPORT-1		ERR-SILENCER		6LA93895000
12	FEEDER-TRANSPORT-1		ASY-SHAFT-FEED		6LE99356000
13	FEEDER-TRANSPORT-1		TPHEX30X06-S-P		6LE68385000
14	FEEDER-TRANSPORT-1		GEAR-1S24-6		6LE99358000
15	FEEDER-TRANSPORT-1		SNR-LGRC69		6LE99353000
16	FEEDER-TRANSPORT-1		LEVER-FEED		6LE99364000
17	FEEDER-TRANSPORT-1		BKT-PAPER-END		6LE99363000
19	FEEDER-TRANSPORT-1		FEELER-PAPER-END		6LE99362000
23	FEEDER-TRANSPORT-1		BUSH-6X10X6F		6LE99371000
24	FEEDER-TRANSPORT-1		ERR040-BLK		6LE68391000
25	FEEDER-TRANSPORT-1		SHEET-FEED-UNIT		6LE99316000
26	FEEDER-TRANSPORT-1		PLT-EARTH-FEED-F		6LE99324000
27	FEEDER-TRANSPORT-1		ASY-TRNS-ROLER		6LE99360000
28	FEEDER-TRANSPORT-1		ASY-SOL-PICK		6LE99319000
33	FEEDER-TRANSPORT-1		STAY-FEED		6LE99317000
34	FEEDER-TRANSPORT-1		SNR-KUA0055A		6LE99314000
35	FEEDER-TRANSPORT-1		CLP-LWSM-0306		6LE99386000
36	FEEDER-TRANSPORT-1		TPHEX30X08-G-M		6LE68383000
37	FEEDER-TRANSPORT-1		SNR-KUA0047C		6LE99313000
38	FEEDER-TRANSPORT-1		BKT-SNR		6LE99315000
39	FEEDER-TRANSPORT-1		BKT-SNR-FEED		6LE99318000
40	FEEDER-TRANSPORT-1		HOUSING-FEED-UNIT		6LE99354000
41	FEEDER-TRANSPORT-1		HRNS-FEED-UNIT		6LE99325000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

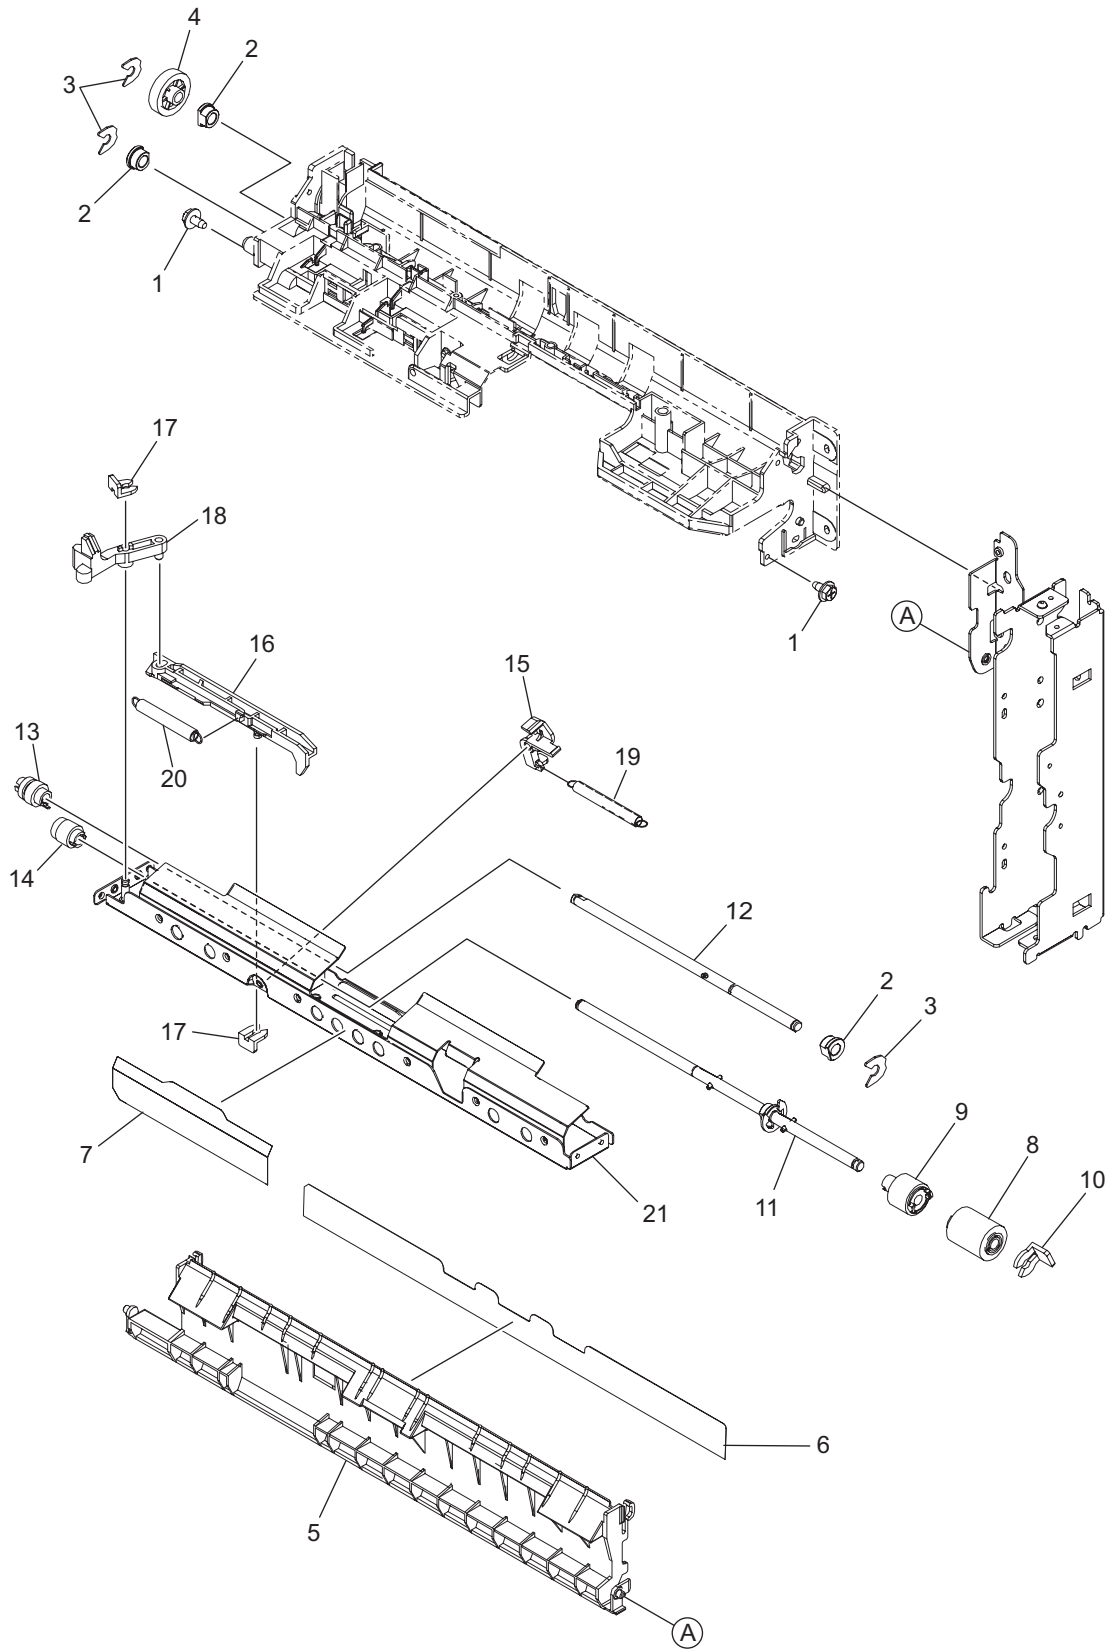


No.	Unit Name	Part Number	Description	Remarks	Reference
1	FEEDER-TRANSPORT-2		TPHEX30X06-S-P		6LE68385000
2	FEEDER-TRANSPORT-2		BUSH-6X10X6F		6LE99371000
3	FEEDER-TRANSPORT-2		ERR-SILENCER		6LA93895000
4	FEEDER-TRANSPORT-2		GEAR-1S22-6		6LE99342000
5	FEEDER-TRANSPORT-2		GUIDE-PLATE		6LE99366000
6	FEEDER-TRANSPORT-2		GUIDE-MYLAR		6LE99367000
7	FEEDER-TRANSPORT-2		GUIDE-PAPER-FEED		6LE99298000
8	FEEDER-TRANSPORT-2	45735718	ASYS-ROL-RET-KD1026		6LE99348000
9	FEEDER-TRANSPORT-2		TORQUE-LIMITER		6LE93471000
10	FEEDER-TRANSPORT-2		STOP-RING-SEP		6LA93898000
11	FEEDER-TRANSPORT-2		ASY-SHAFT-SPR-SUB		6LE99338000
12	FEEDER-TRANSPORT-2		ASY-SHAFT-SPR-DRIVE		6LE99341000
13	FEEDER-TRANSPORT-2		GEAR-5S24-6		6LE99328000
14	FEEDER-TRANSPORT-2		GEAR-5S23-6		6LE99329000
15	FEEDER-TRANSPORT-2		LEVER-PRESS-SPR		6LE99343000
16	FEEDER-TRANSPORT-2		LINK-RELEASE		6LE99344000
17	FEEDER-TRANSPORT-2		STOP-RING-3		6LA93896000
18	FEEDER-TRANSPORT-2		LEVER-PRESS-RELEASE		6LE99345000
19	FEEDER-TRANSPORT-2		SPE-059-045-0263		6LE99326000
20	FEEDER-TRANSPORT-2		SPE-061-065-03038		6LE99327000
21	FEEDER-TRANSPORT-2		ASYS-STAY-SPR		6LE99330000
1	FEEDER-TRANSPORT-2		TPHEX30X06-S-P		6LE68385000
2	FEEDER-TRANSPORT-2		BUSH-6X10X6F		6LE99371000
3	FEEDER-TRANSPORT-2		ERR-SILENCER		6LA93895000
4	FEEDER-TRANSPORT-2		GEAR-1S22-6		6LE99342000
5	FEEDER-TRANSPORT-2		GUIDE-PLATE		6LE99366000
6	FEEDER-TRANSPORT-2		GUIDE-MYLAR		6LE99367000
7	FEEDER-TRANSPORT-2		GUIDE-PAPER-FEED		6LE99298000
8	FEEDER-TRANSPORT-2	45735718	ASYS-ROL-RET-KD1026		6LE99348000
9	FEEDER-TRANSPORT-2		TORQUE-LIMITER		6LE93471000
10	FEEDER-TRANSPORT-2		STOP-RING-SEP		6LA93898000
11	FEEDER-TRANSPORT-2		ASY-SHAFT-SPR-SUB		6LE99338000
12	FEEDER-TRANSPORT-2		ASY-SHAFT-SPR-DRIVE		6LE99341000
13	FEEDER-TRANSPORT-2		GEAR-5S24-6		6LE99328000
14	FEEDER-TRANSPORT-2		GEAR-5S23-6		6LE99329000
15	FEEDER-TRANSPORT-2		LEVER-PRESS-SPR		6LE99343000
16	FEEDER-TRANSPORT-2		LINK-RELEASE		6LE99344000
17	FEEDER-TRANSPORT-2		STOP-RING-3		6LA93896000
18	FEEDER-TRANSPORT-2		LEVER-PRESS-RELEASE		6LE99345000
19	FEEDER-TRANSPORT-2		SPE-059-045-0263		6LE99326000
20	FEEDER-TRANSPORT-2		SPE-061-065-03038		6LE99327000
21	FEEDER-TRANSPORT-2		ASYS-STAY-SPR		6LE99330000
1	FEEDER-TRANSPORT-2		TPHEX30X06-S-P		6LE68385000
2	FEEDER-TRANSPORT-2		BUSH-6X10X6F		6LE99371000
3	FEEDER-TRANSPORT-2		ERR-SILENCER		6LA93895000
4	FEEDER-TRANSPORT-2		GEAR-1S22-6		6LE99342000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

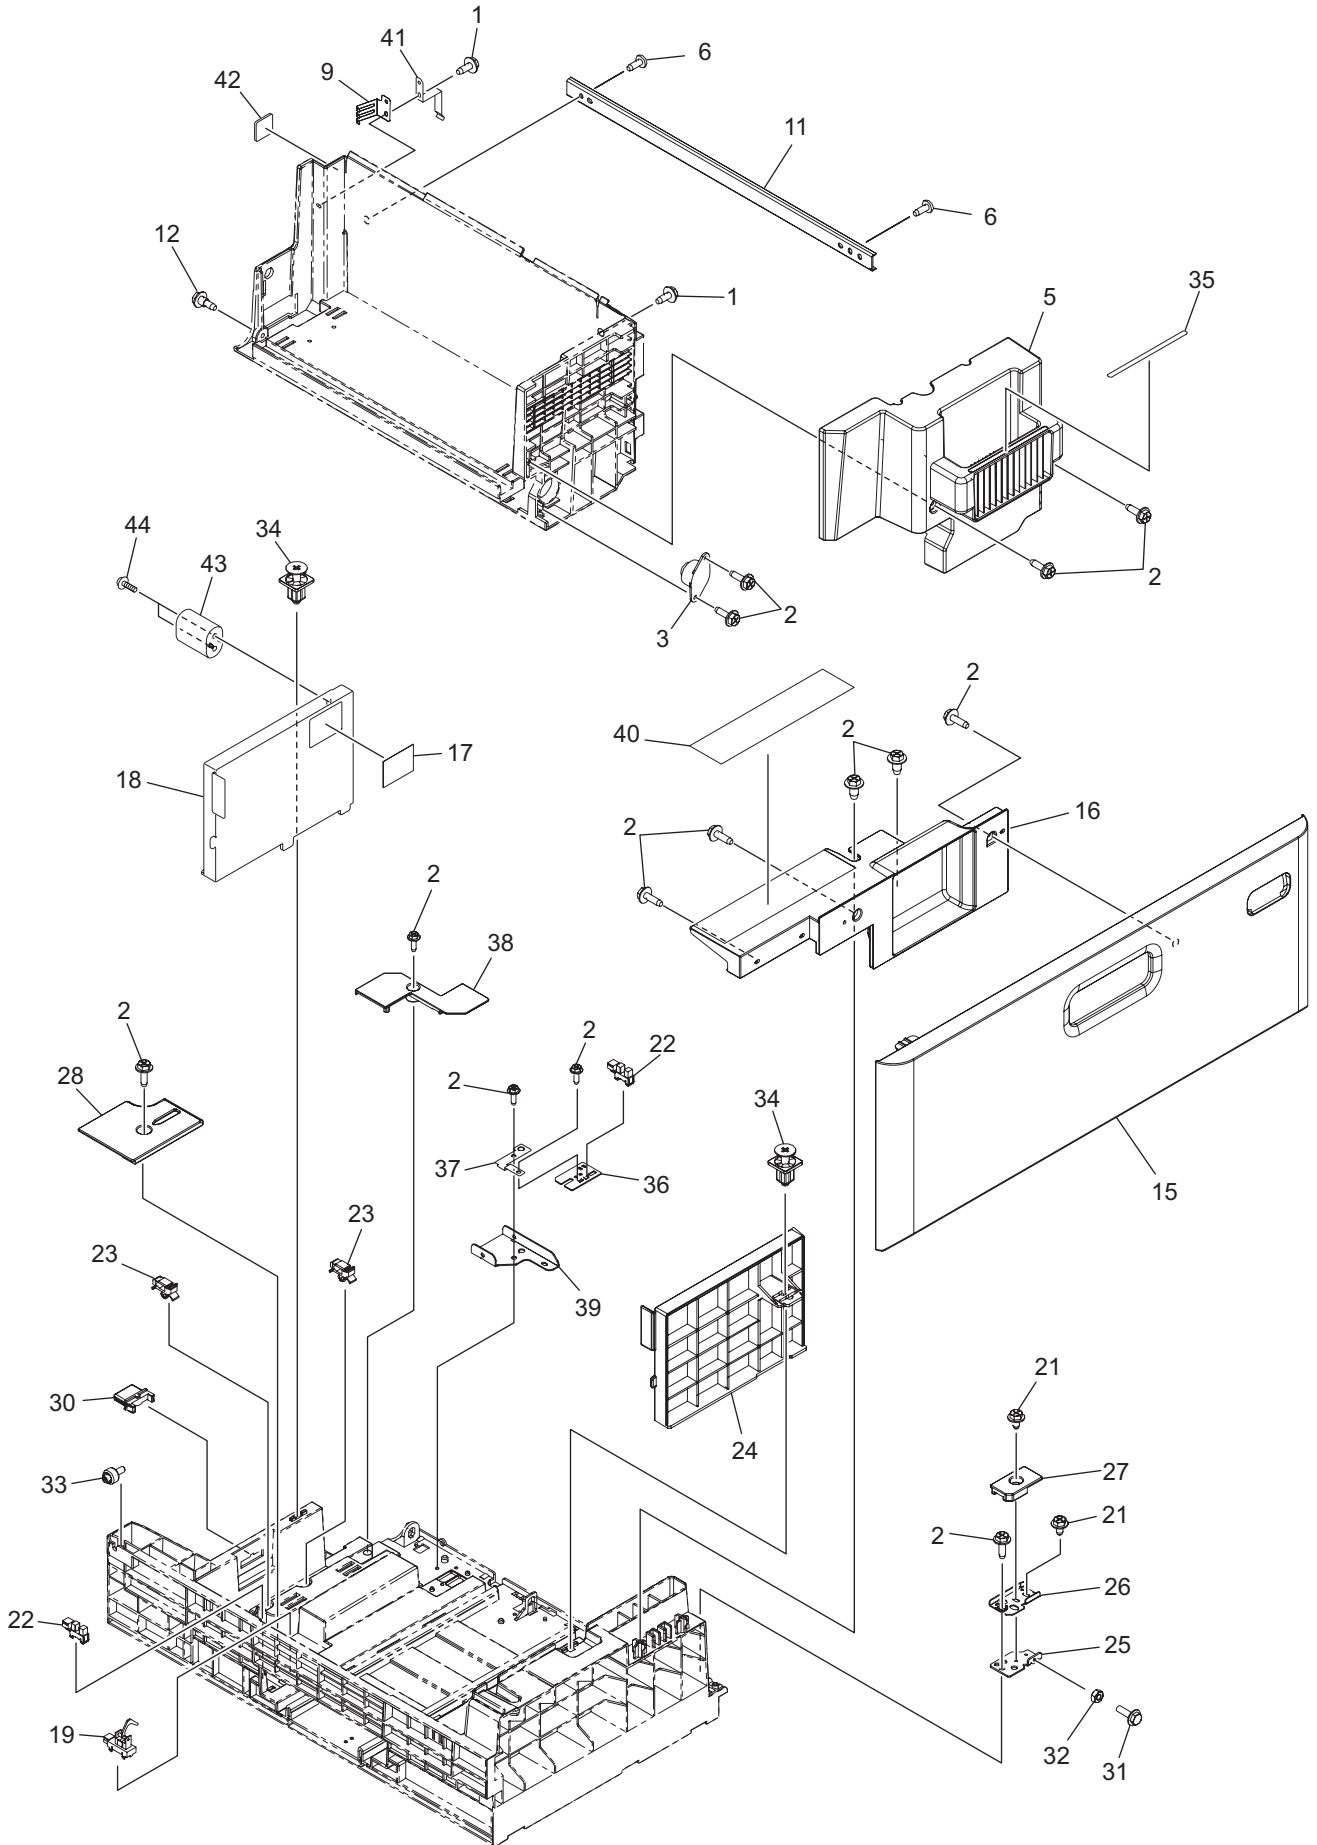


No.	Unit Name	Part Number	Description	Remarks	Reference
1	DRAWER-1		TPHEX30X08-S-P		6LE68386000
2	DRAWER-1		TPHEX30X10-G-M		6LE68384000
3	DRAWER-1		OIL-DAMPER		6LA93814000
5	DRAWER-1		HANDLE-RIGHT-TRAY		6LE99210000
6	DRAWER-1		BIND30X08-G-M		6LE99406000
9	DRAWER-1		SPL-EARTH-TRAY-RIGHT		6LE99173000
11	DRAWER-1		SLIDE-RAILE-R		6LE99404000
12	DRAWER-1		SCREW-M3X6-3.5		6LE99393000
15	DRAWER-1		COV-FRONT		6LJ66201000
16	DRAWER-1		GRIP-FRONT		6LJ66205000
17	DRAWER-1		LBL-P-LIMIT		6LE99239000
18	DRAWER-1		SIDE-FENCE-LEFT-REAR		6LE99441000
19	DRAWER-1		PHD-ACT		6LE03902000
21	DRAWER-1		TPHEX30X06R		6LE99417000
22	DRAWER-1		PHD-EE		6LE68394000
23	DRAWER-1		CLP-LWSM-0306		6LE99386000
24	DRAWER-1		SIDE-FENCE-LEFT-FRONT		6LE99228000
25	DRAWER-1		BKT-PLATE-TRAY		6LE99222000
26	DRAWER-1		PLATE-TRAY-RIGHT		6LE99220000
27	DRAWER-1		COV-PLATE-TARY-RIGHT		6LE99221000
28	DRAWER-1		COV-P-EMP-SZ		6LE99178000
30	DRAWER-1		HRNS-TRAY-L		6LE99280000
31	DRAWER-1		TPHEX-M3X10		6LE99394000
32	DRAWER-1		NUT-M3		6LE99395000
33	DRAWER-1		ROLLER-TRAY-LEFT		6LE99307000
34	DRAWER-1		RIVET-31J5		6LE99383000
35	DRAWER-1		LBL-COV-R-TLCF-CUD		6LE99506000
36	DRAWER-1		BKT-P-SIZE-SZ		6LE99175000
37	DRAWER-1		SPL-EARTH-PHD		6LE99174000
38	DRAWER-1		COV-P-SIZE-SZ		6LE99177000
39	DRAWER-1		BKT-LEVER-LOCK		6LE99180000
40	DRAWER-1		LBL-SET-TRAY-TLCF-CUD		6LE99502000
41	DRAWER-1		SPL-EARTH-TRAY-RIGHT-2		6LE99301000
42	DRAWER-1		SPACER-TDM-TRAY-R		6LE99436000
43B	DRAWER-1		STPR-SIDE-FENCE-L-R		6LE99440000
44B	DRAWER-1		TPHEX30X10-G-M		6LE68384000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

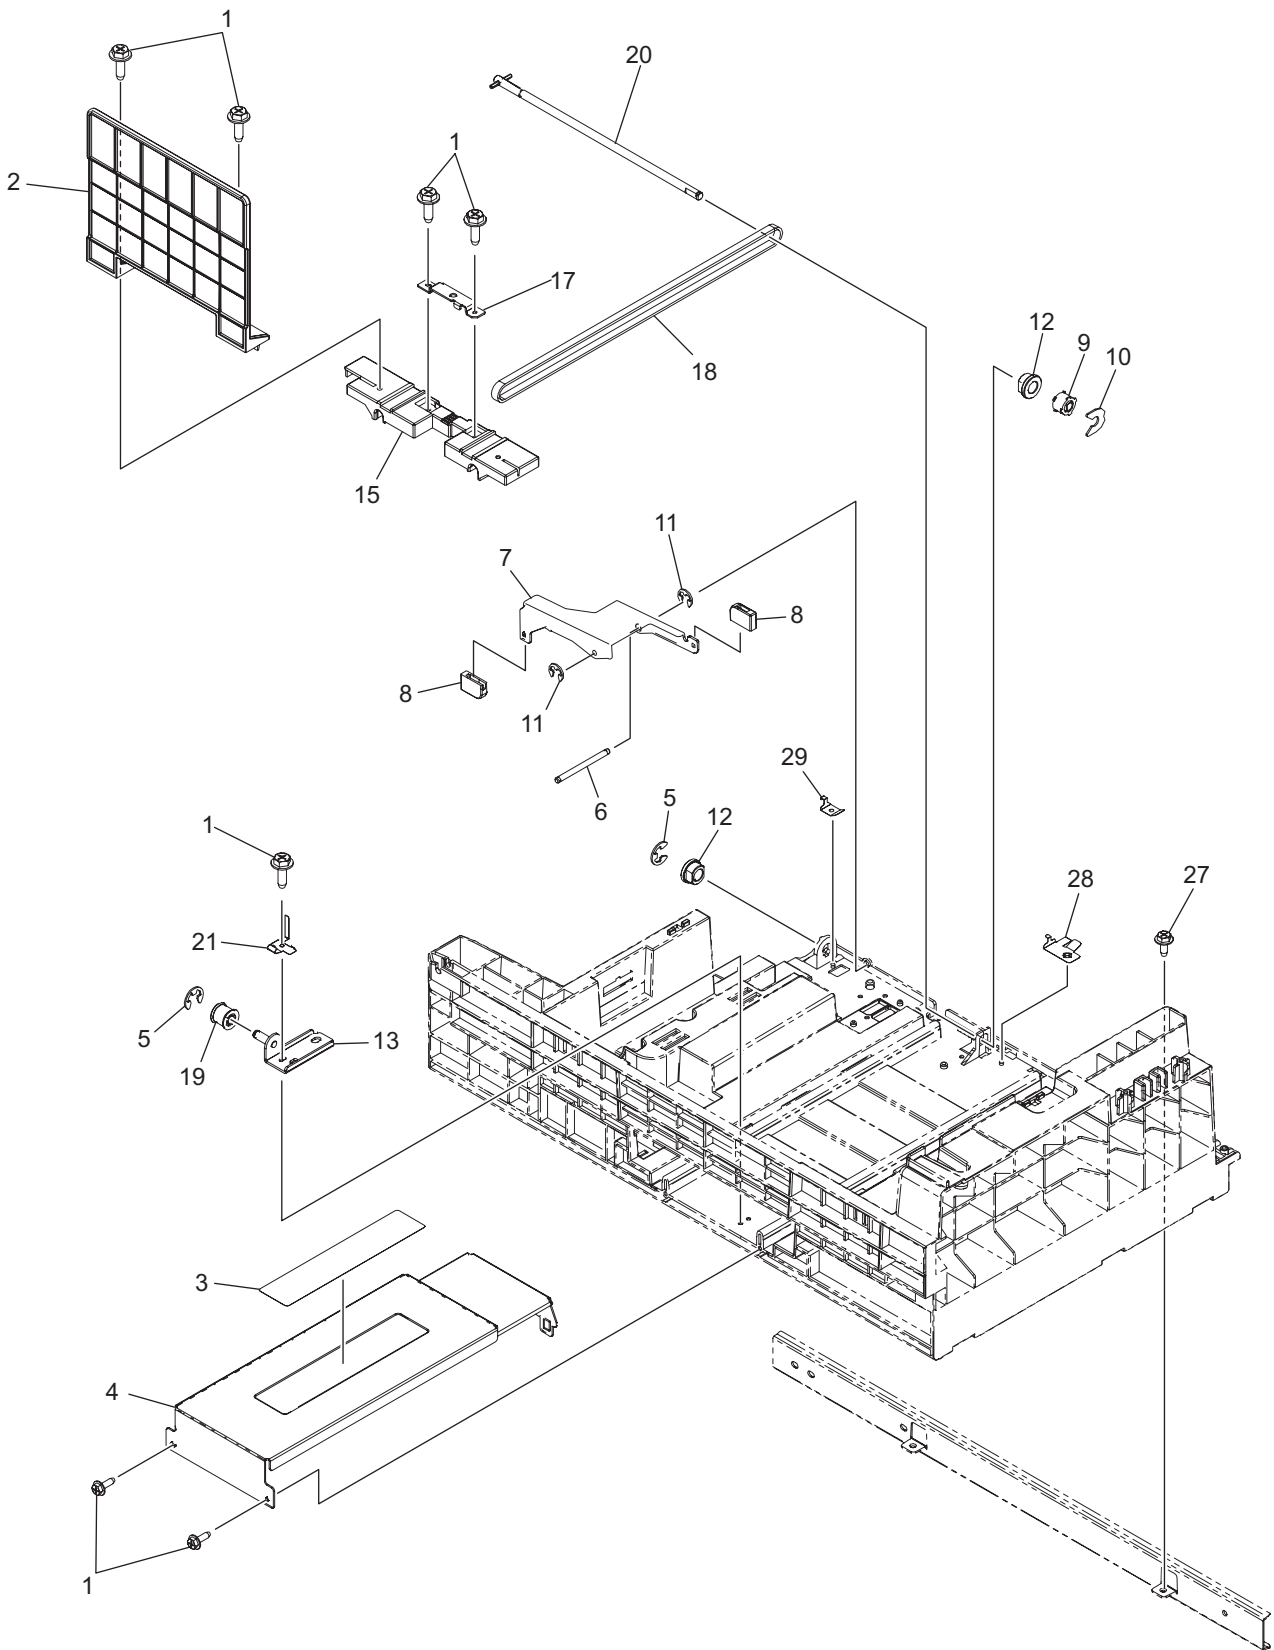



No.	Unit Name	Part Number	Description	Remarks	Reference
1	DRAWER-2		TPHEX30X10-G-M		6LE68384000
2	DRAWER-2		BACK-FENCE		6LE99226000
3	DRAWER-2		LBL-P-SET-TRAY-L-CUD		6LE99503000
4	DRAWER-2		COVER-SLIDER		6LE99224000
5	DRAWER-2		ERR040-BLK		6LE68391000
6	DRAWER-2		SFAFT-LEVER-LOCK		6LE99382000
7	DRAWER-2		LEVER-COUPPING-TRAY		6LE99229000
8	DRAWER-2		CAP-LEVER-COUPPING		6LE99230000
9	DRAWER-2		PULLY-S3M15-6		6LE99188000
10	DRAWER-2		ERR-SILENCER		6LA93895000
11	DRAWER-2		ERR030-BLK		6LE68390000
12	DRAWER-2		BUSH-6X10X6		6LE99365000
13	DRAWER-2		ASYS-BKT-PULLEY-DRIVE		6LE99270000
15	DRAWER-2		SLIDER-BACKFENCE		6LE99225000
17	DRAWER-2		STOPPER-SLIDER-BELT		6LE99227000
18	DRAWER-2		BELT/T-S3M-196		6LE99377000
19	DRAWER-2		PULLY-S3M-15-86		6LE99378000
20	DRAWER-2		ASYS-SHAFT-SLIDER-DRIVE		6LE99268000
21	DRAWER-2		SPL-PULLY-DRIVE		6LE99302000
27	DRAWER-2		TPHEX30X08-S-P		6LE68386000
28	DRAWER-2		PLT-EARTH-COV-SLIDER		6LE99231000
29	DRAWER-2		SPL-JOINT-DRIVE		6LE99232000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

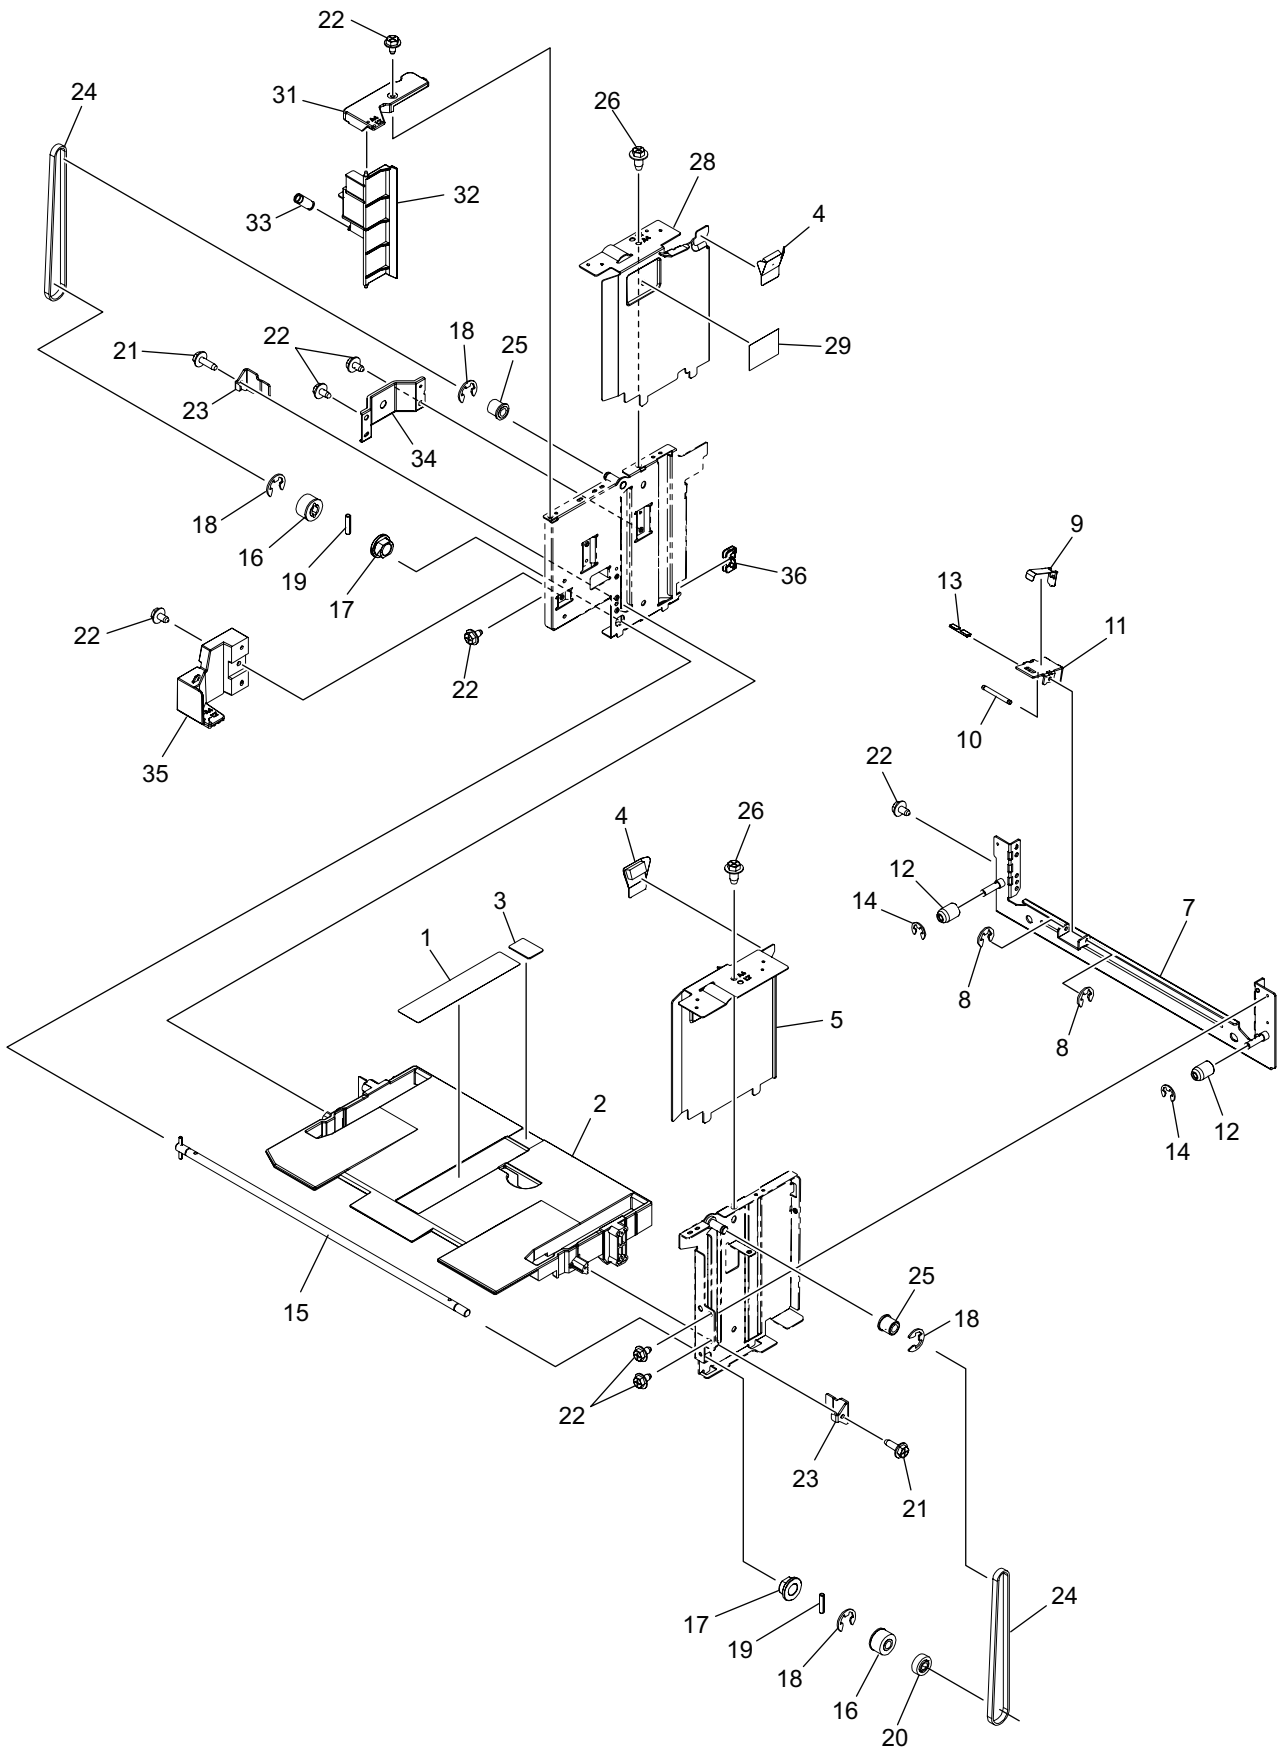


No.	Unit Name	Part Number	Description	Remarks	Reference
1	DRWAER-3-TRAY		LBL-P-SET-TRAY-R-CUD		6LE99504000
2	DRWAER-3-TRAY		TRAY-BOTTOM-PLATE		6LE99208000
3	DRWAER-3-TRAY		PAD-PLATE		6LA93813000
4	DRWAER-3-TRAY		ASYS-PLATE-PAPER		6LE99272000
5	DRWAER-3-TRAY		ASYS-SIDE-FENCE-RIGHT-FRO		6LE99267000
7	DRWAER-3-TRAY		ASYS-STAY-RIGHT-TRAY		6LE99263000
8	DRWAER-3-TRAY		ERR030-BLK		6LE68390000
9	DRWAER-3-TRAY		SPL-LEVER-LOCK		6LE99206000
10	DRWAER-3-TRAY		SHAFT-TRAY-BOTTOM-PLATE		6LE99260000
11	DRWAER-3-TRAY		BKT-BASE		6LE99205000
12	DRWAER-3-TRAY		ROLLOR-GUIDE-RAIL		6LE99203000
13	DRWAER-3-TRAY		SHEET-BKT		6LE99204000
14	DRWAER-3-TRAY		ERR040-BLK		6LE68391000
15	DRWAER-3-TRAY		ASY-SFT-TRAY		6LE68329000
16	DRWAER-3-TRAY		PULLY-S3M-24-8		6LE99299000
17	DRWAER-3-TRAY		BUSH-8X12X7		6LE99372000
18	DRWAER-3-TRAY		ERR060-BLK		6LE68392000
19	DRWAER-3-TRAY		WPIN30/14-BLK		6LA93883000
20	DRWAER-3-TRAY		GEAR-DUMP-Z18		6LA93797000
21	DRWAER-3-TRAY		TPHEX30X10-G-M		6LE68384000
22	DRWAER-3-TRAY		TPHEX30X06R		6LE99417000
23	DRWAER-3-TRAY		BKT-HOLDER-BELT		6LE99211000
24	DRWAER-3-TRAY		BLT/T-S3M-126		6LE99368000
25	DRWAER-3-TRAY		PULLY-S3M-16-8		6LE99300000
26	DRWAER-3-TRAY		TPHEX40X08		6LE99391000
28	DRWAER-3-TRAY		ASYS-SIDE-FENCE-RIGHT-REA		6LE99265000
29	DRWAER-3-TRAY		LBL-P-LIMIT		6LE99239000
31	DRWAER-3-TRAY		BKT-END-FENCE		6LE99219000
32	DRWAER-3-TRAY		END-FENCE		6LE99439000
33	DRWAER-3-TRAY		SPE-045-045-016		6LE99438000
34	DRWAER-3-TRAY		PLATE-SIDE-PALTE-REAR		6LE99202000
35	DRWAER-3-TRAY		GUIDE-PLATE-END-FENCE		6LE99209000
36	DRWAER-3-TRAY		CLP-ES-0510		6LA93825000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

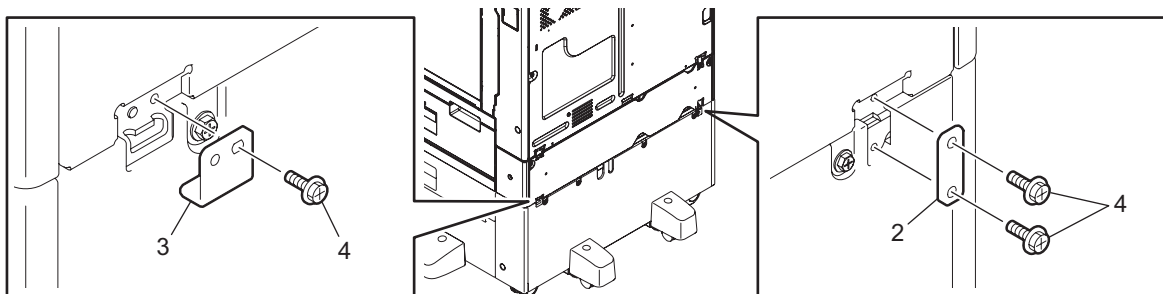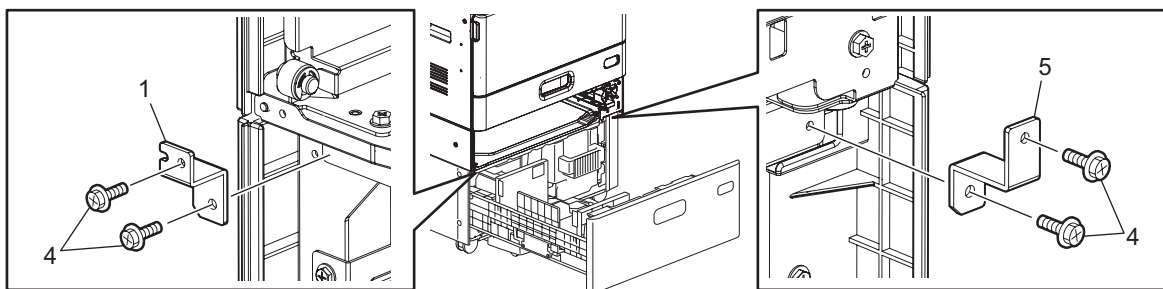

No.	Unit Name	Part Number	Description	Remarks	Reference
1	ACCESSORIES		BKT-JOINT-LEFT-FRONT		6LE99454000
2	ACCESSORIES		PLATE-JOINT		6LE99184000
3	ACCESSORIES		BKT-JOINT		6LE99185000
4	ACCESSORIES		TPHEX30X06-S-P		6LE68385000
5	ACCESSORIES		BKT-JOINT-RIGHT-FRONT		6LE99453000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

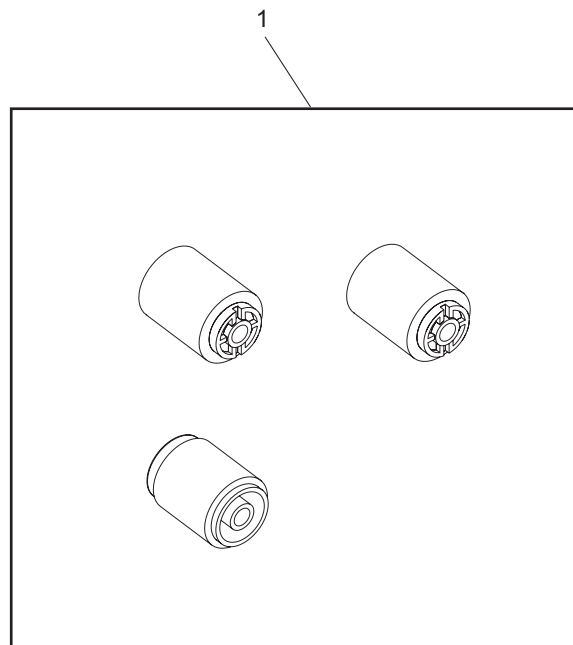

No.	Unit Name	Part Number	Description	Remarks	Reference
1	ROLLER-KIT	45735720	ROL-KIT-1026		6LE99304000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information