


KD-1032
Paper Feed Pedestal
Illustrated Parts Manual

060214A


CONTENTS

ASM-COVER	1
ASM-FRAME.....	2
ASM-DRIVE	3
ASM-COVER-GUIDE	4
FEED-ASY	5
DRAWER-ASM	6
ROL-KIT	10

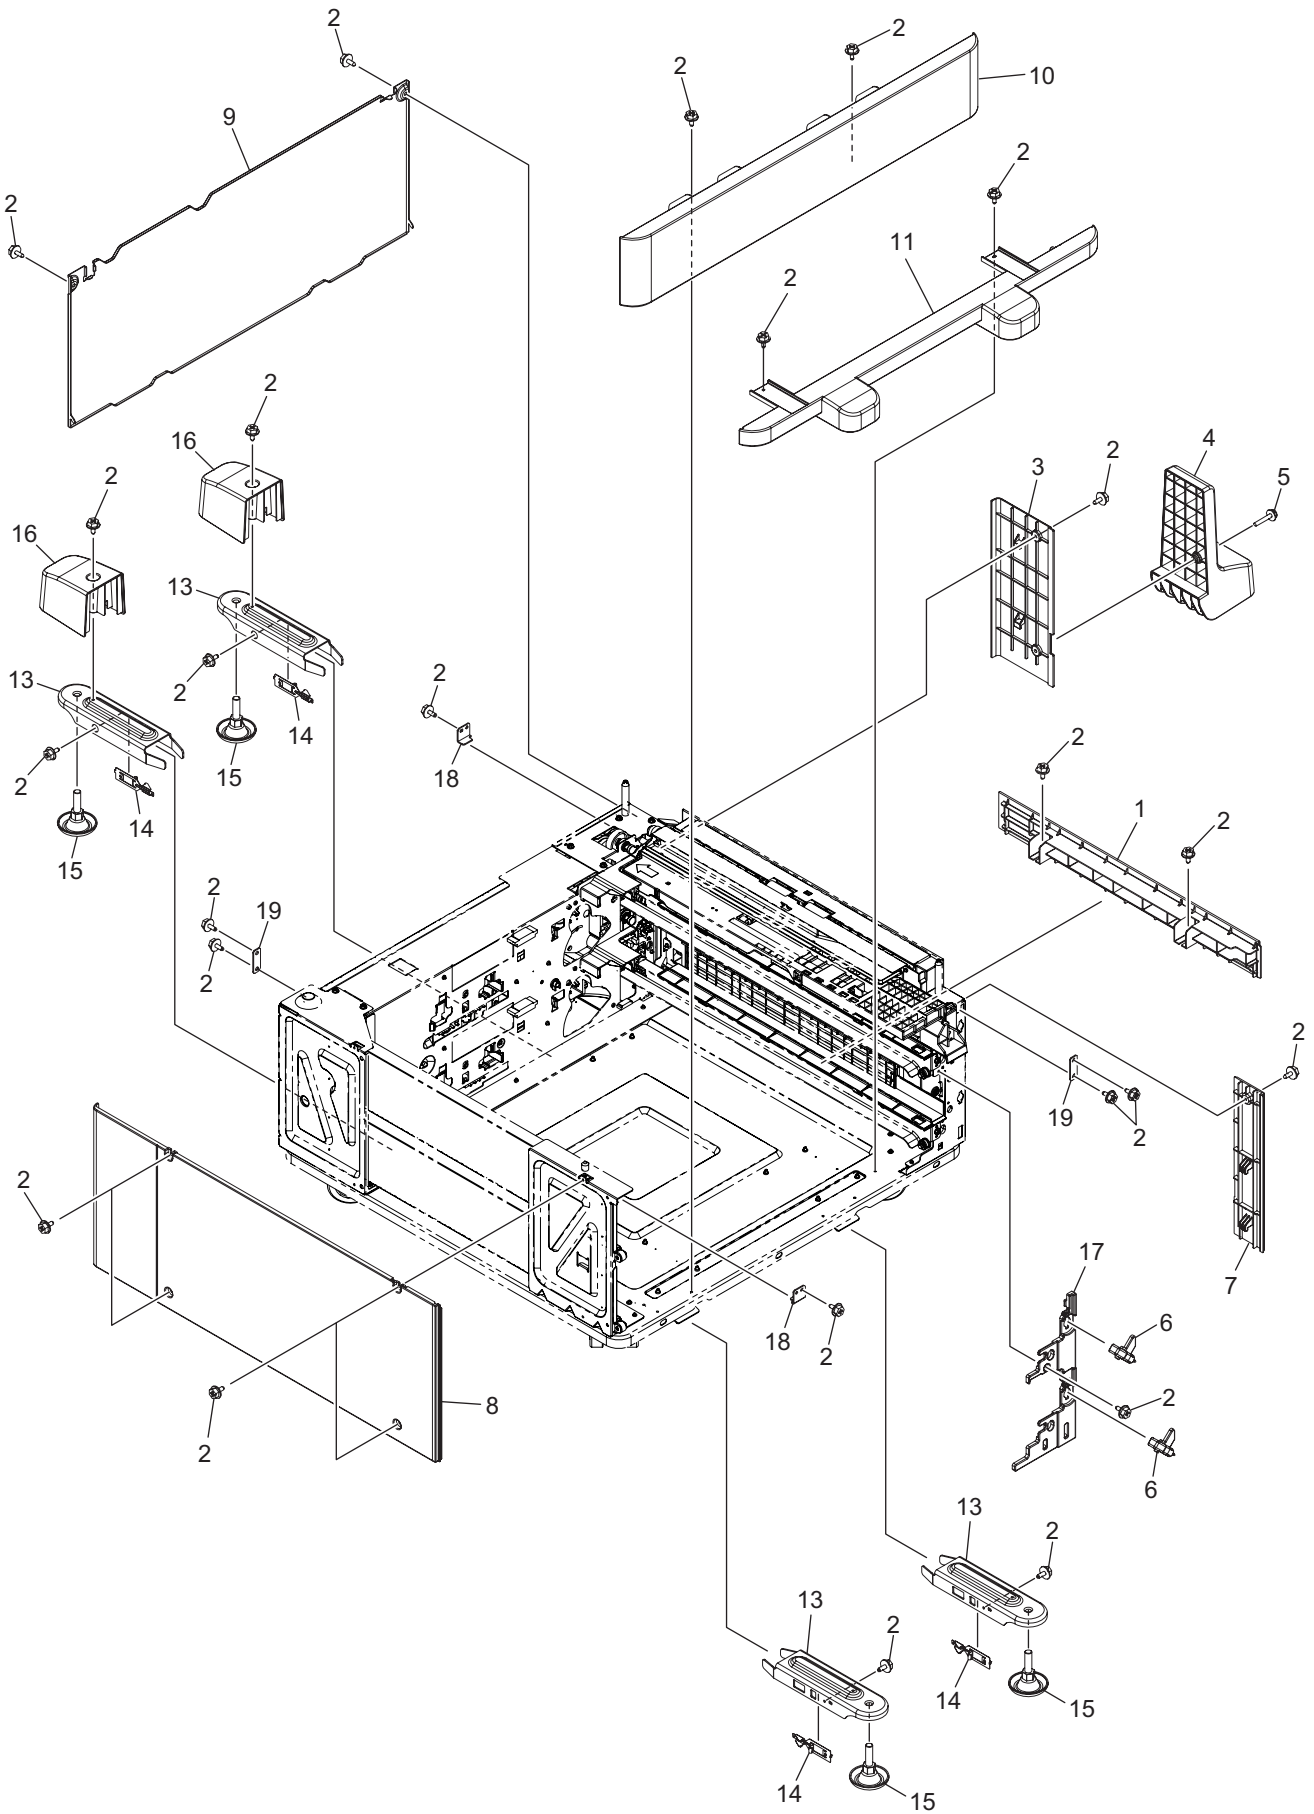


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASM-COVER		COVER-R-LOW-LOIRE		6LH58094000
2	ASM-COVER	45729634	S/TPS/FHEXM/R-3X6-ZU3		X0-02419000
3	ASM-COVER		COVER-R-R_FW		6LH58091100
4	ASM-COVER		FOOT-SIDE-PFP-RGT_FW		6LH58099100
5	ASM-COVER		S/PAN/SWWP-M3X14-NI		X0-02135000
6	ASM-COVER		LEVER-FEED-UNIT-H21X_H		6LJ56274000
7	ASM-COVER		COVER-R-F-PFP		6LJ66757000
8	ASM-COVER		COVER-LEFT-PFP		6LJ66826000
9	ASM-COVER		COVER-RIGHT-REAR-PFP		6LH58111000
10	ASM-COVER		COVER-F-L-PFP-H21X		6LJ66778000
11	ASM-COVER		COVER-SCART-PFP		6LJ66758000
13	ASM-COVER		BRKT-FOOT-M8-PFP-F47X		6LH58104000
14	ASM-COVER		SPG-F-FOOT-PFP-F47X		6LH58041000
15	ASM-COVER		ADJSTR-FOOT-M8-PFP-S		6LH58105000
16	ASM-COVER		COVER-FOOT-PFP		6LH58086000
17	ASM-COVER		COVER-FRT-PILLAR-R-PFP		6LJ66756000
18	ASM-COVER		BRKT-JOINT-P-R		6LH57937000
19	ASM-COVER		BRKT-JOINT-P-F-PFP		6LH57948000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

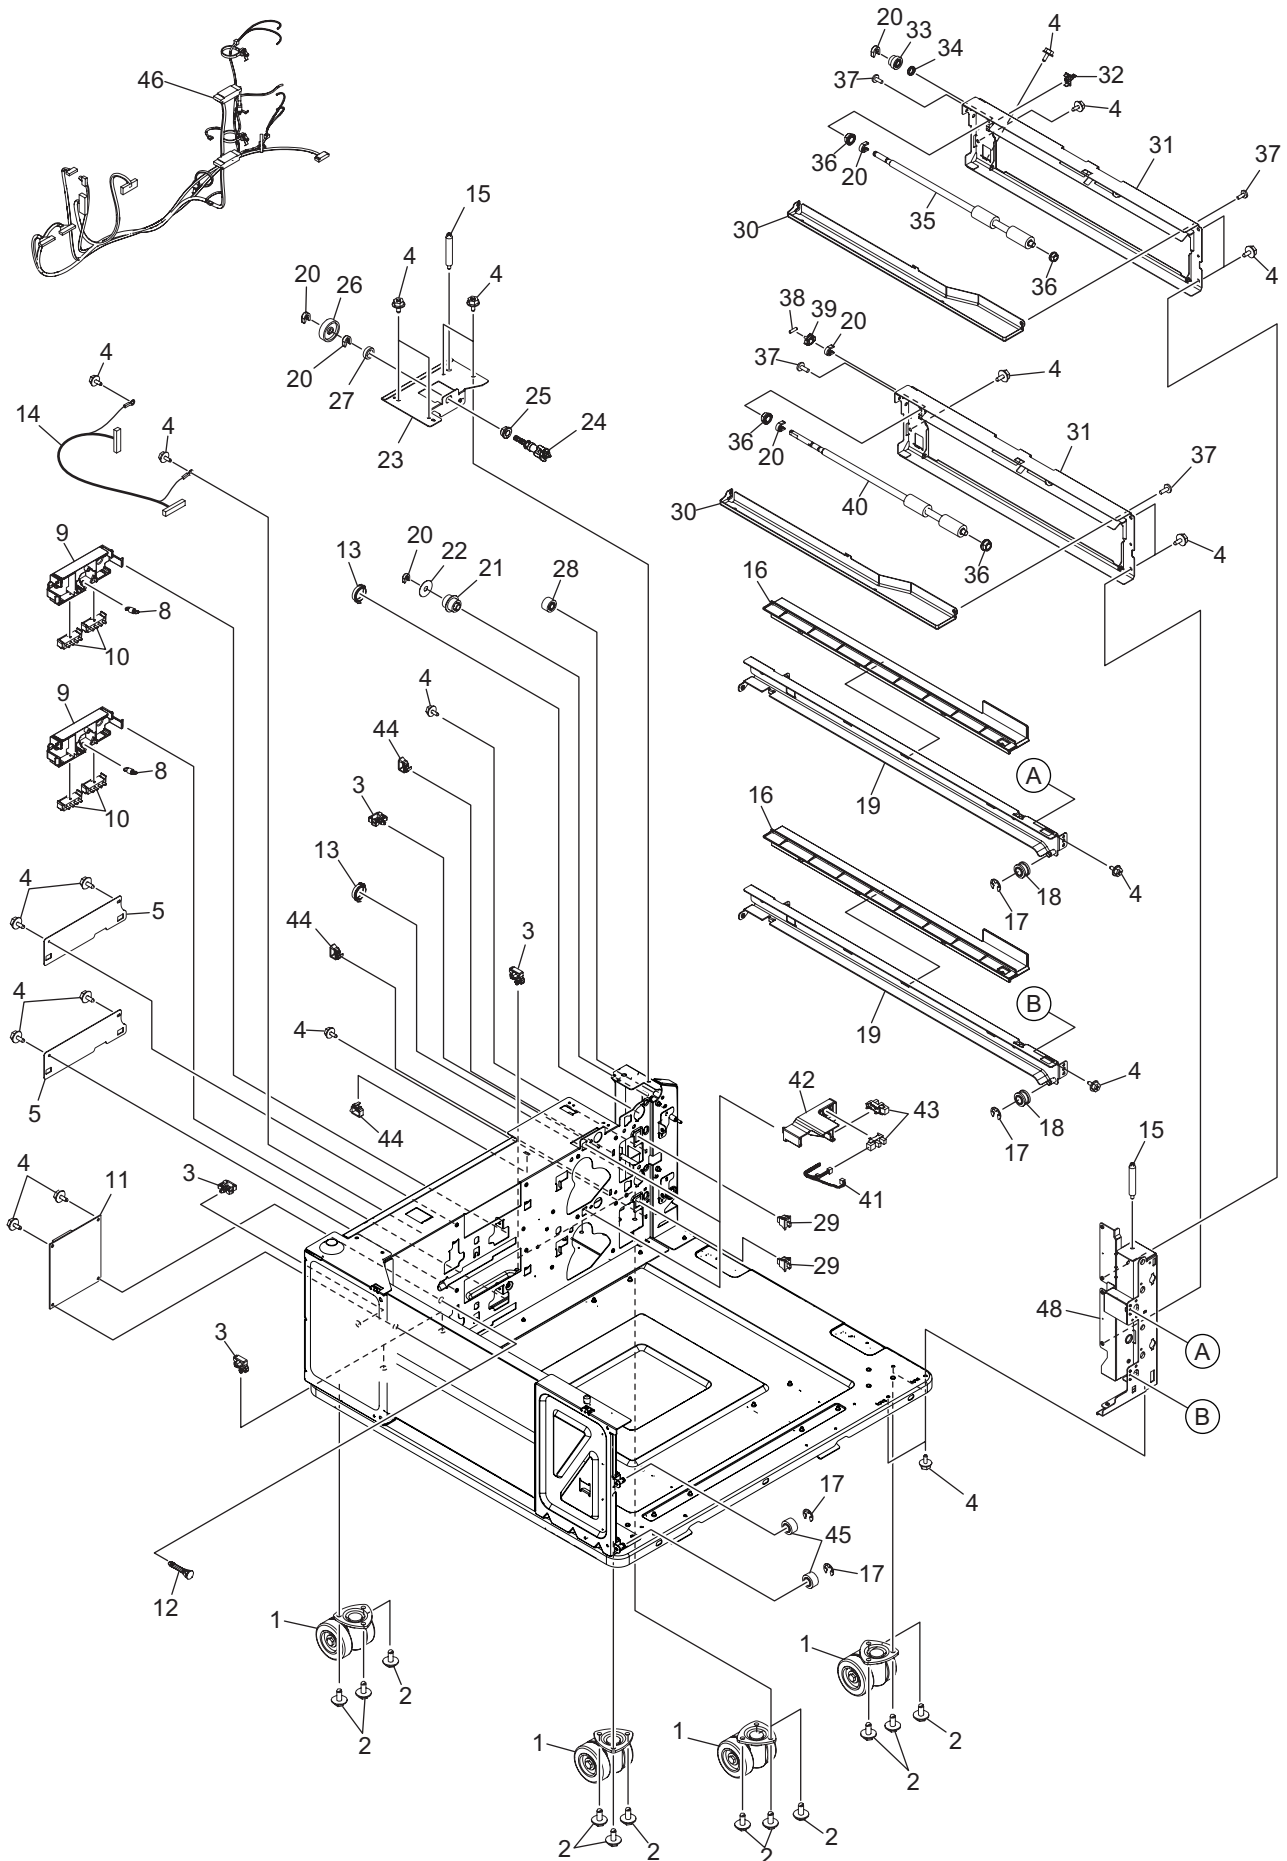


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASM-FRAME		BWP-50N-CUSTOM		6LH00856000
2	ASM-FRAME		S/TPS/FHEXM/R-4X8-ZU3		X0-02421000
3	ASM-FRAME		RLWC-2SV0		F0-01609000
4	ASM-FRAME	45729634	S/TPS/FHEXM/R-3X6-ZU3		X0-02419000
5	ASM-FRAME		PLATE-BLIND-PFP		6LJ66759000
8	ASM-FRAME		SPG-E-8R8XR9X19R9		6LJ56887000
9	ASM-FRAME		HOLDER-SNSR-CST-H21X		6LJ56818000
10	ASM-FRAME		PS-42C02-F NS		E0-14485000
11	ASM-FRAME		PWA-H-PFP-552		6LJ60742000
12	ASM-FRAME		KGLS-24RTV0		F0-00221000
13	ASM-FRAME		BUSH-CPL-FEED-PFU		6LJ66712000
14	ASM-FRAME		HRNS-PFP-552		6LJ60567000
15	ASM-FRAME		PIN-LOCAT-PFP		6LJ66780000
16	ASM-FRAME		RAIL-FEED-UNIT-L-PFP		6LJ66705000
17	ASM-FRAME	45729579	RR/E-5-SS		X0-00966000
18	ASM-FRAME		ROLL-RAIL-CST-H21X-1		6LJ69392000
19	ASM-FRAME		ASYS-RAIL-CST-RIGHT-PFP		6LJ66828000
20	ASM-FRAME	45729597	STOP-RING-6-5		4407972860
21	ASM-FRAME		GEAR-10S16_P2GT27-6-L		6LH57975000
22	ASM-FRAME		HWAS-PFP-SUS		41319076000
23	ASM-FRAME		PLATE-TOP-REAR-PFP		6LJ66742000
24	ASM-FRAME		CPL-DRV-L-PFP		6LJ66722000
25	ASM-FRAME	45729559	BUSH-6-POM		44201492000
26	ASM-FRAME		GEAR-10S28-6-D		6LA62276000
27	ASM-FRAME		CLR-CPL-PFP		6LJ66717000
28	ASM-FRAME		GEAR-10S16-6-M		6LH57965000
29	ASM-FRAME	45729601	CS1A-B2CA		E0-01853000
30	ASM-FRAME				6LJ66781000
31	ASM-FRAME				6LJ66703000
32	ASM-FRAME		PUSH-IDL-PFP		6LH57997000
33	ASM-FRAME		GEAR-10S16-06-PFP		6LJ66715000
34	ASM-FRAME		COLAR-0602		6LA32851000
35	ASM-FRAME		ROL-TR-2		6LH58004000
36	ASM-FRAME		BUSH-6-NU4		6LH53768000
37	ASM-FRAME	45729645	S/TPS/BID-3X6-ZU3		X0-02069000
38	ASM-FRAME		P/PRL/AH7-2X8-SS		X0-00979000
39	ASM-FRAME		CPG-ROL-PFP		6LH58084000
40	ASM-FRAME		ROL-TR-3		6LH58003000
41	ASM-FRAME		HRNS-PFP-EMP-552		6LJ60558000
42	ASM-FRAME		HOLDER-SNSR-FS-H21X_H		6LJ56265000
43	ASM-FRAME	45729574	LG2A14BL1		C0-17839000
44	ASM-FRAME		RLWT-2V0		F0-01459000
45	ASM-FRAME		ROLL-RAIL-CST-H21X-2		6LJ69393000
46	ASM-FRAME		HRNS-PFP-INSIDE-552		6LJ60581000
48	ASM-FRAME		ASYS-FRM-FRONT-RIGHT-PFP		6LJ66725000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

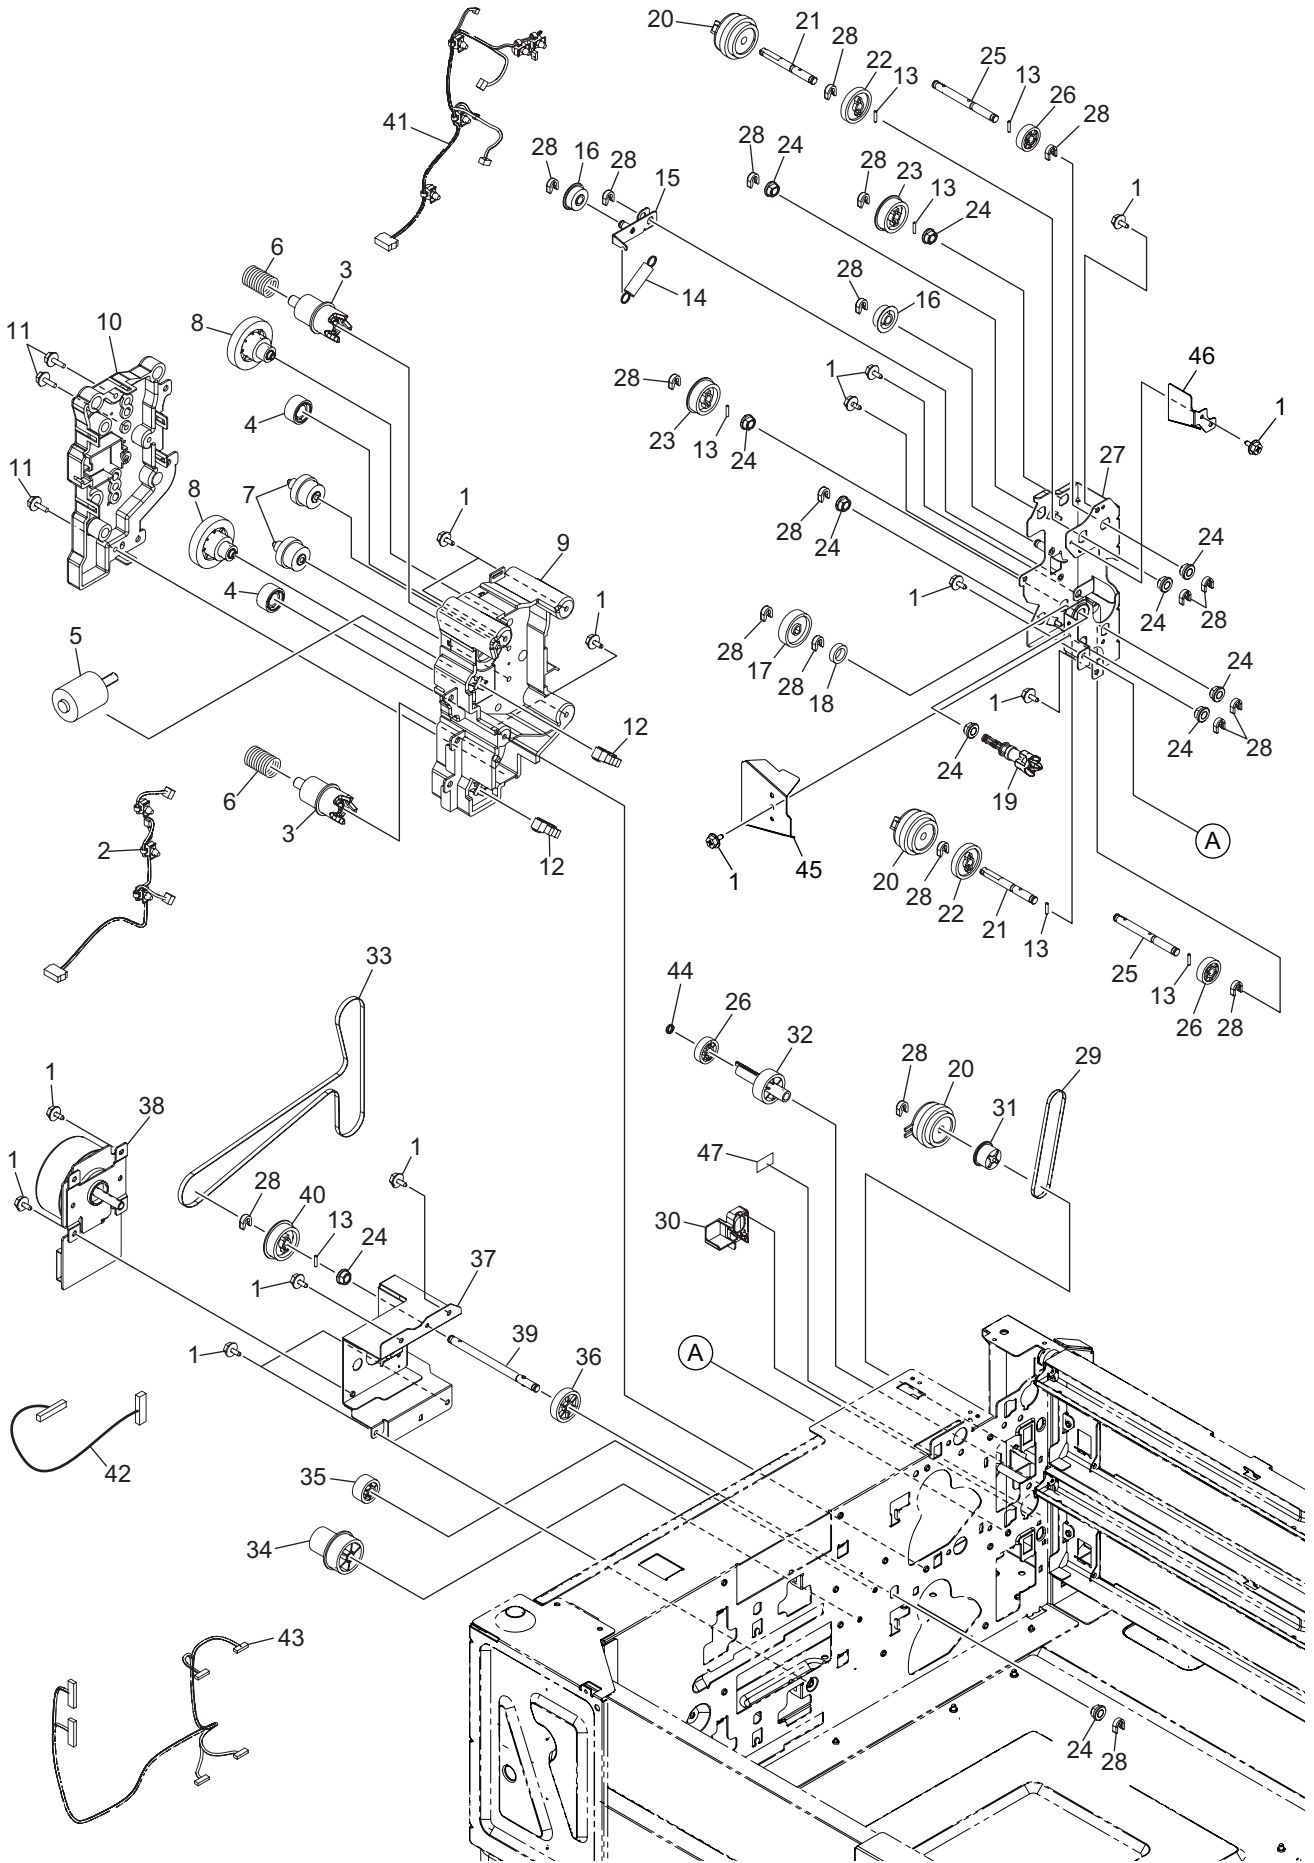


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASM-DRIVE	45729634	S/TPS/FHEXM/R-3X6-ZU3		X0-02419000
2	ASM-DRIVE		HRNS-PFP-NEMP-552		6LJ60582000
3	ASM-DRIVE		GEAR-8S26-H21X		6LJ56846000
4	ASM-DRIVE	45729569	GEAR-8S25-10		6LH05707000
5	ASM-DRIVE		MOTR.D-TRAY-CST		6LA56976000
6	ASM-DRIVE	45729651	SPC172-100-3400		4401966050
7	ASM-DRIVE	45729571	G05H-45/G05S-15		44201854000
8	ASM-DRIVE	45729568	G06S-13-G05S-80		44201853000
9	ASM-DRIVE		CASE-TRAYUP-GEAR-F-PFP		6LJ66752000
10	ASM-DRIVE		CASE-TRAYUP-GEAR-R-PFP		6LJ66753000
11	ASM-DRIVE	45729589	S/TPP/FHEXM-3X8-NI		X0-02247000
12	ASM-DRIVE	45729574	LG2A14BL1		C0-17839000
13	ASM-DRIVE		P/PRL/AH7-2X10-SS		X0-00980000
14	ASM-DRIVE		SPG-E-TENS-PFP		6LJ66754000
15	ASM-DRIVE		ASYS-BRKT-DRV-TENS-PFP		6LJ66706000
16	ASM-DRIVE		PULLY-DRV-TENS-PFP		6LJ66724000
17	ASM-DRIVE		GEAR-10S28-6-D		6LA62276000
18	ASM-DRIVE		CLR-CPL-PFP		6LJ66717000
19	ASM-DRIVE		CPL-DRV-L-PFP		6LJ66722000
20	ASM-DRIVE	45729565	CLUTCH-50C-G28-6		6LH51224000
21	ASM-DRIVE		SHAFT-DRV-1-PFP		6LJ66713000
22	ASM-DRIVE		GEAR-10S028		6LE59993000
23	ASM-DRIVE		PULLY-S3M28-6-E		6LH57972000
24	ASM-DRIVE	45729559	BUSH-6-POM		44201492000
25	ASM-DRIVE		SHAFT-DRV-2-PFP		6LJ66720000
26	ASM-DRIVE		GEAR-10S20-6-E		6LH57979000
27	ASM-DRIVE		ASYS-BRKT-DRV-PFP		6LJ66709000
28	ASM-DRIVE	45729597	STOP-RING-6-5		4407972860
29	ASM-DRIVE		BLT/T-202-2GT-3		6LJ66718000
30	ASM-DRIVE		GUIDE-HRNS-SNSR-PFU		6LJ69412000
31	ASM-DRIVE		PULLY-2GT027-6		6LH58085000
32	ASM-DRIVE		GEAR-10S25-6		6LJ66719000
33	ASM-DRIVE		BLT/T-633-S3M-4		6LJ66760000
34	ASM-DRIVE		GEAR-10S29_5H48-6-B		6LH58025000
35	ASM-DRIVE		GEAR-10S20-6-C		6LH57954000
36	ASM-DRIVE		GEAR-10S26-6-D		6LH57962000
37	ASM-DRIVE		BRKT-DRV-MOTOR-PFP		6LJ66723000
38	ASM-DRIVE		MOTR_D-FUSER-450		6LH36234000
39	ASM-DRIVE		ASYS-SHAFT-GEAR-MOT-PFP		6LJ66782000
40	ASM-DRIVE		PULLY-S3M30-6-D		6LH57978000
41	ASM-DRIVE		HRNS-PFP-CSTSW-552		6LJ60583000
42	ASM-DRIVE		HRNS-PFP-MOT-552		6LJ60559000
43	ASM-DRIVE		HRNS-PFP-PSIZE-552		6LJ60560000
44	ASM-DRIVE		COLAR-0602		6LA32851000
45	ASM-DRIVE		PLATE-GUARD-GEAR-PFP-LWR		6LJ66806000
46	ASM-DRIVE		PLATE-GUARD-GEAR-PFP-UPR		6LJ66805000
47	ASM-DRIVE		MYLAR-GUIDE-HRNS-SNSR		6LJ66820000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

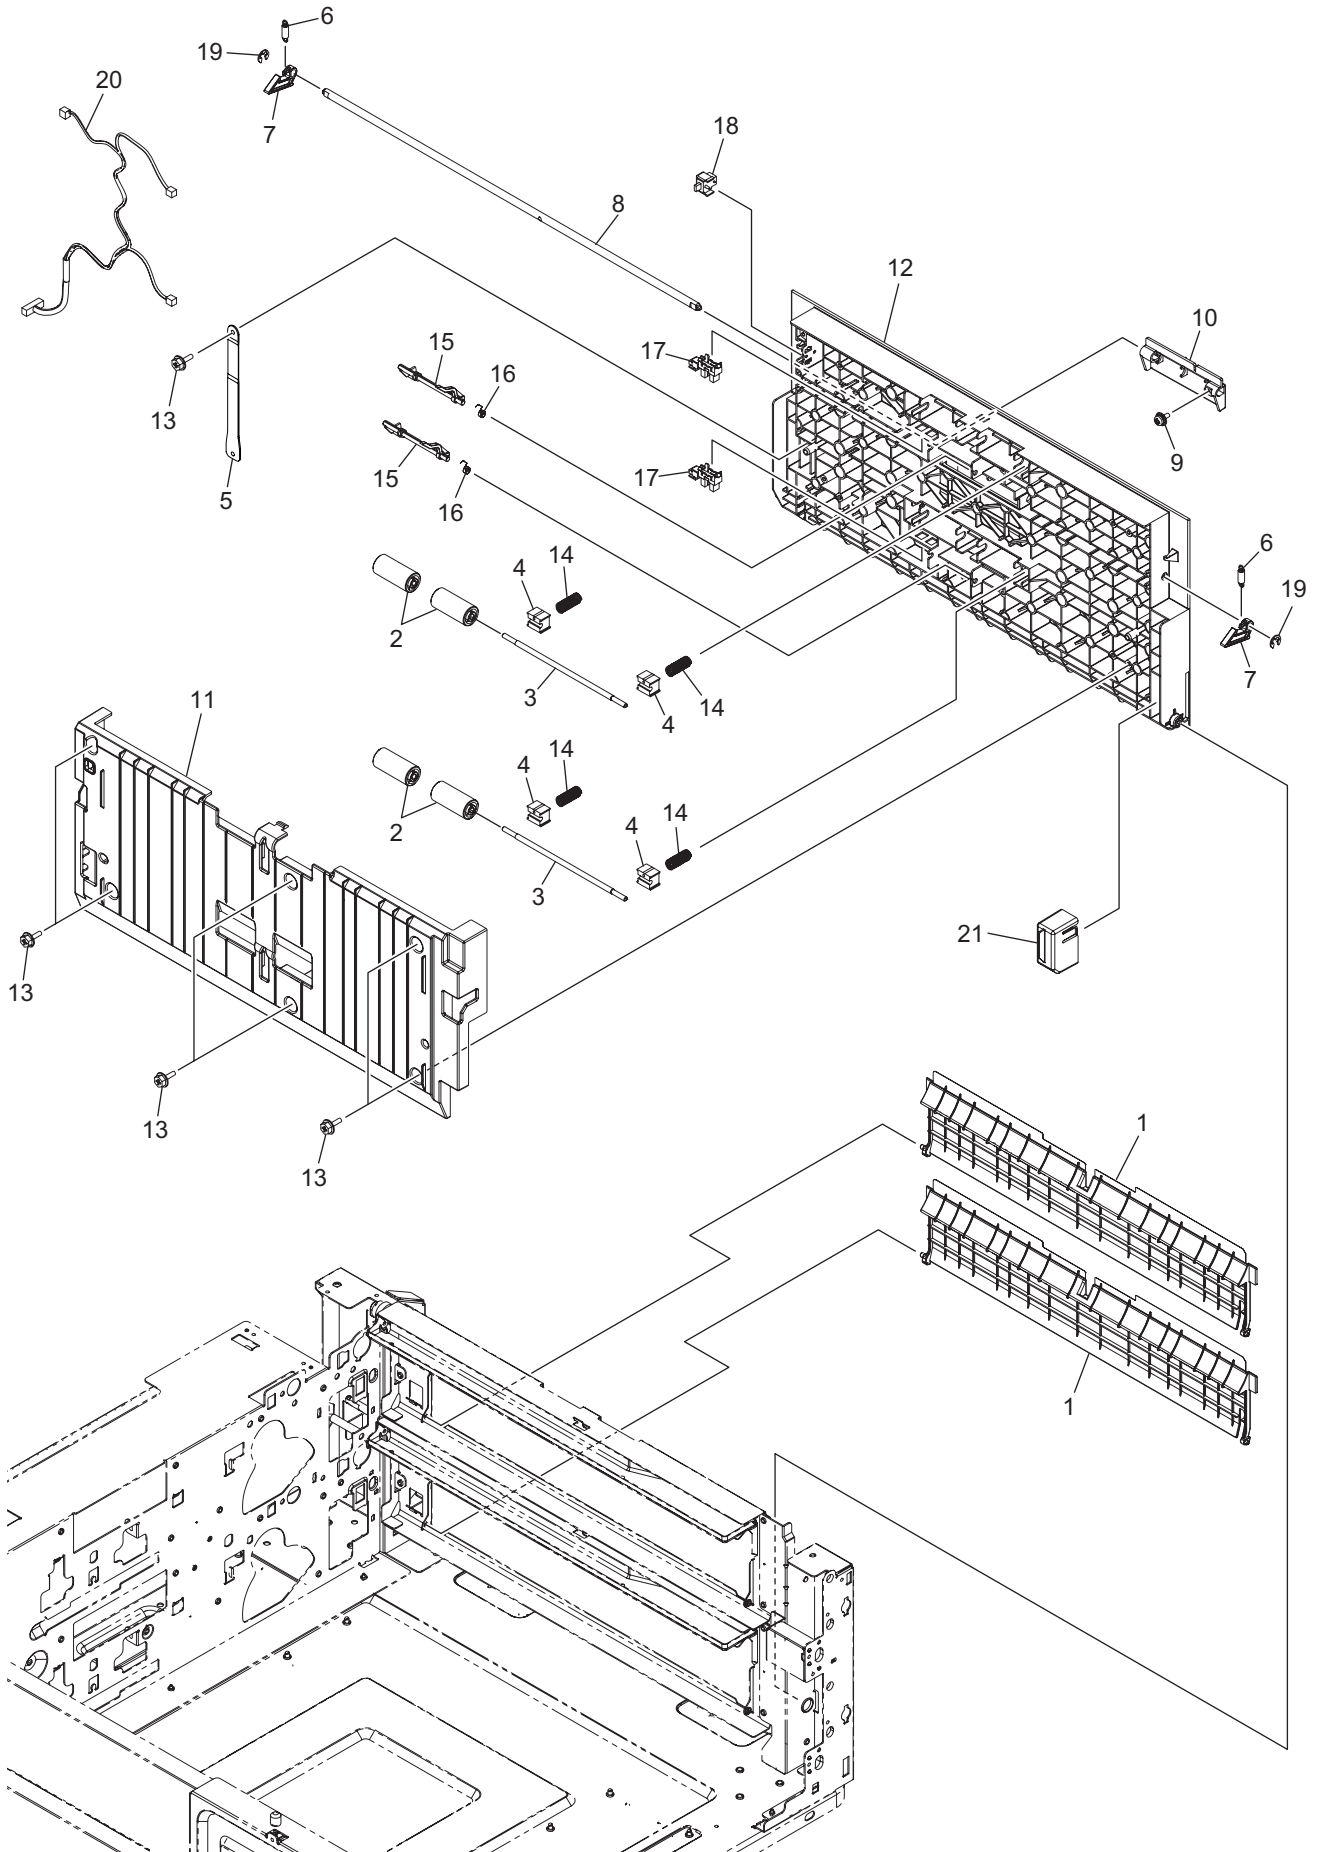


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASM-COVER-GUIDE		ASYS-GUIDE-PAPER-PFP_N		6LJ66836000
2	ASM-COVER-GUIDE		ROL-RELAY-IDL-PFP		6LH57916000
3	ASM-COVER-GUIDE		SHAFT-RELAY-IDL-PFP		6LH57918000
4	ASM-COVER-GUIDE	45729613	BUSH-FEED-IDL		6LH34715000
5	ASM-COVER-GUIDE		STOPPER-STRING-PFP-1032		6LJ66793000
6	ASM-COVER-GUIDE		SPG-E-4R9XR6X18R2-HOOK		6LH58002000
7	ASM-COVER-GUIDE		HOOK-COVER-PFP		6LH58005000
8	ASM-COVER-GUIDE		SHAFT-HOOK-PFP		6LH57928000
9	ASM-COVER-GUIDE	45729644	S/PAN/SWWP-M3X6-ZU3		X0-02551000
10	ASM-COVER-GUIDE		KNOB-COVER-LOIRE-N		6LH57995100
11	ASM-COVER-GUIDE		GUIDE-COVER-PFP		6LH57999000
12	ASM-COVER-GUIDE		COVER-RIGHT-DOOR-N		6LH58000100
13	ASM-COVER-GUIDE	45729589	S/TPP/FHEXM-3X8-NI		X0-02247000
14	ASM-COVER-GUIDE		SPG-C-8R4XR9X29		6LJ69420000
15	ASM-COVER-GUIDE		ACTR-LOIRE-PFP		6LH57921000
16	ASM-COVER-GUIDE		SPG-T-SNSR-LOW-350		6LH57936000
17	ASM-COVER-GUIDE		LG248BL1		C0-14266000
18	ASM-COVER-GUIDE	45729654	SP-CS3A-B2BA		4402859600
19	ASM-COVER-GUIDE	45729577	RR/E-3-SS		X0-00964000
20	ASM-COVER-GUIDE		HRNS-PFP-FED-CV-503		6LH61359000
21	ASM-COVER-GUIDE		BLK-GUIDE-SET-PFP		6LH57998000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

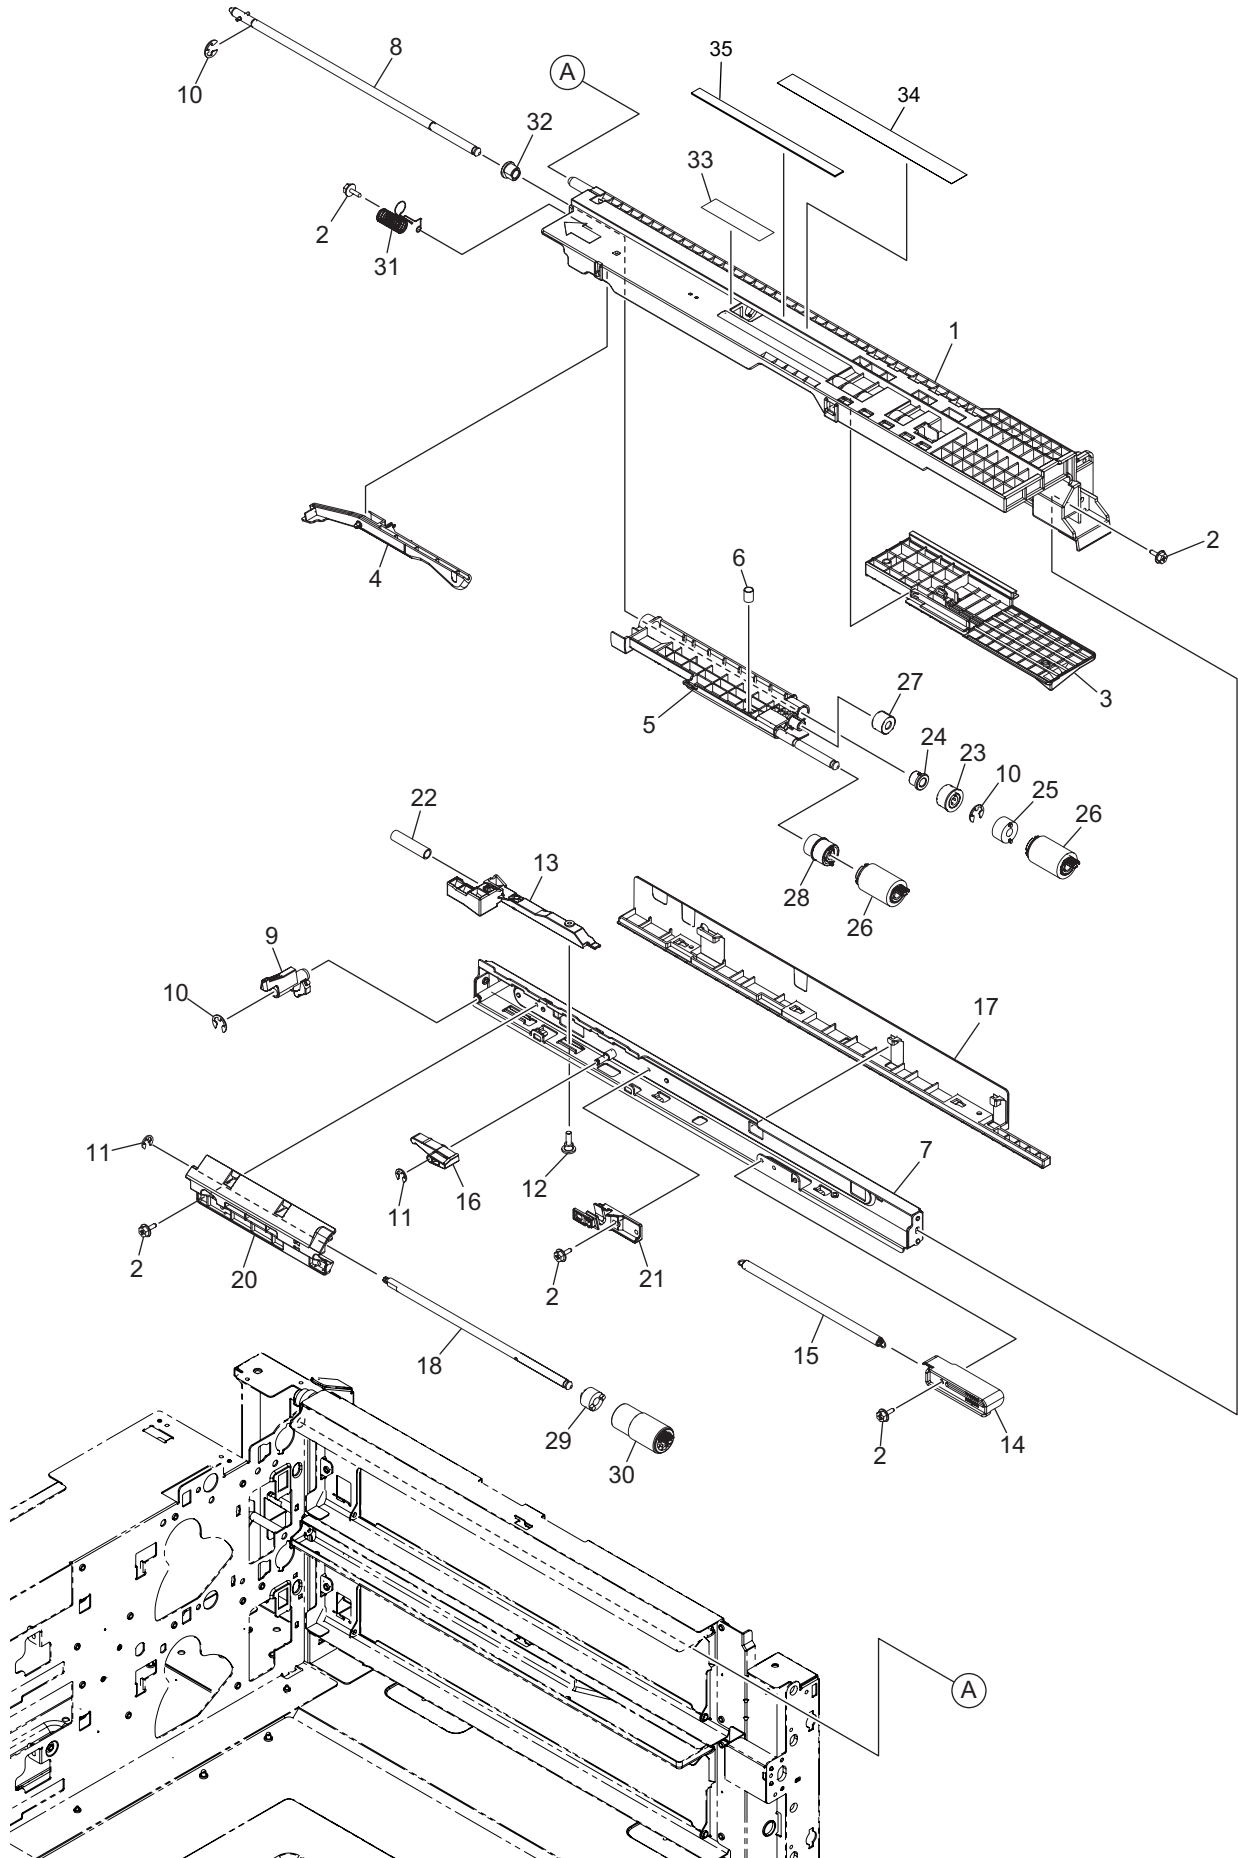


No.	Unit Name	Part Number	Description	Remarks	Reference
1	FEED-ASY		FRAME-FEED-H21X_H		6LJ56273000
2	FEED-ASY	45729639	S/TPS/FHEXM/R-3X8-ZU3		X0-02420000
3	FEED-ASY		GUIDE-FEED-UP-F-H21X_H		6LJ56263000
4	FEED-ASY		ACTR-EMPTY-CST-H2X_H		6LJ56248000
5	FEED-ASY		ARM-PICK-H21X_H		6LJ56275000
6	FEED-ASY		SPG-C-PU-H21X_H		6LJ56268000
7	FEED-ASY		ASYS-STAY-FEED-H21X_H		6LJ56262000
8	FEED-ASY		ASYS-SFT-ROL-FEED-H21X_H		6LJ56276000
9	FEED-ASY		LEVER-PU-LINK-H21X_H		6LJ56250000
10	FEED-ASY	45729579	RR/E-5-SS		X0-00966000
11	FEED-ASY	45729577	RR/E-3-SS		X0-00964000
12	FEED-ASY		SCREW-M3X8-3.2-P		6LH05511000
13	FEED-ASY		SLIDER-SPT-H21X_H		6LJ56266000
14	FEED-ASY		HOLDER-SPE-SPT-H21X_H		6LJ56247000
15	FEED-ASY		SPG-E-SPT-H21X_H		6LJ56270000
16	FEED-ASY		ARM-SFT-SPT-H21X_H		6LJ56249000
17	FEED-ASY		RAIL-FEED-UNIT-L-H21X_H		6LJ56272000
18	FEED-ASY		ASYS-SHAFT-ROL-SPT-H21X_H		6LJ56279000
20	FEED-ASY		GUIDE-FEED-R-H21X_H		6LJ56264000
21	FEED-ASY		GUIDE-SFT-SPT-H21X_H		6LJ56258000
22	FEED-ASY		SPG-C-SLIDER-H21X_H		6LJ56271000
23	FEED-ASY		ASYS-GEAR-5S30-6L		6LJ56239000
24	FEED-ASY		BUSH-6X10X9F-POM		6LJ56246000
25	FEED-ASY	45729563	CLUTCH-6-L		6LE69842000
26	FEED-ASY	45689715	ASYS-ROLL-FEED-H21X_H		6LJ56242000
27	FEED-ASY		GEAR-5S25-8		6LJ56244000
28	FEED-ASY		GEAR-5S30-6		6LJ56245000
29	FEED-ASY		TL-SEP-ORG-400		6LJ56289000
30	FEED-ASY	45689716	ASYS-ROLL-SPT-H21X_H		6LJ56243000
31	FEED-ASY		SPG-EARTH-FEED-UNIT		6LJ56267000
32	FEED-ASY	45729558	BUSH-F6-GCB		6LA03977000
33	FEED-ASY		MYLAR-BLIND-FEED-UNIT		6LJ66800000
34	FEED-ASY		MYLAR-SPACE-FEED		6LJ56295000
35	FEED-ASY		RUBBER-SPACE-FEED		6LJ56296000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

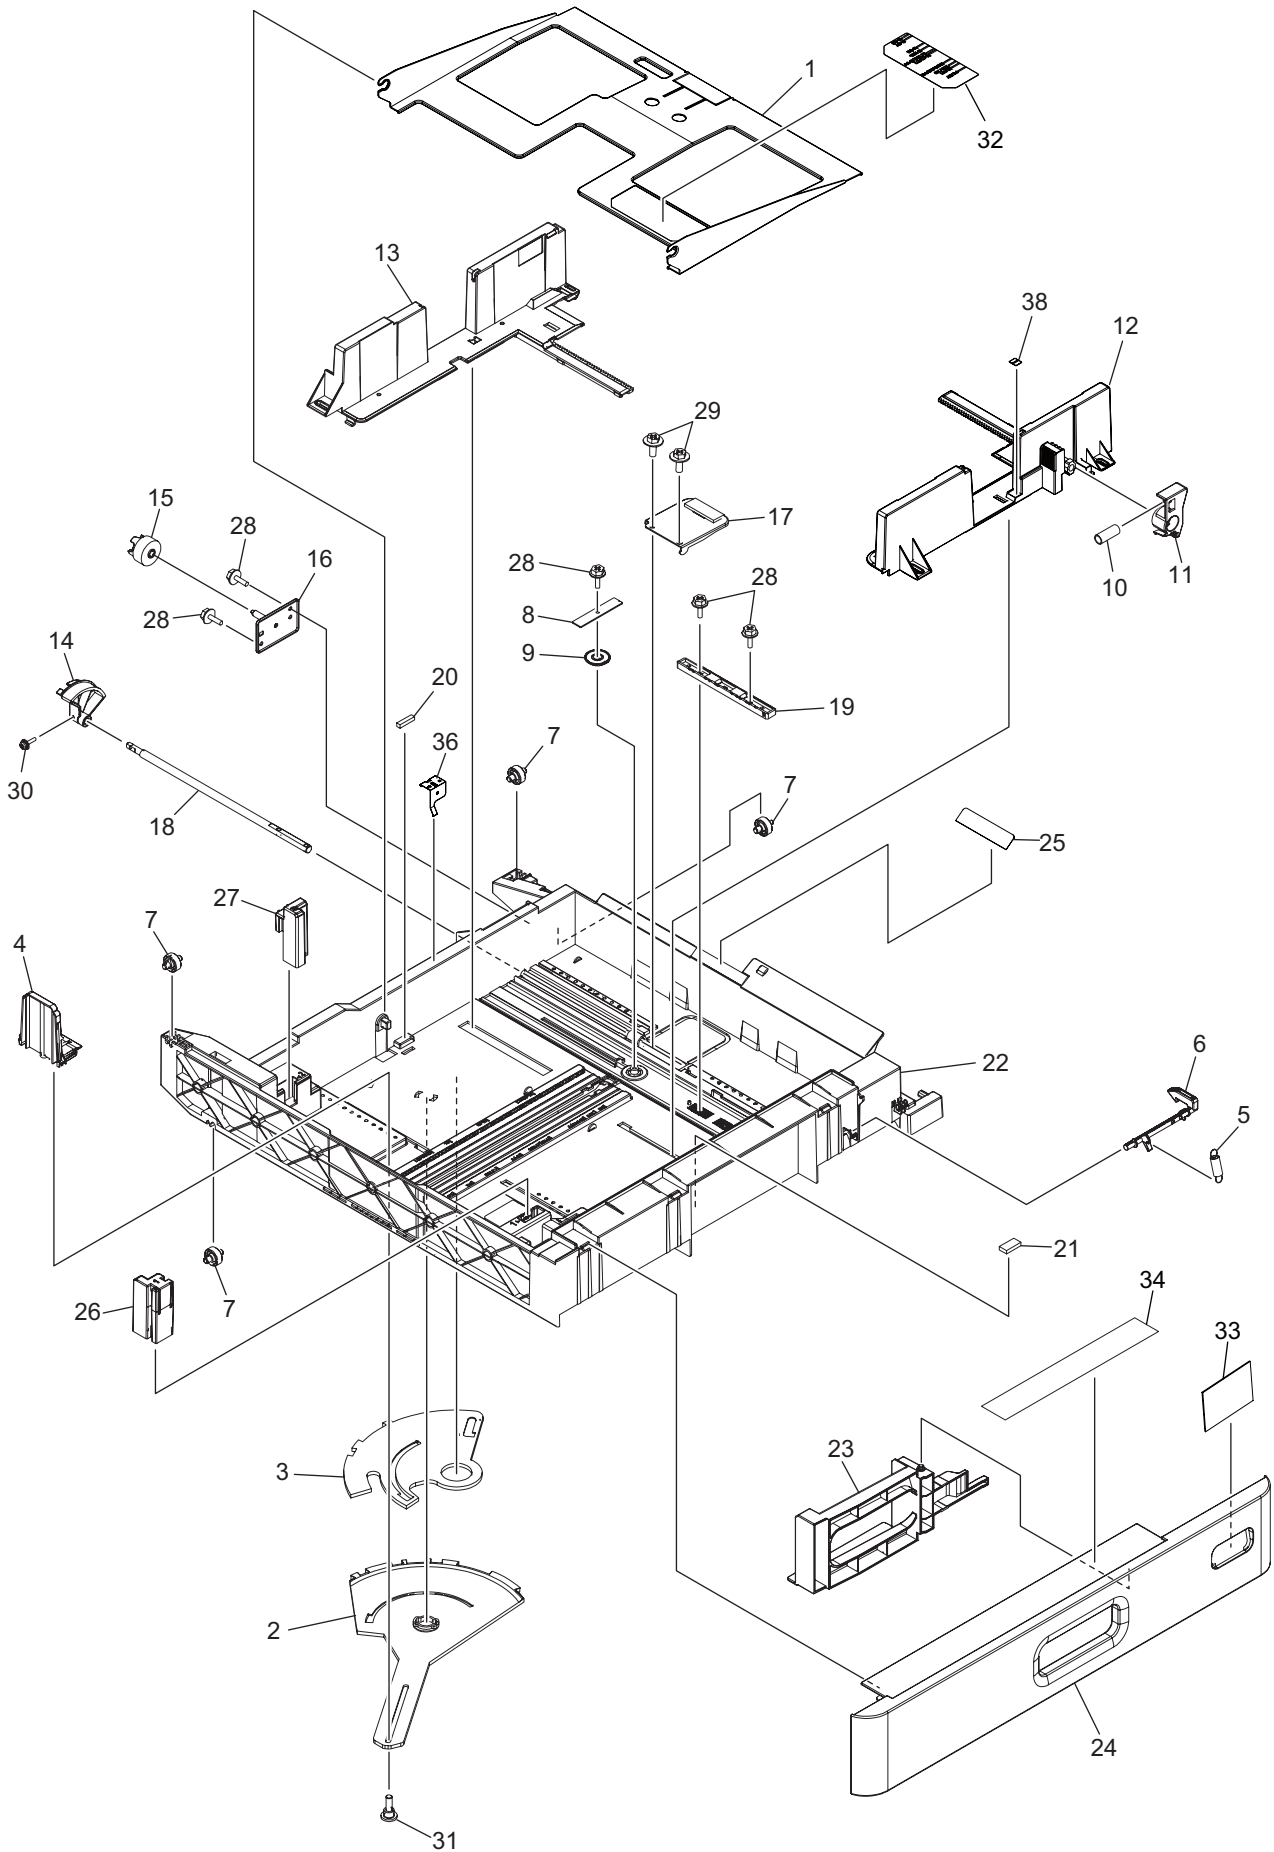

No.	Unit Name	Part Number	Description	Remarks	Reference
1	DRAWER-ASM		ASYS-TRAY-CST-H-H21X		6LJ56959000
2	DRAWER-ASM		PUSHER-END-CST-F43X		6LJ08007000
3	DRAWER-ASM		PUSHER-SIDE-CST-F43X		6LH05721000
4	DRAWER-ASM		WALL-END-CST-H-H21X		6LJ56827000
5	DRAWER-ASM		SPG-E-8R9XR9X29R5		6LJ56839000
6	DRAWER-ASM	45729625	LVR-CST2-H-H21X_E_SHAFT		6LJ56925000
7	DRAWER-ASM		ROLL-CST-H21X		6LJ56845000
8	DRAWER-ASM		PLT-WALL-GEAR-G		6LJ46917000
9	DRAWER-ASM	45729620	GEAR-10S18-8-TRAY		6LE53717000
10	DRAWER-ASM		SPC-LVR-WALL-F		6LA56695000
11	DRAWER-ASM		LEVER-LOCK-WALL-H21X		6LJ56802000
12	DRAWER-ASM		SLIDE-WALL-F-H21X-H		6LJ56957000
13	DRAWER-ASM		ASYS-SLIDE-WALL-R-H21X-H		6LJ56872000
14	DRAWER-ASM		GEAR-DRV-TRAYUP-SFT-H21X		6LJ56832000
15	DRAWER-ASM		CPG-TRAY-UP-H21X		6LJ56847000
16	DRAWER-ASM		ASYS-PLATE-DRV-CST-H21X		6LJ56851000
17	DRAWER-ASM		ASYS-LEVER-ELV-CST-F43X		6LH05746000
18	DRAWER-ASM		SHAFT-ELV-CST-H21X		6LJ56910000
19	DRAWER-ASM		WALL-STOP-H21X		6LJ56815000
20	DRAWER-ASM		CHSH-CST-F47X		6LH51643000
21	DRAWER-ASM		CUSH-CST-S		6LH05741000
22	DRAWER-ASM		CST-H21X-SR		6LJ56938000
23	DRAWER-ASM		HNDL-CST-H21X		6LJ56838000
24	DRAWER-ASM		COVER-CST-H-H21X		6LJ56926000
25	DRAWER-ASM		SHEET-CST-H21X		6LJ66823000
26	DRAWER-ASM		WALL-LONGPAPER-F-H-H21X		6LJ56833000
27	DRAWER-ASM		WALL-LONGPAPER-R-H-H21X		6LJ56834000
28	DRAWER-ASM	45729589	S/TPP/FHEXM-3X8-NI		X0-02247000
29	DRAWER-ASM	45729640	S/FHEXM-M4X8-NI		X0-02235000
30	DRAWER-ASM	45729643	S/PAN/SWWP-M3X10-NI		X0-00094000
31	DRAWER-ASM		SCREW-M3X8-3.2-P		6LH05511000
32	DRAWER-ASM		LBL_P-SIZE-SRA3-H21X-N		6LJ56954000
33A	DRAWER-ASM		SIZE-CST-450-A4		6LH31900000
33B	DRAWER-ASM		SIZE-CST-450-LT		6LH31900100
34	DRAWER-ASM		LBL_O-GUIDE-CST-MY1040-N		6LJ56952000
36	DRAWER-ASM		SPG-F-TRAY-CST-H21Y		6LJ56943000
38	DRAWER-ASM		LBL_P-SIZE-REF-H21X		6LJ56953000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

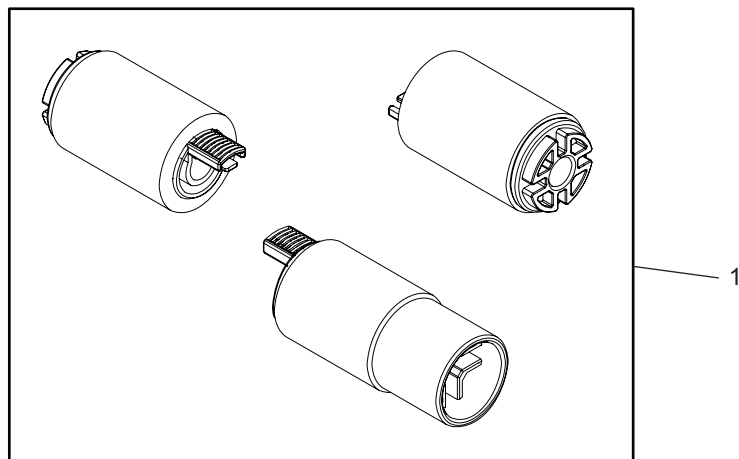

No.	Unit Name	Part Number	Description	Remarks	Reference
1	ROL-KIT	45735721	ROL-KIT-FC30		6LJ70383000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

