


MJ-1036
Inner Finisher
Illustrated Parts Manual

060214A


CONTENTS

ASYB-TRAY	1
ASYB-DRIVE-TRAY	2
ASYB-COVER-FRAME	3
ASYB-MOT-DRIVE	4
ASYB-GID-FEED-SUB.....	5
ASYB-PICK-GID	6
ASYB-ROL-FEED	7
ASYB-GID-FIN-ENT.....	8
ASYB-GEAR-DRIVE	9
ASYB-BASE-FRAME	10
ASYB-FIN-SEG-1.....	11
ASYB-FIN-SEG-2.....	12
ASYB-TRAY-SEG.....	13
ASYB-ROL-PR-EXIT.....	14
ASYB-STAY&FAN	15
ASYB-GUIDE&RAIL.....	16
ASYB-ENT-UNIT-F.....	17
ASYB-GID-ENT-BASE-1	18
ASYB-GID-ENT-BASE-2.....	19
ASYB-GID-FED.....	20
ASYB-INST-PART	21
HARNESS.....	40
DOWNLOAD JIGS	51

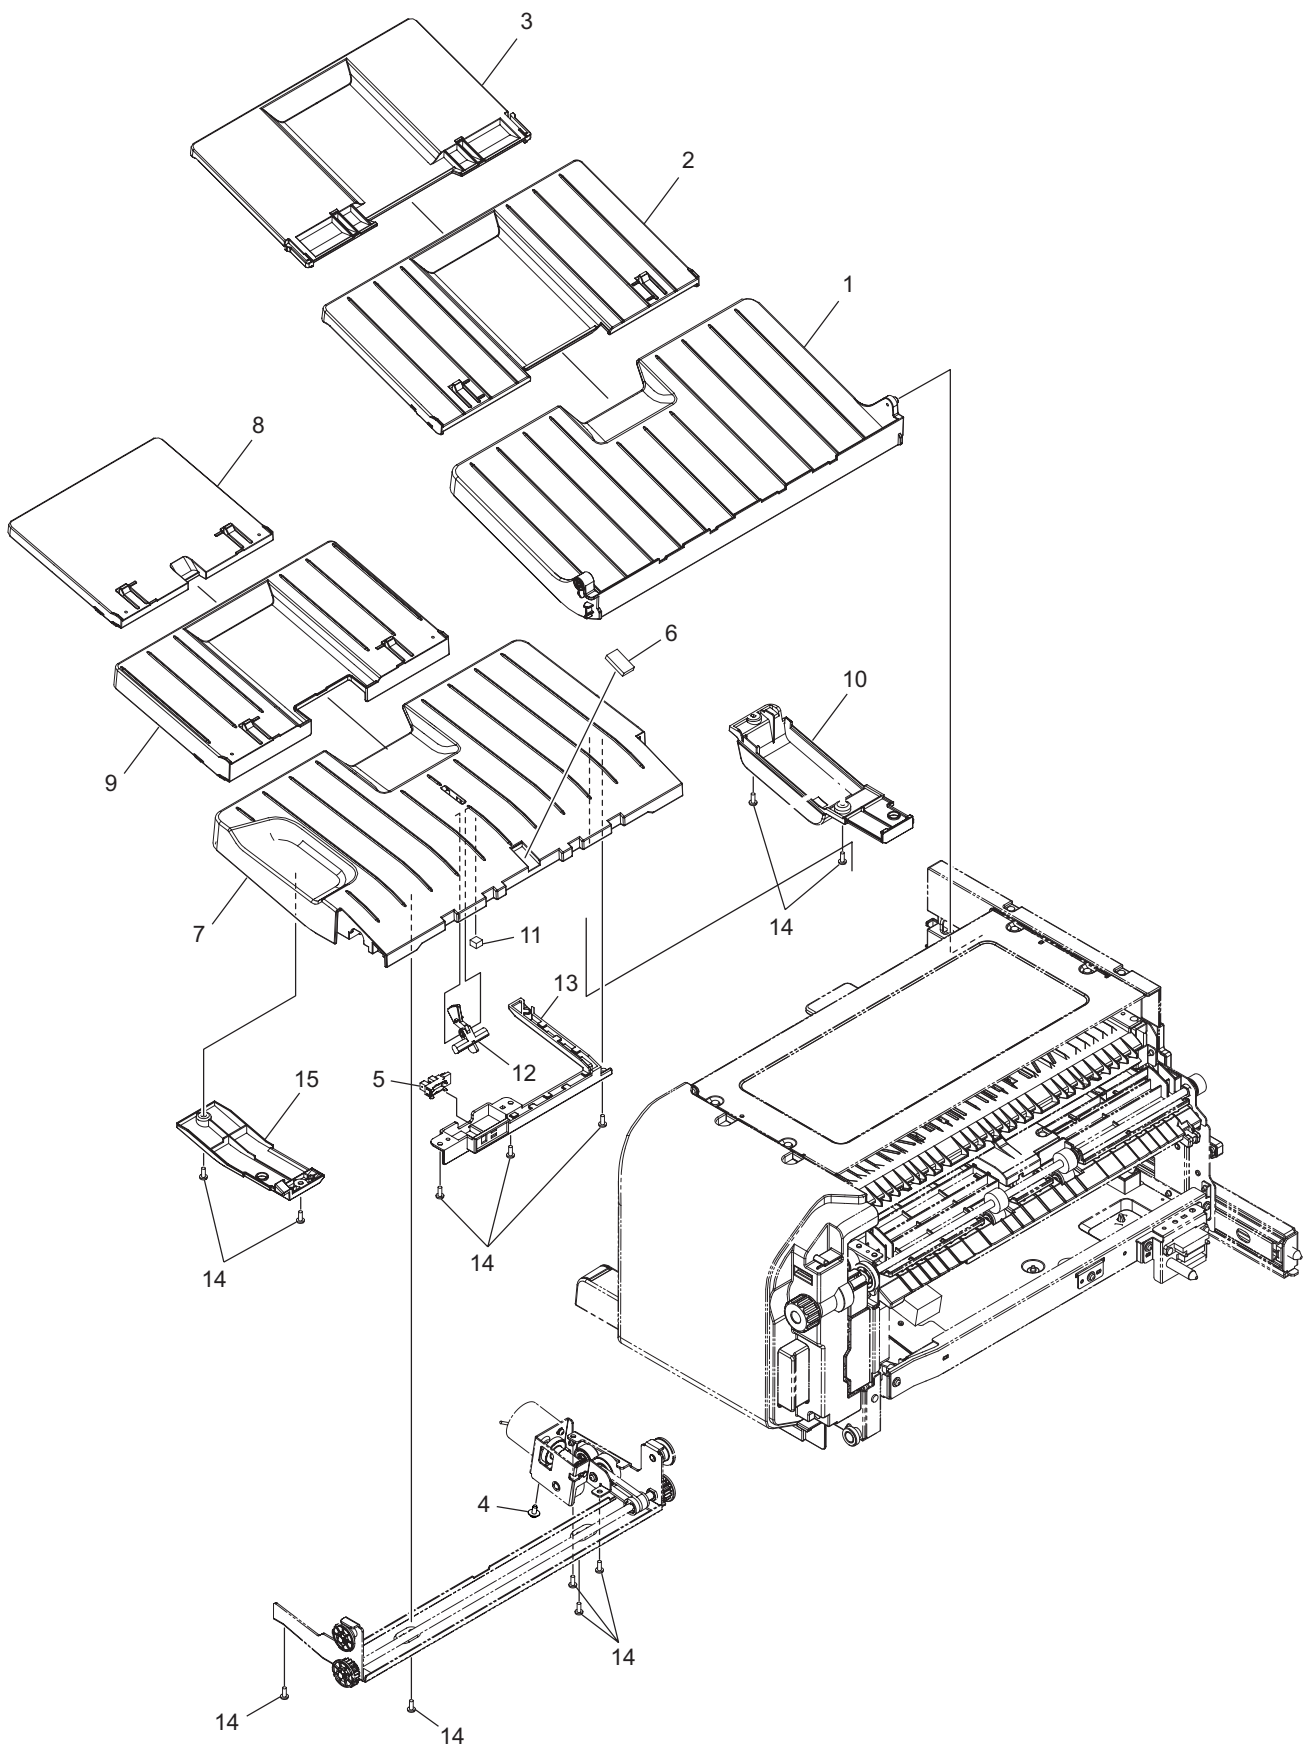


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-TRAY	45689773	TRAY-SUB1-FW		4B54518000
2	ASYB-TRAY	45689774	TRAY-SUB2-FW		4B54519000
3	ASYB-TRAY	45689775	TRAY-SUB3-FW		4B54520000
4	ASYB-TRAY		SCR-030-060		6LJ19998000
5	ASYB-TRAY		GP1S173LCSOF		6LJ20009000
6	ASYB-TRAY		CUSH-S-TRAY		6LJ20119000
7	ASYB-TRAY	45689776	TRAY-MAIN-FW		4B54521000
8	ASYB-TRAY	45689777	TRAY-MAIN1-FW		4B54523000
9	ASYB-TRAY	45689778	TRAY-MAIN2-FW		4B54522000
10	ASYB-TRAY	45689779	COV-TRY-MOT-FW		4B54524000
11	ASYB-TRAY		DAMPER-TRY-SEN		6LJ19814000
12	ASYB-TRAY		LVR-TRY-MAIN-ENP		6LJ19773000
13	ASYB-TRAY	45689780	COVER-TRY-SNS-FW		4B54526000
14	ASYB-TRAY		SCR-030-080WBB		6LJ20698000
15	ASYB-TRAY	45689781	LVR-TRY-MAIN-FULL-FW		4B54525000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

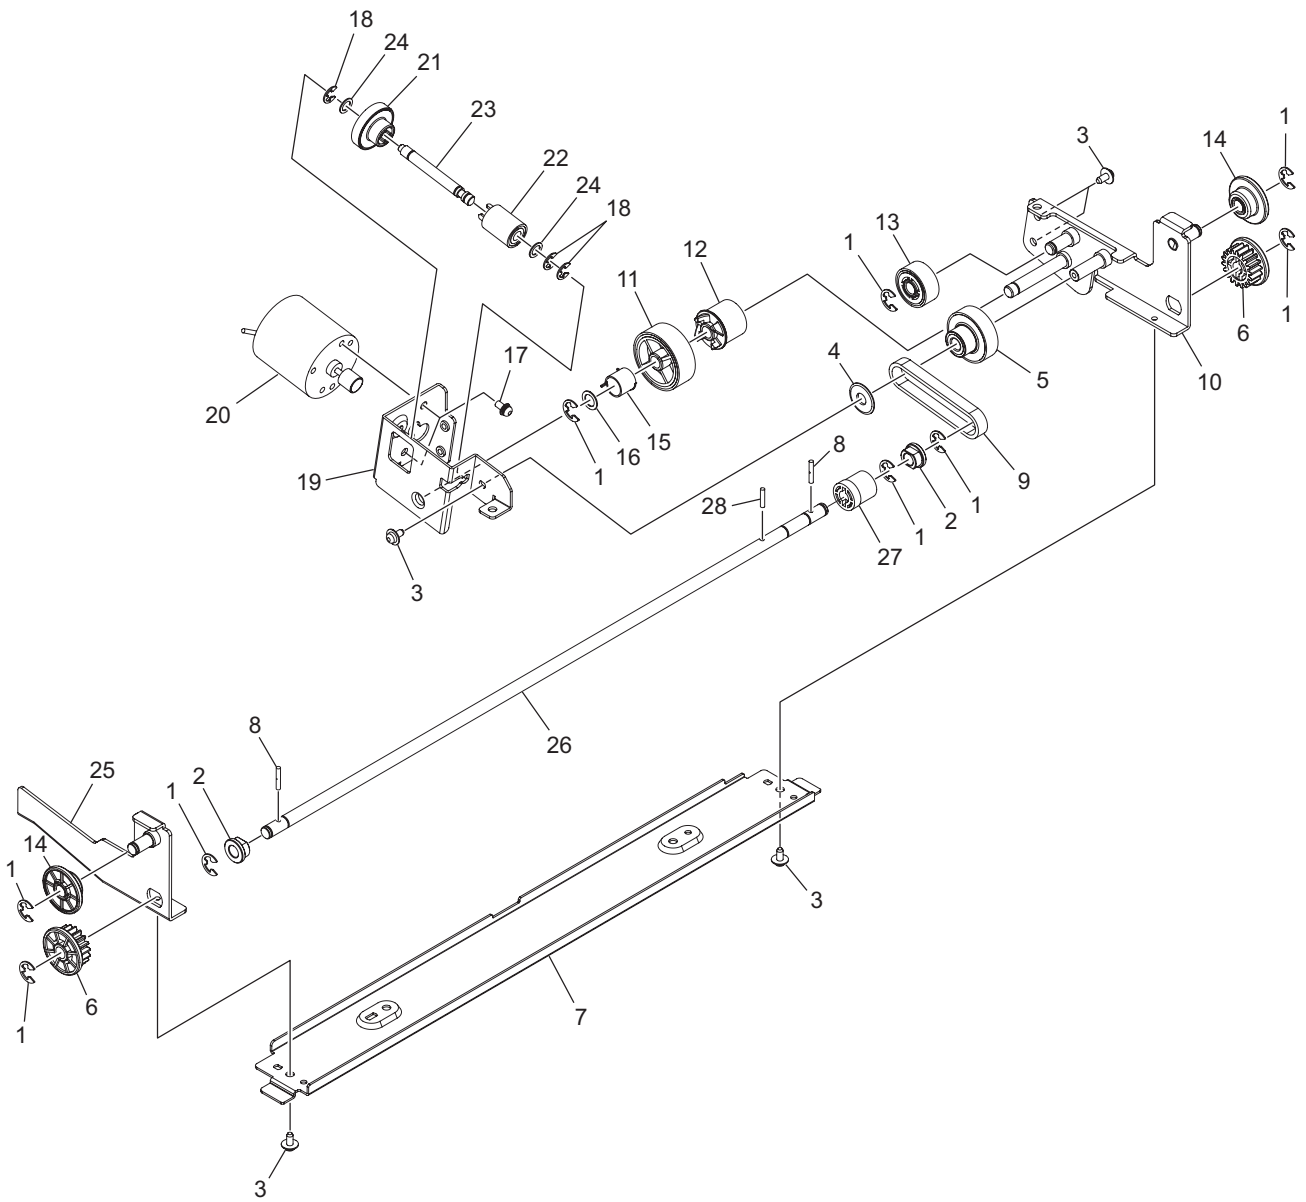


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-DRIVE-TRAY		ER-050		6LJ20023000
2	ASYB-DRIVE-TRAY		METAL060060FC		6LJ20060000
3	ASYB-DRIVE-TRAY		SCRO3T060SR-W		6LJ20064000
4	ASYB-DRIVE-TRAY		FLG-FEED-PLY		6LJ20083000
5	ASYB-DRIVE-TRAY		GEAR-10S24_PS3M14-6		6LJ19707000
6	ASYB-DRIVE-TRAY		GEAR-10S18-6		6LJ19711000
7	ASYB-DRIVE-TRAY		FRAME-TRY-C		6LJ19619000
8	ASYB-DRIVE-TRAY		HP-020		6LJ20713000
9	ASYB-DRIVE-TRAY		BELT TIMING S3M04460		6LJ20720000
10	ASYB-DRIVE-TRAY		CAULKING FRM TRY R		6LJ20516000
11	ASYB-DRIVE-TRAY		GEAR-10H28-6		6LJ19702000
12	ASYB-DRIVE-TRAY		GEAR-10S16-6-JOINT		6LJ19703000
13	ASYB-DRIVE-TRAY		GEAR-10S18-6		6LJ19708000
14	ASYB-DRIVE-TRAY		ROL-GID-TRY		6LJ19712000
15	ASYB-DRIVE-TRAY		SPRING TRY		6LJ20589000
16	ASYB-DRIVE-TRAY		POLYSLIDER		6LJ20670000
17	ASYB-DRIVE-TRAY		SCR-030-060		6LJ19998000
18	ASYB-DRIVE-TRAY		ER-040		6LJ20022000
19	ASYB-DRIVE-TRAY		BKT-TRY-DRV1		6LJ19618000
20	ASYB-DRIVE-TRAY		NA3535A14C		6LJ20623000
21	ASYB-DRIVE-TRAY		GEAR-05H42-5		6LJ19709000
22	ASYB-DRIVE-TRAY		GEAR-10W10-5		6LJ19710000
23	ASYB-DRIVE-TRAY		SHAFT TRY KUD01		6LJ20566000
24	ASYB-DRIVE-TRAY		PW-050		6LJ20669000
25	ASYB-DRIVE-TRAY		CAULKING FRM TRY F		6LJ20517000
26	ASYB-DRIVE-TRAY		SHAFT TRY MAIN		6LJ20567000
27	ASYB-DRIVE-TRAY		PULLEY-S3M14-6		6LJ19791000
28	ASYB-DRIVE-TRAY		HPIN-2X10		6LJ20712000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

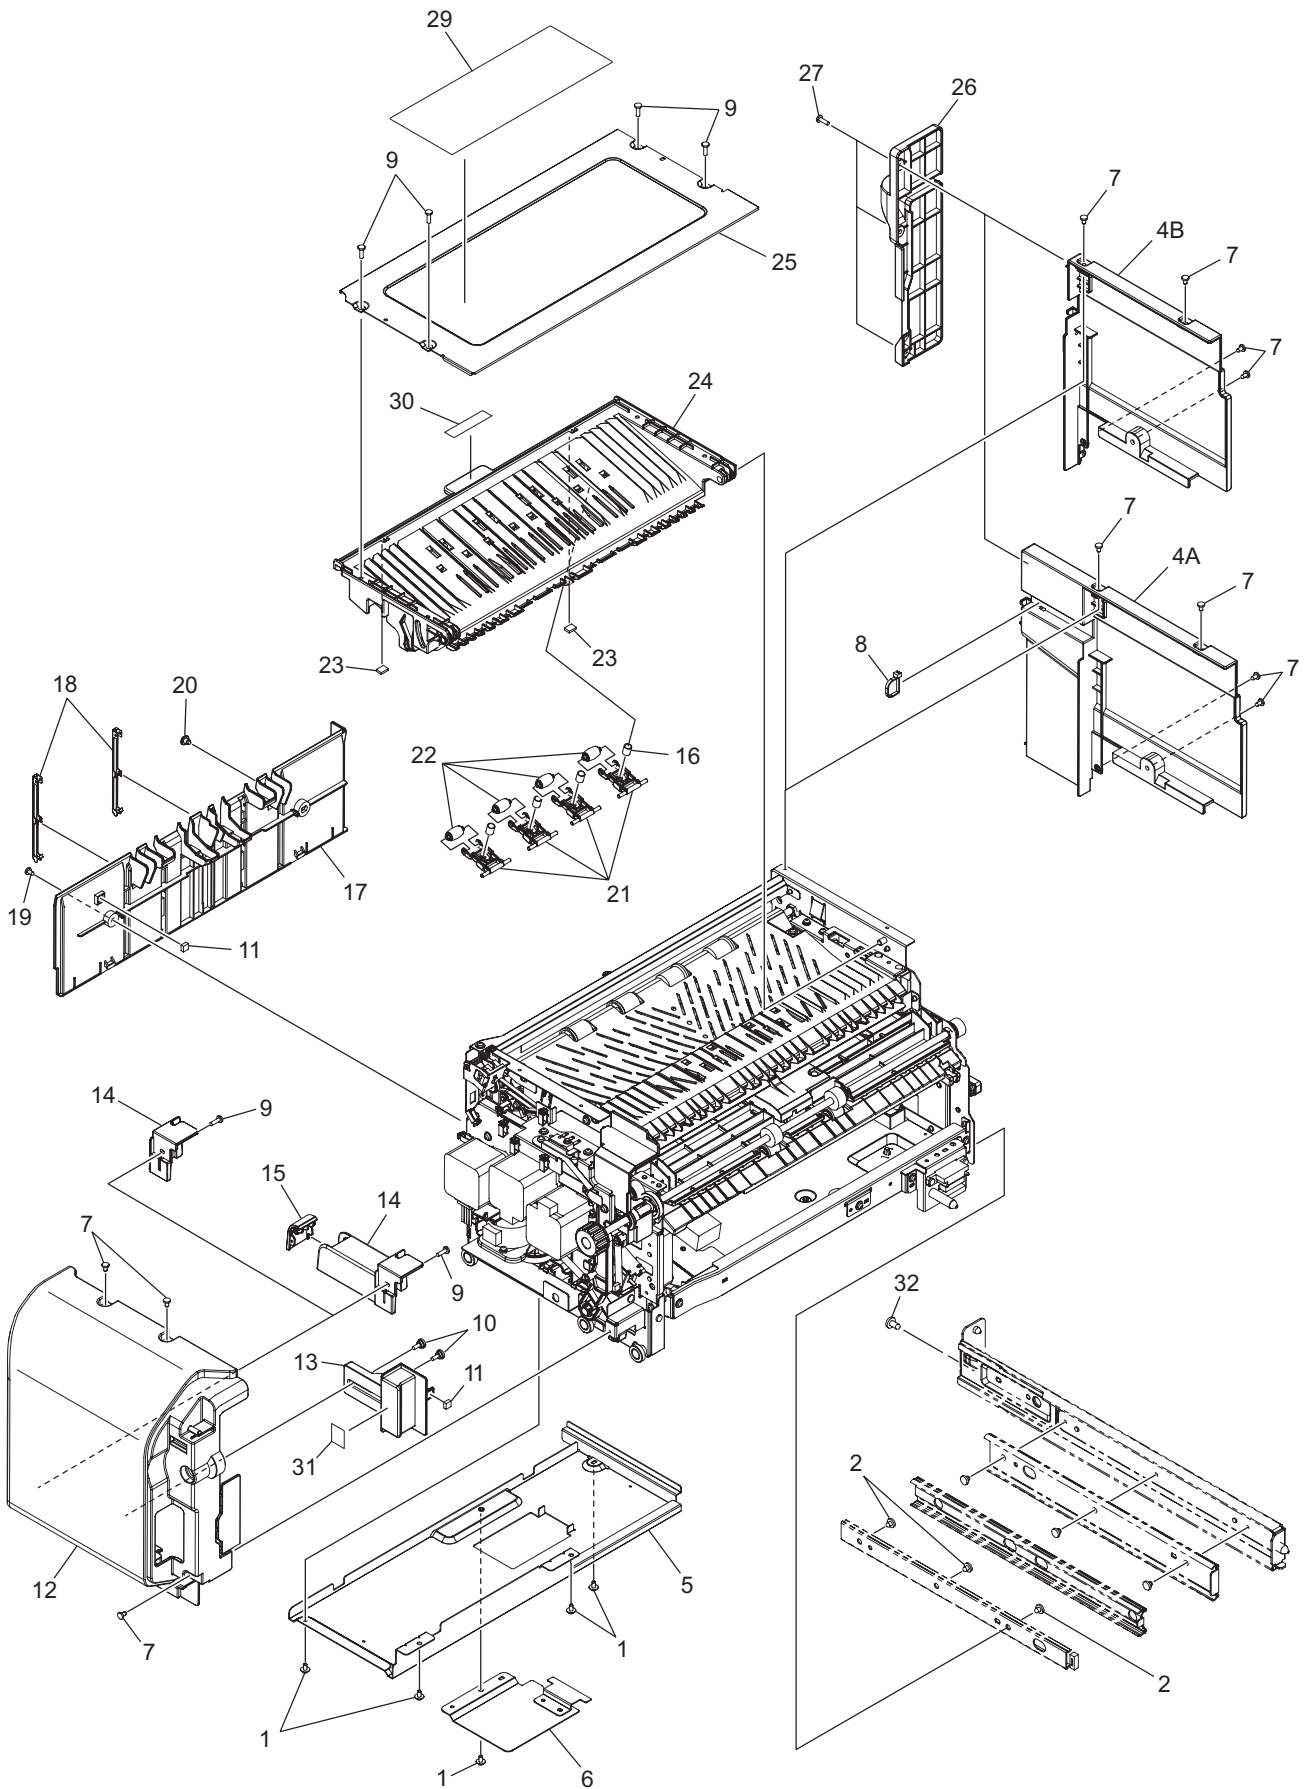


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-COVER-FRAME		SCR03T060SR-W		6LJ20064000
2	ASYB-COVER-FRAME		SCR04T070SR-W		6LJ20067000
4A	ASYB-COVER-FRAME	45689782	COVER-R-FW		4B54529000
4B	ASYB-COVER-FRAME	45689783	COVER-R-PNT-FW		4B54558000
5	ASYB-COVER-FRAME		COVER-PCB		6LJ19643000
6	ASYB-COVER-FRAME		COVER-PCB-DL		6LJ19644000
7	ASYB-COVER-FRAME		SCR-030-060SR		6LJ20609000
8	ASYB-COVER-FRAME		T18R-V0		6LJ20688000
9	ASYB-COVER-FRAME		SCR03T100WAVE-W		6LJ20065000
10	ASYB-COVER-FRAME		SCR-03T080-D060024		6LJ20076000
11	ASYB-COVER-FRAME		DMP-TR-Y0		6LJ20453000
12	ASYB-COVER-FRAME	45689784	COVER-F-FW		4B54531000
13	ASYB-COVER-FRAME		HANDLE-FRM-JAM		6LJ19691000
14A	ASYB-COVER-FRAME	45689785	COVER-UN-SUB-FW		4B54532000
14B	ASYB-COVER-FRAME	45689786	COVER-UN-SUB-FW		4B54559000
15A	ASYB-COVER-FRAME	45689787	COVER-UN-SUB-OPEN-FW		4B54533000
16	ASYB-COVER-FRAME		SPRING FEED SUB KORO		6LJ20906000
17	ASYB-COVER-FRAME	45689788	COV-SIDE-WALL-FW		4B54527000
18	ASYB-COVER-FRAME		SPG-F-SIDE-WALL-E		6LJ19608000
19	ASYB-COVER-FRAME		SCR03T060SR-W		6LJ20063000
20	ASYB-COVER-FRAME		SCR-M3-DAN3. 5-MARU-D		6LJ20504000
21	ASYB-COVER-FRAME		HLD-IDL-FEED-SUB		6LJ19676000
22	ASYB-COVER-FRAME		IDL-FEED-SUB-EXT		6LJ19677000
23	ASYB-COVER-FRAME		DMP-FE-LVR-ENT		6LJ20095000
24	ASYB-COVER-FRAME	45689789	GID-FEED-SUB2-FW		4B54530000
25	ASYB-COVER-FRAME		COV-GID-SUB-UP		6LJ19663000
26	ASYB-COVER-FRAME	45689790	DUCT-HN-IF-FW		4B54528000
27	ASYB-COVER-FRAME		SCR03T100WAVE-W		6LJ20065000
29	ASYB-COVER-FRAME		LBL-TOP-MJ1032		6LJ20917000
30	ASYB-COVER-FRAME		LBL-HANDLE		6LJ20918000
31	ASYB-COVER-FRAME		LBL-LEVER-FIN		6LJ20922000
32	ASYB-COVER-FRAME		SCR-040-050		6LJ20692000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

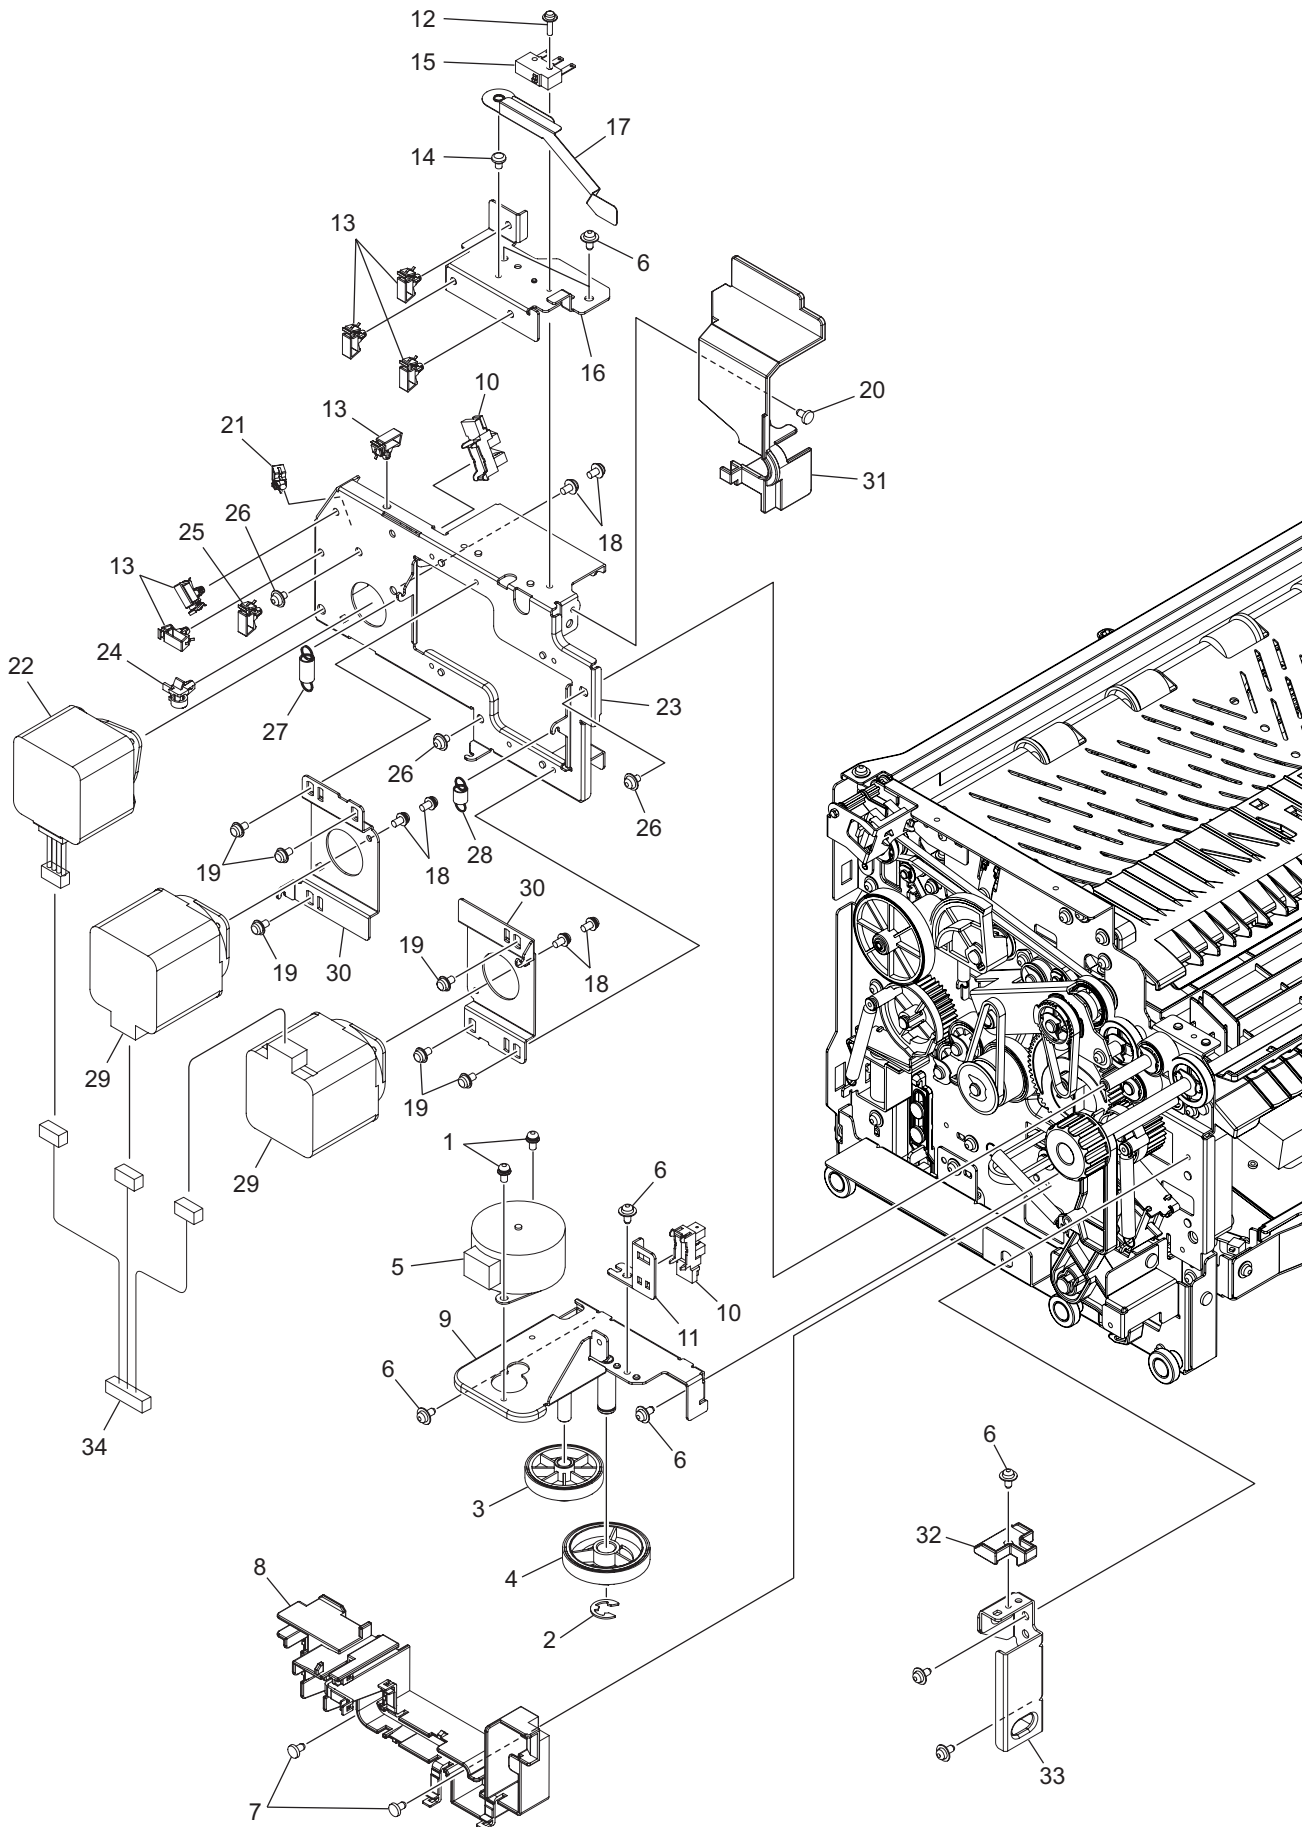


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-MOT-DRIVE		SCR-030-060		6LJ19998000
2	ASYB-MOT-DRIVE		ER-070		6LJ20024000
3	ASYB-MOT-DRIVE		GEAR-08S17_08S42-6		6LJ19758000
4	ASYB-MOT-DRIVE		GEAR-08S47_PS3M18-6		6LJ19759000
5	ASYB-MOT-DRIVE		PM42L-048-NSL3		6LJ20624000
6A	ASYB-MOT-DRIVE		SCRO3T060SR-W		6LJ20064000
6B	ASYB-MOT-DRIVE		SCRO3T060SR-W		6LJ20064000
7	ASYB-MOT-DRIVE		SCRO3T060SR-W		6LJ20063000
8	ASYB-MOT-DRIVE		DUCT-HNS		6LJ19775000
9	ASYB-MOT-DRIVE		CAULKING BKT STP KUDOF		6LJ20519000
10	ASYB-MOT-DRIVE		GP1S173LCSOF		6LJ20009000
11	ASYB-MOT-DRIVE		BKT-SNS-ROL-LIFT		6LJ19652000
12	ASYB-MOT-DRIVE		SCR-023-100ZWS		6LJ19995000
13	ASYB-MOT-DRIVE		RLMS-2V0		6LJ20015000
14	ASYB-MOT-DRIVE		SCRO3M030-D040012		6LJ20072000
15	ASYB-MOT-DRIVE		ASM SW		6LJ20541000
16	ASYB-MOT-DRIVE		BKT-FRM-IL		6LJ19656000
17	ASYB-MOT-DRIVE		SPG-F-IL		6LJ19659000
18	ASYB-MOT-DRIVE		SCRO3M060-WS-W		6LJ19999000
19	ASYB-MOT-DRIVE		SCRO3M060-WS-W		6LJ19999000
20	ASYB-MOT-DRIVE		SCR-030-060SR		6LJ20609000
21	ASYB-MOT-DRIVE		RLMS-1V0		6LJ20014000
22	ASYB-MOT-DRIVE		17PM-J062-G2VS		6LJ20561000
23	ASYB-MOT-DRIVE		FRAME-F-SUB		6LJ19611000
24	ASYB-MOT-DRIVE		RSG-100		6LJ20677000
25	ASYB-MOT-DRIVE		LWSM-0511		6LJ20683000
26	ASYB-MOT-DRIVE		SCR-030-040NIT		6LJ20701000
27	ASYB-MOT-DRIVE		SPRING KU MOT		6LJ20601000
28	ASYB-MOT-DRIVE		SPRING KU MOT2		6LJ20606000
29	ASYB-MOT-DRIVE		MOT-KH42JM2B210		6LJ20086000
30	ASYB-MOT-DRIVE		BKT-DRV-MOT-F2		6LJ19630000
31	ASYB-MOT-DRIVE		COVER-F-SUB		6LJ19776000
32A	ASYB-MOT-DRIVE		LEVER-RCH-PNT		6LJ19862000
33A	ASYB-MOT-DRIVE		BRACKET LOCK PNT		6LJ20834000
34	ASYB-MOT-DRIVE		ASM 42 MOT		6LJ20547000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

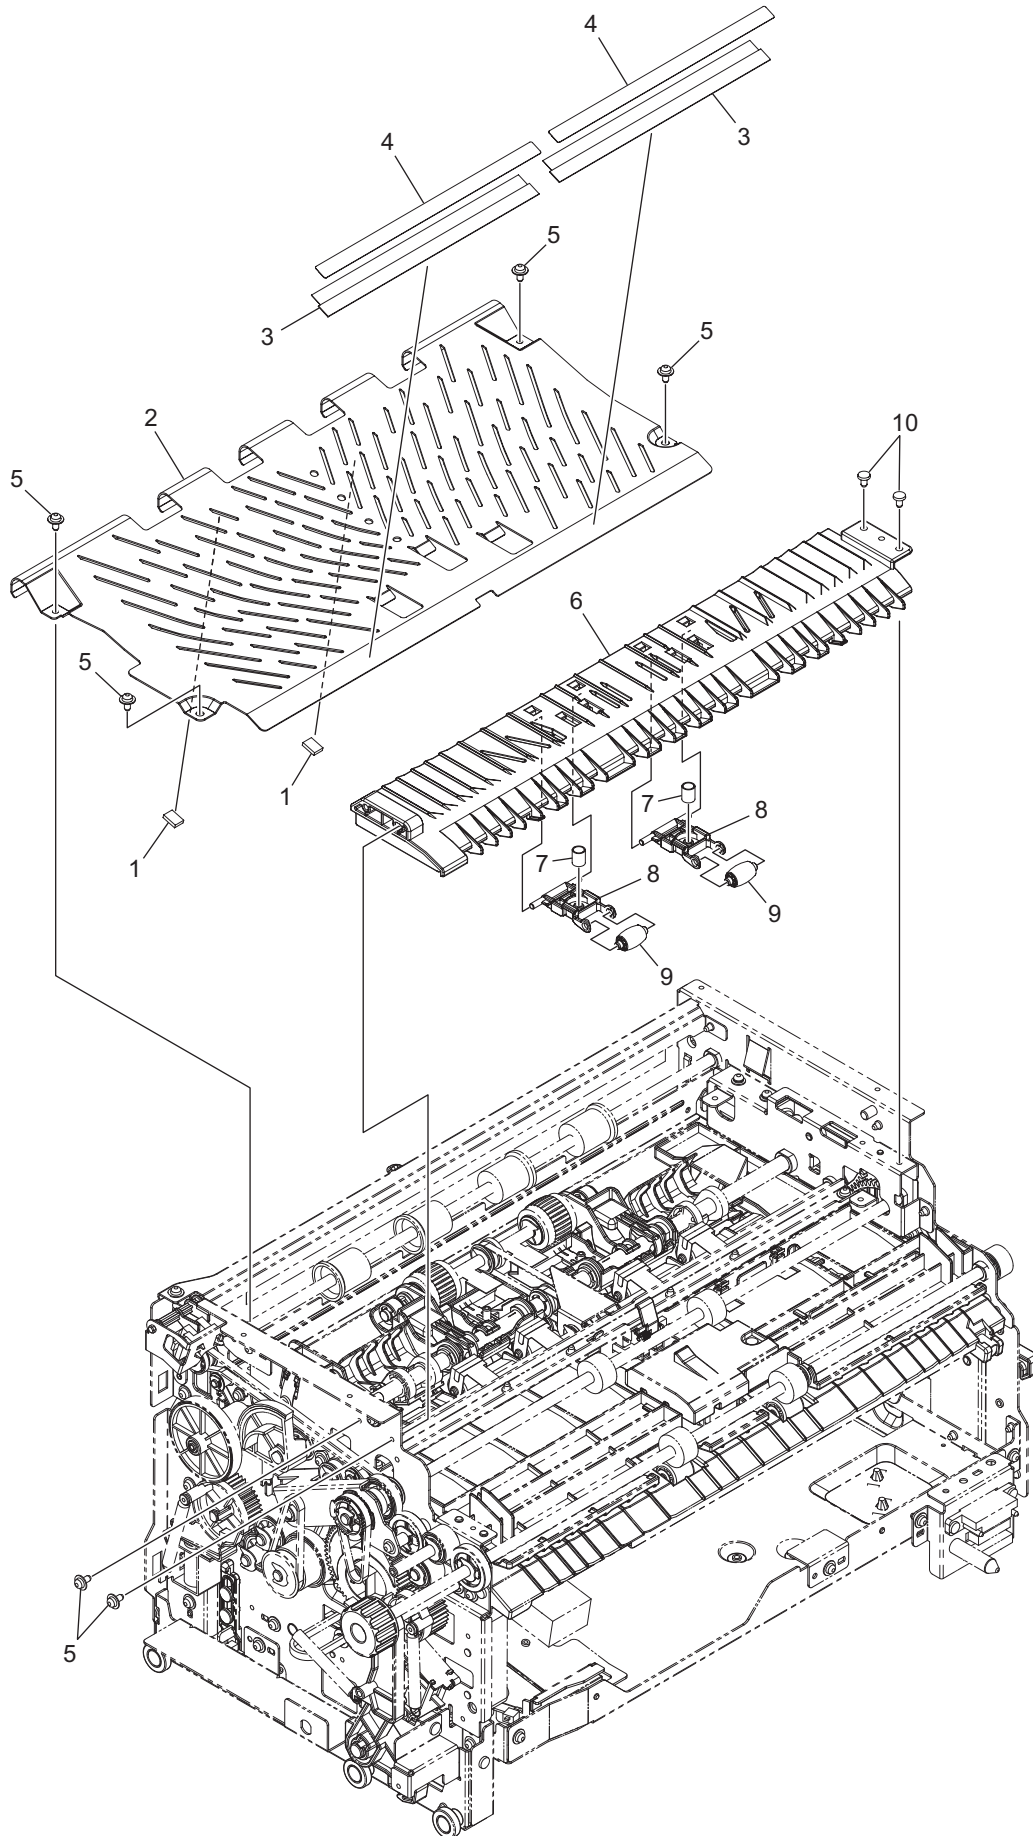

No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-GID-FEED-SUB		DMP-FE-LVR-ENT		6LJ20095000
2	ASYB-GID-FEED-SUB		GID-FE-SUB-EXIT		6LJ19606000
3	ASYB-GID-FEED-SUB		BRUSH GID SUB		6LJ20611000
4	ASYB-GID-FEED-SUB		SHEET GID BRUSH1		6LJ20630000
5	ASYB-GID-FEED-SUB		SCRO3T060SR-W		6LJ20064000
6	ASYB-GID-FEED-SUB		GID-FEED-SUB1		6LJ19678000
7	ASYB-GID-FEED-SUB		SPRING FEED SUB KORO		6LJ20906000
8	ASYB-GID-FEED-SUB		HLD-IDL-FEED-SUB		6LJ19676000
9	ASYB-GID-FEED-SUB		IDL-FEED-SUB-EXT		6LJ19677000
10	ASYB-GID-FEED-SUB		SCRO3T060SR-W		6LJ20063000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

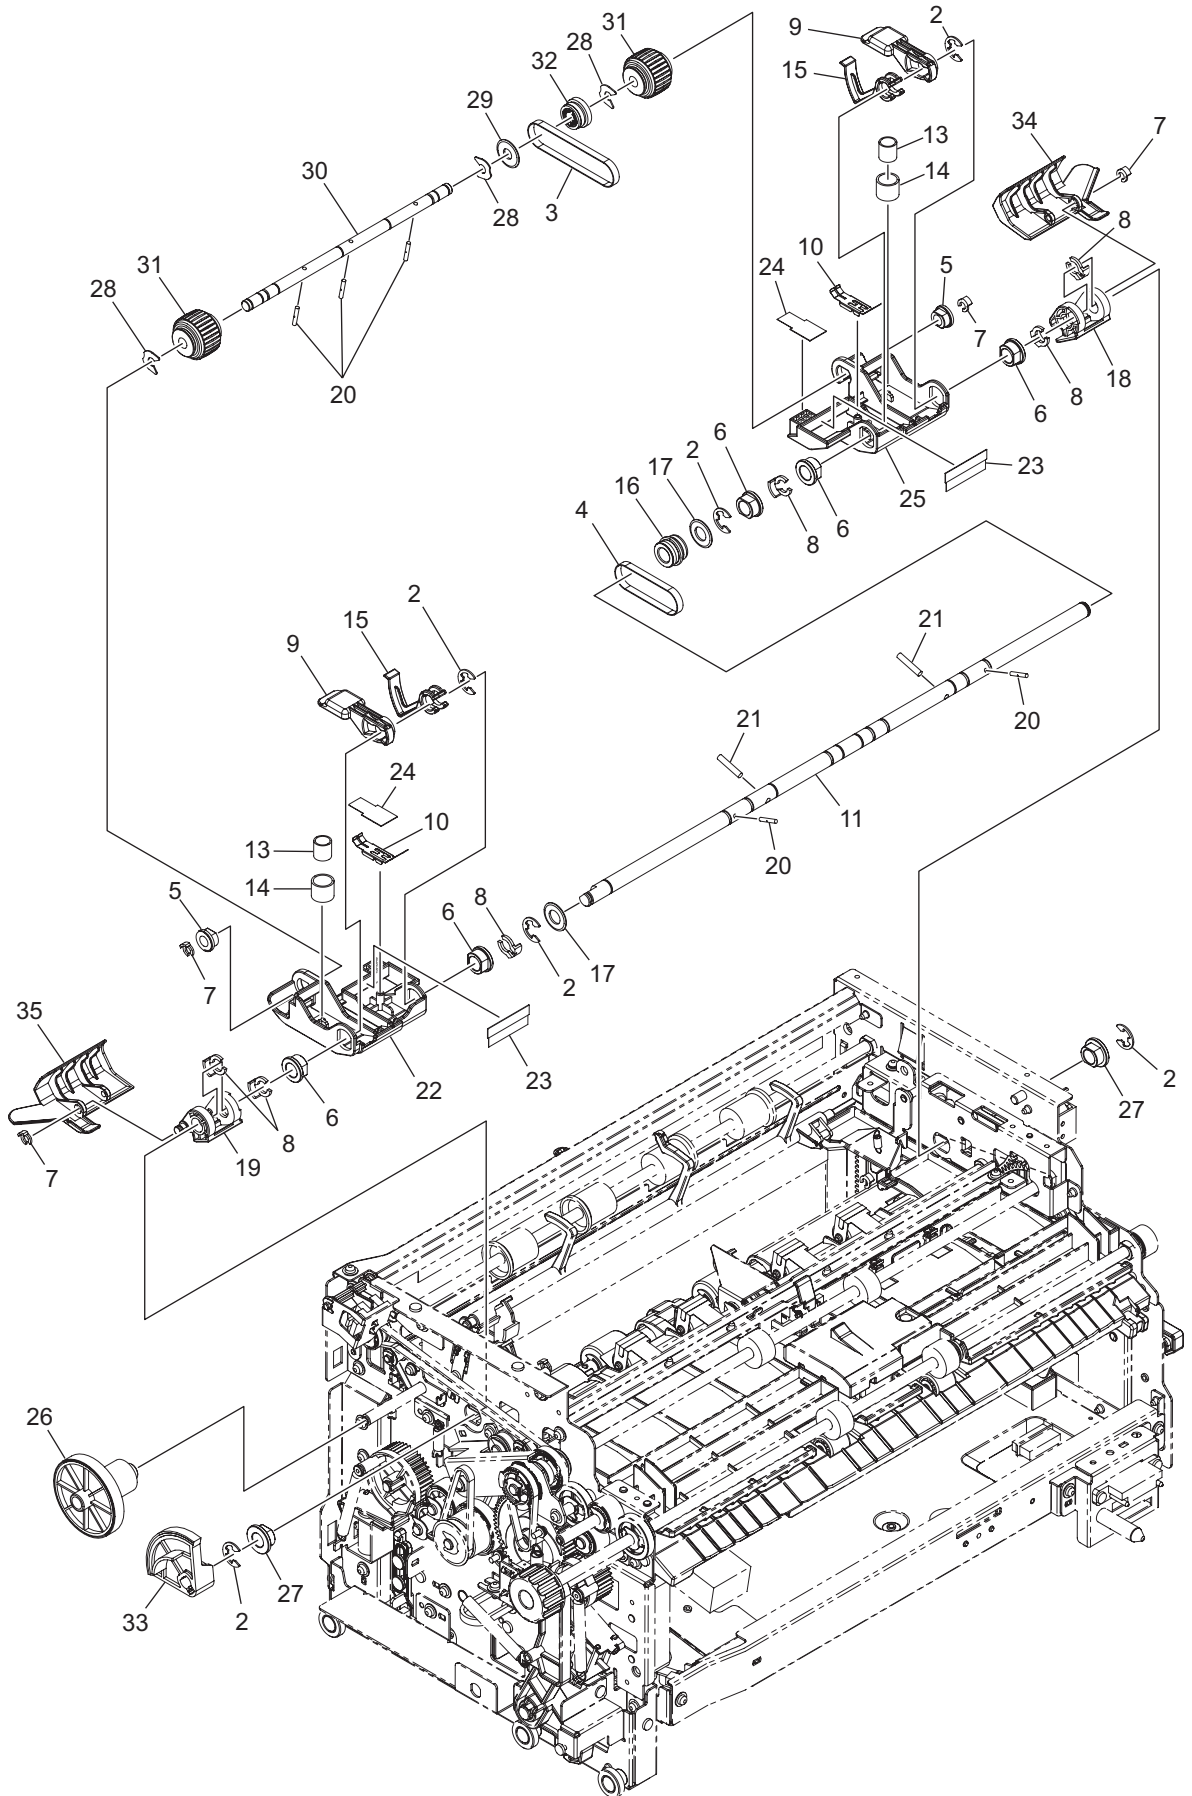


No.	Unit Name	Part Number	Description	Remarks	Reference
2	ASYB-PICK-GID		ER-070		6LJ20024000
3	ASYB-PICK-GID		BELTS2M070040		6LJ20032000
4	ASYB-PICK-GID		BELTS2M053040		6LJ20036000
5	ASYB-PICK-GID		BUSH060060-NW-02		6LJ21189000
6	ASYB-PICK-GID		BUSH080070MYU		6LJ20052000
7	ASYB-PICK-GID		CLIP040100G		6LJ20053000
8	ASYB-PICK-GID		CLIP070140B		6LJ20056000
9	ASYB-PICK-GID		ARM-PICK		6LJ19718000
10	ASYB-PICK-GID		SPG-F-PICK-GID-EARTH		6LJ19636000
11	ASYB-PICK-GID		SHAFT PICK ARM		6LJ20569000
13	ASYB-PICK-GID		SPRING PICK GID IN		6LJ20596000
14	ASYB-PICK-GID		SPRING PICK GID OUT		6LJ20597000
15	ASYB-PICK-GID		WEIGHT-PICK-GID		6LJ19748000
16	ASYB-PICK-GID		PULLEY-S2M22-8-PICK		6LJ19763000
17	ASYB-PICK-GID		FLANGE-016-080		6LJ19797000
18	ASYB-PICK-GID		HOLDER PICK GID R		6LJ20621000
19	ASYB-PICK-GID		HOLDER PICK GID F		6LJ20622000
20	ASYB-PICK-GID		HP-020		6LJ20713000
21	ASYB-PICK-GID		HP-030		6LJ20716000
22	ASYB-PICK-GID		GUIDE-PICK-F		6LJ19716000
23	ASYB-PICK-GID		BRUSH PICK GID		6LJ20594000
24	ASYB-PICK-GID		BRUSH PICK EARTH		6LJ20608000
25	ASYB-PICK-GID		GUIDE-PICK-R		6LJ19717000
26	ASYB-PICK-GID		GEAR-10S16_10S88-6		6LJ19736000
27	ASYB-PICK-GID		METAL080070FC		6LJ20061000
28	ASYB-PICK-GID		CLIP050060W		6LJ20054000
29	ASYB-PICK-GID		FLG-FEED-PLY		6LJ20083000
30	ASYB-PICK-GID		SHAFT PICK ID2		6LJ20576000
31	ASYB-PICK-GID		ROLLER FE PICK		6LJ20615000
32	ASYB-PICK-GID		PULLEY-S2M22-6		6LJ19750000
33	ASYB-PICK-GID		GEAR-10S56-8		6LJ19735000
34	ASYB-PICK-GID		WEIGHT PICK GID R		6LJ20619000
35	ASYB-PICK-GID		WEIGHT PICK GID F		6LJ20620000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-ROL-FEED		SCRO3T060SR-W		6LJ20064000
2	ASYB-ROL-FEED		ASSEMBLY KORO FE NIP		6LJ20528000
3	ASYB-ROL-FEED		STAY-PICK-GID		6LJ19639000
4	ASYB-ROL-FEED		ASSEMBLY SOL		6LJ20527000
5	ASYB-ROL-FEED		CLIP050060W		6LJ20054000
6	ASYB-ROL-FEED		LEVER-FIN-SEG-SOL2		6LJ19766000
8	ASYB-ROL-FEED		CAULKING FRM R SUB		6LJ20509000
9	ASYB-ROL-FEED		BUSH060060MYU		6LJ20051000
10	ASYB-ROL-FEED		FLG-FEED-PLY		6LJ20083000
11	ASYB-ROL-FEED		BKT-PICK-BLT-PICH		6LJ19662000
12	ASYB-ROL-FEED		PULLEY-S2M22-6		6LJ19750000
13	ASYB-ROL-FEED		HPIN-2X10		6LJ20712000
14	ASYB-ROL-FEED		ROL-FEED-SUB-EXIT		6LJ19807000
15	ASYB-ROL-FEED		METAL060060FC		6LJ20060000
16	ASYB-ROL-FEED		SCRO30050WS		6LJ19996000
17	ASYB-ROL-FEED		BELTS2M079040		6LJ20033000
18	ASYB-ROL-FEED		BKT-FEE-SFT		6LJ19623000
19	ASYB-ROL-FEED		BELTS2M071040		6LJ20030000
20	ASYB-ROL-FEED		GEAR-08S29_PS2M22-6		6LJ19778000
21	ASYB-ROL-FEED		GEAR-08S29-6		6LJ19757000
22	ASYB-ROL-FEED		GEAR-08S35_PS2M18-6		6LJ19739000
24	ASYB-ROL-FEED		KNOB-JAM		6LJ19738000
25	ASYB-ROL-FEED		ROLLER FEED FIN ENT		6LJ20588000
26	ASYB-ROL-FEED		GEAR-08S18-6-SUB		6LJ19865000
27	ASYB-ROL-FEED		ER-050		6LJ20023000
28	ASYB-ROL-FEED		ROLLER-FEED-SUB		6LJ19806000
29	ASYB-ROL-FEED		HP-020		6LJ20713000
30	ASYB-ROL-FEED		BELTS2M157040		6LJ20039000
31	ASYB-ROL-FEED		BELTS2M076040		6LJ20031000
32	ASYB-ROL-FEED		BELT TIMING S2M 05940		6LJ20719000
33	ASYB-ROL-FEED		PULLEY-S2M35-6		6LJ19742000
34	ASYB-ROL-FEED		SHAFT PICK GID1		6LJ20568000
35	ASYB-ROL-FEED		LBL-KNOB-FIN2		6LJ20920000
36	ASYB-ROL-FEED		FLANGE-6-13		6LJ19754000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

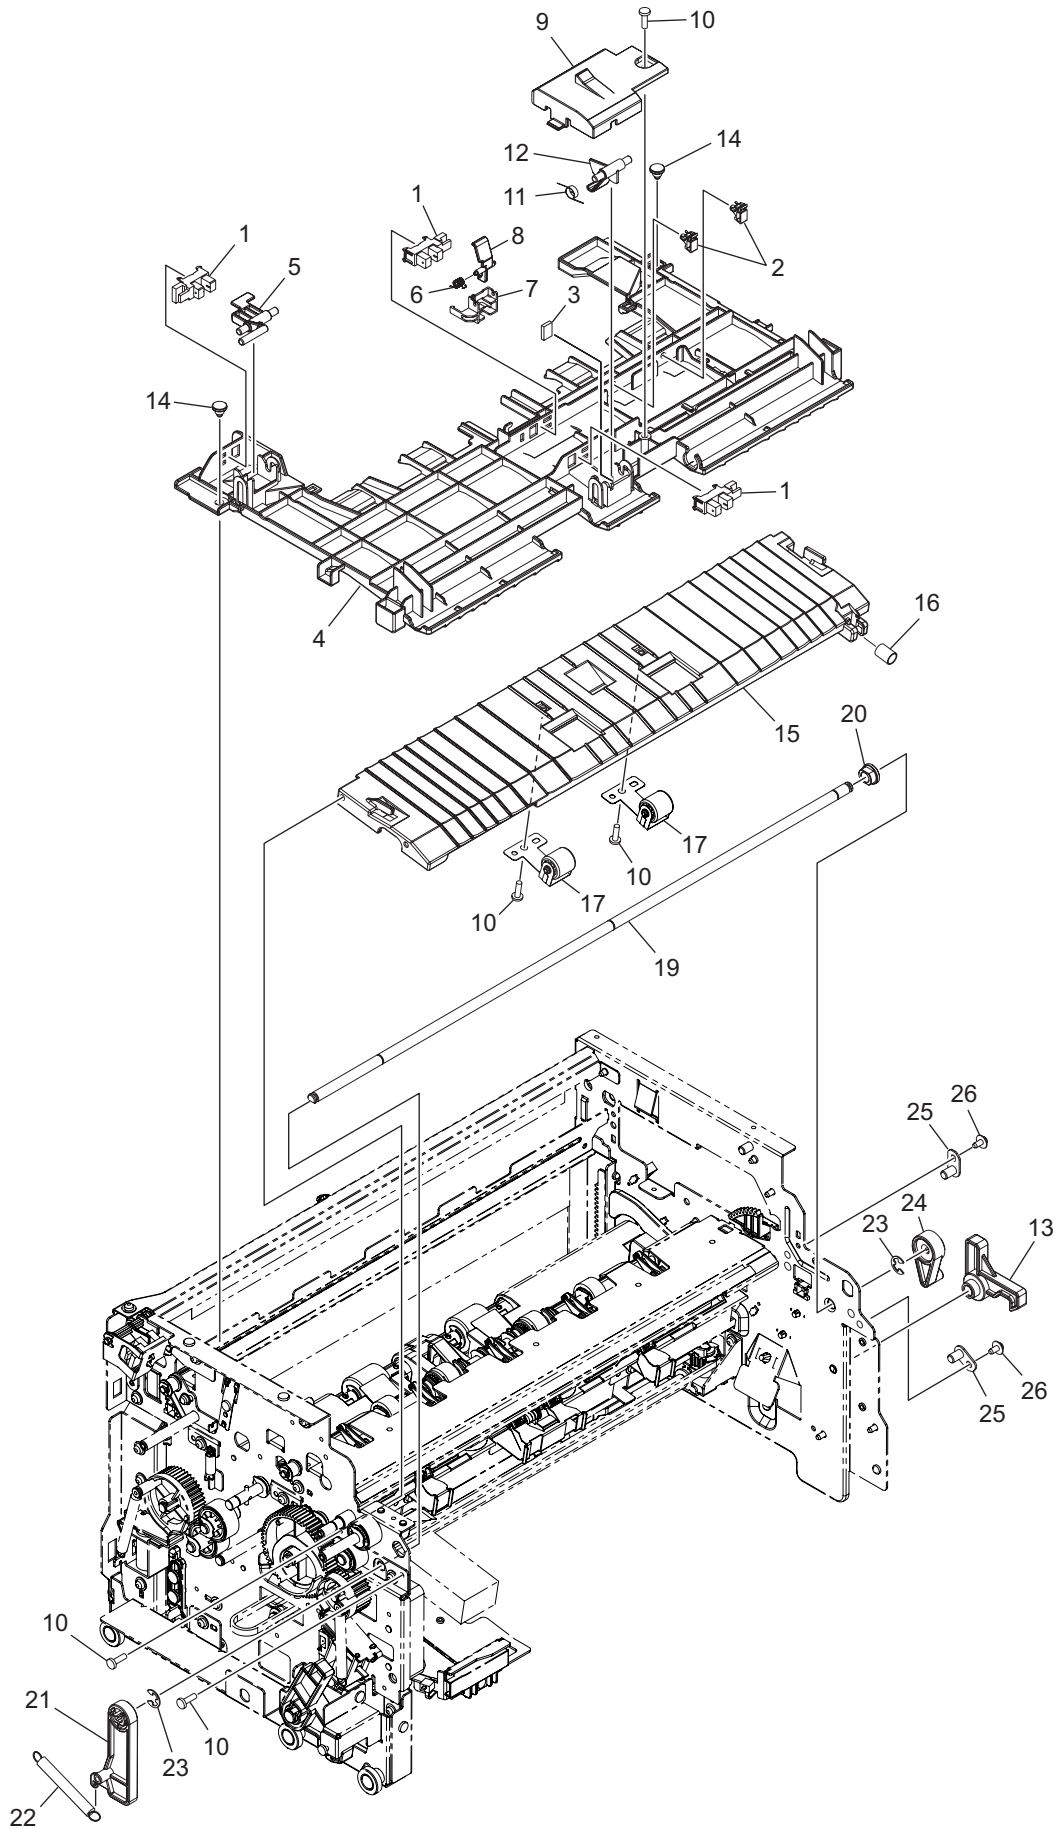


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-GID-FIN-ENT		GP1S173LCSOF		6LJ20009000
2	ASYB-GID-FIN-ENT		RLMS-1V0		6LJ20014000
3	ASYB-GID-FIN-ENT		DMP-FE-LVR-ENT		6LJ20095000
4	ASYB-GID-FIN-ENT		GID-FIN-ENT-UP		6LJ19688000
5	ASYB-GID-FIN-ENT		LVR-SEN-FEED-SUB-0		6LJ19770000
6	ASYB-GID-FIN-ENT		SPRING FE SUB SEN LVR		6LJ20604000
7	ASYB-GID-FIN-ENT		HLD-SEN-FEED-SUB		6LJ19768000
8	ASYB-GID-FIN-ENT		LVR-SEN-FEED-SUB		6LJ19769000
9	ASYB-GID-FIN-ENT		COVER-SEN-FE-ENT		6LJ19794000
10	ASYB-GID-FIN-ENT		SCRO3T100WAVE-W		6LJ20065000
11	ASYB-GID-FIN-ENT		SPRING FE SEN LVR		6LJ20907000
12	ASYB-GID-FIN-ENT		LVR-FE-ENT		6LJ19771000
13	ASYB-GID-FIN-ENT		LVR-FRM-RACH-R		6LJ19694000
14	ASYB-GID-FIN-ENT		SCR-M3-DAN3.5-MARU-D		6LJ20504000
15	ASYB-GID-FIN-ENT		GID-FIN-ENT-UN		6LJ19689000
16	ASYB-GID-FIN-ENT		SPRING FEED ENT SET R		6LJ20603000
17	ASYB-GID-FIN-ENT		ASSEMBLY KORO FE NIP		6LJ20505000
19	ASYB-GID-FIN-ENT		SHAFT LOCK RACH		6LJ20565000
20	ASYB-GID-FIN-ENT		BUSH060060MYU		6LJ20051000
21	ASYB-GID-FIN-ENT		LVR-FRM-LNK-F		6LJ19693000
22	ASYB-GID-FIN-ENT		SPRING FRM LOCK		6LJ20602000
23	ASYB-GID-FIN-ENT		ER-050		6LJ20023000
24	ASYB-GID-FIN-ENT		LVR-FRM-LNK-R		6LJ19779000
25	ASYB-GID-FIN-ENT		GID-FIN-ENT-UN		6LJ19689000
26	ASYB-GID-FIN-ENT		SCRO3T060SR-W		6LJ20064000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

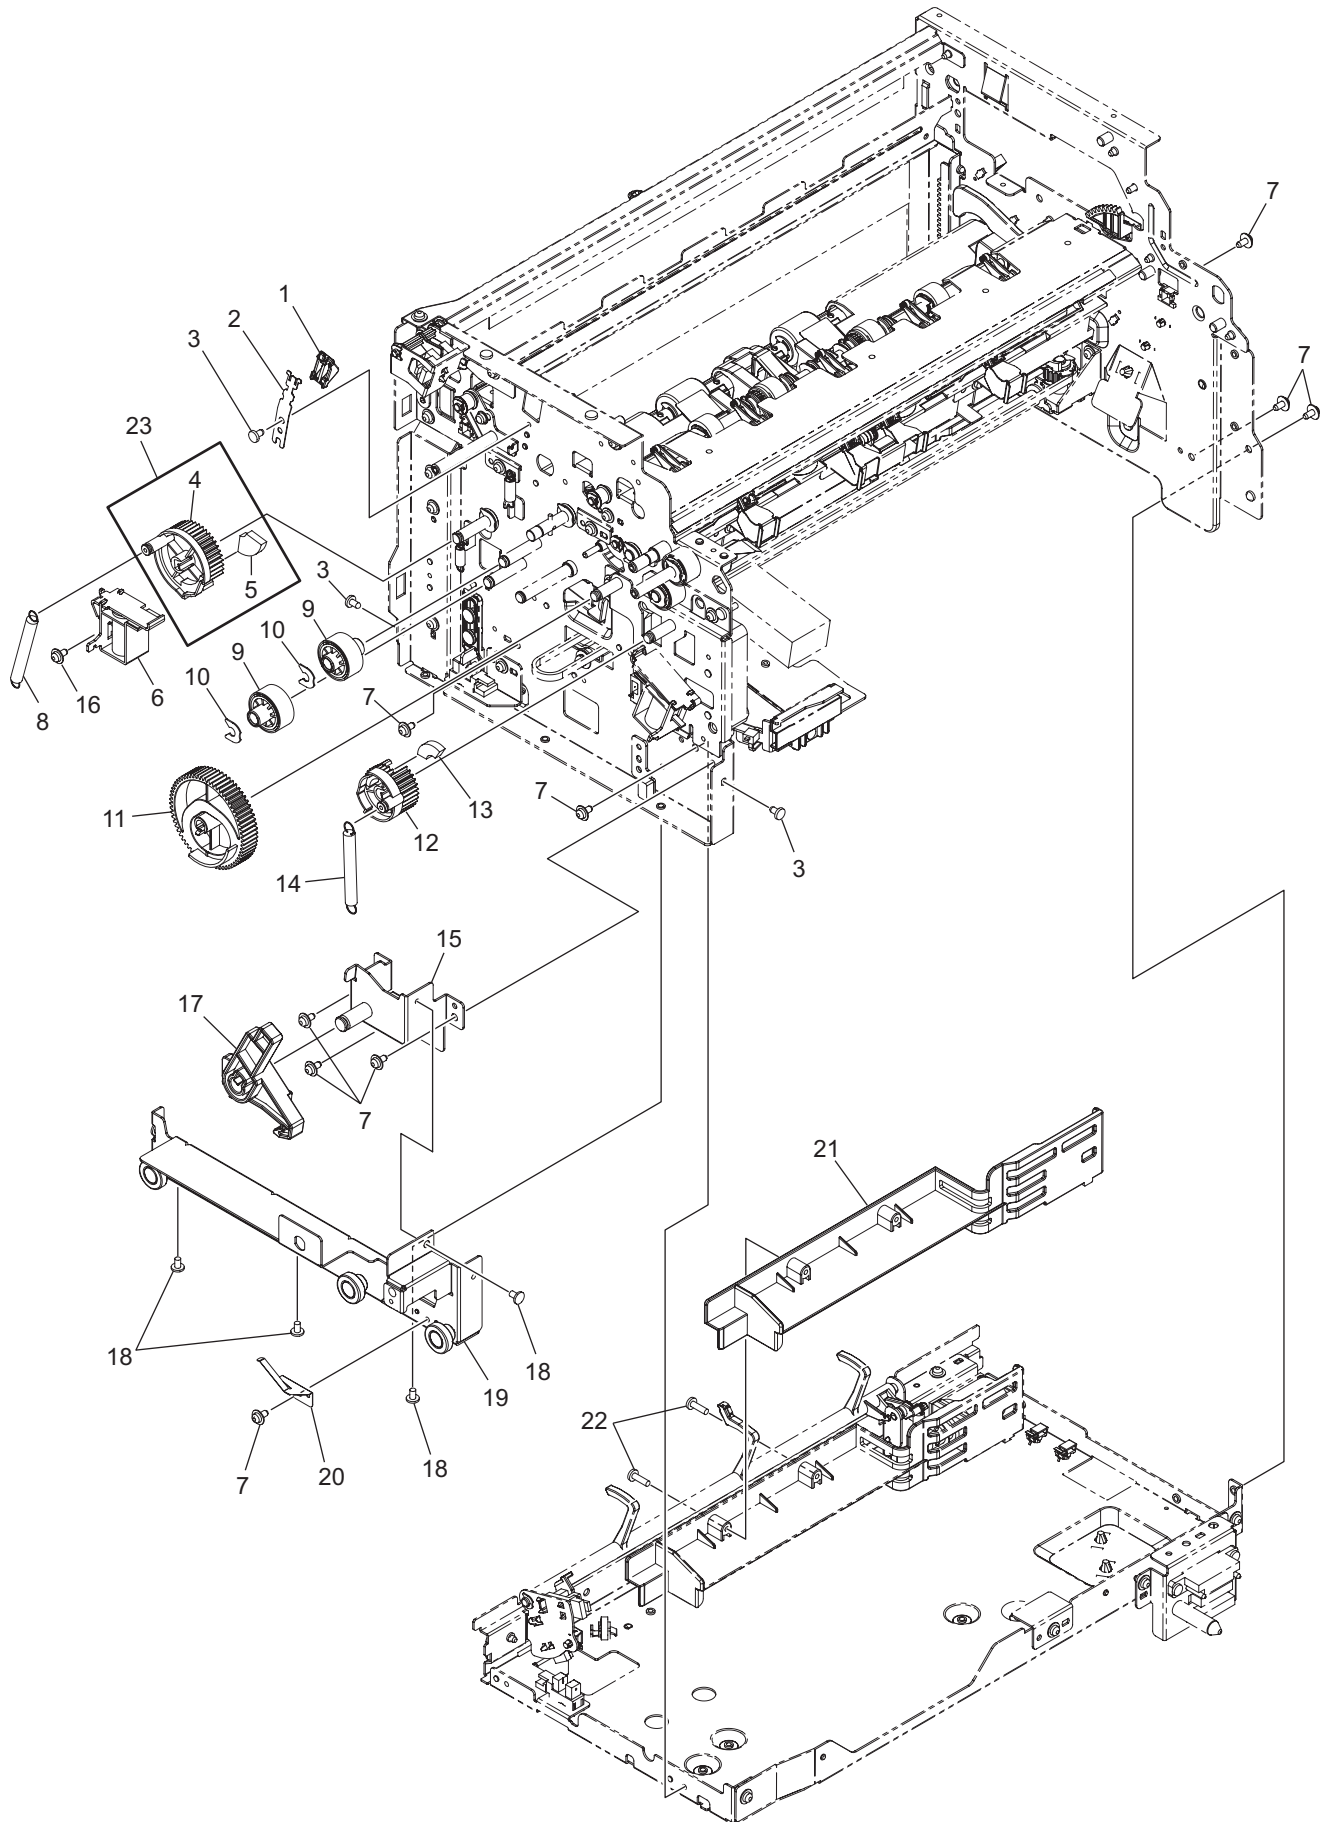


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-GEAR-DRIVE		CVR-PLT-SP-LOCK		6LJ20105000
2	ASYB-GEAR-DRIVE		PLT-FRM-LOCK		6LJ20244000
3	ASYB-GEAR-DRIVE		SCRO3T060SR-W		6LJ20063000
4	ASYB-GEAR-DRIVE		GEAR-08S43-6-PDL		6LJ19737000
5	ASYB-GEAR-DRIVE		CUSHION-PDL-GER		6LJ19816000
6	ASYB-GEAR-DRIVE		TDS-F12G-81		6LJ19826000
7	ASYB-GEAR-DRIVE		SCRO3T060SR-W		6LJ20064000
8	ASYB-GEAR-DRIVE		SP-PR-PDL		6LJ20094000
9	ASYB-GEAR-DRIVE		GEAR-08S26-6		6LJ19753000
10	ASYB-GEAR-DRIVE		CLIP050060W		6LJ20054000
11	ASYB-GEAR-DRIVE		GER-080-64-CAM		6LJ20101000
12	ASYB-GEAR-DRIVE		GEAR-08S32-6-KH		6LJ19741000
13	ASYB-GEAR-DRIVE		CUSHION-LFT-GER		6LJ19815000
14	ASYB-GEAR-DRIVE		SP-CAM		6LJ20118000
15	ASYB-GEAR-DRIVE		CAULKING BKT FRM LOCK		6LJ20522000
16	ASYB-GEAR-DRIVE		SCR-030-040NIT		6LJ20701000
17	ASYB-GEAR-DRIVE		LVR-FRM-RACH-F		6LJ19692000
18	ASYB-GEAR-DRIVE		SCRO30050		6LJ20028000
19	ASYB-GEAR-DRIVE		CAULKING BKT CORO F		6LJ20515000
20	ASYB-GEAR-DRIVE		SPG-F-RAIL		6LJ19649000
21	ASYB-GEAR-DRIVE		HLD-STP-HRNS		6LJ19733000
22	ASYB-GEAR-DRIVE		SCRO3T100WAVE-W		6LJ20065000
23	ASYB-GEAR-DRIVE		ASSEMBLY GER PDL		6LJ20526000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

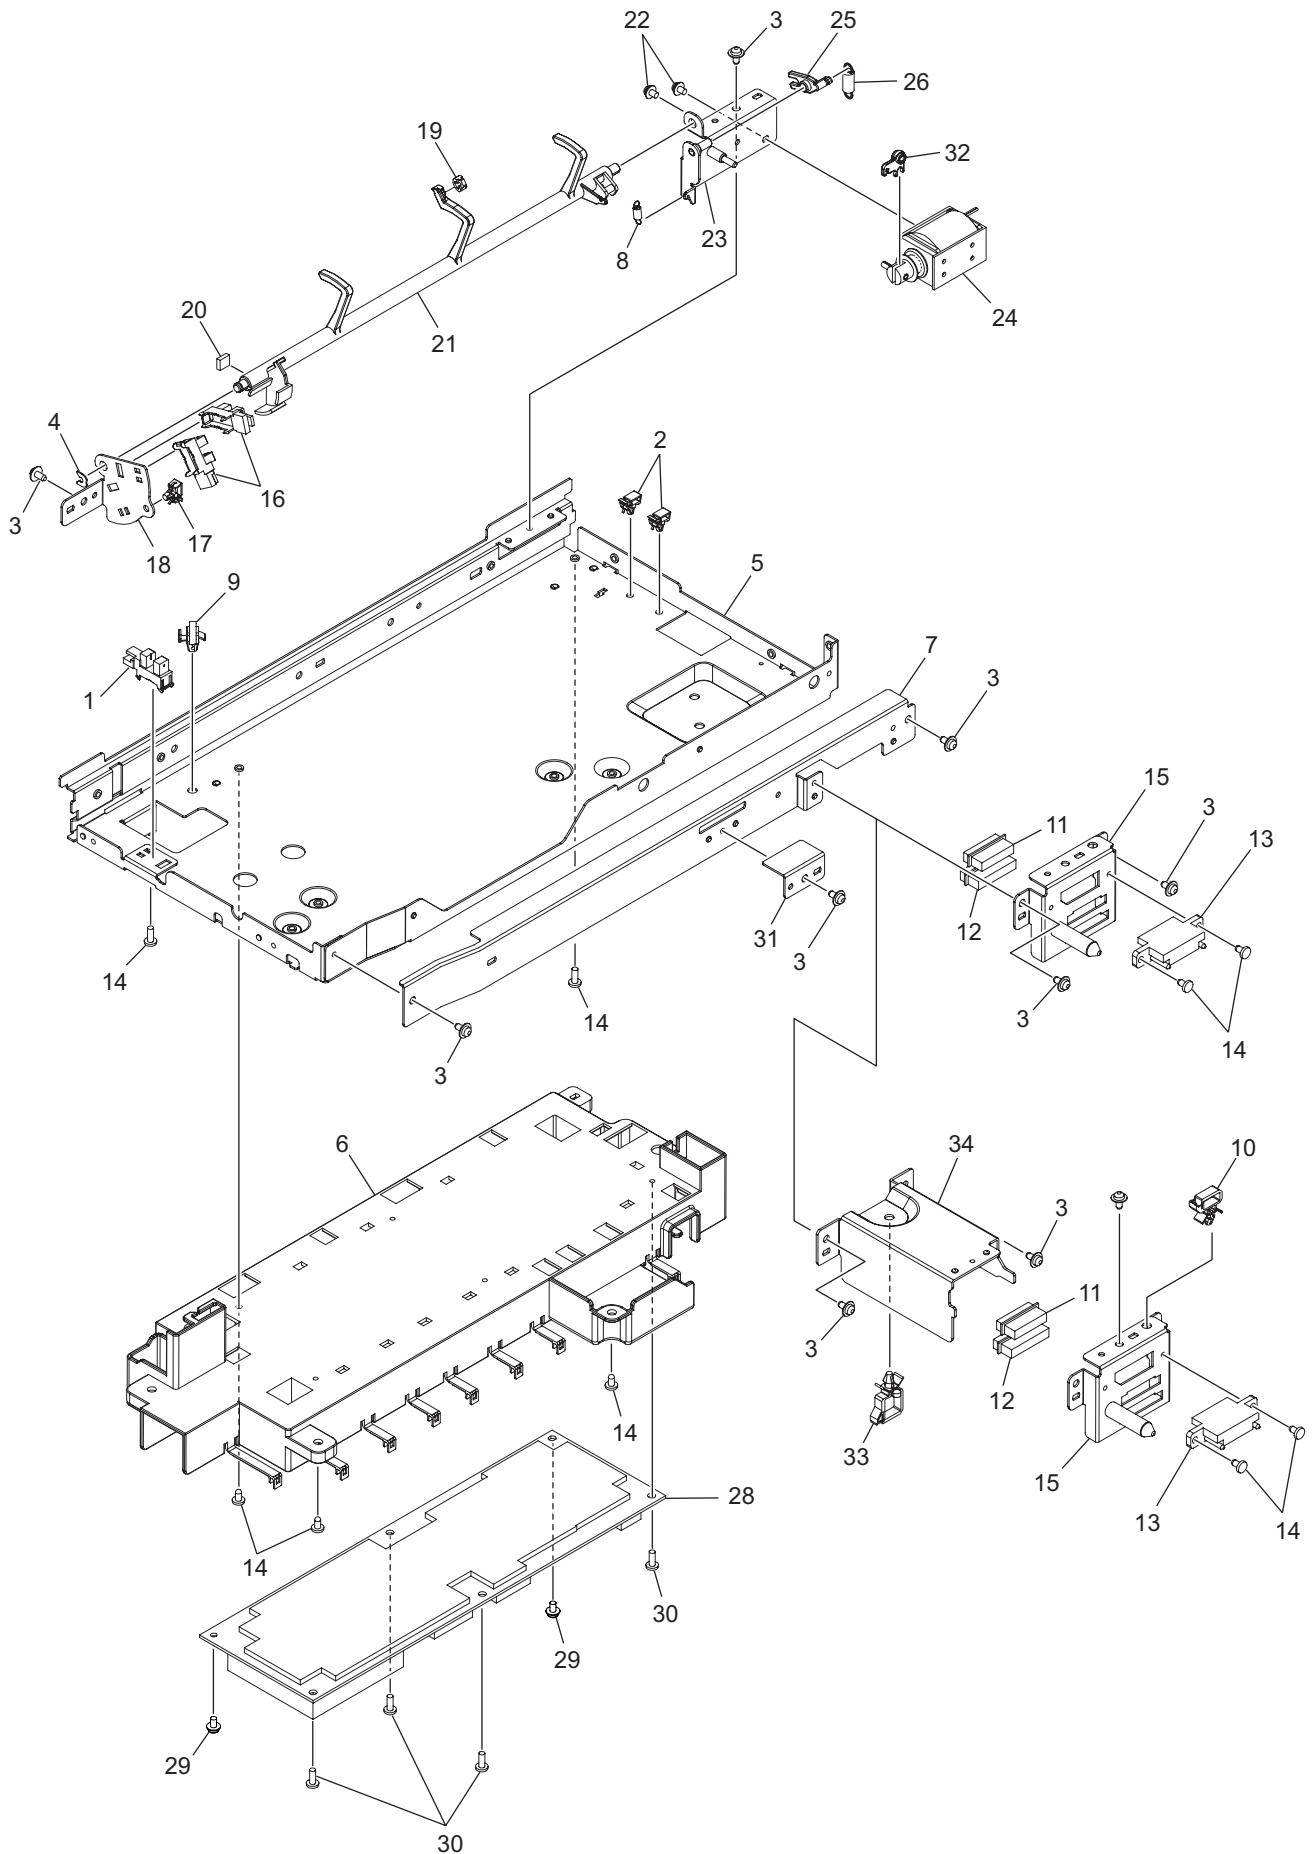


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-BASE-FRAME		GP1S173LCSOF		6LJ20009000
2	ASYB-BASE-FRAME		RLMS-1V0		6LJ20014000
3	ASYB-BASE-FRAME		SCRO3T060SR-W		6LJ20064000
4	ASYB-BASE-FRAME		CLIP-CB3		6LJ20097000
5	ASYB-BASE-FRAME		CAULKING FRM BOTM		6LJ20510000
6	ASYB-BASE-FRAME		DUCT-PCB		6LJ19690000
7	ASYB-BASE-FRAME		BKT-STP-RAIL		6LJ19646000
8	ASYB-BASE-FRAME		SPRING PR YO		6LJ20910000
9	ASYB-BASE-FRAME		RSG-100		6LJ20677000
10A	ASYB-BASE-FRAME		LWSR-0511		6LJ20686000
11	ASYB-BASE-FRAME		3-292215-4		6LJ20017000
12	ASYB-BASE-FRAME		1-292215-6		6LJ20018000
13	ASYB-BASE-FRAME		9715B-10Z02-G4C		6LJ20019000
14	ASYB-BASE-FRAME		SCRO3T060SR-W		6LJ20063000
15	ASYB-BASE-FRAME		CAULKING BKT JNT ENT		6LJ20539000
16	ASYB-BASE-FRAME		GP1S173LCSOF		6LJ20009000
17	ASYB-BASE-FRAME		RLMS-1V0		6LJ20014000
18	ASYB-BASE-FRAME		BKT-SEN-PR-YO		6LJ19613000
19	ASYB-BASE-FRAME		CUSH-YO		6LJ20085000
20	ASYB-BASE-FRAME		DMP-TR-YO		6LJ20453000
21	ASYB-BASE-FRAME		LVR-PR-YO		6LJ19697000
22	ASYB-BASE-FRAME		SCRO30050WS		6LJ19996000
23	ASYB-BASE-FRAME		CAULKING BKT SOL YO		6LJ20520000
24	ASYB-BASE-FRAME		ASSEMBLY SOL YO		6LJ20535000
25	ASYB-BASE-FRAME		LVR-PR-SOL-YO2		6LJ19696000
26	ASYB-BASE-FRAME		SPRING PR SOL YO		6LJ20590000
28B	ASYB-BASE-FRAME		ASY-PBA-CONT-CL		6LJ21122000
29	ASYB-BASE-FRAME		SCRO3M060-WS-W		6LJ19999000
30	ASYB-BASE-FRAME		SCR-030-080WBB		6LJ20698000
31	ASYB-BASE-FRAME		BKT-STP-LOCK		6LJ19629000
32	ASYB-BASE-FRAME		LVR-PR-SOL-YO		6LJ19695000
33A	ASYB-BASE-FRAME		LWSR-1211		6LJ20687000
34A	ASYB-BASE-FRAME		BRACKET SPC DW		6LJ20833000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

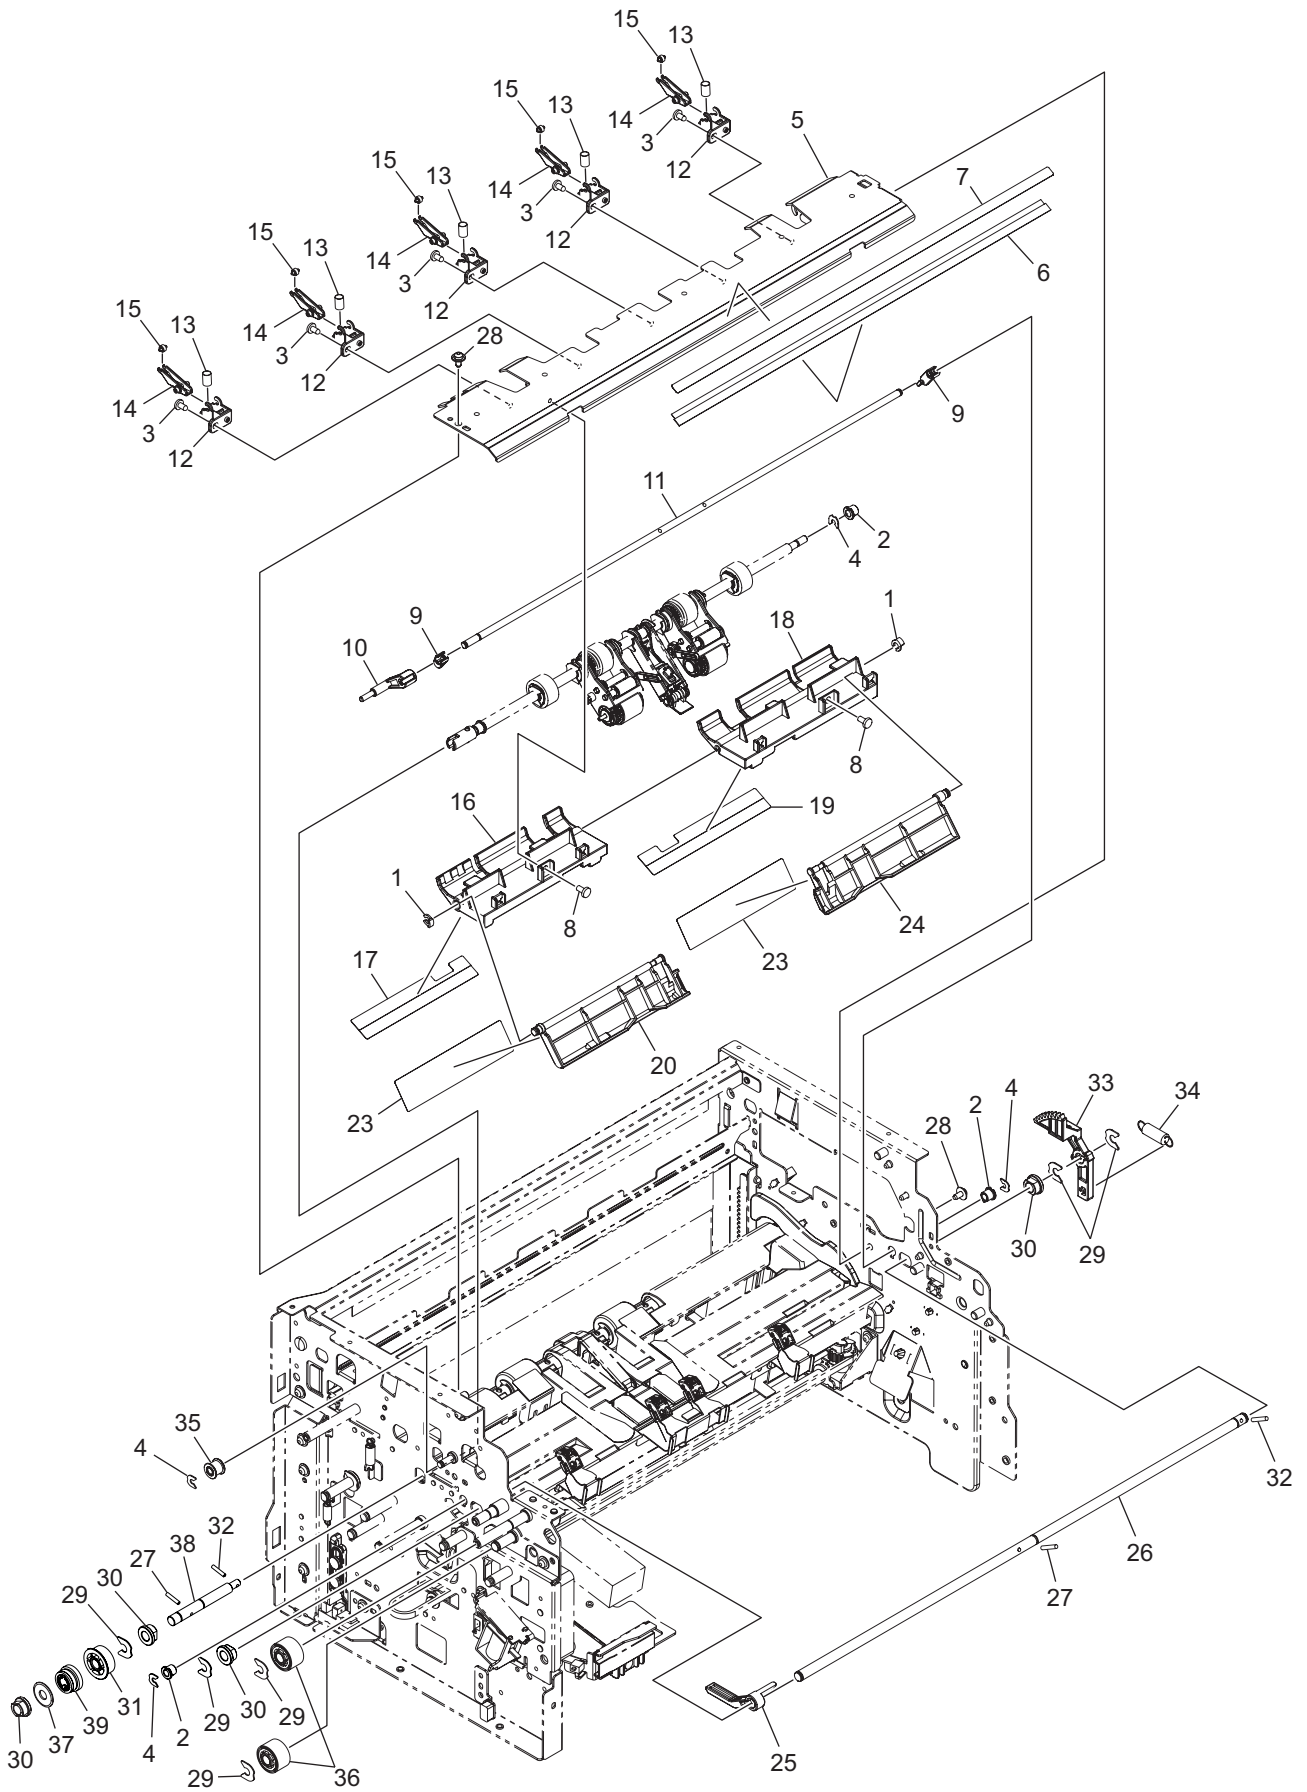


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-FIN-SEG-1		CLIP040100G		6LJ20053000
2	ASYB-FIN-SEG-1		METAL040060CU		6LJ20057000
3	ASYB-FIN-SEG-1		SCRO3T060SR-W		6LJ20063000
4	ASYB-FIN-SEG-1		CLIP-CB3		6LJ20097000
5	ASYB-FIN-SEG-1		GUIDE-FIN-SEG		6LJ19627000
6	ASYB-FIN-SEG-1		BRUSH GID SEG		6LJ20612000
7	ASYB-FIN-SEG-1		SHEET GID BRUSH2		6LJ20631000
8	ASYB-FIN-SEG-1		SCRO30060FWB1		6LJ20691000
9	ASYB-FIN-SEG-1		ARM-FIN-SEG-ROL		6LJ19730000
10	ASYB-FIN-SEG-1		LEVER-BLT		6LJ19740000
11	ASYB-FIN-SEG-1		SHAFT FIN SEG ROL UD		6LJ20571000
12	ASYB-FIN-SEG-1		HOLDER FIN SEG COL		6LJ20563000
13	ASYB-FIN-SEG-1		SPRING FIN SEG COL		6LJ20901000
14	ASYB-FIN-SEG-1		ARM FIN SEG COL		6LJ20616000
15	ASYB-FIN-SEG-1		KORO FIN SEG COL		6LJ20617000
16	ASYB-FIN-SEG-1		GUIDE-FIN-SEG-F		6LJ19726000
17	ASYB-FIN-SEG-1		SHEET-GID-FIN-SEG-F		6LJ19820000
18	ASYB-FIN-SEG-1		GUIDE-FIN-SEG-R		6LJ19727000
19	ASYB-FIN-SEG-1		SHEET-GID-FIN-SEG-R		6LJ19821000
20	ASYB-FIN-SEG-1		GID-FIN-SEG-F2		6LJ19799000
23	ASYB-FIN-SEG-1		SHEET-GID-FIN-SEG2		6LJ19822000
24	ASYB-FIN-SEG-1		GUIDE FIN SEG R2		6LJ20618000
25	ASYB-FIN-SEG-1		LEVER-FIN-SEG-C		6LJ19744000
26	ASYB-FIN-SEG-1		SHAFT FIN SEG WGT		6LJ20572000
27	ASYB-FIN-SEG-1		HP-020		6LJ20713000
28	ASYB-FIN-SEG-1		SCRO3T060SR-W		6LJ20064000
29	ASYB-FIN-SEG-1		CLIP050060W		6LJ20054000
30	ASYB-FIN-SEG-1		METAL060060FC		6LJ20060000
31	ASYB-FIN-SEG-1		KORO-PICK-IDL		6LJ19755000
32	ASYB-FIN-SEG-1		SFT-020-100SP-B		6LJ20708000
33	ASYB-FIN-SEG-1		LEVER-FIN-SEG-SOL1		6LJ19745000
34	ASYB-FIN-SEG-1		SPRING FIN SEG PUSHLNK		6LJ20600000
35	ASYB-FIN-SEG-1		KORO-FE-EX-BLT		6LJ19781000
36	ASYB-FIN-SEG-1		GEAR-08S2-60		6LJ19756000
37	ASYB-FIN-SEG-1		FLG-FEED-PLY		6LJ20083000
38	ASYB-FIN-SEG-1		SHAFT FE BLT F		6LJ20574000
39	ASYB-FIN-SEG-1		PULLEY-S2M22-6		6LJ19750000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

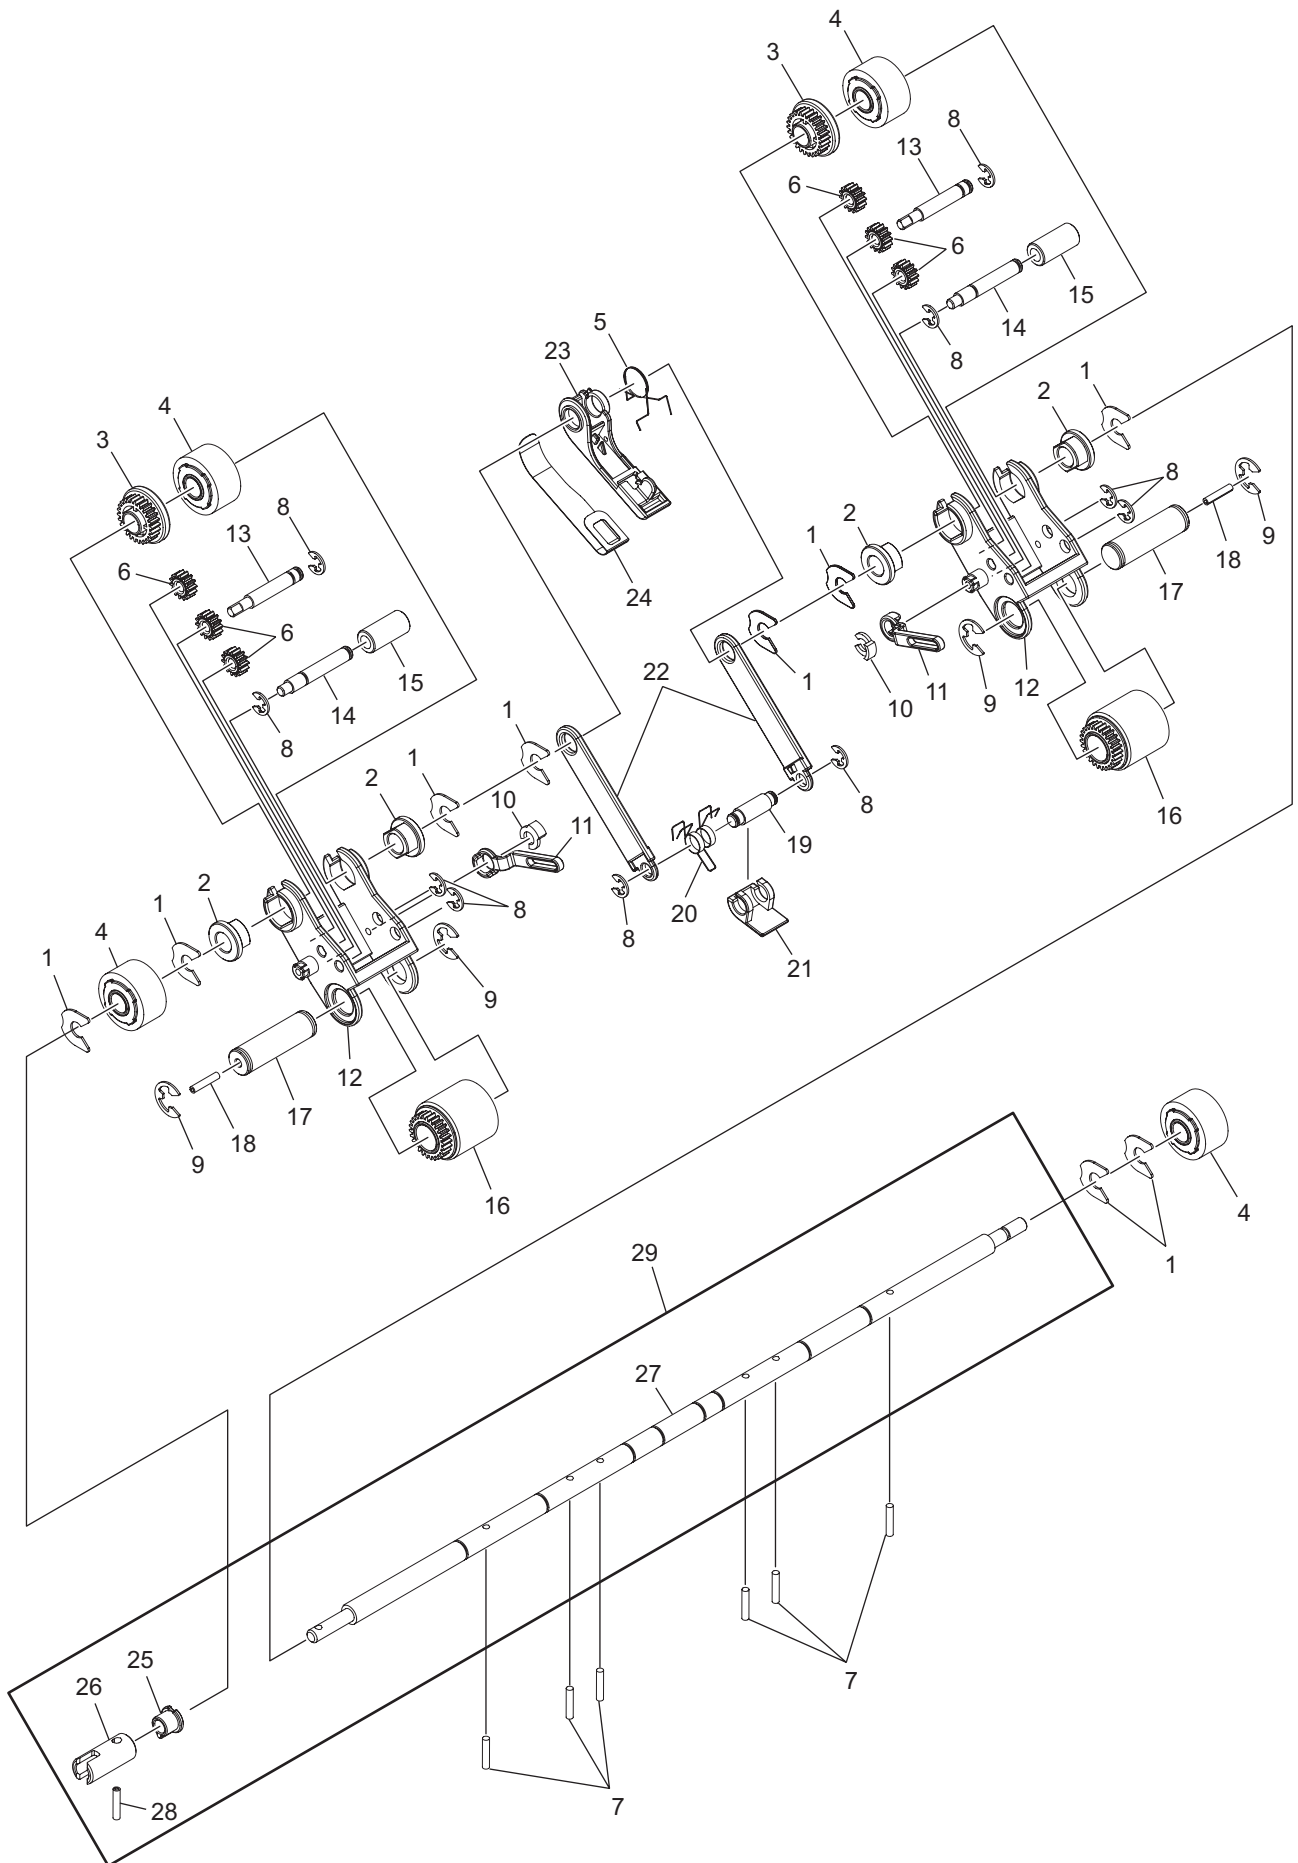


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-FIN-SEG-2		CLIP050060W		6LJ20054000
2	ASYB-FIN-SEG-2		METAL060060FC		6LJ20060000
3	ASYB-FIN-SEG-2		GEAR-05S26-6		6LJ19732000
4	ASYB-FIN-SEG-2		ROL-FIN-SEG1		6LJ19808000
5	ASYB-FIN-SEG-2		SPRING FIN SEG C		6LJ20607000
6	ASYB-FIN-SEG-2		GEAR-05S14-3		6LJ19746000
7	ASYB-FIN-SEG-2		HPIN-2X10		6LJ20712000
8	ASYB-FIN-SEG-2		ER-030		6LJ20021000
9	ASYB-FIN-SEG-2		ER-050		6LJ20023000
10	ASYB-FIN-SEG-2		CLIP040100G		6LJ20053000
11	ASYB-FIN-SEG-2		LINK-FIN-SEG-ROL		6LJ19729000
12	ASYB-FIN-SEG-2		HLD-FIN-SEG-ROL-F		6LJ19731000
13	ASYB-FIN-SEG-2		SHAFT FIN SEG ROL2		6LJ20575000
14	ASYB-FIN-SEG-2		SHAFT FIN SEG ROL3		6LJ20585000
15	ASYB-FIN-SEG-2		SHAFT FIN SEG ROL4		6LJ20586000
16	ASYB-FIN-SEG-2		ROLLER FIN SEG2		6LJ20592000
17	ASYB-FIN-SEG-2		SHAFT FIN SEG ROL1		6LJ20573000
18	ASYB-FIN-SEG-2		SFT-020-100SP-B		6LJ20708000
19	ASYB-FIN-SEG-2		SHAFT FIN SEG WGT C		6LJ20579000
20	ASYB-FIN-SEG-2		SPRING FIN SEG WGT C		6LJ20905000
21	ASYB-FIN-SEG-2		WEIGHT-FIN-SEG-C		6LJ19747000
22	ASYB-FIN-SEG-2		ARM-FIN-SEG-WGT-C		6LJ19765000
23	ASYB-FIN-SEG-2		GUIDE-FIN -SEG-C		6LJ19728000
24	ASYB-FIN-SEG-2		SHEET-FIN-SEG-GID-C		6LJ19809000
25	ASYB-FIN-SEG-2		METAL040060CU		6LJ20057000
26	ASYB-FIN-SEG-2		JOINT-FE-BLT		6LJ19734000
27	ASYB-FIN-SEG-2		SHAFT FIN SEG ROL		6LJ20570000
28	ASYB-FIN-SEG-2		SFT-020-100SP-B		6LJ20708000
29	ASYB-FIN-SEG-2		ASSEMBLY SFT FIN SEGROL		6LJ20529000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

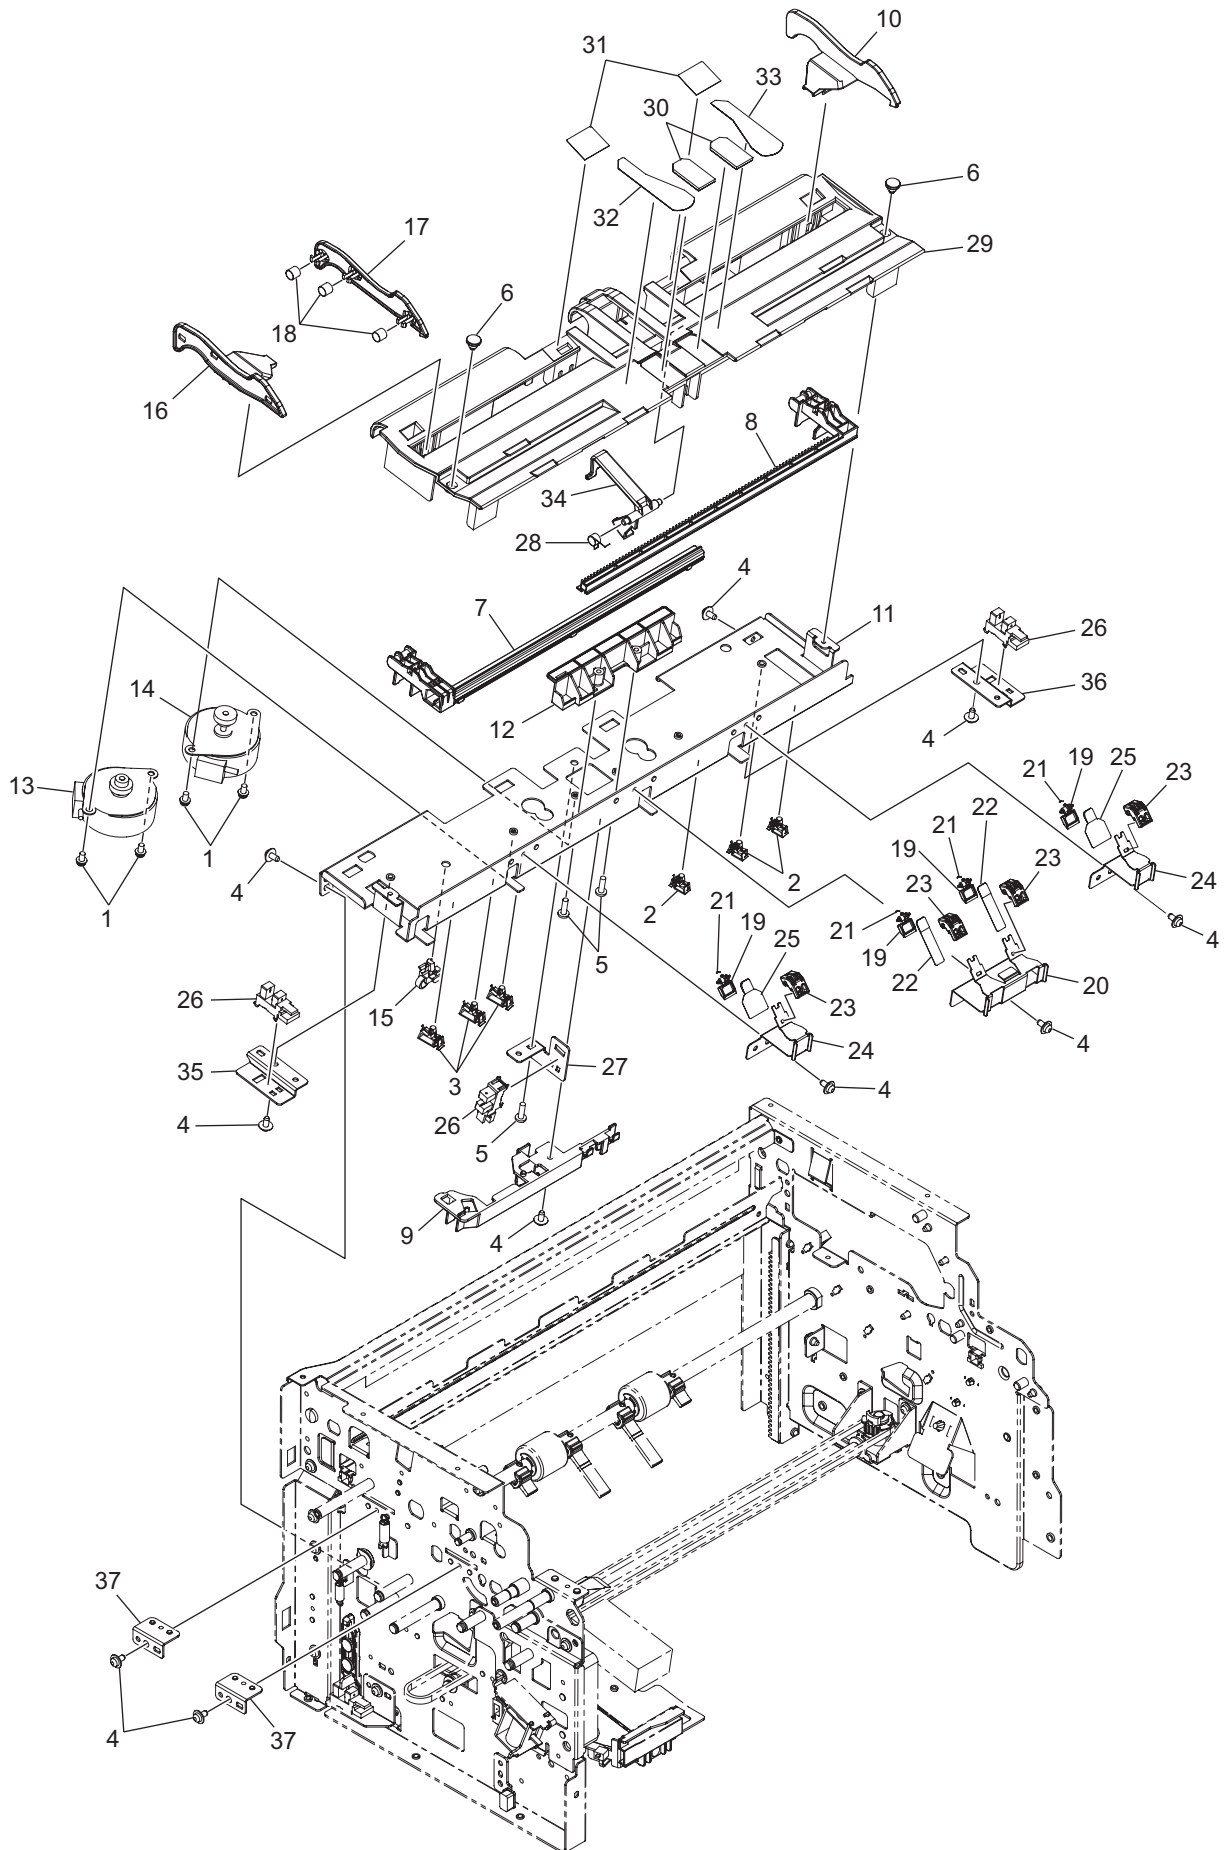


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-TRAY-SEG		SCR-030-060		6LJ19998000
2	ASYB-TRAY-SEG		RLMS-1V0		6LJ20014000
3	ASYB-TRAY-SEG		RLMS-2V0		6LJ20015000
4	ASYB-TRAY-SEG		SCR03T060SR-W		6LJ20064000
5	ASYB-TRAY-SEG		SCR03T100WAVE-W		6LJ20065000
6	ASYB-TRAY-SEG		SCR-M3-DAN3. 5-MARU-D		6LJ20504000
7	ASYB-TRAY-SEG		RACK-SEG-F		6LJ19720000
8	ASYB-TRAY-SEG		RACK-SEG-R		6LJ19721000
9	ASYB-TRAY-SEG		GUIDE-SEG-HRNS-C		6LJ19722000
10	ASYB-TRAY-SEG		PLATE-SEG-R		6LJ19725000
11	ASYB-TRAY-SEG		BASE-SEG		6LJ19624000
12	ASYB-TRAY-SEG		STP-SEG-RACK		6LJ19767000
13	ASYB-TRAY-SEG		PM42S-048-NSL1		6LJ20625000
14	ASYB-TRAY-SEG		PM42S-048-NSL2		6LJ20626000
15	ASYB-TRAY-SEG		RSG-100		6LJ20677000
16	ASYB-TRAY-SEG		PLATE-SEG-F		6LJ19723000
17	ASYB-TRAY-SEG		PLATE-SEG-F-SUB		6LJ19724000
18	ASYB-TRAY-SEG		SPRING SEG JOG		6LJ20599000
19	ASYB-TRAY-SEG		LEVER-SEG-WGT1		6LJ19743000
20	ASYB-TRAY-SEG		SPG-F-SEG-STOP-C		6LJ19626000
21	ASYB-TRAY-SEG		SPRING SEG WGT		6LJ20593000
22	ASYB-TRAY-SEG		SHEET-SEG-WGT2		6LJ19811000
23	ASYB-TRAY-SEG		HLD-SEG-WGT2		6LJ19764000
24	ASYB-TRAY-SEG		SPG-F-SEG-STOP-FR		6LJ19625000
25	ASYB-TRAY-SEG		SHEET-SEG-WGT1		6LJ19810000
26	ASYB-TRAY-SEG		GP1S173LCSOF		6LJ20009000
27	ASYB-TRAY-SEG		BKT-SEG-SEN-C		6LJ19637000
28	ASYB-TRAY-SEG		SP-PR-SEG-SEN		6LJ20092000
29	ASYB-TRAY-SEG		TRAY-SEG		6LJ19719000
30	ASYB-TRAY-SEG		SHEET SEG STOP		6LJ20902000
31	ASYB-TRAY-SEG		SHEET-SEG-ROL		6LJ19819000
32	ASYB-TRAY-SEG		SHEETSEG ROL UN F		6LJ20613000
33	ASYB-TRAY-SEG		SHEET SEG ROL UN R		6LJ20614000
34	ASYB-TRAY-SEG		LEVER-SEG-SEN		6LJ19749000
35	ASYB-TRAY-SEG		BKT-SEG-SEN-JOG-F		6LJ19638000
36	ASYB-TRAY-SEG		BKT-SEG-SEN-JOG-R		6LJ19640000
37	ASYB-TRAY-SEG		FRAME-F-SUB2		6LJ19653000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

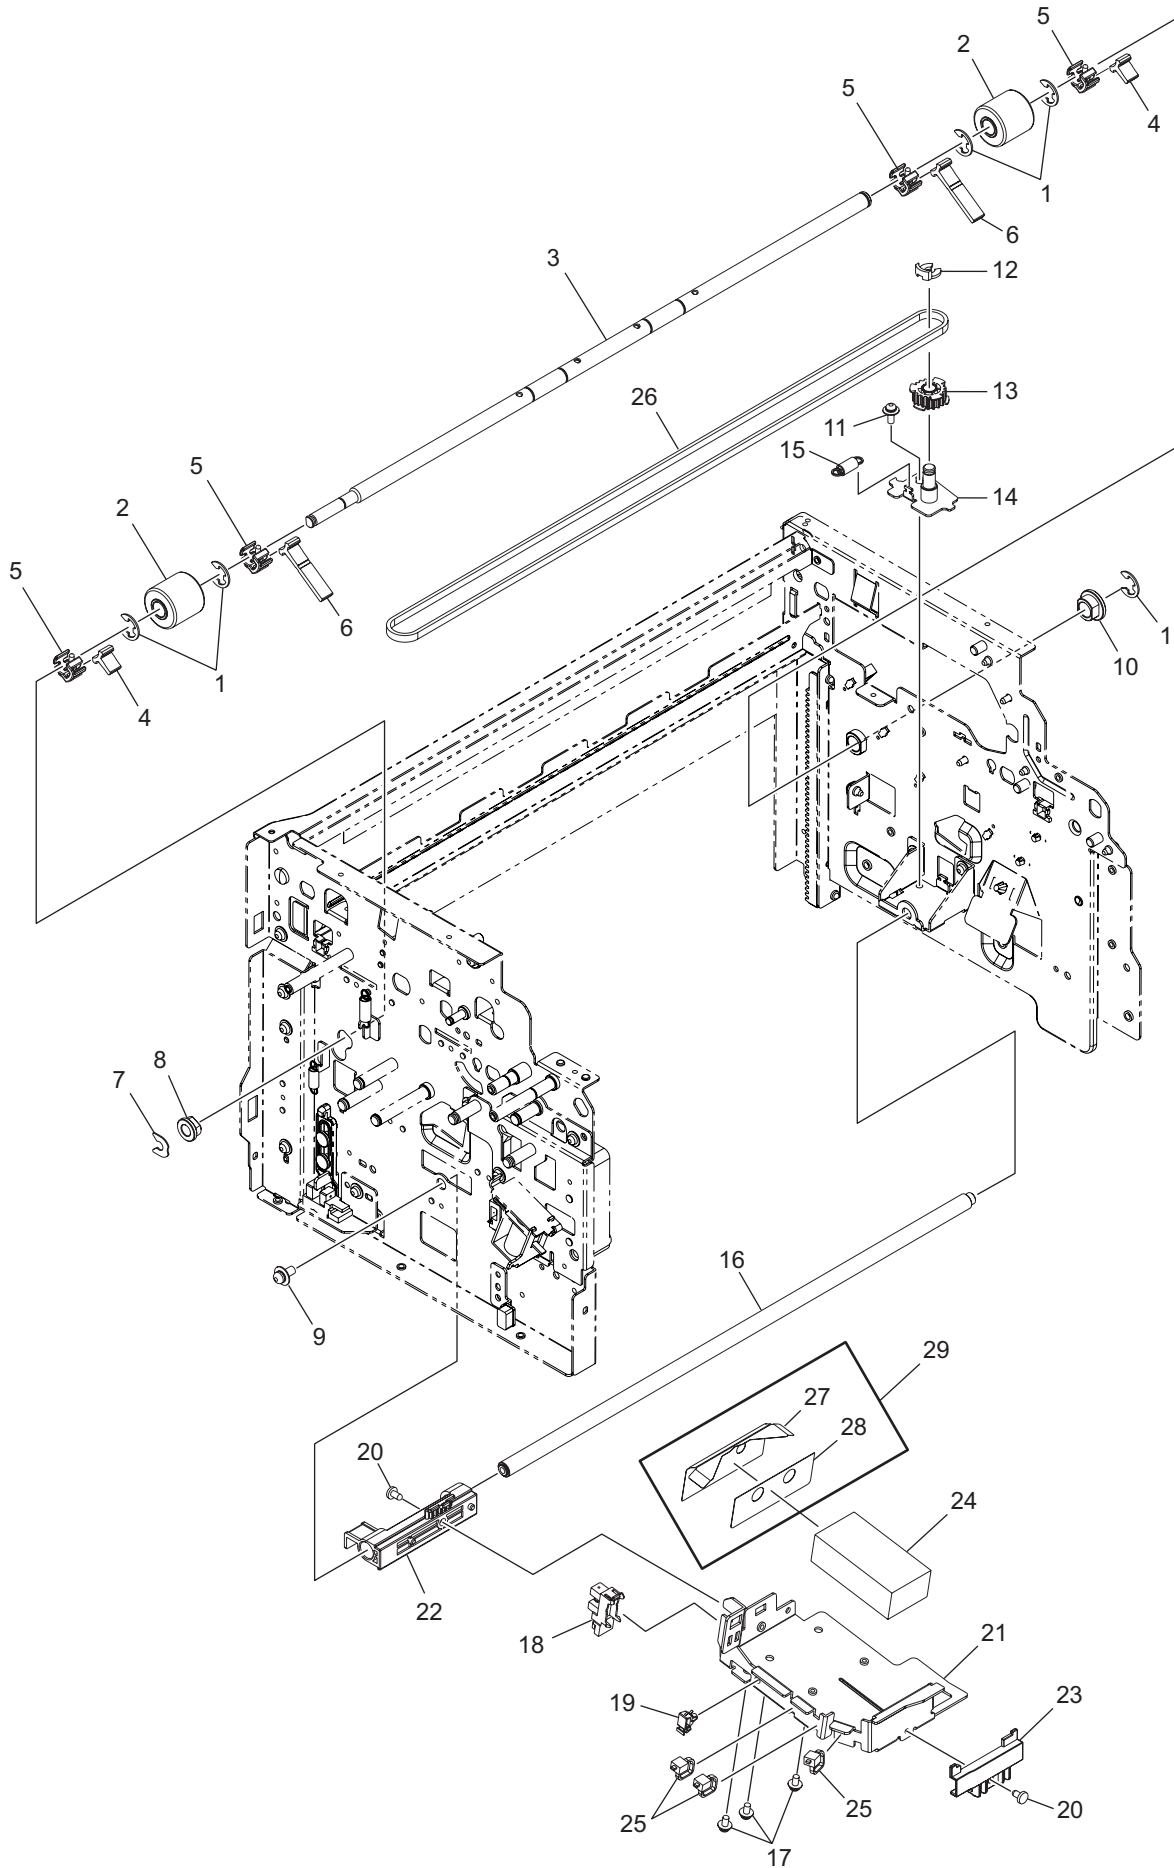


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-ROL-PR-EXIT		ER-070		6LJ20024000
2	ASYB-ROL-PR-EXIT		ROL-PR-EXIT-W		6LJ20109000
3	ASYB-ROL-PR-EXIT		SHAFTSEG EXIT		6LJ20578000
4	ASYB-ROL-PR-EXIT		PDL-PR-EXIT-S		6LJ20096000
5	ASYB-ROL-PR-EXIT		HLDR-PR-PDL-W		6LJ20110000
6	ASYB-ROL-PR-EXIT		PDL-PR-EXIT		6LJ20091000
7	ASYB-ROL-PR-EXIT		CLIP050060W		6LJ20054000
8	ASYB-ROL-PR-EXIT		METAL060060FC		6LJ20060000
9	ASYB-ROL-PR-EXIT		SCRO40080FWWS		6LJ20003000
10	ASYB-ROL-PR-EXIT		METAL080070FC		6LJ20061000
11	ASYB-ROL-PR-EXIT		SCRO30080FWWS		6LJ20000000
12	ASYB-ROL-PR-EXIT		CLIP050140W		6LJ20055000
13	ASYB-ROL-PR-EXIT		PULLEY-S3M18-6		6LJ19751000
14	ASYB-ROL-PR-EXIT		CAULKING STP KUDO TEN		6LJ20511000
15	ASYB-ROL-PR-EXIT		SPRING STP TEN		6LJ20909000
16	ASYB-ROL-PR-EXIT		SHAFT STP IDO		6LJ20577000
17	ASYB-ROL-PR-EXIT		SCRO3M060-WS-W		6LJ19999000
18	ASYB-ROL-PR-EXIT		GP1S173LCS0F		6LJ20009000
19	ASYB-ROL-PR-EXIT		RLMS-1V0		6LJ20014000
20	ASYB-ROL-PR-EXIT		SCRO3T060SR-W		6LJ20063000
21	ASYB-ROL-PR-EXIT		BASE-STP		6LJ19628000
22	ASYB-ROL-PR-EXIT		SLIDER-STP-SFT		6LJ19752000
23	ASYB-ROL-PR-EXIT		SLIDER-STP		6LJ19777000
24	ASYB-ROL-PR-EXIT		EH-C590N-T		6LJ20627000
25	ASYB-ROL-PR-EXIT		T18R-V0		6LJ20688000
26	ASYB-ROL-PR-EXIT		BELT TIMING S3M26240		6LJ20721000
27	ASYB-ROL-PR-EXIT		PLT-STP-GID		6LJ20270000
28	ASYB-ROL-PR-EXIT		DF-TAPE-GID-STP		6LJ20448000
29	ASYB-ROL-PR-EXIT		ASSEMBLY PLT STP GID		6LJ20506000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

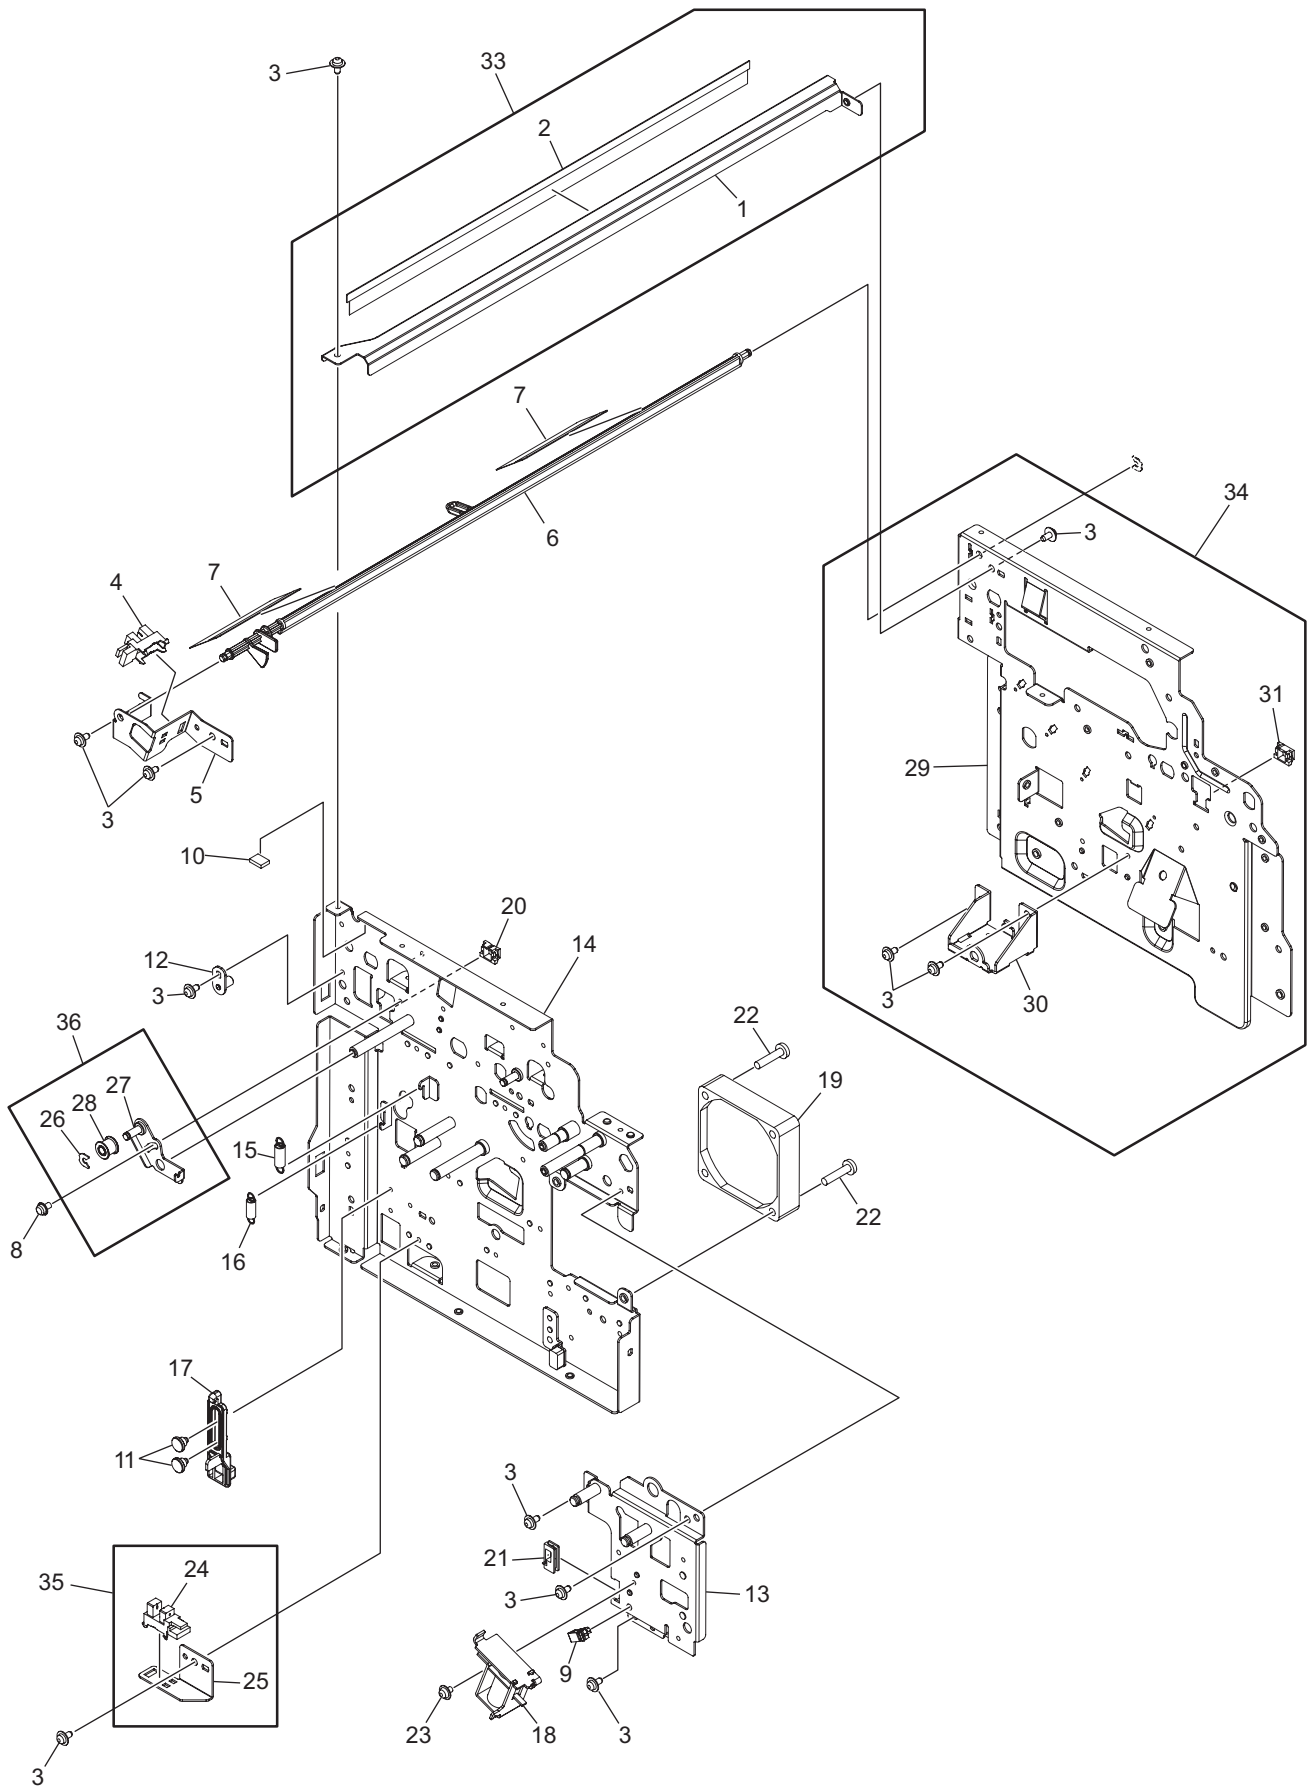


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-STAY&FAN		STAY-SUB-EXIT		6LJ19664000
2	ASYB-STAY&FAN		BRUSH-FEED-SUB-EXIT		6LJ19813000
3	ASYB-STAY&FAN		SCRO3T060SR-W		6LJ20064000
4	ASYB-STAY&FAN		GP1S173LCSOF		6LJ20009000
5	ASYB-STAY&FAN		BKT-SUB-TRY-FULL		6LJ19607000
6	ASYB-STAY&FAN		LVR-SUB-TRY-FULL		6LJ19682000
7	ASYB-STAY&FAN		SHEET LVR SUB TRY		6LJ20610000
8	ASYB-STAY&FAN		SCRO3M060-WS-W		6LJ19999000
9	ASYB-STAY&FAN		RLMS-1V0		6LJ20014000
10	ASYB-STAY&FAN		DMP-FE-LVR-ENT		6LJ20095000
11	ASYB-STAY&FAN		SCR-M3-DAN3. 5-MARU-D		6LJ20504000
12	ASYB-STAY&FAN		CAULKING BKT FULDRUMSUB		6LJ20508000
13	ASYB-STAY&FAN		CAULKING BKT ROL LIFT		6LJ20512000
14	ASYB-STAY&FAN		CAULKING FRM F		6LJ20513000
15	ASYB-STAY&FAN		SPRING FESUB DRV TN		6LJ20598000
16	ASYB-STAY&FAN		SPRING SNS FULL		6LJ20908000
17	ASYB-STAY&FAN		LVR-SNS-FULL		6LJ19774000
18	ASYB-STAY&FAN		TDS-F12G-80		6LJ19827000
19	ASYB-STAY&FAN		FAN-H35760-57NIS		6LJ20667000
20	ASYB-STAY&FAN		EDS-0607M		6LJ20676000
21	ASYB-STAY&FAN		LES-0510		6LJ20684000
22	ASYB-STAY&FAN		SCR-040-180FNBI		6LJ20695000
23	ASYB-STAY&FAN		SCR-030-040NIT		6LJ20701000
24	ASYB-STAY&FAN		GP1S173LCSOF		6LJ20009000
25	ASYB-STAY&FAN		BKT-SNS-FULL		6LJ19651000
26	ASYB-STAY&FAN		CLIP-CB3		6LJ20097000
27	ASYB-STAY&FAN		CAULKING BKT FE SUBTN		6LJ20514000
28	ASYB-STAY&FAN		KORO-FE-EX-BLT		6LJ19781000
29	ASYB-STAY&FAN		CAULKING FRM R		6LJ20521000
30	ASYB-STAY&FAN		BKT-STP-DRV-R		6LJ19634000
31	ASYB-STAY&FAN		EDS-0607M		6LJ20676000
33	ASYB-STAY&FAN		ASSEMBLY STY SUB EXIT		6LJ20537000
34	ASYB-STAY&FAN		ASSEMBLY FRM R		6LJ20530000
35	ASYB-STAY&FAN		ASSEMBLY BKT SNS FULL		6LJ20531000
36	ASYB-STAY&FAN		ASSEMBLY BKT FE SUBTN		6LJ20532000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

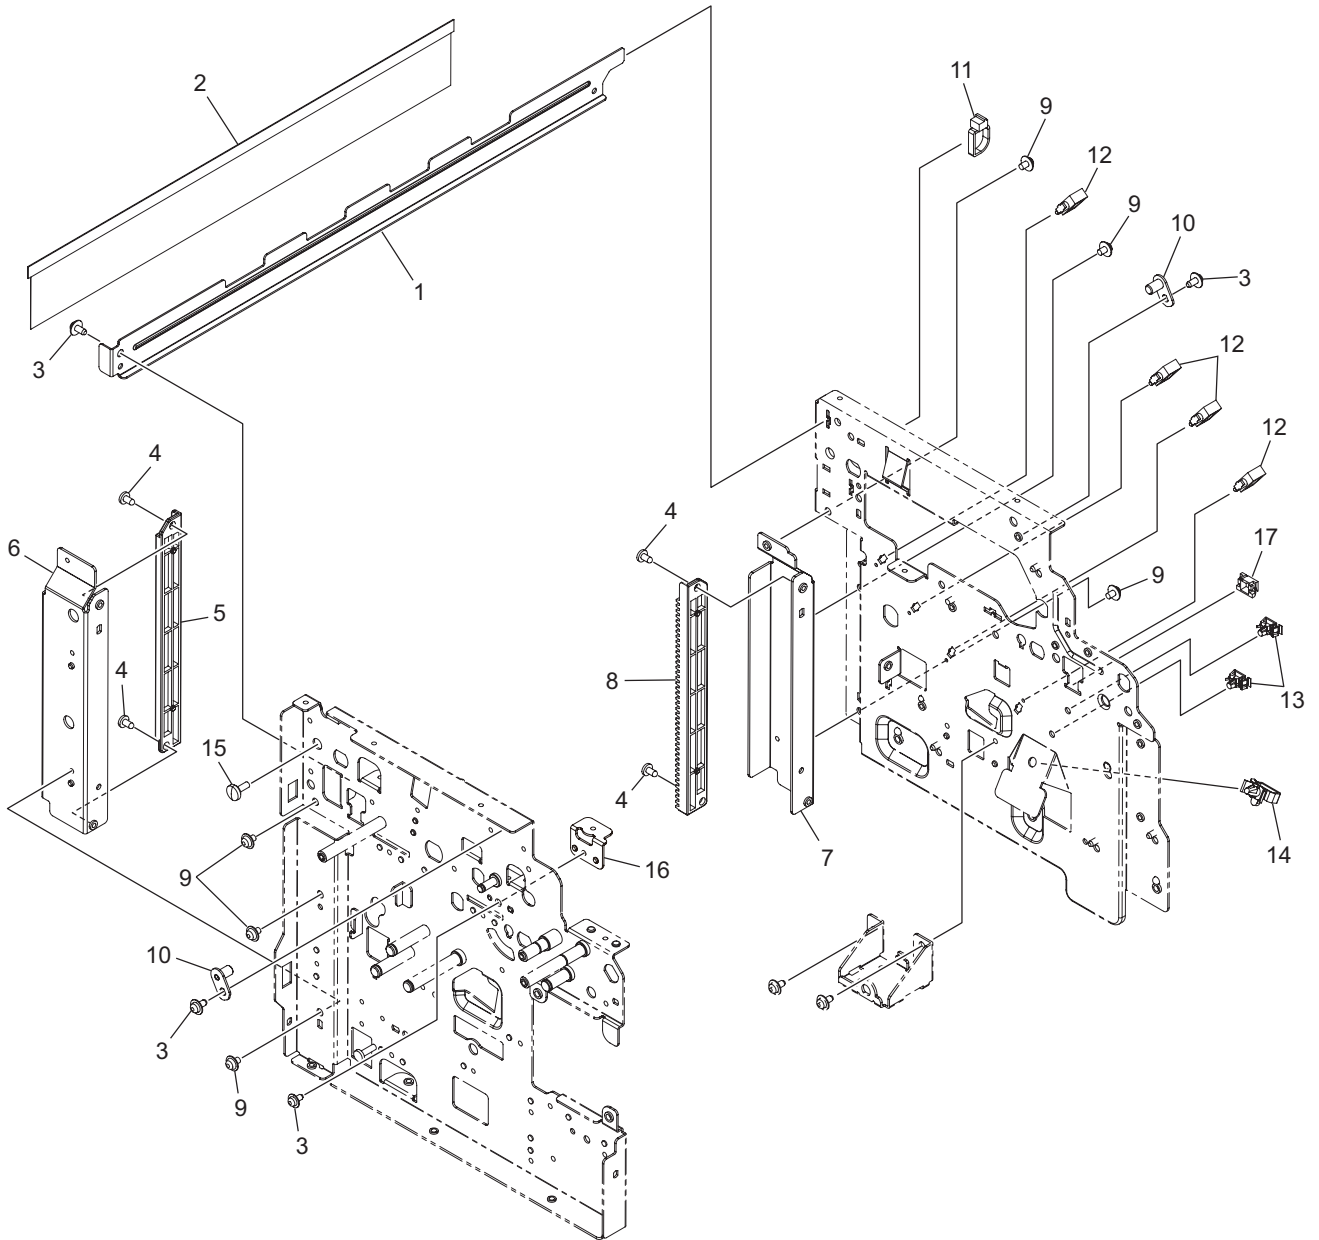


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-GUIDE&RAIL		GID-FE-SUB-EXIT-LO		6LJ19658000
2	ASYB-GUIDE&RAIL		BRUSH-TRY-SUB		6LJ19812000
3	ASYB-GUIDE&RAIL		SCRO3T060SR-W		6LJ20064000
4	ASYB-GUIDE&RAIL		SCRO3T060SR-W		6LJ20063000
5	ASYB-GUIDE&RAIL		RACK-TRY-F		6LJ19713000
6	ASYB-GUIDE&RAIL		RAIL-TRY-F		6LJ19621000
7	ASYB-GUIDE&RAIL		RAIL-TRY-R		6LJ19622000
8	ASYB-GUIDE&RAIL		RACK-TRY-R		6LJ19793000
9	ASYB-GUIDE&RAIL		SCR-030-040NIT		6LJ20701000
10	ASYB-GUIDE&RAIL		CAULKING BKT FULDRUMSUB		6LJ20508000
11	ASYB-GUIDE&RAIL		T30R-V0		6LJ20016000
12	ASYB-GUIDE&RAIL		RLWS-1T V0		6LJ20682000
13	ASYB-GUIDE&RAIL		RLMS-1V0		6LJ20014000
14	ASYB-GUIDE&RAIL		LWSR-0511		6LJ20686000
15	ASYB-GUIDE&RAIL		SCRO3T080-D060014		6LJ20074000
16	ASYB-GUIDE&RAIL		FRAME-F-SUB		6LJ19642000
17	ASYB-GUIDE&RAIL		EDS-0607L		6LJ20685000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

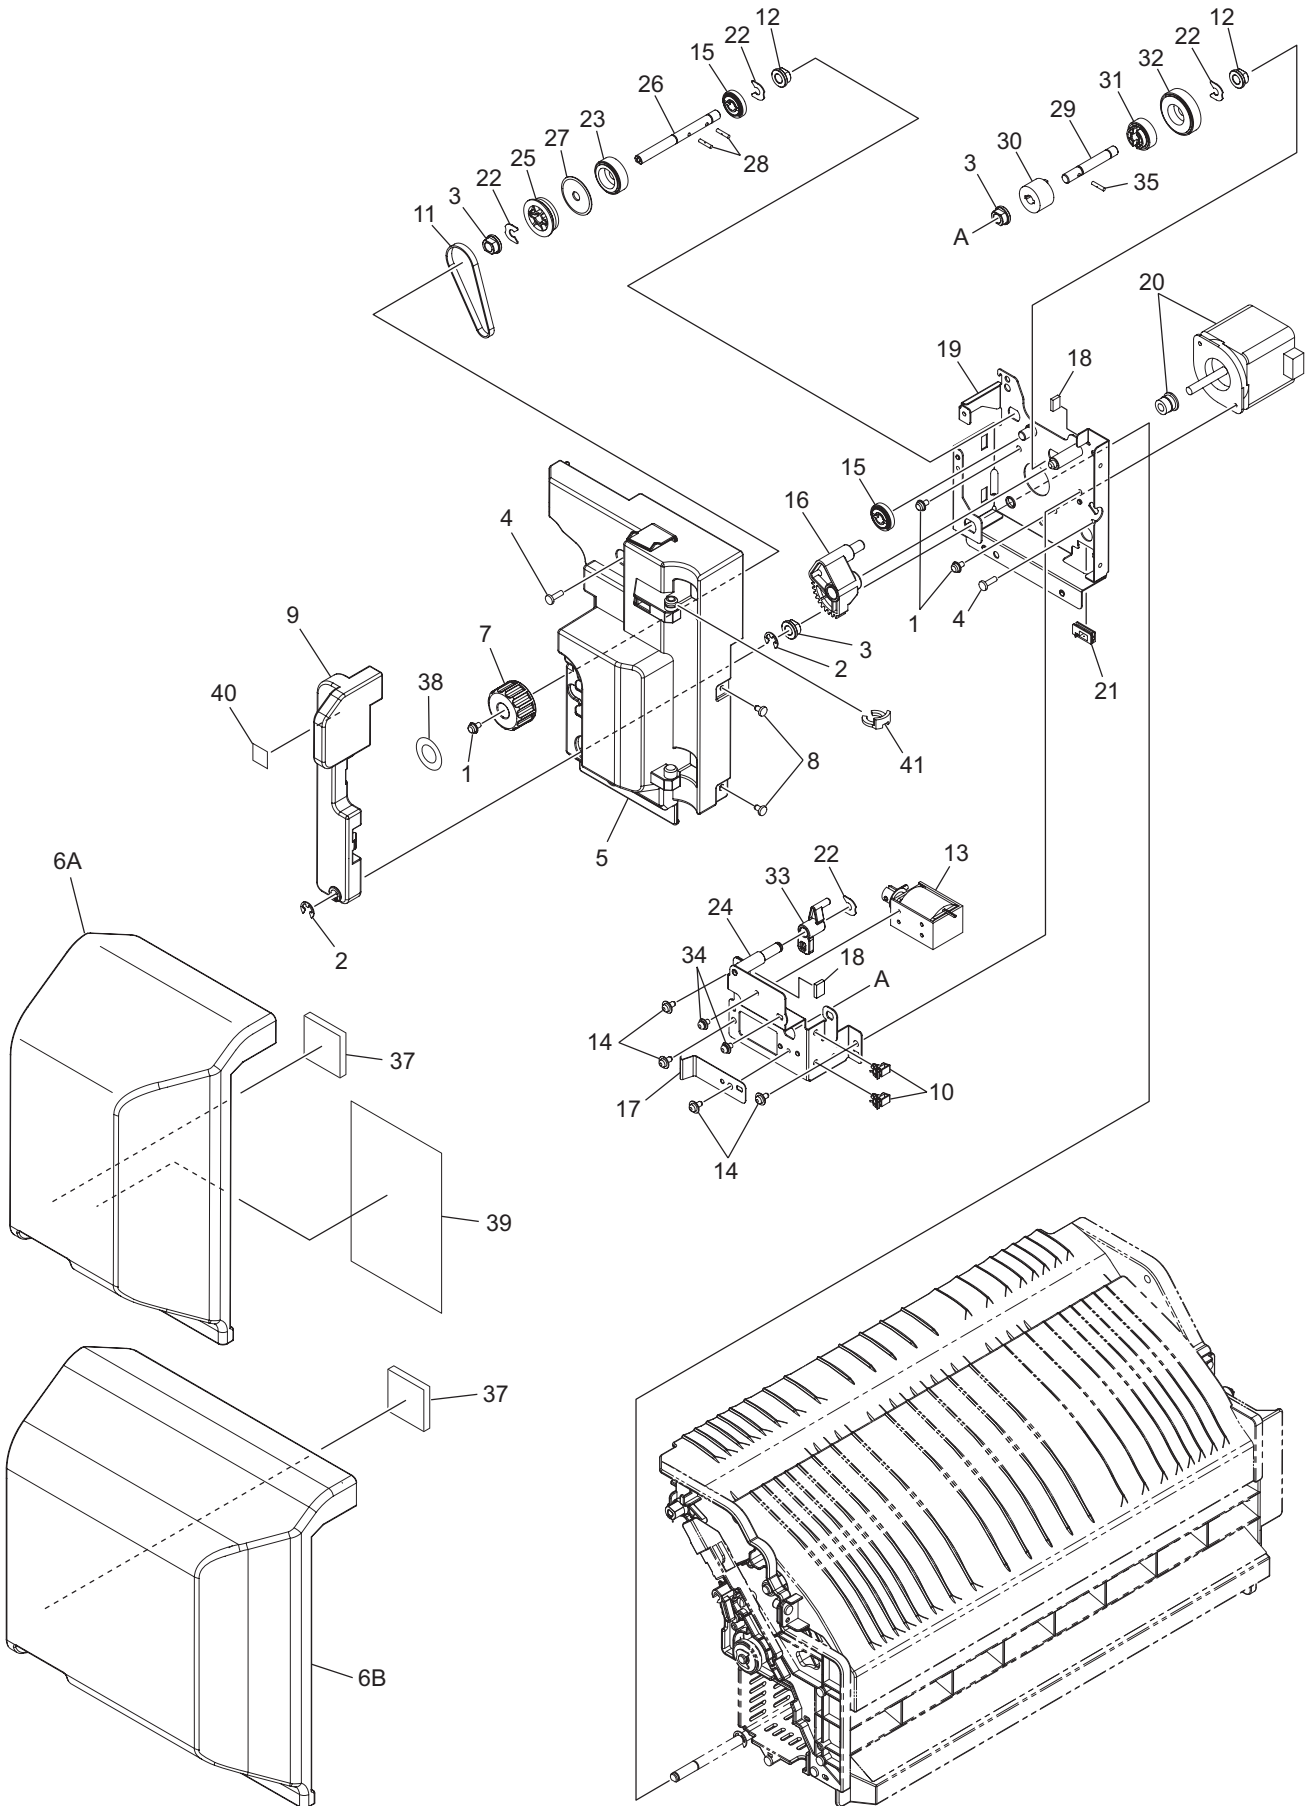


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-ENT-UNIT-F		SCRO3M060-WS-W		6LJ19999000
2	ASYB-ENT-UNIT-F		ER-050		6LJ20023000
3	ASYB-ENT-UNIT-F		METAL060060FC		6LJ20060000
4	ASYB-ENT-UNIT-F		SCRO3T100WAVE-W		6LJ20065000
5	ASYB-ENT-UNIT-F		COV-ENT-INNR-F		6LJ19686000
6A	ASYB-ENT-UNIT-F	45689791	COV-ENT-F-FW		4B54534000
6B	ASYB-ENT-UNIT-F	45689792	COVER-F-JAM-FW		4B54557000
7	ASYB-ENT-UNIT-F		KNOB-JAM		6LJ19738000
8	ASYB-ENT-UNIT-F		SCR-030-060SR		6LJ20609000
9	ASYB-ENT-UNIT-F		LVR-GID-ENT-JAM		6LJ19782000
10	ASYB-ENT-UNIT-F		RLMS-1V0		6LJ20014000
11	ASYB-ENT-UNIT-F		BELTS2M070040		6LJ20032000
12	ASYB-ENT-UNIT-F		BUSH060060MYU		6LJ20051000
13	ASYB-ENT-UNIT-F		ASSEMBLY SOL ENT LNK		6LJ20536000
14	ASYB-ENT-UNIT-F		SCRO3T060SR-W		6LJ20064000
15	ASYB-ENT-UNIT-F		GER-080-20		6LJ20497000
16	ASYB-ENT-UNIT-F		LINK-FEED-FLP-SOL2		6LJ19672000
17	ASYB-ENT-UNIT-F		SPG-F-LOCK-ENT-GID		6LJ19655000
18	ASYB-ENT-UNIT-F		DMP-FE-LVR-ENT		6LJ20095000
19	ASYB-ENT-UNIT-F		CAULKING BKT ENT MOT1		6LJ20523000
20	ASYB-ENT-UNIT-F		17PM-J046-P2VS		6LJ20560000
21	ASYB-ENT-UNIT-F		LES-0510		6LJ20684000
22	ASYB-ENT-UNIT-F		CLIP050060W		6LJ20054000
23	ASYB-ENT-UNIT-F		GER-080-26-OW		6LJ20366000
24	ASYB-ENT-UNIT-F		CAULKING BKT ENT MOT2		6LJ20524000
25	ASYB-ENT-UNIT-F		PULLEY-S2M35-6		6LJ19714000
26	ASYB-ENT-UNIT-F		SHAFT ENT MOT1		6LJ20564000
27	ASYB-ENT-UNIT-F		FLANGE-6-13		6LJ19754000
28	ASYB-ENT-UNIT-F		HP-020		6LJ20713000
29	ASYB-ENT-UNIT-F		SHAFT ENT MOT2		6LJ20580000
30	ASYB-ENT-UNIT-F		TORQUELIMITER ENT MOT		6LJ20595000
31	ASYB-ENT-UNIT-F		GEAR-10S17-6		6LJ19780000
32	ASYB-ENT-UNIT-F		GEAR-08S34-6-OW		6LJ19824000
33	ASYB-ENT-UNIT-F		LINK-FEED-FLP-SOL1		6LJ19671000
34	ASYB-ENT-UNIT-F		SCRO30050WS		6LJ19996000
35	ASYB-ENT-UNIT-F		SFT-020-080SCH		6LJ20711000
37B	ASYB-ENT-UNIT-F		CUSHION CVR F		6LJ20849000
38	ASYB-ENT-UNIT-F		LBL-KNOB-FIN1		6LJ20919000
39	ASYB-ENT-UNIT-F		LBL-STPL-MJ1032		6LJ20923000
40	ASYB-ENT-UNIT-F		LBL-LEVER-FIN		6LJ20922000
41	ASYB-ENT-UNIT-F		CLIP070140B		6LJ20056000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

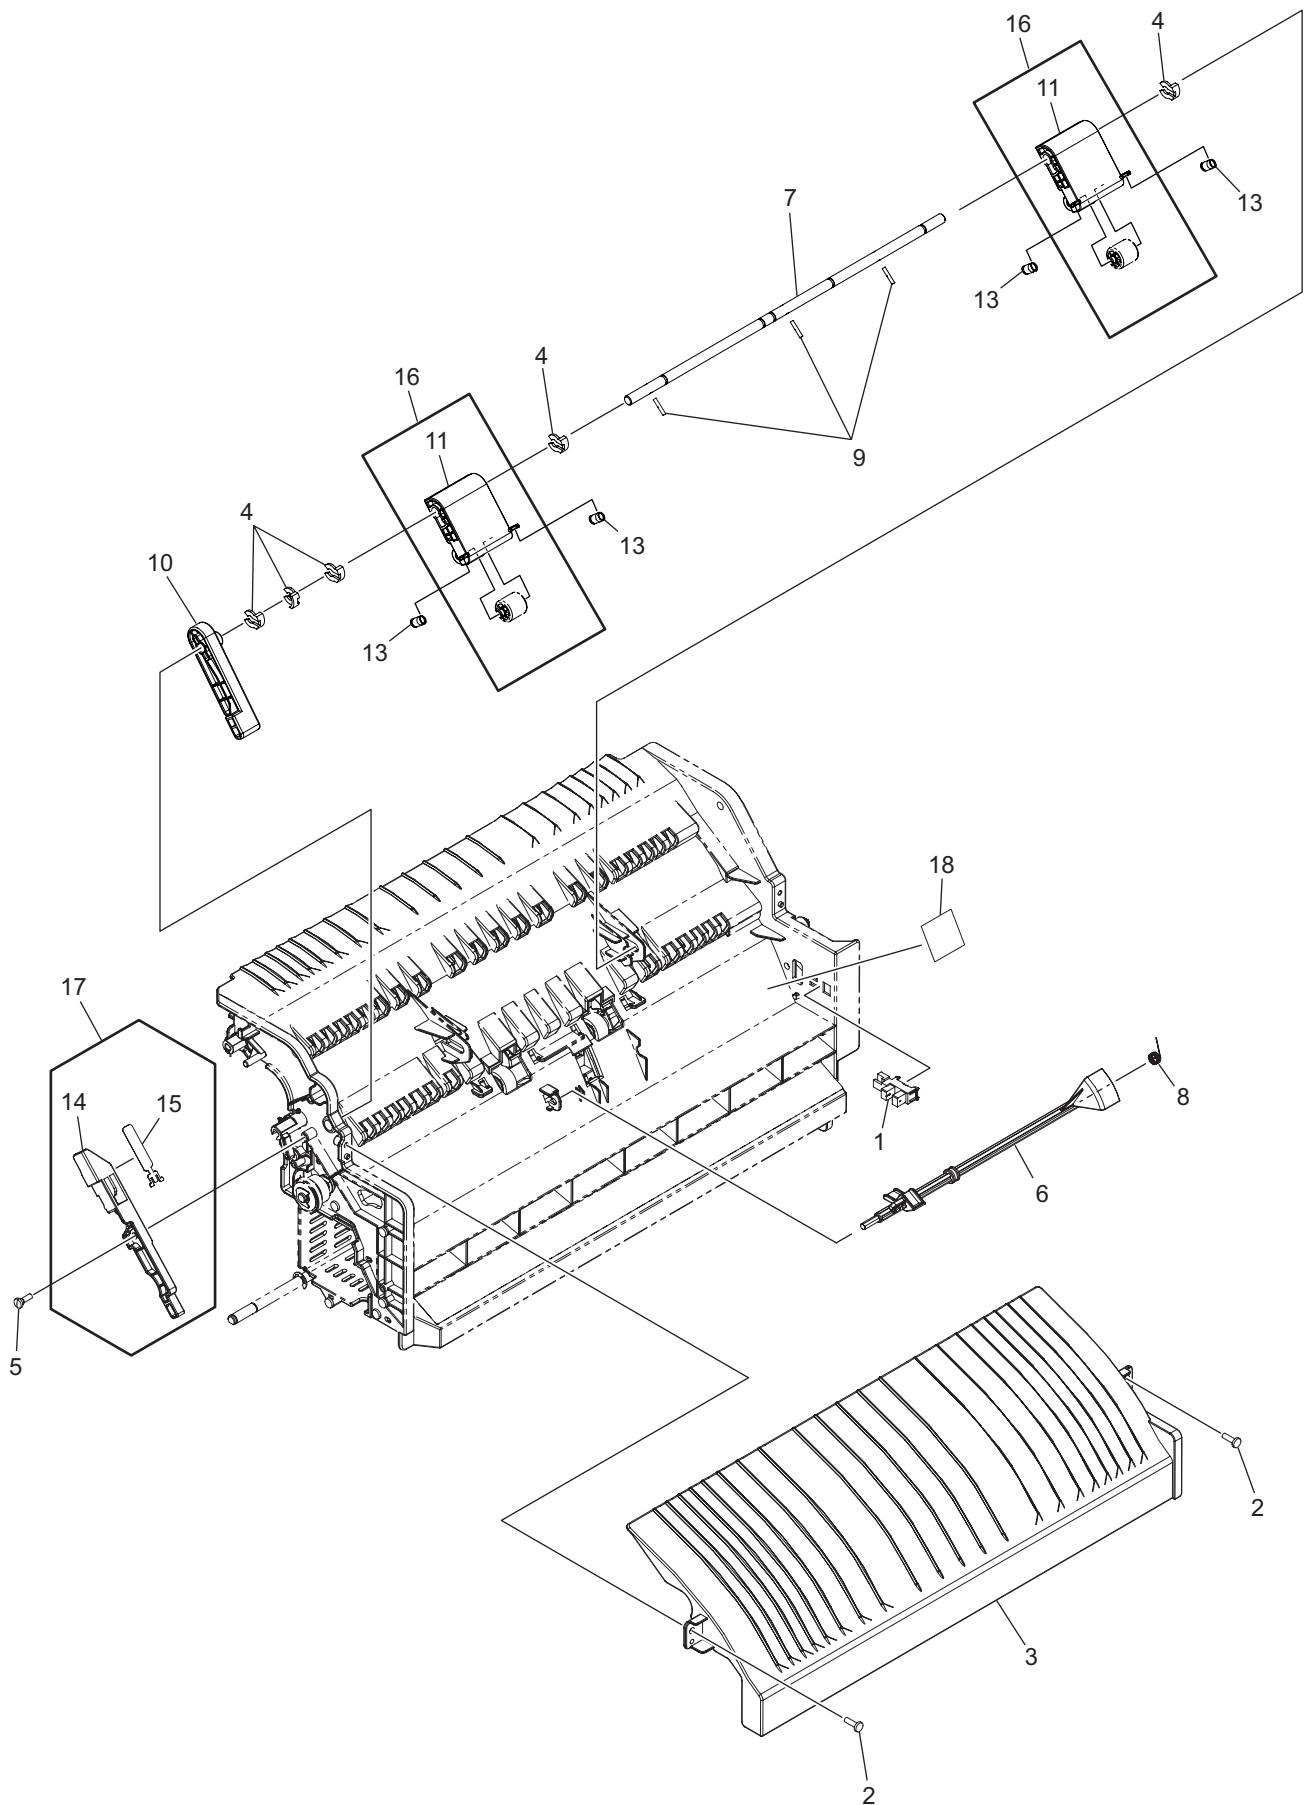


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-GID-ENT-BASE-1		GP1S173LCSOF		6LJ20009000
2	ASYB-GID-ENT-BASE-1		SCR03T100WAVE-W		6LJ20065000
3	ASYB-GID-ENT-BASE-1		GID-REV-UN		6LJ19666000
4	ASYB-GID-ENT-BASE-1		CLIP050140W		6LJ20055000
5	ASYB-GID-ENT-BASE-1		SCR-03T080-D060024		6LJ20076000
6	ASYB-GID-ENT-BASE-1		LEVER-ENT-SEN-M		6LJ21096000
7	ASYB-GID-ENT-BASE-1		SHAFT ENT NIP KORO		6LJ20582000
8	ASYB-GID-ENT-BASE-1		SPRING-LVR FEED-SEN		6LJ21085000
9	ASYB-GID-ENT-BASE-1		HP-020		6LJ20713000
10	ASYB-GID-ENT-BASE-1		LINK-ENT-NIP-IDL		6LJ19670000
11	ASYB-GID-ENT-BASE-1		HLD-ENT-NIP-IDL		6LJ19669000
13	ASYB-GID-ENT-BASE-1		SPRING ENT ROL KORO		6LJ20591000
14	ASYB-GID-ENT-BASE-1		LINK-ENT-FLP		6LJ19673000
15	ASYB-GID-ENT-BASE-1		SPG-F-ENT-FLP		6LJ19604000
16	ASYB-GID-ENT-BASE-1		ASSEMBLY ENT NIP KORO		6LJ20507000
17	ASYB-GID-ENT-BASE-1		ASSEMBLY PLT SP ENTFLP		6LJ20533000
18	ASYB-GID-ENT-BASE-1		SHEET-SPRING LVR-FEED		6LJ21086000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

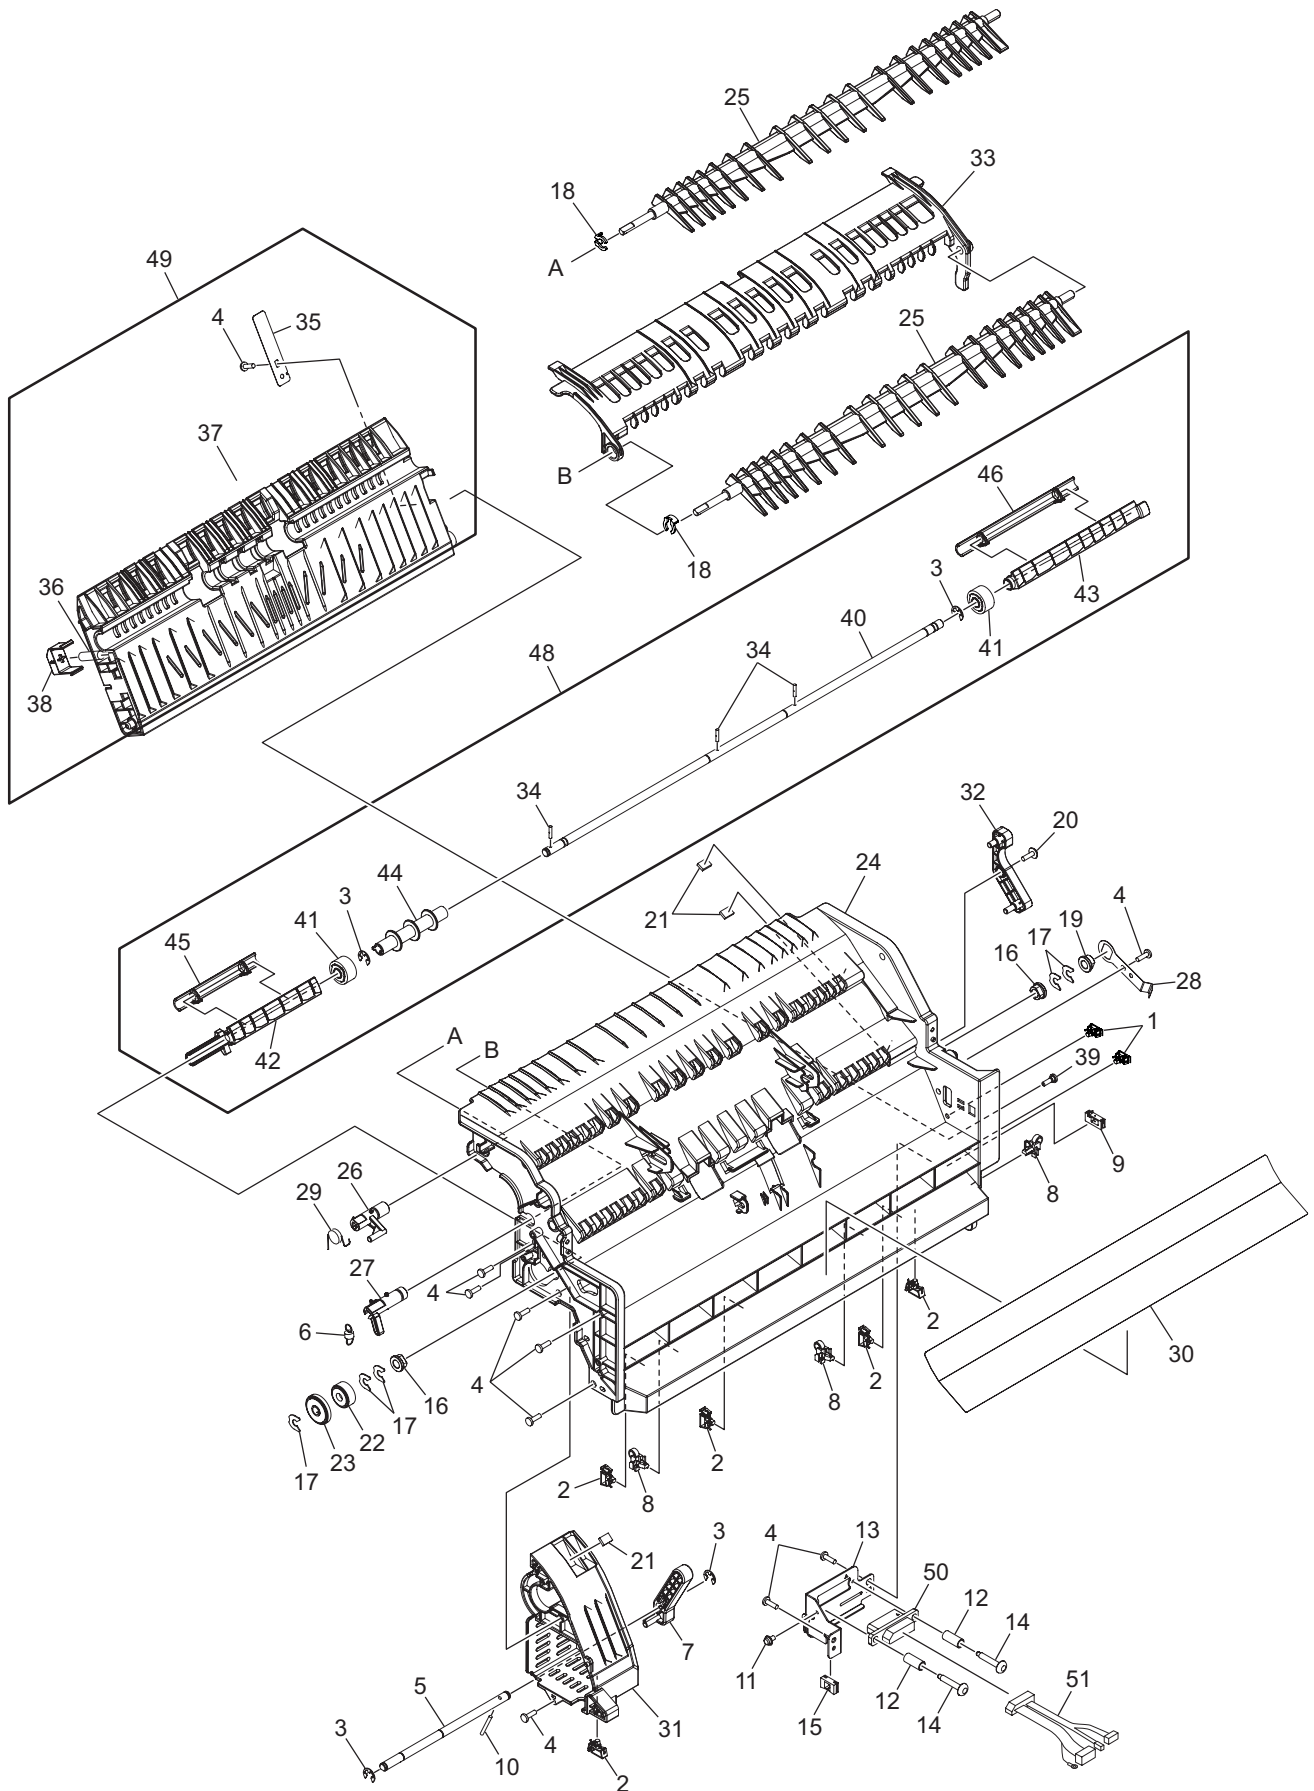


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-GID-ENT-BASE-2		RLMS-1V0		6LJ20014000
2	ASYB-GID-ENT-BASE-2		RLMS-2V0		6LJ20015000
3	ASYB-GID-ENT-BASE-2		ER-050		6LJ20023000
4	ASYB-GID-ENT-BASE-2		SCRO3T100WAVE-W		6LJ20065000
5	ASYB-GID-ENT-BASE-2		SHAFT GID ENT JAM		6LJ20581000
6	ASYB-GID-ENT-BASE-2		SPRING ENT FLP UN		6LJ20904000
7	ASYB-GID-ENT-BASE-2		ARM-GID-ENT-JAM		6LJ19787000
8	ASYB-GID-ENT-BASE-2		RSG-100		6LJ20677000
9	ASYB-GID-ENT-BASE-2		LES-0510		6LJ20684000
10	ASYB-GID-ENT-BASE-2		SP-020		6LJ20709000
11	ASYB-GID-ENT-BASE-2		SCRO3M060-WS-W		6LJ19999000
12	ASYB-GID-ENT-BASE-2		SP-C-60-130-10000		6LJ20210000
13	ASYB-GID-ENT-BASE-2		BKT-JNT-ENT		6LJ19616000
14	ASYB-GID-ENT-BASE-2		SCW-M3-D04020-SR		6LJ19823000
15	ASYB-GID-ENT-BASE-2		EDS-0607M		6LJ20676000
16	ASYB-GID-ENT-BASE-2		BUSH060060-NW-02		6LJ21189000
17	ASYB-GID-ENT-BASE-2		CLIP050060W		6LJ20054000
18	ASYB-GID-ENT-BASE-2		CLIP070140B		6LJ20056000
19	ASYB-GID-ENT-BASE-2		METAL060060FC		6LJ20060000
20	ASYB-GID-ENT-BASE-2		SCRO3T100-D		6LJ20069000
21	ASYB-GID-ENT-BASE-2		DMP-FE-LVR-ENT		6LJ20095000
22	ASYB-GID-ENT-BASE-2		GER-080-20-OW		6LJ20367000
23	ASYB-GID-ENT-BASE-2		GER-080-26		6LJ20496000
24	ASYB-GID-ENT-BASE-2		GID-ENT-BASE		6LJ19665000
25	ASYB-GID-ENT-BASE-2		GID-ENT-FLP		6LJ19667000
26	ASYB-GID-ENT-BASE-2		LEVER-FLP		6LJ19668000
27	ASYB-GID-ENT-BASE-2		LEVER-FLP-UN		6LJ19715000
28	ASYB-GID-ENT-BASE-2		SPG-F-ENT-EARTH		6LJ19601000
29	ASYB-GID-ENT-BASE-2		SPRING ENT FLP UP		6LJ20587000
30	ASYB-GID-ENT-BASE-2		SHEET-GID-ENT		6LJ19818000
31	ASYB-GID-ENT-BASE-2		GUIDE-ENT-UN2		6LJ19784000
32	ASYB-GID-ENT-BASE-2		LINK-ENT-GID-JAM		6LJ19785000
33	ASYB-GID-ENT-BASE-2		GUIDE-ENT-SUB		6LJ19786000
34	ASYB-GID-ENT-BASE-2		HPIN-2X10		6LJ20712000
35	ASYB-GID-ENT-BASE-2		SPG-F-JAM-LNK		6LJ19660000
36	ASYB-GID-ENT-BASE-2		SPRING ENT GID JAM		6LJ20605000
37	ASYB-GID-ENT-BASE-2		GUIDE-ENT-UN1		6LJ19783000
38	ASYB-GID-ENT-BASE-2		HLD-GID-ENT-JAM		6LJ19798000
39	ASYB-GID-ENT-BASE-2		SCR-03T080-D060024		6LJ20076000
40	ASYB-GID-ENT-BASE-2		SHAFT ROL ENT		6LJ20583000
41	ASYB-GID-ENT-BASE-2		ROL-FIN-SEG1		6LJ19808000
42	ASYB-GID-ENT-BASE-2		GID-ENT-UN-SUB-F		6LJ19788000
43	ASYB-GID-ENT-BASE-2		GID-ENT-UN-SUB-R		6LJ19789000
44	ASYB-GID-ENT-BASE-2		COVER-ROL-ENT-C		6LJ19802000
45	ASYB-GID-ENT-BASE-2		COVER-ROL-ENT-F		6LJ19803000
46	ASYB-GID-ENT-BASE-2		COVER-ROL-ENT-R		6LJ19804000
48	ASYB-GID-ENT-BASE-2		ASSEMBLY FEED ENT ROL		6LJ20540000
49	ASYB-GID-ENT-BASE-2		ASSEMBLY GID ENT UN 1		6LJ20534000
50	ASYB-GID-ENT-BASE-2		9715S-10Z02-G4C		6LJ21106000
51	ASYB-GID-ENT-BASE-2		ASM SEN ENTERPATH		6LJ20864000

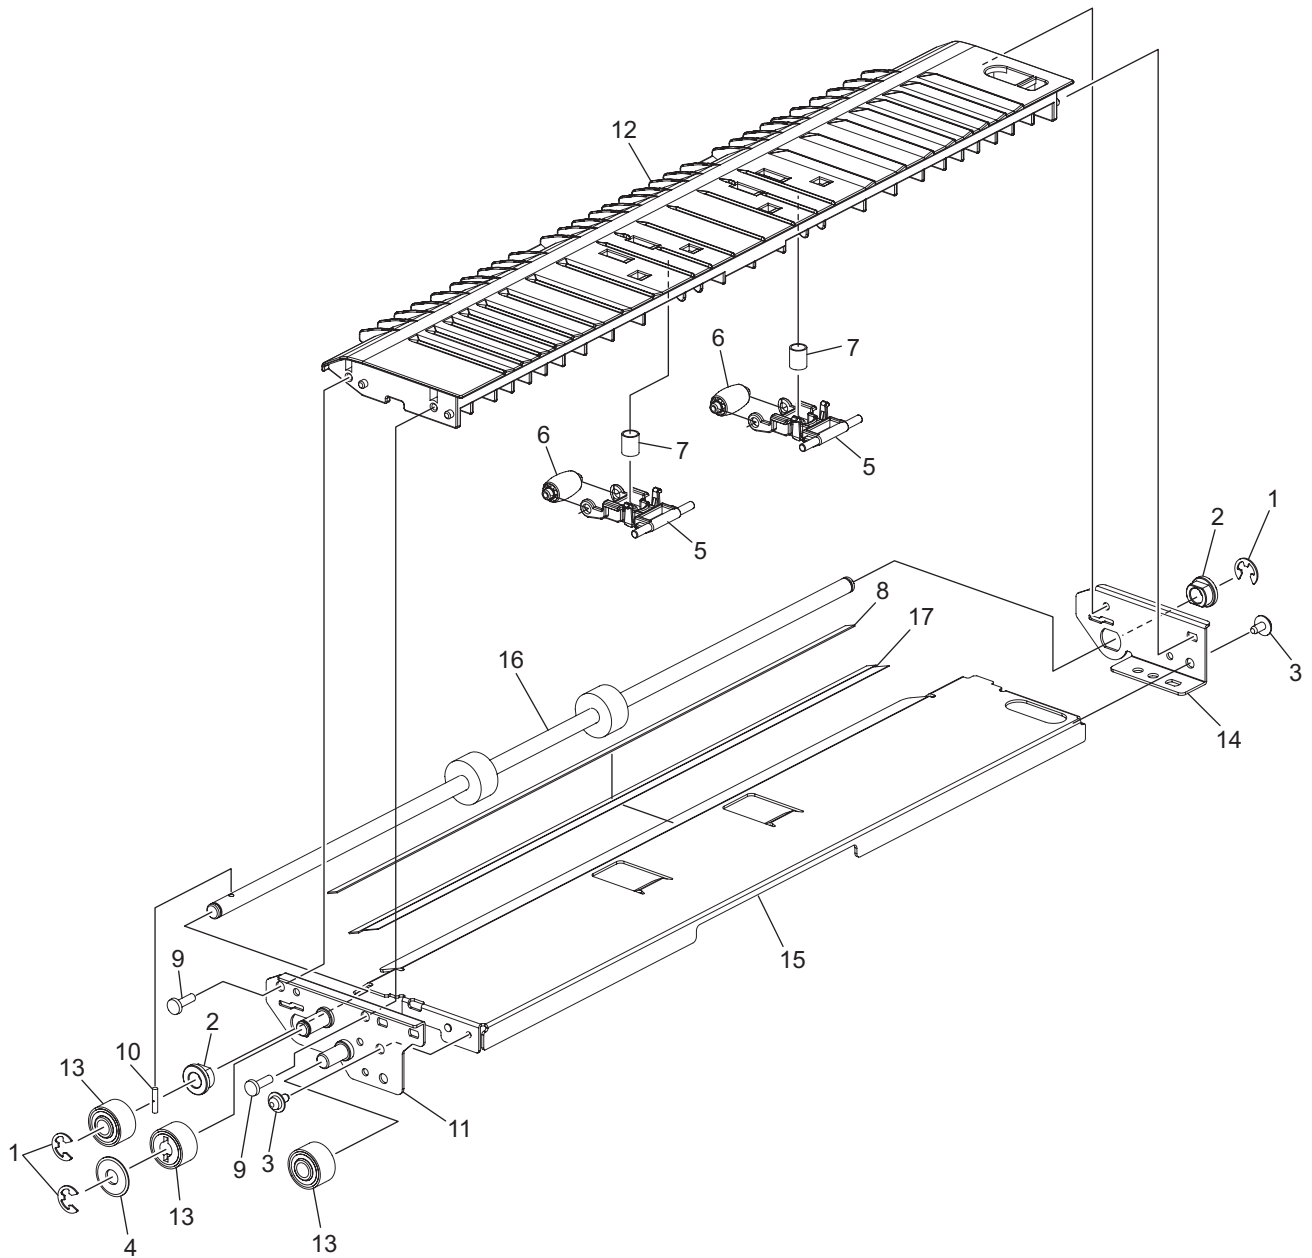


No.	Unit Name	Part Number	Description	Remarks	Reference
1A	ASYB-GID-FED		ER-050		6LJ20023000
2A	ASYB-GID-FED		METAL060060FC		6LJ20060000
3A	ASYB-GID-FED		SCRO3T060SR-W		6LJ20064000
4A	ASYB-GID-FED		FLG-FEED-PLY		6LJ20083000
5A	ASYB-GID-FED		HLD-IDL-FEED-SUB		6LJ19676000
6A	ASYB-GID-FED		IDL-FEED-SUB-EXT		6LJ19677000
7A	ASYB-GID-FED		SPRING FEED SUB KORO		6LJ20906000
8A	ASYB-GID-FED		SHEET GID BRUSH2		6LJ20631000
9A	ASYB-GID-FED		M3X10		6LJ20699000
10A	ASYB-GID-FED		HPIN-2X10		6LJ20712000
11A	ASYB-GID-FED		CAULKING FRM SUB R		6LJ20824000
12A	ASYB-GID-FED		GID-FEED-SUB-UP		6LJ19848000
13A	ASYB-GID-FED		GEAR-08S18-6-SUB		6LJ19865000
14A	ASYB-GID-FED		FRAME-FEED-SUB-F		6LJ19832000
15A	ASYB-GID-FED		GUIDE FEED SUB LOW		6LJ20830000
16A	ASYB-GID-FED		ROLLER FEED SUB MID		6LJ20844000
17A	ASYB-GID-FED		BRUSH GID SUB		6LJ20851000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

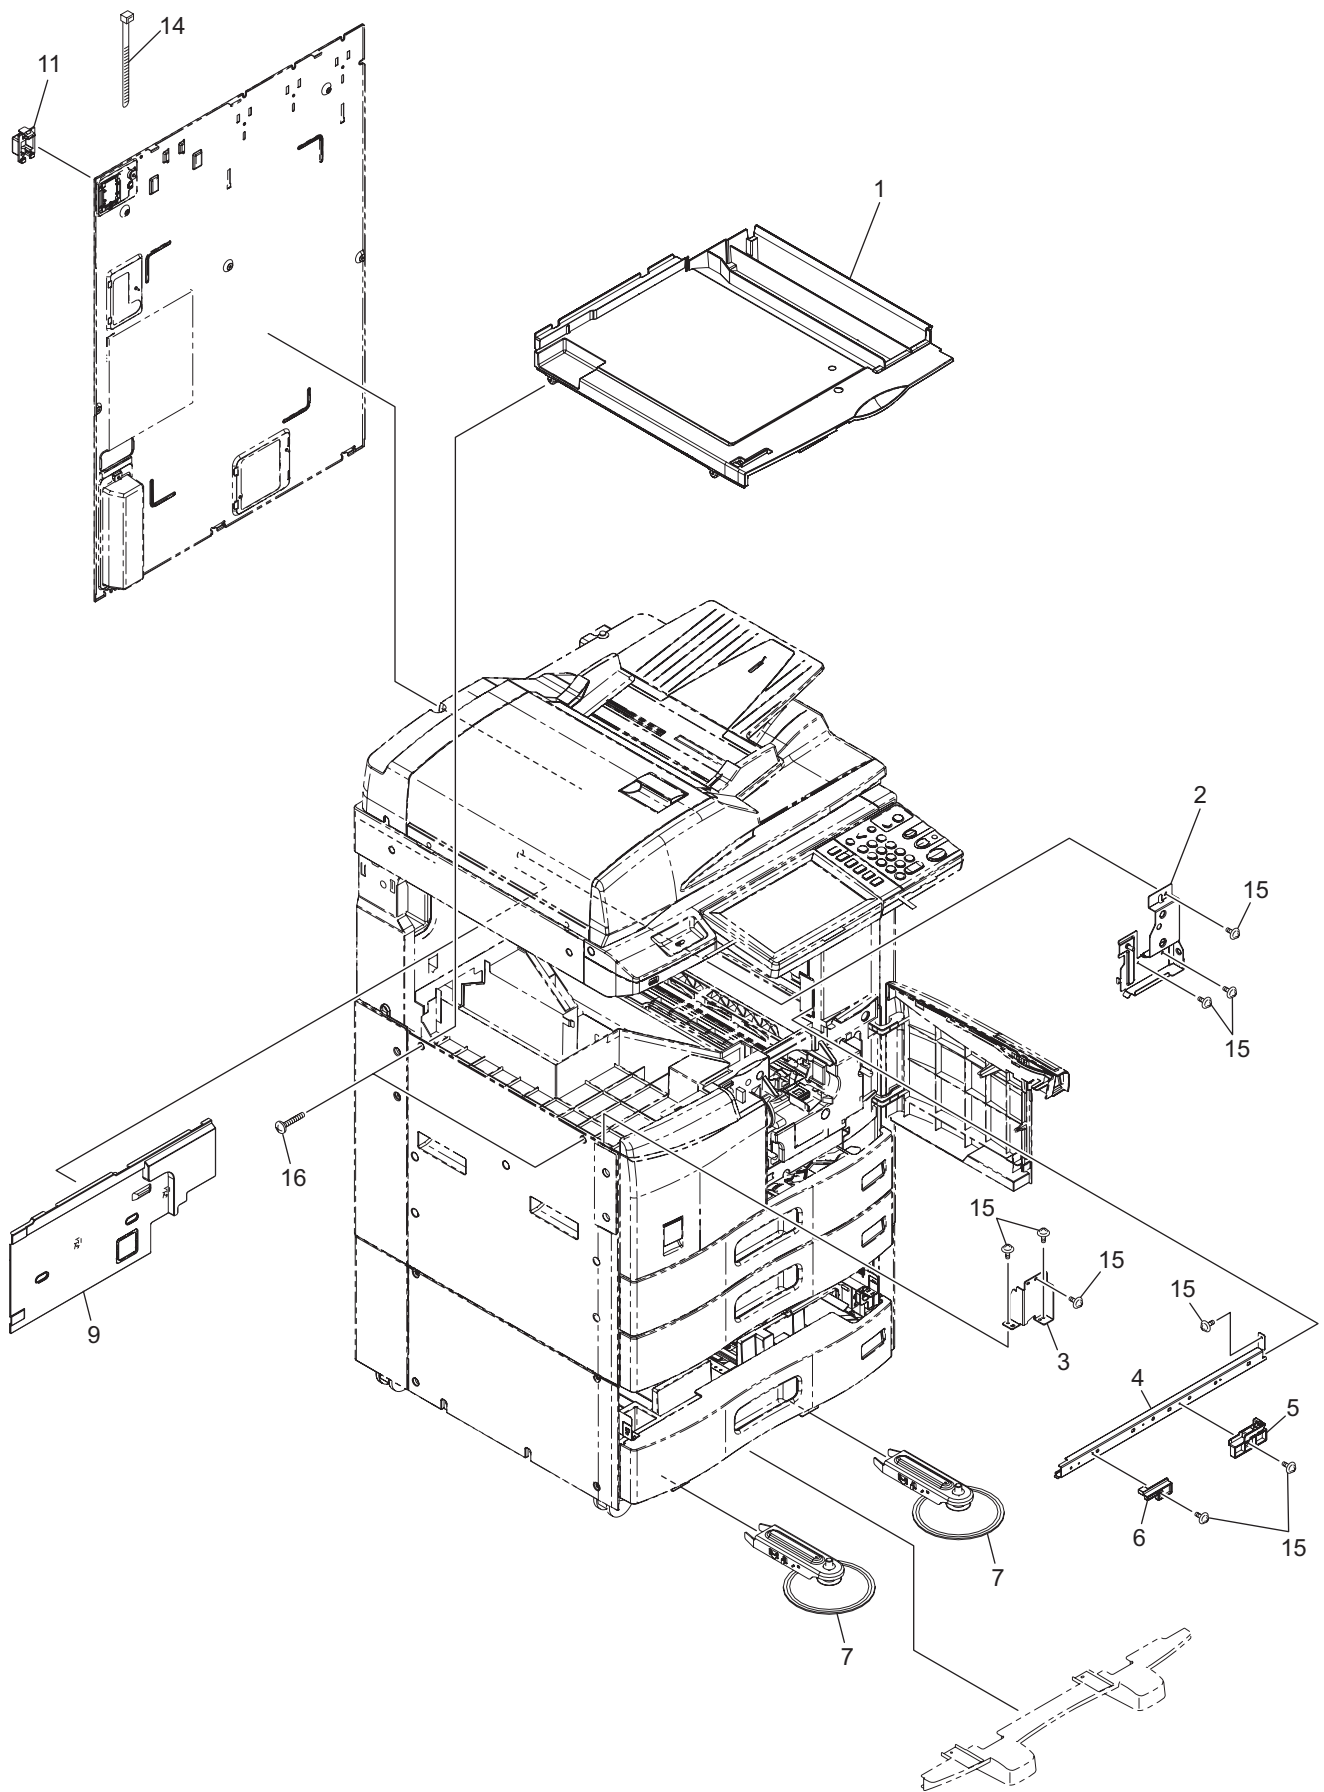


No.	Unit Name	Part Number	Description	Remarks	Reference
1	ASYB-INST-PART	45689793	BASE-FIN-CL-FW		4B54517000
2	ASYB-INST-PART		CAULKING BKT RAIL R		6LJ20518000
3	ASYB-INST-PART		BKT-RAIL-F-CL		6LJ21013000
4	ASYB-INST-PART		RAIL-F		6LJ19654000
5	ASYB-INST-PART		ASSEMBLY HLDR LOCKMAIN		6LJ20525000
6	ASYB-INST-PART		STP-RAIL		6LJ19800000
7	ASYB-INST-PART		ASSEMBLY FOOT PFP		6LJ20538000
9	ASYB-INST-PART		COVER-REAR-WALL-CL		6LJ21012000
11	ASYB-INST-PART		CABLE COVER T2 (NP)		6LJ20005000
14	ASYB-INST-PART		PLT-1M-69		6LJ20011000
15	ASYB-INST-PART		SCR-030-040NIT		6LJ20701000
16	ASYB-INST-PART		SCR03T100WAVE-W		6LJ20065000
18	ASYB-INST-PART		BKT-RAIL-R-CL		6LJ21014000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

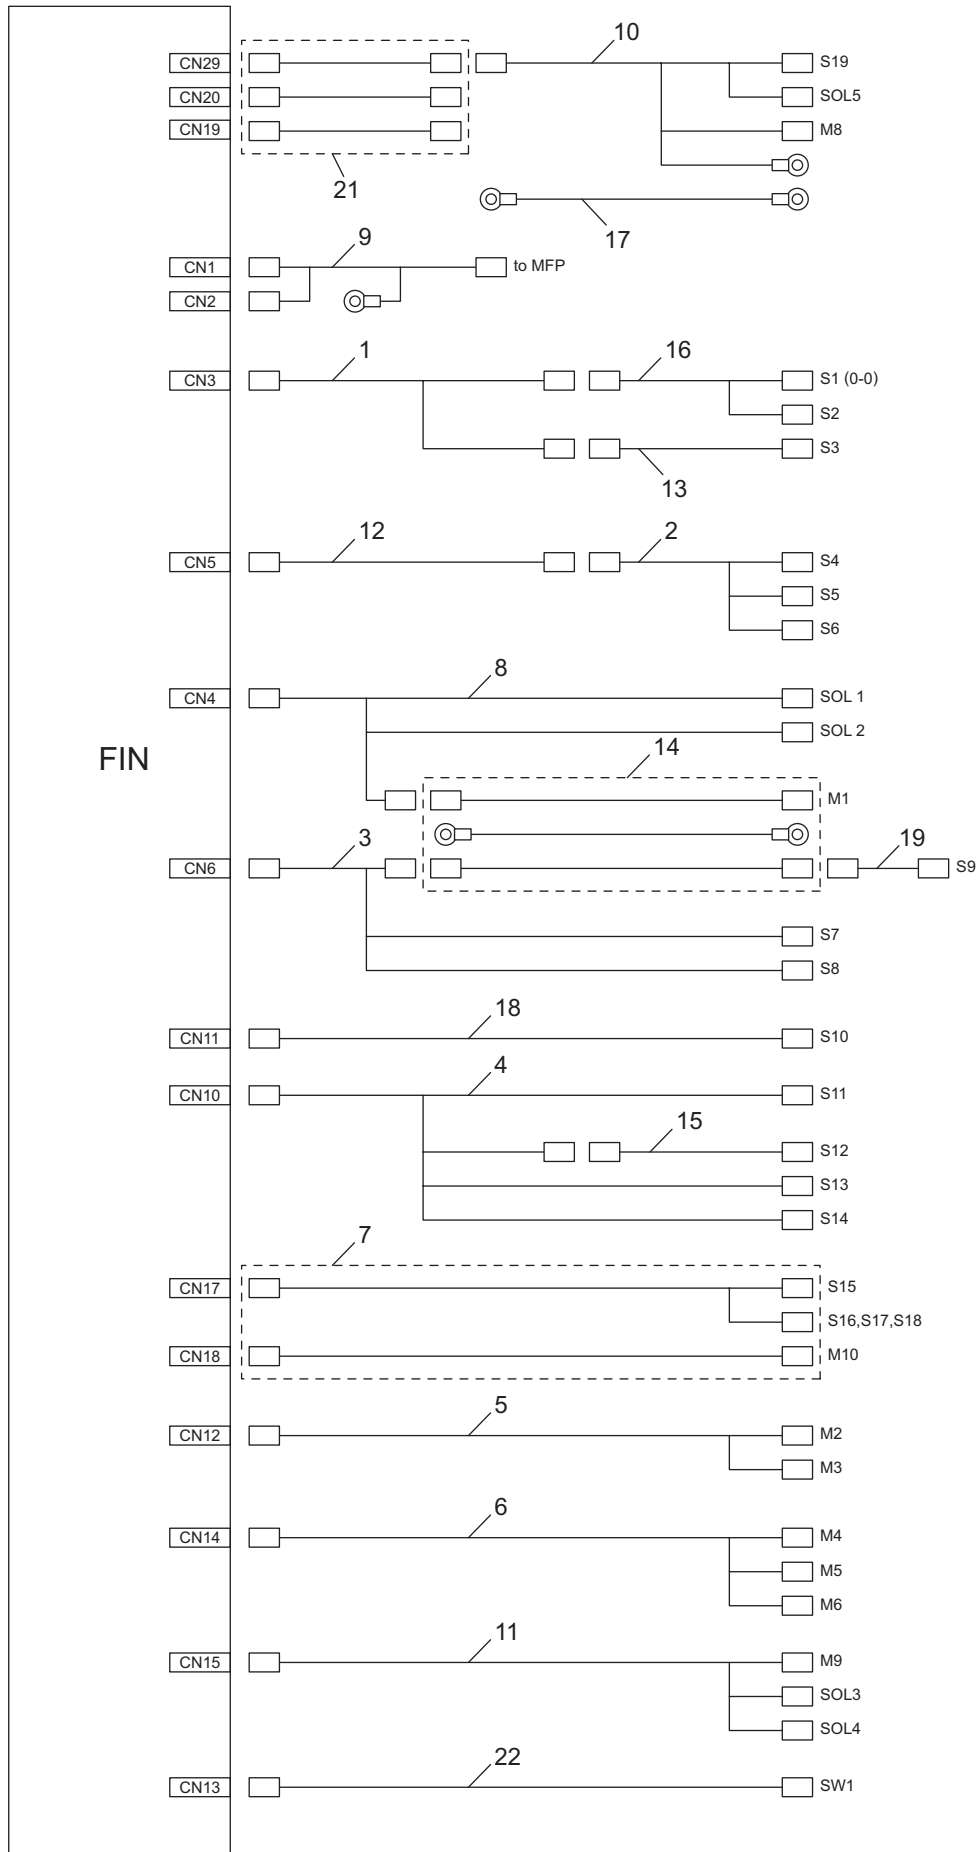

No.	Unit Name	Part Number	Description	Remarks	Reference
1	HARNESS		ASM SEN YO		6LJ20542000
2	HARNESS		ASM SEN JOG		6LJ20543000
3	HARNESS		ASM SEN FRONT		6LJ20544000
4	HARNESS		ASM SEN SUBTRAY		6LJ20545000
5	HARNESS		ASM JOG MOT SOL		6LJ20546000
6	HARNESS		ASM 42 MOT		6LJ20547000
7	HARNESS		ASM ST		6LJ20548000
8	HARNESS		ASM MM SOL		6LJ20549000
9	HARNESS		ASM IF		6LJ19825000
10	HARNESS		ASM SEN ENTERPATH		6LJ20864000
11	HARNESS		ASM F_FAN SOL		6LJ20550000
12	HARNESS		ASM SEN JOG RELAY		6LJ20551000
13	HARNESS		ASM SSHPS RELAY		6LJ20552000
14	HARNESS		ASM TRAY RELAY		6LJ20553000
15	HARNESS		ASM U_OPEN RELAY		6LJ20554000
16	HARNESS		ASM YO RELAY		6LJ20899000
17	HARNESS		ASM FG ENTER		6LJ20900000
18	HARNESS		ASM R_RLS S		6LJ20555000
19	HARNESS		ASM TEMP RELAY		6LJ20556000
20	HARNESS		ASM EMOT RELAY		6LJ20557000
21	HARNESS		ASM PUNCH ENT		6LJ20558000
22	HARNESS		ASM SW RELAY		6LJ20559000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information

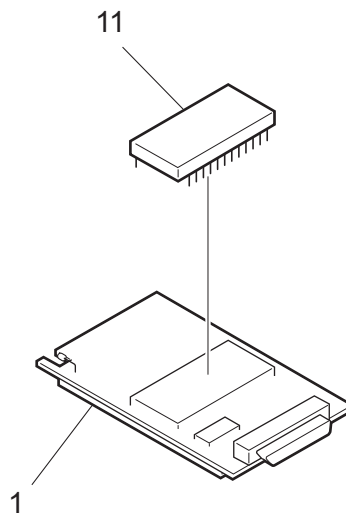

No.	Unit Name	Part Number	Description	Remarks	Reference
1	DOWNLOAD JIGS	45729673	K-PWA-DLM-320		44205829000
11	DOWNLOAD JIGS		WRROM-GNV-101-N-V052		6LH82616000

This Illustrated Parts Manual is to be used for part identification. Part numbers for the most often used parts are listed. To obtain parts for items that do not list an associated part number contact **Oki Data Technical Support at 866.654.1725** for specific part numbers and part ordering information