

**Model AP-C3**  
**Machine Code: D143/D144**  
**Field Service Manual**

January, 2012  
Subject to change



---

# Important Safety Notices

---

## Prevention of Physical Injury

---

1. Before disassembling or assembling parts of the copier and peripherals, make sure that the copier power cord is unplugged.
2. The wall outlet should be near the copier and easily accessible.
3. If any adjustment or operation check has to be made with exterior covers off or open while the main switch is turned on, keep hands away from electrified or mechanically driven components.
4. The copier drives some of its components when it completes the warm-up period. Be careful to keep hands away from the mechanical and electrical components as the copier starts operation.
5. The inside and the metal parts of the fusing unit become extremely hot while the copier is operating. Be careful to avoid touching those components with your bare hands.

---

## Health Safety Conditions

---

1. Toner and developer are non-toxic, but if you get either of them in your eyes by accident, it may cause temporary eye discomfort. Immediately wash eyes with plenty of water. If unsuccessful, get medical attention.
2. The copier, which use high voltage power source, can generate ozone gas. High ozone density is harmful to human health. Therefore, the machine must be installed in a well-ventilated room.

---

## Observance of Electrical Safety Standards

---

The copier and its peripherals must be serviced by a customer service representative who has completed the training course on those models.

### **WARNING**

- Ⓞ Keep the machine away from flammable liquids, gases, and aerosols. A fire or an explosion might occur.

### **CAUTION**

- The Controller board on this machine contains a lithium battery. The danger of explosion exists if a battery of this type is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer. Discard batteries in accordance with the manufacturer's instructions and local regulations.
- The optional fax and memory expansion units contain lithium batteries, which can explode if replaced incorrectly. Replace only with the same or an equivalent type recommended by the

manufacturer. Do not recharge or burn the batteries. Used batteries must be handled in accordance with local regulations.

---

## Safety and Ecological Notes for Disposal

---

1. Do not incinerate toner bottles or used toner. Toner dust may ignite suddenly when exposed to an open flame.
2. Dispose of used toner, the maintenance unit which includes developer or the organic photoconductor in accordance with local regulations. (These are non-toxic supplies.)
3. Dispose of replaced parts in accordance with local regulations.
4. When keeping used lithium batteries in order to dispose of them later, do not put more than 100 batteries per sealed box. Storing larger numbers or not sealing them apart may lead to chemical reactions and heat build-up.

---

## Laser Safety

---

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical units in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

### **WARNING**

- Use of controls, or adjustment, or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

### **WARNING**

- **WARNING:** Turn off the main switch before attempting any of the procedures in the Laser Optics Housing Unit section. Laser beams can seriously damage your eyes.
- **CAUTION MARKING:**



---

---

## Warnings, Cautions, Notes

---

In this manual, the following important symbols and notations are used.

### **WARNING**

- A Warning indicates a potentially hazardous situation. Failure to obey a Warning could result in death or serious injury.

### **CAUTION**

- A Caution indicates a potentially hazardous situation. Failure to obey a Caution could result in minor or moderate injury or damage to the machine or other property.

### **Important**

- Obey these guidelines to avoid problems such as misfeeds, damage to originals, loss of valuable data and to prevent damage to the machine.







### **Note**


- This information provides tips and advice about how to best service the machine.

---


# Symbols, Abbreviations and Trademarks

This manual uses several symbols and abbreviations. The meaning of those symbols and abbreviations are as follows:

	See or Refer to
	Clip ring
	Screw
	Connector
	Clamp
	E-ring
SEF	Short Edge Feed
LEF	Long Edge Feed

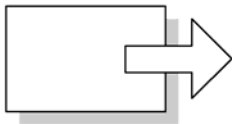

**Short Edge Feed (SEF)**

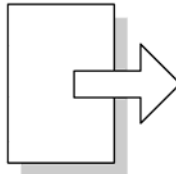

**Long Edge Feed (LEF)**

---

## Trademarks

---

Microsoft®, Windows®, and MS-DOS® are registered trademarks of Microsoft Corporation in the United States and /or other countries.

PostScript® is a registered trademark of Adobe Systems, Incorporated.

PCL® is a registered trademark of Hewlett-Packard Company.

Ethernet® is a registered trademark of Xerox Corporation.

PowerPC® is a registered trademark of International Business Machines Corporation.

Other product names used herein are for identification purposes only and may be trademarks of their respective companies. We disclaim any and all rights involved with those marks.

# TABLE OF CONTENTS

---

- Important Safety Notices..... 1
  - Prevention of Physical Injury..... 1
  - Health Safety Conditions..... 1
  - Observance of Electrical Safety Standards..... 1
  - Safety and Ecological Notes for Disposal..... 2
  - Laser Safety.....2
  - Warnings, Cautions, Notes.....3
- Symbols, Abbreviations and Trademarks.....4
  - Trademarks..... 4

## 1. Product Information

---

- Specifications.....23
- Product Overview.....24
  - Component Layout.....24
  - Paper Path..... 25
  - Drive Layout.....27
- Machine Codes and Peripherals Configuration.....29
- Guidance for Those Who are Familiar with Predecessor Products.....33

## 2. Installation

---

- Installation Requirements..... 35
  - Environment..... 35
  - Machine Level..... 36
  - Machine Space Requirements..... 36
  - Machine Dimensions..... 37
  - Power Requirements..... 37
- Copier Installation.....39
  - Power Sockets for Peripherals.....39
  - Installation Flow Chart.....39
  - Installation Procedure.....40
    - Tapes and Retainers.....41
    - Protection Sheet (Only for single pass ADF model)..... 41
    - Developer and Toner Bottles.....43
    - Paper Trays.....44
    - Decals.....45

---

Initialize the Developer.....	45
Settings Relevant to the Service Contract.....	46
SP Operation Sound On/Off Setting.....	47
Settings for @Remote Service.....	47
Enabling VM.....	51
Enabling App2Me.....	51
Security Function Installation.....	51
External USB Keyboard (External Option).....	60
Moving the Machine.....	62
Transporting the Machine.....	62
Paper Feed Unit Installation (D580).....	63
Accessory Check.....	63
Installation Procedure.....	63
Envelope Feeder EF3020 (D638).....	68
Accessory Check.....	68
Installation Procedure.....	68
LCIT PB3140 (D581).....	70
Accessory Check.....	70
Installation Procedure.....	70
SP Settings.....	73
1200 LCT Installation (D631).....	74
Component Check.....	74
Installation Procedure.....	74
Side Fence Position Change.....	77
ARDF Installation (D630).....	79
Component Check.....	79
Installation Procedure.....	80
1-Bin Tray Unit Installation (D632).....	83
Component Check.....	83
Installation Procedure.....	83
Internal Shift Tray (D633).....	86
Component Check.....	86
Installation Procedure.....	86



---

Side Tray (D635).....	89
Component Check.....	89
Installation Procedure.....	90
Bridge Unit Installation (D634).....	93
Component Check.....	93
Installation Procedure.....	93
Finisher SR3090 (D588).....	97
Accessory Check.....	97
Installation Procedure.....	98
2000/3000-Sheet (Booklet) Finisher (D636/D637).....	101
Accessory Check.....	101
Installation Procedure.....	102
Support Tray Installation.....	106
Punch Unit Type 3030 (D570).....	108
Component Check.....	108
Installation Procedure.....	109
Installation Procedure.....	109
Key Counter Bracket Type H (A674).....	114
Installation Procedure.....	114
Copy Data Security Unit Type F (B829).....	116
Component Check.....	116
Installation.....	116
User Tool Setting.....	118
Optional Counter Interface Unit Type A (B870).....	120
Components Check.....	120
Installation Procedure.....	120
Card Reader Bracket Type C3352 (D593).....	123
Component Check.....	123
Installation Procedure.....	124
Anti-Condensation Heater (Scanner).....	126
Installation Procedure.....	126
Anti-Condensation Heater Type A.....	129
Component Check.....	129

---

Installation Procedure.....	130
For installing the tray heater in the main machine.....	130
For installing the tray heater in D537.....	131
For Installing the Tray Heater in D538.....	133
Controller Options.....	137
Overview.....	137
I/F Card Slots.....	137
SD Card Slots.....	137
SD Card Appli Move.....	138
Overview.....	138
Move Exec.....	138
Undo Exec.....	139
PostScript3 Unit Type C5502.....	140
IPDS Unit Type C5502.....	141
File Format Converter Type E.....	142
IEEE 1284 Interface Board Type A.....	143
Installation Procedure.....	143
IEEE 802.11 a/g g Interface Unit Type J/K.....	144
Installation Procedure.....	144
Installing Various Hardware Combinations.....	146
UP Mode Settings for Wireless LAN.....	146
SP Mode and UP Mode Settings for IEEE 802.11 a/g g Wireless LAN.....	147
Bluetooth Interface Unit Type D.....	148
Camera Direct Print Card Type J.....	149
SD Card for Netware Printing Type H.....	149
Browser Unit Type F.....	150
Installation Procedure.....	150
Browser Icon Addition.....	152
Gigabit Ethernet Type B.....	154
Check All Connections.....	155

### 3. Preventive Maintenance

---

Maintenance Tables.....	157
PM Parts Settings.....	158

Before Removing the Old PM Parts.....	158
After installing the new PM parts.....	159
Preparation before operation check.....	159
Operation check.....	160

#### 4. Replacement and Adjustment

Beforehand.....	161
Special Tools.....	162
Image Adjustment.....	163
Scanning.....	163
Scanner sub-scan magnification.....	163
Scanner leading edge and side-to-side registration.....	164
ARDF.....	164
ARDF side-to-side, leading edge registration and trailing edge.....	164
ARDF sub-scan magnification.....	165
Registration.....	166
Image Area.....	166
Leading Edge.....	166
Side to Side.....	166
Adjustment Standard.....	166
Paper Registration Standard.....	166
Adjustment Procedure.....	167
Erase Margin Adjustment.....	167
Color Registration.....	168
Line Position Adjustment.....	168
Printer Gamma Correction.....	169
Copy Mode.....	169
Printer Mode.....	173
Exterior Covers.....	174
Front Door.....	174
Controller Cover.....	175
Left Cover.....	175
Rear Cover.....	176
Right Rear Cover.....	176

---

Operation Panel.....	177
Paper Exit Cover.....	180
Inner Tray.....	181
Ozone Filter and Dust Filter.....	182
Ozone filters for the scanner unit.....	182
Ozone filter and dust filter for the AC controller.....	183
Scanner Unit.....	184
Exposure Glass.....	184
Exposure Lamp.....	185
Scanner Motor.....	189
Sensor Board Unit (SBU).....	190
When reassembling.....	191
Original Length Sensors.....	192
Exposure Lamp Stabilizer.....	192
SIO (Scanner In/Out) Board.....	193
Scanner HP Sensor.....	193
Platen Cover Sensor.....	194
Front Scanner Wire.....	195
Reassembling the Front Scanner Wire.....	196
Rear Scanner Wire.....	198
Reassembling the Rear Scanner Wire.....	199
Touch Panel Position Adjustment.....	200
Laser Optics.....	202
Caution Decal Location.....	202
LD Safety Switch.....	203
Error Messages.....	203
Laser Optics Housing Unit.....	203
Preparing the new laser optics housing unit.....	204
Before removing the old laser optics housing unit.....	204
Recovery procedure for no replacement preparation of laser optics housing unit.....	205
Removing the old laser optics housing unit.....	206
Installing a new Laser Optics Housing Unit.....	207
After installing the new laser optics housing unit.....	208

---

Polygon Mirror Motor and Drive Board.....	209
Airflow Fans.....	210
Laser Optics Rear Right Thermistor.....	211
Image Creation.....	214
PCDU.....	214
Drum Unit and Development Unit.....	215
Developer.....	218
Toner Collection Bottle.....	220
Second Duct Fans.....	221
When reinstalling the second duct fans.....	223
Third Duct Fan.....	223
When reinstalling the third duct fan.....	223
Toner Pump Unit.....	224
When you install the new toner pump unit.....	227
Toner End Sensor.....	229
Image Transfer.....	230
Image Transfer Belt Cleaning Unit.....	230
Image Transfer Belt Unit.....	230
Image Transfer Belt.....	231
When reinstalling the image transfer belt.....	235
Paper Transfer.....	237
Paper Transfer Roller Unit.....	237
Paper Transfer Unit.....	237
ID Sensor Board.....	239
Cleaning for ID sensors.....	240
After installing a new ID sensor unit/board .....	240
Temperature and Humidity Sensor.....	241
Drive Unit.....	242
Gear Unit.....	242
When installing the drive unit.....	248
Adjustment after replacing the gear unit.....	248
Registration Motor.....	248
Paper Feed Motor.....	250

---

Drum/Development Motors for M, C, and Y.....	251
Drum/Development Motor-K.....	252
ITB Drive Motor.....	253
Fusing/Paper Exit Motor.....	253
Image Transfer Belt Contact Motor.....	254
Duplex Inverter Motor.....	254
Pressure Roller Contact Motor.....	256
Duplex/By-pass Motor.....	256
Paper Transfer Contact Motor.....	258
Toner Transport Motor.....	260
Toner Collection Unit.....	260
Paper Feed Clutches.....	261
Development Clutch-Y.....	263
Development Clutches for M and C.....	264
Development Clutch-K.....	265
Fusing.....	267
Fusing Unit PM Parts.....	267
Fusing Unit.....	267
Fusing Exit Shutter Plate.....	269
Fusing Entrance Guide Plate.....	269
Cleaning Requirement.....	270
Fusing Exit Guide Plate Cleaning Procedure.....	271
Fusing Unit Upper Cover.....	271
Fusing Unit Lower Cover.....	273
Heating Sleeve Belt Unit.....	275
Pressure Roller.....	278
Stripper Plate.....	280
Cleaning Requirement.....	281
Pressure Roller Thermistors.....	282
Pressure Roller Thermostats.....	282
NC Sensors.....	283
Fusing Fan.....	284
When installing the fusing fan.....	285

---

Paper Exit Fan.....	285
When installing the paper exit fan.....	285
AC Controller Board Fan.....	286
When installing the AC controller fan.....	286
Fusing Entrance Thermopiles.....	286
When cleaning the lens of the thermopile.....	287
Pressure Roller HP Sensor.....	288
QSU fan.....	289
Fusing Unit Shutter Plate Drive Motor.....	290
Fusing Unit Shutter Plate Home Position Sensor.....	292
Fusing Unit Shutter Plate Drive Mechanism.....	293
Paper Feed.....	297
Paper Feed Unit.....	297
Pick-Up, Feed and Separation Rollers.....	298
Tray 1 and Tray 2.....	298
Tray Lift Motor.....	299
Vertical Transport, Paper Overflow, Paper End and Paper Feed Sensor.....	299
Registration Sensor.....	300
By-pass Paper Size Sensor and By-pass Paper Length Sensor.....	301
When reinstalling the by-pass paper size sensor.....	302
By-pass Bottom Tray.....	303
By-pass Paper End Sensor.....	305
By-pass Pick-up, Feed and Separation Roller, Torque Limiter.....	306
By-pass Feed Clutch.....	307
Paper Exit Unit.....	308
Fusing Exit, Paper Overflow, Junction Paper Jam and Paper Exit Sensor.....	309
Duplex Unit.....	312
Duplex Unit.....	312
Duplex Door Sensor.....	313
Duplex Entrance Sensor.....	314
Duplex Exit Sensor.....	315
Electrical Components.....	316
Boards.....	316

---

Controller Box closed.....	316
Behind the IOB, FCU and G3 Interface Unit.....	317
Controller Box Open.....	317
Controller Unit.....	318
Controller Box Right Cover.....	318
Controller Box.....	319
When opening the controller box.....	319
When removing the controller box.....	320
IOB (In/Out Board).....	323
IPU.....	324
BCU.....	325
When installing the new BCU.....	326
PSU.....	327
Shutdown Board.....	327
PSU bracket.....	328
PSU board.....	329
PSU fans.....	329
ITB Power Supply Board.....	330
High Voltage Supply Board.....	331
High Voltage Supply Board Bracket.....	331
AC Controller Board.....	332
AC Controller Board Bracket.....	332
Controller Board.....	333
When installing the new controller board.....	335
HDD Fan.....	336
When installing the HDD fan.....	336
HDD.....	336
When installing a new HDD unit.....	338
Toner Bottle Detection Board.....	338
NVRAM Replacement Procedure.....	339
NVRAM on the BCU.....	339
NVRAM on the controller board.....	340
Tube Cooling Fan (1st Duct Fan).....	341



---

Single Pass ADF (Single Pass ADF model only).....	343
Single Pass ADF.....	343
ADF Covers.....	344
ADF Front Cover.....	344
ADF Rear Cover.....	345
Original Feed Cover.....	346
Original Tray Unit.....	347
Original Feed Unit.....	350
Original Feed Belt and Pick-Up Roller.....	351
Original Separation Roller.....	352
Original Registration Sensor.....	352
ADF Control Board.....	353
Original Width, Interval, Original Separation and Skew Correction Sensors.....	354
Original Width Sensors.....	354
Original Separation and Skew Correction Sensors.....	355
Interval Sensor.....	356
Original Length Sensors.....	357
APS Start Sensor.....	357
Other ADF Sensors.....	358
Bottom plate HP Sensor.....	358
Original Set Sensor.....	359
Original Feed Cover Sensor.....	360
Bottom Plate Position Sensor.....	360
Original Pick-Up Roller HP Sensor.....	361
Bottom Plate Lift Motor.....	361
Original Transport Motor.....	362
Original Feed Motor.....	363
Original Pick-Up Roller Motor.....	366
Original Exit Motor.....	367
CIS Unit.....	368
When reinstalling the CIS Unit.....	371
Original Exit Sensor.....	372
ADF Fan.....	372

When reinstalling the ADF fan.....	373
Using Dip Switches.....	374
Controller Board.....	374
BCU Board.....	374

## 5. System Maintenance

Service Program Mode.....	375
SP Tables.....	375
Enabling and Disabling Service Program Mode.....	375
Entering SP Mode.....	375
Exiting SP Mode.....	375
Types of SP Modes.....	375
SP Mode Button Summary.....	376
Switching Between SP Mode and Copy Mode for Test Printing.....	377
Selecting the Program Number.....	377
Exiting Service Mode.....	378
Service Mode Lock/Unlock.....	378
Remarks.....	379
Display on the Control Panel Screen.....	379
Others.....	380
Main SP Tables-1.....	381
SP1-XXX (Feed).....	381
Main SP Tables-2.....	429
SP2-XXX (Drum).....	429
Main SP Tables-3.....	501
SP3-XXX (Process).....	501
Main SP Tables-4.....	532
SP4-XXX (Scanner).....	532
Main SP Tables-5.....	550
SP5-XXX (Mode).....	550
Main SP Tables-6.....	617
SP6-XXX (Peripherals).....	617
Main SP Tables-7.....	626
SP7-XXX (Data Log).....	626

---

Main SP Tables-8.....	665
SP8-xxx: Data Log2.....	665
Main SP Tables-9.....	711
Input Check Table.....	711
Copier.....	711
Table 1: Paper Height Sensor.....	714
Table 2: Paper Size Switch (Tray 2).....	714
Table 3: Paper Size (By-pass Table).....	715
ARDF (D630).....	716
2000/3000-Sheet (Booklet) Finisher (D637, D636).....	717
1000-Sheet Finisher (D588).....	719
Bridge Unit (D634)/ Side Tray (D635).....	721
Internal Shift Tray (D633).....	721
1 Bin Tray (D632).....	721
Two-Tray PFU (D580)/ LCIT 2000 (D581)/ LCIT 1200 (D631).....	721
Output Check Table.....	722
Copier.....	722
ARDF (D630).....	729
1000-Sheet Finisher (D588).....	730
2000/3000-Sheet (Booklet) Finisher (D637/D636).....	731
Bridge Unit (D386)/ Side Tray (D634).....	732
Shift Tray (D633).....	732
1 Bin Tray (D632).....	733
Two-Tray PFU (D580)/ LCIT 2000 (D581)/ LCIT 1200 (D531).....	733
Printer Service Mode.....	734
SP1-XXX (Service Mode).....	734
Scanner SP Mode.....	742
SP1-xxx (System and Others).....	742
SP2-XXX (Scanning-image quality).....	742
Firmware Update.....	744
Type of Firmware.....	744
Before You Begin.....	745
Updating Firmware.....	745

---

Preparation.....	745
Updating Procedure.....	746
Error Messages.....	747
Firmware Update Error.....	747
Recovery after Power Loss.....	747
Updating the LCDC for the Operation Panel.....	748
Update Procedure for App2Me Provider.....	748
Browser Unit Update Procedure.....	750
Handling Firmware Update Errors.....	751
Error Message Table.....	751
Installing Another Language.....	753
Reboot/System Setting Reset.....	756
Software Reset.....	756
System Settings and Copy Setting Reset.....	756
System Setting Reset.....	756
Copier Setting Reset.....	756
Downloading Stamp Data.....	758
NVRAM Data Upload/Download.....	759
Uploading Content of NVRAM to an SD card.....	759
Downloading an SD Card to NVRAM.....	760
Address Book Upload/Download.....	762
Information List.....	762
Download.....	762
Upload.....	763
Using the Debug Log.....	764
Overview.....	764
Switching ON and Setting UP Save Debug Log.....	764
Retrieving the Debug Log from the HDD.....	768
Recording Errors Manually.....	768
Debug Log Codes.....	769
SP5857-015 Copy SD Card-to-SD Card: Any Desired Key.....	769
SP5857-016 Create a File on HDD to Store a Log.....	769
SP5857-017 Create a File on SD Card to Store a Log.....	769

---

Card Save Function.....	770
Overview.....	770
Card Save:.....	770
Procedure.....	770
Error Messages.....	774
SMC List Card Save Function.....	775
Overview.....	775
SMC List Card Save.....	775
Procedure.....	775
File Names of the Saved SMC Lists.....	777
Error Messages.....	778

## 6. Troubleshooting

---

Service Call.....	779
Service Call Conditions.....	779
SC Code Classification.....	780
Service Call Tables - 1.....	782
SC1xx: Scanning.....	782
Service Call Tables - 2.....	788
SC 2xx: Exposure.....	788
Service Call Tables - 3.....	794
SC3xx: Image Processing – 1.....	794
SC3xx: Image Processing – 2.....	795
Service Call Tables - 4.....	799
SC4xx: Image Processing - 3.....	799
Service Call Tables – 5.....	803
SC5xx: Paper Feed and Fusing.....	803
Service Call Tables - 6.....	822
SC6xx: Device Communication.....	822
Service Call Tables - 7.....	834
SC7xx: Peripherals.....	834
Service Call Tables - 8.....	848
SC8xx: Overall System.....	848
Service Call Tables - 9.....	864

---

SC9xx: Miscellaneous.....	864
Process Control Error Conditions.....	872
Developer Initialization Result.....	872
Process Control Self-Check Result.....	873
Vsg Adjustment Result.....	875
Line Position Adjustment Result.....	875
Troubleshooting Guide.....	877
Image Quality.....	877
Line Position Adjustment.....	879
Test.....	879
Countermeasure list for color registration errors.....	879
Stain on the Outputs.....	885
Stack Problem in the 1-Bin Tray.....	886
Problem at Regular Intervals.....	886
Toner End Recovery Error.....	887
Flow Chart for the Toner End Recovery Error.....	888
Toner Bottle Detection Error.....	889
Solid Image or Halftone Image Error.....	890
Recovery Procedure.....	890
Problem Prevention Procedure.....	891
Faulty Cleaning.....	891
Black or color lines (2-3mm).....	891
Band Image Between 20mm and 30mm .....	892
Encryption Key Restoration for NVRAM.....	892
How to restore the old encryption key to the machine.....	892
How to do a forced start up with no encryption key.....	893
Fax Icon is not Displayed.....	894
Other Symptoms.....	895
Flowchart for the error.....	895
Countermeasure list for the error.....	896
Jam Detection.....	899
Paper Jam Display.....	899
Jam Codes and Display Codes.....	899

---

Paper Size Code.....	905
Sensor Locations.....	906
Electrical Component Defects.....	907
Sensors.....	907
Blown Fuse Conditions.....	912
Power Supply Unit.....	912
AC Drive Board.....	913
Scanner Test Mode.....	914
SBU Test Mode.....	914
<b>7. Energy Saving</b>	
Energy Save.....	915
Energy Saver Modes.....	915
Timer Settings.....	915
Return to Stand-by Mode.....	916
Recommendation.....	916
Energy Save Effectiveness.....	916
Paper Save.....	918
Effectiveness of Duplex/Combine Function.....	918
1. Duplex:.....	918
2. Combine mode:.....	918
3. Duplex + Combine:.....	918
How to calculate the paper reduction ratio .....	919
<b>INDEX</b> .....	921





# 1. Product Information

---

## Specifications

1


See "Appendices" for the following information:

- General Specifications
- Supported Paper Sizes
- Software Accessories
- Optional Equipment

# Product Overview


1

## Component Layout

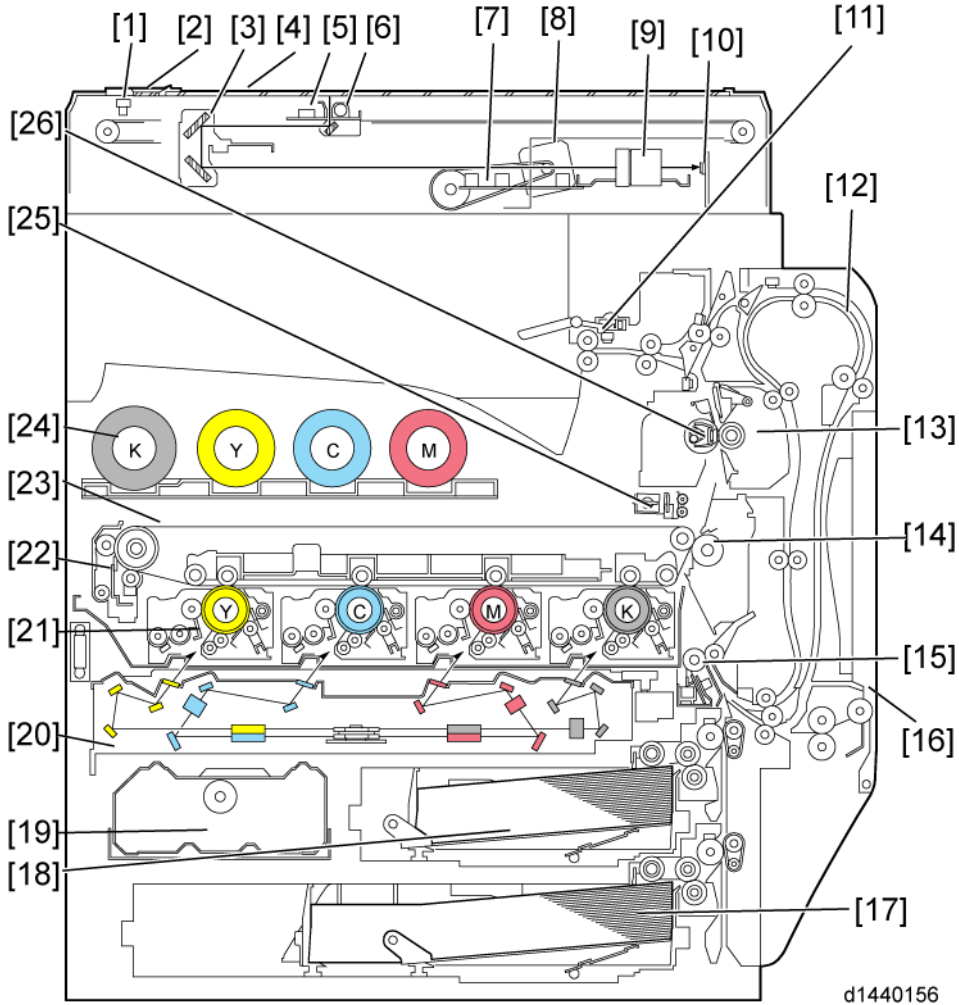

1. Scanner HP sensor	14. Paper transfer roller
2. ADF exposure glass	15. Registration roller
3. 2nd scanner (2nd carriage)	16. By-pass feed table
4. Exposure glass	17. Tray 2
5. 1st scanner (1st carriage)	18. Tray 1
6. Scanner lamp	19. Toner collection bottle
7. Original length sensor	20. Laser optics housing unit
8. Scanner motor	21. PCDU (4 colors)
9. Lens block	22. Image transfer belt cleaning unit
10. Sensor board unit (SBU)	23. Image transfer belt unit
11. Paper exit rollers	24. Toner bottle (4 colors)
12. Duplex unit	25. ID sensor
13. Fusing unit	26. Fusing sleeve belt unit

### Paper Path

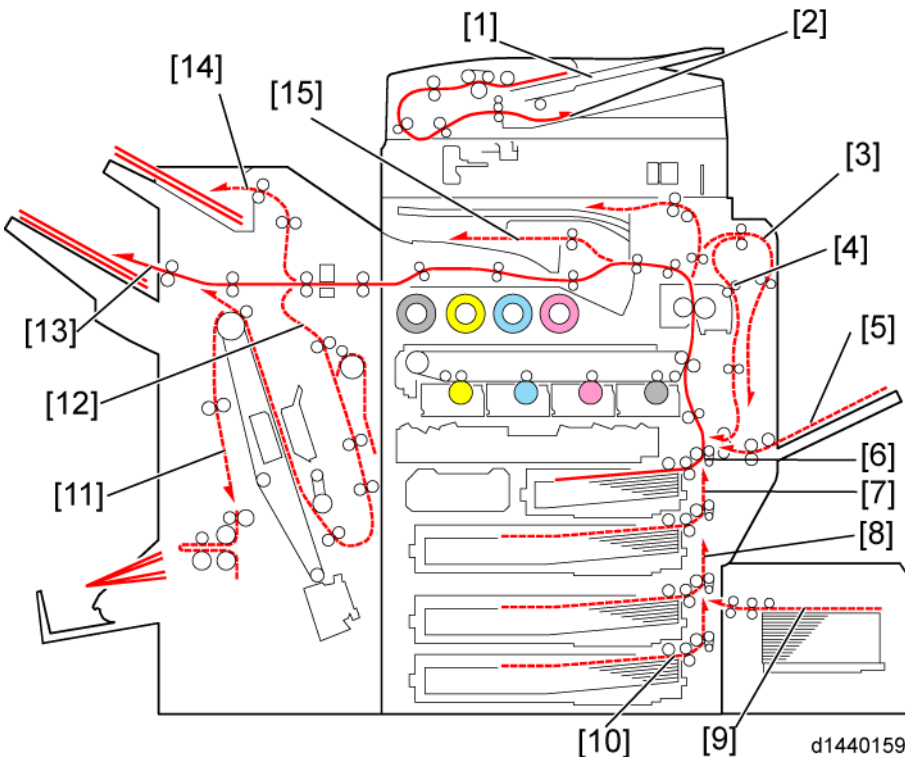


d1440159

<ol style="list-style-type: none"><li>1. Original tray</li><li>2. Original exit tray</li><li>3. Duplex inverter</li><li>4. Duplex feed</li><li>5. By-pass tray feed</li><li>6. Tray 1 feed</li><li>7. Tray 2 feed</li><li>8. Tray 3: Optional paper feed unit/LCT</li></ol>	<ol style="list-style-type: none"><li>9. Tray 5: Optional LCT 1200</li><li>10. Tray 4: Optional paper feed unit</li><li>11. Finisher booklet stapler (Optional)</li><li>12. Finisher stapler (Optional)</li><li>13. Finisher upper tray (Optional)</li><li>14. Finisher proof tray (Optional)</li><li>15. Inner Tray</li></ol>
---	--

The 2000/3000-sheet (booklet) finisher and 1000-sheet finisher require the bridge unit and one from the two-tray paper feed unit or the LCT.


## Drive Layout

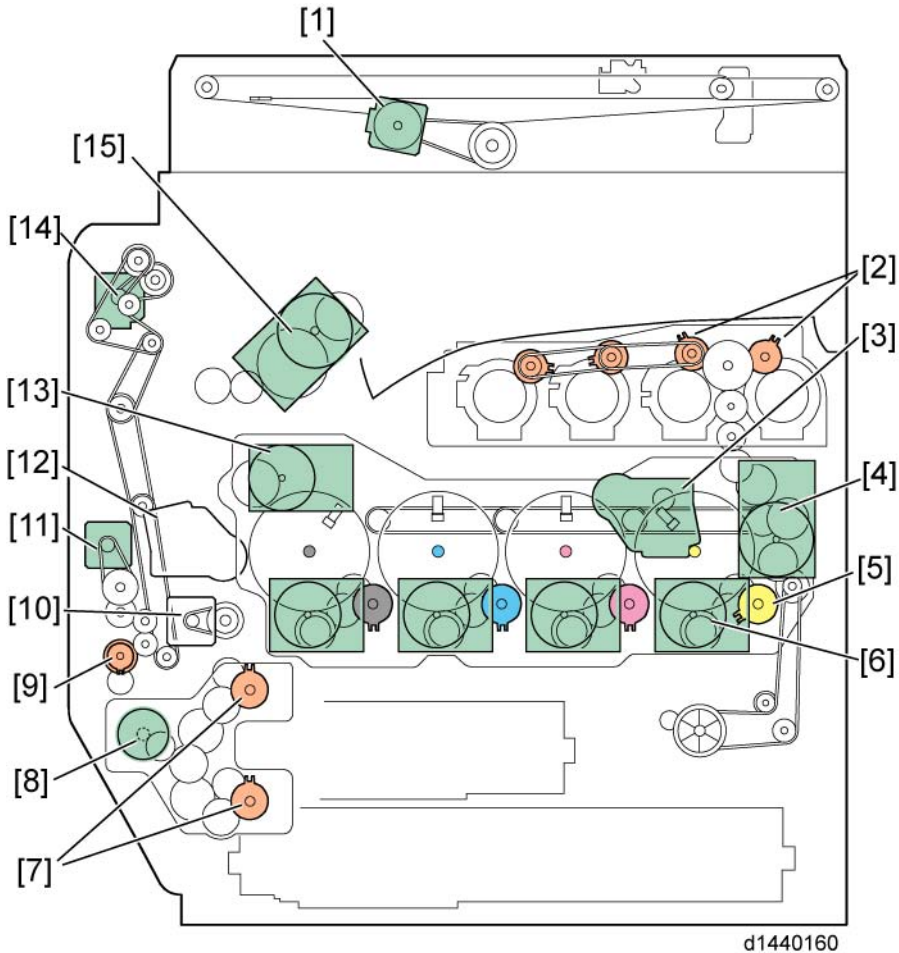

1. Scanner motor:	Drives the scanner unit.
2. Toner supply clutch-K and -CMY:	Turns on/off the drive power to the toner supply unit (K and -CMY).
3. ITB (Image Transfer Belt) contact motor:	Moves the ITB into contact and away from the color PCDUs.
4. Toner transport motor:	Drives the toner attraction pumps and the toner collection coils from the PCDUs, from the transfer belt unit, and inside the toner collection bottle. Also rotates the toner bottles.
5. Development clutch (K, Y, M, C):	Turns on/off the drive power to the development unit (K, Y, M, C).

6. Drum/Development drive motor (K, Y, M, C)	Drives the color drum unit and development unit (K, Y, M, C).
7. Paper feed clutch	Switches the drive power between tray 1 and tray 2.
8. Paper feed motor:	Drives the paper feed mechanisms (tray 1/tray 2).
9. By-pass feed clutch:	Turns on/off the drive power to the by-pass pick-up, feed and separation rollers.
10. Registration motor:	Drives the registration roller.
11. By-pass/duplex feed motor:	Drives the by-pass pick-up, feed and separation roller, and duplex transport rollers.
12. Paper transfer contact motor:	Moves the paper transfer roller in contact with the image transfer belt.
13. ITB drive motor:	Drives the image transfer belt unit.
14. Duplex inverter motor	Drives the duplex inverter rollers and duplex transport rollers.
15. Fusing/paper exit motor:	Drives the fusing unit and paper exit section.


# Machine Codes and Peripherals Configuration

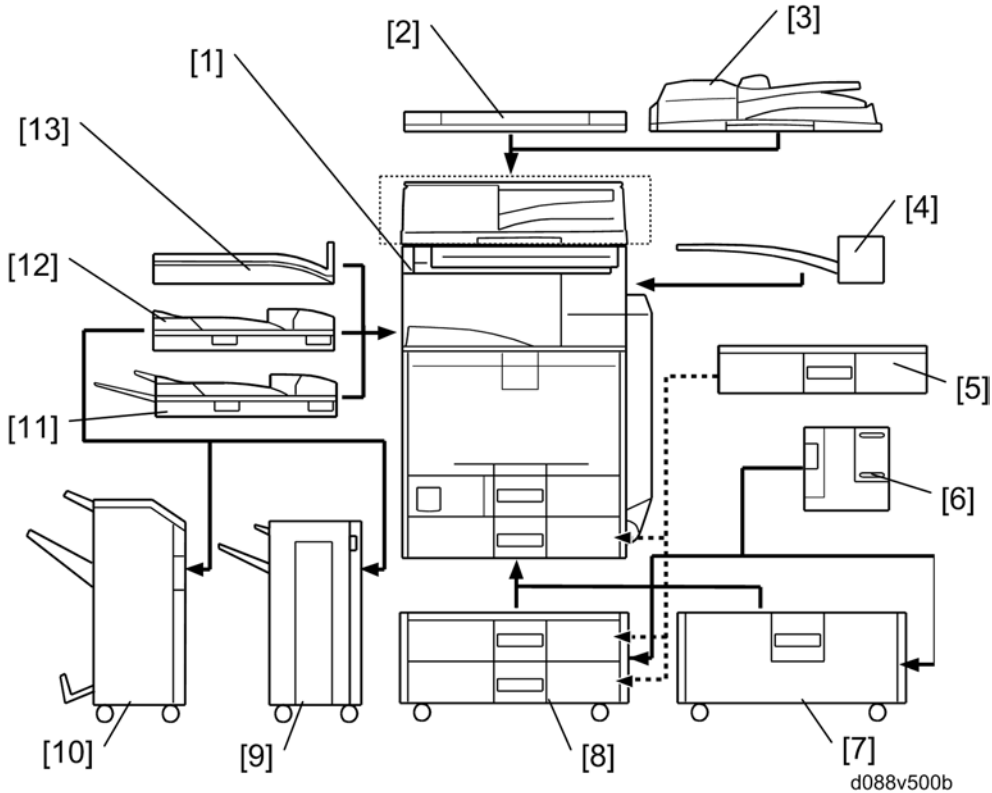

Item	Machine Code	Call out	Remarks
Mainframe	D143/D144	[1]	Single pass ADF model has ADF as standard.
Platen cover	D593	[2]	One from the two for all models except the single pass ADF model
ARDF	D630	[3]	
2000(booklet)/3000-sheet finisher	D637/D636	[10]	One from [9] and [10]; Requires [11] and one from [7] and [8]
Punch unit: 3/2 holes	B702-17	-	Requires [10]
Punch unit: 4/2 holes	B702-27	-	Requires [10]
Punch unit: 4 holes	B702-28	-	Requires [10]

Item	Machine Code	Call out	Remarks
Punch unit 2/3 holes	D570-00 (NA)	-	Requires [10]
Punch unit 2/4 holes	D570-01 (EU)	-	Requires [10]
Punch unit 4 holes	D570-02 (Scandinavia)	-	Requires [10]
1000-sheet finisher	D588	[9]	One from [9] and [10]; Requires [11] and one from [7] and [8]
2000-sheet LCT	D581	[7]	One from the two
Two-tray paper feed unit	D580	[8]	
1200-sheet LCT	D631-17(NA)	[6]	Requires [7] or [8]
	D631-27(EU/AA)		
Envelope feeder	D638	[5]	Requires Tray 2 of the Mainframe or [8]
1-bin tray	D632	[4]	-
Bridge unit	D634	[12]	One from the three
Shift tray	D633	[13]	
Side tray	D635	[11]	
Scanner accessibility option	D647	-	-
Card reader bracket	D593-61	-	-
ADF Handle Type C	D593	-	This is for use when a person who uses a wheel chair will lift the ADF down when the ADF is open.
Optional counter interface unit	B870	-	-
Key counter bracket	A674	-	-



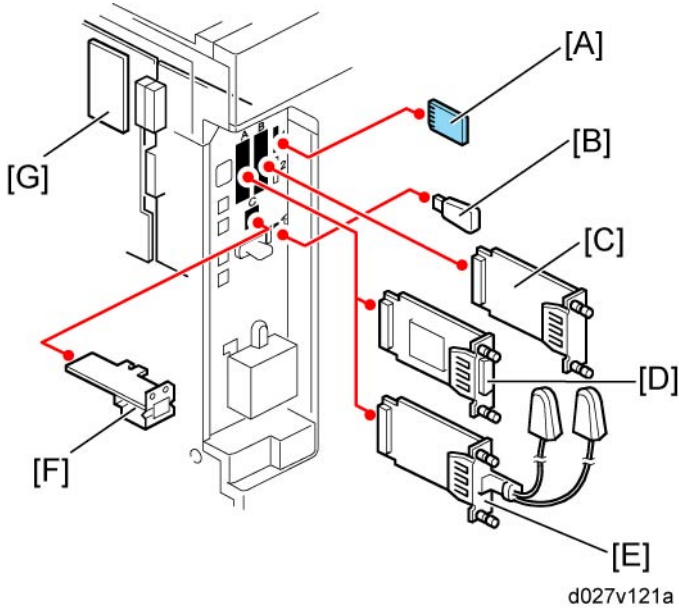

Item	Machine code	Call out	Remark
Gigabit Ethernet	D377-21	[F]	-
IEEE 1284	B679-17	[D]	You can only install one of these at a time.
Wireless LAN (IEEE 802.11a/g)	D377-01 (NA) D377-02 (EU/AA)	[E]	
Wireless LAN (IEEE 802.11g)	D377-19 (EU)		
File Format Converter	D377-04	[C]	
Bluetooth (USB)	D566-01	[B]	-

PostScript 3	D645-11 (NA) D645-12 (EU) D645-13 (AA)		[A] Those cards should be installed from SD slot 2 (lower). If multiple applications are required, merge all applications in one SD card with SP mode. (p. 138)
PictBridge	D645-15		
IPDS Unit	D645-07 (NA) D645-08 (EU) D645-09 (AA)		
Browser Unit	D645-17 (NA) D645-24 (EU) D645-25 (AA)		
SD Card for Netware Printing	D645-23		
PDF Direct / VM / App2Me Card (Standard)	-	-	This card should already be in SD slot 1 (upper) when the machine leaves the factory.
Copy Data Security Unit Type F	B829	[G]	-
Fax Option Type C5502	D643-01 (NA) D643-02 (EU) D643-03 (AA)	-	-
G3 Interface Unit Type C5502	D643-11 (NA) D643-12 (EU/AA)	-	-
Handset Type C5502 (only for NA)	D645-27	-	The included bracket is not for these models.



# Guidance for Those Who are Familiar with Predecessor Products

Machines D143/D144 are successor models to Machines D088/D089. If you have experience with the predecessor products, the following information will be of help when you read this manual.

## Different Points from Predecessor Products

Item	D143/D144	D088/D089
Controller Type	GW+ Controller	GW Controller
New Fusing Unit without the Decurler	Yes	No
Fusing Unit	NEW QSU-DH fusing system	IH roller fusing system
SMC data	SD card download or printing	Printing only
Operation Panel	Tiltable Operation Panel Includes USB/SD slot	Stationary Operation Panel
USB2.0/SD Slot	Standard	Optional
Data Overwrite Security, HDD Encryption	Included in the controller ROM	SD card




# 2. Installation

## Installation Requirements

### Environment

2

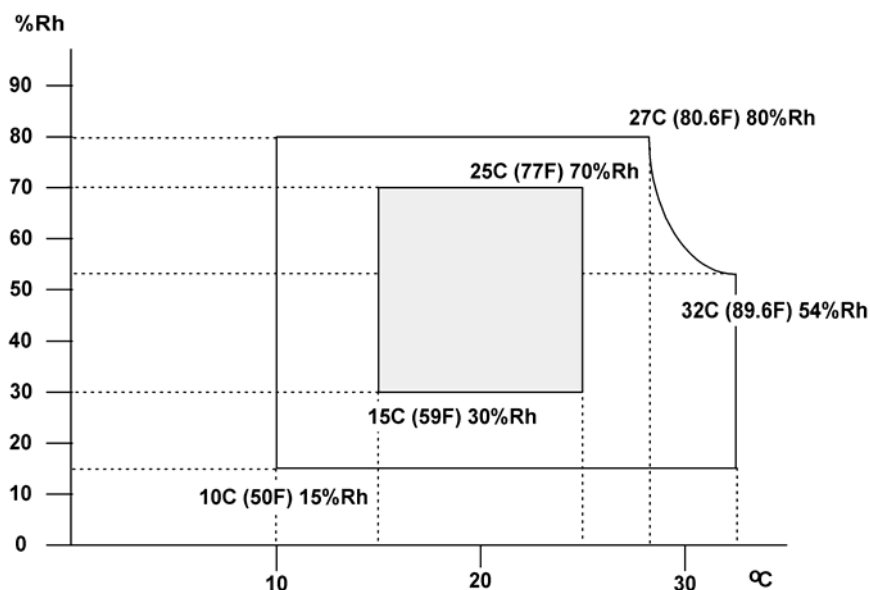

1. Temperature Range: 10°C to 32°C (50°F to 89.6°F)
2. Humidity Range: 15% to 80% RH
3. Ambient Illumination: Less than 1500 lux (do not expose to direct sunlight)
4. Ventilation: 3 times/hr/person or more
5. Do not let the machine get exposed to the following:
  - 1) Cool air from an air conditioner
  - 2) Heat from a heater
6. Do not install the machine in areas that are exposed to corrosive gas.
7. Install the machine at locations lower than 2,000 m (6,560 ft.) above sea level.
8. Install the machine on a strong, level base. (Inclination on any side must be no more than 5 mm.)
9. Do not install the machine in areas that get strong vibrations.

### ★ Important

- Do not leave the toner bottle in a place directly exposed to sunlight.

- The toner bottle must be kept at a temperature of 35°C (95°F) or less. Be careful not to leave the toner bottle in a hot place when transporting or storing it.

## Machine Level


Front to back: Within 5 mm (0.2")

Right to left: Within 5 mm (0.2")

## Machine Space Requirements

### **⚠ CAUTION**

- This machine, which uses high voltage power sources, can generate ozone gas. High ozone density is harmful to human health. Therefore, the machine must be installed in a well-ventilated room.

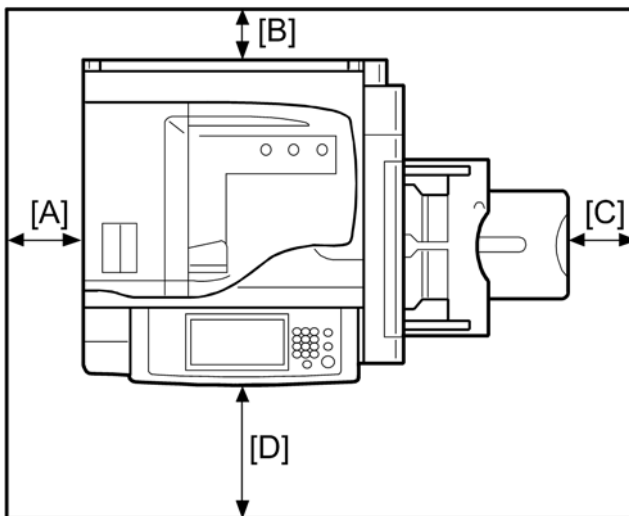

b222i109a

A: Over 100 mm (3.9")


B: Over 100 mm (3.9")

C: Over 100 mm (3.9")

D: Over 750 mm (29.5")

Put the machine near the power source with the clearance shown above.

## Machine Dimensions

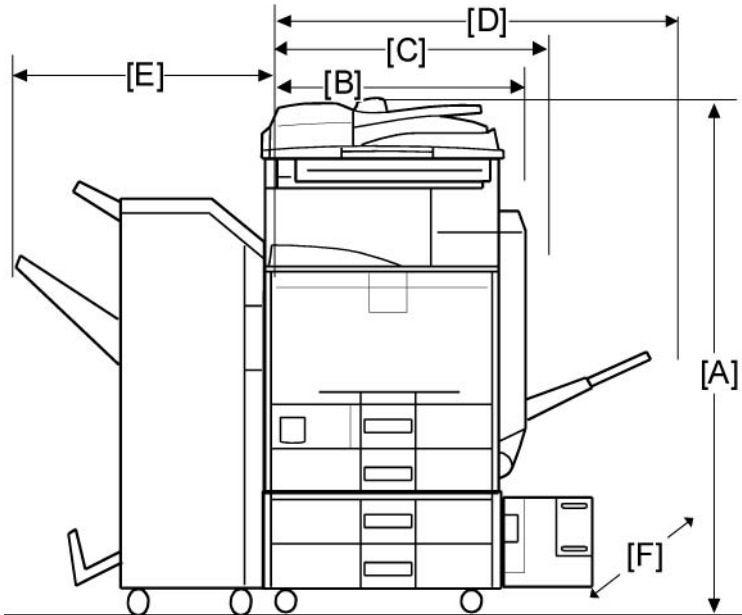

d1440118

[A]: 670 mm (mainframe) + 260 mm (PFU) + 135 mm (ARDF)

[B]: 580 mm

[C]: 670 mm

[D]: 1110 mm

[E]: 657 mm

[F]: 734 mm (Depth) (803 mm Max. with D630)

## Power Requirements

### ⚠ CAUTION

- Insert the plug firmly in the outlet.
- Do not use an outlet extension plug or cord.
- Ground the machine.

#### 1. Input voltage level:

110 V, 60 Hz: 20 A (Taiwan)

120 to 127 V, 60 Hz: More than 12 A (NA)

220 V to 240 V, 50 Hz/60 Hz: 10 A (EU/AA/China/Korea)

2. Permissible voltage fluctuation: +8.66 %/ -10 % (NA)

Permissible voltage fluctuation:  $\pm 10\%$  (Others)

3. Do not put things on the power cord.



# Copier Installation

## ⚠ CAUTION


- Make sure that the image transfer belt is in its correct position (away from the PCDUs) before you move the machine. Otherwise, the image transfer belt and the black PCDU can be damaged.

2

## Power Sockets for Peripherals


## ⚠ CAUTION

- Rating voltage for peripherals.
- Make sure to plug the cables into the correct sockets.

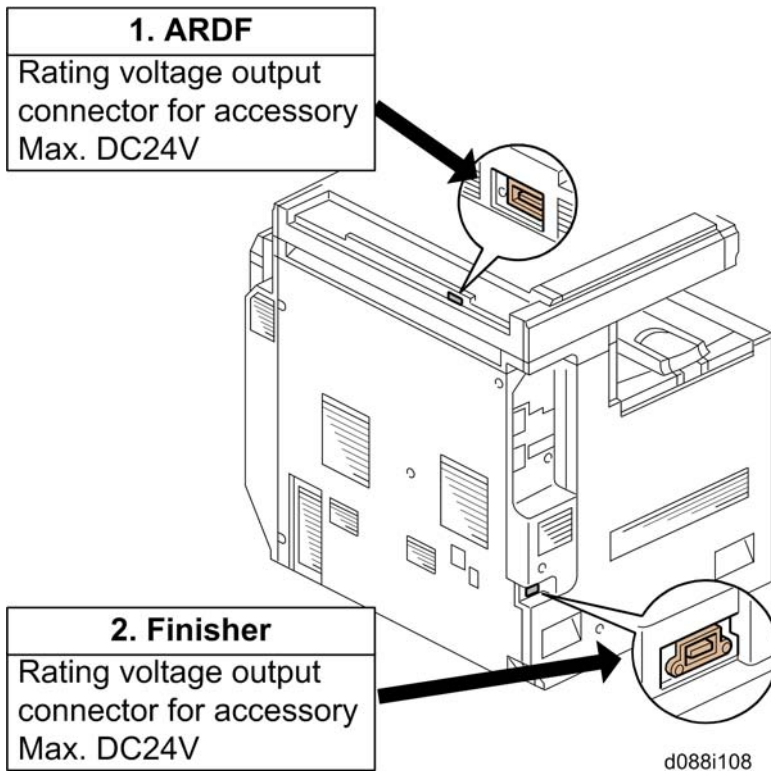

## Installation Flow Chart

This flow chart shows the best procedure for installation.

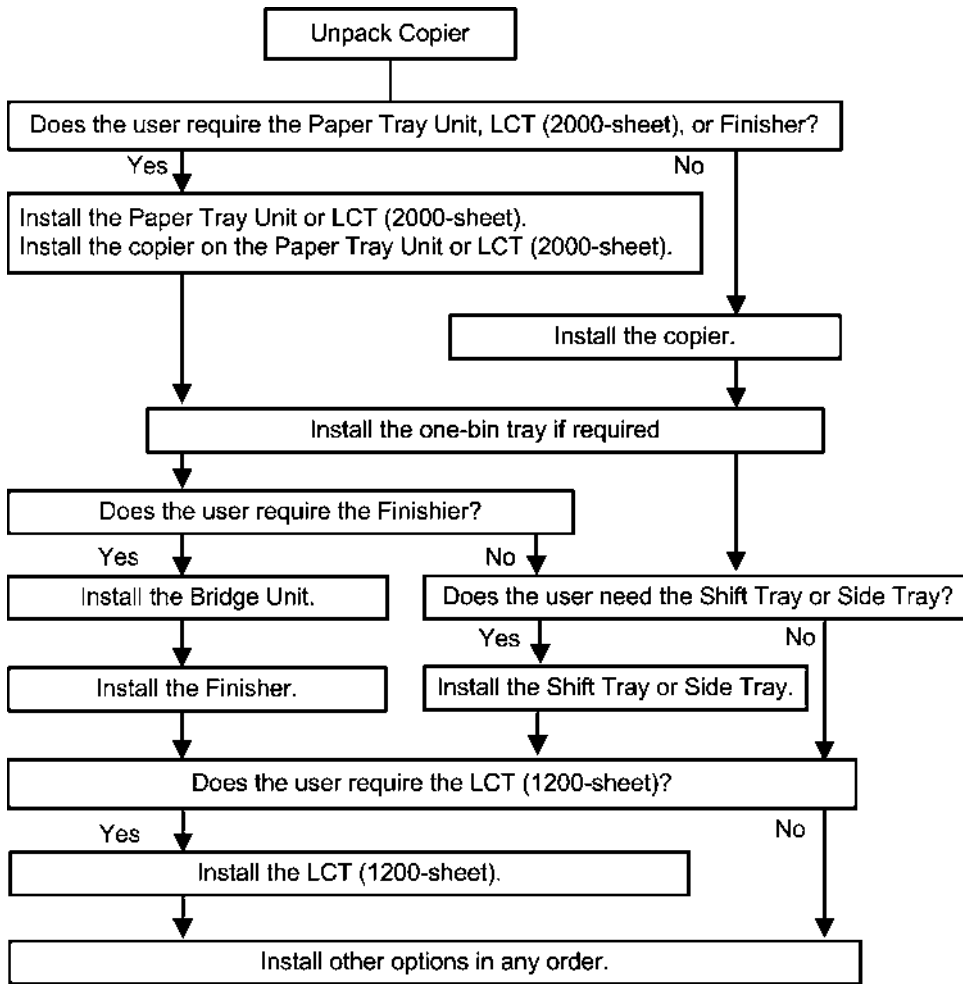

d088i510

You need the optional paper tray unit or the LCT if you want to install the finisher D588, D636 or D637) or 1200-sheet LCT (D631).

The punch unit is for 2000-sheet booklet finisher (D637) and 3000-sheet finisher (D636).

## Installation Procedure

### ⚠ CAUTION



- Remove the tape from the development units before you turn the main switch on. The development units can be severely damaged if you do not remove the tape.

Put the machine on the paper tray unit or the LCT first if you install an optional paper tray unit or the optional LCT at the same time. Then install the machine and other options.

### ↓ Note

- Keep the shipping retainers after you install the machine. You may need them in the future if you transport the machine to another location.

## Tapes and Retainers

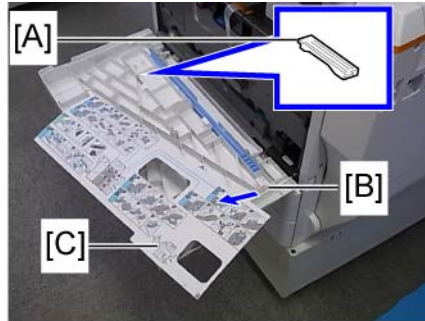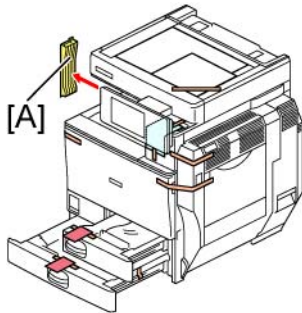

d1440036b


1. Remove all the tapes and retainers on the machine.
2. Remove all the tapes and retainers in trays 1 and 2, and then take out the power cord from tray 1 (if applicable).
3. Remove the scanner unit stay [A].
4. Open the front door [B], and then remove the jam location sheet [C].
5. Keep the scanner unit stay [A] inside the front door [B].
6. Reattach the jam location sheet.
7. Close the front door.

### ★ Important

- The scanner unit stay [A] should be reinstalled before the machine is transported.


## Protection Sheet (Only for single pass ADF model)

1. Open the ADF.

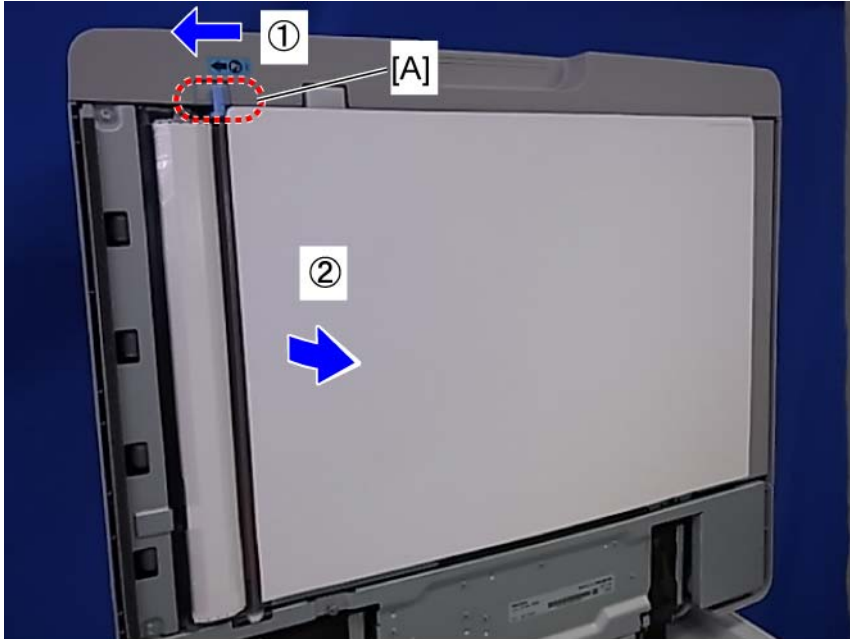

d1440157

2. Release the lever [A] and open the white board (① → ②).

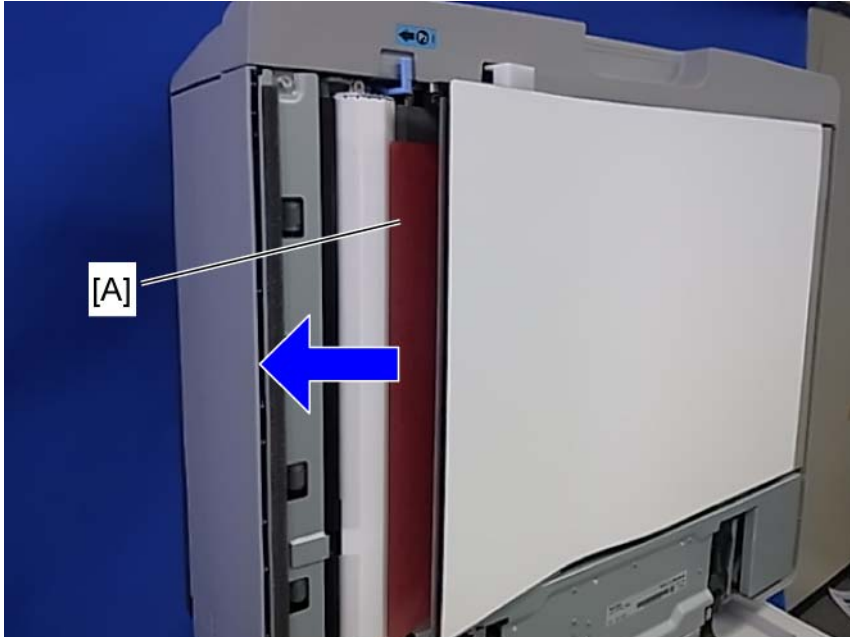


d1440158


3. Pull out the protection sheet [A] and remove it.
4. Press the white board gently to close it.
5. Close the ADF.

↓ **Note**

- An “Original Jam” message will appear when the protection sheet is left in the ADF.

## Developer and Toner Bottles

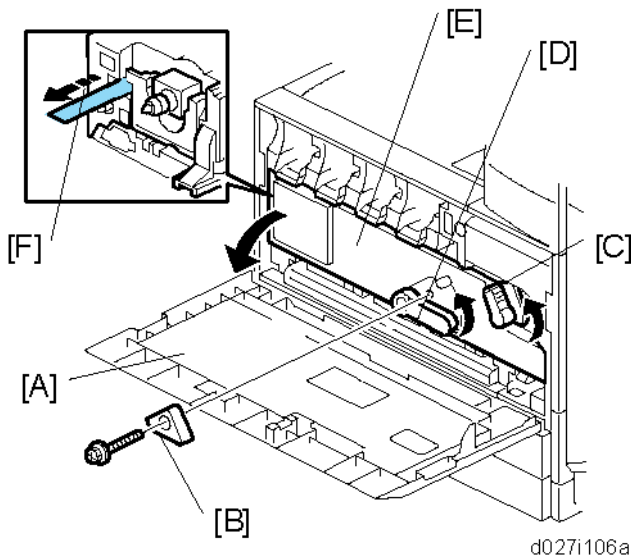


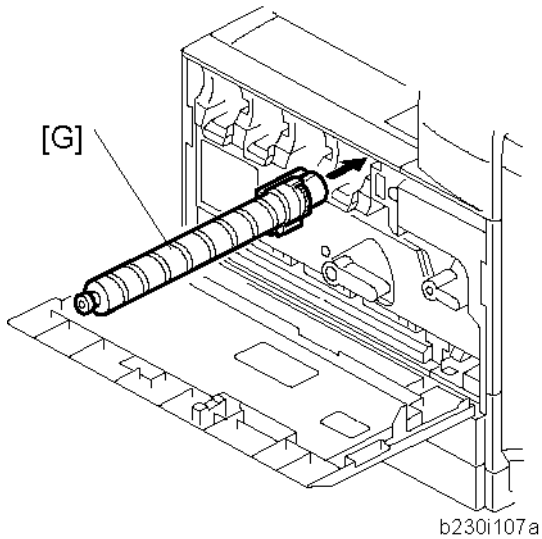
1. Open the front door [A].
2. Remove the stopper [B] (  x 1).

↓ **Note**

- This stopper locks the drum positioning plate lever.
3. Release the image transfer unit lock lever [C], and turn the drum positioning plate lever [D] counterclockwise.
  4. Open the drum positioning plate [E].
  5. Remove the tape [F] from the Bk development unit.
  6. Remove all tapes on the other development units (Y, M, C) in the same way as described in the previous step.

↓ **Note**

- When you remove the tape from the development unit, hold the development unit with your hand, and then pull the tape.
7. Close the drum positioning plate. Then lock the image transfer unit lock and turn the drum positioning plate lever clockwise.
  8. Lock the drum positioning plate lever with the stopper [B] (  x 1).
  9. Shake each toner bottle five or six times.



10. Install each toner bottle [G] in the machine.

**Note**

- The toner bottles are unique for the D143/D144 models. The toner bottles for the previous models (D088/D089) cannot be used in the D143/D144 models.

11. Close the front door.


## Paper Trays

---

1. Pull each paper tray out. Then adjust the side guides and end guide to match the paper size.

**Note**


- To move the side guides, first pull out the tray fully. Then push down the green lock at the rear inside the tray.

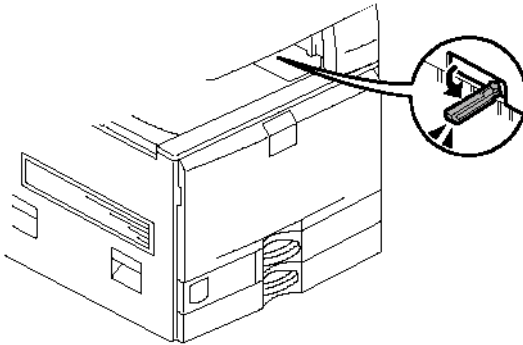

b230i103a

2. Pull out the feeler [A] for the output tray full detection mechanism.

## Decals

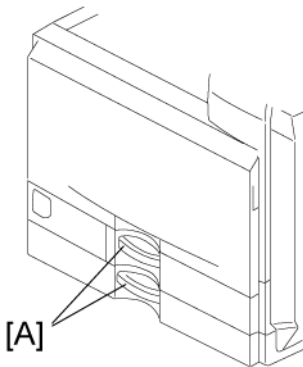

d086i105a

1. Attach the correct paper tray number and size decals to the paper trays [A].

### ↓ Note

- Paper tray number and size decals are also used for the optional paper tray or the optional LCT. Keep these decals for use with these optional units.

## Initialize the Developer

1. Plug in the machine.
2. Make sure that the platen or ARDF is closed and the main power is turned off.

3. Turn the main power switch on. The machine automatically starts the initialization procedure. The Start button LED (🟢) turns green when this procedure has finished.
4. Make copies of image samples (text, photo, and text/photo modes).
5. Do the Automatic Color Calibration process (ACC) as follows:
  - 1). Print the ACC test pattern (User tools → Maintenance → ACC → Start).
  - 2). Put the printout on the exposure glass.
  - 3). Put 10 sheets of white paper on top of the test chart.
  - 4). Close the ARDF or the platen cover.
  - 5). Press "Start Scanning" on the LCD panel. The machine starts the ACC.
6. Check that the sample image has been copied normally.

### Settings Relevant to the Service Contract

Change the necessary settings for the following SP modes if the customer has made a service contract.


#### ⬇ Note

- You must select one of the counter methods (developments/prints) in accordance with the contract (📄 SP5-045-001).

Item	SP No.	Function	Default
Counting method	SP5-045-001	Specifies if the counting method used in meter charge mode is based on developments or prints.	"0": Developments
A3/11" x 17" double counting	SP5-104-001	Specifies whether the counter is doubled for A3/11" x 17" paper. When you have to change this setting, contact your supervisor.	"No": Single counting
Service Tel. No. Setting	SP5-812-001 through 004	5812-002 programs the service station fax number. The number is printed on the counter list when the meter charge mode is selected. This lets the user fax the counter data to the service station.	



## SP Operation Sound On/Off Setting

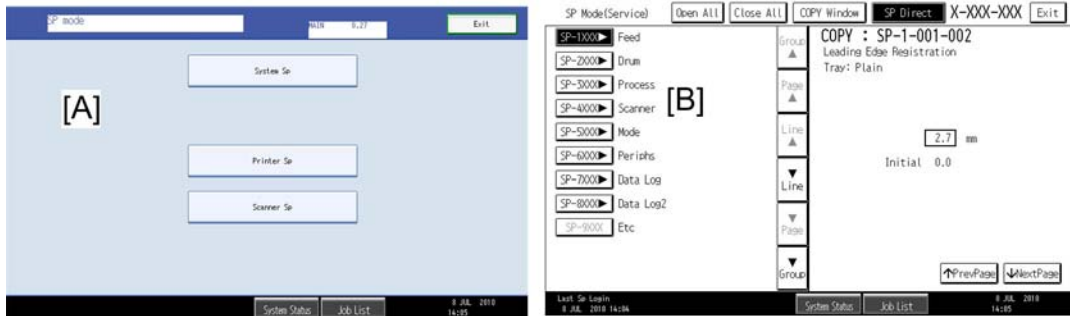

d086i120

### To turn off the SP Operation Sound

1. Enter the SP mode.
2. On the top menu screen [A], hold down the "Clear" button until you hear a beep sound. This turns off the SP operation sound.
3. No SP operation sound can be heard in all levels [B] (SPx, SPx-xxx and SPx-xxx-xxx) of the SP mode.

### To turn on the SP Operation Sound

1. Enter the SP mode.
2. On the top menu screen [A], hold down the "Clear" button again until you hear a beep sound. This turns on the SP operation sound.
3. SP operation sound can be heard in all levels [B] (SPx, SPx-xxx and SPx-xxx-xxx) of the SP mode.

## Settings for @Remote Service

### ↓ Note

- Prepare and check the following check points before you visit the customer site. For details, ask the @Remote key person.

### Check points before making @Remote settings

1. The setting of SP5816-201 in the mainframe must be "0".
2. Device ID2 (SP5811-003) must be correctly programmed.
  - 6 spaces must be put between the 3-digit prefix and the following 8-digit number (e.g. xxx\_\_\_\_xxxxxxxx).
  - ID2 (SP5811-003) and the serial number (SP5811-001) must be the same (e.g. ID2: A01\_\_\_\_23456789 = serial No. A0123456789)
3. The following settings must be correctly programmed.
  - Proxy server IP address (SP5816-063)

- Proxy server Port number (SP5816-064)
- Proxy User ID (SP5816-065)
- Proxy Password (SP5816-066)

## 4. Get a Request Number

**Execute the @Remote Settings**

1. Enter the SP mode.
2. Input the Request number which you have obtained from @Remote Center GUI, and then enter [OK] with **SP5816-202**.
3. Confirm the Request number, and then click [EXECUTE] with **SP5816-203**.
4. Check the confirmation result with **SP5816-204**.

Value	Meaning	Solution/ Workaround
0	Succeeded	-
1	Request number error	Check the request number again.
3	Communication error (proxy enabled)	Check the network condition.
4	Communication error (proxy disabled)	Check the network condition.
5	Proxy error (Illegal user name or password)	Check Proxy user name and password.
6	Communication error	Check the network condition.
8	Other error	See "SP5816-208 Error Codes" below this.
9	Request number confirmation executing	Processing... Please wait.

5. Make sure that the screen displays the Location Information with **SP5816-205** only when it has been input at the Center GUI.
6. Click [EXECUTE] to execute the registration with **SP5816-206**.
7. Check the registration result with **SP5816-207**.

Value	Meaning	Solution/ Workaround
0	Succeeded	-
1	Request number error	Check the request number again.

Value	Meaning	Solution/ Workaround
2	Already registered	Check the registration status.
3	Communication error (proxy enabled)	Check the network condition.
4	Communication error (proxy disabled)	Check the network condition.
5	Proxy error (Illegal user name or password)	Check Proxy user name and password.
8	Other error	See "SP5816-208 Error Codes" below this.
9	Request number confirmation executing	Processing... Please wait.

8. Exit the SP mode.

#### SP5816-208 Error Codes

Cause	Code	Meaning	Solution/ Workaround
Operation Error, Incorrect Setting	-12002	Inquiry, registration attempted without acquiring Request No.	Obtain a Request Number before attempting the Inquiry or Registration.
	-12003	Attempted registration without execution of a confirmation and no previous registration.	Perform Confirmation before attempting the Registration.
	-12004	Attempted setting with illegal entries for certification and ID2.	Check ID2 of the mainframe.
	-12005	@Remote communication is prohibited. The device has an Embedded RC gate-related problem.	Make sure that "Remote Service" in User Tools is set to "Do not prohibit".
	-12006	A confirmation request was made after the confirmation had been already completed.	Execute registration.

Cause	Code	Meaning	Solution/ Workaround
Operation Error, Incorrect Setting	-12007	The request number used at registration was different from the one used at confirmation.	Check Request No.
	-12008	Update certification failed because mainframe was in use.	Check the mainframe condition. If the mainframe is in use, try again later.
	-12009	ID2 mismatch between an individual certification and NVRAM	Write a common certification, and then execute the confirmation request to the @Remote Center.
	-12010	Certification area is not initialized.	Write a common certification after initializing the certification area, and then execute the confirmation request to the @Remote Center.
Error Caused by Response from GW URL	-2385	Other error	
	-2387	Not supported at the Service Center	
	-2389	Database out of service	
	-2390	Program out of service	
	-2391	Two registrations for the same mainframe	Check the registration condition of the mainframe
	-2392	Parameter error	
	-2393	External RCG not managed	
	-2394	Mainframe not managed	
	-2395	Box ID for external RCG is illegal.	
	-2396	Mainframe ID for external RCG is illegal.	
	-2397	Incorrect ID2 format	Check the ID2 of the mainframe.
-2398	Incorrect request number format	Check the Request No.	

## Enabling VM

The following procedure basically should be done by a customer.

1. Press the [User Tools] key on the operation panel.
2. Touch the "Extended Feature Settings" button twice.
3. Touch the "Java TM Platform" line under the Startup Setting tab.
4. Touch the "Extended Feature Info" tab on the LCD.
5. Touch the "Java TM Platform" line.
6. Set "Auto Start" to "On".
7. Touch the "Exit" button.
8. Exit the "User Tools" settings.

## Enabling App2Me

The following procedure basically should be done by a customer.

1. Press the [User Tools] key on the operation panel.
2. Touch the "Extended Feature Settings" button twice.
3. Touch the "App2Me" line under the Startup Setting tab.
4. Touch the "Extended Feature Info" tab on the LCD.
5. Touch the "App2Me" line.
6. Set "Auto Start" to "On".
7. Touch the "Exit" button.
8. Exit the "User Tools" settings.

## Security Function Installation

The machine contains the Security function (Data Overwrite Security and HDD Encryption unit) built into the controller board.

If you are installing a new machine, it is recommended to activate the Data Overwrite Security and HDD Encryption unit by selecting "Format All Data" from "System Settings" on the operation panel.

### Note

- This method is recommended because there is no user data on the hard drive yet (Address Book data, image data, etc.).

If the customer wishes to activate the Data Overwrite Security and HDD Encryption unit on a machine that is already running, it is recommended to activate the unit by selecting "All Data" from "System Settings" on the operation panel.

**★ Important**

- **Selecting "All Data" will preserve the data that has already been saved to the hard drive. (If "Format All Data" is selected, all user data saved to the hard drive up to that point will be erased).**

Immediately after encryption is enabled, the encryption setting process will take several minutes to complete before you can begin using the machine.

**↓ Note**

- If encryption is enabled after data has been stored on the disk, or of the encryption key is changed, this process can take up to three and a half hours or more.

The machine cannot be operated while data is being encrypted.

Once the encryption process begins, it cannot be stopped.

Make sure that the machine's main power is not turned off while the encryption process is in progress.

If the machine's main power is turned off while the encryption process is in progress, the hard disk will be damaged and all data on it will be unusable.

Print encryption key and keep the encryption key (which is printed as a paper sheet).

Keep the encryption key in a safe place. If the encryption key is lost and it need, the controller board, hard disk and NVRAM must all be replaced at the same time.

**↓ Note**

- "NVRAM" mentioned in here means the NVRAM on Controller Board.
- "NVRAM" or EEPROM on BCU has nothing to do with this.

Please use the following procedure when the Data Overwrite Security and HDD Encryption reinstalled.

**Data Overwrite Security**

- **Before You Begin the Procedure**

1. Make sure that the following settings (1) to (3) are not at their factory default values.

(1) Supervisor login password

(2) Administrator login name

(3) Administrator login password

If any of these settings is at a factory default value, tell the customer these settings must be changed before you do the installation procedure.

2. Make sure that "Admin. Authentication" is on.

[System Settings] -> [Administrator Tools] -> [Administrator Authentication Management] -> [Admin. Authentication]

If this setting is off, tell the customer this setting must be on before you do the installation procedure.


3. Make sure that "Administrator Tools" is enabled (selected).

[System Settings] -> [Administrator Tools] -> [Administrator Authentication Management] -> [Available Settings]

If this setting is disabled (not selected), tell the customer this setting must be enabled (selected) before you do the installation procedure.

• **Installation Procedure**

1. Connect the network cable if it needs to be connected.
2. Turn on the main power switch.
3. Go into the SP mode and push "EXECUTE" with SP5-878-001.
4. Exit the SP mode and turn off the operation switch. Then turn off the main power switch.
5. Turn on the machine power.
6. Do SP5-990-005 (SP print mode Diagnostic Report).
7. Go into the User Tools mode, and select [System Settings] → [Administrator Tools] → [Auto Erase Memory Setting] → [On].
8. Exit the User Tools mode.

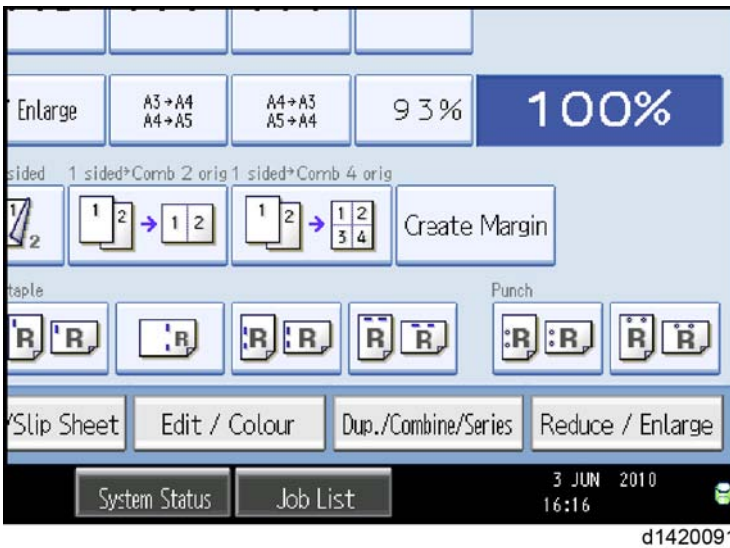

	Dirty	This icon is lit when there is temporary data to be overwritten, and blinks during overwriting.
	Clear	This icon is lit when there is no temporary data to be overwritten.

9. Check the display and make sure that the overwrite erase icon [1] shows.
  10. Check the overwrite erase icon.
- The icon [2] is lit when there is temporary data to be overwritten, and blinks during overwriting.
- The icon [3] is lit when there is no temporary data to be overwritten.

**HDD Encryption**

**Before You Begin the Procedure:**

1. Make sure that the following settings (1) to (3) are not at the factory default settings.

(1) Supervisor login password

(2) Administrator login name

(3) Administrator login password

These settings must be set up by the customer before the HDD Encryption unit can be installed.

2. Confirm that "Admin. Authentication" is on :

[User tools/Counter] key -> [System Settings] -> [Administrator Tools] -> [Administrator Authentication Management] -> [Admin. Authentication] -> [On]

If this setting is off, tell the customer that this setting must be on before you can do the installation procedure.

3. Confirm that "Administrator Tools" is selected and enabled.

[User tools/Counter] key -> [System Settings] -> [Administrator Tools] -> [Administrator Authentication Management] -> [Available Settings]

"Available Settings" is not displayed until step 2 is done.

If this setting is not selected, tell the customer that this setting must be selected before you can do the installation procedure.


**Installation Procedure:**

1. Turn on the main power switch, and then enter the SP mode.
2. Select SP5878-002, and then press "Execute" on the LCD.
3. Exit the SP mode after "Completed" is displayed on the LCD.
4. Turn off the main power switch.

**Enable Encryption Setting:**


1. Press the [User tools/Counter] key.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [Machine Data Encryption Settings]. If this item is not visible, press [Next] to display more settings.



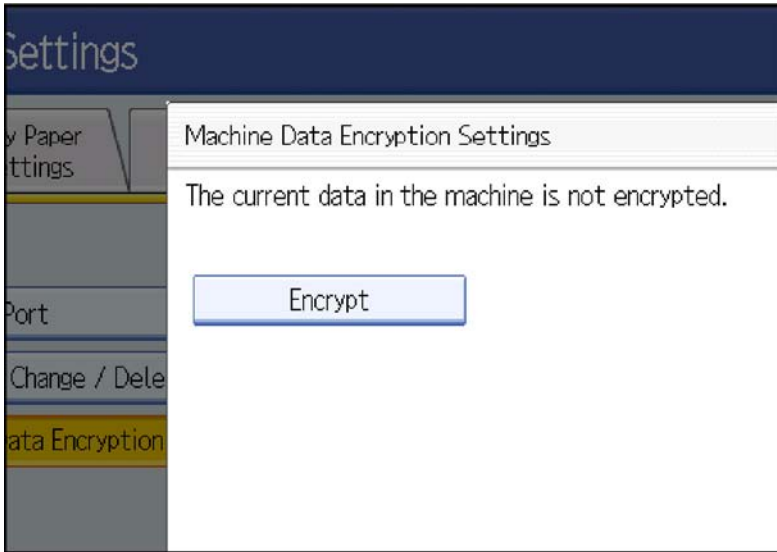

d1420092

5. Press [Encrypt].

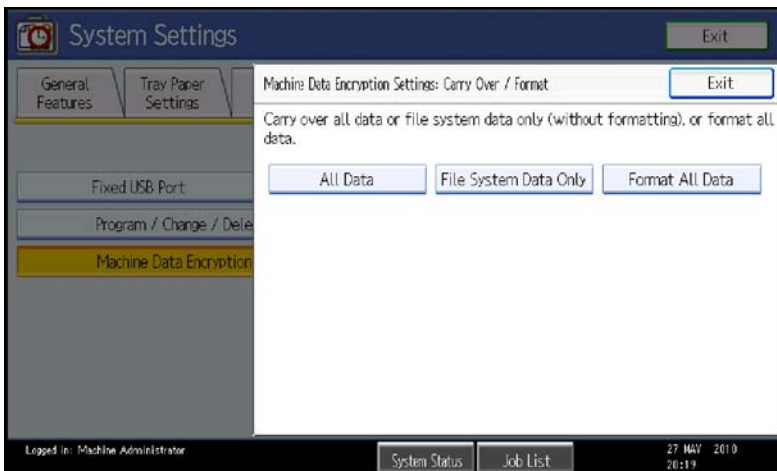

d1420093

6. Select the data to be carried over to the hard disk and not be reset.

To carry all of the data over to the hard disk, select [All Data].


To carry over only the machine settings data, select [File System Data Only].

To reset all of the data, select [Format All Data].




7. Press [Start] key.

The encryption key for backup data is printed.

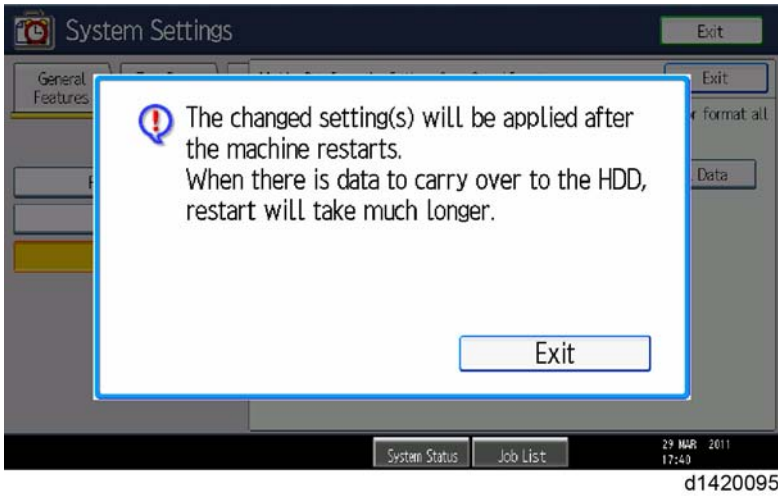

8. Press [Exit].

9. Press [Exit].

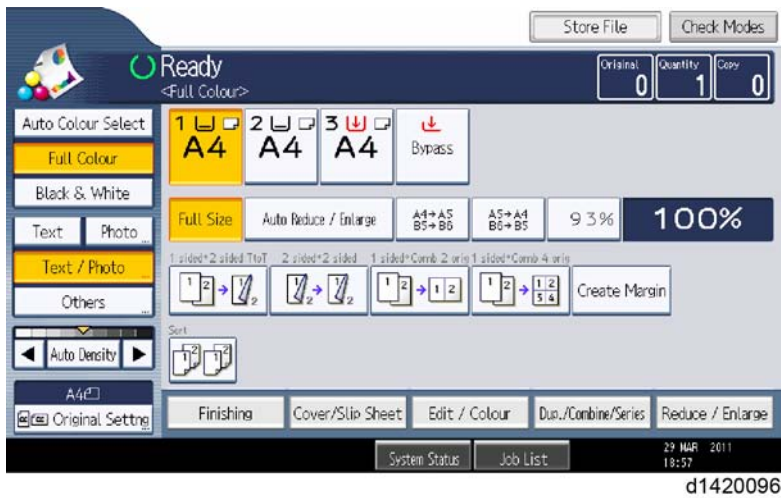


10. Press the [User Tools/Counter] key.


**★ Important**

- After the step 11, turn to the below initial operation display. But, it is not be encrypted.

11. Turn off the power and the main power switch, and then turn the main power switch back.

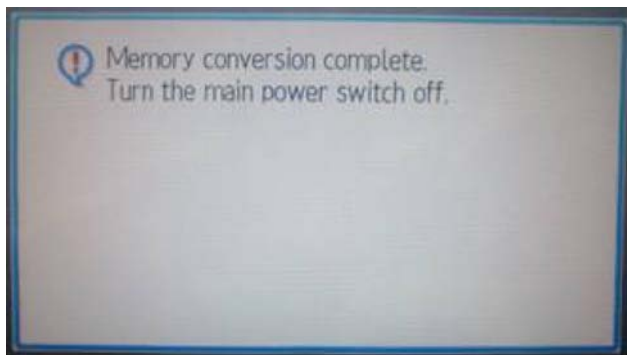


12. Displayed "Memory Conversion complete. Turn the main power switch off" again, turn off the power and the main power switch, and then turn the main power switch back.

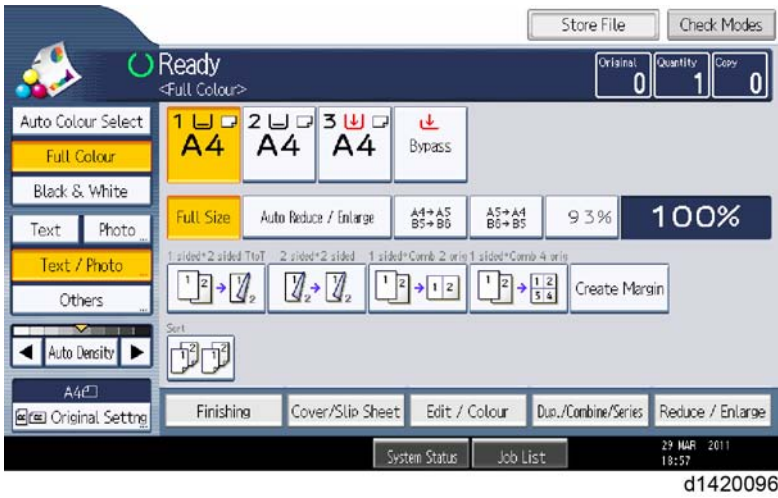


13. Initial display.

**Confirmation Encryption Setting**

1. Press the [User tools/Counter] key.
2. Press the [System Settings].
3. Press the [Administer Tools].

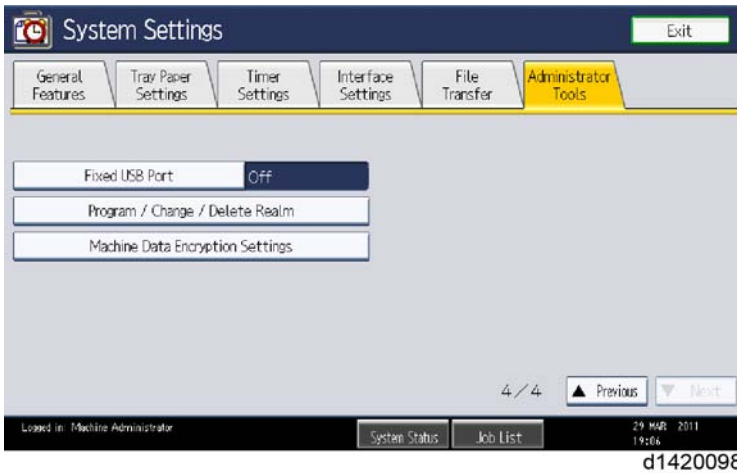

4. Press the [Machine Data Encryption Settings].

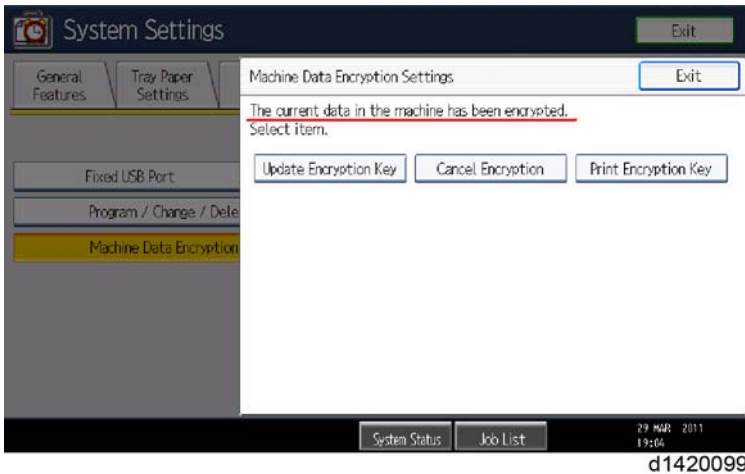

5. Please confirm whether the encryption has been completed or not on this display.

### Print to encryption key

Use the following procedure to print the key again if it has been lost or misplaced.

1. Press the [User tools/Counter] key.
2. Press [System Settings].
3. Press [Administrator Tools].
4. Press [Machine Data Encryption Settings].

If this item is not visible, press [Next] to display more settings.

1. Press [Print Encryption Key].

## Encryption key sample

### Machine Data Encryption Key

This is an encryption key which allows you to protect confidential data stored in the machine.  
It is essential that the safekeeping and destruction of this encryption key be under your direct responsibility.  
Data saved and programmed on the machine (documents, image data, setting values, address book contents etc.) can be encrypted/decrypted with this encryption key. If this machine breaks down, saved and programmed data in the machine can only be restored by entering this encryption key.  
(Please note that it may not be possible to restore data in certain machine breakdown cases.)  
This machine data encryption key will remain valid as long as the encryption is not cancelled or the encryption key is not changed.  
After changing or cancelling the encryption key, please shred this document to destroy confidential data.

Output Date/Time:September 03,2010 08:55:25 AM  
Machine Type:Aficio MP C400SR  
Machine ID:S7500717004  
Machine Data Encryption Key:  
6pFIFFGH#EBIYkPaFBjz6YE\$wYXk

d1420100

Encryption key is printed out as a sheet of paper like the sample shown above.

Please instruct the customer to keep it in a safe place.

---

## External USB Keyboard (External Option)

---


Customers can use an external USB keyboard when the software keyboard is shown on the operation panel, if an external USB keyboard is connected to the USB port at the side of the operation panel or the controller box USB port.

If customers would like to use an external USB keyboard, execute the following steps to enable this feature.

1. Connect the external keyboard to the USB port at the right side of the operation panel or the controller box USB port.


**Note**

- The external keyboard that is available in this machine is principally for the Windows OS. However, no compatibility check is done, and there is no warranty.

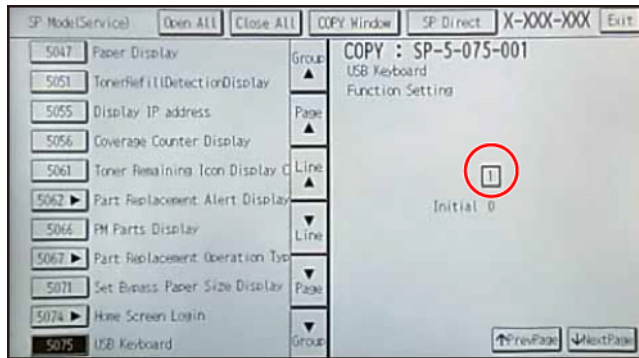

d1440139

2. Enter the SP mode and set SP5075-001 to ON (1) (USB keyboard).
3. Exit the SP mode and turn the main power off and on.

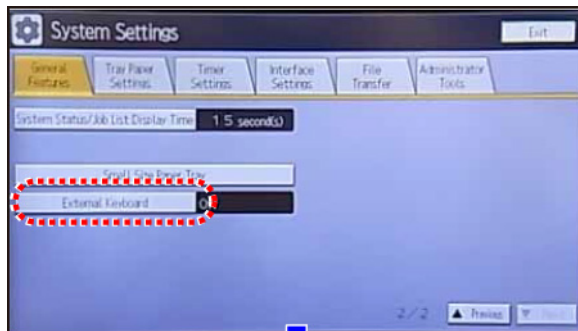

d1440140

4. Select a language type for the external USB keyboard with [User Tools] → [System Settings] → [General Features] → [External Keyboard].
5. Press [OK] to set it.
6. Turn the main power off and on.

---

## Moving the Machine

---

This section shows you how to manually move the machine from one floor to another floor. See the section "Transporting the Machine" if you have to pack the machine and move it a longer distance.

- Remove all trays from the optional paper feed unit or LCT.
- Remove peripherals physically attached to the main machine: Paper feed unit, LCT and finisher.
- Attach the caster stands for the paper feed unit or LCT if these have been removed before moving the machine.

---

## Transporting the Machine

---

### Main Frame

1. Do SP 4806-001 to move the scanner carriage from the home position. This prevents dust from falling into the machine during transportation.
2. Remove the toner cartridges. This prevents toner flow into the toner supply tube, which is caused by vibration during transport. This can also cause the tube to be clogged with toner.
3. Make sure there is no paper left in the paper trays. Then fix down the bottom plates with a sheet of paper and tape.
4. Empty the toner collection bottle. Then attach securing tape to stop the toner bottle from coming out.
5. Take out the scanner stay from inside the front door and install the scanner stay.
6. Do one of the following:
  - Attach shipping tape to the covers and doors.
  - Shrink-wrap the machine tightly.

### ↓ Note

- After you move the machine, make sure you do the "Auto Color Registration" as follows. This optimizes color registration.
- 1. Do the "Forced Line Position Adj. Mode c" (SP2-1111-3).
- 2. Then do the "Forced Line Position Adj. Mode a" (SP2-1111-1).  
To check if SP 2-1111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.
- Make sure that the side fences in the trays are correctly positioned to prevent color registration errors.




# Paper Feed Unit Installation (D580)

## Accessory Check

Check the quantity and condition of the accessories against the following list.


No.	Description	Q'ty
1	Screw (M4x10)	2
2	Screw with Spring Washer (M4 x 10)	1
3	Securing Bracket	2

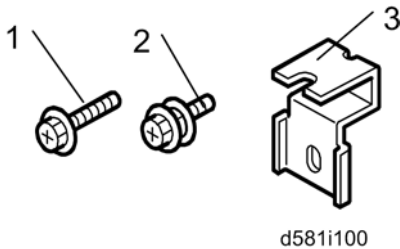

## Installation Procedure


### **⚠ CAUTION**

- Unplug the machine power cord before starting the following procedure.
- The handles of the main machine for lifting must be inserted inside the machine and locked unless these handles are used for the installation or relocation of the main machine.
- You need two or more persons to lift the copier. The copier is highly unstable when lifted by one person, and may cause human injury or property damage.

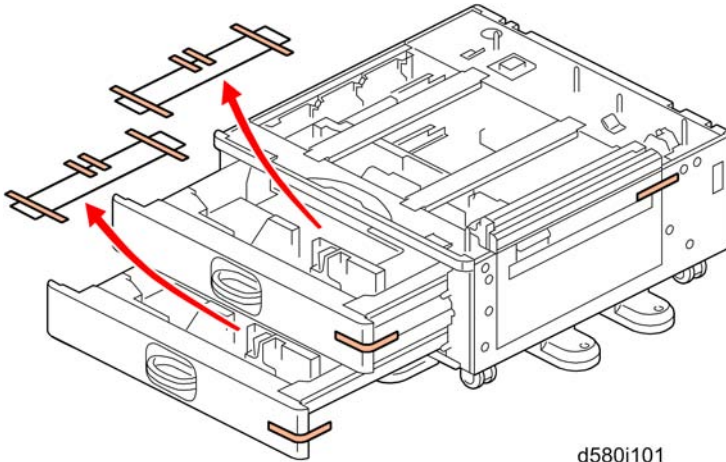

d580i101

1. Remove all tape on the paper feed unit.
2. Remove the paper trays and remove all tape and padding.

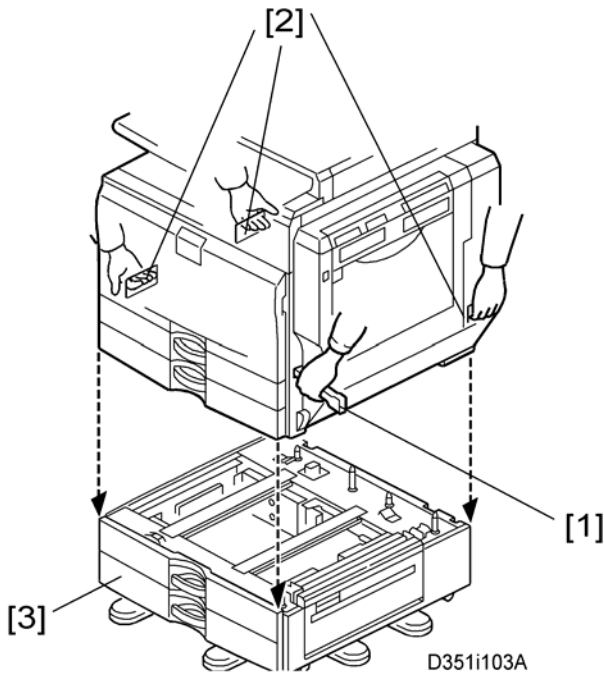

D351i103A


3. Pull out the handle [1], then hold the handle and grips [2].
4. Lift the copier and install it on the paper feed unit [3].


**★ Important**


- You need two or more persons to lift the copier.


↓ **Note**


- Hold the handle and grips of the machine when you lift and move the machine.

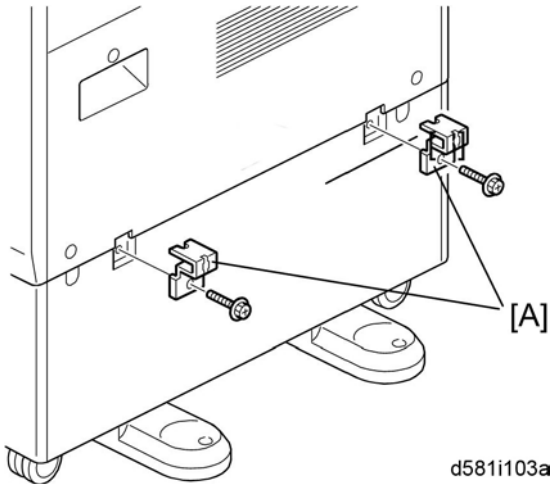

5. Attach a securing bracket [A] to each side of the paper tray unit, as shown (  x 1; M4 x 10 each).

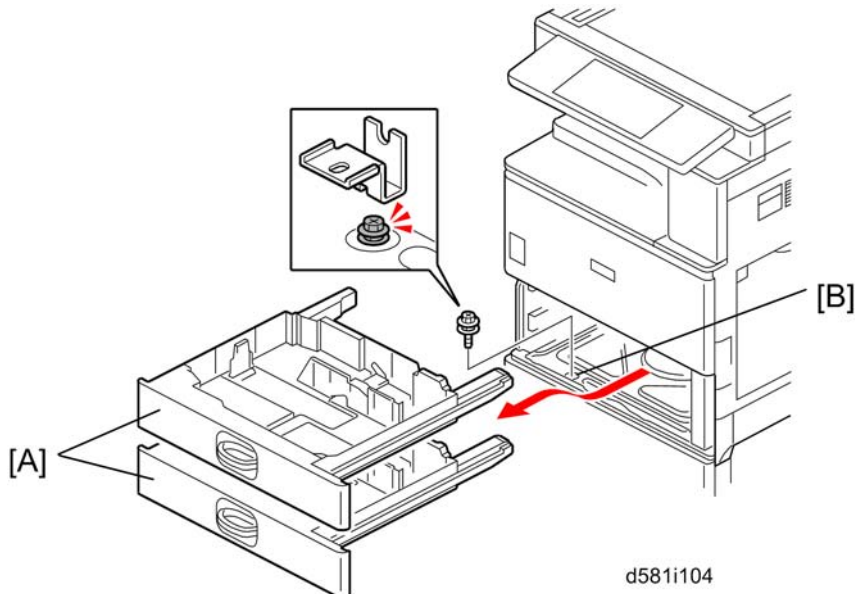

6. Remove trays 1 and 2 of the machine [A].
7. Fasten the paper tray unit at [B] (  spring washer x 1; M4 x 10).
8. Reinstall all the trays.

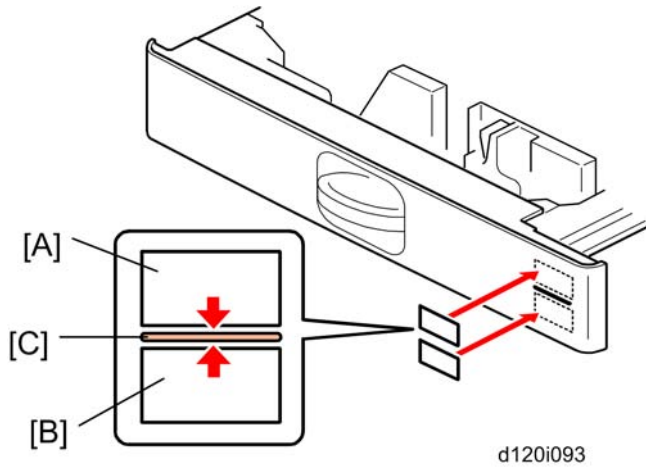


9. Attach the appropriate paper tray number decal [A] and paper size decal [B] to the line [C] on each tray of the paper feed unit.

**Note**

- The paper tray number and size sheet is in the accessory box of the main machine.

10. Lock the caster stoppers for the front two casters under the paper feed unit.
11. Load paper into the paper trays and set the side fences and bottom fence.

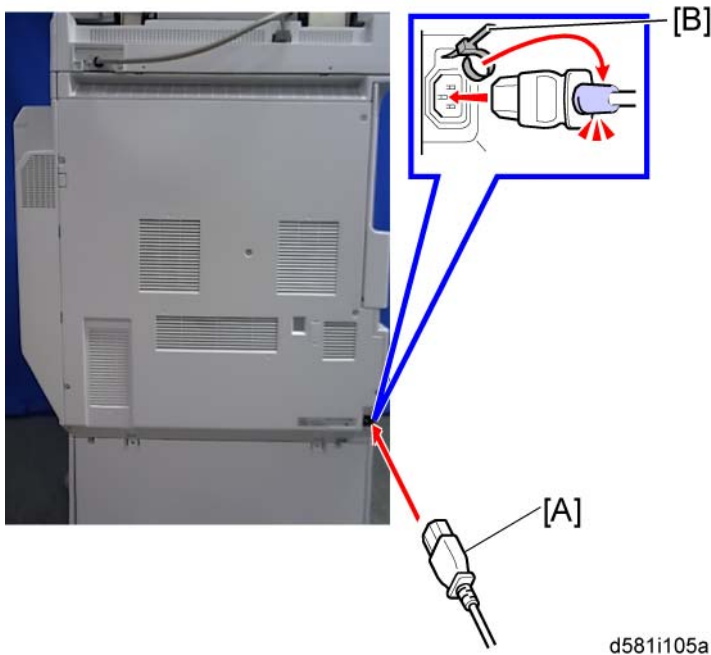

12. Connect the power cord [A] to the inlet of the main machine.

13. Secure the power cord with the clamp [B] on the main machine so that the power cord is never disconnected.


# Envelope Feeder EF3020 (D638)

## Accessory Check

Check the quantity and condition of the accessories against the following list.

2

No.	Description	Q'ty
1	Envelope feeder	1
2	Paper size decal	1

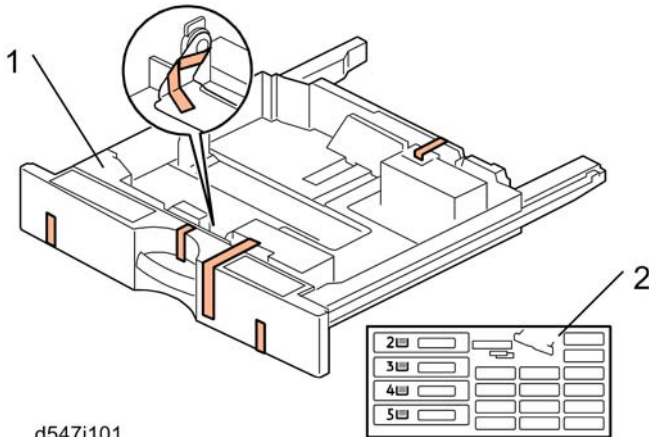


d547i101


## Installation Procedure

### ↓ Note

- This tray can be installed in tray 2 of the copier, or tray 3 or tray 4 of the paper feed unit (D580).
  - There is no automatic paper size detection in the envelope feeder (D638). Adjust the paper size for the tray where the envelope feeder is to be installed with User Tools.
1. Remove all tape from the envelope feeder.

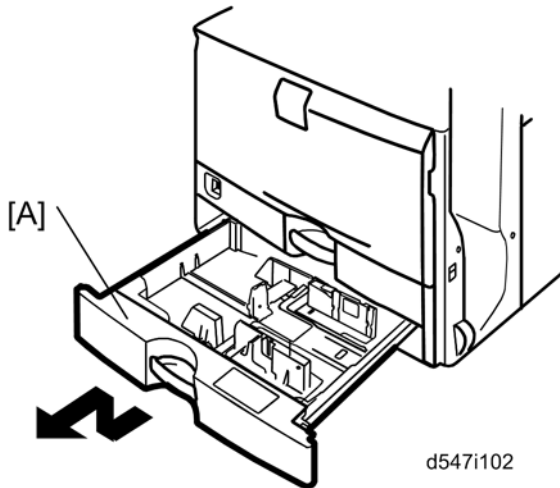

2. Pull out tray 2 [A] from the main machine.

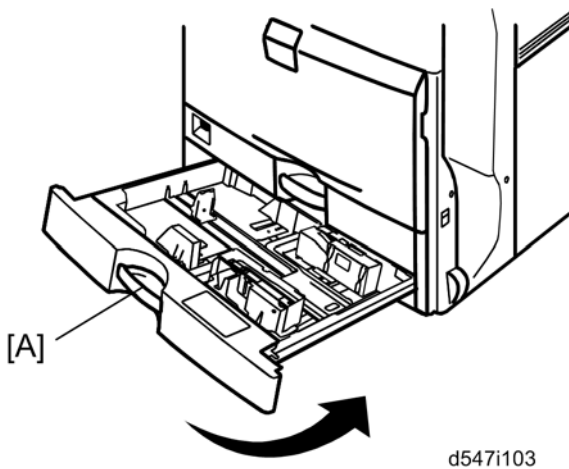


3. Install the envelope feeder [A] into tray 2 of the main machine.
4. Press the "User/Tools" key on the operation panel.
5. Enter "Small Paper Size Tray" under "General Features".
  - Initial Settings → General Features → Small Paper Size Tray
6. Select "On" for the tray where the envelope feeder is installed.
7. Turn the main machine off and on.

# LCIT PB3140 (D581)

## Accessory Check

Check the quantity and condition of the accessories against the following list.

No.	Description	Q'ty
1	Screw - M4 x 10	2
2	Screw with Spring Washer-M4 x 10	1
3	Securing Bracket	2

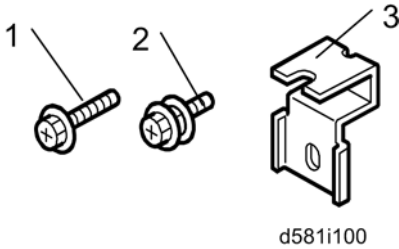


## Installation Procedure

### **⚠ CAUTION**


- Unplug the machine power cord before starting the following procedure.
- The handles of the main machine for lifting must be inserted inside the machine and locked, unless these handles are used for the installation or relocation of the main machine.
- You need two or more persons to lift the copier. The copier is highly unstable when lifted by one person, and may cause human injury or property damage.



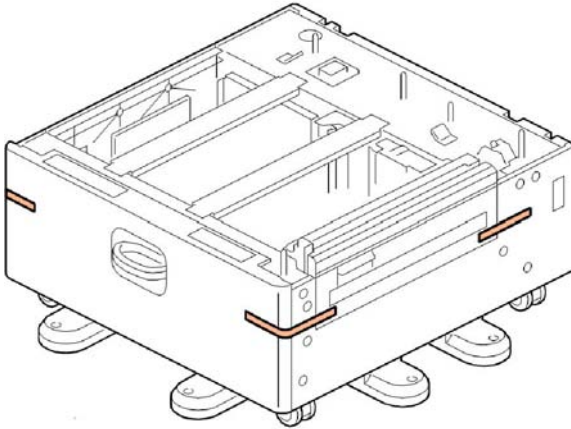

d581i101a

1. Remove the strips of tape.

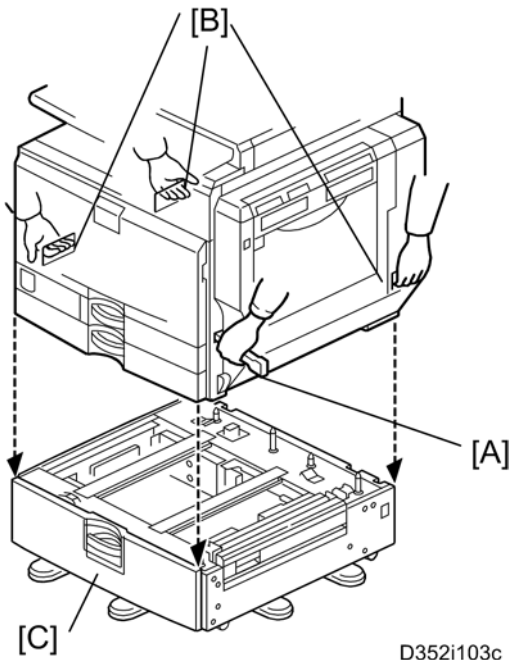

D352i103c


2. Grasp the handle [A] and grips [B] of the machine.
3. Lift the copier and install it on the LCT [C].


**★ Important**


- The copier should be lifted by two persons or more.

**↓ Note**

- Hold the handle [A] and grips [B] of the machine when you lift and move the machine.

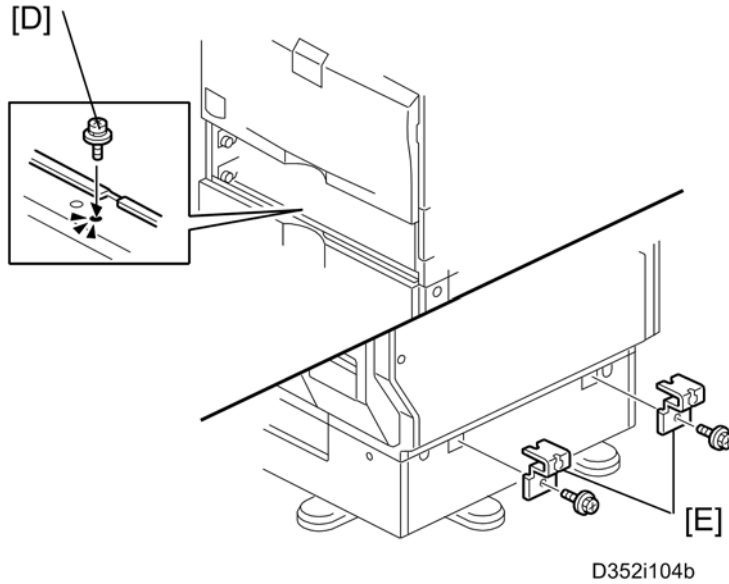


4. Remove trays 1 and 2 of the machine.
5. Fasten the spring washer screw [D].
6. Reinstall all trays.
7. Attach the securing brackets [E] (  x 1 each; M4x10).

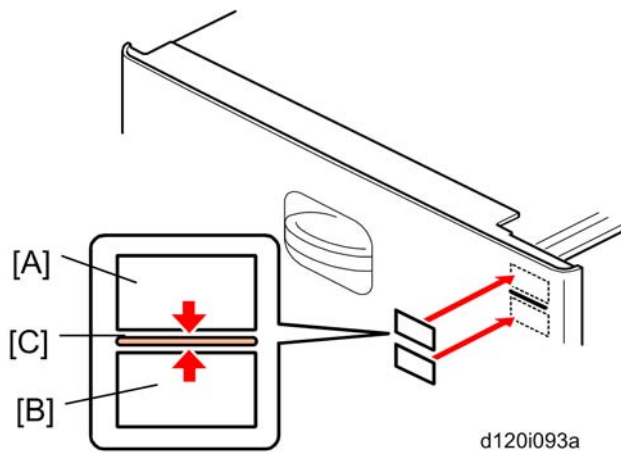

8. Attach the appropriate paper tray number decal [A] and paper size decal [B] to the line [C] on the tray of the LCT.

 **Note**

- The paper tray number and size sheet is in the accessory box of the main machine.
9. Lock the caster stoppers for the front two casters under the paper feed unit.
  10. Load paper into the LCT

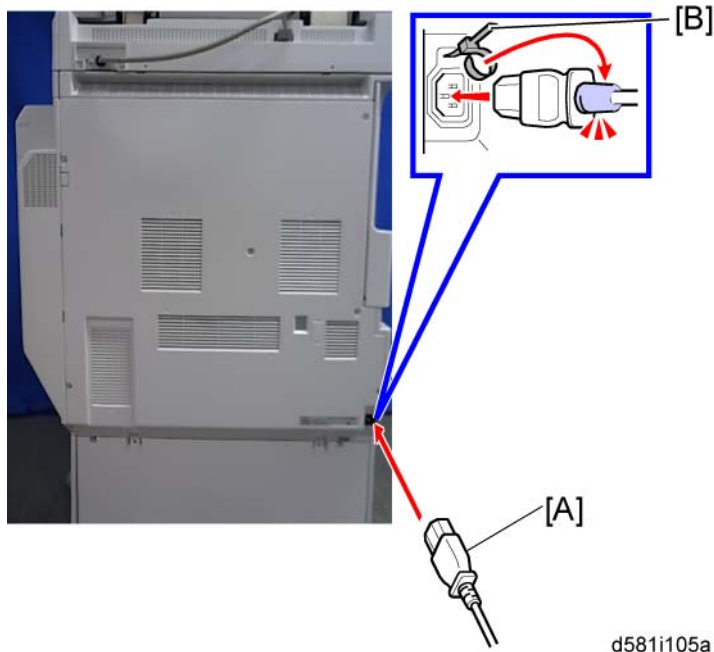

d581i105a

11. Connect the power cord [A] to the inlet of the main machine.
12. Secure the power cord with the clamp [B] on the main machine so that the power cord is never disconnected.

## SP Settings

1. Connect the copier and turn the main machine on.
2. Do SP5-181-010 to set automatic paper size detection for the LCT paper tray.

### LCT Paper Tray (Size Adjust Tray 3 / LCT)

5-181-010	A4/LEF/LT/LEF	[0 to 1 / 0 / 1] 0: ISO (A3, A4, A5, etc.) 1: USA (DLT, LT, EXE, etc.)
-----------	---------------	--

3. Exit SP mode.
4. Do some test copies to make sure that the machine operates correctly.


# 1200 LCT Installation (D631)

## Component Check

Check the quantity and condition of the components against the following list.

2

No.	Description	Q'ty
1	Front Bracket	1
2	Rear Bracket	1
3	Stud Screw	4
4	Joint Pin	2
5	LCT	1

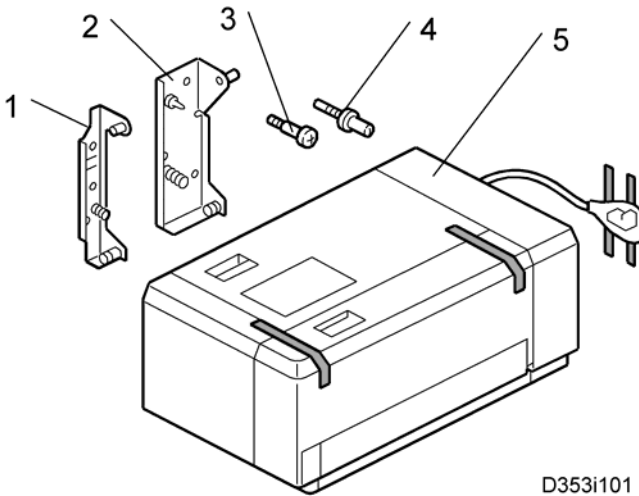


## Installation Procedure

### **⚠ CAUTION**


- Unplug the main machine power cord before starting the following procedure.

**Note**


- The Paper Tray Unit (D580) or LCT 2000-sheet (D581) must be installed before installing this 1200-sheet LCT.

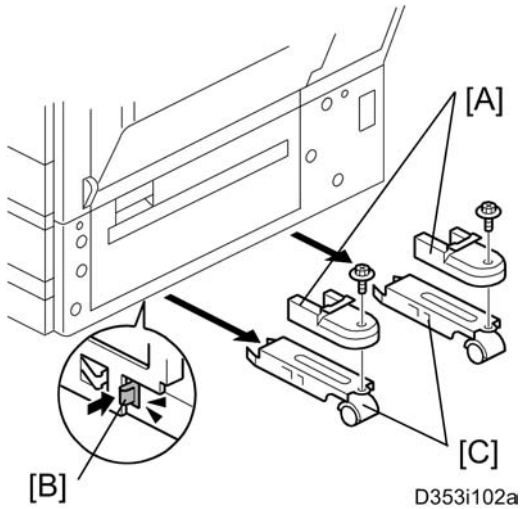

1. Unpack the LCT and remove the tapes.
2. Remove the stand covers [A].
3. Release the locks [B] of the front and rear caster stands.
4. Remove the caster stands [C].

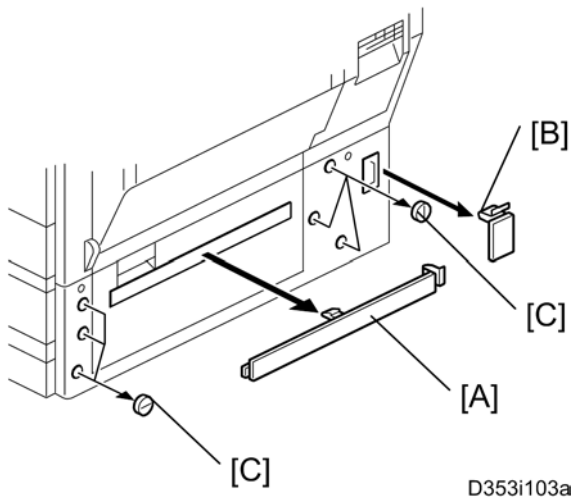


5. Remove the paper path cover [A], connector cover [B] and six hole covers [C].

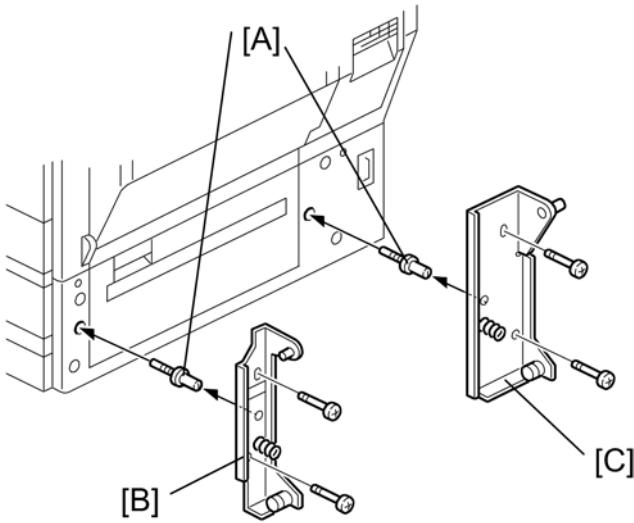

D353i104a

6. Insert the joint pins [A].
7. Attach the front [B] and rear brackets [C]. (⚙️ x 2 each)

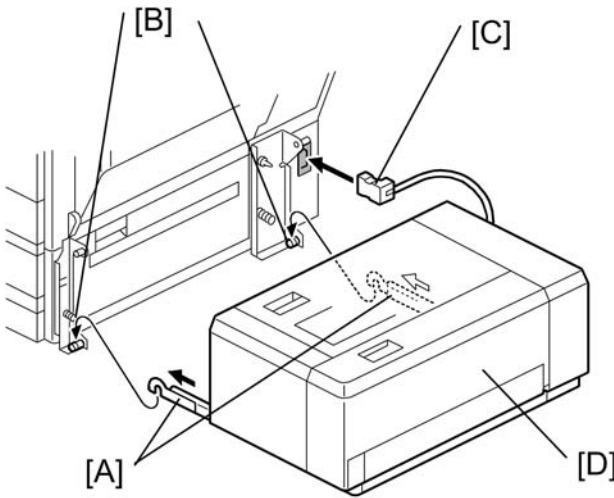



D353i105a


8. Pull out the front and rear rails [A], and then hang them on each bracket [B].
9. Connect the LCT cable [C] to the main machine.
10. Slide the LCT [D] into the main machine.
11. Make sure that the front and rear sides of the LCT are closely attached to the main machine.


## Side Fence Position Change

1. Open the right door of the LCT.
2. Push the down switch to lower the tray bottom plate until it reaches its lowest position.

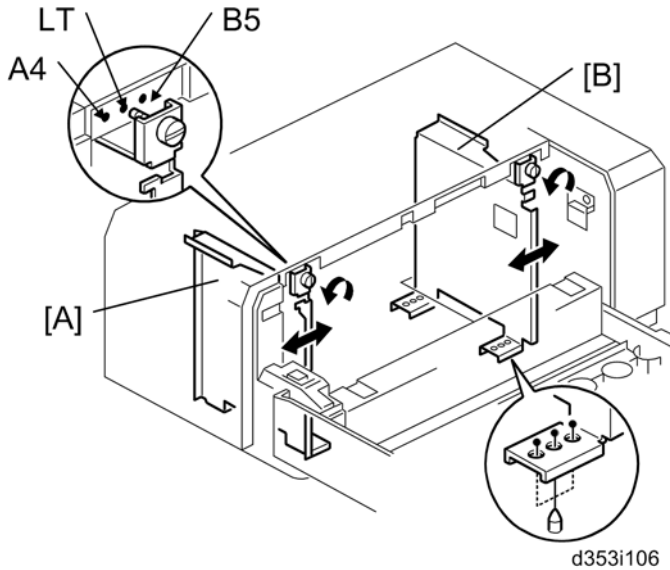

3. Remove the front and rear side fences [A, B] (  x 1 each).
4. Install the side fences in the correct position (A4 LEF/ LT LEF/ B5 LEF).

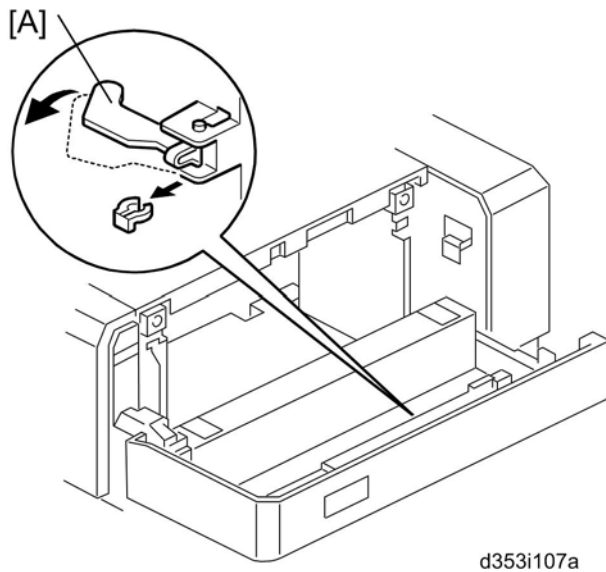

5. Pull the end fence [A] for B5 size paper as shown (  x 1) if the side fences are adjusted for B5 size paper.

6. Close the right door.
7. Turn on the main power switch, and then go into the SP mode.
8. Input the correct paper size for the 1200-sheet LCT with SP5181-018.




# ARDF Installation (D630)

## Component Check

Check the quantity and condition of the accessories against the following list.

No.	Description	Q'ty
1	ARDF	1
2	Attention Decal Sheet – Top Cover	1
3	Stamp	1
4	Knob Screw	2
5	Stud Screw	2
6	Platen Sheet	1

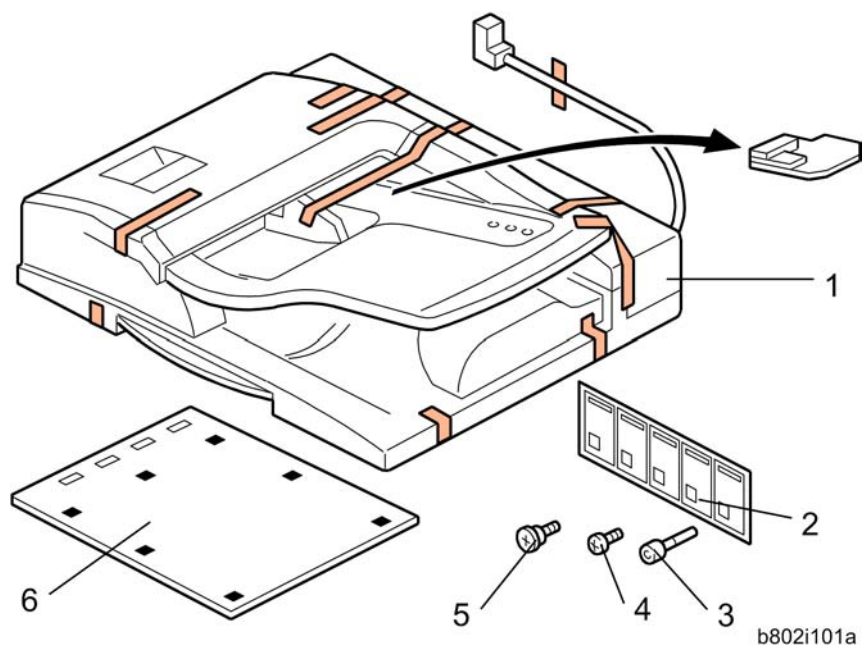


## Installation Procedure


### ⚠ CAUTION

- Unplug the copier power cord before starting the following procedure.

1. Remove all tapes and shipping retainers.

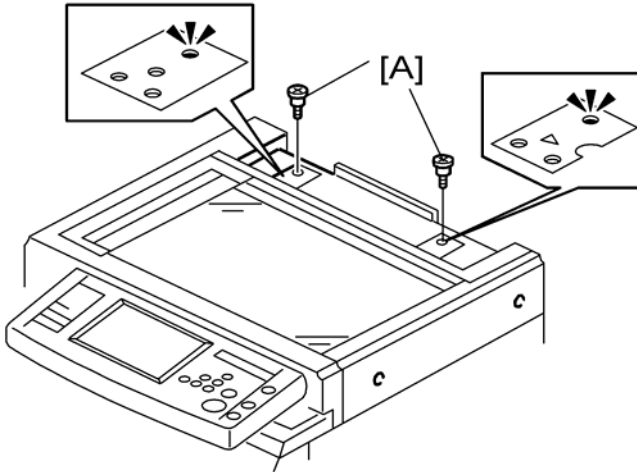


2. Insert the two stud screws [A] on the top of the machine.

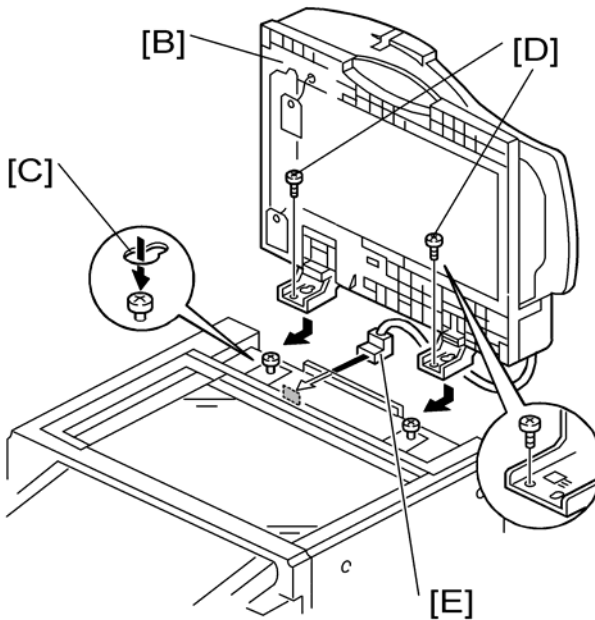


3. Mount the ARDF [B] by aligning the screw keyholes [C] of the ARDF support plate over the stud screws.


4. Slide the ARDF toward the front of the machine.
5. Secure the ARDF with the two knob screws [D].
6. Connect the I/F cable [E] to the machine.

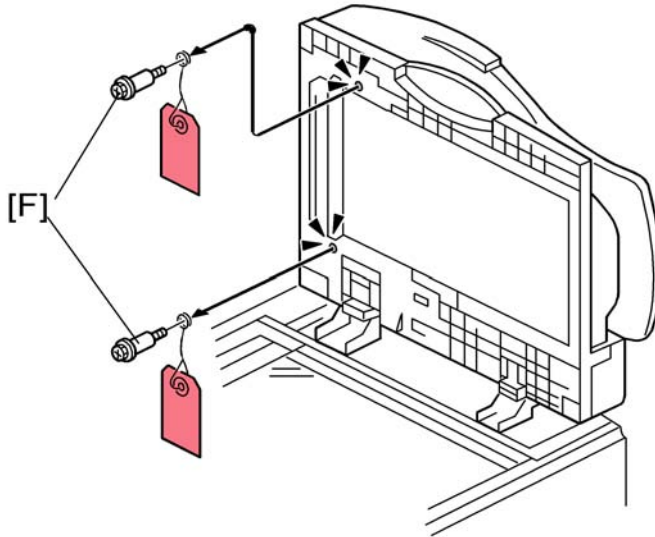


7. Remove two screws [F] from the bottom of the ARDF.
8. Remove all tapes on the ARDF.

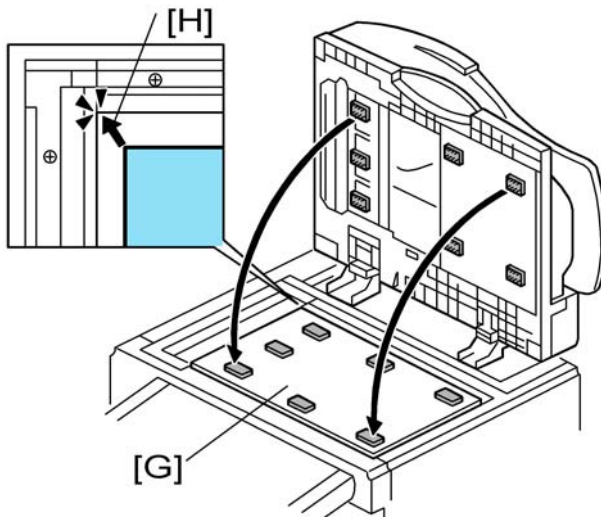

9. Place the platen sheet [G] on the exposure glass.
10. Align the rear left corner (of the platen sheet) with the corner [H] on the exposure glass.
11. Close the ARDF.
12. Open the ARDF and check that the platen sheet is correctly attached.

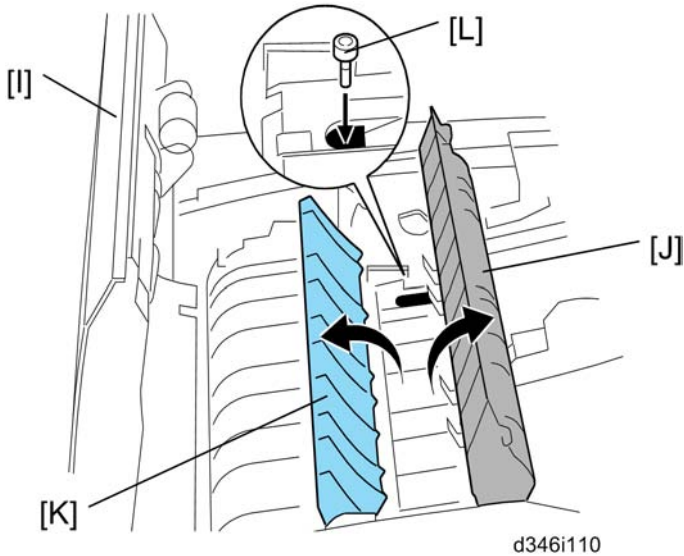

13. Open the ARDF cover [I].
14. Open the feed-in guide plate [J] and feed-out guide plate [K].
15. Install the stamp [L] into the ARDF.
16. Close two guide plates [K] [J].
17. Close the ARDF cover [I].

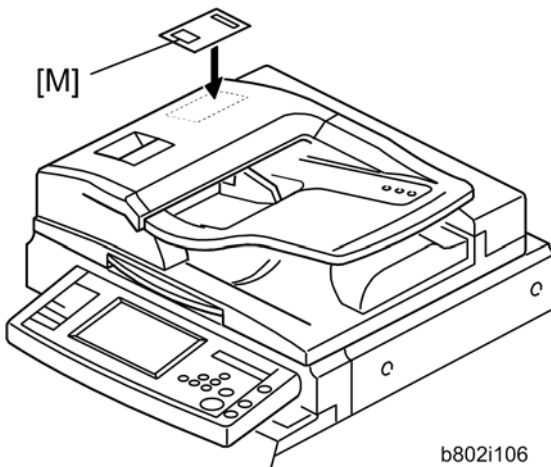


18. Attach the decal [M] to the top cover as shown. Choose the language you want.
19. Plug in and turn on the main power switch of the machine, and then check the ARDF operation.
20. Make a full size copy. Check that the registrations (side-to-side and leading edge) and image skew are correct. If they are not, adjust the registrations and image skew, referring to "Copy Adjustments" in the "Replacements and Adjustments" section.

# 1-Bin Tray Unit Installation (D632)

## Component Check

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	1 Bin Tray Unit	1
2	End-fence	1
3	Tray Support Bar	1
4	Screws (M3 x 16)	2
5	Screws (M3 x 8)	1
6	Harness Cover	1
7	Tray	1

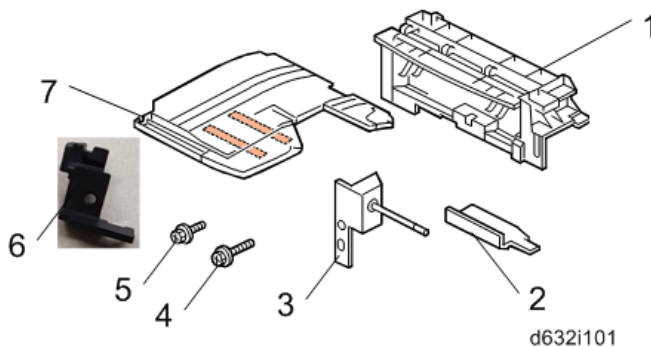


## Installation Procedure



### ⚠ CAUTION

- Unplug the copier power cord before starting the following procedure.

If the bridge unit (D634) or side tray (D635) has already been installed in the machine, remove it before installing 1 bin tray unit (D632). This will make it easier for you to do the following procedure.

 1. Remove all tapes.
2. Open the right door of the machine.

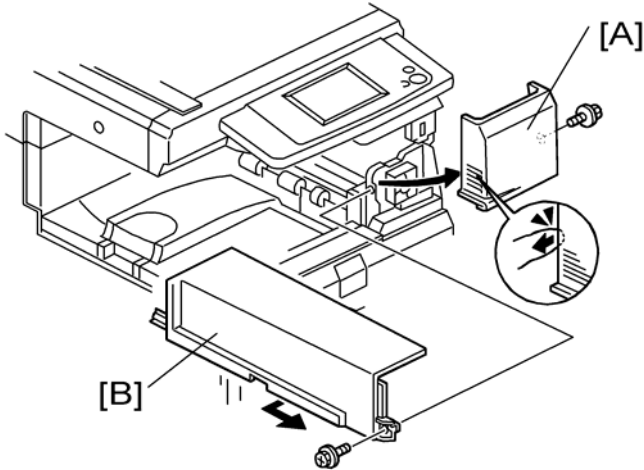


3. Remove the front right cover [A] (  x 1).
4. Remove the inner cover [B] (  x 1).

**Note**

- Keep this screw for step 5




5. Install the 1 bin tray unit [3] (  x 1,  x 1 [This screw was removed in step 4]).

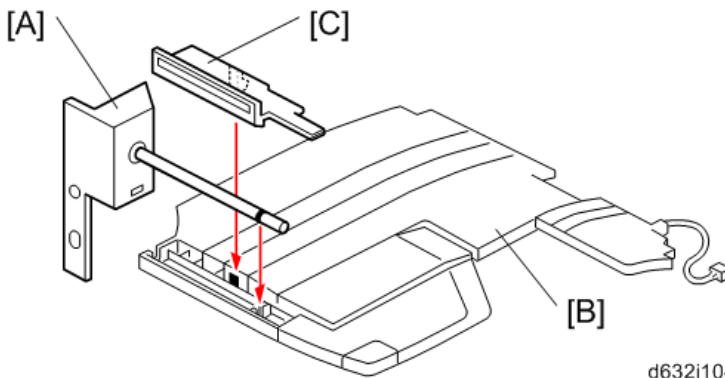




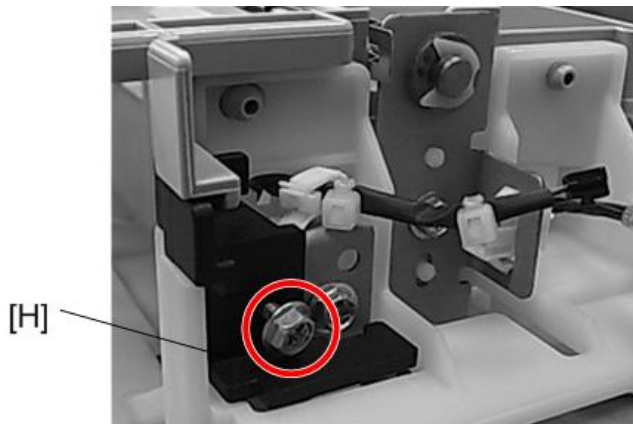
d632i104

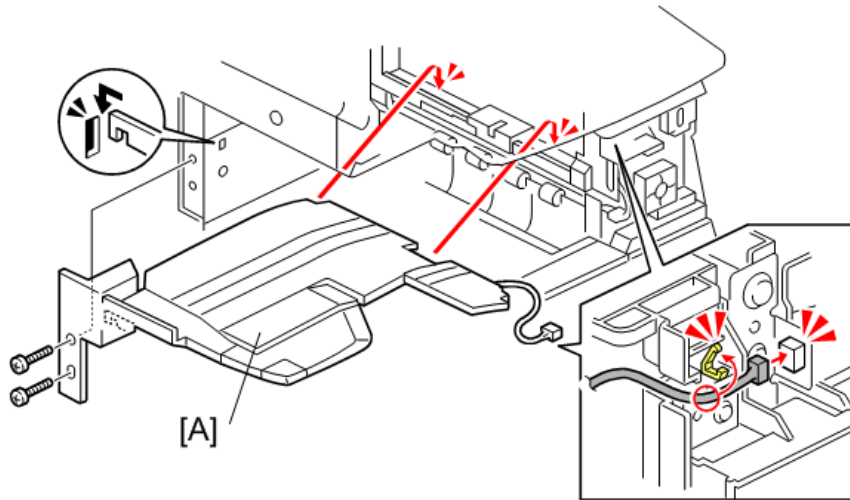6. Attach the tray support bar [A] to the tray [B] as shown, and then attach the end-fence [C].




d632i105

7. Install the tray [A] with the tray support bar in the machine (  x 2; M3 x 16).
8. Connect the harness to the connector of the 1-bin tray unit (  x 1,  x 1).



d632i106


9. Attach the harness cover [H] (  x 1; M3 x 8).
10. Reinstall the front right cover on the machine, and then close the right door of the machine.
11. Turn on the main power switch of the machine.
12. Check the 1-bin tray unit operation.

# Internal Shift Tray (D633)

## Component Check

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty	For this model
1	Shift Tray Unit	1	Yes
2	Connector Cover	1	Yes
3	Paper Guide - Small	1	Yes

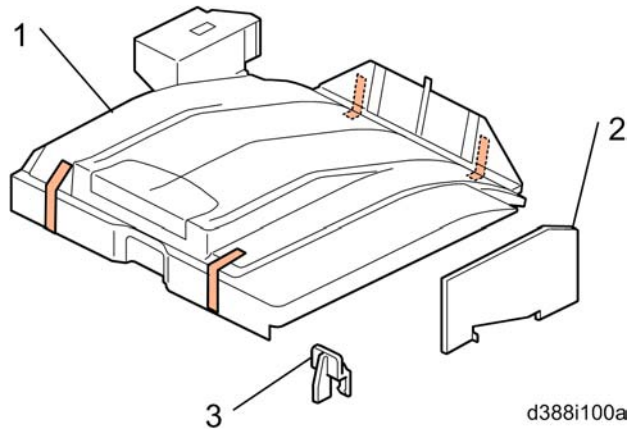


## Installation Procedure


### **⚠ CAUTION**


- Unplug the copier power cord before starting the following procedure.

1. Remove all tapes.




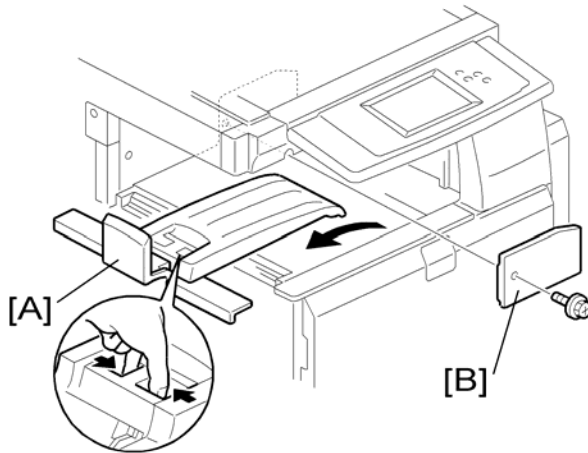

2. Remove the inner tray [A].
3. Remove the connector cover [B] (  x 1 ).

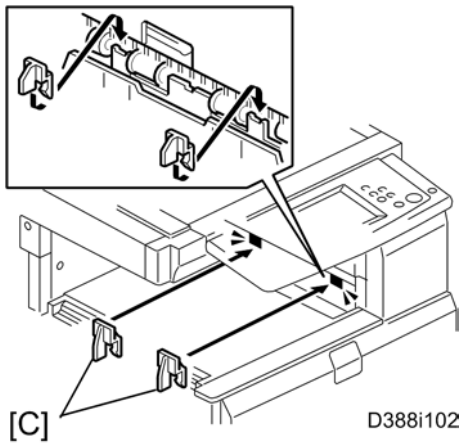

4. Install two small paper guides [C].

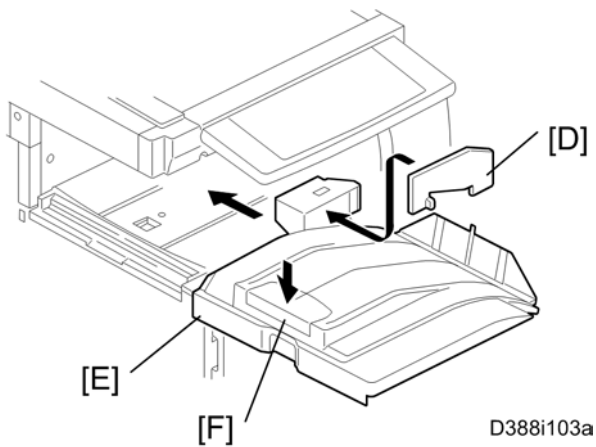


5. Attach the connector cover [D] to the shift tray unit [E].
6. Install the shift tray unit [E] on the machine.
7. Push down the left edge part [F] of the shift tray.
8. Turn on the main power switch of the machine.
9. Check the shift tray unit operation.

# Side Tray (D635)

## Component Check

Check the quantity and condition of the accessories against the following list.

No.	Description	Q'ty
1	Side Tray Unit	1
2	Sub Output Tray	1
3	Main Output Tray	1
4	Screw	1
5	Knob screw	1
6	Frame Cover	1
7	Guide	2
8	Holder bracket	1

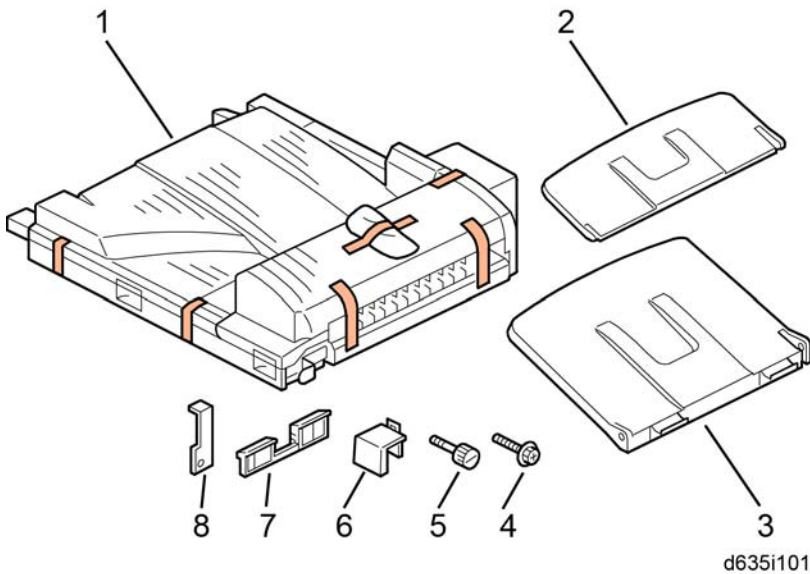


## Installation Procedure

### ⚠ CAUTION


- Turn off the main switch of the copier and unplug the power cord before you start the installation procedure.

### ↓ Note


- If you will install the 1-bin tray (D632) on the machine, install the 1-bin tray first before installing the side tray (D635). This makes it easier to do the following procedure.

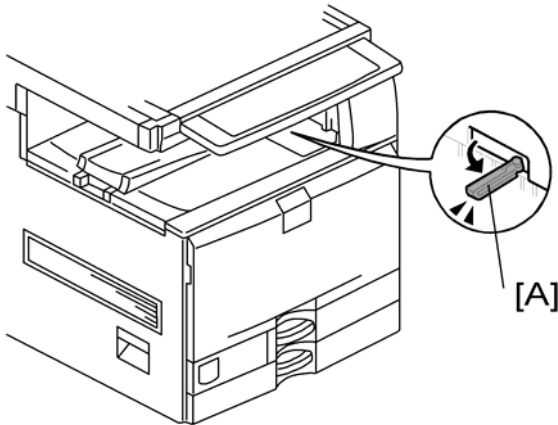


1. Remove all tapes.
2. If the sensor feeler [A] is out, fold it into the machine.
3. Open the right door of the machine.

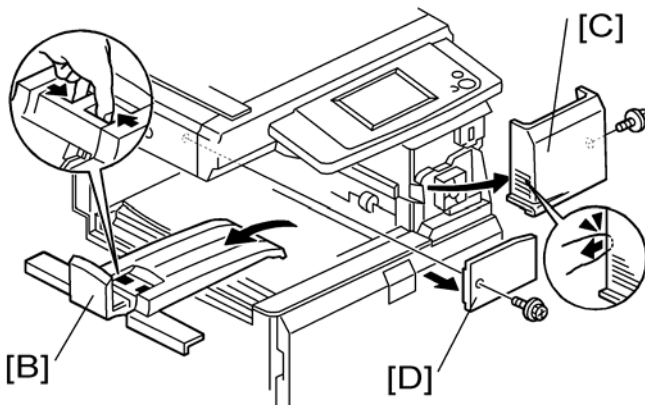


4. Remove the upper inner tray [B].
5. Remove the front right cover [C] (⚙ x 1).
6. Remove the connector cover [D] (⚙ x 1).

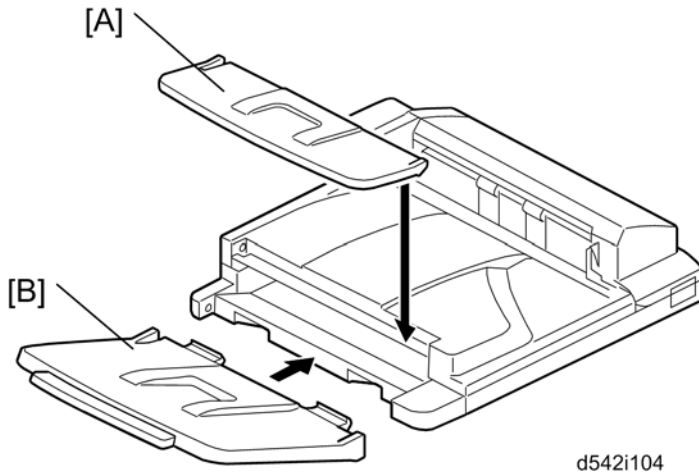

7. Attach the main output tray [A] and sub output tray [B] to the side tray unit.

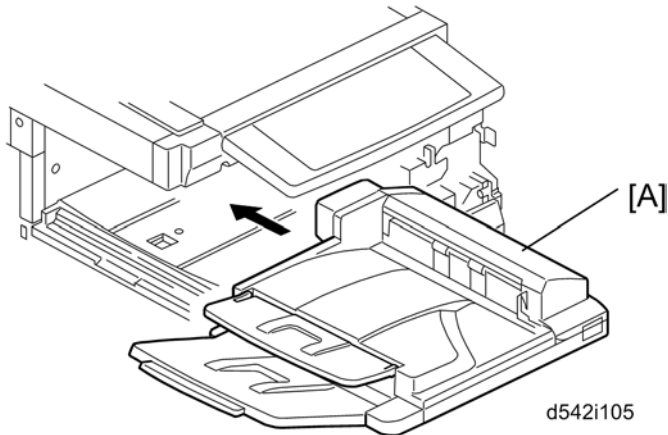


8. Install the side tray unit [A] in the machine.

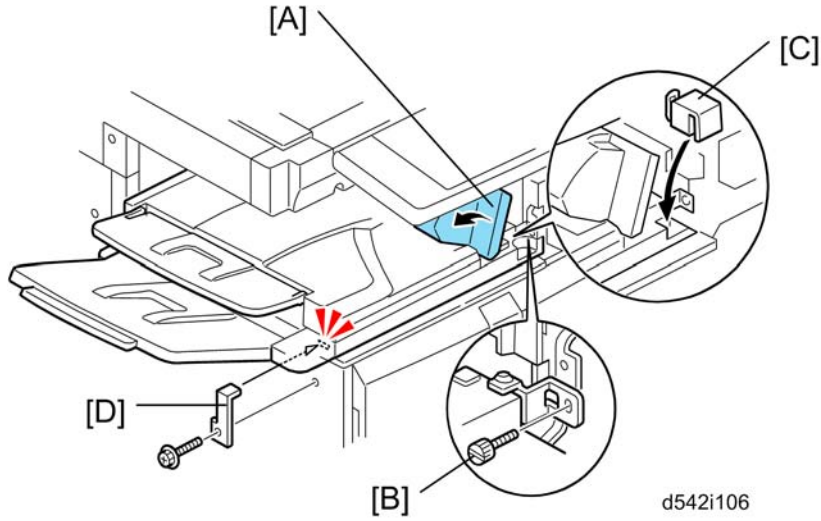

9. Open the side tray cover [A].
10. Secure the side tray unit with the knob screw [B].
11. Attach the frame cover [C].
12. Reinstall the front right cover to the machine, and then close the right door of the machine.

**Note**

- Open the side tray cover [A] when installing the front right cover. Otherwise, it cannot be reinstalled.


13. Install the holder bracket [D] (  x 1 )
14. Turn on the main power switch of the machine.
15. Check the side tray operation.

# Bridge Unit Installation (D634)

## Component Check

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	Bridge Unit	1
2	Frame Cover	1
3	Knob screw	1
4	Long Knob Screw	1
5	Holder bracket	1
6	Guide	2

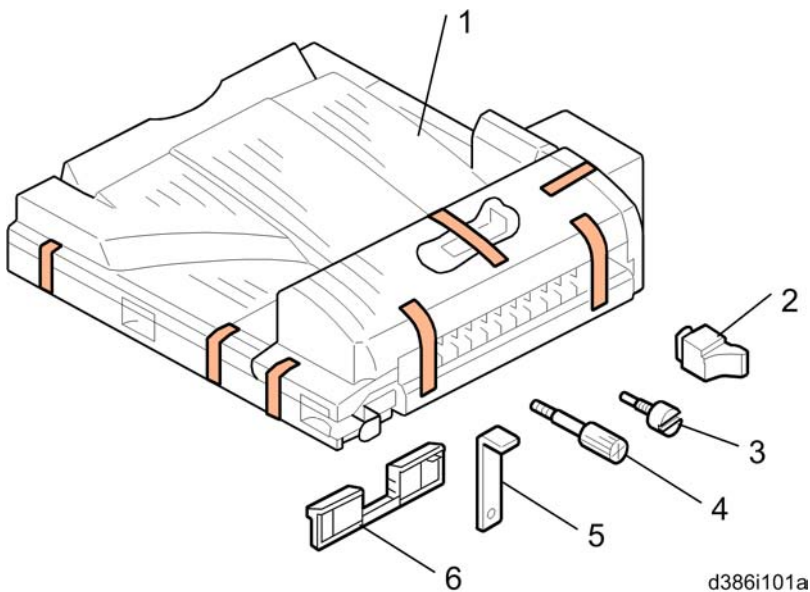

## Installation Procedure


### **⚠ CAUTION**

- Unplug the copier power cord before starting the following procedure.


**Note**



- If you will install the 1-bin tray (D632) on the machine, install the 1-bin tray first before installing the bridge unit (D634). This makes it easy to do the following procedure.
- If you will install a finisher unit (D588, D636 or D637) on the machine, install it after installing the bridge unit (D634).

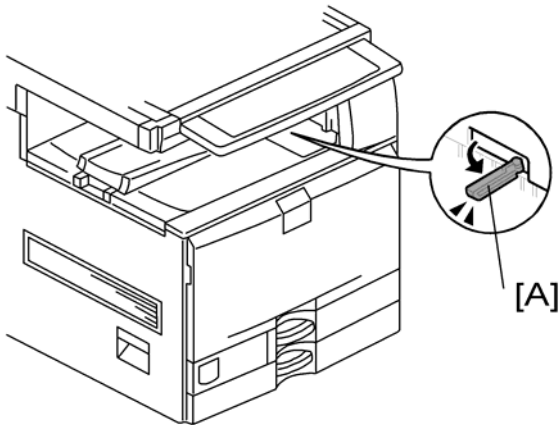2

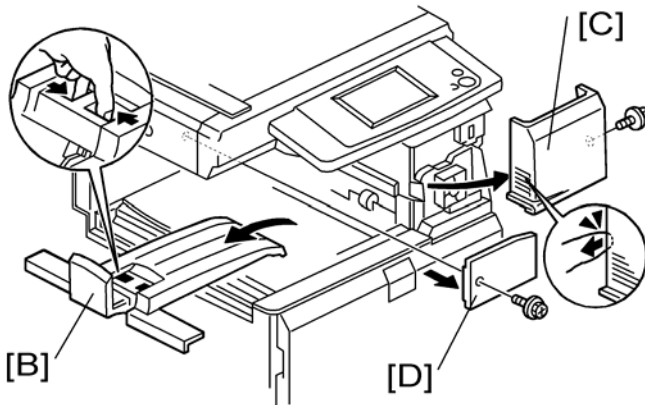


1. Remove all tapes.
2. If the sensor feeler [A] is out, fold it into the machine.
3. Open the right door of the machine.




4. Remove the upper inner tray [B].
5. Remove the front right cover [C] (  x 1).
6. Remove the connector cover [D] (  x 1).



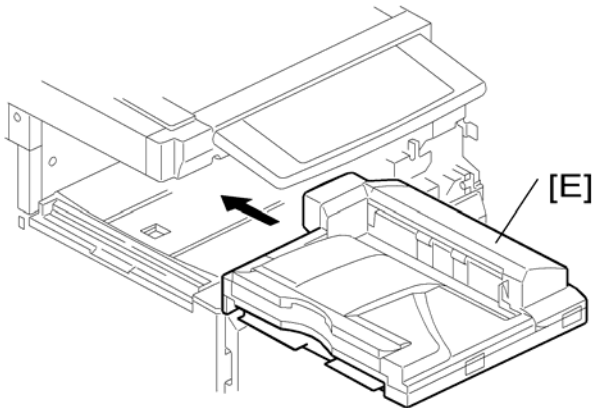

7. Install the bridge unit [E] in the machine.

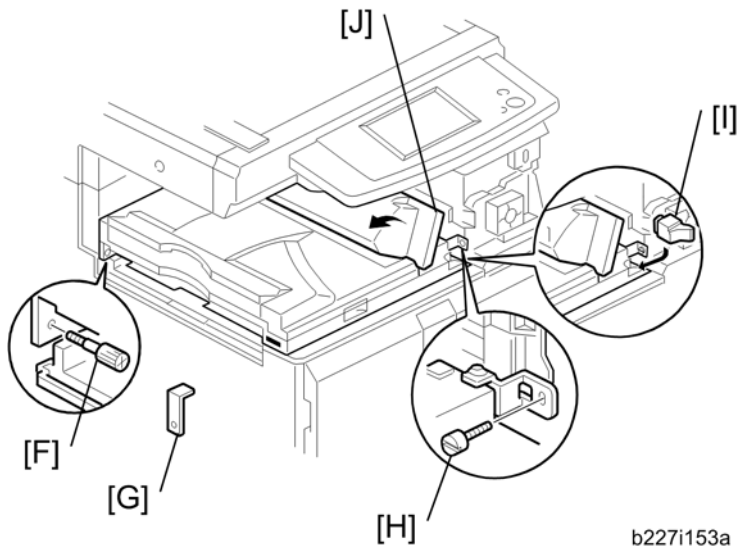

8. Secure the bridge unit with the long knob screw [F] and knob screw [H].
9. Attach the frame cover [I].
10. Reinstall the front right cover on the machine, and then close the right door of the machine.

**Note**

- Open the bridge unit cover [J] when installing the front right cover. Otherwise, it cannot be reinstalled.


11. Install the optional finisher (refer to the finisher installation procedure).

**Note**

- Holder bracket [L] is used in the installation procedure of the finisher (D588, D636 or D637). Do not install it at this time.

12. Turn on the main power switch of the machine.

13. Check the bridge unit operation.

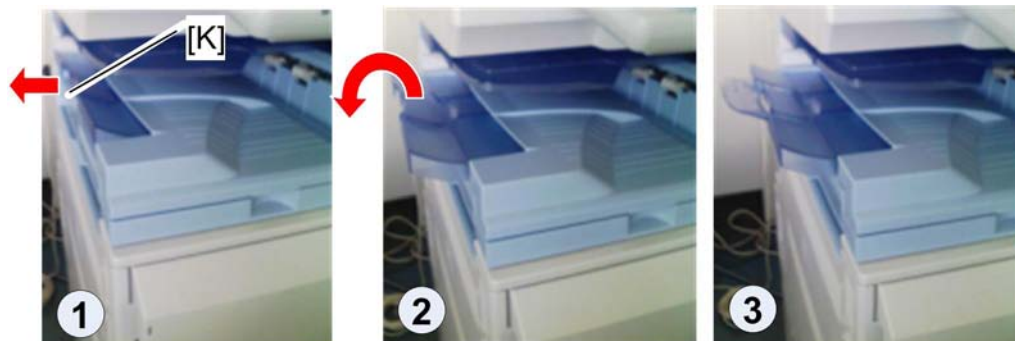

d386i509b


14. Pull the extension tray [K] only if the 1000-sheet finisher (D588) is to be installed in the main machine.

# Finisher SR3090 (D588)

## Accessory Check

Check the quantity and condition of the accessories against the following list.

No.	Description	Q'ty	For this model
1	Grounding Plate	1	Yes
2	Rear Joint Bracket	1	Not used
3	Front Joint Bracket	1	Yes
4	Rear Joint Bracket	1	Yes
5	Copy Tray	1	Yes
6	Screw - M3 x 8	1	Yes
7	Screw - M4 x 13	4	Yes
8	Knob Screw - M3 x 8	1	Yes
9	Knob Screw - M4 x 10	1	Yes
10	Screw - M4 x 25	3	Not used
11	Staple Position Decal	1	Yes

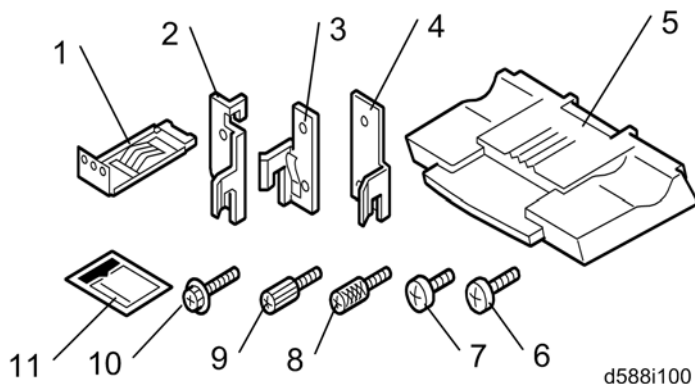


## Installation Procedure

### ⚠ CAUTION

- Unplug the main machine power cord before starting the following procedure.

The following options must be installed before you install this finisher:


- Bridge Unit (D634) and either Paper Feed Unit (D580) or LCT (D581)

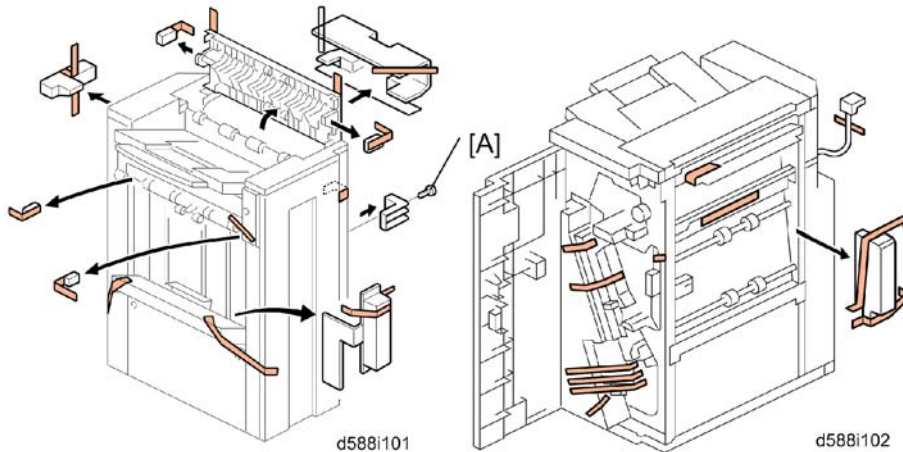

1. Unpack the finisher and remove the tapes.

#### ↓ Note


- Be sure to keep screw [A]. It will be needed to secure the grounding plate in step 3.

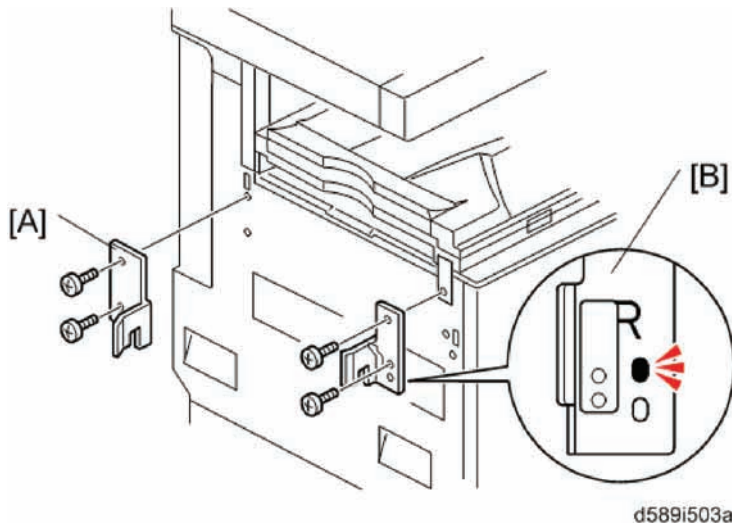

2. Install the rear joint bracket [A] ( 2; M4 x 13), and then attach the front joint bracket [B] and the holder bracket [C] ( 2; M4 x 13).



↓ **Note**

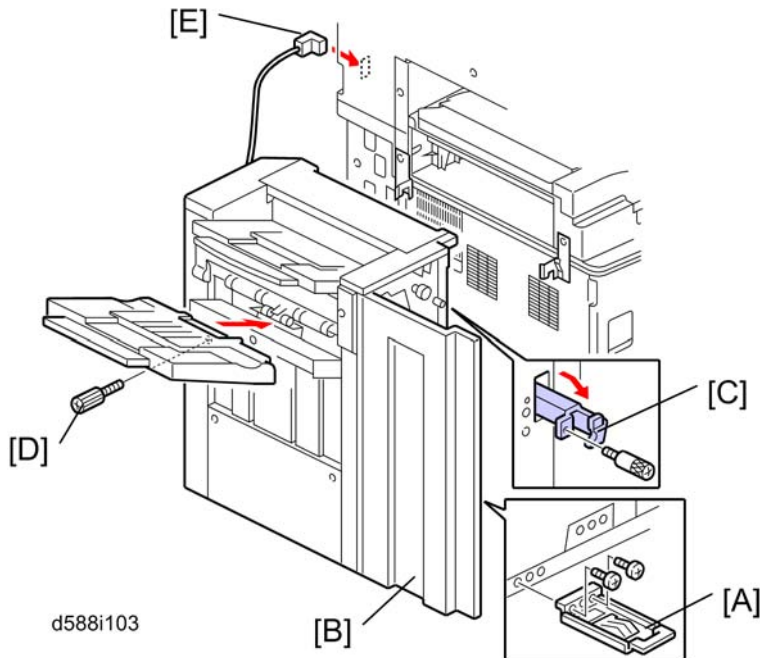- Holder bracket [C] must be placed outside the front joint bracket [B]. This bracket is provided with the Bridge Unit (D634).




3. Install the grounding plate [A] on the finisher (  x 2; M3 x 8).

↓ **Note**

- Use the screw removed in step 1 and the screw from the accessory box.
4. Open the front door [B]. Then pull the locking lever [C].
  5. Align the finisher on the joint brackets, and lock it in place by pushing the locking lever.
  6. Secure the locking lever [C] (  x 1; knob M3 x 8) and close the front door.
  7. Install the copy tray [D] (  x 1; knob M4 x 10).
  8. Connect the finisher cable [E] to the main machine.

2

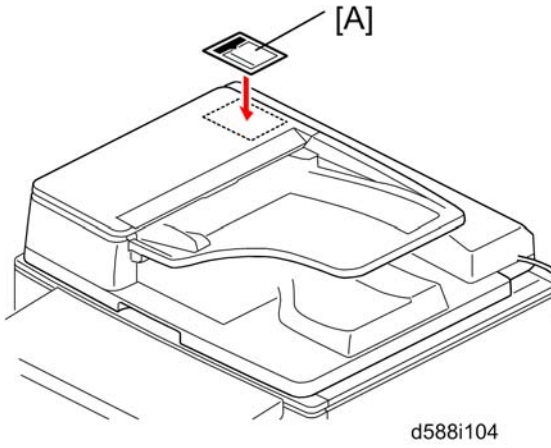


9. Attach the staple position decal [A] to the ARDF as shown.
10. Turn on the ac switch and check the finisher operation.

# 2000/3000-Sheet (Booklet) Finisher (D636/D637)

## Accessory Check

Check the quantity and condition of the accessories against the following list.

No.	Description	Q'ty
1	Rear joint bracket	1
2	Front joint bracket	1
3	Ground (earth) plate	1
4	Tapping screws - M4 x14	4
5	Tapping screws - M3 x 8	1
6	Tapping screws - M3 x 6	2
7	Upper output tray	1
8	Support Tray	1
9	Lower output tray (D637 only)	1
10	Cushion (with double-sided tape)	1

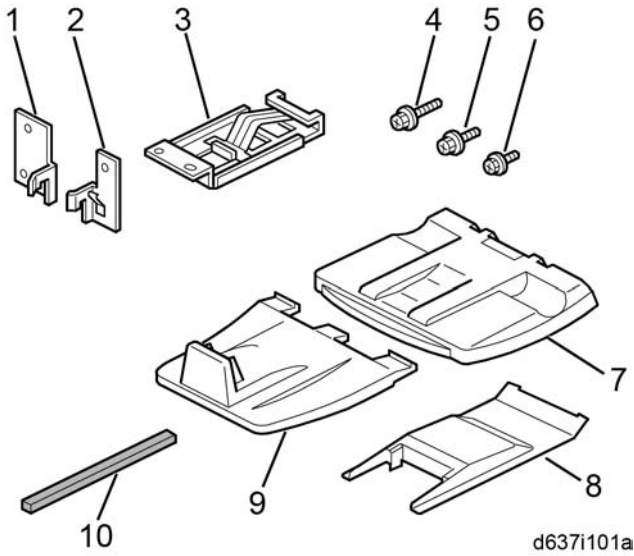


## Installation Procedure

### **⚠ CAUTION**

- Unplug the main machine power cord before starting the following procedure.


If this finisher is installed on this machine, the following options must be installed before installing this finisher.

- Bridge Unit (D634)
- Two Tray Paper Feed Unit (D580) or LCT (D581)

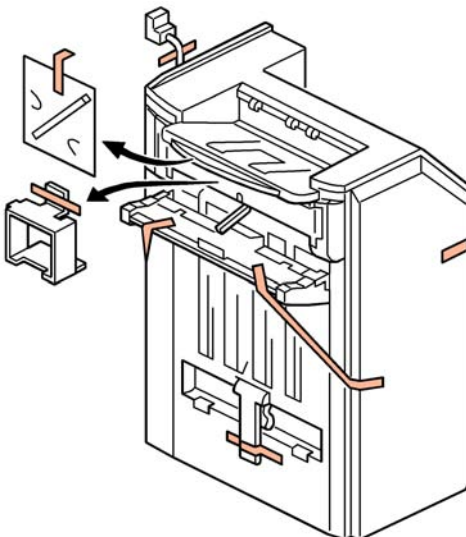




1. Unpack the finisher and remove all tapes and packing materials from the finisher.

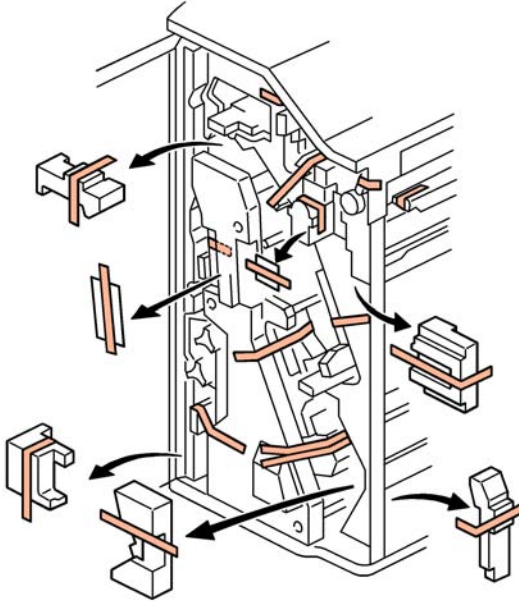


2. Open the front door, and then remove all tapes and packing materials from the inside of the finisher.

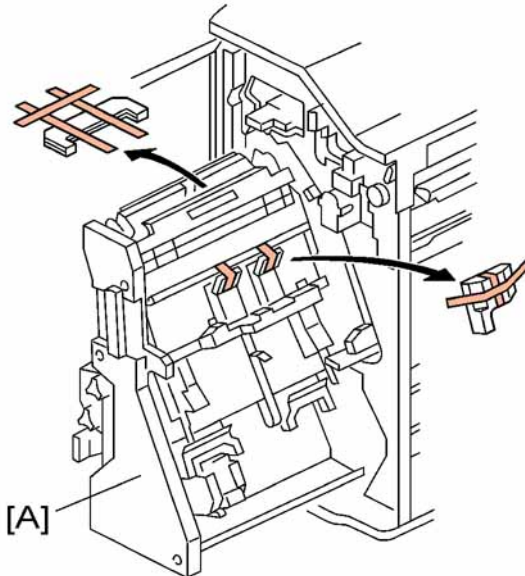

b804i104b


3. Pull out the jogger unit [A], and then remove all tapes and retainers.

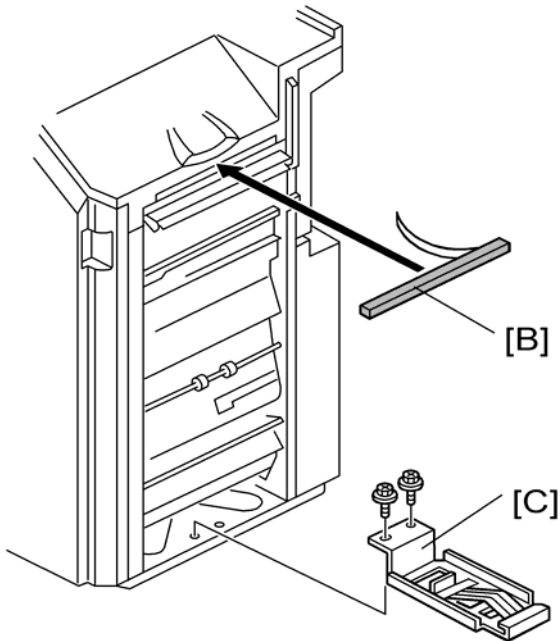


4. Attach the cushion [B] to the finisher.


**Note**

- Make sure that the cushion is placed within 0 to 1 mm from the edge of the cover.

5. Install the ground plate [C] on the finisher (  x 2; M3 x 6).

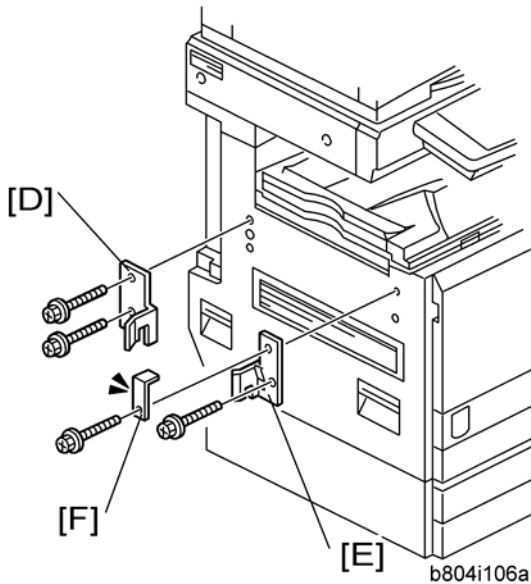




6. Attach the rear joint bracket [D] (  x 2; M4 x 14).


7. Attach the front joint bracket [E] and the holder bracket [F] (  x 2; M4 x 14).

**Note**

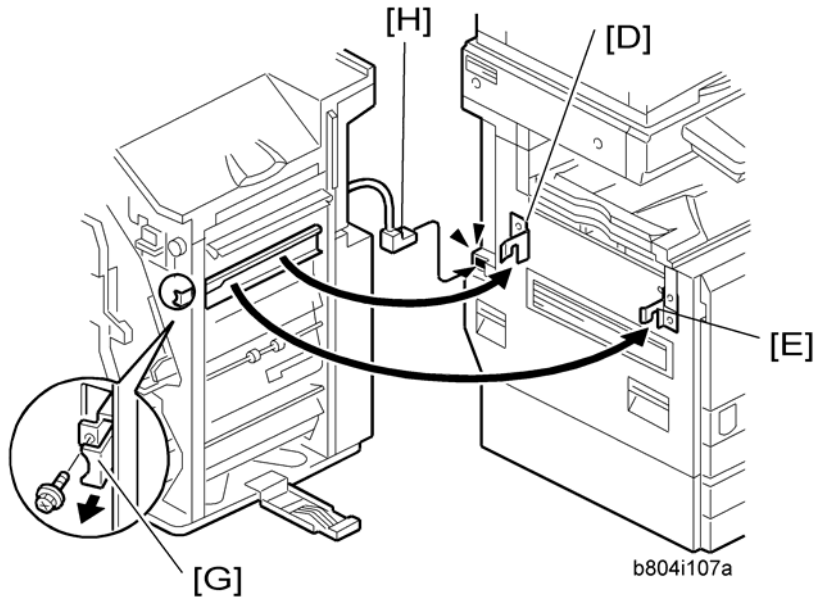
- Holder bracket [F] must be placed outside the front joint bracket [E]. This bracket is provided with the Bridge Unit (D634).




8. Pull the lock lever [G] (  x 1).
9. Slowly push the finisher to the left side of the machine, keeping its front door open until the brackets [D] [E] go into their slots.
10. Push the lock lever [G], and then secure it (  x 1).
11. Close the front door of the finisher.
12. Connect the finisher connector [H] to the machine.

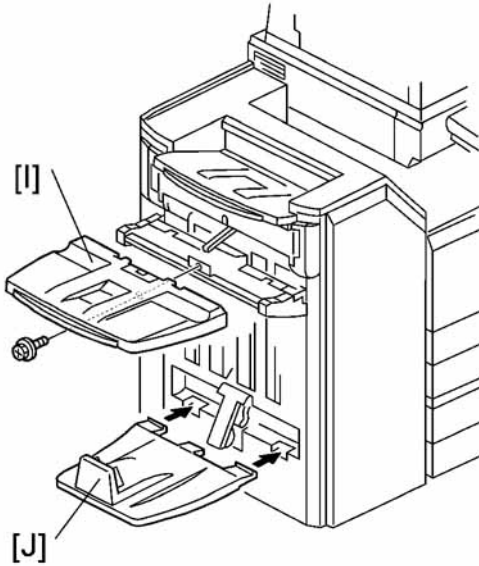

b804i108b

13. Install the upper output tray [I] (  x 1; M3 x 8).
14. Only for D637, install the lower output tray [J].
15. Turn on the main power switch of the machine.
16. Check the finisher operation.

### Support Tray Installation

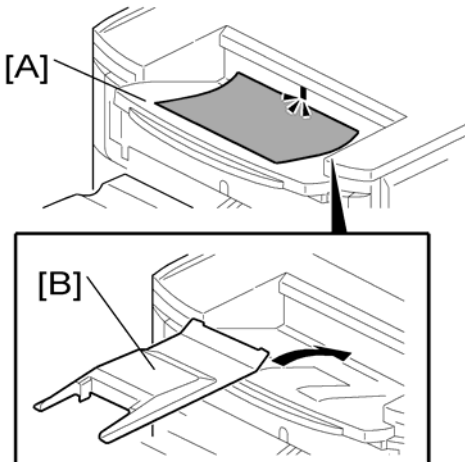

b804i901

If a stacking problem occurs several times on the upper output tray [A], put the support tray [B] on the tray as shown.

 **Note**

- Keep this tray in the manual pocket if this tray does not need to be installed.

## Punch Unit Type 3030 (D570)


The Punch Unit D570 is installed in the 2000-Sheet Booklet (D637) Finisher/ 3000-Sheet Finisher (D636).

### 2

### Component Check

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	Punch-out Waste Unit	1
2	Slide Drive Unit	1
3	Punch Waste Hopper	1
4	Wire harness: short-circuit	1
5	Screws: M3 x 6	5
6	Side-to-Side Detection Unit	1
7	Punching Unit	1

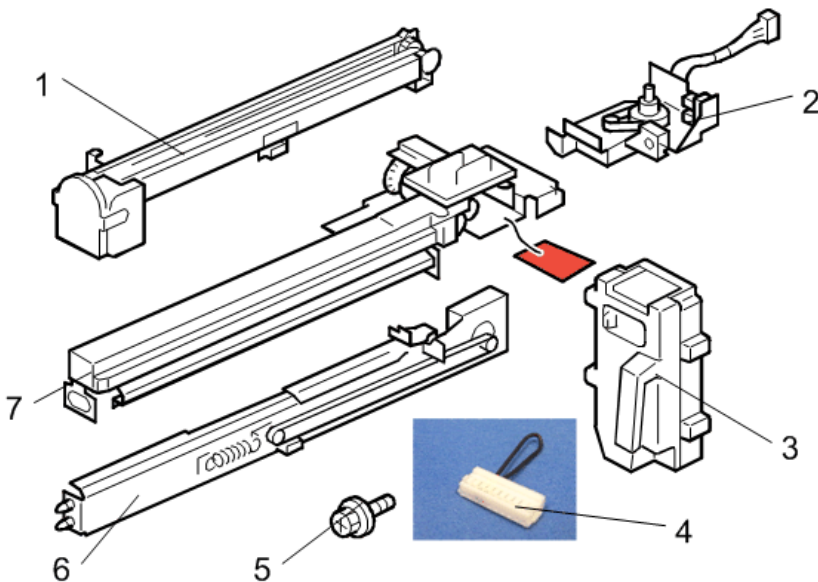

d570i101

## Installation Procedure


### ⚠ CAUTION


- Unplug the main machine power cord before starting the following procedure. If the 2000-sheet booklet/ 3000-sheet finisher has been installed, disconnect it and pull it away from the machine.

2


## Installation Procedure


1. Remove all tapes and shipping retainers.

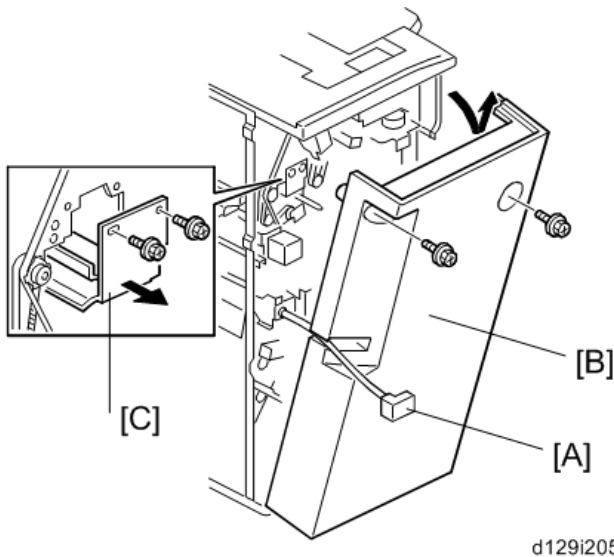

2. If the finisher is connected to the copier, disconnect the power connector [A] and separate the finisher from the copier.
3. Remove the rear cover [B] (  x 2 ) and open the front door.


#### ⓘ Note

- At the bottom of the rear cover, make sure to disconnect the tabs that attach the cover to the frame.
4. Remove the guide plate [C] (  x 2 ).

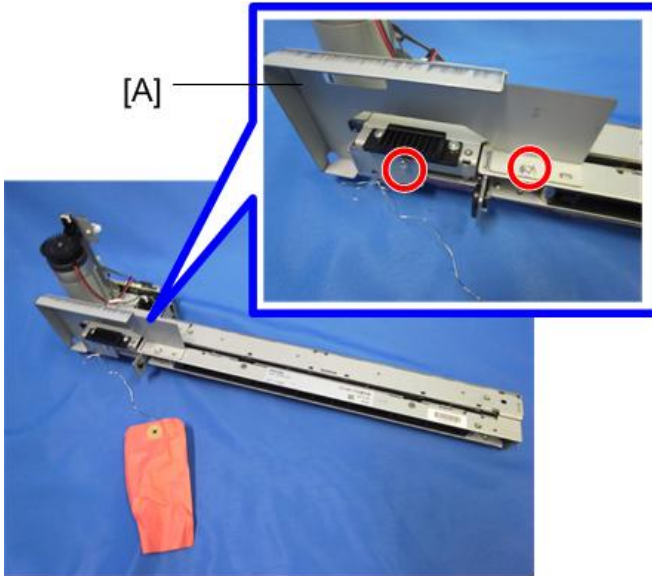



d129i204

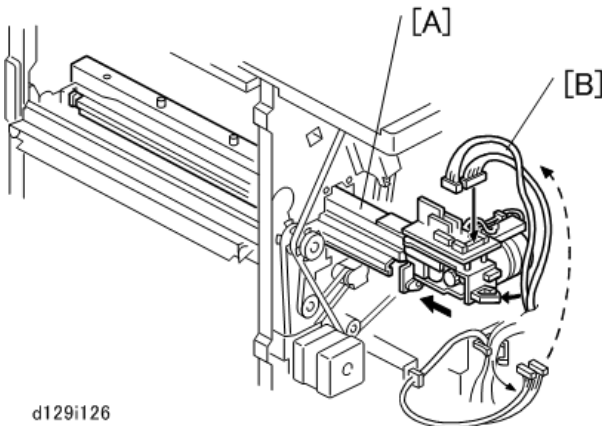
5. Remove the shipping retainer [A] from the punch unit (  x 2).





d129i126

 
6. Move the punch unit [A] along its rails into the finisher. Make sure that the pin engages correctly at the front and rear.
7. Connect the cables [B] of the finisher to the connectors (CN601 and CN602) on the punch unit board (  x 2,  x 1).
  - The cables [B] are coiled and attached to the PCB.



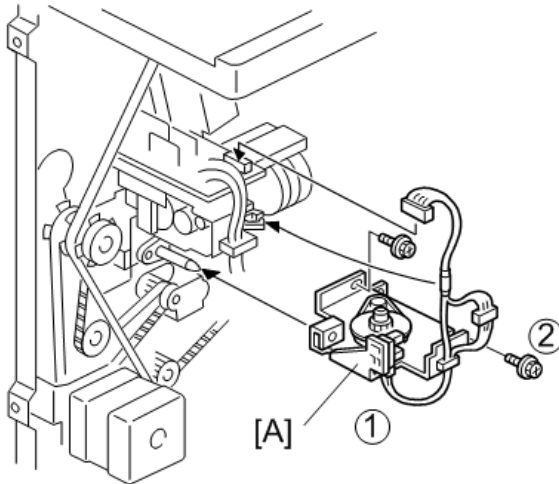





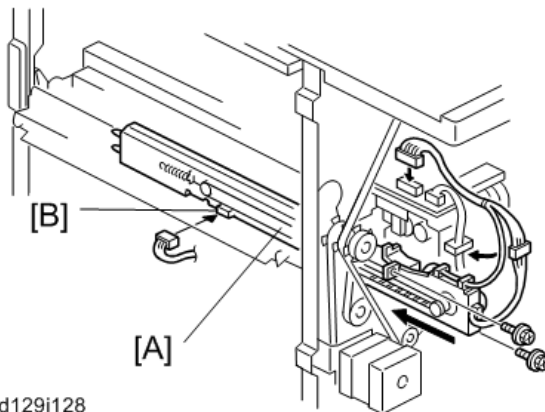d129i127

8. Attach the slide drive unit [A] to the finisher and connect it to the punch unit (  x 2,  x 1 ). Push in the slide drive unit at ① when you attach the screw ②.
9. Make sure that the punch unit moves freely and is not blocked by the screws.




d129i128

10. Put the side-to-side detection unit [A] in the machine. Make sure that the two pins are engaged correctly at the front.
11. Make sure that the side-to-side detection unit moves smoothly on its rails. If it does not, make sure that the rails are aligned with their grooves.
12. Attach the side-to-side detection unit and connect it at the rear (  x 2,  x 1,  x 1 ).
13. Pull the short connector out of the connector [B] then connect the cable of the finisher (  x 1 ).


**Note**

- This is the 3-pin connector.

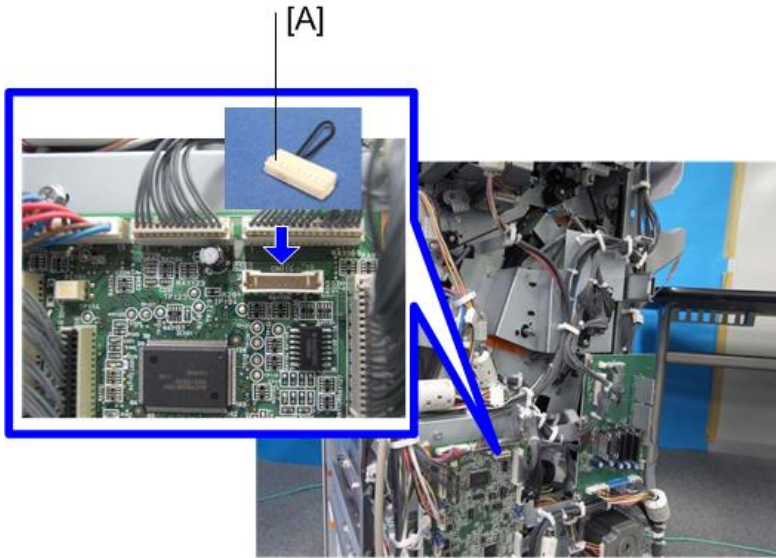

d129i133

14. Connect "Wire harness: short-circuit" [A] to the CN110 connector.

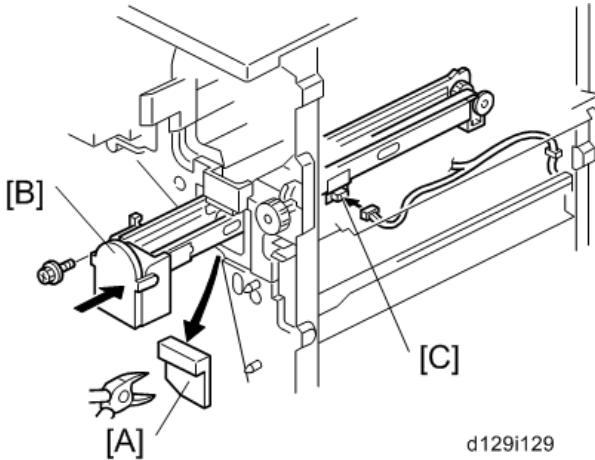




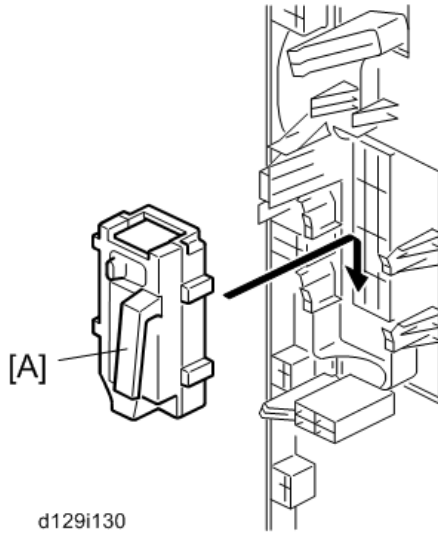
d129i129

15. At the front, use a pair of wire cutters to remove the part [A] of the cover.
16. Install the punch-waste transport unit [B] in the finisher.
17. Make sure that the punch-waste transport unit moves smoothly on its rails. If it does not, make sure that the rails are aligned with the grooves.
18. Remove the short connector from the connector [C].

**Note**

- This is the 4-pin connector.

19. Connect the cable to connector [C] and attach the punch-waste transport unit (  x 1,  x 1,  x 1).







20. Set the hopper [A] in its holder.
21. Reassemble the finisher, and then install it on the main machine.
22. Connect the power cord to the outlet, and then turn the main power switch on.
23. Check the punch unit operation.

# Key Counter Bracket Type H (A674)

## Installation Procedure

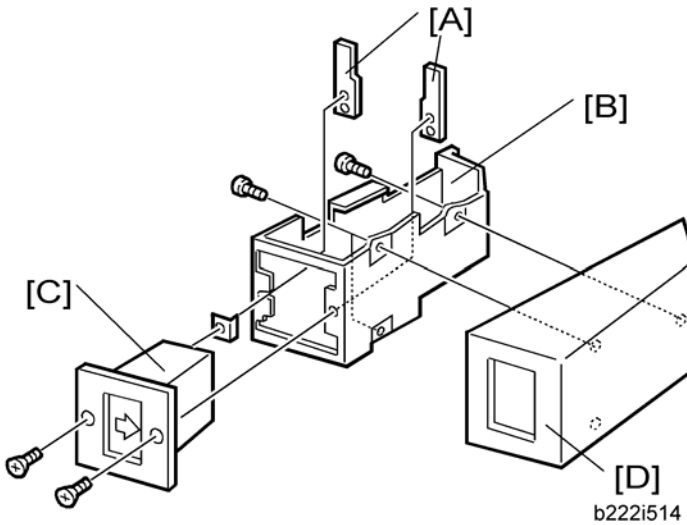2




1. Hold the key counter plate nuts [A] on the inside of the key counter bracket [B] and insert the key counter holder [C].
2. Secure the key counter holder to the bracket (  x 2).
3. Install the key counter cover [D] (  x 2).
4. Rear cover (  p.176)



5. Cut off the part [E] of the rear cover.



6. Connect the harness to the connector [F] inside the machine.

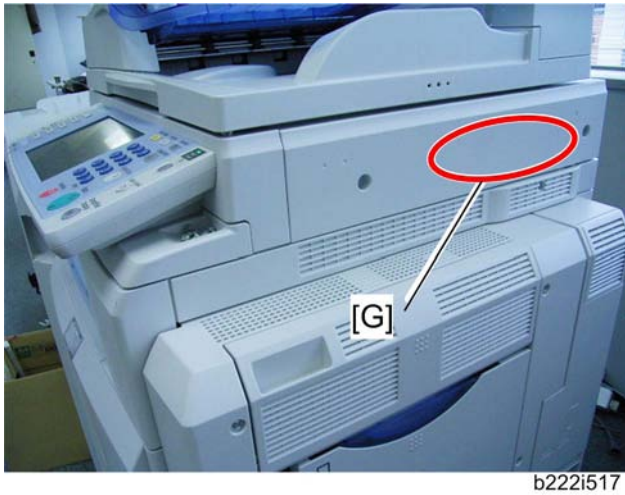

7. Peel off double sided tape on the key counter bracket and attach the key counter to the scanner right cover [G].

8. Reassemble the machine.

## Copy Data Security Unit Type F (B829)


### Component Check


No.	Description	Q'ty	For this model
1	Bracket 1	1	Not used
2	ICIB-3	1	Yes
3	Flexible cable: Long	1	Not used
4	Flexible cable: Short	1	Not used
5	Harness with bands	1	Not used
6	Harness	1	Not used
7	Small Bracket	1	Not used
8	Saddle Clamp	1	Not used
9	Screws: M3x6	6	Not used
10	Screws: M3x4	2	Yes
11	Bracket 2	1	Not used


### Installation

#### CAUTION


- Unplug the main machine power cord before you do the following procedure.

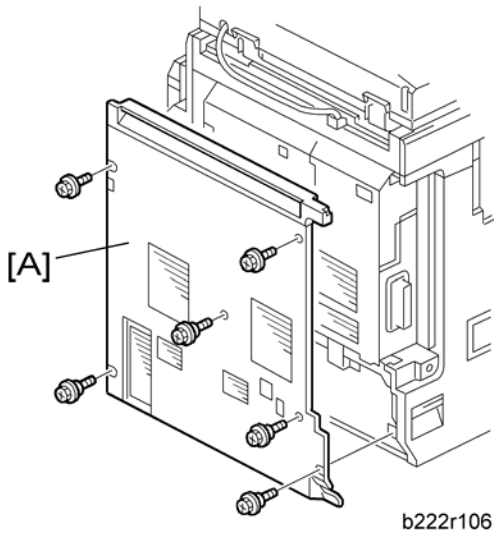

1. Remove the rear cover [A] of the machine (  x 5).

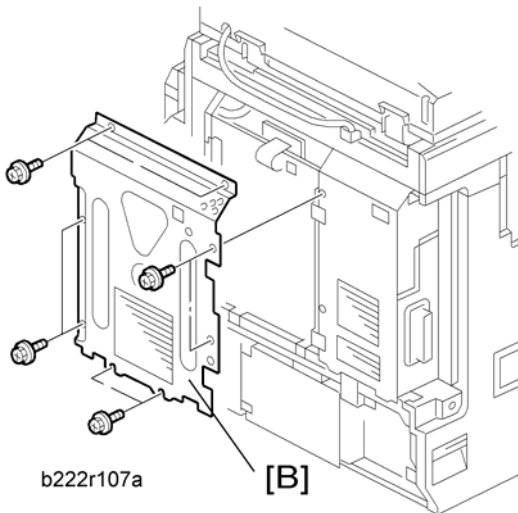

2. Remove the controller box right cover [B] (  x 8).

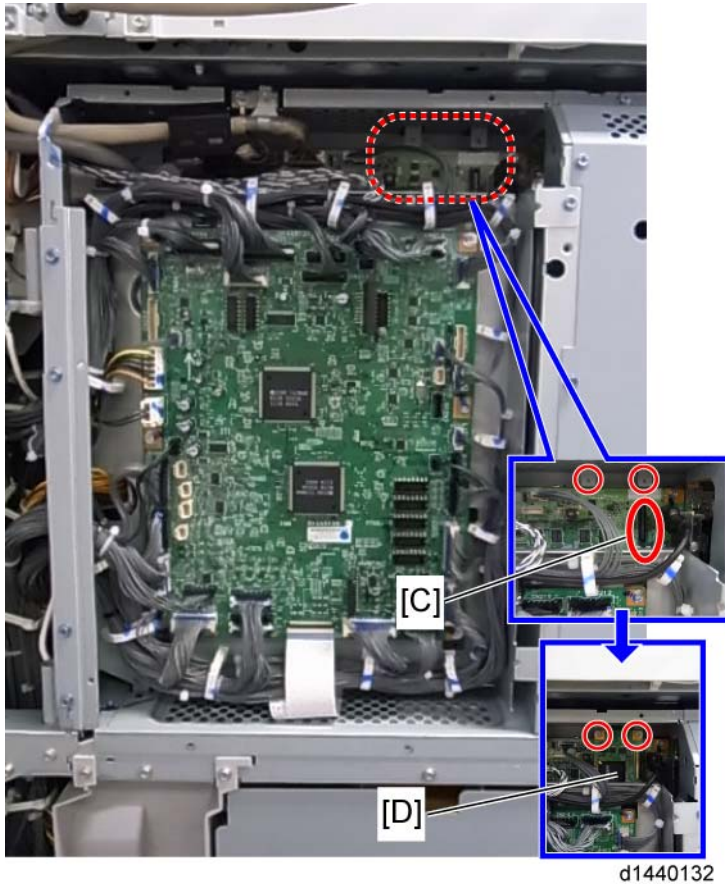

3. Attach the ICIB-3 [D] (copy data security board) to CN 187 [C] on the BCU (🔌 x 1, 🔩 x 2).
4. Reassemble the machine.

## User Tool Setting

1. Plug in and turn on the main power switch.
2. Go into the User Tools mode, and select System Settings > Administrator Tools > Copy Data Security Option > "On".
3. Exit User Tools.
4. Check the operation.

### ⬇ Note

- The machine will issue an SC165 error if the machine is powered on with the ICIB-3 removed and the "Data Security for Copying" feature set to "ON".
- When you remove this option from the machine, first set the setting to "OFF" with the user tool before removing this board. If you forget to do this, "Data Security for Copying" feature



cannot appear in the user tool setting. And then SC165 will appear every time the machine is switched on, and the machine cannot be used.

Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).

# Optional Counter Interface Unit Type A (B870)

## Components Check


Check the quantity and condition of the accessories against the following list.

2


No.	Description	Q'ty
1	Key Counter Interface Board	1
2	Stud Stay	4
3	Wire Harness	1

## Installation Procedure


1. Rear cover (📄 p.176)
2. IOB bracket (📄 p.319)

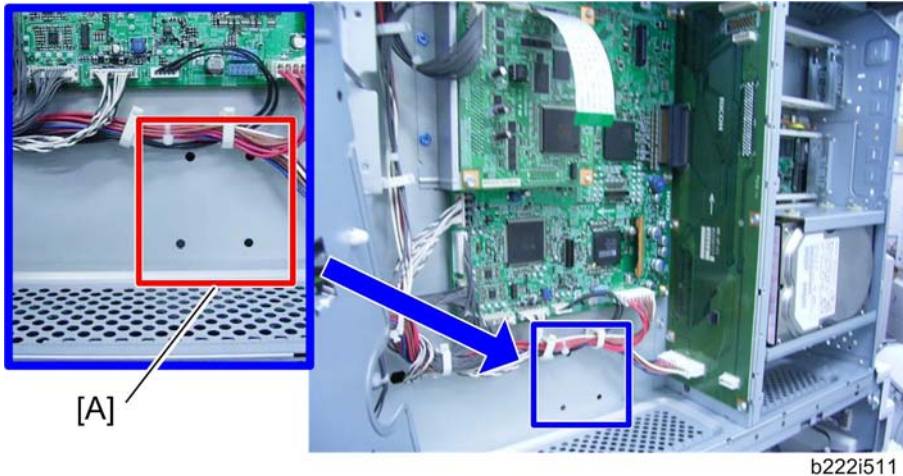


3. Install the four stud stays in the location [A] in the controller box.
4. Install the key counter interface board on the four stud stays in the controller box.
5. Connect the harness to CN3 on the key counter interface board.

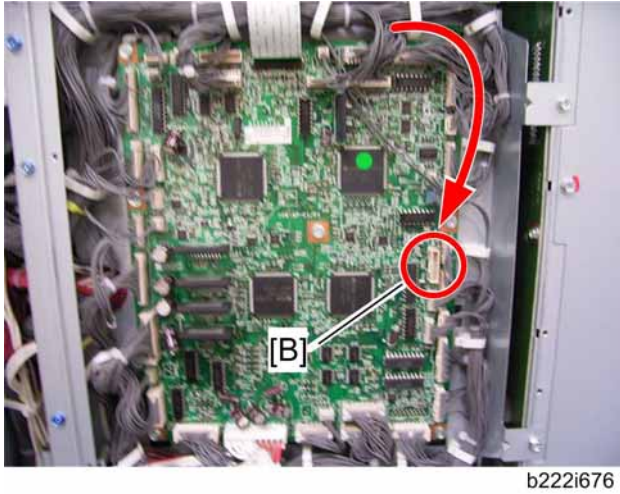

6. Close the IOB bracket and connect the other terminal to CN215 [B] on the IOB.

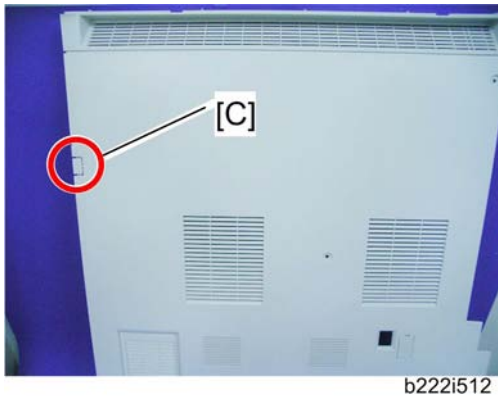

7. Cut off the part [C] of the rear cover.

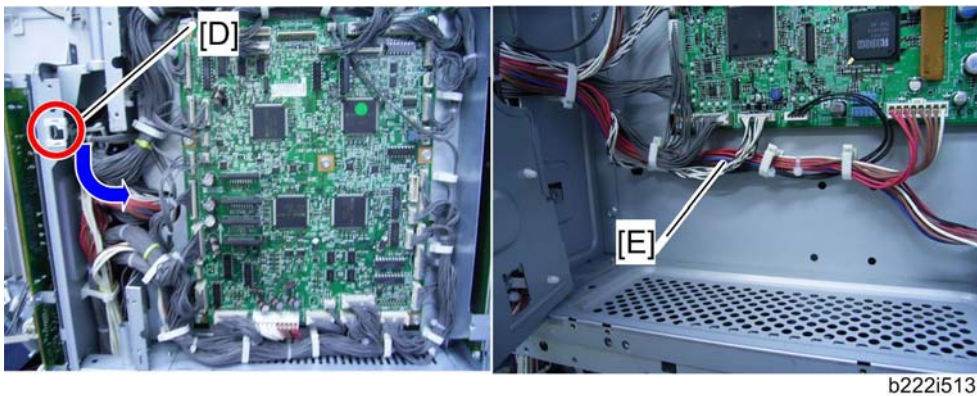

8. Clamp the harness from the counter device with the clamp [D] and put it as shown by the blue arrow (🔗 x 1).
9. Route the harness from the counter device in the same way as the other harnesses [E] (🔗 x 3).

10. Connect the harness from the counter device to CN4 on the key counter interface board.
11. Reattach the IOB bracket (see p.319).
12. Reassemble the machine.


# Card Reader Bracket Type C3352 (D593)

## Component Check


Check the quantity and condition of the accessories against the following list.



No.	Description	Q'ty
1	Upper Tray	1
2	Lower Tray	1
3	Tray Bracket	1
4	Screw: M3 x 8	2
5	Screw: M3 x 14* <sup>1</sup>	1
6	Screw: M3 x 25	1
7	Tapping Screw: M3 x 10	3
8	Clamp	5

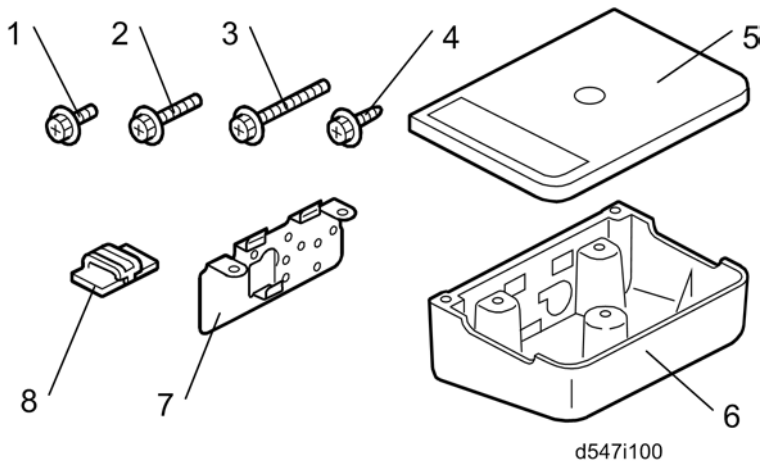
\* 1: Not used in this machine



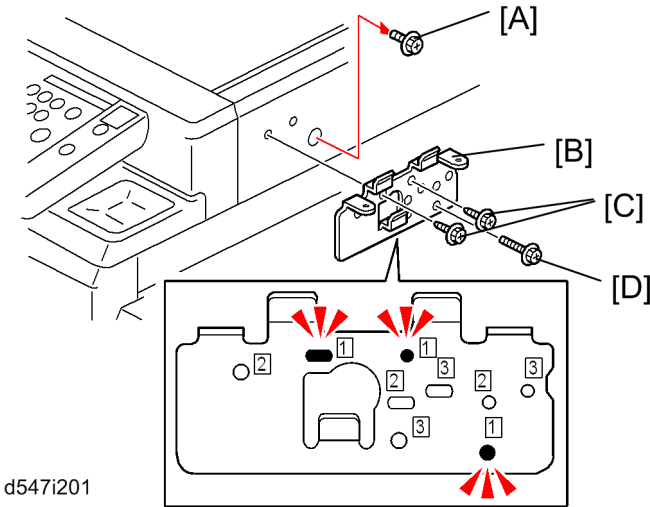

## Installation Procedure

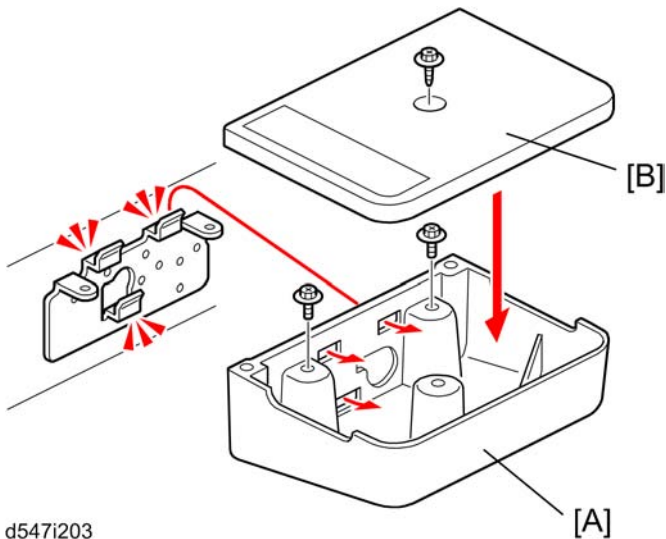

1. Remove the screw [A] on the scanner right cover.
2. Attach the tray bracket [B] to the scanner right cover (  [C] x 2: M3x10,  [D] x 1: M3x25).
  - For this model, use the screw holes marked "1" on the table bracket.



3. Attach the lower tray [A] to the tray bracket (  x 2: M3x8).
4. Attach the upper tray [B] to the tray bracket (  x 1: M3x8).
5. Use the clamps as necessary to clamp the cable of the card read/writer device.

 **Important**

- The smart card reader must be placed on this card reader table. If not, some antenna or transmitter in the main machine may be interrupted.

# Anti-Condensation Heater (Scanner)


**Note**

- This option is provided as a service part.

2

## Installation Procedure


1. Remove the ARDF or platen cover (🔧 p.79)
2. Remove the rear cover (🔧 p.176).
3. Remove the ARDF exposure glass and exposure glass with left scale (🔧 p.184).
4. Remove the scanner rear frame (🔧 p.189)

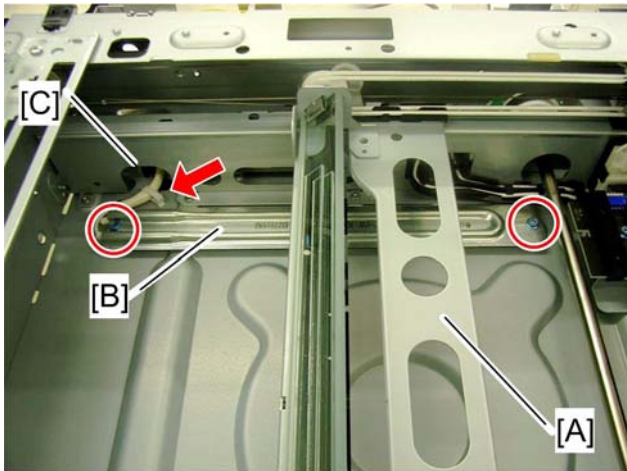

b222i518


5. Move the scanner carriage [A] to the right side by rotating the scanner motor.
6. Install the heater [B] in the scanner unit (🔧 x 2, 📺 x 1)
7. Put the cable through the cutout [C].



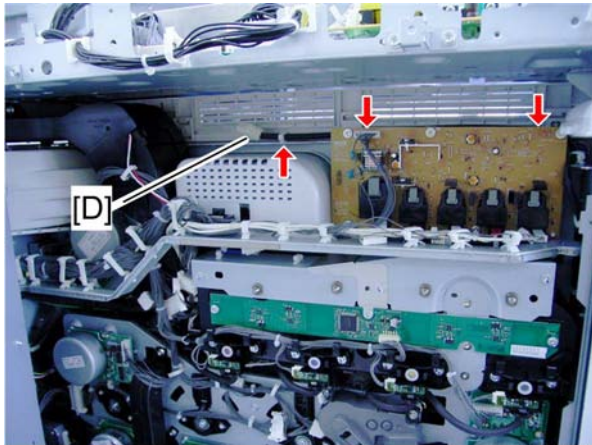


b222i519

8. Release the heater relay cable [D] (🖨️ x 3).

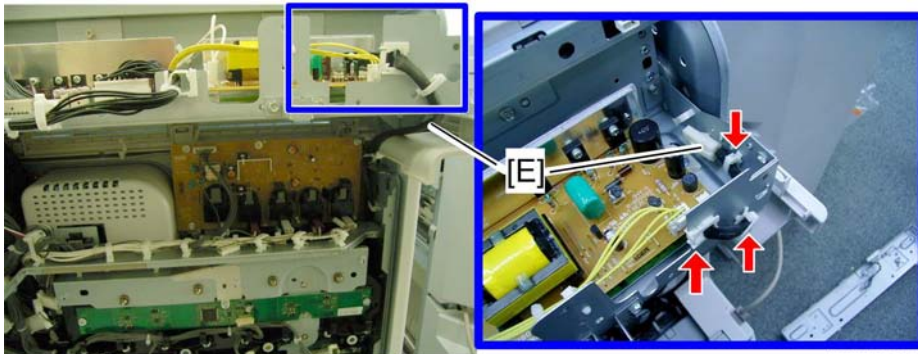

b222i520

9. Route the heater relay cable [E] as shown (🖨️ x 3).

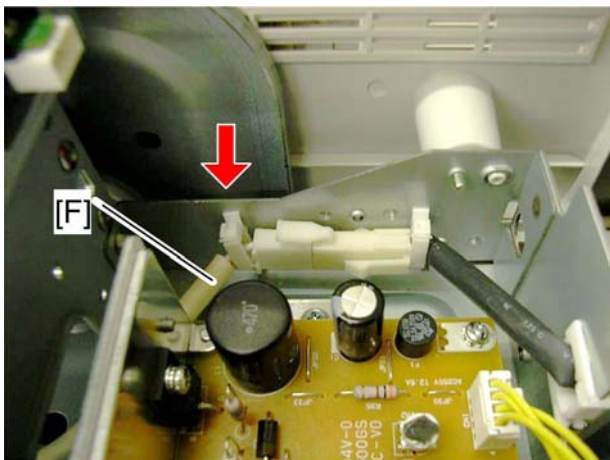

b222i521

10. Connect the heater cable [F] to the heater relay cable (🖨️ x 1).

11. Reassemble the machine.

# Anti-Condensation Heater Type A

## ↓ Note


- This option is provided as a service part.

## Component Check

2

No.	Description	Q'ty
1	Tray heater	1
2	On-standby decal	1 (-90) or 2 (-91)
3	Harness 2 (For D387)* <sup>1</sup>	1
4	Harness 1 (For D537/D538)	1
5	Screw M4 x 10	2
-	Installation procedure	1

\* 1: This harness is not used in this machine.

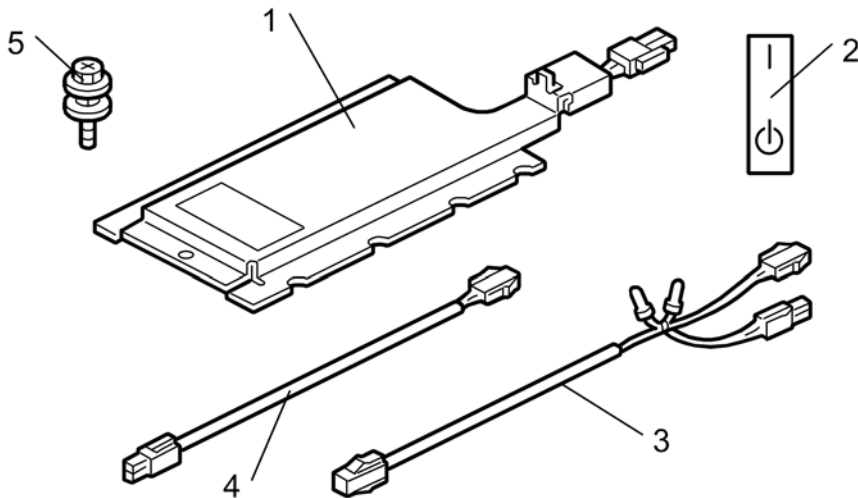


b800i191



## Installation Procedure

### **⚠ CAUTION**


- Unplug the machine power cord before starting the following procedure.
- Do the following procedure not to damage any harnesses.
- Check that any harnesses are not damaged nor pinched after installation.

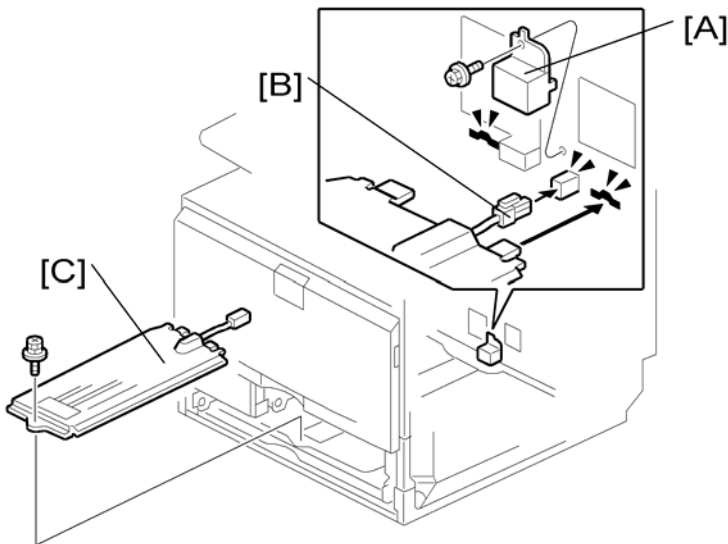
### For installing the tray heater in the main machine





1. Remove trays 1 and 2 from the machine.
2. Remove the connector cover [A] (  x 1).
3. Connect the connector [B] of the heater to the connector of the main machine.
4. Install the heater [C] inside the machine (  x 1 )
5. Reassemble the machine.


## For installing the tray heater in D537

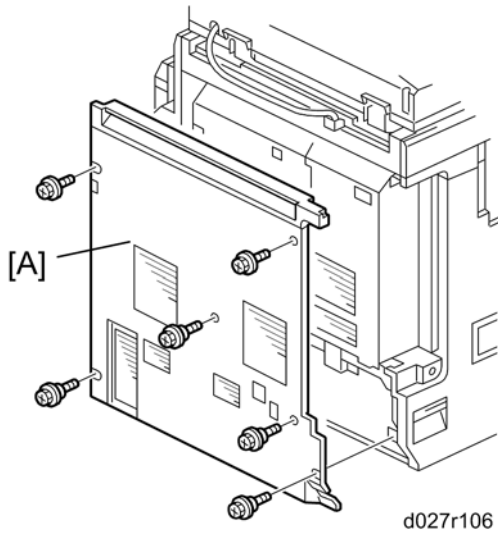

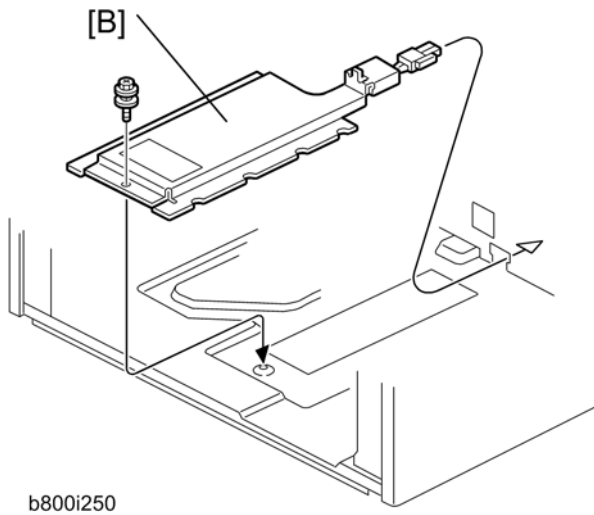


1. Rear cover [A] (  x 6 )
2. Pull out the two trays in the optional paper feed unit.

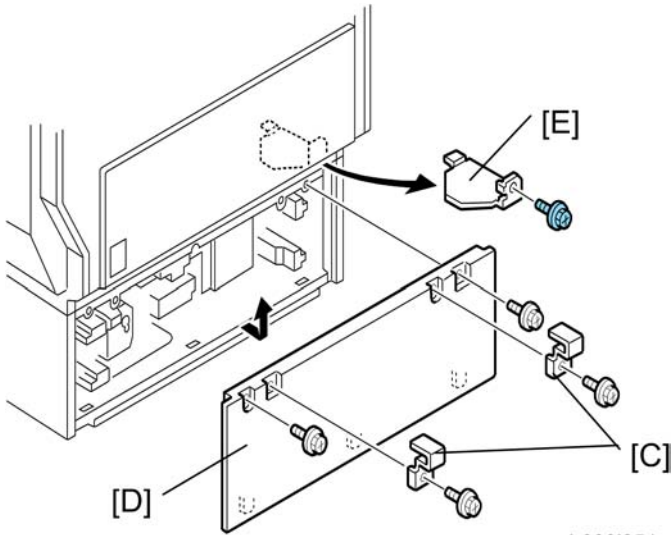


3. Install the tray heater [B] in the optional paper feed unit (  x 1 ).




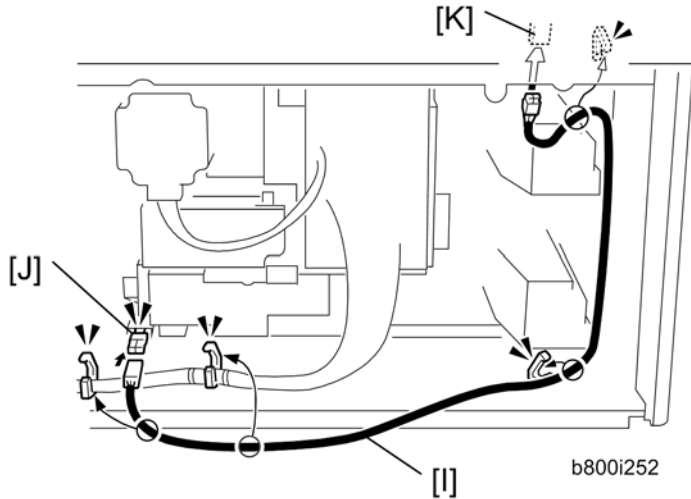
b800i251

4. Remove the two securing brackets [C] (  x 1 each), and then the rear cover [D] of the optional paper feed unit (  x 2).
5. Remove the harness cover bracket [E] (  x 1).

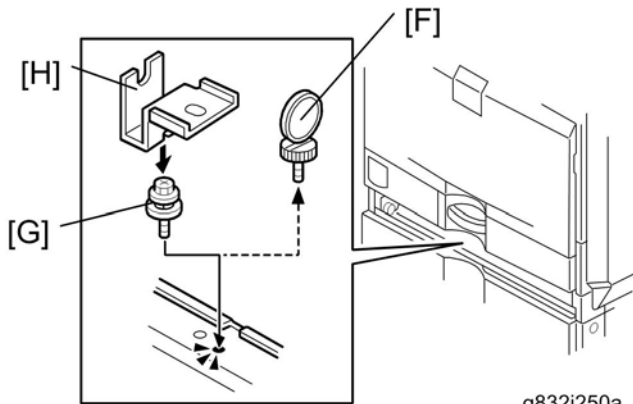

g832i250a

6. Pull out tray 2 from the mainframe.
7. Replace the shoulder screw [F] with the washer screw [G], using securing bracket [H] (  x 1).




8. Connect the harness [I] to the connector [J] of the tray heater.
9. Route the harness [I] as shown and clamp it with four clamps (🔧 x 4).
10. Connect the harness [I] to the connector [K] of the mainframe.
11. Reassemble the mainframe and optional paper feed unit.

### For Installing the Tray Heater in D538


1. Remove the rear cover of the mainframe (🔧 step 1 in "For Installing the Tray Heater in D537").
2. Pull out the LCT drawer.

#### ⬇ Note

- If the right tray comes out with the left tray, push the right tray into the LCT.

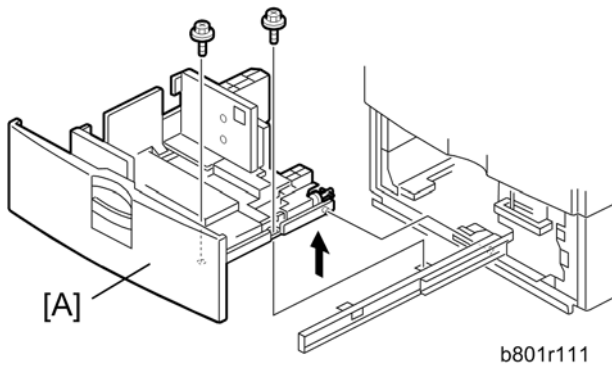


3. Left tray [A] (🔧 x 2)

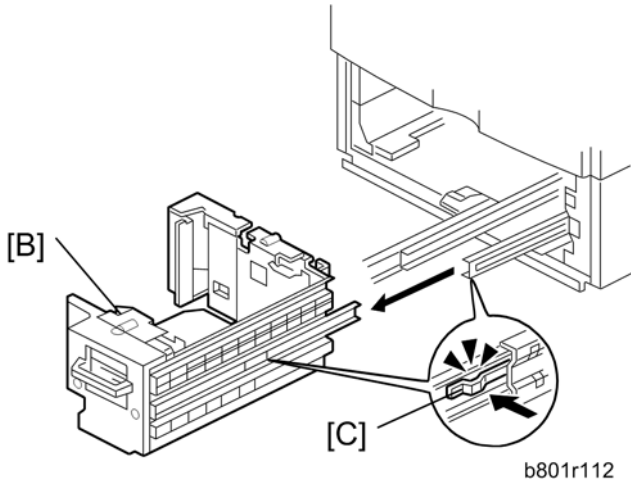


4. Remove the right tray [B] while pressing down the stopper [C].


**Note**

- When reinstalling the right tray, set the right tray on the guide rail and carefully push the tray in, making sure to keep the tray level.

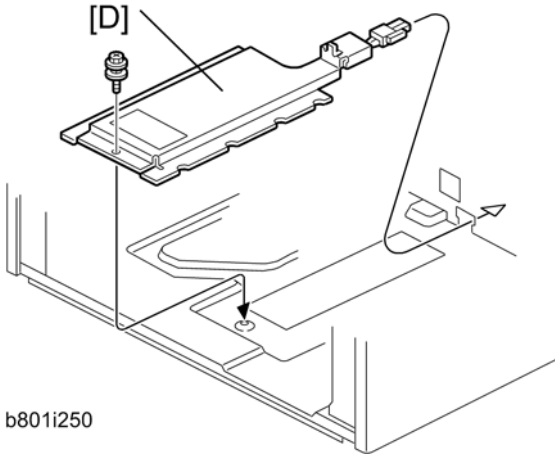




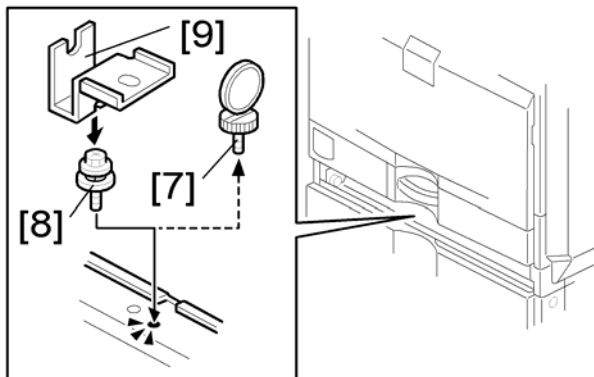
5. Install the tray heater [D] in the optional LCT (  x 1 ).

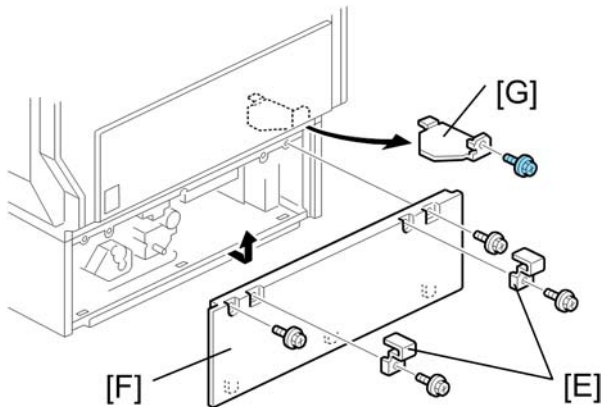




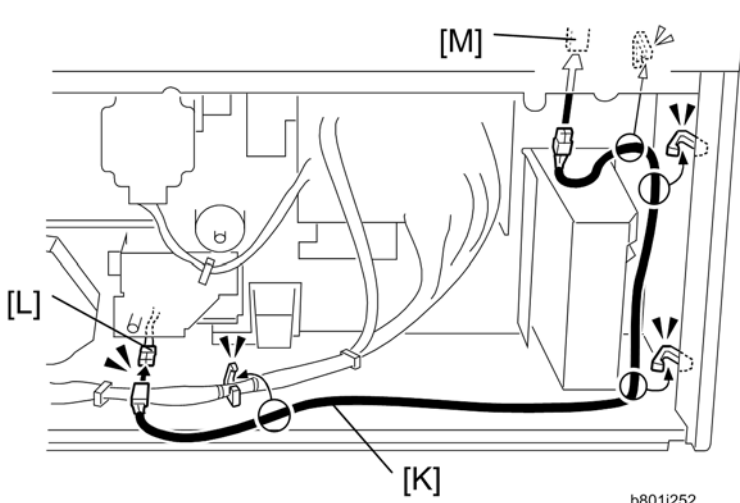
b801i251

6. Remove the two securing brackets [E] (  x 1 each), and the then rear cover [F] of the optional LCT (  x 2).
7. Remove the harness cover bracket [G] (  x 1).



g832i250b

8. Pull out tray 2 from the mainframe.
9. Replace the shoulder screw [H] with the washer screw [I], using the securing bracket [J] (  x 1).



10. Connect the harness [K] to the connector [L] of the tray heater.
11. Route the harness [K] as shown and clamp it with four clamps (🔧 x 4).
12. Connect the harness [K] to the connector [M] of the mainframe.
13. Reassemble the mainframe and optional LCT.
14. Reassemble the mainframe and optional paper feed unit.

# Controller Options


## Overview

### ★ Important

- Always touch a grounded surface to discharge static electricity from your hands before you handle SD cards, printed circuit boards, or memory boards.

This machine has I/F card slots for optional I/F connections and SD card slots applications.

After you install an option, check that the machine can recognize it (see "Check All Connections" at the end of this section).

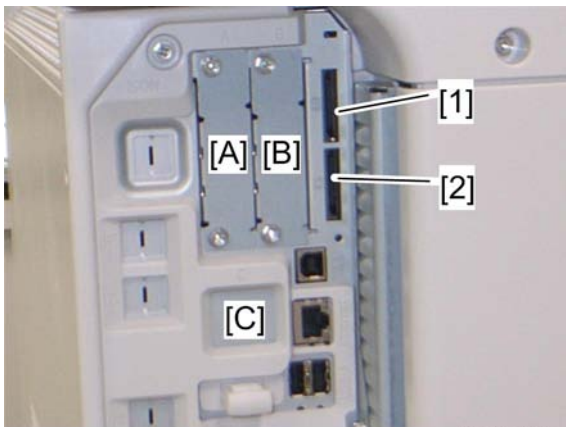

d088i400

## I/F Card Slots



- Slot A is used for one of the optional I/F connections (only one can be installed): IEEE1284, IEEE802.11a/g/g (Wireless LAN) or ~~Remote Communication Gate~~.
- Slot B is used for the File Format Converter or ~~Remote Communication Gate~~.
- Slot C is used for Gigabit Ethernet.

## SD Card Slots

- Slot 1 (upper) is already occupied by the PDF direct print, VM and App2me SD Card by factory default, and is also used for optional applications (e.g.: Browser Unit, PostScript 3, PictBridge, IPDS unit, etc).
- Slot 2 (lower) is used for installing applications, or for service only (for example, updating the firmware).

## SD Card Appli Move


### Overview

The service program "SD Card Appli Move" (SP5-873) lets you move application programs from one SD card to another SD card.


If more than one application is required, the applications must be moved to one SD card with SP5873-1 (PostScript 3, Security Application, PictBridge, IPDS unit, etc.).

#### Be very careful when you do the SD Card Appli Move procedure:

- The data necessary for authentication is transferred with the application program from an SD card to another SD card. Authentication fails if you try to use the SD card after you move the application program from one card to another card.
- Do not use the SD card if it has been used before for other purposes. Normal operation is not guaranteed when such an SD card is used.

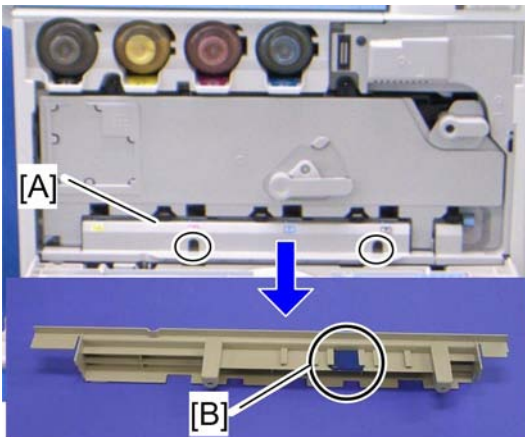

d088i511

- Remove the cover [A] (  x 2), and then keep the SD card in the place [B] after you move the application program from one card to another card. This is done for the following reasons:
  - The SD card can be the only proof that the user is licensed to use the application program.
  - You may need to check the SD card and its data to solve a problem in the future.

### Move Exec

The menu "Move Exec" (SP5-873-001) lets you move application programs from the original SD card to another SD card.

**★ Important**

- **Do not turn ON the write protect switch of the system SD card or application SD card on the machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.**
1. Turn the main switch off.
  2. Make sure that a target SD card is in SD Card Slot 1 (upper). The application program is moved to this SD card.
  3. Insert the source SD card with the application program in SD Card Slot 2 (lower).The application program is copied from this source SD card.
  4. Turn the main switch on.
  5. Start the SP mode.
  6. Select SP5-873-001 "Move Exec".
  7. Follow the messages shown on the operation panel.
  8. Turn the main switch off.
  9. Remove the source SD card from SD Card Slot 2 (lower).
  10. Turn the main switch on.
  11. Check that the application programs run normally.

**Undo Exec**

"Undo Exec" (SP5-873-002) lets you move back application programs from an SD card in SD Card Slot 1 (upper) to the original SD card in SD Card Slot 2 (lower). You can use this program when, for example, you have mistakenly copied some programs by using Move Exec (SP5-873-001).

**★ Important**


- **Do not turn ON the write protect switch of the system SD card or application SD card on the machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.**
1. Turn the main switch off.
  2. Insert the original SD card in SD Card Slot 2 (lower). The application program is copied back into this card.
  3. Insert the SD card with the application program in SD Card Slot 1 (upper).The application program is copied back from this SD card.
  4. Turn the main switch on.
  5. Start the SP mode.
  6. Select SP5-873-002 "Undo Exec."
  7. Follow the messages shown on the operation panel.


8. Turn the main switch off.
9. Remove the SD card from SD Card Slot 2 (lower).
10. Turn the main switch on.
11. Check that the application programs run normally.
12. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).


## PostScript3 Unit Type C5502

### CAUTION

- Unplug the main machine power cord before you do the following procedure.

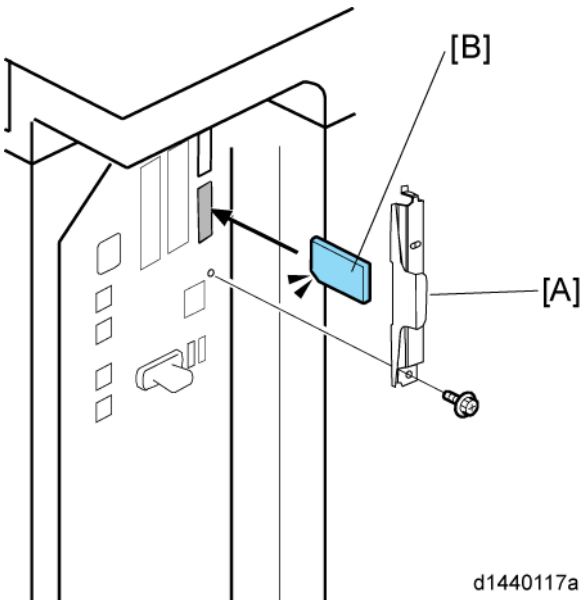

1. Remove the SD-card slot cover [A] from the SD card slots (  x 1).
2. Insert the SD card (PostScript 3) in SD slot 2 (lower) with its label face [B] towards the front of the machine. Then push it slowly into SD slot 2 (lower) until you hear a click.

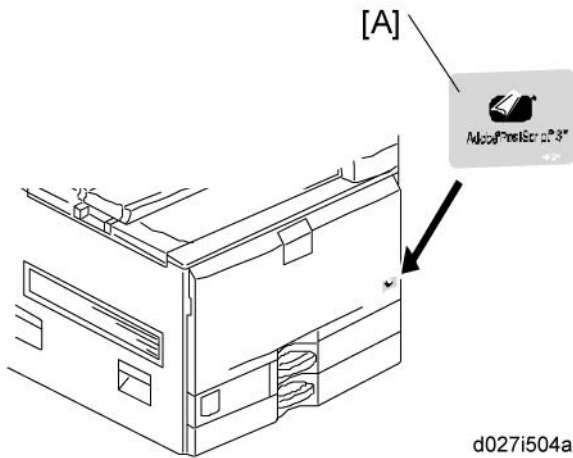

3. Attach the "Adobe PostScript 3" decal [A] to the front door.
4. Plug in, and then turn on the machine.
5. Move the PostScript 3 application from the SD card in SD slot 2 (lower) to the SD card in SD slot 1 (upper) with SP5-873-001.
6. Turn off the machine.
7. Remove the SD card from SD slot 2 (lower), and then keep it in a safe place (📄 p.138).
8. Attach the SD-card slot cover, and then turn on the machine (🔧 x 1).
9. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).

---


## IPDS Unit Type C5502




---



### **⚠ CAUTION**

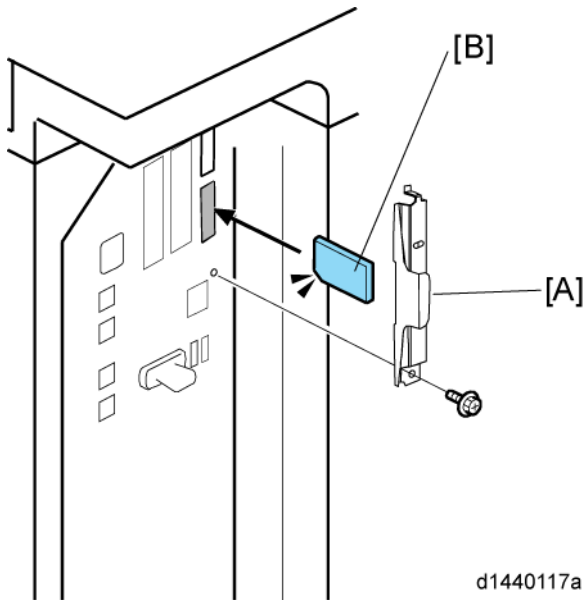- Unplug the main machine power cord before you do the following procedure.



1. Remove the SD-card slot cover [A] from the SD card slots (  x 1).
2. Insert the SD card [C] (IPDS Unit) in SD slot 2 (lower) with its label face [B] towards the front of the machine.
3. Plug in, and then turn on the machine.
4. Move the IPDS unit application from the SD card in SD slot 2 (lower) to the SD card in SD slot 1 (upper) with SP5-873-001.
5. Turn off the machine.
6. Remove the SD card from SD slot 2 (lower), and then keep it in a safe place (  p.138).
7. Attach the SD-card slot cover, and then turn on the machine (  x 1).


## File Format Converter Type E



### CAUTION


- Unplug the main machine power cord before you do the following procedure.



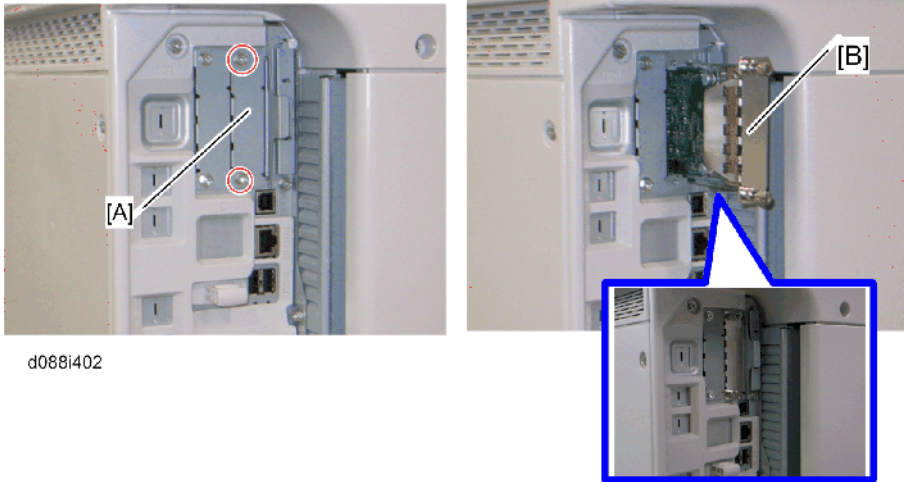

d088i402

2

1. Remove the slot B cover [A] (  x 2).
2. Install the file format converter [B] into slot B and then fasten it with screws.
3. Plug in and turn on the main power switch.
4. Check or set the following SP codes with the values shown below.

SP No.	Title	Setting
SP5-836-001	Capture Function (0:Off 1:On)	"1"
SP5-836-002	Panel Setting	"0"

5. Check the operation.
6. Make sure that the machine can recognize the option (see 'p.155' at the end of this section).

## IEEE 1284 Interface Board Type A

### Installation Procedure


#### CAUTION

- Unplug the main machine power cord before you do the following procedure.

You can only install one of the following network interfaces at a time: (IEEE 802.11 a/g g (Wireless LAN), IEEE1284).



d088i404

1. Remove the slot A cover [A] (  x 2).
2. Install the interface board [B] (Knob-screw x 2) into the slot A.
3. Make sure that the machine can recognize the option (see 'p.155' at the end of this section).

## IEEE 802.11 a/g g Interface Unit Type J/K


### Installation Procedure





#### ⚠ CAUTION


- Unplug the main machine power cord before you do the following procedure.

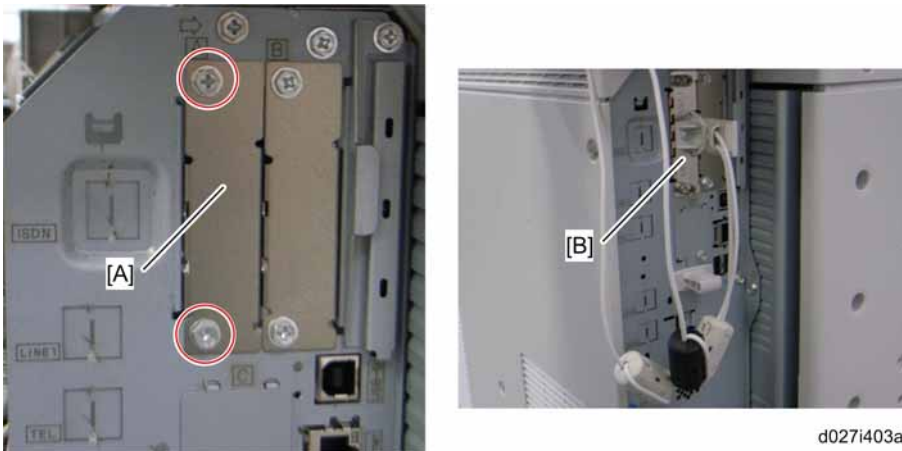You can only install one of the following network interfaces at one time: (IEEE 802.11 a/g g (Wireless LAN), IEEE 1284, Bluetooth).



d027i403a


1. Remove the slot cover [A] from the board slot (  x 2).
2. Install the wireless LAN board [B] (Knob  x 2) into the board slot.
3. Make sure that the machine can recognize the option (see 'p.155' at the end of this section).

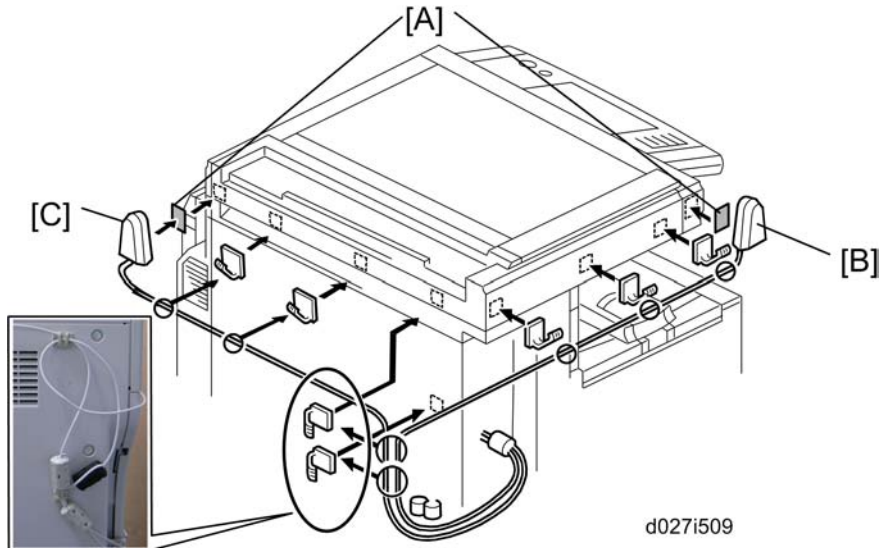

4. Peel off the double-sided tapes on the Velcro fasteners [A], and then attach them [A] at the front left and rear left of the machine.
5. Attach "ANT1" (having a black ferrite core) [B] to the front left of the machine.
6. Attach "ANT2" (having a white ferrite core) [C] to the rear right of the machine.

 **Note**

- "ANT1" is a transmission/reception antenna and "ANT2" is a reception antenna. Do not attach them at the wrong places.

7. Attach the clamps as shown above.
8. Wire the cables and clamp them ( x 7).

 **Note**

- Make sure that the cables are not slack. Keep them wired tightly along the covers.

You may have to move the machine if the reception is not clear.

- Make sure that the machine is not located near an appliance or any type of equipment that generates strong magnetic fields.
- Put the machine as close as possible to the access point.

## Installing Various Hardware Combinations



d027i511a

- Refer to the above picture [A] when installing the handset.

## UP Mode Settings for Wireless LAN

Enter the UP mode. Then do the procedure below to perform the initial interface settings for IEEE 802.11 a/g. These settings take effect every time the machine is powered on.

### ↓ Note

- You cannot use the wireless LAN if you use Ethernet.
  - The Bluetooth interface unit and the Wireless LAN interface unit can not be used simultaneously.
1. Press the "User Tools/Counter" key.
  2. On the touch panel, press "System Settings".

### ↓ Note

- The Network I/F (default: Ethernet) must be set for either Ethernet or wireless LAN.
3. Select "Interface Settings".
  4. Press "Wireless LAN". Only the wireless LAN options show.
  5. Communication Mode. Select either "802.11 Ad hoc" or "Infrastructure".
  6. SSID Setting. Enter the SSID setting. (The setting is case sensitive.)
  7. Channel. You need this setting when Ad Hoc Mode is selected.

Region A (mainly Europe and Asia)

Range: 1-13, 36, 40, 44 and 48 channels (default: 11)

In some countries, only the following channels are available:

Range: 1-11 channels (default: 11)

Region B (mainly North America)

Range: 1-11, 36, 40, 44 and 48 channels (default: 11)

**Note**

- The allowed range for the channel settings may vary for different countries.
8. WEP (Encryption) Setting. The WEP (Wired Equivalent Privacy) setting is designed to protect wireless data transmission. The same WEP key is required on the receiving side in order to unlock encoded data. There are 64 bit and 128 bit WEP keys.

**WEP:**

Selects "Active" or "Inactive" ("Inactive" is default.).

Range of Allowed Settings:

64 bit: 10 characters

128 bit: 26 characters

9. Press "Return to Default" to initialize the wireless LAN settings.

Press "Yes" to initialize the following settings:

- Transmission mode
- Channel
- Transmission Speed
- WEP
- SSID
- WEP Key

## SP Mode and UP Mode Settings for IEEE 802.11 a/g Wireless LAN

The following SP commands and UP modes can be set for IEEE 802.11 a/g.

SP No.	Name	Function
5840-008	transmission speed	Sets the transmission speed Auto, 54 Mbps, 48 Mbps, 36 Mbps, 24 Mbps, 18 Mbps, 12 Mbps, 9 Mbps, 6 Mbps, 11 Mbps, 5.5 Mbps, 2 Mbps, 1 Mbps (default: Auto)
5840-011	WEP Key Select	Used to select the WEP key (Default: 00).
UP mode	Name	Function

	SSID	Used to confirm the current SSID setting.
	WEP Key	Used to confirm the current WEP key setting.
	WEP Mode	Used to show the maximum length of the string that can be used for the WEP Key entry.


## Bluetooth Interface Unit Type D



### ⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.

You can only install one of the following network interfaces at a time: (IEEE 802.11 a/g g (Wireless LAN), Bluetooth).

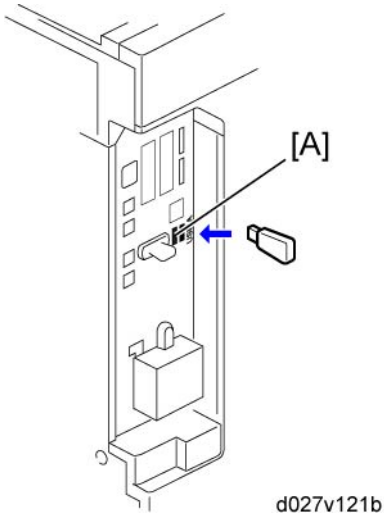

### ⚠ CAUTION

- Do not remove the Bluetooth unit while the power of the machine is on.
1. Turn off the power of the machine, and then unplug the power cable from the wall outlet.
  2. Insert the Bluetooth Interface adapter into the USB connector [A].
  3. Plug the power cable and turn on the power of the machine.
  4. Make sure that the machine can recognize the option (see 'p.155' at the end of this section).

#### ↓ Note


- The Bluetooth interface unit and the Wireless LAN interface unit can not be used simultaneously.



## Camera Direct Print Card Type J



### ⚠ CAUTION

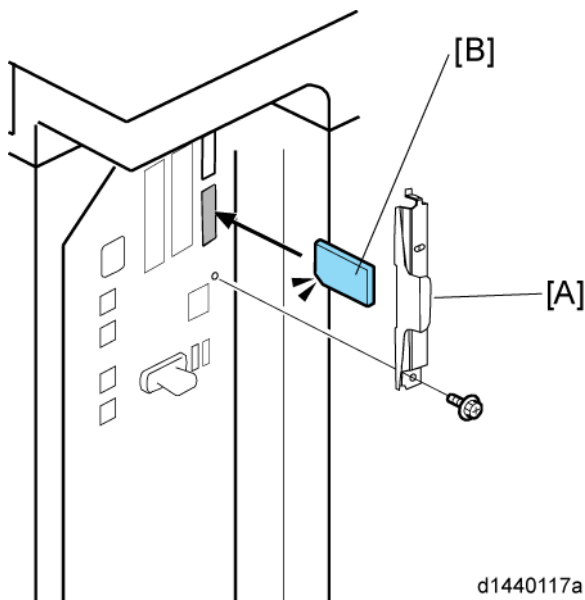- Unplug the main machine power cord before you do the following procedure.




1. Remove the SD-card slot cover [A] from the SD card slots (  x 1).
2. Insert the SD card [C] (PictBridge) in SD slot 2 (lower) with its label face [B] to the front of the machine.
3. Plug in, and then turn on the machine.
4. Move the PictBridge application from the SD card in SD slot 2 (lower) to the SD card in SD slot 1 (upper) with SP5-873-001.
5. Turn off the machine.
6. Remove the SD card from SD slot 2 (lower), and then keep it in a safe place.
7. Attach the SD-card slot cover, and then turn on the machine (  x 1).
8. Make sure that the machine can recognize the option (see 'p.155' at the end of this section).



## SD Card for Network Printing Type H



### ⚠ CAUTION

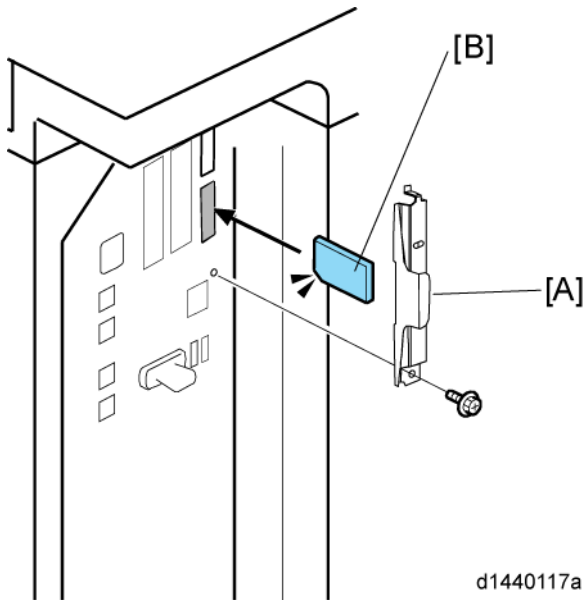- Unplug the main machine power cord before you do the following procedure.



1. Remove the SD-card slot cover [A] from the SD card slots (  x 1).
2. Insert the SD card [C] (Netware Printing) in SD slot 2 (lower) with its label face [B] to the front of the machine.
3. Plug in, and then turn on the machine.
4. Move the Netware printing application from the SD card in SD slot 2 (lower) to the SD card in SD slot 1 (upper) with SP5-873-001.
5. Turn off the machine.
6. Remove the SD card from SD slot 2 (lower), and then keep it in a safe place.
7. Attach the SD-card slot cover, and then turn on the machine (  x 1).
8. Make sure that the machine can recognize the option (see 'p.155' at the end of this section).




## Browser Unit Type F


### Installation Procedure



#### CAUTION

- Unplug the main machine power cord before you do the following procedure.

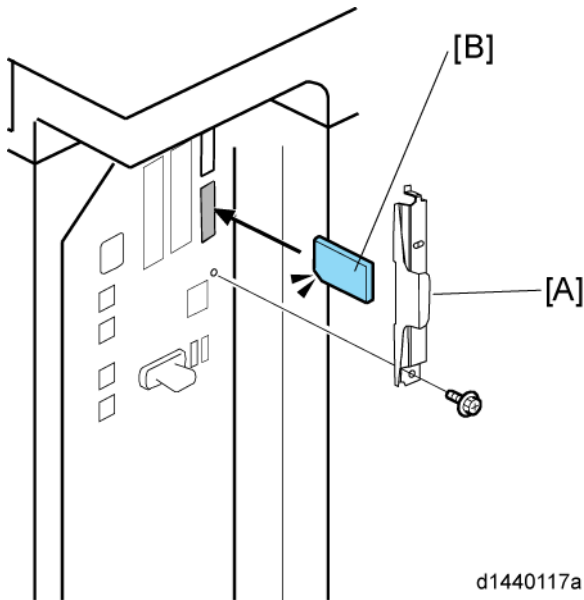



1. Remove the slot cover [A] for SD cards (  x 1).
2. Turn the SD-card label face [B] of the browser unit to the front of the machine. Then push it slowly into SD slot 2 (lower) until you hear a click.
3. Plug in and turn on the main power switch.
4. Push the "User Tools" key.
  - If an administrator setting is registered for the machine, step 5 and 6 are required. Otherwise, skip to the step 7.
5. Push the "Login/ Logout" key.
6. Login with the administrator user name and password.
7. Touch "Extended Feature Settings" twice on the LCD.
8. Touch "Install" on the LCD.
9. Touch "SD Card".
10. Touch the "Browser" line.
11. Under "Install to" touch "Machine HDD" and touch "Next".
12. When you see "Ready to Install", check the information on the screen to confirm your previous selection.
13. Touch "OK". You will see "Installing the extended feature... Please wait.", and then "Completed".
14. Touch "Exit" to go back to the setting screen.
15. Touch "Change Allocation".
16. Touch the "Browser" line.


17. Press one of the hard keys, which you want to use for the Browser Unit. In default, this function is assigned to the "Other Functions" key (bottom key of function keys).
18. Touch "OK".
19. Touch "Exit" twice to go back to the copy screen.
20. Turn off the main power switch.
21. Install the key for "Browser Unit" to the place, where you want.
22. Remove the SD card of the browser unit from SD slot 2 (lower).
23. Attach the slot cover [A] (  x 1).
24. Keep the SD card in the place (  p.138) after you install the application program from the card to HDD. This is because: The SD card can be the only proof that the user is licensed to use the application program. You may need to check the SD card and its data to solve a problem in the future.

### Browser Icon Addition

---


This procedure allows the browser icon to appear on the home screen of the operation panel.

1. Press [User Tools].

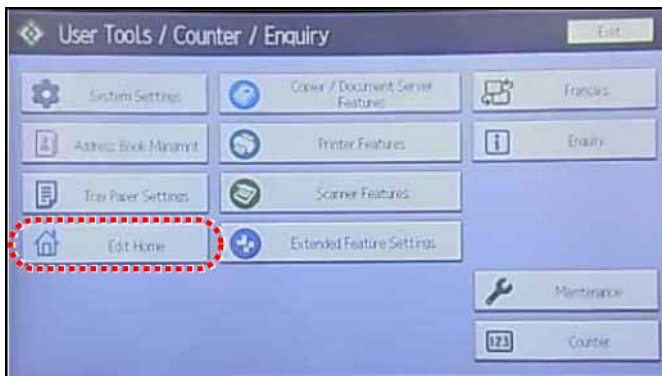


d1440144

2. Press [Edit Home].

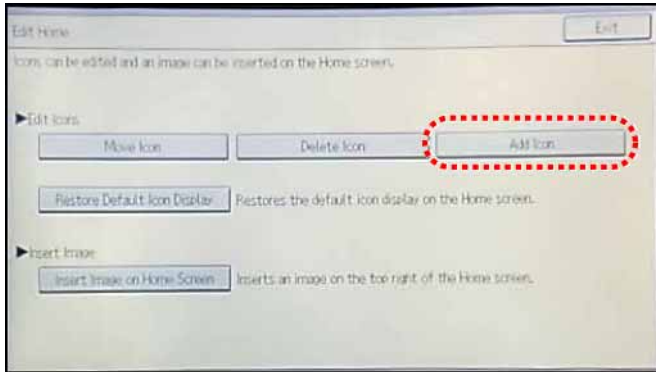


d1440145

3. Press [Add Icon].

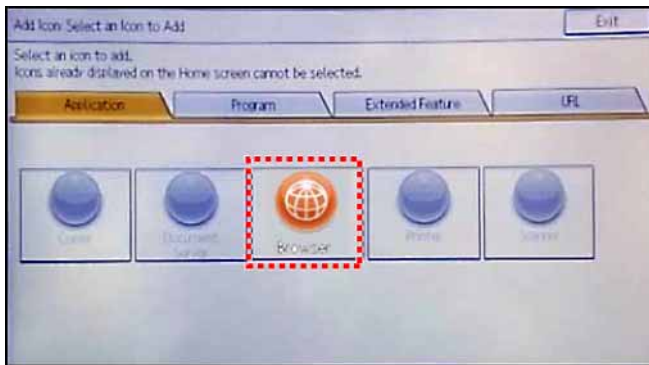

d1440146b

4. Press [Browser].

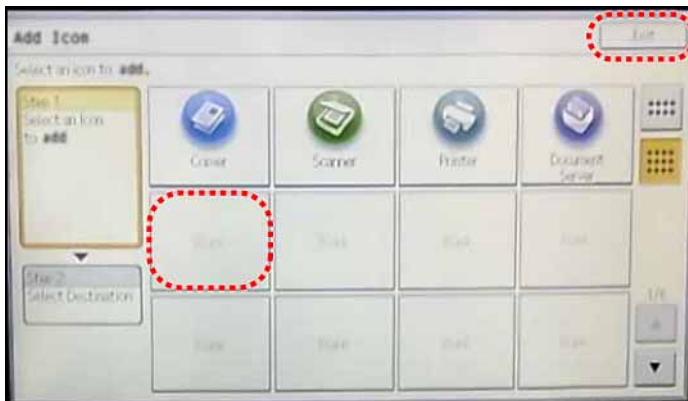

d1440147


5. Press a [Blank] to set a location for the browser icon.
6. Press [Exit] to end the fax browser icon addition.

## Gigabit Ethernet Type B



### ⚠ CAUTION


- Unplug the main machine power cord before you do the following procedure.

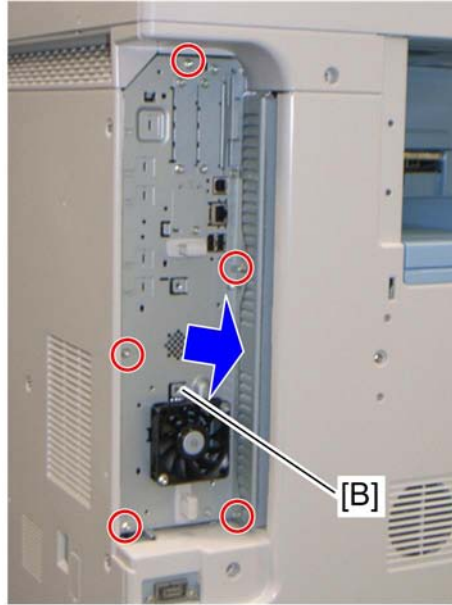2




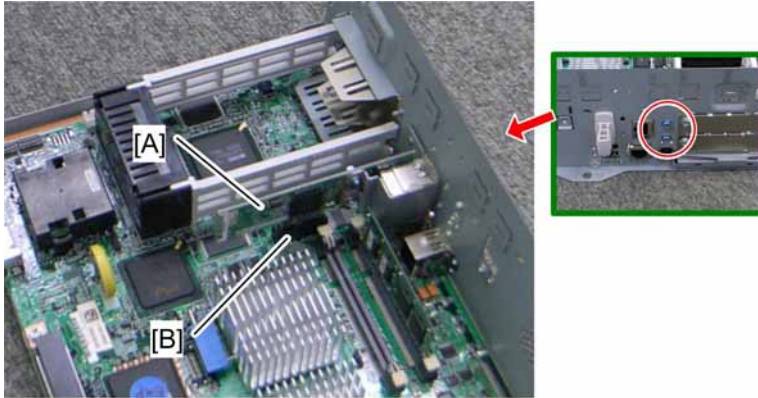
d393i101

1. Remove the controller cover [A] (  x 3).
2. Pull out the controller board [B] (  x 5).

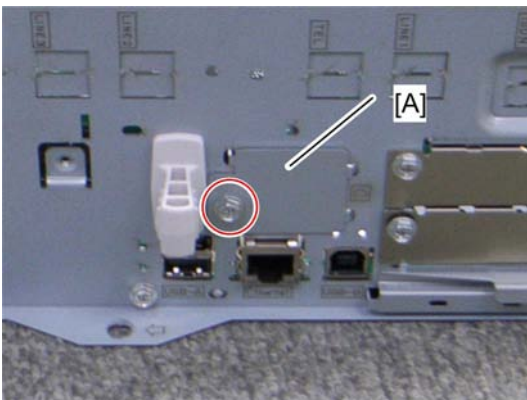


d027i409

3. Remove the slot cover [A] (  x 1).



d027i410

4. Attach the Gigabit Ethernet controller [A] into the slot [B] (  x 2).
5. Install the Ethernet connector cover included in the Gigabit Ethernet board kit on the 100M bit LAN connector.
6. Reassemble the machine.
7. Check the operation of the Gigabit Ethernet

## Check All Connections

1. Plug in the power cord. Then turn on the main switch.
2. Enter the printer user mode. Then print the configuration page.  
User Tools → Printer Settings → List Test Print → Config. Page

All installed options are shown in the "System Reference" column.



# 3. Preventive Maintenance

---

## Maintenance Tables

See "Appendices" for the following information:

- Preventive Maintenance Items
- Other Yield Parts

## PM Parts Settings

### Before Removing the Old PM Parts

1. Enter the SP mode.
2. Output the SMC logging data with SP5-990-004.
3. Set the following SPs to "1" before you turn the power off. Then, the machine will reset the PM counters automatically. In the case of developer, the developer initialization will also be done automatically.
4. Exit the SP mode.

Item	SP
Developer	Black: 3902-005 Yellow: 3902-006 Cyan: 3902-007 Magenta: 3902-008
Drum Unit	Black: 3902-009 Yellow: 3902-010 Cyan: 3902-011 Magenta: 3902-012
Heating sleeve belt unit and Pressure Roller (not necessary for complete fusing units; see below)	Heating sleeve belt: 3902-018 Pressure roller: 3902-019
Image Transfer Belt Cleaning Unit	3902-015
PTR Unit	3902-016
Toner Collection Bottle (if not full or near-full)	3902-017

#### ★ Important

- After the PM counter for the heating sleeve belt unit reaches its PM life (300K pages), the machine stops the operation automatically. Replace the heating sleeve belt unit before the machine stops its operation (stop warning: 315K pages, stop: 330K pages).
- Change the setting of SP3-902-018 from "0" to "1" before replacing the heating sleeve belt unit. Otherwise, the machine will not recover.

For the following units, there is a new unit detection mechanism. It is not necessary to reset PM counters.



- PCDU
- Development unit
- Toner Collection Bottle (if full or near-full)
- Fusing unit

---

## After installing the new PM parts

---

1. Turn on the main power switch.
2. Output the SMC logging data with SP5-990-004 and check the counter values.
3. Make sure that the PM counters for the replaced units are "0" with SP7-803. If the PM counter for a unit was not reset, then reset that counter with SP 7-804.
4. Make sure that the exchange counter counts up with SP7-853.
5. Make sure that the counters for the previous units (SP7-906) on the new SMC logging data list (from step 2 above) are equal to the counters (SP7-803) for these units on the previous SMC logging data list (the list that was output in the "Before removing the old parts" section).
6. Make sure that the unit replacement date is updated with SP7-950.

3

---

## Preparation before operation check

---

1. Clean the exposure glasses (for DF and book scanning).
2. Enter the user tools mode.
3. Do the "Automatic Color Calibration(ACC)" for the copier mode & printer mode as follows:
  - Print the ACC test pattern (User Tools → Maintenance → ACC → Start).
  - Put the printout on the exposure glass.
  - Put 10 sheets of white paper on the test chart. This ensures the precise ACC adjustment.
  - Close the ARDF or the platen cover.
  - Press "Start Scanning" on the LCD. Then, the machine starts the ACC.
4. Exit the User Tools mode, and then enter the SP mode.
5. Do the "Forced line position adjustment" as follows.
  - First do SP2-111-3 (Mode c).
  - Then do SP2-111-1 (Mode a).
  - To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.
6. Exit the SP mode.

---

## Operation check

---

Check if the sample image has been copied normally.

# 4. Replacement and Adjustment

---

## Beforehand

### CAUTION

- Before installing options, please do the following:
- If there is a fax unit in the machine, print out all messages stored in the memory, the lists of user-programmed items, and the system parameter list.
- If there are printer jobs in the machine, print out all jobs in the printer buffer.
- Turn off the main switch and disconnect the power cord, the telephone line, and the network cable.

### Important

- Always touch a grounded surface to discharge static electricity from your hands before you handle SD cards, printed circuit boards, or memory boards.

## Special Tools

Part Number	Description	Q'ty
B645 5010	SD Card	1
B645 6705	PCMCIA Card Adapter	1
B645 6820	USB Reader/Writer	1
VSSM9000	Digital Multimeter – FLUKE87	1
G021 9350	Loop-back Connector – Parallel *NOTE	1
C401 9503	20X Magnification Scope	1
A257 9300	Grease Barrierta – S552R	1
5203 9502	Silicone Grease G-501	1
A092 9503	C4 Color Test Chart (3 pcs/set)	1
A184 9501	Optics Adjustment Tool (2 pcs / set)	2
B679 5100	Plug - IEEE1284 Type A	1
B132 9700	Lubricant Powder	1

### ↓ Note

- The "Loop-back Connector–Parallel" requires the "Plug-IEEE1284 Type A", and the optional IEEE1284 interface option must also be installed.

# Image Adjustment

## Scanning


Check the printing registration/side-to-side adjustment and the blank margin adjustment before you do the following scanner adjustments.

### Note

- Use S-2-1 test chart to do the following adjustments.

## Scanner sub-scan magnification

4

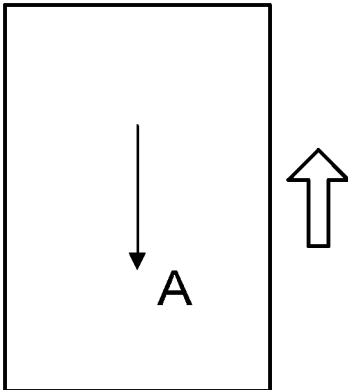


A: Sub-scan magnification

1. Put the test chart on the exposure glass. Then make a copy from one of the feed stations.
2. Check the magnification ratio. Adjust with SP4-008 if necessary.

Standard:  $\pm 1.0\%$ .

### Scanner leading edge and side-to-side registration

4

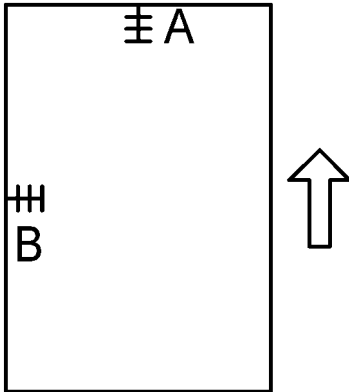


A: Leading Edge Registration

1. Put the test chart on the exposure glass. Then make a copy from one of the feed stations.
2. Check the leading edge and side-to-side registration. Adjust the following SP modes if necessary.  
Standard:  $0 \pm 2\text{mm}$  for the leading edge registration,  $0 \pm 2.5\text{mm}$  for the side-to-side registration.

	SP mode
Leading Edge Registration	SP4-010-001
Side-to-Side Registration	SP4-011-001

### ARDF

#### ARDF side-to-side, leading edge registration and trailing edge

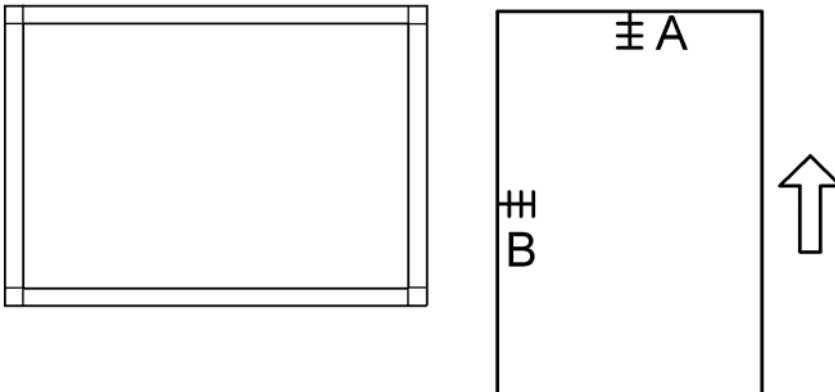

**A: Leading edge registration**

Use A3/DLT paper to make a temporary test chart as shown above.

1. Put the temporary test chart on the ARDF. Then make a copy from one of the feed stations.
2. Check the registration. Check the leading edge and side-to-side registration. Adjust the following SP modes if necessary.

Standard:  $4.2 \pm 2$  mm for the leading edge registration,  $2 \pm 1$  mm for the side-to-side registration. Use the following SP modes to adjust if necessary.

SP Code	What It Does	Adjustment Range
SP6-006-001	Side-to-Side Regist: Front	$\pm 3.0$ mm
SP6-006-003	Leading Edge Registration	$\pm 5.0$ mm
SP6-006-005	Buckle: Duplex Front	$\pm 3.0$ mm
SP6-006-006	Buckle: Duplex Rear	$\pm 2.5$ mm
SP6-006-007	Rear Edge Erase (Trailing Edge)	$\pm 10.0$ mm

**ARDF sub-scan magnification**

1. Put the temporary test chart on the ARDF. Then make a copy from one of the feed stations.
2. Check the magnification ratio. Adjust with SP6-017-001 if necessary.
  - Standard:  $\pm 5.0\%$
  - Reduction mode:  $\pm 1.0\%$
  - Enlargement mode:  $\pm 1.0\%$


---

## Registration

---

### Image Area

---

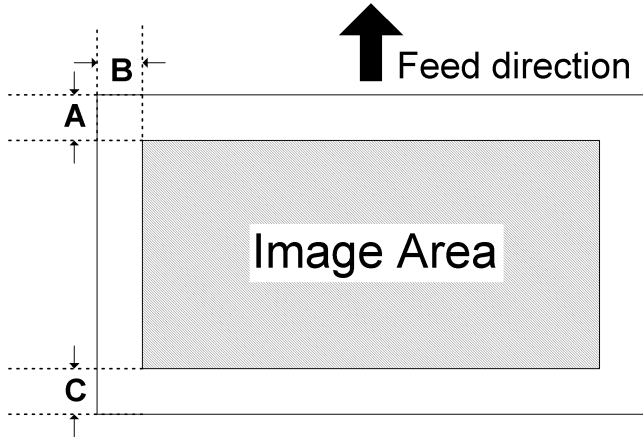

$A = C = 5.2 \text{ mm (0.2")}$ ,  $B = 2.0 \text{ mm}$

Make sure that the registration is adjusted within the adjustment standard range as shown below.

### Leading Edge

---

Adjusts the leading edge registration for each paper type and process line speed.

### Side to Side

---

Adjusts the side-to-side registration for each paper feed station. Use SP mode (SP1-002) to adjust the side-to-side registration for the optional paper feed unit, LCT, and duplex unit.

### Adjustment Standard

---

- Leading edge (sub-scan direction):  $5.2 \pm 2 \text{ mm}$
- Side to side (main-scan direction):  $2 \pm 1 \text{ mm}$

### Paper Registration Standard

---

The registration in both main- and sub-scan directions can change within the following tolerance.

- Sub-scan direction:  $0 \pm 9 \text{ mm}$
- Main-scan direction:  $0 \pm 4 \text{ mm}$



---

## Adjustment Procedure

---

1. Enter SP2-109-003.
2. Print out the test pattern (14: 1-dot trimming pattern) with SP2-109-003.

**Note**

- Registration can change slightly as shown on the previous page. Print some pages of the 1-dot trimming pattern for step 3 and 4. Then average the leading edge and side-to-side registration values, and adjust each SP mode.
3. Do the leading edge registration adjustment.
    - 1) Check the leading edge registration and adjust it with SP1-001.
    - 2) Select the adjustment conditions (paper type and process line speed).
    - 3) Input the value. Then press the  $\oplus$  key.
    - 4) Generate a trim pattern to check the leading edge adjustment.
  4. Do the side-to-side registration adjustment.
    - 1) Check the side-to-side registration and adjust it with SP1-002.
    - 2) Select the adjustment conditions (paper feed station).
    - 3) Input the value. Then press the  $\oplus$  key.
    - 4) Generate a trim pattern to check the leading edge adjustment.


---

## Erase Margin Adjustment

---

**Note**

- Adjust the erase margin C and D only if the registration (main scan and sub scan) cannot be adjusted within the standard values. Do the registration adjustment after adjusting the erase margin C and D, and then adjust the erase margin A and B.

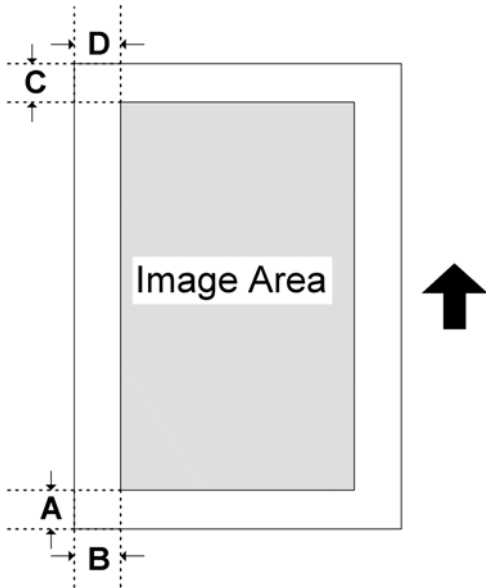

4

1. Enter SP2-109-003.
2. Print out the test pattern (14: 1-dot trimming pattern) with SP2-109-003.
3. Check the erase margin A and B. Adjust them with SP2-103-001 to -015 if necessary.
  - Leading edge: 0.0 to 9.0 mm (default: 4.2 mm)
  - Side-to-side: 0.0 to 9.0 mm (default: 2.0 mm)
  - Trailing edge: 0.0 to 9.0 mm (default: 4.2 mm)

---

## Color Registration

---

### Line Position Adjustment

---

The automatic line position adjustment usually is done for a specified condition to get the best color prints.

Do the following if color registration shifts:

- Do "Auto Color Registration" as follows to do the forced line position adjustment.
  1. First do SP2-111-3.
  2. Then do SP2-111-1.

To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.

- You should also do the line position adjustment at these times:

- After you transport or move the machine (you should do the forced line position adjustment if you install the machine at the user location.) if the machine is pre-installed at the workshop and moved to the user location,
- When you open the drum positioning plate
- When you remove or replace the motors, clutches, and/or gears related to the drum/development/transfer sections
- When you remove or replace the image transfer belt, image transfer belt unit or laser optical housing unit

## Printer Gamma Correction

### ↓ Note

- The ACC is usually sufficient to adjust the color balance to get the best print output. You only need the printer gamma correction to fine-tune to meet user requirements.

Use SP modes if you want to modify the printer gamma curve created with ACC. You can adjust the gamma data for the following:

- Highlight
- Middle
- Shadow areas
- IDmax.

The adjustable range is from 0 to 30 (31 steps).

## Copy Mode

### - KCMY Color Balance Adjustment -

The adjustment uses only "Offset" values.


### ↓ Note

- Never change "Option" values (default value is 0).

Highlight (Low ID)	Levels 2 through 5 in the C4 chart 10-level scale
Middle (Middle ID)	Levels 3 through 7 in the C4 chart 10-level scale
Shadow (High ID)	Levels 6 through 9 in the C4 chart 10-level scale
ID max	Level 10 in the C4 chart 10-level scale (affects the entire image density.)
Offset	The higher the number in the range associated with the low ID, middle ID, high ID, and ID max, the greater the density.

There are four adjustable modes (can be adjusted with SP4-918-009):

- Copy Photo mode
- Copy Letter mode
- Copy Letter (Single Color) mode
- Copy Photo (Single Color) mode

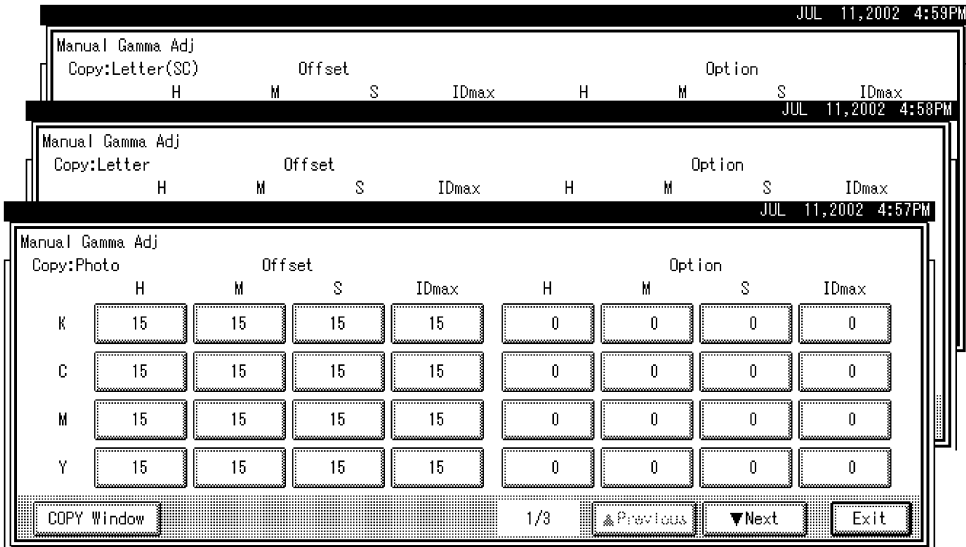

**- Adjustment Procedure -**

 
 
 
 
1. Copy the C-4 chart in the mode that you want to adjust.
2. Enter the SP mode.
3. Select "System SP."
4. Select SP4-918-009.
5. Adjust the offset values until the copy quality conforms to the standard (see the table below).

**Note**





- 1. Never change "Option" value (default value is "0").
- 2. Adjust the density in this order: "ID Max", "Middle", "Shadow", "Highlight".

**- Photo Mode, Full Color -**





	Item to Adjust	Level on the C-4 chart	Adjustment Standard										
1	ID max: (K, C, M, and Y)	<table border="1"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td> </tr> </table>	1	2	3	4	5	6	7	8	9	10	Adjust the offset value so that the density of level 10 matches that of level 10 on the C-4 chart.
1	2	3	4	5	6	7	8	9	10				

2	Middle (Middle ID) (K, C, M, and Y)		Adjust the offset value so that the density of level 6 matches that of level 6 on the C-4 chart.
3	Shadow (High ID) (K, C, M, and Y)		Adjust the offset value so that the density of level 8 matches that of level 8 on the C-4 chart.
4	Highlight (Low ID) (K, C, M, and Y)		Adjust the offset value so that dirty background does not show on the copy and the density of level 3 is slightly lighter than that of level 3 on the C-4 chart.
5	K Highlight (Low ID) (C, M, and Y) <on the full color copy>		Adjust the offset value so that the color balance of black scale levels 3 through 5 in the copy is seen as gray (no C, M, or Y should be visible). If the black scale contains C, M, or Y, do steps 1 to 4 again.





## - Photo Mode, Single Color -

    	Item to Adjust	Level on the C-4 chart	Adjustment Standard
1	ID max: (K)		Adjust the offset value so that the density of level 10 matches that of level 10 on the C-4 chart.
2	Middle (Middle ID) (K)		Adjust the offset value so that the density of level 6 matches that of level 6 on the C-4 chart.
3	Shadow (High ID) (K)		Adjust the offset value so that the density of level 8 matches that of level 8 on the C-4 chart.
4	Highlight (Low ID) (K)		Adjust the offset value so that dirty background does not show on the copy and the density of level 3 is slightly lighter than that of level 3 on the C-4 chart.

    - Text (Letter) Mode, Full Color -

	Item to Adjust	Level on the C-4 chart (K)	Adjustment Standard
1	ID max: (K, C, M, and Y)		Adjust the offset value so that the density of level 10 matches that of level 10 on the C-4 chart.
2	Middle (Middle ID) (K, C, M, and Y)		Adjust the offset value so that the density of level 6 matches that of level 6 on the C-4 chart.
3	Shadow (High ID) (K, C, M, and Y)		Adjust the offset value so that the density of level 8 matches that of level 8 on the C-4 chart.
4	Highlight (Low ID) (K, C, M, and Y)		Adjust the offset value so that dirty background does not show on the copy and the density of level 3 is slightly lighter than that of level 3 on the C-4 chart.

    - Text (Letter) Mode, Single Color -

	Item to Adjust	Level on the C-4 chart (K)	Adjustment Standard
1	ID max: (K)		Adjust the offset value so that the density of level 10 matches that of level 10 on the C-4 chart.
2	Middle (Middle ID) (K)		Adjust the offset value so that the density of level 6 matches that of level 6 on the C-4 chart.
3	Shadow (High ID) (K)		Adjust the offset value so that the density of level 8 matches that of level 8 on the C-4 chart.
4	Highlight (Low ID) (K)		Adjust the offset value so that dirty background does not show on the copy and the density of level 3 is slightly lighter than that of level 3 on the C-4 chart.

### ↓ Note

- Text parts of the test pattern cannot be printed clearly after you adjust "shadow" as shown above. At this time, check if the 5 line/mm pattern at each corner is printed clearly. If it is not, adjust the offset value of "shadow" again until it is.

## Printer Mode

There are six adjustable modes (select these modes with printer SP1-102-001):

- 1200 x 1200 photo mode
- 1200 x 1200 text mode
- 2400 x 600 photo mode
- 2400 x 600 text mode
- 1800 x 600 photo mode
- 1800 x 600 text mode
- 600 x 600 photo mode
- 600 x 600 text mode

	K	C	M	Y
Highlight	SP1-104-1	SP1-104-21	SP1-104-41	SP1-104-61
Shadow	SP1-104-2	SP1-104-22	SP1-104-42	SP1-104-62
Middle	SP1-104-3	SP1-104-23	SP1-104-43	SP1-104-63
IDmax	SP1-104-4	SP1-104-24	SP1-104-44	SP1-104-64

### - Adjustment Procedure -

1. Do ACC for the printer mode.
2. Turn the main power off and on.
3. Enter SP mode.
4. Select "Printer SP".
5. Select SP1-102-001. Then select the necessary print mode to adjust.
6. Choose SP1-103-1 to print out a tone control test sheet if you want to examine the image quality for these settings.
7. Adjust the color density with SP1-104. Compare the tone control test sheet with the C4 test chart.

### ↓ Note

- Adjust the density in this order: "ID Max", "Shadow", "Middle", "Highlight".
8. Use SP1-105-001 to keep the adjusted settings.

## Exterior Covers


### Front Door

4



d1440041

1. Open the front door [A].

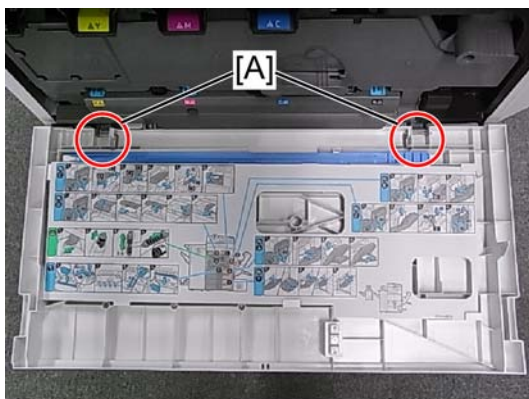


d1440042

2. Remove the two pins [A], and then remove the front cover.



## Controller Cover

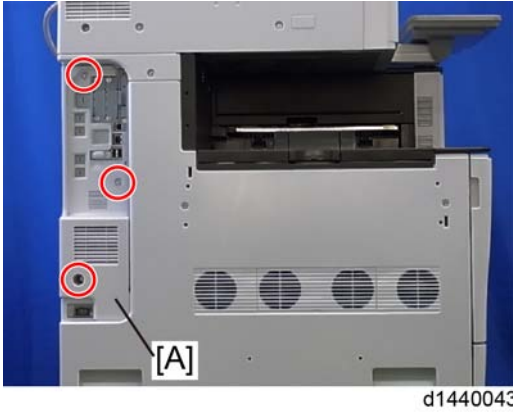


1. Controller cover [A] (  x 3)


## Left Cover

1. Controller cover (  p.175)






2. Left cover [A] (  x 6)

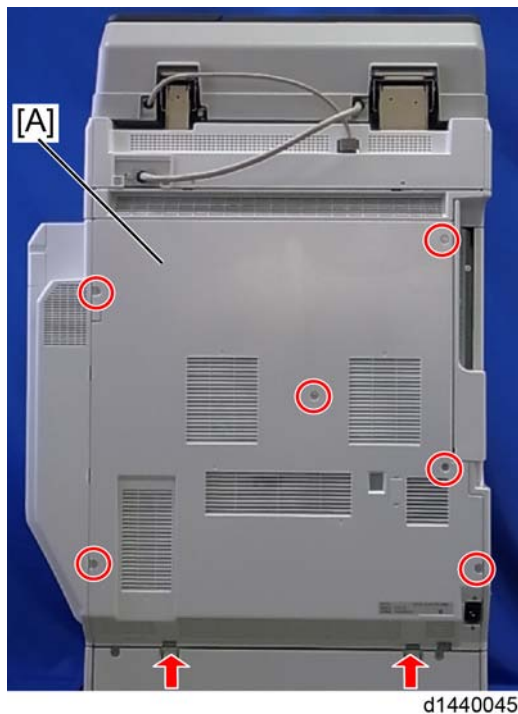
## Rear Cover




1. Rear cover [A] (  x 6)

## Right Rear Cover

1. Rear cover (  p.176)
2. Scanner right cover (  p.182)
3. Right top cover [D] (  p.182)

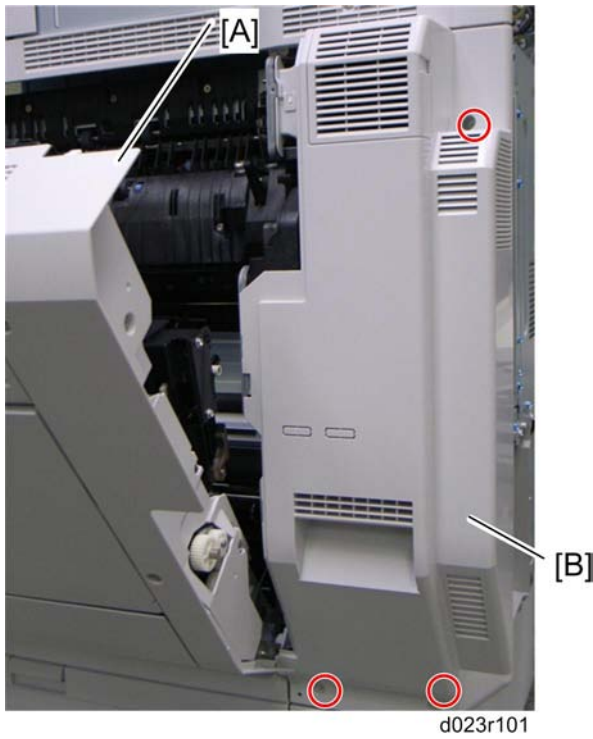


4. Open the right door [A].
5. Right rear cover [B] (  x 3)

## Operation Panel

1. Open the right door.




2. Front right cover [A] (  x 1)

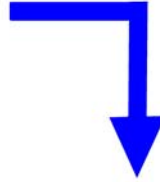

d1420014

4


- 3. Turn the operation panel upright.
- 4. Scanner front cover (🔧 p.185)

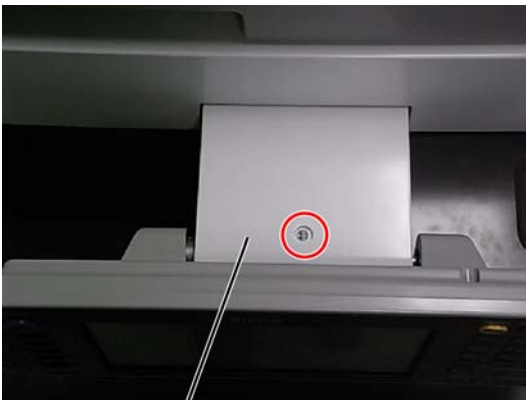

[A]

d1440047


- 5. Upper cover [A] (🔧 x 1)

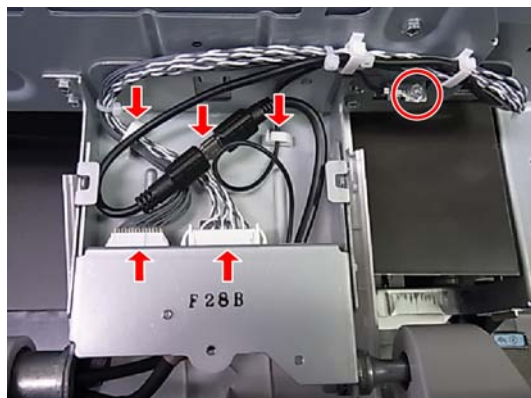

d1440048

6. Disconnect the connectors and the ground cable (🔌 x 3, 🖨️ x 2, 🔌 x 1).
7. Return the operation panel to the flat position.

4

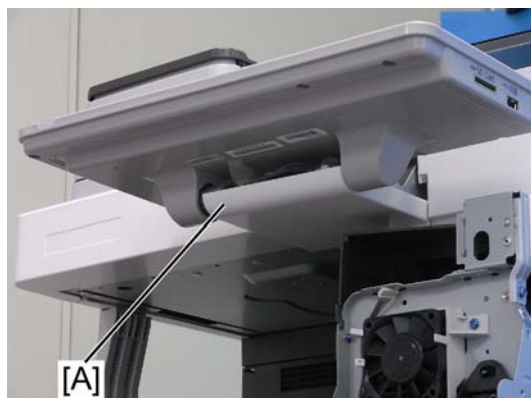


d1420002




d1420003

8. Take off the under cover [A] (hook x 1)
9. Turn the operation panel upright.

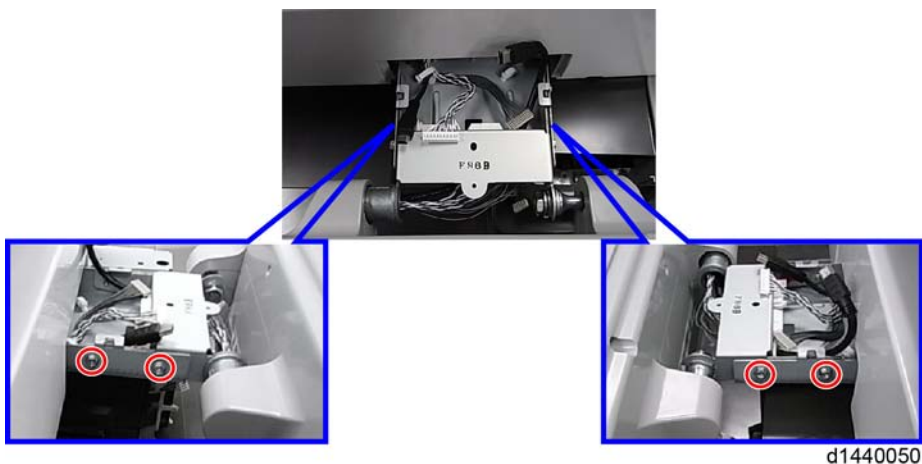

4

10. Operation panel (  x 4)




d1420001

---

## Paper Exit Cover

---

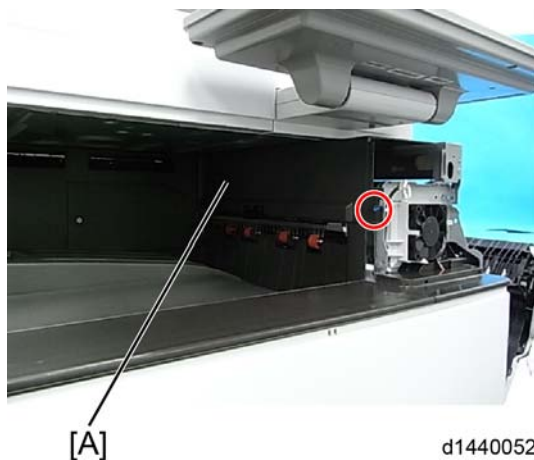


1. Front right cover (  p.177)





2. Paper exit cover [A] (  x 1, hook x 1 )

4

## Inner Tray

1. Image transfer belt unit (  Image Transfer Belt Unit )
2. Paper exit cover (  p.180 )
3. Left cover (  p.175 )

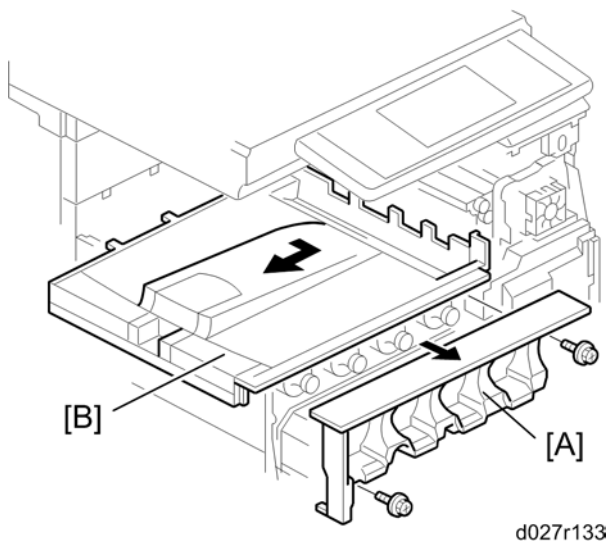

4. Toner cartridge cover [A] (  x 2 )
5. Inner tray [B]

---


## Ozone Filter and Dust Filter

---



### Ozone filters for the scanner unit


---

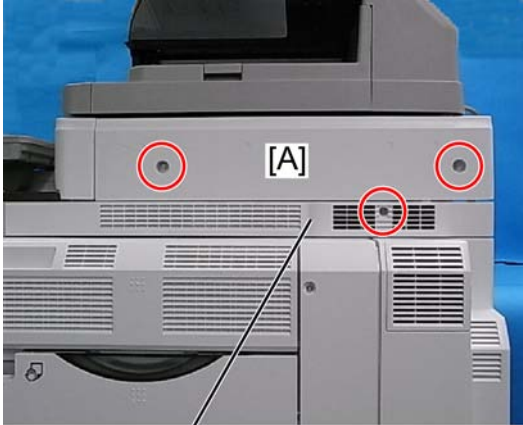4



d1440053

1. Scanner right cover [A] (  x 2)
2. Right top cover [B] (  x 1)

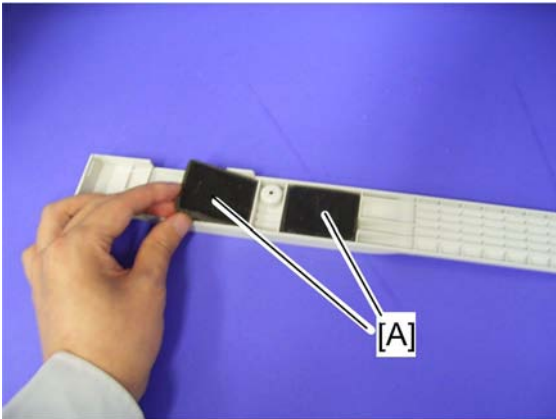


d027r671

3. Ozone filters [A] in the right top cover.




## Ozone filter and dust filter for the AC controller

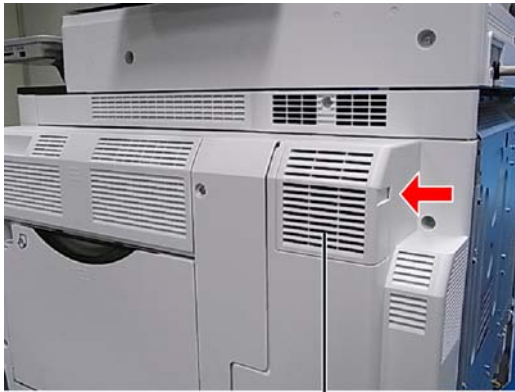

[A] d1440054

1. AC controller board fan cover [A] (hook x 1)

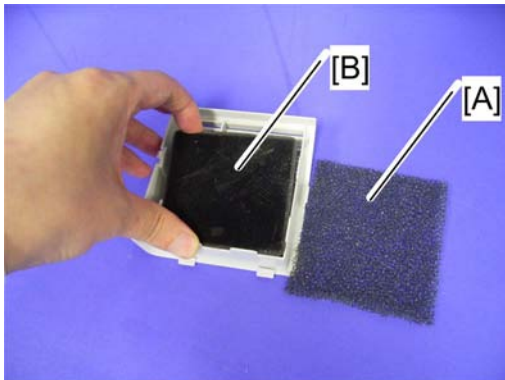

d027r673

2. Dust filter [A]
3. Ozone filter [B]


# Scanner Unit


## Exposure Glass

4




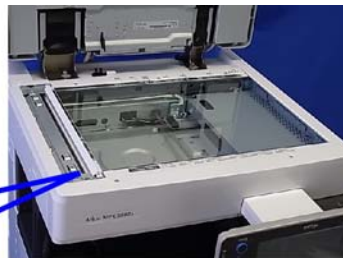
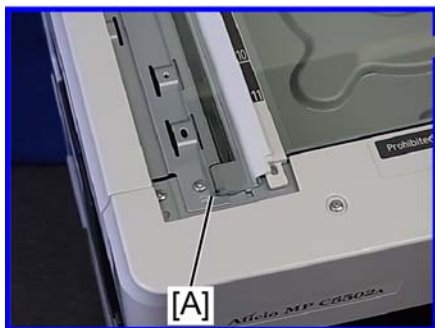
d1440063

1. Glass cover [A] (  x 2)
2. ARDF exposure glass [B]

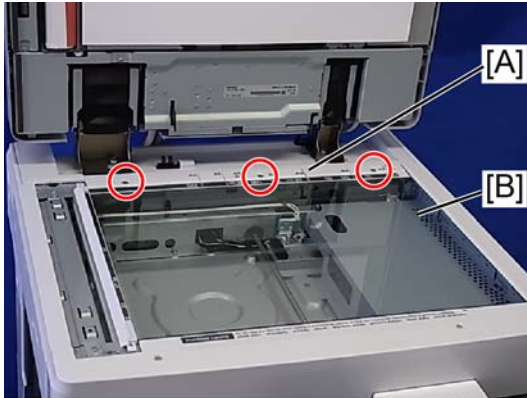

d1440064

3. Rear scale [A] (  x 3)
4. Exposure glass with left scale [B]



d1440065


4

**Note**

- Position the black or blue marker [A] at the front-left corner when you reattach the ARDF exposure glass.

**Exposure Lamp**

1. Exposure glass (p.184)
2. Upper cover (p.177)

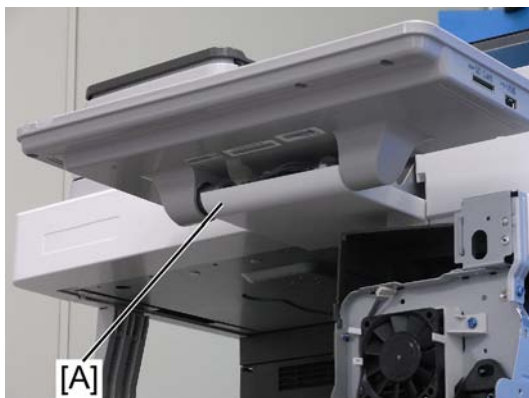


d1420002




d1420003


4

3. Remove the under cover [A] (hook x 1)

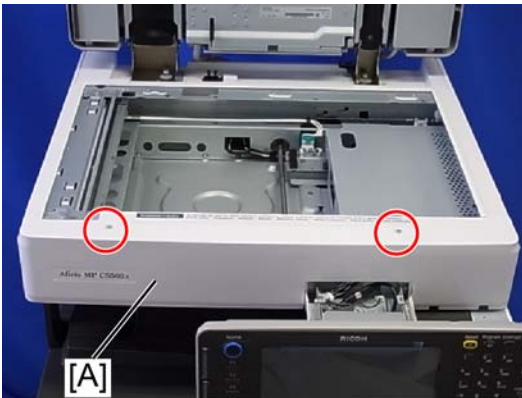


d1440066

4. Scanner front cover (  x 2)

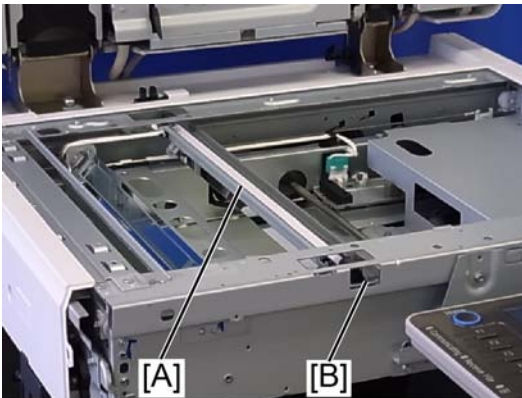


d1440067

5. Move the 1st scanner carriage [A] to the cutout [B] in the front frame.

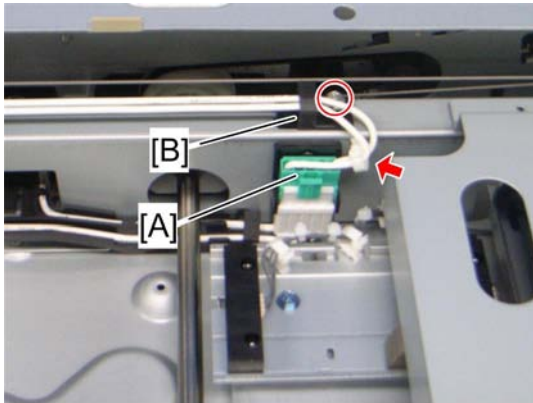


d088r105

6. Disconnect the connector [A] and clamp. (🔌 x 1, 🛠️ x 1)
7. Remove the clamp bracket [B]. (🔧 x 1)

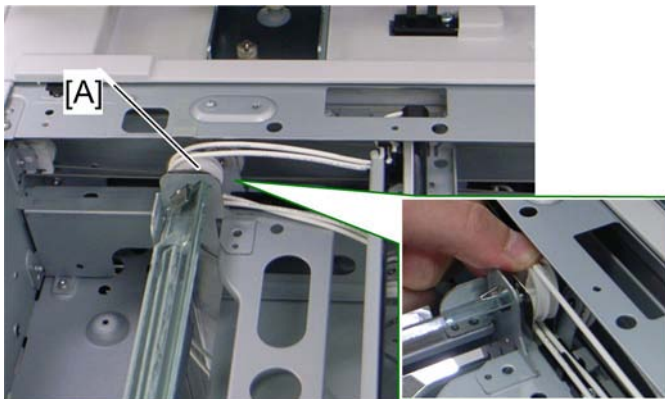


d027r107

8. Remove the pulley [A].

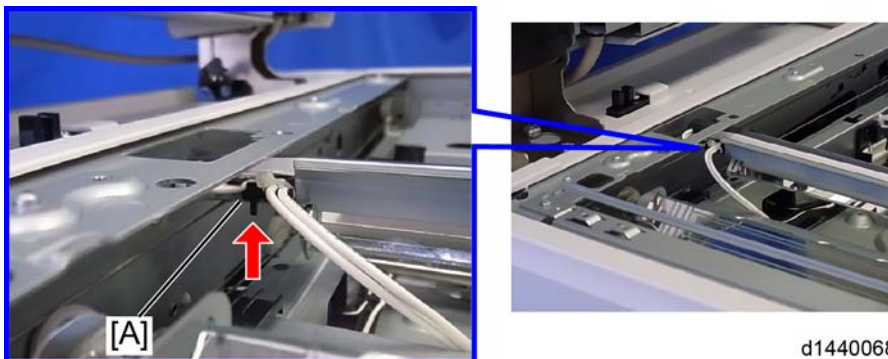

d1440068


9. Remove the plastic bracket [A]. (hook x 1)

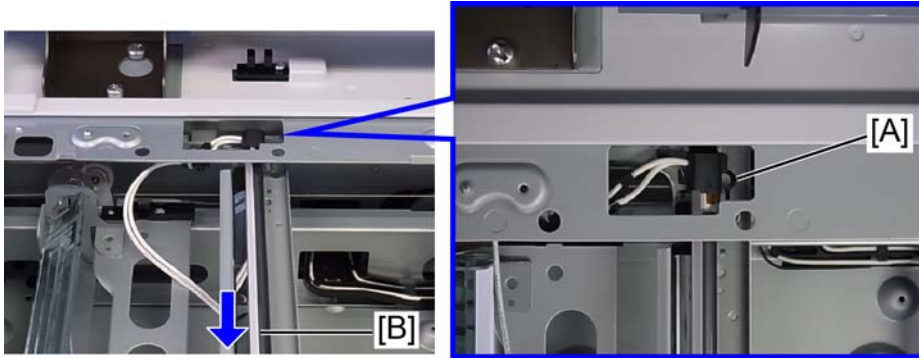

d1440069

10. Hold down the snap [A], and then slide the exposure lamp [B] to the front side.

4

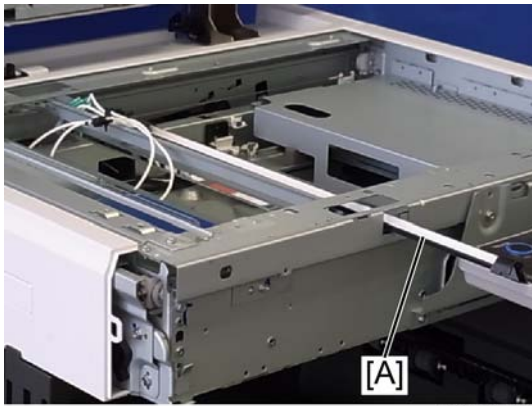


d1440072

11. Pull out the exposure lamp from the cutout.






d1440073
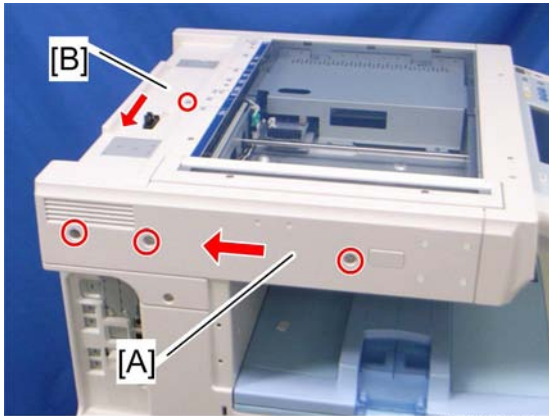
## Scanner Motor






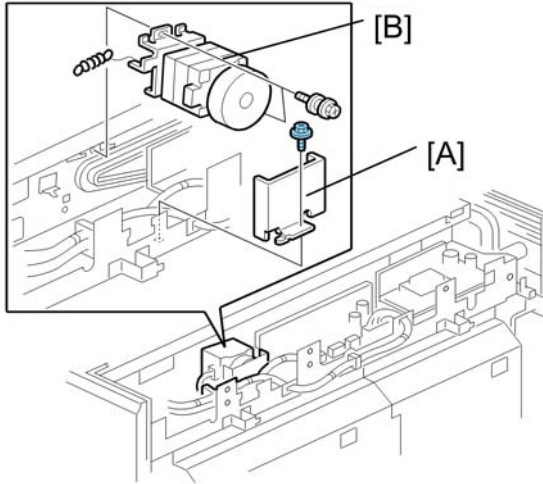
b088r517

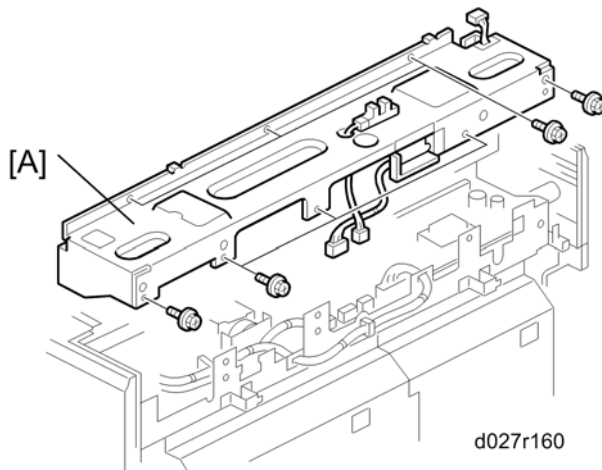1. Scanner left cover [A] (  x 3 )
2. Scanner rear cover [B] (  x 1 )






d027r160

3. Scanner rear frame [A] (  x 8,  x 3,  x 1 )




d027r161b

4


4. Scanner motor bracket [A] (  x 1 )
5. Scanner motor [B] (  x 2,  x 1, spring x 1, belt x 1 )

**Note**


- After replacing the scanner motor, do the image adjustments in the following section of the manual (  p.163 in the "Image Adjustment" section).

## Sensor Board Unit (SBU)


1. Exposure glass (  p.184 )

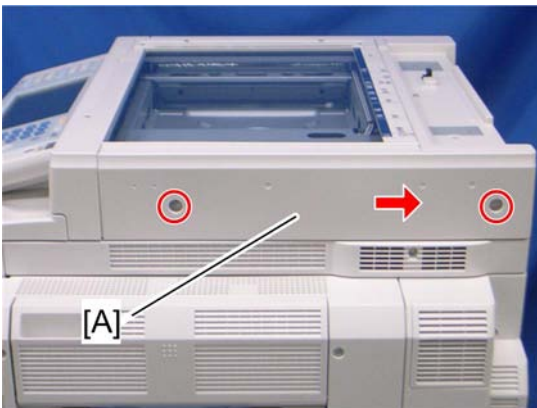

d088r733


2. Scanner right cover [A] (  x 2 )



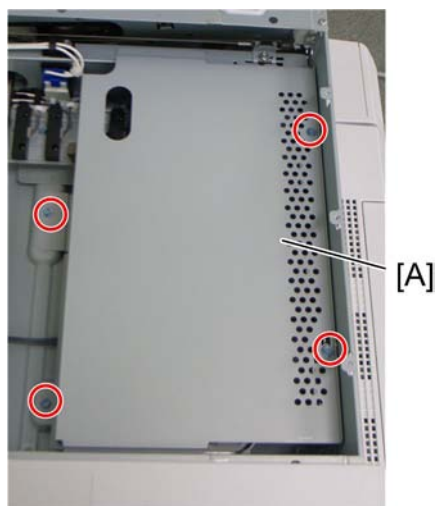

d027r109

3. SBU cover bracket [A] (🔩 x 4)

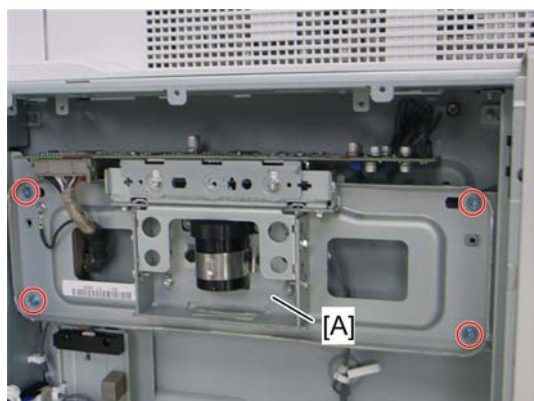

d027r110

4. Sensor board unit [A] (🔩 x 4, 📡 x 2, ground cable x 1)

## When reassembling

Adjust the following SP modes after you replace the sensor board unit:


- SP4-008 (Sub Scan Mag): See "Image Adjustment: Scanning".
- SP4-010 (Sub Mag Reg.): See "Image Adjustment: Scanning".
- SP4-011 (Main Scan Reg): See "Image Adjustment: Scanning".
- SP4-688 (DF: Density Adjustment): Use this to adjust the density level if the ID of outputs made in the DF and Platen mode is different.

---


## Original Length Sensors

---

1. Exposure glass with left scale (🔧 p.184)
2. SBU cover bracket (🔧 p.190)

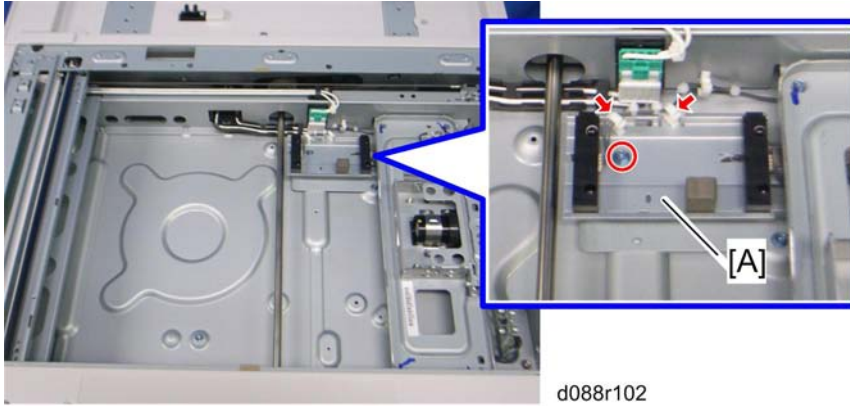

3. Original length sensor bracket [A] (🔧 x 1, 📏 x 2, 📏 x 2)

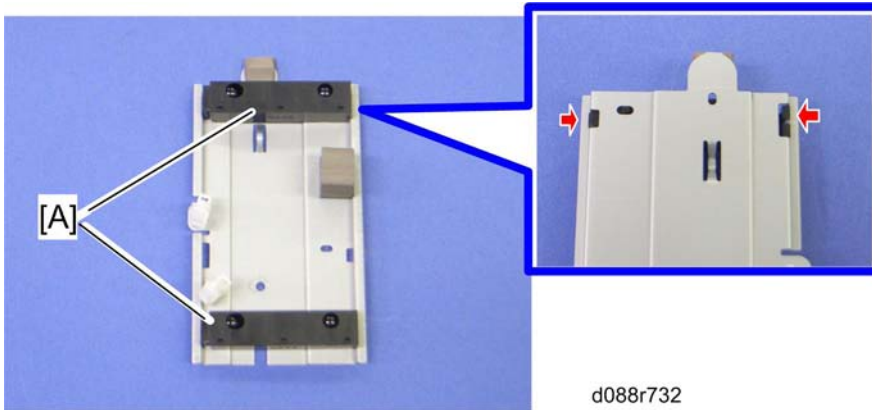


4. Original length sensors [A] (hooks)

---

## Exposure Lamp Stabilizer



---

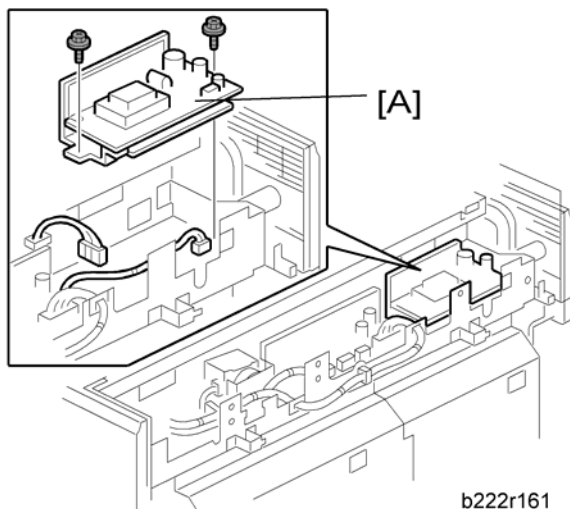
1. Scanner rear cover (🔧 p.189)
2. Scanner rear frame (🔧 p.189)



3. Exposure lamp stabilizer [A] (  x 2,  x 2 )

## SIO (Scanner In/Out) Board

1. Scanner rear cover (  p.189 )
2. Scanner rear frame (  p.189 )

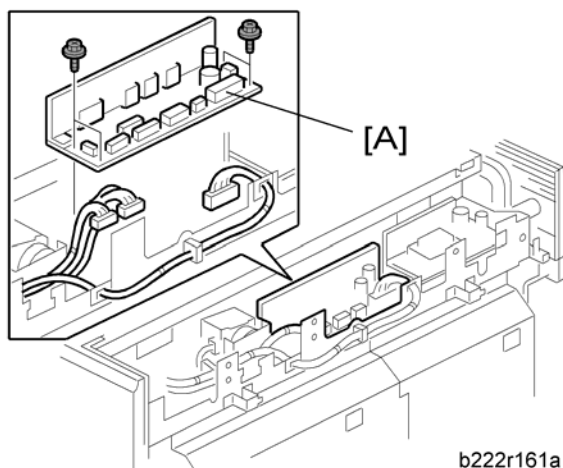


3. SIO board with bracket [A] (  x 4, All s )

## Scanner HP Sensor


1. Scanner left cover and Scanner rear cover (  p.189 )

2. Exposure glass (🔧 p.184)

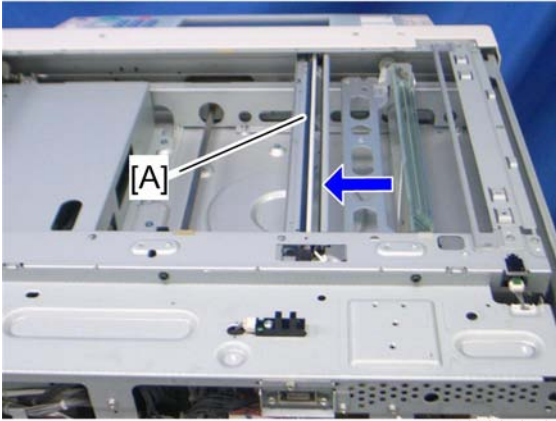

d088r111

3. Move the 1st scanner carriage [A] to the right side.

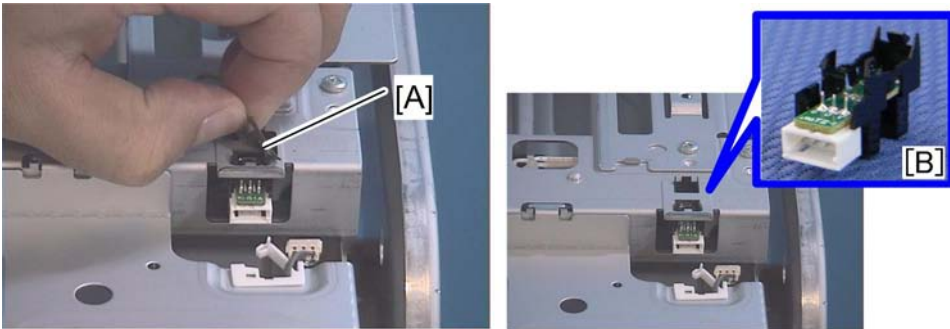

d027r524


4. Remove the mylar [A]
5. Remove the scanner HP sensor [B] (🔧 x 1, three snaps)

---

## Platen Cover Sensor

---

1. Scanner left cover and Scanner rear cover (🔧 p.189)

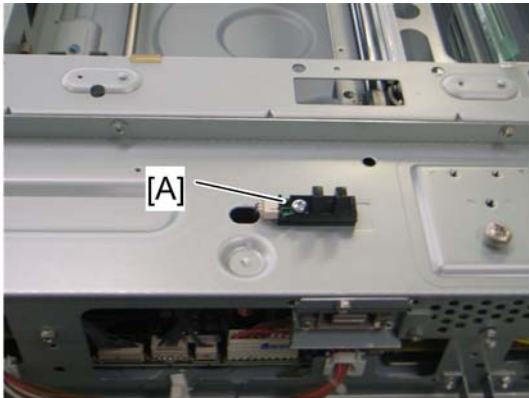




d027r112

2. Platen cover sensor [A] (  x 1,  x 1)



4

## Front Scanner Wire

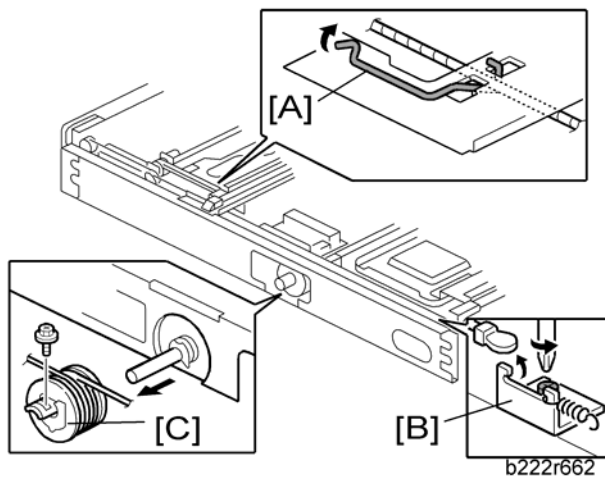
1. Operation panel with the scanner front cover (  p.177)
2. Front frame (  p.185)
3. To make reassembly easy, slide the 1st scanner carriage to the right.



b222r662

4. Front scanner wire clamp [A]
5. Front scanner wire bracket [B] (  x 1)
6. Front scanner wire and scanner drive pulley [C] (  x 1)


### Reassembling the Front Scanner Wire

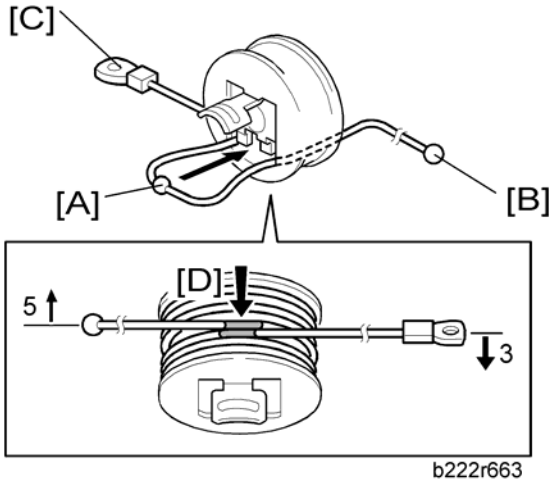

1. Position the center ball [A] in the middle of the forked holder.
2. Pass the right end (with the ball) [B] through the square hole. Pass the left end (with the ring) [C] through the notch.
3. Wind the right end counterclockwise (shown from the machine's front) five times. Wind the left end clockwise twice.

**Note**

- The two red marks [D] come together when you have done this. Stick the wire to the pulley with tape. This lets you easily handle the assembly at the time of installation.

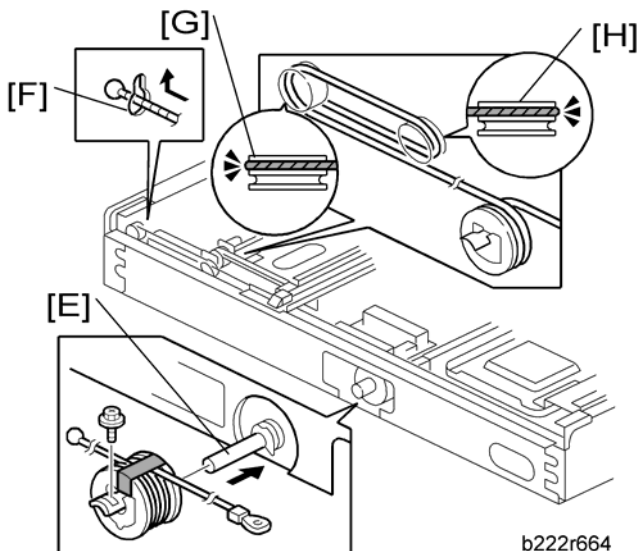


4. Install the drive pulley on the shaft [E].

**Note**

- Do not attach the pulley to the shaft with the screw at this time.


5. Insert the left end into the slit [F]. The end should go via the rear track of the left pulley [G] and the rear track of the movable pulley [H].

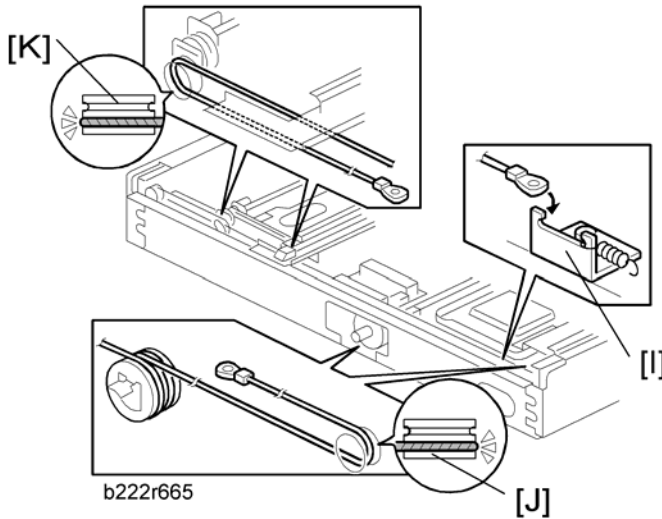

6. Hook the right end onto the front scanner wire bracket [I]. The end should go via the front track of the right pulley [J] and the front track of the movable pulley [K].

**Note**

- Do not attach the scanner wire bracket with the screw at this time.

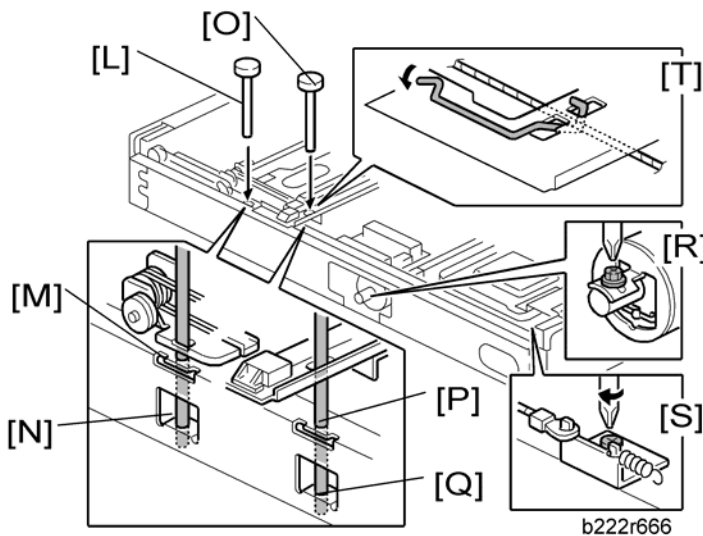


7. Remove the tape from the drive pulley.
8. Insert a scanner-positioning pin [L] through the 2nd carriage hole [M] and the left holes [N] in the front rail. Insert another scanner positioning pin [O] through the 1st carriage hole [P] and the right holes in the front rail [Q].
9. Insert two more scanner positioning pins through the holes in the rear rail.
10. Screw the drive pulley to the shaft [R].
11. Screw the scanner wire bracket to the front rail [S].
12. Install the scanner wire clamp [T].
13. Pull out the positioning pins.

**Note**

- Make sure the 1st and 2nd carriages move smoothly after you remove the positioning pins. Do steps 8 through 13 again if they do not.
- After replacing the scanner wire, do the image adjustments in the following section of the manual (p. 163 in the "Image Adjustment" section).


## Rear Scanner Wire

1. Exposure glass (p.184)
2. Scanner rear frame (p.189)
3. Scanner motor (p.189)
4. IOB with bracket (p.323)

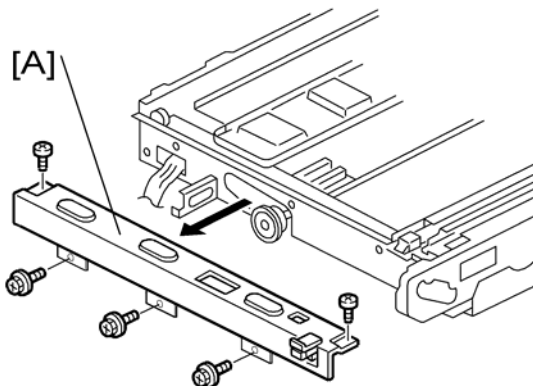


5. Rear rail frame [A] ( x 5)



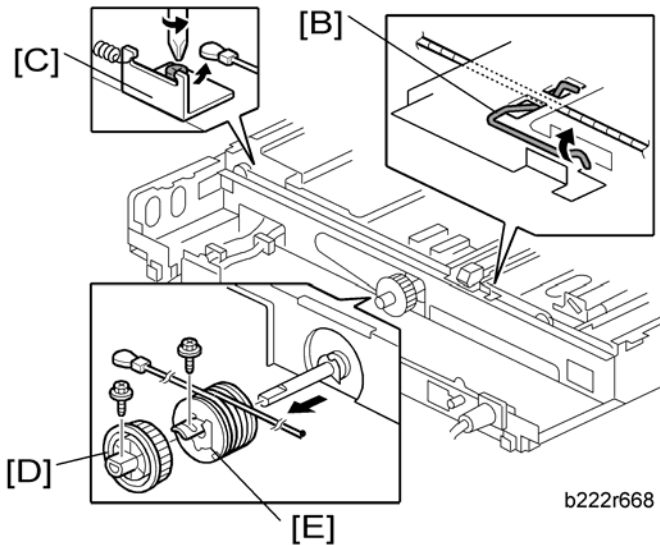

6. To make reassembly easy, slide the first scanner to the center.
7. Rear scanner wire clamp [B]
8. Rear scanner wire bracket [C] ( 1 x 1)
9. Scanner motor gear [D] ( 1 x 1)
10. Rear scanner wire and scanner drive pulley [E] ( 1 x 1)

### Reassembling the Rear Scanner Wire

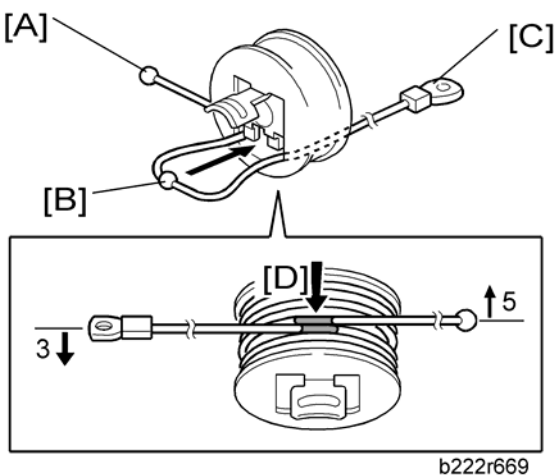

1. Position the center ball [B] in the middle of the forked holder.
2. Pass the end with the ball [A] through the right square hole from the front.

3. Position the center ball [B] in the middle of the notch, as shown by the arrow.
4. Pass the ball end [A] through the drive pulley notch.
5. Wind the end with the ring [C] clockwise (shown from the machine's front) three times; wind the ball end [A] clockwise (shown from the machine's front) five times.

**Note**

- The two red marks [D] should meet when you have done this.

6. Stick the wire to the pulley with tape, so you can easily handle the pulley and wire during installation.
7. Install the drive pulley on the shaft.

**Note**

- Do not screw the pulley onto the shaft yet.

8. Install the wire.

**Note**

- The winding of the wire on the three pulleys at the rear of the scanner should be the same as the winding on the three pulleys at the front. This must show as a mirror image. Example: At the front of the machine, the side of the drive pulley with the three windings must face the front of the machine. At the rear of the machine, it must face the rear.

9. Perform steps 8 through 13 in "Reassembling the Front Scanner Wire".

**Note**

- After replacing the scanner wire, do the image adjustments in the following section of the manual (p. 163 in the "Image Adjustment" section).

---

## Touch Panel Position Adjustment


---

**Note**

- It is necessary to calibrate touch panel at the following times:
- When you replace the operation panel.
- When you replace the controller board.
- When the touch panel detection function does not operate correctly.


Do not use items [2] to [9] on the Self-Diagnostic Menu. These items are for design use only.

1. Press , press "1", "9", "9", "3", then press  5 times to open the Self-Diagnostics menu.

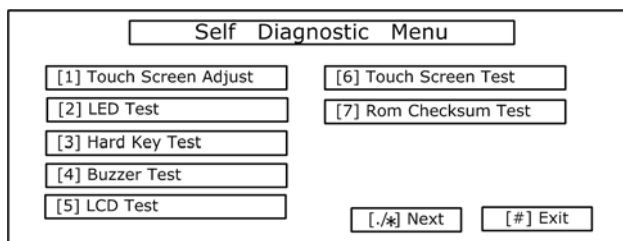

b178r548

2. On the touch screen press "Touch Screen Adjust" (or press "1").
3. Use a pointed (not sharp) tool to press the upper left mark "⓪".

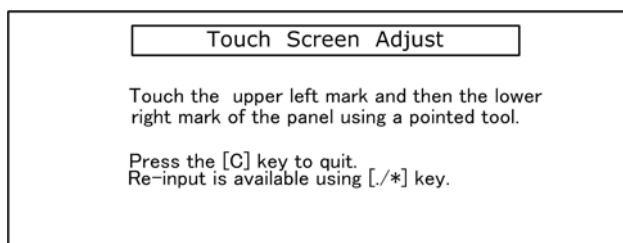

b178r549

4. Press the lower right mark when "⓪" shows.
5. Press [#] OK on the screen (or press ⓪) when you are finished.
6. Touch [#] Exit on the screen to close the Self-Diagnostic menu. Save the calibration settings.

# Laser Optics

## **⚠️ WARNING**

- Turn off the main switch and unplug the machine before beginning any of the procedures in this section. Laser beams can cause serious eye injury.

### Caution Decal Location

Caution decals are placed as shown below.

4




d088r113

## **⚠️ WARNING**

- Be sure to turn off the main switch and disconnect the power plug from the power outlet before beginning any disassembly or adjustment of the laser unit. This copier uses a class IIIb laser beam with a wavelength of 658 nm and an output of 9 mW. The laser can cause serious eye injuries.

## LD Safety Switch

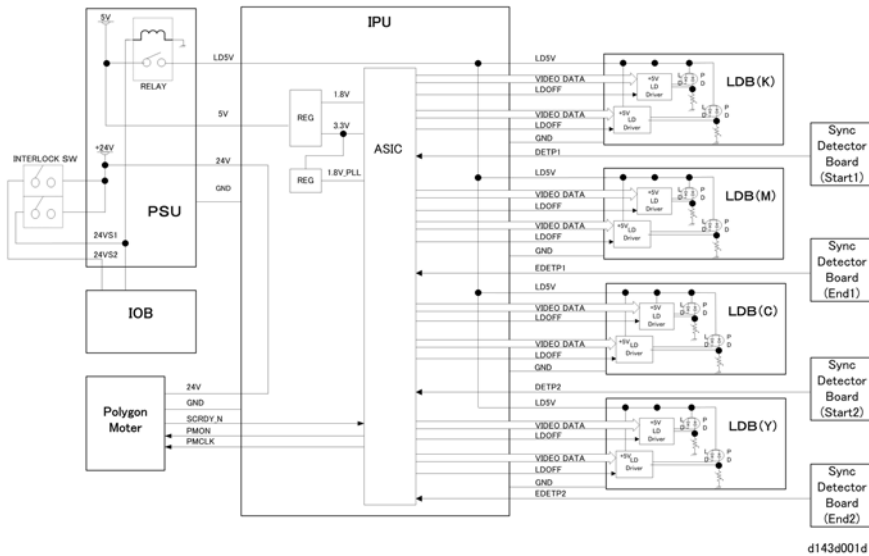

A relay on the PSU ensures technician and user safety. It also prevents the laser beam from turning on during servicing. This relay turns off when the front cover, upper left cover, or right door is opened. At this time it cuts the power (+5V) supplied to the LD board for each color through the IPU.

Two safety switches are turned on or off by the front door or right door, and this opens the relay.

- LD Driver: Precise Pulse Modulation ASIC on C-MOS technology
- LDB: LD Drive Board (included in the LD Unit)

## Error Messages

Along with other switches, the LD safety switches help show error messages related to external covers. When one or more covers are open, the messages, "Cover is open." and "Close the indicated cover," show with a diagram. The diagram shows which cover is open.

## Laser Optics Housing Unit


### ⚠ CAUTION

- Before installing a new laser optics housing unit, remove the sponge padding and the tag from the new unit.

**Note**

- A new laser optics housing unit has a bracket to protect the LD units. When you install the new unit, do not remove the bracket until near the end of the installation procedure (the correct time is stated in the manual).
- This bracket protects a capacitor on the unit. If the bracket is removed too early, you could break the capacitor on the corner of the main frame when you install the new unit.

### Preparing the new laser optics housing unit

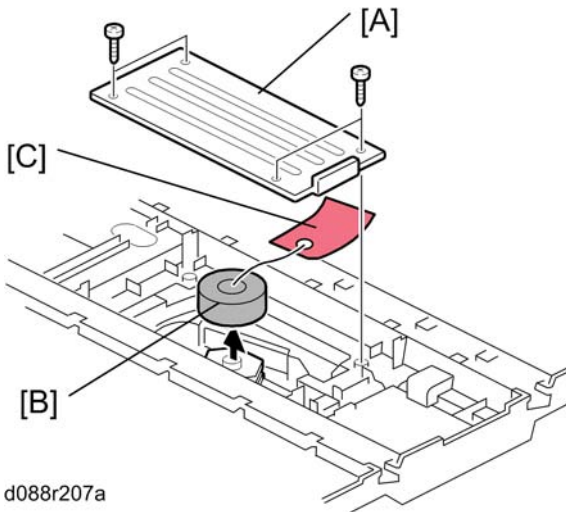

1. Polygon motor cover [A] of the laser optics housing unit (  $\times 4$  )
2. Sponge padding [B]
3. Tag [C]
4. Reinstall the polygon motor cover [A].

### Before removing the old laser optics housing unit

Do the following settings before removing the laser optics housing unit. These are adjustments for skew adjustment motors in the laser optics housing unit.

1. Plug in and turn on the main power switch of the copier.
2. Enter the SP mode.
3. Execute SP2220-001 to clear the L2 lens positioning motor setting for Magenta.
4. Execute SP2220-002 to clear the L2 lens positioning motor setting for Cyan.
5. Execute SP2220-003 to clear the L2 lens positioning motor setting for Yellow.
6. Exit the SP mode.

7. Turn off the main power switch and disconnect the power cord of the copier.

### **Recovery procedure for no replacement preparation of laser optics housing unit**

If you did not do the procedure in 'Before removing the old laser optics housing' before removing the old laser optics housing unit, you must do the following.


1. Turn off the main power switch and disconnect the power cord of the copier.
2. Remove the left cover and harness cover bracket (see the following "Removing the old laser optics housing unit")





d088r610


3. Disconnect the harness [A] of the skew correction motor.
4. Do steps 1 to 7 of "Before removing the old laser optics housing unit".
5. Connect the harness [A] and reinstall the harness bracket and left cover.
6. Plug in and turn on the main power switch.

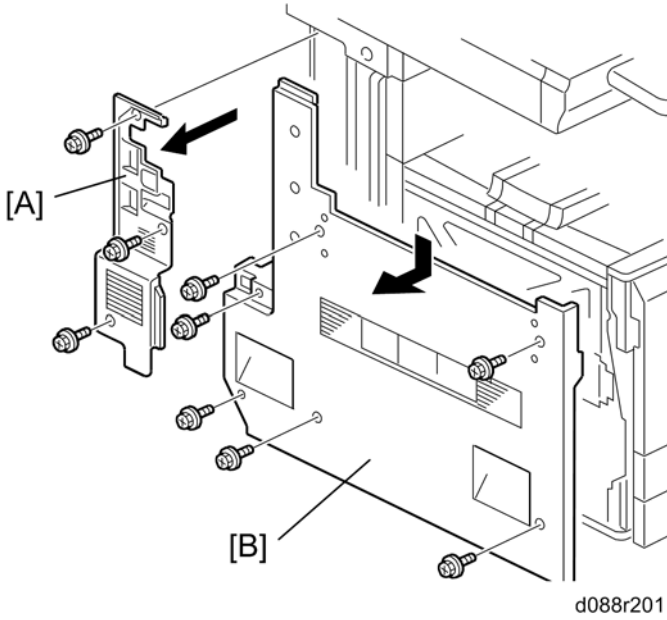

## Removing the old laser optics housing unit




4

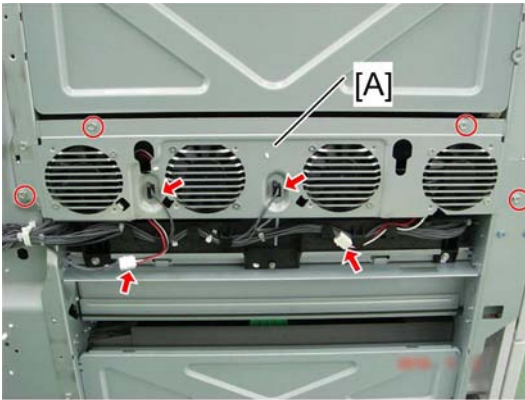1. Controller cover [A] (  x 3)
2. Left cover [B] (  x 6)






3. Left fan bracket [A] for the laser housing optics unit (  x 4,  x 4)

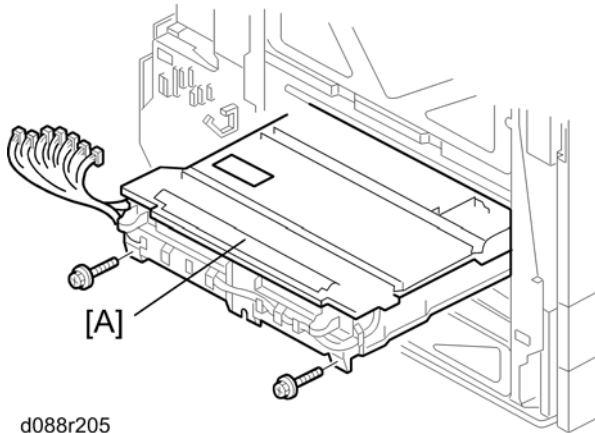



d088r205


4. Remove the old laser optics housing unit [A] (  x 2, All s,  x 3)

4




## Installing a new Laser Optics Housing Unit

### Note

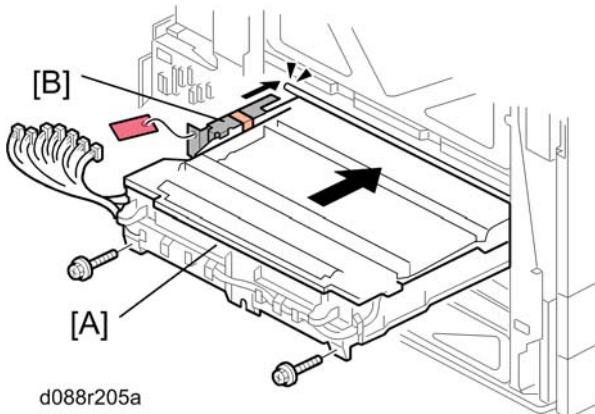- A new laser optics housing unit has a bracket to protect the LD units. When you install the new unit, do not remove the bracket until near the end of the installation procedure (the correct time is stated in the manual).
- This bracket protects a capacitor on the unit. If the bracket is removed too early, you could break the capacitor on the corner of the main frame when you install the new unit.



d088r205a

1. Push the new laser optics housing unit [A] slowly into the copier until the bracket [B] bumps against the frame of the copier.
2. Remove the bracket [B], and then push the new laser optics housing unit fully into the copier (  x 2, All s,  x 3).
3. Reassemble the machine.

## After installing the new laser optics housing unit

Do the following adjustment after installing the new laser optics housing unit.

1. Plug in and turn on the main power switch.

Input data for SP modes

Main Scan Length Detection Disp. Bk	SP 2-185-001:	247975	[A]
Color Registration Correction Bk	SP 2-101-001:	-031	[B]
Prt Mag Adj Bk	SP 2-102-013:	-002	[C]
Prt Mag Adj M	SP 2-102-014:	+002	
Prt Mag Adj C	SP 2-102-015:	+002	
Prt Mag Adj Y	SP 2-102-016:	+000	

b222r526a

2. Adjust the main scan magnification for K, M, C, Y.

- Input the standard values [C] provided with a new laser optics housing unit for the main scan magnification adjustment with SP2-102-013, 014, 015, 016.

### ↓ Note

- The values [C] are different for each laser optics housing unit.

3. Adjust the main scan magnification only for black (K).

- Input the standard value [A] provided with a new laser optics housing unit for the main scan magnification adjustment with SP2-185-001.

### ↓ Note

- The value [A] is different for each laser optics housing unit.
- Print the test pattern (14: 1-dot trimming pattern in the SP2-109-003).
- Check that the left and right trim margin is within  $4 \pm 1$  mm. If not, change the standard value for the main scan magnification adjustment.

4. Adjust the main scan registration only for black (K).

- Input the registration value [B] provided with a new laser optics housing unit for the main scan registration adjustment with SP2101-001.

### ↓ Note


- The value [B] is different for each laser optics housing unit.

- Print the test pattern (14: 1-dot trimming pattern in the SP2-109-003).
  - Check that the left trim margin is within  $2 \pm 1$  mm. If not, change the registration value for the main scan registration adjustment.
5. Select "0" with SP2-109-003 after printing the "1-dot trimming pattern.
  6. Do the line position adjustment.
    - First do SP2-111-3.
    - Then do SP2-111-1.

To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.
  7. Exit the SP mode.


After you replace the housing unit, do the adjustments in the following section of the manual: Image Adjustment – Registration.

## Polygon Mirror Motor and Drive Board

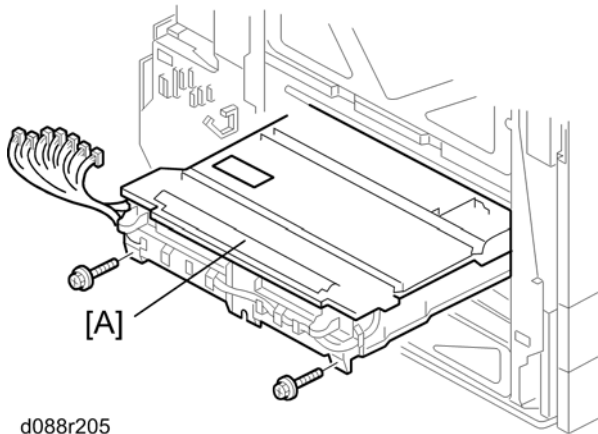


d088r205


1. Laser optics housing unit [A] (p.203)

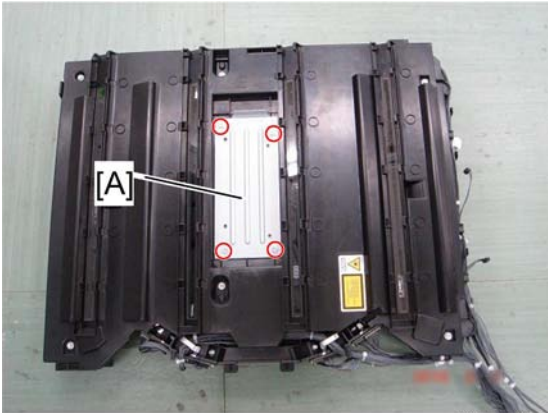




d088r116

4

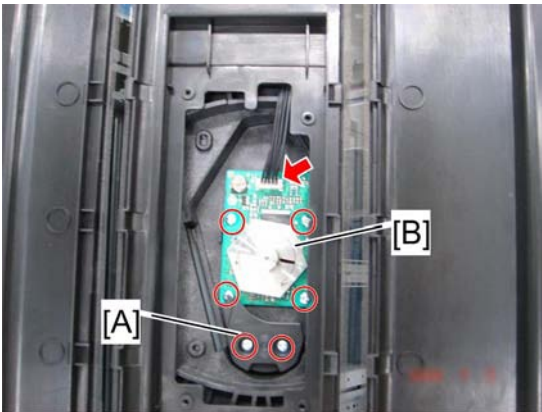2. Polygon mirror motor cover [A] of the laser optics housing unit (  x 4 )



d088r117

3. Polygon mirror motor holder [A] (  x 2 )
4. Polygon mirror motor [B] (  x 4,  x 1 )

After installing the polygon mirror motor:

- 1) Do the "Forced Line Position Adj. Mode c" (SP2-111-3).
- 2) Then do the "Forced Line Position Adj. Mode a" (SP2-111-1).

To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.

After you replace the motor, do the adjustments in the following section of the manual: Image Adjustment – Registration.


---

## Airflow Fans

---


1. Controller cover (  p.175)

- Left cover (🔧 p.175)

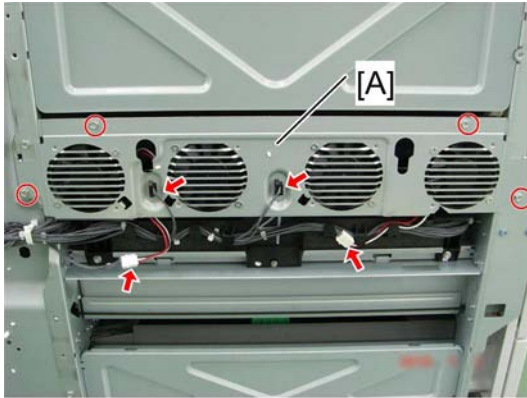

d088r115

- Left fan bracket [A] for the laser housing optics unit (🔧 x 4, 📏 x 4)

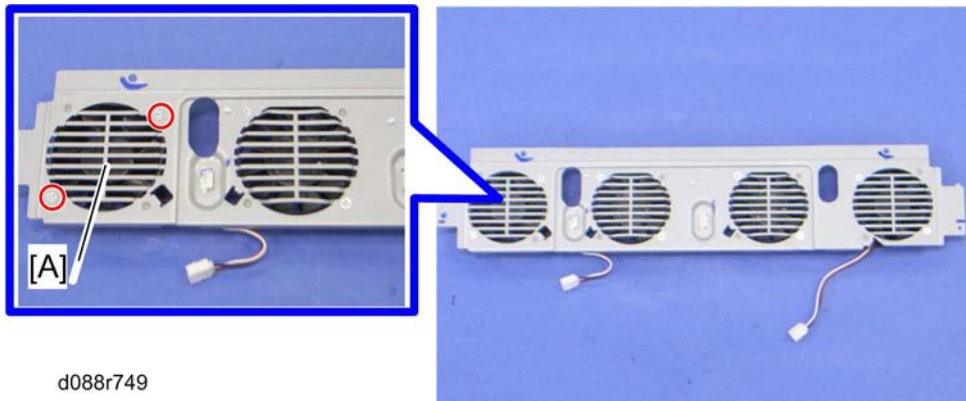


d088r749

- Airflow fans [A]
  - There are four airflow fans on the bracket.


## Laser Optics Rear Right Thermistor

- Open the right door.
- Fusing unit (🔧 p.267)
- Open the front door.
- All PCDUs (🔧 p.214)
- Image transfer belt unit (🔧 Image Transfer Belt Unit)

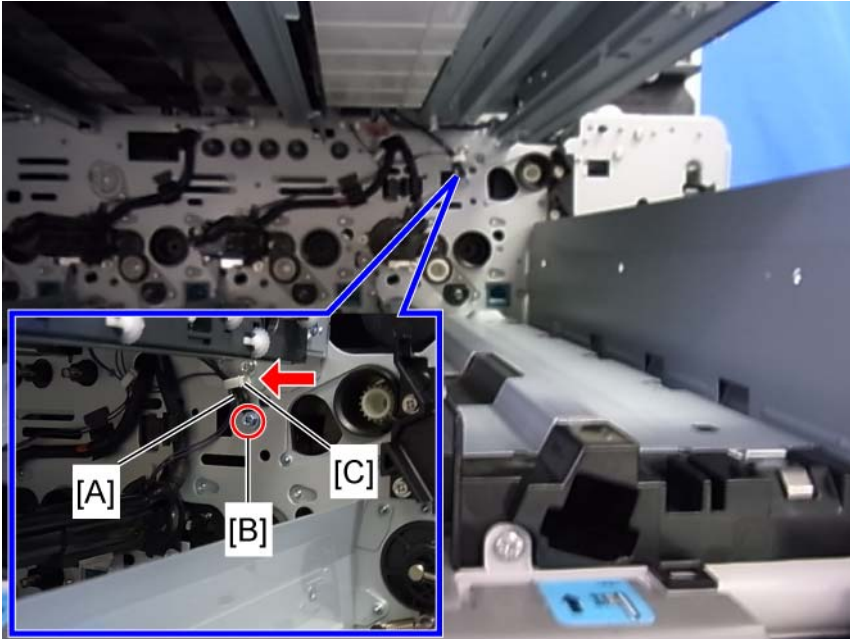




d1440141

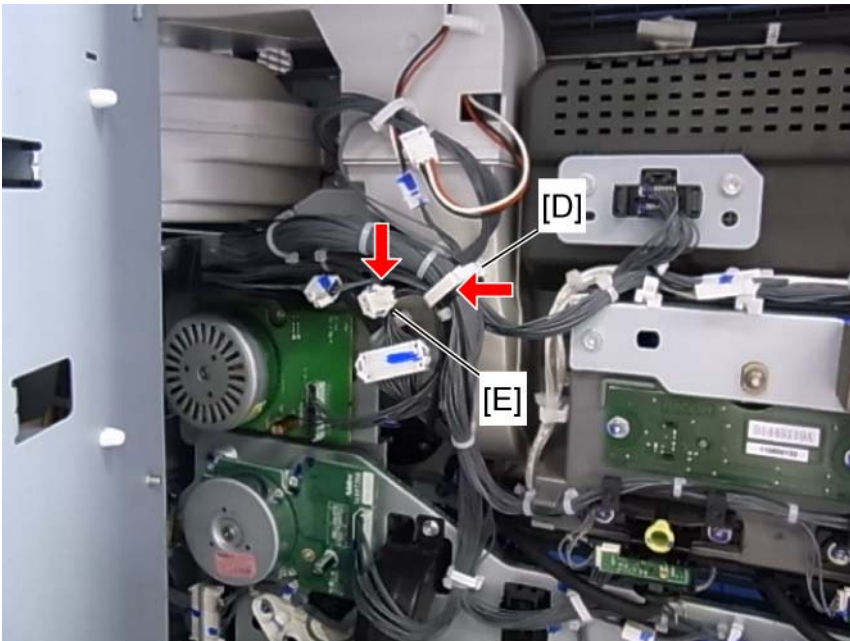- 6. Release the harness clamp [A] and remove the screw [B].
- 7. Open the controller box (☞ p.319).



d1440142

- 8. Release the harness clamp [D] and disconnect the thermistor connector [E].

9. Pull out the laser optics rear right thermistor [A] gently from behind by pinching its harness ( x 2,  x 1,  x 1).

 **Note**


- **When reinstalling the laser optics rear right thermistor:**
- The thermistor harness is about 25 cm long. When routing the harness, use tweezers, and pay extra attention to avoid damaging the harness.


# Image Creation

## PCDU

**Note**

- Do not touch the OPC drum. Do not let metal objects touch the development sleeve.
1. Open the front door.

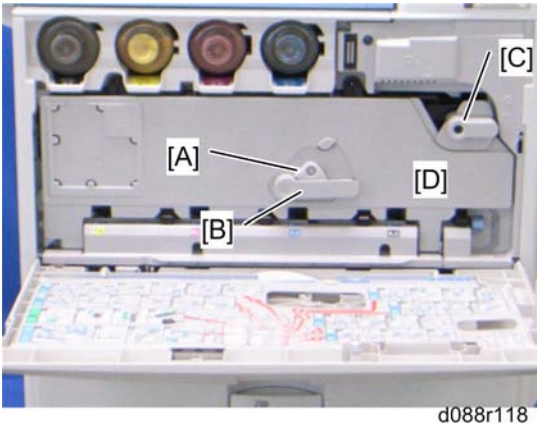

2. Lever lock [A] (  x 1)
3. Turn the drum positioning plate lever [B] and the image transfer unit lock lever [C] counter-clockwise.
4. Open the drum positioning plate [D].



5. Pull out the PCDU (hold the grip while you pull it out).



## Drum Unit and Development Unit

The new drum unit has a front cover and a front joint. When you attach the new drum unit to the development unit, remove a front cover and a front joint at first.

And use them for reassembling the new drum unit and development unit.

1. If you install a new drum unit, set SP 3902-xxx to "1".


- Black: 3902-009
- Yellow: 3902-010
- Cyan: 3902-011
- Magenta: 3902-012

### ↓ Note

- If you do this, then the machine will reset the PM counter for the drum unit automatically, after you turn the power on again.


2. Turn the machine power off.

3. PCDU (🔧 p.214)

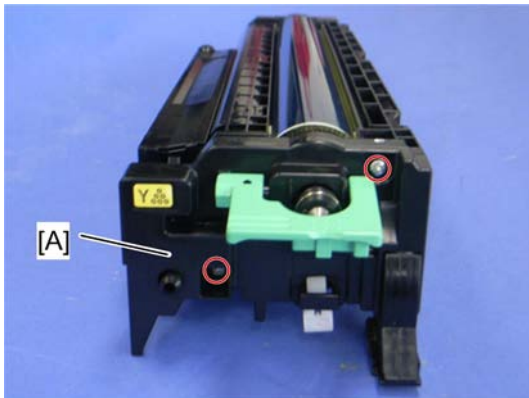

d027r120

4. Front cover [A] (🔧 x 2)

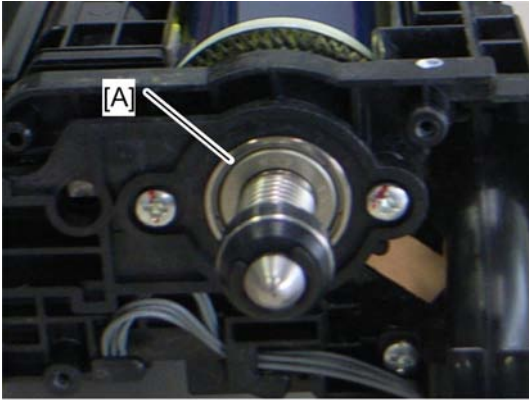


d027r121

4

**Note**

- Do not touch the bearing [A] after removing the front cover. The bearing is properly applied with lubricant.

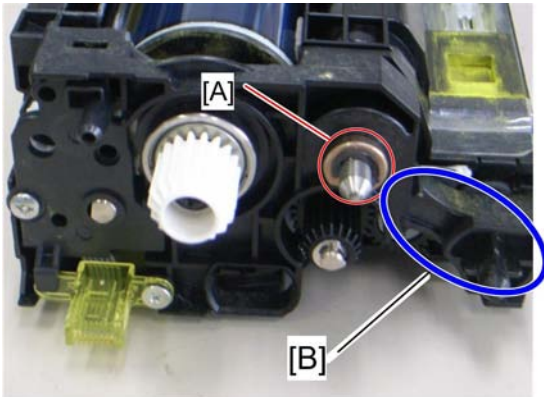


d027r122

5. Remove the bushing [A] of the development roller at the rear of the PCDU (C x 1).

**Important**

- Do not put too much weight on the PCDU. Otherwise, the plastic frame [B] of the development unit may be damaged.

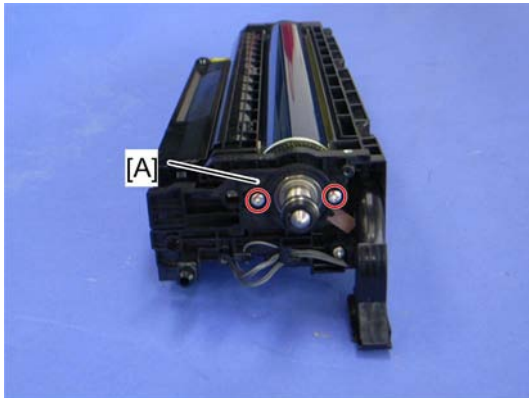


d027r123

6. Remove the front joint [A] (  x 2,  x 1).

**Note**

- The front joint [A] is firmly set. Remove it with a flat screwdriver.

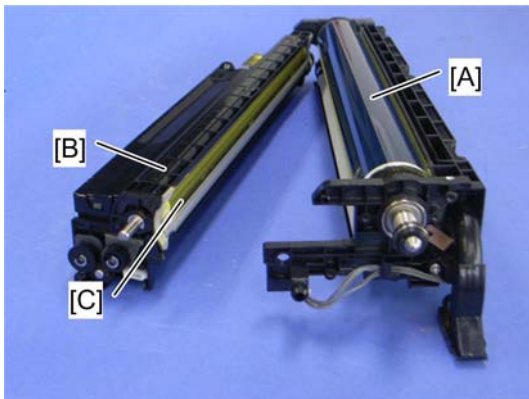


d027r124

7. Drum unit [A] and Development Unit [B]

**Note**

- When the development unit is removed from the drum unit, clean the entrance mylar [C] with a vacuum.

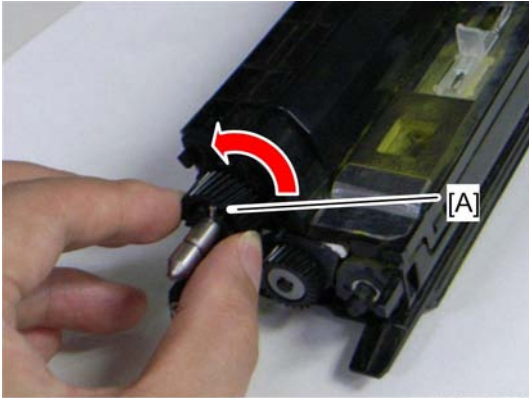

d027r412

4


8. Rotate the development roller [A] five or six times in the counterclockwise direction.

**Note**

- This step removes developer that has stuck to the development roller, which would cause color unevenness.

9. If you change the development unit, do the ACC procedure.
10. Execute the drum phase adjustment with SP1902-001 twice.

**When reassembling the PCDU:**

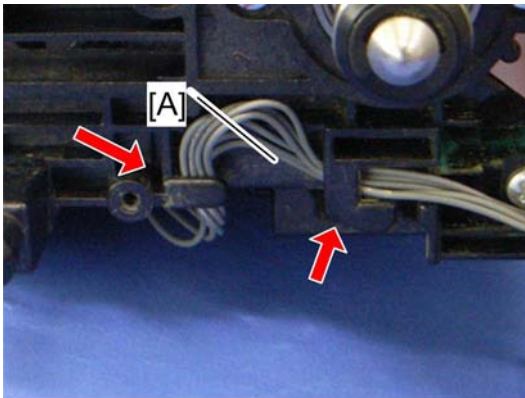

d027r681


- Make sure that the harness [A] is hooked as shown.


**Developer**

---

1. Set SP 3902-xxx to "1".  
Black: 3902-005  
Yellow: 3902-006  
Cyan: 3902-007

Magenta: 3902-008

2. Turn the machine power off.
3. Development unit (  p.215)

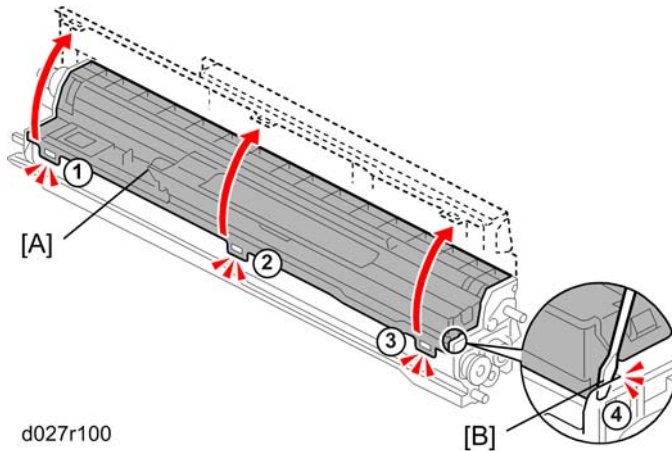


d027r100

4. Hopper cover [A] (4 hooks)
  - Release the three hooks first in the correct order (from ① to ③).
  - Put the head of a screwdriver in the groove gap [B] as shown, and then release the hook ④.

### CAUTION

- Follow the correct order ① to ④. Otherwise, the hopper cover may be damaged. The hook ④ breaks easily.

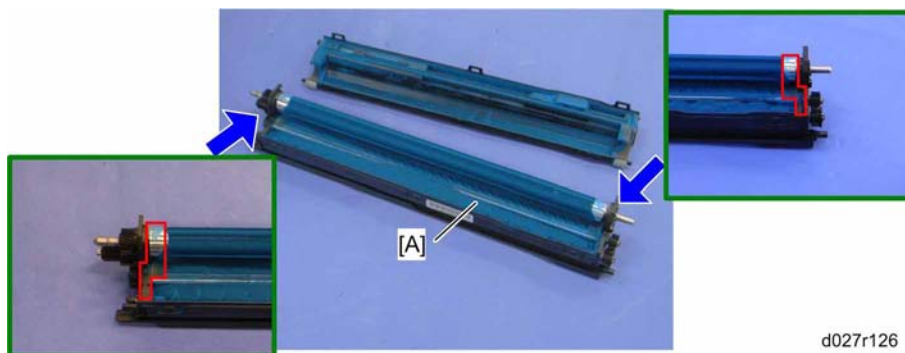

d027r126

5. Shake a bag of developer and pour it into the development hopper [A].
6. Reattach the hopper cover (hook x 3).

### CAUTION

- Keep the developer off at both ends of the development unit enclosed in red lines in the diagram.

7. Turn the machine power on. The machine initializes the developer and resets the PM counter for the developer. (For details of the developer initialization result, see "Developer Initialization Result" in the "Appendix: Process Control Error Conditions" chapter.
8. Do the ACC procedure.

---

## Toner Collection Bottle


---

If you will install a new bottle, and the old bottle is not in a full or near-full condition, then set SP 3902-017 to 1.

**Note**

4


- If you do this, then the machine will reset the PM counter for the bottle automatically, after you turn the power on again.
  - If the bottle is in a full or near-full condition, it is not necessary to do this.
1. Turn off the main power switch.

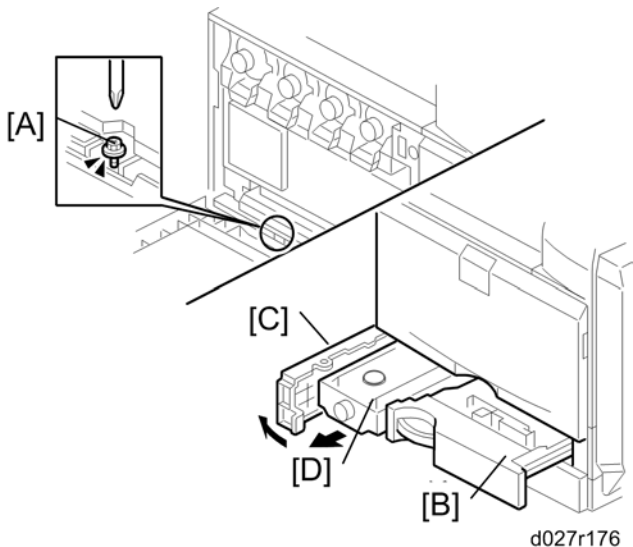


2. Open the front door and remove the screw [A].
3. Close the front door.
4. Pull out tray 1 [B].
5. Open the toner collection bottle door [C].
6. Pull out the toner collection bottle [D].

## Second Duct Fans

1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)
3. Open the controller box (🔧 p.319)

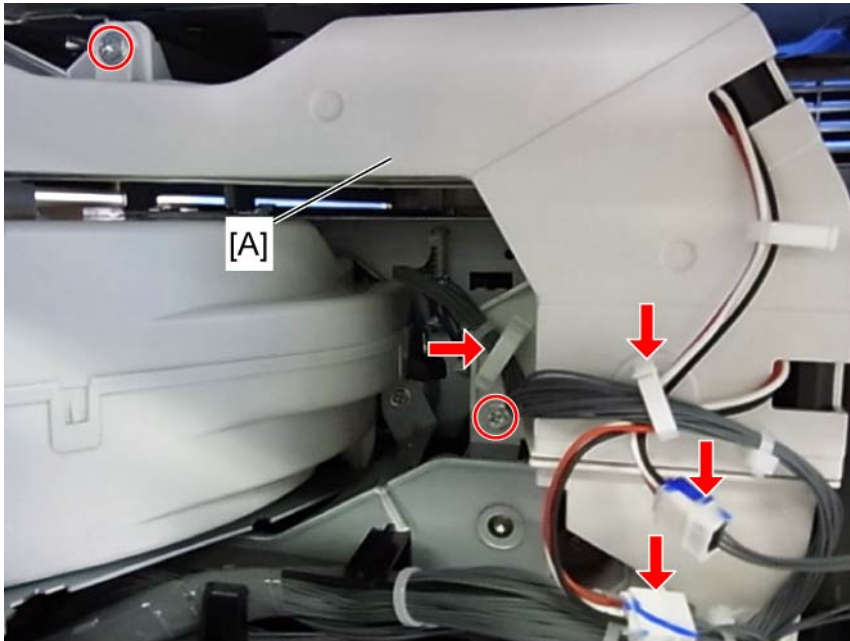


4. Second duct [A] (🔧 x 2, 📏 x 2, 📏 x 2)

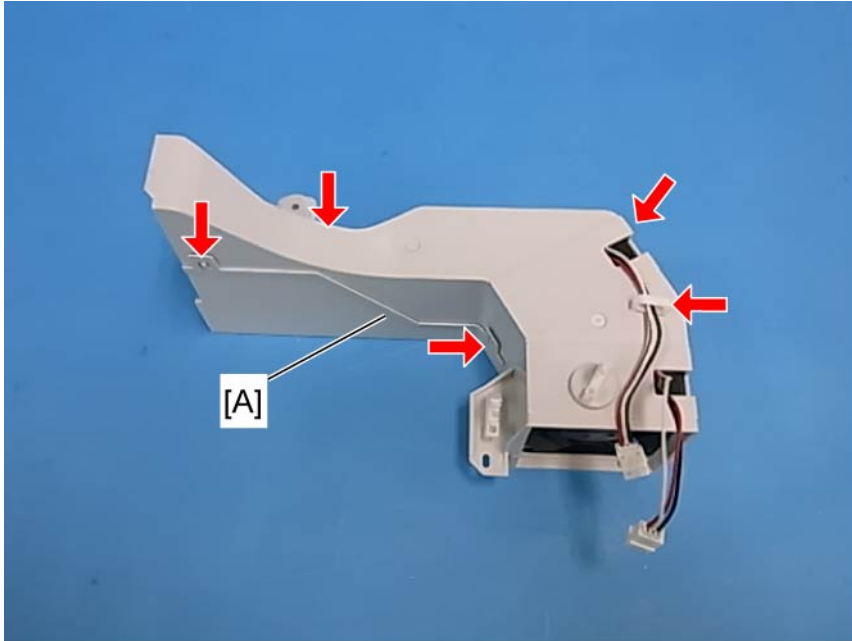

d1440110

5. Split the second duct [A] (Hooks x 4,  X 1).

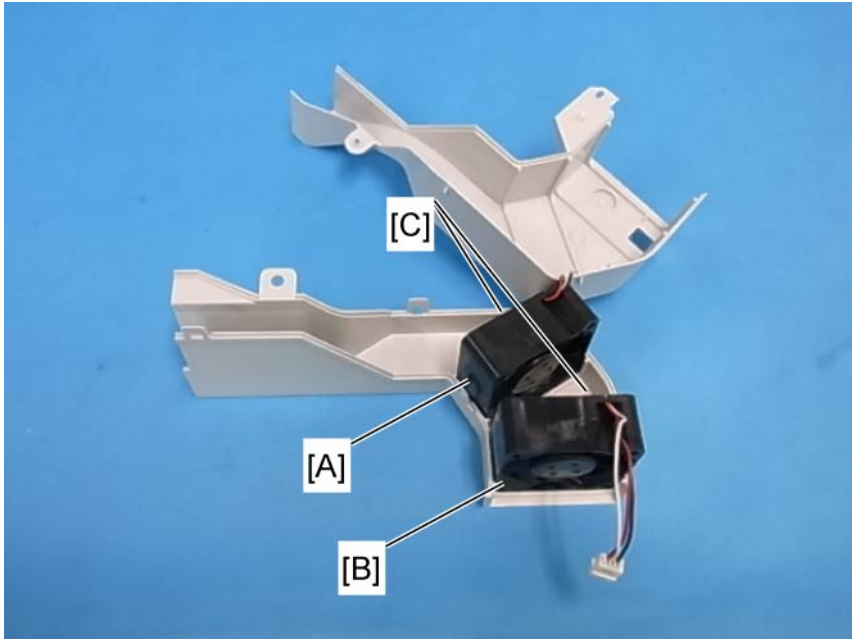

d1440111

6. Second duct fans [A] [B]




## When reinstalling the second duct fans

Make sure that the second duct fans are installed with these decals [C] facing to the front of the machine.

## Third Duct Fan

1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)
3. Open the controller box (🔧 p.319)

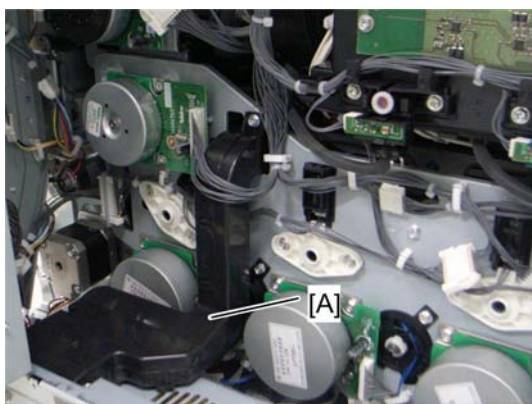

d027r130

4. Third duct [A] (🔧 x 2, 📏 x 1)



d027r131

5. Third duct fan [A] (3 hooks)

## When reinstalling the third duct fan


Make sure that the third duct fan is installed with its decal facing to the upper side of the machine.

## Toner Pump Unit

There are four pump units inside the machine. This procedure describes the replacement procedure only for one unit. If you need to replace another unit, do the same as this procedure.

**Note**

- Put some sheets of paper on the floor before doing this procedure. Toner may fall on the floor.

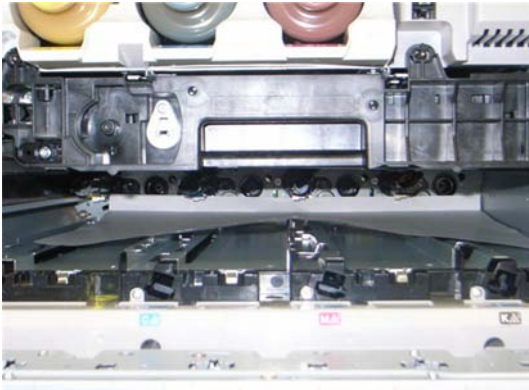


d027r132

1. Rear cover (p.176)
2. Image transfer belt unit (p.230)
3. All PCUs (p.214)
4. Put a sheet of paper (A3/DLT) inside the machine as shown and on the floor.

**Note**

- The sheet of paper on the floor is used in a later step.

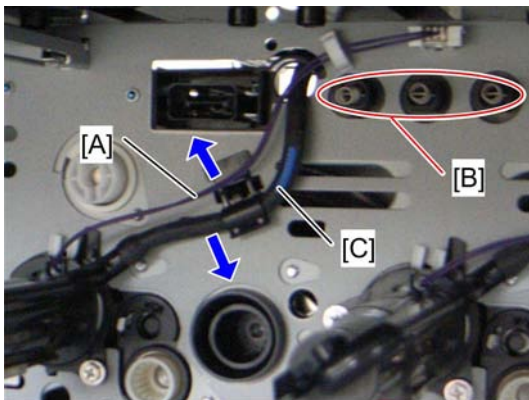


d027r134

5. Release the harness [A] from the clamp (x 1 for YCM, x 2 for K) and hook, and then disconnect the harness.

**Note**

- Avoid touching these spring terminals [B].

6. Release the toner supply tube [C].

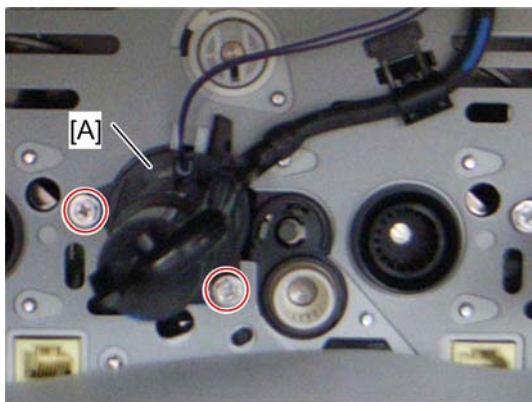


d027r135

7. Remove the toner pump unit [A] (  x 2)



d027r136

- Make sure that a sheet of paper is attached to the frame of the rear side. The picture on the left shows a sheet of paper that is correctly set, but the picture on the right shows a sheet of paper that is not correctly set. This sheet of paper prevents toner and screws from falling into the laser optics housing unit through cutouts.

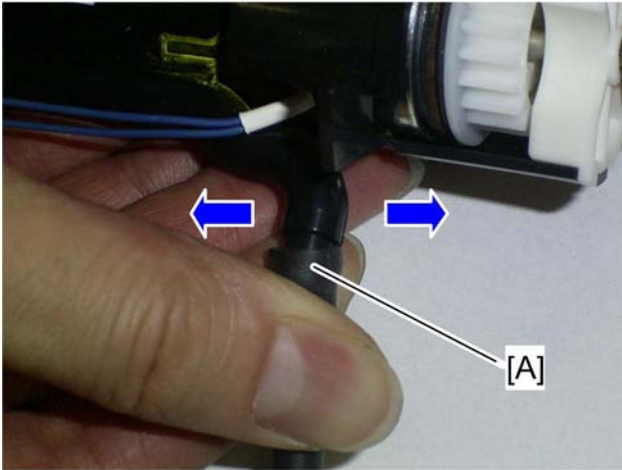


d027r705

8. Slowly remove the toner supply tube [A] from the toner pump unit by pulling the tube right and left.
9. Turn up the openings of the toner pump unit and toner supply tube just after removing the tube.


**Note**

- If not, the toner may scatter away and fall down.

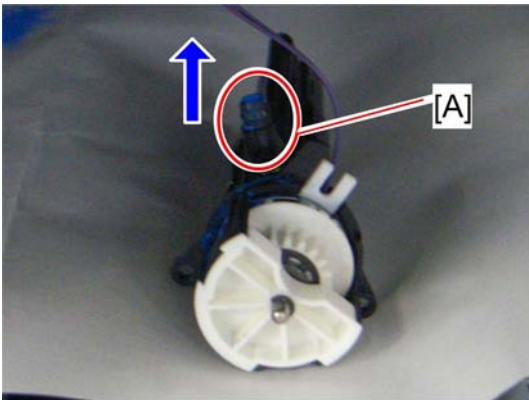

d027r137

10. Put the toner pump unit on the sheet of paper, which has been put in step 4, with its opening [A] up.

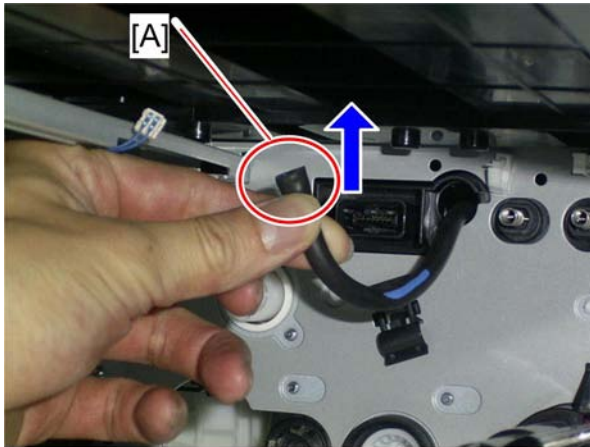


d027r707

4


1. Keep the opening [A] of the toner supply tube up, and then clip the opening of the toner supply.

### When you install the new toner pump unit

Before installing the new toner pump unit, mask the opening of the old toner pump unit with tape. Dispose of it following local rules.

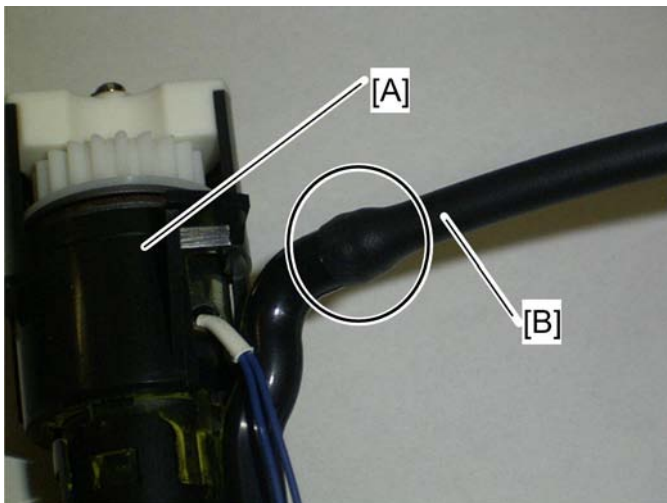

1. Put a sheet of paper (A3/DLT) inside the machine.
2. Turn up the opening of the toner supply tube, and then remove the object that was used to clip the opening of the toner supply tube.
3. Insert the opening of the toner pump unit [A] into the opening of the toner supply tube [B] as far as possible.

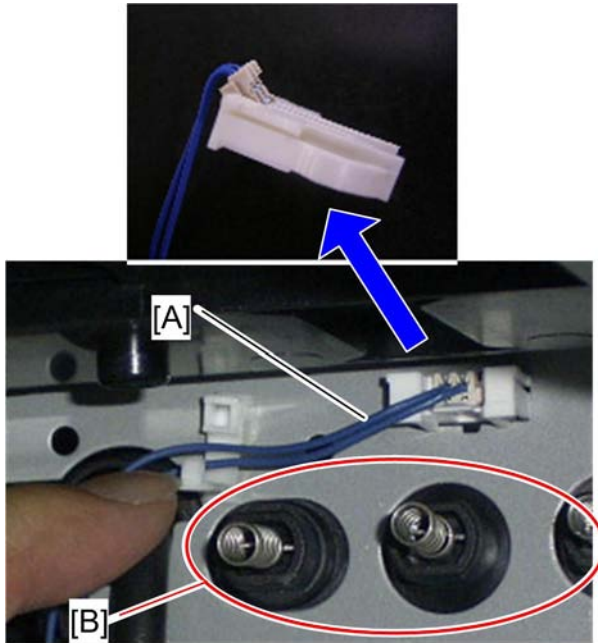

d027r709

4. Connect the harness [A] to the connector of the machine.


**Note**

- On the above picture, the magnified picture of the connector shows the easiest way to connect it.

5. Clamp the harness [A] (🔧 x 1 for YCM, 🔧 x 2 for K).

**Note**

- Avoid touching these spring terminals [B].

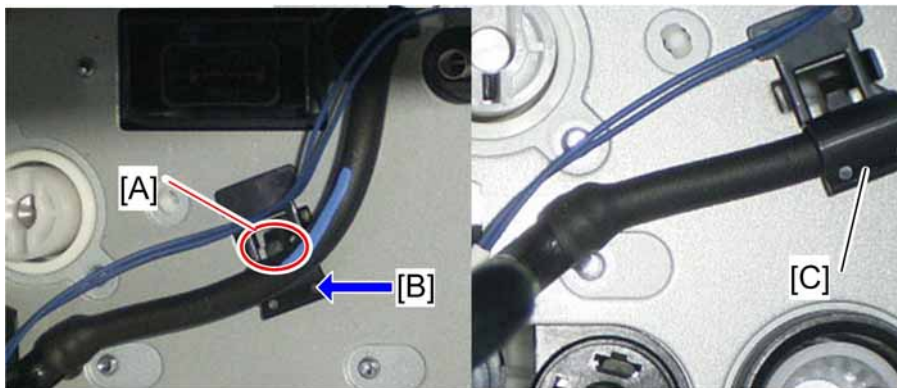


d027r710

6. Pass the harness of the toner pump unit behind the hook [A], while pressing at [B].


7. Secure the toner supply tube with the holder [C], lifting up the edge of the holder "very gently".

↓ **Note**


- Be careful when you lift the edge of the holder, because the holder is easily broken.

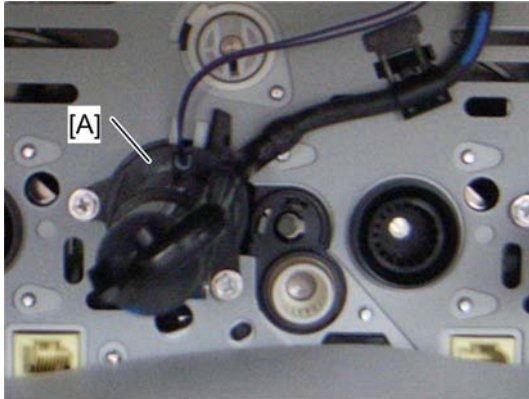




d027r135a

8. Insert the toner pump unit [A] into the rear frame of the machine (  x 2).
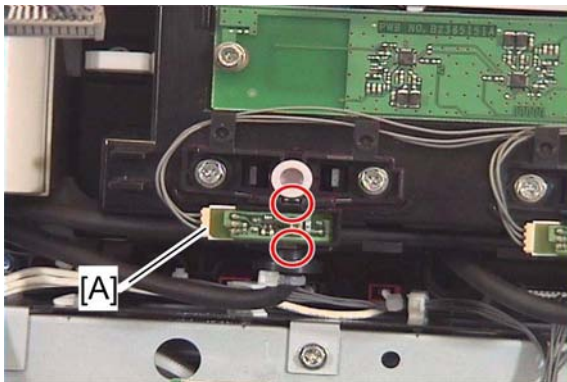
## Toner End Sensor



d027r042

1. Rear cover (  p.176)
2. Open the controller box (  p.319)
3. Toner end sensor [A] (  x 1, 2 hooks each)

↓ **Note**

- A toner end sensor is not installed in the entrance of the toner supply tube for black.

# Image Transfer


## Image Transfer Belt Cleaning Unit

1. If you will install a new belt cleaning unit, then set SP 3902-015 to 1.

**Note**

- If you do this, then the machine will reset the PM counter for the belt cleaning unit automatically, after you turn the power on again.
- Do not use SP3902-015 or 013 if you replace the complete ITB unit.

2. Turn off the main power switch.
3. Open the right door.
4. Open the front door.
5. Open the drum positioning plate. (p.214)

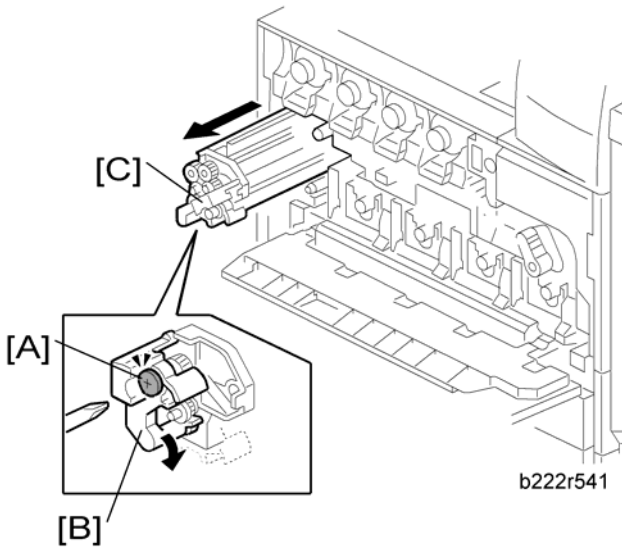


6. Loosen the screw [A].
7. Turn the lock lever [B] clockwise
8. Pull out the image transfer belt cleaning unit [C].

## Image Transfer Belt Unit


1. Open the right door.
2. Open the front door.



3. Open the drum positioning plate. (▶ p.214)

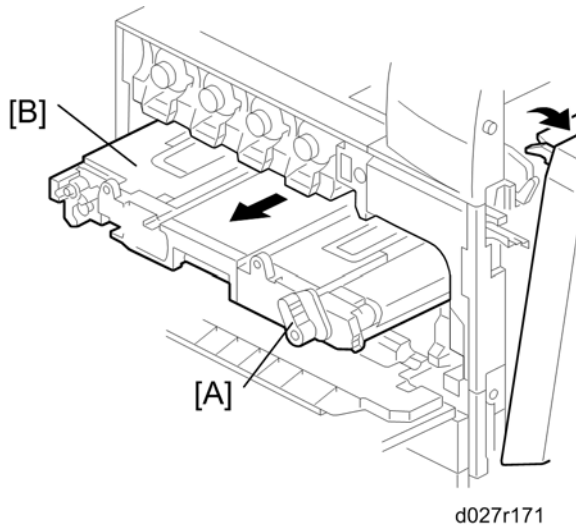


4. Turn the image transfer belt unit lock lever [A] counterclockwise.
5. Image transfer belt cleaning unit (▶ p.230)
6. Pull out the image transfer belt unit [B] halfway.

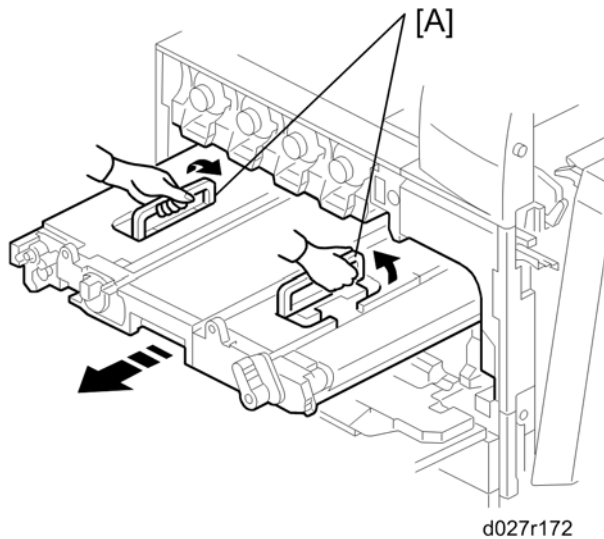

7. Grasp the handles [A], and then pull out the image transfer belt unit fully.

## Image Transfer Belt


1. Image transfer belt cleaning unit (▶ p.230)
2. Image transfer belt unit (▶ p.230)

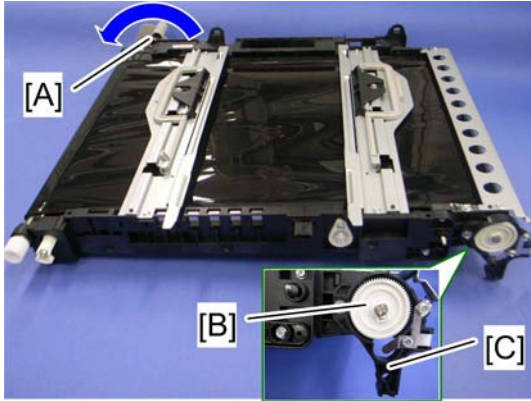

d027r138


4


3. Turn the image transfer unit contact lever [A] counterclockwise (as seen from the rear).
4. Gear [B] (hook x 1)
5. Turn the gear cover [C] clockwise (as seen from the rear) (⚙ x 1).

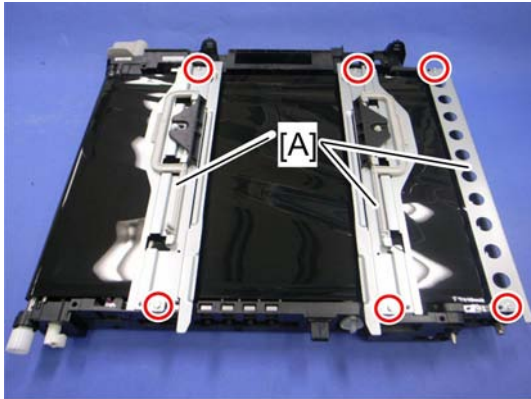


d027r139


6. Three stays [A] (⚙ x 6)

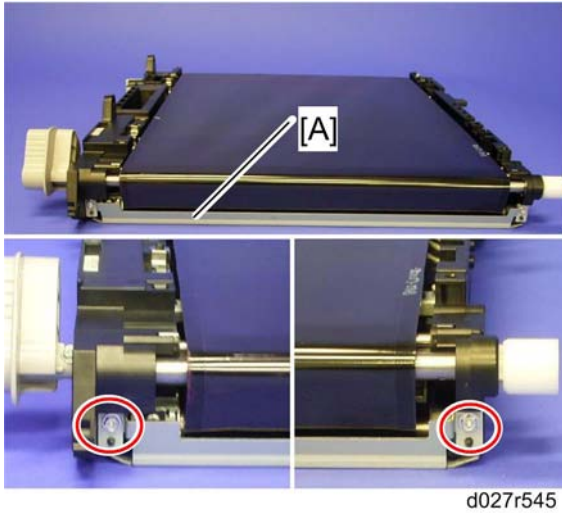

7. Guide plate [A] (as seen from the right side of the machine) (  x 2)

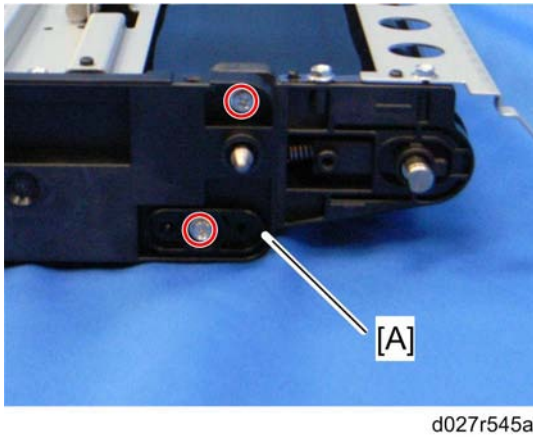

8. Remove the two screws and then the rear holder bracket [A] (as seen from the rear).

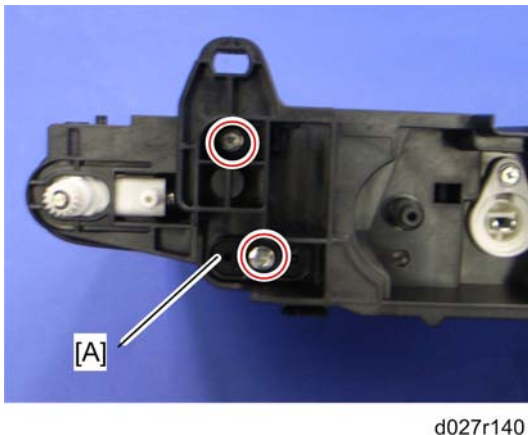


9. Remove the two screws and then the front holder bracket [A] (as seen from the front).



b222r548

10. Put the front side of the image transfer belt unit on a corner of the table or a box as shown.

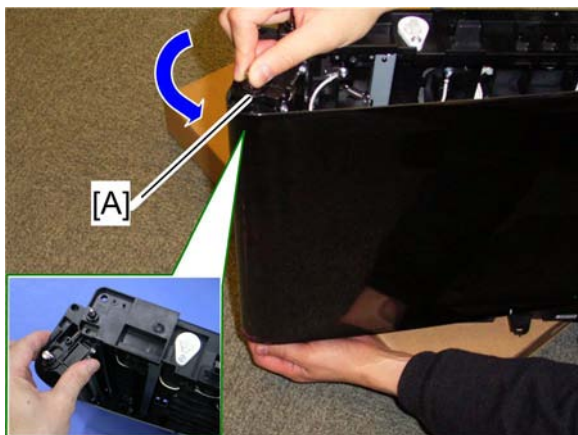

d027r549

11. Pull the tension roller [A] as shown.




## 12. Image transfer belt [A]

4

### When reinstalling the image transfer belt


- Clean all rollers with dry cloth before installing the image transfer belt.

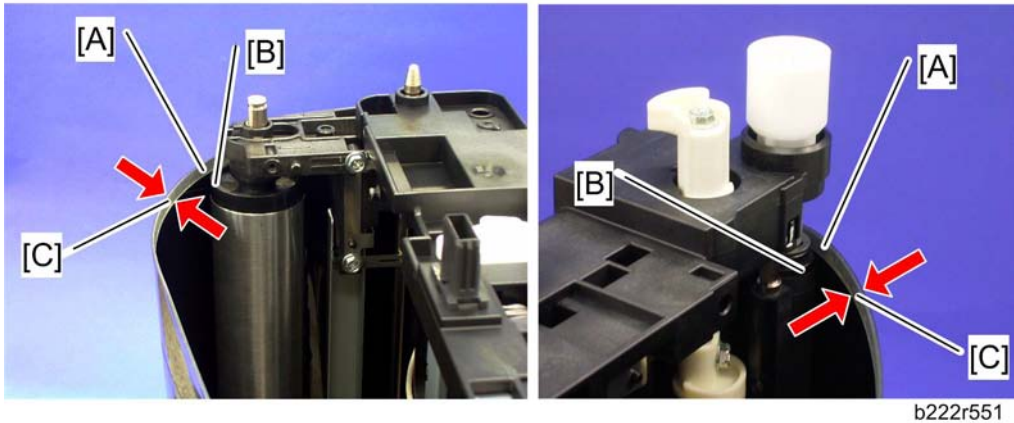

- There is a rim [A] at each edge of the transfer belt. The ends of all the rollers ([B] for example) in the transfer belt unit must be between the two rims.

#### ↓ Note


- There are two rims (width [C]: about 5 mm) on the underside of the front and rear edges of the image transfer belt.

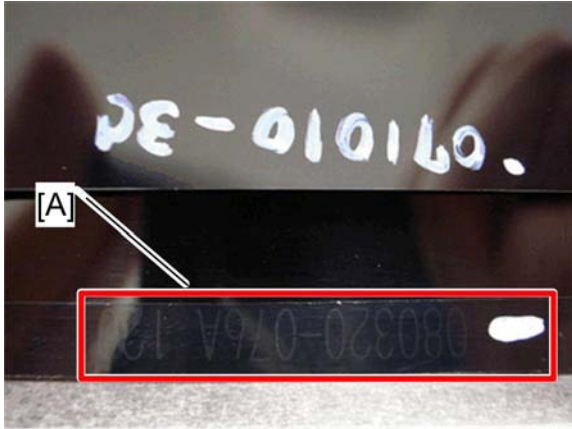

d027r552

4

- This belt must be installed the correct way around. When you reinstall the image transfer belt unit, install it with the number [A] on the belt at the rear side of the unit.

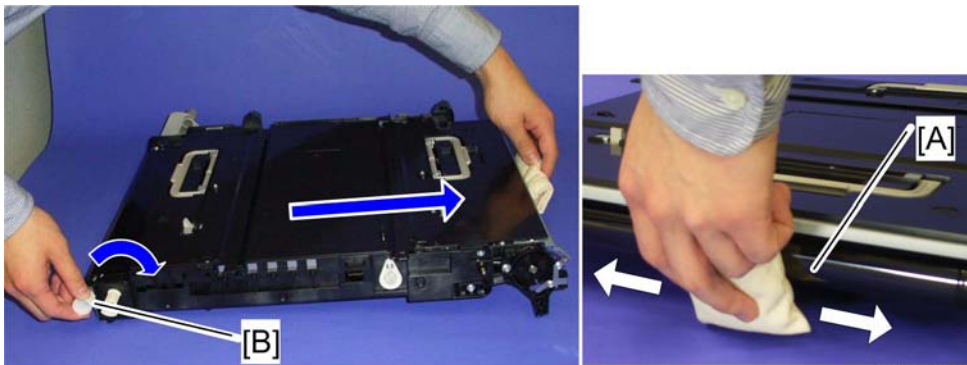

b222r553

- Put "Lubricant Powder" (B132 9700) on the surface of the image transfer belt [A], while you turn the drive gear [B] at a constant speed, as shown. (The straight arrow in the picture shows belt movement direction.) Lubricant powder prevents the image transfer cleaning blade from turning up.

↓ **Note**

- Do not put the lubricant powder at the right side of the image transfer belt unit (the above picture is taken from the rear). Otherwise, lubricant powder may damage the encoder sensor.


# Paper Transfer

## Paper Transfer Roller Unit

If you will install a new paper transfer unit, then set SP 3902-016 to 1.

### ↓ Note

- If you do this, then the machine will reset the PM counter for the paper transfer unit automatically, after you turn the power on again.
1. Open the right door.

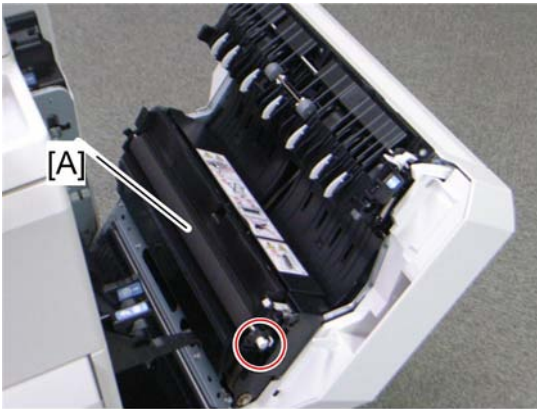

d088r141


2. Release the white hook.
3. Paper transfer roller unit [A]


## Paper Transfer Unit


If you will install a new paper transfer unit, then set SP3-902-016 to 1.


### ↓ Note

- If you do this, then the machine will reset the PM counter for the paper transfer unit automatically, after you turn the power on again.
1. Turn off the main power switch.

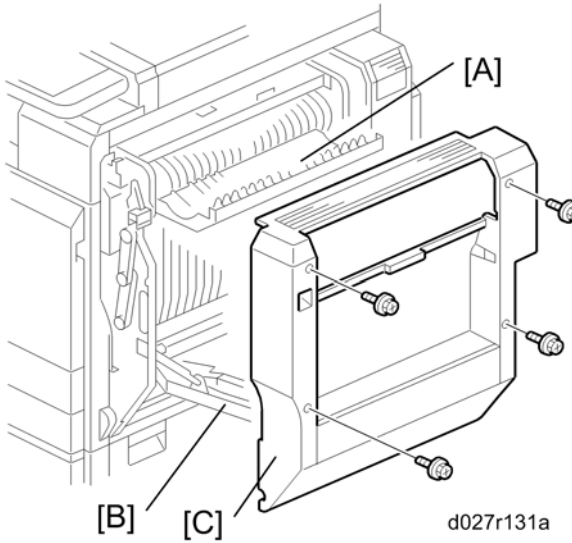


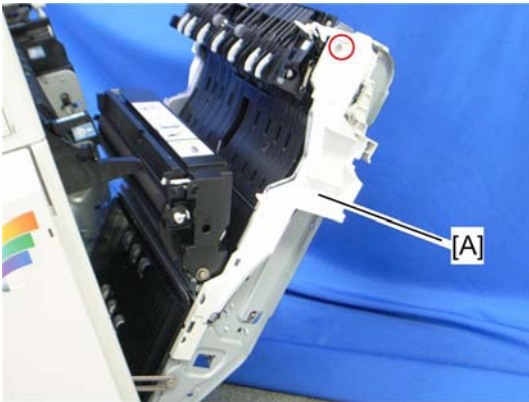

2. Open the duplex door [A].
3. Open the by-pass tray [B]
4. Right door cover [C] (  x 4)
5. Open the right door.



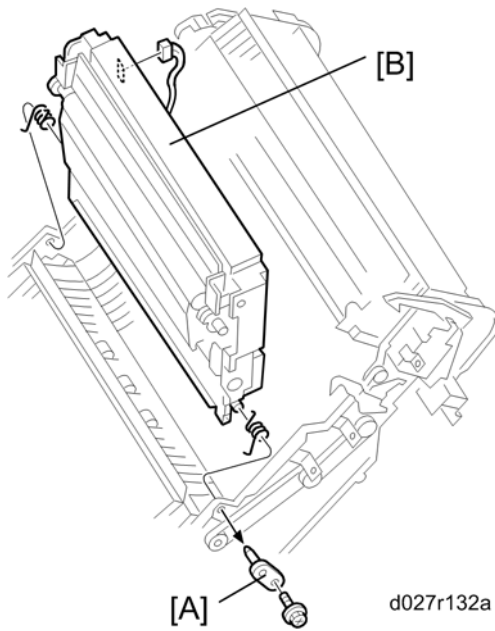


6. Right door inner cover [A] (  x 1)






7. Pivot bracket [A] (  x 1 )
8. Paper transfer unit [B] (  x 1, 2 springs )


## ID Sensor Board

1. K PCDU (  p.214 )
2. Open the right door.
3. Fusing unit (  p.267 )
4. Image transfer belt unit (  p.230 )

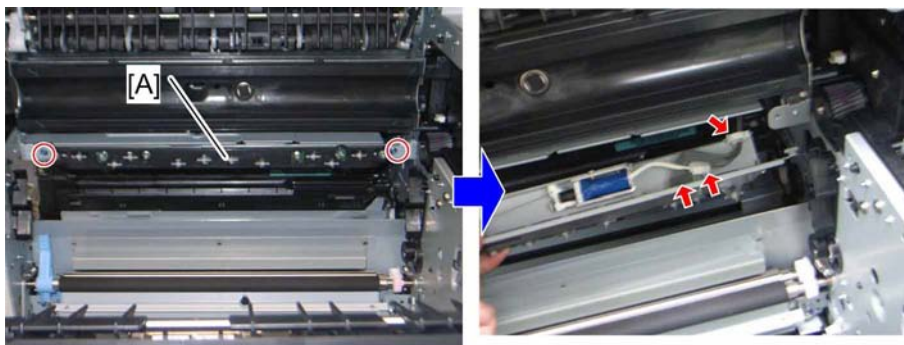



d088r145

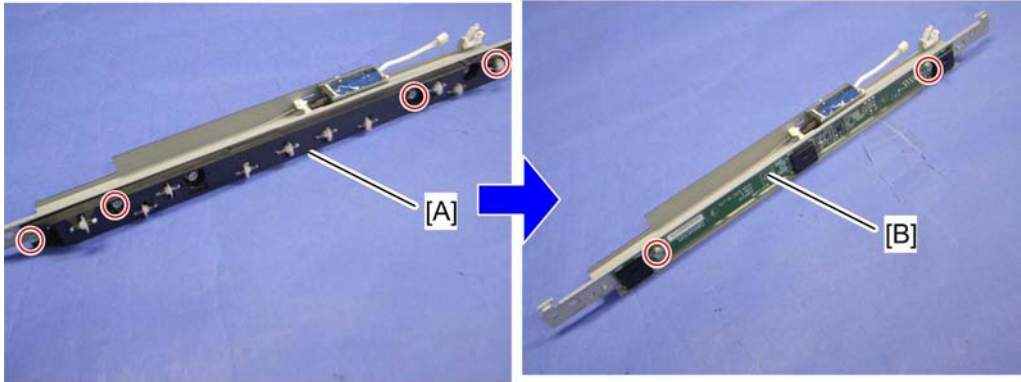5. ID sensor unit [A] (  x 2,  x 2,  x 1 )




d088r146

4




6. ID sensor cover [A] (  x 4)
7. ID sensor board [B] (  x 2)

### Cleaning for ID sensors

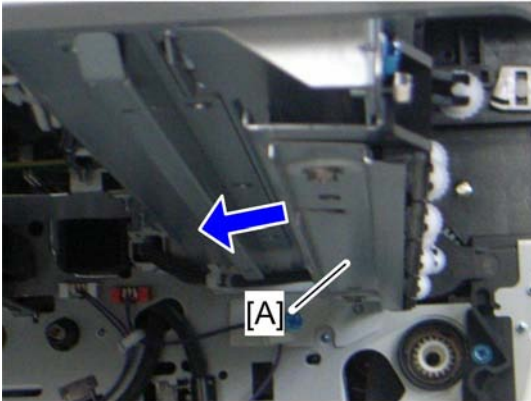ID sensors require a cleaning procedure every EM. Do the following steps for ID sensor cleaning.




d027r147

1. K PCDU (  p.214)
2. Fusing unit (  p.267)
3. Image transfer belt unit (  p.230)
4. Slide the ID sensor shutter [A] to the left side.
5. Clean the ID sensors keeping the ID sensor shutter to the left.

### After installing a new ID sensor unit/board

Do the following adjustment after installing a new ID sensor unit/board.

1. Plug in and turn on the main power switch of the copier.
2. Enter the SP mode.

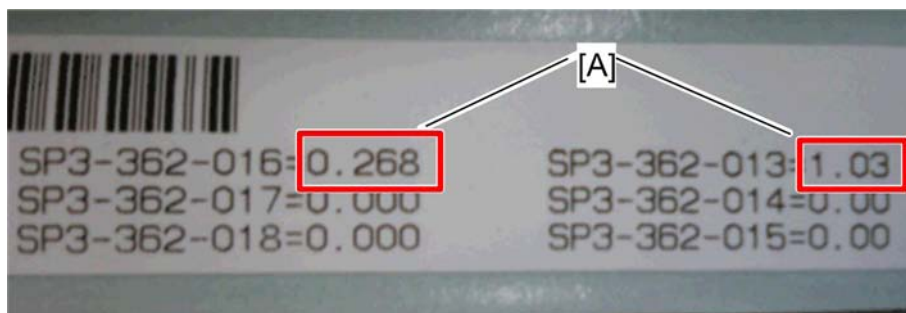

d088r502

3. Input two correction coefficients [A] for the ID sensor with SP3-362-013 and SP3-362-016 on the barcode sheet provided with the new ID sensor unit/board.

**Note**


- For example, input "1.03" with SP3-362-013.
- SP numbers other than SP3-362-013 and -016 are not required for this procedure.

4. Exit the SP mode.

4

## Temperature and Humidity Sensor

1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)

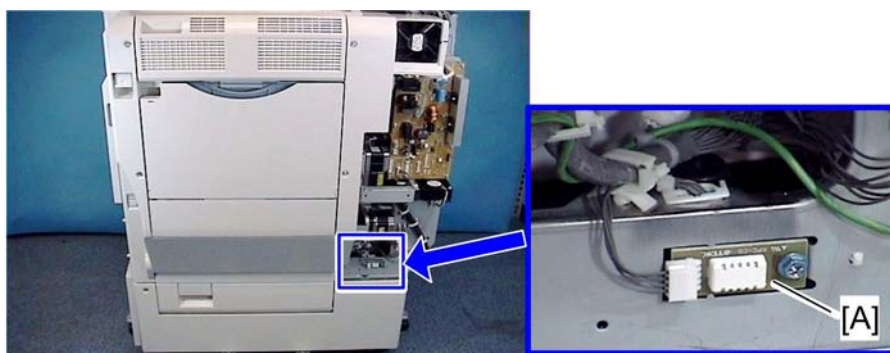


b222r559

3. Temperature and humidity sensor [A] (🔧 x 1, 📦 x 1)

# Drive Unit

4

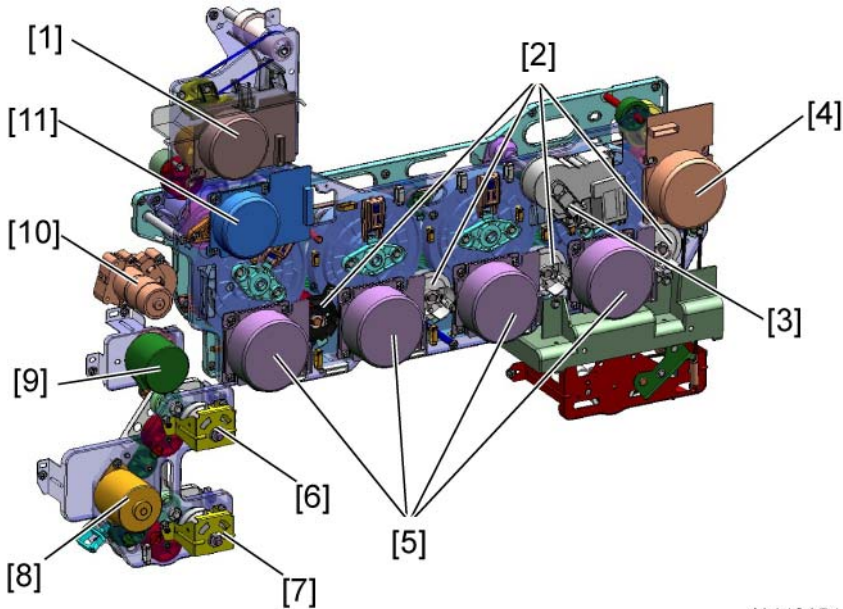

d1440154

The drawing above shows the drive unit layout.

<ul style="list-style-type: none"> <li>1. Fusing/paper exit motor</li> <li>2. Development clutches</li> <li>3. Image transfer belt contact motor</li> <li>4. Toner transport motor</li> <li>5. Drum/Development drive motors</li> <li>6. Paper feed clutch – Tray 1</li> </ul>	<ul style="list-style-type: none"> <li>7. Paper feed clutch – Tray 2</li> <li>8. Paper feed motor</li> <li>9. Registration motor</li> <li>10. Paper transfer contact motor</li> <li>11. ITB drive motor</li> </ul>
--	--

There are some motors and clutches that are not shown in the above drawing:

<ul style="list-style-type: none"> <li>• Tray lift motor 1 and 2</li> <li>• Duplex inverter motor</li> <li>• Duplex/By-pass Motor</li> </ul>	<ul style="list-style-type: none"> <li>• Junction gate 1 motor</li> <li>• Shutter motor</li> <li>• By-pass clutch</li> </ul>
--	--

## Gear Unit


1. All PCDU's (p.214)

2. Image transfer belt unit (🔧 p.230)
3. Rear cover (🔧 p.176)
4. Controller box (🔧 p.319)




d1440153

5. Toner sump cover [A] (🔧 x 2)
6. Third duct (🔧 p.223)
7. Left cover (🔧 p.175)
8. PSU bracket (🔧 p.327)

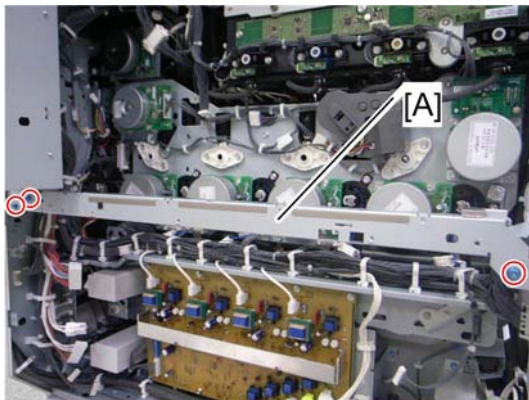

d027r148


9. Remove the rear stay [A] (🔧 x 3).

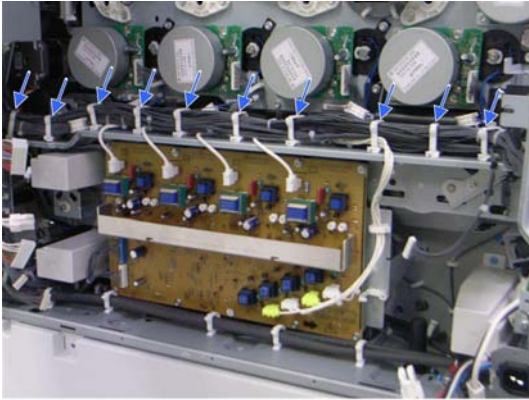

d027r149

4

10. Remove ten clamps (blue arrows).

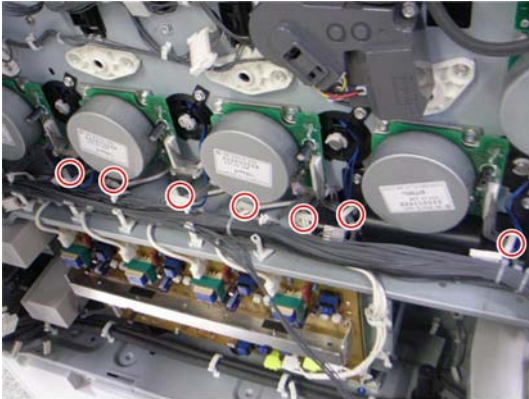


d027r150

11. Release seven clamps and turn each harness aside.



d027r151


12. Disconnect four connectors (red arrows).

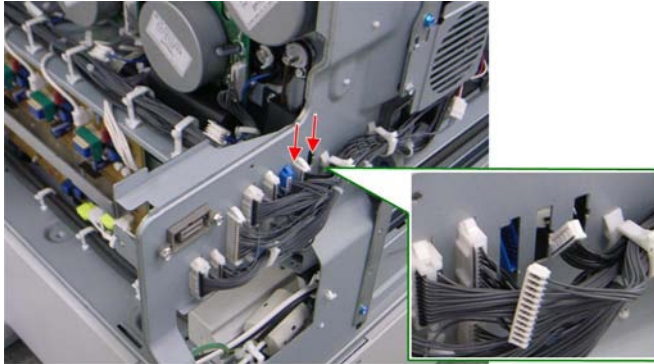

d027r152


13. Disconnect two connectors (red arrows) and put these harnesses inside the machine.

4

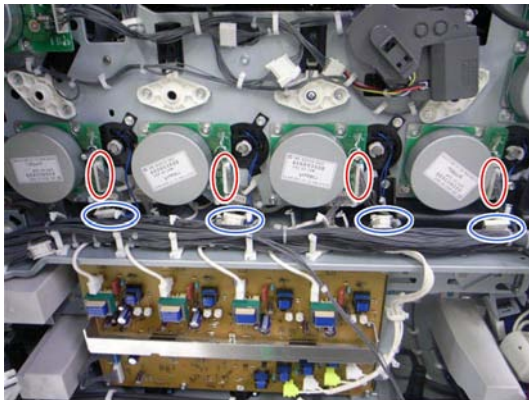


d027r153

14. Disconnect each connector (red circles) from the drum/development drive motors (🔌 x 1, 🔌 x 1 each).
15. Disconnect each connector (blue circles) from the development clutches (🔌 x 1 each).

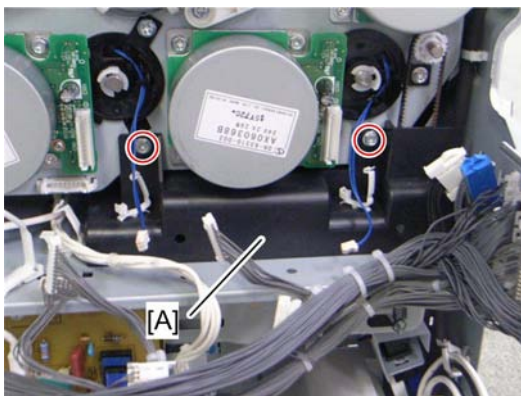

d027r155


16. Cover [A] (🔌 x 2)

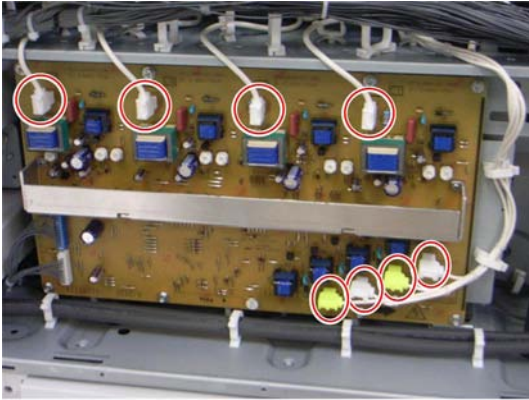

d027r156


4

17. Disconnect eight connectors from the high voltage supply board (🔌 x 8, 🖱️ x 2).

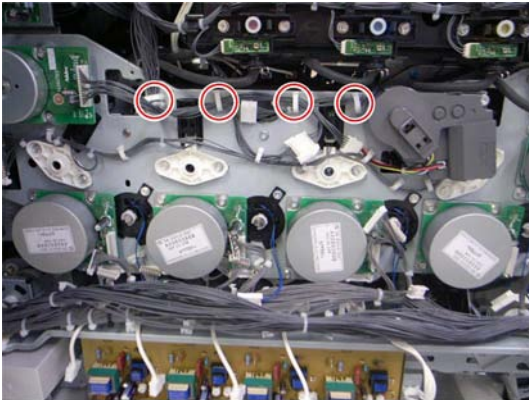

d027r157b


18. Release four clamps (red circles) and turn the harnesses aside.

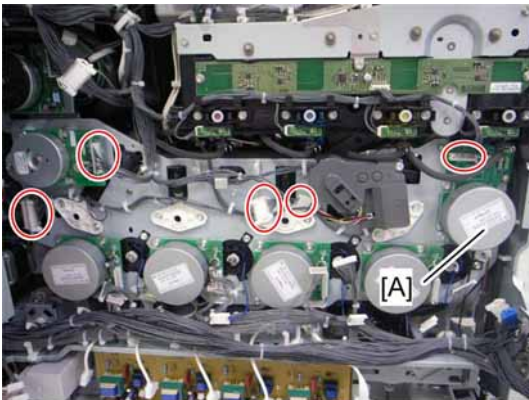

d027r158


19. Disconnect five connectors (red circles) (🔌 x 5).  
20. Toner transport motor [A] (🔧 x 3)



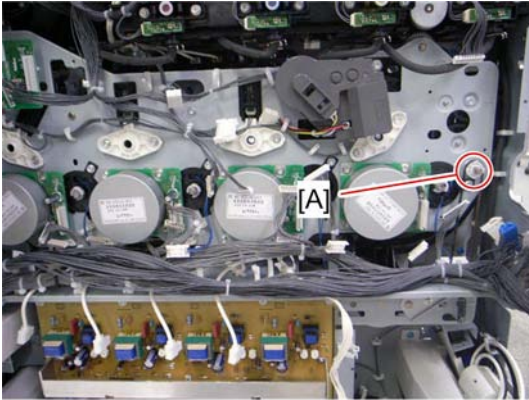

d027r159

21. Pulley [A] (timing belt)

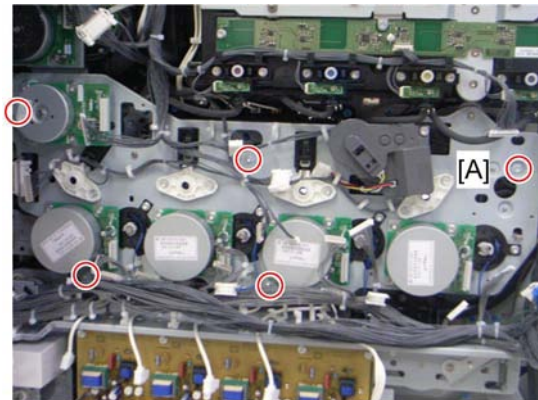


d027r160a

22. Gear unit [A] (  x 8)

### When installing the drive unit

---

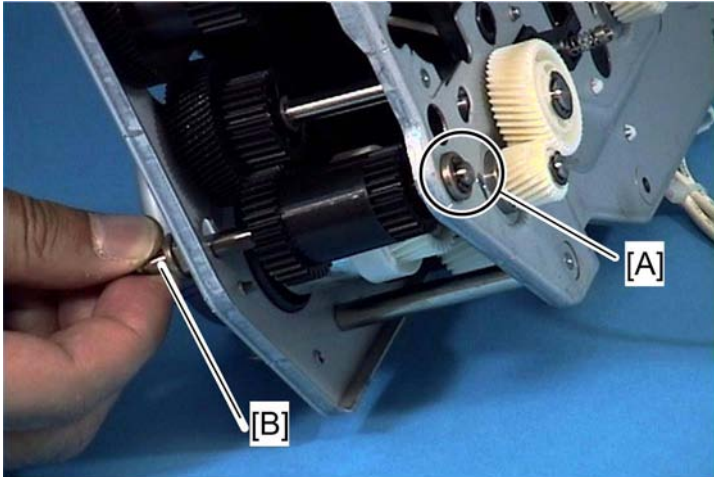

b222r573

Make sure that the bushing [A] is fully set in the frame of the gear unit before installing the timing belt and pulley to the shaft [B].

### Adjustment after replacing the gear unit

---

Do the following procedures after replacing the gear unit.

1. Turn on the main power switch.
2. Enter "System SP" in the SP mode.
3. Do "Amplitude Control" with SP1-902-001.
4. Check the result of the Amplitude Control with SP1-902-002.

0: Success, 2: Failure due to no sampling data,

3: Failure due to insufficient number of pattern detections

When the result of this adjustment is "2" or "3":

- Check that all the PCDUs are correctly set and that the image transfer belt unit is correctly set.
- Do "Amplitude Control " again after checking the PCDUs and image transfer belt unit.

When the result is still "2" or "3" after checking the PCDUs and image transfer belt unit:

- Check that the gear unit is installed correctly.

5. Exit the SP mode.


---

### Registration Motor


---

1. Rear cover (📄 p.176)


2. Right rear cover (🔧 p.176)
3. Ventilation duct (🔧 p.327)
4. PSU bracket (🔧 p.327)

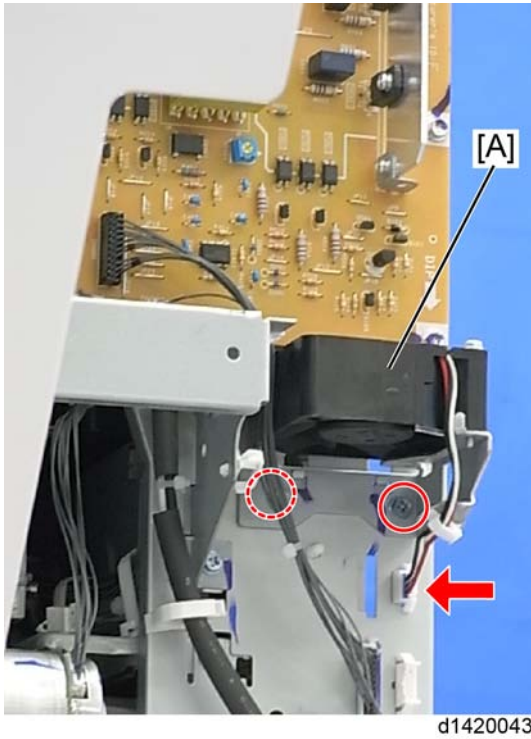


5. Fusing power supply board fan bracket [A] (🔧 x 2, 📁 x 1)

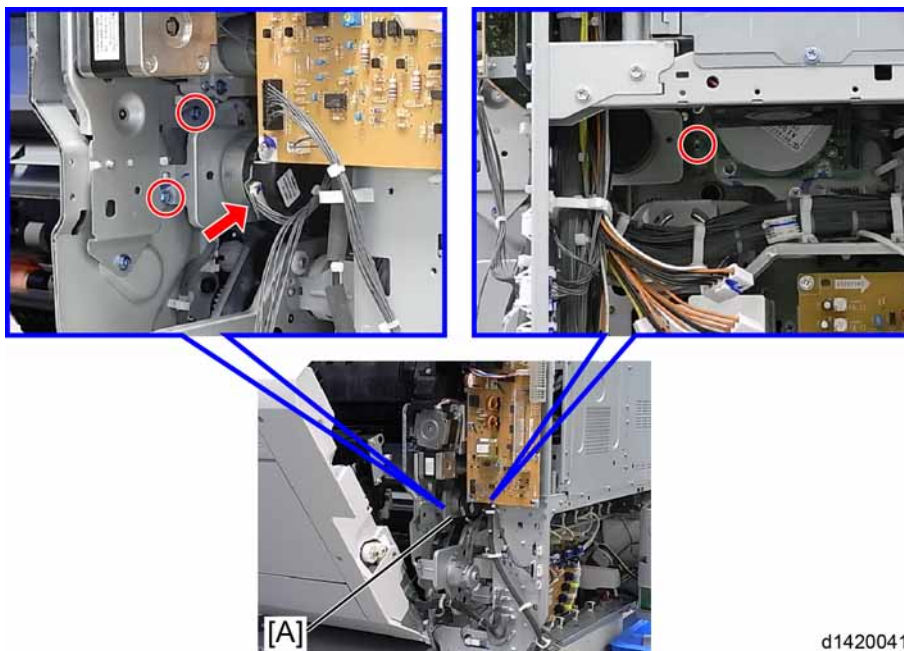


d1420041

6. Registration motor assembly [A] (  x 3,  x 1 )

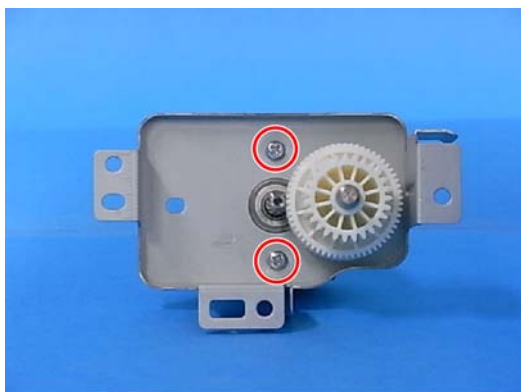



d1420042


7. Registration motor (  x 2 )

---

## Paper Feed Motor

---

1. Rear cover (  p.176 )
2. Right rear cover (  p.176 )

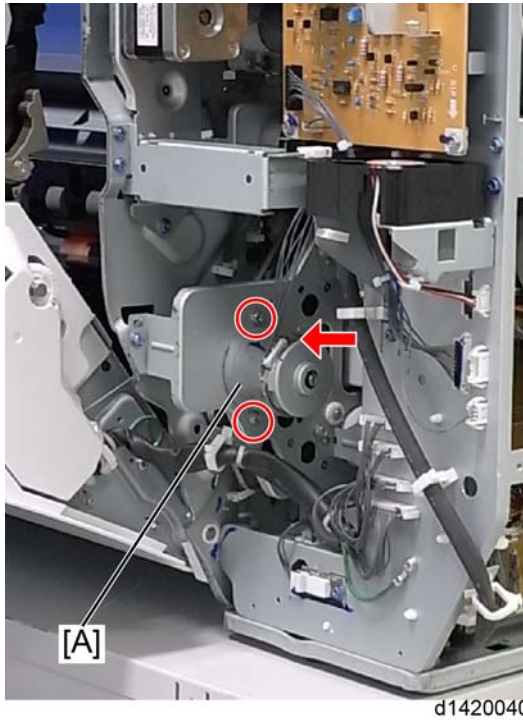


3. Paper feed motor [A] (🔧 x 1, 🔩 x 2)



---

## Drum/Development Motors for M, C, and Y

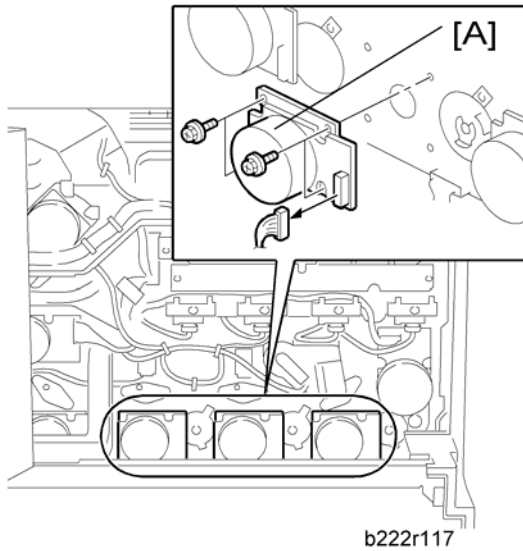


---


1. Rear cover (🔧 p.176)
2. PSU bracket (🔧 p.327)
3. Open the controller box (🔧 p.319).







4. Drum/Development motors (three motors, one each for MCY) [A] (  x 4,  x 1 each)
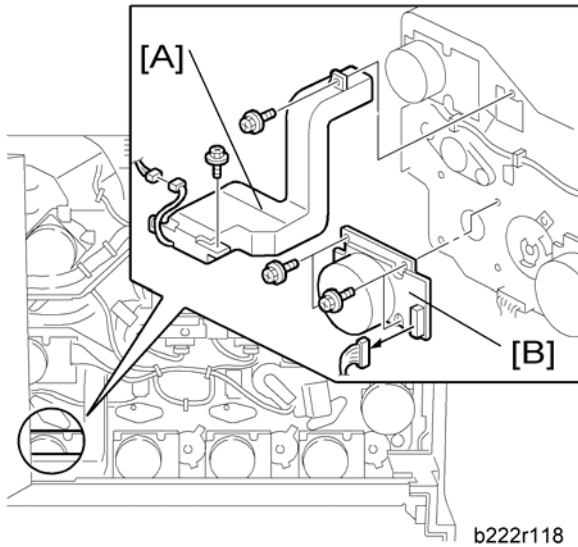
### Drum/Development Motor-K



1. Rear cover ( p.176)
2. PSU bracket ( p.327)
3. Controller box ( p.319)






4. Third duct [A] (  x 2,  x 1)

5. Drum/Development motor-K [B] (  x 4,  x 1 )

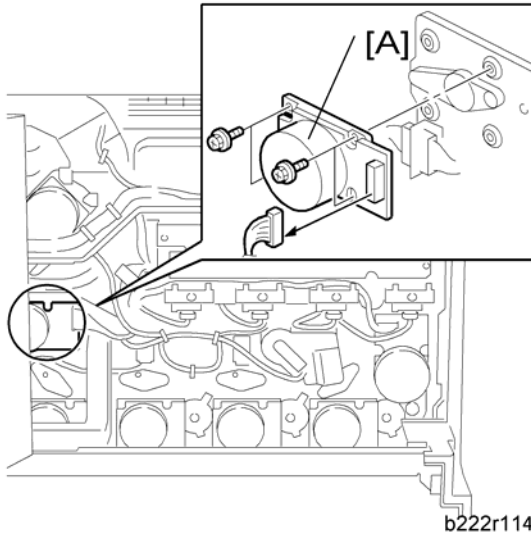

## ITB Drive Motor


1. Rear cover (  p.176 )
2. Controller box (  p.319 )





3. ITB drive motor [A] (  x 4,  x 1 )

## Fusing/Paper Exit Motor

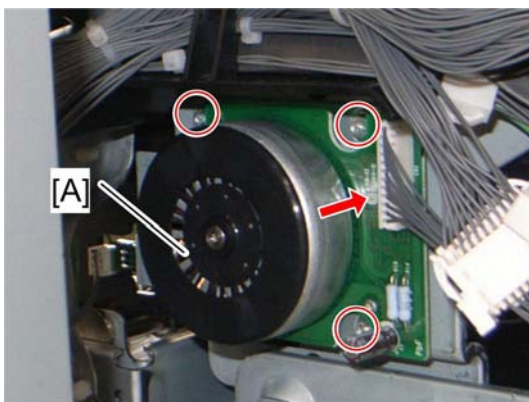1. Rear cover (  p.176 )
2. Controller box (  p.319 )






3. Fusing/paper exit motor [A] (  x 3,  x 1 )

---



## Image Transfer Belt Contact Motor

---

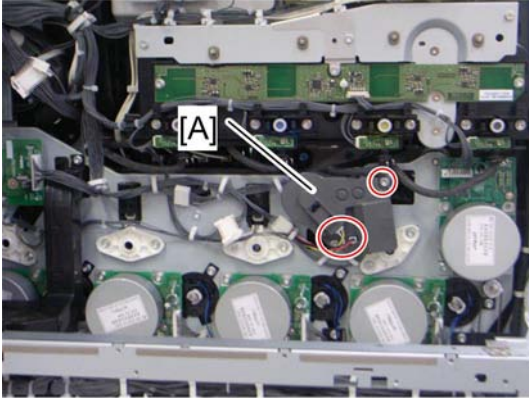1. Rear cover (  p.176 )
2. Controller box (  p.319 )




d027r164


3. Transfer belt contact motor [A] (  x 2,  x 2 )

---


## Duplex Inverter Motor

---


1. Open the right door.
2. Right door cover (  p.303 )

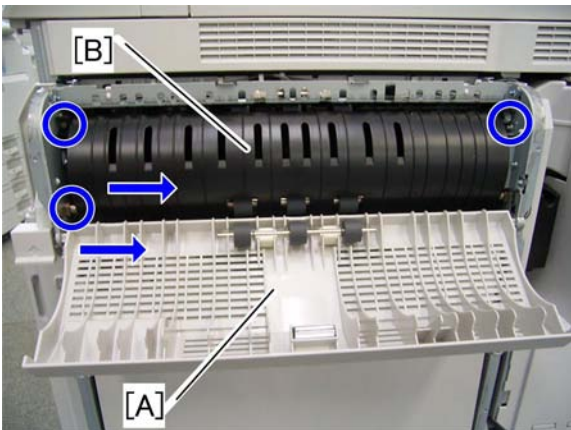

d027r659


3. Duplex door [A] ( 2 hooks )
4. Duplex guide plate [B] (  x 3, 2 hooks )



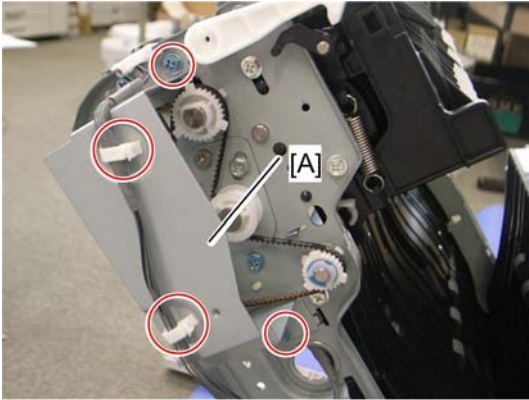


d027r166

5. Duplex inverter motor bracket cover [A] (  x 2,  x 2 )

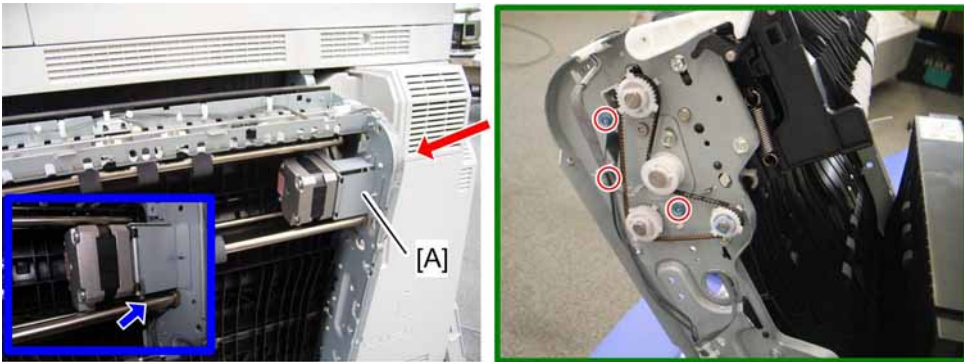



d027r660b

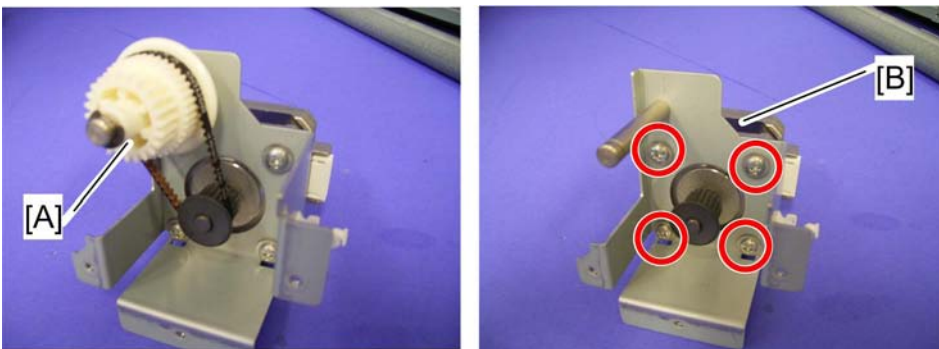6. Duplex inverter motor bracket [A] (  x 3,  x 1,  x 1 )



d027r661

7. Gear [A] (  x 1, belt x 1 )


8. Duplex inverter motor [B] (  x 4 )

---


## Pressure Roller Contact Motor

---

1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)
3. Open the controller box (🔧 p.319)

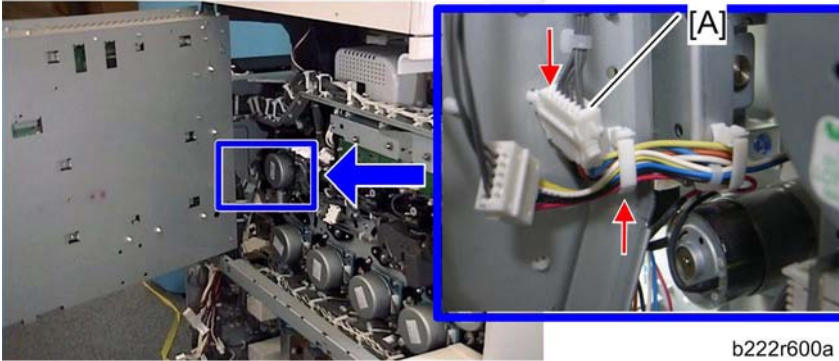

4. Disconnect the connector [A] (🔧 x 1).

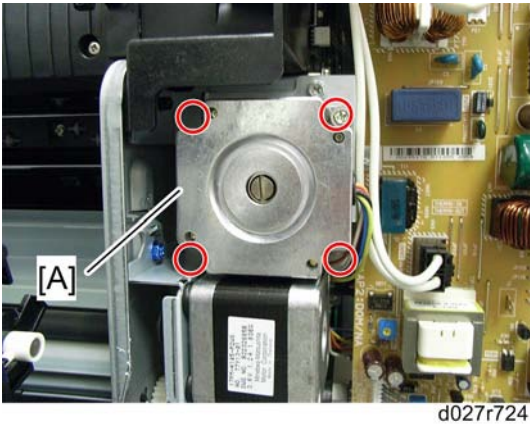


5. Pressure roller contact motor [A] (🔧 x 4)


---


## Duplex/By-pass Motor

---


1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)
3. Open the controller box (🔧 p.319).
4. Pressure roller contact motor (🔧 p.256)

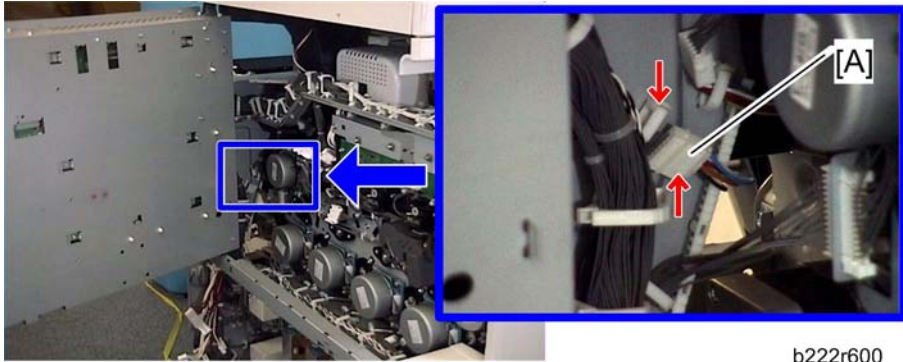

5. Disconnect the connector [A] (  x 1,  x 1 )

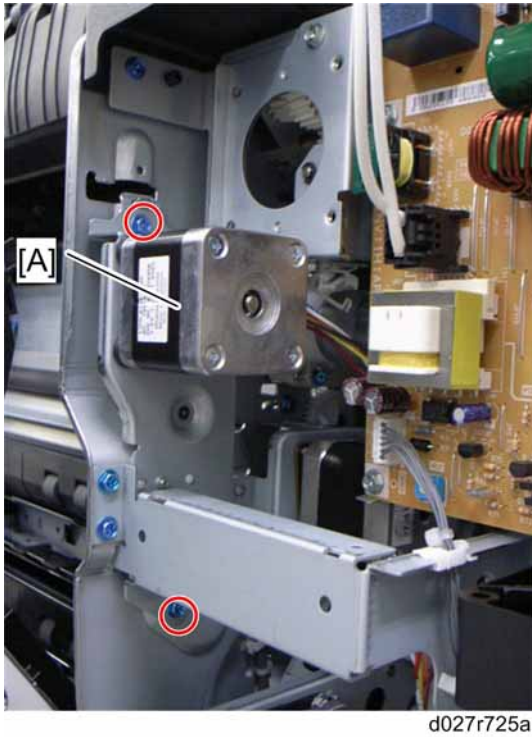

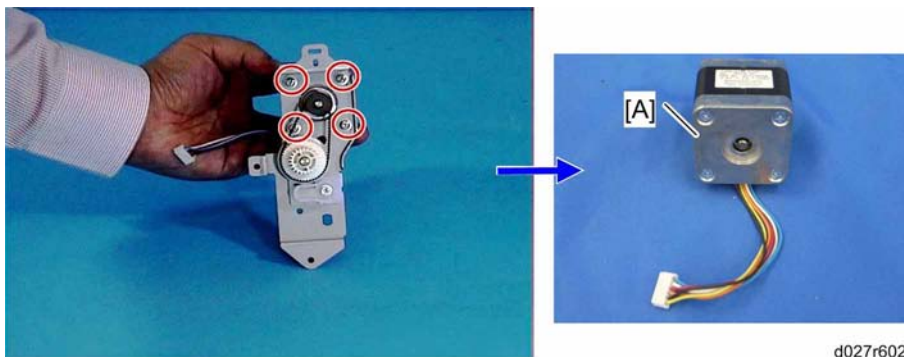


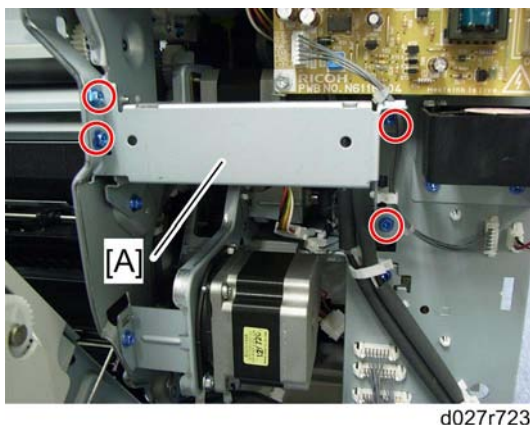
6. Duplex/by-pass motor bracket [A] (  x 2 )






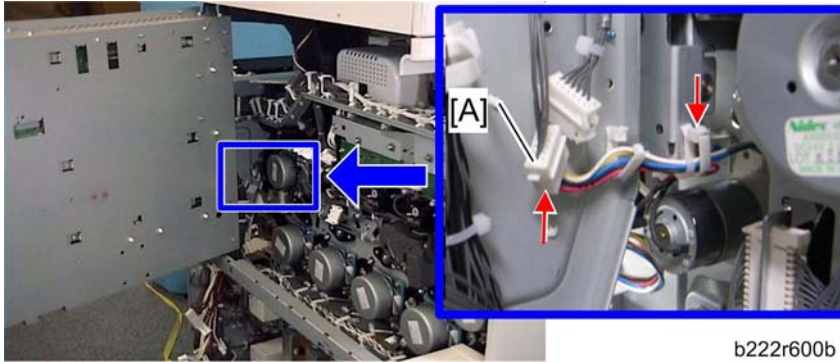
7. Duplex/by-pass motor [A] (  x 4, belt x 1)

## Paper Transfer Contact Motor


1. Rear cover (  p.176)
2. Right rear cover (  p.176)
3. Open the controller box (  p.319).



4. Stay [A] (  x 4)
5. Pressure roller contact motor (  p.256)
6. Duplex/by-pass motor bracket (  p.256)




7. Disconnect the connector [A] (  x 1 )

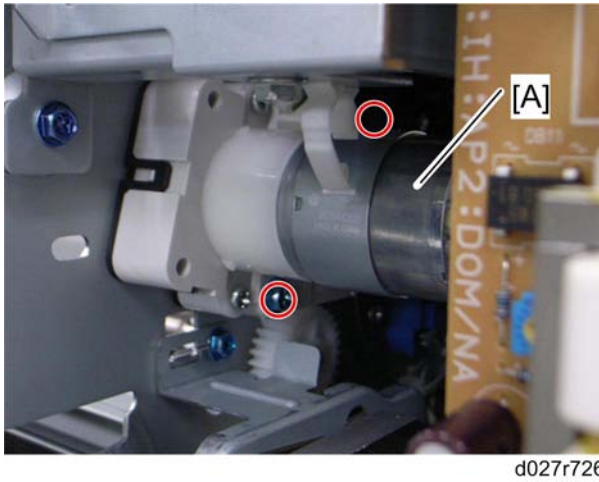

8. Paper transfer contact motor [A] (  x 2 )


**NOTE:**

The picture below shows how to use the screwdriver to remove the screws of the paper transfer contact motor.

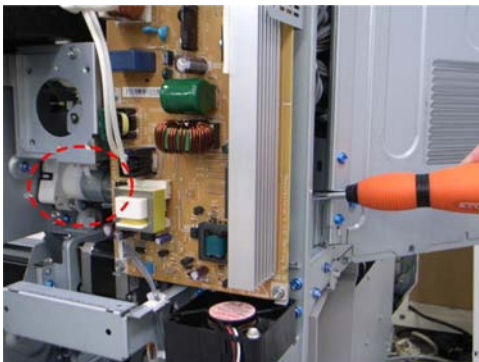

## Toner Transport Motor


1. Rear cover (p.176)
2. Open the controller box (p.319)

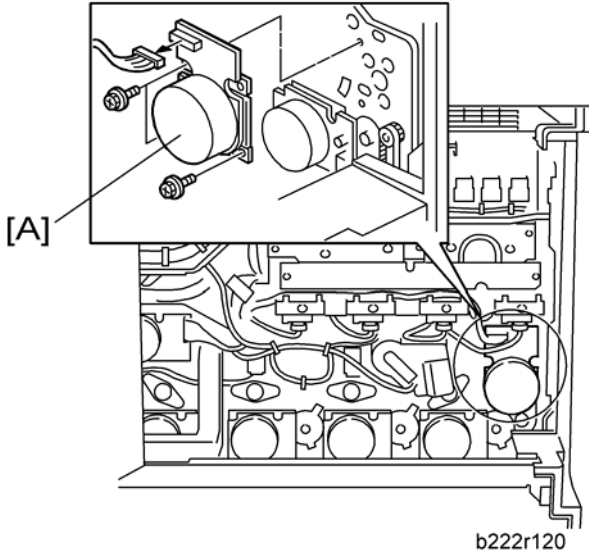

3. Toner transport motor [A] (  x 3,  x 1 )


## Toner Collection Unit

1. Gear Unit (p.242)

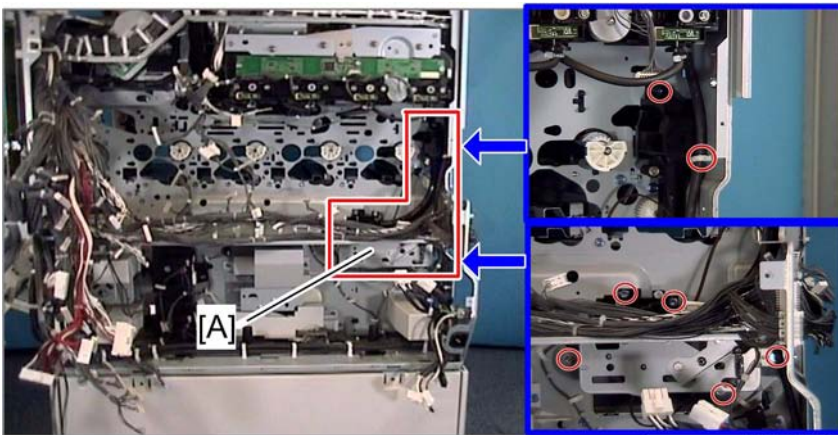






b222r577

2. Toner collection unit [A] (  x 6,  x 1 )

4


## Paper Feed Clutches

1. Rear cover (  p.176 )
2. PSU bracket (  p.327 )

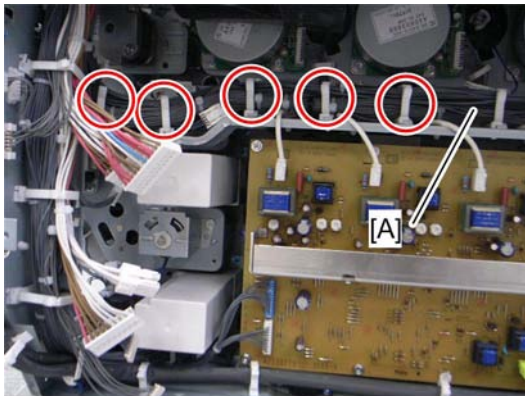


d027r578

3. Release five clamps, and then turn the harness [A] aside.

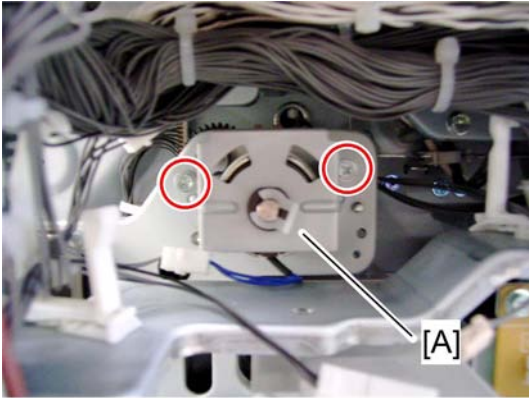


d027r580

4. Paper feed clutch 1 bracket [A] (  x 2,  x 1,  x 1,  x 1 )

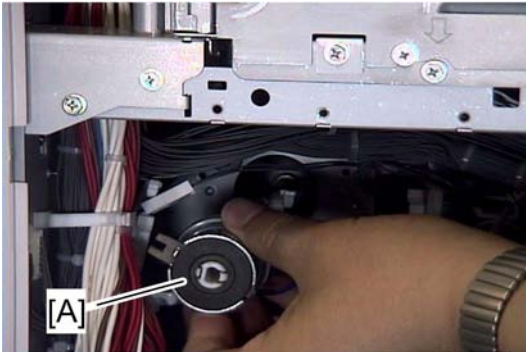

d027r581


5. Paper feed clutch 1 [A]

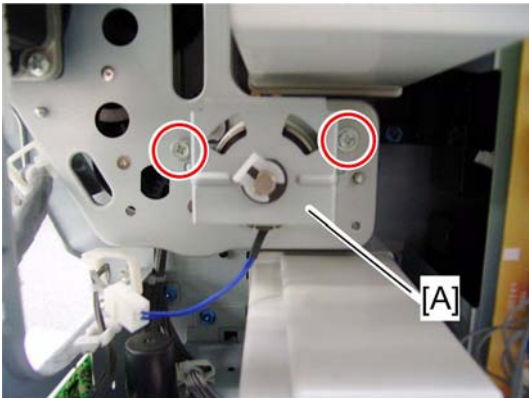

d027r582

6. Paper feed clutch 2 bracket [A] (  x 2,  x 1,  x 1 )



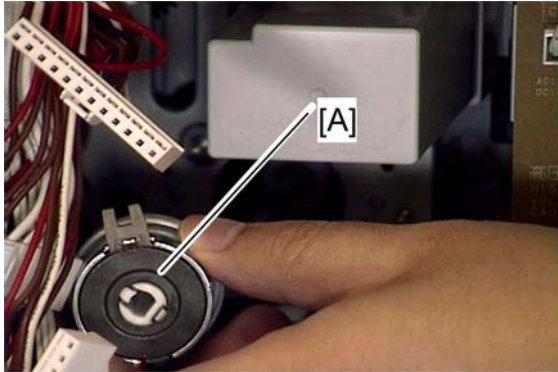


d027r583

7. Paper feed clutch 2 [A]

4


## Development Clutch-Y

1. Rear cover (p.176)
2. PSU bracket (p.327)
3. Open the controller box. (p.319).
4. Toner sump cover (p.242)
5. Drum/development motor-Y (p.251)

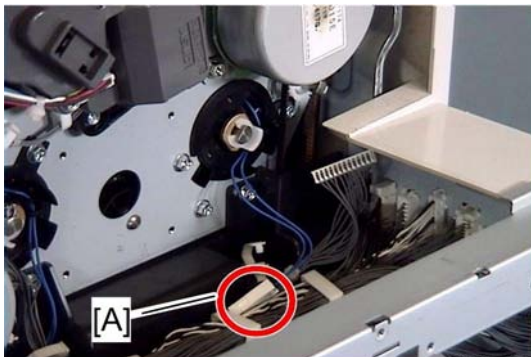

b222r584


6. Disconnect the connector [A] (x 1).

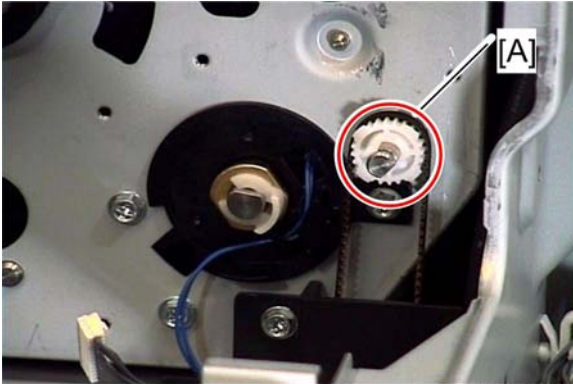


b222r585

4

7. Remove the pulley and bushing [A].

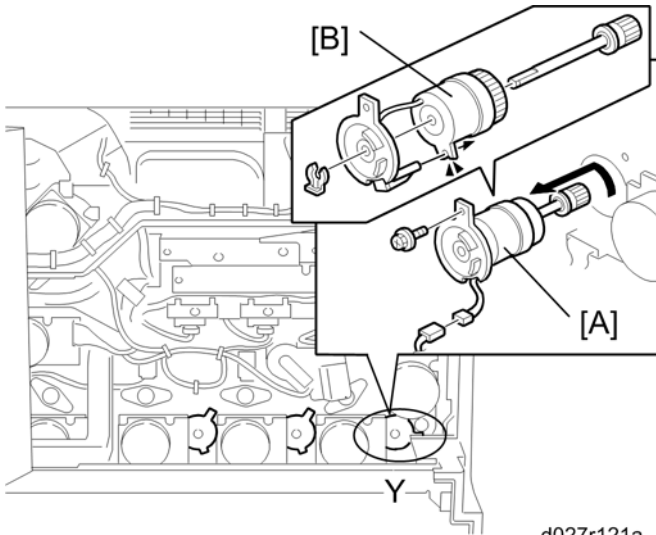








d027r121a

8. Turn the development clutch unit [A] counter-clockwise and then pull it out (  x 1 ).



9. Development clutch-Y [B] (  x 1 )

## Development Clutches for M and C

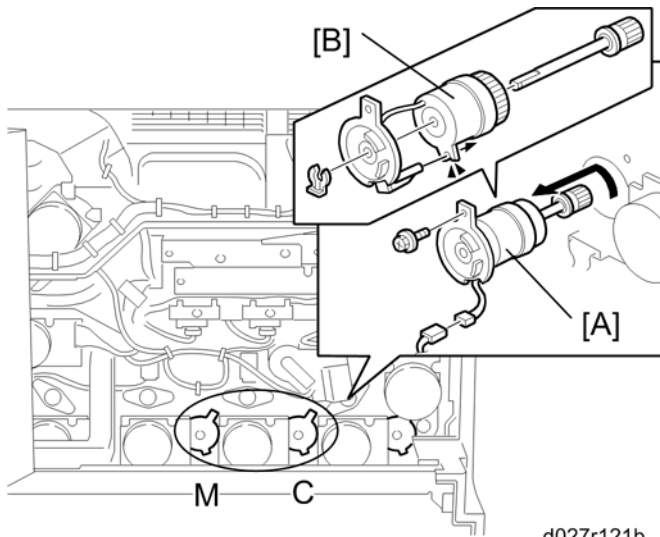



1. Rear cover (  p.176 )
2. PSU bracket (  p.327 )
3. Open the controller box (  p.319 ).
4. Toner sump cover (  p.242 )
5. Drum/development motors for M and C (  p.251 )
6. Disconnect the connector for each development clutch (  x 1 ).




d027r121b


7. Turn the development clutch unit [A] counter-clockwise and then pull it out (  x 1 ).
8. Development clutches for M and C [B] (  x 1 )


## Development Clutch-K

1. Rear cover (  p.176 )
2. PSU bracket (  p.327 )
3. Controller box (  p.319 )
4. Drum/development motor-K (  p.252 )

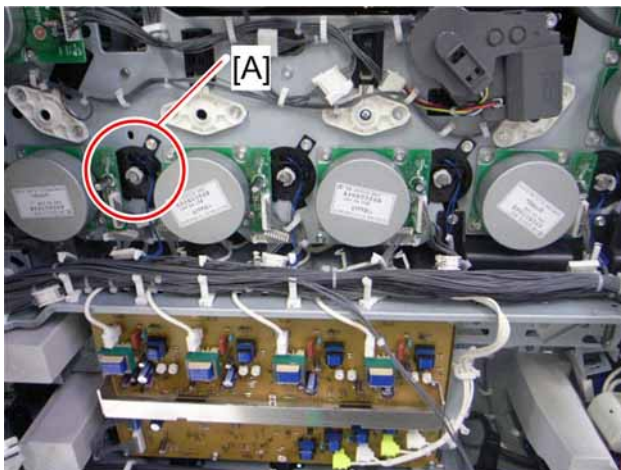

d027r586

5. Turn the development clutch unit [A] counter-clockwise and then pull it out (  x 1 ).

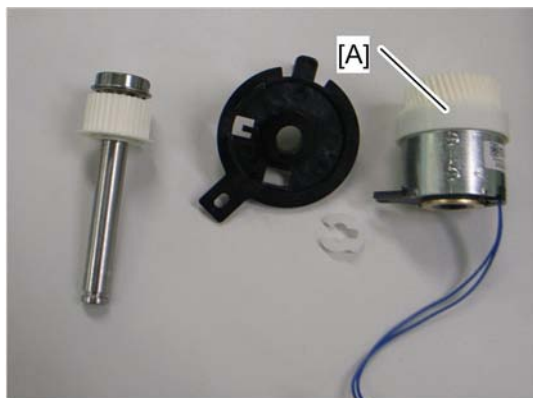

d027r167



4

6. Development clutch-K [A] (🔧 x 1)

# Fusing

## Fusing Unit PM Parts

In the fusing unit, there are some PM parts. Refer to the following list to check the PM parts.

PM Parts	Replacement Procedure
Heating Sleeve belt unit	 p.275
Pressure roller	 p.278

4

## Fusing Unit

### CAUTION


- Turn off the main switch and wait until the fusing unit cools down before beginning any of the procedures in this section. The fusing unit can cause serious burns.

### Important

- After the PM counter for the heating roller has reached its PM life (300K pages), the machine stops the operation automatically. Replace the heating roller before the machine stops its operation (stop warning: 315K pages, stop: 330K pages).
  - Change the setting of SP3-902-018 from "0" to "1" before replacing the heating roller. Otherwise, the machine will not recover.
1. If you will replace the heating roller or pressure roller in the fusing unit (at PM for example), then reset each counter.
    - Set SP 3902-018 to "1" for the heating sleeve belt unit replacement.
    - Set SP 3902-019 to "1" for the pressure roller replacement.


### Note

- If you do this, then the machine will reset the PM counter for the heating sleeve belt unit or pressure roller automatically, after you turn the power on again.
  - It is not necessary to clear the PM counter for the fusing unit with SP mode when you replace the fusing unit. This is because the fusing unit has a new unit detection mechanism.
2. Turn off the main power switch.
  3. Open the right door.

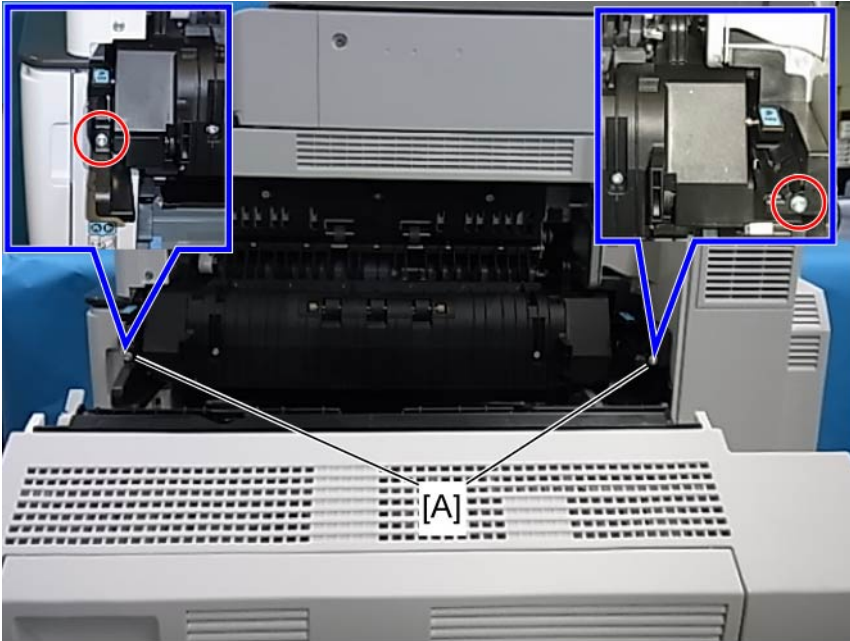

d1440035

4. Remove two transport brackets [A] if installed (  x 1 each).

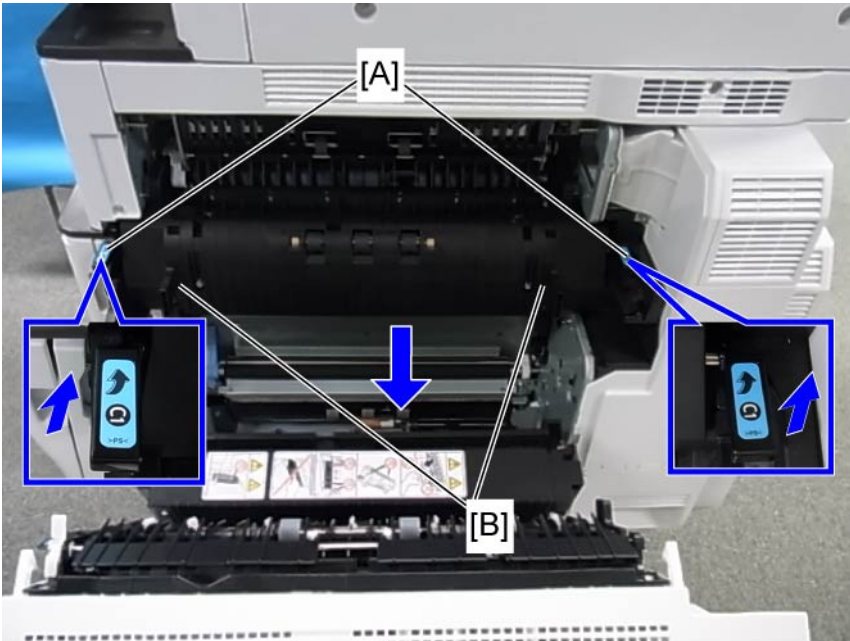


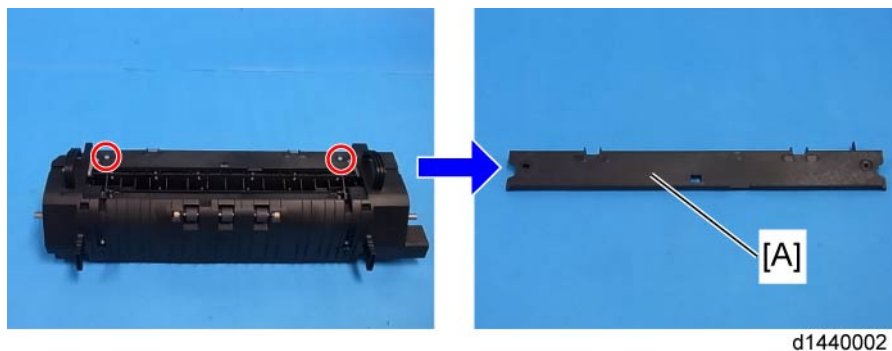
d1440003

5. Release the lock levers [A].


6. Hold the fusing unit handles [B], and then pull out the fusing unit.

## Fusing Exit Shutter Plate


1. Fusing unit (  p.267)




d1440002

2. Fusing exit shutter plate [A] (  x 2)

## Fusing Entrance Guide Plate

1. Fusing unit (  p.267)
2. Turn over the fusing unit.

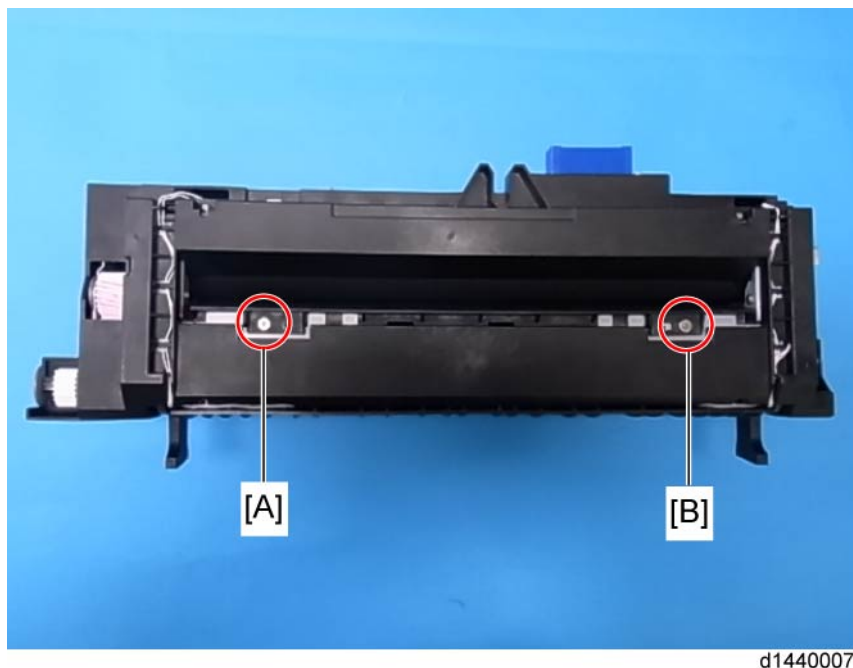

d1440007



d1440008

3. Fusing entrance guide plate [C] (  x 2 )

 **Note**

- Screw [A] and screw [B] are different from each other.

### Cleaning Requirement

---



d088r374


The fusing entrance guide plate requires cleaning maintenance every fusing unit maintenance interval. Clean the fusing entrance guide plate at the place shown above with a dry cloth, and then clean the fusing entrance guide plate again with a cloth moistened with alcohol.



## Fusing Exit Guide Plate Cleaning Procedure

The fusing exit guide plate requires cleaning maintenance every fusing unit maintenance interval.


1. Fusing unit (🔧 p.267)

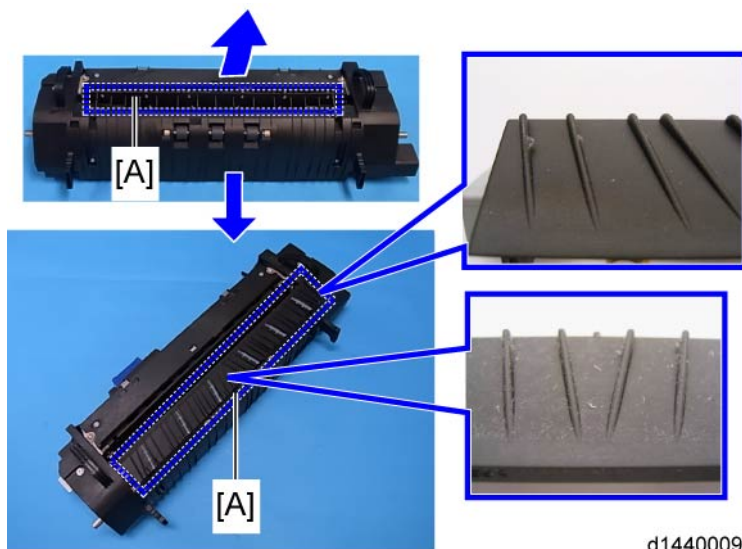



2. Open the exit guide plate [A].
3. Clean the exit guide plate with a dry cloth, and then clean the exit guide plate again with a cloth moistened with alcohol at the points shown above.


## Fusing Unit Upper Cover

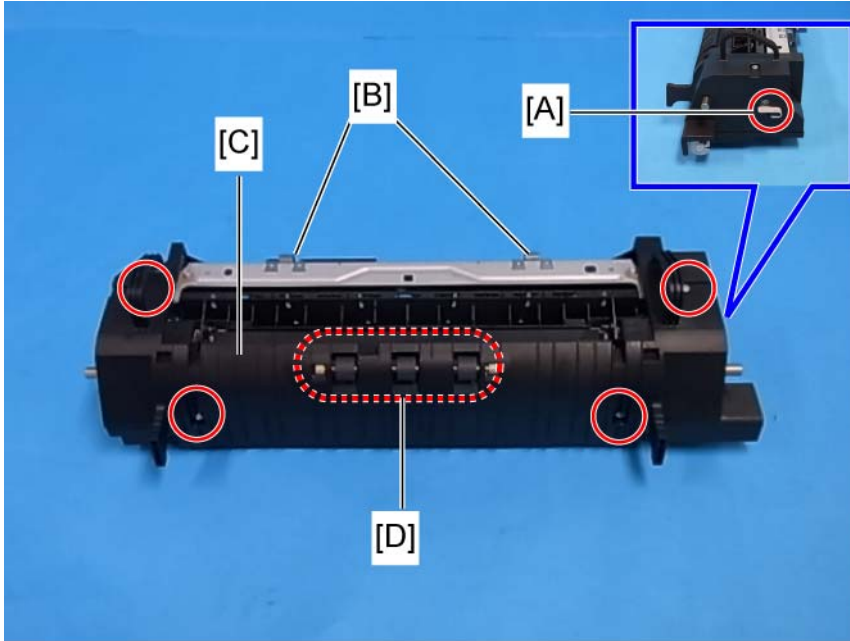1. Fusing unit (🔧 p.267)
2. Fusing exit shutter plate (🔧 p.269)




d1440004

3. Right guide bracket [A] (  x 1)
4. Springs [B]
5. Remove the fusing unit upper cover [C] while pressing down the rollers [D] (  x 4).

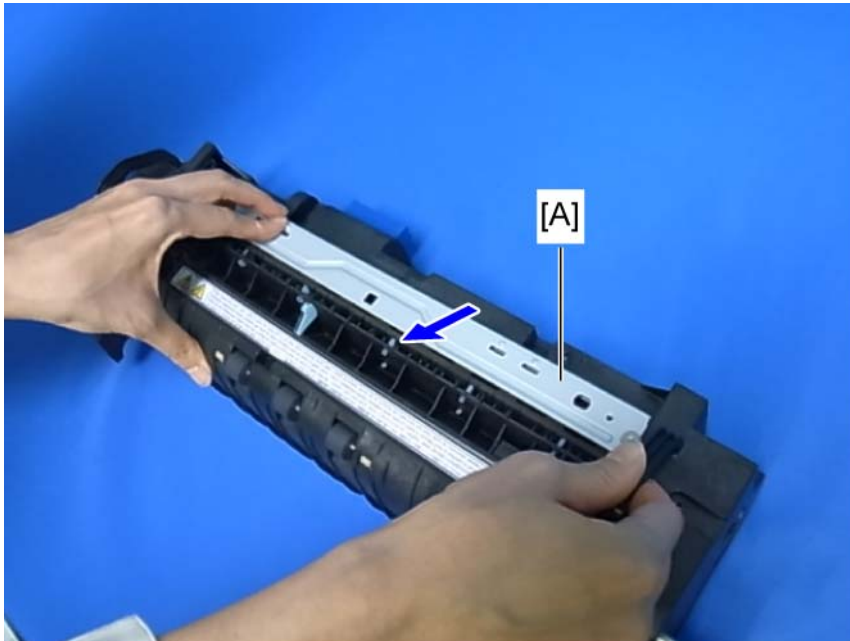

d1440121

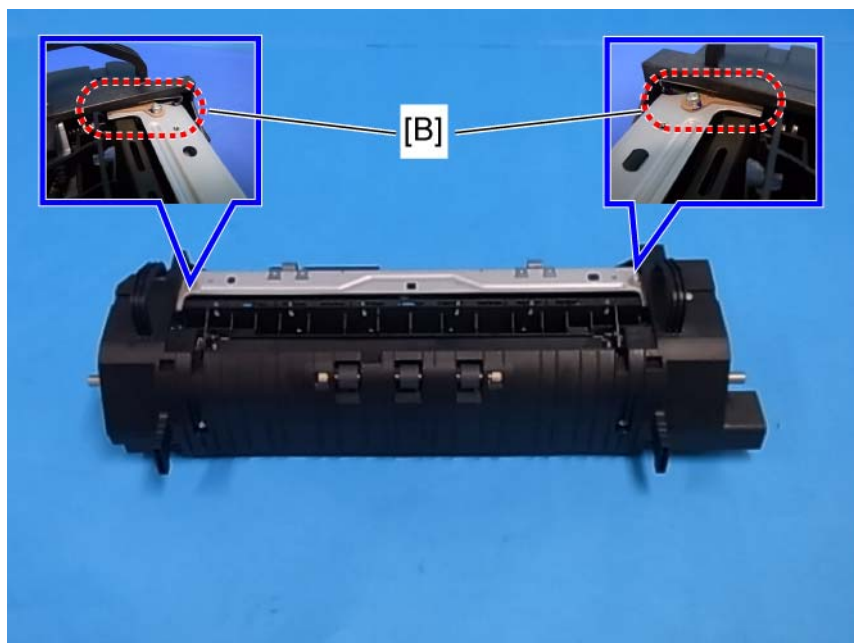

d1440122

**★ Important**


- When reinstalling the fusing unit upper cover:
- The shutter plate [A] should be closed whenever the fusing unit upper cover is reinstalled. Otherwise, the ends of the shutter plate [B] may be damaged and this will result in a problem when opening and closing the shutter.

---

**Fusing Unit Lower Cover**



---

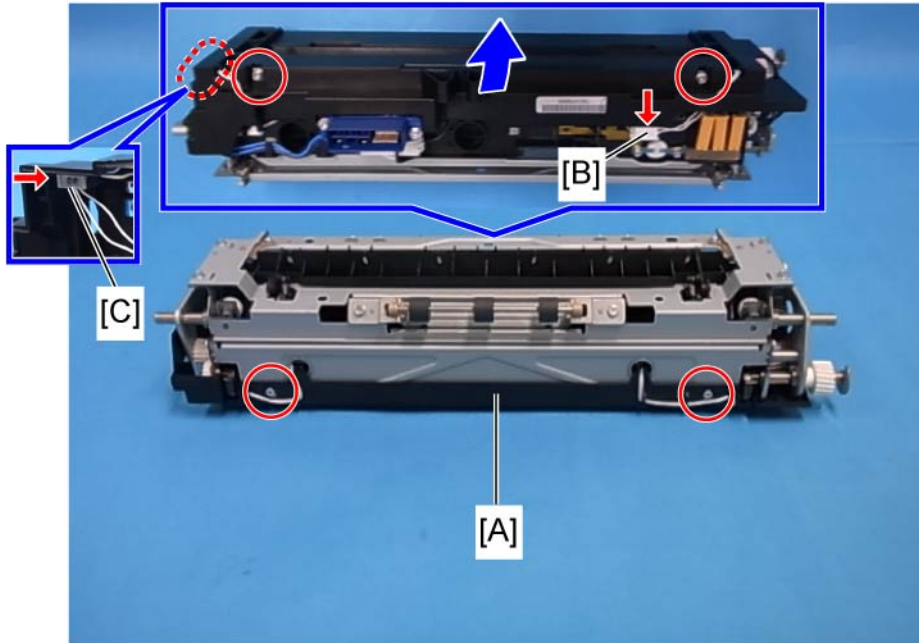1. Fusing unit (📖 p.267)
2. Fusing unit upper cover (📖 p.271)




d1440005

4

3. Place the fusing unit upside down.
4. Lift up the fusing unit lower cover [A] half way (  x 4).
5. Disconnect two connectors [B], [C] and remove the wire harnesses from their harness guides (  x 2).

 **Note**

- The fusing lower cover cannot be removed from the fusing main body completely before removing the thermistors. Therefore, pay extra attention to handling the fusing lower cover when disassembling the fusing unit.

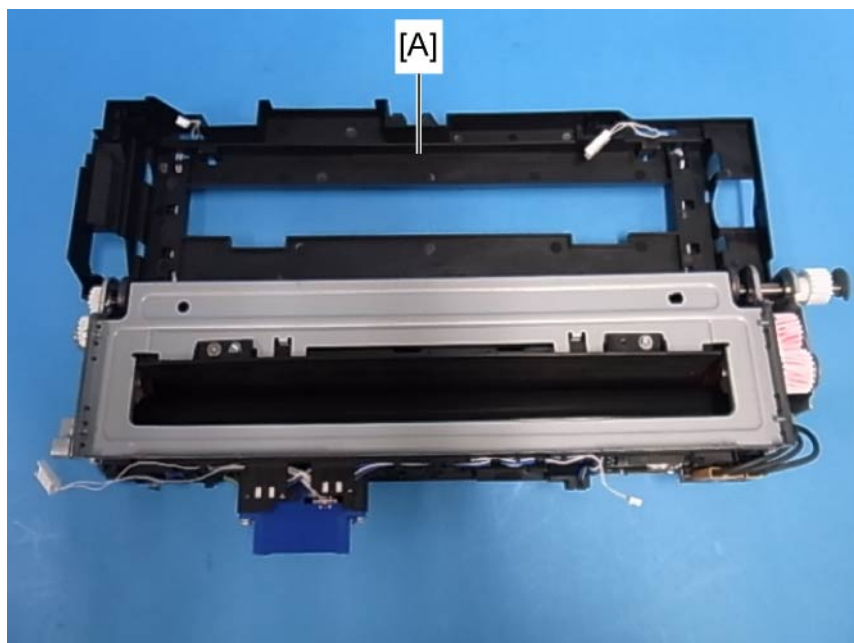

d1440006

#### 6. Fusing unit lower cover [A]

---


## Heating Sleeve Belt Unit

---




### ★ Important

- After the PM counter for the heating roller has reached its PM life (300K pages), the machine stops the operation automatically. Replace the heating roller before the machine stops its operation (stop warning: 315K pages, stop: 330K pages).
- Change the setting of SP3-902-018 from "0" to "1" before replacing the heating sleeve belt unit. Otherwise, the machine will not recover.

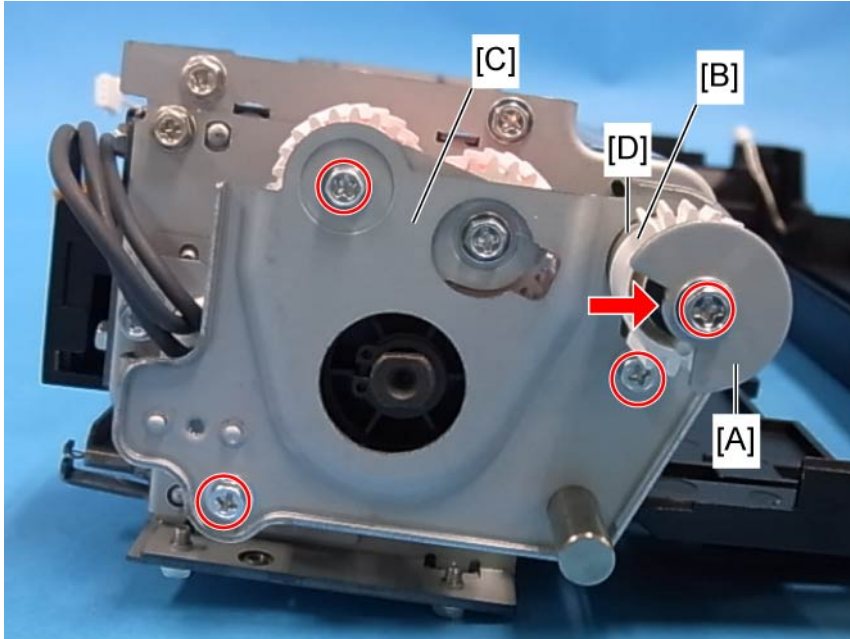
1. Fusing unit (📄 p.267)
2. Fusing unit upper cover (📄 p.271)
3. Fusing unit lower cover (📄 p.273)
4. Fusing entrance guide plate (📄 p.269)



d1440010


5. Pressure roller contact shaft actuator [A] and pressure roller contact shaft gear [B] (  x 1,  x 1)
6. Bearing [D]
7. Right stay [C] (  x 3)
8. Turn over the fusing unit gently to prevent the harnesses from damage.


1:

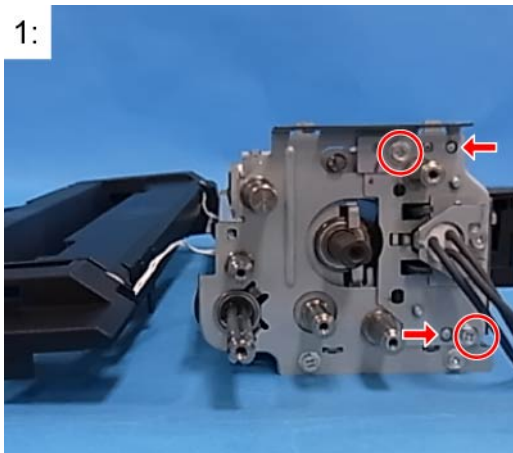

d1440011

1: Right side


9. Remove two screws at the right side (  x 2).

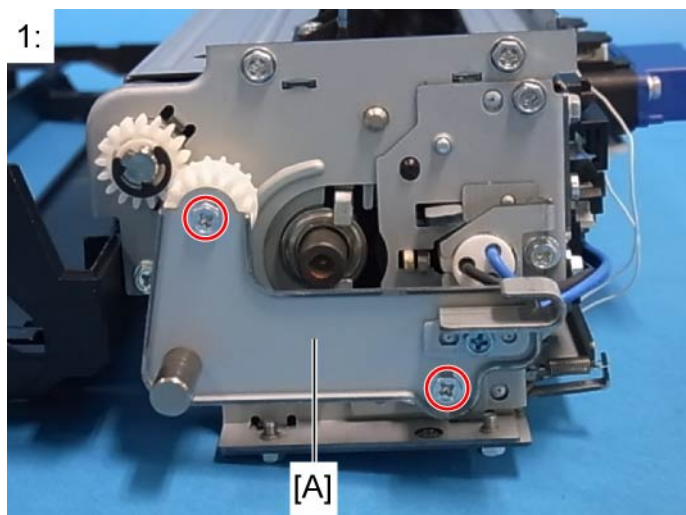

d1440012




1: Left side

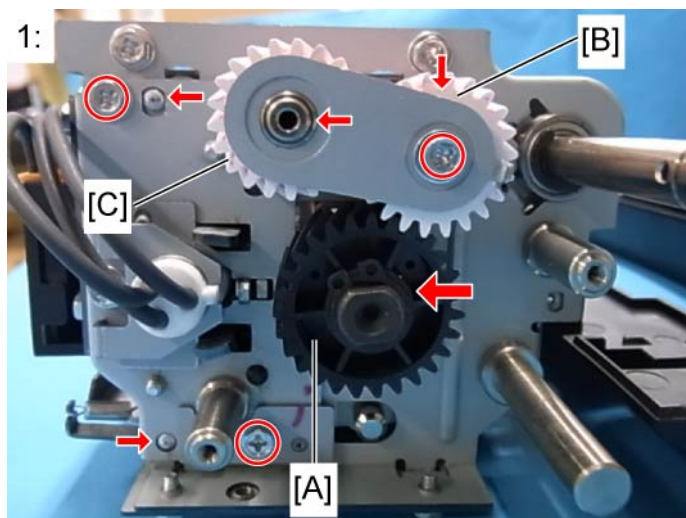
10. Left bracket [A] (  x 2 )



d1440013

1: Left side

11. Remove gears [A], [B], [C] (  x 1,  x 1, bearings x 2 ).
12. Remove two screws on the left side (  x 2 ).

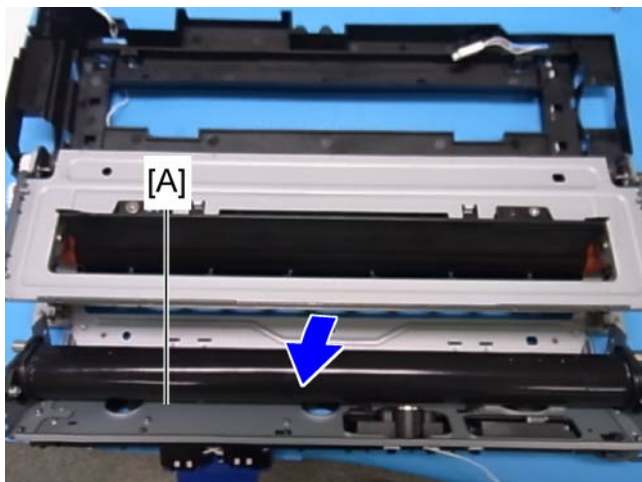

d1440014

4

13. Remove the heating sleeve belt unit while releasing 4 snapping points at the right and left side (See the photos of steps 9 and 11).

**Note**

- The surface of the heating sleeve belt is delicate. Never touch the surface. Do not wipe the surface with anything. If the surface of the heating sleeve belt must be cleaned because of offset image for example, feed some sheets of white paper through the fusing unit instead.


---

## Pressure Roller

---


1. Heating sleeve belt unit (📄 p.275)



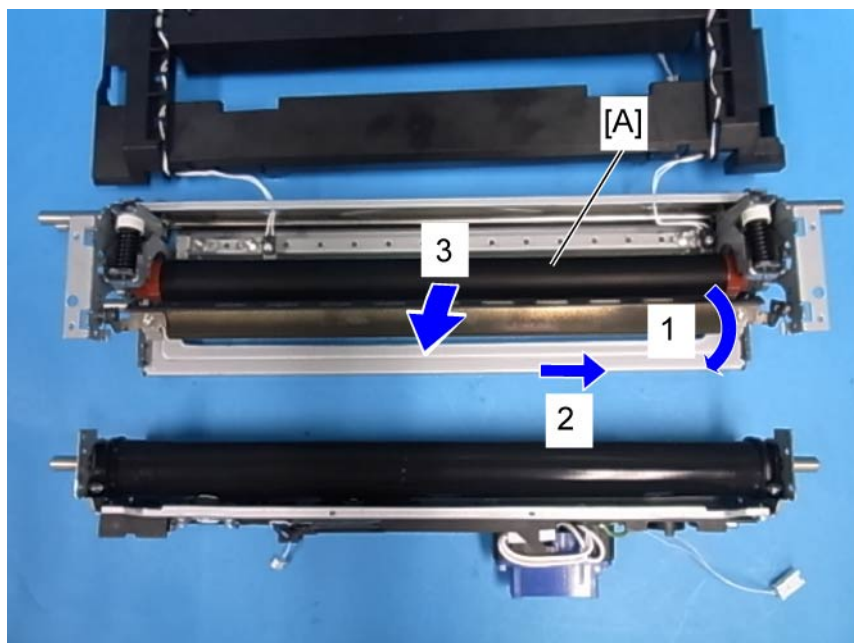

d1440015


2. Remove the pressure roller with bearings [A].

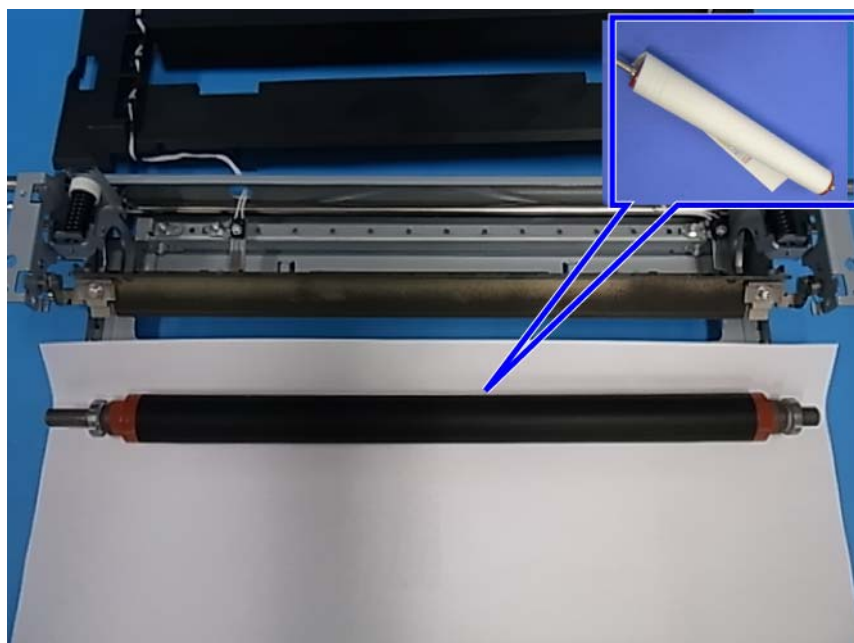

d1440016

↓ **Note**

- The surface of the pressure roller is fragile, so the pressure roller must be covered with a sheet of paper when it is placed on a table or floor.

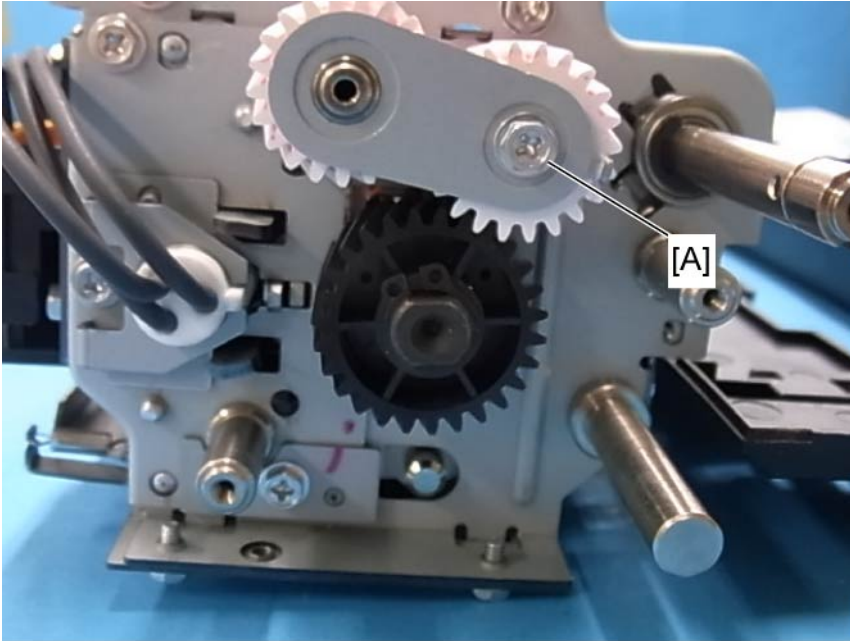


d1440017

**Note**

- Do not wipe off the grease of the new fusing drive gear when replacing the fusing drive gear [A].

## Stripper Plate


1. Fusing unit (📄 p.267)
2. Heating sleeve belt unit (📄 p.275)
3. Pressure roller (📄 p.278)

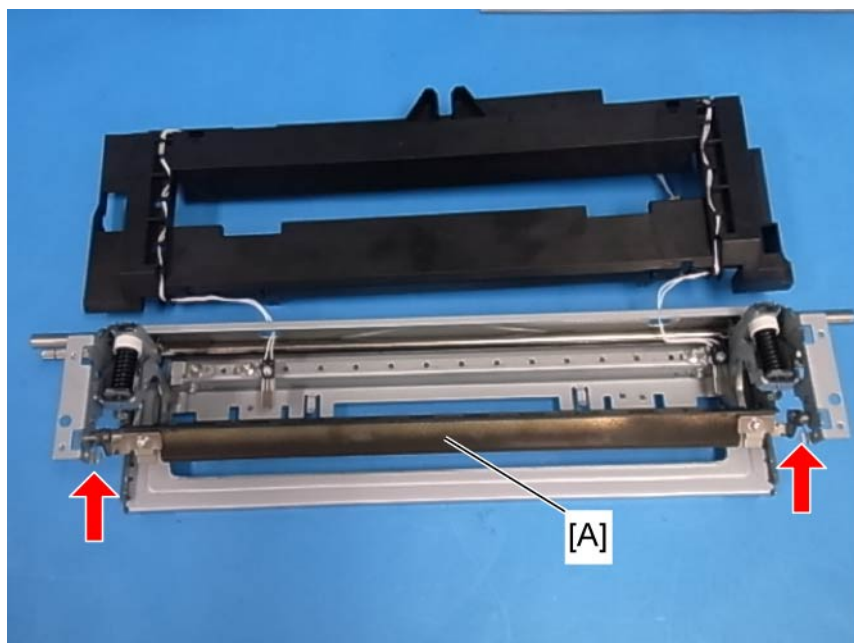

d1440018

4. Pressure roller stripper plate [A] (springs x 2)

### Cleaning Requirement

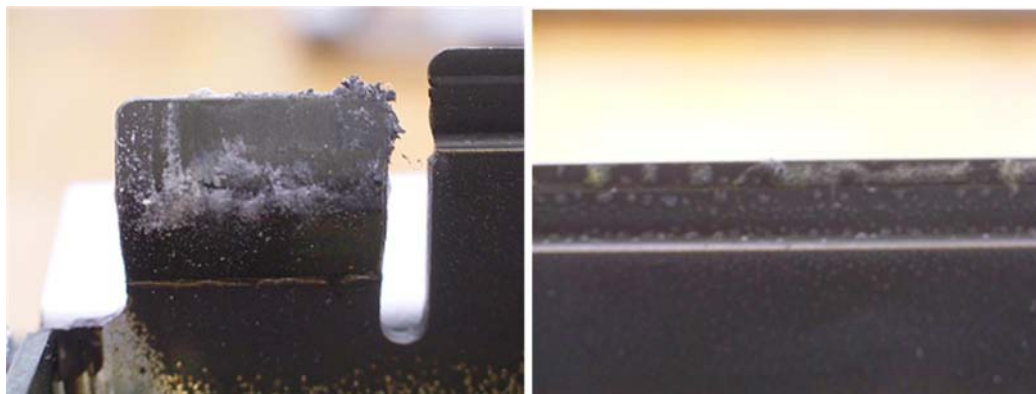

d037r377


The stripper plates require cleaning maintenance every fusing unit maintenance interval. Clean the stripper plates with a dry cloth, and then clean the stripper plates again with a cloth moistened with alcohol at the points shown above.

---

## Pressure Roller Thermistors

---

1. Fusing unit (🔧 p.267)
2. Heating sleeve belt unit (🔧 p.275)
3. Pressure roller (🔧 p.278)

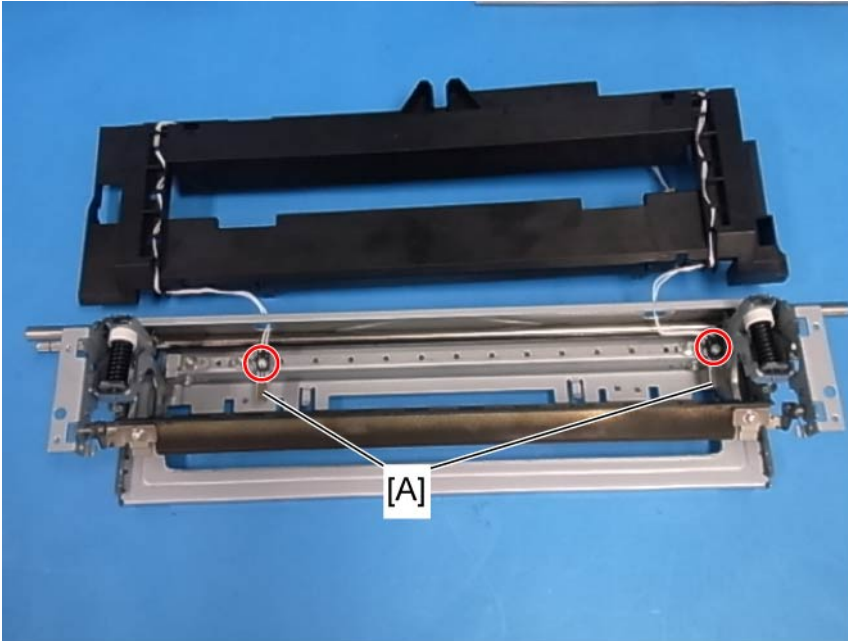

d1440019


4. Pressure roller thermistors [A] (🔧 x 1 each)

---

## Pressure Roller Thermostats

---

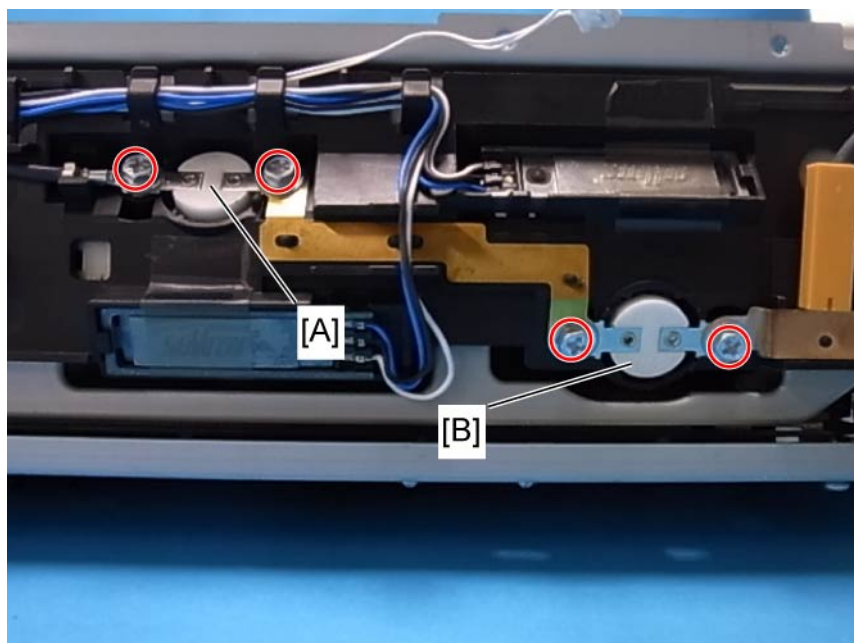


1. Fusing unit (🔧 p.267)
2. Fusing unit upper cover (🔧 p.271)
3. Fusing unit lower cover (🔧 p.273)




d1440020


4. Pressure roller thermostat (center) [A] and pressure roller thermostat (end) [B] (  x 2 each)

## NC Sensors

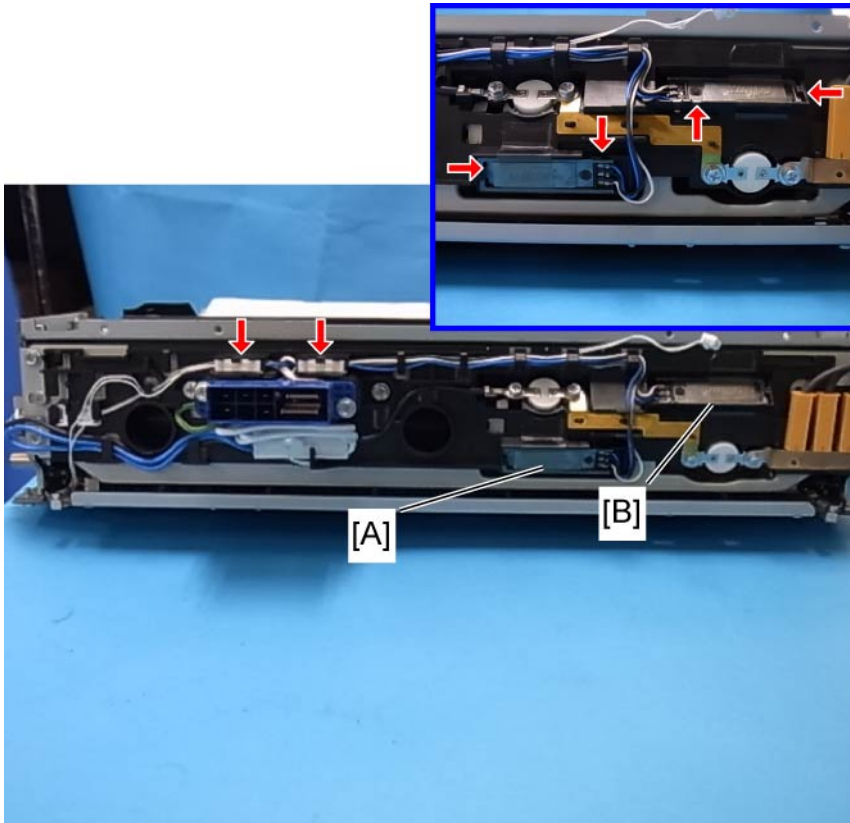

1. Fusing unit (  p.267)
2. Fusing unit upper cover (  p.271)
3. Fusing unit lower cover (  p.273)




d1440021

4. NC sensor (center) [A] and NC sensor (end) [B] (Hooks x 2 each,  x 1 each)


## Fusing Fan

1. Rear cover ( p.176)
2. Right rear cover ( p.176)

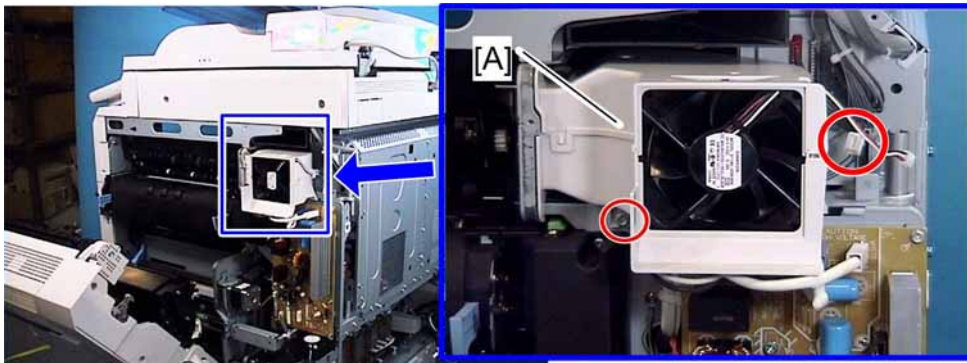

b222r588

3. Fusing duct [A] (  x 1,  x 1 )

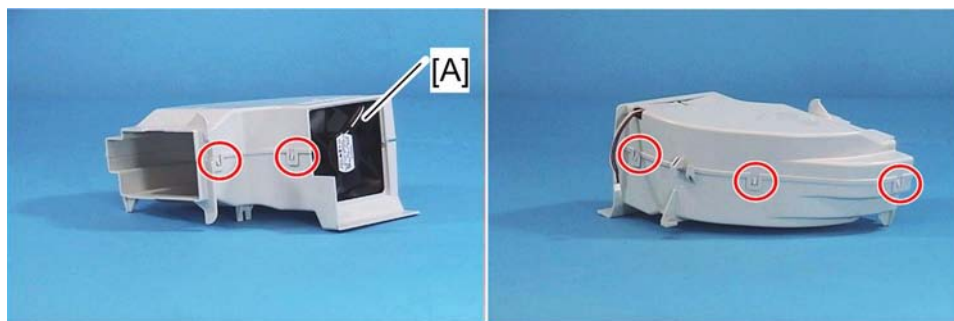

d027r589


4. Fusing fan [A] (hook x 5)


4

### When installing the fusing fan

Make sure that the fusing fan is installed with its decal facing the right side of the machine.

### Paper Exit Fan

1. Open the right door.
2. Front right cover (  p.177 )

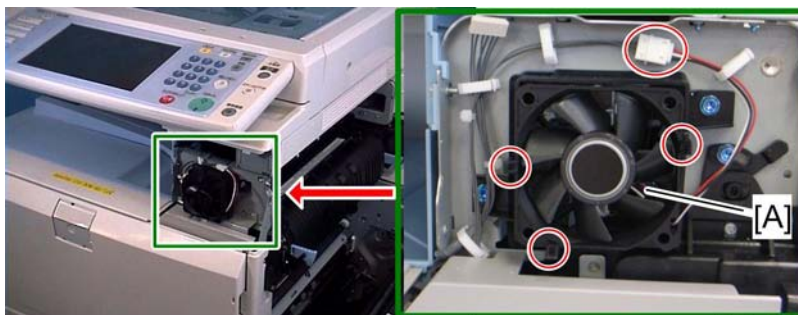

d027r590

3. Paper exit fan [A] (  x 1, hook x 3 )


### When installing the paper exit fan

#### ↓ Note

- Make sure that the paper exit fan is installed with its decal facing the rear of the machine.


## AC Controller Board Fan

1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)

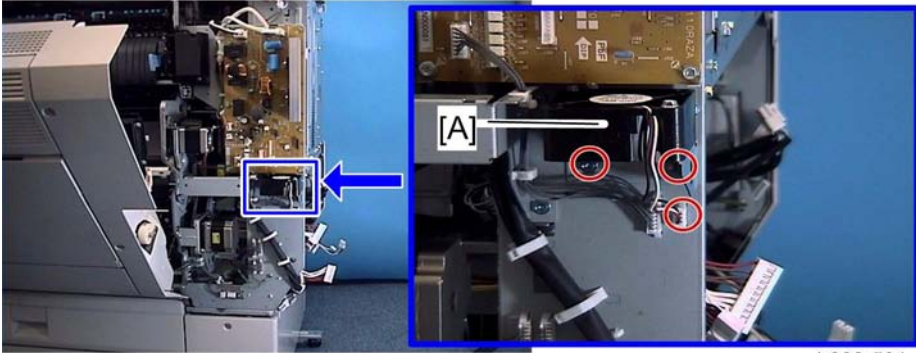

b222r591

3. AC controller fan bracket [A] (🔧 x 2, 📏 x 1)

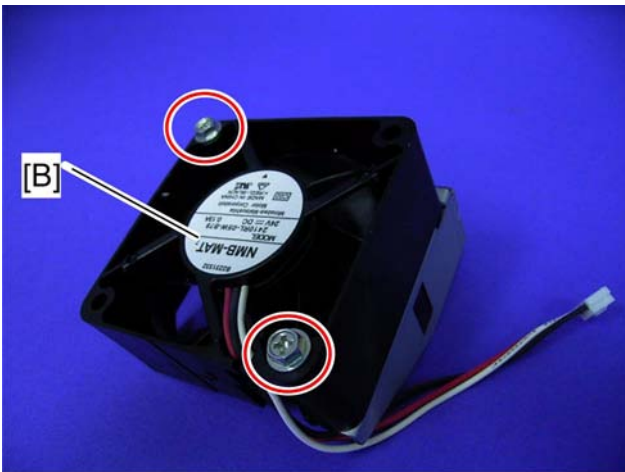

b222r592

4. AC controller fan [B] (🔧 x 2)


### When installing the AC controller fan

Make sure that the AC controller fan is installed with its decal facing the upper side of the machine.

## Fusing Entrance Thermopiles

1. Open the right door.
2. Fusing unit (🔧 p.267)



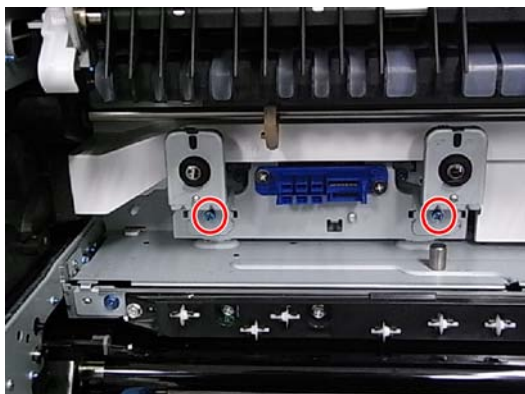

d1440055

3. Fusing entrance thermopile brackets (🔧 x 1 each)



d1440056


4. Fusing entrance thermopiles (🔧 x 1 each, 🗑️ x 1 each)

### When cleaning the lens of the thermopile

#### ⚠️ CAUTION

- Do this cleaning procedure after the fusing unit has completely cooled down. Otherwise, you may get a serious burn.

1. Fusing unit (🗑️ p.267)

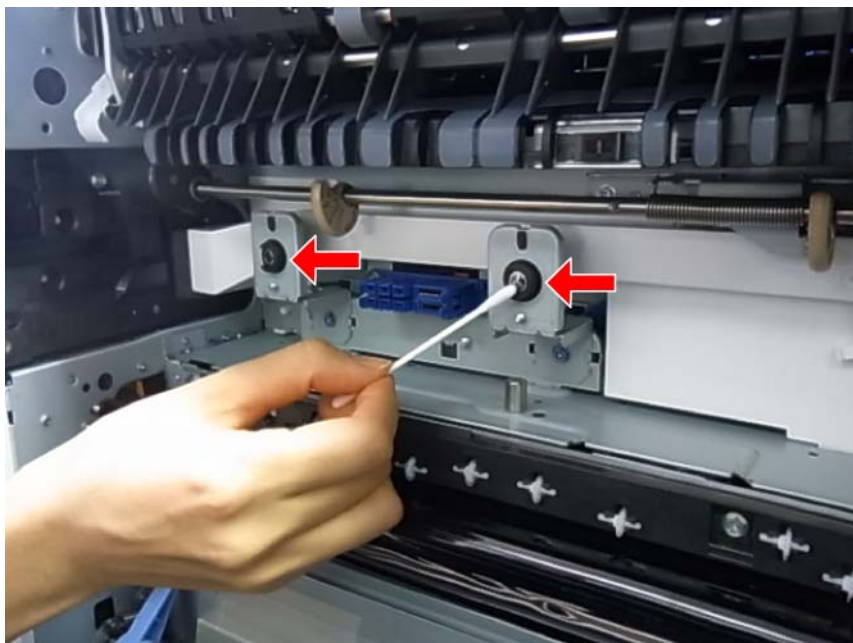

d1440123


2. Clean with a cotton-swab dipped in alcohol.

---

### Pressure Roller HP Sensor

---


1. Open the right door.
2. Fusing unit (📖 p.267)
3. AC controller board (📖 p.332)
4. AC controller board bracket (📖 p.332)

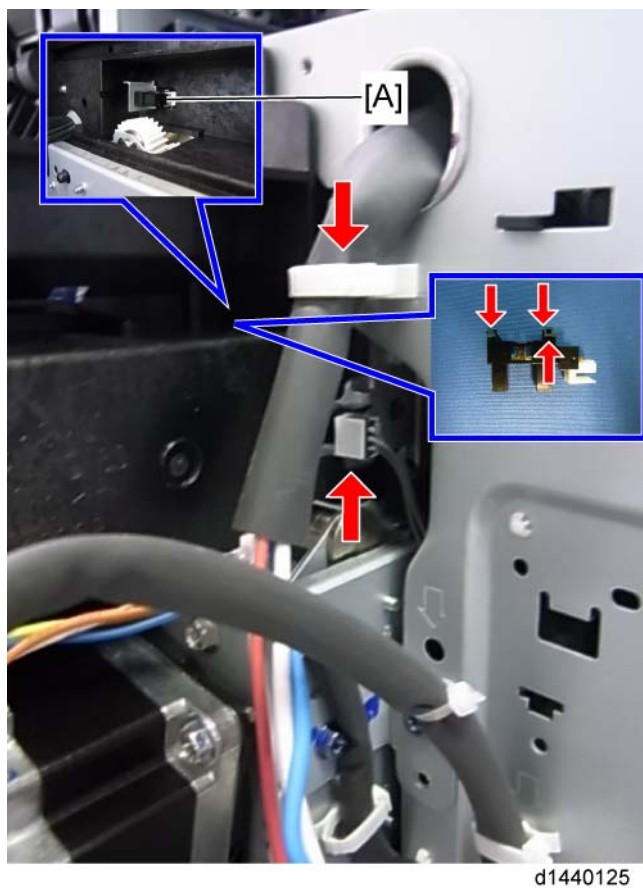

5. Pressure roller HP sensor [A] (🖨️ x 1, 🖨️ x 1, hooks x 3)

## QSU fan


1. Open the right door.
2. Front right cover (🖨️ p.177)
3. Pull out trays 1 and 2, and the image transfer belt unit.

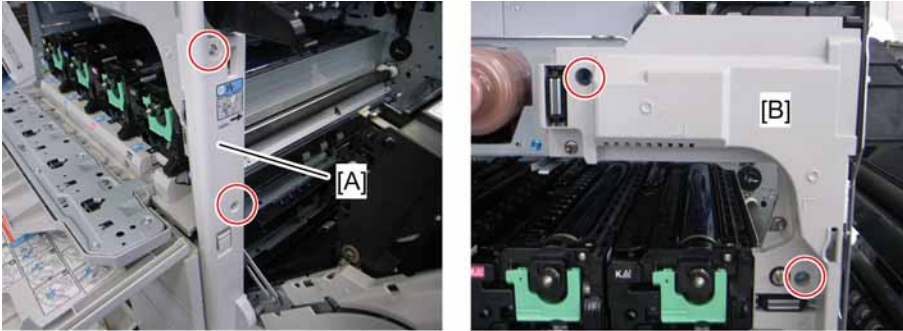





d027r219

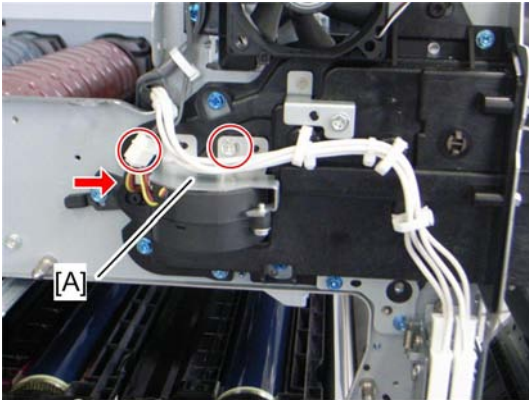4. Right front cover [A] and front inner cover [B]

4




d027r220


- 5. QSU fan bracket [A] (  x 1,  x 1,  x 1 )
- 6. QSU fan (  x 2 )

---



## Fusing Unit Shutter Plate Drive Motor


---

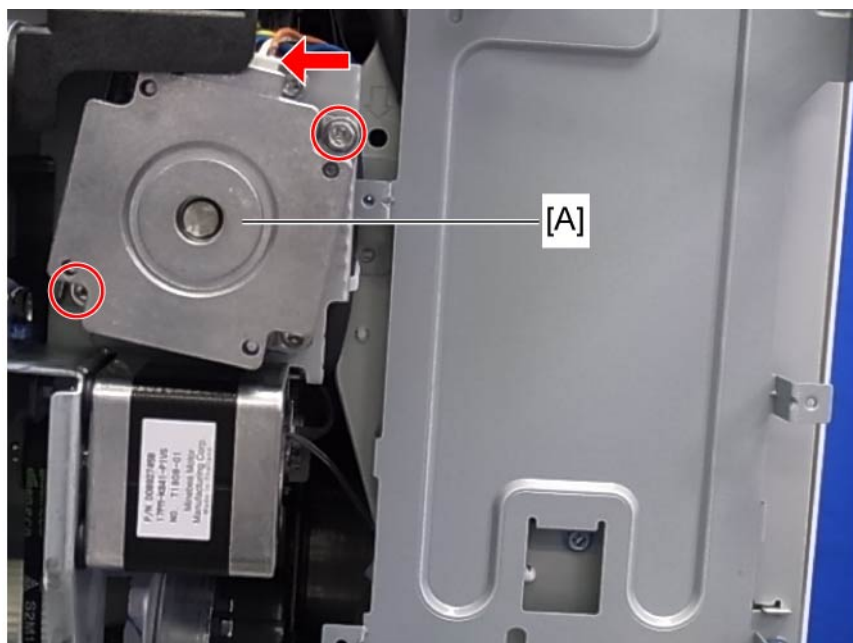- 1. AC controller board (  p.332 )



d1440104

2. Fusing shutter plate drive motor [A] (  x 2,  x 1 )

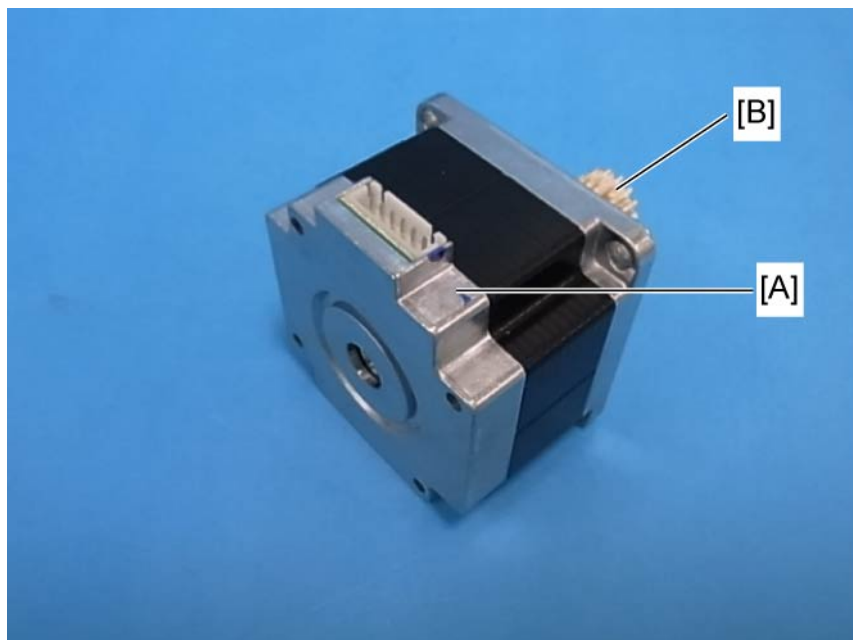


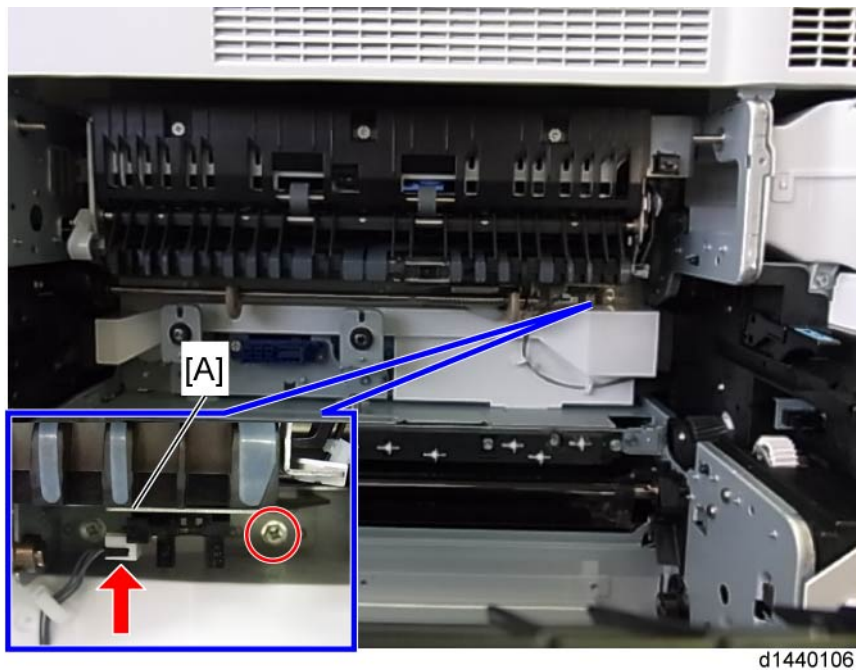
d1440105

 **Note**


- Do not wipe off the grease of the gear [B] on the new motor [A] when replacing it.

## Fusing Unit Shutter Plate Home Position Sensor

1. Open the right door.
2. Fusing unit (  p.267)



3. Fusing unit shutter plate home position sensor bracket [A] (  x 1,  x 1 )

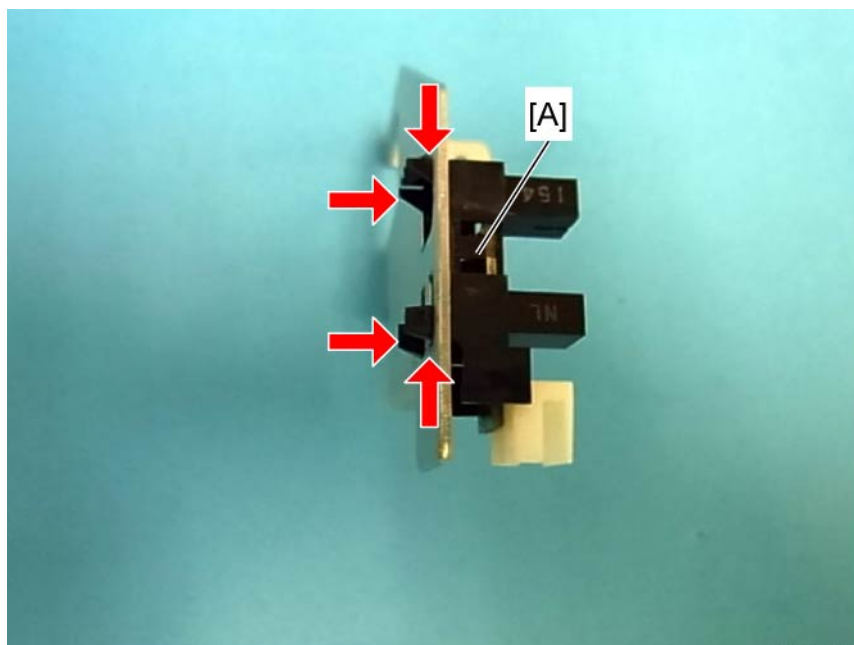

d1440107


4. Fusing shutter plate home position sensor [A] (Hooks x 4)

---

## Fusing Unit Shutter Plate Drive Mechanism

---

1. Open the right door.
2. Fusing unit (📄 p.267)
3. Fusing unit shutter plate home position sensor bracket (📄 p.292)

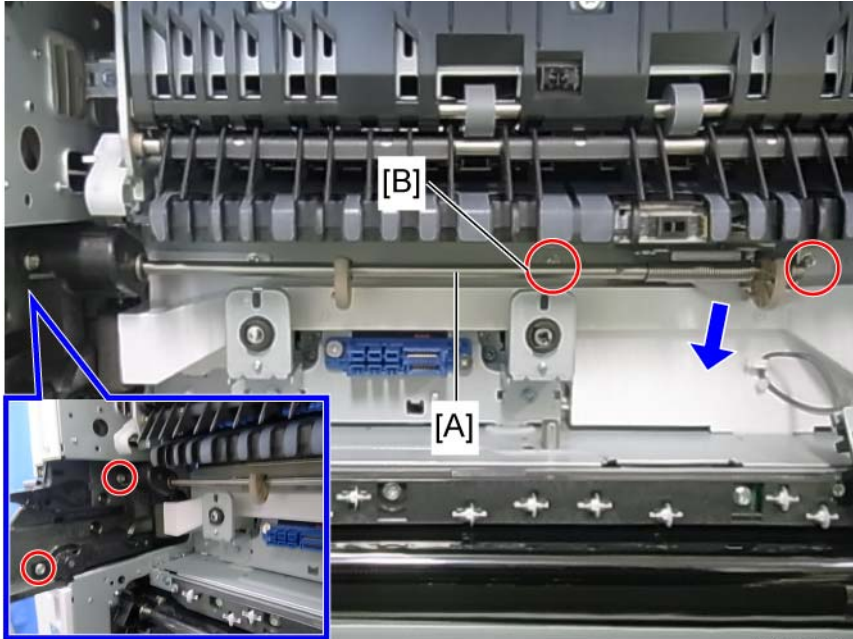


d1440149

4. Fusing unit shutter plate drive mechanism [A] (  x 4 )

 **Note**



- If the shaft interferes with the movement of the screwdriver, the screw [B] should be removed at very last while pushing the shaft down slightly.

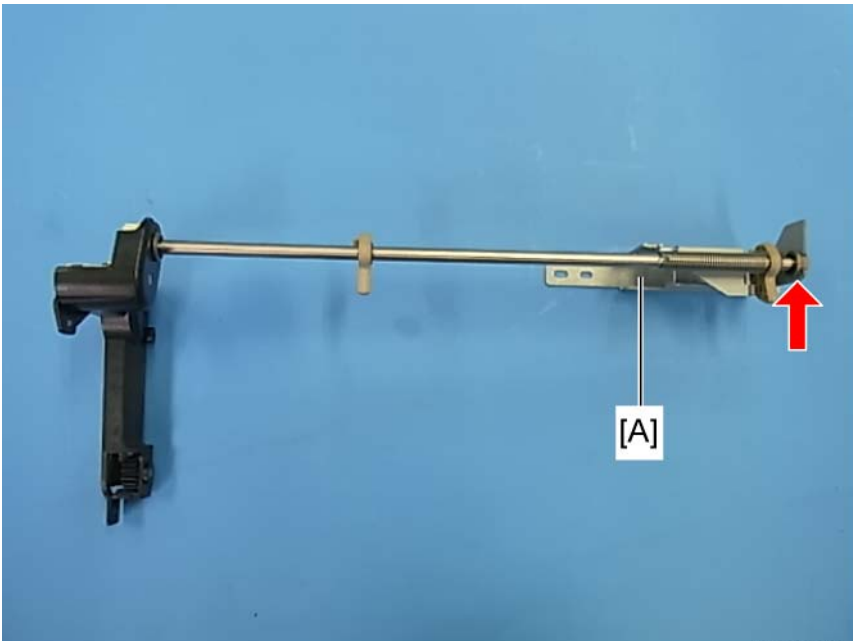

d1440150



## 5. Drive shaft stay [A] (Bearing x 1)

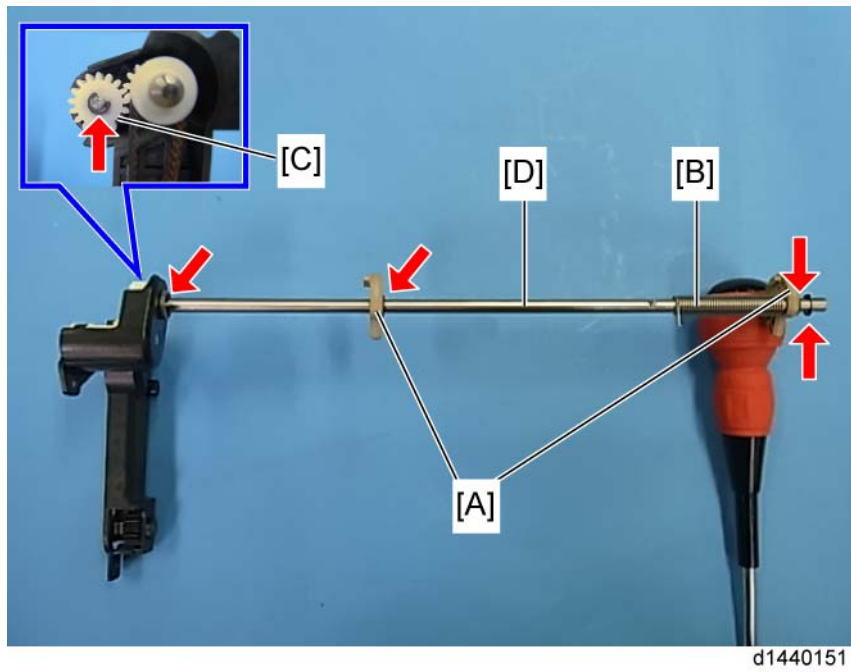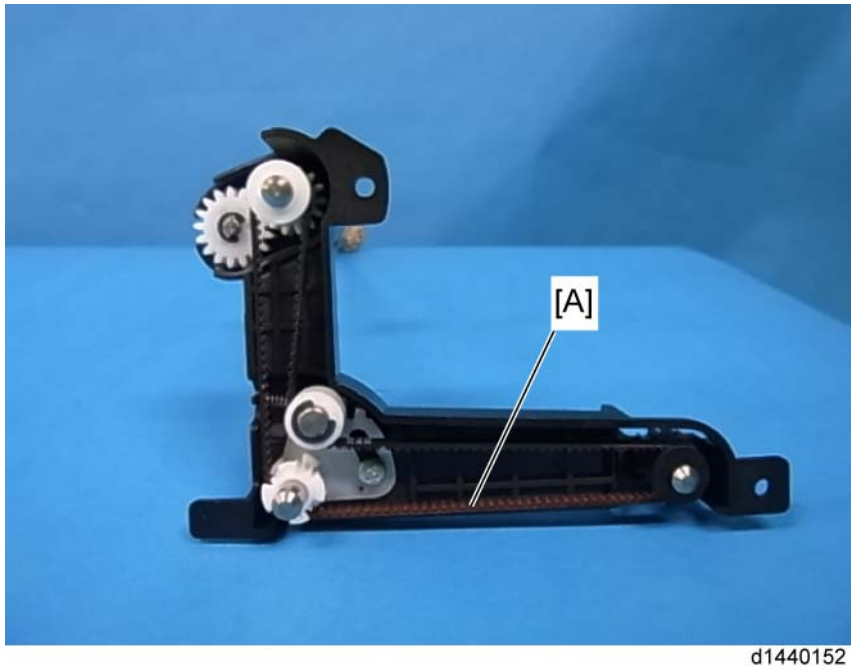6. Drive cams [A] ( $\odot$  x 3,  $\otimes$  [B] x 1)7. Drive gear [C] and drive shaft [D] (Bearing x 1,  $\odot$  x 1)

## 8. Drive belt [A]


↓ **Note**

- **When reinstalling the fusing unit shutter plate drive mechanism:**
- Make sure that the tension of the coil spring on the drive shaft is correct before reinstallation. If the tension is weak, rotate the spring for one revolution on the shaft and hook it.

# Paper Feed


## Paper Feed Unit

1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)
3. Duplex unit (🔧 p.312)
4. Pull out tray 1 and tray 2.

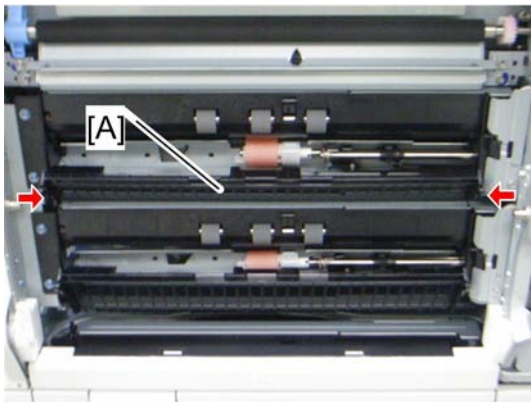


d088r168

5. Paper guide plate [A] (tab x 2)

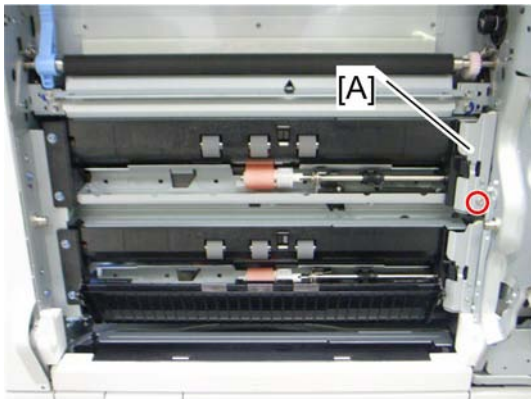

d088r169

6. Harness cover [A] (🔧 x 1)

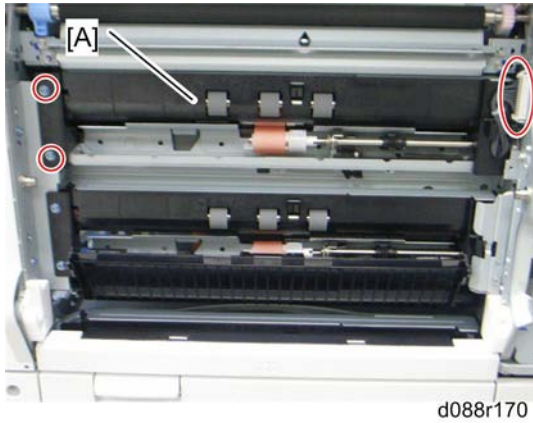


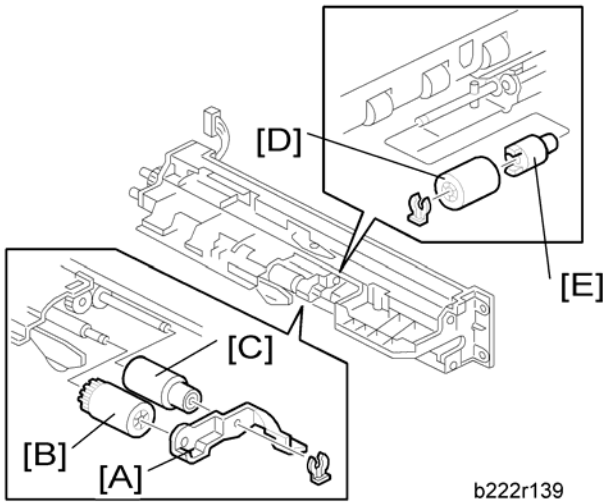
4



7. Paper feed unit [A] (  x 2,  x 1 )

## Pick-Up, Feed and Separation Rollers
  
### Tray 1 and Tray 2

1. Paper feed unit (  p.297 )




2. Roller holder [A] (  x 1 )
3. Pick-up roller [B]
4. Feed roller [C]
5. Separation roller [D] and torque limiter [E] (  x 1 )

---

## Tray Lift Motor

---

1. Rear cover (🔧 p.176)
2. PSU bracket (🔧 p.328)
3. High voltage supply board bracket (🔧 p.331)

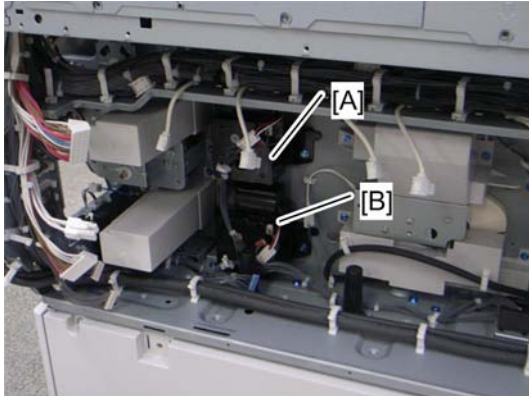

d027r173


4. Tray lift motor 1 [A] or 2 [B] (🔧 x 2, 📄 x 3, 🖨️ x 1 each)







---
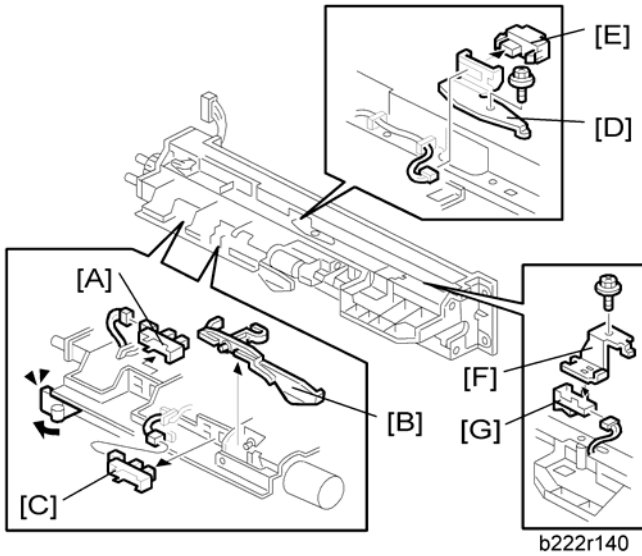
## Vertical Transport, Paper Overflow, Paper End and Paper Feed Sensor



---


1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)
3. Paper feed unit (🔧 p.297)





4. Paper overflow sensor [A]
5. Paper end feeler [B] and paper end sensor [C] (hook,  x 1 each)
6. Vertical transport sensor bracket [D] (  x 1,  x 1)
7. Vertical transport sensor [E] (  x 1, hook)
8. Paper feed sensor bracket [F] (  x 1)
9. Paper feed sensor [G] (  x 1, hook)


## Registration Sensor

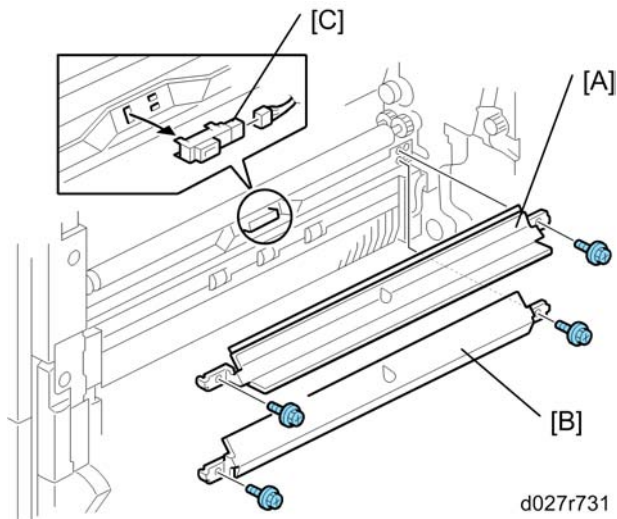
1. Rear cover ( p.176)
2. Right rear cover ( p.176)




3. Paper guide plate 1 [A] and 2 [B] (  x 2 each)
4. Registration sensor [C] (  x 1, hook)

## By-pass Paper Size Sensor and By-pass Paper Length Sensor

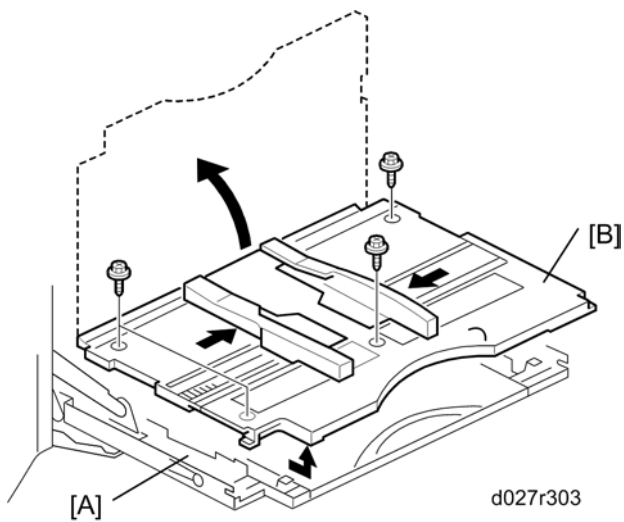


1. Open the by-pass tray [A].
2. Move the side fences to the center.
3. By-pass tray cover [B] (  x 4)

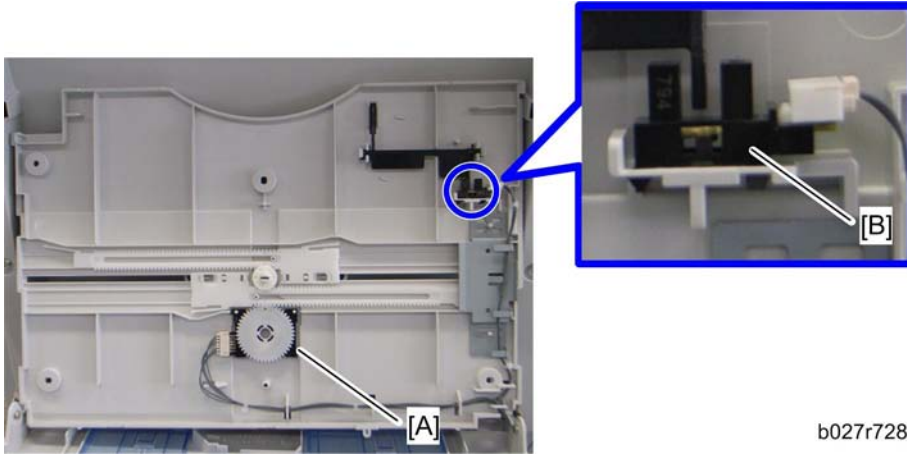

b027r728

4. By-pass paper size sensor [A] (☞ x 1).
5. By-pass paper length sensor [B] (☞ x 1)

**When reinstalling the by-pass paper size sensor**

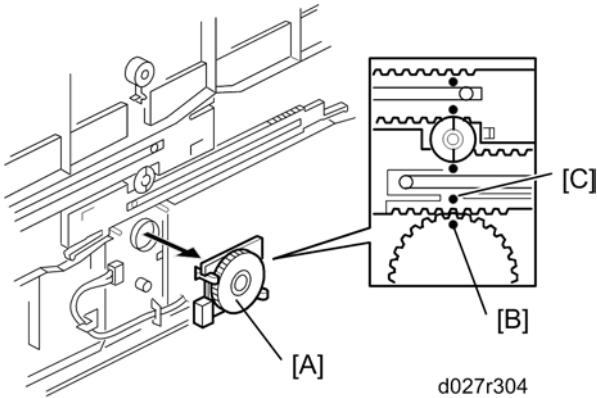

d027r304

1. Adjust the projection [A] of the left side fence bar (it must be centered).
2. Install the by-pass paper size detection switch so that the hole [B] in this switch faces the projection [C] of the left side fence bar.
3. Reassemble the copier.
4. Plug in and turn on the main power switch.
5. Check this switch operation with SP5803-011 (By-pass paper size < Input Check).


**- Display on the LCD -**


Paper Size	Display	Paper Size	Display
A3 SEF	00001110	A5 SEF	00001011




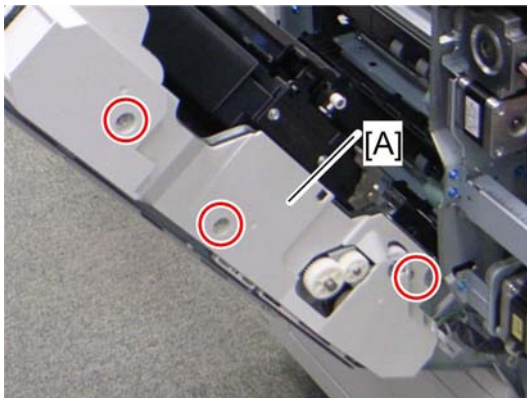
B4 SEF	00001100	B6 SEF	00000011
A4 SEF	00001101	A6 SEF	00000111
B5 SEF	00001001	Smaller A6 SEF	00001111

## By-pass Bottom Tray


1. Open the right door.
2. By-pass tray cover (  p.301)

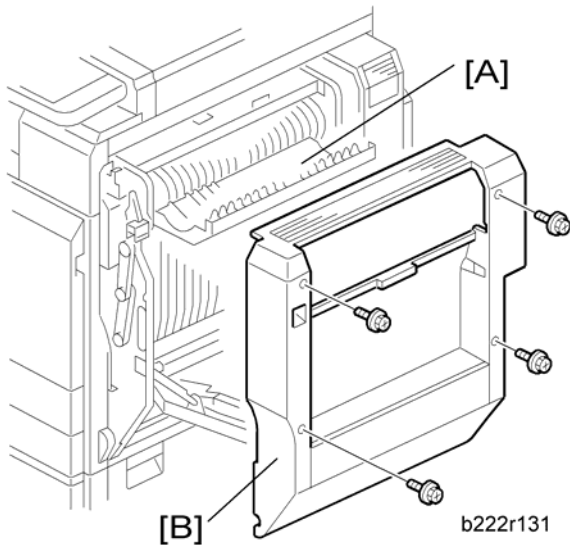


3. Open the duplex door [A].
4. Right door cover [B] (  x 4)




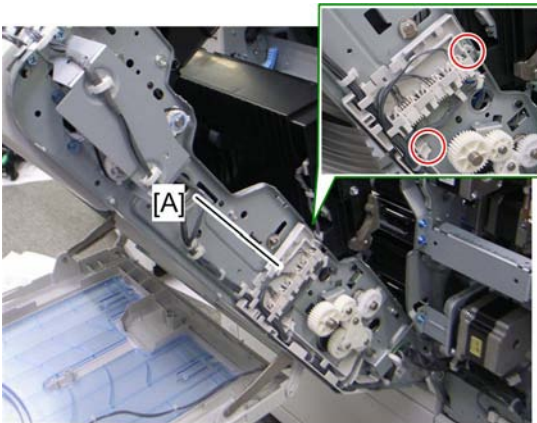
d027r174

5. Right door rear cover [A] (  x 3)

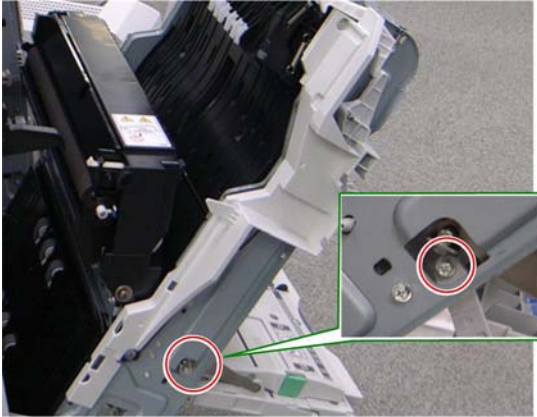

d027r175

6. Remove the screw at the front side (  x 1).




d027r177

7. Remove the cover [A] (2 hooks).




d027r178

- Remove the screw at the rear side.

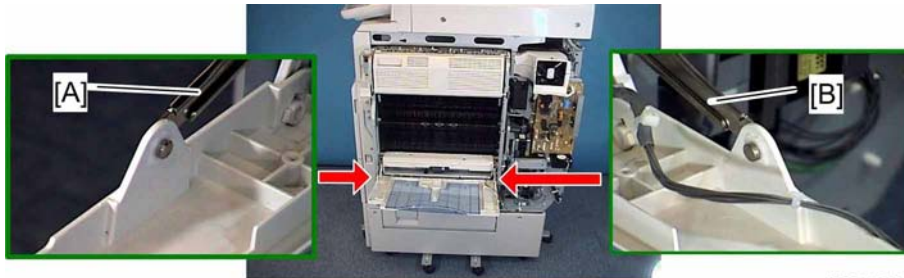

d027r597

- Release the front [A] and rear [B] arms (🔧 x 1 each).

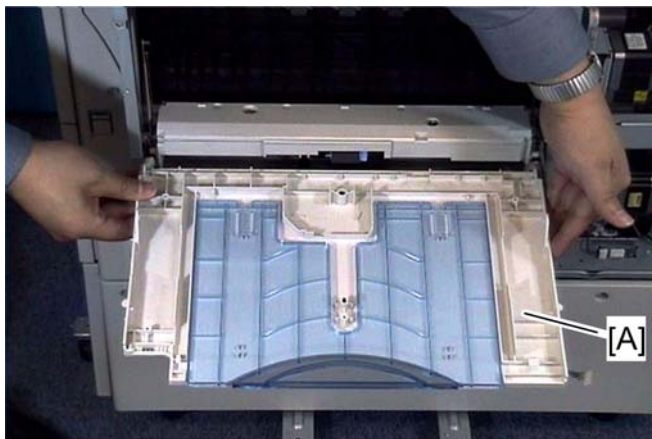


d027r598

- By-pass bottom tray [A]

## By-pass Paper End Sensor


- Right door cover (🔧 p.303)

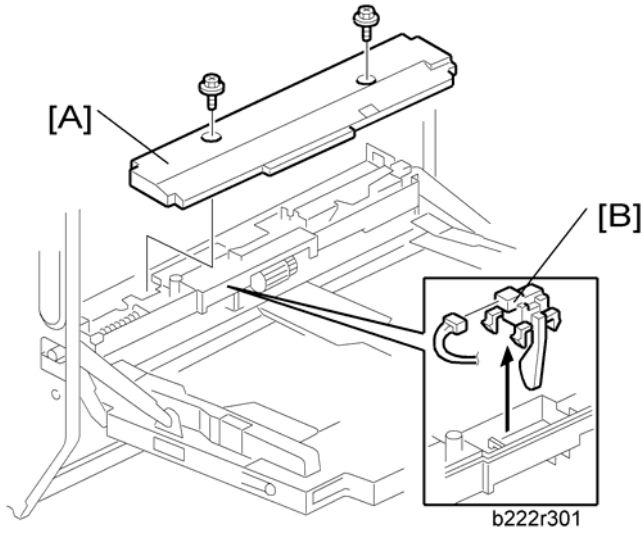

2. By-pass feed unit cover [A] (🔩 x 2).
3. By-pass paper end sensor [B] (🔌 x 1, hook)


### By-pass Pick-up, Feed and Separation Roller, Torque Limiter

1. Right door cover (📄 p.303)

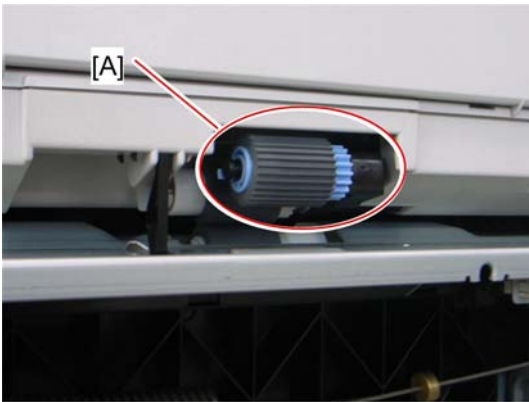


d027r179

2. By-pass pick-up roller [A] (hook)

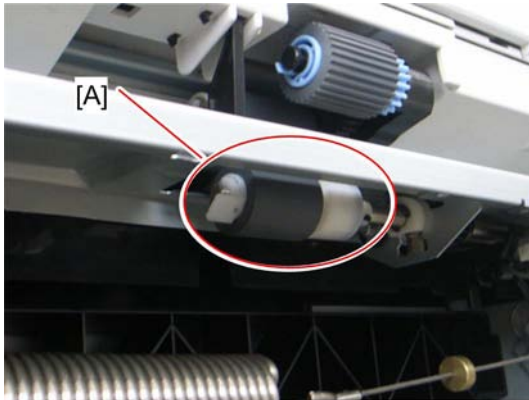

d027r180

3. By-pass feed roller [A] (🔧 x 1)
4. By-pass feed unit cover (📄 p.305)

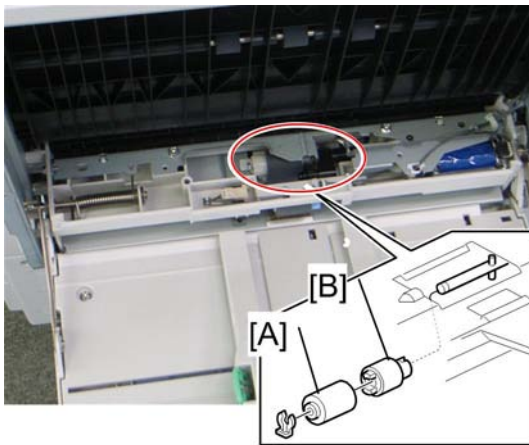


d027r302

5. By-pass separation roller [A] (🔧 x 1)
6. Torque limiter [B]

## By-pass Feed Clutch

1. Open the right door.
2. Right door rear cover (📄 p.303)

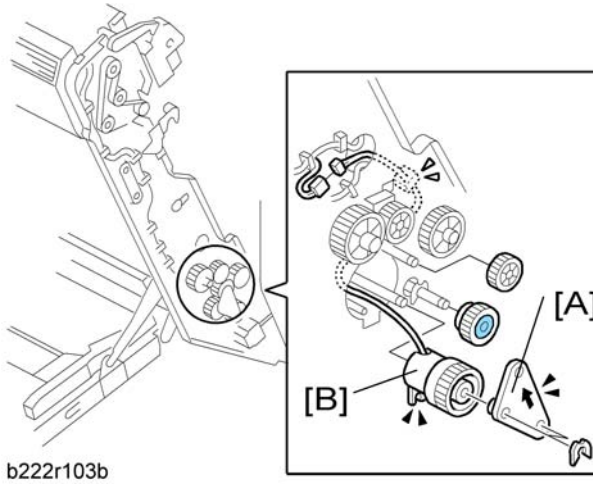


b222r103b




3. By-pass feed clutch holder [A] (🔧 x 2)
4. By-pass feed clutch [B] (🔧 x 1, 🛠️ x 1)

## Paper Exit Unit

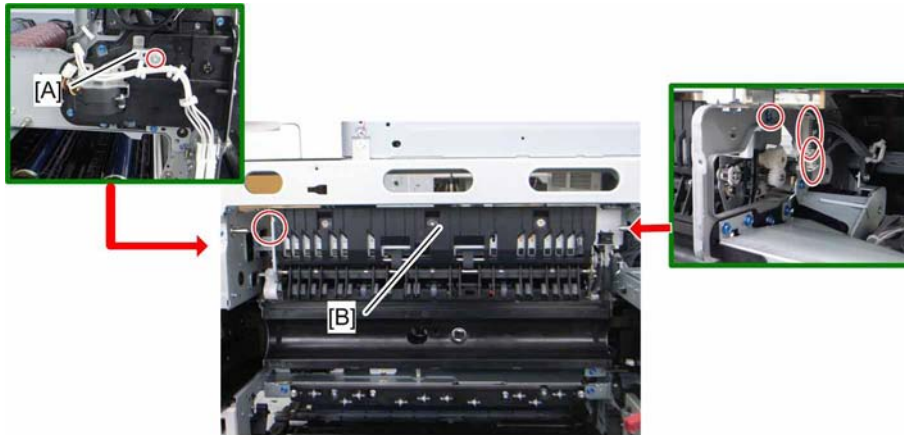
1. Fusing Unit (🔧 p.267)
2. Front right cover (🔧 p.177)
3. Image transfer belt unit (🔧 p.230)
4. Inner Tray (🔧 p.181)
5. Rear cover (🔧 p.176)
6. Right rear cover (🔧 p.176)
7. Fusing entrance thermopiles (🔧 p.286)
8. Fusing duct (🔧 p.284)
9. Open the controller box (🔧 p.319).




d027r181


10. Gear cover [A] (  x 1 )
11. Paper exit unit [B] (  x 2,  x 2 )

## Fusing Exit, Paper Overflow, Junction Paper Jam and Paper Exit Sensor

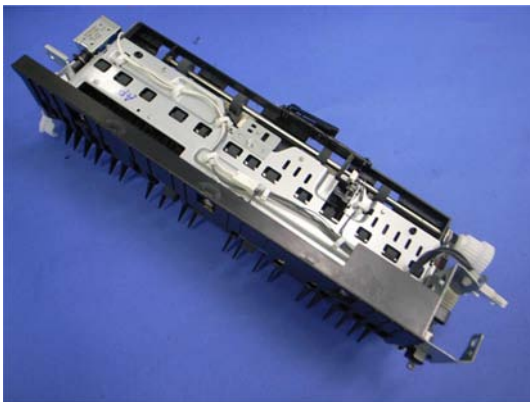




d027r182

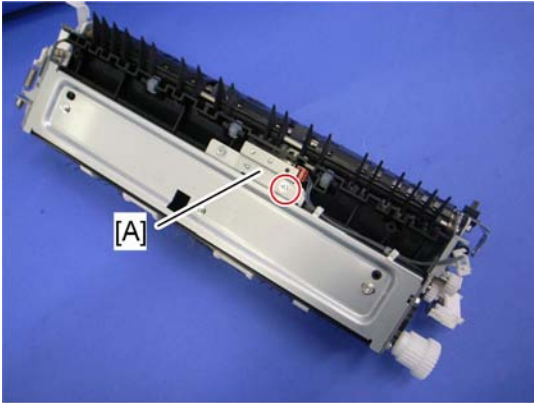
1. Paper exit unit (  p.297 )



d027r183


4

2. Fusing exit sensor bracket [A] (  x 1,  x 1 )
3. Remove the fusing exit sensor from the fusing exit sensor bracket (  x 1 )

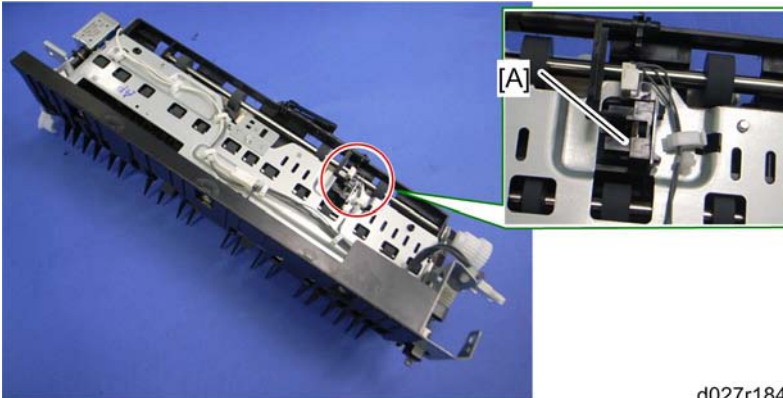


d027r184

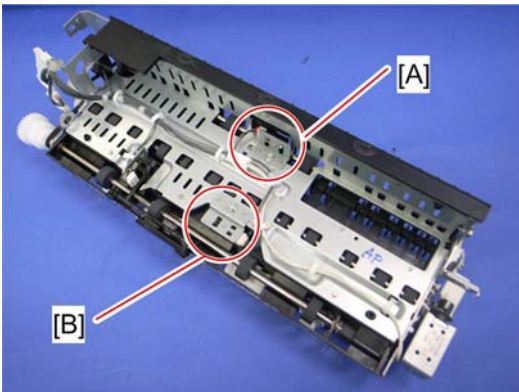

4. Paper overflow sensor [A] (  x 1, hook )



d027r185

5. Junction paper jam sensor bracket [A] (  x 1,  x 1 )




6. Remove the junction paper jam sensor from the junction paper jam sensor bracket (hook)
7. Paper exit sensor bracket [B] (  x 1,  x 1 )
8. Remove the paper exit sensor from the paper exit sensor bracket (hook)

# Duplex Unit


## Duplex Unit

1. Rear cover (🔧 p.176)
2. Right rear cover (🔧 p.176)
3. Right door cover (🔧 p.237)

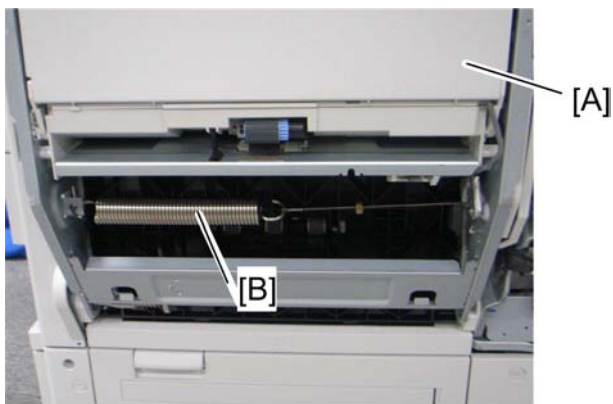


d088r554

4. Close the right door [A].
5. Remove the spring [B].
6. Open the right door [A].

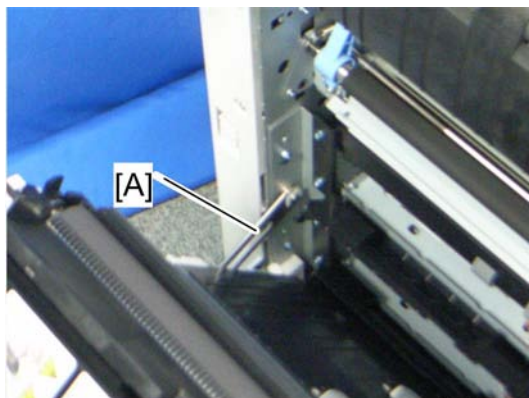

d088r555

7. Release the front link [A] (🔧 x 1).
8. Keep the right door fully open.

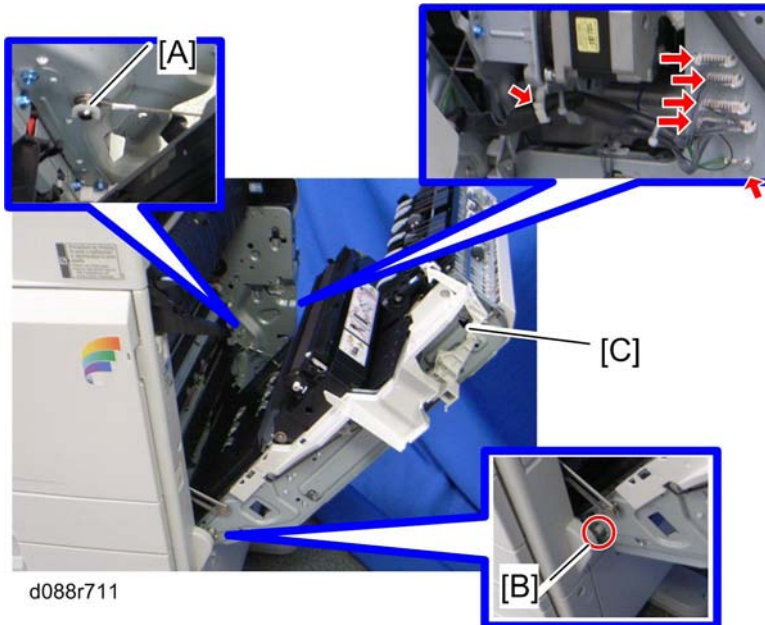

9. Hold the right door, and then release the wire [A] (🔧 x 1).


### ⚠ CAUTION

- Keep holding the right door before removing the right door completely. Otherwise, the right door can fall down and injure you.

10. Press the projection [B] to pull the right door shaft into the unit, and then remove the duplex unit [C] (🔧 x 1, 🛠 x 1, 📏 x 4, ground cable x 1).

## Duplex Door Sensor


1. Right door cover (📄 p.237)
2. Open the right door.

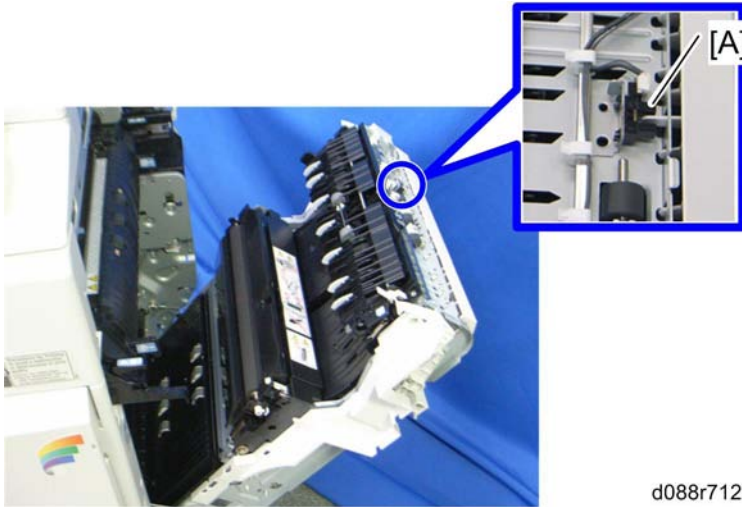


d088r712


 

3. Duplex door sensor [A] (  x 1, hook)

## Duplex Entrance Sensor

1. Right door cover (  p.237)
2. Open the right door.

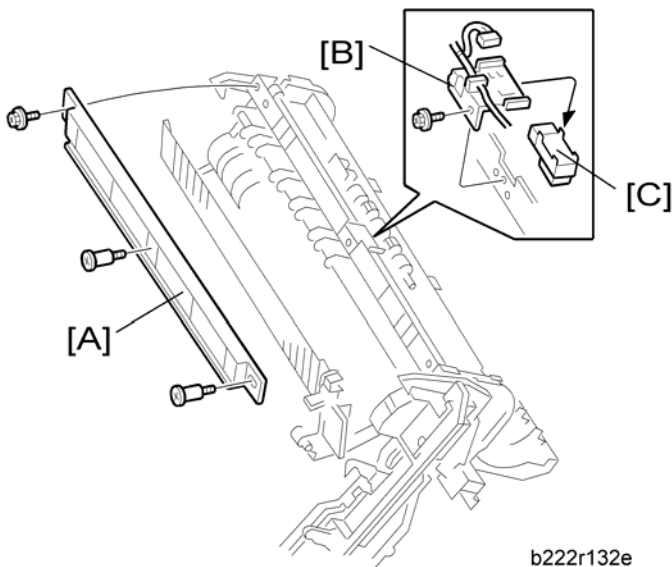


b222r132e

3. Duplex entrance guide [A] (  x 1, stepped screw x 2)
4. Duplex entrance sensor bracket [B] (  x 1,  x 1)

5. Duplex entrance sensor [C] (hook)

## Duplex Exit Sensor

1. Paper transfer unit (p.237)

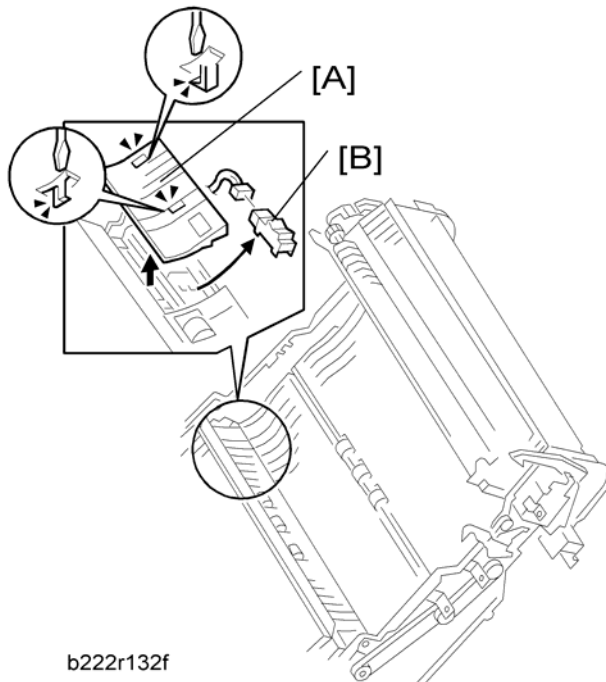

b222r132f

2. Guide plate [A] (two hooks)
3. Duplex exit sensor [B] (x 1, hook)

# Electrical Components


**★ Important**

- Always touch a grounded surface to discharge static electricity from your hands before you handle SD cards, printed circuit boards, or memory boards.

## Boards

### Controller Box closed

4

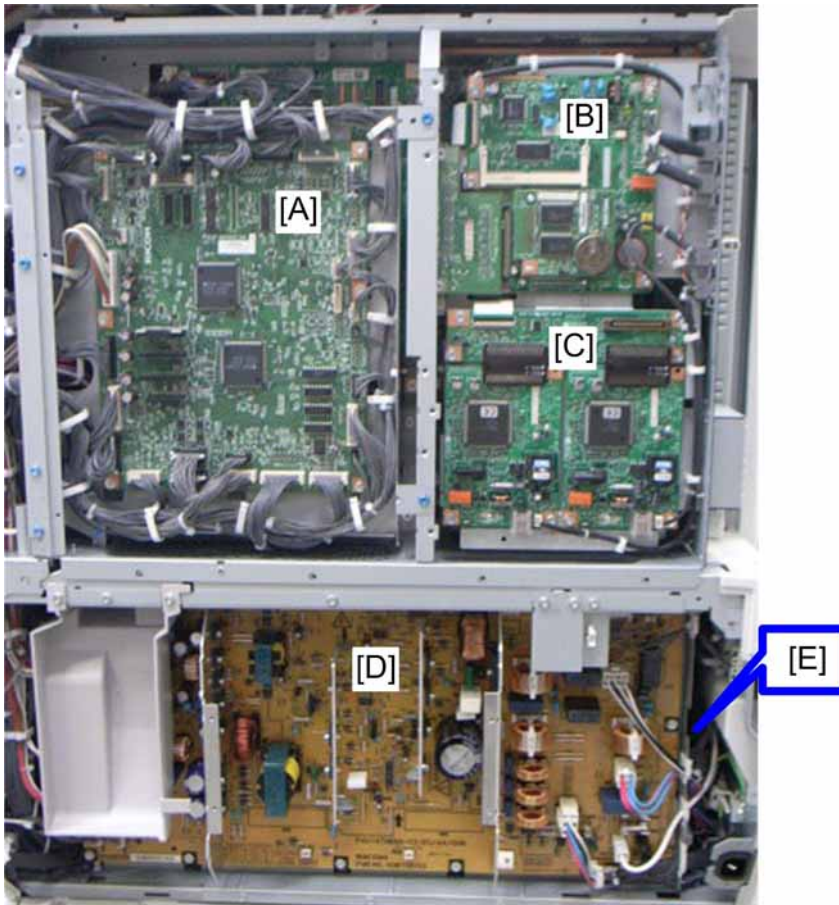


d027r729

[A]	IOB
[B]	FCU (Option)

[C]	G3 Interface Unit (Option)
[D]	PSU
[E]	High Voltage Supply Board (Behind the PSU [D] )


### Behind the IOB, FCU and G3 Interface Unit

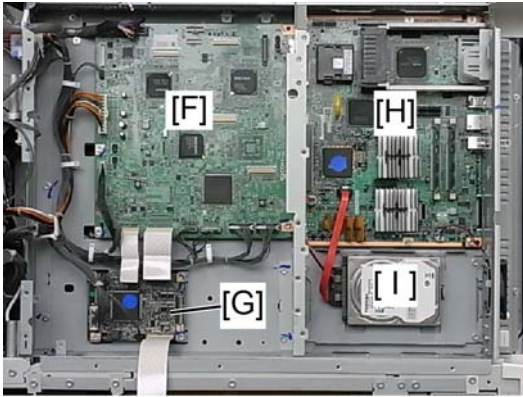

d1420030

[F]	IPU
[G]	BCU
[H]	Controller Board
[I]	HDD

### Controller Box Open

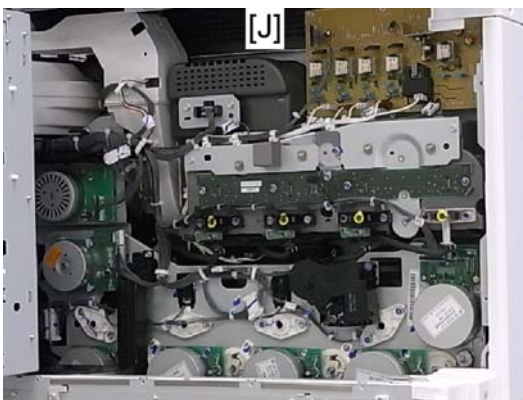


d1420039

[J]	ITB Power Supply Board
-----	------------------------

## Controller Unit

1. Controller cover (🔧 p.175)

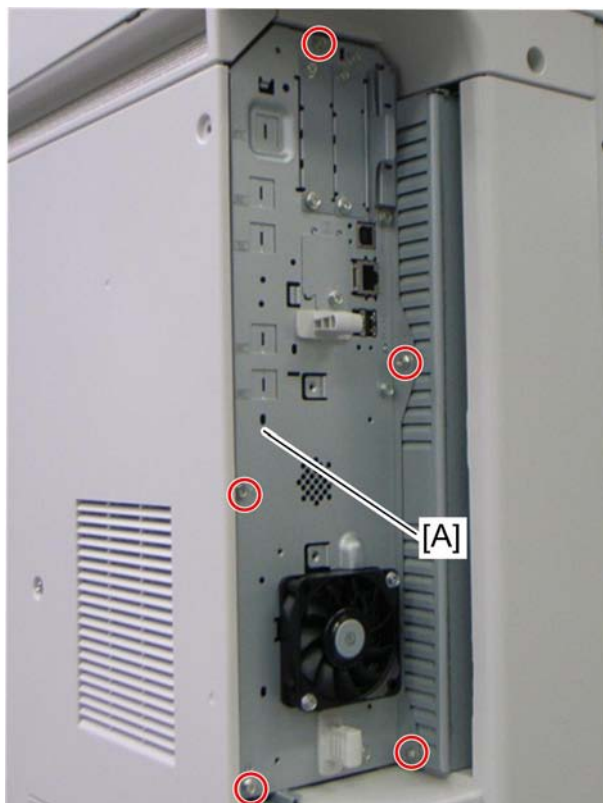


d088i075

2. Controller unit [A] (🔧 x 5)

## Controller Box Right Cover

1. Rear cover (🔧 p.176)

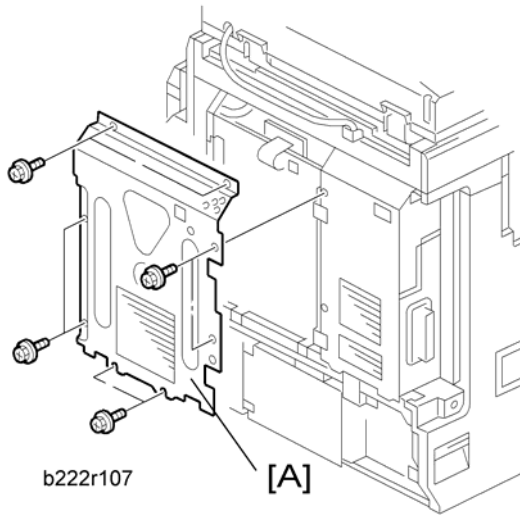


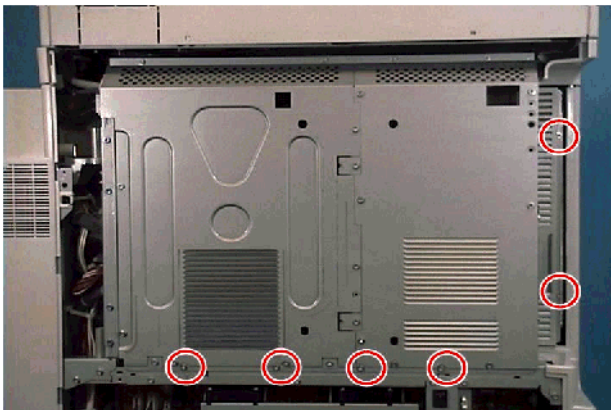


2. Controller box right cover [A] (  x 8)

## Controller Box


### When opening the controller box

1. Rear cover (  p.176)



b222r603

2. Remove six screws (red circles).

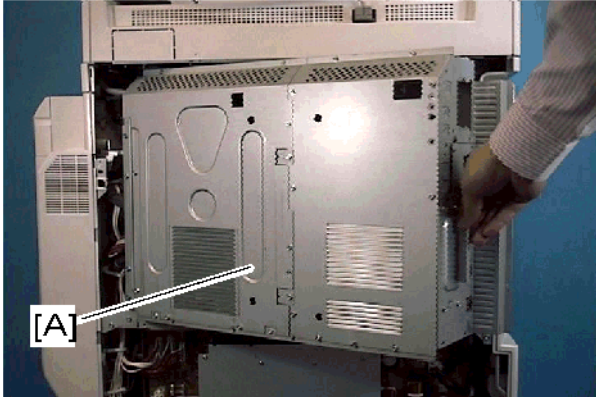


b222r604

4

3. Open the controller box [A].


### When removing the controller box

1. Rear cover (🔧 p.176)
2. Controller cover (🔧 p.175)
3. Right rear cover (🔧 p.176)
4. Controller box right cover (🔧 p.318)

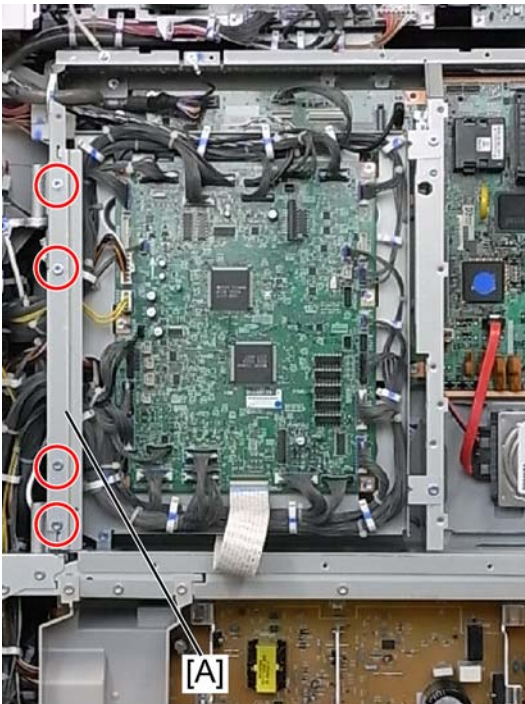




d1420031

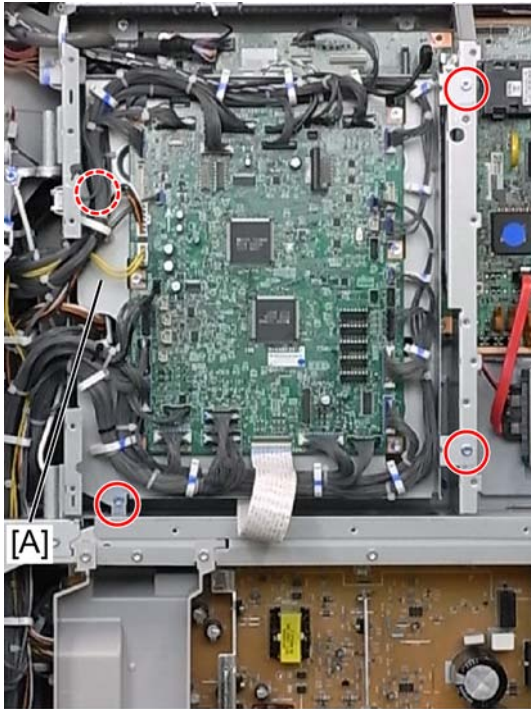5. Remove the controller box stay [A] (  x 4).



d1420032

6. IOB bracket [A] (  x 4,  x All).

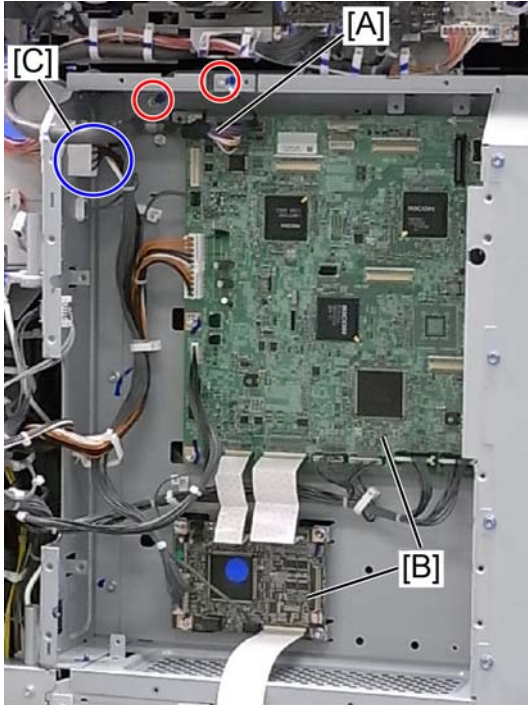


d1420033

7. Disconnect the scanner interface cable [A] (ground cable)
8. Release all clamps on the controller box frame.
9. Disconnect all connectors on the IPU and the BCU board [B].
10. Disconnect the connector [C] at the outer controller box and at the inner controller box.




d1420034

11. Disconnect two grounding cables (  x 1, each)

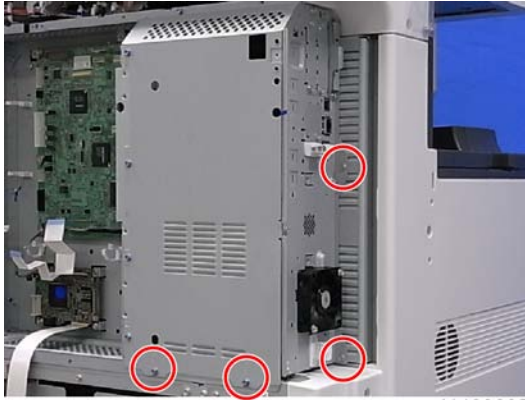

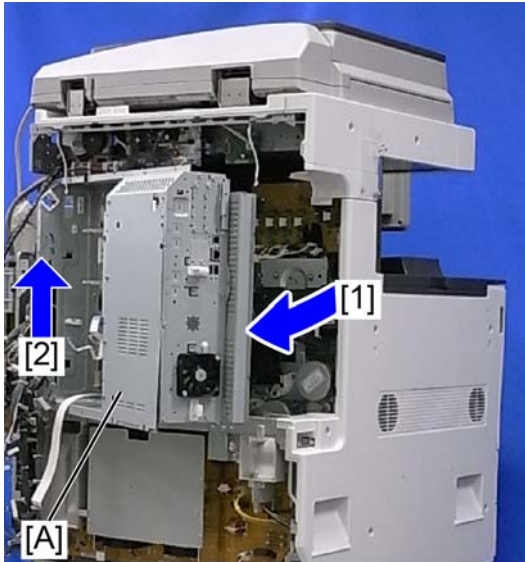

d1420035




d1420036

12. Open [1] and lift up [2] the controller box [A], and then remove it (  x 4).

## IOB (In/Out Board)

1. Rear cover (  p.176)
2. Controller box right cover (  p.318)

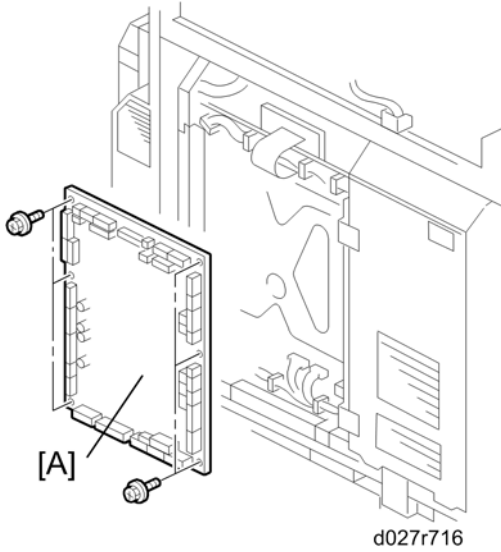




4


3. IOB [A] (  x 6, All  s)

---

## IPU

---

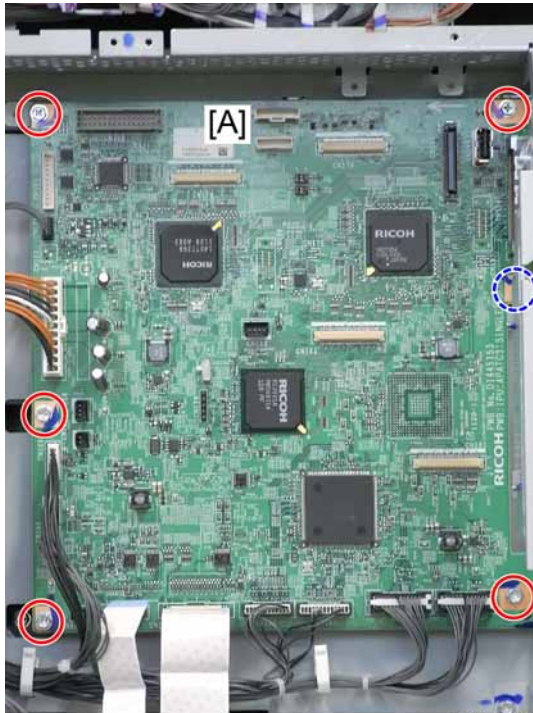


1. Rear cover (  p.176)
2. Controller box right cover (  p.318)
3. IOB bracket (  p.319)




d1420028

4. IPU [A] (  x 5,  x All)

## BCU

1. Rear cover ( p.176)
2. Controller box right cover ( p.318)
3. IOB bracket ( p.319)

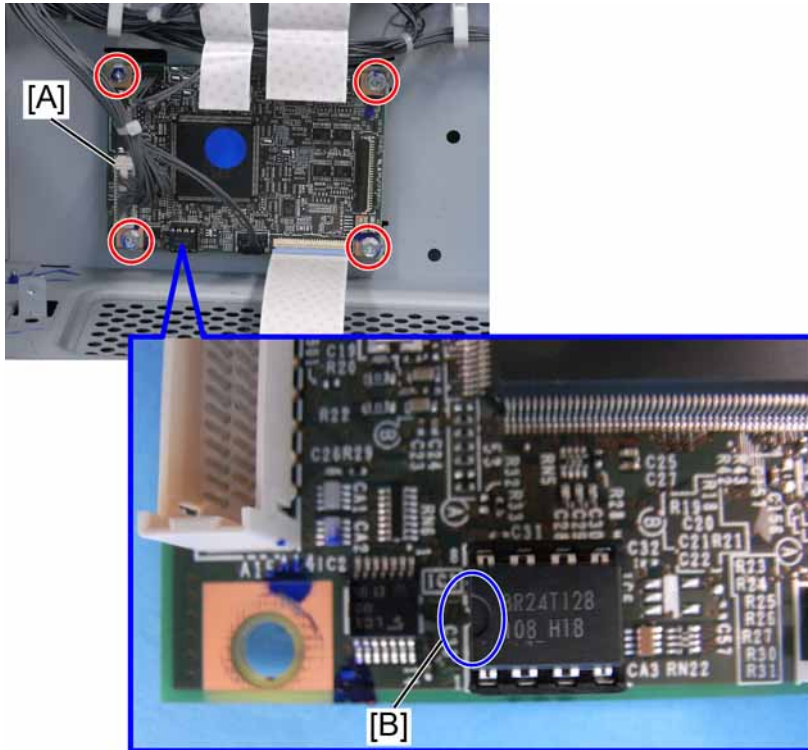


d1420029

4. BCU [A] (  x 4,  x All)

**Note**

- Make sure the NVRAM is correctly installed on the BCU. Insert the NVRAM in the NVRAM slot with the "half-moon" pointing [B] to the left side.

**When installing the new BCU**

Remove the NVRAM from the old BCU. Then install it on the new BCU after you replace the BCU. Replace the NVRAM (  p.339) if the NVRAM on the old BCU is defective.

**Note**

- Make sure you print out the SMC reports ("SP Mode Data" and "Logging Data") before you replace the NVRAM.

**CAUTION**

- Keep NVRAMs away from any objects that can cause static electricity. Static electricity can damage NVRAM data.
- Make sure that the DIP-switch settings on the old BCU are the same for the new BCU when. Do not change the DIP switches on the BCU in the field.




- Make sure the serial number is input in the machine for the NVRAM data, if not, SC 995-001 occurs.

## PSU


### Shutdown Board

1. Rear cover (🔧 p.176)

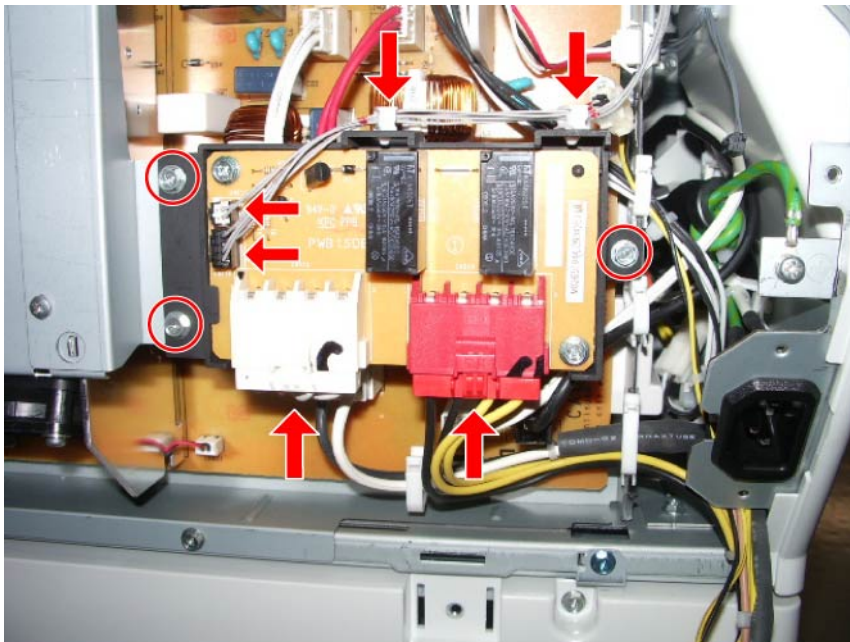

d1440119

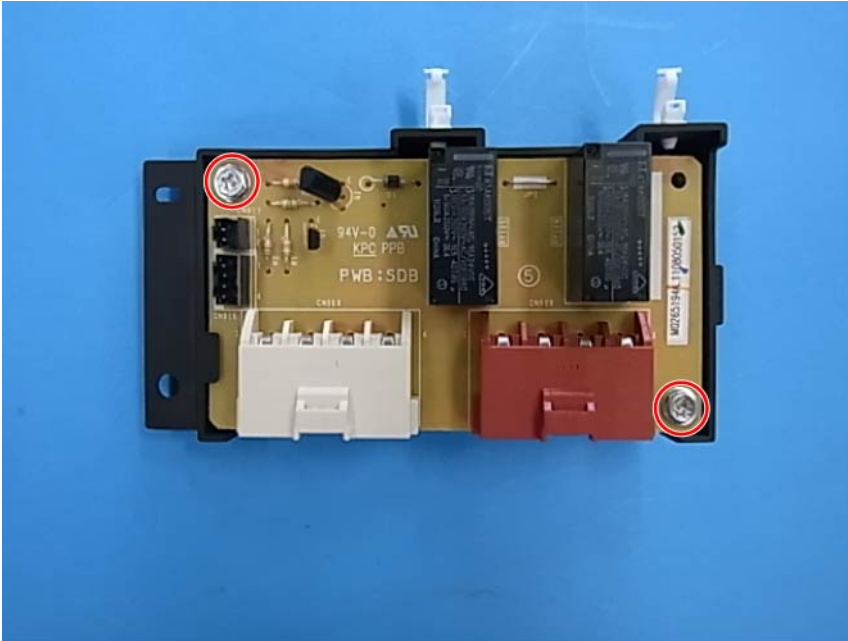

2. Shutdown board with bracket (🔧 x 4, 📏 x 2, 🔩 x 3)








d1440120

3. Shutdown board (  x 2)
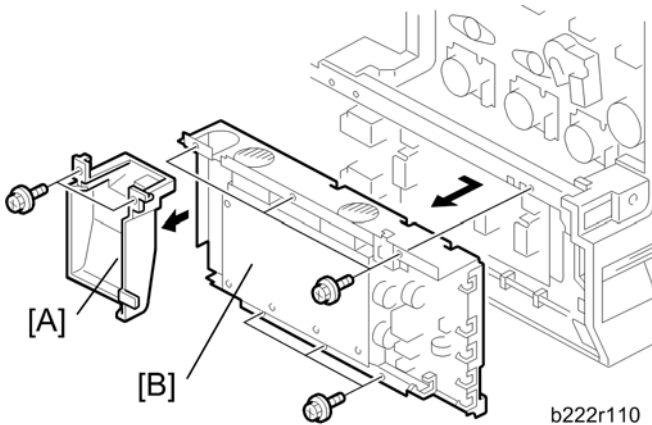
### PSU bracket


1. Rear cover (  p.176)
2. Shutdown board with bracket (  p.327)



3. Ventilation duct [A] (  x 2)
4. PSU bracket [B] (  x 6,  x All,  x All)

## PSU board

1. Rear cover (🔧 p.176)
2. Shutdown board with bracket (🔧 p.327)
3. Ventilation duct (🔧 p.327)

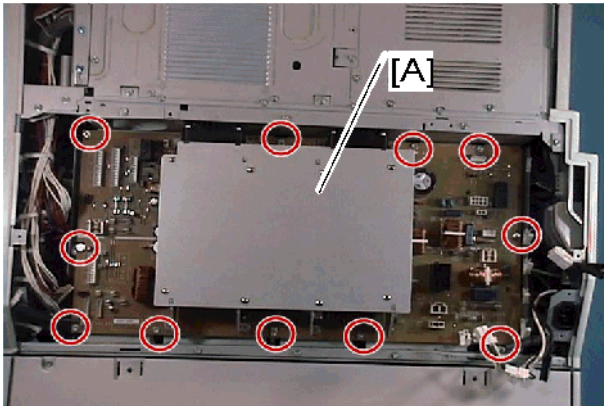


b222r608

4. PSU board [A] (🔧 x 11, 📏 x All, 📏 x All)


## PSU fans

1. Rear cover (🔧 p.176)
2. Shutdown board with bracket (🔧 p.327)

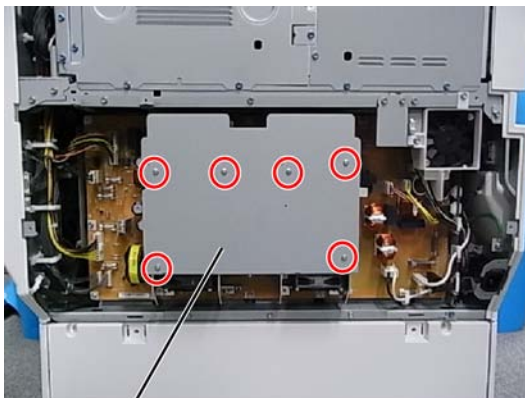



[A]

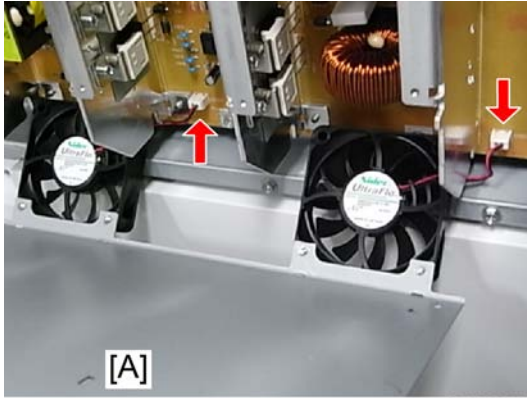
d1440057



d1440058

4

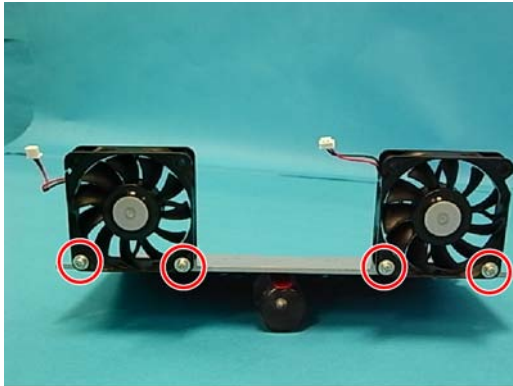

- 3. PSU fan bracket [A] (  x 6,  x 2)




d1440062

- 4. PSU fans (  x 2, each)

## ITB Power Supply Board

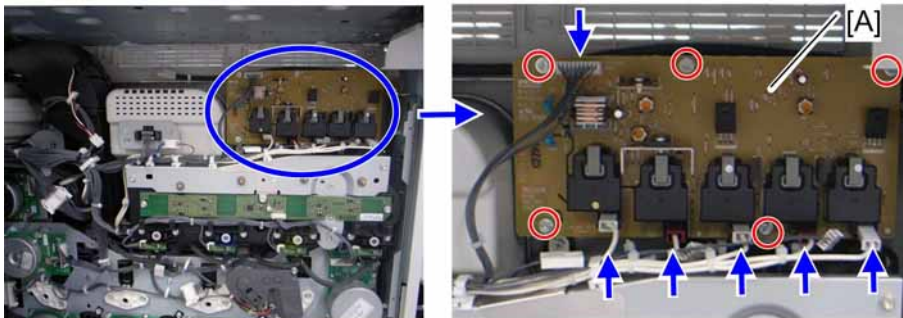

- 1. Rear cover (  p.176)
- 2. Open the controller box (  p.319)




d027r717

- ITB power supply board [A] (  x 5,  x 6 )



## High Voltage Supply Board

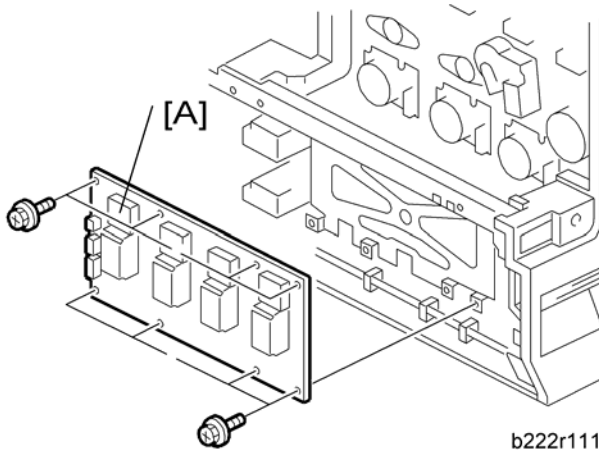
- Rear cover (  p.176 )
- PSU bracket (  p.328 )



- High voltage supply board [A] (  x 8,  x All,  x 2 )

## High Voltage Supply Board Bracket

- Rear cover (  p.176 )
- PSU bracket (  p.328 )

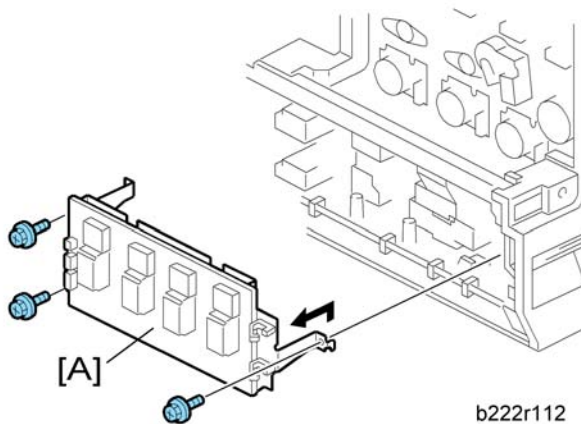


- High voltage supply board bracket [A] (  x 3,  x All,  x 2 )

---

## AC Controller Board

---

1. Rear cover (📄 p.176)
2. Right rear cover (📄 p.176)
3. Fusing duct (📄 p.284)

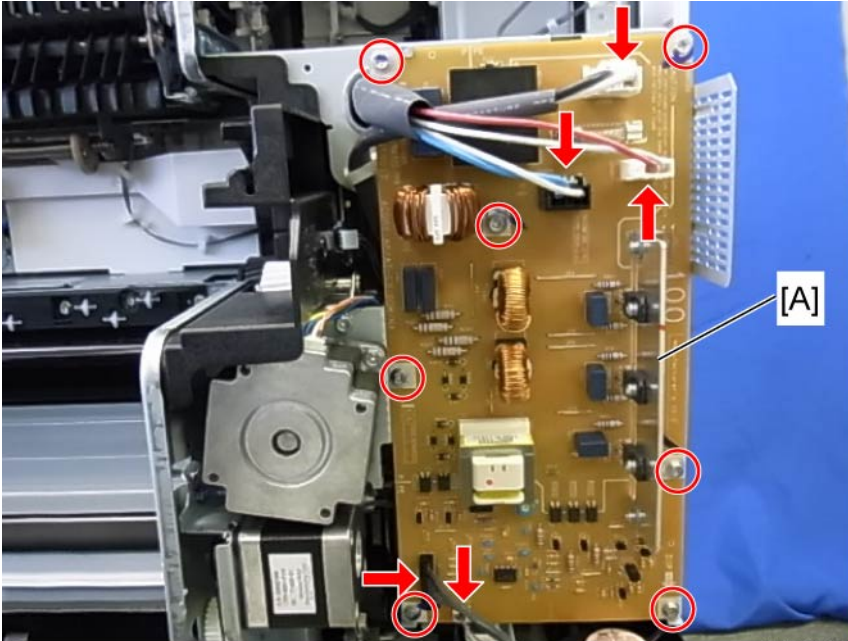

d1440108


4. AC controller board [A] (🔩 x 7, 📁 x 5)

---

## AC Controller Board Bracket

---

1. AC controller board (📄 p.332)

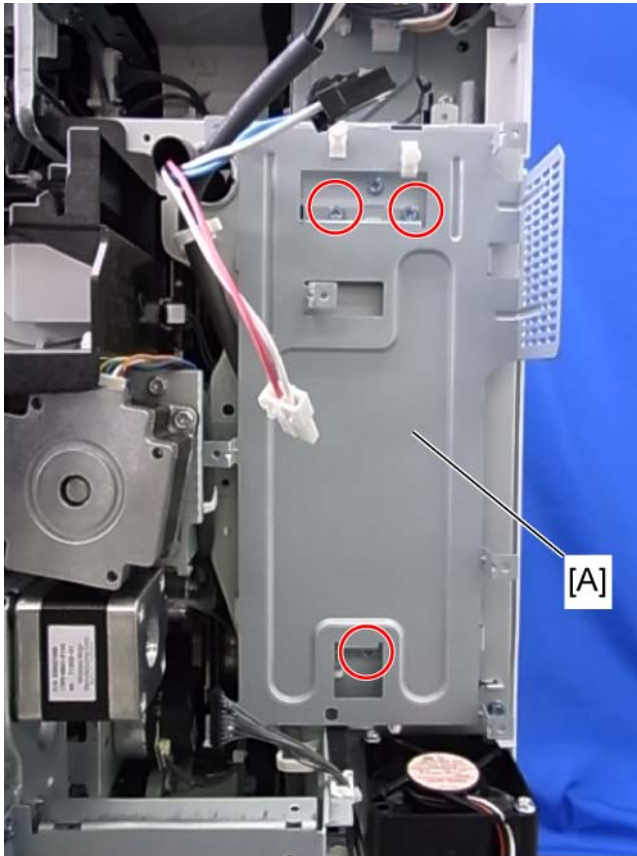


d1440124


2. AC controller board bracket [A] (  x 3)

---

## Controller Board

---


1. Controller unit (  p.318)

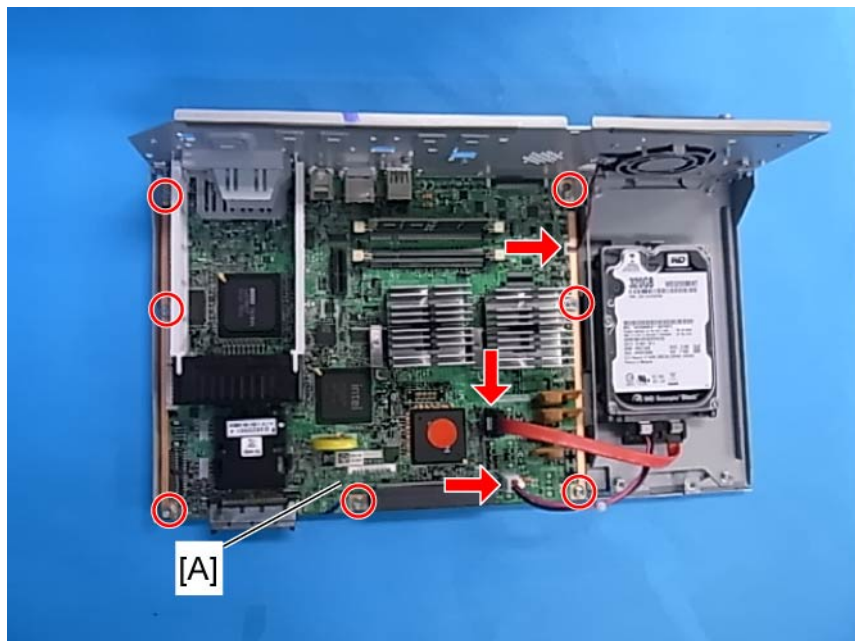

d1440112

2. Controller board [A] (  x 7,  x 3 )



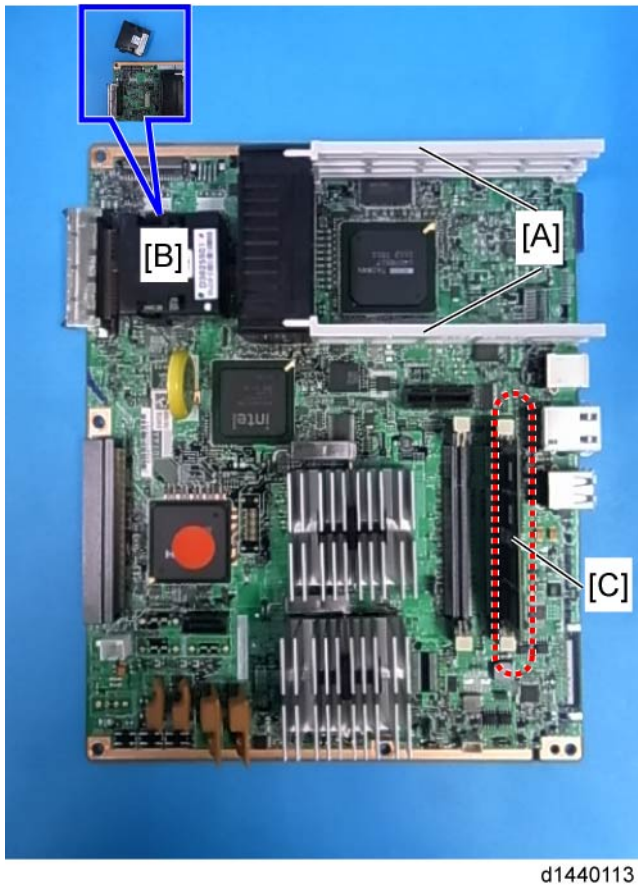

d1440113

3. Interface rails [A], NV-RAM [B], RAM-DIMM [C]

### When installing the new controller board

Remove the NVRAM from the old controller board. Then install it on the new controller board after you replace the controller board. Replace the NVRAM if the NVRAM on the old controller board is defective.

#### ⚠ Note

- Make sure you print out the SMC reports ("SP Mode Data" and "Logging Data") before you replace the NVRAM.

#### ⚠ CAUTION

- Keep NVRAMs away from any objects that can cause static electricity. Static electricity can damage NVRAM data.
- Make sure the NVRAM is correctly installed on the controller board.


- Make sure that the DIP-switch settings on the old controller board are the same for the new controller board. Do not change the DIP switches on the controller board in the field.

---

## HDD Fan

---

1. Controller unit (🔧 p.318)

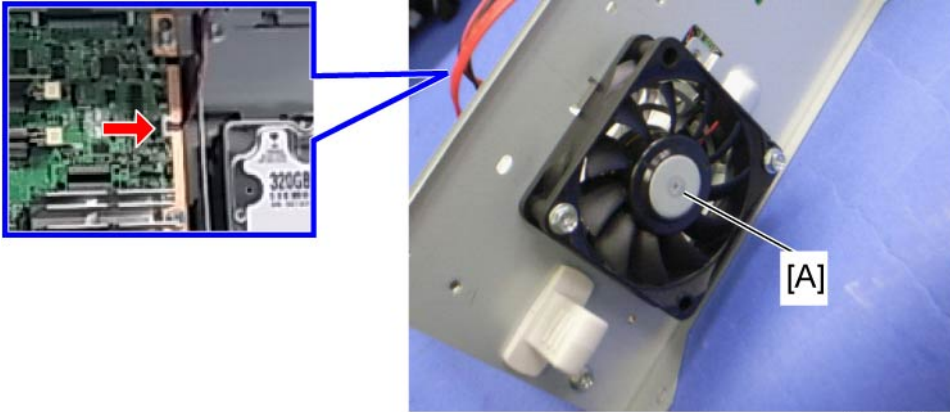

d1440114

2. HDD fan [A] (🔩 x 2, 📏 x 1)

### When installing the HDD fan

---


Make sure that the HDD fan is installed with its decal facing the right side of the machine.

---



## HDD


---

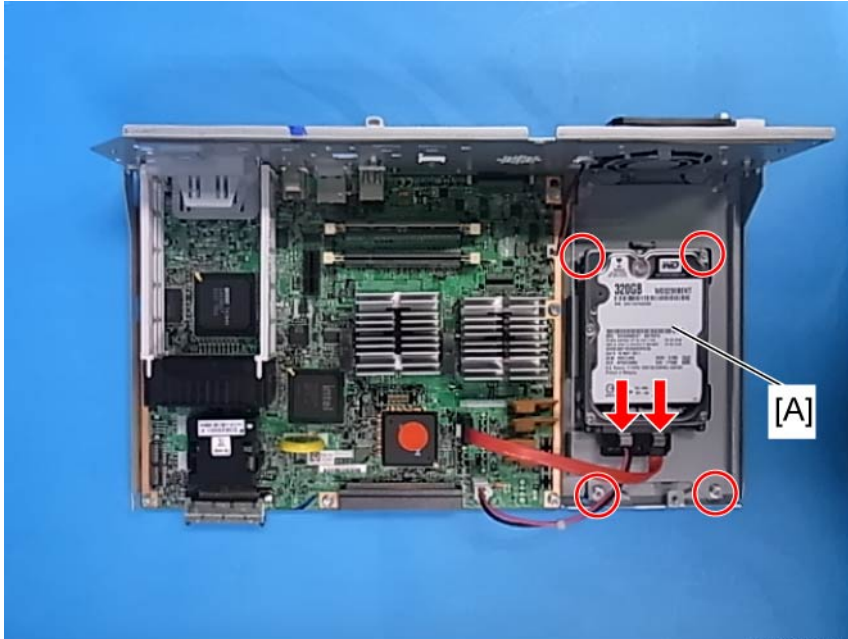1. Controller unit (🔧 p.318)




d1440115

2. Remove the HDD [A] with the bracket (  x 4,  x 2).

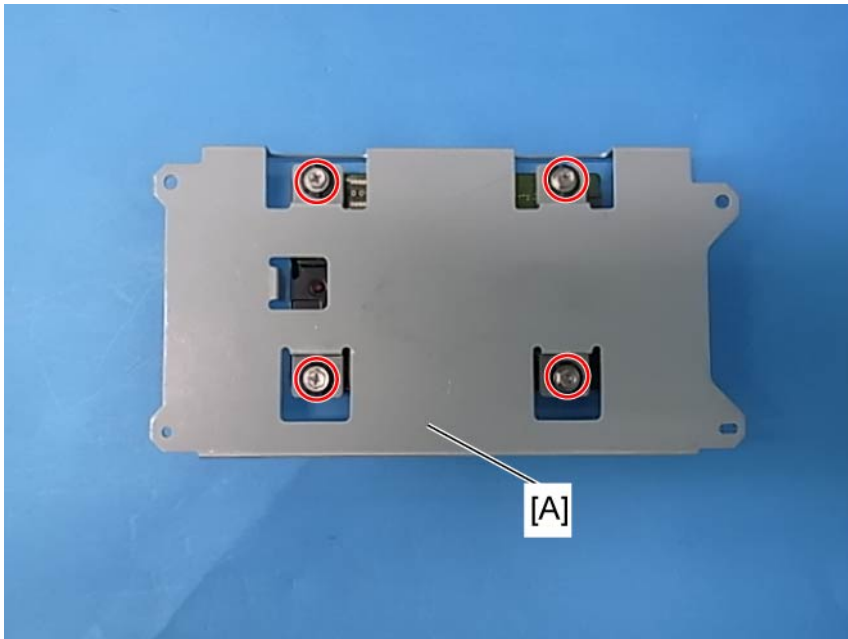

d1440116


3. Remove the HDD from the bracket [A] (  x 4).




### When installing a new HDD unit


1. Turn the main power switch on. The disk is automatically formatted.
2. Install the stamp data using "SP5853".
3. Switch the machine off and on to enable the fixed stamps for use.

### Toner Bottle Detection Board

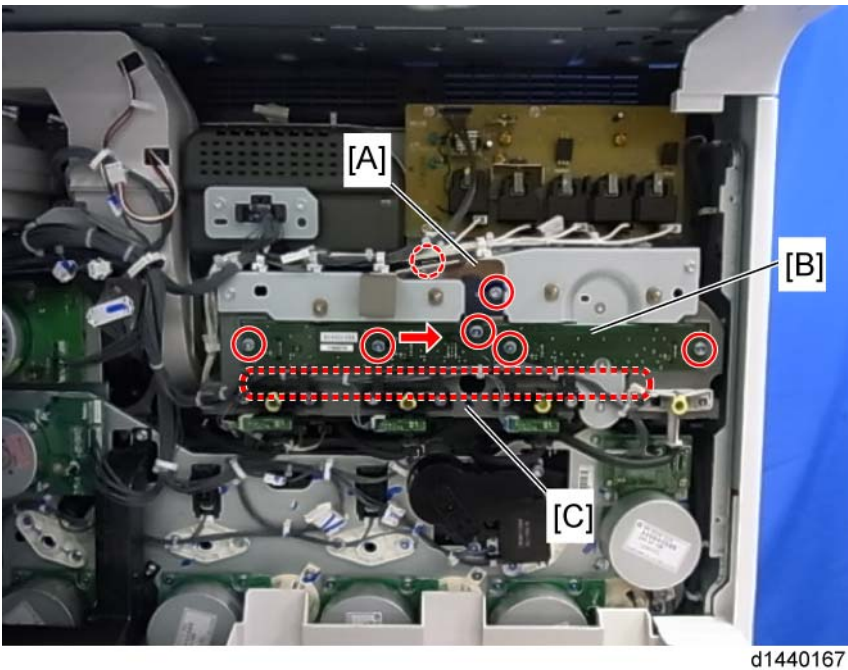1. Open the controller box ( p.319)



2. Remove the grounding plate [A] completely (  x 3).
3. Move the harnesses [C] downward to prevent the board from catching on them.
4. Pull out the toner bottle detection board [B] gently and horizontally (  x 1,  x 4)

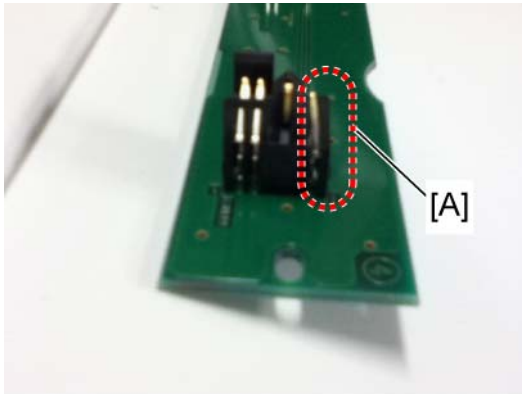

d1440168

### ★ Important

- The toner bottle detection board should be pulled out horizontally. If you ignore this, the toner bottle detection terminals [A] may be damaged.

4

## NVRAM Replacement Procedure

This machine has two types of NVRAM. One is on the BCU (📄 p.325); the other is on the controller board (📄 p.333).

### NVRAM on the BCU

1. Make sure that you have the SMC report (factory settings). This report comes with the machine.
2. Output the SMC data (SP5-990-001) if possible.
3. Turn the main switch off.
4. Install an SD card into SD card slot 2. Then turn the main power on.
5. Copy the NVRAM data to an SD card (SP5-824-001) if possible.
6. Turn off the main switch. Then unplug the power cord.
7. Replace the NVRAM on the BCU and reassemble the machine.
8. Plug in the power cord. Then turn the main switch on.
9. Select a paper-size type (SP5-131-001).
10. Specify the serial number and destination code of the machine.

### ↓ Note

- Contact your supervisor for details on how to enter the serial number and destination code.
- SC 999 or "Fusing Unit Setting Error" can be shown until the serial number and destination code are correctly programmed.

11. Turn the main switch off and on.
12. Copy the data from the SD card to the NVRAM (SP5-825-001) if you have successfully copied them to the SD card.
13. Turn the main switch off. Then remove the SD card from SD card slot 2.
14. Turn the main switch on.
15. Specify the SP and UP mode settings.
16. Do the process control self-check.
17. Do ACC for the copier application program.
18. Do ACC for the printer application program.

 **Note**

- If the message "SD card for restoration is required." appears after the NVRAM replacement, the encryption key should be restored. See "Encryption Key Restoration for NVRAM" for the restoration procedure. (▶ p.892)

### **NVRAM on the controller board**

---

1. Make sure that you have the SMC report (factory settings). This report comes with the machine.
2. Output the SMC data ("ALL") using SP5-990-001. (SP5-990-001)
3. Turn off the main switch.
4. Insert a blank SD card into slot #2, and then turn on the main switch.
5. Upload the NVRAM data to the blank SD card using SP5-824-001 (NVRAM Data Upload).
6. Turn off the main power switch, and then unplug the AC power cord.
7. Remove the SD card containing the NVRAM data from slot #2.
8. Replace the NVRAM on the controller board with a new one.
9. Plug in the AC power cord, and then turn on the main power switch.

 **Important**

- **When you do this, SC995-02 (Defective NVRAM) will be displayed. However, DO NOT turn off the main power switch. Continue with this procedure.**
10. Re-insert the SD card that you removed in step 7 back into slot #2.
  11. Download the old NVRAM data from the SD card onto the new NVRAM using SP5-825-001 (NVRAM Data Download).

 **Note**

- This will take about 2 or 3 minutes.
12. Turn off the main power switch, and then remove the SD card from slot #2.
  13. Turn on the main power switch.

14. Output the SMC data ("ALL") using SP5-990-001, and make sure that it matches the SMC data you printed out in step 2 above (except for the value of the total counter).

**Note**

- The value of the total counter is reset to "0" when the NVRAM is replaced.

15. Do Process Control Self-check.
16. Do ACC for the Copier function.
17. Do ACC for the Printer function.

**Important**

- Do all of the following if SP5-824-001 (NVRAM Data Upload) and SP5-825-001 (NVRAM Data Download) cannot be performed for some reason.
  1. Manually enter all data on the SMC report (factory settings).
  2. Install the Security function (Data Overwrite Security and HDD Encryption unit) again. For the procedure, see "Security function Installation" in "Installation Procedure" of "Copier Installation". (p.40)

**Note**

- If the message "SD card for restoration is required." appears after the NVRAM replacement, the encryption key should be restored. See "Encryption Key Restoration for NVRAM" for the restoration procedure. (p.892)

---



## Tube Cooling Fan (1st Duct Fan)

---

1. Rear cover (p.176)



d1440059


2. Tube cooling fan bracket [A] (  x 2,  x 1 )
3. Tube cooling fan ( 1st Duct Fan )




# Single Pass ADF (Single Pass ADF model only)

## Single Pass ADF

1. Rear cover (🔧 p.176)
2. Controller box right cover (🔧 p.318)

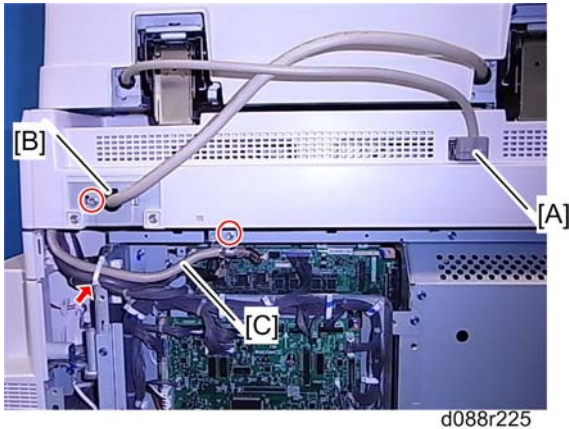

3. Disconnect the ADF I/F cable [A].
4. CIS I/F cable bracket [B] (🔧 x 1)
5. Disconnect the CIS I/F cable [C] (🔧 x 1, 🔧 x 1)

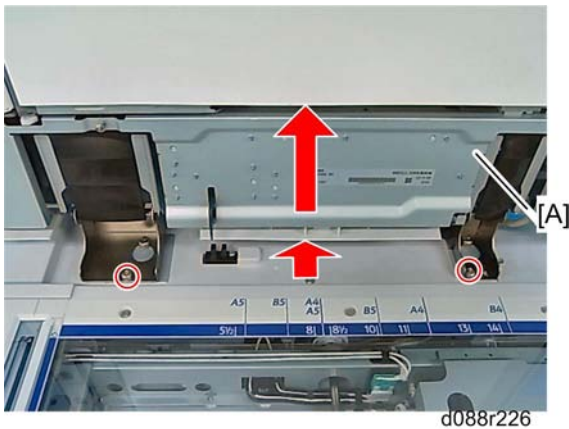

6. Move the single pass ADF [A] to the rear side, and then pull it out.


## ADF Covers

### ADF Front Cover




4

1. Open the feed cover [A].

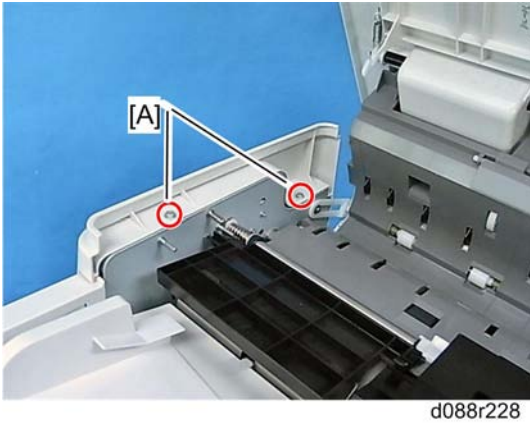


2. Remove two screws [A] on the front cover.

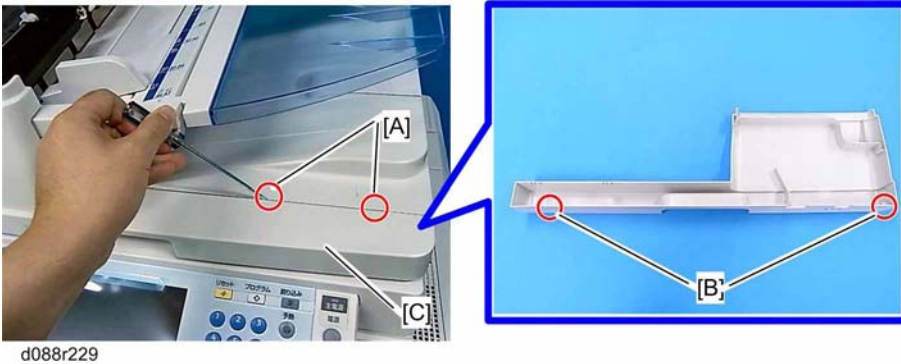


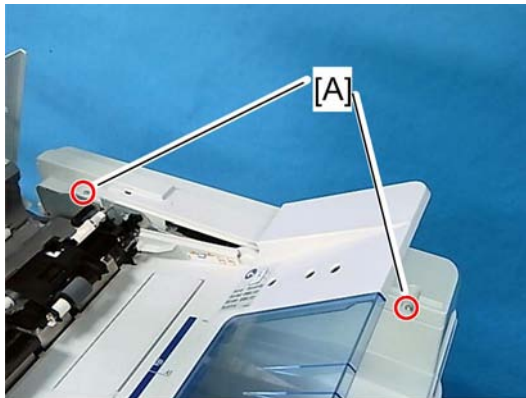
3. Release two tabs [A] at the top of the ADF front cover and two tabs [B] at the bottom of the ADF front cover.
4. ADF front cover [C].

## ADF Rear Cover

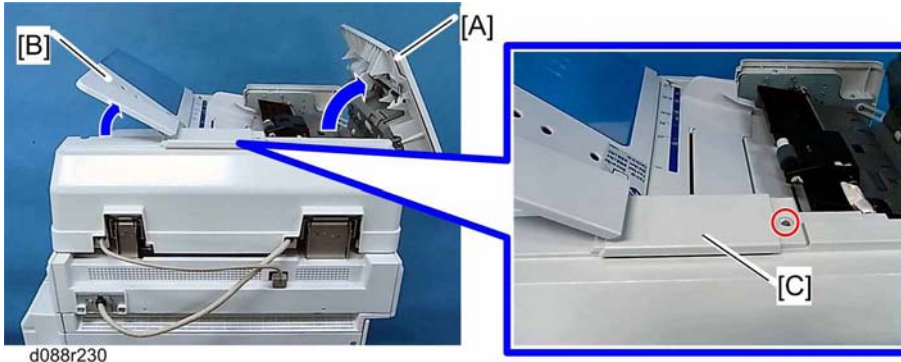


d088r230

1. Open the feed cover [A].
2. Lift the original tray [B].
3. ADF rear top cover [C] (  x 1)




d088r231

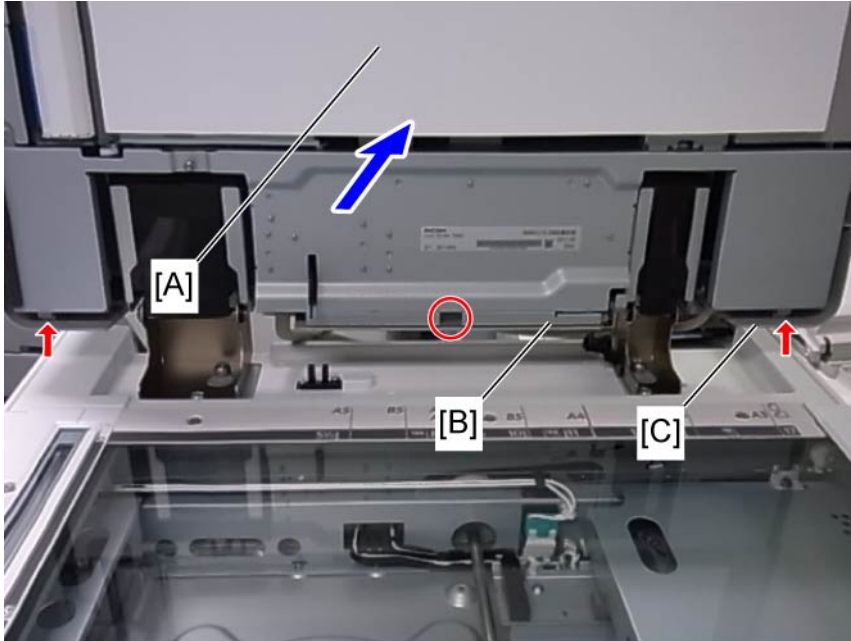

4. Remove two screws [A] on the ADF rear cover [C].




d1440022


5. Open the ADF [A].
6. Bracket [B] (  x 1 )
7. Release two tabs, and then remove the ADF rear cover [C].


### Original Feed Cover

1. ADF front cover (  p.344 )
2. ADF rear cover (  p.344 )

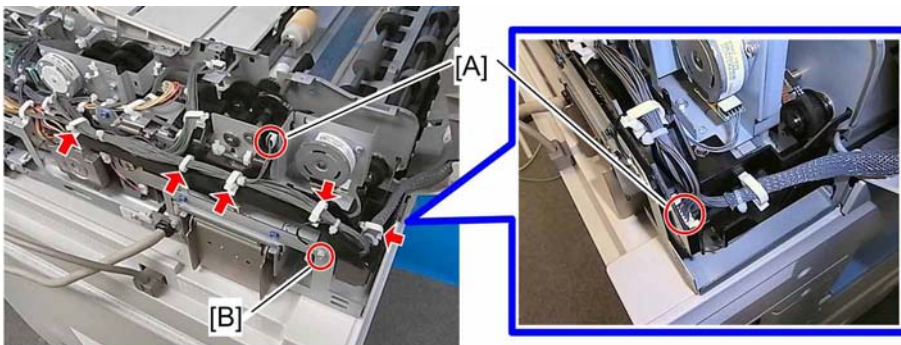


d088r233

3. Release five clamps shown above.
4. Disconnect two connectors [A] and remove the ground cable [B] (  x 1 ).

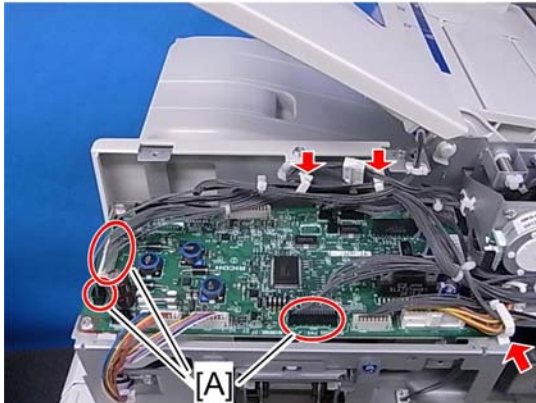



d088r234

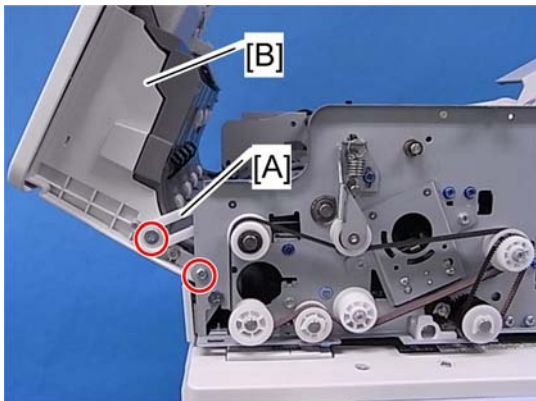


5. Release three clamps shown above.
6. Disconnect three connectors [A].




d088r235

7. Original feed cover link [A] (  x 1 )
8. Original feed cover [B] (  x 1 )

## Original Tray Unit

1. ADF front cover (  p.344 )
2. ADF rear cover (  p.344 )
3. Original feed unit (  p.350 )

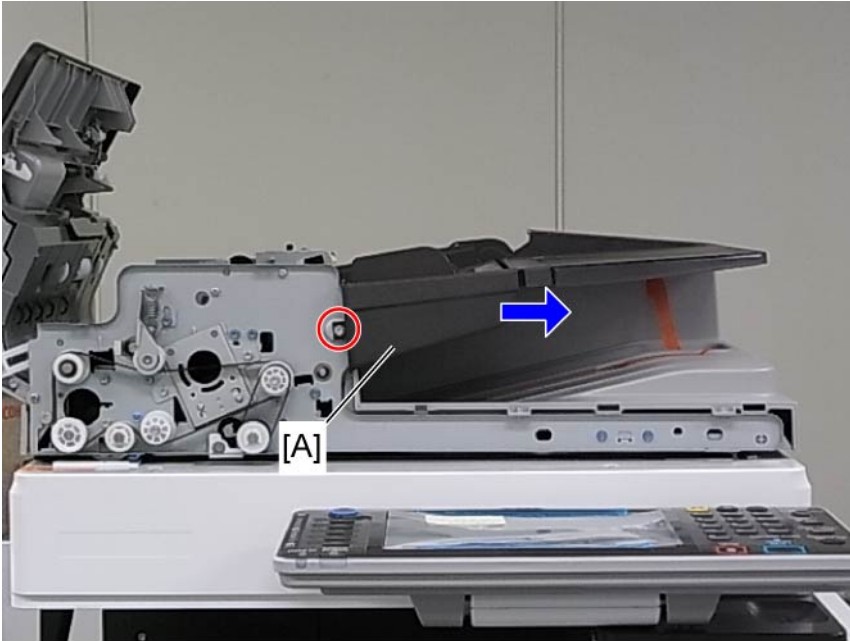


d1440023

4. Slide the right front cover [A] in the direction indicated by the arrow and remove it (  x 1).


 **Note**

- There is a hook at the rear of the right front cover.

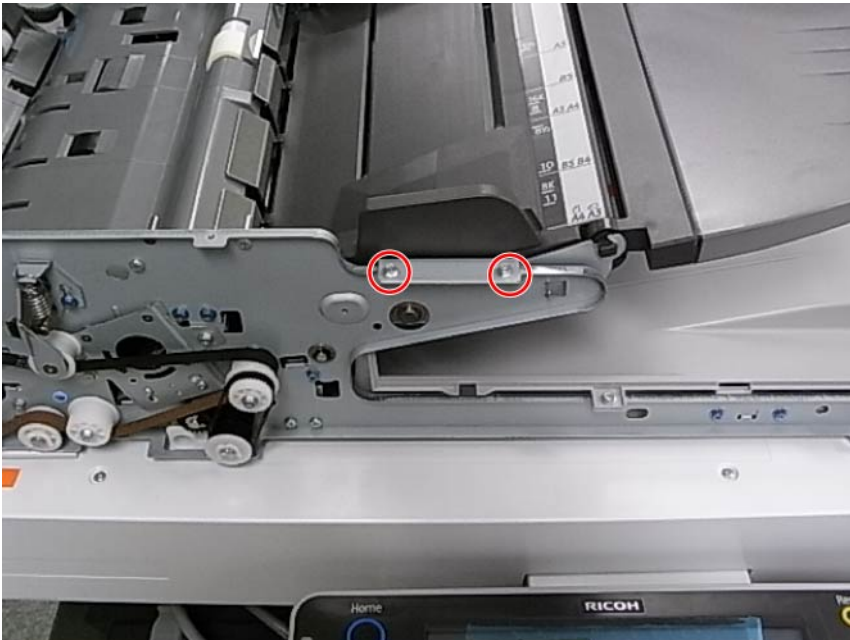


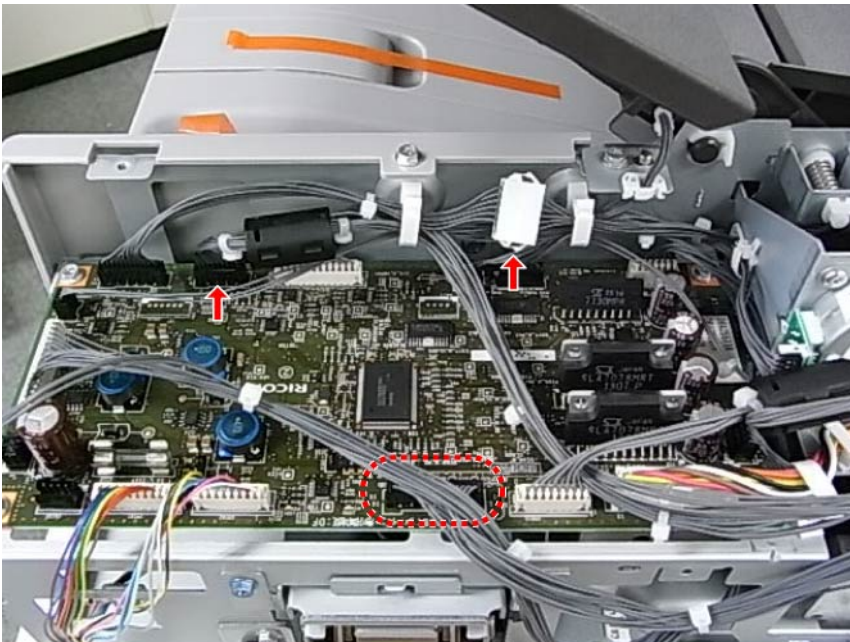
d1440024

5. Remove two screws (  X 2).

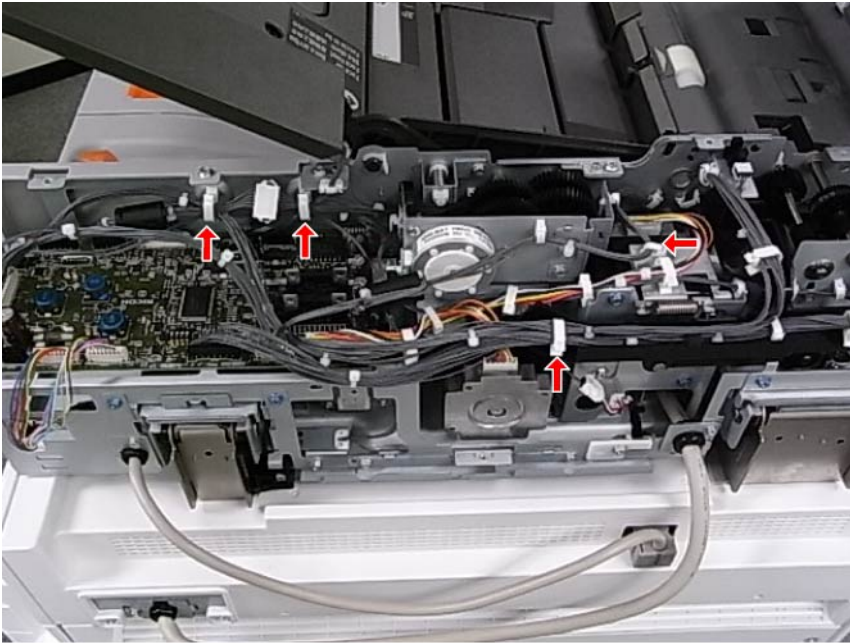


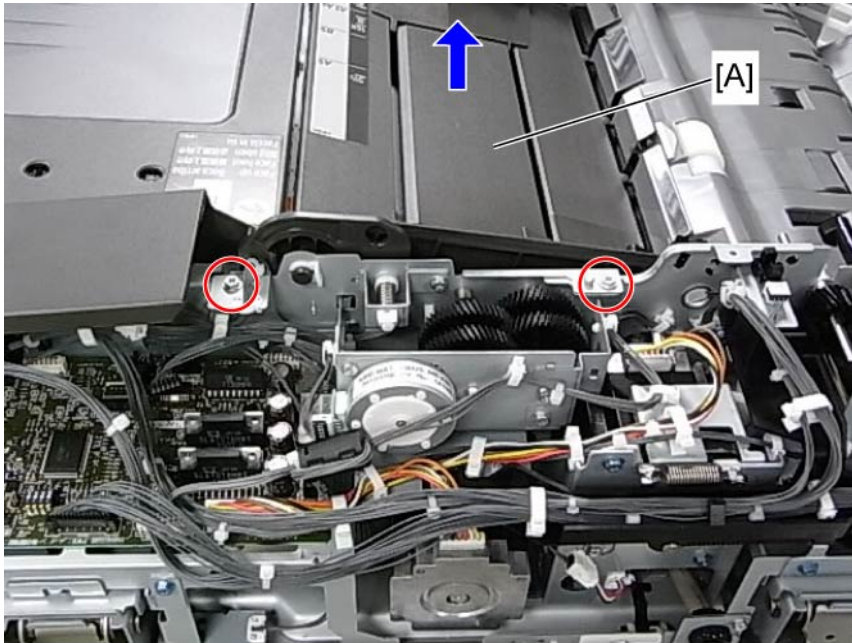
d1440025

6. Release four clamps (  X 4).



d1440026


7. Disconnect three connectors (  x 3).




d1440027

8. Lift up the original tray unit [A] and remove it (  x 2).

## Original Feed Unit

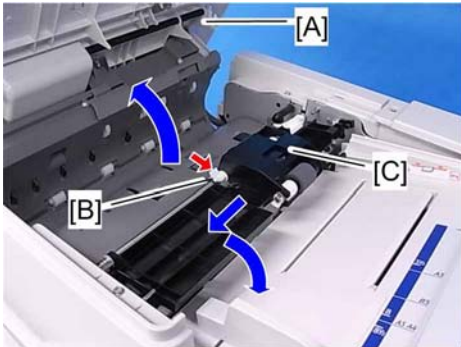

d088r236

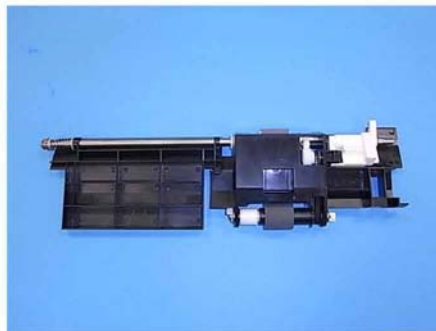


1. Open the original feed cover [A].
2. Remove the snap fitting [B].
3. Push the original feed unit slowly to the front side to disengage the shaft [C] on the rear side, and then lift it out.




## Original Feed Belt and Pick-Up Roller

1. Original feed unit (☞ p.350).

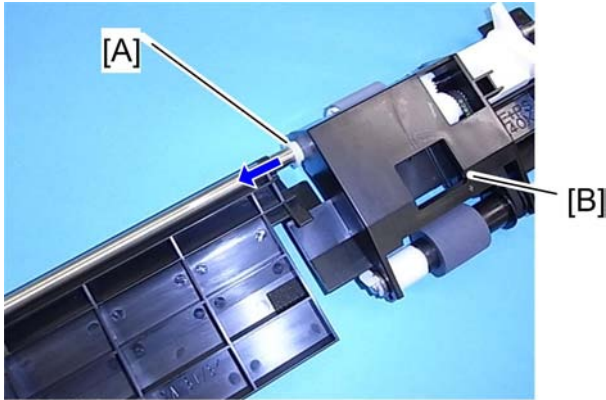


d088r237

2. Slide the bushing [A].
3. Original pick-up roller unit [B]

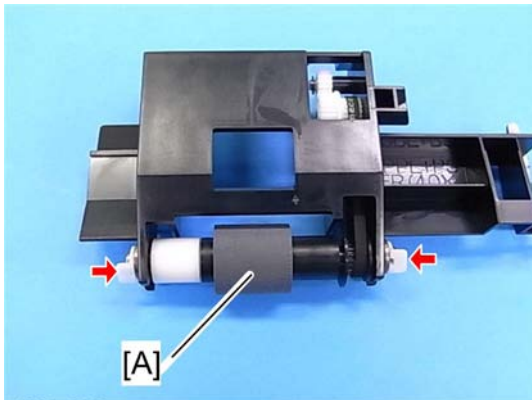

d088r238

4. Original pick-up roller [A] (☞ x 2, bushing x 2)

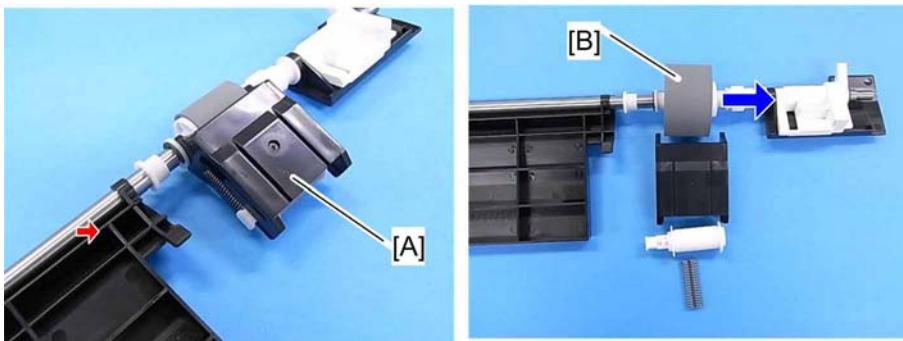

d088r239

5. Hold the original feed belt holder [A] by the left and right sides, then carefully pull it off the bushing. Do not let the springs fall.
6. Original feed belt [B].

**Note**

- When re-assembling, set the original feed roller springs first, then follow this procedure in reverse.


---

## Original Separation Roller

---

4

1. Open the original feed cover.
2. Original feed unit (p.350)

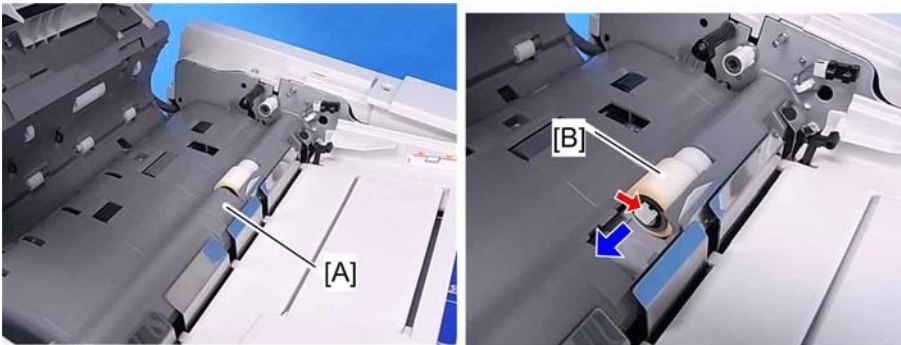

d088r240


3. Original separation roller cover [A]
  - Use the tip of a screwdriver to push up the cover.
4. Original separation roller [B] (x 1)

---



## Original Registration Sensor


---

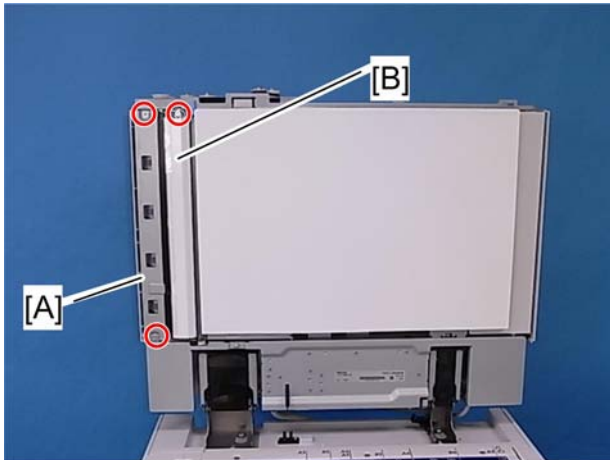1. Open the original feed cover.




d088r241

2. Transport idle roller left unit [A] (  x 2)
3. White guide plate [B] (  x 1)

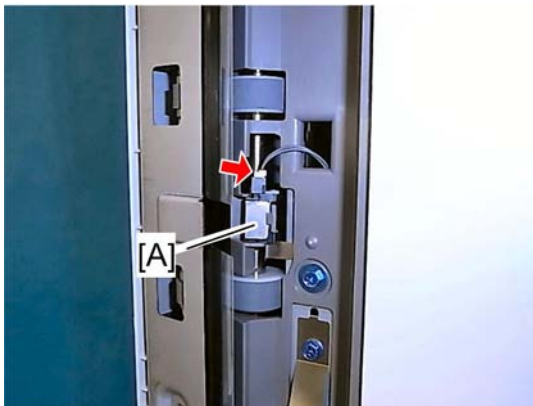

d088r242


4. Original registration sensor [A] (hook,  x 1)

---

## ADF Control Board


---

1. ADF rear cover (  p.344)

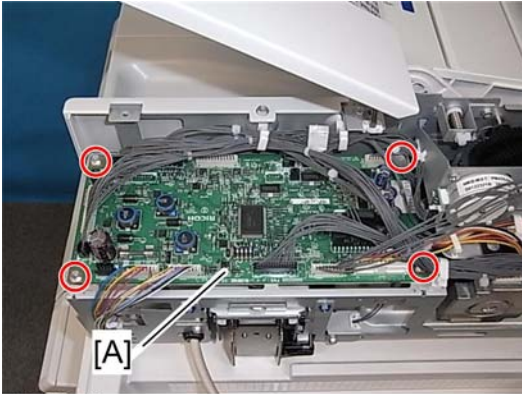


d088r243


4

2. ADF control board [A] (  x 4, all  s)

## Original Width, Interval, Original Separation and Skew Correction Sensors


### Original Width Sensors

1. Original feed cover (  p.344)

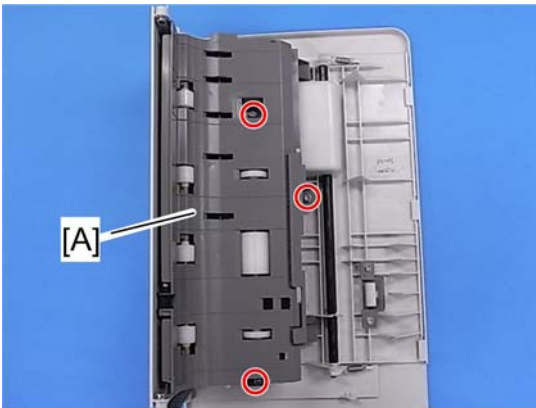


d088r244

2. Feed cover guide plate [A] (  x 3)

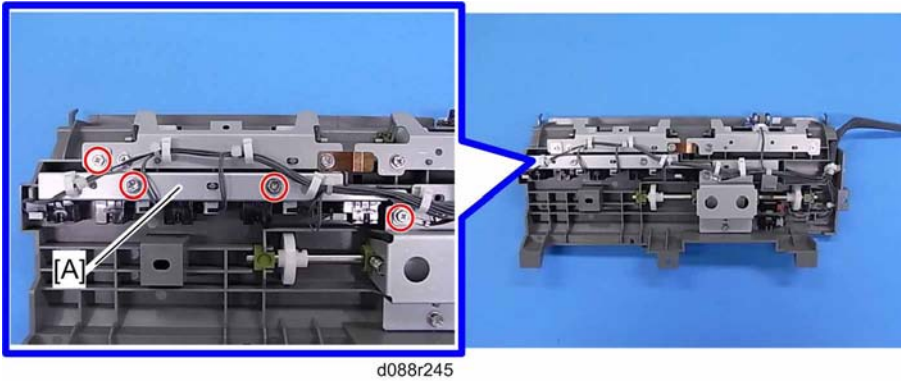


3. Original width sensor bracket [A] (  x 4 )

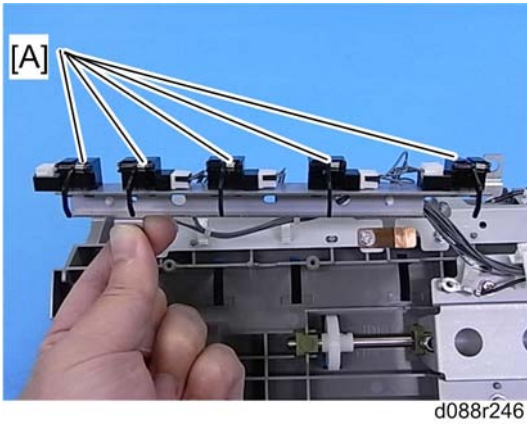


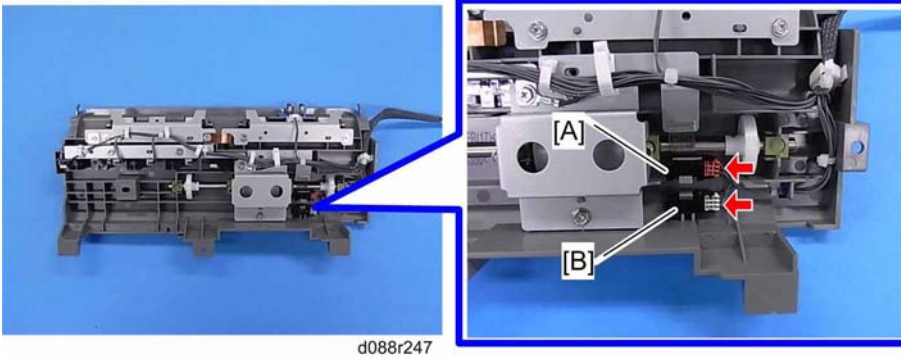
4. Original width sensors [A] (x 5, hooks,  x 1 each)

### Original Separation and Skew Correction Sensors

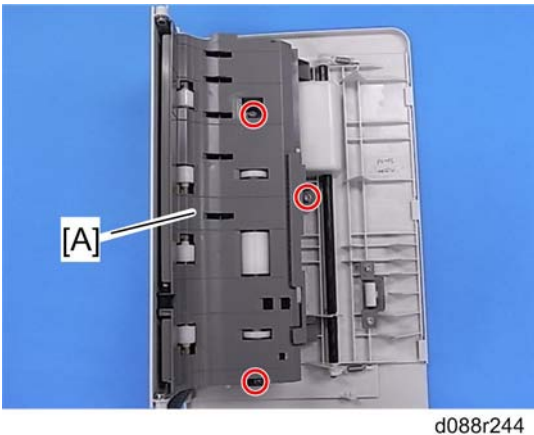

1. Original feed cover (  p.344 )



- 2. Original feed cover guide plate [A] (  x 3 )





4


- 3. Original separation sensor [A] (hooks,  x 1)
- 4. Original skew correction sensor [B] (hooks,  x 1)

### Interval Sensor

- 1. Original feed cover (  p.344 )

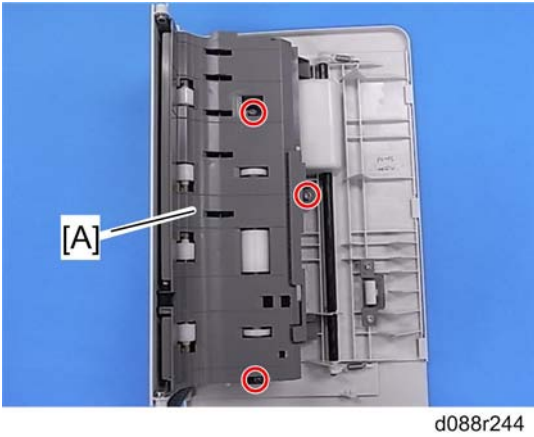


- 2. Original feed cover guide plate [A] (  x 3 )

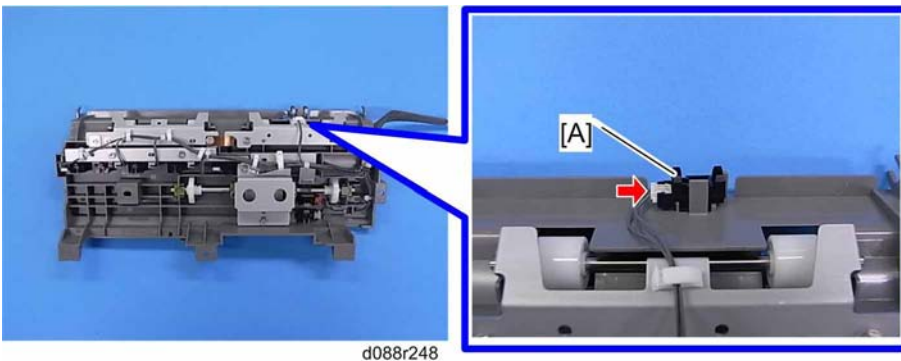


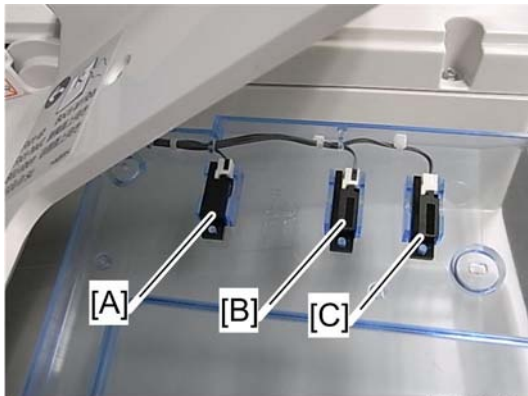
- Interval sensor [A] (hooks,  x 1)

## Original Length Sensors

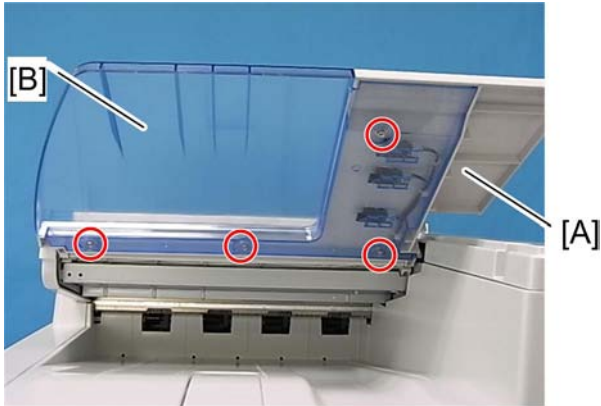




d088r249

- Lift the original tray [A].
- Lower cover [B] (  x 4)






d088r250

- Original length sensor 1 – B5 [A] (  x 1)
- Original length sensor 2 – A4 [B] (  x 1)
- Original length sensor 3 – LG [C] (  x 1)

## APS Start Sensor

- ADF rear cover (  p.344)






2. APS start sensor bracket [A] (  x 1)
3. APS start sensor [B] (  x 1, hooks,  x 1)


4

## Other ADF Sensors


### Bottom plate HP Sensor

1. Original feed unit (  p.350)
2. ADF front cover (  p.344)

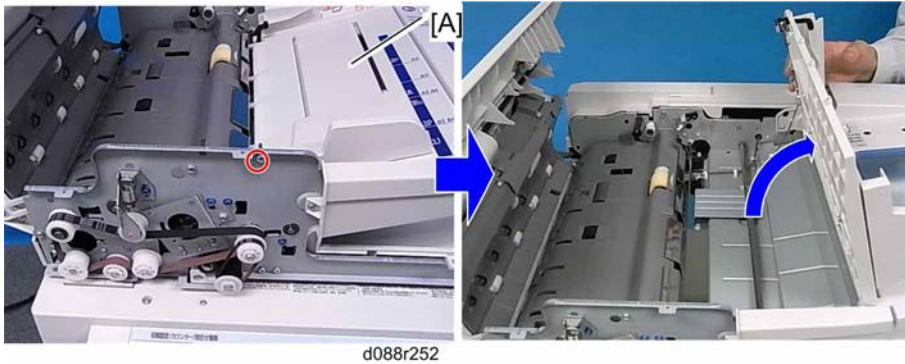

3. Open the original side fence [A] (  x 1).



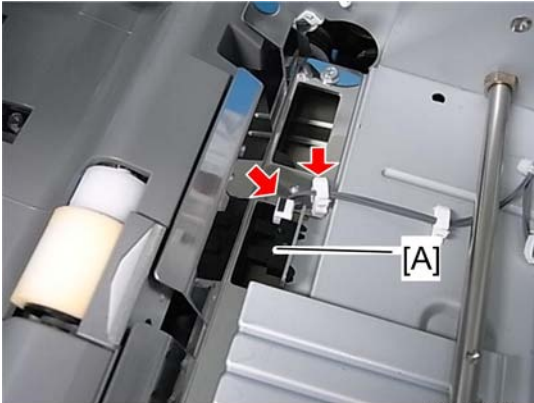




d088r253


4. Bottom plate HP sensor [A] (  x 1, hooks,  x 1 )


### Original Set Sensor

1. Original feed unit (  p.350 )
2. ADF front cover (  p.344 )

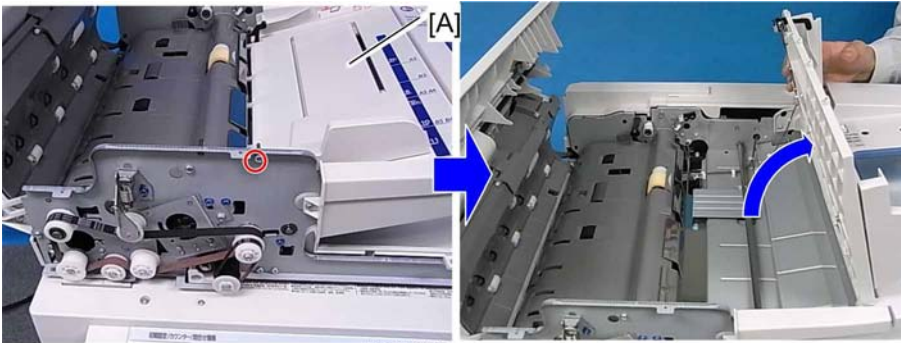


d088r252

3. Open the original side fence [A] (  x 1 ).

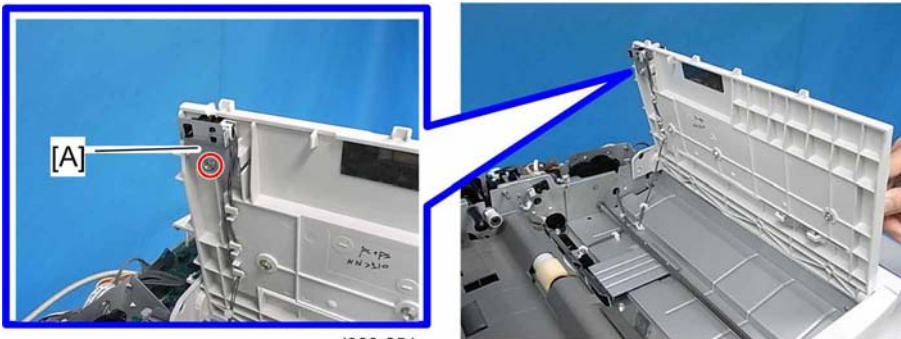

d088r254

4. Bracket [A] (  x 1 )

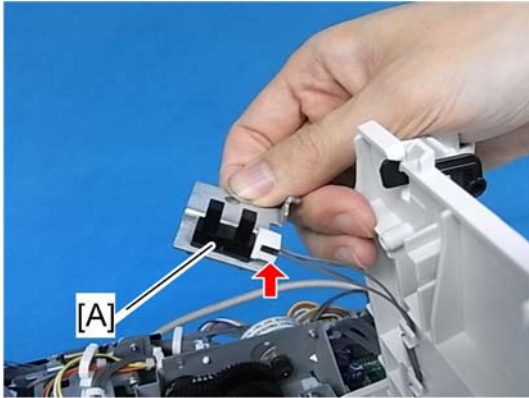

d088r255


4

5. Original set sensor [A] (hooks,  x 1)


### Original Feed Cover Sensor

---

1. ADF rear cover ( p.344)

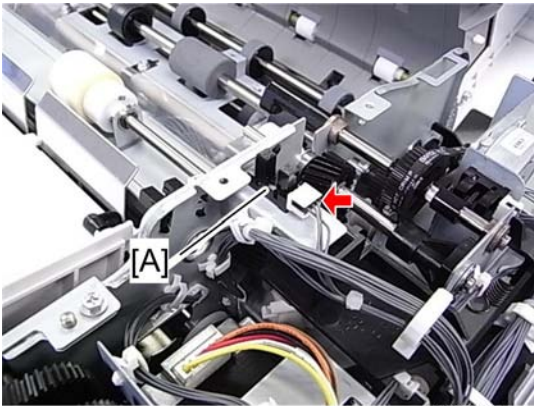


d088r256

2. Original feed cover sensor [A] (hooks,  x 1)


### Bottom Plate Position Sensor

---

1. ADF rear cover ( p.344)

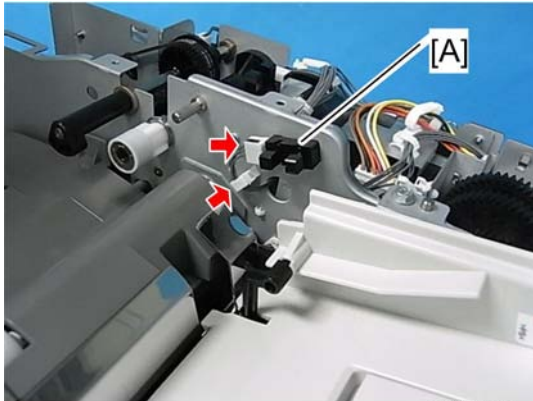


d088r257


2. Bottom plate position sensor [A] (sensors x 1, hooks,  x 1)

### Original Pick-Up Roller HP Sensor

1. ADF rear cover ( p.344)

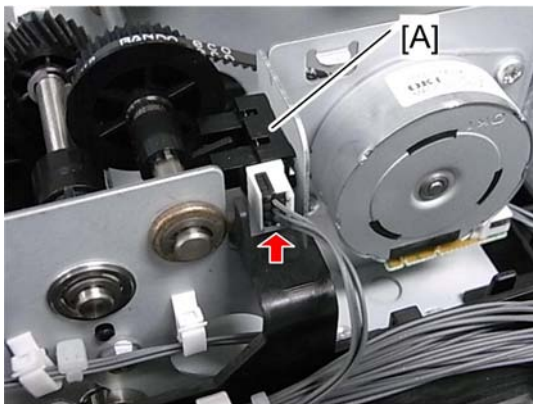




d088r258

2. Original pick-up roller HP sensor [A] (hooks,  x 1)

### Bottom Plate Lift Motor

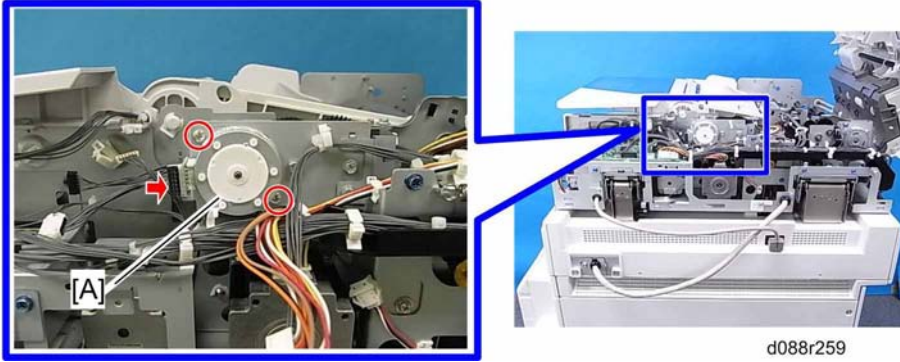1. ADF rear cover ( p.344)






2. Bottom plate lift motor [A] (  x 1,  x 2, timing belt x 1 )




- When reassembling the bottom plate lift motor, make sure that the timing belt for the bottom plate lift motor is correctly set.


4

## Original Transport Motor

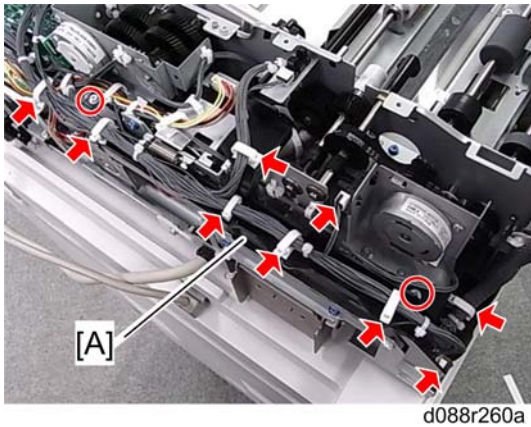
1. ADF rear cover (  p.344 )
2. Original tray unit (  p.347 )



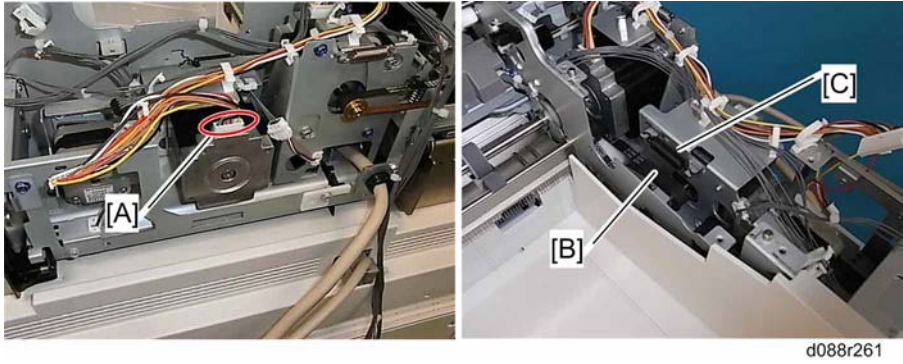

3. Harness guide [A] (  x 7,  x 2,  x 2 )

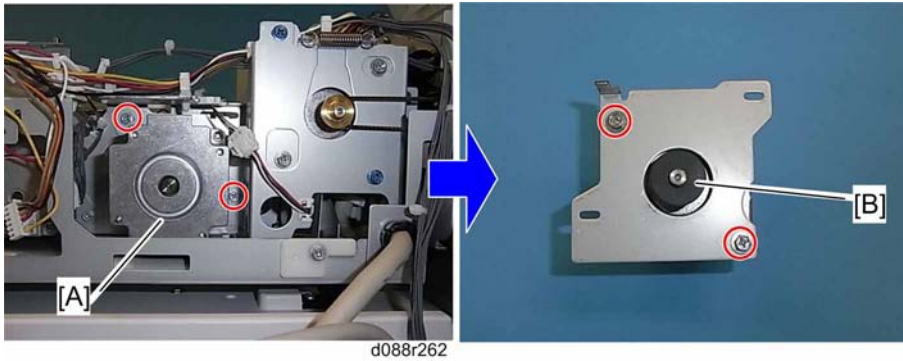

4. Disconnect the connector [A] and remove the timing belt [B] and spring [C].






5. Original transport motor bracket [A] (  x 2)
6. Original transport motor [B] (  x 2)

---

## Original Feed Motor


---

1. ADF rear cover (  p.344)
2. Harness guide (  p.362)

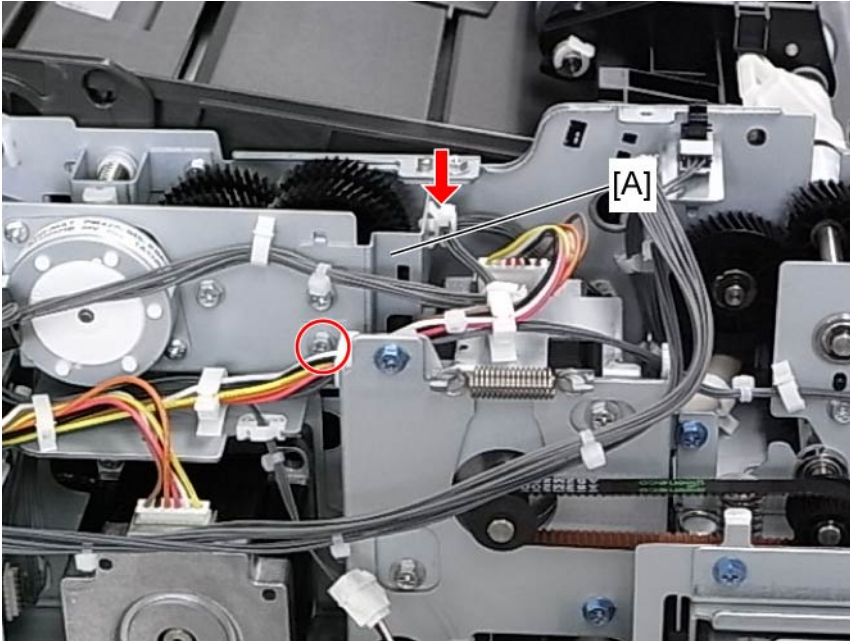


d1440028

3. Remove the bracket [A] (  x 1,  x 1 ).

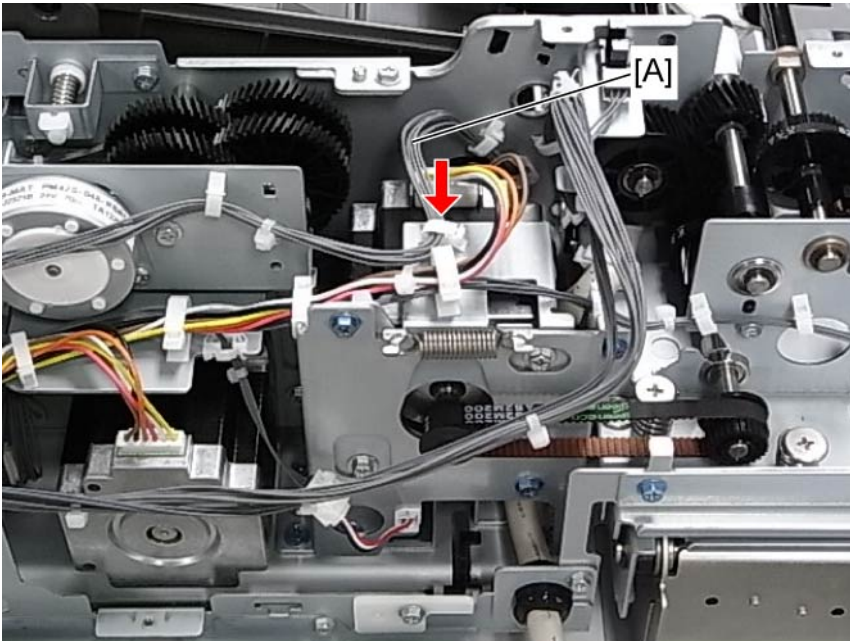


d1440029

4. Release the harness [A] (  x 1 ).

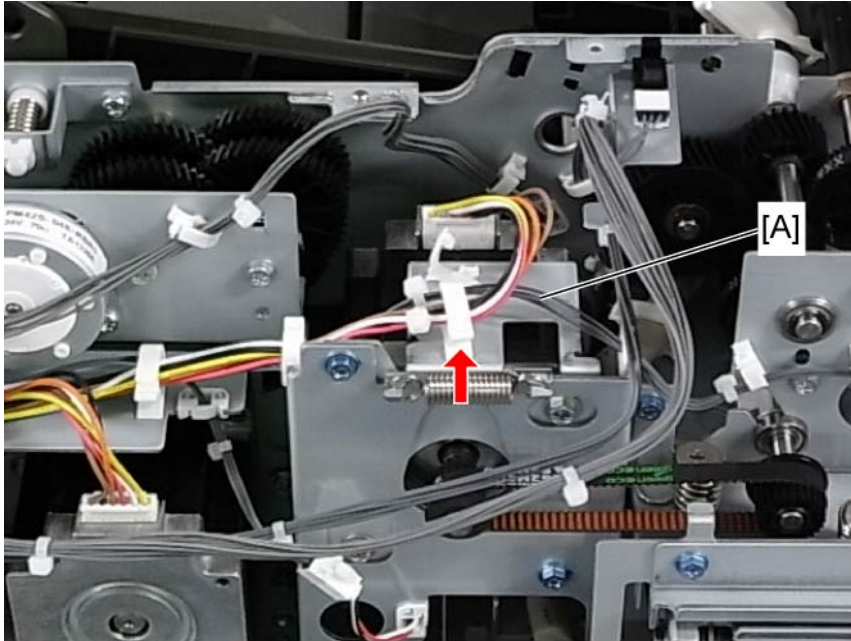


d1440030

5. Release the harness [A] of the original pick-up roller motor (🔧 x 1).

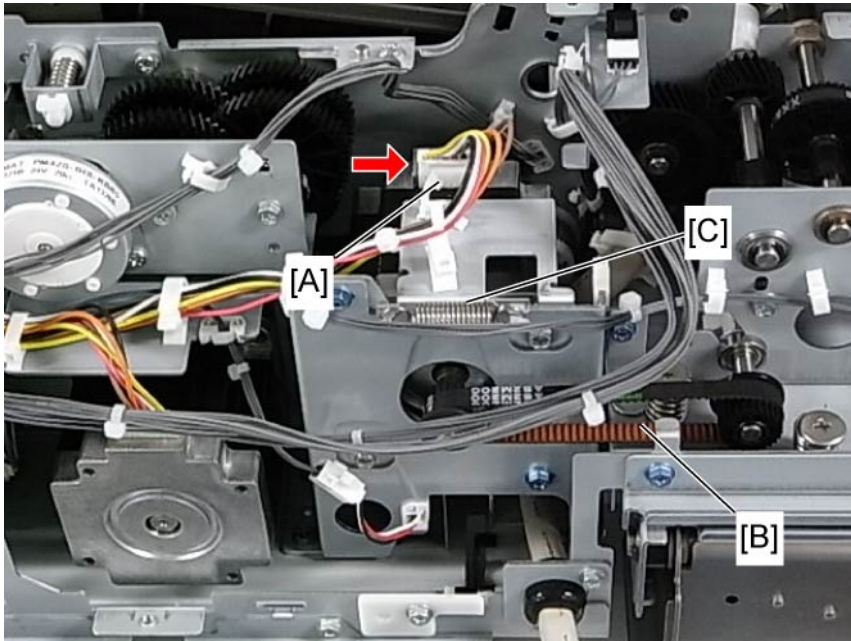


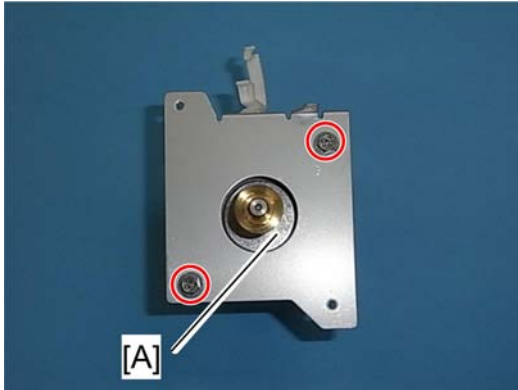
d1440031

6. Disconnect the connector [A] and remove the timing belt [B] and spring [C] (🔧 x 1, 🌀 x 1, timing belt x 1).

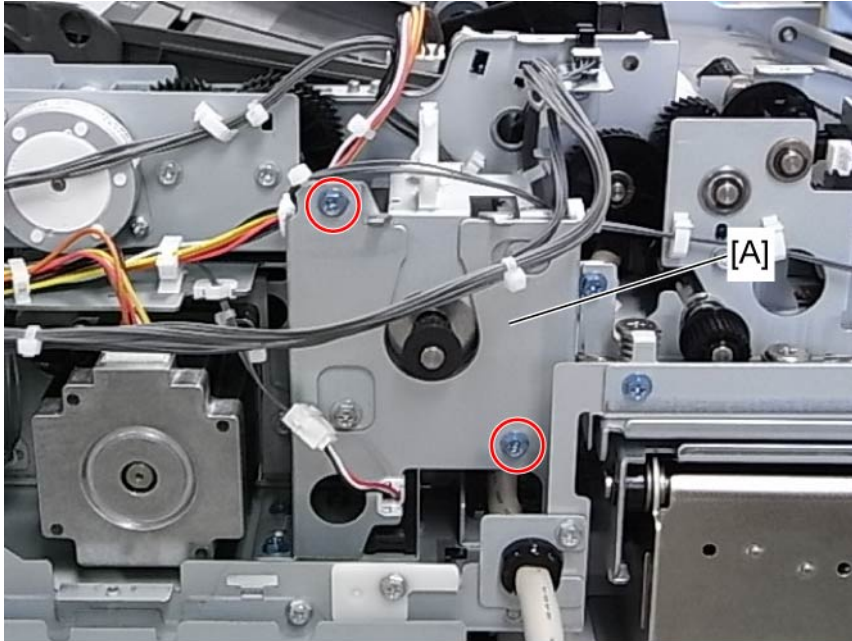


d1440032

7. Original feed motor bracket [A] (  x 2).





d088r263a

8. Original feed motor [A] (  x 2)


---

## Original Pick-Up Roller Motor



---

1. ADF rear cover (  p.344)
2. Harness guide (  p.362)

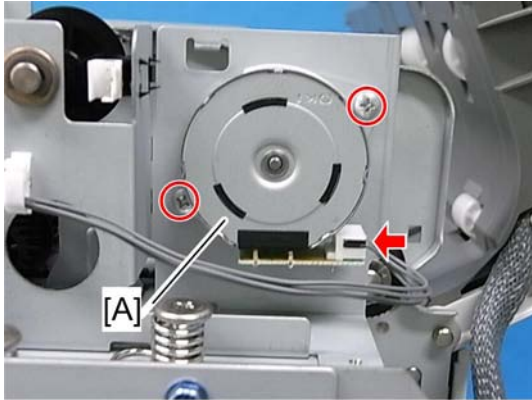








d088r264

3. Original pick-up roller motor [A] (  x 2,  x 1 )

4


## Original Exit Motor

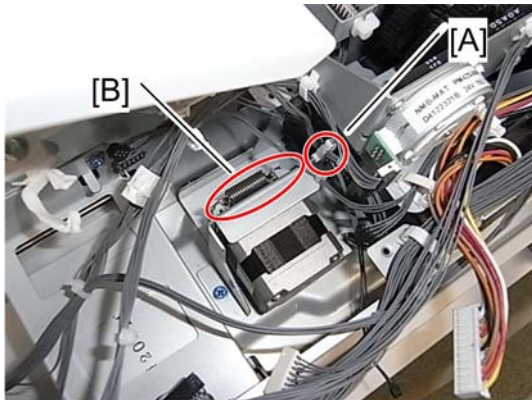


1. ADF rear cover (  p.344 )
2. Harness guide (  p.362 )
3. APS start sensor bracket (  p.357 )
4. ADF control board (  p.353 )



d088r265

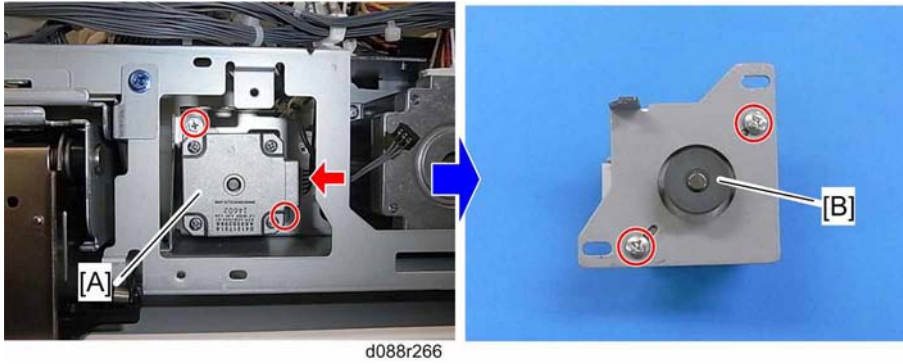5. Release the clamp [A].
6. Timing belt and spring [B]






7. Original exit motor bracket [A] (  x 2,  x 1 )
8. Original exit motor [B] (  x 2 )


4


## CIS Unit

### **WARNING**


- Turn off the main power switch and unplug the machine before performing this procedure.


1. ADF front cover (  p.344 )
2. ADF rear cover (  p.344 )
3. Original feed unit (  p.350 )

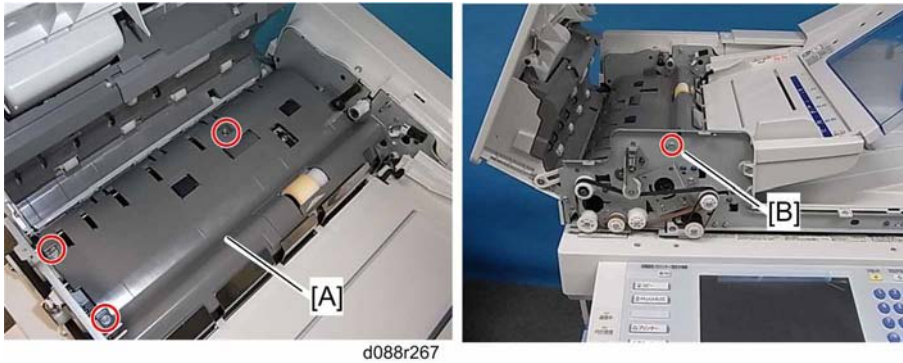



4. Remove the screw [B].
5. Original guide plate [A] (  x 3 )




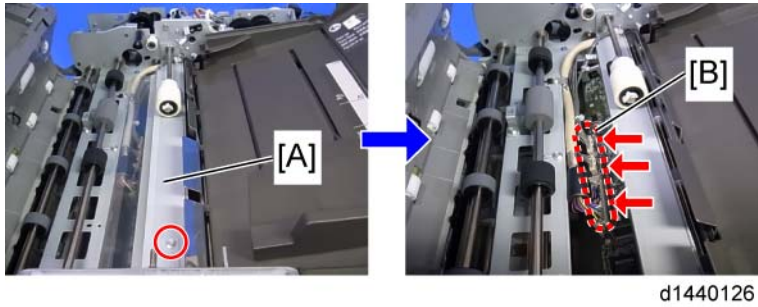

- 6. Original guide plate Mylar [A] (  x 1 )
- 7. Disconnect the CIS I/F cable and two harnesses [B].

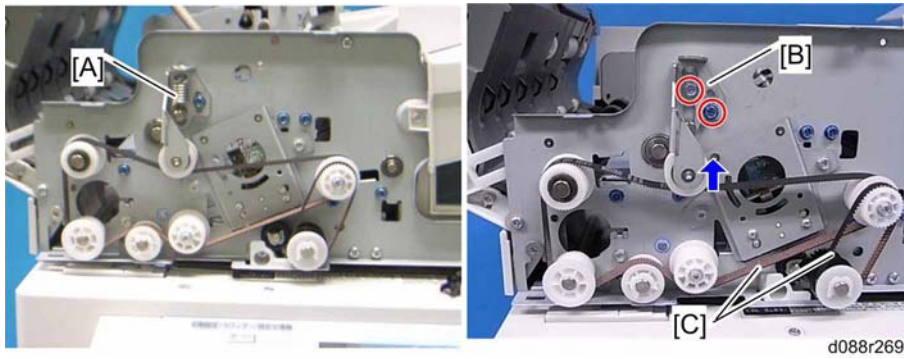


- 8. Tension spring [A]
- 9. Tension bracket [B] (  x 2 )
- 10. Timing belts [C]

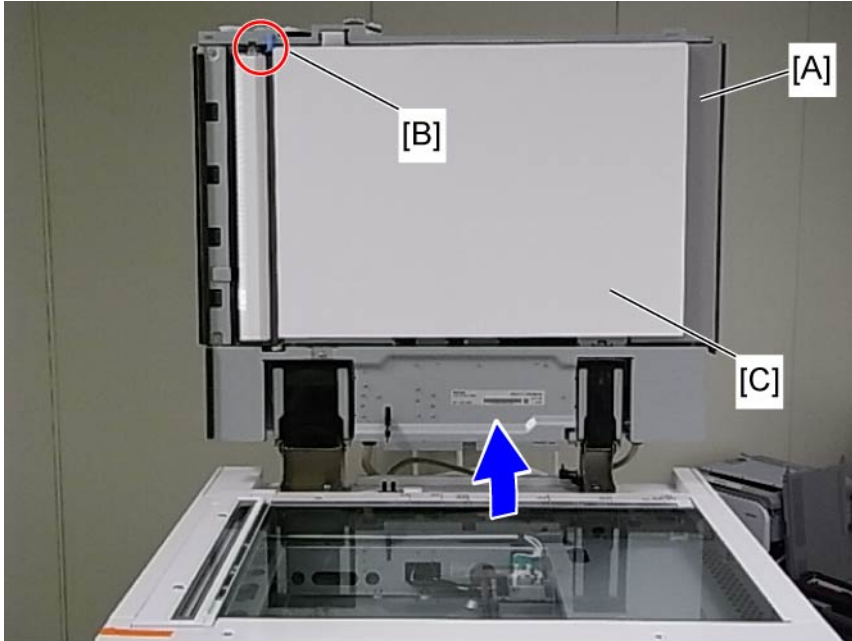

d1440033

11. Open the ADF [A].
12. Release the lever [B] and open the white board [C].

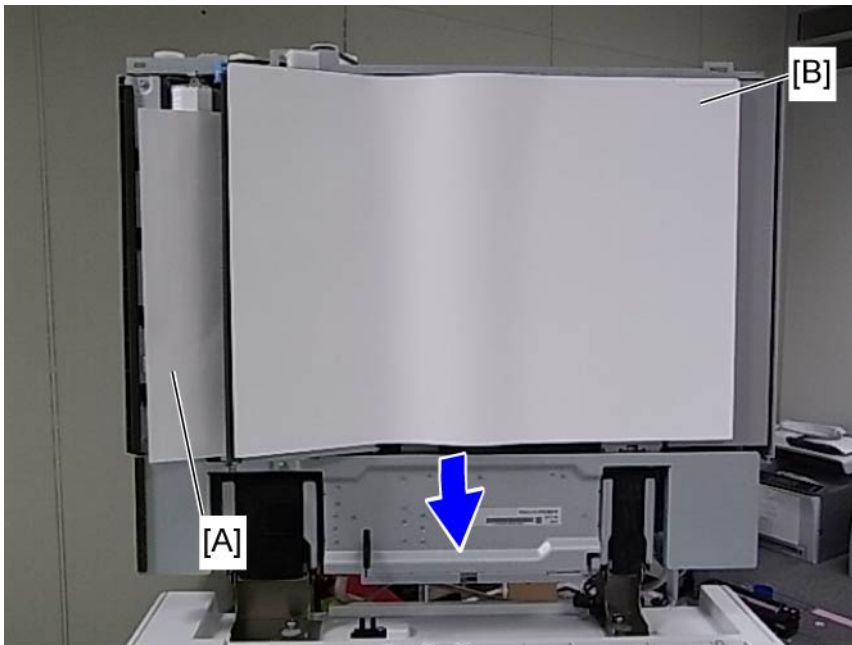

d1440034

13. Insert a sheet of paper [A] between the exposure glass surface and the white roller, to protect the white roller.

14. Close the ADF [B].

**Note**


- Steps 11 to 14 should be executed before pulling out the CIS unit. Otherwise, the white roller may be damaged.



15. CIS unit [A] (  x 2 )

- Pull out the CIS unit carefully to avoid scratching the glass and damaging the white roller.

### When reinstalling the CIS Unit

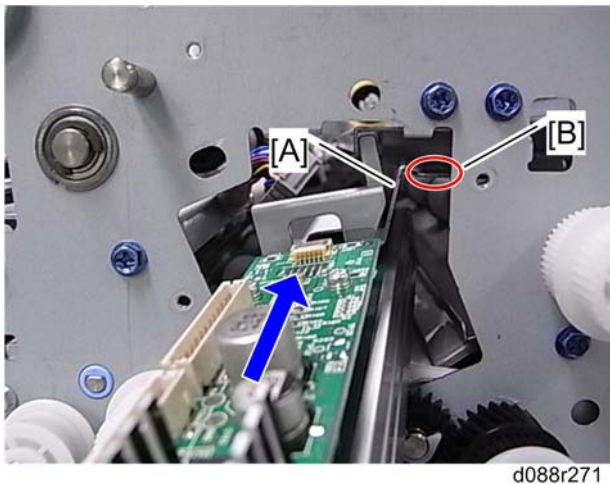


Align the arm [A] of the CIS unit on the rail [B] of the ADF unit, and then push the CIS unit slowly.

- Push the CIS unit carefully to avoid scratching the glass and damaging the white roller.
- Execute steps 11 to 14 described above before pushing the CIS unit into ADF unit.

## Original Exit Sensor


1. CIS unit (🔗 p.368)

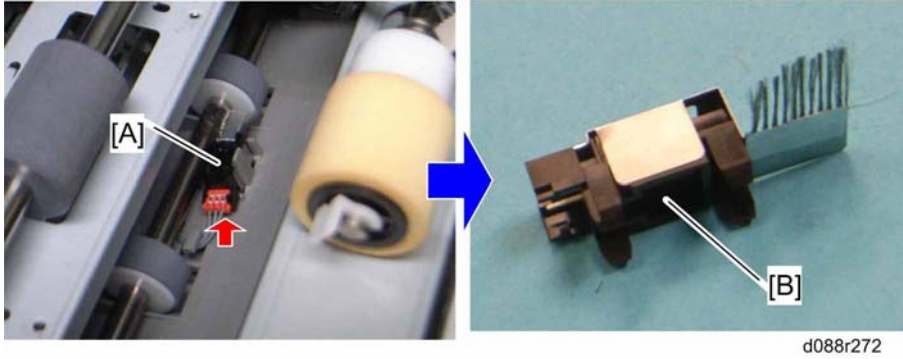

2. Original exit sensor with the discharge bracket [A] (hook, 🔧 x 1)
3. Original exit sensor [B]

## ADF Fan

1. ADF rear cover (🔗 p.344)
2. Original feed motor (🔗 p.363)

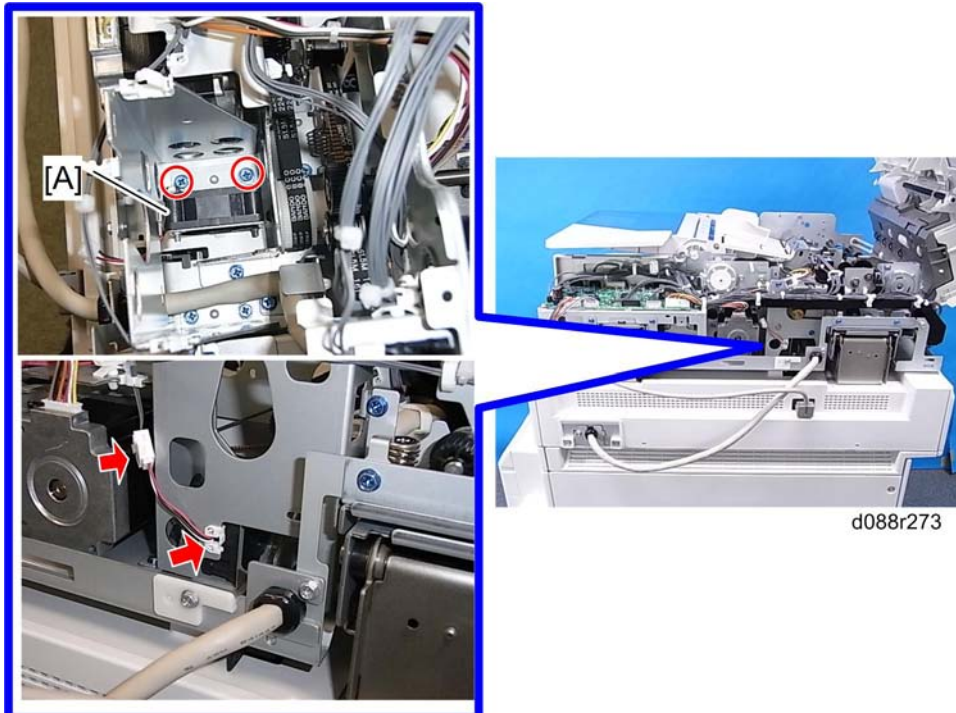



# Using Dip Switches

---

## Controller Board

---

DIP SW No.	OFF	ON
1	Boot-up from Flash Memory	Boot-up from SD card
2 to 8	Factory Use Only: Do not change the switch settings.	

4

---

## BCU Board

---

DIP SW No.	OFF	ON
1 and 2	Factory Use Only: Do not change the switch settings.	

 


# 5. System Maintenance

---

## Service Program Mode

### CAUTION

- Make sure that the data-in LED () is not on before you go into the SP mode. This LED indicates that some data is coming to the machine. When the LED is on, wait for the copier to process the data.

---

### SP Tables

---

See "Appendices" for the following information:

- System SP Tables
- Printer SP Tables
- Scanner SP Tables

5

---

### Enabling and Disabling Service Program Mode

---

#### Note

- The Service Program Mode is for use by service representatives only. If this mode is used by anyone other than service representatives for any reason, data might be deleted or settings might be changed. In such case, product quality cannot be guaranteed any more.

---

### Entering SP Mode

---

For details, ask your supervisor.

---

### Exiting SP Mode

---

- Press "Exit" on the LCD twice to return to the copy window.

---

### Types of SP Modes

---

- System SP: SP modes related to the engine functions
- Printer SP: SP modes related to the controller functions
- Scanner SP: SP modes related to the scanner functions

- Fax SP: SP modes related to the fax functions


Select one of the Service Program modes (System, Printer, Scanner, or Fax) from the touch panel as shown in the diagram below after you access the SP mode. This section explains the functions of the System/Printer/Scanner SP modes. Refer to the Fax service manual for the Fax SP modes.





5

### SP Mode Button Summary

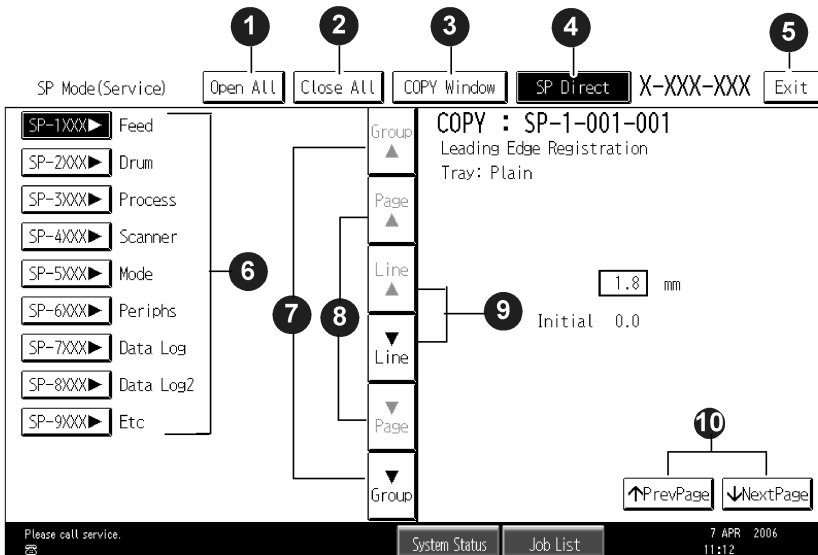
Here is a short summary of the touch-panel buttons.



1	Opens all SP groups and sublevels.
2	Closes all open groups and sublevels and restores the initial SP mode display.

3	Opens the copy window (copy mode) so you can make test copies. Press SP Mode (highlighted) in the copy window to return to the SP mode screen,
4	Enter the SP code directly with the number keys if you know the SP number. Then press  . (The required SP Mode number will be highlighted when pressing  . If not, just press the required SP Mode number.)
5	Press two times to leave the SP mode and return to the copy window to resume normal operation.
6	Press any Class 1 number to open a list of Class 2 SP modes.
7	Press to scroll the show to the previous or next group.
8	Press to scroll to the previous or next display in segments the size of the screen display (page).
9	Press to scroll the show the previous or next line (line by line).
10	Press to move the highlight on the left to the previous or next selection in the list.


## Switching Between SP Mode and Copy Mode for Test Printing

1. In the SP mode, select the test print. Then press "Copy Window".
2. Use the copy window (copier mode), to select the appropriate settings (paper size, etc.) for the test print.
3. Press Start  to start the test print.
4. Press SP Mode (highlighted) to return to the SP mode screen and repeat from step 1.

## Selecting the Program Number

Program numbers have two or three levels.

1. Refer to the Service Tables to find the SP that you want to adjust before you begin.
2. Press the Group number on the left side SP Mode window that contains the SP that you want to adjust.
3. Use the scrolling buttons in the center of the SP mode window to show the SP number that you want to open. Then press that number to expand the list.
4. Use the center touch-panel buttons to scroll to the number and title of the item that you want to set and press it. The small entry box on the right activates and shows the below default or the current settings.

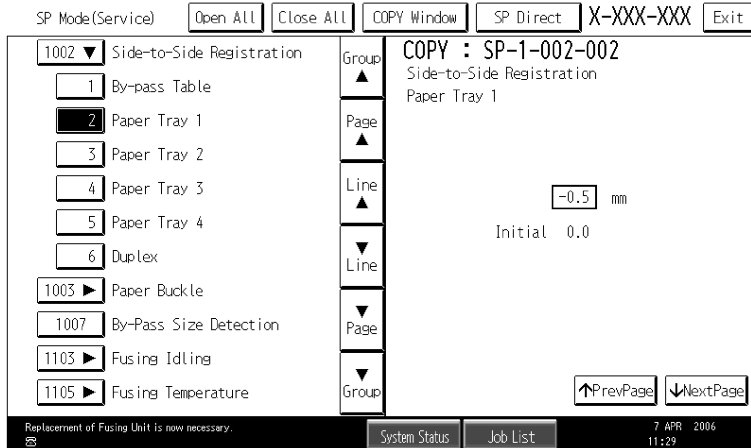

### Note

- Refer to the Service Tables for the range of allowed settings.
5. Do this procedure to enter a setting:
    - Press  $\oplus$  to toggle between plus and minus and use the keypad to enter the appropriate number. The number you enter writes over the previous setting.
    - Press  $\#$  to enter the setting. (The value is not registered if you enter a number that is out of range.)
    - Press "Yes" when you are prompted to complete the selection.
  6. If you need to perform a test print, press Copy Window to open the copy window and select the settings for the test print. Press Start  $\odot$  and then press SP Mode (highlighted) in the copy window to return to the SP mode display.
  7. Press Exit two times to return to the copy window when you are finished.

## Exiting Service Mode

Press the Exit key on the touch-panel.

## Service Mode Lock/Unlock

At locations where the machine contains sensitive data, the customer engineer cannot operate the machine until the Administrator turns the service mode lock off. This function makes sure that work on the machine is always done with the permission of the Administrator.

1. If you cannot go into the SP mode, ask the Administrator to log in with the User Tool and then set "Service Mode Lock" to OFF after he or she logs in:

User Tools > System Settings > Administrator Tools > Service Mode Lock > OFF

- This unlocks the machine and lets you get access to all the SP codes.

- The CE can service the machine and turn the machine off and on. It is not necessary to ask the Administrator to log in again each time the machine is turned on.
2. Go into the SP mode and set SP5169 to "1" if you must use the printer bit switches.
  3. After machine servicing is completed:
    - Change SP5169 from "1" to "0".
    - Turn the machine off and on. Tell the administrator that you have completed servicing the machine.
    - The Administrator will then set the "Service Mode Lock" to ON.

---

## Remarks

---

### Display on the Control Panel Screen

The maximum number of characters which can show on the control panel screen is limited to 30 characters. For this reason, some of the SP modes shown on the screen need to be abbreviated. The following are abbreviations used for the SP modes for which the full description is over 20 characters.

#### Paper Weight

Thin paper: 52-59 g/m<sup>2</sup>, 13.9-15.7lb.

Plain Paper: 60-81 g/m<sup>2</sup>, 16-21.6lb.

Middle Thick: 82-105 g/m<sup>2</sup>, 21.9-28lb.

Thick Paper 1: 106-169 g/m<sup>2</sup>, 28.5-44.9lb.

Thick Paper 2: 170-220 g/m<sup>2</sup>, 45-58lb.

Thick Paper 3: 221-256 g/m<sup>2</sup>, 59-68lb

Thick 4: 257 g/m<sup>2</sup>-300 g/m<sup>2</sup>, 68.4-79.8lb

#### Paper Type

N: Normal paper

MTH: Middle thick paper

TH: Thick paper

#### Paper Feed Station

P: Paper tray

B: By-pass table

<p><b>Color Mode [Color]</b></p> <p>[K]: Black in B&amp;W mode</p> <p>[Y], [M], or [C]: Yellow, Magenta, or Cyan in Full Color mode</p> <p>[YMC]: Only for Yellow, Magenta, and Cyan</p> <p>[FC]: Full Color mode</p> <p>[FC, K], [FC, Y], [FC, M], or [FC, C]: Black, Yellow, Magenta, or Cyan in full color mode</p>	
<p><b>Print Mode</b></p> <p>S: Simplex</p> <p>D: Duplex</p>	<p><b>Process Speed</b></p> <p>L: Low speed (77 mm/s)</p> <p>M: Middle speed (154 mm/s)</p> <p>H: High speed (C3d: 230, C3c: 205 mm/s)</p>

## 5

## Others

The following symbols are used in the SP mode tables.

**FA:** Factory setting

(Data may be adjusted from the default setting at the factory. Refer to the factory setting sheets enclosed. You can find it under the jammed paper removal decal.)

**DFU:** Design/Factory Use only

Do not touch these SP modes in the field.

A sharp (#) to the right hand side of the mode number column means that the main switch must be turned off and on to effect the setting change.

An asterisk (\*) to the right hand side of the mode number column means that this mode is stored in the NVRAM. If you do a RAM clear, this SP mode will be reset to the default value. "ENG" and "CTL" show which NVRAM contains the data.

- ENG: NVRAM on the BCU board
- CTL: NVRAM on the controller board

The settings of each SP mode are explained in the right-hand column of the SP table in the following way.

[Adjustable range / **Default setting** / Step] Alphanumeric

### ↓ Note

- If "Alphanumeric" is written to the right of the bracket as shown above, the setting of the SP mode shows on the screen using alphanumeric characters instead of only numbers. However, the settings in the bracket in the SP mode table are explained by using only the numbers.

**SSP:** This denotes a "Special Service Program" mode setting.

# Main SP Tables-1

## SP1-XXX (Feed)

1001	[Leading Edge Registration] Leading Edge Registration Adjustment (Tray Location, Paper Type, Color Mode), Paper Type → Thin, Plain, Thick 1, Thick 2 or Thick 3		
	Adjusts the leading edge registration by changing the registration motor operation timing for each mode.		
002	Tray: Plain	*ENG	[-9 to 9 / 0.0 / 0.1 mm/step]
003	Tray: Middle Thick	*ENG	
004	Tray: Thick 1	*ENG	
005	Tray: Thick 2	*ENG	
007	By-pass: Plain	*ENG	
008	By-pass: Middle Thick	*ENG	
009	By-pass: Thick 1	*ENG	
010	By-pass: Thick 2	*ENG	
011	By-pass: Thick 3	*ENG	
013	Duplex: Plain	*ENG	
014	Duplex: Middle Thick	*ENG	
015	Duplex: Thick 1	*ENG	

016	Tray: Thick 3	*ENG	[-9 to 9 / 0.0 / 0.1 mm/step]
017	Tray: Plain:1200	*ENG	
018	Tray: Middle Thick:1200	*ENG	
019	Tray: Thick 1:1200	*ENG	
020	By-pass: Plain:1200	*ENG	
021	By-pass: Middle Thick:1200	*ENG	
022	By-pass: Thick 1:1200	*ENG	
023	Duplex: Plain:1200	*ENG	
024	Duplex: Middle Thick:1200	*ENG	
025	Duplex: Thick 1:1200	*ENG	
026	Tray: Thin	*ENG	
027	By-pass: Thin	*ENG	
028	Duplex: Thin	*ENG	
029	Tray: Thin: 1200	*ENG	
030	By-pass: Thin: 1200	*ENG	
031	Duplex: Thin: 1200	*ENG	

1002	[Side to Side Registration] Side-to-Side Registration Adjustment
	Adjusts the side-to-side registration by changing the laser main scan start position for each mode.



001	By-pass Table	*ENG	[-4 to 4 / 0.0 / 0.1 mm/step]
002	Paper Tray 1	*ENG	
003	Paper Tray 2	*ENG	
004	Paper Tray 3	*ENG	
005	Paper Tray 4	*ENG	
006	Duplex	*ENG	
007	Paper Tray 5	*ENG	
008	Large Capacity Tray	*ENG	

1003	[Paper Buckle] Paper Buckle Adjustment (Tray Location, Paper Type, Color mode), Paper Type → Plain, Thick, Thick 1		
	Adjusts the amount of paper buckle at the registration roller by changing the paper feed timing.		
002	Paper Tray 1: Plain	*ENG	[-9 to 5 / -2 / 1 mm/step]
003	Tray 1: Middle Thick	*ENG	[-9 to 5 / -1 / 1 mm/step]
004	Paper Tray 1: Thick 1	*ENG	[-9 to 5 / -2 / 1 mm/step]
007	Paper Tray 2/3/4/5/LCT: Plain	*ENG	
008	Tray 2/3/4/5/LCT: Middle Thick	*ENG	[-9 to 5 / -1 / 1 mm/step]
009	Paper Tray 2/3/4/5/LCT: Thick 1	*ENG	[-9 to 5 / -2 / 1 mm/step]
012	By-pass: Plain	*ENG	[-9 to 5 / -1 / 1 mm/step]
013	By-pass: Middle Thick	*ENG	
014	By-pass: Thick 1	*ENG	[-9 to 5 / -2 / 1 mm/step]
018	Duplex: Plain	*ENG	[-9 to 5 / -1 / 1 mm/step]
019	Duplex: Middle Thick	*ENG	
020	Duplex: Thick 1	*ENG	[-9 to 5 / -2 / 1 mm/step]

021	Paper Tray 1: Plain:1200	*ENG	[-9 to 5 / 0 / 1 mm/step]
022	Tray 1: Middle Thick:1200	*ENG	
023	Tray 2/3/4/5/LCT: Plain:1200	*ENG	
024	Tray 2/3/4/5/LCT: Mid:1200	*ENG	
025	By-pass: Plain:1200	*ENG	
026	By-pass: Middle Thick:1200	*ENG	
027	Paper Tray 1: Thick 1:1200	*ENG	[-9 to 5 / -2 / 1 mm/step]
028	Paper Tray 2/3/4/5/LCT: Thick 1:1200	*ENG	
029	By-pass: Thick 1:1200	*ENG	
030	Duplex: Plain: 1200	*ENG	[-9 to 5 / 0 / 1 mm/step]
031	Duplex: Middle Thick: 1200	*ENG	
032	Duplex: Thick 1: 1200	*ENG	[-9 to 5 / -2 / 1 mm/step]

1007	[By-Pass Size Detection] By-Pass Size Detection Display		
001	LG	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON
	Enables or disables the automatic paper size detection function of the by-pass tray. This SP determines what paper size the machine detects if the detected size is less than 8.5". 0: OFF (Letter/SEF), 1: ON (Legal/SEF)		

110	[Reload Permit Setting]		
1	Specifies the settings of the reload permit for cold temperature in color mode.		
001	Pre-rotation Start Temp.	*ENG G	[-50 to 200 / -50 / 1 deg/step]
002	Reload Target Temp.:Center	*ENG G	[0 to 180 / C3c:158, C3d:161 / 1 deg/step]
003	Reload Target Temp.:Press	*ENG G	[0 to 200 / C3c: 150, C3d: 148 / 1 deg/step]

004	Temp.:Delta:Cold:Center	*EN G	[0 to 200 / 5 / 1 deg/step]
005	Temp.:Delta:Cold:End	*EN G	[0 to 200 / 5 / 1 deg/step]
006	Temp.:Delta:Cold:Press	*EN G	[0 to 200 / C3c: 40, C3d: 26 / 1 deg/step]
[Reload Permit Setting] Specifies the setting of the forced reload permit for cold temperature in color mode.			
007	Forced Reload Time:Cold	*EN G	[0 to 100 / C3c: 14, C3d: 20 / 1 sec/step]
[Reload Permit Setting] Specifies the settings of the reload permit for warm temperature in color mode.			
008	Temp.:Delta:Warm:Center	*EN G	[0 to 200 / 5 / 1 deg/step]
009	Temp.:Delta:Warm:End	*EN G	[0 to 200 / 5 / 1 deg/step]
010	Temp.:Delta:Warm:Press	*EN G	[0 to 200 / C3c: 40, C3d: 26 / 1 deg/step]
[Reload Permit Setting] Specifies the setting of the forced reload permit for warm temperature in color mode.			
011	Forced Reload Time:Warm	*EN G	[0 to 100 / C3c: 14, C3d: 20 / 1 sec/step]
[Reload Permit Setting] Specifies the settings of the reload permit for hot temperature in color mode.			
012	Temp.:Delta:Hot:Center	*EN G	[0 to 200 / 5 / 1 deg/step]
013	Temp.:Delta:Hot:End	*EN G	[0 to 200 / 5 / 1 deg/step]
014	Temp.:Delta:Hot:Press	*EN G	[0 to 200 / C3c: 40, C3d: 26 / 1 deg/step]

	[Reload Permit Setting] Specifies the setting of the forced reload permit for hot temperature in color mode.		
015	Forced Reload Time:Hot	*EN G	[0 to 100 / <b>C3c: 14, C3d: 20</b> / 1 sec/ step]
	[Reload Permit Setting] Specifies the settings of the reload permit for cold temperature in BW mode.		
016	Temp.:Delta:Cold:BW:Center	*EN G	[0 to 200 / <b>5</b> / 1 deg/step]
017	Temp.:Delta:Cold:BW:End	*EN G	[0 to 200 / <b>5</b> / 1 deg/step]
018	Temp.Delta:Cold:BW:Press	*EN G	[0 to 200 / <b>C3c: 40, C3d: 26</b> / 1 deg/ step]
	[Reload Permit Setting] Specifies the setting of the forced reload permit for cold temperature in BW mode.		
019	Forced Reload Time:Cold:BW	*EN G	[0 to 100 / <b>C3c: 14, C3d: 20</b> / 1 sec/ step]
	[Reload Permit Setting] Specifies the settings of the reload permit for cold temperature in BW mode 2.		
020	Temp.:Delta:Cold:BW2:Center	*EN G	[0 to 200 / <b>C3c: 10, C3d: 5</b> / 1 deg/ step]
021	Temp.:Delta:Cold:BW2:End	*EN G	[40 to 200 / <b>100</b> / 1 deg/step]
022	Temp.Delta:Cold:BW2:Press	*EN G	[0 to 200 / <b>C3c: 70, C3d: 50</b> / 1 deg/ step]
	[Forced Ready Set] Specifies the setting of the forced reload permit for cold temperature in BW mode 2.		
023	Time:Cold:BW2	*EN G	[0 to 100 / <b>C3c: 20, C3d: 34</b> / 1 sec/ step]
	[Reload Permit Setting] Enables or disables the Flicker Control.		

030	Flicker Control	*EN G	[0 to 1 / 0 / 1] <b>0: Disable</b> 1: Enable
[Reload Permit Setting] Specifies the settings of the reload permit for target temperature in BW mode 2.			
101	Reload Target Temp.:Center:BW2	*EN G	[0 to 180 / <b>C3c: 135(NA), 130(Others), C3d: 140(NA), 135(Others)</b> / 1 deg/step]
102	Reload Target Temp.:Press:BW2	*EN G	[0 to 200 / <b>120</b> / 1 deg/step]
[Reload Permit Setting] Specifies the settings of the reload permit for cold temperature in BW mode 2.			
103	Temp.:Delta:Cold:BW2:Center	*EN G	[0 to 200 / <b>5</b> / 1 deg/step]
104	Temp.:Delta:Cold:BW2:End	*EN G	[0 to 200 / <b>5</b> / 1 deg/step]
105	Temp.:Delta:Cold:BW2:Press	*EN G	[0 to 200 / <b>100</b> / 1 deg/step]
[Reload Permit Setting] Specifies the setting of the forced reload permit for cold temperature in BW mode 2.			
106	Forced Reload Time:Cold:BW2	*EN G	[0 to 100 / <b>C3c: 14, C3d: 20</b> / 1 sec/step]
[Reload Permit Setting] Specifies the settings of the reload permit for low temperature.			
151	Temp.:Delta:Low Temp.:Center	*EN G	[0 to 200 / <b>5</b> / 1 deg/step]
152	Temp.:Delta:Low Temp.:End	*EN G	[0 to 200 / <b>5</b> / 1 deg/step]
153	Temp.:Delta:Low Temp.:Press	*EN G	[0 to 200 / <b>C3c: 40, C3d: 33</b> / 1 deg/step]

	[Reload Permit Setting] Specifies the setting of the forced reload permit for low temperature.		
154	Forced Reload Time:Low Temp.	*EN G	[0 to 100 / <b>60</b> / 1 sec/step]
	[Reload Permit Setting] Specifies the settings of the reload permit for cold temperature.		
201	Temp.:Delta:Cold:Center:FIN-less/ADF-less	*EN G	[0 to 200 / <b>5</b> / 1 deg/step]
202	Temp.:Delta:Cold:End:FIN-less/ADF-less	*EN G	[0 to 200 / <b>5</b> / 1 deg/step]
203	Temp.:Delta:Cold:Press:FIN-less/ADF-less	*EN G	[0 to 200 / <b>C3c: 67, C3d: 36</b> / 1 deg/step]
	[Reload Permit Setting] Specifies the setting of the forced reload permit for cold temperature.		
204	Forced Reload Time:Cold:FIN-less/ADF-less	*EN G	[0 to 100 / <b>C3c: 14, C3d: 20</b> / 1 sec/step]

1102	[Feed Permit Setting]		
	Specified the settings of the paper feeding timing.		
001	Temp.:Lower Delta:Center	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
002	Temp.:Lower Delta:End	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
003	Temp.:Upper Delta:Center	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
004	Temp.:Upper Delta:End	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
005	Temp.:Lower Delta:Press	*ENG	[0 to 200 / <b>100</b> / 1 deg/step]
006	Rotation Time	*ENG	[0 to 100 / <b>0</b> / 1 sec/step]
007	Temp.:Lower Delta:Center:Sp.1	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
008	Temp.:Lower Delta:End:Sp.1	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
009	Temp.:Upper Delta:Center:Sp.1	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]

010	Temp.:Upper Delta:End:Sp.1	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
011	Temp.:Lower Delta:Press:Sp.1	*ENG	[0 to 200 / <b>15</b> / 1 deg/step]
012	Rotation Time:Sp.1	*ENG	[0 to 200 / <b>0</b> / 1 sec/step]
013	Temp.:Lower Delta:Center:Sp.2	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
014	Temp.:Lower Delta:End:Sp.2	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
015	Temp.:Upper Delta:Center:Sp.2	*ENG	[0 to 200 / <b>15</b> / 1 deg/step]
016	Temp.:Upper Delta:End:Sp.2	*ENG	[0 to 200 / <b>15</b> / 1 deg/step]
017	Temp.:Lower Delta:Press:Sp.2	*ENG	[0 to 200 / <b>100</b> / 1 deg/step]
018	Rotation Time:Sp2	*ENG	[0 to 100 / <b>0</b> / 1 sec/step]
019	Feed Permit Time	*ENG	[0 to 200 / <b>60</b> / 1 sec/step]

1105	[Print Target Temp]		
	(Printing Mode, Roller Type, [Color], Simplex/Duplex) Roller Type → Center and Ends: Heating roller, Pressure → Pressure roller Paper Type → Plain, Thin, Thick, OHP, Middle Thick, Special, Postcard		
001	Plain1:FC:Center	*ENG	[100 to 180 / <b>C3c: 153, C3d: 156</b> / 1 deg/step]
	Specifies the heating roller target temperature for the ready condition in full color printing.		
002	Plain1:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
	Specifies the pressure roller target temperature for the ready condition in full color printing..		
003	Plain1:BW:Center	*ENG	[100 to 180 / <b>C3c: 153, C3d: 156</b> / 1 deg/step]
	Specifies the heating roller target temperature for the ready condition in BW printing.		

004	Plain1:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
	Specifies the pressure roller target temperature for the ready condition in BW printing.		
005	Plain2:FC:Center	*ENG	[100 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]
	Specifies the heating roller target temperature for the ready condition in full color printing.		
006	Plain2:FC:Press	*ENG	[0 to 200 / <b>C3c:120, C3d:145</b> / 1 deg/step]
	Specifies the pressure roller target temperature for the ready condition in full color printing.		
007	Plain2:BW:Center	*ENG	[100 to 180 / <b>C3c: 152, C3d: 155</b> / 1 deg/step]
	Specifies the heating roller target temperature for the ready condition in BW printing.		
008	Plain2:BW:Press	*ENG	[0 to 200 / <b>C3c:120,C3d:139</b> / 1 deg/step]
	Specifies the pressure roller target temperature for the ready condition in BW printing.		
009	Thin:FC:Center	*ENG	[100 to 180 / <b>C3c: 148, C3d: 151</b> / 1 deg/step]
010	Thin:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
011	Thin:BW:Center	*ENG	[100 to 180 / <b>C3c: 148, C3d: 151</b> / 1 deg/step]
012	Thin:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
013	M-thick:FC:Center	*ENG	[100 to 180 / <b>C3c: 163, C3d: 166</b> / 1 deg/step]
014	M-thick:FC:Press	*ENG	[0 to 200 / <b>C3c: 120, C3d: 150</b> / 1 deg/step]
015	M-thick:BW:Center	*ENG	[100 to 180 / <b>C3c: 163, C3d: 166</b> / 1 deg/step]
016	M-thick:BW:Press	*ENG	[0 to 200 / <b>C3c: 120, C3d: 150</b> / 1 deg/step]
017	Thick1:FC:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
018	Thick1:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]



019	Thick1:BW:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
020	Thick1:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
021	Thick2:FC:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
022	Thick2:FC:Press	*ENG	[100 to 200 / <b>120</b> / 1 deg/step]
023	Thick2:BW:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
024	Thick2:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
025	Thick3:FC:Center	*ENG	[100 to 180 / <b>163</b> / 1 deg/step]
026	Thick3:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
027	Thick3:BW:Center	*ENG	[100 to 180 / <b>163</b> / 1 deg/step]
028	Thick3:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
029	Special1:FC:Center	*ENG	[100 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]
030	Special1:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
031	Special1:BW:Center	*ENG	[100 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]
032	Special1:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
033	Special2:FC:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
034	Special2:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
035	Special2:BW:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
036	Special2:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
037	Special3:FC:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
038	Special3:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
039	Special3:BW:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
040	Special3:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
041	Envelop:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
042	Envelop:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]

101	Plain1:FC:Center:Low Speed	*ENG	[100 to 180 / <b>133</b> / 1 deg/step]
102	Plain1:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
103	Plain1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>133</b> / 1 deg/step]
104	Plain1:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
105	Plain2:FC:Center:Low Speed	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
106	Plain2:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
107	Plain2:BW:Center:Low Speed	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
108	Plain2:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
109	M-thick:FC:Center:Low Speed	*ENG	[100 to 180 / <b>143</b> / 1 deg/step]
110	M-thick:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
111	M-thick:BW:Center:Low Speed	*ENG	[100 to 180 / <b>143</b> / 1 deg/step]
112	M-thick:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
113	Thick1:FC:Center:Low Speed	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
114	Thick1:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
115	Thick1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
116	Thick1:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
117	Special1:FC:Center:Low Speed	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
118	Special1:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
119	Special1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
120	Special1:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]

121	Special2:FC:Center:Low Speed	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
122	Special2:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
123	Special2:BW:Center:Low Speed	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
124	Special2:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
125	Plain1:Glossy:Center	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
126	Plain1:Glossy:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
127	Plain2:Glossy:Center	*ENG	[100 to 180 / <b>143</b> / 1 deg/step]
128	Plain2:Glossy:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
129	M-thick:Glossy:Center	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
130	M-thick:Glossy:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
131	OHP:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
132	OHP:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
133	Envelop:Center:Low Speed	*ENG	[100 to 180 / <b>163</b> / 1 deg/step]
134	Envelop:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
135	Thin:FC:Center:Low Speed	*ENG	[100 to 180 / <b>128</b> / 1 deg/step]
136	Thin:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
137	Thin:BW:Center:Low Speed	*ENG	[100 to 180 / <b>128</b> / 1 deg/step]
138	Thin:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
139	Thick4:FC:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
140	Thick4:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
141	Thick4:BW:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
142	Thick4:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
143	Postcard:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]

144	Postcard:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
-----	----------------	------	--------------------------------------

1106	[Fusing Temp. Display]		
001	Heat: Center	-	[-10 to 250 / - / 1 deg/step]
002	Heat: End	-	Displays the temperature of the heating roller.
003	Press: Center	-	[-10 to 250 / - / 1 deg/step]
004	Press: End	-	Displays the temperature of the pressure roller.

1107	[Standby Target Temp. Setting]		
001	Standby/Preheat1:Center	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the ready or energy save 1 mode.		
002	Stanby/Preheat1: Press	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the ready or energy save 1 mode.		
003	Preheat2:Center	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the energy save 2 mode.		
004	Preheat2:Press	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the energy save 2 mode.		
005	Low Power :Center	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the low power mode.		
006	Low Power:Press	*ENG	[0 to 125 / <b>60</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the low power mode.		
007	Print Ready:Center	*ENG	[0 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]
	Specifies the temperature of the heating roller for the print ready condition.		
008	Print Ready:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the print ready condition.		

011	Standby Heater Off Time	*ENG	[0 to 100 / 15 / 1 sec/step]
	Specifies the time that the fusing heater turns off after the fusing unit temperature has reached its target temperature.		
1108	[After Reload/Job Target Temp.]		
001	Center	*ENG	[0 to 180 / C3c: 158, C3d: 161 / 1 deg/step]
	Specifies the temperature of the heating roller after re-load or job.		
002	Press	*ENG	[0 to 200 / 120 / 1 deg/step]
	Specifies the temperature of the pressure roller after re-load or job.		
011	Center:BW2	*ENG	[0 to 180 / C3c: 135(NA), 130(Other), C3d: 140(NA), 135(Other) / 1 deg/step]
	Specifies the temperature of the pressure roller after re-load or job in BW mode 2.		
012	Press:BW2	*ENG	[0 to 200 / 120 / 1 deg/step]
	Specifies the temperature of the pressure roller after re-load or job in BW mode 2.		
1111	[Environment Correction:Fusing]		
001	Temp.: Threshold: Low	*ENG	[0 to 100 / 17 / 1 deg/step]
	Specifies the threshold temperature for low temperature. If the fusing temperature is 17°C or less, the machine executes the fusing mode for low temperature.		
002	Temp.: Threshold: High	*ENG	[0 to 100 / 30 / 1 deg/step]
	Specifies the threshold temperature for high temperature. If the fusing temperature is 30°C or more, the machine executes the fusing mode for high temperature.		
003	Low Temp. Correction	*ENG	[0 to 15 / 5 / 1 deg/step]
	Specifies the additional temperature for the target temperature. If the fusing temperature is in low temperature condition, this temperature is added to the target temperature.		
004	High Temp. Correction	*ENG	[0 to 15 / 0 / 1 deg/step]
	Specifies the additional temperature for the target temperature. If the fusing temperature is in high temperature condition, this temperature is added to the target temperature.		

005	Job Low Temp. Correction	*ENG	[0 to 100 / <b>5</b> / 0.1 deg/step]
006	Job High Temp. Correction	*ENG	[0 to 100 / <b>0</b> / 0.1 deg/step]
007	Job Low Temp. Correction:Sp.	*ENG	[0 to 100 / <b>10</b> / 0.1 deg/step]
008	Job High Temp. Correction:Sp.	*ENG	[0 to 100 / <b>0</b> / 0.1 deg/step]
011	Standard Environment Temp.	*ENG	[10 to 30 / <b>23</b> / 1 deg/step]

1113	[Curl Correction]		
001	Execute Pattern	*ENG	[0 to 2 / <b>0</b> / 1 /step] 0: Off, 1: On (No Decurl), 2: On
	Selects the curl correction type.		
002	Humidity:Threshold:M-humid	*ENG	[0 to 100 / <b>1</b> / 1 %/step]
	Specifies the threshold between low and middle humidity.		
003	Humidity:Threshold:H-humid	*ENG	[0 to 100 / <b>65</b> / 1 %/step]
	Specifies the threshold between middle and high humidity.		
004	Permit Temp.:Delta:Press:M-humid	*ENG	[0 to 200 / <b>40</b> / 1 deg/step]
	Specifies the threshold temperature for the curl control in middle humidity.		
005	Permit Temp.:Delta:Press:H-humid	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
	Specifies the threshold temperature for the curl control in high humidity.		
006	Permit Temp.:Delta:Press:M-humid:No Decurl	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
	Specifies the threshold temperature for the no curl control in middle humidity.		
007	Permit Temp.:Delta:Press:H-humid:No Decurl	*ENG	[0 to 200 / <b>20</b> / 1 deg/step]
	Specifies the threshold temperature for the no curl control in high humidity.		

008	CPM:M-humid	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the CPM ratio of the decurl control against to the normal operation in middle humidity.		
009	CPM:H-humid	*ENG	[0 to 100 / <b>65</b> / 1 %/step]
	Specifies the CPM ratio of the decurl control against to the normal operation in high humidity.		
010	CPM:M-humid:No Decurl	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the CPM ratio against of the no decurl control to the normal operation in middle humidity.		
011	CPM:H-humid:No Decurl	*ENG	[0 to 100 / <b>65</b> / 1 %/step]
	Specifies the CPM ratio against of the no decurl control to the normal operation in high humidity.		

1115	[Target Temp. Correction]		
001	Temp.:Delta:End	*ENG	[-100 to 100 / <b>0</b> / 1 deg/step]
	Specifies the different temperature between end and center of the heating roller.		

1124	[CPM Down Setting]		
	Specifies the settings for the CPM down mode.		
001	Low:Down Temp.	*ENG	[-50 to 0 / <b>-20</b> / 1 deg/step]
Specifies the CPM down threshold temperature for the low temperature condition. If the fusing temperature decreases -20°C (adjustable) below the target temperature, the machine enters the CPM down mode.			
002	Low:Up Temp.	*ENG	[-50 to 0 / <b>-15</b> / 1 deg/step]
Specifies the CPM up threshold temperature for the low temperature condition. If the fusing temperature increases -15°C (adjustable) below the target temperature, the machine enters the CPM up mode.			
003	Low :1st CPM	*ENG	[10 to 100 / <b>80</b> / 1 %/step]
Specifies the 1st CPM down ration against the normal CPM in the low temperature condition.			

004	Low :2nd CPM	*ENG	[10 to 100 / <b>65</b> / 1 %/step]
	Specifies the 2nd CPM down ration against the normal CPM in the low temperature condition.		
005	Low :3rd CPM	*ENG	[10 to 100 / <b>50</b> / 1 %/step]
	Specifies the 3rd CPM down ration against the normal CPM in the low temperature condition.		
006	High : 1st CPM	*ENG	[10 to 100 / <b>80</b> / 1 %/step]
	Specifies the 1st CPM down ration against the normal CPM in the high temperature condition.		
007	High:2nd CPM	*ENG	[10 to 100 / <b>50</b> / 1 %/step]
	Specifies the 3rd CPM down ration against the normal CPM in the high temperature condition.		
008	High:3rd CPM	*ENG	[10 to 100 / <b>30</b> / 1 %/step]
	Specifies the 1st CPM down ration against the normal CPM in the high temperature condition.		
009	High:1st CPM Down Temp.:A3:Press End	*ENG	[100 to 250 / <b>180</b> / 1 deg/step]
	Specifies the heating roller temperature for 1st CPM down of A3 paper size.		
010	High:2nd CPM Down Temp.:A3:Press End	*ENG	[100 to 250 / <b>185</b> / 1 deg/step]
	Specifies the heating roller temperature for 2nd CPM down of A3 paper size.		
011	High:3rd CPM Down Temp.:A3:Press End	*ENG	[100 to 250 / <b>190</b> / 1 deg/step]
	Specifies the heating roller temperature for 3rd CPM down of A3 paper size.		
012	High:1st CPM Down Temp.:DLT:Press End	*ENG	[100 to 250 / <b>180</b> / 1 deg/step]
	Specifies the heating roller temperature for 1st CPM down of DLT paper size.		
013	High:2nd CPM Down Temp.:DLT:Press End	*ENG	[100 to 250 / <b>185</b> / 1 deg/step]
	Specifies the heating roller temperature for 2nd CPM down of DLT paper size.		



014	High:3rd CPM Down Temp.:DLT:Press End	*ENG	[100 to 250 / <b>190</b> / 1 deg/step]
	Specifies the heating roller temperature for 3rd CPM down of DLT paper size.		
015	High:1st CPM Down Temp.:B4:Press End	*ENG	[100 to 250 / <b>145</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 paper size.		
016	High:2nd CPM Down Temp.:B4:Press End	*ENG	[100 to 250 / <b>155</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 paper size.		
017	High:3rd CPM Down Temp.:B4:Press End	*ENG	[100 to 250 / <b>160</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of B4 paper size.		
018	High:1st CPM Down Temp.:LT:Fuser End	*ENG	[100 to 250 / <b>190</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of LT paper size.		
019	High:2nd CPM Down Temp.:LT:Fuser End	*ENG	[100 to 250 / <b>195</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT paper size.		
020	High:3rd CPM Down Temp.:LT:Fuser End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT paper size.		
021	High:1st CPM Down Temp.:A4:Fuser End	*ENG	[100 to 250 / <b>190</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 paper size.		
022	High:2nd CPM Down Temp.:A4:Fuser End	*ENG	[100 to 250 / <b>195</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 paper size.		
023	High:3rd CPM Down Temp.:A4:Fuser End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 paper size.		

024	High:1st CPM Down Temp.:B5:Press End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 paper size.		
025	High :2nd CPM Down Temp.:B5:Press End	*ENG	[100 to 250 / <b>205</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 paper size.		
026	High :3rd CPM Down Temp.:B5:Press End	*ENG	[100 to 250 / <b>210</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 paper size.		
027	High :1std CPM Down Temp.:A5:Press End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
028	High :2nd CPM Down Temp.:A5:Press End	*ENG	[100 to 250 / <b>205</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		
029	High :3rd CPM Down Temp.:A5:Press End	*ENG	[100 to 250 / <b>210</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of A5 paper size.		
030	High :1st CPM Down Temp.:B6:Press End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
031	High :2nd CPM Down Temp.:B6:Press End	*ENG	[100 to 250 / <b>205</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
032	High :3rd CPM Down Temp.:B6:Press End	*ENG	[100 to 250 / <b>210</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
033	High :1st CPM:Down Temp.:A6:Press Center	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		

034	High :2nd CPM:Down Temp.:A6:Press Center	*ENG	[100 to 250 / <b>205</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
035	High :3rd CPM:Down Temp.:A6:Press Center	*ENG	[100 to 250 / <b>210</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of A6 paper size.		
051	Judging Interval	*ENG	[1 to 250 / <b>5</b> / 1 sec/step]
	Specifies the interval for CPM down judgment.		
101	High :1st CPM:Down Time:A3	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 paper size.		
102	High :2nd CPM:Down Time:A3	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 paper size.		
103	High :3rd CPM:Down Time:A3	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A3 paper size.		
104	High :1st CPM:Down Time:DLT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT.		
105	High :2nd CPM:Down Time:DLT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT.		
106	High :3rd CPM:Down Time:DLT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of DLT.		
107	High :1st CPM:Down Time:B4	*ENG	[0 to 10,000 / <b>C3c: 30, C3d: 20</b> / 1 sec/ step]
	Specifies the pressure roller temperature for 1st CPM down of B4 paper size.		

108	High :2nd CPM:Down Time:B4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 2nd CPM down of B4 paper size.			
109	High :3rd CPM:Down Time:B4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 3rd CPM down of B4 paper size.			
110	High :1st CPM:Down Time:LT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 1st CPM down of LT.			
111	High :2nd CPM:Down Time:LT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 2nd CPM down of LT.			
112	High :3rd CPM:Down Time:LT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 3rd CPM down of LT.			
113	High :1st CPM:Down Time:A4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 1st CPM down of A4 paper size.			
114	High :2nd CPM:Down Time:A4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 2nd CPM down of A4 paper size.			
115	High :3rd CPM:Down Time:A4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 3rd CPM down of A4 paper size.			
116	High :1st CPM:Down Time:B5	*ENG	[0 to 10,000 / <b>C3c: 30, C3d: 20</b> / 1 sec/step]
Specifies the pressure roller temperature for 1st CPM down of B5 paper size.			
117	High :2nd CPM:Down Time:B5	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 2nd CPM down of B5 paper size.			

118	High :3rd CPM:Down Time:B5	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 paper size.		
119	High :1st CPM:Down Time:A5	*ENG	[0 to 10,000 / <b>C3c: 40, C3d: 20</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
120	High :2nd CPM:Down Time:A5	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		
121	High :3rd CPM:Down Time:A5	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A5 paper size.		
122	High :1st CPM:Down Time:B6	*ENG	[0 to 10,000 / <b>C3c: 40, C3d: 20</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
123	High :2nd CPM:Down Time:B6	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
124	High :3rd CPM:Down Time:B6	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B6 paper size.		
125	High :1st CPM:Down Time:A6	*ENG	[0 to 10,000 / <b>C3c: 40, C3d: 20</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
126	High :2nd CPM:Down Time:A6	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
127	High :3rd CPM:Down Time:A6	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A6 paper size.		

151	High : 1st CPM:Down Time:A3:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 1st CPM down of A3 paper size.			
152	High : 2nd CPM:Down Time:A3:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 2nd CPM down of A3 paper size.			
153	High : 3rd CPM:Down Time:A3:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 3rd CPM down of A3 paper size.			
154	High : 1st CPM:Down Time:DLT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 1st CPM down of DLT.			
155	High : 2nd CPM:Down Time:DLT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 2nd CPM down of DLT.			
156	High : 3rd CPM:Down Time:DLT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 3rd CPM down of DLT.			
157	High : 1st CPM:Down Time:B4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 1st CPM down of B4 paper size.			
158	High : 2nd CPM:Down Time:B4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 2nd CPM down of B4 paper size.			
159	High : 3rd CPM:Down Time:B4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 3rd CPM down of B4 paper size.			
160	High : 1st CPM:Down Time:LT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
Specifies the pressure roller temperature for 1st CPM down of LT.			

161	High :2nd CPM:Down Time:LT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT.		
162	High :3rd CPM:Down Time:LT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT.		
163	High :1st CPM:Down Time:A4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 paper size.		
164	High :2nd CPM:Down Time:A4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 paper size.		
165	High :3rd CPM:Down Time:A4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 paper size.		
166	High :1st CPM:Down Time:B5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 paper size.		
167	High :2nd CPM:Down Time:B5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 paper size.		
168	High :3rd CPM:Down Time:B5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 paper size.		
169	High :1st CPM:Down Time:A5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
170	High :2nd CPM:Down Time:A5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		

171	High :3rd CPM:Down Time:A5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A5 paper size.		
172	High :1st CPM:Down Time:B6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
173	High :2nd CPM:Down Time:B6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
174	High :3rd CPM:Down Time:B6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B6 paper size.		
175	High :1st CPM:Down Time:A6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
176	High :2nd CPM:Down Time:A6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
177	High :3rd CPM:Down Time:A6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A6 paper size.		
1125	[CPM Down Setting]		
	Specifies the settings for the CPM down mode.		
001	High :1st CPM:A3:Large Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Large paper size.		
002	High :2nd CPM:A3:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 Large paper size.		



003	High :3rd CPM:A3:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A3 Large paper size.		
004	High :1st CPM:A3:Small Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Small paper size.		
005	High :2nd CPM:A3:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 Small paper size.		
006	High :3rd CPM:A3:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A3 Small paper size.		
007	High :1st CPM:DLT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Large paper size.		
008	High :2nd CPM:DLT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT Large paper size.		
009	High :3rd CPM:DLT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of DLT Large paper size.		
010	High :1st CPM:DLT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Small paper size.		
011	High :2nd CPM:DLT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT Small paper size.		
012	High :3rd CPM:DLT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of DLT Small paper size.		

013	High :1st CPM:B4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>C3c: 90, C3d: 75</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Large paper size.		
014	High :2nd CPM:B4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 Large paper size.		
015	High :3rd CPM:B4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B4 Large paper size.		
016	High :1st CPM:B4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>C3c: 90, C3d: 75</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Small paper size.		
017	High :2nd CPM:B4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 Small paper size.		
018	High :3rd CPM:B4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B4 Small paper size.		
019	High :1st CPM:LT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Large paper size.		
020	High :2nd CPM:LT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT Large paper size.		
021	High :3rd CPM:LT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT Large paper size.		
022	High :1st CPM:LT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Small paper size.		

023	High :2nd CPM:LT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT Small paper size.		
024	High :3rd CPM:LT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT Small paper size.		
025	High :1st CPM:A4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Large paper size.		
026	High :2nd CPM:A4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 Large paper size.		
027	High :3rd CPM:A4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 Large paper size.		
028	High :1st CPM:A4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Small paper size.		
029	High :2nd CPM:A4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 Small paper size.		
030	High :3rd CPM:A4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 Small paper size.		
031	High :1st CPM:B5:Large Size:Normal Speed	*ENG	[0 to 100 / <b>C3c:80, C3d: 70</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Large paper size.		
032	High :2nd CPM:B5:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 Large paper size.		

033	High :3rd CPM:B5:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 Large paper size.		
034	High :1st CPM:B5:Small Size:Normal Speed	*ENG	[0 to 100 / <b>C3c:80, C3d: 70</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Small paper size.		
035	High :2nd CPM:B5:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 Small paper size.		
036	High :3rd CPM:B5:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 Small paper size.		
037	High :1st CPM:A5:Normal Speed	*ENG	[0 to 100 / <b>C3c: 85, C3d: 65</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
038	High :2nd CPM:A5:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		
039	High :3rd CPM:A5:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A5 paper size.		
040	High :1st CPM:B6:Normal Speed	*ENG	[0 to 100 / <b>C3c: 85, C3d: 65</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
041	High :2nd CPM:B6:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
042	High :3rd CPM:B6:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B6 paper size.		

043	High : 1st CPM:A6:Normal Speed	*ENG	[0 to 100 / <b>C3c: 85, C3d: 65</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
044	High :2nd CPM:A6:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
045	High :3rd CPM:A6:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A6 paper size.		
101	High : 1st CPM:A3:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Large paper size.		
102	High :2nd CPM:A3:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 Large paper size.		
103	High : 1st CPM:A3:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Small paper size.		
104	High :2nd CPM:A3:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 Small paper size.		
107	High : 1st CPM:DLT:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Large paper size.		
108	High :2nd CPM:DLT:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT Large paper size.		
110	High : 1st CPM:DLT:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Small paper size.		

111	High :2nd CPM:DLT:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT Small paper size.		
113	High :1st CPM:B4:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Large paper size.		
114	High :2nd CPM:B4:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 Large paper size.		
116	High :1st CPM:B4:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Small paper size.		
117	High :2nd CPM:B4:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 Small paper size.		
119	High :1st CPM:LT:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Large paper size.		
120	High :2nd CPM:LT:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT Large paper size.		
122	High :1st CPM:LT:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Small paper size.		
123	High :2nd CPM:LT:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT Small paper size.		
125	High :1st CPM:A4:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Large paper size.		

126	High :2nd CPM:A4:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 Large paper size.		
128	High :1st CPM:A4:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Small paper size.		
129	High :2nd CPM:A4:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 Small paper size.		
131	High :1st CPM:B5:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Large paper size.		
132	High :2nd CPM:B5:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 Large paper size.		
134	High :1st CPM:B5:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Small paper size.		
135	High :2nd CPM:B5:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 Small paper size.		
137	High :1st CPM:A5:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
138	High :2nd CPM:A5:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		
140	High :1st CPM:B6:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		

141	High :2nd CPM:B6:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
143	High : 1st CPM:A6:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
144	High :2nd CPM:A6:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
201	High : 1st CPM:A3:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Large paper size.		
204	High : 1st CPM:A3:Small Size: Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Small paper size.		
207	High : 1st CPM:DLT:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Large paper size.		
210	High : 1st CPM:DLT:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Small paper size.		
213	High : 1st CPM:B4:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Large paper size.		
216	High : 1st CPM:B4:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Small paper size.		
219	High : 1st CPM:LT:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Large paper size.		



222	High : 1st CPM:LT:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Small paper size.		
225	High : 1st CPM:A4:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Large paper size.		
228	High : 1st CPM:A4:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Small paper size.		
231	High : 1st CPM:B5:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Large paper size.		
234	High : 1st CPM:B5:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Small paper size.		
237	High : 1st CPM:A5:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
240	High : 1st CPM:B6:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
243	High : 1st CPM:A6:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
1141	[Fusing SC Issue Time Info]		
001	SC Number	*ENG	Displays the issued SC number.
002	SC Cause	*ENG	[0 to 9 / - / 1/step]

101	Htg Roller:Ctr Det1	*ENG	Displays the temperature at the center of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
102	Htg Roller:End Det1	*ENG	Displays the temperature at the end of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
103	Press Roller:Ctr Det1	*ENG	Displays the temperature at the center of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
104	Press Roller:End Det1	*ENG	Displays the temperature at the end of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
151	Htg Roller:Ctr Det2	*ENG	Displays the temperature at the center of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
152	Htg Roller:End Det2	*ENG	Displays the temperature at the end of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
153	Press Roller:Ctr Det2	*ENG	Displays the temperature at the center of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
154	Press Roller:End Det2	*ENG	Displays the temperature at the end of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]

201	Htg Roller:Ctr Det3	*ENG	Displays the temperature at the center of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
202	Htg Rolloer:End Det3	*ENG	Displays the temperature at the end of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
203	Press Roller:Ctr Det3	*ENG	Displays the temperature at the center of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
204	Press Roller:End Det3	*ENG	Displays the temperature at the end of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]

1142	[Fusing Jam Detection]		
001	SC Display	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON
	Enables or disables the fusing consecutive jam (three times) SC detection.		

1143	[Fusing Shutter Detection]		
001	SC Display	*ENG	-
	-		

1151	[Pressure Setting]		
001	Pressure Change ON/OFF	*ENG	[0 or 1 / 1 / -]
	Enables or disables the pressure switching control for the fusing unit. 0: OFF , 1: ON		
002	Pressure Position 1	*ENG	[0 to 10,000 / 490 / 10 msec/step]
	Specifies the rotation time of the pressure roller contact motor for the pressure position 1.		

003	Pressure Position2	*ENG	[0 to 10,000 / <b>660</b> / 10 msec/step]
	Specifies the rotation time of the pressure roller contact motor for the pressure position 2.		
004	Pressure Position3	*ENG	[0 to 10,000 / <b>2,130</b> / 10 msec/step]
	Specifies the rotation time of the pressure roller contact motor for the pressure position 3.		
005	Depressure Position	*ENG	[0 to 10,000 / <b>220</b> / 10 msec/step]
	Specifies the rotation time of the pressure roller contact motor for the depression position (no pressure).		
010	Shift Time: BW2	*ENG	[0 to 3600 / <b>0</b> / 1 sec/step]
	Specifies the timing for depressing the fusing unit. If the machine does not get any jobs for specified time by this SP after copying or printing, the machine depresses the fusing unit.		
101	Pressure:Plain 1/2	*ENG	[0 to 3 / <b>3</b> / 1 /step]
	Sets the default pressure position of the fusing unit for each paper type in normal speed. 0: Depression position (no pressure) 1: Position 1 (less pressure) 2: Position 2 3: Position 3 (strongest pressure)		
102	Pressure:Thin	*ENG	[0 to 3 / <b>3</b> / 1 /step]
103	Pressure:M-thick	*ENG	[0 to 3 / <b>3</b> / 1 /step]
104	Pressure:Thick 1	*ENG	[0 to 3 / <b>3</b> / 1 /step]
105	Pressure:Thick2	*ENG	[0 to 3 / <b>3</b> / 1 /step]
106	Pressure:Thick3	*ENG	[0 to 3 / <b>3</b> / 1 /step]
107	Pressure:Special 1	*ENG	[0 to 3 / <b>3</b> / 1 /step]
108	Pressure:Special2	*ENG	[0 to 3 / <b>3</b> / 1 /step]
109	Pressure:Special3	*ENG	[0 to 3 / <b>3</b> / 1 /step]
110	Pressure:Envelope	*ENG	[0 to 3 / <b>3</b> / 1 /step]
151	Pressure:Plain 1/2:Low Speed	*ENG	[0 to 3 / <b>3</b> / 1 /step]

	Sets the default pressure position of the fusing unit for each paper type in low speed. 0: Depression position (no pressure) 1: Position 1 (less pressure) 2: Position 2 3: Position 3 (strongest pressure)		
152	Pressure:M-thick:Low Speed	*ENG	[0 to 3 / 3 / 1 /step]
153	Pressure:Thick1:Low Speed	*ENG	[0 to 3 / 3 / 1 /step]
154	Pressure:Special1:Low Speed	*ENG	[0 to 3 / 3 / 1 /step]
155	Pressure:Special2:Low Speed	*ENG	[0 to 3 / 3 / 1 /step]
156	Pressure:Plain1/2:Glossy	*ENG	[0 to 3 / 3 / 1 /step]
157	Pressure:M-thick:Glossy	*ENG	[0 to 3 / 3 / 1 /step]
158	Pressure:OHP	*ENG	[0 to 3 / 3 / 1 /step]
159	Pressure:Envelope:Low Speed	*ENG	[0 to 3 / 3 / 1 /step]
160	Pressure:Thin:Low Speed	*ENG	[0 to 3 / 3 / 1 /step]
161	Pressure:Thick4	*ENG	[0 to 3 / 3 / 1 /step]
	Sets the default pressure position of the fusing unit for thick 4 paper. 0: Depression position (no pressure) 1: Position 1 (less pressure) 2: Position 2 3: Position 3 (strongest pressure)		
162	Pressure:Postcard	*ENG	[0 to 3 / 3 / 1 /step]
	Sets the default pressure position of the fusing unit for postcard. 0: Depression position (no pressure) 1: Position 1 (less pressure) 2: Position 2 3: Position 3 (strongest pressure)		
201	Filler Edge Detection Counter	ENG	[0 to 9,000,000 / - / 1 /step]
	Displays the detection time for the edge of the pressure roller actuator.		

1152	[Fusing Nip Band Check]		
001	Execute	-	-
	Executes the nip band measurement between heating roller and pressure roller. If the nip band width is not 8 mm, and fusing is not good, replace the pressure roller or install a new fusing unit.		
002	Pre-idling Time	*ENG	[0 to 999 / <b>300</b> / 1 sec/step]
	Specifies the fusing rotation time before executing SP1152-001.		
003	Stop Time	*ENG	[0 to 100 / <b>20</b> / 1 sec/step]
	Specifies the time for measuring the nip.		
004	Pressure Position	*ENG	[1 to 3 / <b>3</b> / 1]
	Specifies the pressure position for measuring the nip.		

1153	[Fuser Cleaning]		
001	Compulsion execution	-	Execute the fusing cleaning mode.
002	Operation interval	*ENG	[1 to 300 / <b>0</b> / 1 K/step]
	Adjusts the execution interval for the fusing cleaning mode. 1K= 100 sheets		
003	Control Temp.	*ENG	[0 to 200 / <b>180</b> / 1°C/step]
	Specifies the heating roller temperature for the fusing cleaning mode.		
004	Page Count	*ENG	[1 to 300000 / - / 1 page/step]
	Displays the page counter for the fusing cleaning mode.		

1154	[Low Temp. Start Up]		
	Specifies the threshold temperature at the low temperature start-up.		
001	Temp. : Threshold Value 1	*ENG	[-10 to 100 / <b>5</b> / 1/step]
002	Temp. : Threshold Value 2	*ENG	[-10 to 100 / <b>15</b> / 1/step]
003	Temp. : Target	*ENG	[0 to 100 / <b>100</b> / 1/step]

004	Temp. :Rotation Threshold Value	*ENG	[-10 to 100 / <b>30</b> / 1/step]
005	Time: Heat Storage Division 1	*ENG	[0 to 250 / <b>0</b> / 1/step]
006	Time: Heat Storage Division 2	*ENG	[0 to 250 / <b>0</b> / 1/step]

1155	[Short Heater Control] Sets the short heater controls.		
001	Print Width :Upper Limit	*ENG	[0 to 300 / <b>105</b> / 1 mm/step]
011	Feed Permit Temp. :Delta:Center	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
012	Feed Permit Temp. :Delta:Press	*ENG	[0 to 200 / <b>100</b> / 1 deg/step]
013	Feed Permit Rotation Time	*ENG	[0 to 100 / <b>0</b> / 1 sec/step]
021	After Job End Temp. :Center	*ENG	[0 to 200 / <b>5</b> / 1 sec/step]
022	After Job End Temp. :End	*ENG	[0 to 200 / <b>5</b> / 1 sec/step]
023	After Job End Time	*ENG	[0 to 100 / <b>0</b> / 1 sec/step]

1156	[A3/DLT Size Heater Control] Sets the A3/DLT size heater controls.		
001	Print Width :Lower Limit	*ENG	[0 to 400 / <b>C3c: 280(NA), 270(EU/AA), d: 280(NA), 270(EU/AA)</b> / 1 mm/step]
011	Feed Permit Temp. :Delta:Center	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
012	Feed Permit Temp. :Delta:End	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
013	Feed Permit Temp. :Delta:Press	*ENG	[0 to 200 / <b>15</b> / 1 deg/step]
014	Feed Permit Rotation Time	*ENG	[0 to 100 / <b>0</b> / 1 sec/step]

1801	[Motor Speed Adjust]		
------	----------------------	--	--

001	Registration:Plain:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
002	Registration:Plain:High	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
003	Registration:Middle Thick:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
004	Registration:Middle Thick:Mid	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
005	Registration:Middle Thick:High	*ENG	
006	Registration:Thick 1:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
007	Registration:Thick 1:Mid	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
008	Registration:Thick 2:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
009	Registration:Thick 3:Low	*ENG	
010	Duplex CW:Plain:Low	*ENG	[-4 to 4 / 0.0 / 0.1 %/step]
011	Duplex CW:Normal:High	*ENG	
012	Duplex CW:Middle Thick:Low	*ENG	
013	Duplex CW:Middle Thick:Mid	*ENG	
014	Duplex CW:Middle Thick:High	*ENG	
015	Duplex CW:Thick 1:Low	*ENG	
016	Duplex CW:Thick 1:Mid	*ENG	
017	Duplex CW:Thick 2:Low	*ENG	
018	Duplex CW:Thick 3:Low	*ENG	
019	Duplex CCW:Normal:High	*ENG	[-4 to 4 / 0.0 / 0.1 %/step]
020	Duplex CCW:Middle Thick:Mid	*ENG	
021	Duplex CCW:Middle Thick:high	*ENG	
023	Duplex CCW:Thick 1:Mid	*ENG	
024	Reverse CW:Normal:High	*ENG	[-4 to 4 / -0.5 / 0.1%/step]
025	Reverse CW:Middle Thick:Mid	*ENG	[-4 to 4 / 0 / 0.1 %/step]
026	Reverse CW:Middle Thick:High	*ENG	[-4 to 4 / -0.5 / 0.1%/step]



028	Reverse CW:Thick 1:Mid	*ENG	[-4 to 4 / 0 / 0.1 %/step]
029	Reverse CCW:Normal:High	*ENG	
030	Reverse CCW:Middle Thick:Mid	*ENG	
031	Reverse CCW:Middle Thick:High	*ENG	
033	Reverse CCW:Thick 1:Mid	*ENG	
034	Feed:Plain:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
035	Feed:Plain:High	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
036	Feed:Middle thick:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
037	Feed:Middle thick:Mid	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
038	Feed:Middle thick:High	*ENG	
039	Feed:Thick 1:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
040	Feed:Thick 1:Mid	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
041	Feed:Thick 2:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
042	Feed:Thick 3:Low	*ENG	
043	Bridge Motor:Low	*ENG	[-4 to 4 / 0 / 0.1 %/step]
044	Bridge Motor:Mid	*ENG	
045	Bridge Motor:High	*ENG	
060	KOpcDevMot:High	*ENG	[-4 to 4 / -0.3 / 0.01 %/step]
061	KOpcDevMot:Mid	*ENG	
062	KOpcDevMot:Low	*ENG	
063	MOpcDevMot:High	*ENG	[-10 to 10 / 0 / 1 step/step]
064	MOpcDevMot:Mid	*ENG	[-9 to 9 / 0 / 1 step/step]
065	MOpcDevMot:Low	*ENG	[-14 to 14 / 0 / 1 step/step]
066	COpcDevMot:High	*ENG	[-10 to 10 / 0 / 1 step/step]
067	COpcDevMot:Mid	*ENG	[-9 to 9 / 0 / 1 step/step]
068	COpcDevMot:Low	*ENG	[-14 to 14 / 0 / 1 step/step]

069	YOpcDevMot:High	*ENG	[-10 to 10 / 0 / 1 step/step]
070	YOpcDevMot:Mid	*ENG	[-9 to 9 / 0 / 1 step/step]
071	YOpcDevMot:Low	*ENG	[-14 to 14 / 0 / 1 step/step]
072	Fusing: High	*ENG	[-4 to 4 / -0.6 / 0.01 %/step]
073	Fusing: Mid	*ENG	[-4 to 4 / -0.8 / 0.01 %/step]
074	Fusing: Low	*ENG	[-4 to 4 / -0.3 / 0.01 %/step]
075	TransferMot:High	*ENG	[-4 to 4 / 0.1 / 0.01 %/step]
076	TransferMot:Mid	*ENG	
077	TransferMot:Low	*ENG	
078	TonerMot	*ENG	[-30 to 30 / 10 / 5 %/step]
079	Fusing: 1200	*ENG	[-4 to 4 / -0.6 / 0.01 %/step]
080	Fusing:Thin:600	*ENG	[-4 to 4 / -0.6 / 0.01 %/step]
100	Drum Adjust	*ENG	[0 or 1 / 1 / 1] 0: Off, 1: On
	Enables or disables the drum amplitude adjustment.		
101	MOpcDevMot:High	*ENG	C3c: [-10 to 10 / 0 / 1 step/step] C3d: [-8 to 8 / 0 / 1 step/step]
102	COpcDevMot:High	*ENG	
103	YOpcDevMot:High	*ENG	
104	MOpcDevMot:Mid	*ENG	[-7 to 7 / 0 / 1 step/step]
105	COpcDevMot:Mid	*ENG	
106	YOpcDevMot:Mid	*ENG	
107	MOpcDevMot:Low	*ENG	[-14 to 14 / 0 / 1 step/step]
108	COpcDevMot:Low	*ENG	
109	YOpcDevMot:Low	*ENG	

110	MOPcDevMot:1200	*ENG	[- 7 to 7 / 0 / 1 step/step]
111	COPcDevMot:1200	*ENG	
112	YOPcDevMot:1200	*ENG	
120	Long:Registration:Plain:High	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
121	Long:Registration:Plain:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
122	Long:Registration:Middle Thick:High	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
123	Long:Registration:Middle Thick:Middle	*ENG	
124	Long:Registration:Middle Thick:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
125	Long:Registration:Thick 1:Middle	*ENG	[-2 to 2 / -1 / 0.1 %/step]
126	Long:Registration:Thick 1:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
127	Long:Registration:Thick 2:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
128	Long:Registration:Thick 3:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
129	Long:Fusing:Plain:High	*ENG	[-4 to 4 / 1.9 / 0.01 %/step]
130	Long:Fusing:Plain:Low	*ENG	[-4 to 4 / 2.1 / 0.01 %/step]
131	Long:Fusing:Middle Thick:High	*ENG	[-4 to 4 / 1.9 / 0.01 %/step]
132	Long:Fusing:Middle Thick:Middle	*ENG	[-4 to 4 / 1.4 / 0.01 %/step]
133	Long:Fusing:Middle Thick:Low	*ENG	[-4 to 4 / 2.1 / 0.01 %/step]
134	Long:Fusing:Thick 1:Middle	*ENG	[-4 to 4 / 2.0 / 0.01 %/step]
135	Long:Fusing:Thick 1:Low	*ENG	[-4 to 4 / 1.7 / 0.01 %/step]
136	Long:Fusing:Thick 2:Low	*ENG	[-4 to 4 / 1.7 / 0.01 %/step]
137	Long:Fusing:Thick 3:Low	*ENG	[-4 to 4 / 1.7 / 0.01 %/step]

1902	[Amplitude Control]		
001	Execute	-	Execute the drum phase adjustment.

002	Result	*ENG	[0 to 3 / - / 1] Displays the result of the drum phase adjustment. 0: Successfully done 2: Sampling failure 3: Insufficient detection number
003	Auto Execution	*ENG	[0 or 1 / 1 / -] Turns the automatic drum phase adjustment on or off. 0: Off, 1: On

1950	[Fan Cooling Time Set]		
	Adjust the rotation time for each fan motor after a job end.		
002	Fusing Exit Fan	*ENG	[0 to 120 / 0 / 0.1 min./step]
006	Main Suction Fan	*ENG	
007	Paper Exit Fan	*ENG	
008	PSU Fan	*ENG	
009	QSU Heater Cooling Fan	*ENG	
010	AC Control board Cooling Fan	*ENG	
011	Second Duct Fan	*ENG	
012	Toner Supply Cooling Fan	*ENG	

1951	[Fan Start Time Set]		
	Adjust the start time for each fan motor after a job end.		
002	Fusing Exit Fan	*ENG	[0 to 900 / 120 / 1 sec/step]
006	Main Suction Fan	*ENG	[0 to 900 / 120 / 1 sec/step]
007	Paper Exit Fan	*ENG	[0 to 900 / 120 / 1 sec/step]
008	PSU Fan	*ENG	[0 to 900 / 120 / 1 sec/step]

009	QSU Heater Cooling Fan	*ENG	[0 to 900 / <b>120</b> / 1 sec./step]
010	AC Control board Cooling Fan	*ENG	
011	Second Duct Fan	*ENG	
012	Toner Supply Cooling Fan	*ENG	

1952	[Fan Control Off Mode Time Set]		
	Specifies the time for fan control off mode.		
001	-	*ENG	[0 to 60 / <b>10</b> / 1 min./step]

1953	[Extra Fan Control]		
	Configures the settings of extra fan control.		
001	Extra Fan Cooling State	*ENG	[0 or 1 / - / 1 /step] 0: Off, 1: On
	Displays the extra fan cooling is On or Off.		
002	Extra Fan Cooling: Time: Threshold	*ENG	[0 to 180 / <b>C3c: 80, C3d: 65</b> / 1 min./step]
003	Extra Fan Cooling: Rotat: Threshold	*ENG	[0 to 999999999 / <b>0</b> / 1 min./step]
004	Extra Fan Cooling: Start Date	*ENG	Displays the execution time and date of the extra fan cooling.
005	Extra Fan Cooling Time	*ENG	[0 to 120 / <b>30</b> / 0.1 min./step:
	Specifies the execution time for the extra fan cooling.		
006	Execution Temp. Threshold	*ENG	[20 to 70 / <b>37.3</b> / 0.1 deg/step]
	Specifies the judgment temperature for the starting of extra fan execution.		
007	Cancellation Temp. Threshold	*ENG	[0.1 to 20 / <b>4.5</b> / 0.1 deg/step]
	Specifies the threshold temperature (the difference in value with the starting of extra fan execution) for the cancellation of extra fan execution.		

008	ON/OFF Setting	*ENG	[0 to 1 / 1 / 1 /step]
	Enables or disenables the control of extra fan execution control. 0: Disable 1: Enable		

1955	[Fan Control]		
	Configures the settings of fan execution switching.		
001	Execution Temp. Threshold	*ENG	[20 to 70 / <b>34.6</b> / 0.1 /step]
002	Cancellation Temp. Threshold	*ENG	[0.1 to 20 / <b>1.8</b> / 0.1 /step]

1954	[Extra Fan Control]		
	Configures the settings of extra fan control.		
002	Fan Cooling Time:Fusing Exit Fan:Initial	*ENG	[0 to 120 / <b>0</b> / 0.1 min./step]
006	Fan Cooling Time:Main Suction Fan:Initial	*ENG	[0 to 120 / <b>0</b> / 0.1 min./step]
007	Fan Cooling Time:Paper Exit Fan:Initial	*ENG	[0 to 120 / <b>0</b> / 0.1 min./step]
008	Fan Cooling Time:PSU Fan:Initial	*ENG	[0 to 120 / <b>0</b> / 0.1 min./step]
009	Fan Cooling Time:Fusing IH Coil Fan:Initial	*ENG	[0 to 120 / <b>0</b> / 0.1 min./step]
010	Fan Cooling Time:IH Power Supply Fan:Initial	*ENG	[0 to 120 / <b>0</b> / 0.1 min./step]
011	Fan Cooling Time:Second Duct Fan:Initial	*ENG	[0 to 120 / <b>0</b> / 0.1 min./step]
012	Fan Cooling Time:Third Duct Fan:Initial	*ENG	[0 to 120 / <b>0</b> / 0.1 min./step]

## Main SP Tables-2

### SP2-XXX (Drum)

2005	<p>[Charge DC Voltage] Charge Roller DC Voltage Adjustment  (Paper Type, Process Speed, Color)  Paper Type → Plain, Thick 1, Thick 2  Plain: High speed, Thick 1: Middle speed, Thick 2&amp;FINE: Low speed</p>		
	<p>Adjusts the DC component of the charge roller bias in the various print modes.  Charge bias (DC component) is automatically adjusted during process control; therefore, adjusting these settings does not effect while process control mode (SP3-041-1 Default: ON) is activated. When deactivating process control mode with SP3-041-1, the values in these SP modes are used for printing.</p>		
001	Plain: Bk	*ENG	[0 to 1000 / <b>690</b> / 10 -V/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2&FINE: Bk	*ENG	
010	Thick 2&FINE: M	*ENG	
011	Thick 2&FINE: C	*ENG	
012	Thick 2&FINE: Y	*ENG	
	[Charge DC: Correction]		
013	PCU:Plain	*ENG	[-100 to 100 / <b>C3c: -26, C3d: -28</b> / 1 -V/step]
014	PCU:Thick 1	*ENG	[-100 to 100 / <b>-29</b> / 1 -V/step]

015	PCU:Thick 2&FINE	*ENG	[-100 to 100 / -28 / 1 -V/step]
016	HVP:Plain	*ENG	[-100 to 100 / C3c:25, C3d: 24 / 1 -V/step]
017	HVP:Thick 1	*ENG	[-100 to 100 / 20 / 1 -V/step]
018	HVP: Thick 2&FINE	*ENG	[-100 to 100 / 29 / 1 -V/step]

2006	<p>[Charge AC Voltage] Charge Roller AC Voltage Adjustment (Paper Type, Process Speed, Color) Paper Type → Plain, Thick 1, Thick 2 Plain: High speed, Thick 1: Middle speed, Thick 2&amp;FINE: Low speed</p>		
	<p>Adjusts the AC component of the charge roller bias in the various print modes. Charge bias (AC component) is adjusted by environment correction (SP2-007-xxx to SP2-011-xxx). These SPs are activated only when SP2-012-1 is set to "1: manual control".</p>		
001	Plain: Bk	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
002	Plain: M	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
003	Plain: C	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
004	Plain: Y	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
005	Thick 1: Bk	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
006	Thick 1: M	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
007	Thick 1: C	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
008	Thick 1: Y	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
009	Thick 2&FINE: Bk	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
010	Thick 2&FINE: M	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
011	Thick 2&FINE: C	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
012	Thick 2&FINE: Y	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
2012	[Charge Output Control]		



001	AC Voltage	*ENG	<p>Selects the AC voltage control type.</p> <p>[0 or 1 / <b>0</b> / 1 /step]</p> <p>0: Process control</p> <p>1: Manual control (AC voltages are decided with SP2006.)</p>
-----	------------	------	--

2013	[Environmental Correction: PCU]		
001	Current Environmental FC: Display	*ENG	<p>Displays the environmental condition, which is measured in absolute humidity.</p> <p>[1 to 5 / - / 1 /step]</p> <p>1: LL (LL ≤ 4.3 g/m<sup>3</sup>)</p> <p>2: ML (4.3 &lt; ML ≤ 11.3 g/m<sup>3</sup>)</p> <p>3: MM (11.3 &lt; MM ≤ 18.0 g/m<sup>3</sup>)</p> <p>4: MH (18.0 &lt; MH ≤ 24.0 g/m<sup>3</sup>)</p> <p>5: HH (24.0 g/m<sup>3</sup> &lt; HH)</p>
002	Forced Setting	*ENG	<p>Selects the environmental condition manually.</p> <p>[0 to 5 / <b>0</b> / 1 /step]</p> <p>0: The environmental condition is determined automatically.</p> <p>1: LL, 2: ML, 3: MM, 4: MH, 5: HH</p>
003	Absolute Humidity: Threshold 1	*ENG	<p>Changes the humidity threshold between LL and ML.</p> <p>[0 to 100 / <b>3.0</b> / 0.01 g/m<sup>3</sup>/step]</p>
004	Absolute Humidity: Threshold 2	*ENG	<p>Changes the humidity threshold between ML and MM.</p> <p>[0 to 100 / <b>8.0</b> / 0.01 g/m<sup>3</sup>/step]</p>
005	Absolute Humidity: Threshold 3	*ENG	<p>Changes the humidity threshold between MM and MH.</p> <p>[0 to 100 / <b>15.0</b> / 0.01 g/m<sup>3</sup>/step]</p>
006	Absolute Humidity: Threshold 4	*ENG	<p>Changes the humidity threshold between MH and HH.</p> <p>[0 to 100 / <b>22.0</b> / 0.01 g/m<sup>3</sup>/step]</p>

007	Current Temp. FC: Display	*ENG	Displays the current temperature. [0 to 100 / - / 1 deg/step]
008	Current Relative Humidity FC: Display	*ENG	Displays the current relative humidity. [0 to 100 / - / 1%RH/step]
009	Current Absolute Humidity FC: Display	*ENG	Displays the absolute humidity. [0 to 100 / - / 0.01 g/m <sup>3</sup> /step]
010	Previous Environmental Bk: Display	*ENG	Displays the previous environmental condition, which is measured in absolute humidity. [1 to 5 / - / 1 /step] 1: LL, 2: ML, 3: MM, 4: MH, 5: HH
011	Previous Temp. Bk: Display	*ENG	Displays the previous temperature. [0 to 100 / - / 1 deg/step]
012	Previous Relative Humidity Bk: Display	*ENG	Displays the previous relative humidity. [0 to 100 / - / 1%RH/step]
013	Previous Absolute Humidity Bk: Display	*ENG	Displays the previous absolute humidity. [0 to 100 / - / 0.01 g/m <sup>3</sup> /step]

2015	[Charge AC Adj: Result] Displays a result of the AC charge adjustment.		
001	Bk	*ENG	[0 to 9 / 0 / 1 /step]
002	M	*ENG	0: Success
003	C	*ENG	1: Out of tolerance range
004	Y	*ENG	2: Out of adjustable range 3: Adjustment incompletd

2101	[Color Registration Correction] <b>FA</b>		
	These values are the parameters for the automatic line position adjustment and are adjusted at the factory. However, you must input a value for SP2101-001 after replacing the laser optics housing unit. For details, see "Laser Optics Housing Unit" in the "Replacement and Adjustment" section. The value should be provided with the new laser optics housing unit.		

001	Main Dot: Bk	*ENG	[-512 to 511 / <b>0</b> / 1 dot/step]
002	Main Dot: Ma	*ENG	
003	Main Dot: Cy	*ENG	
004	Main Dot: Ye	*ENG	
005	Sub Line: Bk	*ENG	[-16384 to 16383 / <b>0</b> / 1 line/step]
006	Sub Line: Ma	*ENG	
007	Sub Line: Cy	*ENG	
008	Sub Line: Ye	*ENG	

2103	[Erase Margin Adjustment] (Area, Paper Size)		
	Adjusts the erase margin by deleting image data at the margins.		
001	Lead Edge Width	*ENG	[0 to 9.9 / <b>4.2</b> / 0.1 mm/step]
002	Trail. Edge Width	*ENG	
003	Left	*ENG	[0 to 9.9 / <b>2</b> / 0.1 mm/step]
004	Right	*ENG	
006	Duplex Trail. L Size	*ENG	[0 to 4 / <b>1</b> / 0.1 mm/step]
007	Duplex Trail. M Size	*ENG	[0 to 4 / <b>0.8</b> / 0.1 mm/step]
008	Duplex Trail. S Size	*ENG	[0 to 4 / <b>0.6</b> / 0.1 mm/step]
009	Duplex Left Edge	*ENG	[0 to 1.5 / <b>0.3</b> / 0.1 mm/step]
010	Duplex Right Edge	*ENG	
011	Duplex Trail. L Size:Thick	*ENG	[0 to 4 / <b>1</b> / 0.1 mm/step]
012	Duplex Trail. M Size:Thick	*ENG	[0 to 4 / <b>0.8</b> / 0.1 mm/step]
013	Duplex Trail. S Size:Thick	*ENG	[0 to 4 / <b>0.6</b> / 0.1 mm/step]
014	Duplex Left Edge:Thick	*ENG	[0 to 1.5 / <b>0.3</b> / 0.1 mm/step]
015	Duplex Right Edge:Thick	*ENG	

016	Lead Edge Width: Thin	*ENG	[0 to 9.9 / <b>4.2</b> / 0.1 mm/step]
017	Trail. Edge Width: Thin	*ENG	
018	Duplex Trail. L Size: Thin	*ENG	[0 to 4 / <b>1</b> / 0.1 mm/step]
019	Duplex Trail. M Size: Thin	*ENG	[0 to 4 / <b>0.8</b> / 0.1 mm/step]
020	Duplex Trail. S Size: Thin	*ENG	[0 to 4 / <b>0.6</b> / 0.1 mm/step]

2105	[LD Power Adj.] (Process Speed, Color)		
Adjusts the LD power of each color for each process speed. Each LD power setting is decided by process control.			
001	High Speed: Bk	*ENG	[50 to 120 / <b>100</b> / 1%/step]
002	High Speed: Ma	*ENG	Decreasing a value makes lines thinner on the output. Increasing a value makes lines thicker on the output.
003	High Speed: Cy	*ENG	
004	High Speed: Ye	*ENG	
005	Middle Speed: Bk	*ENG	[50 to 120 / <b>100</b> / 1%/step]
006	Middle Speed: Ma	*ENG	Decreasing a value makes lines thinner on the output. Increasing a value makes lines thicker on the output.
007	Middle Speed: Cy	*ENG	
008	Middle Speed: Ye	*ENG	
009	Low Speed: Bk	*ENG	[50 to 120 / <b>100</b> / 1%/step]
010	Low Speed: Ma	*ENG	Decreasing a value makes lines thinner on the output. Increasing a value makes lines thicker on the output.
011	Low Speed: Cy	*ENG	
012	Low Speed: Ye	*ENG	

2109	[Test Pattern]		
	Generates the test pattern using "COPY Window" tab in the LCD.		
003	Pattern Selection	-	[0 to 23 / <b>0</b> / 1/step]

	0 None 1: Vertical Line (1dot) 2: Vertical Line (2dot) 3: Horizontal (1dot) 4: Horizontal (2dot) 5: Grid Vertical Line 6: Grid Horizontal Line 7: Grid pattern Small 8: Grid pattern Large 9: Argyle Pattern Small 10: Argyle Pattern Large		11. Independent Pattern (1dot) 12. Independent Pattern (2dot) 13. Independent Pattern (4dot) 14. Trimming Area 16: Hound's Tooth Check (Horizontal) 17: Band (Horizontal) 18: Band (Vertical) 19: Checker Flag Pattern 20: Grayscale Vertical Margin 21: Grayscale Horizontal Margin 23: Full Dot Pattern
005	Color Selection	-	Specifies the color for the test pattern. [1 to 4 / 1 / 1/step] 1: All colors, 2: Magenta, 3: Yellow, 4: Cyan
006	Density: Bk	-	Specifies the color density for the test pattern. [0 to 15 / 15 / 1 /step] 0: Lightest density 15: Darkest density
007	Density: Ma	-	
008	Density: Cy	-	
009	Density: Ye	-	

2111	[Forced Line Position Adj.]		
001	Mode a	-	Executes the fine line position adjustment twice. If this SP is not completed (NG is displayed), do SP2111-003 first and then try this SP again.
002	Mode b	-	Executes the fine line position adjustment once. If this SP is not completed, do SP2111-003 first and then try this SP again.
003	Mode c	-	Executes the rough line position adjustment once. After doing this SP, make sure to execute SP2111-001 or -002. Otherwise, the line position adjustment is not perfectly done.

2112	[TM/ID Sensor Check] ID Sensor Check <b>FA</b>		
001	Execute		[0 or 1 / <b>0</b> / 1 /step] This SP is used to check the ID sensors at the factory. The results of this SP are displayed in SP2140 to SP2145.

2117	[Skew Adjustment]		
	Specifies a skew adjustment value for the skew motor M, C or Y. These SPs must be used when a new laser optics housing unit is installed or when SC2.585 occurs. For details, see "Laser Optics Housing Unit" in the "Replacement and Adjustment" section.		
	001	Pulse: M	*ENG
	002	Pulse: C	*ENG
003	Pulse: Y	*ENG	[-50 to 50 / <b>0</b> / 1 pulse/step]

2118	[Skew Adjustment]		
001	Execute: M	*ENG	Changes the current skew adjustment values to the values specified with SP2117. These SPs must be used when a new laser optics housing unit is installed or when SC2.585 occurs. For details, see "Laser Optics Housing Unit" in the "Replacement and Adjustment" section.
002	Execute: C	*ENG	
003	Execute: Y	*ENG	

2119	[Skew Adjustment Display]		
	Displays the current skew adjustment value for each skew motor.		
	001	M	*ENG
	002	C	*ENG
003	Y	*ENG	[-50 to 50 / - / 1 pulse/step]

2150	[Area Mag. Correction] LD Pulse Area Correction (Color, Area) <b>FA</b>		
	Adjusts the magnification for each area. The main scan (297 mm) is divided into 8 areas. Area 1 is at the front side of the machine (left side of the image) and area 8 is at the rear side of the machine (right side of the image).		
	Decreasing a value makes the image shift to the left side on the print.		
	Increasing a value makes the image shift to the right side on the print. 1 pulse = 1/16 dot		
027	Area 0: Bk	*ENG	[-255 to 255 / 0 / 1 sub-dot/step]
028	Area 1: Bk	*ENG	Adjusts the area magnification for LD 0. [-255 to 255 / 0 / 1 sub-dot/step]
029	Area 2: Bk	*ENG	
030	Area 3: Bk	*ENG	
031	Area 4: Bk	*ENG	
032	Area 5: Bk	*ENG	
033	Area 6: Bk	*ENG	
034	Area 7: Bk	*ENG	
035	Area 8: Bk	*ENG	
036	Area 9: Bk	*ENG	Not used
037	Area 10: Bk	*ENG	
038	Area 11: Bk	*ENG	
039	Area 12: Bk	*ENG	
079	Area 0: Ma	*ENG	[-255 to 255 / 0 / 1 sub-dot/step]

080	Area 1: Ma	*ENG	Adjusts the area magnification for LD 0. [-255 to 255 / 0 / 1 sub-dot/step]
081	Area 2: Ma	*ENG	
082	Area 3: Ma	*ENG	
083	Area 4: Ma	*ENG	
084	Area 5: Ma	*ENG	
085	Area 6: Ma	*ENG	
086	Area 7: Ma	*ENG	
087	Area 8: Ma	*ENG	
088	Area 9: Ma	*ENG	
089	Area 10: Ma	*ENG	
090	Area 11: Ma	*ENG	
091	Area 12: Ma	*ENG	
131	Area 0: Cy	*ENG	[-255 to 255 / 0 / 1 sub-dot/step]
132	Area 1: Cy	*ENG	Adjusts the area magnification for LD 0. [-255 to 255 / 0 / 1 sub-dot/step]
133	Area 2: Cy	*ENG	
134	Area 3: Cy	*ENG	
135	Area 4: Cy	*ENG	
136	Area 5: Cy	*ENG	
137	Area 6: Cy	*ENG	
138	Area 7: Cy	*ENG	
139	Area 8: Cy	*ENG	
140	Area 9: Cy	*ENG	
141	Area 10: Cy	*ENG	
142	Area 11: Cy	*ENG	
143	Area 12: Cy	*ENG	
183	Area 0: Ye	*ENG	[-255 to 255 / 0 / 1 sub-dot/step]



184	Area 1: Ye	*ENG	Adjusts the area magnification for LD 0. [-255 to 255 / 0 / 1 sub-dot/step]	
185	Area 2: Ye	*ENG		
186	Area 3: Ye	*ENG		
187	Area 4: Ye	*ENG		
188	Area 5: Ye	*ENG		
189	Area 6: Ye	*ENG		
190	Area 7: Ye	*ENG		
191	Area 8: Ye	*ENG		
192	Area 9: Ye	*ENG		Not used
193	Area 10: Ye	*ENG		
194	Area 11: Ye	*ENG		
195	Area 12: Ye	*ENG		

2152	[Area Shad. Correct. Setting] <b>FA</b>
	<p>Adjusts the area correction value for each LD power.</p> <p>The main scan is divided into 16 areas. However, the image areas are limited from area 1 to area 14.</p> <p>For BK and Magenta, area 1 is at the rear side of the machine (left side of the image) and area 14 is at the front side of the machine (right side of the image).</p> <p>For Cyan and Yellow, area 1 is at the front side of the machine (right side of the image) and area 14 is at the rear side of the machine (left side of the image).</p>

001	Area 0: Bk	*ENG	This is for the synchronizing detection board. [50 to 150 / <b>100</b> / 1 %/step]
002	Area 1: Bk	*ENG	
003	Area 2: Bk	*ENG	
004	Area 3: Bk	*ENG	
005	Area 4: Bk	*ENG	
006	Area 5: Bk	*ENG	
007	Area 6: Bk	*ENG	
008	Area 7: Bk	*ENG	
009	Area 8: Bk	*ENG	
010	Area 9: Bk	*ENG	
011	Area 10: Bk	*ENG	
012	Area 11: Bk	*ENG	
013	Area 12: Bk	*ENG	
014	Area 13: Bk	*ENG	
015	Area 14: Bk	*ENG	
016	Area 15: Bk	*ENG	This is out of the image area. [50 to 150 / <b>100</b> / 1 %/step]
033	Area 0: Ma	*ENG	This is for the synchronizing detection board. [50 to 150 / <b>100</b> / 1 %/step]

034	Area 1: Ma	*ENG	[50 to 150 / <b>100</b> / 1 %/step]
035	Area 2: Ma	*ENG	
036	Area 3: Ma	*ENG	
037	Area 4: Ma	*ENG	
038	Area 5: Ma	*ENG	
039	Area 6: Ma	*ENG	
040	Area 7: Ma	*ENG	
041	Area 8: Ma	*ENG	
042	Area 9: Ma	*ENG	
043	Area 10: Ma	*ENG	
044	Area 11: Ma	*ENG	
045	Area 12: Ma	*ENG	
046	Area 13: Ma	*ENG	
047	Area 14: Ma	*ENG	
048	Area 15: Ma	*ENG	This is out of the image area. [50 to 150 / <b>100</b> / 1 %/step]
065	Area 0: Cy	*ENG	This is for the synchronizing detection board. [50 to 150 / <b>100</b> / 1 %/step]

066	Area 1: Cy	*ENG	[50 to 150 / <b>100</b> / 1 %/step]
067	Area 2: Cy	*ENG	
068	Area 3: Cy	*ENG	
069	Area 4: Cy	*ENG	
070	Area 5: Cy	*ENG	
071	Area 6: Cy	*ENG	
072	Area 7: Cy	*ENG	
073	Area 8: Cy	*ENG	
074	Area 9: Cy	*ENG	
075	Area 10: Cy	*ENG	
076	Area 11: Cy	*ENG	
077	Area 12: Cy	*ENG	
078	Area 13: Cy	*ENG	
079	Area 14: Cy	*ENG	
080	Area 15: Cy	*ENG	This is out of the image area. [50 to 150 / <b>100</b> / 1 %/step]
097	Area 0: Ye	*ENG	This is for the synchronizing detection board. [50 to 150 / <b>100</b> / 1 %/step]

098	Area 1: Ye	*ENG	[50 to 150 / <b>100</b> / 1 %/step]
099	Area 2: Ye	*ENG	
100	Area 3: Ye	*ENG	
101	Area 4: Ye	*ENG	
102	Area 5: Ye	*ENG	
103	Area 6: Ye	*ENG	
104	Area 7: Ye	*ENG	
105	Area 8: Ye	*ENG	
106	Area 9: Ye	*ENG	
107	Area 10: Ye	*ENG	
108	Area 11: Ye	*ENG	
109	Area 12: Ye	*ENG	
110	Area 13: Ye	*ENG	
111	Area 14: Ye	*ENG	
112	Area 15: Ye	*ENG	This is out of the image area. [50 to 150 / <b>100</b> / 1 %/step]

2181	[Line Position Adj. Result]		
	<p>Displays the values for each correction.</p> <ul style="list-style-type: none"> <li>"Paper Int. Mag: Subdot" indicates the magnification correction value between two sheets of paper.</li> <li>"Mag.Cor. Subdot" indicates the magnification correction value.</li> <li>"M. Scan Erro." indicates the shift correction value in the main scan direction.</li> <li>"S. Scan Erro." Indicates the shift correction value in the sub scan direction.</li> <li>"M. Cor.: Dot" indicates the dot correction value in the main scan direction.</li> <li>"M. Cor.: Subdot" indicates the sub dot correction value in the main scan direction.</li> <li>Bk: Black, M: Magenta, C: Cyan, Y: Yellow</li> </ul>		
001	Paper Int. Mag: Subdot: Bk	*ENG	[-32768 to 32767 / - / 1 pulse/step]

002	Mag.Cor. Subdot: Bk	*ENG	[-32768 to 32767 / - / 1 pulse/step]
003	Skew: M	*ENG	[-5000 to 5000 / - / 0.001 um/step]
005	M. Scan Erro.: Left: M	*ENG	[-5000 to 5000 / - / 0.001 um/step]
006	M. Scan Erro.: Center: M	*ENG	
007	M. Scan Erro.: Right: M	*ENG	
008	S. Scan Erro.: Left: M	*ENG	
009	S. Scan Erro.: Center: M	*ENG	
010	S. Scan Erro.: Right: M	*ENG	
011	M. Cor.: Dot: M	*ENG	[-512 to 511 / - / 1 dot/step]
012	M. Cor.: Subdot: M	*ENG	[-15 to 15 / - / 1 pulse/step]
013	Paper Int. Mag: Subdot: M	*ENG	[-32768 to 32767 / - / 1 pulse/step]
014	Mag.Cor. Subdot: M	*ENG	
015	M. Left Mag.: Subdot: M	*ENG	
016	M. Right Mag.: Subdot: M	*ENG	
017	S. Cor.: 600 Line: M	*ENG	[-16384 to 16383 / - / 1 line/step]
018	S. Cor.: 600 Sub: M	*ENG	[-1 to 1 / - / 0.001 line/step]
019	S. Cor.: 1200 Line: M	*ENG	[-16384 to 16383 / - / 1 line/step]
020	S. Cor.: 1200 Sub: M	*ENG	[-1 to 1 / - / 0.001 line/step]
021	Skew: C	*ENG	[-5000 to 5000 / - / 0.001 um/step]
023	M. Scan Erro.: Left: C	*ENG	[-5000 to 5000 / - / 0.001 um/step]
024	M. Scan Erro.: Center: C	*ENG	
025	M. Scan Erro.: Right: C	*ENG	
026	S. Scan Erro.: Left: C	*ENG	
027	S. Scan Erro.: Center: C	*ENG	
028	S. Scan Erro.: Right: C	*ENG	
029	M. Cor.: Dot: C	*ENG	[-512 to 511 / - / 1 dot/step]

030	M. Cor.: Subdot: C	*ENG	[-15 to 15 / - / 1 pulse/step]
031	Paper Int. Mag: Subdot: C	*ENG	[-32768 to 32767 / - / 1 pulse/step]
032	Mag.Cor. Subdot: C	*ENG	
033	M. Left Mag.: Subdot: C	*ENG	
034	M. Right Mag.: Subdot: C	*ENG	
035	S. Cor.: 600 Line: C	*ENG	[-16384 to 16383 / - / 1 line/step]
036	S. Cor.: 600 Sub: C	*ENG	[-1 to 1 / - / 0.001 line/step]
037	S. Cor.: 1200 Line: C	*ENG	[-16384 to 16383 / - / 1 line/step]
038	S. Cor.: 1200 Sub: C	*ENG	[-1 to 1 / - / 0.001 line/step]
039	Skew: Y	*ENG	[-5000 to 5000 / - / 0.001 um/step]
041	M. Scan Erro.: Left: Y	*ENG	
042	M. Scan Erro.: Center: Y	*ENG	
043	M. Scan Erro.: Right: Y	*ENG	
044	S. Scan Erro.: Left: Y	*ENG	
045	S. Scan Erro.: Center: Y	*ENG	
046	S. Scan Erro.: Right: Y	*ENG	
047	M. Cor.: Dot: Y	*ENG	[-512 to 511 / - / 1 dot/step]
048	M. Cor.: Subdot: Y	*ENG	[-15 to 15 / - / 1 pulse/step]
049	Paper Int. Mag: Subdot: Y	*ENG	[-32768 to 32767 / - / 1 pulse/step]
050	Mag.Cor. Subdot: Y	*ENG	
051	M. Left Mag.: Subdot: Y	*ENG	
052	M. Right Mag.: Subdot: Y	*ENG	
053	S. Cor.: 600 Line: Y	*ENG	[-16384 to 16383 / - / 1 line/step]
054	S. Cor.: 600 Sub: Y	*ENG	[-1 to 1 / - / 0.001 line/step]
055	S. Cor.: 1200 Line: Y	*ENG	[-16384 to 16383 / - / 1 line/step]
056	S. Cor.: 1200 Sub: Y	*ENG	[-1 to 1 / - / 0.001 line/step]

2182	[Line Position Adj. Offset] (Color) M. Scan: Main scan, S. Scan: Sub-scan		
001	M Magnification	*ENG	Adjusts the line position manually. [-1 to 1 / 0 / 0.001%/step]
002	C Magnification	*ENG	
003	Y Magnification	*ENG	
<p>When line shifts are not corrected by the automatic line position adjustment, do this SP. Increasing a value reduces the image in the main scan direction. Decreasing a value enlarges the image in the main scan direction.</p>			
004	M. Scan: High: Dot: M	*ENG	[-512 to 511 / 0 / 1 dot/step]
005	M. Scan: High: Subdot: M	*ENG	[-15 to 15 / 0 / 1 pulse/step]
006	M. Scan: Medium: Dot: M	*ENG	[-512 to 511 / 0 / 1 dot/step]
007	M. Scan: Medium: Subdot: M	*ENG	[-15 to 15 / 0 / 1 pulse/step]
008	M. Scan: Low: Dot: M	*ENG	[-512 to 511 / 0 / 1 dot/step]
009	M. Scan: Low: Subdot: M	*ENG	[-15 to 15 / 0 / 1 pulse/step]
010	M. Scan: High: Dot: C	*ENG	[-512 to 511 / 0 / 1 dot/step]
011	M. Scan: High: Subdot: C	*ENG	[-15 to 15 / 0 / 1 pulse/step]
012	M. Scan: Medium: Dot: C	*ENG	[-512 to 511 / 0 / 1 dot/step]
013	M. Scan: Medium: Subdot: C	*ENG	[-15 to 15 / 0 / 1 pulse/step]
014	M. Scan: Low: Dot: C	*ENG	[-512 to 511 / 0 / 1 dot/step]
015	M. Scan: Low: Subdot: C	*ENG	[-15 to 15 / 0 / 1 pulse/step]
016	M. Scan: High: Dot: Y	*ENG	[-512 to 511 / 0 / 1 dot/step]
017	M. Scan: High: Subdot: Y	*ENG	[-15 to 15 / 0 / 1 pulse/step]
018	M. Scan: Medium: Dot: Y	*ENG	[-512 to 511 / 0 / 1 dot/step]
019	M. Scan: Medium: Subdot: Y	*ENG	[-15 to 15 / 0 / 1 pulse/step]
020	M. Scan: Low: Dot: Y	*ENG	[-512 to 511 / 0 / 1 dot/step]
021	M. Scan: Low: Subdot: Y	*ENG	[-15 to 15 / 0 / 1 pulse/step]



022	S. Scan: High: Line: M	*ENG	[-16384 to 16383 / 0 / 1 line/step]
023	S. Scan: High: Subline: M	*ENG	[-1 to 1 / 0 / 0.001 /line]
024	S. Scan: Medium: Line: M	*ENG	[-16384 to 16383 / 0 / 1 line/step]
025	S. Scan: Medium: Subline: M	*ENG	[-1 to 1 / 0 / 0.001 /line]
026	S. Scan: Low: Line: M	*ENG	[-16384 to 16383 / 0 / 1 line/step]
027	S. Scan: Low: Subline: M	*ENG	Not used
028	S. Scan: High: Line: C	*ENG	[-16384 to 16383 / 0 / 1 line/step]
029	S. Scan: High: Subline: C	*ENG	[-1 to 1 / 0 / 0.001 /line]
030	S. Scan: Medium: Line: C	*ENG	[-16384 to 16383 / 0 / 1 line/step]
031	S. Scan: Medium: Subline: C	*ENG	[-1 to 1 / 0 / 0.001 /line]
032	S. Scan: Low: Line: C	*ENG	[-16384 to 16383 / 0 / 1 line/step]
033	S. Scan: Low: Subline: C	*ENG	Not used
034	S. Scan: High: Line: Y	*ENG	[-16384 to 16383 / 0 / 1 line/step]
035	S. Scan: High: Subline: Y	*ENG	[-1 to 1 / 0 / 0.001 /line]
036	S. Scan: Medium: Line: Y	*ENG	[-16384 to 16383 / 0 / 1 line/step]
037	S. Scan: Medium: Subline: Y	*ENG	[-1 to 1 / 0 / 0.001 /line]
038	S. Scan: Low: Line: Y	*ENG	[-16384 to 16383 / 0 / 1 line/step]
039	S. Scan: Low: Subline: Y	*ENG	Not used

2185	[Main Scan Length Target Display]
	<p>Displays/adjusts the target value for the main scan length correction of the line position adjustment.</p> <p>After replacing the laser optics housing unit, input the standard value for Bk provided with the new unit. For details, see "Laser Optics Housing Unit" in the "Replacement Adjustment" section. It is not necessary to input the values for the other colors; these are automatically adjusted after doing the line position adjustment.</p>

001	Bk	*ENG	[0 to 266667 / <b>249449</b> / 1 sub-dot/step]
002	M	*ENG	
003	C	*ENG	
004	Y	*ENG	

2193	[MUSIC Condition Set] Line Position Adjustment: Condition Setting		
001	Auto Execution	*ENG	[0 or 1 / <b>1</b> / 1] 0: OFF, 1: <b>ON</b>
	Enables/disables the automatic line position adjustment		
002	Page: Job End: BW+FC	*ENG	[0 to 999 / <b>500</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for BW and color printing mode after job end.		
003	Page: Job End: FC	*ENG	[0 to 999 / <b>200</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for color printing mode after job end.		
004	Page: Interrupt: BW+FC	*ENG	[0 to 999 / <b>200</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for BW and color printing mode during job.		
005	Page: Interrupt: FC	*ENG	[0 to 999 / <b>200</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for color printing mode during jobs.		
006	Page: Stand-By: BW	*ENG	[0 to 999 / <b>100</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for BW printing mode in stand-by mode. The line position adjustment is done when the number of outputs in BW printing mode reaches the value specified with this SP and the condition of SP2-193-008 or SP2-193-009 is satisfied.		
007	Page: Stand-By: FC	*ENG	[0 to 999 / <b>100</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for FC printing mode in stand-by mode. The line position adjustment is done when the number of outputs in color printing mode reaches the value specified with this SP and the condition of SP2-193-008 or SP2-193-009 is satisfied.		

008	Temp.	*ENG	[0 to 100 / <b>5</b> / 1deg/step]
	Adjust the temperature change threshold for the line position adjustment (Mode b: adjustment once). The timing for line position adjustment depends on the combinations of several conditions.		
009	Time	*ENG	[1 to 1440 / <b>300</b> / 1 minute/step]
	Adjust the time threshold for the line position adjustment (Mode b: adjustment once). The timing for line position adjustment depends on the combinations of several conditions.		
010	Magnification	*ENG	[0 to 10 / <b>0.1</b> / 0.01%/step]
	Adjusts the magnification threshold for line position adjustment. If the length of the main scan is changed by this amount since the previous MUSIC, then MSUIC is done again.		
011	Temp. 2	*ENG	[0 to 100 / <b>10</b> / 1deg/step]
	Adjust the temperature change threshold for the line position adjustment (Mode a: adjustment twice). The timing for line position adjustment depends on the combinations of several conditions.		
012	Time 2	*ENG	[1 to 9999 / <b>600</b> / 1 minute/step]
	Adjust the time threshold for the line position adjustment (Mode a: adjustment twice). The timing for line position adjustment depends on the combinations of several conditions.		
013	Page: Power ON:BW+FC	*ENG	[0 to 999 / <b>200</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for BW and FC printing mode at power-on. The line position adjustment is done when the number of outputs in BW and color printing mode reaches the value specified with this SP and the condition of SP2-193-008 or SP2-193-009 is satisfied.		

2194	[MUSIC Execution Result] Line Position Adjustment: Execution Result		
001	Year	*ENG	[0 to 99 / - / 1 year/step]
	Displays the year of the last MUSIC execution.		
002	Month	*ENG	[1 to 12 / - / 1 month/step]
	Displays the month of the last MUSIC execution.		
003	Day	*ENG	[1 to 31 / - / 1 day/step]
	Displays the date of the last MUSIC execution.		

004	Hour	*ENG	[0 to 23 / - / 1 hour/step]
	Displays the time (hour) of the last MUSIC execution.		
005	Minute	*ENG	[0 to 59 / - / 1 minute/step]
	Displays the time (minute) of the last MUSIC execution.		
006	Temperature	*ENG	[0 to 100 / - / 1 deg/step]
	Displays the temperature of the last MUSIC execution.		
007	Execution Result	*ENG	[0 or 1 / - / 1 /step] 0: Completed successfully, 1: Failed
008	Number of Execution	*ENG	[0 to 999999 / - / 1 times/step]
009	Number of Failure	*ENG	[0 to 999999 / - / 1 times/step]
010	Error Result: M	*ENG	[0 to 9 / - / 1 /step]
011	Error Result: C	*ENG	0: Not done 1: Completed successfully
012	Error Result: Y	*ENG	2: Cannot detect patterns 3: Fewer lines on the pattern than the target 4: Not used 5: Out of the adjustment range 6 to 9: Not used

2198	[Music A/D Interval]		
	ADC Trigger Counter		
001	ADC Trigger Counter	*ENG	[7.5 to 20 / 10 / 0.1 μs/step]

2220	[Skew Origin Set]		
	Executes the skew motor initialization in the laser optics unit.		
001	M: Skew Motor	*ENG	-
002	C: Skew Motor	*ENG	-
003	Y: Skew Motor	*ENG	-

2221	[LD Power] LD Power Control		
	<p>Adjusts the fixed LD power for each line speed and color.          These SPs are activated only when SP3-041-002 is set to "0".          Plain: High speed, Thick 1: Middle speed, Thick 2&amp;Fine: Low speed</p>		
001	Plain: Bk	*ENG	<p>[0 to 200 / <b>100</b> / 1%/step]          Increasing this value makes the image density darker.</p>
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2&FINE: Bk	*ENG	
010	Thick 2&FINE: M	*ENG	
011	Thick 2&FINE: C	*ENG	
012	Thick 2&FINE: Y	*ENG	
2229	[Development DC Vias] Development DC Bias Adjustment		
	<p>Adjusts the development bias.          Development bias is automatically adjusted during process control; therefore, adjusting these settings has no effect while Process Control (SP3-041-001 Default: ON) is activated.          After deactivating Process Control with SP3-041-001, the values in these SP modes are used for printing.          Plain: High speed, Thick 1: Middle speed, Thick 2&amp;Fine: Low speed</p>		

001	Plain: Bk	*ENG	[0 to 800 / <b>550</b> / 10 -V/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2&FINE:Bk	*ENG	
010	Thick 2&FINE:M	*ENG	
011	Thick 2&FINE:C	*ENG	
012	Thick 2&FINE:Y	*ENG	

2241	[Temperature/Humidity: Display]		
	Displays the environment temperature and humidity.		
001	Temperature	-	[-50 to 450 / - / 0.1 deg/step]
002	Relative Humidity	-	[0 to 1000 / - / 0.1 %RH/step]
003	Absolute Humidity	-	[0 to 100 / - / 0.01 g/m <sup>3</sup> /step]
004	AIT Temperature	-	[0 to 70 / - / 0.1 deg/step]
005	Correction Coefficient A	-	[0 to 70 / 1 / 0.1/step]
006	Correction Coefficient B	-	[-70 to 70 / <b>0</b> / 0.1/step]

2242	[TS Operation Env. Log]		
	Displays TS Operation Env. logs.		
001	TS <= 40	-	[0 to 99999999 / - / 1/mm]
002	40 < TS <= 45	-	[0 to 99999999 / - / 1/mm]
003	45 < TS	-	[0 to 99999999 / - / 1/mm]

004	Log Clear	-	[0 to 1 / <b>0</b> / 1/step] 1: Clear
-----	-----------	---	--

2302	[Environmental Correction: Transfer] Environmental Correction: Image Transfer Belt Unit		
001	Current Environmental Display	-	Displays the current environment condition.
002	Forced Setting	*ENG	Sets the environment condition manually. [0 to 6 / <b>0</b> / 1 /step] 0: Automatic environment control 1: LL (Low temperature/ Low humidity) 2: ML (Middle temperature/ Low humidity) 3: MM (Middle temperature/ Middle humidity) 4: MH (Middle temperature/ High humidity) 5: HH (High temperature/ High humidity)
003	Absolute Humidity: Threshold 1	*ENG	Adjusts the threshold value between LL and ML. [0 to 100 / <b>4</b> / 0.01 g/m <sup>3</sup> /step]
004	Absolute Humidity: Threshold 2	*ENG	Adjusts the threshold value between ML and MM. [0 to 100 / <b>8</b> / 0.01 g/m <sup>3</sup> /step]
005	Absolute Humidity: Threshold 3	*ENG	Adjusts the threshold value between MM and MH. [0 to 100 / <b>16</b> / 0.01 g/m <sup>3</sup> /step]
006	Absolute Humidity: Threshold 4	*ENG	Adjusts the threshold value between MH and HH. [0 to 100 / <b>24</b> / 0.01 g/m <sup>3</sup> /step]
007	Temp Threshold	*ENG	[-5 to 30 / <b>5</b> / 1 deg/step]

2308	[Paper Size Correction]		
	Adjusts the threshold value for the paper size correction.		
001	Threshold 1	*ENG	[0 to 350 / <b>297</b> / 1 mm/step] Threshold 1 ≤ paper: Paper is detected as "S1" size.

002	Threshold 2	*ENG	[0 to 350 / <b>257</b> / 1 mm/step] Threshold 2 ≤ paper ≤ Threshold 1: Paper is detected as "S2" size.
003	Threshold 3	*ENG	[0 to 350 / <b>210</b> / 1 mm/step] Threshold 3 ≤ paper ≤ Threshold 2: Paper is detected as "S3" size.
004	Threshold 4	*ENG	[0 to 350 / <b>148</b> / 1 mm/step] Threshold 4 ≤ paper ≤ Threshold 3: Paper is detected as "S4" size. Paper ≤ Threshold 4: Paper is detected as "S5" size.

2311	[Non Image Area: Bias]		
001	Image Transfer	*ENG	Adjusts the bias of the image transfer belt between images. This value is added to the value of the image transfer belt bias. [10 to 250 / <b>100</b> / 5 %/step]
002	Paper Transfer	*ENG	Adjusts the bias of the paper transfer roller between images. [0 to 2100 / <b>500</b> / 100 V/step]

2326	[Transfer Roller CL: Bias] Transfer Roller Cleaning: Bias Adjustment		
001	Positive	*ENG	[0 to 2100 / <b>500</b> / 100 V/step]
	Adjusts the positive voltage of the paper transfer roller for cleaning the paper transfer roller.		
002	Negative	*ENG	[10 to 400 / <b>100</b> / 10 %/step]
	Adjusts the negative current of the paper transfer roller for cleaning the paper transfer roller.		
003	Positive	*ENG	[0 to 2100 / <b>2000</b> / 100 V/step]
	Adjusts the negative current limit of the paper transfer roller for cleaning the paper transfer roller.		



004	Negative	*ENG	[10 to 400 / <b>100</b> / 10 %/step]
-----	----------	------	--------------------------------------

2351	[Common: BW: Bias] Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	ITB unit: Plain	*ENG	[0 to 80 / <b>C3c: 33, C3d: 41</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt in B/W mode for plain paper.		
002	ITB unit: Thick 1	*ENG	[0 to 80 / <b>25</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt in B/W mode for thick 1 paper.		
003	ITB unit: Thick 2 & FINE	*ENG	[0 to 80 / <b>12</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt in B/W mode for thick 2 paper or FINE mode.		

2357	[Common: FC: Bias] Image Transfer Belt: Full Color: Bias Adjustment Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	ITB unit: Plain: Bk	*ENG	[0 to 80 / <b>C3c: 30, C3d: 37</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Black in full color mode for plain paper.		
002	ITB unit: Plain: M	*ENG	[0 to 80 / <b>C3c: 33, C3d: 41</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Magenta in full color mode for plain paper.		
003	ITB unit: Plain: C	*ENG	[0 to 80 / <b>C3c: 30, C3d: 37</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Cyan in full color mode for plain paper.		
004	ITB unit: Plain: Y	*ENG	[0 to 80 / <b>C3c: 38, C3d: 47</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Yellow in full color mode for plain paper.		
005	ITB unit: Thick 1: Bk	*ENG	[0 to 80 / <b>22</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Black in full color mode for thick 1 paper.		
006	ITB unit: Thick 1: M	*ENG	[0 to 80 / <b>25</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Magenta in full color mode for thick 1 paper.		

007	ITB unit: Thick 1: C	*ENG	[0 to 80 / <b>22</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Cyan in full color mode for thick 1 paper.		
008	ITB unit: Thick 1: Y	*ENG	[0 to 80 / <b>28</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Yellow in full color mode for thick 1 paper.		
009	ITB unit: Thick 2 & FINE: Bk	*ENG	[0 to 80 / <b>11</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Black in full color mode for Thick 2 and fine.		
010	ITB unit: Thick 2 & FINE: M	*ENG	[0 to 80 / <b>12</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Magenta in full color mode for Thick 2 and fine.		
011	ITB unit: Thick 2 & FINE: C	*ENG	[0 to 80 / <b>11</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Cyan in full color mode for Thick 2 and fine.		
012	ITB unit: Thick 2 & FINE: Y	*ENG	[0 to 80 / <b>14</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Yellow in full color mode for Thick 2 and fine.		

2360	[Common: BW Environment Correction]		
001	ITB unit: Plain	*ENG	[1 to 60 / 1 / 1 /step]
002	ITB unit: Thick 1	*ENG	
003	ITB unit: Thick 2	*ENG	
004	ITB unit: Plain: Bk	*ENG	[1 to 60 / <b>13</b> / 1 /step]
005	ITB unit: Plain: M	*ENG	[1 to 60 / 2 / 1 /step]
006	ITB unit: Plain: C	*ENG	
007	ITB unit: Plain: Y	*ENG	
008	ITB unit: Thick 1: Bk	*ENG	[1 to 60 / <b>31</b> / 1 /step]

009	ITB unit: Thick 1: M	*ENG	[1 to 60 / <b>2</b> / 1 /step]
010	ITB unit: Thick 1: C	*ENG	
011	ITB unit: Thick 1: Y	*ENG	
012	ITB unit: Thick 2: Bk	*ENG	[1 to 60 / <b>31</b> / 1 /step]
013	ITB unit: Thick 2: M	*ENG	[1 to 60 / 1 / 1 /step]
014	ITB unit: Thick 2: C	*ENG	[1 to 60 / <b>2</b> / 1 /step]
015	ITB unit: Thick 2: Y	*ENG	[1 to 60 / <b>2</b> / 1 /step]

2401	[Plain: Bias]		
	Adjusts the DC voltage of the discharge plate for plain paper. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
002	Separation DC: Plain: 2nd Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
003	Separation DC: 1200: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
004	Separation DC: 1200: 2nd Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]

2403	[Plain: Bias: BW]		
	Adjusts the current for the paper transfer roller for plain paper in black-and-white mode. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 30, C3d: 38</b> / 1 - $\mu$ A / step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>7</b> / 1 - $\mu$ A /step]
004	Paper Transfer: 1200: 2nd Side	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]

2407	[Plain: Bias: FC]		
	Adjusts the current for the paper transfer roller for plain paper in full color mode. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 36, C3d: 44</b> / 1 - $\mu$ A / step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 250 / <b>C3c: 45, C3d: 55</b> / 1 - $\mu$ A / step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>10</b> / 1 - $\mu$ A /step]
004	Paper Transfer: 1200: 2nd Side	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]

5

2411	[Plain: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2403 and SP2407 are multiplied by these SP values. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain : 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: Plain: 2nd Side: S1	*ENG	
003	Paper Transfer: 1200: 1st Side: S1	*ENG	
004	Paper Transfer: 1200: 2nd Side: S1	*ENG	
005	Paper Transfer: Plain: 1st Side: S2	*ENG	[100 to 600 / <b>105</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
006	Paper Transfer: Plain: 2nd Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
007	Paper Transfer: 1200: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)

008	Paper Transfer: 1200: 2nd Side: S2	*ENG	[100 to 600 / <b>150</b> / 5%/step]
009	Paper Transfer: Plain: 1st Side: S3	*ENG	[100 to 600 / <b>110</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
010	Paper Transfer: Plain: 2nd Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step]
011	Paper Transfer: 1200: 1st Side: S3	*ENG	275 mm > S3 size > 210 mm (Paper width)
012	Paper Transfer: 1200: 2nd Side: S3	*ENG	[100 to 600 / <b>300</b> / 5%/step]
013	Paper Transfer: Plain: 1st Side: S4	*ENG	[100 to 600 / <b>115</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer: Plain: 2nd Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
015	Paper Transfer: 1200: 1st Side: S4	*ENG	[100 to 600 / <b>240</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
016	Paper Transfer: 1200: 2nd Side: S4	*ENG	[100 to 600 / <b>340</b> / 5%/step]
017	Paper Transfer: Plain: 1st Side: S5	*ENG	[100 to 600 / <b>120</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer: Plain: 2nd Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)
019	Paper Transfer: 1200: 1st Side: S5	*ENG	[100 to 600 / <b>300</b> / 5%/step] 148 mm > S5 size (Paper width)
020	Paper Transfer: 1200: 2nd Side: S5	*ENG	[100 to 600 / <b>400</b> / 5%/step]

2421	[Plain: Leading Edge Correction] Plain Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2403 and SP2407 are multiplied by these SP values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2422.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
004	Paper Transfer: 1200: 2nd side	*ENG	
2421	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2401 is multiplied by these SPs values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2422.</li> </ul>		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side	*ENG	
2422	[Plain: Switch Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		

001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side	*ENG	

2423	[Plain: Trailing Edge Correction] Plain Paper: Trailing Edge Correction
	<p>Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2403 and SP2407 are multiplied by these SP values.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2424.</li> </ul>

001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side	*ENG	

2424	[Plain: Switch Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side	*ENG	



2451	[Thin: Bias]		
	Adjusts the DC voltage of the discharge plate for thin paper. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/ step]
002	Separation DC: Plain: 2nd Side		
003	Separation DC: 1200: 1st Side	*ENG	
004	Separation DC: 1200: 2nd Side		

2453	[Thin: Bias: BW]		
	Adjusts the current for the paper transfer roller for thin paper in black-and-white mode. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c:30, C3d:38</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>11</b> / 1 - $\mu$ A /step]
004	Paper Transfer: 1200: 2nd Side		

2457	[Thin: Bias: FC]		
	Adjusts the current for the paper transfer roller for thin paper in full color mode. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c:40, C3d:50</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]
004	Paper Transfer: 1200: 2nd Side		

2461	[Thin: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2453 and SP2457 are multiplied by these SP values. Plain: High speed		

001	Paper Transfer: Plain: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side: S1		S1 size > 297 mm (Paper width)
005	Paper Transfer: Plain: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step]
006	Paper Transfer: Plain: 2nd Side: S2		297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: Plain: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step]
010	Paper Transfer: Plain: 2nd Side: S3		297 mm > S2 size > 275 mm (Paper width)
013	Paper Transfer: Plain: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step]
014	Paper Transfer: Plain: 2nd Side: S4		297 mm > S2 size > 275 mm (Paper width)
017	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step]
018	Paper Transfer: 2nd Side: S5		

2471	[Thin: Leading Edge Correction] Thin Paper: Leading Edge Correction		
	<p>Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2453 and SP2457 are multiplied by these SP values.</p> <p>Plain: High speed, 1200: Low speed</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2472.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd Side		
2471	<p>Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2451 is multiplied by these SP values.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2472.</li> </ul>		

005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
006	Separation DC: Plain: 2nd Side		
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side		

2472	[Thin: Switch Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed,		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd Side		
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side		
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side		

2473	[Thin: Trailing Edge Correction] Thin Paper: Trailing Edge Correction		
	Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2453 and SP2457 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div>			
<ul style="list-style-type: none"> <li>• The paper trailing edge area can be adjusted with SP2474.</li> </ul>			
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
004	Paper Transfer: 1200: 2nd Side		

005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
006	Separation DC: Plain: 2nd Side		
007	Separation DC: 1200: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
008	Separation DC: 1200: 2nd Side		

2474	[Thin: Switch Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd Side		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 50 / <b>0</b> / 1 mm/step]
006	Separation DC: Plain: 2nd Side		
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side		

2480	[Thin: Environment Correction]		
	Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
002	Separation DC: Plain: 2nd Side		
003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
004	Paper Transfer: Plain: BW: 2nd Side		
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]
006	Paper Transfer: Plain: FC: 2nd Side		

007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
008	Separation DC: 1200: 2nd Side		
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
010	Paper Transfer: 1200: BW: 2nd Side		
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]
012	Paper Transfer: 1200: FC: 2nd Side		

2481	[Glossy: Bias]		
001	Separation DC: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
	Adjusts the DC voltage of the discharge plate for glossy paper.		

2482	[Glossy: Bias: BW]		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]
	Adjusts the current for the paper transfer roller for glossy paper in black-and-white mode.		

2483	[Glossy: Bias: FC]		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]
	Adjusts the current for the paper transfer roller for glossy paper in full color mode.		

2484	[Glossy: Paper Size Correction]		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
005	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step]
009	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step]
013	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step]
017	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step]

2485	[Plain: Leading Edge Correction]		
------	----------------------------------	--	--

001	Paper Transfer: 1st Side	*ENG	[10 to 400 / <b>100</b> / 5%/step]
005	Separation DC: 1st Side	*ENG	[10 to 400 / <b>100</b> / 5%/step]]

2486	[Plain: Switch Timing: Lead. Edge]		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
005	Separation DC: 1st Side	*ENG	

2487	[Plain: Trailing Edge Correction]		
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5 %/step]
005	Separation DC: 1st Side	*ENG	

2488	[Plain: Switch Trail. Edge]		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
005	Separation DC: 1st Side	*ENG	

2489	[Glossy: Environment Correction]		
001	Separation DC: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
003	Paper Transfer: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
005	Paper Transfer: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]

2501	[Thick 1: Bias]		
	Adjusts the DC voltage of the discharge plate for thick 1 paper. Plain: High speed, 1200: Low speed		
	001	Separation DC: Plain: 1st Side	*ENG
	002	Separation DC: Plain: 2nd Side	*ENG
	003	Separation DC: 1200: 1st Side	*ENG
			[0 to 4000 / <b>3500</b> / 10 -V/step]

2502	[Thick 1: Bias: BW]		
	Adjusts the current for the paper transfer roller for thick 1 paper in black-and-white mode. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>24</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Separation DC: 1200: 1st Side	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]

2507	[Thick 1: Bias: FC]		
	Adjusts the current for the paper transfer roller for thick 1 paper in full color mode. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>30</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Separation DC: 1200: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2511	[Thick 1: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2502 and SP2507 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
003	Paper Transfer: 1200: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
005	Paper Transfer: Plain: 1st Side: S2	*ENG	[100 to 600 / <b>105</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
006	Paper Transfer: Plain: 2nd Side: S2	*ENG	[100 to 600 / <b>130</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)

007	Paper Transfer: 1200: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: Plain: 1st Side: S3	*ENG	[100 to 600 / <b>110</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
010	Paper Transfer: Plain: 2nd Side: S3	*ENG	[100 to 600 / <b>160</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
011	Paper Transfer: 1200: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
013	Paper Transfer: Plain 1: 1st Side: S4	*ENG	[100 to 600 / <b>115</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer: Plain: 2nd Side: S4	*ENG	[100 to 600 / <b>190</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
015	Paper Transfer: 1200: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
017	Paper Transfer: Plain 1: 1st Side: S5	*ENG	[100 to 600 / <b>120</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer: Plain: 2nd Side: S5	*ENG	[100 to 600 / <b>220</b> / 5%/step] 148 mm > S5 size (Paper width)
019	Paper Transfer: 1200: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)



2521	[Thick 1: Leading Edge Correction] Thick 1 Paper: Leading Edge Correction		
	<p>Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2502 and SP2507 are multiplied by these SP values. Plain: High speed, 1200: Low speed</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2522.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	* ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side	* ENG	
003	Paper Transfer: 1200: 1st Side	* ENG	[0 to 400 / <b>100</b> / 5%/step]
005	Separation DC: Plain: 1st Side	* ENG	[0 to 400 / <b>100</b> / 5%/step]
006	Separation DC: Plain: 2nd Side	* ENG	
007	Separation DC: 1200: 1st Side	* ENG	[0 to 400 / <b>100</b> / 5%/step]

2522	[Thick 1: Switch Timing: Lead. Edge]		
	<p>Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed</p>		
001	Paper Transfer: Plain 1: 1st Side	* ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	* ENG	
003	Paper Transfer: 1200: 1st Side	* ENG	
005	Separation DC: Plain 1: 1st Side	* ENG	[0 to 50 / <b>0</b> / 2 mm/step]
006	Separation DC: Plain 1: 2nd Side	* ENG	
007	Separation DC: 1200: 1st Side	* ENG	

2523	[Thick 1: Trail. Edge Correction] Thick 1 Paper: Trailing Edge Correction		
	Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2502 and SP2507 are multiplied by these SP values. Plain: High speed, 1200: Low speed <b>Note</b> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2524.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2524	[Thick 1: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / <b>0</b> / 1 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2530	[Thick 1: Environment Correction]		
	Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / <b>22</b> / 1 /step]
002	Separation DC: Plain: 2nd Side	*ENG	

003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
004	Paper Transfer: Plain: BW:2nd Side	*ENG	
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]
006	Paper Transfer: Plain: FC:2nd Side	*ENG	[1 to 60 / 11 / 1 /step]
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / 22 / 1 /step]
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]

2551	[Thick 2: Bias]		
	Adjusts the DC voltage of the discharge plate for thick 2 paper.		
001	Separation DC: 1st Side	*ENG	[0 to 4000 / 3500 / 10 -V/step]
002	Separation DC: 2nd Side	*ENG	

2553	[Thick 2: Bias: BW]		
	Adjusts the current for the paper transfer roller for thick 2 paper in black-and-white mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / 7 / 1 - $\mu$ A /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / 12 / 1 - $\mu$ A /step]

2558	[Thick 2: Bias: FC]		
	Adjusts the current for the paper transfer roller for thick 2 paper in full color mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / 16 / 1 - $\mu$ A /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / 15 / 1 - $\mu$ A /step]

2561	[Thick 2: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2553 and SP2558 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / 100 / 5%/step]
002	Paper Transfer: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)

003	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>105</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
004	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>160</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
005	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>110</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
006	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>260</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
007	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>120</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
008	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>430</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
009	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>140</b> / 5%/step] 148 mm > S5 size (Paper width)
010	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>600</b> / 5%/step] 148 mm > S5 size (Paper width)

2571	[Thick 2: Leading Edge Correction] Thick 2 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2553 and SP2558 are multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2572.</li> </ul>		
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side	*ENG	

2571	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2551 is multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2572.</li> </ul>		
003	Separation DC: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
004	Separation DC: 2nd Side	*ENG	

2572	[Thick 2: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2mm/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2573	[Thick 2: Trail. Edge Correction] Thick 2 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2553 and SP2558 are multiplied by these SP values.		
<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2574.</li> </ul>			
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
004	Separation DC: 2nd Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]

2574	[Thick 2: Trail. Edge Correction]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area.		

001	Paper Transfer: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2580	[Thick 2 Environment Correction]		
001	Separation DC: 1st Side	*ENG	[1 to 60 / <b>22</b> / 1 /step]
002	Separation DC: 2nd Side	*ENG	
003	Paper Transfer: BW: 1st Side	*ENG	[0 to 60 / <b>11</b> / 1 /step]
004	Paper Transfer: BW: 2nd Side	*ENG	
005	Paper Transfer: FC: 1st Side	*ENG	[1 to 60 / <b>53</b> / 1 /step]
006	Paper Transfer: FC: 2nd Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]

2601	[OHP: Bias]		
	Adjusts the DC voltage of the discharge plate for OHP.		
001	Separation DC	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]

2603	[OHP: Bias: BW]		
	Adjusts the current for the paper transfer roller for OHP in black-and-white mode.		
001	Paper Transfer	*ENG	[0 to 250 / <b>12</b> / 1 -µA /step]

2608	[OHP: Bias: FC]		
	Adjusts the current for the paper transfer roller for OHP in full color mode.		
001	Paper Transfer	*ENG	[0 to 250 / <b>15</b> / 1 -µA /step]

2611	[OHP: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2603 and SP2608 are multiplied by these SP values.		

001	Paper Transfer: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: S2	*ENG	[100 to 600 / <b>140</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
003	Paper Transfer: S3	*ENG	[100 to 600 / <b>200</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
004	Paper Transfer: S4	*ENG	[100 to 600 / <b>260</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
005	Paper Transfer: S5	*ENG	[100 to 600 / <b>330</b> / 5%/step] 148 mm > S5 size (Paper width)

2621	[OHP: Leading Edge Correction]		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2603 and SP2608 are multiplied by these SP values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2622.</li> </ul>		
001	Paper Transfer	*ENG	[0 to 400 / <b>100</b> / 5%/step]
2621	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2601 is multiplied by these SP values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2622.</li> </ul>		
	002	Separation DC	*ENG [0 to 400 / <b>100</b> / 5%/step]

2622	[OHP: Switch Timing: Leading Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.		
001	Paper Transfer	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Separation DC	*ENG	

2623	[OHP: Trailing Edge Correction]		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2603 and SP2608 are multiplied by these SP values.		
<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div>			
<ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2624.</li> </ul>			
001	Paper Transfer	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Separation DC	*ENG	

2624	[OHP: Trailing Edge Correction]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area.		
001	Paper Transfer	*ENG	[0 to 50 / <b>0</b> / 1 mm/step]
002	Separation DC	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]

2630	[OHP: Environment Correction]		
001	Separation DC	*ENG	[1 to 60 / <b>22</b> / 1 /step]
002	Paper Transfer: BW	*ENG	[1 to 60 / <b>11</b> / 1 /step]
003	Paper Transfer: FC	*ENG	[1 to 60 / <b>1</b> / 1 /step]

2650	[Thick3: Bias]		
	Adjusts the DC voltage of the discharge plate for thick paper 3.		
001	Separation DC: 1st Side	*ENG	[0 to 3500 / <b>0</b> / 10 -V/step]
002	Separation DC: 2nd Side	*ENG	

2651	[Thick3: Bias: BW]		
	Adjusts the current for the paper transfer roller for thick paper 3 in black-and-white mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>10</b> / 1 -μA /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / <b>12</b> / 1 -μA /step]




2652	[Thick3: Bias: FC]		
	Adjusts the current for the paper transfer roller for thick paper 3 in full color mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>11</b> / 1 - $\mu$ A /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2653	[Thick3: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2651 and SP2652 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>100</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
003	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>100</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
004	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
005	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>100</b> / 5%/step] 148 mm > S5 size (Paper width)
006	Paper Transfer: 2nd Side: S1	*ENG	[100 to 600 / <b>260</b> / 5%/step] S1 size > 297 mm (Paper width)
007	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>100</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
008	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>430</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)

009	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / 100 / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
010	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / 600 / 5%/step] 148 mm > S5 size (Paper width)

2654	[Thick 3: Leading Edge Correction] Thick 3 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2651 and SP2652 are multiplied by these SP values.		
<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>• The paper leading edge area can be adjusted with SP2655.</li> </ul>			
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Separation DC: 1st Side	*ENG	
2654	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2650 is multiplied by these SP values.		
<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>• The paper leading edge area can be adjusted with SP2655.</li> </ul>			
003	Paper Transfer: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]
004	Separation DC: 2nd Side	*ENG	

2655	[Thick 3: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Separation DC: 1st Side	*ENG	
003	Paper Transfer: 2nd Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2656	[Thick 3: Trail. Edge Correction] Thick 3 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2651 and SP2652 are multiplied by these SP values.		
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div>		
	<ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2657.</li> </ul>		
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2657	[Thick 3: Trail. Edge Correction]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2660	[Thick 3: Environment Correction] Thick 3 Paper: MM Environment Coefficient Adjustment		
	Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2651 and SP2652 are multiplied by these SP values.		
001	Separation DC: 1st Side	*ENG	[1 to 60 / 22 / 1 /step]
002	Separation DC: 2nd Side	*ENG	
	Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2650 is multiplied by these SP values.		
003	Paper Transfer: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
004	Paper Transfer: BW: 2nd Side	*ENG	
005	Paper Transfer: FC: 1st Side	*ENG	[1 to 60 / 55 / 1 /step]

006	Paper Transfer: FC: 2nd Side	*ENG	[1 to 60 / 11 / 1 /step]
-----	------------------------------	------	--------------------------

2670	[Thick4: Bias]		
	Adjusts the DC voltage of the discharge plate for thick paper 4.		

001	Separation DC: 1st Side	*ENG	[0 to 4000 / 3500 / 10 -V/step]
002	Separation DC: 2nd Side	*ENG	

2671	[Thick4: Bias: BW]		
	Adjusts the current for the paper transfer roller for thick paper 4 in black-and-white mode.		

001	Paper Transfer: 1st Side	*ENG	[0 to 250 / 10 / 1 -µA /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / 12 / 1 -µA /step]



2672	[Thick4: Bias: FC]		
	Adjusts the current for the paper transfer roller for thick paper 4 in full color mode.		

001	Paper Transfer: 1st Side	*ENG	[0 to 250 / 11 / 1 -µA /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / 15 / 1 -µA /step]

2673	[Thick4: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2671 and SP2672 are multiplied by these SP values.		

001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / 100 / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: 2nd Side: S1	*ENG	[100 to 600 / 100 / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
003	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / 100 / 5%/step] 275 mm > S3 size > 210 mm (Paper width)

004	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
005	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>100</b> / 5%/step] 148 mm > S5 size (Paper width)
006	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>260</b> / 5%/step] S1 size > 297 mm (Paper width)
007	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>100</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
008	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>430</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
009	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>100</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
010	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>600</b> / 5%/step] 148 mm > S5 size (Paper width)

2674	[Thick 4: Leading Edge Correction] Thick 4 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2671 and SP2672 are multiplied by these SP values.		
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>• The paper leading edge area can be adjusted with SP2675.</li> </ul>		
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Separation DC: 1st Side	*ENG	
2674	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2670 is multiplied by these SP values.		
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>• The paper leading edge area can be adjusted with SP2655.</li> </ul>		

003	Paper Transfer: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]
004	Separation DC: 2nd Side	*ENG	

2675	[Thick 4: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Separation DC: 1st Side	*ENG	
003	Paper Transfer: 2nd Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

5

2676	[Thick 4: Trail. Edge Correction] Thick 4 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2671 and SP2672 are multiplied by these SP values.		
<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2677.</li> </ul>			
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2677	[Thick 4: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2680	[Thick 4: Environment Correction] Thick 4 Paper: MM Environment Coefficient Adjustment		
	Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2671 and SP2672 are multiplied by these SP values.		
001	Separation DC: 1st Side	*ENG	[1 to 60 / <b>22</b> / 1 /step]
002	Separation DC: 2nd Side	*ENG	
2680	Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2670 is multiplied by these SP values.		
003	Paper Transfer: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
004	Paper Transfer: BW: 2nd Side:	*ENG	
005	Paper Transfer: FC: 1st Side	*ENG	[1 to 60 / <b>55</b> / 1 /step]
006	Paper Transfer: FC: 2nd Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]

5

2751	[Special 1: Bias]		
	Adjusts the DC voltage of the discharge plate for special paper 1. Plain: High speed, Thick 1: Middle speed		
001	Separation DC: Plain: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/ step]
002	Separation DC: Plain: 2nd Side	*ENG	
003	Paper Transfer: Thick 1: 1st Side	*ENG	

2753	[Special 1: Bias: BW]		
	Adjusts the current for the paper transfer roller for special paper 1 in black-and-white mode. Plain: High speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 30, C3d: 38</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>11</b> / 1 - $\mu$ A /step]

2757	[Special1: Bias: FC]		
	Adjusts the current for the paper transfer roller for special paper 1 in full color mode. Plain: High speed, Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 40, C3d: 50</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 250 / <b>C3c: 45, C3d: 55</b> / 1 - $\mu$ A /step]
003	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2761	[Special1: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2753 and SP2757 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
005	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step]
006	Paper Transfer: 2nd Side: S2	*ENG	297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step]
010	Paper Transfer: 2nd Side: S3	*ENG	275 mm > S3 size > 210 mm (Paper width)
013	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
017	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)



2771	[Special 1: Leading Edge Correction] Special 1 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2753 and SP2757 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2772.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
2771	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2751 is multiplied by these SP values.		
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2772.</li> </ul>		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]

2772	[Special 1: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 50 / 0 / 1 mm/step]
005	Separation DC: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2773	[Special 1: Trail. Edge Correction] Special 1 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2753 and SP2757 are multiplied by these SP values. Plain: High speed, 1200: Low speed <div style="border: 1px solid blue; border-radius: 15px; padding: 2px; display: inline-block;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2774.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2774	[Special 1: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2780	[Special 1: Environment Correction]		
	Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
002	Separation DC: Plain: 2nd Side	*ENG	[1 to 60 / <b>32</b> / 1 /step]

003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
004	Paper Transfer: Plain: BW:2nd Side	*ENG	
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]
006	Paper Transfer: Plain: FC:2nd Side	*ENG	[1 to 60 / 14 / 1 /step]
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / 26 / 1 /step]
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]

2801	[Special2: Bias]		
	Adjusts the DC voltage of the discharge plate for special paper 2. Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[0 to 4000 / 3500 / 10 -V/ step]
002	Separation DC: Plain: 2nd Side	*ENG	
003	Separation DC: 1200: 1st Side	*ENG	

2803	[Special2: Bias: BW]		
	Adjusts the current for the paper transfer roller for special paper 2 in black-and-white mode. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / C3c: 30/ C3d: 38 / 1 -μA /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 200 / 11 / 1 -μA /step]

2807	[Special2: Bias: FC]		
	Adjusts the current for the paper transfer roller for special paper 2 in full color mode. Plain: High speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / C3c: 40/ C3d: 50 / 1 -μA /step]

002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 250 / <b>C3c: 45 / C3d: 55</b> / 1 - $\mu$ A /step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2811	[Special2: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2803 and SP2807 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
005	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
006	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
010	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
013	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
017	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)

2821	[Special 2: Lead. Edge Correction] Special 2 Paper: Leading Edge Correction		
	<p>Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2803 and SP2807 are multiplied by these SP values.</p> <p>Plain: High speed, 1200: Low speed</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2822.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
2821	<p>Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2801 is multiplied by these SP values.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2822.</li> </ul>		
	005	Separation DC: Plain: 1st Side	*ENG
006	Separation DC: Plain: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]
007	Separation DC: 1200: 1st Side	*ENG	
2822	[Special 2: Sw Timing: Lead. Edge]		
	<p>Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.</p> <p>Plain: High speed, 1200: Low speed</p>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2823	[Special 2: Trail. Edge Correction] Special 2 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2803 and SP2807 are multiplied by these SP values. Plain: High speed, 1200: Low speed <div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2824.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2824	[Special 2: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2830	[Special 2: Environment Correction]		
	Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / 26 / 1 /step]
002	Separation DC: Plain: 2nd Side	*ENG	[1 to 60 / 32 / 1 /step]

003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
004	Paper Transfer: Plain: BW:2nd Side	*ENG	[1 to 60 / 11 / 1 /step]
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]
006	Paper Transfer: Plain: FC:2nd Side	*ENG	[1 to 60 / 14 / 1 /step]
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / 26 / 1 /step]
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]

2851	[Special 3: Bias]		
	Adjusts the DC voltage of the discharge plate for special paper 3. Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[0 to 4000 / 3500 / 10 -V/ step]
002	Separation DC: Plain: 2nd Side	*ENG	
003	Separation DC: 1200: 1st Side	*ENG	



2852	[Special 3: Bias: BW]		
	Adjusts the current for the paper transfer roller for special paper 3 in black-and-white mode. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / C3c: 30/ C3d: 38 / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / 11 / 1 - $\mu$ A /step]

2857	[Special 3: Bias: FC]		
	Adjusts the current for the paper transfer roller for special paper 3 in full color mode. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / C3c: 40/ C3d: 50 / 1 - $\mu$ A /step]

002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 250 / <b>C3c: 45/ C3d: 55</b> / 1 - $\mu$ A /step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2861	[Special 3: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2852 and SP2857 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
005	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
006	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
010	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
013	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer:: 2nd Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
017	Paper Transfer:: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer:: 2nd Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)



2871	[Special 3: Lead. Edge Correction] Special 3 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2852 and SP2857 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2872.</li> </ul>		
	001	Paper Transfer: Plain: 1st Side	*ENG
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]
003	Paper Transfer: 1200: 1st Side	*ENG	
2871	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2851 is multiplied by these SP values. <div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2872.</li> </ul>		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2872	[Special 3: Sw Timing: Lead. Edge]			
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed			
	001	Paper Transfer: Plain: 1st Side	*ENG	
	002	Paper Transfer: Plain: 2nd Side	*ENG	
	003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
	005	Separation DC: Plain: 1st Side	*ENG	
	006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Page	*ENG		

2873	[Special 3: Trail. Edge Correction] Special 3 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2852 and SP2857 are multiplied by these SP values. Plain: High speed, 1200: Low speed <b>Note</b> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2874.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Page	*ENG	

2874	[Special 3: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Page	*ENG	

2880	[Special 3: Environment Correction]		
	Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / 26 / 1 /step]
002	Separation DC: Plain: 2nd Side	*ENG	[1 to 60 / 32 / 1 /step]

003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
004	Paper Transfer: Plain: BW:2nd Side	*ENG	
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]
006	Paper Transfer: Plain: FC:2nd Side	*ENG	[1 to 60 / 11 / 1 /step]
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / 26 / 1 /step]
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]

2905	[Dev Rvs Time] Development Roller Reverse Time		
	Specified the time of the development roller reverse rotation after the development unit has stopped. The reverse rotation of the development roller is used for removing dust from the development roller.		
001	K	*ENG	[0 to 200 / 80 / 10 msec/step]
002	M	*ENG	
003	C	*ENG	
004	Y	*ENG	
005	[Dev Rvs Threshold Counter]		
	Specified the threshold distance for the development roller reverse mode. This SP refers to the counters for SP2905-006 to -009.		
	All	*ENG	[0 to 400000 / 4000 / 10 mm/step]
	[Dev Rvs Counter]		
006	K	*ENG	[0 to 999999999 / - / 1 mm/step]
007	M	*ENG	
008	C	*ENG	
009	Y	*ENG	

2907	[Acs Setting (FC to Bk)]		
	<p>Adjusts the threshold for moving away the image transfer belt from the color PCDUs. This SP moves the image transfer belt away from the color PCDUs when the number of B/W image printouts reaches the number of sheets specified with this SP after consecutive full color image printouts in the full color mode.</p> <p>If this SP is set to "0", the image transfer belt does not move away.</p>		
001	Continuous Bk Pages	*ENG	[0 to 10 / 0 / 1 sheet/step]
2920	[Trans Mot Control]		
001	0: Encoder 1 :FG	*ENG	[0 or 1 / 0 / 1 /step]
	<p>Selects the speed control mode for the ITB.</p> <p>If SC443 occurs and machine does not recover, change this setting to "1".</p>		
002	SC443-00 Count	*ENG	[0 to 3 / 0 / 1 /step]
	<p>Displays the number of the ITB encode error. SC443 is displayed if this counter counts to "3".</p>		
2930	[SecondaryFB: Threshold] Paper Transfer Roller Feed-back: Threshold Adjustment		
<p>Adjusts the threshold between high resistance (division 1) and low resistance (division 2) at the paper transfer roller. This SP affects SP2931 to SP2939.</p>			
001	Voltage	*ENG	[0 to 7000 / 6000 / 10 -V/step]
2960	[Process Interval]		
001	Additional Time	*ENG	[0 to 10 / 0 / 1 sec/step]
	<p>Adjusts the additional time for ending the machine's process.</p>		
2970	[Cleaning After JOB]		
001	No Refresh	*ENG	[0 to 100 / 33 / 1 /step] 0: No cleaning
	<p>Specifies the threshold sheets for the cleaning of the paper transfer roller without the refresh mode.</p>		

002	Refresh	*ENG	[0 or 1 / 1 / 1 /step] 0: No cleaning, 1: Cleaning
-----	---------	------	---

2971	T1 Non Image Area ON Timing		
001	Standard Speed	*ENG	[-300 to 260 / <b>C3c: 10</b> / 10 msec/step] [-240 to 240 / <b>C3d: 30</b> / 10 msec/step]
	Adjusts the timing for the non-image area bias of the image transfer roller.		
002	Medium Speed	*ENG	[-400 to 290 / <b>0</b> / 10 msec/step]
003	Low Speed	*ENG	[-790 to 410 / <b>0</b> / 10 msec/step]

2972	B/W Image Request Timing		
001	Standard Speed	*ENG	[0 to 4000 / <b>0</b> / 10 msec/step]
002	Medium Speed	*ENG	[0 to 4000 / <b>0</b> / 10 msec/step]
003	Low Speed	*ENG	[0 to 4000 / <b>0</b> / 10 msec/step]

2973	Forced Process Down Threshold		
001	-	*ENG	[0 to 5000 / <b>0</b> / 10 page/step]

2974	OPC PreCharge Time Control		
001	Standard Speed	*ENG	[0 to 1250 / <b>197</b> / 1 msec/step]
002	Medium Speed	*ENG	[0 to 1500 / <b>146</b> / 1 msec/step]
003	Low Speed	*ENG	[0 to 2600 / <b>0</b> / 1 msec/step]

2980	Continuous Job Page		
001	-	*ENG	[0 to 300 / <b>100</b> / 10 page/step]
002	-	*ENG	[0 to 600 / <b>30</b> / 10 sec/step]
003	-	*ENG	[0 to 600 / <b>30</b> / 10 sec/step]

2990	Print Duty Control		
------	--------------------	--	--

001	Duty Control State	*ENG	[0 or 1 / - / 1 /step] 0: No limit, 1: Limit
002	Exec Interval: Duty Control	*ENG	[60 to 3600 / <b>300</b> / 10 min./step]
003	Duty Control Thresh	*ENG	[0 to 999999999 / <b>0</b> / 1 mm/step]
004	Forced CPM Down Thresh: No Duty Control	*ENG	[0 to 5000 / <b>0</b> / 1 page/step]
005	Drum Stop Time: No Duty Control	*ENG	[300 to 1500 / <b>500</b> / 10 msec/step]
006	ITB Stop Time: No Duty Control	*ENG	[300 to 1500 / <b>500</b> / 10 msec/step]
007	Forced CPM Down Thresh: Duty Control	*ENG	[0 to 5000 / 1 / 1 page/step]
008	Drum Stop Time: Duty Control	*ENG	[300 to 20000 / <b>7500</b> / 10 msec/step]
009	ITB Stop Time: Duty Control	*ENG	[300 to 20000 / <b>7500</b> / 10 msec/step]
010	Duty Control: Start Time	*ENG	Displays the time of the duty control execution.
011	Execution Temp. Threshold	*ENG	Sets the threshold of the duty control execution temperature. [ 20 to 70 / <b>39.8</b> / 0.1/step]
012	Cancellation Temp. Threshold	*ENG	Sets the threshold of the duty control cancellation temperature. [ 0.1 to 20 / 1 / 0.1/step]
013	ON/OFF Setting	*ENG	Turns duty control off or on. <b>0: OFF</b> 1: ON

## Main SP Tables-3

### SP3-XXX (Process)

3011	[Process Cont. Manual Execution]		
001	Normal	-	Executes the normal process control manually (potential control). Check the result with SP3-325-001 and 3-012-001 after executing this SP.
002	Density Adjustment	-	Executes the toner density adjustment manually.
003	Pre-ACC	-	Executes the process control that is normally done before ACC. The type of process control is selected with SP3-041-004.
004	Full MUSIC	-	Executes the process control that is normally done at the same time as MUSIC. This SP does the MUSIC (line position adjustment) twice.
005	Normal MUSIC	-	Executes the process control that is normally done at the same time as MUSIC. This SP does the MUSIC (line position adjustment) once.

3012	[Process Cont. Check Result] Process Control Self-check Result		
	<p>Displays the result of the latest process control self-check.</p> <p>All colors are displayed. The results are displayed in the order "Y C M K" e.g., 11 (Y) 99 (C) 11 (M) 11 (K): The self-check for Cyan failed but the others were successful.</p> <p>See the "Error Condition Tables" in the "Appendix: Process Control Error Conditions" section for details.</p>		

001	History: Latest	*ENG	[1111 to 99999999 / - / 1/step]
002	Result: Latest 1	*ENG	
003	Result: Latest 2	*ENG	
004	Result: Latest 3	*ENG	
005	Result: Latest 4	*ENG	
006	Result: Latest 5	*ENG	
007	Result: Latest 6	*ENG	
008	Result: Latest 7	*ENG	
009	Result: Latest 8	*ENG	
010	Result: Latest 9	*ENG	

3013	[T Sensor Initial Set: Exe] Developer Initialization Setting		
001	Execution: ALL	-	Executes the developer initialization for each color.
002	Execution: COL	-	
003	Execution: Bk	-	
004	Execution: M	-	
005	Execution: C	-	
006	Execution: Y	-	

3014	[T Sensor Initial Set:Exe] Developer Initialization Result: Display		
001	Display: YCMK	*ENG	[0 to 9999 / - / 1 /step ] 1: Success, 2 to 9: Failure
	<p>Displays the developer initialization result. See section "Developer Initialization Result" in the "Appendix: Process Control Error Conditions" section for details on the meaning of each code.</p> <p>All colors are displayed. Values are displayed in the order Y C M Bk. e.g., 1 (Y) 2 (C) 1 (M) 1 (Bk): Initialization of Cyan failed but the others succeeded.</p>		



3015	[Forced Toner Supply: Execute] Forced Toner Supply ([Color])		
001	Execution: ALL	-	Executes the manual toner supply to the development unit.
002	Execution: COL	-	
003	Execution: Bk	-	
004	Execution: M	-	
005	Execution: C	-	
006	Execution: Y	-	

3016	[Forced Toner Supply: Setting]		
	Specifies the manual toner supply time for each color.		
001	Supply Time: Bk	*ENG	[0 to 30 / 4 / 1 sec/step]
002	Supply Time: M	*ENG	
003	Supply Time: C	*ENG	
004	Supply Time: Y	*ENG	

3041	[Process Control Type]		
001	Voltage Control	*ENG	[0 or 1 / 1 / 1/step ] Alphanumeric 0: FIXED (Use the fixed values for the charge DC bias and development DC bias set with SP2-005 and SP2-229.) 1: CONTROL
	Enables or disables potential control.		
002	LD Power Control	*ENG	[0 or 1 / 1 / 1/step] Alphanumeric 0: FIXED (at the value in SP2221-xxx) 1: CONTROL (adjusted by process control)
	Selects the LD power control mode.		

003	AutoControl Prohibition Set	*ENG	[0 or 1 / 0 / -] 0: Permit, 1: Forbid
	Enables or disables the automatic process control prohibition.		
004	Pre-ACC Process Control	*ENG	[0 to 2 / 2 / 1/step] 0: Not Executed 1: Process Control 2: TC Control (TD Adjustment) 3: Not used
	Selects the process control mode that is done before ACC.		
005	Pattern Calculation Method	*ENG	[0 to 2 / 2 / 1/step] 0: FIXED 1: INITIALIZED 2: CALCULATED
	Selects the process control method.		

3043	[TD Adjustment Mode]		
001	Repeat Number: Power ON	*ENG	[0 to 9 / 4 / 1 time/step]
	Specifies the maximum number of repeats of the toner density adjustment at power on. 0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled		
002	Repeat Number: Initialization	*ENG	[0 to 9 / 3 / 1 time/step]
	Specifies the maximum number of repeats of the toner density adjustment at the developer initialization. 0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled		

003	Repeat Number: Non-use	*ENG	[0 to 9 / 0 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment in stand by mode.</p> <p>0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled</p>		
004	Repeat Number: ACC	*ENG	[0 to 9 / 3 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment at ACC.</p> <p>0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled</p>		
005	Repeat Number: Recovery	*ENG	[0 to 9 / 0 / 1 time/step]
	Not used		
006	Repeat Number: Job End	*ENG	[0 to 9 / 4 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment at job end.</p> <p>0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled</p>		
007	Repeat: Interrupt	*ENG	[0 to 9 / 0 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment during printing. <b>DFU</b></p>		
008	Toner Supply Coefficient	*ENG	[0 to 25.5 / 10 / 0.1 sec/step]
	Adjusts the time for the toner supply mode when a toner density is detected to be low.		

009	Consumption pattern: Bk	*ENG	[0 to 255 / 5 / 1 time/step]
	Specifies the belt mark generating time for checking the black toner density when toner density is detected to be low at the toner density adjustment.		
010	Consumption pattern: M	*ENG	[0 to 255 / 5 / 1 time/step]
	Specifies the belt mark generating time for checking the magenta toner density when toner density is detected to be low at the toner density adjustment.		
011	Consumption pattern: C	*ENG	[0 to 255 / 5 / 1 time/step]
	Specifies the belt mark generating time for checking the cyan toner density when toner density is detected to be low at the toner density adjustment.		
012	Consumption pattern: Y	*ENG	[0 to 255 / 5 / 1 time/step]
	Specifies the belt mark generating time for checking the yellow toner density when toner density is detected to be low at the toner density adjustment.		
013	T1 Bias: Bk	*ENG	[0 to 80 / C3c: 30, C3d: 37 / 1 $\mu$ A/step]
	Adjusts the image transfer belt bias for Black.		
014	T2 Bias: M	*ENG	[0 to 80 / C3c: 33, C3d: 41 / 1 $\mu$ A/step]
	Adjusts the image transfer belt bias for Magenta.		
015	T3 Bias: C	*ENG	[0 to 80 / C3c: 30, C3d: 37 / 1 $\mu$ A/step]
	Adjusts the image transfer belt bias for Cyan.		
016	T4 Bias: Y	*ENG	[0 to 80 / C3c: 38, C3d: 47 / 1 $\mu$ A/step]
	Adjusts the image transfer belt bias for Yellow.		
017	Developer Mixing Time	*ENG	[0 to 250 / 10 / 1 sec/step]
	Specifies the developer mixing time at the toner density adjustment.		
018	Consumption Pat: LD: DUTY: Bk	*ENG	[0 to 15 / 15 / 1 /step]
	Adjusts the LD duty for the toner consumption mode at the toner density adjustment. In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-001) exceed the target values (SP3611-005) by more than the specified thresholds (SP3239-009).		

019	Consumption Pat: LD: DUTY: M	*ENG	[0 to 15 / <b>15</b> / 1 /step]
	Adjusts the LD duty for the toner consumption mode at the toner density adjustment. In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-002) exceed the target values (SP3611-006) by more than the specified thresholds (SP3239-009).		
020	Consumption Pat: LD: DUTY: C	*ENG	[0 to 15 / <b>15</b> / 1 /step]
	Adjusts the LD duty for the toner consumption mode at the toner density adjustment. In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-003) exceed the target values (SP3611-007) by more than the specified thresholds (SP3239-009).		
021	Consumption Pat: LD: DUTY: Y	*ENG	[0 to 15 / <b>15</b> / 1 /step]
	Adjusts the LD duty for the toner consumption mode at the toner density adjustment. In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-004) exceed the target values (SP3611-008) by more than the specified thresholds (SP3239-009).		

5

3044	[Toner Supply Type]		
	Selects the toner supply method type.		
001	Bk	*ENG	[0 to 4 / <b>4</b> / 1/step] Alphanumeric
002	M	*ENG	0: FIXED (with the supply rates stored with SP 3401) 1: PID (Vtref_Fixed) 2: PID (Vtref_Control) 3: Not used 4:MBD (Vtref_Control)
003	C	*ENG	
004	Y	*ENG	

3045	[Toner End Detection: Set]		
	Enables/disables the toner alert display on the LCD.		
001	ON/OFF	*ENG	[0 or 1 / <b>0</b> / 1/step] 0: Detect, 1: Not Detect

3102	[Toner End Recovery]		
	Adjusts the number of times toner supply is attempted for each color when the TD sensor continues to detect toner end during toner recovery.		
001	Repeat: Bk	*ENG	[1 to 20 / <b>5</b> / 1 time/step]
002	Repeat: M	*ENG	
003	Repeat: C	*ENG	
004	Repeat: Y	*ENG	

3131	[TE Count m: Display]		
	Display the number of toner end detections for each color.		
001	Bk	*ENG	[0 to 99 / - / 1 time/step]
002	M	*ENG	
003	C	*ENG	
004	Y	*ENG	

3201	[TD Sensor: Vt Display]		
	Display the current voltage of the TD sensor for each color.		
001	Current: Bk	*ENG	[0 to 5.5 / - / 0.01 V/step]
002	Current: M	*ENG	
003	Current: C	*ENG	
004	Current: Y	*ENG	

3211	[Vt Shift: Display/Set]		
	Adjusts the Vt correction value for each line speed. Thick 1: 154 mm/sec, Thick 2&Fine: 77 mm/sec		
001	Thick 1 Shift: Bk	*ENG	[0 to 5 / <b>C3c: 0.18, C3d: 0.38</b> / 0.01 V/step]

002	Thick 1 Shift: M	*ENG	[0 to 5 / C3c: 0.18, C3d: 0.36 / 0.01 V/step]
003	Thick 1 Shift: C	*ENG	[0 to 5 / C3c: 0.17 C3d: 0.34 / 0.01 V/step]
004	Thick 1 Shift: Y	*ENG	[0 to 5 / C3c: 0.19 C3d: 0.35 / 0.01 V/step]
005	Thick 2 & FINE Shift: Bk	*ENG	[0 to 5 / C3c: 0.46, C3d:0.64 / 0.01 V/step]
006	Thick 2 & FINE Shift: M	*ENG	[0 to 5 / C3c: 0.44, C3d: 0.61 / 0.01 V/step]
007	Thick 2 & FINE Shift: C	*ENG	[0 to 5 / C3c: 0.43, C3d: 0.6 / 0.01 V/step]
008	Thick 2 & FINE Shift: Y	*ENG	[0 to 5 / C3c: 0.48, C3d: 0.66 / 0.01 V/step]
009	Mid TCShift: Bk	*ENG	[-0.5 to 0.5 / 0 / 0.01 V/step]
010	Mid TCShift: M	*ENG	
011	Mid TCShift: C	*ENG	
012	Mid TCShift: Y	*ENG	
013	Low TCShift: Bk	*ENG	[-0.5 to 0.5 / 0 / 0.01 V/step]
014	Low TCShift: M	*ENG	
015	Low TCShift: C	*ENG	
016	Low TCShift: Y	*ENG	

3221	[Vtcnt: Display/Set]
	Displays or adjusts the current Vtcnt value for each color.

001	Current: Bk	* ENG	[0 to 5 / <b>3.86</b> / 0.01 V/step]
002	Current: M	* ENG	
003	Current: C	* ENG	
004	Current: Y	* ENG	
005-008	Displays or adjusts the Vtcnt value for each color at developer initialization. <b>DFU</b>		
005	Initial: Bk	* ENG	[0 to 5 / <b>3.86</b> / 0.01 V/step]
006	Initial: M	* ENG	
007	Initial: C	* ENG	
008	Initial: Y	* ENG	

3222	[Vtref: Display/Set]		
	Displays or adjusts the current Vtref value for each color.		
001	Current: Bk	* ENG	[0 to 5.5 / <b>3</b> / 0.01 V/step]
002	Current: M	* ENG	
003	Current: C	* ENG	
004	Current: Y	* ENG	
005-008	Displays or adjusts the Vtref value for each color at developer initialization. <b>DFU</b>		
005	Initial: Bk	* ENG	[0 to 5.5 / - / 0.01 V/step]
006	Initial: M	* ENG	
007	Initial: C	* ENG	
008	Initial: Y	* ENG	
009-012	Displays and adjusts Vtref correction by pixel coverage for each color. <b>DFU</b>		
009	Pixel Correction: Bk	* ENG	[-5 to 5.5 / - / 0.01 V/step]
010	Pixel Correction: M	* ENG	
011	Pixel Correction: C	* ENG	
012	Pixel Correction: Y	* ENG	



3239	[Vtref Correction: Setting]		
	Adjusts the parameter for Vtref correction at the process control.		
001	(+)Consumption: Bk	*ENG	[0 to 1 / <b>0.04</b> / 0.01 V/step]
002	(+)Consumption: M	*ENG	
003	(+)Consumption: C	*ENG	
004	(+)Consumption: Y	*ENG	
005	(-)Consumption: Bk	*ENG	
006	(-)Consumption: M	*ENG	
007	(-)Consumption: C	*ENG	
008	(-)Consumption: Y	*ENG	
009-012	Threshold for development gamma rank.		
009	P Rank 1 Threshold	*ENG	[0 to 2 / <b>0.2</b> / 0.1 /step]
010	P Rank 2 Threshold	*ENG	[0 to 2 / <b>0.05</b> / 0.1 /step]
011	P Rank 3 Threshold	*ENG	[-2 to 0 / <b>-0.05</b> / 0.1 /step]
012	P Rank 4 Threshold	*ENG	[-2 to 0 / <b>-0.2</b> / 0.1 /step]
013-014	Threshold for image density rank on the image transfer belt.		
013	T Rank 1 Threshold	*ENG	[-1 to 0 / <b>-0.2</b> / 0.01 V/step]
014	T Rank 2 Threshold	*ENG	[0 to 1 / <b>0.2</b> / 0.01 V/step]
021-028	Sets the correction coefficient of the Vtref correction.		
021	Correction Coefficient 1: Bk	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
022	Correction Coefficient 1: M	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
023	Correction Coefficient 1: C	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
024	Correction Coefficient 1: Y	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
025	Correction Coefficient 2: Bk	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
026	Correction Coefficient 2: M	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
027	Correction Coefficient 2: C	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]

028	Correction Coefficient 2: Y	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
-----	-----------------------------	------	----------------------------------

3241	[Background Potential Setting]		
001	Coefficient: Bk	*ENG	These are parameters for calculating the charge bias referring to the development bias at process control. [-1000 to 1000 / <b>0</b> / 1 /step] DC charge bias = Development bias x (1 + 0.001 x these vales) + SP3-241-005 to -008
002	Coefficient: M	*ENG	
003	Coefficient: C	*ENG	
004	Coefficient: Y	*ENG	
005	Offset: Bk	*ENG	These are additional values for calculating the charge bias referring to the development bias at process control.
006	Offset: M	*ENG	
007	Offset: C	*ENG	[0 to 255 / <b>140</b> / 1 V/step]
008	Offset: Y	*ENG	DC charge bias = Development bias x (1 + 0.001 x SP3-241-001 to -004) + these values

3242	[LD Power Setting]		
	Adjusts the coefficient for LD power control value at the process control.		
001	StdSpd:Coefficient: Bk	*ENG	[-1000 to 1000 / <b>124</b> / 1 /step]
002	StdSpd:Coefficient: M	*ENG	
003	StdSpd:Coefficient: C	*ENG	
004	StdSpd:Coefficient: Y	*ENG	
005	StdSpd:Offset: Bk	*ENG	[-1000 to 1000 / <b>4</b> / 1 /step]
006	StdSpd:Offset: M	*ENG	
007	StdSpd:Offset: C	*ENG	
008	StdSpd:Offset: Y	*ENG	
009	MidSpd:coef:Bk	*ENG	[-1000 to 1000 / <b>118</b> / 1 /step]
010	MidSpd:Coef:M	*ENG	[-1000 to 1000 / <b>117</b> / 1 /step]
011	MidSpd:Coef:C	*ENG	[-1000 to 1000 / <b>79</b> / 1 /step]
012	MidSpd:Coef:Y	*ENG	[-1000 to 1000 / <b>92</b> / 1 /step]

013	MidSpd:offset:Bk	*ENG	[-1000 to 1000 / <b>47</b> / 1 /step]
014	MidSpd:offset:M	*ENG	[-1000 to 1000 / <b>41</b> / 1 /step]
015	MidSpd:offset:C	*ENG	[-1000 to 1000 / <b>72</b> / 1 /step]
016	MidSpd:offset:Y	*ENG	[-1000 to 1000 / <b>59</b> / 1 /step]
017	LowSpd:Coef:Bk	*ENG	[-1000 to 1000 / <b>98</b> / 1 /step]
018	LowSpd:Coef:M	*ENG	[-1000 to 1000 / <b>104</b> / 1 /step]
019	LowSpd:Coef:C	*ENG	[-1000 to 1000 / <b>78</b> / 1 /step]
020	LowSpd:Coef:Y	*ENG	[-1000 to 1000 / <b>84</b> / 1 /step]
021	LowSpd:offset:Bk	*ENG	[-1000 to 1000 / <b>59</b> / 1 /step]
022	LowSpd:offset:M	*ENG	[-1000 to 1000 / <b>45</b> / 1 /step]
023	LowSpd:offset:C	*ENG	[-1000 to 1000 / <b>69</b> / 1 /step]
024	LowSpd:offset:Y	*ENG	[-1000 to 1000 / <b>65</b> / 1 /step]

3251	[Coverage]		
	These (-001 to -016) are coefficients for SP3-222-009 to -012.		
001	Latest Pixel: Bk	*ENG	Displays the latest coverage for each color. [0 to 9999 / - / 1 cm <sup>2</sup> /step]
002	Latest Pixel: M	*ENG	
003	Latest Pixel: C	*ENG	
004	Latest Pixel: Y	*ENG	
005-008	Displays the average coverage of each color for the Vtref correction. "Average S" is defined when the number of developed pages does not reach the number specified with SP3251-017.		
005	Average S: Bk	*ENG	[0 to 100 / - / 0.01 %/step]
006	Average S: M	*ENG	
007	Average S: C	*ENG	
008	Average S: Y	*ENG	

009-012	Displays the average coverage of each color for the Vtref correction. "Average M" is defined when the number of developed pages does not reach the number specified with SP3251-018.		
009	Average M: Bk	*ENG	[0 to 100 / - / 0.01 %/step]
010	Average M: M	*ENG	
011	Average M: C	*ENG	
012	Average M: Y	*ENG	
013-016	Displays the average coverage of each color for the Vtref correction. "Average L" is defined when the number of developed pages does not reach the number specified with SP3-251-019.		
013	Average L: Bk	*ENG	[0 to 100 / - / 0.01 %/step]
014	Average L: M	*ENG	
015	Average L: C	*ENG	
016	Average L: Y	*ENG	
017-019	Adjusts the threshold for SP3-251-005 to -016.		
017	Total Page Setting: S	*ENG	[1 to 100 / <b>10</b> / 1 sheet/step]
018	Total Page Setting: M	*ENG	[1 to 500 / <b>10</b> / 1 sheet/step]
019	Total Page Setting: L	*ENG	[1 to 999 / <b>50</b> / 1 sheet/step]
020-023	Adjusts the threshold for SP3-251-024 to -027.		
020	Total Page Setting: S2	*ENG	[1 to 100 / <b>40</b> / 1 sheet/step]
021	Total Page Setting: M2	*ENG	[1 to 500 / <b>10</b> / 1 sheet/step]
022	Total Page Setting: L2	*ENG	[1 to 999 / <b>50</b> / 1 sheet/step]
024-027	Displays the latest coverage ratio for each color.		
024	Latest Coverage: Bk	*ENG	[0 to 100 / - / 0.01 %/step]
025	Latest Coverage: M	*ENG	
026	Latest Coverage: C	*ENG	
027	Latest Coverage: Y	*ENG	

028	Displays the threshold of whether to perform developer churning or not.		
	DevMix Threshold	*ENG	[0 to 100 / <b>20</b> / 1 %/step]

3311	[ID Sensor DetectValue: Vofset]		
	Displays the ID sensor (regular) offset voltage for Vsg adjustments.		
001	Voffset reg: Bk	*ENG	[0 to 5 / - / 0.01 V/step]
002	Voffset reg: M	*ENG	[0 to 5.5 / - / 0.01 V/step]
003	Voffset reg: C	*ENG	
004	Voffset reg: Y	*ENG	
005-007	Displays the ID sensor (diffusion) offset voltage for Vsg adjustments.		
005	Voffset dif: M	*ENG	[0 to 5.5 / - / 0.01 V/step]
006	Voffset dif: C	*ENG	
007	Voffset dif: Y	*ENG	
008-010	Displays the ID sensor offset voltage for Vsg adjustments.		
008	Voffset TM (Front)	*ENG	[0 to 5.5 / - / 0.01 V/step]
009	Voffset TM (Center)	*ENG	
010	Voffset TM (Rear)	*ENG	

3321	[Vsg Adjustment: Execution]		
010	P/TM Sensor All	-	Execute the ID sensor initialization setting for all sensors

3322	[Vsg Adjustment Result: Vsg]		
	Displays the result value of the Vsg adjustment for each sensor.		

001	Vsg reg: Bk	*ENG	[0 to 5.5 / - / 0.01 V/step]
002	Vsg reg: M	*ENG	
003	Vsg reg: C	*ENG	
004	Vsg reg: Y	*ENG	
005	Vsg dif: M	*ENG	
006	Vsg dif: C	*ENG	
007	Vsg dif: Y	*ENG	
008	Vsg TM (Front)	*ENG	
009	Vsg TM (Center)	*ENG	
010	Vsg TM (Rear)	*ENG	

3325	[Vsg Adjustment Result]		
	<p>Displays the result of the Vsg adjustment.</p> <p>The displayed numbers mean the result of each sensor (sensor for Front, sensor for Bk, sensor for Cyan, sensor for Center, sensor for Magenta, sensor for Yellow and sensor for Rear).</p>		
001	Latest	*ENG	[111 to 999 / - / 1 /step] 9: Unexpected error 3: Offset voltage error 2: Vsg adjustment value error 1: O.K
002	Result: Latest 1	*ENG	
003	Result: Latest 2	*ENG	
004	Result: Latest 3	*ENG	
005	Result: Latest 4	*ENG	
006	Result: Latest 5	*ENG	
007	Result: Latest 6	*ENG	
008	Result: Latest 7	*ENG	
009	Result: Latest 8	*ENG	
010	Result: Latest 9	*ENG	

3401	[Fixed Supply Mode]		
	Adjusts the toner supply rate in the fixed toner supply mode.		
001	Fixed Rate: Bk	*ENG	[0 to 100 / 5 / 1 %/step] These SPs are used only when SP3-044 is set to "1".
002	Fixed Rate: M	*ENG	
003	Fixed Rate: C	*ENG	
004	Fixed Rate: Y	*ENG	

3411	[Toner Supply Rate: Display]		
	Displays the current toner supply rate.		
001	Latest: Bk	*ENG	[0 to 100 / - / 1 %/step]
002	Latest: M	*ENG	
003	Latest: C	*ENG	
004	Latest: Y	*ENG	

3421	[Toner Supply Range]		
001	Upper Limit: Bk	*ENG	Adjusts the toner supply rate during printing. [0 to 100 / 100 / 1%/step]
002	Upper Limit: M	*ENG	
003	Upper Limit: C	*ENG	
004	Upper Limit: Y	*ENG	
005	Minimum Supply Time: Bk	*ENG	Adjusts the minimum toner supply time. [0 to 1000 / 0 / 1 msec/step]
006	Minimum Supply Time: M	*ENG	
007	Minimum Supply Time: C	*ENG	
008	Minimum Supply Time: Y	*ENG	

3501	[Process Control Target M/A]		
	Adjusts the target M/A.		

001	Maximum M/A: Bk	*ENG	[0 to 1 / <b>0.4</b> / 0.001 mg/cm <sup>2</sup> /step]
002	Maximum M/A: M	*ENG	
003	Maximum M/A: C	*ENG	
004	Maximum M/A: Y	*ENG	

3510	[ImageQuality Adj. Counter:Disp]		
	Displays the total page counter for each adjustment mode.		
001	Potential Control: BW	*ENG	[0 to 2000 / - / 1 page/step]
002	Potential Control: FC	*ENG	
003	Power ON: BW	*ENG	
004	Power ON: FC	*ENG	
005	MUSIC: BW	*ENG	
006	MUSIC: FC	*ENG	
007	Vsg Adj.	*ENG	
008	Charge AC Control	*ENG	
009	MUSIC: Power ON: BW	*ENG	
010	MUSIC: Power ON: FC	*ENG	

3511	[Execution Interval: Setting]		
	Adjusts the threshold for each adjustment mode.		
001	Job End: Potential Control: BW	*ENG	[0 to 2000 / <b>250</b> / 1 page/step]
002	Job End: Potential Control: FC	*ENG	[0 to 2000 / <b>100</b> / 1 page/step]
003	Interrupt: Potential Control: BW	*ENG	[0 to 2000 / <b>500</b> / 1 page/step]
004	Interrupt: Potential Control: FC	*ENG	[0 to 2000 / <b>200</b> / 1 page/step]
005	Initial: Potential Control: BW	*ENG	[0 to 2000 / <b>250</b> / 1 page/step]
006	Initial: Potential Control: FC	*ENG	[0 to 2000 / <b>100</b> / 1 page/step]



007	Vsg Adj. Counter	*ENG	[0 to 2000 / <b>0</b> / 1 page/step]
008	Charge AC Control Counter	*ENG	
019	Environmental Correction	*ENG	[0 or 1 / <b>1</b> / 1 /step] 0: Not Correct (OFF) 1: Correct (ON)
020	Gamma Correction	*ENG	[0 or 1 / <b>1</b> / 1 /step] 0: Not Correct (OFF) 1: Correct (ON)
021	Non-use Time Correction	*ENG	[0 or 1 / <b>1</b> / 1 /step] 0: Not Correct (OFF) 1: Correct (ON)
022	Correction Coef 1: JE: BW	*ENG	[0 to 1 / <b>0.2</b> / 0.01 page/step]
023	Correction Coef 2: JE: BW	*ENG	[0 to 1 / <b>1</b> / 0.01/step]
024	Correction Coef 1: JE: FC	*ENG	[0 to 1 / <b>0.5</b> / 0.01/step]
025	Correction Coef 2: JE: FC	*ENG	[0 to 1 / <b>1</b> / 0.01/step]
026	Cor Coef 1: Interrupt: BW	*ENG	[0 to 1 / <b>0.1</b> / 0.01/step]
027	Cor Coef 2: Interrupt: BW	*ENG	[0 to 1 / <b>1</b> / 0.01/step]
028	Cor Coef 1: Interrupt: FC	*ENG	[0 to 1 / <b>0.25</b> / 0.01/step]
029	Cor Coef 2: Interrupt: FC	*ENG	[0 to 1 / <b>1</b> / 0.01/step]
030	Max. Number Cor Threshold	*ENG	[0 to 99 / <b>5</b> / 1/step]
031	Max. Number Correction Counter	*ENG	[0 to 255 / - / 1/step]

3512	[Image Quality Adj.: Interval]		
	Adjusts the timing for execution of process control and line position adjustment.		
001	During Job	*ENG	[0 to 100 / <b>30</b> / 1 page/step]
002	During Stand-by	*ENG	[0 to 100 / <b>10</b> / 1 minute/step]

3513	[PCU Motor Stop Time: Bk]		
	Displays the last time that the PCU motors stopped. These are used for process control execution timing.		
001	Year	*ENG	[0 to 99 / - / 1/step]
002	Month	*ENG	[1 to 12 / - / 1/step]
003	Date	*ENG	[1 to 31 / - / 1/step]
004	Hour	*ENG	[0 to 23 / - / 1/step]
005	Minute	*ENG	[0 to 59 / - / 1/step]

5

3514	[Environmental Display: Job End]		
	Displays the environmental conditions for the last job. These are used for process control execution timing.		
001	Temperature	*ENG	[-1280 to 1270 / - / 0.1°C/step]
002	Relative Humidity	*ENG	[0 to 1000 / - / 0.1%RH/step]
003	Absolute Humidity	*ENG	[0 to 1000 / - / 0.1 g/m <sup>3</sup> /step]
004	AIT Temperature	*ENG	[-1280 to 1270 / - / 0.1 deg/step]

3515	[Execution Interval: Display]		
	Displays the current interval for process control execution. When the machine calculates the timing for process control, it uses a number of conditions. These are the results after considering all the conditions.		
001	Job End: Pot Control: BW	*ENG	[0 to 2000 / - / 1 page/step]
002	Job End: Pot Control: FC	*ENG	[0 to 2000 / - / 1 page/step]
003	Interrupt: Pot Control: BW	*ENG	[0 to 2000 / - / 1 page/step]
004	Interrupt: Pot Control: FC	*ENG	[0 to 2000 / - / 1 page/step]

3517	[Blade damage prevention mode]		
	Adjusts the threshold temperature for preventing the cleaning blade in the transfer belt cleaning unit from being damaged. If the temperature is above this value, toner is applied to the transfer belt at set intervals during the job to prevent the blade from flipping over.		
001	Execution Temp. Threshold	*ENG	[0 to 50 / <b>40</b> / 1°C/step]

3519	[Toner End Prohibition Setting]		
	Enables or disables each adjustment at toner near end.		
001	Process Control	*ENG	[0 or 1 / <b>1</b> / 1/step]
002	MUSIC	*ENG	0: Permit (adjustment is done even toner near end condition) 1: Forbid (adjustment is not done at toner near end condition)
003	TC Adj.	*ENG	

3520	[ITB Idling Number]		
	Specifies the number of the ITB idling rotation for each condition.		
001	Temperature: H	*ENG	[0 or 3 / <b>0</b> / 1 revolution/step]
002	Temperature: M	*ENG	
003	Temperature: L	*ENG	
004	Temperature: L: Power ON	*ENG	

3521	[Temperature Threshold]		
	Specifies the threshold temperature for each condition. These settings affect the conditions of SP3-520. t1: Threshold between L (low temp.) and M (medium temp.) t2: Threshold between M (medium temp.) and H (high temps)		
001	Threshold: t2	*ENG	[20 or 30 / <b>25</b> / 1 deg/step]
002	Threshold: t1	*ENG	[0 or 15 / <b>15</b> / 1 deg/step]

3522	[Initial Process Control Set]		
	<p>Adjusts the threshold for the process control at power on.</p> <p>When the current condition has changed by more than the values of these SPs when compared with the conditions at the previous operation, the process control at power on is executed.</p>		
002	Non-use Time Setting	*ENG	[0 to 1440 / <b>360</b> / 1 minute/step]
003	Temperature Range	*ENG	[0 to 99 / <b>10</b> / 1 °C/step]
004	Relative Humidity Range	*ENG	[0 to 99 / <b>50</b> / 1 %RH/step]
005	Absolute Humidity Range	*ENG	[0 to 99 / <b>6</b> / 1 g/m <sup>3</sup> /step]
006	AIT Temperature Range	*ENG	[0 to 99 / <b>25</b> / 1 °C/step]
007	Vtref Temperature Range	*ENG	[0 to 99 / <b>20</b> / 1 °C/step]
100	[Rapi_timer]		
	Time Setting	*ENG	[0 to 255 / <b>30</b> / 1 sec/step]
Adjusts the time-out time for the Rapi timer.			

3531	[Non-use Time Process Control Set]		
	<p>Adjusts the threshold for the process control at stand-by.</p> <p>When the current condition has changed by more than the values of these SPs when compared with the conditions at the previous operation, the process control at stand-by is executed.</p>		
001	Non-use Time Setting	*ENG	[0 to 1440 / <b>360</b> / 1 minute/step]
002	Temperature Range	*ENG	[0 to 99 / <b>10</b> / 1 °C/step]
003	Relative Humidity Range	*ENG	[0 to 99 / <b>50</b> / 1 %RH/step]
004	Absolute Humidity Range	*ENG	[0 to 99 / <b>6</b> / 1 g/m <sup>3</sup> /step]
005	Maximum Execution Number	*ENG	<p>Adjusts the maximum execution time for the process control at stand-by.</p> <p>[0 to 99 / <b>10</b> / 1 time/step]</p>

3611	[Development Gamma: Display/Set]		
------	----------------------------------	--	--

001	Bk (Current)	*ENG	Displays the current development gamma for each color. [0 to 5 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
002	M (Current)	*ENG	
003	C (Current)	*ENG	
004	Y (Current)	*ENG	
005	Bk (Target Display)	*ENG	Displays the target development gamma for each color. [0 to 5 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
006	M (Target Display)	*ENG	
007	C (Target Display)	*ENG	
008	Y (Target Display)	*ENG	
009	Bk (Standard Target Set)	*ENG	Displays the standard target development gamma for each color. [0 to 5 / <b>0.8</b> / 0.01 mg/cm <sup>2</sup> /kV /step]
010	M (Standard Target Set)	*ENG	
011	C (Standard Target Set)	*ENG	
012	Y (Standard Target Set)	*ENG	
013	Environmental Correction	*ENG	Turns on or off the environmental correction for target development gamma. [0 or 1 / 1 / - ] 0: Not Correct, 1: Correct
014	K (Max Correction)	*ENG	Adjusts the maximum correction value for each color. These SPs are effective only when the setting of SP3-611-013 is set to "1". [0 to 5 / <b>0.15</b> / 0.01 mg/cm <sup>2</sup> /kv/ step]
015	M (Max Correction)	*ENG	
016	C (Max Correction)	*ENG	
017	Y (Max Correction)	*ENG	
018	K (Max Abs Hum)	*ENG	Adjusts the maximum humidity correction value for each color. These SPs are effective only when the setting of SP3-611-013 is set to "1". [1 to 99 / <b>20</b> / 1 g/m <sup>3</sup> /step]
019	M (Max Abs Hum)	*ENG	
020	C (Max Abs Hum)	*ENG	
021	Y (Max Abs Hum)	*ENG	
022	K (Min Correction)	*ENG	[0 to 0.1 / <b>0</b> / 0.01 mg/cm <sup>2</sup> /kv/ step]

3612	[Vk Display]		
	Displays Vk for each color.		
001	Bk	*ENG	[-300 to 300 / - / 1 V/step]
002	M	*ENG	
003	C	*ENG	
004	Y	*ENG	

3621	[Development DC Control: Disp]		
	Plain: High speed, Thick 1: Middle speed, Thick 2 & FINE: Low speed		
Displays the development DC bias adjusted with the process control for each line speed and color.			
001	Plain: Bk	*ENG	[0 to 800 / - / 1 -V/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	[0 to 800 / - / 1 -V/step]
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2 & FINE: Bk	*ENG	[0 to 800 / - / 1 -V/step]
010	Thick 2 & FINE: M	*ENG	
011	Thick 2 & FINE: C	*ENG	
012	Thick 2 & FINE: Y	*ENG	

3631	[Charge DC Control: Display]		
	Plain: High speed, Thick 1: Middle speed, Thick 2 & FINE: Low speed		
Displays the charge DC voltage adjusted with the process control for each line speed and color.			

001	Plain: Bk	*ENG	[0 to 2000 / - / 1 -V/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1 & FINE: Bk	*ENG	[0 to 2000 / - / 1 -V/step]
006	Thick 1 & FINE: M	*ENG	
007	Thick 1 & FINE: C	*ENG	
008	Thick 1 & FINE: Y	*ENG	
009	Thick 2 & FINE: Bk	*ENG	[0 to 2000 / - / 1 -V/step]
010	Thick 2 & FINE: M	*ENG	
011	Thick 2 & FINE: C	*ENG	
012	Thick 2 & FINE: Y	*ENG	

3641	[Charge AC Control: Display]		
	Plain: High speed		
Displays the charge AC voltage adjusted with the process control for each color.			
001	Plain: Bk	*ENG	[0 to 3 / - / 0.01 kV/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	

3651	[LD Power Control: Display]		
	Plain: High speed, Thick 1: Middle speed, Thick 2 & FINE: Low speed		
Displays the LD power adjusted for each environment.			

001	Plain: Bk	*ENG	[0 to 200 / - / 1 %/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	[0 to 200 / - / 1 %/step]
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2 & FINE: Bk	*ENG	[0 to 200 / - / 1 %/step]
010	Thick 2 & FINE: M	*ENG	
011	Thick 2 & FINE: C	*ENG	
012	Thick 2 & FINE: Y	*ENG	

3710	[HST Concentration Control: Set]		
	TD Sensor: Toner Concentration Control Setting		
Selects the toner concentration control method by HST memory, which is in the TD sensor.			
001	Control Method: Selection	*ENG	[0 or 1 / 1 / - ] 0: Not Use, 1: Use

3711	[HST Concentration Control: Bk]		
	Displays the factory settings of the black PCDU.		
001	Vcnt	*ENG	[0 to 5 / - / 0.1 V/step]
002	Vt	*ENG	[0 to 5 / - / 0.1 V/step]
003	Sensitivity: HL	*ENG	[1.22 to 3.77 / - / 0.01 V/step]
004	Sensitivity: HM	*ENG	[0 to 2.55 / - / 0.01 V/step]
005	Sensitivity: ML	*ENG	
006	Set Detection	*ENG	[0 to 5 / - / 0.1 V/step]
007	Without Developer	*ENG	[0 to 5 / - / 0.1 V/step]



008	With Developer	*ENG	[0 to 5 / - / 0.1 V/step]
009	Serial Number 1	*ENG	[0 to 255 / - / 1 V/step]
010	Serial Number 2	*ENG	
011	Adjustment: Vt	*ENG	[0 to 5 / - / 0.1 V/step]
012	Adjustment: Vtref	*ENG	[0 to 5 / - / 0.1 V/step]
013	Adjustment: Vtcnt	*ENG	[0 to 5 / - / 0.01 V/step]
014	Adjustment: Gamma	*ENG	[0 to 2.55 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
015	Adjustment: Vcnt Result	*ENG	[0 to 9 / - / 1 /step]

3712	[HST Concentration Control: M]		
	Displays the factory settings of the magenta PCDU.		
001	Vcnt	*ENG	[0 to 5 / - / 0.1 V/step]
002	Vt	*ENG	[0 to 5 / - / 0.1 V/step]
003	Sensitivity: HL	*ENG	[1.22 to 3.77 / - / 0.01 V/step]
004	Sensitivity: HM	*ENG	[0 to 2.55 / - / 0.01 V/step]
005	Sensitivity: ML	*ENG	
006	Set Detection	*ENG	[0 to 5 / - / 0.1 V/step]
007	Without Developer	*ENG	[0 to 5 / - / 0.1 V/step]
008	With Developer	*ENG	[0 to 5 / - / 0.1 V/step]
009	Serial Number 1	*ENG	[0 to 255 / - / 1 V/step]
010	Serial Number 2	*ENG	
011	Adjustment: Vt	*ENG	[0 to 5 / - / 0.1 V/step]
012	Adjustment: Vtref	*ENG	[0 to 5 / - / 0.1 V/step]
013	Adjustment: Vtcnt	*ENG	[0 to 5 / - / 0.01 V/step]
014	Adjustment: Gamma	*ENG	[0 to 2.55 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
015	Adjustment: Vcnt Result	*ENG	[0 to 9 / - / 1 /step]

3713	[HST Concentration Control: C]		
	Displays the factory settings of the cyan PCDU.		
001	Vcnt	*ENG	[0 to 5 / - / 0.1 V/step]
002	Vt	*ENG	[0 to 5 / - / 0.1 V/step]
003	Sensitivity: HL	*ENG	[1.22 to 3.77 / - / 0.01 V/step]
004	Sensitivity: HM	*ENG	[0 to 2.55 / - / 0.01 V/step]
005	Sensitivity: ML	*ENG	
006	Set Detection	*ENG	[0 to 5 / - / 0.1 V/step]
007	Without Developer	*ENG	[0 to 5 / - / 0.1 V/step]
008	With Developer	*ENG	[0 to 5 / - / 0.1 V/step]
009	Serial Number 1	*ENG	[0 to 255 / - / 1 V/step]
010	Serial Number 2	*ENG	
011	Adjustment: Vt	*ENG	[0 to 5 / - / 0.1 V/step]
012	Adjustment: Vtref	*ENG	[0 to 5 / - / 0.1 V/step]
013	Adjustment: Vtcnt	*ENG	[0 to 5 / - / 0.01 V/step]
014	Adjustment: Gamma	*ENG	[0 to 2.55 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
015	Adjustment: Vcnt Result	*ENG	[0 to 9 / - / 1 /step]

3714	[HST Concentration Control: Y]		
	Displays the factory settings of the yellow PCDU.		
001	Vcnt	*ENG	[0 to 5 / - / 0.1 V/step]
002	Vt	*ENG	[0 to 5 / - / 0.1 V/step]
003	Sensitivity: HL	*ENG	[1.22 to 3.77 / - / 0.01 V/step]
004	Sensitivity: HM	*ENG	[0 to 2.55 / - / 0.01 V/step]
005	Sensitivity: ML	*ENG	
006	Set Detection	*ENG	[0 to 5 / - / 0.1 V/step]

007	Without Developer	*ENG	[0 to 5 / - / 0.1 V/step]
008	With Developer	*ENG	[0 to 5 / - / 0.1 V/step]
009	Serial Number 1	*ENG	[0 to 255 / - / 1 V/step]
010	Serial Number 2	*ENG	
011	Adjustment: Vt	*ENG	[0 to 5 / - / 0.1 V/step]
012	Adjustment: Vtref	*ENG	[0 to 5 / - / 0.1 V/step]
013	Adjustment: Vtcnt	*ENG	[0 to 5 / - / 0.01 V/step]
014	Adjustment: Gamma	*ENG	[0 to 2.55 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
015	Adjustment: Vcnt Result	*ENG	[0 to 9 / - / 1 /step]

3800	[Waste Toner Full Detection]		
	Displays/ adjusts the toner collection bottle detection settings. These SPs are used for NRS.		
001	Condition	*CTL	[0 to 4 / 0 / 1 /step]
002	Detection Times	*CTL	[0 to 50 / 0 / 1 /step]
003	Print Page After Near Full	*CTL	[0 to 1000 / 0 / 1 sheet/step]
004	Pixel Count After Near Full	*CTL	[0 to 200000 / 0 / 1 cm <sup>2</sup> /step]
005	Pixel Count After Replacement	*CTL	Displays the pixel counter after replacement of toner collection bottle. [0 to 200000 / 0 / 1 cm <sup>2</sup> /step]
008	Coefficient	*ENG	[0.1 to 1.5 / 1 / 0.1 /step]
011	Notice Setting	*ENG	Enables or disables the calling for @Remote. [0 or 1 / 1 / - ] 0: Enable @Remote calling 1: Disable @Remote calling
	<p><b>NOTE:</b></p> <p>If the toner collection bottle has been replaced before the machine detects used toner near full when this setting is set to "0", the machine cannot detect toner collection bottle near full. In that case, set SP3-902-017 to "1".</p>		

012	Day Threshold: Toner Collection bottle:NF	*ENG	[1 to 30 / 5 / 1 day/step]
	Sets the threshold days for the near-full display. The near-full of the toner collection bottle is displayed after the toner collection full sensor has detected the actuator in the toner collection bottle.		
013	Total:Toner Collection Bottle	*ENG	Displays the total amount of the used toner. [0 to 999999999 / 0 / 1]
014	Mechanism Full Detection Date	*ENG	Displays the date of the full detection for the toner collection bottle.

5

3900	[Waste Toner New Detection]		
	Turns toner collection bottle full detection on or off.		
001	ON/OFF Setting	*ENG	[0 or 1 / 1 / -] 0: OFF, 1: ON

3901	[New PCU Detection]		
	Turns new PCDU detection on or off.		
001	ON/OFF Setting	*ENG	[0 or 1 / 1 / -] 0: OFF, 1: ON

3902	[Manual New Unit Set]		
	Turns the new unit detection flag for each PM unit on or off. The use of these counters is explained in the PM section and in the relevant parts of section 3 (Replacement and Adjustment).		
001	Development Unit: Bk	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON
002	Development Unit: Y	*ENG	
003	Development Unit: C	*ENG	
004	Development Unit: M	*ENG	

005	Developer: Bk	*ENG	
006	Developer: Y	*ENG	[0 or 1 / 0 / -]
007	Developer: C	*ENG	0: OFF, 1: ON
008	Developer: M	*ENG	
009	PCU: Bk	*ENG	
010	PCU: Y	*ENG	[0 or 1 / 0 / -]
011	PCU: C	*ENG	0: OFF, 1: ON
012	PCU: M	*ENG	
013	Image Transfer Unit	*ENG	[0 or 1 / 0 / -]
014	Fusing Unit	*ENG	0: OFF, 1: ON
015	Cleaning Unit	*ENG	Do not use 3902-013 if you only change the cleaning unit.
016	Paper Transfer Unit	*ENG	3902-015: This is for the image transfer belt cleaning unit.
017	Toner Collection Bottle	*ENG	
018	Fusing Roller (Heating Roller)	*ENG	[0 or 1 / 0 / -]
019	Pressure Roller	*ENG	0: OFF, 1: ON "Fusing Roller" is designated as "Heating Roller" in this manual.
020	Pump Unit: Bk	*ENG	
021	Pump Unit: M	*ENG	[0 or 1 / 0 / -]
022	Pump Unit: C	*ENG	0: OFF, 1: ON
023	Pump Unit: Y	*ENG	

## Main SP Tables-4

### SP4-XXX (Scanner)

4008	[Sub Scan Mag.Adjustment]		
	Adjusts the sub-scan magnification by changing the scanner motor speed.		
001	-	*ENG	[-1.0 to 1.0 / <b>0</b> / 0.1%/step] <b>FA</b>

4010	[L-Edge Regist Adjustment]		
	Adjusts the leading edge registration by changing the scanning start timing in the sub-scan direction.		
001	-	*ENG	[-2.0 to 2.0 / <b>0</b> / 0.1 mm/step] <b>FA</b>

4011	[S-to-S Regist Adjustment]		
	Adjusts the side-to-side registration by changing the scanning start timing in the main scan direction.		
001	-	*ENG	[-2.5 to 2.5 / <b>0</b> / 0.1 mm/step ] <b>FA</b>

4012	[Scanner Erase Margin: Scale]		
	Sets the blank margin at each side for erasing the original shadow caused by the gap between the original and the scale.		
001	Book: Leading Edge	*ENG	[0 to 3.0 / <b>0</b> / 0.1 mm/step ] <b>FA</b>
002	Book: Trailing Edge		
003	Book: Left		
004	Book: Right		
005	ADF: Leading Edge	*ENG	[0 to 3.0 / <b>0</b> / 0.1 mm/step ] <b>FA</b>
007	ADF: Right		
008	ADF: Left		

4013	[Scanner Free Run]		
	Performs the scanner free run with the exposure lamp on or off in the following mode. Full color mode / Full Size / A3 or DLT		
001	Lamp: OFF	*ENG	[0 or 1 / 0 / -]
002	Lamp: ON		0: OFF, 1: ON

4014	[Scan]		
	Execute the scanner free fun with each mode.		
001	HP Detection Enable	-	Scanner free run with HP sensor check.
002	HP Detection Disable	-	Scanner free run without HP sensor check.

4020	[Dust Check]		
001	Dust Detect:On/Off	*ENG	Turns the ADF scan glass dust check on/ off. [0 or 1 / 0 / 1 /step] 0: OFF, 1: ON
002	Dust Detect:Lvl	*ENG	Selects the detect level. [0 to 8 / 4 / 1 /step] 0: lowest detection level 8: highest detection level
003	Dust Reject:Lvl	*ENG	Selects the level of the sub scan line correction when using the ARDF. [0 to 4 / 0 / 1 /step] 0: Off 1: Weakest 2: Weak 3: Strong 4: Strongest
011	Dust Detect:On/Off:Rear	*ENG	Not used
012	Dust Detect:Lvl:Rear	*ENG	Not used

4301	[APS Operation Check]		
	Displays a code that represents the original size detected by the original sensors. (See "Input Check Table" in this section.)		
001	APS Operation Check	-	-

4303	[APS Min. Size]		
	Specifies the result of the detection when the outputs from the original sensors are all OFF.		
001	-	*ENG	[0 to 2 / 0 / 1 /step] 0: No Original 1: A5-Lengthwise (16K SEF if 4305 is set to 3)

5

4305	[8K/16K Detection]		
	This program enables the machine to automatically recognize the 8K/16K size.		
001	-	*ENG	[0 to 3 / 0 / 1 /step] 0: Normal Detection (the machine detects A4/LT size as A4 or LT, depending on the paper size setting) 1: A4-Sideways LT-Lengthwise 2: LT-Sideways A4-Lengthwise 3: 8K 16K

4308	[Scan Size Detection]		
001	Detection ON/OFF	*ENG	[0 or 1 / 1 / -] 0: OFF 1: ON
	Turns on or off the CCD original size detection. This detection is used only when an original is scanned in book scanning mode.		

4309	[Scan Size Detect:Setting]		
------	----------------------------	--	--



001	Original Density Thresh	*ENG	[0 to 255 / <b>32</b> / 1 digit/step]
	Specifies the threshold between an original area and non-original area for the scan original size detection in book scanning mode.		
002	Detection Time	*ENG	[20 to 100 / <b>60</b> / 20 msec/step]
	Specifies the detection time for the scan original size detection in book scanning mode.		
003	Lamp ON:Delay Time	*ENG	[0 to 200 / <b>40</b> / 20 msec/step]
	Specifies the lamp on timing for the scan original size detection in book scanning mode.		
004	LED PWM Duty	*ENG	[0 to 100 / <b>60</b> / 1/step]
	Sets the LED lamp intensity.		

4310	[Scan Size Detect Value]		
	Displays the detected value by CCD. Each detection point for paper size and color is displayed on the LCD.		
001	S1:R	*ENG	[0 to 255 / - / 1 digit/step]
002	S1:G	*ENG	
003	S1:B	*ENG	
004	S2:R	*ENG	
005	S2:G	*ENG	
006	S2:B	*ENG	
007	S3:R	*ENG	
008	S3:G	*ENG	
009	S3:B	*ENG	

4400	[Scanner Erase Margin]	*ENG	
	Set the Mask for Original. These SPs set the area to be masked during platen (book) mode scanning.		

001	Book: Leading Edge	[0 to 3.0 / 0 / 0.1 mm/step]
002	Book: Trailing Edge	
003	Book: Left	
004	Book: Right	
005	ADF: Leading Edge	
007	ADF: Right	
008	ADF: Left	

5

4417	[IPU Test Pattern]	
	Selects the IPU test pattern.	
001	Test Pattern Selection	[0 to 24 / 0 / 1/step ]
	0: Scanned image 1: Gradation main scan A 2: Gradation main scan B 3: Gradation main scan C 4: Gradation main scan D 5: Gradation sub scan (1) 6: Grid pattern 7: Slant grid pattern 8: Gradation RGBCMYK 9: UCR pattern 10: Color patch 16 (1) 11: Color patch 16 (2) 12: Color patch 64	13: Grid pattern CMYK 14: Color patch CMYK 15: Gray pattern (1) 16: Gray pattern (2) 17: Gray Pattern (3) 18: Shading pattern 19: Thin line pattern 20: Scanned + Grid pattern 21: Scanned + Gray scale 22: Scanned + Color patch 23: Scanned + Slant Grid C 24: Scanned + Slant Grid D

4429	[Illegal Copy Output]		
001	Copy	*ENG	[0 to 3 / 3 / 1 /step]
002	Scanner		
003	Fax		

4450	[Scan Image Path Selection]	
001	Black Subtraction ON/OFF	[0 or 1 / 1 / - ] 0: OFF, 1: ON
	Uses or does not use the black reduction image path.	
002	SH ON/OFF	[0 or 1 / 0 / 1 /step] 0: ON, 1: OFF
	Uses or does not use the shading image path.	

4501	[ACC Target Den]		
	Selects the ACC result.		
001	Copy: K: Text	* ENG	[0 to 10 / 5 / 1 /step] 10: Darkest density
002	Copy: C: Text	* ENG	
003	Copy: M: Text	* ENG	
004	Copy: Y: Text	* ENG	
005	Copy: K: Photo	* ENG	
006	Copy: C: Photo	* ENG	
007	Copy: M: Photo	* ENG	
008	Copy: Y: Photo	* ENG	

4505	[ACC Cor:Bright]		
	Adjusts the offset correction for light areas of the ACC pattern.		
001	Text:K	* ENG	[-128 to 127 / 0 / 1 /step]
002	Text:C	* ENG	
003	Text:M	* ENG	
004	Text:Y	* ENG	
005	Photo:K	* ENG	[-128 to 127 / 0 / 1 /step]
006	Photo:C	* ENG	
007	Photo:M	* ENG	
008	Photo:Y	* ENG	

4506	[ACC Cor:Dark]		
	Adjusts the offset correction for dark areas of the ACC pattern.		
001	Text:K	*ENG	[-128 to 127 / 0 / 1 /step]
002	Text:C	*ENG	
003	Text:M	*ENG	
004	Text:Y	*ENG	
005	Photo:K	*ENG	[-128 to 127 / 0 / 1 /step]
006	Photo:C	*ENG	
007	Photo:M	*ENG	
008	Photo:Y	*ENG	

4540	[Print Coverage]		
	This SP corrects the printer coverage of 12 hues (RY, YR, YG, etc. x 4 Colors [R, G, B, Option]) for a total of 48 parameters.		
001-004	RY Phase: Option/R/G/B	*ENG	Specifies the printer vector correction value. [0 to 255 / 0 / 1 /step]
005-008	YR Phase: Option/R/G/B		
009-012	YG Phase: Option/R/G/B		
013-016	GY Phase: Option/R/G/B		
017-020	GC Phase: Option/R/G/B		
021-024	CG Phase: Option/R/G/B		
025-028	CB Phase: Option/R/G/B		
029-032	BC Phase: Option/R/G/B		
033-036	BM Phase: Option/R/G/B		
037-040	MB Phase: Option/R/G/B		
041-044	MR Phase: Option/R/G/B		
045-048	RM Phase: Option/R/G/B		

4600	[SBU Version Display]		
001	SBU ID	*ENG	Displays the ID of the SBU.
002	GASBU-N ID	*ENG	Displays the ID of the GASBU.
003	VSP5100 ID	*ENG	Displays the ID of the VSP5100.

4602	[Scanner Memory Access]		
001	Scanner Memory Access	-	Enables the read and write check for the SBU registers.

4603	[AGC Execution]		
001	HP Detection Enable	-	Executes the AGC.
002	HP Detection Disable	-	<b>DFU</b>

4609	[Gray Balance Set: R]		
001	Book Scan	*ENG	[-512 to 511 / <b>-46</b> / 1 digit/step]
002	DF Scan	*ENG	[-512 to 511 / <b>-46</b> / 1 digit/step]

4610	[Gray Balance Set: G]		
001	Book Scan	*ENG	[-384 to 255 / <b>-20</b> / 1 digit/step]
002	DF Scan		

4611	[Gray Balance Set: B]		
001	Book Scan	*ENG	[-384 to 255 / <b>-28</b> / 1 digit/step]
002	DF Scan		

4623	[Black Level Adj. Display] RE: Red Even signal, RO: Red Odd signal		
001	Latest: RE Color	*ENG	Displays the black offset value for the even red signal in the CCD circuit board. [0 to 16383 / <b>0</b> / 1 digit/step]

002	Latest: RO Color	*ENG	Displays the black offset value for the odd red signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
-----	------------------	------	---

4624	[Black Level Adj. Display] GE: Green Even signal, GO: Green Odd signal		
001	Latest: GE Color	*ENG	Displays the black offset value for the even green signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Latest: GO Color	*ENG	Displays the black offset value for the odd green signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

5

4625	[Black Level Adj. Display] BE: Blue Even signal, BO: Blue Odd signal		
001	Latest: BE Color	*ENG	Displays the black offset value for the even blue signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Latest: BO Color	*ENG	Displays the black offset value for the odd blue signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4628	[Analog Gain Adjust] Displays the gain value of the amplifiers on the controller for Red.		
001	Latest: R Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4629	[Analog Gain Adjust] Displays the gain value of the amplifiers on the controller for Green.		
001	Latest: G Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4630	[Analog Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Blue.		
001	Latest: B Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4631	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Red.		
001	Latest: RE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Latest: RO Color	*ENG	

4632	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Green.		
001	Latest: GE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Latest: GO Color	*ENG	

4633	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Blue.		
001	Latest: BE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Latest: BO Color	*ENG	

4645	[Scan Adjust Error]		
001	White level	*ENG	[0 to 65535 / - / 1 digit/step]
002	Black level	*ENG	

4647	[Scanner Hard Error]		
	Displays the result of the SBU connection check.		
001	Power-ON	*ENG	[0 to 35535 / - / 1 digit /step] 0: OK, Other: SBU connection check failure If the SBU connection check fails, SC144 occurs.

4654	[Black Level Adj. Display] RE: Red Even signal, RO: Red Odd signal		
001	Last Correct Value: RE Color	*ENG	Displays the black offset value for the even red signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Last Correct Value: RO Color	*ENG	Displays the black offset value for the odd red signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4655	[Black Level Adj. Display] GE: Green Even signal, GO: Green Odd signal		
001	Last Correct Value: GE Color	*ENG	Displays the black offset value for the even green signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Last Correct Value: GO Color	*ENG	Displays the black offset value for the odd green signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4656	[Black Level Adj. Display] BE: Blue Even signal, BO: Blue Odd signal		
001	Last Correct Value: BE Color	*ENG	Displays the black offset value for the even blue signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Last Correct Value: BO Color	*ENG	Displays the black offset value for the odd blue signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4658	[Analog Gain Adjust]		
	Displays the previous gain value of the amplifiers on the controller for Red.		
001	Last Correct Value: R Color	*ENG	[0 to 7 / 0 / 1 digit/step]



4659	[Analog Gain Adjust]		
	Displays the previous gain value of the amplifiers on the controller for Green.		
001	Last Correct Value: G Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4660	[Analog Gain Adjust]		
	Displays the previous gain value of the amplifiers on the controller for Blue.		
001	Last Correct Value: B Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4661	[Digital Gain Adjust] RE: Red Even signal, RO: Red Odd signal		
001	Last Correct Value: RE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Last Correct Value: RO Color	*ENG	

4662	[Digital Gain Adjust] GE: Green Even signal, GO: Green Odd signal		
001	Last Correct Value: GE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Last Correct Value: GO Color	*ENG	

4663	[Digital Gain Adjust] BE: Blue Even signal, BO: Blue Odd signal		
001	Last Correct Value: BE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Last Correct Value: BO Color	*ENG	

4673	[Black Level Adj. Display] RE: Red Even signal, RO: Red Odd signal		
	001	Factory Setting: RE Color	*ENG
			Displays the factory setting values of the black level adjustment for the even red signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]
002	Factory Setting: RO Color	*ENG	
			Displays the factory setting values of the black level adjustment for the odd red signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]

4674	[Black Level Adj. Display] GE: Green Even signal, GO: Green Odd signal		
001	Factory Setting: GE Color	*ENG	Displays the factory setting values of the black level adjustment for the even green signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]
002	Factory Setting: GO Color	*ENG	Displays the factory setting values of the black level adjustment for the odd green signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]

4675	[Black Level Adj. Display] BE: Blue Even signal, BO: Blue Odd signal		
001	Factory Setting: BE Color	*ENG	Displays the factory setting values of the black level adjustment for the even blue signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]
002	Factory Setting: BO Color	*ENG	Displays the factory setting values of the black level adjustment for the odd blue signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]

4677	[Analog Gain Adjust]		
	Displays the factory setting values of the gain adjustment for Red.		
001	Factory Setting: R Color	*ENG	[0 to 7 / - / 1 digit/step]

4678	[Analog Gain Adjust]		
	Displays the factory setting values of the gain adjustment for Green.		
001	Factory Setting: G Color	*ENG	[0 to 7 / - / 1 digit/step]

4679	[Analog Gain Adjust]		
	Displays the factory setting values of the gain adjustment for Blue.		

001	Factory Setting: B Color	*ENG	[0 to 7 / - / 1 digit/step]
-----	--------------------------	------	-----------------------------

4680	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Red.		
001	Factory Setting: RE Color	*ENG	[0 to 1023 / - / 1 digit/step]
002	Factory Setting: RO Color	*ENG	

4681	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Green.		
001	Factory Setting: GE Color	*ENG	[0 to 1023 / - / 1 digit/step]
002	Factory Setting: GO Color	*ENG	

4682	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Blue.		
001	Factory Setting: BE Color	*ENG	[0 to 1023 / - / 1 digit/step]
002	Factory Setting: BO Color	*ENG	

4688	[Scan Image Density Adjustment]		
	Adjusts the white shading parameter when scanning an image with the ARDF or 1-pass DF. Adjusts the density level if the ID of outputs made in the DF and Platen mode is different.		
001	ARDF	*ENG	[80 to 120 / <b>98</b> / 1%/ step]
002	1-pass DF	*ENG	[80 to 120 / <b>98</b> / 1%/ step]

4690	[White Level Peak Read]		
	Displays the peak level of the white level scanning. If these scanned white levels are out of the correct range, SC142 may be issued.		
001	RE	*ENG	[0 to 1023 / - / 1 digit/step]
002	RO	*ENG	

4691	[White Level Peak Read]		
	Displays the peak level of the white level scanning. If these scanned white levels are out of the correct range, SC142 may be issued.		
001	GE	*ENG	[0 to 1023 / - / 1 digit/step]
002	GO	*ENG	

4692	[White Level Peak Read]		
	Displays the peak level of the white level scanning. If these scanned white levels are out of the correct range, SC142 may be issued.		
001	BE	*ENG	[0 to 1023 / - / 1 digit/step]
002	BO	*ENG	

4693	[Black Level Peak Read]		
	Displays the level of the black level scanning. If these scanned black levels are out of the correct range, SC141 may be issued.		
001	RE	*ENG	[0 to 1023 / - / 1 digit/step]
002	RO	*ENG	

4694	[Black Level Peak Read]		
	Displays the level of the black level scanning. If these scanned black levels are out of the correct range, SC141 may be issued.		
001	GE	*ENG	[0 to 1023 / - / 1 digit/step]
002	GO	*ENG	

4695	[Black Level Peak Read]		
	Displays the level of the black level scanning. If these scanned black levels are out of the correct range, SC141 may be issued.		
001	BE	*ENG	[0 to 1023 / - / 1 digit/step]
002	BO	*ENG	

4796	[Low Density Color Correction]		
001	Front Side	*ENG	[0 or 1 / 0 / -] 0: Off, 1: On
	Turns on or off the low color density correction for the front side of originals.		
002	Rear Side	*ENG	[0 or 1 / 0 / -] 0: Off, 1: On
	Turns on or off the low color density correction for the back side of originals.		
4802	[DF Shading FreeRun]		
001	Lamp OFF	*ENG	Executes the scanner free run of shading movement with exposure lamp on or off. Press "OFF" to stop this free run. Otherwise, the free run lasts.
002	Lamp ON		
4804	[Home Position]		
001	-	*ENG	Executes the scanner HP detection.
4806	[Carriage Save]		
001	-	*ENG	Moves the carriage from the scanner home position. Dust may fall through the DF exposure glass. Therefore, do this SP when you transport the machine a long distance.
4807	[SBU Test Pattern Change]		
001	-	*ENG	[0 to 255 / 0 / 1 /step] <b>0: Scanning image</b> 1: Fixed pattern 2: Main scanning gradation 3: Sub scanning gradation 4: Grid pattern (5 to 255 : Scanning images)

4808	[Factory Setting Input]		
002	Execution Flag	*ENG	[0 or 1 / 0 / 1 /step]

4902	[Disp ACC Data]		
	<p>This SP outputs the final data read at the end of ACC execution.                  A zero is returned if there was an error reading the data.                  [0 to 255 / - / 1 /step]</p>		
001	R DATA1	*ENG	Photo C Patch Level 1 (8-bit)
002	G DATA1	*ENG	Photo M Patch Level 1 (8-bit)
003	B DATA1	*ENG	Photo Y Patch Level 1 (8-bit)
004	R DATA2	*ENG	Photo C Patch Level 17 (8-bit)
005	G DATA2	*ENG	Photo M Patch Level 17(8-bit)
006	B DATA2	*ENG	Photo Y Patch Level 17 (8-bit)

4918	[Man Gamma:Pht:Y]		
	<p>Adjusts the offset data of the printer gamma for yellow in Photo mode.                  See "Printer Gamma Correction" in the Replacement and Adjustment for how to use.</p>		
009	-	*ENG	Enter the manual gamma adjustment screen (-001 to 008). For details, see the "Printer Gamma Correction" in the section "Replace and Adjustment".

4954	[Read/Restore Std]		
001	Read New Chart	*ENG	Execute the scanning of the A4 chart.
002	Recall Prev Chart	*ENG	Clear the data of the scanned A4 chart.
003	Read Std Chart	*ENG	Execute the scanning of the A4 standard chart.
004	Set Std Chart	*ENG	Overwrite the standard data.
005	Chromaticity Rank	*ENG	Restores the standard chromaticity rank.

4991	[IPU Image Pass Selection]		
	Selects the image path. Enter the number to be selected using the 10-key pad.		
001	RGB Frame Memory	*ENG	[0 to 11 / 2 / 1 /step ]
	0: Scanner input RGB images 1: Scanner I/F RGB images 2: RGB images done by Shading correction (Shading ON, Black offset ON) 3: Shading data 4 to 11: Not used		
4993	[High Light Correction]		
001	Sensitivity Selection	*ENG	Selects the Highlight correction level. [0 to 9 / 4 / 1 /step] 0: weakest sensitivity 9: strongest sensitivity
002	Range Selection	*ENG	Selects the range level of Highlight correction. [0 to 9 / 4 / 1 /step] 0: weakest skew correction, 9: strongest skew correction
4994	[Text/Photo Detection Level Adj.]		
	Selects the definition level between Text and Photo for high compression PDF.		
001	High Compression PDF	*ENG	[0 to 2 / 1 / 1 /step] 0: Text priority 1: Normal 2: Photo priority

## Main SP Tables-5

### SP5-XXX (Mode)

5024	[mm/inch Display Selection]		
	Display units (mm or inch) for custom paper sizes.		
001	0:mm 1:inch	*CTL	0: mm (Europe/Asia) 1: inch (USA)

5

5045	[Accounting counter]		
	Selects the counting method. <b>NOTE:</b> The counting method can be changed only once, regardless of whether the counter value is negative or positive.		
001	Counter Method	*CTL	[0 or 1 / 1 / -] 0: Developments 1: Prints

5047	[Paper Display]		
	Turns on or off the printed paper display on the LCD.		
001	Backing Paper	*CTL	[0 or 1 / 0 / -] 0: OFF, 1: ON

5051	[TonerRefillDetectionDisplay]		
	Enables or disables the toner refill detection display.		
5051 1	-	*CTL	[0 or 1 / 0 / -] Alphanumeric 0: ON 1: OFF

5055	[Display IP Address]		
	Display or does not display the IP address on the LCD.		



001	-	*CTL	[0 or 1 / 0 / -] 0: OFF 1: ON
-----	---	------	----------------------------------

5056	[Coverage Counter Display]		
	Display or does not display the coverage counter on the LCD.		
001	-	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display

5061	[Toner Remaining Icon Display Change]		
	Display or does not display the remaining toner display icon on the LCD.		
001	-	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display

5062	[Parts Replacement Alert Display]		
	Display or does not display the PM part yield on the LCD.		
001	Drum Unit: Bk	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display
002	Drum Unit: M	*CTL	
003	Drum Unit: C	*CTL	
004	Drum Unit: Y	*CTL	
005	Development Unit: Bk	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display
006	Development Unit: M	*CTL	
007	Development Unit: C	*CTL	
008	Development Unit: Y	*CTL	
009	Developer: Bk	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display
010	Developer: M	*CTL	
011	Developer: C	*CTL	
012	Developer: Y	*CTL	

013	Image Transfer Belt	*CTL	[0 or 1 / <b>0</b> / -] 0: Not display, 1: Display
014	Image Transfer Cleaning Unit	*CTL	
015	Fusing Unit	*CTL	
016	Paper Transfer Roller Unit	*CTL	
017	Waster Toner bottle	*CTL	
018	Fusing Roller	*CTL	
019	Pressure Roller	*CTL	

5066	[PM Parts Display] Display or does not display the "PM parts" button on the LCD.		
001	-	*CTL	[0 or 1 / <b>0</b> / -] 0: Not display, 1: Display

5067	[Part Replacement Operation Type]		
	Selects the service maintenance or user maintenance for each PM parts. If the user service is selected, PM alert is displayed on the LCD.		
001	Drum Unit: Bk	*CTL	[ <b>0: Service</b> ] or [1: User]
002	Drum Unit: M	*CTL	
003	Drum Unit: C	*CTL	
004	Drum Unit: Y	*CTL	
005	Development unit: Bk	*CTL	[ <b>0: Service</b> ] or [1: User]
006	Development unit: M	*CTL	
007	Development unit: C	*CTL	
008	Development unit: Y	*CTL	

009	Developer: Bk	* CTL	[0: Service] or [1: User]
010	Developer: M	* CTL	
011	Developer: C	* CTL	
012	Developer: Y	* CTL	
013	Image Transfer Belt	* CTL	[0: Service] or [1: User]
014	Image Transfer Cleaning Unit	* CTL	[0: Service] or [1: User]
015	Fusing Unit	* CTL	[0: Service] or [1: User]
016	Paper Transfer Roller Unit	* CTL	[0: Service] or [1: User]
017	Waste Toner bottle	* CTL	[0: Service] or [1: User]
018	Fusing Roller	* CTL	[0: Service] or [1: User]
019	Pressure Roller	* CTL	[0: Service] or [1: User]

5071	[Set Bypass Paper Size Display]		
	-	* CTL	[0 or 1 / 0 / -] 0: Off, 1: On
001	Turn on or off the paper size confirmation pop-up on the LED. This pop-up prevents mismatching between a paper size selected by the operation panel and an actual paper size on the by-pass tray.		

5074	[Home Screen Login] Sets the application that appears when the home key is pressed.		
091	(0:OFF 1:SDK 2:Reserve)	* CTL	<b>0: Function disable</b> 1: SDK application 2: Legacy application (reserved)
092	Product ID	* CTL	Sets the Application product ID. [0x00 to 0xffff / - / 1/step]
093	Application ID	* CTL	Sets the display category of the application that is specified in the SP5075-001,002 [0 to 255 / 0 / 1/step]

5075	[USB Keyboard] Sets the function of the external keyboard.		
001	Function Setting	*CTL	<b>0: Disable</b> 1: Enable

002	Keyboard Type Setting	<p>Sets the external keyboard type.</p> <p><b>0: None</b></p> <p>1: English (NA)</p> <p>2: Turkish</p> <p>3: Korean</p> <p>4: Chinese (Simplified)</p> <p>5: Chinese (Traditional)</p> <p>6: English (UK)</p> <p>7: French (France)</p> <p>8: French (Belgium)</p> <p>9: French (Canada)</p> <p>10: German</p> <p>11: Italian</p> <p>12: Spanish</p> <p>13: Spanish (Latin America)</p> <p>14: Dutch</p> <p>15: Norwegian</p> <p>16: Danish</p> <p>17: Swedish</p> <p>18: Portuguese</p> <p>19: Portuguese (Brazil)</p> <p>20: Finnish</p> <p>21: Catalan</p> <p>22: Portuguese</p> <p>23: Hungarian</p> <p>24: Czech</p> <p>25: Russian</p> <p>26: Japanese</p> <p>27: Greek</p>
-----	-----------------------	---

5104\*

[Counter: Size Setting] A3/DLT Double Count (**SSP**)

	<p>Specifies whether the counter is doubled for A3/DLT. "Yes" counts except from the bypass tray. When "Yes" is selected, A3 and DLT paper are counted twice, that is A4 x2 and LT x2 respectively.</p> <p><b>Default setting: Yes</b></p>
--	--

5113	[Optional Counter Type]		
001	Default Optional Counter Type	*CTL	<p>This program specifies the counter type.</p> <p><b>0: None</b>, 1: Key card (RK 3, 4)                  2: Key card (down), 3: Prepaid card                  4: Coin rack, 5: MF key card                  8: Key counter + Vendor                  9: Bar-code Printer</p>
002	External Optional Counter Type	*CTL	<p>This program specifies the external counter type.</p> <p><b>0: None</b>                  1: Expansion Device 1                  2: Expansion Device 2                  3: Expansion Device 3</p>

5114	[Optional Counter I/F]		
001	MF Key Card Extension	*CTL	<b>[0: Not installed/ 1: Installed (scanning accounting)]</b>

5118	[Disable Copying]		
	This program disables copying.		
001	-	*CTL	<b>[0: Not disabled/ 1: Disabled]</b>

5120	[Mode Clear Opt. Counter Removal]		
	This program updates the information on the optional counter. When you install or remove an optional counter, check the settings.		
001	-	*CTL	<b>[0: Yes (removed)/ 1: Standby (installed but not used)/ 2: No (not removed)]</b>

5121	[Counter Up Timing]		
	This program specifies when the counter goes up. The settings refer to "paper feed" and "paper exit" respectively.		
001	0:Feed 1:Exit	*CTL	[0: Feed/ 1: Exit]

5126	[F Size Original Setting]		
	Selects F size original setting.		
001	-	*ENG	[0 to 2 / 0 / 1 /step] 0: 8 1/2" x 13" (Foolscap) 1: 8 1/4" x 13" (Folio) 2: 8" x 13" (F)

5127	[APS Mode]		
	This program disables the APS.		
001	-	*CTL	[0: Not disabled/ 1: Disabled]

5131	[Paper Size Type Selection]		
	The program selects a paper size system from the following alternatives: the AB system (0), the LT system (1), and the AF system (2).		
001	-	*ENG	[0: JP (Japan)/ 1: NA / 2: EU]

5148	Size Detection Off	*CTL	[0: OFF/ 1: ON]
	0: Detect 1: Not Detect		

5150	[Bypass Length Setting]		
	Determines whether the transfer sheet from the by-pass tray is used or not. Normally the paper length for sub scanning paper from the by-pass tray is limited to 600 mm, but this can be extended with this SP to 1260 mm.		
001	0: OFF 1: ON	*CTL	[0: OFF/ 1: ON]

5162	[App. Switch Method]	*CTL	[0: Soft Key Set/ 1: Hard Key Set]
001	This program specifies the switch that selects an application program.		

5167	[Fax Printing Mode at Optional Counter Off]		
	Enables or disables the automatic print out without an accounting device. This SP is used when the receiving fax is accounted by an external accounting device.		
001	-	*CTL	[0 or 1 / 0 / -] 0: Automatic printing 1: No automatic printing

5

5169	[CE Login]		
	If you will change the printer bit switches, you must 'log in' to service mode with this SP before you go into the printer SP mode.		
001	CE Login	*CTL	[0 or 1 / 0 / -] 0: Disabled 1: Enabled

5181	[Size Adjust]		
	Adjusts the paper size for each tray.		
001	TRAY 1	*ENG	[0 to 3 / 0 (EU/ASIA), 1 (NA) / 1 /step] 0: A4 LEF, 1: LT LEF, 2: B5 LEF, 3: A5 LEF
002	TRAY 2: 1	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A4 LEF, 1: LT LEF
003	TRAY 2: 2	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A3, 1: DLT
004	TRAY 2: 3	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B4, 1: LG
005	TRAY 2: 4	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B5 LEF, 1: Exe LEF



006	TRAY 3/T-LCT: 1	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A4 LEF, 1: LT LEF
007	TRAY 3: 2	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A3, 1: DLT
008	TRAY 3: 3	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B4, 1: LG
009	TRAY 3: 4	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B5 LEF, 1: Exe LEF
010	TRAY 4: 1	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A4 LEF, 1: LT LEF
011	TRAY 4: 2	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A3, 1: DLT
012	TRAY 4: 3	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B4, 1: LG
013	TRAY 4: 4	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B5 LEF, 1: Exe LEF
018	LCT	*ENG	[0 to 2 / 0 (EU/ASIA), 1 (NA) / -] 0: A4LEF, 1: LTLEF, 2: B5LEF

5186	[RK 4]		
	Enables or disables the prevention for RK4 (accounting device) disconnection. If the RK4 is disconnected for 10 seconds when this SP is set to "1 (Enable)", the machine automatically jams a sheet of paper and stops.		
001	-	*ENG	[0 or 1 / 0 / 1/step] 0: Disable 1: Enable

5188	[Copy Nv Version]		
	Displays the version number of the NVRAM on the controller board.		
001	-	-	-

5193	[External Controller Info. Settings]		
001	-	-	<p>Sets the external controller type. This setting is appropriately adjusted if an external controller is installed in the machine.</p> <p>[0 to 10 / 0 / 1/step]</p> <p>0: No external controller installed</p> <p>1: EFI controller</p> <p>2: Ratio controller</p> <p>3: Egret controller</p> <p>4 to 10: Reserved</p>

5199	[Paper Exit After Staple End.]		
001	-	*CTL	<p>[ 0 or 1 / 0 / -]</p> <p>0: OFF, 1: ON</p>
<p>Enables or disables the paper feeding out from the finisher without stapling.</p> <ul style="list-style-type: none"> <li>• If this setting is "1: ON", paper is fed out without stapling at the maximum number of the finisher stapling when the machine gets a multiple printing job (over maximum number).</li> <li>• If this setting is "0: OFF", paper is fed out with stapling at the maximum number of the finisher stapling when the machine gets a multiple printing job (over maximum number).</li> </ul>			

5212	[Page Numbering]	*CTL	
<p>This program adjusts the position of the second side page numbers.</p> <p>A "- value" moves the page number positions to the left edge. A "+ value" moves the page number positions to the right edge.</p>			
003	Duplex Printout Right/Left Position	[-10 to 10 / 0 / 1 mm/step]	
004	Duplex Printout High/Low Position	[-10 to 10 / 0 / 1 mm/step]	

5302	[Set Time]		
	Adjusts the RTC (real time clock) time setting for the local time zone. Examples: For Japan (+9 GMT), enter 540 (9 hours x 60 min.) DOM: +540 (Tokyo) NA: -300 (New York) EU: + 60 (Paris) CH: +480 (Peking) TW: +480 (Taipei) AS: +480 (Hong Kong)		
002	Time Difference	*CTL #	[-1440 to 1440 / -300 / 1 min./step]

5307	[Summer Time]		
001	Setting		[ 0 to 1 / NA, EU, ASIA / 1 /step] 0: Disabled 1: Enabled NA and EUR: 1, ASIA: 0
	Enables or disables the summer time mode. <b>Note</b> <ul style="list-style-type: none"> <li>Make sure that both SP5-307-3 and -4 are correctly set. Otherwise, this SP is not activated even if this SP is set to "1".</li> </ul>		

003	Rule Set (Start)		
	<p>Specifies the start setting for the summer time mode.</p> <p>There are 8 digits in this SP. For months 1 to 9, the "0" cannot be input in the first digit, so the eight-digit setting for -2 or -3 becomes a seven-digit setting.</p> <p>1st and 2nd digits: The month. [1 to 12]                  3rd digit: The week of the month. [1 to 5]                  4th digit: The day of the week. [0 to 6 = Sunday to Saturday]                  5th and 6th digits: The hour. [00 to 23]                  7th digit: The length of the advanced time. [0 to 9 / 1 hour /step]                  8th digit: The length of the advanced time. [0 to 5 / 10 minutes /step]</p> <ul style="list-style-type: none"> <li>• The digits are counted from the left.</li> <li>• Make sure that SP5-307-1 is set to "1".</li> </ul>		
<p><b>For example:</b> 3500010 (EU default)                  The timer is advanced by 1 hour at am 0:00 on the 5th Sunday in March</p>			
004	Rule Set (End)	-	-
	<p>Specifies the end setting for the summer time mode.</p> <p>There are 8 digits in this SP.</p> <p>1st and 2nd digits: The month. [1 to 12]                  3rd digit: The week of the month. [0 to 5]                  4th digit: The day of the week. [0 to 7 = Sunday to Saturday]                  5th and 6th digits: The hour. [00 to 23]                  The 7th and 8 digits must be set to "00".</p> <ul style="list-style-type: none"> <li>• The digits are counted from the left.</li> <li>• Make sure that SP5-307-1 is set to "1".</li> </ul>		

5404	[User Code Count Clear]		
001	UCodeCtrClr		Clears all counters for users.

5411	[LDAP Certification]		
004	Easy Certification	*CTL	Determines whether easy LDAP certification is done. [0 or 1 / 1 / -] 1: On, 0: Off

005	Password Null Not Permit	*CTL	This SP is referenced only when SP5411-4 is set to "1" (On). [0 or 1 / 0 / -] 0: Password NULL not permitted. 1: Password NULL permitted.
006	Detail Option	*CTL	Determines whether LDAP option (anonymous certification) is turned on or off. Bit0 0: OFF, 1: ON

5413	[Lockout Setting]		
001	Lockout On/Off	*CTL	Switches on/off the lock on the local address book account. [0 or 1 / 0 / -] 0: Off, 1: On
002	Lockout Threshold	*CTL	Sets a limit on the frequency of lockouts for account lockouts. [1 to 10 / 5 / 1/step]
003	Cancellation On/Off	*CTL	Determines whether the system waits the prescribed time for input of a correct user ID and password after an account lockout has occurred. [0 or 1 / 0 / -] 0: Off (no wait time, lockout not cancelled) 1: On (system waits, cancels lockout if correct user ID and password are entered).
004	Cancellation Time	*CTL	Determines the length of time that the system waits for correct input of the user ID and password after a lockout has occurred. This setting is used only if SP5413-3 is set to "1" (on). [1 to 999 / 60 / 1 min./step]

5414	[Access Mitigation]		
------	---------------------	--	--

001	Mitigation On/Off	*CTL	Switches on/off masking of continuously used IDs and passwords that are identical. [0 or 1 / <b>0</b> / -] 0: Off, 1: On
002	Mitigation Time	*CTL	Sets the length of time for excluding continuous access for identical user IDs and passwords. [0 to 60 / <b>15</b> / 1 min./step]

5415	[Password Attack]		
001	Permissible Number	*CTL	Sets the number of attempts to attack the system with random passwords to gain illegal access to the system. [0 to 100 / <b>30</b> / 1 attempt/step]
002	Detect Time	*CTL	Sets the time limit to stop a password attack once such an attack has been detected. [1 to 10 / <b>5</b> / 1 sec./step]

5416	[Access Information]		
001	Access User Max Num	*CTL	Limits the number of users used by the access exclusion and password attack detection functions. [50 to 200 / <b>200</b> / 1 users/step]
002	Access Password Max Num	*CTL	Limits the number of passwords used by the access exclusion and password attack detection functions. [50 to 200 / <b>200</b> / 1 password/step]
003	Monitor Interval	*CTL	Sets the processing time interval for referencing user ID and password information. [1 to 10 / <b>3</b> / 1 sec./step]

5417	[Access Attack]		
------	-----------------	--	--

001	Access Permissible Number	*CTL	Sets a limit on access attempts when an excessive number of attempts are detected for MFP features. [0 to 500 / <b>100</b> / 1/step]
002	Attack Detect Time	*CTL	Sets the length of time for monitoring the frequency of access to MFP features. [10 to 30 / <b>10</b> / 1 sec./step]
003	Productivity Fall Wait	*CTL	Sets the wait time to slow down the speed of certification when an excessive number of access attempts have been detected. [0 to 9 / <b>3</b> / 1 sec./step]
004	Attack Max Num	*CTL	Sets a limit on the number of requests received for certification in order to slow down the certification speed when an excessive number of access attempts have been detected. [50 to 200 / <b>200</b> / 1 attempt/step]

5420	[User Authentication]		
	These settings should be done with the System Administrator. <b>Note:</b> These functions are enabled only after the user access feature has been enabled.		
001	Copy	*CTL	Determines whether certification is required before a user can use the copy applications. [0 to 1 / <b>0</b> / 1] 0: On, 1: Off

002	Color Security Setting	*CTL	-
	<p>Enables or disables the color copy limitation for each copy mode when the user authentication is "ON".</p> <p><b>0: Enable (default), 1: Disable</b></p> <p>Bit0: B/W mode                  Bit1: Mono color mode                  Bit2: Two colors mode                  Bit3: Full color mode                  Bit4: Automatic color mode                  Bit5 to 7: Reserved</p>		
011	DocumentServer	*CTL	<p>Determines whether certification is required before a user can use the document server.</p> <p>[0 or 1/ <b>0</b> /1]                  0: On, 1: Off</p>
021	Fax	*CTL	<p>Determines whether certification is required before a user can use the fax application.</p> <p>[0 or 1/ <b>0</b> /1]                  0: On, 1: Off</p>
031	Scanner	*CTL	<p>Determines whether certification is required before a user can use the scan applications.</p> <p>[0 or 1/ <b>0</b> /1]                  0: On, 1: Off</p>
041	Printer	*CTL	<p>Determines whether certification is required before a user can use the printer applications.</p> <p>[0 or 1/ <b>0</b> /1]                  0: On, 1: Off</p>
051	SDK1	*CTL	<p>[0 or 1 / <b>0</b> / 1] 0: ON. 1: OFF</p> <p>Determines whether certification is required before a user can use the SDK application.</p>
061	SDK2		
071	SDK3		



5481	[Authentication Error Code]		
	These SP codes determine how the authentication failures are displayed.		
001	System Log Disp	*CTL	Determines whether an error code appears in the system log after a user authentication failure occurs. [0 or 1 / 0 / 1] 0: Off, 1: On
002	Panel Disp	*CTL	Determines whether an error code appears on the operation panel after a user authentication failure occurs. [0 or 1 / 1 / 1] 1: On, 0: Off
5490	[MF KeyCard (Japan only)]		
001	Job Permit Setting	*CTL	Sets up operation of the machine with a keycard. [0 to 1 / 0 / 1] 0: Disabled. Cancels operation without a user code. 1: Enabled. Allows operation without a user code.
002	Count Mode Setting	*CTL	-
5501	[PM Alarm]	*CTL	-
001	PM Alarm Level		[0 to 9999 / 0 / 1 / step] 0: Alarm off 1 to 9999: Alarm goes off when <b>Value (1 to 9999) x 1000 &gt; PM counter</b>
002	Original Count Alarm		[0 or 1 / 0 / -] 0: No alarm sounds 1: Alarm sounds after the number of originals passing through the ARDF > 10,000
5504	[Jam Alarm]	*CTL	-

001	<p>Sets the alarm to sound for the specified jam level (document misfeeds are not included). [0 to 3 / <b>3</b> / 1 /step]</p> <p>0: Zero (Off) 1: Low (2.5K jams) 2: Medium (3K jams) 3: High (6K jams)</p>
-----	--

5505	[Error Alarm]		
	<p>Sets the error alarm level.</p> <p>The error alarm counter counts "1" when any SC is detected. However, the error alarm counter decreases by "1" when an SC is not detected during a set number of copied sheets (for example, default 1500 sheets).</p> <p>The error alarm occurs when the SC error alarm counter reaches "5".</p>		
001	-	*CTL	[0 to 255 / <b>C2.5c: 50, C2d: 60</b> / 100 copies /step]

5508*	[CC Call]	*CTL	-
001*	Jam Remains	0: Disable, 1: Enable	
	Enables/disables initiating a call for an unattended paper jam.		
002*	Continuous Jams	0: Disable, 1: Enable	
	Enables/disables initiating a call for consecutive paper jams.		
003*	Continuous Door Open	0: Disable, 1: Enable	
	Enables/disables initiating a call when the front door remains open.		
011*	Jam Detection: Time Length	[3 to 30 / <b>10</b> / 1 minute /step]	
	Sets the time a jam must remain before it becomes an "unattended paper jam". This setting is enabled only when SP5508-004 is set to "1".		
012*	Jam Detection: Continuous Count	[2 to 10 / <b>5</b> / 1 /step]	
	Sets the number of consecutive paper jams required to initiate a call. This setting is enabled only when SP5508-004 is set to "1".		

013*	Door Open: Time Length	[3 to 30 / <b>10</b> / 1 /step]
	Sets the length of time the door remains open before the machine initiates a call. This setting is enabled only when SP5-508-004 is set to "1".	

5515	[SC/Alarm Setting]	*CTL	-
	With NRS (New Remote Service) in use, these SP codes can be set to issue an SC call when an SC error occurs. If this SP is switched off, the SC call is not issued when an SC error occurs.		
001	SC Call	[0 or 1 / 1 / -] 0: Off 1: On	
002	Service Parts Near End Call		
003	Service Parts End Call		
004	User Call		
006	Communication Test Call	[0 or 1 / 1 / -] 0: Off 1: On	
007	Machine Information Notice		
008	Alarm Notice		
009	Non Genuine Tonner Alarm		
010	Supply Automatic Ordering Call		
011	Supply Management Report Call		
012	Jam/Door Open Call		

5516	[Individual PM Part Alarm Call]	*CTL	-
	With @Remote in use, these SP codes can be set to issue an PM alarm call when one of SP parts reaches its yield.		
001	Disable/Enable Setting (0: Not send, 1: Send)	[0 or 1 / 1 / -] 0: Not send, 1: Send	
004	Percent yield for triggering PM alert	[1 to 255 / <b>75</b> / 1 %/step]	

5610	[Base Gamma Control Point: Command]
------	-------------------------------------

004	Factory Setting	*ENG	-
	Recalls the factory settings.		
005	Restore	*ENG	-
	Overwrites the current values onto the factory settings.		
006	Restore	*ENG	-
	Recalls the previous settings.		

5611	[Toner Color in 2C]		
001	B-C	*ENG	[0 to 128 / 100 / 1 /step] 128: Darkest density
	Adjusts the Cyan correction value of the blue signal in two-color mode.		
002	B-M	*ENG	[0 to 128 / 100 / 1 /step] 128: Darkest density
	Adjusts the Magenta correction value of the blue signal in two-color mode.		
003	G-C	*ENG	[0 to 128 / 100 / 1 /step] 128: Darkest density
	Adjusts the Cyan correction value of the blue signal in two-color mode.		
004	G-Y	*ENG	[0 to 128 / 100 / 1 /step] 128: Darkest density
	Adjusts the Yellow correction value of the blue signal in two-color mode.		
005	R-M	*ENG	[0 to 128 / 100 / 1 /step] 128: Darkest density
	Adjusts the Magenta correction value of the blue signal in two-color mode.		
006	R-Y	*ENG	[0 to 128 / 100 / 1 /step] 128: Darkest density
	Adjusts the Yellow correction value of the blue signal in two-color mode.		

5618	[Color Mode Display Selection]		
------	--------------------------------	--	--

001	-	*CTL	[0 or 1 / 1 / - ] 0: ACS, Colour, Black & White, Two Colour, Single colour 1: ACD, Full Colour, Black & White
	Selects the color selection display on the LCD.		

**Note**

- Memory Clear (SP5-801)
- The following tables list the items that are cleared. The serial number information, meter charge setting and meter charge counters (SP8-581, 582, 583, 584, and 586) are not cleared.

5801	[Memory Clear]	
001	All Clear	Resets all correction data for process control and all software counters, and returns all modes and adjustments to their default values.
002	Engine	Clears the engine settings.
003	SCS	Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.
004	IMH Memory Clr	Initializes the IMH settings.
005	Mcs	Initializes the Mcs settings.
006	Copier Application	Initializes all copier application settings.
007	Fax Application	Initializes the fax reset time, job login ID, all TX/RX settings, local storage file numbers, and off-hook timer.

008	Printer Application	<p>The following service settings:</p> <ul style="list-style-type: none"> <li>• Bit switches</li> <li>• Gamma settings (User &amp; Service)</li> <li>• Toner Limit</li> </ul> <p>The following user settings:</p> <ul style="list-style-type: none"> <li>• Tray Priority</li> <li>• Menu Protect</li> <li>• System Setting except for setting of Energy Saver</li> <li>• I/F Setup (I/O Buffer and I/O Timeout)</li> <li>• PCL Menu</li> </ul>
009	Scanner Application	Initializes the scanner defaults for the scanner and all the scanner SP modes.
010	Web Service	Deletes the network file application management files and thumbnails, and initializes the job login ID.
011	NCS	All setting of Network Setup (User Menu) (NCS: Network Control Service)
012	R-Fax	Initializes the job login ID, SmartDeviceMonitor for Admin, job history, and local storage file numbers.
014	Clear DCS Setting	Initializes the DCS (Delivery Control Service) settings.
015	Clear UCS Setting	Initializes the UCS (User Information Control Service) settings.
016	MIRS Setting	Initializes the MIRS (Machine Information Report Service) settings.
017	CCS	Initializes the CCS (Certification and Charge-control Service) settings.
018	SRM Memory Clr	Initializes the SRM (System Resource Manager) settings.
019	LCS	Initializes the LCS settings.
020	Web Uapli	Initializes the web user application settings.
021	ECS	Initializes the ECS settings.

5802	[FreeRun]		
	Performs a free run on the copier engine.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The machine starts free run in the same condition as the sequence of A4/LT, A3 or A4 SEF printing from the 1st or 2nd tray. Therefore, the correct paper should be loaded in the 1st tray or 2nd tray, but paper is not fed.</li> <li>The main switch has to be turned off and on after using the free run mode for a test.</li> </ul>		
	001	B/W A4 LEF	-
002	FC A4 LEF	-	-
003	FC A3 LEF	*ENG	

5803	[Input Check]	-	See p.711 in this section.
044	Cooling Fan: Lock	*ENG	0: Unlock 1: Lock
045	2nd Duct Fan2: Lock	*ENG	0: Unlock 1: Lock

5804	[Output Check]	-	See p.711 in this section.
------	----------------	---	----------------------------

5805	[Anti-Condensation Heater]		
002	0:OFF / 1:ON	*ENG	-

5810	[SC Reset]		
	Resets a type A service call condition.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>Turn the main switch off and on after resetting the SC code.</li> </ul>		
	001	Fusing SC Reset	-
002	Hard High Temp. Detection	-	-

5811	[MachineSerial] Machine Serial Number Display		
------	---	--	--

002	Display	*ENG	Displays the machine serial number.
004	BCU		Inputs

5812	[Service Tel. No. Setting]		
001	Service	*CTL	-
	Sets the telephone number for a service representative. This number is printed on the Counter List, which can be printed with the user's "Counter" menu. This can be up to 20 characters (both numbers and alphabetic characters can be input).		
002	Facsimile	*CTL	-
	Sets the fax or telephone number for a service representative. This number is printed on the Counter List. This can be up to 20 characters (both numbers and alphabetic characters can be input).		
003	Supply	*CTL	-
	Use this to input the telephone number of your supplier for consumables. Enter the number and press #.		
004	Operation	*CTL	-
	Use this to input the telephone number of your sales agency. Enter the number and press #.		

5816	[Remote Service]	*CTL	-
001	I/F Setting		
	Selects the remote service setting. [0 to 2 / 2 / 1 /step] 0: Remote service off 1: CSS remote service on 2: NRS remote service on		



002	CE Call
	<p>Performs the CE Call at the start or end of the service.</p> <p>[0 or 1 / <b>0</b> / 1 /step]</p> <p>0: Start of the service</p> <p>1: End of the service</p> <p><b>NOTE:</b> This SP is activated only when SP 5816-001 is set to "2".</p>
003	Function Flag
	<p>Enables or disables the remote service function.</p> <p>[0 to 1 / <b>0</b> / 1 /step]</p> <p>0: Disabled</p> <p>1: Enabled</p>
007	SSL Disable
	<p>Controls if RCG (Remote Communication Gate) confirmation is done by SSL during an RCG send for the @Remote over a network interface.</p> <p>[0 or 1 / <b>0</b> / 1 /step]</p> <p>0: Yes. SSL not used.</p> <p>1: No. SSL used.</p>
008	RCG Connect Timeout
	<p>Sets the length of time (seconds) for the time-out when the RCG (Remote Communication Gate) connects during a call via the @Remote network.</p> <p>[1 to 90 / <b>30</b> / 1 second /step]</p>
009	RCG Write Timeout
	<p>Sets the length of time (seconds) for the time-out when sent data is written to the RCG during a call over the @Remote network.</p> <p>[1 to 100 / <b>60</b> / 1 second /step]</p>
010	RCG Read Timeout
	<p>Sets the length of time (seconds) for the timeout when sent data is written from the RCG during a call over the @Remote network.</p> <p>[1 to 100 / <b>60</b> / 1 second /step]</p>

011	Port 80 Enable	-
	Controls if permission is given to get access to the SOAP method over Port 80 on the @Remote network. [0 or 1 / <b>0</b> / -] 0: No. Access denied 1: Yes. Access granted.	
013	RFU Timing	
	Selects the timing for the remote firmware updating. [0 or 1 / <b>1</b> / -] 0: Any status of a target machine 1: Sleep or panel off mode only	
021	RCG – C Registered	
	This SP displays the RCG-N installation end flag. 0: Installation not completed 1: Installation completed	
023	Connect Type (N/M)	
	This SP displays and selects the RCG-N connection method. [0 or 1 / <b>0</b> / 1 /step] 0: Internet connection 1: Dial-up connection	
061	Cert Expire Timing <b>DFU</b>	Proximity of the expiration of the certification. [0 to 0xffffffff / <b>0</b> / 1 /step]
062	Use Proxy	This SP setting determines if the proxy server is used when the machine communicates with the service center. [0 or 1 / <b>0</b> / 1 /step] 0: Not use 1: Use

063	<p>Proxy Host</p> <p>This SP sets the address of the proxy server used for communication between the RCG device and the gateway. Use this SP to set up or display the customer proxy server address.</p> <p>The address is necessary to set up the embedded RCG-N.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The address display is limited to 128 characters. Characters beyond the 128 character are ignored.</li> <li>This address is customer information and is not printed in the SMC report.</li> </ul>
064	<p>Proxy PortNumber</p> <p>This SP sets the port number of the proxy server used for communication between the embedded RCG-N and the gateway. This setting is necessary to set up the embedded RC Gate-N.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>This port number is customer information and is not printed in the SMC report.</li> </ul>
065	<p>Proxy User Name</p> <p>This SP sets the HTTP proxy certification user name.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The length of the name is limited to 31 characters. Any character beyond the 31st character is ignored.</li> <li>This name is customer information and is not printed in the SMC report.</li> </ul>
066	<p>Proxy Password</p> <p>This SP sets the HTTP proxy certification password.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The length of the password is limited to 31 characters. Any character beyond the 31st character is ignored.</li> <li>This name is customer information and is not printed in the SMC report.</li> </ul>

	CERT:Up State
	Displays the status of the certification update.
	0 The certification used by RCG-N is set correctly.
	1 The certification request (setAuthKey) for update has been received from the GW URL and certification is presently being updated.
	2 The certification update is completed and the GW URL is being notified of the successful update.
	3 The certification update failed, and the GW URL is being notified of the failed update.
	4 The period of the certification has expired and new request for an update is being sent to the GW URL.
	11 A rescue update for certification has been issued and a rescue certification setting is in progress for the rescue GW connection.
067	12 The rescue certification setting is completed and the GW URL is being notified of the certification update request.
	13 The notification of the request for certification update has completed successfully, and the system is waiting for the certification update request from the rescue GW URL.
	14 The notification of the certification request has been received from the rescue GW controller, and the certification is being stored.
	15 The certification has been stored, and the GW URL is being notified of the successful completion of this event.
	16 The storing of the certification has failed, and the GW URL is being notified of the failure of this event.
	17 The certification update request has been received from the GW URL, the GW URL was notified of the results of the update after it was completed, but an certification error has been received, and the rescue certification is being recorded.
	18 The rescue certification of No. 17 has been recorded, and the GW URL is being notified of the failure of the certification update.

068	CERT:Error	
	Displays a number code that describes the reason for the request for update of the certification.	
	0	Normal. There is no request for certification update in progress.
	1	Request for certification update in progress. The current certification has expired.
	2	An SSL error notification has been issued. Issued after the certification has expired.
	3	Notification of shift from a common authentication to an individual certification.
	4	Notification of a common certification without ID2.
	5	Notification that no certification was issued.
6	Notification that GW URL does not exist.	
069	CERT:Up ID	The ID of the request for certification.
083	Firm Up Status	Displays the status of the firmware update.
085	Firm Up User Check	This SP setting determines if the operator can confirm the previous version of the firmware before the firmware update execution. If the option to confirm the previous version is selected, a notification is sent to the system manager and the firmware update is done with the firmware files from the URL.
086	Firmware Size	Allows the service technician to confirm the size of the firmware data files during the firmware update execution.
087	CERT: Macro Ver.	Displays the macro version of the @Remote certification.
088	CERT: PAC Ver.	Displays the PAC version of the @Remote certification.
089	CERT: ID2 Code	Displays ID2 for the @Remote certification. Spaces are displayed as underscores (_). Asterisks (****) indicate that no @Remote certification exists.
090	CERT: Subject	Displays the common name of the @Remote certification subject. CN = the following 17 bytes. Spaces are displayed as underscores (_). Asterisks (****) indicate that no DESS exists.

091	CERT: Serial No	Displays serial number for the NRS certification. Asterisks (***) indicate that no DESS exists.
092	CERT: Issuer	Displays the common name of the issuer of the @Remote certification. CN = the following 30 bytes. Asterisks (***) indicate that no DESS exists.
093	CERT: Valid Start	Displays the start time of the period for which the current @Remote certification is enabled.
094	CERT: Valid End	Displays the end time of the period for which the current @Remote certification is enabled.
102	CERT: Strength	Displays cryptic strength of the NRS certification. 1: 512 bit 2: 2048 bit
150	Selection Country	
	<p>Select the country where embedded RCG-M is installed in the machine. After selecting the country, you must also set the following SP codes for embedded RCG-M:</p> <ul style="list-style-type: none"> <li>• SP5816-153</li> <li>• SP5816-154</li> <li>• SP5816-161</li> </ul> <p>0: Japan, 1: USA, 2: Canada, 3: UK, 4: Germany, 5: France, 6: Italy, 7: Netherlands, 8: Belgium, 9: Luxembourg, 10: Spain</p>	
151	Line Type Automatic Judgment	
	<p>Press [Execute].</p> <p>Setting this SP classifies the telephone line where embedded RCG-M is connected as either dial-up (pulse dial) or push (DTMF tone) type, so embedded RCG-M can automatically distinguish the number that connects to the outside line.</p> <ul style="list-style-type: none"> <li>• The current progress, success, or failure of this execution can be displayed with SP5816-152.</li> <li>• If the execution succeeded, SP5816-153 will display the result for confirmation and SP5816-154 will display the telephone number for the connection to the outside line.</li> </ul>	

152	<p>Line Type Judgment Result</p> <p>Displays a number to show the result of the execution of SP5816151. Here is a list of what the numbers mean.</p> <p>0: Success</p> <p>1: In progress (no result yet). Please wait.</p> <p>2: Line abnormal</p> <p>3: Cannot detect dial tone automatically</p> <p>4: Line is disconnected</p> <p>5: Insufficient electrical power supply</p> <p>6: Line classification not supported</p> <p>7: Error because fax transmission in progress – ioctl() occurred.</p> <p>8: Other error occurred</p> <p>9: Line classification still in progress. Please wait.</p>
153	<p>Selection Dial / Push</p> <p>This SP displays the classification (tone or pulse) of the telephone line to the access point for embedded RCG-M. The number displayed (0 or 1) is the result of the execution of SP5816-151. However, this setting can also be changed manually.</p> <p>[0 or 1 / 0 / 1 /step]</p> <p>0: Tone Dialing Phone</p> <p>1: Pulse Dialing Phone</p> <p>Inside Japan "2" may also be displayed:</p> <p>0: Tone Dialing Phone</p> <p>1: Pulse Dialing Phone 1OPPS</p> <p>2: Pulse Dialing Phone 2OPPS</p>

154	<p>Outside Line Outgoing Number</p> <p>The SP sets the number that switches to PSTN for the outside connection for embedded RCG-M in a system that employs a PBX (internal line).</p> <ul style="list-style-type: none"> <li>• If the execution of SP5816-151 has succeeded and embedded RCG-M has connected to the <b>external</b> line, this SP display is completely blank.</li> <li>• If embedded RCG-M has connected to an <b>internal</b> line, then the number of the connection to the external line is displayed.</li> <li>• If embedded RCG-M has connected to an external line, a comma is displayed with the number. The comma is inserted for a 2 sec. pause.</li> <li>• The number setting for the external line can be entered manually (including commas).</li> </ul>
156	<p>Dial Up User Name</p> <p>Use this SP to set a user name for access to remote dial up. Follow these rules when setting a user name:</p> <ul style="list-style-type: none"> <li>• Name length: Up to 32 characters</li> <li>• Spaces and # allowed but the entire entry must be enclosed by double quotation marks (").</li> </ul>
157	<p>Dial Up Password</p> <p>Use this SP to set a password for access to remote dial up. Follow these rules when setting a user name:</p> <ul style="list-style-type: none"> <li>• Name length: Up to 32 characters</li> <li>• Spaces and # allowed but the entire entry must be enclosed by double quotation marks (").</li> </ul>
161	<p>Local Phone Number</p> <p>Use this SP to set the telephone number of the line where embedded RCG-M is connected. This number is transmitted to and used by the Call Center to return calls.</p> <p>Limit: 24 numbers (numbers only)</p>



162	Connection Timing Adjustment Incoming	
	<p>When the Call Center calls out to an embedded RCG-M modem, it sends a repeating ID tone (*#1#). This SP sets the time the line remains open to send these ID tones after the number of the embedded RCG-M modem is dialed up and connected.</p> <p>[0 to 24 / 1 / 1 /step]</p> <p>The actual amount of time is this setting x 2 sec. For example, if you set "2" the line will remain open for 4 sec.</p>	
163	Access Point	
	<p>This is the number of the dial-up access point for RCG-M. If no setting is done for this SP code, then a preset value (determined by the country selected) is used.</p> <p>Default: 0</p> <p>Allowed: Up to 16 alphanumeric characters</p>	
164	Line Connecting	
	<p>This SP sets the connection conditions for the customer. This setting dedicates the line to RCG-M only, or sets the line for sharing between RCG-M and a fax unit.</p> <p>[0 to 1 / 0 / 1 /step]</p> <p>0: Sharing Fax 1: No Sharing Fax</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• If this setting is changed, the copier must be cycled off and on.</li> <li>• SP5816 187 determines whether the off-hook button can be used to interrupt a RCG-M transmission in progress to open the line for fax transaction.</li> </ul>	
173	Modem Serial No.	This SP displays the serial number registered for the RCG-M.
174	Retransmission Limit	
	<p>Normally, it is best to allow unlimited time for certification and ID2 update requests, and for the notification that the certification has been completed. However, RCG-M generates charges based on transmission time for the customer, so a limit is placed upon the time allowed for these transactions.</p> <p>If these transactions cannot be completed within the allowed time, do this SP to cancel the time restriction.</p>	

187	FAX TX Priority	-	
	<p>This SP determines whether pushing the off-hook button will interrupt a RCG-M transmission in progress to open the line for fax transaction. This SP can be used only if SP5816164 is set to "0".</p> <p>[0 or 1/ 0 / - ]</p> <p>0: Disable, 1: Enable</p>		
200	Manual Polling	-	Executes the manual polling.
201	Regist Status		
	<p>Displays a number that indicates the status of the @Remote service device.</p> <p>0: Neither the registered device by the external nor embedded RCG device is set.</p> <p>1: The embedded RCG device is being set. Only Box registration is completed. In this status, this unit cannot answer a polling request from the external RCG.</p> <p>2: The embedded RCG device is set. In this status, the external RCG unit cannot answer a polling request.</p> <p>3: The registered device by the external RCG is being set. In this status the embedded RCG device cannot be set.</p> <p>4 The registered module by the external RCG has not started.</p>		
202	Letter Number	Allows entry of the number of the request needed for the RCG-N device.	
203	Confirm Execute	Executes the inquiry request to the @Remote GW URL.	
204	Confirm Result		
	<p>Displays a number that indicates the result of the inquiry executed with SP5816203.</p> <p><b>0:</b> Succeeded</p> <p>1: Inquiry number error</p> <p>2: Registration in progress</p> <p>3: Proxy error (proxy enabled)</p> <p>4: Proxy error (proxy disabled)</p> <p>5: Proxy error (Illegal user name or password)</p> <p>6: Communication error</p> <p>7: Certification update error</p> <p>8: Other error</p> <p>9: Inquiry executing</p>		

205	Confirm Place	
	Displays the result of the notification sent to the device from the GW URL in answer to the inquiry request. Displayed only when the result is registered at the GW URL.	
206	Register Execute	Executes "Embedded RCG Registration".
207	Register Result	
	<p>Displays a number that indicates the registration result.</p> <p><b>0:</b> Succeeded</p> <p>2: Registration in progress</p> <p>3: Proxy error (proxy enabled)</p> <p>4: Proxy error (proxy disabled)</p> <p>5: Proxy error (Illegal user name or password)</p> <p>6: Communication error</p> <p>7: Certification update error</p> <p>8: Other error</p> <p>9: Registration executing</p>	

208	Error Code		
	Displays a number that describes the error code that was issued when either SP5816-204 or SP5816-207 was executed. [-2147483647 to 2147483647 / 0 / -]		
	Cause	Code	Meaning
	Illegal Modem Parameter	-11001	Chat parameter error
		-11002	Chat execution error
		-11003	Unexpected error
	Operation Error, Incorrect Setting	-12002	Inquiry, registration attempted without acquiring device status.
		-12003	Attempted registration without execution of an inquiry and no previous registration.
		-12004	Attempted setting with illegal entries for certification and ID2.
		-12005	@Remote communication is prohibited. The device has an Embedded RC gate-related problem.
Operation Error, Incorrect Setting	-12006	A confirmation request was made after the confirmation had been already completed.	
	-12007	The request number used at registration was different from the one used at confirmation.	

208	Operation Error, Incorrect Setting	-12008	Update certification failed because mainframe was in use.
		-12009	D2 mismatch between an individual certification and NVRAM.
		-12010	Certification area is not initialized.
	Error Caused by Response from GW URL	-2385	Attempted dial up overseas without the correct international prefix for the telephone number.

208	Error Caused by Response from GW URL	-2387	Not supported at the Service Center
		-2389	Database out of service
		-2390	Program out of service
		-2391	Two registrations for same device
		-2392	Parameter error
		-2393	Basil not managed
		-2394	Device not managed
		-2395	Box ID for Basil is illegal
		-2396	Device ID for Basil is illegal
		-2397	Incorrect ID2 format
-2398	Incorrect request number format		
209	Instal Clear		Releases the machine from its embedded RCG setup.
250	CommLog Print		Prints the communication log.

5821	[Remote Service Address]		
002	RCG IP Address	*CTL	Sets the IP address of the RCG (Remote Communication Gate) destination for call processing at the remote service center.

5824	[NV-RAM Data Upload]		
	Uploads the UP and SP mode data (except for counters and the serial number) from the NVRAM to an SD card. For details, see the "NVRAM Data Upload/Download" in this section.		
001	NV-RAM Data Upload	#	-

5825	[NV-RAM Data Download]		
	Downloads the UP and SP mode data from an SD card to the NVRAM. For details, see the "NVRAM Data Upload/Download" in this section.		

001	NV-RAM Download	#	-
5828	[Network Setting]	*CTL	-
050	1284 Compatibility (Centro)	Enables or disables 1284 Compatibility. [0 or 1 / 1 / 1 / step] 0: Disabled, 1: Enabled	
052	ECP (Centro)	Enables or disables ECP Compatibility. [0 or 1 / 1 / 1 / step] 0: Disabled, 1: Enabled <div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block; margin-top: 5px;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>This SP is activated only when SP5-828-50 is set to "1".</li> </ul>	
065	Job Spooling	Enables/disables Job Spooling. [0 or 1 / 0 / 1 / step] 0: Disabled, 1: Enabled	
066	Job Spooling Clear: Start Time	Treatment of the job when a spooled job exists at power on. 0: ON (Data is cleared) 1: OFF (Automatically printed)	
069	Job Spooling (Protocol)	Validates or invalidates the job spooling function for each protocol. 0: Validates 1: Invalidates bit0: LPR bit1: FTP bit2: IPP bit3: SMB bit4: BMLinkS bit5: DIPRINT bit6: sftp bit7: (Reserved)	

090	TELNET (0: OFF 1: ON)	Enables or disables the Telnet protocol. [0 or 1 / 1 / - ] 0: Disable, 1: Enable
091	Web (0: OFF 1: ON)	Enables or disables the Web operation. [0 or 1 / 1 / - ] 0: Disable, 1: Enable
145	Active IPv6 Link Local Address	This is the IPv6 local address link referenced on the Ethernet or wireless LAN (802.11b) in the format: "Link Local Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
147	Active IPv6 Stateless Address 1	These SPs are the IPv6 status addresses (1 to 5) referenced on the Ethernet or wireless LAN (802.11b) in the format: "Status Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
149	Active IPv6 Stateless Address 2	
151	Active IPv6 Stateless Address 3	
153	Active IPv6 Stateless Address 4	
155	Active IPv6 Stateless Address 5	
156	IPv6 Manual Address	This SP is the IPv6 manually set address referenced on the Ethernet or wireless LAN (802.11b) in the format: "Manual Set Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
158	IPv6 Gateway Address	This SP is the IPv6 gateway address referenced on the Ethernet or wireless LAN (802.11b). The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
161	IPv6 Stateless Auto Setting	Enables or disables the automatic setting for IPv6 stateless. [0 or 1 / 1 / 1 /step] 0: Disable, 1: Enable

236	Web Item visible	Displays or does not display the Web system items. [0 x 0000 to 0 x ffff / 0 x ffff] 0: Not displayed, 1: Displayed bit0: Net RICOH bit1: Consumable Supplier bit2-15: Reserved (all)
237	Web shopping link visible	Displays or does not display the link to Net RICOH on the top page and link page of the web system. [0 to 1 / 1 / 1] 0: Not display, 1:Display
238	Web supplies Link visible	Displays or does not display the link to Consumable Supplier on the top page and link page of the web system. [0 to 1 / 1 / 1] 0: Not display, 1:Display
239	Web Link1 Name	This SP confirms or changes the URL1 name on the link page of the web system. The maximum characters for the URL name are 31 characters.
240	Web Link1 URL	This SP confirms or changes the link to URL1 on the link page of the web system. The maximum characters for the URL are 127 characters.
241	Web Link1 visible	Displays or does not display the link to URL1 on the top page of the web system. [0 to 1 / 1 / 1] 0: Not display, 1:Display
242	Web Link2 Name	Same as "-239"
243	Web Link2 URL	Same as "-240"
244	Web Link2 visible	Same as "-241"
5832	[HDD] HDD Initialization	*CTL -



001	HDD Formatting (ALL)	Initializes the hard disk. Use this SP mode only if there is a hard disk error.
002	HDD Formatting (IMH)	
003	HDD Formatting (Thumbnail)	
004	HDD Formatting (Job Log)	
005	HDD Formatting (Printer Fonts)	
006	HDD Formatting (User Info)	
007	Mail RX Data	
008	Mail TX Data	
009	HDD Formatting (Data for a Design)	
010	HDD Formatting (Log)	
011	HDD Formatting (Ridoc I/F)	

5836	[Capture Setting]	*CTL	-
001	Capture Function (0:Off 1:On)	0: Disable, 1: Enable	
	With this function disabled, the settings related to the capture feature cannot be initialized, displayed, or selected.		
002	Panel Setting	0: Displayed, 1: Not displayed	
	Displays or does not display the capture function buttons.		
<p><b>5836-71 to 5836-78, Copier and Printer Document Reduction</b></p> <p>The following 6 SP modes set the default reduction for stored documents sent to the document management server via the MLB.</p> <p>Enabled only when optional MLB (Media Link Board) is installed.</p>			
071	Reduction for Copy Color	0: 1to-1, 1: 1/2, <b>2: 1/3</b> , 3: 1/4	
072	Reduction for Copy B&W Text	<b>0: 01</b> , 1: 1/2, 2: 1/3, 3: 1/4, 6: 2/3	
073	Reduction for Copy B&W Other	<b>0: 01</b> , 1: 1/2, 2: 1/3, 3: 1/4, 6: 2/3	
074	Reduction for Printer Color	0: 1to-1, 1: 1/2, <b>2: 1/3</b> , 3: 1/4	
075	Reduction for Printer B&W	<b>0: 01</b> , 1: 1/2, 2: 1/3, 3: 1/4, 6: 2/3	

076	Reduction for Printer B&W HQ	<b>0: 1to-1</b> , 1: 1/2, 2: 1/3, 3: 1/4
077	Reduction for Printer Color 1200dpi	1: 1/2, 3: 1/4, <b>4: 1/6</b> , 5: 1/8 (2: skipped), 6: 2/3
078	Reduction for Printer B&W 1200dpi	<b>1: 1/2</b> , 3: 1/4, 4: 1/6, 5: 1/8 (2: skipped), 6: 2/3
<p><b>5836-81 to 5836-86, Stored document format</b></p> <p>The following 6 SP modes set Sets the default format for stored documents sent to the document management server via the MLB.</p> <p>Enabled only when optional MLB (Media Link Board) is installed.</p>		
081	Format for Copy Color	<p><b>0: JFIF/JPEG</b>, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>This SP is not used in this model.</li> </ul>
082	Format for Copy B&W Text	0: JFIF/JPEG, <b>1: TIFF/MMR</b> , 2: TIFF/MH, 3: TIFF/MR
083	Format Copy B&W Other	0: JFIF/JPEG, <b>1: TIFF/MMR</b> , 2: TIFF/MH, 3: TIFF/MR
084	Format for Printer Color	<p><b>0: JFIF/JPEG</b>, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>This SP is not used in this model.</li> </ul>
085	Format for Printer B&W	0: JFIF/JPEG, <b>1: TIFF/MMR</b> , 2: TIFF/MH, 3: TIFF/MR
086	Format for Printer B&W HQ	0: JFIF/JPEG, 1: TIFF/MMR, <b>2: TIFF/MH</b> , 3: TIFF/MR
091	Default for JPEG	[5 to 95 / <b>50</b> / 1 /step]
	<p>Sets the JPEG format default for documents sent to the document management server via the MLB with JPEG selected as the format.</p> <p>Enabled only when optional MLB (Media Link Board) is installed.</p>	

101	Primary srv IP address	Sets the IP address for the primary capture server. This is basically adjusted by the remote system.
102	Primary srv scheme	This is basically adjusted by the remote system.
103	Primary srv port number	This is basically adjusted by the remote system.
104	Primary srv URL path	This is basically adjusted by the remote system.
111	Secondary srv IP address	Sets the IP address for the secondary capture server. This is basically adjusted by the remote system.
112	Secondary srv scheme	This is basically adjusted by the remote system.
113	Secondary srv port number	This is basically adjusted by the remote system.
114	Secondary srv URL path	This is basically adjusted by the remote system.
120	Default Reso Rate Switch	This is basically adjusted by the remote system.
121	Reso: Copy (Color)	[0 to 3 / <b>2</b> / 1/step]
	Selects the resolution for color copy mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 300dpi/ 2: 150dpi/ 3: 75dpi	
122	Reso: Copy (Mono)	[0 to 5 / <b>3</b> / 1/step]
	Selects the resolution for BW copy mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi	
123	Reso: Print (Color)	This is basically adjusted by the remote system. [0 to 3 / <b>2</b> / 1/step]
	Selects the resolution for color print mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 300dpi/ 2: 150dpi/ 3: 75dpi	
124	Reso: Print (Mono)	This is basically adjusted by the remote system. [0 to 5 / <b>3</b> / 1/step]
	Selects the resolution for BW print mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi	

125	Reso: Fax (Color)	This is basically adjusted by the remote system. [0 to 6 / 4 / 1/step]	
	Selects the resolution for color fax mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
126	Reso: Fax (Mono)	This is basically adjusted by the remote system. [0 to 6 / 3 / 1/step]	
	Selects the resolution for BW fax mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
127	Reso: Scan (Color)	This is basically adjusted by the remote system. [0 to 6 / 4 / 1/step]	
	Selects the resolution for color scanning mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
128	Reso: Scan (Mono)	This is basically adjusted by the remote system. [0 to 6 / 3 / 1/step]	
	Selects the resolution for BW scanning mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		

5840	[IEEE 802.11]		
006	Channel Max	*CTL	[1 to 11 or 13 / 11 or 13 / 1 /step] Europe/Asia: 1 to 13 NA/ Asia: 1 to 11
	Sets the maximum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the maximum end of the range for each area. Adjust the upper 4 bits to set the maximum number of channels. <b>DFU</b>		
<div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>• Do not change the setting.</li> </ul>			

	Channel Min	*CTL	[1 to 11 or 13 / 1 / 1 /step] Europe: 1 to 13 NA/ Asia: 1 to 11
007	<p>Sets the minimum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the minimum end of the range for each area. Adjust the lower 4 bits to set the minimum number of channels. <b>DFU</b></p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>Do not change the setting.</li> </ul>		
008	Transmission Speed	*CTL	<p>0 x 00 to 0 x FF / <b>0 x FF to Auto</b> / -] <b>0 x FF to Auto</b> [Default]</p> <p>0 x 11 - 55M Fix 0 x 10 - 48M Fix 0 x 0F - 36M Fix 0 x 0E - 18M Fix 0 x 0D - 12M Fix 0 x 0B - 9M Fix 0 x 0A - 6M Fix 0 x 07 - 11M Fix 0 x 05 - 5.5M Fix 0 x 08 - 1M Fix 0 x 13 - 0 x FE (reserved) 0 x 12 - 72M (reserved) 0 x 09 - 22M (reserved)</p>
011	WEP key Select	*CTL	<p>Selects the WEP key. [00 to 11 / <b>00</b> / 1 binary]</p> <p>00: Key #1 01: Key #2 (Reserved) 10: Key #3 (Reserved) 11: Key #4 (Reserved)</p>

042	Fragment Thresh	*CTL	Adjusts the fragment threshold for the IEEE802.11 card. [256 to 2346 / <b>2346</b> / 1] This SP is displayed only when the IEEE802.11 card is installed.
043	11g CTS to Self	*CTL	Determines whether the CTS self function is turned on or off. [0 to 1 / <b>1</b> / 1] 0: Off, 1: On This SP is displayed only when the IEEE802.11 card is installed.
044	11g Slot Time	*CTL	Selects the slot time for IEEE802.11. [0 to 1 / 0 / 1] 0: 20 μm, 1: 9 μm
045	WPA Debug Lvl	*CTL	Selects the debug level for WPA authentication application. [1 to 3 / <b>3</b> / 1] 1: Info, 2: warning, 3: error This SP is displayed only when the IEEE802.11 card is installed.
5841	[Supply Name Setting]		

001	Toner Name Setting: Black	*CTL	Specifies supply names. These appear on the screen when the user presses the Inquiry button in the user tools screen.
002	Toner Name Setting: Cyan		
003	Toner Name Setting: Yellow		
004	Toner Name Setting: Magenta		
007	OrgStamp		
011	Staple Std1		
012	Staple Std2		
013	Staple Std3		
014	Staple Std4		
021	Staple Bind 1		
022	Staple Blind2		
023	Staple Blind 3		

5844	[USB]		
001	Transfer Rate	*CTL	0x01: Full speed 0x04: Auto Change
	Adjusts the USB transfer rate.		
002	Vendor ID	*CTL	Displays the vendor ID. <b>DFU</b>
003	Product ID	*CTL	Displays the product ID. <b>DFU</b>
004	Device Release Number	*CTL	Displays the development release version number. <b>DFU</b>

5845	[Delivery Server Setting]	*CTL	-
	Provides items for delivery server settings.		
001	FTP Port No.	[0 to 65535 / <b>3670</b> / 1 /step]	
	Sets the FTP port number used when image files to the Scan Router Server.		

002	IP Address (Primary)	Range: 000.000.000.000 to 255.255.255.255
	Use this SP to set the Scan Router Server address. The IP address under the transfer tab can be referenced by the initial system setting.	
006	Delivery Error Display Time	[0 to 999 / 300 / 1 second /step]
	Use this setting to determine the length of time the prompt message is displayed when a test error occurs during document transfer with the NetFile application and an external device.	
008	IP Address (Secondary)	Range: 000.000.000.000 to 255.255.255.255
	Specifies the IP address assigned to the computer designated to function as the secondary delivery server of Scan Router. This SP allows only the setting of the IP address without reference to the DNS setting.	
009	Delivery Server Model	[0 to 4/ 0 / 1 /step]
	<p>Allows changing the model of the delivery server registered by the I/O device.</p> <p>0: Unknown</p> <p>1: SG1 Provided</p> <p>2: SG1 Package</p> <p>3: SG2 Provided</p> <p>4: SG2 Package</p>	
010	Delivery Svr. Capability	[0 to 255 / - / 1 /step]
	Bit7 = 1 Comment information exists	
	Bit6 = 1 Direct specification of mail address possible	
	Bit5 = 1 Mail RX confirmation setting possible	
	Bit4 = 1 Address book automatic update function exists	
	Bit3 = 1 Fax RX delivery function exists	
	Bit2 = 1 Sender password function exists	
	Bit1 = 1 Function to link MK-1 user and Sender exists	
	Bit0 = 1 Sender specification required (if set to 1, Bit6 is set to "0")	
Changes the capability of the registered that the I/O device registered.		



	Delivery Svr Capability (Ext)	[0 to 255 / - / 1 /step]
011	Changes the capability of the registered that the I/O device registered.	
	Bit7 = 1 Address book usage limitation (Limitation for each authorized user)	
	Bit6 = 1 RDH authorization link Bit5 to 0: Not used	
013	Server Scheme (Primary) <b>DFU</b>	
	This is used for the scan router program.	
014	Server Port Number (Primary) <b>DFU</b>	
	This is used for the scan router program.	
015	Server URL Path (Primary) <b>DFU</b>	
	This is used for the scan router program.	
016	Server Scheme (Secondary) <b>DFU</b>	
	This is used for the scan router program.	
017	Server Port Number (Secondary) <b>DFU</b>	
	This is used for the scan router program.	
018	Server URL Path (Secondary) <b>DFU</b>	
	This is used for the scan router program.	
022	Rapid Sending Control	
	Enables or disables the prevention function for the continuous data sending error. [0 to 1 / 1 / -]	
	0: Disable, 1: Enable	

5846	[UCS Setting]	*CTL	-
001	Machine ID (For Delivery Server)		Displays ID
	Displays the unique device ID in use by the delivery server directory. The value is only displayed and cannot be changed. This ID is created from the NIC MAC or IEEE 1394 EUI. The ID is displayed as either 6-byte or 8-byte binary.		

	Machine ID Clear (For Delivery Server)	Clears ID
002	Clears the unique ID of the device used as the name in the file transfer directory. Execute this SP if the connection of the device to the delivery server is unstable. After clearing the ID, the ID will be established again automatically by cycling the machine off and on.	
	Maximum Entries	[2000 to 20000 / <b>2000</b> / 1 /step]
003	Changes the maximum number of entries that UCS can handle. If a value smaller than the present value is set, the UCS managed data is cleared, and the data (excluding user code information) is displayed.	
	Delivery Server Retry Timer	[0 to 255 / <b>0</b> / 1 /step]
006	Sets the interval for retry attempts when the delivery server fails to acquire the delivery server address book.	
	Delivery Server Retry Times	[0 to 255 / <b>0</b> / 1 /step]
007	Sets the number of retry attempts when the delivery server fails to acquire the delivery server address book.	
	Delivery Server Maximum Entries	[2000 to 50000 / <b>2000</b> / 1 /step]
008	Sets the maximum number account entries of the delivery server user information managed by UCS.	
	LDAP Search Timeout	[1 to 255 / <b>60</b> / 1 /step]
010	Sets the length of the timeout for the search of the LDAP server.	
	WSD Maximum Entries	[5 to 250 / <b>250</b> / 1 /step]
020	Sets the maximum entries for the address book of the WSD (WS-scanner).	
	Addr Book Migration (USB => HDD)	
040	Not used in this machine.	

041	<p>Fill Addr Acl Info.</p> <p>This SP must be executed immediately after installation of an HDD unit in a basic machine that previously had no HDD. The first time the machine is powered on with the new HDD installed, the system automatically takes the address book from the NVRAM and writes it onto the new HDD. However, the new address book on the HDD can be accessed only by the system administrator at this stage. Executing this SP by the service technician immediately after power on grants full address book access to all users.</p> <p>Procedure</p> <ol style="list-style-type: none"> <li>1. Turn the machine off.</li> <li>2. Install the new HDD.</li> <li>3. Turn the machine on.</li> <li>4. The address book and its initial data are created on the HDD automatically.</li> <li>5. However, at this point the address book can be accessed by only the system administrator or key operator.</li> <li>6. Enter the SP mode and do SP5846-041. After this SP executes successfully, any user can access the address book.</li> </ol>	
043	Addr Book Media	<p>Displays the slot number where an address book data is in.</p> <p>[0 to 30 / - /1]</p> <p>0: Unconfirmed</p> <p>1: SD Slot 1</p> <p>2: SD Slot 2</p> <p>4: USB Flash ROM</p> <p>20: HDD</p> <p>30: Nothing</p>
047	Initialize Local Addr Book	Clears the local address book information, including the user code.
048	Initialize Delivery Addr Book	Clears the distribution address book information, except the user code.
049	Initialize LDAP Addr Book	Clears the LDAP address book information, except the user code.
050	Initialize All Addr Book	Clears all directory information managed by UCS, including all user codes.

051	Backup All Addr Book	Uploads all directory information to the SD card.
052	Restore All Addr Book	Downloads all directory information from the SD card.
053	Clear Backup Info	<p>Deletes the address book data from the SD card in the service slot.</p> <p>Deletes only the files that were uploaded from this machine.</p> <p>This feature does not work if the card is write-protected.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• After you do this SP, go out of the SP mode, and then turn the power off.</li> <li>• Do not remove the SD card until the Power LED stops flashing.</li> </ul>
060	Search option	
	<p>This SP uses bit switches to set up the fuzzy search options for the UCS local address book.</p> <p>Bit: Meaning</p> <p>0: Checks both upper/lower case characters</p> <p>1: Japan Only</p> <p>2: Japan Only</p> <p>3: Japan Only</p> <p>4 to 7: Not Used</p>	
062	Complexity option 1	
	<p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <b>upper case</b> and sets the length of the password.</p> <p>[0 to 32 / 0 / 1 /step]</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• This SP does not normally require adjustment.</li> <li>• This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.</li> </ul>	
063	Complexity Option 2 <b>DFU</b>	
064	Complexity Option 3 <b>DFU</b>	

065	Complexity Option 4 <b>DFU</b>	
091	FTP Auth Port Setting	Specifies the FTP port for getting a distribution server address book that is used in the identification mode. [0 to 65535 / <b>3671</b> / 1 /step]
094	Encryption Stat	Shows the status of the encryption function for the address book data.

5847	[Rep Resolution Reduction]	*CTL	-
	SP5847-1 through SP5847-8 changes the default settings of image data transferred externally by the Net File page reference function. [ 0 to 5 / <b>2</b> / 1 /step] SP5847-21 sets the default for JPEG image quality of image files handled by NetFile. "Net files" are jobs to be printed from the document server using a PC and the DeskTopBinder software.		
001	Rate for Copy Color	<b>0: 1x</b>	
002	Rate for Copy B&W Text	1: 1/2x	
003	Rate for Copy B&W Other	2: 1/3x	
004	Rate for Printer Color	3: 1/4x	
005	Rate for Printer B&W	4: 1/6x	
		5: 1/8x	
006	Rate for Printer Color 1200dpi	0: 1x 1: 1/2x 2: 1/3x 3: 1/4x <b>4: 1/6x</b> 5: 1/8x	
007	Rate for Printer B&W 1200dpi	0: 1x <b>1: 1/2x</b> 2: 1/3x 3: 1/4x 4: 1/6x 5: 1/8x	

021	Network Quality Default for JPEG
	Sets the default value for the quality of JPEG images sent as NetFile pages. This function is available only with the MLB (Media Link Board) option installed. [5 to 95 / <b>50</b> / 1 /step]

5848	[Web Service]	*CTL	-
	5848 2 sets the 4-bit switch assignment for the access control setting. Setting of 0001 has no effect on access and delivery from Scan Router. 5848 100 sets the maximum size allowed for downloaded images. The default is equal to 1 gigabyte.		
002	Access Ctrl: Repository (only Lower 4 bits)	0000: No access control 0001: Denies access to DeskTop Binder. 0010: No writing control	
003	Access Control: Doc. Svr. Print (Lower 4 bits)	Switches access control on and off. 0000: No access control 0001: Denies access to DeskTop Binder.	
004	Access Control: udirectory (Lower 4 bits)		
007	Access Ctrl: Comm. Log Fax (Lower 4 bits)		
009	Access Ctrl: Job Ctrl (Lower 4 bits)		
011	Access Ctrl: Devicemanagement (Lower 4bits)		
021	Access Ctrl: Delivery (Lower 4 bits)		
022	Access Ctrl: uadministration (Lower 4bits)		
99	Repository: Download Image Setting		
100	Repository: Download Image Max. Size	Specifies the max size of the image data that the machine can download. [1 to 2048 / <b>2048</b> / 1 MB /step]	

210	Setting: LogType: Job1	NIA
211	Setting: LogType: Job2	
212	Setting: LogType: Access	
213	Setting: PrimarySrv	
214	Setting: SecondarySrv	
215	Setting: StartTime	
216	Setting: IntervalTime	
217	Setting: Timing	

5849	[Installation Date]	*CTL	-
5849 1	Display	The "Counter Clear Day" has been changed to "Installation Date" or "Inst. Date".	
5849 2	Switch to Print	Determines whether the installation date is printed on the printout for the total counter. [0 or 1 / 1 / - ] 0: OFF (No Print) 1: ON (Print)	
003	Total Counter	-	

5850	[Address Book Function]	*CTL	-
003	Replacement of Circuit Classification <b>Japan Only</b>		
	The machine is sold ready to use with a G3 line. This SP allows you to switch all at once to convert to G4 after you add a G4 line. Conversely, if for some reason the G4 line becomes unusable, you can easily switch back to G3.		

5851	[Bluetooth]	*CTL	-
001	mode		
	Sets the operation mode for the Bluetooth Unit. Press either key. [0:Public] [1: Private]		

5853	[Stamp Data Download]		
	Use this SP to download the fixed stamp data stored in the firmware of the ROM and copy it to the HDD. This SP can be executed as many times as required. This SP must be executed after replacing or formatting the hard disks.		
<div style="border: 1px solid blue; border-radius: 15px; padding: 2px; display: inline-block;"> <b>Note</b> </div>			
<ul style="list-style-type: none"> <li>This SP can be executed only with the hard disks installed.</li> </ul>			

5856	[Remote ROM Update]		
	Allows the technician to upgrade the firmware using a local port (IEEE 1284) when updating the remote ROM.		
002	Local Port	*CTL	[0 to 1 / 0 / 1/step] 0: Disable 1: Enable

5857	[Save Debug Log]	*CTL	-
001	On/Off (1:ON 0:OFF)	0: OFF, 1: ON	
	Switches the debug log feature on and off. The debug log cannot be captured until this feature is switched on.		
002	Target (2: HDD 3: SD)	2: HDD, 3: SD Card	
	Selects the storage device to save debug logs information when the conditions set with SP5-858 are satisfied. [ 2 to 3 / 2 / 1 /step]		
005	Save to HDD		
	Saves the debug log of the input SC number in memory to the HDD. A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card.		
006	Save to SD Card		
	Saves the debug log of the input SC number in memory to the SD card.		
009	Copy HDD to SD Card (Latest 4 MB)		
010	Copy HDD to SD Card (Latest 4 MB Any Key)		



011	Erase HDD Debug Data
012	Erase SD Card Debug Data
013	Free Space on SD Card
014	Copy SD to SD (Latest 4 MB)
015	Copy SD to SD (Latest 4 MB Any Key)
016	Make HDD Debug
017	Make SD Debug

5858	[Debug Save When]	*CTL	-
	<p>These SPs select the content of the debugging information to be saved to the destination selected by SP5857-002.            SP5858-3 stores one SC specified by number. Refer to Section 4 for a list of SC error codes.</p>		
001	Engine SC Error (0: OFF, 1: ON)	Turns on/off the debug save for SC codes generated by copier engine errors. [0 or 1 / 0 / 1 / step]	
002	Controller SC Error (0: OFF, 1: ON)	Turns on/off the debug save for SC codes generated by GW controller errors. [0 or 1 / 0 / 1 / step]	
003	Any SC Error	[0 to 65535 / 0 / 1 / step]	
004	Jam (0: OFF, 1: ON)	Turns on/off the debug save for jam errors. [0 or 1 / 0 / 1 / step]	

5859	[Debug Save Key No.]	*CTL	-
------	----------------------	------	---

001	Key 1	<p>These SPs allow you to set up to 10 keys for log files for functions that use common memory on the controller board.</p> <p>[-9999999 to 9999999 / <b>0</b> / - ]</p>
002	Key 2	
003	Key 3	
004	Key 4	
005	Key 5	
006	Key 6	
007	Key 7	
008	Key 8	
009	Key 9	
010	Key 10	

5860	[SMTP/POP3/IMAP4]	*CTL	-
020	Partial Mail Receive Timeout	[1 to 168 / <b>72</b> / 1 hour/step]	
	Sets the amount of time to wait before saving a mail that breaks up during reception. The received mail is discarded if the remaining portion of the mail is not received during this prescribed time.		
021	MDN Response RFC2298 Compliance	[0 to 1 / <b>1</b> / - ]	
	Determines whether RFC2.5298 compliance is switched on for MDN reply mail. 0: No 1: Yes		
022	SMTP Auth. From Field Replacement	[0 to 1 / <b>0</b> / - ]	
	Determines whether the FROM item of the mail header is switched to the validated account after the SMTP server is validated. 0: No. "From" item not switched. 1: Yes. "From item switched.		

	SMTP Auth. Direct Setting	[0 or 1 / - / - ]
025	<p>Selects the authentication method for SMPT.</p> <p><b>Bit switch:</b></p> <ul style="list-style-type: none"> <li>• Bit 0: LOGIN</li> <li>• Bit 1: PLAIN</li> <li>• Bit 2: CRAM MD5</li> <li>• Bit 3: DIGEST MD5</li> <li>• Bit 4 to 7: Not used</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• This SP is activated only when SMTP authorization is enabled by UP mode.</li> </ul>	
026	S/MIME: MIME Header Setting	<p>Selects the MIME header type of an E-mail sent by S/MIME.</p> <p>[0 to 2 / 0 / 1]</p> <p>0: Microsoft Outlook Express standard</p> <p>1: Internet Draft standard</p> <p>2: RFC standard</p>

5870	[Common Key Info Writing]		
001	Writing	*CTL	Writes to flash ROM the common proof for validating the device for @Remote specifications.
003	Initialize	*CTL	Initializes the data area of the common proof for validating.

5873	[SD Card Appli Move]		
001	Move Exec	This SP copies the application programs from the original SD card in SD card slot 2 to an SD card in SD card slot 1.	
002	Undo Exec	This SP copies back the application programs from an SD card in SD Card Slot 2 to the original SD card in SD card slot 1. Use this menu when you have mistakenly copied some programs by using "Move Exec" (SP5873-1).	

5875	[SC Auto Reboot]		
------	------------------	--	--

001	Reboot Setting	*CTL	<p>Enables or disables the automatic reboot function when an SC error occurs.</p> <p>[0 or 1 / 0 / -]</p> <p>0: The machine reboots automatically when the machine issues an SC error and logs the SC error code. If the same SC occurs again, the machine does not reboot.</p> <p>1: The machine does not reboot when an SC error occurs.</p> <p>The reboot is not executed for Type A or C SC codes.</p>
002	Reboot Type	*CTL	<p>Selects the reboot method for SC.</p> <p>[0 or 1 / 0 / -]</p> <p>0: Manual reboot, 1: Automatic reboot</p>

5878	[Option Setup]		
001	Data Overwrite Security	-	Enables the Data Overwrite Security unit. Press "EXECUTE" on the operation panel. Then turn the machine off and on.
002	HDD Encryption	-	Installs the HDD Encryption unit.

5881	[Fixed Phrase Block Erasing]		
001	-	-	Deletes the fixed phrase.

5883	[Line Speed Selection]		
	Selects the line speed for middle thick paper.		
001	Middle Thick	*ENG	<p>[0 or 1 / 0 / 1 / step]</p> <p>0: MID CARD: Half Speed (115 mm/sec)</p> <p>1: MID CARD: Normal Speed (C2.5c: 154, C2.5d: 205 mm/sec)</p>

5885	[Set WIM Function] Web Image Monitor Settings		
	Close or disclose the functions of web image monitor.		

020	DocSvr Acc Ctrl	*CTL	<p>0: OFF, 1: ON</p> <p>Bit Meaning</p> <p>0: Forbid all document server access (1)</p> <p>1: Forbid user mode access (1)</p> <p>2: Forbid print function (1)</p> <p>3: Forbid fax TX (1)</p> <p>4: Forbid scan sending (1)</p> <p>5: Forbid downloading (1)</p> <p>6: Forbid delete (1)</p> <p>7: Reserved</p>
050	DocSvr Format	*CTL	<p>Selects the display type for the document box list.</p> <p>[0 to 2 / <b>0</b> / 1]</p> <p>0: Thumbnail, 1: Icon, 2: Details</p>
051	DocSvr Trans	*CTL	<p>Sets the number of documents to be displayed in the document box list.</p> <p>[5 to 20 / <b>10</b> / 1]</p>
100	Set Signature	*CTL	<p>Selects whether the signature is added to the scanned documents with the WIM when they are transmitted by an e-mail.</p> <p>[0 to 2 / <b>0</b> / 1/step]</p> <p>0: Setting for each e-mail</p> <p>1: Signature for all</p> <p>2: No signature</p>
101	Set Encrypsion	*CTL	<p>Determines whether the scanned documents with the WIM are encrypted when they are transmitted by an e-mail.</p> <p>[0 to 1 / <b>0</b> / 1]</p> <p>0: Not encrypted, 1:Encryption</p>
200	Detect Mem Leak	*CTL	Not Used
201	DocSvr Timeout	*CTL	Not Used

5887	[SD Get Counter]		
	This SP determines whether the ROM can be updated.		
001	-	*CTL	<p>This SP sends a text file to an SD card inserted in SD card Slot 2 (lower slot). The operation stores. The file is stored in a folder created in the root directory of the SD card called SD_COUNTER. The file is saved as a text file (*.txt) prefixed with the number of the machine.</p> <ol style="list-style-type: none"> <li>1. Insert the SD card in SD card Slot 2 (lower slot).</li> <li>2. Select SP5887 then touch [EXECUTE].</li> </ol> <p>Touch [Execute] in the message when you are prompted.</p>

5888	[Personal Information Protect]		
001	-	*CTL	<p>Selects the protection level for logs. [0 to 1 / 0 / 1}</p> <p>0: No authentication, No protection for logs 1: No authentication, Protected logs (only an administrator can see the logs)</p>

5893	[SDK Application Counter]	*CTL	-
	Displays the counter name of each SDK application.		
001	SDK-1		
002	SDK-2		
003	SDK-3		
004	SDK-4		
005	SDK-5		
006	SDK-6		

5894	[External Counter Setting]		
	Test Name1_1		

001	Switch Charge Mode	*ENG	[0 to 2 / 0 / 1/step]
5895	[Application Invalidation]		
	Enables or disables the printer or scanner application. These SPs are used only when an external controller is installed in the machine.		
001	Printer	*CTL	[0 or 1 / 0 / -]
002	Scanner	*CTL	0: Enable 1: Disable
5907	[Plug & Play Maker/Model Name]		
001	Selects the brand name and the production name for Windows Plug & Play. This information is stored in the NVRAM. If the NVRAM is defective, these names should be registered again. After selecting, press the "Original Type" key and "#" key at the same time. When the setting is completed, the beeper sounds five times.		
5913	[Switchover Permission Time]		
002	Print Application Timer	*CTL	[3 to 30 / 3 / 1 second /step]
	Sets the amount of time to elapse while the machine is in standby mode (and the operation panel keys have not been used) before another application can gain control of the display.		
5967	[Copy Server : Set Function]	*CTL	0: ON, 1: OFF
001	Enables and disables the document server. This is a security measure that prevents image data from being left in the temporary area of the HDD. After changing this setting, you must switch the main switch off and on to enable the new setting.		
5974	[Cherry Server]		
	Specifies which version of ScanRouter, "Lite" or "Full", is installed.		
001	(0:Light 1:Full)	*CTL	[0 or 1 / 0 / -]

5985	[Device Setting]	
	The NIC and USB support features are built into the GW controller. Use this SP to enable and disable these features. In order to use the NIC and USB functions built into the controller board, these SP codes must be set to "1".	
001	On Board NIC	<p>[0 to 2 / 0 / 1 /step]</p> <p>0: Disable, 1: Enable, 2: Function limitation</p> <p>When the "Function limitation" is set, "On board NIC" is limited only for the NRS or LDAP/NT authentication.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>Other network applications than NRS or LDAP/NT authentication are not available when this SP is set to "2". Even though you can change the initial settings of those network applications, the settings do not work.</li> </ul>
002	On Board USB	<p>[0 or 1 / 0 / 1/step]</p> <p>0: Disable, 1: Enable</p>

5987	[Mech. Counter]		
001	0: OFF / 1: ON	*ENG	This SP detects that a mechanical counter device is removed. If it is detected, SC610 occurs.

5990	[SP print mode]		
	Prints out the SMC sheets.		



001	All (Data List)	-	
002	SP (Mode Data List)	-	
003	User Program	-	
004	Logging Data	-	
005	Diagnostic Report	-	
006	Non-Default	-	-
007	NIB Summary	-	
008	Capture Log	-	
021	Copier User Program	-	
022	Scanner SP	-	
023	Scanner User Program	-	
024	SDK/J Summary	-	-
025	SDK/J Application Info	-	

5992	[SP Text mode]
	Exports the SMC sheet data to the SD Card.

001	All (Data List)	-	Press "Execute" key to start exporting the SMC data in the SP mode display.
002	SP (Mode Data List)	-	
003	User Program	-	
004	Logging Data	-	
005	Diagnostic Report	-	
006	Non-Default	-	
007	NIB Summary	-	
008	Capture Log	-	
021	Copier User Program	-	
022	Scanner SP	-	
023	Scanner User Program	-	
024	SDK/J Summary	-	
025	SDK/J Application Info	-	
026	Printer SP mode	-	

5998	[Fusing Cont mode] Fusing Control Mode		
	Turns the silent fusing warm-up mode on or off.		
001	fast/silent	*ENG	[0 or 1 / 1 / -] 0: Silent (less noise) 1: Fast (less time)

## Main SP Tables-6

### SP6-XXX (Peripherals)

6006	[ADF Adjustment]		
	Adjusts the side-to-side and leading registration of originals with the ARDF.		
001	Side-to-Side Regist: Front	*ENG	[-3.0 to 3.0 / 0 / 0.1 mm/step ]
002	Side-to-Side Regist: Rear		
003	Leading Edge Registration	*ENG	[-5.0 to 5.0 / 0 / 0.1 mm/step ]
	Adjusts the amount of paper buckle to correct original skew for the front and rear sides.		
005	Buckle: Duplex Front	*ENG	[-3.0 to 3.0 / 0 / 0.1 mm/step ]
006	Buckle: Duplex Rear		
	Adjusts the erase margin at the original trailing edge.		
007	Rear Edge Erase	*ENG	[-10 to 10 / 0 / 0.1 mm/step ]
6007	[ADF INPUT Check]		
	Displays the signals received from the sensors and switches of the ARDF. Only Bit 0 is used for ADF input check (📄 p.711 in this section).		
6008	[ADF OUTPUT Check]		
	Activates the electrical components for functional check. It is not possible to activate more than one component at the same time (📄 p.711 in this section).		
6009	[ADF Free Run]		
	Performs a DF free run in simplex, duplex mode or stamp mode.		
001	Free Run Simplex Motion	*ENG	-
002	Free Run Duplex Motion	*ENG	
003	Free Run Stamp Motion	*ENG	

6010	[Stamp Position Adj.] Fax Stamp Position Adjustment		
	Adjusts the horizontal position of the stamp on the scanned originals.		
001	-	*ENG	[-5.0 to 5.0 / <b>0</b> / 1 mm/step]

6016	[Original Size Detect Setting]			
	Specifies the original size for a size detected by the original sensor, since original sensors cannot recognize all sizes.			
001	-	*ENG	[0 or 1 / - / -] 0: Setting 1, 1: Setting 2	
		NA	Setting 1	Setting 2
			DLT SEF	Folio SEF 11" x 15"
			LG SEF	Foolscap SEF
			LT SEF	US EXE 8" x 10"
			LT LEF	US EXE LEF
		EU/ ASIA	DLT SEF	8K 267 x 390 mm
			LT SEF	16K 195 x 267 mm
			LT LEF	16K 267 x 195 mm

6017	[DF Magnification Adj.] DF Magnification Adjustment		
	Adjusts the magnification in the sub-scan direction for the ARDF.		
001	-	*CTL	[-5.0 to 5.0 / <b>0</b> / 0.1 %/step]

6020	[Skew Correction Moving Setting]		
	Turns the original skew correction in the ARDF for all original sizes on or off.		
001	-	*ENG	[0 or 1 / <b>0</b> / -] 0: Off (only for small original sizes) 1: On (for all original sizes)

6128	[Punch Position: Sub Scan]		
	Adjusts the punching position in the sub scan direction.		
001	Domestic 2Hole (Europe 2Hole)	*ENG	[-7.5 to 7.5 / <b>0</b> / 0.5 mm/step]
002	North America 3Hole	*ENG	
003	Europe 4Hole	*ENG	
004	North Europe 4Hole	*ENG	
005	North America 2Hole	*ENG	

6129	[Punch Position: Main Scan]		
	Adjusts the punching position in the main scan direction.		
001	Domestic 2Hole (Europe 2Hole)	*ENG	[-2.0 to 2.0 / <b>0</b> / 0.4 mm/step]
002	North America 3Hole	*ENG	
003	Europe 4Hole	*ENG	
004	North Europe 4Hole	*ENG	
005	North America 2Hole	*ENG	

6130	[Skew Correction: Buckle Adj.]		
	Adjusts the paper buckle for each paper size.		

001	A3T	*ENG	[-5.0 to 5.0 / 0 / 0.25 mm/step]
002	B4T	*ENG	
003	A4T	*ENG	
004	A4Y	*ENG	
005	B5T	*ENG	
006	B5Y	*ENG	
007	DLT-T	*ENG	
008	LG-T	*ENG	
009	LT-T	*ENG	
010	LT-Y	*ENG	
011	12*18	*ENG	
012	Other	*ENG	

6131	[Skew Correction Control]
	Selects the skew correction control for each paper size. These are only activated for B804/B805.

001	A3T	*ENG	[0 or 1 / <b>0</b> / 1/step] 0: No (No skew correction) 1: Roller Stop Skew Correction
002	B4T	*ENG	
003	A4T	*ENG	
004	A4Y	*ENG	
005	B5T	*ENG	
006	B5Y	*ENG	
007	DLT-T	*ENG	
008	LG-T	*ENG	
009	LT-T	*ENG	
010	LT-Y	*ENG	
011	12*18	*ENG	
012	Other	*ENG	


6132	[Jogger Fence Fine Adj]
	This SP adjusts the distance between the jogger fences and the sides of the stack on the finisher stapling tray in the (Booklet) Finisher B804/B805. The adjustment is done perpendicular to the direction of paper feed.


001	A3T	*ENG	[-1.5 to 1.5 / <b>0</b> / 0.5 mm/step] + Value: Increases distance between jogger fences and the sides of the stack. - Value: Decreases the distance between the jogger fences and the sides of the stack.
002	B4T	*ENG	
003	A4T	*ENG	
004	A4Y	*ENG	
005	B5T	*ENG	
006	B5Y	*ENG	
007	DLT-T	*ENG	
008	LG-T	*ENG	
009	LT-T	*ENG	
010	LT-Y	*ENG	
011	12*18	*ENG	
012	Other	*ENG	

6133	[Staple Position Adjustment]		
	Adjusts the staple position for each finisher (B408/B804/B805). + Value: Moves the staple position to the rear side. - Value: Moves the staple position to the front side.		
001	Finisher1	*ENG	[-3.5 to 3.5 / <b>0</b> / 1/step]

6134	[Saddle Stitch Position Adjust]		
	Use this SP to adjust the stapling position of the booklet stapler when paper is stapled and folded in the Booklet Finisher B804.		

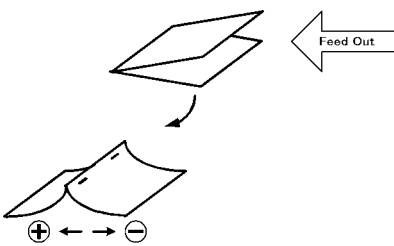

001	A3T	<p>[-3.0 to 3.0 / 0 / 0.2 mm/step]</p> <p>+ Value: Shifts staple position toward the crease. - Value: Shifts staple position away from the crease.</p> 
002	B4T	
003	A4T	
004	B5T	
005	DLT-T	
006	LG-T	
007	LT-T	
008	12*18	
009	Other	

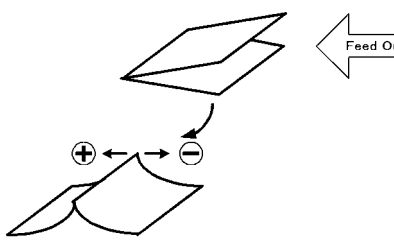6135	[Folder Position Adj.]	
	This SP corrects the folding position when paper is stapled and folded in the Booklet Finisher B804.	
001	A3T	<p>[-3.0 to 3.0 / 0 / 0.2 mm/step]</p> <p>+ Value: Shifts staple position toward the crease. - Value: Shifts staple position away from the crease.</p> 
002	B4T	
003	A4T	
004	B5T	
005	DLT-T	
006	LG-T	
007	LT-T	
008	12*18	
009	Other	


6136	[Folding Number]	
	Sets the number of times that folding is done in the Booklet Finisher B804.	
001	-	[2 to 30 / 2 / 1 time/step]

6139	[FIN (KIN) INPUT Check] Finisher (B408) Input Check
	Displays the signals received from sensors and switches of the booklet finisher. (p.711 in this section)

6140	[FIN (EUP) INPUT Check] Finisher (B804/B805) Input Check
	Displays the signals received from sensors and switches of the (booklet) finisher. (p.711 in this section)

6144	[FIN (KIN) OUPUT Check] Finisher (B408) Output Check
	Displays the signals received from sensors and switches of the booklet finisher. (p.711 in this section)

6145	[FIN (EUP) OUPUT Check] Finisher (B804/B805) Output Check
	Displays the signals received from sensors and switches of the (booklet) finisher. (p.711 in this section)

	[Max. Pre-Stack Sheet]	*ENG	Number of Pre-Stack Sheets
6149	This SP sets the number of sheets sent to the pre-stack tray.		
	 <b>Note</b> <ul style="list-style-type: none"> <li>You may need to adjust this setting or switch it off when feeding thick or slick paper.</li> </ul>		
001	-	[0 to 3 / 3 / 1 sheet/step]	

6150	[INPUT Check]
	Displays the signals received from sensors and switches of the bridge unit (D386) / side tray (D542) (p.711 in this section).

6151	[OUTPUT Check]
	Displays the signals received from sensors and switches of the bridge unit (D386)/ side tray (D542) (p.711 in this section).

6152	[INPUT Check]
	Displays the signals received from sensors and switches of the shift tray (D388) (p. 711 in this section).
6153	[OUTPUT Check]
	Displays the signals received from sensors and switches of the shift tray (D388) (p. 711 in this section).
6154	[INPUT Check]
	Displays the signals received from sensors and switches of the 1 bin tray (D536) (p. 711 in this section).
6155	[OUTPUT Check]
	Displays the signals received from sensors and switches of the 1 bin tray (D536) (p. 711 in this section)
001	1 bin: Junction Solenoid
6160	[INPUT Check]
	Displays the signals received from sensors and switches of the two-tray paper feed unit (D537), LCT 2000 (D538) and LCT 1200 (D539) (p.711 in this section)
6161	[OUTPUT Check]
	Displays the signals received from sensors and switches of the two-tray paper feed unit (D537), LCT 2000 (D538) and LCT 1200 (D539) (p.711 in this section)

# Main SP Tables-7

## SP7-XXX (Data Log)

7401	[Total SC]		
	Displays the number of SC codes detected.		
001	SC Counter	*CTL	[0 to 65535 / - / 1/step ]
002	Total SC Counter	*CTL	[0 to 65535 / - / 1/step ]

5

7403	[SC History]		
	Logs the SC codes detected. The 10 most recently detected SC Codes are not displayed on the screen, but can be seen on the SMC (logging) outputs.		
001	-	*CTL	-
002	-		
003	-		
004	-		
005	-		
006	-		
007	-		
008	-		
009	-		
010	-		

7502	[Total Paper Jam]		
	Displays the total number of jams detected.		
001	Jam Counter	* CTL	[0 to 65535 / - / 1/step ]
002	Total Jam Counter	* CTL	[0 to 65535 / - / 1/step ]

7503	[Total Original Jam]		
	Displays the total number of original jams.		
001	Original Jam counter	*CTL	[0 to 9999 / - / 1 original/step ]

7504	[Paper Jam Loc] ON: On check, OFF: Off Check		
	Displays the number of jams according to the location where jams were detected. <b>NOTE:</b> The LCT is counted as the 3rd feed station.		
001	At Power On	*CTL	For details, (👉 Jam Detection)
003	Tray 1: On	*CTL	
004	Tray 2: On	*CTL	
005	Tray 3: On	*CTL	
006	Tray 4: On	*CTL	
007	LCT : On	*CTL	
008	Registration Sn: On (Bypass)	*CTL	
009	Registration Sn: On (Duplex)	*CTL	
011	Vertical Trans. 1: On	*CTL	
012	Vertical Trans. 2: On	*CTL	

013	Vertical Trans. 3: On	*CTL	For details, (🖨️ Jam Detection)
014	Vertical Trans. 4: On	*CTL	
017	Registration Sn: On (Tray)	*CTL	
018	Fusing Entrance: On	*CTL	
019	Fusing Exit: On	*CTL	
020	Paper Exit: On	*CTL	
021	Bridge Tray Exit: On	*CTL	
022	Bridge Relay: On	*CTL	
024	Junction Gate Sensor : On	*CTL	
025	Duplex Exit: On	*CTL	
026	Duplex Entrance: On (In)	*CTL	
027	Duplex Entrance: On (Out)	*CTL	
051	Vertical Trans. 1: Off	*CTL	
052	Vertical Trans. 2: Off	*CTL	
053	Vertical Trans. 3: Off	*CTL	
054	Vertical Trans. 4: Off	*CTL	
057	Registration Sensor: Off	*CTL	
058	LCT Feed Sensor : Off		
060	Paper Exit Off	*CTL	
061	Bridge Exit: Off	*CTL	
062	Bridge Relay: Off	*CTL	

064	Junction Gate Sensor : Off	*CTL	For details, (🖱️ Jam Detection)
065	Duplex Exit: Off	*CTL	
066	Duplex Entrance: Off (In)	*CTL	
067	Duplex entrance : Off (Out)	*CTL	
100	Finisher Entrance: KIN	*CTL	
101	Finisher Shift Tray Exit: KIN	*CTL	
102	Finisher Staple: KIN	*CTL	
103	Finisher Exit: KIN	*CTL	
105	Finisher Tray Lift Motor: KIN	*CTL	
106	Finisher Jogger Motor: KIN	*CTL	
107	Finisher Shift Motor: KIN	*CTL	
108	Finisher Staple Motor: KIN	*CTL	
109	Finisher Exit Motor: KIN	*CTL	
191	Finisher Entrance: EUP	*CTL	
192	Finisher Proof Exit: EUP	*CTL	
193	Finisher Shift Tray Exit: EUP	*CTL	
194	Finisher Stapler Exit: EUP	*CTL	
195	Finisher Exit: EUP	*CTL	
198	Finisher Folder: EUP	*CTL	
199	Finisher Tray Motor: EUP	*CTL	
200	Finisher Jogger Motor: EUP	*CTL	
201	Finisher Shift Motor: EUP	*CTL	
202	Finisher Staple Moving Motor: EUP	*CTL	
203	Finisher Staple Motor: EUP	*CTL	
204	Finisher Folder Motor: EUP	*CTL	
206	Finisher Punch Motor: EUP	*CTL	

7505	[Original Jam Det]		
	Displays the total number of original jams by location.		
001	At Power On	*CTL	-
003	Separation Sensor: On	*CTL	-
004	Skew Correction Sn: On	*CTL	
005	Scanning Entrance Sn: On	*CTL	
006	Registration Sensor: On	*CTL	
007	Original Exit Sensor: On	*CTL	
008	Reverse Sensor: On	*CTL	
053	Separation Sensor: Off	*CTL	
054	Skew Correction Sn: Off	*CTL	
055	Scanning Entrance Sn: Off	*CTL	-
056	Registration Sensor: Off	*CTL	
057	Original Exit Sensor: Off	*CTL	
058	Reverse Sensor: Off	*CTL	

7506	[Jam Count by Paper Size]		
	Displays the number of jams according to the paper size.		
005	A4 LEF	*CTL	[0 to 9999 / - / 1 sheet/step ]
006	A5 LEF	*CTL	
014	B5 LEF	*CTL	
038	LT LEF	*CTL	
044	HLT LEF	*CTL	



132	A3 SEF	*CTL	[0 to 9999 / - / 1 sheet/step ]
133	A4 SEF	*CTL	
134	A5 SEF	*CTL	
141	B4 SEF	*CTL	
142	B5 SEF	*CTL	
160	DLT SEF	*CTL	
164	LG SEF	*CTL	
166	LT SEF	*CTL	
172	HLT SEF	*CTL	
255	Others	*CTL	

5

7507	[Plotter Jam History]		
	Displays the 10 most recently detected paper jams.		
001	-	*CTL	-
002	-		
003	-		
004	-		
005	-		
006	-		
007	-		
008	-		
009	-		
010	-		

7508	[Original Jam History]		
	Displays the 10 most recently detected original jams.		

001	-	*CTL	-
002	-		
003	-		
004	-		
005	-		
006	-		
007	-		
008	-		
009	-		
010	-		

7624	Part Replacement Operation ON/OFF	
	Selects the PM maintenance for each part.	
001	Drum unit: Bk	[0 or 1 / 1 -] 0: Not PM maintenance 1: PM maintenance
002	Drum unit: M	
003	Drum unit: C	
004	Drum unit: Y	
005	Development unit: Bk	
006	Development unit: M	
007	Development unit: C	
008	Development unit: Y	
009	Developer: Bk	
010	Developer: M	
011	Developer: C	
012	Developer: Y	

013	Image Transfer Belt	[0 or 1 / 1 -] 0: Not PM maintenance 1: PM maintenance
014	Image Transfer Cleaning Unit	
015	Fusing Unit	
016	Paper Transfer Roller Unit	
017	Waste Toner bottle	
018	Fusing Roller	
019	Pressure Roller	

7801	[ROM No/ Firmware Version]		
002	Engine	*CTL	Displays all versions and ROM numbers in the machine.

7803	[PM Counter Display] (Page, Unit, [Color])		
	<p>Displays the number of sheets printed for each current maintenance unit.</p> <p>PM counters click up based on the number of A4 (LT) LEF size sheets printed. Therefore, the A3 (DLT) Double Count is activated. The Double Count cannot be deactivated.</p> <p>When a unit is replaced, the machine automatically detects that the new unit is installed. Then, the current PM counter value is automatically moved to the PM Counter - Previous (SP7-906-1 to 10) and is reset to "0".</p> <p>The total number of sheets printed with the last unit replaced can be checked with SP7-906-1 to 10.</p> <p>NOTE: The LCT is counted as the 3rd feed station.</p>		
001	Paper	*CTL	-

002	Page: PCU: Bk	*ENG	-
003	Page: PCU: M		
004	Page: PCU: C		
005	Page: PCU: Y		
006	Page: Development Unit: Bk		
007	Page: Development Unit: M		
008	Page: Development Unit: C		
009	Page: Development Unit: Y		
010	Page: Developer: Bk		
011	Page: Developer: M		
012	Page: Developer: C		
013	Page: Developer: Y		
014	Page: Image Transfer		
015	Page: Cleaning Unit		
016	Page: Fusing Unit		
017	Page: Paper Transfer Unit		
018	Page: Toner Collection Bottle		
019	Page: Fusing Roller		
020	Page: Pressure Roller		
<p>Displays the number of revolutions of motors or clutches for each current maintenance unit.</p> <p>[ 0 to 9999999 / 0 / 1 revolution/step ]</p> <p>When a unit is replaced, and SP7804-xxx is executed, the current PM counter value is moved to the PM Counter - Previous (SP7-906-11 to 20) and is reset to "0". The total number of revolutions made with the last unit replaced can be checked with SP7-906-11 to 20.</p>			
021	-	*ENG	

	<p>Displays the number of pages of the pump unit for each current maintenance unit. [ 0 to 9999999 / - / 1 page/step ]</p> <p>When a unit is replaced, and SP7804-xxx is executed, the current PM counter value is moved to the PM Counter - Previous (SP7-906-020 to 112) and is reset to "0". The total number of revolutions made with the last unit replaced can be checked with SP7-906-020 to 112.</p>		
021	Page: Pump Unit: Bk	*ENG	[ 0 to 9999999 / - / 1 page/step ]
022	Page: Pump Unit: M		
023	Page: Pump Unit: C		
024	Page: Pump Unit: Y		
031	Rotation: PCU: Bk	*ENG	[0 to 999999999 / - / 1 mm/step ]
032	Rotation: PCU: M		
033	Rotation: PCU: C		
034	Rotation: PCU: Y		
035	Rotation: Development Unit: Bk		
036	Rotation: Development Unit: M		
037	Rotation: Development Unit: C		
038	Rotation: Development Unit: Y		
039	Rotation: Developer: Bk		
040	Rotation: Developer: M		
041	Rotation: Developer: C		
042	Rotation: Developer: Y		

043	Rotation: Image Transfer	*ENG	[0 to 999999999 / - / 1 mm/step ]
044	Rotation: Cleaning Unit	*ENG	
045	Rotation: Fusing Unit	*ENG	
046	Rotation: Paper Transfer Unit	*ENG	
047	Measurement: Toner Collection bottle	*ENG	
048	Rotation: Fusing Roller	*ENG	
049	Rotation: Pressure Roller	*ENG	
<p>Displays the value given by the following formula:  <math>(\text{Current revolution} / \text{Target revolution}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Rotation% counter is based on rotations, not prints. If the number of rotations reaches the limit, the machine enters the end condition for that unit. If the print count lifetime is reached first, the machine also enters the end condition, even though the R% counter is still less than 100%.</p>			
050	-	*ENG	
<p>Displays the running time of the pump unit for each current maintenance unit.                  [0 to 999999999 / 0 / 1 msec/step]</p> <p>When a unit is replaced, and SP7804-xxx is executed, the current PM counter value is moved to the PM Counter - Previous (SP7-906-020 to 112) and is reset to "0". The total number of revolutions made with the last unit replaced can be checked with SP7-906-020 to 112.</p>			
050	Run Time: Pump Unit: Bk	*ENG	[0 to 999999999 / - / 1 msec/step]
051	Run Time: Pump Unit: M		
052	Run Time: Pump Unit: C		
053	Run Time: Pump Unit: Y		

061	Rotation (%): PCU: Bk	*ENG	[0 to 255 / - / 1 %/step] (079)
062	Rotation (%): PCU: M		
063	Rotation (%): PCU:C		
064	Rotation (%): PCU:Y		
065	Rotation (%): Development Unit: Bk		
066	Rotation (%): Development Unit: M		
067	Rotation (%): Development Unit: C		
068	Rotation (%): Development Unit: Y		
069	Rotation (%): Developer: Bk		
070	Rotation (%): Developer: M Developer		
071	Rotation (%): Developer: C		
072	Rotation (%): Developer: Y		
073	Rotation (%): Image Transfer Belt	*ENG	[0 to 255 / - / 1 %/step]
074	Rotation (%): Cleaning Unit		
075	Rotation (%): Fusing Unit		
076	Rotation (%): Paper Transfer Unit		
077	Measurement (%): Toner Collection bottle		
078	Rotation (%): Fusing Roller		
079	Rotation (%): Pressure Roller		
<p>Displays the value given by the following formula:  <math>(\text{Current revolution} / \text{Target revolution}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Rotation (%) counter is based on rotations, not prints. If the number of rotations reaches the limit, the machine enters the end condition for that unit. If the print count lifetime is reached first, the machine also enters the end condition, even though the R (%) counter is still less than 100%.</p> <p>[0 to 255 / - / 1 %/step]</p>			

	-	*ENG	
080	<p>Displays the value given by the following formula:  <math>(\text{Current running time} / \text{Target running time}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Run Time (%) counter is based on the running time, not printouts nor revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Run Time (%) counter is still less than 100%.</p> <p>[0 to 255 / - / 1 %/step]</p>		
080	Run Time(%): Pump Unit: Bk	*ENG	[0 to 255 / - / 1 %/step]
081	Run Time(%): Pump Unit: M		
082	Run Time(%): Pump Unit: C		
083	Run Time(%): Pump Unit: Y		
091	-		
	<p>Displays the value given by the following formula:  <math>(\text{Current printouts} / \text{Target printouts}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Page (%) counter is based on printouts, not revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Page (%) counter is still less than 100%.</p> <p>[0 to 255 / - / 1 %/step]</p>		
091	Page (%): PCU: Bk	*ENG	[0 to 255 / - / 1 %/step]
092	Page (%): PCU: M		
093	Page (%): PCU: C		
094	Page (%): PCU: Y		
095	Page (%): Development Unit: Bk		
096	Page (%): Development Unit: M		
097	Page (%): Development Unit: C		
098	Page (%): Development Unit: Y		



099	Page (%): Developer: Bk	*ENG	[0 to 255 / - / 1 %/step] (091)
100	Page (%): Developer: M		
101	Page (%): Developer: C		
102	Page (%): Developer: Y		
103	Page (%): Image Transfer		
104	Page (%): Cleaning Unit		
105	Page (%): Fusing Unit		
106	Page (%): Paper Transfer Unit		
107	Page (%): Fusing Roller		
108	Page (%): Pressure Roller		
109	-	*ENG	
	<p>Displays the value given by the following formula:  <math>(\text{Current printouts} / \text{Target printouts}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Page (%) counter is based on printouts, not revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Page (%) counter is still less than 100%.</p> <p>[0 to 255 / - / 1 %/step]</p>		
109	Page (%): Pump Unit: Bk	*ENG	[0 to 255 / - / 1 %/step]
110	Page (%): Pump Unit: M		
111	Page (%): Pump Unit: C		
112	Page (%): Pump Unit: Y		
7804	[PM Counter Reset] PM Counter Clear (Unit, [Color])		
	<p>Clears the PM counter.</p> <p>Press the Enter key after the machine asks "Execute?", which will store the PM counter value in SP7-906 (PM Counter - Previous) and reset the value of the current PM counter (SP7-803) to "0".</p>		

002	PCU (Drum Unit): Bk	-	-
003	PCU (Drum Unit): M	-	-
004	PCU (Drum Unit): C	-	-
005	PCU (Drum Unit): Y	-	-
006	PCU (Drum Unit): All	-	-
007	Development Unit: Bk	-	-
008	Development Unit: M	-	-
009	Development Unit: C	-	-
010	Development Unit: Y	-	-
011	Development Unit: All	-	-
012	Developer: Bk	-	-
013	Developer: M	-	-
014	Developer: C	-	-
015	Developer: Y	-	-
016	Developer: All	-	-
017	ITB Unit	-	-
018	Cleaning Unit	-	-
019	Fusing Unit	-	-
020	PTR Unit	-	-
021	Toner Collection Bottle	-	-
022	Fusing Roller (Heating Roller)	-	-
023	Pressure Roller	-	-
024	Pump Unit: Bk	-	-
025	Pump Unit: M	-	-
026	Pump Unit: C	-	-
027	Pump Unit: Y	-	-

028	Pump Unit: All	-	-
100	All	-	-

7807	[SC/Jam Counter Reset]		
	Clears the counters related to SC codes and paper jams.		
001	SC/Jam Clear	-	-

7832	[Self-Diagnose Result Display]		
	Displays the result of the diagnostics.		
001	Diag. Result	*CTL	-


7835	[ACC Counter]		
001	Copy ACC	*CTL	Displays the ACC execution times for each mode.
002	Printer ACC	*CTL	

7836	Total Memory Size		
	Displays the memory capacity of the controller system.		


7852	[DF Glass Dust Check]		
	Counts the number of occurrences (0 to 65,535) when dust was detected on the scanning glass of the ADF or resets the dust detection counter. Counting is done only if SP4-020-1 (ADF Scan Glass Dust Check) is switched on.		
001	Dust Detection Counter	*ENG	[0 to 9999 / - / 1 /step]
002	Dust Detection Clear Counter	*ENG	[0 to 9999 / - / 1 /step]
003	Dust Detection Counter: Back	*ENG	[0 to 9999 / - / 1 /step]



7853	[Replacement Counter]		
	Displays the PM parts replacement number.		

001	PCU: Bk	*ENG	[0 to 255 / - / 1 /step]
002	PCU: M	*ENG	
003	PCU: C	*ENG	
004	PCU: Y	*ENG	
005	Development Unit: Bk	*ENG	
006	Development Unit: M	*ENG	
007	Development Unit: C	*ENG	
008	Development Unit: Y	*ENG	
009	Developer: Bk	*ENG	
010	Developer: M	*ENG	
011	Developer: C	*ENG	
012	Developer: Y	*ENG	
013	Image Transfer	*ENG	[0 to 255 / - / 1 /step]
014	Cleaning Unit	*ENG	
015	Fusing Unit	*ENG	
016	Paper Transfer Unit	*ENG	
017	Tonner Collection Bottle	*ENG	
018	Fusing Roller	*ENG	
019	Pressure Roller	*ENG	
020	Pump Unit: Bk	*ENG	[0 to 255 / - / 1 /step]
021	Pump Unit: M		
022	Pump Unit: C		
023	Pump Unit: Y		

7855	[Coverage Range]		
	<p>Sets the color coverage threshold.</p> <p>Coverage rate = Coverage per page / A4 full coverage (dots) x 100</p> <p>There are three coverage counters: Color 1, Color 2, and Color 3</p> <ul style="list-style-type: none"> <li>• [A] 5% (default) is adjustable with SP7855-001.</li> <li>• [B] 20% (default) is adjustable with SP7855-002.</li> </ul> 		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The setting value [B] must be set larger than [A].</li> </ul> <p>The total numbers of printouts (BW printing plus color printing) for each coverage range are displayed with the following SPs.</p> <ul style="list-style-type: none"> <li>• Color1 counter: SP8601-021</li> <li>• Color2 counter: SP8601-022</li> <li>• Color3 counter: SP8601-023</li> </ul>		
001	Coverage Range 1	*CTL	[1 to 200 / <b>5</b> /1]
002	Coverage Range 2	*CTL	[1 to 200 / <b>20</b> /1]

7906	[Prev. Unit PM Counter]		
	(Page or Rotations, Unit, [Color]), Dev.: Development Unit		
	Displays the number of sheets printed with the previous maintenance units.		

001	Page: PCU: Bk	*ENG	[0 to 9999999 / 0 / 1 page/step]
002	Page: PCU: M		
003	Page: PCU: C		
004	Page: PCU: Y		
005	Page: Development Unit: Bk		
006	Page: Development Unit: M		
007	Page: Development Unit: C		
008	Page: Development Unit: Y		
009	Page: Developer: Bk		
010	Page: Developer: M		
011	Page: Developer: C		
012	Page: Developer: Y		
013	Page: Image Transfer	*ENG	[0 to 9999999 / 0 / 1 page/step]
014	Page: Cleaning Unit		
015	Page: Fusing Unit		
016	Page: Paper Transfer Unit		
017	Page: Toner Collection Bottle		
018	Page: Fusing Roller		
019	Page: Pressure Roller		
	Displays the number of revolutions for motors or clutches in the previous maintenance units. (  031 - 046)		
020	Page: Pump Unit	*ENG	
	Displays the number of sheets printed with the previous maintenance units. [0 to 9999999 / 0 / 1 page/step]		

020	Page: Pump Unit: Bk	*ENG	[0 to 9999999 / 0 / 1 page/step]
021	Page: Pump Unit: M		
022	Page: Pump Unit: C		
023	Page: Pump Unit: Y		
031	Rotation: PCU: Bk	*ENG	[0 to 9999999 / 0 / 1 mm/step] (  019)
032	Rotation: PCU: M		
033	Rotation: PCU: C		
034	Rotation: PCU: Y		
035	Rotation: Development Unit: Bk		
036	Rotation: Development Unit: M		
037	Rotation: Development Unit: C		
038	Rotation: Development Unit: Y		
039	Rotation: Developer: Bk		
040	Rotation: Developer: M		
041	Rotation: Developer: C		
042	Rotation: Developer: Y		
043	Rotation: Image Transfer	*ENG	[0 to 9999999 / 0 / 1 mm/step] (  019)
044	Rotation: Cleaning Unit		
045	Rotation: Fusing Unit		
046	Rotation: Paper Transfer Unit		
047	Measurement: Toner Collection bottle		
048	Rotation: Fusing Roller		
049	Rotation: Pressure Roller		
	Displays the number of sheets printed with the previous maintenance unit or toner cartridge.		
050	Run Time: Pump Unit	*ENG	

	Displays the running time of the previous pump unit [0 to 999999999 / 0 / 1 msec/step]		
050	Run Time: Pump Unit: Bk	*ENG	[0 to 999999999 / 0 / 1 msec/step]
051	Run Time: Pump Unit: M		
052	Run Time: Pump Unit: C		
053	Run Time: Pump Unit: Y		
061	Rotation %: PCU:	*ENG	
	Displays the value given by the following formula: $(\text{Current revolution} / \text{Target revolution}) \times 100$ . This shows how much of the unit's expected lifetime has been used up. The Rotation % counter is based on rotations, not prints. If the number of rotations reaches the limit, the machine enters the end condition for that unit. If the print count lifetime is reached first, the machine also enters the end condition, even though the Rotation % counter is still less than 100%. [0 to 255 / 0 / 1 %/step ]		
061	Rotation %: PCU: BK	*ENG	[0 to 255 / 0 / 1 %/step ]
062	Rotation %: PCU:M		
063	Rotation %: PCU:C		
064	Rotation %: PCU:Y		
065	Rotation %: Development Unit: Bk		
066	Rotation %: Development Unit: M		
067	Rotation %: Development Unit: C		
068	Rotation %: Development Unit: Y		



069	Rotation %: Developer: Bk	*ENG	[0 to 255 / 0 / 1 %/step ]
070	Rotation %: Developer: M		
071	Rotation %: Developer: C		
072	Rotation %: Developer: Y		
073	Rotation %: Image Transfer Belt		
074	Rotation %: Cleaning Unit		
075	Rotation %: Fusing Unit		
076	Rotation %: Paper Transfer Unit		
077	Measurement %: Toner Collection bottle		
078	Rotation (%): Fusing Roller		
079	Rotation (%): Pressure Roller		
<p>Displays the value given by the following formula:  <math>(\text{Current count} / \text{Yield count}) \times 100</math>, where "Current count" is the current values in the counter for the part, and "Yield count" is the recommended yield.</p>			
080	Run Time (%): Pump Unit	*ENG	
	<p>Displays the value given by the following formula:  <math>(\text{Current running time} / \text{Target running time}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Run Time (%) counter is based on the total running time, not printouts nor revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Run Time (%) counter is still less than 100%.</p> <p>[0 to 255 / 0 / 1 %/step ]</p>		
080	Run Time (%): Pump Unit: Bk	*ENG	[0 to 255 / 0 / 1 %/step ]
081	Run Time (%): Pump Unit: M		
082	Run Time (%): Pump Unit: C		
083	Run Time (%): Pump Unit: Y		

	Page %: PCU	*ENG	
091	<p>Displays the value given by the following formula:  <math>(\text{Current printouts} / \text{Target printouts}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Page% counter is based on printouts, not revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Page% counter is still less than 100%.</p> <p>[0 to 255 / 0 / 1 %/step ]</p>		
091	Page %: PCU: Bk	*ENG	[0 to 255 / 0 / 1 %/step ]
092	Page %: PCU: M		
093	Page %: PCU: C		
094	Page %: PCU: Y		
095	Page %: Development Unit: Bk		
096	Page %: Development Unit: M		
097	Page %: Development Unit: C		
098	Page %: Development Unit: Y		
099	Page %: Developer: Bk		
100	Page %: Developer: M		
101	Page %: Developer: C		
102	Page %: Developer: Y		

103	Page %: Image Transfer	*ENG	[0 to 255 / 0 / 1 %/step ]
104	Page %: Cleaning Unit		
105	Page %: Fusing Unit		
106	Page %: Paper Transfer Unit		
107	Page (%): Fusing Roller		
108	Page (%): Pressure Roller		
109	Page (%): Pump Unit: Bk		
110	Page (%): Pump Unit: M		
111	Page (%): Pump Unit: C		
112	Page (%): Pump Unit: Y		

7931	[Toner Bottle Bk]
	Displays the toner bottle information for Bk.

001	Machine Serial ID	*ENG	
002	Cartridge Ver		
003	Brand ID		
004	Area ID		
005	Product ID		
006	Color ID		
007	Maintenance ID		
008	New Product Information		
009	Recycle Counter		
010	Date		
011	Serial No.		
012	Toner Remaining		
013	EDP Code		
014	End History		
015	Refill Information		
016	Attachment: Total Counter		
017	Attachment: Color Counter		
018	End: Total Counter		
019	End: Color Counter		
020	Attachment Date		
021	End Date		

7932	[Toner Bottle M]
	Displays the toner bottle information for M.

001	Machine Serial ID	*ENG	-
002	Cartridge Ver		
003	Brand ID		
004	Area ID		
005	Product ID		
006	Color ID		
007	Maintenance ID		
008	New Product Information		
009	Recycle Counter		
010	Date		
011	Serial No.		
012	Toner Remaining	*ENG	-
013	EDP Code		
014	End History		
015	Refill Information		
016	Attachment: Total Counter		
017	Attachment: Color Counter		
018	End: Total Counter		
019	End: Color Counter		
020	Attachment Date		
021	End Date		

7933	[Toner Bottle C]
	Displays the toner bottle information for C.

001	Machine Serial ID	*ENG	-
002	Cartridge Ver		
003	Brand ID		
004	Area ID		
005	Product ID		
006	Color ID		
007	Maintenance ID		
008	New Product Information		
009	Recycle Counter		
010	Date		
011	Serial No.		
012	Toner Remaining	*ENG	-
013	EDP Code		
014	End History		
015	Refill Information		
016	Attachment: Total Counter		
017	Attachment: Color Counter		
018	End: Total Counter		
019	End: Color Counter		
020	Attachment Date		
021	End Date		

7934	[Toner Bottle Y]
	Displays the toner bottle information for Y.

001	Machine Serial ID	*ENG	-
002	Cartridge Ver		
003	Brand ID		
004	Area ID		
005	Product ID		
006	Color ID		
007	Maintenance ID		
008	New Product Information		
009	Recycle Counter		
010	Date		
011	Serial No.		
012	Toner Remaining	*ENG	-
013	EDP Code		
014	End History		
015	Refill Information		
016	Attachment: Total Counter		
017	Attachment: Color Counter		
018	End: Total Counter		
019	End: Color Counter		
020	Attachment Date		
021	End Date		

7935

[Toner Bottle Log 1: Bk]

001	Serial No.	*ENG	Displays the toner bottle information log 1 for Bk.
002	Attachment Date		
003	Attachment: Total Counter		
004	Refill Information		
011	Serial No.	*ENG	Displays the toner bottle information log 2 for Bk.
012	Attachment Date		
013	Attachment: Total Counter		
014	Refill Information		
021	Serial No.	*ENG	Displays the toner bottle information log 3 for Bk.
022	Attachment Date		
023	Attachment: Total Counter		
024	Refill Information		
031	Serial No.	*ENG	Displays the toner bottle information log 4 for Bk.
032	Attachment Date		
033	Attachment: Total Counter		
034	Refill Information		
041	Serial No.	*ENG	Displays the toner bottle information log 5 for Bk.
042	Attachment Date		
043	Attachment: Total Counter		
044	Refill Information		

7936	[Toner Bottle Log 1: M]		
001	Serial No.	*ENG	Displays the toner bottle information log 1 for M.
002	Attachment Date		
003	Attachment: Total Counter		
004	Refill Information		



011	Serial No.	*ENG	Displays the toner bottle information log 2 for M.
012	Attachment Date		
013	Attachment: Total Counter		
014	Refill Information		
021	Serial No.	*ENG	Displays the toner bottle information log 3 for M.
022	Attachment Date		
023	Attachment: Total Counter		
024	Refill Information		
031	Serial No.	*ENG	Displays the toner bottle information log 4 for M.
032	Attachment Date		
033	Attachment: Total Counter		
034	Refill Information		
041	Serial No.	*ENG	Displays the toner bottle information log 5 for M.
042	Attachment Date		
043	Attachment: Total Counter		
044	Refill Information		

7937	[Toner Bottle Log 1 : C]		
001	Serial No.	*ENG	Displays the toner bottle information log 1 for C.
002	Attachment Date		
003	Attachment: Total Counter		
004	Refill Information		
011	Serial No.	*ENG	Displays the toner bottle information log 2 for C.
012	Attachment Date		
013	Attachment: Total Counter		
014	Refill Information		

021	Serial No.	*ENG	Displays the toner bottle information log 3 for C.
022	Attachment Date		
023	Attachment: Total Counter		
024	Refill Information		
031	Serial No.	*ENG	Displays the toner bottle information log 4 for C.
032	Attachment Date		
033	Attachment: Total Counter		
034	Refill Information		
041	Serial No.	*ENG	Displays the toner bottle information log 5 for C.
042	Attachment Date		
043	Attachment: Total Counter		
044	Refill Information		

7938	[Toner Bottle Log 1: Y]		
001	Serial No.	*ENG	Displays the toner bottle information log 1 for Y.
002	Attachment Date		
003	Attachment: Total Counter		
004	Refill Information		
011	Serial No.	*ENG	Displays the toner bottle information log 2 for Y.
012	Attachment Date		
013	Attachment: Total Counter		
014	Refill Information		
021	Serial No.	*ENG	Displays the toner bottle information log 3 for Y.
022	Attachment Date		
023	Attachment: Total Counter		
024	Refill Information		

031	Serial No.	*ENG	Displays the toner bottle information log 4 for Y.
032	Attachment Date		
033	Attachment: Total Counter		
034	Refill Information		
041	Serial No.	*ENG	Displays the toner bottle information log 5 for Y.
042	Attachment Date		
043	Attachment: Total Counter		
044	Refill Information		

7950	[Unit Replacement Date]		
	Displays the replacement date of each PM unit.		
001	Image Transfer Belt	*ENG	-
002	Cleaning Unit		
003	Paper Transfer Unit		
004	Fusing Unit		
005	Toner Collection Bottle		
006	AIT:Bk		
007	AIT:M		
008	AIT:C		
009	AIT:Y		
010	Fusing Roller		
011	Pressure Roller		
012	Pump Unit: Bk		
013	Pump Unit: M		
014	Pump Unit: C		
015	Pump Unit: Y		

7951	[Remaining Day Counter]		
	Displays the remaining unit life of each PM unit.		
001	Page: PCU: Bk	*ENG	[0 to 255 / <b>255</b> / 1 day/step]
002	Page: PCU: M		
003	Page: PCU: C		
004	Page: PCU: Y		
005	Page: Development Unit: Bk		
006	Page: Development Unit: M		
007	Page: Development Unit: C		
008	Page: Development Unit: Y		
009	Page: Developer: Bk		
010	Page: Developer: M		
011	Page: Developer: C		
012	Page: Developer: Y		
013	Page: Image Transfer	*ENG	[0 to 255 / <b>255</b> / 1 day/step]
014	Page: Cleaning Unit		
015	Page: Fusing Unit		
016	Page: Paper Transfer Unit		
017	Page: Fusing Roller		
018	Page: Pressure Roller		

031	Rotation: PCU: Bk	*ENG	[0 to 255 / <b>255</b> / 1 day/step]
032	Rotation: PCU: M		
033	Rotation: PCU: C		
034	Rotation: PCU: Y		
035	Rotation: Development Unit: Bk		
036	Rotation: Development Unit: M		
037	Rotation: Development Unit: C		
038	Rotation: Development Unit: Y		
039	Rotation: Developer: Bk		
040	Rotation: Developer: M		
041	Rotation: Developer: C		
042	Rotation: Developer: Y		
043	Rotation: Image Transfer	*ENG	[0 to 255 / <b>255</b> / 1 day/step]
044	Rotation: Cleaning Unit		
045	Rotation: Fusing Unit		
046	Rotation: Paper Transfer Unit		
047	Measurement: Toner Collection bottle		
048	Rotation: Fusing Roller		
049	Rotation: Pressure Roller		

101	Minimum: PCU: Bk	*ENG	<p>Displays one of the three, Remaining Day Counter: Rotation or Runtime, or Remaining Day Counter: Page, which is the minimum value.</p> <p>[0 to 255 / <b>255</b> / 1 day/step]</p> <p>For toner collection bottle, this SP is not displayed because its Remaining Day Counters is calculated with its weights only.</p>
102	Minimum: PCU: M		
103	Minimum: PCU: C		
104	Minimum: PCU: Y		
105	Minimum: Development Unit: Bk		
106	Minimum: Development Unit: M		
107	Minimum: Development Unit: C		
108	Minimum: Development Unit: Y		
109	Minimum: Developer: Bk		
110	Minimum: Developer: M		
111	Minimum: Developer: C		
112	Minimum: Developer: Y		
113	Minimum: Image Transfer		
114	Minimum: Cleaning Unit		
115	Minimum: Fusing Unit		
116	Minimum: Paper Transfer Unit		
117	Minimum: Fusing Roller		
118	Minimum: Pressure Roller		
119	Minimum: Pump Unit: Bk	*ENG	<p>Displays either Remaining Day Counter: time or Page, which is less value.</p> <p>[0 to 255 / <b>255</b> / 1 day/step]</p>
120	Minimum: Pump Unit: M		
121	Minimum: Pump Unit: C		
122	Minimum: Pump Unit: Y		

7952	[PM Yield Setting]		
	Adjusts the unit yield of each PM unit.		
001	Rotation: Image Transfer Belt	*CTL	[0 to 999999999 / <b>256597000</b> / 1 mm/step]

002	Rotation: Cleaning Unit	*CTL	[0 to 999999999 / <b>128299000</b> / 1 mm/step]
003	Rotation: Fusing Unit	*CTL	[0 to 999999999 / <b>155595000</b> / 1 mm/step]
004	Rotation: Paper Transfer Unit	*CTL	[0 to 999999999 / <b>192448000</b> / 1 mm/step]
011	Page: Image Transfer Belt	*CTL	[0 to 999999 / <b>320000</b> / 1 sheet/step]
012	Page: Cleaning Unit	*CTL	[0 to 999999 / <b>160000</b> / 1 sheet/step]
013	Page: Fusing Unit	*CTL	[0 to 999999 / <b>160000</b> / 1 sheet/step]
014	Page: Paper Transfer Unit	*CTL	[0 to 999999 / <b>240000</b> / 1 sheet/step]
021	Day Threshold: PCU: Bk	*CTL	<p>Adjusts the threshold day for the near end from each PM unit.</p> <p>[1 to 30 / <b>15</b> / 1 day/step]</p> <p>These threshold days are used for @Remote alarms.</p>
022	Day Threshold: PCU: M		
023	Day Threshold: PCU: C		
024	Day Threshold: PCU: Y		
025	Day Threshold: Development Unit: Bk		
026	Day Threshold: Development Unit: M		
027	Day Threshold: Development Unit: C		
028	Day Threshold: Development Unit: Y		
029	Day Threshold: Developer: Bk		
030	Day Threshold: Developer: M		
031	Day Threshold: Developer: C		
032	Day Threshold: Developer: Y		

033	Day Threshold: Image Transfer Belt	*CTL	Adjusts the threshold day for the near end from each PM unit. [1 to 30 / 15 / 1 day/step] These threshold days are used for @Remote alarms.
034	Day Threshold: Cleaning Unit		
035	Day Threshold: Fusing Unit		
036	Day Threshold: Paper Transfer Unit		
037	Day Threshold: Toner Collection Bottle		
038	Rotation: PCU Bk	*CTL	[0 to 999999999 / 0 / 1 mm/step]
039	Rotation: PCU M		
040	Rotation: PCU C		
041	Rotation: PCU Y		
042	Rotation: Development Unit: Bk		
043	Rotation: Development Unit: M	*CTL	[0 to 999999999 / 0 / 1 mm/step]
044	Rotation: Development Unit: C		
045	Rotation: Development Unit: Y		
046	Rotation: Developer: Bk		
047	Rotation: Developer: M	*CTL	[0 to 999999999 / 0 / 1 mm/step]
048	Rotation: Developer: C		
049	Rotation: Developer: Y		
050	Page: PCU: Bk		
051	Page: PCU: M	*CTL	[0 to 999999 / 0 / 1 sheet/step]
052	Page: PCU: C		
053	Page: PCU: Y		



054	Page: Development Unit: Bk	*CTL	[0 to 999999 / 0 / 1 sheet/step]
055	Page: Development Unit: M		
056	Page: Development Unit: C		
057	Page: Development Unit: Y		
058	Page: Developer: Bk	*CTL	[0 to 999999 / 0 / 1 sheet/step]
059	Page: Developer: M		
060	Page: Developer: C		
061	Page: Developer: Y		

7953	[Operation Env. Log: PCU: Bk]		
	Displays the PCDU rotation distance in each specified operation environment. T: Temperature (°C), H: Relative Humidity (%)		
001	T<=0	*CTL	[0 to 99999999 / - / 1 mm/step]
002	0<T<=5:0<=H<30		
003	0<T<=5:30<=H<70		
004	0<T<=5:70<=H<=100		
005	5<T<15:0<=H<30		
006	5<T<15:30<=H<55		
007	5<T<15:55<=H<80		
008	5<T<15:80<=H<=100		
009	15<=T<25:0<=H<30		
010	15<=T<25:30<=H<55		

011	15<=T<25:55<=H<80	*CTL	[0 to 99999999 / - / 1 mm/step]
012	15<=T<25:80<=H<=100		
013	25<=T<30:0<=H<30		
014	25<=T<30:30<=H<55		
015	25<=T<30:55<=H<80		
016	25<=T<30:80<=H<=100		
017	30<=T<35:0<=H<30		
018	30<=T<35:30<=H<55		
019	30<=T<35:55<=H<80		
020	30<=T<35:80<=H<=100		
021	35 <= T		

7954	[Operation Env. Log Clear]		
	Clears the operation environment log.		
001		-	

7955	Fusing Stop		
001	Near End: Page	-	[1 to 999999 / <b>318000</b> / 1 sheet/step]
	Displays the threshold sheet for the heating roller near end.		
002	End: Page	-	[1 to 999999 / <b>330000</b> / 1 sheet/step]
	Displays the threshold sheet for the heating roller end.		
003	Near End: Rotation	-	[0 to 999999999 / <b>C3c: 171698000, C3d: 196769000</b> / 1 mm/step]
	Displays the threshold distance for the heating roller near end.		
004	End: Rotation	-	[0 to 999999999 / <b>C3c: 178177000, C3d: 204194000</b> / 1 mm/step]
	Displays the threshold distance for the heating roller end.		

# Main SP Tables-8

## SP8-xxx: Data Log2

Many of these counters are provided for features that are currently not available, such as sending color faxes, and so on. However, here are some Group 8 codes that when used in combination with others, can provide useful information.

SP Numbers	What They Do
SP8211 to SP8216	The number of pages scanned to the document server.
SP8401 to SP8406	The number of pages printed from the document server
SP8691 to SP8696	The number of pages sent from the document server

5

Specifically, the following questions can be answered:

- How is the document server actually being used?
- What application is using the document server most frequently?
- What data in the document server is being reused?

Most of the SPs in this group are prefixed with a letter that indicates the mode of operation (the mode of operation is referred to as an "application"). Before reading the Group 8 Service Table, make sure that you understand what these prefixes mean.

Prefixes	What it means	
T:	Total: (Grand Total).	Grand total of the items counted for all applications (C, F, P, etc.).
C:	Copy application.	Totals (pages, jobs, etc.) executed for each application when the job was not stored on the document server.
F:	Fax application.	
P:	Print application.	
S:	Scan application.	

L:	Local storage (document server)	Totals (jobs, pages, etc.) for the document server. The L: counters work differently case by case. Sometimes, they count jobs/pages stored on the document server; this can be in document server mode (from the document server window), or from another mode, such as from a printer driver or by pressing the Store File button in the Copy mode window. Sometimes, they include occasions when the user uses a file that is already on the document server. Each counter will be discussed case by case.
O:	Other applications (external network applications, for example)	Refers to network applications such as Web Image Monitor. Utilities developed with the SDK (Software Development Kit) will also be counted with this group in the future.

## 5

The Group 8 SP codes are limited to 17 characters, forced by the necessity of displaying them on the small LCDs of printers and faxes that also use these SPs. Read over the list of abbreviations below and refer to it again if you see the name of an SP that you do not understand.

**Key for Abbreviations**

Abbreviation	What it means
/	"By", e.g. "T:Jobs/Apl" = Total Jobs "by" Application
>	More (2> "2 or more", 4> "4 or more")
AddBook	Address Book
Apl	Application
B/W	Black & White
Bk	Black
C	Cyan
ColCr	Color Create
ColMode	Color Mode
Comb	Combine
Comp	Compression
Deliv	Delivery

Abbreviation	What it means
DesApl	Designated Application. The application (Copy, Fax, Scan, Print) used to store the job on the document server, for example.
Dev Counter	Development Count, no. of pages developed.
Dup, Duplex	Duplex, printing on both sides
Emul	Emulation
FC	Full Color
FIN	Post-print processing, i.e. finishing (punching, stapling, etc.)
Full Bleed	No Margins
GenCopy	Generation Copy Mode
GPC	Get Print Counter. For jobs 10 pages or less, this counter does not count up. For jobs larger than 10 pages, this counter counts up by the number that is in excess of 10 (e.g., for an 11-page job, the counter counts up $11-10=1$ )
IFax	Internet Fax
ImgEdt	Image Edit performed on the original with the copier GUI, e.g. border removal, adding stamps, page numbers, etc.
K	Black (YMCK)
LS	Local Storage. Refers to the document server.
LSize	Large (paper) Size
Mag	Magnification
MC	One color (monochrome)
NRS	New Remote Service, which allows a service center to monitor machines remotely. "NRS" is used overseas, "CSS" is used in Japan.
Org	Original for scanning
OrgJam	Original Jam

Abbreviation	What it means
Palm 2	Print Job Manager/Desk Top Editor: A pair of utilities that allows print jobs to be distributed evenly among the printers on the network, and allows files to moved around, combined, and converted to different formats.
PC	Personal Computer
PGS	Pages. A page is the total scanned surface of the original. Duplex pages count as two pages, and A3 simplex count as two pages if the A3/DLT counter SP is switched ON.
PJob	Print Jobs
Ppr	Paper
PrtJam	Printer (plotter) Jam
PrtPGS	Print Pages
R	Red (Toner Remaining). Applies to the wide format model A2 only. This machine is under development and currently not available.
Rez	Resolution
SC	Service Code (Error SC code displayed)
Scn	Scan
Sim, Simplex	Simplex, printing on 1 side.
S-to-Email	Scan-to-E-mail
SMC	SMC report printed with SP5990. All of the Group 8 counters are recorded in the SMC report.
Svr	Server
TonEnd	Toner End
TonSave	Toner Save
TXJob	Send, Transmission
YMC	Yellow, Magenta, Cyan
YMCK	Yellow, Magenta, Cyan, Black

**Note**

- All of the Group 8 SPs are reset with SP5 801 1 Memory All Clear.

8 001	T:Total Jobs	* CTL	<p>These SPs count the number of times each application is used to do a job.</p> <p>[0 to 99999999 / 0 / 1]</p> <p><b>Note:</b> The L: counter is the total number of times the other applications are used to send a job to the document server, plus the number of times a file already on the document server is used.</p>
8 002	C:Total Jobs	* CTL	
8 003	F:Total Jobs	* CTL	
8 004	P:Total Jobs	* CTL	
8 005	S:Total Jobs	* CTL	
8 006	L:Total Jobs	* CTL	

- These SPs reveal the number of times an application is used, not the number of pages processed.
- When an application is opened for image input or output, this counts as one job.
- Interrupted jobs (paper jams, etc.) are counted, even though they do not finish.
- Only jobs executed by the customer are counted. Jobs executed by the customer engineer using the SP modes are not counted.
- When using secure printing (when a password is required to start the print job), the job is counted at the time when either "Delete Data" or "Specify Output" is specified.
- A job is counted as a fax job when the job is stored for sending.
- When a fax is received to fax memory, the F: counter increments but the L: counter does not (the document server is not used).
- A fax broadcast counts as one job for the F: counter (the fax destinations in the broadcast are not counted separately).
- A fax broadcast is counted only after all the faxes have been sent to their destinations. If one transmission generates an error, then the broadcast will not be counted until the transmission has been completed.
- A printed fax report counts as one job for the F: counter.
- The F: counter does not distinguish between fax sending or receiving.
- When a copy job on the document server is printed, SP8022 also increments, and when a print job stored on the document server is printed, SP8024 also increments.
- When an original is both copied and stored on the document server, the C: and L: counters both increment.
- When a print job is stored on the document server, only the L: counter increments.
- When the user presses the Document Server button to store the job on the document server, only the L: counter increments.

- When the user enters document server mode and prints data stored on the document server, only the L: counter increments.
- When an image received from Palm 2 is received and stored, the L: counter increments.
- When the customer prints a report (user code list, for example), the O: counter increments. However, for fax reports and reports executed from the fax application, the F: counter increments.

8 011	T:Jobs/LS	*CTL	These SPs count the number of jobs stored to the document server by each application, to reveal how local storage is being used for input. [0 to 9999999 / 0 / 1]  The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.
8 012	C:Jobs/LS	*CTL	
8 013	F:Jobs/LS	*CTL	
8 014	P:Jobs/LS	*CTL	
8 015	S:Jobs/LS	*CTL	
8 016	L:Jobs/LS	*CTL	
8 017	O:Jobs/LS	*CTL	

- When a scan job is sent to the document server, the S: counter increments. When you enter document server mode and then scan an original, the L: counter increments.
- When a print job is sent to the document server, the P: counter increments.
- When a network application sends data to the document server, the O: counter increments.
- When an image from Palm 2 is stored on the document server, the O: counter increments.
- When a fax is sent to the document server, the F: counter increments.

8 021	T:Pjob/LS	*CTL	These SPs reveal how files printed from the document server were stored on the document server originally. [0 to 9999999 / 0 / 1]  The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.
8 022	C:Pjob/LS	*CTL	
8 023	F:Pjob/LS	*CTL	
8 024	P:Pjob/LS	*CTL	
8 025	S:Pjob/LS	*CTL	
8 026	L:Pjob/LS	*CTL	
8 027	O:Pjob/LS	*CTL	

- When a copy job stored on the document server is printed with another application, the C: counter increments.



- When an application like DeskTopBinder merges a copy job that was stored on the document server with a print job that was stored on the document server, the C: and P: counters both increment.
- When a job already on the document server is printed with another application, the L: counter increments.
- When a scanner job stored on the document server is printed with another application, the S: counter increments. If the original was scanned from within document server mode, then the L: counter increments.
- When images stored on the document server by a network application (including Palm 2), are printed with another application, the O: counter increments.
- When a copy job stored on the document server is printed with a network application (Web Image Monitor, for example), the C: counter increments.
- When a fax on the document server is printed, the F: counter increments.

8 031	T:Pjob/DesApl	*CTL	<p>These SPs reveal what applications were used to output documents from the document server.</p> <p>[0 to 99999999 / 0 / 1]</p> <p>The L: counter counts the number of jobs printed from within the document server mode screen at the operation panel.</p>
8 032	C:Pjob/DesApl	*CTL	
8 033	F:Pjob/DesApl	*CTL	
8 034	P:Pjob/DesApl	*CTL	
8 035	S:Pjob/DesApl	*CTL	
8 036	L:Pjob/DesApl	*CTL	
8 037	O:Pjob/DesApl	*CTL	

- When documents already stored on the document server are printed, the count for the application that started the print job is incremented.
- When the print job is started from a network application (Desk Top Binder, Web Image Monitor, etc.) the L: counter increments.

8 041	T:TX Jobs/LS	*CTL	These SPs count the applications that stored files on the document server that were later accessed for transmission over the telephone line or over a network (attached to an e-mail, or as a fax image by I-Fax). [0 to 9999999 / 0 / 1] <b>Note:</b> Jobs merged for sending are counted separately. The L: counter counts the number of jobs scanned from within the document server mode screen at the operation panel.
8 042	C:TX Jobs/LS	*CTL	
8 043	F:TX Jobs/LS	*CTL	
8 044	P:TX Jobs/LS	*CTL	
8 045	S:TX Jobs/LS	*CTL	
8 046	L:TX Jobs/LS	*CTL	
8 047	O:TX Jobs/LS	*CTL	

- When a stored copy job is sent from the document server, the C: counter increments.
- When images stored on the document server by a network application or Palm2 are sent as an e-mail, the O: counter increments.

8 051	T:TX Jobs/DesApl	*CTL	These SPs count the applications used to send files from the document server over the telephone line or over a network (attached to an e-mail, or as a fax image by I-Fax). Jobs merged for sending are counted separately. [0 to 9999999 / 0 / 1] The L: counter counts the number of jobs sent from within the document server mode screen at the operation panel.
8 052	C:TX Jobs/DesApl	*CTL	
8 053	F:TX Jobs/DesApl	*CTL	
8 054	P:TX Jobs/DesApl	*CTL	
8 055	S:TX Jobs/DesApl	*CTL	
8 056	L:TX Jobs/DesApl	*CTL	
8 057	O:TX Jobs/DesApl	*CTL	

- If the send is started from Desk Top Binder or Web Image Monitor, for example, then the O: counter increments.

8 061	T:FIN Jobs	*CTL	[0 to 9999999 / 0 / 1]
	These SPs total the finishing methods. The finishing method is specified by the application.		
8 062	C:FIN Jobs	*CTL	[0 to 9999999 / 0 / 1]
	These SPs total finishing methods for copy jobs only. The finishing method is specified by the application.		

8 063	F:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for fax jobs only. The finishing method is specified by the application.</p> <p><b>Note:</b> Finishing features for fax jobs are not available at this time.</p>		
8 064	P:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for print jobs only. The finishing method is specified by the application.</p>		
8 065	S:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for scan jobs only. The finishing method is specified by the application.</p> <p><b>Note:</b> Finishing features for scan jobs are not available at this time.</p>		
8 066	L:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for jobs output from within the document server mode screen at the operation panel. The finishing method is specified from the print window within document server mode.</p>		
8 067	O:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for jobs executed by an external application, over the network. The finishing method is specified by the application.</p>		
8 06x 1	Sort	Number of jobs started in Sort mode. When a stored copy job is set for Sort and then stored on the document server, the L: counter increments. (See SP8 066 1)	
8 06x 2	Stack	Number of jobs started out of Sort mode.	
8 06x 3	Staple	Number of jobs started in Staple mode.	
8 06x 4	Booklet	Number of jobs started in Booklet mode. If the machine is in staple mode, the Staple counter also increments.	
8 06x 5	Z-Fold	Number of jobs started In any mode other than the Booklet mode and set for folding (Z-fold).	
8 06x 6	Punch	Number of jobs started in Punch mode. When Punch is set for a print job, the P: counter increments. (See SP8 064 6.)	
8 06x 7	Other	Reserved. Not used.	

8 071	T:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of jobs broken down by the number of pages in the job, regardless of which application was used.		
8 072	C:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of copy jobs by size based on the number of pages in the job.		
8 073	F:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of fax jobs by size based on the number of pages in the job.		
8 074	P:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of print jobs by size based on the number of pages in the job.		
8 075	S:Jobs/PGS		[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of scan jobs by size based on the number of pages in the job.		
8 076	L:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of jobs printed from within the document server mode window at the operation panel, by the number of pages in the job.		
8 077	O:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of "Other" application jobs (Web Image Monitor, Palm 2, etc.) by size based on the number of pages in the job.		
8 07x 1	1 Page	8 07x 8	21 to 50 Pages
8 07x 2	2 Pages	8 07x 9	51 to 100 Pages
8 07x 3	3 Pages	8 07x 10	101 to 300 Pages
8 07x 4	4 Pages	8 07x 11	301 to 500 Pages
8 07x 5	5 Pages	8 07x 12	501 to 700 Pages
8 07x 6	6 to 10 Pages	8 07x 13	701 to 1000 Pages
8 07x 7	11 to 20 Pages	8 07x 14	1001 to Pages

- For example: When a copy job stored on the document server is printed in document server mode, the appropriate L: counter (SP8076 0xx) increments.
- Printing a fax report counts as a job and increments the F: counter (SP 8073).
- Interrupted jobs (paper jam, etc.) are counted, even though they do not finish.
- If a job is paused and re-started, it counts as one job.
- If the finisher runs out of staples during a print and staple job, then the job is counted at the time the error occurs.
- For copy jobs (SP 8072) and scan jobs (SP 8075), the total is calculated by multiplying the number of sets of copies by the number of pages scanned. (One duplex page counts as 2.)
- The first test print and subsequent test prints to adjust settings are added to the number of pages of the copy job (SP 8072).
- When printing the first page of a job from within the document server screen, the page is counted.

8 111	T:FAX TX Jobs	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) sent by fax, either directly or using a file stored on the document server, on a telephone line. <b>Note:</b> Color fax sending is not available at this time.		
8 113	F: FAX TX Jobs	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) sent by fax directly on a telephone line. <b>Note:</b> Color fax sending is not available at this time.		
8 11x 1	B/W		
8 11x 2	Color		

- These counters count jobs, not pages.
- This SP counts fax jobs sent over a telephone line with a fax application, including documents stored on the document server.
- If the mode is changed during the job, the job will count with the mode set when the job started.
- If the same document is faxed to both a public fax line and an I-Fax at a destination where both are available, then this counter increments, and the I-Fax counter (8 12x) also increments.
- The fax job is counted when the job is scanned for sending, not when the job is sent.

8 121	T:IFAX TX Jobs	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) sent, either directly or using a file stored on the document server, as fax images using I-Fax. <b>Note:</b> Color fax sending is not available at this time.		
8 123	F: IFAX TX Jobs	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the number of jobs (color or black-and-white) sent (not stored on the document server), as fax images using I-Fax. <b>Note:</b> Color fax sending is not available at this time.		
8 12x 1	B/W		
8 12x 2	Color		

## 5

- These counters count jobs, not pages.
- The counters for color are provided for future use; the color fax feature is not available at this time.
- The fax job is counted when the job is scanned for sending, not when the job is sent.

8 131	T:S-to-Email Jobs	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) scanned and attached to an e-mail, regardless of whether the document server was used or not.		
8 135	S: S-to-Email Jobs	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the number of jobs (color or black-and-white) scanned and attached to e-mail, without storing the original on the document server.		
8 13x 1	B/W		
8 13x 2	Color		
8 13x 3	ACS		

- These counters count jobs, not pages.
- If the job is stored on the document server, after the job is stored it is determined to be color or black-and-white then counted.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.

- If several jobs are combined for sending to the Scan Router, Scan-to-Email, or Scan-to-PC, or if one job is sent to more than one destination. each send is counted separately. For example, if the same document is sent by Scan-to-Email as well as Scan-to-PC, then it is counted twice (once for Scan-to-Email and once for Scan-to-PC).

8 141	T:Deliv Jobs/Svr	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) scanned and sent to a Scan Router server.		
8 145	S: Deliv Jobs/Svr	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of jobs (color or black-and-white) scanned in scanner mode and sent to a Scan Router server.		
8 14x 1	B/W		
8 14x 2	Color		
8 14x 3	ACS		

- These counters count jobs, not pages.
- The jobs are counted even though the arrival and reception of the jobs at the Scan Router server cannot be confirmed.
- If even one color image is mixed with black-and-white images, then the job is counted as a "Color" job.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be delivered, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

8 151	T:Deliv Jobs/PC	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) scanned and sent to a folder on a PC (Scan-to-PC).  <b>Note:</b> At the present time, 8 151 and 8 155 perform identical counts.		
8 155	S:Deliv Jobs/PC	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) scanned and sent with Scan-to-PC.		

8 15x 1	B/W
8 15x 2	Color
8 15x 3	ACS

- These counters count jobs, not pages.
- If the job is cancelled during scanning, it is not counted.
- If the job is cancelled while it is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

5

8 161	T:PCFAX TX Jobs	*CTL	These SPs count the number of PC Fax transmission jobs. A job is counted from when it is registered for sending, not when it is sent. [0 to 9999999 / 0 / 1] <b>Note:</b> At the present time, these counters perform identical counts.
8 163	F:PCFAX TX Jobs	*CTL	

- This counts fax jobs started from a PC using a PC fax application, and sending the data out to the destination from the PC through the copier.

8 171	T:Deliv Jobs/WSD	*CTL	These SPs count the pages scanned by WS. [0 to 9999999 / 0 / 1]
8 175	S:Deliv Jobs/WSD	*CTL	
-001	B/W		
-002	Color		
-003	ACS		

8 181	T:Scan to Media Jobs	*CTL	These SPs count the scanned pages in a media by the scanner application. [0 to 9999999 / 0 / 1]
8 185	S:Scan to Media Jobs	*CTL	
-001	B/W		
-002	Color		
-003	ACS		



8 191	T:Total Scan PGS	*CTL	These SPs count the pages scanned by each application that uses the scanner to scan images. [0 to 9999999/ 0 / 1]
8 192	C:Total Scan PGS	*CTL	
8 193	F:Total Scan PGS	*CTL	
8 195	S:Total Scan PGS	*CTL	
8 196	L:Total Scan PGS	*CTL	

- SP 8 191 to 8 196 count the number of scanned sides of pages, not the number of physical pages.
- These counters do not count reading user stamp data, or reading color charts to adjust color.
- Previews done with a scanner driver are not counted.
- A count is done only after all images of a job have been scanned.
- Scans made in SP mode are not counted.

### Examples

- If 3 B5 pages and 1 A3 page are scanned with the scanner application but not stored, the S: count is 4.
- If both sides of 3 A4 sheets are copied and stored to the document server using the Store File button in the Copy mode window, the C: count is 6 and the L: count is 6.
- If both sides of 3 A4 sheets are copied but not stored, the C: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

8 201	T:LSize Scan PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of large pages input with the scanner for scan and copy jobs. Large size paper (A3/DLT) scanned for fax transmission are not counted. <b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.		
8 203	F:LSize Scan PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of large pages input with the scanner for fax transmission. <b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.		
8 205	S:LSize Scan PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of large pages input with the scanner for scan jobs only. Large size paper (A3/DLT) scanned for fax transmission are not counted. <b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.		

8 211	T:Scan PGS/LS	*CTL	These SPs count the number of pages scanned into the document server . [0 to 99999999/ 0 / 1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen
8 212	C:Scan PGS/LS	*CTL	
8 213	F:Scan PGS/LS	*CTL	
8 215	S:Scan PGS/LS	*CTL	
8 216	L:Scan PGS/LS	*CTL	

- Reading user stamp data is not counted.
- If a job is cancelled, the pages output as far as the cancellation are counted.
- If the scanner application scans and stores 3 B5 sheets and 1 A4 sheet, the S: count is 4.
- If pages are copied but not stored on the document server, these counters do not change.
- If both sides of 3 A4 sheets are copied and stored to the document server, the C: count is 6 and the L: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

8 221	ADF Org Feeds	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the number of pages fed through the ADF for front and back side scanning.		
8 221 1	Front	Number of front sides fed for scanning: With an ADF that can scan both sides simultaneously, the Front side count is the same as the number of pages fed for either simplex or duplex scanning. With an ADF that cannot scan both sides simultaneously, the Front side count is the same as the number of pages fed for duplex front side scanning. (The front side is determined by which side the user loads face up.)	
8 221 2	Back	Number of rear sides fed for scanning: With an ADF that can scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex scanning. With an ADF that cannot scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex rear-side scanning.	

- When 1 sheet is fed for duplex scanning the Front count is 1 and the Back count is 1.
- If a jam occurs during the job, recovery processing is not counted to avoid double counting. Also, the pages are not counted if the jam occurs before the first sheet is output.

8 231	Scan PGS/Mode	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages scanned by each ADF mode to determine the work load on the ADF.		
8 231 1	Large Volume	Selectable. Large copy jobs that cannot be loaded in the ADF at one time.	
8 231 2	SADF	Selectable. Feeding pages one by one through the ADF.	
8 231 3	Mixed Size	Selectable. Select "Mixed Sizes" on the operation panel.	
8 231 4	Custom Size	Selectable. Originals of non-standard size.	
8 231 5	Platen	Book mode. Raising the ADF and placing the original directly on the platen.	
8 231 6	Mixed 1side/ 2side	Simplex and Duplex mode.	

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.
- The user cannot select mixed sizes or non-standard sizes with the fax application so if the original's page sizes are mixed or non-standard, these are not counted.
- If the user selects "Mixed Sizes" for copying in the platen mode, the Mixed Size count is enabled.
- In the SADF mode if the user copies 1 page in platen mode and then copies 2 pages with SADF, the Platen count is 1 and the SADF count is 3.

8 241	T:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of scanned pages by original type for all jobs, regardless of which application was used.		
8 242	C:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages scanned by original type for Copy jobs.		
8 243	F:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages scanned by original type for Fax jobs.		
8 245	S:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages scanned by original type for Scan jobs.		

8 246	L:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]		
	These SPs count the number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen				
	<b>8 241</b>	<b>8 242</b>	<b>8 243</b>	<b>8 245</b>	<b>8 246</b>
8 24x 1: Text	Yes	Yes	Yes	Yes	Yes
8 24x 2: Text/Photo	Yes	Yes	Yes	Yes	Yes
8 24x 3: Photo	Yes	Yes	Yes	Yes	Yes
8 24x 4: GenCopy, Pale	Yes	Yes	No	Yes	Yes
8 24x 5: Map	Yes	Yes	No	Yes	Yes
8 24x 6: Normal/Detail	Yes	No	Yes	No	No
8 24x 7: Fine/Super Fine	Yes	No	Yes	No	No
8 24x 8: Binary	Yes	No	No	Yes	No
8 24x 9: Grayscale	Yes	No	No	Yes	No
8 24x 10: Color	Yes	No	No	Yes	No
8 24x 11: Other	Yes	Yes	Yes	Yes	Yes

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.

8 251	T:Scan PGS/ImgEdt	*CTL	<p>These SPs show how many times Image Edit features have been selected at the operation panel for each application. Some examples of these editing features are:</p> <ul style="list-style-type: none"> <li>• Erase&gt; Border</li> <li>• Erase&gt; Center</li> <li>• Image Repeat</li> <li>• Centering</li> <li>• Positive/Negative</li> </ul> <p>[0 to 9999999/ 0 / 1]</p> <p>Note: The count totals the number of times the edit features have been used. A detailed breakdown of exactly which features have been used is not given.</p>
8 252	C:Scan PGS/ImgEdt	*CTL	
8 254	P:Scan PGS/ImgEdt	*CTL	
8 255	S : Scan PGS/ImgEdr	*CTL	
8 256	L:Scan PGS/ImgEdt	*CTL	
8 257	O:Scan PGS/ImgEdt	*CTL	

The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen.

8 261	T:Scan PGS/ColCr	*CTL	-
8 262	C:Scan PGS/ ColCr	*CTL	-
8 265	S:Scn PGS/Color	*CTL	-
8 266	L:Scn PGS/ColCr	*CTL	-
8 26x 1	Color Conversion	<p>These SPs show how many times color creation features have been selected at the operation panel.</p>	
8 26x 2	Color Erase		
8 26x 3	Background		
8 26x 4	Other		

8 281	T:Scan PGS/TWAIN	*CTL	<p>These SPs count the number of pages scanned using a TWAIN driver. These counters reveal how the TWAIN driver is used for delivery functions.</p> <p>[0 to 9999999/ 0 / 1]</p> <p><b>Note:</b> At the present time, these counters perform identical counts.</p>
8 285	S:Scan PGS/TWAIN	*CTL	

8 291	T:Scan PGS/Stamp	*CTL	These SPs count the number of pages stamped with the stamp in the ADF unit. [0 to 9999999/ 0 / 1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen
8 293	F:Scan PGS/Stamp	*CTL	
8 295	S:Scan PGS/Stamp	*CTL	

8 301	T:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned by all applications. Use these totals to compare original page size (scanning) and output (printing) page size [SP 8-441].		
8 302	C:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned by the Copy application. Use these totals to compare original page size (scanning) and output (printing) page size [SP 8-442].		
8 303	F:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned by the Fax application. Use these totals to compare original page size (scanning) and output page size [SP 8-443].		
8 305	S:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned by the Scan application. Use these totals to compare original page size (scanning) and output page size [SP 8-445].		
8 306	L:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen. Use these totals to compare original page size (scanning) and output page size [SP 8-446].		

8 30x 1	A3	
8 30x 2	A4	
8 30x 3	A5	
8 30x 4	B4	
8 30x 5	B5	
8 30x 6	DLT	
8 30x 7	LG	
8 30x 8	LT	
8 30x 9	HLT	
8 30x 10	Full Bleed	
8 30x 254	Other (Standard)	
8 30x 255	Other (Custom)	

8 311	T:Scan PGS/Rez	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings.		
8 315	S: Scan PGS/Rez	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings. <b>Note:</b> At the present time, SP8-311 and SP8-315 perform identical counts.		
8 31x 1	1200dpi <		
8 31x 2	600dpi to 1199dpi		
8 31x 3	400dpi to 599dpi		
8 31x 4	200dpi to 399dpi		
8 31x 5	< 199dpi		

- Copy resolution settings are fixed so they are not counted.
- The Fax application does not allow finely-adjusted resolution settings so no count is done for the Fax application.

8 381	T:Total PrtPGS	*CTL	These SPs count the number of pages printed by the customer. The counter for the application used for storing the pages increments. [0 to 9999999/ 0 / 1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter.
8 382	C:Total PrtPGS	*CTL	
8 383	F:Total PrtPGS	*CTL	
8 384	P:Total PrtPGS	*CTL	
8 385	S:Total PrtPGS	*CTL	
8 386	L:Total PrtPGS	*CTL	
8 387	O:Total PrtPGS	*CTL	

- When the A3/DLT double count function is switched on with SP5104, 1 A3/DLT page is counted as 2.
- When several documents are merged for a print job, the number of pages stored are counted for the application that stored them.
- These counters are used primarily to calculate charges on use of the machine, so the following pages are not counted as printed pages:
  - Blank pages in a duplex printing job.
  - Blank pages inserted as document covers, chapter title sheets, and slip sheets.
  - Reports printed to confirm counts.
  - All reports done in the service mode (service summaries, engine maintenance reports, etc.)
  - Test prints for machine image adjustment.
  - Error notification reports.
  - Partially printed pages as the result of a copier jam.

8 391	LSize PrtPGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count pages printed on paper sizes A3/DLT and larger. <b>Note:</b> In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.		



8 401	T:PrtPGS/LS	*CTL	<p>These SPs count the number of pages printed from the document server. The counter for the application used to print the pages is incremented.</p> <p>The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.</p> <p>[0 to 9999999 / 0 / 1]</p>
8 402	C:PrtPGS/LS	*CTL	
8 403	F:PrtPGS/LS	*CTL	
8 404	P:PrtPGS/LS	*CTL	
8 405	S:PrtPGS/LS	*CTL	
8 406	L:PrtPGS/LS	*CTL	

- Print jobs done with Web Image Monitor and Desk Top Binder are added to the L: count.
- Fax jobs done with Web Image Monitor and Desk Top Binder are added to the F: count.

8 411	Prints/Duplex	*CTL	<p>This SP counts the amount of paper (front/back counted as 1 page) used for duplex printing. Last pages printed only on one side are not counted.</p> <p>[0 to 9999999 / 0 / 1]</p>
-------	---------------	------	---

8 421	T:PrtPGS/Dup Comb	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing. This is the total for all applications.		
8 422	C:PrtPGS/Dup Comb	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the copier application.		
8 423	F:PrtPGS/Dup Comb	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the fax application.		
8 424	P:PrtPGS/Dup Comb	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the printer application.		
8 425	S:PrtPGS/Dup Comb	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the scanner application.		

8 426	L:PrfPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing from within the document server mode window at the operation panel.		
8 427	O:PrfPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by Other applications		
8 42x 1	Simplex> Duplex		
8 42x 2	Duplex> Duplex		
8 42x 3	Book> Duplex		
8 42x 4	Simplex Combine		
8 42x 5	Duplex Combine		
8 42x 6	2in 1		2 pages on 1 side (2-Up)
8 42x 7	4 in 1		4 pages on 1 side (4-Up)
8 42x 8	6 in 1		6 pages on 1 side (6-Up)
8 42x 9	8 in 1		8 pages on 1 side (8-Up)
8 42x 10	9 in 1		9 pages on 1 side (9-Up)
8 42x 11	16 in 1		16 pages on 1 side (16-Up)
8 42x 12	Booklet		
8 42x 13	Magazine		

- These counts (SP8 421 to SP8 427) are especially useful for customers who need to improve their compliance with ISO standards for the reduction of paper consumption.
- Pages that are only partially printed with the n-Up functions are counted as 1 page.
- Here is a summary of how the counters work for Booklet and Magazine modes:

Booklet		Magazine	
Original Pages	Count	Original Pages	Count
1	1	1	1

2	2		2	2
3	2		3	2
4	2		4	2
5	3		5	4
6	4		6	4
7	4		7	4
8	4		8	4

8 431	T:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output with the three features below, regardless of which application was used.		
8 432	C:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output with the three features below with the copy application.		
8 434	P:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output with the three features below with the print application.		
8 436	L:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output from within the document server mode window at the operation panel with the three features below.		
8 437	O:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output with the three features below with Other applications.		
8 43x 1	Cover/Slip Sheet	Total number of covers or slip sheets inserted. The count for a cover printed on both sides counts 2.	
8 43x 2	Series/Book	The number of pages printed in series (one side) or printed as a book with booklet right/left pagination.	
8 43x 3	User Stamp	The number of pages printed where stamps were applied, including page numbering and date stamping.	

8 441	T:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by all applications.		
8 442	C:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by the copy application.		
8 443	F:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by the fax application.		
8 444	P:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by the printer application.		
8 445	S:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by the scanner application.		
8 446	L:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed from within the document server mode window at the operation panel.		
8 447	O:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by Other applications.		

8 44x 1	A3	
8 44x 2	A4	
8 44x 3	A5	
8 44x 4	B4	
8 44x 5	B5	
8 44x 6	DLT	
8 44x 7	LG	
8 44x 8	LT	
8 44x 9	HLT	
8 44x 10	Full Bleed	
8 44x 254	Other (Standard)	
8 44x 255	Other (Custom)	

- These counters do not distinguish between LEF and SEF.

8 451	PrtPGS/Ppr Tray	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the number of sheets fed from each paper feed station.		
8 451 1	Bypass Tray	Bypass Tray	
8 451 2	Tray 1	Copier	
8 451 3	Tray 2	Copier	
8 451 4	Tray 3	Paper Tray Unit (Option)	
8 451 5	Tray 4	Paper Tray Unit (Option)	
8 451 6	Tray 5	LCT (Option)	
8 451 7	Tray 6	Currently not used.	
8 451 8	Tray 7	Currently not used.	
8 451 9	Tray 8	Currently not used.	
8 451 10	Tray 9	Currently not used.	

8 461	T:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs count by paper type the number pages printed by all applications.</p> <ul style="list-style-type: none"> <li>• These counters are not the same as the PM counter. The PM counter is based on feed timing to accurately measure the service life of the feed rollers. However, these counts are based on output timing.</li> <li>• Blank sheets (covers, chapter covers, slip sheets) are also counted.</li> <li>• During duplex printing, pages printed on both sides count as 1, and a page printed on one side counts as 1.</li> </ul>		
8 462	C:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by paper type the number pages printed by the copy application.		
8 463	F:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by paper type the number pages printed by the fax application.		
8 464	P:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by paper type the number pages printed by the printer application.		
8 466	L:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by paper type the number pages printed from within the document server mode window at the operation panel.		
8 46x 1	Normal		
8 46x 2	Recycled		
8 46x 3	Special		
8 46x 4	Thick		
8 46x 5	Normal (Back)		
8 46x 6	Thick (Back)		
8 46x 7	OHP		
8 46x 8	Other		
8 471	PrtPGS/Mag	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by magnification rate the number of pages printed.		

8 471 1	< 49%
8 471 2	50% to 99%
8 471 3	100%
8 471 4	101% to 200%
8 471 5	201% <

- Counts are done for magnification adjusted for pages, not only on the operation panel but performed remotely with an external network application capable of performing magnification adjustment as well.
- Magnification adjustments done with printer drivers with PC applications such as Excel are also counted.
- Magnification adjustments done for adjustments after they have been stored on the document server are not counted.
- Magnification adjustments performed automatically during Auto Reduce/Enlarge copying are counted.
- The magnification rates of blank cover sheets, slip sheets, etc. are automatically assigned a rate of 100%.

8 481	T:PrtPGS/TonSave	*CTL	
8 484	P:PrtPGS/TonSave	*CTL	
	<p>These SPs count the number of pages printed with the Toner Save feature switched on.</p> <p><b>Note:</b> These SPs return the same results as this SP is limited to the Print application. [0 to 99999999 / 0 / 1]</p>		

8 491	T:PrtPGS/Col Mode	*CTL	These SPs count the number of pages printed in the Color Mode by each application.
8 492	C:PrtPGS/Col Mode	*CTL	
8 493	F:PrtPGS/Col Mode	*CTL	
8 496	L:PrtPGS/Col Mode	*CTL	
8 497	O:PrtPGS/Col Mode	*CTL	
8 49x 1	B/W		
8 49x 2	Single Color		

8 49x 3	Two Color
8 49x 4	Full Color

8 501	T:PrtPGS/Col Mode	*CTL	These SPs count the number of pages printed in the Color Mode by the print application.
8 504	P:PrtPGS/Col Mode	*CTL	
8 507	O:PrtPGS/Col Mode	*CTL	
8 50x 1	B/W		
8 50x 2	Mono Color		
8 50x 3	Full Color		
8 50x 4	Single Color		
8 50x 5	Two Color		

8 511	T:PrtPGS/Emul	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by printer emulation mode the total number of pages printed.		
8 514	P:PrtPGS/Emul	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by printer emulation mode the total number of pages printed.		



8 514 1	RPCS	
8 514 2	RPDL	
8 514 3	PS3	
8 514 4	R98	
8 514 5	R16	
8 514 6	GL/GL2	
8 514 7	R55	
8 514 8	RTIFF	
8 514 9	PDF	
8 514 10	PCL5e/5c	
8 514 11	PCL XL	
8 514 12	IPDL-C	
8 514 13	BM-Links	
8 514 14	Other	

- SP8 511 and SP8 514 return the same results as they are both limited to the Print application.
- Print jobs output to the document server are not counted.

8 521	T:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by all applications.		
8 522	C:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Copy application.		
8 523	F:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Fax application. <b>NOTE:</b> Print finishing options for received faxes are currently not available.		

8 524	P:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Print application.		
8 525	S:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Scanner application.		
8 526	L:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed from within the document server mode window at the operation panel.		
8 52x 1	Sort		
8 52x 2	Stack		
8 52x 3	Staple		
8 52x 4	Booklet		
8 52x 5	Z-Fold		
8 52x 6	Punch		
8 52x 7	Other		

**Note**

- If stapling is selected for finishing and the stack is too large for stapling, the unstapled pages are still counted.
- The counts for staple finishing are based on output to the staple tray, so jam recoveries are counted.

8 531	Staples	*CTL	This SP counts the amount of staples used by the machine. [0 to 9999999 / 0 / 1]
-------	---------	------	---

8 581	T:Counter	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count the total output broken down by color output, regardless of the application used. In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.		

8 581 1	Total
8 581 2	Total: Full Color
8 581 3	B&W/Single Color
8 581 4	Development: CMY
8 581 5	Development: K
8 581 6	Copy: Color
8 581 7	Copy: B/W
8 581 8	Print: Color
8 581 9	Print: B/W
8 581 10	Total: Color
8 581 11	Total: B/W
8 581 12	Full Color: A3
8 581 13	Full Color: B4 JIS or Smaller
8 581 14	Full Color Print
8 581 15	Mono Color Print
8 581 16	Full Color GPC
8 581 17	Twin Color Mode Print
8 581 18	Full Color Print (Twin)
8 581 19	Mono Color Print (Twin)
8 581 20	Full Color Total (CV)
8 581 21	Mono Color Total (CV)
8 581 22	Full Color Print (CV)

8 582	C:Counter	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total output of the copy application broken down by color output.		

8 582 1	B/W
8 582 2	Single Color
8 582 3	Two Color
8 582 4	Full Color

8 583	F:Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total output of the fax application broken down by color output.		
8 583 1	B/W		
8 583 2	Single Color		

8 584	P:Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total output of the print application broken down by color output.		
8 584 1	B/W		
8 584 2	Mono Color		
8 584 3	Full Color		
8 584 4	Single Color		
8 584 5	Two Color		

8 586	L:Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total output of the local storage broken down by color output.		
8 582 1	B/W		
8 582 2	Single Color		
8 582 3	Two Color		
8 582 4	Full Color		

8 591	O:Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the totals for A3/DLT paper use, number of duplex pages printed, and the number of staples used. These totals are for Other (O:) applications only.		

8 591 1	A3/DLT	-
8 591 2	Duplex	

8 601	T: Coverage Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total coverage for each color and the total printout pages for each printing mode.		
8 601 1	B/W	-	
8 601 2	Color		
8 601 11	B/W Printing Pages		
8 601 12	Color Printing Pages		
8 601 21	Coverage Counter 1		
8 601 22	Coverage Counter 2		
8 601 23	Coverage Counter 3		

8 617	SDK Apli Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total printout pages for each SDK applicaion.		
8 617 1	SDK-1	-	
8 617 2	SDK-2		
8 617 3	SDK-3		
8 617 4	SDK-4		
8 617 5	SDK-5		
8 617 6	SDK-6		

8 631	T:FAX TX PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the number of pages sent by fax to a telephone number.		

8 633	F:FAX TX PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the number of pages sent by fax to a telephone number.		
8 63x 1	B/W		
8 63x 2	Color		

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W or Color.
- At the present time, this feature is provided for the Fax application only so SP8631 and SP8633 are the same.
- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.

8 641	T:IFAX TX PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the number of pages sent by fax to as fax images using I-Fax.		
8 643	F:IFAX TX PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the number of pages sent by Fax as fax images using I-Fax.		
8 64x 1	B/W		
8 64x 2	Color		

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W or Color.
- At the present time, this feature is provided for the Fax application only so SP8641 and SP8643 are the same.
- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.

8 651	T:S-to-Email PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the total number of pages attached to an e-mail for both the Scan and document server applications.		
8 655	S:S-to-Email PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the total number of pages attached to an e-mail for the Scan application only.		
8 65x 1	B/W		
8 65x 2	Color		

**Note**

- The count for B/W and Color pages is done after the document is stored on the HDD. If the job is cancelled before it is stored, the pages are not counted.
- If Scan-to-Email is used to send a 10-page document to 5 addresses, the count is 10 (the pages are sent to the same SMTP server together).
- If Scan-to-PC is used to send a 10-page document to 5 folders, the count is 50 (the document is sent to each destination of the SMB/FTP server).
- Due to restrictions on some devices, if Scan-to-Email is used to send a 10-page document to a large number of destinations, the count may be divided and counted separately. For example, if a 10-page document is sent to 200 addresses, the count is 10 for the first 100 destinations and the count is also 10 for the second 100 destinations, for a total of 20.

8 661	T:Deliv PGS/Svr	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the total number of pages sent to a Scan Router server by both Scan and LS applications.		
8 665	S:Deliv PGS/Svr	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the total number of pages sent to a Scan Router server by the Scan application.		
8 66x 1	B/W		
8 66x 2	Color		

**Note**

- The B/W and Color counts are done after the document is stored on the HDD of the Scan Router server.

- If the job is canceled before storage on the Scan Router server finishes, the counts are not done.
- The count is executed even if regardless of confirmation of the arrival at the Scan Router server.

8 671	T:Deliv PGS/PC	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count by color mode the total number of pages sent to a folder on a PC (Scan-to-PC) with the Scan and LS applications.		
8 675	S: Deliv PGS/PC	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count by color mode the total number of pages sent with Scan-to-PC with the Scan application.		
8 67x 1	B/W		
8 67x 2	Color		

5

8 681	T:PCFAX TXPGS	*CTL	These SPs count the number of pages sent by PC Fax. These SPs are provided for the Fax application only, so the counts for SP8 681 and SP8 683 are the same. [0 to 99999999 / 0 / 1]
8 683	F:PCFAX TXPGS	*CTL	

- This counts pages sent from a PC using a PC fax application, from the PC through the copier to the destination.
- When sending the same message to more than one place using broadcasting, the pages are only counted once. (For example, a 10-page fax is sent to location A and location B. The counter goes up by 10, not 20.)

8 691	T:TX PGS/LS	*CTL	These SPs count the number of pages sent from the document server. The counter for the application that was used to store the pages is incremented.
8 692	C:TX PGS/LS	*CTL	
8 693	F:TX PGS/LS	*CTL	[0 to 99999999 / 0 / 1]
8 694	P:TX PGS/LS	*CTL	The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter.
8 695	S:TX PGS/LS	*CTL	
8 696	L:TX PGS/LS	*CTL	

**Note**

- Print jobs done with Web Image Monitor and Desk Top Binder are added to the count.
- If several documents are merged for sending, the number of pages stored are counted for the application that stored them.



- When several documents are sent by a Fax broadcast, the F: count is done for the number of pages sent to each destination.

8 701	TX PGS/Port	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages sent by the physical port used to send them. For example, if a 3-page original is sent to 4 destinations via ISDN G4, the count for ISDN (G3, G4) is 12.		
8 701 1	PSTN-1		
8 701 2	PSTN-2		
8 701 3	PSTN-3		
8 701 4	ISDN (G3,G4)		
8 701 5	Network		

8 711	T:Scan PGS/Comp	*CTL	[0 to 9999999/ 0 / 1]
8 715	S:Scan PGS/Comp	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages sent by each compression mode.		
8 715 1	JPEG/JPEG2000		
8 715 2	TIFF(Multi/Single)		
8 715 3	PDF		
8 715 4	Other		
8 715 5	PDF/Comp		

8 721	T:Deliv PGS/WSD	*CTL	[0 to 9999999/ 0 / 1]
8 725	S: Dvliv PGS/WSD	*CTL	
	These SPs count the number of pages scanned by each scanner mode.		
x 1	B/W	-	
x 2	Color	-	

8 731	T:Scan PGS/Media	*CTL	[0 to 9999999/ 0 / 1]
8 735	S:Scan PGS/Media	*CTL	
	These SPs count the number of pages scanned and saved in a media by each scanner mode.		
	x 1	B/W	-
x 2	Color	-	

8 741	RX PGS/Port	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages received by the physical port used to receive them.		
8 741 1	PSTN-1	-	
8 741 2	PSTN-2	-	
8 741 3	PSTN-3	-	
8 741 4	ISDN (G3,G4)	-	
8 741 5	Network	-	

8 771	Dev Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the frequency of use (number of rotations of the development rollers) for black and other color toners.		
8 771 1	Total		
8 771 2	K		
8 771 3	Y		
8 771 4	M		
8 771 5	C		

8 781	Toner_Bottle_Info.	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of already replaced toner bottles. <b>NOTE:</b> Currently, the data in SP7-833-011 through 014 and the data in SP8-781-001 through 004 are the same.		

8 781 1	Toner: BK	The number of black-toner bottles
8 781 2	Toner: Y	The number of yellow-toner bottles
8 781 3	Toner: M	The number of magenta-toner bottles
8 781 4	Toner: C	The number of cyan-toner bottles

8 791	LS Memory Remain	*CTL	This SP displays the percent of space available on the document server for storing documents. [0 to 100 / 0 / 1]
-------	------------------	------	---

8 801	Toner Remain	*CTL	[0 to 100/ 0 / 1]
	These SPs display the percent of toner remaining for each color. This SP allows the user to check the toner supply at any time. <b>Note:</b> This precise method of measuring remaining toner supply (1% steps) is better than other machines in the market that can only measure in increments of 10 (10% steps).		
	8 801 1	K	
	8 801 2	Y	
	8 801 3	M	
	8 801 4	C	

8 851	CVr Cnt: 0-10%	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of scanned sheets on which the coverage of each color is from 0% to 10%.		
8 851 11	0 to 2%: BK	8 851 31	5 to 7%: BK
8 851 12	0 to 2%: Y	8 851 32	5 to 7%: Y
8 851 13	0 to 2%: M	8 851 33	5 to 7%: M
8 851 14	0 to 2%: C	8 851 34	5 to 7%: C
8 851 21	3 to 4%: BK	8 851 41	8 to 10%: BK
8 851 22	3 to 4%: Y	8 851 42	8 to 10%: Y

8 851 23	3 to 4%: M	8 851 43	8 to 10%: M
8 851 24	3 to 4%: C	8 851 44	8 to 10%: C

8 861	CVr Cnt: 11-20%	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of scanned sheets on which the coverage of each color is from 11% to 20%.		
8 861 1	BK		
8 861 2	Y		
8 861 3	M		
8 861 4	C		

8 871	CVr Cnt: 21-30%	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of scanned sheets on which the coverage of each color is from 21% to 30%.		
8 871 1	BK		
8 871 2	Y		
8 871 3	M		
8 871 4	C		

8 881	CVr Cnt: 31%-	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of scanned sheets on which the coverage of each color is 31% or higher.		
8 881 1	BK		
8 881 2	Y		
8 881 3	M		
8 881 4	C		

8 891	Page/Toner Bottle	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the amount of the remaining current toner for each color.		

8 891 1	BK
8 891 2	Y
8 891 3	M
8 891 4	C

8 901	Page/Toner_prev1	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the amount of the remaining previous toner for each color.		
8 901 1	BK		
8 901 2	Y		
8 901 3	M		
8 901 4	C		

8 911	Page/Toner_prev2	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the amount of the remaining 2nd previous toner for each color.		
8 911 1	BK		
8 911 2	Y		
8 911 3	M		
8 911 4	C		

8 921	Cvr Cnt/Total	*CTL	[0 to 9999999/ 0 / 1]
	Displays the total coverage and total printout number for each color.		

8 921 1	Coverage (%) Bk	
8 921 2	Coverage (%) Y	
8 921 3	Coverage (%) M	
8 921 4	Coverage (%) C	
8 921 11	Coverage /P: Bk	
8 921 12	Coverage /P: Y	
8 921 13	Coverage /P: M	
8 921 14	Coverage /P: C	

5

8 941	Machine Status	*CTL	[0 to 99999999 / 0 / 1]
	<p>These SPs count the amount of time the machine spends in each operation mode. These SPs are useful for customers who need to investigate machine operation for improvement in their compliance with ISO Standards.</p>		
8 941 1	Operation Time	Engine operation time. Does not include time while controller is saving data to HDD (while engine is not operating).	
8 941 2	Standby Time	Engine not operating. Includes time while controller saves data to HDD. Does not include time spent in Energy Save, Low Power, or Off modes.	
8 941 3	Energy Save Time	Includes time while the machine is performing background printing.	
8 941 4	Low Power Time	Includes time in Energy Save mode with Engine on. Includes time while machine is performing background printing.	
8 941 5	Off Mode Time	Includes time while machine is performing background printing. Does not include time machine remains powered off with the power switches.	
8 941 6	SC	Total time when SC errors have been staying.	
8 941 7	PrtJam	Total time when paper jams have been staying during printing.	
8 941 8	OrgJam	Total time when original jams have been staying during scanning.	

8 941 9	Supply PM Unit End	Total time when toner end has been staying
---------	--------------------	--

8 951	AddBook Register	*CTL	
	These SPs count the number of events when the machine manages data registration.		
8 951 1	User Code/User ID	User code registrations.	[0 to 99999999 / 0 / 1]
8 951 2	Mail Address	Mail address registrations.	
8 951 3	Fax Destination	Fax destination registrations.	
8 951 4	Group	Group destination registrations.	
8 951 5	Transfer Request	Fax relay destination registrations for relay TX.	
8 951 6	F-Code	F-Code box registrations.	
8 951 7	Copy Program	Copy application registrations with the Program (job settings) feature.	[0 to 255 / 0 / 255]
8 951 8	Fax Program	Fax application registrations with the Program (job settings) feature.	
8 951 9	Printer Program	Printer application registrations with the Program (job settings) feature.	
8 951 10	Scanner Program	Scanner application registrations with the Program (job settings) feature.	

8 999	Admin. Counter List	*CTL	[0 to 99999999 / 0 / 1]
	Displays the total coverage and total printout number for each color.		

8 999 1	Total	
8 999 2	Copy: Full Color	
8 999 3	Copy: BW	
8 999 4	Copy: Single Color	
8 999 5	Copy: Two Color	
8 999 6	Printer Full Color	
8 999 7	Printer BW	
8 999 8	Printer Single Color	
8 999 9	Printer Two Color	
8 999 10	Fax Print: BW	
8 999 12	A3/DLT	
8 999 13	Duplex	
8 999 14	Coverage: Color (%)	
8 999 15	Coverage: BW (%)	
8 999 16	Coverage: Color Print Page (%)	
8 999 17	Coverage: BW Print Page (%)	
8 999 101	Transmission Total: Color	
8 999 102	Transmission Total: BW	
8 999 103	FAX Transmission	
8 999 104	Scanner Transmission: Color	
8 999 105	Scanner Transmission: BW	



## Main SP Tables-9

### Input Check Table

When entering the Input Check mode, 8 digits display the result for a section. Each digit corresponds to a different device as shown in the table.

Bit No.	7	6	5	4	3	2	1	0
Result	0 or 1	0 or 1	0 or 1	0 or 1	0 or 1	0 or 1	0 or 1	0 or 1

### Copier

5803	Description	Reading	
		0	1
5803 1	2nd Tray Size Detection	See table 2 following this table.	
5803 2	1st Tray Set Detection	Set	Not set
5803 3	1st Tray Paper Height Sensor 1	See table 1 following this table.	
5803 4	1st Tray Paper Height Sensor 2	See table 1 following this table.	
5803 5	2nd Tray Paper Height Sensor 1	See table 1 following this table.	
5803 6	2nd Tray Paper Height Sensor 2	See table 1 following this table.	
5803 7	1st Tray Paper End Detection	No paper	Paper remaining
5803 8	2nd Tray Paper End Detection	No paper	Paper remaining
5803 9	1st Tray Upper Limit Sensor	Not upper limit	Upper limit
5803 10	2nd Tray Upper Limit Sensor	Not upper limit	Upper limit
5803 11	Bypass Paper Width Detection	See table 3 following this table.	
5803 12	Bypass Paper End Detection	No paper	Paper remaining
5803 13	Bypass Paper Length Detection	See table 3 following this table.	
5803 14	1st Paper Feed Sensor	Paper detected	Paper not detected
5803 15	2nd Paper Feed Sensor	Paper detected	Paper not detected

5803 16	Exit Sensor	Paper detected	Paper not detected
5803 17	Tray Full Exit Sensor	Paper not full	Paper full
5803 18	Fusing Exit Sensor	Paper not detected	Paper detected
5803 19	Fusing Entrance Sensor	Paper detected	Paper not detected
5803 20	1st Feed Sensor	Paper detected	Paper not detected
5803 21	2nd Feed Sensor	Paper detected	Paper not detected
5803 22	Duplex Exit Sensor	Paper detected	Paper not detected
5803 23	Registration Sensor	Paper detected	Paper not detected
5803 24	Duplex Entrance Sensor	Paper detected	Paper not detected
5803 25	Junction Sensor	Paper detected	Paper not detected
5803 26	2nd Tray Set Detection	Set	Not set
5803 30	Toner End Sensor: Bk	Toner end	Toner remaining
5803 31	Toner End Sensor: M	Toner end	Toner remaining
5803 32	Toner End Sensor: C	Toner end	Toner remaining
5803 33	Toner End Sensor: Y	Toner end	Toner remaining
5803 34	Drum Phase Sensor: Bk	Actuator not detected	Actuator detected
5803 35	Drum Phase Sensor: M	Actuator not detected	Actuator detected
5803 36	Drum Phase Sensor: C	Actuator not detected	Actuator detected
5803 37	Drum Phase Sensor: Y	Actuator not detected	Actuator detected
5803 38	Interlock Release Detection 1	Front door open	Front door closed
5803 39	Interlock Release Detection 2	Front door open	Front door closed
5803 40	Right Door	Closed	Open
5803 41	Duplex Cover	Closed	Open

5803 42	Toner Collection Bottle Set	Set	Not set
5803 43	Toner Collection Full Sensor	Not full	Full
5803 46	ITB New Unit Detection	Not new	New
5803 50	Airflow Fan: Front: Lock	Normal	Lock
5803 51	Airflow Fan: Rear: Lock	Normal	Lock
5803 52	Fusing Exit Fan: Lock	Normal	Lock
5803 53	2nd Duct Fan: Lock	Normal	Lock
5803 54	3rd Duct Fan: Lock	Normal	Lock
5803 55	Paper Exit Fan:Lock	Normal	Lock
5803 56	Fusing Coil Fan: Lock	Normal	Lock
5803 57	IH Power Supply Cooling Fan: Lock	Normal	Lock
5803 60	ITB Contact Motor Position	Not contact	Contact
5803 61	Paper Transfer Contact Motor Position	Not contact	Contact
5803 62	Toner Relay Motor: Lock	Normal	Lock
5803 63	ITB Drive Motor: Lock	Normal	Lock
5803 64	K Drum/Development Drive Motor: Lock	Normal	Lock
5803 65	M Drum/Development Drive Motor: Lock	Normal	Lock
5803 66	C Drum/Development Drive Motor: Lock	Normal	Lock
5803 67	Y Drum/Development Drive Motor: Lock	Normal	Lock
5803 68	Fusing Exit Motor:Lock	Normal	Lock
5803 80	HVPS:TTS:SC Detection	SC detected	No SC
5803 81	HVPS:CB:SC Detection	SC detected	No SC
5803 82	HVPS:D:SC Detection	SC detected	No SC
5803 83	Fusing Destination Detection: DOM (Dom)	Set	Not set
5803 84	Fusing Destination Detection: NA	Set	Not set
5803 87	Fusing New Unit Detection	New	Not new

5803 90	Zero-cross Signal	-	-
5803 91	Fusing Rotation Sensor	Actuator not detected	Actuator detected
5803 92	Fusing Pressue Release Sensor	Not contact	Contact
5803 94	GAVD Open/Close Detection	Closed (LD5V ON)	Open (LD5V OFF)
5803 100	Keycard: Set	Set	Not set
5803 101	Mechanical Counter Bk: Set	Set	Not set
5803 102	Mechanical Counter FC: Set	Set	Not set
5803 103	Key Counter: Set	Set	Not set
5803 110	IOB Version	-	-
5803 200	Scanner HP Sensor	Not HP	HP
5803 201	Platen Cover Sensor	Open	Closed

**Table 1: Paper Height Sensor**

0: Deactivated, 1: Activated (actuator inside sensor)

Remaining paper	Paper height sensor 1	Paper height sensor 2
Full	0	0
Nearly full	1	0
Near end	1	1
Almost empty	0	1

**Table 2: Paper Size Switch (Tray 2)**

Switch 1 is used for tray set detection.

0: Pushed, 1: Not pushed

Models		Switch Location		
North America	Europe/Asia	4 (bit0)	3 (bit1)	2 (bit2)

11" x 17" SEF* <sup>1</sup> (A3 SEF)	A3 SEF* <sup>1</sup> (11" x 17" SEF)	0	0	1
8.5" x 14" SEF* <sup>2</sup> (B4 SEF)	B4 SEF* <sup>2</sup> (8.5" x 14" SEF)	0	0	0
A4 SEF	A4 SEF	1	1	0
8.5" x 11" SEF	8.5" x 11" SEF	1	1	1
B5 SEF	B5 SEF	0	1	1
11" x 8 1/2" LEF* <sup>3</sup> (A4 LEF)	A4 LEF* <sup>3</sup> (11" x 8 1/2" LEF)	1	0	0
10.5" x 7.25" LEF* <sup>4</sup> (B5 LEF)	B5 LEF* <sup>4</sup> (10.5" x 7.25" LEF)	0	1	0
A5 LEF	A5 LEF	1	0	1

\* 1: The machine detects either 11" x 17" SEF or A3 SEF, depending on the setting of SP 5-181-003.  
\* 2: The machine detects either 8.5" x 14" SEF or B4 SEF, depending on the setting of SP 5-181-004.  
\* 3: The machine detects either 11" x 8 1/2" LEF or A4 LEF, depending on the setting of SP 5-181-002.  
\* 4: The machine detects either B5 LEF or 10.5" x 7.25" LEF, depending on the setting of SP 5-181-005.

**Table 3: Paper Size (By-pass Table)**

0: ON, 1: OFF

By-pass Paper Size Sensor				Length Sensor	NA	EU/ASIA
bit3	Bit2	Bit1	Bit0			
1	1	1	1	1	HLT SEF	A6 SEF
0	1	1	1	1	HLT SEF	A6 SEF
0	0	1	1	1	HLT SEF	A5 SEF
1	0	1	1	1	HLT SEF	A5 SEF
1	0	0	1	0	LT/LG SEF* <sup>1</sup>	A4 SEF

By-pass Paper Size Sensor				Length Sensor	NA	EU/ASIA
bit3	Bit2	Bit1	Bit0			
1	0	0	1	1	LT/LG SEF* <sup>1</sup>	A5 LEF
1	1	0	1	0	LT/LG SEF* <sup>1</sup>	A4 SEF
1	1	0	1	1	LT/LG SEF* <sup>1</sup>	A5 LEF
1	1	0	0	0	DLT SEF	A3 SEF
1	1	0	0	1	LT LEF	A4 LEF
1	1	1	0	0	DLT SEF	A3 SEF
1	1	1	0	1	LT LEF	A4 LEF

\* 1: The paper size (LT or LG) can be selected with SP1-007-001.

### ARDF (D630)

6007	Description	Reading	
		0	1
6007 1	Original Length 1 (B5 Detection Sensor)	Paper not detected	Paper detected
6007 2	Original Length 2 (A4 Detection Sensor)	Paper not detected	Paper detected
6007 3	Original Length 3 (LG Detection Sensor)	Paper not detected	Paper detected
6007 4	Original Width 1	Paper not detected	Paper detected
6007 5	Original Width 2	Paper not detected	Paper detected
6007 6	Original Width 3	Paper not detected	Paper detected
6007 7	Original Width 4	Paper not detected	Paper detected
6007 8	Original Width 5	Paper not detected	Paper detected
6007 9	Original Detection	Paper not detected	Paper detected
6007 10	Separation Sensor	Paper not detected	Paper detected
6007 11	Skew Correction	Paper not detected	Paper detected

6007 12	Scan Entrance Sensor	Paper not detected	Paper detected
6007 13	Registration Sensor	Paper not detected	Paper detected
6007 14	Exit Sensor	Paper not detected	Paper detected
6007 15	Feed Cover Sensor	ADF cover close	ADF cover open
6007 16	Lift Up Sensor	ADF cover close	ADF cover open
6007 17	Inverter Sensor	Paper not detected	Paper detected
6007 18	Pick-Up Roller HP Sensor	Not HP	HP
6007 19	Original Set HP Sensor	Original not detected	Original detected
6007 23	Rear Edge Detection (Not used)	-	-

### 2000/3000-Sheet (Booklet) Finisher (D637, D636)

6140	Bit	Description	Reading	
			0	1
6140 1		Entrance Sensor	Paper not detected	Paper detected
6140 2		Proof Exit Sensor	Paper not detected	Paper detected
6140 3		Proof Full Detection Sensor	Not Full	Full
6140 4		Trailing Edge Detection: Shift	Paper not detected* 1	Paper detected* 1
6140 5		Staple Exit Sensor	Paper not detected	Paper detected
6140 6		Shift HP Sensor	Not HP	HP
6140 7		Shift Exit Sensor	Paper not detected	Paper detected
6140 8		Exit Guide Plate HP Sensor	Not HP	HP
6140 9		Paper Detection Sensor: Staple	Paper not detected	Paper detected
6140 10		Paper Detection Sensor: Shift	Paper not detected	Paper detected
6140 11		Paper Full Sensor: 2000-Sheet	Not Full	Full
6140 12		Oscillating Back Roller HP Sensor	Not HP	HP

6140 13	Jogger HP Sensor	Not HP	HP
6140 14	Exit Junction Gate HP Sensor	HP	Not HP
6140 15	Staple Tray Paper Sensor	Paper not detected	Paper detected
6140 16	Staple Moving HP Sensor	Not HP	HP
6140 17	Skew HP Sensor	Not HP	HP
6140 18	Limit SW	Not Limit	Limit
6140 19	DOOR SW	Closed	Open
6140 20	Stapler 1 Rotation	Not HP	HP
6140 21	Staple Detection	Staple not detected	Staple detected
6140 22	Staple Leading Edge Detection	Staple not detected	Staple detected
6140 23	Punch Moving HP Sensor	Not HP	HP
6140 24	Punch Registration HP Sensor	Not HP	HP
6140 25	Punch Registratioin Detection Sensor	Paper not detected	Paper detected
6140 26	Punch Chad Full Sensor	Not Full	Full
6140 27	Punch HP	Not HP	HP
6140 28	Punch Selection DIPSW 1	See *1	
6140 29	Punch Selection DIPSW 2	See *1	
6140 30	Stack Junction Gate Open/Closed HP Sensor	Not HP	HP
6140 31	Leading Edge Detection Sensor	Paper not detected	Paper detected
6140 32	Drive Roller HP Sensor	Not HP	HP
6140 33	Arrival Sensor	Paper not detected	Paper detected
6140 34	Rear Edge Fence HP Sensor	Not HP	HP
6140 35	Folder Cam HP Sensor	Not HP	HP
6140 36	Folder Plate HP Sensor	Not HP	HP
6140 37	Folder Pass Sensor	Paper not detected	Paper detected



6140 38	Saddle Full Sensor: Front	Paper not detected*2	Paper detected*2
6140 39	Saddle Full Sensor: Rear	Paper not detected*2	Paper detected*2
6140 40	Saddle Stitch Stapler 1 Rotation: Front	Not HP	HP
6140 41	Saddle Stitch Detection: Front	Staple not detected	Staple detected
6140 42	Saddle Stitch Leading Edge Detection: Front	Staple not detected	Staple detected
6140 43	Saddle Stitch Stapler 1 Rotation: Rear	Not HP	HP
6140 44	Saddle Stitch Detection: Rear	Staple not detected	Staple detected
6140 45	Saddle Stitch Leading Edge Detection: Rear	Staple not detected	Staple detected
6140 46	Full Sensor: 3000-Sheet	Not Full	Full

\* 1: Combination of DIP SW 1 and SW 2

DIP SW 1	DIP SW 2	Punch Type
0	0	Japan
1	0	Europe
0	1	North America
1	1	North Europe

\* 2: Please refer to "Lower Tray (D637 Only)" in the Service Manual for the "2000/3000 (Booklet) Finisher".

### 1000-Sheet Finisher (D588)

6139	Description	Reading	
		0	1
6139 1	Entrance Sensor	Paper detected	Paper not detected

6139 2	Shift Exit Sensor (Lower Tray Exit Sensor)	Paper not detected	Paper detected
6139 3	Staple Entrance Sensor (Stapler Tray Entrance Sensor)	Paper detected	Paper not detected
6139 4	Staple Moving HP Sensor (Stapler HP Sensor)	Not home position	Home position
6139 5	Jogger HP Sensor (Jogger Fence HP Sensor)	Not home position	Home position
6139 6	Stack Feed-out Belt HP Sensor	Home position	Not home position
6139 7	Staple Tray Paper Sensor	Paper not detected	Paper detected
6139 8	Staple Rotation Sensor (Staple Rotation HP Sensor)	Not home position	Home position
6139 9	Staple Sensor	Staple detected	Staple not detected
6139 10	Staple READY Detection	Staple detected	Staple not detected
6139 11	Exit Guide Plate HP (Exit Guide Plate HP Sensor)	Not home position	Home position
6139 12	Shift HP Sensor	Not home position	Home position
6139 13	Paper Sensor (Stack Height Sensor)	Output tray not detected	Output tray detected
6139 14	Tray Lower Sensor (Lower Tray Lower Limit Sensor)	Lower limit	Not lower limit
6139 15	Proof Full Sensor (Paper Limit Sensor)	Not full	Full

### Bridge Unit (D634)/ Side Tray (D635)

6150	Description	Reading	
		0	1
6150 1	Bridge/Left: Exit Sensor	Paper detected	Paper not detected
6150 2	Bridge/Left: Feed Sensor	Paper detected	Paper not detected
6150 3	Bridge/Left: Set Detection	Set	Not set
6150 4	Bridge/Left: Exit Cover Detection	Closed	Open
6150 5	Bridge/Left: Feed Cover Detection	Closed	Open

### Internal Shift Tray (D633)

6152	Description	Reading	
		0	1
6152 2	Shift: Position Sensor	Tray position: Front	Tray position: Rear

### 1 Bin Tray (D632)

6154	Description	Reading	
		0	1
6154 1	1 bin: Set Detection	Set	Not set
6154 2	1 bin: Paper Sensor	Paper detected	Paper not detected

### Two-Tray PFU (D580)/ LCIT 2000 (D581)/ LCIT 1200 (D631)

6160	Description	Reading	
		0	1
6160 1	Bank: Tray3: Feed Sensor	Paper not detected	Paper detected
6160 2	Bank: Tray4: Feed Sensor	Paper not detected	Paper detected

6160 3	Bank: Tray5: Feed Sensor	Paper not detected	Paper detected
6160 4	Bank: Tray3: Relay Sensor	Paper not detected	Paper detected
6160 5	Bank: Tray4: Relay Sensor	Paper not detected	Paper detected
6160 6	Bank: Tray5: Relay Sensor	Paper not detected	Paper detected
6160 7	Bank: Feed Cover Detection	Closed	Open
6160 11	Bank: Palau: Paper Supply Switch	Closed	Open
6160 12	Bank: Palau: Slide Switch	Closed	Open

## Output Check Table

5

### Copier

5804	Display	Description
5804 3	Drum/Dev Motor: K: HighSpeed	Drum/Development Drive Motor-K: High Speed
5804 4	Drum/Dev Motor: K: MiddleSpeed	Drum/Development Drive Motor-K: Middle Speed
5804 5	Drum/Dev Motor: K: LowSpeed	Drum/Development Drive Motor-M: Low Speed
5804 10	Drum/Dev Motor: M: HighSpeed	Drum/Development Drive Motor- C: High Speed
5804 11	Drum/Dev Motor: M: MiddleSpeed	Drum/Development Drive Motor-Y: Middle Speed
5804 12	Drum/Dev Motor: M: LowSpeed	Drum/Development Drive Motor-Y: Low Speed
5804 17	Drum/Dev Motor: C: HighSpeed	Drum/Development Drive Motor- C: High Speed
5804 18	Drum/Dev Motor: C: MiddleSpeed	Drum/Development Drive Motor-Y: Middle Speed
5804 19	Drum/Dev Motor: C: LowSpeed	Drum/Development Drive Motor-Y: Low Speed

5804 24	Drum/Dev Motor: Y: HighSpeed	Drum/Development Drive Motor- C: High Speed
5804 25	Drum/Dev Motor: Y: MiddleSpeed	Drum/Development Drive Motor-Y: Middle Speed
5804 26	Drum/Dev Motor: Y: LowSpeed	Drum/Development Drive Motor-Y: Low Speed
5804 31	-	See the last of this table.
5804 32	-	See the last of this table.
5804 33	-	See the last of this table.
5804 35	-	See the last of this table.
5804 37	Toner Relay Motor	Toner Transport Motor
5804 40	Image Transfer Motor: HighSpeed	ITB Drive Motor: High Speed
5804 41	Image Transfer Motor: MiddleSpeed	ITB Drive Motor: Middle Speed
5804 42	Image Transfer Motor: LowSpeed	ITB Drive Motor: Low Speed
5804 50	Feed Motor: HighSpeed	Paper Feed Motor: High Speed
5804 51	Feed Motor: IncreaseSpeed	Paper Feed Motor: Increase Speed
5804 52	Feed Motor: MiddleSpeed	Paper Feed Motor: Middle Speed
5804 53	Feed Motor: MiddleIncreaseSpeed	Paper Feed Motor: Middle Increase Speed
5804 54	Feed Motor: LowSpeed	Paper Feed Motor: Low Speed
5804 55	Feed Motor: LowInceraseSpeed	Paper Feed Motor: Low Incerase Speed
5804 60	Regist Motor: HighSpeed	Registration Motor: High Speed
5804 61	Regist Motor: MiddleSpeed	Registration Motor: Middle Speed
5804 62	Regist Motor: LowSpeed	Registration Motor: Low Speed
5804 67	Duplex Feed M: CW: HighSpeed	Duplex/By-pass Motor: CW: High Speed
5804 68	Duplex Feed M: CW: MiddleSpeed	Duplex/By-pass Motor: CW: Middle Speed
5804 69	Duplex Feed Motor: CW: LowSpeed	Duplex/By-pass Motor: CW: Low Speed
5804 74	Duplex Feed M: CCW: HighSpeed	Duplex/By-pass Motor: CCW: High Speed

5804 75	Duplex Feed M:CCW:MiddleSpeed	Duplex/By-pass Motor: CCW: Middle Speed
5804 76	Duplex Feed Motor: CCW: LowSpeed	Duplex/By-pass Motor: CCW: Low Speed
5804 81	Duplex Reverse M:CW:HighSpeed	Duplex Inverter Motor: CW: High Speed
5804 82	Duplex Reverse M:CW:MiddleSpeed	Duplex Inverter Motor: CW: Middle Speed
5804 83	Duplex Reverse Motor: CW: LowSpeed	Duplex Inverter Motor: CW: Low Speed
5804 88	Duplex Reverse M:CCW:HighSpeed	Duplex Inverter Motor: CCW: High Speed
5804 89	Duplex Reverse M:CCW:MiddleSpeed	Duplex Inverter Motor: CCW: Middle Speed
5804 90	Duplex Reverse Motor: CCW: LowSpeed	Duplex Inverter Motor: CCW: Low Speed
5804 95	ITB Contact Motor	Image Transfer Belt Contact Motor
5804 96	Paper Transfer Contact Motor	Paper Transfer Contact Motor
5804 97	1st Tray Lift Motor: Up	Tray Lift Motor 1: Lift Up
5804 98	1st Tray Lift Motor: Down	Tray Lift Motor 1: Lift Down
5804 99	2nd Tray Lift Motor: Up	Tray Lift Motor 2: Lift Up
5804 100	2nd Tray Lift Motor: Down	Tray Lift Motor 2: Lift Down
5804 102	Fusing Pressue Release Motor	Pressure Roller Contact Motor
5804 104	Polygon Moter: LL	Polygon Motor: LL
5804 105	Polygon Moter: L	Polygon Motor: L
5804 107	Polygon Moter: HH	Polygon Motor: HH
5804 110	Air Flow Fan: Front	Ventilation Fan - Front
5804 111	Air Flow Fan:Rear	Ventilation Fan - Rear
5804 112	Fusing Fan:H	Fusing Fan: High Speed

5804 113	Fusing Fan:L	Fusing Fan: Low Speed
5804 114	PSU Cooling Fan	PSU Fan 1: High Speed
5804 115	2nd Duct Fan: H	Duct Fan 2: High Speed
5804 117	3rd Duct Fan: H	Duct Fan 3: High Speed
5804 119	Paper Exit Fan:H	Paper Exit Fan: High Speed
5804 121	Fusing Coil Fan	IH Coil Fan
5804 122	IH Power Supply Cooling Fan	IH Inverter Fan
5804 126	Development Clutch: Bk	Development Clutch-K
5804 127	Development Clutch: M	Development Clutch-M
5804 128	Development Clutch: C	Development Clutch-C
5804 129	Development Clutch: Y	Development Clutch-Y
5804 130	Toner Bottle Clutch: Bk	Toner Bottle Clutch-K
5804 131	Toner Bottle Clutch: M	Toner Bottle Clutch-M
5804 132	Toner Bottle Clutch: C	Toner Bottle Clutch-C
5804 133	Toner Bottle Clutch:Y	Toner Bottle Clutch-Y
5804 134	Toner Supply Pump: Bk	Toner Supply Clutch: Bk
5804 135	Toner Supply Pump: M	Toner Supply Clutch: M
5804 136	Toner Supply Pump: C	Toner Supply Clutch: C
5804 137	Toner Supply Pump: Y	Toner Supply Clutch: Y
5804 138	1st Paper Feed Clutch	Paper Feed Clutch 1
5804 139	2nd Paper Feed Clutch	Paper Feed Clutch 2
5804 140	Bypass Feed Clutch	By-pass Feed Clutch
5804 141	Bypass Pickup Solenoid	Bypass Pickup Solenoid
5804 143	TD Sensor Shutter Solenoid	ID Sensor Shutter Solenoid
5804 144	Exit Junction Solenoid	Junction Gate 1 Solenoid
5804 145	1st Feed Pickup Solenoid	1st Pickup Solenoid

5804 146	2st Feed Pickup Solenoid	2nd Pickup Solenoid
5804 161	PCL: Bk	
5804 162	PCL: M	
5804 163	PCL: C	
5804 164	PCL: Y	
5804 166	HST Sensor:Bk	TD Sensor:Bk
5804 167	HST Sensor: M	TD Sensor: M
5804 168	HST Sensor: C	TD Sensor: C
5804 169	HST Sensor: Y	TD Sensor: Y
5804 170	Toner End Sensor: Bk	Toner End Sensor: Bk
5804 171	Toner End Sensor: M	Toner End Sensor: M
5804 172	Toner End Sensor: C	Toner End Sensor: C
5804 173	Toner End Sensor: Y	Toner End Sensor: Y
5804 174	TM Sensor: Front	ID Sensor: Front
5804 175	TM Sensor: Center	ID Sensor: Center
5804 176	TM Sensor: Rear	ID Sensor: Rear
5804 177	TM Sensor: M	ID Sensor: M
5804 178	TM Sensor: C	ID Sensor: C
5804 179	TM Sensor: Y	ID Sensor: Y
5804 181	PP:Charge AC:Y:HighSpeed	-
5804 182	PP:Charge AC:Y:MiddleSpeed	-
5804 183	PP:Charge AC:Y:LowSpeed	-
5804 186	PP:Development:K	-
5804 187	PP:Development:M	-
5804 188	PP:Development:C	-
5804 189	PP:Development:Y	-



5804 190	PP:Separation	-
5804 192	RFID ON/OFF: K	-
5804 193	RFID ON/OFF: Y	-
5804 194	RFID ON/OFF: C	-
5804 195	RFID ON/OFF: M	-
5804 196	RFID COM ON:K	-
5804 197	RFID COM ON: Y	-
5804 198	RFID COM ON: C	-
5804 199	RFID COM ON: M	-
5804 202	Scanner Lamp	-
5804 216	LD1: K	-
5804 217	LD2: K	-
5804 218	LD1: M	-
5804 219	LD2: M	-
5804 220	LD1: C	-
5804 221	LD2: C	-
5804 222	LD1: Y	-
5804 223	LD2: Y	-
5804 224	PP:ITB:K	PP: Image Transfer Roller: K
5804 225	PP:ITB:M	PP: Image Transfer Roller: M
5804 226	PP:ITB:C	PP: Image Transfer Roller: C
5804 227	PP:ITB:Y	PP: Image Transfer Roller: Y
5804 228	PP:PTR:+	PP: Paper Transfer Roller:+
5804 229	PP:PTR:-	PP: Paper Transfer Roller:-
5804 231	HVPS: ChargeDC: K	-
5804 232	HVPS: ChargeDC: M	-

5804 233	HVPS: ChargeDC: C	-
5804 234	HVPS: ChargeDC: Y	-
5804 237	PP:Charge AC:K:HighSpeed	-
5804 238	PP:Charge AC:K:MiddleSpeed	-
5804 239	HVPS: ChargeAC: K: LowSpeed	-
5804 244	PP:Charge AC:M:HighSpeed	-
5804 245	PP:Charge AC:M:MiddleSpeed	-
5804 246	HVPS: ChargeAC: M: LowSpeed	-
5804 251	PP:Charge AC:C:HighSpeed	-
5804 252	PP:Charge AC:C:MiddleSpeed	-
5804 253	HVPS: ChargeAC: C: LowSpeed	-

5804 -31 to -35	Fusing Exit Motor	
	<b>Note:</b> These SP modes will be moved to Super SP mode in the near future.	
	<b>Important:</b> Use the procedure below to do the output checks for the fusing exit motor. If you do not follow this procedure, a kink will form in the fusing belt sleeve, and the fusing sleeve belt unit will need to be replaced.	
	<ol style="list-style-type: none"> <li>Do one of the following: <ul style="list-style-type: none"> <li>Open the right cover of the paper bank</li> <li>Remove one of the toner bottles</li> <li>Pull out the waste toner bottle half-way</li> <li>Remove the fusing unit</li> </ul> </li> <li>Enter SP mode.</li> <li>Do the following out output checks: <ul style="list-style-type: none"> <li>SP5-804-031 (Fusing exit motor: High speed)</li> <li>SP5-804-032 (Fusing exit motor: Middle speed)</li> <li>SP5-804-033 (Fusing exit motor: Low speed)</li> <li>SP5-804-035 (Fusing exit motor: Very low speed)</li> </ul> </li> <li><b>Without exiting SP mode</b>, turn the main power switch off and then on again.</li> </ol>	
	<b>Important:</b> If you exit SP mode before you turn the main power switch off, the fusing exit motor will stay off when the machine warms up. Heat will be concentrated in one area of the fusing belt sleeve and cause a kink to form. If this happens, you will need to replace the fusing sleeve belt unit.	
5. Do the reverse of what you did in step 1 (for example, reattach the fusing unit).		
5804 31	Fusing Exit Motor: HighSpeed	Fusing/Paper Exit Motor: High Speed
5804 32	Fusing Exit Motor: MiddleSpeed	Fusing/Paper Exit Motor: Middle Speed
5804 33	Fusing Exit Motor: LowSpeed	Fusing/Paper Exit Motor: Low Speed
5804 35	Fusing Exit Motor: LLowSpeed	Fusing/Paper Exit Motor: LLow Speed

## ARDF (D630)

6008	Display	Description
6008 1	Pick-Up Motor Forward	
6008 2	Pick-Up Motor Reverse	

6008 3	Feed Motor Forward	Feed Motor-Forward rotation
6008 4	Feed Motor Reverse	Feed Motor-Reverse rotation
6008 5	Relay Motor Forward	Transport Motor- Forward rotation
6008 7	Inverter Motor Reverse	Transport Motor- Forward rotation
6008 8	Inverter Motor Reverse	-
6008 11	Inverter Solenoid	-
6008 12	Stamp	Stamp Solenoid
6008 13	Fan Motor	-
6008 14	Feed Clutch	-
6008 15	Feed Solenoid	-

### 1000-Sheet Finisher (D588)

6144	Display	Description
6144 1	Relay Up Motor	Upper Transport Motor
6144 2	Relay Down Motor	Lower Transport Motor
6144 3	Exit Motor	-
6144 4	Proof Junction Gate SOL	Tray Junction Gate Solenoid
6144 5	Tray Up Motor	Lower Tray Lift Motor
6144 6	Jogger Motor	Jogger Fence Motor
6144 7	Staple Moving Motor	Stapler Motor
6144 8	Staple Motor	Stapler Hammer
6144 9	Staple Junction Gate SOL	Stapler Junction Gate Solenoid
6144 10	Positioning Roller Solenoid	Positioning Roller Solenoid
6144 11	Stack Feed-out Motor	-
6144 12	Shift Motor	-

6144 13	Exit Guide Plate Motor	-
---------	------------------------	---

### 2000/3000-Sheet (Booklet) Finisher (D637/D636)

6145	Display	Description
6145 1	Entrance Motor	Finisher Entrance Motor
6145 2	Upper Feed Motor	Upper Transport Motor
6145 3	Lower Feed Motor	Lower Transport Motor
6145 4	Exit Motor	Upper/Proof Tray Exit Motor
6145 5	Knock Roller Motor	Clamp Roller Retraction Motor
6145 6	Shift Motor	Shift Roller Motor
6145 7	Exit Guide Plate Open/Close Motor	Exit Guide Plate Motor
6145 8	Tray Lift Motor	Upper Tray Lift Motor
6145 9	Oscillating Back Roller Motor	Stacking Sponge Roller Motor
6145 10	Jogger Motor	Jogger Fence Motor
6145 11	Stack Feed-out Motor	Feed Out Belt Motor
6145 12	Staple Moving Motor	Corner Stapler Movement Motor
6145 13	Staple Skew Motor	Corner Stapler Rotation Motor
6145 14	Staple Motor	Corner Stapler EH530
6145 15	Upper Junction Gate Solenoid	Proof Junction Gate Solenoid
6145 16	Lower Junction Gate Solenoid	Stapling Tray Junction Gate Solenoid
6145 17	Knock Solenoid	Stapling Edge Pressure Plate Solenoid
6145 18	Trailing Edge Hold Solenoid	Positioning Roller Solenoid
6145 19	Saddle Stitch Hold Solonoid	Booklet Pressure Roller Solenoid
6145 20	Stack Junction Gate Open/Close Motor	Stack Junction Gate Motor
6145 21	Trailing Edge Fence Moving Motor	Fold Unit Bottom Fence Lift Motor

6145 22	Saddle Stitch Staple Motor: Front	Booklet Stapler EH185R: Front
6145 23	Saddle Stitch Staple Motor: Rear	Booklet Stapler EH185R: Rear
6145 24	Folder Plate Motor	Fold Plate Motor
6145 25	Folder Roller Motor	Fold Roller Motor
6145 26	Drive Roller Oscillating Motor	Positioning Roller Motor
6145 27	Punch Motor	Punch Drive Motor
6145 28	Punch Moving Motor	Punch Movement Motor
6145 29	Punch Registration Detection Motor	Paper Position Sensor Slide Motor

## 5

**Bridge Unit (D386)/ Side Tray (D634)**

6151	Display	Description
6151 1	Bridge/Left: Feed Motor: Current Selection	Bridge: Feed Motor: Current switching signal
6151 2	Bridge/Left: Feed Motor:Reset	Bridge: Feed Motor:Reset
6151 3	Bridge/Left: Feed Motor:Enable	Bridge: Feed Motor:Enable
6151 6	Bridge/Left: Feed Motor: High Speed	Bridge: Feed Motor: High Speed
6151 7	Bridge/Left: Feed Motor: Middle Speed	Bridge: Feed Motor: Middle Speed
6151 8	Bridge/Left: Feed Motor: Low Speed	Bridge: Feed Motor: Low Speed
6151 11	Bridge/Left: Junction Solenoid	Bridge: Junction Solenoid

**Shift Tray (D633)**

6153	Display	Description
6153 1	Shift Tray: Motor	-

## 1 Bin Tray (D632)

6155	Display	Description
6155 1	1 bin: Junction Solenoid	-

## Two-Tray PFU (D580)/ LCIT 2000 (D581)/ LCIT 1200 (D531)

6161	Display	Description
6161 5	Bank1: Feed Motor: HighSpeed	Feed Motor:High Speed (D537/D538)
6161 6	Bank1: Feed Motor: IncreaseSpeed	Feed Motor: Increase Speed (D537/D538)
6161 8	Bank1: Feed Motor: MiddleSpeed	Feed Motor: Middle Speed (D537/D538)
6161 9	Bank1: Feed Motor: LowSpeed	Feed Motor: Low Speed (D537/D538)
6161 10	Bank1: Feed Motor: LowIncreaseSpeed	Feed Motor:Low Increase Speed (D537/ D538)
6161 15	Bank2: Feed Motor:HighSpeed	Feed Motor:High Speed (D537)
6161 16	Bank2: Feed Motor: IncreaseSpeed	Feed Motor: Increase Speed (D537)
6161 18	Bank2: Feed Motor: MiddleSpeed	Feed Motor: Middle Speed (D537)
6161 19	Bank2: Feed Motor: LowSpeed	Feed Motor: Low Speed (D537)
6161 20	Bank2: Feed Motor: LowIncreaseSpeed	Feed Motor: Low Increase Speed (D537)
6161 30	Bank:Tray3: PU Solenoid	Pick-up Solenoid (D537/ D538)
6161 31	Bank:Tray4: PU Solenoid	Pick-up Solenoid (D537/ D539)
6161 32	Bank:Tray5: PU Solenoid	Pick-up Solenoid (D539)
6161 35	Bank:Tray3: Feed Clutch	Pick-up Solenoid (D537/ D538)
6161 36	Bank:Tray4: Feed Clutch	Pick-up Solenoid (D537/ D539)

6161 37	Bank:Tray5: Feed Clutch	Pick-up Solenoid (D539)
---------	-------------------------	-------------------------

## Printer Service Mode

### SP1-XXX (Service Mode)

1001	Bit Switch			
001	Bit Switch 1		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	<b>No I/O Timeout</b>	0: Disable	1: Enable
		Enable: The MFP I/O Timeout setting will have no effect. I/O Timeouts will never occur.		
	bit 4	<b>SD Card Save Mode</b>	0: Disable	1: Enable
		Enable: Print jobs will be saved to an SD Card in the GW SD slot (🖨️ "Card Save Function" in "System Maintenance" chapter of the Field Service Manual).		
	bit 5	DFU	-	-
bit 6	DFU	-	-	
bit 7	<b>[RPCS,PCL]: Printable area frame border</b>	0: Disable	1: Enable	
	Enable: The machine prints all RPCS and PCL jobs with a border on the edges of the printable area.			
1001	Bit Switch			



002	Bit Switch 2		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	<b>Applying a collation Type</b>	Shift Collate	Normal Collate
	<p>A collation type (shift or normal) will be applied to all jobs that do not already have a 'Collate Type' configured.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>If #5-0 is enabled, this Bit Switch has no effect.</li> </ul>			
	bit 3	<b>[PCL5e/c,PS]: PDL Auto Switching</b>	0: Enable	1: Disable
	<p>Disable: The MFPs ability to change the PDL processor mid-job.</p> <p>Some host systems submit jobs that contain both PS and PCL5e/c. If Auto PDL switching is disabled, these jobs will not be printed properly.</p>			
	bit 4	DFU	-	-
	bit 5	DFU	-	-
bit 6	DFU	-	-	
bit 7	DFU	-	-	
1001	Bit Switch			

003	Bit Switch 3		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	<b>[PCL5e/c]: Legacy HP compatibility</b>	0: Disable	1: Enable
		Enable: Uses the same left margin as older HP models such as HP4000/HP8000. In other words, the left margin defined in the job (usually "<ESC>*r0A") will be changed to "<ESC>*r1A"		
	bit 3	DFU	-	-
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
	bit 7	DFU	-	-

<b>1001</b>	<b>Bit Switch</b>			
004	Bit Switch 4 DFU		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	<b>IPDS print-side reversal</b>	0: Disable	1: Enable
		If enabled, the simplex pages of IPDS jobs will be printed on the front side because of printing on the back side of the page. This might reduce printing speed.		
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
bit 7	DFU	-	-	

<b>1001</b>	<b>Bit Switch</b>		
005	Bit Switch 5	0	1

		<b>Show "Collate Type", "Staple Type" and "Punch Type" buttons on the operation panel.</b>	Disable	Enable
	bit 0	<p>If enabled, users will be able to configure a Collate Type, Staple Type, and Punch Type from the operation panel. The available types will depend on the device and configured options.</p> <p>After enabling the function, the settings will appear under: "User Tools &gt; Printer Features &gt; System"</p>		
	bit 1	<b>Multiple copies if a paper size or type mismatch occurs</b>	0: Disable (Single copy)	1: Enable (Multiple copy)
		If a paper size or type mismatch occurs during the printing of multiple copies, only a single copy is output by default. Using this BitSw, the device can be configured to print all copies even if a paper mismatch occurs.		
	bit 2	DFU	-	-
	bit 3	<b>[PS] PS Criteria</b>	Pattern3	Pattern1
		<p>Change the number of PS criterion used by the PS interpreter to determine whether a job is PS data or not.</p> <p>Pattern3: includes most PS commands.</p> <p>Pattern1: A small number of PS tags and headers</p>		
	bit 4	<b>Increase max number of the stored jobs to 1000 jobs.</b>	Disable (100)	Enable (1000)
		Enable: Changes the maximum number of jobs that can be stored on the HDD via Job Type settings to 1000. The default is 100.		
	bit 5	<b>Face-up output</b>	Disable	Enable
		Enable: All print jobs will be output face-up in the destination tray.		
	bit 6	<b>Method for determining the image rotation for the edge to bind on.</b>	0: Disable	1: Enable
		<p>If enabled, the image rotation will be performed as they were in the specifications of older models for the binding of pages of mixed orientation jobs.</p> <p>The old models are below:</p> <ul style="list-style-type: none"> <li>- PCL: Pre-04A models</li> <li>- PS/PDF/RPCS:Pre-05S models</li> </ul>		

	bit 7	Letterhead mode printing	0: Disable	1: Enable (Duplex)
--	-------	--------------------------	------------	--------------------

1001	Bit Switch			
006	Bit Switch 6	DFU	-	-

1001	Bit Switch			
007	Bit Switch 7		0	1
	bit 0	<b>Print path</b>	0: Disable	1: Enable
		If enabled, simplex pages (in mixed simplex/duplex PS/PCL5 jobs only) and the last page of an odd paged duplex job (PS, PCL5, PCL6), are always routed through the duplex unit. Not having to switch paper paths increases the print speed slightly.		
	bit 1 to 7	DFU	-	-

1001	Bit Switch				
008	Bit Switch 8		0	1	
	bit 0	DFU	-	-	
	bit 1	DFU	-	-	
	bit 2	DFU	-	-	
	bit 3	<b>[PCL,PS]: Allow BW jobs to print without requiring User Code</b>		Disable	Enable
		Enable: BW jobs submitted without a user code will be printed even if usercode authentication is enabled.			
			<b>Note</b>		
			<ul style="list-style-type: none"> <li>Color jobs will not be printed without a valid user code.</li> </ul>		
	bit 4	DFU	-	-	
bit 5	DFU	-	-		
bit 6	DFU	-	-		
bit 7	DFU	-	-		

1001	Bit Switch			
005	Bit Switch 9	0	1	
	bit 0	<b>PDL Auto Detection timeout of jobs submitted via USB or Parallel Port (IEEE 1284).</b>	"Disabled (Immediately)"	"Enabled (10 seconds)"
		To be used if PDL auto-detection fails. A failure of PDL autodetection doesn't necessarily mean that the job can't be printed. This bit switch tells the device whether to time-out immediately (default) upon failure or to wait 10 seconds.		
	bit 1	DFU	-	-
	bit 2	<b>Job Cancel</b>	Disabled (Not cancelled)	Enabled (Cancelled)
		If this bit switch, all jobs will be cancelled after a jam occurs. <b>Note:</b> If this bitsw is enabled, printing under the following conditions might result in problems: - Job submission via USB or Parallel Port - Spool printing (WIM > Configuration > Device Settings > System)		
	bit 3	<b>PCL/PS bypass tray paper rotation (SEF/LEF)</b>	0: Disable	1: Enable
		This bitsw causes the device to revert to the behavior of previous generations. It only takes effect if "Bypass Tray Setting Priority" = "Driver/Command". Previous spec (bitsw=1): If a standard sized paper mismatch occurred in the bypass tray, the MFP always prompted for SEF paper. If this bitsw=0 (default) then in the event of a standard sized paper mismatch, the MFP will always prompt for paper of the rotation (SEF/LEF) determined by the MFP bypass tray paper setting or by the bypass tray sensor.		
	Bit 4 to 7	DFU	-	-

1003	[Clear Setting]
1003 1	Initialize Printer System
	Initializes settings in the "System" menu of the user mode.
1003 3	Delete Program

1004	[Print Summary]
1004 1	Print Summary
	Prints the service summary sheet (a summary of all the controller settings).

1005	[Display Version]
1005 1	Disp. Version
	Displays the version of the controller firmware.

1006	[Sample/Locked Print]	*CTL	0: Linked, 1: On
1006 1	Enables and disables the document server. When you select "0," the document server is enabled or disabled in accordance with Copy Service Mode SP5-967. When you select "1," the document server is enabled regardless of Copy Service Mode SP5-967.		

1101	[Data Recall]		
	Recalls a set of gamma settings. This can be either a) the factory setting, b) the previous setting, or c) the current setting.		
1101 1	Factory	*CTL	
1101 2	Previous		
1101 3	Current		
1101 4	ACC		

1102	[Resolution Setting]
	Selects the printing mode (resolution) for the printer gamma adjustment.
1102 1	<b>2400x600 Photo</b> , 1800x600 Photo, 600 x 600 Photo, 2400x600 Text, 1800x600, Text, 600x600 Text

1103	[Test Page]
	Prints the test page to check the color balance before and after the gamma adjustment.
1103 1	Color Gray Scale
1103 2	Color Pattern

1104	[Gamma Adjustment]		
	Adjusts the printer gamma for the mode selected in the "Mode Selection" menu.		
1104 1	Black: Highlight	*CTL	[0 to 30 / 15 / 1/step ]
1104 2	Black: Shadow		
1104 3	Black: Middle		
1104 4	Black: IDmax		
1104 21	Cyan: Highlight	*CTL	[0 to 30 / 15 / 1/step ]
1104 22	Cyan: Shadow		
1104 23	Cyan: Middle		
1104 24	Cyan: IDmax		
1104 41	Magenta: Highlight	*CTL	[0 to 30 / 15 / 1/step ]
1104 42	Magenta: Shadow		
1104 43	Magenta: Middle		
1104 44	Magenta: IDmax		
1104 61	Yellow: Highlight	*CTL	[0 to 30 / 15 / 1/step ]
1104 62	Yellow: Shadow		
1104 63	Yellow: Middle		
1104 64	Yellow: IDmax		

1105	[Save Tone Control Value]		
	Stores the print gamma adjusted with the "Gamma Adj." menu item as the current setting. Before the machine stores the new "current setting", it moves the data currently stored as the "current setting" to the "previous setting" memory storage location.		
1105 1	Save Tone Control Value		

1106	[Toner Limit]		
	Adjusts the maximum toner amount for image development.		

1106 1	Toner Limit Value	*CTL	[100 to 400 / <b>260</b> / 1 %/step ]
--------	-------------------	------	---------------------------------------

## Scanner SP Mode

### SP1-xxx (System and Others)

1004	[Compression Type]		
	Selects the compression type for binary picture processing.		
1004 1	Compression Type	*CTL	[1 to 3 / <b>1</b> / 1/step ] 1: MH, 2: MR, 3: MMR

1005	[Erase Margin(Remote scan)]		
	Creates an erase margin for all edges of the scanned image. If the machine has scanned the edge of the original, create a margin. This SP is activated only when the machine uses TWAIN scanning.		
1005 1	Range from 0 to 5 mm	*CTL	[0 to 5 / <b>0</b> / 1 mm/step ]

1009	[Remote scan disable]	*CTL	[0 or 1 / <b>0</b> / - ] 0: enable, 1: disable
1009 1	Enable or disable remote scan.		

1010	[Non Display Clear Light PDF]	*CTL	[0 or 1 / <b>0</b> / - ] 0: Display, 1: No display
1010 1	Display or Nondisplay remote scan.		

### SP2-XXX (Scanning-image quality)

2021	[Compression Level (Gray-scale)]		
	Selects the compression ratio for grayscale processing mode (JPEG) for the three settings that can be selected at the operation panel.		



2021 1	Comp1:5-95	*CTL	[5 to 95 / <b>20</b> / 1 /step ]
2021 2	Comp2:5-95		[5 to 95 / <b>40</b> / 1 /step ]
2021 3	Comp3:5-95		[5 to 95 / <b>65</b> / 1 /step ]
2021 4	Comp4:5-95		[5 to 95 / <b>80</b> / 1 /step ]
2021 5	Comp5:5-95		[5 to 95 / <b>95</b> / 1 /step ]

2024	[Compression ratio of ClearLight PDF]		
	Selects the compression ratio for clearlight PDF for the two settings that can be selected at the operation panel.		
2024 1	Compression Ratio (Normal image)	*CTL	[5 to 95 / <b>25</b> / 1 /step ]
2024 2	Compression Ratio (High)		[5 to 95 / <b>20</b> / 1 /step ]

## Firmware Update

To update the firmware for this machine, you must have the new version of the firmware downloaded onto an SD (Secure Digital) Card. The SD Card is inserted into SD Card Slot 2 on the left rear side of the controller box.

### Type of Firmware

There are several types of firmware as shown below.

Type of firmware	Function	Location of firmware	Message shown
System/Copy	Operating system	Controller Board	System/Copy
Engine		BCU	Engine
Lcdc		LCDC	Lcdc
NetworkSupport		Controller Board	
Language 1		LCDC	Language 1
Language 2		LCDC	Language 2
RPCS NOTE		Controller Board	RPCS
PCL (PCLXL)		Controller Board	PCL (PCLXL)
MediaPrint:JPEG/TIFF		Controller Board	MediaPrint:JPEG/TIFF
FONT		Controller Board	FONT
FONT1		Controller Board	FONT1
NetworkDocBox		Controller	NetworkDocBox
Printer		Controller	Printer
Scanner		Controller	Scanner
Websupport		Controller	Websupport
WebUapl		Controller	WebUapl

**Note**

- The RCPS firmware is required for the XPS driver even though the RPCS driver is not used for this model.

---

## Before You Begin

---

An SD card is a precision device. Always observe the following precautions when you handle SD cards:

- Always switch the machine off before you insert an SD card. Never insert the SD card into the slot with the power on.
- Do not remove the SD card from the service slot after the power has been switched on.
- Never switch the machine off while the firmware is downloading from the SD card.
- Keep SD cards in a safe location where they are not exposed to high temperature, high humidity, or exposure to direct sunlight.
- Always handle SD cards with care. Do not bend or scratch them. Do not let the SD card get exposed to shock or vibration.
- Make sure that the write protection of an SD card is unlocked when you download an application to it. If not, downloading fails and a download error (e.g. Error Code 44) occurs during a firmware upgrade.

Keep the following points in mind when you use the firmware update software:

- "Upload" means to send data from the machine to the SD card. "Download" means to send data from the SD card to the machine.
- To select an item on the LCD, touch the appropriate button on the soft touch-screen of the LCD, or, press the appropriate number key on the 10-key pad of the operation panel. For example, when "Exit (0)" shows on the screen you can touch the Exit button on the screen, or, press the "0" button on the operation panel of the copier.
- Make sure that the machine is disconnected from the network to prevent a print job for arriving while the firmware update is in progress before you start the firmware update procedure.

---

## Updating Firmware

---

### Preparation

---


- If the SD card is blank, copy the entire "romdata" folder onto the SD card.
- If the card already contains the "romdata" folder, copy the "D144" folder onto the card.

If the card already contains folders up to "D144", copy the necessary firmware files (e.g. D144xxxx.fwu) into this folder.

**Note**

- Do not put multiple machine firmware programs on the same SD card. Copy the only model firmware you want.

**Updating Procedure**


1. Turn the main power switch off.
2. Remove the slot cover (  x 1).
3. Insert the SD card into SD Card Slot 2. Make sure the label on the SD card faces the front side of the machine.
4. Slowly push the SD card into the slot so it locks in place. You will hear it click. Make sure the SD card locks in place.

**Note**

- To remove the SD, push it in to unlock the spring lock. Then release it so it pops out of the slot.
5. Disconnect the network cable from the copier if the machine is connected to a network.
  6. Switch the main power switch on. After about 45 seconds, the initial version update screen appears on the LCD in English.
  7. On the screen, touch the button or press the corresponding number key on the operation panel to select the item in the menu that you want to update.

ROM/NEW	What it means
ROM:	Tells you the number of the module and name of the version currently installed. The first line is the module number, the second line the version name.
NEW:	Tells you the number of the module and name version on the SD card. The first line is the module number, the second line the version name.

**Note**

- Controller, engine and operation panel firmware cannot be updated at the same time. It is recommended to update firmware modules one by one.
8. Touch "UpDate (#)" (or ) to start the update.

**Note**

- The progress bar does not show for the operation panel firmware after you touch "OpPanel". The power on key flashes on and off at 0.5 s intervals when the LCDC firmware is updating. The power key flashes on and off at three seconds intervals when the update is finished.

9. The "Update is Done" message appears on the operation panel after completing the updating. The message differs depending on the firmware that has been updated.
10. Switch the copier main power switch off when you see the "Update is Done" message or follow the procedure that is displayed on the operation panel.
11. Press in the SD card to release it. Then remove it from the slot.
12. Switch the copier on for normal operation.

## Error Messages


An error message shows in the first line if an error occurs during the download.

The error code consists of the letter "E" and a number. The example above shows error "E24" displayed. For details, refer to the Error Message Table. (▶ "p.751" in this section)



## Firmware Update Error

If a firmware update error occurs, this means the update was cancelled during the update because the module selected for update was not on the SD card.

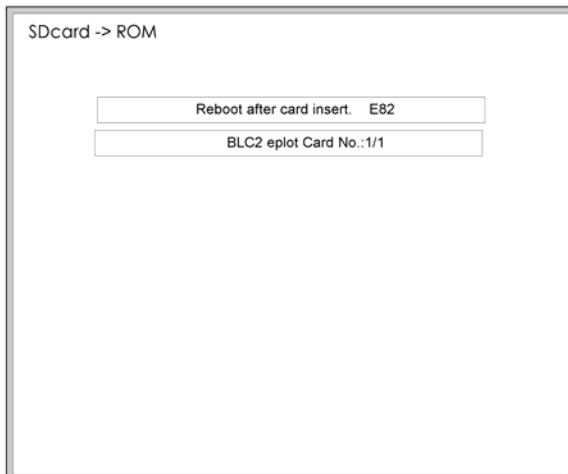

## Recovery after Power Loss

If the ROM update is interrupted as a result of accidental loss of power while the firmware is updating, then the correct operation of the machine cannot be guaranteed after the machine is switched on again. If the ROM update does not complete successfully for any reason, then in order to ensure the correct operation of the machine, the ROM update error will continue to show until the ROM is updated successfully.



In this case, insert the card again and switch on the machine to continue the firmware download automatically from the card without the menu display.

---

## Updating the LCDC for the Operation Panel

---

Do the following procedure to update the LCDC (LCD Control Board).

1. Turn the copier main switch off.
2. Remove the SD slot cover (  x 1).
3. Insert the SD card into SD Card Slot 2 (lower).
4. Switch the copier main switch on.
5. The initial screen opens in English after about 45 seconds.
6. Touch "Ope Panel.xx".
7. "xx" differs depending on the destination.
8. Touch "UpDate(#)" or (  ) to start the update.
9. Downloading starts after about 9 seconds.
10. The operation panel goes off and the main power on key flashes in red at 0.5 s intervals when the data is downloading. The same key starts flashing in green at 1 s intervals when the update is finished.
11. Switch the copier main power switch off and remove the SD card. Then switch the copier on.

5


---

## Update Procedure for App2Me Provider

---

Follow this procedure to update App2Me if a new version is available.

1. Push the [User/Tools] key on the operation panel.
2. If an administrator setting is registered for the machine, Step 3 and Step 4 are required. Otherwise, skip to step 5.
3. Push [Login/Logout] on the operation panel.
4. Login with the administrator user name and password.
5. Touch "Extended Feature Settings" twice on the LCD.
6. Touch each of the applications until the status changes to "Stop".
7. Turn the machine off, and then remove the VM Card.

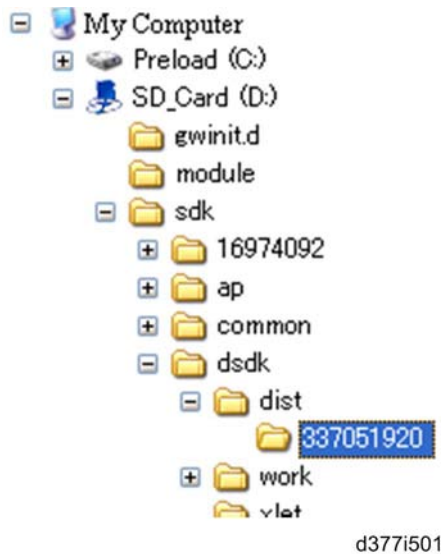


8. Prepare the newer App2Me Provider zip file from the Firmware Download Center, and then unzip the zip file. (The folder name is "337051920".)
9. Copy the App2Me Provider folder into the specified path for the VM card. The path is:  
"SD\_Card Drive\ sdk\dsdk\dist\337051920"
10. Turn the SD card label face to the front of the machine, and then push it slowly into Slot 2 (lower slot) until you hear a click.
11. Turn the main power switch on.
12. Press [User Tools] on the operation panel.
13. Touch the "Extended Feature Settings" button twice.
14. Touch the "Extended Feature Info" tab on the LCD.
15. Touch the "App2Me" line.
16. Set the setting of the "Auto Start" to "On".
17. Touch the "Exit" button.
18. Exit the [User Tools/Counter] settings.

#### ★ Important

- App2Me and all other running applications on the VM card must be shut down before removing the VM card in order to update the firmware, back up NVRAM, install the browser unit, or execute application move or undo with SP5873.
- After the VM card is re-inserted, App2Me (and any other VM card applications used by the customer) must be switched on after the machine is switched on.

## Browser Unit Update Procedure

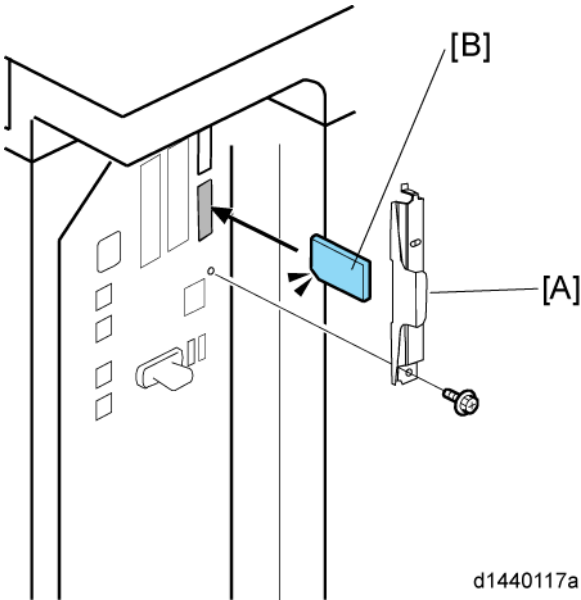

d1440117a

1. Remove the slot cover [A] for SD cards ( 1 x 1).
1. Turn the SD-card label face [B] of the browser unit to the front of the machine. Then push it slowly into slot 2 (lower) until you hear a click.
2. Plug in and turn on the main power switch.
3. Push the "User Tools" key.
  - If an administrator setting is registered for the machine, step 5 and 6 are required. Otherwise, skip to the step 7
4. Push the "Login/ Logout" key.
5. Login with the administrator user name and password.
6. Touch "Extended Feature Settings" twice on the LCD.
7. Touch "Uninstall" on the LCD.
8. Touch the "Browser" line
9. Confirmation message appears on the LCD.
10. Touch "Yes" to proceed.
11. Reconfirmation message appears on the LCD.
12. Touch "Yes" to uninstall the browser unit.
13. You will see "Uninstalling the extended feature... Please wait.", and then "Completed".
14. Touch "Exit" to go back to the setting screen.
15. Exit "User/Tools" setting, and then turn off the main power switch.



16. Remove the SD card of the browser unit from SD card slot 2 (lower).
17. Overwrite the updated program in the "sdk" folder of the browser unit application with PC.
18. Do the "Installation Procedure" to install the browser unit.

## Handling Firmware Update Errors

An error message shows in the first line if an error occurs during a download. The error code consists of the letter "E" and a number ("E20", for example).


### Error Message Table


Code	Meaning	Solution
20	Cannot map logical address	Make sure the SD card is inserted correctly.
21	Cannot access memory	HDD connection incorrect or replace hard disks.
22	Cannot decompress compressed data	Incorrect ROM data on the SD card, or data is corrupted.
23	Error occurred when ROM update program started	Controller program abnormal. If the second attempt fails, replace controller board.
24	SD card access error	Make sure SD card inserted correctly, or use another SD card.
30	No HDD available for stamp data download	HDD connection incorrect or replace hard disks.
31	Data incorrect for continuous download	Insert the SD card with the remaining data required for the download, the re-start the procedure.
32	Data incorrect after download interrupted	Execute the recovery procedure for the intended module download, then repeat the installation procedure.
33	Incorrect SD card version	Incorrect ROM data on the SD card, or data is corrupted.
34	Module mismatch - Correct module is not on the SD card)	SD update data is incorrect. Acquire the correct data (Japan, Overseas, OEM, etc.) then install again.

35	Module mismatch – Module on SD card is not for this machine	SD update data is incorrect. The data on the SD card is for another machine. Acquire correct update data then install again.
36	Cannot write module – Cause other than E34, E35	SD update data is incorrect. The data on the SD card is for another machine. Acquire correct update data then install again.
40	Engine module download failed	Replace the update data for the module on the SD card and try again, or replace the BCU board.
42	Operation panel module download failed	Replace the update data for the module on the SD card and try again, or replace the LCDC.
43	Stamp data module download failed	Replace the update data for the module on the SD card and try again, or replace the hard disks.
44	Controller module download failed	Replace the update data for the module on the SD card and tray again, or replace controller board.
50	Electronic confirmation check failed	SD update data is incorrect. The data on the SD card is for another machine. Acquire correct update data then install again.

# Installing Another Language

Many languages are available. But you can only switch between two languages at a time. Do the following procedure to select the two languages you want. You can select both of the languages you want from the user interface on the operation panel.


1. Switch the copier main power switch off.
2. Remove the SD slot cover (  x 1).
3. Insert the SD card with the language data into SD Card Slot 2.
4. Switch the copier main power switch on. The initial screen opens after about 45 seconds.
5. Touch "Language Data (2)" on the screen (or press the "2" key).

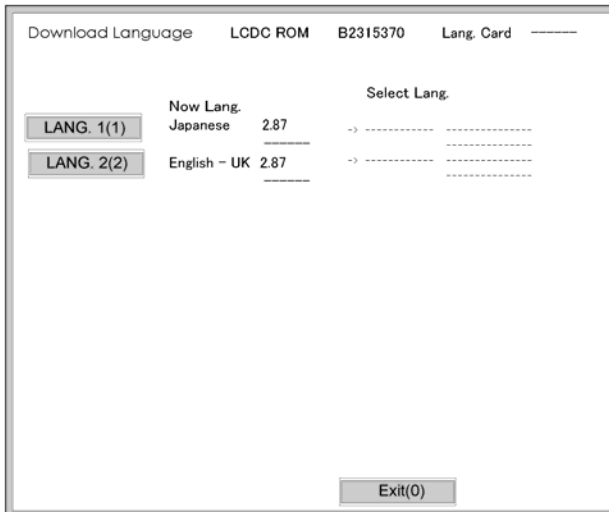

6. Touch "LANG. 1(1)" or "LANG. 2(2)"

Key	What it does
LANG. 1(1)	Touch this button on the screen (or press the "1" key on the 10-key pad) to open the next screen so you can select the 1st language.
LANG. 1(2)	Touch this button on the screen (or press the "2" key on the 10-key pad) to open the next screen so you can select the 2nd language.
Exit (0)	Touch this key on the screen (or press the "0" key on the 10-key pad) to quit the update procedure and return to normal screen.

7. Touch "LANG 1(1)" to select the 1st Language. Touch "LANG (2)" to select the 2nd Language.

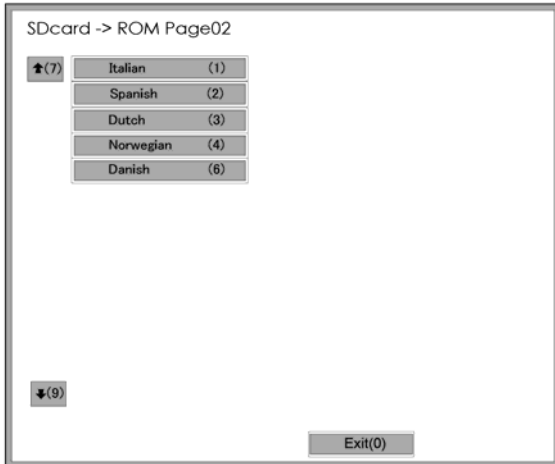

5

8. Touch the appropriate button on the screen (or press the number on the 10-keypad) to select a language as the 1st (or 2nd) language.
  - If a language is already selected, it will show in reverse.
  - Touching "Exit (0)" returns you to the previous screen.
9. If you do not see the language that you want to select, touch "↑(7)" or "↓(9)" on the screen (or press the "7" or "9" key) to show more choices.


The Download Screen opens after you select a language.


The 1st or 2nd language selected for updating shows.

The following show to right of the selection:

1. The first column shows the language currently selected.
2. The 2nd column shows the language selected to replace that language.

The example below shows that the download will replace "Japanese" with "Italian" as the 1st language.

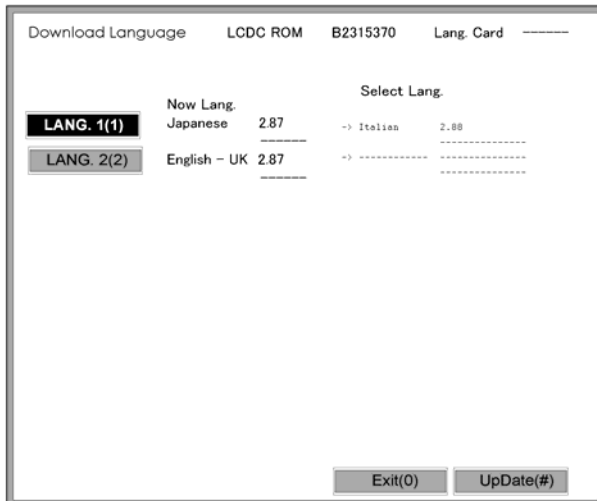

10. Touch "Update(#)" on the screen (or press ) to start the download.

Another screen with a progress bar does not show when the language is downloading.

The following occur at the time the language is downloading:



- The operation panel switches off.
- The LED on the power on key flashes rapidly.

11. After the message of installation completed has shown on the LCD, switch the copier main power switch off. Then remove the SD card from the slot.
12. Switch the copier main power switch on to resume normal operation.

# Reboot/System Setting Reset

## Software Reset

You can reboot the software with one of the following two procedures:



1. Turn the main power switch off and on.
2. Press and hold down  and  together for over 10 seconds. When the machine beeps once, release both buttons. After "Now loading. Please wait" shows for a few seconds, the copy window will open. The machine is ready for normal operation.

## System Settings and Copy Setting Reset


5


### System Setting Reset

The system settings in the UP mode can be reset to their defaults. Use the following procedure.

1. Press User Tools/Counter .
2. Hold down  and then press System Settings.

#### Note

- You must press  first.

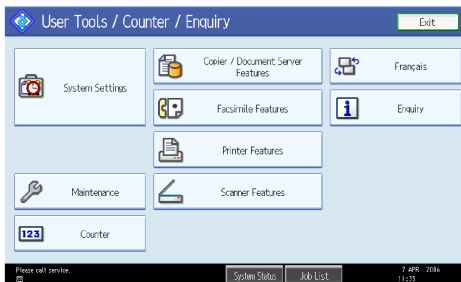

3. Press yes when the message prompts you to confirm that you want to reset the system settings.
4. Press exit when the message tells you that the settings have been reset.


### Copier Setting Reset

Use the following procedure to reset the copy settings in the UP mode to their defaults.

1. Press User Tools/Counter .
2. Hold down  and then press Copier/Document Server Settings.

**Note**

- You must press **#** first.

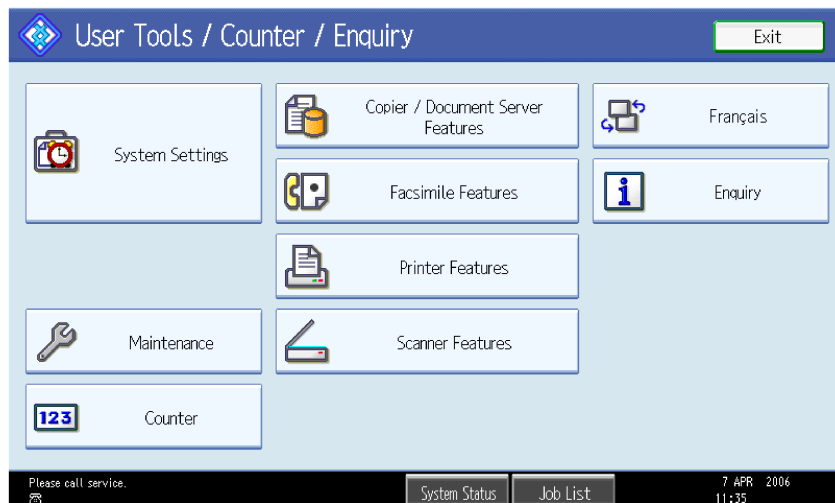

5

- Press "Yes" when the message prompts you to confirm that you want to reset the Copier Document Server settings.
- Press exit when the message tells you that the settings have been reset.


# Downloading Stamp Data

The stamp data should be downloaded from the controller firmware to the hard disks at the following times:

- After the hard disks have been replaced.

The print data contains the controller software. Execute SP 5853 to download the fixed stamp data required by the hard disks.

1. Enter the SP mode.
2. Select SP5853 and then press "EXECUTE". The following screen opens while the stamp data is downloading.

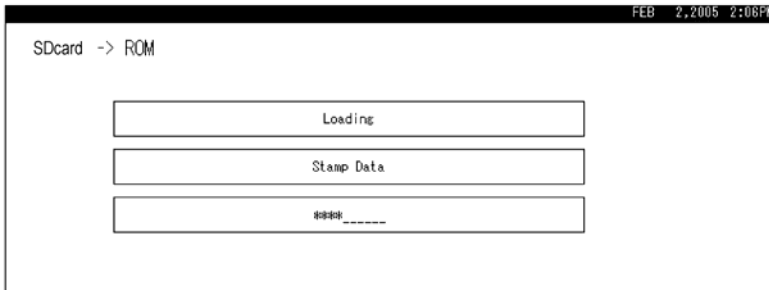

The download is finished when the message prompts you to close.



3. Press the "Exit" button. Then turn the copier off and on again.




# NVRAM Data Upload/Download


## Uploading Content of NVRAM to an SD card

Do the following procedure to upload SP code settings from NVRAM to an SD card.

### ↓ Note

- This data should always be uploaded to an SD card before the NVRAM is replaced.
  - Make sure that the write protection of an SD card is unlocked
1. Do SP5990-001 (SMC Print) before you switch the machine off. You will need a record of the NVRAM settings if the upload fails.
  2. Switch the copier main power switch off.

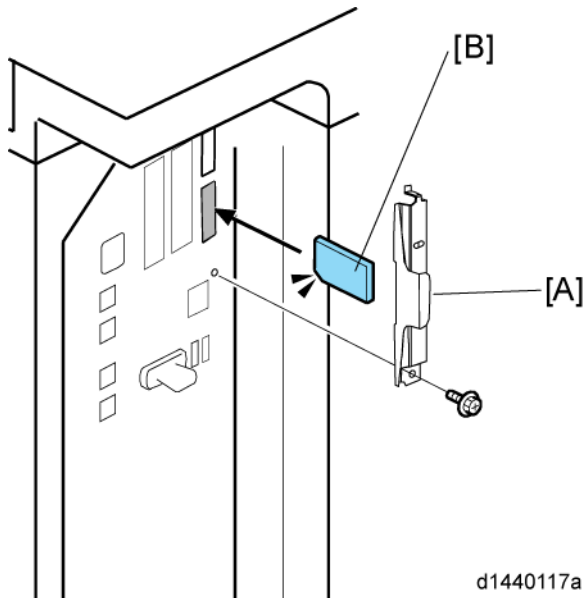

3. Remove the SD slot cover [A] (  x 1).
4. Insert the SD card [B] into SD card slot 2 (lower). Then switch the copier on.
5. Execute SP5824-001 (NVRAM Data Upload) and then press the "Execute" key.
6. The following files are copied to an NVRAM folder on the SD card when the upload procedure is finished. The file is saved to the path and the following filename:

**NVRAM\<<serial number>.NV**

Here is an example with Serial Number "K5000017114":

**NVRAM\K5000017114.NV**

- In order to prevent an error during the download, be sure to mark the SD card that holds the uploaded data with the number of the machine from which the data was uploaded.

**Note**

- You can upload NVRAM data from more than one machine to the same SD card.


## Downloading an SD Card to NVRAM

Do the following procedure to download SP data from an SD card to the NVRAM in the machine.

- The NVRAM data download may fail if the SD card with the NVRAM data is damaged, or if the connection between the controller and BCU is defective.
- Do the download procedure again if the download fails.
- Do the following procedure if the second attempt fails:

Enter the NVRAM data manually using the SMC print you created before uploading the NVRAM data.

- Switch the copier main power switch off.

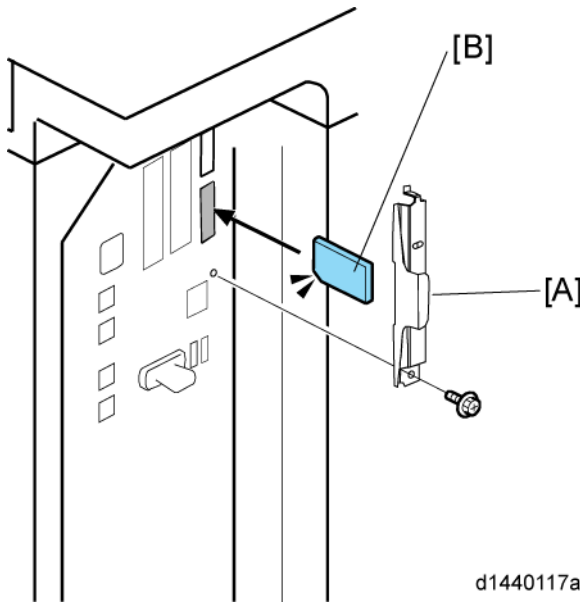

- Remove the SD slot cover [A] ( 1 x 1).
- Insert the SD card [B] with the NVRAM data into SD Card Slot 2 (lower).
- Switch the copier main power switch on.
- Do SP5825-001 (NVRAM Data Download) and press the "Execute" key.

**Note**

- The serial number of the file on the SD card must match the serial number of the machine for the NVRAM data to download successfully. The download fails if the serial numbers do not match.

This procedure does not download the following data to the NVRAM:

- Total Count
- C/O, P/O Count

# Address Book Upload/Download


## Information List

The following information is possible to be uploaded and downloaded.

Information	
<ul style="list-style-type: none"> <li>• Registration No.</li> <li>• User Code</li> <li>• E-mail</li> <li>• Protection Code</li> <li>• Fax Destination</li> <li>• Fax Option</li> <li>• Group Name</li> <li>• Key Display</li> </ul>	<ul style="list-style-type: none"> <li>• Select Title</li> <li>• Folder</li> <li>• Local Authentication</li> <li>• Folder Authentication</li> <li>• Account ACL</li> <li>• New Document Initial ACL</li> <li>• LDAP Authentication</li> </ul>

5

## Download

1. Prepare a formatted SD card.
2. Make sure that the write-protection on the SD card is off.
3. Turn off the main power switch of the main machine.
4. Remove the SD slot cover at the left rear side of the machine (  x 1).
5. Install the SD card into the SD card slot 2 (for service use).
6. Turn on the main power switch.
7. Enter the SP mode.
8. Do SP5-846-051 (Backup All Addr Book).
9. Exit the SP mode, and then turn off the main power switch.
10. Remove the SD card from the SD card slot 2.
11. Install the SD slot cover.


### Note

- If the capacity of SD card is not enough to store the local user information, an error message is displayed.
- Carefully handle the SD card, which contains user information. Do not take it back to your location.

---

## Upload

---

1. Turn off the main power switch of the main machine.
2. Remove the SD slot cover at the left rear side of the machine (  x 1).
3. Install the SD card, which has already been uploaded, into the SD card slot 2.
4. Turn on the main power switch.
5. Enter the SP mode.
6. Do SP5-846-052 (Restore All Addr Book).
7. Exit the SP mode, and then turn off the main power switch.
8. Remove the SD card from the SD card slot 2.
9. Install the SD slot cover.

### Note

- The counter in the user code information is initialized after uploading.
- The information of an administrator and supervisor cannot be downloaded nor uploaded.
- If there is no data of address book information in the SD card, an error message is displayed.

# Using the Debug Log

## Overview

This machine provides a Save Debug Log feature that allows the Customer Engineer to save and retrieve error information for analysis.

Every time an error occurs, debug information is recorded in volatile memory. But this information is lost when the machine is switched off and on.

To capture this debug information, the Save Debug Log feature provides two main features:

- Switching on the debug feature so error information is saved directly to the HDD for later retrieval.
- Copying the error information from the HDD to an SD card.


Do the following procedure below to set up the machine so the error information is saved automatically to the HDD when a user has problems with the machine. Then ask the user to reproduce the problem.

5

## Switching ON and Setting UP Save Debug Log

The debug information cannot be saved until the "Save Debug Log" function has been switched on and a target has been selected.

1. Enter the SP mode and switch the Save Debug Log feature on.
  - Enter the SP mode.
  - Touch "System SP".
  - On the LCD panel, open SP5857.
2. Under "5857 Save Debug Log", touch "1 On/Off".

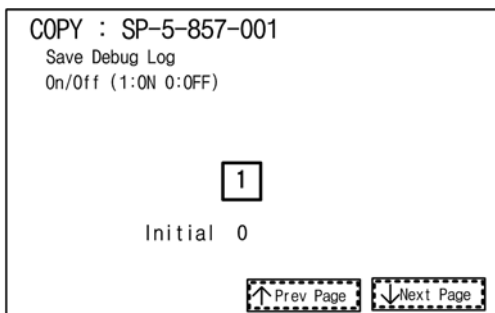



b178s001

3. On the control panel keypad, press "1". Then press  $\oplus$ . This switches the Save Debug Log feature on.

**Note**

- The default setting is "0" (OFF). This feature must be switched on in order for the debug information to be saved.

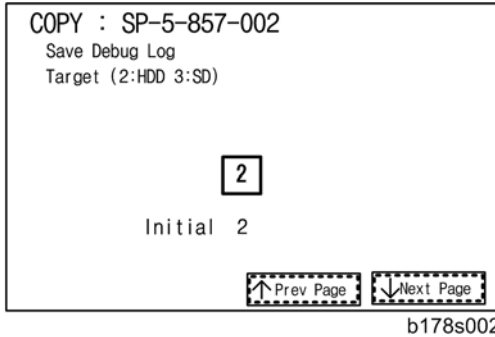

- Select the target destination where the debug information will be saved. Under "5857 Save Debug Log", touch "2 Target", enter "2" with the operation panel key to select the hard disk as the target destination. Then press .

**Note**

- Select "3 SD Card" to save the debug information directly to the SD card if it is inserted in the service slot.
- Now touch "5858" and specify the events that you want to record in the debug log. SP5858 (Debug Save When) provides the following items for selection.


1	Engine SC Error	Saves data when an engine-related SC code is generated.
2	Controller SC Error	Saves debug data when a controller-related SC Code is generated.
3	Any SC Error	Saves data only for the SC code that you specify by entering code number.
4	Jam	Saves data for jams.

**Note**

- More than one event can be selected.


**Example 1: To Select Items 1, 2, 4**

Touch the appropriate items(s). Press "ON" for each selection. This example shows "Engine SC Error" selected.

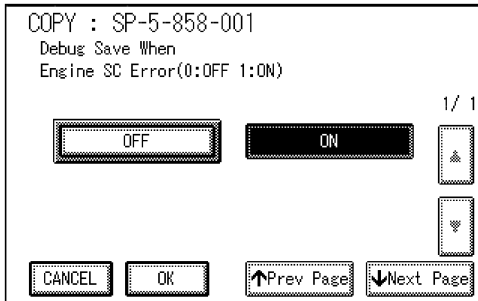

**Example 2: To Specify an SC Code**

Touch "3 Any SC Error", enter the 3-digit SC code number with the control panel number keys. Then press #. This example shows an entry for SC670.

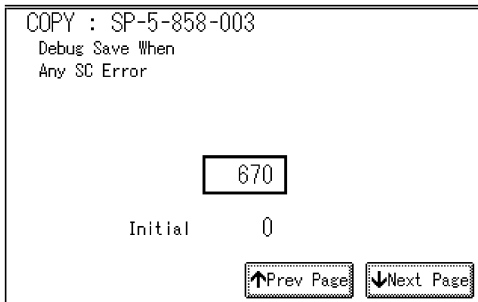

5

**Note**


- For details about SC code numbers, please refer to the SC tables in Section 4. "Troubleshooting".

6. Select one or more memory modules for reading and recording debug information. Touch "5859". Under "5859" press the necessary key item for the module that you want to record. Enter the appropriate 4-digit number. Then press #.

**Note**

- Refer to the two tables below for the 4-digit numbers to enter for each key.

The example below shows "Key 1" with "2222" entered.

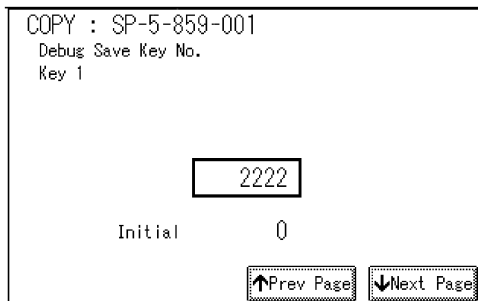



The following keys can be set with the corresponding numbers. (The initials in parentheses indicate the names of the modules.)

#### 4-Digit Entries for Keys 1 to 10

Key No.	Copy	Printer	Scanner	Web
1	2222 (SCS)			
2	14000 (SRM)			
3	256 (IMH)			
4	1000 (ECS)			
5	1025 (MCS)			
6	4848 (COPY)	4400 (GPS)	5375 (Scan)	5682 (NFA)
7	2224 (IPU)	4500 (PDL)	5682 (NFA)	6600 (WebDB)
8		4600 (GPS-PM)	3000 (UCS)	3300 (PTS)
9		2000 (NCS)	2000 (NCS)	6666 (WebSys)
10		2224 (IPU)	4126 (DCS)	2000 (NCS)

#### ↓ Note

- The default settings for Keys 1 to 10 are all zero ("0").

#### Key to Acronyms

Acronym	Meaning	Acronym	Meaning
ECS	Engine Control Service	NFA	Net File Application
GPS	GW Print Service	PDL	Printer Design Language
GSP-PM	GW Print Service – Print Module	PTS	Print Server
IMH	Image Memory Handler	SCS	System Control Service
MCS	Memory Control Service	SRM	System Resource Management
NCS	Network Control Service	WebDB	Web Document Box (Document Server)

- The machine is now set to record the debugging information automatically on the HDD (the target selected with SP5857-002) for the events that you selected with SP5858 and the memory modules selected with SP5859.

Please keep the following important points in mind when you do this setting:

- Note that the number entries for Keys 1 to 5 are the same for the Copy, Printer, Scanner, and Web memory modules.
- The initial settings are all zero.
- These settings remain in effect until you change them. Be sure to check all the settings, especially the settings for Keys 6 to 10. To switch off a key setting, enter a zero for that key.
- You can select any number of keys from 1 to 10 (or all) by entering the corresponding 4-digit numbers from the table.
- You cannot mix settings for the groups (COPY, PRINTER, etc.) for 006 to 010. For example, if you want to create a PRINTER debug log you must select the settings from the 9 available selections for the "PRINTER" column only.
- One area of the disk is reserved to store the debug log. The size of this area is limited to 4 MB.

## Retrieving the Debug Log from the HDD



Retrieve the debug log by copying it from the hard disk to an SD card.

- Insert the SD card into slot 2 (service slot) of the copier.
- Enter the SP mode and execute SP5857-009 (Copy HDD to SD Card (Latest 4 MB)) to write the debugging data to the SD card.
- Use a card reader to copy the file and send it for analysis to your local Ricoh representative by email. You can also send the SD card by regular mail if you want.

## Recording Errors Manually

SC errors and jams only are recorded to the debug log automatically. Please instruct the user to do the following immediately after occurrence to save the debug data for any other errors that occur while the customer engineer is not on site. Such problems also include a controller or panel freeze.

### ↓ Note

- You must previously switch on the Save Debug Feature (SP5857-001) and select the hard disk as the save destination (SP5857-002) if you want to use this feature.
- Press  (Clear Modes) on the operation panel when the error occurs.
  - On the control panel, enter "01". Then hold down  for at least 3 seconds until the machine beeps and then release it. This saves the debug log to the hard disk for later retrieval with an SD card by the service representatives.

3. Switch the machine off and on to resume operation.

The debug information for the error is saved on the hard disk. This lets the service representative retrieve it on their next visit by copying it from the HDD to an SD card.

---

## Debug Log Codes

---

### SP5857-015 Copy SD Card-to-SD Card: Any Desired Key

---

This SP copies the log on an SD card (the file that contains the information written directly from shared memory) to a log specified by key number. The copy operation is executed in the log directory of the SD card inserted in the same slot. (This function does not copy from one slot to another.) Each SD card can hold up to 4 MB of file data. Unique file names are created for the data during the copy operation to prevent overwriting files of the same name. This means that log data from more than one machine can be copied onto the same SD card. This command does not execute if there is no log on the HDD for the name of the specified key.

5

### SP5857-016 Create a File on HDD to Store a Log

---

This SP creates a 32 MB file to store a log on the HDD. However, this is not a completely empty file. The created file will hold the number "2225" as the SCS key number and other non-volatile information. Even if this SP is not executed, a file is created on the HDD when the first log is stored on the HDD (it takes some time to complete this operation). This creates the possibility that the machine may be switched off and on before the log can be created completely. If you execute this SP to create the log file beforehand, this will greatly reduce the amount of time required to acquire the log information and save onto the HDD. With the file already created on the HDD for the log file, the data only needs to be recorded. A new log file does not need to be created. To create a new log file, do SP5857-011 to delete the debug log data from the HDD. Then do SP5857-016.

### SP5857-017 Create a File on SD Card to Store a Log

---

This SP creates a 4 MB file to store a log on an SD card. However, this is not a completely empty file. The created file will hold the number "2225" as the SCS key number and other non-volatile information. Even if this SP is not executed, a file is created on the SD card when the first log is stored on the SD card (it takes some time to complete this operation). This creates the possibility that the machine may be switched off and on before the log can be created completely. If you execute this SP to create the log file beforehand, this will greatly reduce the amount of time required to acquire the log information and save onto the SD card. With the file already created on the SD card for the log file, the data only needs to be recorded; a new log file does not require creation. To create a new log file, do SP5857-012 to delete the debug log data from the SD card. Then do SP5857-017.

# Card Save Function

---

## Overview

---

### Card Save:

---

- The Card Save function is used to save print jobs received by the printer on an SD card with no print output. Card Save mode is toggled using printer Bit Switch #1 bit number 4. Card Save will remain enabled until the SD card becomes full, or until all file names have been used.
- Captures are stored on the SD card in the folder /prt/cardsave. File names are assigned sequentially from PRT00000.prn to PRT99999.prn. An additional file PRT.CTL will be created. This file contains a list of all files created on the card by the card save function.
- Previously stored files on the SD card can be overwritten or left intact. Card Save SD has "Add" and "New" menu items.
  - **Card Save (Add):** Appends files to the SD Card. Does not overwrite existing files. If the card becomes full or if all file names are used, an error will be displayed on the operation panel. Subsequent jobs will not be stored.
  - **Card Save (New):** Overwrites files in the card's /prt/cardsave directory.

### Limitation:


- Card Save cannot be used with PjL Status Readback commands. PjL Status Readbacks will not work. In addition they will cause the Card Save to fail.

---


## Procedure

---


1. Turn the main power switch OFF.
2. Insert the SD card into slot 2. Then turn the power ON.
3. Enter SP mode.
4. Select the "Printer Sp".
5. Select SP-1001 "Bit Switch".

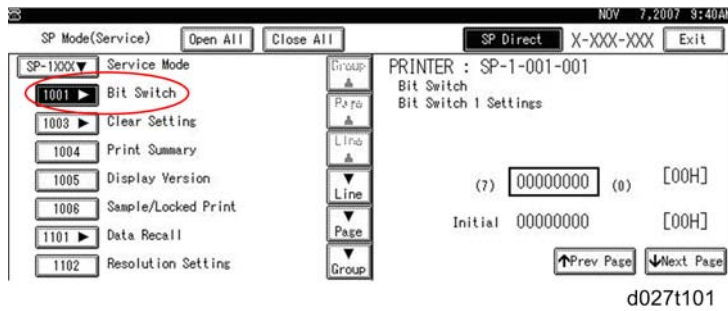


6. Select "Bit Switch 1 Settings" and use the numeric keypad to turn bit 4 ON and then press the "#" button to register the change. The result should look like: **00010000**. By doing this, Card Save option will appear in the "List/Test Print" menu.

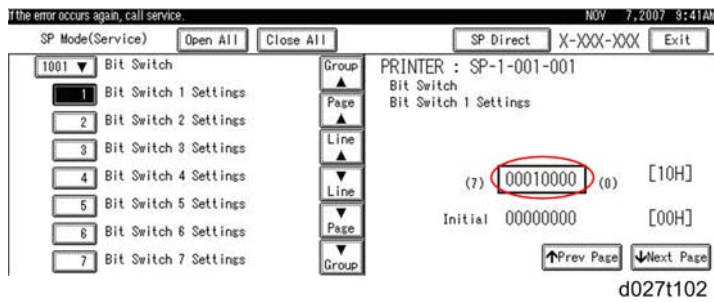

7. Press "Exit" to exit SP Mode.
8. Press the "User Tools/Counter" button.

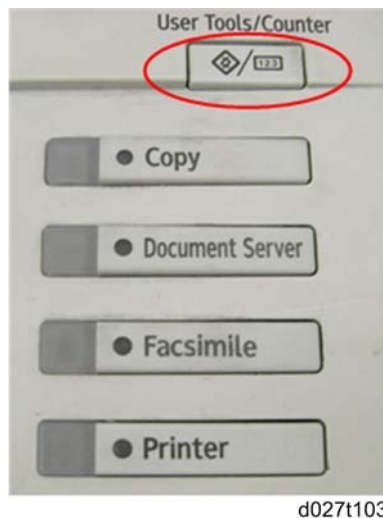



9. Select "Printer Features".

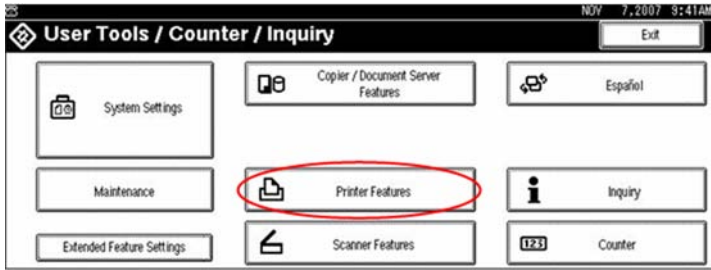

d027t105

- 10. Card Save (Add) and Card Save (New) should be displayed on the screen. Select Card Save (Add) or Card Save (New).


5

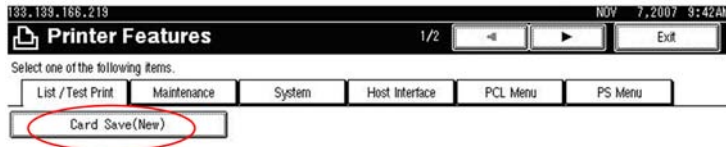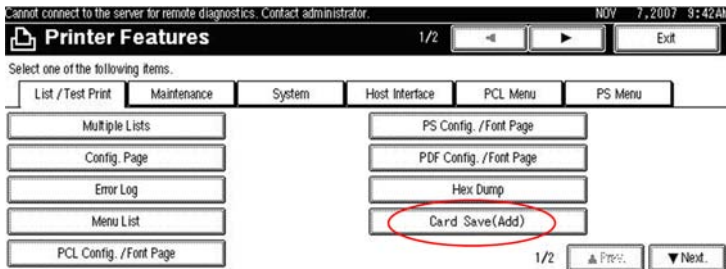

2/2   ▲ Prev.   ▼ Next


d027t106

- 11. Press "OK" and then exit the "User Tools/Counter" menu.

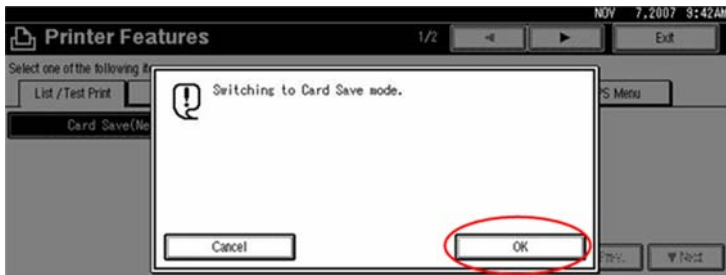


d027t107

- 12. Press the "Printer" button.

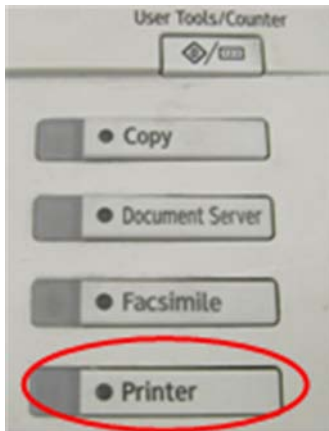


d027t108

13. Card Save should be displayed in the top left of the display panel.

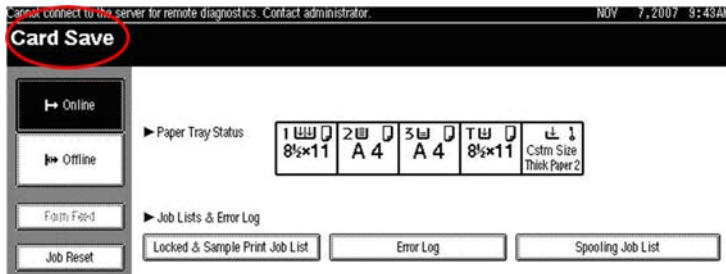


d027t109

14. Send a job to the printer. The Communicating light should start blinking as shown below.

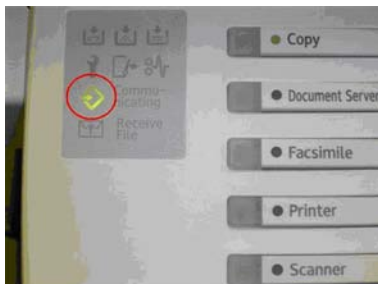

d027t110

15. As soon as the printer receives the data, it will be stored on the SD card automatically with no print output. Nothing is displayed on the screen, indicating that a Card Save operation was successful.
16. Press "Offline" and then the "Clear" button to exit Card Save mode.

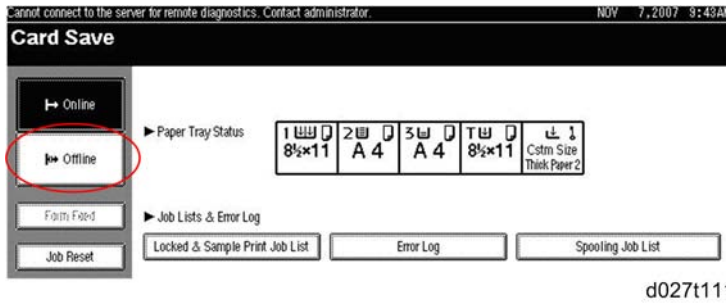

17. Change the Bit Switch Settings back to the default 00000000. Press the “#” button in the numeric keypad to register the changes.
18. Remove the SD card after the main power switch is turned off.

---

## Error Messages

---

5

Card Save error messages:

- **Init error:** A card save process (e.g. card detection, change to kernel mode) failed to initialize.
- **Card not found:** Card cannot be detected in the slot.
- **No memory:** Insufficient working memory to process the job.
- **Write error:** Failed to write to the card.
- **Other error:** An unknown error occurred.

If an error occurs, pressing “OK” will cause the device to discard the job and return to the ready state.



# SMC List Card Save Function


## Overview

### SMC List Card Save

- The SMC List Card Save (SP Text Mode) function is used to save the SMC list as CSV files to the SD-card inserted into the operation panel SD-card slot.

## Procedure

- Turn the main power switch OFF.
- Insert the SD card into the operation panel SD-card slot. Then turn the power ON.
- Enter SP mode.
- Select "Copy SP".

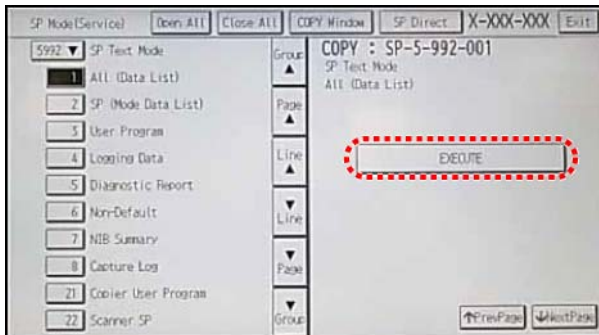


d1440127

- Select SP-5992 "SP Text Mode".
- Select a detail SP number shown below to save data on the SD card.  
SP-5992-xxx (SP Text Mode)

Detail No.	SMC Categories to Save
001	All (Data List)
002	SP (Mode Data List)
003	User Program
004	Logging Data


Detail No.	SMC Categories to Save
005	Diagnostic Report
006	Non-Default
007	NIB Summary
008	Capture Log
021	Copier User Program
022	Scanner SP
023	Scanner User Program
024	SDK/J Summary
025	SDK/J Application Info
026	Printer SP

7. Press [EXECUTE].

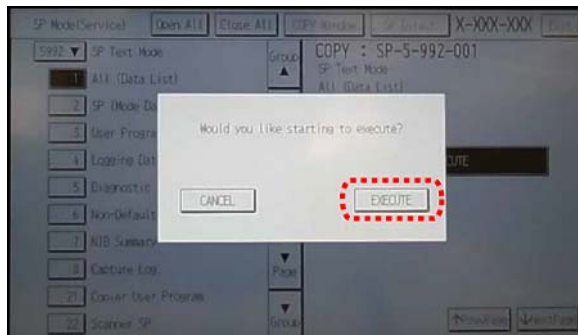


d1440128

8. Press [EXECUTE] again to start. Press [CANCEL] to cancel the saving.

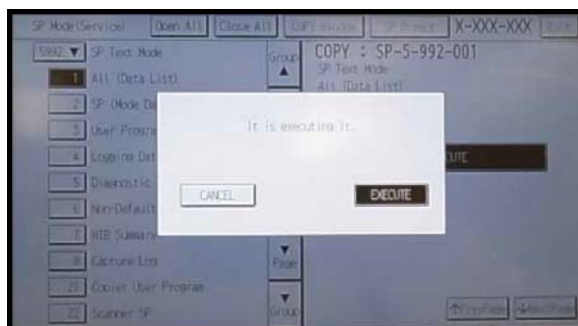

d1440130

9. "It is executing it" is shown on the screen while executing.

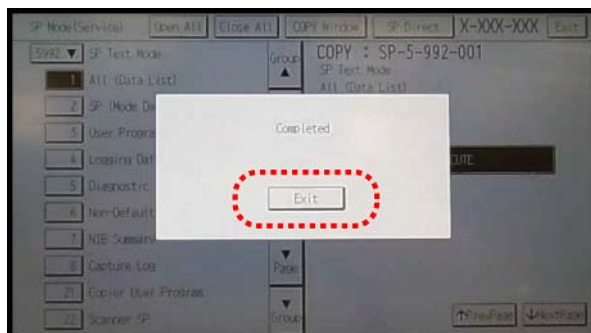

d1440129

10. Wait for 2 to 3 minutes until "Completed" is shown.

**Note**

- The SMC list saving may take from 2 to 3 minutes to complete.
- Press [CANCEL] to abort executing.

11. Press [Exit] to exit from SP mode.

 
5

## File Names of the Saved SMC Lists

The SMC list data saved on the SD-card will be named automatically. The file naming rules are as follows.

Example:

W490M000006\_59921\_20111011\_53954.csv



d1440131

A:

Machine serial number (fixed for each machine)

B:

SP number saved in this file.

First four digits (5992) in this part are fixed. The other one or two digits are the detail SP number(s). In this case, it is one digit. Therefore, this file is of SP5-992-001 (All data list). See the upper SP table for the correspondence between SP detail numbers and the contents.

C:

**File creation date**

Year/Month/Day ("Zero" will be omitted if each is one digit.)

D:

**File creation time**

Hour/Minute/Second ("Zero" will be omitted if each is one digit.)

E:

**File Extension CSV (Comma Separated Value)**

This part is fixed.

**Note**

- A folder named by the machine serial number will be created on the SD card when this function is executed.
- This function can save the SMC list data only to an SD card inserted into the operation panel SD card slot.

---

**Error Messages**

---

SMC List Card Save error message:

- **Failed:**  
FACTOR: Read-only file system, No space left on device.

If an error occurs, pressing "Exit" will cause the device to discard the job and return to the ready state.

# 6. Troubleshooting

## Service Call

### Service Call Conditions

The "SC Table" section shows the SC codes for controller errors and other errors. The latter (not controller errors) are put into four types. The type is determined by their reset procedures. The table shows the classification of the SC codes.

	Key	Definition	Reset Procedure
Controller errors	CTL	The error has occurred in the controller.	See "Troubleshooting Procedure" in the table.
Other errors	A	The error involves the fusing unit. The machine operation is disabled. The user cannot reset the error.	Turn the main switch off and on. Reset the SC (set SP5-8 10-1). Turn the main switch off and on.
	B	The error involves one or some specific units. The machine operates as usual, excluding the related units.	Turn the operation switch off and on.
	C	The error is logged. The SC-code history is updated. The machine operates as usual.	The SC will not show. Only the SC history is updated.
	D	The machine operation is disabled. You can reset the machine by turning the operation switch or main switch off and on. If the error occurs again, the same SC code is displayed.	Turn the operation switch or main power switch off and on.



After you turn the main power switch off, wait for one second or more before you turn the main power switch on (See SC 672). All SCs are logged. The print log data (SP5-990-004) in SP mode can check the latest 10 SC codes detected and total counters when the SC code is detected.

**Note**

- If the problem concerns electrical circuit boards, first disconnect then reconnect the connectors before you replace the PCBs.

- If the problem concerns a motor lock, first check the mechanical load before you replace motors or sensors.

### SC Code Classification

The table shows the classification of the SC codes:

Class 1	Section	SC Code	Detailed section
1XX	Scanning	100 -	Scanner
		190 -	Unique for a specific model
2XX	Laser exposure	200 -	Polygon motor
		220 -	Synchronization control
		230 -	FGATE signal related
		240 -	LD control
		280 -	Unique for a specific model
		290 -	Shutter
3XX	Image development 1	300 -	Charge
		330 -	Drum potential
		350 -	Development
		380 -	Unique for a specific model
4XX	Image development 2	400 -	Image transfer
		420 -	Paper separation
		430 -	Cleaning
		440 -	Around drum
		460 -	Unit
		480 -	Others

Class 1	Section	SC Code	Detailed section
5XX	Paper feed / Fusing	500 -	Paper feed
		515 -	Duplex
		520 -	Paper transport
5XX	Paper feed / Fusing	530 -	Fan motor
		540 -	Fusing
		560 -	Others
		570 -	Unique for a specific model
6XX	Communication	600 -	Electrical counters
		620 -	Mechanical counters
		630 -	Account control
		640 -	CSS
		650 -	Network
		670 -	Internal data processing
		680 -	Unique for a specific model
7XX	Peripherals	700 -	Original handling
		720 -	Two-tray finisher
		740 -	Booklet finisher
8XX	Controller	800 -	Error after ready condition
		820 -	Diagnostics error
		860 -	Hard disk
		880 -	Unique for a specific model
9XX	Others	900 -	Counter
		920 -	Memory
		990 -	Others

**Service Call Tables - 1**

**SC1xx: Scanning**

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
101	D	Exposure lamp error
		The peak white level is less than 64/255 digits (8 bits) when scanning the shading plate.
		<ul style="list-style-type: none"> <li>• Exposure lamp defective</li> <li>• Lamp stabilizer defective</li> <li>• Exposure lamp connector defective</li> <li>• Standard white plate dirty</li> <li>• Scanner mirror or scanner lens out of position or dirty</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check and clean the scanner mirror(s) and scanner lens.</li> <li>2. Check and clean the shading plate.</li> <li>3. Replace the exposure lamp.</li> <li>4. Replace the lamp stabilizer.</li> <li>5. Replace the scanner mirror(s) or scanner lens.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
120	D	Scanner home position error 1
		The scanner home position sensor does not detect the "OFF" condition during operation.
		<ul style="list-style-type: none"> <li>• Scanner motor driver defective</li> <li>• Scanner motor defective</li> <li>• Harness between SIO board and scanner motor disconnected</li> <li>• Scanner HP sensor defective</li> <li>• Harness between SIO and HP sensor disconnected</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the cable connection between the SIO board and scanner motor.</li> <li>2. Check the cable connection between the SIO and HP sensor.</li> <li>3. Replace the scanner motor.</li> <li>4. Replace the HP sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
121	D	Scanner home position error 2
		The scanner home position sensor does not detect the "ON" condition during operation.
		<ul style="list-style-type: none"> <li>• Scanner motor driver defective</li> <li>• Scanner motor defective</li> <li>• Harness between SIO board and scanner motor disconnected</li> <li>• Scanner HP sensor defective</li> <li>• Harness between SIO and HP sensor disconnected</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the cable connection between the SIO board and scanner motor.</li> <li>2. Check the cable connection between the SIO and HP sensor.</li> <li>3. Replace the scanner motor.</li> <li>4. Replace the HP sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
141	D	Black level detection error
		The black level cannot be adjusted within the target value during the zero clamp.
		<ul style="list-style-type: none"> <li>• Harness disconnected</li> <li>• Defective SBU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the cable connection</li> <li>2. Replace the SBU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
142	D	White level detection error
		The white level cannot be adjusted within the target during auto gain control.
		<ul style="list-style-type: none"> <li>• Dirty exposure glass or optics section</li> <li>• SBU board defective</li> <li>• Harness disconnected</li> <li>• Exposure lamp defective</li> <li>• Scanner motor defective</li> </ul>
		<ol style="list-style-type: none"> <li>1. Clean the exposure glass, white plate, mirrors, and lens.</li> <li>2. Check if the exposure lamp is lit during initialization.</li> <li>3. Check the harness connection between SBU and IPU.</li> <li>4. Replace the exposure lamp.</li> <li>5. Replace the scanner motor.</li> <li>6. Replace the SBU board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
144	D	SBU communication error
		The SBU connection cannot be detected at power on or recovery from the energy save mode.
		<ul style="list-style-type: none"> <li>• Defective SBU</li> <li>• Defective harness</li> <li>• Defective detection port on the BCU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the harness.</li> <li>2. Replace the SBU.</li> <li>3. Replace the BCU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
161		IPU error
-01	D	The error result of self-diagnostic by the ASIC on the IPU is detected.
		<ul style="list-style-type: none"> <li>• Defective IPU</li> <li>• Defective connection between IPU and SBU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connection between IPU and SBU.</li> <li>2. Replace the IPU.</li> </ol>
-02	D	The machine detects an error during an access to the Ri.
		<ul style="list-style-type: none"> <li>• Defective IPU board</li> </ul>
		Replace the IPU board.
-03	D	The ASIC on the IPU fails to configure or initialize the DRAM.
		<ul style="list-style-type: none"> <li>• Defective IPU board</li> </ul>
		Replace the IPU board.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
165	D	Copy Data Security Unit error
		<ul style="list-style-type: none"> <li>The copy data security board is not detected when the copy data security function is set "ON" with the initial setting.</li> <li>A device check error occurs when the copy data security function is set "ON" with the initial setting.</li> </ul>
		<ul style="list-style-type: none"> <li>Incorrect installation of the copy data security board</li> <li>Defective copy data security board</li> </ul>
		<ol style="list-style-type: none"> <li>Reinstall the copy data security board.</li> <li>Replace the copy data security board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
185	D	CIS communication error
		Error occurs during ASIC register's automatic initialization on the CIS, or during transmission between the CIS – DF.
		<ul style="list-style-type: none"> <li>Harness between the CIS – DF is disconnected</li> <li>CIS defective</li> </ul>
		<ol style="list-style-type: none"> <li>Check or replace the harness (CN220 or CN210 on the DF main board) between the CIS and DF.</li> <li>Replace the CIS on the DF.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
186	D	CIS LED error
		LED on the CIS causes an error.
		<ul style="list-style-type: none"> <li>During initializing, the ratio of the average between leading-edge area and rear-edge is out of range.</li> <li>During scanning, the shading data peak is under the standard value.</li> <li>Harness CN210 and CN220 on the DF are disconnected.</li> </ul>
		<ol style="list-style-type: none"> <li>Check or replace the harness (CN220 or CN210 on the DF main board) between the CIS and DF.</li> <li>Replace the CIS on the DF.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
187	D	CIS black level error
		The black level scanned by CIS is abnormal. 0 < Calibrated Black data level < 255 (10bit).
		<ul style="list-style-type: none"> <li>Defective CIS</li> </ul>
		<ol style="list-style-type: none"> <li>Check or replace the harness (CN220 or CN210 on the DF main board) between the CIS and DF.</li> <li>Replace the CIS on the DF.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
188	D	CIS white level error
		The shading data peak detected from the CIS is abnormal.
		<ul style="list-style-type: none"> <li>Defective CIS</li> </ul>
		<ol style="list-style-type: none"> <li>Check or replace the harness (CN220 or CN210 on the DF main board) between the CIS and DF.</li> <li>Replace the CIS on the DF.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
189	D	CIS gray balance adjustment error
		The adjustment error occurs during the test after adjusting the gray balance.
		<ul style="list-style-type: none"> <li>Defective CIS</li> </ul>
		<ol style="list-style-type: none"> <li>Retry the gray balance adjustment.</li> <li>If the machine does not recover, do the following steps. <ul style="list-style-type: none"> <li>Turn off the machine.</li> <li>Make sure CN210 and CN220 are connected firmly.</li> <li>Turn on the machine.</li> </ul> </li> <li>If the machine does not recover, replace the CIS.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
195	D	Serial Number Mismatch
		<ul style="list-style-type: none"> <li>Serial number stored in the memory does not have the correct code.</li> </ul>
		<ul style="list-style-type: none"> <li>NVRAM defective</li> <li>BCU replaced without original NVRAM</li> </ul>
		<ol style="list-style-type: none"> <li>Check the serial number with SP5-811-002.</li> <li>If the stored serial number is incorrect, contact your supervisor.</li> </ol>

## Service Call Tables - 2

### SC 2xx: Exposure

6

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
202	D	Polygon motor error 1: ON timeout
		The polygon mirror motor does not reach the targeted operating speed within the specified time after turning on or changing speed.
		<ul style="list-style-type: none"> <li>Defective or disconnected harness to polygon motor driver board</li> <li>Defective polygon motor driver board</li> <li>Defective polygon motor.</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the polygon motor.</li> <li>Replace the laser optics housing unit.</li> <li>Replace the harness.</li> <li>Replace the IPU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
203	D	Polygon motor error 2: OFF timeout
		The polygon mirror motor does not leave the READY status within 3 seconds after the polygon motor switches off.
		<ul style="list-style-type: none"> <li>• Disconnected or defective harness to polygon motor driver board</li> <li>• Defective polygon motor driver board</li> <li>• Defective polygon motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the polygon motor.</li> <li>3. Replace the IPU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
204	D	Polygon motor error 3: XSCRDY signal error
		The SCRDI_N signal goes HIGH (inactive) while the laser diode is firing.
		<ul style="list-style-type: none"> <li>• Disconnected or defective harness to polygon motor driver board</li> <li>• Defective polygon motor</li> <li>• Defective polygon motor driver board</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the polygon motor.</li> <li>3. Replace the IPU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
210 -01	C	Laser synchronizing detection error: end position [K]
-02	C	Laser synchronizing detection error: end position [C]
-03	C	Laser synchronizing detection error: end position [M]
-04	C	Laser synchronizing detection error: end position [Y]
		The laser synchronizing detection signal for the end position of LDB [K], [C], [M], [Y] is not detected for one second after the LDB unit turned on when detecting the main scan magnification.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		<ul style="list-style-type: none"> <li>• Disconnected or defective harness to synchronizing detector for end position</li> <li>• Defective synchronizing detector board</li> <li>• Defective LD board or driver</li> <li>• Defective IPU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connectors.</li> <li>2. Replace the harness of the LD board.</li> <li>3. Replace the laser optics housing unit.</li> <li>4. Replace the IPU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
220	D	Laser synchronizing detection error: start position [K]: LD 1
-01	D	Laser synchronizing detection error: start position [C]: LD 1
-02	D	Laser synchronizing detection error: start position [M]: LD 1
-03	D	Laser synchronizing detection error: start position [Y]: LD 1
-04	D	Laser synchronizing detection error: start position [Y]: LD 1
		<p>The laser synchronizing detection signal for the start position of the LDB [K], [C], [M], [Y] is not output for two seconds after LDB unit turns on while the polygon motor is rotating normally.</p> <ul style="list-style-type: none"> <li>• Disconnected cable from the laser synchronizing detection unit or defective connection</li> <li>• Defective laser synchronizing detector</li> <li>• Defective LDB</li> <li>• Defective IPU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connectors.</li> <li>2. Replace the laser-synchronizing detector.</li> <li>3. Replace the LDB.</li> <li>4. Replace the IPU.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
221 -01	D	Laser synchronizing detection error: start position [K]: LD2
-02	D	Laser synchronizing detection error: start position [C]: LD2
-03	D	Laser synchronizing detection error: start position [M]: LD2
-04	D	Laser synchronizing detection error: start position [Y]: LD2
		<p>The laser synchronizing detection signal for the start position of the LDB [K], [C], [M], [Y] is not output for two seconds after LDB unit turns on while the polygon motor is rotating normally.</p> <ul style="list-style-type: none"> <li>• Disconnected cable from the laser synchronizing detection unit or defective connection</li> <li>• Defective laser synchronizing detector</li> <li>• Defective LDB</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Check the connectors.</li> <li>2. Replace the laser-synchronizing detector.</li> <li>3. Replace the LDB.</li> <li>4. Replace the IPU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
230 -01	D	FGATE ON error: K
-02	D	FGATE ON error: C
-03	D	FGATE ON error: M
-04	D	FGATE ON error: Y

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		<p>The PFGATE ON signal does not assert within 5 seconds after processing the image in normal job or MUSIC for start position [K], [C], [M], [Y].</p> <ul style="list-style-type: none"> <li>• Defective ASIC (Lupus)</li> <li>• Poor connection between controller and IPU</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Check the connection between the controller board and the IPU.</li> <li>2. Replace the IPU.</li> <li>3. Replace the controller board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
231	D	FGATE OFF error: K
-01	D	FGATE OFF error: C
-02	D	FGATE OFF error: M
-03	D	FGATE OFF error: Y
-04	D	FGATE OFF error: Y
		<ul style="list-style-type: none"> <li>• The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for end position [K], [C], [M], [Y].</li> <li>• The PFGATE ON signal still asserts when the next job starts.</li> </ul> <p>See SC 230 for troubleshooting details.</p>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
240	C	LD error: K
-01	C	LD error: C
-02	C	LD error: M
-03	C	LD error: Y
-04	C	LD error: Y

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		The IPU detects LDB error a few times consecutively when LDB unit turns on after LDB initialization.
		<ul style="list-style-type: none"> <li>• Worn-out LD</li> <li>• Disconnected or broken harness of the LD</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the harness of the LD.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the IPU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		GAVD communication error
		The 12C bus device ID is not identified during initialization. A device-status error occurs during 12C bus communication. The 12C bus communication is not established due to an error other than a buffer shortage.
		<ul style="list-style-type: none"> <li>• Loose connection</li> <li>• Defective GAVD</li> <li>• Defective BCU</li> <li>• Defective controller board</li> </ul>
		<ol style="list-style-type: none"> <li>1. Turn the power switch off and on.</li> <li>2. Check the cable connection.</li> <li>3. Replace the laser optics-housing unit.</li> <li>4. Replace the BCU.</li> </ol>
270	D	

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
285	D	Line position adjustment (MUSIC) error
		Line position adjustment fails four consecutive times.
		<ul style="list-style-type: none"> <li>• Pattern sampling error (insufficient image density)</li> <li>• Defective ID sensors for the line position adjustment</li> <li>• Defective image transfer belt unit</li> <li>• Defective PCDU(s)</li> <li>• Defective laser optics housing unit</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check and reinstall the image transfer belt unit and PCDUs.</li> <li>2. Check if each toner bottle has enough toner.</li> <li>3. Replace the ID sensor.</li> <li>4. Replace the image transfer belt unit.</li> <li>5. Replace the PCDU(s).</li> <li>6. Replace the laser optics housing unit.</li> </ol>

### Service Call Tables - 3

#### SC3xx: Image Processing – 1

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
312 -01	D	Charge P.P. output error: K
-02	D	Charge P.P. output error: C
-03	D	Charge P.P. output error: M
-04	D	Charge P.P. output error: Y

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		The feedback voltage of the charge AC for each color is 0.3 V or less for 0.2 seconds after the charge AC has been turned on.
		<ul style="list-style-type: none"> <li>• Disconnected or broken harnesses of the HVPS</li> <li>• Defective PCDU</li> <li>• Defective HVPS</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harnesses of the HVPS.</li> <li>2. Reinstall or replace the PCDU.</li> <li>3. Replace the HVPS.</li> </ol>

### SC3xx: Image Processing – 2

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
360-01	D	TD sensor adjustment error: K
-02	D	TD sensor adjustment error: C
-03	D	TD sensor adjustment error: M
-04	D	TD sensor adjustment error: Y
		During TD sensor initialization, the output value of the black, cyan, magenta, or yellow TD sensor is not within the range of the specified value with SP3-238-001 to -004 (default: 2.5V) $\pm$ 0.2V
		<ul style="list-style-type: none"> <li>• Heat seal not removed from a new developer pack</li> <li>• TD harness sensor disconnected, loose or defective</li> <li>• TD sensor defective</li> <li>• Harness between TD sensor and drawer disconnected, defective</li> </ul>
		<ol style="list-style-type: none"> <li>1. Remove the heat seal from each PCDU.</li> <li>2. Replace the defective PCDU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
361-01	D	TD sensor (Vt high) error 1: K
-02	D	TD sensor (Vt high) error 1: C
-03	D	TD sensor (Vt high) error 1: M
-04	D	TD sensor (Vt high) error 1: Y
		<ul style="list-style-type: none"> <li>• The Vt value of the black, magenta, cyan, or yellow TD sensor exceeds the specified value (default: 4.7V) with SP3-020-002 for twenty counts.</li> <li>• The [Vt - Vtref] value of the black, cyan, magenta, or yellow TD sensor exceeds the specified value (default: 5.0V) with SP3-020-001.</li> </ul>
		<ul style="list-style-type: none"> <li>• Black, magenta, cyan, or yellow TD sensor disconnected</li> <li>• Harness between TD sensor and PCDU defective</li> <li>• Defective TD sensor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the black, cyan, magenta, or yellow TD sensor connector and harness between the TD sensor and PCDU for damage.</li> <li>2. Check the drawer connector.</li> <li>3. Replace the defective PCDU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
362-01	D	TD sensor (Vt low) error 2: K
-02	D	TD sensor (Vt low) error 2: C
-03	D	TD sensor (Vt low) error 2: M
-04	D	TD sensor (Vt low) error 2: Y

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		<p>The Vt value of the black, magenta, cyan, or yellow TD sensor is below the specified value with SP3-020-004 (default: 0.5V) for 10 counts.</p> <ul style="list-style-type: none"> <li>• TD sensor harness disconnected, loose, defective</li> <li>• A drawer connector disconnected, loose, defective</li> <li>• TD sensor defective</li> </ul> <ol style="list-style-type: none"> <li>1. Check the black, magenta, cyan, or yellow TD sensor connector and harness between the TD sensor and PCDU for damage.</li> <li>2. Check the drawer connector.</li> <li>3. Replace the defective PCDU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
370	D	<p>ID sensor adjustment error</p> <p>When the Vsg error counter reaches "3", the machine detects "SC370".</p> <p>The Vsg error counter counts "1" when the Vsg detected by ID sensor is more than the value (default: 4.5V) specified with SP3-324-005 or less than the value (default: 3.5V) specified with SP3-324-006.</p> <ul style="list-style-type: none"> <li>• Dirty or defective ID sensor</li> <li>• ID sensor detection surface dirty</li> </ul> <ol style="list-style-type: none"> <li>1. Check the harness of the ID sensor.</li> <li>2. Clean or replace the ID sensor.</li> </ol> <p><b>Note:</b> After replacing the ID sensor, input the ID sensor correction coefficient with SP3362-013 to -018. For details, refer to "ID sensor board" in the Replacement and Adjustment section.</p> <ol style="list-style-type: none"> <li>1. Replace the BCU.</li> <li>2. Replace the ITB unit.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
390-01	C	Drum gear position sensor error: K
-02	C	Drum gear position sensor error: C

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
-03	C	Drum gear position sensor error: M
-04	C	Drum gear position sensor error: Y
		<p>The machine does not detect the drum position signal for 3 seconds at the drum phase adjustment.</p> <ul style="list-style-type: none"> <li>• Dirty or defective drum gear position sensor</li> </ul> <ol style="list-style-type: none"> <li>1. Clean the drum gear position sensor.</li> <li>2. Check the harness connection.</li> <li>3. Replace the drum gear position sensor.</li> <li>4. Replace the PCDU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
396-01	D	Drum/Development motor error: K
-02	D	Drum/Development motor error: C
-03	D	Drum/Development motor error: M
-04	D	Drum/Development motor error: Y
		<p>The machine detects a High signal from the drum/development motor for 2 seconds after the drum/development motor turned on.</p> <ul style="list-style-type: none"> <li>• Overload on the drum/development motor</li> <li>• Defective drum/development motor</li> <li>• Defective harness</li> <li>• Shorted 24 V fuse on the PSU</li> <li>• Defective interlock system</li> </ul> <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the drum/development motor.</li> <li>3. Replace the 24V fuse on the PSU.</li> </ol>



## Service Call Tables - 4

### SC4xx: Image Processing - 3

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
441	D	Image transfer unit motor error
		The motor LOCK signal is not detected for more than two seconds while the motor START signal is on.
		<ul style="list-style-type: none"> <li>• Motor overload</li> <li>• Defective image transfer unit motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the image transfer belt unit.</li> <li>2. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
442	D	Image transfer belt contact motor error
		The image transfer belt contact sensor does not detect the movement of actuator at the sensor while the polygon motor rotates.
		<ul style="list-style-type: none"> <li>• Dirty image transfer belt contact sensor</li> <li>• Defective image transfer belt contact motor</li> <li>• Disconnected connector of image transfer belt contact sensor or motor</li> <li>• Disconnected cable</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the image transfer belt contact sensor.</li> <li>2. Replace the image transfer belt contact motor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
443	C	Image transfer unit error
		The machine detects the encoder sensor error.
		<ul style="list-style-type: none"> <li>• Defective encoder sensor</li> <li>• Image transfer unit installation error</li> <li>• Defective image transfer unit motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check if the image transfer unit is correctly set.</li> <li>2. Replace the image transfer unit motor.</li> <li>3. Replace the image transfer unit.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
452	D	Paper transfer unit contact error
		The paper transfer unit contact sensor does not detect the movement of actuator at the sensor while the polygon motor rotates.
		<ul style="list-style-type: none"> <li>• Defective paper transfer unit contact sensor</li> <li>• Defective paper transfer unit contact motor</li> <li>• Broken +24V fuse on PSU</li> <li>• Defective IOB</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connection between the paper transfer unit and PSU.</li> <li>2. Replace the paper transfer unit contact sensor.</li> <li>3. Replace the paper transfer unit contact motor.</li> <li>4. Replace the +24V fuse on the PSU.</li> <li>5. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
460	D	Separation power pack output error
		An interrupt checks the status of the power pack every 20 ms. This SC is issued if the BCU detects a short in the power pack 10 times at D(ac).
		<ul style="list-style-type: none"> <li>• Damaged insulation on the high-voltage supply cable</li> <li>• Damaged insulation around the high-voltage power supply</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the high-voltage supply cable.</li> <li>2. Replace the high-voltage power supply unit.</li> <li>3. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
490	D	Toner transport motor error
		The LOCK signal is not detected for 2 seconds when the transport motor turns on.
		<ul style="list-style-type: none"> <li>• Toner transport motor overload</li> <li>• Disconnected or broken harness</li> <li>• Defective toner transport motor</li> <li>• Opened +24V fuse on the PSU</li> <li>• Defective interlock switch</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the toner transport motor.</li> <li>3. Replace the +24V fuse on the PSU.</li> <li>4. Replace the interlock switch.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
491	D	High voltage power: Drum / development bias output error
		An error signal is detected for 0.2 seconds when charging the drum or development.
		<ul style="list-style-type: none"> <li>• High voltage leak</li> <li>• Broken harness</li> <li>• Defective drum unit or development unit</li> <li>• Defective high voltage supply unit</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the drum unit or paper transfer unit.</li> <li>3. Replace the high voltage supply unit.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
492	C	High voltage power: Image transfer / paper transfer bias output error
		An error signal is detected for 0.2 seconds when charging the separation, image transfer bet or paper transfer roller.
		<ul style="list-style-type: none"> <li>• High voltage leak</li> <li>• Broken harness</li> <li>• Defective image transfer belt unit or paper transfer unit</li> <li>• Defective high voltage supply unit</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the image transfer belt unit or paper transfer unit.</li> <li>3. Replace the high voltage supply unit.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
497	C	Temperature sensor error
		The thermistor output of the temperature sensor was not within the prescribed range (more than 0.5 V to less than 3.0 V).
		-----
		<ol style="list-style-type: none"> <li>1. Turn the power switch off and on.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
498	C	Temperature and humidity sensor error 2
		<ul style="list-style-type: none"> <li>The thermistor output of the temperature sensor was not within the prescribed range (more than 0.5 V to less than 3.0 V).</li> <li>The thermistor output of the humidity sensor was not within the prescribed range (less than 2.4 V).</li> </ul>
		<ul style="list-style-type: none"> <li>Temperature and humidity sensor harness disconnected, loose, defective</li> <li>Temperature and humidity sensor defective</li> </ul>
		<ol style="list-style-type: none"> <li>Check the connector and harness.</li> <li>Replace the temperature/humidity sensor.</li> </ol>

## Service Call Tables – 5

### SC5xx: Paper Feed and Fusing

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
501	B	Paper Tray 1 error
502	B	Paper Tray 2 error

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		<ul style="list-style-type: none"> <li>• When the tray lift motor rotates counterclockwise, (if the upper limit is not detected within 10 seconds), the machine asks the user to reset the tray.</li> <li>• When the tray lift motor rotates clockwise, (if the upper limit is not detected within 1.5 seconds), the machine asks the user to reset the tray.</li> </ul> <p>If one of these conditions occurs three consecutive times, the SC is generated.</p> <ul style="list-style-type: none"> <li>• Disconnected or defective paper lift sensor</li> <li>• Disconnected or defective tray lift motor</li> <li>• Defective bottom plate lift mechanism</li> <li>• Too much paper in the tray</li> <li>• Defective IOB</li> </ul> <ol style="list-style-type: none"> <li>1. Check if the paper is not loaded too much.</li> <li>2. Check if the bottom plate smoothly moves up and down manually.</li> <li>3. Check and/or replace the tray lift motor/paper lift sensor.</li> <li>4. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
503	B	Tray 3 error (Paper Feed Unit or LCT)
		<p>This SC is generated if the following condition occurs.</p> <p><b>For the paper feed unit:</b></p> <p>When the tray lift motor is turned on, the upper limit is not detected within 15 seconds</p> <p><b>For the LCT:</b></p> <p>The upper or lower limit is not detected within 8 seconds when the tray lift motor is turned on to lift or lower the tray.</p> <p>This SC is generated too if the following condition occurs 3 consecutive times.</p> <p><b>For the paper feed unit:</b></p> <p>When the tray lowers, the tray lift sensor does not go off within 1.5 sec.</p> <p><b>For the LCT:</b></p> <p>When the main switch is turned on or when the LCT is set, if the end fence is not in the home position (home position sensor ON), the tray lift motor stops.</p> <p>If the upper limit does not go off for 1.5 seconds even the tray lift motor turns on to lower the tray after the upper limit has been detected at power on.</p>
		<p><b>For the paper feed unit:</b></p> <ul style="list-style-type: none"> <li>• Defective tray lift motor or connector disconnection</li> <li>• Defective lift sensor or connector disconnection</li> </ul> <p><b>For the LCT:</b></p> <ul style="list-style-type: none"> <li>• Defective stack transport clutch or connector disconnection</li> <li>• Defective tray motor or connector disconnection</li> <li>• Defective end fence home position sensor or connector disconnection</li> <li>• Defective upper limit sensor or connector disconnection</li> <li>• Defective tray lift motor or connector disconnection</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the cable connections.</li> <li>2. Check and/or replace the defective component.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
504	B	Tray 4 error (Paper Feed Unit or LCT)
		<p>This SC is generated if the following condition occurs.</p> <p><b>For the two-tray paper feed unit</b></p> <p>When the tray lift motor is turned on, the upper limit is not detected within 15 seconds.</p> <p><b>For the LCT</b></p> <p>If the upper or lower limit is not detected within 8 seconds when the tray lift motor is turned on to lift up or lower the tray.</p> <p>This SC is generated too if the following condition occurs 3 consecutive times.</p> <p><b>For the two-tray paper feed unit</b></p> <p>When the tray lowers, the tray lift sensor does not go off within 1.5 sec.</p> <p><b>For the LCT</b></p> <p>If the upper limit does not go off for 1.5 seconds even the tray lift motor turns on to lower the tray after the upper limit has been detected at power on.</p>
		<p><b>For the two-tray paper feed unit:</b></p> <ul style="list-style-type: none"> <li>• Defective tray lift motor or connector disconnection</li> <li>• Defective lift sensor or connector disconnection</li> </ul> <p><b>For the LCT:</b></p> <ul style="list-style-type: none"> <li>• Defective stack transport clutch or connector disconnection</li> <li>• Defective tray motor or connector disconnection</li> <li>• Defective end fence home position sensor or connector disconnection</li> <li>• Defective upper limit sensor or connector disconnection</li> <li>• Defective tray lift motor or connector disconnection</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the cable connections.</li> <li>2. Check and/or replace the defective component.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
505	B	Tray 5 error (Optional Paper Feed Unit or LCT)



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		<p>This SC is generated if the following condition occurs.</p> <p><b>For the two-tray paper feed unit</b></p> <p>When the tray lift motor is turned on, the upper limit is not detected within 15 seconds.</p> <p><b>For the LCT 1200-sheet</b></p> <p>If the upper or lower limit is not detected within 8 seconds when the tray lift motor is turned on to lift up or lower the tray.</p> <p>This SC is generated too if the following condition occurs 3 consecutive times.</p> <p><b>For the two-tray paper feed unit</b></p> <p>When the tray lowers, the tray lift sensor does not go off within 1.5 sec.</p> <p><b>For the LCT 1200-sheet</b></p> <p>If the upper limit does not go off for 1.5 seconds even the tray lift motor turns on to lower the tray after the upper limit has been detected at power on.</p>
		<ul style="list-style-type: none"> <li>• Defective tray lift motor or connector disconnection</li> <li>• Defective lift sensor or connector disconnection</li> </ul>
		<ol style="list-style-type: none"> <li>1. Turn the power switch off and on.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
520		Registration motor error
-01		
-02		Paper feed motor error
	C	The IOB does not receive the lock signal.
		<ul style="list-style-type: none"> <li>• Motor overload</li> <li>• Defective registration motor</li> <li>• Disconnected or broken harness</li> <li>• Defective IOB</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the cable connection.</li> <li>2. Replace the harness.</li> <li>3. Replace the registration motor.</li> <li>4. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
530	D	Fusing fan error
		The IOB does not receive the lock signal 100 ms after turning on the fusing fan.
		<ul style="list-style-type: none"> <li>Defective fusing fan motor or connector disconnection</li> <li>Defective IOB</li> </ul>
		1. Check the connector and/or replace the fusing fan motor.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
531	D	QSU fan error
		The machine does not detect the fan motor lock signal for 100 ms while the QSU fan turns on.
		<ul style="list-style-type: none"> <li>Disconnected harness</li> <li>Overload on the QSU fan motor</li> <li>Defective QSU fan motor</li> <li>Defective IOB</li> </ul>
		<ol style="list-style-type: none"> <li>Check or replace the harness.</li> <li>Replace the QSU fan.</li> <li>Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
532-01	D	Ventilation fan (at the left side of the machine) motor error: front end
-02	D	Ventilation fan (at the left side of the machine) motor error: rear end
-03	D	Ventilation fan (at the left side of the machine) motor error: front in the middle
-04	D	Ventilation fan (at the left side of the machine) motor error: rear in the middle

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		The IOB does not receive the lock signal for 100 ms after turning on the ventilation fan motor in the front end, rear end, front in the middle, or rear in the middle.
		<ul style="list-style-type: none"> <li>• Defective ventilation fan motor in the front end, rear end, front in the middle, or rear in the middle</li> <li>• Defective IOB</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the ventilation fan (at the left side of the machine) motor in the front end, rear end, front in the middle, or rear in the middle.</li> <li>2. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
533 -01	D	Second duct fan error 1
-02	D	Second duct fan error 2
		The machine does not detect the fan motor lock signal for 100 ms while the second duct fan turns on.
		<ul style="list-style-type: none"> <li>• Disconnected harness</li> <li>• Overload on the second duct fan motor</li> <li>• Defective second duct motor</li> <li>• Defective IOB</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the second duct fan.</li> <li>3. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
534 -01	D	Third duct fan error
-02	D	Tube cooling fan error

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		<p>The machine does not detect the fan motor lock signal for 100 ms while the third duct fan or tube cooling fan turns on.</p> <ul style="list-style-type: none"> <li>• Disconnected harness</li> <li>• Overload on the third duct fan motor or tube cooling fan motor</li> <li>• Defective third duct motor or tube cooling motor</li> <li>• Defective IOB</li> </ul> <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the third duct fan or tube cooling fan.</li> <li>3. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
535	D	<p>Paper exit fan error</p> <p>The machine does not detect the fan motor lock signal for 100 ms while the paper exit fan turns on.</p> <ul style="list-style-type: none"> <li>• Disconnected harness</li> <li>• Overload on the paper exit fan motor</li> <li>• Defective paper exit motor</li> <li>• Defective IOB</li> </ul> <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the paper exit fan.</li> <li>3. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
538	D	AC controller board fan error
		The machine does not detect the fan motor lock signal for 100 ms while the AC controller board fan turns on.
		<ul style="list-style-type: none"> <li>• Disconnected harness</li> <li>• Overload on the AC controller board fan motor</li> <li>• Defective AC controller board fan motor</li> <li>• Defective IOB</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the AC controller board fan.</li> <li>3. Replace the IOB.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
540	D	Fusing/Paper exit motor error
		The IOB does not receive the lock signal 100 ms after turning on the fusing/paper exit motor.
		<ul style="list-style-type: none"> <li>• Motor overload</li> <li>• Defective fusing/paper exit motor</li> <li>• Shorted +24V fuse on the PSU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the fusing/paper exit motor.</li> <li>3. Replace the +24V fuse on the PSU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
541	A	Heating roller thermopile error
		The temperature detected by the heating roller thermopile does not reach 0°C for 6 seconds.
		<ul style="list-style-type: none"> <li>Loose connection of the heating roller thermopile</li> <li>Defective heating roller thermopile</li> <li>Defective thermopile</li> </ul>
		<ol style="list-style-type: none"> <li>Check if the heating roller thermopile is firmly connected.</li> <li>Replace the heating roller thermopile.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
542	A	Heating roller warm-up error 1
		<ul style="list-style-type: none"> <li>The heating roller temperature does not reach 80°C for 20 seconds after the inverter turned on.</li> <li>The center temperature of the heating roller does not reach the ready temperature for 90 seconds after the fusing lamp turned on.</li> </ul>
		<ul style="list-style-type: none"> <li>Dirty or defective thermopile</li> </ul>
		<ol style="list-style-type: none"> <li>Check if the heating roller thermopile is firmly connected.</li> <li>Replace the thermopile.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
543	A	Heating roller overheat: Center (software error)
		The detected fusing temperature stays at 215°C for 1 second for 10 consecutive times.
		<ul style="list-style-type: none"> <li>Defective AC controller board</li> <li>Defective IOB</li> <li>Defective IPU</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the AC controller board.</li> <li>Replace the IOB.</li> <li>Replace the IPU.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
544	A	Heating roller overheat: Center (hardware error)
		During stand-by mode or a print job, the detected heating roller temperature reaches 220°C.
		<ul style="list-style-type: none"> <li>Defective AC controller board</li> <li>Defective IOB</li> <li>Defective IPU</li> <li>Defective fusing control system</li> </ul>
		Related SC code: SC 543
		<ol style="list-style-type: none"> <li>Replace the AC controller board.</li> <li>Replace the IOB.</li> <li>Replace the IPU.</li> <li>Replace the fusing unit and reset the counter of the fusing unit using SP3-902-014.</li> </ol> <p><b>Important:</b> The fusing unit cannot be used because an abnormal high temperature was detected.</p> <p>After this SC occurs, the counter reset of the fusing unit should be done manually using SP3-902-014 because the counter reset is not done automatically.</p>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
545	A	Fusing Heater error: Center
		The fusing heater keeps full power for 23 seconds or more.
		<ul style="list-style-type: none"> <li>Defective thermistors</li> <li>Disconnected cables</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the thermistors.</li> <li>Check and replace the cables.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
547	D	Zero cross error
		<ul style="list-style-type: none"> <li>• The zero cross signal is detected three times even though the heater relay is off when turning on the main power.</li> <li>• The zero cross signal is not detected for 3 seconds even though the heater relay is on after turning on the main power or closing the front door.</li> <li>• The detection error occurs twice or more in the 11 zero cross signal detections. This error is defined when the detected zero cross signal is 39 or less.</li> </ul>
		<ul style="list-style-type: none"> <li>• Defective fusing relay</li> <li>• Defective fusing relay circuit</li> <li>• Shorted +24V fuse on the AC controller board.</li> <li>• Unstable power supply</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the power supply source.</li> <li>2. Replace the +24V fuse on the AC controller board.</li> <li>3. Replace the PSU</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
549	A	Fusing heater connection error
		The heating roller rotation sensor detects the target temperature as 50°C for 5 seconds or more after the fusing/paper exit motor has turned on.
		<ul style="list-style-type: none"> <li>• Broken heater cables</li> <li>• Defective connectors</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the cable connection.</li> <li>2. Replace the heater cables.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
551	A	Heating roller thermistor error
		The temperature at the end of the heating roller measured by the heating roller thermistor does not reach 0°C for 7 seconds.
		<ul style="list-style-type: none"> <li>Loose connection of pressure roller thermistor</li> <li>Defective heating roller thermistor</li> </ul>
		Related SC code: SC 541
		<ol style="list-style-type: none"> <li>Check that the heating roller thermistor is firmly connected.</li> <li>Replace the heating roller thermistor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
552	A	Heating roller warm-up error 2
		<ul style="list-style-type: none"> <li>The heating roller temperature does not reach 80°C for 20 seconds after the inverter turned on.</li> <li>The temperature at the end of the heating roller does not reach the ready temperature for 89 seconds after the fusing lamp turned on.</li> </ul>
		<ul style="list-style-type: none"> <li>Defective heating roller thermistor</li> <li>Defective inverter</li> </ul>
		Related SC code: SC 542
		<ol style="list-style-type: none"> <li>Check if the heating roller thermistor is firmly connected.</li> <li>Replace the inverter.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
553	A	Heating roller overheat: End (software error)
		The detected heating roller temperature stays at 215°C or more for 1 second for 10 consecutive times.
		<ul style="list-style-type: none"> <li>Defective AC controller board</li> <li>Defective IOB</li> <li>Defective IPU</li> </ul>
		Related SC code: SC 543
		<ol style="list-style-type: none"> <li>Replace the AC controller board.</li> <li>Replace the IOB.</li> <li>Replace the IPU.</li> </ol>

6



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
554	A	Heating roller overheat: End (hardware error)
		The heating roller thermistor detects 220°C or more.
		<ul style="list-style-type: none"> <li>Defective AC controller board</li> <li>Defective IOB</li> <li>Defective IPU</li> <li>Defective fusing control system</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the AC controller board.</li> <li>Replace the IOB.</li> <li>Replace the IPU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
555	A	Fusing Heater error: End
		The fusing heater keeps full power for 19 seconds or more.
		<ul style="list-style-type: none"> <li>Defective thermistors</li> <li>Disconnected cables</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the thermistors.</li> <li>Check and replace the cables.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
557	C	Zero cross frequency error
		When the zero cross signal is 66 or more and it is detected 10 times or more in 11 detections, the machine determines that input 60 Hz and SC557 occurs.
		<ul style="list-style-type: none"> <li>Noise (High frequency)</li> <li>Defective AC control board</li> </ul>
		<ol style="list-style-type: none"> <li>Check the power supply source.</li> <li>Replace the AC control board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
559	A	Consecutive fusing jam
		The paper jam counter for the fusing unit reaches 3 times. The paper jam counter is cleared if the paper is fed correctly.
		This SC is activated only when SP1-159-001 is set to "1" (default "0").
		<ul style="list-style-type: none"> <li>Paper jam in the fusing unit.</li> </ul>
		Remove the paper that is jammed in the fusing unit. Then make sure that the fusing unit is clean and has no obstacles in the paper feed path.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
561	A	Pressure roller thermistor error: End
		The temperature at the end of the pressure roller measured by the thermistor does not reach 0°C for 37 seconds.
		<ul style="list-style-type: none"> <li>• Loose connection of the thermistor</li> <li>• Defective thermistor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check if the thermistor is firmly connected.</li> <li>2. Replace the thermistor at the end of the pressure roller.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
562	A	Pressure roller thermistor warm-up error: End
		The heating roller rotation sensor does not reach 20°C for 100 seconds after the fusing/paper exit motor has turned on with sheets of 257 mm or more in width.
		<ul style="list-style-type: none"> <li>• Dirty thermopile lenses</li> <li>• Defective thermistor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Clean the thermopile lenses.</li> <li>2. Replace the thermistor at the end of the pressure roller.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
563	A	Pressure roller overheat: End (software error)
		The detected pressure roller temperature stays at 215°C or more for 1 second for 10 consecutive times.
		<ul style="list-style-type: none"> <li>• Defective AC control board</li> <li>• Defective IOB</li> <li>• Defective IPU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the AC control board.</li> <li>2. Replace the IOB.</li> <li>3. Replace the IPU.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
564	A	Pressure roller overheat: End (hardware error)
		The thermistor detects 220°C or more.
		<ul style="list-style-type: none"> <li>• Defective AC control board</li> <li>• Defective IOB</li> <li>• Defective IPU</li> <li>• Defective fusing control system</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the AC control board.</li> <li>2. Replace the IOB.</li> <li>3. Replace the IPU.</li> <li>4. Replace the fusing unit and reset the counter of the fusing unit using SP3-902-014.</li> </ol> <p><b>Important:</b> The fusing unit cannot be used because an abnormal high temperature was detected.</p> <p>After this SC occurs, the counter reset of the fusing unit should be done manually using SP3-902-014 because the counter reset is not done automatically.</p>


No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
569 -00	D	Pressure roller contact sensor error
		Pressure roller contact sensor does not detect the pressure roller position three times.
		<ul style="list-style-type: none"> <li>• Broken or defective pressure roller contact sensor</li> <li>• Deformed or broken pressure roller contact sensor feeler</li> <li>• Defective pressure roller contact motor</li> <li>• Defective fusing unit</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check or replace the harness of the pressure roller contact sensor.</li> <li>2. Replace the pressure roller contact sensor.</li> <li>3. Replace the pressure roller contact motor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
569 -01	D	Fusing shutter sensor error
		Fusing shutter plate home position sensor error is detected three consecutive times.
		<ul style="list-style-type: none"> <li>Defective fusing shutter plate home position sensor</li> <li>Defective connectors</li> </ul>
		<ol style="list-style-type: none"> <li>Check or replace the harness of the fusing shutter plate home position sensor.</li> <li>Replace the fusing shutter plate home position sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
571 -00	A	Pressure roller thermistor error: Center
		The center temperature of the pressure roller measured by the thermistor does not reach 0°C for 37 seconds.
		<ul style="list-style-type: none"> <li>Loose connection of the thermistor</li> <li>Defective thermistor</li> </ul>
		<ol style="list-style-type: none"> <li>Check if the thermistor is firmly connected.</li> <li>Replace the center thermistor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
572 -02	A	Pressure roller thermistor warm-up error: Center
		The center temperature of the pressure roller measured by the thermistor does not reach 20°C within 100 seconds after the heater turns on.
		<ul style="list-style-type: none"> <li>Dirty thermopile lenses</li> <li>Defective thermistor</li> </ul>
		<ol style="list-style-type: none"> <li>Clean the thermopile lenses.</li> <li>Replace the thermistor at the end of the pressure roller.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
573	A	Pressure roller overheat : Center (software error)
		The detected pressure roller temperature stays at 215°C or more for 1 second for 10 consecutive times.
		<ul style="list-style-type: none"> <li>• Defective IOB</li> <li>• Defective IPU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the IOB.</li> <li>2. Replace the IPU.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
574	A	Pressure roller overheat : Center (hardware error)
		The thermistor detects 220°C or more.
		<ul style="list-style-type: none"> <li>• Defective IOB</li> <li>• Defective IPU</li> <li>• Defective fusing control system</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the IOB.</li> <li>2. Replace the IPU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
581	A	NC sensor broken: Center
		The sensor detects -17°C or less for 100 seconds.
		<ul style="list-style-type: none"> <li>• Broken cables of thermopile or thermistor</li> <li>• Defective connection of connectors</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check and replace the connection of the cables and connectors.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
591	A	NC sensor broken: End
		The sensor detects -17°C or less for 100 seconds.
		<ul style="list-style-type: none"> <li>• Broken cables of thermopile or thermistor</li> <li>• Defective connection of connectors</li> </ul>
		1. Check and replace the connection of the cables and connectors.

## Service Call Tables - 6

### SC6xx: Device Communication

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
610	D	Mechanical counter error: K
		This SC is only for NA models.
		The machine detects the mechanical counter error when SP5-987-001 is set to "1 (ON)".
		<ul style="list-style-type: none"> <li>• Disconnected mechanical counter</li> <li>• Defective mechanical counter</li> </ul>
		1. Check or replace the mechanical counter.



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
620	D	ARDF communication error
		After the ARDF is detected, the break signal occurs or communication timeout occurs.
		<ul style="list-style-type: none"> <li>• Incorrect installation of ARDF</li> <li>• ARDF defective</li> <li>• IPU board defective</li> <li>• External noise</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the cable connection of the ARDF.</li> <li>2. Shut out the external noise.</li> <li>3. Replace the ARDF.</li> <li>4. Replace the IPU board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
621	D	Finisher communication error
622	D	Paper tray unit communication error
		<p>While the IOB communicates with an optional unit, an SC code is displayed if one of following conditions occurs.</p> <ul style="list-style-type: none"> <li>• The IOB receives the break signal which is generated by the peripherals only just after the main switch is turned on.</li> <li>• When the IOB does not receive an OK signal from a peripheral 100ms after sending a command to it. The IOB resends the command. The IOB does not receive an OK signal after sending the command 3 times.</li> </ul>
		<ul style="list-style-type: none"> <li>• Cable problems</li> <li>• IOB problems</li> <li>• BCU problems</li> <li>• PSU problems in the machine</li> <li>• Main board problems in the peripherals</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check if the cables of peripherals are correctly connected.</li> <li>2. Replace the IOB or main board of peripherals.</li> <li>3. Replace the BCU if no power is supplied to peripherals.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
623	D	2nd Paper Bank communication error
		This SC is not issued for this machine.
		When a communication error signal between the 1st paper bank and 2nd paper bank is received.
		<ul style="list-style-type: none"> <li>Loose or disconnected connector</li> </ul>
		Check the connection between the main machine and paper feed unit.


No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
632	B	Counter device error 1
		After 3 attempts to send a data frame to the optional counter device via the serial communication line, no ACK signal was received within 100 ms.
		<ul style="list-style-type: none"> <li>Serial line between the optional counter device, the relay board and copier control board is disconnected or damaged.</li> <li>Make sure that SP5113 is set to enable the optional counter device.</li> </ul>
		<ol style="list-style-type: none"> <li>Check if the setting of the SP5113 is correctly set.</li> <li>Check the connection between the main machine and optional counter device.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
633	B	Counter device error 2
		After communication is established, the controller receives the brake signal from the accounting device.
		<ul style="list-style-type: none"> <li>Serial line between the optional counter device, the relay board and copier control board is disconnected or damaged.</li> <li>Make sure that SP5113 is set to enable the optional counter device.</li> </ul>
		<ol style="list-style-type: none"> <li>Check if the setting of the SP5113 is correctly set.</li> <li>Check the connection between the main machine and optional counter device.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
634	B	Counter device error 3
		A backup RAM error was returned by the counter device.
		<ul style="list-style-type: none"> <li>Counter device control board defective</li> <li>Backup battery of counter device defective</li> </ul>
		Replace the counter device.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
635	B	Counter device error 4
		A backup battery error was returned by the counter device.
		<ul style="list-style-type: none"> <li>Counter device control board defective</li> <li>Backup battery of counter device defective</li> </ul>
		Replace the counter device.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
636	D	SD Card Error

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
01	-	Expanded authentication module error
		There is no expanded authentication module in the machine. The SD card or the file of the expanded authentication module is broken. There is no DESS module in the machine.
		<ul style="list-style-type: none"> <li>• No expanded authentication module</li> <li>• Defective SD card</li> <li>• Defective file of the expanded authentication module</li> <li>• No DESS module</li> </ul>
		<ol style="list-style-type: none"> <li>1. Install the expanded authentication module.</li> <li>2. Install the SD card.</li> <li>3. Install the DESS module.</li> <li>4. Set the super service SP as follows and turn the main switch off and on. <ol style="list-style-type: none"> <li>1. User limitation: Set SP5-401-160 (expanded authentication management setting) to 0.</li> <li>2. User limitation: Set SP5-401-161 (expanded authentication management detailed setting) to 0.</li> </ol> </li> <li>5. Execute SP5-876-1 (security all clear). If this is a mass-produced machine, replace the NV. </li> </ol>
02	-	Version error
		The version of the expanded authentication module is not correct.
		<ul style="list-style-type: none"> <li>• Incorrect module version</li> </ul>
		Install the correct file of the expanded authentication module.
11	-	OSM user code file error
		The correct "usercode" file could not be found in the root folder of the SD card because the file is not present, or the existing file is corrupted or the wrong type file.
		Create the usercode files with the User Setting Tool "IDissuer.exe" and store the files in the root folder of the SD card. <b>Note:</b> Make sure the eccm.mod file is in the root folder of the SD card.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
637	D	Tracking information notice error
-001		Ttracking application error
		Tracking information is lost.
		The machine failed to give notice of the tracking information to the tracking SDK application. Tracking information is lost, and the machine cannot count correctly.
		1. Turn the main switch off and on.
-002		Management server error
		Tracking information is lost.
		The machine failed to give notice of the tracking information to the management server. Tracking information is lost, and the machine cannot count correctly.
		1. Turn the main switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
640	-	Communication error: Engine -> Controller (Check sum error)
		Sum value is added each command frame. Sum check means: STX xx xx xx xx sum ETX -> The least significant 7 bits of xx + xx + xx+ xx is compared with the sum Example: STX 80h 81h 82h 83h 06h ETX -> 80h + 81h + 82h + 83h = 206h If sum value is 06h, data is correct. This SC is not displayed when it occurs; count is executed only by logging.
		Hard error with PCI
		1. Turn the main switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
641	D	Communication error: Engine -> Controller (No response)
		No response from engine to frame after frame sending from controller with RAPI protocol. (No response after 3 attempts of sending every 100 ms)
		Asserts the error detected by the serial driver from PSC module to SRM with RAPI command.
		1. Turn the main switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
641	D	Engine serial communication error
		An error occurs in serial communication with engine.
		<ul style="list-style-type: none"> <li>• SC641-001: Timeout error</li> <li>• SC641-002: Retry over</li> <li>• SC641-003: Download error</li> <li>• SC641-004: UART error</li> </ul>
		Turn the main switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
650	B	Communication error of the remote service modem (Cumin-M)
-01	-	Authentication error
		The authentication for the Cumin-M fails at a dial up connection.
		<ul style="list-style-type: none"> <li>• Incorrect SP settings</li> <li>• Disconnected telephone line</li> <li>• Disconnected modem board</li> <li>• Disconnected wireless LAN card</li> </ul>
		1. Check and set the correct user name (SP5-816-156) and password (SP5-816-157).

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
-04	-	Incorrect modem setting
		Dial up fails due to the incorrect modem setting.
		Same as -01
		1. Check and set the correct AT command (SP5-816-160).
-05	-	Communication line error
		The supplied voltage is not sufficient due to the defective communication line or defective connection.
		Same as -01
		1. Consult with the user's local telephone company.
-13	-	No modem board
		Modem board is not installed even though the setting at Cumin-M (During the operation)
		Same as -01
		1. Install the modem board if it is not installed. 2. Check correct setting value for modem driver (SP5-816-160, SP5-816-165 to 171, SP5-816-188 and 189). 3. Replace the modem board.
-14	-	The modem board is installed
		The modem board is installed even though the setting at Cumin-N. Or wired/wireless LAN is not working normally.
		Same as -01
		1. Uninstall the modem board if it is installed. 2. Check that the wired/wireless LAN is working properly.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
651	C	Incorrect dial up connection
-01	-	Chat program parameter error

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
-02	-	Chat program execution error
		An unexpected error occurs when the modem (Cumin-M) tries to call the center with a dial up connection.
		<ul style="list-style-type: none"> <li>• Caused by a software bug</li> </ul>
		No action required because this SC does not interfere with operation of the machine.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
652	D	Remote service ID2 mismatching
		ID2 for @Remote certification is mismatching between the controller board and NVRAM.
		<ul style="list-style-type: none"> <li>• Used controller board installed</li> <li>• Used NVRAM installed</li> </ul>
		An unexpected error occurs when the modem (Embedded RCG-M) tries to call the center with a dial up connection.
		<ol style="list-style-type: none"> <li>1. Install the correct controller board or anew controller board.</li> <li>2. Install the correct NVRAM or new NVRAM.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
653	D	Incorrect remote service ID2
		ID2 stored in the NVRAM is incorrect.
		<ul style="list-style-type: none"> <li>• Used NVRAM installed</li> </ul>
		An unexpected error occurs when the modem (Embedded RCG-M) tries to call the center with a dial up connection
		Clear the ID2 in the NVRAM, and then input a correct ID2.



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
669	D	EEPROM communication error
		Retry of EEPROM communication fails three times after the machine has detected the EEPROM error.
		<ul style="list-style-type: none"> <li>Caused by noise</li> </ul>
		Turn the main power switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
670	D	Engine start up error
		The BCU fails to respond within the prescribed time when the machine is turned on.
		Connections between BCU and controller board are loose, disconnected, or damaged.
		<ol style="list-style-type: none"> <li>Replace the BCU</li> <li>Replace the controller board</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
672	D	Controller start up error
		<ul style="list-style-type: none"> <li>• After the machine is powered on, the communication between the controller and the operation panel is not established, or communication with controller is interrupted after a normal startup.</li> <li>• After startup reset of the operation panel, the attention code (FDH) or the attention acknowledge code (FEH) is not sent from the controller within 30 seconds.</li> <li>• After the controller issues a command to check the communication line with the controller at 30-second intervals, the controller fails to respond twice.</li> </ul>
		<ul style="list-style-type: none"> <li>• Controller stalled</li> <li>• Controller board installed incorrectly</li> <li>• Controller board defective</li> <li>• Operation panel connector loose or defective</li> <li>• The controller is not completely shut down when the main switch is turned off.</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the setting of SP5-875-001. If the setting is set to "1 (OFF)", change it to "0 (ON)"</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
681	D	Toner bottle ID: Communication error
		<ul style="list-style-type: none"> <li>• Communication error occurs when the toner bottle ID starts to communicate with the toner bottle ID receptor.</li> <li>• Retry of toner bottle ID communication fails three times after the machine has detected the toner bottle ID communication error.</li> </ul>
		<ul style="list-style-type: none"> <li>• Defective toner bottle ID reader and writer</li> <li>• Disconnected ASAP I/F</li> <li>• No memory chip on the toner cartridge</li> <li>• Noise</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the toner bottle detection board.</li> <li>2. Replace the toner cartridge.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
682	D	Memory chip at TD sensor: Communication error
		Retry of memory chip communication fails three times after the machine has detected the memory chip communication error.
		<ul style="list-style-type: none"> <li>• Damaged memory chip data</li> <li>• Disconnected inter face</li> <li>• No memory chip on the development unit</li> <li>• Noise</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the PCDU.</li> <li>2. Replace the BCU.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
683	B	RFID: Unit check error
		The machine gets RFID communication error even the toner cartridges have not been installed in the machine.
		Caused by noise
		Turn the main power switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
687	D	Memory address command error
		The BCU does not receive a memory address command from the controller 120 seconds after paper is in the position for registration.
		<ul style="list-style-type: none"> <li>• Loose connection</li> <li>• Defective controller</li> <li>• Defective BCU</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check if the controller is firmly connected to the BCU.</li> <li>2. Replace the controller.</li> <li>3. Replace the BCU.</li> </ol>

## Service Call Tables - 7

### SC7xx: Peripherals

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
700 -01	D	ADF original table lift malfunction
		One of the following conditions was detected. <ul style="list-style-type: none"> <li>• The bottom plate position sensor does not activate when the bottom plate motor lifts the original table.</li> <li>• The bottom plate HP sensor does not activate when the bottom plate motor lowers the original table.</li> </ul>
		<ul style="list-style-type: none"> <li>• Loose, broken or defective harnesses, connectors of the bottom plate position sensor, bottom plate HP sensor, bottom plate motor</li> <li>• Defective bottom plate position sensor</li> <li>• Defective bottom plate HP sensor</li> <li>• Defective bottom plate motor</li> <li>• Defective ADF main control board</li> </ul>
		<p>Bottom plate motor rotation:</p> <ol style="list-style-type: none"> <li>1. Check or replace the bottom plate position sensor.</li> <li>2. Check or replace the bottom plate HP sensor.</li> </ol> <p>No bottom plate motor rotation:</p> <ol style="list-style-type: none"> <li>1. Replace the bottom plate motor.</li> <li>2. Replace the ADF main control board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
700 -02	D	Original pick-up HP error
		When the pick-up motor turns on clockwise, the original pick-up HP sensor does not detect the home position of the original calling.
		<ul style="list-style-type: none"> <li>• Defective original pick-up HP sensor</li> <li>• Defective pick-up motor</li> <li>• Defective DF drive board</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the DF drive board if the pick-up motor does not work correctly.</li> <li>2. Replace the pick-up motor.</li> <li>3. Replace the original pick-up HP sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
700 -03	D	Original stopper HP error
		When the pick-up motor turns on clockwise, the original stopper HP sensor does not detect the home position of the original stopper.
		<ul style="list-style-type: none"> <li>• Detached timing belt for the pick-up motor</li> <li>• Defective original stopper HP sensor</li> <li>• Defective pick-up motor</li> <li>• Defective DF drive board</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the timing belt for the pick-up motor.</li> <li>2. Replace the DF drive board if the pick-up motor does not work correctly.</li> <li>3. Replace the pick-up motor.</li> <li>4. Replace the original stopper HP sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
700 -12	D	DF fan error
		DF fan motor lock signal is detected after original transportation has finished.
		<ul style="list-style-type: none"> <li>• DF fan motor dirty</li> <li>• Disconnected or broken harnesses</li> <li>• Defective DF fan motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Clean the DF fan motor.</li> <li>2. Check or replace the harness with the DF fan motor.</li> <li>3. Replace the DF fan motor..</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
701	D	Pick-up roller HP error
		When the pick-up motor turns on counterclockwise, the pick-up roller HP sensor does not detect the home position of the pick-up roller.
		<ul style="list-style-type: none"> <li>• Defective pick-up roller HP sensor</li> <li>• Defective pick-up motor</li> <li>• Defective DF drive board</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the DF drive board if the pick-up motor does not work correctly.</li> <li>2. Replace the pick-up motor.</li> <li>3. Replace the pick-up roller HP sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -24	B	Finisher exit guide plate motor error
		After moving away from the guide plate position sensor, the exit guide is not detected at the home position within the prescribed time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>• Guide plate motor disconnected, defective</li> <li>• Guide plate motor overloaded due to obstruction</li> <li>• Guide plate position sensor disconnected, defective</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections and cables for the components mentioned above.</li> <li>2. Check for blockages in the guide plate motor mechanism.</li> <li>3. Replace the guide plate position sensor and/or guide plate motor</li> <li>4. Replace the finisher main board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -25	B	Finisher punch motor error
		The punch HP sensor is not activated within the specified time after the punch motor turned on. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>• Punch HP sensor disconnected, defective</li> <li>• Punch motor disconnected or defective</li> <li>• Punch motor overload due to obstruction</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections and cables for the punch motor and HP sensor.</li> <li>2. Check for blockages in the punch motor mechanism.</li> <li>3. Replace the punch HP sensor and/or punch motor</li> <li>4. Replace the finisher main board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -30	B	Finisher jogger motor error
		<p>The jogger fences move out of the home position but the HP sensor output does not change within the specified number of pulses.</p> <p>The 1st failure issues an original jam message, and the 2nd failure issues this SC code.</p>
		<ul style="list-style-type: none"> <li>• Jogger HP sensor disconnected, defective</li> <li>• Jogger motor disconnected, defective</li> <li>• Jogger motor overloaded due to obstruction</li> <li>• Finisher main board and jogger motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections and cables for the components mentioned above.</li> <li>2. Check for blockages in the jogger motor mechanism.</li> <li>3. Replace the jogger HP sensor and/or jogger motor.</li> <li>4. Replace the finisher main board.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -41	B	Stack feed-out motor error
		<ul style="list-style-type: none"> <li>• The stack feed-out HP sensor does not detect the home position of the stack feed-out belt 3000ms after the stack feed-out belt has moved to its home position.</li> <li>• The stack feed-out HP sensor does not turn off 200 ms after the stack feed-out belt has moved from its home position.</li> <li>• The 1st detection failure causes a jam error, and the 2nd failure causes this SC code.</li> </ul>
		<ol style="list-style-type: none"> <li>1. Defective stack feed-out HP sensor</li> <li>2. Overload on the stack feed-out motor</li> <li>3. Defective stack feed-out motor <ul style="list-style-type: none"> <li>• Defective main board</li> <li>• Disconnected or defective harness</li> </ul> </li> </ol>
<ol style="list-style-type: none"> <li>1. Check the connections and cables for the components mentioned above.</li> <li>2. Check for blockages in the stack feed-out motor mechanism.</li> <li>3. Replace the stack feed-out HP sensor and/or stack feed-out motor.</li> <li>4. Replace the finisher main board.</li> </ol>		

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -42	B	Finisher stapler movement motor error
		The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. <b>For the 2000/3000-sheet (booklet) finisher</b> <ul style="list-style-type: none"> <li>Staple movement is not finished for a certain time.</li> </ul> <b>For the 1000-sheet finisher</b> <ul style="list-style-type: none"> <li>The stapler HP sensor is not activated within the specified time after the stapler motor turned on. (First detection: jam error, consecutive twice detection SC code).</li> </ul>
		<ul style="list-style-type: none"> <li>Motor overload</li> <li>Loose connection of the stapler home position sensor</li> <li>Loose connection of the stapler movement motor</li> <li>Defective stapler home position sensor</li> <li>Defective stapler movement motor</li> </ul>
		<ol style="list-style-type: none"> <li>Check the connection of the stapler movement motor.</li> <li>Check the connection of the stapler home position sensor.</li> <li>Replace the stapler home position sensor.</li> <li>Replace the stapler movement motor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -43	B	Finisher corner stapler rotation motor error
		The stapler does not return to its home position within the specified time after stapling. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>Defective stapler rotation motor</li> <li>Overload to the stapler rotation motor</li> <li>Defective stapler rotation HP sensor</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the stapler rotation motor.</li> <li>Replace the stapler rotation HP sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -44	B	Finisher corner stapler motor error
		The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. <b>For the 2000/3000-sheet (booklet) finisher</b> <ul style="list-style-type: none"> <li>Staple movement is not finished after a certain time.</li> </ul> <b>For the 1000-sheet finisher</b> <ul style="list-style-type: none"> <li>The stapler motor does not switch off within the prescribed time after operating.</li> <li>The HP sensor of the staple unit does not detect the home position after the staple unit moves to its home position.</li> <li>The HP sensor of the staple unit detects the home position after the staple unit moves from its home position.</li> </ul>
		<ul style="list-style-type: none"> <li>Staple jam</li> <li>Motor overload</li> <li>Defective stapler motor</li> </ul>
		<ol style="list-style-type: none"> <li>Check the connections and cables for the components mentioned above.</li> <li>Replace the HP sensor and/or stapler motor</li> <li>Replace the finisher main board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -52	B	Finisher folder plate motor error
		The folder plate moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>Folder plate HP sensor disconnected, defective</li> <li>Folder plate motor disconnected, defective</li> <li>Folder plate motor overloaded due to obstruction.</li> </ul>
		<ol style="list-style-type: none"> <li>Check the connections and cables for the folder plate motor and HP sensor.</li> <li>Check for blockages in the folder plate motor mechanism.</li> <li>Replace the folder plate HP sensor and/or folder plate motor</li> <li>Replace the finisher main board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -53	B	Fold unit bottom fence motor error
		The bottom fence of the fold unit moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>• Motor harness disconnected, loose, defective</li> <li>• Defective motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections to the fold unit bottom fence motor.</li> <li>2. Replace the fold unit bottom fence motor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -55	B	Clamp roller retraction motor error
		The clamp roller retraction motor moves but is not detected at the home position within the specified time.
		The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>• Motor harness disconnected, loose, defective</li> <li>• Defective motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections to the clamp roller retraction motor motor.</li> <li>2. Replace the clamp roller retraction motor motor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -57	B	Stack junction gate motor error
		The stack junction gate moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>• Motor harness disconnected, loose, defective</li> <li>• Defective motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections to the stack junction gate motor.</li> <li>2. Replace the stack junction gate.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -60	B	Booklet stapler motor error 1
		The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. <b>For the 2000/3000-sheet (booklet) finisher</b>
		The front stapler unit saddle-stitch motor does not start operation within the specified time.
		<ul style="list-style-type: none"> <li>• Motor overload</li> <li>• Loose connection of the front stapler motor</li> <li>• Defective front stapler motor</li> </ul>
		1. Replace the front stapler motor.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -61	B	Booklet staple motor error 2
		The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. <b>For the 2000/3000-sheet (booklet) finisher</b>
		The rear stapler unit saddle-stitch motor does not start operation within the specified time.
		<ul style="list-style-type: none"> <li>• Motor overload</li> <li>• Loose connection of the rear stapler motor</li> <li>• Defective rear stapler motor</li> </ul>
		1. Replace the front stapler motor.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -70	B	1000/2000/3000-sheet (booklet) finisher: Tray lift motor error
		The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. The upper tray paper height sensor does not change its status with the specified time after the tray raises or lowers.
		<ul style="list-style-type: none"> <li>• Motor overload</li> <li>• Loose connection of the shift tray motor</li> <li>• Defective shift tray motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections to the shift tray motor.</li> <li>2. Replace the shift tray motor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -71	B	Finisher Tray 1 shift motor error
		The shift roller HP sensor of the upper tray does not activate within the prescribed time after the shift tray starts to move toward or away from the home position. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>• Shift tray HP sensor of the upper tray disconnected, defective</li> <li>• Shift tray motor of the upper tray is disconnected, defective</li> <li>• Shift tray motor of the upper tray overloaded due to obstruction</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections and cables for the components mentioned above.</li> <li>2. Check for blockages in shift motor mechanism.</li> <li>3. Replace the shift tray HP sensor and/or shift motor</li> <li>4. Replace the finisher main board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -75	B	Stacking sponge roller motor
		Occurs during the operation of the stacking sponge roller motor.
		<ul style="list-style-type: none"> <li>• Disconnected, looser or defective motor harness</li> <li>• Motor overloaded</li> <li>• Disconnected, loose or defective sensor harness</li> <li>• Defective stacking sponge roller motor</li> <li>• Defective stacking roller HP sensor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections of the stacking sponge roller motor.</li> <li>2. Check the connections of the stacking sponge roller HP sensor.</li> <li>3. Replace the stacking sponge roller motor.</li> <li>4. Replace the stacking sponge roller HP sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -80	B	Punch movement motor error
		The punch unit moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>• Motor harness disconnected, loose, defective</li> <li>• Defective motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections to the punch movement motor.</li> <li>2. Replace the punch movement motor</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
720 -81	B	Paper position sensor slide motor error
		The paper position sensor moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.
		<ul style="list-style-type: none"> <li>• Motor harness disconnected, loose, defective</li> <li>• Defective motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections to the paper position sensor slide motor.</li> <li>2. Replace the paper position sensor slide motor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
722 -10	B	Paper feed motor error: proof tray
-14		Paper feed motor error: lower tray
-17		Paper feed motor error: inner tray
		Motor driver error signal is output.
		<ul style="list-style-type: none"> <li>• Motor harness disconnected, loose, defective</li> <li>• Defective motor</li> <li>• Overload on the motor</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connections to the paper feed motor.</li> <li>2. Replace the paper feed motor.</li> </ol>





No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
770	B	Shift motor error
		The shift motor HP sensor does not detect any change for 1.86 seconds after the shift motor has turned on at power on or during its operation.
		<ul style="list-style-type: none"> <li>Defective shift motor</li> <li>Defective shift motor HP sensor</li> </ul>
		<ol style="list-style-type: none"> <li>Check the connections to the shift motor and the shift motor HP sensor.</li> <li>Replace the shift motor or the shift motor HP sensor.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
791	D	Bridge unit error
		The machine recognizes the finisher, but does not recognize the bridge unit.
		<ul style="list-style-type: none"> <li>Defective connector</li> <li>Broken harness</li> </ul>
		<ol style="list-style-type: none"> <li>Check the connections between the bridge unit and the machine.</li> <li>Install a new bridge unit.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
792	B	Finisher error
		The machine does not recognize the finisher, but recognizes the bridge unit.
		<ul style="list-style-type: none"> <li>Defective connector</li> <li>Defective harness</li> <li>Incorrect installation</li> </ul>
		<ol style="list-style-type: none"> <li>Check the connections between the finisher and the machine.</li> <li>Install a new finisher.</li> </ol>

## Service Call Tables - 8

### SC8xx: Overall System



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
816	D	Energy saving I/O sub-system error
		The energy saving I/O sub-system detects an error.
		<ul style="list-style-type: none"> <li>Controller board defective</li> </ul>
		Replace the controller board.

6

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
817	D	Monitor error
		This is a file detection and electronic file signature check error when the boot loader attempts to read the self-diagnostic module, system kernel, or root system files from the OS Flash ROM, or the items on the SD card in the controller slot are false or corrupted.
		<ul style="list-style-type: none"> <li>OS Flash ROM data defective</li> <li>SD card data defective</li> </ul>
		<ol style="list-style-type: none"> <li>Change the controller firmware.</li> <li>Use another SD card.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)	
819	D	Fatal kernel error	
		Due to a control error, a RAM overflow occurred during system processing. One of the following messages was displayed on the operation panel.	
		[0x5032]	"0x455252nn" -> HAIC-P2 error
		[0x5245]	"0x53554D45" -> Link up error
		[0x5355]	"0x5350454E44" -> L2 status time out
		[0x696e]	"0x69742064" -> gwinit process ending

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
	[0x766d]	"0x5f706167" -> VM is full
	----	Other error cord -> Error in the OS
		<ul style="list-style-type: none"> <li>• System program defective</li> <li>• Controller board defective</li> <li>• Optional board defective</li> </ul>
		1. Replace the controller firmware.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
821	D	Self-diagnostics error: ASIC
	[0B00]	ASIC register check error
		The write-&-verify check has occurred in the ASIC.
		Defective ASIC device
		1. Replace the controller board.
	[0B06]	ASIC detection error
		The I/O ASIC for system control is not detected.
		<ul style="list-style-type: none"> <li>• Defective ASIC</li> <li>• Defective North Bridge and PCII/F</li> </ul>
		1. Replace the controller board.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
822	B	Self-diagnostics error: HDD

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
[3003]		HDD timeout
		Check performed only when HDD is installed: <ul style="list-style-type: none"> <li>• HDD device busy for over 31 seconds.</li> <li>• After a diagnostic command is set for the HDD, but the device remains busy for over 6 seconds.</li> </ul>
		<ul style="list-style-type: none"> <li>• Defective HDD device</li> <li>• Defective HDD connector</li> <li>• Defective ASIC device</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace or uninstall the HDD device.</li> <li>2. Replace the HDD connector.</li> <li>3. Replace the controller board.</li> </ol>
[3004]		Diagnostics command error
		Result of the issuance of diagnostic command is error.
		<ul style="list-style-type: none"> <li>• Defective HDD device</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace or remove the HDD device.</li> </ol>
[3013]		HDD timeout (First machine)
		HDD device busy for over 31 seconds. Mandolin is not detected. After a diagnostic command is set for the HDD, but the device remains busy for over 6 seconds.
		<ul style="list-style-type: none"> <li>• Defective HDD device</li> <li>• Defective HDD connector</li> <li>• Defective ASIC device</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace or remove the HDD device.</li> <li>2. Replace the HDD connector</li> <li>3. Replace the controller board</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
[3014]		Diagnostics command error (First machine)
		Result of the issuance of diagnostic command is error.
		Mandolin is not detected.
		A w/r/c error of the HDD register
		<ul style="list-style-type: none"> <li>Defective HDD device</li> </ul>
		1. Replace the HDD device.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
823	B	Self-diagnostics error: NIC
[6101]		MAC address check sum error
		The result of the MAC address check sum does not match the check sum stored in ROM.
		<ul style="list-style-type: none"> <li>Defective SEEP ROM</li> <li>Defective I2C bus (connection)</li> </ul>
		1. Replace the controller board
[6104]		PHY IC error
		The PHY IC on the controller cannot be correctly recognized.
		<ul style="list-style-type: none"> <li>Defective PHY chip</li> <li>Defective ASIC MII I/F</li> </ul>
		1. Replace the controller board
[6105]		PHY IC loop-back error
		An error occurred during the loop-back test for the PHY IC on the controller.
		<ul style="list-style-type: none"> <li>Defective PHY chip</li> <li>Defective MAC of ASIC (SIMAC/COMIC/CELLO)</li> <li>Defective I/F with the PHY board</li> <li>Defective solder on the PHY board</li> </ul>
		1. Replace the controller board

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
824	D	Self-diagnostics error: NVRAM (resident)
[1401]		NVRAM verify error
		NVRAM device does not exist or NVRAM device is damaged.
		<ul style="list-style-type: none"> <li>No NVRAM device</li> <li>Destructive NVRAM device</li> <li>NVRAM backup battery exhausted</li> <li>NVRAM socket damaged</li> </ul>
		1. Replace the NVRAM device.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
833	D	Self-diagnostic error: Engine I/F ASIC
[0F30]		ASIC (Mandolin) for engine control could not be detected. After the PCI configuration, the device ID for the ASIC could not be checked.
		<ul style="list-style-type: none"> <li>Defective ASIC (Mandolin) for system control</li> <li>Defective North Bridge and AGPI/F</li> </ul>
		Replace the Engine I/F board (mother board).
[50B1]		Could not initialize or read the bus connection.
		<ul style="list-style-type: none"> <li>Defective connection bus</li> <li>Defective SSCG</li> </ul>
		Replace the Engine I/F board (mother board).
[50B2]		Value of the SSCG register is incorrect.
		<ul style="list-style-type: none"> <li>Defective connection bus</li> <li>Defective SSCG</li> </ul>
		Replace the Engine I/F board (mother board).

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
834	D	Self-diagnostic error: Optional memory

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
[5101]		An error occurs after write/verify check for optional RAM on the engine I/F board (mother board).
		<ul style="list-style-type: none"> <li>Defective memory device</li> </ul>
		Replace the Engine I/F board (mother board).

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
838	D	Self-diagnostic error: Clock generator
[2701]		A verify error occurred when setting data was read from the clock generator via the I2C bus
		<ul style="list-style-type: none"> <li>Defective clock generator</li> <li>Defective I2C bus</li> <li>Defective I2C port on the CPU</li> </ul>
		Replace the controller board.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
840	D	EEPROM access error
		During the I/O processing, reading error is occurred. The 3rd reading failure issues this SC code.
		During the I/O processing, writing error is occurred.
		<ul style="list-style-type: none"> <li>Defective EEPROM</li> </ul>
		Replace the EEPROM.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
841	D	EEPROM read error
		Mirrored data of the EEPROM is different from the original data in EEPROM.
		Data in the EEPROM is overwritten for some reason.
		Turn the main switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
842	C	Nand-Flash updating verification error
		A writing error for the module written in Nand-Flash occurs when the remote ROM and ROM are updating.
		Damaged Nand-Flash
		Turn the main switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
850	B	Network I/F error
		Inoperative
		Turn the main switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
853	B	Bluetooth device connection error (The Bluetooth interface unit was installed while the machine was turned on.)
		The Bluetooth interface unit was installed while the machine was turned on.
		Turn off the main power switch, and then confirm that the Bluetooth interface unit was installed correctly. And then, turn on the main power switch again.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
854	B	Bluetooth device removed (The Bluetooth interface unit was removed while the machine was turned on.)
		The Bluetooth interface unit was removed while the machine was turned on.
		Turn off the main power switch, and then confirm that the Bluetooth interface unit was installed correctly. And then, turn on the main power switch again.



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
855	B	Hardware Problem:wireless LAN board
		The wireless LAN board can be accessed, but an error was detected.
		<ul style="list-style-type: none"> <li>Loose connection</li> <li>Defective wireless LAN card</li> </ul>
		<ol style="list-style-type: none"> <li>Make sure that the Wireless LAN connection is good</li> <li>Replace the wireless LAN card.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
858	A	Data encryption conversion error
		A serious error occurs when data is encrypted to update an encryption key.
-00		Encryption key acquisition error: The controller fails to get a new encryption key.
		<ul style="list-style-type: none"> <li>Defective controller board</li> </ul> <ol style="list-style-type: none"> <li>Replace the controller board.</li> </ol>
-01		Encryption key setting for HDD error: The controller fails to copy a new encryption key to the HDD.
		<ul style="list-style-type: none"> <li>Defective SATA chip on the controller board</li> </ul> <ol style="list-style-type: none"> <li>Turn the machine power off and on.</li> <li>If the error reoccurs, replace the controller board.</li> </ol>
-02		NVRAM data encryption error 1: An error occurs while the NVRAM data is encrypted.
		<ul style="list-style-type: none"> <li>Defective SATA chip on the controller board</li> </ul> <ol style="list-style-type: none"> <li>Replace the NVRAM.</li> </ol>
-30		NVRAM data encryption error 2: An error occurs before the NVRAM data is encrypted.
		<ul style="list-style-type: none"> <li>Defective controller board</li> </ul> <ol style="list-style-type: none"> <li>Turn the machine power off and on.</li> <li>If the error reoccurs, replace the controller board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
-31		Other error: A serious error occurs while the data is encrypted.
		Same as SC991

No	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
859	B	HDD data encryption error
		Encryption of data on the hard disk failed.
-08		HDD check error: The HDD is not correctly installed.
		<ul style="list-style-type: none"> <li>• No HDD installed</li> <li>• Unformatted HDD</li> <li>• The encryption key on the controller is different from the one on the HDD</li> </ul>
		<ul style="list-style-type: none"> <li>• Install the HDD correctly.</li> <li>• Initialize the HDD.</li> </ul>
-09		Power failure during the data encryption: The data encryption (NVRAM and HDD) has not been completed.
		Power failure during the data encryption
		1. Initialize the HDD.
-10		Data read/write error. The DMAC error is detected twice or more.
		Same as SC863

No	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
860	D	HDD startup error at main power on

No	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		HDD is connected but a driver error is detected. The driver does not respond with the HDD within 30 seconds.
		<ul style="list-style-type: none"> <li>• HDD not initialized</li> <li>• Label data is corrupted</li> <li>• Defective HDD</li> </ul>
		<ul style="list-style-type: none"> <li>• Initialize the HDD with SP5-832-001.</li> </ul>

No	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
861	D	HDD: Reboot error
		The HDD does not become ready within 30 seconds after the power is supplied to the HDD.
		<ul style="list-style-type: none"> <li>• Disconnection of the cables between HDD and HDC</li> <li>• Disconnection of the power supply connector</li> <li>• Defective HDD</li> <li>• Defective HDC</li> </ul>
		<ol style="list-style-type: none"> <li>1. Turn the main power switch on.</li> <li>2. Replace the HDD or the controller board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
		Bad sector number error
		The number of bad sectors in the HDD (image data area) goes over 101.
862	D	<ul style="list-style-type: none"> <li>• Defective HDD</li> </ul>
		<ol style="list-style-type: none"> <li>1. Format the HDD with SP4-911-002 and replace with the alternate sector.</li> <li>2. Replace the HDD.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
863	D	HDD: Read error
		The data stored in the HDD cannot be read correctly.
		<ul style="list-style-type: none"> <li>Defective HDD</li> <li>Defective controller</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the HDD.</li> <li>Replace the controller.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
864	D	HDD: CRC error
		While reading data from the HDD or storing data in the HDD, data transmission fails.
		<ul style="list-style-type: none"> <li>Defective HDD</li> </ul>
		<ol style="list-style-type: none"> <li>Format the HDD.</li> <li>Replace the HDD.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
865	D	HDD: Access error
		An error is detected while operating the HDD.
		<ul style="list-style-type: none"> <li>Defective HDD</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the HDD.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
866	B	SD card authentication error
		A correct license is not found in the SD card.
		<ul style="list-style-type: none"> <li>SD-card data is corrupted.</li> </ul>
		<ol style="list-style-type: none"> <li>Store correct data in the SD card.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
867	D	SD card error
		The SD card is ejected from the slot.
		<ol style="list-style-type: none"> <li>1. Install the SD card.</li> <li>2. Turn the main switch off and on.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
868	D	SD card access error
		An error occurs while an SD card is used.
		<ul style="list-style-type: none"> <li>• SD card not inserted correctly</li> <li>• SD card defective</li> <li>• Controller board defective</li> </ul> <p><b>Note:</b> If you want to try to reformat the SC card, use SD Formatter Ver 1.1.</p>
		<ol style="list-style-type: none"> <li>1. Check the SD card is inserted correctly.</li> <li>2. Replace the SD card.</li> <li>3. Replace the controller board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
870	B	Address book error
		Address book data stored on the hard disk was detected as abnormal when it was accessed from either the operation panel or the network.
		<ul style="list-style-type: none"> <li>• Defective software program</li> <li>• Defective HDD</li> <li>• Incorrect path to the server</li> <li>• Incorrect encryption setting or encryption key</li> <li>• Damaged address book data</li> </ul>
		<ol style="list-style-type: none"> <li>1. Mount correctly the media that stores the address book data and turn the main power switch off and on.</li> <li>2. Initialize the address book data (SP5-846-050).</li> <li>3. Initialize the partition for the HDD address book (Turn the main power switch off and on) (SP5-832-006).</li> <li>4. Replace the HDD.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
872	B	HDD mail data error
		An error is detected in the HDD at power on.
		<ul style="list-style-type: none"> <li>• Defective HDD</li> <li>• Power failure during an access to the HDD</li> </ul>
		<ol style="list-style-type: none"> <li>1. Turn the main power switch off and on.</li> <li>2. Initialize the HDD partition (SP5-832-007).</li> <li>3. Replace the HDD.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
873	B	HDD mail transfer error
		An error is detected in the HDD at machine initialization.
		<ul style="list-style-type: none"> <li>Defective HDD</li> <li>Power failure during an access to the HDD</li> </ul>
		<ol style="list-style-type: none"> <li>Initialize the HDD partition (SP5-832-008).</li> <li>Replace the HDD.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
874	D	Delete All error: Data area
		A data error is detected for the HDD/NVRAM after the Delete All option has been used. <b>Note:</b> The source of this error is the Data Overwrite Security Unit running from an SD card.
		<ul style="list-style-type: none"> <li>Data Overwrite Security Unit (SD card) not installed</li> <li>Defective HDD</li> </ul>
		<ol style="list-style-type: none"> <li>Turn the main switch off/on and try the operation again.</li> <li>Install the Data Overwrite Security Unit (D377) again.</li> <li>Replace the HDD.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
875	D	Delete All error: HDD
		An error occurs while the machine deletes data from the HDD. <b>Note:</b> The source of this error is the Data Overwrite Security Unit running from an SD card.
		<ul style="list-style-type: none"> <li>The logical format for the HDD fails.</li> </ul>
		<ol style="list-style-type: none"> <li>Turn the main switch off/on and try the operation again</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
876	D	Log Data Error
		An error was detected in the handling of the log data at power on or during machine operation. This can be caused by switching the machine off while it is operating.
-01		Log Data Error 1
		<ul style="list-style-type: none"> <li>Damaged log data file in the HDD</li> </ul>
		<ol style="list-style-type: none"> <li>Initialize the HDD with SP5-832-004.</li> </ol>
-02		Log Data Error 2
		<ul style="list-style-type: none"> <li>An encryption module not installed</li> </ul>
		<ol style="list-style-type: none"> <li>Replace or set again the encryption module.</li> <li>Disable the log encryption setting with SP9-730-004 ("0" is off.).</li> </ol>
-03		Log Data Error 3
		<ul style="list-style-type: none"> <li>Invalid log encryption key due to defective NVRAM data</li> </ul>
		<ol style="list-style-type: none"> <li>Initialize the HDD with SP5-832-004.</li> <li>Disable the log encryption setting with SP9-730-004 ("0" is off.)</li> </ol>
-04		Log Data Error 4
		<ul style="list-style-type: none"> <li>Unusual log encryption function due to defective NVRAM data</li> </ul>
		<ol style="list-style-type: none"> <li>Initialize the HDD with SP5-832-004.</li> </ol>
-05		Log Data Error 5
		<ul style="list-style-type: none"> <li>Installed NVRAM or HDD which is used in another machine.</li> </ul>
		<ol style="list-style-type: none"> <li>Reinstall the previous NVRAM or HDD.</li> <li>Initialize the HDD with SP5-832-004.</li> </ol>
-99		Log Data Error 99
		<ul style="list-style-type: none"> <li>Other than the above causes</li> </ul>
		<ol style="list-style-type: none"> <li>Ask your supervisor.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
877	B	HDD Data Overwrite Security SD card error
		The 'all delete' function cannot be executed but the Data Overwrite Security Unit (D377) is installed and activated.
		<ul style="list-style-type: none"> <li>Defective SD card</li> <li>SD card not installed</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the NVRAM and then install the new SD card.</li> <li>Check and reinstall the SD card.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
878	D	TPM electronic recognition error
		The system firmware is not authenticated by TPM (security chip).
		<ul style="list-style-type: none"> <li>Incorrect updating for the system firmware</li> <li>Incorrect operating of the USB flash</li> <li>Defective flash ROM on the controller board</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the controller board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
880	D	File format converter error
		A request to get access to the file format converter is not answered within the specified time.
		<ul style="list-style-type: none"> <li>Defective file format converter</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the file format converter.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
881	D	Authentication area error
		Authentication application error is detected.
		Error data in an authentication application reaches the management limit.
		<ol style="list-style-type: none"> <li>Turn the main power switch off and on.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
899	D	Software performance error
		If the processing program shows abnormal performance and the program is abnormally ended, this SC is issued.
		<ul style="list-style-type: none"> <li>• Controller board defective</li> <li>• Software defective</li> </ul>
		<ol style="list-style-type: none"> <li>1. Replace the controller board.</li> <li>2. Turn the main switch off and on.</li> <li>3. Update the firmware on the controller.</li> </ol>

## Service Call Tables - 9

6

### SC9xx: Miscellaneous

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
900	D	Electric counter error
		The total count contains something that is not a number.
		<ul style="list-style-type: none"> <li>• NVRAM incorrect type</li> <li>• Defective NVRAM</li> <li>• NVRAM data scrambled</li> <li>• Unexpected error from external source</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the connection between the NVRAM and controller.</li> <li>2. Replace the NVRAM.</li> <li>3. Replace the controller board.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
910	B	External Controller Error 1
911		External Controller Error 2
912		External Controller Error 3
913		External Controller Error 4
914		External Controller Error 5
		The external controller alerted the machine about an error. 1. Please refer to the instructions for the external controller (application).

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
915	A	External Controller Error 6
		Egrt board error
		The external controller alerted the machine about an error.
		1. Replace the Egret controller board.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
919	D	External Controller down
		While EAC (External Application Converter), the conversion module, was operating normally, the receipt of a power line interrupt signal from the FLUTE serial driver was detected, or BREAK signal from the other station was detected.
		<ul style="list-style-type: none"> <li>• Power outage at the EFI controller</li> <li>• EFI controller was rebooted</li> <li>• Connection to EFI controller loose</li> </ul>
		1. Turn the main power switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
920	B	Printer application error
-00		No response when starting up the PM

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
-01		Timeout error during the PM operation
-02		Working memory error
-03		Cannot start-up the filtering process
-04		Abnormal exit from the filtering process
		An error is detected in the printer application program and operation cannot continue.
		<ul style="list-style-type: none"> <li>Defective software</li> <li>Unexpected hardware resource (e.g., memory shortage)</li> </ul>
		<ol style="list-style-type: none"> <li>Software defective; turning on and off the main power switch</li> <li>Insufficient memory; additional memory</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
921	B	Printer font error
		A necessary font is not found when starting up the printer application.
		<ul style="list-style-type: none"> <li>A necessary font is not found in the SD card.</li> </ul>
		<ol style="list-style-type: none"> <li>Turn the main power switch off and on.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
925	B	NetFile function error
-00		HDD is defective
-01		NetFile management file is broken
		<p>The NetFile file management on the HDD cannot be used, or a NetFile management file is corrupted and operation cannot continue.</p> <p>The HDDs are defective and they cannot be debugged or partitioned, so the Scan Router functions (delivery of received faxes, document capture, etc.), Web services, and other network functions cannot be used.</p> <p>HDD status codes are displayed below the SC code.</p>
		<ol style="list-style-type: none"> <li>Refer to the four procedures below (Recovery from SC 925).</li> </ol>

Here is a list of HDD status codes:

Display	Meaning
(-1)	HDD not connected
(-2)	HDD not ready
(-3)	No label
(-4)	Partition type incorrect
(-5)	Error returned during label read or check
(-6)	Error returned during label read or check
(-7)	"filesystem" repair failed
(-8)	"filesystem" mount failed
(-9)	Drive does not answer command
(-10)	Internal kernel error
(-11)	Size of drive is too small
(-12)	Specified partition does not exist
(-13)	Device file does not exist

## Recovery from SC 925

### Procedure 1

If the machine shows SC codes for HDD errors (SC860 to SC865) with SC 925, do the recovery procedures for SC860 to SC865.

### Procedure 2

If the machine does not show one of the five HDD errors (SC860 to SC865), turn the machine power off and on. If this is not the solution for the problem, then initialize the NetFile partition on the HDD with SP5832-011 (HDD Formatting – Ridoc I/F).

NetFiles: Jobs printed from the document server using a PC and DeskTopBinder

- Before you initialize the NetFile partition on the HDD, tell the customer that:
- Received faxes on the delivery server will be erased
- All captured documents will be erased
- DeskTopBinder/Print Job Manager/Desk Top Editor job history will be erased
- Documents on the document server, and scanned documents, will not be erased.

- The first time that the network gets access to the machine, the management information must be configured again (this will use a lot of time).

Before you initialize the Netfile partition with SP5832-011, do these steps:

1. Go into the User Tools mode and do "Delivery Settings" to print all received fax documents that are scheduled for delivery. Then erase them.
2. In the User Tools mode, do Document Management> Batch Delete Transfer Documents.
3. Do SP5832-011, then turn the machine power off and on.

**Procedure 3**

If "Procedure 2" is not the solution for the problem, do SP5832-001 (HDD Formatting – All), then turn the machine power off and on.

SP5832-001 erases all document and address book data on the hard disks. Ask the customer before you do this SP code.

**Procedure 4**

If "Procedure 3" is not the solution for the problem, replace the HDD.



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
990	D	Software performance error
		The software makes an unexpected operation.
		<ul style="list-style-type: none"> <li>• Defective software</li> <li>• Defective controller</li> <li>• Software error</li> </ul>
		<ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Reinstall the controller and/or engine main firmware.</li> </ol>
		<b>Note:</b> See Note 1 at the end of the SC table.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
991	C	Software continuity error
		The software has attempted to perform an unexpected operation. However, unlike SC 990, the object of the error is continuity of the software.
		<ul style="list-style-type: none"> <li>• Software program error</li> <li>• Internal parameter incorrect</li> <li>• Insufficient working memory</li> </ul>
		1. This SC is not displayed on the LCD (logging only).

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
992	D	Undefined error
		Defective software program
		<ul style="list-style-type: none"> <li>• An error undetectable by any other SC code occurred</li> </ul>
		1. Turn the main power switch off and on.

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
994	C	Operation panel management records exceeded
		An error occurred because the number of records exceeded the limit for images managed in the service layer of the firmware. This can occur if too many application screens open on the operation panel.
		<ul style="list-style-type: none"> <li>• No action required because this SC does not interfere with operation of the machine.</li> </ul>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
995	D	CPM setting error
-01		<ul style="list-style-type: none"> <li>• Defective BCU</li> <li>• NVRAM Replacement error</li> </ul>
		<ol style="list-style-type: none"> <li>1. Install the previous NVRAM.</li> <li>2. Input the serial number with SP5-811-004, and turn the main power switch off and on.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
-02		<ul style="list-style-type: none"> <li>Defective NVRAM</li> <li>Defective controller</li> </ul>
		<ol style="list-style-type: none"> <li>Update the controller firmware.</li> <li>Install a new NVRAM, and turn off and on the main power switch after SC995-002 has occurred.</li> </ol>
-03		<ul style="list-style-type: none"> <li>Incorrect type controller installed</li> <li>Defective controller</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the controller with the correct type.</li> </ol>
-04		<ul style="list-style-type: none"> <li>Incorrect model controller installed.</li> </ul>
		<ol style="list-style-type: none"> <li>Replace the controller with the correct model.</li> </ol>

No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
997	B	Application function selection error
		The application selected by the operation panel key works abnormally (No response, abnormal ending).
		<ul style="list-style-type: none"> <li>Software (including the software configuration) defective</li> <li>An option required by the application (RAM, DIMM, board) is not installed.</li> <li>Nesting of the fax group addresses is too complicated.</li> </ul>
		<ol style="list-style-type: none"> <li>Check the devices necessary for the application program. If necessary devices have not been installed, install them.</li> <li>Check that application programs are correctly configured.</li> <li>For a fax operation problem, simplify the nesting of the fax group addresses.</li> <li>Take necessary countermeasures specific to the application program. If the logs can be displayed on the operation panel, see the logs.</li> </ol>



No.	Type	Details (Symptom, Possible Cause, Troubleshooting Procedures)
998	D	Application start error
		No applications start within a specified time after the power is turned on.
		<ul style="list-style-type: none"> <li>• Loose connection of RAM-DIMM, ROM-DIMM</li> <li>• Defective controller</li> <li>• Software problem</li> </ul>
		<ol style="list-style-type: none"> <li>1. Check the setting of SP5-875-001. If the setting is set to "1 (OFF)", change it to "0 (ON)".</li> <li>2. Check if the RAM-DIMM and ROM-DIMM are correctly connected.</li> <li>3. Reinstall the controller system firmware.</li> <li>4. Replace the controller board.</li> </ol>

### Note 1

If a problem always occurs in a specific condition (for example, printer driver setting, image file), the problem may be caused by a software error. In this case, the following data and information needs to be sent back to your product specialist. Please understand that it may take some time to get a reply on how to solve the problem, because in some cases the design staff in Japan must analyze the data.

- Symptom / Possible Causes / Action taken
- Summary sheet (SP mode "Printer SP", SP1-004 [Print Summary])
- SMC - All (SP5-990-001)
- SMC - Logging (SP5-990-004)
- Printer driver settings used when the problem occurs
- All data displayed on the screen (SC code, error code, and program address where the problem is logged.)
- Image file which causes the problem, if possible

# Process Control Error Conditions

## Developer Initialization Result

### SP-3-014-001 (Developer Initialization Result)

No.	Result	Description	Possible Causes/Action
1	Successfully completed	Developer initialization is successfully completed.	-
2	Forced termination	Developer initialization was forcibly terminated.	<ul style="list-style-type: none"> <li>A cover was opened or the main switch was turned off during the initialization.</li> </ul> <ol style="list-style-type: none"> <li>Do the developer initialization again when done in SP mode. Reinstall the engine main firmware if the result is the same.</li> <li>Turn the main switch off and on when done at unit replacement.</li> </ol>
6	Vt error	Vt is more than 0.7V when Vcnt is 4.3V.	<ol style="list-style-type: none"> <li>Make sure that the heat seal on the development unit is not removed.</li> <li>Defective TD sensor</li> </ol>
7	Vcnt error 1	Vcnt is less than 4.7V when Vcnt is Vt target $\pm 0.2V$ .	<ol style="list-style-type: none"> <li>Defective TD sensor</li> <li>Vt target settings are not correct.</li> <li>Toner density error</li> </ol>
8	Vcnt error 2	Vt is more than 0.7V when Vcnt is 4.3V and Vcnt is less than 4.7V when Vcnt is Vt target $\pm 0.2V$ .	<ol style="list-style-type: none"> <li>Make sure that the heat seal on the development unit is not removed.</li> <li>Defective TD sensor</li> </ol>
9	Vcnt error 3	Vcnt is less than 4.7V.	<ol style="list-style-type: none"> <li>Make sure that the heat seal on the development unit is not removed</li> <li>Defective TD sensor</li> <li>Vt target settings are not correct.</li> <li>Toner density error</li> </ol>

**Note**

- The machine starts developer initialization after you set "Enable" in SP3-902-005, 006, 007, or 008. Developer initialization automatically resumes when you open and close the front door or turn the main switch off and on if an error other than Error 8 occurs.

## Process Control Self-Check Result

Displayed number shows results of each color sensor check.

00000000 = YYCCMMKK

### SP3-012-001 to -010 (Process Control Self-check Result)

No.	Result	Description	Possible Causes/Action
11	Successfully completed	Process control self-check successfully completed.	Check the Vsg adjustment. See the "Vsg Adjustment Result" following this table.
41	Vt error	Vt maximum or minimum error is detected.	<ul style="list-style-type: none"> <li>Defective development unit</li> </ul> Vt maximum error and an image is faint: <ol style="list-style-type: none"> <li>Replace the toner supply pump unit.</li> </ol> Vt maximum error and an image is O.K.: <ol style="list-style-type: none"> <li>Replace the development unit.</li> <li>Replace the IOB board.</li> </ol> Vt minimum error: <ol style="list-style-type: none"> <li>Replace the development unit.</li> <li>Replace the IOB board.</li> </ol>
53	ID sensor coefficient (K5) detection error	Not enough data can be sampled.	<ul style="list-style-type: none"> <li>Solid image is not sufficient density:               <ol style="list-style-type: none"> <li>Retry the process control.</li> <li>Replace the ID sensors.</li> <li>Replace the IOB board.</li> </ol> </li> <li>Solid image is O.K.               <ol style="list-style-type: none"> <li>Replace the ID sensors.</li> <li>Replace the IOB board.</li> </ol> </li> <li>ID sensor is dirty:               <ol style="list-style-type: none"> <li>Clean the ID sensors.</li> <li>Retry the process control.</li> </ol> </li> </ul>

No.	Result	Description	Possible Causes/Action
54	ID sensor coefficient (K5) maximum/minimum error	When the K5 is more than the value of SP3-362-003 or less than the value of SP3-362-004, the error 54 is displayed.	<ul style="list-style-type: none"> <li>ID sensor pattern density is too high or low.</li> <li>ID sensor or shutter is defective.</li> </ul> Same as 53
55	Gamma error: Maximum	Gamma is out of range. $5.0 < \text{Gamma}$	<ul style="list-style-type: none"> <li>ID sensor pattern density is too high.</li> <li>Hardware defective.</li> </ul> Same as 53
56	Gamma error: Minimum	Gamma is out of range. $\text{Gamma} < 0.15$	<ul style="list-style-type: none"> <li>ID sensor pattern density is too low.</li> <li>Hardware defective.</li> </ul> 1. Same as 53 2. Replace the toner supply pump unit.
57	Vk error: Maximum	Vk is out of range. $150 < \text{Vk}$	<ul style="list-style-type: none"> <li>ID sensor pattern density is too low.</li> <li>Hardware defective.</li> </ul> Same as 53
58	Vk error: Minimum	Vk is out of range. $\text{Vk} < -150$	<ul style="list-style-type: none"> <li>ID sensor pattern density is too high.</li> <li>Background dirty</li> <li>Hardware defective</li> </ul> Same as 53
59	Sampling data error during gamma correction	Not enough data can be sampled during the gamma correction.	<ul style="list-style-type: none"> <li>ID sensor pattern density is too high or low.</li> <li>Hardware defective</li> </ul> Same as 53
99	Unexpected error	Process control fails.	<ul style="list-style-type: none"> <li>Power Failure</li> </ul> Check the power source.

## Vsg Adjustment Result

### SP3-325-001 to -010 (Vsg Adjustment Result)

No.	Result	Description	Possible Causes/Action
1	O.K	Vsg adjustment is correctly done.	-
2	ID sensor adjustment error	Vsg cannot be adjusted within $4.0 \pm 0.5V$ .	<ul style="list-style-type: none"> <li>• Dirty ID sensor (toner, dust, or foreign material)</li> <li>• Dirty transfer belt</li> <li>• Scratched image transfer belt</li> <li>• Defective ID sensor</li> <li>• Poor connection</li> <li>• Defective IOB</li> </ul> <ol style="list-style-type: none"> <li>1. Clean the ID sensor.</li> <li>2. Check the belt cleaning. Clean or replace the transfer belt.</li> <li>3. Replace the image transfer belt.</li> <li>4. Replace the ID sensor.</li> <li>5. Check the connection.</li> <li>6. Replace the IOB board.</li> </ol>
3	ID sensor output error	ID sensor output is more than "Voffset Threshold" (SP3-324-004)	<ul style="list-style-type: none"> <li>• Defective ID sensor</li> <li>• Poor connection</li> <li>• Defective IOB</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor.</li> <li>2. Check the connection.</li> <li>3. Replace the IOB board.</li> </ol>
9	Vsg Adjustment error	Vsg adjustment has not been completed.	<ul style="list-style-type: none"> <li>• Other cases</li> </ul> Retry SP3-321-010.

## Line Position Adjustment Result

SP2-194-010 to -012 (Line Position Adjustment Result: M, C, Y)

This SP shows the number as a line position adjustment result on the LCD. It shows which color has an error (M, Y or C).

No.	Result	Description	Note
0	Not done	Line position adjustment has not been done.	-
1	Completed successfully	Line position adjustment has correctly been done,	-
2	Cannot detect patterns	ID sensors have not detected the patterns for line position adjustment.	See Note
3	Fewer lines on the pattern than the target	The patterns, which ID sensors have detected, are not enough for line position adjustment.	See Note
4	More lines on the pattern than the target	Not used in this machine.	-
5	Out of the adjustment range	ID sensors have correctly detected the patterns for line position adjustment, but a shift of patterns is out of adjustable range.	See Note
6-9	Not used	-	-


**Note**


- For details, see the "Troubleshooting Guide - Line Position Adjustment" section.

# Troubleshooting Guide

## Image Quality

The following work-flow shows the basic troubleshooting steps for the image quality problems on this product.

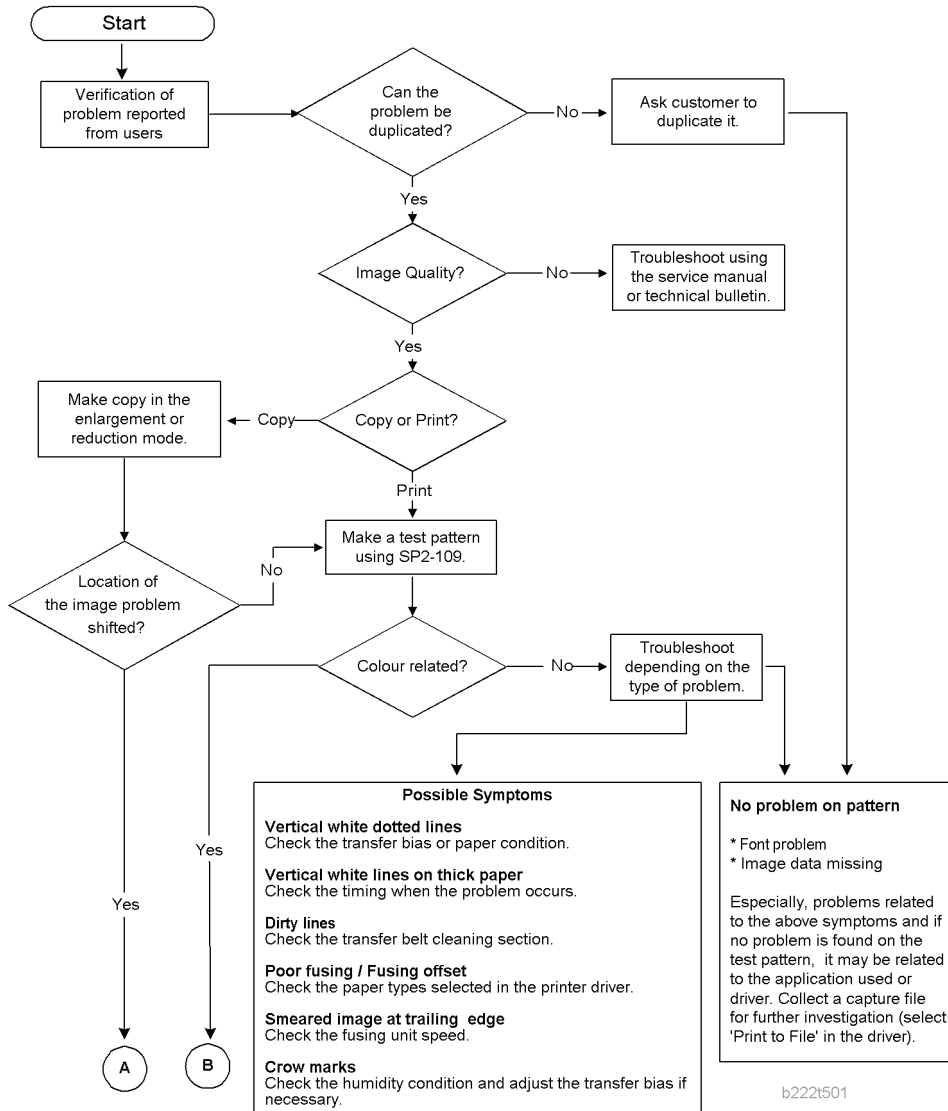

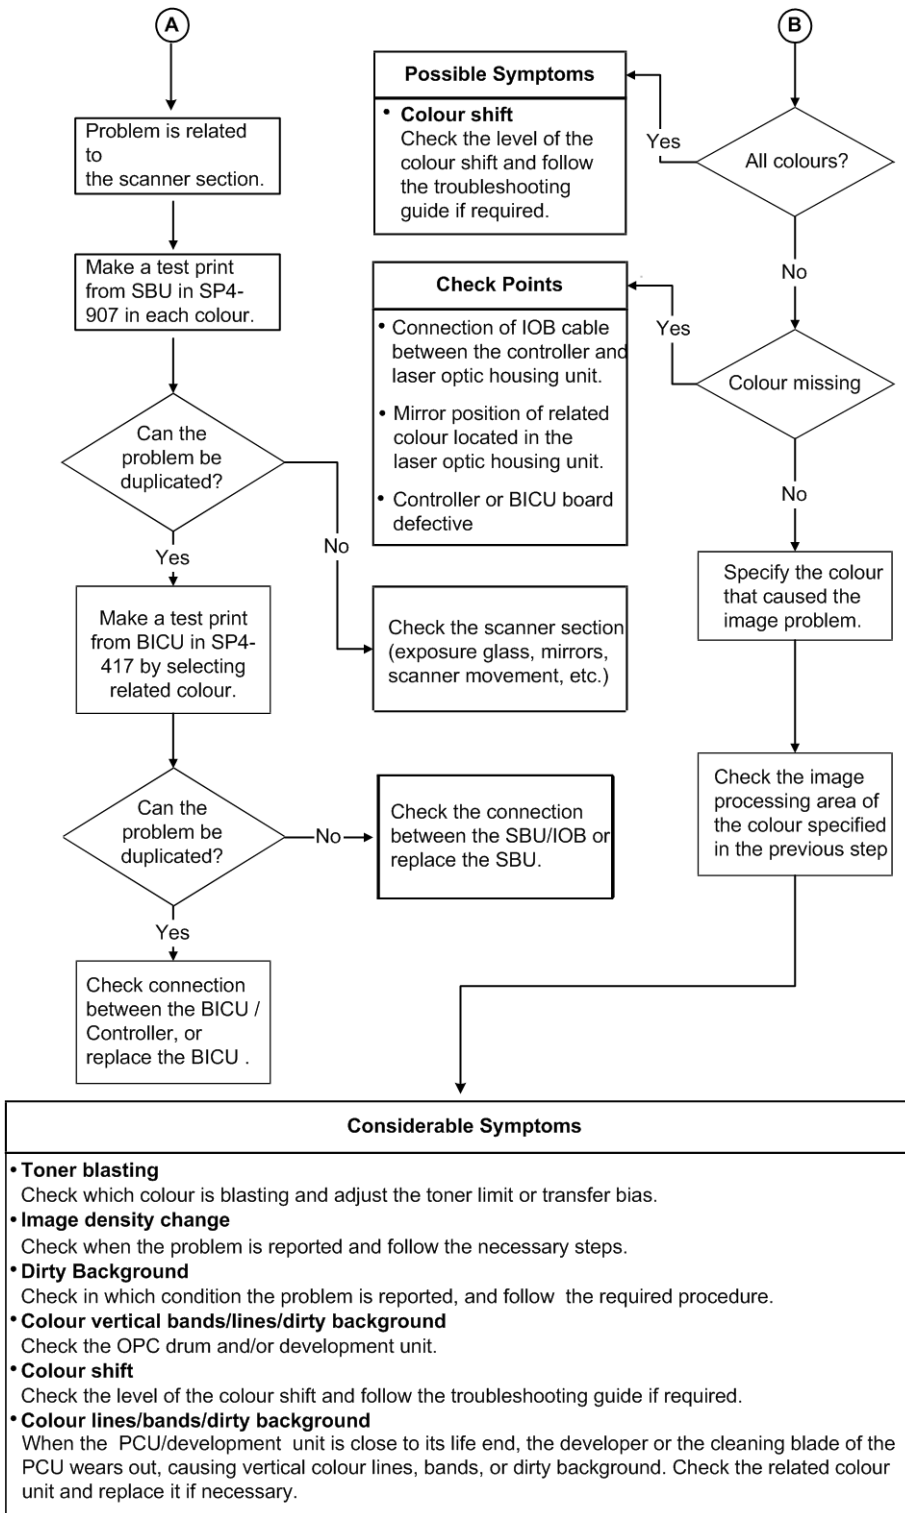



---

## Line Position Adjustment

---

When there are color registration errors on the output, do the line position adjustment as follows.

### ↓ Note

- Use A3/DLT size paper for this adjustment.

## Test

---

1. Do SP2-111-003 (Mode c: rough adjustment).
2. Use SP2-194-007 to check if the result of the line position adjustment is correct (0: Completed successfully, 1: Not completed). If the result is "1", refer to 'Countermeasure list for color registration errors'.
3. Do SP2-111-001 (Mode a: fine adjustment twice).
4. Use SP2-194-007 to check if the result of the line position adjustment is correct (0: Completed successfully, 1: Not completed). If the result is "1", refer to 'Countermeasure list for color registration errors'.
5. Put some A3/DLT paper on the by-pass tray.

### ↓ Note

- When you print a test pattern, use the by-pass tray to feed the paper.
6. Print out test pattern "7" with SP2-109-003.
  7. Check the printed output with a loupe.
  8. If there are no color registration errors on the output, the line position adjustment is correctly done. If not, refer to the countermeasure list for color registration errors.

---

## Countermeasure list for color registration errors

---

After Executing SP2-111-003

- Result: "1" in SP2-194-007
- Result: "2" or "3" (Line pattern detection failure) in SP2-194-010, -011, -012

Test pattern check	Possible cause/Countermeasure
White image, Abnormal image, Low density	<ul style="list-style-type: none"> <li>• Defective laser optics housing unit shutter</li> <li>• Defective image processing unit</li> <li>• Low density of test pattern</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the shutter motor.</li> <li>2. Replace the high voltage power supply unit.</li> <li>3. Do the forced process control (SP3-011-001) or supply some toner (SP3-015-xxx).</li> <li>4. Replace the IPU.</li> </ol>
Normal image, but with color registration errors	<ul style="list-style-type: none"> <li>• Defective ID sensor shutter</li> <li>• Defective ID sensor</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor shutter solenoid.</li> <li>2. Replace the ID sensor.</li> <li>3. Replace the IPU.</li> </ol>

After Executing SP2-111-003

- Result: "1" in SP2-194-007
- One of results: "5" (Out of adjustable range) in SP2-194-010, -011, -012.

Test pattern check	Possible cause/Countermeasure
The main scan registrations of Y, M, C are shifted by more than $\pm 15$ mm from the main scan registration of K.	<ul style="list-style-type: none"> <li>• Defective laser optics housing unit</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the laser optics housing unit.</li> <li>2. Replace the IPU.</li> </ol>
The sub scan registrations of Y, M, C are shifted by more than $\pm 20$ mm from the sub scan registration of K.	<ul style="list-style-type: none"> <li>• Defective image transfer belt</li> <li>• Defective drive units</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the image transfer belt.</li> <li>2. Replace the drum motor.</li> <li>3. Replace the IPU.</li> </ol>

Test pattern check	Possible cause/Countermeasure
The main scan registration is shifted by more than $\pm 0.66$ mm, but only at the central area of the image on the output.	<ul style="list-style-type: none"> <li>• Defective ID sensor at center</li> <li>• Deformed center area on the image transfer belt</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor.</li> <li>2. Replace the image transfer belt.</li> <li>3. Replace the IPU.</li> </ol>
The skew for Y, M, C is more than $\pm 0.75$ mm from the main scan registration of K	<ul style="list-style-type: none"> <li>• Defective PCDU</li> <li>• Defective laser optics housing unit</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Reinstall or replace the PCDU.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the IPU.</li> </ol>
Others	<ul style="list-style-type: none"> <li>• Skew correction upper limit error</li> <li>• Defective IPU</li> <li>• Defective laser optics housing unit</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the IPU.</li> <li>2. Replace the laser optics housing unit.</li> </ol>

After Executing SP2-111-003

- Result: "1" in SP2-194-007
- Result: "0" in SP2-194-010, -011, -012.

Test pattern check	Possible cause/Countermeasure
	Do SP2-111-001 or -002.

After Executing SP2-111-001

- Result: "1" in SP2-194-007
- Result: "2" or "3" (Line pattern detection failure) in SP2-194-010, -011, -012

Test pattern check	Possible cause/Countermeasure
White image, Abnormal image, Low density	<ul style="list-style-type: none"> <li>Defective laser optics housing unit shutter</li> <li>Defective image processing unit</li> <li>Low density of test pattern</li> <li>Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the shutter motor.</li> <li>2. Replace the high voltage power supply unit.</li> <li>3. Do the forced process control (SP3-011-001) or supply some toner (SP3-015-xxx).</li> <li>4. Replace the IPU.</li> </ol>
Normal image, but with color registration errors	<ul style="list-style-type: none"> <li>Defective ID sensor shutter</li> <li>Defective ID sensor</li> <li>Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor shutter solenoid.</li> <li>2. Replace the ID sensor.</li> <li>3. Replace the IPU.</li> </ol>

## After Executing SP2-111-001

- Result: "1" in SP2-194-007
- Result: "5" (Out of adjustable range) in SP2-194-010, -011, -012

Test pattern check	Possible cause/Countermeasure
Low image density on the output	<ul style="list-style-type: none"> <li>Low pattern density</li> </ul> <p>Do the forced process control (SP3-011-001) or supply some toner (SP3-015-xxx).</p>
The main scan registrations of Y, M, C are shifted by more than $\pm 1.4$ mm from the main scan registration of K.	<ul style="list-style-type: none"> <li>No defective component</li> <li>Defective laser optics housing unit</li> <li>Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Do SP2-111-003 again.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the IPU.</li> </ol>

Test pattern check	Possible cause/Countermeasure
<p>The sub scan registrations of Y, M, C are shifted by more than <math>\pm 1.4\text{mm}</math> from the sub scan registration of K.</p>	<ul style="list-style-type: none"> <li>• No defective component</li> <li>• Defective image transfer belt</li> <li>• Defective drive units</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Do SP2-111-003 again.</li> <li>2. Replace the image transfer belt.</li> <li>3. Replace the drum motor.</li> <li>4. Replace the IPU.</li> </ol>
<p>The main scan registration is shifted by more than <math>\pm 0.66\text{ mm}</math>, but only at the central area of the image on the output.</p>	<ul style="list-style-type: none"> <li>• Defective ID sensor at center</li> <li>• Deformed center area on the image transfer belt</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor.</li> <li>2. Replace the image transfer belt.</li> <li>3. Replace the IPU.</li> </ol>
<p>The skew for Y, M, C is more than <math>\pm 0.75\text{ mm}</math> from the main scan registration of K. – at the end of the scan line?</p>	<ul style="list-style-type: none"> <li>• Defective PCDU</li> <li>• Defective laser optics housing unit</li> <li>• Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>1. Reinstall or replace the PCDU.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the IPU.</li> </ol>
<p>Others</p>	<ul style="list-style-type: none"> <li>• Skew correction upper limit error</li> <li>• Defective IPU</li> <li>• Defective laser optics housing unit</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the IPU.</li> <li>2. Replace the laser optics housing unit.</li> </ol>

After Executing SP2-111-001

- Result: "0" in SP2-194-007
- Result: No color registration errors in SP2-194-010, -011, -012

Test pattern check	Possible cause/Countermeasure
The main scan registration of K is shifted.	<ul style="list-style-type: none"> <li>Abnormal SP setting value of main scan: K</li> </ul> Adjust the value with SP2-101-001.
The main scan length of K is shifted.	<ul style="list-style-type: none"> <li>Abnormal SP setting value of main scan length detection: K</li> </ul> Adjust the value with SP2-185-001.

## After Executing SP2-111-001

- Result: "0" in SP2-194-007
- Result: Color registration errors in SP2-194-010, -011, -012

Test pattern check	Possible cause/Countermeasure
Low image density on the output	<ul style="list-style-type: none"> <li>Low pattern density</li> </ul> Do the forced process control (SP3-011-001) or supply some toner (SP3-015-xxx).
The main scan registration is shifted, but only at the central area of the image on the output.	<ul style="list-style-type: none"> <li>Defective ID sensor at center</li> <li>Deformed center area on the image transfer belt</li> <li>Defective IPU</li> </ul> <ol style="list-style-type: none"> <li>Replace the ID sensor.</li> <li>Replace the image transfer belt.</li> <li>Replace the IPU.</li> </ol>
The main scan registrations of Y, M, C are shifted.	<ul style="list-style-type: none"> <li>Defective laser optics housing unit</li> <li>Defective ID sensor</li> <li>Defective IPU</li> <li>Incorrect SP value</li> </ul> <ol style="list-style-type: none"> <li>Replace the laser optics housing unit.</li> <li>Replace the ID sensor.</li> <li>Replace the IPU.</li> <li>Adjust the value with SP2-182-004 to -021.</li> </ol>

Test pattern check	Possible cause/Countermeasure
The sub scan registrations of Y, M, C are shifted.	<ul style="list-style-type: none"> <li>• Defective image transfer belt</li> <li>• Defective drive units</li> <li>• Defective ID sensor</li> <li>• Defective IPU</li> <li>• Incorrect SP value</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the image transfer belt.</li> <li>2. Replace the ID sensor.</li> <li>3. Replace the drum motor.</li> <li>4. Replace the IPU.</li> <li>5. Adjust the value with SP2-182-022 to -039.</li> </ol>
The skew of Y, M, C is different.	<ul style="list-style-type: none"> <li>• Defective PCDU</li> <li>• Defective laser optics housing unit</li> <li>• Defective IOB</li> </ul> <ol style="list-style-type: none"> <li>1. Reinstall or replace the PCDU.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the IOB.</li> </ol>
The sub scan lines are shifted. Shifted lines appear cyclically.	<ul style="list-style-type: none"> <li>• Defective PCDU</li> <li>• Defective drive unit</li> <li>• Drum phase adjustment error</li> </ul> <ol style="list-style-type: none"> <li>1. Do SP1-902-001 (Drum phase adjustment); see Replacement and Adjustment – Drive Unit – Gear Unit for details.</li> <li>2. Reinstall or replace the PCDU.</li> <li>3. Check or replace the drive unit.</li> </ol>

## Stain on the Outputs

If a stain appears at the edge of the output, do the following procedure.

1. Execute the fusing cleaning mode with SP1123-002.

**Note**

- It takes 160 seconds to complete the fusing cleaning mode.


2. Make a sample copy, and then check if a stain appears on the output.

---

## Stack Problem in the 1-Bin Tray

---

If a stack problem occurs on the 1-bin tray, raise the guide on the 1-bin tray.

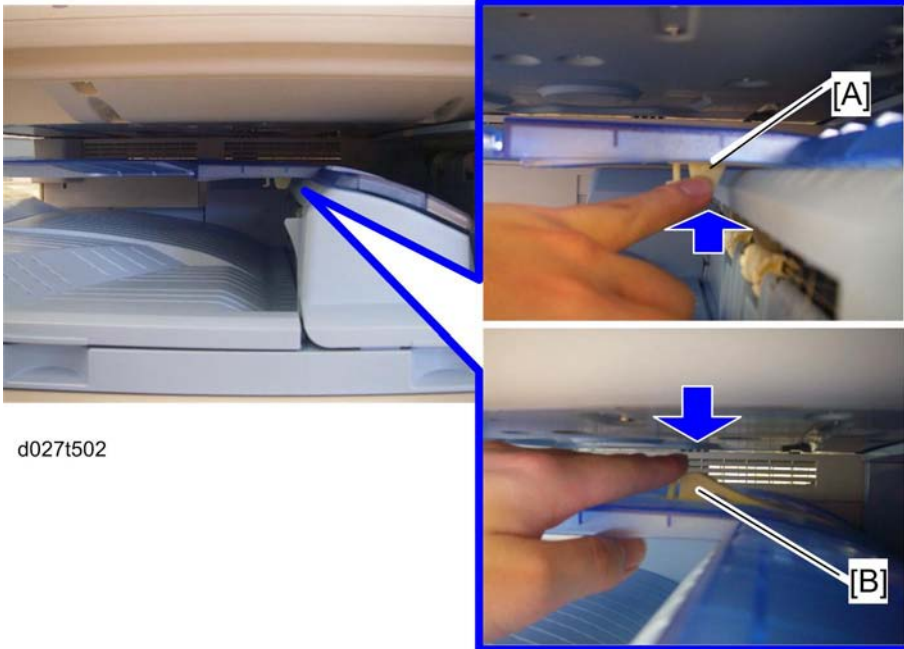

d027t502

6

If a stack problem occurs;

- Push the guide to lift the guide [A].

If another type or size of paper is used;

- Press down the guide [B].

---


## Problem at Regular Intervals

---

Image problems may appear at regular intervals that depend on the circumference of certain components.

The following diagram shows the possible symptoms (black or white dots at regular intervals).



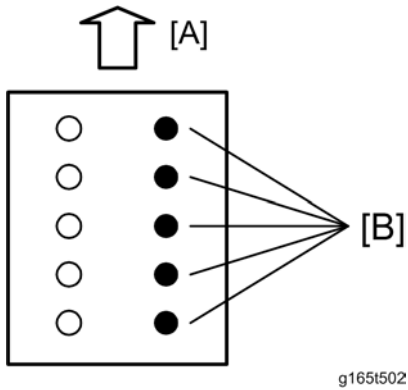

[A]: Paper feed direction

[B]: Problems at regular intervals


- Colored spots at 47-mm intervals: Development roller
- Abnormal image at 51-mm intervals: ITB drive or bias roller
- Abnormal image at 85-mm intervals: Paper transfer roller
- Colored spots at 119-mm intervals: Drum roller
- Abnormal image at 126-mm intervals: Fusing unit (Heating roller or Pressure roller)

## Toner End Recovery Error


If the toner end message on the LCD is displayed in the following conditions, there are some possible causes. Check the machine referring to the flow chart for the toner end recovery error.

- After a new toner bottle has been installed in the machine
- When a displayed color toner bottle still has toner inside

### Flow Chart for the Toner End Recovery Error

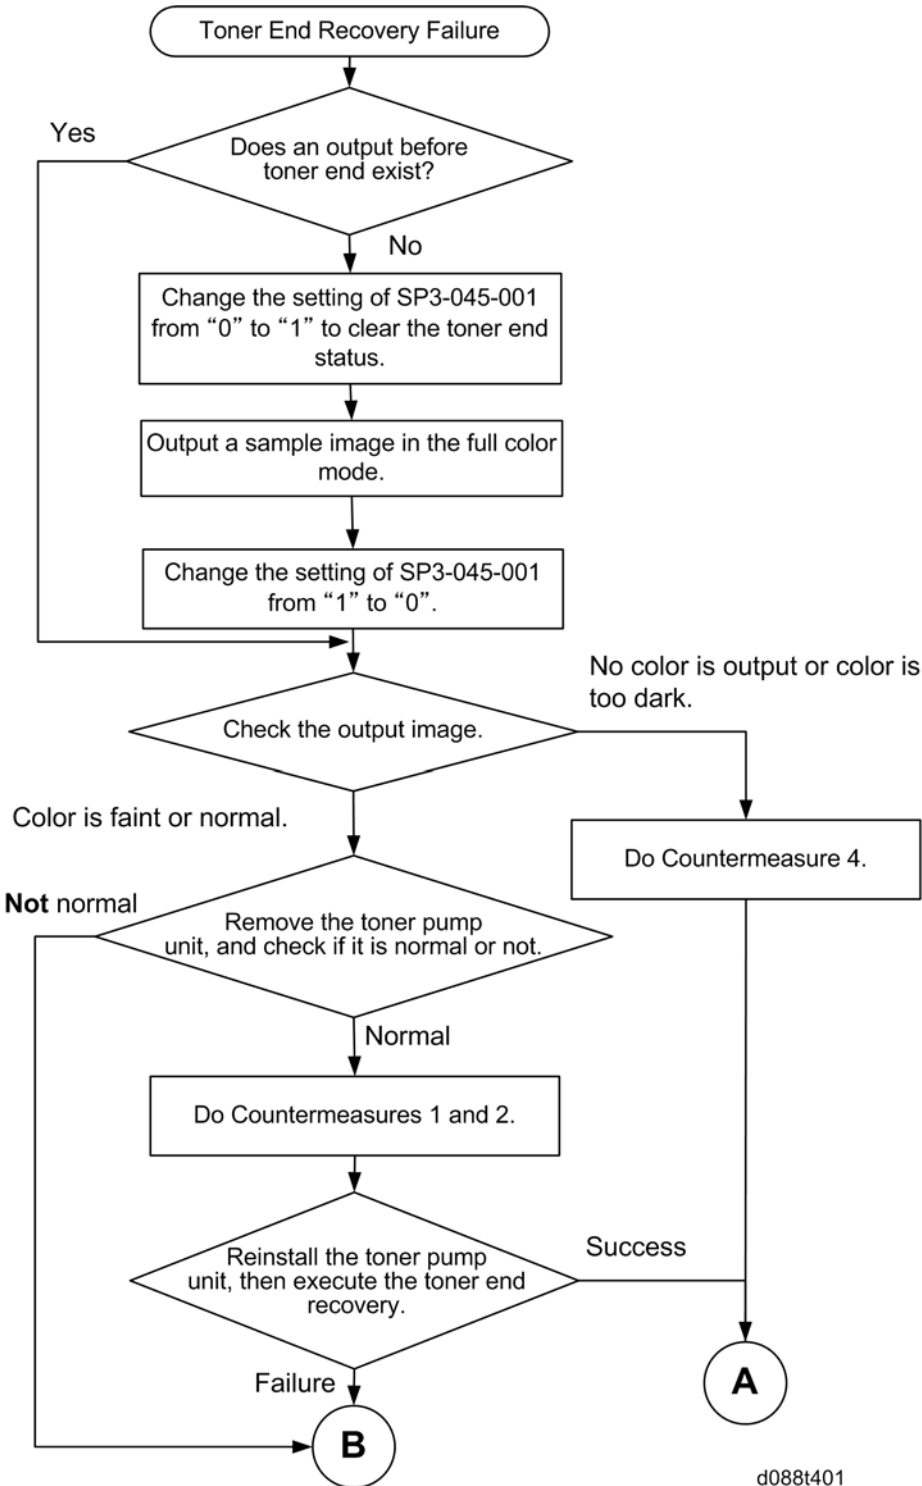

d088t401

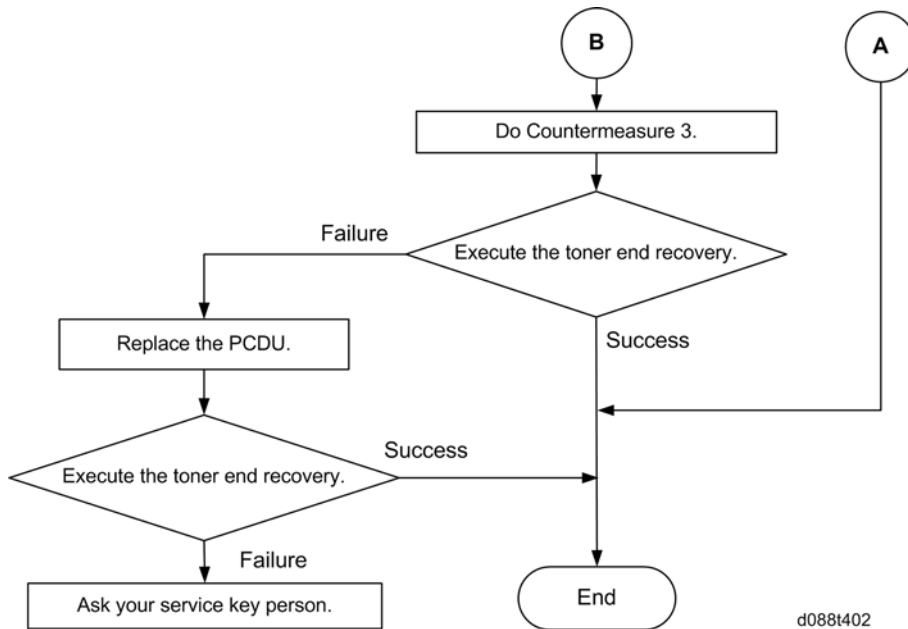

**Countermeasure 1**

1. Check if the toner supply tube is bent or disconnected.
2. Straighten the toner supply tube or connect it correctly.

**Countermeasure 2**

1. Remove the target color toner bottle.
2. Disconnect the toner supply tube from the toner pump unit.
3. Remove the blocked toner in the toner supply tube with a vacuum cleaner.

**Countermeasure 3**

- Replace the toner pump unit (▶ p.224).

**Countermeasure 4**

- Replace the PCDU (▶ p.214).

---

**Toner Bottle Detection Error**

---

If the no toner bottles message is displayed on the LCD when turning on the main power switch, or SC 681-11 to 14 occurs during operation, deformed detection terminals of toner bottles may have caused a toner bottle ID communication error. If this occurs, follow the countermeasure below.

**Countermeasure 1**

- Replace the toner bottles.


**Countermeasure 2**

- Replace the toner bottle detection board (▶ p.338).

#### ↓ Note

- When replacing the toner bottle detection board, be sure not to deform the toner bottle detection terminals. This error does not occur if the toner bottles are replaced correctly.

## Solid Image or Halftone Image Error

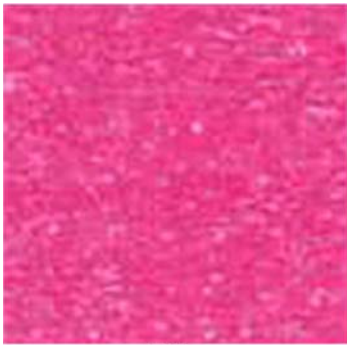

[A]



[B]

d088t403

The toner density of a solid image or halftone image may not be uniform ([A]: problem output, [B]: normal output) if a large amount of sheets is printed at low coverage. If this occurs, follow the countermeasure below.

### Recovery Procedure

1. Enter the SP mode.
2. Set SP3-044-xxx (Toner Supply Type) to "1: PID (Vref Fixed)".
  - Chose a target color SP number from -001 (Bk), -002 (Magenta), -003 (Cyan), and -004 (Yellow).
3. Set SP3-222-xxx (Vtref: Display/Set) to "4V".
  - Chose a target color SP number from -001 (Bk), -002 (Magenta), -003 (Cyan), and -004 (Yellow).
4. Set SP2-109-003 (Test Pattern; Pattern Selection) to "23: Full Dot Pattern".
5. Set SP2-109-005 (Test Pattern; Color Selection) to "1: All Color (black)", "2: Magenta", "3: Cyan", or "4: Yellow".
  - Chose a target color selection number.
6. Press "Copy Window" on the LCD.


7. Copy 20 sheets for A4 size or 30 sheets for A3 size, and then check the setting of SP3-222-xxx (Vref: Display/Set).
  - If the setting of this SP is more than 4V, go to next step. If not, copy again until the setting of this SP is more than 4V.
8. Return the setting of SP3-044-xxx (Toner Supply Type) to "4: MBD (Vref\_Control)".
  - Return the setting of the SP which you have changed in step 2 before.
9. Execute SP3-015-xxx (Forced Toner Supply: Execute) twice.
  - Chose a target color SP number from -003 (Bk), -004 (Magenta), -005 (Cyan) and -006 (Yellow).
10. Execute the SP3-011-002 (Process Cont. Manual Execution; Density Adjustment).

### Problem Prevention Procedure

- Set the setting of SP3-516-025 (Refresh Mode; Job End Area Coefficient) to "0.5".

## Faulty Cleaning

### Black or color lines (2-3mm)

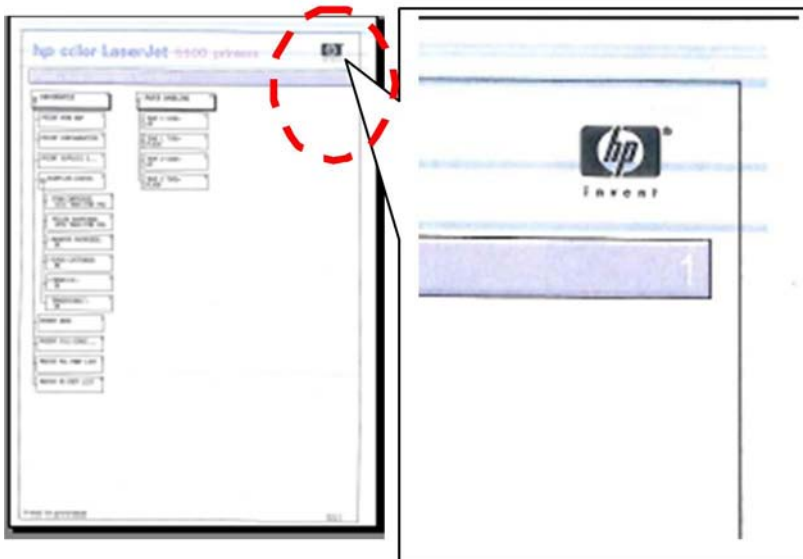

d088t404


#### Possible Cause:

Wear of the cleaning blade at a specific point by image creation in the same place many times.

**Solution:**

Replace the drum unit.

**Band Image Between 20mm and 30mm**

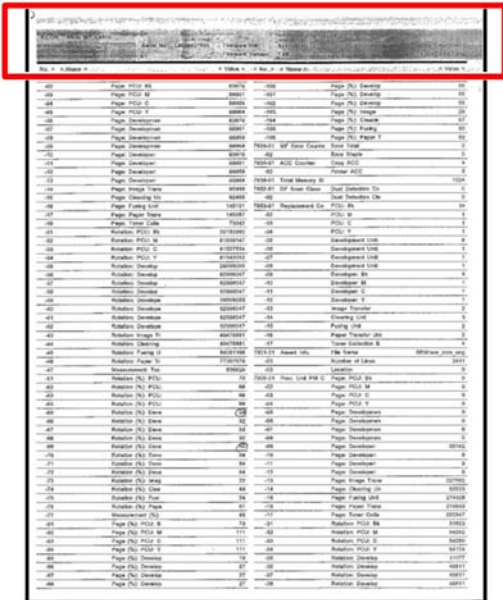

d088t405

**Possible Cause:**

Developer wear with time

**Solution:**

Replace the developer or the development unit.

**Encryption Key Restoration for NVRAM**

**How to restore the old encryption key to the machine**

The following message appears after the controller board is replaced, or after the hard disk and controller board are replaced. In such cases, it is necessary to restore the encryption key to the new controller board.

SD card for restoration is required.  
Turn the main power switch off and set the  
SD card, then turn the main power switch on.

d1420101

To do this, follow the procedure below.

1. Prepare an SD card that has been initialized in FAT16 format.
2. Using a PC, create a folder in the SD card and name it "restore\_key".
3. Create a folder in the "restore\_key" folder and name it the same as machine's serial number, "xxxxxxxxxx" (11 digits).
4. Create a text file called "key\_XXXXXXXXXX.txt" and save it in the "xxxxxxxxxx" folder. Write the encryption key in the text file.

/restore\_key/xxxxxxxxxx/key\_XXXXXXXXXX.txt

#### ↓ Note

- Ask an Administrator to enter the encryption key. The key has already been printed out by the user and may have been saved in the "key\_XXXXXXXXXX.txt" file. (The function of back-up the encryption key to the SD card directly is provided 11A products or later.)

5. Turn on the machine's main power switch.
6. Confirm that a message is displayed on the LCD telling to insert the SD card that contains the encryption key.
7. Turn off the main power switch.
8. Insert the SD card that contains the encryption key into Slot 2 (the lower slot).
9. Turn on the main power switch.

#### ↓ Note

- The machine will automatically restore the encryption key to the flash memory on the controller board.

10. Turn off the main power switch when the machine has returned to normal status.
11. Remove the SD card from Slot 2.

## How to do a forced start up with no encryption key

If the encryption key back-up has been lost, follow the procedure below to do a forced start-up.

### ★ Important

- The HDD will be formatted after the forced start-up.
- Encrypted data will be deleted.

- **User settings will be cleared.**

1. Prepare an SD card.
2. Create a directory named "restore\_key" inside the root directory of the SD card. Then, save the "nvram\_key.txt" file using the following name:  
/restore\_key/nvram\_key.txt
3. Create a text file and write "nvclear".

**★ Important**

- **Write this string at the head of the file.**
  - **Use all lower-case letters.**
  - **Do not use quotation marks or blank spaces.**
  - **It is judged that a forced start has been selected when the content of "nvclear" is executed and the machine shifts to the alternate system (forced start).**
4. Confirm that a message is displayed on the LCD telling to insert the SD card that contains the encryption key.
  5. Turn off the main power switch.
  6. Insert the SD card that contains the encryption key into Slot 2 (the lower slot).
  7. Turn on the main power switch.
  8. Turn on the main power switch, the machine automatically clear the HDD encryption.
  9. Turn off the main power switch when the machine has returned to normal status.
  10. Remove the SD card from Slot 2.
  11. Turn on the main power switch.
  12. Memory clear SP5-801-xx (Exclude SP-5-801-001: All Clear and SP-5-801-002: Engine), and clear SP5-846-046: address book.
  13. Set necessary user settings in User Tools key.


---

## Fax Icon is not Displayed

---


When the fax unit is installed on the machine, the fax icon [A] is displayed on the home screen of the operation panel, as shown below. (The figure shown below is an example of the home screen. The location of each icon depends on the settings.)



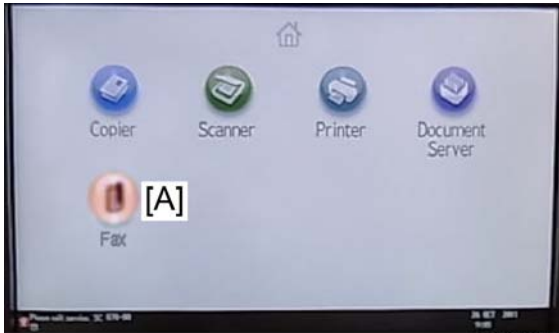

d1420109

If the fax icon is not displayed (as shown below), the FCU should be replaced. Refer to the Fax service manual for the FCU replacement procedure.

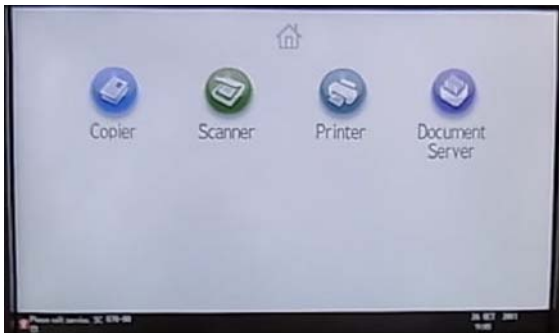

d1420108


## Other Symptoms

The following pages explain troubleshooting for the following symptoms:

- SC 861(HDD reboot error) to 865 (HDD access error)
- Any SC that indicates a defective controller board
- "Please wait" remains on display

## Flowchart for the error

Test the machine using the flow chart below, to determine which parts are causing the problem.

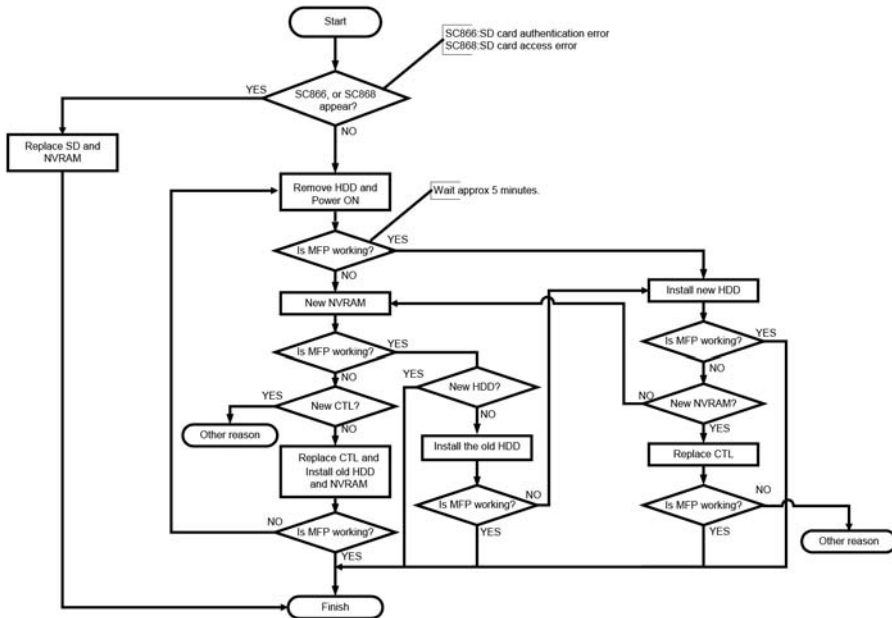

d1420102

### Countermeasure list for the error

The following table shows what to do in each case: For example, if only the controller and HDD were found to be defective, then it is No 4 in the table below.

#### HDD Encryption OFF \*1

CTL	HDD	NVRAM	SD Card	Action	No
R	R	R	R	Replace CTL / HDD / SD card / NVRAM	1
R	R	R	(R)	Replace CTL / HDD / SD card / NVRAM	2
R	R	-	R	Replace CTL / HDD / SD card	3
R	R	-	-	Replace CTL / HDD	4
R	-	R	R	Replace CTL / SD card / NVRAM	5
R	-	R	(R)	Replace CTL / SD card / NVRAM	6
R	-	-	R	Replace CTL / SD card	7
R	-	-	-	Replace CTL	8

CTL	HDD	NVRAM	SD Card	Action	No
-	R	R	R	Replace HDD / SD card / NVRAM	9
-	R	R	(R)	Replace HDD / SD card / NVRAM	10
-	R	-	R	Replace HDD / SD card	11
-	R	-	-	Replace HDD	12
-	-	R	R	Replace SD card / NVRAM	13
-	-	R	(R)	Replace SD card / NVRAM	14
-	-	-	R	Replace SD card	15

**HDD Encryption ON \*1**

CTL	HDD	NVRAM	SD Card	Action	No
R	R	R	R	Replace CTL / HDD/SD card / NVRAM.	1
R	R	R	(R)	Replace CTL / HDD/SD card / NVRAM.	2
R	R	-	R	Replace CTL / HDD/SD card.	3
R	R	-	-	Replace CTL / HDD.	4
R	-	R	R	Replace CTL / SD Card/NVRAM, then the HDD is automatically formatted.	5
R	-	R	(R)	Replace CTL / SD Card/NVRAM, then the HDD is automatically formatted.	6
R	-	-	R	Replace CTL, then restore the old encryption key, then replace SD card.	7
R	-	-	-	Replace CTL, then restore the old encryption key.	8
-	R	R	R	Replace HDD / SD card / NVRAM.	9
-	R	R	(R)	Replace HDD / SD card / NVRAM.	10
-	R	-	R	Replace HDD / SD card.	11
-	R	-	-	Replace HDD.	12

CTL	HDD	NVRAM	SD Card	Action	No
-	-	R	R	Replace SD card / NVRAM.	13
-	-	R	(R)	Replace SD card / NVRAM.	14
-	-	-	R	Replace SD card.	15

(legends)

- : Not defective parts

R: Defective parts, must replace

(R): Not defective parts but must be replaced

\* 1: Data Overwrite Security (ON/OFF) does not affect the combination table.

# Jam Detection

## Paper Jam Display

SP7-507 shows the paper jam history.

```
CODE :011
SIZE  :05h
TOTAL:000034
DATE  :Fri Feb 15 11:44:50 2006
```

- **CODE:** Indicates the jam code.
- **SIZE:** Indicates the paper Size Code.
- **TOTAL:** Indicates the total counter (SP7-502-001).
- **DATE:** indicates the date when the jam occurred.

## Jam Codes and Display Codes

SP7-504 shows how many jams occurred at each location.

Jam Code SP	Display	Description	LCD Display
7504 3	Tray 1: ON	Paper is not fed from tray 1.	A
7504 4	Tray 2: ON	Paper is not fed from tray 2.	A
7504 5	Tray 3: ON	Paper is not fed from tray 3 (LCT).	Y
7504 6	Tray 4: ON	Paper is not fed from tray 4.	Y
7504 7	LCT: ON	Paper is not fed from LCT.	U
7504 8	Bypass: ON	Paper is not fed from the by-pass tray.	A
7504 9	Duplex: ON	Paper is jammed at the duplex unit.	Z
7504 10	-	-	-
7504 11	Vertical Transport 1: ON	Vertical transport sensor 1 does not detect paper from tray 1.	A

Jam Code SP	Display	Description	LCD Display
7504 12	Vertical Transport 2: ON	Vertical transport sensor 2 does not detect paper from tray 2.	A
7504 13	Bank Transport 3	Vertical transport sensor 3 or relay sensor does not detect paper from tray 3 (LCT).	Y
7504 14	Bank Transport 4	Vertical transport sensor 4 or relay sensor does not detect paper from tray 4 (LCT).	Y
7504 15	-	-	-
7504 16	-	-	-
7504 17	Registration: ON	Registration sensor does not detect paper.	B
7504 18	Fusing Entrance: ON	Fusing entrance sensor does not detect paper.	B
7504 19	Fusing Exit: ON	Fusing exit sensor does not detect paper.	B
7504 20	Paper Exit: ON	Paper exit sensor does not detect paper.	C
7504 21	Relay Exit: ON	Tray exit sensor (bridge unit) does not detect paper.	D
7504 22	Relay Transport: ON	Relay sensor (bridge unit) does not detect paper.	D
7504 23	-	-	-
7504 24	Junction Gate Feed: ON	Junction gate jam sensor does not detect paper.	C
7504 25	Duplex Exit: ON	Duplex exit sensor does not detect paper.	Z
7504 26	Duplex Entrance: ON (In)	Duplex entrance sensor does not detect paper.	Z
7504 27	Duplex Entrance: ON (Out)	Duplex entrance sensor does not detect paper again after paper has passed this sensor.	Z
7504 28	-	-	-
7504 51	SEF Sensor 1	Vertical transport sensor 1 does not turn off.	A
7504 52	SEF Sensor 2	Vertical transport sensor 2 does not turn off.	A

Jam Code SP	Display	Description	LCD Display
7504 53	Bank SEF Sensor 3	Vertical transport sensor or relay sensor 3 does not turn off.	Y
7504 54	Bank SEF Sensor 4	Vertical transport sensor 4 does not turn off.	Y
7504 55	-	-	-
7504 56	-	-	-
7504 57	Regist Sensor	Registration sensor does not turn off.	B
7504 58	LCT Sensor	LCT sensor does not turn off.	U
7504 59	-	-	-
7504 60	Exit Sensor	Paper exit sensor does not turn off.	C
7504 61	Relay Exit Sensor	Tray exit sensor (bridge unit) does not turn off.	D
7504 62	Relay Sensor	Relay sensor (bridge unit) does not turn off.	D
7504 63	-	-	-
7504 64	Junction Gate Feed: OFF	Junction gate jam sensor does not turn off.	C
7504 65	Duplex Exit Sensor	Duplex exit sensor does not turn off.	Z
7504 66	Duplex Entrance: OFF (In)	Duplex entrance sensor does not turn off.	Z
7504 67	Duplex Entrance: OFF (Out)	Duplex entrance sensor does not turn off after paper has passed this sensor.	Z
7504 68	-	-	-
7504 100	Finisher Entrance (D588)	Paper does not reach to the entrance sensor or stay at the entrance sensor.	R1-R2
7504 101	Finisher Shift Tray Exit (D588)	Paper does not reach to the lower tray exit sensor or stay at the lower tray exit sensor.	R1-R2
7504 102	Finisher Staple (D588)	Paper does not reach to the staple tray entrance sensor or stay at the staple tray entrance sensor.	R3-R5

Jam Code SP	Display	Description	LCD Display
7504 103	Finisher Exit (D588)	Lower tray exit sensor does not detect paper after the stack feed-out belt has fed paper. Lower tray exit sensor still detects paper after the stack feed-out belt has returned to the home position.	R3-R5
7504 104	-	-	-
7504 105	Finisher Tray Lift Motor (D588)	Stack height sensor does not detect paper after the lower tray has lifted up. Stack height sensor still detects paper after the lower tray has lifted down.	R1-R2
7504 106	Finisher Jogger Motor (D588)	Jogger fence HP sensor does not turn off after the jogger fence has moved from its home position. Jogger fence HP sensor does not turn on after the jogger fence has returned to its home position.	R3-R5
7504 107	Finisher Shift Motor (D588)	Shift roller HP sensor does not turn off after the shift roller has moved from its home position. Shift roller HP sensor does not turn on after the shift roller has returned to its home position.	R1-R2
7504 108	Finisher Staple Motor (D588)	Stapler HP sensor does not turn off after the stapler has moved from its home position. Stapler HP sensor does not turn on after the stapler has returned to its home position.	R3-R5
7504 109	Finisher Exit Motor (D588)	Stack feed-out belt HP sensor does not turn off after the stack feed-out belt has moved from its home position. Stack feed-out belt HP sensor does not turn on after the stack feed-out belt has returned to its home position.	R3-R5
7504 191	Finisher Entrance: EUP (D637/D636)	Paper does not reach the finisher entrance sensor or stays at the finisher entrance sensor.	R1-R4



Jam Code SP	Display	Description	LCD Display
7504 192	Finisher Proof Exit: EUP (D637/D636)	Paper does not reach the proof tray exit sensor or stays at the proof tray exit sensor.	R1-R4
7504 193	Finisher Shift Tray Exit: EUP (D637/D636)	Paper does not reach the upper tray exit sensor or stays at the upper tray exit sensor.	R1-R4
7504 194	Finisher Stapler Exit: EUP (D637/D636)	Stapling tray paper sensor does not turn on after the finisher entrance sensor has turned on. Stapling tray paper sensor does not turn off after it has turned on.	R5-R7
7504 195	Finisher Exit: EUP (D637/D636)	Upper tray exit sensor does not turn on while the stack feed-out belt is turned on. Upper tray exit sensor does not turn off after the stack feed-out belt has returned to its home position.	R8-R12
7504 196	-	-	-
7504 197	-	-	-
7504 198	Finisher Folder: EUP (D637 only)	Fold bottom fence HP sensor does not turn on after the fold roller motor has stopped. Fold unit exit sensor does not turn on after the fold rollers have stopped. Fold unit exit sensor does not turn off after the fold rollers have stopped.	R8-R12
7504 199	Finisher Tray Motor: EUP (D637/D636)	Upper tray limit sensor does not turn on after the upper tray has lifted up. Upper tray limit sensor does not turn off after the upper tray has moved down.	R1-R4
7504 200	Finisher Jogger Motor: EUP (D637/D636)	Jogger fence HP sensor does not turn on/off after the jogger motor has turned on. Stack feed out belt HP sensor does not turn on/off after the feed out belt motor has turned on.	R8-R12


Jam Code SP	Display	Description	LCD Display
7504 201	Finisher Shift Motor: EUP (D637/D636)	<p>Shift roller HP sensor does not turn on/off after the shift roller motor has turned on.</p> <p>Exit guide plate HP sensor does not turn on/off after the exit guide plate motor has turned on.</p> <p>Stacking roller HP sensor does not turn on/off after the stacking sponge roller motor has turned on.</p>	R1-R4
7504 202	Finisher Staple Moving Motor: EUP (D637/D636)	<p>Corner stapler HP sensor does not turn on/off after the corner stapler movement motor has turned on.</p> <p>Stapler rotation HP sensor does not turn on/off after the corner stapler rotation motor has turned on.</p>	R8-R12
7504 203	Finisher Staple Motor: EUP (D637/D636)	<p>Corner stapler does not finish stapling after a specified time.</p> <p>Booklet stapler does not finish stapling after a specified time.</p>	R8-R12
7504 204	Finisher Folder Motor: EUP (D637 only)	<p>Fold plate HP sensor does not turn on/off after the fold plate motor has turned on.</p> <p>Clamp roller HP sensor does not turn on/off after the clamp roller retraction motor has turned on.</p> <p>Fold bottom fence HP sensor does not turn on/off after the fold unit bottom fence lift motor has turned on.</p> <p>Stack junction gate HP sensor does not turn on/off after the stack junction gate motor has turned on.</p>	R8-R12
7504 205	-	-	-

Jam Code SP	Display	Description	LCD Display
7504 206	Finisher Punch Motor: EUP (D637/D636)	<p>Punch encoder sensor does not turn on/off after the punch drive motor has turned on.</p> <p>Punch movement HP sensor does not turn on/off after the punch movement motor has turned on.</p> <p>Paper position slide HP sensor does not turn on/off after the paper position sensor slide motor has turned on.</p>	R1-R4

### Paper Size Code

Size Code	Paper Size	Size Code	Paper Size
05	A4 LEF	141	B4 SEF
06	A5 LEF	142	B5 SEF
14	B5 LEF	160	DLT SEF
38	LT LEF	164	LG SEF
44	HLT LEF	166	LT SEF
132	A3 SEF	172	HLT SEF
133	A4 SEF	255	Others
134	A5 SEF	-	-

### Sensor Locations

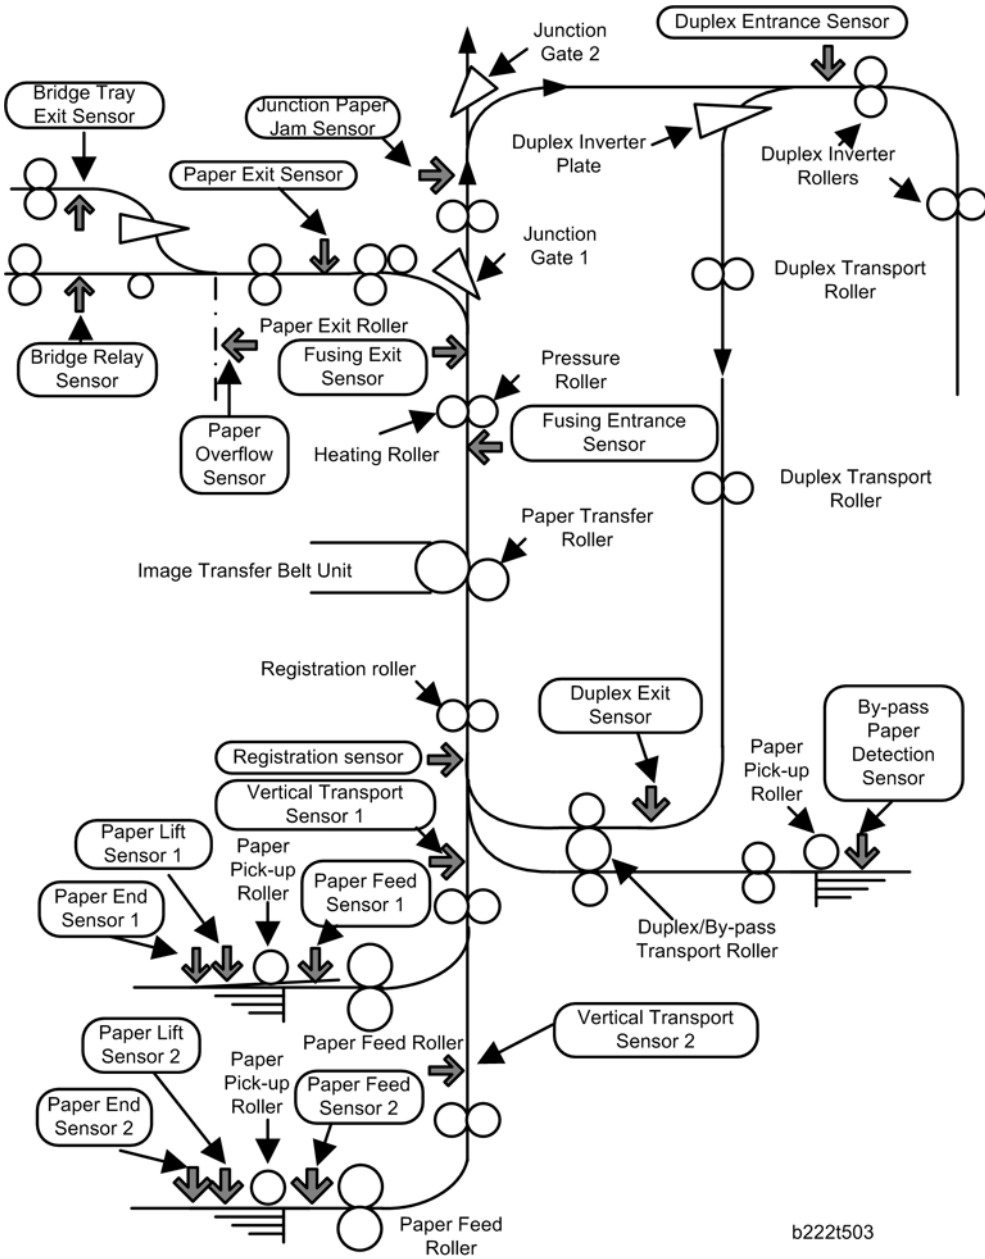

b222t503

# Electrical Component Defects

## Sensors

### Note

- The CN numbers in the following table are the connector numbers on the IOB.

No.	Sensor Name/ Sensor Board Name	Active	CN	Condition	Symptom
SW1	Right Door Open Switch	L	CN204/1	Open	"Open Cover" is displayed.
				Shorted	"Open cover" cannot be detected.
S9	Duplex Door	L	CN232/B11	Open	"Open Cover" is displayed.
				Shorted	"Open cover" cannot be detected.
S1	ID Sensor: Front	A	CN219/1	Open/ Shorted	SC370
	ID Sensor: Center and K	A	CN219/2	Open/ Shorted	SC370
	ID Sensor: Rear	A	CN219/3	Open/ Shorted	SC370
S12	Registration Sensor	L	CN224/A2	Open	Jam A (Jam8, 17)
				Shorted	Jam A, B (Jam1)
S30	Drum Gear Position Sensor-K	H	CN222/A2	Open/ Shorted	SC390-01/SC396-01
S31	Drum Gear Position Sensor-C	H	CN222/ A5	Open/ Shorted	SC390-02/SC396-02
S32	Drum Gear Position Sensor-M	H	CN222/ A8	Open/ Shorted	SC390-03/SC396-03

No.	Sensor Name/ Sensor Board Name	Active	CN	Condition	Symptom
S33	Drum Gear Position Sensor-Y	H	CN222/A11	Open/ Shorted	SC390-04/SC396-04
S26	Toner End Sensor - K	L	CN207/B14	Open	Toner end cannot be detected.
S27	Toner End Sensor - Y		CN207/B3	Shorted	Toner end is detected when there is enough toner.
S28	Toner End Sensor - C		CN207/ B9		
S29	Toner End Sensor - M		CN207/ B6		
S34	Image Transfer Belt Rotation Sensor	H/L	CN206/3	Open/ Shorted	SC443
S19	Vertical Transport Sensor 1	L	CN230/A7	Open	Jam A (Jam3, 11)
				Shorted	Jam A, B (Jam1)
S20 S24	Paper End Sensor 1, 2	L	CN230/ A10, B10	Open	Paper end is not detected when there is no paper in the paper tray.
				Shorted	Paper end is detected when there is paper in the paper tray.
S21 S25	Paper Lift Sensor 1, 2	H	CN230/ A13, B13	Open/ Shorted	SC501, SC502
S23	Vertical Transport Sensor 2	L	CN230/B7	Open	Jam A (Jam4, 12)
				Shorted	Jam A, B (Jam1)
S14 S15	Tray 1 Paper Height Sensor 1, 2	L	CN224/ B2, B5	Open/ Shorted	Remaining paper volume on the LCD is wrong.
S16 S17	Tray 2 Paper Height Sensor 1, 2	L	CN224/ B10, B13	Open/ Shorted	Remaining paper volume on the LCD is wrong.
S18	Tray 1 Paper Feed Sensor	L	CN230/A4	Open/ Shorted	Jam A, B

No.	Sensor Name/ Sensor Board Name	Active	CN	Condition	Symptom
S22	Tray 2 Paper Feed Sensor	L	CN230/B4	Open/ Shorted	Jam A, B
SW4	Tray 1 Set Switch	L	CN224/A9	Open	Tray 1 is not detected when tray 1 is set.
				Shorted	Tray 1 is detected when tray 1 is not set.
S11	By-pass Paper Size Sensor	L	CN232/ B16, B17, B19, B20	Open/ Shorted	Paper size error
SW2	By-pass Paper Detection	L	CN232/ A10	Open	Paper on the by-pass tray is not detected when paper is set.
				Shorted	Paper on the by-pass tray is detected when paper is not set.
S10	By-pass Paper Length Sensor	L	CN232/ B14	Open	Paper size error
				Shorted	
S8	Fusing Entrance Sensor	L	CN232/B2	Open	Jam C (Jam 18)
				Shorted	Jam C (Jam 1)
S6	Duplex Entrance Sensor	L	CN232/A2	Open	Jam Z (Jam 26/27)
				Shorted	Jam Z (Jam 1)
S7	Duplex Exit Sensor	L	CN232/ B8	Open	Jam Z (Jam 25)
				Shorted	Jam Z (Jam 1)
S39	TD Sensor - K	A	CN227/A7	Open/ Shorted	SC360-01
S40	TD Sensor - C	A	CN227/ A15	Open/ Shorted	SC360-02

No.	Sensor Name/ Sensor Board Name	Active	CN	Condition	Symptom
S41	TD Sensor - M	A	CN227/B7	Open/ Shorted	SC360-03
S42	TD Sensor - Y	A	CN227/ B15	Open/ Shorted	SC360-04
S4	Fusing Exit Sensor	L	CN204/12	Open	Jam C (Jam 19)
				Shorted	Jam C (Jam 1)
S13	Waste Toner Sensor	H	CN224/A5	Open	Waste toner near full indicated when it is not near full.
				Shorted	Waste toner near full cannot be detected when the waste toner bottle is nearly full.
SW3	Waste Toner Bottle Set Switch	L	CN224/A7	Open	Waste toner bottle is not detected when the waste toner bottle is set.
				Shorted	Waste toner bottle is detected when the waste toner bottle is not set.
SW5	Tray 2 Paper Size Switch	L	CN224/ A11, A12, A13, A15	Open/ Shorted	Paper size error
S35	Temperature/ Humidity Sensor	A	CN234/ 6, 8	Open/ Shorted	SC498 Printed image has some problems such as rough image, dirty background, weak image or poor fusing.
S36	Thermopile Center, Edge	A	CN212/3, 6	Open/ Shorted	SC541, SC551



No.	Sensor Name/ Sensor Board Name	Active	CN	Condition	Symptom
TH1	Thermistor • Pressure Roller Center, Edge	A	CN212/21,1 9	Open/ Shorted	SC561, SC571
S3	Paper Exit Sensor	L	CN204/9	Open	Jam C (Jam 20)
				Shorted	Jam C (Jam 1)
S2	Junction Paper Jam Sensor	L	CN204/6	Open/ Shorted	Jam C (Jam 24/64)
-	NC Sensor Center, Edge	A	CN212/14,9	Open/ Shorted	SC581, SC591
S5	Paper Overflow Sensor	L	CN204/15	Open	Paper overflow message is not displayed when the paper overflow condition still remains.
				Shorted	Paper overflow message is displayed when the paper overflow condition does not remain.
S46	Original Length Sensor 1	A	CN313/8 SIO	Open/ Shorted	Original paper size cannot be detected.
	Original Length Sensor 2	A	CN313/5 SIO	Open/ Shorted	Original paper size cannot be detected.
S47	Original Length Sensor 3	A	CN313/2 SIO	Open/ Shorted	Original paper size cannot be detected.
S43	Scanner HP Sensor	H	CN318/2 SIO	Open	SC120
				Shorted	SC121
S44	Platen Cover Sensor	L	CN318/5 SIO	Open/ Shorted	Platen cover open cannot be detected.

No.	Sensor Name/ Sensor Board Name	Active	CN	Condition	Symptom
S37	Heating Roller Rotation Sensor	H/L	CN210/2	Open/ Shorted	SC584
S38	Pressure Roller HP Sensor	L	CN210/5	Open/ Shorted	SC569
S2	Junction Paper Jam Sensor	L	CN204/6	Open/ Shorted	Jam C (Jam 24/64)

## Blown Fuse Conditions

### Power Supply Unit

Fuse	Rating		Symptom when turning on the main switch
	115V	220V - 240V	
FU1	15A/250V	8A/250V	No response. (5V power to the PSU is not supplied.)
FU2	15A/250V	6.3A/250V	No response. (5V power to the IPU and controller is not supplied.)
FU3*1	2A/250V	2A/250V	5V power to the scanner heater and tray heater is not supplied.
FU4*1	5A/250V	5A/250V	5VE power to the SIO and IOB is not supplied.
FU5*1	5A/250V	5A/250V	5V power to the IOB not supplied.
FU6*1	5A/250V	5A/250V	5V power to the IPU not supplied.
FU7	8A/250V	8A/250V	24VS power to the IOB not supplied.
FU8	8A/250V	8A/250V	24VS power to the IOB not supplied.
FU9	8A/250V	8A/250V	24V power to the IOB and IPU not supplied.
FU10	8A/250V	8A/250V	24V power to the SIO not supplied.
FU11	8A/250V	8A/250V	24V power to the PFU or LCT and finisher not supplied.

## AC Drive Board

Fuse	Rating		Symptom when turning on the main switch
	115V	220V - 240V	
FU1	15A/250V	8A/250V	SC574-02 occurs.
FU2*1	1A/250V	1A/250V	No Voltage detection

### CAUTION

- For continued protection against risk of fire, replace only with same type and rating of fuse.

\* 1 Replace the whole board or unit if this fuse blows, because it is soldered.

# Scanner Test Mode

---

## SBU Test Mode

---

Output the SBU test pattern with SP4-807-001 to make sure the scanner SBU control operates correctly. The SBU test pattern prints out after you have set the SP mode settings and pressed the start key.


- The CCD on the SBU board may be defective if the copy is abnormal but the SBU test pattern is normal.
- The following can be the cause if the copy is abnormal and the SBU test pattern is also abnormal:
  - The harness may not be correctly connected between the SBU and the IPU.
  - The IPU or SBU board may be defective.

# 7. Energy Saving

## Energy Save

### Energy Saver Modes

Customers should use energy saver modes properly, to save energy and protect the environment.

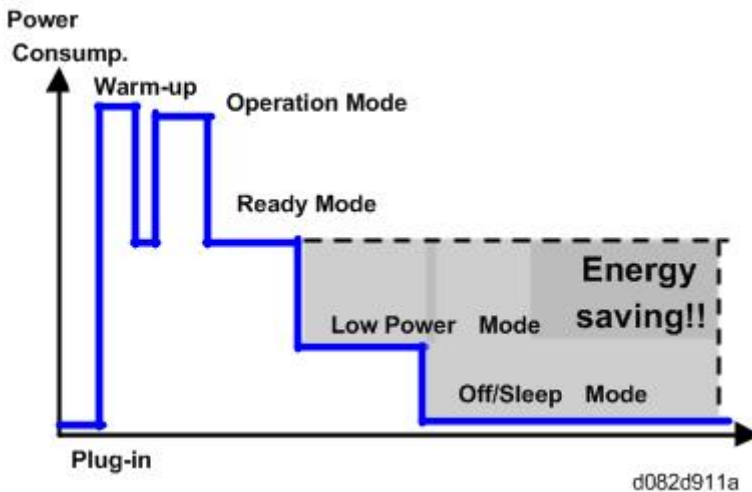

The area shaded grey in this diagram represents the amount of energy that is saved when the timers are at the default settings. If the timers are changed, then the energy saved will be different. For example, if the timers are all set to 240 min., the grey area will disappear, and no energy is saved before 240 min. expires.

### Timer Settings

The user can set these timers with User Tools (System settings > Timer setting)

- Energy saver timer (1 – 240 min): Low Power Mode. Default setting: 1 min (for NA and EU)/10 min (others).
- Auto off timer (1 – 240 min): Off/Sleep Mode. Default setting: 1 min (for NA and EU)/16 min (others).

Normally, Energy Saver timer < Auto Off timer. But, for example, if Auto Off timer < or = Energy Saver timer, the machine goes immediately to Off mode when the Auto Off timer expires. It skips the Energy Saver mode.

#### Example

- Low power: 15 min.

- Auto Off: 1 min.
- The machine goes to Off mode after 1 minute. Low Power mode is not used.

## Return to Stand-by Mode

---

### Low Power Mode

The recovery time depends on the model and the region.

- C3c: 15 sec. or less
- C3d: 20 sec. or less

### Off/Sleep Mode

Recovery time.

- C3c: 20 sec. or less
- C3d: 30 sec. or less

## Recommendation

---

We recommend that the default settings should be kept.

- If the customer requests that these settings should be changed, please explain that their energy costs could increase, and that they should consider the effects on the environment of extra energy use.
- If it is necessary to change the settings, please try to make sure that the Auto Off timer is not too long. Try with a shorter setting first, such as 30 min., then go to a longer one (such as 60 min.) if the customer is not satisfied.
- If the timers are all set to the maximum value, the machine will not begin saving energy until 240 minutes has expired after the last job. This means that after the customer has finished using the machine for the day, energy will be consumed that could otherwise be saved.
- If you change the settings, the energy consumed can be measured using SP8941, as explained below.

---

## Energy Save Effectiveness

---

SP 8941 (Machine Status) keeps a record of the amount of time that the machine spends in each mode.

- 8941-001: Operating mode
- 8941-002: Standby mode
- 8941-004: Low power mode
- 8941-005: Off/sleep mode

With this data, and the power consumption values from the specifications, we can estimate the amount of energy that is used by the machine.

This should only be used as a reference value, because the power consumption specifications are measured in a controlled environment with a constant power supply.

To get an exact measurement at the customers site, a watt meter must be used to measure the actual energy consumed.

To use SP8941 to calculate the energy consumed:

- At the start of the measurement period, read the values of SP8941 001 to 005.
- At the end of the measurement period, read the values of SP8941 001 to 005 again.
- Find the amount of time spent in each mode (subtract the earlier measurement from the later measurement).
- Multiply this by the power consumption spec for each mode.
- Convert the result to kWh (kilowatt hours)

# Paper Save

## Effectiveness of Duplex/Combine Function

Duplexing and the combine functions reduce the amount of paper used. This means that less energy overall is used for paper production, which improves the environment.

### 1. Duplex:


Reduce paper volume in half!



d062d102

### 2. Combine mode:

Reduce paper volume in half!

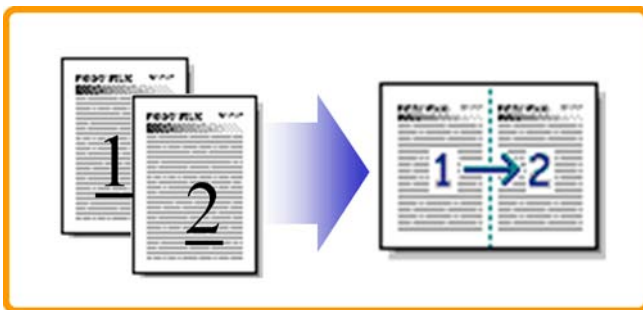


d062d100

### 3. Duplex + Combine:

Using both features together can further reduce paper volume by 3/4!



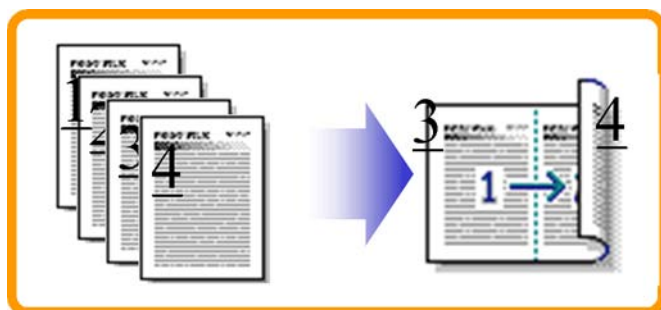

d062d101

To check the paper consumption, look at the total counter and the duplex counter.

The total counter counts all pages printed.

- For one duplex page, the total counter goes up by 2.
- For a duplex job of a three-page original, the total counter goes up by 3.

The duplex counter counts pages that have images on both sides.

- For one duplex page, the duplex counter goes up by 1.
- For a duplex job of a three-page original, the duplex counter will only increase by 1, even though two sheets are used.

## How to calculate the paper reduction ratio

How to calculate the paper reduction ratio, when compared with Single-sided copying, with no 2-in-1 combine mode

Paper reduction ratio (%) = Number of sheets reduced: A / Number of printed original images: B x 100

- Number of sheets reduced: A  
 = Output pages in duplex mode / 2 + Number of pages in Single-sided with combine mode + Number of pages in Duplex with combine mode x 3 / 2  
 $A = ((2) + (3) + (4)) / 2 + (5) + (6) \times 3 / 2$
- Number of printed original images: B  
 = Total counter + Number of pages in Single-sided with combine mode + Number of pages in Duplex with combine mode  
 $B = (1) + (5) + (6)$
- (1) Total counter: SP 8581 001 (pages)
- (2) Single-sided with duplex mode: SP 8421 001 (pages)
- (3) Double-sided with duplex mode: SP 8421 002 (pages)
- (4) Book with duplex mode: SP 8421 003 (pages)
- (5) Single-sided with combine mode: SP 8421 004 (pages)

- (6) Duplex with combine mode: SP 8421 005 (pages)

**Model AP-C3**  
**Machine Code: D143/D144**  
**Appendices**

January, 2012  
Revised



# TABLE OF CONTENTS

## 1. Appendices

- General Specifications.....5
  - Main Frame..... 5
  - Printer..... 10
  - Scanner..... 11
  - 1 Pass ADF (1 Pass Model only)..... 12
- Supported Paper Sizes..... 14
  - Paper Feed..... 14
    - North America..... 14
    - Europe/ Asia..... 16
  - Paper Exit..... 17
    - 2000/3000 Sheet Booklet Finisher (D637/D636)..... 17
    - 1000-Sheet Finisher (D588)..... 20
  - Platen/ARDF Original Size Detection..... 22
- Software Accessories..... 24
  - Printer Drivers..... 24
  - Scanner and LAN Fax drivers..... 24
  - Utility Software..... 25
- Optional Equipment..... 26
  - ARDF (D630)..... 26
  - Paper Feed Unit (D580)..... 26
  - LCT 2000-sheet (D581)..... 27
  - LCT 1200-sheet (D631)..... 27
  - 3000-Sheet Finisher (D636)..... 28
  - 2000-Sheet Booklet Finisher (D637)..... 29
  - Punch Unit (D570) for 2000/3000-Sheet (Booklet) Finisher..... 32
  - 1000-Sheet Finisher (D588)..... 33
    - Upper Tray..... 33
    - Lower Tray..... 33
  - Bridge Unit (D634)..... 34
  - Shift Tray (D633)..... 35
  - 1-bin Tray Unit (D632)..... 35

---

## 2. Preventive Maintenance Tables

---

Maintenance Tables.....	37
Preventive Maintenance Items.....	37
Mainframe.....	37
ARDF (D630).....	40
Two-tray Paper Feed Unit (D580).....	40
1200-sheet LCT (D631).....	40
2000-sheet LCT (D581).....	41
2000/3000-Sheet (Booklet) Finisher (D637/D636).....	41
2000/3000-Sheet (Booklet) Finisher Punch Kit (D570).....	42
1000-Sheet Finisher (D588).....	42
1 Bin Tray (D632).....	42
Bridge Unit (D634).....	42
Shift Tray (D633).....	42
Side tray (D635).....	43
Toner Scatterproof Filter Removal Procedure.....	43
Other Yield Parts.....	43
Mainframe.....	43
ARDF (D630).....	44
Single Pass DF.....	44

## 3. SP Mode Tables

---

Main SP Tables-1.....	45
SP1-XXX (Feed).....	45
Main SP Tables-2.....	93
SP2-XXX (Drum).....	93
Main SP Tables-3.....	164
SP3-XXX (Process).....	164
Main SP Tables-4.....	195
SP4-XXX (Scanner).....	195
Main SP Tables-5.....	213
SP5-XXX (Mode).....	213
Main SP Tables-6.....	281
SP6-XXX (Peripherals).....	281

---

Main SP Tables-7.....	290
SP7-XXX (Data Log).....	290
Main SP Tables-8.....	329
SP8-XXX: Data Log2.....	329
Input and Output Check.....	375
Input Check Table.....	375
Copier.....	375
Table 1: Paper Height Sensor.....	378
Table 2: Paper Size Switch (Tray 2).....	378
Table 3: Paper Size (By-pass Table).....	379
ARDF (D630).....	380
2000/3000-Sheet (Booklet) Finisher (D637, D636).....	381
1000-Sheet Finisher (D588).....	383
Bridge Unit (D634)/ Side Tray (D635).....	385
Internal Shift Tray (D633).....	385
1 Bin Tray (D632).....	385
Two-Tray PFU (D580)/ LCIT 2000 (D581)/ LCIT 1200 (D631).....	385
Output Check Table.....	386
Copier.....	386
ARDF (D630).....	393
1000-Sheet Finisher (D588).....	394
2000/3000-Sheet (Booklet) Finisher (D637/D636).....	395
Bridge Unit (D386)/ Side Tray (D634).....	396
Shift Tray (D633).....	396
1 Bin Tray (D632).....	396
Two-Tray PFU (D580)/ LCIT 2000 (D581)/ LCIT 1200 (D531).....	397
Printer Service Mode.....	398
SP1-XXX (Service Mode).....	398
Scanner SP Mode.....	407
SP1-XXX (System and Others).....	407
SP2-XXX (Scanning-image quality).....	407
Test Pattern Printing.....	409
<b>INDEX</b> .....	411





# 1. Appendices

## General Specifications

### Main Frame

Configuration:	Desktop
Print Process:	Laser beam scanning & Dry electrostatic transfer system 4 drums tandem method
Number of scans:	1
Resolution:	Scan: 600 dpi Print: 600 dpi
Gradation:	Scan: 600dpi / 10bits/pixel Print: 600dpi / 4 bits/pixel
Original type:	Sheets, book, objects
Maximum original size:	A3/11" x 17"
Original reference position:	Left rear corner, ad hoc lists

Copy speed:	<p><b>Plain (ADF 1 to 1, LT/ A4 LEF)</b>  C3c: 45 cpm (color/black &amp; white)  C3d: 55 cpm (color/black &amp; white)</p> <p><b>Thick 1 (169 g/m<sup>2</sup> or less)</b>  C3c: 25 cpm (color/black &amp; white)  C3d: 25 cpm (color/black &amp; white)</p> <p><b>Thick 2 (220 g/m<sup>2</sup> or less)</b>  C3c: 17.5 cpm (color/black &amp; white) from Tray  C3d: 17.5 cpm (color/black &amp; white) from Tray</p> <p><b>Thick 3 (256 g/m<sup>2</sup> or less)</b>  C3c: 17.5 cpm (color/black &amp; white) from Tray  C3d: 17.5 cpm (color/black &amp; white) from Tray</p> <p><b>Thick 4 (300 g/m<sup>2</sup> or less)</b>  C3c: 15 cpm (color/black &amp; white) from By-pass  C3d: 15 cpm (color/black &amp; white) from By-pass</p> <p><b>OHP, Glossy (1200 dpi)</b>  C3c: 17.5 cpm (color/black &amp; white)  C3d: 17.5 cpm (color/black &amp; white)</p>
First copy (normal mode):	<p>C3c:  Color: 5.7 seconds or less (A4/LT LEF)  Black &amp; white: 3.6 seconds or less (A4/LT LEF)</p> <p>C3d:  Color: 4.8 seconds or less (A4/LT LEF)  Black &amp; white: 3.1 seconds or less (A4/LT LEF)</p>
Warm-up time:	<p>C3c: 22.1 seconds or less (23°C)  C3d: 24.1 seconds or less (23°C)</p>
Print Paper Capacity: (80 g/m <sup>2</sup> , 20 lb)	<p>Standard tray: 550 sheets x 2  By-pass tray: 100 sheets (Normal), 40 sheets (Thick 1: 106 – 169 g/m<sup>2</sup>), 20 sheets (Thick 2/3: 170 - 256 g/m<sup>2</sup>), 35 sheets (Postcard)  Optional paper feed tray: 550 sheets x 2  2000-sheet LCT: 2000 sheets  1200-sheet LCT: 1200 sheets</p>

Print Paper Size:	(Refer to "Supported Paper Sizes".)		
	-	Minimum	Maximum
	Tray 1	A4/8.5" x 11" (LEF)	
	Tray 2	A5 (LEF)/ 8.5" x 11"	A3/11" x 17"
	By-pass	90 x 148 mm	305 x 600 mm
	Optional Tray	A5 (LEF)/ 8.5" x 11"	A3/11" x 17"
	2000-sheet LCT	A4/8.5" x 11" (LEF)	
	1200-sheet LCT	B5 (LEF)/ 257 x 182mm	A4 (LEF)/ 297 x 210mm
	Envelope feeder	A6(SEF)/ Postcard	A4/LT(SEF)
Printing Paper Weight:	Standard tray: 60 to 256 g/m <sup>2</sup> (16 to 68 lb.) Optional paper tray: 60 to 256 g/m <sup>2</sup> (16 to 68 lb.) By-pass tray: 60 to 300 g/m <sup>2</sup> (16 to 79.8 lb.) Duplex unit: 60 to 169 g/m <sup>2</sup> (16 to 45 lb.) 1200-sheet LCT : 60 to 216 g/m <sup>2</sup> (10 to 571lb)		
Output Paper Capacity:	Standard exit tray: 500 sheets or more (face down)* <sup>1</sup> Shift Tray: 250 sheets (80 g/m <sup>2</sup> ) 1-bin Tray: 125 (80 g/m <sup>2</sup> ) 1000-sheet finisher 250 + 1000 sheets (80 g/m <sup>2</sup> ) 2000-sheet booklet finisher: 250 + 2000 sheets (80 g/m <sup>2</sup> ) 3000-sheet booklet finisher: 250 + 3000 sheets (80 g/m <sup>2</sup> ) * 1: T6200, A4 LEF		
Continuous copy:	Up to 999 sheets		

Zoom:	Arbitrary: From 25 to 400% (1% step)		
	Fixed:		
	North America	Europe	
	25%	25%	
	50%	50%	
	65%	61%	
	73%	71%	
	78%	82%	
	85%	87%	
	93%	93%	
	100%	100%	
	121%	115%	
	129%	122%	
	155%	141%	
	200%	200%	
400%	400%		
Memory:	Standard: 2 GB		
Power Source:	120 V, 60 Hz: More than 12A (for North America) 110 V, 60 Hz: More than 20A (for Taiwan) 220 V – 240 V, 50/60 Hz: More than 8A (for Europe/Asia)		
Power Consumption:	-	110 - 120V	220 - 240V
	Maximum	1584 W or less	1700 W or less
	Sleep Mode	1.2 W or less	1.6 W or less

	Model	State	Mainframe	Complete system (* 1)
Noise Emission: (Sound Power Level)	C3c	Standby	40 dB(A) or Less	49 dB(A) or Less
		Operating	B/W: 71.8 dB(A) or Less	-
			Color: 71.5 dB(A) or Less	Color: 74 dB(A) or Less
	C3d	Standby	40 dB(A) or Less	52 dB(A) or Less
		Operating	B/W: 72 dB(A) or Less	-
			Color: 72 dB(A) or Less	Color: 76 dB(A) or Less
<p>(* 1) The complete system consists of mainframe, ARDF, finisher, and LCT. The above measurements were made in accordance with Ricoh standard methodology.</p>				
<p>Dimensions (W x D x H): Copier: 670 x 682 x 760 mm (26.4" x 26.9" x 29.9") or less Copier + PFU or LCT*1: 670 x 682 x 1020 mm (26.4" x 26.9" x 40.2") or less</p>				
<p>(* 1) with the two tray paper feed unit with the stabilizers</p>				
Weight:	<p>Less than 130 kg (287 lb.) [with ARDF excluding toner] Less than 133 kg (293 lb.) [with 1-Pass ADF excluding toner]</p>			

## Printer

Printer Languages:	<p>PCL 6(XL)/5c  RPCS (Refined Printing Command Stream)  Adobe PostScript 3 (Optional)  PDF Direct  IPDS (Optional)  PictBridge (Optional)  MediaPrint: JPEG/TIFF</p>
Resolution and Gradation:	<p>PCL 5c:  300 x 300 dpi : Available only in B/W mode  600 x 600 dpi : Fast (1 bit), Standard (2 bits), Fine (4 bits)  PCL 6:  600 x 600 dpi : Fast (1 bit), Standard (2 bits), Fine (4 bits) /  1200 x 1200 dpi  RPCS:  600 x 600 dpi, 1,800 x 600 dpi*, 9600 dpi x 600 dpi*  * 1,800 x 600 dpi = 600 x 600 dpi (2 bits)  * 9600 dpi x 600 dpi* = 600 x 600 dpi (4 bits)  PS3:  600 x 600 dpi : Fast (1 bit), Standard (2 bits), Fine (4 bits)</p>
Printing speed:	<p>C3c:  45 ppm in Plain/Middle Thick mode  17.5 ppm in Thick/OHP mode (depending on paper type)  C3d:  55 ppm in Plain mode  25 ppm in Middle Thick mode  17.5 ppm in Thick/OHP mode (depending on paper type)</p>

Resident Fonts:	<p>PCL 6(XL)/5c (Standard):  45 Compatible fonts  13 International fonts</p> <p>Adobe PostScript 3 (Optional):  136 fonts (24 Type 2 fonts, 112 Type 14 fonts)</p> <p>IPDS (Optional):  108 fonts</p>
Host Interfaces:	<p>USB2.0 Type A and Type B: Standard</p> <p>Ethernet (100 Base-TX/10 Base-T): Standard</p> <p>Gigabit Ethernet (1000 Base-T): Optional</p> <p>IEEE1284 parallel x 1: Optional</p> <p>IEEE802.11a/g/g (Wireless LAN): Optional</p> <p>Bluetooth (Wireless): Optional</p>
Network Protocols:	TCP/IP (IPv4, IPv6), IPX/SPX, AppleTalk (Auto Switching)

## Scanner

Standard Scanner Resolution:	<p>Main scan/Sub scan  600 dpi</p>
Available scanning Resolution Range:	<p>Twain Mode:  100 to 1200 dpi</p> <p>Delivery Mode:  100/200/300/400/600 dpi (default: 200 x 200)</p>
Grayscales:	1 bit or 8 bits/pixel each for RGB
Scanning Throughput (ARDF mode):	<p>Scan to E-mail / Folder:</p> <p>BW: 67 ipm (A4LEF / BW Text / Line Art / 200dpi / 300dpi)</p> <p>FC: 67 ipm (A4LEF / FC Text / Photo / 200dpi / 300dpi)</p>

Scanning Throughput (1 Pass ADF mode):	Scan to E-mail / Folder: <b>Simplex Scanning</b> BW: 85 ipm (A4LEF / BW Text / Line Art / 200dpi / 300dpi) FC: 85 ipm (A4LEF / FC Text / Photo / 200dpi / 300dpi) <b>Duplex Scanning</b> BW: 116 ipm (A4LEF / BW Text / Line Art / 200dpi / 300dpi) FC: 116 ipm (A4LEF / FC Text / Photo / 200dpi / 300dpi)
Interface:	Ethernet (100 Base-TX/10 Base-T/1000 Base-T for TCP/IP), Wireless LAN, Giga Ethernet, USB 2.0 Type A, SD-card slot
Compression Method:	B&W: TIFF (MH, MR, MMR) Gray Scale, Full Color: JPEG

## 1 Pass ADF (1 Pass Model only)

System	Single pass duplex document feeder		
Paper Size/Weight:	Simplex	Size	A3 to A5, DLT to HLT
		Weight	40 to 128 g/m <sup>2</sup> (11 to 34 lb.)
	Duplex	Size	A3 to A5, DLT to HLT
		Weight	52 to 128 g/m <sup>2</sup> (14 to 34 lb.)
Table Capacity:	100 sheets (81.4 g/m <sup>2</sup> , 22 lb)		
Original Standard Position:	Rear left corner		
Separation:	Feed belt and separation roller		
Original Transport:	Roller transport		
Original Feed Order:	From the top original		
Supported Magnification Ratios:	Front	50 to 200 %	
	Rear	Electrical magnification ratio	
Power Source:	DC 24V, 12V, 5V from the scanner unit		
Power Consumption:	Less than 90W		



---

Dimensions (W x D x H):	578 mm x 520 mm x 170 mm (22.8"x20.5"x6.7")
Weight:	Less than 16 kg (35.3 lb.)

# Supported Paper Sizes

1

## Paper Feed

### North America

BT: By-pass Tray, T1: Tray 1, T2/3/4: Tray 2/3/4, LCT 2000: Large Capacity Tray: 2000-sheet, LCT 1200: Large Capacity Tray: 1200-sheet, DU: Duplex Unit

Paper	Size (W x L)	BT	T1	T2/3/ 4	LCT 2000	LCT 1200	DU
A3 W	12" x 18"	M	-	-	-	-	-
A3 SEF	297 x 420mm	M	-	M	-	-	M
A4 SEF	210 x 297mm	M	-	A	-	-	M
A4 LEF	297 x 210mm	M	S	M	S	S	M
A5 SEF	148 x 210mm	M	-	-	-	-	-
A5 LEF	210 x 148mm	M	S	A	-	-	M
A6 SEF	105 x 148mm	M	-	-	-	-	-
B4 SEF	257 x 364mm	M	-	M	-	-	M
B5 SEF	182 x 257mm	M	-	A	-	-	M
B5 LEF	257 x 182mm	M	S	M	-	S	M
B6 SEF	128 x 182mm	M	-	-	-	-	-
Ledger	11" x 17"	A	-	A	-	-	M
Letter SEF	8.5" x 11"	A	-	A	-	-	M
Letter LEF	11" x 8.5"	A	M	A	M	M	M
Legal SEF	8.5" x 14"	M	-	A	-	-	M
Government Legal SEF	8.25" x 14"	M	-	M	-	-	M
Half Letter SEF	5.5" x 8.5"	A	-	-	-	-	-

Paper	Size (W x L)	BT	T1	T2/3/ 4	LCT 2000	LCT 1200	DU
Executive SEF	7.25" x 10.5"	M	-	M	-	-	M
Executive LEF	10.5" x 7.25"	M	-	A	-	-	M
F SEF	8" x 13"	M	-	M	-	-	M
Foolscap SEF	8.5" x 13"	M	-	M	-	-	M
Folio SEF	8.25" x 13"	M	-	M	-	-	M
	11" x 15"	M	-	M	-	-	M
	10" x 14"	M	-	M	-	-	M
	8" x 10"	M	-	M	-	-	M
8K	267 x 390mm	M	-	M	-	-	M
16K SEF	195 x 267mm	M	-	M	-	-	M
16K LEF	267 x 195mm	M	-	M	-	-	M
Custom		M	-	M	-	-	-
Com10 Env.	4.125" x 9.5"	M	-	-	-	-	-
Monarch Env.	3.875" x 7.5"	M	-	-	-	-	-
C6 Env.	114 x 162mm	M	-	-	-	-	-
C5 Env.	162 x 229mm	M	-	-	-	-	-
DL Env.	110 x 220mm	M	-	-	-	-	-

**Remarks:**

A	Supported: the sensor detects the paper size.
M	Supported: the user specifies the paper size.
S	Supported: depends on a technician adjustment
-	Not supported

## Europe/ Asia

BT: By-pass Tray, T1: Tray 1, T2/3/4: Tray 2/3/4, LCT 2000: Large Capacity Tray: 2000-sheet, LCT 1200: Large Capacity Tray: 1200-sheet, DU: Duplex Unit

Paper	Size (W x L)	BT	T1	T2/3/ 4	LCT 2000	LCT 1200	DU
A3 W	12" x 18"	M	-	-	-	-	-
A3 SEF	297 x 420mm	A	-	A	-	-	M
A4 SEF	210 x 297mm	A	-	A	-	-	M
A4 LEF	297 x 210mm	A	M	A	M	S	M
A5 SEF	148 x 210mm	A	-	-	-	-	-
A5 LEF	210 x 148mm	A	S	A	-	-	M
A6 SEF	105 x 148mm	A	-	-	-	-	-
B4 SEF	257 x 364mm	M	-	A	-	-	M
B5 SEF	182 x 257mm	M	-	A	-	-	M
B5 LEF	257 x 182mm	M	S	A	-	S	M
B6 SEF	128 x 182mm	M	-	-	-	-	-
Ledger	11" x 17"	M	-	M	-	-	M
Letter SEF	8.5" x 11"	M	-	A	-	-	M
Letter LEF	11" x 8.5"	M	S	M	S	S	M
Legal SEF	8.5" x 14"	M	-	M	-	-	M
Government Legal SEF	8.25" x 14"	M	-	M	-	-	M
Half Letter SEF	5.5" x 8.5"	M	-	-	-	-	-
Executive SEF	7.25" x 10.5"	M	-	M	-	-	M
Executive LEF	10.5" x 7.25"	M	-	M	-	-	M
F SEF	8" x 13"	M	-	M	-	-	M
Foolscap SEF	8.5" x 13"	M	-	M	-	-	M

Paper	Size (W x L)	BT	T1	T2/3/ 4	LCT 2000	LCT 1200	DU
Folio SEF	8.25" x 13"	M	-	M	-	-	M
	11" x 15"	M	-	M	-	-	M
	10" x 14"	M	-	M	-	-	M
	8" x 10"	M	-	M	-	-	M
8K	267 x 390mm	M	-	M	-	-	M
16K SEF	195 x 267mm	M	-	M	-	-	M
16K LEF	267 x 195mm	M	-	M	-	-	M
Custom		M	-	M	-	-	-
Com10 Env.	4.125" x 9.5"	M	-	-	-	-	-
Monarch Env.	3.875" x 7.5"	M	-	-	-	-	-
C6 Env.	114 x 162mm	M	-	-	-	-	-
C5 Env.	162 x 229mm	M	-	-	-	-	-
DL Env.	110 x 220mm	M	-	-	-	-	-

**Remarks:**

A	Supported: the sensor detects the paper size.
M	Supported: the user specifies the paper size.
S	Supported: depends on a technician adjustment
-	Not supported

**Paper Exit****2000/3000 Sheet Booklet Finisher (D637/D636)**

MF: Main Frame, Prf: Proof, Clr: Clear, Shf: Shift, Stp: Staple, SS: Saddle Stitch,  
 2P: 2 Holes Punch, N2P: North Europe 2 Holes, 3P: 3 Holes Punch,

## Punch 4 P: 4 Holes Punch, N4P: North Europe 4 Holes Punch

Paper	Size (W x L)	MF	2000/3000-sheet booklet finisher								
			Prf	Clr	Shf	Stp	SS	2P/ N2P	3P	4P	N4P
A3 W	12" x 18"	Y	Y	Y	Y	30	15	-	-	-	-
A3 SEF	297 x 420 mm	Y	Y	Y	Y	30	15	Y	Y	Y	Y
A4 SEF	210 x 297 mm	Y	Y	Y	Y	50	15	Y	-	-	Y
A4 LEF	297 x 210 mm	Y	Y	Y	Y	50	-	Y	Y	Y	Y
A5 SEF	148 x 210 mm	Y	Y	Y	Y	-	-	Y	-	-	Y
A5 LEF	210 x 148 mm	Y	Y	Y	Y	-	-	Y	-	-	Y
A6 SEF	105 x 148 mm	Y	Y	Y	-	-	-	-	-	-	-
B4 SEF	257 x 364 mm	Y	Y	Y	Y	30	15	Y	Y	Y*4	Y*4
B5 SEF	182 x 257 mm	Y	Y	Y	Y	50	15	Y	-	-	Y
B5 LEF	257 x 182 mm	Y	Y	Y	Y	50	Y	Y	Y	Y	Y
B6 SEF	128 x 182 mm	Y	Y	Y	-	-	-	-	-	-	-
Ledger	11" x 17"	Y	Y	Y	Y	30	15	Y	Y	Y	Y
Letter SEF	8.5" x 11"	Y	Y	Y	Y	50	15	Y	-	-	Y
Letter LEF	11" x 8.5"	Y	Y	Y	Y	50	-	Y	Y	Y	Y
Legal SEF	8.5" x 14"	Y	Y	Y	Y	30	15	Y	-	-	Y

Paper	Size (W x L)	MF	2000/3000-sheet booklet finisher								
			Prf	Clr	Shf	Stp	SS	2P/ N2P	3P	4P	N4P
Government Legal SEF	8.25" x 14"	Y	Y	Y	Y	30	-	Y	-	-	Y
Half Letter SEF	5.5" x 8.5"	Y	Y	Y	Y	-	-	Y	-	-	Y
Executive SEF	7.25" x 10.5"	Y	Y	Y	Y	50	-	Y	-	-	Y
Executive LEF	10.5" x 7.25"	Y	Y	Y	Y	50	-	Y	Y	Y	Y
F SEF	8" x 13"	Y	Y	Y	Y	30	-	Y	-	-	Y
Foolscap SEF	8.5" x 13"	Y	Y	Y	Y	30	-	Y	-	-	Y
Folio SEF	8.25" x 13"	Y	Y	Y	Y	30	-	Y	-	-	Y
	11" x 15"	Y	Y	Y	Y	30	-	Y	Y	Y	Y
	10" x 14"	Y	Y	Y	Y	30	-	Y	Y	-	Y
	8" x 10"	Y	Y	Y	Y	50	-	Y	-	-	Y
8K	267 x 390 mm	Y	Y	Y	Y	30	-	Y	Y	Y	Y
16K SEF	195 x 267 mm	Y	Y	Y	Y	50	-	Y	-	-	Y
16K LEF	267 x 195 mm	Y	Y	Y	Y	50	-	Y	Y	Y	Y
Custom		Y	Y	Y	-	-	-	Y*3	Y*3	Y*3	Y*3
Com10 Env.	4.125" x 9.5"	Y	Y*1	Y* 2	-	-	-	-	-	-	-
Monarch Env.	3.875" x 7.5"	Y	-	Y	-	-	-	-	-	-	-

Paper	Size (W x L)	MF	2000/3000-sheet booklet finisher								
			Prf	Clr	Shf	Stp	SS	2P/ N2P	3P	4P	N4P
C6 Env.	114 x 162 mm	Y	-	Y	-	-	-	-	-	-	-
C5 Env.	162 x 229 mm	Y	-	Y	-	-	-	-	-	-	-
DL Env.	110 x 220 mm	Y	-	Y	-	-	-	-	-	-	-

**Remarks:**

Y	Supported
15	Output up to 15 sheets
30	Output up to 30 sheets
50	Output up to 50 sheets
-	Not supported

\* 1: Minimum 100 mm or more, Maximum 600 mm or less

\* 2: Minimum 100 mm or more, Maximum 600 mm or less

- Longer paper (feed length) than DLT (432 mm) is not guaranteed in this mode.

\* 3: Minimum 100 mm for 2P, 230 mm for 3P, 255 mm for 4P, 125 mm for N4P

\* 4: Corner stapling is not available in this mode.

**1000-Sheet Finisher (D588)**

MF: Main Frame, Prf: Proof, Clr: Clear, Shf: Shift, Stp: Staple

Paper	Size (W x L)	MF	1000-sheet finisher				1 Bin
			Prf	Clr	Shf	Stp	
A3 W	12" x 18"	Y	Y	Y	Y	30	-
A3 SEF	297 x 420 mm	Y	Y	Y	Y	30	Y
A4 SEF	210 x 297 mm	Y	Y	Y	Y	50	Y



Paper	Size (W x L)	MF	1000-sheet finisher				1 Bin
			Prf	Clr	Shf	Stp	
A4 LEF	297 x 210 mm	Y	Y	Y	Y	50	Y
A5 SEF	148 x 210 mm	Y	Y	Y	Y	-	Y
A5 LEF	210 x 148 mm	Y	Y	Y	Y	-	Y
A6 SEF	105 x 148 mm	Y	Y	-	-	-	-
B4 SEF	257 x 364 mm	Y	Y	Y	Y	30	Y
B5 SEF	182 x 257 mm	Y	Y	Y	Y	50	Y
B5 LEF	257 x 182 mm	Y	Y	Y	Y	50	Y
B6 SEF	128 x 182 mm	Y	Y	-	-	-	N
Ledger	11" x 17"	Y	Y	Y	Y	30	Y
Letter SEF	8.5" x 11"	Y	Y	Y	Y	50	Y
Letter LEF	11" x 8.5"	Y	Y	Y	Y	50	Y
Legal SEF	8.5" x 14"	Y	Y	Y	Y	30	Y
Government Legal SEF	8.25" x 14"	Y	Y	Y	Y	30	Y
Half Letter SEF	5.5" x 8.5"	Y	Y	Y	Y	-	Y
Executive SEF	7.25" x 10.5"	Y	Y	Y	Y	50	Y
Executive LEF	10.5" x 7.25"	Y	Y	Y	Y	50	Y
F SEF	8" x 13"	Y	Y	Y	Y	30	Y
Foolscap SEF	8.5" x 13"	Y	Y	Y	Y	30	Y
Folio SEF	8.25" x 13"	Y	Y	Y	Y	30	Y
	11" x 15"	Y	Y	Y	Y	30	Y
	10" x 14"	Y	Y	Y	Y	30	Y
	8" x 10"	Y	Y	Y	Y	30	Y
8K	267 x 390 mm	Y	Y	Y	Y	30	Y

Paper	Size (W x L)	MF	1000-sheet finisher				1 Bin
			Prf	Clr	Shf	Stp	
16K SEF	195 x 267 mm	Y	Y	Y	Y	50	Y
16K LEF	267 x 195 mm	Y	Y	Y	Y	50	Y
Custom		Y	Y	-	-	-	-
Com10 Env.	4.125" x 9.5"	Y	-	-	-	-	-
Monarch Env.	3.875" x 7.5"	Y	-	-	-	-	-
C6 Env.	114 x 162 mm	Y	-	-	-	-	-
C5 Env.	162 x 229 mm	Y	-	-	-	-	-
DL Env.	110 x 220 mm	Y	-	-	-	-	-

**Remarks:**

Y	Supported
30	Output up to 30 sheets
50	Output up to 50 sheets
-	Not supported

**Platen/ARDF Original Size Detection**

Size (width x length) [mm]	Platen	ARDF	Platen	ARDF
	Inches	Inches	Metric	Metric
A3 (297 x 420) SEF	-	Y	Y*3	Y
B4 (257 x 364) SEF	-	-	Y*3	Y
A4 (210 x 297) SEF	Y*1	Y	Y*3	Y
A4 (297 x 210) LEF	Y*3	Y	Y*3	Y
B5 (182 x 257) SEF	-	-	Y*3	Y
B5 (257 x 182) LEF	-	-	Y*3	Y

A5 (148 x 210) SEF	-	-	_*1	Y
A5 (210 x 148) LEF	-	-	_*1	Y
B6 (128 x 182) SEF	-	-	-	Y
B6 (182 x 128) LEF	-	-	-	Y
11" x 17" (DLT)	Y	Y*2	-	Y*2
11" x 15"	-	y*2	-	-
10" x 14"	-	Y	-	-
8.5" x 14" (LG)	Y	Y*2	-	-
8.5" x 13" (F4)	-	y*2	Y*4	Y*4
8.25" x 13"	-	-	Y*4	Y*4
8" x 13"(F)	-	-	Y*4	Y*4
8.5" x 11" (LT)	Y*3	Y*2	Y*3	Y*2
11" x 8.5" (LT)	Y*3	Y*2	Y*3	Y*2
8" x 10"	-	y*2	-	-
5.5" x 8.5" (HLT)	_*1	Y	-	-
8.5" x 5.5" (HLT)	_*1	Y	-	-
8K (267 x 390)	-	-	Y*3	y*2
16K L (195 x 267)	-	-	Y*3	y*2
16K S (267 x 195)	-	-	Y*3	y*2
7.25" x 10.5" (Executive)	-	Y	-	-
10.5" x 7.25" (Executive)	-	y*2	-	-

\*1: Use SP4-303 to detect original sizes as A5 lengthwise/HLT when the message "Can-t detect original size" shows.

\*2: The machine can detect the paper size depending on the setting of SP6-016-1. In default setting, "Y" is detected. "y" can be detected if you change setting of SP6-016-1.

\*3: The machine can detect the paper size depending on the setting of SP4-305-1.

\*4: The machine can detect the paper size depending on the setting of SP5-126-1.

# Software Accessories

The printer drivers and utility software are provided as following two CD-ROMs

1: Printer Drivers and Utilities CD-ROM

2: Scanner/PostScript® Drivers and Utilities CD-ROM.

An auto-run installer lets you to select the components you want to install.

## Printer Drivers

Printer Language	Windows 2000, XP, Server 2003, Vista, Server 2008, 7	MacOS8.6 to 9.x, MacOSX10.1 or later
PCL5c / PCL6	Yes	No
PS3	Yes	Yes
RPCS	No	No

### Note

- The PCL5c/6 and PS3 drivers are provided on the printer drivers CD-ROM
- The PS3 drivers are all genuine Adobe PS drivers, except for Windows 2000/XP/2003/Vista/7. Windows 2000 uses Microsoft PS. A PPD file for each operating system is provided with the driver.
- The PPD installer for Macintosh supports Mac OS X 10.1 or later versions.
- The LAN Fax driver lets you fax documents directly form your PC. Address Book Editor and Cover Sheet Editor are to be installed as well. (These require the optional fax unit.)

## Scanner and LAN Fax drivers

Printer Language	Windows 2000, XP, Server 2003, Vista, 7	MacOS8.6 to 9.x, MacOSX10.1 or later
Network TWAIN	Yes	No
LAN-FAX	Yes	No

 **Note**

- The Network TWAIN and LAN Fax drivers are provided on the scanner drivers CD-ROM.
- This software lets you fax documents directly from your PC. Address Book Editor and Cover Sheet Editor are to be installed as well. (These require the optional fax unit.)

## Utility Software

Software	Description
Font Manager (2000/XP/Server 2003/7)	A font management utility with screen fonts for the printer This is provided on the printer drivers CD-ROM
Smart Device Monitor for Admin (2000/XP/Server 2003/Vista/7)	A printer management utility for network administrators. NIB setup utilities are also available. This is provided on the printer drivers CD-ROM
DeskTopBinder – SmartDeviceMonitor for Client (2000/XP/Server 2003/Vista/7)	A printer management utility for client users. A utility for peer-to-peer printing over a NetBEUI or TCP/IP network. A peer-to-peer print utility over a TCP/IP network. This provides the parallel printing and recovery printing features. This is provided on the printer drivers CD-ROM
Printer Utility for Mac (Mac)	A utility for peer-to-peer printing over a NetBEUI or TCP This software provides several convenient functions for printing from Macintosh clients. This is provided on the scanner drivers CD-ROM
DeskTopBinder Lite (2000/XP/Server 2003/7)	DeskTopBinder Lite itself can be used as personal document management software and can manage both image data converted from paper documents and application files saved in each client's PC. This is provided on the scanner drivers CD-ROM

# Optional Equipment

1

## ARDF (D630)

Paper Size/Weight:	Simplex	Size	A3 to A5, DLT to HLT
		Weight	40 to 128 g/m <sup>2</sup> (11 to 34 lb.)
	Duplex	Size	A3 to A5, DLT to HLT
		Weight	52 to 128 g/m <sup>2</sup> (14 to 34 lb.)
Table Capacity:	100 sheets (81.4 g/m <sup>2</sup> , 22 lb)		
Original Standard Position:	Rear left corner		
Separation:	Feed belt and separation roller		
Original Transport:	Roller transport		
Original Feed Order:	From the top original		
Supported Magnification Ratios:	Copy	-	32 to 200 %
	Fax	Color	32.6 to 200 %
		Black & white	48.9 to 200 %
Power Source:	DC 24V, 5V from the scanner unit		
Power Consumption:	Less than 60W		
Dimensions (W x D x H):	570 mm x 520 mm x 135 mm (22.4"x20.5"x5.3")		
Weight:	Less than 12kg (26.5 lb.)		



## Paper Feed Unit (D580)

Paper Feed System:	FRR
Paper Height Detection:	5 steps (100%, 70%, 30%, 10% (Near end), and Empty)
Capacity:	500 sheets x 2 trays
Paper Weight:	60 to 256 g/m <sup>2</sup> (16 to 68 lb.)

Paper Size:	A3 SEF to A5, DLT SEF to HLT
Power Source:	DC 24V, 5V (from the main frame)
Power Consumption:	Less than 60 W (Max.)/ Less than 35 W (Ave.)
Dimensions (W x D x H):	580 mm x 620 mm x 260 mm (22.8" x 24.4" x 10.2")
Weight:	26 kg (57.3 lb.)

### LCT 2000-sheet (D581)

Paper Size:	A4 LEF/LT LEF
Paper Weight:	60 g/m <sup>2</sup> to 256 g/m <sup>2</sup> (16 lb. to 68 lb.)
Tray Capacity:	2,000 sheets (80 g/m <sup>2</sup> , 20lb.)
Remaining Paper Detection:	5 steps (100%, 70%, 30%, 10%, Empty): Right Tray 4 steps (100%, 70%, 30%, Empty): Left Tray
Power Source:	DC 24 V, 5 V (from copier/printer)
Power Consumption:	55 W (Max.)/30 W (Ave.)
Weight:	26 kg (57.3 lb.)
Size (W x D x H):	580 mm x 620 mm x 260 mm (22.8" x 24.4" x 10.2")

### LCT 1200-sheet (D631)

Paper Size:	A4 LEF/ LT LEF/ B5 LEF
Paper Weight:	60 g/m <sup>2</sup> to 216 g/m <sup>2</sup> (16 lb to 57 lb.)
Tray Capacity:	1,200 sheets (80 g/m <sup>2</sup> , 20lb)
Remaining Paper Detection:	5 steps (100%, 75%, 30%, 10%, End)
Power Source:	24 Vdc, 5 Vdc (from copier/printer)
Power Consumption:	55 W (Max)/ 25 W (Ave.)
Weight:	14 kg (30.8 lb.)

Size (W x D x H):	348 mm x 540 mm x 290 mm (13.7" x 21.3" x 11.4")
-------------------	---

### 3000-Sheet Finisher (D636)

Finisher			
Dimension (w x d x h)		657 mm x 613 mm x 960 mm (25.9" x 24.1" x 37.8")	
Weight		Less than 54 kg (119 lb.) (no punch unit) Less than 56 kg (123.5 lb.) (with punch unit)	
Power Consumption		Less than 96 W	
Noise		Less than 75 db	
Configuration		Console type attached base-unit	
Power Source		From base-unit	
Proof Tray	Stack Capacity	250 sheets: A4, 8.5" x 11" or smaller 50 sheets: B4, 8.5" x 14 or larger	
	Paper Size	A5-A3 SEF, A6 SEF, A6 SEF 5.5" x 8.5"-11" x 17" SEF, 12" x 18" SEF	
	Paper Weight	52 g/m <sup>2</sup> - 163 g/m <sup>2</sup> (14 lb. - 43 lb.)	
Shift Tray	Stack Capacity	3,000 sheets	A4 LEF, 8.5" x 11" LEF
		1,500 sheets	A3 SEF, A4 SEF, B4 SEF, B5, 11" x 17" SEF, 8.5" x 14" SEF, 8.5" x 11" SEF, 12" x 18" SEF
		500 sheets	A5 LEF
		100 sheets	A5 SEF, B6 SEF, A6 SEF, 5.5" x 8.5" SEF
	Paper Size	A5 - A3 SEF, A6 SEF, B6 SEF, 5.5" x 8.5"- 11" x 17" SEF, 12" x 18" SEF	
	Paper Weight	52 g/m <sup>2</sup> - 256 g/m <sup>2</sup> (14 lb. - 68 lb.)	



Staples			
Paper Size		B5 - A3 8.5" x 11" - 11" x 17", 12" x 18"	
Paper Weight		64 g/m <sup>2</sup> - 90 g/m <sup>2</sup> (14 lb. - 24 lb.)	
Staple Position		Top, Bottom, 2 Staple, Top-slant	
Stapling Capacity	Same Paper Size	50 sheets	A4, 8.5" x 11" or smaller
		30 sheets	B4, 8.5" x 14" or larger
	Mixed Paper Size	30 sheets	A4 LEF + A3 SEF, B5 LEF + B4 SEF, 8.5" x 11" LEF + 11" x 17" SEF

Staple Replenishment	Cartridge exchange / 5000 pins per cartridge		
Stapled Stack Capacity (same size)	Paper Size	Pages/Set	Sets
	A4 LEF, 8.5" x 11" LEF	20 - 50 pages	150 - 60 sets
		2 - 19 pages	150 sets
	A4 SEF, B5, 8.5" x 11" SEF	15 - 50 pages	100 - 30 sets
		2 - 14 pages	100 sets
	Others	15 - 30 pages	100 - 33 sets
2 - 14 pages		100 sets	
Stapled Stack Capacity (mixed sizes)	A4 LEF & A3 SEF, B5 LEF & B4 SEF, 8.5" x 11" LEF & 11" x 17" SEF	2 - 30 pages	50 set

## 2000-Sheet Booklet Finisher (D637)

Finisher	
Dimension W x D x H	657 mm x 613 mm x 960 mm (25.9 x 24.1 x 37.8")

Weight		Less than 63 kg (138.6 lb.) (no punch unit) Less than 65 kg (143 lb.) (with punch unit)	
Power Consumption		Less than 96 W	
Noise		Less than 75 db	
Configuration		Console type attached base-unit	
Power Source		From base-unit	
Proof Tray	Stack Capacity	250 sheets: A4, 8.5" x 11" or smaller 50 sheets: B4, 8.5" x 14" or larger	
	Paper Size	A5 - A3 SEF, B6 SEF, A6 LEF 5.5" x 8.5" to 11" x 17" SEF, 12"x18" SEF	
	Paper Weight	52 g/m <sup>2</sup> - 163 g/m <sup>2</sup> (14 lb. - 43 lb.)	
Shift Tray	Stack Capacity	2,000 sheets	A4 LEF, 8.5" x 11" LEF
		1,000 sheets	A3 SEF, A4 SEF, B4 SEF, B5 11" x 17" SEF, 8.5" x 14" SEF, 8.5" x 11" SEF, 12"x18" SEF
		500 sheets	A5 LEF
		100 sheets	A5 SEF, B6 SEF, A6 SEF, 5.5" x 8.5" SEF
	Paper Size	A5 - A3 SEF, A6 SEF, B6 SEF 5.5" x 8.5" to 11" x 17" SEF, 12" x 18" SEF	
	Paper Weight	52 g/m <sup>2</sup> - 256 g/m <sup>2</sup> (14 lb. - 68 lb.)	
<b>Staple</b>			
Paper Size		B5-A3, 8.5" x 11" - 11" x 17", 12" x 18"	
Paper Weight		64 g/m <sup>2</sup> - 90 g/m <sup>2</sup> , 17 lb. Bond - 28 lb. Bond	
Staple Position		Top, Bottom, 2 Staple, Top-slant	

Staples Capacity	Same Paper Size	50 sheets	A4, 8.5" x 11" or smaller
		30 sheets	B4, 8.5" x 14" or larger
	Mixed Paper Size	30 sheets	A4 LEF & A3 SEF, B5 LEF & B4 SEF, 8.5" x 11" LEF & 11" x 17" SEF
	Booklet Stapling	15 sheets	A4 SEF, A3 SEF, B5 SEF, B4 SEF, 8.5" x 11" SEF, 8.5" x 14" SEF, 11" x 17" SEF, 12" x 18" SEF

Staple Replenishment		Corner staple	5,000 staples per cartridge
		Booklet staple	2,000 staples per cartridge
Corner Staple Capacity	Same Size	A4 LEF, 8.5" x 11" LEF	13 - 50 pages
			2 - 12 pages
		A4 SEF, B5, 8.5" x 11" SEF	10 - 50 pages
			2 - 9 pages
	Others	10 - 30 pages	
		2 - 9 pages	
Mixed Size	A4 LEF + A3 SEF B5 LEF + B4 SEF 8.5" x 11" LEF + 11" x 17" SEF	2 - 30 pages	
Booklet Staple Capacity	A4 SEF, A3 SEF, B5 SEF, B4 SEF		2 - 5 pages
	8.5" x 11" SEF, 8.5" x 14" SEF, 11" x 17" SEF		6 - 10 pages
	12" x 18" SEF		11 - 15 pages

## Punch Unit (D570) for 2000/3000-Sheet (Booklet) Finisher

1

Available Punch Units		NA	2/3 holes switchable
		EU	2/4 holes switchable
		Scandinavia	4 holes
Punch Waste Replenishment		NA 2-holes	Up to 5,000 sheets
		NA 3-holes	Up to 5,000 sheets
		EU 2-holes	Up to 14,000 sheets
		EU 4-holes	Up to 7,000 sheets
		Scandinavia 4-holes	Up to 7,000 sheets
Paper Weight		52 g/m <sup>2</sup> - 163 g/m <sup>2</sup> , 14 lb Bond - 43 lb Bond	
Paper Sizes	NA 2-holes	SEF	A5 to A3, 5.5" x 8.5" to 11" x 17"
		LEF	A5 to A4, 5.5" x 8.5" , 8.5" x 11"
	NA 3-holes	SEF	A3, B4, 11" x 17"
		LEF	A4, B5, 8.5" x 11"
	EU 2-holes	SEF	A5 to A3, 5.5" x 8.5" to 11" x 17"
		LEF	A5 to A4, 5.5" x 8.5", 8.5" x 11"
	EU 4-holes	SEF	A3, B4, 11"x17"
		LEF	A4, B5, 8.5" x 11"
	Scandinavia 4-holes	SEF	A5 to A3, 5.5" x 8.5" to 11" x 17"
		LEF	A5 to A4, 5.5" x 8.5", 8.5" x 11"

## 1000-Sheet Finisher (D588)

### Upper Tray

Paper Size:	A3 to A6 11" x 17" to 5.5" x 8.5"
Paper Weight:	60 to 157 g/m <sup>2</sup> (16 to 42 lb.)
Paper Capacity:	250 sheets (A4 LEF/8.5" x 11" SEF or smaller) 50 sheets (A4, 8.5" x 11" or smaller) 30 sheets (B4, 8.5" x 14" or larger)

### Lower Tray

Paper Size:	No staple mode: A3 to B5, DLT to HLT Staple mode: A3, B4, A4, B5, DLT to LT
Paper Weight:	No staple mode: 60 to 157 g/m <sup>2</sup> (16 to 42 lb) Staple mode: 64 to 90 g/m <sup>2</sup> (17 to 24 lb)
Stapler Capacity:	30 sheets (A3, B4, DLT, LG) 50 sheets (A4, B5 LEF, LT)

Paper Capacity:	No staple mode: 1,000 sheets (A4/LT or smaller: 80 g/m <sup>2</sup> , 20 lb.) 500 sheets (A3, B4, DLT, LG: 80 g/m <sup>2</sup> , 20 lb.) Staple mode: (80 g/m <sup>2</sup> , 20 lb., number of sets)			
	Set Size	2 to 9	10 to 50	
	Size		10 to 30	31 to 50
	A4/LT LEF B5 LEF	100	100 to 20	100 to 20
	A4/LT SEF	100	50 to 10	50 to 10
	A3, B4, DLT, LG	50	50 to 10	-
Staple positions:	1 Staple: 2 positions (Front, Rear) 2 Staples: 2 positions (Upper, Left)			
Staple Replenishment:	Cartridge (5,000 staples/cartridge)			
Power Source:	DC 24 V, 5 V (from the copier/printer)			
Power Consumption:	50 W			
Weight:	25 kg (55.2 lbs)			
Dimensions (W x D x H):	527 x 520 x 790 mm (20.8" x 20.5" x 31.1")			

## Bridge Unit (D634)

Paper Size:	Standard sizes A6 SEF to A3, HLT to DLT Non-standard sizes Width: 90 to 305 mm Length: 148 to 600 mm
Paper Weight:	52 g/m <sup>2</sup> to 256 g/m <sup>2</sup> , 16 lb. to 68 lb.
Paper Capacity:	250 sheet (A4/ 8 1/2" x 11 1/2" or smaller: 80g/m <sup>2</sup> / 20 lbs) 125 sheet (B4 8 1/2" x 11 1/2" or larger: 80g/m <sup>2</sup> / 20 lbs)
Power Source:	DC 24 V, 5 V (from the copier/printer)

Dimensions (W x D x H):	415 mm x 412 mm x 111 mm (16.3" x 16.2" x 4.4")
Weight	5 kg (11 lb.)

## Shift Tray (D633)

Paper Capacity:	250 sheet (A4/ 8 1/2" x 11 1/2" or smaller: 80g/m <sup>2</sup> / 20 lbs) 125 sheet (B4 8 1/2" x 11 1/2" or larger: 80g/m <sup>2</sup> / 20 lbs)
Paper Size:	Standard sizes A6 SEF to A3, HLT to DLT Non-standard sizes Width: 90 to 305 mm Length: 148 to 600 mm
Paper Weight:	52-256 g/m <sup>2</sup> / 14 - 68 lbs
Power Consumption:	Max 10W (Power is supplied from the mainframe.)
Dimension (W x D x H):	423 mm x 468 mm x 114 mm (16.7" x 18.4" x 4.5")
Weight:	Approx. 2kg (4.4lbs)

## 1-bin Tray Unit (D632)

Paper Size:	Standard Size: A3 /DLT to A5/ HLT SEF
Paper Weight:	60 to 169 g/m <sup>2</sup> , 16 to 45 lb.
Tray Capacity:	125 sheets (80 g/m <sup>2</sup> , 20 lb., A4)
Power Source:	DC 24 V, 5 V (from the copier)
Power Consumption:	Less than 1 W
Weight:	1.7 kg
Size (W x D x H):	565 mm x 410 mm x 115 mm (22.2" x 16.1" x 4.5")





# 2. Preventive Maintenance Tables

## Maintenance Tables

### Preventive Maintenance Items

Chart: A4 (LT)/5%

Mode: 4 copies / original (prints/job)

Ratio 30%

Environment: Normal temperature and humidity

Yield may change depending on circumstances and print conditions.

Symbol keys: C: Clean, R: Replace, L: Lubricant, I: Inspect

### Mainframe



Item	150K	200K	300K	600K	EM	Remarks
<b>Scanner</b>						
Reflector		C				Optics cloth
1st/2nd/3rd mirrors		C				Optics cloth
Exposure Glass		C			C	Ricoh exposure glass cleaner
ADF Exposure Glass		C			C	Ricoh exposure glass cleaner
<b>PCDU</b>						
PCDU - K			R			
PCDU - Y, M, C	R					
Toner Collection Bottle	R					Replace when the waste toner bottle full message appears.
Dev. Unit - K				R		

Item	150K	200K	300K	600K	EM	Remarks
Dev. Unit - Y, M, C					R: 480K	
Developer - K			R			
Developer - Y, M, C					R: 240K	
<b>Transfer</b>						
Image Transfer Belt-cleaning Unit			R			
Image Transfer Belt				R		
Paper Transfer Roller Unit			R			
<b>Fusing</b>						
Heating Sleeve Belt Unit			R			
Pressure Roller			R			
Pressure Roller Bearing			R, C			S552R
Entrance guide plate			C		C	
Exit guide plate			C		C	
Exit Separation plate			C		C	
Thermopile			C		C	Cotton swab with alcohol
Fusing Drive Gear					C	Replace if worn.
Pressure Roller Gear					C	Replace if worn.
Idler Gear					C	Replace if worn.
<b>Paper Path</b>						
Registration Roller					C	Damp cloth
Registration Sensor					C	Dry cloth
Paper Dust Container					C	
Vertical Transport Roller					C	Damp cloth

Item	150K	200K	300K	600K	EM	Remarks
Vertical Transport Sensor					C	Dry cloth
Paper Feed Sensor					C	Dry cloth
Feed Roller					C	Dry cloth
Separation Roller					C	Dry cloth
Pick-up Belt					C	Damp cloth
Inverter Roller					C	Damp cloth
Fusing Exit Sensor					C	Dry cloth
Junction Paper Jam Roller					C	Dry cloth
Junction Paper Jam Sensor					C	Dry cloth
<b>Duplex Unit</b>						
Transport Roller					C	Damp cloth
Duplex Entrance Sensor					C	Dry cloth
Duplex Exit Sensor					C	Dry cloth
Duplex Exit Roller					C	Damp cloth
<b>Miscellaneous</b>						
Ozone Filter			R			
Exhaust Filter			R			
Toner Scatterproof Filter			R			See the last of this section for the toner scatterproof filter removal procedure.
Dust Glass					C	
ID Sensor					C	

**ARDF (D630)**

Item	EM	Remarks
Sensors	C	Blower brush
Platen Sheet Cover	C	Damp cloth; alcohol (Replace if required.)
White Plate	C	Dry or damp cloth
Drive Gear	L	Grease G501
Transport Roller	C	Damp cloth; alcohol
Exit Roller	C	Damp cloth; alcohol
Inverter Roller	C	Damp cloth; alcohol
Idle Rollers	C	Damp cloth; alcohol

**Two-tray Paper Feed Unit (D580)**

Item	EM	Remarks
Feed Roller	C	Dry cloth
Separation Roller	C	Dry cloth
Pick-up Roller	C	Dry cloth
Paper Feed Sensor	C	Dry cloth
Relay Sensor	C	Dry cloth
Relay Roller	C	Damp cloth
Bottom Plate Pad	C	Damp cloth

**1200-sheet LCT (D631)**

Item	EM	Remarks
Feed Roller	C	Dry cloth
Separation Roller	C	Dry cloth

Item	EM	Remarks
Pick-up Roller	C	Dry cloth
Paper Feed Sensor	C	Dry cloth
Relay Sensor	C	Dry cloth
Relay Roller	C	Damp cloth
Bottom Plate Pad	C	Damp cloth

### 2000-sheet LCT (D581)

Item	EM	Remarks
Feed Roller	C	Dry cloth
Separation Roller	C	Dry cloth
Pick-up Roller	C	Dry cloth
Paper Feed Sensor	C	Dry cloth
Relay Sensor	C	Dry cloth
Relay Roller	C	Damp cloth
Bottom Plate Pad	C	Damp cloth

### 2000/3000-Sheet (Booklet) Finisher (D637/D636)

Items	EM	Remarks
Rollers	C	Damp cloth
Discharge Brush	C	Dry cloth
Sensors	C	Blower brush

**2000/3000-Sheet (Booklet) Finisher Punch Kit (D570)**

Items	EM	Remarks
Punch Chads	C	Discard chads.

2

**1000-Sheet Finisher (D588)**

Items	EM	Remarks
Rollers	C	Damp cloth
Discharge Brush	C	Dry cloth
Sensors	C	Blower brush

**1 Bin Tray (D632)**

Items	EM	Remarks
Rollers	C	Damp cloth
Tray	C	Damp cloth
Sensor	C	Blower brush
Bearing	C	S552R

**Bridge Unit (D634)**

Items	EM	Remarks
Rollers	C	Damp cloth

**Shift Tray (D633)**

Items	EM	Remarks
Tray	C	Damp cloth


## Side tray (D635)

Items	EM	Remarks
Rollers	C	Damp cloth
Sensors	C	Blower brush

2

## Toner Scatterproof Filter Removal Procedure

1. QSU fan (See "QSU Fan" in the "Main Chapters: 4. Replacement and Adjustment: Fusing".)

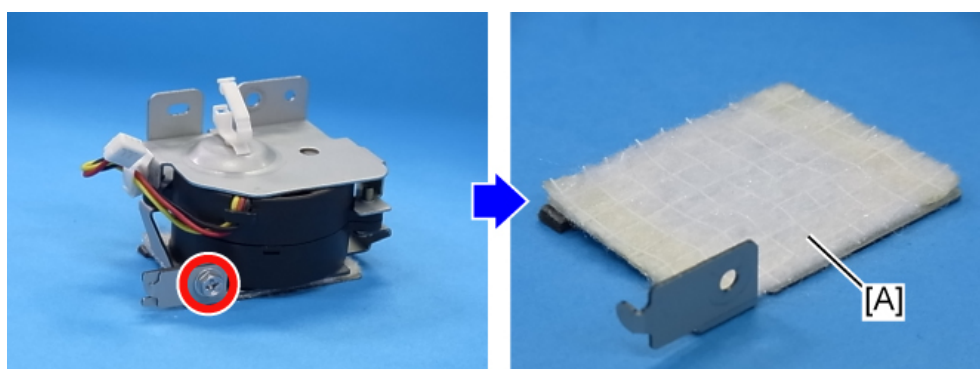

d1440273

2. Toner scatterproof filter [A] (  x 1)

## Other Yield Parts

The parts mentioned in these tables have a target yield. However, the total copy/print volume made by the machine will not reach the target yield within the machine's targeted lifetime if the machine is used under the target usage conditions (ACV, color ratio, P/J, and C/O). So, these parts are categorized not as PM parts but as yield parts (EM parts).

## Mainframe

Item	240K	480K	600K	1500K	2000K	Remarks
Dev. Unit - K			R			
Dev. Unit - Y, M, C		R				
Developer - Y, M, C	R					

Item	240K	480K	600K	1500K	2000K	Remarks
ITB Unit			R			
Toner Supply Unit - K					R	
Toner Supply Unit - Y, M, C				R		

**ARDF (D630)**

Item	80K	120K	240K	Remarks
Pick-up Roller		R		Number of originals
Feed Belt		R		Number of originals
Reverse Roller		R		Number of originals

**Single Pass DF**

Item	80K	120K	240K	Remarks
Pick-up Roller		R		Number of originals
Feed Belt		R		Number of originals
Separation Roller		R		Number of originals



# 3. SP Mode Tables

## Main SP Tables-1

### SP1-XXX (Feed)

1001	[Leading Edge Registration] Leading Edge Registration Adjustment (Tray Location, Paper Type, Color Mode), Paper Type → Thin, Plain, Thick 1, Thick 2 or Thick 3		
	Adjusts the leading edge registration by changing the registration motor operation timing for each mode.		
002	Tray: Plain	*ENG	[-9 to 9 / 0.0 / 0.1 mm/step]
003	Tray: Middle Thick	*ENG	
004	Tray: Thick 1	*ENG	
005	Tray: Thick 2	*ENG	
007	By-pass: Plain	*ENG	
008	By-pass: Middle Thick	*ENG	
009	By-pass: Thick 1	*ENG	
010	By-pass: Thick 2	*ENG	
011	By-pass: Thick 3	*ENG	
013	Duplex: Plain	*ENG	
014	Duplex: Middle Thick	*ENG	
015	Duplex: Thick 1	*ENG	

016	Tray: Thick 3	*ENG	[-9 to 9 / <b>0.0</b> / 0.1 mm/step]
017	Tray: Plain:1200	*ENG	
018	Tray: Middle Thick:1200	*ENG	
019	Tray: Thick 1:1200	*ENG	
020	By-pass: Plain:1200	*ENG	
021	By-pass: Middle Thick:1200	*ENG	
022	By-pass: Thick 1:1200	*ENG	
023	Duplex: Plain:1200	*ENG	
024	Duplex: Middle Thick:1200	*ENG	
025	Duplex: Thick 1:1200	*ENG	
026	Tray: Thin	*ENG	
027	By-pass: Thin	*ENG	
028	Duplex: Thin	*ENG	
029	Tray: Thin: 1200	*ENG	
030	By-pass: Thin: 1200	*ENG	
031	Duplex: Thin: 1200	*ENG	

1002	[Side to Side Registration] Side-to-Side Registration Adjustment
	Adjusts the side-to-side registration by changing the laser main scan start position for each mode.

001	By-pass Table	*ENG	[-4 to 4 / 0.0 / 0.1 mm/step]
002	Paper Tray 1	*ENG	
003	Paper Tray 2	*ENG	
004	Paper Tray 3	*ENG	
005	Paper Tray 4	*ENG	
006	Duplex	*ENG	
007	Paper Tray 5	*ENG	
008	Large Capacity Tray	*ENG	

1003	[Paper Buckle] Paper Buckle Adjustment (Tray Location, Paper Type, Color mode), Paper Type → Plain, Thick, Thick 1		
	Adjusts the amount of paper buckle at the registration roller by changing the paper feed timing.		
002	Paper Tray 1: Plain	*ENG	[-9 to 5 / -2 / 1 mm/step]
003	Tray 1: Middle Thick	*ENG	[-9 to 5 / -1 / 1 mm/step]
004	Paper Tray 1: Thick 1	*ENG	[-9 to 5 / -2 / 1 mm/step]
007	Paper Tray 2/3/4/5/LCT: Plain	*ENG	
008	Tray 2/3/4/5/LCT: Middle Thick	*ENG	[-9 to 5 / -1 / 1 mm/step]
009	Paper Tray 2/3/4/5/LCT: Thick 1	*ENG	[-9 to 5 / -2 / 1 mm/step]
012	By-pass: Plain	*ENG	[-9 to 5 / -1 / 1 mm/step]
013	By-pass: Middle Thick	*ENG	
014	By-pass: Thick 1	*ENG	[-9 to 5 / -2 / 1 mm/step]
018	Duplex: Plain	*ENG	[-9 to 5 / -1 / 1 mm/step]
019	Duplex: Middle Thick	*ENG	
020	Duplex: Thick 1	*ENG	[-9 to 5 / -2 / 1 mm/step]

021	Paper Tray 1: Plain:1200	*ENG	[-9 to 5 / <b>0</b> / 1 mm/step]
022	Tray 1: Middle Thick:1200	*ENG	
023	Tray 2/3/4/5LCT: Plain:1200	*ENG	
024	Tray 2/3/4/5LCT: Mid:1200	*ENG	
025	By-pass: Plain:1200	*ENG	
026	By-pass: Middle Thick:1200	*ENG	
027	Paper Tray 1: Thick 1:1200	*ENG	[-9 to 5 / <b>-2</b> / 1 mm/step]
028	Paper Tray2/3/4/5/LCT: Thick 1:1200	*ENG	
029	By-pass: Thick 1:1200	*ENG	
030	Duplex: Plain: 1200	*ENG	[-9 to 5 / <b>0</b> / 1 mm/step]
031	Duplex: Middle Thick: 1200	*ENG	
032	Duplex: Thick 1: 1200	*ENG	[-9 to 5 / <b>-2</b> / 1 mm/step]

1007	[By-Pass Size Detection] By-Pass Size Detection Display		
001	LG	*ENG	[0 or 1 / <b>0</b> / - ] 0: OFF, 1: ON
	Enables or disables the automatic paper size detection function of the by-pass tray. This SP determines what paper size the machine detects if the detected size is less than 8.5". 0: OFF (Letter/SEF), 1: ON (Legal/SEF)		

1101	[Reload Permit Setting]		
	Specifies the settings of the reload permit for cold temperature in color mode.		
001	Pre-rotation Start Temp.	*ENG	[-50 to 200 / <b>-50</b> / 1 deg/step]
002	Reload Target Temp.:Center	*ENG	[0 to 180 / <b>C3c:158, C3d:161</b> / 1 deg/step]
003	Reload Target Temp.:Press	*ENG	[0 to 200 / <b>C3c: 150, C3d: 148</b> / 1 deg/step]
004	Temp.:Delta:Cold:Center	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]

005	Temp.:Delta:Cold:End	*ENG	[0 to 200 / 5 / 1 deg/step]
006	Temp.:Delta:Cold:Press	*ENG	[0 to 200 / C3c: 40, C3d: 26 / 1 deg/step]
	[Forced Ready Set] Specifies the setting of the forced reload permit for cold temperature in color mode.		
007	Forced Reload Time :Cold	*ENG	[0 to 100 / C3c: 14, C3d: 20 / 1 sec/step]
	[Reload Permit Setting] Specifies the settings of the reload permit for warm temperature in color mode.		
008	Temp.:Delta:Warm:Center	*ENG	[0 to 200 / 5 / 1 deg/step]
009	Temp.:Delta:Warm:End	*ENG	[0 to 200 / 5 / 1 deg/step]
010	Temp.:Delta:Warm:Press	*ENG	[0 to 200 / C3c: 40, C3d: 26 / 1 deg/step]

1101	[Reload Permit Setting] Specifies the setting of the forced reload permit for warm temperature in color mode.		
011	Forced Reload Time:Warm	*ENG	[0 to 100 / C3c: 14, C3d: 20 / 1 sec/step]
	[Reload Permit Setting] Specifies the settings of the reload permit for hot temperature in color mode.		
012	Temp.:Delta:Hot:Center	*ENG	[0 to 200 / 5 / 1 deg/step]
013	Temp.:Delta:Hot:End	*ENG	[0 to 200 / 5 / 1 deg/step]
014	Temp.:Delta:Hot:Press	*ENG	[0 to 200 / C3c: 40, C3d: 26 / 1 deg/step]
	[Reload Permit Setting] Specifies the setting of the forced reload permit for hot temperature in color mode.		
015	Forced Reload Time:Hot	*ENG	[0 to 100 / C3c: 14, C3d: 20 / 1 sec/step]
	[Reload Permit Setting Temp.] Specifies the settings of the reload permit for cold temperature in BW mode.		

016	Temp.:Delta:Cold:BW:Center	*ENG	[0 to 200 / 5 / 1 deg/step]
017	Temp.:Delta:Cold:BW:End	*ENG	[0 to 200 / 5 / 1 deg/step]
018	Temp.Delta:Cold:BW:Press	*ENG	[0 to 200 / <b>C3c: 40, C3d: 26</b> / 1 deg/step]
[Reload Permit Setting] Specifies the setting of the forced reload permit for cold temperature in BW mode.			
019	Forced Reload Time:Cold:BW	*ENG	[0 to 100 / <b>C3c: 14, C3d: 20</b> / 1 sec/step]
[Reload Permit Setting] Specifies the settings of the reload permit for cold temperature in BW mode 2.			
020	Temp.:Delta:Cold:BW2:Center	*ENG	[0 to 200 / <b>C3c: 10, C3d: 5</b> / 1 deg/step]
021	Temp.:Delta:Cold:BW2:End	*ENG	[40 to 200 / <b>100</b> / 1 deg/step]
022	Temp.Delta:Cold:BW2:Press	*ENG	[0 to 200 / <b>C3c: 70, C3d: 50</b> / 1 deg/step]
[Forced Ready Set] Specifies the setting of the forced reload permit for cold temperature in BW mode 2.			
023	Time:Cold:BW2	*ENG	[0 to 100 / <b>C3c: 20, C3d: 34</b> / 1 sec/step]
[Reload Permit Setting] Enables or disables the Flicker Control.			
030	Flicker Control	*ENG	[0 to 1 / <b>0</b> / 1] <b>0: Disable</b> 1: Enable
[Reload Permit Setting] Specifies the settings of the reload permit for target temperature in BW mode 2.			
1101	Reload Target Temp.:Center:BW2	*ENG	[0 to 180 / <b>C3c: 135(NA), 130(Others), C3d: 140(NA), 135(Others)</b> / 1 deg/step]
102	Reload Target Temp.:Press:BW2	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]

	[Reload Permit Setting] Specifies the settings of the reload permit for cold temperature in BW mode 2.		
103	Temp.:Delta:Cold:BW2:Center	*ENG	[0 to 200 / 5 / 1 deg/step]
104	Temp.:Delta:Cold:BW2:End	*ENG	[0 to 200 / 5 / 1 deg/step]
105	Temp.:Delta:Cold:BW2:Press	*ENG	[0 to 200 / 100 / 1 deg/step]
	[Reload Permit Setting] Specifies the setting of the forced reload permit for cold temperature in BW mode 2.		
106	Forced Reload Time:Cold:BW2	*ENG	[0 to 100 / <b>C3c: 14, C3d: 20</b> / 1 sec/step]
	[Reload Permit Setting] Specifies the settings of the reload permit for low temperature.		
151	Temp.:Delta:Low Temp.:Center	*ENG	[0 to 200 / 5 / 1 deg/step]
152	Temp.:Delta:Low Temp.:End	*ENG	[0 to 200 / 5 / 1 deg/step]
153	Temp.:Delta:Low Temp.:Press	*ENG	[0 to 200 / <b>C3c: 40, C3d: 33</b> / 1 deg/step]
	[Reload Permit Setting] Specifies the setting of the forced reload permit for low temperature.		
154	Forced Reload Time:Low Temp.	*ENG	[0 to 100 / <b>60</b> / 1 sec/step]
1101	[Reload Permit Setting] Specifies the settings of the reload permit for cold temperature.		
201	Temp.:Delta:Cold:Center: FIN-less/ADF-less	*ENG	[0 to 200 / 5 / 1 deg/step]
202	Temp.:Delta:Cold:End: FIN-less/ADF-less	*ENG	[0 to 200 / 5 / 1 deg/step]
203	Temp.:Delta:Cold:Press: FIN-less/ADF-less	*ENG	[0 to 200 / <b>C3c: 67, C3d: 36</b> / 1 deg/step]
	[Reload Permit Setting] Specifies the setting of the forced reload permit for cold temperature.		

204	Forced Reload Time:Cold: FIN-less/ADF-less	*ENG	[0 to 100 / <b>C3c: 14, C3d: 20</b> / 1 sec/ step]
-----	---	------	---

1102	[Feed Permit Setting]		
	Specified the settings of the paper feeding timing.		
001	Temp.:Lower Delta:Center	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
002	Temp.:Lower Delta:End	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
003	Temp.:Upper Delta:Center	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
004	Temp.:Upper Delta:End	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
005	Temp.:Lower Delta:Press	*ENG	[0 to 200 / <b>100</b> / 1 deg/step]
006	Rotation Time	*ENG	[0 to 100 / <b>0</b> / 1 sec/step]
007	Temp.:Lower Delta:Center:Sp. 1	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
008	Temp.:Lower Delta:End:Sp.1	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
009	Temp.:Upper Delta:Center:Sp. 1	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
010	Temp.:Upper Delta:End:Sp.1	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
011	Temp.:Lower Delta:Press:Sp. 1	*ENG	[0 to 200 / <b>15</b> / 1 deg/step]
012	Rotation Time:Sp.1	*ENG	[0 to 200 / <b>0</b> / 1 sec/step]
013	Temp.:Lower Delta:Center:Sp.2	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
014	Temp.:Lower Delta:End:Sp.2	*ENG	[0 to 200 / <b>5</b> / 1 deg/step]
015	Temp.:Upper Delta:Center:Sp.2	*ENG	[0 to 200 / <b>15</b> / 1 deg/step]
016	Temp.:Upper Delta:End:Sp.2	*ENG	[0 to 200 / <b>15</b> / 1 deg/step]
017	Temp.:Lower Delta:Press:Sp. 2	*ENG	[0 to 200 / <b>100</b> / 1 deg/step]
018	Rotation Time:Sp2	*ENG	[0 to 100 / <b>0</b> / 1 sec/step]



019	Feed Permit Time	*ENG	[0 to 200 / 60 / 1 sec/step]
1105	[Print Target Temp]		
	(Printing Mode, Roller Type, [Color], Simplex/Duplex) Roller Type → Center and Ends: Heating roller, Pressure → Pressure roller Paper Type → Plain, Thin, Thick, OHP, Middle Thick, Special, Postcard		
001	Plain1:FC:Center	*ENG	[100 to 180 / <b>C3c: 153, C3d: 156</b> / 1 deg/step]
	Specifies the heating roller target temperature for the ready condition in full color printing.		
002	Plain1:FC:Press	*ENG	[0 to 200 / 120 / 1 deg/step]
	Specifies the pressure roller target temperature for the ready condition in full color printing..		
003	Plain1:BW:Center	*ENG	[100 to 180 / <b>C3c: 153, C3d: 156</b> / 1 deg/step]
	Specifies the heating roller target temperature for the ready condition in BW printing.		
004	Plain1:BW:Press	*ENG	[0 to 200 / 120 / 1 deg/step]
	Specifies the pressure roller target temperature for the ready condition in BW printing.		
005	Plain2:FC:Center	*ENG	[100 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]
	Specifies the heating roller target temperature for the ready condition in full color printing.		
006	Plain2:FC:Press	*ENG	[0 to 200 / <b>C3c:120, C3d:145</b> / 1 deg/step]
	Specifies the pressure roller target temperature for the ready condition in full coloe printing.		
007	Plain2:BW:Center	*ENG	[100 to 180 / <b>C3c: 152, C3d: 155</b> / 1 deg/step]
	Specifies the heating roller target temperature for the ready condition in BW printing.		
008	Plain2:BW:Press	*ENG	[0 to 200 / <b>C3c:120,C3d:139</b> / 1 deg/step]
	Specifies the pressure roller target temperature for the ready condition in BW printing.		

009	Thin:FC:Center	*ENG	[100 to 180 / <b>C3c: 148, C3d: 151</b> / 1 deg/step]
010	Thin:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
011	Thin:BW:Center	*ENG	[100 to 180 / <b>C3c: 148, C3d: 151</b> / 1 deg/step]
012	Thin:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
013	M-thick:FC:Center	*ENG	[100 to 180 / <b>C3c: 163, C3d: 166</b> / 1 deg/step]
014	M-thick:FC:Press	*ENG	[0 to 200 / <b>C3c: 120, C3d: 150</b> / 1 deg/step]
015	M-thick:BW:Center	*ENG	[100 to 180 / <b>C3c: 163, C3d: 166</b> / 1 deg/step]
016	M-thick:BW:Press	*ENG	[0 to 200 / <b>C3c: 120, C3d: 150</b> / 1 deg/step]
017	Thick1:FC:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
018	Thick1:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
019	Thick1:BW:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
020	Thick1:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
021	Thick2:FC:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
022	Thick2:FC:Press	*ENG	[100 to 200 / <b>120</b> / 1 deg/step]
023	Thick2:BW:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
024	Thick2:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
025	Thick3:FC:Center	*ENG	[100 to 180 / <b>163</b> / 1 deg/step]
026	Thick3:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
027	Thick3:BW:Center	*ENG	[100 to 180 / <b>163</b> / 1 deg/step]
028	Thick3:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
029	Special1:FC:Center	*ENG	[100 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]

030	Special1:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
031	Special1:BW:Center	*ENG	[100 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]
032	Special1:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
033	Special2:FC:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
034	Special2:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
035	Special2:BW:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
036	Special2:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
037	Special3:FC:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
038	Special3:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
039	Special3:BW:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
040	Special3:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
041	Envelop:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
042	Envelop:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
101	Plain1:FC:Center:Low Speed	*ENG	[100 to 180 / <b>133</b> / 1 deg/step]
102	Plain1:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
103	Plain1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>133</b> / 1 deg/step]
104	Plain1:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
105	Plain2:FC:Center:Low Speed	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
106	Plain2:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
107	Plain2:BW:Center:Low Speed	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
108	Plain2:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
109	M-thick:FC:Center:Low Speed	*ENG	[100 to 180 / <b>143</b> / 1 deg/step]
110	M-thick:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]

111	M-thick:BW:Center:Low Speed	*ENG	[100 to 180 / <b>143</b> / 1 deg/step]
112	M-thick:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
113	Thick1:FC:Center:Low Speed	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
114	Thick1:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
115	Thick1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
116	Thick1:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
117	Special1:FC:Center:Low Speed	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
118	Special1:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
119	Special1:BW:Center:Low Speed	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
120	Special1:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
121	Special2:FC:Center:Low Speed	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
122	Special2:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
123	Special2:BW:Center:Low Speed	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]
124	Special2:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
125	Plain1:Glossy:Center	*ENG	[100 to 180 / <b>138</b> / 1 deg/step]
126	Plain1:Glossy:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
127	Plain2:Glossy:Center	*ENG	[100 to 180 / <b>143</b> / 1 deg/step]
128	Plain2:Glossy:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
129	M-thick:Glossy:Center	*ENG	[100 to 180 / <b>148</b> / 1 deg/step]

130	M-thick:Glossy:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
131	OHP:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
132	OHP:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
133	Envelop:Center:Low Speed	*ENG	[100 to 180 / <b>163</b> / 1 deg/step]
134	Envelop:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
135	Thin:FC:Center:Low Speed	*ENG	[100 to 180 / <b>128</b> / 1 deg/step]
136	Thin:FC:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
137	Thin:BW:Center:Low Speed	*ENG	[100 to 180 / <b>128</b> / 1 deg/step]
138	Thin:BW:Press:Low Speed	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
139	Thick4:FC:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
140	Thick4:FC:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
141	Thick4:BW:Center	*ENG	[100 to 180 / <b>168</b> / 1 deg/step]
142	Thick4:BW:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
143	Postcard:Center	*ENG	[100 to 180 / <b>158</b> / 1 deg/step]
144	Postcard:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]

1106	[Fusing Temp. Display]		
001	Heat: Center	-	[-10 to 250 / - / 1 deg/step]
002	Heat: End	-	Displays the temperature of the heating roller.
003	Press: Center	-	[-10 to 250 / - / 1 deg/step]
004	Press: End	-	Displays the temperature of the pressure roller.

1107	[Standby Target Temp. Setting]		
001	Standby/Preheat1:Center	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the ready or energy save 1 mode.		
002	Standby/Preheat1: Press	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the ready or energy save 1 mode.		

003	Preheat2:Center	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the energy save 2 mode.		
004	Preheat2:Press	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the energy save 2 mode.		
005	Low Power :Center	*ENG	[0 to 125 / <b>90</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the low power mode.		
006	Low Power:Press	*ENG	[0 to 125 / <b>60</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the low power mode.		
007	Print Ready:Center	*ENG	[0 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]
	Specifies the temperature of the heating roller for the print ready condition.		
008	Print Ready:Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
	Specifies the temperature of the pressure roller for the print ready condition.		
011	Standby Heater Off Time	*ENG	[0 to 100 / <b>15</b> / 1 sec/step]
	Specifies the time that the fusing heater turns off after the fusing unit temperature has reached its target temperature.		
1108	[After Reload/Job Target Temp.]		
001	Center	*ENG	[0 to 180 / <b>C3c: 158, C3d: 161</b> / 1 deg/step]
	Specifies the temperature of the heating roller after re-load or job.		
002	Press	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
	Specifies the temperature of the pressure roller after re-load or job.		
011	Center:BW2	*ENG	[0 to 180 / <b>C3c: 135(NA), 130(Other), C3d: 140(NA), 135(Other)</b> / 1 deg/step]
	Specifies the temperature of the pressure roller after re-load or job in BW mode 2.		
012	Press:BW2	*ENG	[0 to 200 / <b>120</b> / 1 deg/step]
	Specifies the temperature of the pressure roller after re-load or job in BW mode 2.		

1111	[Environment Correction:Fusing]		
001	Temp.: Threshold: Low	*ENG	[0 to 100 / <b>17</b> / 1 deg/step]
	Specifies the threshold temperature for low temperature. If the fusing temperature is 17°C or less, the machine executes the fusing mode for low temperature.		
002	Temp.: Threshold: High	*ENG	[0 to 100 / <b>30</b> / 1 deg/step]
	Specifies the threshold temperature for high temperature. If the fusing temperature is 30°C or more, the machine executes the fusing mode for high temperature.		
003	Low Temp. Correction	*ENG	[0 to 15 / <b>5</b> / 1 deg/step]
	Specifies the additional temperature for the target temperature. If the fusing temperature is in low temperature condition, this temperature is added to the target temperature.		
004	High Temp. Correction	*ENG	[0 to 15 / <b>0</b> / 1 deg/step]
	Specifies the additional temperature for the target temperature. If the fusing temperature is in high temperature condition, this temperature is added to the target temperature.		
005	Job Low Temp. Correction	*ENG	[0 to 100 / <b>5</b> / 0.1 deg/step]
006	Job High Temp. Correction	*ENG	[0 to 100 / <b>0</b> / 0.1 deg/step]
007	Job Low Temp. Correction:Sp.	*ENG	[0 to 100 / <b>10</b> / 0.1 deg/step]
008	Job High Temp. Correction:Sp.	*ENG	[0 to 100 / <b>0</b> / 0.1 deg/step]
011	Standard Environment Temp.	*ENG	[10 to 30 / <b>23</b> / 1 deg/step]

1113	[Curl Correction]		
001	Execute Pattern	*ENG	[0 to 2 / <b>0</b> / 1 /step] 0: Off, 1: On (No Decurl), 2: On
	Selects the curl correction type.		
002	Humidity:Threshold:M-humid	*ENG	[0 to 100 / 1 / 1 %/step]
	Specifies the threshold between low and middle humidity.		
003	Humidity:Threshold:H-humid	*ENG	[0 to 100 / <b>65</b> / 1 %/step]
	Specifies the threshold between middle and high humidity.		

004	Permit Temp.:Delta:Press:M-humid	*ENG	[0 to 200 / <b>40</b> / 1 deg/step]
	Specifies the threshold temperature for the curl control in middle humidity.		
005	Permit Temp.:Delta:Press:H-humid	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
	Specifies the threshold temperature for the curl control in high humidity.		
006	Permit Temp.:Delta:Press:M-humid:No Decurl	*ENG	[0 to 200 / <b>30</b> / 1 deg/step]
	Specifies the threshold temperature for the no curl control in middle humidity.		
007	Permit Temp.:Delta:Press:H-humid:No Decurl	*ENG	[0 to 200 / <b>20</b> / 1 deg/step]
	Specifies the threshold temperature for the no curl control in high humidity.		
008	CPM:M-humid	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the CPM ratio of the decurl control against to the normal operation in middle humidity.		
009	CPM:H-humid	*ENG	[0 to 100 / <b>65</b> / 1 %/step]
	Specifies the CPM ratio of the decurl control against to the normal operation in high humidity.		
010	CPM:M-humid:No Decurl	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the CPM ratio against of the no decurl control to the normal operation in middle humidity.		
011	CPM:H-humid:No Decurl	*ENG	[0 to 100 / <b>65</b> / 1 %/step]
	Specifies the CPM ratio against of the no decurl control to the normal operation in high humidity.		
1115	[Target Temp. Correction]		
001	Temp.:Delta:End	*ENG	[-100 to 100 / <b>0</b> / 1 deg/step]
	Specifies the different temperature between end and center of the heating roller.		



1124	[CPM Down Setting]		
	Specifies the settings for the CPM down mode.		
001	Low:Down Temp.	*ENG	[-50 to 0 / <b>-20</b> / 1 deg/step]
	Specifies the CPM down threshold temperature for the low temperature condition. If the fusing temperature decreases -20°C (adjustable) below the target temperature, the machine enters the CPM down mode.		
002	Low:Up Temp.	*ENG	[-50 to 0 / <b>-15</b> / 1 deg/step]
	Specifies the CPM up threshold temperature for the low temperature condition. If the fusing temperature increases -15°C (adjustable) below the target temperature, the machine enters the CPM up mode.		
003	Low :1st CPM	*ENG	[10 to 100 / <b>80</b> / 1 %/step]
	Specifies the 1st CPM down ration against the normal CPM in the low temperature condition.		
004	Low :2nd CPM	*ENG	[10 to 100 / <b>65</b> / 1 %/step]
	Specifies the 2nd CPM down ration against the normal CPM in the low temperature condition.		
005	Low :3rd CPM	*ENG	[10 to 100 / <b>50</b> / 1 %/step]
	Specifies the 3rd CPM down ration against the normal CPM in the low temperature condition.		
006	High :1st CPM	*ENG	[10 to 100 / <b>80</b> / 1 %/step]
	Specifies the 1st CPM down ration against the normal CPM in the high temperature condition.		
007	High:2nd CPM	*ENG	[10 to 100 / <b>50</b> / 1 %/step]
	Specifies the 3rd CPM down ration against the normal CPM in the high temperature condition.		
008	High:3rd CPM	*ENG	[10 to 100 / <b>30</b> / 1 %/step]
	Specifies the 1st CPM down ration against the normal CPM in the high temperature condition.		

009	High:1st CPM Down Temp.:A3:Press End	*ENG	[100 to 250 / <b>180</b> / 1 deg/step]
	Specifies the heating roller temperature for 1st CPM down of A3 paper size.		
010	High:2nd CPM Down Temp.:A3:Press End	*ENG	[100 to 250 / <b>185</b> / 1 deg/step]
	Specifies the heating roller temperature for 2nd CPM down of A3 paper size.		
011	High:3rd CPM Down Temp.:A3:Press End	*ENG	[100 to 250 / <b>190</b> / 1 deg/step]
	Specifies the heating roller temperature for 3rd CPM down of A3 paper size.		
012	High:1st CPM Down Temp.:DLT:Press End	*ENG	[100 to 250 / <b>180</b> / 1 deg/step]
	Specifies the heating roller temperature for 1st CPM down of DLT paper size.		
013	High:2nd CPM Down Temp.:DLT:Press End	*ENG	[100 to 250 / <b>185</b> / 1 deg/step]
	Specifies the heating roller temperature for 2nd CPM down of DLT paper size.		
014	High:3rd CPM Down Temp.:DLT:Press End	*ENG	[100 to 250 / <b>190</b> / 1 deg/step]
	Specifies the heating roller temperature for 3rd CPM down of DLT paper size.		
015	High:1st CPM Down Temp.:B4:Press End	*ENG	[100 to 250 / <b>145</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 paper size.		
016	High:2nd CPM Down Temp.:B4:Press End	*ENG	[100 to 250 / <b>155</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 paper size.		
017	High:3rd CPM Down Temp.:B4:Press End	*ENG	[100 to 250 / <b>160</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of B4 paper size.		
018	High:1st CPM Down Temp.:LT:Fuser End	*ENG	[100 to 250 / <b>190</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of LT paper size.		

019	High:2nd CPM Down Temp.:LT:Fuser End	*ENG	[100 to 250 / <b>195</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT paper size.		
020	High:3rd CPM Down Temp.:LT:Fuser End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT paper size.		
021	High:1st CPM Down Temp.:A4:Fuser End	*ENG	[100 to 250 / <b>190</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 paper size.		
022	High:2nd CPM Down Temp.:A4:Fuser End	*ENG	[100 to 250 / <b>195</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 paper size.		
023	High:3rd CPM Down Temp.:A4:Fuser End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 paper size.		
024	High:1st CPM Down Temp.:B5:Press End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 paper size.		
025	High :2nd CPM Down Temp.:B5:Press End	*ENG	[100 to 250 / <b>205</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 paper size.		
026	High :3rd CPM Down Temp.:B5:Press End	*ENG	[100 to 250 / <b>210</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 paper size.		
027	High :1std CPM Down Temp.:A5:Press End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
028	High :2nd CPM Down Temp.:A5:Press End	*ENG	[100 to 250 / <b>205</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		

029	High :3rd CPM Down Temp.:A5:Press End	*ENG	[100 to 250 / <b>210</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of A5 paper size.		
030	High :1st CPM Down Temp.:B6:Press End	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
031	High :2nd CPM Down Temp.:B6:Press End	*ENG	[100 to 250 / <b>205</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
032	High :3rd CPM Down Temp.:B6:Press End	*ENG	[100 to 250 / <b>210</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
033	High :1st CPM:Down Temp.:A6:Press Center	*ENG	[100 to 250 / <b>200</b> / 1 deg/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
034	High :2nd CPM:Down Temp.:A6:Press Center	*ENG	[100 to 250 / <b>205</b> / 1 deg/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
035	High :3rd CPM:Down Temp.:A6:Press Center	*ENG	[100 to 250 / <b>210</b> / 1 deg/step]
	Specifies the pressure roller temperature for 3rd CPM down of A6 paper size.		
051	Judging Interval	*ENG	[1 to 250 / <b>5</b> / 1 sec/step]
	Specifies the interval for CPM down judgment.		
101	High :1st CPM:Down Time:A3	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 paper size.		
102	High :2nd CPM:Down Time:A3	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 paper size.		

103	High :3rd CPM:Down Time:A3	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A3 paper size.		
104	High : 1st CPM:Down Time:DLT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT.		
105	High :2nd CPM:Down Time:DLT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT.		
106	High :3rd CPM:Down Time:DLT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of DLT.		
107	High : 1st CPM:Down Time:B4	*ENG	[0 to 10,000 / <b>C3c: 30, C3d: 20</b> / 1 sec/ step]
	Specifies the pressure roller temperature for 1st CPM down of B4 paper size.		
108	High :2nd CPM:Down Time:B4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 paper size.		
109	High :3rd CPM:Down Time:B4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B4 paper size.		
110	High : 1st CPM:Down Time:LT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of LT.		
111	High :2nd CPM:Down Time:LT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT.		
112	High :3rd CPM:Down Time:LT	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT.		

113	High : 1st CPM:Down Time:A4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 paper size.		
114	High : 2nd CPM:Down Time:A4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 paper size.		
115	High : 3rd CPM:Down Time:A4	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 paper size.		
116	High : 1st CPM:Down Time:B5	*ENG	[0 to 10,000 / <b>C3c: 30, C3d: 20</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 paper size.		
117	High : 2nd CPM:Down Time:B5	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 paper size.		
118	High : 3rd CPM:Down Time:B5	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 paper size.		
119	High : 1st CPM:Down Time:A5	*ENG	[0 to 10,000 / <b>C3c: 40, C3d: 20</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
120	High : 2nd CPM:Down Time:A5	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		
121	High : 3rd CPM:Down Time:A5	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A5 paper size.		
122	High : 1st CPM:Down Time:B6	*ENG	[0 to 10,000 / <b>C3c: 40, C3d: 20</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		

123	High :2nd CPM:Down Time:B6	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
124	High :3rd CPM:Down Time:B6	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B6 paper size.		
125	High :1st CPM:Down Time:A6	*ENG	[0 to 10,000 / <b>C3c: 40, C3d: 20</b> / 1 sec/ step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
126	High :2nd CPM:Down Time:A6	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
127	High :3rd CPM:Down Time:A6	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A6 paper size.		
151	High :1st CPM:Down Time:A3:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 paper size.		
152	High :2nd CPM:Down Time:A3:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 paper size.		
153	High :3rd CPM:Down Time:A3:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A3 paper size.		
154	High :1st CPM:Down Time:DLT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT.		
155	High :2nd CPM:Down Time:DLT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT.		

156	High :3rd CPM:Down Time:DLT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of DLT.		
157	High :1st CPM:Down Time:B4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 paper size.		
158	High :2nd CPM:Down Time:B4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 paper size.		
159	High :3rd CPM:Down Time:B4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B4 paper size.		
160	High :1st CPM:Down Time:LT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of LT.		
161	High :2nd CPM:Down Time:LT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT.		
162	High :3rd CPM:Down Time:LT:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT.		
163	High :1st CPM:Down Time:A4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 paper size.		
164	High :2nd CPM:Down Time:A4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 paper size.		
165	High :3rd CPM:Down Time:A4:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 paper size.		



166	High : 1st CPM:Down Time:B5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 paper size.		
167	High : 2nd CPM:Down Time:B5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 paper size.		
168	High : 3rd CPM:Down Time:B5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 paper size.		
169	High : 1st CPM:Down Time:A5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
170	High : 2nd CPM:Down Time:A5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		
171	High : 3rd CPM:Down Time:A5:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A5 paper size.		
172	High : 1st CPM:Down Time:B6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
173	High : 2nd CPM:Down Time:B6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
174	High : 3rd CPM:Down Time:B6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of B6 paper size.		
175	High : 1st CPM:Down Time:A6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		

176	High :2nd CPM:Down Time:A6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
177	High :3rd CPM:Down Time:A6:Low Speed	*ENG	[0 to 10,000 / <b>10,000</b> / 1 sec/step]
	Specifies the pressure roller temperature for 3rd CPM down of A6 paper size.		

1125	[CPM Down Setting]		
	Specifies the settings for the CPM down mode.		
001	High : 1st CPM:A3:Large Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Large paper size.		
002	High :2nd CPM:A3:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 Large paper size.		
003	High :3rd CPM:A3:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A3 Large paper size.		
004	High : 1st CPM:A3:Small Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Small paper size.		
005	High :2nd CPM:A3:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 Small paper size.		
006	High :3rd CPM:A3:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A3 Small paper size.		
007	High : 1st CPM:DLT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Large paper size.		

008	High :2nd CPM:DLT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT Large paper size.		
009	High :3rd CPM:DLT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of DLT Large paper size.		
010	High :1st CPM:DLT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Small paper size.		
011	High :2nd CPM:DLT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT Small paper size.		
012	High :3rd CPM:DLT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of DLT Small paper size.		
013	High :1st CPM:B4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>C3c: 90, C3d: 75</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Large paper size.		
014	High :2nd CPM:B4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 Large paper size.		
015	High :3rd CPM:B4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B4 Large paper size.		
016	High :1st CPM:B4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>C3c: 90, C3d: 75</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Small paper size.		
017	High :2nd CPM:B4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 Small paper size.		

018	High :3rd CPM:B4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B4 Small paper size.		
019	High : 1st CPM:LT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Large paper size.		
020	High :2nd CPM:LT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT Large paper size.		
021	High :3rd CPM:LT:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT Large paper size.		
022	High : 1st CPM:LT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Small paper size.		
023	High :2nd CPM:LT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT Small paper size.		
024	High :3rd CPM:LT:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of LT Small paper size.		
025	High : 1st CPM:A4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Large paper size.		
026	High :2nd CPM:A4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 Large paper size.		
027	High :3rd CPM:A4:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 Large paper size.		

028	High : 1st CPM:A4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Small paper size.		
029	High : 2nd CPM:A4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 Small paper size.		
030	High : 3rd CPM:A4:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A4 Small paper size.		
031	High : 1st CPM:B5:Large Size:Normal Speed	*ENG	[0 to 100 / <b>C3c:80, C3d: 70</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Large paper size.		
032	High : 2nd CPM:B5:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 Large paper size.		
033	High : 3rd CPM:B5:Large Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 Large paper size.		
034	High : 1st CPM:B5:Small Size:Normal Speed	*ENG	[0 to 100 / <b>C3c:80, C3d: 70</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Small paper size.		
035	High : 2nd CPM:B5:Small Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 Small paper size.		
036	High : 3rd CPM:B5:Small Size:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B5 Small paper size.		
037	High : 1st CPM:A5:Normal Speed	*ENG	[0 to 100 / <b>C3c: 85, C3d: 65</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		

038	High :2nd CPM:A5:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		
039	High :3rd CPM:A5:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A5 paper size.		
040	High : 1st CPM:B6:Normal Speed	*ENG	[0 to 100 / <b>C3c: 85, C3d: 65</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
041	High :2nd CPM:B6:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
042	High :3rd CPM:B6:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of B6 paper size.		
043	High : 1st CPM:A6:Normal Speed	*ENG	[0 to 100 / <b>C3c: 85, C3d: 65</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
044	High :2nd CPM:A6:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
045	High :3rd CPM:A6:Normal Speed	*ENG	[0 to 100 / <b>30</b> / 1 %/step]
	Specifies the pressure roller temperature for 3rd CPM down of A6 paper size.		
101	High : 1st CPM:A3:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Large paper size.		
102	High :2nd CPM:A3:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 Large paper size.		

103	High : 1st CPM:A3:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Small paper size.		
104	High :2nd CPM:A3:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A3 Small paper size.		
107	High : 1st CPM:DLT:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Large paper size.		
108	High :2nd CPM:DLT:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT Large paper size.		
110	High : 1st CPM:DLT:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Small paper size.		
111	High :2nd CPM:DLT:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of DLT Small paper size.		
113	High : 1st CPM:B4:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Large paper size.		
114	High :2nd CPM:B4:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 Large paper size.		
116	High : 1st CPM:B4:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Small paper size.		
117	High :2nd CPM:B4:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B4 Small paper size.		

119	High : 1st CPM:LT:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Large paper size.		
120	High :2nd CPM:LT:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT Large paper size.		
122	High : 1st CPM:LT:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Small paper size.		
123	High :2nd CPM:LT:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of LT Small paper size.		
125	High : 1st CPM:A4:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Large paper size.		
126	High :2nd CPM:A4:Large Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 Large paper size.		
128	High : 1st CPM:A4:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Small paper size.		
129	High :2nd CPM:A4:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A4 Small paper size.		
131	High : 1st CPM:B5:Large Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Large paper size.		
132	High :2nd CPM:B5:Large Size:Normal Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 Large paper size.		



134	High : 1st CPM:B5:Small Size:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Small paper size.		
135	High :2nd CPM:B5:Small Size:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B5 Small paper size.		
137	High : 1st CPM:A5:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
138	High :2nd CPM:A5:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A5 paper size.		
140	High : 1st CPM:B6:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
141	High :2nd CPM:B6:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of B6 paper size.		
143	High : 1st CPM:A6:Middle Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		
144	High :2nd CPM:A6:Middle Speed	*ENG	[0 to 100 / <b>50</b> / 1 %/step]
	Specifies the pressure roller temperature for 2nd CPM down of A6 paper size.		
201	High : 1st CPM:A3:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Large paper size.		
204	High : 1st CPM:A3:Small Size: Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A3 Small paper size.		

207	High : 1st CPM:DLT:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Large paper size.		
210	High : 1st CPM:DLT:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of DLT Small paper size.		
213	High : 1st CPM:B4:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Large paper size.		
216	High : 1st CPM:B4:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B4 Small paper size.		
219	High : 1st CPM:LT:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Large paper size.		
222	High : 1st CPM:LT:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of LT Small paper size.		
225	High : 1st CPM:A4:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Large paper size.		
228	High : 1st CPM:A4:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A4 Small paper size.		
231	High : 1st CPM:B5:Large Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Large paper size.		
234	High : 1st CPM:B5:Small Size:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B5 Small paper size.		

237	High : 1st CPM:A5:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A5 paper size.		
240	High : 1st CPM:B6:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of B6 paper size.		
243	High : 1st CPM:A6:Low Speed	*ENG	[0 to 100 / <b>80</b> / 1 %/step]
	Specifies the pressure roller temperature for 1st CPM down of A6 paper size.		

1141	[Fusing SC Issue Time Info]		
001	SC Number	*ENG	Displays the issued SC number.
002	SC Cause	*ENG	[0 to 9 / - / 1/step]
101	Htg Roller:Ctr Det1	*ENG	Displays the temperature at the center of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
102	Htg Roller:End Det1	*ENG	Displays the temperature at the end of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
103	Press Roller:Ctr Det1	*ENG	Displays the temperature at the center of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
104	Press Roller:End Det1	*ENG	Displays the temperature at the end of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
151	Htg Roller:Ctr Det2	*ENG	Displays the temperature at the center of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
152	Htg Roller:End Det2	*ENG	Displays the temperature at the end of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]

153	Press Roller:Ctr Det2	*ENG	Displays the temperature at the center of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
154	Press Roller:End Det2	*ENG	Displays the temperature at the end of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
201	Htg Roller:Ctr Det3	*ENG	Displays the temperature at the center of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
202	Htg Roller:End Det3	*ENG	Displays the temperature at the end of the heating roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
203	Press Roller:Ctr Det3	*ENG	Displays the temperature at the center of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]
204	Press Roller:End Det3	*ENG	Displays the temperature at the end of the pressure roller when an SC was issued. [-50 to 300 / - / 1 deg/step]

1142	[Fusing Jam Detection]		
001	SC Display	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON
	Enables or disables the fusing consecutive jam (three times) SC detection.		

1143	[Fusing Shutter Detection]		
001	SC Display	*ENG	-
	-		

1151	[Pressure Setting]		
------	--------------------	--	--

001	Pressure Change ON/OFF	*ENG	[0 or 1 / 1 / -]
	Enables or disables the pressure switching control for the fusing unit. 0: OFF, 1: ON		
002	Pressure Position 1	*ENG	[0 to 10,000 / <b>490</b> / 10 msec/step]
	Specifies the rotation time of the pressure roller contact motor for the pressure position 1.		
003	Pressure Position2	*ENG	[0 to 10,000 / <b>660</b> / 10 msec/step]
	Specifies the rotation time of the pressure roller contact motor for the pressure position 2.		
004	Pressure Position3	*ENG	[0 to 10,000 / <b>2,130</b> / 10 msec/step]
	Specifies the rotation time of the pressure roller contact motor for the pressure position 3.		
005	Depressure Position	*ENG	[0 to 10,000 / <b>220</b> / 10 msec/step]
	Specifies the rotation time of the pressure roller contact motor for the depression position (no pressure).		
010	Shift Time: BW2	*ENG	[0 to 3600 / <b>0</b> / 1 sec/step]
	Specifies the timing for depressing the fusing unit. If the machine does not get any jobs for specified time by this SP after copying or printing, the machine depresses the fusing unit.		
101	Pressure:Plain 1/2	*ENG	[0 to 3 / <b>3</b> / 1 /step]
	Sets the default pressure position of the fusing unit for each paper type in normal speed. 0: Depression position (no pressure) 1: Position 1 (less pressure) 2: Position 2 3: Position 3 (strongest pressure)		
102	Pressure:Thin	*ENG	[0 to 3 / <b>3</b> / 1 /step]
103	Pressure:M-thick	*ENG	[0 to 3 / <b>3</b> / 1 /step]
104	Pressure:Thick 1	*ENG	[0 to 3 / <b>3</b> / 1 /step]
105	Pressure:Thick2	*ENG	[0 to 3 / <b>3</b> / 1 /step]
106	Pressure:Thick3	*ENG	[0 to 3 / <b>3</b> / 1 /step]
107	Pressure:Special 1	*ENG	[0 to 3 / <b>3</b> / 1 /step]

108	Pressure:Special2	*ENG	[0 to 3 / <b>3</b> / 1 /step]
109	Pressure:Special3	*ENG	[0 to 3 / <b>3</b> / 1 /step]
110	Pressure:Envelope	*ENG	[0 to 3 / <b>3</b> / 1 /step]
151	Pressure:Plain 1/2:Low Speed	*ENG	[0 to 3 / <b>3</b> / 1 /step]
	Sets the default pressure position of the fusing unit for each paper type in low speed. 0: Depression position (no pressure) 1: Position 1 (less pressure) 2: Position 2 3: Position 3 (strongest pressure)		
152	Pressure:M-thick:Low Speed	*ENG	[0 to 3 / <b>3</b> / 1 /step]
153	Pressure:Thick 1:Low Speed	*ENG	[0 to 3 / <b>3</b> / 1 /step]
154	Pressure:Special 1:Low Speed	*ENG	[0 to 3 / <b>3</b> / 1 /step]
155	Pressure:Special 2:Low Speed	*ENG	[0 to 3 / <b>3</b> / 1 /step]
156	Pressure:Plain 1/2:Glossy	*ENG	[0 to 3 / <b>3</b> / 1 /step]
157	Pressure:M-thick:Glossy	*ENG	[0 to 3 / <b>3</b> / 1 /step]
158	Pressure:OHP	*ENG	[0 to 3 / <b>3</b> / 1 /step]
159	Pressure:Envelope:Low Speed	*ENG	[0 to 3 / <b>3</b> / 1 /step]
160	Pressure:Thin:Low Speed	*ENG	[0 to 3 / <b>3</b> / 1 /step]
	Pressure:Thick4	*ENG	[0 to 3 / <b>3</b> / 1 /step]
161	Sets the default pressure position of the fusing unit for thick 4 paper. 0: Depression position (no pressure) 1: Position 1 (less pressure) 2: Position 2 3: Position 3 (strongest pressure)		

162	Pressure:Postcard	*ENG	[0 to 3 / <b>3</b> / 1 /step]
	Sets the default pressure position of the fusing unit for postcard. 0: Depression position (no pressure) 1: Position 1 (less pressure) 2: Position 2 3: Position 3 (strongest pressure)		
201	Filler Edge Detection Counter	ENG	[0 to 9,000,000 / - / 1 /step]
	Displays the detection time for the edge of the pressure roller actuator.		

1152	[Fusing Nip Band Check]		
001	Execute	-	-
	Executes the nip band measurement between heating roller and pressure roller. If the nip band width is not 8 mm, and fusing is not good, replace the pressure roller or install a new fusing unit.		
002	Pre-idling Time	*ENG	[0 to 999 / <b>300</b> / 1 sec/step]
	Specifies the fusing rotation time before executing SP1152-001.		
003	Stop Time	*ENG	[0 to 100 / <b>20</b> / 1 sec/step]
	Specifies the time for measuring the nip.		
004	Pressure Position	*ENG	[1 to 3 / <b>3</b> / 1]
	Specifies the pressure position for measuring the nip.		

1153	[Fuser Cleaning]		
001	Compulsion execution	-	Execute the fusing cleaning mode.
002	Operation interval	*ENG	[1 to 300 / <b>0</b> / 1 K/step]
	Adjusts the execution interval for the fusing cleaning mode. 1K= 100 sheets		
003	Control Temp.	*ENG	[0 to 200 / <b>180</b> / 1°C/step]
	Specifies the heating roller temperature for the fusing cleaning mode.		

004	Page Count	*ENG	[1 to 300000 / - / 1 page/step]
	Displays the page counter for the fusing cleaning mode.		

1154	[Low Temp. Start Up] Specifies the threshold temperature at the low temperature start-up.		
001	Temp. : Threshold Value 1	*ENG	[-10 to 100 / 5 / 1/step]
002	Temp. : Threshold Value 2	*ENG	[-10 to 100 / 15 / 1/step]
003	Temp. : Target	*ENG	[0 to 100 / 100 / 1/step]
004	Temp. :Rotation Threshold Value	*ENG	[-10 to 100 / 30 / 1/step]
005	Time: Heat Storage Division 1	*ENG	[0 to 250 / 0 / 1/step]
006	Time: Heat Storage Division 2	*ENG	[0 to 250 / 0 / 1/step]

1155	[Short Heater Control] Sets the short heater controls.		
001	Print Width :Upper Limit	*ENG	[0 to 300 / 105 / 1 mm/step]
011	Feed Permit Temp. :Delta:Center	*ENG	[0 to 200 / 5 / 1 deg/step]
012	Feed Permit Temp. :Delta:Press	*ENG	[0 to 200 / 100 / 1 deg/step]
013	Feed Permit Rotation Time	*ENG	[0 to 100 / 0 / 1 sec/step]
021	After Job End Temp. :Center	*ENG	[0 to 200 / 5 / 1 sec/step]
022	After Job End Temp. :End	*ENG	[0 to 200 / 5 / 1 sec/step]
023	After Job End Time	*ENG	[0 to 100 / 0 / 1 sec/step]

1156	[A3/DLT Size Heater Control] Sets the A3/DLT size heater controls.		
------	---	--	--



001	Print Width :Lower Limit	*ENG	[0 to 400 / C3c: 280(NA), 270(EU/AA), d: 280(NA), 270(EU/AA) / 1 mm/step]
011	Feed Permit Temp. :Delta:Center	*ENG	[0 to 200 / 5 / 1 deg/step]
012	Feed Permit Temp. :Delta:End	*ENG	[0 to 200 / 5 / 1 deg/step]
013	Feed Permit Temp. :Delta:Press	*ENG	[0 to 200 / 15 / 1 deg/step]
014	Feed Permit Rotation Time	*ENG	[0 to 100 / 0 / 1 sec/step]

1801	[Motor Speed Adjust]		
001	Registration:Plain:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
002	Registration:Plain:High	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
003	Registration:Middle Thick:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
004	Registration:Middle Thick:Mid	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
005	Registration:Middle Thick:High	*ENG	
006	Registration:Thick 1:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
007	Registration:Thick 1:Mid	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
008	Registration:Thick 2:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
009	Registration:Thick 3:Low	*ENG	

010	Duplex CW:Plain:Low	*ENG	[-4 to 4 / 0.0 / 0.1 %/step]
011	Duplex CW:Normal:High	*ENG	
012	Duplex CW:Middle Thick:Low	*ENG	
013	Duplex CW:Middle Thick:Mid	*ENG	
014	Duplex CW:Middle Thick:High	*ENG	
015	Duplex CW:Thick1:Low	*ENG	
016	Duplex CW:Thick1:Mid	*ENG	
017	Duplex CW:Thick2:Low	*ENG	
018	Duplex CW:Thick3:Low	*ENG	
019	Duplex CCW:Normal:High	*ENG	[-4 to 4 / 0.0 / 0.1 %/step]
020	Duplex CCW:Middle Thick:Mid	*ENG	
021	Duplex CCW:Middle Thick:high	*ENG	
023	Duplex CCW:Thick1:Mid	*ENG	
024	Reverse CW:Normal:High	*ENG	[-4 to 4 / -0.5 / 0.1%/step]
025	Reverse CW:Middle Thick:Mid	*ENG	[-4 to 4 / 0 / 0.1 %/step]
026	Reverse CW:Middle Thick:High	*ENG	[-4 to 4 / -0.5 / 0.1%/step]
028	Reverse CW:Thick 1:Mid	*ENG	[-4 to 4 / 0 / 0.1 %/step]
029	Reverse CCW:Normal:High	*ENG	
030	Reverse CCW:Middle Thick:Mid	*ENG	
031	Reverse CCW:Middle Thick:High	*ENG	
033	Reverse CCW:Thick 1:Mid	*ENG	
034	Feed:Plain:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
035	Feed:Plain:High	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
036	Feed:Middle thick:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
037	Feed:Middle thick:Mid	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
038	Feed:Middle thick:High	*ENG	

039	Feed:Thick 1:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
040	Feed:Thick 1:Mid	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
041	Feed:Thick 2:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
042	Feed:Thick 3:Low	*ENG	
043	Bridge Motor:Low	*ENG	[-4 to 4 / 0 / 0.1 %/step]
044	Bridge Motor:Mid	*ENG	
045	Bridge Motor:High	*ENG	
060	KOpcDevMot:High	*ENG	[-4 to 4 / -0.3 / 0.01 %/step]
061	KOpcDevMot:Mid	*ENG	
062	KOpcDevMot:Low	*ENG	
063	MOpcDevMot:High	*ENG	[-10 to 10 / 0 / 1 step/step]
064	MOpcDevMot:Mid	*ENG	[-9 to 9 / 0 / 1 step/step]
065	MOpcDevMot:Low	*ENG	[-14 to 14 / 0 / 1 step/step]
066	COpcDevMot:High	*ENG	[-10 to 10 / 0 / 1 step/step]
067	COpcDevMot:Mid	*ENG	[-9 to 9 / 0 / 1 step/step]
068	COpcDevMot:Low	*ENG	[-14 to 14 / 0 / 1 step/step]
069	YOpcDevMot:High	*ENG	[-10 to 10 / 0 / 1 step/step]
070	YOpcDevMot:Mid	*ENG	[-9 to 9 / 0 / 1 step/step]
071	YOpcDevMot:Low	*ENG	[-14 to 14 / 0 / 1 step/step]
072	Fusing: High	*ENG	[-4 to 4 / -0.6 / 0.01 %/step]
073	Fusing: Mid	*ENG	[-4 to 4 / -0.8 / 0.01 %/step]
074	Fusing: Low	*ENG	[-4 to 4 / -0.3 / 0.01 %/step]
075	TransferMot:High	*ENG	[-4 to 4 / 0.1 / 0.01 %/step]
076	TransferMot:Mid	*ENG	
077	TransferMot:Low	*ENG	
078	TonerMot	*ENG	[-30 to 30 / 10 / 5 %/step]

079	Fusing: 1200	*ENG	[-4 to 4 / -0.6 / 0.01 %/step]
080	Fusing:Thin:600	*ENG	[-4 to 4 / -0.6 / 0.01 %/step]
100	Drum Adjust	*ENG	[0 or 1 / 1 / 1] 0: Off, 1: On
	Enables or disables the drum amplitude adjustment.		
101	MOpcDevMot:High	*ENG	C3c: [-10 to 10 / 0 / 1 step/step] C3d: [-8 to 8 / 0 / 1 step/step]
102	COpcDevMot:High	*ENG	
103	YOpcDevMot:High	*ENG	
104	MOpcDevMot:Mid	*ENG	[-7 to 7 / 0 / 1 step/step]
105	COpcDevMot:Mid	*ENG	
106	YOpcDevMot:Mid	*ENG	
107	MOpcDevMot:Low	*ENG	[-14 to 14 / 0 / 1 step/step]
108	COpcDevMot:Low	*ENG	
109	YOpcDevMot:Low	*ENG	
110	MOpcDevMot:1200	*ENG	[-7 to 7 / 0 / 1 step/step]
111	COpcDevMot:1200	*ENG	
112	YOpcDevMot:1200	*ENG	
120	Long:Registration:Plain:High	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
121	Long:Registration:Plain:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
122	Long:Registration:Middle Thick:High	*ENG	[-2 to 2 / -0.1 / 0.1 %/step]
123	Long:Registration:Middle Thick:Middle	*ENG	
124	Long:Registration:Middle Thick:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
125	Long:Registration:Thick 1:Middle	*ENG	[-2 to 2 / -1 / 0.1 %/step]
126	Long:Registration:Thick 1:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
127	Long:Registration:Thick 2:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]

128	Long:Registration:Thick 3:Low	*ENG	[-2 to 2 / -1.1 / 0.1 %/step]
129	Long:Fusing:Plain:High	*ENG	[-4 to 4 / 1.9 / 0.01 %/step]
130	Long:Fusing:Plain:Low	*ENG	[-4 to 4 / 2.1 / 0.01 %/step]
131	Long:Fusing:Middle Thick:High	*ENG	[-4 to 4 / 1.9 / 0.01 %/step]
132	Long:Fusing:Middle Thick:Middle	*ENG	[-4 to 4 / 1.4 / 0.01 %/step]
133	Long:Fusing:Middle Thick:Low	*ENG	[-4 to 4 / 2.1 / 0.01 %/step]
134	Long:Fusing:Thick 1:Middle	*ENG	[-4 to 4 / 2.0 / 0.01 %/step]
135	Long:Fusing:Thick 1:Low	*ENG	[-4 to 4 / 1.7 / 0.01 %/step]
136	Long:Fusing:Thick 2:Low	*ENG	[-4 to 4 / 1.7 / 0.01 %/step]
137	Long:Fusing:Thick 3:Low	*ENG	[-4 to 4 / 1.7 / 0.01 %/step]

1902	[Amplitude Control]		
001	Execute	-	Execute the drum phase adjustment.
002	Result	*ENG	[0 to 3 / - / 1] Displays the result of the drum phase adjustment. 0: Successfully done 2: Sampling failure 3: Insufficient detection number
003	Auto Execution	*ENG	[0 or 1 / 1 / -] Turns the automatic drum phase adjustment on or off. 0: Off, 1: On

1950	[Fan Cooling Time Set]		
	Adjust the rotation time for each fan motor after a job end.		

002	Fusing Exit Fan	*ENG	[0 to 120 / 0 / 0.1 min./step]
006	Main Suction Fan	*ENG	
007	Paper Exit Fan	*ENG	
008	PSU Fan	*ENG	
009	QSU Heater Cooling Fan	*ENG	
010	AC Control board Cooling Fan	*ENG	
011	Second Duct Fan	*ENG	
012	Toner Supply Cooling Fan	*ENG	

1951	[Fan Start Time Set]		
	Adjust the start time for each fan motor after a job end.		
002	Fusing Exit Fan	*ENG	[0 to 900 / 120 / 1 sec/step]
006	Main Suction Fan	*ENG	[0 to 900 / 120 / 1 sec/step]
007	Paper Exit Fan	*ENG	[0 to 900 / 120 / 1 sec/step]
008	PSU Fan	*ENG	[0 to 900 / 120 / 1 sec/step]
009	QSU Heater Cooling Fan	*ENG	[0 to 900 / 120 / 1 sec/step]
010	AC Control board Cooling Fan	*ENG	
011	Second Duct Fan	*ENG	
012	Toner Supply Cooling Fan	*ENG	

1952	[Fan Control Off Mode Time Set]		
	Specifies the time for fan control off mode.		
001	-	*ENG	[0 to 60 / 10 / 1 min./step]

1953	[Extra Fan Control]		
	Configures the settings of extra fan control.		

001	Extra Fan Cooling State	*ENG	[0 or 1 / - / 1 /step] 0: Off, 1: On
	Displays the extra fan cooling is On or Off.		
002	Extra Fan Cooling: Time: Threshold	*ENG	[0 to 180 / <b>C3c: 80, C3d: 65</b> / 1 min./step]
003	Extra Fan Cooling: Rotat: Threshold	*ENG	[0 to 999999999 / <b>0</b> / 1 min./step]
004	Extra Fan Cooling: Start Date	*ENG	Displays the execution time and date of the extra fan cooling.
005	Extra Fan Cooling Time	*ENG	[0 to 120 / <b>30</b> / 0.1 min./step:
	Specifies the execution time for the extra fan cooling.		
006	Execution Temp. Threshold	*ENG	[20 to 70 / <b>37.3</b> / 0.1 deg/step]
	Specifies the judgment temperature for the starting of extra fan execution.		
007	Cancellation Temp. Threshold	*ENG	[0.1 to 20 / <b>4.5</b> / 0.1 deg/step]
	Specifies the threshold temperature (the difference in value with the starting of extra fan execution) for the cancellation of extra fan execution.		
008	ON/OFF Setting	*ENG	[0 to 1 / <b>1</b> / 1 /step]
	Enables or disenables the control of extra fan execution control. 0: Disable 1: Enable		

1955	[Fan Control]		
	Configures the settings of fan execution switching.		
001	Execution Temp. Threshold	*ENG	[20 to 70 / <b>34.6</b> / 0.1 /step]
002	Cancellation Temp. Threshold	*ENG	[0.1 to 20 / <b>1.8</b> / 0.1 /step]

1954	[Extra Fan Control]		
	Configures the settings of extra fan control.		

002	Fan Cooling Time:Fusing Exit Fan:Initial	*ENG	[0 to 120 / 0 / 0.1 min./step]
006	Fan Cooling Time:Main Suction Fan:Initial	*ENG	[0 to 120 / 0 / 0.1 min./step]
007	Fan Cooling Time:Paper Exit Fan:Initial	*ENG	[0 to 120 / 0 / 0.1 min./step]
008	Fan Cooling Time:PSU Fan:Initial	*ENG	[0 to 120 / 0 / 0.1 min./step]
009	Fan Cooling Time:Fusing IH Coil Fan:Initial	*ENG	[0 to 120 / 0 / 0.1 min./step]
010	Fan Cooling Time:IH Power Supply Fan:Initial	*ENG	[0 to 120 / 0 / 0.1 min./step]
011	Fan Cooling Time:Second Duct Fan:Initial	*ENG	[0 to 120 / 0 / 0.1 min./step]
012	Fan Cooling Time:Third Duct Fan:Initial	*ENG	[0 to 120 / 0 / 0.1 min./step]



# Main SP Tables-2

## SP2-XXX (Drum)

2005	[Charge DC Voltage] Charge Roller DC Voltage Adjustment (Paper Type, Process Speed, Color) Paper Type → Plain, Thick 1, Thick 2 Plain: High speed, Thick 1: Middle speed, Thick 2&FINE: Low speed		
	Adjusts the DC component of the charge roller bias in the various print modes. Charge bias (DC component) is automatically adjusted during process control; therefore, adjusting these settings does not effect while process control mode (SP3-041-1 Default: ON) is activated. When deactivating process control mode with SP3-041-1, the values in these SP modes are used for printing.		
001	Plain: Bk	*ENG	[0 to 1000 / <b>690</b> / 10 -V/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2&FINE: Bk	*ENG	
010	Thick 2&FINE: M	*ENG	
011	Thick 2&FINE: C	*ENG	
012	Thick 2&FINE: Y	*ENG	
[Charge DC: Correction]			
013	PCU:Plain	*ENG	[-100 to 100 / <b>C3c: -26, C3d: -28</b> / 1 -V/step]
014	PCU:Thick 1	*ENG	[-100 to 100 / <b>-29</b> / 1 -V/step]

015	PCU:Thick 2&FINE	*ENG	[-100 to 100 / -28 / 1 -V/step]
016	HVP:Plain	*ENG	[-100 to 100 / C3c:25, C3d: 24 / 1 -V/step]
017	HVP:Thick 1	*ENG	[-100 to 100 / 20 / 1 -V/step]
018	HVP: Thick 2&FINE	*ENG	[-100 to 100 / 29 / 1 -V/step]

2006	<p>[Charge AC Voltage] Charge Roller AC Voltage Adjustment                  (Paper Type, Process Speed, Color)                  Paper Type → Plain, Thick 1, Thick 2                  Plain: High speed, Thick 1: Middle speed, Thick 2&amp;FINE: Low speed</p>		
	<p>Adjusts the AC component of the charge roller bias in the various print modes.                  Charge bias (AC component) is adjusted by environment correction (SP2-007-xxx to SP2-011-xxx). These SPs are activated only when SP2-012-1 is set to "1: manual control".</p>		
001	Plain: Bk	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
002	Plain: M	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
003	Plain: C	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
004	Plain: Y	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
005	Thick 1: Bk	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
006	Thick 1: M	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
007	Thick 1: C	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
008	Thick 1: Y	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
009	Thick 2&FINE: Bk	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
010	Thick 2&FINE: M	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
011	Thick 2&FINE: C	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
012	Thick 2&FINE: Y	*ENG	[0 to 3 / 1.9 / 0.01 KV/step]
2012	[Charge Output Control]		

001	AC Voltage	*ENG	<p>Selects the AC voltage control type.</p> <p>[0 or 1 / <b>0</b> / 1 /step]</p> <p>0: Process control</p> <p>1: Manual control (AC voltages are decided with SP2006.)</p>
-----	------------	------	--

2013	[Environmental Correction: PCU]		
001	Current Environmental FC: Display	*ENG	<p>Displays the environmental condition, which is measured in absolute humidity.</p> <p>[1 to 5 / - / 1 /step]</p> <p>1: LL (LL ≤ 4.3 g/m<sup>3</sup>)</p> <p>2: ML (4.3 &lt; ML ≤ 11.3 g/m<sup>3</sup>)</p> <p>3: MM (11.3 &lt; MM ≤ 18.0 g/m<sup>3</sup>)</p> <p>4: MH (18.0 &lt; MH ≤ 24.0 g/m<sup>3</sup>)</p> <p>5: HH (24.0 g/m<sup>3</sup> &lt; HH)</p>
002	Forced Setting	*ENG	<p>Selects the environmental condition manually.</p> <p>[0 to 5 / <b>0</b> / 1 /step]</p> <p>0: The environmental condition is determined automatically.</p> <p>1: LL, 2: ML, 3: MM, 4: MH, 5: HH</p>
003	Absolute Humidity: Threshold 1	*ENG	<p>Changes the humidity threshold between LL and ML.</p> <p>[0 to 100 / <b>3.0</b> / 0.01 g/m<sup>3</sup>/step]</p>
004	Absolute Humidity: Threshold 2	*ENG	<p>Changes the humidity threshold between ML and MM.</p> <p>[0 to 100 / <b>8.0</b> / 0.01 g/m<sup>3</sup>/step]</p>
005	Absolute Humidity: Threshold 3	*ENG	<p>Changes the humidity threshold between MM and MH.</p> <p>[0 to 100 / <b>15.0</b> / 0.01 g/m<sup>3</sup>/step]</p>
006	Absolute Humidity: Threshold 4	*ENG	<p>Changes the humidity threshold between MH and HH.</p> <p>[0 to 100 / <b>22.0</b> / 0.01 g/m<sup>3</sup>/step]</p>

007	Current Temp. FC: Display	*ENG	Displays the current temperature. [0 to 100 / - / 1 deg/step]
008	Current Relative Humidity FC: Display	*ENG	Displays the current relative humidity. [0 to 100 / - / 1%RH/step]
009	Current Absolute Humidity FC: Display	*ENG	Displays the absolute humidity. [0 to 100 / - / 0.01 g/m <sup>3</sup> /step]
010	Previous Environmental Bk: Display	*ENG	Displays the previous environmental condition, which is measured in absolute humidity. [1 to 5 / - / 1 /step] 1: LL, 2: ML, 3: MM, 4: MH, 5: HH
011	Previous Temp. Bk: Display	*ENG	Displays the previous temperature. [0 to 100 / - / 1 deg/step]
012	Previous Relative Humidity Bk: Display	*ENG	Displays the previous relative humidity. [0 to 100 / - / 1%RH/step]
013	Previous Absolute Humidity Bk: Display	*ENG	Displays the previous absolute humidity. [0 to 100 / - / 0.01 g/m <sup>3</sup> /step]

2015	[Charge AC Adj: Result] Displays a result of the AC charge adjustment.		
001	Bk	*ENG	[0 to 9 / 0 / 1 /step]
002	M	*ENG	0: Success
003	C	*ENG	1: Out of tolerance range
004	Y	*ENG	2: Out of adjustable range 3: Adjustment incompletd

2101	[Color Registration Correction] <b>FA</b>		
	These values are the parameters for the automatic line position adjustment and are adjusted at the factory. However, you must input a value for SP2101-001 after replacing the laser optics housing unit. For details, see "Laser Optics Housing Unit" in the "Main chapters: 4. Replacement and Adjustment: Laser Optics". The value should be provided with the new laser optics housing unit.		

001	Main Dot: Bk	*ENG	[-512 to 511 / <b>0</b> / 1 dot/step]
002	Main Dot: Ma	*ENG	
003	Main Dot: Cy	*ENG	
004	Main Dot: Ye	*ENG	
005	Sub Line: Bk	*ENG	[-16384 to 16383 / <b>0</b> / 1 line/step]
006	Sub Line: Ma	*ENG	
007	Sub Line: Cy	*ENG	
008	Sub Line: Ye	*ENG	

2103	[Erase Margin Adjustment] (Area, Paper Size)		
	Adjusts the erase margin by deleting image data at the margins.		
001	Lead Edge Width	*ENG	[0 to 9.9 / <b>4.2</b> / 0.1 mm/step]
002	Trail. Edge Width	*ENG	
003	Left	*ENG	[0 to 9.9 / <b>2</b> / 0.1 mm/step]
004	Right	*ENG	
006	Duplex Trail. L Size	*ENG	[0 to 4 / <b>1</b> / 0.1 mm/step]
007	Duplex Trail. M Size	*ENG	[0 to 4 / <b>0.8</b> / 0.1 mm/step]
008	Duplex Trail. S Size	*ENG	[0 to 4 / <b>0.6</b> / 0.1 mm/step]
009	Duplex Left Edge	*ENG	[0 to 1.5 / <b>0.3</b> / 0.1 mm/step]
010	Duplex Right Edge	*ENG	
011	Duplex Trail. L Size:Thick	*ENG	[0 to 4 / <b>1</b> / 0.1 mm/step]
012	Duplex Trail. M Size:Thick	*ENG	[0 to 4 / <b>0.8</b> / 0.1 mm/step]
013	Duplex Trail. S Size:Thick	*ENG	[0 to 4 / <b>0.6</b> / 0.1 mm/step]
014	Duplex Left Edge:Thick	*ENG	[0 to 1.5 / <b>0.3</b> / 0.1 mm/step]
015	Duplex Right Edge:Thick	*ENG	

016	Lead Edge Width: Thin	*ENG	[0 to 9.9 / <b>4.2</b> / 0.1 mm/step]
017	Trail. Edge Width: Thin	*ENG	
018	Duplex Trail. L Size: Thin	*ENG	[0 to 4 / <b>1</b> / 0.1 mm/step]
019	Duplex Trail. M Size: Thin	*ENG	[0 to 4 / <b>0.8</b> / 0.1 mm/step]
020	Duplex Trail. S Size: Thin	*ENG	[0 to 4 / <b>0.6</b> / 0.1 mm/step]

2105	[LD Power Adj.] (Process Speed, Color)		
	Adjusts the LD power of each color for each process speed. Each LD power setting is decided by process control.		
001	High Speed: Bk	*ENG	[50 to 120 / <b>100</b> / 1%/step]
002	High Speed: Ma	*ENG	Decreasing a value makes lines thinner on the output. Increasing a value makes lines thicker on the output.
003	High Speed: Cy	*ENG	
004	High Speed: Ye	*ENG	
005	Middle Speed: Bk	*ENG	[50 to 120 / <b>100</b> / 1%/step]
006	Middle Speed: Ma	*ENG	Decreasing a value makes lines thinner on the output. Increasing a value makes lines thicker on the output.
007	Middle Speed: Cy	*ENG	
008	Middle Speed: Ye	*ENG	
009	Low Speed: Bk	*ENG	[50 to 120 / <b>100</b> / 1%/step]
010	Low Speed: Ma	*ENG	Decreasing a value makes lines thinner on the output. Increasing a value makes lines thicker on the output.
011	Low Speed: Cy	*ENG	
012	Low Speed: Ye	*ENG	

2109	[Test Pattern]		
	Generates the test pattern using "COPY Window" tab in the LCD.		
003	Pattern Selection	-	[0 to 23 / <b>0</b> / 1/step]

	0 None 1: Vertical Line (1dot) 2: Vertical Line (2dot) 3: Horizontal (1dot) 4: Horizontal (2dot) 5: Grid Vertical Line 6: Grid Horizontal Line 7: Grid pattern Small 8: Grid pattern Large 9: Argyle Pattern Small 10: Argyle Pattern Large		11. Independent Pattern (1dot) 12. Independent Pattern (2dot) 13. Independent Pattern (4dot) 14. Trimming Area 16: Hound's Tooth Check (Horizontal) 17: Band (Horizontal) 18: Band (Vertical) 19: Checker Flag Pattern 20: Grayscale Vertical Margin 21: Grayscale Horizontal Margin 23: Full Dot Pattern
005	Color Selection	-	Specifies the color for the test pattern. [1 to 4 / 1 / 1/step] 1: All colors, 2: Magenta, 3: Yellow, 4: Cyan
006	Density: Bk	-	Specifies the color density for the test pattern. [0 to 15 / 15 / 1 /step] 0: Lightest density 15: Darkest density
007	Density: Ma	-	
008	Density: Cy	-	
009	Density: Ye	-	

2111	[Forced Line Position Adj.]		
001	Mode a	-	Executes the fine line position adjustment twice. If this SP is not completed (NG is displayed), do SP2111-003 first and then try this SP again.
002	Mode b	-	Executes the fine line position adjustment once. If this SP is not completed, do SP2111-003 first and then try this SP again.
003	Mode c	-	Executes the rough line position adjustment once. After doing this SP, make sure to execute SP2111-001 or -002. Otherwise, the line position adjustment is not perfectly done.

2112	[TM/ID Sensor Check] ID Sensor Check <b>FA</b>		
001	Execute	-	[0 or 1 / <b>0</b> / 1 /step] This SP is used to check the ID sensors at the factory. The results of this SP are displayed in SP2140 to SP2145.

2117	[Skew Adjustment]		
	Specifies a skew adjustment value for the skew motor M, C or Y. These SPs must be used when a new laser optics housing unit is installed or when SC2.585 occurs. For details, see "Laser Optics Housing Unit" in the "Main chapters: 4. Replacement and Adjustment: Laser Optics".		
	001	Pulse: M	*ENG
	002	Pulse: C	*ENG
003	Pulse: Y	*ENG	[-50 to 50 / <b>0</b> / 1 pulse/step]

2118	[Skew Adjustment]		
001	Execute: M	*ENG	Changes the current skew adjustment values to the values specified with SP2117. These SPs must be used when a new laser optics housing unit is installed or when SC2.585 occurs. For details, see "Laser Optics Housing Unit" in the "Main chapters: 4. Replacement and Adjustment: Laser Optics".
002	Execute: C	*ENG	
003	Execute: Y	*ENG	

2119	[Skew Adjustment Display]		
	Displays the current skew adjustment value for each skew motor.		
	001	M	*ENG
	002	C	*ENG
003	Y	*ENG	[-50 to 50 / - / 1 pulse/step]



2150	[Area Mag. Correction] LD Pulse Area Correction (Color, Area) <b>FA</b>		
	Adjusts the magnification for each area. The main scan (297 mm) is divided into 8 areas. Area 1 is at the front side of the machine (left side of the image) and area 8 is at the rear side of the machine (right side of the image).		
	Decreasing a value makes the image shift to the left side on the print.		
	Increasing a value makes the image shift to the right side on the print. 1 pulse = 1/16 dot		
027	Area 0: Bk	*ENG	[-255 to 255 / 0 / 1 sub-dot/step]
028	Area 1: Bk	*ENG	Adjusts the area magnification for LD 0. [-255 to 255 / 0 / 1 sub-dot/step]
029	Area 2: Bk	*ENG	
030	Area 3: Bk	*ENG	
031	Area 4: Bk	*ENG	
032	Area 5: Bk	*ENG	
033	Area 6: Bk	*ENG	
034	Area 7: Bk	*ENG	
035	Area 8: Bk	*ENG	
036	Area 9: Bk	*ENG	Not used
037	Area 10: Bk	*ENG	
038	Area 11: Bk	*ENG	
039	Area 12: Bk	*ENG	
079	Area 0: Ma	*ENG	[-255 to 255 / 0 / 1 sub-dot/step]

080	Area 1: Ma	*ENG	Adjusts the area magnification for LD 0. [-255 to 255 / 0 / 1 sub-dot/step]
081	Area 2: Ma	*ENG	
082	Area 3: Ma	*ENG	
083	Area 4: Ma	*ENG	
084	Area 5: Ma	*ENG	
085	Area 6: Ma	*ENG	
086	Area 7: Ma	*ENG	
087	Area 8: Ma	*ENG	
088	Area 9: Ma	*ENG	
089	Area 10: Ma	*ENG	
090	Area 11: Ma	*ENG	Not used
091	Area 12: Ma	*ENG	
131	Area 0: Cy	*ENG	
132	Area 1: Cy	*ENG	Adjusts the area magnification for LD 0. [-255 to 255 / 0 / 1 sub-dot/step]
133	Area 2: Cy	*ENG	
134	Area 3: Cy	*ENG	
135	Area 4: Cy	*ENG	
136	Area 5: Cy	*ENG	
137	Area 6: Cy	*ENG	
138	Area 7: Cy	*ENG	
139	Area 8: Cy	*ENG	
140	Area 9: Cy	*ENG	
141	Area 10: Cy	*ENG	
142	Area 11: Cy	*ENG	Not used
143	Area 12: Cy	*ENG	
183	Area 0: Ye	*ENG	

184	Area 1: Ye	*ENG	Adjusts the area magnification for LD 0. [-255 to 255 / 0 / 1 sub-dot/step]	
185	Area 2: Ye	*ENG		
186	Area 3: Ye	*ENG		
187	Area 4: Ye	*ENG		
188	Area 5: Ye	*ENG		
189	Area 6: Ye	*ENG		
190	Area 7: Ye	*ENG		
191	Area 8: Ye	*ENG		
192	Area 9: Ye	*ENG		Not used
193	Area 10: Ye	*ENG		
194	Area 11: Ye	*ENG		
195	Area 12: Ye	*ENG		

2152	[Area Shad. Correct. Setting] <b>FA</b>
	<p>Adjusts the area correction value for each LD power.</p> <p>The main scan is divided into 16 areas. However, the image areas are limited from area 1 to area 14.</p> <p>For BK and Magenta, area 1 is at the rear side of the machine (left side of the image) and area 14 is at the front side of the machine (right side of the image).</p> <p>For Cyan and Yellow, area 1 is at the front side of the machine (right side of the image) and area 14 is at the rear side of the machine (left side of the image).</p>

001	Area 0: Bk	*ENG	This is for the synchronizing detection board. [50 to 150 / <b>100</b> / 1 %/step]
002	Area 1: Bk	*ENG	
003	Area 2: Bk	*ENG	
004	Area 3: Bk	*ENG	
005	Area 4: Bk	*ENG	
006	Area 5: Bk	*ENG	
007	Area 6: Bk	*ENG	
008	Area 7: Bk	*ENG	
009	Area 8: Bk	*ENG	
010	Area 9: Bk	*ENG	
011	Area 10: Bk	*ENG	
012	Area 11: Bk	*ENG	
013	Area 12: Bk	*ENG	
014	Area 13: Bk	*ENG	
015	Area 14: Bk	*ENG	
016	Area 15: Bk	*ENG	This is out of the image area. [50 to 150 / <b>100</b> / 1 %/step]
033	Area 0: Ma	*ENG	This is for the synchronizing detection board. [50 to 150 / <b>100</b> / 1 %/step]

034	Area 1: Ma	*ENG	[50 to 150 / <b>100</b> / 1 %/step]
035	Area 2: Ma	*ENG	
036	Area 3: Ma	*ENG	
037	Area 4: Ma	*ENG	
038	Area 5: Ma	*ENG	
039	Area 6: Ma	*ENG	
040	Area 7: Ma	*ENG	
041	Area 8: Ma	*ENG	
042	Area 9: Ma	*ENG	
043	Area 10: Ma	*ENG	
044	Area 11: Ma	*ENG	
045	Area 12: Ma	*ENG	
046	Area 13: Ma	*ENG	
047	Area 14: Ma	*ENG	
048	Area 15: Ma	*ENG	This is out of the image area. [50 to 150 / <b>100</b> / 1 %/step]
065	Area 0: Cy	*ENG	This is for the synchronizing detection board. [50 to 150 / <b>100</b> / 1 %/step]

066	Area 1: Cy	*ENG	[50 to 150 / <b>100</b> / 1 %/step]
067	Area 2: Cy	*ENG	
068	Area 3: Cy	*ENG	
069	Area 4: Cy	*ENG	
070	Area 5: Cy	*ENG	
071	Area 6: Cy	*ENG	
072	Area 7: Cy	*ENG	
073	Area 8: Cy	*ENG	
074	Area 9: Cy	*ENG	
075	Area 10: Cy	*ENG	
076	Area 11: Cy	*ENG	
077	Area 12: Cy	*ENG	
078	Area 13: Cy	*ENG	
079	Area 14: Cy	*ENG	
080	Area 15: Cy	*ENG	This is out of the image area. [50 to 150 / <b>100</b> / 1 %/step]
097	Area 0: Ye	*ENG	This is for the synchronizing detection board. [50 to 150 / <b>100</b> / 1 %/step]

098	Area 1: Ye	*ENG	[50 to 150 / <b>100</b> / 1 %/step]
099	Area 2: Ye	*ENG	
100	Area 3: Ye	*ENG	
101	Area 4: Ye	*ENG	
102	Area 5: Ye	*ENG	
103	Area 6: Ye	*ENG	
104	Area 7: Ye	*ENG	
105	Area 8: Ye	*ENG	
106	Area 9: Ye	*ENG	
107	Area 10: Ye	*ENG	
108	Area 11: Ye	*ENG	
109	Area 12: Ye	*ENG	
110	Area 13: Ye	*ENG	
111	Area 14: Ye	*ENG	
112	Area 15: Ye	*ENG	This is out of the image area. [50 to 150 / <b>100</b> / 1 %/step]

2181	[Line Position Adj. Result]		
	<p>Displays the values for each correction.</p> <ul style="list-style-type: none"> <li>"Paper Int. Mag: Subdot" indicates the magnification correction value between two sheets of paper.</li> <li>"Mag.Cor. Subdot" indicates the magnification correction value.</li> <li>"M. Scan Erro." indicates the shift correction value in the main scan direction.</li> <li>"S. Scan Erro." Indicates the shift correction value in the sub scan direction.</li> <li>"M. Cor.: Dot" indicates the dot correction value in the main scan direction.</li> <li>"M. Cor.: Subdot" indicates the sub dot correction value in the main scan direction.</li> <li>Bk: Black, M: Magenta, C: Cyan, Y: Yellow</li> </ul>		
001	Paper Int. Mag: Subdot: Bk	*ENG	[-32768 to 32767 / - / 1 pulse/step]

002	Mag.Cor. Subdot: Bk	*ENG	[-32768 to 32767 / - / 1 pulse/step]
003	Skew: M	*ENG	[-5000 to 5000 / - / 0.001 um/step]
005	M. Scan Erro.: Left: M	*ENG	[-5000 to 5000 / - / 0.001 um/step]
006	M. Scan Erro.: Center: M	*ENG	
007	M. Scan Erro.: Right: M	*ENG	
008	S. Scan Erro.: Left: M	*ENG	
009	S. Scan Erro.: Center: M	*ENG	
010	S. Scan Erro.: Right: M	*ENG	
011	M. Cor.: Dot: M	*ENG	[-512 to 511 / - / 1 dot/step]
012	M. Cor.: Subdot: M	*ENG	[-15 to 15 / - / 1 pulse/step]
013	Paper Int. Mag: Subdot: M	*ENG	[-32768 to 32767 / - / 1 pulse/step]
014	Mag.Cor. Subdot: M	*ENG	
015	M. Left Mag.: Subdot: M	*ENG	
016	M. Right Mag.: Subdot: M	*ENG	
017	S. Cor.: 600 Line: M	*ENG	[-16384 to 16383 / - / 1 line/step]
018	S. Cor.: 600 Sub: M	*ENG	[-1 to 1 / - / 0.001 line/step]
019	S. Cor.: 1200 Line: M	*ENG	[-16384 to 16383 / - / 1 line/step]
020	S. Cor.: 1200 Sub: M	*ENG	[-1 to 1 / - / 0.001 line/step]
021	Skew: C	*ENG	[-5000 to 5000 / - / 0.001 um/step]
023	M. Scan Erro.: Left: C	*ENG	[-5000 to 5000 / - / 0.001 um/step]
024	M. Scan Erro.: Center: C	*ENG	
025	M. Scan Erro.: Right: C	*ENG	
026	S. Scan Erro.: Left: C	*ENG	
027	S. Scan Erro.: Center: C	*ENG	
028	S. Scan Erro.: Right: C	*ENG	
029	M. Cor.: Dot: C	*ENG	[-512 to 511 / - / 1 dot/step]



030	M. Cor.: Subdot: C	*ENG	[-15 to 15 / - / 1 pulse/step]
031	Paper Int. Mag: Subdot: C	*ENG	[-32768 to 32767 / - / 1 pulse/step]
032	Mag.Cor. Subdot: C	*ENG	
033	M. Left Mag.: Subdot: C	*ENG	
034	M. Right Mag.: Subdot: C	*ENG	
035	S. Cor.: 600 Line: C	*ENG	[-16384 to 16383 / - / 1 line/step]
036	S. Cor.: 600 Sub: C	*ENG	[-1 to 1 / - / 0.001 line/step]
037	S. Cor.: 1200 Line: C	*ENG	[-16384 to 16383 / - / 1 line/step]
038	S. Cor.: 1200 Sub: C	*ENG	[-1 to 1 / - / 0.001 line/step]
039	Skew: Y	*ENG	[-5000 to 5000 / - / 0.001 um/step]
041	M. Scan Erro.: Left: Y	*ENG	
042	M. Scan Erro.: Center: Y	*ENG	
043	M. Scan Erro.: Right: Y	*ENG	
044	S. Scan Erro.: Left: Y	*ENG	
045	S. Scan Erro.: Center: Y	*ENG	
046	S. Scan Erro.: Right: Y	*ENG	
047	M. Cor.: Dot: Y	*ENG	[-512 to 511 / - / 1 dot/step]
048	M. Cor.: Subdot: Y	*ENG	[-15 to 15 / - / 1 pulse/step]
049	Paper Int. Mag: Subdot: Y	*ENG	[-32768 to 32767 / - / 1 pulse/step]
050	Mag.Cor. Subdot: Y	*ENG	
051	M. Left Mag.: Subdot: Y	*ENG	
052	M. Right Mag.: Subdot: Y	*ENG	
053	S. Cor.: 600 Line: Y	*ENG	[-16384 to 16383 / - / 1 line/step]
054	S. Cor.: 600 Sub: Y	*ENG	[-1 to 1 / - / 0.001 line/step]
055	S. Cor.: 1200 Line: Y	*ENG	[-16384 to 16383 / - / 1 line/step]
056	S. Cor.: 1200 Sub: Y	*ENG	[-1 to 1 / - / 0.001 line/step]

2182	[Line Position Adj. Offset] (Color) M. Scan: Main scan, S. Scan: Sub-scan		
001	M Magnification	*ENG	Adjusts the line position manually. [-1 to 1 / 0 / 0.001%/step]
002	C Magnification	*ENG	
003	Y Magnification	*ENG	
	When line shifts are not corrected by the automatic line position adjustment, do this SP. Increasing a value reduces the image in the main scan direction. Decreasing a value enlarges the image in the main scan direction.		
004	M. Scan: High: Dot: M	*ENG	[-512 to 511 / 0 / 1 dot/step]
005	M. Scan: High: Subdot: M	*ENG	[-15 to 15 / 0 / 1 pulse/step]
006	M. Scan: Medium: Dot: M	*ENG	[-512 to 511 / 0 / 1 dot/step]
007	M. Scan: Medium: Subdot: M	*ENG	[-15 to 15 / 0 / 1 pulse/step]
008	M. Scan: Low: Dot: M	*ENG	[-512 to 511 / 0 / 1 dot/step]
009	M. Scan: Low: Subdot: M	*ENG	[-15 to 15 / 0 / 1 pulse/step]
010	M. Scan: High: Dot: C	*ENG	[-512 to 511 / 0 / 1 dot/step]
011	M. Scan: High: Subdot: C	*ENG	[-15 to 15 / 0 / 1 pulse/step]
012	M. Scan: Medium: Dot: C	*ENG	[-512 to 511 / 0 / 1 dot/step]
013	M. Scan: Medium: Subdot: C	*ENG	[-15 to 15 / 0 / 1 pulse/step]
014	M. Scan: Low: Dot: C	*ENG	[-512 to 511 / 0 / 1 dot/step]
015	M. Scan: Low: Subdot: C	*ENG	[-15 to 15 / 0 / 1 pulse/step]
016	M. Scan: High: Dot: Y	*ENG	[-512 to 511 / 0 / 1 dot/step]
017	M. Scan: High: Subdot: Y	*ENG	[-15 to 15 / 0 / 1 pulse/step]
018	M. Scan: Medium: Dot: Y	*ENG	[-512 to 511 / 0 / 1 dot/step]
019	M. Scan: Medium: Subdot: Y	*ENG	[-15 to 15 / 0 / 1 pulse/step]
020	M. Scan: Low: Dot: Y	*ENG	[-512 to 511 / 0 / 1 dot/step]
021	M. Scan: Low: Subdot: Y	*ENG	[-15 to 15 / 0 / 1 pulse/step]

022	S. Scan: High: Line: M	*ENG	[-16384 to 16383 / 0 / 1 line/step]
023	S. Scan: High: Subline: M	*ENG	[-1 to 1 / 0 / 0.001 /line]
024	S. Scan: Medium: Line: M	*ENG	[-16384 to 16383 / 0 / 1 line/step]
025	S. Scan: Medium: Subline: M	*ENG	[-1 to 1 / 0 / 0.001 /line]
026	S. Scan: Low: Line: M	*ENG	[-16384 to 16383 / 0 / 1 line/step]
027	S. Scan: Low: Subline: M	*ENG	Not used
028	S. Scan: High: Line: C	*ENG	[-16384 to 16383 / 0 / 1 line/step]
029	S. Scan: High: Subline: C	*ENG	[-1 to 1 / 0 / 0.001 /line]
030	S. Scan: Medium: Line: C	*ENG	[-16384 to 16383 / 0 / 1 line/step]
031	S. Scan: Medium: Subline: C	*ENG	[-1 to 1 / 0 / 0.001 /line]
032	S. Scan: Low: Line: C	*ENG	[-16384 to 16383 / 0 / 1 line/step]
033	S. Scan: Low: Subline: C	*ENG	Not used
034	S. Scan: High: Line: Y	*ENG	[-16384 to 16383 / 0 / 1 line/step]
035	S. Scan: High: Subline: Y	*ENG	[-1 to 1 / 0 / 0.001 /line]
036	S. Scan: Medium: Line: Y	*ENG	[-16384 to 16383 / 0 / 1 line/step]
037	S. Scan: Medium: Subline: Y	*ENG	[-1 to 1 / 0 / 0.001 /line]
038	S. Scan: Low: Line: Y	*ENG	[-16384 to 16383 / 0 / 1 line/step]
039	S. Scan: Low: Subline: Y	*ENG	Not used

2185	[Main Scan Length Target Display]
	<p>Displays/adjusts the target value for the main scan length correction of the line position adjustment.</p> <p>After replacing the laser optics housing unit, input the standard value for Bk provided with the new unit. For details, see "Laser Optics Housing Unit" in the "Main chapters: 4. Replacement and Adjustment: Laser Optics". It is not necessary to input the values for the other colors; these are automatically adjusted after doing the line position adjustment.</p>

001	Bk	*ENG	[0 to 266667 / <b>249449</b> / 1 sub-dot/step]
002	M	*ENG	
003	C	*ENG	
004	Y	*ENG	

2193	[MUSIC Condition Set] Line Position Adjustment: Condition Setting		
001	Auto Execution	*ENG	[0 or 1 / 1 / 1] 0: OFF, 1: <b>ON</b>
	Enables/disables the automatic line position adjustment		
002	Page: Job End: BW+FC	*ENG	[0 to 999 / <b>500</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for BW and color printing mode after job end.		
003	Page: Job End: FC	*ENG	[0 to 999 / <b>200</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for color printing mode after job end.		
004	Page: Interrupt: BW+FC	*ENG	[0 to 999 / <b>200</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for BW and color printing mode during job.		
005	Page: Interrupt: FC	*ENG	[0 to 999 / <b>200</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for color printing mode during jobs.		
006	Page: Stand-By: BW	*ENG	[0 to 999 / <b>100</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for BW printing mode in stand-by mode. The line position adjustment is done when the number of outputs in BW printing mode reaches the value specified with this SP and the condition of SP2-193-008 or SP2-193-009 is satisfied.		
007	Page: Stand-By: FC	*ENG	[0 to 999 / <b>100</b> / 1 page/step]
	Adjusts the threshold of the line position adjustment for FC printing mode in stand-by mode. The line position adjustment is done when the number of outputs in color printing mode reaches the value specified with this SP and the condition of SP2-193-008 or SP2-193-009 is satisfied.		

008	Temp.	*ENG	[0 to 100 / 5 / 1deg/step]
	Adjust the temperature change threshold for the line position adjustment (Mode b: adjustment once). The timing for line position adjustment depends on the combinations of several conditions.		
009	Time	*ENG	[1 to 1440 / 300 / 1 minute/step]
	Adjust the time threshold for the line position adjustment (Mode b: adjustment once). The timing for line position adjustment depends on the combinations of several conditions.		
010	Magnification	*ENG	[0 to 10 / 0.1 / 0.01%/step]
	Adjusts the magnification threshold for line position adjustment. If the length of the main scan is changed by this amount since the previous MUSIC, then MSUIC is done again.		
011	Temp. 2	*ENG	[0 to 100 / 10 / 1deg/step]
	Adjust the temperature change threshold for the line position adjustment (Mode a: adjustment twice). The timing for line position adjustment depends on the combinations of several conditions.		
012	Time 2	*ENG	[1 to 9999 / 600 / 1 minute/step]
	Adjust the time threshold for the line position adjustment (Mode a: adjustment twice). The timing for line position adjustment depends on the combinations of several conditions.		
013	Page: Power ON:BW+FC	*ENG	[0 to 999 / 200 / 1 page/step]
	Adjusts the threshold of the line position adjustment for BW and FC printing mode at power-on. The line position adjustment is done when the number of outputs in BW and color printing mode reaches the value specified with this SP and the condition of SP2-193-008 or SP2-193-009 is satisfied.		

2194	[MUSIC Execution Result] Line Position Adjustment: Execution Result		
001	Year	*ENG	[0 to 99 / - / 1 year/step]
	Displays the year of the last MUSIC execution.		
002	Month	*ENG	[1 to 12 / - / 1 month/step]
	Displays the month of the last MUSIC execution.		
003	Day	*ENG	[1 to 31 / - / 1 day/step]
	Displays the date of the last MUSIC execution.		

004	Hour	*ENG	[0 to 23 / - / 1 hour/step]
	Displays the time (hour) of the last MUSIC execution.		
005	Minute	*ENG	[0 to 59 / - / 1 minute/step]
	Displays the time (minute) of the last MUSIC execution.		
006	Temperature	*ENG	[0 to 100 / - / 1 deg/step]
	Displays the temperature of the last MUSIC execution.		
007	Execution Result	*ENG	[0 or 1 / - / 1 /step] 0: Completed successfully, 1: Failed
008	Number of Execution	*ENG	[0 to 999999 / - / 1 times/step]
009	Number of Failure	*ENG	[0 to 999999 / - / 1 times/step]
010	Error Result: M	*ENG	[0 to 9 / - / 1 /step]
011	Error Result: C	*ENG	0: Not done 1: Completed successfully
012	Error Result: Y	*ENG	2: Cannot detect patterns 3: Fewer lines on the pattern than the target 4: Not used 5: Out of the adjustment range 6 to 9: Not used

2198	[Music A/D Interval]		
	ADC Trigger Counter		
001	ADC Trigger Counter	*ENG	[7.5 to 20 / 10 / 0.1 μs/step]

2220	[Skew Origin Set]		
	Executes the skew motor initialization in the laser optics unit.		
001	M: Skew Motor	*ENG	-
002	C: Skew Motor	*ENG	-
003	Y: Skew Motor	*ENG	-

2221	[LD Power] LD Power Control		
	<p>Adjusts the fixed LD power for each line speed and color.          These SPs are activated only when SP3-041-002 is set to "0".          Plain: High speed, Thick 1: Middle speed, Thick 2&amp;Fine: Low speed</p>		
001	Plain: Bk	*ENG	<p>[0 to 200 / <b>100</b> / 1%/step]          Increasing this value makes the image density darker.</p>
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2&FINE: Bk	*ENG	
010	Thick 2&FINE: M	*ENG	
011	Thick 2&FINE: C	*ENG	
012	Thick 2&FINE: Y	*ENG	
2229	[Development DC Vias] Development DC Bias Adjustment		
	<p>Adjusts the development bias.          Development bias is automatically adjusted during process control; therefore, adjusting these settings has no effect while Process Control (SP3-041-001 Default: ON) is activated.          After deactivating Process Control with SP3-041-001, the values in these SP modes are used for printing.          Plain: High speed, Thick 1: Middle speed, Thick 2&amp;Fine: Low speed</p>		

001	Plain: Bk	*ENG	[0 to 800 / <b>550</b> / 10 -V/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2&FINE:Bk	*ENG	
010	Thick 2&FINE:M	*ENG	
011	Thick 2&FINE:C	*ENG	
012	Thick 2&FINE:Y	*ENG	

2241	[Temperature/Humidity: Display]		
	Displays the environment temperature and humidity.		
001	Temperature	-	[-50 to 450 / - / 0.1 deg/step]
002	Relative Humidity	-	[0 to 1000 / - / 0.1 %RH/step]
003	Absolute Humidity	-	[0 to 100 / - / 0.01 g/m <sup>3</sup> /step]
004	AIT Temperature	-	[0 to 70 / - / 0.1 deg/step]
005	Correction Coefficient A	-	[0 to 70 / 1 / 0.1/step]
006	Correction Coefficient B	-	[-70 to 70 / <b>0</b> / 0.1/step]

2242	[TS Operation Env. Log]		
	Displays TS Operation Env. logs.		
001	TS <= 40	-	[0 to 99999999 / - / 1/mm]
002	40 < TS <= 45	-	[0 to 99999999 / - / 1/mm]
003	45 < TS	-	[0 to 99999999 / - / 1/mm]



004	Log Clear	-	[0 to 1 / 0 / 1/step] 1: Clear
-----	-----------	---	-----------------------------------

2302	[Environmental Correction: Transfer] Environmental Correction: Image Transfer Belt Unit		
001	Current Environmental Display	-	Displays the current environment condition.
002	Forced Setting	*ENG	Sets the environment condition manually. [0 to 6 / 0 / 1 /step] 0: Automatic environment control 1: LL (Low temperature/ Low humidity) 2: ML (Middle temperature/ Low humidity) 3: MM (Middle temperature/ Middle humidity) 4: MH (Middle temperature/ High humidity) 5: HH (High temperature/ High humidity)
003	Absolute Humidity: Threshold 1	*ENG	Adjusts the threshold value between LL and ML. [0 to 100 / 4 / 0.01 g/m <sup>3</sup> /step]
004	Absolute Humidity: Threshold 2	*ENG	Adjusts the threshold value between ML and MM. [0 to 100 / 8 / 0.01 g/m <sup>3</sup> /step]
005	Absolute Humidity: Threshold 3	*ENG	Adjusts the threshold value between MM and MH. [0 to 100 / 16 / 0.01 g/m <sup>3</sup> /step]
006	Absolute Humidity: Threshold 4	*ENG	Adjusts the threshold value between MH and HH. [0 to 100 / 24 / 0.01 g/m <sup>3</sup> /step]
007	Temp Threshold	*ENG	[-5 to 30 / 5 / 1 deg/step]

2308	[Paper Size Correction]		
	Adjusts the threshold value for the paper size correction.		
001	Threshold 1	*ENG	[0 to 350 / 297 / 1 mm/step] Threshold 1 ≤ paper: Paper is detected as "S1" size.

002	Threshold 2	*ENG	[0 to 350 / <b>257</b> / 1 mm/step] Threshold 2 ≤ paper ≤ Threshold 1: Paper is detected as "S2" size.
003	Threshold 3	*ENG	[0 to 350 / <b>210</b> / 1 mm/step] Threshold 3 ≤ paper ≤ Threshold 2: Paper is detected as "S3" size.
004	Threshold 4	*ENG	[0 to 350 / <b>148</b> / 1 mm/step] Threshold 4 ≤ paper ≤ Threshold 3: Paper is detected as "S4" size. Paper ≤ Threshold 4: Paper is detected as "S5" size.

2311	[Non Image Area: Bias]		
001	Image Transfer	*ENG	Adjusts the bias of the image transfer belt between images. This value is added to the value of the image transfer belt bias. [10 to 250 / <b>100</b> / 5 %/step]
002	Paper Transfer	*ENG	Adjusts the bias of the paper transfer roller between images. [0 to 2100 / <b>500</b> / 100 V/step]

2326	[Transfer Roller CL: Bias] Transfer Roller Cleaning: Bias Adjustment		
001	Positive	*ENG	[0 to 2100 / <b>500</b> / 100 V/step]
	Adjusts the positive voltage of the paper transfer roller for cleaning the paper transfer roller.		
002	Negative	*ENG	[10 to 400 / <b>100</b> / 10 %/step]
	Adjusts the negative current of the paper transfer roller for cleaning the paper transfer roller.		
003	Positive	*ENG	[0 to 2100 / <b>2000</b> / 100 V/step]
	Adjusts the negative current limit of the paper transfer roller for cleaning the paper transfer roller.		

004	Negative	*ENG	[10 to 400 / <b>100</b> / 10 %/step]
-----	----------	------	--------------------------------------

2351	[Common: BW: Bias] Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	ITB unit: Plain	*ENG	[0 to 80 / <b>C3c: 33, C3d: 41</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt in B/W mode for plain paper.		
002	ITB unit: Thick 1	*ENG	[0 to 80 / <b>25</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt in B/W mode for thick 1 paper.		
003	ITB unit: Thick 2 & FINE	*ENG	[0 to 80 / <b>12</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt in B/W mode for thick 2 paper or FINE mode.		

2357	[Common: FC: Bias] Image Transfer Belt: Full Color: Bias Adjustment Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	ITB unit: Plain: Bk	*ENG	[0 to 80 / <b>C3c: 30, C3d: 37</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Black in full color mode for plain paper.		
002	ITB unit: Plain: M	*ENG	[0 to 80 / <b>C3c: 33, C3d: 41</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Magenta in full color mode for plain paper.		
003	ITB unit: Plain: C	*ENG	[0 to 80 / <b>C3c: 30, C3d: 37</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Cyan in full color mode for plain paper.		
004	ITB unit: Plain: Y	*ENG	[0 to 80 / <b>C3c: 38, C3d: 47</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Yellow in full color mode for plain paper.		
005	ITB unit: Thick 1: Bk	*ENG	[0 to 80 / <b>22</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Black in full color mode for thick 1 paper.		
006	ITB unit: Thick 1: M	*ENG	[0 to 80 / <b>25</b> / 1 $\mu$ A]
	Adjusts the current for the image transfer belt for Magenta in full color mode for thick 1 paper.		

007	ITB unit: Thick 1: C	*ENG	[0 to 80 / <b>22</b> / 1 μA]
	Adjusts the current for the image transfer belt for Cyan in full color mode for thick 1 paper.		
008	ITB unit: Thick 1: Y	*ENG	[0 to 80 / <b>28</b> / 1 μA]
	Adjusts the current for the image transfer belt for Yellow in full color mode for thick 1 paper.		
009	ITB unit: Thick 2 & FINE: Bk	*ENG	[0 to 80 / <b>11</b> / 1 μA]
	Adjusts the current for the image transfer belt for Black in full color mode for Thick 2 and fine.		
010	ITB unit: Thick 2 & FINE: M	*ENG	[0 to 80 / <b>12</b> / 1 μA]
	Adjusts the current for the image transfer belt for Magenta in full color mode for Thick 2 and fine.		
011	ITB unit: Thick 2 & FINE: C	*ENG	[0 to 80 / <b>11</b> / 1 μA]
	Adjusts the current for the image transfer belt for Cyan in full color mode for Thick 2 and fine.		
012	ITB unit: Thick 2 & FINE: Y	*ENG	[0 to 80 / <b>14</b> / 1 μA]
	Adjusts the current for the image transfer belt for Yellow in full color mode for Thick 2 and fine.		

2360	[Common: BW Environment Correction]		
001	ITB unit: Plain	*ENG	[1 to 60 / 1 / 1 /step]
002	ITB unit: Thick 1	*ENG	
003	ITB unit: Thick 2	*ENG	
004	ITB unit: Plain: Bk	*ENG	[1 to 60 / <b>13</b> / 1 /step]
005	ITB unit: Plain: M	*ENG	[1 to 60 / 2 / 1 /step]
006	ITB unit: Plain: C	*ENG	
007	ITB unit: Plain: Y	*ENG	
008	ITB unit: Thick 1: Bk	*ENG	[1 to 60 / <b>31</b> / 1 /step]

009	ITB unit: Thick 1: M	*ENG	[1 to 60 / <b>2</b> / 1 /step]
010	ITB unit: Thick 1: C	*ENG	
011	ITB unit: Thick 1: Y	*ENG	
012	ITB unit: Thick 2: Bk	*ENG	[1 to 60 / <b>31</b> / 1 /step]
013	ITB unit: Thick 2: M	*ENG	[1 to 60 / 1 / 1 /step]
014	ITB unit: Thick 2: C	*ENG	[1 to 60 / <b>2</b> / 1 /step]
015	ITB unit: Thick 2: Y	*ENG	[1 to 60 / <b>2</b> / 1 /step]

2401	[Plain: Bias]		
	Adjusts the DC voltage of the discharge plate for plain paper. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
002	Separation DC: Plain: 2nd Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
003	Separation DC: 1200: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
004	Separation DC: 1200: 2nd Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]


2403	[Plain: Bias: BW]		
	Adjusts the current for the paper transfer roller for plain paper in black-and-white mode. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 30, C3d: 38</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>7</b> / 1 - $\mu$ A /step]
004	Paper Transfer: 1200: 2nd Side	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]

2407	[Plain: Bias: FC]		
	Adjusts the current for the paper transfer roller for plain paper in full color mode. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		

001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 36, C3d: 44</b> / 1 - $\mu$ A / step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 250 / <b>C3c: 45, C3d: 55</b> / 1 - $\mu$ A / step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>10</b> / 1 - $\mu$ A /step]
004	Paper Transfer: 1200: 2nd Side	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]

2411	[Plain: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2403 and SP2407 are multiplied by these SP values. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain : 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: Plain: 2nd Side: S1	*ENG	
003	Paper Transfer: 1200: 1st Side: S1	*ENG	
004	Paper Transfer: 1200: 2nd Side: S1	*ENG	
005	Paper Transfer: Plain: 1st Side: S2	*ENG	[100 to 600 / <b>105</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
006	Paper Transfer: Plain: 2nd Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
007	Paper Transfer: 1200: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
008	Paper Transfer: 1200: 2nd Side: S2	*ENG	[100 to 600 / <b>150</b> / 5%/step]
009	Paper Transfer: Plain: 1st Side: S3	*ENG	[100 to 600 / <b>110</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)

010	Paper Transfer: Plain: 2nd Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step]
011	Paper Transfer: 1200: 1st Side: S3	*ENG	275 mm > S3 size > 210 mm (Paper width)
012	Paper Transfer: 1200: 2nd Side: S3	*ENG	[100 to 600 / <b>300</b> / 5%/step]
013	Paper Transfer: Plain: 1st Side: S4	*ENG	[100 to 600 / <b>115</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer: Plain: 2nd Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
015	Paper Transfer: 1200: 1st Side: S4	*ENG	[100 to 600 / <b>240</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
016	Paper Transfer: 1200: 2nd Side: S4	*ENG	[100 to 600 / <b>340</b> / 5%/step]
017	Paper Transfer: Plain: 1st Side: S5	*ENG	[100 to 600 / <b>120</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer: Plain: 2nd Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)
019	Paper Transfer: 1200: 1st Side: S5	*ENG	[100 to 600 / <b>300</b> / 5%/step] 148 mm > S5 size (Paper width)
020	Paper Transfer: 1200: 2nd Side: S5	*ENG	[100 to 600 / <b>400</b> / 5%/step]

2421	[Plain: Leading Edge Correction] Plain Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2403 and SP2407 are multiplied by these SP values.		
	<div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2422.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]

003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
004	Paper Transfer: 1200: 2nd side	*ENG	
2421	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2401 is multiplied by these SPs values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2422.</li> </ul>		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side	*ENG	

2422	[Plain: Switch Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side	*ENG	

2423	[Plain: Trailing Edge Correction] Plain Paper: Trailing Edge Correction		
	Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2403 and SP2407 are multiplied by these SP values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2424.</li> </ul>		



001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side	*ENG	

2424	[Plain: Switch Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side	*ENG	

2451	[Thin: Bias]		
	Adjusts the DC voltage of the discharge plate for thin paper. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		



001	Separation DC: Plain: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/ step]
002	Separation DC: Plain: 2nd Side		
003	Separation DC: 1200: 1st Side	*ENG	
004	Separation DC: 1200: 2nd Side		

2453	[Thin: Bias: BW]		
	Adjusts the current for the paper transfer roller for thin paper in black-and-white mode. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c:30, C3d:38</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>11</b> / 1 - $\mu$ A /step]
004	Paper Transfer: 1200: 2nd Side		

2457	[Thin: Bias: FC]		
	Adjusts the current for the paper transfer roller for thin paper in full color mode. Plain: High speed, Thick 1: Middle speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c:40, C3d:50</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]
004	Paper Transfer: 1200: 2nd Side		

2461	[Thin: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2453 and SP2457 are multiplied by these SP values. Plain: High speed		
001	Paper Transfer: Plain: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: Plain: 2nd Side: S1		

005	Paper Transfer: Plain: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step]
006	Paper Transfer: Plain: 2nd Side: S2		297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: Plain: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step]
010	Paper Transfer: Plain: 2nd Side: S3		297 mm > S2 size > 275 mm (Paper width)
013	Paper Transfer: Plain: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step]
014	Paper Transfer: Plain: 2nd Side: S4		297 mm > S2 size > 275 mm (Paper width)
017	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step]
018	Paper Transfer: 2nd Side: S5		

2471	[Thin: Leading Edge Correction] Thin Paper: Leading Edge Correction			
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2453 and SP2457 are multiplied by these SP values. Plain: High speed, 1200: Low speed			
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2472.</li> </ul>			
	001	Paper Transfer: Plain: 1st Side	*ENG	
002	Paper Transfer: Plain: 2nd Side			
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]	
004	Paper Transfer: 1200: 2nd Side			
2471	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2451 is multiplied by these SP values.			
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2472.</li> </ul>			
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]	
006	Separation DC: Plain: 2nd Side			
007	Separation DC: 1200: 1st Side	*ENG		
008	Separation DC: 1200: 2nd Side			

2472	[Thin: Switch Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed,		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd Side		
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side		
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side		

2473	[Thin: Trailing Edge Correction] Thin Paper: Trailing Edge Correction		
	Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2453 and SP2457 are multiplied by these SP values. Plain: High speed, 1200: Low speed <b>Note</b> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2474.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
004	Paper Transfer: 1200: 2nd Side		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
006	Separation DC: Plain: 2nd Side		
007	Separation DC: 1200: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
008	Separation DC: 1200: 2nd Side		

2474	[Thin: Switch Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side		
003	Paper Transfer: 1200: 1st Side	*ENG	
004	Paper Transfer: 1200: 2nd Side		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 50 / 0 / 1 mm/step]
006	Separation DC: Plain: 2nd Side		
007	Separation DC: 1200: 1st Side	*ENG	
008	Separation DC: 1200: 2nd Side		

2480	[Thin: Environment Correction]		
	Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / 26 / 1 /step]
002	Separation DC: Plain: 2nd Side		
003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
004	Paper Transfer: Plain: BW: 2nd Side		
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]
006	Paper Transfer: Plain: FC: 2nd Side		
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / 26 / 1 /step]
008	Separation DC: 1200: 2nd Side		
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
010	Paper Transfer: 1200: BW: 2nd Side		

011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]
012	Paper Transfer: 1200: FC: 2nd Side		

2481	[Glossy: Bias]		
001	Separation DC: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
	Adjusts the DC voltage of the discharge plate for glossy paper.		

2482	[Glossy: Bias: BW]		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>12</b> / 1 -µA /step]
	Adjusts the current for the paper transfer roller for glossy paper in black-and-white mode.		

2483	[Glossy: Bias: FC]		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 -µA /step]
	Adjusts the current for the paper transfer roller for glossy paper in full color mode.		

2484	[Glossy: Paper Size Correction]		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
005	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step]
009	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step]
013	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step]
017	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step]

2485	[Plain: Leading Edge Correction]		
001	Paper Transfer: 1st Side	*ENG	[10 to 400 / <b>100</b> / 5%/step]
005	Separation DC: 1st Side	*ENG	[10 to 400 / <b>100</b> / 5%/step]

2486	[Plain: Switch Timing: Lead. Edge]		
------	------------------------------------	--	--

001	Paper Transfer: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
005	Separation DC: 1st Side	*ENG	

2487	[Plain: Trailing Edge Correction]		
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5 %/step]
005	Separation DC: 1st Side	*ENG	

2488	[Plain: Switch Trail. Edge]		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
005	Separation DC: 1st Side	*ENG	

2489	[Glossy: Environment Correction]		
001	Separation DC: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
003	Paper Transfer: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
005	Paper Transfer: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]

2501	[Thick 1: Bias]		
	Adjusts the DC voltage of the discharge plate for thick 1 paper. Plain: High speed, 1200: Low speed		
	001	Separation DC: Plain: 1st Side	*ENG
	002	Separation DC: Plain: 2nd Side	*ENG
	003	Separation DC: 1200: 1st Side	*ENG
			[0 to 4000 / <b>3500</b> / 10 -V/step]

2502	[Thick 1: Bias: BW]		
	Adjusts the current for the paper transfer roller for thick 1 paper in black-and-white mode. Plain: High speed, 1200: Low speed		
	001	Paper Transfer: Plain: 1st Side	*ENG
	002	Paper Transfer: Plain: 2nd Side	*ENG
			[0 to 250 / <b>24</b> / 1 - $\mu$ A /step]


003	Separation DC: 1200: 1st Side	*ENG	[0 to 250 / 12 / 1 -µA /step]
-----	-------------------------------	------	-------------------------------

2507	[Thick 1: Bias: FC]		
	Adjusts the current for the paper transfer roller for thick 1 paper in full color mode. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / 30 / 1 -µA /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Separation DC: 1200: 1st Side	*ENG	[0 to 250 / 15 / 1 -µA /step]

2511	[Thick 1: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2502 and SP2507 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side: S1	*ENG	[100 to 600 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
003	Paper Transfer: 1200: 1st Side: S1	*ENG	[100 to 600 / 100 / 5%/step] S1 size > 297 mm (Paper width)
005	Paper Transfer: Plain: 1st Side: S2	*ENG	[100 to 600 / 105 / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
006	Paper Transfer: Plain: 2nd Side: S2	*ENG	[100 to 600 / 130 / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
007	Paper Transfer: 1200: 1st Side: S2	*ENG	[100 to 600 / 120 / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: Plain: 1st Side: S3	*ENG	[100 to 600 / 110 / 5%/step] 275 mm > S3 size > 210 mm (Paper width)



010	Paper Transfer: Plain: 2nd Side: S3	*ENG	[100 to 600 / <b>160</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
011	Paper Transfer: 1200: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
013	Paper Transfer: Plain 1: 1st Side: S4	*ENG	[100 to 600 / <b>115</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer: Plain: 2nd Side: S4	*ENG	[100 to 600 / <b>190</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
015	Paper Transfer: 1200: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
017	Paper Transfer: Plain 1: 1st Side: S5	*ENG	[100 to 600 / <b>120</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer: Plain: 2nd Side: S5	*ENG	[100 to 600 / <b>220</b> / 5%/step] 148 mm > S5 size (Paper width)
019	Paper Transfer: 1200: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)

2521	[Thick 1: Leading Edge Correction] Thick 1 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2502 and SP2507 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div>		
	<ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2522.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]

005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]

2522	[Thick 1: Switch Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain 1: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain 1: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
006	Separation DC: Plain 1: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2523	[Thick 1: Trail. Edge Correction] Thick 1 Paper: Trailing Edge Correction		
	Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2502 and SP2507 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div> <ul style="list-style-type: none"> <li>• The paper trailing edge area can be adjusted with SP2524.</li> </ul>			
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2524	[Thick 1: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 1 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2530	[Thick 1: Environment Correction]		
	Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / 22 / 1 /step]
002	Separation DC: Plain: 2nd Side	*ENG	
003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
004	Paper Transfer: Plain: BW:2nd Side	*ENG	
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]
006	Paper Transfer: Plain: FC:2nd Side	*ENG	[1 to 60 / 11 / 1 /step]
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / 22 / 1 /step]
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / 11 / 1 /step]
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / 1 / 1 /step]

2551	[Thick 2: Bias]		
	Adjusts the DC voltage of the discharge plate for thick 2 paper.		
001	Separation DC: 1st Side	*ENG	[0 to 4000 / 3500 / 10 -V/step]
002	Separation DC: 2nd Side	*ENG	

2553	[Thick 2: Bias: BW]		
	Adjusts the current for the paper transfer roller for thick 2 paper in black-and-white mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>7</b> / 1 –µA /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / <b>12</b> / 1 –µA /step]

2558	[Thick 2: Bias: FC]		
	Adjusts the current for the paper transfer roller for thick 2 paper in full color mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>16</b> / 1 –µA /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / <b>15</b> / 1 –µA /step]

2561	[Thick 2: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2553 and SP2558 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
003	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>105</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
004	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>160</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
005	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>110</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
006	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>260</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
007	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>120</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
008	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>430</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)

009	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>140</b> / 5%/step] 148 mm > S5 size (Paper width)
010	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>600</b> / 5%/step] 148 mm > S5 size (Paper width)

2571	[Thick 2: Leading Edge Correction] Thick 2 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2553 and SP2558 are multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2572.</li> </ul>		
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side	*ENG	
2571	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2551 is multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2572.</li> </ul>		
003	Separation DC: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
004	Separation DC: 2nd Side	*ENG	

2572	[Thick 2: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2mm/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2573	[Thick 2: Trail. Edge Correction] Thick 2 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2553 and SP2558 are multiplied by these SP values.		
<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div>			
<ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2574.</li> </ul>			
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
004	Separation DC: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]

2574	[Thick 2: Trail. Edge Correction]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2580	[Thick 2 Environment Correction]		
001	Separation DC: 1st Side	*ENG	[1 to 60 / 22 / 1 /step]
002	Separation DC: 2nd Side	*ENG	
003	Paper Transfer: BW: 1st Side	*ENG	[0 to 60 / 11 / 1 /step]
004	Paper Transfer: BW: 2nd Side	*ENG	
005	Paper Transfer: FC: 1st Side	*ENG	[1 to 60 / 53 / 1 /step]
006	Paper Transfer: FC: 2nd Side	*ENG	[1 to 60 / 11 / 1 /step]


2601	[OHP: Bias]		
	Adjusts the DC voltage of the discharge plate for OHP.		

001	Separation DC	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
-----	---------------	------	--

2603	[OHP: Bias: BW]		
	Adjusts the current for the paper transfer roller for OHP in black-and-white mode.		
001	Paper Transfer	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]

2608	[OHP: Bias: FC]		
	Adjusts the current for the paper transfer roller for OHP in full color mode.		
001	Paper Transfer	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2611	[OHP: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2603 and SP2608 are multiplied by these SP values.		
001	Paper Transfer: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: S2	*ENG	[100 to 600 / <b>140</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
003	Paper Transfer: S3	*ENG	[100 to 600 / <b>200</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
004	Paper Transfer: S4	*ENG	[100 to 600 / <b>260</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
005	Paper Transfer: S5	*ENG	[100 to 600 / <b>330</b> / 5%/step] 148 mm > S5 size (Paper width)

2621	[OHP: Leading Edge Correction]		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2603 and SP2608 are multiplied by these SP values.		
<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2622.</li> </ul>			
001	Paper Transfer	*ENG	[0 to 400 / <b>100</b> / 5%/step]

2621	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2601 is multiplied by these SP values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2622.</li> </ul>		
002	Separation DC	*ENG	[0 to 400 / <b>100</b> / 5%/step]

2622	[OHP: Switch Timing: Leading Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.		
001	Paper Transfer	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Separation DC	*ENG	

2623	[OHP: Trailing Edge Correction]		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2603 and SP2608 are multiplied by these SP values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2624.</li> </ul>		
001	Paper Transfer	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Separation DC	*ENG	

2624	[OHP: Trailing Edge Correction]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area.		
001	Paper Transfer	*ENG	[0 to 50 / <b>0</b> / 1 mm/step]
002	Separation DC	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]

2630	[OHP: Environment Correction]		
001	Separation DC	*ENG	[1 to 60 / <b>22</b> / 1 /step]
002	Paper Transfer: BW	*ENG	[1 to 60 / <b>11</b> / 1 /step]
003	Paper Transfer: FC	*ENG	[1 to 60 / <b>1</b> / 1 /step]



2650	[Thick3: Bias]		
	Adjusts the DC voltage of the discharge plate for thick paper 3.		
001	Separation DC: 1st Side	*ENG	[0 to 3500 / <b>0</b> / 10 -V/step]
002	Separation DC: 2nd Side	*ENG	

2651	[Thick3: Bias: BW]		
	Adjusts the current for the paper transfer roller for thick paper 3 in black-and-white mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>10</b> / 1 - $\mu$ A /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]


2652	[Thick3: Bias: FC]		
	Adjusts the current for the paper transfer roller for thick paper 3 in full color mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>11</b> / 1 - $\mu$ A /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2653	[Thick3: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2651 and SP2652 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>100</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
003	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>100</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
004	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)

005	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>100</b> / 5%/step] 148 mm > S5 size (Paper width)
006	Paper Transfer: 2nd Side: S1	*ENG	[100 to 600 / <b>260</b> / 5%/step] S1 size > 297 mm (Paper width)
007	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>100</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
008	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>430</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
009	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>100</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
010	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>600</b> / 5%/step] 148 mm > S5 size (Paper width)

2654	[Thick 3: Leading Edge Correction] Thick 3 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2651 and SP2652 are multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2655.</li> </ul>		
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Separation DC: 1st Side	*ENG	
2654	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2650 is multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2655.</li> </ul>		
003	Paper Transfer: 2nd Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
004	Separation DC: 2nd Side	*ENG	

2655	[Thick 3: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Separation DC: 1st Side	*ENG	
003	Paper Transfer: 2nd Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2656	[Thick 3: Trail. Edge Correction] Thick 3 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2651 and SP2652 are multiplied by these SP values.		
<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;">  <b>Note</b> </div> <ul style="list-style-type: none"> <li>• The paper trailing edge area can be adjusted with SP2657.</li> </ul>			
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2657	[Thick 3: Trail. Edge Correction]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2660	[Thick 3: Environment Correction] Thick 3 Paper: MM Environment Coefficient Adjustment		
	Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2651 and SP2652 are multiplied by these SP values.		

001	Separation DC: 1st Side	*ENG	[1 to 60 / <b>22</b> / 1 /step]
002	Separation DC: 2nd Side	*ENG	
2660	Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2650 is multiplied by these SP values.		
003	Paper Transfer: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
004	Paper Transfer: BW: 2nd Side	*ENG	
005	Paper Transfer: FC: 1st Side	*ENG	[1 to 60 / <b>55</b> / 1 /step]
006	Paper Transfer: FC: 2nd Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]

2670	[Thick4: Bias]		
	Adjusts the DC voltage of the discharge plate for thick paper 4.		
001	Separation DC: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]
002	Separation DC: 2nd Side	*ENG	

2671	[Thick4: Bias: BW]		
	Adjusts the current for the paper transfer roller for thick paper 4 in black-and-white mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>10</b> / 1 - $\mu$ A /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / <b>12</b> / 1 - $\mu$ A /step]

2672	[Thick4: Bias: FC]		
	Adjusts the current for the paper transfer roller for thick paper 4 in full color mode.		
001	Paper Transfer: 1st Side	*ENG	[0 to 250 / <b>11</b> / 1 - $\mu$ A /step]
002	Paper Transfer: 2nd Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2673	[Thick4: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2671 and SP2672 are multiplied by these SP values.		

001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] S1 size > 297 mm (Paper width)
002	Paper Transfer: 2nd Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
003	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>100</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
004	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
005	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>100</b> / 5%/step] 148 mm > S5 size (Paper width)
006	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>260</b> / 5%/step] S1 size > 297 mm (Paper width)
007	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>100</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
008	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>430</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
009	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>100</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
010	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>600</b> / 5%/step] 148 mm > S5 size (Paper width)

2674	[Thick 4: Leading Edge Correction] Thick 4 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2671 and SP2672 are multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2675.</li> </ul>		
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Separation DC: 1st Side	*ENG	

2674	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2670 is multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2655.</li> </ul>		
003	Paper Transfer: 2nd Side	*ENG	[0 to 400 / 100 / 5%/step]
004	Separation DC: 2nd Side	*ENG	

2675	[Thick 4: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area.		
001	Paper Transfer: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Separation DC: 1st Side	*ENG	
003	Paper Transfer: 2nd Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2676	[Thick 4: Trail. Edge Correction] Thick 4 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2671 and SP2672 are multiplied by these SP values.		
<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2677.</li> </ul>			
001	Paper Transfer: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2677	[Thick 4: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area.		

001	Paper Transfer: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: 2nd Side	*ENG	
003	Separation DC: 1st Side	*ENG	
004	Separation DC: 2nd Side	*ENG	

2680	[Thick 4: Environment Correction] Thick 4 Paper: MM Environment Coefficient Adjustment		
	Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2671 and SP2672 are multiplied by these SP values.		
001	Separation DC: 1st Side	*ENG	[1 to 60 / <b>22</b> / 1 /step]
002	Separation DC: 2nd Side	*ENG	
2680	Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2670 is multiplied by these SP values.		
003	Paper Transfer: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
004	Paper Transfer: BW: 2nd Side	*ENG	
005	Paper Transfer: FC: 1st Side	*ENG	[1 to 60 / <b>55</b> / 1 /step]
006	Paper Transfer: FC: 2nd Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]

2751	[Special 1: Bias]		
	Adjusts the DC voltage of the discharge plate for special paper 1. Plain: High speed, Thick 1: Middle speed		
001	Separation DC: Plain: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/ step]
002	Separation DC: Plain: 2nd Side	*ENG	
003	Paper Transfer: Thick 1: 1st Side	*ENG	

2753	[Special 1: Bias: BW]		
	Adjusts the current for the paper transfer roller for special paper 1 in black-and-white mode. Plain: High speed		

001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 30, C3d: 38</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>11</b> / 1 - $\mu$ A /step]

2757	[Special 1: Bias: FC]		
	Adjusts the current for the paper transfer roller for special paper 1 in full color mode. Plain: High speed, Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 40, C3d: 50</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 250 / <b>C3c: 45, C3d: 55</b> / 1 - $\mu$ A /step]
003	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2761	[Special 1: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2753 and SP2757 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
005	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step]
006	Paper Transfer: 2nd Side: S2	*ENG	297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step]
010	Paper Transfer: 2nd Side: S3	*ENG	275 mm > S3 size > 210 mm (Paper width)
013	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)



017	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)

2771	[Special 1: Leading Edge Correction] Special 1 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2753 and SP2757 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2772.</li> </ul>		
	001	Paper Transfer: Plain: 1st Side	*ENG [0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG [0 to 400 / <b>100</b> / 5%/step]	
003	Paper Transfer: 1200: 1st Side	*ENG [0 to 400 / <b>100</b> / 5%/step]	
2771	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2751 is multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2772.</li> </ul>		
	005	Separation DC: Plain: 1st Side	*ENG
006	Separation DC: Plain: 2nd Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
007	Separation DC: 1200: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]

2772	[Special 1: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
	001	Paper Transfer: Plain: 1st Side	*ENG
	002	Paper Transfer: Plain: 2nd Side	*ENG
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
			[0 to 50 / <b>0</b> / 1 mm/step]

005	Separation DC: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2773	[Special 1: Trail. Edge Correction] Special 1 Paper: Trailing Edge Correction			
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2753 and SP2757 are multiplied by these SP values. Plain: High speed, 1200: Low speed			
	<div style="border: 1px solid blue; border-radius: 15px; padding: 2px; display: inline-block;"> <span style="color: blue;">↓</span> <b>Note</b> </div> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2774.</li> </ul>			
	001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
	002	Paper Transfer: Plain: 2nd Side	*ENG	
	003	Paper Transfer: 1200: 1st Side	*ENG	
	005	Separation DC: Plain: 1st Side	*ENG	
	006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG		

2774	[Special 1: Sw Timing: Trail. Edge]			
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed			
	001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
	002	Paper Transfer: Plain: 2nd Side	*ENG	
	003	Paper Transfer: 1200: 1st Side	*ENG	
	005	Separation DC: Plain: 1st Side	*ENG	
	006	Separation DC: Plain: 2nd Side	*ENG	
	007	Separation DC: 1200: 1st Side	*ENG	

2780	[Special 1: Environment Correction] Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
002	Separation DC: Plain: 2nd Side	*ENG	[1 to 60 / <b>32</b> / 1 /step]
003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
004	Paper Transfer: Plain: BW:2nd Side	*ENG	
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]
006	Paper Transfer: Plain: FC:2nd Side	*ENG	[1 to 60 / <b>14</b> / 1 /step]
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]

2801	[Special2: Bias]		
	Adjusts the DC voltage of the discharge plate for special paper 2. Plain: High speed, 1200: Low speed		
	001	Separation DC: Plain: 1st Side	*ENG
	002	Separation DC: Plain: 2nd Side	*ENG
003	Separation DC: 1200: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/ step]

2803	[Special2: Bias: BW]		
	Adjusts the current for the paper transfer roller for special paper 2 in black-and-white mode. Plain: High speed, 1200: Low speed		
	001	Paper Transfer: Plain: 1st Side	*ENG
	002	Paper Transfer: Plain: 2nd Side	*ENG
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>C3c: 30/ C3d: 38</b> / 1 - $\mu$ A /step]

2807	[Special2: Bias: FC]		
	Adjusts the current for the paper transfer roller for special paper 2 in full color mode. Plain: High speed, Thick 2&Fine: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 40/ C3d: 50</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 250 / <b>C3c: 45/ C3d: 55</b> / 1 - $\mu$ A /step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2811	[Special2: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2803 and SP2807 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
005	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
006	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
010	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
013	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer: 2nd Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
017	Paper Transfer: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)

018	Paper Transfer: 2nd Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)
-----	------------------------------	------	---

2821	[Special 2: Lead. Edge Correction] Special 2 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2803 and SP2807 are multiplied by these SP values. Plain: High speed, 1200: Low speed <b>Note</b> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2822.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
2821	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2801 is multiplied by these SP values. <b>Note</b> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2822.</li> </ul>		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2822	[Special 2: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		

001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2823	[Special 2: Trail. Edge Correction] Special 2 Paper: Trailing Edge Correction			
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2803 and SP2807 are multiplied by these SP values. Plain: High speed, 1200: Low speed			
	<div style="border: 1px solid black; border-radius: 10px; padding: 2px; display: inline-block;"> <b>Note</b> </div>			
	<ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2824.</li> </ul>			
	001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
	002	Paper Transfer: Plain: 2nd Side	*ENG	
	003	Paper Transfer: 1200: 1st Side	*ENG	
	005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG		
007	Separation DC: 1200: 1st Side	*ENG		

2824	[Special 2: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		

001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2830	[Special 2: Environment Correction] Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
002	Separation DC: Plain: 2nd Side	*ENG	[1 to 60 / <b>32</b> / 1 /step]
003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
004	Paper Transfer: Plain: BW:2nd Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]
006	Paper Transfer: Plain: FC:2nd Side	*ENG	[1 to 60 / <b>14</b> / 1 /step]
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]

2851	[Special 3: Bias]		
	Adjusts the DC voltage of the discharge plate for special paper 3. Plain: High speed, 1200: Low speed		
	001	Separation DC: Plain: 1st Side	*ENG
	002	Separation DC: Plain: 2nd Side	*ENG
003	Separation DC: 1200: 1st Side	*ENG	[0 to 4000 / <b>3500</b> / 10 -V/step]

2852	[Special 3: Bias: BW]		
	Adjusts the current for the paper transfer roller for special paper 3 in black-and-white mode. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 30/ C3d: 38</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>11</b> / 1 - $\mu$ A /step]

2857	[Special 3: Bias: FC]		
	Adjusts the current for the paper transfer roller for special paper 3 in full color mode. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 250 / <b>C3c: 40/ C3d: 50</b> / 1 - $\mu$ A /step]
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 250 / <b>C3c: 45/ C3d: 55</b> / 1 - $\mu$ A /step]
003	Paper Transfer: 1200: 1st Side	*ENG	[0 to 250 / <b>15</b> / 1 - $\mu$ A /step]

2861	[Special 3: Paper Size Correction]		
	Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2852 and SP2857 are multiplied by these SP values.		
001	Paper Transfer: 1st Side: S1	*ENG	[100 to 600 / <b>100</b> / 5%/step]
002	Paper Transfer: 2nd Side: S1	*ENG	S1 size > 297 mm (Paper width)
005	Paper Transfer: 1st Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
006	Paper Transfer: 2nd Side: S2	*ENG	[100 to 600 / <b>120</b> / 5%/step] 297 mm > S2 size > 275 mm (Paper width)
009	Paper Transfer: 1st Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)



010	Paper Transfer: 2nd Side: S3	*ENG	[100 to 600 / <b>140</b> / 5%/step] 275 mm > S3 size > 210 mm (Paper width)
013	Paper Transfer: 1st Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
014	Paper Transfer:: 2nd Side: S4	*ENG	[100 to 600 / <b>160</b> / 5%/step] 210 mm > S4 size > 148 mm (Paper width)
017	Paper Transfer:: 1st Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)
018	Paper Transfer:: 2nd Side: S5	*ENG	[100 to 600 / <b>180</b> / 5%/step] 148 mm > S5 size (Paper width)

2871	[Special 3: Lead. Edge Correction] Special 3 Paper: Leading Edge Correction		
	Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2852 and SP2857 are multiplied by these SP values. Plain: High speed, 1200: Low speed		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2872.</li> </ul>		
	001	Paper Transfer: Plain: 1st Side	*ENG
002	Paper Transfer: Plain: 2nd Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
003	Paper Transfer: 1200: 1st Side	*ENG	
2871	Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2851 is multiplied by these SP values.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2872.</li> </ul>		
005	Separation DC: Plain: 1st Side	*ENG	[0 to 400 / <b>100</b> / 5%/step]
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Side	*ENG	

2872	[Special 3: Sw Timing: Lead. Edge]		
	Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / 0 / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Page	*ENG	

2873	[Special 3: Trail. Edge Correction] Special 3 Paper: Trailing Edge Correction		
	Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2852 and SP2857 are multiplied by these SP values. Plain: High speed, 1200: Low speed <b>Note</b> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2874.</li> </ul>		
001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 400 / 100 / 5%/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Page	*ENG	

2874	[Special 3: Sw Timing: Trail. Edge]		
	Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. Plain: High speed, 1200: Low speed		

001	Paper Transfer: Plain: 1st Side	*ENG	[0 to 50 / <b>0</b> / 2 mm/step]
002	Paper Transfer: Plain: 2nd Side	*ENG	
003	Paper Transfer: 1200: 1st Side	*ENG	
005	Separation DC: Plain: 1st Side	*ENG	
006	Separation DC: Plain: 2nd Side	*ENG	
007	Separation DC: 1200: 1st Page	*ENG	

2880	[Special 3: Environment Correction] Plain: High speed, 1200: Low speed		
001	Separation DC: Plain: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
002	Separation DC: Plain: 2nd Side	*ENG	[1 to 60 / <b>32</b> / 1 /step]
003	Paper Transfer: Plain: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
004	Paper Transfer: Plain: BW:2nd Side	*ENG	
005	Paper Transfer: Plain: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]
006	Paper Transfer: Plain: FC:2nd Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
007	Separation DC: 1200: 1st Side	*ENG	[1 to 60 / <b>26</b> / 1 /step]
009	Paper Transfer: 1200: BW: 1st Side	*ENG	[1 to 60 / <b>11</b> / 1 /step]
011	Paper Transfer: 1200: FC: 1st Side	*ENG	[1 to 60 / <b>1</b> / 1 /step]

2905	[Dev Rvs Time] Development Roller Reverse Time		
	Specified the time of the development roller reverse rotation after the development unit has stopped. The reverse rotation of the development roller is used for removing dust from the development roller.		
001	K	*ENG	[0 to 200 / <b>80</b> / 10 msec/step]
002	M	*ENG	
003	C	*ENG	
004	Y	*ENG	

005	[Dev Rvs Threshold Counter]		
	Specified the threshold distance for the development roller reverse mode. This SP refers to the counters for SP2905-006 to -009.		
	All	*ENG	[0 to 400000 / <b>4000</b> / 10 mm/step]
2905	[Dev Rvs Counter]		
006	K	*ENG	[0 to 999999999 / - / 1 mm/step]
007	M	*ENG	
008	C	*ENG	
009	Y	*ENG	

2907	[Acs Setting (FC to Bk)]		
	<p>Adjusts the threshold for moving away the image transfer belt from the color PCDUs. This SP moves the image transfer belt away from the color PCDUs when the number of B/W image printouts reaches the number of sheets specified with this SP after consecutive full color image printouts in the full color mode.</p> <p>If this SP is set to "0", the image transfer belt does not move away.</p>		
001	Continuous Bk Pages	*ENG	[0 to 10 / <b>0</b> / 1 sheet/step]

2920	[Trans Mot Control]		
001	0: Encoder 1 :FG	*ENG	[0 or 1 / <b>0</b> / 1 /step]
	<p>Selects the speed control mode for the ITB.</p> <p>If SC443 occurs and machine does not recover, change this setting to "1".</p>		
002	SC443-00 Count	*ENG	[0 to 3 / <b>0</b> / 1 /step]
	<p>Displays the number of the ITB encode error. SC443 is displayed if this counter counts to "3".</p>		

2930	[SecondaryFB: Threshold] Paper Transfer Roller Feed-back: Threshold Adjustment		
	<p>Adjusts the threshold between high resistance (division 1) and low resistance (division 2) at the paper transfer roller. This SP affects SP2931 to SP2939.</p>		
001	Voltage	*ENG	[0 to 7000 / <b>6000</b> / 10 -V/step]

2960	[Process Interval]		
001	Additional Time	*ENG	[0 to 10 / 0 / 1 sec/step]
	Adjusts the additional time for ending the machine's process.		
2970	[Cleaning After JOB]		
001	No Refresh	*ENG	[0 to 100 / 33 / 1 /step] 0: No cleaning
	Specifies the threshold sheets for the cleaning of the paper transfer roller without the refresh mode.		
002	Refresh	*ENG	[0 or 1 / 1 / 1 /step] 0: No cleaning, 1: Cleaning
2971	T1 Non Image Area ON Timing		
001	Standard Speed	*ENG	[-300 to 260 / C3c: 10 / 10 msec/step] [-240 to 240 / C3d: 30 / 10 msec/step]
	Adjusts the timing for the non-image area bias of the image transfer roller.		
002	Medium Speed	*ENG	[-400 to 290 / 0 / 10 msec/step]
003	Low Speed	*ENG	[-790 to 410 / 0 / 10 msec/step]
2972	B/W Image Request Timing		
001	Standard Speed	*ENG	[0 to 4000 / 0 / 10 msec/step]
002	Medium Speed	*ENG	[0 to 4000 / 0 / 10 msec/step]
003	Low Speed	*ENG	[0 to 4000 / 0 / 10 msec/step]
2973	Forced Process Down Threshold		
001	-	*ENG	[0 to 5000 / 0 / 10 page/step]
2974	OPC PreCharge Time Control		
001	Standard Speed	*ENG	[0 to 1250 / 197 / 1 msec/step]

002	Medium Speed	*ENG	[0 to 1500 / <b>146</b> / 1 msec/step]
003	Low Speed	*ENG	[0 to 2600 / <b>0</b> / 1 msec/step]

2980	Continuous Job Page		
001	-	*ENG	[0 to 300 / <b>100</b> / 10 page/step]
002	-	*ENG	[0 to 600 / <b>30</b> / 10 sec/step]
003	-	*ENG	[0 to 600 / <b>30</b> / 10 sec/step]

2990	Print Duty Control		
001	Duty Control State	*ENG	[0 or 1 / - / 1 /step] 0: No limit, 1: Limit
002	Exec Interval: Duty Control	*ENG	[60 to 3600 / <b>300</b> / 10 min./step]
003	Duty Control Thresh	*ENG	[0 to 999999999 / <b>0</b> / 1 mm/step]
004	Forced CPM Down Thresh: No Duty Control	*ENG	[0 to 5000 / <b>0</b> / 1 page/step]
005	Drum Stop Time: No Duty Control	*ENG	[300 to 1500 / <b>500</b> / 10 msec/step]
006	ITB Stop Time: No Duty Control	*ENG	[300 to 1500 / <b>500</b> / 10 msec/step]
007	Forced CPM Down Thresh: Duty Control	*ENG	[0 to 5000 / <b>1</b> / 1 page/step]
008	Drum Stop Time: Duty Control	*ENG	[300 to 20000 / <b>7500</b> / 10 msec/step]
009	ITB Stop Time: Duty Control	*ENG	[300 to 20000 / <b>7500</b> / 10 msec/step]
010	Duty Control: Start Time	*ENG	Displays the time of the duty control execution.
011	Execution Temp. Threshold	*ENG	Sets the threshold of the duty control execution temperature. [ 20 to 70 / <b>39.8</b> / 0.1/step]

012	Cancellation Temp. Threshold	*ENG	Sets the threshold of the duty control cancellation temperature. [ 0.1 to 20 / 1 / 0.1/step]
013	ON/OFF Setting	*ENG	Turns duty control off or on. <b>0: OFF</b> 1: ON

## Main SP Tables-3

### SP3-XXX (Process)

3011	[Process Cont. Manual Execution]		
001	Normal	-	Executes the normal process control manually (potential control). Check the result with SP3-325-001 and 3-012-001 after executing this SP.
002	Density Adjustment	-	Executes the toner density adjustment manually.
003	Pre-ACC	-	Executes the process control that is normally done before ACC. The type of process control is selected with SP3-041-004.
004	Full MUSIC	-	Executes the process control that is normally done at the same time as MUSIC. This SP does the MUSIC (line position adjustment) twice.
005	Normal MUSIC	-	Executes the process control that is normally done at the same time as MUSIC. This SP does the MUSIC (line position adjustment) once.

3012	[Process Cont. Check Result] Process Control Self-check Result		
	<p>Displays the result of the latest process control self-check.</p> <p>All colors are displayed. The results are displayed in the order "Y C M K" e.g., 11 (Y) 99 (C) 11 (M) 11 (K): The self-check for Cyan failed but the others were successful.</p> <p>See "Process Control Self-Check Result" in the "Main chapters: 6. Troubleshooting: Process Control Error Conditions" for details.</p>		



001	History: Latest	*ENG	[1111 to 999999999 / - / 1/step]
002	Result: Latest 1	*ENG	
003	Result: Latest 2	*ENG	
004	Result: Latest 3	*ENG	
005	Result: Latest 4	*ENG	
006	Result: Latest 5	*ENG	
007	Result: Latest 6	*ENG	
008	Result: Latest 7	*ENG	
009	Result: Latest 8	*ENG	
010	Result: Latest 9	*ENG	

3013	[T Sensor Initial Set: Exe] Developer Initialization Setting		
001	Execution: ALL	-	Executes the developer initialization for each color.
002	Execution: COL	-	
003	Execution: Bk	-	
004	Execution: M	-	
005	Execution: C	-	
006	Execution: Y	-	

3014	[T Sensor Initial Set:Exe] Developer Initialization Result: Display		
001	Display: YCMK	*ENG	[0 to 9999 / - / 1 /step ] 1: Success, 2 to 9: Failure
	Displays the developer initialization result. See "Developer Initialization Result" in the "Main chapters: 6. Troubleshooting: Process Control Error Conditions" for details on the meaning of each code. All colors are displayed. Values are displayed in the order Y C M Bk. e.g., 1 (Y) 2 (C) 1 (M) 1 (Bk): Initialization of Cyan failed but the others succeeded.		

3015	[Forced Toner Supply: Execute] Forced Toner Supply ([Color])		
001	Execution: ALL	-	Executes the manual toner supply to the development unit.
002	Execution: COL	-	
003	Execution: Bk	-	
004	Execution: M	-	
005	Execution: C	-	
006	Execution: Y	-	

3016	[Forced Toner Supply: Setting]		
	Specifies the manual toner supply time for each color.		
001	Supply Time: Bk	*ENG	[0 to 30 / 4 / 1 sec/step]
002	Supply Time: M	*ENG	
003	Supply Time: C	*ENG	
004	Supply Time: Y	*ENG	

3041	[Process Control Type]		
001	Voltage Control	*ENG	[0 or 1 / 1 / 1/step ] Alphanumeric 0: FIXED (Use the fixed values for the charge DC bias and development DC bias set with SP2-005 and SP2-229.) 1: CONTROL
	Enables or disables potential control.		
002	LD Power Control	*ENG	[0 or 1 / 1 / 1/step] Alphanumeric 0: FIXED (at the value in SP2221-xxx) 1: CONTROL (adjusted by process control)
	Selects the LD power control mode.		

003	AutoControl Prohibition Set	*ENG	[0 or 1 / 0 / -] 0: Permit, 1: Forbid
	Enables or disables the automatic process control prohibition.		
004	Pre-ACC Process Control	*ENG	[0 to 2 / 2 / 1/step] 0: Not Executed 1: Process Control 2: TC Control (TD Adjustment) 3: Not used
	Selects the process control mode that is done before ACC.		
005	Pattern Calculation Method	*ENG	[0 to 2 / 2 / 1/step] 0: FIXED 1: INITIALIZED 2: CALCULATED
	Selects the process control method.		

3043	[TD Adjustment Mode]		
001	Repeat Number: Power ON	*ENG	[0 to 9 / 4 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment at power on.</p> <p>0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled</p>		
002	Repeat Number: Initialization	*ENG	[0 to 9 / 3 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment at the developer initialization.</p> <p>0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled</p>		

003	Repeat Number: Non-use	*ENG	[0 to 9 / 0 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment in stand by mode.</p> <p>0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled</p>		
004	Repeat Number: ACC	*ENG	[0 to 9 / 3 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment at ACC.</p> <p>0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled</p>		
005	Repeat Number: Recovery	*ENG	[0 to 9 / 0 / 1 time/step]
	Not used		
006	Repeat Number: Job End	*ENG	[0 to 9 / 4 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment at job end.</p> <p>0: Disabled, 1 to 3: Repeat number, 4: Repeat three times (No consumption mode) 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.) 6 to 9: Disabled</p>		
007	Repeat: Interrupt	*ENG	[0 to 9 / 0 / 1 time/step]
	<p>Specifies the maximum number of repeats of the toner density adjustment during printing. <b>DFU</b></p>		
008	Toner Supply Coefficient	*ENG	[0 to 25.5 / 10 / 0.1 sec/step]
	Adjusts the time for the toner supply mode when a toner density is detected to be low.		

009	Consumption pattern: Bk	*ENG	[0 to 255 / 5 / 1 time/step]
	Specifies the belt mark generating time for checking the black toner density when toner density is detected to be low at the toner density adjustment.		
010	Consumption pattern: M	*ENG	[0 to 255 / 5 / 1 time/step]
	Specifies the belt mark generating time for checking the magenta toner density when toner density is detected to be low at the toner density adjustment.		
011	Consumption pattern: C	*ENG	[0 to 255 / 5 / 1 time/step]
	Specifies the belt mark generating time for checking the cyan toner density when toner density is detected to be low at the toner density adjustment.		
012	Consumption pattern: Y	*ENG	[0 to 255 / 5 / 1 time/step]
	Specifies the belt mark generating time for checking the yellow toner density when toner density is detected to be low at the toner density adjustment.		
013	T1 Bias: Bk	*ENG	[0 to 80 / C3c: 30, C3d: 37 / 1 $\mu$ A/step]
	Adjusts the image transfer belt bias for Black.		
014	T2 Bias: M	*ENG	[0 to 80 / C3c: 33, C3d: 41 / 1 $\mu$ A/step]
	Adjusts the image transfer belt bias for Magenta.		
015	T3 Bias: C	*ENG	[0 to 80 / C3c: 30, C3d: 37 / 1 $\mu$ A/step]
	Adjusts the image transfer belt bias for Cyan.		
016	T4 Bias: Y	*ENG	[0 to 80 / C3c: 38, C3d: 47 / 1 $\mu$ A/step]
	Adjusts the image transfer belt bias for Yellow.		
017	Developer Mixing Time	*ENG	[0 to 250 / 10 / 1 sec/step]
	Specifies the developer mixing time at the toner density adjustment.		
018	Consumption Pat: LD: DUTY: Bk	*ENG	[0 to 15 / 15 / 1 /step]
	Adjusts the LD duty for the toner consumption mode at the toner density adjustment. In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-001) exceed the target values (SP3611-005) by more than the specified thresholds (SP3239-009).		

019	Consumption Pat: LD: DUTY: M	*ENG	[0 to 15 / 15 / 1 /step]
	Adjusts the LD duty for the toner consumption mode at the toner density adjustment. In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-002) exceed the target values (SP3611-006) by more than the specified thresholds (SP3239-009).		
020	Consumption Pat: LD: DUTY: C	*ENG	[0 to 15 / 15 / 1 /step]
	Adjusts the LD duty for the toner consumption mode at the toner density adjustment. In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-003) exceed the target values (SP3611-007) by more than the specified thresholds (SP3239-009).		
021	Consumption Pat: LD: DUTY: Y	*ENG	[0 to 15 / 15 / 1 /step]
	Adjusts the LD duty for the toner consumption mode at the toner density adjustment. In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-004) exceed the target values (SP3611-008) by more than the specified thresholds (SP3239-009).		

3044	[Toner Supply Type]		
	Selects the toner supply method type.		
001	Bk	*ENG	[0 to 4 / 4 / 1/step] Alphanumeric
002	M	*ENG	0: FIXED (with the supply rates stored with SP 3401) 1: PID (Vtref_Fixed) 2: PID (Vtref_Control) 3: Not used 4: MBD (Vtref_Control)
003	C	*ENG	
004	Y	*ENG	

3045	[Toner End Detection: Set]		
	Enables/disables the toner alert display on the LCD.		
001	ON/OFF	*ENG	[0 or 1 / 0 / 1/step] 0: Detect, 1: Not Detect

3102	[Toner End Recovery]		
	Adjusts the number of times toner supply is attempted for each color when the TD sensor continues to detect toner end during toner recovery.		
001	Repeat: Bk	* ENG	[1 to 20 / 5 / 1 time/step]
002	Repeat: M	* ENG	
003	Repeat: C	* ENG	
004	Repeat: Y	* ENG	

3131	[TE Count m: Display]		
	Display the number of toner end detections for each color.		
001	Bk	* ENG	[0 to 99 / - / 1 time/step]
002	M	* ENG	
003	C	* ENG	
004	Y	* ENG	

3201	[TD Sensor: Vt Display]		
	Display the current voltage of the TD sensor for each color.		
001	Current: Bk	* ENG	[0 to 5.5 / - / 0.01 V/step]
002	Current: M	* ENG	
003	Current: C	* ENG	
004	Current: Y	* ENG	

3211	[Vt Shift: Display/Set]		
	Adjusts the Vt correction value for each line speed. Thick 1: 154 mm/sec, Thick 2&Fine: 77 mm/sec		
001	Thick 1 Shift: Bk	* ENG	[0 to 5 / C3c: 0.18, C3d: 0.38 / 0.01 V/step]

002	Thick 1 Shift: M	*ENG	[0 to 5 / C3c: 0.18, C3d: 0.36 / 0.01 V/step]
003	Thick 1 Shift: C	*ENG	[0 to 5 / C3c: 0.17 C3d: 0.34 / 0.01 V/step]
004	Thick 1 Shift: Y	*ENG	[0 to 5 / C3c: 0.19 C3d: 0.35 / 0.01 V/step]
005	Thick 2 & FINE Shift: Bk	*ENG	[0 to 5 / C3c: 0.46, C3d:0.64 / 0.01 V/step]
006	Thick 2 & FINE Shift: M	*ENG	[0 to 5 / C3c: 0.44, C3d: 0.61 / 0.01 V/step]
007	Thick 2 & FINE Shift: C	*ENG	[0 to 5 / C3c: 0.43, C3d: 0.6 / 0.01 V/step]
008	Thick 2 & FINE Shift: Y	*ENG	[0 to 5 / C3c: 0.48, C3d: 0.66 / 0.01 V/step]
009	Mid TCShift: Bk	*ENG	[-0.5 to 0.5 / 0 / 0.01 V/step]
010	Mid TCShift: M	*ENG	
011	Mid TCShift: C	*ENG	
012	Mid TCShift: Y	*ENG	
013	Low TCShift: Bk	*ENG	[-0.5 to 0.5 / 0 / 0.01 V/step]
014	Low TCShift: M	*ENG	
015	Low TCShift: C	*ENG	
016	Low TCShift: Y	*ENG	

3221	[Vtcnt: Display/Set]		
	Displays or adjusts the current Vtcnt value for each color.		
001	Current: Bk	*ENG	[0 to 5 / 3.86 / 0.01 V/step]
002	Current: M	*ENG	
003	Current: C	*ENG	
004	Current: Y	*ENG	



005-008	Displays or adjusts the Vtcnt value for each color at developer initialization. <b>DFU</b>		
005	Initial: Bk	* ENG	[0 to 5 / <b>3.86</b> / 0.01 V/step]
006	Initial: M	* ENG	
007	Initial: C	* ENG	
008	Initial: Y	* ENG	

3222	[Vtref: Display/Set]		
	Displays or adjusts the current Vtref value for each color.		
001	Current: Bk	* ENG	[0 to 5.5 / <b>3</b> / 0.01 V/step]
002	Current: M	* ENG	
003	Current: C	* ENG	
004	Current: Y	* ENG	
005-008	Displays or adjusts the Vtref value for each color at developer initialization. <b>DFU</b>		
005	Initial: Bk	* ENG	[0 to 5.5 / - / 0.01 V/step]
006	Initial: M	* ENG	
007	Initial: C	* ENG	
008	Initial: Y	* ENG	
009-012	Displays and adjusts Vtref correction by pixel coverage for each color. <b>DFU</b>		
009	Pixel Correction: Bk	* ENG	[-5 to 5.5 / - / 0.01 V/step]
010	Pixel Correction: M	* ENG	
011	Pixel Correction: C	* ENG	
012	Pixel Correction: Y	* ENG	

3239	[Vtref Correction: Setting]		
	Adjusts the parameter for Vtref correction at the process control.		

001	(+)Consumption: Bk	*ENG	[0 to 1 / <b>0.04</b> / 0.01 V/step]
002	(+)Consumption: M	*ENG	
003	(+)Consumption: C	*ENG	
004	(+)Consumption: Y	*ENG	
005	(-)Consumption: Bk	*ENG	
006	(-)Consumption: M	*ENG	
007	(-)Consumption: C	*ENG	
008	(-)Consumption: Y	*ENG	
009-012	Threshold for development gamma rank.		
009	P Rank 1 Threshold	*ENG	[0 to 2 / <b>0.2</b> / 0.1 /step]
010	P Rank 2 Threshold	*ENG	[0 to 2 / <b>0.05</b> / 0.1 /step]
011	P Rank 3 Threshold	*ENG	[-2 to 0 / <b>-0.05</b> / 0.1 /step]
012	P Rank 4 Threshold	*ENG	[-2 to 0 / <b>-0.2</b> / 0.1 /step]
013-014	Threshold for image density rank on the image transfer belt.		
013	T Rank 1 Threshold	*ENG	[-1 to 0 / <b>-0.2</b> / 0.01 V/step]
014	T Rank 2 Threshold	*ENG	[0 to 1 / <b>0.2</b> / 0.01 V/step]
021-028	Sets the correction coefficient of the Vtref correction.		
021	Correction Coefficient 1: Bk	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
022	Correction Coefficient 1: M	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
023	Correction Coefficient 1: C	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
024	Correction Coefficient 1: Y	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
025	Correction Coefficient 2: Bk	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
026	Correction Coefficient 2: M	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
027	Correction Coefficient 2: C	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]
028	Correction Coefficient 2: Y	*ENG	[0 to 1 / <b>0.5</b> / 0.1/step]

3241	[Background Potential Setting]		
001	Coefficient: Bk	*ENG	These are parameters for calculating the charge bias referring to the development bias at process control. [-1000 to 1000 / <b>0</b> / 1 /step] DC charge bias = Development bias x (1 + 0.001 x these vales) + SP3-241-005 to -008
002	Coefficient: M	*ENG	
003	Coefficient: C	*ENG	
004	Coefficient: Y	*ENG	
005	Offset: Bk	*ENG	These are additional values for calculating the charge bias referring to the development bias at process control. [0 to 255 / <b>140</b> / 1 V/step] DC charge bias = Development bias x (1 + 0.001 x SP3-241-001 to -004) + these values
006	Offset: M	*ENG	
007	Offset: C	*ENG	
008	Offset: Y	*ENG	

3242	[LD Power Setting]		
	Adjusts the coefficient for LD power control value at the process control.		
001	StdSpd:Coefficient: Bk	*ENG	[-1000 to 1000 / <b>124</b> / 1 /step]
002	StdSpd:Coefficient: M	*ENG	
003	StdSpd:Coefficient: C	*ENG	
004	StdSpd:Coefficient: Y	*ENG	
005	StdSpd:Offset: Bk	*ENG	[-1000 to 1000 / <b>4</b> / 1 /step]
006	StdSpd:Offset: M	*ENG	
007	StdSpd:Offset: C	*ENG	
008	StdSpd:Offset: Y	*ENG	
009	MidSpd:coef:Bk	*ENG	[-1000 to 1000 / <b>118</b> / 1 /step]
010	MidSpd:Coef:M	*ENG	[-1000 to 1000 / <b>117</b> / 1 /step]
011	MidSpd:Coef:C	*ENG	[-1000 to 1000 / <b>79</b> / 1 /step]
012	MidSpd:Coef:Y	*ENG	[-1000 to 1000 / <b>92</b> / 1 /step]
013	MidSpd:offset:Bk	*ENG	[-1000 to 1000 / <b>47</b> / 1 /step]

014	MidSpd:offset:M	*ENG	[-1000 to 1000 / <b>41</b> / 1 /step]
015	MidSpd:offset:C	*ENG	[-1000 to 1000 / <b>72</b> / 1 /step]
016	MidSpd:offset:Y	*ENG	[-1000 to 1000 / <b>59</b> / 1 /step]
017	LowSpd:Coef:Bk	*ENG	[-1000 to 1000 / <b>98</b> / 1 /step]
018	LowSpd:Coef:M	*ENG	[-1000 to 1000 / <b>104</b> / 1 /step]
019	LowSpd:Coef:C	*ENG	[-1000 to 1000 / <b>78</b> / 1 /step]
020	LowSpd:Coef:Y	*ENG	[-1000 to 1000 / <b>84</b> / 1 /step]
021	LowSpd:offset:Bk	*ENG	[-1000 to 1000 / <b>59</b> / 1 /step]
022	LowSpd:offset:M	*ENG	[-1000 to 1000 / <b>45</b> / 1 /step]
023	LowSpd:offset:C	*ENG	[-1000 to 1000 / <b>69</b> / 1 /step]
024	LowSpd:offset:Y	*ENG	[-1000 to 1000 / <b>65</b> / 1 /step]

3251	[Coverage]		
	These (-001 to -016) are coefficients for SP3-222-009 to -012.		
001	Latest Pixel: Bk	*ENG	Displays the latest coverage for each color. [0 to 9999 / - / 1 cm <sup>2</sup> /step]
002	Latest Pixel: M	*ENG	
003	Latest Pixel: C	*ENG	
004	Latest Pixel: Y	*ENG	
005-008	Displays the average coverage of each color for the Vtref correction. "Average S" is defined when the number of developed pages does not reach the number specified with SP3251-017.		
005	Average S: Bk	*ENG	[0 to 100 / - / 0.01 %/step]
006	Average S: M	*ENG	
007	Average S: C	*ENG	
008	Average S: Y	*ENG	

009-012	Displays the average coverage of each color for the Vtref correction. "Average M" is defined when the number of developed pages does not reach the number specified with SP3251-018.		
009	Average M: Bk	*ENG	[0 to 100 / - / 0.01 %/step]
010	Average M: M	*ENG	
011	Average M: C	*ENG	
012	Average M: Y	*ENG	
013-016	Displays the average coverage of each color for the Vtref correction. "Average L" is defined when the number of developed pages does not reach the number specified with SP3-251-019.		
013	Average L: Bk	*ENG	[0 to 100 / - / 0.01 %/step]
014	Average L: M	*ENG	
015	Average L: C	*ENG	
016	Average L: Y	*ENG	
017-019	Adjusts the threshold for SP3-251-005 to -016.		
017	Total Page Setting: S	*ENG	[1 to 100 / <b>10</b> / 1 sheet/step]
018	Total Page Setting: M	*ENG	[1 to 500 / <b>10</b> / 1 sheet/step]
019	Total Page Setting: L	*ENG	[1 to 999 / <b>50</b> / 1 sheet/step]
020-023	Adjusts the threshold for SP3-251-024 to -027.		
020	Total Page Setting: S2	*ENG	[1 to 100 / <b>40</b> / 1 sheet/step]
021	Total Page Setting: M2	*ENG	[1 to 500 / <b>10</b> / 1 sheet/step]
022	Total Page Setting: L2	*ENG	[1 to 999 / <b>50</b> / 1 sheet/step]
024-027	Displays the latest coverage ratio for each color.		
024	Latest Coverage: Bk	*ENG	[0 to 100 / - / 0.01 %/step]
025	Latest Coverage: M	*ENG	
026	Latest Coverage: C	*ENG	
027	Latest Coverage: Y	*ENG	

028	Displays the threshold of whether to perform developer churning or not.		
	DevMix Threshold	*ENG	[0 to 100 / <b>20</b> / 1 %/step]

3311	[ID Sensor DetectValue: Vofset]		
	Displays the ID sensor (regular) offset voltage for Vsg adjustments.		
001	Voffset reg: Bk	*ENG	[0 to 5 / - / 0.01 V/step]
002	Voffset reg: M	*ENG	[0 to 5.5 / - / 0.01 V/step]
003	Voffset reg: C	*ENG	
004	Voffset reg: Y	*ENG	
005-007	Displays the ID sensor (diffusion) offset voltage for Vsg adjustments.		
005	Voffset dif: M	*ENG	[0 to 5.5 / - / 0.01 V/step]
006	Voffset dif: C	*ENG	
007	Voffset dif: Y	*ENG	
008-010	Displays the ID sensor offset voltage for Vsg adjustments.		
008	Voffset TM (Front)	*ENG	[0 to 5.5 / - / 0.01 V/step]
009	Voffset TM (Center)	*ENG	
010	Voffset TM (Rear)	*ENG	

3321	[Vsg Adjustment: Execution]		
010	P/TM Sensor All	-	Execute the ID sensor initialization setting for all sensors

3322	[Vsg Adjustment Result: Vsg]		
	Displays the result value of the Vsg adjustment for each sensor.		

001	Vsg reg: Bk	*ENG	[0 to 5.5 / - / 0.01 V/step]
002	Vsg reg: M	*ENG	
003	Vsg reg: C	*ENG	
004	Vsg reg: Y	*ENG	
005	Vsg dif: M	*ENG	
006	Vsg dif: C	*ENG	
007	Vsg dif: Y	*ENG	
008	Vsg TM (Front)	*ENG	
009	Vsg TM (Center)	*ENG	
010	Vsg TM (Rear)	*ENG	

3325	[Vsg Adjustment Result]		
	<p>Displays the result of the Vsg adjustment.</p> <p>The displayed numbers mean the result of each sensor (sensor for Front, sensor for Bk, sensor for Cyan, sensor for Center, sensor for Magenta, sensor for Yellow and sensor for Rear).</p>		
001	Latest	*ENG	[111 to 999 / - / 1 /step] 9: Unexpected error 3: Offset voltage error 2: Vsg adjustment value error 1: O.K
002	Result: Latest 1	*ENG	
003	Result: Latest 2	*ENG	
004	Result: Latest 3	*ENG	
005	Result: Latest 4	*ENG	
006	Result: Latest 5	*ENG	
007	Result: Latest 6	*ENG	
008	Result: Latest 7	*ENG	
009	Result: Latest 8	*ENG	
010	Result: Latest 9	*ENG	

3401	[Fixed Supply Mode]		
	Adjusts the toner supply rate in the fixed toner supply mode.		
001	Fixed Rate: Bk	*ENG	[0 to 100 / 5 / 1 %/step] These SPs are used only when SP3-044 is set to "1".
002	Fixed Rate: M	*ENG	
003	Fixed Rate: C	*ENG	
004	Fixed Rate: Y	*ENG	

3411	[Toner Supply Rate: Display]		
	Displays the current toner supply rate.		
001	Latest: Bk	*ENG	[0 to 100 / - / 1 %/step]
002	Latest: M	*ENG	
003	Latest: C	*ENG	
004	Latest: Y	*ENG	

3421	[Toner Supply Range]		
001	Upper Limit: Bk	*ENG	Adjusts the toner supply rate during printing. [0 to 100 / 100 / 1%/step]
002	Upper Limit: M	*ENG	
003	Upper Limit: C	*ENG	
004	Upper Limit: Y	*ENG	
005	Minimum Supply Time: Bk	*ENG	Adjusts the minimum toner supply time. [0 to 1000 / 0 / 1 msec/step]
006	Minimum Supply Time: M	*ENG	
007	Minimum Supply Time: C	*ENG	
008	Minimum Supply Time: Y	*ENG	

3501	[Process Control Target M/A]		
	Adjusts the target M/A.		



001	Maximum M/A: Bk	*ENG	[0 to 1 / <b>0.4</b> / 0.001 mg/cm <sup>2</sup> /step]
002	Maximum M/A: M	*ENG	
003	Maximum M/A: C	*ENG	
004	Maximum M/A: Y	*ENG	

3510	[ImageQuality Adj. Counter:Disp]		
	Displays the total page counter for each adjustment mode.		
001	Potential Control: BW	*ENG	[0 to 2000 / - / 1 page/step]
002	Potential Control: FC	*ENG	
003	Power ON: BW	*ENG	
004	Power ON: FC	*ENG	
005	MUSIC: BW	*ENG	
006	MUSIC: FC	*ENG	
007	Vsg Adj.	*ENG	
008	Charge AC Control	*ENG	
009	MUSIC: Power ON: BW	*ENG	
010	MUSIC: Power ON: FC	*ENG	

3511	[Execution Interval: Setting]		
	Adjusts the threshold for each adjustment mode.		
001	Job End: Potential Control: BW	*ENG	[0 to 2000 / <b>250</b> / 1 page/step]
002	Job End: Potential Control: FC	*ENG	[0 to 2000 / <b>100</b> / 1 page/step]
003	Interrupt: Potential Control: BW	*ENG	[0 to 2000 / <b>500</b> / 1 page/step]
004	Interrupt: Potential Control: FC	*ENG	[0 to 2000 / <b>200</b> / 1 page/step]
005	Initial: Potential Control: BW	*ENG	[0 to 2000 / <b>250</b> / 1 page/step]
006	Initial: Potential Control: FC	*ENG	[0 to 2000 / <b>100</b> / 1 page/step]

007	Vsg Adj. Counter	*ENG	[0 to 2000 / 0 / 1 page/step]
008	Charge AC Control Counter	*ENG	
019	Environmental Correction	*ENG	[0 or 1 / 1 / 1 /step] 0: Not Correct (OFF) 1: Correct (ON)
020	Gamma Correction	*ENG	[0 or 1 / 1 / 1 /step] 0: Not Correct (OFF) 1: Correct (ON)
021	Non-use Time Correction	*ENG	[0 or 1 / 1 / 1 /step] 0: Not Correct (OFF) 1: Correct (ON)
022	Correction Coef 1: JE: BW	*ENG	[0 to 1 / 0.2 / 0.01 page/step]
023	Correction Coef 2: JE: BW	*ENG	[0 to 1 / 1 / 0.01/step]
024	Correction Coef 1: JE: FC	*ENG	[0 to 1 / 0.5 / 0.01/step]
025	Correction Coef 2: JE: FC	*ENG	[0 to 1 / 1 / 0.01/step]
026	Cor Coef 1: Interrupt: BW	*ENG	[0 to 1 / 0.1 / 0.01/step]
027	Cor Coef 2: Interrupt: BW	*ENG	[0 to 1 / 1 / 0.01/step]
028	Cor Coef 1: Interrupt: FC	*ENG	[0 to 1 / 0.25 / 0.01/step]
029	Cor Coef 2: Interrupt: FC	*ENG	[0 to 1 / 1 / 0.01/step]
030	Max. Number Cor Threshold	*ENG	[0 to 99 / 5 / 1/step]
031	Max. Number Correction Counter	*ENG	[0 to 255 / - / 1/step]

3512	[Image Quality Adj.: Interval]		
	Adjusts the timing for execution of process control and line position adjustment.		
001	During Job	*ENG	[0 to 100 / 30 / 1 page/step]
002	During Stand-by	*ENG	[0 to 100 / 10 / 1 minute/step]

3513	[PCU Motor Stop Time: Bk]		
	Displays the last time that the PCDU motors stopped. These are used for process control execution timing.		
001	Year	*ENG	[0 to 99 / - / 1/step]
002	Month	*ENG	[1 to 12 / - / 1/step]
003	Date	*ENG	[1 to 31 / - / 1/step]
004	Hour	*ENG	[0 to 23 / - / 1/step]
005	Minute	*ENG	[0 to 59 / - / 1/step]

3514	[Environmental Display: Job End]		
	Displays the environmental conditions for the last job. These are used for process control execution timing.		
001	Temperature	*ENG	[-1280 to 1270 / - / 0.1°C/step]
002	Relative Humidity	*ENG	[0 to 1000 / - / 0.1%RH/step]
003	Absolute Humidity	*ENG	[0 to 1000 / - / 0.1 g/m <sup>3</sup> /step]
004	AIT Temperature	*ENG	[-1280 to 1270 / - / 0.1 deg/step]

3515	[Execution Interval: Display]		
	Displays the current interval for process control execution. When the machine calculates the timing for process control, it uses a number of conditions. These are the results after considering all the conditions.		
001	Job End: Pot Control: BW	*ENG	[0 to 2000 / - / 1 page/step]
002	Job End: Pot Control: FC	*ENG	[0 to 2000 / - / 1 page/step]
003	Interrupt: Pot Control: BW	*ENG	[0 to 2000 / - / 1 page/step]
004	Interrupt: Pot Control: FC	*ENG	[0 to 2000 / - / 1 page/step]

3517	[Blade damage prevention mode]		
	Adjusts the threshold temperature for preventing the cleaning blade in the transfer belt cleaning unit from being damaged. If the temperature is above this value, toner is applied to the transfer belt at set intervals during the job to prevent the blade from flipping over.		
001	Execution Temp. Threshold	*ENG	[0 to 50 / <b>40</b> / 1°C/step]

3519	[Toner End Prohibition Setting]		
	Enables or disables each adjustment at toner near end.		
001	Process Control	*ENG	[0 or 1 / <b>1</b> / 1/step]
002	MUSIC	*ENG	0: Permit (adjustment is done even toner near end condition) 1: Forbid (adjustment is not done at toner near end condition)
003	TC Adj.	*ENG	

3520	[ITB Idling Number]		
	Specifies the number of the ITB idling rotation for each condition.		
001	Temperature: H	*ENG	[0 or 3 / <b>0</b> / 1 revolution/step]
002	Temperature: M	*ENG	
003	Temperature: L	*ENG	
004	Temperature: L: Power ON	*ENG	

3521	[Temperature Threshold]		
	Specifies the threshold temperature for each condition. These settings affect the conditions of SP3-520. t1: Threshold between L (low temp.) and M (medium temp.) t2: Threshold between M (medium temp.) and H (high temps)		
001	Threshold: t2	*ENG	[20 or 30 / <b>25</b> / 1 deg/step]
002	Threshold: t1	*ENG	[0 or 15 / <b>15</b> / 1 deg/step]

3522	[Initial Process Control Set]		
	Adjusts the threshold for the process control at power on. When the current condition has changed by more than the values of these SPs when compared with the conditions at the previous operation, the process control at power on is executed.		
002	Non-use Time Setting	*ENG	[0 to 1440 / <b>360</b> / 1 minute/step]
003	Temperature Range	*ENG	[0 to 99 / <b>10</b> / 1 °C/step]
004	Relative Humidity Range	*ENG	[0 to 99 / <b>50</b> / 1 %RH/step]
005	Absolute Humidity Range	*ENG	[0 to 99 / <b>6</b> / 1 g/m <sup>3</sup> /step]
006	AIT Temperature Range	*ENG	[0 to 99 / <b>25</b> / 1 °C/step]
007	Vtref Temperature Range	*ENG	[0 to 99 / <b>20</b> / 1 °C/step]
100	[Rapi_timer]		
	Time Setting	*ENG	[0 to 255 / <b>30</b> / 1 sec/step]
Adjusts the time-out time for the Rapi timer.			

3531	[Non-use Time Process Control Set]		
	Adjusts the threshold for the process control at stand-by. When the current condition has changed by more than the values of these SPs when compared with the conditions at the previous operation, the process control at stand-by is executed.		
001	Non-use Time Setting	*ENG	[0 to 1440 / <b>360</b> / 1 minute/step]
002	Temperature Range	*ENG	[0 to 99 / <b>10</b> / 1 °C/step]
003	Relative Humidity Range	*ENG	[0 to 99 / <b>50</b> / 1 %RH/step]
004	Absolute Humidity Range	*ENG	[0 to 99 / <b>6</b> / 1 g/m <sup>3</sup> /step]
005	Maximum Execution Number	*ENG	Adjusts the maximum execution time for the process control at stand-by. [0 to 99 / <b>10</b> / 1 time/step]

3611	[Development Gamma: Display/Set]		
------	----------------------------------	--	--

001	Bk (Current)	*ENG	Displays the current development gamma for each color. [0 to 5 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
002	M (Current)	*ENG	
003	C (Current)	*ENG	
004	Y (Current)	*ENG	
005	Bk (Target Display)	*ENG	Displays the target development gamma for each color. [0 to 5 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
006	M (Target Display)	*ENG	
007	C (Target Display)	*ENG	
008	Y (Target Display)	*ENG	
009	Bk (Standard Target Set)	*ENG	Displays the standard target development gamma for each color. [0 to 5 / <b>0.8</b> / 0.01 mg/cm <sup>2</sup> /kV /step]
010	M (Standard Target Set)	*ENG	
011	C (Standard Target Set)	*ENG	
012	Y (Standard Target Set)	*ENG	
013	Environmental Correction	*ENG	Turns on or off the environmental correction for target development gamma. [0 or 1 / 1 / - ] 0: Not Correct, 1: Correct
014	K (Max Correction)	*ENG	Adjusts the maximum correction value for each color. These SPs are effective only when the setting of SP3-611-013 is set to "1". [0 to 5 / <b>0.15</b> / 0.01 mg/cm <sup>2</sup> /kv/ step]
015	M (Max Correction)	*ENG	
016	C (Max Correction)	*ENG	
017	Y (Max Correction)	*ENG	
018	K (Max Abs Hum)	*ENG	Adjusts the maximum humidity correction value for each color. These SPs are effective only when the setting of SP3-611-013 is set to "1". [1 to 99 / <b>20</b> / 1 g/m <sup>3</sup> /step]
019	M (Max Abs Hum)	*ENG	
020	C (Max Abs Hum)	*ENG	
021	Y (Max Abs Hum)	*ENG	
022	K (Min Correction)	*ENG	[0 to 0.1 / <b>0</b> / 0.01 mg/cm <sup>2</sup> /kv/ step]

3612	[Vk Display]		
	Displays Vk for each color.		
001	Bk	*ENG	[-300 to 300 / - / 1 V/step]
002	M	*ENG	
003	C	*ENG	
004	Y	*ENG	

3621	[Development DC Control: Disp]		
	Plain: High speed, Thick 1: Middle speed, Thick 2 & FINE: Low speed		
Displays the development DC bias adjusted with the process control for each line speed and color.			
001	Plain: Bk	*ENG	[0 to 800 / - / 1 -V/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	[0 to 800 / - / 1 -V/step]
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2 & FINE: Bk	*ENG	[0 to 800 / - / 1 -V/step]
010	Thick 2 & FINE: M	*ENG	
011	Thick 2 & FINE: C	*ENG	
012	Thick 2 & FINE: Y	*ENG	

3631	[Charge DC Control: Display]		
	Plain: High speed, Thick 1: Middle speed, Thick 2 & FINE: Low speed		
Displays the charge DC voltage adjusted with the process control for each line speed and color.			

001	Plain: Bk	*ENG	[0 to 2000 / - / 1 -V/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1 & FINE: Bk	*ENG	[0 to 2000 / - / 1 -V/step]
006	Thick 1 & FINE: M	*ENG	
007	Thick 1 & FINE: C	*ENG	
008	Thick 1 & FINE: Y	*ENG	
009	Thick 2 & FINE: Bk	*ENG	[0 to 2000 / - / 1 -V/step]
010	Thick 2 & FINE: M	*ENG	
011	Thick 2 & FINE: C	*ENG	
012	Thick 2 & FINE: Y	*ENG	

3641	[Charge AC Control: Display]		
	Plain: High speed		
Displays the charge AC voltage adjusted with the process control for each color.			
001	Plain: Bk	*ENG	[0 to 3 / - / 0.01 kV/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	

3651	[LD Power Control: Display]		
	Plain: High speed, Thick 1: Middle speed, Thick 2 & FINE: Low speed		
Displays the LD power adjusted for each environment.			



001	Plain: Bk	*ENG	[0 to 200 / - / 1 %/step]
002	Plain: M	*ENG	
003	Plain: C	*ENG	
004	Plain: Y	*ENG	
005	Thick 1: Bk	*ENG	[0 to 200 / - / 1 %/step]
006	Thick 1: M	*ENG	
007	Thick 1: C	*ENG	
008	Thick 1: Y	*ENG	
009	Thick 2 & FINE: Bk	*ENG	[0 to 200 / - / 1 %/step]
010	Thick 2 & FINE: M	*ENG	
011	Thick 2 & FINE: C	*ENG	
012	Thick 2 & FINE: Y	*ENG	

3710	[HST Concentration Control: Set]		
	TD Sensor: Toner Concentration Control Setting		
Selects the toner concentration control method by HST memory, which is in the TD sensor.			
001	Control Method: Selection	*ENG	[0 or 1 / 1 / - ] 0: Not Use, 1: Use

3711	[HST Concentration Control: Bk]		
	Displays the factory settings of the black PCDU.		
001	Vcnt	*ENG	[0 to 5 / - / 0.1 V/step]
002	Vt	*ENG	[0 to 5 / - / 0.1 V/step]
003	Sensitivity: HL	*ENG	[1.22 to 3.77 / - / 0.01 V/step]
004	Sensitivity: HM	*ENG	[0 to 2.55 / - / 0.01 V/step]
005	Sensitivity: ML	*ENG	
006	Set Detection	*ENG	[0 to 5 / - / 0.1 V/step]
007	Without Developer	*ENG	[0 to 5 / - / 0.1 V/step]

008	With Developer	*ENG	[0 to 5 / - / 0.1 V/step]
009	Serial Number 1	*ENG	[0 to 255 / - / 1 V/step]
010	Serial Number 2	*ENG	
011	Adjustment: Vt	*ENG	[0 to 5 / - / 0.1 V/step]
012	Adjustment: Vtref	*ENG	[0 to 5 / - / 0.1 V/step]
013	Adjustment: Vtcnt	*ENG	[0 to 5 / - / 0.01 V/step]
014	Adjustment: Gamma	*ENG	[0 to 2.55 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
015	Adjustment: Vcnt Result	*ENG	[0 to 9 / - / 1 /step]

3712	[HST Concentration Control: M]		
	Displays the factory settings of the magenta PCDU.		
001	Vcnt	*ENG	[0 to 5 / - / 0.1 V/step]
002	Vt	*ENG	[0 to 5 / - / 0.1 V/step]
003	Sensitivity: HL	*ENG	[1.22 to 3.77 / - / 0.01 V/step]
004	Sensitivity: HM	*ENG	[0 to 2.55 / - / 0.01 V/step]
005	Sensitivity: ML	*ENG	
006	Set Detection	*ENG	[0 to 5 / - / 0.1 V/step]
007	Without Developer	*ENG	[0 to 5 / - / 0.1 V/step]
008	With Developer	*ENG	[0 to 5 / - / 0.1 V/step]
009	Serial Number 1	*ENG	[0 to 255 / - / 1 V/step]
010	Serial Number 2	*ENG	
011	Adjustment: Vt	*ENG	[0 to 5 / - / 0.1 V/step]
012	Adjustment: Vtref	*ENG	[0 to 5 / - / 0.1 V/step]
013	Adjustment: Vtcnt	*ENG	[0 to 5 / - / 0.01 V/step]
014	Adjustment: Gamma	*ENG	[0 to 2.55 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
015	Adjustment: Vcnt Result	*ENG	[0 to 9 / - / 1 /step]

3713	[HST Concentration Control: C]		
	Displays the factory settings of the cyan PCDU.		
001	Vcnt	*ENG	[0 to 5 / - / 0.1 V/step]
002	Vt	*ENG	[0 to 5 / - / 0.1 V/step]
003	Sensitivity: HL	*ENG	[1.22 to 3.77 / - / 0.01 V/step]
004	Sensitivity: HM	*ENG	[0 to 2.55 / - / 0.01 V/step]
005	Sensitivity: ML	*ENG	
006	Set Detection	*ENG	[0 to 5 / - / 0.1 V/step]
007	Without Developer	*ENG	[0 to 5 / - / 0.1 V/step]
008	With Developer	*ENG	[0 to 5 / - / 0.1 V/step]
009	Serial Number 1	*ENG	[0 to 255 / - / 1 V/step]
010	Serial Number 2	*ENG	
011	Adjustment: Vt	*ENG	[0 to 5 / - / 0.1 V/step]
012	Adjustment: Vtref	*ENG	[0 to 5 / - / 0.1 V/step]
013	Adjustment: Vtcnt	*ENG	[0 to 5 / - / 0.01 V/step]
014	Adjustment: Gamma	*ENG	[0 to 2.55 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
015	Adjustment: Vcnt Result	*ENG	[0 to 9 / - / 1 /step]

3714	[HST Concentration Control: Y]		
	Displays the factory settings of the yellow PCDU.		
001	Vcnt	*ENG	[0 to 5 / - / 0.1 V/step]
002	Vt	*ENG	[0 to 5 / - / 0.1 V/step]
003	Sensitivity: HL	*ENG	[1.22 to 3.77 / - / 0.01 V/step]
004	Sensitivity: HM	*ENG	[0 to 2.55 / - / 0.01 V/step]
005	Sensitivity: ML	*ENG	
006	Set Detection	*ENG	[0 to 5 / - / 0.1 V/step]

007	Without Developer	*ENG	[0 to 5 / - / 0.1 V/step]
008	With Developer	*ENG	[0 to 5 / - / 0.1 V/step]
009	Serial Number 1	*ENG	[0 to 255 / - / 1 V/step]
010	Serial Number 2	*ENG	
011	Adjustment: Vt	*ENG	[0 to 5 / - / 0.1 V/step]
012	Adjustment: Vtref	*ENG	[0 to 5 / - / 0.1 V/step]
013	Adjustment: Vtcnt	*ENG	[0 to 5 / - / 0.01 V/step]
014	Adjustment: Gamma	*ENG	[0 to 2.55 / - / 0.01 mg/cm <sup>2</sup> /kV /step]
015	Adjustment: Vcnt Result	*ENG	[0 to 9 / - / 1 /step]

3800	[Waste Toner Full Detection]		
	Displays/ adjusts the toner collection bottle detection settings. These SPs are used for NRS.		
001	Condition	*CTL	[0 to 4 / 0 / 1 /step]
002	Detection Times	*CTL	[0 to 50 / 0 / 1 /step]
003	Print Page After Near Full	*CTL	[0 to 1000 / 0 / 1 sheet/step]
004	Pixel Count After Near Full	*CTL	[0 to 200000 / 0 / 1 cm <sup>2</sup> /step]
005	Pixel Count After Replacement	*CTL	Displays the pixel counter after replacement of toner collection bottle. [0 to 200000 / 0 / 1 cm <sup>2</sup> /step]
008	Coefficient	*ENG	[0.1 to 1.5 / 1 / 0.1 /step]
011	Notice Setting	*ENG	Enables or disables the calling for @Remote. [0 or 1 / 1 / -] 0: Enable @Remote calling 1: Disable @Remote calling
	<p><b>NOTE:</b></p> <p>If the toner collection bottle has been replaced before the machine detects used toner near full when this setting is set to "0", the machine cannot detect toner collection bottle near full. In that case, set SP3-902-017 to "1".</p>		

012	Day Threshold: Toner Collection bottle:NF	*ENG	[1 to 30 / 5 / 1 day/step]
	Sets the threshold days for the near-full display. The near-full of the toner collection bottle is displayed after the toner collection full sensor has detected the actuator in the toner collection bottle.		
013	Total:Toner Collection Bottle	*ENG	Displays the total amount of the used toner. [0 to 999999999 / 0 / 1]
014	Mechanism Full Detection Date	*ENG	Displays the date of the full detection for the toner collection bottle.

3900	[Waste Toner New Detection]		
	Turns toner collection bottle full detection on or off.		
001	ON/OFF Setting	*ENG	[0 or 1 / 1 / -] 0: OFF, 1: ON

3901	[New PCU Detection]		
	Turns new PCDU detection on or off.		
001	ON/OFF Setting	*ENG	[0 or 1 / 1 / -] 0: OFF, 1: ON

3902	[Manual New Unit Set]		
	Turns the new unit detection flag for each PM unit on or off. The use of these counters is explained in the PM section and in the relevant parts of section 3 (Replacement and Adjustment).		
001	Development Unit: Bk	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON
002	Development Unit: Y	*ENG	
003	Development Unit: C	*ENG	
004	Development Unit: M	*ENG	

005	Developer: Bk	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON
006	Developer: Y	*ENG	
007	Developer: C	*ENG	
008	Developer: M	*ENG	
009	PCU: Bk	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON
010	PCU: Y	*ENG	
011	PCU: C	*ENG	
012	PCU: M	*ENG	
013	Image Transfer Unit	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON  Do not use 3902-013 if you only change the cleaning unit. 3902-015: This is for the image transfer belt cleaning unit.
014	Fusing Unit	*ENG	
015	Cleaning Unit	*ENG	
016	Paper Transfer Unit	*ENG	
017	Toner Collection Bottle	*ENG	
018	Fusing Roller (Heating Roller)	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON "Fusing Roller" is designated as "Heating Roller" in this manual.
019	Pressure Roller	*ENG	
020	Pump Unit: Bk	*ENG	[0 or 1 / 0 / -] 0: OFF, 1: ON
021	Pump Unit: M	*ENG	
022	Pump Unit: C	*ENG	
023	Pump Unit: Y	*ENG	

## Main SP Tables-4

### SP4-XXX (Scanner)

4008	[Sub Scan Mag.Adjustment]		
	Adjusts the sub-scan magnification by changing the scanner motor speed.		
001	-	*ENG	[-1.0 to 1.0 / <b>0</b> / 0.1%/step] <b>FA</b>
4010	[L-Edge Regist Adjustment]		
	Adjusts the leading edge registration by changing the scanning start timing in the sub-scan direction.		
001	-	*ENG	[-2.0 to 2.0 / <b>0</b> / 0.1 mm/step] <b>FA</b>
4011	[S-to-S Regist Adjustment]		
	Adjusts the side-to-side registration by changing the scanning start timing in the main scan direction.		
001	-	*ENG	[-2.5 to 2.5 / <b>0</b> / 0.1 mm/step ] <b>FA</b>
4012	[Scanner Erase Margin: Scale]		
	Sets the blank margin at each side for erasing the original shadow caused by the gap between the original and the scale.		
001	Book: Leading Edge	*ENG	[0 to 3.0 / <b>0</b> / 0.1 mm/step ] <b>FA</b>
002	Book: Trailing Edge		
003	Book: Left		
004	Book: Right		
005	ADF: Leading Edge	*ENG	[0 to 3.0 / <b>0</b> / 0.1 mm/step ] <b>FA</b>
007	ADF: Right		
008	ADF: Left		

4013	[Scanner Free Run]		
	Performs the scanner free run with the exposure lamp on or off in the following mode. Full color mode / Full Size / A3 or DLT		
001	Lamp: OFF	*ENG	[0 or 1 / 0 / -]
002	Lamp: ON		0: OFF, 1: ON

4014	[Scan]		
	Execute the scanner free fun with each mode.		
001	HP Detection Enable	-	Scanner free run with HP sensor check.
002	HP Detection Disable	-	Scanner free run without HP sensor check.

4020	[Dust Check]		
001	Dust Detect:On/Off	*ENG	Turns the ADF scan glass dust check on/ off. [0 or 1 / 0 / 1 /step] 0: OFF, 1: ON
002	Dust Detect:Lvl	*ENG	Selects the detect level. [0 to 8 / 4 / 1 /step] 0: lowest detection level 8: highest detection level
003	Dust Reject:Lvl	*ENG	Selects the level of the sub scan line correction when using the ARDF. [0 to 4 / 0 / 1 /step] 0: Off 1: Weakest 2: Weak 3: Strong 4: Strongest
011	Dust Detect:On/Off:Rear	*ENG	Not used
012	Dust Detect:Lvl:Rear	*ENG	Not used



4301	[APS Operation Check]		
	Displays a code that represents the original size detected by the original sensors. See "Input Check Table" (p.375).		
001	APS Operation Check	-	-

4303	[APS Min. Size]		
	Specifies the result of the detection when the outputs from the original sensors are all OFF.		
001	-	*ENG	[0 to 2 / 0 / 1 /step] 0: No Original 1: A5-Lengthwise (16K SEF if 4305 is set to 3)

4305	[8K/16K Detection]		
	This program enables the machine to automatically recognize the 8K/16K size.		
001	-	*ENG	[0 to 3 / 0 / 1 /step] 0: Normal Detection (the machine detects A4/LT size as A4 or LT, depending on the paper size setting) 1: A4-Sideways LT-Lengthwise 2: LT-Sideways A4-Lengthwise 3: 8K 16K

4308	[Scan Size Detection]		
001	Detection ON/OFF	*ENG	[0 or 1 / 1 / -] 0: OFF 1: ON
	Turns on or off the CCD original size detection. This detection is used only when an original is scanned in book scanning mode.		

4309	[Scan Size Detect:Setting]		
------	----------------------------	--	--

001	Original Density Thresh	*ENG	[0 to 255 / <b>32</b> / 1 digit/step]
	Specifies the threshold between an original area and non-original area for the scan original size detection in book scanning mode.		
002	Detection Time	*ENG	[20 to 100 / <b>60</b> / 20 msec/step]
	Specifies the detection time for the scan original size detection in book scanning mode.		
003	Lamp ON:Delay Time	*ENG	[0 to 200 / <b>40</b> / 20 msec/step]
	Specifies the lamp on timing for the scan original size detection in book scanning mode.		
004	LED PWM Duty	*ENG	[0 to 100 / <b>60</b> / 1/step]
	Sets the LED lamp intensity.		

4310	[Scan Size Detect Value]		
	Displays the detected value by CCD. Each detection point for paper size and color is displayed on the LCD.		
001	S1:R	*ENG	[0 to 255 / - / 1 digit/step]
002	S1:G	*ENG	
003	S1:B	*ENG	
004	S2:R	*ENG	
005	S2:G	*ENG	
006	S2:B	*ENG	
007	S3:R	*ENG	
008	S3:G	*ENG	
009	S3:B	*ENG	

4400	[Scanner Erase Margin]	*ENG	
	Set the Mask for Original. These SPs set the area to be masked during platen (book) mode scanning.		

001	Book: Leading Edge	[0 to 3.0 / 0 / 0.1 mm/step]
002	Book: Trailing Edge	
003	Book: Left	
004	Book: Right	
005	ADF: Leading Edge	
007	ADF: Right	
008	ADF: Left	

4417	[IPU Test Pattern]	
	Selects the IPU test pattern.	
001	Test Pattern Selection	[0 to 24 / 0 / 1/step ]
	0: Scanned image 1: Gradation main scan A 2: Gradation main scan B 3: Gradation main scan C 4: Gradation main scan D 5: Gradation sub scan (1) 6: Grid pattern 7: Slant grid pattern 8: Gradation RGBCMYK 9: UCR pattern 10: Color patch 16 (1) 11: Color patch 16 (2) 12: Color patch 64	13: Grid pattern CMYK 14: Color patch CMYK 15: Gray pattern (1) 16: Gray pattern (2) 17: Gray Pattern (3) 18: Shading pattern 19: Thin line pattern 20: Scanned + Grid pattern 21: Scanned + Gray scale 22: Scanned + Color patch 23: Scanned + Slant Grid C 24: Scanned + Slant Grid D

4429	[Illegal Copy Output]		
001	Copy	*ENG	[0 to 3 / 3 / 1 /step]
002	Scanner		
003	Fax		

4450	[Scan Image Path Selection]	
001	Black Subtraction ON/OFF	[0 or 1 / 1 / - ] 0: OFF, 1: ON
	Uses or does not use the black reduction image path.	
002	SH ON/OFF	[0 or 1 / 0 / 1 /step] 0: ON, 1: OFF
	Uses or does not use the shading image path.	

4501	[ACC Target Den]		
	Selects the ACC result.		
001	Copy: K: Text	* ENG	[0 to 10 / 5 / 1 /step] 10: Darkest density
002	Copy: C: Text	* ENG	
003	Copy: M: Text	* ENG	
004	Copy: Y: Text	* ENG	
005	Copy: K: Photo	* ENG	
006	Copy: C: Photo	* ENG	
007	Copy: M: Photo	* ENG	
008	Copy: Y: Photo	* ENG	

4505	[ACC Cor:Bright]		
	Adjusts the offset correction for light areas of the ACC pattern.		
001	Text:K	* ENG	[-128 to 127 / 0 / 1 /step]
002	Text:C	* ENG	
003	Text:M	* ENG	
004	Text:Y	* ENG	
005	Photo:K	* ENG	[-128 to 127 / 0 / 1 /step]
006	Photo:C	* ENG	
007	Photo:M	* ENG	
008	Photo:Y	* ENG	

4506	[ACC Cor:Dark]		
	Adjusts the offset correction for dark areas of the ACC pattern.		
001	Text:K	*ENG	[-128 to 127 / 0 / 1 /step]
002	Text:C	*ENG	
003	Text:M	*ENG	
004	Text:Y	*ENG	
005	Photo:K	*ENG	[-128 to 127 / 0 / 1 /step]
006	Photo:C	*ENG	
007	Photo:M	*ENG	
008	Photo:Y	*ENG	

4540	[Print Coverage]		
	This SP corrects the printer coverage of 12 hues (RY, YR, YG, etc. x 4 Colors [R, G, B, Option]) for a total of 48 parameters.		
001-004	RY Phase: Option/R/G/B	*ENG	Specifies the printer vector correction value. [0 to 255 / 0 / 1 /step]
005-008	YR Phase: Option/R/G/B		
009-012	YG Phase: Option/R/G/B		
013-016	GY Phase: Option/R/G/B		
017-020	GC Phase: Option/R/G/B		
021-024	CG Phase: Option/R/G/B		
025-028	CB Phase: Option/R/G/B		
029-032	BC Phase: Option/R/G/B		
033-036	BM Phase: Option/R/G/B		
037-040	MB Phase: Option/R/G/B		
041-044	MR Phase: Option/R/G/B		
045-048	RM Phase: Option/R/G/B		

4600	[SBU Version Display]		
001	SBU ID	*ENG	Displays the ID of the SBU.
002	GASBU-N ID	*ENG	Displays the ID of the GASBU.
003	VSP5100 ID	*ENG	Displays the ID of the VSP5100.

4602	[Scanner Memory Access]		
001	Scanner Memory Access	-	Enables the read and write check for the SBU registers.

4603	[AGC Execution]		
001	HP Detection Enable	-	Executes the AGC.
002	HP Detection Disable	-	<b>DFU</b>

4609	[Gray Balance Set: R]		
001	Book Scan	*ENG	[-512 to 511 / <b>-46</b> / 1 digit/step]
002	DF Scan	*ENG	[-512 to 511 / <b>-46</b> / 1 digit/step]

4610	[Gray Balance Set: G]		
001	Book Scan	*ENG	[-384 to 255 / <b>-20</b> / 1 digit/step]
002	DF Scan		

4611	[Gray Balance Set: B]		
001	Book Scan	*ENG	[-384 to 255 / <b>-28</b> / 1 digit/step]
002	DF Scan		

4623	[Black Level Adj. Display] RE: Red Even signal, RO: Red Odd signal		
001	Latest: RE Color	*ENG	Displays the black offset value for the even red signal in the CCD circuit board. [0 to 16383 / <b>0</b> / 1 digit/step]

002	Latest: RO Color	*ENG	Displays the black offset value for the odd red signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
-----	------------------	------	---

4624	[Black Level Adj. Display] GE: Green Even signal, GO: Green Odd signal		
001	Latest: GE Color	*ENG	Displays the black offset value for the even green signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Latest: GO Color	*ENG	Displays the black offset value for the odd green signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4625	[Black Level Adj. Display] BE: Blue Even signal, BO: Blue Odd signal		
001	Latest: BE Color	*ENG	Displays the black offset value for the even blue signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Latest: BO Color	*ENG	Displays the black offset value for the odd blue signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4628	[Analog Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Red.		
001	Latest: R Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4629	[Analog Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Green.		
001	Latest: G Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4630	[Analog Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Blue.		
001	Latest: B Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4631	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Red.		
001	Latest: RE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Latest: RO Color	*ENG	

4632	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Green.		
001	Latest: GE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Latest: GO Color	*ENG	

4633	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Blue.		
001	Latest: BE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Latest: BO Color	*ENG	

4645	[Scan Adjust Error]		
001	White level	*ENG	[0 to 65535 / - / 1 digit/step]
002	Black level	*ENG	

4647	[Scanner Hard Error]		
	Displays the result of the SBU connection check.		
001	Power-ON	*ENG	[0 to 35535 / - / 1 digit /step] 0: OK, Other: SBU connection check failure If the SBU connection check fails, SC144 occurs.



4654	[Black Level Adj. Display] RE: Red Even signal, RO: Red Odd signal		
001	Last Correct Value: RE Color	*ENG	Displays the black offset value for the even red signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Last Correct Value: RO Color	*ENG	Displays the black offset value for the odd red signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4655	[Black Level Adj. Display] GE: Green Even signal, GO: Green Odd signal		
001	Last Correct Value: GE Color	*ENG	Displays the black offset value for the even green signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Last Correct Value: GO Color	*ENG	Displays the black offset value for the odd green signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4656	[Black Level Adj. Display] BE: Blue Even signal, BO: Blue Odd signal		
001	Last Correct Value: BE Color	*ENG	Displays the black offset value for the even blue signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]
002	Last Correct Value: BO Color	*ENG	Displays the black offset value for the odd blue signal in the CCD circuit board. [0 to 16383 / 0 / 1 digit/step]

4658	[Analog Gain Adjust]		
	Displays the previous gain value of the amplifiers on the controller for Red.		
001	Last Correct Value: R Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4659	[Analog Gain Adjust]		
	Displays the previous gain value of the amplifiers on the controller for Green.		
001	Last Correct Value: G Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4660	[Analog Gain Adjust]		
	Displays the previous gain value of the amplifiers on the controller for Blue.		
001	Last Correct Value: B Color	*ENG	[0 to 7 / 0 / 1 digit/step]

4661	[Digital Gain Adjust] RE: Red Even signal, RO: Red Odd signal		
001	Last Correct Value: RE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Last Correct Value: RO Color	*ENG	

4662	[Digital Gain Adjust] GE: Green Even signal, GO: Green Odd signal		
001	Last Correct Value: GE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Last Correct Value: GO Color	*ENG	

4663	[Digital Gain Adjust] BE: Blue Even signal, BO: Blue Odd signal		
001	Last Correct Value: BE Color	*ENG	[0 to 1023 / 0 / 1 digit/step]
002	Last Correct Value: BO Color	*ENG	

4673	[Black Level Adj. Display] RE: Red Even signal, RO: Red Odd signal		
	001	Factory Setting: RE Color	*ENG
			Displays the factory setting values of the black level adjustment for the even red signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]
	002	Factory Setting: RO Color	*ENG
			Displays the factory setting values of the black level adjustment for the odd red signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]

4674	[Black Level Adj. Display] GE: Green Even signal, GO: Green Odd signal		
001	Factory Setting: GE Color	*ENG	Displays the factory setting values of the black level adjustment for the even green signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]
002	Factory Setting: GO Color	*ENG	Displays the factory setting values of the black level adjustment for the odd green signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]

4675	[Black Level Adj. Display] BE: Blue Even signal, BO: Blue Odd signal		
001	Factory Setting: BE Color	*ENG	Displays the factory setting values of the black level adjustment for the even blue signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]
002	Factory Setting: BO Color	*ENG	Displays the factory setting values of the black level adjustment for the odd blue signal in the CCD circuit board. [0 to 16383 / - / 1 digit/step]

4677	[Analog Gain Adjust] Displays the factory setting values of the gain adjustment for Red.		
001	Factory Setting: R Color	*ENG	[0 to 7 / - / 1 digit/step]

4678	[Analog Gain Adjust] Displays the factory setting values of the gain adjustment for Green.		
001	Factory Setting: G Color	*ENG	[0 to 7 / - / 1 digit/step]

4679	[Analog Gain Adjust] Displays the factory setting values of the gain adjustment for Blue.		
------	--	--	--

001	Factory Setting: B Color	*ENG	[0 to 7 / - / 1 digit/step]
-----	--------------------------	------	-----------------------------

4680	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Red.		

001	Factory Setting: RE Color	*ENG	[0 to 1023 / - / 1 digit/step]
002	Factory Setting: RO Color	*ENG	

4681	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Green.		

001	Factory Setting: GE Color	*ENG	[0 to 1023 / - / 1 digit/step]
002	Factory Setting: GO Color	*ENG	

4682	[Digital Gain Adjust]		
	Displays the gain value of the amplifiers on the controller for Blue.		

001	Factory Setting: BE Color	*ENG	[0 to 1023 / - / 1 digit/step]
002	Factory Setting: BO Color	*ENG	

4688	[Scan Image Density Adjustment]		
	Adjusts the white shading parameter when scanning an image with the ARDF or 1-pass DF.		
	Adjusts the density level if the ID of outputs made in the DF and Platen mode is different.		

001	ARDF	*ENG	[80 to 120 / <b>98</b> / 1%/ step]
002	1-pass DF	*ENG	[80 to 120 / <b>98</b> / 1%/ step]

4690	[White Level Peak Read]		
	Displays the peak level of the white level scanning. If these scanned white levels are out of the correct range, SC142 may be issued.		

001	RE	*ENG	[0 to 1023 / - / 1 digit/step]
002	RO	*ENG	

4691	[White Level Peak Read]		
	Displays the peak level of the white level scanning. If these scanned white levels are out of the correct range, SC142 may be issued.		
001	GE	*ENG	[0 to 1023 / - / 1 digit/step]
002	GO	*ENG	

4692	[White Level Peak Read]		
	Displays the peak level of the white level scanning. If these scanned white levels are out of the correct range, SC142 may be issued.		
001	BE	*ENG	[0 to 1023 / - / 1 digit/step]
002	BO	*ENG	

4693	[Black Level Peak Read]		
	Displays the level of the black level scanning. If these scanned black levels are out of the correct range, SC141 may be issued.		
001	RE	*ENG	[0 to 1023 / - / 1 digit/step]
002	RO	*ENG	

4694	[Black Level Peak Read]		
	Displays the level of the black level scanning. If these scanned black levels are out of the correct range, SC141 may be issued.		
001	GE	*ENG	[0 to 1023 / - / 1 digit/step]
002	GO	*ENG	

4695	[Black Level Peak Read]		
	Displays the level of the black level scanning. If these scanned black levels are out of the correct range, SC141 may be issued.		
001	BE	*ENG	[0 to 1023 / - / 1 digit/step]
002	BO	*ENG	

4796	[Low Density Color Correction]		
001	Front Side	*ENG	[0 or 1 / 0 / -] 0: Off, 1: On
	Turns on or off the low color density correction for the front side of originals.		
002	Rear Side	*ENG	[0 or 1 / 0 / -] 0: Off, 1: On
	Turns on or off the low color density correction for the back side of originals.		

4802	[DF Shading FreeRun]		
001	Lamp OFF	*ENG	Executes the scanner free run of shading movement with exposure lamp on or off. Press "OFF" to stop this free run. Otherwise, the free run lasts.
002	Lamp ON		

4804	[Home Position]		
001	-	*ENG	Executes the scanner HP detection.

4806	[Carriage Save]		
001	-	*ENG	Moves the carriage from the scanner home position. Dust may fall through the DF exposure glass. Therefore, do this SP when you transport the machine a long distance.

4807	[SBU Test Pattern Change]		
001	-	*ENG	[0 to 255 / 0 / 1 /step] <b>0: Scanning image</b> 1: Fixed pattern 2: Main scanning gradation 3: Sub scanning gradation 4: Grid pattern (5 to 255 : Scanning images)

4808	[Factory Setting Input]		
002	Execution Flag	*ENG	[0 or 1 / 0 / 1 /step]

4902	[Disp ACC Data]		
	This SP outputs the final data read at the end of ACC execution. A zero is returned if there was an error reading the data. [0 to 255 / - / 1 /step]		
001	R DATA1	*ENG	Photo C Patch Level 1 (8-bit)
002	G DATA1	*ENG	Photo M Patch Level 1 (8-bit)
003	B DATA1	*ENG	Photo Y Patch Level 1 (8-bit)
004	R DATA2	*ENG	Photo C Patch Level 17 (8-bit)
005	G DATA2	*ENG	Photo M Patch Level 17(8-bit)
006	B DATA2	*ENG	Photo Y Patch Level 17 (8-bit)

4918	[Man Gamma:Pht:Y]		
	Adjusts the offset data of the printer gamma for yellow in Photo mode. See "Printer Gamma Correction" in the "Main chapters: 4. Replacement and Adjustment: Image Adjustment" for how to use.		
009	-	*ENG	Enter the manual gamma adjustment screen (-001 to 008).

4954	[Read/Restore Std]		
001	Read New Chart	*ENG	Execute the scanning of the A4 chart.
002	Recall Prev Chart	*ENG	Clear the data of the scanned A4 chart.
003	Read Std Chart	*ENG	Execute the scanning of the A4 standard chart.
004	Set Std Chart	*ENG	Overwrite the standard data.
005	Chromaticity Rank	*ENG	Restores the standard chromaticity rank.

4991	[IPU Image Pass Selection]		
	Selects the image path. Enter the number to be selected using the 10-key pad.		
001	RGB Frame Memory	*ENG	[0 to 11 / 2 / 1 /step ]
	0: Scanner input RGB images 1: Scanner I/F RGB images 2: RGB images done by Shading correction (Shading ON, Black offset ON) 3: Shading data 4 to 11: Not used		
4993	[High Light Correction]		
001	Sensitivity Selection	*ENG	Selects the Highlight correction level. [0 to 9 / 4 / 1 /step] 0: weakest sensitivity 9: strongest sensitivity
002	Range Selection	*ENG	Selects the range level of Highlight correction. [0 to 9 / 4 / 1 /step] 0: weakest skew correction, 9: strongest skew correction
4994	[Text/Photo Detection Level Adj.]		
	Selects the definition level between Text and Photo for high compression PDF.		
001	High Compression PDF	*ENG	[0 to 2 / 1 / 1 /step] 0: Text priority 1: Normal 2: Photo priority



## Main SP Tables-5

### SP5-XXX (Mode)

5024	[mm/inch Display Selection]		
	Display units (mm or inch) for custom paper sizes.		
001	0:mm 1:inch	*CTL	0: mm (Europe/Asia) 1: inch (USA)
5045	[Accounting counter]		
	Selects the counting method. <b>NOTE:</b> The counting method can be changed only once, regardless of whether the counter value is negative or positive.		
001	Counter Method	*CTL	[0 or 1 / 1 / -] 0: Developments 1: Prints
5047	[Paper Display]		
	Turns on or off the printed paper display on the LCD.		
001	Backing Paper	*CTL	[0 or 1 / 0 / -] 0: OFF, 1: ON
5051	[TonerRefillDetectionDisplay]		
	Enables or disables the toner refill detection display.		
5051 1	-	*CTL	[0 or 1 / 0 / -] Alphanumeric 0: ON 1: OFF
5055	[Display IP Address]		
	Display or does not display the IP address on the LCD.		

001	-	*CTL	[0 or 1 / 0 / -] 0: OFF 1: ON
-----	---	------	----------------------------------

5056	[Coverage Counter Display]		
	Display or does not display the coverage counter on the LCD.		
001	-	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display

5061	[Toner Remaining Icon Display Change]		
	Display or does not display the remaining toner display icon on the LCD.		
001	-	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display

5062	[Parts Replacement Alert Display]		
	Display or does not display the PM part yield on the LCD.		
001	Drum Unit: Bk	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display
002	Drum Unit: M	*CTL	
003	Drum Unit: C	*CTL	
004	Drum Unit: Y	*CTL	
005	Development Unit: Bk	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display
006	Development Unit: M	*CTL	
007	Development Unit: C	*CTL	
008	Development Unit: Y	*CTL	
009	Developer: Bk	*CTL	[0 or 1 / 0 / -] 0: Not display, 1: Display
010	Developer: M	*CTL	
011	Developer: C	*CTL	
012	Developer: Y	*CTL	

013	Image Transfer Belt	*CTL	[0 or 1 / <b>0</b> / -] 0: Not display, 1: Display
014	Image Transfer Cleaning Unit	*CTL	
015	Fusing Unit	*CTL	
016	Paper Transfer Roller Unit	*CTL	
017	Waster Toner bottle	*CTL	
018	Fusing Roller	*CTL	
019	Pressure Roller	*CTL	

5066	[PM Parts Display] Display or does not display the "PM parts" button on the LCD.		
001	-	*CTL	[0 or 1 / <b>0</b> / -] 0: Not display, 1: Display

5067	[Part Replacement Operation Type]		
	Selects the service maintenance or user maintenance for each PM parts. If the user service is selected, PM alert is displayed on the LCD.		
001	Drum Unit: Bk	*CTL	[ <b>0: Service</b> ] or [1: User]
002	Drum Unit: M	*CTL	
003	Drum Unit: C	*CTL	
004	Drum Unit: Y	*CTL	
005	Development unit: Bk	*CTL	[ <b>0: Service</b> ] or [1: User]
006	Development unit: M	*CTL	
007	Development unit: C	*CTL	
008	Development unit: Y	*CTL	

009	Developer: Bk	*CTL	[0: Service] or [1: User]
010	Developer: M	*CTL	
011	Developer: C	*CTL	
012	Developer: Y	*CTL	
013	Image Transfer Belt	*CTL	[0: Service] or [1: User]
014	Image Transfer Cleaning Unit	*CTL	[0: Service] or [1: User]
015	Fusing Unit	*CTL	[0: Service] or [1: User]
016	Paper Transfer Roller Unit	*CTL	[0: Service] or [1: User]
017	Waste Toner bottle	*CTL	[0: Service] or [1: User]
018	Fusing Roller	*CTL	[0: Service] or [1: User]
019	Pressure Roller	*CTL	[0: Service] or [1: User]

5071	[Set Bypass Paper Size Display]		
001	-	*CTL	[0 or 1 / 0 / -] 0: Off, 1: On
	Turn on or off the paper size confirmation pop-up on the LED. This pop-up prevents mismatching between a paper size selected by the operation panel and an actual paper size on the by-pass tray.		

5074	[Home Screen Login] Sets the application that appears when the home key is pressed.		
091	(0:OFF 1:SDK 2:Reserve)	*CTL	<b>0: Function disable</b> 1: SDK application 2: Legacy application (reserved)
092	Product ID	*CTL	Sets the Application product ID. [0x00 to 0xffff / - / 1/step]
093	Application ID	*CTL	Sets the display category of the application that is specified in the SP5075-001,002 [0 to 255 / 0 / 1/step]

5075	[USB Keyboard] Sets the function of the external keyboard.		
001	Function Setting	*CTL	<b>0: Disable</b> 1: Enable

002	Keyboard Type Setting	<p>Sets the external keyboard type.</p> <p><b>0: None</b></p> <p>1: English (NA)</p> <p>2: Turkish</p> <p>3: Korean</p> <p>4: Chinese (Simplified)</p> <p>5: Chinese (Traditional)</p> <p>6: English (UK)</p> <p>7: French (France)</p> <p>8: French (Belgium)</p> <p>9: French (Canada)</p> <p>10: German</p> <p>11: Italian</p> <p>12: Spanish</p> <p>13: Spanish (Latin America)</p> <p>14: Dutch</p> <p>15: Norwegian</p> <p>16: Danish</p> <p>17: Swedish</p> <p>18: Portuguese</p> <p>19: Portuguese (Brazil)</p> <p>20: Finnish</p> <p>21: Catalan</p> <p>22: Portuguese</p> <p>23: Hungarian</p> <p>24: Czech</p> <p>25: Russian</p> <p>26: Japanese</p> <p>27: Greek</p>
-----	-----------------------	---

5104*	[Counter: Size Setting] A3/DLT Double Count ( <b>SSP</b> )		
	Specifies whether the counter is doubled for A3/DLT. "Yes" counts except from the bypass tray. When "Yes" is selected, A3 and DLT paper are counted twice, that is A4 x2 and LT x2 respectively. <b>Default setting: Yes</b>		

5113	[Optional Counter Type]		
001	Default Optional Counter Type	*CTL	This program specifies the counter type. <b>0: None</b> , 1: Key card (RK 3, 4) 2: Key card (down), 3: Prepaid card 4: Coin rack, 5: MF key card 8: Key counter + Vendor 9: Bar-code Printer
002	External Optional Counter Type	*CTL	This program specifies the external counter type. <b>0: None</b> 1: Expansion Device 1 2: Expansion Device 2 3: Expansion Device 3

5114	[Optional Counter I/F]		
001	MF Key Card Extension	*CTL	<b>[0: Not installed/</b> 1: Installed (scanning accounting)]

5118	[Disable Copying]		
	This program disables copying.		
001	-	*CTL	<b>[0: Not disabled/</b> 1: Disabled]

5120	[Mode Clear Opt. Counter Removal]		
	This program updates the information on the optional counter. When you install or remove an optional counter, check the settings.		
001	-	*CTL	<b>[0: Yes (removed)/</b> 1: Standby (installed but not used)/ 2: No (not removed)]

5121	[Counter Up Timing]		
	This program specifies when the counter goes up. The settings refer to "paper feed" and "paper exit" respectively.		
001	0:Feed 1:Exit	*CTL	[0: Feed/ 1: Exit]

5126	[F Size Original Setting]		
	Selects F size original setting.		
001	-	*ENG	[0 to 2 / 0 / 1 /step] 0: 8 1/2" x 13" (Foolscap) 1: 8 1/4" x 13" (Folio) 2: 8" x 13" (F)

5127	[APS Mode]		
	This program disables the APS.		
001	-	*CTL	[0: Not disabled/ 1: Disabled]

5131	[Paper Size Type Selection]		
	The program selects a paper size system from the following alternatives: the AB system (0), the LT system (1), and the AF system (2).		
001	-	*ENG	[0: JP (Japan)/ 1: NA / 2: EU]

5148	Size Detection Off	*CTL	[0: OFF/ 1: ON]
	0: Detect 1: Not Detect		

5150	[Bypass Length Setting]		
	Determines whether the transfer sheet from the by-pass tray is used or not. Normally the paper length for sub scanning paper from the by-pass tray is limited to 600 mm, but this can be extended with this SP to 1260 mm.		
001	0: OFF 1: ON	*CTL	[0: OFF/ 1: ON]



5162	[App. Switch Method]	*CTL	[0: Soft Key Set/ 1: Hard Key Set]
001	This program specifies the switch that selects an application program.		

5167	[Fax Printing Mode at Optional Counter Off]		
	Enables or disables the automatic print out without an accounting device. This SP is used when the receiving fax is accounted by an external accounting device.		
001	-	*CTL	[0 or 1 / 0 / -] 0: Automatic printing 1: No automatic printing

5169	[CE Login]		
	If you will change the printer bit switches, you must 'log in' to service mode with this SP before you go into the printer SP mode.		
001	CE Login	*CTL	[0 or 1 / 0 / -] 0: Disabled 1: Enabled

5181	[Size Adjust]		
	Adjusts the paper size for each tray.		
001	TRAY 1	*ENG	[0 to 3 / 0 (EU/ASIA), 1 (NA) / 1 /step] 0: A4 LEF, 1: LT LEF, 2: B5 LEF, 3: A5 LEF
002	TRAY 2: 1	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A4 LEF, 1: LT LEF
003	TRAY 2: 2	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A3, 1: DLT
004	TRAY 2: 3	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B4, 1: LG
005	TRAY 2: 4	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B5 LEF, 1: Exe LEF

006	TRAY 3/T-LCT: 1	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A4 LEF, 1: LT LEF
007	TRAY 3: 2	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A3, 1: DLT
008	TRAY 3: 3	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B4, 1: LG
009	TRAY 3: 4	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B5 LEF, 1: Exe LEF
010	TRAY 4: 1	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A4 LEF, 1: LT LEF
011	TRAY 4: 2	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: A3, 1: DLT
012	TRAY 4: 3	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B4, 1: LG
013	TRAY 4: 4	*ENG	[0 or 1 / 0 (EU/ASIA), 1 (NA) / -] 0: B5 LEF, 1: Exe LEF
018	LCT	*ENG	[0 to 2 / 0 (EU/ASIA), 1 (NA) / -] 0: A4LEF, 1: LTLEF, 2: B5LEF

5186	[RK 4]		
	Enables or disables the prevention for RK4 (accounting device) disconnection. If the RK4 is disconnected for 10 seconds when this SP is set to "1 (Enable)", the machine automatically jams a sheet of paper and stops.		
001	-	*ENG	[0 or 1 / 0 / 1/step] 0: Disable 1: Enable

5188	[Copy Nv Version]		
	Displays the version number of the NVRAM on the controller board.		
001	-	-	-

5193	[External Controller Info. Settings]		
001	-	-	<p>Sets the external controller type. This setting is appropriately adjusted if an external controller is installed in the machine.</p> <p>[0 to 10 / 0 / 1/step]</p> <p>0: No external controller installed</p> <p>1: EFI controller</p> <p>2: Ratio controller</p> <p>3: Egret controller</p> <p>4 to 10: Reserved</p>
5199	[Paper Exit After Staple End.]		
001	-	*CTL	<p>[ 0 or 1 / 0 / -]</p> <p>0: OFF, 1: ON</p>
	<p>Enables or disables the paper feeding out from the finisher without stapling.</p> <ul style="list-style-type: none"> <li>• If this setting is "1: ON", paper is fed out without stapling at the maximum number of the finisher stapling when the machine gets a multiple printing job (over maximum number).</li> <li>• If this setting is "0: OFF", paper is fed out with stapling at the maximum number of the finisher stapling when the machine gets a multiple printing job (over maximum number).</li> </ul>		
5212	[Page Numbering]	*CTL	
	<p>This program adjusts the position of the second side page numbers.</p> <p>A "- value" moves the page number positions to the left edge. A "+ value" moves the page number positions to the right edge.</p>		
003	Duplex Printout Right/Left Position		[-10 to 10 / 0 / 1 mm/step]
004	Duplex Printout High/Low Position		[-10 to 10 / 0 / 1 mm/step]

5302	[Set Time]		
	Adjusts the RTC (real time clock) time setting for the local time zone. Examples: For Japan (+9 GMT), enter 540 (9 hours x 60 min.) DOM: +540 (Tokyo) NA: -300 (New York) EU: + 60 (Paris) CH: +480 (Peking) TW: +480 (Taipei) AS: +480 (Hong Kong)		
002	Time Difference	*CTL #	[-1440 to 1440 / -300 / 1 min./step]

5307	[Summer Time]		
001	Setting	-	[ 0 to 1 / NA, EU, ASIA / 1 /step] 0: Disabled 1: Enabled NA and EUR: 1, ASIA: 0
	Enables or disables the summer time mode. <b>Note</b> <ul style="list-style-type: none"> <li>Make sure that both SP5-307-3 and -4 are correctly set. Otherwise, this SP is not activated even if this SP is set to "1".</li> </ul>		

	Rule Set (Start)	-	-
003	<p>Specifies the start setting for the summer time mode.</p> <p>There are 8 digits in this SP. For months 1 to 9, the "0" cannot be input in the first digit, so the eight-digit setting for -2 or -3 becomes a seven-digit setting.</p> <p>1st and 2nd digits: The month. [1 to 12]  3rd digit: The week of the month. [1 to 5]  4th digit: The day of the week. [0 to 6 = Sunday to Saturday]  5th and 6th digits: The hour. [00 to 23]  7th digit: The length of the advanced time. [0 to 9 / 1 hour /step]  8th digit: The length of the advanced time. [0 to 5 / 10 minutes /step]</p> <ul style="list-style-type: none"> <li>The digits are counted from the left.</li> <li>Make sure that SP5-307-1 is set to "1".</li> </ul>		
	<p><b>For example:</b> 3500010 (EU default)</p> <p>The timer is advanced by 1 hour at am 0:00 on the 5th Sunday in March</p>		
	Rule Set (End)	-	-
004	<p>Specifies the end setting for the summer time mode.</p> <p>There are 8 digits in this SP.</p> <p>1st and 2nd digits: The month. [1 to 12]  3rd digit: The week of the month. [0 to 5]  4th digit: The day of the week. [0 to 7 = Sunday to Saturday]  5th and 6th digits: The hour. [00 to 23]  The 7th and 8 digits must be set to "00".</p> <ul style="list-style-type: none"> <li>The digits are counted from the left.</li> <li>Make sure that SP5-307-1 is set to "1".</li> </ul>		

5404	[User Code Count Clear]		
001	UCodeCtrClr	-	Clears all counters for users.
5411	[LDAP Certification]		
004	Easy Certification	*CTL	<p>Determines whether easy LDAP certification is done.</p> <p>[0 or 1 / 1 / -] 1: On, 0: Off</p>

005	Password Null Not Permit	*CTL	This SP is referenced only when SP5411-4 is set to "1" (On). [0 or 1 / <b>0</b> / -] 0: Password NULL not permitted. 1: Password NULL permitted.
006	Detail Option	*CTL	Determines whether LDAP option (anonymous certification) is turned on or off. Bit0 <b>0: OFF, 1: ON</b>

5413	[Lockout Setting]		
001	Lockout On/Off	*CTL	Switches on/off the lock on the local address book account. [0 or 1 / <b>0</b> / -] 0: Off, 1: On
002	Lockout Threshold	*CTL	Sets a limit on the frequency of lockouts for account lockouts. [1 to 10 / <b>5</b> / 1/step]
003	Cancellation On/Off	*CTL	Determines whether the system waits the prescribed time for input of a correct user ID and password after an account lockout has occurred. [0 or 1 / <b>0</b> / -] 0: Off (no wait time, lockout not cancelled) 1: On (system waits, cancels lockout if correct user ID and password are entered).
004	Cancellation Time	*CTL	Determines the length of time that the system waits for correct input of the user ID and password after a lockout has occurred. This setting is used only if SP5413-3 is set to "1" (on). [1 to 999 / <b>60</b> / 1 min./step]

5414	[Access Mitigation]		
------	---------------------	--	--

001	Mitigation On/Off	*CTL	Switches on/off masking of continuously used IDs and passwords that are identical. [0 or 1 / <b>0</b> / -] 0: Off, 1: On
002	Mitigation Time	*CTL	Sets the length of time for excluding continuous access for identical user IDs and passwords. [0 to 60 / <b>15</b> / 1 min./step]

5415	[Password Attack]		
001	Permissible Number	*CTL	Sets the number of attempts to attack the system with random passwords to gain illegal access to the system. [0 to 100 / <b>30</b> / 1 attempt/step]
002	Detect Time	*CTL	Sets the time limit to stop a password attack once such an attack has been detected. [1 to 10 / <b>5</b> / 1 sec./step]

5416	[Access Information]		
001	Access User Max Num	*CTL	Limits the number of users used by the access exclusion and password attack detection functions. [50 to 200 / <b>200</b> / 1 users/step]
002	Access Password Max Num	*CTL	Limits the number of passwords used by the access exclusion and password attack detection functions. [50 to 200 / <b>200</b> / 1 password/step]
003	Monitor Interval	*CTL	Sets the processing time interval for referencing user ID and password information. [1 to 10 / <b>3</b> / 1 sec./step]

5417	[Access Attack]		
------	-----------------	--	--

001	Access Permissible Number	*CTL	Sets a limit on access attempts when an excessive number of attempts are detected for MFP features. [0 to 500 / <b>100</b> / 1/step]
002	Attack Detect Time	*CTL	Sets the length of time for monitoring the frequency of access to MFP features. [10 to 30 / <b>10</b> / 1 sec./step]
003	Productivity Fall Wait	*CTL	Sets the wait time to slow down the speed of certification when an excessive number of access attempts have been detected. [0 to 9 / <b>3</b> / 1 sec./step]
004	Attack Max Num	*CTL	Sets a limit on the number of requests received for certification in order to slow down the certification speed when an excessive number of access attempts have been detected. [50 to 200 / <b>200</b> / 1 attempt/step]

5420	[User Authentication]		
	These settings should be done with the System Administrator. <b>Note:</b> These functions are enabled only after the user access feature has been enabled.		
001	Copy	*CTL	Determines whether certification is required before a user can use the copy applications. [0 to 1 / <b>0</b> / 1] 0: On, 1: Off



002	Color Security Setting	*CTL	-
	<p>Enables or disables the color copy limitation for each copy mode when the user authentication is "ON".</p> <p><b>0: Enable (default), 1: Disable</b></p> <p>Bit0: B/W mode          Bit1: Mono color mode          Bit2: Two colors mode          Bit3: Full color mode          Bit4: Automatic color mode          Bit5 to 7: Reserved</p>		
011	DocumentServer	*CTL	<p>Determines whether certification is required before a user can use the document server.</p> <p>[0 or 1 / <b>0</b> / 1]          0: On, 1: Off</p>
021	Fax	*CTL	<p>Determines whether certification is required before a user can use the fax application.</p> <p>[0 or 1 / <b>0</b> / 1]          0: On, 1: Off</p>
031	Scanner	*CTL	<p>Determines whether certification is required before a user can use the scan applications.</p> <p>[0 or 1 / <b>0</b> / 1]          0: On, 1: Off</p>
041	Printer	*CTL	<p>Determines whether certification is required before a user can use the printer applications.</p> <p>[0 or 1 / <b>0</b> / 1]          0: On, 1: Off</p>
051	SDK1	*CTL	<p>[0 or 1 / <b>0</b> / 1] 0: ON. 1: OFF</p> <p>Determines whether certification is required before a user can use the SDK application.</p>
061	SDK2		
071	SDK3		

5481	[Authentication Error Code]		
	These SP codes determine how the authentication failures are displayed.		
001	System Log Disp	*CTL	Determines whether an error code appears in the system log after a user authentication failure occurs. [0 or 1 / 0 / 1] 0: Off, 1: On
002	Panel Disp	*CTL	Determines whether an error code appears on the operation panel after a user authentication failure occurs. [0 or 1 / 1 / 1] 1: On, 0: Off
5490	[MF KeyCard (Japan only)]		
001	Job Permit Setting	*CTL	Sets up operation of the machine with a keycard. [0 to 1 / 0 / 1] 0: Disabled. Cancels operation without a user code. 1: Enabled. Allows operation without a user code.
002	Count Mode Setting	*CTL	-
5501	[PM Alarm]	*CTL	-
001	PM Alarm Level		[0 to 9999 / 0 / 1 / step] 0: Alarm off 1 to 9999: Alarm goes off when <b>Value (1 to 9999) x 1000 &gt; PM counter</b>
002	Original Count Alarm		[0 or 1 / 0 / -] 0: No alarm sounds 1: Alarm sounds after the number of originals passing through the ARDF > 10,000
5504	[Jam Alarm]	*CTL	-

001	<p>Sets the alarm to sound for the specified jam level (document misfeeds are not included).</p> <p>[0 to 3 / <b>3</b> / 1 /step]</p> <p>0: Zero (Off)</p> <p>1: Low (2.5K jams)</p> <p>2: Medium (3K jams)</p> <p>3: High (6K jams)</p>
-----	--

5505	[Error Alarm]		
	<p>Sets the error alarm level.</p> <p>The error alarm counter counts "1" when any SC is detected. However, the error alarm counter decreases by "1" when an SC is not detected during a set number of copied sheets (for example, default 1500 sheets).</p> <p>The error alarm occurs when the SC error alarm counter reaches "5".</p>		
001	-	*CTL	[0 to 255 / <b>C2.5c: 50, C2d: 60</b> / 100 copies /step]

5508*	[CC Call]	*CTL	-
001*	Jam Remains	0: Disable, 1: Enable	
	Enables/disables initiating a call for an unattended paper jam.		
002*	Continuous Jams	0: Disable, 1: Enable	
	Enables/disables initiating a call for consecutive paper jams.		
003*	Continuous Door Open	0: Disable, 1: Enable	
	Enables/disables initiating a call when the front door remains open.		
011*	Jam Detection: Time Length	[3 to 30 / <b>10</b> / 1 minute /step]	
	Sets the time a jam must remain before it becomes an "unattended paper jam". This setting is enabled only when SP5508-004 is set to "1".		
012*	Jam Detection: Continuous Count	[2 to 10 / <b>5</b> / 1 /step]	
	Sets the number of consecutive paper jams required to initiate a call. This setting is enabled only when SP5508-004 is set to "1".		

013*	Door Open: Time Length	[3 to 30 / 10 / 1 /step]
	Sets the length of time the door remains open before the machine initiates a call. This setting is enabled only when SP5-508-004 is set to "1".	

5515	[SC/Alarm Setting]	*CTL	-
	With NRS (New Remote Service) in use, these SP codes can be set to issue an SC call when an SC error occurs. If this SP is switched off, the SC call is not issued when an SC error occurs.		
001	SC Call		
002	Service Parts Near End Call		[0 or 1 / 1 / -]
003	Service Parts End Call		0: Off
004	User Call		1: On
006	Communication Test Call		
007	Machine Information Notice		
008	Alarm Notice		[0 or 1 / 1 / -]
009	Non Genuine Tonner Alarm		0: Off
010	Supply Automatic Ordering Call		1: On
011	Supply Management Report Call		
012	Jam/Door Open Call		

5516	[Individual PM Part Alarm Call]	*CTL	-
	With @Remote in use, these SP codes can be set to issue an PM alarm call when one of SP parts reaches its yield.		
001	Disable/Enable Setting (0: Not send, 1: Send)		[0 or 1 / 1 / -] 0: Not send, 1: Send
004	Percent yield for triggering PM alert		[1 to 255 / 75 / 1 %/step]

5610	[Base Gamma Control Point: Command]
------	-------------------------------------

004	Factory Setting	*ENG	-
	Recalls the factory settings.		
005	Restore	*ENG	-
	Overwrites the current values onto the factory settings.		
006	Restore	*ENG	-
	Recalls the previous settings.		

5611	[Toner Color in 2C]		
001	B-C	*ENG	[0 to 128 / <b>100</b> / 1 /step] 128: Darkest density
	Adjusts the Cyan correction value of the blue signal in two-color mode.		
002	B-M	*ENG	[0 to 128 / <b>100</b> / 1 /step] 128: Darkest density
	Adjusts the Magenta correction value of the blue signal in two-color mode.		
003	G-C	*ENG	[0 to 128 / <b>100</b> / 1 /step] 128: Darkest density
	Adjusts the Cyan correction value of the blue signal in two-color mode.		
004	G-Y	*ENG	[0 to 128 / <b>100</b> / 1 /step] 128: Darkest density
	Adjusts the Yellow correction value of the blue signal in two-color mode.		
005	R-M	*ENG	[0 to 128 / <b>100</b> / 1 /step] 128: Darkest density
	Adjusts the Magenta correction value of the blue signal in two-color mode.		
006	R-Y	*ENG	[0 to 128 / <b>100</b> / 1 /step] 128: Darkest density
	Adjusts the Yellow correction value of the blue signal in two-color mode.		
5618	[Color Mode Display Selection]		

001	-	*CTL	[0 or 1 / 1 / - ] 0: ACS, Colour, Black & White, Two Colour, Single colour 1: ACD, Full Colour, Black & White
	Selects the color selection display on the LCD.		

**Note**

3

- Memory Clear (SP5-801)
- The following tables list the items that are cleared. The serial number information, meter charge setting and meter charge counters (SP8-581, 582, 583, 584, and 586) are not cleared.

5801	[Memory Clear]	
001	All Clear	Resets all correction data for process control and all software counters, and returns all modes and adjustments to their default values.
002	Engine	Clears the engine settings.
003	SCS	Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.
004	IMH Memory Clr	Initializes the IMH settings.
005	Mcs	Initializes the Mcs settings.
006	Copier Application	Initializes all copier application settings.
007	Fax Application	Initializes the fax reset time, job login ID, all TX/RX settings, local storage file numbers, and off-hook timer.

008	Printer Application	<p>The following service settings:</p> <ul style="list-style-type: none"> <li>• Bit switches</li> <li>• Gamma settings (User &amp; Service)</li> <li>• Toner Limit</li> </ul> <p>The following user settings:</p> <ul style="list-style-type: none"> <li>• Tray Priority</li> <li>• Menu Protect</li> <li>• System Setting except for setting of Energy Saver</li> <li>• I/F Setup (I/O Buffer and I/O Timeout)</li> <li>• PCL Menu</li> </ul>
009	Scanner Application	Initializes the scanner defaults for the scanner and all the scanner SP modes.
010	Web Service	Deletes the network file application management files and thumbnails, and initializes the job login ID.
011	NCS	All setting of Network Setup (User Menu) (NCS: Network Control Service)
012	R-Fax	Initializes the job login ID, SmartDeviceMonitor for Admin, job history, and local storage file numbers.
014	Clear DCS Setting	Initializes the DCS (Delivery Control Service) settings.
015	Clear UCS Setting	Initializes the UCS (User Information Control Service) settings.
016	MIRS Setting	Initializes the MIRS (Machine Information Report Service) settings.
017	CCS	Initializes the CCS (Certification and Charge-control Service) settings.
018	SRM Memory Clr	Initializes the SRM (System Resource Manager) settings.
019	LCS	Initializes the LCS settings.
020	Web Uapli	Initializes the web user application settings.
021	ECS	Initializes the ECS settings.

5802	[FreeRun]		
	Performs a free run on the copier engine.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>The machine starts free run in the same condition as the sequence of A4/LT, A3 or A4 SEF printing from the 1st or 2nd tray. Therefore, the correct paper should be loaded in the 1st tray or 2nd tray, but paper is not fed.</li> <li>The main switch has to be turned off and on after using the free run mode for a test.</li> </ul>		
	001	B/W A4 LEF	-
002	FC A4 LEF	-	-
003	FC A3 LEF	*ENG	

5803	[Input Check]	-	See "Input Check Table" (p.375).
044	Cooling Fan: Lock	*ENG	<b>0: Unlock</b> 1: Lock
045	2nd Duct Fan2: Lock	*ENG	<b>0: Unlock</b> 1: Lock

5804	[Output Check]	-	See "Output Check Table" (p.386).
------	----------------	---	-----------------------------------

5805	[Anti-Condensation Heater]		
002	0:OFF / 1:ON	*ENG	-

5810	[SC Reset]		
	Resets a type A service call condition.		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>Turn the main switch off and on after resetting the SC code.</li> </ul>		
	001	Fusing SC Reset	-
002	Hard High Temp. Detection	-	-

5811	[MachineSerial] Machine Serial Number Display		
------	---	--	--



002	Display	*ENG	Displays the machine serial number.
004	BCU		Inputs

5812	[Service Tel. No. Setting]		
001	Service	*CTL	-
	Sets the telephone number for a service representative. This number is printed on the Counter List, which can be printed with the user's "Counter" menu. This can be up to 20 characters (both numbers and alphabetic characters can be input).		
002	Facsimile	*CTL	-
	Sets the fax or telephone number for a service representative. This number is printed on the Counter List. This can be up to 20 characters (both numbers and alphabetic characters can be input).		
003	Supply	*CTL	-
	Use this to input the telephone number of your supplier for consumables. Enter the number and press #.		
004	Operation	*CTL	-
	Use this to input the telephone number of your sales agency. Enter the number and press #.		

5816	[Remote Service]	*CTL	-
001	I/F Setting		
	Selects the remote service setting. [0 to 2 / 2 / 1 /step] 0: Remote service off 1: CSS remote service on 2: NRS remote service on		

002	CE Call
	<p>Performs the CE Call at the start or end of the service.</p> <p>[0 or 1 / <b>0</b> / 1 /step]</p> <p>0: Start of the service</p> <p>1: End of the service</p> <p><b>NOTE:</b> This SP is activated only when SP 5816-001 is set to "2".</p>
003	Function Flag
	<p>Enables or disables the remote service function.</p> <p>[0 to 1 / <b>0</b> / 1 /step]</p> <p>0: Disabled</p> <p>1: Enabled</p>
007	SSL Disable
	<p>Controls if RCG (Remote Communication Gate) confirmation is done by SSL during an RCG send for the @Remote over a network interface.</p> <p>[0 or 1 / <b>0</b> / 1 /step]</p> <p>0: Yes. SSL not used.</p> <p>1: No. SSL used.</p>
008	RCG Connect Timeout
	<p>Sets the length of time (seconds) for the time-out when the RCG (Remote Communication Gate) connects during a call via the @Remote network.</p> <p>[1 to 90 / <b>30</b> / 1 second /step]</p>
009	RCG Write Timeout
	<p>Sets the length of time (seconds) for the time-out when sent data is written to the RCG during a call over the @Remote network.</p> <p>[1 to 100 / <b>60</b> / 1 second /step]</p>
010	RCG Read Timeout
	<p>Sets the length of time (seconds) for the timeout when sent data is written from the RCG during a call over the @Remote network.</p> <p>[1 to 100 / <b>60</b> / 1 second /step]</p>

011	Port 80 Enable	-
	Controls if permission is given to get access to the SOAP method over Port 80 on the @Remote network. [0 or 1 / 0 / -] 0: No. Access denied 1: Yes. Access granted.	
013	RFU Timing	
	Selects the timing for the remote firmware updating. [0 or 1 / 1 / -] 0: Any status of a target machine 1: Sleep or panel off mode only	
021	RCG – C Registered	
	This SP displays the RCG-N installation end flag. 0: Installation not completed 1: Installation completed	
023	Connect Type (N/M)	
	This SP displays and selects the RCG-N connection method. [0 or 1 / 0 / 1 /step] 0: Internet connection 1: Dial-up connection	
061	Cert Expire Timing <b>DFU</b>	Proximity of the expiration of the certification. [0 to 0xffffffff / 0 / 1 /step]
062	Use Proxy	This SP setting determines if the proxy server is used when the machine communicates with the service center. [0 or 1 / 0 / 1 /step] 0: Not use 1: Use

063	<p>Proxy Host</p> <p>This SP sets the address of the proxy server used for communication between the RCG device and the gateway. Use this SP to set up or display the customer proxy server address.</p> <p>The address is necessary to set up the embedded RCG-N.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The address display is limited to 128 characters. Characters beyond the 128 character are ignored.</li> <li>This address is customer information and is not printed in the SMC report.</li> </ul>
064	<p>Proxy PortNumber</p> <p>This SP sets the port number of the proxy server used for communication between the embedded RCG-N and the gateway. This setting is necessary to set up the embedded RC Gate-N.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>This port number is customer information and is not printed in the SMC report.</li> </ul>
065	<p>Proxy User Name</p> <p>This SP sets the HTTP proxy certification user name.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The length of the name is limited to 31 characters. Any character beyond the 31st character is ignored.</li> <li>This name is customer information and is not printed in the SMC report.</li> </ul>
066	<p>Proxy Password</p> <p>This SP sets the HTTP proxy certification password.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The length of the password is limited to 31 characters. Any character beyond the 31st character is ignored.</li> <li>This name is customer information and is not printed in the SMC report.</li> </ul>

067	CERT:Up State	
	Displays the status of the certification update.	
	0	The certification used by RCG-N is set correctly.
	1	The certification request (setAuthKey) for update has been received from the GW URL and certification is presently being updated.
	2	The certification update is completed and the GW URL is being notified of the successful update.
	3	The certification update failed, and the GW URL is being notified of the failed update.
	4	The period of the certification has expired and new request for an update is being sent to the GW URL.
	11	A rescue update for certification has been issued and a rescue certification setting is in progress for the rescue GW connection.
	12	The rescue certification setting is completed and the GW URL is being notified of the certification update request.
	13	The notification of the request for certification update has completed successfully, and the system is waiting for the certification update request from the rescue GW URL.
	14	The notification of the certification request has been received from the rescue GW controller, and the certification is being stored.
	15	The certification has been stored, and the GW URL is being notified of the successful completion of this event.
	16	The storing of the certification has failed, and the GW URL is being notified of the failure of this event.
	17	The certification update request has been received from the GW URL, the GW URL was notified of the results of the update after it was completed, but an certification error has been received, and the rescue certification is being recorded.
18	The rescue certification of No. 17 has been recorded, and the GW URL is being notified of the failure of the certification update.	

068	CERT:Error	
	Displays a number code that describes the reason for the request for update of the certification.	
	0	Normal. There is no request for certification update in progress.
	1	Request for certification update in progress. The current certification has expired.
	2	An SSL error notification has been issued. Issued after the certification has expired.
	3	Notification of shift from a common authentication to an individual certification.
	4	Notification of a common certification without ID2.
	5	Notification that no certification was issued.
6	Notification that GW URL does not exist.	
069	CERT:Up ID	The ID of the request for certification.
083	Firm Up Status	Displays the status of the firmware update.
085	Firm Up User Check	This SP setting determines if the operator can confirm the previous version of the firmware before the firmware update execution. If the option to confirm the previous version is selected, a notification is sent to the system manager and the firmware update is done with the firmware files from the URL.
086	Firmware Size	Allows the service technician to confirm the size of the firmware data files during the firmware update execution.
087	CERT: Macro Ver.	Displays the macro version of the @Remote certification.
088	CERT: PAC Ver.	Displays the PAC version of the @Remote certification.
089	CERT: ID2 Code	Displays ID2 for the @Remote certification. Spaces are displayed as underscores (_). Asterisks (***) indicate that no @Remote certification exists.
090	CERT: Subject	Displays the common name of the @Remote certification subject. CN = the following 17 bytes. Spaces are displayed as underscores (_). Asterisks (***) indicate that no DESS exists.

091	CERT: Serial No	Displays serial number for the NRS certification. Asterisks (***) indicate that no DESS exists.
092	CERT: Issuer	Displays the common name of the issuer of the @Remote certification. CN = the following 30 bytes. Asterisks (***) indicate that no DESS exists.
093	CERT: Valid Start	Displays the start time of the period for which the current @Remote certification is enabled.
094	CERT: Valid End	Displays the end time of the period for which the current @Remote certification is enabled.
102	CERT: Strength	Displays cryptic strength of the NRS certification. 1: 512 bit 2: 2048 bit
150	Selection Country	
	<p>Select the country where embedded RCG-M is installed in the machine. After selecting the country, you must also set the following SP codes for embedded RCG-M:</p> <ul style="list-style-type: none"> <li>• SP5816-153</li> <li>• SP5816-154</li> <li>• SP5816-161</li> </ul> <p>0: Japan, 1: USA, 2: Canada, 3: UK, 4: Germany, 5: France, 6: Italy, 7: Netherlands, 8: Belgium, 9: Luxembourg, 10: Spain</p>	
151	Line Type Automatic Judgment	
	<p>Press [Execute].</p> <p>Setting this SP classifies the telephone line where embedded RCG-M is connected as either dial-up (pulse dial) or push (DTMF tone) type, so embedded RCG-M can automatically distinguish the number that connects to the outside line.</p> <ul style="list-style-type: none"> <li>• The current progress, success, or failure of this execution can be displayed with SP5816-152.</li> <li>• If the execution succeeded, SP5816-153 will display the result for confirmation and SP5816-154 will display the telephone number for the connection to the outside line.</li> </ul>	

152	<p>Line Type Judgment Result</p> <p>Displays a number to show the result of the execution of SP5816151. Here is a list of what the numbers mean.</p> <p>0: Success</p> <p>1: In progress (no result yet). Please wait.</p> <p>2: Line abnormal</p> <p>3: Cannot detect dial tone automatically</p> <p>4: Line is disconnected</p> <p>5: Insufficient electrical power supply</p> <p>6: Line classification not supported</p> <p>7: Error because fax transmission in progress – ioctl() occurred.</p> <p>8: Other error occurred</p> <p>9: Line classification still in progress. Please wait.</p>
153	<p>Selection Dial / Push</p> <p>This SP displays the classification (tone or pulse) of the telephone line to the access point for embedded RCG-M. The number displayed (0 or 1) is the result of the execution of SP5816-151. However, this setting can also be changed manually.</p> <p>[0 or 1 / 0 / 1 /step]</p> <p>0: Tone Dialing Phone</p> <p>1: Pulse Dialing Phone</p> <p>Inside Japan "2" may also be displayed:</p> <p>0: Tone Dialing Phone</p> <p>1: Pulse Dialing Phone 1OPPS</p> <p>2: Pulse Dialing Phone 2OPPS</p>



154	Outside Line Outgoing Number
	<p>The SP sets the number that switches to PSTN for the outside connection for embedded RCG-M in a system that employs a PBX (internal line).</p> <ul style="list-style-type: none"> <li>• If the execution of SP5816-151 has succeeded and embedded RCG-M has connected to the <b>external</b> line, this SP display is completely blank.</li> <li>• If embedded RCG-M has connected to an <b>internal</b> line, then the number of the connection to the external line is displayed.</li> <li>• If embedded RCG-M has connected to an external line, a comma is displayed with the number. The comma is inserted for a 2 sec. pause.</li> <li>• The number setting for the external line can be entered manually (including commas).</li> </ul>
156	Dial Up User Name
	<p>Use this SP to set a user name for access to remote dial up. Follow these rules when setting a user name:</p> <ul style="list-style-type: none"> <li>• Name length: Up to 32 characters</li> <li>• Spaces and # allowed but the entire entry must be enclosed by double quotation marks (").</li> </ul>
157	Dial Up Password
	<p>Use this SP to set a password for access to remote dial up. Follow these rules when setting a user name:</p> <ul style="list-style-type: none"> <li>• Name length: Up to 32 characters</li> <li>• Spaces and # allowed but the entire entry must be enclosed by double quotation marks (").</li> </ul>
161	Local Phone Number
	<p>Use this SP to set the telephone number of the line where embedded RCG-M is connected. This number is transmitted to and used by the Call Center to return calls.</p> <p>Limit: 24 numbers (numbers only)</p>

162	Connection Timing Adjustment Incoming	
	<p>When the Call Center calls out to an embedded RCG-M modem, it sends a repeating ID tone (*#1#). This SP sets the time the line remains open to send these ID tones after the number of the embedded RCG-M modem is dialed up and connected.</p> <p>[0 to 24 / 1 / 1 /step]</p> <p>The actual amount of time is this setting x 2 sec. For example, if you set "2" the line will remain open for 4 sec.</p>	
163	Access Point	
	<p>This is the number of the dial-up access point for RCG-M. If no setting is done for this SP code, then a preset value (determined by the country selected) is used.</p> <p>Default: 0</p> <p>Allowed: Up to 16 alphanumeric characters</p>	
164	Line Connecting	
	<p>This SP sets the connection conditions for the customer. This setting dedicates the line to RCG-M only, or sets the line for sharing between RCG-M and a fax unit.</p> <p>[0 to 1 / 0 / 1 /step]</p> <p>0: Sharing Fax 1: No Sharing Fax</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• If this setting is changed, the copier must be cycled off and on.</li> <li>• SP5816 187 determines whether the off-hook button can be used to interrupt a RCG-M transmission in progress to open the line for fax transaction.</li> </ul>	
173	Modem Serial No.	This SP displays the serial number registered for the RCG-M.
174	Retransmission Limit	
	<p>Normally, it is best to allow unlimited time for certification and ID2 update requests, and for the notification that the certification has been completed. However, RCG-M generates charges based on transmission time for the customer, so a limit is placed upon the time allowed for these transactions.</p> <p>If these transactions cannot be completed within the allowed time, do this SP to cancel the time restriction.</p>	

	FAX TX Priority	-	
187	<p>This SP determines whether pushing the off-hook button will interrupt a RCG-M transmission in progress to open the line for fax transaction. This SP can be used only if SP5816164 is set to "0".</p> <p>[0 or 1/ 0 / - ]</p> <p>0: Disable, 1: Enable</p>		
200	Manual Polling	-	Executes the manual polling.
	<p>Regist Status</p>		
201	<p>Displays a number that indicates the status of the @Remote service device.</p> <p>0: Neither the registered device by the external nor embedded RCG device is set.</p> <p>1: The embedded RCG device is being set. Only Box registration is completed. In this status, this unit cannot answer a polling request from the external RCG.</p> <p>2: The embedded RCG device is set. In this status, the external RCG unit cannot answer a polling request.</p> <p>3: The registered device by the external RCG is being set. In this status the embedded RCG device cannot be set.</p> <p>4 The registered module by the external RCG has not started.</p>		
202	Letter Number	Allows entry of the number of the request needed for the RCG-N device.	
203	Confirm Execute	Executes the inquiry request to the @Remote GW URL.	
204	Confirm Result		
	<p>Displays a number that indicates the result of the inquiry executed with SP5816203.</p> <p><b>0:</b> Succeeded</p> <p>1: Inquiry number error</p> <p>2: Registration in progress</p> <p>3: Proxy error (proxy enabled)</p> <p>4: Proxy error (proxy disabled)</p> <p>5: Proxy error (Illegal user name or password)</p> <p>6: Communication error</p> <p>7: Certification update error</p> <p>8: Other error</p> <p>9: Inquiry executing</p>		

205	Confirm Place	
	Displays the result of the notification sent to the device from the GW URL in answer to the inquiry request. Displayed only when the result is registered at the GW URL.	
206	Register Execute	Executes "Embedded RCG Registration".
207	Register Result	
	<p>Displays a number that indicates the registration result.</p> <p>0: Succeeded</p> <p>2: Registration in progress</p> <p>3: Proxy error (proxy enabled)</p> <p>4: Proxy error (proxy disabled)</p> <p>5: Proxy error (Illegal user name or password)</p> <p>6: Communication error</p> <p>7: Certification update error</p> <p>8: Other error</p> <p>9: Registration executing</p>	

208	Error Code		
	Displays a number that describes the error code that was issued when either SP5816-204 or SP5816-207 was executed. [-2147483647 to 2147483647 / 0 / - ]		
	<b>Cause</b>	<b>Code</b>	<b>Meaning</b>
	Illegal Modem Parameter	-11001	Chat parameter error
		-11002	Chat execution error
		-11003	Unexpected error
	Operation Error, Incorrect Setting	-12002	Inquiry, registration attempted without acquiring device status.
		-12003	Attempted registration without execution of an inquiry and no previous registration.
		-12004	Attempted setting with illegal entries for certification and ID2.
		-12005	@Remote communication is prohibited. The device has an Embedded RC gate-related problem.
	Operation Error, Incorrect Setting	-12006	A confirmation request was made after the confirmation had been already completed.
		-12007	The request number used at registration was different from the one used at confirmation.
		-12008	Update certification failed because mainframe was in use.
		-12009	ID2 mismatch between an individual certification and NVRAM
		-12010	Certification area is not initialized.

208	Error Caused by Response from GW URL	-2385	Attempted dial up overseas without the correct international prefix for the telephone number.
		-2387	Not supported at the Service Center
		-2389	Database out of service
		-2390	Program out of service
		-2391	Two registrations for same device
		-2392	Parameter error
		-2393	Basil not managed
		-2394	Device not managed
		-2395	Box ID for Basil is illegal
		-2396	Device ID for Basil is illegal
		-2397	Incorrect ID2 format
		-2398	Incorrect request number format
209	Instal Clear	Releases the machine from its embedded RCG setup	
250	CommLog Print	Prints the communication log.	

5821	[Remote Service Address]		
002	RCG IP Address	*CTL	Sets the IP address of the RCG (Remote Communication Gate) destination for call processing at the remote service center.

5824	[NV-RAM Data Upload]		
	Uploads the UP and SP mode data (except for counters and the serial number) from the NVRAM to an SD card. For details, see "NVRAM Data Upload/Download" in the "Main chapters: 5. System Maintenance".		
001	NV-RAM Data Upload	#	-

5825	[NV-RAM Data Download]		
	Downloads the UP and SP mode data from an SD card to the NVRAM. For details, see "NVRAM Data Upload/Download" in the "Main chapters: 5. System Maintenance".		
001	NV-RAM Download	#	-

5828	[Network Setting]	*CTL	-
050	1284 Compatibility (Centro)	Enables or disables 1284 Compatibility. [0 or 1 / 1 / 1 / step] 0: Disabled, 1: Enabled	
052	ECP (Centro)	Enables or disables ECP Compatibility. [0 or 1 / 1 / 1 / step] 0: Disabled, 1: Enabled <b>Note</b> <ul style="list-style-type: none"> <li>This SP is activated only when SP5-828-50 is set to "1".</li> </ul>	
065	Job Spooling	Enables/disables Job Spooling. [0 or 1 / 0 / 1 / step] 0: Disabled, 1: Enabled	
066	Job Spooling Clear: Start Time	Treatment of the job when a spooled job exists at power on. 0: ON (Data is cleared) 1: OFF (Automatically printed)	

069	Job Spooling (Protocol)	<p>Validates or invalidates the job spooling function for each protocol.</p> <p><b>0:</b> Validates  <b>1:</b> Invalidates</p> <p>bit0: LPR  bit1: FTP  bit2: IPP  bit3: SMB  bit4: BMLinkS  bit5: DIPRINT  bit6: sftp  bit7: (Reserved)</p>
090	TELNET (0: OFF 1: ON)	<p>Enables or disables the Telnet protocol.</p> <p>[0 or 1 / 1 / - ]</p> <p>0: Disable, 1: Enable</p>
091	Web (0: OFF 1: ON)	<p>Enables or disables the Web operation.</p> <p>[0 or 1 / 1 / - ]</p> <p>0: Disable, 1: Enable</p>
145	Active IPv6 Link Local Address	<p>This is the IPv6 local address link referenced on the Ethernet or wireless LAN (802.11b) in the format:</p> <p>"Link Local Address" + "Prefix Length"</p> <p>The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.</p>



147	Active IPv6 Stateless Address 1	<p>These SPs are the IPv6 status addresses (1 to 5) referenced on the Ethernet or wireless LAN (802.11b) in the format: "Status Address" + "Prefix Length"</p> <p>The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.</p>
149	Active IPv6 Stateless Address 2	
151	Active IPv6 Stateless Address 3	
153	Active IPv6 Stateless Address 4	
155	Active IPv6 Stateless Address 5	
156	IPv6 Manual Address	<p>This SP is the IPv6 manually set address referenced on the Ethernet or wireless LAN (802.11b) in the format: "Manual Set Address" + "Prefix Length"</p> <p>The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.</p>
158	IPv6 Gateway Address	<p>This SP is the IPv6 gateway address referenced on the Ethernet or wireless LAN (802.11b). The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.</p>
161	IPv6 Stateless Auto Setting	<p>Enables or disables the automatic setting for IPv6 stateless. [0 or 1 / 1 / 1 /step] 0: Disable, 1: Enable</p>
236	Web Item visible	<p>Displays or does not display the Web system items. [0 x 0000 to 0 x ffff / 0 x ffff] 0: Not displayed, 1: Displayed bit0: Net RICOH bit1: Consumable Supplier bit2-15: Reserved (all)</p>
237	Web shopping link visible	<p>Displays or does not display the link to Net RICOH on the top page and link page of the web system. [0 to 1 / 1 / 1] 0: Not display, 1:Display</p>

238	Web supplies Link visible	Displays or does not display the link to Consumable Supplier on the top page and link page of the web system. [0 to 1 / 1 / 1] 0: Not display, 1:Display	
239	Web Link1 Name	This SP confirms or changes the URL1 name on the link page of the web system. The maximum characters for the URL name are 31 characters.	
240	Web Link1 URL	This SP confirms or changes the link to URL1 on the link page of the web system. The maximum characters for the URL are 127 characters.	
241	Web Link1 visible	Displays or does not display the link to URL1 on the top page of the web system. [0 to 1 / 1 / 1] 0: Not display, 1:Display	
242	Web Link2 Name	Same as "-239"	
243	Web Link2 URL	Same as "-240"	
244	Web Link2 visible	Same as "-241"	
5832	[HDD] HDD Initialization	*CTL	-


001	HDD Formatting (ALL)	Initializes the hard disk. Use this SP mode only if there is a hard disk error.
002	HDD Formatting (IMH)	
003	HDD Formatting (Thumbnail)	
004	HDD Formatting (Job Log)	
005	HDD Formatting (Printer Fonts)	
006	HDD Formatting (User Info)	
007	Mail RX Data	
008	Mail TX Data	
009	HDD Formatting (Data for a Design)	
010	HDD Formatting (Log)	
011	HDD Formatting (Ridoc I/F)	

5836	[Capture Setting]	*CTL	-
001	Capture Function (0:Off 1:On)	0: Disable, 1: Enable	
	With this function disabled, the settings related to the capture feature cannot be initialized, displayed, or selected.		
002	Panel Setting	0: Displayed, 1: Not displayed	
	Displays or does not display the capture function buttons.		
<p><b>5836-71 to 5836-78, Copier and Printer Document Reduction</b></p> <p>The following 6 SP modes set the default reduction for stored documents sent to the document management server via the MLB.</p> <p>Enabled only when optional MLB (Media Link Board) is installed.</p>			
071	Reduction for Copy Color	0: 1to-1, 1: 1/2, <b>2: 1/3</b> , 3: 1/4	
072	Reduction for Copy B&W Text	<b>0: 01</b> , 1: 1/2, 2: 1/3, 3: 1/4, 6: 2/3	
073	Reduction for Copy B&W Other	<b>0: 01</b> , 1: 1/2, 2: 1/3, 3: 1/4, 6: 2/3	
074	Reduction for Printer Color	0: 1to-1, 1: 1/2, <b>2: 1/3</b> , 3: 1/4	
075	Reduction for Printer B&W	<b>0: 01</b> , 1: 1/2, 2: 1/3, 3: 1/4, 6: 2/3	

076	Reduction for Printer B&W HQ	<b>0: 1to-1</b> , 1: 1/2, 2: 1/3, 3: 1/4
077	Reduction for Printer Color 1200dpi	1: 1/2, 3: 1/4, <b>4: 1/6</b> , 5: 1/8 (2: skipped) , 6: 2/3
078	Reduction for Printer B&W 1200dpi	<b>1: 1/2</b> , 3: 1/4, 4: 1/6, 5: 1/8 (2: skipped) , 6: 2/3
<p><b>5836-81 to 5836-86, Stored document format</b></p> <p>The following 6 SP modes set Sets the default format for stored documents sent to the document management server via the MLB.</p> <p>Enabled only when optional MLB (Media Link Board) is installed.</p>		
081	Format for Copy Color	<p><b>0: JFIF/JPEG</b>, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>This SP is not used in this model.</li> </ul>
082	Format for Copy B&W Text	0: JFIF/JPEG, <b>1: TIFF/MMR</b> , 2: TIFF/MH, 3: TIFF/MR
083	Format Copy B&W Other	0: JFIF/JPEG, <b>1: TIFF/MMR</b> , 2: TIFF/MH, 3: TIFF/MR
084	Format for Printer Color	<p><b>0: JFIF/JPEG</b>, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>This SP is not used in this model.</li> </ul>
085	Format for Printer B&W	0: JFIF/JPEG, <b>1: TIFF/MMR</b> , 2: TIFF/MH, 3: TIFF/MR
086	Format for Printer B&W HQ	0: JFIF/JPEG, 1: TIFF/MMR, <b>2: TIFF/MH</b> , 3: TIFF/MR
091	Default for JPEG	[5 to 95 / <b>50</b> / 1 /step]
	<p>Sets the JPEG format default for documents sent to the document management server via the MLB with JPEG selected as the format.</p> <p>Enabled only when optional MLB (Media Link Board) is installed.</p>	

101	Primary srv IP address	Sets the IP address for the primary capture server. This is basically adjusted by the remote system.
102	Primary srv scheme	This is basically adjusted by the remote system.
103	Primary srv port number	This is basically adjusted by the remote system.
104	Primary srv URL path	This is basically adjusted by the remote system.
111	Secondary srv IP address	Sets the IP address for the secondary capture server. This is basically adjusted by the remote system.
112	Secondary srv scheme	This is basically adjusted by the remote system.
113	Secondary srv port number	This is basically adjusted by the remote system.
114	Secondary srv URL path	This is basically adjusted by the remote system.
120	Default Reso Rate Switch	This is basically adjusted by the remote system.
121	Reso: Copy (Color)	[0 to 3 / <b>2</b> / 1/step]
	Selects the resolution for color copy mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 300dpi/ 2: 150dpi/ 3: 75dpi	
122	Reso: Copy (Mono)	[0 to 5 / <b>3</b> / 1/step]
	Selects the resolution for BW copy mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi	
123	Reso: Print (Color)	This is basically adjusted by the remote system. [0 to 3 / <b>2</b> / 1/step]
	Selects the resolution for color print mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 300dpi/ 2: 150dpi/ 3: 75dpi	
124	Reso: Print (Mono)	This is basically adjusted by the remote system. [0 to 5 / <b>3</b> / 1/step]
	Selects the resolution for BW print mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi	

125	Reso: Fax (Color)	This is basically adjusted by the remote system. [0 to 6 / <b>4</b> / 1/step]	
	Selects the resolution for color fax mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
126	Reso: Fax (Mono)	This is basically adjusted by the remote system. [0 to 6 / <b>3</b> / 1/step]	
	Selects the resolution for BW fax mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
127	Reso: Scan (Color)	This is basically adjusted by the remote system. [0 to 6 / <b>4</b> / 1/step]	
	Selects the resolution for color scanning mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
128	Reso: Scan (Mono)	This is basically adjusted by the remote system. [0 to 6 / <b>3</b> / 1/step]	
	Selects the resolution for BW scanning mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		

5840	[IEEE 802.11]		
006	Channel Max	*CTL	[1 to 11 or 13 / <b>11 or 13</b> / 1 /step] Europe/Asia: 1 to 13 NA/ Asia: 1 to 11
	Sets the maximum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the maximum end of the range for each area. Adjust the upper 4 bits to set the maximum number of channels. <b>DFU</b>		
<p> <b>Note</b></p> <ul style="list-style-type: none"> <li>Do not change the setting.</li> </ul>			

	Channel Min	*CTL	[1 to 11 or 13 / 1 / 1 /step] Europe: 1 to 13 NA/ Asia: 1 to 11
007	<p>Sets the minimum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the minimum end of the range for each area. Adjust the lower 4 bits to set the minimum number of channels. <b>DFU</b></p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>Do not change the setting.</li> </ul>		
008	Transmission Speed	*CTL	<p>0 x 00 to 0 x FF / <b>0 x FF to Auto</b> / -] <b>0 x FF to Auto</b> [Default]</p> <p>0 x 11 - 55M Fix 0 x 10 - 48M Fix 0 x 0F - 36M Fix 0 x 0E - 18M Fix 0 x 0D - 12M Fix 0 x 0B - 9M Fix 0 x 0A - 6M Fix 0 x 07 - 11M Fix 0 x 05 - 5.5M Fix 0 x 08 - 1M Fix 0 x 13 - 0 x FE (reserved) 0 x 12 - 72M (reserved) 0 x 09 - 22M (reserved)</p>
011	WEP key Select	*CTL	<p>Selects the WEP key. [00 to 11 / <b>00</b> / 1 binary]</p> <p>00: Key #1 01: Key #2 (Reserved) 10: Key #3 (Reserved) 11: Key #4 (Reserved)</p>

042	Fragment Thresh	*CTL	<p>Adjusts the fragment threshold for the IEEE802.11 card.</p> <p>[256 to 2346 / <b>2346</b> / 1]</p> <p>This SP is displayed only when the IEEE802.11 card is installed.</p>
043	11g CTS to Self	*CTL	<p>Determines whether the CTS self function is turned on or off.</p> <p>[0 to 1 / <b>1</b> / 1] 0: Off, 1: On</p> <p>This SP is displayed only when the IEEE802.11 card is installed.</p>
044	11g Slot Time	*CTL	<p>Selects the slot time for IEEE802.11.</p> <p>[0 to 1 / 0 / 1] 0: 20 μm, 1: 9 μm</p>
045	WPA Debug Lvl	*CTL	<p>Selects the debug level for WPA authentication application.</p> <p>[1 to 3 / <b>3</b> / 1] 1: Info, 2: warning, 3: error</p> <p>This SP is displayed only when the IEEE802.11 card is installed.</p>
5841	[Supply Name Setting]		



001	Toner Name Setting: Black	*CTL	Specifies supply names. These appear on the screen when the user presses the Inquiry button in the user tools screen.
002	Toner Name Setting: Cyan		
003	Toner Name Setting: Yellow		
004	Toner Name Setting: Magenta		
007	OrgStamp		
011	Staple Std1		
012	Staple Std2		
013	Staple Std3		
014	Staple Std4		
021	Staple Bind 1		
022	Staple Blind2		
023	Staple Blind 3		

5844	[USB]		
001	Transfer Rate	*CTL	0x01: Full speed 0x04: Auto Change
	Adjusts the USB transfer rate.		
002	Vendor ID	*CTL	Displays the vendor ID. <b>DFU</b>
003	Product ID	*CTL	Displays the product ID. <b>DFU</b>
004	Device Release Number	*CTL	Displays the development release version number. <b>DFU</b>

5845	[Delivery Server Setting]	*CTL	-
	Provides items for delivery server settings.		
001	FTP Port No.	[0 to 65535 / <b>3670</b> / 1 /step]	
	Sets the FTP port number used when image files to the Scan Router Server.		

002	IP Address (Primary)	Range: 000.000.000.000 to 255.255.255.255
	Use this SP to set the Scan Router Server address. The IP address under the transfer tab can be referenced by the initial system setting.	
006	Delivery Error Display Time	[0 to 999 / 300 / 1 second /step]
	Use this setting to determine the length of time the prompt message is displayed when a test error occurs during document transfer with the NetFile application and an external device.	
008	IP Address (Secondary)	Range: 000.000.000.000 to 255.255.255.255
	Specifies the IP address assigned to the computer designated to function as the secondary delivery server of Scan Router. This SP allows only the setting of the IP address without reference to the DNS setting.	
009	Delivery Server Model	[0 to 4/ 0 / 1 /step]
	<p>Allows changing the model of the delivery server registered by the I/O device.</p> <p>0: Unknown</p> <p>1: SG1 Provided</p> <p>2: SG1 Package</p> <p>3: SG2 Provided</p> <p>4: SG2 Package</p>	
010	Delivery Svr. Capability	[0 to 255 / - / 1 /step]
	Bit7 = 1 Comment information exists	
	Bit6 = 1 Direct specification of mail address possible	
	Bit5 = 1 Mail RX confirmation setting possible	
	Bit4 = 1 Address book automatic update function exists	
	Bit3 = 1 Fax RX delivery function exists	
	Bit2 = 1 Sender password function exists	
	Bit1 = 1 Function to link MK-1 user and Sender exists	
Bit0 = 1 Sender specification required (if set to 1, Bit6 is set to "0")		
Changes the capability of the registered that the I/O device registered.		

	Delivery Svr Capability (Ext)	[0 to 255 / - / 1 /step]
011	Changes the capability of the registered that the I/O device registered.	
	Bit7 = 1 Address book usage limitation (Limitation for each authorized user)	
	Bit6 = 1 RDH authorization link Bit5 to 0: Not used	
013	Server Scheme (Primary) <b>DFU</b>	
	This is used for the scan router program.	
014	Server Port Number (Primary) <b>DFU</b>	
	This is used for the scan router program.	
015	Server URL Path (Primary) <b>DFU</b>	
	This is used for the scan router program.	
016	Server Scheme (Secondary) <b>DFU</b>	
	This is used for the scan router program.	
017	Server Port Number (Secondary) <b>DFU</b>	
	This is used for the scan router program.	
018	Server URL Path (Secondary) <b>DFU</b>	
	This is used for the scan router program.	
022	Rapid Sending Control	
	Enables or disables the prevention function for the continuous data sending error. [0 to 1 / 1 / -]	
	0: Disable, 1: Enable	

5846	[UCS Setting]	*CTL	-
001	Machine ID (For Delivery Server)		Displays ID
	Displays the unique device ID in use by the delivery server directory. The value is only displayed and cannot be changed. This ID is created from the NIC MAC or IEEE 1394 EUI. The ID is displayed as either 6-byte or 8-byte binary.		

	Machine ID Clear (For Delivery Server)	Clears ID
002	Clears the unique ID of the device used as the name in the file transfer directory. Execute this SP if the connection of the device to the delivery server is unstable. After clearing the ID, the ID will be established again automatically by cycling the machine off and on.	
	Maximum Entries	[2000 to 20000 / <b>2000</b> / 1 /step]
003	Changes the maximum number of entries that UCS can handle. If a value smaller than the present value is set, the UCS managed data is cleared, and the data (excluding user code information) is displayed.	
	Delivery Server Retry Timer	[0 to 255 / <b>0</b> / 1 /step]
006	Sets the interval for retry attempts when the delivery server fails to acquire the delivery server address book.	
	Delivery Server Retry Times	[0 to 255 / <b>0</b> / 1 /step]
007	Sets the number of retry attempts when the delivery server fails to acquire the delivery server address book.	
	Delivery Server Maximum Entries	[2000 to 50000 / <b>2000</b> / 1 /step]
008	Sets the maximum number account entries of the delivery server user information managed by UCS.	
	LDAP Search Timeout	[1 to 255 / <b>60</b> / 1 /step]
010	Sets the length of the timeout for the search of the LDAP server.	
	WSD Maximum Entries	[5 to 250 / <b>250</b> / 1 /step]
020	Sets the maximum entries for the address book of the WSD (WS-scanner).	
	Addr Book Migration (USB => HDD)	
040	Not used in this machine.	

041	<p>Fill Addr Acl Info.</p> <p>This SP must be executed immediately after installation of an HDD unit in a basic machine that previously had no HDD. The first time the machine is powered on with the new HDD installed, the system automatically takes the address book from the NVRAM and writes it onto the new HDD. However, the new address book on the HDD can be accessed only by the system administrator at this stage. Executing this SP by the service technician immediately after power on grants full address book access to all users.</p> <p>Procedure</p> <ol style="list-style-type: none"> <li>1. Turn the machine off.</li> <li>2. Install the new HDD.</li> <li>3. Turn the machine on.</li> <li>4. The address book and its initial data are created on the HDD automatically.</li> <li>5. However, at this point the address book can be accessed by only the system administrator or key operator.</li> <li>6. Enter the SP mode and do SP5846-041. After this SP executes successfully, any user can access the address book.</li> </ol>	
043	Addr Book Media	<p>Displays the slot number where an address book data is in.</p> <p>[0 to 30 / - /1]</p> <p>0: Unconfirmed</p> <p>1: SD Slot 1</p> <p>2: SD Slot 2</p> <p>4: USB Flash ROM</p> <p>20: HDD</p> <p>30: Nothing</p>
047	Initialize Local Addr Book	Clears the local address book information, including the user code.
048	Initialize Delivery Addr Book	Clears the distribution address book information, except the user code.
049	Initialize LDAP Addr Book	Clears the LDAP address book information, except the user code.
050	Initialize All Addr Book	Clears all directory information managed by UCS, including all user codes.

051	Backup All Addr Book	Uploads all directory information to the SD card.
052	Restore All Addr Book	Downloads all directory information from the SD card.
053	Clear Backup Info	<p>Deletes the address book data from the SD card in the service slot.</p> <p>Deletes only the files that were uploaded from this machine.</p> <p>This feature does not work if the card is write-protected.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• After you do this SP, go out of the SP mode, and then turn the power off.</li> <li>• Do not remove the SD card until the Power LED stops flashing.</li> </ul>
060	Search option	
	<p>This SP uses bit switches to set up the fuzzy search options for the UCS local address book.</p> <p>Bit: Meaning</p> <p>0: Checks both upper/lower case characters</p> <p>1: Japan Only</p> <p>2: Japan Only</p> <p>3: Japan Only</p> <p>4 to 7: Not Used</p>	
062	Complexity option 1	
	<p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <b>upper case</b> and sets the length of the password.</p> <p>[0 to 32 / 0 / 1 /step]</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• This SP does not normally require adjustment.</li> <li>• This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.</li> </ul>	
063	Complexity Option 2 <b>DFU</b>	
064	Complexity Option 3 <b>DFU</b>	

065	Complexity Option 4 <b>DFU</b>	
091	FTP Auth Port Setting	Specifies the FTP port for getting a distribution server address book that is used in the identification mode. [0 to 65535 / <b>3671</b> / 1 /step]
094	Encryption Stat	Shows the status of the encryption function for the address book data.

5847	[Rep Resolution Reduction]	*CTL	-
	SP5847-1 through SP5847-8 changes the default settings of image data transferred externally by the Net File page reference function. [ 0 to 5 / <b>2</b> / 1 /step] SP5847-21 sets the default for JPEG image quality of image files handled by NetFile. "Net files" are jobs to be printed from the document server using a PC and the DeskTopBinder software.		
001	Rate for Copy Color	<b>0: 1x</b>	
002	Rate for Copy B&W Text	1: 1/2x	
003	Rate for Copy B&W Other	2: 1/3x	
004	Rate for Printer Color	3: 1/4x	
005	Rate for Printer B&W	4: 1/6x	
		5: 1/8x	
006	Rate for Printer Color 1200dpi	0: 1x 1: 1/2x 2: 1/3x 3: 1/4x <b>4: 1/6x</b> 5: 1/8x	
007	Rate for Printer B&W 1200dpi	0: 1x <b>1: 1/2x</b> 2: 1/3x 3: 1/4x 4: 1/6x 5: 1/8x	

021	Network Quality Default for JPEG
	Sets the default value for the quality of JPEG images sent as NetFile pages. This function is available only with the MLB (Media Link Board) option installed. [5 to 95 / <b>50</b> / 1 /step]

5848	[Web Service]	*CTL	-
	5848 2 sets the 4-bit switch assignment for the access control setting. Setting of 0001 has no effect on access and delivery from Scan Router. 5848 100 sets the maximum size allowed for downloaded images. The default is equal to 1 gigabyte.		
002	Access Ctrl: Repository (only Lower 4 bits)	0000: No access control 0001: Denies access to DeskTop Binder. 0010: No writing control	
003	Access Control: Doc. Svr. Print (Lower 4 bits)	Switches access control on and off. 0000: No access control 0001: Denies access to DeskTop Binder.	
004	Access Control: udirectory (Lower 4 bits)		
007	Access Ctrl: Comm. Log Fax (Lower 4 bits)		
009	Access Ctrl: Job Ctrl (Lower 4 bits)		
011	Access Ctrl: Devicemanagement (Lower 4bits)		
021	Access Ctrl: Delivery (Lower 4 bits)		
022	Access Ctrl: uadministration (Lower 4bits)		
099	Repository: Download Image Setting		
100	Repository: Download Image Max. Size	Specifies the max size of the image data that the machine can download. [1 to 2048 / <b>2048</b> / 1 MB /step]	



210	Setting: LogType: Job1	NIA
211	Setting: LogType: Job2	
212	Setting: LogType: Access	
213	Setting: PrimarySrv	
214	Setting: SecondarySrv	
215	Setting: StartTime	
216	Setting: IntervalTime	
217	Setting: Timing	

5849	[Installation Date]	*CTL	-
001	Display	The "Counter Clear Day" has been changed to "Installation Date" or "Inst. Date".	
002	Switch to Print	Determines whether the installation date is printed on the printout for the total counter. [0 or 1 / 1 / - ] 0: OFF (No Print) 1: ON (Print)	
003	Total Counter	-	

5850	[Address Book Function]	*CTL	-
003	Replacement of Circuit Classification <b>Japan Only</b>		
	The machine is sold ready to use with a G3 line. This SP allows you to switch all at once to convert to G4 after you add a G4 line. Conversely, if for some reason the G4 line becomes unusable, you can easily switch back to G3.		

5851	[Bluetooth]	*CTL	-
001	mode		
	Sets the operation mode for the Bluetooth Unit. Press either key. [0:Public] [1: Private]		

5853	[Stamp Data Download]		
	Use this SP to download the fixed stamp data stored in the firmware of the ROM and copy it to the HDD. This SP can be executed as many times as required. This SP must be executed after replacing or formatting the hard disks.		
<div style="border: 1px solid blue; border-radius: 15px; padding: 2px; display: inline-block;"> <b>Note</b> </div>			
<ul style="list-style-type: none"> <li>This SP can be executed only with the hard disks installed.</li> </ul>			

5856	[Remote ROM Update]		
	Allows the technician to upgrade the firmware using a local port (IEEE1284) when updating the remote ROM.		
002	Local Port	*CTL	[0 to 1 / 0 / 1/step] 0: Disable 1: Enable

5857	[Save Debug Log]	*CTL	-
001	On/Off (1:ON 0:OFF)	0: OFF, 1: ON	
	Switches the debug log feature on and off. The debug log cannot be captured until this feature is switched on.		
002	Target (2: HDD 3: SD)	2: HDD, 3: SD Card	
	Selects the storage device to save debug logs information when the conditions set with SP5-858 are satisfied. [ 2 to 3 / 2 / 1 /step]		
005	Save to HDD	Saves the debug log of the input SC number in memory to the HDD. A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card.	
	006	Save to SD Card	Saves the debug log of the input SC number in memory to the SD card.
009	Copy HDD to SD Card (Latest 4 MB)		
010	Copy HDD to SD Card (Latest 4 MB Any Key)		

011	Erase HDD Debug Data
012	Erase SD Card Debug Data
013	Free Space on SD Card
014	Copy SD to SD (Latest 4 MB)
015	Copy SD to SD (Latest 4 MB Any Key)
016	Make HDD Debug
017	Make SD Debug

5858	[Debug Save When]	*CTL	-
	These SPs select the content of the debugging information to be saved to the destination selected by SP5857-002. SP5858-3 stores one SC specified by number. Refer to Section 4 for a list of SC error codes.		
001	Engine SC Error (0: OFF, 1: ON)	Turns on/off the debug save for SC codes generated by copier engine errors. [0 or 1 / 0 / 1/ step]	
002	Controller SC Error (0: OFF, 1: ON)	Turns on/off the debug save for SC codes generated by GW controller errors. [0 or 1 / 0 / 1/ step]	
003	Any SC Error	[0 to 65535 / 0 / 1 /step]	
004	Jam (0: OFF, 1: ON)	Turns on/off the debug save for jam errors. [0 or 1 / 0 / 1/ step]	

5859	[Debug Save Key No.]	*CTL	-
------	----------------------	------	---

001	Key 1	These SPs allow you to set up to 10 keys for log files for functions that use common memory on the controller board. [-99999999 to 99999999 / <b>0</b> / - ]
002	Key 2	
003	Key 3	
004	Key 4	
005	Key 5	
006	Key 6	
007	Key 7	
008	Key 8	
009	Key 9	
010	Key 10	

5860	[SMTP/POP3/IMAP4]	*CTL	-
020	Partial Mail Receive Timeout	[1 to 168 / <b>72</b> / 1 hour/step]	
	Sets the amount of time to wait before saving a mail that breaks up during reception. The received mail is discarded if the remaining portion of the mail is not received during this prescribed time.		
021	MDN Response RFC2298 Compliance	[0 to 1 / <b>1</b> / - ]	
	Determines whether RFC2.5298 compliance is switched on for MDN reply mail. 0: No 1: Yes		
022	SMTP Auth. From Field Replacement	[0 to 1 / <b>0</b> / - ]	
	Determines whether the FROM item of the mail header is switched to the validated account after the SMTP server is validated. 0: No. "From" item not switched. 1: Yes. "From item switched.		

	SMTP Auth. Direct Setting	[0 or 1 / - / - ]
025	<p>Selects the authentication method for SMPT.</p> <p><b>Bit switch:</b></p> <ul style="list-style-type: none"> <li>• Bit 0: LOGIN</li> <li>• Bit 1: PLAIN</li> <li>• Bit 2: CRAM MD5</li> <li>• Bit 3: DIGEST MD5</li> <li>• Bit 4 to 7: Not used</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• This SP is activated only when SMTP authorization is enabled by UP mode.</li> </ul>	
026	S/MIME: MIME Header Setting	<p>Selects the MIME header type of an E-mail sent by S/MIME.</p> <p>[0 to 2 / 0 / 1]</p> <p>0: Microsoft Outlook Express standard</p> <p>1: Internet Draft standard</p> <p>2: RFC standard</p>

5870	[Common Key Info Writing]		
001	Writing	*CTL	Writes to flash ROM the common proof for validating the device for @Remote specifications.
003	Initialize	*CTL	Initializes the data area of the common proof for validating.

5873	[SD Card Appli Move]		
001	Move Exec	This SP copies the application programs from the original SD card in SD card slot 2 to an SD card in SD card slot 1.	
002	Undo Exec	This SP copies back the application programs from an SD card in SD Card Slot 2 to the original SD card in SD card slot 1. Use this menu when you have mistakenly copied some programs by using "Move Exec" (SP5873-1).	

5875	[SC Auto Reboot]		
------	------------------	--	--

001	Reboot Setting	*CTL	<p>Enables or disables the automatic reboot function when an SC error occurs.</p> <p>[0 or 1 / 0 / -]</p> <p>0: The machine reboots automatically when the machine issues an SC error and logs the SC error code. If the same SC occurs again, the machine does not reboot.</p> <p>1: The machine does not reboot when an SC error occurs.</p> <p>The reboot is not executed for Type A or C SC codes.</p>
002	Reboot Type	*CTL	<p>Selects the reboot method for SC.</p> <p>[0 or 1 / 0 / -]</p> <p>0: Manual reboot, 1: Automatic reboot</p>

5878	[Option Setup]		
001	Data Overwrite Security	-	Enables the Data Overwrite Security unit. Press "EXECUTE" on the operation panel. Then turn the machine off and on.
002	HDD Encryption	-	Installs the HDD Encryption unit.

5881	[Fixed Phrase Block Erasing]		
001	-	-	Deletes the fixed phrase.

5883	[Line Speed Selection]		
	Selects the line speed for middle thick paper.		
001	Middle Thick	*ENG	<p>[0 or 1 / 0 / 1 / step]</p> <p>0: MID CARD: Half Speed (115 mm/sec)</p> <p>1: MID CARD: Normal Speed (C2.5c: 154, C2.5d: 205 mm/sec)</p>

5885	[Set WIM Function] Web Image Monitor Settings		
	Close or disclose the functions of web image monitor.		

020	DocSvr Acc Ctrl	*CTL	<p>0: OFF, 1: ON</p> <p>Bit Meaning</p> <p>0: Forbid all document server access (1)</p> <p>1: Forbid user mode access (1)</p> <p>2: Forbid print function (1)</p> <p>3: Forbid fax TX (1)</p> <p>4: Forbid scan sending (1)</p> <p>5: Forbid downloading (1)</p> <p>6: Forbid delete (1)</p> <p>7: Reserved</p>
050	DocSvr Format	*CTL	<p>Selects the display type for the document box list.</p> <p>[0 to 2 / <b>0</b> / 1]</p> <p>0: Thumbnail, 1: Icon, 2: Details</p>
051	DocSvr Trans	*CTL	<p>Sets the number of documents to be displayed in the document box list.</p> <p>[5 to 20 / <b>10</b> / 1]</p>
100	Set Signature	*CTL	<p>Selects whether the signature is added to the scanned documents with the WIM when they are transmitted by an e-mail.</p> <p>[0 to 2 / <b>0</b> / 1/step]</p> <p>0: Setting for each e-mail</p> <p>1: Signature for all</p> <p>2: No signature</p>
101	Set Encrypsion	*CTL	<p>Determines whether the scanned documents with the WIM are encrypted when they are transmitted by an e-mail.</p> <p>[0 to 1 / <b>0</b> / 1]</p> <p>0: Not encrypted, 1:Encryption</p>
200	Detect Mem Leak	*CTL	Not Used
201	DocSvr Timeout	*CTL	Not Used

5887	[SD Get Counter]		
	This SP determines whether the ROM can be updated.		
001	-	*CTL	<p>This SP sends a text file to an SD card inserted in SD card Slot 2 (lower slot). The operation stores. The file is stored in a folder created in the root directory of the SD card called SD_COUNTER. The file is saved as a text file (*.txt) prefixed with the number of the machine.</p> <ol style="list-style-type: none"> <li>1. Insert the SD card in SD card Slot 2 (lower slot).</li> <li>2. Select SP5887 then touch [EXECUTE].</li> </ol> <p>Touch [Execute] in the message when you are prompted.</p>
5888 [Personal Information Protect]			
001	-	*CTL	<p>Selects the protection level for logs.</p> <p>[0 to 1 / 0 / 1}</p> <p>0: No authentication, No protection for logs</p> <p>1: No authentication, Protected logs (only an administrator can see the logs)</p>
5893	[SDK Application Counter]	*CTL	-
	Displays the counter name of each SDK application.		
001	SDK-1		
002	SDK-2		
003	SDK-3		
004	SDK-4		
005	SDK-5		
006	SDK-6		
5894 [External Counter Setting]			
5894	Test Name1_1		



001	Switch Charge Mode	*ENG	[0 to 2 / 0 / 1/step]
5895	[Application Invalidation]		
	Enables or disables the printer or scanner application. These SPs are used only when an external controller is installed in the machine.		
001	Printer	*CTL	[0 or 1 / 0 / -]
002	Scanner	*CTL	0: Enable 1: Disable
5907	[Plug & Play Maker/Model Name]		
001	Selects the brand name and the production name for Windows Plug & Play. This information is stored in the NVRAM. If the NVRAM is defective, these names should be registered again.		
	After selecting, press the "Original Type" key and "#" key at the same time. When the setting is completed, the beeper sounds five times.		
5913	[Switchover Permission Time]		
002	Print Application Timer	*CTL	[3 to 30 / 3 / 1 second /step]
	Sets the amount of time to elapse while the machine is in standby mode (and the operation panel keys have not been used) before another application can gain control of the display.		
5967	[Copy Server : Set Function]	*CTL	0: ON, 1: OFF
001	Enables and disables the document server. This is a security measure that prevents image data from being left in the temporary area of the HDD. After changing this setting, you must switch the main switch off and on to enable the new setting.		
5974	[Cherry Server]		
	Specifies which version of ScanRouter, "Lite" or "Full", is installed.		
001	(0:Light 1:Full)	*CTL	[0 or 1 / 0 / -]

5985	[Device Setting]	
	The NIC and USB support features are built into the GW controller. Use this SP to enable and disable these features. In order to use the NIC and USB functions built into the controller board, these SP codes must be set to "1".	
001	On Board NIC	<p>[0 to 2 / 0 / 1 /step]</p> <p>0: Disable, 1: Enable, 2: Function limitation</p> <p>When the "Function limitation" is set, "On board NIC" is limited only for the NRS or LDAP/NT authentication.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>Other network applications than NRS or LDAP/NT authentication are not available when this SP is set to "2". Even though you can change the initial settings of those network applications, the settings do not work.</li> </ul>
002	On Board USB	<p>[0 or 1 / 0 / 1/step]</p> <p>0: Disable, 1: Enable</p>

5987	[Mech. Counter]		
001	0: OFF / 1: ON	*ENG	This SP detects that a mechanical counter device is removed. If it is detected, SC610 occurs.

5990	[SP print mode]		
	Prints out the SMC sheets.		

001	All (Data List)	-	
002	SP (Mode Data List)	-	
003	User Program	-	
004	Logging Data	-	
005	Diagnostic Report	-	
006	Non-Default	-	-
007	NIB Summary	-	
008	Capture Log	-	
021	Copier User Program	-	
022	Scanner SP	-	
023	Scanner User Program	-	
024	SDK/J Summary	-	-
025	SDK/J Application Info	-	

5992	[SP Text mode]
	Exports the SMC sheet data to the SD Card.

001	All (Data List)	-	Press "Execute" key to start exporting the SMC data in the SP mode display.
002	SP (Mode Data List)	-	
003	User Program	-	
004	Logging Data	-	
005	Diagnostic Report	-	
006	Non-Default	-	
007	NIB Summary	-	
008	Capture Log	-	
021	Copier User Program	-	
022	Scanner SP	-	
023	Scanner User Program	-	
024	SDK/J Summary	-	
025	SDK/J Application Info	-	
026	Printer SP mode	-	

5998	[Fusing Cont mode] Fusing Control Mode		
	Turns the silent fusing warm-up mode on or off.		
001	fast/silent	*ENG	[0 or 1 / 1 / -] 0: Silent (less noise) 1: Fast (less time)

## Main SP Tables-6

### SP6-XXX (Peripherals)

6006	[ADF Adjustment]		
	Adjusts the side-to-side and leading registration of originals with the ARDF.		
001	Side-to-Side Regist: Front	*ENG	[-3.0 to 3.0 / 0 / 0.1 mm/step ]
002	Side-to-Side Regist: Rear		
003	Leading Edge Registration	*ENG	[-5.0 to 5.0 / 0 / 0.1 mm/step ]
	Adjusts the amount of paper buckle to correct original skew for the front and rear sides.		
005	Buckle: Duplex Front	*ENG	[-3.0 to 3.0 / 0 / 0.1 mm/step ]
006	Buckle: Duplex Rear		
	Adjusts the erase margin at the original trailing edge.		
007	Rear Edge Erase	*ENG	[-10 to 10 / 0 / 0.1 mm/step ]
6007	[ADF INPUT Check]		
	Displays the signals received from the sensors and switches of the ARDF. Only Bit 0 is used for ADF input check ( p.375).		
6008	[ADF OUTPUT Check]		
	Activates the electrical components for functional check. It is not possible to activate more than one component at the same time ( p.375).		
6009	[ADF Free Run]		
	Performs a DF free run in simplex, duplex mode or stamp mode.		
001	Free Run Simplex Motion	*ENG	-
002	Free Run Duplex Motion	*ENG	
003	Free Run Stamp Motion	*ENG	

6010	[Stamp Position Adj.] Fax Stamp Position Adjustment		
	Adjusts the horizontal position of the stamp on the scanned originals.		
001	-	*ENG	[-5.0 to 5.0 / <b>0</b> / 1 mm/step]

6016	[Original Size Detect Setting]			
	Specifies the original size for a size detected by the original sensor, since original sensors cannot recognize all sizes.			
001	-	*ENG	[0 or 1 / - / -] 0: Setting 1, 1: Setting 2	
		NA	Setting 1	Setting 2
			DLT SEF	Folio SEF 11" x 15"
			LG SEF	Foolscap SEF
			LT SEF	US EXE 8" x 10"
			LT LEF	US EXE LEF
		EU/ ASIA	DLT SEF	8K 267 x 390 mm
			LT SEF	16K 195 x 267 mm
			LT LEF	16K 267 x 195 mm

6017	[DF Magnification Adj.] DF Magnification Adjustment		
	Adjusts the magnification in the sub-scan direction for the ARDF.		
001	-	*CTL	[-5.0 to 5.0 / <b>0</b> / 0.1 %/step]

6020	[Skew Correction Moving Setting]		
	Turns the original skew correction in the ARDF for all original sizes on or off.		
001	-	*ENG	[0 or 1 / <b>0</b> / -] 0: Off (only for small original sizes) 1: On (for all original sizes)

6128	[Punch Position: Sub Scan]		
	Adjusts the punching position in the sub scan direction.		
001	Domestic 2Hole (Europe 2Hole)	*ENG	[-7.5 to 7.5 / <b>0</b> / 0.5 mm/step]
002	North America 3Hole	*ENG	
003	Europe 4Hole	*ENG	
004	North Europe 4Hole	*ENG	
005	North America 2Hole	*ENG	

6129	[Punch Position: Main Scan]		
	Adjusts the punching position in the main scan direction.		
001	Domestic 2Hole (Europe 2Hole)	*ENG	[-2.0 to 2.0 / <b>0</b> / 0.4 mm/step]
002	North America 3Hole	*ENG	
003	Europe 4Hole	*ENG	
004	North Europe 4Hole	*ENG	
005	North America 2Hole	*ENG	

6130	[Skew Correction: Buckle Adj.]		
	Adjusts the paper buckle for each paper size.		

001	A3T	*ENG	[-5.0 to 5.0 / 0 / 0.25 mm/step]
002	B4T	*ENG	
003	A4T	*ENG	
004	A4Y	*ENG	
005	B5T	*ENG	
006	B5Y	*ENG	
007	DLT-T	*ENG	
008	LG-T	*ENG	
009	LT-T	*ENG	
010	LT-Y	*ENG	
011	12*18	*ENG	
012	Other	*ENG	

6131	[Skew Correction Control]
	Selects the skew correction control for each paper size. These are only activated for B804/B805.




001	A3T	*ENG	[0 or 1 / <b>0</b> / 1/step] 0: No (No skew correction) 1: Roller Stop Skew Correction
002	B4T	*ENG	
003	A4T	*ENG	
004	A4Y	*ENG	
005	B5T	*ENG	
006	B5Y	*ENG	
007	DLT-T	*ENG	
008	LG-T	*ENG	
009	LT-T	*ENG	
010	LT-Y	*ENG	
011	12*18	*ENG	
012	Other	*ENG	


6132	[Jogger Fence Fine Adj]
	This SP adjusts the distance between the jogger fences and the sides of the stack on the finisher stapling tray in the (Booklet) Finisher B804/B805. The adjustment is done perpendicular to the direction of paper feed.

001	A3T	*ENG	[-1.5 to 1.5 / <b>0</b> / 0.5 mm/step] + Value: Increases distance between jogger fences and the sides of the stack. - Value: Decreases the distance between the jogger fences and the sides of the stack.
002	B4T	*ENG	
003	A4T	*ENG	
004	A4Y	*ENG	
005	B5T	*ENG	
006	B5Y	*ENG	
007	DLT-T	*ENG	
008	LG-T	*ENG	
009	LT-T	*ENG	
010	LT-Y	*ENG	
011	12*18	*ENG	
012	Other	*ENG	

6133	[Staple Position Adjustment]		
	Adjusts the staple position for each finisher (B408/B804/B805). + Value: Moves the staple position to the rear side. - Value: Moves the staple position to the front side.		
001	Finisher1	*ENG	[-3.5 to 3.5 / <b>0</b> / 1/step]

6134	[Saddle Stitch Position Adjust]		
	Use this SP to adjust the stapling position of the booklet stapler when paper is stapled and folded in the Booklet Finisher B804.		

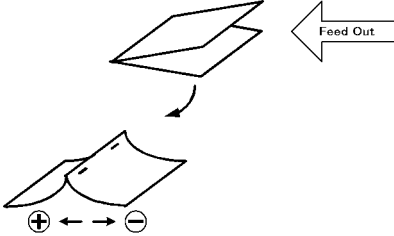001	A3T	<p>[-3.0 to 3.0 / 0 / 0.2 mm/step]</p> <p>+ Value: Shifts staple position toward the crease. - Value: Shifts staple position away from the crease.</p> 
002	B4T	
003	A4T	
004	B5T	
005	DLT-T	
006	LG-T	
007	LT-T	
008	12*18	
009	Other	

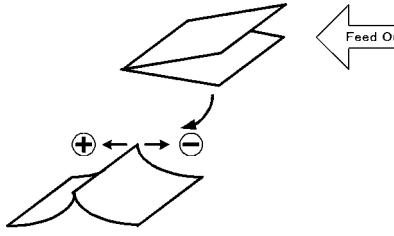6135	[Folder Position Adj.]	
	This SP corrects the folding position when paper is stapled and folded in the Booklet Finisher B804.	
001	A3T	<p>[-3.0 to 3.0 / 0 / 0.2 mm/step]</p> <p>+ Value: Shifts staple position toward the crease. - Value: Shifts staple position away from the crease.</p> 
002	B4T	
003	A4T	
004	B5T	
005	DLT-T	
006	LG-T	
007	LT-T	
008	12*18	
009	Other	

6136	[Folding Number]	
	Sets the number of times that folding is done in the Booklet Finisher B804.	
001	-	[2 to 30 / 2 / 1 time/step]

6139	[FIN (KIN) INPUT Check] Finisher (B408) Input Check		
	Displays the signals received from sensors and switches of the booklet finisher. (📖 p.375 )		

6140	[FIN (EUP) INPUT Check] Finisher (B804/B805) Input Check		
	Displays the signals received from sensors and switches of the (booklet) finisher. (📖 p. 375)		

6144	[FIN (KIN) OUPUT Check] Finisher (B408) Output Check		
	Displays the signals received from sensors and switches of the booklet finisher. (📖 p.375)		

6145	[FIN (EUP) OUPUT Check] Finisher (B804/B805) Output Check		
	Displays the signals received from sensors and switches of the (booklet) finisher. (📖 p. 375)		

6149	[Max. Pre-Stack Sheet]	*ENG	Number of Pre-Stack Sheets
	This SP sets the number of sheets sent to the pre-stack tray. <b>Note</b> <ul style="list-style-type: none"> <li>You may need to adjust this setting or switch it off when feeding thick or slick paper.</li> </ul>		
001	-	[0 to 3 / 3 / 1 sheet/step]	

6150	[INPUT Check]		
	Displays the signals received from sensors and switches of the bridge unit (D386) / side tray (D542) (📖 p.375).		

6151	[OUTPUT Check]		
	Displays the signals received from sensors and switches of the bridge unit (D386)/ side tray (D542) (📖 p.375).		

6152	[INPUT Check]		
	Displays the signals received from sensors and switches of the shift tray (D388) (📖 p. 375).		

6153	[OUTPUT Check]
	Displays the signals received from sensors and switches of the shift tray (D388) (p. 375).
6154	[INPUT Check]
	Displays the signals received from sensors and switches of the 1 bin tray (D536) (p. 375).
6155	[OUTPUT Check]
	Displays the signals received from sensors and switches of the 1 bin tray (D536) (p. 375).
001	1 bin: Junction Solenoid
6160	[INPUT Check]
	Displays the signals received from sensors and switches of the two-tray paper feed unit (D537), LCT 2000 (D538) and LCT 1200 (D539) (p.375).
6161	[OUTPUT Check]
	Displays the signals received from sensors and switches of the two-tray paper feed unit (D537), LCT 2000 (D538) and LCT 1200 (D539) (p.375).

# Main SP Tables-7

## SP7-XXX (Data Log)

3

7401	[Total SC]		
	Displays the number of SC codes detected.		
001	SC Counter	*CTL	[0 to 65535 / - / 1/step ]
002	Total SC Counter	*CTL	[0 to 65535 / - / 1/step ]

7403	[SC History]		
	Logs the SC codes detected. The 10 most recently detected SC Codes are not displayed on the screen, but can be seen on the SMC (logging) outputs.		
001	-	*CTL	-
002	-		
003	-		
004	-		
005	-		
006	-		
007	-		
008	-		
009	-		
010	-		

7502	[Total Paper Jam]		
	Displays the total number of jams detected.		
001	Jam Counter	* CTL	[0 to 65535 / - / 1/step ]
002	Total Jam Counter	* CTL	[0 to 65535 / - / 1/step ]

7503	[Total Original Jam]		
	Displays the total number of original jams.		
001	Original Jam counter	*CTL	[0 to 9999 / - / 1 original/step ]

7504	[Paper Jam Loc]		
	ON: On check, OFF: Off Check		
Displays the number of jams according to the location where jams were detected.			
<b>NOTE:</b> The LCT is counted as the 3rd feed station.			
001	At Power On	*CTL	For details, see "Jam Detection" in the "Main Chapters: 6. Troubleshooting".
003	Tray 1: On	*CTL	
004	Tray 2: On	*CTL	
005	Tray 3: On	*CTL	
006	Tray 4: On	*CTL	
007	LCT : On	*CTL	
008	Registration Sn: On (Bypass)	*CTL	
009	Registration Sn: On (Duplex)	*CTL	
011	Vertical Trans. 1: On	*CTL	
012	Vertical Trans. 2: On	*CTL	

013	Vertical Trans. 3: On	* CTL	For details, see "Jam Detection" in the "Main Chapters: 6. Troubleshooting".
014	Vertical Trans. 4: On	* CTL	
017	Registration Sn: On (Tray)	* CTL	
018	Fusing Entrance: On	* CTL	
019	Fusing Exit: On	* CTL	
020	Paper Exit: On	* CTL	
021	Bridge Tray Exit: On	* CTL	
022	Bridge Relay: On	* CTL	
024	Junction Gate Sensor : On	* CTL	
025	Duplex Exit: On	* CTL	
026	Duplex Entrance: On (In)	* CTL	
027	Duplex Entrance: On (Out)	* CTL	
051	Vertical Trans. 1: Off	* CTL	
052	Vertical Trans. 2: Off	* CTL	
053	Vertical Trans. 3: Off	* CTL	
054	Vertical Trans. 4: Off	* CTL	
057	Registration Sensor: Off	* CTL	
058	LCT Feed Sensor : Off	* CTL	
060	Paper Exit Off	* CTL	
061	Bridge Exit: Off	* CTL	
062	Bridge Relay: Off	* CTL	



064	Junction Gate Sensor : Off	* CTL	For details, see "Jam Detection" in the "Main Chapters: 6. Troubleshooting".
065	Duplex Exit: Off	* CTL	
066	Duplex Entrance: Off (In)	* CTL	
067	Duplex entrance : Off (Out)	* CTL	
100	Finisher Entrance: KIN	* CTL	
101	Finisher Shift Tray Exit: KIN	* CTL	
102	Finisher Staple: KIN	* CTL	
103	Finisher Exit: KIN	* CTL	
105	Finisher Tray Lift Motor: KIN	* CTL	
106	Finisher Jogger Motor: KIN	* CTL	
107	Finisher Shift Motor: KIN	* CTL	
108	Finisher Staple Motor: KIN	* CTL	
109	Finisher Exit Motor: KIN	* CTL	
191	Finisher Entrance: EUP	* CTL	
192	Finisher Proof Exit: EUP	* CTL	
193	Finisher Shift Tray Exit: EUP	* CTL	
194	Finisher Stapler Exit: EUP	* CTL	
195	Finisher Exit: EUP	* CTL	
198	Finisher Folder: EUP	* CTL	
199	Finisher Tray Motor: EUP	* CTL	
200	Finisher Jogger Motor: EUP	* CTL	
201	Finisher Shift Motor: EUP	* CTL	
202	Finisher Staple Moving Motor: EUP	* CTL	
203	Finisher Staple Motor: EUP	* CTL	
204	Finisher Folder Motor: EUP	* CTL	
206	Finisher Punch Motor: EUP	* CTL	

7505	[Original Jam Det]			
	Displays the total number of original jams by location.			
001	At Power On	*CTL	-	
003	Separation Sensor: On	*CTL	-	
004	Skew Correction Sn: On	*CTL		
005	Scanning Entrance Sn: On	*CTL		
006	Registration Sensor: On	*CTL		
007	Original Exit Sensor: On	*CTL		
008	Reverse Sensor: On	*CTL		
053	Separation Sensor: Off	*CTL		-
054	Skew Correction Sn: Off	*CTL		
055	Scanning Entrance Sn: Off	*CTL		
056	Registration Sensor: Off	*CTL		
057	Original Exit Sensor: Off	*CTL		
058	Reverse Sensor: Off	*CTL		

7506	[Jam Count by Paper Size]		
	Displays the number of jams according to the paper size.		
005	A4 LEF	*CTL	[0 to 9999 / - / 1 sheet/step ]
006	A5 LEF	*CTL	
014	B5 LEF	*CTL	
038	LT LEF	*CTL	
044	HLT LEF	*CTL	

132	A3 SEF	*CTL	[0 to 9999 / - / 1 sheet/step ]
133	A4 SEF	*CTL	
134	A5 SEF	*CTL	
141	B4 SEF	*CTL	
142	B5 SEF	*CTL	
160	DLT SEF	*CTL	
164	LG SEF	*CTL	
166	LT SEF	*CTL	
172	HLT SEF	*CTL	
255	Others	*CTL	

7507	[Plotter Jam History]		
	Displays the 10 most recently detected paper jams.		
001	-	*CTL	-
002	-		
003	-		
004	-		
005	-		
006	-		
007	-		
008	-		
009	-		
010	-		

7508	[Original Jam History]		
	Displays the 10 most recently detected original jams.		

001	-	*CTL	-
002	-		
003	-		
004	-		
005	-		
006	-		
007	-		
008	-		
009	-		
010	-		

7624	Part Replacement Operation ON/OFF	
	Selects the PM maintenance for each part.	
001	Drum unit: Bk	[0 or 1 / 1 / -] 0: Not PM maintenance 1: PM maintenance
002	Drum unit: M	
003	Drum unit: C	
004	Drum unit: Y	
005	Development unit: Bk	
006	Development unit: M	
007	Development unit: C	
008	Development unit: Y	
009	Developer: Bk	
010	Developer: M	
011	Developer: C	
012	Developer: Y	

013	Image Transfer Belt	[0 or 1 / 1 / -] 0: Not PM maintenance 1: PM maintenance
014	Image Transfer Cleaning Unit	
015	Fusing Unit	
016	Paper Transfer Roller Unit	
017	Waste Toner bottle	
018	Fusing Roller	
019	Pressure Roller	

7801	[ROM No/ Firmware Version]		
002	Engine	*CTL	Displays all versions and ROM numbers in the machine.

7803	[PM Counter Display] (Page, Unit, [Color])		
	<p>Displays the number of sheets printed for each current maintenance unit.</p> <p>PM counters click up based on the number of A4 (LT) LEF size sheets printed. Therefore, the A3 (DLT) Double Count is activated. The Double Count cannot be deactivated.</p> <p>When a unit is replaced, the machine automatically detects that the new unit is installed. Then, the current PM counter value is automatically moved to the PM Counter - Previous (SP7-906-1 to 10) and is reset to "0".</p> <p>The total number of sheets printed with the last unit replaced can be checked with SP7-906-1 to 10.</p> <p>NOTE: The LCT is counted as the 3rd feed station.</p>		
001	Paper	*CTL	-

002	Page: PCU: Bk	*ENG	-
003	Page: PCU: M		
004	Page: PCU: C		
005	Page: PCU: Y		
006	Page: Development Unit: Bk		
007	Page: Development Unit: M		
008	Page: Development Unit: C		
009	Page: Development Unit: Y		
010	Page: Developer: Bk		
011	Page: Developer: M		
012	Page: Developer: C		
013	Page: Developer: Y		
014	Page: Image Transfer		
015	Page: Cleaning Unit		
016	Page: Fusing Unit		
017	Page: Paper Transfer Unit		
018	Page: Toner Collection Bottle		
019	Page: Fusing Roller		
020	Page: Pressure Roller		
<p>Displays the number of revolutions of motors or clutches for each current maintenance unit.</p> <p>[ 0 to 9999999 / 0 / 1 revolution/step ]</p> <p>When a unit is replaced, and SP7804-xxx is executed, the current PM counter value is moved to the PM Counter - Previous (SP7-906-11 to 20) and is reset to "0". The total number of revolutions made with the last unit replaced can be checked with SP7-906-11 to 20.</p>			
021	-	*ENG	

	<p>Displays the number of pages of the pump unit for each current maintenance unit. [ 0 to 9999999 / - / 1 page/step ]</p> <p>When a unit is replaced, and SP7804-xxx is executed, the current PM counter value is moved to the PM Counter - Previous (SP7-906-020 to 112) and is reset to "0". The total number of revolutions made with the last unit replaced can be checked with SP7-906-020 to 112.</p>		
021	Page: Pump Unit: Bk	*ENG	[ 0 to 9999999 / - / 1 page/step ]
022	Page: Pump Unit: M		
023	Page: Pump Unit: C		
024	Page: Pump Unit: Y		
031	Rotation: PCU: Bk	*ENG	[0 to 999999999 / - / 1 mm/step ]
032	Rotation: PCU: M		
033	Rotation: PCU: C		
034	Rotation: PCU: Y		
035	Rotation: Development Unit: Bk		
036	Rotation: Development Unit: M		
037	Rotation: Development Unit: C		
038	Rotation: Development Unit: Y		
039	Rotation: Developer: Bk		
040	Rotation: Developer: M		
041	Rotation: Developer: C		
042	Rotation: Developer: Y		

043	Rotation: Image Transfer	*ENG	[0 to 999999999 / - / 1 mm/step ]
044	Rotation: Cleaning Unit	*ENG	
045	Rotation: Fusing Unit	*ENG	
046	Rotation: Paper Transfer Unit	*ENG	
047	Measurement: Toner Collection bottle	*ENG	
048	Rotation: Fusing Roller	*ENG	
049	Rotation: Pressure Roller	*ENG	
<p>Displays the value given by the following formula:  <math>(\text{Current revolution} / \text{Target revolution}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Rotation% counter is based on rotations, not prints. If the number of rotations reaches the limit, the machine enters the end condition for that unit. If the print count lifetime is reached first, the machine also enters the end condition, even though the R% counter is still less than 100%.</p>			
050	-	*ENG	
<p>Displays the running time of the pump unit for each current maintenance unit.                  [0 to 999999999 / 0 / 1 msec/step]</p> <p>When a unit is replaced, and SP7804-xxx is executed, the current PM counter value is moved to the PM Counter - Previous (SP7-906-020 to 112) and is reset to "0". The total number of revolutions made with the last unit replaced can be checked with SP7-906-020 to 112.</p>			
050	Run Time: Pump Unit : Bk	*ENG	[0 to 999999999 / - / 1 msec/step]
051	Run Time: Pump Unit : M		
052	Run Time: Pump Unit : C		
053	Run Time: Pump Unit : Y		



061	Rotation (%): PCU: Bk	*ENG	[0 to 255 / - / 1 %/step] (079)
062	Rotation (%): PCU: M		
063	Rotation (%): PCU:C		
064	Rotation (%): PCU:Y		
065	Rotation (%): Development Unit: Bk		
066	Rotation (%): Development Unit: M		
067	Rotation (%): Development Unit: C		
068	Rotation (%): Development Unit: Y		
069	Rotation (%): Developer: Bk		
070	Rotation (%): Developer: M Developer		
071	Rotation (%): Developer: C		
072	Rotation (%): Developer: Y		
073	Rotation (%): Image Transfer Belt	*ENG	[0 to 255 / - / 1 %/step]
074	Rotation (%): Cleaning Unit		
075	Rotation (%): Fusing Unit		
076	Rotation (%): Paper Transfer Unit		
077	Measurement (%): Toner Collection bottle		
078	Rotation (%): Fusing Roller		
079	Rotation (%): Pressure Roller		
<p>Displays the value given by the following formula:  <math>(\text{Current revolution} / \text{Target revolution}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Rotation (%) counter is based on rotations, not prints. If the number of rotations reaches the limit, the machine enters the end condition for that unit. If the print count lifetime is reached first, the machine also enters the end condition, even though the R (%) counter is still less than 100%.</p> <p>[0 to 255 / - / 1 %/step]</p>			

	-	*ENG	
080	<p>Displays the value given by the following formula:  <math>(\text{Current running time} / \text{Target running time}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Run Time (%) counter is based on the running time, not printouts nor revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Run Time (%) counter is still less than 100%.</p> <p>[0 to 255 / - / 1 %/step]</p>		
080	Run Time(%): Pump Unit: Bk	*ENG	[0 to 255 / - / 1 %/step]
081	Run Time(%): Pump Unit: M		
082	Run Time(%): Pump Unit: C		
083	Run Time(%): Pump Unit: Y		
091	-		
	<p>Displays the value given by the following formula:  <math>(\text{Current printouts} / \text{Target printouts}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Page (%) counter is based on printouts, not revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Page (%) counter is still less than 100%.</p> <p>[0 to 255 / - / 1 %/step]</p>		
091	Page (%): PCU: Bk	*ENG	[0 to 255 / - / 1 %/step]
092	Page (%): PCU: M		
093	Page (%): PCU: C		
094	Page (%): PCU: Y		
095	Page (%): Development Unit: Bk		
096	Page (%): Development Unit: M		
097	Page (%): Development Unit: C		
098	Page (%): Development Unit: Y		

099	Page (%): Developer: Bk	*ENG	[0 to 255 / - / 1 %/step] (091)
100	Page (%): Developer: M		
101	Page (%): Developer: C		
102	Page (%): Developer: Y		
103	Page (%): Image Transfer		
104	Page (%): Cleaning Unit		
105	Page (%): Fusing Unit		
106	Page (%): Paper Transfer Unit		
107	Page (%): Fusing Roller		
108	Page (%): Pressure Roller		
109	-	*ENG	
	<p>Displays the value given by the following formula:  <math>(\text{Current printouts} / \text{Target printouts}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Page (%) counter is based on printouts, not revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Page (%) counter is still less than 100%.</p> <p>[0 to 255 / - / 1 %/step]</p>		
109	Page (%): Pump Unit: Bk	*ENG	[0 to 255 / - / 1 %/step]
110	Page (%): Pump Unit: M		
111	Page (%): Pump Unit: C		
112	Page (%): Pump Unit: Y		
7804	[PM Counter Reset] PM Counter Clear (Unit, [Color])		
	<p>Clears the PM counter.</p> <p>Press the Enter key after the machine asks "Execute?", which will store the PM counter value in SP7-906 (PM Counter - Previous) and reset the value of the current PM counter (SP7-803) to "0".</p>		

002	PCU (Drum Unit): Bk	-	-
003	PCU (Drum Unit): M	-	-
004	PCU (Drum Unit): C	-	-
005	PCU (Drum Unit): Y	-	-
006	PCU (Drum Unit): All	-	-
007	Development Unit: Bk	-	-
008	Development Unit: M	-	-
009	Development Unit: C	-	-
010	Development Unit: Y	-	-
011	Development Unit: All	-	-
012	Developer: Bk	-	-
013	Developer: M	-	-
014	Developer: C	-	-
015	Developer: Y	-	-
016	Developer: All	-	-
017	ITB Unit	-	-
018	Cleaning Unit	-	-
019	Fusing Unit	-	-
020	PTR Unit	-	-
021	Toner Collection Bottle	-	-
022	Fusing Roller (Heating Roller)	-	-
023	Pressure Roller	-	-
024	Pump Unit: Bk	-	-
025	Pump Unit: M	-	-
026	Pump Unit: C	-	-
027	Pump Unit: Y	-	-

028	Pump Unit: All	-	-
100	All	-	-

7807	[SC/Jam Counter Reset]		
	Clears the counters related to SC codes and paper jams.		
001	SC/Jam Clear	-	-

7832	[Self-Diagnose Result Display]		
	Displays the result of the diagnostics.		
001	Diag. Result	*CTL	-

 
7835	[ACC Counter]		
001	Copy ACC	*CTL	Displays the ACC execution times for each mode.
002	Printer ACC	*CTL	

7836	Total Memory Size		
	Displays the memory capacity of the controller system.		


7852	[DF Glass Dust Check]		
	Counts the number of occurrences (0 to 65,535) when dust was detected on the scanning glass of the ADF or resets the dust detection counter. Counting is done only if SP4-020-1 (ADF Scan Glass Dust Check) is switched on.		
001	Dust Detection Counter	*ENG	[0 to 9999 / - / 1 /step]
002	Dust Detection Clear Counter	*ENG	[0 to 9999 / - / 1 /step]
003	Dust Detection Counter: Back	*ENG	[0 to 9999 / - / 1 /step]

7853	[Replacement Counter]		
	Displays the PM parts replacement number.		



001	PCU: Bk	*ENG	[0 to 255 / - / 1 /step]
002	PCU: M	*ENG	
003	PCU: C	*ENG	
004	PCU: Y	*ENG	
005	Development Unit: Bk	*ENG	
006	Development Unit: M	*ENG	
007	Development Unit: C	*ENG	
008	Development Unit: Y	*ENG	
009	Developer: Bk	*ENG	
010	Developer: M	*ENG	
011	Developer: C	*ENG	
012	Developer: Y	*ENG	
013	Image Transfer	*ENG	[0 to 255 / - / 1 /step]
014	Cleaning Unit	*ENG	
015	Fusing Unit	*ENG	
016	Paper Transfer Unit	*ENG	
017	Tonner Collection Bottle	*ENG	
018	Fusing Roller	*ENG	
019	Pressure Roller	*ENG	
020	Pump Unit: Bk	*ENG	[0 to 255 / - / 1 /step]
021	Pump Unit: M		
022	Pump Unit: C		
023	Pump Unit: Y		

7855	[Coverage Range]		
	<p>Sets the color coverage threshold.</p> <p>Coverage rate = Coverage per page / A4 full coverage (dots) x 100</p> <p>There are three coverage counters: Color 1, Color 2, and Color 3</p> <ul style="list-style-type: none"> <li>• [A] 5% (default) is adjustable with SP7855-001.</li> <li>• [B] 20% (default) is adjustable with SP7855-002.</li> </ul> 		
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The setting value [B] must be set larger than [A].</li> </ul> <p>The total numbers of printouts (BW printing plus color printing) for each coverage range are displayed with the following SPs.</p> <ul style="list-style-type: none"> <li>• Color1 counter: SP8601-021</li> <li>• Color2 counter: SP8601-022</li> <li>• Color3 counter: SP8601-023</li> </ul>		
001	Coverage Range 1	*CTL	[1 to 200 / <b>5</b> / 1]
002	Coverage Range 2	*CTL	[1 to 200 / <b>20</b> / 1]

7906	[Prev. Unit PM Counter]		
	(Page or Rotations, Unit, [Color]), Dev.: Development Unit		
	Displays the number of sheets printed with the previous maintenance units.		

001	Page: PCU: Bk	*ENG	[0 to 9999999 / 0 / 1 page/step]
002	Page: PCU: M		
003	Page: PCU: C		
004	Page: PCU: Y		
005	Page: Development Unit: Bk		
006	Page: Development Unit: M		
007	Page: Development Unit: C		
008	Page: Development Unit: Y		
009	Page: Developer: Bk		
010	Page: Developer: M		
011	Page: Developer: C		
012	Page: Developer: Y		
013	Page: Image Transfer	*ENG	[0 to 9999999 / 0 / 1 page/step]
014	Page: Cleaning Unit		
015	Page: Fusing Unit		
016	Page: Paper Transfer Unit		
017	Page: Toner Collection Bottle		
018	Page: Fusing Roller		
019	Page: Pressure Roller		
	Displays the number of revolutions for motors or clutches in the previous maintenance units. (  031 - 046)		
020	Page: Pump Unit	*ENG	
	Displays the number of sheets printed with the previous maintenance units. [0 to 9999999 / 0 / 1 page/step]		



020	Page: Pump Unit: Bk	*ENG	[0 to 9999999 / 0 / 1 page/step]
021	Page: Pump Unit: M		
022	Page: Pump Unit: C		
023	Page: Pump Unit: Y		
031	Rotation: PCU: Bk	*ENG	[0 to 9999999 / 0 / 1 mm/step] (  019)
032	Rotation: PCU: M		
033	Rotation: PCU: C		
034	Rotation: PCU: Y		
035	Rotation: Development Unit: Bk		
036	Rotation: Development Unit: M		
037	Rotation: Development Unit: C		
038	Rotation: Development Unit: Y		
039	Rotation: Developer: Bk		
040	Rotation: Developer: M		
041	Rotation: Developer: C		
042	Rotation: Developer: Y		
043	Rotation: Image Transfer	*ENG	[0 to 9999999 / 0 / 1 mm/step] (  019)
044	Rotation: Cleaning Unit		
045	Rotation: Fusing Unit		
046	Rotation: Paper Transfer Unit		
047	Measurement: Toner Collection bottle		
048	Rotation: Fusing Roller		
049	Rotation: Pressure Roller		
	Displays the number of sheets printed with the previous maintenance unit or toner cartridge.		
050	Run Time: Pump Unit	*ENG	

	Displays the running time of the previous pump unit [0 to 999999999 / 0 / 1 msec/step]		
050	Run Time: Pump Unit: Bk	*ENG	[0 to 999999999 / 0 / 1 msec/step]
051	Run Time: Pump Unit: M		
052	Run Time: Pump Unit: C		
053	Run Time: Pump Unit: Y		
061	Rotation %: PCU:	*ENG	
	Displays the value given by the following formula: $(\text{Current revolution} / \text{Target revolution}) \times 100$ . This shows how much of the unit's expected lifetime has been used up. The Rotation % counter is based on rotations, not prints. If the number of rotations reaches the limit, the machine enters the end condition for that unit. If the print count lifetime is reached first, the machine also enters the end condition, even though the Rotation % counter is still less than 100%. [0 to 255 / 0 / 1 %/step ]		
061	Rotation %: PCU: BK	*ENG	[0 to 255 / 0 / 1 %/step ]
062	Rotation %: PCU:M		
063	Rotation %: PCU:C		
064	Rotation %: PCU:Y		
065	Rotation %: Development Unit: Bk		
066	Rotation %: Development Unit: M		
067	Rotation %: Development Unit: C		
068	Rotation %: Development Unit: Y		

069	Rotation %: Developer: Bk	*ENG	[0 to 255 / 0 / 1 %/step ]
070	Rotation %: Developer: M		
071	Rotation %: Developer: C		
072	Rotation %: Developer: Y		
073	Rotation %: Image Transfer Belt		
074	Rotation %: Cleaning Unit		
075	Rotation %: Fusing Unit		
076	Rotation %: Paper Transfer Unit		
077	Measurement %: Toner Collection bottle		
078	Rotation (%): Fusing Roller		
079	Rotation (%): Pressure Roller		
	Displays the value given by the following formula: (Current count / Yield count) x 100, where "Current count" is the current values in the counter for the part, and "Yield count" is the recommended yield.		
080	Run Time (%): Pump Unit	*ENG	
	Displays the value given by the following formula: (Current running time / Target running time) x 100. This shows how much of the unit's expected lifetime has been used up. The Run Time (%) counter is based on the total running time, not printouts nor revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Run Time (%) counter is still less than 100%. [0 to 255 / 0 / 1 %/step ]		
080	Run Time (%): Pump Unit : Bk	*ENG	[0 to 255 / 0 / 1 %/step ]
081	Run Time (%): Pump Unit : M		
082	Run Time (%): Pump Unit : C		
083	Run Time (%): Pump Unit : Y		

	Page %: PCU	*ENG	
091	<p>Displays the value given by the following formula:  <math>(\text{Current printouts} / \text{Target printouts}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Page% counter is based on printouts, not revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Page% counter is still less than 100%.</p> <p>[0 to 255 / 0 / 1 %/step ]</p>		
091	Page %: PCU: Bk	*ENG	[0 to 255 / 0 / 1 %/step ]
092	Page %: PCU: M		
093	Page %: PCU: C		
094	Page %: PCU: Y		
095	Page %: Development Unit: Bk		
096	Page %: Development Unit: M		
097	Page %: Development Unit: C		
098	Page %: Development Unit: Y		
099	Page %: Developer: Bk		
100	Page %: Developer: M		
101	Page %: Developer: C		
102	Page %: Developer: Y		

103	Page %: Image Transfer	*ENG	[0 to 255 / 0 / 1 %/step ]
104	Page %: Cleaning Unit		
105	Page %: Fusing Unit		
106	Page %: Paper Transfer Unit		
107	Page (%): Fusing Roller		
108	Page (%): Pressure Roller		
109	Page (%): Pump Unit: Bk		
110	Page (%): Pump Unit: M		
111	Page (%): Pump Unit: C		
112	Page (%): Pump Unit: Y		

7931	[Toner Bottle Bk]		
	Displays the toner bottle information for Bk.		
001	Machine Serial ID	*ENG	-
002	Cartridge Ver		
003	Brand ID		
004	Area ID		
005	Product ID		
006	Color ID		
007	Maintenance ID		
008	New Product Information		
009	Recycle Counter		
010	Date		
011	Serial No.		

012	Toner Remaining	*ENG	-
013	EDP Code		
014	End History		
015	Refill Information		
016	Attachment: Total Counter		
017	Attachment: Color Counter		
018	End: Total Counter		
019	End: Color Counter		
020	Attachment Date		
021	End Date		

7932	[Toner Bottle M]	*ENG	-
	Displays the toner bottle information for M.		
001	Machine Serial ID		
002	Cartridge Ver		
003	Brand ID		
004	Area ID		
005	Product ID		
006	Color ID		
007	Maintenance ID		
008	New Product Information		
009	Recycle Counter		
010	Date		
011	Serial No.		

012	Toner Remaining	*ENG	-
013	EDP Code		
014	End History		
015	Refill Information		
016	Attachment: Total Counter		
017	Attachment: Color Counter		
018	End: Total Counter		
019	End: Color Counter		
020	Attachment Date		
021	End Date		

7933	[Toner Bottle C]	*ENG	-
	Displays the toner bottle information for C.		
001	Machine Serial ID		
002	Cartridge Ver		
003	Brand ID		
004	Area ID		
005	Product ID		
006	Color ID		
007	Maintenance ID		
008	New Product Information		
009	Recycle Counter		
010	Date		
011	Serial No.		

012	Toner Remaining	*ENG	-
013	EDP Code		
014	End History		
015	Refill Information		
016	Attachment: Total Counter		
017	Attachment: Color Counter		
018	End: Total Counter		
019	End: Color Counter		
020	Attachment Date		
021	End Date		

7934	[Toner Bottle Y]	*ENG	-
	Displays the toner bottle information for Y.		
001	Machine Serial ID		
002	Cartridge Ver		
003	Brand ID		
004	Area ID		
005	Product ID		
006	Color ID		
007	Maintenance ID		
008	New Product Information		
009	Recycle Counter		
010	Date		
011	Serial No.		



012	Toner Remaining	*ENG	-
013	EDP Code		
014	End History		
015	Refill Information		
016	Attachment: Total Counter		
017	Attachment: Color Counter		
018	End: Total Counter		
019	End: Color Counter		
020	Attachment Date		
021	End Date		

7935	[Toner Bottle Log 1: Bk]		
001	Serial No.	*ENG	Displays the toner bottle information log 1 for Bk.
002	Attachment Date		
003	Attachment: Total Counter		
004	Refill Information		
011	Serial No.	*ENG	Displays the toner bottle information log 2 for Bk.
012	Attachment Date		
013	Attachment: Total Counter		
014	Refill Information		
021	Serial No.	*ENG	Displays the toner bottle information log 3 for Bk.
022	Attachment Date		
023	Attachment: Total Counter		
024	Refill Information		

031	Serial No.	*ENG	Displays the toner bottle information log 4 for Bk.
032	Attachment Date		
033	Attachment: Total Counter		
034	Refill Information		
041	Serial No.	*ENG	Displays the toner bottle information log 5 for Bk.
042	Attachment Date		
043	Attachment: Total Counter		
044	Refill Information		

7936	[Toner Bottle Log 1: M]		
001	Serial No.	*ENG	Displays the toner bottle information log 1 for M.
002	Attachment Date		
003	Attachment: Total Counter		
004	Refill Information		
011	Serial No.	*ENG	Displays the toner bottle information log 2 for M.
012	Attachment Date		
013	Attachment: Total Counter		
014	Refill Information		
021	Serial No.	*ENG	Displays the toner bottle information log 3 for M.
022	Attachment Date		
023	Attachment: Total Counter		
024	Refill Information		
031	Serial No.	*ENG	Displays the toner bottle information log 4 for M.
032	Attachment Date		
033	Attachment: Total Counter		
034	Refill Information		

041	Serial No.	*ENG	Displays the toner bottle information log 5 for M.
042	Attachment Date		
043	Attachment: Total Counter		
044	Refill Information		

7937	[Toner Bottle Log 1: C]		
001	Serial No.	*ENG	Displays the toner bottle information log 1 for C.
002	Attachment Date		
003	Attachment: Total Counter		
004	Refill Information		
011	Serial No.	*ENG	Displays the toner bottle information log 2 for C.
012	Attachment Date		
013	Attachment: Total Counter		
014	Refill Information		
021	Serial No.	*ENG	Displays the toner bottle information log 3 for C.
022	Attachment Date		
023	Attachment: Total Counter		
024	Refill Information		
031	Serial No.	*ENG	Displays the toner bottle information log 4 for C.
032	Attachment Date		
033	Attachment: Total Counter		
034	Refill Information		
041	Serial No.	*ENG	Displays the toner bottle information log 5 for C.
042	Attachment Date		
043	Attachment: Total Counter		
044	Refill Information		

7938	[Toner Bottle Log 1: Y]		
001	Serial No.	*ENG	Displays the toner bottle information log 1 for Y.
002	Attachment Date		
003	Attachment: Total Counter		
004	Refill Information		
011	Serial No.	*ENG	Displays the toner bottle information log 2 for Y.
012	Attachment Date		
013	Attachment: Total Counter		
014	Refill Information		
021	Serial No.	*ENG	Displays the toner bottle information log 3 for Y.
022	Attachment Date		
023	Attachment: Total Counter		
024	Refill Information		
031	Serial No.	*ENG	Displays the toner bottle information log 4 for Y.
032	Attachment Date		
033	Attachment: Total Counter		
034	Refill Information		
041	Serial No.	*ENG	Displays the toner bottle information log 5 for Y.
042	Attachment Date		
043	Attachment: Total Counter		
044	Refill Information		
7950	[Unit Replacement Date]		
	Displays the replacement date of each PM unit.		

001	Image Transfer Belt	*ENG	-
002	Cleaning Unit		
003	Paper Transfer Unit		
004	Fusing Unit		
005	Toner Collection Bottle		
006	AIT:Bk		
007	AIT:M		
008	AIT:C		
009	AIT:Y		
010	Fusing Roller		
011	Pressure Roller		
012	Pump Unit: Bk		
013	Pump Unit: M		
014	Pump Unit: C		
015	Pump Unit: Y		

7951	[Remaining Day Counter]
	Displays the remaining unit life of each PM unit.

001	Page: PCU: Bk	*ENG	[0 to 255 / <b>255</b> / 1 day/step]
002	Page: PCU: M		
003	Page: PCU: C		
004	Page: PCU: Y		
005	Page: Development Unit: Bk		
006	Page: Development Unit: M		
007	Page: Development Unit: C		
008	Page: Development Unit: Y		
009	Page: Developer: Bk		
010	Page: Developer: M		
011	Page: Developer: C		
012	Page: Developer: Y		
013	Page: Image Transfer	*ENG	[0 to 255 / <b>255</b> / 1 day/step]
014	Page: Cleaning Unit		
015	Page: Fusing Unit		
016	Page: Paper Transfer Unit		
017	Page: Fusing Roller		
018	Page: Pressure Roller		

031	Rotation: PCU: Bk	*ENG	[0 to 255 / <b>255</b> / 1 day/step]
032	Rotation: PCU: M		
033	Rotation: PCU: C		
034	Rotation: PCU: Y		
035	Rotation: Development Unit: Bk		
036	Rotation: Development Unit: M		
037	Rotation: Development Unit: C		
038	Rotation: Development Unit: Y		
039	Rotation: Developer: Bk		
040	Rotation: Developer: M		
041	Rotation: Developer: C		
042	Rotation: Developer: Y		
043	Rotation: Image Transfer	*ENG	[0 to 255 / <b>255</b> / 1 day/step]
044	Rotation: Cleaning Unit		
045	Rotation: Fusing Unit		
046	Rotation: Paper Transfer Unit		
047	Measurement: Toner Collection bottle		
048	Rotation: Fusing Roller		
049	Rotation: Pressure Roller		

101	Minimum: PCU: Bk	*ENG	<p>Displays one of the three, Remaining Day Counter: Rotation or Runtime, or Remaining Day Counter: Page, which is the minimum value.</p> <p>[0 to 255 / <b>255</b> / 1 day/step]</p> <p>For toner collection bottle, this SP is not displayed because its Remaining Day Counters is calculated with its weights only.</p>
102	Minimum: PCU: M		
103	Minimum: PCU: C		
104	Minimum: PCU: Y		
105	Minimum: Development Unit: Bk		
106	Minimum: Development Unit: M		
107	Minimum: Development Unit: C		
108	Minimum: Development Unit: Y		
109	Minimum: Developer: Bk		
110	Minimum: Developer: M		
111	Minimum: Developer: C		
112	Minimum: Developer: Y		
113	Minimum: Image Transfer		
114	Minimum: Cleaning Unit		
115	Minimum: Fusing Unit		
116	Minimum: Paper Transfer Unit		
117	Minimum: Fusing Roller		
118	Minimum: Pressure Roller		
119	Minimum: Pump Unit: Bk	*ENG	<p>Displays either Remaining Day Counter: time or Page, which is less value.</p> <p>[0 to 255 / <b>255</b> / 1 day/step]</p>
120	Minimum: Pump Unit: M		
121	Minimum: Pump Unit: C		
122	Minimum: Pump Unit: Y		

7952	[PM Yield Setting]		
	Adjusts the unit yield of each PM unit.		
001	Rotation: Image Transfer Belt	*CTL	[0 to 999999999 / <b>256597000</b> / 1 mm/step]



002	Rotation: Cleaning Unit	*CTL	[0 to 999999999 / <b>128299000</b> / 1 mm/step]
003	Rotation: Fusing Unit	*CTL	[0 to 999999999 / <b>155595000</b> / 1 mm/step]
004	Rotation: Paper Transfer Unit	*CTL	[0 to 999999999 / <b>192448000</b> / 1 mm/step]
011	Page: Image Transfer Belt	*CTL	[0 to 999999 / <b>320000</b> / 1 sheet/step]
012	Page: Cleaning Unit	*CTL	[0 to 999999 / <b>160000</b> / 1 sheet/step]
013	Page: Fusing Unit	*CTL	[0 to 999999 / <b>160000</b> / 1 sheet/step]
014	Page: Paper Transfer Unit	*CTL	[0 to 999999 / <b>240000</b> / 1 sheet/step]
021	Day Threshold: PCU: Bk	*CTL	Adjusts the threshold day for the near end from each PM unit. [1 to 30 / <b>15</b> / 1 day/step] These threshold days are used for @Remote alarms.
022	Day Threshold: PCU: M		
023	Day Threshold: PCU: C		
024	Day Threshold: PCU: Y		
025	Day Threshold: Development Unit: Bk		
026	Day Threshold: Development Unit: M		
027	Day Threshold: Development Unit: C		
028	Day Threshold: Development Unit: Y		
029	Day Threshold: Developer: Bk		
030	Day Threshold: Developer: M		
031	Day Threshold: Developer: C		
032	Day Threshold: Developer: Y		

033	Day Threshold: Image Transfer Belt	*CTL	Adjusts the threshold day for the near end from each PM unit. [1 to 30 / 15 / 1 day/step] These threshold days are used for @Remote alarms.
034	Day Threshold: Cleaning Unit		
035	Day Threshold: Fusing Unit		
036	Day Threshold: Paper Transfer Unit		
037	Day Threshold: Toner Collection Bottle		
038	Rotation: PCU Bk	*CTL	[0 to 999999999 / 0 / 1 mm/step]
039	Rotation: PCU M		
040	Rotation: PCU C		
041	Rotation: PCU Y		
042	Rotation: Development Unit: Bk	*CTL	[0 to 999999999 / 0 / 1 mm/step]
043	Rotation: Development Unit: M		
044	Rotation: Development Unit: C		
045	Rotation: Development Unit: Y		
046	Rotation: Developer: Bk	*CTL	[0 to 999999999 / 0 / 1 mm/step]
047	Rotation: Developer: M		
048	Rotation: Developer: C		
049	Rotation: Developer: Y		
050	Page: PCU: Bk	*CTL	[0 to 999999 / 0 / 1 sheet/step]
051	Page: PCU: M		
052	Page: PCU: C		
053	Page: PCU: Y		

054	Page: Development Unit: Bk	*CTL	[0 to 999999 / 0 / 1 sheet/step]
055	Page: Development Unit: M		
056	Page: Development Unit: C		
057	Page: Development Unit: Y		
058	Page: Developer: Bk	*CTL	[0 to 999999 / 0 / 1 sheet/step]
059	Page: Developer: M		
060	Page: Developer: C		
061	Page: Developer: Y		

7953	[Operation Env. Log: PCU: Bk]		
	Displays the PCDU rotation distance in each specified operation environment. T: Temperature (°C), H: Relative Humidity (%)		
001	T<=0	*CTL	[0 to 99999999 / - / 1 mm/step]
002	0<T<=5:0<=H<30		
003	0<T<=5:30<=H<70		
004	0<T<=5:70<=H<=100		
005	5<T<15:0<=H<30		
006	5<T<15:30<=H<55		
007	5<T<15:55<=H<80		
008	5<T<15:80<=H<=100		
009	15<=T<25:0<=H<30		
010	15<=T<25:30<=H<55		

011	15<=T<25:55<=H<80	*CTL	[0 to 99999999 / - / 1 mm/step]
012	15<=T<25:80<=H<=100		
013	25<=T<30:0<=H<30		
014	25<=T<30:30<=H<55		
015	25<=T<30:55<=H<80		
016	25<=T<30:80<=H<=100		
017	30<=T<35:0<=H<30		
018	30<=T<35:30<=H<55		
019	30<=T<35:55<=H<80		
020	30<=T<35:80<=H<=100		
021	35 <= T		

7954	[Operation Env. Log Clear]		
	Clears the operation environment log.		
001	-	-	-

7955	Fusing Stop		
001	Near End: Page	-	[1 to 999999 / <b>318000</b> / 1 sheet/step]
	Displays the threshold sheet for the heating roller near end.		
002	End: Page	-	[1 to 999999 / <b>330000</b> / 1 sheet/step]
	Displays the threshold sheet for the heating roller end.		
003	Near End: Rotation	-	[0 to 999999999 / <b>C3c: 171698000, C3d: 196769000</b> / 1 mm/step]
	Displays the threshold distance for the heating roller near end.		
004	End: Rotation	-	[0 to 999999999 / <b>C3c: 178177000, C3d: 204194000</b> / 1 mm/step]
	Displays the threshold distance for the heating roller end.		

# Main SP Tables-8

## SP8-XXX: Data Log2

Many of these counters are provided for features that are currently not available, such as sending color faxes, and so on. However, here are some Group 8 codes that when used in combination with others, can provide useful information.

SP Numbers	What They Do
SP8211 to SP8216	The number of pages scanned to the document server.
SP8401 to SP8406	The number of pages printed from the document server
SP8691 to SP8696	The number of pages sent from the document server

Specifically, the following questions can be answered:

- How is the document server actually being used?
- What application is using the document server most frequently?
- What data in the document server is being reused?

Most of the SPs in this group are prefixed with a letter that indicates the mode of operation (the mode of operation is referred to as an "application"). Before reading the Group 8 Service Table, make sure that you understand what these prefixes mean.

Prefixes	What it means	
T:	Total: (Grand Total).	Grand total of the items counted for all applications (C, F, P, etc.).
C:	Copy application.	Totals (pages, jobs, etc.) executed for each application when the job was not stored on the document server.
F:	Fax application.	
P:	Print application.	
S:	Scan application.	

L:	Local storage (document server)	Totals (jobs, pages, etc.) for the document server. The L: counters work differently case by case. Sometimes, they count jobs/pages stored on the document server; this can be in document server mode (from the document server window), or from another mode, such as from a printer driver or by pressing the Store File button in the Copy mode window. Sometimes, they include occasions when the user uses a file that is already on the document server. Each counter will be discussed case by case.
O:	Other applications (external network applications, for example)	Refers to network applications such as Web Image Monitor. Utilities developed with the SDK (Software Development Kit) will also be counted with this group in the future.

The Group 8 SP codes are limited to 17 characters, forced by the necessity of displaying them on the small LCDs of printers and faxes that also use these SPs. Read over the list of abbreviations below and refer to it again if you see the name of an SP that you do not understand.

#### Key for Abbreviations

Abbreviation	What it means
/	"By", e.g. "T:Jobs/Apl" = Total Jobs "by" Application
>	More (2> "2 or more", 4> "4 or more")
AddBook	Address Book
Apl	Application
B/W	Black & White
Bk	Black
C	Cyan
ColCr	Color Create
ColMode	Color Mode
Comb	Combine
Comp	Compression
Deliv	Delivery

Abbreviation	What it means
DesApl	Designated Application. The application (Copy, Fax, Scan, Print) used to store the job on the document server, for example.
Dev Counter	Development Count, no. of pages developed.
Dup, Duplex	Duplex, printing on both sides
Emul	Emulation
FC	Full Color
FIN	Post-print processing, i.e. finishing (punching, stapling, etc.)
Full Bleed	No Margins
GenCopy	Generation Copy Mode
GPC	Get Print Counter. For jobs 10 pages or less, this counter does not count up. For jobs larger than 10 pages, this counter counts up by the number that is in excess of 10 (e.g., for an 11-page job, the counter counts up $11-10=1$ )
IFax	Internet Fax
ImgEdt	Image Edit performed on the original with the copier GUI, e.g. border removal, adding stamps, page numbers, etc.
K	Black (YMCK)
LS	Local Storage. Refers to the document server.
LSize	Large (paper) Size
Mag	Magnification
MC	One color (monochrome)
NRS	New Remote Service, which allows a service center to monitor machines remotely. "NRS" is used overseas, "CSS" is used in Japan.
Org	Original for scanning
OrgJam	Original Jam

Abbreviation	What it means
Palm 2	Print Job Manager/Desk Top Editor: A pair of utilities that allows print jobs to be distributed evenly among the printers on the network, and allows files to moved around, combined, and converted to different formats.
PC	Personal Computer
PGS	Pages. A page is the total scanned surface of the original. Duplex pages count as two pages, and A3 simplex count as two pages if the A3/DLT counter SP is switched ON.
PJob	Print Jobs
Ppr	Paper
PrtJam	Printer (plotter) Jam
PrtPGS	Print Pages
R	Red (Toner Remaining). Applies to the wide format model A2 only. This machine is under development and currently not available.
Rez	Resolution
SC	Service Code (Error SC code displayed)
Scn	Scan
Sim, Simplex	Simplex, printing on 1 side.
S-to-Email	Scan-to-E-mail
SMC	SMC report printed with SP5990. All of the Group 8 counters are recorded in the SMC report.
Svr	Server
TonEnd	Toner End
TonSave	Toner Save
TXJob	Send, Transmission
YMC	Yellow, Magenta, Cyan
YMCK	Yellow, Magenta, Cyan, Black



 **Note**

- All of the Group 8 SPs are reset with SP5 801 1 Memory All Clear.

8 001	T:Total Jobs	* CTL	<p>These SPs count the number of times each application is used to do a job.</p> <p>[0 to 99999999 / 0 / 1]</p> <p><b>Note:</b> The L: counter is the total number of times the other applications are used to send a job to the document server, plus the number of times a file already on the document server is used.</p>
8 002	C:Total Jobs	* CTL	
8 003	F:Total Jobs	* CTL	
8 004	P:Total Jobs	* CTL	
8 005	S:Total Jobs	* CTL	
8 006	L:Total Jobs	* CTL	

- These SPs reveal the number of times an application is used, not the number of pages processed.
- When an application is opened for image input or output, this counts as one job.
- Interrupted jobs (paper jams, etc.) are counted, even though they do not finish.
- Only jobs executed by the customer are counted. Jobs executed by the customer engineer using the SP modes are not counted.
- When using secure printing (when a password is required to start the print job), the job is counted at the time when either "Delete Data" or "Specify Output" is specified.
- A job is counted as a fax job when the job is stored for sending.
- When a fax is received to fax memory, the F: counter increments but the L: counter does not (the document server is not used).
- A fax broadcast counts as one job for the F: counter (the fax destinations in the broadcast are not counted separately).
- A fax broadcast is counted only after all the faxes have been sent to their destinations. If one transmission generates an error, then the broadcast will not be counted until the transmission has been completed.
- A printed fax report counts as one job for the F: counter.
- The F: counter does not distinguish between fax sending or receiving.
- When a copy job on the document server is printed, SP8022 also increments, and when a print job stored on the document server is printed, SP8024 also increments.
- When an original is both copied and stored on the document server, the C: and L: counters both increment.
- When a print job is stored on the document server, only the L: counter increments.
- When the user presses the Document Server button to store the job on the document server, only the L: counter increments.

- When the user enters document server mode and prints data stored on the document server, only the L: counter increments.
- When an image received from Palm 2 is received and stored, the L: counter increments.
- When the customer prints a report (user code list, for example), the O: counter increments. However, for fax reports and reports executed from the fax application, the F: counter increments.

8 011	T:Jobs/LS	*CTL	These SPs count the number of jobs stored to the document server by each application, to reveal how local storage is being used for input. [0 to 9999999 / 0 / 1]  The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.
8 012	C:Jobs/LS	*CTL	
8 013	F:Jobs/LS	*CTL	
8 014	P:Jobs/LS	*CTL	
8 015	S:Jobs/LS	*CTL	
8 016	L:Jobs/LS	*CTL	
8 017	O:Jobs/LS	*CTL	

- When a scan job is sent to the document server, the S: counter increments. When you enter document server mode and then scan an original, the L: counter increments.
- When a print job is sent to the document server, the P: counter increments.
- When a network application sends data to the document server, the O: counter increments.
- When an image from Palm 2 is stored on the document server, the O: counter increments.
- When a fax is sent to the document server, the F: counter increments.

8 021	T:Pjob/LS	*CTL	These SPs reveal how files printed from the document server were stored on the document server originally. [0 to 9999999 / 0 / 1]  The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.
8 022	C:Pjob/LS	*CTL	
8 023	F:Pjob/LS	*CTL	
8 024	P:Pjob/LS	*CTL	
8 025	S:Pjob/LS	*CTL	
8 026	L:Pjob/LS	*CTL	
8 027	O:Pjob/LS	*CTL	

- When a copy job stored on the document server is printed with another application, the C: counter increments.

- When an application like DeskTopBinder merges a copy job that was stored on the document server with a print job that was stored on the document server, the C: and P: counters both increment.
- When a job already on the document server is printed with another application, the L: counter increments.
- When a scanner job stored on the document server is printed with another application, the S: counter increments. If the original was scanned from within document server mode, then the L: counter increments.
- When images stored on the document server by a network application (including Palm 2), are printed with another application, the O: counter increments.
- When a copy job stored on the document server is printed with a network application (Web Image Monitor, for example), the C: counter increments.
- When a fax on the document server is printed, the F: counter increments.

8 031	T:Pjob/DesApl	*CTL	<p>These SPs reveal what applications were used to output documents from the document server.</p> <p>[0 to 99999999 / 0 / 1]</p> <p>The L: counter counts the number of jobs printed from within the document server mode screen at the operation panel.</p>
8 032	C:Pjob/DesApl	*CTL	
8 033	F:Pjob/DesApl	*CTL	
8 034	P:Pjob/DesApl	*CTL	
8 035	S:Pjob/DesApl	*CTL	
8 036	L:Pjob/DesApl	*CTL	
8 037	O:Pjob/DesApl	*CTL	

- When documents already stored on the document server are printed, the count for the application that started the print job is incremented.
- When the print job is started from a network application (Desk Top Binder, Web Image Monitor, etc.) the L: counter increments.

8 041	T:TX Jobs/LS	*CTL	These SPs count the applications that stored files on the document server that were later accessed for transmission over the telephone line or over a network (attached to an e-mail, or as a fax image by I-Fax). [0 to 9999999 / 0 / 1] <b>Note:</b> Jobs merged for sending are counted separately. The L: counter counts the number of jobs scanned from within the document server mode screen at the operation panel.
8 042	C:TX Jobs/LS	*CTL	
8 043	F:TX Jobs/LS	*CTL	
8 044	P:TX Jobs/LS	*CTL	
8 045	S:TX Jobs/LS	*CTL	
8 046	L:TX Jobs/LS	*CTL	
8 047	O:TX Jobs/LS	*CTL	

- When a stored copy job is sent from the document server, the C: counter increments.
- When images stored on the document server by a network application or Palm2 are sent as an e-mail, the O: counter increments.

8 051	T:TX Jobs/DesApl	*CTL	These SPs count the applications used to send files from the document server over the telephone line or over a network (attached to an e-mail, or as a fax image by I-Fax). Jobs merged for sending are counted separately. [0 to 9999999 / 0 / 1] The L: counter counts the number of jobs sent from within the document server mode screen at the operation panel.
8 052	C:TX Jobs/DesApl	*CTL	
8 053	F:TX Jobs/DesApl	*CTL	
8 054	P:TX Jobs/DesApl	*CTL	
8 055	S:TX Jobs/DesApl	*CTL	
8 056	L:TX Jobs/DesApl	*CTL	
8 057	O:TX Jobs/DesApl	*CTL	

- If the send is started from Desk Top Binder or Web Image Monitor, for example, then the O: counter increments.

8 061	T:FIN Jobs	*CTL	[0 to 9999999 / 0 / 1]
	These SPs total the finishing methods. The finishing method is specified by the application.		
8 062	C:FIN Jobs	*CTL	[0 to 9999999 / 0 / 1]
	These SPs total finishing methods for copy jobs only. The finishing method is specified by the application.		

8 063	F:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for fax jobs only. The finishing method is specified by the application.</p> <p><b>Note:</b> Finishing features for fax jobs are not available at this time.</p>		
8 064	P:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for print jobs only. The finishing method is specified by the application.</p>		
8 065	S:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for scan jobs only. The finishing method is specified by the application.</p> <p><b>Note:</b> Finishing features for scan jobs are not available at this time.</p>		
8 066	L:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for jobs output from within the document server mode screen at the operation panel. The finishing method is specified from the print window within document server mode.</p>		
8 067	O:FIN Jobs	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs total finishing methods for jobs executed by an external application, over the network. The finishing method is specified by the application.</p>		
8 06x 1	Sort	Number of jobs started in Sort mode. When a stored copy job is set for Sort and then stored on the document server, the L: counter increments. (See SP8-066-1)	
8 06x 2	Stack	Number of jobs started out of Sort mode.	
8 06x 3	Staple	Number of jobs started in Staple mode.	
8 06x 4	Booklet	Number of jobs started in Booklet mode. If the machine is in staple mode, the Staple counter also increments.	
8 06x 5	Z-Fold	Number of jobs started In any mode other than the Booklet mode and set for folding (Z-fold).	
8 06x 6	Punch	Number of jobs started in Punch mode. When Punch is set for a print job, the P: counter increments. (See SP8-064-6.)	
8 06x 7	Other	Reserved. Not used.	

8 071	T:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of jobs broken down by the number of pages in the job, regardless of which application was used.		
8 072	C:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of copy jobs by size based on the number of pages in the job.		
8 073	F:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of fax jobs by size based on the number of pages in the job.		
8 074	P:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of print jobs by size based on the number of pages in the job.		
8 075	S:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of scan jobs by size based on the number of pages in the job.		
8 076	L:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of jobs printed from within the document server mode window at the operation panel, by the number of pages in the job.		
8 077	O:Jobs/PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count and calculate the number of "Other" application jobs (Web Image Monitor, Palm 2, etc.) by size based on the number of pages in the job.		
8 07x 1	1 Page	8 07x 8	21 to 50 Pages
8 07x 2	2 Pages	8 07x 9	51 to 100 Pages
8 07x 3	3 Pages	8 07x 10	101 to 300 Pages
8 07x 4	4 Pages	8 07x 11	301 to 500 Pages
8 07x 5	5 Pages	8 07x 12	501 to 700 Pages
8 07x 6	6 to 10 Pages	8 07x 13	701 to 1000 Pages
8 07x 7	11 to 20 Pages	8 07x 14	1001 to Pages

- For example: When a copy job stored on the document server is printed in document server mode, the appropriate L: counter (SP8076 0xx) increments.
- Printing a fax report counts as a job and increments the F: counter (SP 8073).
- Interrupted jobs (paper jam, etc.) are counted, even though they do not finish.
- If a job is paused and re-started, it counts as one job.
- If the finisher runs out of staples during a print and staple job, then the job is counted at the time the error occurs.
- For copy jobs (SP 8072) and scan jobs (SP 8075), the total is calculated by multiplying the number of sets of copies by the number of pages scanned. (One duplex page counts as 2.)
- The first test print and subsequent test prints to adjust settings are added to the number of pages of the copy job (SP 8072).
- When printing the first page of a job from within the document server screen, the page is counted.

8 111	T:FAX TX Jobs	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) sent by fax, either directly or using a file stored on the document server, on a telephone line. <b>Note:</b> Color fax sending is not available at this time.		
8 113	F: FAX TX Jobs	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) sent by fax directly on a telephone line. <b>Note:</b> Color fax sending is not available at this time.		
8 11x 1	B/W		
8 11x 2	Color		

- These counters count jobs, not pages.
- This SP counts fax jobs sent over a telephone line with a fax application, including documents stored on the document server.
- If the mode is changed during the job, the job will count with the mode set when the job started.
- If the same document is faxed to both a public fax line and an I-Fax at a destination where both are available, then this counter increments, and the I-Fax counter (8 12x) also increments.
- The fax job is counted when the job is scanned for sending, not when the job is sent.

8 121	T:IFAX TX Jobs	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) sent, either directly or using a file stored on the document server, as fax images using I-Fax. <b>Note:</b> Color fax sending is not available at this time.		
8 123	F: IFAX TX Jobs	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the number of jobs (color or black-and-white) sent (not stored on the document server), as fax images using I-Fax. <b>Note:</b> Color fax sending is not available at this time.		
8 12x 1	B/W		
8 12x 2	Color		

- These counters count jobs, not pages.
- The counters for color are provided for future use; the color fax feature is not available at this time.
- The fax job is counted when the job is scanned for sending, not when the job is sent.

8 131	T:S-to-Email Jobs	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) scanned and attached to an e-mail, regardless of whether the document server was used or not.		
8 135	S: S-to-Email Jobs	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count the number of jobs (color or black-and-white) scanned and attached to e-mail, without storing the original on the document server.		
8 13x 1	B/W		
8 13x 2	Color		
8 13x 3	ACS		

- These counters count jobs, not pages.
- If the job is stored on the document server, after the job is stored it is determined to be color or black-and-white then counted.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.



- If several jobs are combined for sending to the Scan Router, Scan-to-Email, or Scan-to-PC, or if one job is sent to more than one destination. each send is counted separately. For example, if the same document is sent by Scan-to-Email as well as Scan-to-PC, then it is counted twice (once for Scan-to-Email and once for Scan-to-PC).

8 141	T:Deliv Jobs/Svr	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) scanned and sent to a Scan Router server.		
8 145	S: Deliv Jobs/Svr	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of jobs (color or black-and-white) scanned in scanner mode and sent to a Scan Router server.		
8 14x 1	B/W		
8 14x 2	Color		
8 14x 3	ACS		

- These counters count jobs, not pages.
- The jobs are counted even though the arrival and reception of the jobs at the Scan Router server cannot be confirmed.
- If even one color image is mixed with black-and-white images, then the job is counted as a "Color" job.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be delivered, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

8 151	T:Deliv Jobs/PC	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) scanned and sent to a folder on a PC (Scan-to-PC).  <b>Note:</b> At the present time, 8 151 and 8 155 perform identical counts.		
8 155	S:Deliv Jobs/PC	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of jobs (color or black-and-white) scanned and sent with Scan-to-PC.		

8 15x 1	B/W
8 15x 2	Color
8 15x 3	ACS

- These counters count jobs, not pages.
- If the job is cancelled during scanning, it is not counted.
- If the job is cancelled while it is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

8 161	T:PCFAX TX Jobs	*CTL	These SPs count the number of PC Fax transmission jobs. A job is counted from when it is registered for sending, not when it is sent. [0 to 9999999 / 0 / 1] <b>Note:</b> At the present time, these counters perform identical counts.
8 163	F:PCFAX TX Jobs	*CTL	

- This counts fax jobs started from a PC using a PC fax application, and sending the data out to the destination from the PC through the copier.

8 171	T:Deliv Jobs/WSD	*CTL	These SPs count the pages scanned by WS. [0 to 9999999 / 0 / 1]
8 175	S:Deliv Jobs/WSD	*CTL	
-001	B/W		
-002	Color		
-003	ACS		

8 181	T:Scan to Media Jobs	*CTL	These SPs count the scanned pages in a media by the scanner application. [0 to 9999999 / 0 / 1]
8 185	S:Scan to Media Jobs	*CTL	
-001	B/W		
-002	Color		
-003	ACS		

8 191	T:Total Scan PGS	*CTL	These SPs count the pages scanned by each application that uses the scanner to scan images. [0 to 9999999/ 0 / 1]
8 192	C:Total Scan PGS	*CTL	
8 193	F:Total Scan PGS	*CTL	
8 195	S:Total Scan PGS	*CTL	
8 196	L:Total Scan PGS	*CTL	

- SP 8 191 to 8 196 count the number of scanned sides of pages, not the number of physical pages.
- These counters do not count reading user stamp data, or reading color charts to adjust color.
- Previews done with a scanner driver are not counted.
- A count is done only after all images of a job have been scanned.
- Scans made in SP mode are not counted.

### Examples

- If 3 B5 pages and 1 A3 page are scanned with the scanner application but not stored, the S: count is 4.
- If both sides of 3 A4 sheets are copied and stored to the document server using the Store File button in the Copy mode window, the C: count is 6 and the L: count is 6.
- If both sides of 3 A4 sheets are copied but not stored, the C: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

8 201	T:LSize Scan PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of large pages input with the scanner for scan and copy jobs. Large size paper (A3/DLT) scanned for fax transmission are not counted. <b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.		
8 203	F:LSize Scan PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of large pages input with the scanner for fax transmission. <b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.		
8 205	S:LSize Scan PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of large pages input with the scanner for scan jobs only. Large size paper (A3/DLT) scanned for fax transmission are not counted. <b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.		

8 211	T:Scan PGS/LS	*CTL	These SPs count the number of pages scanned into the document server . [0 to 99999999 / 0 / 1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen
8 212	C:Scan PGS/LS	*CTL	
8 213	F:Scan PGS/LS	*CTL	
8 215	S:Scan PGS/LS	*CTL	
8 216	L:Scan PGS/LS	*CTL	

3

- Reading user stamp data is not counted.
- If a job is cancelled, the pages output as far as the cancellation are counted.
- If the scanner application scans and stores 3 B5 sheets and 1 A4 sheet, the S: count is 4.
- If pages are copied but not stored on the document server, these counters do not change.
- If both sides of 3 A4 sheets are copied and stored to the document server, the C: count is 6 and the L: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

8 221	ADF Org Feeds	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the number of pages fed through the ADF for front and back side scanning.		
8 221 1	Front	Number of front sides fed for scanning: With an ADF that can scan both sides simultaneously, the Front side count is the same as the number of pages fed for either simplex or duplex scanning. With an ADF that cannot scan both sides simultaneously, the Front side count is the same as the number of pages fed for duplex front side scanning. (The front side is determined by which side the user loads face up.)	
8 221 2	Back	Number of rear sides fed for scanning: With an ADF that can scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex scanning. With an ADF that cannot scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex rear-side scanning.	

- When 1 sheet is fed for duplex scanning the Front count is 1 and the Back count is 1.
- If a jam occurs during the job, recovery processing is not counted to avoid double counting. Also, the pages are not counted if the jam occurs before the first sheet is output.

8 231	Scan PGS/Mode	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages scanned by each ADF mode to determine the work load on the ADF.		
8 231 1	Large Volume	Selectable. Large copy jobs that cannot be loaded in the ADF at one time.	
8 231 2	SADF	Selectable. Feeding pages one by one through the ADF.	
8 231 3	Mixed Size	Selectable. Select "Mixed Sizes" on the operation panel.	
8 231 4	Custom Size	Selectable. Originals of non-standard size.	
8 231 5	Platen	Book mode. Raising the ADF and placing the original directly on the platen.	
8 231 6	Mixed 1side/ 2side	Simplex and Duplex mode.	

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.
- The user cannot select mixed sizes or non-standard sizes with the fax application so if the original's page sizes are mixed or non-standard, these are not counted.
- If the user selects "Mixed Sizes" for copying in the platen mode, the Mixed Size count is enabled.
- In the SADF mode if the user copies 1 page in platen mode and then copies 2 pages with SADF, the Platen count is 1 and the SADF count is 3.

8 241	T:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of scanned pages by original type for all jobs, regardless of which application was used.		
8 242	C:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages scanned by original type for Copy jobs.		
8 243	F:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages scanned by original type for Fax jobs.		
8 245	S:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages scanned by original type for Scan jobs.		

8 246	L:Scan PGS/Org	*CTL	[0 to 9999999/ 0 / 1]		
	These SPs count the number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen				
	<b>8 241</b>	<b>8 242</b>	<b>8 243</b>	<b>8 245</b>	<b>8 246</b>
8 24x 1: Text	Yes	Yes	Yes	Yes	Yes
8 24x 2: Text/Photo	Yes	Yes	Yes	Yes	Yes
8 24x 3: Photo	Yes	Yes	Yes	Yes	Yes
8 24x 4: GenCopy, Pale	Yes	Yes	No	Yes	Yes
8 24x 5: Map	Yes	Yes	No	Yes	Yes
8 24x 6: Normal/Detail	Yes	No	Yes	No	No
8 24x 7: Fine/Super Fine	Yes	No	Yes	No	No
8 24x 8: Binary	Yes	No	No	Yes	No
8 24x 9: Grayscale	Yes	No	No	Yes	No
8 24x 10: Color	Yes	No	No	Yes	No
8 24x 11: Other	Yes	Yes	Yes	Yes	Yes

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.

8 251	T:Scan PGS/ImgEdt	*CTL	<p>These SPs show how many times Image Edit features have been selected at the operation panel for each application. Some examples of these editing features are:</p> <ul style="list-style-type: none"> <li>• Erase&gt; Border</li> <li>• Erase&gt; Center</li> <li>• Image Repeat</li> <li>• Centering</li> <li>• Positive/Negative</li> </ul> <p>[0 to 9999999/ 0 / 1]</p> <p>Note: The count totals the number of times the edit features have been used. A detailed breakdown of exactly which features have been used is not given.</p>
8 252	C:Scan PGS/ImgEdt	*CTL	
8 254	P:Scan PGS/ImgEdt	*CTL	
8 255	S : Scan PGS/ImgEdr	*CTL	
8 256	L:Scan PGS/ImgEdt	*CTL	
8 257	O:Scan PGS/ImgEdt	*CTL	

The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen.

8 261	T:Scan PGS/ColCr	*CTL	-
8 262	C:Scan PGS/ ColCr	*CTL	-
8 265	S:Scn PGS/Color	*CTL	-
8 266	L:Scn PGS/ColCr	*CTL	-
8 26x 1	Color Conversion	These SPs show how many times color creation features have been selected at the operation panel.	
8 26x 2	Color Erase		
8 26x 3	Background		
8 26x 4	Other		

8 281	T:Scan PGS/TWAIN	*CTL	<p>These SPs count the number of pages scanned using a TWAIN driver. These counters reveal how the TWAIN driver is used for delivery functions.</p> <p>[0 to 9999999/ 0 / 1]</p> <p><b>Note:</b> At the present time, these counters perform identical counts.</p>
8 285	S:Scan PGS/TWAIN	*CTL	

8 291	T:Scan PGS/Stamp	*CTL	These SPs count the number of pages stamped with the stamp in the ADF unit. [0 to 9999999/ 0 / 1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen
8 293	F:Scan PGS/Stamp	*CTL	
8 295	S:Scan PGS/Stamp	*CTL	

3

8 301	T:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned by all applications. Use these totals to compare original page size (scanning) and output (printing) page size [SP 8-441].		
8 302	C:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned by the Copy application. Use these totals to compare original page size (scanning) and output (printing) page size [SP 8-442].		
8 303	F:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned by the Fax application. Use these totals to compare original page size (scanning) and output page size [SP 8-443].		
8 305	S:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned by the Scan application. Use these totals to compare original page size (scanning) and output page size [SP 8-445].		
8 306	L:Scan PGS/Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by size the total number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen. Use these totals to compare original page size (scanning) and output page size [SP 8-446].		



8 30x 1	A3	
8 30x 2	A4	
8 30x 3	A5	
8 30x 4	B4	
8 30x 5	B5	
8 30x 6	DLT	
8 30x 7	LG	
8 30x 8	LT	
8 30x 9	HLT	
8 30x 10	Full Bleed	
8 30x 254	Other (Standard)	
8 30x 255	Other (Custom)	

8 311	T:Scan PGS/Rez	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings.		
8 315	S: Scan PGS/Rez	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings. <b>Note:</b> At the present time, SP8-311 and SP8-315 perform identical counts.		
8 31x 1	1200dpi <		
8 31x 2	600dpi to 1199dpi		
8 31x 3	400dpi to 599dpi		
8 31x 4	200dpi to 399dpi		
8 31x 5	< 199dpi		

- Copy resolution settings are fixed so they are not counted.
- The Fax application does not allow finely-adjusted resolution settings so no count is done for the Fax application.

8 381	T:Total PrtPGS	*CTL	These SPs count the number of pages printed by the customer. The counter for the application used for storing the pages increments. [0 to 9999999/ 0 / 1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter.
8 382	C:Total PrtPGS	*CTL	
8 383	F:Total PrtPGS	*CTL	
8 384	P:Total PrtPGS	*CTL	
8 385	S:Total PrtPGS	*CTL	
8 386	L:Total PrtPGS	*CTL	
8 387	O:Total PrtPGS	*CTL	

- When the A3/DLT double count function is switched on with SP5104, 1 A3/DLT page is counted as 2.
- When several documents are merged for a print job, the number of pages stored are counted for the application that stored them.
- These counters are used primarily to calculate charges on use of the machine, so the following pages are not counted as printed pages:
  - Blank pages in a duplex printing job.
  - Blank pages inserted as document covers, chapter title sheets, and slip sheets.
  - Reports printed to confirm counts.
  - All reports done in the service mode (service summaries, engine maintenance reports, etc.)
  - Test prints for machine image adjustment.
  - Error notification reports.
  - Partially printed pages as the result of a copier jam.

8 391	LSize PrtPGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count pages printed on paper sizes A3/DLT and larger. <b>Note:</b> In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.		

8 401	T:PrtPGS/LS	*CTL	<p>These SPs count the number of pages printed from the document server. The counter for the application used to print the pages is incremented.</p> <p>The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.</p> <p>[0 to 9999999/ 0 / 1]</p>
8 402	C:PrtPGS/LS	*CTL	
8 403	F:PrtPGS/LS	*CTL	
8 404	P:PrtPGS/LS	*CTL	
8 405	S:PrtPGS/LS	*CTL	
8 406	L:PrtPGS/LS	*CTL	

- Print jobs done with Web Image Monitor and Desk Top Binder are added to the L: count.
- Fax jobs done with Web Image Monitor and Desk Top Binder are added to the F: count.

8 411	Prints/Duplex	*CTL	<p>This SP counts the amount of paper (front/back counted as 1 page) used for duplex printing. Last pages printed only on one side are not counted.</p> <p>[0 to 9999999/ 0 / 1]</p>
-------	---------------	------	--

8 421	T:PrtPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing. This is the total for all applications.		
8 422	C:PrtPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the copier application.		
8 423	F:PrtPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the fax application.		
8 424	P:PrtPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the printer application.		
8 425	S:PrtPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the scanner application.		

8 426	L:PrfPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing from within the document server mode window at the operation panel.		
8 427	O:PrfPGS/Dup Comb	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by Other applications		
8 42x 1	Simplex> Duplex		
8 42x 2	Duplex> Duplex		
8 42x 3	Book> Duplex		
8 42x 4	Simplex Combine		
8 42x 5	Duplex Combine		
8 42x 6	2in 1		2 pages on 1 side (2-Up)
8 42x 7	4 in 1		4 pages on 1 side (4-Up)
8 42x 8	6 in 1		6 pages on 1 side (6-Up)
8 42x 9	8 in 1		8 pages on 1 side (8-Up)
8 42x 10	9 in 1		9 pages on 1 side (9-Up)
8 42x 11	16 in 1		16 pages on 1 side (16-Up)
8 42x 12	Booklet		
8 42x 13	Magazine		

- These counts (SP8 421 to SP8 427) are especially useful for customers who need to improve their compliance with ISO standards for the reduction of paper consumption.
- Pages that are only partially printed with the n-Up functions are counted as 1 page.
- Here is a summary of how the counters work for Booklet and Magazine modes:

Booklet			Magazine	
Original Pages	Count		Original Pages	Count
1	1		1	1

2	2		2	2
3	2		3	2
4	2		4	2
5	3		5	4
6	4		6	4
7	4		7	4
8	4		8	4

8 431	T:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output with the three features below, regardless of which application was used.		
8 432	C:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output with the three features below with the copy application.		
8 434	P:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output with the three features below with the print application.		
8 436	L:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output from within the document server mode window at the operation panel with the three features below.		
8 437	O:PrtPGS/ImgEdt	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total number of pages output with the three features below with Other applications.		
8 43x 1	Cover/Slip Sheet	Total number of covers or slip sheets inserted. The count for a cover printed on both sides counts 2.	
8 43x 2	Series/Book	The number of pages printed in series (one side) or printed as a book with booklet right/left pagination.	
8 43x 3	User Stamp	The number of pages printed where stamps were applied, including page numbering and date stamping.	

8 441	T:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by all applications.		
8 442	C:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by the copy application.		
8 443	F:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by the fax application.		
8 444	P:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by the printer application.		
8 445	S:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by the scanner application.		
8 446	L:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed from within the document server mode window at the operation panel.		
8 447	O:PrtPGS/Ppr Size	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by print paper size the number of pages printed by Other applications.		

8 44x 1	A3	
8 44x 2	A4	
8 44x 3	A5	
8 44x 4	B4	
8 44x 5	B5	
8 44x 6	DLT	
8 44x 7	LG	
8 44x 8	LT	
8 44x 9	HLT	
8 44x 10	Full Bleed	
8 44x 254	Other (Standard)	
8 44x 255	Other (Custom)	

- These counters do not distinguish between LEF and SEF.

8 451	PrtPGS/Ppr Tray	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the number of sheets fed from each paper feed station.		
8 451 1	Bypass Tray	Bypass Tray	
8 451 2	Tray 1	Copier	
8 451 3	Tray 2	Copier	
8 451 4	Tray 3	Paper Tray Unit (Option)	
8 451 5	Tray 4	Paper Tray Unit (Option)	
8 451 6	Tray 5	LCT (Option)	
8 451 7	Tray 6	Currently not used.	
8 451 8	Tray 7	Currently not used.	
8 451 9	Tray 8	Currently not used.	
8 451 10	Tray 9	Currently not used.	

8 461	T:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs count by paper type the number pages printed by all applications.</p> <ul style="list-style-type: none"> <li>• These counters are not the same as the PM counter. The PM counter is based on feed timing to accurately measure the service life of the feed rollers. However, these counts are based on output timing.</li> <li>• Blank sheets (covers, chapter covers, slip sheets) are also counted.</li> <li>• During duplex printing, pages printed on both sides count as 1, and a page printed on one side counts as 1.</li> </ul>		
8 462	C:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs count by paper type the number pages printed by the copy application.</p>		
8 463	F:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs count by paper type the number pages printed by the fax application.</p>		
8 464	P:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs count by paper type the number pages printed by the printer application.</p>		
8 466	L:PrtPGS/Ppr Type	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs count by paper type the number pages printed from within the document server mode window at the operation panel.</p>		
8 46x 1	Normal		
8 46x 2	Recycled		
8 46x 3	Special		
8 46x 4	Thick		
8 46x 5	Normal (Back)		
8 46x 6	Thick (Back)		
8 46x 7	OHP		
8 46x 8	Other		
8 471	PrtPGS/Mag	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs count by magnification rate the number of pages printed.</p>		



8 471 1	< 49%
8 471 2	50% to 99%
8 471 3	100%
8 471 4	101% to 200%
8 471 5	201% <

- Counts are done for magnification adjusted for pages, not only on the operation panel but performed remotely with an external network application capable of performing magnification adjustment as well.
- Magnification adjustments done with printer drivers with PC applications such as Excel are also counted.
- Magnification adjustments done for adjustments after they have been stored on the document server are not counted.
- Magnification adjustments performed automatically during Auto Reduce/Enlarge copying are counted.
- The magnification rates of blank cover sheets, slip sheets, etc. are automatically assigned a rate of 100%.

8 481	T:PrtPGS/TonSave	*CTL	
8 484	P:PrtPGS/TonSave	*CTL	
	<p>These SPs count the number of pages printed with the Toner Save feature switched on.</p> <p><b>Note:</b> These SPs return the same results as this SP is limited to the Print application. [0 to 99999999 / 0 / 1]</p>		

8 491	T:PrtPGS/Col Mode	*CTL	These SPs count the number of pages printed in the Color Mode by each application.
8 492	C:PrtPGS/Col Mode	*CTL	
8 493	F:PrtPGS/Col Mode	*CTL	
8 496	L:PrtPGS/Col Mode	*CTL	
8 497	O:PrtPGS/Col Mode	*CTL	
8 49x 1	B/W		
8 49x 2	Single Color		

8 49x 3	Two Color
8 49x 4	Full Color

8 501	T:PrtPGS/Col Mode	*CTL	These SPs count the number of pages printed in the Color Mode by the print application.
8 504	P:PrtPGS/Col Mode	*CTL	
8 507	O:PrtPGS/Col Mode	*CTL	
8 50x 1	B/W		
8 50x 2	Mono Color		
8 50x 3	Full Color		
8 50x 4	Single Color		
8 50x 5	Two Color		

8 511	T:PrtPGS/Emul	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by printer emulation mode the total number of pages printed.		
8 514	P:PrtPGS/Emul	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by printer emulation mode the total number of pages printed.		

8 514 1	RPCS	
8 514 2	RPDL	
8 514 3	PS3	
8 514 4	R98	
8 514 5	R16	
8 514 6	GL/GL2	
8 514 7	R55	
8 514 8	RTIFF	
8 514 9	PDF	
8 514 10	PCL5e/5c	
8 514 11	PCL XL	
8 514 12	IPDL-C	
8 514 13	BM-Links	
8 514 14	Other	

- SP8 511 and SP8 514 return the same results as they are both limited to the Print application.
- Print jobs output to the document server are not counted.

8 521	T:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by all applications.		
8 522	C:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Copy application.		
8 523	F:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Fax application. <b>NOTE:</b> Print finishing options for received faxes are currently not available.		

8 524	P:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Print application.		
8 525	S:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Scanner application.		
8 526	L:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed from within the document server mode window at the operation panel.		
8 52x 1	Sort		
8 52x 2	Stack		
8 52x 3	Staple		
8 52x 4	Booklet		
8 52x 5	Z-Fold		
8 52x 6	Punch		
8 52x 7	Other		

**Note**

- If stapling is selected for finishing and the stack is too large for stapling, the unstapled pages are still counted.
- The counts for staple finishing are based on output to the staple tray, so jam recoveries are counted.

8 531	Staples	*CTL	This SP counts the amount of staples used by the machine. [0 to 9999999 / 0 / 1]
-------	---------	------	---

8 581	T:Counter	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count the total output broken down by color output, regardless of the application used. In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.		

8 581 1	Total
8 581 2	Total: Full Color
8 581 3	B&W/Single Color
8 581 4	Development: CMY
8 581 5	Development: K
8 581 6	Copy: Color
8 581 7	Copy: B/W
8 581 8	Print: Color
8 581 9	Print: B/W
8 581 10	Total: Color
8 581 11	Total: B/W
8 581 12	Full Color: A3
8 581 13	Full Color: B4 JIS or Smaller
8 581 14	Full Color Print
8 581 15	Mono Color Print
8 581 16	Full Color GPC
8 581 17	Twin Color Mode Print
8 581 18	Full Color Print (Twin)
8 581 19	Mono Color Print (Twin)
8 581 20	Full Color Total (CV)
8 581 21	Mono Color Total (CV)
8 581 22	Full Color Print (CV)

8 582	C:Counter	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total output of the copy application broken down by color output.		

8 582 1	B/W
8 582 2	Single Color
8 582 3	Two Color
8 582 4	Full Color

8 583	F:Counter	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total output of the fax application broken down by color output.		
8 583 1	B/W		
8 583 2	Single Color		

8 584	P:Counter	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total output of the print application broken down by color output.		
8 584 1	B/W		
8 584 2	Mono Color		
8 584 3	Full Color		
8 584 4	Single Color		
8 584 5	Two Color		

8 586	L:Counter	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the total output of the local storage broken down by color output.		
8 582 1	B/W		
8 582 2	Single Color		
8 582 3	Two Color		
8 582 4	Full Color		

8 591	O:Counter	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the totals for A3/DLT paper use, number of duplex pages printed, and the number of staples used. These totals are for Other (O:) applications only.		

8 591 1	A3/DLT	-
8 591 2	Duplex	

8 601	T: Coverage Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total coverage for each color and the total printout pages for each printing mode.		
8 601 1	B/W	-	
8 601 2	Color		
8 601 11	B/W Printing Pages		
8 601 12	Color Printing Pages		
8 601 21	Coverage Counter 1		
8 601 22	Coverage Counter 2		
8 601 23	Coverage Counter 3		

8 617	SDK Apli Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the total printout pages for each SDK applicaion.		
8 617 1	SDK-1	-	
8 617 2	SDK-2		
8 617 3	SDK-3		
8 617 4	SDK-4		
8 617 5	SDK-5		
8 617 6	SDK-6		

8 631	T:FAX TX PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the number of pages sent by fax to a telephone number.		

8 633	F:FAX TX PGS	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count by color mode the number of pages sent by fax to a telephone number.		
8 63x 1	B/W		
8 63x 2	Color		

3

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W or Color.
- At the present time, this feature is provided for the Fax application only so SP8631 and SP8633 are the same.
- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.

8 641	T:IFAX TX PGS	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count by color mode the number of pages sent by fax to as fax images using I-Fax.		
8 643	F:IFAX TX PGS	*CTL	[0 to 99999999/ 0 / 1]
	These SPs count by color mode the number of pages sent by Fax as fax images using I-Fax.		
8 64x 1	B/W		
8 64x 2	Color		

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W or Color.
- At the present time, this feature is provided for the Fax application only so SP8641 and SP8643 are the same.
- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.



8 651	T:S-to-Email PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the total number of pages attached to an e-mail for both the Scan and document server applications.		
8 655	S:S-to-Email PGS	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the total number of pages attached to an e-mail for the Scan application only.		
8 65x 1	B/W		
8 65x 2	Color		

**Note**

- The count for B/W and Color pages is done after the document is stored on the HDD. If the job is cancelled before it is stored, the pages are not counted.
- If Scan-to-Email is used to send a 10-page document to 5 addresses, the count is 10 (the pages are sent to the same SMTP server together).
- If Scan-to-PC is used to send a 10-page document to 5 folders, the count is 50 (the document is sent to each destination of the SMB/FTP server).
- Due to restrictions on some devices, if Scan-to-Email is used to send a 10-page document to a large number of destinations, the count may be divided and counted separately. For example, if a 10-page document is sent to 200 addresses, the count is 10 for the first 100 destinations and the count is also 10 for the second 100 destinations, for a total of 20.

8 661	T:Deliv PGS/Svr	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the total number of pages sent to a Scan Router server by both Scan and LS applications.		
8 665	S:Deliv PGS/Svr	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count by color mode the total number of pages sent to a Scan Router server by the Scan application.		
8 66x 1	B/W		
8 66x 2	Color		

**Note**

- The B/W and Color counts are done after the document is stored on the HDD of the Scan Router server.

- If the job is canceled before storage on the Scan Router server finishes, the counts are not done.
- The count is executed even if regardless of confirmation of the arrival at the Scan Router server.

8 671	T:Deliv PGS/PC	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count by color mode the total number of pages sent to a folder on a PC (Scan-to-PC) with the Scan and LS applications.		
8 675	S: Deliv PGS/PC	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count by color mode the total number of pages sent with Scan-to-PC with the Scan application.		
8 67x 1	B/W		
8 67x 2	Color		

8 681	T:PCFAX TXPGS	*CTL	These SPs count the number of pages sent by PC Fax. These SPs are provided for the Fax application only, so the counts for SP8 681 and SP8 683 are the same. [0 to 99999999 / 0 / 1]
8 683	F:PCFAX TXPGS	*CTL	

- This counts pages sent from a PC using a PC fax application, from the PC through the copier to the destination.
- When sending the same message to more than one place using broadcasting, the pages are only counted once. (For example, a 10-page fax is sent to location A and location B. The counter goes up by 10, not 20.)

8 691	T:TX PGS/LS	*CTL	These SPs count the number of pages sent from the document server. The counter for the application that was used to store the pages is incremented.
8 692	C:TX PGS/LS	*CTL	
8 693	F:TX PGS/LS	*CTL	[0 to 99999999 / 0 / 1]
8 694	P:TX PGS/LS	*CTL	The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter.
8 695	S:TX PGS/LS	*CTL	
8 696	L:TX PGS/LS	*CTL	

**Note**

- Print jobs done with Web Image Monitor and Desk Top Binder are added to the count.
- If several documents are merged for sending, the number of pages stored are counted for the application that stored them.

- When several documents are sent by a Fax broadcast, the F: count is done for the number of pages sent to each destination.

8 701	TX PGS/Port	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages sent by the physical port used to send them. For example, if a 3-page original is sent to 4 destinations via ISDN G4, the count for ISDN (G3, G4) is 12.		
8 701 1	PSTN-1		
8 701 2	PSTN-2		
8 701 3	PSTN-3		
8 701 4	ISDN (G3,G4)		
8 701 5	Network		

8 711	T:Scan PGS/Comp	*CTL	[0 to 9999999/ 0 / 1]
8 715	S:Scan PGS/Comp	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages sent by each compression mode.		
8 715 1	JPEG/JPEG2000		
8 715 2	TIFF(Multi/Single)		
8 715 3	PDF		
8 715 4	Other		
8 715 5	PDF/Comp		

8 721	T:Deliv PGS/WSD	*CTL	[0 to 9999999/ 0 / 1]
8 725	S: Dvliv PGS/WSD	*CTL	
	These SPs count the number of pages scanned by each scanner mode.		
	x 1	B/W	-
x 2	Color	-	

8 731	T:Scan PGS/Media	*CTL	[0 to 9999999/ 0 / 1]
8 735	S:Scan PGS/Media	*CTL	
	These SPs count the number of pages scanned and saved in a media by each scanner mode.		
	x 1	B/W	-
x 2	Color	-	

8 741	RX PGS/Port	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the number of pages received by the physical port used to receive them.		
8 741 1	PSTN-1	-	
8 741 2	PSTN-2	-	
8 741 3	PSTN-3	-	
8 741 4	ISDN (G3,G4)	-	
8 741 5	Network	-	

8 771	Dev Counter	*CTL	[0 to 9999999/ 0 / 1]
	These SPs count the frequency of use (number of rotations of the development rollers) for black and other color toners.		
8 771 1	Total		
8 771 2	K		
8 771 3	Y		
8 771 4	M		
8 771 5	C		

8 781	Toner_Bottle_Info.	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of already replaced toner bottles. <b>NOTE:</b> Currently, the data in SP7-833-011 through 014 and the data in SP8-781-001 through 004 are the same.		

8 781 1	Toner: BK	The number of black-toner bottles
8 781 2	Toner: Y	The number of yellow-toner bottles
8 781 3	Toner: M	The number of magenta-toner bottles
8 781 4	Toner: C	The number of cyan-toner bottles

8 791	LS Memory Remain	*CTL	This SP displays the percent of space available on the document server for storing documents. [0 to 100 / 0 / 1]
-------	------------------	------	---

8 801	Toner Remain	*CTL	[0 to 100/ 0 / 1]
	<p>These SPs display the percent of toner remaining for each color. This SP allows the user to check the toner supply at any time.</p> <p><b>Note:</b> This precise method of measuring remaining toner supply (1% steps) is better than other machines in the market that can only measure in increments of 10 (10% steps).</p>		
8 801 1	K		
8 801 2	Y		
8 801 3	M		
8 801 4	C		

8 851	CVr Cnt: 0-10%	*ENG	[0 to 9999999/ 0 / 1]
	<p>These SPs display the number of scanned sheets on which the coverage of each color is from 0% to 10%.</p>		
8 851 11	0 to 2%: BK	8 851 31	5 to 7%: BK
8 851 12	0 to 2%: Y	8 851 32	5 to 7%: Y
8 851 13	0 to 2%: M	8 851 33	5 to 7%: M
8 851 14	0 to 2%: C	8 851 34	5 to 7%: C
8 851 21	3 to 4%: BK	8 851 41	8 to 10%: BK
8 851 22	3 to 4%: Y	8 851 42	8 to 10%: Y

8 851 23	3 to 4%: M	8 851 43	8 to 10%: M
8 851 24	3 to 4%: C	8 851 44	8 to 10%: C

8 861	CVr Cnt: 11-20%	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of scanned sheets on which the coverage of each color is from 11% to 20%.		
8 861 1	BK		
8 861 2	Y		
8 861 3	M		
8 861 4	C		

8 871	CVr Cnt: 21-30%	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of scanned sheets on which the coverage of each color is from 21% to 30%.		
8 871 1	BK		
8 871 2	Y		
8 871 3	M		
8 871 4	C		

8 881	CVr Cnt: 31%-	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the number of scanned sheets on which the coverage of each color is 31% or higher.		
8 881 1	BK		
8 881 2	Y		
8 881 3	M		
8 881 4	C		

8 891	Page/Toner Bottle	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the amount of the remaining current toner for each color.		

8 891 1	BK
8 891 2	Y
8 891 3	M
8 891 4	C

8 901	Page/Toner_prev1	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the amount of the remaining previous toner for each color.		
8 901 1	BK		
8 901 2	Y		
8 901 3	M		
8 901 4	C		

8 911	Page/Toner_prev2	*ENG	[0 to 9999999/ 0 / 1]
	These SPs display the amount of the remaining 2nd previous toner for each color.		
8 911 1	BK		
8 911 2	Y		
8 911 3	M		
8 911 4	C		

8 921	Cvr Cnt/Total	*CTL	[0 to 9999999/ 0 / 1]
	Displays the total coverage and total printout number for each color.		

8 921 1	Coverage (%) Bk	
8 921 2	Coverage (%) Y	
8 921 3	Coverage (%) M	
8 921 4	Coverage (%) C	
8 921 11	Coverage /P: Bk	
8 921 12	Coverage /P: Y	
8 921 13	Coverage /P: M	
8 921 14	Coverage /P: C	

8 941	Machine Status	*CTL	[0 to 9999999/ 0 / 1]
	<p>These SPs count the amount of time the machine spends in each operation mode. These SPs are useful for customers who need to investigate machine operation for improvement in their compliance with ISO Standards.</p>		
8 941 1	Operation Time	Engine operation time. Does not include time while controller is saving data to HDD (while engine is not operating).	
8 941 2	Standby Time	Engine not operating. Includes time while controller saves data to HDD. Does not include time spent in Energy Save, Low Power, or Off modes.	
8 941 3	Energy Save Time	Includes time while the machine is performing background printing.	
8 941 4	Low Power Time	Includes time in Energy Save mode with Engine on. Includes time while machine is performing background printing.	
8 941 5	Off Mode Time	Includes time while machine is performing background printing. Does not include time machine remains powered off with the power switches.	
8 941 6	SC	Total time when SC errors have been staying.	
8 941 7	PrtJam	Total time when paper jams have been staying during printing.	
8 941 8	OrgJam	Total time when original jams have been staying during scanning.	



8 941 9	Supply PM Unit End	Total time when toner end has been staying
---------	--------------------	--

8 951	AddBook Register	*CTL	
	These SPs count the number of events when the machine manages data registration.		
8 951 1	User Code/User ID	User code registrations.	[0 to 99999999 / 0 / 1]
8 951 2	Mail Address	Mail address registrations.	
8 951 3	Fax Destination	Fax destination registrations.	
8 951 4	Group	Group destination registrations.	
8 951 5	Transfer Request	Fax relay destination registrations for relay TX.	
8 951 6	F-Code	F-Code box registrations.	
8 951 7	Copy Program	Copy application registrations with the Program (job settings) feature.	[0 to 255 / 0 / 255]
8 951 8	Fax Program	Fax application registrations with the Program (job settings) feature.	
8 951 9	Printer Program	Printer application registrations with the Program (job settings) feature.	
8 951 10	Scanner Program	Scanner application registrations with the Program (job settings) feature.	

8 999	Admin. Counter List	*CTL	[0 to 99999999 / 0 / 1]
	Displays the total coverage and total printout number for each color.		

8 999 1	Total	
8 999 2	Copy: Full Color	
8 999 3	Copy: BW	
8 999 4	Copy: Single Color	
8 999 5	Copy: Two Color	
8 999 6	Printer Full Color	
8 999 7	Printer BW	
8 999 8	Printer Single Color	
8 999 9	Printer Two Color	
8 999 10	Fax Print: BW	
8 999 12	A3/DLT	
8 999 13	Duplex	
8 999 14	Coverage: Color (%)	
8 999 15	Coverage: BW (%)	
8 999 16	Coverage: Color Print Page (%)	
8 999 17	Coverage: BW Print Page (%)	
8 999 101	Transmission Total: Color	
8 999 102	Transmission Total: BW	
8 999 103	FAX Transmission	
8 999 104	Scanner Transmission: Color	
8 999 105	Scanner Transmission: BW	

# Input and Output Check

## Input Check Table

When entering the Input Check mode, 8 digits display the result for a section. Each digit corresponds to a different device as shown in the table.

Bit No.	7	6	5	4	3	2	1	0
Result	0 or 1	0 or 1	0 or 1	0 or 1	0 or 1	0 or 1	0 or 1	0 or 1

3

## Copier

5803	Description	Reading	
		0	1
5803 1	2nd Tray Size Detection	See table 2 following this table.	
5803 2	1st Tray Set Detection	Set	Not set
5803 3	1st Tray Paper Height Sensor 1	See table 1 following this table.	
5803 4	1st Tray Paper Height Sensor 2	See table 1 following this table.	
5803 5	2nd Tray Paper Height Sensor 1	See table 1 following this table.	
5803 6	2nd Tray Paper Height Sensor 2	See table 1 following this table.	
5803 7	1st Tray Paper End Detection	No paper	Paper remaining
5803 8	2nd Tray Paper End Detection	No paper	Paper remaining
5803 9	1st Tray Upper Limit Sensor	Not upper limit	Upper limit
5803 10	2nd Tray Upper Limit Sensor	Not upper limit	Upper limit
5803 11	Bypass Paper Width Detection	See table 3 following this table.	
5803 12	Bypass Paper End Detection	No paper	Paper remaining
5803 13	Bypass Paper Length Detection	See table 3 following this table.	
5803 14	1st Paper Feed Sensor	Paper detected	Paper not detected
5803 15	2nd Paper Feed Sensor	Paper detected	Paper not detected

5803 16	Exit Sensor	Paper detected	Paper not detected
5803 17	Tray Full Exit Sensor	Paper not full	Paper full
5803 18	Fusing Exit Sensor	Paper not detected	Paper detected
5803 19	Fusing Entrance Sensor	Paper detected	Paper not detected
5803 20	1st Feed Sensor	Paper detected	Paper not detected
5803 21	2nd Feed Sensor	Paper detected	Paper not detected
5803 22	Duplex Exit Sensor	Paper detected	Paper not detected
5803 23	Registration Sensor	Paper detected	Paper not detected
5803 24	Duplex Entrance Sensor	Paper detected	Paper not detected
5803 25	Junction Sensor	Paper detected	Paper not detected
5803 26	2nd Tray Set Detection	Set	Not set
5803 30	Toner End Sensor: Bk	Toner end	Toner remaining
5803 31	Toner End Sensor: M	Toner end	Toner remaining
5803 32	Toner End Sensor: C	Toner end	Toner remaining
5803 33	Toner End Sensor: Y	Toner end	Toner remaining
5803 34	Drum Phase Sensor: Bk	Actuator not detected	Actuator detected
5803 35	Drum Phase Sensor: M	Actuator not detected	Actuator detected
5803 36	Drum Phase Sensor: C	Actuator not detected	Actuator detected
5803 37	Drum Phase Sensor: Y	Actuator not detected	Actuator detected
5803 38	Interlock Release Detection 1	Front door open	Front door closed
5803 39	Interlock Release Detection 2	Front door open	Front door closed
5803 40	Right Door	Closed	Open
5803 41	Duplex Cover	Closed	Open

5803 42	Toner Collection Bottle Set	Set	Not set
5803 43	Toner Collection Full Sensor	Not full	Full
5803 46	ITB New Unit Detection	Not new	New
5803 50	Airflow Fan: Front: Lock	Normal	Lock
5803 51	Airflow Fan: Rear: Lock	Normal	Lock
5803 52	Fusing Exit Fan: Lock	Normal	Lock
5803 53	2nd Duct Fan: Lock	Normal	Lock
5803 54	3rd Duct Fan: Lock	Normal	Lock
5803 55	Paper Exit Fan:Lock	Normal	Lock
5803 56	Fusing Coil Fan: Lock	Normal	Lock
5803 57	IH Power Supply Cooling Fan: Lock	Normal	Lock
5803 60	ITB Contact Motor Position	Not contact	Contact
5803 61	Paper Transfer Contact Motor Position	Not contact	Contact
5803 62	Toner Relay Motor: Lock	Normal	Lock
5803 63	ITB Drive Motor: Lock	Normal	Lock
5803 64	K Drum/Development Drive Motor: Lock	Normal	Lock
5803 65	M Drum/Development Drive Motor: Lock	Normal	Lock
5803 66	C Drum/Development Drive Motor: Lock	Normal	Lock
5803 67	Y Drum/Development Drive Motor: Lock	Normal	Lock
5803 68	Fusing Exit Motor:Lock	Normal	Lock
5803 80	HVPS:TTS:SC Detection	SC detected	No SC
5803 81	HVPS:CB:SC Detection	SC detected	No SC
5803 82	HVPS:D:SC Detection	SC detected	No SC
5803 83	Fusing Destination Detection: DOM (Dom)	Set	Not set
5803 84	Fusing Destination Detection: NA	Set	Not set
5803 87	Fusing New Unit Detection	New	Not new

5803 90	Zero-cross Signal	-	-
5803 91	Fusing Rotation Sensor	Actuator not detected	Actuator detected
5803 92	Fusing Pressue Release Sensor	Not contact	Contact
5803 94	GAVD Open/Close Detection	Closed (LD5V ON)	Open (LD5V OFF)
5803 100	Keycard: Set	Set	Not set
5803 101	Mechanical Counter Bk: Set	Set	Not set
5803 102	Mechanical Counter FC: Set	Set	Not set
5803 103	Key Counter: Set	Set	Not set
5803 110	IOB Version	-	-
5803 200	Scanner HP Sensor	Not HP	HP
5803 201	Platen Cover Sensor	Open	Closed

**Table 1: Paper Height Sensor**

0: Deactivated, 1: Activated (actuator inside sensor)

Remaining paper	Paper height sensor 1	Paper height sensor 2
Full	0	0
Nearly full	1	0
Near end	1	1
Almost empty	0	1

**Table 2: Paper Size Switch (Tray 2)**

Switch 1 is used for tray set detection.

0: Pushed, 1: Not pushed

Models		Switch Location		
North America	Europe/Asia	4 (bit0)	3 (bit1)	2 (bit2)

11" x 17" SEF <sup>*1</sup> (A3 SEF)	A3 SEF <sup>*1</sup> (11" x 17" SEF)	0	0	1
8.5" x 14" SEF <sup>*2</sup> (B4 SEF)	B4 SEF <sup>*2</sup> (8.5" x 14" SEF)	0	0	0
A4 SEF	A4 SEF	1	1	0
8.5" x 11" SEF	8.5" x 11" SEF	1	1	1
B5 SEF	B5 SEF	0	1	1
11" x 8 1/2" LEF <sup>*3</sup> (A4 LEF)	A4 LEF <sup>*3</sup> (11" x 8 1/2" LEF)	1	0	0
10.5" x 7.25" LEF <sup>*4</sup> (B5 LEF)	B5 LEF <sup>*4</sup> (10.5" x 7.25" LEF)	0	1	0
A5 LEF	A5 LEF	1	0	1

\* 1: The machine detects either 11" x 17" SEF or A3 SEF, depending on the setting of SP 5-181-003.  
\* 2: The machine detects either 8.5" x 14" SEF or B4 SEF, depending on the setting of SP 5-181-004.  
\* 3: The machine detects either 11" x 8 1/2" LEF or A4 LEF, depending on the setting of SP 5-181-002.  
\* 4: The machine detects either B5 LEF or 10.5" x 7.25" LEF, depending on the setting of SP 5-181-005.

**Table 3: Paper Size (By-pass Table)**

0: ON, 1: OFF

By-pass Paper Size Sensor				Length Sensor	NA	EU/ASIA
bit3	Bit2	Bit1	Bit0			
1	1	1	1	1	HLT SEF	A6 SEF
0	1	1	1	1	HLT SEF	A6 SEF
0	0	1	1	1	HLT SEF	A5 SEF
1	0	1	1	1	HLT SEF	A5 SEF
1	0	0	1	0	LT/LG SEF <sup>*1</sup>	A4 SEF

By-pass Paper Size Sensor				Length Sensor	NA	EU/ASIA
bit3	Bit2	Bit1	Bit0			
1	0	0	1	1	LT/LG SEF* <sup>1</sup>	A5 LEF
1	1	0	1	0	LT/LG SEF* <sup>1</sup>	A4 SEF
1	1	0	1	1	LT/LG SEF* <sup>1</sup>	A5 LEF
1	1	0	0	0	DLT SEF	A3 SEF
1	1	0	0	1	LT LEF	A4 LEF
1	1	1	0	0	DLT SEF	A3 SEF
1	1	1	0	1	LT LEF	A4 LEF

\* 1: The paper size (LT or LG) can be selected with SP1-007-001.

### ARDF (D630)

6007	Description	Reading	
		0	1
6007 1	Original Length 1 (B5 Detection Sensor)	Paper not detected	Paper detected
6007 2	Original Length 2 (A4 Detection Sensor)	Paper not detected	Paper detected
6007 3	Original Length 3 (LG Detection Sensor)	Paper not detected	Paper detected
6007 4	Original Width 1	Paper not detected	Paper detected
6007 5	Original Width 2	Paper not detected	Paper detected
6007 6	Original Width 3	Paper not detected	Paper detected
6007 7	Original Width 4	Paper not detected	Paper detected
6007 8	Original Width 5	Paper not detected	Paper detected
6007 9	Original Detection	Paper not detected	Paper detected
6007 10	Separation Sensor	Paper not detected	Paper detected
6007 11	Skew Correction	Paper not detected	Paper detected



6007 12	Scan Entrance Sensor	Paper not detected	Paper detected
6007 13	Registration Sensor	Paper not detected	Paper detected
6007 14	Exit Sensor	Paper not detected	Paper detected
6007 15	Feed Cover Sensor	ADF cover close	ADF cover open
6007 16	Lift Up Sensor	ADF cover close	ADF cover open
6007 17	Inverter Sensor	Paper not detected	Paper detected
6007 18	Pick-Up Roller HP Sensor	Not HP	HP
6007 19	Original Set HP Sensor	Original not detected	Original detected
6007 23	Rear Edge Detection (Not used)	-	-

### 2000/3000-Sheet (Booklet) Finisher (D637, D636)

6140	Bit	Description	Reading	
			0	1
6140 1		Entrance Sensor	Paper not detected	Paper detected
6140 2		Proof Exit Sensor	Paper not detected	Paper detected
6140 3		Proof Full Detection Sensor	Not Full	Full
6140 4		Trailing Edge Detection: Shift	Paper not detected* 1	Paper detected* 1
6140 5		Staple Exit Sensor	Paper not detected	Paper detected
6140 6		Shift HP Sensor	Not HP	HP
6140 7		Shift Exit Sensor	Paper not detected	Paper detected
6140 8		Exit Guide Plate HP Sensor	Not HP	HP
6140 9		Paper Detection Sensor: Staple	Paper not detected	Paper detected
6140 10		Paper Detection Sensor: Shift	Paper not detected	Paper detected
6140 11		Paper Full Sensor: 2000-Sheet	Not Full	Full
6140 12		Oscillating Back Roller HP Sensor	Not HP	HP

6140 13	Jogger HP Sensor	Not HP	HP
6140 14	Exit Junction Gate HP Sensor	HP	Not HP
6140 15	Staple Tray Paper Sensor	Paper not detected	Paper detected
6140 16	Staple Moving HP Sensor	Not HP	HP
6140 17	Skew HP Sensor	Not HP	HP
6140 18	Limit SW	Not Limit	Limit
6140 19	DOOR SW	Closed	Open
6140 20	Stapler 1 Rotation	Not HP	HP
6140 21	Staple Detection	Staple not detected	Staple detected
6140 22	Staple Leading Edge Detection	Staple not detected	Staple detected
6140 23	Punch Moving HP Sensor	Not HP	HP
6140 24	Punch Registration HP Sensor	Not HP	HP
6140 25	Punch Registratioin Detection Sensor	Paper not detected	Paper detected
6140 26	Punch Chad Full Sensor	Not Full	Full
6140 27	Punch HP	Not HP	HP
6140 28	Punch Selection DIPSW 1	See *1	
6140 29	Punch Selection DIPSW 2	See *1	
6140 30	Stack Junction Gate Open/Closed HP Sensor	Not HP	HP
6140 31	Leading Edge Detection Sensor	Paper not detected	Paper detected
6140 32	Drive Roller HP Sensor	Not HP	HP
6140 33	Arrival Sensor	Paper not detected	Paper detected
6140 34	Rear Edge Fence HP Sensor	Not HP	HP
6140 35	Folder Cam HP Sensor	Not HP	HP
6140 36	Folder Plate HP Sensor	Not HP	HP
6140 37	Folder Pass Sensor	Paper not detected	Paper detected

6140 38	Saddle Full Sensor: Front	Paper not detected*2	Paper detected*2
6140 39	Saddle Full Sensor: Rear	Paper not detected*2	Paper detected*2
6140 40	Saddle Stitch Stapler 1 Rotation: Front	Not HP	HP
6140 41	Saddle Stitch Detection: Front	Staple not detected	Staple detected
6140 42	Saddle Stitch Leading Edge Detection: Front	Staple not detected	Staple detected
6140 43	Saddle Stitch Stapler 1 Rotation: Rear	Not HP	HP
6140 44	Saddle Stitch Detection: Rear	Staple not detected	Staple detected
6140 45	Saddle Stitch Leading Edge Detection: Rear	Staple not detected	Staple detected
6140 46	Full Sensor: 3000-Sheet	Not Full	Full

\* 1: Combination of DIP SW 1 and SW 2

DIP SW 1	DIP SW 2	Punch Type
0	0	Japan
1	0	Europe
0	1	North America
1	1	North Europe

\* 2: Please refer to "Lower Tray (D637 Only)" in the Service Manual for the "2000/3000 (Booklet) Finisher".

### 1000-Sheet Finisher (D588)

6139	Description	Reading	
		0	1
6139 1	Entrance Sensor	Paper detected	Paper not detected

6139 2	Shift Exit Sensor (Lower Tray Exit Sensor)	Paper not detected	Paper detected
6139 3	Staple Entrance Sensor (Stapler Tray Entrance Sensor)	Paper detected	Paper not detected
6139 4	Staple Moving HP Sensor (Stapler HP Sensor)	Not home position	Home position
6139 5	Jogger HP Sensor (Jogger Fence HP Sensor)	Not home position	Home position
6139 6	Stack Feed-out Belt HP Sensor	Home position	Not home position
6139 7	Staple Tray Paper Sensor	Paper not detected	Paper detected
6139 8	Staple Rotation Sensor (Staple Rotation HP Sensor)	Not home position	Home position
6139 9	Staple Sensor	Staple detected	Staple not detected
6139 10	Staple READY Detection	Staple detected	Staple not detected
6139 11	Exit Guide Plate HP (Exit Guide Plate HP Sensor)	Not home position	Home position
6139 12	Shift HP Sensor	Not home position	Home position
6139 13	Paper Sensor (Stack Height Sensor)	Output tray not detected	Output tray detected
6139 14	Tray Lower Sensor (Lower Tray Lower Limit Sensor)	Lower limit	Not lower limit
6139 15	Proof Full Sensor (Paper Limit Sensor)	Not full	Full

### Bridge Unit (D634)/ Side Tray (D635)

6150	Description	Reading	
		0	1
6150 1	Bridge/Left: Exit Sensor	Paper detected	Paper not detected
6150 2	Bridge/Left: Feed Sensor	Paper detected	Paper not detected
6150 3	Bridge/Left: Set Detection	Set	Not set
6150 4	Bridge/Left: Exit Cover Detection	Closed	Open
6150 5	Bridge/Left: Feed Cover Detection	Closed	Open

### Internal Shift Tray (D633)

6152	Description	Reading	
		0	1
6152 2	Shift: Position Sensor	Tray position: Front	Tray position: Rear

### 1 Bin Tray (D632)

6154	Description	Reading	
		0	1
6154 1	1 bin: Set Detection	Set	Not set
6154 2	1 bin: Paper Sensor	Paper detected	Paper not detected

### Two-Tray PFU (D580)/ LCIT 2000 (D581)/ LCIT 1200 (D631)

6160	Description	Reading	
		0	1
6160 1	Bank: Tray3: Feed Sensor	Paper not detected	Paper detected
6160 2	Bank: Tray4: Feed Sensor	Paper not detected	Paper detected

6160 3	Bank: Tray5: Feed Sensor	Paper not detected	Paper detected
6160 4	Bank: Tray3: Relay Sensor	Paper not detected	Paper detected
6160 5	Bank: Tray4: Relay Sensor	Paper not detected	Paper detected
6160 6	Bank: Tray5: Relay Sensor	Paper not detected	Paper detected
6160 7	Bank: Feed Cover Detection	Closed	Open
6160 11	Bank: Palau: Paper Supply Switch	Closed	Open
6160 12	Bank: Palau: Slide Switch	Closed	Open

## Output Check Table

### Copier

5804	Display	Description
5804 3	Drum/Dev Motor: K: HighSpeed	Drum/Development Drive Motor-K: High Speed
5804 4	Drum/Dev Motor: K: MiddleSpeed	Drum/Development Drive Motor-K: Middle Speed
5804 5	Drum/Dev Motor: K: LowSpeed	Drum/Development Drive Motor-M: Low Speed
5804 10	Drum/Dev Motor: M: HighSpeed	Drum/Development Drive Motor- C: High Speed
5804 11	Drum/Dev Motor: M: MiddleSpeed	Drum/Development Drive Motor-Y: Middle Speed
5804 12	Drum/Dev Motor: M: LowSpeed	Drum/Development Drive Motor-Y: Low Speed
5804 17	Drum/Dev Motor: C: HighSpeed	Drum/Development Drive Motor- C: High Speed
5804 18	Drum/Dev Motor: C: MiddleSpeed	Drum/Development Drive Motor-Y: Middle Speed
5804 19	Drum/Dev Motor: C: LowSpeed	Drum/Development Drive Motor-Y: Low Speed

5804 24	Drum/Dev Motor: Y: HighSpeed	Drum/Development Drive Motor- C: High Speed
5804 25	Drum/Dev Motor: Y: MiddleSpeed	Drum/Development Drive Motor-Y: Middle Speed
5804 26	Drum/Dev Motor: Y: LowSpeed	Drum/Development Drive Motor-Y: Low Speed
5804 31	-	See the last of this table.
5804 32	-	See the last of this table.
5804 33	-	See the last of this table.
5804 35	-	See the last of this table.
5804 37	Toner Relay Motor	Toner Transport Motor
5804 40	Image Transfer Motor: HighSpeed	ITB Drive Motor: High Speed
5804 41	Image Transfer Motor: MiddleSpeed	ITB Drive Motor: Middle Speed
5804 42	Image Transfer Motor: LowSpeed	ITB Drive Motor: Low Speed
5804 50	Feed Motor: HighSpeed	Paper Feed Motor: High Speed
5804 51	Feed Motor: IncreaseSpeed	Paper Feed Motor: Increase Speed
5804 52	Feed Motor: MiddleSpeed	Paper Feed Motor: Middle Speed
5804 53	Feed Motor: MiddleIncreaseSpeed	Paper Feed Motor: Middle Increase Speed
5804 54	Feed Motor: LowSpeed	Paper Feed Motor: Low Speed
5804 55	Feed Motor: LowInceraseSpeed	Paper Feed Motor: Low Incerase Speed
5804 60	Regist Motor: HighSpeed	Registration Motor: High Speed
5804 61	Regist Motor: MiddleSpeed	Registration Motor: Middle Speed
5804 62	Regist Motor: LowSpeed	Registration Motor: Low Speed
5804 67	Duplex Feed M: CW: HighSpeed	Duplex/By-pass Motor: CW: High Speed
5804 68	Duplex Feed M: CW: MiddleSpeed	Duplex/By-pass Motor: CW: Middle Speed
5804 69	Duplex Feed Motor: CW: LowSpeed	Duplex/By-pass Motor: CW: Low Speed
5804 74	Duplex Feed M: CCW: HighSpeed	Duplex/By-pass Motor: CCW: High Speed

5804 75	Duplex Feed M:CCW:MiddleSpeed	Duplex/By-pass Motor: CCW: Middle Speed
5804 76	Duplex Feed Motor: CCW: LowSpeed	Duplex/By-pass Motor: CCW: Low Speed
5804 81	Duplex Reverse M:CW:HighSpeed	Duplex Inverter Motor: CW: High Speed
5804 82	Duplex Reverse M:CW:MiddleSpeed	Duplex Inverter Motor: CW: Middle Speed
5804 83	Duplex Reverse Motor: CW: LowSpeed	Duplex Inverter Motor: CW: Low Speed
5804 88	Duplex Reverse M:CCW:HighSpeed	Duplex Inverter Motor: CCW: High Speed
5804 89	Duplex Reverse M:CCW:MiddleSpeed	Duplex Inverter Motor: CCW: Middle Speed
5804 90	Duplex Reverse Motor: CCW: LowSpeed	Duplex Inverter Motor: CCW: Low Speed
5804 95	ITB Contact Motor	Image Transfer Belt Contact Motor
5804 96	Paper Transfer Contact Motor	Paper Transfer Contact Motor
5804 97	1st Tray Lift Motor: Up	Tray Lift Motor 1: Lift Up
5804 98	1st Tray Lift Motor: Down	Tray Lift Motor 1: Lift Down
5804 99	2nd Tray Lift Motor: Up	Tray Lift Motor 2: Lift Up
5804 100	2nd Tray Lift Motor: Down	Tray Lift Motor 2: Lift Down
5804 102	Fusing Pressue Release Motor	Pressure Roller Contact Motor
5804 104	Polygon Moter: LL	Polygon Motor: LL
5804 105	Polygon Moter: L	Polygon Motor: L
5804 107	Polygon Moter: HH	Polygon Motor: HH
5804 110	Air Flow Fan: Front	Ventilation Fan - Front
5804 111	Air Flow Fan:Rear	Ventilation Fan - Rear
5804 112	Fusing Fan:H	Fusing Fan: High Speed



5804 113	Fusing Fan:L	Fusing Fan: Low Speed
5804 114	PSU Cooling Fan	PSU Fan 1: High Speed
5804 115	2nd Duct Fan: H	Duct Fan 2: High Speed
5804 117	3rd Duct Fan: H	Duct Fan 3: High Speed
5804 119	Paper Exit Fan:H	Paper Exit Fan: High Speed
5804 121	Fusing Coil Fan	IH Coil Fan
5804 122	IH Power Supply Cooling Fan	IH Inverter Fan
5804 126	Development Clutch: Bk	Development Clutch-K
5804 127	Development Clutch: M	Development Clutch-M
5804 128	Development Clutch: C	Development Clutch-C
5804 129	Development Clutch: Y	Development Clutch-Y
5804 130	Toner Bottle Clutch: Bk	Toner Bottle Clutch-K
5804 131	Toner Bottle Clutch: M	Toner Bottle Clutch-M
5804 132	Toner Bottle Clutch: C	Toner Bottle Clutch-C
5804 133	Toner Bottle Clutch:Y	Toner Bottle Clutch-Y
5804 134	Toner Supply Pump: Bk	Toner Supply Clutch: Bk
5804 135	Toner Supply Pump: M	Toner Supply Clutch: M
5804 136	Toner Supply Pump: C	Toner Supply Clutch: C
5804 137	Toner Supply Pump: Y	Toner Supply Clutch: Y
5804 138	1st Paper Feed Clutch	Paper Feed Clutch 1
5804 139	2nd Paper Feed Clutch	Paper Feed Clutch 2
5804 140	Bypass Feed Clutch	By-pass Feed Clutch
5804 141	Bypass Pickup Solenoid	Bypass Pickup Solenoid
5804 143	TD Sensor Shutter Solenoid	ID Sensor Shutter Solenoid
5804 144	Exit Junction Solenoid	Junction Gate 1 Solenoid
5804 145	1st Feed Pickup Solenoid	1st Pickup Solenoid

5804 146	2st Feed Pickup Solenoid	2nd Pickup Solenoid
5804 161	PCL: Bk	-
5804 162	PCL: M	-
5804 163	PCL: C	-
5804 164	PCL: Y	-
5804 166	HST Sensor:Bk	TD Sensor:Bk
5804 167	HST Sensor: M	TD Sensor: M
5804 168	HST Sensor: C	TD Sensor: C
5804 169	HST Sensor: Y	TD Sensor: Y
5804 170	Toner End Sensor: Bk	Toner End Sensor: Bk
5804 171	Toner End Sensor: M	Toner End Sensor: M
5804 172	Toner End Sensor: C	Toner End Sensor: C
5804 173	Toner End Sensor: Y	Toner End Sensor: Y
5804 174	TM Sensor: Front	ID Sensor: Front
5804 175	TM Sensor: Center	ID Sensor: Center
5804 176	TM Sensor: Rear	ID Sensor: Rear
5804 177	TM Sensor: M	ID Sensor: M
5804 178	TM Sensor: C	ID Sensor: C
5804 179	TM Sensor: Y	ID Sensor: Y
5804 181	PP:Charge AC:Y:HighSpeed	-
5804 182	PP:Charge AC:Y:MiddleSpeed	-
5804 183	PP:Charge AC:Y:LowSpeed	-
5804 186	PP:Development:K	-
5804 187	PP:Development:M	-
5804 188	PP:Development:C	-
5804 189	PP:Development:Y	-

5804 190	PP:Separation	-
5804 192	RFID ON/OFF: K	-
5804 193	RFID ON/OFF: Y	-
5804 194	RFID ON/OFF: C	-
5804 195	RFID ON/OFF: M	-
5804 196	RFID COM ON:K	-
5804 197	RFID COM ON: Y	-
5804 198	RFID COM ON: C	-
5804 199	RFID COM ON: M	-
5804 202	Scanner Lamp	-
5804 216	LD1: K	-
5804 217	LD2: K	-
5804 218	LD1: M	-
5804 219	LD2: M	-
5804 220	LD1: C	-
5804 221	LD2: C	-
5804 222	LD1: Y	-
5804 223	LD2: Y	-
5804 224	PP:ITB:K	PP: Image Transfer Roller: K
5804 225	PP:ITB:M	PP: Image Transfer Roller: M
5804 226	PP:ITB:C	PP: Image Transfer Roller: C
5804 227	PP:ITB:Y	PP: Image Transfer Roller: Y
5804 228	PP:PTR:+	PP: Paper Transfer Roller:+
5804 229	PP:PTR:-	PP: Paper Transfer Roller:-
5804 231	HVPS: ChargeDC: K	-
5804 232	HVPS: ChargeDC: M	-

5804 233	HVPS: ChargeDC: C	-
5804 234	HVPS: ChargeDC: Y	-
5804 237	PP:Charge AC:K:HighSpeed	-
5804 238	PP:Charge AC:K:MiddleSpeed	-
5804 239	HVPS: ChargeAC: K: LowSpeed	-
5804 244	PP:Charge AC:M:HighSpeed	-
5804 245	PP:Charge AC:M:MiddleSpeed	-
5804 246	HVPS: ChargeAC: M: LowSpeed	-
5804 251	PP:Charge AC:C:HighSpeed	-
5804 252	PP:Charge AC:C:MiddleSpeed	-
5804 253	HVPS: ChargeAC: C: LowSpeed	-

<b>5804</b>	Fusing Exit Motor
-31 to -35	<b>Note:</b> These SP modes will be moved to Super SP mode in the near future.

	<p><b>Important: Use the procedure below</b> to do the output checks for the fusing exit motor. If you do not follow this procedure, a kink will form in the fusing belt sleeve, and the fusing sleeve belt unit will need to be replaced.</p> <ol style="list-style-type: none"> <li>Do one of the following: <ul style="list-style-type: none"> <li>Open the right cover of the paper bank</li> <li>Remove one of the toner bottles</li> <li>Pull out the waste toner bottle half-way</li> <li>Remove the fusing unit</li> </ul> </li> <li>Enter SP mode.</li> <li>Do the following out output checks: <ul style="list-style-type: none"> <li>SP5-804-031 (Fusing exit motor: High speed)</li> <li>SP5-804-032 (Fusing exit motor: Middle speed)</li> <li>SP5-804-033 (Fusing exit motor: Low speed)</li> <li>SP5-804-035 (Fusing exit motor: Very low speed)</li> </ul> </li> <li><b>Without exiting SP mode</b>, turn the main power switch off and then on again.</li> </ol> <p><b>Important:</b> If you exit SP mode before you turn the main power switch off, the fusing exit motor will stay off when the machine warms up. Heat will be concentrated in one area of the fusing belt sleeve and cause a kink to form. If this happens, you will need to replace the fusing sleeve belt unit.</p> <ol style="list-style-type: none"> <li>Do the reverse of what you did in step 1 (for example, reattach the fusing unit).</li> </ol>	
5804 31	Fusing Exit Motor: HighSpeed	Fusing/Paper Exit Motor: High Speed
5804 32	Fusing Exit Motor: MiddleSpeed	Fusing/Paper Exit Motor: Middle Speed
5804 33	Fusing Exit Motor: LowSpeed	Fusing/Paper Exit Motor: Low Speed
5804 35	Fusing Exit Motor: LLowSpeed	Fusing/Paper Exit Motor: LLow Speed

## ARDF (D630)

6008	Display	Description
6008 1	Pick-Up Motor Forward	-
6008 2	Pick-Up Motor Reverse	-
6008 3	Feed Motor Forward	Feed Motor-Forward rotation
6008 4	Feed Motor Reverse	Feed Motor-Reverse rotation

6008 5	Relay Motor Forward	Transport Motor- Forward rotation
6008 7	Inverter Motor Reverse	Transport Motor- Forward rotation
6008 8	Inverter Motor Reverse	-
6008 11	Inverter Solenoid	-
6008 12	Stamp	Stamp Solenoid
6008 13	Fan Motor	-
6008 14	Feed Clutch	-
6008 15	Feed Solenoid	-

### 1000-Sheet Finisher (D588)

6144	Display	Description
6144 1	Relay Up Motor	Upper Transport Motor
6144 2	Relay Down Motor	Lower Transport Motor
6144 3	Exit Motor	-
6144 4	Proof Junction Gate SOL	Tray Junction Gate Solenoid
6144 5	Tray Up Motor	Lower Tray Lift Motor
6144 6	Jogger Motor	Jogger Fence Motor
6144 7	Staple Moving Motor	Stapler Motor
6144 8	Staple Motor	Stapler Hammer
6144 9	Staple Junction Gate SOL	Stapler Junction Gate Solenoid
6144 10	Positioning Roller Solenoid	Positioning Roller Solenoid
6144 11	Stack Feed-out Motor	-
6144 12	Shift Motor	-
6144 13	Exit Guide Plate Motor	-

## 2000/3000-Sheet (Booklet) Finisher (D637/D636)

6145	Display	Description
6145 1	Entrance Motor	Finisher Entrance Motor
6145 2	Upper Feed Motor	Upper Transport Motor
6145 3	Lower Feed Motor	Lower Transport Motor
6145 4	Exit Motor	Upper/Proof Tray Exit Motor
6145 5	Knock Roller Motor	Clamp Roller Retraction Motor
6145 6	Shift Motor	Shift Roller Motor
6145 7	Exit Guide Plate Open/Close Motor	Exit Guide Plate Motor
6145 8	Tray Lift Motor	Upper Tray Lift Motor
6145 9	Oscillating Back Roller Motor	Stacking Sponge Roller Motor
6145 10	Jogger Motor	Jogger Fence Motor
6145 11	Stack Feed-out Motor	Feed Out Belt Motor
6145 12	Staple Moving Motor	Corner Stapler Movement Motor
6145 13	Staple Skew Motor	Corner Stapler Rotation Motor
6145 14	Staple Motor	Corner Stapler EH530
6145 15	Upper Junction Gate Solenoid	Proof Junction Gate Solenoid
6145 16	Lower Junction Gate Solenoid	Stapling Tray Junction Gate Solenoid
6145 17	Knock Solenoid	Stapling Edge Pressure Plate Solenoid
6145 18	Trailing Edge Hold Solenoid	Positioning Roller Solenoid
6145 19	Saddle Stitch Hold Solenoid	Booklet Pressure Roller Solenoid
6145 20	Stack Junction Gate Open/Close Motor	Stack Junction Gate Motor
6145 21	Trailing Edge Fence Moving Motor	Fold Unit Bottom Fence Lift Motor
6145 22	Saddle Stitch Staple Motor: Front	Booklet Stapler EH185R: Front
6145 23	Saddle Stitch Staple Motor: Rear	Booklet Stapler EH185R: Rear

6145 24	Folder Plate Motor	Fold Plate Motor
6145 25	Folder Roller Motor	Fold Roller Motor
6145 26	Drive Roller Oscillating Motor	Positioning Roller Motor
6145 27	Punch Motor	Punch Drive Motor
6145 28	Punch Moving Motor	Punch Movement Motor
6145 29	Punch Registration Detection Motor	Paper Position Sensor Slide Motor

### Bridge Unit (D386)/ Side Tray (D634)

6151	Display	Description
6151 1	Bridge/Left: Feed Motor: Current Selection	Bridge: Feed Motor: Current switching signal
6151 2	Bridge/Left: Feed Motor:Reset	Bridge: Feed Motor:Reset
6151 3	Bridge/Left: Feed Motor:Enable	Bridge: Feed Motor:Enable
6151 6	Bridge/Left: Feed Motor: High Speed	Bridge: Feed Motor: High Speed
6151 7	Bridge/Left: Feed Motor: Middle Speed	Bridge: Feed Motor: Middle Speed
6151 8	Bridge/Left: Feed Motor: Low Speed	Bridge: Feed Motor: Low Speed
6151 11	Bridge/Left: Junction Solenoid	Bridge: Junction Solenoid

### Shift Tray (D633)

6153	Display	Description
6153 1	Shift Tray: Motor	-

### 1 Bin Tray (D632)

6155	Display	Description
6155 1	1 bin: Junction Solenoid	-



**Two-Tray PFU (D580)/ LCIT 2000 (D581)/ LCIT 1200 (D531)**

<b>6161</b>	<b>Display</b>	<b>Description</b>
6161 5	Bank1: Feed Motor: HighSpeed	Feed Motor:High Speed (D537/D538)
6161 6	Bank1: Feed Motor: IncreaseSpeed	Feed Motor: Increase Speed (D537/D538)
6161 8	Bank1: Feed Motor: MiddleSpeed	Feed Motor: Middle Speed (D537/D538)
6161 9	Bank1: Feed Motor: LowSpeed	Feed Motor: Low Speed (D537/D538)
6161 10	Bank1: Feed Motor: LowIncreaseSpeed	Feed Motor:Low Increase Speed (D537/ D538)
6161 15	Bank2: Feed Motor:HighSpeed	Feed Motor:High Speed (D537)
6161 16	Bank2: Feed Motor: IncreaseSpeed	Feed Motor: Increase Speed (D537)
6161 18	Bank2: Feed Motor: MiddleSpeed	Feed Motor: Middle Speed (D537)
6161 19	Bank2: Feed Motor: LowSpeed	Feed Motor: Low Speed (D537)
6161 20	Bank2: Feed Motor: LowIncreaseSpeed	Feed Motor: Low Increase Speed (D537)
6161 30	Bank:Tray3: PU Solenoid	Pick-up Solenoid (D537/ D538)
6161 31	Bank:Tray4: PU Solenoid	Pick-up Solenoid (D537/ D539)
6161 32	Bank:Tray5: PU Solenoid	Pick-up Solenoid (D539)
6161 35	Bank:Tray3: Feed Clutch	Pick-up Solenoid (D537/ D538)
6161 36	Bank:Tray4: Feed Clutch	Pick-up Solenoid (D537/ D539)
6161 37	Bank:Tray5: Feed Clutch	Pick-up Solenoid (D539)

# Printer Service Mode

## SP1-XXX (Service Mode)

3

1001	Bit Switch			
001	Bit Switch 1		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	<b>No I/O Timeout</b>	0: Disable	1: Enable
		Enable: The MFP I/O Timeout setting will have no effect. I/O Timeouts will never occur.		
	bit 4	<b>SD Card Save Mode</b>	0: Disable	1: Enable
		Enable: Print jobs will be saved to an SD Card in the GW SD slot. For details, see "Card Save Function" in the "Main chapters: 5. System Maintenance".		
	bit 5	DFU	-	-
	bit 6	DFU	-	-
bit 7	<b>[RPCS,PCL]: Printable area frame border</b>	0: Disable	1: Enable	
	Enable: The machine prints all RPCS and PCL jobs with a border on the edges of the printable area.			
1001	Bit Switch			

002	Bit Switch 2		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	<b>Applying a collation Type</b>	Shift Collate	Normal Collate
	<p>A collation type (shift or normal) will be applied to all jobs that do not already have a 'Collate Type' configured.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>If #5-0 is enabled, this Bit Switch has no effect.</li> </ul>			
	bit 3	<b>[PCL5e/c,PS]: PDL Auto Switching</b>	0: Enable	1: Disable
	<p>Disable: The MFPs ability to change the PDL processor mid-job.</p> <p>Some host systems submit jobs that contain both PS and PCL5e/c. If Auto PDL switching is disabled, these jobs will not be printed properly.</p>			
	bit 4	DFU	-	-
	bit 5	DFU	-	-
bit 6	DFU	-	-	
bit 7	DFU	-	-	
1001	Bit Switch			

003	Bit Switch 3		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	<b>[PCL5e/c]: Legacy HP compatibility</b>	0: Disable	1: Enable
		Enable: Uses the same left margin as older HP models such as HP4000/HP8000. In other words, the left margin defined in the job (usually "<ESC>*r0A") will be changed to "<ESC>*r1A"		
	bit 3	DFU	-	-
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
	bit 7	DFU	-	-

<b>1001</b>	<b>Bit Switch</b>			
004	Bit Switch 4 DFU		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	<b>IPDS print-side reversal</b>	0: Disable	1: Enable
		If enabled, the simplex pages of IPDS jobs will be printed on the front side because of printing on the back side of the page. This might reduce printing speed.		
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
bit 7	DFU	-	-	

<b>1001</b>	<b>Bit Switch</b>		
005	Bit Switch 5	0	1


		<b>Show "Collate Type", "Staple Type" and "Punch Type" buttons on the operation panel.</b>	Disable	Enable
	bit 0	<p>If enabled, users will be able to configure a Collate Type, Staple Type, and Punch Type from the operation panel. The available types will depend on the device and configured options.</p> <p>After enabling the function, the settings will appear under: "User Tools &gt; Printer Features &gt; System"</p>		
	bit 1	<b>Multiple copies if a paper size or type mismatch occurs</b>	0: Disable (Single copy)	1: Enable (Multiple copy)
		If a paper size or type mismatch occurs during the printing of multiple copies, only a single copy is output by default. Using this BitSw, the device can be configured to print all copies even if a paper mismatch occurs.		
	bit 2	DFU	-	-
	bit 3	<b>[PS] PS Criteria</b>	Pattern3	Pattern1
		<p>Change the number of PS criterion used by the PS interpreter to determine whether a job is PS data or not.</p> <p>Pattern3: includes most PS commands.</p> <p>Pattern1: A small number of PS tags and headers</p>		
	bit 4	<b>Increase max number of the stored jobs to 1000 jobs.</b>	Disable (100)	Enable (1000)
		Enable: Changes the maximum number of jobs that can be stored on the HDD via Job Type settings to 1000. The default is 100.		
	bit 5	<b>Face-up output</b>	Disable	Enable
		Enable: All print jobs will be output face-up in the destination tray.		
	bit 6	<b>Method for determining the image rotation for the edge to bind on.</b>	0: Disable	1: Enable
		<p>If enabled, the image rotation will be performed as they were in the specifications of older models for the binding of pages of mixed orientation jobs.</p> <p>The old models are below:</p> <ul style="list-style-type: none"> <li>- PCL: Pre-04A models</li> <li>- PS/PDF/RPCS:Pre-05S models</li> </ul>		

	bit 7	Letterhead mode printing	0: Disable	1: Enable (Duplex)
--	-------	--------------------------	------------	--------------------

1001	Bit Switch			
006	Bit Switch 6	DFU	-	-

3

1001	Bit Switch			
007	Bit Switch 7		0	1
	bit 0	<b>Print path</b>	0: Disable	1: Enable
		If enabled, simplex pages (in mixed simplex/duplex PS/PCL5 jobs only) and the last page of an odd paged duplex job (PS, PCL5, PCL6), are always routed through the duplex unit. Not having to switch paper paths increases the print speed slightly.		
	bit 1 to 7	DFU	-	-

1001	Bit Switch			
008	Bit Switch 8		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	<b>[PCL,PS]: Allow BW jobs to print without requiring User Code</b>	Disable	Enable
		Enable: BW jobs submitted without a user code will be printed even if usercode authentication is enabled.  <b>Note</b> <ul style="list-style-type: none"> <li>Color jobs will not be printed without a valid user code.</li> </ul>		
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
bit 7	DFU	-	-	

1001	Bit Switch			
005	Bit Switch 9	0	1	
	bit 0	<b>PDL Auto Detection timeout of jobs submitted via USB or Parallel Port (IEEE 1284).</b>	"Disabled (Immediately)"	"Enabled (10 seconds)"
		To be used if PDL auto-detection fails. A failure of PDL autodetection doesn't necessarily mean that the job can't be printed. This bit switch tells the device whether to time-out immediately (default) upon failure or to wait 10 seconds.		
	bit 1	DFU	-	-
	bit 2	<b>Job Cancel</b>	Disabled (Not cancelled)	Enabled (Cancelled)
		If this bit switch, all jobs will be cancelled after a jam occurs. Note: If this bitsw is enabled, printing under the following conditions might result in problems: - Job submission via USB or Parallel Port - Spool printing (WIM > Configuration > Device Settings > System)		
	bit 3	<b>PCL/PS bypass tray paper rotation (SEF/LEF)</b>	0: Disable	1: Enable
		This bitsw causes the device to revert to the behavior of previous generations. It only takes effect if "Bypass Tray Setting Priority" = "Driver/Command". Previous spec (bitsw=1): If a standard sized paper mismatch occurred in the bypass tray, the MFP always prompted for SEF paper. If this bitsw=0 (default) then in the event of a standard sized paper mismatch, the MFP will always prompt for paper of the rotation (SEF/LEF) determined by the MFP bypass tray paper setting or by the bypass tray sensor.		
	Bit 4 to 7	DFU	-	-

1003	[Clear Setting]
1003 1	Initialize Printer System
	Initializes settings in the "System" menu of the user mode.
1003 3	Delete Program

1004	[Print Summary]		
1004 1	Print Summary		
	Prints the service summary sheet (a summary of all the controller settings).		
1005	[Display Version]		
1005 1	Disp. Version		
	Displays the version of the controller firmware.		
1006	[Sample/Locked Print]	*CTL	0: Linked, 1: On
1006 1	Enables and disables the document server. When you select "0," the document server is enabled or disabled in accordance with Copy Service Mode SP5-967. When you select "1," the document server is enabled regardless of Copy Service Mode SP5-967.		
1101	[Data Recall]		
	Recalls a set of gamma settings. This can be either a) the factory setting, b) the previous setting, or c) the current setting.		
1101 1	Factory	*CTL	
1101 2	Previous		
1101 3	Current		
1101 4	ACC		
1102	[Resolution Setting]		
1102 1	Selects the printing mode (resolution) for the printer gamma adjustment.		
	<b>2400x600 Photo</b> , 1800x600 Photo, 600 x 600 Photo, 2400x600 Text, 1800x600, Text, 600x600 Text		
1103	[Test Page]		
	Prints the test page to check the color balance before and after the gamma adjustment.		
1103 1	Color Gray Scale		
1103 2	Color Pattern		



1104	[Gamma Adjustment]		
	Adjusts the printer gamma for the mode selected in the "Mode Selection" menu.		
1104 1	Black: Highlight	*CTL	[0 to 30 / 15 / 1/step ]
1104 2	Black: Shadow		
1104 3	Black: Middle		
1104 4	Black: IDmax		
1104 21	Cyan: Highlight	*CTL	[0 to 30 / 15 / 1/step ]
1104 22	Cyan: Shadow		
1104 23	Cyan: Middle		
1104 24	Cyan: IDmax		
1104 41	Magenta: Highlight	*CTL	[0 to 30 / 15 / 1/step ]
1104 42	Magenta: Shadow		
1104 43	Magenta: Middle		
1104 44	Magenta: IDmax		
1104 61	Yellow: Highlight	*CTL	[0 to 30 / 15 / 1/step ]
1104 62	Yellow: Shadow		
1104 63	Yellow: Middle		
1104 64	Yellow: IDmax		

1105	[Save Tone Control Value]		
	Stores the print gamma adjusted with the "Gamma Adj." menu item as the current setting. Before the machine stores the new "current setting", it moves the data currently stored as the "current setting" to the "previous setting" memory storage location.		
1105 1	Save Tone Control Value		

1106	[Toner Limit]		
	Adjusts the maximum toner amount for image development.		

### 3. SP Mode Tables

---

1106 1	Toner Limit Value	*CTL	[100 to 400 / <b>260</b> / 1 %/step ]
--------	-------------------	------	---------------------------------------

# Scanner SP Mode

## SP1-XXX (System and Others)

1004	[Compression Type]		
	Selects the compression type for binary picture processing.		
1004 1	Compression Type	*CTL	[1 to 3 / 1 / 1/step ] 1: MH, 2: MR, 3: MMR

3

1005	[Erase Margin(Remote scan)]		
	Creates an erase margin for all edges of the scanned image. If the machine has scanned the edge of the original, create a margin. This SP is activated only when the machine uses TWAIN scanning.		
1005 1	Range from 0 to 5 mm	*CTL	[0 to 5 / 0 / 1 mm/step ]

1009	[Remote scan disable]	*CTL	[0 or 1 / 0 / - ] 0: enable, 1: disable
1009 1	Enable or disable remote scan.		

1010	[Non Display Clear Light PDF]	*CTL	[0 or 1 / 0 / - ] 0: Display, 1: No display
1010 1	Display or Nondisplay remote scan.		

## SP2-XXX (Scanning-image quality)

2021	[Compression Level (Gray-scale)]		
	Selects the compression ratio for grayscale processing mode (JPEG) for the three settings that can be selected at the operation panel.		

2021 1	Comp1:5-95	*CTL	[5 to 95 / <b>20</b> / 1 /step ]
2021 2	Comp2:5-95		[5 to 95 / <b>40</b> / 1 /step ]
2021 3	Comp3:5-95		[5 to 95 / <b>65</b> / 1 /step ]
2021 4	Comp4:5-95		[5 to 95 / <b>80</b> / 1 /step ]
2021 5	Comp5:5-95		[5 to 95 / <b>95</b> / 1 /step ]

3

2024	[Compression ratio of ClearLight PDF]		
	Selects the compression ratio for clearlight PDF for the two settings that can be selected at the operation panel.		
2024 1	Compression Ratio (Normal image)	*CTL	[5 to 95 / <b>25</b> / 1 /step ]
2024 2	Compression Ratio (High)		[5 to 95 / <b>20</b> / 1 /step ]

# Test Pattern Printing

Printing Test pattern: SP2-109

Some of these test patterns are used for copy image adjustments but most are used primarily for design testing.

## ↓ Note

- Do not operate the machine until the test pattern is printed out completely. Otherwise, an SC occurs.
1. Enter the SP mode and select **SP2-109-003**.
  2. Enter the number for the test pattern that you want to print and press [#].
  3. When you want to select the single color of Magenta, Yellow or Cyan for printing a test pattern, select the color with SP2-109-005 (2: Magenta, 3: Yellow, 4: Cyan).
  4. When you want to change the density of printing a test pattern, select the density with SP2-109-006 to -009 for each color.

## ↓ Note

- If you select "0" with SP2-109-006 to -009, the color to be adjusted to "0" does not come up on a test pattern.
5. When you are prompted to confirm your selection, touch "Yes" to select the test pattern for printing.
  6. Touch "Copy Window" to open the copy window, then select the settings for the test print (paper size etc.).

## ↓ Note

- If you want to use black and white printing, touch "Black & White" on the LCD. If you want to use color printing, touch "Full Colour" on the LCD.
7. Press the "Start" key to start the test print.
  8. After checking the test pattern, touch "SP Mode" on the LCD to return to the SP mode display.
  9. Reset all settings to the default values.
  10. Touch "Exit" twice to exit SP mode.

No.	Pattern	No.	Pattern
0	None	11	Independent Pattern (1-dot)
1	Vertical Line (1 dot)	12	Independent Pattern (2-dot)
2	Vertical Line (2dot)	13	Independent Pattern (4-dot)
3	Horizontal Line (1 dot)	14	Triming Area

4	Horizontal Line (2dot)	16	Tooth Check (Horizontal)
5	Grid Vertical Line	17	Band (Horizontal)
6	Grid Horizontal Line	18	Band (Vertical)
7	Grid Pattern Small	19	Checker Flag Pattern
8	Grid Pattern Large	20	Grayscale (Vertical Margin)
9	Argyle Pattern Small	21	Grayscale (Horizontal Margin)
10	Argyle Pattern Large	23	Full Dot Pattern