

KONICA MINOLTA

PARTS GUIDE MANUAL

JANUARY 2018

bizhub 4702P
AAFH

 
INFORMATION FOR PARTS GUIDE MANUAL

To find correct Parts No., refer to the "HOW TO MAKE THE BEST USE OF THIS MANUAL" in the following page.

HOW TO MAKE THE BEST USE OF THIS MANUAL

- 1 When you order, please check the proper figures beforehand that are on Our Parts Guide Manual, and order with the appropriate figures.
- 2 For screws, Nuts, Washers, retaining rings and Pins which are used in this model, one letter is shown on the Standard parts column of Parts list and exploded diagrams.
- 3 In order to maintain safety of the product, some specific parts composed of this product are set up as "essential safety parts".
- 4 The assigned parts number for the "essential safety parts" is indicated as "SP00-****".
When replacing these parts, follow precautions for disassembling and installing which are listed in the Service Manual.
Do not use any parts that are not set up as
- 5 ♣ means that there are exclusive parts for each destination.
Please check the appropriate destination when you order.
- 6 Revision Mark
Marked as ▲ on the illustration shows that the revision has been made.
- 7 All rights reserved. (any reprints or quotations are prohibited.)
Use of this parts guide manual should be strictly supervised to avoid disclosure of confidential information.


System Configuration

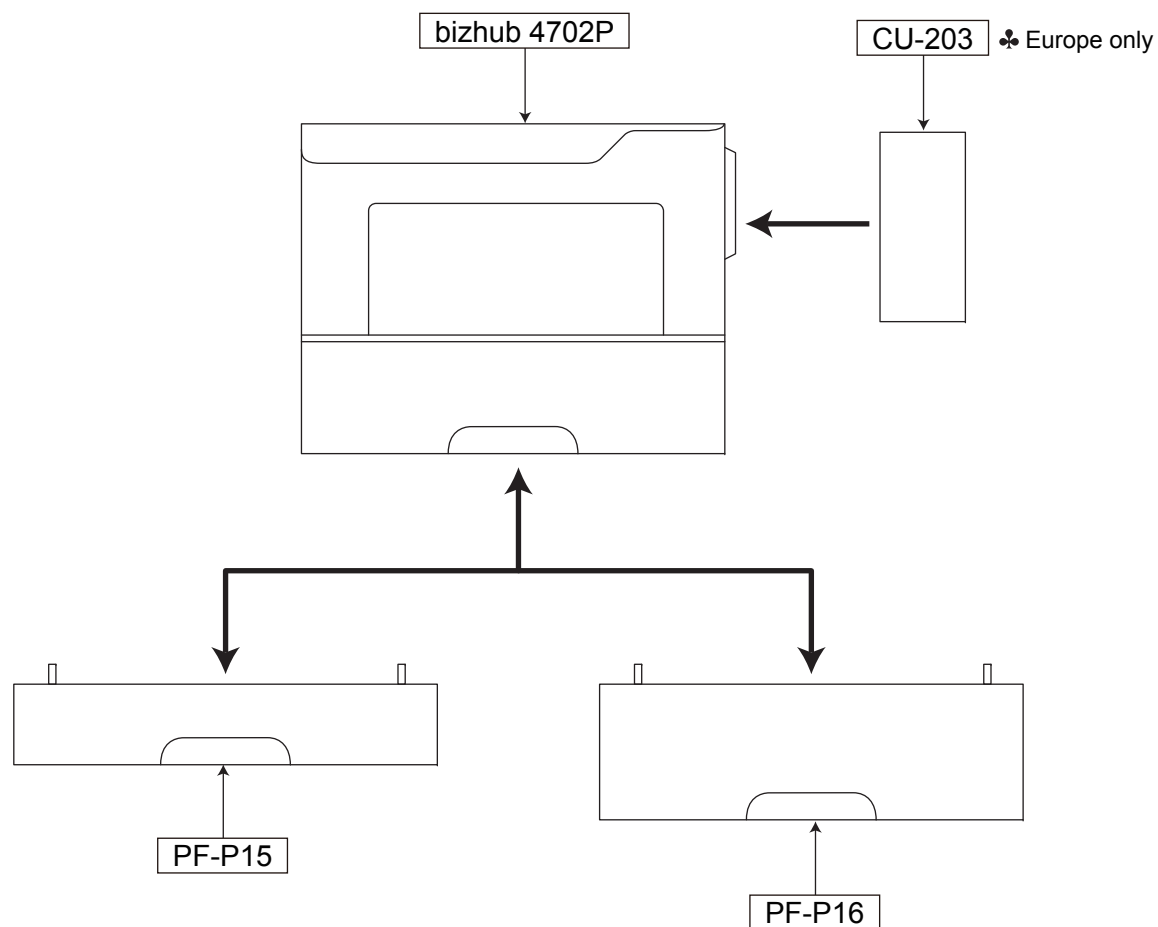

GENERAL CONTENTS

No.	Description	Model
1	Printer B/W	bizhub 4702P
2	Paper Feeder	PF-P15
3	Paper Feeder	PF-P16
4	Other Option	CU-203

 Section Configuration

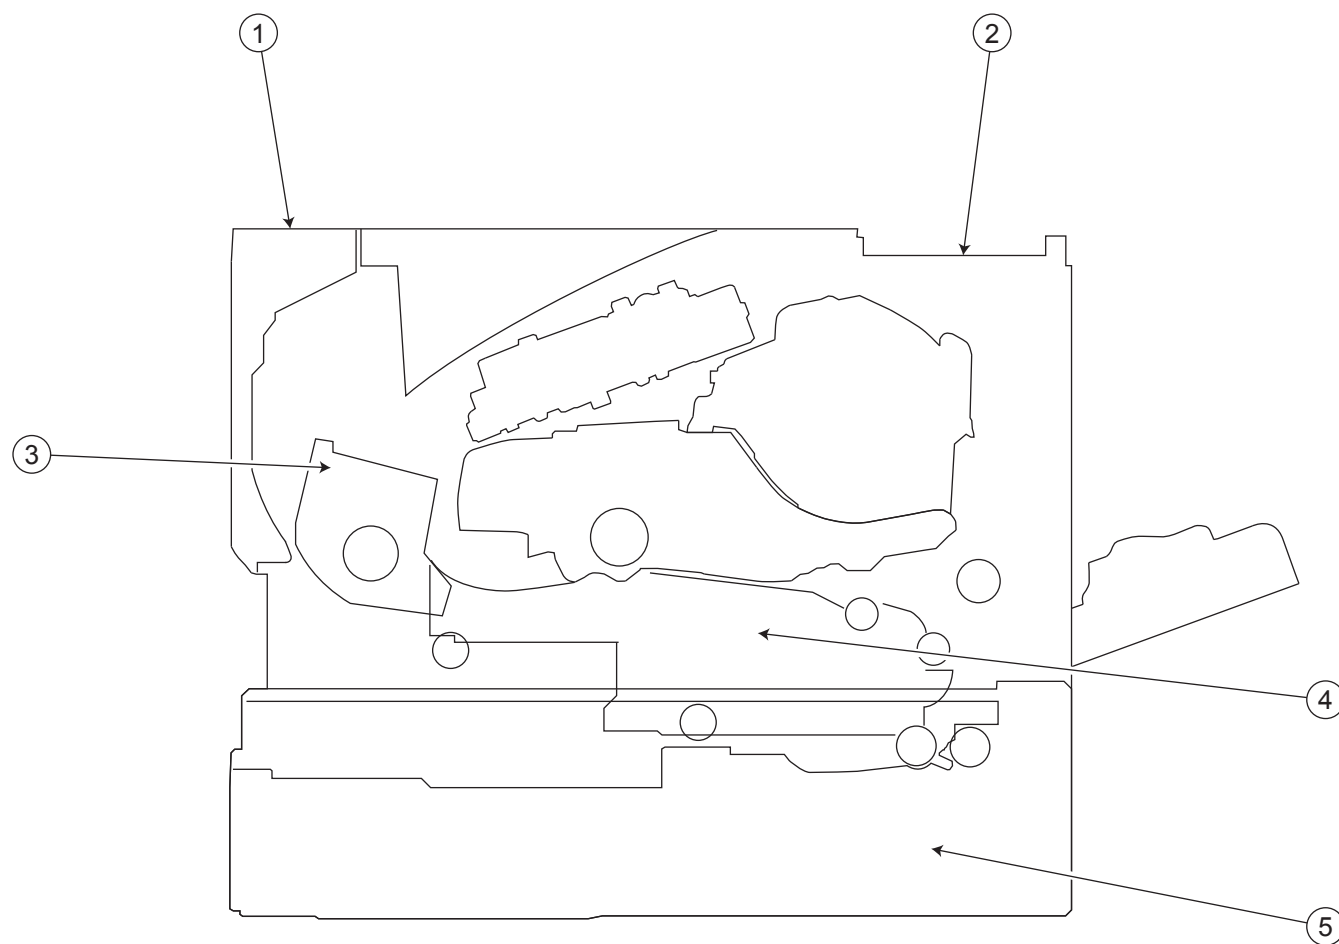

CONTENTS

No.	DESCRIPTION	PAGE No.
1	External Parts	P1
2	Operation Panel section	P2
3	Electrical Components Section	P3 P4 P5 P6
4	Paper Transport Section	P7 P8
5	Tray Section	P9
6	Accessory Parts	P10

INDEX


1/1

Parts No.	Page No.
4136N30000	10-1
9381420021	10-1
A1UDN30200	10-1
A2UPN30100	10-1
A2UPN30300	10-1
A2UPN30501	10-1
A63NPP0Q00	6-5
A63NPP0S00	6-6
A63NPP0Y00	8-1
A6WDPP0701	1-5
A6WDPP0R00	6-4
AA1PPP0A00	4-2
AA1PPP0B00	5-1
AA1PPP0D00	7-1
AA1PPP0E00	7-3
AA1PPP0G00	9-3
AAFHPP1100	5-2
AAFHPP1300	3-2
AAFHPP1400	3-2
AAFHPP1700	7-4
AAFHPP1900	7-2
AAFHPP1A00	3-1
AAFHPP1B00	8-2
AAFHPP1C01	3-4
AAFHPP1D01	3-4
AAFHPP1E00	6-2
AAFHPP1F00	5-4
AAFHPP1G00	5-7
AAFHPP1H00	5-3
AAFHPP1K00	3-5
AAFHPP1M00	5-5
AAFHPP1N00	5-6
AAFHPP1N00	6-3
AAFHPP1S00	9-1
AAFHPP1V00	1-2
AAFHPP1W00	1-4
AAFHPP2100	1-7
AAFHPP2300	4-5
AAFHPP2400	4-3
AAFHPP2500	4-4

Parts No.	Page No.
AAFHPP2801	3-3
AAFHPP2900	8-3
AAFHPP2A01	8-5
AAFHPP2B00	6-1
AAFHPP2D00	4-1
AAFHPP2E00	4-6
AAFHPP2F00	1-8
AAFHPP2G00	1-6
AAFHPP2H00	1-9
AAFHPP2J00	1-3
AAFHPP2K00	1-1
AAFHPP2M00	2-1
AAFHPP2N00	9-2
AAFHPP2P00	8-4
AAFHPP2Q00	2-2
AAFHPP2R00	2-3
AAFHPP2S00	2-4
AAFHPP2T00	7-5


External Parts

 P 1

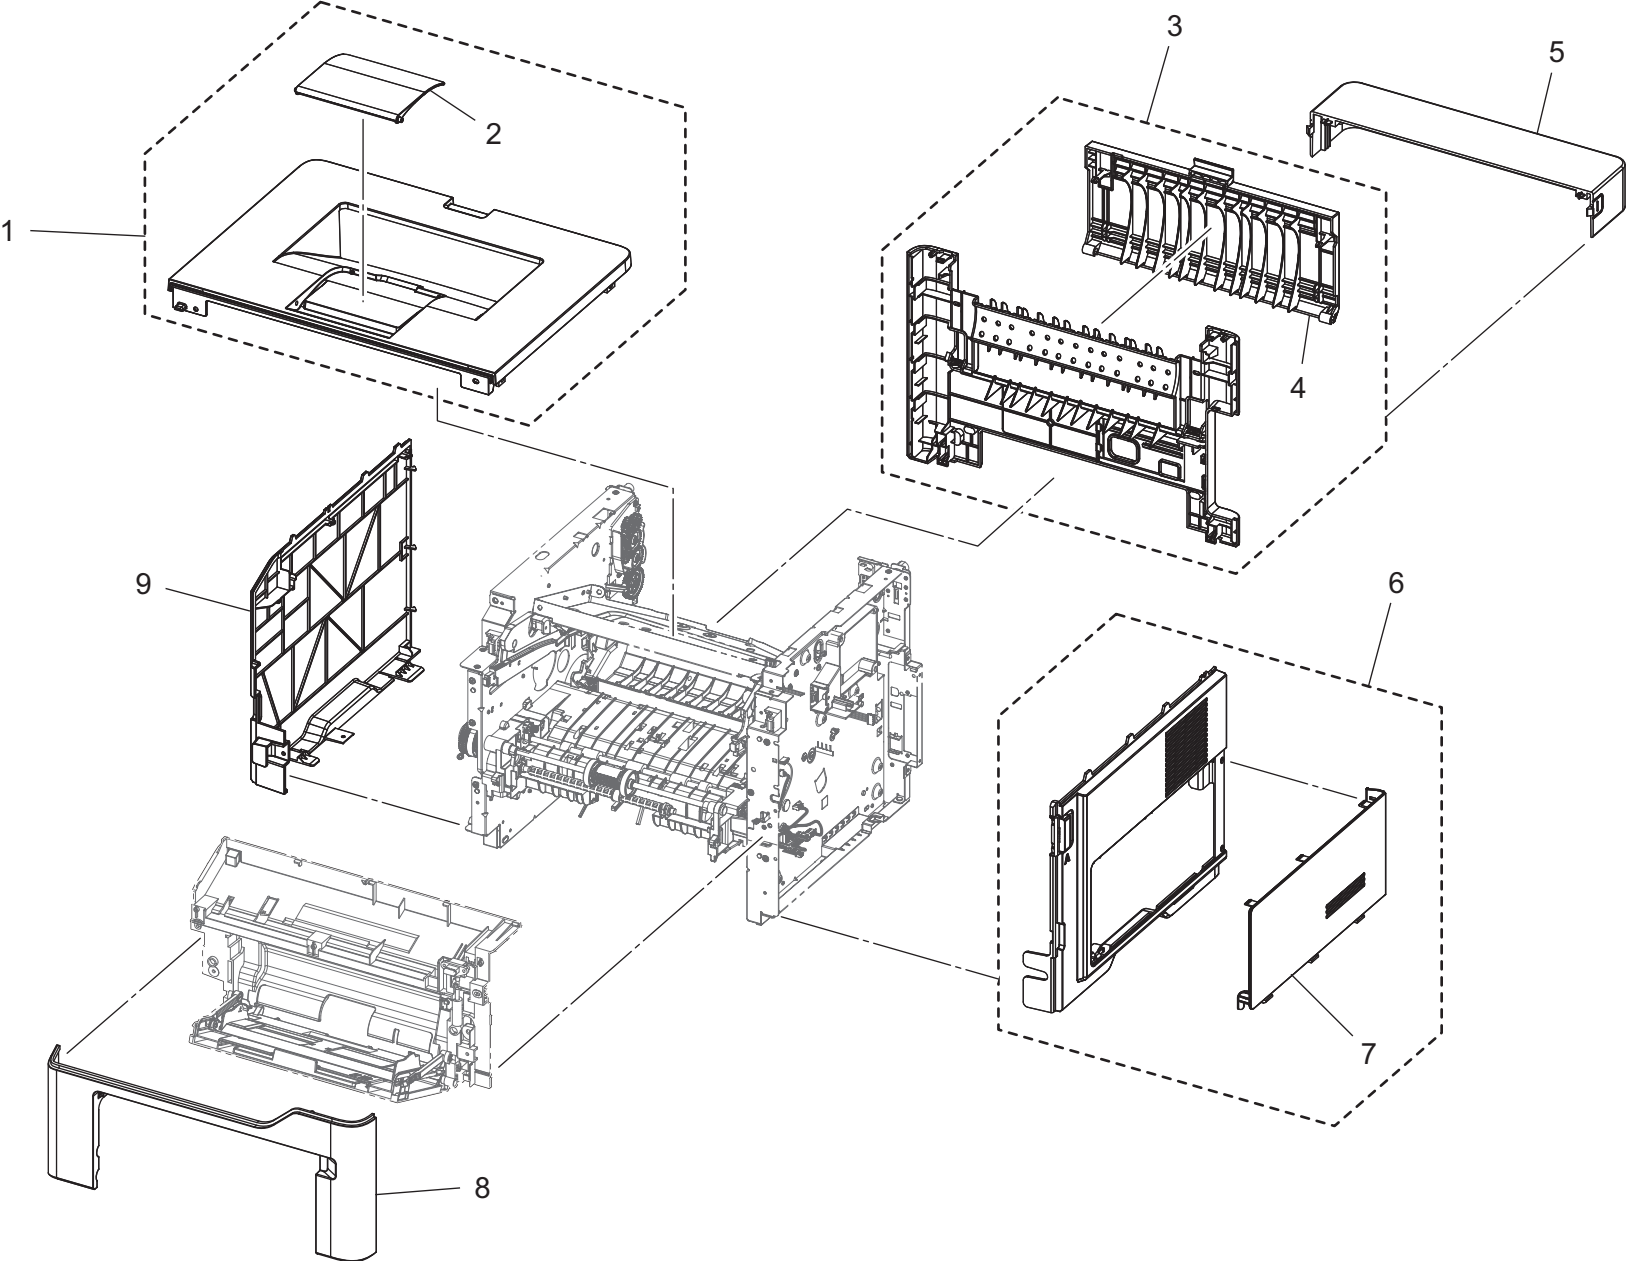


External Parts

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	AAFHPP2K00	Cover/Upper Assy		D	1	
2	AAFHPP1V00	Tray		D	1	
3	AAFHPP2J00	Cover/Rear Assy		D	1	
4	AAFHPP1W00	Door/Rear		D	1	
5	A6WDPP0701	Cover		C	1	
6	AAFHPP2G00	Cover/Right Assy		D	1	
7	AAFHPP2100	Cover		D	1	
8	AAFHPP2F00	Cover*Front		D	1	
9	AAFHPP2H00	Cover/Left		D	1	

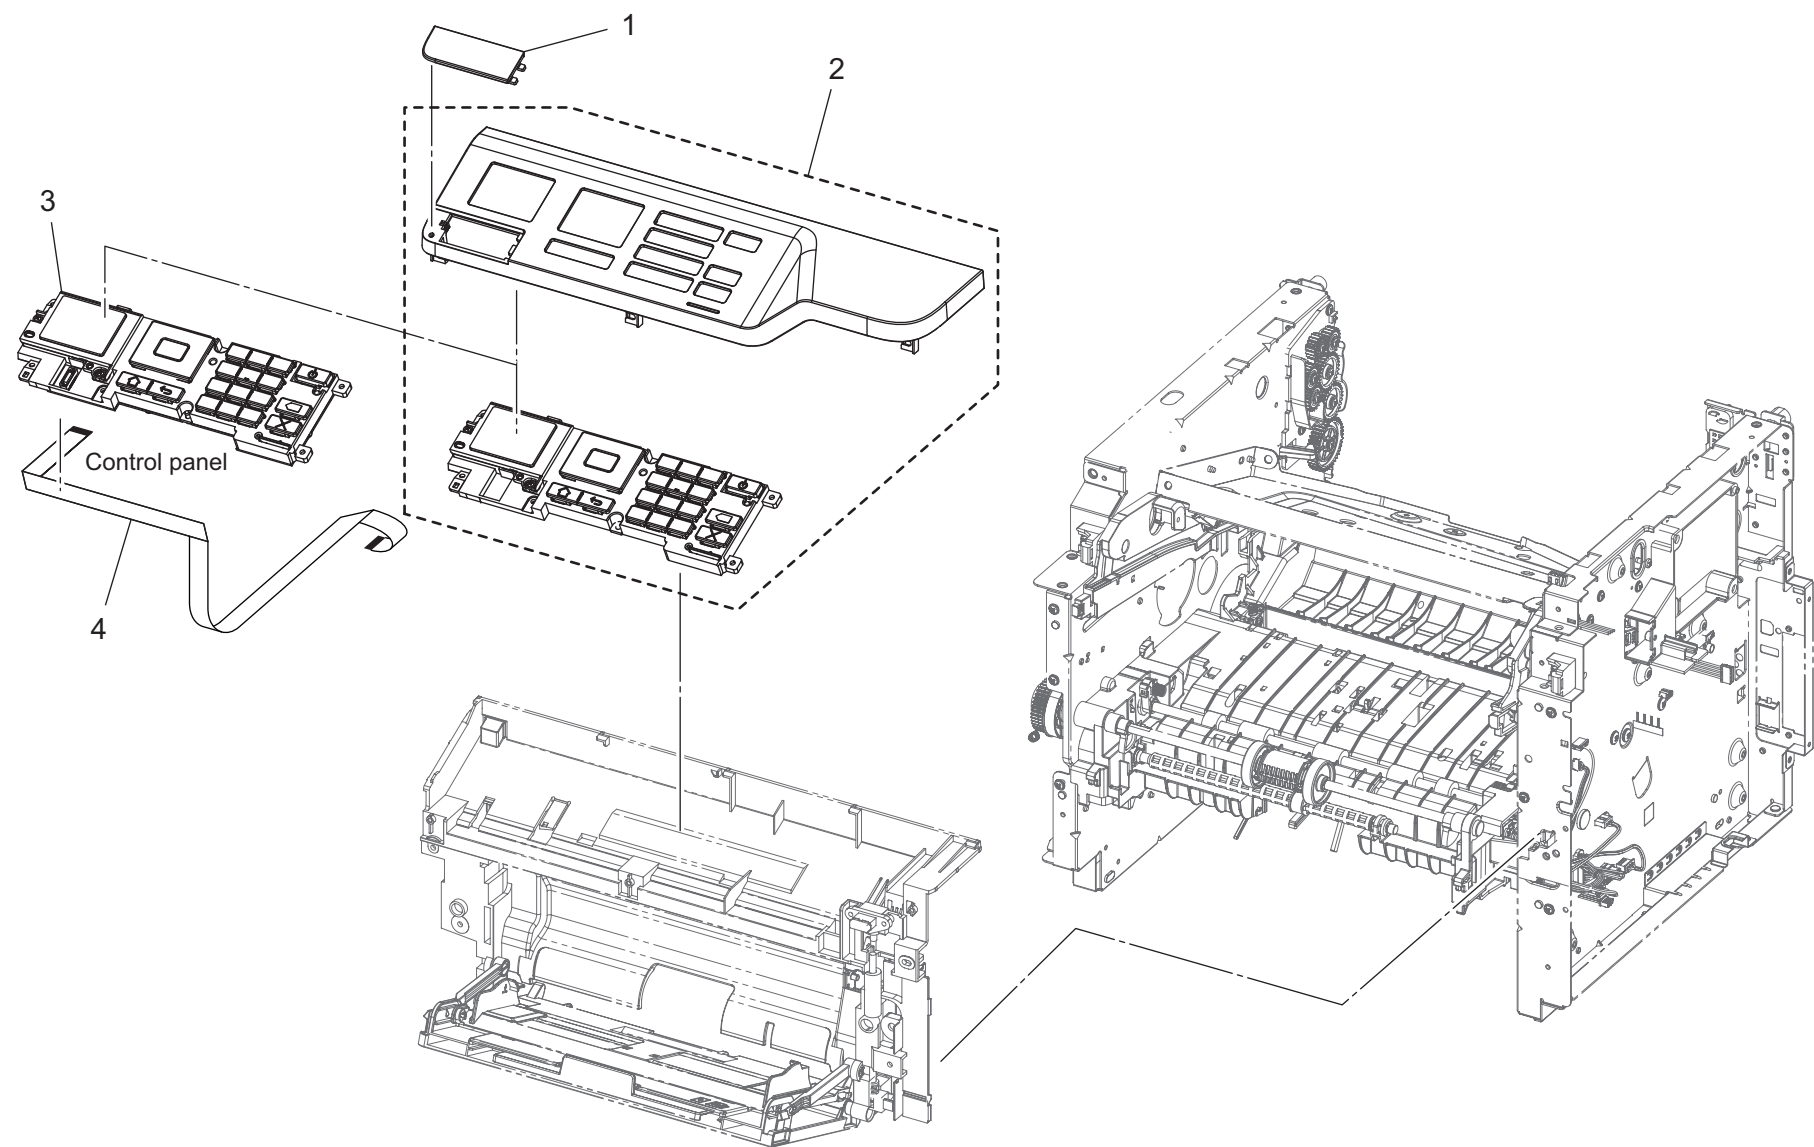 

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	AAFHPP2M00	Cover		D	1	
2	AAFHPP2Q00	Panel Cover/Button Assy		D	1	
3	AAFHPP2R00	PWB assembly/ Control panel		I	1	
4	AAFHPP2S00	Flatcable		D	1	

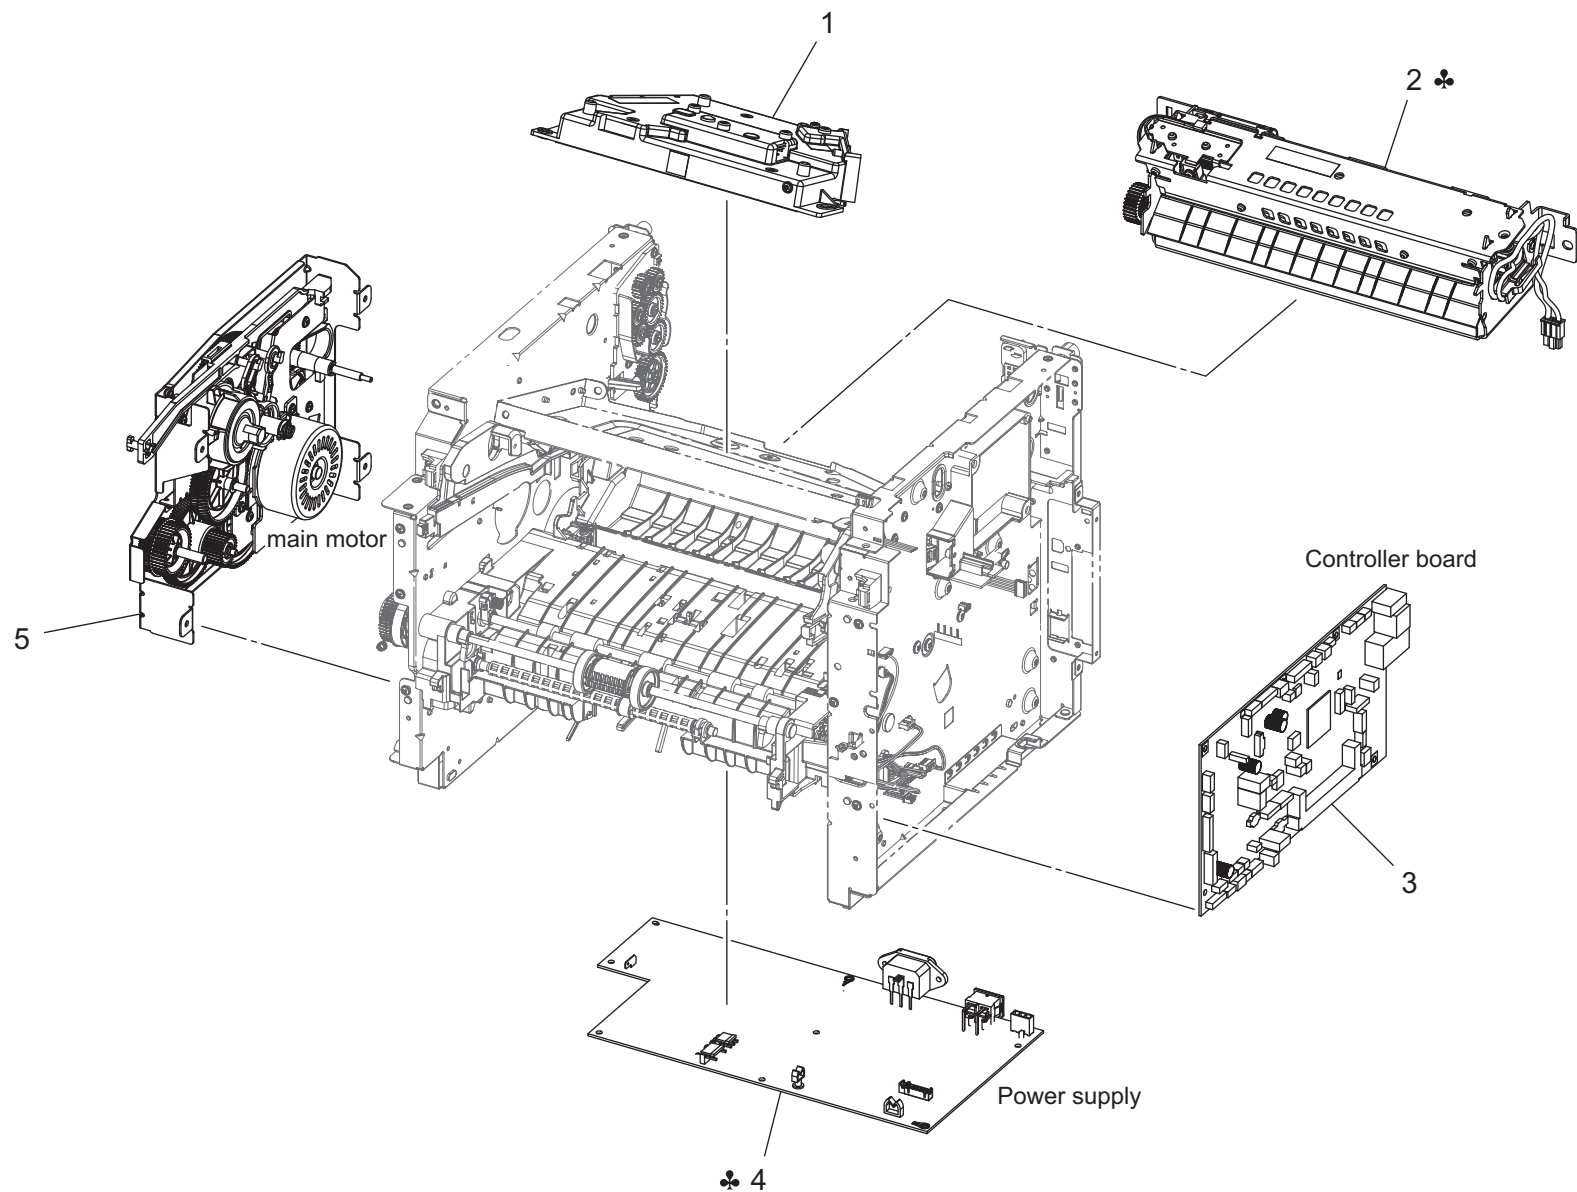 


Electrical Components Section

[illegible]


Electrical Components Section

 P 4

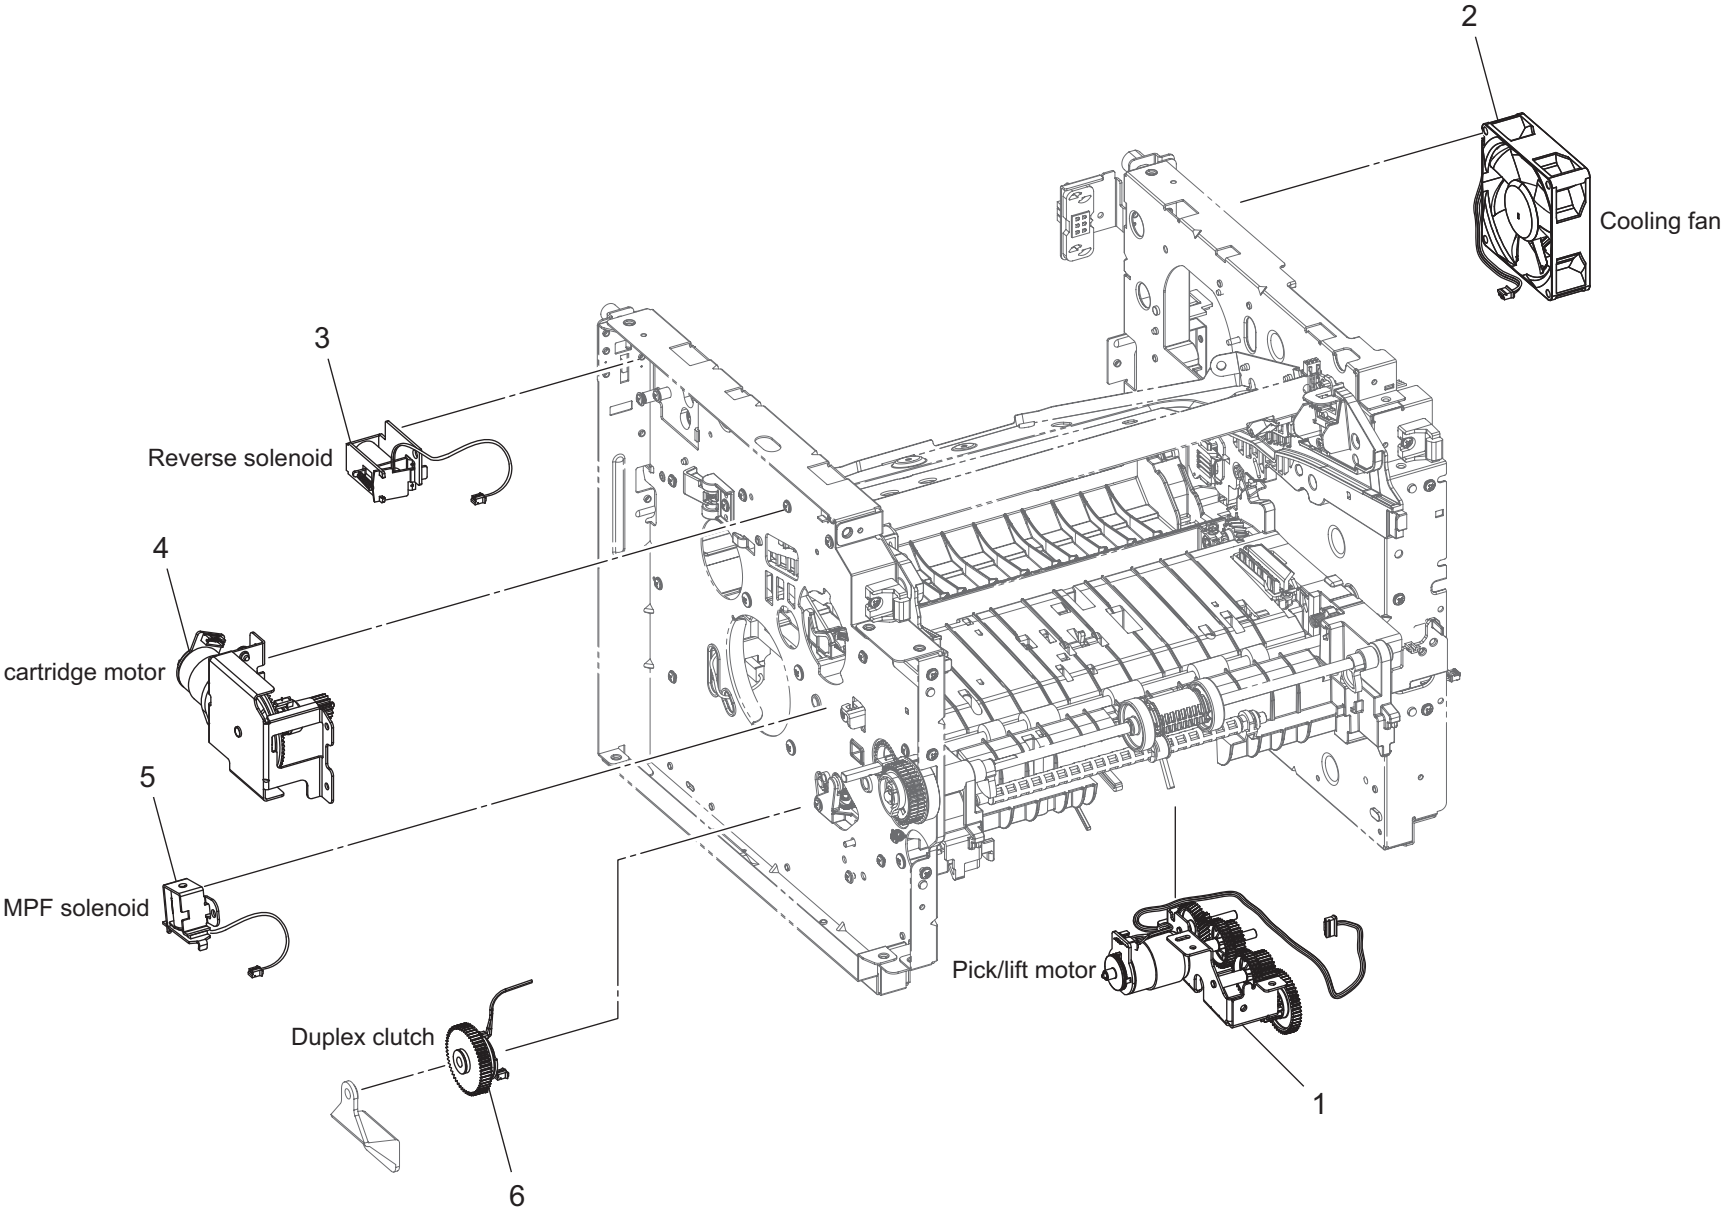


Electrical Components Section

 [illegible]

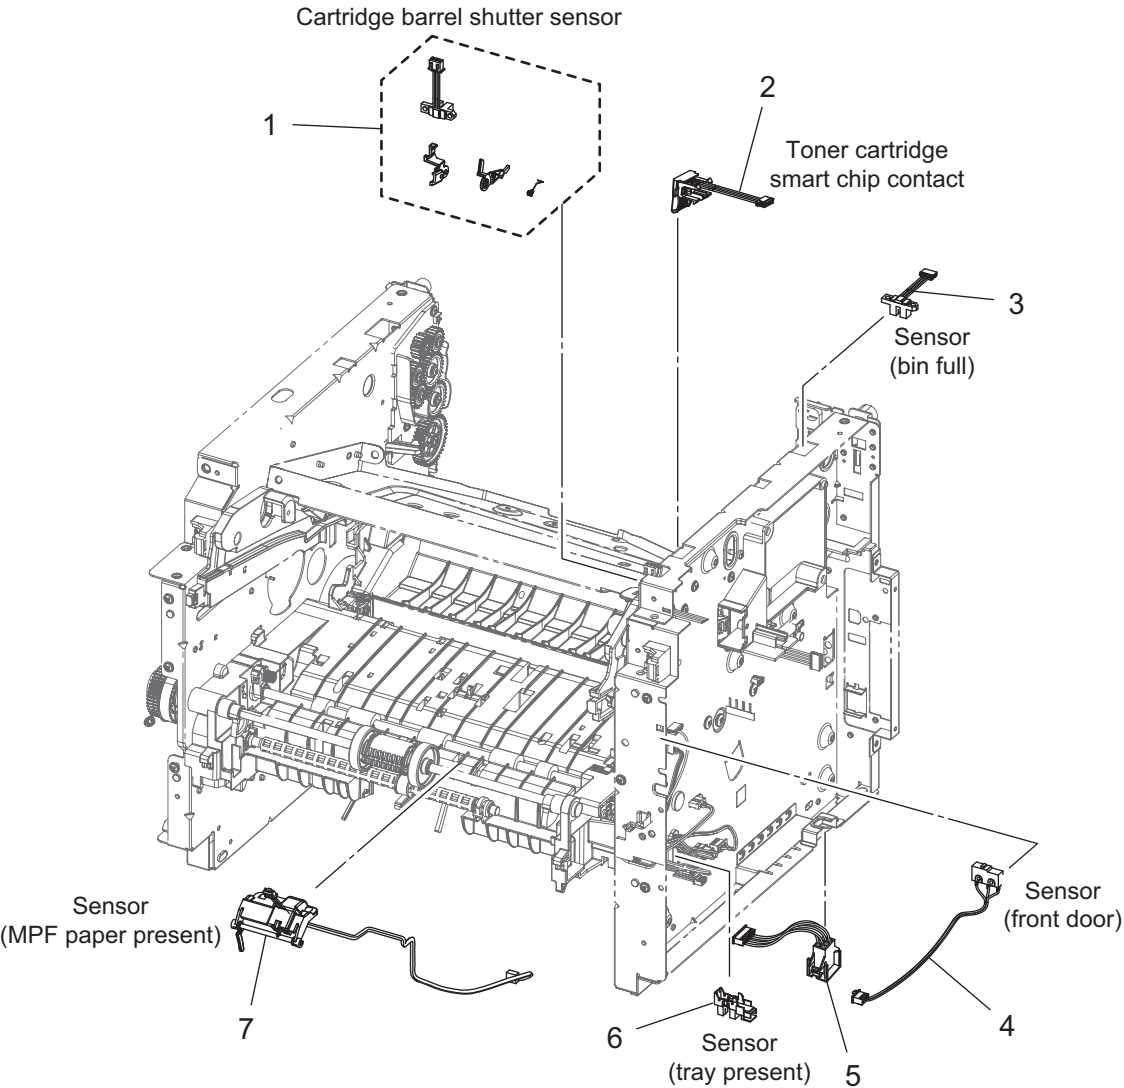


Electrical Components Section

 [illegible]

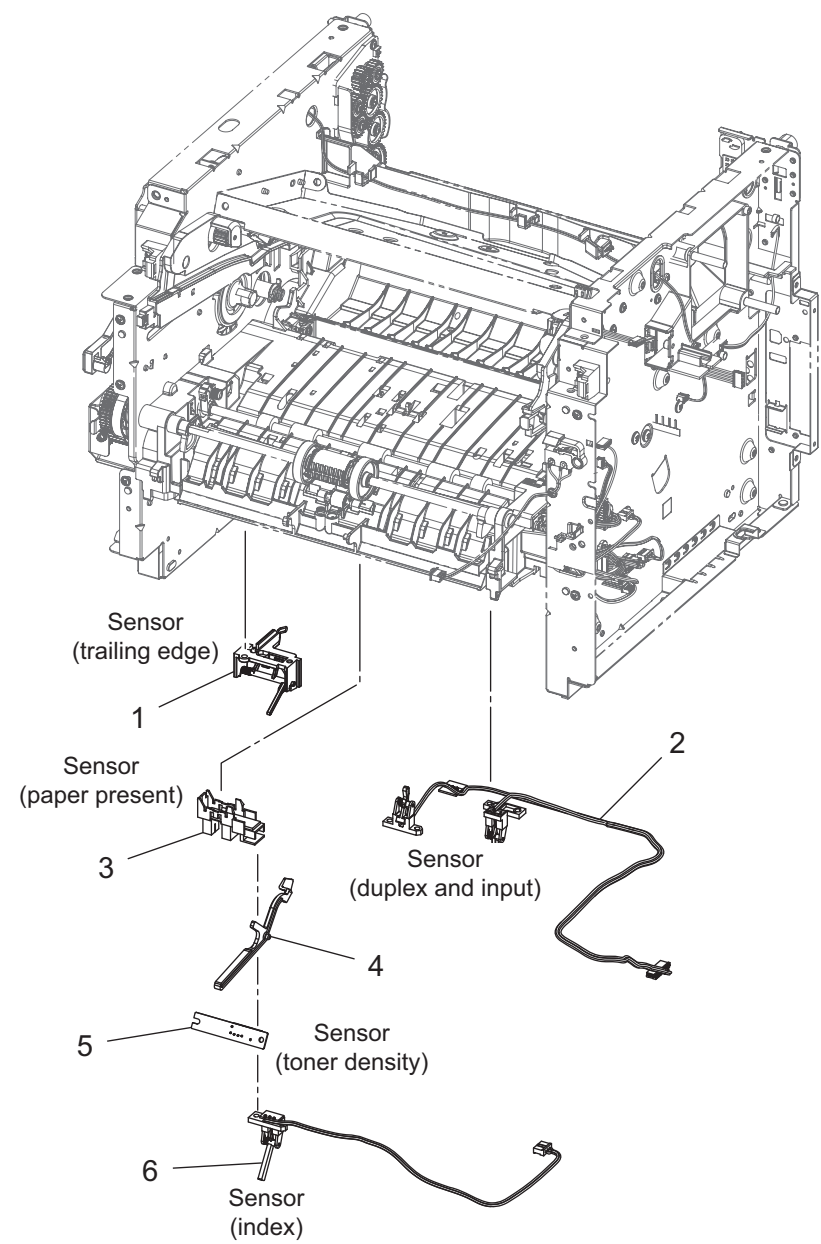


Electrical Components Section

 [illegible]

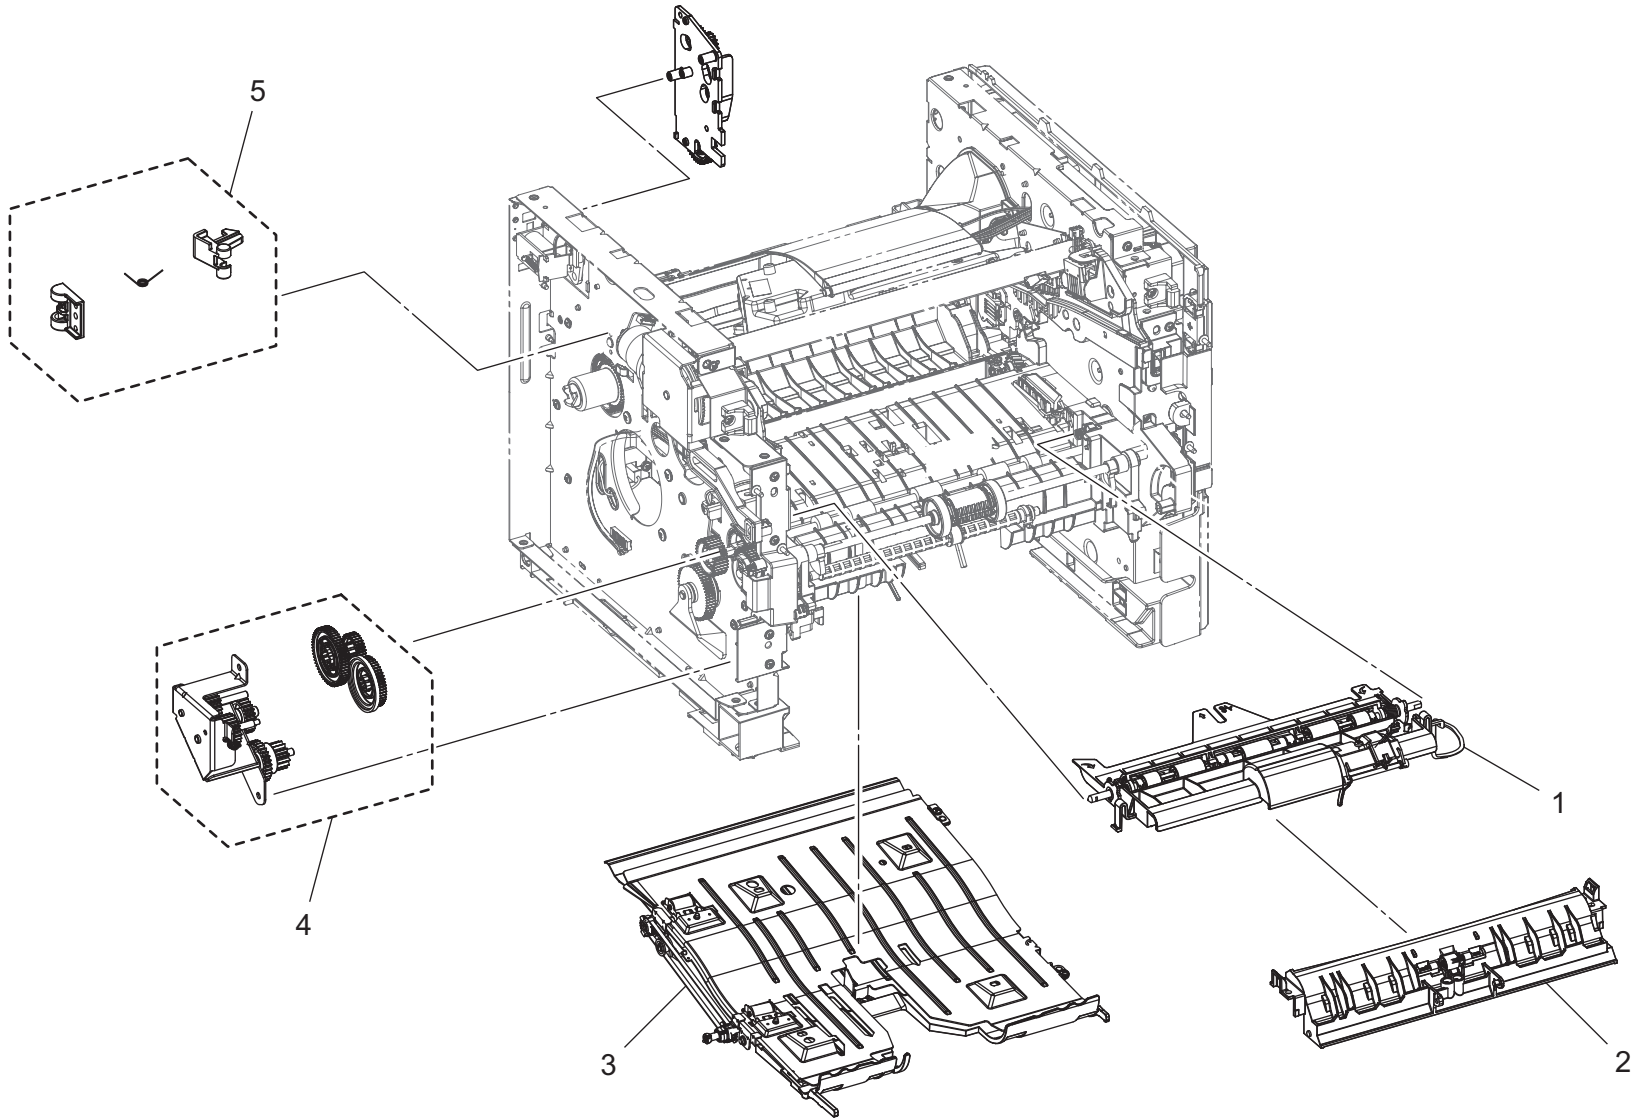


Paper Transport Section

 [illegible]

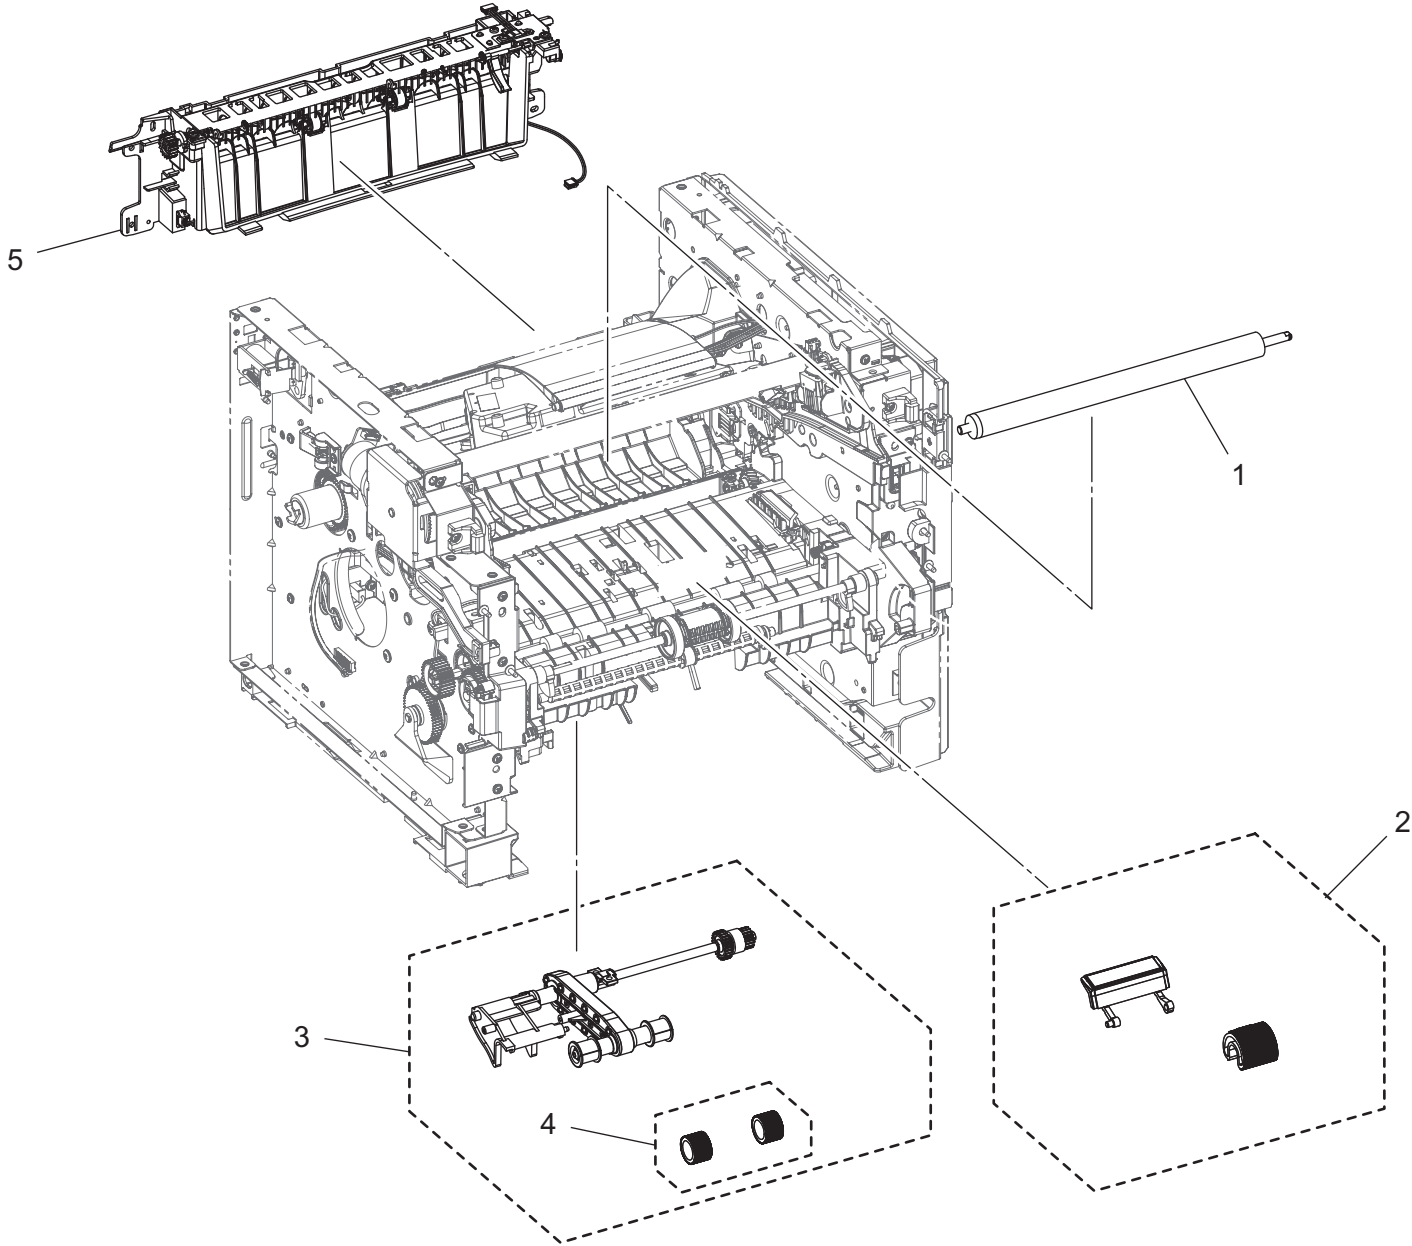


Paper Transport Section

 [illegible]

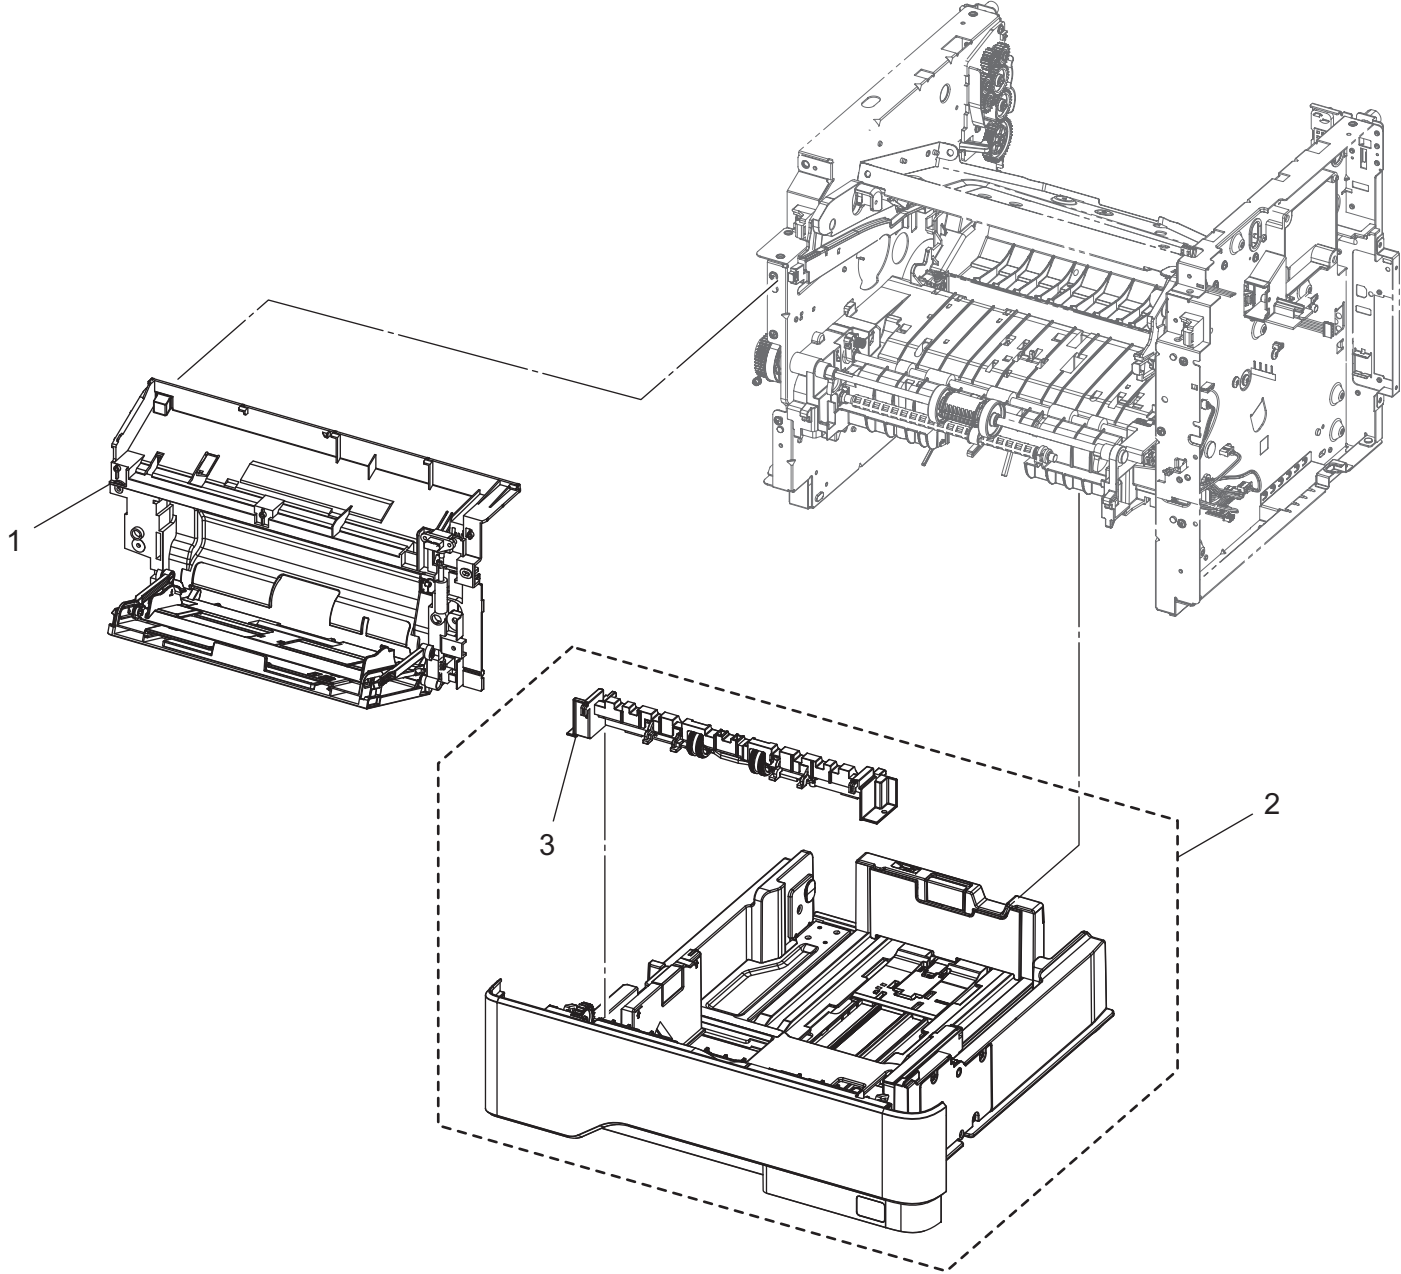

Tray Section

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	AAFHPP1S00	MFP Assy		C	1	
2	AAFHPP2N00	Cassette Assy/550 Sheet		C	1	
3	AA1PPP0G00	Separation Roller Assy		B	1	

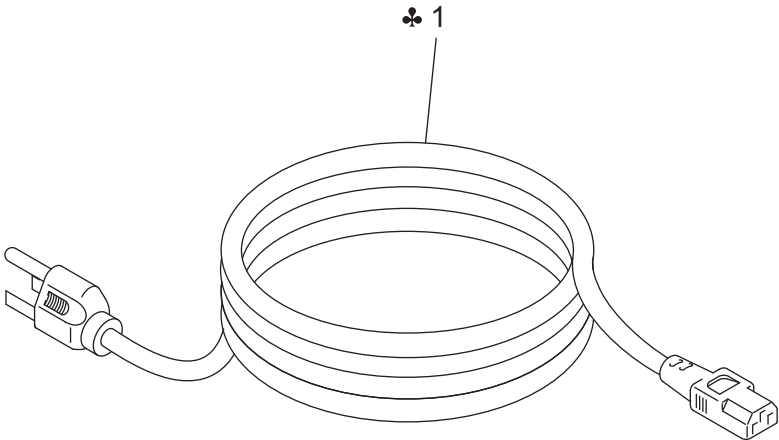 

Accessory Parts

[illegible]

MAINTENANCE LIST

● The items with no Page/Key numbers are not handled as spare parts.

No.	Section	PM Parts Description	Maintenance Cycle (K=1,000)		Parts No.	Destinations	Page/Key	Note
			QTY	Replace				
1	Electrical Components Section	Fusing Unit	1	200K	AAFHPP1300	B,G2	P3-2	
2			1	200K	AAFHPP1400	C,D1,D3,E,F2,G1,I	P3-2	
3	Paper Transport Section	Transfer Roller	1	200K	A63NPP0Y00		P8-1	
4		Paper Feed/Separation Pad Kit	1	200K	AAFHPP1B00		P8-2	
5		Pick tire Set(2 pcs/set)	1	200K	AAFHPP2P00		P8-4	
6	Tray Section	Separation Roller Assy	1	200K	AA1PPP0G00		P9-3	

*: The part names used on this page follow the ones used in the Service Manual and they are occasionally different from those written in other pages.

DESTINATION

Destination No.		Destinations		V	Hz	Model No.
A	A1	JAPAN				
	A2	JAPAN				
B		USA, CANADA		120	60	AAFH011
C		EUROPEAN TYPE		220-240	50/60	AAFH021
D	D1	S.E ASIA TYPE	THAILAND, SRI LANKA, SINGAPORE, MALAYSIA, HONG KONG, PAKISTAN, INDIA, BANGLADESH, INDONESIA	220-240	50/60	AAFH041
	D3	OCEANIA TYPE	AUSTRALIA, NEW ZEALAND	220-240	50/60	AAFH041
E		PHILIPPINES		220-240	50/60	AAFH041
F	F1	SAUDI ARABIA				
	F2	SAUDI ARABIA		220-240	50/60	AAFH041
G	G1	C.S AMERICA		220-240	50/60	AAFH041
	G2	C.S AMERICA		120	60	AAFH011
H		TAIWAN				
I		JORDAN, LEBANON, SYRIA, SOUTH AFRICA, IRAQ, IRAN, N.YEMEN, CAMEROON, UAE, BAHRAIN, OMAN, QATAR, KUWAIT, KENYA, TUNISIA, IVORY COAST, MOROCCO		220-240	50/60	AAFH021 AAFH041
J		CHINA				
K		KOREA				