

TOSHIBA

SERVICE PARTS LIST GM-2090

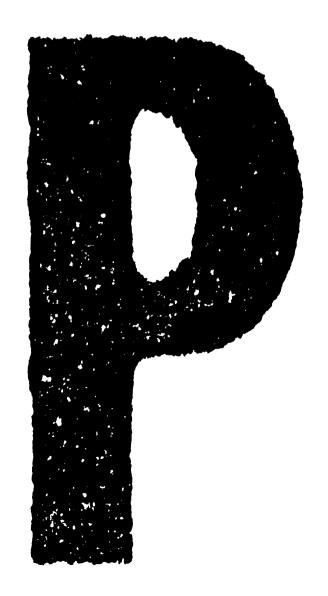

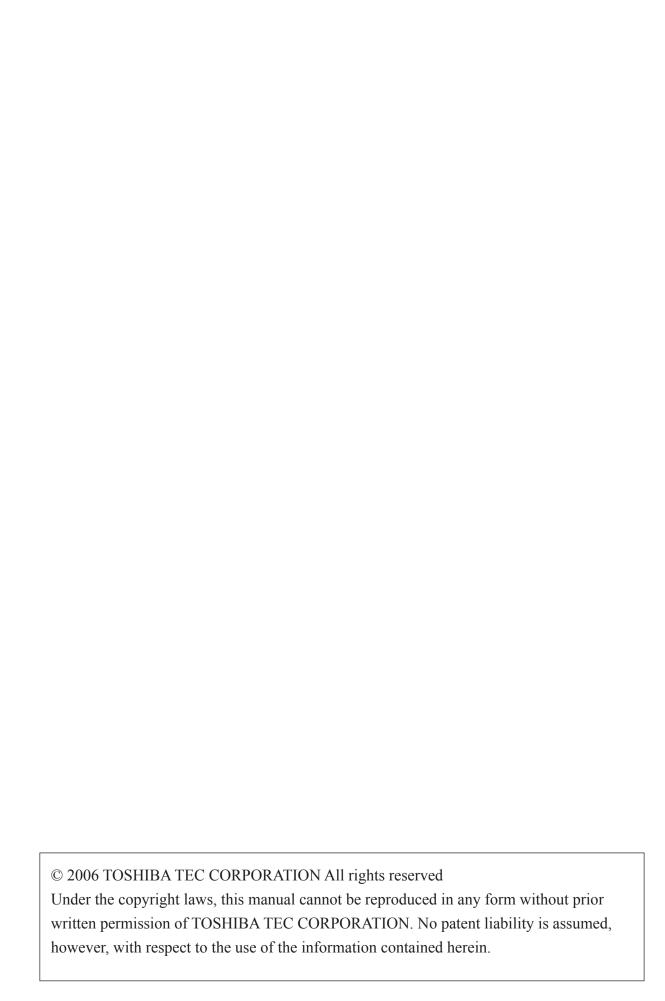


EXPLANATION OF SERVICE-PARTS LIST

1. HOW TO READ THE PARTS LIST

(1) Number of pieces

The number of pieces in the list denotes total pieces used per unit. But the numbers in the list for PACKING MATERIAL and ACCESSORY denote total pieces used per machine.

- (2) One pack of screws in the list includes 50 pieces.
- (3) ABBREVIATED CODES

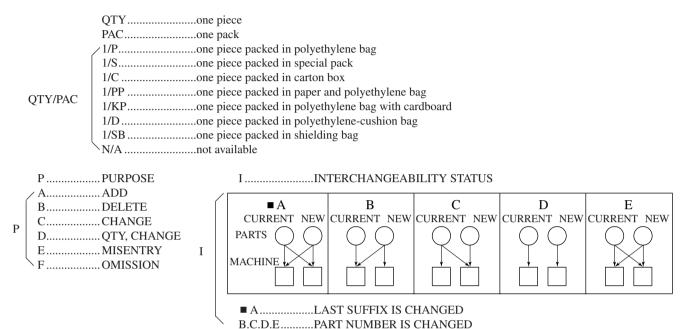

2. HOW TO PLACE ORDER FOR PARTS

(1) The parts handled as service parts are only those with their "Q'TY/PACK" column listed with a quantity other than "N/A***" or "SUPPLY".

Those parts with "N/A***" are listed only for the purpose of showing the mechanical construction, those listed with "SUPPLY" are handled only as a sales item, and therefore both types of parts are not supplied as service parts.

(2) Orders for any parts which form a component of a semi-assembled unit are not acceptable.


Note: All the screws and nuts used are ISO standard.

3. REGION

NAD	.115V
	50/60Hz, NORTH AMERICA, SOUTH AMERICA
TWD	.110/220V
	50/60Hz, TAIWAN
SAD	.127V/60Hz, SAUDI ARABIA
ASD	.220-240V
	50/60Hz, ASIA, SOUTH AMERICA, etc.
ASU	.220-240V
	50/60Hz, ASIA, etc.
AUD	.220-240V
	50/60Hz, AUSTRALIA
MJD	.220-240V
	50/60Hz, EUROPE
CND	.220-240V
	50/60Hz, CHINA
KRD	.220-240V
	50/60Hz, KOREA

CONTENTS

PRINTER/SCANNER UNIT	
PRINTER/SCANNER UNIT	

 

GM-2090		PRINTER/SCANNER U	NIT								Oct 2006
ITEM	PARTS	PARTS NAME	Q'TY /	Q'TY / pack	PIF	BSI	ΤO	Т	FROM	SERIAL	REMARKS C
	NO. B8401215 B2345563 G3325720 B8405625 B8405725 B2341571 B2341572 B2341577		Q'TY	PACK		NO.	TO	T	FROM	SERIAL NO.	

TOSHIBA

TOSHIBA TEC CORPORATION