 


SERVICE PARTS LIST

Copy Connector


TYPE 3260

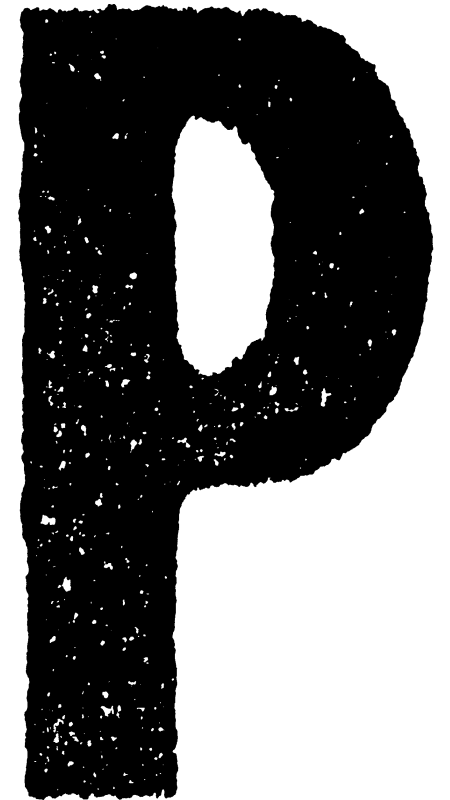

This section instructs you as to the numbers and names of parts on this machine.

1.COPY CONNECTOR (B32811)

 Rev. 03/11/2008

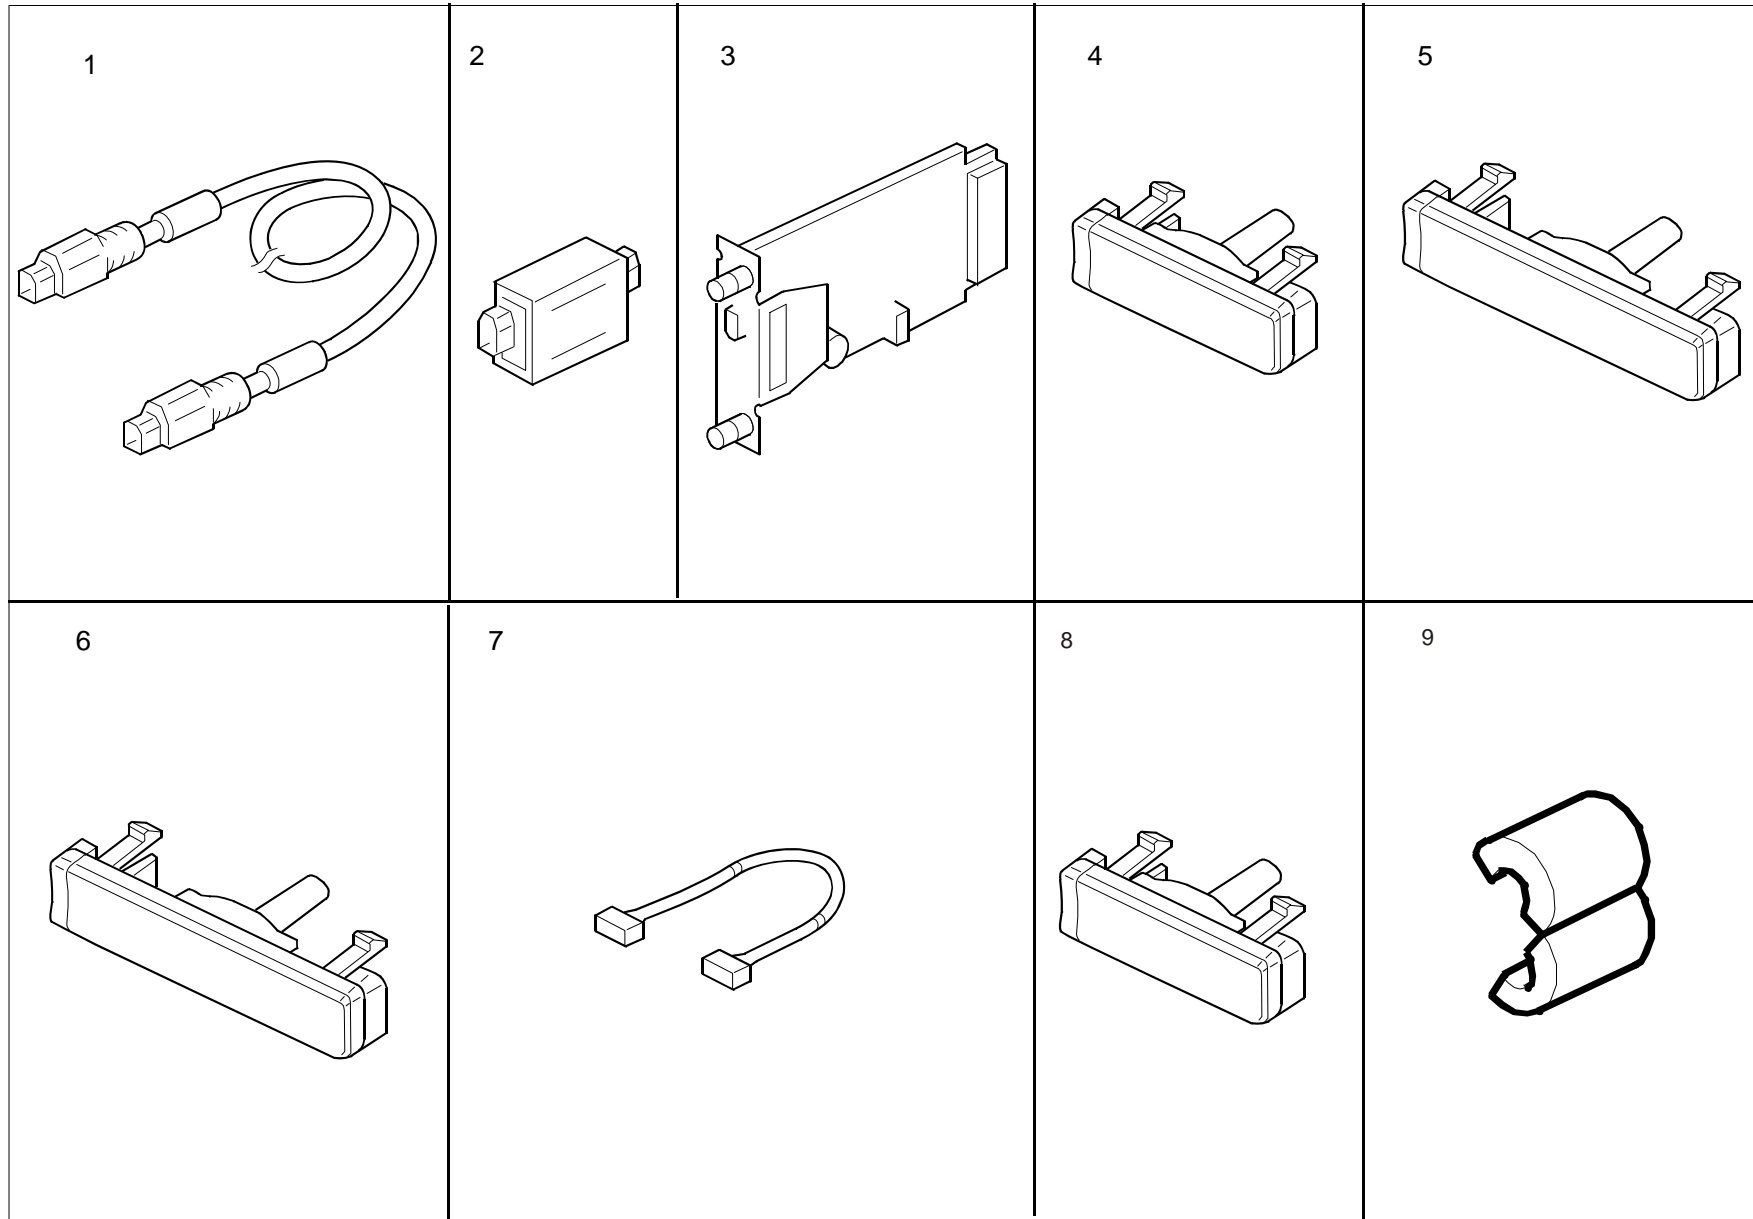

1.COPY CONNECTOR (B32811)

Rev. 03/11/2008

Index No.	Part No.	Description	Q'ty Per Assembly
1	B328 5503	Interface Cable	3
2	B140 5725	HUB:1394:Repeater	2
3	B328 5662	PCB:Coupling:PBF	2
4	B234 1574	Keytop:Other Function:NA	2
4	B234 1580	Keytop:Other Function:EU	2
5	B132 7366	Keytop:Menu:NA	2
5	B132 7368	Keytop:Menu:EU	2
6	B132 7367	Keytop:PRN-Menu	2
6	B132 7369	Keytop:PRN-Menu:EU	2
7	B328 5500	Cable:Power:Repeater	2
8	B223 1533	Keytop: Function: NA	2
8	B223 1539	Keytop: Function: EU	2
9	1607 1715	Ferrite Core 0 RFC – 5	2

Index No.	Part No.	Description	Q'ty Per Assembly

**COPY CONNECTOR TYPE 3260
B328-11
PARTS INDEX**

This section instructs you as to the numbers and names of parts on this machine.

Parts Index

Part No.	Description	Page and Index No.
B328 5500	Cable:Power:Repeater	3 - 7
B328 5503	Interface Cable	3 - 1
B328 5662	PCB:Coupling:PBF	3 - 3

Part No.	Description	Page and Index No.
B132 7366	Keytop:Menu:NA	3 - 5
B132 7367	Keytop:PRN-Menu	3 - 6
B132 7368	Keytop:Menu:EU	3 - 5
B132 7369	Keytop:PRN-Menu:EU	3 - 6
B140 5725	HUB:1394:Repeater	3 - 2
B223 1533	Keytop: Function: NA	3 - 8
B223 1539	Keytop: Function: EU	3 - 8
B234 1574	Keytop:Other Function:NA	3 - 4
B234 1580	Keytop:Other Function:EU	3 - 4
1607 1715	Ferrite Core 0 RFC – 5	3 - 9