


e-STUDIO5530c PRO


e-STUDIO7030c PRO

Operating Instructions

Troubleshooting

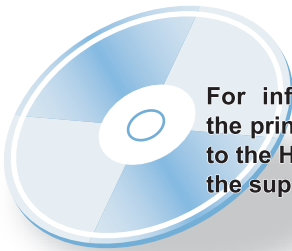

For information not in the printed manual, refer to the HTML/PDF files on the supplied CD-ROM.

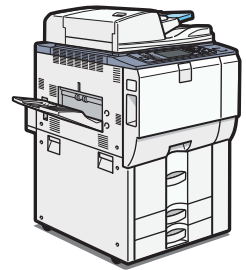

-
- 1 When the Machine Does Not Operate As Wanted
 - 2 Troubleshooting When Using the Copy/Document Server Function
 - 3 Troubleshooting When Using the Facsimile Function
 - 4 Troubleshooting When Using the Printer Function
 - 5 Troubleshooting When Using the Scanner Function
 - 6 Adding Paper, Toner and Staples
 - 7 Clearing Misfeeds
 - 8 Remarks

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see "Machine Types", About This Machine.)

- Type 1: e-STUDIO5530C PRO
- Type 2: e-STUDIO7030C PRO

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Power Source

- Type 1: 120V, 60Hz, 16A or more
- Type 2: 208-240V, 60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see p.171 "Power Connection".

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

★ Important

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables. Also refer to this manual for explanations on where to put the machine and how to maintain it.

Copy/ Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

PostScript 3 Supplement

Explains how to set up and use PostScript 3.

Information

Contains general notes on the machine, and information about the trademarks of product names used in the manuals.

Other manuals

- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide

↓ Note

- Manuals provided are specific to machine types.
- The following software product is referred to using a general name:

Product name	General name
DeskTopBinder Lite	DeskTopBinder

- The Help files for Web Image Monitor are stored on the supplied CD-ROM. Access them from the CD-ROM. You cannot download the Help files from our Web site.

TABLE OF CONTENTS

Manuals for This Machine.....	1
How to Read This Manual.....	7
Symbols.....	7
Names of Major Options.....	7

1. When the Machine Does Not Operate As Wanted

Indicators.....	9
Panel Tone.....	10
Checking Machine Status and Settings.....	11
Maintenance.....	14
Adjusting the Color Registration.....	14
Auto Color Calibration.....	15
When an Indicator to the Right of a Function Key Is Lit.....	19
When You Have Problems Operating the Machine.....	21
When a Job Is Not Performed.....	25

2. Troubleshooting When Using the Copy/Document Server Function

Messages Displayed When Using the Copy/Document Server Function.....	29
When You Cannot Make Clear Copies.....	33
When You Cannot Make Copies As Wanted.....	36
Display during Connect Copy.....	42
If Connect Copy Is Canceled.....	43
If You Cannot Exit from Connect Copy.....	44
When Memory Is Full.....	44

3. Troubleshooting When Using the Facsimile Function

Adjusting the Volume.....	47
Messages Displayed When Using the Facsimile Function.....	49
When You Cannot Send or Receive Fax Messages As Wanted.....	59
When Memory Is Full.....	64
If an Error Report Is Printed.....	65
Turning Off the Main Power / In the Event of Power Failure.....	66
When an Error Occurs Using Internet Fax.....	67
Error Mail Notification.....	67
Error Report (E-mail).....	67
Server-Generated Error E-mail.....	67

4. Troubleshooting When Using the Printer Function

Messages Displayed When Installing the Printer Driver.....	69
Windows 2000.....	69
Windows XP Professional or Windows Server 2003 /2003 R2.....	69
Windows XP Home Edition.....	70
Windows Vista.....	70
Windows Server 2008.....	71
If USB Connection Fails.....	72
Messages Displayed When Using the Printer Function.....	73
Status Messages.....	73
Messages Displayed on the Control Panel When Using the Printer Function.....	73
Messages Printed on the Error Logs or Reports.....	74
When You Cannot Print.....	83
When the Data In Indicator Does Not Light Up or Flash.....	84
Other Printing Problems.....	86

5. Troubleshooting When Using the Scanner Function

When Scanning Is Not Done As Expected.....	93
When You Cannot Send Scanned Files.....	95
When Stored Files Cannot Be Accessed.....	95
When You Cannot Browse the Network to Send a Scan File.....	95
When the TWAIN Driver Cannot Be Started.....	95
When Stored Files Cannot Be Edited.....	96
When S/MIME Cannot Be Used.....	96
Operations Are Not Possible When Messages Are Displayed.....	96
Messages Displayed When Using the Scanner Function.....	98
Messages Displayed on the Control Panel When Using the Scanner Function.....	98
Messages Displayed on the Client Computer.....	104

6. Adding Paper, Toner and Staples

Loading Paper.....	109
Loading Paper into Tray 1 (Tandem Tray).....	109
Loading Paper into the A3/11 × 17 Tray Unit.....	111
Loading Paper into Tray 2 and 3.....	111
Loading Paper into the Large Capacity Tray.....	112

Loading Paper into the Wide Large Capacity Tray.....	114
Loading Paper into the Interposer.....	114
Loading Paper into the Twin Interposer.....	116
Orientation-Fixed Paper or Two-Sided Paper.....	117
Changing the Paper Size.....	119
Changing the Paper Size in Tray 2 and 3.....	119
Changing the Paper Size in the Wide Large Capacity Tray.....	124
Changing to a Size That Is Not Automatically Detected.....	128
Adding Toner.....	130
Replacing Toner.....	131
Sending Faxes or Scanned Documents When Toner Has Run Out.....	132
Adding Staples.....	134
Finisher SR4010.....	134
Finisher SR4020.....	135
Finisher SR4020 (Saddle Stitch).....	135
Finisher SR5000.....	136

7. Clearing Misfeeds

Removing Jammed Paper.....	139
Locating Jammed Paper.....	139
Removing Jammed Paper.....	141
When Z-folded Paper Is Not Properly Aligned.....	159
Removing Jammed Staples.....	160
Finisher SR4010.....	160
Finisher SR4020.....	161
Finisher SR4020 (Saddle Stitch).....	162
Finisher SR5000.....	163
Removing Punch Waste.....	165
Finisher SR4020.....	165
Finisher SR5000.....	166

8. Remarks

Where to Put Your Machine.....	169
Machine Environment.....	169
Power Connection.....	171

Maintaining Your Machine.....	173
Cleaning the Exposure Glass.....	173
Cleaning the Auto Document Feeder.....	173
INDEX	175

How to Read This Manual

Symbols

This manual uses the following symbols:

WARNING

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

CAUTION

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

[]

Indicates the names of keys on the machine's control panel.

Names of Major Options

Major options of this machine are referred to as follows in this manual:

- Auto Document Feeder → ADF
- Large Capacity Tray → LCT











1. When the Machine Does Not Operate As Wanted

This chapter describes basic troubleshooting procedures that are applicable to all functions of this machine.

Indicators

This section describes the indicators displayed when the machine requires the user to remove misfed paper, to add paper or to perform other procedures.

Indicator	Status
 : Misfeed indicator	Appears when a misfeed occurs. See p.139 "Removing Jammed Paper".
 : Load Paper indicator	Appears when paper runs out. See p.109 "Loading Paper".
 : Add Toner indicator	Appears when toner runs out. See p.130 "Adding Toner".
 : Add Staple indicator	Appears when staples run out. See p.134 "Adding Staples".
 : Waste Toner Full indicator	Appears when the waste toner bottle is full. Contact your sales or service representative.
 : Empty Hole Punch Receptacle indicator	Appears when the hole punch receptacle is full. See p.165 "Removing Punch Waste".
 : Service Call indicator	Appears when the machine is malfunctioning or requires maintenance.
 : Open Cover indicator	Appears when the front cover, etc., is open.

Panel Tone

The following table describes the meaning of the various beep patterns that the machine produces to alert users about left originals and other machine conditions.

Beep pattern	Meaning	Cause
Single short beep.	Panel/screen input accepted.	A control panel or screen key was pressed.
Short, then long beep.	Panel/screen input rejected.	An invalid key was pressed on the control panel or screen, or the entered password was incorrect.
Single long beep.	Job completed successfully.	A Copier/Document Server Features job has finished.
Two long beeps.	Machine has warmed up.	After cooling or being switched on, the machine has fully warmed up and is ready for use.
Five long beeps.	Soft alert.	The initial screen returns when the machine goes into energy-saving mode and when simplified display is canceled.
Five long beeps repeated four times.	Soft alert.	An original has been left on the exposure glass or paper is empty.
Five short beeps repeated five times.	Strong alert.	The machine requires user attention because paper has jammed, the toner needs replenishing, or other problems have occurred.

↓ Note

- Users cannot mute the machine's beep alerts. When the machine beeps to alert users of a paper jam or toner request, if the machine's covers are opened and closed repeatedly within a short space of time, the beep alert might continue, even after normal status has resumed.
- You can select to enable or disable beep alerts. For details about Panel key Sound, see "System Settings", General Settings Guide.

Checking Machine Status and Settings

You can check the machine's system status.

Maintenance Info

You can check the following items under [Maintenance Info]:

- [Remaining Toner]
Displays the amount of remaining toner.
- [No Staples]
Displays whether there are staples remaining or not.
- [Punch Receptacle Full]
Displays whether the hole punch receptacle is full.
- [Paper Tray]
Displays the paper type and size loaded in the paper tray.
- [Output Tray Full]
Displays whether the output tray is overloaded.
- [Original Misfeed]
Displays state of and solutions for original misfeeds.
- [Paper Misfeed]
Displays state of and solutions for paper jams.
- [Cover Open]
Indicates whether front cover, duplex unit, etc., is open.

Data Storage

You can check the following items under [Data Storage]:

- [HDD Remaining Memory]
Displays the amount of available hard disk drive memory.
- [HDD File(s)]
Displays the total number of jobs stored in the hard disk drive.
- [Print Job(s)]
Displays the number of jobs for "Hold Print", "Stored Print", "Locked Print", and "Sample Print".
- [Fax TX / RX File(s)]
Displays the number of "Transmission Standby File(s)", "Memory Lock File(s)", "RX Print Standby File(s)", and other files stored in the hard disk drive.
- [Memory Erase Status]

Displays the state of the memory data.

Machine Address Info

You can check the following items under [Machine Address Info]:


- [Fax No.]
Displays the machine's fax number.
- [H.323 Own Fax No.]
Displays the machine's alias telephone number.
- [SIP User Name]
Displays the machine's SIP user name.
- [Fax E-mail Account]
Displays the machine's fax e-mail account.
- [Machine IPv4 Address]
Displays the machine's IPv4 address.
- [Machine IPv6 Address]
Displays the machine's IPv6 address.

Inquiry


You can check the following items under [Inquiry]:

- [Machine Repairs]
Displays the machine number and contact number that are required for service.
- [Sales Representative]
Displays the sales representative's telephone number.
- [Supply Order]
Displays the contact number for placing supply orders.
- [Supply Details]
Displays the name of toner, staples, etc., used on the machine.


1. On the control panel, press [System Status].

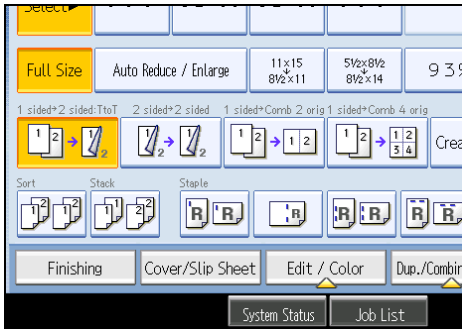

2. Press each tab and check the contents.

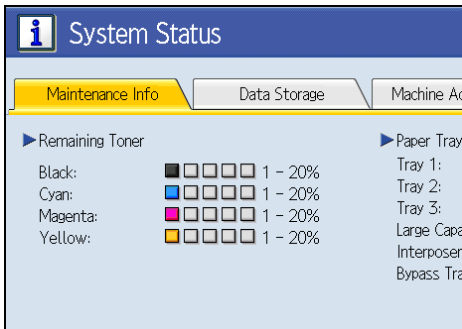

3. After checking the information, press [Exit]. The previous screen returns.

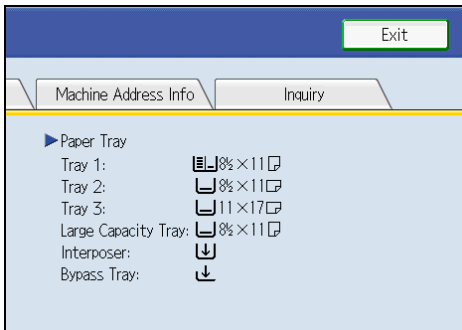

Note

- [No Staples], [Punch Receptacle Full], [Output Tray Full], [Original Misfeed], [Paper Misfeed], and [Cover Open] appear on the [Maintenance Info] tab only when these errors occur.
- For details about how to locate and remove misfeeds, see "Removing Jammed Paper".

Reference

- p.139 "Removing Jammed Paper"

Maintenance

This section describes how to adjust the color registration and gradation by specifying the settings in [Maintenance].


Adjusting the Color Registration

When the machine is moved, the Fusing Unit is replaced, or after printing repeatedly for some time, registration shifting might occur. By performing color registration adjustment, you can maintain optimum print results.

Color registration


If the color documents show registration shifting, perform automatic color registration.

1. Press the [User Tools / Counter] key.

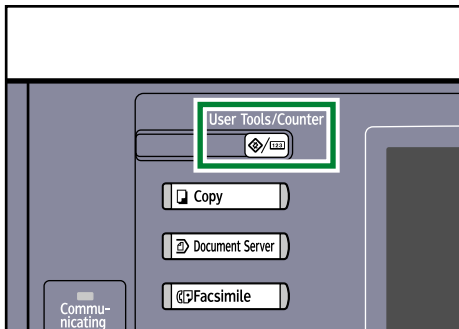

BAT183S

2. Press [Maintenance].

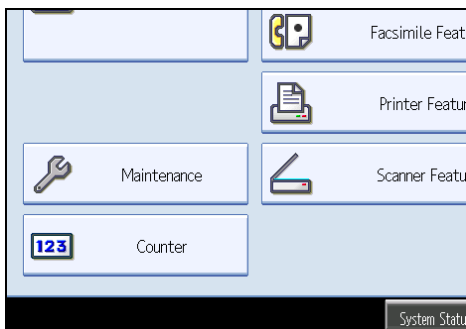

3. Press [Color Registration].

4. Press [OK].

Auto color registration takes about fifteen to thirty seconds. When it is completed, the display returns to the color registration menu.

5. When you have made all the settings, press the [User Tools / Counter] key.

The initial display is shown.


1

Auto Color Calibration

If a certain color is strong or the color of the copy differs from the original, adjust the yellow, magenta, cyan and black balance.


If "Add Toner" is shown on the display panel, the test pattern cannot be printed.

1. Press the [User Tools / Counter] key.

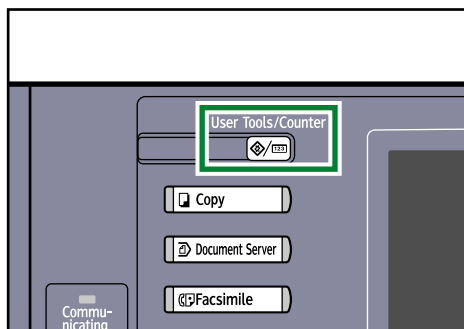

BAT183S


2. Press [Maintenance].

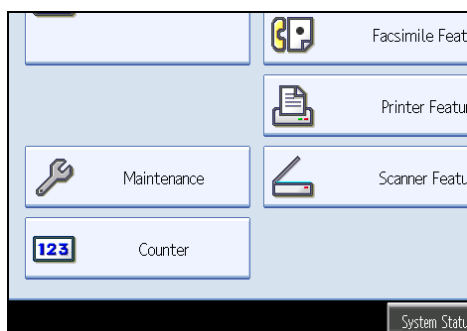

3. Press [Auto Color Calibration].


4. Press [Start].

When performing the auto color calibration from the copy function, press [Start] under Copier Function. When performing from the printer function, press [Start] under Printer Function.

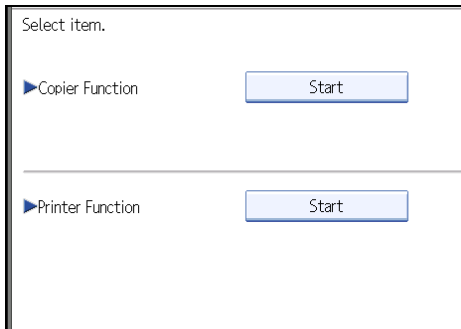


5. Press [Start Printing] and a test pattern will be printed.

- Copier Function

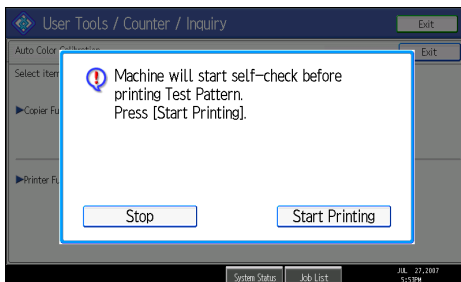

- Printer Function

When performing the auto color calibration from the printer function, select test patterns from [600 × 600 dpi], [1800 × 600 dpi] and [9000 × 600 dpi] and then press [Start Printing].

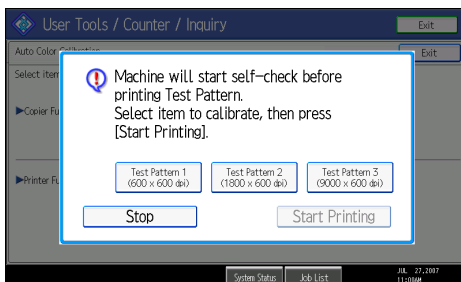


6. Place the test pattern on the exposure glass and press [Start Scanning].

The image will be corrected after "Scanning...Please wait." disappears.

Note

- The test pattern will not be read if it is set in the ADF.
- The test pattern will be printed on an A4, 8 1/2 × 11 size page. If A4 is not available, A3 or B4 JIS (Japanese Industrial Standard) will be used. Make sure to check the paper set in the paper tray.
- Set the test pattern in the following way:

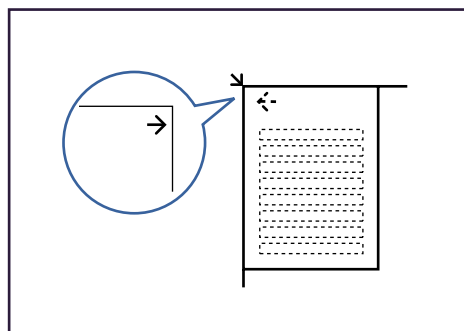

BAZ030S


- Make sure to set the test pattern on the exposure glass, and then 2 or 3 white sheets, same size as the test pattern, above the test pattern.

Returning to the previous setting

“Previous Setting” means to return to the previous status before any changes.


1. Press [Previous Setting].

When returning the auto color calibration of the copy function, press [Previous Setting] of the Copier Function. If returning the auto color calibration of the printer function, press [Previous Setting] of the Printer Function.

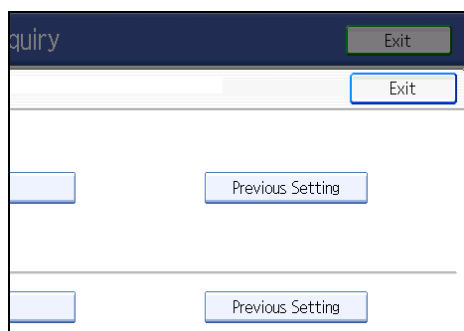

2. Press [Yes].


- Copier Function

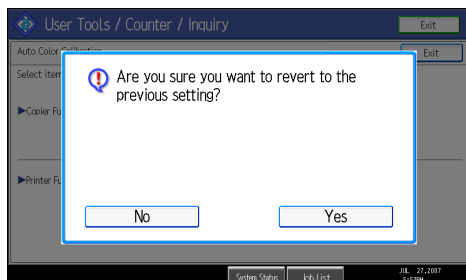

The settings return to the previous contents.

- Printer Function

When returning the auto color calibration from the printer function, select test patterns from [600 × 600 dpi], [1800 × 600 dpi] and [9000 × 600 dpi], and then press [Yes].

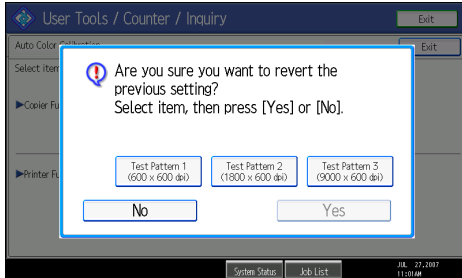


The settings return to the previous contents.

When an Indicator to the Right of a Function Key Is Lit

1

When an indicator to the right of a function key lights up, press the corresponding function key. Then, follow the instructions displayed on the control panel.

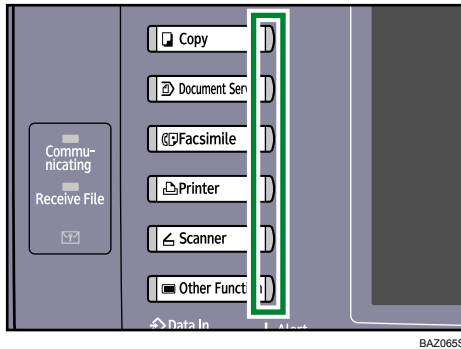

If an error occurs in the function you are using, check the message that appears on the control panel, and then refer to "Messages Displayed" for the relevant function.

Following describe the main reasons the indicator lights up.

Problem	Cause	Solution
Documents and reports do not print out.	The paper output tray is full.	Remove the prints from the tray.
Documents and reports do not print out.	There is no paper left.	Load paper. See p.109 "Loading Paper".
An error has occurred.	The function whose indicator is lit is defective.	Record the code number shown on the display and contact your service representative. See "Messages Displayed" of each chapter. You can use other functions normally.

1

Problem	Cause	Solution
The machine is unable to connect to the network.	A network error has occurred.	<ul style="list-style-type: none">• Check the displayed message and take an appropriate action. See “Messages Displayed” of each chapter.• Check that the machine is correctly connected to the network, and that the machine is correctly set. For details about how to connect the network, see “Connecting the Machine”, General Settings Guide.• Contact the network administrator.• If the indicator is still lit even after trying to solve the problem as described here, contact your service representative.

When You Have Problems Operating the Machine

1

This section describes common problems and messages.

If other messages appear, follow the instructions displayed.

Problem	Cause	Solution
Although the copier screen appears when the machine is turned on using the main power switch, it cannot be switched to another screen by pressing the [Printer] or [Scanner] key.	Functions other than the copier function are not yet ready.	Wait a little longer.
The machine has just been turned on and the User Tools screen is displayed, but the User Tools menu has items missing.	Functions other than the copier function are not yet ready. Time required varies by function. Functions appear in the User Tools menu when they become ready for use.	Wait a little longer.
The operation switch indicator continues blinking and does not turn off when pressed.	This occurs in the following cases: <ul style="list-style-type: none"> • The ADF is open. • The machine is communicating with external equipment. • The hard disk is active. • The machine is cooling down. 	Close the ADF, and check if the machine is communicating with external equipment.
The display is off.	The machine is in Energy Saver mode.	Press the [Energy Saver] key to cancel Energy Saver mode.
The display is off.	The operation switch is turned off.	Turn on the operation switch.
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.

Problem	Cause	Solution
"Please wait." appears.	This message appears when you turn on the operation switch.	Wait for a while. If the machine does not get ready in a minute, contact your service representative.
"Please wait." appears.	This message appears when the machine is warning up.	<ul style="list-style-type: none"> • Wait for a while. If the machine does not get ready in five minutes, contact your service representative. • Wait until the message disappears. Do not turn off the main power switch while the message is showing.
"Please wait." appears.	This message appears when you change the toner cartridge.	Wait for a while. If the message does not disappear in two minutes, contact your service representative.
"Memory is full. Do you want to store scanned file?" appears.	The scanned originals exceed the number of sheets/pages that can be stored in the hard disk.	<ul style="list-style-type: none"> • Press [Store File] to store pages that have been scanned. Delete unnecessary files with [Delete File]. • Press [No] if you are not storing pages that have been scanned. Delete unnecessary files with [Delete File].
"Self checking..." appears.	The machine is performing image adjustment operations.	The machine may perform periodic maintenance during operations. The frequency and duration of maintenance depends on the humidity, temperature, and printing factors such as number of prints, paper size, and paper type. Wait for the machine to get ready.
The user code entry screen is displayed.	Users are restricted by User Code Authentication.	Enter the user code (up to eight digits), and then press [OK].
The Authentication screen appears.	Basic Authentication, Windows Authentication or LDAP Authentication is set.	Enter your login user name and user password. See "When the Authentication Screen is Displayed", About This Machine.

Problem	Cause	Solution
"Authentication has failed." appears.	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed." appears.	The machine cannot perform authentication.	Contact the administrator.
"You do not have the privileges to use this function." continues to be displayed even though you have entered a valid user name.	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.
An error message remains, even if misfed paper is removed.	<ul style="list-style-type: none"> When a misfeed message appears, it remains until you open and close the cover as required. Paper is still jammed in the tray. 	Remove misfed paper, and then open and close the cover. See p.139 "Removing Jammed Paper".
Original images are printed on the reverse side of the paper.	You may have loaded the paper incorrectly.	Load paper correctly. Place paper in the paper tray with the print side down. Load paper into the LCT, Wide LCT, or bypass tray with the print side up.
Misfeeds occur frequently.	The tray's side or end fences may not be set properly.	<ul style="list-style-type: none"> Remove the misfed paper. See p.139 "Removing Jammed Paper". Check the side or end fences are set properly. Also, check the side fences are locked. See p.119 "Changing the Paper Size".
Misfeeds occur frequently.	Paper of undetectable size has been loaded.	<ul style="list-style-type: none"> Remove the misfed paper. See p.139 "Removing Jammed Paper". If you load a paper size that is not selected automatically, you need to specify the paper size with the control panel. See p.119 "Changing the Paper Size".

Problem	Cause	Solution
Misfeeds occur frequently.	There is a foreign object on the finisher tray.	<ul style="list-style-type: none"> Remove the misfed paper. See p.139 "Removing Jammed Paper". Do not place anything on the finisher tray. It may cause a paper jam.
Misfeeds occur frequently.	The staple cartridge is not set correctly.	Set the staple cartridge properly. The Finisher SR4020 requires the saddle stitch staple cartridge also. For details about how to add staples, see p.134 "Adding Staples".
Cannot print in duplex mode.	Duplex printing cannot be done with paper set in the bypass tray.	When using duplex printing, make settings to use paper from a tray other than the bypass tray.
Cannot print in duplex mode.	[Apply Duplex] is set to [No] for "Paper Type: Tray 1-3".	In [Tray Paper Settings], under "Paper Type: Tray 1-3", set [Apply Duplex] to [Yes].
Cannot print in duplex mode.	You cannot select duplex printing if the paper type is set to [Tab Stock].	In [Tray Paper Settings], under "Paper Type: Tray 2-3", select a paper type other than [Tab Stock].

Note

- If you cannot make copies as you want because of paper type, paper size, or paper capacity problems, use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
- Using curled paper often causes misfeeds, soiled paper edges, or slipped positions while performing staple or stack printing. When using curled paper, take the stiffness out of the paper with your hands to straighten out the curl, or load the paper up side down. Also, to prevent paper from curling, lay paper on a flat surface, and do not lean it against the wall.

When a Job Is Not Performed

If you are not able to carry out your job, it may be that the machine is being used by another function.

Wait until the current job is completed before trying again. In certain cases, you can carry out another job using a different function while the current job is being performed. Performing multiple functions simultaneously like this is called "Multi-accessing".

Important

- The following chart shows the combinations of functions available when [Interleave] is selected in [Print Priority] under [General Features].

Combination Chart

Function Compatibility

△ : Simultaneous operations are possible.

● : Operation is enabled when the relevant function key is pressed and remote switching (of the scanner/external extension) is done.

○ : Operation is enabled when the [Interrupt] key is pressed to interrupt the preceding operation.

→ : Operation is performed automatically once the preceding operation ends.

× : The operation must be started once the preceding operation ends. (Simultaneous operations are not possible.)

Mode after you select	Copy	Interrupt Copying	Facsimile							Printer			Scanner		TWAIN		Document Server		DeskTop Binder		Web Document Server							
			Operations for Copying	Stapling	Sort	Operations for Copying	Copying	Transmission Operation/Manual Reception Operation	Transmission	Reception	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Data Reception	Printing	Stapling	Operations for Scanning	Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	Sending a Facsimile from Document Server	Printing		
Copy	Operations for Copying	x	x	x	○	○	●	●	△	●	△	△	△	△	△	△	●	●	●	●	●	●	△	△	△	△	●	
	Stapling	△*1	→*1	→*1	○	○*5	●	●*2	△	●*2	△	△	△	△	△	→	●	●*2	●*2	●	●	●	△*4	△*4	△	△	△*4	
	Sort	△*1	→*1	→*1	○	○	●	●*2	△	●*2	△	△	△	△	△	△	●	●*2	●*2	●	●	●	△	△	△	△	△	
Interrupt Copying	Operations for Copying	○	○	○	x	x	x	x	△	x	△	△	△	△	△	x	x	x	x	x	x	x	x	x	→	△	x	
Facsimile	Transmission Operation/Manual Reception Operation	●	●	●	○	○	x	x	△	x	△	△	△	△	△	△	●	●	●	●	●	●	△	△	△	△	△	
	Scanning an Original for Memory Transmission	x	x	x	x	x	x	x	△	x	△	△	△	△	△	x	x	x	x	x	x	x	x	△	△	△	△	
	Memory Transmission	△	△	△	△	△	△	△	△*3	△*3	△*3	△*7	△	△	△	△	△	△	△	△	△	△	△	△	△	△	→	△
	Immediate Transmission	x	x	x	x	x	x	x	△*3	x	△*3	△	△	△	△	x	x	x	x	x	x	x	x	x	△	△	→	△
	Memory Reception	△	△	△	△	△	△	△	△*3	△*3	△*3	△*7	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△
	Printing Received Data	△	△	△	△	△	△	△	△*7	△	△*7	x	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△
Printer	Data Reception	△	△	△	△	△	△	△	△	△	△	△	△	△	→	→	→	△	△	△	△	△	△	△	△	△	△	△
	Printing	△	△	△	○	○	△	△	△	△	△	△	△	△	→	→	△	△	△	△	△	△	△	△	△	△	△	
	Stapling	△	→	△	○	○*5	△	△	△	△	△	△	△	△	→	→	△	△	△	△	△	△	△	△	△	△	△*4	
Scanner	Operations for Scanning	●	●	●	○	○	●	●	△	●	△	△	△	△	△	x	x	●	●	●	●	●	△	△	△	△	△	
	Scanning	●	●*2	●*2	○*2	○*2	●	●*2	△	●*2	△	△	△	△	△	x	x	x	x	●	●	●	△	△	△	△	△	
TWAIN	Scanning	x	x	x	x	x	x	x	△	x	△	△	△	△	△	x	x	x	x	x	x	x	x	x	x	x	△	
Document Server	Operations for Document Server	●	●	●	○	○	●	●	△	●	△	△	△	△	△	●	●	●	●	x	x	x	x	△	△	△	△	
	Scanning a Document to Store in Document Server	●	x	x	○	○	●	x	△	x	△	△	△	△	△	●	●*2	●*2	●	x	x	x	x	△	△	△	△	
	Printing from Document Server	●	△*4	△	○	○	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	
DeskTop Binder	Printing from Document Server	△	△*4	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	
	Sending a Facsimile from Document Server	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	x	
Web Document Server	Printing	△	△*4	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	

BAZ014S

- *1 Simultaneous operations are only possible after the preceding job documents are all scanned and [New Job] appears.
- *2 You can scan a document after the preceding job documents are all scanned.
- *3 Operation is possible when extra lines are added.
- *4 During stapling, printing automatically starts after the current job.
- *5 Stapling is not available.
- *6 Simultaneous operation becomes possible after you press [New Job].
- *7 During parallel reception, any subsequent job is suspended until the reception is completed.

Note

- Stapling cannot be used at the same time for multiple functions.

- If the machine is capable of executing multiple functions simultaneously, specify which function should have priority in "Print Priority". This setting is factory-preset to "Display Mode". For details about Print Priority, see "System Settings", General Settings Guide.
- When Finisher SR4010, Finisher SR4020, Finisher SR5000, or Mailbox is installed on the machine, you can specify the output tray where documents are delivered. For details about Output Tray Settings, see "System Settings", General Settings Guide.
- While printing is in progress, scanning a document using another function may take longer than usual.

2. Troubleshooting When Using the Copy/Document Server Function

This chapter describes likely causes of and possible solutions for copier/document server function problems.

Messages Displayed When Using the Copy/Document Server Function

This section describes the machine's main messages. If other messages appear, follow the instructions they contain.

★ Important

- If you cannot make copies as you want because of the paper type, paper size or paper capacity problems, use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
- For messages that are not listed here, see "When You Have Problems Operating the Machine".

📖 Reference


- p.21 "When You Have Problems Operating the Machine"

Message	Cause	Solution
"Authentication has failed."	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed."	The machine cannot perform authentication.	Contact the administrator.
"Cannot detect original size."	The original placed on the exposure glass is a non-standard size.	<ul style="list-style-type: none">• Place the original on the exposure glass again. Face the originals down.• If the machine cannot detect the size of the original, specify the size manually - do not use Auto Paper Select mode or the Auto Reduce/Enlarge function. See "Specifying Original Sizes", Copy/Document Server Reference.
"Cannot detect original size."	Original is not placed.	Place your originals.

Message	Cause	Solution
"Cannot punch this paper size."	The Punch function cannot be used with paper size selected.	Select a proper paper size. See "Supplementary Information", Copy/Document Server Reference.
"Cannot staple paper of this size."	The Staple function cannot be used with paper size selected.	Select a proper paper size. See "Supplementary Information", Copy/Document Server Reference.
"Check original orientation."	Original is not placed in a proper orientation.	Change the orientation of the original.
"Check paper size."	An irregular paper size is set.	If you press the [Start] key, copy will start onto the selected paper.
"Duplex is not available with this paper size."	A paper size not available in Duplex mode has been selected.	Select a proper paper size. See "Supplementary Information", Copy/Document Server Reference.
"Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?"	The number of scanned pages exceeds the capacity per file of the Document Server.	To store scanned pages as a file, press [Store File]. Scanned data is stored as a file in the Document Server. If you do not want to store scanned pages, press [No]. Scanned data is deleted.
"File being stored exceeded max. number of pages per file. Copying will be stopped."	The scanned originals have too many pages to store as one document.	Press [Exit], and then store again with an appropriate number of pages.
"Magazine or Booklet mode is not available due to mixed image mode."	You selected the "Magazine" or "Booklet" function for originals scanned using different functions, such as copy and printer.	Make sure originals for the "Magazine" or "Booklet" function are scanned using the same function.
"Maximum number of sets is n." (A figure is placed at n.)	The number of copies exceeds the maximum copy quantity.	You can change the maximum copy quantity from [Max. Copy Quantity] in [General Features] under [Copier / Document Server Features].

Message	Cause	Solution
"Original is being scanned by another function. Switch to the following function, then press the Stop key to cancel scanning or press the Start key to continue."	A function of the machine other than the Copier function is being used such as the Document Server function.	Cancel the job in progress. For example, press [Exit], and then press the [Document Server] key. Next, press the [Clear/Stop] key. When the message "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" appears, press [Stop].
"Please wait."	The destination list is being updated from the network using SmartDeviceMonitor for Admin. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.	Wait until the message disappears. Do not switch off the power while this message is displayed.
"Rotate Sort is not available with this paper size."	A size of paper for which Rotate Sort is not available is selected.	Select a proper paper size. See "Supplementary Information", Copy/Document Server Reference.
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the authority to do so.	Files can be deleted by the person who created the file. To delete a file which you are not authorized to delete, contact the person who created the file.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.

Connect Copy


Message	Cause	Solution
"Cannot connect to the sub-machine. Check the status of the sub-machine."	The  indicator is lit. The hard disk of the sub-machine is malfunctioning.	Press [Exit] on the main machine and follow the instructions on the display.


Message	Cause	Solution
"Cannot print from the sub-machine. Check the status of the sub-machine."	A paper misfeed has occurred on the sub-machine, or toner or other supplies need to be replenished.	Follow the instructions displayed. For details, see p. 130 "Adding Toner", p. 139 "Removing Jammed Paper", or p. 160 "Removing Jammed Staples". If the sub-machine's display indicates that a cover is open, follow the instructions displayed.
"Cannot print from the sub-machine. Check the status of the sub-machine."	The sub-machine's User Tools menu is open.	Press the [User Tools] key to close the User Tools menu.
"Cannot print from the sub-machine. Sub-machine will be disconnected."	The sub-machine has stopped due to power failure or communication error.	Continue copying using the main machine.
"No stamp data in the sub-machine."	Stamp data on the sub-machine has been deleted.	Reprogram the stamp on the sub-machine.
"Sub-machine does not have the same paper setting(s)."	Paper type or tray settings on the two machines do not match.	Make the same settings on both machines.
"Sub-machine is in Interrupt mode."	The sub-machine is in Interrupt mode.	Press the [Interrupt] key on the sub-machine to cancel Interrupt mode.
"Sub-machine paper settings must be the same to use this tray."	Paper tray settings on the two machines do not match.	Make the same settings on both machines.
"The Cover Sheet setting(s) of the sub-machine is different from the main machine."	The Cover Sheet settings on the two machines do not match.	Make the same settings on both machines.
"The Designation Sheet setting(s) of sub-machine is different from main machine."	Designation Sheet settings on the two machines do not match.	Make the same settings on both machines.
"The Slip Sheet setting(s) of the sub-machine is different from the main machine."	Slip Sheet settings on the two machines do not match.	Make the same settings on both machines.

When You Cannot Make Clear Copies

This section describes likely causes of and possible solutions for unclear copies.

Problem	Cause	Solution
Copies appear dirty.	Image density is too high.	Adjust the image density settings. See "Adjusting Copy Image Density", Copy/Document Server Reference.
Copies appear dirty.	Auto Image Density is not selected.	On the control panel, select [Auto Density].
The reverse side of an original image is copied.	Image density is too high.	Adjust the image density settings. See "Adjusting Copy Image Density", Copy/Document Server Reference.
The reverse side of an original image is copied.	Auto Image Density is not selected.	On the control panel, select [Auto Density].
A shadow appears on copies if you use pasted originals.	Image density is too high.	<ul style="list-style-type: none"> Adjust the image density settings. See "Adjusting Copy Image Density", Copy/Document Server Reference. Change the orientation of the original. Put mending tape on the pasted part.
The same copy area is dirty whenever making copies.	The exposure glass, scanning glass, or ADF is dirty.	Clean them. See p. 173 "Maintaining Your Machine".
The same copy area is dirty whenever making copies.	<ul style="list-style-type: none"> The original that has already been printed is scanned. Original Type Select is set to [Text / Photo], and an original with text and photographs that can hardly be distinguished from each other is loaded. 	On the control panel, in [Others], press [Generation Copy], and then begin copying.

Problem	Cause	Solution
Copies are too light.	Image density is too light.	Adjust the image density settings. See "Adjusting Copy Image Density", Copy/Document Server Reference.
Copies are too light.	A light copy may result when you use damp or rough grain paper.	Use recommended paper only and be sure its storage environment meets the recommended temperature and humidity conditions. For details about recommended paper and the proper way to store it, see "Recommended Paper Sizes and Types" and "Paper Storage", About This Machine.
Copies are too light.	Toner cartridge is almost empty.	Add toner. See p.130 "Adding Toner".
Parts of images are not copied.	The original is not set correctly.	Set originals correctly. See "Placing Originals", Copy/Document Server Reference.
Parts of images are not copied.	The correct paper size is not selected.	Select the proper paper size.
Images appear only partially colored.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. For details about the proper way to store it, see "Paper Storage", About This Machine.
Colored lines appear.	The exposure glass or scanning glass is dirty.	Clean them. See p.173 "Maintaining Your Machine".
White lines appear.	The exposure glass or scanning glass is dirty.	Clean them. See p.173 "Maintaining Your Machine".
White lines appear.	When  is blinking, toner is beginning to run out.	Add toner. See p.130 "Adding Toner".
Copies are blank.	The original is not set correctly.	When using the exposure glass, face the originals down. When using the ADF, face them up.

Problem	Cause	Solution
<p>A moire pattern is produced on copies.</p> 	<p>Your original has a dot pattern image or many lines.</p>	<p>Place the original on the exposure glass at a slight angle.</p>
<p>Black spots appear on the copy of a photographic print.</p>	<p>Because of high humidity, the photographic print has stuck to the exposure glass.</p>	<p>Place the print on the exposure glass in either of the following ways:</p> <ul style="list-style-type: none"> • Place an OHP transparency on the exposure glass, and then place the print on the OHP transparency. • Place the print on the exposure glass, and then place two or three sheets of white paper on it. Leave the ADF open when copying.

When You Cannot Make Copies As Wanted

This section describes likely causes of and possible solutions for unsatisfactory copy results.

Basic

Problem	Cause	Solution
Misfeeds occur frequently.	The number of sheets loaded exceeds the capacity of the machine.	<ul style="list-style-type: none"> When loading paper into the paper tray, load paper only as high as the upper limit markings on the side fences of the paper. When loading paper on the bypass tray, load only as much paper as can be held between the guides on the bypass tray.
Misfeeds occur frequently.	The paper tray's side fences are set too tightly.	Push the side fences lightly, and then reset it. Also, we recommend you set at least 20 sheets of thick paper.
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper only and be sure its storage environment meets the recommended temperature and humidity conditions. For details about recommended paper and the proper way to store it, see "Recommended Paper Sizes and Types" and "Paper Storage", About This Machine.
Misfeeds occur frequently.	Printed paper is being used.	Do not use paper that has been already copied or printed onto.

Problem	Cause	Solution
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Copies are not stapled.	There are jammed staples in the stapler.	Remove jammed staples. See p. 160 "Removing Jammed Staples".
Copies are not stapled.	Copy paper is curled.	Turn the copy paper over in the tray.
Copies are stapled as separate batches.	The number of copies is too great for the stapler to staple as a single batch.	Check the stapler capacity. See "Supplementary Information", Copy/Document Server Reference.
Staples are wrongly positioned.	Originals are not set correctly.	Check the correct position to place the originals. For details about how to place originals with stapling, see "Staple", Copy/Document Server Reference.
Paper does not output during printing with stapling.	When you stop printing while using the staple function, paper not stapled during printing may be left in the staple unit.	Press the [Clear Modes] key and cancel copy settings, including stapling.
Saddle-stitched documents come apart and do not stack properly.	Certain types of paper are resistant to folding and open out after being folded and stitched.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
You cannot combine several functions.	Selected functions cannot be used together.	Check the combination of functions and make the settings again. See "Function Compatibility", Copy/Document Server Reference.
When sorting, the pages are divided into two blocks.	The memory became full in the middle of sorting and the pages were delivered in two blocks.	In [Copier / Document Server Features], under [Input/Output], set [Memory Full Auto Scan Restart] to [Off].

Problem	Cause	Solution
Images are skewed.	The side fences in the paper feed tray are not set properly.	Make sure the side fences are set properly. For details about how to set the side fences, see p.119 "Changing the Paper Size".
Images are skewed.	The paper is feeding in at a slant.	Load the paper correctly. See p.109 "Loading Paper".

Edit

Problem	Cause	Solution
In "Double Copies" mode, parts of the original image are not copied.	Combination of original and copy paper is not correct.	Specify the paper size again. For example, select A3 for A4 originals. See "Double Copies", Copy/Document Server Reference.
In "Erase Border", "Erase Center", or "Erase Center / Border" mode, parts of the original image are not copied.	You set a wide erased margin.	Make the margin width narrower. You can adjust it between 2 - 99 mm (0.1 - 3.9 inches).
In "Erase Border", "Erase Center", or "Erase Center / Border" mode, parts of the original image are not copied.	Originals are not scanned correctly.	Place the originals correctly.
In "Margin Adjustment" mode, parts of the original image are not copied.	<ul style="list-style-type: none"> You set a wide erased margin. There is a lack of margin space on the opposite side of the binding position. 	Set a narrower margin with User Tools. You can set the width between 0 - 30 mm (0 - 1.2 inches).
In "Image Repeat" mode, the original image is not copied repeatedly.	You selected copy paper the same size as the originals, or you did not select the proper reproduction ratio.	Select copy paper larger than the originals or select the proper reproduction ratio.

Stamp

Problem	Cause	Solution
The stamp position is wrong.	The paper orientation is wrong.	Check the paper orientation and stamp position.
The stamp is not printed on the back side of sheets when duplex copying.	The back side stamp position is incorrect for the paper size.	Reset the back side stamp position. For details about Duplex Back Page Stamping Position, see "Copier/ Document Server Features", General Settings Guide.

Combine

Problem	Cause	Solution
Copies made with the "Booklet" or "Magazine" function cannot be folded into a book correctly.	You selected a setting ("Open to Left" or "Open to Right") that does not match the orientation of originals.	In [Copier / Document Server Features], under [Edit], set [Orientation: Booklet, Magazine] properly.
When using "Combine", parts of the image are not copied.	You specified a reproduction ratio that does not match the sizes of your originals and copy paper.	When you specify a reproduction ratio using Manual Paper Select mode, make sure the ratio matches your originals and the copy paper. Select the correct reproduction ratio before using Combine mode. See "One-Sided Combine", "Two-Sided Combine", or "Auto Reduce/Enlarge", Copy/ Document Server Reference.
Copies are not in correct order.	You placed the originals in the incorrect order.	When placing a stack of originals in the ADF, the last page should be on the bottom. If you place an original on the exposure glass, start with the first page to be copied.

Duplex

Problem	Cause	Solution
Cannot print in duplex mode.	You have loaded paper on the bypass tray.	Remove paper loaded on the bypass tray. Load paper in a tray other than bypass tray.

Problem	Cause	Solution
Cannot print in duplex mode.	You have loaded paper exceeding 163 g/m ² .	Change the paper.
Cannot print in duplex mode.	[Apply Duplex] is set to [No] for "Paper Type: Tray 1-3".	In [Tray Paper Settings], under "Paper Type: Tray 1-3", set [Apply Duplex] to [Yes].
Copies are not in correct order.	You placed the originals in the incorrect order.	When placing a stack of originals in the ADF, the last page should be on the bottom. If you place an original on the exposure glass, start with the first page to be copied.
When using "Duplex", copy is made top to bottom even though [Top to Top] is selected.	You placed the originals in the wrong orientation.	Place the original in the correct orientation. See "Duplex", Copy/Document Server Reference.

Document Server

Problem	Cause	Solution
You forgot your password.	You cannot access a protected file without entering the password.	Contact the administrator. To delete the files stored in the document server, select [Delete All Files in Document Server] under [Administrator Tools] in [System Settings]. As this will permanently delete every single file, make sure the document server does not contain any files you want to keep. For details about Delete All Files in Document Server, see "System Settings", General Settings Guide.

Problem	Cause	Solution
You cannot find out what is stored in a file.	You may not be able to ascertain the contents of a file simply from the file name.	<p>You can switch the Select File screen between [List] and [Thumbnail] display to check the contents of the file. Check information other than the file name.</p> <ul style="list-style-type: none"> • List display The file name, data of storage, and user name are shown. • Thumbnails display An image of the stored file appears. <p>You can enlarge the image by pressing [Preview]. See "Checking the Details of a Stored Document", Copy/Document Server Reference.</p>
Memory frequently becomes full.	The document server memory is full.	<p>Delete unnecessary files. On the file selection display, select unnecessary files, and then press [Delete File]. If this does not increase available memory, do the following.</p> <ul style="list-style-type: none"> • Switch to the scanner screen, and then delete unnecessary files stored under the scanner function. • Switch to the printer screen, and then delete unnecessary files stored under Sample Print, Locked Print, Hold Print, or Stored Print.
You want to check print quality before making a large print run.	You can print a single copy without specifying the setting again.	Check print quality by printing out only the first set using the [Sample Copy] key. See "Finishing", Copy/Document Server Reference.

Problem	Cause	Solution
"Cannot display preview of this page." appears, and you can not check the thumbnail image.	The image data may have been corrupted.	Press [Exit] to display the preview screen without a thumbnail. If the selected document contains several pages, press [Switch] on the "Display Page" area to change the page, and then a preview of the next page will appear.

Connect Copy

Problem	Cause	Solution
You cannot staple, punch, or Z-fold.	The main and sub-machines do not have the same option installed.	Press [Connect Copy] to cancel Connect Copy.
You get different copy results from the main and sub-machine.	The Copy Quality setting differs on the two machines.	On the control panel, select [Edit / Color]. In [Color], under [Adjust Color], select [Copy Quality], and then make the same setting on both machines.

Display during Connect Copy

This section describes the display during Connect Copy.

Problem	Cause	Solution
[Connect Copy] is not displayed.	The sub-machine's main power is off.	Turn on the sub-machine's main power.
[Connect Copy] is not displayed.	Functions that cannot be used with Connect Copy are selected on the main machine (such as storing or copying the first page of a document in the Document Server).	Cancel the functions selected on the main machine.
[Connect Copy] is not displayed.	The main machine is in Interrupt mode.	Press the [Interrupt] key on the sub-machine to cancel Interrupt mode.
[Connect Copy] is not displayed.	The [Connect Copy Key Display] setting is off.	Select [Display] for the [Connect Copy Key Display] setting.

Problem	Cause	Solution
[Connect Copy] is not displayed.	The cable connecting the two machines is damaged.	Contact your service representative.
[Connect Copy] is not displayed.	The ! is lit.	Follow the instructions displayed.
[Connect Copy] appears faded.	Functions that cannot be used with Connect Copy have been set.	Press the [Clear Modes] key to clear the settings.

If Connect Copy Is Canceled

This section describes causes and remedies when Connect Copy is canceled.

Problem	Cause	Solution
The machine cancels Connect Copy.	The main machine's main power is off, or the operation switch has been pressed.	Turn on the sub-machine's main power or operation switch, and then press [Connect Copy].
The machine cancels Connect Copy.	The sub-machine's main power is off.	A message instructing you to check the sub-machine appears on the display of the main machine. Press [Cancel] to clear Connect Copy. Turn on the sub-machine's main power, press Connect Copy and then make your settings again.
The machine cancels Connect Copy.	The Weekly Timer setting is coming into effect on the main machine.	Turn on the main machine's operation switch, and then press [Connect Copy]. For details about Weekly Timer: Monday - Sunday, see "System Settings", General Settings Guide.
An error message indicates the main machine has broken down.	The ! is lit.	Copying is not possible. Follow the instructions displayed.

If You Cannot Exit from Connect Copy

This section describes causes and remedies if you cannot exit from Connect Copy.

Problem	Cause	Solution
There is no response when you press [Connect Copy].	Scanning is in progress.	Press the [Clear/Stop] key on the main machine, and then press [Stop].
There is no response when you press [Connect Copy].	Copying is in progress.	Press the [Clear/Stop] key on the main machine, and then press [Stop].
There is no response when you press [Connect Copy].	A paper misfeed has occurred on either the main machine or sub-machine.	<ul style="list-style-type: none"> Follow the instructions displayed. For details, see p.139 "Removing Jammed Paper" and p.160 "Removing Jammed Staples". If the sub-machine's display indicates that a cover is open, follow the instructions displayed. To cancel Connect Copy, Press the [Clear/Stop] key on the main machine, and then press [Stop].
There is no response when you press [Connect Copy].	The [Clear/Stop] key is pressed on the main machine.	To cancel Connect Copy, Press the [Clear/Stop] key on the main machine, and then press [Stop].
There is no response when you press [Connect Copy].	Toner or other supplies need to be replaced on either the main machine or sub-machine.	<ul style="list-style-type: none"> Follow the instructions displayed. For details, see p.109 "Loading Paper", p.130 "Adding Toner", p.134 "Adding Staples", and p.165 "Removing Punch Waste". To cancel Connect Copy, Press the [Clear/Stop] key on the main machine, and then press [Stop].

When Memory Is Full

This section describes likely causes of and possible solutions for problems related to full memory.

Message	Cause	Solution
"Press [Continue] to scan and copy remaining originals."	The machine checked if the remaining originals should be copied, after the scanned originals were printed.	To continue copying, remove all copies, and then press [Continue]. To stop copying, press [Stop].

Connect Copy

Message	Cause	Solution
"Sub-machine memory is full. Sub-machine will be disconnected."	The quantity of data exceeds the capacity of the sub-machine.	Continue printing on the main machine.

↓ Note

- If you set [Memory Full Auto Scan Restart] in [Input/Output] of User Tools to [On], even if the memory becomes full, the memory overflow message will not be displayed. The machine will make copies of the scanned originals first, and then automatically proceed to scan and to copy the remaining originals. In this case, the resulting sorted pages will not be sequential. For details about Memory Full Auto Scan Restart, see "Copier/Document Server Features", General Settings Guide.

3. Troubleshooting When Using the Facsimile Function

This chapter describes likely causes of and possible solutions for facsimile function problems.

Adjusting the Volume

This section describes how to adjust the volume.

You can change the volume of the following sounds that the machine makes.

3

On Hook Mode

Heard when [On Hook] is pressed.

At Transmission

Heard when "Immediate Transmission" is performed.

At Reception

Heard when the machine receives a document.


At Dialing

Heard after pressing the [Start] key, until the line connects to the destination.

At Printing

Heard when a received document is printed.


1. Press the [User Tools / Counter] key.

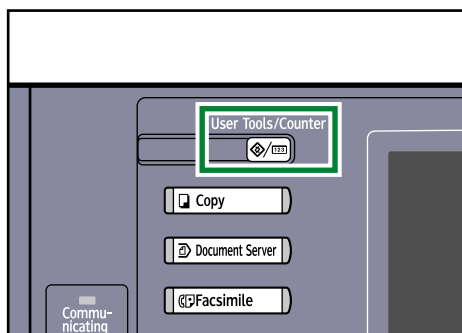

BAT183S


2. Press [Facsimile Features].
3. Check that [General Settings] screen appears.

4. Press [Adjust Sound Volume].

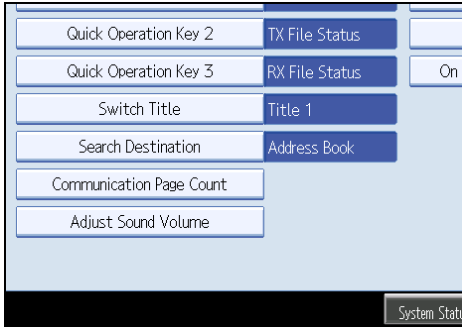

3

5. Press [Lower] or [Louder] to adjust the volume, and then press [OK].

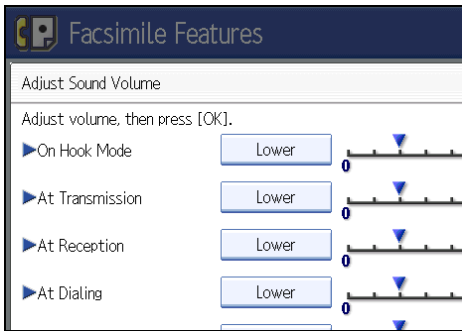

You can hear the actual volume by pressing [Check].

If you press [Cancel], the volume setting is canceled. The display returns to that of step 4.

You can set the volume level to between 0 and 7.

6. Press the [User Tools / Counter] key.

The standby display appears.

Note

- You can adjust the On Hook volume when you press [On Hook]. See "On Hook Dial", Facsimile Reference.

Messages Displayed When Using the Facsimile Function

This section describes the machine's main messages. If other messages appear, follow their instructions.

Message	Cause	Solution
"Authentication has failed."	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed."	The machine cannot perform authentication.	Contact the administrator.
"Cannot detect original size. Select scan size."	The machine failed to detect the size of the original.	On the control panel, under [Scan Size], specify the scan area in [Scan Settings], and then resend the document.
"Cannot find the specified path. Please check the settings."	The name of the computer or folder entered as the destination is wrong.	Check whether the computer name and the folder name for the destination are correct.
"Check whether there are any network problems." [13-10]	The alias telephone number you entered is already registered on the gatekeeper by another device.	<ul style="list-style-type: none"> In [Facsimile Features], under [Initial Settings], select [H.323 Settings], and then check the alias telephone number is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Contact the network administrator.
"Check whether there are any network problems." [13-11]	Cannot access gatekeeper.	<ul style="list-style-type: none"> In [Facsimile Features], under [Initial Settings], select [H.323 Settings], and then check "Gatekeeper Address" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Contact the network administrator.

Message	Cause	Solution
"Check whether there are any network problems." [13-17]	Registering of user name is rejected by SIP server.	<ul style="list-style-type: none"> • In [Facsimile Features], under [Initial Settings], select [SIP Settings], and then check "SIP Server IP Address" and "SIP User Name" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the network administrator.
"Check whether there are any network problems." [13-18]	Cannot access SIP server.	<ul style="list-style-type: none"> • In [Facsimile Features], under [Initial Settings], select [SIP Settings], and then check "SIP Server IP Address" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the network administrator.
"Check whether there are any network problems." [13-24]	The password registered for the SIP server is not the same as the password registered for this machine.	Contact the administrator.

Message	Cause	Solution
<p>"Check whether there are any network problems." [13-25]</p>	<p>In [Effective Protocol], the IP address is not enabled, or an incorrect IP address has been registered.</p>	<ul style="list-style-type: none"> • In [System Settings], under [Interface Settings], select [Effective Protocol], and then check "IPv4" is programmed to "Active". You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • In [System Settings], under [Interface Settings], select [Machine IPv4 Address], and then check the IP address is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the administrator.
<p>"Check whether there are any network problems." [13-26]</p>	<p>The "Effective Protocol" and "SIP Server IP Address" settings are different, or an incorrect IP address has been registered.</p>	<ul style="list-style-type: none"> • In [System Settings], under [Interface Settings], check the IP address is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the administrator.

Message	Cause	Solution
<p>"Check whether there are any network problems." [14-01]</p>	<p>The DNS server, SMTP server, or folder specified for forwarding to was not found, or, the destination for Internet Fax around (not through) the SMTP server could not be found.</p>	<ul style="list-style-type: none"> • In [System Settings], under [Interface Settings], check the DNS server is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • In [System Settings], under [File Transfer], select [SMTP Server], and then check "Server Name" or "Port No." is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Check that the folder for forwarding is correctly specified. • Check that the computer in which the folder for forwarding is specified is correctly operated. • Check that the LAN cable is correctly connected to the machine. • Contact the network administrator of the destinations. • Contact the network administrator.

Message	Cause	Solution
<p>"Check whether there are any network problems." [14-09]</p>	<p>E-mail transmission was refused by SMTP authentication, POP before SMTP authentication or login authentication of the computer in which the folder for transfer is specified.</p>	<ul style="list-style-type: none"> • In [System Settings], under [File Transfer], select [SMTP Authentication], [POP before SMTP], or [Fax E-mail Account], and then check that "User Name" and "Password" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Check that the user ID and password for the computer in which the folder for forwarding is specified are correctly programmed. • Check that the folder for forwarding is correctly specified. • Check that the computer in which the folder for forwarding is specified is correctly operated. • Contact the network administrator.
<p>"Check whether there are any network problems." [14-33]</p>	<p>Neither the machine's nor the administrator's e-mail address is registered.</p>	<ul style="list-style-type: none"> • In [System Settings], under [File Transfer], select [Fax E-mail Account], and then check that "E-mail Address" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the network administrator.
<p>"Check whether there are any network problems." [15-01]</p>	<p>No POP3/IMAP4 server address is programmed.</p>	<ul style="list-style-type: none"> • In [System Settings], under [File Transfer], select [POP3 / IMAP4 Settings], and then check "Server Name" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the network administrator.

Message	Cause	Solution
<p>"Check whether there are any network problems." [15-02]</p>	<p>Cannot log on to the POP3/IMAP4 server.</p>	<ul style="list-style-type: none"> • In [System Settings], under [File Transfer], select [Fax E-mail Account], and then check that "User Name" and "Password" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the network administrator.
<p>"Check whether there are any network problems." [15-03]</p>	<p>No machine e-mail address is programmed.</p>	<ul style="list-style-type: none"> • In [System Settings], under [File Transfer], check that the machine e-mail address is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the network administrator.

Message	Cause	Solution
<p>"Check whether there are any network problems." [15-11]</p>	<p>Cannot find the DNS server or POP3/IMAP4 server.</p>	<ul style="list-style-type: none"> • In [System Settings], under [Interface Settings], check the IP address of the DNS Server is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • In [System Settings], under [File Transfer], select [POP3 / IMAP4 Settings], and then check "Server Name" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • In [System Settings], under [File Transfer], select [E-mail Communication Port], and then check the port number of the POP3/IMAP4 server is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.
<p>"Check whether there are any network problems." [15-11]</p>	<p>Cannot find the DNS server or POP3/IMAP4 server.</p>	<ul style="list-style-type: none"> • Check that the LAN cable is correctly connected to the machine. • In [System Settings], under [File Transfer], select [Reception Protocol], and then check the reception protocol is correctly programmed. You can also use the Web Image Monitor. See the Web Image Monitor's Help. • Contact the network administrator.

Message	Cause	Solution
<p>"Check whether there are any network problems." [15-12]</p>	<p>Cannot log on to the POP3/IMAP4 server.</p>	<ul style="list-style-type: none"> • In [System Settings], under [File Transfer], select [Fax E-mail Account], and then check that "User Name" and "Password" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • In [System Settings], under [File Transfer], check that the user name and password for POP before SMTP authentication are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. • Contact the network administrator.
<p>"Connection with LDAP server has failed. Check the server status."</p>	<p>A network error has occurred and connection has failed.</p>	<ul style="list-style-type: none"> • Try the operation once more. If the message is still shown, the network may be crowded. • In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.
<p>"Error occurred, and transmission was canceled."</p>	<ul style="list-style-type: none"> • Original jammed during Immediate Transmission. • A problem occurred in the machine, or noise occurred on the telephone line. 	<p>Press [Exit], and then send the documents again.</p>
<p>"Exceeded max. No. of display search results. Max.: n" (A figure is placed at n.)</p>	<p>The number of search results has exceeded the maximum number of items that can be displayed.</p>	<p>Search again after changing the search conditions.</p>

Message	Cause	Solution
"Exceeded time limit for LDAP server search. Check the server status."	A network error has occurred and connection has failed.	<ul style="list-style-type: none"> • Try the operation once more. If the message is still shown, the network may be crowded. • In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.
"Functional problems with facsimile. Data will be initialized."	There is a problem with the fax.	Record the code number shown on the display and contact your service representative. Other functions can be used.
"LDAP server authentication has failed. Check the settings."	A network error has occurred and connection has failed.	Make settings correctly for the user name and the password for LDAP server authentication.
"Original is being scanned by another function. Switch to the following function, then press the Stop key to cancel scanning or press the Start key to continue."	A function of the machine other than the Facsimile function is being used such as the Document Server function.	Before sending a file by fax, cancel the job in progress. For example, press [Exit], and then press the [Document Server] key. Next, press the [Clear/Stop] key. When the message "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" appears, press [Stop].
"Remove the paper from Copy Tray."	The Copy Tray is full.	Remove the paper. If the other tray is also full, the tray name shown on the display changes. Remove paper from the tray indicated on the display.
"Scanning was stopped as original was misfed. Scanned pages will be deleted, and will not be transmitted."	Original jammed during Memory Transmission.	Press [Exit], and then send the documents again.

Message	Cause	Solution
"Some invalid destination(s) contained. Do you want to select only valid destination (s)?"	The specified group contains fax destinations, e-mail destinations, and/or folder destinations, either of which are incompatible with the specified transmission method.	In the message that appears at each transmission, press [Select].
"The selected file(s) contained file(s) without access privileges. Only file (s) with access privileges will be deleted."	You tried to delete a document for which you do not have permission to delete.	Only the administrator can delete this document. Contact the administrator if you want to delete a document for which you do not have permission to delete.
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated from the network using SmartDeviceMonitor for Admin or Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operation is not possible while this message is displayed.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.

Note

- If "Check whether there are any network problems." appears, the machine is not correctly connected to the network or the settings of the machine are not correct. If you do not need to connect to a network, you can specify the setting so this message is not displayed, and then the [Facsimile] key no longer lights. For details about how to do this, see "Parameter Settings", General Settings Guide. If you reconnect the machine to the network, be sure to set "Display" by configuring the appropriate User Parameter.
- If the paper tray runs out of paper, "There is no paper. Load paper." appears on the display, asking you to add paper. If there is paper left in the other trays, you can receive documents as usual, even if the message appears on the display. You can turn this function on or off with "Parameter Settings". For details about how to do this, see "Parameter Settings", General Settings Guide.
- The Help files for Web Image Monitor are stored on the supplied CD-ROM. Access them from the CD-ROM. You cannot download the Help files from our Web site.

When You Cannot Send or Receive Fax Messages As Wanted

This section describes likely causes of and possible solutions for transmission and reception-related problems.

Transmission/Reception

Problem	Cause	Solution
Both transmission and reception are impossible.	The modular cord may be disconnected.	Make sure the modular cord is correctly connected. See "Connecting the Machine to a Telephone Line and Telephone", General Settings Guide.
Both transmission and reception are impossible.	The terminal adaptor setting is incorrect.	Check the setting.

3

Transmission

Problem	Cause	Solution
Document appears blank at the other end.	The original was placed upside down.	When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ADF, the side to be scanned must face up.
Printed or sent images are spotty.	The ADF, exposure glass or scanning glass is dirty.	Clean them. See p. 173 "Maintaining Your Machine". Make sure ink or correction fluid is dry before placing originals.
Reception is possible, but transmission is impossible.	The terminal adaptor setting is incorrect.	Check the setting.
Transmission failed due to "maximum e-mail size" error.	If the e-mail size specified on the machine is too large, the Internet Fax document cannot be sent.	In [Facsimile Features], under [Send Settings], set [Max. E-mail Size] to [Off], or set the maximum e-mail size to larger value. Then, re-send the document.

Problem	Cause	Solution
<p>When using On Hook Dial or Manual Dial, "Receiving" appears and transmission is not allowed.</p>	<p>If the machine fails to detect the size of the original when [Start] key is pressed, it performs a receiving operation.</p>	<p>Press [Scan Size] in [Scan Settings], select the scan area, and then resend the document.</p> <p>If you use On Hook Dial or Manual Dial frequently, it is recommended that you set "Receive documents by pressing the [Start] key when originals are not set." to "Off" in User Parameters. If this is set to "Off", when using Manual Dial you cannot receive by pressing the [Start] key. For details about how to do this, see "Parameter Settings", General Settings Guide.</p>
<p>LAN-Fax Driver does not work.</p>	<p>The entered login user name, login password, or driver encryption key is incorrect.</p>	<p>Check your login user name, login password, or driver encryption key, and enter them correctly. Contact the administrator.</p>
<p>LAN-Fax Driver does not work.</p>	<p>A high security level is set by the extended security function.</p>	<p>Contact the administrator.</p>
<p>Although a group specification was set for the following, reception was not possible.</p> <p>Receiving Station of Information Box, Forwarding, Forwarding of Special Sender, Reception Report e-mail, Email TX Results, routing e-mail received via SMTP.</p>	<p>The number of specified destinations exceeds the maximum number that can be specified as a group.</p>	<p>A maximum of 500 parties can be specified for a group. Check if there are over the specified numbers registered in the address book. If a group was registered in another group or specified as Receiving Stations 1 to 5 for the Transfer Box, transmission is canceled but an error message does not appear.</p>

Reception


Problem	Cause	Solution
The machine failed to print received fax documents.	If this happened when the Receiving File indicator was lit, low paper may have caused printing to stop.	<ul style="list-style-type: none"> Load paper into the tray. Add toner. For details about Substitute Reception, see "Substitute Reception", Facsimile Reference.
The machine failed to print received fax documents.	In [Facsimile Features], under [Reception Settings], [Store] has been selected for [Reception File Setting].	Print the fax documents using a Web browser or the Print Stored RX File function. See "Printing Received and Stored Documents" and "Viewing, Printing, and Deleting Received Fax Documents Using a Web Image Monitor", Facsimile Reference.
The machine failed to print received fax documents.	Load Paper indicator is lit.	Load paper into the tray. See p.109 "Loading Paper".
Transmission is possible, but reception is impossible.	The terminal adaptor setting is incorrect.	Check the setting.

3

Printing

Problem	Cause	Solution
Print is slanted.	The tray's side fences might not be locked.	Check the side fences are locked. See p.119 "Changing the Paper Size".
Print is slanted.	The paper is fed at a slant.	Load the paper correctly. See p.109 "Loading Paper".
Print is slanted.	The cover of the machine is open.	Check the cover is closed properly.
Misfeeds occur frequently.	The number of feeding in the paper tray exceeds the capacity of the machine.	<ul style="list-style-type: none"> When loading paper into the paper tray, load paper only as high as the upper limit markings on the side fences of the paper. When loading paper on the bypass tray, load only as much paper as can be held between the guides on the bypass tray.

Problem	Cause	Solution
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper only and be sure its storage environment meets the recommended temperature and humidity conditions. For details about recommended paper and the proper way to store it, see "Recommended Paper Sizes and Types" and "Paper Storage", About This Machine.
Copy paper becomes creased.	Printed paper is being used.	Do not use paper that has been already copied or printed onto.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Images are only partially printed.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Black lines appear on the print produced at the destination.	The ADF, exposure glass or scanning glass is dirty.	Clean them. See p.173 "Maintaining Your Machine".
Background of received images appears dirty. Images from the back of the page appear.	Image density is too high.	Adjust the scan density settings. For details about how to change the density, see "Density (Contrast)", Facsimile Reference.

Problem	Cause	Solution
Received image is too light.	When using moist, rough, or processed paper, areas of print may not be fully reproduced.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Received image is too light.	When  is blinking, toner is beginning to run out.	Add toner. See p.130 "Adding Toner".
Received image is too light.	The image density has been set too low.	Increase the scanning density. For details about how to change the density, see "Density (Contrast)", Facsimile Reference.
Received image is too light.	The original of the transmitted fax was printed on paper that is too thin.	Ask the sender to reprint the original on thicker paper and fax it again.

3

Others

Problem	Cause	Solution
All fax documents stored in memory have been lost. Those documents include ones stored through Memory Transmission/Reception, Memory Lock, or Substitute Reception.	When about one hour passes after power to the machine is turned off, all fax documents stored in memory are lost.	If any documents have been lost for this reason, a Power Failure Report is automatically printed when the machine is turned on. If fax documents stored for Memory Transmission have been lost, check the destinations and resend the documents. If fax documents received through Memory, Memory Lock or Substitute Reception have been lost, ask the senders to resend the documents. See p.66 "Turning Off the Main Power / In the Event of Power Failure".
When a correct password is entered, you cannot print documents that appear in the Personal box or Information box, or transmit / print out stored documents.	Documents are locked by a security function if incorrect passwords are entered a certain number of times.	Contact the administrator.

Problem	Cause	Solution
[Prg. Dest.] or [Manual Entry] does not appear.	This function is made unavailable by the enhanced security function.	Contact the administrator.
The following functions are not available: Forwarding, Store File in the Information Box, routing e-mail received via SMTP.	This function is made unavailable by the enhanced security function.	Contact the administrator.
If several destinations are selected for the broadcasting sequence, the data is sent over several transmissions.	Encrypted e-mails are sent to the destinations for which S/MIME authentication is set, and plain text e-mails are sent to the destinations for which S/MIME authentication is not set.	Make sure S/MIME-authentication destinations are separate from plain text destinations. Contact the administrator for details about destination settings.
Cannot print JPEG format files with the Mail to Print function.	Only JFIF files are printable. (JFIF is a JPEG subformat.)	Make sure the files you are trying to print are in JFIF subformat.

When Memory Is Full

This section describes likely causes of and possible solutions for problems related to full memory.

Message	Cause	Solution
"Memory is full. Cannot scan more. Transmission will be stopped."	The memory is full.	If you press [Exit], the machine returns to standby mode and starts transmitting the stored pages.

If an Error Report Is Printed

An Error Report is printed if a document cannot be successfully sent or received.

Possible causes include a problem with the machine or noise on the telephone line. If an error occurs during transmission, resend the original. If an error occurs during reception, ask the sender to resend the document.

★ Important

- If an error happens frequently, contact your service representative.
- The “Page” column gives the total number of pages. The “Page not sent” or “Page not received” column gives the number of pages not sent or received successfully.
- You can display destinations by configuring the appropriate User Parameter. For details about how to do this, see “Parameter Settings”, General Settings Guide.
- You can display sender names by configuring the appropriate User Parameter. For details about how to do this, see “Parameter Settings”, General Settings Guide.

Turning Off the Main Power / In the Event of Power Failure

The following notes concern power failure and turning off the machine.

CAUTION

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

3

Important

- Do not turn off the main power switch while the power indicator is lit or blinking. If you do, the hard disk and memory may be damaged and failure could result.
- Turn off the main power switch before pulling out the plug. If you pull out the plug with the switch on, the hard disk and memory may be damaged and failure could result.
- Make sure 100% is shown on the display before you unplug the machine. If a lower value is shown, some data is currently present in memory.
- Right after a power failure, the internal battery needs to be sufficiently recharged to guard against future data loss. Keep the machine plugged in and the main power switch on for about 24 hours after the power loss.

Even if the main power switch is turned off, the contents of the machine memory (for example, programmed numbers) will not be lost. However, if power is lost for about one hour because the main power switch is turned off, there is a power cut, or the power cable is removed, contents of the Fax memory are lost. Lost items will include any fax documents stored in memory using Memory Transmission/Reception, or Memory Lock.

If a file was deleted from memory, a Power Failure Report is automatically printed as soon as the power is restored.

This report can be used to identify lost files. If a memory stored for Memory Transmission was lost, resend it. If a document received by Memory Reception or Substitute Reception was lost, ask the sender to resend it.

When an Error Occurs Using Internet Fax

This section describes reports that the machine sends if an Internet Fax error occurs.

Error Mail Notification

The machine sends the Error Mail Notification to the sender when it is unable to successfully receive a particular e-mail message. A "cc" of this notification is also sent to the administrator's e-mail address when one is specified.

↓ Note

- You can select to send Error Mail Notification by configuring the appropriate User Parameter. For details about how to do this, see "Parameter Settings", General Settings Guide.
- If Error Mail Notification cannot be sent, the Error Report (E-mail) is printed by the machine.
- If an error occurs when an e-mail is received via SMTP, the SMTP server sends an error e-mail to the originator of the document.

Error Report (E-mail)

The Error Report (E-mail) is printed by the machine when it is unable to send an Error Mail Notification.

Server-Generated Error E-mail

The transmitting server sends this error e-mail to the originator of e-mail that cannot be transmitted successfully (due to reasons such as specifying an incorrect e-mail address).

↓ Note

- After a server-generated error e-mail is printed, the first page of the sent document is printed.

4. Troubleshooting When Using the Printer Function

This chapter describes likely causes of and possible solutions for printer function problems.

Messages Displayed When Installing the Printer Driver

This section describes what to do if a message appears when installing the printer driver.

Message number 58 or 34 indicates that the printer driver cannot be installed using Auto Run. Install the printer driver using [Add Printer] or [Install Printer].

Message number 58 appears if there is a newer version of the printer driver already installed.

4

Windows 2000

This section describes the procedure under Windows 2000.

1. On the [Start] menu, point to [Settings], and then click [Printers].
2. Double-click the Add Printer icon.
3. Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is \DRIVERS\ (RPCS, PCL6, or PCL5C) \XP_VISTA\ (language)\DISK1. If the installer starts, click [Cancel] to quit.

4. Specify a port.

↓ Note

- Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.

Windows XP Professional or Windows Server 2003 /2003 R2

This section describes the procedure under Windows XP Professional or Windows Server 2003 /2003 R2.

1. On the [Start] menu, click [Printers and Faxes].
2. Click [Add a printer].

3. Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is `\DRIVERS\{RPCS, PCL6, or PCL5C}\XP_VISTA\{language}\DISK1`. If the installer starts, click [Cancel] to quit.

4. Specify a port.

Note

- Available ports vary according to your Windows operating system or the type of interface. For details, see “Preparing the Machine”, Printer Reference.

Windows XP Home Edition

4

This section describes the procedure under Windows XP Home Edition.

1. On the [Start] menu, click [Control Panel].
2. Click [Printer and Other Hardware].
3. Click [Printers and Faxes].
4. Click [Add a Printer].
5. Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is `\DRIVERS\{RPCS, PCL6, or PCL5C}\XP_VISTA\{language}\DISK1`. If the installer starts, click [Cancel] to quit.

6. Specify a port.

Note

- Available ports vary according to your Windows operating system or the type of interface. For details, see “Preparing the Machine”, Printer Reference.

Windows Vista

This section describes the procedure under Windows Vista.

1. On the [Start] menu, click [Control Panel].
2. Click [Hardware and Sound].
3. Click [Printers].
4. Click [Add a printer].
5. Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is `\DRIVERS\{RPCS, PCL6, or PCL5C}\XP_VISTA\{language}\DISK1`. If the installer starts, click [Cancel] to quit.

6. Specify a port.

Note

- Available ports vary according to your Windows operating system or the type of interface. For details, see “Preparing the Machine”, Printer Reference.

Windows Server 2008

This section describes the procedure under Windows Server 2008.

1. On the [Start] menu, click [Control Panel].
2. Click [Hardware and Sound].
3. Click [Printers].
4. Click [Add a printer].
5. Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is \DRIVERS\<(RPCS, PCL6, or PCL5E) \XP_VISTA\<(language)\DISK1. If the installer starts, click [Cancel] to quit.

6. Specify a port.

Note

- Available ports vary according to your Windows operating system or the type of interface. For details, see “Preparing the Machine”, Printer Reference.

If USB Connection Fails

This section describes how to troubleshoot a problem related to USB connections.

Problem	Cause	Solution
The machine is not automatically recognized.	The USB cable is not connected properly.	Turn off the power of the machine, reconnect the USB cable, and then turn it on again.
Windows has already configured the USB settings.	Check whether the computer has identified the machine as an unsupported device.	Open Windows' Device Manager, and then, under [Universal Serial Bus controllers], remove any conflicting devices. Conflicting devices have a [!] or [?] icon by them. Take care not to accidentally remove required devices. For details, see Windows Help.

Messages Displayed When Using the Printer Function

This section describes the principal messages that appear on the panel display. If a message not described here appears, act according to the message.

Status Messages

This section describes the machine status messages.

Message	Status
"Hex Dump Mode"	In the Hex Dump mode, the machine receives data in hexadecimal format. Turn off the machine after printing, and then turn back on.
"Job Suspended..."	All jobs in the machine are suspended. Wait a while.
"Offline"	The machine is offline. To start printing, switch the machine online by pressing [Online].
"Please wait."	This message might appear for a second or two while the machine is preparing, performing initial adjustments, or adding toner. Wait a while.
"Ready"	This is the default ready message. The machine is ready for use. No action is required.
"Resetting job..."	The machine is resetting the print job. Wait until "Ready" appears on the display panel.
"Setting change..."	The machine is setting changing. You cannot use the control panel while this message is displayed. Wait a while.
"Waiting..."	The machine is waiting for the next data to print. Wait a while.

4

Messages Displayed on the Control Panel When Using the Printer Function

This section describes likely causes of and possible solutions for the error messages that appear on the control panel.

↓ Note

- Before turning the main power off, see "Turning On/Off the Power", About This Machine.

Message	Cause	Solution
"Authentication has failed."	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed."	The machine cannot perform authentication.	Contact the administrator.
"The tray selected for other pages is the same as the one for Slip Sheets ([Designate]). Cannot print. Check the setting."	The tray selected for other pages is the same as the one for slip sheets.	Reset the job. Be sure the tray you select for slip sheets is not providing paper for other pages.
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated from the network using SmartDeviceMonitor for Admin or Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.

Messages Printed on the Error Logs or Reports

This section describes likely causes of and possible solutions for the error messages that are printed on the error logs or reports.

Message	Cause	Solution
"84: Error"	There is no work area available for image processing.	<ul style="list-style-type: none"> In [Printer Features], under [System], set [Memory Usage] to [Font Priority]. Decrease the number of files sent to the machine.
"85: Error"	The specified graphics library is unavailable.	Check that the data is valid.

Message	Cause	Solution
"86: Error"	Parameters of the control code are invalid.	Set the parameters correctly.
"91: Error"	Printing was canceled by the auto job cancel function due to a command error.	Check that the data is valid.
"92: Error"	Printing was canceled because [Job Reset] or the [Clear/Stop] key was selected on the machine's control panel.	Perform the print operation again if necessary.
"Address Book is currently in use by another function. Authentication has failed."	The machine currently cannot perform authentication because the address book is being used by another function.	Wait a while, and then retry the operation.
"Auto-registration of user information has failed."	Automatic registration of information for LDAP Authentication or Windows Authentication failed because the address book is full.	Contact the administrator.
"Cannot store data of this size."	The paper size exceeded the capacity of the document server.	Reduce the paper size of the file that you want to send to a size that the document server can store. Custom size files can be sent but not stored afterward.
"Collate has been cancelled."	Collate was canceled.	Turn the main power switch off and then back on again. If the message appears again, contact your sales or service representative.

Message	Cause	Solution
"Command Error"	An RPCS command error occurred.	<p>Check using the following procedure:</p> <ul style="list-style-type: none"> • Check if the communication between the computer and the machine is working correctly. • Check if the correct printer driver is being used. • Check if the machine's memory size is set correctly in the printer driver. • Check that the printer driver is the most up-to-date version available.
"Data storage error."	You tried to print a Sample Print, Locked Print, Hold Print, or Stored Print file, or to store a file in the document server when the HDD is malfunctioning.	Contact your service representative.
"Document Server is not available to use. Cannot store."	You cannot use the document server function.	Contact the administrator.
"Duplex has been cancelled."	Duplex printing was canceled.	<ul style="list-style-type: none"> • Select the proper paper size for the duplex function. See "Specifications for the Main Unit", About This Machine. • In [Tray Paper Settings], under "Paper Type: Tray 1-3", set [Apply Duplex] to [Yes].
"Error has occurred."	A syntax error, etc., occurred.	Check that the PDF file is valid.
"Exceeded max. capacity of Document Server. Cannot store."	The HDD became full after a file was stored.	Delete some of the files stored in the document server or reduce the size that you want to send.
"Exceeded max. number of files of Document Server. Cannot store."	The maximum file capacity of the document server was exceeded.	Delete some of the files stored in the document server.

Message	Cause	Solution
"Exceeded max. number of files to print for temporary / stored jobs."	While printing a Sample Print, Locked Print, Hold Print or Stored Print file, the maximum file capacity was exceeded.	Delete unneeded files stored in the machine.
"Exceeded max. number of pages of Document Server. Cannot store."	The maximum page capacity of the document server was exceeded.	Delete some of the files stored in the document server or reduce the number of pages that you want to send.
"Exceeded max. number of pages to print for temporary / stored jobs."	While printing a Sample Print, Locked Print, Hold Print or Stored Print file, the maximum page capacity was exceeded.	Delete unneeded files stored in the machine. Reduce the number of pages to print.
"Exceeded max. pages. Collate is incomplete."	The number of pages exceeds the maximum number of sheets that you can use Collate with.	Reduce the number of pages to print.
"Failed to obtain file system."	PDF direct printing could not be performed because the file system could not be obtained.	In [Printer Features], under [System], set [Memory Usage] to [Font Priority].
"File system is full."	PDF file do not print out because the capacity of file system is full.	Delete all unnecessary files from the hard disk, or decrease the file size sent to the machine.
"HDD is full."	The HDD became full while printing a Sample Print, Locked Print, Hold Print or Stored Print file.	Delete unneeded files stored in the machine. Alternatively, reduce the data size of the Sample Print, Locked Print, Hold Print or Stored Print file.
"HDD is full."	When printing with the PostScript 3 printer driver, the HDD's capacity for fonts and forms has been exceeded.	Delete unneeded forms or fonts registered in the machine.
"Hardware Problem: Ethernet"	An error has occurred in the Ethernet board.	Turn off the main power switch, and back on again. If the message appears again, contact your service representative.

Message	Cause	Solution
"Hardware Problem: HDD"	An error has occurred in the hard disk drive.	Turn off the main power switch, and back on again. If the message appears again, contact your service representative.
"Hardware Problem: USB"	An error has occurred in the USB interface.	Turn off the main power switch, and back on again. If the message appears again, contact your service representative.
"I/O buffer overflow"	An input buffer overflow occurred.	<ul style="list-style-type: none"> • In [Printer Features], under [System], set [Memory Usage] to [Font Priority]. • In [Printer Features], under [Host Interface], select [I/O Buffer], and then set the maximum buffer size to a larger value. • Reduce the number of files being sent to the machine.
"Information for user authentication is already registered for another user."	The user name for LDAP authentication was already registered in a different server with a different ID, and a duplication of the user name occurred due to a switching of domains (servers), etc.	Contact the administrator.
"Insufficient Memory"	A memory allocation error occurred.	On the RPCS printer driver's [Print Quality] tab, open the [Change User Settings...] dialog box, and then, on the [Image Adjustments] tab, specify a lower value for "Gradation" .

Message	Cause	Solution
"Memory Overflow"	The memory is full.	<ul style="list-style-type: none"> On the RPCS printer driver's [Print Quality] tab, open the [Change User Settings...] dialog box, and then, on the [Image Adjustments] tab, specify a lower value for "Gradation". In [Printer Features], under [System], set [Memory Usage] to [Font Priority]. <p>If this message continues to appear after taking these steps, decrease the number of files sent to the machine.</p>
"Memory Retrieval Error"	A memory allocation error occurred.	Turn off the main power switch, and back on again. If the message appears again, replace the RAM.
"No response from the server. Authentication has failed."	A timeout occurred while connecting to the server for LDAP authentication or Windows Authentication.	Check the status of the server.
"Output tray has been changed."	The output tray was changed because the paper size of the specified output tray is limited.	Specify the proper output tray.
"Print overrun."	Images were discarded while printing.	On the RPCS printer driver's [Print Quality] tab, open the [Change User Settings...] dialog box, and then, on the [Image Adjustments] tab, specify a lower value for "Gradation".
"Problem: Printer Font Error"	An error has occurred in the font settings.	Contact your service representative.
"Punch has been cancelled."	Punch printing was canceled.	Check the paper orientation, print orientation, and punch position. Certain settings can produce print results that might not be as expected.
"Receiving data failed."	Data reception was aborted.	Resend the data.

Message	Cause	Solution
"Sending data failed."	The machine received a command to stop transmission from the printer driver.	Check if the computer is working correctly.
"Staple has been cancelled."	Stapling printing was canceled.	Check the paper orientation, paper quantity, print orientation, and staple position. Certain settings can produce print results that might not be as expected.
"The entered password is incorrect."	The password of the encrypted PDF file has been entered incorrectly.	Enter the correct password.
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. memory."	The HDD became full after a file was stored.	Delete the files stored in the document server or reduce the file size to be sent.
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. number of files."	The maximum file capacity of the document server was exceeded.	Delete the files stored in the document server.
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. number of pages per file."	The maximum page capacity of the document server was exceeded.	Delete some of the files stored in the document server or reduce the number of pages that you want to send.
"The selected paper size is not supported. This job has been cancelled."	Job reset is automatically performed if the specified paper size is incorrect.	Specify the correct paper size and print the file again.
"You do not have a privilege to use this function. This job has been cancelled."	The entered login user name or login password is not correct.	Check that the user name and password are correct.
"You do not have a privilege to use this function. This job has been cancelled."	The logged in user is not allowed to use the selected function.	Contact the administrator.

Message	Cause	Solution
"Z-fold error."	Z-folding was canceled.	Check the tray, paper orientation, print orientation, and Z-fold settings again.

If the printing does not start, contact your service representative.

↓ Note

- The contents of errors may be printed on the Configuration Page. Check the Configuration Page in conjunction with the error log. For details about how to print the Configuration Page, see "List / Test Print", General Settings Guide.


Checking the Error Log

If files could not be stored due to printing errors, identify the cause of the errors by checking the error log on the control panel.

★ Important


- The most recent 50 errors are stored in the error log. If a new error is added when there are 50 errors already stored, the oldest error is deleted. However, if the earliest error is a Sample Print, Locked Print, Hold Print, or Stored Print error, it is not deleted. The error is stored separately until the number of errors reaches 30.
- If the main power switch is turned off, the log is deleted.
- You cannot view [Error Log] on the simplified display.

1. Press the [Printer] key to display the printer screen.

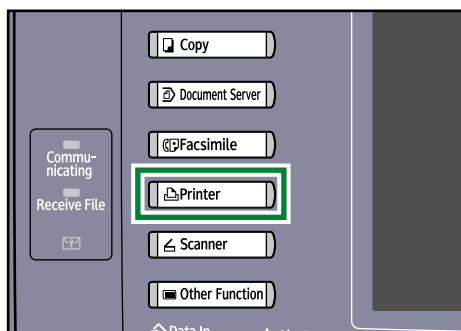

BAZ066S

2. Press [Error Log].

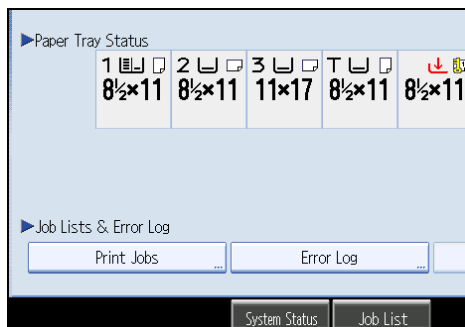

An error log list appears.

4

When You Cannot Print

This section describes what to do if printing does not start even after performing [Print].

Problem	Cause	Solution
Printing does not start.	The power is off.	Check the cable is securely plugged into the power outlet. Turn on the main power switch.
Printing does not start.	The machine is set to "Offline".	Press [Online].
Printing does not start.	The cause is displayed on the display of the control panel.	Check the error message or warning status on the display panel and take the required action.
Printing does not start.	The interface cable is not connected correctly.	Connect the interface cable securely. If it has a fastener, fasten that securely as well. See "Connecting to the Interfaces", General Settings Guide.
Printing does not start.	The correct interface cable is not being used.	The type of interface cable you should use depends on the computer. Be sure to use the correct one. If the cable is damaged or worn, replace it. See "Connecting to the Interfaces", General Settings Guide.
Printing does not start.	The interface cable was connected after the machine was switched on.	Connect the interface cable before turning on the machine.
Printing does not start.	The login user name, login password, or driver encryption key is invalid.	Check the login user name, login password, or driver encryption key.
Printing does not start.	Advanced encryption has been set using the Extended Security function.	Check the settings of the Extended Security function with the administrator.

Problem	Cause	Solution
Data In indicator does not light up or flash.	If the Data In indicator does not light up or flash even after the print job starts, the machine has not received the data.	<ul style="list-style-type: none"> When the machine is connected to a computer via a cable, check the computer print port settings are correct. For details, see p.84 "When the Data In Indicator Does Not Light Up or Flash". When it is networked with a computer, contact the administrator.
[List / Test Print] is disabled.	A mechanical error might have occurred.	Contact your service representative.

If the printing does not start, consult your service representative.

When the Data In Indicator Does Not Light Up or Flash

When the Data In indicator does not light up or flash after starting a print job, data is not being sent to the machine.

When the machine is connected to the computer using the interface cable

This section describes how to check the print port when the Data In indicator does not light up or blink.

Check if the print port setting is correct.

For Windows 2000

1. Click the [Start] button, point to [Settings], and then click [Printers].
2. Click the icon of the machine. On the [File] menu, click [Properties].
3. Click the [Ports] tab.
4. In the [Print to the following port(s)] list, confirm the correct port is selected.

For Windows XP Professional or Windows Server 2003 /2003 R2

1. Click the [Start] button, and then click [Printers and Faxes].
2. Click the icon of the machine. On the [File] menu, click [Properties].
3. Click the [Ports] tab.
4. In the [Print to the following port(s)] list, confirm the correct port is selected.

For Windows XP Home Edition

1. Click the [Start] button, and then click [Control Panel].

2. Click [Printers and Other Hardware].
3. Click [Printers and Faxes].
4. Click the icon of the machine. On the [File] menu, click [Properties].
5. Click the [Ports] tab.
6. In the [Print to the following port(s)] list, confirm the correct port is selected.

For Windows Vista

1. Click the [Start] button, and then click [Control Panel].
2. Click [Printers].
3. Click the icon of the machine. On the [Organize] menu, click [Properties].
4. Click the [Ports] tab.
5. In the [Print to the following port(s)] list, confirm the correct port is selected.

For Windows Server 2008

1. Click the [Start] button, and then click [Control Panel].
2. Click [Hardware and Sound].
3. Click [Printers].
4. Click the icon of the machine. On the [Organize] menu, click [Properties].
5. Click the [Ports] tab.
6. In the [Print to the following port(s)] list, confirm the correct port is selected.


Network connection


Contact the network administrator.

Other Printing Problems

This section describes likely causes of and possible solutions for problems that can occur when printing from a computer.

When you cannot print clearly

Problem	Cause	Solution
The printed image is smudged.	Settings for thick paper have not been made when printing on thick paper in the bypass tray.	<p>PCL 5c/6</p> <p>On the [Paper] tab, select [Bypass Tray] in the [Input Tray:] list, and then select "Thick 1-3" in the [Type:] list.</p> <p>RPCS</p> <p>On the [Setup] tab, select [Bypass Tray] in the [Paper source tray:] list, and then select "Thick 1-3" in the [Paper type:] list.</p>
The printed image is faded over the entire page.	When  is blinking, toner is beginning to run out.	Add toner. See p.130 "Adding Toner".
The printed image is faded over the entire page.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
The printed image is faded over the entire page.	The paper is unsuitable.	Use recommended paper. Printing on coarse or treated paper might result in faint print image. See "Recommended Paper Sizes and Types", About This Machine.
The printed image is faded over the entire page.	If the [Toner saving] check box is selected in the printer driver settings, the entire page will be faded when printed.	On the RPCS printer driver's [Print Quality] tab, clear the [Toner saving] check box.

Problem	Cause	Solution
Images smudge when rubbed. (Toner is not fixed.)	The specified paper type and the paper that is actually loaded might be different. For example, thick paper might be loaded but not specified as the paper type.	<p>PCL 5c/6</p> <p>On the [Paper] tab, select a proper paper type in the [Type:] list.</p> <p>RPCS</p> <p>On the [Setup] tab, select a proper paper type in the [Paper type:] list.</p>
The printed image is different from the image on the computer's display.	With certain functions, such as enlargement and reduction, image layout might be different to that on the computer display.	In the application, change the layout, character size, and character settings.
The printed font is different from the image on the computer's display.	You might have selected to replace TrueType fonts with machine fonts in the printing process.	To print a font similar to that of the computer display, open the [Change User Settings...] dialog box on the RPCS printer driver's [Print Quality] tab, and then, on the [Misc.] tab, select the [Change methods to extract TrueType fonts] check box.
White lines appear.	When  is blinking, toner is beginning to run out.	Add toner. See p.130 "Adding Toner".
When printing graphics, the output and the screen are different.	If the printer driver is configured to use the graphics command, the graphics command from the machine is used to print.	If you want to print accurately, set the printer driver to print without using the graphics command. See the printer driver Help.
Lines of garbled or unwanted alphanumeric characters appear.	An incorrect printer language might have been selected.	Set the correct printer language.
Images are cut off, or excess is printed.	You may be using paper smaller than the size selected in the application.	Use the same size paper as that selected in the application. If you cannot load paper of the correct size, use the reduction function to reduce the image, and then print. See the printer driver Help.

Problem	Cause	Solution
Page layout is not as expected.	Print areas differ depending on machine used. Information that fits on a single page on one machine may not fit on a single page of another machine.	On the RPCS printer driver's [Printer Configuration] tab, adjust the [Printable area:] setting. See the printer driver Help.
Photo images are coarse.	Some applications print at lower gradation.	Use the application's settings to specify a higher gradation.
Fine dot patterns are not printed, or solid lines are printed as broken lines.	Dither patterns do not match.	On the RPCS printer driver's [Print Quality] tab, open the [Change User Settings...] dialog box, and then, on the [Image Adjustments] tab, change the [Dithering:] setting. See the printer driver Help.
Fine lines are fuzzy, of inconsistent thickness or color, or do not appear.	Super fine lines have been specified in the application, or a color that is too light has been specified for the lines.	<p>On the RPCS printer driver's [Print Quality] tab, open the [Change User Settings...] dialog box, and then, on the [Image Adjustments] tab, change the [Dithering:] setting. See the printer driver Help.</p> <p>If the problem continues after you change the dithering settings, use the settings of the application in which the image was created to change the color and thickness of the lines.</p>
Images appear only partially colored.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.

When paper is not fed properly

Problem	Cause	Solution
Paper is not fed from the selected tray.	When you are using a Windows operating system, printer driver settings override those settings using the display panel.	On the RPCS printer driver's [Setup] tab, in the [Paper source tray:] list, select the desired input tray.
Images are printed at a slant.	The tray's side fences might not be locked.	Check the side fences are locked. See p.119 "Changing the Paper Size".
Images are printed at a slant.	The paper is feeding in at a slant.	Load the paper correctly. See p.109 "Loading Paper".
Misfeeds occur frequently.	The number of sheets loaded exceeds the capacity of the machine.	<ul style="list-style-type: none"> • When loading paper into the paper tray, load paper only as high as the upper limit markings on the side fences of the paper. • When loading paper on the bypass tray, load only as much paper as can be held between the guides on the bypass tray.
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper only and be sure its storage environment meets the recommended temperature and humidity conditions. For details about recommended paper and the proper way to store it, see "Recommended Paper Sizes and Types" and "Paper Storage", About This Machine.
Misfeeds occur frequently.	Printed paper is being used.	Do not use paper that has been already copied or printed onto.

Problem	Cause	Solution
Misfeeds occur frequently.	The paper tray's side fences are set too tightly.	Push the side fences lightly, and then reset it. Also, we recommend you set at least 20 sheets of thick paper.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Duplex printing is malfunctioning.	Duplex printing cannot be done with paper set in the bypass tray.	When using duplex printing, make settings to use paper from a tray other than the bypass tray.
Duplex printing is malfunctioning.	You have loaded thick paper heavier than 163 g/m ² .	Specify another paper type.
Duplex printing is malfunctioning.	[Apply Duplex] is set to [No] for "Paper Type: Tray 1-3".	In [Tray Paper Settings], under "Paper Type: Tray 1-3", set [Apply Duplex] to [Yes].

Other printing problems

Problem	Cause	Solution
It takes a long time to complete a print job.	"Sleep mode" might be set.	The machine requires time to warm up if it has been in "Sleep mode". In [System Settings], under [Timer Settings], select [Auto Off Timer], and then specify "Sleep mode".

Problem	Cause	Solution
It takes a long time to complete a print job.	Photographs and other data intensive pages take a long time for the machine to process, so simply wait when printing such data.	<p>If the Data In indicator is blinking, data has been received by the printer. Wait for a moment.</p> <p>Changing the following settings with the printer driver may help speed up printing:</p> <p>PCL 5c/6</p> <p>On the [Print Quality] tab, select [Fast] in the "Gradation" list.</p> <p>RPCS</p> <ul style="list-style-type: none"> On the [Print Quality] tab, select [Speed] in the [Print priority] area. On the [Print Quality] tab, open the [Change User Settings...] dialog box, and then, on the [Image Adjustments] tab, specify a lower value for "Gradation".
Images are printed in the wrong orientation.	The feed orientation you selected and the feed orientation selected in the printer driver's option setup might not be the same.	Set the same settings for both the machine's feed orientation and the feed orientation specified in [Paper source tray settings:] on the printer driver's [Change Accessories] tab.
When using Windows 2000/ XP/ Vista and Windows Server 2003/ 2003 R2, optional components connected to the machine are not recognized.	Bidirectional communication is not working.	<p>Set up optional devices on the Properties of the printer.</p> <p>See the printer driver Help.</p>

Problem	Cause	Solution
When using Windows 2000/ XP/ Vista and Windows Server 2003/ 2003 R2, combined printing, booklet printing, or Auto Reduce / Enlarge printing does not come out as expected.	The correct application or printer driver settings are not made.	Make sure the application's paper size and orientation settings match those of the printer driver. If a different paper size and orientation are set, select the same size and orientation.
A print instruction was issued from the computer, but printing did not start.	User Authentication may have been set.	Contact the administrators.
Images are not printed in the specified colors.	The correct printer driver settings are not made.	If it is only one particular color that does not print, turn off the machine's power, and then turn it back on. If the problem persists, contact your service representative.
Color originals are printed in black and white.	No color print settings are made on the printer driver.	On the printer driver's [Setup] tab, select [Color] in the [Color/Black and White:] list.
PDF files do not print out/ cannot perform PDF direct print.	PDF files are password-protected.	To print password-protected PDF files, enter the password in the [PDF Menu] or on Web Image Monitor. For details, see "Printing a PDF File Directly", Printer Reference, or the Web Image Monitor's Help.
PDF files do not print out/ cannot perform PDF direct print.	PDF files cannot be printed if they are print-disabled in PDF file security setting.	Change the PDF file security setting.
PDF direct print produces strange or malformed characters.	Fonts were not embedded.	Embed fonts in the PDF file you want to print and then print.

If the problem cannot be solved, contact your service representative.

5. Troubleshooting When Using the Scanner Function

This chapter describes likely causes of and possible solutions for scanner function problems.

When Scanning Is Not Done As Expected

This section describes causes and remedies when scan results are not as expected.

Problem	Cause	Solution
The scanned image is dirty.	The exposure glass, scanning glass or ADF is dirty.	Clean them. See p.173 "Maintaining Your Machine".
The image is distorted or out of position.	The original was moved during scanning.	Do not move the original during scanning.
The image is distorted or out of position.	The original was not pressed flat against the exposure glass.	Make sure the original is pressed flat against the exposure glass.
The scanned image is upside down.	The original was placed upside down.	Place the original in the correct orientation. See "Setting of Original Feed Type", Scanner Reference.
No image results from scanning.	The original was placed with the front and back reversed.	When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ADF, the side to be scanned must face up.
Images are scanned in rotated.	If you set the original with its top edge backward and save full color/gray scale images as a TIFF or JPEG file, they are scanned in rotated.	When placing a stack of originals in the ADF, place their top edges first. See "Setting of Original Feed Type", Scanner Reference.

Problem	Cause	Solution
<p>The scanned image contains white spaces.</p>	<p>If you scan originals using functions other than the network TWAIN scanner function, certain paper size and resolution settings may produce scanned images that are larger than the specified size because of margins being added to the sides.</p>	<p>Scanning at a higher resolution may reduce the margins.</p>
<p>After an original is scanned, the following settings are canceled: Destination, Sender, E-mail text, Subject, and File name</p>	<p>To prevent the scanned data being sent to the wrong destination, this machine has a function that cancels the settings once the scanned data is sent.</p>	<p>Contact your service representative.</p>

5

When You Cannot Send Scanned Files

This section describes likely causes of and solutions for problems related to send e-mail.

When Stored Files Cannot Be Accessed

This section describes likely causes of and possible solutions for job access-related problems.

Problem	Cause	Solution
The stored file is locked and is not accessible.	The file, which is password protected, is locked because the password was incorrectly entered ten times.	Contact the administrator.

5

When You Cannot Browse the Network to Send a Scan File

This section describes likely causes of and possible solutions for the network browsing failing to operate when files are sent.

Problem	Cause	Solution
The network cannot be browsed when specifying the destination folder.	The following machine settings may not be correct: <ul style="list-style-type: none"> • IP address • Subnet Mask 	Check the settings. See "Connecting the Machine", General Settings Guide.

When the TWAIN Driver Cannot Be Started

This section describes likely causes of and possible solutions for the TWAIN driver-related problems.

Problem	Cause	Solution
The Scanner Properties dialog box cannot be displayed.	Advanced encryption has been specified in the extended security setting.	For details about the extended security setting, contact an administrator.

When Stored Files Cannot Be Edited

This section describes likely causes of and possible solutions for stored files being unable to be edited.

Problem	Cause	Solution
Stored files cannot be deleted. File names and passwords cannot be changed. Files cannot be redelivered.	Limits have been imposed using the available extended security function.	Contact the administrator.

When S/MIME Cannot Be Used

5

This section describes likely causes of and possible solutions for S/MIME-related problems.

Problem	Cause	Solution
If several destinations are selected for the broadcasting sequence, the data is sent over twice.	Encrypted e-mails are sent to the destinations for which S/MIME authentication is set, and plain text e-mails are sent to the destinations for which S/MIME authentication is not set.	Make sure S/MIME-authentication destinations are separate from plain text destinations. Contact the administrator for details about destination settings.
When putting a signature on an e-mail using S/MIME, an e-mail address for "Sender" is not set for "From".	When S/MIME is applied, the administrator appears in the "From" field, and the sender appears in the "Reply-to" field.	Contact the administrator.

Note

- Using S/MIME makes e-mail larger than when not using S/MIME.

Operations Are Not Possible When Messages Are Displayed

This section describes likely causes of and possible solutions for messages that appear and when the machine fails to operate.

Message	Cause	Solution
"Destination list / machine settings are updated. Selected destinations or function settings have been cleared. Please re-select the settings."	The destination list is being updated from the network using SmartDeviceMonitor for Admin. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.	Wait until the message disappears. Do not switch off the power while this message is displayed.

Messages Displayed When Using the Scanner Function

This section describes likely causes of and possible solutions for error messages that may appear on the machine's control panel and the client computer.

Messages Displayed on the Control Panel When Using the Scanner Function

This section describes likely causes of and possible solutions for the error messages that appear on the control panel.

★ Important

- If a message not described here appears, act according to the message. For details about how to turn off the main power switch, see "Turning On/Off the Power", About This Machine.

5

Message	Cause	Solution
"Authentication has failed."	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed."	The machine cannot perform authentication.	Contact the administrator.
"Authentication with the destination has failed. Check settings. To check the current status, press [Scanned Files Status]."	The entered user name or password was invalid.	<ul style="list-style-type: none"> • Check that the user name and password are correct. • Check that the ID and password for the destination folder are correct. • A password of 128 or more characters may not be recognized.
"Cannot detect original size. Select scan size."	The original placed on the exposure glass is a nonstandard size.	<ul style="list-style-type: none"> • Place the original correctly. • Specify the scan size. • When placing an original directly on the exposure glass, the lifting/lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees.

Message	Cause	Solution
"Cannot find the specified path. Please check the settings."	The destination computer name or folder name is invalid.	Check whether the computer name and the folder name for the destination are correct.
"Captured file exceeded max. number of pages per file. Cannot send the scanned data."	The maximum number of pages per file has been exceeded.	Reduce the number of pages in the transmitted file, and then resend the file. See "Storage function", Scanner Reference.
"Connection with LDAP server has failed. Check the server status."	A network error has occurred and connection has failed. Try the operation once more.	<ul style="list-style-type: none"> • Try the operation once more. If the message is still shown, the network may be crowded. • In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.
"Destinations to which encrypted files will be sent contain users without certificates or with invalid certificates. Check the destinations."	The destination's S/MIME certificates are invalid or cannot be found.	Contact the administrator.
"Destinations to which encrypted files will be sent contain users that could not be verified by the certificates. Check the destinations."	S/MIME certificates are valid, but the Certificate Authority could not be found for the destination.	Contact the administrator.
"Entered user code is not correct."	You have entered an incorrect user code.	Check the authentication settings, and then enter a correct user code.
"Exceeded max. E-mail size. Sending E-mail has been cancelled. Check [Max. E-mail Size] in Scanner Features."	The maximum e-mail size has been exceeded.	<ul style="list-style-type: none"> • In [Scanner Features], under [Send Settings], increase the size of [Max. E-mail Size]. • In [Scanner Features], under [Send Settings], set [Divide & Send E-mail] to [Yes (per Page)] or [Yes (per Max. Size)].

Message	Cause	Solution
"Exceeded max. No. of results to display. Max.: n" (A figure is placed at n.)	Search results have exceeded the max. displayable number.	Search again after changing the search conditions.
"Exceeded max. data capacity. Check scanning resolution, then press Start key again."	The scanned data exceeded maximum data capacity.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. See "Relationship between Resolution and Scan Size", Scanner Reference.
"Exceeded max. data capacity. Check the scanning resolution, then reset original (s)."	The scanned original exceeded maximum data capacity.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. See "Relationship between Resolution and Scan Size", Scanner Reference.
"Exceeded max. number of alphanumeric characters for the path."	The maximum number of specifiable alphanumeric characters in a path has been exceeded.	The maximum number of characters which can be entered for the path is 256. Check the number of character you entered, and then enter the path again.
"Exceeded max. number of alphanumeric characters."	The maximum enterable number of alphanumeric characters has been exceeded.	Make sure the maximum number of characters which can be entered, and then enter it again. See "Values of Various Set Items for Transmission/Storage Function", Scanner Reference.
"Exceeded max. number of files which can be sent at the same time. Reduce the number of the selected files."	The number of files exceeded the maximum number possible.	Reduce the number of files and send them again.
"Exceeded max. number of files which can be used in Document Server at the same time."	The maximum number of files that can be stored in the document server has been exceeded.	Check the files stored by the other functions, and then delete unneeded files. For details about how to delete files, see "Document Server", Copy/Document Server Reference.

Message	Cause	Solution
"Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?"	The file being stored has exceeded the max. number of pages for one file.	Specify whether to store the data or not. Scan the pages that were not scanned and store them as a new file. See "Storing Files Using the Scanner Function", Scanner Reference.
"Exceeded max. number of standby files. Try again after the current file is sent."	The maximum number of standby files was exceeded.	There are 100 files waiting in the sending queue for e-mail, folder, or delivery functions. Wait until files have been sent.
"Exceeded max. number of stored files. Cannot send the scanned data as capturing files is unavailable."	Too many files are waiting to be delivered.	Please try again after they have been delivered.
"Exceeded maximum number of file to store. Delete all unnecessary files."	Too many files are waiting to be delivered.	Please try again after they have been delivered.
"Exceeded time limit for LDAP server search. Check the server status."	A network error has occurred and connection has failed.	<ul style="list-style-type: none"> Try the operation once more. If the message is still shown, the network may be crowded. In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.
"Invalid certificates or no S/MIME certificates were found."	The destination's S/MIME certificates are invalid or cannot be found.	Contact the administrator.
"LDAP server authentication has failed. Check the settings."	The user name and password differ from those set for LDAP Authentication.	In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.

Message	Cause	Solution
"Memory is full. Cannot scan. The scanned data will be deleted."	Because of insufficient hard disk space, the first page could not be scanned.	Try one of the following measures: <ul style="list-style-type: none"> • Wait for a while, and then retry the scan operation. • Reduce the scan area or scanning resolution. See "Items for Specifying Scan Settings", Scanner Reference. • Delete unneeded stored files. See "Deleting a Stored File", Scanner Reference.
"Memory is full. Do you want to store scanned file?"	Because there is not enough free hard disk space in the machine for storing in the Document Server, only some of the pages could be scanned.	Specify whether to use the data or not.
"Memory is full. Scanning has been cancelled. Press [Send] to send the scanned data, or press [Cancel] to delete."	Because there is not enough free hard disk space in the machine for sending by e-mail while storing in the Document Server, only some of the pages could be scanned.	Specify whether to use the data or not.
"No paper. Load paper of one of the following sizes."	No paper is set in the specified paper tray.	Load paper of the sizes listed in the message. See p.109 "Loading Paper".
"Original is being scanned by another function. Switch to the following function, then press the Stop key to cancel scanning or press the Start key to continue."	A function of the machine other than the Scanner function is being used such as the Copier function.	Cancel the job in progress. For example, press [Exit], and then press the [Copy] key. Next, press the [Clear/Stop] key. When the message "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" appears, press [Stop].
"Output buffer is full. Sending the data has been cancelled. Please try again later."	Too many jobs are in standby state, and sending was canceled.	Retry sending after sending jobs in standby state completes.

Message	Cause	Solution
"SMTP authentication E-mail address and Administrator E-mail address mismatch."	The SMTP authentication e-mail address and the administrator's e-mail address do not match.	Contact the administrator.
"Selected file is currently in use. Cannot change file name."	You cannot change the name of a file whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the file name.
"Selected file is currently in use. Cannot change password."	You cannot change the password of a file whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the password.
"Selected file is currently in use. Cannot change user name."	You cannot change the sender's name whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the user name.
"Sending the data has failed. The data will be resent later."	A network error has occurred and a file was not sent correctly.	Wait until sending is retried automatically after the preset interval. If sending fails again, contact the network administrator.
"Some invalid destination(s) contained. Do you want to select only valid destination (s)?"	The specified group contains e-mail destinations and Scan to Folder destinations, either of which are incompatible with the specified transmission method.	In the message that appears at each transmission, press [Select].
"Some of selected files are currently in use. They could not be deleted."	You cannot delete a file which is waiting to be transmitted ("Waiting..." status displayed) or whose information is being changed with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then delete the file.

Message	Cause	Solution
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the authority to do so.	The files can be deleted by the file administrator. To delete a file which you are not authorized to delete, contact the administrator.
"Transmission has failed. Insufficient memory in the destination hard disk. To check the current status, press [Scanned Files Status]."	Transmission has failed. There was not enough free space on the hard disk of the SMTP server, FTP server, or client computer at the destination.	Allocate sufficient space.
"Transmission has failed. To check the current status, press [Scanned Files Status]."	While a file was being sent, a network error occurred and the file could not be sent correctly.	Try the operation once more. If the message is still shown, the network may be crowded. Contact the network administrator. If multiple files were sent, use the Scanned Files Status screen to check for which file the problem occurred.
"Updating the destination list has failed. Try again?"	A network error has occurred.	Check whether the server is connected.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.

5

Messages Displayed on the Client Computer

This section describes likely causes of and possible solutions for the main error messages displayed on the client computer when using the TWAIN driver.

★ Important

- If a message not described here appears, act according to the message. For information about how to turn off the main power switch, see "Turning On/Off the Power", About This Machine.

Message	Cause	Solution
"Any of Login User Name, Login Password or Driver Encryption Key is incorrect."	The entered login user name, password, or driver encryption key was invalid.	<ul style="list-style-type: none"> • Check the login user name, login password, and driver encryption key. • Permission to use this function has not been granted. Contact the administrator.
"Call Service" "Please call your service representative."	An unrecoverable error has occurred in the machine.	Contact your service representative.
"Cannot add any more scanning mode."	The maximum number of registerable scan modes has been exceeded.	The maximum number of modes that can be stored is 100. Delete unneeded modes.
"Cannot connect to the scanner. Check the network Access Mask settings in User Tools."	An access mask is set.	Contact the network or scanner administrator.
"Cannot detect the paper size of the original. Specify the scanning size."	The set original was misaligned.	<ul style="list-style-type: none"> • Place the original correctly. • Specify the scan size. • When placing an original directly on the exposure glass, the lifting/ lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees.
"Cannot find "XXX" scanner used for the previous scan. "YYY" will be used instead." (“XXX” and “YYY” indicate scanner names.)	The main power switch of the previously used scanner is not set to “On”.	Check whether the main power switch of the scanner used for the previous scan is turned on.

Message	Cause	Solution
"Cannot find "XXX" scanner used for the previous scan. "YYY" will be used instead." (“XXX” and “YYY” indicate scanner names.)	The machine is not connected to the network correctly.	<ul style="list-style-type: none"> • Check the previously used scanner is connected to the network correctly. • Cancel the Personal Firewall of the client computer. For details, see Windows Help. • Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. See “Connecting the Machine”, General Settings Guide and “Using telnet”, Network Guide. • Select the scanner used for the previous scan.
"Cannot specify any more scanning area."	The maximum number of registerable scan areas has been exceeded.	The maximum number of scanning areas that can be stored is 100. Delete unneeded scanning area.
"Clear Misfeed(s) in ADF."	A paper misfeed has occurred inside the ADF.	<ul style="list-style-type: none"> • Remove jammed originals, and place them again. For details, see p.139 "Removing Jammed Paper". • Check whether the originals are suitable to be scanned by the machine.
"Communication error has occurred on the network."	A communication error has occurred on the network.	Check whether the client computer can use the TCP/IP protocol.
"Error has occurred in the scanner driver."	An error has occurred in the driver.	<ul style="list-style-type: none"> • Check whether the network cable is connected correctly to the client computer. • Check whether the Ethernet board of the client computer is recognized correctly by Windows. • Check whether the client computer can use the TCP/IP protocol.

Message	Cause	Solution
"Error has occurred in the scanner."	The application-specified scan conditions have exceeded the setting range of the machine.	<ul style="list-style-type: none"> • Check whether the scanning settings made with the application exceed the setting range of the machine. • Disable the client computer's own firewall. For details, see Windows Help.
"Fatal error has occurred in the scanner."	An unrecoverable error has occurred on the machine.	An unrecoverable error has occurred in the machine. Contact your service representative.
"Insufficient memory. Close all other applications, then restart scanning."	Memory is insufficient.	<ul style="list-style-type: none"> • Close all the unnecessary applications running on the client computer. • Uninstall the TWAIN driver, and then reinstall it after restarting the computer.
"Insufficient memory. Reduce the scanning area."	Scanner memory is insufficient.	<ul style="list-style-type: none"> • Reset the scan size. • Lower the resolution. • Set with no compression. See TWAIN Driver help. <p>The problem may be due to the following cause:</p> <ul style="list-style-type: none"> • Scanning cannot be performed if large values are set for brightness when using halftone or high resolution. See "Relationship between Resolution and Scan Size", Scanner Reference.
"Invalid Winsock version. Please use version 1.1 or higher."	You are using an invalid version of Winsock.	Install the operating system of the computer or copy Winsock from the operating system CD-ROM.
"No User Code is registered. Consult your system administrator."	Access is restricted with user codes.	Contact the administrator of the machine.

Message	Cause	Solution
"No response from the scanner."	The machine or client computer is not connected to the network correctly.	Check whether the machine or client computer is connected to the network correctly.
"No response from the scanner."	The network is crowded.	Wait for a while, and then try to reconnect.
"Scanner is in use for other function. Please wait."	A function of the machine other than the Scanner function is being used such as the Copier function.	<ul style="list-style-type: none"> • Wait for a while and reconnect. • Cancel the job in progress. For example, press [Exit], and then press the [Copy] key. Next, press the [Clear/Stop] key. When the message "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" appears, press [Stop].
"Scanner is not available on the specified device."	The TWAIN scanner function cannot be used on this machine.	Contact your service representative.
"Scanner is not available. Check the scanner connection status."	The machine's main power switch is off.	Set the main power switch to "On".
"Scanner is not available. Check the scanner connection status."	The machine is not connected to the network correctly.	<ul style="list-style-type: none"> • Check whether the machine is connected to the network correctly. • Deselect the personal firewall function of the client computer. For details, see Windows Help. • Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. See "Connecting the Machine", General Settings Guide and "Using telnet", Network Guide.
"Scanner is not ready. Check the scanner and the options."	The ADF cover is open.	Check whether the ADF cover is closed.
"The name is already in use. Check the registered names."	You tried to register a name that is already in use.	Use another name.

6. Adding Paper, Toner and Staples

This chapter describes troubleshooting procedures that are applicable to all the machine's functions.

Loading Paper

This section describes what to do when paper runs out and needs reloading.

CAUTION

- When loading paper, take care not to trap or injure your fingers.

Tray 1 and LCT use $8\frac{1}{2} \times 11$ paper exclusively. Load only $8\frac{1}{2} \times 11$ paper at all times.

Note

- Fan the paper before loading.
- Straighten curled or warped paper before loading.
- If you want to load paper other than $8\frac{1}{2} \times 11$ paper in tray 1 or LCT, contact your service representative.
- For details about paper sizes and types, see "Recommended Paper Sizes and Types", About This Machine.
- To load paper in the bypass tray, see "Copying from the Bypass Tray", Copy/Document Server Reference.


Loading Paper into Tray 1 (Tandem Tray)

This section describes how to load paper into tray 1.

Important

- When paper loaded in the right side of tray 1 runs out, paper on the left is automatically shifted to the right. While the paper is moving, a message instructing you to wait appears. Do not pull out the tray at this time.
- You can load paper even while making copies from tray 1. You can pull out the left side of tray 1 while copying is in.
- For the right side of tray 1, align the right edge of the paper with the right edge of the tray. For the left side of tray 1, align the left edge of the paper with the left edge of the tray.
- Tray 1 uses $8\frac{1}{2} \times 11$ paper. If you want to load A4 paper, contact your service representative.
- Each tray can hold up to 1,100 sheets of paper. Do not stack paper over the limit mark.


1. Carefully pull out the paper tray until it stops.

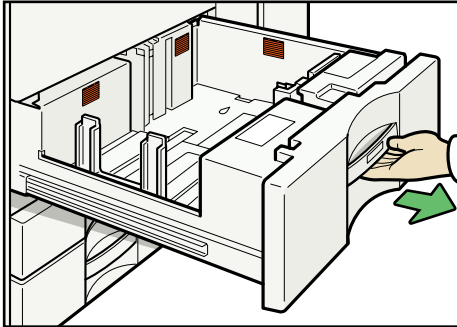

BAZ001S


2. Square the paper and place it print side down.

- Whole tray pulled out

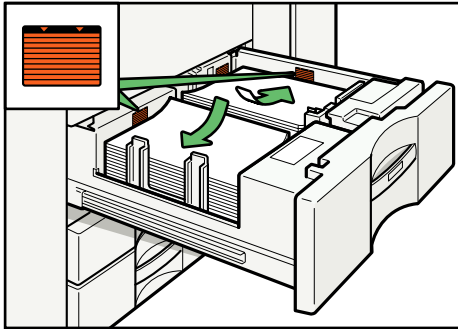

BAZ002S

- Left half of the tray pulled out

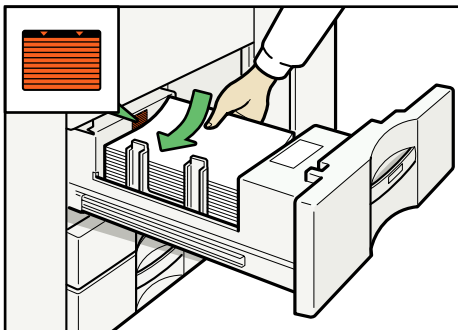

BAZ003S

3. Carefully push the paper tray fully in.


Loading Paper into the A3/11 × 17 Tray Unit

This section describes how to load paper into the A3/11 × 17 tray unit. To use the A3/11 × 17 tray unit, you must replace tray 1.

★ Important


- Make sure the paper stack is flush to the right side fence.
- The tray can hold up to 1,100 sheets of paper. Do not stack paper over the limit mark.

1. Carefully pull out the paper tray until it stops.

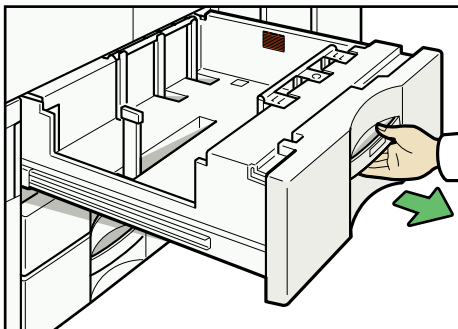

BAZ016S

2. Place the paper print side down along the edge on the left.

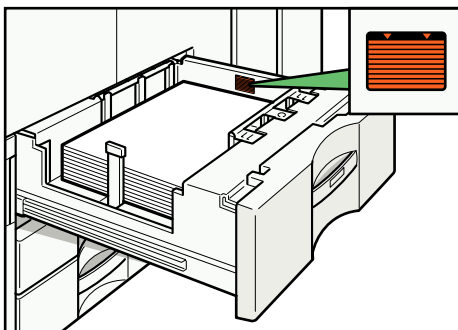

BAZ017S

3. Carefully slide the paper tray fully in.

Loading Paper into Tray 2 and 3


This section describes how to load paper into tray 2 and 3.

★ Important

- Various sizes of paper can be loaded in tray 2 and 3 by adjusting the positions of side fences and end fence.
- Check the paper edges are aligned with the right side.


- Each tray can hold up to 550 sheets of paper. Do not stack paper over the limit mark.

1. Carefully pull out the paper tray until it stops.

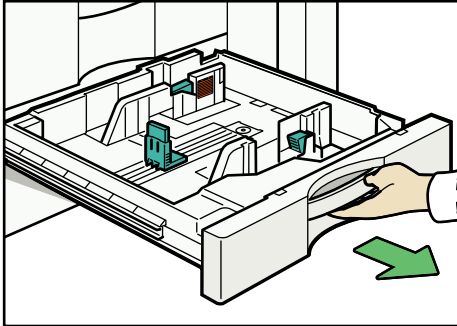

BAZ004S

2. Square the paper and load it print side down.

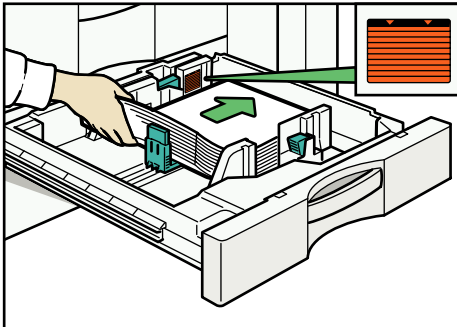

BAZ005S

3. Carefully push the paper tray fully in.


Loading Paper into the Large Capacity Tray

This section describes how to load paper into the LCT. The LCT is identified as tray 4.

★ Important

- LCT uses 8 1/2 × 11" paper exclusively. If you want to load A4" or B5 JIS", contact your service representative.
- Align the paper stacks and load them against the left and right walls, or a paper misfeed might occur.
- The tray can hold up to 4,000 sheets of paper. Do not stack paper over the limit mark.


1. Open the top cover of the LCT.

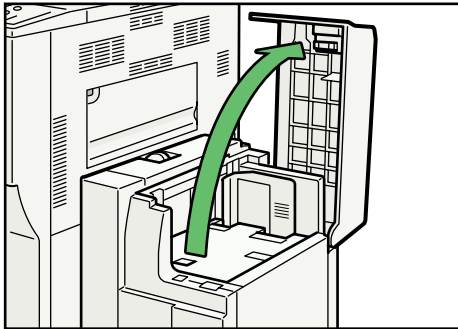

BAY008S

2. Load the paper in the tray along the edge on the left.


Load the paper print side up.

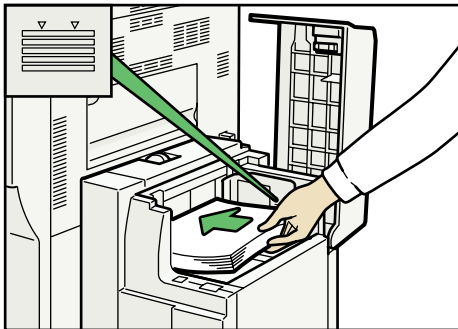

BAY009S

3. Press the [Down] key.

The key blinks while the bottom plate is moving down.

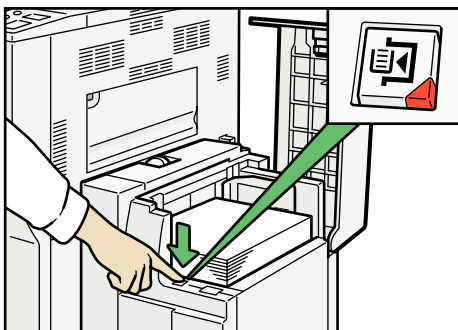

BAY010S

4. Load paper by repeating steps 2 and 3.

5. Close the top cover of LCT.


Loading Paper into the Wide Large Capacity Tray

This section describes how to load paper into the Wide LCT.

★ Important

- Various regular sizes of paper can be loaded in the Wide LCT by adjusting the positions of side fences and end fence.
- Check that the paper edges are aligned with the left side.
- The tray can hold up to about 2,000 sheets of paper. Do not stack paper over the limit mark.


1. Carefully pull out the paper tray until it stops.

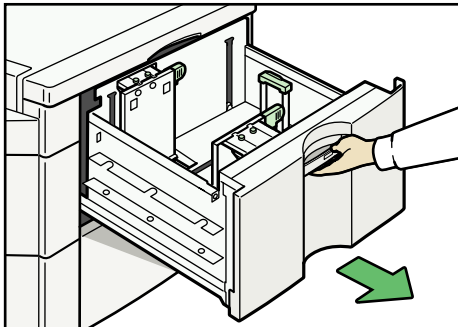

BAZ018S

2. Load paper into the paper tray by pushing the paper to the left side of the paper tray.

Place paper with printing side up.

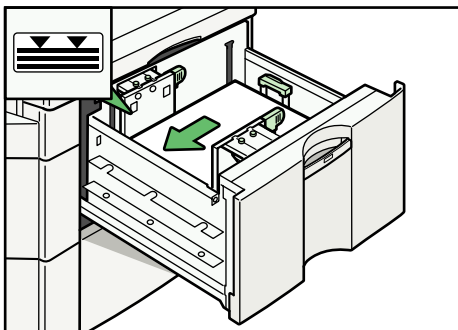

BAZ019S

3. Carefully slide the paper tray fully in.


Loading Paper into the Interposer

This section describes how to load paper into the interposer.

★ Important


- Load paper on the side already printed (the front side). If you are using the Booklet Finisher (Saddle Stitch), load sheets print side down.
- Load paper in the interposer in the same orientation as paper in the paper tray.
- The staple or punching location will be on the left side of the paper, when you are facing the machine.
- Do not place anything on top of or leave documents on the sensor. This may lead to the paper size not being correctly scanned or paper jams.
- When using the Z-fold function, the paper in the interposer must be the same size as the prints after they have been Z-folded. If the paper in the interposer is larger than the Z-folded sheets, a misfeed might occur.
- The tray can hold up to 200 sheets of paper. Do not stack paper over the limit mark.

1. Load paper orderly.

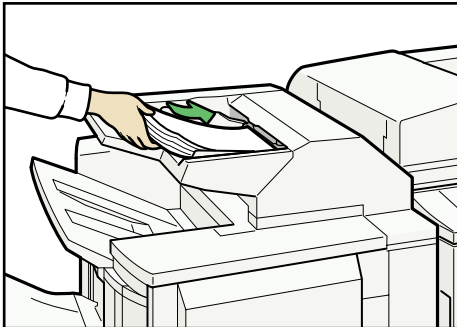

BAY029S


2. Adjust the side fences to the paper size.

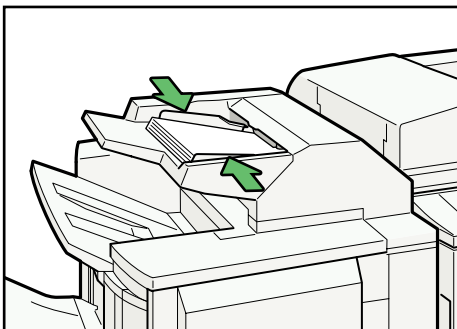

BAY030S

↓ Note

- To set the paper in the interposer, align the orientation of originals in the ADF as shown below.

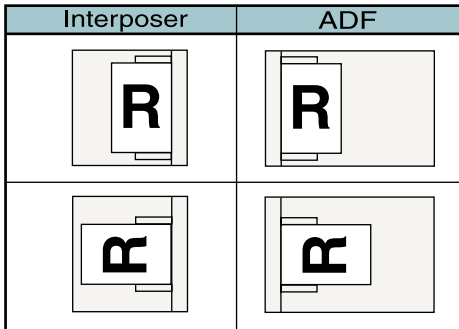

BAZ024S


Loading Paper into the Twin Interposer

This section describes how to load paper into the twin interposer.

★ Important


- Load paper on the side already printed (the front side). If you are using the Booklet Finisher (Saddle Stitch), load sheets print side down.
- Load paper in the twin interposer in the same orientation as paper in the paper tray.
- The staple or punching location will be on the left side of the paper, when you are facing the machine.
- Do not place anything on top of or leave documents on the sensor. This may lead to the paper size not being correctly scanned or paper jams.
- When using the Z-fold function, the paper in the twin interposer must be of the same size as the prints after they have been Z-folded. If the paper in the twin interposer is larger than the Z-folded sheets, a misfeed might occur.
- Each tray can hold up to 200 sheets of paper. Do not stack paper over the limit mark.

1. While pressing the release lever, align the side fences with the paper size to be loaded.

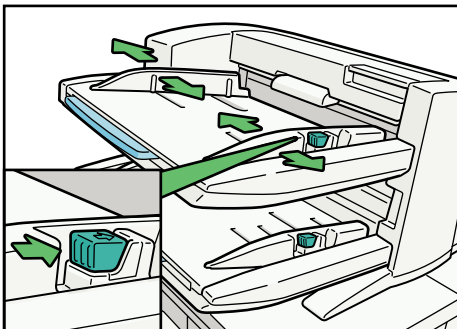

BAY031S

2. Load paper orderly. Tightly fit the side fences to the loaded paper.

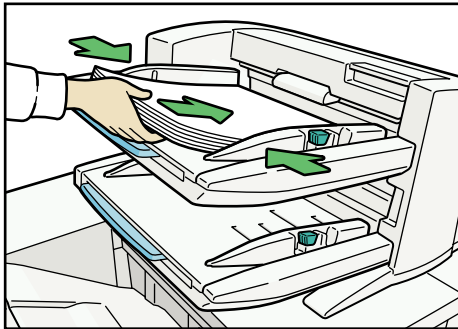

BAY032S

When loading paper larger than A4, draw out the paper extender.

↓ Note

- To set the paper in the twin interposer, align the orientation of originals in the ADF as shown below.

Twin Interposer	ADF






BAZ025S

Orientation-Fixed Paper or Two-Sided Paper










 




This section describes loading paper that has a specified orientation and printing side (such as letterhead paper).

Orientation-fixed (top to bottom) or two-sided paper (for example, letterhead paper, punched paper, or copied paper) might not print correctly, depending on how the originals and paper are placed. Set [Letterhead Setting] to [Yes] in [Input / Output] under [Copier / Document Server Features], and then place the original and paper as shown below. For details about Letterhead Setting, see “Copier/Document Server Features”, General Settings Guide. When printing with the printer function, placement orientation is the same.

Original Orientation

Exposure glass		ADF	
	<ul style="list-style-type: none"> • copy  • scanner  		

 Paper Orientation

Copier mode		Tray 1, 2, 3	Large Capacity Tray (LCT)	Wide Large Capacity Tray (LCT)	Bypass Tray
	1 Sided				 *1
	2 Sided				—
	1 Sided		—		 *1
	2 Sided		—		—

*1 Select paper size.
BAZ015S

Changing the Paper Size

This section describes how to change the paper size.

↓ Note

- Be sure to select the paper size with User Tools. If you do not, misfeeds might occur. For details about Tray Paper Size: Tray2-3, see “System Settings”, General Settings Guide.
- Tray 1 and LCT (optional) use only $8\frac{1}{2} \times 11$ paper. If you want to load A4 in tray 1, or A4 or B5 JIS in LCT, contact your service representative.
- Fan the paper before loading.
- Straighten curled or warped paper before loading.
- For details about paper sizes and types, see “Recommended Paper Sizes and Types”, About This Machine.

Changing the Paper Size in Tray 2 and 3

This section describes how to change the paper size in tray 2 and 3.


★ Important

- If a paper tray is pushed vigorously when putting it back into place, the position of the tray's side fences may slip out of place.
- Do not stack paper over the limit mark.
- Check that the top of the paper is aligned with the right side.
- Slide the side fences until they are aligned with the paper size, and then re-lock the side fences.

Adjusting the paper tray for regular size paper


This section describes how to adjust the paper tray so that it can accommodate regular size paper.

1. Check that paper in the paper tray is not being used, and then pull the tray carefully out until it stops.

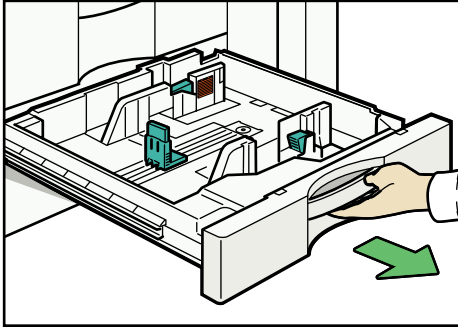


BAZ004S

2. Remove paper if loaded.
3. Release the lock on the side fences.

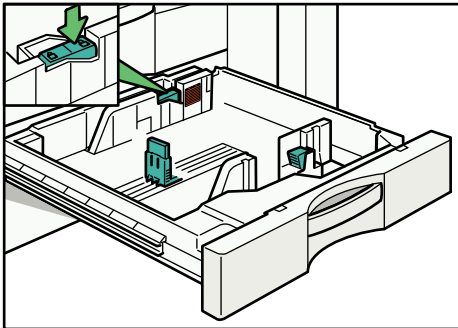

BAZ006S

4. While pressing down the release lever, slide the side fences until they are aligned with the paper size you want to load.

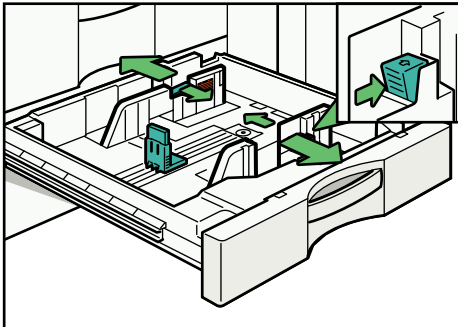

BAZ007S

5. While pinching the sides of the end fence, slide it a little to release the lock.




6. Slide the end fence into position according to the paper size you want to load.



7. Repeat steps 5 and 6 until the end fence is aligned with the paper size you want to load.
8. Square the paper and load it print side down.

Re-lock the side fence again.

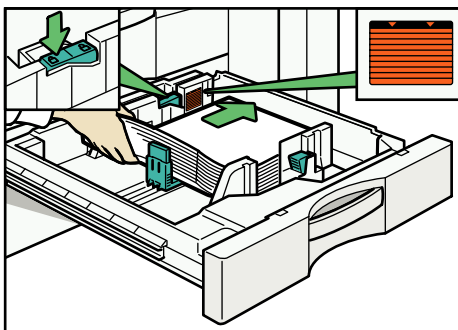

9. Carefully slide the paper tray fully in.
10. Check the size on the display.


Adjusting the paper tray for custom size paper

This section describes how to adjust the paper tray so that it can accommodate custom size paper.

Note

- To make "Custom Size" selectable in [Tray Paper Settings] under [System Settings], contact your service representative.

1. Check that paper in the paper tray is not being used, and then pull the tray carefully out until it stops.

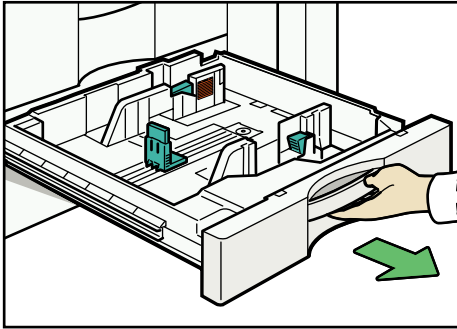


BAZ004S

2. Remove paper if loaded.
3. Release the lock on the side fences.



BAZ006S

4. While pressing down the release lever, slide the side fences until they are aligned with the paper size you want to load.

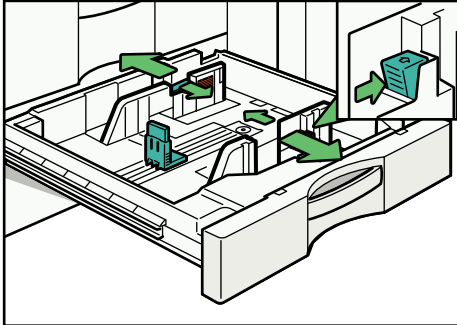

BAZ007S

5. While pinching the sides of the end fence, slide it a little to release the lock.




BAZ008S

6. While pinching the sides of the end fence, slide it into position according to the paper size you want to load.



BAZ073S


7. Pull up on the end fence to secure it at the required position.

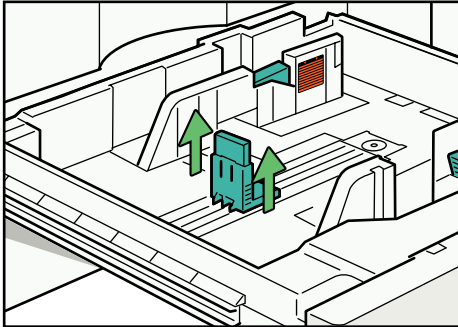

BAZ074S

8. Square the paper and load it print side down.

Re-lock the side fence again.

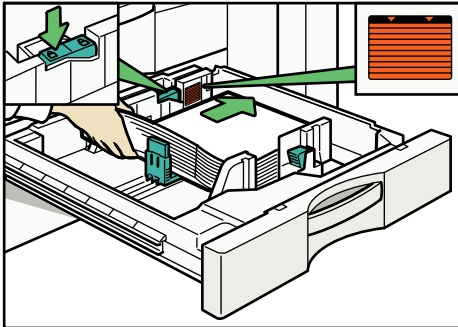

BAZ009S

9. Carefully slide the paper tray fully in.

10. Check the size on the display.


6

Changing the Paper Size in the Wide Large Capacity Tray

This section describes how to change the paper size in the Wide LCT.


★ Important

- Check that the paper edges are aligned with the left side.
- Do not stack paper over the limit mark.
- When loading tab stock, set the tab sheet fence in the Wide LCT.

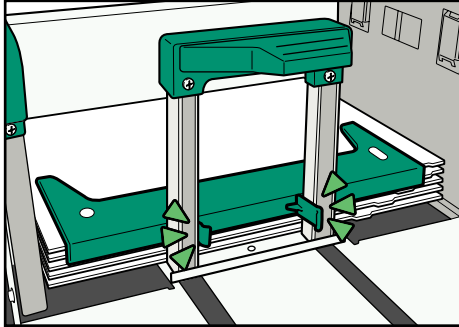


BAS177S

- When loading paper size which is smaller than that of envelope, set the Postcard Side Fence in the Wide LCT.

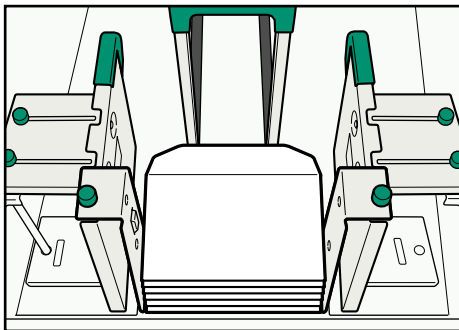


BAT178S

1. Carefully pull out the paper tray until it stops.

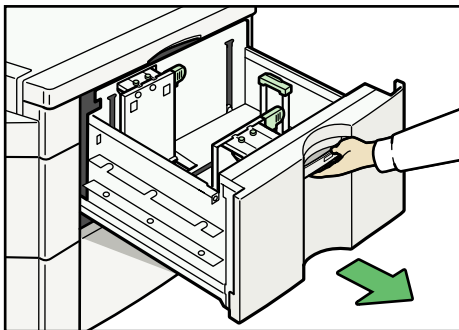


BAZ016S

2. Pull out the screws fixing the side fences.

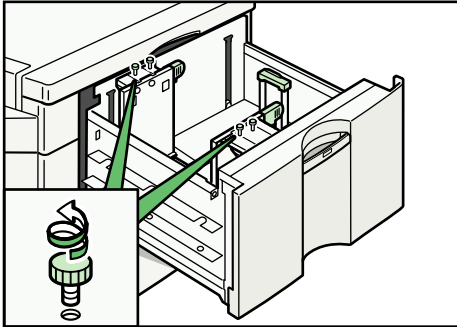


BAZ020S

3. Take the grip of the side fences with your fingers, and adjust the side fences to the paper size.

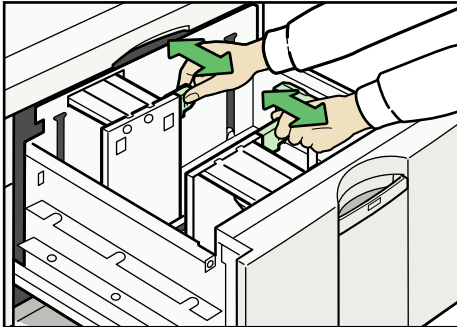


BAZ021S

4. Fasten the side fences with the screws.

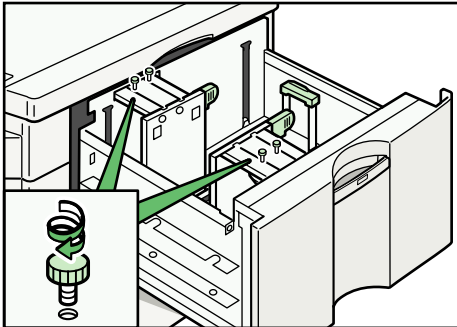


BAZ022S


5. Release the lock on the back fence.

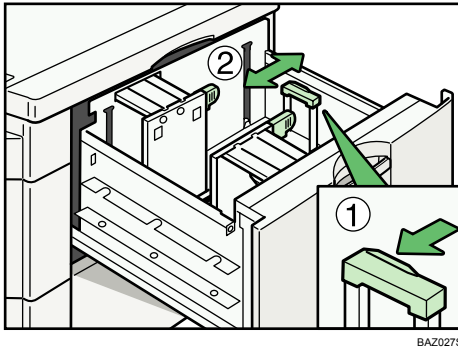

6. Square the paper and set it print side up.

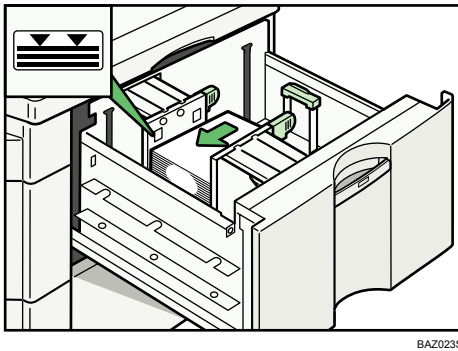

7. Tightly fit the back fence to the loaded paper and then re-lock the back fence again.

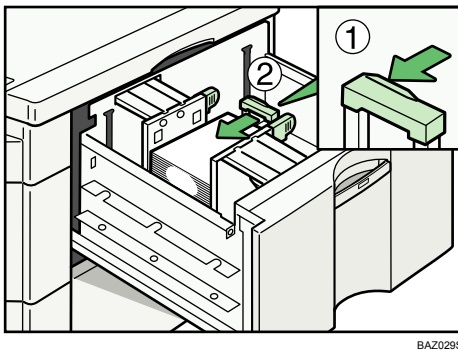


8. Carefully slide the paper tray fully in.
9. Check the size on the display.

Changing to a Size That Is Not Automatically Detected


If you load a paper size that is not selected automatically, you need to specify the paper size with the control panel. This section describes how to load such paper.

1. Press the [User Tools / Counter] key.

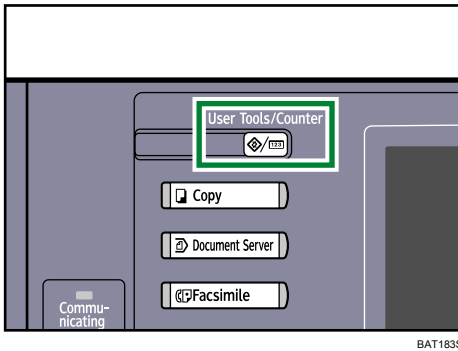


BAT183S

2. Press [System Settings].
3. Press [Tray Paper Settings] tab.

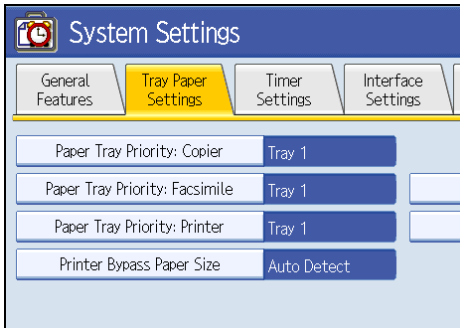


4. Select the tray for which you want to change the paper settings.


Press either of [Tray Paper Size: Tray 2] to [Tray Paper Size: Tray 3].

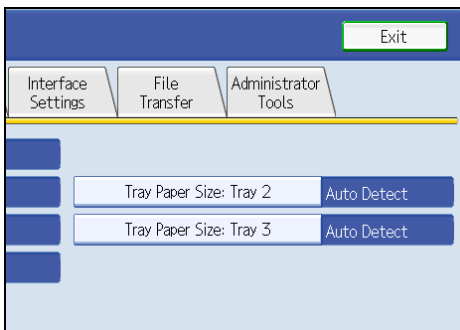

5. Select the loaded paper size and feed direction, and then press [OK].

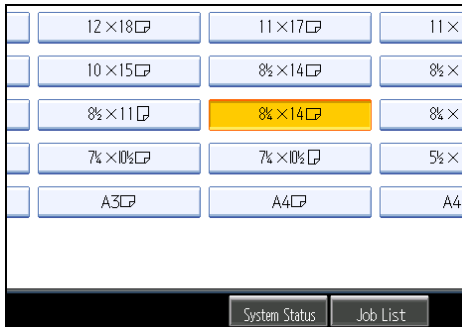

The set paper size and feed direction is displayed.

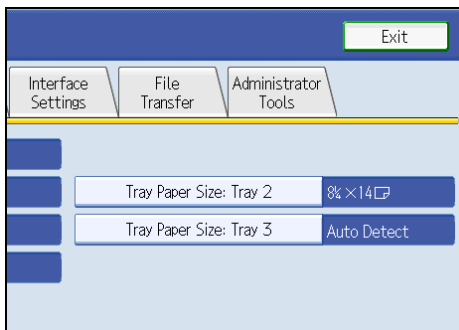

6. Press the [User Tools / Counter] key.

The initial display is shown.

Note

- To make "Custom Size" selectable, contact your service representative.
- For details about paper sizes selected automatically, see "Recommended Paper Sizes and Types", About This Machine.
- If you want to print on paper that is selected automatically after printing on a paper size that is not selected automatically, you must return the setting to "Auto Detect". Reload the paper, and select "Auto Detect" in step 5. The setting is returned to "Auto Detect".

Adding Toner

This section describes how to add and store toner.

WARNING

- Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

CAUTION

- Keep toner (used or unused) and toner containers out of reach of children.

CAUTION

- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.

CAUTION

- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

CAUTION

- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.

CAUTION

- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.

CAUTION

- Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

CAUTION

- Do not open toner containers forcefully. Toner can spill, dirtying your clothes or hands, and possibly resulting in accidental ingestion.

★ Important

- Fault may occur if you use toner other than the recommended type.
- When adding toner, do not turn off the operation switch. If you do, settings will be lost.
- Always add toner when the machine instructs you.

↓ Note

- You can still make about 10 to 600 copies after the messages "Toner Cartridge is almost empty." and "Replace Toner Cartridge." appear cyclically, but replace toner soon to prevent poor copy quality.
- You can check name of the required toner name and the replacement procedure using the "Add Toner" screen.
- Press [System Status] to check contact number where you can order supplies. See "Checking Machine Status and Settings".
- You can add all four color toners in the same way.

📖 Reference


- p.11 "Checking Machine Status and Settings"

Replacing Toner


This section describes how to replace toner.

★ Important


- Do not shake the removed toner cartridge. The remaining toner might scatter.
- Do not install and remove the toner cartridge over and over. This could result in a toner leak.

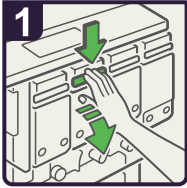


- Open the front cover of the machine.
- Pull down the hook of the case containing the toner cartridge to be replaced, and then pull out the case.

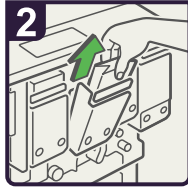


- Holding the toner cartridge with the other hand, pull the cartridge up and out slowly.

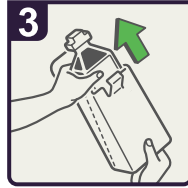

- Take out the new toner cartridge from the box.

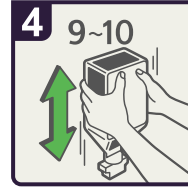

- Hold the toner cartridge mouth downward and shake it nine or ten times.

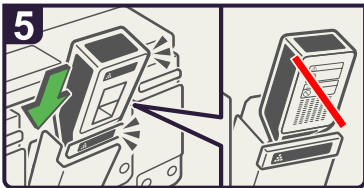

- Hold the toner cartridge color label facing forward and install it in the case.

Note

Sharp changes in air pressure or temperature may make the toner cartridge expand and become difficult to install. If you cannot install the cartridge, leave it for a while and then try installing it again. If this does not work, contact your service representative.



- Push the case in slowly until its hook clicks into place.
- Close the front cover of the machine.

6

BAZ071S

Sending Faxes or Scanned Documents When Toner Has Run Out

When the machine has run out of toner, the indicator on the display lights. Note that even if there is no toner left, you can still send faxes or scanned documents.

★ Important

- If number of communications executed after the toner has run out and not listed in the automatically output Journal exceeds 200, communication is not possible.

1. Make sure the machine is in facsimile or scanner mode.
2. Press [Exit], and then perform transmission operation.

The error message disappears.

↓ Note

- The report that can be printed for transmitted files cannot be printed for files transmitted with Memory Transmission.

- If the fax or scanner screen does not appear in step 1, press the [Facsimile] key or the [Scanner] key.

Adding Staples

This section describes what to do when staples need replacing.

⚠ CAUTION

- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.

★ Important

- Stapling failures or jams may occur if you use a staple cartridge other than that recommended.

↓ Note

- If you cannot pull out the upper unit, there are staples remaining inside the cartridge. Use all the staples, and do not add more.
- Refill the stapler according to the finisher type. Check the type if you are unsure. For details about type of finisher, see "Appendix", About This Machine.

6

Finisher SR4010


This section describes how to add staples to the Finisher SR4010.



- Open the finisher front cover.
- Pull out the staple unit.




- Pull out the cartridge gently.

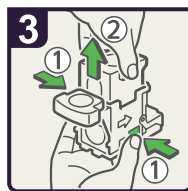


- Holding both sides of the cartridge, pull up the upper unit.




- Remove the empty refill in the direction of the arrow.

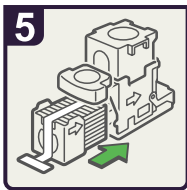

- Push the new refill into the cartridge until it clicks.

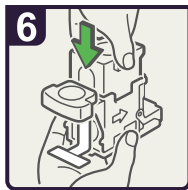

- Push the upper unit gently into the cartridge.

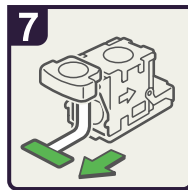

- Pull out the ribbon.



- Push the cartridge down until it clicks.
- Return the staple unit to its original position and close the finisher front cover.

BAZ033S

Finisher SR4020


This section describes how to add staples to the Finisher SR4020.



- Open the finisher front cover.
- Pull out the staple unit.



- Pull out the cartridge gently.

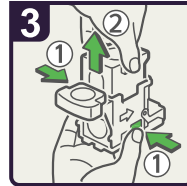


- Holding both sides of the cartridge, pull up the upper unit.




- Remove the empty refill in the direction of the arrow.



- Push the new refill into the cartridge until it clicks.

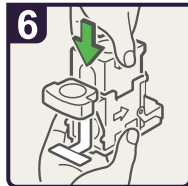

- Push the upper unit gently into the cartridge.

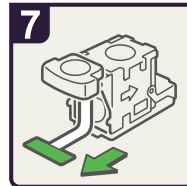

- Pull out the ribbon.




- Push the cartridge down until it clicks.
- Return the staple unit to its original position and close the finisher front cover.

BAZ034S

Finisher SR4020 (Saddle Stitch)


This section describes how to add staples to the Finisher SR4020 (Saddle Stitch).

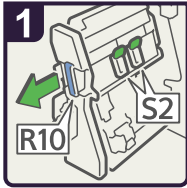


- Open the finisher front cover.
- Pull out the staple unit.



- Pull lever S2.

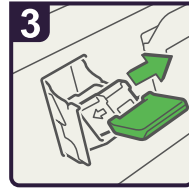


- Pull out the cartridge gently.

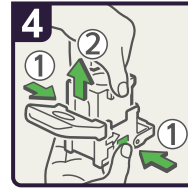


- Holding both sides of the cartridge, pull up the upper unit.




- Remove the empty refill in the direction of the arrow.

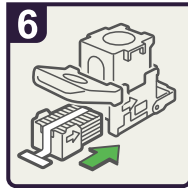

- Push the new refill into the cartridge until it clicks.

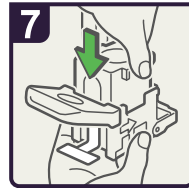

- Push the upper unit gently into the cartridge.

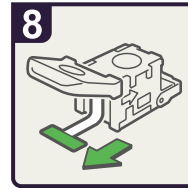

- Pull out the ribbon.

6



- Push the cartridge down until it clicks.




- Return lever S2 to its original position.
- Return the staple unit to its original position and close the finisher front cover.

BAZ035S

Finisher SR5000


This section describes how to add staples to the Finisher SR5000.

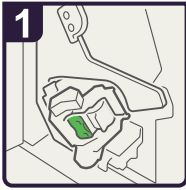


- Open the finisher front cover.



- Pull out the cartridge lever.

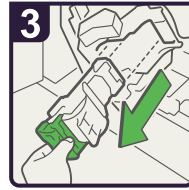


- Pull out the cartridge gently.

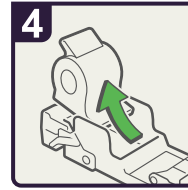

- Remove the empty refill in the direction of the arrow.




- Push the new refill into the cartridge until it clicks.

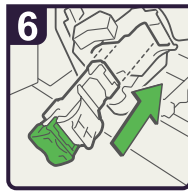

- Hold the lever and push in the cartridge.



- Push in the cartridge until it clicks.

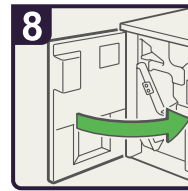

- Return the staple unit to its original position and close the finisher front cover.

BAZ036S

7. Clearing Misfeeds

This chapter describes what to do when paper or originals misfeed (become jammed inside the machine).

Removing Jammed Paper

This section describes how to locate and remove jammed paper.

CAUTION

- The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

CAUTION

- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.



Important

- When clearing misfeeds, do not turn off the operation switch. If you do, your copy settings will be lost.
- To prevent misfeeds, do not leave any torn scraps of paper inside the machine.
- Contact your service representative if misfeeds occur frequently.

Locating Jammed Paper


If a misfeed happens, remove the misfed paper or original following the procedures stated on the sticker inside the finisher or front cover.

A misfeed has occurred in the place corresponding to the letter displayed on the control panel.

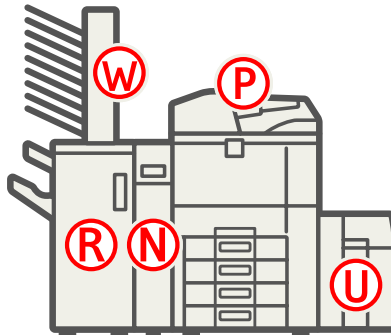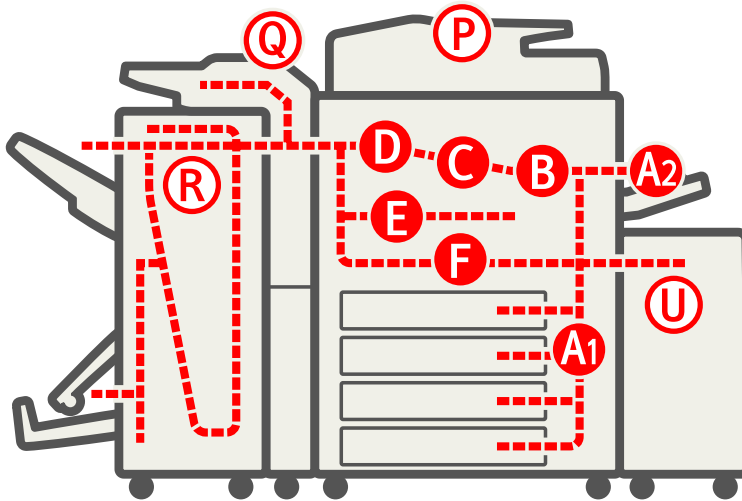


BAY080S

1. Press the key of the section from where you want to remove the jammed paper.

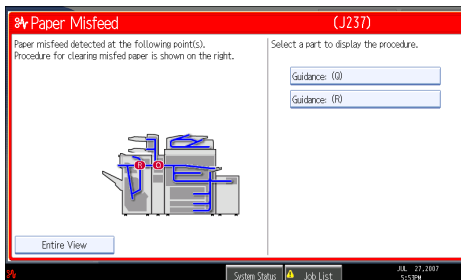

2. After each step is complete, press [Next]. To go back to the previous step, press [Previous].

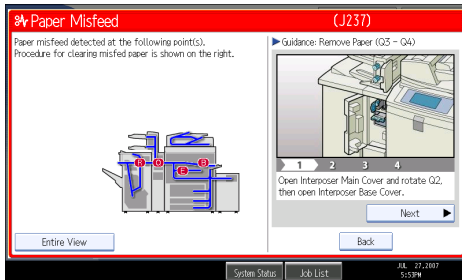

3. When all jammed paper is removed, restore the machine to the original state.

Note

- More than one misfeed may be indicated. When this happens, check all the areas indicated.

Removing Jammed Paper

This section describes how to remove jammed paper.


Important

- The internal parts of the machine may be hot. Wait for the duplex unit to cool down before clearing a paper jam in the unit.
- When removing jammed sheets, take care to touch only those areas explicitly indicated in the manual.
- Do not remove the fusing unit. Doing so will result in loss of print quality.

Note

- Inside the finisher, or inside the front cover, there is a sticker explaining how to remove misfed paper.
- If a detailed removal instruction appears on the right of the screen, follow it.
- You can also use the procedure indicated in [System Status] to remove jammed paper.

When A1 is displayed

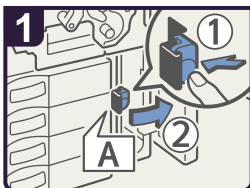

- Open the front cover.
- Push button A and open the guide plate.



- Remove misfed paper.
- Close the guide plate.
- Close the front cover.


When A2 is displayed




- Remove misfed paper.

BAZ067S

When A2 is displayed in the case of Wide Large Capacity Tray

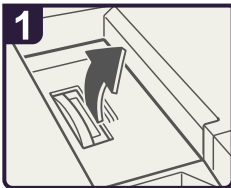


- Open the top cover.

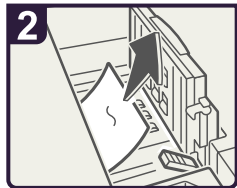

- Remove misfed paper.




- Close the top cover.

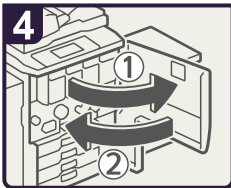


- Open and close the front cover.

BAZ072S


When B is displayed

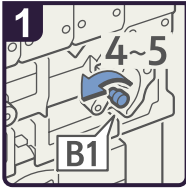


- Open the front cover.
- Turn knob B1 4-5 times counterclockwise to remove misfed paper.

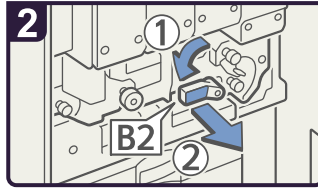


- Turn lever B2 to the left and pull out the unit.

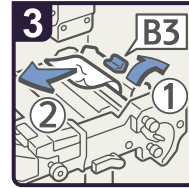

- Raise lever B3 and remove misfed paper.

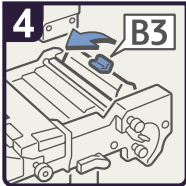


- Return lever B3 to its original position.

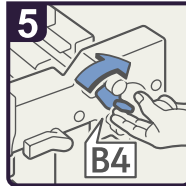


- Turn lever B4 to right and return the unit to its original position.
- Close the front cover.

BAZ039S


When C is displayed

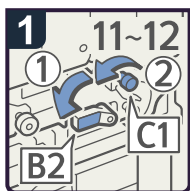


- Open the front cover.
- Turn lever B2 to the left.
- Turn knob C1 11-12 times counterclockwise.

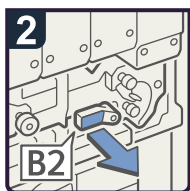

- Hold lever B2 and pull out the unit.

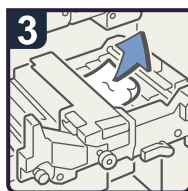

- Remove misfed paper from left side.

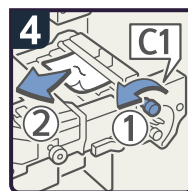


- Turn knob C1 counterclockwise to remove misfed paper.




- Return lever B4 to its original position.
- Close the front cover.


When D2 - D4 is displayed

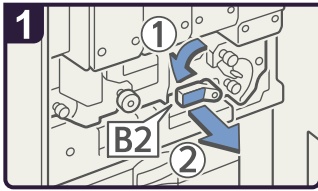


- Open the front cover.
- Turn lever B2 to the left and pull out the unit.

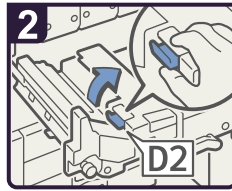


- Raise lever D2 and remove paper.

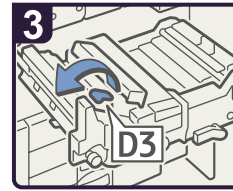

- Raise lever D3.

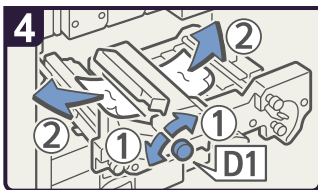


- Turn knob D1 clockwise and counterclockwise to remove misfed paper.

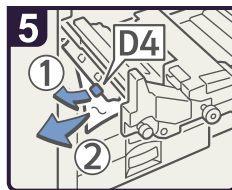


- Raise lever D4 and remove misfed paper.
- Return lever D3 to its original position.
- Return the unit to its original position and close the front cover.

BAZ041S


When E and D1 are displayed

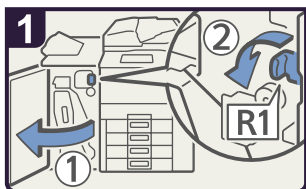

- Open the finisher front cover.
- Turn lever R1 to the left.

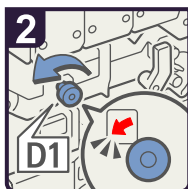

- Open the front cover.
- Check that indicator D1 is blinking, and then turn knob D1 counterclockwise.

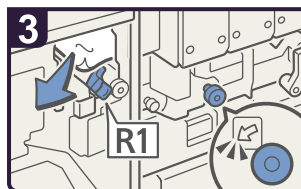

- Check that indicator D1 turns off, and then remove misfed paper.



- Pull handle E2 and fully pull out the unit.




- Raise lever E3.




- Remove misfed paper.
- Return the unit to its original position and close the front cover.


When E and E1 are displayed

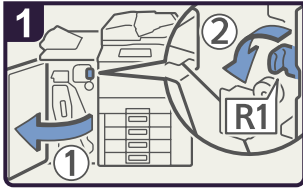


- Open the finisher front cover.
- Turn lever R1 to the left.

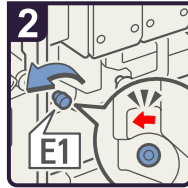

- Open the front cover.
- Check that indicator E1 is blinking, and then turn knob E1 counterclockwise.

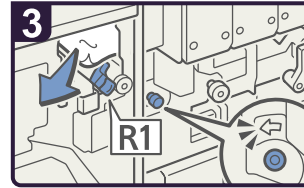


- Check that indicator E1 turns off, and then remove misfed paper.

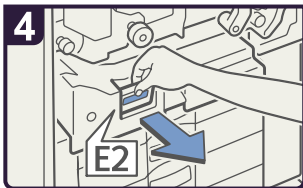

- Pull handle E2 and fully pull out the unit.



- Raise lever E3.

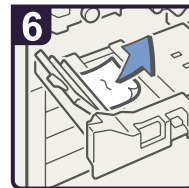


- Remove misfed paper.
- Return the unit to its original position and close the front cover.

BAZ068S


When F is displayed



- Open the front cover.
- Pull handle E2 and fully pull out the unit.

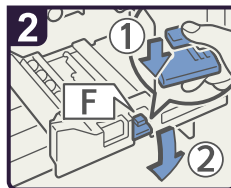

- Lower lever F while pressing it.

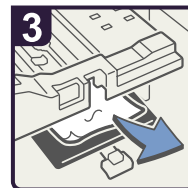


- Remove misfed paper and return lever F to its original position.
- Return the unit to its original position and close the front cover.

BAZ043S

When N1 is displayed



· Open the front cover.

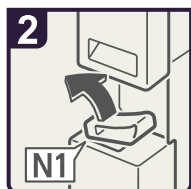


· Lift lever N1.



· Remove misfed paper.
· Lower lever N1 and close the front cover.

BAZ044S


When N2 or N3 is displayed

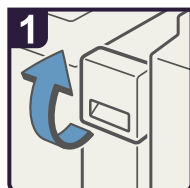

· Open the front cover.



· Lift lever N1.

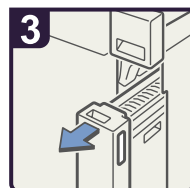


· Pull out the Z-folding unit.



· Open the N2 cover.



· Remove misfed paper and close the N2 cover.

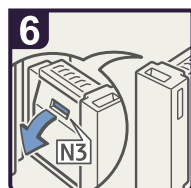


· If you cannot remove misfed paper, open the N3 cover.



· Remove misfed paper and close the N3 cover.
· Return the Z-folding unit to its original position.
· Lower lever N1 and close the front cover.

BAZ045S


When P1 is displayed

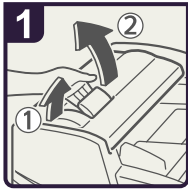

- Open the document feeder cover.




- Remove misfed originals.

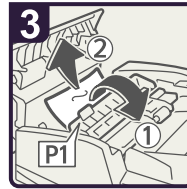

- Open the P1 cover and remove misfed originals.
- Close the document feeder cover.

BAZ046S

When P2 is displayed

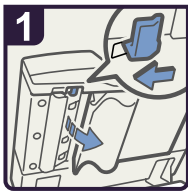

- Lift the document feeder.
- Slide the lever and open the cover.



- Remove misfed originals.
- Close the cover.

7

BAZ047S

When P3 is displayed



- Lift the document feeder.
- Pull lever P3 and open the cover.




- Remove misfed originals.
- Close the cover.

BAZ069S

When Q is displayed in the case of Interposer




- Open the interposer upper cover.

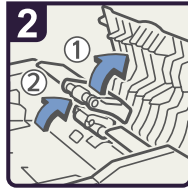

- Raise the feed roller.



- Remove misfed paper.
- Close the interposer upper cover.

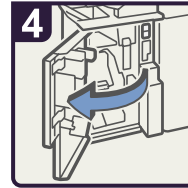

- Open the finisher front cover.



- Lower lever Q1.




- Remove misfed paper.
- Close the finisher front cover.


When Q1 - Q4 is displayed in the case of Twin Interposer




- Open the twin interposer upper cover.
- Remove misfed paper.

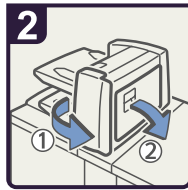


- Open the twin interposer main cover or right cover.

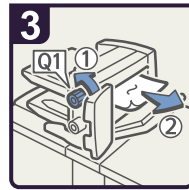


- Turn knob Q1 counterclockwise.
- Remove misfed paper.

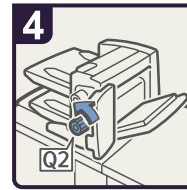

- Turn knob Q2 counterclockwise.

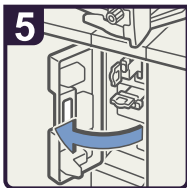

- Open the twin interposer base cover.

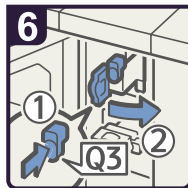

- Press button Q3 and open the guide board.



- Remove misfed paper.




- Press button Q4 and open the guide board.




- Remove misfed paper.
- Return the guide board to its original position.
- Close the twin interposer main, base, right, and upper cover.


When R1 - R4 is displayed in the case of Finisher SR4010

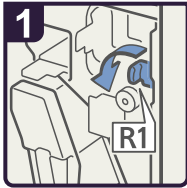


- Open the front cover.
- Turn knob R1 counterclockwise.

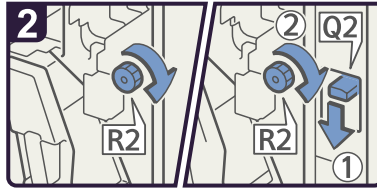


- Turn knob R2 clockwise.
- When the interposer or twin interposer is installed, lower lever Q2, and then turn knob R2 clockwise.

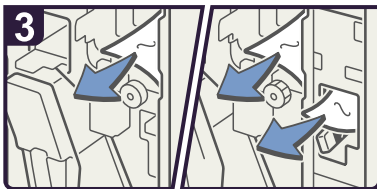

- Remove misfed paper.

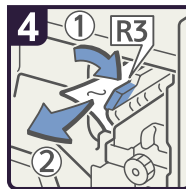

- If you cannot remove misfed paper, raise lever R3 and remove it.

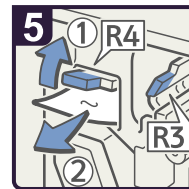


- Raise lever R4 and remove misfed paper.
- Close the front cover.

BAZ051S

When R5 - R8 is displayed in the case of Finisher SR4010



- Open the front cover.
- Lower lever R5 and remove misfed paper.

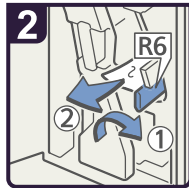


- If you cannot remove misfed paper, lower lever R6 and remove it.



- Raise lever R3.




- Raise lever R7 and remove misfed paper.

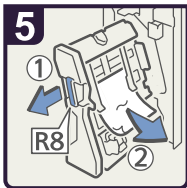


- Pull handle R8 and pull out the staple unit, then remove misfed paper.
- Return the staple unit to its original position and close the front cover.


When R1 - R4 is displayed in the case of Finisher SR4020

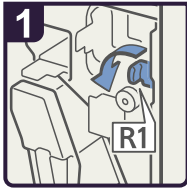


- Open the front cover.
- Turn knob R1 counterclockwise.

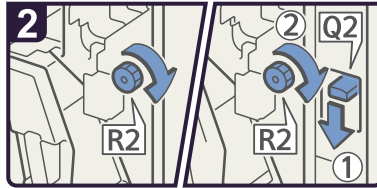


- Turn knob R2 clockwise.
- When the interposer or twin interposer is installed, lower lever Q2, and then turn knob R2 clockwise.

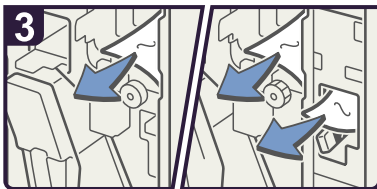

- Remove misfed paper.

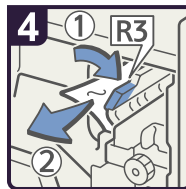

- If you cannot remove misfed paper, raise lever R3 and remove it.

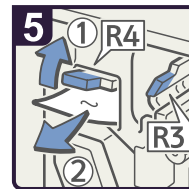


- Raise lever R4 and remove misfed paper.
- Close the front cover.


BAZ053S

7

When R5 - R7 is displayed in the case of Finisher SR4020

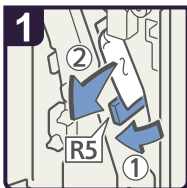

- Open the front cover.
- Lower lever R5 and remove misfed paper.

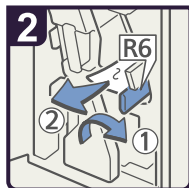

- If you cannot remove misfed paper, lower lever R6 and remove it.




- Raise lever R3.




- Raise lever R7 and remove misfed paper.
- Close the front cover.

BAZ054S


When R8 - R12 is displayed in the case of Finisher SR4020

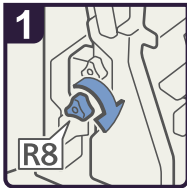


- Open the front cover.
- Turn lower knob R8 clockwise.

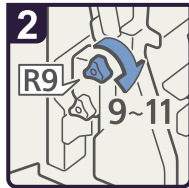


- Turn upper knob R9 9-11 times clockwise.

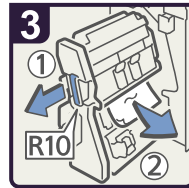

- Pull handle R10 and pull out the staple unit, then remove misfed paper.

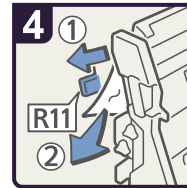


- If you cannot remove misfed paper, raise lever R11 and remove it.

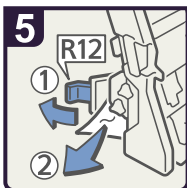


- If you cannot remove misfed paper, raise lever R12 and remove it.
- Return the staple unit to its original position and close the front cover.


When R1 - R3 is displayed in the case of Finisher SR5000

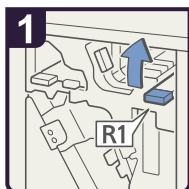

- Open the front cover.
- Raise lever R1.

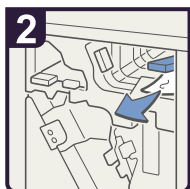


- Remove misfed paper and return lever R1 to its original position.

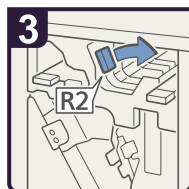


- If you cannot remove misfed paper, turn lever R2 to the right.



- Remove misfed paper and return lever R2 to its original position.

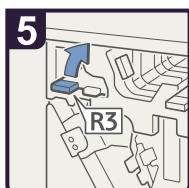


- If you cannot remove misfed paper, raise lever R3.

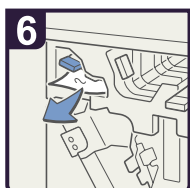


- Remove misfed paper and return lever R3 to its original position.
- Close the front cover.


When R4 - R8 is displayed in the case of Finisher SR5000

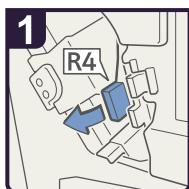


- Open the front cover.
- Pull lever R4.

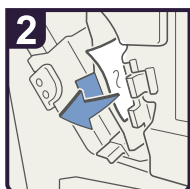


- Remove misfed paper and return lever R4 to its original position.

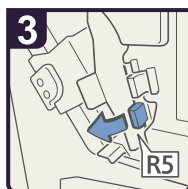


- If you cannot remove misfed paper, pull lever R5.

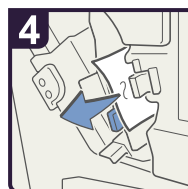


- Remove misfed paper and return lever R5 to its original position.

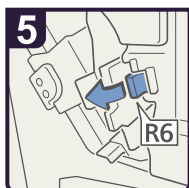


- If you cannot remove misfed paper, pull lever R6.

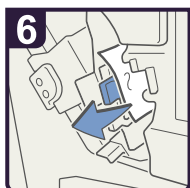


- Remove misfed paper and return lever R6 to its original position.

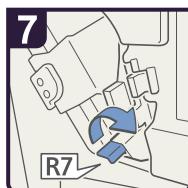

- If you cannot remove misfed paper, raise lever R7.

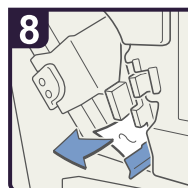

- Remove misfed paper and return lever R7 to its original position.

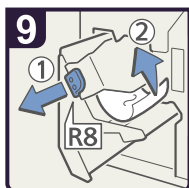

- Pull handle R8 and pull out the staple unit, then remove misfed paper.
- Return the staple unit to its original position and close the front cover.

When U is displayed in the case of Large Capacity Tray




· Open the top cover.




· Remove misfed paper.
· Close the top cover.

BAZ058S

When U is displayed in the case of Wide Large Capacity Tray

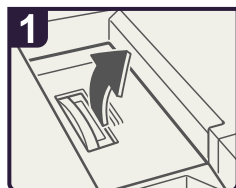

· Open the top cover.

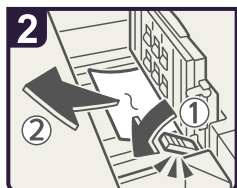


· Remove misfed paper.



· Close the top cover.


7

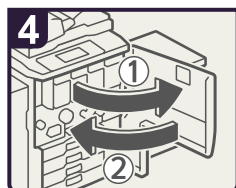

· Open and close the front cover.

BAZ059S

When W is displayed

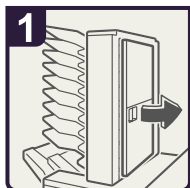

· Open the mailbox right cover.



· Remove misfed paper.



· Remove misfed paper.
· Close the mailbox right cover.


BAZ057S

When Z-folded Paper Is Not Properly Aligned

This section describes Z-folded copies are not properly aligned.


1. Press the [Suspend/Resume] key.

The key lights up.

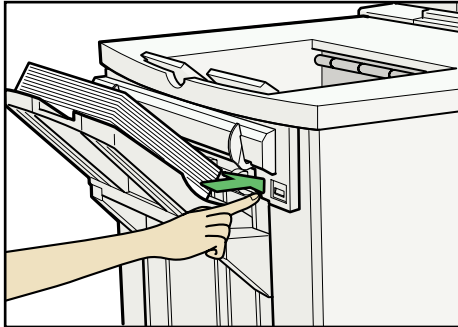

BAY033S

2. Remove the copies.
3. Set the auxiliary tray for the finisher shift tray.

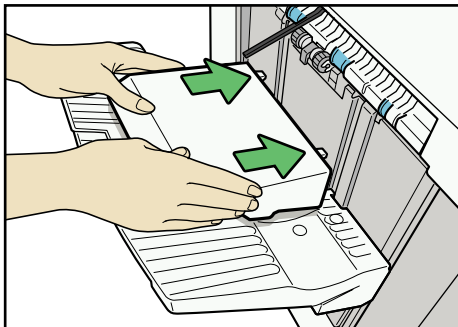

BAS011S

Removing Jammed Staples

This section describes how to remove jammed staples.

CAUTION

- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.

Important

- Curled paper may cause staples to jam. To avoid this, turn paper over in the tray.
- When the finisher is installed, after removing jammed staples, staples will not be ejected the first few times you try to use the stapler.

Note

- Remove the jammed staples according to the finisher type. Check the type if you are unsure. For details about type of finisher, see "Appendix", About This Machine.

Finisher SR4010

7


This section describes how to remove jammed staples from the Finisher SR4010.




- Open the finisher front cover.
- Pull out the staple unit.



- Pull out the cartridge gently.

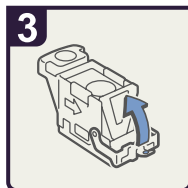


- Open the face plate.

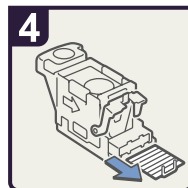

- Remove the jammed staples.



- Pull down the face plate until it clicks.

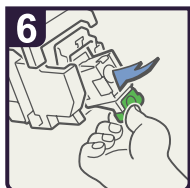


- Pull down the cartridge until it clicks.
- Return the staple unit to its original position and close the finisher front cover.

BAZ060S


7

Finisher SR4020

This section describes how to remove jammed staples from the Finisher SR4020.

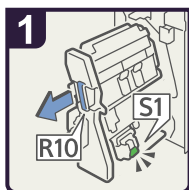


- Open the finisher front cover.
- Pull out the staple unit.

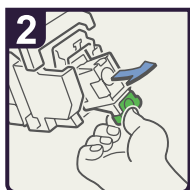

- Pull out the cartridge gently.




- Open the face plate.

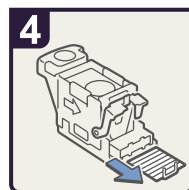

- Remove the jammed staples.




- Pull down the face plate until it clicks.

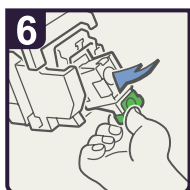


- Pull down the cartridge until it clicks.
- Return the staple unit to its original position and close the finisher front cover.

Finisher SR4020 (Saddle Stitch)


This section describes how to remove jammed staples from the Finisher SR4020 (Saddle Stitch).

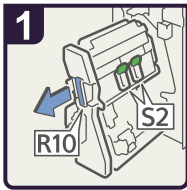


- Open the finisher front cover.
- Pull out the staple unit.

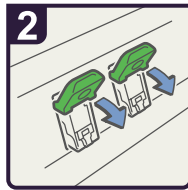


- Pull lever S2.

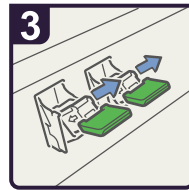


- Pull out the cartridge gently.

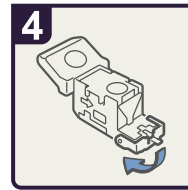


- Open the face plate of the cartridge.

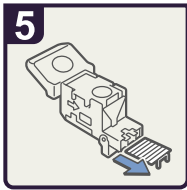


- Remove the jammed staples.

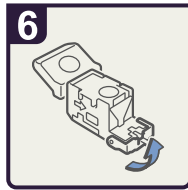

- Pull the face plate down until it clicks.

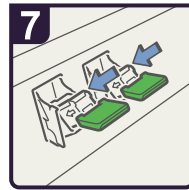

- Push the cartridge down until it clicks.

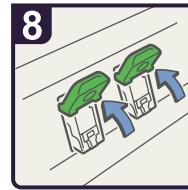

- Return lever S2 to its original position.
- Return the staple unit to its original position and close the finisher front cover.

BAZ062S

Finisher SR5000

This section describes how to remove jammed staples from the Finisher SR5000.




- Open the finisher front cover.
- Pull out the staple unit.



- Turn knob R10 counterclockwise to rotate the staple unit.




- Pull out the cartridge lever.

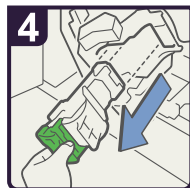

- Pull out the cartridge gently.



- Open the face plate of the cartridge.

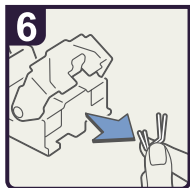

- Remove the jammed staples.



- Pull the face plate down until it clicks.



- Hold the lever and push in the cartridge.



- Push the cartridge down until it clicks.



- Return the staple unit to its original position and close the finisher front cover.

Removing Punch Waste

This section describes how to remove punch waste.


↓ Note

- Remove the punch waste according to the finisher type. Check the type if you are unsure. For details about type of finisher, see "Appendix", About This Machine.
- While "Hole Punch Receptacle is full." is displayed, you cannot use the Punch function.
- "Hole Punch Receptacle is full." is displayed until the punch waste box is reinstalled.
- If the message is still displayed, reinstall the punch waste box.

Finisher SR4020


This section describes how to remove punch wastes from the Finisher SR4020.

1. Open the finisher front cover.

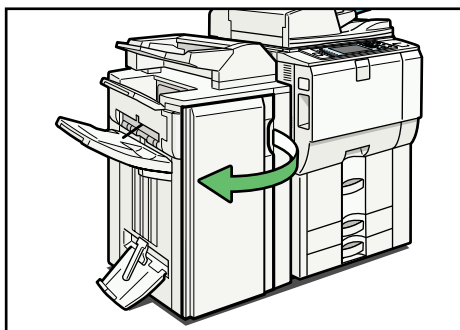


BAZ010S

2. Pull out the punch waste box carefully, and then remove punch waste.

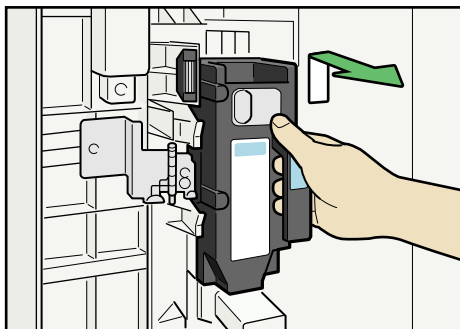

BAY036S

3. Reinstall the punch waste box.

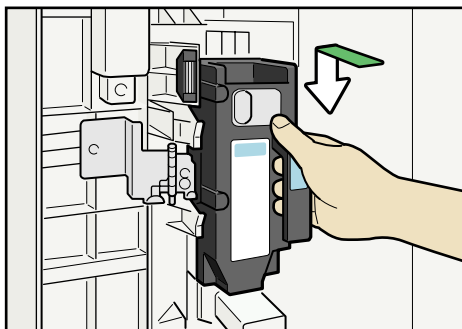

BAY036S


4. Close the finisher front cover.

"Hole Punch Receptacle is full." disappears.

Finisher SR5000


This section describes how to remove punch wastes from the Finisher SR5000.

1. Open the front cover of finisher.

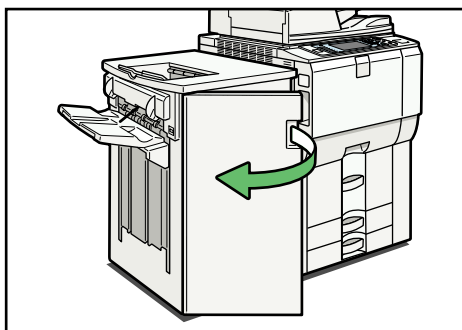


BAZ011S

2. Pull out the punch waste box carefully, and then remove punch waste.

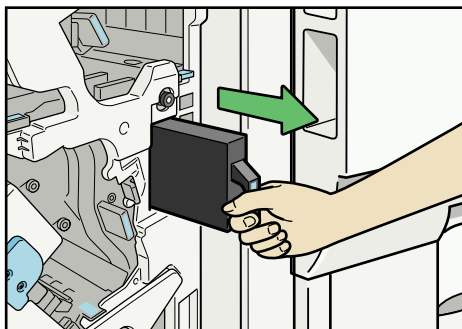

BAZ012S

3. Reinstall the punch waste box.

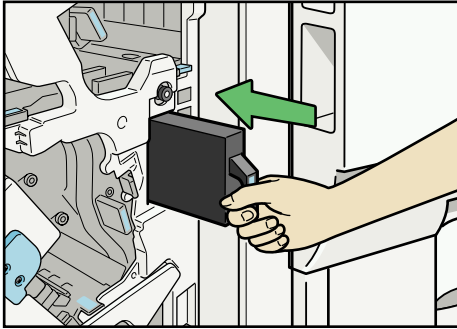

BAZ013S

4. Close the finisher front cover.

"Hole Punch Receptacle is full." disappears.

8. Remarks

This chapter describes how to maintain and operate the machine.

Where to Put Your Machine

This section describes precautions for installation and movement.

Machine Environment

Choose your machine's location carefully.

Environmental conditions greatly affect its performance.

Moving

This section describes precautions when moving the machine.

CAUTION

- Contact your service representative if you need to lift the machine (such as when relocating it to another floor). Do not attempt to lift the machine without the assistance of your service representative. The machine will be damaged if it topples or is dropped, resulting in malfunction and risk of injury to users. The machine's various handling areas are for service engineer use only. Do not touch these areas.

CAUTION

- Before moving the machine, be sure to disconnect all external connections, especially the power cord from the wall outlet. Damaged power cords are a fire and electric shock hazard.

CAUTION

- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

Important

- Be careful when moving the machine. Take the following precautions:
 - Turn off the main power.
 - Unplug the power cord from the wall outlet. When you pull out the plug from the socket, grip the plug to avoid damaging the cord, thereby reducing the risk of fire or electric shock.
 - Close all covers and trays, including the front cover and bypass tray.

- Keep the machine level and carry it carefully, taking care not to jolt or tip it. Rough handling may cause a malfunction or damage the hard disk or memory, resulting in loss of stored files.
- Do not take off the holding stand.
- Protect the machine from strong shocks. Impact can damage the hard disk and cause stored files to be lost. As a precautionary measure, files should be copied to another computer.

Note

- For details about how to turn the main power off, see "Turning On/Off the Power", About This Machine.

Optimum environmental conditions

This section describes precautions when locating the machine.

CAUTION

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

CAUTION

- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.

CAUTION

- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.

- Temperature: 10-32 °C (50-89.6 °F) (humidity to be 54% at 32 °C, 89.6 °F)
- Humidity: 15-80% (temperature to be 27 °C, 80.6 °F at 80%)
- A strong and level base.
- The machine must be level within 5 mm, 0.2 inch: both front to rear and left to right.
- To avoid possible buildup of ozone, make sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.


Environments to avoid

- Locations exposed to direct sunlight or other sources of strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes can cause condensation to form inside the machine.)
- Locations close to machines generating ammonia, such as a diazo copy machine.

- Places where the machine will be subject to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Access to the machine

Place the machine near the power source, providing the clearance areas shown.

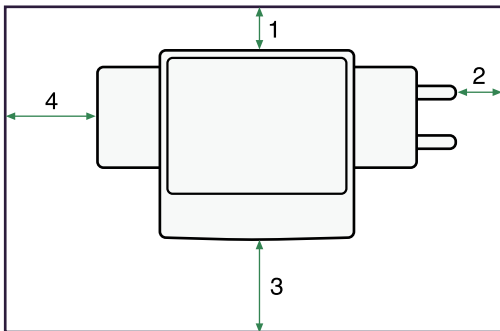

BAZ064S

1. Rear: 0 cm (0 inches) or more
2. Right: 4 cm (1.6 inches) or more
3. Front: 70 cm (28 inches) or more
4. Left: 10 cm (4 inches) or more

↓ Note

- For the required space when options are installed, contact your service representative.

Power Connection

This section describes power supply.

⚠ WARNING

- Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.

⚠ WARNING

- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

⚠ WARNING

- If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service representative to change a new one. Operating the machine with a damaged power cord may cause an electric shock or fire.

⚠ CAUTION

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

⚠ CAUTION

- To disconnect the power cord, pull it out by plug. Do not drag the cord itself. Doing so may result in damage to the cord, leading to fire or electric shock.
- Make sure the plug is inserted firmly in the wall outlet.
- Voltage must not fluctuate by more than 10%.
- The wall outlet shall be installed near the machine and shall be easily accessible.

Maintaining Your Machine

If the exposure glass, scanning glass, or ADF belt is dirty, copy clarity may be reduced. Clean these parts if they are dirty.

★ Important


- Do not use chemical cleaners or organic solvents, such as thinner or benzene. If such substances get inside the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those explicitly specified in this manual. Other parts should only be cleaned by your service representative.

How to maintain

Cleaning the machine: Wipe the machine with a soft, dry cloth. If this does not remove the dirt, wipe the machine with a damp and tightly wrung cloth. If a damp cloth still does not remove the dirt, try using a mild detergent. Wipe the machine with a dry cloth to remove the moisture, after using a damp cloth.

Cleaning the Exposure Glass


This section describes how to clean the exposure glass and the scanning glass.

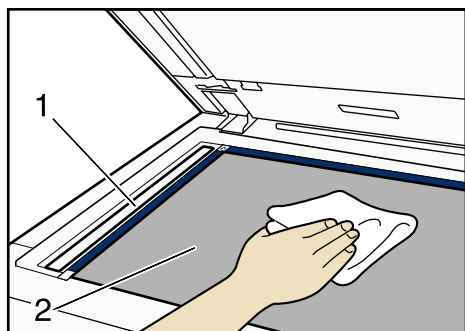

Clean 1 and 2.

Cleaning the Auto Document Feeder

This section describes how to clean the ADF.

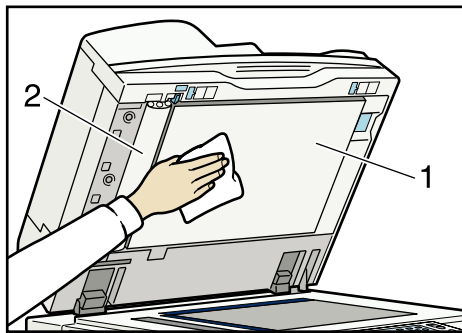

BAY020S

Clean 1 and 2.

INDEX

A

Access to the machine.....	171
Adding staples.....	134
Adding toner.....	130
Adjusting the color registration.....	14
Adjusting the paper tray for custom size paper.....	122
Adjusting the paper tray for regular size paper.....	119
Adjusting the volume.....	47
Auto color calibration.....	15

C

Cannot browse the network to send a scan file.....	95
Cannot exit from connect copy.....	44
Cannot make clear copies.....	33
Cannot make copies as wanted.....	36
Cannot print.....	83
Cannot send or receive fax messages as wanted.....	59
Cannot send scanned files.....	95
Changing the paper size.....	119
Changing the paper size in tray 2 and 3.....	119
Changing the paper size in wide large capacity tray.....	124
Changing to a size that is not automatically Detected.....	128
Checking machine status and settings.....	11
Checking the error log.....	81
Cleaning the auto document feeder.....	173
Cleaning the exposure glass.....	173
Clearing misfeeds.....	139
Color registration.....	14
Combine.....	36
Connect copy.....	36, 42, 43, 44
Connect copy is canceled.....	43
Control panel.....	98
Copy/Document Server function.....	29
custom size paper.....	122

D

Data storage.....	11
Display during connect copy.....	42
Document Server.....	36

Duplex.....	36
-------------	----

E

Edit.....	36
Enquiry.....	11
Environments to avoid.....	170
Error log.....	74, 81
Error Mail Notification.....	67
Error occurs using Internet Fax.....	67
Error Report (E-mail).....	67

F

Facsimile function.....	49
Finisher SR4010.....	134, 160
Finisher SR4020.....	135, 161, 165
Finisher SR4020 (Saddle Stitch).....	135, 162
Finisher SR5000.....	136, 163, 166

H

How to read this manual.....	7
------------------------------	---

I

If an error report is printed.....	65
If USB connection fails.....	72
Indicators.....	9
Installing the printer driver.....	69

J

Job is not performed.....	25
---------------------------	----

L

Loading paper.....	109
Loading paper into the A3/11 × 17 tray unit.....	111
Loading paper into the interposer.....	114
Loading paper into the large capacity tray.....	112
Loading paper into the twin interposer.....	116
Loading paper into the wide large capacity tray.....	114
Loading paper into tray 1.....	109
Loading paper into tray 2 and 3.....	111
Locating jammed paper.....	139

M

Machine address info.....	11
Machine environment.....	169

Maintaining your machine.....	173
Maintenance.....	14
Maintenance info.....	11
Manuals for this machine.....	1
Memory is full.....	44
Messages displayed.....	29, 49, 69, 73, 98
Messages displayed on the client computer.....	104
Messages displayed on the control panel when using the printer function.....	73
Messages displayed on the control panel when using the scanner function.....	98
Messages printed on the error logs or reports.....	74
Moving.....	169
Multi-accessing.....	25

N

Names of major options.....	7
Network connection.....	85

O

Operations are not possible when messages are displayed.....	96
Optimum environmental conditions.....	170
Orientation-fixed paper or two-sided paper.....	117
Other printing problems.....	86

P

Panel tone.....	10
Postcard side fence.....	124
Power connection.....	171
Printer function.....	73
Printing.....	59
Problems operating the machine.....	21

R

Reception.....	59
regular size paper.....	119
Removing jammed paper.....	139, 141
Removing jammed staples.....	160
Removing punch waste.....	165
Replacing toner.....	131
Returning to the previous setting.....	17

S

S/MIME cannot be used.....	96
Scanner function.....	98
Scanning is not done as expected.....	93
Sending faxes or scanned documents when toner has run out.....	132
Server-Generated error e-mail.....	67
Stamp.....	36
Staples.....	134
Status messages.....	73
Stored files cannot be accessed.....	95
Stored files cannot be edited.....	96
Symbols.....	7

T

Tab sheet fence.....	124
Tandem tray.....	109
Toner.....	130
Transmission.....	59
Transmission/Reception.....	59
Turning off the main power / In the event of power failure.....	66
TWAIN.....	104
TWAIN driver cannot be started.....	95

W

When A1 is displayed.....	141
When A2 is displayed.....	142
When A2 is displayed in the case of Wide Large Capacity Tray.....	142
When an indicator to the right of a function key is lit.....	19
When B is displayed.....	143
When C is displayed.....	144
When D2 - D4 is displayed.....	145
When E and D1 are displayed.....	146
When E and E1 are displayed.....	147
When F is displayed.....	147
When memory is full.....	64
When N1 is displayed.....	148
When N2 or N3 is displayed.....	148
When P1 is displayed.....	149
When P2 is displayed.....	149
When P3 is displayed.....	149

When paper is not fed properly.....	86
When Q is displayed in the case of interposer.....	150
When Q1 - Q4 is displayed in the case of twin interposer.....	151
When R1 - R3 is displayed in the case of finisher SR5000.....	156
When R1 - R4 is displayed in the case of finisher SR4010.....	152
When R1 - R4 is displayed in the case of finisher SR4020.....	154
When R4 - R8 is displayed in the case of finisher SR5000.....	157
When R5 - R7 is displayed in the case of finisher SR4020.....	154
When R5 - R8 is displayed in the case of finisher SR4010.....	153
When R8 - R12 is displayed in the case of finisher SR4020.....	155
When the data in indicator does not light up or flash	84
When the machine is connected to the computer using the interface cable.....	84
When U is displayed in the case of large capacity tray.....	158
When U is displayed in the case of wide large capacity tray.....	158
When W is displayed.....	158
When you cannot print clearly.....	86
When Z-folded paper is not properly aligned.....	159
Where to put your machine.....	169
Windows 2000.....	69
Windows Server 2003 /2003 R2.....	69
Windows Server 2008.....	71
Windows Vista.....	70
Windows XP Home Edition.....	70
Windows XP Professional.....	69

MEMO

MEMO

MEMO

Trademarks

Adobe, Acrobat, Acrobat Reader, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

TrueType is a trademark of Apple Inc.

Microsoft®, Windows®, Windows Server®, and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Monotype is a registered trademark of Monotype Imaging, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

* The product names of Windows 2000 are as follows:

- Microsoft® Windows® 2000 Professional
- Microsoft® Windows® 2000 Server
- Microsoft® Windows® 2000 Advanced Server

* The product names of Windows XP are as follows:

- Microsoft® Windows® XP Professional
- Microsoft® Windows® XP Home Edition
- Microsoft® Windows® XP Media Center Edition
- Microsoft® Windows® XP Tablet PC Edition

* The product names of Windows Vista are as follows:

- Microsoft® Windows Vista® Ultimate
- Microsoft® Windows Vista® Enterprise
- Microsoft® Windows Vista® Business
- Microsoft® Windows Vista® Home Premium
- Microsoft® Windows Vista® Home Basic

* The product names of Windows Server 2003 are as follows:

- Microsoft® Windows Server® 2003 Standard Edition
- Microsoft® Windows Server® 2003 Enterprise Edition
- Microsoft® Windows Server® 2003 Web Edition
- Microsoft® Windows Server® 2003 Datacenter Edition

* The product names of Windows Server 2003 R2 are as follows:

- Microsoft® Windows Server® 2003 R2 Standard Edition
- Microsoft® Windows Server® 2003 R2 Enterprise Edition
- Microsoft® Windows Server® 2003 R2 Datacenter Edition

* The product names of Windows Server 2008 are as follows:

- Microsoft® Windows Server® 2008 Standard
- Microsoft® Windows Server® 2008 Enterprise
- Microsoft® Windows Server® 2008 Datacenter

