

Parts catalog

Legend


The following column headings are used in the parts catalog:

- **Asm-index**—Identifies the item in the illustration
- **P/N**—Identifies the part number of a FRU
- **Units/mach**—Refers to the number of units in a printer
- **Units/opt**—Refers to the number of units in an option
- **Units/FRU**—Refers to the number of units in a FRU
- **Description**—A brief description of the part

The following abbreviations are used in the parts catalog:

- **NS** (not shown) in the Asm-index column indicates that the part is procurable but is not shown in the illustration.
- **PP** (parts packet) in the Description column indicates that the part is contained in a parts packet.


Assembly 1: Covers 1

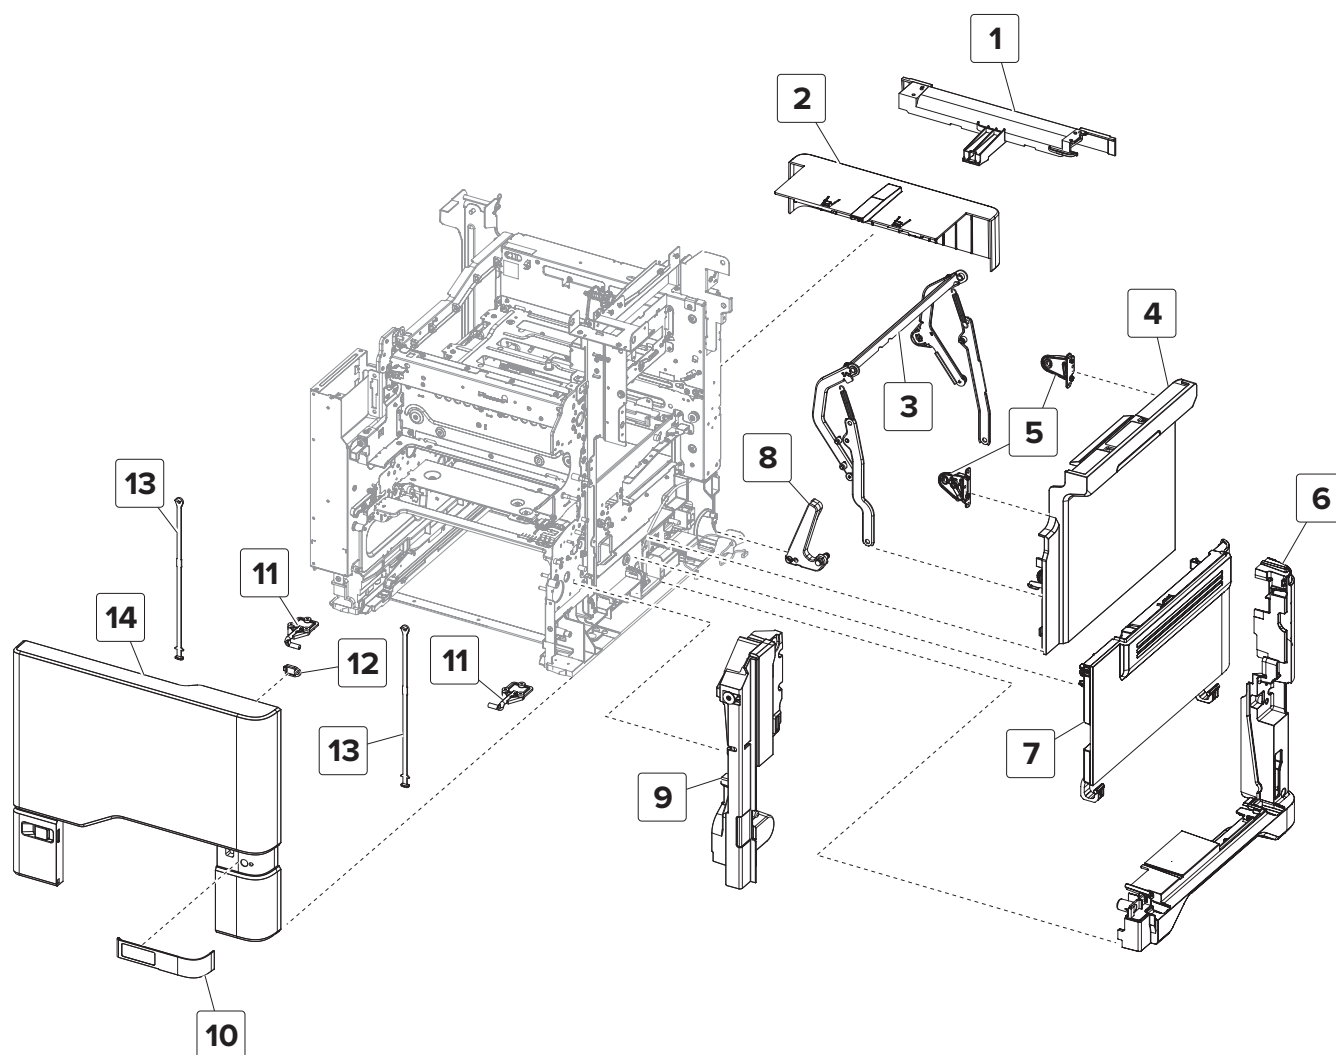

Assembly 1: Covers 1

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0424	1	1	Rear handle cover	--
2	41X0408	1	1	Rear tray cover	--
3	41X0428	1	1	Toner door mount frame	“Toner door mount frame removal” on page 332
4	41X0427	1	1	Toner door	“Toner door removal” on page 328
5	41X0559	1	1	Toner door mount bracket	“Toner door mount bracket removal” on page 330
6	41X0419	1	1	Right cover	“Right cover removal” on page 324
7	41X0403	1	1	Imaging unit cover	“Imaging unit cover removal” on page 384
8	41X0686	1	1	TPS wiper mechanism	“TPS wiper mechanism removal” on page 390
9	41X0443	1	1	Motor cover	“Motor cover removal” on page 325
10	41X0401	1	1	Tray indicator cover	--
11	41X0567	2	1	Front cover hinges	“Front cover hinges removal” on page 426
12	41X0560	1	1	Front door bracket	--
13	41X0380	2	1	Front door strap	--
14	41X0442	1	1	Front cover	“Front cover removal” on page 315
NS	41X0448	1	1	Interlock assembly	--


Assembly 2: Covers 2

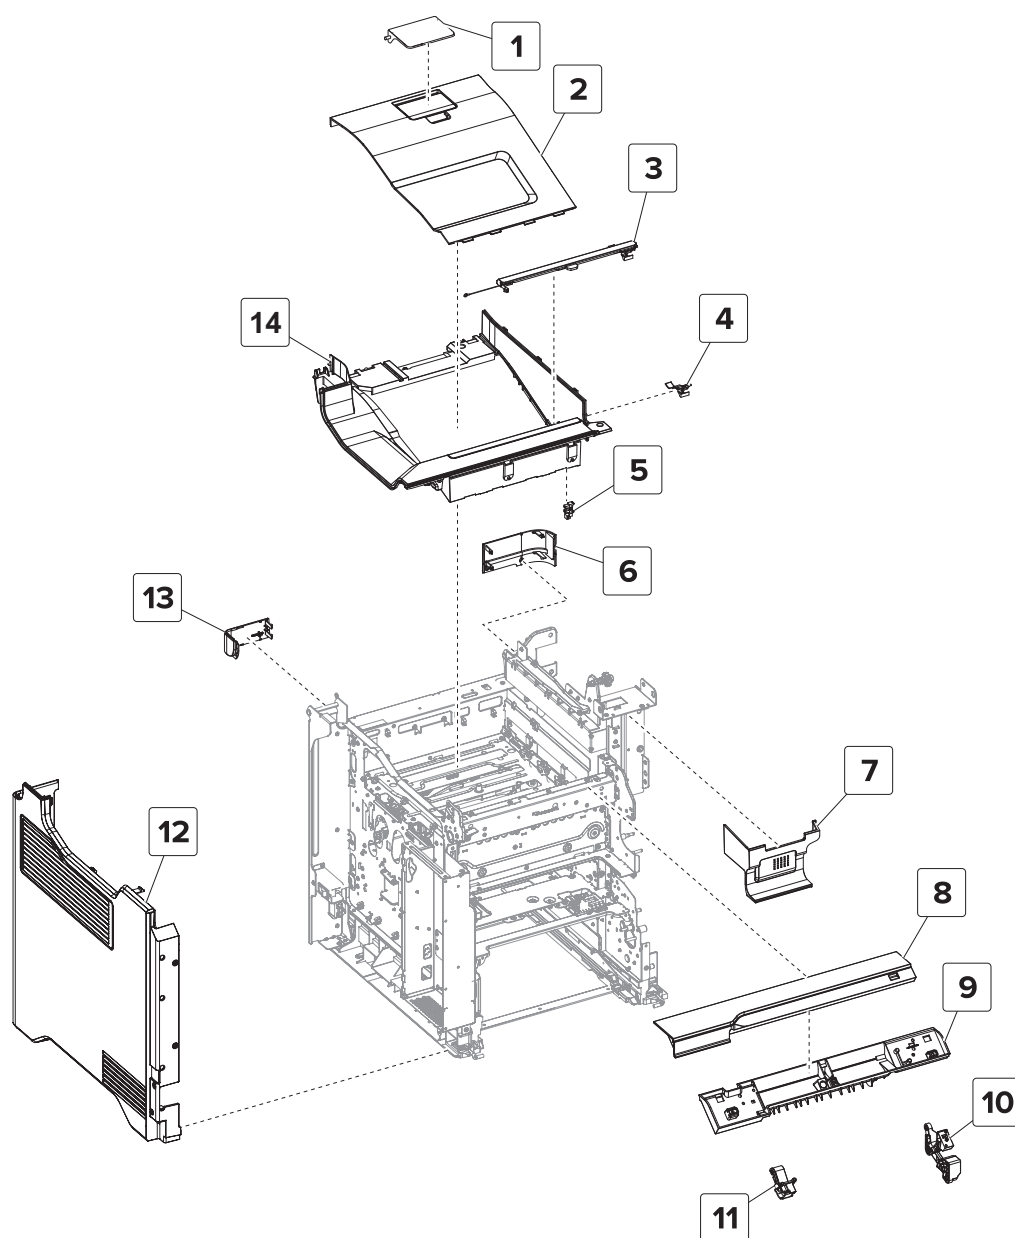

Assembly 2: Covers 2

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0410	1	1	Output bin extender	--
2	41X0433	1	1	Output bin cover	“Output bin cover removal” on page 336
3	41X0771	1	1	Exit output cover	--
4	41X0772	1	1	Output bin flag	“Output bin flag removal” on page 425
5	41X0570	1	1	Sensor (bin full)	--
6	41X0435	1	1	Scanner rear right cover	“Scanner rear right cover removal” on page 340
7	41X0436	1	1	Scanner front cover	“Scanner front cover removal” on page 440
8	41X0429	1	1	Top frame cover	“Top frame cover removal” on page 337
9	41X0430	1	1	Top frame base cover	“Top frame base cover removal” on page 339
10	41X0562	1	1	Right control panel arm	“Control panel arms removal” on page 346
11	41X0561	1	1	Left control panel arm	“Control panel arms removal” on page 346
12	41X0432	1	1	Left cover	“Left cover removal” on page 322
13	41X0434	1	1	Scanner rear left cover	“Scanner rear left cover removal” on page 341
14	41X0438	1	1	Top cover	“Top cover removal” on page 317


Assembly 3: Control panel

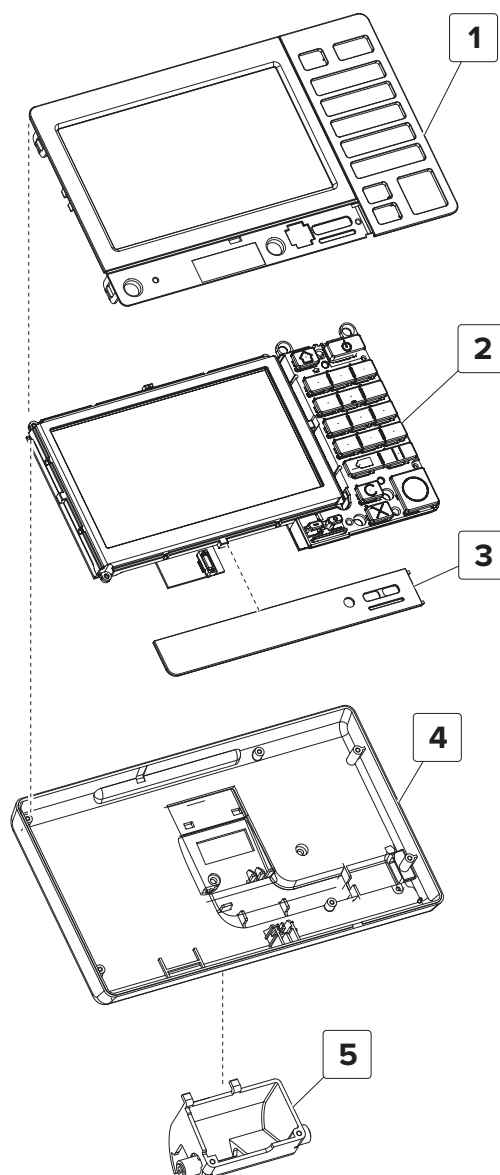

Assembly 3: Control panel

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0543	1	1	Control panel bezel (blank)	“Control panel bezel removal” on page 342
2	41X0051	1	1	7-in. control panel	“Control panel removal” on page 342
3	41X0874	1	1	Lower control panel bezel	“Lower control panel bezel removal” on page 342
3	41X1035	1	1	Lower control panel bezel (XC4140)	“Lower control panel bezel removal” on page 342
3	41X0876	1	1	Lower control panel bezel (XC4150)	“Lower control panel bezel removal” on page 342
4	41X0573	1	1	Control panel tub	“Control panel tub removal” on page 343
5	41X0572	1	1	Control panel tub mounting bracket	“Control panel tub mounting bracket removal” on page 345


Assembly 4: ADF and flatbed

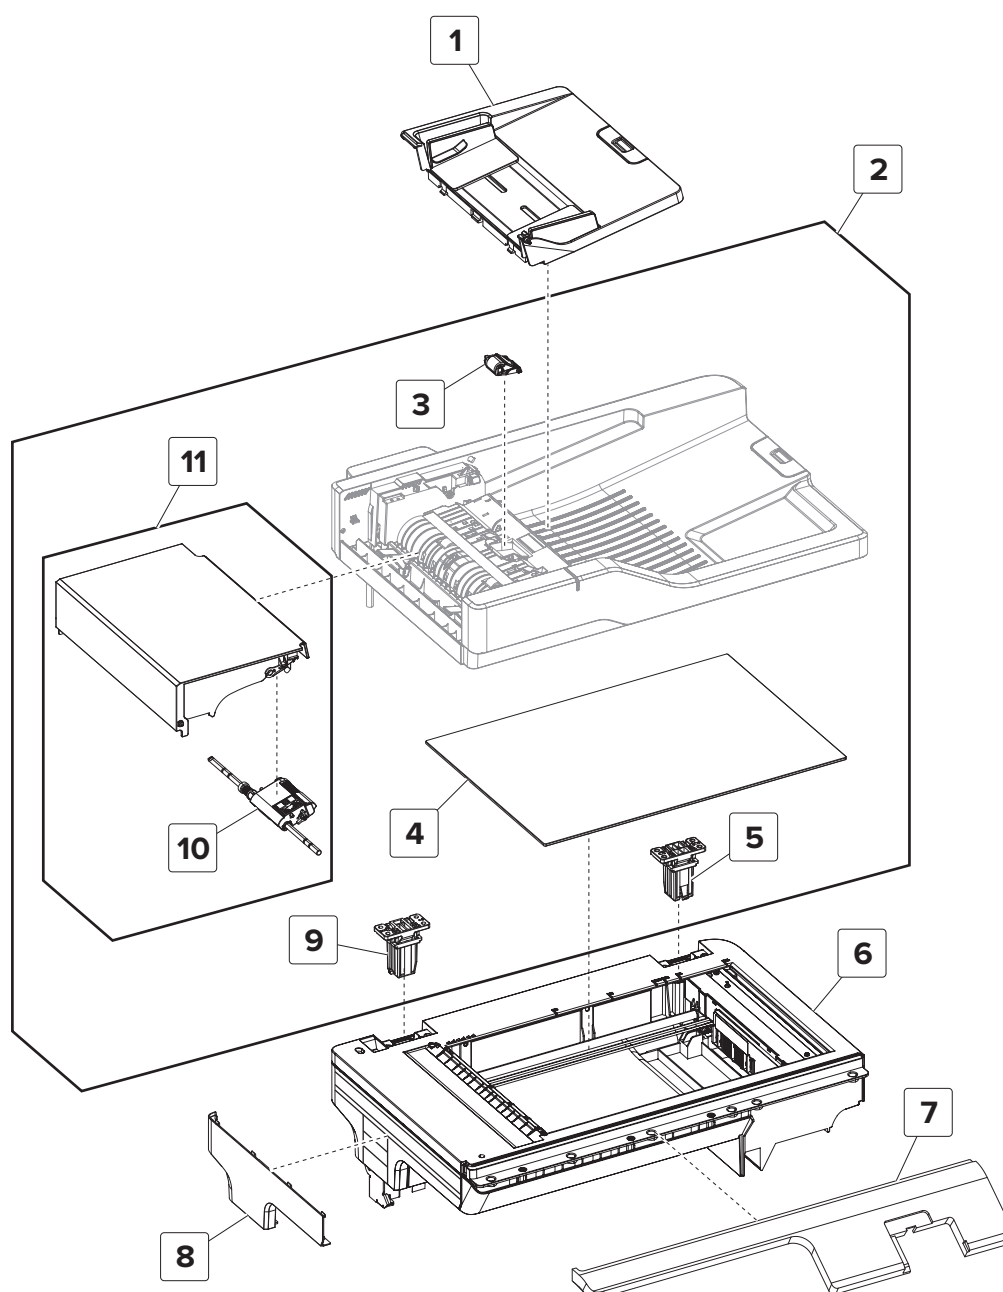

Assembly 4: ADF and flatbed

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0550	1	1	ADF input tray	--
2	41X0262	1	1	ADF	“ADF removal” on page 432
3	41X0917	1	1	ADF separator roller	--
4	41X0402	1	1	Flatbed cushion	--
5	40X7546	1	1	ADF right hinge	“ADF right hinge removal” on page 439
6	41X0263	1	1	Flatbed	“Flatbed removal” on page 441
7	41X0437	1	1	Scanner front cover	“Scanner front cover removal” on page 440
8	41X0877	1	1	Left flatbed cover removal	“Left flatbed cover removal” on page 441
9	40X8735	1	1	ADF left hinge	“ADF left hinge removal” on page 438
10	40X8736	1	1	ADF pick roller	--
11	41X0439	1	1	ADF top cover	“ADF top cover removal” on page 437


Assembly 5: Fuser

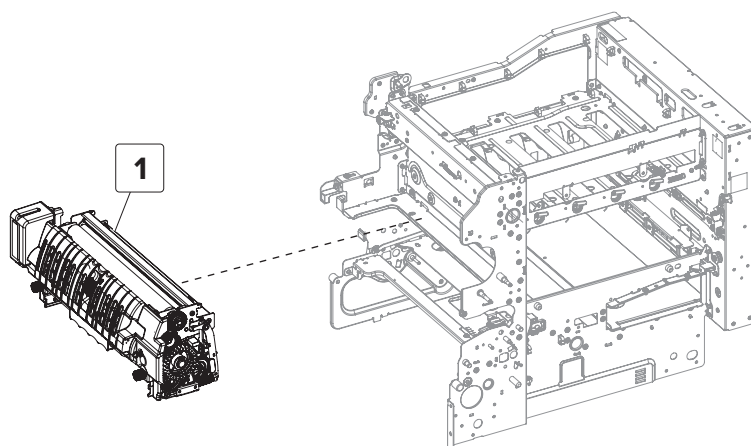

Assembly 5: Fuser

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0251	1	1	CS72x fuser type 02, 100V	“Fuser removal” on page 393
1	41X0252	1	1	CS72x fuser type 00, 110-120V	“Fuser removal” on page 393
1	41X0253	1	1	CS72x fuser type 01, 220-240V	“Fuser removal” on page 393
1	41X0254	1	1	CS72x fuser type 07, 100V (narrow media)	“Fuser removal” on page 393
1	41X0255	1	1	CS72x fuser type 05, 110-120V (narrow media)	“Fuser removal” on page 393
1	41X0256	1	1	CS72x fuser type 06, 220-240V (narrow media)	“Fuser removal” on page 393


Assembly 6: Transfer module

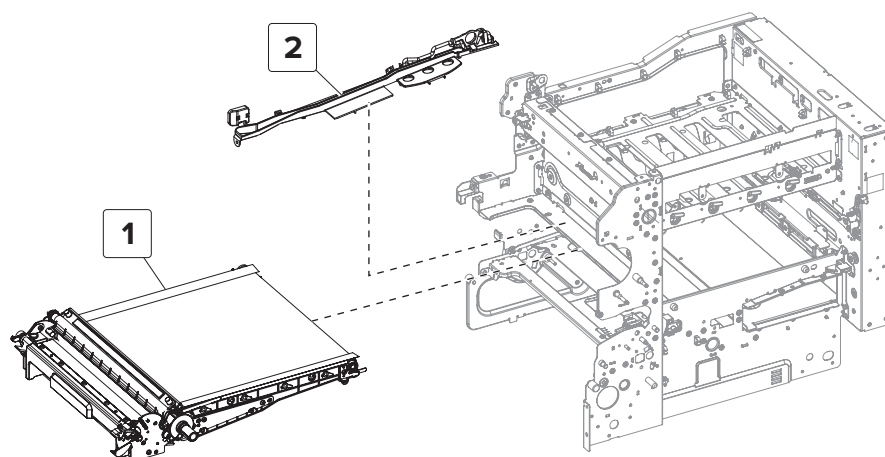

Assembly 6: Transfer module

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	40X9929	1	1	Transfer module	“Transfer module removal” on page 394
2	41X0683	1	1	Transfer module guide rail	“Transfer module guide rail removal” on page 396


Assembly 7: Paper feed

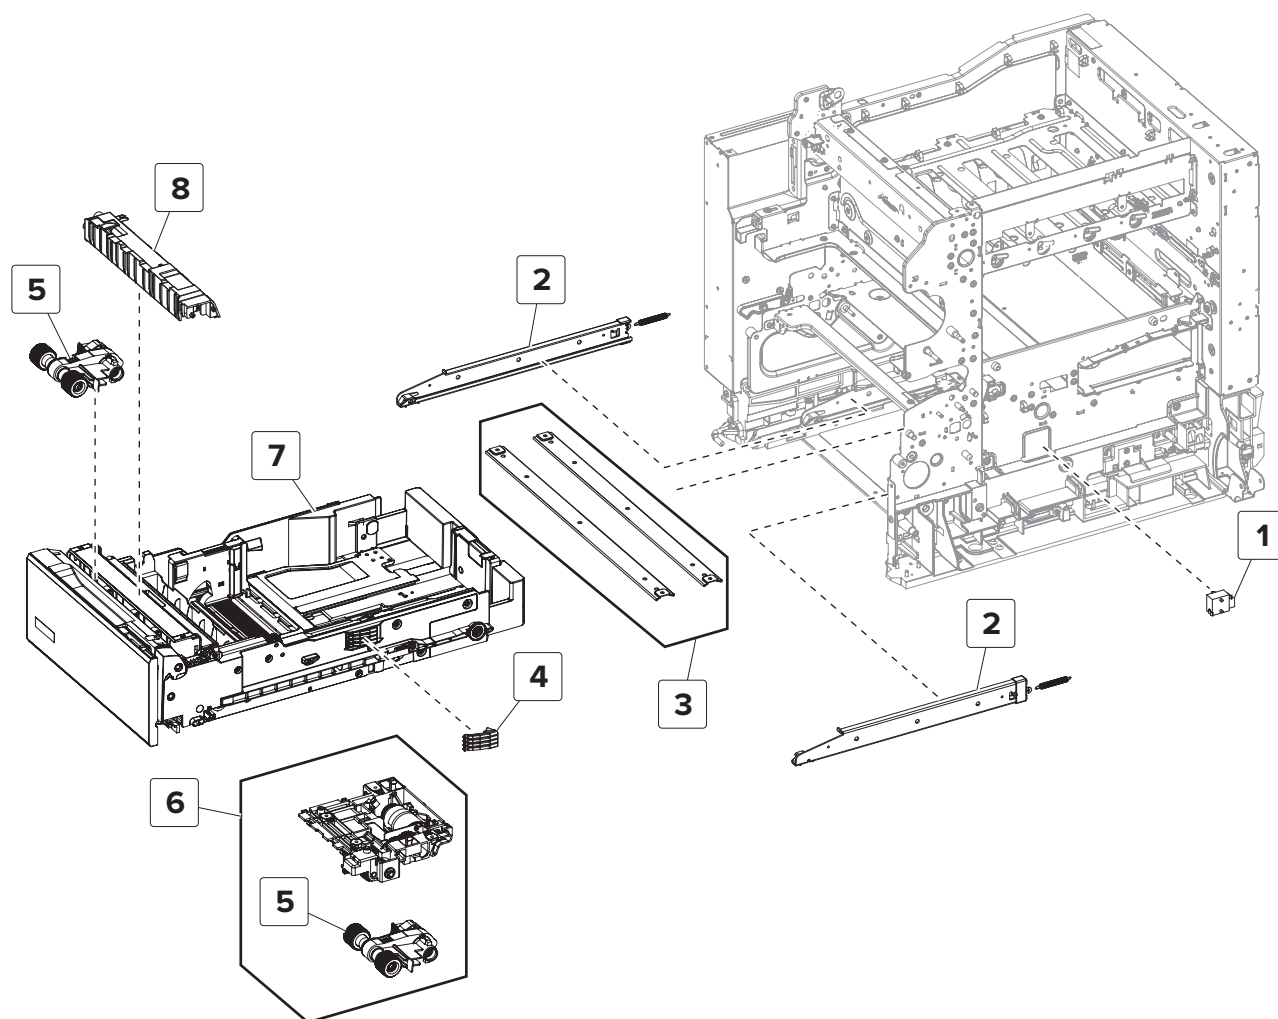

Assembly 7: Paper feed

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	40X7911	1	1	Sensor (paper size)	“Sensor (paper size) removal” on page 372
2	41X0372	1	1	Tray rails	“Tray rail removal” on page 427
3	41X0825	2	1	Support strap	--
4	41X0373	1	1	Paper size sensor actuators	--
5	41X0956	2	1	Pick roller (tray 1 and MPF)	--
6	41X0396	1	1	Media feeder	“Media feeder removal” on page 428
7	41X0268	1	1	550-sheet tray	--
8	41X0374	1	1	Separation block	--


Assembly 8: Paper path 1

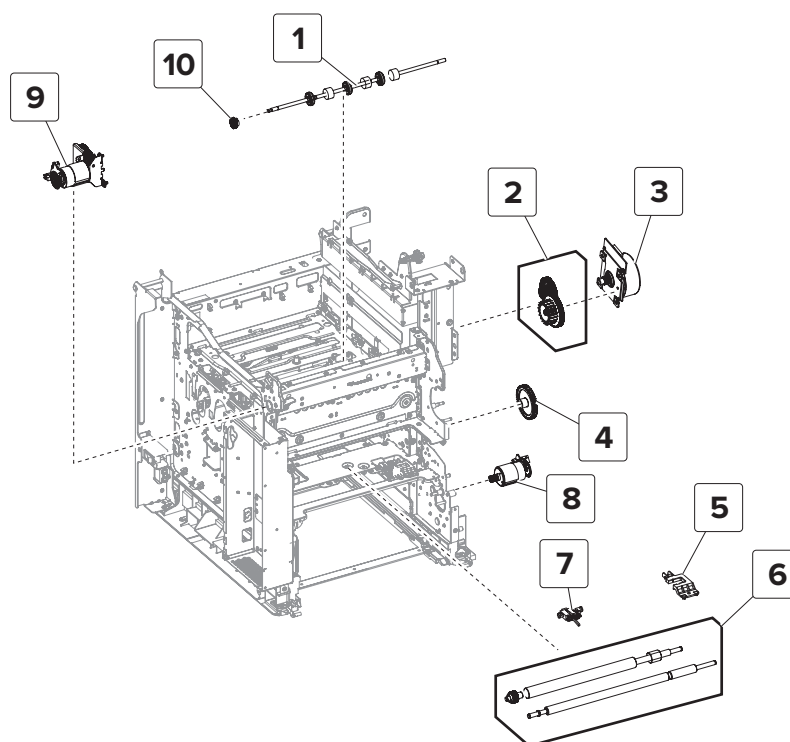

Assembly 8: Paper path 1

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0390	1	1	Output roll	“Output roll removal” on page 422
2	41X0395	1	1	Fuser drive gear	--
3	41X0001	1	1	Motor (fuser)	“Motor (fuser) removal” on page 378
4	41X0757	1	1	Waste toner bottle idler gear	“Waste toner bottle idler gear removal” on page 384
5	41X0450	1	1	Sensor (media type)	“Sensor (media type) removal” on page 400
6	41X0386	1	1	Deskew rollers	“Deskew rollers removal” on page 402
7	41X0385	1	1	Sensor (input)	“Sensor (input) removal” on page 401
8	41X0381	1	1	Motor (duplex/MPF)	“Motor (duplex/MPF) removal” on page 375
9	41X0451	1	1	Motor (output)	“Motor (output) removal” on page 357
10	41X0391	1	1	Output gear	--
NA	41X0392	1	1	Output drive	--


Assembly 9: Paper path 2

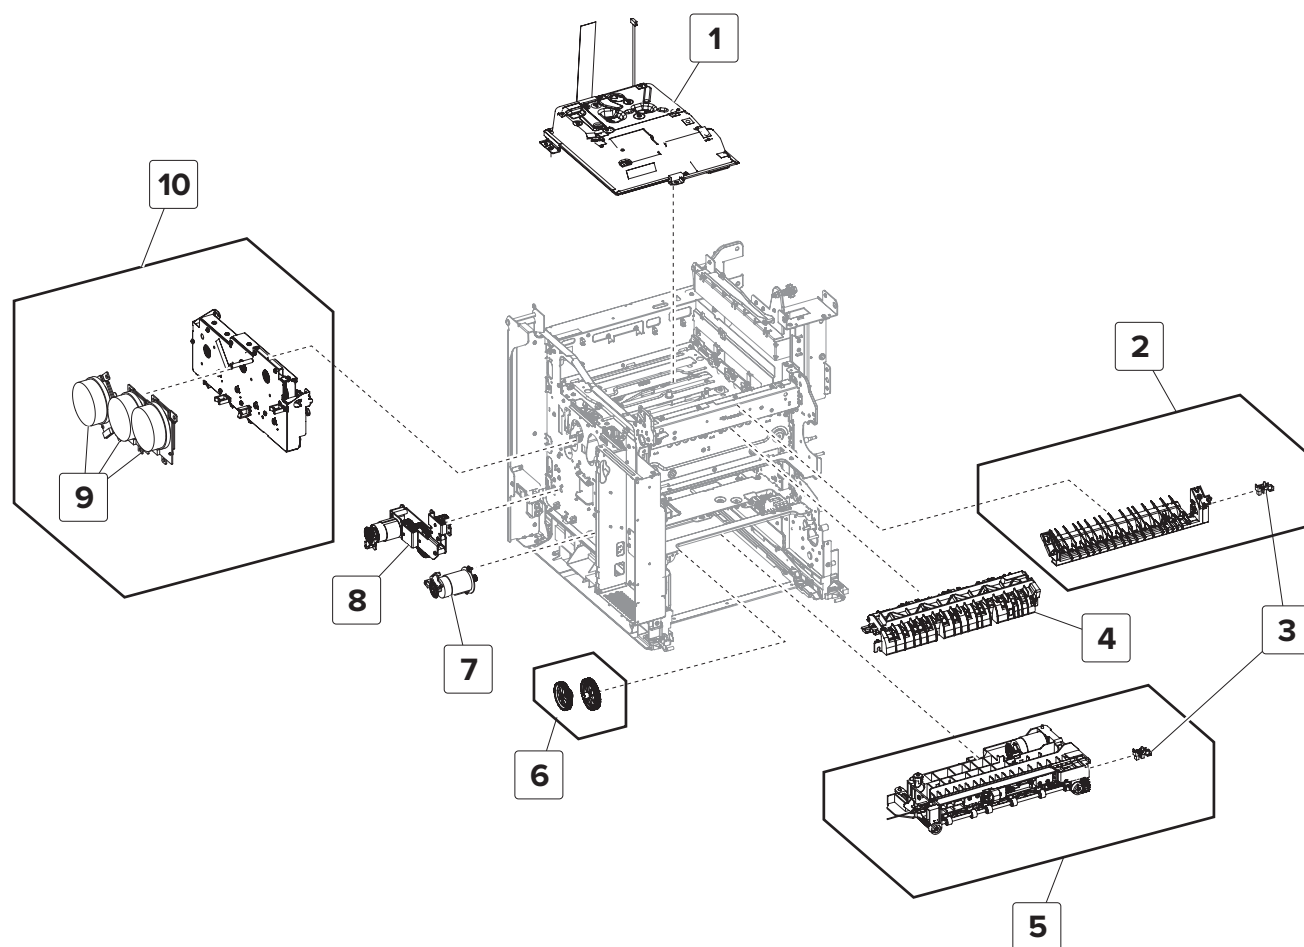

Assembly 9: Paper path 2

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0265	1	1	Printhead	“Printhead removal” on page 419
2	41X0389	1	1	Diverter	“Diverter removal” on page 410
3	41X0570	2	1	Sensor (duplex path 1 / MPF pass-through)	--
4	41X0388	1	1	Redrive guide	“Redrive guide removal” on page 412
5	41X0384	1	1	Isolation unit	“Isolation unit removal” on page 429
6	41X0758	1	1	Aligner drivetrain kit	--
7	41X0387	1	1	Motor (deskew)	“Motor (deskew) removal” on page 359
8	41X0393	1	1	Motor (black only retract)	“Motor (black only retract) removal” on page 369
9	41X0564	1	1	Motor (EP drive)	“Motor (EP drive) removal” on page 356
10	41X0264	1	1	EP gear box	“EP gear box removal” on page 362
NS	41X0897	4	1	Developer hold down arm	“Developer hold down removal” on page 422


Assembly 10: Duplex

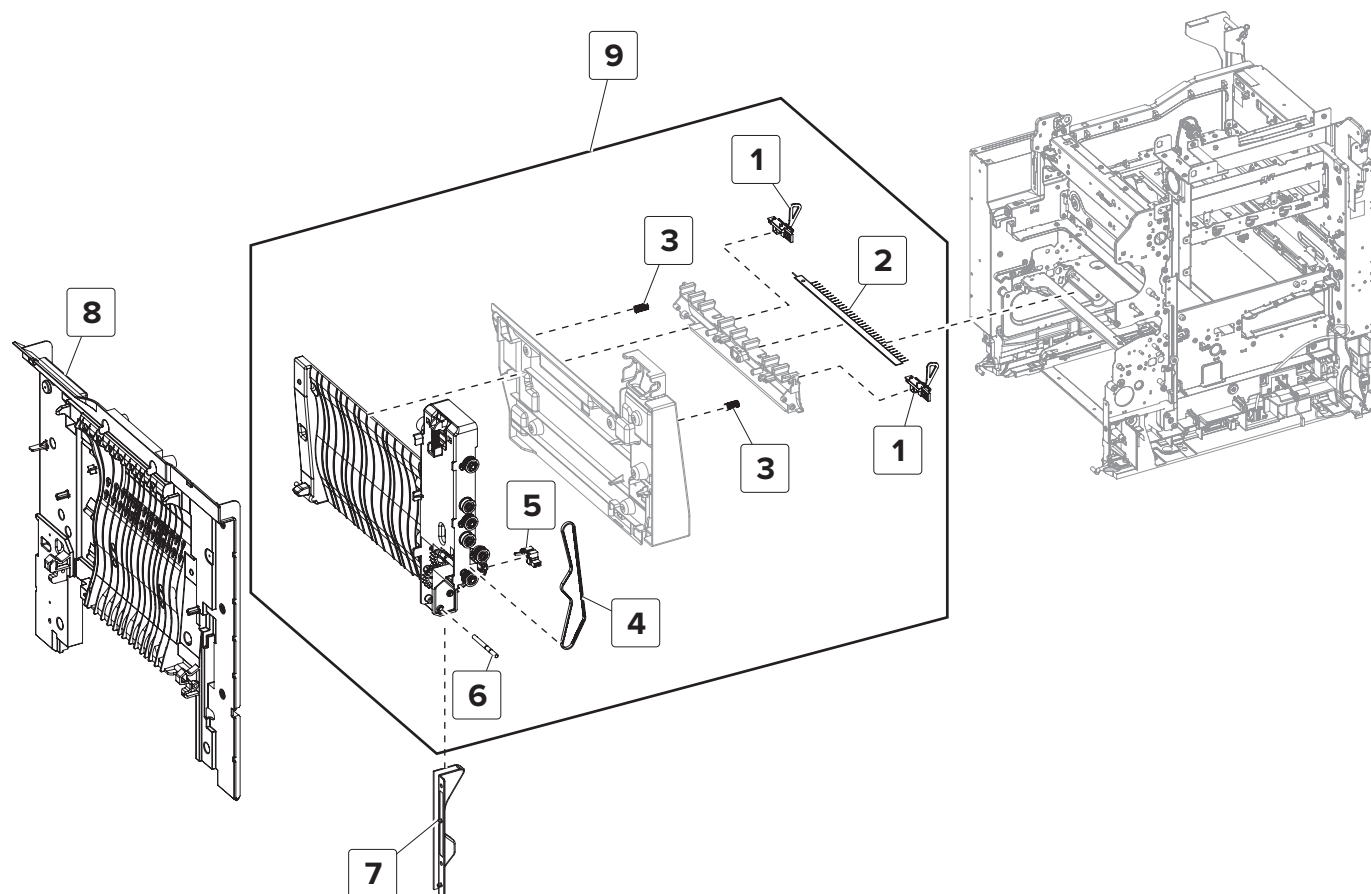

Assembly 10: Duplex

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0447	2	1	Sensor (fuser buckle)	“Sensors (fuser buckle and narrow media) removal” on page 354
2	41X0824	1	1	Static brush	--
3	41X0379	2	1	Guide spring	--
4	41X0378	1	1	Tensioner belt	“Tensioner belt removal” on page 351
5	41X0446	1	1	Sensor (duplex staging)	--
6	41X0377	1	1	Pivot shaft	“Pivot shaft removal” on page 351
7	41X0400	1	1	Cable cover	--
8	41X0426	1	1	Duplex outer guide	“Duplex outer guide removal” on page 349
9	41X0376	1	1	Duplex inner guide	“Duplex inner guide removal” on page 349

Assembly 11: Electrical

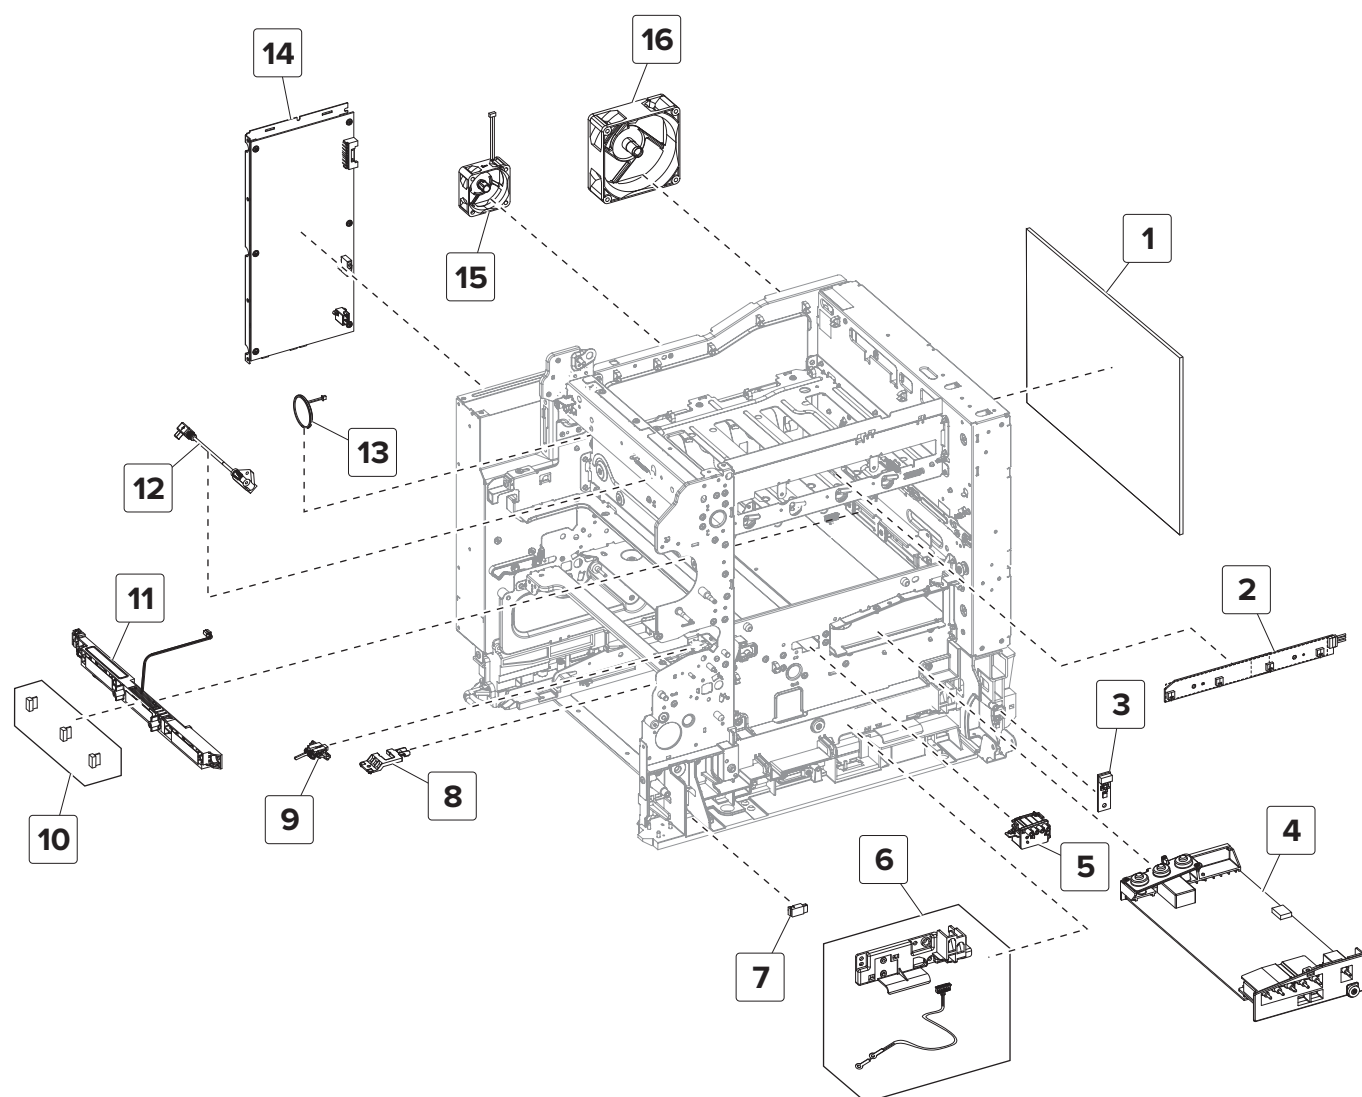


Assembly 11: Electrical

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
1	41X0266	1	1	Controller board	“Controller board removal” on page 415
2	41X0394	1	1	TMC card	“TMC card removal” on page 375
3	41X0785	1	1	Sensor (weather station)	“Sensor (weather station) removal ” on page 371
4	41X0270	1	1	High voltage power supply	“HVPS removal” on page 379
5	41X0382	1	1	Toner cartridge contacts	“Toner cartridge contacts removal” on page 388
6	41X0486	1	1	Sensor (waste toner contact)	“Sensor (waste toner contact) removal ” on page 374
7	41X0566	1	1	Sensor (MPF paper present)	“Sensor (MPF paper present) removal” on page 382
8	41X0450	1	1	Sensor (media type)	“Sensor (media type) removal” on page 400
9	41X0385	1	1	Sensor (input)	“Sensor (input) removal” on page 401
10	41X0578	1	3	TPS wipers	“TPS wiper removal” on page 392
11	41X0383	1	1	Sensor (TPS)	“Sensor (TPS) removal” on page 385
12	41X0488	1	1	Control panel USB cable	--
13	41X0399	1	1	Speaker	“Speaker removal” on page 437
14	41X0425	1	1	Low voltage power supply	“LVPS removal” on page 365
15	41X0398	1	1	Fuser fan	“Fuser fan removal” on page 359
16	41X0397	1	1	Main fan	“Main fan removal” on page 361
NS	41X0575	1	1	TPS cable	“TPS cables removal ” on page 417

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
NS	41X0413	1	1	Cable replacement pack: • Output roll motor cable • Paper path motors cable • CMY cartridge motors cable • Fuser motor cable • K cartridge ITM motor cable • Lower path sensors cable • Upper path sensors cable • Fuser DC cable • Input option cables • HVPS cable • LVPS DC cable • Fuser AC cable • AC line in cable • BOR motor cable	--
NS	41X0489	1	1	Control panel FFC cable	--
NS	41X0487	1	1	Speaker cable	--


Assembly 12: 550-sheet tray option 1

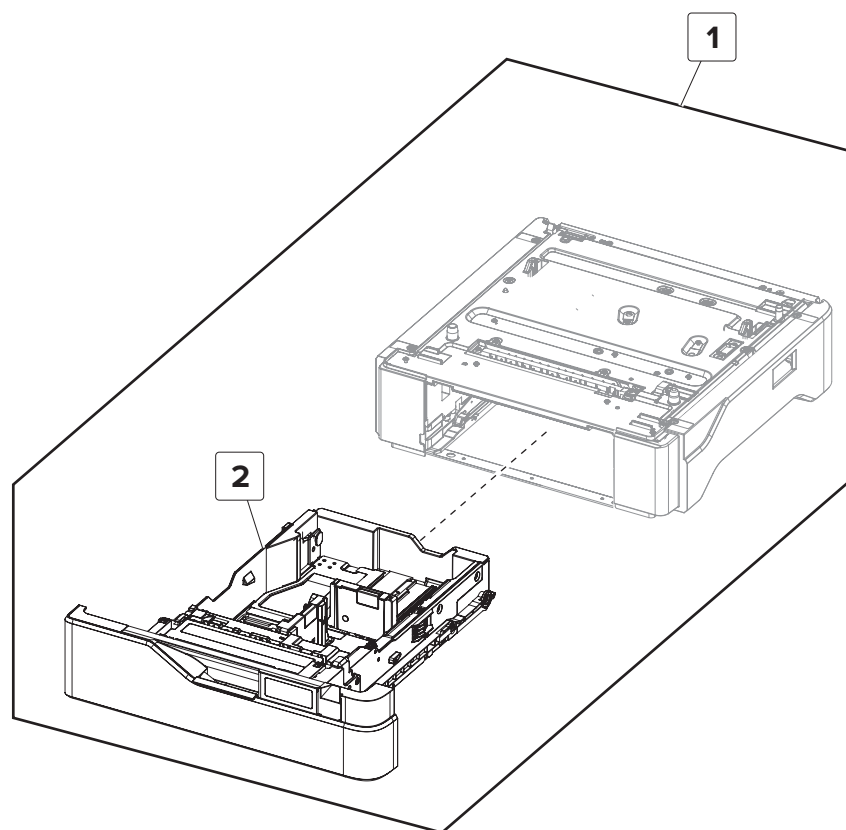

Assembly 12: 550-sheet tray option 1

Asm-index	P/N	Units/opt	Units/FRU	Description	Removal procedure
1	41X0271	1	1	550-sheet tray	--
2	41X0361	1	1	550-sheet tray insert	--


Assembly 13: 550-sheet tray option 2

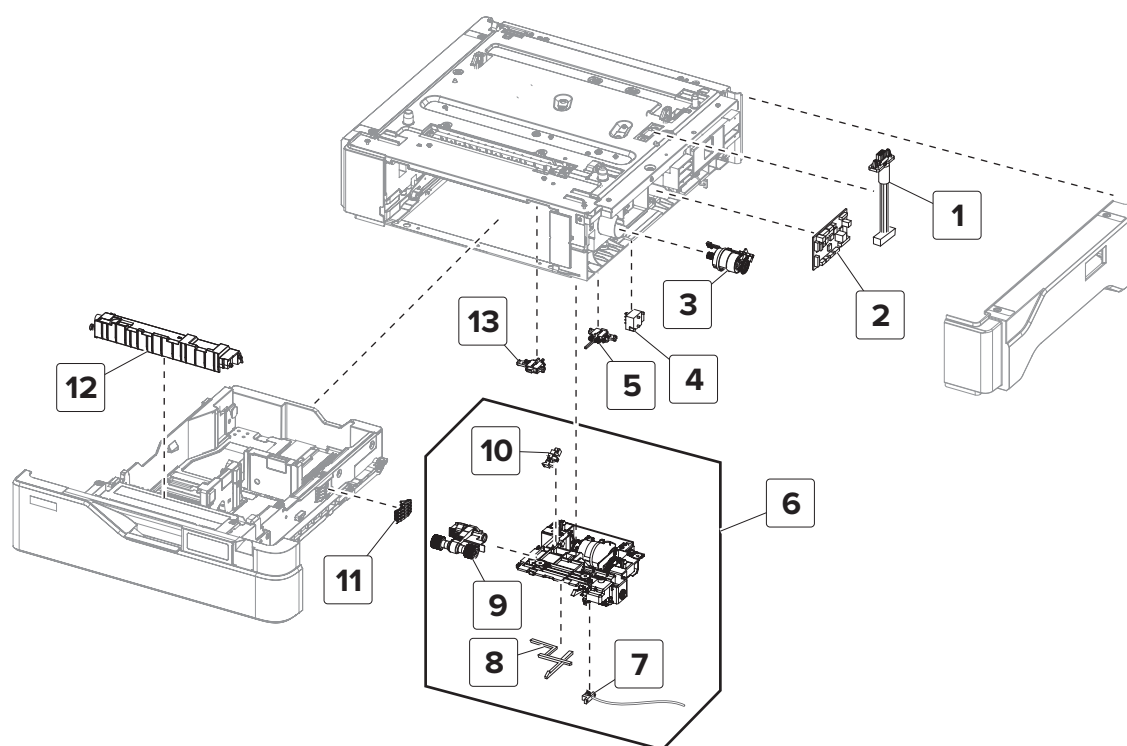

Assembly 13: 550-sheet tray option 2

Asm-index	P/N	Units/opt	Units/FRU	Description	Removal procedure
1	41X0471	1	1	550-sheet tray interface cable	“550-sheet tray interface cable removal” on page 458
2	41X0331	1	1	550-sheet tray controller board	“550-sheet tray controller board assembly removal” on page 457
3	41X0466	1	1	Motor (550-sheet tray pass-through)	“Motor (550-sheet tray pass-through) removal” on page 451
4	40X7911	1	1	Sensor (550-sheet tray paper size)	“Sensor (550-sheet tray paper size) removal” on page 455
5	41X0468	1	1	Sensor (550-sheet tray trailing edge)	“Sensor (550-sheet tray trailing edge) removal” on page 455
6	41X0396	1	1	550-sheet tray paper feeder	“550-sheet tray paper feeder removal” on page 453
7	41X0469	1	1	Sensor (550-sheet tray index)	“Sensor (550-sheet tray index) removal” on page 461
8	41X0472	1	1	550-sheet tray empty sensor actuator	“550-sheet tray empty sensor actuator removal” on page 459
9	41X0956	1	1	550-sheet tray pick roller	--
10	41X0470	1	1	Sensor (550-sheet tray empty)	“Sensor (550-sheet tray empty) removal” on page 460
11	41X0373	1	1	550-sheet tray paper size sensor actuator	--
12	41X0374	1	1	550-sheet tray separator pad	--
13	41X0334	1	1	Sensor (550-sheet tray pass-through)	“Sensor (550-sheet tray pass-through) removal” on page 454

Assembly 14: Adjustable stand

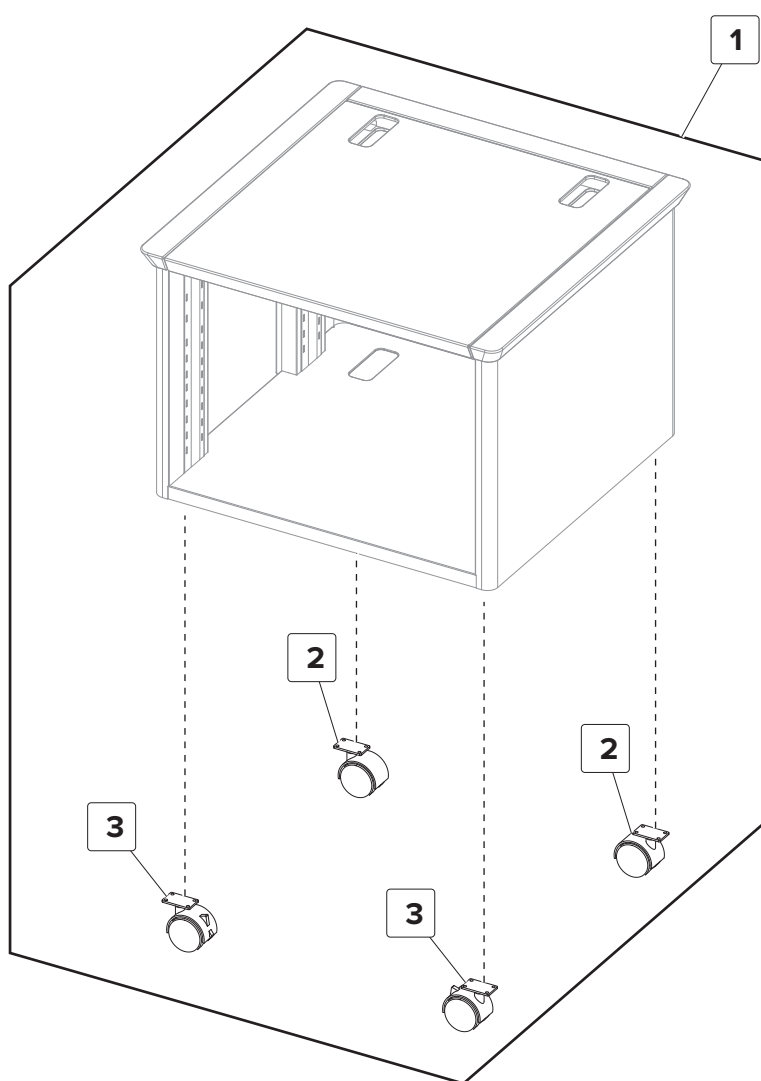

Assembly 14: Adjustable stand

Asm-index	P/N	Units/opt	Units/FRU	Description	Removal procedure
1	41X0764	1	1	Locking caster	--
2	41X0775	2	1	Nonlocking caster	--
3	41X0774	2	1	Locking caster	--

Assembly 15: Miscellaneous parts

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
NS	41X0015	1	1	Adapter–N8360 ISP + NFC/BLE dual band	--
NS	40X9935	1	1	Fax card	--
NS	40X9652	1	1	Adapter–Fiber gigabit ISP	--
NS	41X0028	1	1	DDR3 RAM, (G2) 2GB, 512Mx32, 204 SODIMM, Unbuffered Non-ECC	--
NS	41X1011	1	1	Font card, Hebrew	--
NS	41X1012	1	1	Font card, Arabic	--
NS	41X1013	1	1	Font card, Simplified Chinese	--
NS	41X1014	1	1	Font card, Traditional Chinese	--
NS	41X1015	1	1	Font card, Korean	--
NS	41X1016	1	1	Font card, Japanese	--
NS	41X1002	1	1	Forms bar code card	--
NS	41X1006	1	1	Prescribe card	--
NS	41X1004	1	1	IPDS SCS TNE card	--
NS	41X1010	1	1	Flash card	--

Assembly 16: Power cords

Asm-index	P/N	Units/mach	Units/FRU	Description	Removal procedure
NS	40X7104	1	1	US, Canada, Latin America LV	--
NS	40X0288	1	1	Argentina	--
NS	40X0259	1	1	Brazil LV	--
NS	40X0273	1	1	Chile, Uruguay	--
NS	40X0297	1	1	Bolivia, Peru, Paraguay	--
NS	40X0301	1	1	Australia, New Zealand	--
NS	40X3609	1	1	Japan	--
NS	40X1792	1	1	Korea	--
NS	40X0303	1	1	PRC	--
NS	40X1791	1	1	Taiwan	--
NS	40X0271	1	1	Hong Kong	--
NS	40X0279	1	1	Philippines, Thailand	--
NS	40X1767	1	1	Indonesia, Vietnam, Cambodia, Laos	--
NS	40X1773	1	1	Bangladesh, Nepal, Bhutan	--
NS	40X0271	1	1	Singapore, Malaysia, Pakistan, Sri Lanka, Myanmar, Brunei, India	--
NS	40X1767	1	1	Algeria, Austria, Benelux (Belgium, Luxembourg, Netherlands), Bosnia, Bulgaria, Croatia, Czech Republic, Egypt, Estonia, France, Germany, Greece, Hungary, Iceland, Italy, Latvia, Lithuania, Morocco, Poland, Portugal, Romania, Russia (CIS), Serbia, Slovakia, Spain, Turkey	--
NS	40X1774	1	1	Nordics	--
NS	40X0275	1	1	Israel	--
NS	40X1773	1	1	South Africa	--
NS	40X1772	1	1	Switzerland	--
NS	40X0271	1	1	UK, Saudi Arabia	--