


# **bizhub C353P**

## **User's Guide**

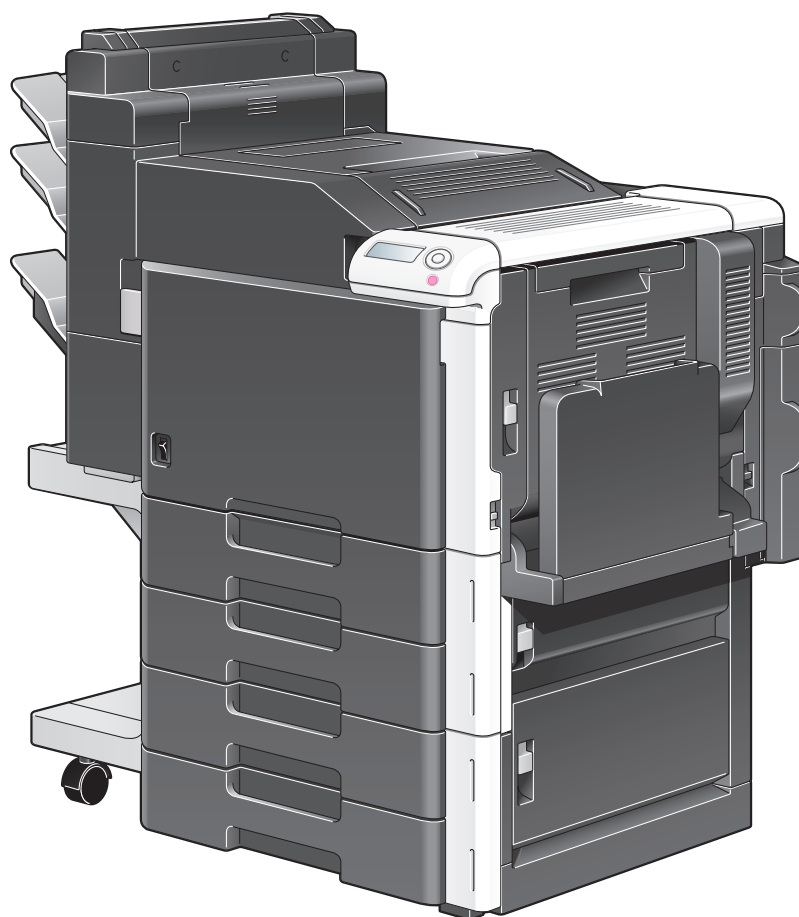

---

## Introduction

Thank you for choosing this machine.

This manual contains details on the operation of the various functions of the machine, precautions on its use, and basic troubleshooting procedures. In order to ensure that this machine is used correctly and efficiently, carefully read this manual as needed.

In order to operate the machine safely and properly, be sure to read the Quick Guide.

The illustrations used in this manual may appear slightly different from views of the actual equipment.

### Energy Star®



As an ENERGY STAR® Partner, we have determined that this machine meets the ENERGY STAR® Guidelines for energy efficiency.

#### **What is an ENERGY STAR® Product?**

An ENERGY STAR® product has a special feature that allows it to automatically switch to a "low-power mode" after a period of inactivity. An ENERGY STAR® product uses energy more efficiently, saves you money on utility bills and helps protect the environment.

# Contents

## Introduction

<b>Energy Star®</b> .....	<b>x-1</b>
What is an ENERGY STAR® Product? .....	x-1
<b>Contents</b> .....	<b>x-2</b>
<b>Trademarks and copyrights</b> .....	<b>x-14</b>
OpenSSL statement .....	x-15
NetSNMP License .....	x-16
Kerberos .....	x-18
Copyright .....	x-18
For EU member states only .....	x-19
For EU member states only .....	x-19
For Chinese users only .....	x-19
<b>SOFTWARE LICENSE AGREEMENT</b> .....	<b>x-20</b>
<b>About Adobe Color Profile</b> .....	<b>x-21</b>
<b>ICC Profile for TOYO INK Standard Color on Coated paper (TOYO Offset Coated 2.0)</b> .....	<b>x-23</b>
<b>DIC STANDARD COLOR PROFILE LICENSE AGREEMENT</b> .....	<b>x-24</b>
<b>Explanation of manual conventions</b> .....	<b>x-26</b>
<b>Descriptions of paper</b> .....	<b>x-28</b>
<b>User's Guides</b> .....	<b>x-29</b>
Printed manual .....	x-29
User's Guide CD manual .....	x-29

## 1 Before using the machine

<b>1.1</b>	<b>Part names and their functions</b> .....	<b>1-2</b>
1.1.1	Options .....	1-2
1.1.2	Outside of machine.....	1-4
1.1.3	Inside of machine .....	1-7
1.1.4	Finisher FS-519/Output tray OT-602/Punch kit PK-515 .....	1-8
1.1.5	Saddle stitcher SD-505/Mailbin kit MT-502 .....	1-10
1.1.6	Finisher FS-609/Punch kit PK-501 .....	1-12
1.1.7	Control panel .....	1-14
1.1.8	Display panel .....	1-14
<b>1.2</b>	<b>Power supply</b> .....	<b>1-15</b>
1.2.1	Turning on the machine .....	1-15
1.2.2	Turning off the machine .....	1-15
1.2.3	Automatically clearing settings (System Auto Reset) .....	1-16
1.2.4	Automatically conserving energy (Low Power mode).....	1-16
1.2.5	Automatically conserving energy (Sleep mode) .....	1-16
1.2.6	Manually switching to Power Save mode.....	1-17
1.2.7	Power supply .....	1-17
<b>1.3</b>	<b>Paper</b> .....	<b>1-18</b>
1.3.1	Possible paper sizes .....	1-18
1.3.2	Paper types and paper capacities .....	1-19
1.3.3	Special paper.....	1-19
1.3.4	Precautions for paper .....	1-20
1.3.5	Paper storage .....	1-21
1.3.6	Auto tray switch feature.....	1-21
1.3.7	Order for selecting paper trays.....	1-21
<b>1.4</b>	<b>Loading paper</b> .....	<b>1-22</b>
1.4.1	Loading paper into tray 1/2/3/4 .....	1-22
1.4.2	Loading paper into the LCT.....	1-23
1.4.3	Loading paper into the bypass tray.....	1-25
<b>1.5</b>	<b>Printer controller</b> .....	<b>1-29</b>

1.5.1	Role of the printer controller .....	1-29
1.5.2	Printing flow .....	1-30
<b>1.6</b>	<b>Operating environment .....</b>	<b>1-31</b>
1.6.1	Compatible computers and operating systems .....	1-31
	Windows .....	1-31
	Macintosh .....	1-31
1.6.2	Compatible interfaces .....	1-32
	Ethernet interface .....	1-32
	USB interface .....	1-32
	Connection diagram .....	1-32
1.6.3	Printer drivers applicable to operating systems .....	1-33
<b>1.7</b>	<b>Setting up the system .....</b>	<b>1-34</b>
1.7.1	Network connection .....	1-34
1.7.2	Local connection .....	1-34
<b>1.8</b>	<b>Contents of CD-ROM .....</b>	<b>1-36</b>
<b>1.9</b>	<b>Authentication Method .....</b>	<b>1-37</b>
1.9.1	User authentication and account track .....	1-37
1.9.2	When user authentication and account track are synchronized .....	1-37
1.9.3	When user authentication and account track are used separately .....	1-38
<b>1.10</b>	<b>User Box functions .....</b>	<b>1-39</b>
1.10.1	Available User Box functions .....	1-39
	Saving documents .....	1-39
	Using document data .....	1-40
1.10.2	Set-up for User Box functions .....	1-40
	User box registration .....	1-40
1.10.3	User authentication .....	1-40
	Machine authentication .....	1-41
	Account track .....	1-41
1.10.4	Limitation on user box registration .....	1-42
	Public/personal/group user boxes .....	1-42
1.10.5	Authentication and accessible user boxes .....	1-42
	When user authentication and account track settings are not specified .....	1-42
	When only user authentication settings are specified .....	1-42
	When only account track settings are specified .....	1-43
	When user authentication and account track settings are specified and synchronized .....	1-43
	When user authentication and account track settings are specified but not synchronized .....	1-44

## 2 Network settings

<b>2.1</b>	<b>Specifying general settings for TCP/IP-based communication .....</b>	<b>2-2</b>
	TCP/IP Settings .....	2-2
<b>2.2</b>	<b>Using PageScope Web Connection .....</b>	<b>2-4</b>
2.2.1	TCP/IP Settings .....	2-4
2.2.2	PSWC Settings .....	2-4
2.2.3	TCP Socket Setting .....	2-5
2.2.4	SSL/TLS Setting .....	2-5
<b>2.3</b>	<b>Logging in to Administrator mode of PageScope Web Connection .....</b>	<b>2-6</b>
<b>2.4</b>	<b>Specifying network print settings .....</b>	<b>2-7</b>
2.4.1	Specifying LPR/Port9100 print settings .....	2-7
	TCP/IP Settings .....	2-7
	LPD Setting .....	2-7
	RAW Port Number .....	2-7
2.4.2	Specifying SMB print settings .....	2-8
	TCP/IP Settings .....	2-8
	Print Setting .....	2-9
	Direct Hosting Setting .....	2-10
	WINS Setting .....	2-11
2.4.3	Specifying IPP print settings .....	2-12
	TCP/IP Settings .....	2-12

	IPP Setting .....	2-13
	IPP Authentication Setting .....	2-14
2.4.4	Specifying IPPS print settings .....	2-14
	TCP/IP Settings .....	2-15
	IPP Setting .....	2-15
	SSL/TLS Setting .....	2-15
	IPP Authentication Setting .....	2-15
2.4.5	Specifying Bonjour print settings .....	2-15
	Bonjour Setting .....	2-15
2.4.6	Specifying AppleTalk print settings .....	2-16
	AppleTalk Setting .....	2-16
2.4.7	Specifying Web Service Function settings .....	2-17
	TCP/IP Settings .....	2-17
	Web Service Common Settings .....	2-18
	Printer Settings .....	2-19

### 3 Installing the printer driver for Windows

<b>3.1</b>	<b>Connection methods selectable in each operating system .....</b>	<b>3-2</b>
3.1.1	Windows 2000/XP/Server 2003 .....	3-2
3.1.2	Windows Vista .....	3-3
3.1.3	Windows NT 4.0 .....	3-4
<b>3.2</b>	<b>Automatic installation using the installer .....</b>	<b>3-4</b>
3.2.1	Installer operating environment .....	3-4
3.2.2	Settings of this machine .....	3-4
3.2.3	Installation of the printer driver .....	3-5
<b>3.3</b>	<b>Installation using the wizard (Windows XP/Server 2003) .....</b>	<b>3-8</b>
3.3.1	Network connection (LPR/Port9100) .....	3-8
	TCP/IP setting for this machine .....	3-8
	RAW port number setting for this machine .....	3-8
	LPD setting for this machine .....	3-8
	Printer driver installation using the Add Printer Wizard .....	3-8
3.3.2	Network connection (SMB) .....	3-11
	TCP/IP setting for this machine .....	3-11
	SMB setting for this machine .....	3-11
	Printer driver installation by specifying printers using the Add Printer Wizard .....	3-12
3.3.3	Network connection (IPP or IPPS) .....	3-14
	Specifying the TCP/IP setting for this machine .....	3-14
	Specifying the IPP settings for this machine .....	3-14
	Printer driver installation using the Add Printer wizard .....	3-14
3.3.4	Local connection .....	3-15
<b>3.4</b>	<b>Installation using the wizard (Windows Vista) .....</b>	<b>3-17</b>
3.4.1	Network connection (LPR, Port9100, or SMB) .....	3-17
	Specifying the TCP/IP setting for this machine .....	3-17
	RAW port number setting for this machine .....	3-17
	LPD setting for this machine .....	3-17
	SMB setting for this machine .....	3-17
	Printer driver installation by searching printers using the Add Printer Wizard .....	3-17
	Printer driver installation by creating a port using the Add Printer Wizard .....	3-19
3.4.2	Network connection (IPP or IPPS) .....	3-21
	Specifying the TCP/IP setting for this machine .....	3-21
	Specifying the IPP settings for this machine .....	3-22
	Printer driver installation using the Add Printer wizard .....	3-22
3.4.3	Network connection (Web Service print) .....	3-23
	TCP/IP setting for this machine .....	3-23
	Web Service settings for this machine .....	3-23
	Printer installation from the Network window .....	3-23
	Printer driver installation by specifying the IP address using the Add Printer Wizard .....	3-24
3.4.4	Local connection .....	3-27
<b>3.5</b>	<b>Installation using the wizard (Windows 2000) .....</b>	<b>3-28</b>

3.5.1	Network connection (LPR/Port9100).....	3-28
	TCP/IP setting for this machine.....	3-28
	RAW port number setting for this machine .....	3-28
	LPD setting for this machine .....	3-28
	Printer driver installation using the Add Printer Wizard .....	3-28
3.5.2	Network connection (SMB).....	3-30
	TCP/IP setting for this machine.....	3-30
	SMB setting for this machine .....	3-30
	Printer driver installation using the Add Printer Wizard .....	3-31
3.5.3	Network connection (IPP or IPPS).....	3-32
	Specifying the TCP/IP setting for this machine .....	3-32
	Specifying the IPP settings for this machine.....	3-32
	Printer driver installation using the Add Printer wizard.....	3-32
3.5.4	Local connection .....	3-33
<b>3.6</b>	<b>Installation using the wizard (Windows NT 4.0) .....</b>	<b>3-34</b>
3.6.1	Network connection (LPR).....	3-34
	TCP/IP setting for this machine.....	3-34
	LPD setting for this machine .....	3-34
	Printer driver installation using the Add Printer Wizard .....	3-34
<b>3.7</b>	<b>Uninstalling the printer driver .....</b>	<b>3-36</b>
3.7.1	Uninstallation by an uninstallation program .....	3-36
3.7.2	Uninstallation by an installer .....	3-36
3.7.3	Manual uninstallation .....	3-37

## 4 Installing the printer driver for Macintosh

<b>4.1</b>	<b>Selectable connection methods.....</b>	<b>4-2</b>
<b>4.2</b>	<b>Installing the printer driver on Macintosh OSX 10.2/10.3/10.4 .....</b>	<b>4-3</b>
4.2.1	Installing the printer driver .....	4-3
4.2.2	Selecting and connecting the printer (OS 10.4).....	4-4
	Specifying the Bonjour settings.....	4-4
	Specifying the AppleTalk settings .....	4-5
	Specifying the LPR settings .....	4-6
	Specifying the IPP settings.....	4-8
4.2.3	Selecting and connecting the printer (OS 10.2 and 10.3).....	4-9
	Specifying the Rendezvous settings .....	4-9
	Specifying the AppleTalk settings .....	4-10
	Specifying the LPR settings .....	4-11
	Specifying the IPP settings.....	4-12
<b>4.3</b>	<b>Mac OS 9.2 .....</b>	<b>4-14</b>
4.3.1	Installing the printer driver .....	4-14
4.3.2	Selecting and connecting the printer.....	4-14
	Specifying the AppleTalk settings .....	4-14
	Specifying the LPR settings .....	4-15
<b>4.4</b>	<b>Uninstalling the printer driver .....</b>	<b>4-17</b>
4.4.1	For Macintosh OS X .....	4-17
4.4.2	For Macintosh OS 9.2.....	4-17

## 5 Print functions of the printer drivers for Windows

<b>5.1</b>	<b>Printing operations .....</b>	<b>5-2</b>
<b>5.2</b>	<b>Initializing the PCL/PS printer driver .....</b>	<b>5-3</b>
5.2.1	How to display the Properties screen .....	5-3
5.2.2	Configure tab .....	5-3
5.2.3	Settings tab .....	5-4
5.2.4	Registration of the default settings.....	5-5
<b>5.3</b>	<b>Common settings for the PCL/PS drivers .....</b>	<b>5-6</b>
<b>5.4</b>	<b>Parameter details for the PCL/PS drivers .....</b>	<b>5-7</b>
5.4.1	Basic tab.....	5-7

5.4.2	Layout tab .....	5-9
5.4.3	Finish tab .....	5-10
5.4.4	Cover Mode tab .....	5-11
5.4.5	Stamp/Composition tab .....	5-12
	Editing watermark .....	5-14
	Editing copy protect .....	5-15
	Editing date/time and page number .....	5-16
5.4.6	Quality tab .....	5-17
5.4.7	Other tab .....	5-18

## 6 Print functions of the printer driver for Macintosh

<b>6.1</b>	<b>Printing operations for OS X .....</b>	<b>6-2</b>
<b>6.2</b>	<b>Default settings for the OS X printer driver .....</b>	<b>6-3</b>
6.2.1	Options .....	6-3
6.2.2	Registration of the default settings .....	6-3
<b>6.3</b>	<b>Common settings for the OS X printer driver .....</b>	<b>6-5</b>
<b>6.4</b>	<b>How to add a custom size for the OS X printer driver .....</b>	<b>6-6</b>
<b>6.5</b>	<b>Parameter details for the OS X printer driver .....</b>	<b>6-7</b>
6.5.1	Page Attributes .....	6-7
6.5.2	Copies & Pages .....	6-7
6.5.3	Output Method .....	6-8
	Checking the Output Method setting details .....	6-9
6.5.4	Layout/Finish .....	6-11
6.5.5	Paper Tray/Output Tray .....	6-13
6.5.6	Cover Mode/Transparency Interleave .....	6-14
6.5.7	Per Page Setting .....	6-15
6.5.8	Stamp/Composition .....	6-16
	Editing copy protect .....	6-17
	Editing date/time .....	6-18
	Editing page number .....	6-19
	Editing header/footer .....	6-19
6.5.9	Quality .....	6-20
<b>6.6</b>	<b>Printing operations for OS 9 .....</b>	<b>6-21</b>
<b>6.7</b>	<b>Default settings for the OS 9 printer driver .....</b>	<b>6-22</b>
6.7.1	Options .....	6-22
6.7.2	Registration of the default settings .....	6-22
<b>6.8</b>	<b>Parameter details for the OS 9 printer driver .....</b>	<b>6-24</b>
6.8.1	Page Attributes .....	6-24
6.8.2	Setting Custom Page Size .....	6-24
6.8.3	General .....	6-25
6.8.4	Layout (Pages per sheet) .....	6-25
6.8.5	Printer specific options (Finishing Options 1 to 5) .....	6-26

## 7 Function detail description

<b>7.1</b>	<b>Proof print .....</b>	<b>7-2</b>
7.1.1	Setting up the printer driver .....	7-2
	For Windows .....	7-2
	For Macintosh OS X .....	7-3
7.1.2	Recalling a job from the control panel .....	7-4
<b>7.2</b>	<b>Secure print .....</b>	<b>7-5</b>
7.2.1	Setting up the printer driver .....	7-5
	For Windows .....	7-5
	For Macintosh OS X .....	7-7
7.2.2	Recalling a job from the control panel .....	7-8
	When "SecurePrintAccess" is set to "Mode 1" .....	7-8
	When "SecurePrintAccess" is set to "Mode 2" .....	7-9

<b>7.3</b>	<b>Save in User Box.....</b>	<b>7-10</b>
7.3.1	Setting up the printer driver.....	7-10
	For Windows.....	7-10
	For Macintosh OS X .....	7-11
7.3.2	Recalling a job from the control panel.....	7-13
<b>7.4</b>	<b>Save in Annotation User Box.....</b>	<b>7-15</b>
7.4.1	Setting up the printer driver.....	7-15
	For Windows.....	7-15
	For Macintosh OS X .....	7-16
7.4.2	Recalling a job from the control panel.....	7-18
<b>7.5</b>	<b>Save in Encrypted PDF Box.....</b>	<b>7-20</b>
7.5.1	Specifying Encrypted PDF file .....	7-20
7.5.2	Recalling a job from the control panel.....	7-21
<b>7.6</b>	<b>Printing on a machine with the user authentication set up.....</b>	<b>7-22</b>
7.6.1	Setting up the printer driver.....	7-22
	For Windows.....	7-22
	For Macintosh OS X .....	7-24
<b>7.7</b>	<b>Printing with the machine enabling the Account Track function.....</b>	<b>7-25</b>
7.7.1	Setting up the printer driver.....	7-25
	For Windows.....	7-25
	For Macintosh OS X .....	7-27
<b>7.8</b>	<b>Touch and Print.....</b>	<b>7-28</b>
7.8.1	Touch and Print operation procedure .....	7-28
7.8.2	Recalling a job from the control panel.....	7-29
<b>7.9</b>	<b>Specifying a user-defined encryption passphrase.....</b>	<b>7-30</b>
7.9.1	Settings of this machine .....	7-30
7.9.2	Setting up the printer driver.....	7-31
	For Windows.....	7-31
	For Macintosh OS X .....	7-32
<b>7.10</b>	<b>ICC profile settings.....</b>	<b>7-34</b>
7.10.1	Setting up the printer driver.....	7-34
	For Windows.....	7-34
	For Macintosh OS X .....	7-35
<b>7.11</b>	<b>Registering ICC profiles in the printer driver.....</b>	<b>7-36</b>
7.11.1	Setting up the printer driver.....	7-36
	For Windows.....	7-36
	For Macintosh OS X .....	7-37
<b>7.12</b>	<b>Banner paper printing function .....</b>	<b>7-39</b>
7.12.1	Copy paper.....	7-39
	Applicable paper.....	7-39
7.12.2	Printer drivers and supported operating systems .....	7-39
7.12.3	Setting up the printer driver.....	7-39
7.12.4	Printing.....	7-40

## 8 Settings for control panel

<b>8.1</b>	<b>Control panel.....</b>	<b>8-2</b>
8.1.1	Basic operations.....	8-2
	Basic menu operations.....	8-2
	Operations for changing numeric values .....	8-4
<b>8.2</b>	<b>List of "Utility" menu parameters.....</b>	<b>8-6</b>
	Main Menu.....	8-6
	Job Operation Menu .....	8-6
	Paper Setting Menu.....	8-7
	User Setting Menu.....	8-8
	System Setting Menu .....	8-10
	Admin. Settings Menu .....	8-13
	Banner Printing Menu .....	8-15
<b>8.3</b>	<b>Parameters.....</b>	<b>8-16</b>

8.3.1	Job Operation Menu .....	8-16
	User name input items.....	8-16
	Account name input items.....	8-16
	Document selection items .....	8-16
	Printing items.....	8-17
8.3.2	Paper Settings Menu .....	8-17
8.3.3	User Settings Menu .....	8-17
	Print Reports.....	8-17
	Consumables.....	8-18
	System Settings.....	8-18
	Printer Settings .....	8-19
	Font List.....	8-20
8.3.4	System Settings Menu.....	8-21
	System Settings.....	8-21
	Network Settings .....	8-21
	Printer Settings .....	8-23
	System Connection .....	8-23
8.3.5	Admin. Settings Menu .....	8-24
	Security Settings.....	8-24
	User Box Settings.....	8-26
	AuthDeviceSetting .....	8-26
	Expert Adjustment .....	8-27

## 9 PageScope Web Connection

<b>9.1</b>	<b>Using PageScope Web Connection .....</b>	<b>9-2</b>
9.1.1	Operating environment.....	9-2
9.1.2	Accessing PageScope Web Connection.....	9-2
9.1.3	Web browser cache.....	9-3
	With Internet Explorer .....	9-3
	With Netscape Navigator.....	9-3
	With Mozilla Firefox .....	9-3
9.1.4	Structure of pages.....	9-4
<b>9.2</b>	<b>Logging on and logging off.....</b>	<b>9-6</b>
9.2.1	Login and logout operations.....	9-6
	When user authentication and account track settings are not specified .....	9-6
	When user authentication and account track settings are specified .....	9-7
9.2.2	Logout.....	9-8
9.2.3	Login .....	9-8
	Options that can be selected when logged on to PageScope Web Connection.....	9-8
	Logging on as a public user .....	9-9
	Logging on as a registered user .....	9-9
	Logging on to Administrator mode.....	9-10
<b>9.3</b>	<b>Overview of User mode.....</b>	<b>9-11</b>
9.3.1	Information.....	9-11
9.3.2	Job .....	9-12
9.3.3	Box .....	9-12
9.3.4	Direct Print.....	9-13
<b>9.4</b>	<b>Overview of Administrator mode .....</b>	<b>9-14</b>
9.4.1	Maintenance .....	9-14
9.4.2	Security.....	9-15
9.4.3	Box .....	9-16
9.4.4	Print Setting .....	9-17
9.4.5	Network .....	9-18
<b>9.5</b>	<b>Box settings .....</b>	<b>9-20</b>
9.5.1	Changing user box settings or deleting a user box.....	9-20
	Open User Box .....	9-20
9.5.2	Creating a new user box.....	9-21
	Create User Box .....	9-21
9.5.3	Changing system box settings or deleting system boxes.....	9-22

	Open System User Box .....	9-22
9.5.4	Creating a new system user box .....	9-23
	Create System User Box .....	9-23
<b>9.6</b>	<b>Importing or exporting setting information.....</b>	<b>9-24</b>
	Import/Export.....	9-24
<b>9.7</b>	<b>Specifying the date and time on this machine.....</b>	<b>9-25</b>
9.7.1	Manual Setting.....	9-25
9.7.2	TCP/IP Settings .....	9-26
9.7.3	Time Zone .....	9-26
9.7.4	Time Adjustment Setting .....	9-26
<b>9.8</b>	<b>Limiting users using this machine (Machine authentication).....</b>	<b>9-28</b>
9.8.1	User Auth/Account Track .....	9-29
9.8.2	User Registration .....	9-30
9.8.3	Account Track Registration .....	9-32
<b>9.9</b>	<b>Limiting users using this machine (Active Directory).....</b>	<b>9-33</b>
9.9.1	TCP/IP Settings .....	9-33
9.9.2	External Server Registration .....	9-34
9.9.3	User Auth/Account Track .....	9-35
9.9.4	Default Function Permission.....	9-36
9.9.5	Date/Time Setting .....	9-36
<b>9.10</b>	<b>Limiting users using this machine (Windows domain/workgroup).....</b>	<b>9-37</b>
9.10.1	TCP/IP Settings .....	9-37
9.10.2	External Server Registration .....	9-38
9.10.3	User Auth/Account Track .....	9-39
9.10.4	Default Function Permission.....	9-39
9.10.5	Client Setting .....	9-40
9.10.6	WINS Setting .....	9-41
<b>9.11</b>	<b>Limiting users using this machine (NDS).....</b>	<b>9-42</b>
9.11.1	External Server Registration .....	9-42
9.11.2	User Auth/Account Track .....	9-43
9.11.3	Default Function Permission.....	9-43
9.11.4	NetWare Setting .....	9-44
<b>9.12</b>	<b>Limiting users using this machine (LDAP).....</b>	<b>9-45</b>
9.12.1	TCP/IP Settings .....	9-45
9.12.2	External Server Registration .....	9-46
9.12.3	User Auth/Account Track .....	9-47
9.12.4	Default Function Permission.....	9-47
9.12.5	LDAP over SSL .....	9-48
	External Server Registration .....	9-48
	Action for Invalid Certificate .....	9-48
<b>9.13</b>	<b>Creating a certificate for this machine for SSL-based communication.....</b>	<b>9-49</b>
9.13.1	Create a self-signed Certificate .....	9-50
9.13.2	Request a Certificate .....	9-51
9.13.3	Install a Certificate .....	9-52
9.13.4	Set an Encryption Strength .....	9-53
9.13.5	Set Mode using SSL.....	9-54
9.13.6	Remove a certificate .....	9-54
<b>9.14</b>	<b>Using SSL communication between Vista and this machine with Web Service Function .....</b>	<b>9-55</b>
9.14.1	Using SSL for communication from Vista to this machine with Web Service Function .....	9-55
9.14.2	Using SSL for communication from this machine to Vista with Web Service Function .....	9-55
9.14.3	TCP/IP Settings .....	9-56
9.14.4	SSL/TLS Setting .....	9-56
9.14.5	Web Service Common Settings .....	9-56
9.14.6	Action for Invalid Certificate .....	9-56
<b>9.15</b>	<b>Performing IP address filtering .....</b>	<b>9-57</b>
9.15.1	TCP/IP Settings .....	9-57

9.15.2	IP Filtering .....	9-57
<b>9.16</b>	<b>Communicating using IPv6 .....</b>	<b>9-58</b>
	TCP/IP Setting .....	9-58
<b>9.17</b>	<b>Communicating using IPsec .....</b>	<b>9-61</b>
9.17.1	TCP/IP Settings .....	9-61
9.17.2	IPsec .....	9-62
9.17.3	IKE Setting .....	9-63
9.17.4	SA Setting .....	9-63
9.17.5	Peer .....	9-64
<b>9.18</b>	<b>Monitoring this machine using the SNMP manager .....</b>	<b>9-65</b>
9.18.1	TCP/IP Settings .....	9-65
9.18.2	NetWare Setting .....	9-66
9.18.3	SNMP Setting .....	9-67
<b>9.19</b>	<b>Providing notification of the status of this machine (E-mail) .....</b>	<b>9-69</b>
9.19.1	TCP/IP Settings .....	9-69
9.19.2	E-mail TX (SMTP) .....	9-70
9.19.3	Status Notification Setting .....	9-71
9.19.4	SMTP over SSL/Start TLS .....	9-72
	E-mail TX (SMTP) .....	9-72
	Action for Invalid Certificate .....	9-72
9.19.5	SMTP Authentication .....	9-73
9.19.6	POP before SMTP .....	9-73
	POP before SMTP .....	9-73
	E-mail RX (POP) .....	9-74
9.19.7	POP over SSL .....	9-75
	E-mail RX (POP) .....	9-75
	Action for Invalid Certificate .....	9-75
9.19.8	APOP Authentication .....	9-76
<b>9.20</b>	<b>Providing notification of the status of this machine (TRAP) .....</b>	<b>9-77</b>
9.20.1	TCP/IP Settings .....	9-77
9.20.2	NetWare Setting .....	9-78
9.20.3	TRAP Setting .....	9-78
9.20.4	Status Notification Setting .....	9-78
<b>9.21</b>	<b>Using the TCP Socket/OpenAPI/FTP server function .....</b>	<b>9-79</b>
9.21.1	TCP/IP Settings .....	9-79
9.21.2	SSL/TLS Setting .....	9-79
9.21.3	TCP Socket Setting .....	9-80
9.21.4	OpenAPI Setting .....	9-81
9.21.5	FTP Server Setting .....	9-82
<b>9.22</b>	<b>Other items on the Maintenance tab .....</b>	<b>9-83</b>
9.22.1	Using the timer function .....	9-83
	Power Save Setting .....	9-83
9.22.2	Resetting setting information .....	9-84
	Network Setting Clear .....	9-84
	Reset .....	9-85
9.22.3	Registering the header or footer .....	9-86
	Header/Footer Registration .....	9-86
<b>9.23</b>	<b>Other items on the Security tab .....</b>	<b>9-88</b>
9.23.1	Specifying the auto logout time .....	9-88
	Auto Logout .....	9-88
9.23.2	Specifying the Administrator password .....	9-89
	Administrator Password Setting .....	9-89
<b>9.24</b>	<b>Print Setting tab settings .....</b>	<b>9-90</b>
9.24.1	Specifying initial settings for the print function .....	9-90
	Basic Setting .....	9-90
9.24.2	Specifying settings for PCL/PS/XPS print .....	9-91
	PCL Settings .....	9-91

	PS Setting .....	9-92
	XPS Settings .....	9-93
9.24.3	Specifying the interface timeout .....	9-93
	Interface Setting .....	9-93

## 10 Troubleshooting

<b>10.1</b>	<b>When an error code appears .....</b>	<b>10-2</b>
<b>10.2</b>	<b>When the message "Misfeed detected. XXXX Remove paper." appears .....</b>	<b>10-3</b>
10.2.1	Paper misfeed indications .....	10-4
10.2.2	Clearing a paper misfeed in the fusing unit .....	10-5
10.2.3	Clearing a paper misfeed in the main unit .....	10-8
10.2.4	Clearing a paper misfeed in the automatic duplex unit .....	10-11
10.2.5	Clearing a paper misfeed in the bypass tray .....	10-12
10.2.6	Clearing a paper misfeed in the paper transport section .....	10-14
10.2.7	Clearing a paper misfeed in tray 1 .....	10-16
10.2.8	Clearing a paper misfeed in tray 2 .....	10-19
10.2.9	Clearing a paper misfeed in paper feed cabinet (Tray 3/4) .....	10-20
10.2.10	Clearing a paper misfeed in the LCT .....	10-22
10.2.11	To clear a banner paper misfeed .....	10-23
10.2.12	Clearing a paper misfeed in finisher FS-519 .....	10-28
10.2.13	Clearing a paper misfeed in the mailbin .....	10-31
10.2.14	Clearing a paper misfeed in the saddle stitcher .....	10-32
10.2.15	To clear a paper misfeed in finisher FS-609 .....	10-34
<b>10.3</b>	<b>When the message "Staple Jam Detection" appears .....</b>	<b>10-37</b>
10.3.1	Clearing jammed staples in finisher FS-519 .....	10-37
10.3.2	Clearing jammed staples in the saddle stitcher .....	10-39
10.3.3	To clear jammed staples in finisher FS-609 .....	10-40
<b>10.4</b>	<b>When the message "Replenish paper" appears .....</b>	<b>10-43</b>
<b>10.5</b>	<b>When the message "Memory Over flow" appears .....</b>	<b>10-44</b>
<b>10.6</b>	<b>When the message "Replace XXXX soon." appears .....</b>	<b>10-45</b>
<b>10.7</b>	<b>When the message "Please replace XXXX." appears .....</b>	<b>10-46</b>
<b>10.8</b>	<b>When the message "Remote Operation Please do not turn off power." appears .....</b>	<b>10-47</b>
<b>10.9</b>	<b>Simple troubleshooting .....</b>	<b>10-48</b>
<b>10.10</b>	<b>Main messages and their remedies .....</b>	<b>10-51</b>

## 11 Replacing consumables

<b>11.1</b>	<b>Replacing the toner cartridge .....</b>	<b>11-2</b>
11.1.1	To replace the toner cartridge .....	11-3
<b>11.2</b>	<b>Replacing the waste toner box .....</b>	<b>11-6</b>
11.2.1	To replace the waste toner box .....	11-6
<b>11.3</b>	<b>Replacing an imaging unit .....</b>	<b>11-9</b>
11.3.1	To replace the imaging unit .....	11-9
<b>11.4</b>	<b>Replacing the staple cartridge .....</b>	<b>11-14</b>
11.4.1	To replace the staple cartridge in the finisher FS-519 .....	11-14
11.4.2	To replace the staple cartridge in saddle stitcher .....	11-16
11.4.3	To replace the staple cartridge for finisher FS-609 .....	11-18
<b>11.5</b>	<b>Emptying the punch scrap box .....</b>	<b>11-22</b>
11.5.1	To empty the punch scrap box in the finisher FS-519 .....	11-22
11.5.2	To empty the punch scrap box in the finisher FS-609 .....	11-23

## 12 Care of the machine

<b>12.1</b>	<b>Cleaning .....</b>	<b>12-2</b>
12.1.1	Housing .....	12-2
12.1.2	Control panel .....	12-2

12.1.3	Electrostatic charger wire .....	12-3
12.1.4	Print head .....	12-3
12.2	<b>When the message "Time for periodic device check." appears .....</b>	<b>12-5</b>

## 13 Specifications

13.1	<b>Specifications.....</b>	<b>13-2</b>
13.1.1	Main unit .....	13-2
13.1.2	Automatic duplex unit.....	13-4
13.1.3	Paper feed cabinet PC-104 .....	13-4
13.1.4	Paper feed cabinet PC-204 .....	13-4
13.1.5	Paper feed cabinet PC-405 .....	13-5
13.1.6	Finisher FS-519 .....	13-5
13.1.7	Punch kit PK-515.....	13-6
13.1.8	Saddle stitcher SD-505 .....	13-6
13.1.9	Output tray OT-602 .....	13-6
13.1.10	Mailbin kit MT-502.....	13-7
13.1.11	Finisher FS-609 .....	13-7
13.1.12	Punch kit PK-501 .....	13-7

## 14 Authentication unit (Biometric type AU-101)

14.1	<b>Safety information .....</b>	<b>14-2</b>
14.1.1	Important information .....	14-2
14.1.2	For safe use .....	14-2
14.1.3	Regulation notices .....	14-2
	USER INSTRUCTIONS FCC PART 15 - RADIO FREQUENCY DEVICES (For U.S.A. Users).....	14-2
	WARNING .....	14-2
14.2	<b>Product features .....</b>	<b>14-3</b>
14.3	<b>Part names and their functions .....</b>	<b>14-4</b>
14.4	<b>Using authentication unit (Biometric type) AU-101 .....</b>	<b>14-5</b>
14.4.1	Positioning your finger .....	14-5
14.4.2	Machine settings .....	14-6
14.4.3	Registering users .....	14-8
	Setup .....	14-9
	Registering users .....	14-13
14.5	<b>Care of authentication unit (Biometric type) AU-101 .....</b>	<b>14-19</b>
	Care of the housing .....	14-19
	Care of the cover .....	14-19
14.6	<b>Specifications.....</b>	<b>14-20</b>
14.7	<b>Troubleshooting.....</b>	<b>14-21</b>

## 15 Authentication unit (IC card type AU-201)

15.1	<b>Safety information .....</b>	<b>15-2</b>
15.1.1	Important information .....	15-2
15.1.2	For safe use .....	15-2
15.1.3	Regulation notices .....	15-2
	USER INSTRUCTIONS FCC PART 15 - RADIO FREQUENCY DEVICES (For U.S.A. Users).....	15-2
	WARNING .....	15-2
	INTERFERENCE-CAUSING EQUIPMENT STANDARD (ICES- 003 ISSUE 4) (For Canada Users) .....	15-3
15.2	<b>Product features .....</b>	<b>15-4</b>
15.3	<b>Part names and their functions .....</b>	<b>15-5</b>
15.4	<b>Using authentication unit (IC card type) AU-201 .....</b>	<b>15-6</b>
15.4.1	Positioning the IC card .....	15-6
15.4.2	Multifunctional product settings .....	15-6
15.4.3	Registering users .....	15-8
	Setup .....	15-9

	Registering users .....	15-13
<b>15.5</b>	<b>Care of authentication unit (IC card type) AU-201 .....</b>	<b>15-18</b>
<b>15.6</b>	<b>Specifications.....</b>	<b>15-19</b>
<b>15.7</b>	<b>Troubleshooting.....</b>	<b>15-20</b>

## 16 Appendix

<b>16.1</b>	<b>Configuration page .....</b>	<b>16-2</b>
<b>16.2</b>	<b>Font list .....</b>	<b>16-3</b>
16.2.1	PCL Font List .....	16-3
16.2.2	PS Font List .....	16-4
16.2.3	Demo page .....	16-5
<b>16.3</b>	<b>PPD driver (for Linux and applications) .....</b>	<b>16-6</b>
16.3.1	PPD driver types.....	16-6
16.3.2	About the PPD driver for Linux.....	16-6
16.3.3	About the PPD driver for applications .....	16-7
<b>16.4</b>	<b>NetWare .....</b>	<b>16-8</b>
16.4.1	Connection methods selectable for NetWare .....	16-8
16.4.2	NetWare Setting .....	16-8
	For Remote Printer mode with NetWare 4.x bindery emulation.....	16-9
	For the print server mode with NetWare 4.x bindery emulation.....	16-9
	For NetWare 4.x Remote Printer mode (NDS).....	16-10
	For NetWare 4.x/5.x/6 Print Server mode (NDS) .....	16-10
	For NetWare 5.x/6 Novell Distributed Print Service (NDPS).....	16-11
16.4.3	NetWare Status .....	16-12
16.4.4	Windows Client Setting .....	16-12

## 17 Index

<b>17.1</b>	<b>Index .....</b>	<b>17-2</b>
-------------	--------------------	-------------

---

## Trademarks and copyrights

KONICA MINOLTA, the KONICA MINOLTA logo, and The essentials of imaging are registered trademarks of KONICA MINOLTA HOLDINGS, INC.

PageScope and bizhub are registered trademarks or trademarks of KONICA MINOLTA BUSINESS TECHNOLOGIES INC.

Netscape is a registered trademark of Netscape Communications Corporation in the United States and other countries.

Mozilla and Firefox are trademarks of the Mozilla Foundation.

Novell and Novell NetWare are registered trademarks of Novell, Inc. in the United States and other countries.

Microsoft, Windows, and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

PowerPC is a trademark of IBM Corporation in the United States, or other countries, or both.

In regard to the Citrix access Partner Network Premier

KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. is a member of the Citrix access Partner Network.

The Citrix access Partner Network is a program that, in combination with a solution of Citrix, promotes and develops solutions to provide the customers with better solutions.



### The Global Network of Citrix Partners

Apple, Macintosh and Mac OS are registered trademarks of Apple Computer, Inc. Safari is a trademark of Apple Computer, Inc.

Adobe, the Adobe logo, Acrobat and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Ethernet is a registered trademark of Xerox Corporation.

PCL is a registered trademark of Hewlett-Packard Company Limited.

CUPS and CUPS logo are registered trademark of Easy Software Products.

This machine and PageScope Box Operator are based in part on the work of the Independent JPEG Group.

Compact-VJE

Copyright 1986-2003 VACS Corp.

RC4<sup>®</sup> is a registered trademark or trademark of RSA Security Inc. in the United States and/or other countries.

RSA<sup>®</sup> is a registered trademark or trademark of RSA Security Inc. RSA BSAFE<sup>®</sup> is a registered trademark or trademark of RSA Security Inc. in the United States and/or other countries.



#### License information

This product includes RSA BSAFE Cryptographic software from RSA Security Inc.

All other product and brand names are trademarks or registered trademarks of their respective companies or organizations.

## OpenSSL statement

### *OpenSSL license*

Copyright © 1998-2004 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment:  
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.  
(<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact [openssl-core@openssl.org](mailto:openssl-core@openssl.org).
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment:  
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit  
(<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young ([eay@crypt-Soft.com](mailto:eay@crypt-Soft.com)). This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

### *Original SSLeay license*

Copyright © 1995-1998 Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)) All rights reserved.

This package is an SSL implementation written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)).

The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code.

The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:  
"This product includes cryptographic software written by Eric Young ([eay@crypt-soft.com](mailto:eay@crypt-soft.com))"  
The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related.
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement:  
"This product includes software written by Tin Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com))"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

### **NetSNMP License**

Part 1: CMU/UCD copyright notice: (BSD like)

Copyright 1989, 1991, 1992 by Carnegie Mellon University Derivative Work - 1996, 1998-2000

Copyright 1996, 1998-2000 The Regents of the University of California All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Part 2: Networks Associates Technology, Inc copyright notice (BSD)

Copyright © 2001-2003, Networks Associates Technology, Inc

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Part 3: Cambridge Broadband Ltd. copyright notice (BSD)

Portions of this code are copyright © 2001-2003, Cambridge Broadband Ltd.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### Part 4: Sun Microsystems, Inc. copyright notice (BSD)

Copyright © 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### Part 5: Sparta, Inc copyright notice (BSD)

Copyright © 2003-2004, Sparta, Inc All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## Part 6: Cisco/BUPTNIC copyright notice (BSD)

Copyright © 2004, Cisco, Inc and Information Network Center of Beijing University of Posts and Telecommunications. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

### Kerberos

Copyright © 1985-2005 by the Massachusetts Institute of Technology. All rights reserved.

permission notice

WITHIN THAT CONSTRAINT, permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. Furthermore if you modify this software you must label your software as modified software and not distribute it in such a fashion that it might be confused with the original MIT software.

M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

THIS SOFTWARE IS NOT ORIGINAL MIT SOFTWARE, MODIFIED BY KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

### Copyright

© 2007 KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. All Rights Reserved.

Note

- User's Guide may not be reproduced in part or in full without permission.
- KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. will not be held liable for any incidents caused by using this printing system or User's Guide.
- Information included in User's Guide is subject to change without notice.
- KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. maintains the copyright of the printer drivers.

### Recycling batteries (For Taiwan Users Only)


根據地方規定處理使用的電池。



內附電池請回收

---

**For EU member states only**

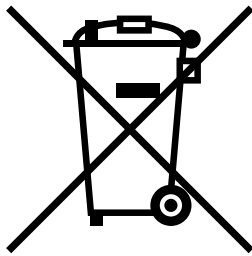

This symbol means: Do not dispose of this product together with your household waste!

Please refer to the information of your local community or contact our dealers regarding the proper handling of end-of-life electric and electronic equipments. Recycling of this product will help to conserve natural resources and prevent potential negative consequences for the environment and human health caused by inappropriate waste handling.



**For EU member states only**

This product complies with RoHS (2002/95/EC) Directive.

This device is not intended for use at a video workstation in compliance with BildscharbV.

Das Gerät ist nicht für die Benutzung am Bildschirmarbeitsplatz gemas BildscharbV vorgesehen.

**For Chinese users only**

Advanced Wnn © 欧姆龙软件有限公司 2003-2005 版权所有。

---

## SOFTWARE LICENSE AGREEMENT

This package contains the following materials provided by KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. (KMBT): software included as part of the printing system, the digitally-encoded machine-readable outline data encoded in the special format and in the encrypted form ("Font Programs"), other software which runs on a computer system for use in conjunction with the Printing Software ("Host Software"), and related explanatory written materials ("Documentation"). The term "Software" shall be used to describe Printing Software, Font Programs and/or Host Software and also include any upgrades, modified versions, additions, and copies of the Software.

The Software is being licensed to you under the terms of this Agreement.

KMBT grants to you a non-exclusive sublicense to use the Software and Documentation, provided that you agree to the following:

1. You may use the Printing Software and accompanying Font Programs for imaging to the licensed output device(s), solely for your own internal business purposes.
2. In addition to the license for Font Programs set forth in Section 1 ("Printing Software") above, you may use Roman Font Programs to reproduce weights, styles, and versions of letters, numerals, characters and symbols ("Typefaces") on the display or monitor for your own internal business purposes.
3. You may make one backup copy of the Host Software, provided your backup copy is not installed or used on any computer. Notwithstanding the above restrictions, you may install the on any number of computers solely for use with one or more printing systems running the Printing Software.
4. You may assign its rights under this Agreement to an assignee of all of Licensee's right and interest to such Software and Documentation ("Assignee") provided you transfer to Assignee all copies of such Software and Documentation Assignee agrees to be bound by all of the terms and conditions of this Agreement.
5. You agree not to modify, adapt or translate the Software and Documentation.
6. You agree that you will not attempt to alter, disassemble, decrypt, reverse engineer or decompile the Software.
7. Title to and ownership of the Software and Documentation and any reproductions thereof shall remain with KMBT and its licensor.
8. Trademarks shall be used in accordance with accepted trademark practice, including identification of the trademark owner's name. Trademarks can only be used to identify printed output produced by the Software. Such use of any trademark does not give you any rights of ownership in that trademark.
9. You may not rent, lease, sublicense, lend or transfer versions or copies of the Software Licensee does not use, or Software contained on any unused media, except as part of the permanent transfer of all Software and Documentation as described above.
10. IN NO EVENT WILL KMBT OR ITS LICENSOR BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL INDIRECT, PUNITIVE OR SPECIAL DAMAGES, INCLUDING ANY LOST PROFITS OR LOST SAVING, EVEN IF KMBT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY THIRD PARTY. KMBT OR ITS LICENSOR DISCLAIMS ALL WARRANTIES WITH REGARD TO THE SOFTWARE, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.
11. Notice to Government End Users: The Software is a "commercial item," as that term is defined at 48 C.F.R.2.101, consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R. 12.212. Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4, all U.S. Government End Users acquire the Software with only those rights set forth herein.
12. You agree that you will not export the Software in any form in violation of any applicable laws and regulations regarding export control of any countries.

---

## About Adobe Color Profile

### ADOBE SYSTEMS INCORPORATED COLOR PROFILE LICENSE AGREEMENT

NOTICE TO USER: PLEASE READ THIS CONTRACT CAREFULLY. BY USING ALL OR ANY PORTION OF THE SOFTWARE YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS SOFTWARE YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE WITH THE TERMS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE.

1. **DEFINITIONS** In this Agreement, "Adobe" means Adobe Systems Incorporated, a Delaware corporation, located at 345 Park Avenue, San Jose, California 95110. "Software" means the software and related items with which this Agreement is provided.
2. **LICENSE** Subject to the terms of this Agreement, Adobe hereby grants you the worldwide, non-exclusive, nontransferable, royalty-free license to use, reproduce and publicly display the Software. Adobe also grants you the rights to distribute the Software only (a) as embedded within digital image files and (b) on a standalone basis. No other distribution of the Software is allowed; including, without limitation, distribution of the Software when incorporated into or bundled with any application software. All individual profiles must be referenced by their ICC Profile description string. You may not modify the Software. Adobe is under no obligation to provide any support under this Agreement, including upgrades or future versions of the Software or other items. No title to the intellectual property in the Software is transferred to you under the terms of this Agreement. You do not acquire any rights to the Software except as expressly set forth in this Agreement.
3. **DISTRIBUTION** If you choose to distribute the Software, you do so with the understanding that you agree to defend, indemnify and hold harmless Adobe against any losses, damages or costs arising from any claims, lawsuits or other legal actions arising out of such distribution, including without limitation, your failure to comply with this Section 3. If you distribute the Software on a standalone basis, you will do so under the terms of this Agreement or your own license agreement which (a) complies with the terms and conditions of this Agreement; (b) effectively disclaims all warranties and conditions, express or implied, on behalf of Adobe; (c) effectively excludes all liability for damages on behalf of Adobe; (d) states that any provisions that differ from this Agreement are offered by you alone and not Adobe and (e) states that the Software is available from you or Adobe and informs licensees how to obtain it in a reasonable manner on or through a medium customarily used for software exchange. Any distributed Software will include the Adobe copyright notices as included in the Software provided to you by Adobe.
4. **DISCLAIMER OF WARRANTY** Adobe licenses the Software to you on an "AS IS" basis. Adobe makes no representation as to the adequacy of the Software for any particular purpose or to produce any particular result. Adobe shall not be liable for loss or damage arising out of this Agreement or from the distribution or use of the Software or any other materials. ADOBE AND ITS SUPPLIERS DO NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE, EXCEPT FOR ANY WARRANTY, CONDITION, REPRESENTATION OR TERM TO THE EXTENT TO WHICH THE SAME CANNOT OR MAY NOT BE EXCLUDED OR LIMITED BY LAW APPLICABLE TO YOU IN YOUR JURISDICTION, ADOBE AND ITS SUPPLIERS MAKE NO WARRANTIES, CONDITIONS, REPRESENTATIONS OR TERMS, EXPRESS OR IMPLIED, WHETHER BY STATUTE, COMMON LAW, CUSTOM, USAGE OR OTHERWISE AS TO ANY OTHER MATTERS, INCLUDING BUT NOT LIMITED TO NONINFRINGEMENT OF THIRD PARTY RIGHTS, INTEGRATION, SATISFACTORY QUALITY OR FITNESS FOR ANY PARTICULAR PURPOSE. YOU MAY HAVE ADDITIONAL RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. The provisions of Sections 4, 5 and 6 shall survive the termination of this Agreement, howsoever caused, but this shall not imply or create any continued right to use the Software after termination of this Agreement.
5. **LIMITATION OF LIABILITY** IN NO EVENT WILL ADOBE OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES, CLAIMS OR COSTS WHATSOEVER OR ANY CONSEQUENTIAL, INDIRECT, INCIDENTAL DAMAGES, OR ANY LOST PROFITS OR LOST SAVINGS, EVEN IF AN ADOBE REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS, DAMAGES, CLAIMS OR COSTS OR FOR ANY CLAIM BY ANY THIRD PARTY. THE FOREGOING LIMITATIONS AND EXCLUSIONS APPLY TO THE EXTENT PERMITTED BY APPLICABLE LAW IN YOUR JURISDICTION. ADOBE'S AGGREGATE LIABILITY AND THAT OF ITS SUPPLIERS UNDER OR IN CONNECTION WITH THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT PAID FOR THE SOFTWARE. Nothing contained in this Agreement limits Adobe's liability to you in the event of death or personal injury resulting from Adobe's negligence or for the tort of deceit (fraud). Adobe is acting on behalf of its suppliers for the purpose of disclaiming, excluding and/or limiting obligations, warranties and liability as provided in this Agreement, but in no other respects and for no other purpose.
6. **TRADEMARKS** Adobe and the Adobe logo are the registered trademarks or trademarks of Adobe in the United States and other countries. With the exception of referential use, you will not use such trademarks or any other Adobe trademark or logo without separate prior written permission granted by Adobe.

- 
7. **TERM** This Agreement is effective until terminated. Adobe has the right to terminate this Agreement immediately if you fail to comply with any term hereof. Upon any such termination, you must return to Adobe all full and partial copies of the Software in your possession or control.
8. **GOVERNMENT REGULATIONS** If any part of the Software is identified as an export controlled item under the United States Export Administration Act or any other export law, restriction or regulation (the "Export Laws"), you represent and warrant that you are not a citizen, or otherwise located within, an embargoed nation (including without limitation Iran, Iraq, Syria, Sudan, Libya, Cuba, North Korea, and Serbia) and that you are not otherwise prohibited under the Export Laws from receiving the Software. All rights to use the Software are granted on condition that such rights are forfeited if you fail to comply with the terms of this Agreement.
9. **GOVERNING LAW** This Agreement will be governed by and construed in accordance with the substantive laws in force in the State of California as such laws are applied to agreements entered into and to be performed entirely within California between California residents. This Agreement will not be governed by the conflict of law rules of any jurisdiction or the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. All disputes arising out of, under or related to this Agreement will be brought exclusively in the state Santa Clara County, California, USA.
10. **GENERAL** You may not assign your rights or obligations granted under this Agreement without the prior written consent of Adobe. None of the provisions of this Agreement shall be deemed to have been waived by any act or acquiescence on the part of Adobe, its agents, or employees, but only by an instrument in writing signed by an authorized signatory of Adobe. When conflicting language exists between this Agreement and any other agreement included in the Software, the terms of such included agreement shall apply. If either you or Adobe employs attorneys to enforce any rights arising out of or relating to this Agreement, the prevailing party shall be entitled to recover reasonable attorneys' fees. You acknowledge that you have read this Agreement, understand it, and that it is the complete and exclusive statement of your agreement with Adobe which supersedes any prior agreement, oral or written, between Adobe and you with respect to the licensing to you of the Software. No variation of the terms of this Agreement will be enforceable against Adobe unless Adobe gives its express consent, in writing, signed by an authorized signatory of Adobe.

---

## ICC Profile for TOYO INK Standard Color on Coated paper (TOYO Offset Coated 2.0)

This ICC Profile (TOYO Offset Coated 2.0) characterizes Japanese offset press on Coated paper and is fully compatible with ICC profile format.

About "TOYO INK Standard Color on Coated paper"

This is the standard for color reproduction of sheet-fed offset press on Coated paper made by TOYO INK MFG.CO., LTD. ("TOYO INK").

This standard is made from printing test with using TOYO INK's sheet-fed offset printing inks and TOYO INK's own printing conditions.

"TOYO INK Standard Color on Coated paper" is compatible with "JAPAN COLOR".

### Agreement

1. The reproduction of images on a printer or a monitor using this ICC Profile do not completely match the TOYO INK Standard Color on Coated paper.
2. Any and all copyrights of this ICC Profile shall remain in TOYO INK; therefore you shall not transfer, provide, rent, distribute, disclose, or grant any rights in this ICC Profile to any third party without the prior written consent of TOYO INK.
3. In no event will TOYO INK its directors, officers, employees or agents be liable to you for any consequential or incidental, either direct or indirect, damages (including damages for loss of business profits, business interruption, loss of business information, and the like) arising out of the use or inability to use this ICC Profile.
4. TOYO INK shall not be responsible for answering any question related to this ICC Profile.
5. All company names and product names used in this document is the trademarks or registered trademarks of their respective holder.

This ICC Profile made by GretagMacbeth ProfileMaker and granted TOYO INK certain license to distribute by GretagMacbeth AG.

TOYO Offset Coated 2.0 © TOYO INK MFG. CO., LTD. 2004

## DIC STANDARD COLOR PROFILE LICENSE AGREEMENT

IMPORTANT: PLEASE READ THIS STANDARD COLOR PROFILE LICENSE AGREEMENT ("LICENSE AGREEMENT") CAREFULLY BEFORE USING THE DIC STANDARD COLOR PROFILE, INCLUDING THE DIC STANDARD COLOR SFC1.0.1, DIC STANDARD COLOR SFC1.0.2, DIC STANDARD COLOR SFM1.0.2, DIC STANDARD COLOR SFU1.0.2, PROVIDED BY DIC HEREWITH, AND ANY CORRESPONDING ONLINE OR ELECTRONIC DOCUMENTATION AND ALL UPDATES OR UPGRADES OF THE ABOVE THAT ARE PROVIDED TO YOU (COLLECTIVELY, THE "PROFILE").

THIS LICENSE AGREEMENT IS A LEGAL AGREEMENT BETWEEN YOU (EITHER AN INDIVIDUAL OR, IF ACQUIRED BY OR FOR AN ENTITY, AN ENTITY) AND DAINIPPON INK & CHEMICALS, INC., A JAPANESE COMPANY ("DIC"). THIS LICENSE AGREEMENT PROVIDES A LICENSE TO USE THE PROFILE AND CONTAINS WARRANTY INFORMATION AND LIABILITY DISCLAIMERS. IF YOU DO NOT AGREE TO BE BOUND BY ALL OF THESE TERMS, YOU MAY NOT USE THE PROFILE.

1. **License Grant**  
DIC grants you a gratis non-exclusive and non-transferable license to use the Profile and to allow your employees and authorized agents, if any, to use the Profile, solely in connection with their work for you, subject to all of the limitations and restrictions in this License Agreement.
2. **Ownership**  
The foregoing license gives you limited license to use the Profile. You will own the rights in the media containing the recorded Profile, but DIC retains all right, title and interest, including all copyright and intellectual property rights, in and to, the Profile and all copies thereof. All rights not specifically granted in this License Agreement, including all copyrights, are reserved by DIC.
3. **Term**
  - a. This License Agreement is effective until terminated.
  - b. You may terminate this License Agreement by notifying DIC in writing of your intention to terminate this License Agreement and by destroying, all copies of the Profile in your possession or control.
  - c. DIC may terminate this License Agreement without prior notice to you if you fail to comply with any of the terms and conditions of this License Agreement (either directly or through your employees or agents), retroactive to the time of such failure to comply. In such event, you must immediately stop using the Profile and destroy all copies of the Profile in your possession or control.
  - d. All provisions in this License Agreement relating to warranty disclaimers (Section 5) and the limitation of liability (Section 6) shall survive any termination of this License Agreement.
4. **License Method and Restrictions**
  - a. You may install and use the Profile on a single desktop computer; provided, however, that, notwithstanding anything contrary contained herein, you may not use the Profile on any network system or share, install or use the Profile concurrently on different computers, or electronically transfer the Profile from one computer to another or over a network.
  - b. You may not make or distribute copies, fix, alter, merge, modify, adapt, sublicense, transfer, sell, rent, lease, gift or distribute all or a portion of the Profile, or modify the Profile or create derivative works based upon the Profile.
  - c. You acknowledge that the Profile is not intended for any usage which may cause death or physical injury or environmental damage and agree not to use the Profile for such usage.
  - d. You shall not use the Profile to develop any software or other technology having the same primary function as the Profile, including but not limited to using the Profile in any development or test procedure that seeks to develop like software or other technology, or to determine if such software or other technology performs in a similar manner as the Profile.
  - e. DIC and other trademarks contained in the Profile are trademarks or registered trademarks of DIC in Japan and/or other countries. You may not remove or alter any trademark, trade names, product names, logo, copyright or other proprietary notices, legends, symbols or labels in the Profile. This License Agreement does not authorize you to use DIC's or its licensors' names or any of their respective trademarks.
5. **WARRANTY DISCLAIMER**
  - a. THE PROFILE IS PROVIDED TO YOU FREE OF CHARGE, AND ON AN "AS-IS" BASIS, IN ACCORDANCE WITH THE TERMS AND COONDITIONS OF THIS LICENSE AGREEMENT. DIC PROVIDES NO TECHNICAL SUPPORT, WARRANTIES OR REMEDIES FOR THE PROFILE.
  - b. DIC DISCLAIMS ALL WARRANTIES AND REPRESENTATIONS, WHETHER EXPRESS, IMPLIED, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, TITLE AND QUIET ENJOYMENT. YOU SHALL ASSUME AND BE FULLY LIABLE AND RESPONSIBLE FOR ALL RISKS IN CONNECTION WITH YOUR USE OF THE PROFILE. DIC DOES NOT WARRANT THAT THE PROFILE IS FREE OF DEFECTS OR FLAWS OR WILL OPERATE WITHOUT INTERRUPTION, AND IS NOT RESPONSIBLE FOR CORRECTING OR REPAIRING ANY DEFECTS OR FLAWS, FOR FEE OR GRATIS. NO RIGHTS OR REMEDIES WILL BE CONFERRED ON YOU UNLESS EXPRESSLY GRANTED HEREIN.

6. LIMITATION OF LIABILITY

DIC SHALL NOT BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, COVER OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR THE INABILITY TO USE EQUIPMENT OR ACCESS DATA, LOSS OF BUSINESS, LOSS OF PROFITS, BUSINESS INTERRUPTION OR THE LIKE), ARISING OUT OF THE USE OF, OR INABILITY TO USE, THE PROFILE AND BASED ON ANY THEORY OF LIABILITY INCLUDING BREACH OF CONTRACT, BREACH OF WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, EVEN IF DIC OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

THE FOREGOING LIMITATIONS ON LIABILITY SHALL APPLY TO ALL ASPECTS OF THIS LICENSE AGREEMENT.

7. General

a. This License Agreement shall be governed and construed in accordance with the laws of Japan, without giving effect to principles of conflict of laws. If any provision of this License Agreement shall be held by a court of competent jurisdiction to be contrary to law, that provision will be enforced to the maximum extent permissible, and the remaining provisions of this License Agreement will remain in full force and effect. You hereby consent to the exclusive jurisdiction and venue of Tokyo District Court to resolve any disputes arising under this License Agreement.

b. This License Agreement contains the complete agreement between the parties with respect to the subject matter hereof, and supersedes all prior or contemporaneous agreements or understandings, whether oral or written. You agree that any varying or additional terms contained in any written notification or document issued by you in relation to the Profile licensed hereunder shall be of no effect.


c. The failure or delay of DIC to exercise any of its rights under this License Agreement or upon any breach of this License Agreement shall not be deemed a waiver of those rights or of the breach.

Text that appears in this manner describes the function limitations and options required to use certain functions.

Text that appears in this manner describes supplemental information, such as precautions, references and actions, relating to steps.

Text that appears in this manner provides answers to problems and questions that may occur during operation.

Titles indicate the contents of the section.

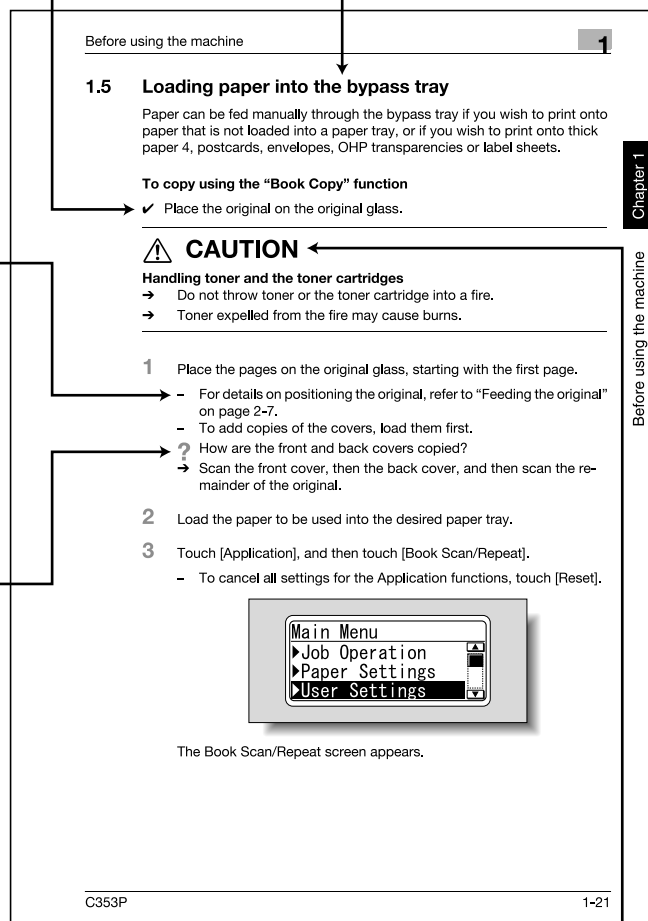


### **WARNING , CAUTION**


Text highlighted in this manner indicates precautions to ensure safe use of this machine. "Warning" indicates instructions that, when not observed, may result in fatal or critical injuries. "Caution" indicates instructions that, when not observed, may result in serious injuries or property damage.

(The page shown above is an example only.)


- 4
- Press the [▼] key several times to select [Configuration], and then press the [Menu/Select] key.

...

**Reminder**  
*Do not replace the toner cartridge until the message "There is no Toner." appears. In addition, do not replace the toner cartridge of any color other than the one indicated in the message on the touch panel.*

...

**Note**  
*Even though the setting can be specified in increments of 1/3, the setting will appear at the nearest full increment in the Adjust Color screen.*




**Detail**  
*If the "Single Color" function is set, the colors are inv*

## Descriptions of paper


The descriptions used in this manual for paper is explained below.

Whenever paper dimension is mentioned in this manual, the value shown as Y in the illustration refers to the width, and the value shown as X refers to the length.

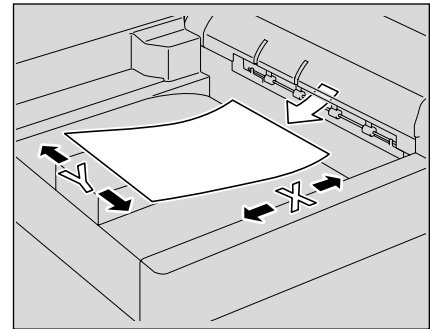


### Lengthwise (☐)

If the width (Y) of the paper is shorter than the length (X), the paper has a vertical or portrait orientation, indicated by ☐.

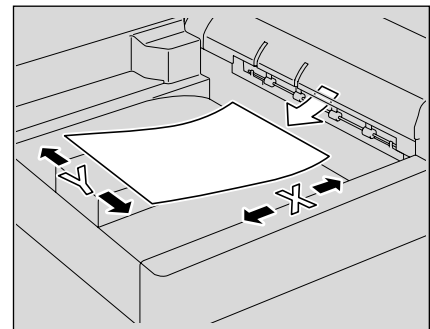

### Crosswise (☐)

If the width (Y) of the paper is longer than the length (X), the paper has a horizontal or landscape orientation, indicated by ☐.

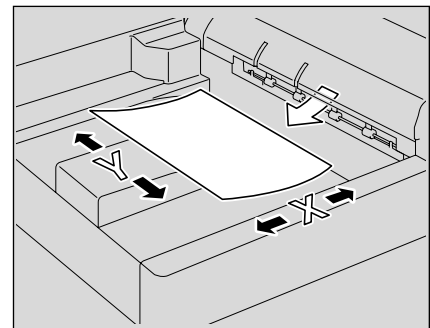

---

## User's Guides

This machine is provided with printed manuals and PDF manuals on the User's Guide CD.

### Printed manual

#### *Quick Guide*

This manual contains operating procedures and descriptions of the most frequently used functions, allowing the machine to immediately be used.

In addition, this manual contains notes and precautions that should be followed for safe use of the machine.

Be sure to read this manual before using the machine.

### User's Guide CD manual

#### *User's Guide (this manual)*

This manual contains descriptions of the functions and machine maintenance procedures.

Refer to this manual for details on the paper, replacing consumables, and troubleshooting operations such as clearing paper misfeeds.






**Before using the machine**

---

# 1 Before using the machine

## 1.1 Part names and their functions

### 1.1.1 Options

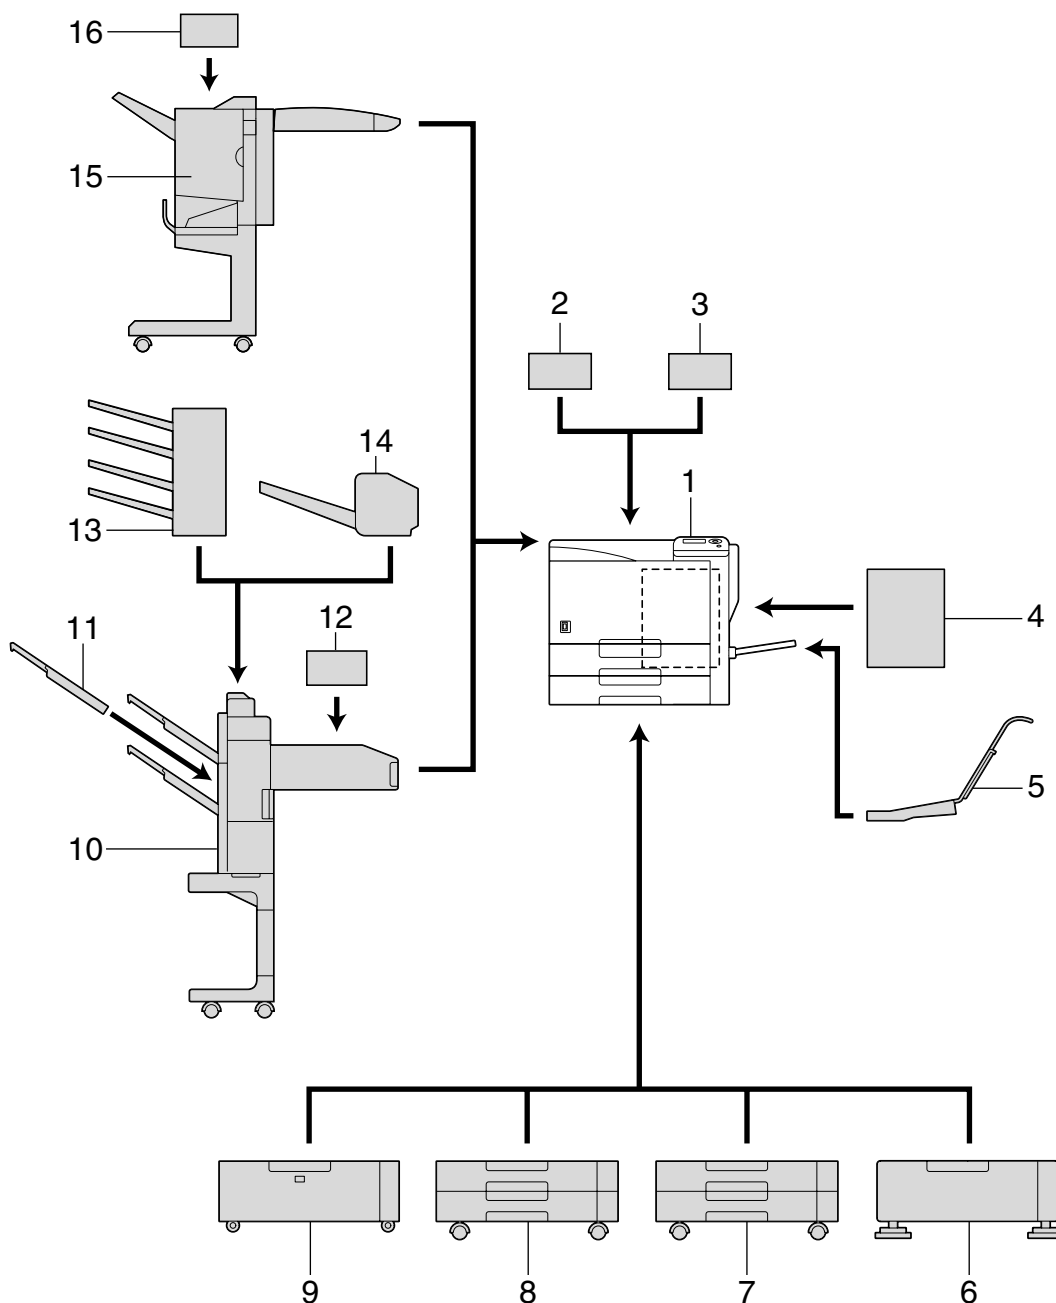

No.	Part name	Description
1	Main unit	The data sent from the computer is printed. Referred to as the "machine", the "main unit", or the "C353P" throughout the manual.
2	Authentication unit (biometric type) AU-101	Performs user authentication by scanning vein patterns in the finger. To use the authentication unit (biometric type), an optional hard disk drive HD-508 and local interface kit EK-603 must be installed.

No.	Part name	Description
3	Authentication unit (IC card type) AU-201	Performs user authentication by reading the information registered on IC cards. To use the authentication unit (IC card type), an optional hard disk drive HD-508 and local interface kit EK-603 must be installed.
4	Mount kit MK-711	Used for installing, local interface kit.
5	Mount kit MK-713	Used for banner printing.
6	Desk DK-504	Allows this machine to be set up on the floor. Referred to as the "desk" throughout the manual.
7	Paper feed cabinet PC-104	The top tray can be loaded with up to 500 sheets of paper, and the bottom tray can be used as storage. Referred to as the "single paper feed cabinet" throughout the manual.
8	Paper feed cabinet PC-204	Both the top and bottom trays can each be loaded with up to 500 sheets of paper. Referred to as the "double paper feed cabinet" throughout the manual.
9	Paper feed cabinet PC-405	Can be loaded with up to 2,500 sheets of paper. Referred to as the "LCT" throughout the manual.
10	Finisher FS-519	Feeds out finished printed pages. The "Collate" setting (separating by copy set), "Offset" setting (separating by pages), Staple settings ("Corner" and "2 position"), Center Staple setting, and Half-Fold setting are available.
11	Output tray OT-602	Installed onto finisher FS-519 to divide printed pages. Referred to as the "output tray" throughout the manual.
12	Punch kit PK-515	Installed onto finisher FS-519 to allow hole punching to be used.
13	Mailbin kit MT-502	Installed onto finisher FS-519 to divide printed pages (only with computer printing) and feed them into the appropriate tray assigned to a specific individual or group. Collects printed pages. Referred to as the "mailbin kit" throughout the manual.
14	Saddle stitcher SD-505	Installed onto finisher FS-519 so that prints can be bound or folded at the center. Referred to as the "saddle stitcher" throughout the manual.
15	Finisher FS-609	Feeds out finished printed pages. The "Collate" setting (separating by copy set), "Offset" setting (separating by pages), and Staple settings ("Corner" and "2 position") are available. <ul style="list-style-type: none"> <li>In order to install the finisher, the main unit must be installed on the desk, on the LCT, on the single paper feed cabinet, or on the double paper feed cabinet.</li> </ul>
16	Punch kit PK-501	Installed onto finisher FS-609 to allow hole punching to be used.
17	Local interface kit EK-603 <sup>*1</sup>	Used for connecting the authentication unit (biometric type) and the authentication unit (IC card type).
18	Security kit SC-503 <sup>*2</sup>	Installed to encode the data saved on the hard disk so that the hard disk can be used more safely.
19	Hard disk drive HD-508 <sup>*2</sup>	Operations using the "Secured Print" and "Save in User Box" settings can be used if the hard disk drive is installed. Referred to as the "HDD" throughout the manual.

<sup>\*1</sup> Parts marked with an asterisk are to be installed to the mount kit, and therefore are not shown in the illustration.


<sup>\*2</sup> Parts marked with an asterisk are internal options and therefore are not shown in the illustration.



#### Reminder


*To keep the features and quality of the machine, use the desk or paper feed cabinet to place the machine on the floor.*

### 1.1.2 Outside of machine

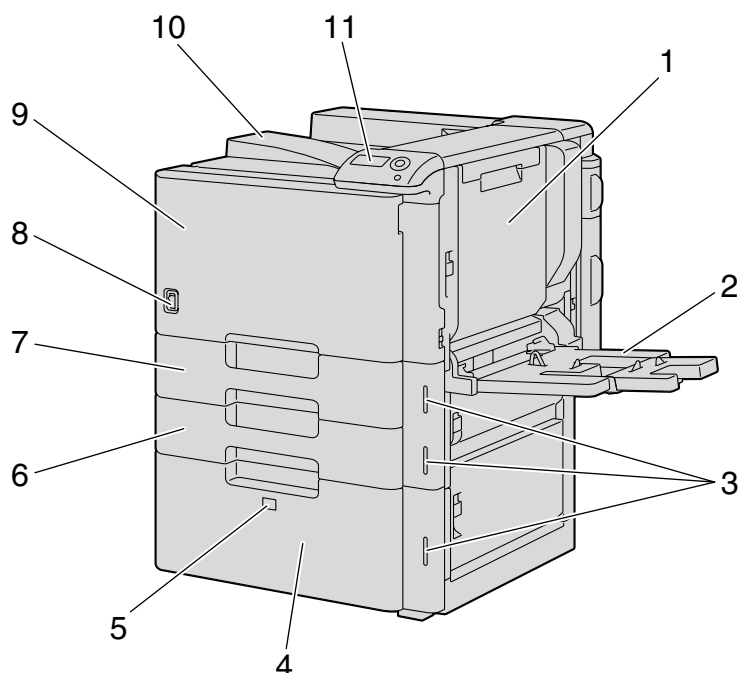


\*The illustration above shows the main unit with the optional LCT installed.

No.	Part name	Description
1	Automatic duplex unit	Turns over the paper for double-sided printing.
2	Bypass tray	Used when printing onto paper with a size not loaded into a paper tray or onto thick paper, OHP transparencies, postcards, envelopes, label sheets or banner paper. Can be loaded with up to 150 sheets of plain paper, 20 sheets of thick paper 1, thick paper 2, thick paper 3, thick paper 4, OHP transparencies, postcards, or label sheets, 10 envelopes, or 10 sheets of banner paper.
3	Paper-empty indicator	Flashes in orange when very few pages remain in the paper tray, and lights up when the tray is empty.
4	LCT	Can be loaded with up to 2,500 sheets of plain paper. Can be loaded with up to 1,000 sheets of thick paper 1, thick paper 2 or thick paper 3.
5	Tray release button	Press this button to pull out the LCT.
6	Tray 2	Can be loaded with up to 500 sheets of plain paper. Can be loaded with up to 150 sheets of thick paper 1, thick paper 2 or thick paper 3.
7	Tray 1	Can be loaded with up to 500 sheets of plain paper. Can be loaded with up to 150 sheets of thick paper 1, thick paper 2 or thick paper 3.
8	Power switch	Used to turn the machine on and off.
9	Front door	Opened when replacing the toner cartridge, waste toner box, or imaging unit, or when cleaning the print head.
10	Output tray	Collects printed pages.
11	Control panel	Used to specify the various machine settings.

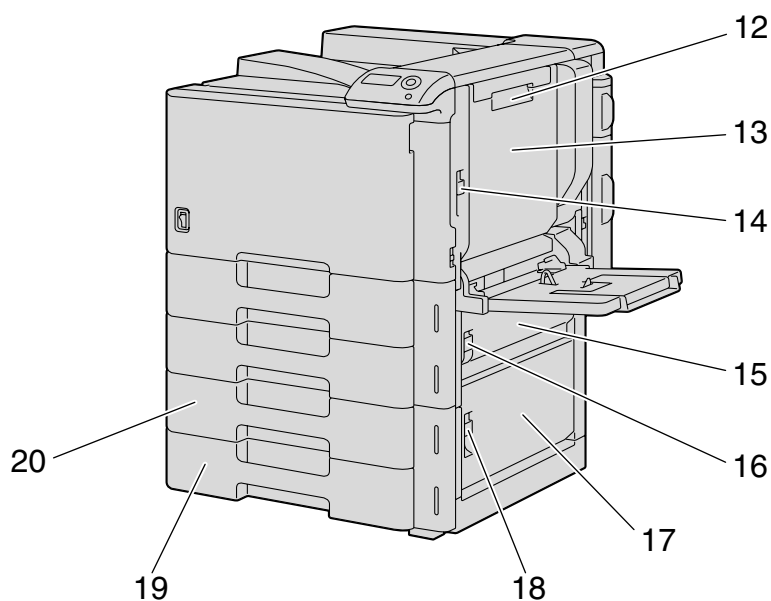


\*The illustration above shows the main unit with the optional double paper feed cabinet installed.

No.	Part name	Description
12	Automatic duplex unit re-lease lever	Used to open the automatic duplex unit door when clearing paper misfeeds.
13	Automatic duplex unit door	Opened when clearing paper misfeeds in the automatic duplex unit.
14	Upper right-side door re-lease lever	Used to open the upper right-side door.
15	Center right-side door	Opened when clearing paper misfeeds from the paper transport section of tray 2.
16	Center right-side door re-lease lever	Used to open the centerright-side door.
17	Lower right-side door	Opened when clearing paper misfeeds from the paper transport section of tray 3 or 4.
18	Lower right-side door re-lease lever	Used to open the Lower right-side door.
19	Tray 4/storage box	Used as the storage box when the single paper feed cabinet is installed. Can be loaded with up to 500 sheets of plain paper when the double paper feed cabinet is installed. Can be loaded with up to 150 sheets of thick paper 1, thick paper 2 or thick paper 3.
20	Tray 3	Can be loaded with up to 500 sheets of plain paper. Can be loaded with up to 150 sheets of thick paper 1, thick paper 2 or thick paper 3.

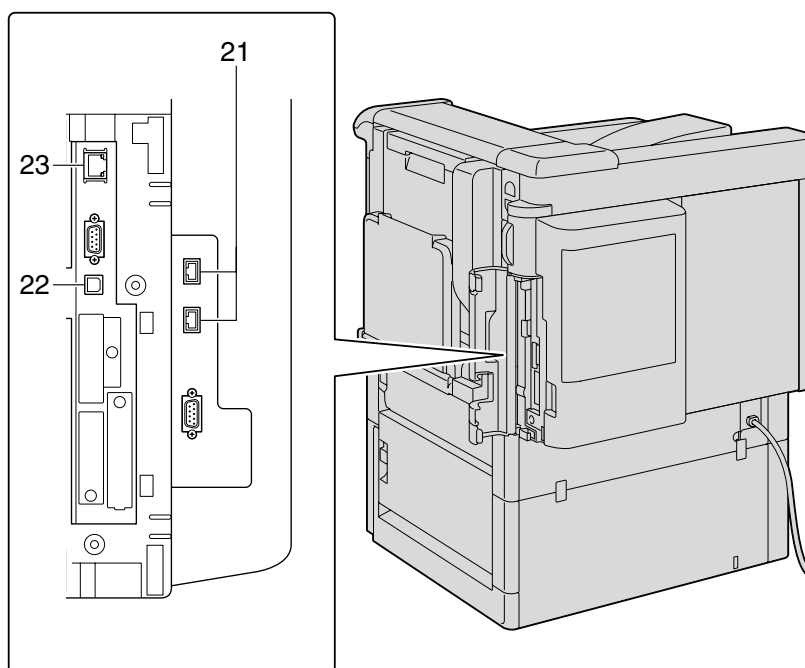

\*The illustration above shows the main unit with the optional LCT and mount kit (local interface kit) installed.

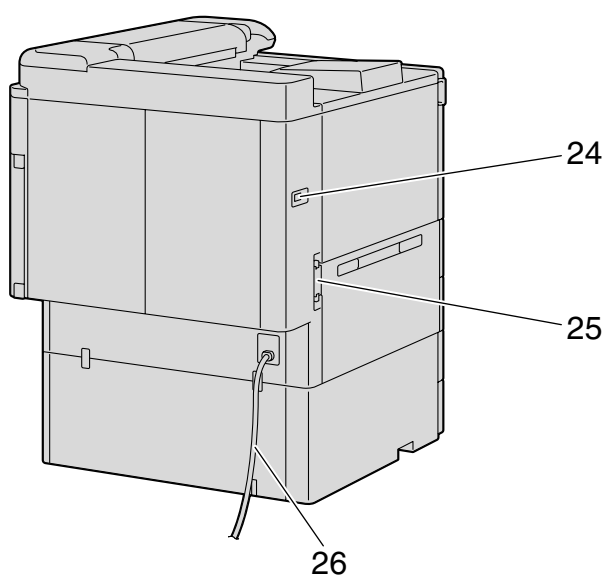


\*The illustration above shows the main unit with the optional double paper feed cabinet installed.

No.	Part name	Description
21	USB port (type A) USB 2.0/1.1	Used for connecting the USB cable for the authentication unit (biometric type) or the authentication unit (IC card type).
22	USB port (type B) USB 2.0/1.1	Used for making connections when the machine is used as a USB printer.
23	Network connector (10Base-T/100Base-TX/1000Base-T)	Used for connecting the network cable when this machine is used for network printing.
24	Finisher connector	Used for connecting the finisher hookup cord.
25	Ozone filter	Collects the ozone generated in the machine.
26	Power cord	Supplies power to the machine.



### 1.1.4 Finisher FS-519/Output tray OT-602/Punch kit PK-515

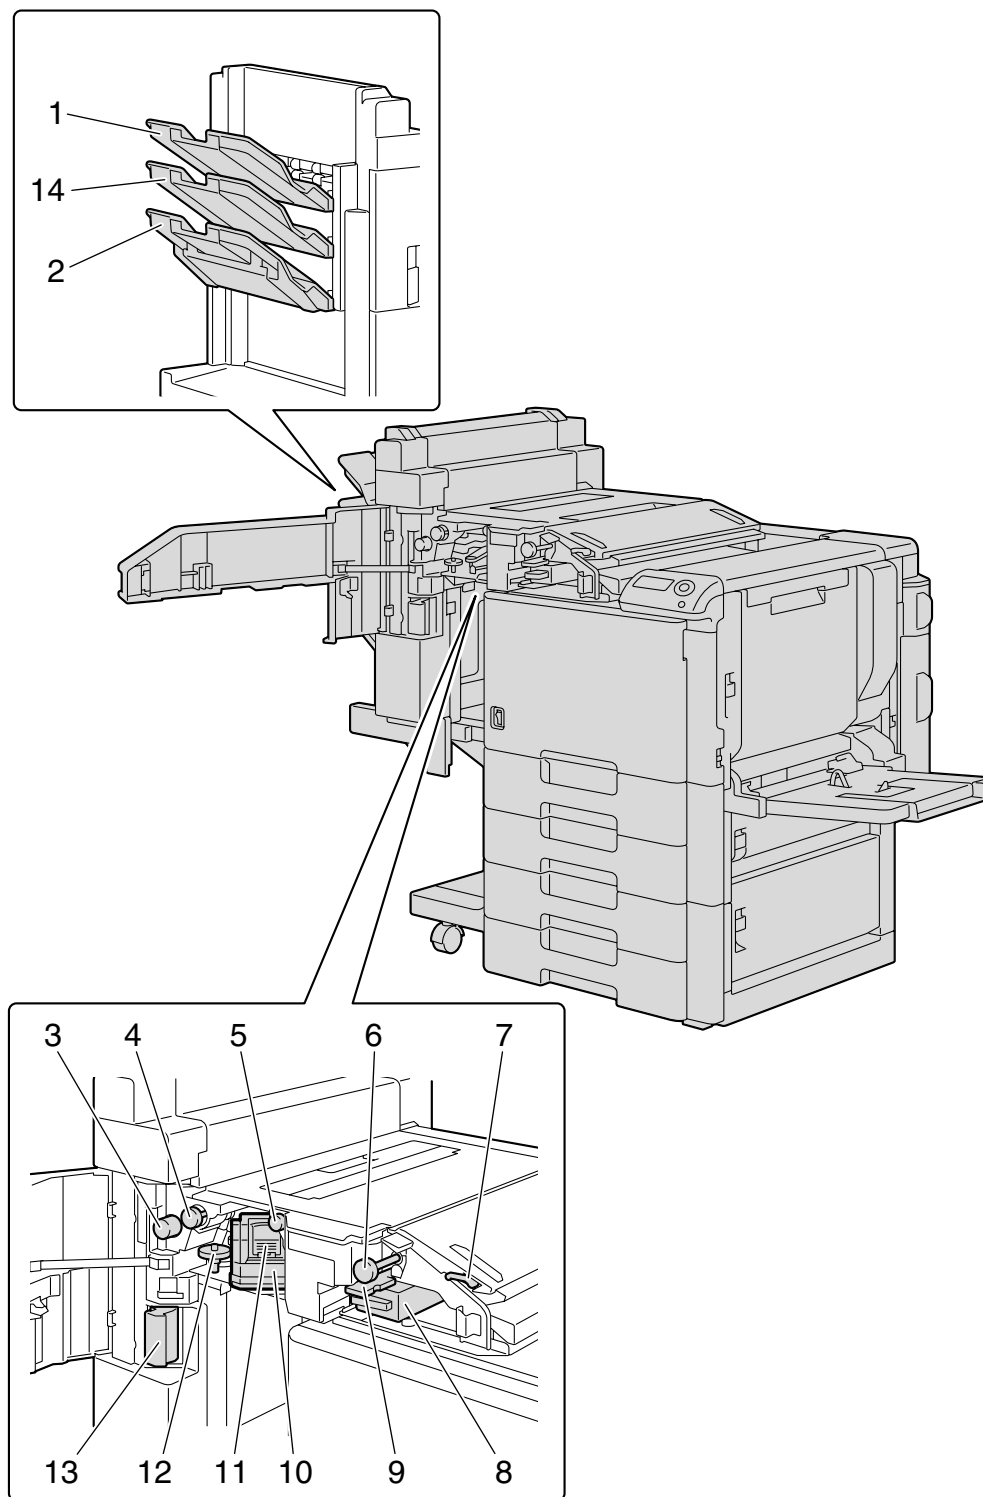

Finisher FS-519

No.	Part name	Description
1	Output tray 1	Collects printed pages.
2	Output tray 2	Collects printed pages.
3	Misfeed-clearing dial FN6	Turned when clearing paper misfeeds within the finisher.
4	Misfeed-clearing dial FN5	Turned when clearing paper misfeeds within the finisher.
5	Misfeed-clearing dial FN4	Turned when clearing paper misfeeds within the finisher.

No.	Part name	Description
6	Misfeed-clearing dial FN2	Turned when clearing paper misfeeds within the finisher.
7	Guide lever FN1	Raised when clearing paper misfeeds within the finisher.
8	Punch scrap box FN3.1	Removed when emptying punch scraps that have accumulated from using the Punch settings.
9	Guide lever FN3	Raised when clearing paper misfeeds within the finisher.
10	Stapler	Moved to the front when clearing jammed staples.
11	Staple cartridge holder	Removed from the stapler when replacing the staple cartridge or clearing jammed staples.
12	Dial	Turned to move the stapler to the front when clearing jammed staples.
13	Finisher release lever 1	Used to disconnect the finisher and move it from the main unit when clearing paper misfeeds.

## Output tray OT-602


No.	Part name	Description
14	Optional output tray	Collects printed pages.

## Punch kit PK-515

No.	Part name	Description
15	Punch kit*	Punches holes for filing printed pages when the punch kit is installed onto finisher FS-519.


\* Parts marked with an asterisk are internal options and therefore are not shown in the illustration.

### 1.1.5 Saddle stitcher SD-505/Mailbin kit MT-502

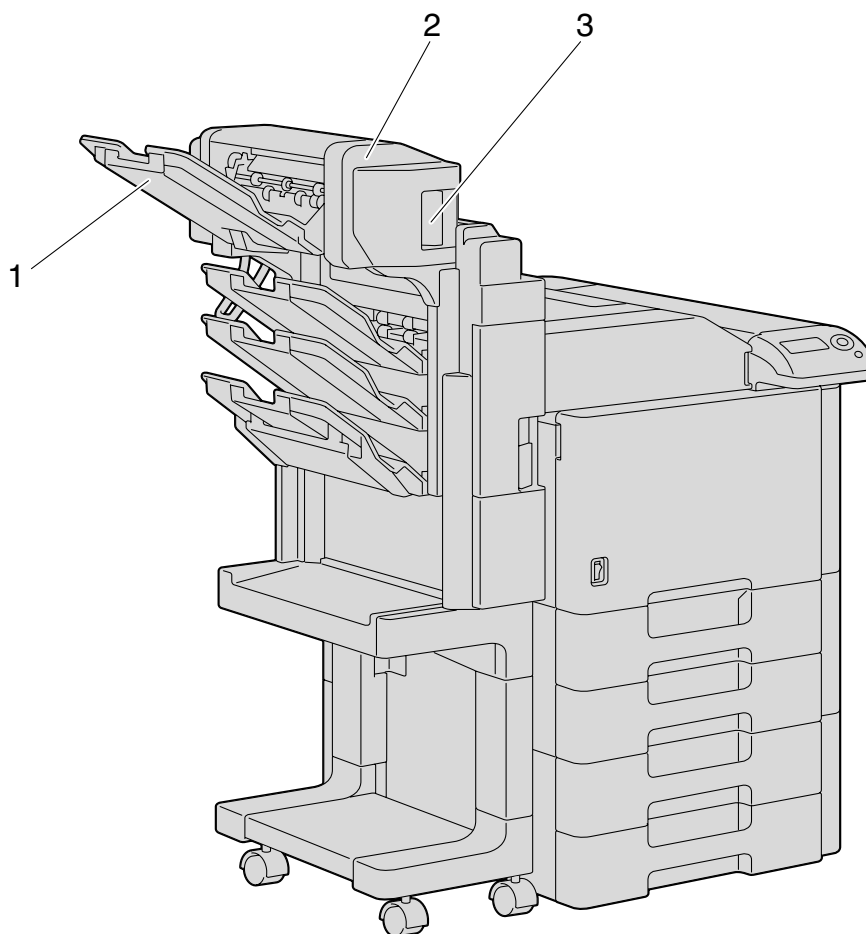

Saddle stitcher SD-505


No.	Part name	Description
1	Output tray	Collects printed pages.
2	Misfeed-clearing door	Opened when clearing paper misfeeds within the saddle stitcher.
3	Misfeed-clearing door release lever	Used to open the Misfeed-clearing door.

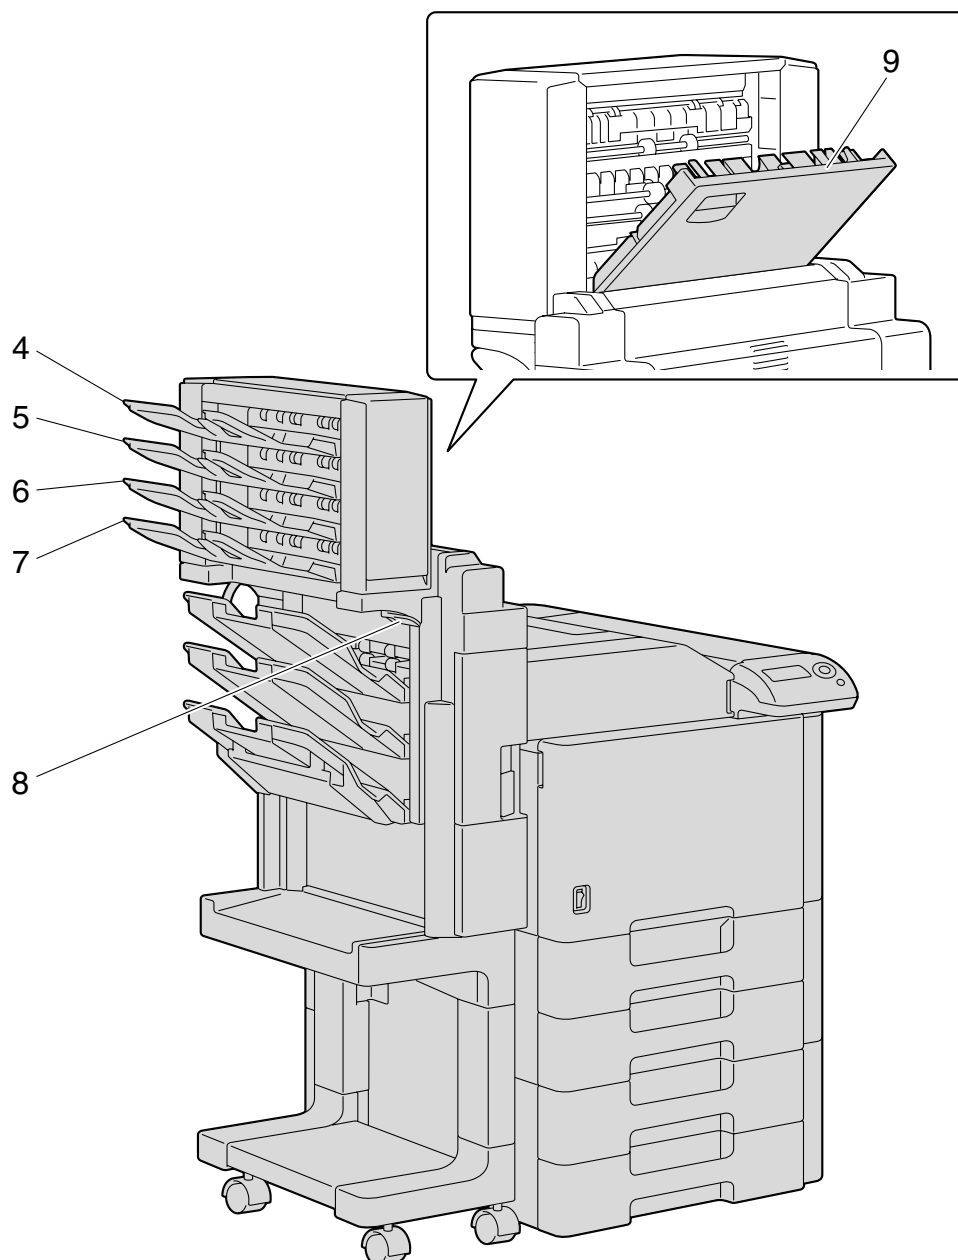

Mailbin kit MT-502

No.	Part name	Description
4	Bin 4	Collects printed pages.
5	Bin 3	Collects printed pages.
6	Bin 2	Collects printed pages.
7	Bin 1	Collects printed pages.
8	Guide lever FN7	Moved when clearing paper misfeeds within the mailbin kit.
9	Misfeed-clearing door	Opened when clearing paper misfeeds within the mailbin kit.

## 1.1.6 Finisher FS-609/Punch kit PK-501

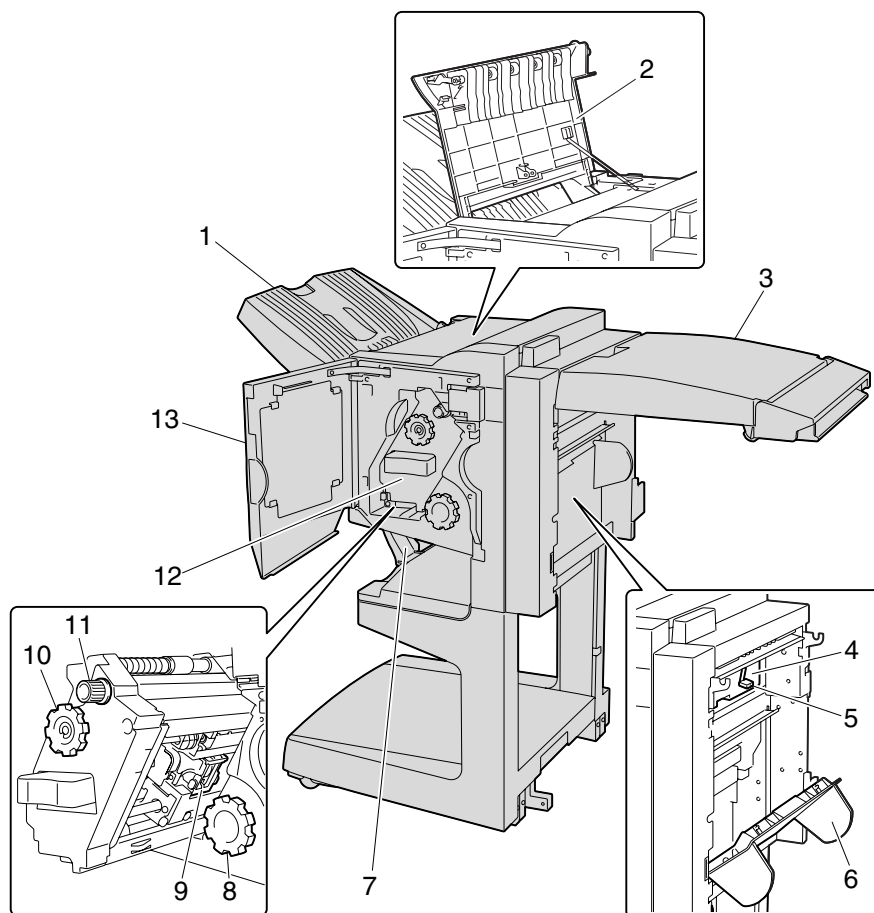

Finisher FS-609

No.	Part name	Description
1	Output tray 1	Collects printed pages
2	Upper cover	Opened when clearing paper misfeeds
3	Horizontal transport unit cover	Opened when clearing paper misfeeds from the horizontal transport unit
4	Punch scrap box	Removed when emptying hole-punch waste that has accumulated from using the Punch settings
5	Misfeed-clearing guide	Opened when clearing paper misfeeds within the finisher
6	Right-side door	Opened when clearing paper misfeeds within the finisher
7	Output tray 2	Collects copies printed using the "Fold & Staple" setting
8	Misfeed-clearing dial in folding section	Turned when clearing paper misfeeds in the folding section
9	Staple cartridge holder	Removed from the stapler unit when clearing jammed staples or replacing the staple cartridge
10	Misfeed-clearing dial 1	Turned when clearing paper misfeeds within the finisher
11	Misfeed-clearing dial 2	Turned when clearing jammed staples or replacing the staple cartridge, or for moving the staple cartridge holder out to the front
12	Stapler unit	Pulled out when clearing jammed staples or replacing the staple cartridge
13	Front door	Opened when clearing paper misfeeds or jammed staples or when replacing the staple cartridge


## Punch kit PK-501

No.	Part name	Description
14	Punch kit*	Punches holes for filing printed pages when punch kit is installed onto finisher FS-609.


\* Parts marked with an asterisk are internal options and therefore are not shown in the illustration.

## Precautions for using the finisher:


- Do not place objects on top of the finisher and below the paper output trays, otherwise the machine may be damaged.

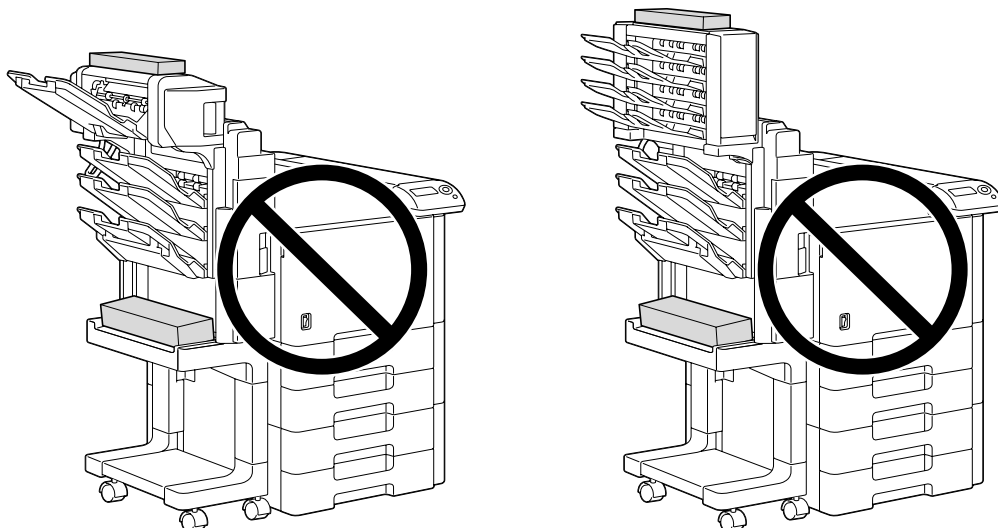

- Do not place your hand below or rest your foot on top of the output trays for finisher.

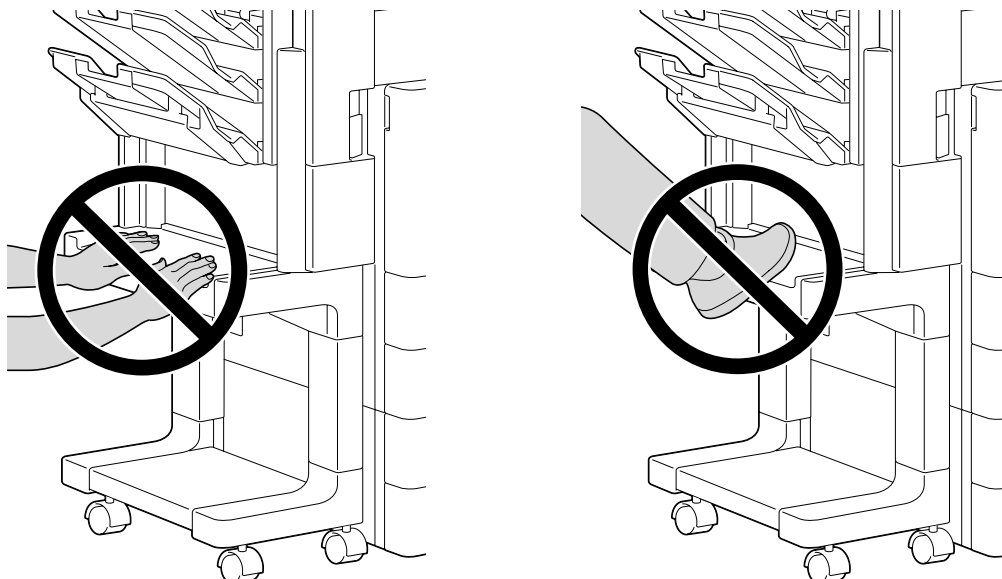


### 1.1.7 Control panel

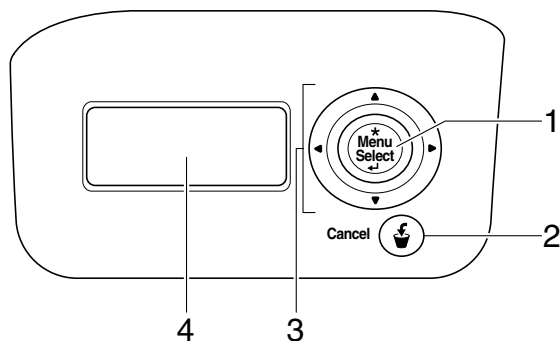

No.	Part name	Description
1	[Menu/Select] key	While the machine is waiting to receive data, press this key to display the settings menu. If this key is pressed while a setting is displayed, that setting is selected.
2	[Cancel] key	Press this key to quit changing the settings in the menu.
3	Cursor keys ([▲], [▼], [◀], [▶])	The [▲] and [▼] keys switch among parameters of the "Utility" menu. During character entry, they switch between characters and numeric values. The [◀] and [▶] keys move the hierarchy of each Menu screen. During numeric value entry, they move the position of changeable digit.
4	Display panel	Displays various screens and messages.

### 1.1.8 Display panel

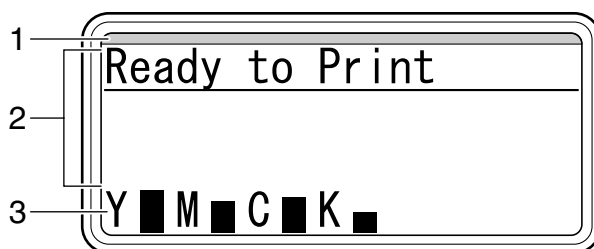


No.	Part name	Description
1	LED line	The machine's current status is indicated by the color and lighting/flashing of the indicator. Flashing in blue: Printing normally Flashing in orange: Warning Lit in orange: Stopping operating
2	Message area	Displays the status of the machine, setting, and warnings.
3	Toner supply indicators	Displays the amount of toner remaining.

## 1.2 Power supply

### 1.2.1 Turning on the machine

- 1 Set the power switch to "I".

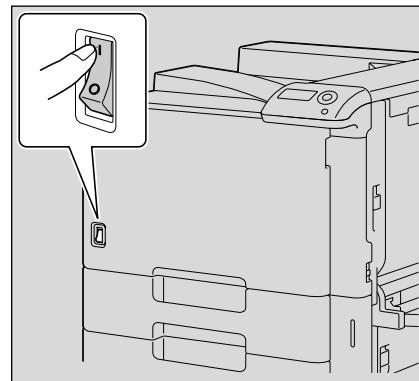

- 2 Check that the display panel is turned on.



#### Detail

*When the machine is turned on, the printer starts up and the message "Now warming up" appears. After the message "Ready to Print" appears, a print job can be received.*

*The default settings, which are those that are selected immediately after the machine is turned on, can be changed. For details, refer to ["Settings for control panel" on page 8-2](#).*

*The factory defaults settings are the settings that were selected when this machine was sent from the factory.*




#### Note

*Warming-up time is within 75 seconds at an ambient temperature of 73.4 °F (23 °C).*

### 1.2.2 Turning off the machine

- 1 Set the power switch to "O".

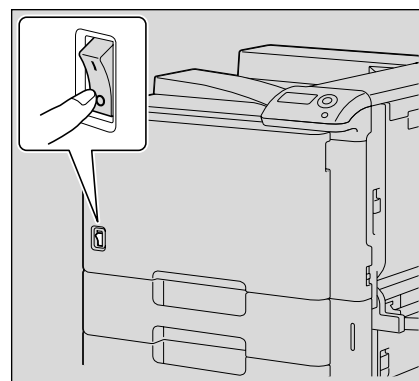

- 2 Check that the display panel is turned off.



#### Reminder

*When the power switch is turned off, then on again, wait at least 10 seconds to turn it on after turning it off. If there is no wait period between turning the power switch off, then on again, the machine may not function properly.*

*Do not turn off the machine with the power switch while it is making printing, otherwise a paper misfeed may occur.*

*Do not turn off the machine with the power switch while a queued job or stored data is waiting to be printed, otherwise the jobs will be deleted.*

**Detail**

*The following are cleared when the power switch is turned off.  
Settings that have not been programmed  
Jobs queued to be printed.*

### 1.2.3 Automatically clearing settings (System Auto Reset)

If no operation is performed for a specified length of time while settings are being changed, settings that have not been programmed are cleared and return to their defaults.

This is the system auto reset operation.

As the factory default, the system auto reset operation is performed after 1 minute.

**Detail**

*The length of time until the system auto reset operation is performed and whether or not it is performed can be set from "System Setting" menu. For details, refer to "System Settings" on page 8-21.*

### 1.2.4 Automatically conserving energy (Low Power mode)

If no operation is performed for a specified length of time the machine automatically enters a mode where it conserves energy.

This is the Low Power mode.

The machine can receive jobs even while it is in Low Power mode.

As the factory default, the machine enters Low Power mode after 15 minutes.

**Note**

*When a print job is received, the machine recovers from Low Power mode and begins printing after it has finished warming up.*

*The Low Power mode can also be canceled by pressing any key in the control panel.*

**Detail**

*The length of time until the machine enters Low Power mode can be changed. For details, refer to "System Settings" on page 8-18.*

### 1.2.5 Automatically conserving energy (Sleep mode)

If no operation is performed for a specified length of time, the machine automatically enters a mode where it conserves energy.

This is the Sleep mode.

Although the machine conserves more energy in Sleep mode than in Low Power mode, the machine must warm up when Sleep mode is canceled to begin printing again, therefore taking more preparation time than Low Power mode.

As the factory default, the machine enters Sleep mode after 20 minutes.

**Note**

*When a print job is received, the machine recovers from Low Power mode and begins printing after it has finished warming up.*

*The Sleep mode can also be canceled by pressing any key in the control panel.*

**Detail**

*The length of time until the machine enters Sleep mode can be changed. For details, refer to "[System Settings](#)" on page 8-18.*

### 1.2.6 Manually switching to Power Save mode

Power Save mode can be manually specified from the control panel.

If "Immediately" is specified for "Entering Power Save" on the control panel, this machine stops all the functions. However, the machine automatically returns from the Power Save mode when the control panel is operated or data is being sent.

### 1.2.7 Power supply

Be sure to turn off the machine if it is not to be used for a long period of time, for example, overnight.

In order to ensure that no energy is being consumed, unplug the machine.

## 1.3 Paper

Use paper that meets the following specifications.

### 1.3.1 Possible paper sizes

Non-standard-sized paper:

Paper source	Paper width	Paper length
Bypass tray*	3-1/2 to 12-1/4 (90.0 mm to 311.1 mm)	5-1/2 to 47-1/4 (139.7 mm to 1200.0 mm)
Tray 1	–	–
Tray 2		
Single/Double paper feed cabinets		
LCT		
Double-sided prints	5-1/2 to 12-1/4 (139.7 mm to 311.1 mm)	5-3/4 to 18 (148 mm to 457.2 mm)

\* Banner paper  
 Paper width: 8-1/4 to 11-3/4 (210 mm to 297 mm)  
 Paper length: 18 to 47-1/4 (457.3 mm to 1200 mm)

Standard-sized paper:

Paper source	Paper size
Bypass tray <sup>*1</sup>	12 × 18 <sup>*2</sup> to 5-1/2 × 8-1/2  (A3  to B6 , A6 , 8 × 13 <sup>*3</sup> , 16K , 8K )
Tray 1	11 × 17  to 8-1/2 × 11 <sup>*4</sup> , 5-1/2 × 8-1/2 <sup>*4</sup> (A3  to B5 , A5 <sup>*5</sup> , 8 × 13 <sup>*3</sup> , 16K , 8K )
Tray 2	12 × 18 <sup>*2</sup> to 8-1/2 × 11 <sup>*4</sup> , 5-1/2 × 8-1/2 <sup>*4</sup> (A3  to B5 , A5 <sup>*5</sup> , 8 × 13 <sup>*3</sup> , 16K , 8K )
Single/Double paper feed cabinets	11 × 17  to 8-1/2 × 11 <sup>*4</sup> , 5-1/2 × 8-1/2 <sup>*4</sup> (A3  to B5 , A5 <sup>*5</sup> , 8 × 13 <sup>*3</sup> , 16K , 8K )
LCT	8-1/2 × 11  (A4 )
Double-sided prints	12 × 18 <sup>*2</sup> to 5-1/2 × 8-1/2, 12-1/4 × 18 , 4 × 6  (A3  to A5 , 8 × 13 <sup>*3</sup> , 16K , 8K )

<sup>\*1</sup> For thick paper 4, only A3 , A4 , 11 × 17 and 8-1/2 × 11 are available for printing.








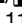
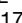

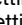
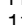
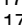



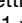
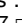
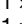
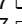
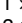
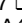
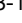
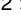
<sup>\*2</sup> 12 × 18 is equivalent to 304.8 mm × 457.2 mm, which is one size larger than A3.

<sup>\*3</sup> There are five Foolscap sizes: 220 × 330 mm , 8-1/2 × 13 , 8-1/4 × 13 , 8-1/8 × 13-1/4 , and 8 × 13 . Any one of these sizes can be selected. For details, contact your service representative.

<sup>\*4</sup> 5-1/2 × 8-1/2 can be used with the North American (inch) model only.
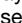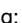
<sup>\*5</sup> A5 can be used with the European (metric) model only.

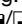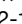Loaded equipment	Paper sizes that can be loaded
Finisher FS-519	Output tray 1, 2 and optional Output Tray 11 × 17 , 8-1/2 × 11 <sup>*4</sup> , 5-1/2 × 8-1/2 <sup>*4</sup> , 12-1/4 × 18 (A3  to B6 , A6 , 12-1/4 × 18 ) "Group"/"Sort" settings: 11 × 17  to 8-1/2 × 11  (A3  to A5 ) Staple settings: 11 × 17  to 8-1/2 × 11  (A3  to A5 ) Punch settings*: 2-hole: 11 × 17  to 8-1/2 × 11 <sup>*4</sup> 3-hole: 11 × 17 , 8-1/2 × 11 <sup>*4</sup> 4-hole: A3 , A4 , B5
Optional output tray OT-602	
Saddle stitcher SD-505	
Mailbin kit MT-502	

Loaded equipment	Paper sizes that can be loaded
Finisher FS-609	Output tray 1: "Group" setting: 11 × 17  to 5-1/2 × 8-1/2  , 12-1/4 × 18  (A3  to B5  , 12-1/4 × 18  ) "Sort" setting: 11 × 17  to 5-1/2 × 8-1/2  (A3  to A5  ) Staple setting: 11 × 17  to 8-1/2 × 11  (A3  to B5  ) Punch settings*: 2-hole: 11 × 17  to 8-1/2 × 11  3-hole: 11 × 17  to 8-1/2 × 11  4-hole: A3  , A4  Output tray 2: 11 × 17  , 8-1/2 × 11  (A3  to A4  )

\* Can be used when the optional punch kit is installed on the finisher.

### 1.3.2 Paper types and paper capacities

Paper type	Plain paper	Thick paper 1	Thick paper 2	Thick paper 3	Thick paper 4
Weight (lb)	16 lb to 24 lb	24-1/4 lb to 40 lb	40-1/4 lb to 55-1/2 lb	55-3/4 lb to 68 lb	68-1/4 lb to 72 lb
Paper source	(60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> )	(91 g/m <sup>2</sup> to 150 g/m <sup>2</sup> )	(151 g/m <sup>2</sup> to 209 g/m <sup>2</sup> )	(210 g/m <sup>2</sup> to 256 g/m <sup>2</sup> )	(257 g/m <sup>2</sup> to 271 g/m <sup>2</sup> )
Bypass tray	150 sheets	20 sheets	20 sheets	20 sheets	20 sheets
Tray 1 and tray 2	500 sheets	150 sheets	150 sheets	150 sheets	–
Single/Double paper feed cabinet	500 sheets	150 sheets	150 sheets	150 sheets	–
LCT	2,500 sheets	1,000 sheets	1,000 sheets	1,000 sheets	–

Paper type	Transparencies	Postcards	Envelopes	Label sheets	Banner paper
Paper source					33-3/4 lb to 55-3/4 lb (127 g/m <sup>2</sup> to 210 g/m <sup>2</sup> )
Bypass tray	20 sheets	20 sheets	10 sheets	20 sheets	10 sheets
Tray 1 and tray 2	–	–	–	–	–
Single/Double paper feed cabinet	–	–	–	–	–
LCT	–	–	–	–	–

### 1.3.3 Special paper

Paper other than plain paper, such as OHP transparencies and colored paper, is called special paper. Be sure to select a special paper setting for paper trays loaded with media such as OHP transparencies and colored paper. If the paper type is not correctly selected, paper misfeeds may occur.

Paper type	Descriptions
Single Side Only	Select this setting when paper that should not be used with double-sided copying (for example, when one side has already been printed on) is loaded as plain paper with a weight of 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ). A paper tray with the "Single Side Only" setting selected is given priority when the "Auto" Paper setting is specified. A paper tray with this setting is not automatically selected during double-sided printing.
Special Paper	Select this setting when special paper, for example, high-quality paper, is loaded as plain paper with a weight of 15-15/16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ). A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified.
Letterhead	Select this setting when paper already printed with a company name or preset text is loaded as plain paper with a weight of 15-15/16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ). A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified.

Paper type	Descriptions
Colored Paper	Select this setting when colored paper is loaded as plain paper with a weight of 15-15/16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ). A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified.
Transparency	Select this setting when OHP transparencies are loaded. A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified. When selecting OHP transparencies, select the "Gray Scale" Color setting, and then select the paper type.
Thick 1	Select this setting when the thick paper that is loaded has a weight of 24-1/4 lb to 40 lb (91 g/m <sup>2</sup> to 150 g/m <sup>2</sup> ). A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified.
Thick 2	Select this setting when the thick paper that is loaded has a weight of 40-1/4 lb to 55-1/2 lb (151 g/m <sup>2</sup> to 209 g/m <sup>2</sup> ). A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified.
Thick 3	Select this setting when the thick paper that is loaded has a weight of 55-3/4 lb to 68 lb (210 g/m <sup>2</sup> to 256 g/m <sup>2</sup> ). A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified.
Thick 4	Select this setting when the thick paper that is loaded has a weight of 68-1/4 lb to 72 lb (257 g/m <sup>2</sup> to 271 g/m <sup>2</sup> ). A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified.
Envelope	Select these settings when envelopes are loaded. A paper tray with this setting is not automatically selected when the "Auto" Paper setting is specified.
Plain-2nd Side	Select these settings when loading paper that has already been printed on one side. "2nd Side" can be selected only if plain paper, thick paper 1, thick paper 2, thick paper 3 or thick paper 4 is loaded in the bypass tray.
Thick 1-2nd Side	
Thick 2-2nd Side	
Thick 3-2nd Side	
Thick 4-2nd Side	

### 1.3.4 Precautions for paper

Do not use the following types of paper.

Otherwise, decreased print quality, paper misfeeds or damage may result.

- OHP transparencies that have already been fed through the machine (even if the transparency is still blank)
- Paper that has been printed on with a heat-transfer printer or an inkjet printer
- Paper that is either extremely thick or extremely thin
- Folded, curled, wrinkled, or torn paper
- Paper that has been left unwrapped for a long period of time
- Damp paper, perforated paper, or paper with punched holes
- Extremely smooth or extremely rough paper, or paper with an uneven surface
- Paper that has been treated, such as carbon-backed, heat-sensitive or pressure-sensitive paper
- Paper that has been decorated with foil or embossing
- Paper of a non-standard shape (not rectangular)
- Paper that is bound with glue, staples or paper clips
- Paper with labels attached
- Paper with ribbons, hooks, buttons, etc., attached

### 1.3.5 Paper storage

Store paper in a cool, dark location with little humidity.



If the paper becomes damp, paper misfeeds may occur.

Paper that has not been loaded should be kept wrapped or placed in a plastic bag and stored in a cool, dark location with little humidity.

Store the paper laying flat, not standing on its edge. Curled paper may cause paper misfeeds.

Keep paper out of the reach of children.

### 1.3.6 Auto tray switch feature

If the selected paper tray runs out of paper while a job is being printed and a different paper tray is loaded with paper meeting the following conditions, the other paper tray is automatically selected so printing can continue. If the optional LCT is installed, a maximum of 3,650 copies (with 8-1/2 × 11  (A4  paper) can be made continuously. (The paper tray is automatically switched only if the "Auto Tray Switch" parameter in the "User Settings" menu is set to "ON".)

Operating conditions

- The paper is the same size.
- The paper is positioned in the same orientation.
- The paper is the same type.
- The paper trays are selected when the paper tray is automatically switched.



#### Detail

*For details on the specifying the paper trays that are selected when the paper tray is automatically switched, refer to **"System Settings" on page 8-18.***

### 1.3.7 Order for selecting paper trays

As a factory default, when a different paper tray is automatically selected, the next paper tray in the following list is chosen.

When paper feed cabinet and LCT are not installed:

T1 (Tray 1) → T2 (Tray 2) → BP (Bypass tray)

When single paper feed cabinet is installed:

T1 (Tray 1) → T2 (Tray 2) → T3 (Tray 3) → BP (Bypass tray)

When double paper feed cabinet is installed:

T1 (Tray 1) → T2 (Tray 2) → T3 (Tray 3) → T4 (Tray 4) → BP (Bypass tray)

When LCT is installed:

T1 (Tray 1) → T2 (Tray 2) → T3 (Tray 3) → BP (Bypass tray)



#### Detail

*To change the order in which the paper trays are selected, refer to **"System Settings" on page 8-18.***

## 1.4 Loading paper


### 1.4.1 Loading paper into tray 1/2/3/4

The paper loading method is the same for trays 1, 2, 3, and 4.

The following describes the paper loading procedure for tray 1.


✓ Tray 3/4 is an option.

**1** Pull out tray 1.

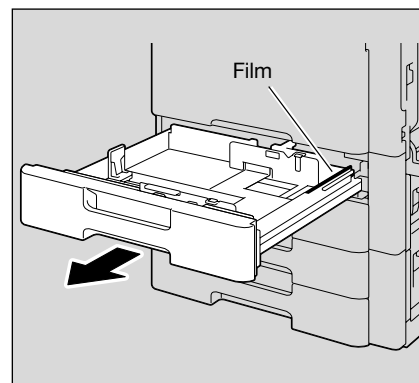


**2** Slide the lateral guides to fit the size of paper to be loaded.


- If the lateral guides are not positioned correctly for the loaded paper, the paper size will not be correctly detected. Be sure to adjust the lateral guides to the size of the loaded paper.

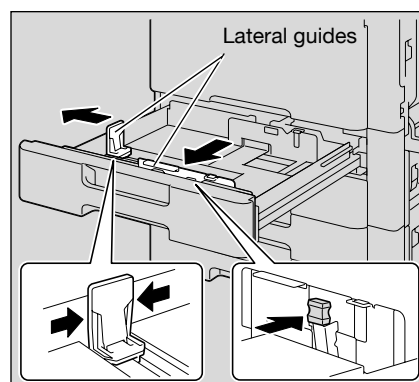

**3** Load the paper into the tray so that the side of the paper to be printed on (the side facing up when the package was unwrapped) faces up.

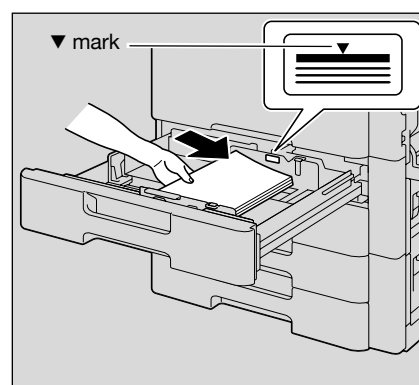

- Load letterhead paper so that the side to be printed on faces down.

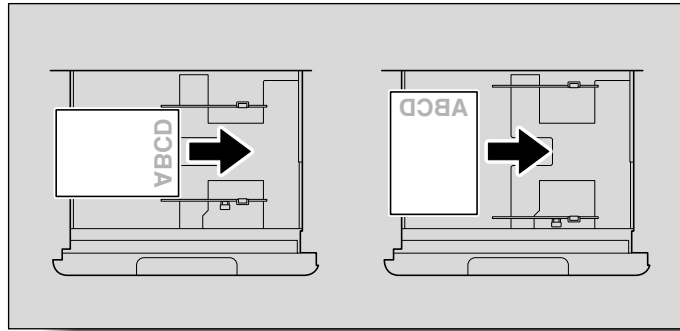

? How is curled paper loaded?

→ Flatten the paper before loading it.

? How many sheets of paper and other media can be loaded?

→ Do not load so many sheets of plain paper that the top of the stack is higher than the ▼ mark.

#### 4 Close tray 1.



##### Detail

*If special paper is loaded, the paper type setting must be specified. For details, refer to ["Paper Settings Menu" on page 8-17](#).*



##### Reminder

*Be careful not to touch the film.*


*For details on selecting the size and type of paper loaded in tray 1/2/3/4, refer to ["Paper" on page 1-18](#).*

*To print on OHP transparencies, envelopes or postcards, use the bypass tray.*


### 1.4.2 Loading paper into the LCT

- ✓ If the [Power] is turned off, the LCT cannot be pulled out, even after the tray release button is pressed. Be sure that the machine is turned on with the [Power].
- ✓ LCT is an option.


- 1 Press the tray release button.  
The LCT slides out from the main unit slightly.

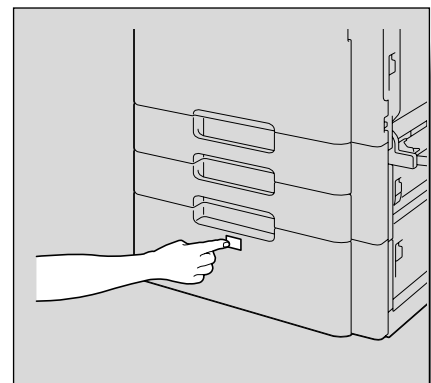

## 2 Pull out the LCT.

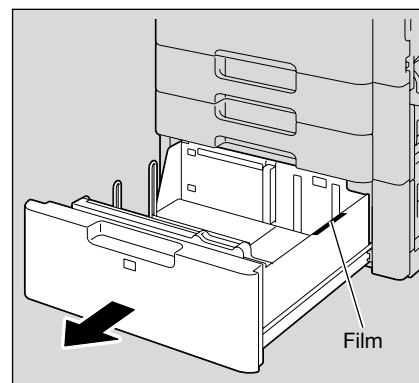


## 3 Load the paper into the right side of the LCT so that the side of the paper to be printed on (the side facing up when the package was unwrapped) faces up.

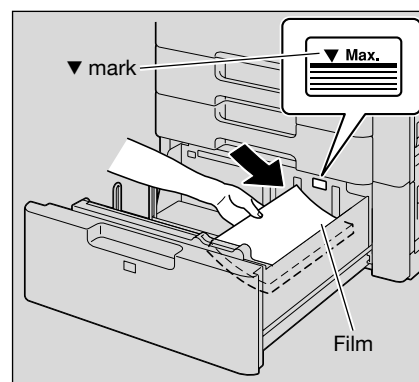


- Load letterhead paper so that the side to be printed on faces down.
- To print on OHP transparencies, thick paper 4, envelopes or postcards, use the bypass tray.

? How is curled paper loaded?

→ Flatten the paper before loading it.

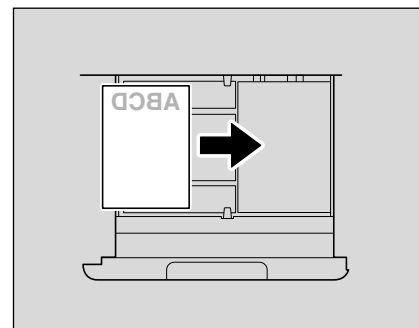

## 4 Load the paper into the left side of the LCT so that the side of the paper to be printed on (the side facing up when the package was unwrapped) faces up.

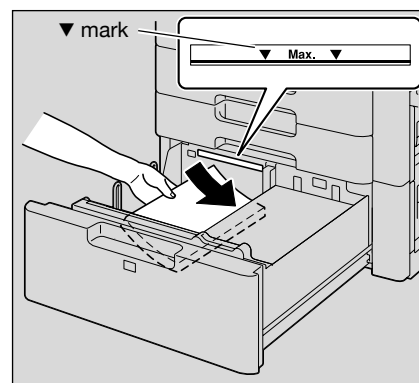

## 5 Close the LCT.

- If special paper is loaded, the paper type setting must be specified. For details, refer to **"Paper Settings Menu" on page 8-17**.



### Reminder

*Be careful not to touch the film.*

*Do not load so many sheets of paper that the top of the stack is higher than the ▼ mark.*

*For details on the paper that can be loaded into the LCT, refer to **"Paper" on page 1-18**.*



### Note

*If the machine has entered Low Power mode or Sleep mode, the LCT cannot be pulled out, even after the tray release button is pressed. Be sure to first cancel Low Power mode or Sleep mode.*

## 1.4.3 Loading paper into the bypass tray

Paper can be fed manually through the bypass tray if you wish to print onto paper that is not loaded into a paper tray, or if you wish to print onto thick paper 4, postcards, envelopes, OHP transparencies or label sheets.




### Detail

*For thick paper 4, only A3 , A4 , 11 × 17  and 8-1/2 × 11  are available for printing.*

## 1 Open the bypass tray.

- When loading large-sized paper, pull out the tray extension.

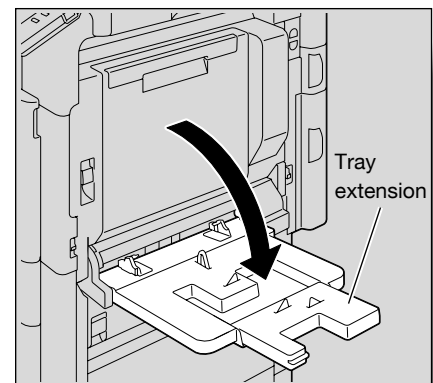

## 2 With the side to be printed on facing down, insert the paper as much as possible into the feed slot.


## 3 Slide the lateral guides to fit the size of paper being loaded.

? How is curled paper loaded?

→ Flatten the paper before loading it.

? How many sheets of paper and other media can be loaded?

→ Do not load so many sheets of plain paper that the top of the stack is higher than the ▼ mark.

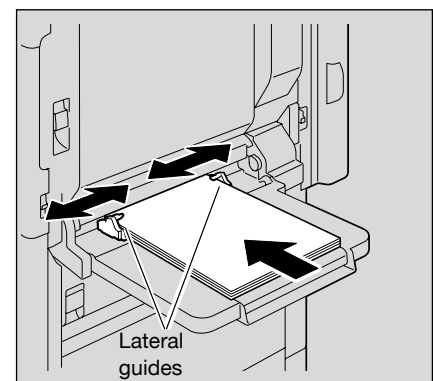



**Note**

*If necessary, specify the paper size and paper type.*

*For details, refer to **"Paper Settings Menu" on page 8-17.***

**Reminder**

*Push the paper guides firmly up against the edges of the paper.*

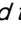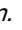
*When loading postcards, load them in the  orientation, as shown in the illustration. Do not load postcards in the  orientation.*



*If postcards are loaded, select "Thick 3".*

*If label sheets are loaded, select "Thick 1".*


*Printing on OHP transparencies is possible only in black. When selecting OHP transparencies, select the "Gray Scale" from "Select Color" in "Quality" tab.*

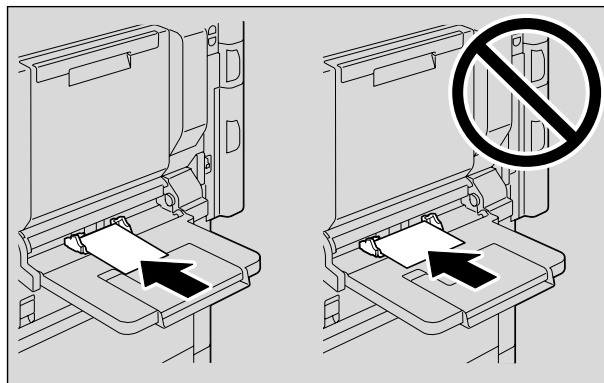*A maximum of 20 postcards can be loaded into the bypass tray.*



*When loading OHP transparencies, load them in the  orientation, as shown in the illustration. Do not load OHP transparencies in the  orientation.*


*A maximum of 20 OHP transparencies can be loaded into the bypass tray.*

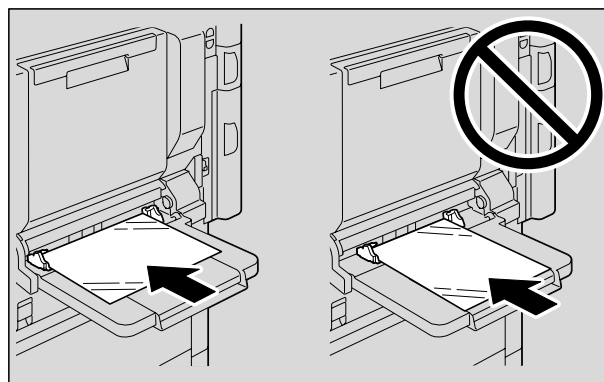



*Before loading envelopes, press them down to make sure that all air is removed, and make sure that the folds of the flaps are firmly pressed, otherwise the envelopes may become wrinkled or a paper misfeed may occur.*


*When loading envelopes, load them with the flap side up, as shown in the illustration. If the envelopes are loaded with the flap side down, a paper misfeed may occur. The flap side of envelopes cannot be printed on.*

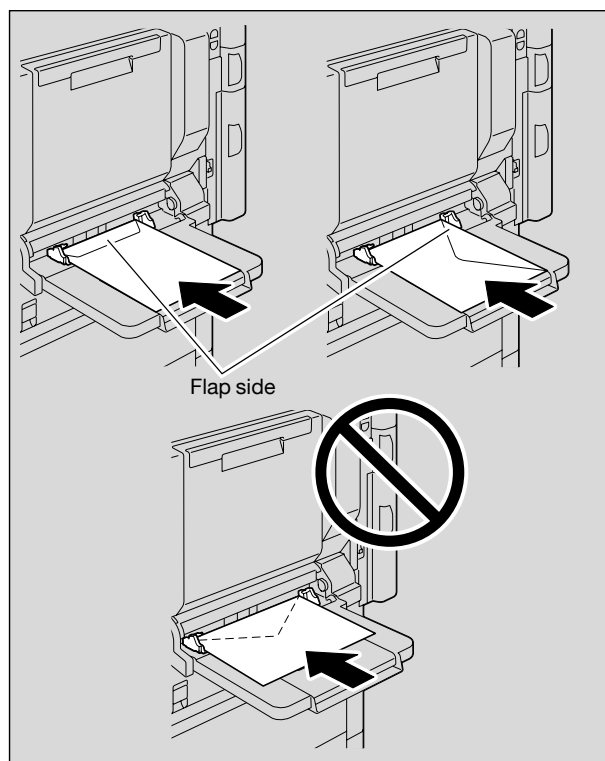*A maximum of 10 envelopes can be loaded into the bypass tray.*




*When loading label sheets, load them in the  orientation, as shown in the illustration. Do not load label sheets in the  orientation.*

*A maximum of 20 label sheets can be loaded into the bypass tray.*

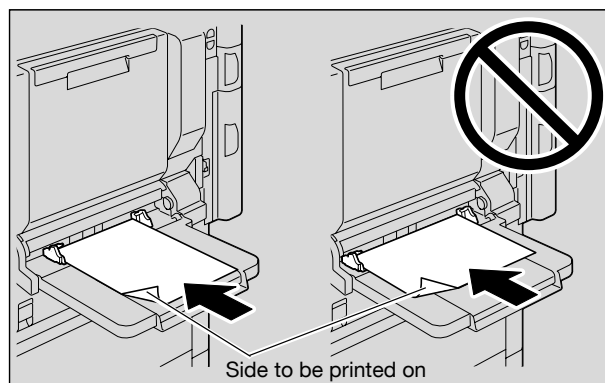

*Be sure to load letterhead paper so that the side to be printed on faces up.*

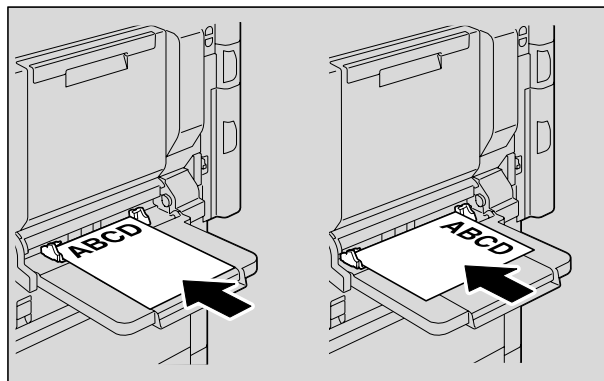



**Note**

*The image will be printed on the surface of the paper facing down when the paper is loaded into the bypass tray.*



**Detail**


*For details on the paper sizes, refer to ["Paper" on page 1-18](#).*

## 1.5 Printer controller

The printer controller is a device for performing printing functions and network printing functions with this machine.

### 1.5.1 Role of the printer controller

The printer controller processes printing data in this machine, which plays an important role in the printing system. The computer provides connections through the printer controller, allowing printing from applications. When using this machine as a network printer, you can print from applications on the computer.

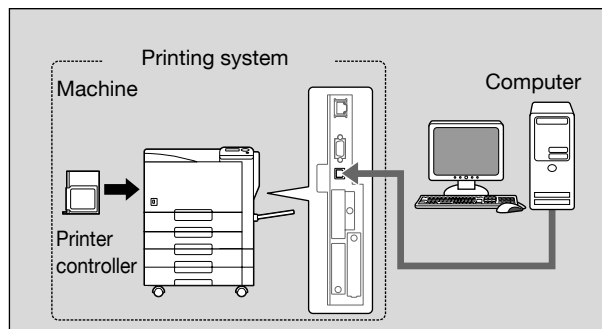

The printer controller provides the following functions:


- Printing data being sent from a printer driver on a computer
- Support of network protocols including TCP/IP (IPv4/IPv6), IPX/SPX, and AppleTalk
- Direct printing over a network using Web Service Printing (Windows Vista), SMB (Windows), LPR, and IPP printing
- Access to settings for this machine and the printer controller from a client computer over the network (using a Web browser)
- Control of the number of pages printed (the User Authentication and Account Track functions)

### 1.5.2 Printing flow

The following outlines the flow of operations for using this printing system.

The printer driver receives print commands from applications.

Data is transmitted to this machine over a USB interface when this machine is used via a USB connection, or over an Ethernet interface (TCP/IP, IPX/SPX, or AppleTalk) when this machine is used via an Ethernet connection. The data is then delivered from this machine to the printer controller that performs image rasterization (development of output characters and images to bitmap data) and printed by the printing mechanism of this machine.

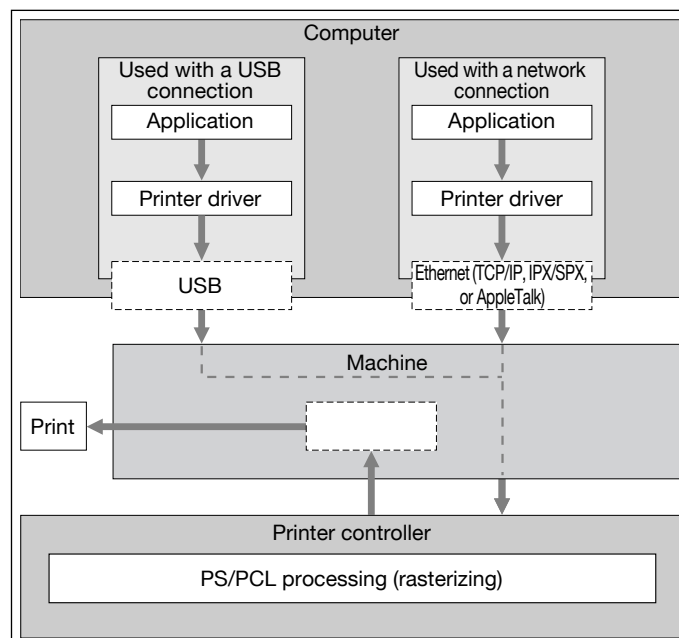

## 1.6 Operating environment

The following descriptions the system requirements for using this printing system and the interfaces used for connection.

### 1.6.1 Compatible computers and operating systems

Check that the computer being connected meets the following conditions.

#### Windows

Item	Operating environment
Operating System	Windows NT Workstation/Server Version4.0 (Service Pack 6 or later), Windows 2000 Professional/Server (Service Pack 3 or later), Windows XP Home Edition/Windows XP Professional, Windows XP Professional x64 Edition, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise x64 Edition, Windows Server 2003 Standard Edition, Windows Server 2003 x64 Edition
Processor	Processor recommended for the operating system or higher
Memory	Capacity recommended for the operating system With sufficient memory resources in the operating system and application being used
Drive	CD-ROM
Web Browser (when using PageScope Web Connection)	Microsoft Internet Explorer Ver. 6 or later (JavaScript and Cookies enabled) Netscape Navigator Ver. 7.02 or later (JavaScript and Cookies enabled) Mozilla Firefox Ver. 1.0 or later (JavaScript and Cookies enabled) Adobe® Flash® (plug-in ver. 7.0 or later required if Flash is selected as the display format)

#### Macintosh

Item	Operating environment
Operating System	Mac OS 9.2, Mac OS X 10.2.8, Mac OS X 10.3, or Mac OS X 10.4
Processor	PowerPC, Intel Processor (Intel Processor for Mac OS X 10.4 only)
Memory	Capacity recommended for the operating system
Drive	CD-ROM
Web Browser (when using PageScope Web Connection)	Netscape Navigator Ver. 7.02 or later (JavaScript and Cookies enabled) Mozilla Firefox Ver. 1.0 or later (JavaScript and Cookies enabled) Adobe® Flash® (plug-in ver. 7.0 or later required if Flash is selected as the display format)

## 1.6.2 Compatible interfaces

The following interfaces can be used to connect this printing system to a computer.

### Ethernet interface

Select to use this printing system via a network connection.

Supports 10Base-T, 100Base-TX, and 1000Base-T standards. In addition, the Ethernet interface supports the TCP/IP (LPD/LPR, IPP, SMB), Web Service, IPX/SPX (NetWare), and AppleTalk (EtherTalk) protocols.

### USB interface


Select to use this printing system via a USB connection.

The USB interface can be connected to a computer running Windows. A USB cable is required for connection. Use a type A (4 pin, male) or type B (4 pin, male) USB cable. A USB cable measuring three meters or less is recommended.

### Connection diagram

The printer cables are connected to each port on this machine.

Machine (rear view)

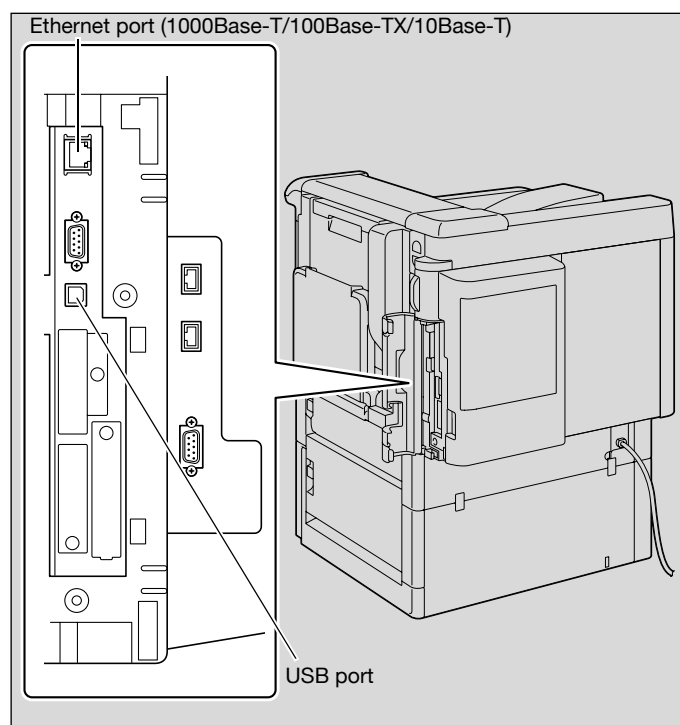

### 1.6.3 Printer drivers applicable to operating systems

In order to use this printing system, the printer driver must be installed.

The following lists the printer drivers included on the CD and the supported computer operating systems. Select the required printer driver.

Printer driver	Page description language	Supported operating systems
Konica Minolta PCL Driver (PCL driver)	PCL6	Windows NT Workstation/Server Version 4.0 (Service Pack 6 or later) Windows 2000 Professional/Server (Service Pack 3 or later), Windows XP Home Edition/Windows XP Professional, Windows XP Professional x64 Edition, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise x64 Edition, Windows Server 2003 Standard Edition, Windows Server 2003 x64 Edition
Konica Minolta PostScript Driver (PS driver)	PostScript3 Emulation	Windows 2000 Professional/Server (Service Pack 3 or later), Windows XP Home Edition/Windows XP Professional, Windows XP Professional x64 Edition, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise x64 Edition, Windows Server 2003 Standard Edition, Windows Server 2003 x64 Edition
PostScript PPD driver (PS-PPD)		Mac OS 9.2 or later Mac OS X 10.2.8, Mac OS X 10.3, or Mac OS X 10.4



#### Note

Select the page description language according to the application used for printing.

## 1.7 Setting up the system

In order to use this printing system, it must first be set up.

The setup procedure refers to a series of steps for connecting this machine to a computer and installing the printer driver on the computer.

The setup procedure consists of the following steps.

### 1.7.1 Network connection

- 1 Connect this machine to a computer.
- 2 Make sure the computer is connected to the network.
- 3 Specify the IP address of the machine to connect it to the network.
- 4 Depending on the connection method and protocol, change the network settings of this machine.
  - LPR: Enable LPD print in the LPD Setting screen.
  - Port9100: Enable the RAW port number (9100 at default), in the TCP/IP Setting screen.
  - SMB: Specify "Print Setting" in the SMB Setting screen.
  - IPP/IPPS: Enable IPP print in the IPP Setting screen. For IPPS print, install the certificate in advance.
  - Web Service: Enable the print function in the Web Service Settings screen.
  - Bonjour: Enable Bonjour in the Bonjour Setting screen.
  - AppleTalk: Enable AppleTalk in the AppleTalk Setting screen.
- 5 Install the printer driver.
  - Specify the network port of the printer driver according to the connection method and protocol.
- 6 Install the screen fonts.
  - The CD-ROM contains the Latin TrueType fonts as screen fonts. The ScreenFont or Screen Fonts folder in the CD-ROM contains the screen fonts.
  - Install the screen fonts after adding the operating system standard fonts. For details, refer to Help of the operating system.
  - Macintosh fonts are compressed. Decompress them before installing.

### 1.7.2 Local connection

- 1 Connect this machine to a computer.
- 2 Install the printer driver.
- 3 Install the screen fonts.
  - The CD-ROM contains the Latin TrueType fonts as screen fonts. The ScreenFont or Screen Fonts folder in the CD-ROM contains the screen fonts.
  - Install the screen fonts after adding the operating system standard fonts. For details, refer to Help of the operating system.



#### Reminder

*After installing the printer driver, perform test print to make sure that the connections are made properly.*



#### Detail

*For details on applicable interfaces, refer to ["Compatible interfaces" on page 1-32](#).*

*For details on network settings, refer to ["Network settings" on page 2-2](#).*

*The procedure for installing the printer driver differs depending on the connection method, operating system of the computer, and printer driver. For details, refer to ["Installing the printer driver for Windows" on page 3-2](#).*

**Note**

*To update an existing printer driver, delete the existing printer driver first. For details, refer to ["Uninstalling the printer driver" on page 3-36](#).*

*If necessary, specify the interface timeout settings in the Utility mode on the control panel. For details, refer to ["Printer Settings" on page 8-23](#).*

*Installation of screen fonts is available only if the optional HDD is installed.*

## 1.8 Contents of CD-ROM

The following CDs are available for printer controllers.

- bizhub C353 series CD (printer driver)
- Application CD (PageScope Utilities)
- User's Guide CD

Each CD contains printer drivers (for Windows and Macintosh), utilities, document data such as User's Guide manuals and release notes, and screen fonts.



**Note**

*In User's Guide, locations of folders or files may not contain the root directory.*

*Be sure to use files contained in the EN (English) folder.*

## 1.9 Authentication Method

Specify user authentication and account track settings in order to control the use of this machine.

User authentication settings are specified to manage individuals, and account track settings are specified to manage groups and multiple users.

By specifying both user authentication and account track settings, the number of prints made by each account can be managed for each individual user.



### Note

*On this machine, a total of 1,000 users and accounts can be registered if the optional HDD is installed, or a total of 30 users and accounts can be registered if not.*

*When an authentication method is specified, the authentication information is required when printing. To print with the user authentication or account track specified, the user name and password must be entered. For details, refer to ["Printing on a machine with the user authentication set up" on page 7-22](#) and ["Printing with the machine enabling the Account Track function" on page 7-25](#).*

*When an authentication method is specified, the authentication screen appears when you attempt to use the "Job Operation" function of this machine. To print with the user authentication or account track specified, the user name and password must be entered to login. For details, refer to ["Job Operation Menu" on page 8-16](#).*

*When an optional authentication unit is installed, login via the authentication unit is available.*


*User authentication and account track can be specified without synchronizing.*

### 1.9.1 User authentication and account track

User authentication and account track can be used to specify the following settings.

- User Authentication
  - Limits on the available functions
  - Counters for printing by each user
  - Limits on using color or black printing and on the number of copies that can be set
  - Management of group user boxes and personal user boxes for each owner
  - Delete jobs of other users
- Account Track
  - Counters for printing from each account
  - Limits on using color or black printing and on the number of copies that can be set
  - Operates the group box

### 1.9.2 When user authentication and account track are synchronized

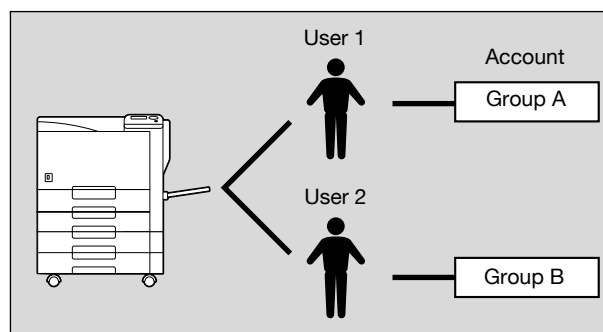


This setup is used when the machine is used by multiple departments and the use by each employee is managed by each department. With this setup, statistics can be maintained on each employee (each user) and on each department (each account).

To manage the use of this machine in this way, specify the following authentication settings.

Parameter on Authentication Method screen	Settings
User Authentication	Select "ON (External Server)" or "ON (MFP)".
Account Track	Select "ON", and then specify the account name and password.
Synchronize User Authentication & Account Track	Select "Synchronize".
Account Name (on User Registration screen)	Select an account name if "ON (MFP)" was selected.

### 1.9.3 When user authentication and account track are used separately

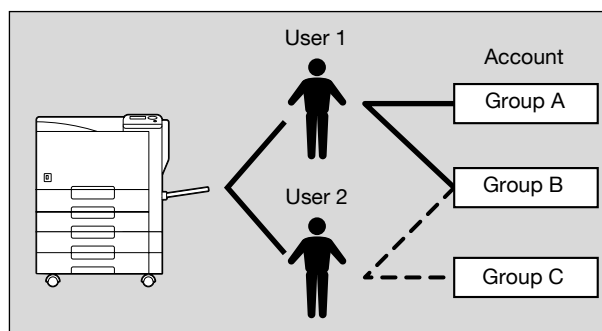

This setup is used when the machine is used by multiple employees with each employee performing multiple duties, which are to be totaled separately. With this setup, statistics can be maintained for each employee (each user) and on each duty of the employee (each account). In addition, totals can be maintained on each employee (each user) and each duty (each account) even if the same duty is performed by two different employees.

To manage the use of this machine in this way, specify the following authentication settings.

Parameter on Authentication Method screen	Settings
User Authentication	Select "ON (External Server)" or "ON (MFP)".
Account Track	Select "ON", and then specify the account name and password.
Synchronize User Authentication & Account Track	Select "Do Not Synchronize".

## 1.10 User Box functions

The User Box functions allow print data to be saved on the internal hard disk of the machine and printed later. To save data to a box, create the box according to the purpose, and then save the data to the specified box.



### Note


*The User Box function is available only if a hard disk is installed on this machine.*

### 1.10.1 Available User Box functions

#### Saving documents

Data can be saved to the following box:

User box	Description	Reference
Public User Box/Personal User Box/Account User Box	To save document data, print the data by specifying a user box with the Save in User Box function in the printer driver from the computer on the network. Based on user authentication or account track settings, access to some boxes, such as personal and group user boxes, can be limited to particular users.	<a href="#">p. 7-10</a>
Annotation User Box	To save document data, print the data by specifying a user box with the Save in User Box function in the printer driver from the computer on the network. Saved document data can be saved for later printing, with an image of the date/time or an annotation number added.	<a href="#">p. 7-15</a>
Secure Print Box	To save document data, print the data by selecting "Secure Print" in the printer driver from the computer on the network.	<a href="#">p. 7-5</a>
Encrypted PDF Box	To save document data, download the password-protected PDF file using the Direct Print function of PageScope Web Connection.	<a href="#">p. 7-20</a>
Touch & Print Box	To save document data, print the data after correctly specifying the User Authentication settings from the printer driver with the optional authentication unit AU-101 or 201 installed and with Touch & Print User Box enabled.	<a href="#">p. 7-28</a>

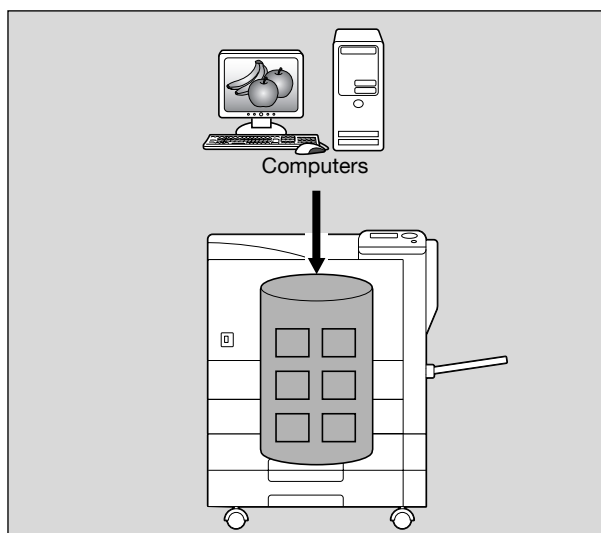


## Using document data

Documents saved in user boxes can be loaded by the "Job Operation" function of this machine.

The document saved in boxes can be used as follows:

User box	Description	Reference
Public/personal/group user boxes	Saved documents can be printed. Multiple documents can be selected for printing. Depending on user authentication and account track settings, use of some boxes, such as personal and group user boxes, can be limited to a particular user.	<a href="#">p. 7-13</a>
Secure Print Box	Saved documents can be printed. To print the data, enter an ID and password.	<a href="#">p. 7-8</a>
Annotation user box	Document data saved can be printed or transmitted with an image of the date/time or an annotation number.	<a href="#">p. 7-18</a>
Encrypted PDF Box	Saved documents can be printed. To print documents, the preset password is necessary.	<a href="#">p. 7-21</a>
Touch & Print Box	This box appears when the optional authentication unit (AU-101/201) is installed and Touch&PrintUserBox is enabled. By touching the authentication unit and logging on, documents being sent for print jobs by the printer driver are printed.	-

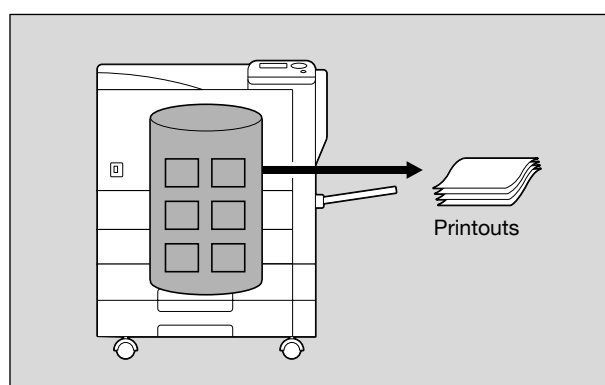

### 1.10.2 Set-up for User Box functions

Before using the User Box functions, the following settings should be specified.

#### User box registration

Create and register the user boxes where documents will be saved. User boxes that can be specified from a computer on the network using PageScope Web Connection are as follows.

- Public/personal/group user boxes ([p. 9-21](#))
- Annotation user box ([p. 9-23](#))


### 1.10.3 User authentication

This machine can be specified so that an account or user name and a password must be entered in order to use the "Job Operation" function of this machine.


Contact the administrator for authorized account or user name.

**Machine authentication**

Enter the user name and password to log in.

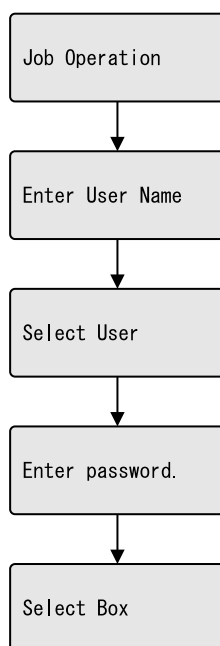**Account track**

Enter the account name and password to log in.

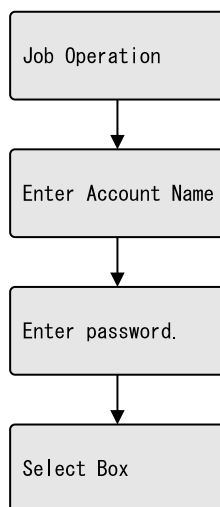**Detail**

With user authentication, the only boxes that are displayed are those accessible by the user that is logged on. For details, refer to ["Authentication and accessible user boxes" on page 1-42](#).

If "Prohibit Functions" in [Admin. Settings] is set to "Mode 2" and a user enters an incorrect password the specified number of times, that user is locked out and can no longer use the machine. Contact the administrator to cancel operation restrictions.

### 1.10.4 Limitation on user box registration

#### Public/personal/group user boxes

There are "public" user boxes, which can be used by more than one person, "personal" user boxes, which can be used only by a single person, and group user boxes, which can be used only by authorized users in the account track settings.


The followings are limitations for each box.

- Before document data can be saved, a user box must be created for saving the data.
- Up to 1,000 user boxes can be created.
- Up to 200 documents can be saved in a single user box.
- A total of 10,000 pages can be saved in all user boxes.
- A total of 3,000 documents can be saved in all user boxes.

### 1.10.5 Authentication and accessible user boxes

When user authentication and account track settings have been applied, the accessible user boxes and the access permissions change as shown below. Specify the user authentication and account track settings according to the desired functions.


#### When user authentication and account track settings are not specified

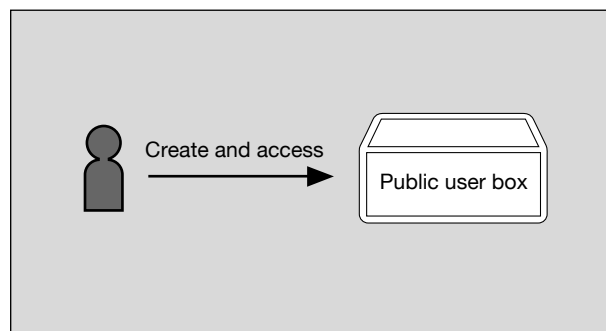

Users can access all public user boxes.

User boxes created by users and the administrator are "public" user boxes.

#### When only user authentication settings are specified

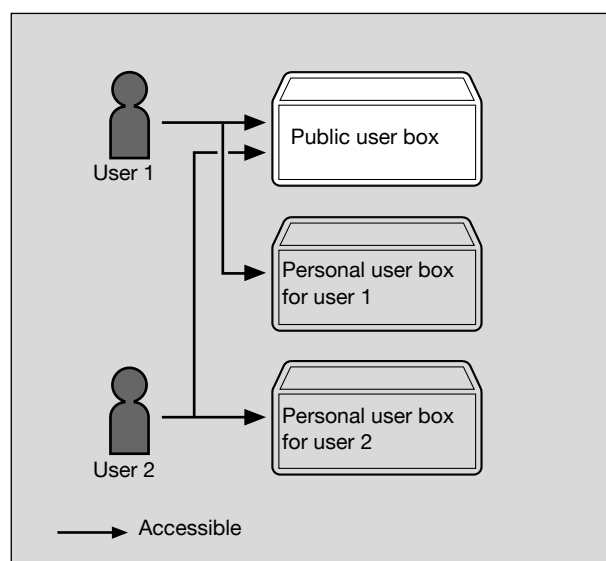


Users can access all public user boxes and only personal user boxes that the user has created.

Personal user boxes cannot be accessed by other users.


If user authentication settings are canceled or if authentication method is changed, all personal user boxes become public user boxes.

**When only account track settings are specified**

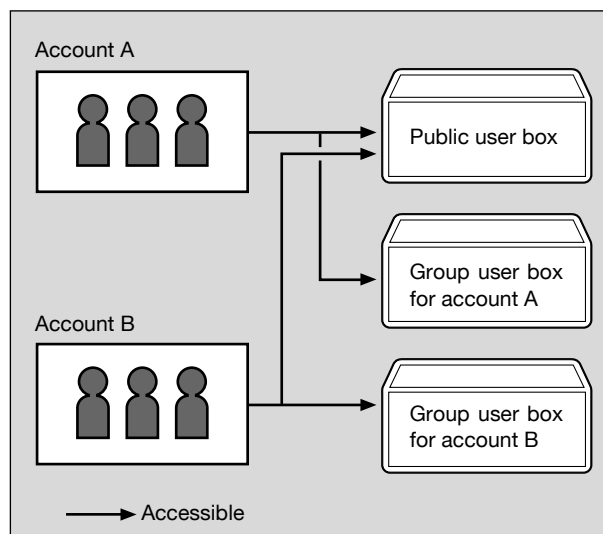


Users can access all public user boxes and only group user boxes for the account that the user belongs to. If account track settings are canceled or if authentication method is changed, all group user boxes become public user boxes.

**When user authentication and account track settings are specified and synchronized**

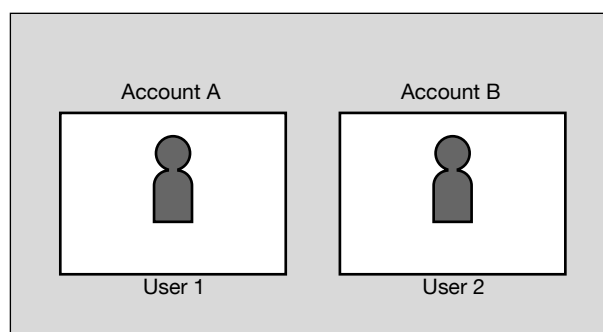

Since account name is synchronized with user names, group user boxes for accounts that the user does not belong to cannot be accessed.

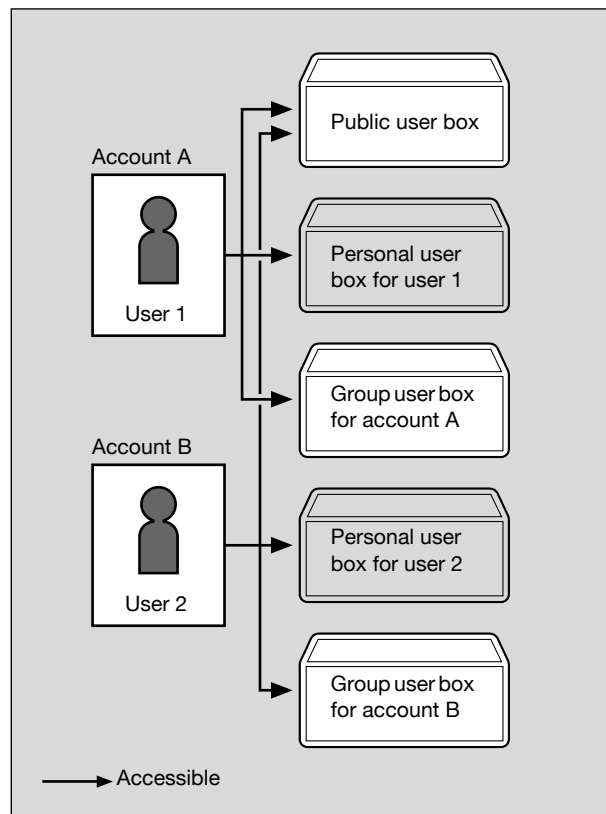


Users can access all public user boxes, only group user boxes for the account that the user belongs to, and only personal user boxes that the user has created.


Personal user boxes cannot be accessed by other users.

If user authentication settings are canceled or if authentication method is changed, personal user boxes and all group user boxes become public user boxes.

#### **When user authentication and account track settings are specified but not synchronized**

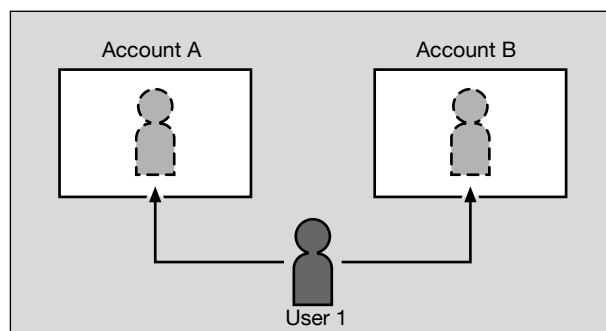

Since account name is not synchronized with user names, the account name and password must be entered when logging on. A user can use different account name at each login, and therefore can access to each group user box for the account.

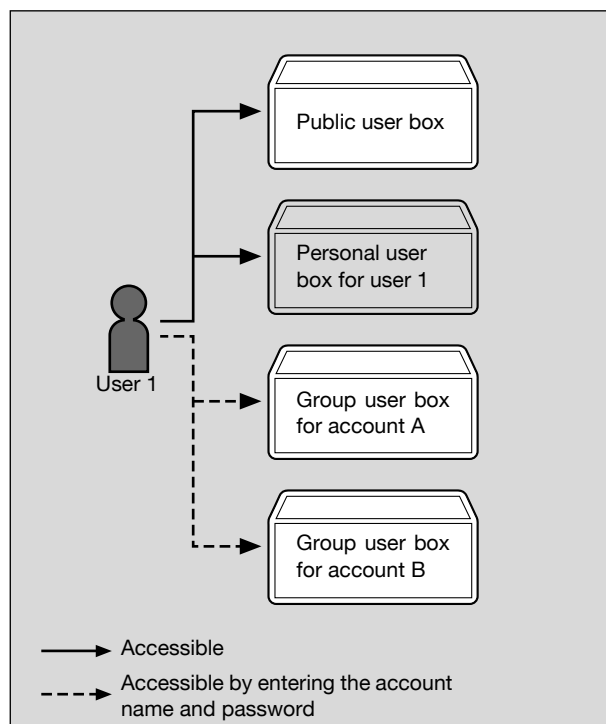

Users can access all public user boxes and only personal user boxes that the user has created.

Personal user boxes cannot be accessed by other users.

A user can access to a particular group user box by entering the relevant account name and password when logging on.

If user authentication settings are canceled or if authentication method is changed, personal user boxes and all group user boxes become public user boxes.



---

## **2** Network settings

## 2 Network settings

### 2.1 Specifying general settings for TCP/IP-based communication

Specify settings to use this machine in a TCP/IP network environment. To use this machine by connecting to the network, specify these settings in advance.



#### Reminder

*In order to apply all changes to the network settings, turn off this machine, then on again.*

*When turning off the power switch and turning it on again, wait for 10 seconds or longer after power-off, and then turn on the power again. The machine may not operate correctly if it is turned on immediately after being turned off.*

#### TCP/IP Settings


On the "Utility" menu of the control panel, select "System Settings" - "Network Settings" - "TCP/IP".

Specify the following settings.



#### Note

*For details on the "Utility" menu operations, refer to ["Control panel" on page 8-2](#).*

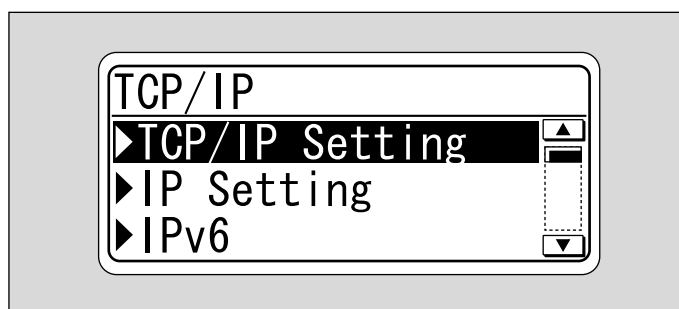

Item	Definition	Prior confirmation
TCP/IP Settings	Select [ON].	
IP Setting / Application Method	Select whether the IP address is automatically acquired or directly specified.	IP application method to be used
IP Address	To directly specify the IP address, specify the IP address of this machine.	IP address of this machine
Subnet Mask	To directly specify the IP address, specify the subnet mask of the network to be connected.	Subnet mask of this machine
Default Gateway	To directly specify the IP address, specify the default gateway of the network to be connected.	Default gateway of this machine
Dynamic DNS Settings	To automatically register the host name specified with [Host Name] for the DNS server that supports the Dynamic DNS function, select [ON].	Whether Dynamic DNS is used
DNS Host Name	Specify the host name of this machine (up to 63 characters).	
DNS Domain Name Auto Retrieval	Select whether to automatically acquire the name of the DNS domain. This item is enabled when the DHCP is enabled.	Whether automatic acquisition is available with DHCP


Item	Definition	Prior confirmation
Default DNS Domain Name	If not acquiring the DNS domain name automatically, specify the domain name to which this machine belongs (up to 255 characters including the host name).	Default Domain Name
DNS Search Domain Name 1 to 3	Specify the DNS search domain name (up to 253 characters).	
DNS Server Auto Obtain	Specify whether to automatically acquire the DNS server address. This item is enabled when the DHCP is enabled.	Whether automatic acquisition is available with DHCP
Priority DNS Server	If not automatically acquiring the DNS server address, specify the address of the priority DNS server.	Address of the server
Secondary DNS Server 1 and 2	Specify the address of an alternate DNS server.	Address of the server

## 2.2 Using PageScope Web Connection

Specify settings for using PageScope Web Connection. This manual describes how to specify settings required for each operation using PageScope Web Connection.

PageScope Web Connection is a device management utility supported by the HTTP server integrated into the printer controller. Using a Web browser on a computer connected to the network, machine settings can be specified and the status of the machine can be checked. Some settings can be specified from the computer instead of from the machine control panel.

Specify the settings according to the following flowchart.

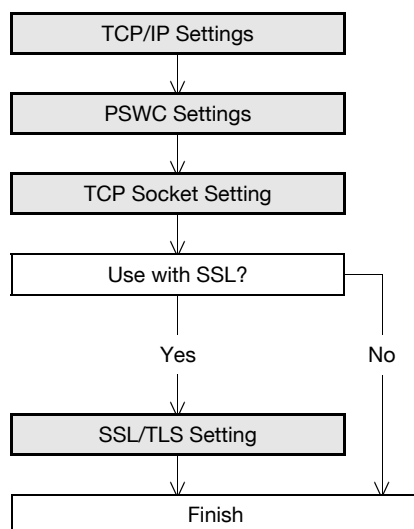

### 2.2.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

### 2.2.2 PSWC Settings


On the "Utility" menu of the control panel, select "System Settings" - "Network Settings" - "HTTP Server".

Specify the following setting.



**Note**

For details on the "Utility" menu operations, refer to ["Control panel" on page 8-2](#).

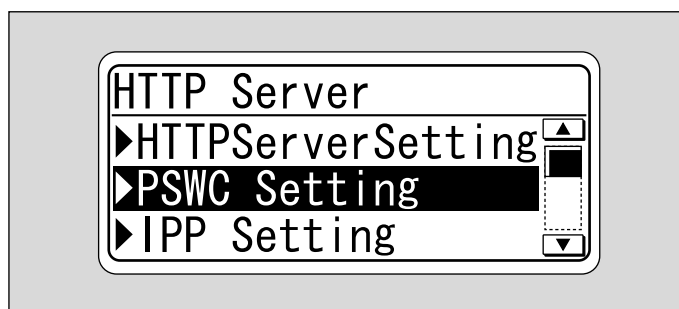

Item	Definition	Prior confirmation
PSWC Settings	Select [ON].	

### 2.2.3 TCP Socket Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP Socket Setting".  
Specify the following settings.



#### Note

For details on logging in to Administrator mode of PageScope Web Connection, refer to ["Logging in to Administrator mode of PageScope Web Connection" on page 2-6](#).

Item	Definition	Prior confirmation
TCP Socket (ASCII Mode)	To use in the Flash format, select the "TCP Socket (ASCII Mode)" check box.	
Port No. (ASCII Mode)	Specify the port number.	

### 2.2.4 SSL/TLS Setting

Specifying settings for SSL-based communication

For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49](#).

## 2.3 Logging in to Administrator mode of PageScope Web Connection

To specify settings for this machine with PageScope Web Connection, Administrator mode must be logged in. The following shows how to log in to Administrator mode.




### Detail


*When logged in to Administrator mode, the control panel of the machine is locked and cannot be used.*

*Depending on the status of the machine, you may not be able to log in to Administrator mode.*

- 1 In the login page, select "Administrator", and then click the [Login] button.
  - If necessary, select the display language and format. If "When in warning, the dialog is displayed." check box is selected, warning messages appear during operation after logging in.

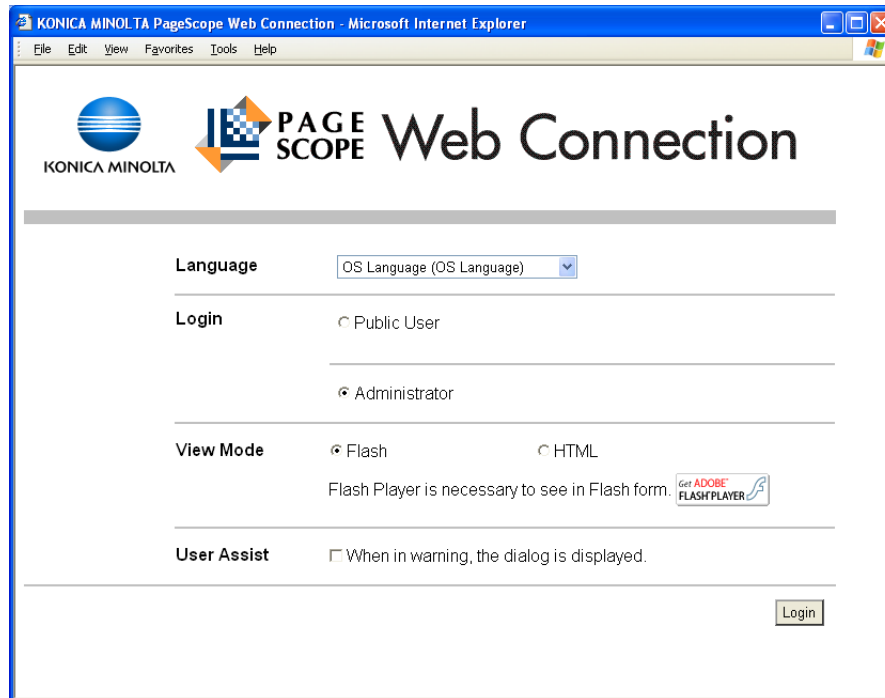

- 2 Enter the password for the machine's administrator.

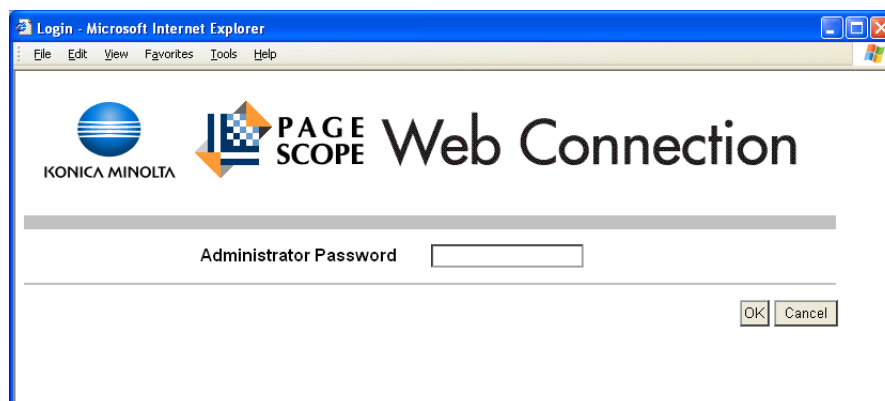

- 3 Click the [OK] button.  
The Administrator mode page appears.



### Reminder

*If "ProhibitFunctions" in [Admin. Settings]-[Security Details] is set to "Mode 2" and an incorrect password is entered the specified number of times, it is no longer possible to log in to Administrator mode. For details on authentication settings, refer to ["Admin. Settings Menu" on page 8-24](#).*

## 2.4 Specifying network print settings


### 2.4.1 Specifying LPR/Port9100 print settings

Specify settings for printing by using LPR or Port9100.

LPR printing is performed via the network using the LPR protocol. LPR printing is used in the UNIX-like OS.

Port9100 printing is performed via the network by directly specifying the RAW port (Port9100) of this machine connected to the TCP/IP network as a printer of the print destination.

Specify the settings according to the following flowchart.

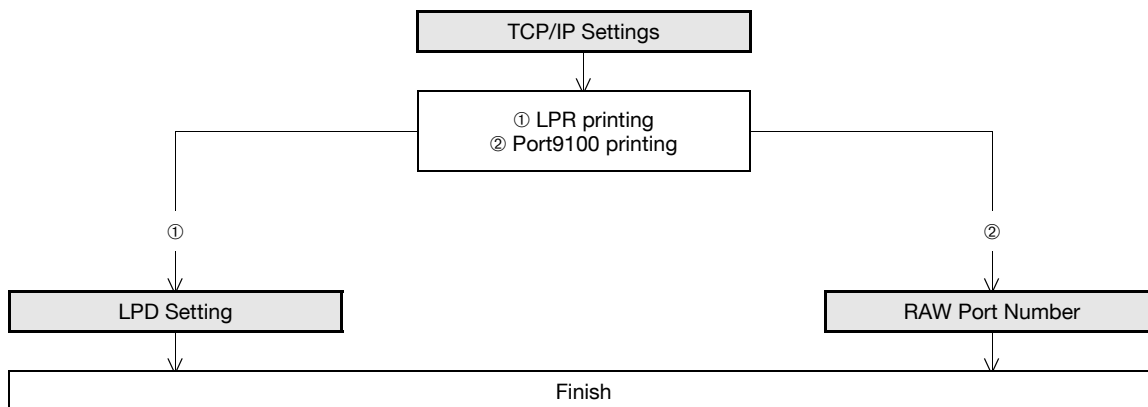

#### Detail

To print data using LPR or Port9100, settings for the printer driver must be specified after these settings. For details, refer to the ["Installing the printer driver for Windows" on page 3-2](#).

#### TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

#### LPD Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP/IP Setting" - "TCP/IP Setting".

Specify the following setting.

Item	Definition	Prior confirmation
LPD	Select "Enable".	

#### RAW Port Number

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP/IP Setting" - "TCP/IP Setting".

Specify the following setting.

Item	Definition	Prior confirmation
RAW Port Number	Select the check box for the port to be used, and then specify the RAW port number.	

2.4.2 Specifying SMB print settings


Specify settings for printing by using SMB.

The printer is sharable on the Windows network by using the SMB protocol. SMB printing is performed by directly specifying this machine on the Windows network from the computer.

To specify a computer on another network using Windows name (NetBIOS name), a WINS server must be used.

This machine supports the direct hosting service. To use SMB printing in the IPv6 environment, the Direct Hosting setting must be enabled.

Specify the settings according to the following flowchart.

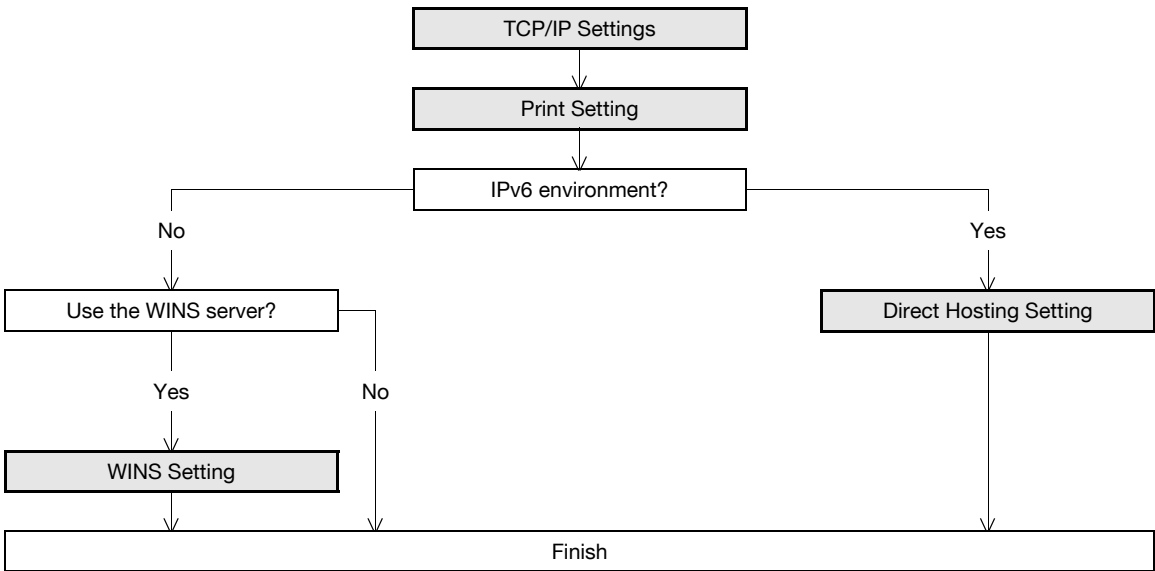

**Note**  
For details on installing the printer driver, refer to ["Installing the printer driver for Windows" on page 3-2](#).

**TCP/IP Settings**


Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

Print Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "SMB Setting" - "Print Setting".

Specify the following settings.

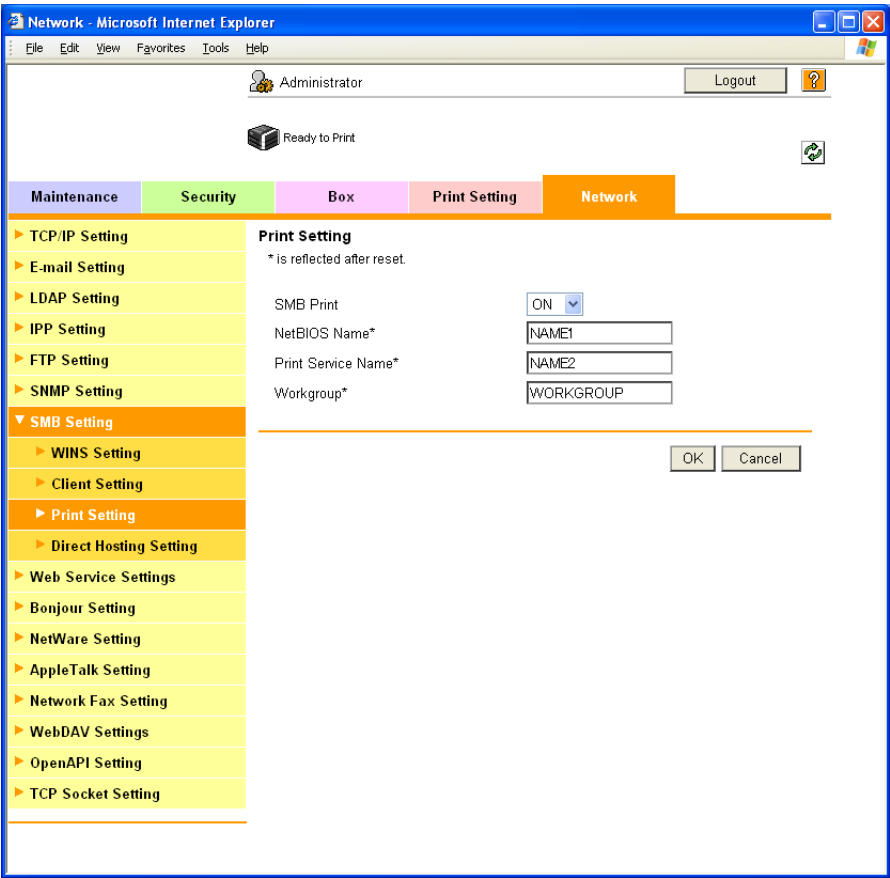


Item	Definition	Prior confirmation
SMB Print	Select "ON".	
NetBIOS Name	Specify the NetBIOS name with uppercase letters (up to 15 characters).	
Print Service Name	Specify the print service name with uppercase letters (up to 12 characters).	
Workgroup	Specify the workgroup name with uppercase letters (up to 15 characters).	Workgroup to which you belong

## Direct Hosting Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "SMB Setting" - "Direct Hosting Setting".

Specify the following setting.

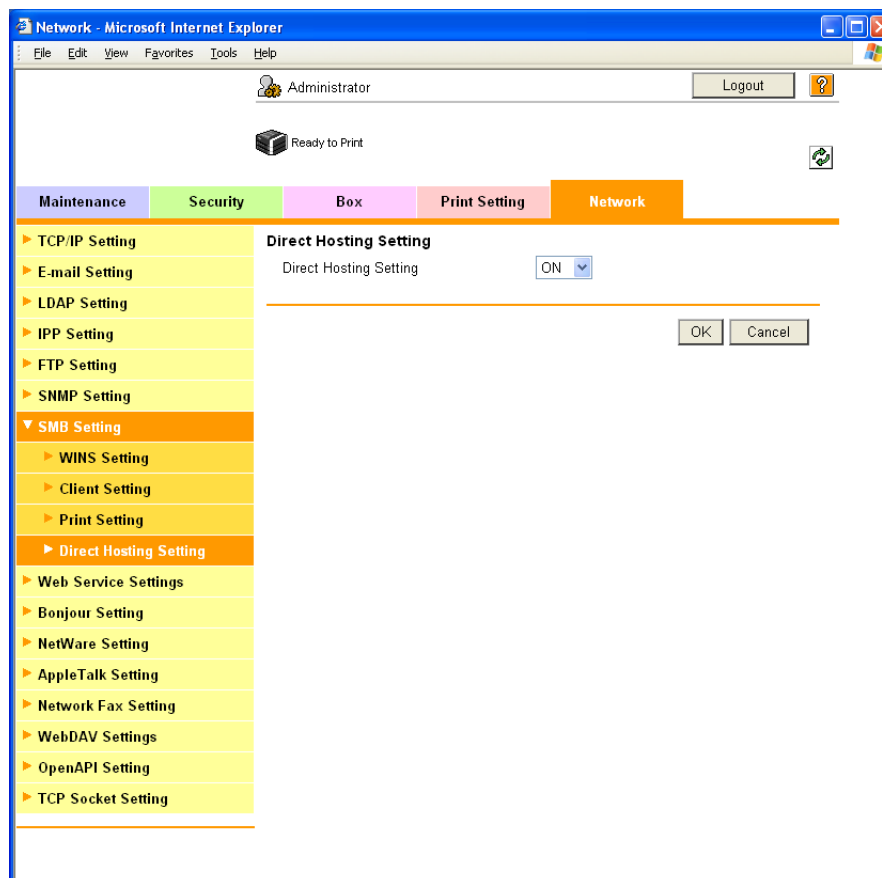

Item	Definition	Prior confirmation
Direct Hosting Setting	To use the direct hosting service, select "ON". To communicate with the destination using an IPv6 address, select "ON".	Whether the IPv6 environment is available

## WINS Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "SMB Setting" - "WINS Setting".

Specify the following settings.

The screenshot shows the 'WINS Setting' page within the 'Network' tab of the 'SMB Setting' section. The left sidebar lists various network settings, with 'WINS Setting' selected under 'SMB Setting'. The main content area displays the following settings:

- WINS**: A dropdown menu set to 'ON'.
- Auto Obtain Setting**: A dropdown menu set to 'Enable'.
- WINS Server Address1**: A text input field containing '0.0.0.0'.
- WINS Server Address2**: A text input field containing '0.0.0.0'.
- Node Type Setting**: A dropdown menu set to 'H Node'.

At the bottom right of the settings area are 'OK' and 'Cancel' buttons.


Item	Definition	Prior confirmation
WINS	To use the WINS server, select "ON".	
Auto Obtain Setting	To automatically obtain the WINS server address, select "Enable". This item is enabled when the DHCP is enabled.	Whether automatic acquisition is available with DHCP
WINS Server Address 1 and 2	Specify the WINS server address. (Format: "****.***.***.***", Range for ***: 0 to 255)	Address of the server
Node Type Setting	Specify the name resolution method. <ul style="list-style-type: none"> <li>B Node: Query by broadcast</li> <li>P Node: Query to WINS server</li> <li>M Node: Query in the order of broadcast, then WINS server</li> <li>H Node: Query in the order of WINS server, then broadcast</li> </ul>	

### 2.4.3 Specifying IPP print settings

Specify settings for printing using IPP.

IPP printing is performed via the network using the IPP protocol. Using the HTTP protocol can transfer print data to the printer on the network, and therefore also enabling output to a remote printer via the Internet.

Specify the settings according to the following flowchart.

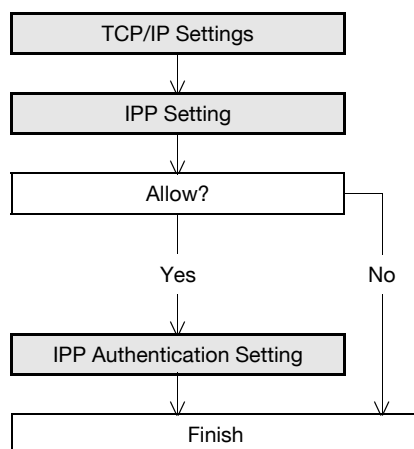

**Note**

For details on installing the printer driver, refer to ["Installing the printer driver for Windows" on page 3-2](#).

#### TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

## IPP Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "IPP Setting".  
Specify the following settings.

The screenshot shows the 'Network' tab selected in the PageScope Web Connection Administrator. The 'IPP Setting' sub-tab is active. The settings are as follows:

- IPP Setting:** ON (dropdown)
- Accept IPP job:** ON (dropdown)
- Printer Name:** (text field)
- Printer Location:** (text field)
- Printer Information:** (text field)
- Printer URI:**
  - http://150.16.154.48/ipp
  - http://thames1a.training.cso.konicaminolta.jp/ipp
  - ipp://150.16.154.48/ipp
  - ipp://thames1a.training.cso.konicaminolta.jp/ipp
  - https://150.16.154.48/ipp
  - https://thames1a.training.cso.konicaminolta.jp/ipp
- Support Operation:**
  - ☒ Print Job
  - ☒ Valid Job
  - ☒ Cancel Job
  - ☒ Open Job Attributes
  - ☒ Open Job
  - ☒ Open Printer Attributes
- IPP Authentication Setting:**
  - ☒ IPP Authentication Setting
  - Authentication Method:** requesting-user-name (dropdown)
  - User Name:** user (text field)
  - Password:** (text field)
  - realm:** IPP (text field)

Buttons: OK, Cancel

Item	Definition	Prior confirmation
IPP Setting	Select "ON".	
Accept IPP job	Select "ON".	
Printer Name	Specify the printer name (up to 127 characters).	
Printer Location	Specify the printer location (up to 127 characters).	
Printer Information	Specify the printer information (up to 127 characters).	
Printer URI	Displays the URI of the printer that can use IPP when printing.	
Support Operation	Specify the print operations supported by IPP.	

### IPP Authentication Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "IPP Setting".

Specify the following settings.


Item	Definition	Prior confirmation
IPP Authentication Setting	To perform IPP printing, select the "IPP Authentication Setting" check box.	
Authentication Method	Specify the authentication method.	
User Name	Specify the user name (up to 20 characters).	
Password	Enter the password (up to 20 characters).	
realm	Specify realm (up to 127 characters). If the authentication method is digest, realm must be specified.	Authentication method

#### 2.4.4 Specifying IPPS print settings

Specify settings for printing using IPPS.

When performing IPP printing with this machine, communication between the computer and this machine is encrypted using SSL. Encrypting communication using SSL improves security when printing using IPP.

Specify the settings according to the following flowchart.

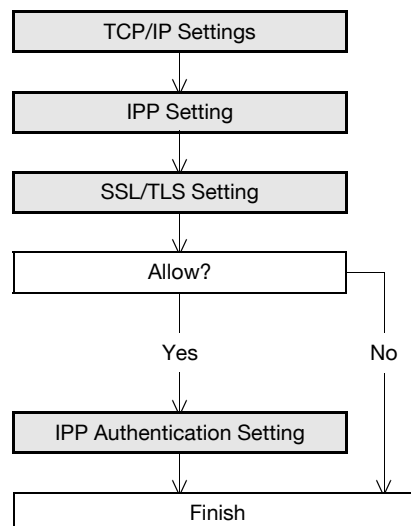

#### Note

For details on installing the printer driver, refer to the ["Installing the printer driver for Windows" on page 3-2](#).

When specifying to use IPP printing in Windows Vista, enter "https://[Host Name].[Domain Name]/ipp". For [Host Name] and [Domain Name], use the names specified in the DNS Host Name and Default DNS Domain Name in the TCP setting. For details on the procedure, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#). Also, it is necessary that the computer is able to resolve the names for this machine using DNS. Register this machine to the DNS server in advance, and specify settings for DNS at the computer side.

When the certificate of this machine is not published by certificate authority, register the certificate of this machine to Windows Vista as a certificate of "Trusted Root Certification Authorities" for "Local Computer" in advance.

Before creating a certificate, correctly specify the DNS Host Name and Default DNS Domain Name registered in the DNS server to this machine. Otherwise, IPPS connection cannot be established.

### TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2.](#)

### IPP Setting

Specify settings for printing by using IPP.

For details, refer to ["IPP Setting" on page 2-13.](#)

### SSL/TLS Setting

Encrypt communication with this machine using SSL.

For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49.](#)

### IPP Authentication Setting

Specify settings when authentication is used when printing using IPP.

For details, refer to ["IPP Authentication Setting" on page 2-14.](#)

## 2.4.5 Specifying Bonjour print settings

Specify settings for printing by connecting this machine to a Macintosh computer using Bonjour. When connecting this machine to a Macintosh computer using Bonjour, the Bonjour settings must be specified.



### Note

For details on installing the printer driver, refer to the ["Installing the printer driver for Macintosh" on page 4-2.](#)

### Bonjour Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "Bonjour Setting".

Specify the following settings.

Network - Microsoft Internet Explorer

Administrator Logout ?

Ready to Print

Maintenance Security Box Print Setting **Network**

▶ TCP/IP Setting  
 ▶ E-mail Setting  
 ▶ LDAP Setting  
 ▶ IPP Setting  
 ▶ FTP Setting  
 ▶ SNMP Setting  
 ▶ SMB Setting  
 ▶ Web Service Settings  
 ▶ **Bonjour Setting**  
 ▶ NetWare Setting  
 ▶ AppleTalk Setting  
 ▶ Network Fax Setting  
 ▶ WebDAV Settings  
 ▶ OpenAPI Setting  
 ▶ TCP Socket Setting

**Bonjour Setting**

Bonjour ON

Bonjour Name Printer1

OK Cancel

Item	Definition	Prior confirmation
Bonjour	Select "ON".	
Bonjour Name	Specify the Bonjour name that appears as the name of the connected device (up to 63 characters).	

### 2.4.6 Specifying AppleTalk print settings

Specify settings for printing by connecting this machine to a Macintosh computer using AppleTalk. When connecting this machine to a Macintosh computer using AppleTalk, the AppleTalk settings must be specified.



#### Note

For details on installing the printer driver, refer to ["Installing the printer driver for Macintosh" on page 4-2](#).

#### AppleTalk Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "AppleTalk Setting".

Specify the following settings.


Item	Definition	Prior confirmation
AppleTalk	Select "ON".	
Printer Name*	Specify the printer name that appears on the selector (up to 31 characters).	
Zone Name*	Specify the zone name to which this machine belongs (up to 31 characters).	
Current Zone	Displays the current zone name.	

### 2.4.7 Specifying Web Service Function settings

Specify settings for printing by using Web Service Function.

Printing is possible using the Web Service function newly installed in Windows Vista. The Web Service Function detects this machine connected to the network, and then installs it as a WS-Printer. Specifying this machine installed as a WS-Printer when printing from Windows Vista allows printing using HTTP for communication.

Specify the settings according to the following flowchart.

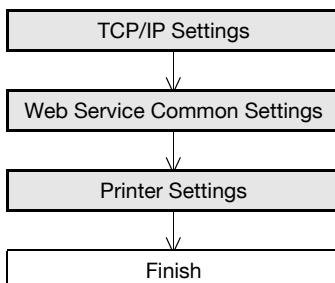

**Note**

*For details on installing the printer driver, refer to ["Installing the printer driver for Windows" on page 3-2](#).*

#### TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

## Web Service Common Settings

In Administrator mode of PageScope Web Connection, select the Network tab - "Web Service Settings" - "Web Service Common Settings".

Specify the following setting.

The screenshot shows the 'Web Service Common Settings' page in the PageScope Web Connection Administrator. The 'Network' tab is selected, and the 'Web Service Settings' section is expanded. The 'Web Service Common Settings' sub-section is active, showing a 'Friendly Name\*' field with the value 'Printer1' and an 'SSL Setting' dropdown menu set to 'OFF'. The 'Friendly Name' field is highlighted with a red rectangle.

Item	Definition	Prior confirmation
Friendly Name	Specify setting for Friendly Name (up to 62 characters).	

## Printer Settings


In Administrator mode of PageScope Web Connection, select the Network tab - "Web Service Settings" - "Printer Settings".

Specify the following settings.

The screenshot shows the 'Printer Settings' page in the PageScope Web Connection interface. The interface is displayed in a Microsoft Internet Explorer browser window. At the top, there is a navigation bar with tabs: Maintenance, Security, Box, Print Setting, and Network. The 'Network' tab is selected. On the left side, there is a sidebar with a list of settings under 'Web Service Settings', including TCP/IP Setting, E-mail Setting, LDAP Setting, IPP Setting, FTP Setting, SNMP Setting, SMB Setting, Web Service Common Settings, Printer Settings (selected), Scanner Settings, Bonjour Setting, NetWare Setting, AppleTalk Setting, Network Fax Setting, WebDAV Settings, OpenAPI Setting, and TCP Socket Setting. The main content area is titled 'Printer Settings' and contains the following fields: Print Function (set to ON), Printer Name\* (set to Printer1), Printer Location\* (set to Room A), and Printer Information\* (empty). There are OK and Cancel buttons at the bottom right of the form.

Item	Definition	Prior confirmation
Print Function	Select "ON".	
Printer Name*	Specify the printer name (up to 63 characters).	
Printer Location*	Specify the printer location (up to 63 characters).	
Printer Information*	Specify the printer information (up to 63 characters).	



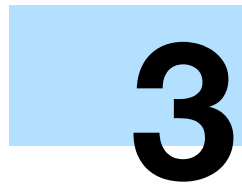

## **Installing the printer driver for Windows**

## 3 Installing the printer driver for Windows

### 3.1 Connection methods selectable in each operating system

The connection method for this machine differs depending on the operating system of the computer. The printer driver installation method also differs depending on the connection method.

This machine can be connected via a network or a USB interface. In network connection, the printer driver installation method differs depending on the protocol to be used.

Network connection (Ethernet):

This machine is connected as a network printer.

This printing system supports 10Base-T, 100Base-TX, and 1000Base-T standards. In addition, the Ethernet interface supports the TCP/IP (LPD/LPR, IPP, SMB), IPX/SPX (NetWare), and AppleTalk (EtherTalk) protocols.

The applicable protocols differ depending on the operating system of the computer.

USB interface:

This machine is connected as a local printer. The USB interface can be connected to a computer Windows-compatible computer.

#### 3.1.1 Windows 2000/XP/Server 2003

Setup method	Connection method		Refer to
Connection method that can be set up with an installer	Port9100	A network connection using the PORT9100 print service. It uses a TCP/IP protocol and the RAW printing port.	<a href="#">"Automatic installation using the installer" on page 3-4</a> * Select the connection method in the course of installation. Select "Normal Printing" for Port 9100 or USB connection, "Internet Printing" for IPP connection, or "Secure Printing" for IPPS connection.
	IPP/IPPS	A network connection using the IPP (Internet Printing Protocol) print service. Printing via the Internet is possible with the HTTP (HyperText Transfer Protocol) of the TCP/IP protocol. IPPS is an IPP for SSL encrypted communication.	
	USB	A connection using a USB port.	
Connection method that can be set up with the Add Printer wizard	LPR	A network connection using the LPR (Line Printer Remote) print service. It uses a TCP/IP protocol and the LPR printing port.	<a href="#">"Installation using the wizard (Windows XP/Server 2003)" on page 3-8</a>
	Port9100	A network connection using the PORT9100 print service. It uses a TCP/IP protocol and the RAW printing port.	
	SMB	A network connection using SMB (Server Message Block) for sharing files or printers in Windows. It supports the TCP/IP protocol.	
	IPP/IPPS	A network connection using the IPP (Internet Printing Protocol) print service. Printing via the Internet is possible with the HTTP (HyperText Transfer Protocol) of the TCP/IP protocol. IPPS is an IPP for SSL encrypted communication.	
	USB	A connection using a USB port.	
Connection method that can be set up with plug-and-play	USB	A connection using a USB port.	For Windows XP/Server 2003: <a href="#">"Local connection" on page 3-15</a> For Windows 2000: <a href="#">"Local connection" on page 3-33</a>

**Note**

Before using this machine in a network environment, the network settings must be specified for this machine. For details, refer to the ["Network settings" on page 2-2](#).

To install the printer driver under Windows 2000, XP, or Server 2003, log on using a user name that is authorized by the administrator.

This manual describes the setup method of USB connection only using the Plug and Play.

### 3.1.2 Windows Vista

Setup method	Connection method		Refer to
Connection method that can be set up with an installer	Port9100	A network connection using the PORT9100 print service. It uses a TCP/IP protocol and the RAW printing port.	<a href="#">"Automatic installation using the installer" on page 3-4</a> * Select the connection method in the course of installation. Select "Normal Printing" for Port 9100 or USB connection, or "Internet Printing" for IPP connection.
	IPP	A network connection using the IPP (Internet Printing Protocol) print service. Printing via the Internet is possible with the HTTP (HyperText Transfer Protocol) of the TCP/IP protocol.	
	USB	A connection using a USB port.	
Connection method that can be set up with the Add Printer Wizard	LPR	A network connection using the LPR (Line Printer Remote) print service. It uses a TCP/IP protocol and the LPR printing port.	<a href="#">"Installation using the wizard (Windows Vista)" on page 3-17</a>
	Port9100	A network connection using the PORT9100 print service. It uses a TCP/IP protocol and the RAW printing port.	
	SMB	A network connection using SMB (Server Message Block) for sharing files or printers in Windows. It supports the TCP/IP protocol.	
	IPP/IPPS	A network connection using the IPP (Internet Printing Protocol) print service. Printing via the Internet is possible with the HTTP (HyperText Transfer Protocol) of the TCP/IP protocol. IPPS is an IPP for SSL encrypted communication.	
	Web Service print	A connection supports Web Service Function of Windows Vista, detects the printer on the network automatically and connects.	
	USB	A connection using a USB port.	
Connection method that can be set up with plug-and-play	USB	A connection using a USB port.	For Windows Vista: <a href="#">"Local connection" on page 3-27</a>

**Note**

Before using this machine in a network environment, the network settings must be specified for this machine. For details, refer to ["Network settings" on page 2-2](#).

To install the printer driver under Windows Vista, log on as the Administrator.

Either of the installer or Add Printer Wizard can be used to install the PCL driver and PS driver.

When using Windows Vista, the IPPS connection can not be setup using the installer. For using IPPS connection, setup the connection using the Add Printer Wizard. For details, refer to ["Network connection \(IPP or IPPS\)" on page 3-21](#).

### 3.1.3 Windows NT 4.0

Setup method	Connection method		Refer to
Connection method that can be set up with the Add Printer wizard	LPR	A network connection using the LPR print service.	<a href="#">"Installation using the wizard (Windows NT 4.0)" on page 3-34</a>



#### Note

*Before using this machine in a network environment, the network settings must be specified for this machine. For details, refer to the ["Network settings" on page 2-2](#).*

*To install the printer driver under Windows NT 4.0, log on using a user name that is authorized by the administrator.*

## 3.2 Automatic installation using the installer

This installer automatically detects whether this machine is connected via USB or on the same TCP/IP network as the computer, then installs the required printer driver. You can also manually specify the connection destination during installation.



#### Reminder

*When installing the driver on NT 4.0/2000/XP/Vista/Server 2003, administrator permissions are required.*

*When this machine is connected via USB, if a wizard for adding new hardware starts up, click the [Cancel] button.*

### 3.2.1 Installer operating environment

Item	Operating environment
Operating system	Windows NT Workstation/Server Version4.0 (Service Pack 6 or later), Windows 2000 Professional/Server (Service Pack 3 or later), Windows XP Home Edition/Windows XP Professional, Windows XP Professional x64 Edition, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise x64 Edition, Windows Server 2003 Standard Edition, Windows Server 2003 x64 Edition
Processor	According to the environment recommended for the operating system
Memory	Capacity recommended for the operating system With sufficient memory resources in the operating system and application being used

\* With Windows NT 4.0, in order to install this machine connected directly to a network using the TCP/IP protocol, Microsoft TCP/IP Print Services must first be installed on the computer.

### 3.2.2 Settings of this machine

Specify the IP address of this machine.



#### Note

*To allow this machine to be automatically detected when connected to a network, be sure to set the IP address for this machine before starting installation. For details, refer to ["Network settings" on page 2-2](#).*

Depending on the connection method and protocol, change the network settings of this machine.

- Port9100: Enable the RAW port number (9100 at default), in the TCP/IP screen.
- IPP/IPPS: Enable IPP print in the IPP Setting screen.

**Note**

For details on the TCP/IP settings and IPP settings of this machine, refer to ["Network settings" on page 2-2](#).


To use IPPS printing, the certificate must be registered to this machine. For details, refer to ["Specifying IPP print settings" on page 2-12](#).

### 3.2.3 Installation of the printer driver

**Detail**


If the User Account Control window appears when installing on Windows Vista, click the [Allow] button or the [Continue] button.

- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
  - Check that the installer starts up, and then continue with step 2.
  - If the installer does not start up, open the printer driver folder on the CD-ROM, double-click "Setup.exe", and then continue with step 3.
- 2 Click the "Printer Install" button.  
The installer of the printer driver starts.
- 3 If you agree with all terms and conditions of the license agreement, click the [AGREE] button.
  - If not, the software cannot be installed.
  - You can change the display language of the installer using the box in the lower-left corner.
  - You can change the display language of the installation license agreement in the lower-right corner.

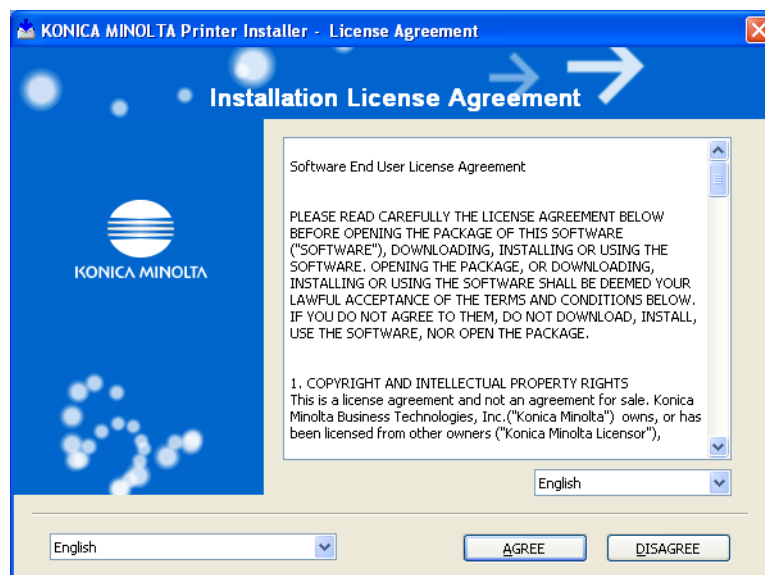


- 4 If the setup selection window appears, select "Install printers/MFPs", and then click the [Next] button.  
The connected printers and MFP are detected.
  - If the printer is not detected, turn off this machine, then on again.
  - When turning off the power, then on again, wait at least 10 seconds before turning it on again. Otherwise, this machine may not function properly.
  - When using Windows Vista, the IPPS connection can not be setup using the installer. For using IPPS connection, setup the connection using the Add Printer Wizard. For details, refer to ["Network connection \(IPP or IPPS\)" on page 3-21](#).
- 5 Select this machine, and then click the [Next] button.
  - If the connection of this machine cannot be recognized, this machine is not listed. If this is the case, select "Specify the Printer/MFP Except for the Above. (IP Address, Host Name...)", and then specify this machine manually.

- In addition to "Normal Printing" (Port 9100 and USB), "Internet Printing" (IPP) and "Secure Printing" (IPPS) can be selected as the printing method. Secure Printing (IPPS) can be used when SSL is enabled from PageScope Web Connection and IPP is enabled.

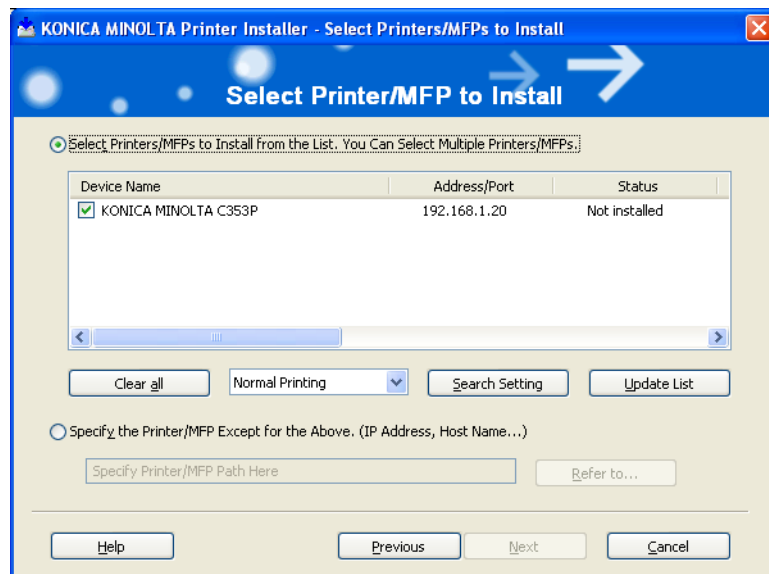


## 6 Check the installation settings.

- To change the settings, click the [Installation Settings] button, and then continue with step 7.
- If not changing the settings, continue with step 8.

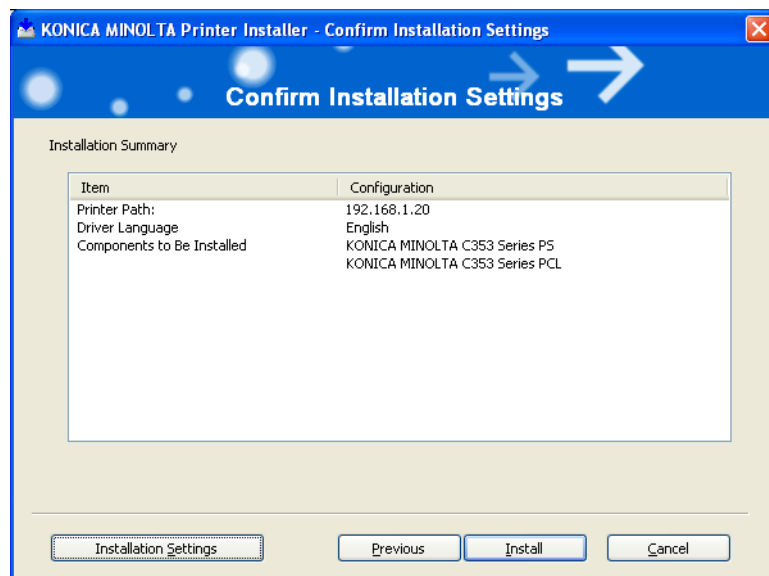


## 7 Select the components to be installed, and then click the [OK] button.

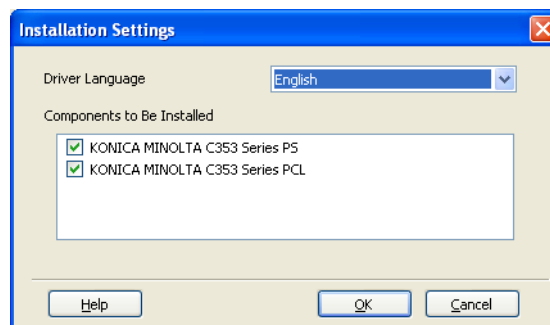

## 8 In the Confirm Installation Settings dialog box, click the [Install] button.

- If the Windows Logo Testing or Digital Signature dialog box appears, click the [Continue] or [Yes] button.

- 9 In the Finish Installing Drivers dialog box, click the [Finish] button.  
This completes the printer driver installation.

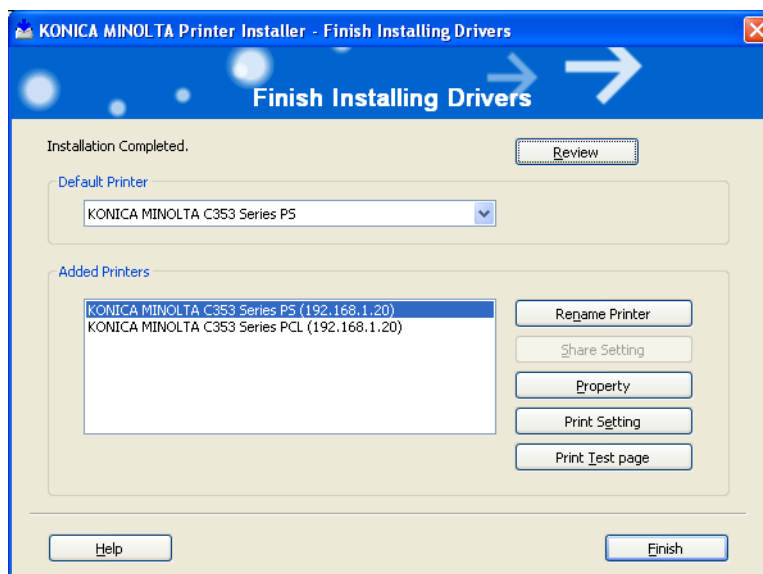

In the Finish Installing Drivers dialog box, installation items can be confirmed and settings can be changed.

[Review]: Confirm the installation settings.

[Rename Printer]: Change the printer name.

[Share Setting]: Specify shared settings of the printer.

[Property]: Specify the property settings of the printer. For details, refer to ["Initializing the PCL/PS printer driver" on page 5-3](#).

[Print Setting]: Specify the functions of the printer driver. For details, refer to ["Parameter details for the PCL/PS drivers" on page 5-7](#).

[Print Test page]: Perform test print.

### 3.3 Installation using the wizard (Windows XP/Server 2003)

#### 3.3.1 Network connection (LPR/Port9100)

When using the LPR/Port9100 printing, specify the port during the printer driver installation process.

##### TCP/IP setting for this machine

Specify the IP address on TCP/IP Setting of this machine.



##### Detail

For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).

##### RAW port number setting for this machine

To use Port9100 printing, enable the RAW port number (9100 at default), in the TCP/IP Setting screen of this machine.



##### Detail

For details on specifying the RAW port number of this machine, refer to the ["Network settings" on page 2-2](#).

##### LPD setting for this machine

To use LPR printing, enable LPD print on "LPD Setting" of this machine.



##### Detail

For details on the LPD settings of this machine, refer to the ["Network settings" on page 2-2](#).



##### Printer driver installation using the Add Printer Wizard



##### Reminder

When installing on Windows XP or Server 2003, administrator permissions are required.


- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Click the [Start] button, and then click "Printers and Faxes".
  - If "Printers and Faxes" does not appear in the Start menu, open Control Panel from the Start menu, select "Printers and Other Hardware", and then click "Printers and Faxes".
- 3 For Windows XP, click "Add a printer" on the "Printer Tasks" menu.  
For Windows Server 2003, double-click the "Add Printer" icon.

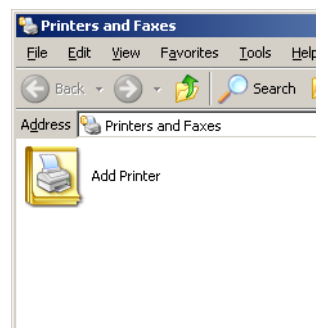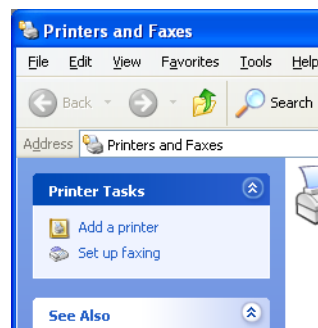

The Add Printer Wizard starts.


- 4 Click the [Next] button.
- 5 Select "Local printer attached to this computer", and then click the [Next] button.

- Clear the "Automatically detect and install my Plug and Play printer" check box.

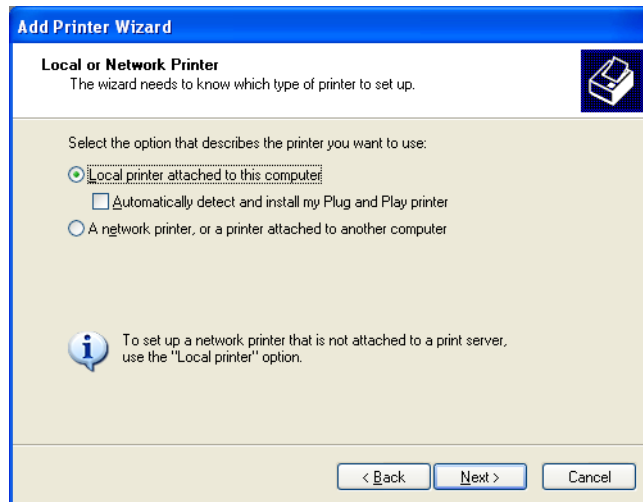

The Select a Printer Port dialog box appears.

- 6 Click "Create a new port", and select "Standard TCP/IP Port" for "Type of port:".

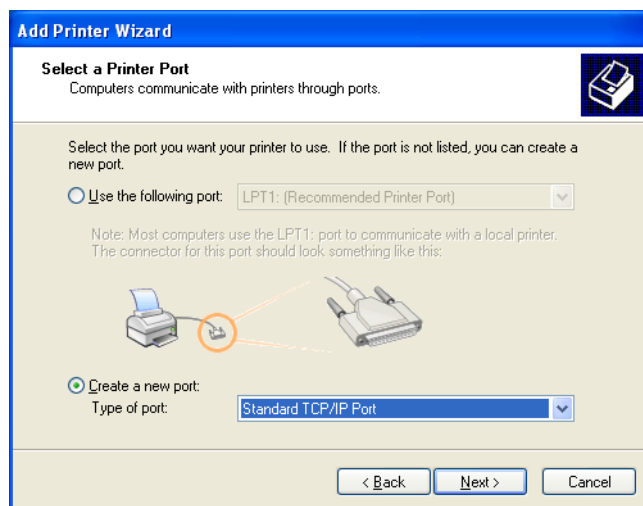


- 7 Click the [Next] button.

The Add Standard TCP/IP Printer Port Wizard starts.

- 8 Click the [Next] button.

- 9 In the "Printer Name or IP address" box, enter the IP address for this machine, and then click the [Next] button.
- If the Additional Port Information Required dialog box appears, go to step 10.

- If the Finish dialog box appears, go to step 13.

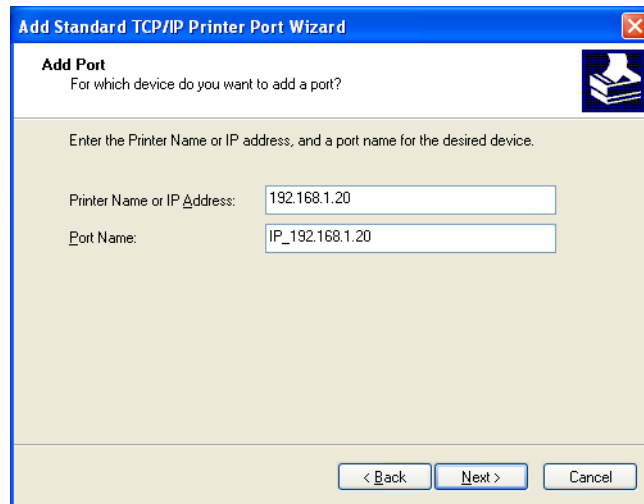


- 10** Select "Custom", and then click the [Settings] button.
- 11** Change the settings according to the port, and then click the [OK] button.
  - For an LPR connection, select "LPR", and then enter "Print" in the "Queue name" box.
  - For a Port9100 connection, select "RAW", and then enter the RAW port number (9100 at default) in the "Port Number" box.
  - The information entered here is case-sensitive.
- 12** Click the [Next] button.
- 13** Click the [Finish] button.

The Add Printer Wizard appears.
- 14** Click the [Have Disk] button.
- 15** Click the [Browse] button.
- 16** Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language.

Printer drivers that can be selected:  
Windows XP/Server 2003: PCL driver, PS driver
- 17** Click the [OK] button.

The "Printers" list appears.

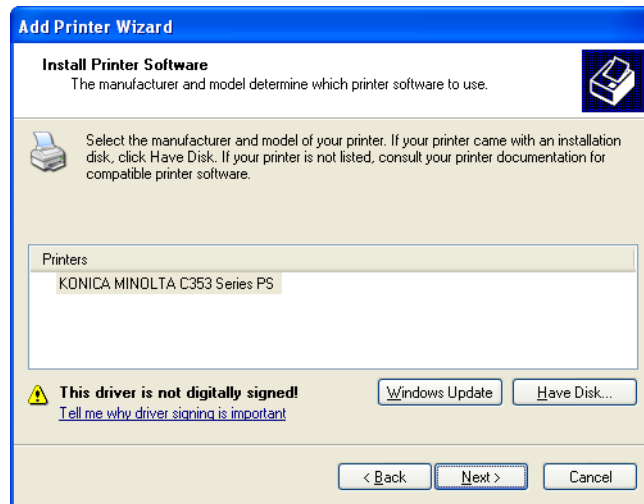**18** Click the [Next] button.**19** Follow the on-screen instructions.

- If the Windows Logo Testing or Digital Signature dialog box appears, click the [Continue] or [Yes] button.
- When using a network connection, perform a test print after the network settings have been specified.

**20** Click the [Finish] button.**21** When installation is complete, make sure that the icon of the installed printer appears in the Printers and Faxes window.**22** Remove the CD-ROM from the CD-ROM drive.

This completes the printer driver installation.

### 3.3.2 Network connection (SMB)

When using the SMB printing, specify the port by specifying the printer during the printer driver installation process. Printers can be specified either by searching printers on the network, or by entering the printer name.

#### TCP/IP setting for this machine

Specify the IP address in the TCP/IP Setting screen of this machine.



##### Detail

*For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).*



##### Note

*To use SMB printing in the IPv6 environment, the "Direct Hosting Setting" must be enabled. For details, refer to ["Network settings" on page 2-2](#).*

#### SMB setting for this machine

In "Print Setting" in the SMB Setting screen of this machine, specify the NetBIOS name, print service name, and workgroup.




##### Detail

*For details on the SMB settings of this machine, refer to ["Network settings" on page 2-2](#).*

**Printer driver installation by specifying printers using the Add Printer Wizard****Reminder**


*When installing on Windows XP or Server 2003, administrator permissions are required.*

- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Click the [Start] button, and then click "Printers and Faxes".
  - If "Printers and Faxes" does not appear in the Start menu, open Control Panel from the Start menu, select "Printers and Other Hardware", and then click "Printers and Faxes".
- 3 For Windows XP, click "Add a printer" on the "Printer Tasks" menu.  
For Windows Server 2003, double-click the "Add Printer" icon.

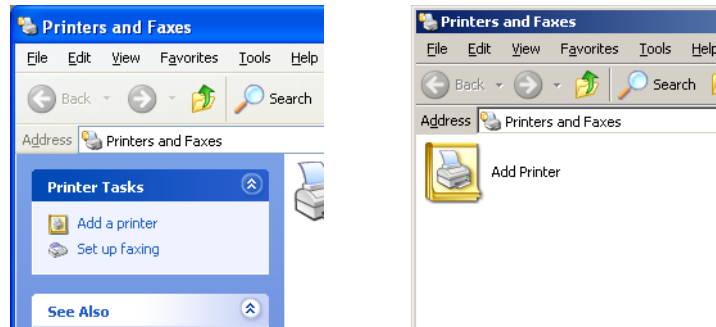


The Add Printer Wizard starts.

- 4 Click the [Next] button.
- 5 Select "Local printer attached to this computer", and then click the [Next] button.
  - Clear the "Automatically detect and install my Plug and Play printer" check box.

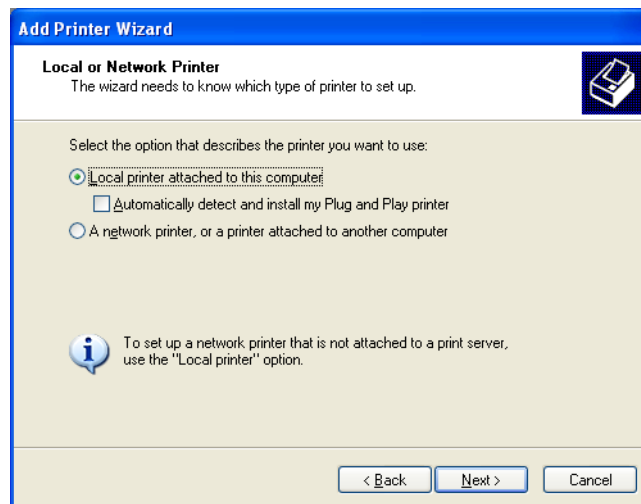


The Select a Printer Port dialog box appears.

- 6 Click "Create a new port", and select "Local Port" for "Type of port:"

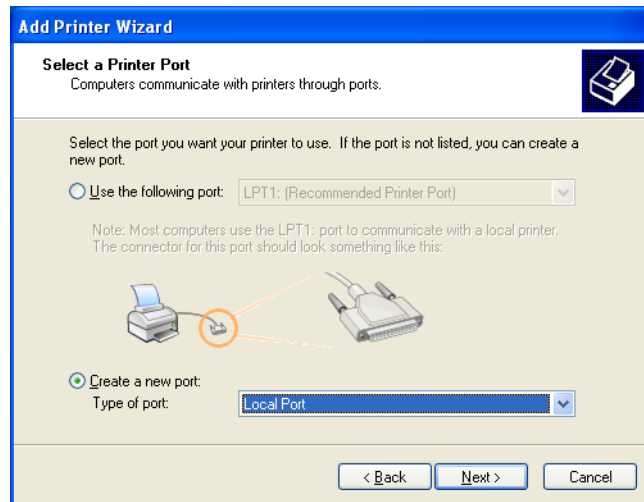

- 7 In the "Enter a port name" box, enter "\\NetBIOS name\print service name".
- Enter the same NetBIOS name and print service name those appear in "Print Setting" in the SMB Setting screen of this machine.
- 8 Click the [OK] button.  
The Add Printer Wizard appears.
- 9 Click the [Have Disk] button.
- 10 Click the [Browse] button.
- 11 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
- Select the specified folder according to the printer driver to be used, the operating system, and the language.  
Printer drivers that can be selected:  
Windows XP/Server 2003: PCL driver, PS driver
- 12 Click the [OK] button.  
The "Printers" list appears.
- 13 Click the [Next] button.

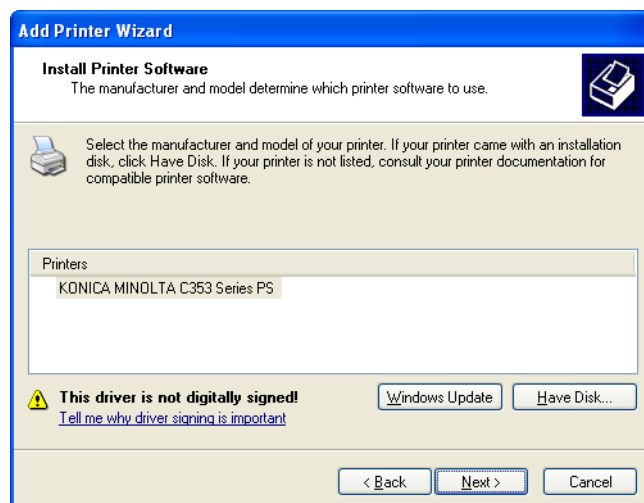

- 14 Follow the on-screen instructions.

- If the Windows Logo Testing or Digital Signature dialog box appears, click the [Continue] or [Yes] button.
- When using a network connection, perform a test print after the network settings have been specified.

**15** Click the [Finish] button.

**16** When installation is complete, make sure that the icon of the installed printer appears in the Printers and Faxes window.

**17** Remove the CD-ROM from the CD-ROM drive.  
This completes the printer driver installation.

### 3.3.3 Network connection (IPP or IPPS)

For IPP printing, specify the port during the printer driver installation process.

#### Specifying the TCP/IP setting for this machine

Specify the IP address of this machine.



##### Detail

*For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).*

#### Specifying the IPP settings for this machine

Enable IPP printing in "IPP Setting" of this machine.



##### Detail

*For details on the IPP settings of this machine, refer to the ["Network settings" on page 2-2](#).*

*To use IPPS printing, the certificate must be registered to this machine. For details, refer to ["Specifying IPP print settings" on page 2-12](#).*

#### Printer driver installation using the Add Printer wizard



##### Reminder

*When installing on Windows XP or Server 2003, administrator permissions are required.*

- 1** Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2** Click the [Start] button, and then click "Printers and Faxes".
  - If "Printers and Faxes" does not appear in the "Start" menu, open the Control Panel from the "Start" menu, select "Printers and Other Hardware", and then click "Printers and Faxes".
- 3** For Windows XP, click "Add a printer" on the "Printer Tasks" menu. For Windows Server 2003, double-click the "Add Printer" icon.  
"Add Printer wizard" starts.
- 4** Click the [Next] button.
- 5** In the Local or Network Printer dialog box, select "Network printer", and then click the [Next] button.
- 6** In the Specify a Printer dialog box, select "Connect to a printer on the Internet or on a home or office network".
- 7** In the "URL" field, enter the URL for this machine in the following format, and then click the [Next] button.
  - `http:// (IP_address_of_machine) /ipp` Example: If the IP address of this machine is 192.168.1.20, enter `http://192.168.1.20/ipp`.
  - When setting this machine for IPPS printing, enter `https:// (IP_address_of_machine) /ipp`.

- 8 When the confirmation dialog box appears, click the [OK] button.
- 9 Click the [Have Disk] button.
- 10 Click the [Browse] button.
- 11 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language. Printer drivers that can be selected: Windows XP/Server 2003: PCL driver, PS driver
- 12 Click the [OK] button.  
The "Printer" list appears.
- 13 Click the [Next] button.
- 14 Follow the on-screen instructions.
  - If the Windows Logo Testing or Digital Signature dialog box appears, click the [Continue] or [Yes] button.
- 15 Click the [Finish] button.
- 16 When the installation is completed, make sure that the icon of the installed printer appears in the Printers and Faxes window.
- 17 Remove the CD-ROM from the CD-ROM drive.  
This completes the printer driver installation.

Once the settings for the printer have been specified, you can use the printer in the same way as a default local printer.

### 3.3.4 Local connection

When this machine is connected via a USB port, the printer driver can be installed with plug-and-play.



#### Note

*When a USB connection is used, the printer driver is installed easily with the Plug and Play feature. However, it can be installed using the Add Printer Wizard. When using the Add Printer Wizard, select the USB port to be connected in the Select a Printer Port dialog box.*

- 1 Connect this machine to a computer using a USB cable, and then start up the computer.
  - Do not disconnect or connect the cable while the computer is starting up.
- 2 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 3 Turn on the power switch of this machine.  
The Found New Hardware Wizard dialog box appears.
  - If the Found New Hardware Wizard does not start up, turn off this machine, then on again.
  - When turning off the power, then on again, wait at least 10 seconds before turning it on again. Otherwise, this machine may not function properly.
- 4 Select "Install from a list or specific location (Advanced)", and then click the [Next] button.
  - If the Windows connect to Windows Update dialog box appears, select "NO".
- 5 From "Search for the best driver in these locations," select "Include this location in the search", and then click the [Browse] button.
- 6 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language. Windows XP/Server 2003: PCL driver, PS driver

- 7 Click the [Next] button, and then follow the on-screen instructions.
  - If the Windows Logo Testing or Digital Signature dialog box appears, click the [Continue] or [Yes] button.
- 8 Click the [Finish] button.
- 9 When the installation is completed, make sure that the icon of the installed printer appears in the Printers and Faxes window.
- 10 Remove the CD-ROM from the CD-ROM drive.

This completes the printer driver installation.

## 3.4 Installation using the wizard (Windows Vista)

### 3.4.1 Network connection (LPR, Port9100, or SMB)

In Windows Vista, the printer driver can be installed either by searching printers on the network, or by creating a new printer port.

#### Specifying the TCP/IP setting for this machine

Specify the IP address of this machine.



##### Detail

For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).

#### RAW port number setting for this machine

To use Port9100 printing, enable the RAW port number (9100 at default), in the TCP/IP Setting screen of this machine.



##### Detail

For details on specifying the RAW port number of this machine, refer to ["Network settings" on page 2-2](#).

#### LPD setting for this machine

To use LPR printing, enable LPD print in the LPD Setting screen of this machine.



##### Detail

For details on the LPD settings of this machine, refer to the ["Network settings" on page 2-2](#).

#### SMB setting for this machine

In "Print Setting" in the SMB Setting screen of this machine, specify the NetBIOS name, print service name, and workgroup.



##### Detail

For details on the SMB settings of this machine, refer to the ["Network settings" on page 2-2](#).



...

##### Note

To use SMB printing in the IPv6 environment, the "Direct Hosting Setting" must be enabled. For details, refer to ["Network settings" on page 2-2](#).

#### Printer driver installation by searching printers using the Add Printer Wizard



...


##### Note

When installing on Windows Vista, administrator permissions are required.

Printers will be found during installation. Connect this machine to the network, and then turn on the power.


- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Click the [Start] button, and then click "Control Panel".
- 3 From "Hardware and Sound", click "Printer".
  - If Control Panel is displayed with Classic View, double-click "Printers". The Printers window appears.

- 4 Click "Add a printer" from the toolbar.

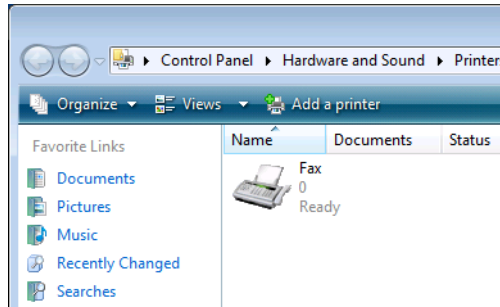

The Add Printer window appears.

- 5 Click "Add a network, wireless or Bluetooth printer".

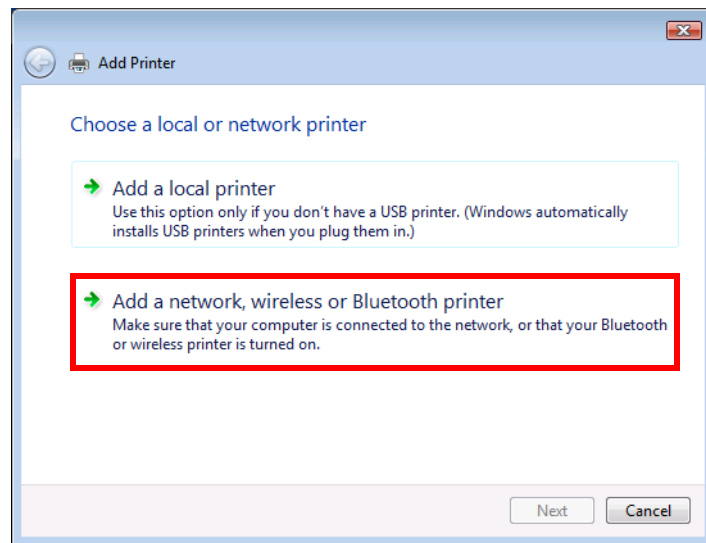


- If the printer is not detected, turn off this machine, then on again.
- When turning off the power, then on again, wait at least 10 seconds before turning it on again. Otherwise, this machine may not function properly.

The connected printers are detected.


- 6 Select this machine from the list, and then click the [Next] button.

- When using the LPR/Port9100 protocol, select the printer having its IP address.
- When using an SMB connection, select the printer having its "\\NetBIOS name\print service name".

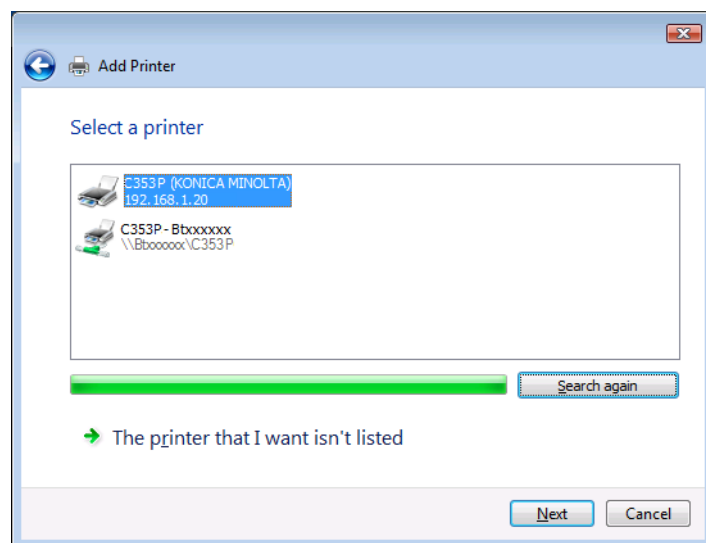

- It may take some time to finish searching the entire list of printers.

- 7 Click the [Have Disk] button.
- 8 Click the [Browse] button.
- 9 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language. Printer drivers that can be selected: Windows Vista: PCL driver, PS driver
- 10 Click the [OK] button.  
The "Printer" list appears.
- 11 Click the [Next] button.

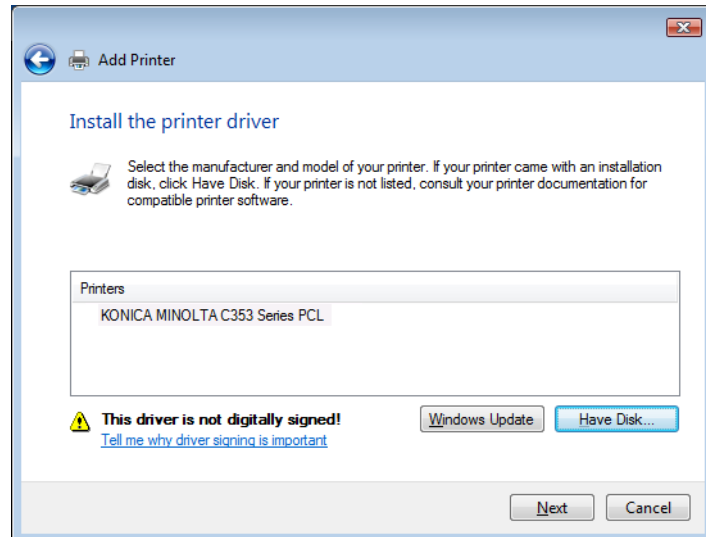

- 12 Follow the on-screen instructions.
  - If the "User Account Control" window appears, click the [Continue] button.
  - If the Verify the publisher dialog box of Windows Security appears, click "Install this driver software anyway".
- 13 Click the [Finish] button.
- 14 When the installation is completed, make sure that the icon of the installed printer appears in the Printers window.
- 15 Remove the CD-ROM from the CD-ROM drive.  
This completes the printer driver installation.

#### Printer driver installation by creating a port using the Add Printer Wizard




##### Reminder

*When installing on Windows Vista, administrator permissions are required.*

*Printers will be found during installation. Connect this machine to the network, and then turn on the power.*


- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Click the [Start] button, and then click "Control Panel".
- 3 From "Hardware and Sound", click "Printer".
  - If Control Panel is displayed with Classic View, double-click "Printers".
 The Printers window appears.

- 4 Click "Add a printer" from the toolbar.

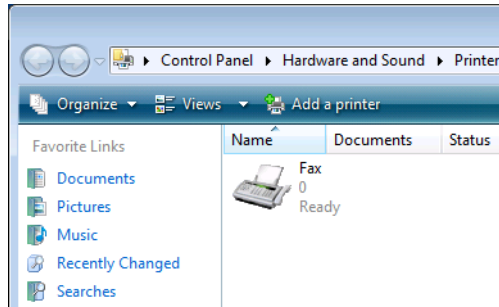

The Add Printer window appears.


- 5 Click "Add a local printer".

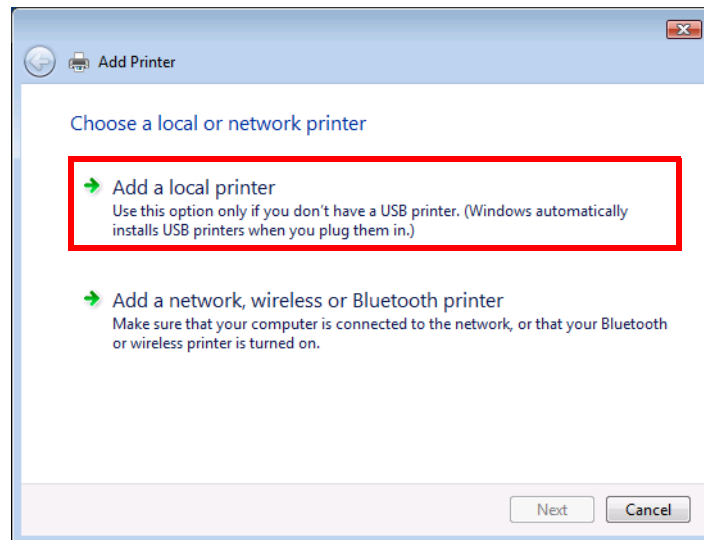

The Select a Printer Port dialog box appears.

- 6 Click "Create a new port", and select the port type.
- When using an LPR/Port9100 connection, select "Standard TCP/IP Port".
  - When using an SMB connection, select "Local Port".
- 7 Click the [Next] button.
- 8 Specify the IP address and port.
- When using an LPR/Port9100 connection, select "TCP/IP Device", and then enter the IP address. When both LPR and Port9100 are enabled for this machine, the printer driver and the machine is connected with LPR.
  - When using an SMB connection, enter "\\NetBIOS name\print service name" in the "Enter a port name" box. Enter the same NetBIOS name and print service name those appear in "Print Setting" in the SMB Setting screen of this machine.
- 9 Click the [Next] button.
- If the Additional Port Information Required dialog box appears, go to step 10.
  - If the Install the printer driver dialog box appears, go to step 13.
- 10 Select "Custom", and then click the [Settings] button.
- 11 Change the settings according to the port, and then click the [OK] button.
- For an LPR connection, select "LPR", and then enter "Print" in the "Queue name" box.
  - For a Port9100 connection, select "RAW", and then enter the RAW port number (9100 at default) in the "Port Number" box.
  - The information entered here is case-sensitive.

- 12 Click the [Next] button.  
The Install the printer driver dialog box appears.
- 13 Click the [Have Disk] button.
- 14 Click the [Browse] button.
- 15 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language.  
Printer drivers that can be selected:  
Windows Vista: PCL driver, PS driver
- 16 Click the [OK] button.  
The "Printers" list appears.
- 17 Click the [Next] button.

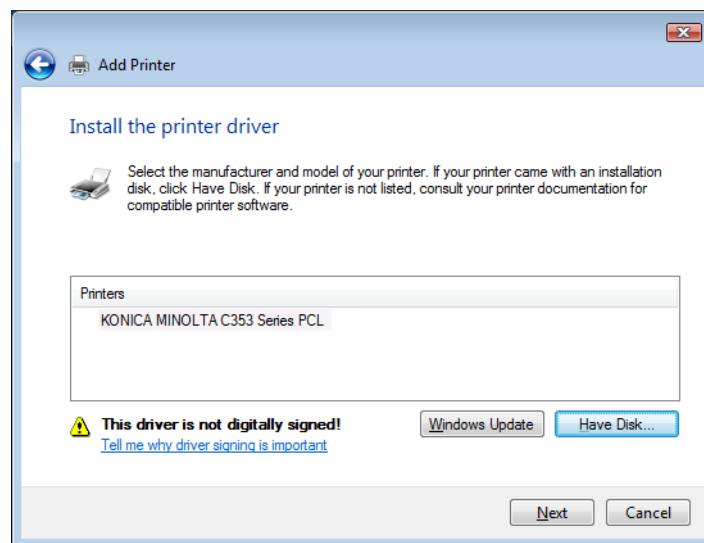

- 18 Follow the on-screen instructions.
  - If the User Account Control window appears, click the [Continue] button.
  - If the Verify the publisher dialog box of Windows Security appears, click "Install this driver software anyway".
- 19 Click the [Finish] button.
- 20 After installation is completed, make sure that the icon of the installed printer appears in the Printers window.
- 21 Remove the CD-ROM from the CD-ROM drive.  
This completes the printer driver installation.

### 3.4.2 Network connection (IPP or IPPS)

For IPP printing, specify the network setting before installing the printer driver.

#### Specifying the TCP/IP setting for this machine

Specify the IP address of this machine.



#### Detail

For details on specifying the IP address of this machine, refer to "[Network settings](#)" on page 2-2.

### Specifying the IPP settings for this machine

Enable IPP printing in "IPP Setting" of this machine.



#### Detail

For details on the IPP settings of this machine, refer to ["Network settings" on page 2-2](#).

To use IPPS printing, the certificate must be registered to this machine. For details, refer to ["Specifying IPP print settings" on page 2-12](#).

### Printer driver installation using the Add Printer wizard



#### Reminder

When installing on Windows Vista, administrator permissions are required.

- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Click the [Start] button, and then click "Control Panel".
  - If Control Panel is displayed with Classic View, double-click "Printers".
- 3 From "Hardware and Sound", click "Printer".  
The Printers window appears.
- 4 Click "Add a printer" from the toolbar.  
The Add Printer window appears.
- 5 Click "Add a network, wireless or Bluetooth printer".  
The connected printers are found.
- 6 In the window showing the search results, click "The printer that I want isn't Listed".
- 7 In the "Select a shared printer by name" box, enter the URL for this machine in the following format, and then click the [Next] button.
  - http:// (IP\_address\_of\_machine) /ipp Example: If the IP address of this machine is 192.168.1.20, enter http://192.168.1.20/ipp.
  - When specifying to use IPPS printing, enter "https:// < host name>.<domain name>/ipp". For <domain name>, specify the domain name registered for the DNS server used.
  - When the certificate of this machine is not published by certificate authority, register the certificate of this machine to Windows Vista as a certificate of "Trusted Root Certification Authorities" for "Local Computer" in advance.
  - When registering a certificate to this machine, confirm that <host name>.<domain name> is displayed as the common name of the certificate.
- 8 Click the [Have Disk] button.
- 9 Click the [Browse] button.
- 10 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language. Printer drivers that can be selected: Windows Vista: PCL driver, PS driver
- 11 Click the [OK] button.  
The "Printer" list appears.
- 12 Click the [Next] button.

**13** Follow the on-screen instructions.

- If the "User Account Control" window appears, click the [Continue] button.
- If the Verify the publisher dialog box of Windows Security appears, click "Install this driver software anyway".

**14** Click the [Finish] button.**15** When the installation is completed, make sure that the icon of the installed printer appears in the Printers window.**16** Remove the CD-ROM from the CD-ROM drive.

This completes the printer driver installation.

**3.4.3 Network connection (Web Service print)**

In Windows Vista, Web Service print-supporting printers on the network can be located and installed.



...

**Note**

*When the different kind of printer driver install after installing the printer driver, delete the installed printer driver in advance.*

*For details, refer to ["Manual uninstallation" on page 3-37](#).*

**TCP/IP setting for this machine**

Specify the IP address in the TCP/IP Setting screen of this machine.

**Detail**

*For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).*

**Web Service settings for this machine**

To use the Web Service print, enable the print function in the Web Service Settings screen of this machine.

**Detail**

*For details on the Web Service settings of this machine, refer to ["Network settings" on page 2-2](#).*

**Printer installation from the Network window**

...

**Reminder**

*When installing on Windows Vista, administrator permissions are required.*

- 1** Turn on the power of the machine while it is connected to the network.
  - To allow printers to be detected during installation, the machine must be connected to the network.
- 2** To use the Web Service print, check that "Network discovery" is enabled in "Network and Sharing Center" on the computer.
- 3** Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 4** Click the [Start] button, and then click "Network".  
The Network window appears, showing the computers and devices on the network.
- 5** Select the device name of this machine, and then click "Install" from the toolbar.  
The selected printer that supports the Web Service function is found, and then the Found New Hardware Wizard dialog box appears.
  - If the User Account Control window appears, click the [Continue] button.

- 6 Follow the on-screen instructions.
  - The steps performed in the New Hardware Wizard dialog box are the same as those described in "Printer driver installation by specifying the IP address using the Add Printer Wizard". For details, refer to Steps 11 through 20 of ["Printer driver installation by specifying the IP address using the Add Printer Wizard" on page 3-24](#).
  - If the User Account Control window appears, click the [Continue] button.
  - If the Verify the publisher dialog box of Windows Security appears, click "Install this driver software anyway".

#### Printer driver installation by specifying the IP address using the Add Printer Wizard




##### Reminder

*When installing on Windows Vista, administrator permissions are required.*


*Printers will be found during installation. Connect this machine to the network, and then turn on the power.*

- 1 Turn on the power of the machine while it is connected to the network.
  - To allow printers to be detected during installation, the machine must be connected to the network.
- 2 To use the Web Service print, check that "Network discovery" is enabled in "Network and Sharing Center" on the computer.
- 3 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 4 Click the [Start] button, and then click "Control Panel".
- 5 From "Hardware and Sound", click "Printer".  
The Printers window appears.
  - If Control Panel is displayed with Classic View, double-click "Printers".
- 6 Click "Add a printer" from the toolbar.

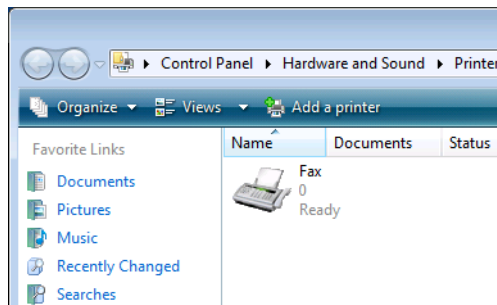


The Add Printer window appears.

- 7 Click "Add a local printer".

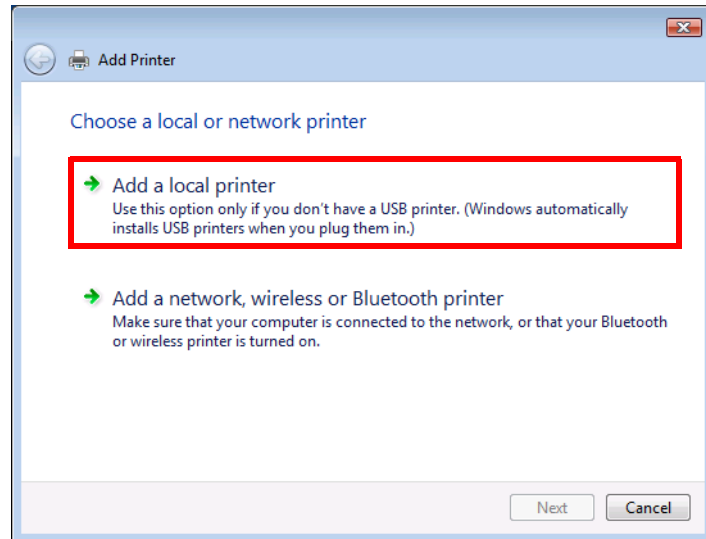

The Select a Printer Port dialog box appears.

- 8 Click "Create a new port", and select the port type.
- Select "Standard TCP/IP Port".
- 9 Click the [Next] button.
- 10 Select "Web Services Device" and enter the IP address.

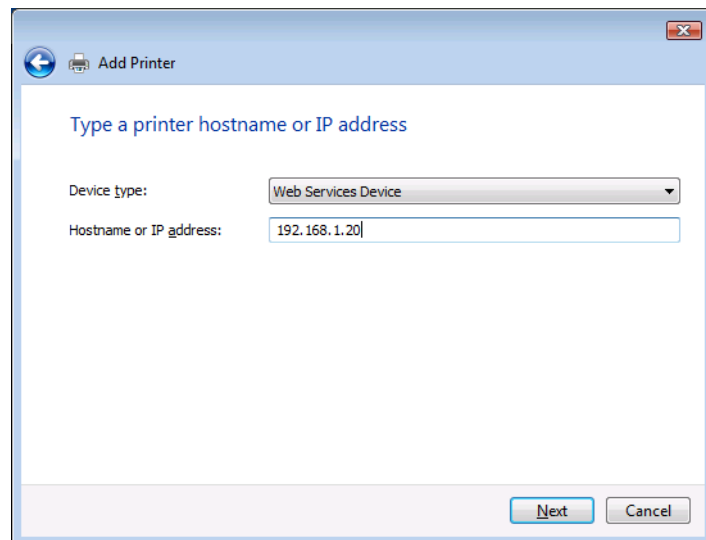

The Web Service print-supporting printer corresponding to the entered IP address is found, and then the Found New Hardware Wizard dialog box appears.

- 11 Click "Locate and install driver software (recommended)".
- 12 If a message appears, requesting confirmation to search online, click "Do not search online".
- 13 Click "Browse my computer for driver software (advanced)".
- 14 Click the [Browse] button.
- 15 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
- Select the specified folder according to the printer driver to be used, the operating system, and the language.

Printer drivers that can be selected:  
Windows Vista: PCL driver, PS driver

- 16** Click the [Next] button.
- 17** Follow the on-screen instructions.
  - If the User Account Control window appears, click the [Continue] button.
  - If the Verify the publisher dialog box of Windows Security appears, click "Install this driver software anyway".
- 18** Click the [Close] button.
- 19** After installation is completed, make sure that the icon of the installed printer appears in the Printers window.
- 20** Remove the CD-ROM from the CD-ROM drive.

This completes the printer driver installation.

### 3.4.4 Local connection

When this machine is connected via a USB port, the printer driver can be installed with plug-and-play.

**Note**

*When a USB connection is used, the printer driver is installed easily with the Plug and Play feature. However, it can be installed using the Add Printer Wizard. When using the Add Printer Wizard, select the USB port to be connected in the Select a Printer Port dialog box.*

- 1** Connect this machine to a computer using a USB cable, and then start up the computer.
  - Do not disconnect or connect the cable while the computer is starting up.
- 2** Turn on the power switch of this machine.  
The Found New Hardware Wizard dialog box appears.
  - If the Found New Hardware Wizard dialog box does not appear, turn off this machine, then on again.
  - When turning off the power, then on again, wait at least 10 seconds before turning it on again.  
Otherwise, this machine may not function properly.
- 3** Click "Locate and install the driver software (recommended)".
  - If the disk is not available, click "I don't have the disk. Show me other options". In the next window, select "Browse my computer for driver software (advanced)", and then specify the desired printer driver folder.  
The dialog box prompting you to insert the disk appears.
- 4** Insert the printer driver CD-ROM into the CD-ROM drive of the computer.  
The information on the disk is retrieved. A list of software supporting this machine appears.
- 5** Specify the name of the desired printer driver, and then click the [Next] button.
  - Printer drivers that can be selected: PCL driver, PS driver
- 6** Follow the on-screen instructions.
  - If the "User Account Control" window appears, click the [Continue] button.
  - If the dialog box of Windows Security appears, click "Install this driver software anyway".
- 7** When the installation is completed, click the [Close] button.
- 8** When the installation is completed, make sure that the icon of the installed printer appears in the Printers window.
- 9** Remove the CD-ROM from the CD-ROM drive.  
This completes the printer driver installation.

## 3.5 Installation using the wizard (Windows 2000)

### 3.5.1 Network connection (LPR/Port9100)

When using the LPR/Port9100 printing, specify the port during the printer driver installation process.

#### TCP/IP setting for this machine

Specify the IP address in the TCP/IP Setting screen of this machine.



##### Detail

For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).

#### RAW port number setting for this machine

To use Port9100 printing, enable the RAW port number (9100 at default), in the TCP/IP Setting screen of this machine.



##### Detail

For details on specifying the RAW port number of this machine, refer to ["Network settings" on page 2-2](#).

#### LPD setting for this machine

To use LPR printing, enable LPD print in the LPD Setting screen of this machine.



##### Detail

For details on the LPD settings of this machine, refer to ["Network settings" on page 2-2](#).

#### Printer driver installation using the Add Printer Wizard




##### Reminder

When installing on Windows 2000, administrator permissions are required.

- 1** Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2** Click the [Start] button, point to "Settings", and then click "Printers".
- 3** Double-click "Add Printer".  
The Add Printer Wizard starts.
- 4** Follow the on-screen instructions.
- 5** In the dialog box for specifying the connection method, select "Local printer", and then click the [Next] button.


- Clear the "Automatically detect and install my Plug and Play printer" check box.

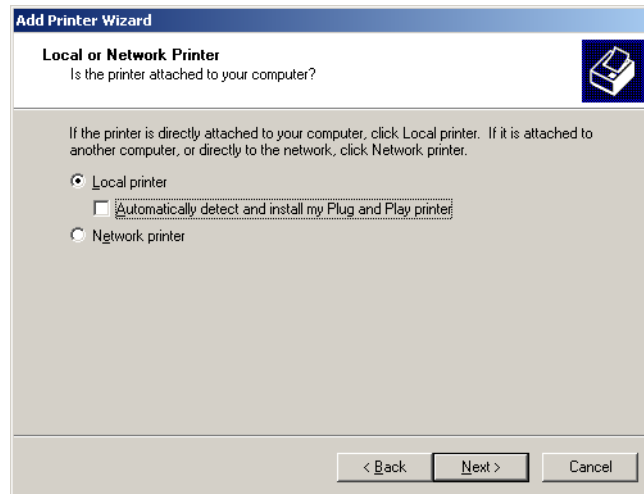

The Select a Printer Port dialog box appears.

- 6** Click "Create a new port", and select "Standard TCP/IP Port" for "Type of port:".
- 7** Click the [Next] button.  
The Add Standard TCP/IP Printer Port Wizard starts.
- 8** Click the [Next] button.
- 9** In the "Printer Name or IP address" box, enter the IP address for this machine, and then click the [Next] button.
  - If the Additional Port Information Required dialog box appears, go to step 10.
  - If the Finish dialog box appears, go to step 13.
- 10** Select "Custom", and then click the [Settings] button.
- 11** Change the settings according to the port, and then click the [OK] button.
  - For an LPR connection, select "LPR", and then enter "Print" in the "Queue name" box.
  - For a Port9100 connection, select "RAW", and then enter the RAW port number (9100 at default) in the "Port Number" box.
  - The information entered here is case-sensitive.
- 12** Click the [Next] button.
- 13** Click the [Finish] button.  
The Add Printer Wizard appears.
- 14** Click the [Have Disk] button.
- 15** Click the [Browse] button.
- 16** Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language.  
Printer drivers that can be selected:  
Windows 2000: PCL driver, PS driver
- 17** Click the [OK] button.  
The "Printers" list appears.

## 18 Click the [Next] button.

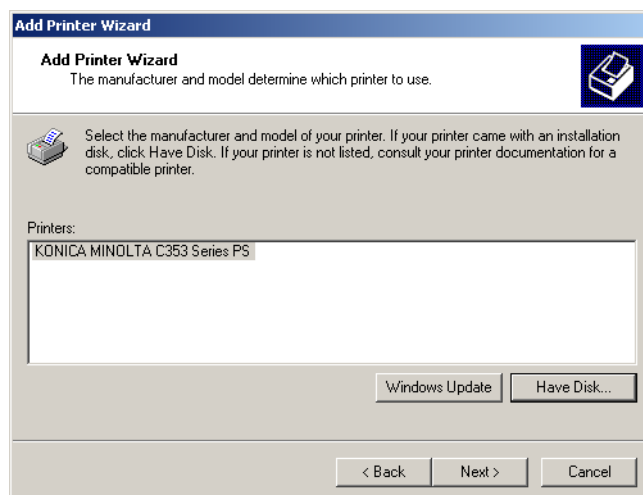

## 19 Follow the on-screen instructions.

- When the Digital Signature dialog box appears, click the [Yes] button.

## 20 Click the [Finish] button.

## 21 After installation is completed, make sure that the icon of the installed printer appears in the Printers window.

## 22 Remove the CD-ROM from the CD-ROM drive.

This completes the printer driver installation.

### 3.5.2 Network connection (SMB)

When using the SMB printing, specify the port by specifying the printer during the printer driver installation process.

#### TCP/IP setting for this machine

Specify the IP address in the TCP/IP Setting screen of this machine.



#### Detail

For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).

#### SMB setting for this machine

In "Print Setting" in the SMB Setting screen of this machine, specify the NetBIOS name, print service name, and workgroup.



#### Detail

For details on the SMB settings of this machine, refer to ["Network settings" on page 2-2](#).

**Printer driver installation using the Add Printer Wizard****Reminder**

*When installing on Windows 2000, administrator permissions are required.*

- 1** Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2** Click the [Start] button, point to "Settings", and then click "Printers".
- 3** Double-click "Add Printer".  
The Add Printer Wizard starts.
- 4** Follow the on-screen instructions.
- 5** In the dialog box for specifying the connection method, select "Local printer", and then click the [Next] button.
  - Clear the "Automatically detect and install my Plug and Play printer" check box.The Select a Printer Port dialog box appears.
- 6** Click "Create a new port", and select "Local Port" for "Type of port:"
- 7** Click the [Next] button.
- 8** In the "Port Name" box, enter "\\NetBIOS name\print service name".
  - Enter the same NetBIOS name and print service name those appear in "Print Setting" in the SMB Setting screen of this machine.
- 9** Click the [OK] button.  
The Add Printer Wizard appears.
- 10** Click the [Have Disk] button.
- 11** Click the [Browse] button.
- 12** Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language.  
Printer drivers that can be selected:  
Windows 2000: PCL driver, PS driver
- 13** Click the [OK] button.  
The "Printers" list appears.
- 14** Click the [Next] button.
- 15** Follow the on-screen instructions.
  - When the Digital Signature dialog box appears, click the [Yes] button.
- 16** Click the [Finish] button.
- 17** After installation is completed, make sure that the icon of the installed printer appears in the Printers window.
- 18** Remove the CD-ROM from the CD-ROM drive.  
This completes the printer driver installation.

### 3.5.3 Network connection (IPP or IPPS)

For IPP printing, specify the network setting before installing the printer driver.

#### Specifying the TCP/IP setting for this machine

Specify the IP address of this machine.



##### Detail

*For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).*

#### Specifying the IPP settings for this machine

Enable IPP printing in "IPP Setting" of this machine.



##### Detail

*For details on the IPP settings of this machine, refer to ["Network settings" on page 2-2](#).*

*To use IPPS printing, the certificate must be registered to this machine. For details, refer to ["Specifying IPP print settings" on page 2-12](#).*

#### Printer driver installation using the Add Printer wizard



##### Reminder

*When installing on Windows 2000, administrator permissions are required.*

- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Click the [Start] button, and then click "Setup" - "Printer".
- 3 Double-click "Add Printer".  
"Add Printer wizard" starts.
- 4 Click the [Next] button.
- 5 In the Local or Network Printer dialog box, select "Network printer", and then click the [Next] button.
- 6 In the Locate Your Printer dialog box, select "Connect to a printer on the Internet or on your intranet".
- 7 In the "URL" field, enter the URL for this machine in the following format, and then click the [Next] button.
  - http:// (IP\_address\_of\_machine)/ipp Example: If the IP address of this machine is 192.168.1.20, enter http://192.168.1.20/ipp.
  - When setting this machine for IPPS printing, enter "https:// (IP\_address\_of\_machine) /ipp".
- 8 When the confirmation dialog box appears, click the [OK] button.
- 9 Click the [Have Disk] button.
- 10 Click the [Browse] button.
- 11 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language. Printer drivers that can be selected: Windows 2000: PCL driver, PS driver
- 12 Click the [OK] button.  
The "Printer" list appears.
- 13 Click the [OK] button.

- 14 Follow the on-screen instructions.
  - When the "Digital Signature" dialog box appears, click the [Yes] button.
- 15 Click the [Finish] button.
- 16 When the installation is completed, make sure that the icon of the installed printer appears in the Printers and Faxes window.
- 17 Remove the CD-ROM from the CD-ROM drive.

This completes the printer driver installation.

Once the settings for the printer have been specified, you can use the printer in the same way as a default local printer.

#### 3.5.4 Local connection

When this machine is connected via a USB port, the printer driver can be installed with plug-and-play.



##### Note

*When a USB connection is used, the printer driver is installed easily with the Plug and Play feature. However, it can be installed using the Add Printer Wizard. When using the Add Printer Wizard, select the USB port to be connected in the Select a Printer Port dialog box.*

- 1 Connect this machine to a computer using a USB cable, and then start up the computer.
  - Do not disconnect or connect the cable while the computer is starting up.
- 2 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 3 Turn on the power switch of this machine.

The Found New Hardware Wizard dialog box appears.

  - If the Found New Hardware Wizard does not start up, turn off this machine, then on again.
  - When turning off the power, then on again, wait at least 10 seconds before turning it on again. Otherwise, this machine may not function properly.
- 4 Select "Search for a suitable driver for my device (recommended)", and then click the [Next] button.
- 5 Select "Specify location", and then click the [Next] button.
- 6 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language. Windows 2000: PCL driver, PS driver
- 7 Click the [OK] button, and then follow the on-screen instructions.
  - When the "Digital Signature" dialog box appears, click the [Yes] button.
- 8 Click the [Finish] button.
- 9 When the installation is completed, make sure that the icon of the installed printer appears in the Printers and Faxes window.
- 10 Remove the CD-ROM from the CD-ROM drive.

This completes the printer driver installation.

## 3.6 Installation using the wizard (Windows NT 4.0)

### 3.6.1 Network connection (LPR)

When using the LPR printing, specify the port during the printer driver installation process.

#### TCP/IP setting for this machine

Specify the IP address in the TCP/IP Setting screen of this machine.



##### Detail

*For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).*

#### LPD setting for this machine

To use LPR printing, enable LPD print in the LPD Setting screen of this machine.



##### Detail

*For details on the LPD settings of this machine, refer to ["Network settings" on page 2-2](#).*

#### Printer driver installation using the Add Printer Wizard



##### Reminder

*When installing on Windows NT 4.0, administrator permissions are required.*

*To use the LPR port in Windows NT 4.0, Microsoft TCP/IP Print Services must be installed on the computer.*

- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Click the [Start] button, point to "Settings", and then click "Printers".
- 3 Double-click "Add Printer".  
The Add Printer Wizard starts.
- 4 Follow the on-screen instructions.
- 5 In the dialog box for specifying the connection method, select "This computer", and then click the [Next] button.
- 6 Click the [Next] button.  
A screen for specifying ports appears.
- 7 Click the [Add Port] button.
- 8 In the "Available Printer Ports" list, select "LPR Port", and then click the [New Port] button.
- 9 Enter the IP address of this machine in the "Address" box and "Print" in the "Queue Name" box, and then click the [OK] button.
  - The information entered here is case-sensitive.
- 10 Select the created port, and then click the [Next] button.
- 11 Click the [Have Disk] button.
- 12 Click the [Browse] button.
- 13 Specify the desired folder on the CD-ROM that contains the printer driver, and then click the [Open] button.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language.

Printer drivers that can be selected:  
Windows NT 4.0: PCL driver

- 14** Click the [OK] button.  
The "Printers" list appears.
- 15** Click the [Next] button.
- 16** Follow the on-screen instructions.
- 17** Click the [Finish] button.
- 18** After installation is completed, make sure that the icon of the installed printer appears in the Printers window.
- 19** Remove the CD-ROM from the CD-ROM drive.  
This completes the printer driver installation.


## 3.7 Uninstalling the printer driver

If it becomes necessary to delete the printer driver, for example, when you want to reinstall the printer driver, delete the driver according to the following procedure.

### 3.7.1 Uninstallation by an uninstallation program

If the printer driver was installed with an installer, the delete function of the printer driver is included.

- 1 Click the [Start] button, and then select "All Programs" (or "Programs"), select "KONICA MINOLTA", select "bizhub C353 Series", and then click "Uninstall Printer Driver".
- 2 Select the components to be deleted, and then click the [Uninstall] button.
  - Follow the on-screen instructions.

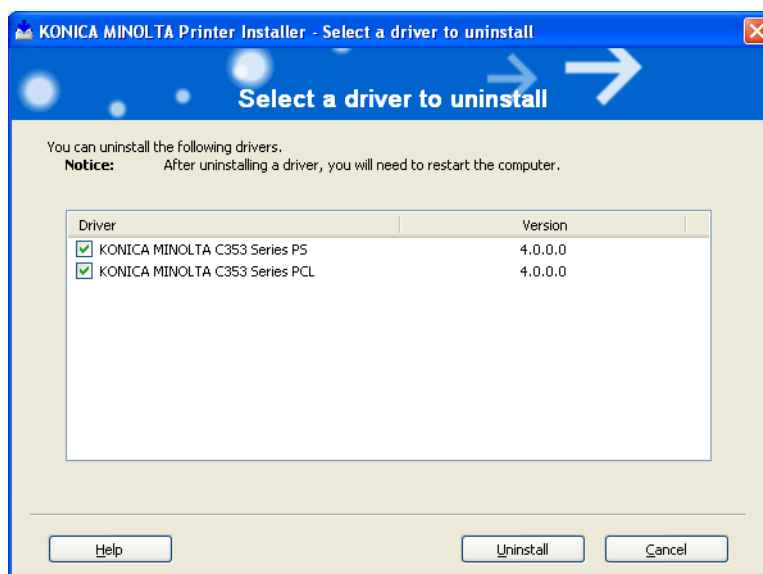

- 3 If the restart screen appears, click the [OK] button to restart the computer.

### 3.7.2 Uninstallation by an installer

If the printer driver was installed with an installer, it can be deleted by the installer.

- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
  - Check that the installer starts up, and then continue with step 2.
  - If the installer does not start up, open the printer driver folder on the CD-ROM, and then double-click "Setup.exe" to continue with step 3.
- 2 Click "Printer Install".

The installer of the printer driver starts.
- 3 Click the [Agree] button on the installation license agreement screen.
- 4 In the setup selection dialog box, select "Uninstall Printer Driver", and then click the [Next] button.
- 5 Select the components to be deleted, and then click the [Delete] button.
  - Follow the on-screen instructions.
- 6 If the restart screen appears, click the [OK] button to restart the computer.

### 3.7.3 Manual uninstallation

If the printer driver was installed without using an installer, manually delete the printer driver.

- 1 Open the Printers window or Printers and Faxes window.
- 2 Select the icon of the printer to be deleted.
- 3 Press the [Delete] key on the computer keyboard to delete the printer driver.
- 4 Follow the on-screen instructions.  
When the driver has been deleted, the icon disappears from the Printers window or the Printers and Faxes window.  
For Windows NT 4.0, this completes the driver uninstallation.  
For Windows 2000/XP/Vista/Sever 2003, delete the printer driver in "Server Properties".
- 5 Open "Server Properties".
  - For Windows 2000/XP/Server 2003, click the "File" menu, and then click "Server Properties".
  - For Windows Vista, right-click space in the Printers window and click "Run as administrator", then click "Server Properties".
  - If the User Account Control window appears, click the [Continue] button.
- 6 Click the Driver tab.
- 7 Select the printer driver to be deleted from the "Installed printer drivers" list, and then click the [Remove] button.
  - For Windows 2000/XP/Server 2003, continue with step 9.
  - For Windows Vista, continue with step 8.
- 8 Select "Remove driver and driver package" on the deletion confirmation screen and then click the [OK] button.
- 9 Click the [Yes] button on the deletion confirmation screen.
  - For Windows Vista, when the deletion confirmation screen is additionally displayed, click the [Delete] button.
- 10 Close the opened screen and restart the computer.
  - Be sure to restart the computer.
 This completes the printer driver uninstallation.



#### Note

*Even if the printer driver is deleted using the preceding method, the model information file will remain in the computer for Windows 2000/XP/Server 2003. Therefore, when reinstalling the same version of the printer driver, the driver may not be able to be overwritten. In this case, delete the following files.*  
 "C: \WINDOWS\system32\spool\drivers\w32x86"

*When you check folders and find a folder of the applicable model, delete it. However, if multiple drivers are installed including the Konica Minolta driver and PostScript Konica Minolta driver, the model information of all drivers is deleted. If other drivers are remaining, do not delete it.*

*"C: "Delete "oem\*.inf" and "oem\*.PNF" in "\WINDOWS\inf" folder (the asterisk "\*" in the file name indicates a number, and the number varies according to the environment of the computer).*

*Before deleting the files, open the INF file, check that the model name is described in the last several lines, and then check that the file of the corresponding model is available. The PNF file is the same number as the INF file.*

*In Windows Vista, when you have deleted a file using "Remove driver and driver package", this operation is not required.*





## **Installing the printer driver for Macintosh**

## 4 Installing the printer driver for Macintosh

### 4.1 Selectable connection methods

Macintosh OS can be used via a network connection. The following protocols are available.

Setup method	Connection method		Refer to
Connection method that can be set up with an installer	Bonjour	A network connection using Bonjour and Rendezvous.	<a href="#">"Installing the printer driver on Macintosh OSX 10.2/10.3/10.4" on page 4-3</a> <a href="#">"Mac OS 9.2" on page 4-14</a> * Specify the connection method when selecting the printer.
	AppleTalk	A network connection using AppleTalk.	
	LPR	A network connection using the LPR print service.	
	IPP	A network connection using the IPP print service.	




#### Detail

*Before using this machine in a network environment, the network settings must be specified for this machine. For details, refer to ["Network settings" on page 2-2](#).*

## 4.2 Installing the printer driver on Macintosh OSX 10.2/10.3/10.4

### 4.2.1 Installing the printer driver

- 1 Start up the Macintosh computer.
  - 2 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
    - Exit all running applications, if any.
  - 3 Open the folder on the CD-ROM that contains the desired printer driver.
    - Select the specified folder according to the printer driver to be used, the operating system, and the language.
  - 4 Copy the driver file for the Mac OS version on the desktop.
    - OS X 10.2: KONICAMINOLTA\_C353\_102.pkg
    - OS X 10.3: KONICAMINOLTA\_C353\_103.pkg
    - OS X 10.4: KONICAMINOLTA\_C353\_103.pkg
  - 5 Double-click the file copied on the desktop.
    - As prompted, enter the administrator name and password.
    - For the administrator name and password, contact your network administrator.
    - To quit the installation, click the [Cancel] button.
  - 6 Click the [Continue] button and follow the on-screen instructions until the Easy Install dialog box appears.
  - 7 In the Easy Install dialog box, click the [Install] button.
    - When the printer driver is installed for the second and subsequent times, the [Install] button may appear as the [Upgrade] button.
- The printer driver is installed to the Macintosh computer. When the installation is completed, a message appears.

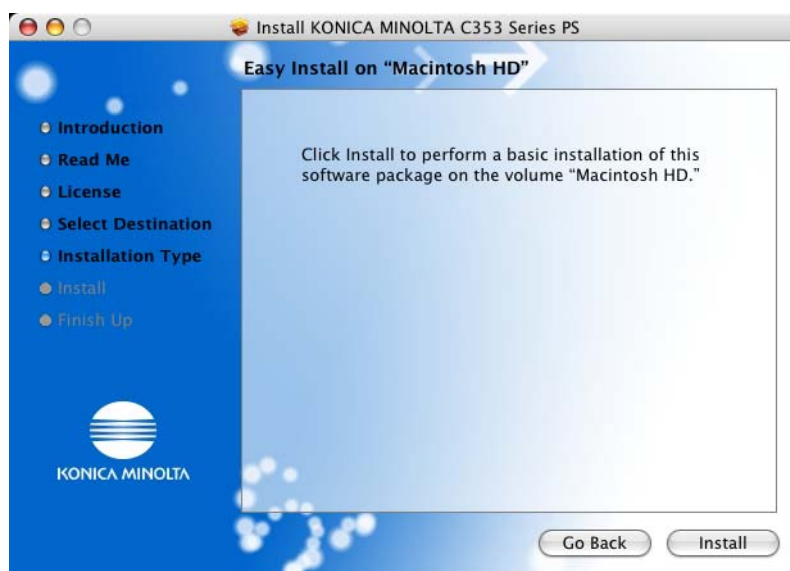

- 8 Click the [Close] button.

This completes the printer driver installation.

Next, select a printer.

### 4.2.2 Selecting and connecting the printer (OS 10.4)

In OS 10.4, this machine can be connected with Bonjour, AppleTalk, LPR (LPD), or IPP.

After specifying the network setting for this machine, selecting this machine as the printer in Printer Setup Utility or Print Center enables printing.

#### Specifying the Bonjour settings

##### *Specifying the Bonjour settings for this machine*

Enable Bonjour in "Bonjour Setting", and then enter the Bonjour name.




#### Detail

For details on the Bonjour settings of this machine, refer to the ["Network settings" on page 2-2](#).

#### Adding a printer

- 1 Select "HDD" - "Applications" - "Utility" where the driver was installed, and then double-click "Printer Setup Utility" or "Print Center" to open it.
- 2 When the Add Printer dialog box appears, click the [Add] button. When the printer list appears, click the [Add] button.
  - If available printers have already been set up, the Add Printer dialog box does not appear.
  - If the printer is not detected, turn off this machine, then on again.
  - When turning off the power, then on again, wait at least 10 seconds before turning it on again. Otherwise, this machine may not function properly.

The connected printers are detected.
- 3 From the "Printer Name" list, select the desired model name and connection (Bonjour).
- 4 Select "KONICA MINOLTA" in "Print Using", select the desired model from the list of models, and then click the [Add] button.

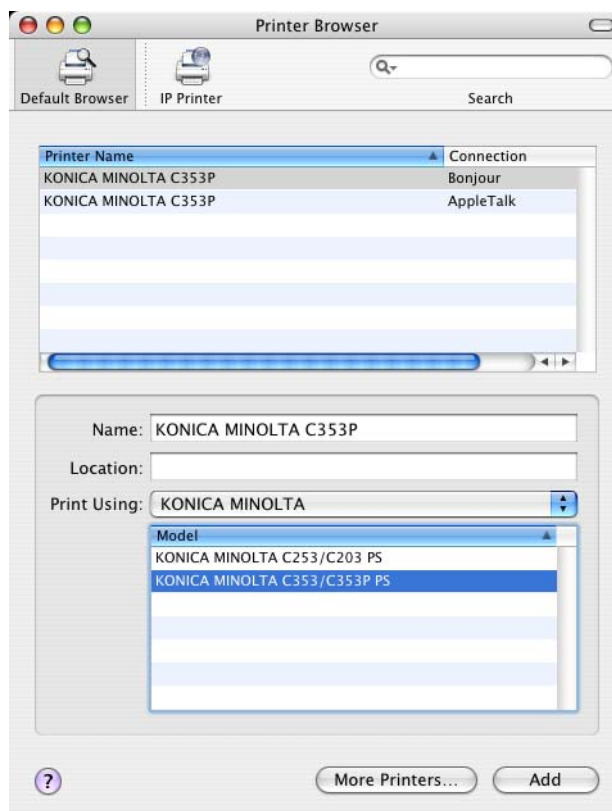

If the selected printer is registered in the printer list, the setting procedure is completed.

**Note**

*If the **Installable Options** window appears, proceed to change the option settings as necessary. For details, refer to **"Options" on page 6-3**.*

**Specifying the AppleTalk settings*****Specifying the AppleTalk settings for this machine***

Enable AppleTalk in "AppleTalk Setting", and then enter the printer name.

**Detail**

*For details on the AppleTalk settings of this machine, refer to **"Network settings" on page 2-2**.*

***Specifying the AppleTalk settings for the computer***


Specify the AppleTalk settings for the Macintosh computer connected to this machine.

- 1** On the "Apple" menu, select "System Preferences".
- 2** Click the "Network" icon.
- 3** From "Show", select "Built-in Ethernet".
- 4** Click the AppleTalk tab, and then select the "Make AppleTalk Active" check box.
- 5** Click the close button at the upper left corner of the dialog box.
  - When the "Apply configuration changes?" message appears, click the [Apply] button.

***Adding a printer***

- 1** Select "HDD" - "Applications" - "Utilities" where the driver was installed, and then double-click "Printer Setup Utility" or "Print Center" to open it.
- 2** When the Add Printer dialog box appears, click the [Add] button. When the printer list appears, click the [Add] button.
  - If available printers have already been set up, the Add Printer dialog box does not appear.
  - If the printer is not detected, turn off this machine, then on again.
  - When turning off the power, then on again, wait at least 10 seconds before turning it on again. Otherwise, this machine may not function properly.The connected printers are detected.
- 3** From the "Printer Name" list, select the desired model name and connection (AppleTalk).

- 4 Select "KONICA MINOLTA" in "Print Using", select the desired model from the list of models, and then click the [Add] button.

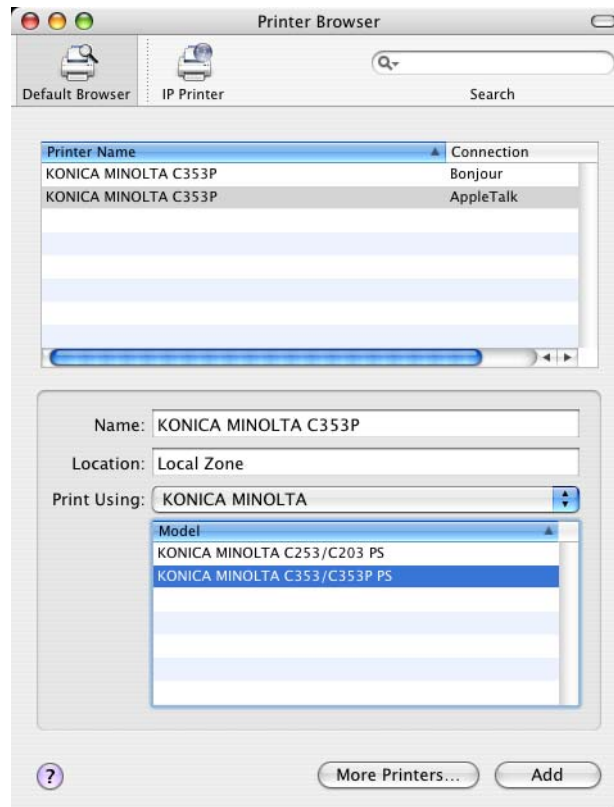

If the selected printer is registered in the printer list, the setting procedure is completed.



#### Note

If the *Installable Options* window appears, proceed to change the option settings as necessary. For details, refer to ["Options" on page 6-3](#).

### Specifying the LPR settings

#### **Specifying the TCP/IP setting for this machine**

Specify the IP address of this machine.



#### Detail

For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).

#### **LPD setting for this machine**

To use LPR printing, enable LPD print in the LPD Setting screen of this machine.



#### Detail

For details on the LPD settings of this machine, refer to ["Network settings" on page 2-2](#).

#### **Specifying the TCP/IP setting for the computer**


Specify the TCP/IP setting for the Macintosh computer connected to this machine.

- 1 On the "Apple" menu, select "System Preferences".
- 2 Click the "Network" icon.
- 3 From "Show", select "Built-in Ethernet".
- 4 Click the TCP/IP tab.

- 5 Select "Configure" items according to the settings for the network to which the Macintosh computer is connected, and then specify the IP address and subnet mask.
- 6 Click the close button at the upper left corner of the dialog box.
  - When the "Apply configuration changes?" message appears, click the [Apply] button.

#### **Adding a printer**

- 1 Select "HDD" - "Applications" - "Utility" where the driver was installed, and then double-click "Printer Setup Utility" or "Print Center" to open it.
- 2 When the Add Printer dialog box appears, click the [Add] button. When the printer list appears, click the [Add] button.
  - If available printers have already been set up, the Add Printer dialog box does not appear. The "Printer Browser" appears.
- 3 Click the [IP Printer] button.
- 4 From "Protocol", select "LPD".
- 5 In "Address", enter the IP address of this machine.
- 6 Select "KONICA MINOLTA" in "Print Using", select the desired model from the list of models, and then click the [Add] button.

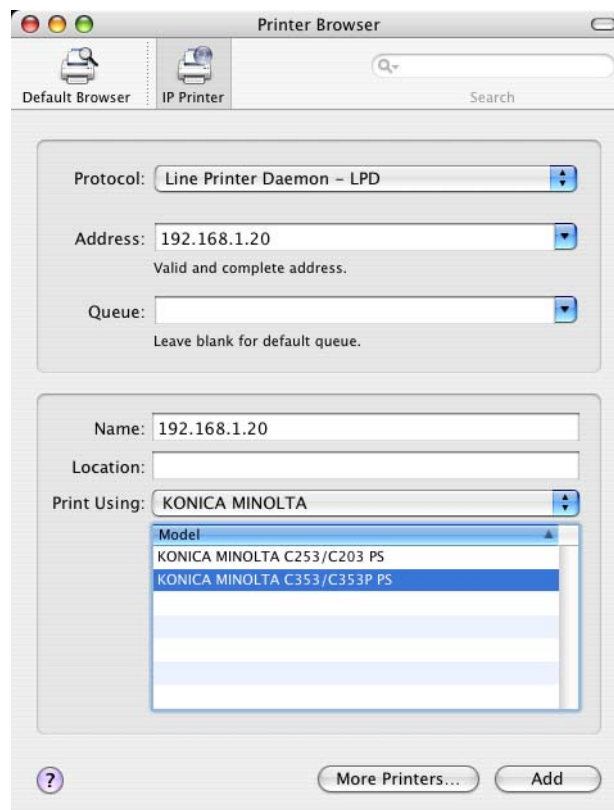

If the selected printer is registered in the printer list, the setting procedure is completed.



#### **Note**

*If the Installable Options window appears, proceed to change the option settings as necessary. For details, refer to "Options" on page 6-3.*

## Specifying the IPP settings

### ***Specifying the TCP/IP setting for this machine***

Specify the IP address of this machine.



#### **Detail**

*For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).*

### ***IPP setting for this machine***

Enable IPP print in the IPP Setting screen of this machine.



#### **Detail**

*For details on the IPP settings of this machine, refer to ["Network settings" on page 2-2](#).*

### ***Specifying the TCP/IP setting for the computer***


Specify the TCP/IP setting for the Macintosh computer connected to this machine.

- 1** On the "Apple" menu, select "System Preferences".
- 2** Click the "Network" icon.
- 3** From "Show", select "Built-in Ethernet".
- 4** Click the TCP/IP tab.
- 5** Select "Configure" items according to the settings for the network to which the Macintosh computer is connected, and then specify the IP address and subnet mask.
- 6** Click the close button at the upper left corner of the dialog box.
  - When the "Apply configuration changes?" message appears, click the [Apply] button.

### ***Adding a printer***

- 1** Select "HDD" - "Applications" - "Utility" where the driver was installed, and then double-click "Printer Setup Utility" or "Print Center" to open it.
- 2** When the Add Printer dialog box appears, click the [Add] button. When the printer list appears, click the [Add] button.
  - If available printers have already been set up, the Add Printer dialog box does not appear. The "Printer Browser" appears.
- 3** Click the [IP Printer] button.
- 4** From "Protocol", select "IPP".
- 5** In "Address", enter the IP address of this machine. In "Queue", enter "ipp".

- 6 Select "KONICA MINOLTA" in "Print Using", select the desired model from the list of models, and then click the [Add] button.

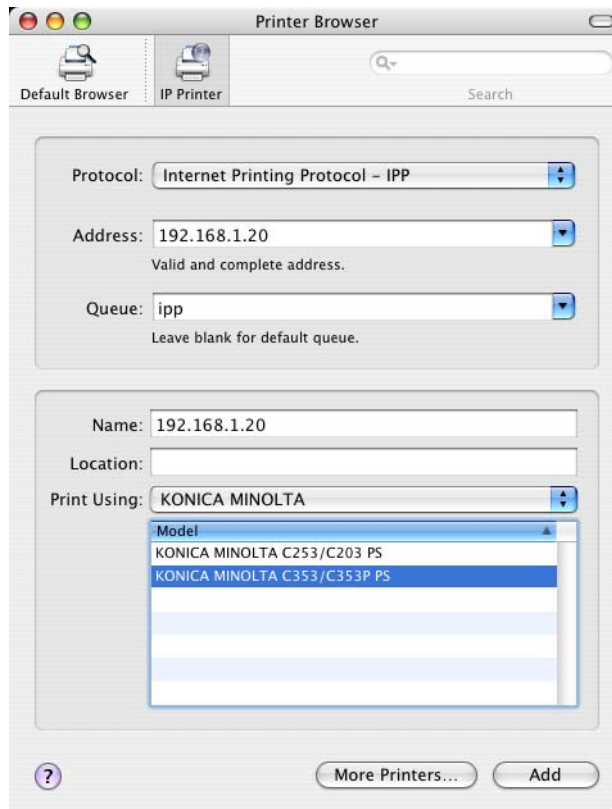

If the selected printer is registered in the printer list, the setting procedure is completed.



#### Note

If the *Installable Options* window appears, proceed to change the option settings as necessary. For details, refer to ["Options" on page 6-3](#).

### 4.2.3 Selecting and connecting the printer (OS 10.2 and 10.3)

In OS 10.2/10.3, this machine can be connected with Rendezvous, AppleTalk, LPR (LPD), or IPP.

After specifying the network setting for this machine, selecting this machine as the printer in Printer Setup Utility or Print Center enables printing.

#### Specifying the Rendezvous settings

##### *Specifying the Bonjour settings for this machine*

Enable Bonjour in "Bonjour Setting", and then enter the Bonjour name.



#### Detail

For details on the Bonjour settings of this machine, refer to ["Network settings" on page 2-2](#).


#### Adding a printer

- 1 Select "HDD" - "Applications" - "Utility" where the driver was installed, and then double-click "Printer Setup Utility" or "Print Center" to open it.
- 2 When the Add Printer dialog box appears, click the [Add] button. When the printer list appears, click the [Add] button.
  - If available printers have already been set up, the Add Printer dialog box does not appear.
- 3 Select "Rendezvous" for the connection method.
  - If the printer is not detected, turn off this machine, then on again.

- When turning off the power, then on again, wait at least 10 seconds before turning it on again. Otherwise, this machine may not function properly.
- The connected printers are detected.

**4** From the "Name" list, select the desired model name.

**5** Select "KONICA MINOLTA" in "Printer Model", select the desired model from the list of model names, and then click the [Add] button.

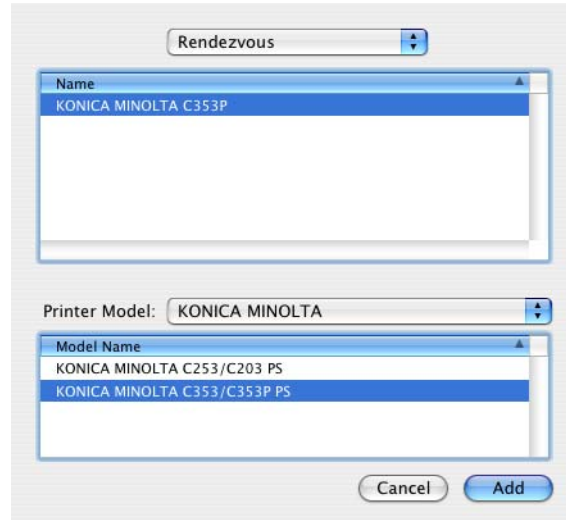

If the selected printer is registered in the printer list, the setting procedure is completed.

### Specifying the AppleTalk settings

#### *Specifying the AppleTalk settings for this machine*

Enable AppleTalk in "AppleTalk Setting", and then enter the printer name.



#### **Detail**

*For details on the AppleTalk settings of this machine, refer to ["Network settings" on page 2-2](#).*

#### *Specifying the AppleTalk settings for the computer*

Specify the AppleTalk settings for the Macintosh computer connected to this machine.

- 1** On the "Apple" menu, select "System Preferences".
- 2** Click the "Network" icon.
- 3** From "Show", select "Built-in Ethernet".
- 4** Click the AppleTalk tab, and then select the "Make AppleTalk Active" check box.
- 5** Click the close button at the top left of the dialog box.
  - When the "Apply configuration changes?" message appears, click the [Apply] button.


#### **Adding a printer**

- 1** Select "HDD" - "Applications" - "Utility" where the driver was installed, and then double-click "Printer Setup Utility" or "Print Center" to open it.
- 2** When the Add Printer dialog box appears, click the [Add] button. When the printer list appears, click the [Add] button.
  - If available printers have already been set up, the Add Printer dialog box does not appear.
- 3** Select "AppleTalk" for the connection method, and then select the zone to which this machine is connected.

- If the printer is not detected, turn off this machine, then on again.
- When turning off the power, then on again, wait at least 10 seconds before turning it on again. Otherwise, this machine may not function properly.

The connected printers are detected.

- 4 From the "Name" list, select the desired model name.
- 5 Select "KONICA MINOLTA" in "Printer Model", select the desired model from the list of model names, and then click the [Add] button.

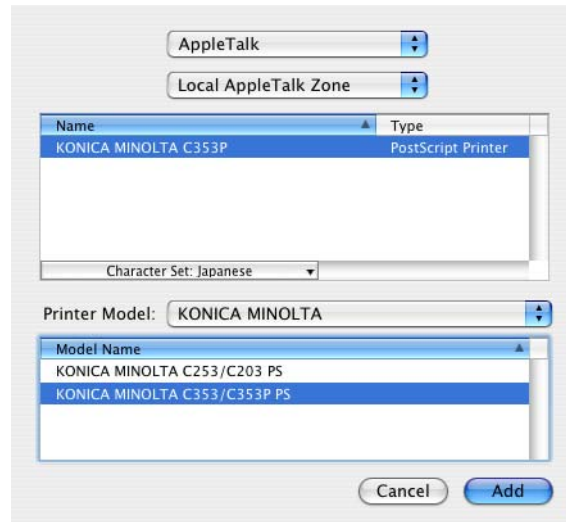

If the selected printer is registered in the printer list, the setting procedure is completed.

### Specifying the LPR settings

#### ***Specifying the TCP/IP setting for this machine***

Specify the IP address of this machine.



#### **Detail**

*For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).*

#### ***LPD setting for this machine***

To use LPR printing, enable LPD print in the LPD Setting screen of this machine.



#### **Detail**

*For details on the LPD settings of this machine, refer to ["Network settings" on page 2-2](#).*


#### ***Specifying the TCP/IP setting for the computer***

Specify the TCP/IP setting for the Macintosh computer connected to this machine.

- 1 On the "Apple" menu, select "System Preferences".
- 2 Click the "Network" icon.
- 3 From "Show", select "Built-in Ethernet".
- 4 Click the TCP/IP tab.
- 5 Select "Configure" items according to the settings for the network to which the Macintosh computer is connected, and then specify the IP address and subnet mask.
- 6 Click the close button at the upper left corner of the dialog box.
  - When the "Apply configuration changes?" message appears, click the [Apply] button.

**Adding a printer**

- 1 Select "HDD" - "Applications" - "Utility" where the driver was installed, and then double-click "Printer Setup Utility" or "Print Center" to open it.
- 2 When the Add Printer dialog box appears, click the [Add] button. When the printer list appears, click the [Add] button.
  - If available printers have already been set up, the Add Printer dialog box does not appear.
- 3 Select "IP Printing" for the connection method.
- 4 For OS 10.3, from "Printer Type", select "LPD/LPR".
- 5 In "Printer Address", enter the IP address of this machine.
- 6 Select "KONICA MINOLTA" in "Printer Model", select the desired model from the list of model names, and then click the [Add] button.

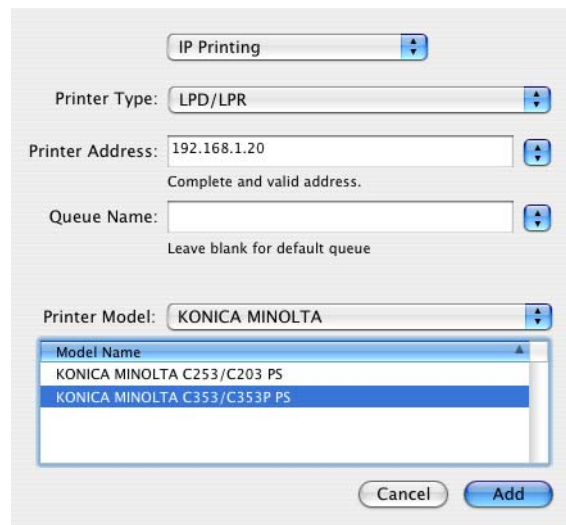

If the selected printer is registered in the printer list, the setting procedure is completed.

**Specifying the IPP settings*****Specifying the TCP/IP setting for this machine***

Specify the IP address of this machine.

**Detail**

For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).

***IPP setting for this machine***

Enable IPP print in the IPP Setting screen of this machine.

**Detail**

For details on the IPP settings of this machine, refer to ["Network settings" on page 2-2](#).

***Specifying the TCP/IP setting for the computer***


Specify the TCP/IP setting for the Macintosh computer connected to this machine.

- 1 On the "Apple" menu, select "System Preferences".
- 2 Click the "Network" icon.
- 3 From "Show", select "Built-in Ethernet".

- 4 Click the TCP/IP tab.
- 5 Select "Configure" items according to the settings for the network to which the Macintosh computer is connected, and then specify the IP address and subnet mask.
- 6 Click the close button at the upper left corner of the dialog box.
  - When the "Apply configuration changes?" message appears, click the [Apply] button.

#### ***Adding a printer***

- 1 Select "HDD" - "Applications" - "Utility" where the driver was installed, and then double-click "Printer Setup Utility" or "Print Center" to open it.
- 2 When the Add Printer dialog box appears, click the [Add] button. When the printer list appears, click the [Add] button.
  - If available printers have already been set up, the Add Printer dialog box does not appear.
- 3 Select "IP Printing" for the connection method.
- 4 For OS 10.3, from "Printer Type", select "IPP".
- 5 In "Printer Address", enter the IP address of this machine.
  - Leave "Queue Name" blank.
- 6 Select "KONICA MINOLTA" in "Printer Model", select the desired model from the list of model names, and then click the [Add] button.

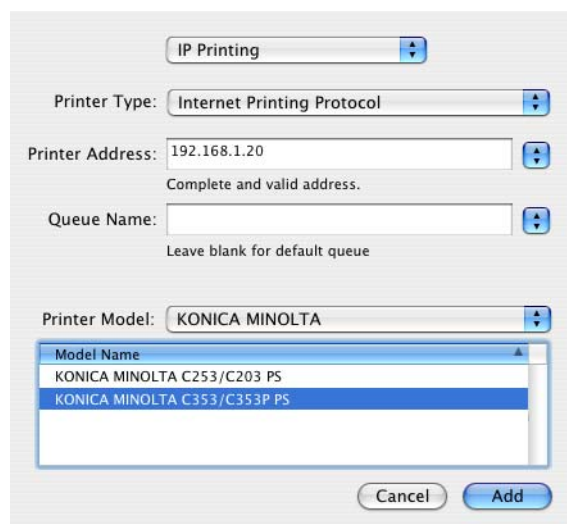

If the selected printer is registered in the printer list, the setting procedure is completed.

## 4.3 Mac OS 9.2

### 4.3.1 Installing the printer driver

After connected to a computer, this machine can be used as a printer by selecting a PostScript printer and by specifying the printer description (PPD) file.

First, copy the printer description (PPD) file to the Macintosh computer.

- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Open the folder on the CD-ROM that contains the desired printer driver.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language.
- 3 Select PPD file KONICAMINOLTAC353UVxxx.ppd, and then copy it into the Printer Descriptions folder in "System Folder" - "Extensions" of "Hard Disk".

This completes the printer driver installation.

### 4.3.2 Selecting and connecting the printer

In OS 9, this machine can be connected with AppleTalk or LPR (LPD).

Specify the network settings for this machine, and then select the printer.

#### **Specifying the AppleTalk settings**

##### ***Specifying the AppleTalk settings for this machine***

Enable AppleTalk in "AppleTalk Setting", and then enter the printer name.



#### **Detail**

*For details on the AppleTalk settings of this machine, refer to ["Network settings" on page 2-2](#).*

##### ***Specifying the AppleTalk settings for the computer***

Specify the AppleTalk settings for the Macintosh computer connected to this machine.


- 1 On the "Apple" menu, select "Control Panel" - "AppleTalk".
- 2 From the "Connect via" drop-down list, select "Ethernet".
- 3 Click the close button at the upper left corner of the dialog box.
  - When the "Save changes to the current configuration?" message appears, click the [Save] button.

##### ***Selecting a printer***

- 1 On the "Apple" menu, select "Chooser".
- 2 Make sure that "AppleTalk" is set to "Active", and then click the "LaserWriter" icon.
- 3 From the "Select a PostScript Printer" list, click the desired model name, and then click the [Create] button.


A window for selecting a PostScript printer description (PPD) file appears.
- 4 Select the applicable PPD file, and then click the [Select] or [Open] button.

- If a different PPD file has already been selected, click the [Setup] button in step 3, and then click the [Select PPD] button from the window that is already displayed.

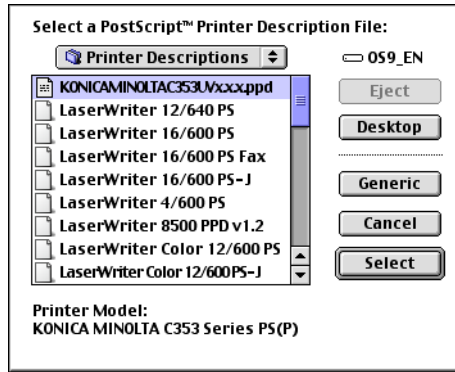

A window for specifying options appears.

- 5 Select options installed on this machine on the "Options Installed 1" and "Options Installed 2" windows.

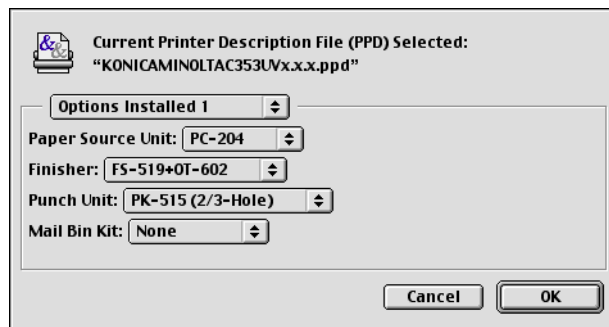

- 6 Click the [OK] button.  
The "selector" window appears again.
- 7 Close the "selector" window.

### Specifying the LPR settings

#### ***Specifying the TCP/IP setting for this machine***

Specify the IP address of this machine.



#### **Detail**

For details on specifying the IP address of this machine, refer to ["Network settings" on page 2-2](#).

#### ***LPD setting for this machine***

To use LPR printing, enable LPD print in the LPD Setting screen of this machine.



#### **Detail**

For details on the LPD settings of this machine, refer to ["Network settings" on page 2-2](#).

#### ***Specifying the TCP/IP setting for the computer***


Specify the TCP/IP setting for the Macintosh computer connected to this machine.

- 1 On the "Apple" menu, select "Control Panel" - "TCP/IP".
- 2 From the "Connect via" drop-down list, select "Ethernet".
- 3 Select "Configure" items according to the settings for the network to which the Macintosh computer is connected, and then specify the IP address and subnet mask.

- 4 Click the close button at the upper left corner of the dialog box.
  - When the "Save changes to the current configuration?" message appears, click the [Save] button.


#### **Adding a printer**

- 1 Select "HDD" - "Applications" - "Utility", and then double-click "Desktop Printer Utility" to open it.  
The New Desktop Printer window appears.
- 2 From "Printer", select "LaserWriter".
- 3 From "Create Desktop", select "Printer (LPR)".

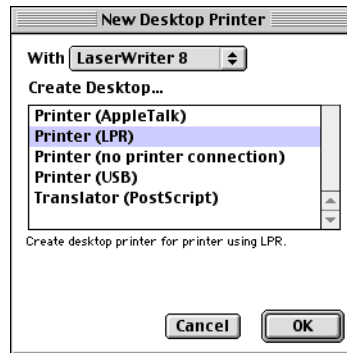

The Untitled window appears.

- 4 Click the [Change] button for "PostScript™ Printer Description (PPD) File".  
A window for selecting a PostScript printer description (PPD) file appears.

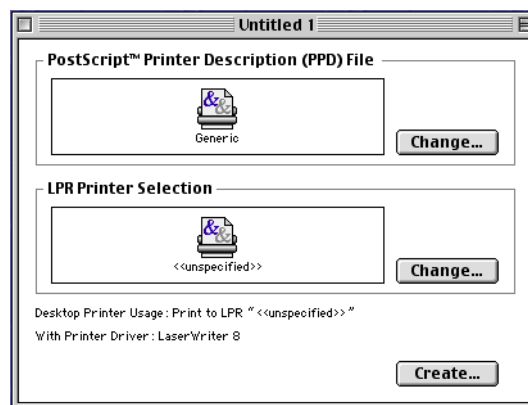

- 5 Select the applicable PPD file, and then click the [Select] button.  
The Untitled window appears again.
- 6 Click the [Change] button for "LPR Printer Selection".  
A window for entering the IP address appears.
- 7 In "Printer Address", enter the IP address of this machine, and then click the [OK] button.  
The Untitled window appears again.
- 8 Click the [Create] button.  
A window for saving the setting appears.
- 9 Enter a desktop printer name, and then click the [Save] button.  
An icon for the LPR printer is created on the desktop.

## 4.4 Uninstalling the printer driver

If it becomes necessary to delete the printer driver, for example, when you want to reinstall the printer driver, delete the driver according to the following procedure.

### 4.4.1 For Macintosh OS X

- 1 Open the [Printer Setup Utility] (or [Print Center]) located in "Applications" - "Utilities" of "Hard Disk".
- 2 Select the printer name to be deleted, and then click the [Delete] button.  
The selected printer is deleted.
- 3 Close the printer list.
- 4 Drag the following file, which is located in "Library" - "Printers" - "PPDs" - "Contents" - "Resources" - "en.lproj" of "Hard Disk", to the "Trash" icon.
  - "KONICAMINOLTAC353.gz"
- 5 Delete the unnecessary files from "Library" - "Printers".
  - Drag the "C353" folder, which is located in "Library" - "Printers" - "KONICA MINOLTA", to the "Trash" icon.
  - For Mac OS 10.2, drag all the "KONICA MINOLTA C353" folders, which are located in "Library" - "Printers" - "PPDPlugins", to the "Trash" icon.
- 6 Restart the computer.  
This completes the printer driver uninstallation.

### 4.4.2 For Macintosh OS 9.2

- 1 Drag the printer icon on the desktop to the "Trash" icon.
- 2 Drag PPD file "KONICA MINOLTAC353UVxxx.ppd", which is located in "System Folder" - "Extensions" - "Printer Descriptions" of "Hard Disk", to the "Trash" icon.  
The related printer driver files are deleted.
- 3 Restart the computer.  
This completes the printer driver uninstallation.



---



# 5

**Print functions of the printer  
drivers for Windows**


---

## 5 Print functions of the printer drivers for Windows

### 5.1 Printing operations

Print jobs are specified from the application software.

- 1 Open the data in the application, click the [File] button, and then click "Print" from the menu.
  - If the menu is not available, click the [Print] button.
- 2 Check that the printer name has been selected in "Printer Name" or "Select Printer".
  - If the printer is not selected, click to select the printer.

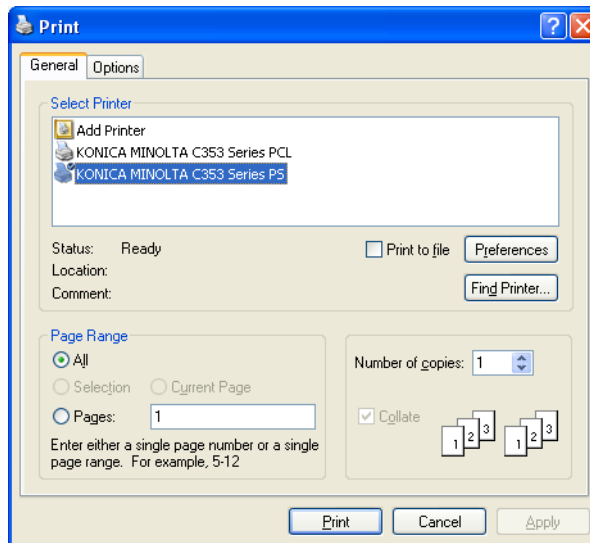

- The Print dialog box differs depending on the application.
- 3 Specify the print range and the number of copies to be printed.
  - 4 Click the [Properties] or the [Preferences] button to change the printer driver settings as necessary.
    - By clicking the [Properties] button or the [Preferences] button in the Print dialog box, you can specify the settings of each model in the printer driver dialog box that appears. For details, refer to ["Parameter details for the PCL/PS drivers" on page 5-7](#).
    - If the changed settings are not saved in the Print dialog box, the original settings are restored when the application is quit.
  - 5 Click the [Print] button.
 

The data indicator of this machine flashes.

## 5.2 Initializing the PCL/PS printer driver

When you have installed the printer driver, you need to change the initialization condition such as options, user authentication and account track functions and enable functions of the machine from the printer driver.




### Reminder

*If the model name, installed options, the User Authentication and Account Track functions are not specified on the Configure tab, the option functions cannot be used from the printer driver. When installing options, be sure to make the proper settings.*

### 5.2.1 How to display the Properties screen

- 1 Open the Printers window or Printers and Faxes window.
  - For Windows 2000/NT 4.0, click the [Start] button, click "Settings", and then click "Printers".
  - For Windows XP/Server 2003, click the [Start] button, and then click "Printers and Faxes".
  - For Windows XP/Server 2003, if "Printers and Faxes" does not appear in the [Start] menu, open the "Control Panel" from the [Start] menu, select "Printers and Other Hardware", and then click "Printers and Faxes".
  - For Windows Vista, click the [Start] button to open the "Control Panel", select "Hardware and Sound", and then click "Printers".
  - In Windows Vista, if Control Panel is displayed with Classic View, double-click "Printers".
- 2 Right-click the icon of the installed printer, and then click "Properties".

### 5.2.2 Configure tab

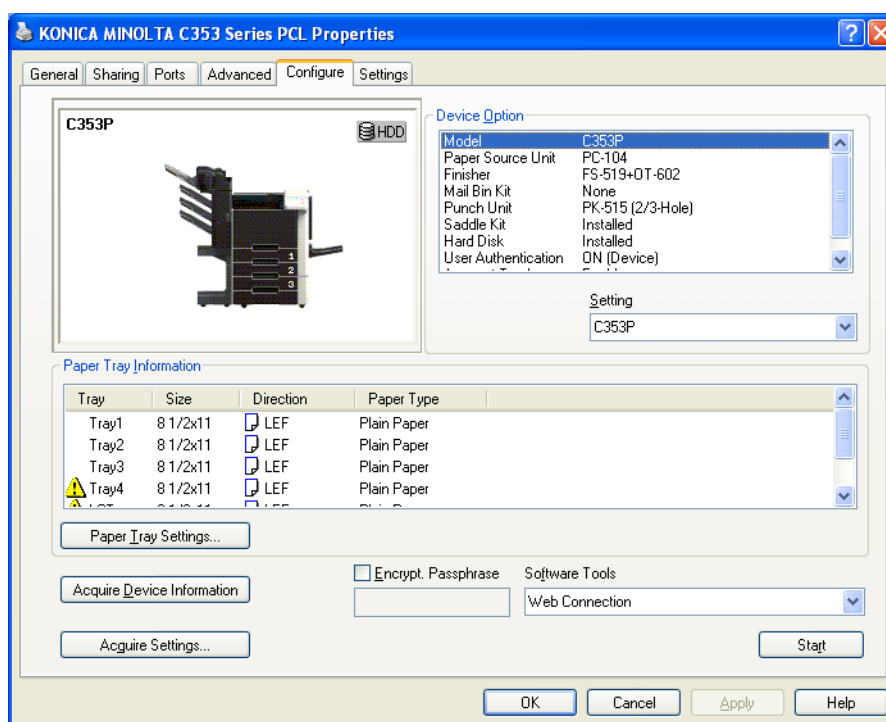

The functions of this machine can be used from the printer driver if the model name used, installed options, the User Authentication and Account Track functions are specified.



### Reminder

*Be sure to select a model and options from the "Device Option".*

*Match the "Encrypt. Passphrase" to that specified by "Driver Password Encryption Setting" of this machine.*

Item	Description
Device Option	Specifies the model name of this machine, options that are installed on this machine and the status of the User Authentication and Account Track functions. Specify the status of each item from the "Setting" dropdown list.
Paper Tray Information	Indicates the paper type specified for each tray. Click the [Paper Tray Settings] button to specify the settings for each paper tray.
Acquire Device Information	Communicates with this machine to read the status of the installed options.
Acquire Settings	Specifies the conditions of the connection destination to execute Acquire Device Information.
Encrypt. Passphrase	Enter the encryption passphrase when it is defined by the user through communication with this machine.
Software Tools	Starts up software tools such as PageScope Web Connection.


**Note**

The [Acquire Device Information] function cannot be used unless you are connected and able to communicate with this machine.

**Detail**

For the procedure for specifying "Encrypt. Passphrase" to be defined by the user, refer to ["Specifying a user-defined encryption passphrase" on page 7-30](#).

### 5.2.3 Settings tab

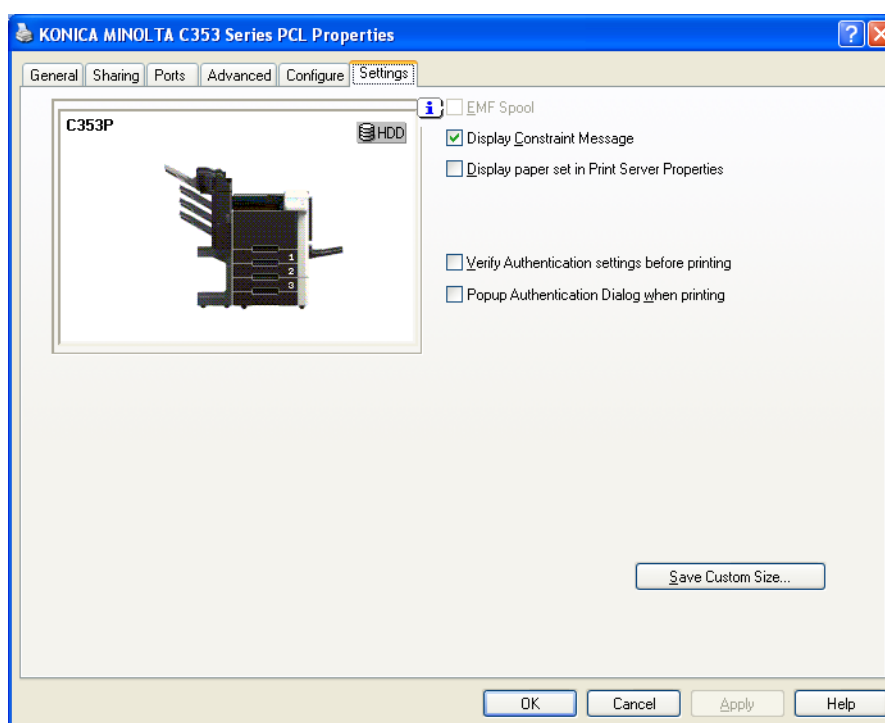

The default settings for displaying the confirmation messages or the dialog box for entering the authentication settings can be changed.

Item	Description
EMF Spool	Select this check box when meta file (EMF) spool is required for use in its own system environment.
Display Constraint Message	Displays a message when functions that cannot be specified at the same time were enabled from the printer driver.

Item	Description
Display paper set in Print Server Properties	Uses the paper that was added in [Server Properties] of the printer folder.
Verify Authentication settings before printing	Verifies the authentication settings for this machine before printing and displays a message if the settings are not compatible.
Popup Authentication Dialog when printing	Displays the User Authentication/Account Track dialog box when a print job is specified to enter a user name or a department name.
Save Custom Size	Saves the custom paper sizes.

**Note**

*"EMF Spool" and "Save Custom Size" are functions only for the PCL driver.*

## 5.2.4 Registration of the default settings

The settings specified for the functions of this machine when printing can only be applied while using the application. When the application is quit, the settings return to their default settings.

When registering the settings, change the printer driver basic settings (default settings).

- 1 Open the Printers window or Printers and Faxes window.
  - For Windows 2000/NT 4.0, click the [Start] button, click "Settings", and then click "Printers".
  - For Windows XP/Server 2003, click the [Start] button, and then click "Printers and Faxes".
  - For Windows XP/Server 2003, if "Printers and Faxes" does not appear in the [Start] menu, open the "Control Panel" from the [Start] menu, select "Printers and Other Hardware", and then click "Printers and Faxes".
  - For Windows Vista, click the [Start] button to open the "Control Panel", select "Hardware and Sound", and then click "Printers".
  - In Windows Vista, if Control Panel is displayed with Classic View, double-click "Printers".
- 2 Right-click the icon of the installed printer, and then click "Printing Preferences".
  - For Windows NT 4.0, right-click the icon of the installed printer, and then click "Document Defaults".

The Printer Driver Preference dialog box appears.
- 3 Change the settings of the function, and then click the [OK] button to exit from the function.
 

The changed settings are applicable when the printer is used by all of the application software.

**Detail**

*For the function and settings of the printer driver, refer to ["Parameter details for the PCL/PS drivers" on page 5-7](#).*

*The printer driver has the function to save the setting as "Favorite Setting". For details, refer to ["Common settings for the PCL/PS drivers" on page 5-6](#).*




## 5.4 Parameter details for the PCL/PS drivers

The print setting screen is the screen to set printer driver functions.

Click the [Properties] or [Preferences] button on the Print dialog box, or right-click the printer icon of the "Printers" window or the "Printers and Faxes" window, and then specify "Print Setting" ("Document Defaults" for Windows NT 4.0) to open it.

### 5.4.1 Basic tab

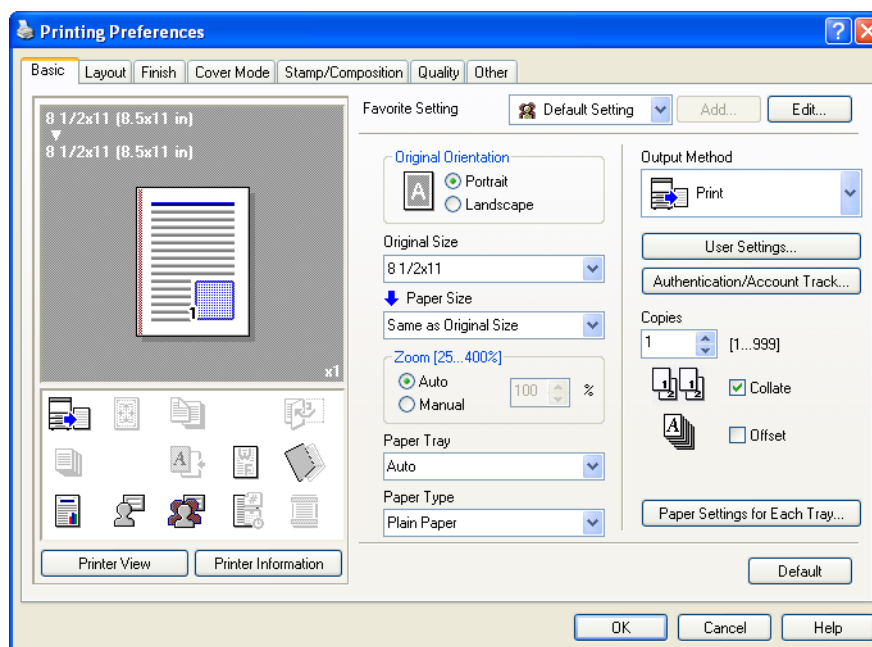

Function name	Option	Description
Original Orientation	Portrait, Landscape	Specifies the orientation of the original.
Original Size	Paper size registered as the standard paper size and non-standard paper size.	Specifies the size of the original document.
	Custom Size	Register the size.
Paper Size	Paper size registered as the standard paper size and non-standard paper size available on this machine.	Specifies the output paper size. The original is automatically enlarged or reduced to the size specified here when it differs from the "Original Size" setting and "Zoom" is set to "Auto".
	Custom Size	Custom sizes can be registered.
Zoom	25 to 400%	Specifies the enlargement and reduction ratio.
Paper Tray	Auto, Tray1-4, LCT, Bypass Tray	Selects the paper tray to be used. The selectable items differ depending on the options that are installed.
Paper Type	Paper type available on this machine.	Selects the paper type for printing. Can be changed only when the paper tray is set to "Auto". When the paper tray is not set to "Auto", the paper type registered by "Paper Settings for Each Tray" is effective.

Function name	Option	Description
Output Method	Print	Prints immediately.
	Secure Print	Saves the document to be printed in "Secure Print User Box" of this machine. When printing, entering the ID and password is required in the control panel of this machine. Select this option when printing highly confidential documents.
	Save in User Box	Saves the document to be printed in the user box on this machine.
	Save in User Box/Print	Saves the document in a box and prints at the same time.
	Proof Print	After one copy of the document has been printed, this machine stops printing temporarily. Select this option to avoid misprinting a large volume of print jobs.
[User Settings]	—	Specifies the ID and password, or the file name and box number when performing "Secure Print" or "Save in User Box".
[Authentication/Account Track]	—	Specifies the user name and password when performing user authentication, and the department name and password when performing account track on this machine.
Copies	1 to 999	Specify the number of copies to be printed.
Collate	ON/OFF	Specifies whether to print multiple copies by collating them.
Offset	ON/OFF	When printing multiple copies, shifts the output position of each set.
[Paper Settings for Each Tray]	Paper Type Setting	Selects the paper tray to be specified. The selectable items differ depending on the installed options.
	Paper Type	Selects the type of paper to be loaded onto the paper tray.



#### Note

The paper size "12 × 18" is equivalent to 304.8 × 457.2 mm which is slightly larger than A3.


To print on paper sizes other than the standard sizes, be sure to set the custom paper sizes first. You can register a non-standard size by selecting "Custom Size" from the paper size option or original size option.

When "W" is selected for each standard paper size, the data can be centered and printed. For example, if you want to center and print 8-1/2 × 11 size data on 11 × 17 size paper, specify "8 1/2 × 11W" as the paper size and "Bypass Tray" as the paper tray with the printer driver. To print, set 11 × 17 size paper on the specified tray of the machine ("Bypass Tray"), select [Paper Settings] - [Bypass] on the operation panel, specify "8-1/2 × 11W" for [Paper Size], and then specify "11 × 17" for [X Size] and [Y Size].

Specify "Duplex Side 2" to print on the back side of a page.

For details on Output Method, refer to ["Function detail description" on page 7-2](#).

## 5.4.2 Layout tab

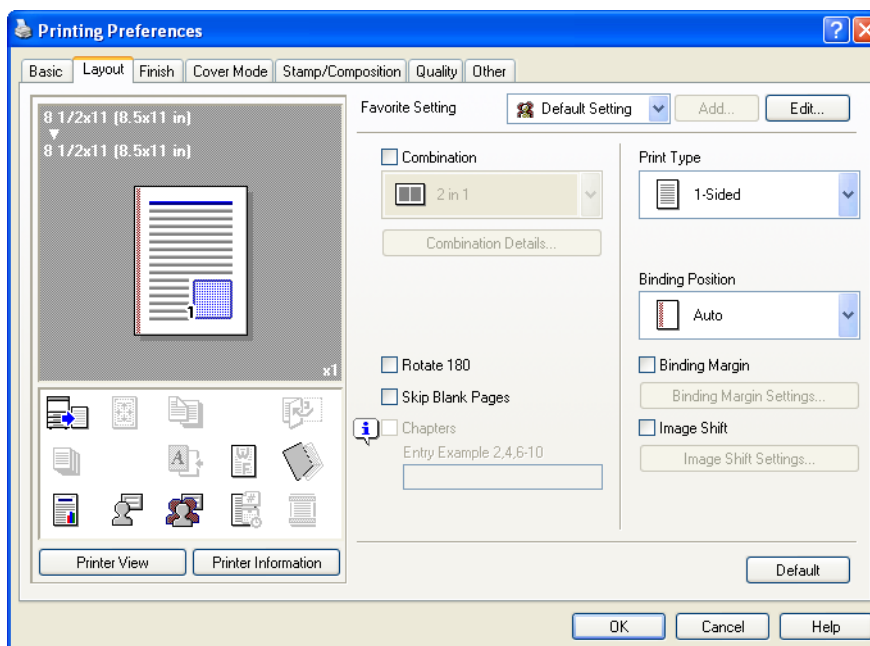

Function name	Option	Description
Combination	2 in 1, 4 in 1, 6 in 1, 9 in 1, 16 in 1, 2 × 2, 3 × 3, 4 × 4	Prints multiple pages on one page, or prints one sheet of an original document divided on multiple pages. [Combination Details] allows you to specify the page order and the presence of the border frame.
[Combination Details]	Combination	Selects the combination conditions.
	Layout Order	Specifies the layout order. The layout order can be specified when N in 1 is specified in "Combination".
	Border	Specifies the presence and type of border lines. The layout order can be specified when N in 1 is specified in "Combination".
	Overlap width line	Specifies the presence of a poster mode overlap. You can specify it when N × N is specified in "Combination".
Rotate 180	ON/OFF	Rotates 180° to print.
Skip Blank Pages	ON/OFF	Does not print blank pages in the data.
Chapters	ON/OFF	Specifies the page to be printed on the front side. You can specify it when the print type is "2-Sided" or "Booklet".
Entry (Page Number)	—	Specifies the page to be printed on the front side when "Chapters" is ON.
Print Type	1-Sided, 2-Sided, Booklet	Specifies duplex printing and booklet printing.
Binding Position	Auto, Left Bind, Right Bind, Top Bind	Specifies the binding position.
Binding Margin	ON/OFF	Specifies the binding margin. Click the [Binding Margin Settings] button to specify the margin values.
[Binding Margin Settings]	Shift Mode	Selects how to process the image to prepare the binding margin.
	Front Side/Back Side	Specifies the binding margin values. For 2-sided printing, clearing the "Same value for front and back sides" check box allows you to set different values between the front and back sides.
	Unit	Selects the measurement unit that specifies the size.
Image Shift	ON/OFF	Prints by shifting the entire print image. Click the [Image Shift Settings] button to specify the image shift values.

Function name	Option	Description
[Image Shift Settings]	Units	Selects the measurement unit that specifies the size.
	Front Side/Back Side	Specifies the shift direction and values. For 2-sided printing, clearing the "Same value for front and back sides" check box allows you to set different values between the front and back sides.


**Note**

"Combination" provides options "2 × 2, 3 × 3, 4 × 4" to print a sheet of document into multiple sheets of paper. The function is only for the PCL driver.

The "Skip Blank Pages" function is only for the PCL driver.

The positions of binding margins vary according to the "Binding Position" setting.

### 5.4.3 Finish tab

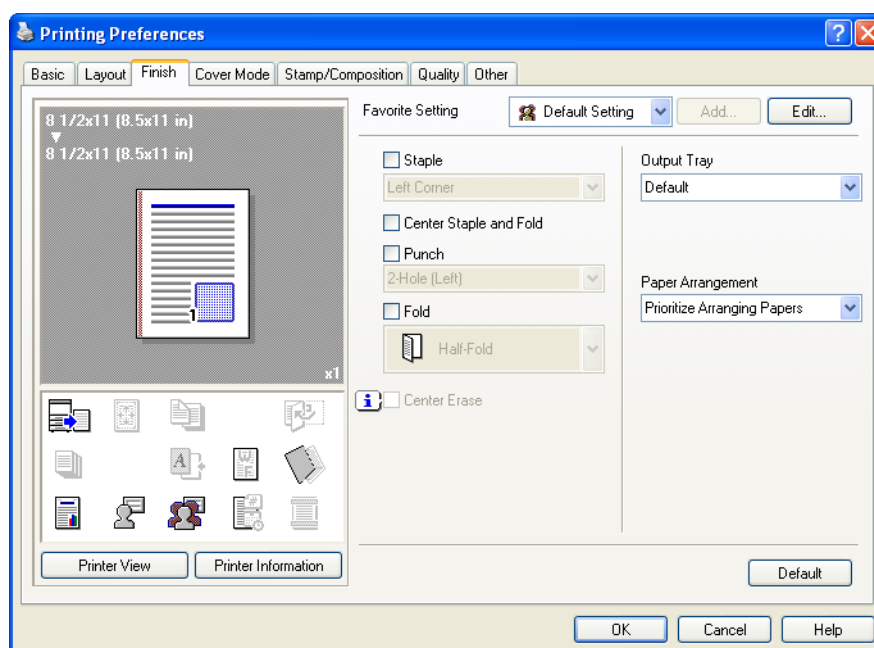

Function name	Option	Description
Staple	ON/OFF	Specifies stapling. From the drop-down list, specify the number of staples and the stapling position.
Center Staple and Fold	ON/OFF	Specifies to saddle stitch a printed document.
Punch	ON/OFF	Specifies hole punching. From the drop-down list, specify the number of punches and the position.
Fold	ON/OFF	Specifies folding.
Center Erase	ON/OFF	Does not print on the center fold line with Center Staple and Fold.
Output Tray	Default, Tray1-3, Bin 1-6	Specifies the tray where to output the printed pages. The selectable items differ depending on the options that are installed.
Paper Arrangement	Prioritize Arranging Papers, Prioritize Productivity	Specifies the method for adjusting the binding position for 2-sided print. The binding position is adjusted after receiving all data for finishing priority. The data is received and printed for productivity priority.

**Note**


"Staple", "Center Staple and Fold", and "Fold" functions are available only if the optional finisher is installed.

The "Punch" function is available only when the punch kit is installed on the optional finisher.

The "fold" function is available only when optional finisher FS-519 and saddle kit are installed.

The "Center Erase" function is available only when optional finisher FS-609 is installed and the "Center Staple and Fold" function is specified.


#### 5.4.4 Cover Mode tab

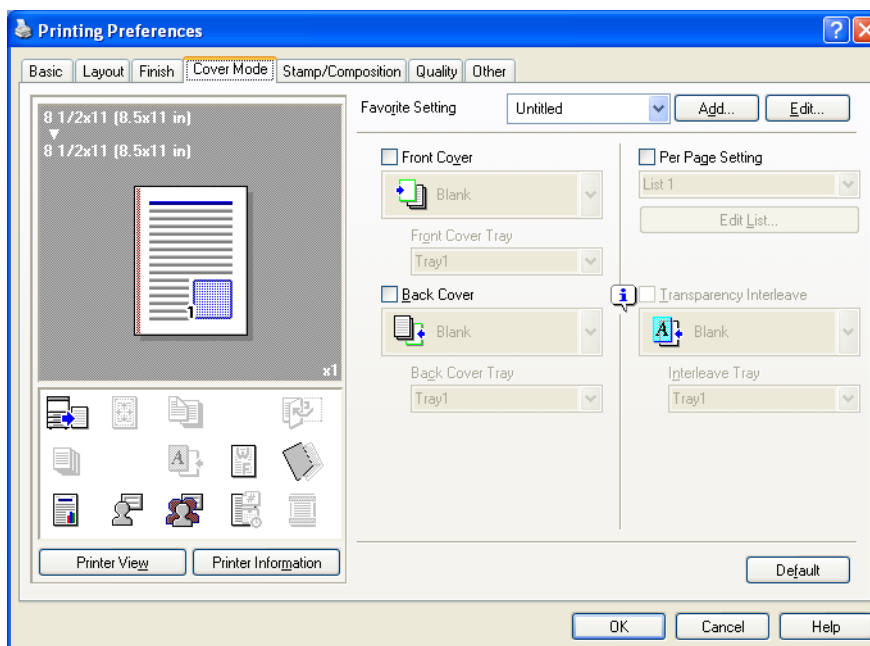

Function name	Option	Description
Front Cover	ON/OFF, Blank/Print	Attaches a front cover page. You can specify it when "Auto" is not selected for the paper tray.
Front Cover Tray	Tray1-4, LCT, Bypass Tray	Selects the paper tray for the cover. The selectable items differ depending on the options that are installed.
Back Cover	ON/OFF, Blank/Print	Attaches a back cover page. You can specify it when "Auto" is not selected for the paper tray.
Back Cover Tray	Tray1-4, LCT, Bypass Tray	Selects the paper tray for the back cover. The selectable items differ depending on the options that are installed.
Per Page Setting	ON/OFF	Inserts paper between pages and switches the paper and tray for each page. [Edit List] allows you to create a list by setting conditions by page.

Function name	Option	Description
[Edit List]	List Name	Selects the name of the list to be edited. The settings are listed.
	[Edit List Name..]	Renames a list.
	[Up]/[Down]	Moves the selected condition row up or down. Move the rows so that the page numbers are arranged in ascending order.
	[Add]	Adds a condition. Conditions are specified in "Add/Delete".
	[Delete]	Deletes the selected condition row.
	Page Number	Specifies the page numbers. To specify multiple pages, separate each page number with a comma or specify the range using a hyphen.
	Print Type	Specifies the print type from the "Change Setting" drop-down list.
	Paper Tray	Specifies the paper tray used for printing from the "Change Setting" drop-down list.
	Staple	Specifies the number of staples and the stapling position from the "Change Setting" drop-down list.
Transparency Interleave	ON/OFF, Blank	Outputs and inserts interleaves when printing overhead projector transparencies. You can specify it when "Transparency" is selected for the paper type.
Interleave Tray	Tray1-4, LCT	Selects the paper tray for the transparency interleaves. The selectable items differ depending on the options that are installed.

#### 5.4.5 Stamp/Composition tab

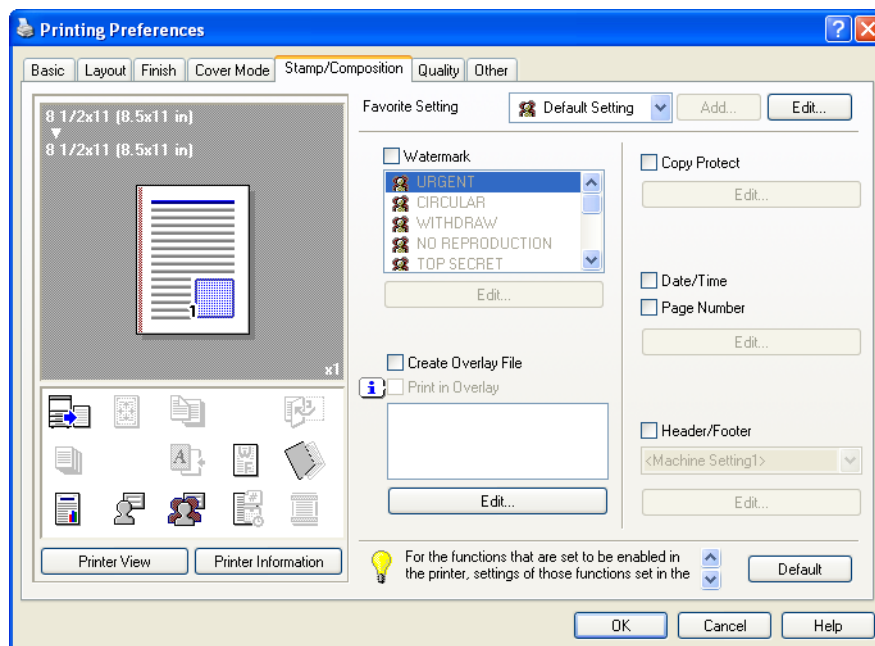

Function name	Option	Description
Watermark	ON/OFF	Prints a watermark (text stamp) on the page being printed. [Edit] allows you to add, change and delete Watermarks.
[Edit]	—	For details, refer to <a href="#">"Editing watermark" on page 5-14</a> .
Create Overlay File	ON/OFF	Create overlay data by checking this to print the original.

Function name	Option	Description
Print in Overlay	ON/OFF	Prints an original document on top of an overlay data that was created separately. [Edit] allows you to change the overlay printing method.
[Edit]	[Browse Files..]	Loads an overlay file.
	[Delete]	Deletes the selected overlay.
	Pages	Specifies the pages to be printed.
	Overwrite	Specifies the sequence for printing the overlay on top of the original document.
Copy Protect	ON/OFF	Prints a special pattern to prevent copying. [Edit] allows you to specify items, positions and the composition to be printed.
[Edit]	—	For details, refer to <a href="#">"Editing copy protect" on page 5-15</a> .
Date/Time	ON/OFF	You can print the date and time on a document. [Edit] allows you to specify items, pages and positions to be printed.
Page Number	ON/OFF	Prints the page number. [Edit] allows you to specify items, pages and positions to be printed.
[Edit]	—	For details, refer to <a href="#">"Editing date/time and page number" on page 5-16</a> .
Header/Footer	Machine Setting 1-20	Print the header and footer. Select header/footer information from the list of the printer setting. [Edit] allows you to specify items and pages to be printed.
[Edit]	Distribution Control Number	Prints the number of copies in the header and footer when printing multiple copies.
	[Edit]	Specifies the distribution control number conditions.
	Pages	Specifies the pages to be printed.
	Text Color	Specifies the text color used for printing.

**Note**

*For Windows Vista x64, "Watermark" cannot be selected with any of the following functions at the same time.*

*[User Authentication]*


*[Account Track]*

*[Per Page Setting]*

*[Verify Authentication settings before printing]*

*[Popup Authentication Dialog when printing]*

## Editing watermark

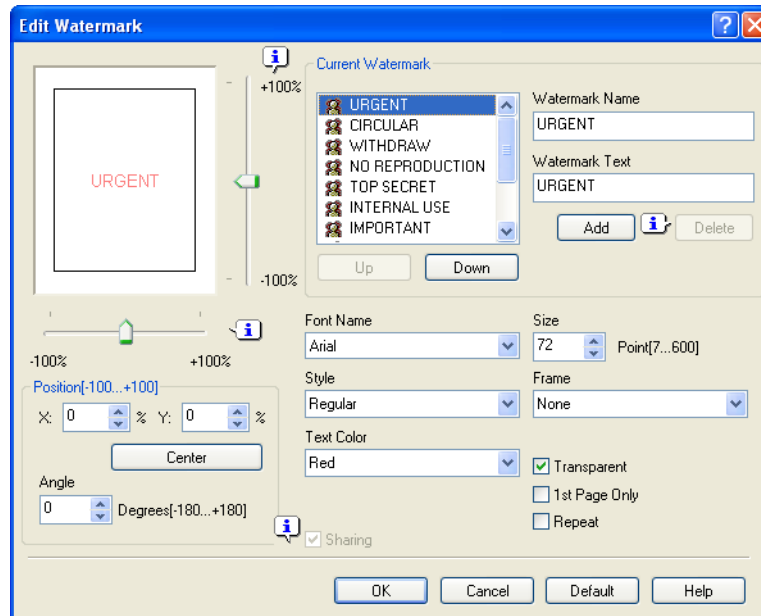

**Watermark Name:** Enter the name of the watermark.

**Watermark Text:** Enter the text to be printed as the watermark.

**[Add]:** Click to create a new watermark.

**[Delete]:** Click to delete the selected watermark.

**Position:** Specifies the vertical and horizontal positions. The watermark position can also be specified by using the horizontal and vertical sliders in the dialog box.

**Angle:** Specifies the watermark print angle.

**Font Name:** Specifies the font.

**Size:** Specifies the size.

**Style:** Specifies the font style.

**Frame:** Specifies the frame style.

**Text Color:** Specifies the watermark text color.


**Transparent:** Prints the watermark as a transparent image.

**1st Page Only:** Prints the watermark on the first page only.

**Repeat:** Prints the watermark repeatedly on a single page.

**Sharing:** Specifies whether to register the watermark as public or private.

## Editing copy protect

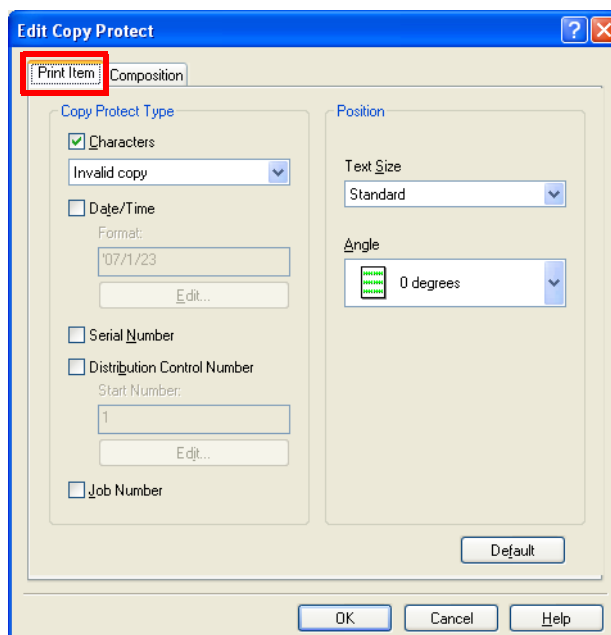

**Characters:** Embeds the selected character string in a pattern. A preregistered character string (common stamp) or a character string registered on this machine (registered stamp) can be specified.

**Date/Time:** Embeds the selected date and time in a pattern. By clicking the [Edit] button under "Format", you can specify the display type or the time format.


**Serial Number:** Embeds the serial number of this machine in a pattern.

**Distribution Control Number:** Embeds the copy number in a pattern when printing multiple copies. By clicking the [Edit] button under "Start Number", you can specify the start number or the display type.

**Job Number:** Embeds the print job number in a pattern for documents that are automatically paginated.

**Text Size:** Specifies the text size of a pattern.

**Angle:** Specifies the pattern angle.

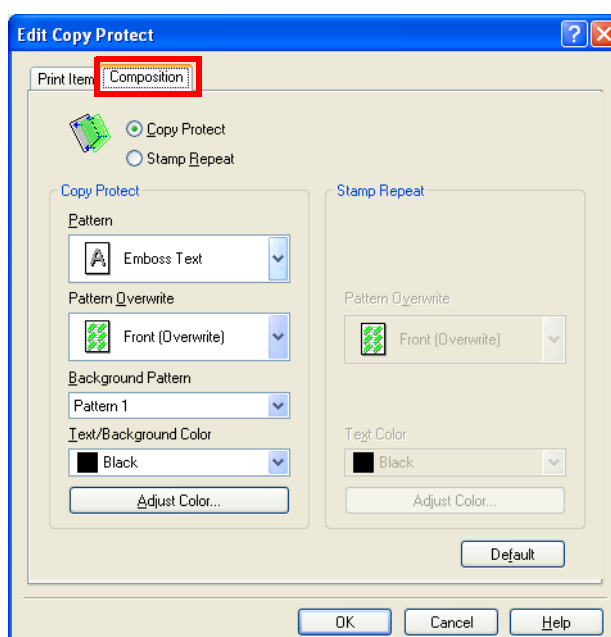

**Copy Protect:** Embeds a hidden pattern that appears on copies.

**Stamp Repeat:** Prints a text pattern.

The following settings are available when "Copy Protect" is selected.

Pattern: Specifies the embedding method of a pattern.

Pattern Overwrite: Specifies the order for printing a pattern on the original.

Background Pattern: Specifies the pattern background.

Text/Background Color: Specifies the color of the pattern. The density and color contrast can be specified by clicking the [Adjust Color] button.

The following settings are available when "Stamp Repeat" is selected.

Pattern Overwrite: Specifies the order for printing a pattern on the original.

Text Color: Specifies the color of the pattern. The density and color contrast can be specified by clicking the [Adjust Color] button.




#### Note

*"Copy Protect" and "Stamp Repeat" cannot be selected at the same time.*

*Different setting items are available for "Copy Protect" and "Stamp Repeat".*

### Editing date/time and page number

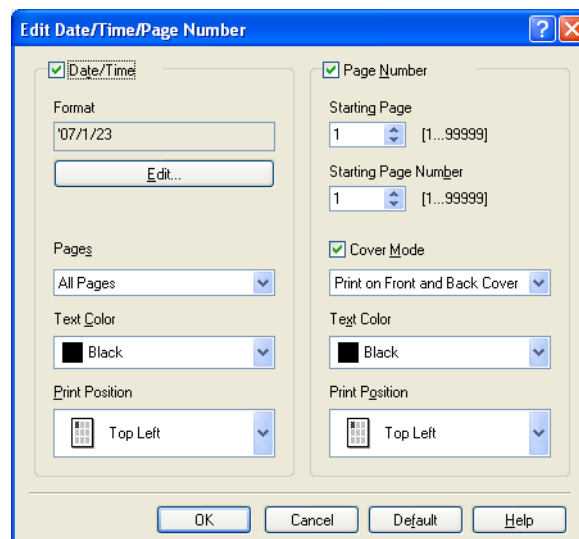

Format: Displays the format for the date and time to be printed. The display type or the time format can be specified by clicking the [Edit] button.

Pages: Specifies the pages to print the date and time.

Text Color: Specifies the text color used for printing.

Print Position: Specifies the print position.

Starting Page: Specifies the page to start printing the page number.


Starting Page Number: Specifies the start number for printing the page number.

Cover Mode: If cover pages are attached, specifies whether to print the page number on the front cover page or the back cover page.

Text Color: Specifies the text color used for printing.

Print Position: Specifies the print position.

### 5.4.6 Quality tab

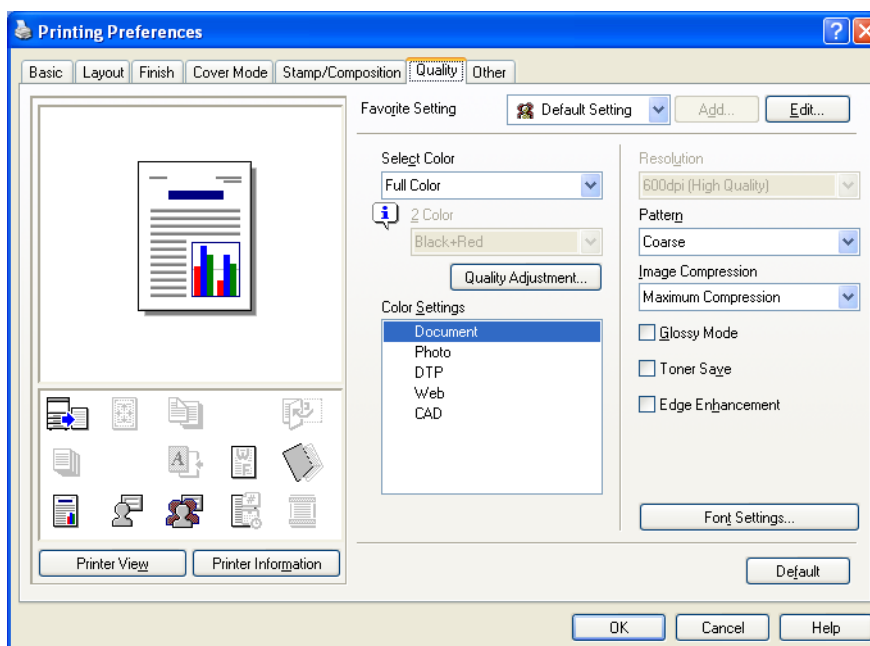

Function name	Option	Description
Select Color	Full Color, Gray Scale, 2 Color	Specifies the color to be printed.
Quality Adjustment	—	Adjusts the image quality. You can select "Simple" to adjust entire documents or "Detail" to adjust the text, photos, figures, tables, and graphs in the original.
Color Settings	Document, Photo, DTP, Web, CAD	Prints with a quality suitable for the selected original document. Document: Prints with a quality suitable for documents with many characters. Photo: Prints with a quality suitable for photos. DTP: Prints with a quality suitable for documents produced using DTP. Web: Prints with a quality suitable for Web page printing. CAD: Prints with a quality suitable for CAD data printing.
Resolution	—	Indicates the resolution. You may not change this item.
Pattern	Fine, Coarse	Specifies the graphic pattern details.
Image Compression	Best Quality (quality priority), Maximum Compression (speed priority)	Specifies the compression ratio for a graphic image.
Glossy Mode	ON/OFF	Prints using a gloss finish.
Toner Save	ON/OFF	Controls the print density and saves the toner consumption.
Edge Enhancement	ON/OFF	Highlights the edge of characters, graphics and images to make small characters more visible. You can specify it when "Gray Scale" is selected for the color.
Font Settings	—	Selects whether to use TrueType fonts or the printer fonts when printing. Selects whether the fonts are downloaded to the printer as bitmap or outline.




#### Note

"2 Color" option of the "Select Color" is only for the PCL driver. "2 Color" option allows you to specify a combination of two colors.

The "Pattern" and "Image Compression" functions are only for the PCL driver.

The PS driver allows you to manage the profile through "Quality Adjustment". For details, refer to ["ICC profile settings" on page 7-34](#).

## 5.4.7 Other tab

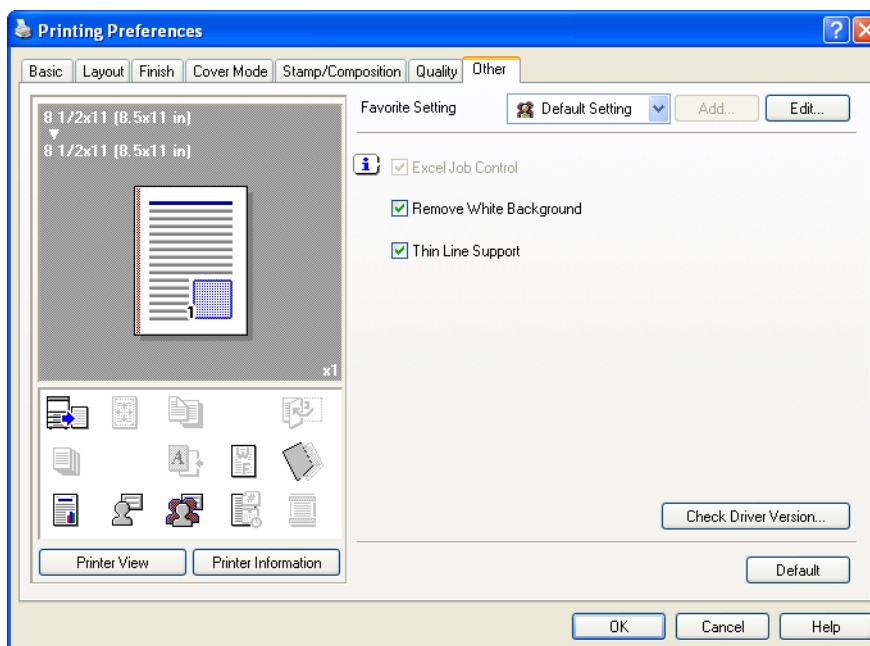

Function name	Option	Description
Excel Job Control	ON/OFF	When multiple Microsoft Excel sheets with different page settings are printed at one time, the sheets may be separated into single-sheet jobs depending on the data they contain. When this function is selected, job separation is minimized.
Remove White Background	ON/OFF	When an overlay file is printed on top of Microsoft PowerPoint data, white areas are removed so that the white background of the PowerPoint data does not hide the overlay file. When the check is cleared, the background is not removed and is printed as is in the original data.
Thin Line Support		When printing the document reduced, thin line may be blurred. Select this function to prevent disappearing the thin line.
Check Driver Version	—	Displays the printer driver version information.

**Note**

"Remove White Background" and "Thin Line Support" functions are is only for the PCL driver.

"Excel Job Control" and "Remove White Background" settings are not available for Windows XP Professional x64, Windows Vista x64 and Windows Server 2003 x64.

"Excel Job Control" can be changed only when the printer driver setting dialog is displayed in the "Printers" ("Printers and Faxes" for Windows XP/Server 2003) window.




**Print functions of the printer  
driver for Macintosh**

## 6 Print functions of the printer driver for Macintosh

### 6.1 Printing operations for OS X

Print jobs are specified from the application software.

- 1 Open the data in the application, click the [File] button, and then click "Print" from the menu.
  - If the menu is not available, click the [Print] button.
 The Print dialog box appears.
- 2 Check that an appropriate printer name has been selected by the "Printer".
  - If the selected printer is not appropriate, select an appropriate printer.
  - If the printer does not appear, select the printer with [Printer Setup Utility] or [Print Center]. For details, see ["Selecting and connecting the printer \(OS 10.4\)" on page 4-4](#), and ["Selecting and connecting the printer \(OS 10.2 and 10.3\)" on page 4-9](#).
  - The Print dialog box differs depending on the application.

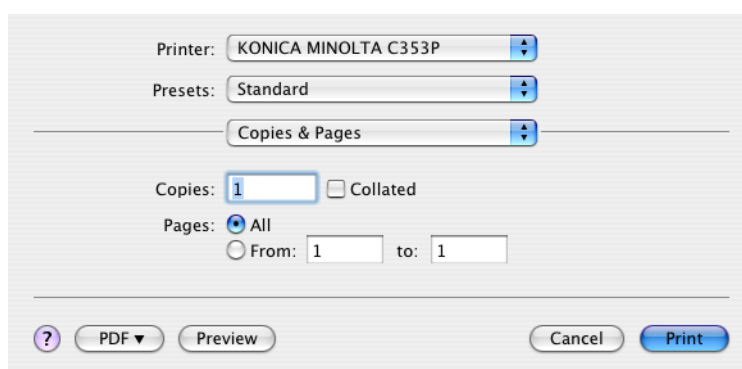

- 3 Specify the print range and the number of copies to print.
  - When you change the "Copies & Pages" menu, another setting dialog box of the printer driver appears and allows you to specify various functions. For details, refer to ["Parameter details for the OS X printer driver" on page 6-7](#).
- 4 Change the setting dialog box to change the printer driver settings as necessary.
- 5 Click the [Print] button.
 

The data indicator of this machine flashes.



#### Note

*The printer driver setting changed on the Print dialog box is not saved and the original settings are restored when the application is quit.*

## 6.2 Default settings for the OS X printer driver

When you have installed the printer driver, you need to change the initialization condition such as options before daily printing and enable functions of this machine from the printer driver.




### Reminder

*If the model name and installed options are not specified on the Printer Info dialog box, the option functions cannot be used from the printer driver. When installing options, be sure to make the proper settings.*

### 6.2.1 Options

- 1 Open the [Printer Setup Utility] (or [Print Center]) located in "Applications" - "Utilities" of "Hard Disk", and then select this machine.
- 2 From the [Printer] menu, select "Show Info".  
The "Printer Info" dialog box appears.
- 3 Select "Installable Options".
- 4 Select the model name and options that are installed on this machine.

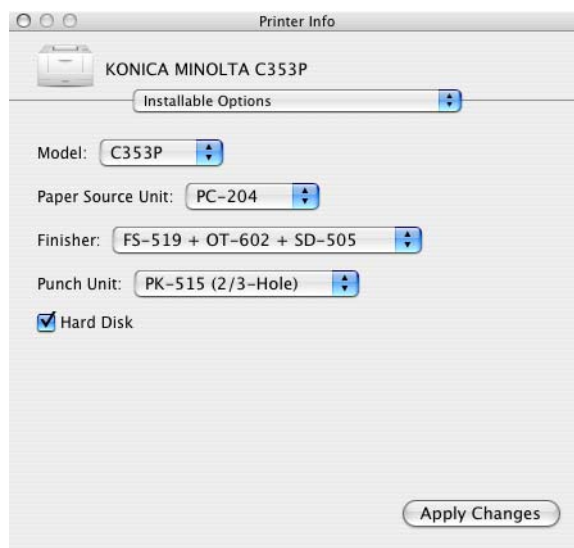

- 5 Click the [Apply Changes] button, and then close the "Printer Info" dialog box.


### 6.2.2 Registration of the default settings

The settings specified for the functions of this machine when printing can only be applied while using the application. When the application is quit, the settings return to their default settings.


To register the settings, save the settings in the printer driver setting.

For Mac OS X, you can register the paper setting as the default setting. To set other print functions, save the setting with the "Presets" function and use them by calling them as required.

In the "Page Setup" dialog box, select "Settings" and save the settings by selecting "Save as Default".

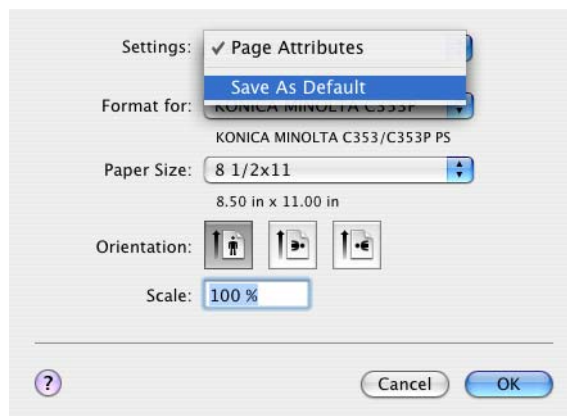

In the "Print" dialog box, select "Presets" and save the printer driver functions by selecting "Save As". When use this setting, select from "Presets".

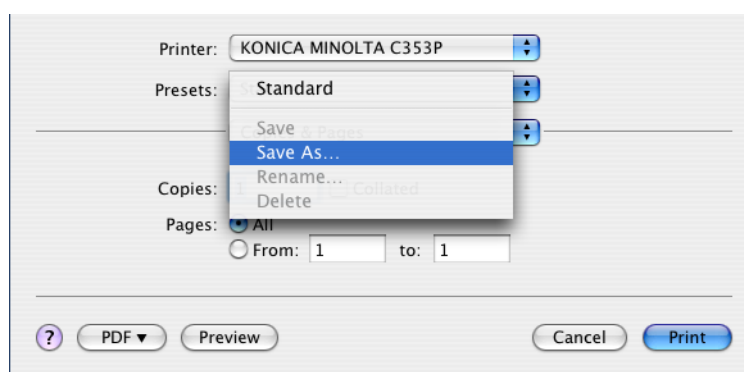


#### Detail

For the function and settings of the printer driver, refer to ["Parameter details for the OS X printer driver" on page 6-7](#).

### 6.3 Common settings for the OS X printer driver

The following describes the common settings that are displayed by the specific operations (Output Method, Layout/Finish, Paper Tray/Output Tray, Cover Sheet/OHP Interleave, Per Page Setting, Stamp/Composition and Quality) for this machine specified in the Print dialog box.

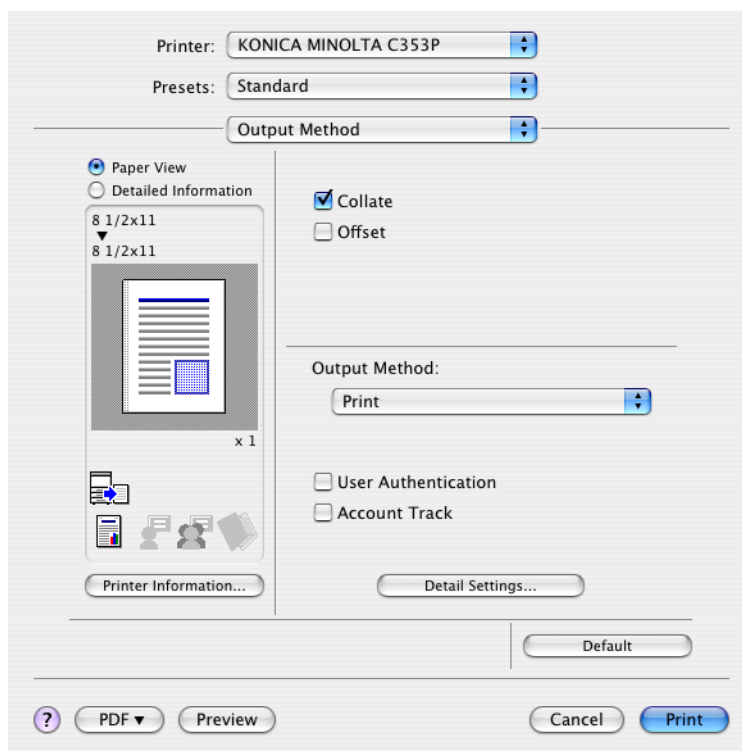

Item	Description
Paper View	A preview of the page layout as specified in the current settings is displayed and a preview image of the print job can be checked.
Detailed Information	Shows the current settings with text.
Printer Information	Displays the status of the installed options.
Default	Click this button to return to the default setting.
? (Help)	Click this button to display the help for each item on the currently displayed dialog box.
Cancel	Click this button to cancel any settings that have been changed and close the dialog box.
Print	Click this button to enable the changed settings for printing.




#### Detail

Click the [Acquire Device Information] button on the Printer Info dialog box to communicate with this machine and read the status of the settings specified on this machine. This function is not available unless the connection is enabled for communications with the machine.

## 6.4 How to add a custom size for the OS X printer driver

To print on paper sizes other than the standard sizes, register the custom paper size.

- 1 In the [File] menu, select "Page Setup" (or "Paper Setup").
- 2 For Mac OS 10.4, select "Manage Custom Sizes" from the "Paper Size" list.
  - For Mac OS 10.2/10.3, select "Custom Paper Sizes" from "Settings".
- 3 Click the [+] button (OS 10.4) or the [Add] button (OS 10.2/10.3).
- 4 Enter the paper size name.
- 5 Specify settings for the following:
  - Page size (paper size): Specifies the paper size.
  - Printer Margins: Specifies the paper margins.

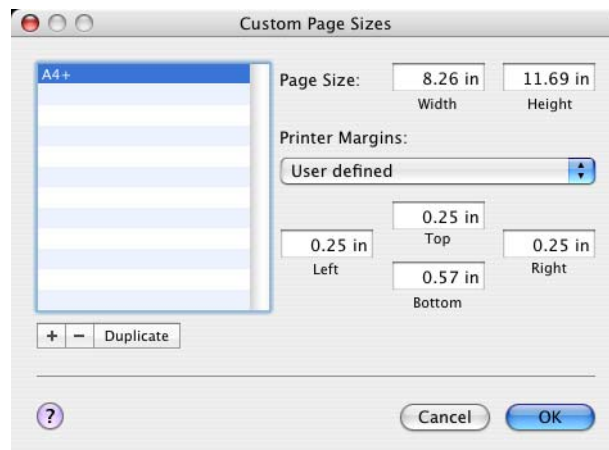

- 6 For Mac OS 10.4, continue with step 7.
  - For Mac OS 10.2/10.3, click the [Save] button.

- 7 Click the [OK] button.


This saves the custom paper size, which can be selected from the Paper Size drop-down list that is displayed when "Page Attributes" is selected.

## 6.5 Parameter details for the OS X printer driver

The printer driver functions are specified in the following dialog boxes: In "Page Attributes" from the Page Setup dialog box; In "Output Method", "Layout/Finish", "Paper Tray/Output Tray", "Cover Sheet/OHP Interleave", "Per Page Setting", "Stamp/Composition", and "Quality" from the Print dialog box.

### 6.5.1 Page Attributes

In the [File] menu, select "Page Setup" (or "Paper Setup").

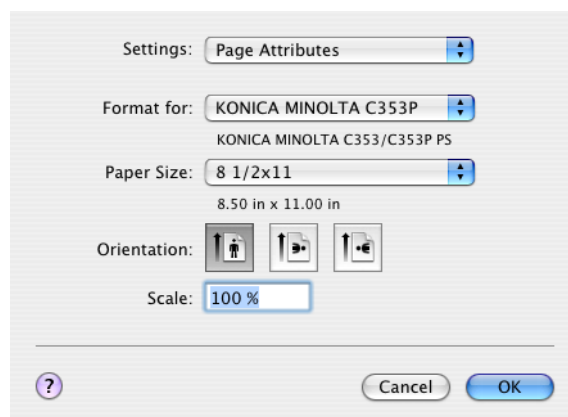

Function name	Option	Description
Paper Size	Paper size registered as the standard paper size and custom paper size available on this machine.	Specifies the output paper size.
Orientation	Portrait, Landscape	Specifies the orientation of the original.
Scale	1 to 400%	Specifies the enlargement and reduction ratio.



#### Note


The paper size "12 × 18" is equivalent to 304.8 × 457.2 mm which is slightly larger than A3.

To print on paper sizes other than the standard sizes, be sure to set the custom paper sizes in "Custom Size Settings" first. For details on registering a non-standard paper size, refer to ["How to add a custom size for the OS X printer driver" on page 6-6](#).

When "W" is selected for each standard paper size, the data can be centered and printed. For example, if you want to center and print 8-1/2 × 11 size data on 11 × 17 size paper, specify "8 1/2 × 11W" as the paper size and "Bypass Tray" as the paper tray with the printer driver. To print, set 11 × 17 size paper on the specified tray of the machine ("Bypass Tray"), select [Paper Settings] - [Bypass] on the operation panel, specify "8-1/2 × 11W" for [Paper Size], and then specify "11 × 17" for [X Size] and [Y Size].


### 6.5.2 Copies & Pages

In the [File] menu, select "Print".

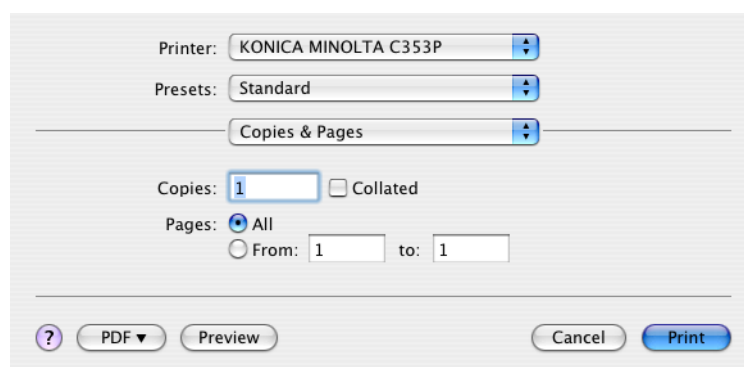

Function name	Option	Description
Copies	1 to 999	Specifies the number of copies to be printed.
Collated	ON/OFF	Do not specify this function. Select "Output Method", and then specify "Collate".
Pages	—	Specifies the print range to print.

### 6.5.3 Output Method

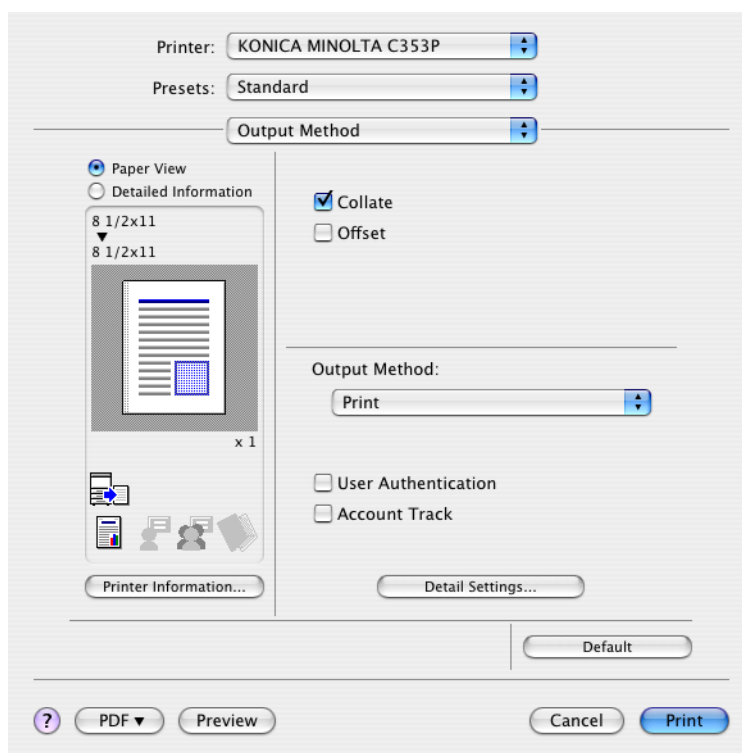

Function name	Option	Description
Collate	ON/OFF	Specifies whether to print multiple copies by collating them.
Offset	ON/OFF	When printing multiple copies, shifts the output position of each set.
Output Method	Print:	Prints immediately.
	Secure Print	Saves the document to be printed in "Secure Print User Box" of this machine. When printing, entering the ID and password is required in the control panel of this machine. Select this option when printing highly confidential documents.
	Save in User Box	Saves the document to be printed in the user box on this machine.
	Save in User Box and Print	Saves the document in a box and prints at the same time.
	Proof Print	After one copy of the document has been printed, this machine stops printing temporarily. Select this option to avoid misprinting a large volume of print jobs.
[User Authentication]	—	If the "User Authentication" settings have been specified on this machine, you must specify a user name and password.
[Account Track]	—	If the "Account Track" settings have been specified on this machine, you must specify a division name and password.

Function name	Option	Description
[Detail Settings]	—	Displays the functions for which the setting details have been specified.



#### Detail


For details on Output Method, refer to ["Function detail description" on page 7-2](#).

#### Checking the Output Method setting details

By clicking the [Detail Settings] button, the "Output Method" functions for which detail settings have been specified are shown.

The settings can be shown by clicking the [Expand All] button.

By selecting a function and clicking the [Settings] button, the dialog box for specifying the detailed settings for the selected function appears.

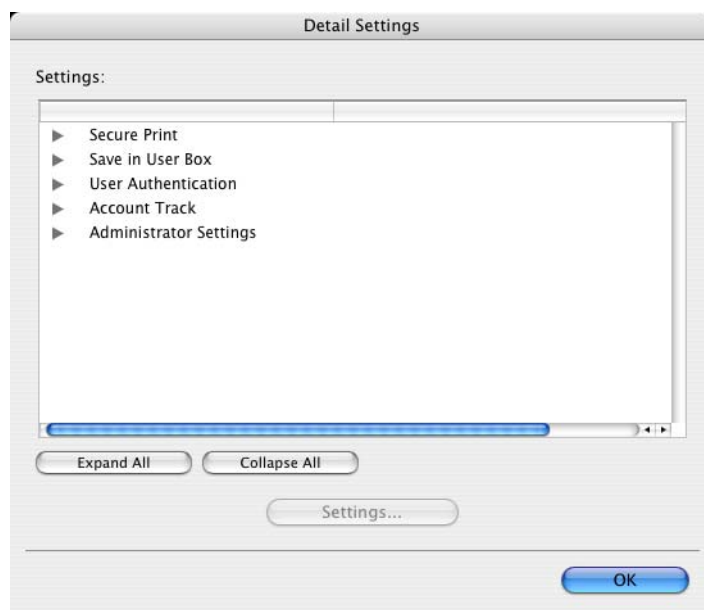


**Secure Print:** This is the same dialog box that appears when you select "Output Method" and specify "Secure Print".

**Save in User Box:** This is the same dialog box that appears when you select "Output Method" and specify "Save in User Box" or "Save in User Box and Print".

**User Authentication:** This is the same dialog box that appears when you select "Output Method" and select "User Authentication" checkbox.

**Account Track:** This is the same dialog box that appears when you select "Output Method" and select "Account Track" checkbox.

**Administrator Settings:** Displays a dialog box to set an input dialog for authentication setting and change the encryption key.

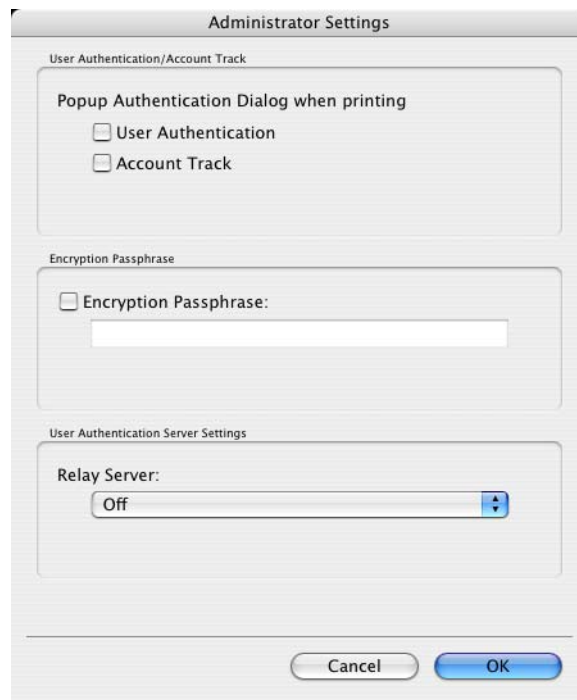

Popup Authentication Dialog when printing: Displays the User Authentication and Account Track dialog box when a print job is specified and checks entry of a user name and a department name each time.

Encryption Passphrase: Specifies an encryption passphrase to use user-defined key to communicate with this machine. The encryption key for the entered characters is automatically created, which is to be used for communication with this machine.



**Note**

Match the "Encryption Passphrase" to that specified by "Driver Password Encryption Setting" of this machine.





**Detail**

For the procedure for specifying "Encryption Passphrase" to be defined by the user, refer to ["Specifying a user-defined encryption passphrase" on page 7-30](#).

## 6.5.4 Layout/Finish

You can switch between the Layout dialog box and the Finish dialog box.

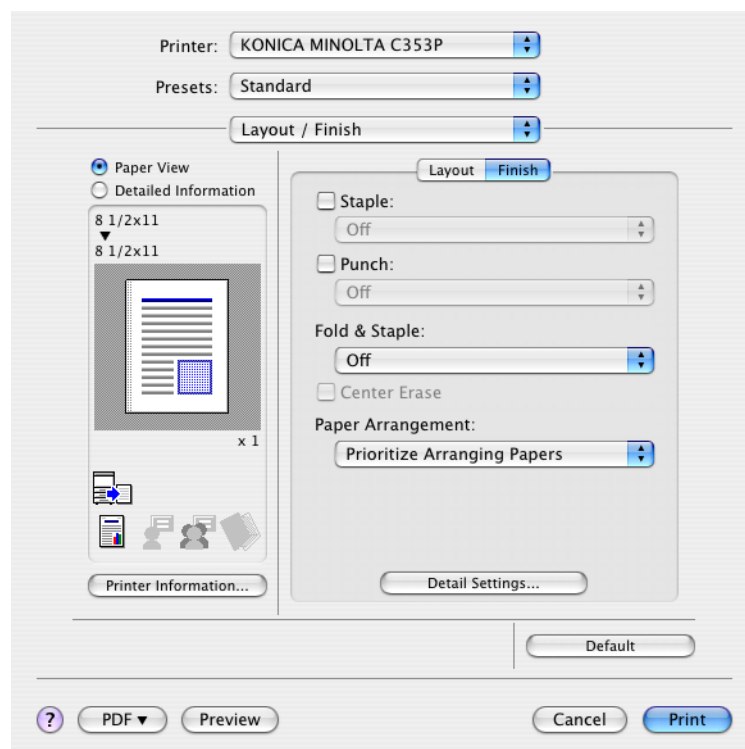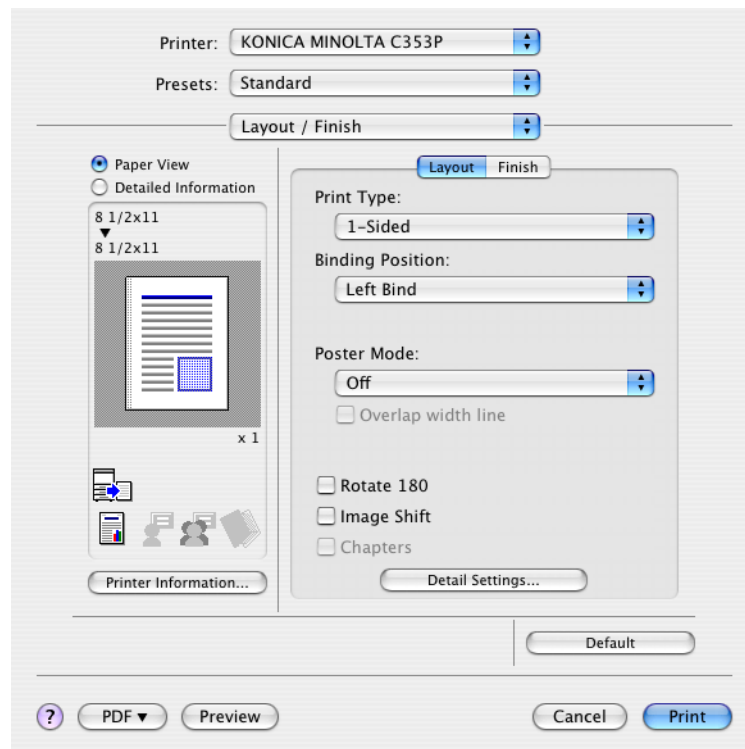

### Note

When printing a job that contains pages of different sizes and orientations with the "Poster Mode" setting specified, images may be missing or overlapping when the document is printed.

Function name	Option	Description
Print Type	1-Side, 2-Sided, Booklet	Specifies duplex printing and booklet printing.
Binding Position	Left stitch, right stitch, top stitch	Specifies the binding position.
Poster Mode	2 × 2, 3 × 3, 4 × 4	Prints one sheet of an original divided on multiple pages. "Poster Mode Overlap" allows you to specify the presence of the border frame.
Overlap width line	ON/OFF	Specifies the presence of a poster mode overlap. This setting can be specified when the "Poster Mode" setting is other than "OFF".
Rotate _180	ON/OFF	Rotates 180° to print.
Image Shift	ON/OFF	Prints by shifting the entire print image. The screen is displayed when the setting is enabled and allows you to set the detail of the shift length.
	Front Side/Back Side	Specifies the shift direction and values. For 2-sided printing, clearing the "Same Value for Front and Back Sides" check box allows you to set different values between the front and back sides.
Chapters	ON/OFF	Specifies the page to be printed on the front side. The screen is displayed when the setting is enabled and allows you to set the page. You can specify it when the print type is "2-sided" or "Booklet".
	Page Number	Specifies the page to be printed on the front side when "Chapters" is selected.
Staple	ON/OFF	Specifies stapling. From the drop-down list, specify the number of staples and the stapling position.
Punch	ON/OFF	Specifies hole punching. From the drop-down list, specify the number of punches and the position.
Fold & Staple	Off, Center Staple & Fold, Half-Fold	Specifies to half fold and center staple.
Center Erase	ON/OFF	Does not print on the center fold line with Center Staple and Fold.
Paper Arrangement	Finishing Priority, productivity priority	Specifies the method for adjusting the binding position for 2-sided print. The binding position is adjusted after receiving all data for finishing priority. When Productivity Priority is specified, the machine processes data reception and printing concurrently.


**Note**

*"Staple" and "Saddle Stitch/Fold" functions are available only if the optional finisher is installed.*

*The "punch" function is available only if the punch kit is installed on the optional finisher.*

*The "Center Erase" function is available only when optional finisher FS-609 is installed and the "Center Staple and Fold" function is specified.*

## 6.5.5 Paper Tray/Output Tray

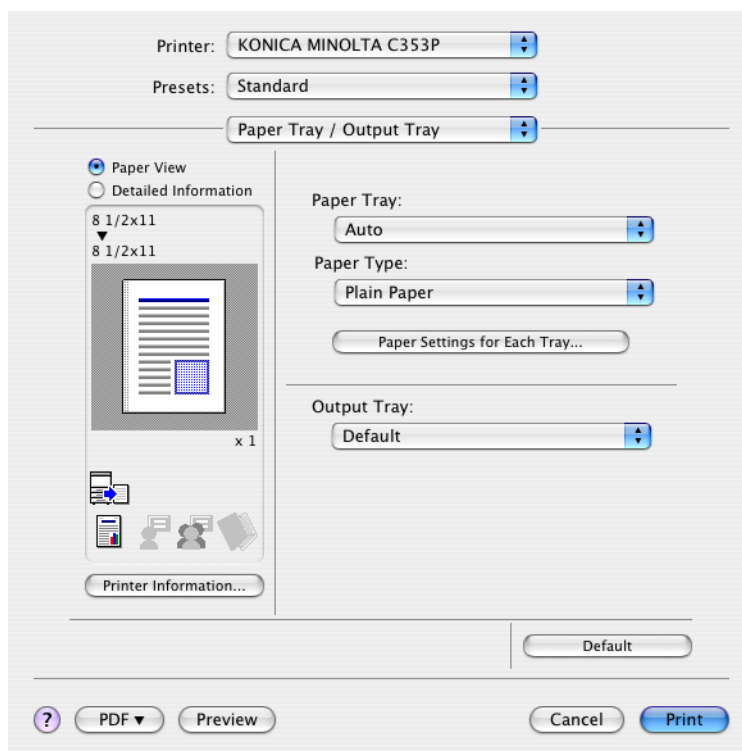

Function name	Option	Description
Paper Tray	Auto, Tray 1-4, LCT, Bypass Tray	Selects the paper tray to be used. The selectable items differ depending on the options that are installed.
Paper Type	Paper type available on this machine.	Selects the paper type for printing. Can be changed only when the paper tray is set to "Auto". When the paper tray is not set to "Auto", the paper type registered by "Paper Settings for Each Tray" is effective.
[Paper Settings for Each Tray]	Paper Tray	Selects the paper tray to be specified. The selectable items differ depending on the installed options.
	Paper Type	Selects the type of paper to be loaded onto the paper tray.
Output Tray	Default, tray 1-3, bin 1-6	Specifies the tray where to output the printed pages. The selectable items differ depending on the options that are installed.





### Note

Specify "Duplex Side 2" to print on the back side of a page.

### 6.5.6 Cover Mode/Transparency Interleave


You can switch between the Cover Mode dialog box and the Transparency Interleave dialog box.

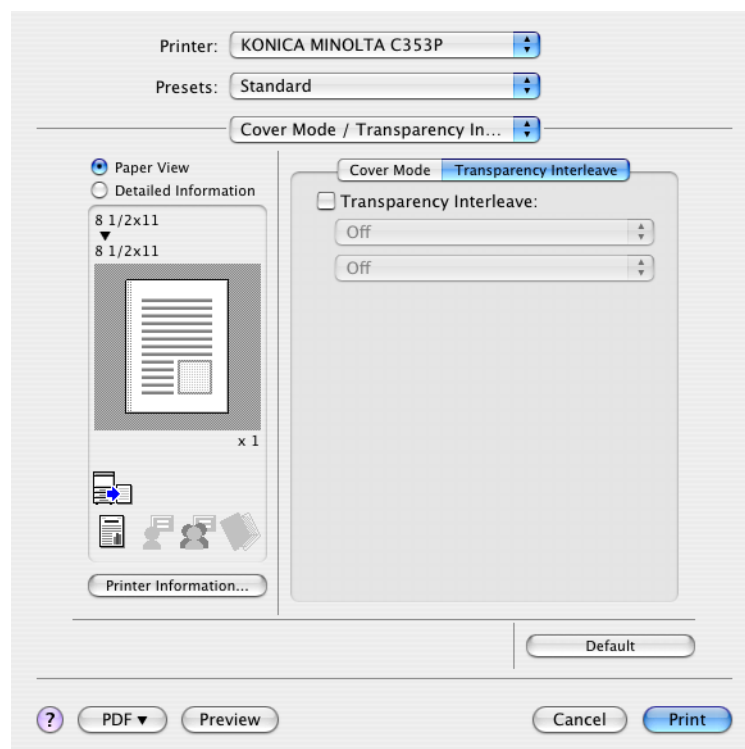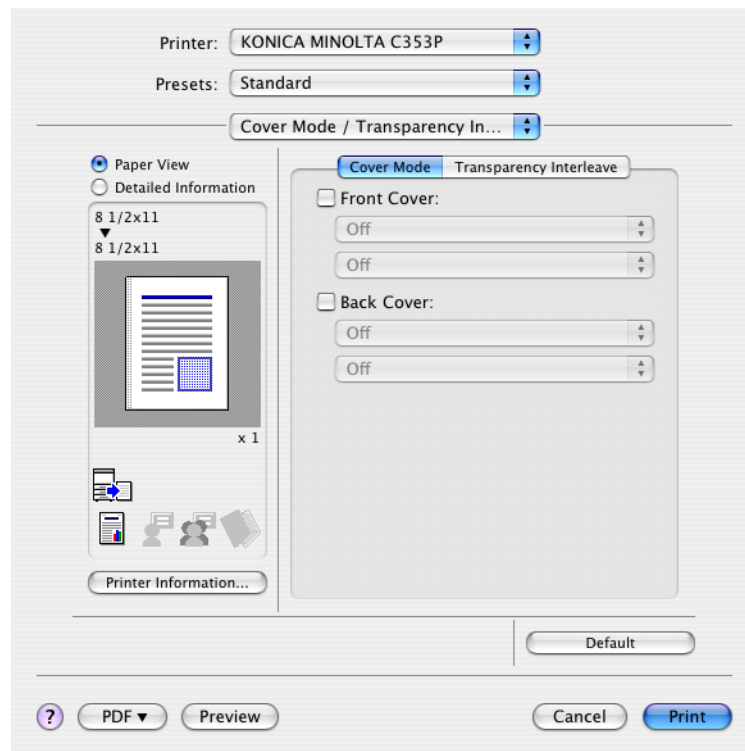

Function name	Option	Description
Front Cover	Off, Print, Blank	Attaches a front cover page. You can specify it when "Auto" is not selected for the paper tray.
	Tray 1-4, LCT, Bypass Tray	Selects the paper tray for the cover page. The selectable items differ depending on the options that are installed.
Back Cover	Off, Print, Blank	Attaches a back cover page. You can specify it when "Auto" is not selected for the paper tray.
	Tray 1-4, LCT, Bypass Tray	Selects the paper tray for the back cover page. The selectable items differ depending on the options that are installed.
Transparency Interleave	ON/OFF	Outputs and inserts interleaves when printing overhead projector transparencies. You can specify it when "Transparency" is selected for the paper type.
	Tray 1-4, LCT	Selects the paper tray for the transparency interleaves. The selectable items differ depending on the options that are installed.


### 6.5.7 Per Page Setting

The print type and paper tray can be specified for each page. This function is convenient when changing the paper tray during a print job to print multiple pages. The settings are added to the Per Page Setting list and can be used as necessary.

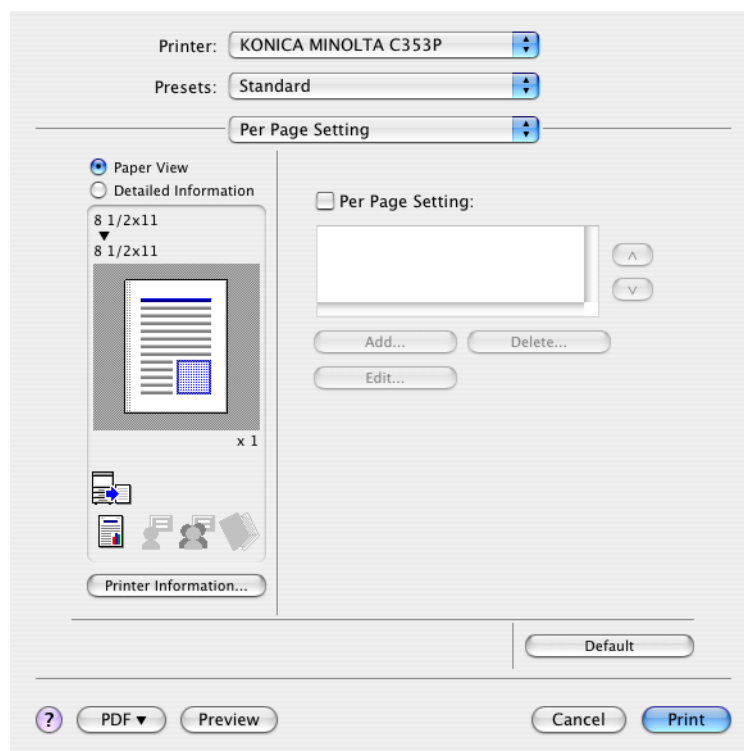

Function name	Option	Description
Per Page Setting	ON/OFF	Inserts paper between pages and switches the paper and tray for each page.
[Add]	—	Creates a conditioned list.
[Delete]	—	Deletes the list.
[Edit]	—	Edits the conditioned list.

### 6.5.8 Stamp/Composition

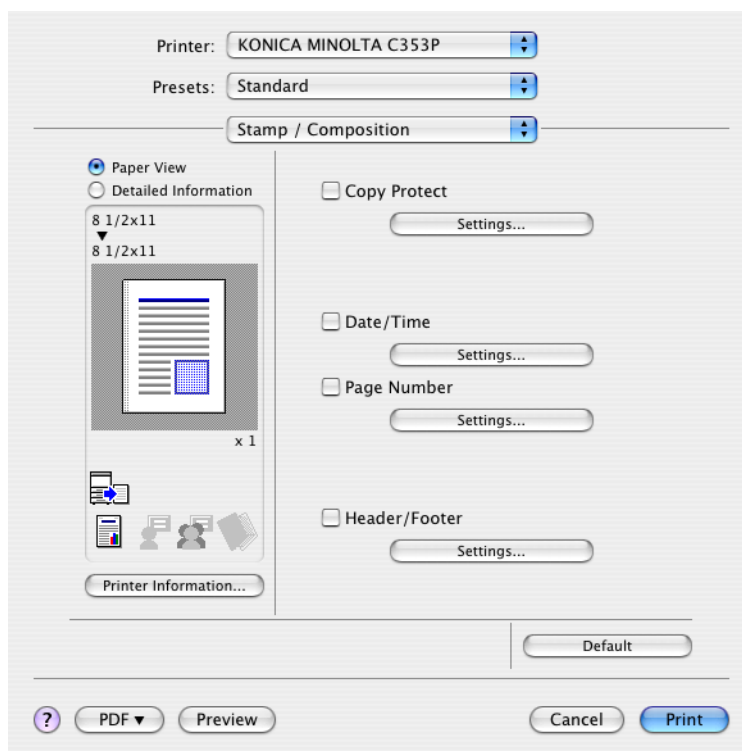

Function name	Option	Description
Copy Protect	ON/OFF	Prints a special pattern to prevent copying. You can specify items, positions and the composition to be printed by clicking the [Settings] button.
[Settings]	—	For details, refer to <a href="#">"Editing copy protect" on page 6-17</a> .
Date/Time	ON/OFF	You can print the date and time on a document. You can specify items, pages and positions to be printed by clicking the [Settings] button.
[Settings]	—	For details, refer to <a href="#">"Editing date/time" on page 6-18</a> .
Page Number	ON/OFF	Prints the page number. You can specify items, pages and positions to be printed by clicking the [Settings] button.
[Settings]	—	For details, refer to <a href="#">"Editing page number" on page 6-19</a> .
Header/Footer	Machine Setting 1-20	Prints the header and footer. Select header/footer information from the list specified in the printer. You can specify items and pages to be printed by clicking the [Settings] button.
[Settings]	—	For details, refer to <a href="#">"Editing header/footer" on page 6-19</a> .

## Editing copy protect



**Characters:** Embeds the selected character string in a pattern. A preregistered character string (common stamp) or a character string registered on this machine (registered stamp) can be specified.

**Date/Time:** Embeds the selected date and time in a pattern. By clicking the [Edit] button under "Format", you can specify the display type or the time format.


**Serial Number:** Embeds the serial number of this machine in a pattern.

**Distribution Control Number:** Embeds the copy number in a pattern when printing multiple copies. The start number or the display type can be specified.

**Job Number:** Embeds the print job number in a pattern for documents that are automatically paginated.

**Text Size:** Specifies the text size of a pattern.

**Angle:** Specifies the pattern angle.

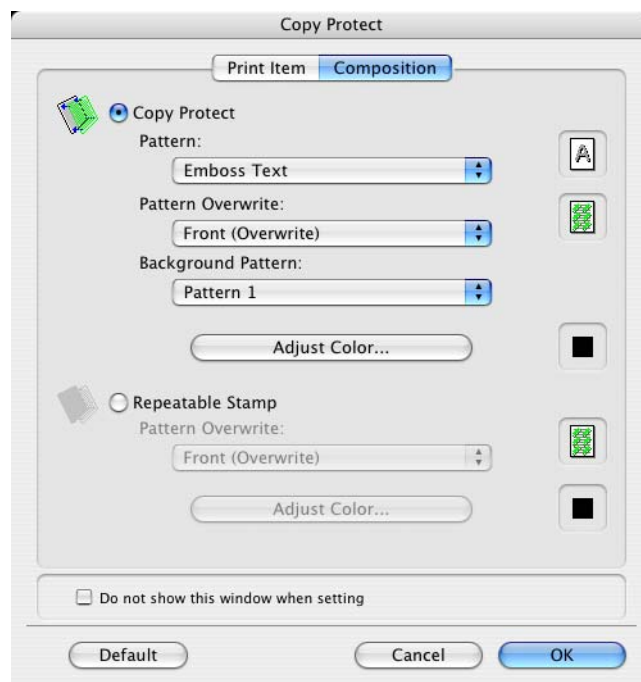

The following settings are available when "Copy Protect" is selected.

Copy Protect: Embeds a hidden pattern that appears on unauthorized copies.

Pattern: Specifies the embedding method of a pattern.

Pattern Overwrite: Specifies the order for printing a pattern on the original.

Background Pattern: Specifies the pattern background.

Adjust Color: Specifies the color of the pattern.

The following settings are available when "Repeatable Stamp" is selected.

Repeatable Stamp: Prints a text pattern.

Pattern Overwrite: Specifies the order for printing a pattern on the original.

Adjust Color: Specifies the color of the pattern.




**Note**

*"Copy Protect" and "Repeatable Stamp" cannot be selected at the same time.*

*Different setting items are available for "Copy Protect" and "Repeatable Stamp".*

**Editing date/time**

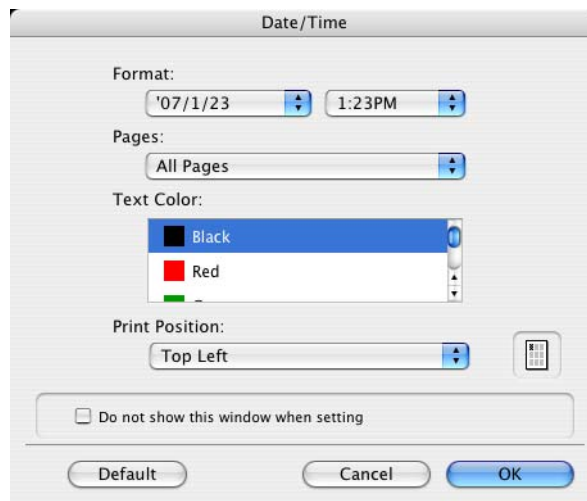


Format: Displays the format for the date and time to be printed.

Pages: Specifies the pages to print the date and time.

Text Color: Specifies the text color used for printing.

Print Position: Specifies the print position.

### Editing page number

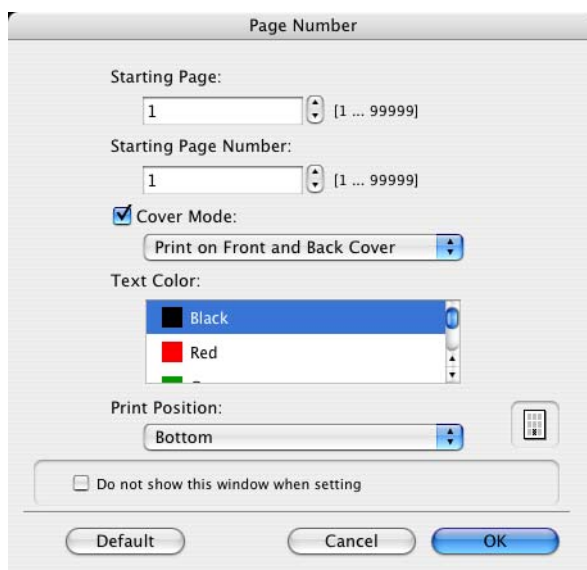

**Starting Page:** Specifies the page to start printing the page number.


**Starting Page Number:** Specifies the start number for printing the page number.

**Cover Mode:** If cover pages are attached, specifies whether to print the page number on the front cover page or the back cover page.

**Text Color:** Specifies the text color used for printing.

**Print Position:** Specifies the print position.

### Editing header/footer

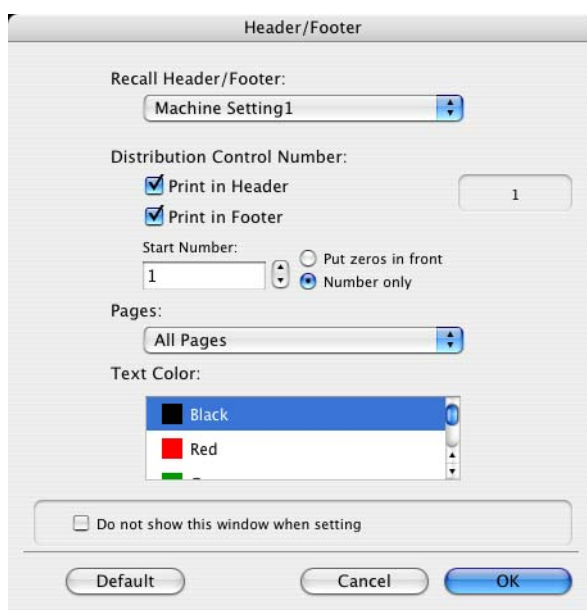


**Recall Header/Footer:** Selects the header/footer settings registered in this machine.

**Distribution Control Number:** Prints the number of copies in the header and footer when printing multiple copies. The start number or the number of digits displayed can be specified.

**Pages:** Specifies the pages to print the header and footer.

**Text Color:** Specifies the text color used for printing.

### 6.5.9 Quality

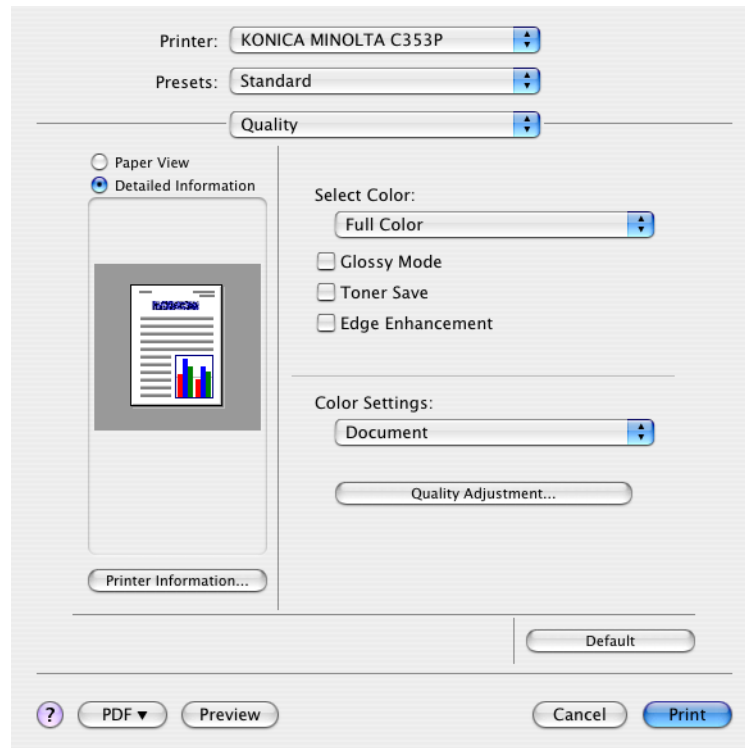

Function name	Option	Description
Select Color	Full Color, Gray Scale	Specifies the color to be printed.
Glossy Mode	ON/OFF	Prints using a gloss finish.
Toner Save	ON/OFF	Controls the print density and saves the toner consumption.
Edge Enhancement	ON/OFF	Highlights the edge of characters, graphics and images to make small characters more visible. You can specify it when "Gray Scale" is selected for the color.
Color Settings	Document, photo, DTP, Web, CAD	Prints with a quality suitable for the selected original document. Document: Prints with a quality suitable for documents with many characters. Photo: Prints with a quality suitable for photos. DTP: Prints with a quality suitable for documents produced using DTP. Web: Prints with a quality suitable for Web page printing. CAD: Prints with a quality suitable for CAD data printing.
Quality Adjustment	—	Adjusts the image quality. You can select "Simple" to adjust entire documents or "Detail" to adjust the text, photos, figures, tables, and graphs in the original. You can also manage the profile.




#### Detail

For details on profile management, refer to ["ICC profile settings" on page 7-34](#).

## 6.6 Printing operations for OS 9

Print jobs are specified from the application software.

- 1 Open the data in the application, click the [File] button, and then click "Print" from the menu.
  - If the menu is not available, click the [Print] button.
 The Print dialog box appears.
- 2 Check that an appropriate printer name has been selected by the "Printer".
  - If the selected printer is not appropriate, click to select an appropriate printer.
  - If the printer does not appear, select a printer from "Chooser". For details, refer to ["Selecting and connecting the printer" on page 4-14](#).
  - The Print dialog box differs depending on the application.

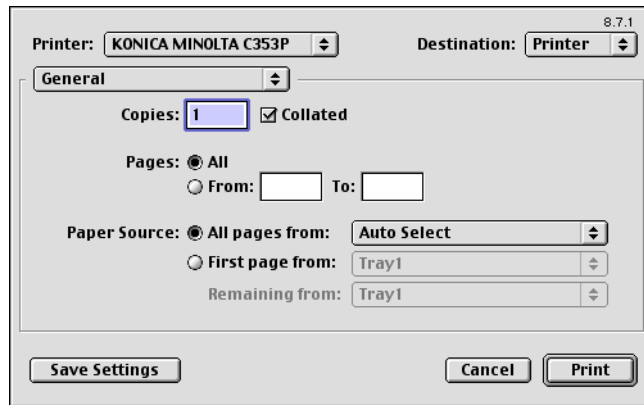

- 3 Specify the print range and the number of copies to print.
- 4 Change the setting screen to change the printer driver settings as necessary.
  - When you change the "General" menu, other setting screens of the printer driver appear and allows you to specify various functions. For details, refer to ["Parameter details for the OS 9 printer driver" on page 6-24](#).
- 5 Click the [Print] button.
 

The data indicator of this machine flashes.



### Detail

*The printer driver setting changed on the Print dialog box is not saved and the original settings are restored when the application is quit.*

## 6.7 Default settings for the OS 9 printer driver

When you have installed the printer driver, you need to change the initialization condition such as options before daily printing and enable functions of this machine from the printer driver.




### Reminder

*If the model name and installed options are not specified, the option functions cannot be used from the printer driver. When installing options, be sure to make the proper settings.*

### 6.7.1 Options

- 1 On the "Apple" menu, select "Chooser".
- 2 Select the printer name.
- 3 Click the [Setup] button.
- 4 Click the [Configure] button.
  - When the machine is specified as the LPR printer, double-click the LPR printer icon on the desktop, select the "Printer" menu, and then click "Change Setup" to display the dialog box for option settings.

The dialog box for option settings appears.

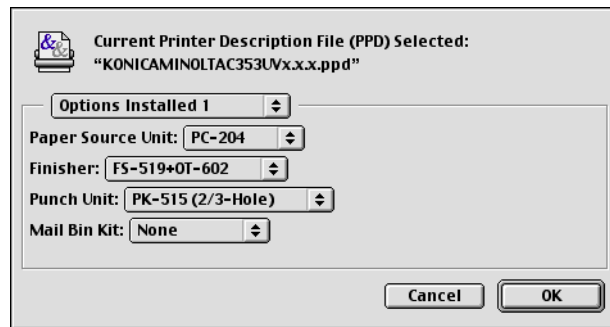

- 5 Set options installed on this machine in the Options Installed 1 and Options Installed 2 dialog boxes.
- 6 Click the [OK] button.
 

The Chooser dialog box appears again.
- 7 Close the Chooser dialog box.



### Note

*The option settings are displayed automatically the first time the printer driver is selected. For details, refer to ["Selecting and connecting the printer" on page 4-14](#).*

### 6.7.2 Registration of the default settings

The settings specified for the functions of this machine when printing can only be applied while using the application. When the application is quit, the settings return to their default settings.




### Detail

*For the function and settings of the printer driver, refer to ["Parameter details for the OS 9 printer driver" on page 6-24](#).*

To register the settings, save the settings in the printer driver setting.

For OS 9.2, select the Print dialog box and click the [Save Settings] button to save it.

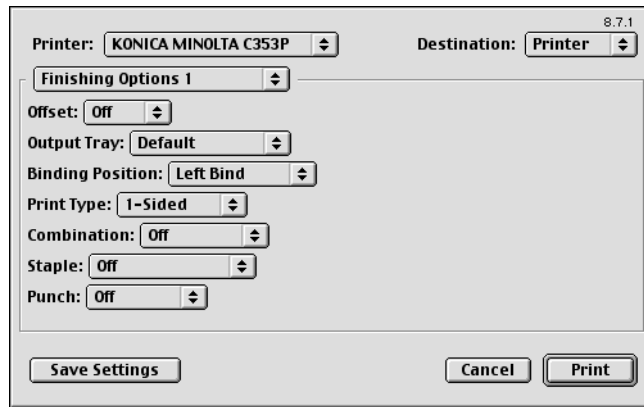**Note**

*The settings cannot be saved from the Page Setup dialog box.*


*The "General" settings on the Print dialog box cannot be saved.*

## 6.8 Parameter details for the OS 9 printer driver

The printer driver functions are specified in the Page Attributes dialog box called from the Page Setup dialog box or the Layout/Finish dialog boxes called from the Print dialog box.

### 6.8.1 Page Attributes

In the [File] menu, select "Page Setup" (or "Paper Setup").

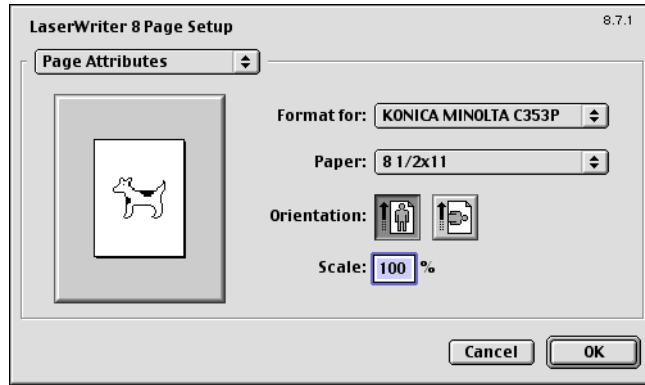

Paper: Specifies the output paper size.

Orientation: Specifies the orientation of the original.

Scale: Specifies the enlargement and reduction ratio.




#### Note

To print on paper sizes other than the standard sizes, be sure to set the custom paper sizes in "Custom Size Settings" first. For details on registering a non-standard paper size, refer to ["Setting Custom Page Size" on page 6-24](#).

### 6.8.2 Setting Custom Page Size

Select "Custom Paper Size" on the Page Setting dialog box.

- 1 In the [File] menu, select "Paper Setup" (or "Page Setup").
- 2 Select "Custom Page Sizes".
- 3 Click the [Add] button.
- 4 Specify settings for the following:
  - Paper size: Specifies the intended paper size.
  - Printer Margins: Specifies the paper margins.
  - Custom Page Size Name: Enter the registered name for the specified paper size and margins, and then click the [OK] button.
  - Unit: Selects the specified unit.

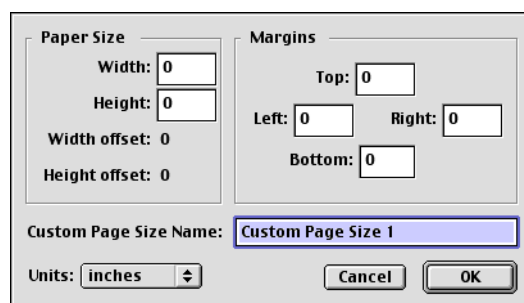


- 5 Click the [OK] button.

This saves the custom page size, which can be selected from the "Paper" drop-down list in the Page Attributes dialog box.

### 6.8.3 General

In the [File] menu, select "Print".

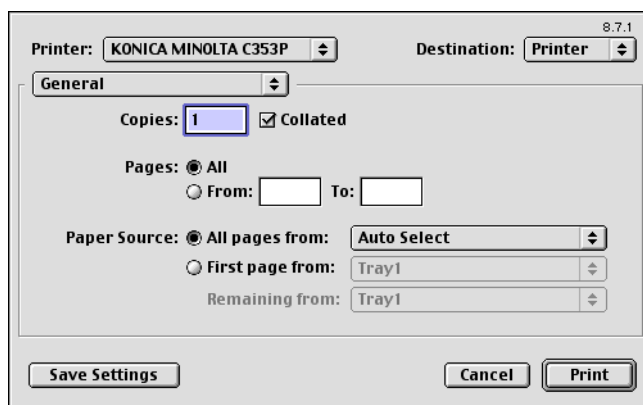

Copies: Specifies the number of copies to be printed.


Collated: Specifies whether to print multiple copies by collating them.

Pages: Specifies the print range to print.

Paper Source: Selects the paper tray to be used.

### 6.8.4 Layout (Pages per sheet)

Specify to print multiple pages on one page.

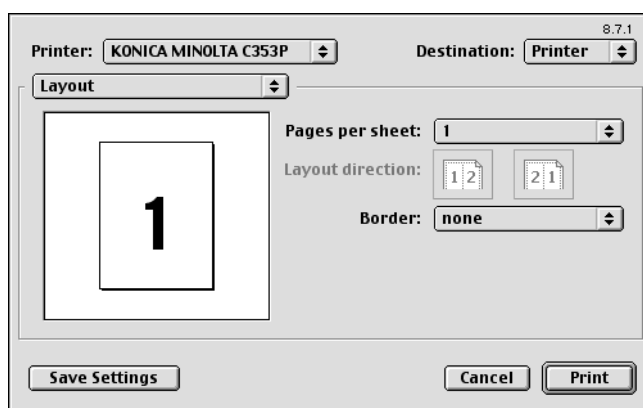


Pages per sheet: Allocates multiple pages in one page.

Layout direction: Specifies the document page order.

Border: Specifies the borders around pages.

### 6.8.5 Printer specific options (Finishing Options 1 to 5)

Specifies the printer specific options. These options are specified when functions of this machine such as staple and punch are to be used.

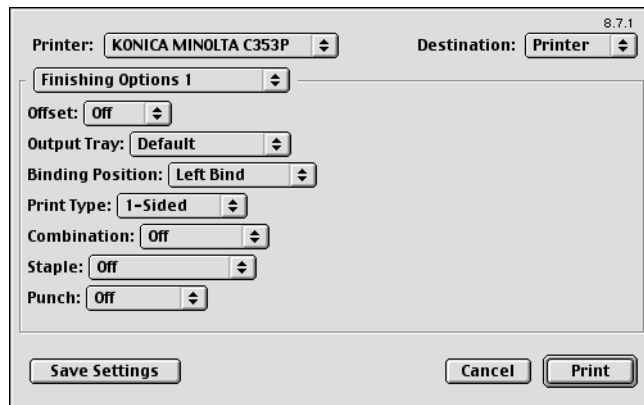

Offset: Specifies offset.

Output Tray: Selects the output tray.

Binding Position: Selects the binding direction.

Print Type: Performs duplex printing.

Combination: Performs booklet printing.

Staple: Performs stapling.

Punch: Performs hole punching.

Fold: Performs folding.

Image Shift: Prints by shifting the entire print image.

Front Cover: Attaches a front cover page.

Front Cover Tray: Selects the paper tray for the front cover.

Back Cover: Attaches a back cover page.

Back Cover Tray: Selects the paper tray for the back cover.

Transparency Interleave: Inserts interleaves between transparencies.

Interleave Tray: Selects the paper tray for the transparency interleaves.

Output Method: Specifies whether to stop printing temporarily after one copy of the document has been printed, so that the proof print can be checked.

Resolution: Specifies the resolution.

Select Color: Specifies whether to print in color or gray scale.

Glossy Mode: Prints using a gloss finish.

Color Settings: Prints with a quality suitable for the original.

Color Matching (Text): Adjusts the color quality of the text in a document.

Pure Black (Text): Specifies whether to enable pure black of the text in a document.

Screen (Text): Specifies screening of the text in a document.

Color Matching (Photo): Adjusts the color quality of the photo in the original.

Pure Black (Photo): Specifies whether to enable pure black of the photo in the original.

Screen (Photo): Specifies screening of the photo in the original.

Smoothing (Photo): Specifies smoothing of the photo in the original.

Color Settings (Graphic): Adjusts the color quality of a chart and graph in the original to the text or photo settings.

Smoothing (Graphic): Adjusts smoothing of a chart and graph in the original to the text or photo settings.

Toner Save: Controls the print density and saves the toner consumption.

Edge Enhancement: Highlights the edge of characters, graphics and images to make small characters more visible. It can be specified when "Gray Scale" is selected for the color.

**Reminder**

*The "Staple" and "Fold" functions are available only if the optional finisher is installed.*

*The "punch" function is available only if the punch kit is installed on the optional finisher.*





**Function detail description**

---

## 7 Function detail description

### 7.1 Proof print

The proof print function is a feature used when printing out multiple copies. It allows the machine to output one copy and pause before printing the remaining number of copies. This prevents copy errors from occurring.

When printing, use the printer driver to specify Proof Print, and use the control panel to execute printing of the remaining number of copies.

#### 7.1.1 Setting up the printer driver

The following four printer drivers support setup of this feature:


- Konica Minolta PCL Printer Driver for Windows
- Konica Minolta PostScript Printer Driver for Windows
- PostScript PPD Printer Driver for Mac OS X
- PostScript PPD Printer Driver for Mac OS 9.2

Print with following settings specified:

- Output Method: "Proof Print"
- Number of Copies: Two or more

#### For Windows


- 1 Click the Basic tab.
- 2 Select "Proof Print" from options under "Output Method".

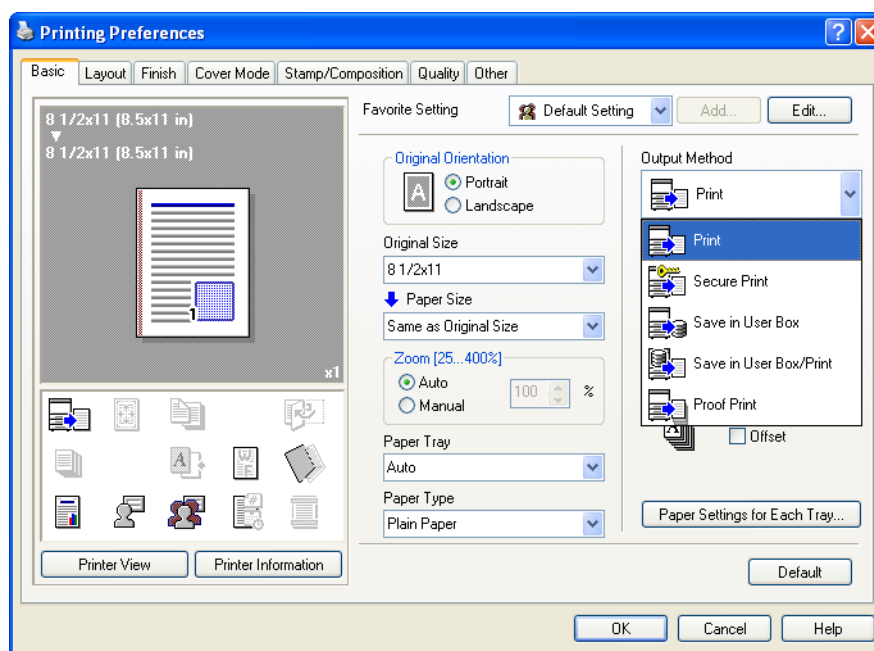

- 3 Specify the number of copies to be printed.  
One copy is printed for checking.

**For Macintosh OS X**

- 1 Display the "Output Method" dialog box.
- 2 Select "Proof Print" from options under "Output Method".

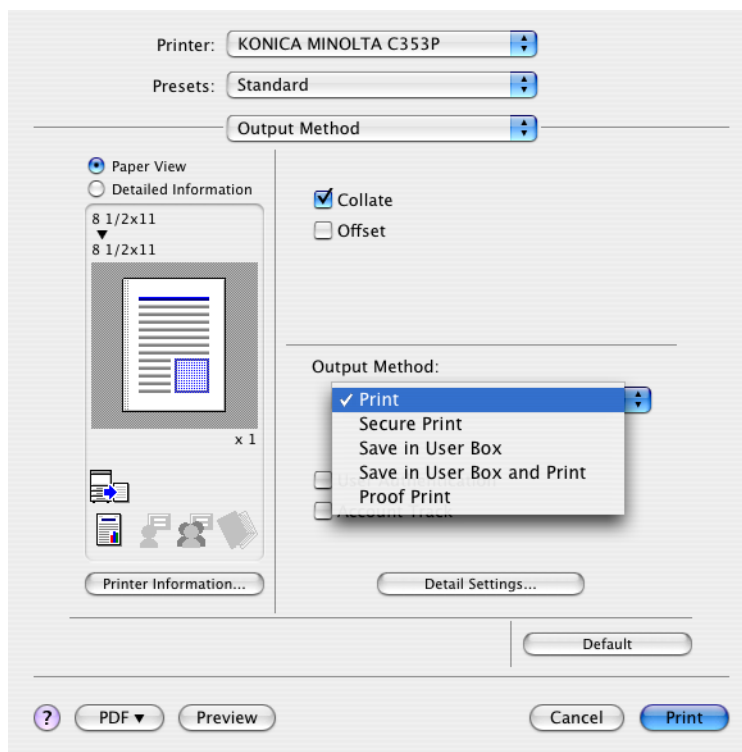

- 3 Specify the number of copies to be printed.  
One copy is printed for checking.

**Note**

*In OS 9.2, select "Output Method" in the "Finishing Option 3" dialog box.*


### 7.1.2 Recalling a job from the control panel

Press the [Menu/Select] key, and then the "Utility" menu appears. From this menu, select [Job Operation] - [Proof print].



**Note**

For details on the "Utility" menu operations, refer to *"Control panel" on page 8-2*.

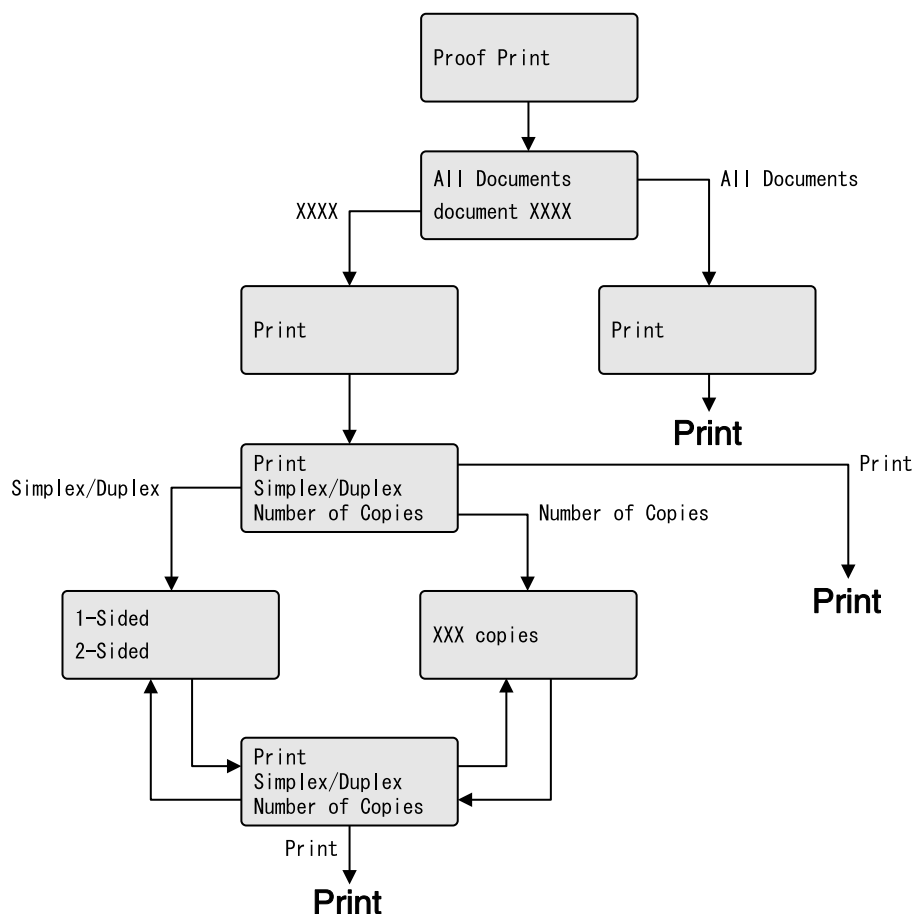

**Note**

If the user authentication function has been specified on the machine, the screen to input the user name appears after the Job Operation screen. Enter the user name and password.

If the Account Track function has been specified on the machine, the screen to input the department name appears after the Job Operation screen. Enter the department name and password.

## 7.2 Secure print

The secure print function saves print jobs in the secure print user box on the machine. As a job is output only when the ID and password are entered from the control panel, it is helpful for outputting confidential documents.

When printing, use the printer driver to specify Secure Print, and then use the control panel to execute printing.



### Note

*The Secure print function is available only if a hard disk is installed on this machine.*

### 7.2.1 Setting up the printer driver

The following three printer drivers support setup of this feature:


- Konica Minolta PCL Printer Driver for Windows
- Konica Minolta PostScript Printer Driver for Windows
- PostScript PPD Printer Driver for Mac OS X

Print with the following setting specified:

- Output Method: "Secure Print"


#### For Windows

- 1 Click the Basic tab.
- 2 Select "Secure Print" from the "Output Method" drop-down list.

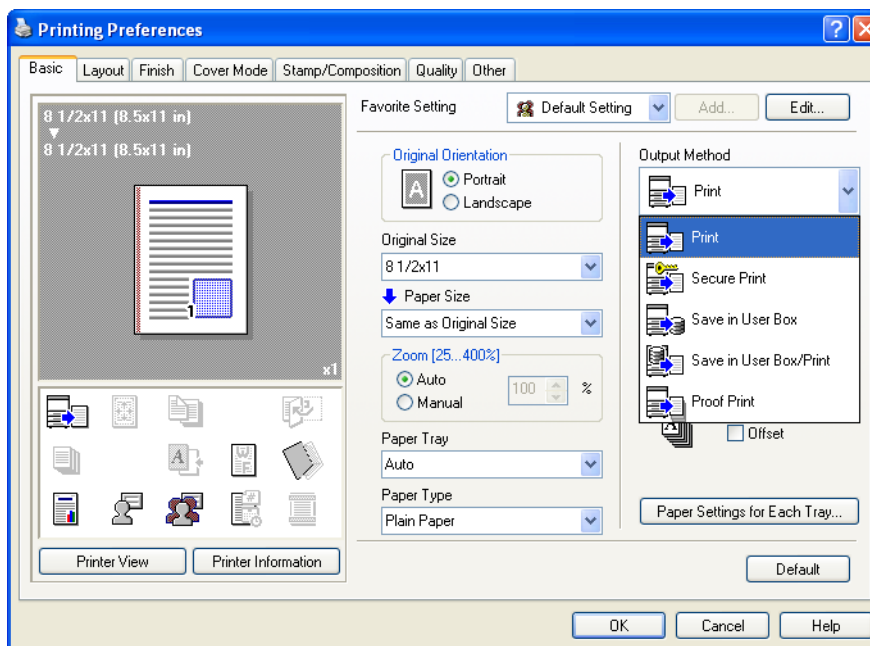

### 3 Enter the ID and password.

- When password rules are enabled on this machine, the passwords that can be used with Secure Print are limited and the jobs are deleted when a password that does not comply with the password rules is entered. For details on the password rules, refer to ["Admin. Settings Menu" on page 8-24](#).

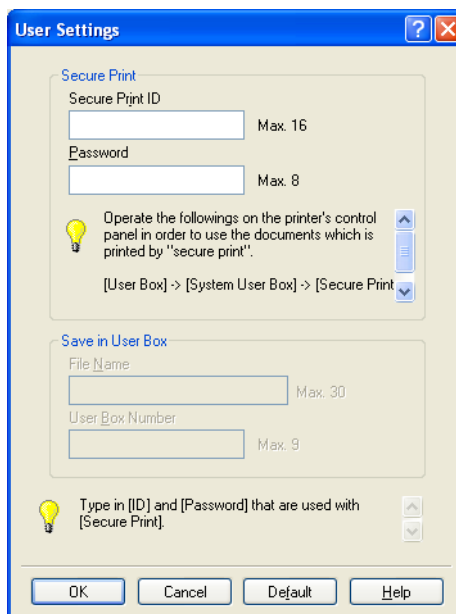

The image shows a Windows-style dialog box titled "User Settings". It has a blue title bar with a question mark icon and a close button. The dialog is divided into two main sections. The first section, "Secure Print", contains two text input fields: "Secure Print ID" (with a "Max. 16" label) and "Password" (with a "Max. 8" label). Below these fields is a lightbulb icon and a text box containing the instruction: "Operate the followings on the printer's control panel in order to use the documents which is printed by 'secure print'." Below the instruction is a dropdown menu showing the path "[User Box] -> [System User Box] -> [Secure Print]". The second section, "Save in User Box", contains two text input fields: "File Name" (with a "Max. 30" label) and "User Box Number" (with a "Max. 9" label). Below these fields is another lightbulb icon and a text box containing the instruction: "Type in [ID] and [Password] that are used with [Secure Print]". At the bottom of the dialog are four buttons: "OK", "Cancel", "Default", and "Help".

### 4 Print the document.




#### Reminder

*The ID and password that are required to print a secured document can be preregistered in the User Settings dialog box on the Basic tab. If the same ID and password always used, by preregistering them, the dialog box for entering the ID and password will not appear when selecting "Secure Print".*

**For Macintosh OS X**

- 1 Display the "Output Method" dialog box.
- 2 Select "Secure Print" from the "Output Method" drop-down list.

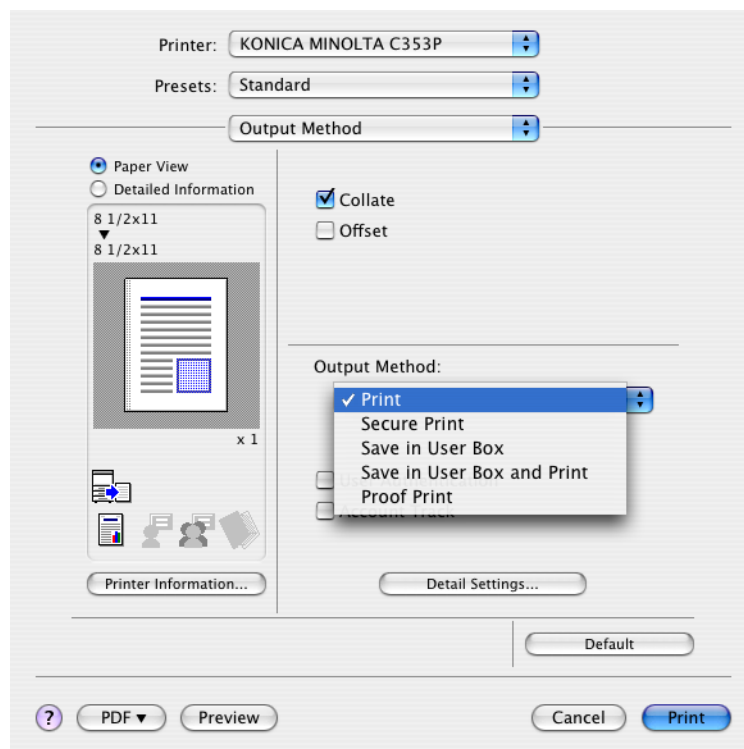

- 3 Enter the ID and password.
  - When password rules are enabled on this machine, the passwords that can be used with Secure Print are limited and the jobs are deleted when a password that does not comply with the password rules is entered. For details on the password rules, refer to ["Admin. Settings Menu"](#) on page 8-24.



- 4 Print the document.

**Note**

Select the "Save Settings" check box to save the specified settings. In addition, if the "Do not show this window when setting" check box is selected, the dialog box does not appear when the function is specified.

## 7.2.2 Recalling a job from the control panel

"Secure Print" jobs are saved in the secure print user box. To print a secured document, the ID and password that were specified in the printer driver are required.

Press the [Menu/Select] key, and then the "Utility" menu appears. From this menu, select [Job Operation] - [Secure PrintBox].



### Note


For details on the "Utility" menu operations, refer to **"Control panel" on page 8-2**.

When "Mode 1" is specified for "SecurePrintAccess", enter the ID, and then enter the password. When "Mode 2" is specified for "SecurePrintAccess", enter the ID, select a document, and then enter the password.

Secured documents are automatically deleted after a certain length of time has elapsed since their registration. The default setting for this time is specified as 1 day, and the value can be specified in the Administrator mode.

To manually delete a secured document that was printed, operate in the Administrator mode.

### When "SecurePrintAccess" is set to "Mode 1"

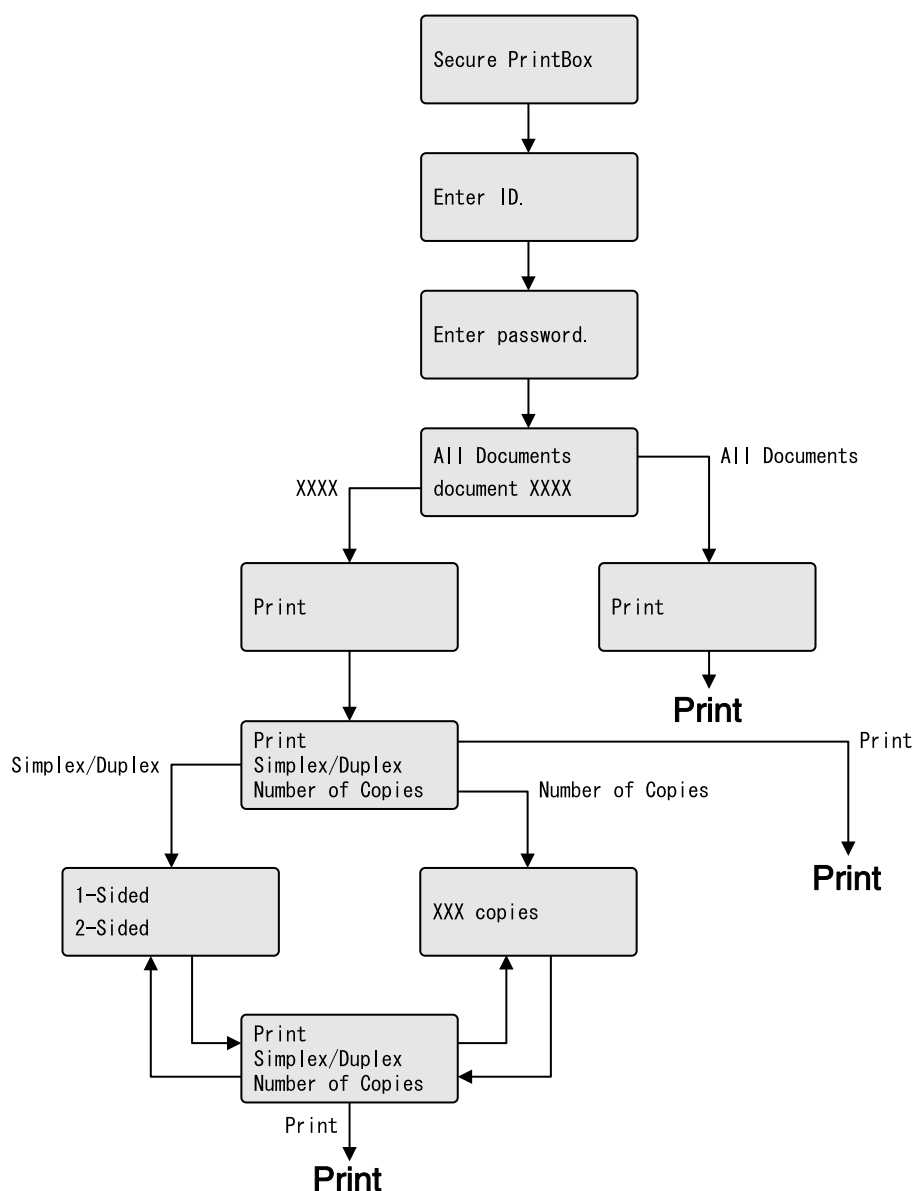


**Note**

*If the user authentication function has been specified on the machine, the screen to input the user name appears after the Job Operation screen. Enter the user name and password.*

*If the Account Track function has been specified on the machine, the screen to input the department name appears after the Job Operation screen. Enter the department name and password.*

**When "SecurePrintAccess" is set to "Mode 2"**

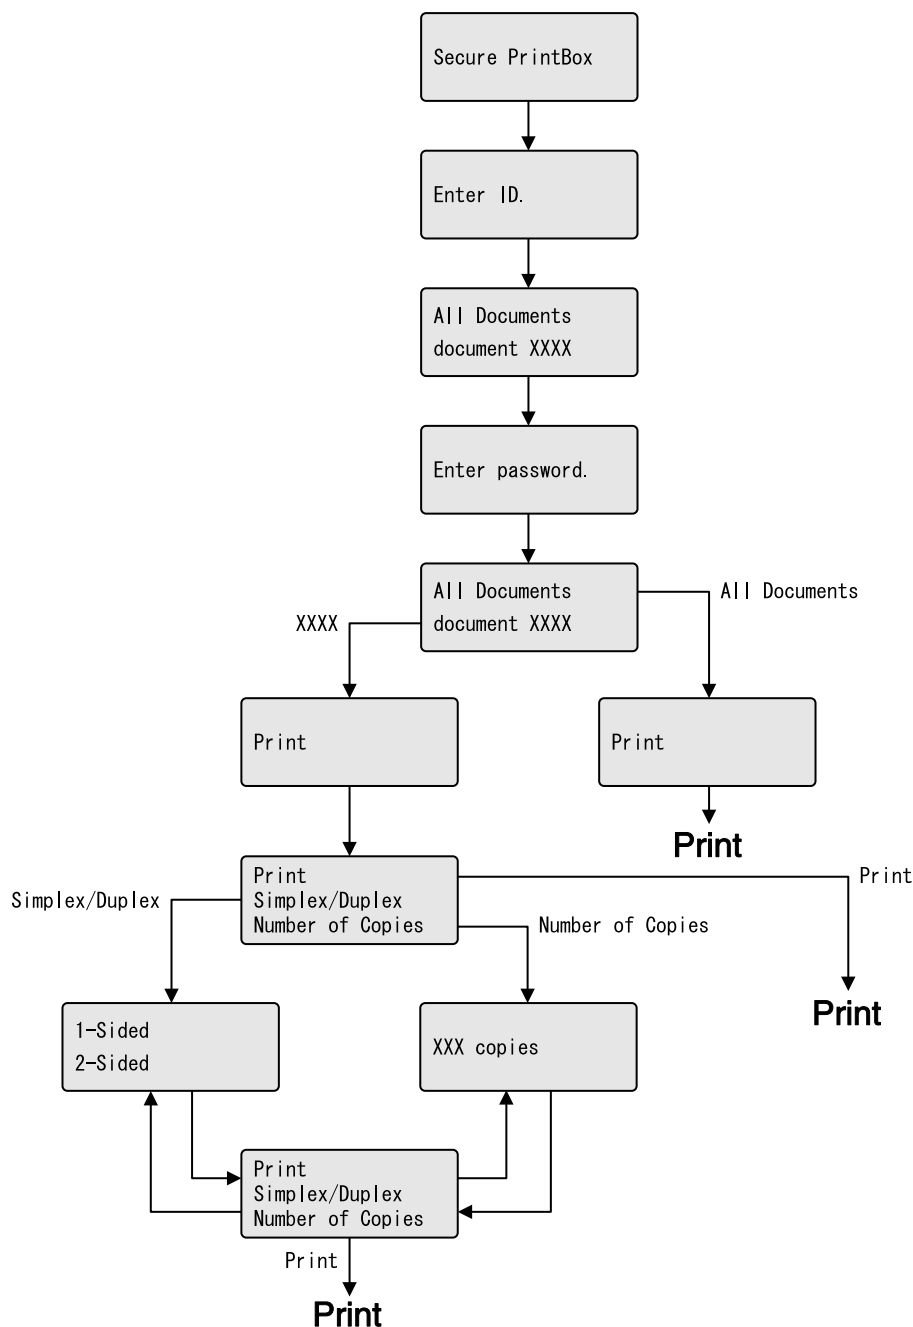**Note**

*If the user authentication function has been specified on the machine, the screen to input the user name appears after the Job Operation screen. Enter the user name and password.*

*If the Account Track function has been specified on the machine, the screen to input the department name appears after the Job Operation screen. Enter the department name and password.*

## 7.3 Save in User Box

The Save in User Box function saves print jobs in the user box on the machine. Because a user box can be specified from the control panel to output a job. This function is also useful for document distribution.

When printing, use the printer driver to specify "Save in User Box", and then use the control panel to execute output.



### Note

*The User Box function is available only if a hard disk is installed on this machine.*

*User Box must be registered on this machine in advance. For details, refer to ["Creating a new user box" on page 9-21](#).*

### 7.3.1 Setting up the printer driver

The following three printer drivers support setup of this feature:

- Konica Minolta PCL Printer Driver for Windows
- Konica Minolta PostScript Printer Driver for Windows
- PostScript PPD Printer Driver for Mac OS X

Print with the following settings specified:

- Output Method: "Save in User Box" or "Save in User Box/Print"




### Note


*To save in the user box and print at the same time, select "Save in User Box/Print".*

#### For Windows

- 1 Click the Basic tab.
- 2 Select "Save in User Box" or "Save in User Box/Print" from the "Output Method" drop-down list.

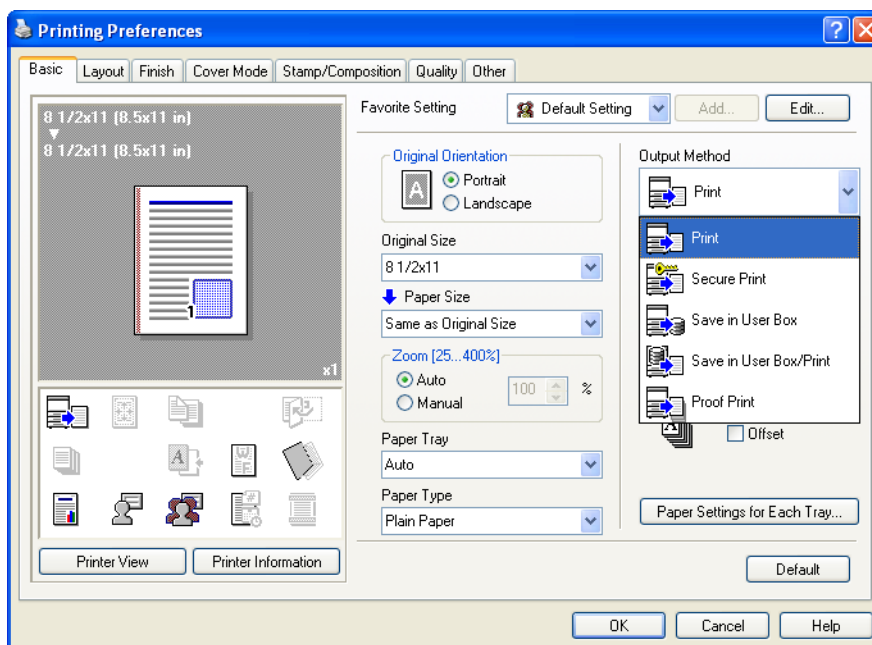

- 3 Enter the file name of the document and the user box number for the save location.

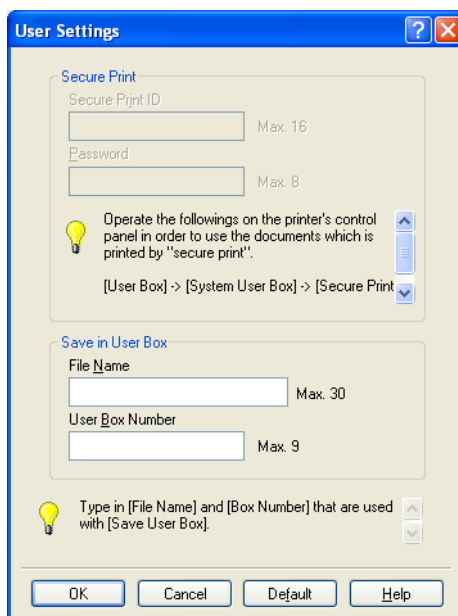

- 4 Print the document.




#### Reminder

*The file name and user box number that are required to save in a user box can be preregistered in the User Settings dialog box on the Basic tab. If the same file name and user box number are always used to save document, by preregistering them, the dialog box for entering the file name and user box number will not appear when selecting "Save in User Box".*

#### For Macintosh OS X

- 1 Display the "Output Method" dialog box.
- 2 Select "Save in User Box" or "Save in User Box/Print" from the "Output Method" drop-down list.

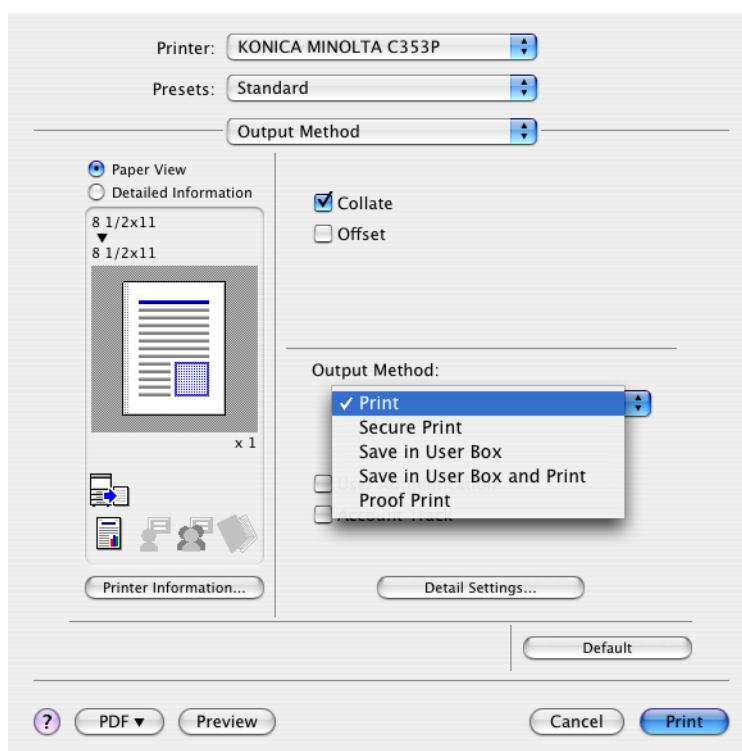

- 3 Enter the file name of the document and the user box number for the save location.
  - Select the "Save Settings" check box to save the specified settings. In addition, if the "Do not show this window when setting" check box is selected, the dialog box does not appear when the function is specified.



- 4 Print the document.

### 7.3.2 Recalling a job from the control panel

"Save in User Box" and "Save in User Box/Print" jobs are saved in a user box of the specified number.


To print a document saved in a user box, open the specified user box to retrieve the document. To call the user box, press the [Menu/Select] key, and then the "Utility" menu appears. From this menu, select [Job Operation]. Public User Box, Personal User Box, and Account User Box are available as user boxes. Select the box where the box to which you saved the document is registered. If a password is specified for the user box, the user box password is required.



#### Note

For details on the "Utility" menu operations, refer to **"Control panel" on page 8-2**.

Box documents are automatically deleted after a certain length of time has elapsed since their registration. The default setting of this time is specified as 1 day, and the setting can be specified when creating the user box.

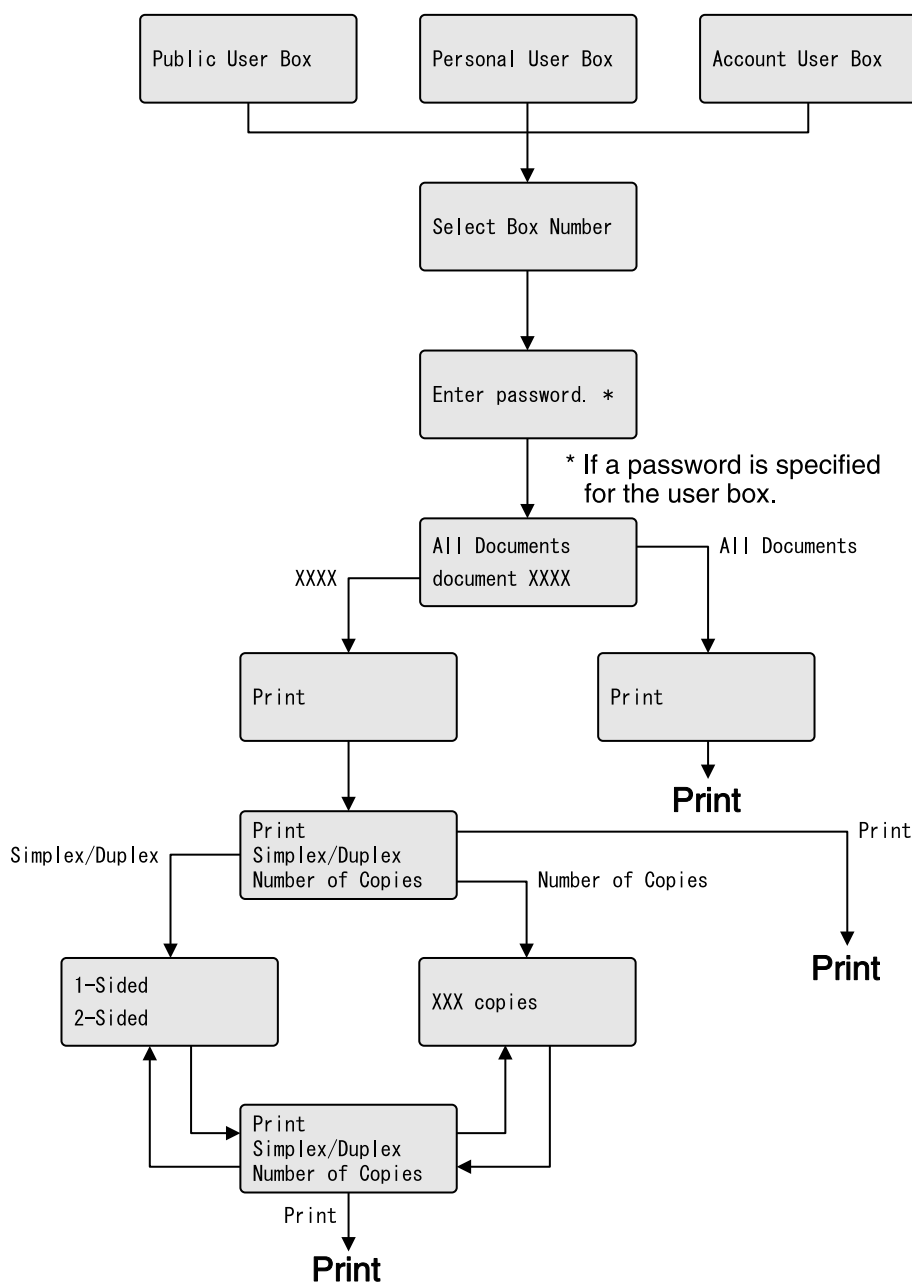

**Note**

*If the user authentication function has been specified on the machine, the screen to input the user name appears after the Job Operation screen. Enter the user name and password.*

*If the Account Track function has been specified on the machine, the screen to input the department name appears after the Job Operation screen. Enter the department name and password.*

## 7.4 Save in Annotation User Box

Print jobs can be saved in the Annotation User Box using the Save in User Box function. The Annotation User Box is a system user box that can be used commonly by registered users.

When printing, use the printer driver to specify Save in User Box, and then use the control panel to execute output.



### Note

*The Annotation User Box function is available only if a hard disk is installed on this machine.*

*The Annotation User Box must be registered on this machine in advance. For details, refer to ["Creating a new system user box" on page 9-23](#).*

### 7.4.1 Setting up the printer driver

The following three printer drivers support setup of this feature:

- Konica Minolta PCL Printer Driver for Windows
- Konica Minolta PostScript Printer Driver for Windows
- PostScript PPD Printer Driver for Mac OS X

Print with the following settings specified:

- Output Method: "Save in User Box" or "Save in User Box/Print"




### Note


*To save in the user box and print at the same time, select "Save in User Box/Print".*

#### For Windows

- 1 Click the Basic tab.
- 2 Select "Save in User Box" or "Save in User Box/Print" from the "Output Method" drop-down list.

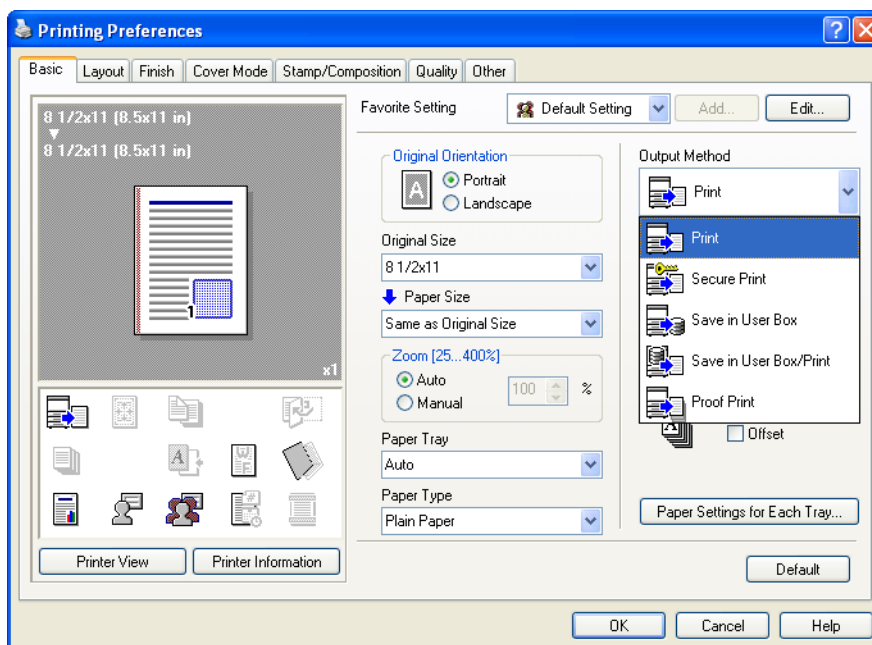

- 3 Enter the file name of the document and the Annotation user box number for the save location.

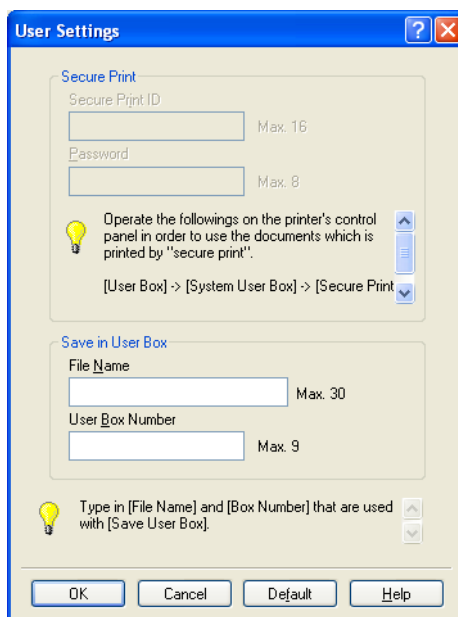

- 4 Print the document.




#### Reminder

*The file name and user box number that are required to save in a user box can be preregistered in the User Settings dialog box on the Basic tab. If the same file name and user box number are always used to save document, by preregistering them, the dialog box for entering the file name and user box number will not appear when selecting "Save in User Box".*

#### For Macintosh OS X

- 1 Display the "Output Method" dialog box.
- 2 Select "Save in User Box" or "Save in User Box/Print" from the "Output Method" drop-down list.

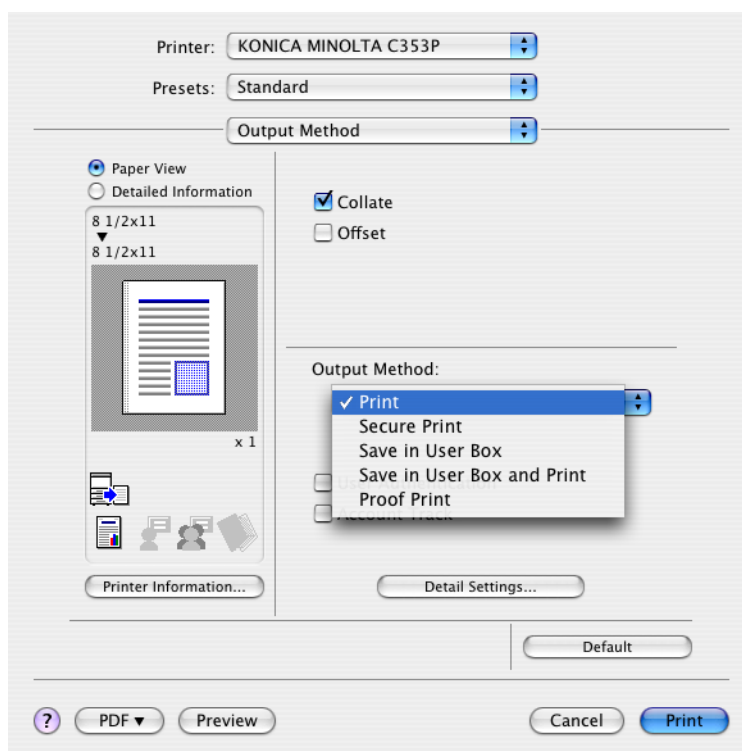

- 3 Enter the file name of the document and the Annotation user box number for the save location.
  - Select the "Save Settings" check box to save the specified settings. In addition, if the "Do not show this window when setting" check box is selected, the dialog box does not appear when the function is specified.



- 4 Print the document.

### 7.4.2 Recalling a job from the control panel

"Save in User Box" and "Save in User Box/Print" jobs are saved in an Annotation user box of the specified number.


To print a document saved in an Annotation user box, open the specified Annotation user box to retrieve the document. To call the user box, press the [Menu/Select] key, and then the "Utility" menu appears. From this menu, select [Job Operation] - [Annotation User Box]. Select the box where the box to which you saved the document is registered. If a password is specified for the user box, the user box password is required.



#### Note

For details on the "Utility" menu operations, refer to **"Control panel" on page 8-2**.

Box documents are automatically deleted after a certain length of time has elapsed since their registration. The default setting of this time is specified as 1 day, and the setting can be specified when creating the user box.

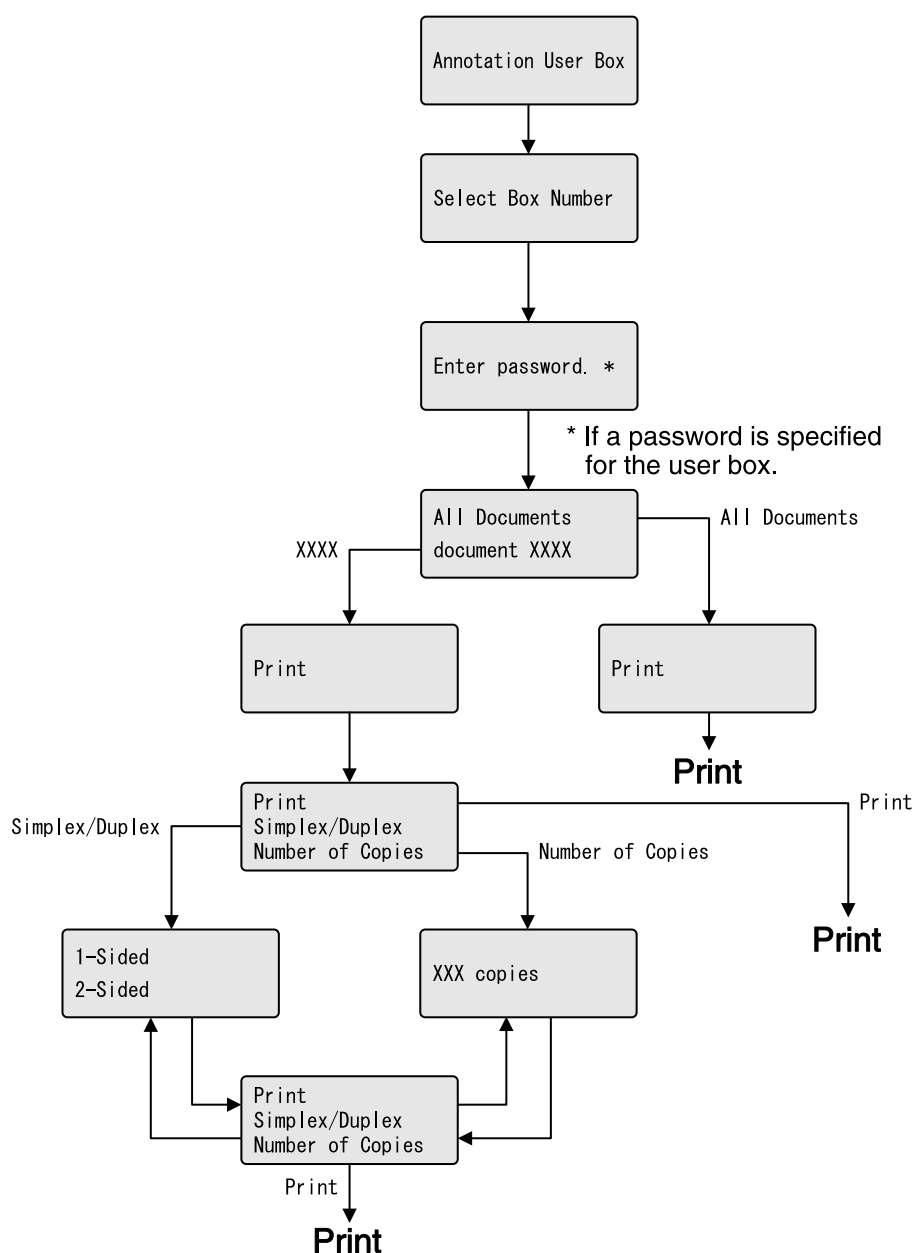

**Note**

*If the user authentication function has been specified on the machine, the screen to input the user name appears after the Job Operation screen. Enter the user name and password.*

*If the Account Track function has been specified on the machine, the screen to input the department name appears after the Job Operation screen. Enter the department name and password.*

## 7.5 Save in Encrypted PDF Box

The Encrypted PDF Box is a function to save print jobs of the Encrypted PDF format in this machine.

To save in Encrypted PDF Box, specify the desired file on the Direct Print tab of the PageScope Web Connection, and then execute output from the control panel.




### Note

*The Encrypted PDF Box function is available only if a hard disk is installed on this machine.*

### 7.5.1 Specifying Encrypted PDF file

- 1 Save the encrypted PDF file in advance.
- 2 Specify the desired file in "Print" on the Direct Print tab of the PageScope Web Connection, and then click the [Print] button.

The file is sent to the machine.

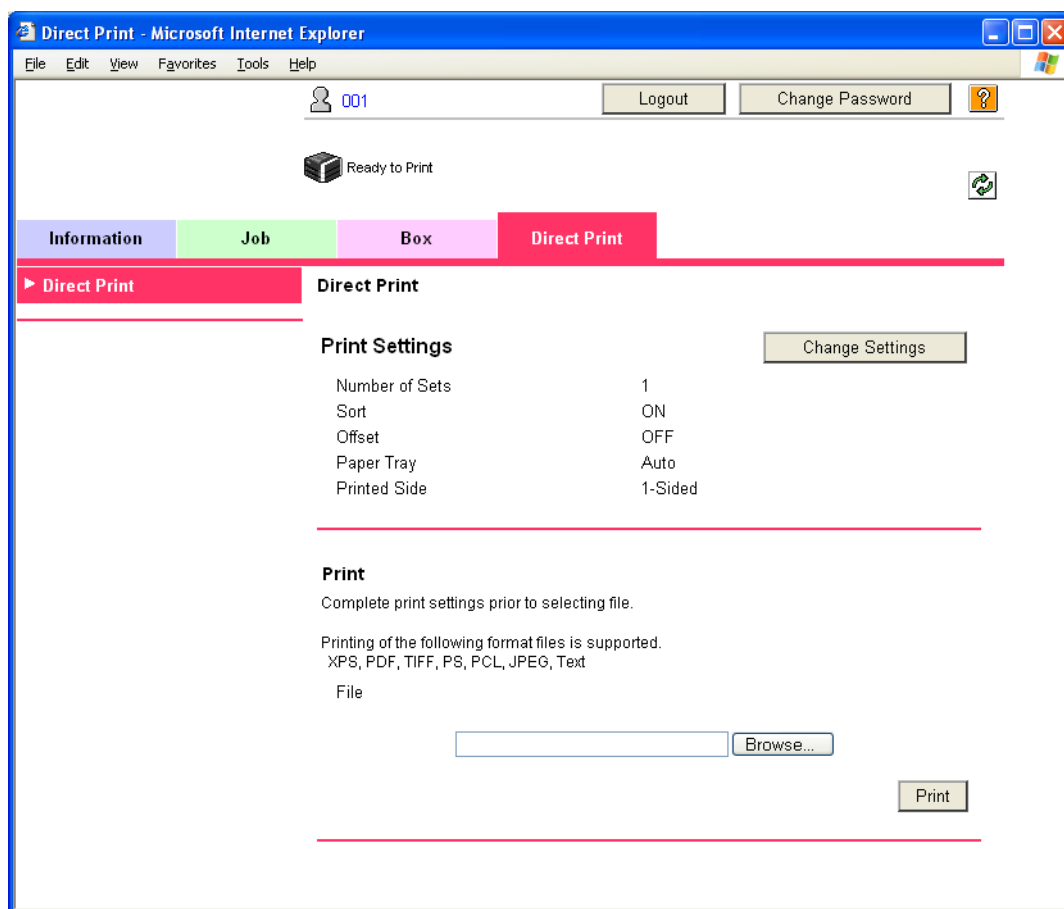


### 7.5.2 Recalling a job from the control panel

The Encrypted PDF file is saved in the Encrypted PDF Box on this machine.

To print a document saved in a box, open the Encrypted PDF Box to retrieve the document. The PDF password is required when specifying a document.

**Note**

*For details on the "Utility" menu operations, refer to ["Control panel" on page 8-2](#).*

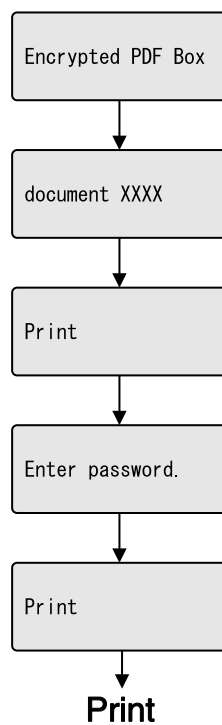**Note**

*The screen to input the user name appears after the Job Operation screen. Enter the user name and password.*

*If the Account Track function has been specified on the machine, the screen to input the department name appears after the User Password screen. Enter the department name.*

## 7.6 Printing on a machine with the user authentication set up

When the user authentication function has been specified on the machine, a user name and password must be entered when printing.



### Reminder

To use the user authentication, "User Auth/Account Track" must be specified and user must be registered in advance. For details, refer to ["Limiting users using this machine \(Machine authentication\)" on page 9-28](#).

If a print job is sent using a user name or password that is not valid for "Authentication Mode" on the machine, or if a job is sent without setting up "User Authentication", the operation is not authenticated by the machine and the job is canceled.

If the user authentication function is set up on the machine and the "ProhibitFunctions" in [Admin. Settings]-[Security Details] is set to mode 2, the relevant user is locked and access may be blocked if the authentication information is not entered correctly.

The following three printer drivers support setup of this feature:

Konica Minolta PCL Printer Driver for Windows

Konica Minolta PostScript Printer Driver for Windows

PostScript PPD Printer Driver for Mac OS X



### Note


If printing is not allowed, printing cannot be performed even when used by a registered user. For details on the user authentication details, consult the administrator of this machine.

If performing user authentication with an optional authentication unit, enter the user name and password. For details, refer to ["Touch and Print" on page 7-28](#).

### 7.6.1 Setting up the printer driver

#### For Windows

- 1 Click the [Properties] button (or [Detail Setting] button) in the Print dialog box to display the Printing Preferences dialog box.
- 2 Click the Basic tab.
- 3 Click the [Authentication/Account Track] button.

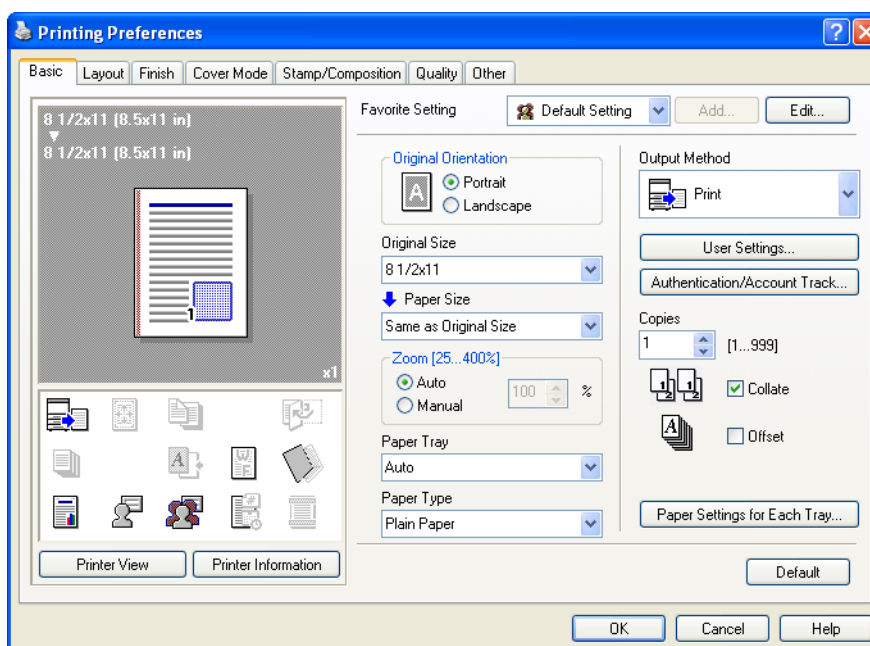

- 4 Select "Recipient User", and then enter the user name and password.
- If the machine has been set to permit public users, "Public User" can be selected to access the machine.
  - The password can also be preset in the printer driver as a default value so that it does not have to be set for each job.

- 5 Click the [OK] button, and specify the desired settings, and then print the document.
- If the entered user name is a name registered on the machine, the job is printed and counted as a job for the specified user.



#### Reminder


*If the user authentication settings are not specified on the Configure tab, user authentication cannot be performed. If using the user authentication function, be sure to specify the settings on the Configure tab. For details, refer to **"Configure tab" on page 5-3**.*

*If performing user authentication on a server, the server settings must be specified. Click the [User Authentication Server Setting] button to select the server.*

*Click the [Verify] button to communicate with this machine and check whether authentication can be performed with the user that was entered. This function is not available unless the connection is enabled for communications with the machine.*

**For Macintosh OS X**

- 1 In the "File" menu, select "Print".
- 2 Select "Output Method".
- 3 Select the "User Authentication" check box.

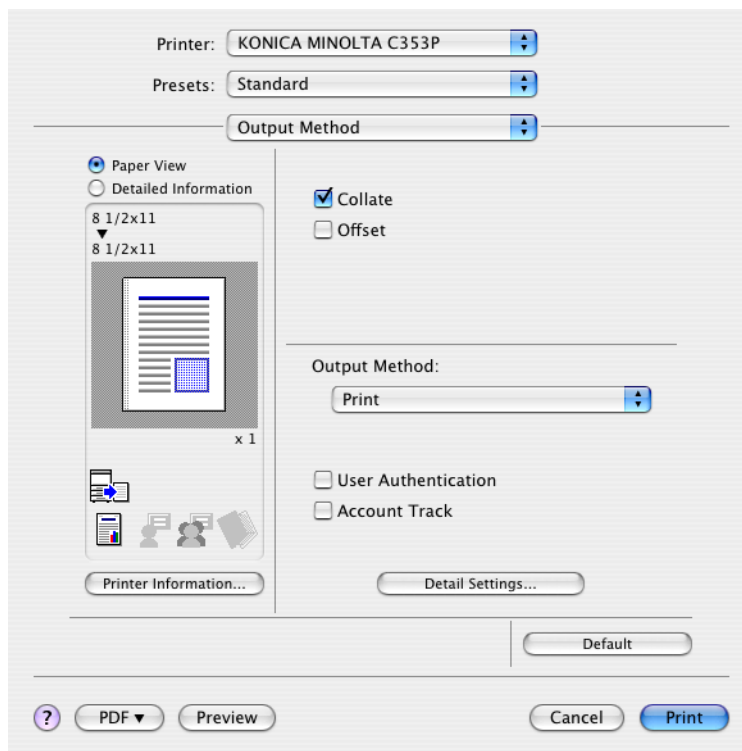

- 4 Select "Recipient User", and then enter the user name and password.
  - If the machine has been set to permit public users, "Public User" can be selected to access the machine.

**Note**

Select the "Save Settings" check box to save the specified settings. In addition, if the "Do not show this window when setting" check box is selected, the dialog box does not appear when the function is specified.

If performing user authentication on a server, the server settings must be specified. Click the [User Authentication Server Setting] button to select the server.

## 7.7 Printing with the machine enabling the Account Track function

When the Account Track function is enabled on the machine, enter a department name (or a password) when printing a job.



### Reminder

To use the Account Track function, "User Auth/Account Track" must be specified and Account Track must be registered in advance. For details, refer to ["Limiting users using this machine \(Machine authentication\)" on page 9-28](#).

If a print job is sent using a password that is not valid for the Account Track function on the machine, or if a job is sent without specifying "Account Track", the machine does not authenticate the access and the job is canceled. When the account track settings are specified on the machine, the "ProhibitFunctions" in [Admin. Settings]-[Security Details] is set to mode 2, and the authentication information is not entered correctly, the account may be locked and access may fail.

The following three printer drivers support setup of this feature:

Konica Minolta PCL Printer Driver for Windows

Konica Minolta PostScript Printer Driver for Windows

PostScript PPD Printer Driver for Mac OS X



### Note


If printing is not allowed, printing cannot be performed even for a registered account.

For the Account Track function, contact the administrator of the machine.


### 7.7.1 Setting up the printer driver

#### For Windows

- 1 Click the [Properties] button (or [Detail Setting] button) in the Print dialog box to display the Printing Preferences dialog box.
- 2 Click the Basic tab.
- 3 Click the [Authentication/Account Track] button.

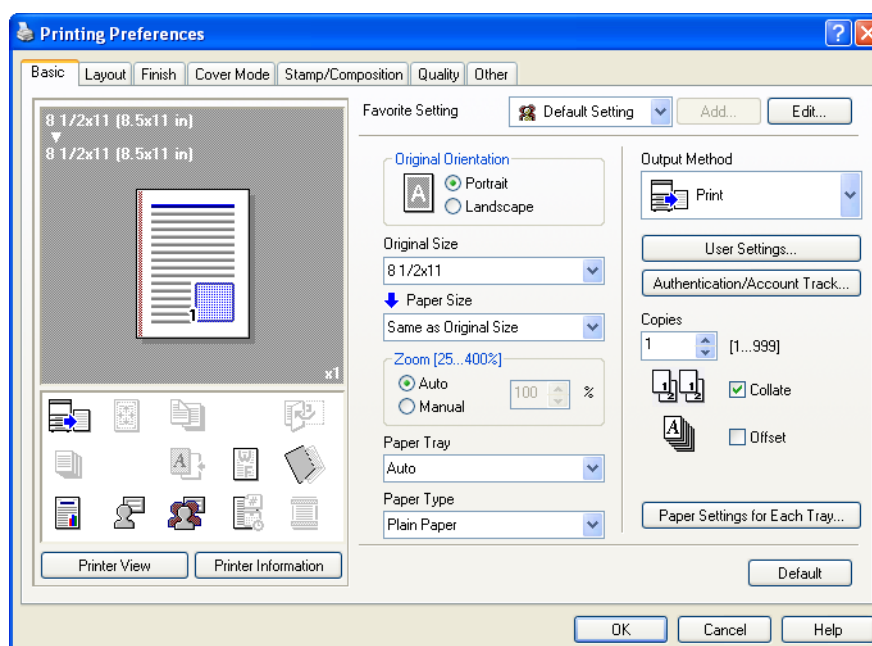

- 4 Enter the department name and password.
- The password can also be preset in the printer driver as a default value so that it does not have to be set for each job.

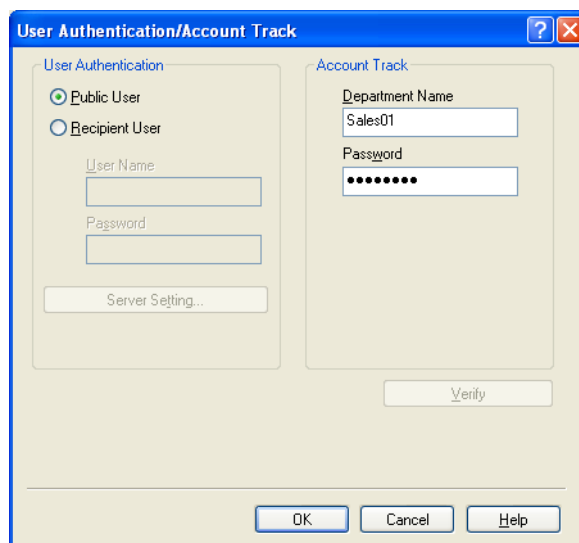

The dialog box is titled "User Authentication/Account Track". It has two main sections: "User Authentication" and "Account Track".

**User Authentication:**

- Radio buttons: ☒ Public User, ☐ Recipient User.
- Text fields: "User Name" and "Password".
- Button: "Server Setting..."

**Account Track:**

- Text field: "Department Name" (containing "Sales01").
- Text field: "Password" (containing "\*\*\*\*\*").
- Button: "Verify"

At the bottom are buttons: "OK", "Cancel", and "Help".

- 5 Click the [OK] button, and specify the desired settings, and then print the document.

If the entered password is a password registered on this machine, the job is printed and counted as a job for the account.




**Reminder**

*If the account track settings are not specified on the Configure tab, account track cannot be performed. If using the Account Track function, be sure to specify the settings on the Configure tab. For details, refer to "Configure tab" on page 5-3.*

*Click the [Verify] button to communicate with this machine and check whether authentication can be performed with the account that was entered. This function is not available unless the connection is enabled for communications with the machine.*

**For Macintosh OS X**

- 1 In the "File" menu, select "Print".
- 2 Select "Output Method".
- 3 Select the "Account Track" check box.

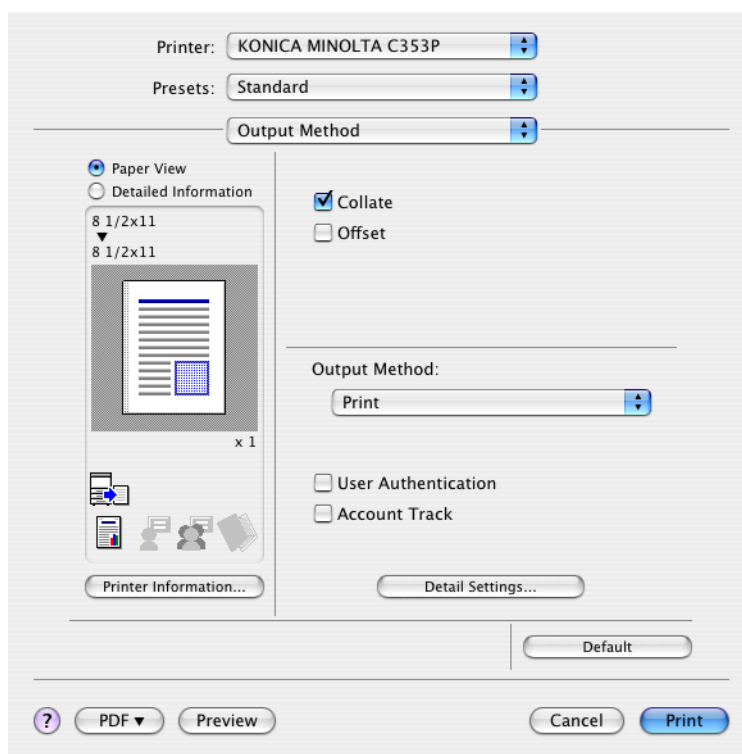

- 4 Enter the department name and password.

**Note**

Select the "Save Settings" check box to save the specified settings. In addition, if the "Do not show this window when setting" check box is selected, the dialog box does not appear when the function is specified.

## 7.8 Touch and Print

When an optional authentication unit (biometrics type) or authentication unit (IC card type) is used, simply touching the authentication unit with the finger or an IC card enables user authentication and printing. This function is referred to as the Touch and Print.

Also with this type of user authentication, to print via a computer, enter the user name and password in the printer driver, just like when using common user authentication.



### Detail

For details, refer to ["Printing on a machine with the user authentication set up" on page 7-22.](#)



### Note

To use the Touch and Print function, the Touch and Print function must be set to ON in [Admin. Settings] - [AuthDeviceSetting] - [Touch & Print] in the Utility mode accessed by pressing the [Menu/Select] key. For details, refer to ["AuthDeviceSetting" on page 8-26.](#)

### 7.8.1 Touch and Print operation procedure

- 1 Enter the user name and password in the printer driver, and then print.
  - For Windows:

- For Macintosh OS X:

- 2 Touch the authentication unit of the machine.  
Once the user is authenticated, the document is printed.

**Detail**

For details on the authentication unit, refer to *"Authentication unit (Biometric type AU-101)" on page 14-2* or *"Authentication unit (IC card type AU-201)" on page 15-2*.

## 7.8.2 Recalling a job from the control panel


The jobs output by the Touch and Print function are saved in the Touch & Print Box on this machine and can be manually retrieved by opening the Touch & Print Box.

When displaying the "Job Operation" menu, user name and password are required.

**Note**

For details on the "Utility" menu operations, refer to *"Control panel" on page 8-2*.

*Touch and Print documents are automatically deleted after a certain length of time has elapsed since their registration. The default setting for this time is specified as 1 day, and the value can be specified in the Administrator mode.*

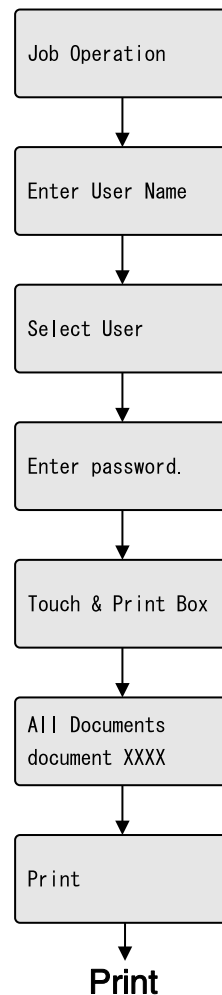

## 7.9 Specifying a user-defined encryption passphrase

The machine and the printer driver communicate with each other by encrypting a user password, account password or secure document password using a common encryption key.

Although an encryption passphrase for generating the encryption common key is preset as a default setting, it can also be generated with a user-defined encryption passphrase.

When specifying a user-defined encryption passphrase, specify the same encryption passphrase for the machine and the printer driver.



### Note

*If different values are used for the encryption passphrase for the machine and the printer driver, the machine cannot decrypt the encrypted user password, account password or secure document password. Then printing cannot be performed.*

*The encryption passphrase automatically generates the common encryption key. The common encryption key cannot be specified directly.*

### 7.9.1 Settings of this machine


Press the [Menu/Select] key, and then the "Utility" menu appears. From this menu, select [Admin. Settings] - [Security Settings] - [Driver Encryption] - [Encryption Setting].

To change the setting for "Encryption Passphrase", select "User-Defined", and then make an entry for "EncryptionPassphrase". To do without specifying a user definition for "Encryption Passphrase", select "Factory Default".



### Note

*For details on the "Utility" menu operations, refer to ["Control panel" on page 8-2](#).*

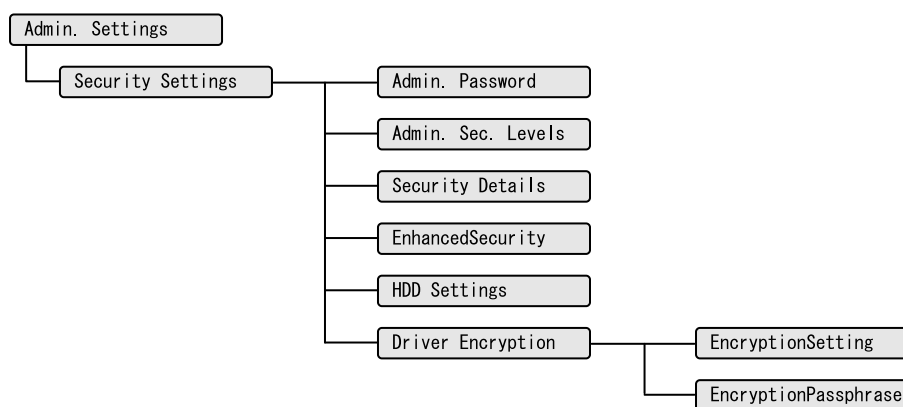

### Note

*When entering the encryption passphrase, use 20 alphanumeric characters. Specify the same encryption passphrase for the machine and the printer driver.*

*An encryption key using a series of the same character is invalid.*


## 7.9.2 Setting up the printer driver

The following three printer drivers support setup of this feature:

- Konica Minolta PCL Printer Driver for Windows (PCL driver)
- Konica Minolta PostScript Printer Driver for Windows (PS driver)
- PostScript PPD Printer Driver for Mac OS X

### For Windows

- 1 Display the Properties screen.
  - To display the Properties window, open the Printers window or the Printers and Faxes window. In that window, right-click the icon of the installed printer, and then click "Properties".
- 2 Click the Device Information tab.
- 3 Select the "Encryption Passphrase" check box and enter the encryption passphrase.
  - To do without specifying a user definition for "Encryption Passphrase", clear "Encryption Passphrase".

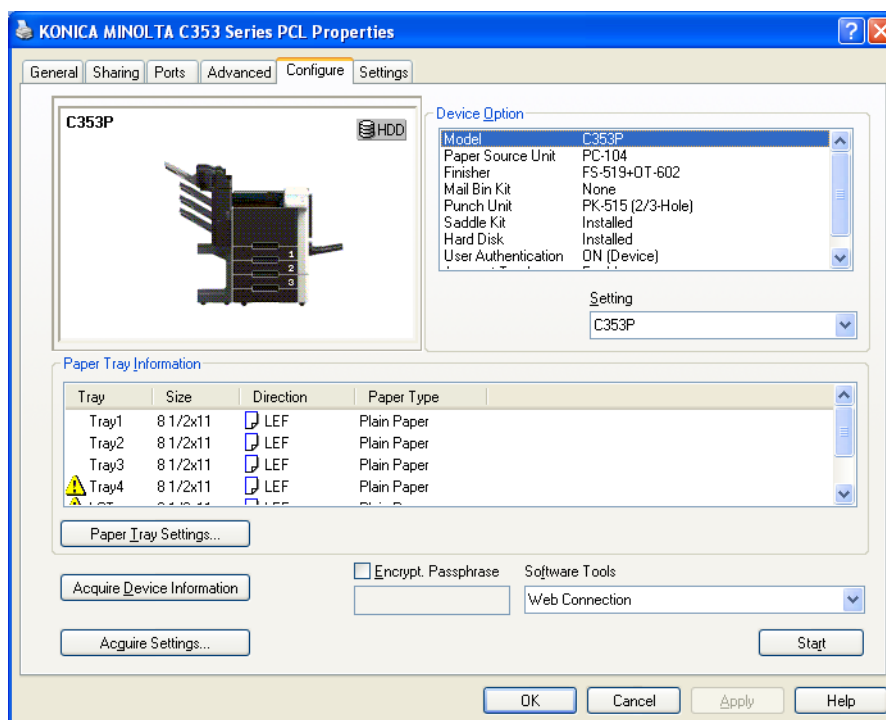

- 4 Click the [OK] button.



#### Note


*When entering the encryption passphrase, use 20 alphanumeric characters. Specify the same encryption passphrase for the machine and the printer driver.*

*An encryption key using a series of the same character is invalid.*


*When SSL is enabled in OpenAPI and the printer driver can obtain the device information automatically, it is also possible to obtain the common encryption key from this machine automatically.*

**For Macintosh OS X**

- 1 Display the Output Method dialog box.
- 2 Click the [Detail Settings] button.  
The Detail Settings dialog box appears.
- 3 Select "Administrator Settings", and then click the [Settings] button.  
The Administrator Settings dialog box appears.

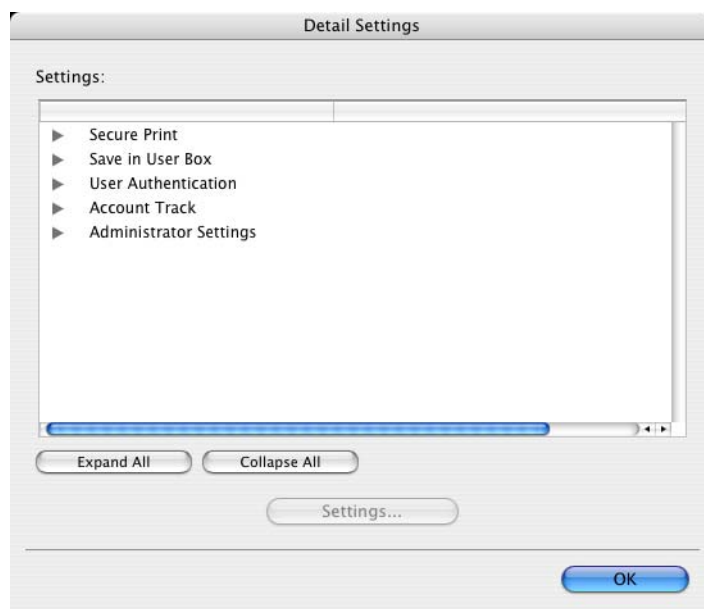

- 4 Select the "Encryption Passphrase" check box and enter the encryption passphrase.
  - To do without specifying a user definition for "Encryption Passphrase", clear "Encryption Passphrase".

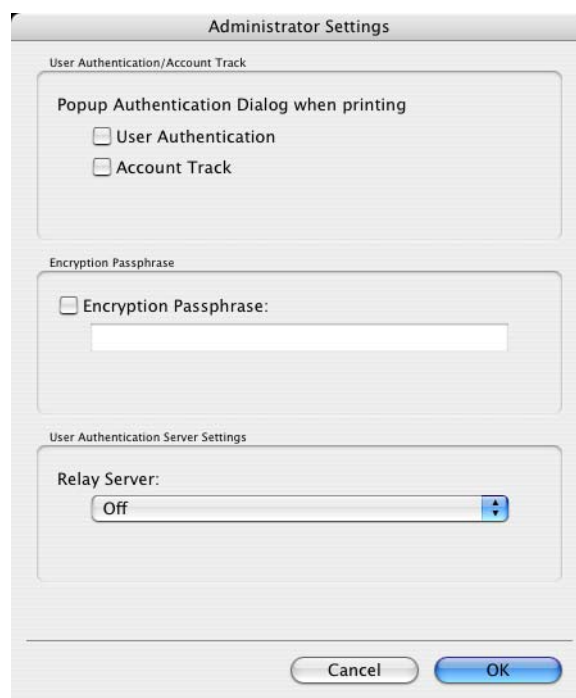

- 5 Click the [OK] button.

**Note**

*When entering the encryption passphrase, use 20 alphanumeric characters. Specify the same encryption passphrase for the machine and the printer driver.*

*An encryption key using a series of the same character is invalid.*

## 7.10 ICC profile settings

The printer driver has a function to specify ICC profiles registered on the machine when performing a print job.



### Note

To specify the default setting for the ICC profile registered on the machine, go to [Set ICC Profile].

To call [Set ICC Profile], press the [Menu/Select] key, and then the "Utility" menu appears. From this menu, select [User Settings] - [Printer Settings] - [PS Settings] - [Set ICC Profile].

For details on the "Utility" menu operations, refer to "[Control panel](#)" on page 8-2.

In order to utilize the ICC profiles added to the machine, the ICC profiles on this machine must be registered in the printer driver beforehand. For details, refer to "[Registering ICC profiles in the printer driver](#)" on page 7-36.


### 7.10.1 Setting up the printer driver

The following two printer drivers support setup of this feature:

- Konica Minolta PostScript Printer Driver for Windows (PS driver)
- PostScript PPD Printer Driver for Mac OS X

#### For Windows

- 1 Display the Quality tab.
- 2 Click the [Quality Adjustment] button.  
The Quality Adjustment dialog box appears.
- 3 Click the ICC Profile tab.
- 4 Click the [Detail] button and select a document type.

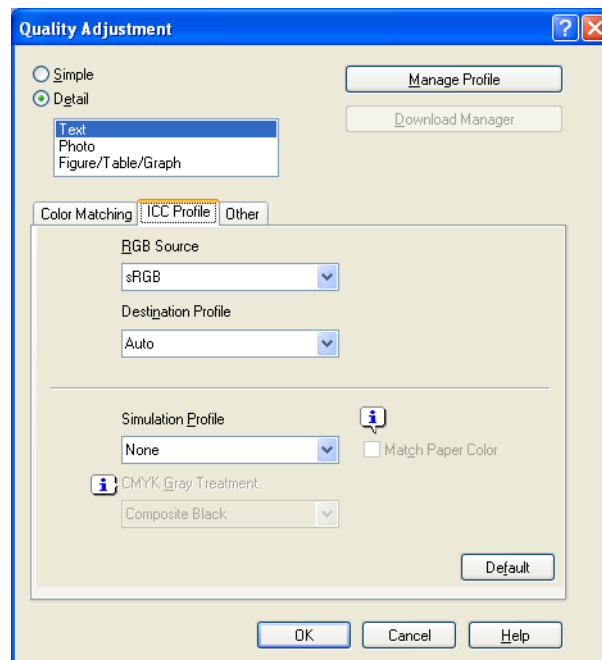

- 5 Select relevant items for "RGB Source", "Destination Profile", and "Simulation Profile", respectively.
  - This enables to select ICC profiles registered in the printer driver.
 When printing, color processing is performed according to the selected ICC profiles.
- 6 Click the [OK] button.

**For Macintosh OS X**

- 1 Display the Quality dialog box.
- 2 Click the [Quality Adjustment] button.  
The Quality Adjustment dialog box appears.
- 3 Select relevant items for "RGB Source", "Destination Profile", and "Simulation Profile" according to the type of the document to be printed.
  - This enables to select ICC profiles registered in the printer driver.



When printing, color processing is performed according to the selected ICC profiles.

- 4 Click the [OK] button.

## 7.11 Registering ICC profiles in the printer driver

Additional ICC profiles downloaded and added to the machine can be registered in the printer driver.

A registered ICC profile can be specified when printing.

### 7.11.1 Setting up the printer driver

The following two printer drivers support setup of this feature:

- Konica Minolta PostScript Printer Driver for Windows
- PostScript PPD Printer Driver for Mac OS X




#### Detail

To register ICC profile in the machine, use the Download Manager (bizhub) application. For details, refer to the Help for the application software.

#### For Windows


- 1 Click the Quality tab.
- 2 Click the [Quality Adjustment] button.  
The Quality Adjustment dialog box appears.
- 3 Click the [Manage Profile] button.

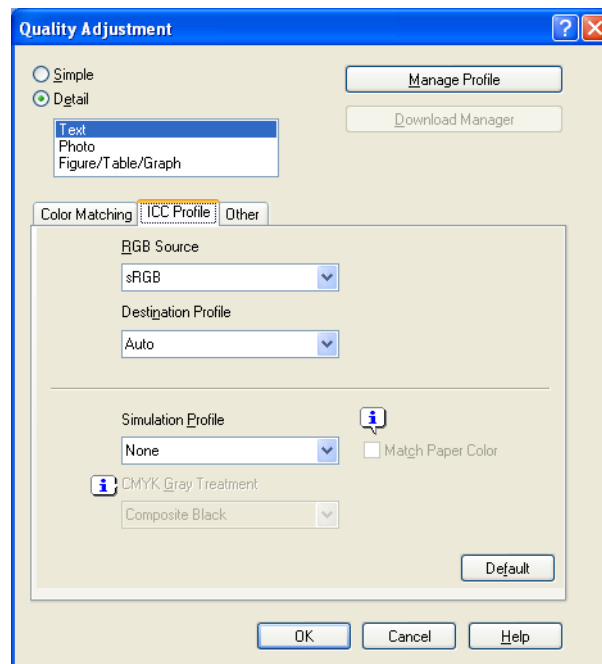

- The Color Profile Management function communicates with the machine to read ICC profiles available to the machine. This function is not available unless the connection is enabled for communications with the machine.
  - If the machine is connected via the USB connector, it cannot read ICC profiles available to the machine.
  - Click [Download Manager], and the Download Manager (bizhub) application starts. This function is only available when Download Manager (Bizhub) is installed.
  - Downloading of ICC profile is available only if the optional HDD is installed.
- The Color Profile Management dialog box appears.

- 4 Check that a list of available profiles that are additionally registered on the machine is displayed.

- 5 Click the tab and select a color profile type.

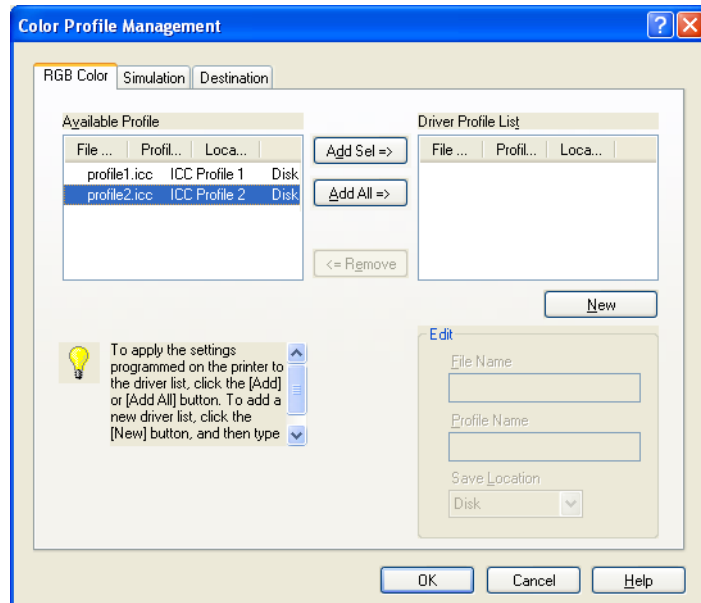

- 6 Select a desired profile from the "Available Profile" list, and then click the [Add] button.
- To register the current driver settings as a profile, click the [New] button, and then enter a file name and a profile name.
  - The profile name can be changed from "Edit".
- The selected profile is added to "Driver Profile List". Then it can be selected in the Quality Adjustment dialog box from ICC Profile entries.

- 7 Click the [OK] button.

#### For Macintosh OS X


- 1 Display the Quality dialog box.
- 2 Click the [Quality Adjustment] button.  
The Quality Adjustment dialog box appears.
- 3 Click the [Manage Profile] button.



- The Color Profile Management function communicates with the machine to read profiles available to the machine. This function is not available unless the connection is enabled for communications with the machine.
- Click [Download Manager], and the Download Manager (bizhub) application starts. This function is only available when Download Manager (bizhub) is installed.

The Color Profile Management dialog box appears.

- 4 Check that a list of available profiles that are additionally registered on the machine is displayed.
- 5 Select a color profile type from the drop-down list.

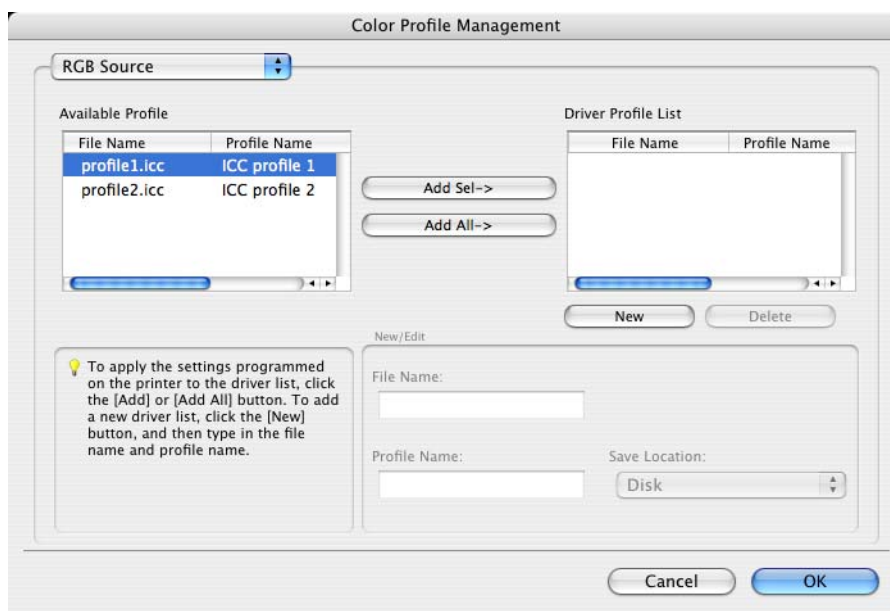

- 6 Select a desired profile from the "Available Profile" list, and then click the [Add ->] button.
  - To register the current driver settings as a profile, click [New], and then enter a file name and a profile name.
  - The profile name can be changed from "New/Edit".

The selected profile is added to "Driver Profile List". Then it can be selected in the Quality Adjustment dialog box from profile entries.

- 7 Click the [OK] button.

## 7.12 Banner paper printing function

By specifying the banner print settings on the control panel, allows you to print on the paper up to 47-1/4 inches (1,200 mm) feeded from the bypass tray.

In the following section, setting long paper and printing on it is referred to as banner paper printing.

### 7.12.1 Copy paper

#### Applicable paper

Paper width	Paper length	Paper type
8-1/4 to 11-3/4 inches (210 to 297 mm)	18 to 47-1/4 inches (457.3 to 1,200.0 mm)	Thick paper 1, Thick paper 1 + Duplex 2nd Side, Thick paper2, Thick paper2 + Duplex 2nd Side (24-1/4 to 55-1/2 lb (127 to 210 g/m <sup>2</sup> ))

### 7.12.2 Printer drivers and supported operating systems

The following drivers support banner paper printing:

- Konica Minolta PCL Printer Driver(PCL driver)
- Konica Minolta PostScript Printer Driver(PS driver)

### 7.12.3 Setting up the printer driver

Specify the output paper size as a custom paper size.

- 1 Click the Basic tab.
- 2 Select "Custom Size" from "Original Size" or "Paper Size".  
The Custom Size Settings dialog box appears.
- 3 Specify the length and the width of the custom paper size according to the selected measurement unit.
- 4 Specify the paper type.  
– If necessary, specify the other settings.
- 5 Click the [OK] button.




#### Note

*For the Konica Minolta PCL Printer Driver, custom size setting can also be preregistered on the Initial Setting tab in the printer driver activated from the Windows "Printer" window ("Printers and Faxes" for Windows XP/Server 2003).*



### 7.12.4 Printing

To execute the Banner paper printing, press the [Menu/Select] key, and then the "Utility" menu appears. From this menu, select [Banner Printing].

- 1 Press the [Menu/Select] key.
- 2 Select [Banner Printing], and then press the [Menu/Select] key.
- 3 Select [Yes], and then press the [Menu/Select] key.

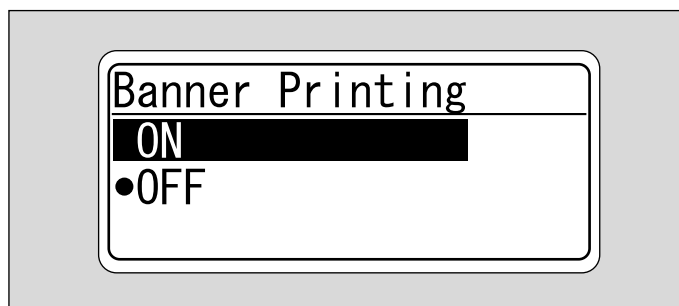


- 4 When finisher FS-609 is installed, slide the finisher away from this machine, and then load the banner paper that can be used for the paper transport on the finisher.

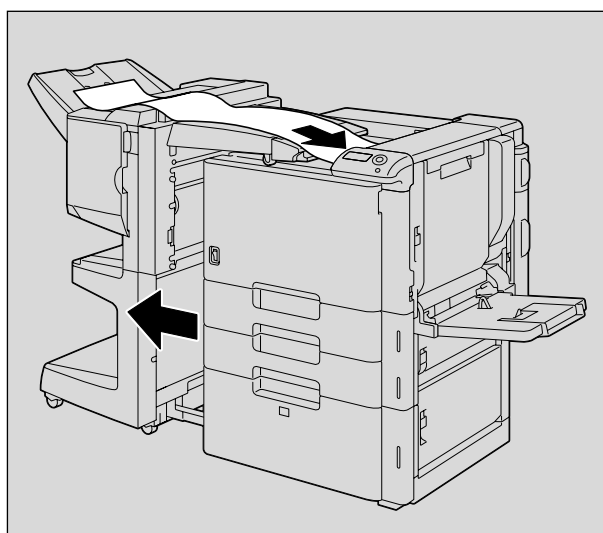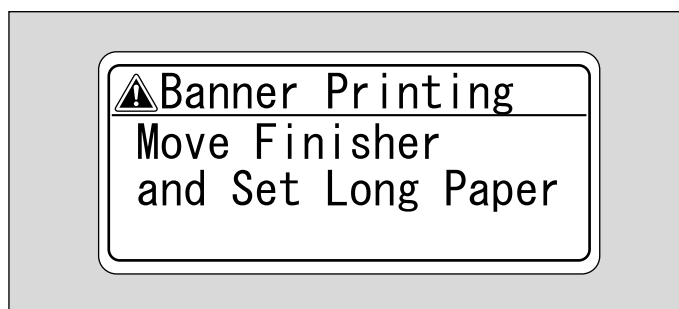


- 5 Send and print the document data of the banner size via the computer.
- 6 Open the bypass tray.

- 7** Install the mounting kit to the bypass tray.

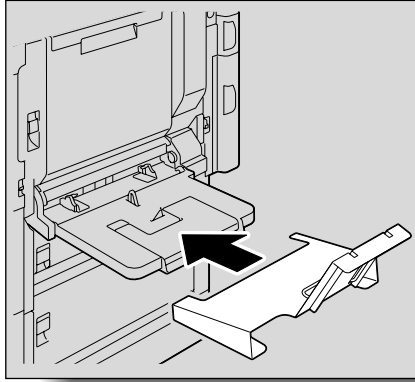


- 8** Erect the guide of the mounting kit.

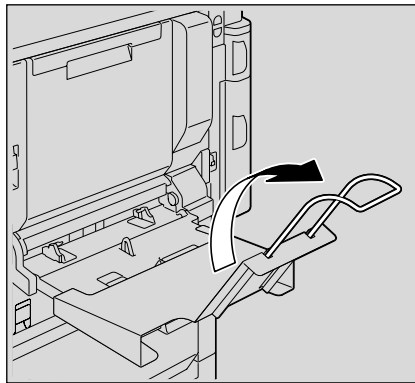


- 9** With the side to be printed on facing down, insert the paper as much as possible into the feed slot.  
– Place in the tray as many sheets as the specified number of copies to be printed.

- 10** Slide the lateral guides of the bypass tray to fit the size of paper being loaded.

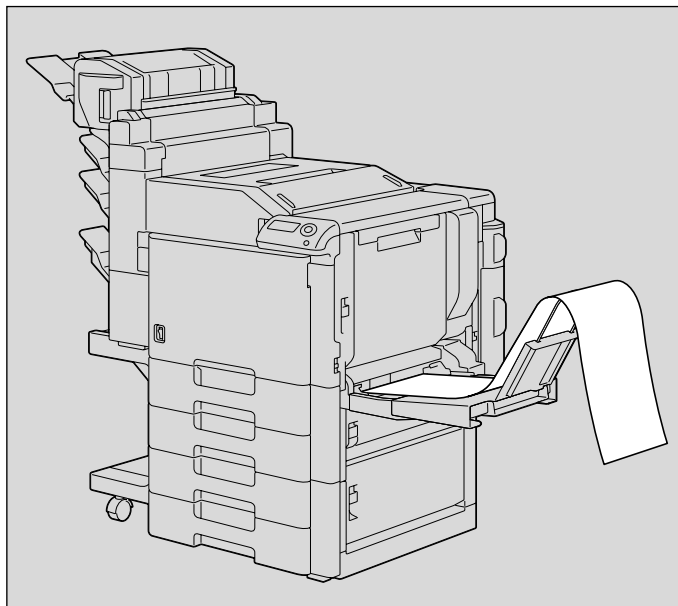


- 11** If the following screen appears, press the [Menu/Select] key.

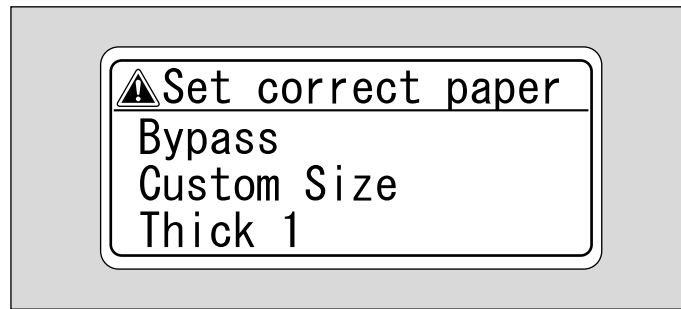


The data is printed.

To continue printing, send the document data via the computer.

- 12** To finish printing the job, press the [Cancel] key, select [Yes], and then press the [Menu/Select] key. Not to finish printing the job, select [No] to continue printing.

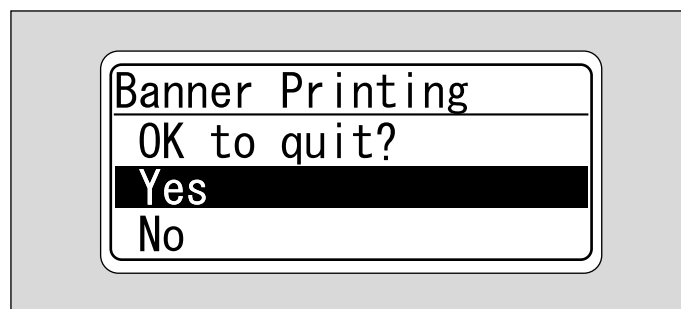

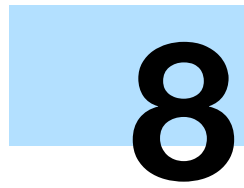

**Settings for control panel**

---

## 8 Settings for control panel

### 8.1 Control panel

The control panel allows you to print or delete jobs, specify default settings for paper, or change network settings.

#### 8.1.1 Basic operations


The following shows examples of changing settings on the control panel using the following functions.

- Basic menu operations -> Printing Configuration Page
- Operations for changing numeric values -> Displaying the Administrator Settings screen

##### Basic menu operations


Example: Printing Configuration Page

- 1 Press the [Menu/Select] key.

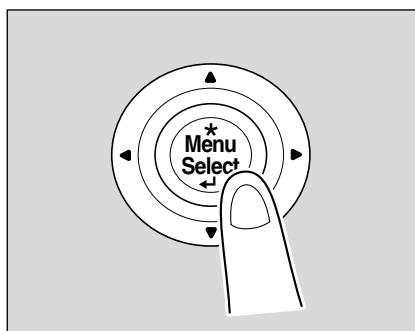


The Main Menu of the "Utility" menu appears.

- 2 Press the [▼] key several times to select [User Settings], and then press the [Menu/Select] key.

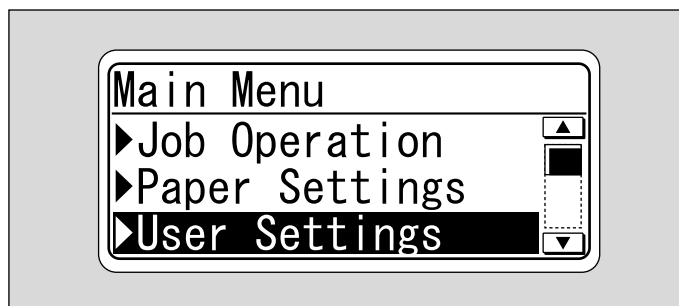


The User Setting Menu appears.

- 3 Press the [▼] key several times to select [Print Reports], and then press the [Menu/Select] key.

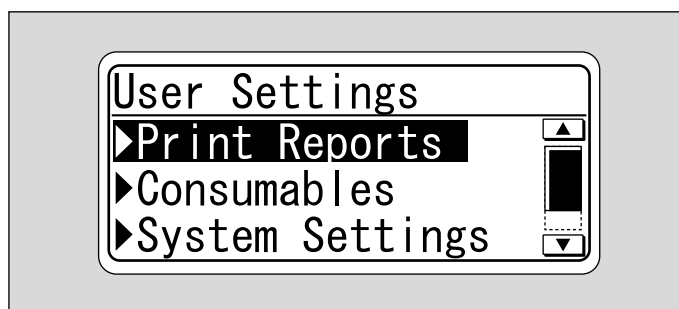


The Print Reports Menu appears.

- 4 Press the [▼] key several times to select [Configuration], and then press the [Menu/Select] key.

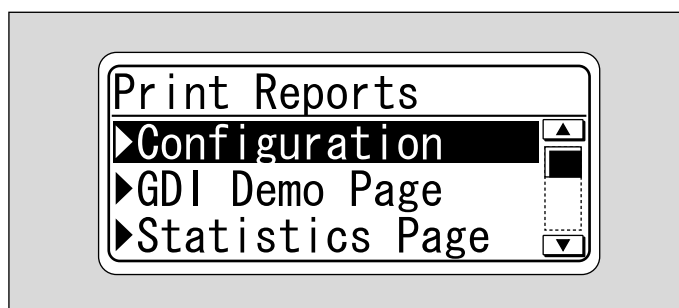

The Configuration Menu appears.

- 5 Press the [▼] key several times to select the side to be printed on, and then press the [Menu/Select] key.

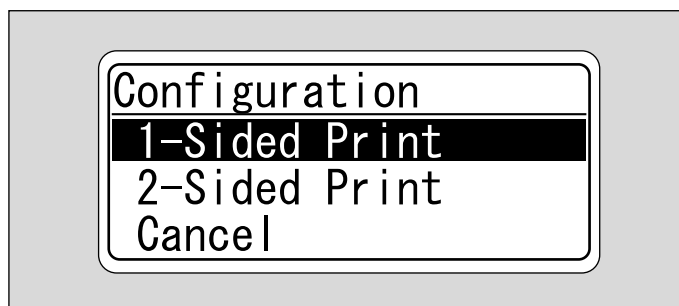

Printing starts.



...

**Note**

When "ON" is specified for [Admin. Sec. Levels], the password is required to display the User Setting Menu.


Specify the password in [Admin. Password] accessed by selecting [Admin. Settings] - [Security Settings].

When selecting a menu or item, you can press the [▶] key instead of the [Menu/Select] key.

### Operations for changing numeric values


Example: Displaying the Administrator Settings screen

- 1 Press the [Menu/Select] key.

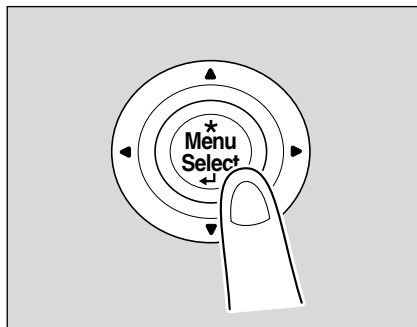

The Main Menu of the "Utility" menu appears.

- 2 Press the [▼] key several times to select [Admin. Settings], and then press the [Menu/Select] key.

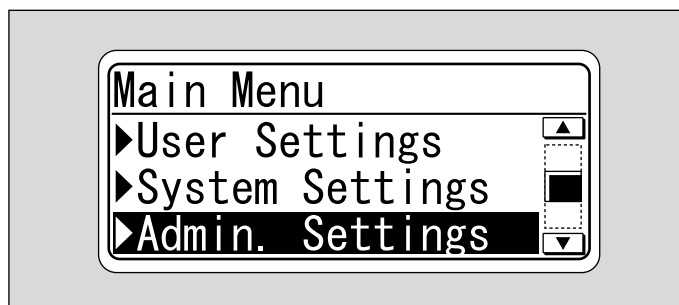

The password input screen appears.

- 3 Press the [▲] or [▼] key several times to display the character to be entered at the first character place. Press the [▲] key to switch the display in the order of "a, b, c...". Press the [▼] key to switch the display in the order of "9, 8, 7...".


Characters are displayed in the following order.

abcde...xyzABCDE...XYZ!#\$%&'()\*+,-./:;<=>?@[\]^\_`{|}~0123456789


[▲]→

.....


←[▼]

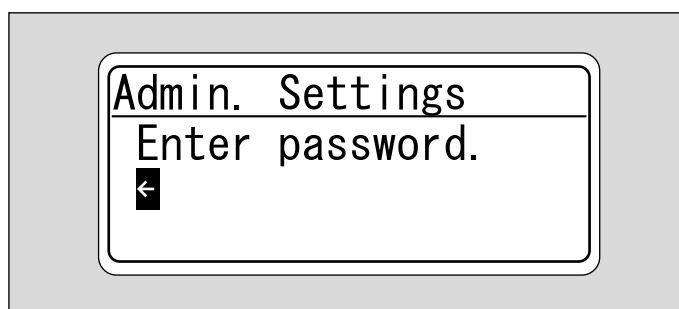


- 4 Press the [►] key to move the cursor to the second character place.  
If an incorrect value was entered, press the [◀] key to move the cursor, and then specify the correct value.

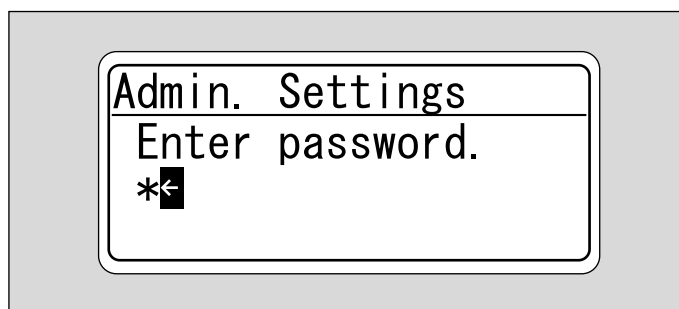

- 5 Repeat steps 3 and 4 to specify values for all digits of the password.

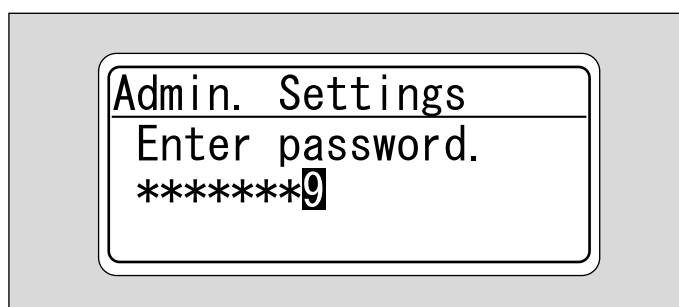

- 6 After entering the password, press the [Menu/Select] key.  
The Admin. Settings Menu appears where the desired Administrator Setting parameter can be changed.

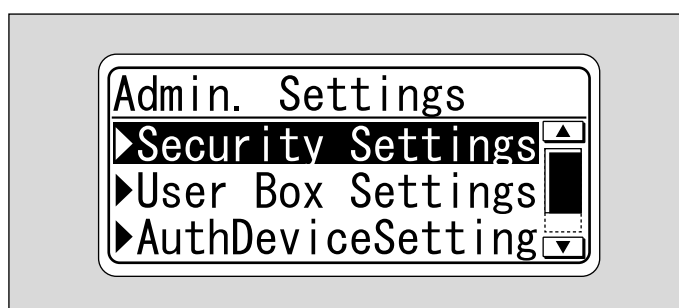

**Note**

*When selecting a menu or item, you can press the [►] key instead of the [Menu/Select] key.*

*Specify the password in [Admin. Password] accessed by selecting [Admin. Settings] - [Security Settings].*

## 8.2 List of "Utility" menu parameters

The following outlines items displayed in the "Utility" menu.


The menu to be displayed differs depending on other parameters or whether options are installed.

### Main Menu

**Note**

*[Meter Count] may be displayed depending on settings specified by the technical administrator. For details, contact your*

## Paper Setting Menu

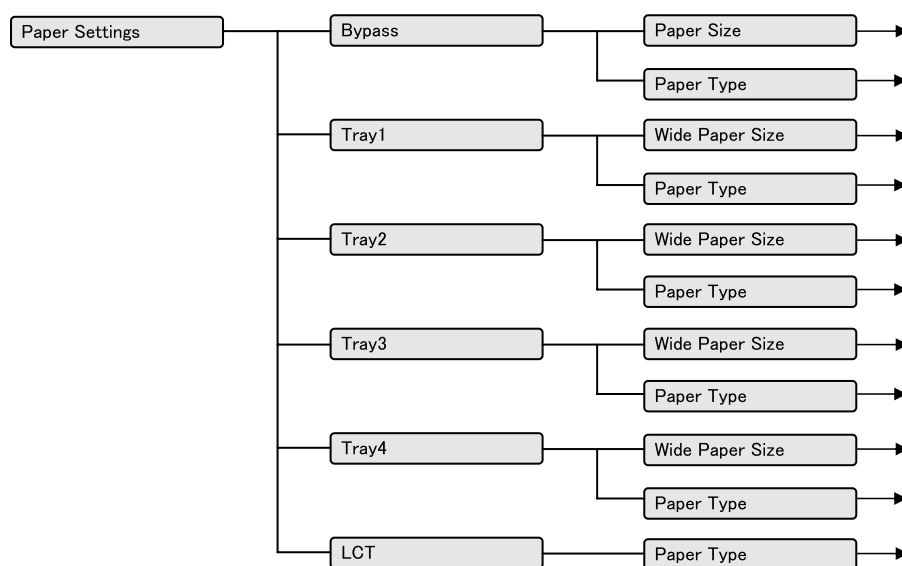

### Note

When "ON" is specified for [Admin. Sec. Levels] of [Admin. Settings], the password is required to display the Paper Setting Menu.


Specify the password in [Admin. Password] accessed by selecting [Admin. Settings] - [Security Settings].


If an incorrect password is entered, the Paper Setting Menu does not appear.

When the password became invalid due to an authentication failure and the machine enters the restrict operation status, restart the machine.

When "Custom Size" or "Wide Paper Size" is selected for [Paper Size] of [Bypass], specify a paper size using a numeric value.

The paper tray to be displayed differs depending on the installed options.

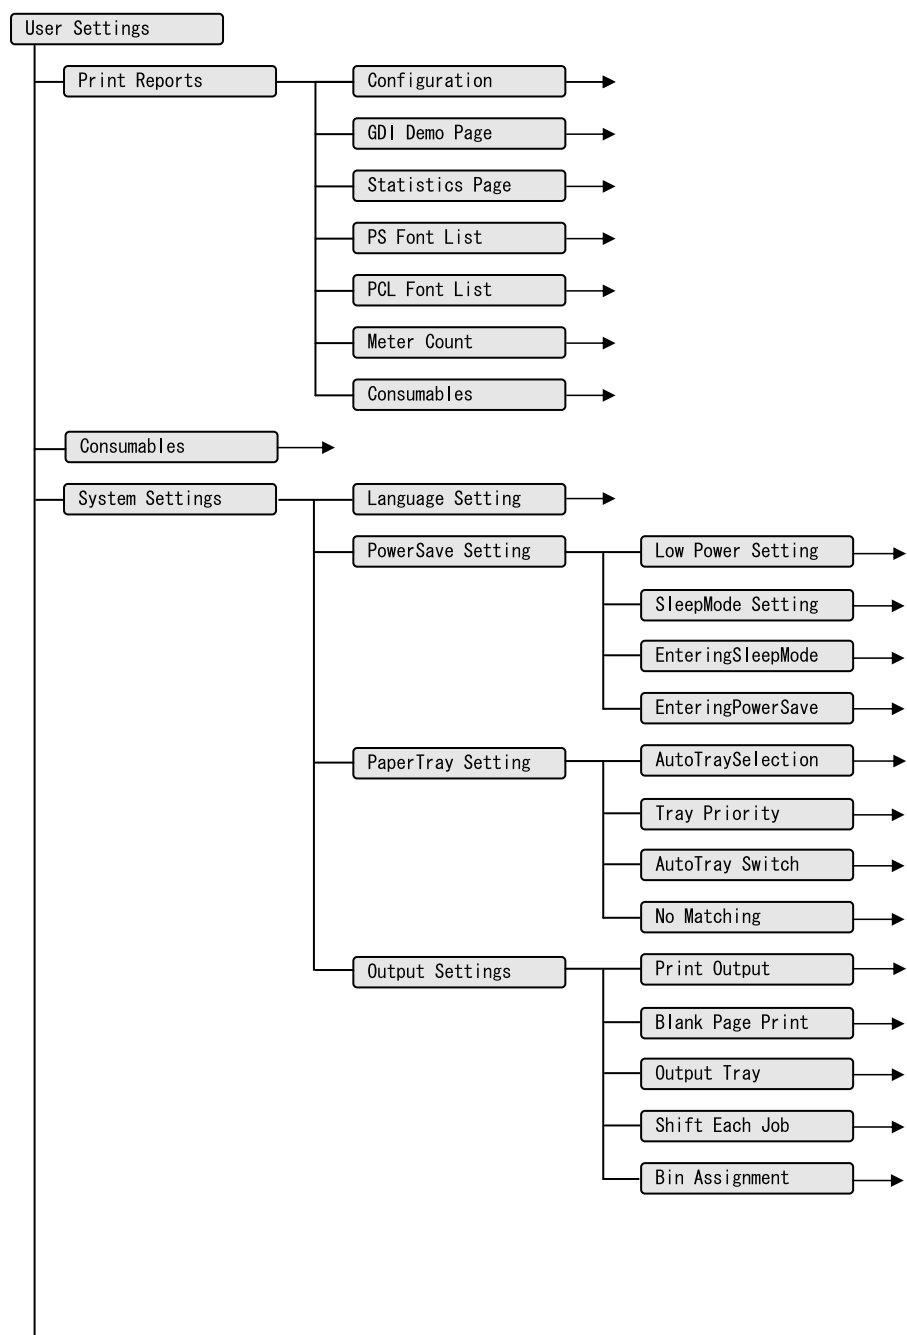**User Setting Menu**

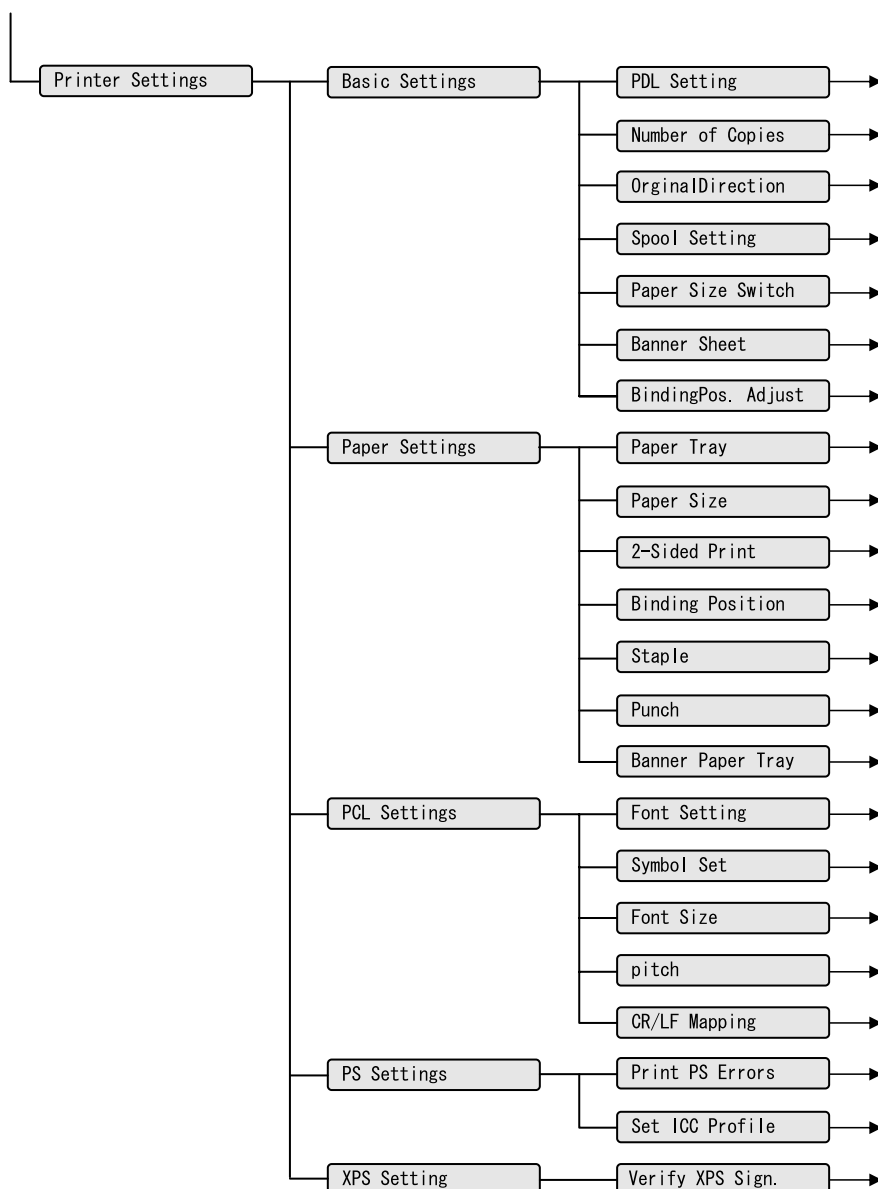

### Note

When "ON" is specified for [Admin. Sec. Levels] of [Admin. Settings], the password is required to display the User Setting Menu.

Specify the password in [Admin. Password] accessed by selecting [Admin. Settings] - [Security Settings].

If an incorrect password is entered, the User Setting Menu does not appear.


When the password became invalid due to an authentication failure and the machine enters the restrict operation status, restart the machine.


[SleepMode Setting] is not displayed if [Restrict] is selected for [Don't got to Sleep] in [Service Mode]. For details, contact your service representative.


[Output Tray] and [Shift Each Job] appear when an optional finisher is installed.

[Bin Assignment] appears when the Mailbin kit is installed on the optional finisher.

## System Setting Menu

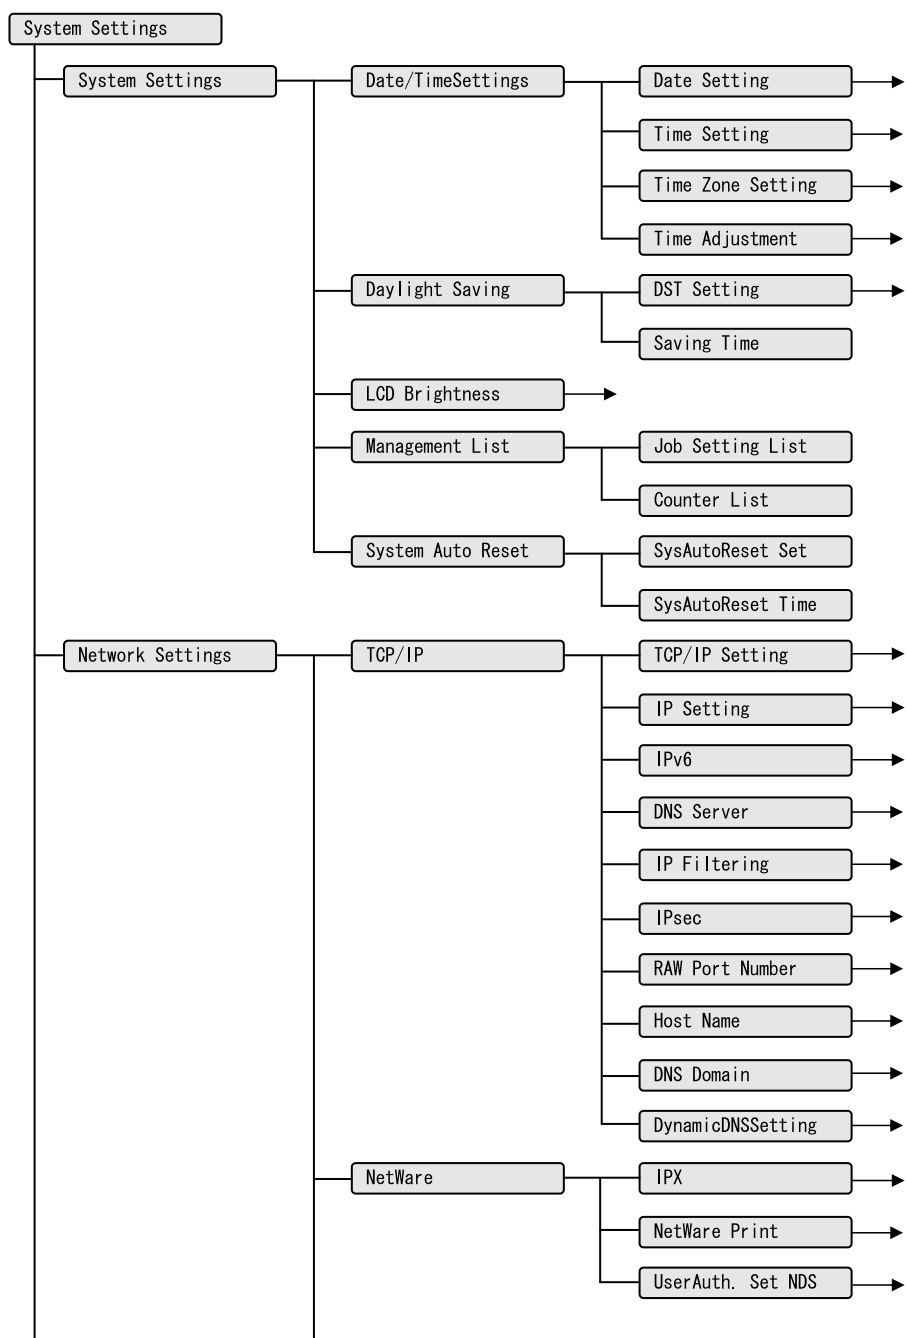

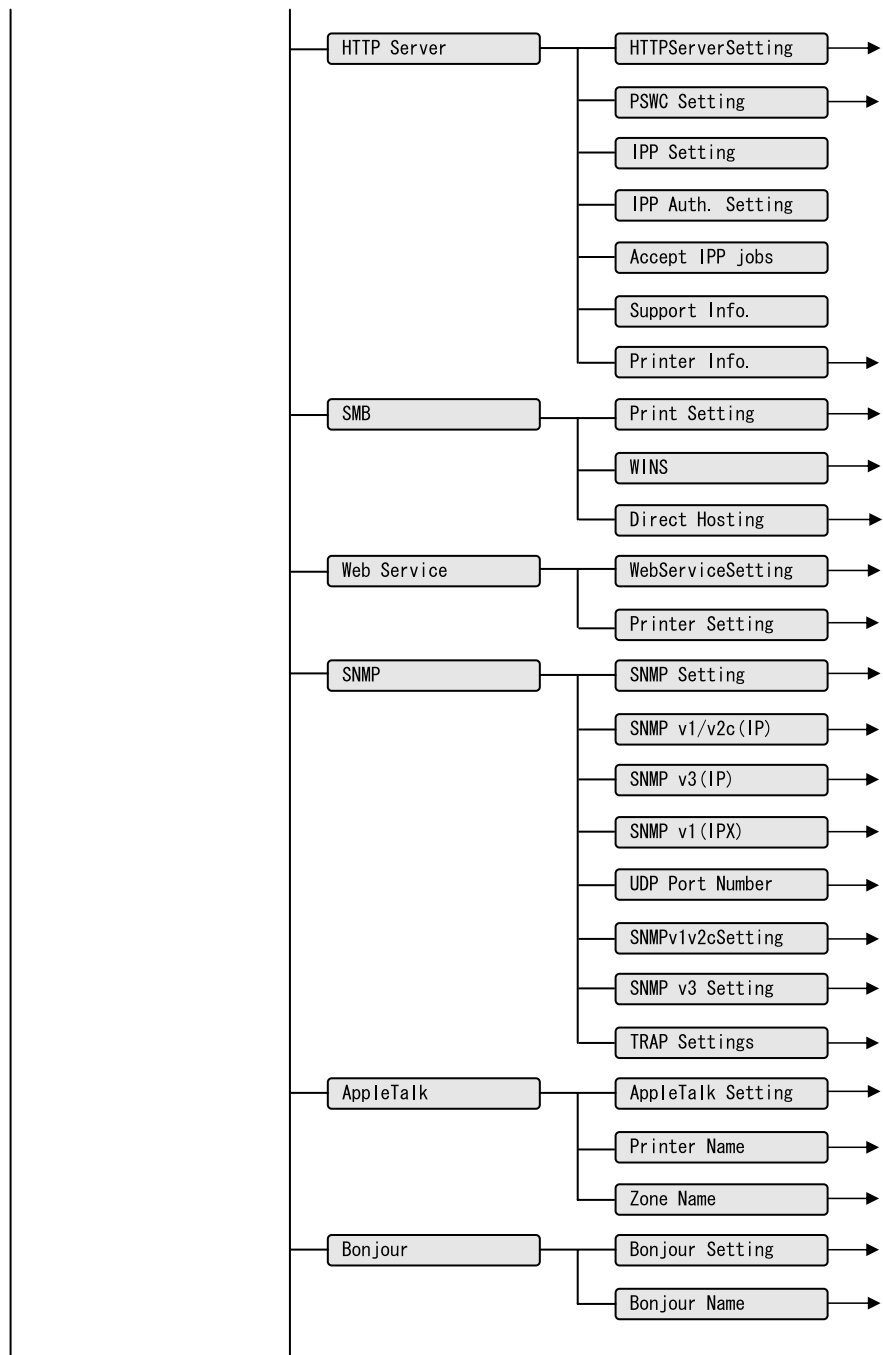

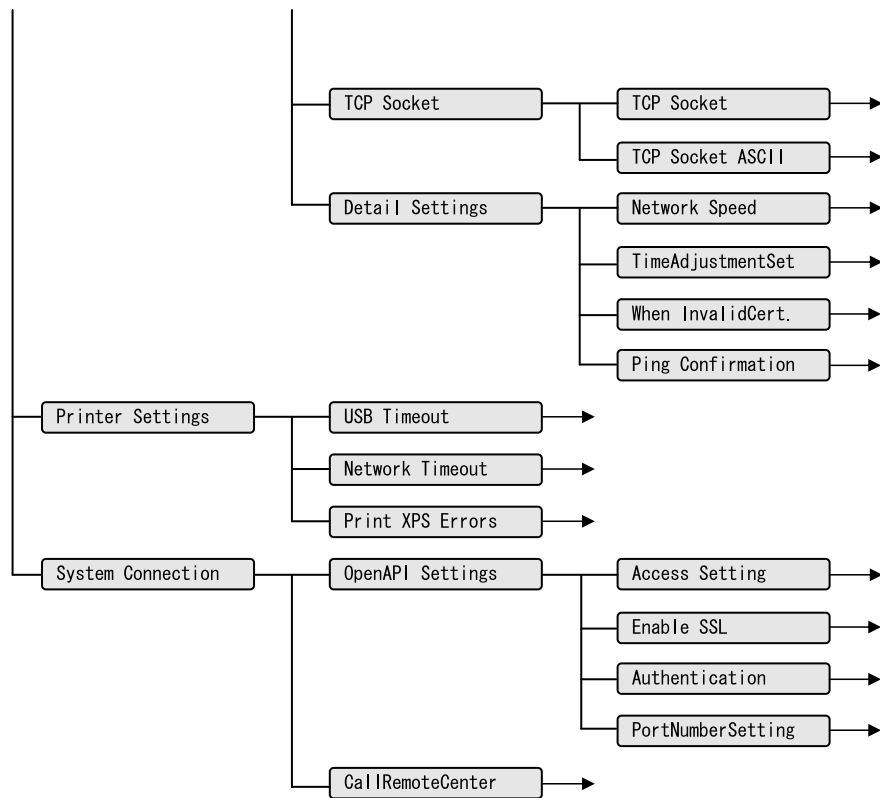

#### Note

When "ON" or "MINIMUM" is specified for [Admin. Sec. Levels] of [Admin. Settings], the password is required to display the System Setting Menu.

Specify the password in [Admin. Password] accessed by selecting [Admin. Settings] - [Security Settings].

If an incorrect password is entered, the System Setting Menu does not appear.

When the password became invalid due to an authentication failure and the machine enters the restrict operation status, restart the machine.

[Date/TimeSettings] - [Time Adjustment] are displayed when "ON" is specified for "NTP Setting" which is accessible by selecting [Network Settings] - [Detail Settings] - [TimeAdjustmentSet].

The parameters for [TCP/IP], [HTTP Server], [SNMP], [AppleTalk], and [Bonjour] are displayed when "ON" is specified for [TCP/IP Setting], [HTTPServerSetting], [SNMP Setting], [AppleTalkSetting], and [Bonjour Setting].


If the network settings are changed, restart the machine to apply changes.

When the power is turned off, then on, turn off the power, wait at least 10 seconds, and then turn it on. Otherwise, the machine may not operate correctly.

[OpenAPI Settings] - [SSL] are not displayed when the SSL certificate is not installed or "ON" is specified for [EnhancedSecurity].

[CallRemoteCenter] is not displayed if center registration performed by selecting [Service Mode] - [CS Remote Care] is not completed. For details, contact your service representative.



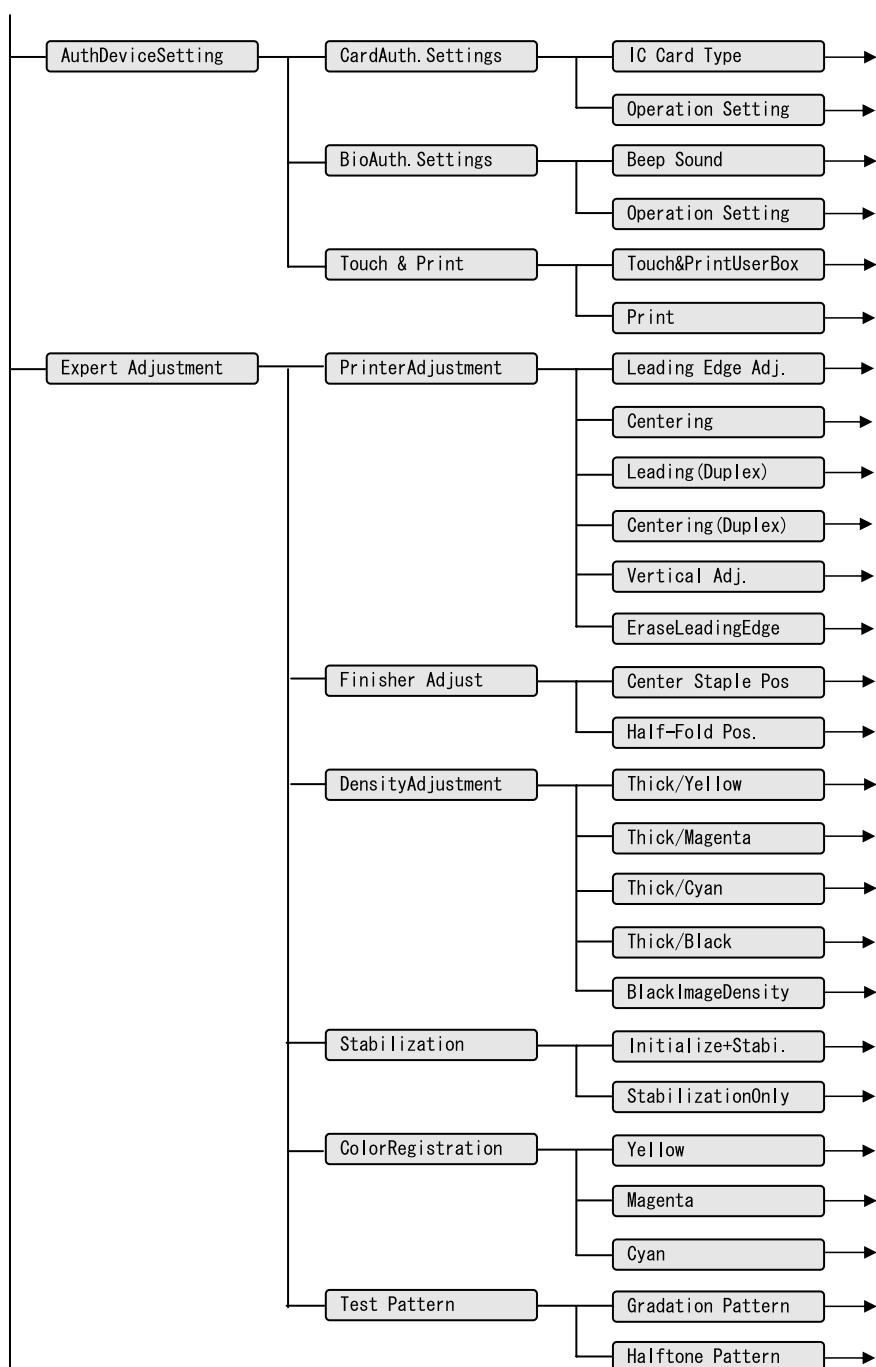

### Note

If an incorrect administrator password is entered, the Admin. Settings Menu does not appear.

When the password became invalid due to an administrator authentication failure and the machine enters the restrict operation status, restart the machine.

[PrintDataCapture] is displayed when "OFF" is specified for [EnhancedSecurity].

[HDD Settings] and [User Box Settings] are displayed when a hard disk drive is installed.

[OverwritePriority] and [HDD EncryptionSet] are displayed when the Security kit is installed.

[EncryptionPassphrase] is displayed when [User-Defined] is specified for [EncryptionSetting].

[AuthDeviceSetting] is displayed when the authentication unit and HDD are installed.

[Finisher Adjust] is displayed when the finisher is installed.



## 8.3 Parameters

### 8.3.1 Job Operation Menu

#### User name input items

Menu	Description
User Name	Enter the user name.
User Name List	Select the user name from the user name list displayed.
User Password	Enter the user password.



#### Note

*The User name input items are displayed when using the User authentication function on the machine.*

#### Account name input items

Menu	Description
Account Name	Type in the name for the account.
Account Password	Type in the password for the account.



#### Note

*The Account name input items are displayed when using the User authentication function on the machine.*

#### Document selection items

Menu	Description
Public User Box	Select the document, and then print it. When a password is specified, the password must be entered to select the box. When there are multiple documents, select "All Documents" or individual document.
Personal User Box	
Account User Box	
Secure PrintBox	Select the document, and then print it. The ID and password must be entered.
AnnotationUserBox	Select the document, and then print it. When a password is specified, the password must be entered to select the box. When there are multiple documents, select "All Documents" or individual document.
EncryptedPDFBox	Select the document, and then print it. When executing printing, the password specified for the PDF must be entered.
Touch&PrintBox	Normally printing is executed when the user is authenticated. Selection of a document in this box is not required.
Proof Print	Select the document, and then print it.



#### Note

*[Personal User Box] is displayed when using the User authentication function on the machine.*

*[Account User Box] is displayed when using the Account Track function on the machine.*

*The User Box function is available only if a hard disk is installed on this machine.*

### Printing items

When documents, one document from one box, are selected in the Job Operation Menu, the printing-related menu appears.

Menu	Description	Default Setting
Print	Start printing.	–
Simplex/Duplex	Specify "2-Sided" or "1-Sided".	1-Side
Number of Copies	Specify the number of copies.	001
Center Staple Pos	Adjust the center binding position.	0
Half-Fold Pos.	Adjust the center folding position.	0



#### Note

*[Binding Position] is displayed when "Center Staple and Fold" is specified for the printer driver.*

*[Fold Position] is displayed when "Fold" is specified for the printer driver.*

*Settings for [Center Staples Pos] and [Half-Fold Pos] vary depending on the finisher installed. When FS-609 is installed, the values for position adjustment can only be specified. When FS-519 is installed, the values for position adjustment can be specified for each paper size or paper type.*

## 8.3.2 Paper Settings Menu

Menu	Description	Default Setting
Bypass	Paper Size	Select the size of paper loaded in Bypass.
	Paper Type	Select the type of paper loaded in Bypass.
Tray1-4	Wide Paper Size	Specify when using wide paper.
	Paper Type	Select the type of paper loaded in Tray1-4.
LCT	Paper Type	Select the type of paper loaded in LCT.



#### Note

*The paper tray to be displayed differs depending on the installed options.*

*Among the Paper Settings value, values marked with "-R" represent that the papers are set in the transversal direction, and values marked with "W" represents the wide papers.*

*When "Custom Size" or "Wide Paper Size" is selected for [Paper Size] of [Bypass], specify a paper size using a numeric value.*

## 8.3.3 User Settings Menu

### Print Reports

Menu	Description
Configuration	Outputs a list of settings in the machine.
GDI Demo Page	Outputs a test page.
Statistics Page	Prints the statistics page including the number of copies.
PS Font List	Outputs the PS font list.
PCL Font List	Outputs the PCL font list.
Meter Count	Prints the Meter Count page.
Consumables	Prints the consumables information page.

## Consumables

Menu	Description
Imaging Unit C	Displays the status of use.
Imaging Unit M	
Imaging Unit Y	
Imaging Unit K	
Fusing Unit	
TransferBelt Unit	

## System Settings

Menu		Description	Default Setting
Language Setting		Select the language of the panel message.	English
PowerSave Setting	Low Power Setting	Specify the desired length of time (between 2 and 240 minutes) until the machine enters Power Save mode.	15 minutes
	SleepMode Setting	Select whether to enable the Sleep setting.	ON
	EnteringSleepMode	Specify the desired length of time (between 2 and 240 minutes) until the machine enters Sleep mode.	20 minutes
	EnteringPowerSave	As conditions for moving to the Power Save mode, select "Normal" or "Immediately".	Immediately
PaperTray Setting	AutoTraySelection	Specify the paper trays that are selected when the Auto Tray Switch feature is performed.	T1, T2, T3, T4
	Tray Priority	Specify the priority for selecting the paper trays when the Auto Tray Switch feature is performed.	T1, T2, T3, T4, BP
	AutoTray Switch	Select whether or not a paper tray loaded with paper of the same size is selected automatically when the paper tray becomes empty.	OFF
	No Matching Paper	Select the operation that is performed when there is no paper of the corresponding size in the specified paper tray. <ul style="list-style-type: none"> <li>Stop Printing: The machine stops operating. (Stop Printing)</li> <li>Switch Trays: The specified paper trays are selected in the specified order of priority and, when the tray runs out of paper, the next paper tray is selected. (Switch Trays)</li> </ul>	Stop Printing
Output Settings	Print Output	Select whether the machine waits until the first page of a print job is received before starting to print or whether the machine waits until all data is received before starting to print.	Page Print
	Blank Page Print	Select whether or not to print a blank page if it is included.	Do Not Print
	Output Tray	Specify the priority for using the output trays of the finisher.	Finisher Tray1
	Shift Each Job	Select whether or not to use offset for each job.	ON
	Bin Assignment	The output tray 1 of the finisher FS-519 can be specified as mailbin 5, and the output tray 2 can be specified as mailbin 6. When an additional output tray is installed, the output tray 1 of the finisher FS-519 can be specified as mailbin 5 and the additional output tray can be specified as mailbin 6.	Don't Set



### Note

*[SleepMode Setting] is not displayed if [Restrict] is selected for [Don't got to Sleep] in [Service Mode]. For details, contact your service representative.*

*[Output Tray] and [Shift Each Job] appear when an optional finisher FS-519 is installed.*

*[Bin Assignment] appears when the Mailbin kit is installed on the optional finisher FS-519.*

## Printer Settings

Menu		Description	Default Setting
Basic Settings	PDL Setting	Specify the printer description language as "Auto", "PCL", or "PS".	Auto
	Number of Copies	Specify the number of copies to be printed (between 1 and 999).	001
	OriginalDirection	Select the orientation of the print image.	Portrait
	Spool Setting	Select whether or not a spool is used. <ul style="list-style-type: none"> <li>ON: If another job is received while a job is being performed, the next job is saved on the HDD.</li> <li>OFF: The print data is not saved on the HDD.</li> </ul>	ON
	Paper Size Switch	Select whether or not paper size substitutions A4<=>Letter and A3<=>Ledger are permitted.	OFF
	Banner Sheet	Select whether or not to print banner pages (front cover pages) containing the name of the sender and the subject of the print job.	OFF
	BindingPos. Adjust	Select whether to adjust the binding position for duplex printing. <ul style="list-style-type: none"> <li>Finishing: All pages can be processed to an optimum condition because the machine adjusts the binding positions after receiving the print data.</li> <li>Productivity: Printing is performed efficiently because the machine processes data reception and printing concurrently.</li> <li>ControlAdjustment: The machine follows the settings specified in the printer driver without adjusting the binding position.</li> </ul>	Finishing
Paper Settings	Paper Tray	Select the paper tray that is to be used.	Auto
	Paper Size	Select the size of paper that is to be used.	8-1/2 × 11
	2-Sided Print	Select whether or not pages are printed on both sides.	OFF
	Binding Position	Select the binding position for double-sided printing.	Left Bind
	Staple	Select whether or not pages are to be stapled.	OFF
	Punch	Select whether or not holes are to be punched in the pages.	OFF
	Banner PaperTray	Select the paper tray used to print banner pages.	Auto
PCL Settings	Font Setting	Specifies the font with the font number. For details on font numbers and corresponding fonts, refer to the "Font List" on the following page.	000
	Symbol Set	Specify the symbol set to be used.	Roman-8
	Font Size	Specify the font size to be used.	Scalable Font - 12.00 point Bitmap Font - 10.00 pitch
	Pitch	Specify the number of lines per page.	60Lines
	CR/LF Mapping	Specify the substitution method for printing text data. <ul style="list-style-type: none"> <li>CR=CR LF=LF: No substitution is performed.</li> <li>CR=CRLF LF=LF: CR is substituted with CR-LF.</li> <li>CR=CR LF=CRLF: LF is substituted with CR-LF.</li> <li>R=CRLF LF=CRLF: Substitute with CR-LF.</li> </ul>	CR=CR LF=LF
PS Settings	Print PS Errors	Select whether or not error information is printed when an error has occurred during PS rasterization.	OFF
	Set ICC Profile	Select the default profile setting that is displayed in the printer driver.	–
XPS Setting	Verify XPS Sign.	Specify a setting to perform or not to perform digital signature verification in XPS printing. When "ON" is selected for signature verification, the document without a valid digital signature is not printed.	OFF

**Font List**

No.	Font Name	No.	Font Name
0	Courier	40	Helvetica BoldOblique
1	CG Times	41	Helvetica Narrow
2	CG Times Bold	42	Helvetica Narrow Bold
3	CG Times Italic	43	Helvetica Narrow Oblique
4	CG Times Bold Italic	44	Helvetica Narrow Bold Oblique
5	CG Omega	45	Palatino Roman
6	CG Omega Bold	46	Palatino Bold
7	CG Omega Italic	47	Palatino Italic
8	CG Omega Bold Italic	48	Palatino Bold Italic
9	Coronet	49	ITC Avant Garde Gothic Book
10	Clarendon Condensed	50	ITC Avant Garde Gothic Demi
11	Univers Medium	51	ITC Avant Garde Gothic Book Oblique
12	Univers Bold	52	ITC Avant Garde Gothic Demi Oblique
13	Univers Medium Italic	53	ITC Bookman Light
14	Univers Bold Italic	54	ITC Bookman Demi
15	Univers Condensed Medium	55	ITC Bookman Light Italic
16	Univers Condensed Bold	56	ITC Bookman Demi Italic
17	Univers Condensed Medium Italic	57	New Century Schoolbook Roman
18	Univers Condensed Bold Italic	58	New Century Schoolbook Bold
19	Antique Olive	59	New Century Schoolbook Italic
20	Antique Olive Bold	60	New Century Schoolbook Bold Italic
21	Antique Olive Italic	61	Times Roman
22	Garamond Antiqua	62	Times Bold
23	Garamond Halbfett	63	Times Italic
24	Garamond Kursiv	64	Times Bold Italic
25	Garamond Kursiv Halbfett	65	ITC Zapf Chancery Medium Italic
26	Marigold	66	Symbol
27	Albertus Medium	67	SymbolPS
28	Albertus Extra Bold	68	Wingdings
29	Arial	69	ITC Zapf Dingbats
30	Arial Bold	70	Courier Bold
31	Arial Italic	71	Courier Italic
32	Arial Bold Italic	72	Courier Bold Italic
33	Times New Roman	73	Letter Gothic
34	Times New Roman Bold	74	Letter Gothic Bold
35	Times New Roman Italic	75	Letter Gothic Italic
36	Times New Roman Bold Italic	76	CourierPS
37	Helvetica	77	CourierPS Bold
38	Helvetica Bold	78	CourierPS Oblique
39	Helvetica Oblique	79	CourierPS Bold Oblique
		80-89	Line Printer 0N-12U

### 8.3.4 System Settings Menu

#### System Settings

Menu		Description	Default Setting
Date/TimeSettings	Date Setting	Specify the date.	MM/DD/YY YY
	Time Setting	Specify the time.	xx:xx
	Time Zone Setting	Specify the time zone.	00:00
	Time Adjustment	Connect to the specified server to correct the time.	–
Daylight Saving	DST Setting	Select whether or not to use the daylight saving time.	OFF
	Saving Time	Specify the correction time for the daylight saving time.	60min
LCD Brightness		Adjust the LCD brightness within the range from -3 to +3.	0
Management List	Job Settings List	The machine settings can be printed.	–
	Counter List	Print the counter list for every account or user belonging to the account.	–
System Auto Reset	SysAutoReset Set	Specify whether to use the System Auto Reset.	ON
	SysAutoReset Time	Specify the setting (between 1 and 9 minutes) for the desired length of time until the automatic system reset operation is performed.	1Minute



#### Note

*[Date/TimeSettings] - [Time Adjustment] are displayed when "ON" is specified for [Network Settings] - [Detail Settings] - [TimeAdjustmentSet] - [NTP Setting].*

*[Management List] - [Counter List] appears when account track is enabled in this machine.*

#### Network Settings

When changing Network Setting items, PageScope Web Connection is useful. All items can be specified using PageScope Web Connection.



#### Note

*For details on settings for each network environment used, refer to ["2 Network settings"](#) or ["9 PageScope Web Connection"](#).*

Menu		Description	Default Setting
TCP/IP	TCP/IP Setting	Select whether or not TCP/IP is used.	ON
	IP Setting	Select whether or not DHCP is used to automatically acquire the IP address. If "Manual Input" is selected, specify settings for "IP Address", "Subnet Mask", and "Default Gateway".	Auto Setting
	IPv6	Select whether or not IPv6 is used. If IPv6 is to be used, specify the address.	–
	DNS Server	Specify the DNS server settings.	–
	IP Filtering	Specify the settings for IP address filtering.	–
	IPsec	Specify system settings for communication using IPsec.	–
	RAW Port Number	Specify the RAW port number.	–
	Host Name	Specify the host name.	–
	DNS Domain	Specify the name of the DNS domain.	–
	DynamicDNSSetting	Select whether or not dynamic DNS is enabled when the DNS server being used is compatible with dynamic DNS functions.	OFF
NetWare	IPX	Specify the IPX Setting.	–
	NetWare Print	Specify the server conditions.	–
	UserAuth. Set NDS	Select whether or not the user authentication setting (NDS) is used.	ON
HTTP Server	HTTPServerSetting	Select whether or not the http server settings are used.	ON
	PSWC Setting	Select whether or not PageScope Web Connection is used.	ON
	IPP Setting	Select whether or not IPP printing is used.	ON
	IPP Auth. Setting	Select whether or not authentication is performed. If IPP authentication is performed, select the authentication method.	Req-user-name
	Accept IPP jobs	Select whether or not IPP jobs are permitted.	ON
	Support Info.	Specify the print operations supported by IPP.	–
	Printer Info.	Specify the printer information.	–
SMB	Print Setting	Specify the SMB print settings.	–
	WINS	Specify the WINS function for SMB.	–
	Direct Hosting	Specify whether or not Direct Hosting is used.	ON
Web Service	WebServiceSetting	Specify settings for using the Web service.	–
	Printer Setting	Specify the printer information.	–
SNMP	SNMP Setting	Select whether or not SNMP is used.	ON
	SNMP v1/v2c(IP)	Select whether or not SNMP v1/v2c (IP) is used.	ON
	SNMP v3(IP)	Select whether or not SNMP v3(IP) is used.	ON
	SNMP v1(IPX)	Select whether or not SNMP v1 (IPX) is used.	ON
	UDP Port Number	Specify the UDP port number.	161
	SNMPv1v2cSetting	Specify the SNMP v1/v2c settings.	–
	SNMP v3 Setting	Specify the SNMP v3 settings.	–
	TRAP Settings	Specify settings for using the TRAP function.	–
AppleTalk	AppleTalk Setting	Select whether or not AppleTalk is used.	OFF
	Printer Name	Specify the name of the printer.	–
	Zone Name	Specify the zone name.	–
Bonjour	Bonjour Setting	Select whether or not Bonjour is used.	ON
	Bonjour Name	Specify the Bonjour name.	–

Menu		Description	Default Setting
TCP Socket	TCP Socket	Specify settings for using the TCP Socket function.	–
	TCP Socket ASCII	Specify settings for using the TCP Socket (ASCII) function.	–
Detail Settings	Network Speed	Select the operating speed.	Auto Setting
	TimeAdjustmentSet	Specify settings for the NTP server for which the time is corrected.	–
	When InvalidCert.	Specify the operation when the validity period for the received certificate has expired. If "Continue" is selected, processing continues even if the date of the certificate is invalid. If "Delete Job" is selected, the job is deleted if the date of the certificate is invalid.	Continue
	Ping Confirmation	Sends a ping to confirm a response.	–

**Note**

The parameters for [TCP/IP], [HTTP Server], [SNMP], [AppleTalk], and [Bonjour] are displayed when "ON" is specified for [TCP/IP Setting], [HTTPServerSetting], [SNMP Setting], [AppleTalkSetting], and [Bonjour Setting].

If the network settings are changed, restart the machine to apply changes.

When the power is turned off, then on, turn off the power, wait at least 10 seconds, and then turn it on. Otherwise, the machine may not operate correctly.

**Printer Settings**

Menu	Description	Default Setting
USB Timeout	Specify the length of time until a transmission timeout occurs.	60sec
Network Timeout	Specify the length of time until a transmission timeout occurs.	60sec
Print XPS Errors	Specify whether to print the error message when an error occurs during XPS printing.	ON

**System Connection**

Menu		Description	Default Setting
OpenAPI Settings	Access Setting	Select whether or not OpenAPI access is enabled.	Allow
	Enable SSL	Select whether or not SSL is enabled.	ON
	Authentication	Select whether or not user authentication is performed.	–
	PortNumberSetting	Specify the port number.	50001
CallRemoteCenter	→	Transmits the status of the machine to the center.	

**Note**

[OpenAPI Settings] - [SSL] are not displayed when the SSL certificate is not installed or "ON" is specified for [EnhancedSecurity].

[CallRemoteCenter] is not displayed if center registration performed by selecting [Service Mode] - [CS Remote Care] is not completed. For details, contact your service representative.

### 8.3.5 Admin. Settings Menu

#### Security Settings

Menu		Description	Default Setting
Admin. Password		Changes the administrator password.	12345678
Admin. Sec. Levels		Define parameters opened to the user. OFF: The password is required for [Admin. Settings] and [Service Mode]. Minimum: The password is required for [System Setting], [Admin. Settings], and [Service Mode]. ON: The password is required for functions other than [Job Operation] and [Banner Printing].	ON
Security Details	Password Rules	Select whether or not password rules are applied.	OFF
	ProhibitFunctions	Select the operations that are prohibited if user authentication failed. Mode 1: Operations cannot be performed for a fixed length of time. Mode 2: When authentication has failed repeatedly, the control panel can no longer be operated. The number of times of failed authentication can be set between 1 and 5. If operation of the control panel is restricted, touch [Release], and then select the items whose operation restrictions are canceled. <ul style="list-style-type: none"> <li>• Users &amp; Accounts: Operations for user authentication and account track</li> <li>• Secure File: Operations for confidential documents</li> <li>• User Box: Operations for password-protected boxes</li> <li>• SNMP: Operations for SNMP v3 Write user authentication</li> </ul> Time To Release: Specify the length of time until prohibited operations are automatically unlocked. The time can be set between 1 and 60 minutes.	Mode1 Time:5min
	SecurePrintAccess	The operation method for confidential documents can be viewed. If "Prohibited Functions" is set to "Mode 1", this parameter is set to "Mode 1". If "Prohibited Functions" is set to "Mode 2", this parameter is set to "Mode 2". Mode 1: Type in the ID and password for the confidential document, and then select the document. Mode 2: Enter the Secure Print ID, select the document, and then enter the password for authentication.	Mode1
	PrintDataCapture	Select whether or not data for a print job can be captured.	Allow
	DeleteJobHistory	The entire job log can be cleared.	–
	Audit Log	Specify settings relating to handling of the Audit Log function.	–
EnhancedSecurity		Settings necessary for applying enhanced security mode appear. Select whether or not to apply enhanced mode settings when the necessary settings are specified. For details, contact your service representative.	OFF

Menu		Description	Default Setting
HDD Settings	Format HDD	Format the hard disk.	–
	CheckHDDCapacity	Information concerning the hard disk capacity is displayed.	–
	OverwriteAllArea	Select this parameter to overwrite and delete all data on the entire hard disk in the specified patterns for mode 1 through mode 8 when returning the machine from lease or disposing the machine in order to prevent disclosure of the data. Before performing this operation, contact your service representative.	Mode1
	Ovewrite HDDdata	Specify whether or not to overwrite the temporary image data saved on the hard disk with all operations for computer printing. By specifying a setting to overwrite temporary data, the area of the hard disk where image data is saved after printing or sending can be overwritten, and the data can be erased. This process prevents disclosure of image data on the hard disk.	OFF
	OverwritePriority	Select whether encryption is overridden or overwrite is overridden when data is overwritten.	Encrypt Priority
	RegisterHDDLCK-PW	Specify the password for protecting data on the hard disk.	–
	HDD EncryptionSet	This setting appears when the optional Security kit is installed. Specify an encryption passphrase to encrypt data in the hard disk. When a setting is specified, all data written to the hard disk is encrypted to protect it. If the encryption key is changed, the hard disk will be reformatted.	–
Driver Encryption	EncryptionSetting	The encryption password for the printer driver can be changed.	Factory Default
	EncryptionPassphrase	Set an encryption passphrase. Enter an encryption passphrase in 20 characters.	–

**Note**

*The administrator of this machine should change the administrator password to maintain security.*

*If the "Password Rules" parameter is set to "Enabled", only an 8-digit administrator password can be specified.*

*[PrintDataCapture] is displayed when "OFF" is specified for [EnhancedSecurity].*

*[HDD Settings] is displayed when the hard disk drive is installed.*

*[OverwritePriority] and [HDD EncryptionSet] are displayed when the encryption infrastructure is installed.*

*[EncryptionPassphrase] is displayed when [User-Defined] is specified for [EncryptionSetting].*

**Detail**

*The operation of the "Prohibited Functions" parameter applies to the following passwords.*

*User passwords, account passwords, user box passwords, passwords for confidential documents, and the administrator password.*

*If the control panel cannot be operated even after touching [Release] from the "Prohibited Functions" parameter to specify the items whose operation restrictions are canceled or if an operation is prohibited from a failed attempt to authenticate the administrator password, restart the machine. Restart the machine, wait for the time specified in "Release Time Settings", and then perform the administrator authentication.*

*The overwrite method operates as follows:*

*Mode 1: Overwritten with 0x00.*

*Mode 2: Overwritten with random 1-byte numbers. → Overwritten with random 1-byte numbers. → Overwritten with 0x00.*

Mode 3: Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with random 1-byte numbers. → Verifies.

Mode 4: Overwritten with random 1-byte numbers. → Overwritten with 0x00. → Overwritten with 0xff.

Mode 5: Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0x00. → Overwritten with 0xff.

Mode 6: Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with random numbers.

Mode 7: Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0xaa.

Mode 8: Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0x00. → Overwritten with 0xff. → Overwritten with 0xaa. → Verifies.



#### Reminder

When the machine is turned off, then on again with the power switch, wait at least 10 seconds to turn the machine on after turning it off. The machine may not operate correctly if it is turned on immediately after being turned off.

### User Box Settings

Menu		Description	Default Setting
Delete User Box		Delete the selected box.	–
DeleteSecurePrint		Delete all documents stored in secure print user boxes.	–
Delete Time	Secure PrintBox	Specify the length of time for secure print documents to remain in before they are automatically deleted, counting from the moment they are stored.	1day
	EncryptedPDFBox	Select the length of time for encrypted PDF files to remain before they are automatically deleted, counting from the moment they are stored.	1day
	Touch&PrintBox	Specify the length of time from when print documents are saved in Touch & Print Box until when they are automatically deleted.	1day
Doc.Hold		Specify to retain or to delete documents automatically when they are printed.	ON



#### Note

[User Box Settings] is displayed when the hard disk drive is installed.

### AuthDeviceSetting

Menu		Description	Default Setting
CardAuth.Settings	IC Card Type	Specify the type of installed IC card authentication unit.	Felica
	Operation Setting	Select whether only the card is required for authentication or password is required together with the card.	Card
BioAuth.Settings	Beep Sound	Select whether a sound is made when the user is authenticated by the biometric authentication.	ON
	Operation Setting	Specify the biometric authentication operation. 1-to-many Auth.: Performs authentication when the finger is placed. To use the Touch & Print function, select this option. 1-to-1 Auth.: Performs authentication when the user name is entered and the finger is placed.	1-to-many Auth.
Touch & Print	Touch&PrintUser-Box	Select whether or not to use the Touch & Print function that works with the authentication unit.	ON
	Print	When there are multiple jobs, select whether or not to perform authentication for each job before printing or print all jobs after performing authentication one time.	Batch Print

**Note**

[AuthDeviceSetting] is displayed when the authentication unit and HDD are installed.

[CardAuth.Settings] is displayed when the IC card authentication unit is installed.

[BioAuth.Settings] is displayed when the biometric authentication unit is installed.

**Detail**

To use biometric authentication, register the vein patterns in the finger in advance.

For details on specifying authentication settings for the authentication unit (biometric type) and on registering finger vein patterns, refer to "[Authentication unit \(Biometric type AU-101\)](#)" on page 14-2 or "[Authentication unit \(IC card type AU-201\)](#)" on page 15-2.

**Expert Adjustment**


Menu		Description	Default Setting
PrinterAdjustment	Leading Edge Adj.	Adjust the starting print position between -3.0 and 3.0 mm at the leading edge of the paper (with respect to the paper feed direction). Adjustments can be specified for each paper type.	0.0mm
	Centering	Adjust the starting print position between -3.0 and 3.0 mm at the left edge of the paper (with respect to the paper feed direction). Adjustments can be specified for each paper tray.	0.0mm
	Leading (Duplex)	Adjust the starting print position between -3.0 and 3.0 mm at the leading edge of the paper for the second side during automatic double-sided copying. Adjustments can be specified for each paper tray.	0.0mm
	Centering (Duplex)	Adjust the starting print position between -3.0 and 3.0 mm at the left edge of the paper for the second side during automatic double-sided copying. Adjustments can be specified for each paper tray.	0.0mm
	Vertical Adj.	Specify a zoom in the paper feed direction within the range from -7 and +7.	0
	EraseLeadingEdge	Specify the non-printing area of the leading edge of the paper.	4mm
Finisher Adjust	Center Staple Pos	Adjust the stapling position (between -10 and 10 mm) when printing with the "Center Staple & Fold" setting.	0.0mm
	Half-Fold Pos.	Adjust the folding position (between -10 and 12.7 mm) when printing with the "Center Staple & Fold" setting.	0.0mm
DensityAdjustment	Thick/Yellow	Adjust the image density for printing on thick paper or transparencies. The density can be adjusted separately for each color (yellow, magenta, cyan and black for a color image and the black image density). The higher the setting, the darker the density. Adjust the setting for yellow, magenta, cyan and black between -5 and +5. Adjust the setting for "Black Image Density" between -2 and +2.	0
	Thick/Magenta		0
	Thick/Cyan		0
	Thick/Black		0
	BlackImageDensity		0
Stabilization	Initialize+Stabi.	Perform an image stabilization if the image is incorrect, even after the gradation levels have been adjusted. <ul style="list-style-type: none"> <li>Initialize+Stabi.: Perform a normal image stabilization.</li> <li>StabilizationOnly: Select when a good result was not achieved after "Initialize+Stabi". was selected.</li> </ul>	Initial-ize+Stabi.
	StabilizationOnly		
ColorRegistration	Yellow	Adjust the color registration if color shifts can be seen in the print result.	0
	Magenta		0
	Cyan		0
Test Pattern	Gradation Pattern	Print the test pattern of each color gradation.	—
	Halftone Pattern	Print the test pattern of each halftone.	—

**Note**

*If "Print" is selected for [PrinterAdjustment], test print is performed through which you can check the set value.*

*[Finisher Adjust] is displayed when the finisher is installed.*

*Settings for [Center Staples Pos] and [Half-Fold Pos] in [Finisher Adjust] vary depending on the finisher installed. When FS-609 is installed, the values for position adjustment can only be specified. When FS-519 is installed, the values for position adjustment can be specified for each paper size or paper type.*

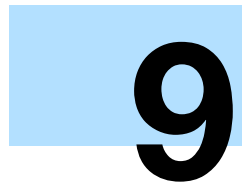

## **PageScope Web Connection**

## 9 PageScope Web Connection

### 9.1 Using PageScope Web Connection

PageScope Web Connection is a device management utility supported by the HTTP server integrated into the printer controller. Using a Web browser on a computer connected to the network, machine settings can be specified and the status of the machine can be checked.

In addition to the convenience of specifying some settings from your computer instead of with the machine's control panel, text can easily be typed in.

#### 9.1.1 Operating environment

Network	Ethernet (TCP/IP)
Computer applications	Supported Web browsers: Microsoft Internet Explorer Ver. 6 or later (JavaScript and Cookies enabled) Netscape Navigator Ver. 7.02 or later (JavaScript and Cookies enabled) Mozilla Firefox Ver. 1.0 or later (JavaScript and Cookies enabled) Adobe® Flash® Player (Plug-in Ver. 7.0 or later required if "Flash" is selected as the display format)

#### 9.1.2 Accessing PageScope Web Connection

PageScope Web Connection can be used from a Web browser.

- 1 Start the Web browser.
- 2 In the "Address" bar, enter the IP address of this machine, and then press the [Enter] key.
  - http:// (IP\_address\_of\_machine) /  
Example: If the IP address of this machine is 192.168.1.20  
http://192.168.1.20/
  - If the machine is set to "use IPv6", enter an IPv6 address within [ ] when using a browser other than Internet Explorer.  
http://[IPv6\_address\_of\_machine]/  
Example: If the IPv6 address of this machine is fe80::220:6bff:fe10:2f16  
http://[fe80::220:6bff:fe10:2f16]
  - If the machine is set to "use IPv6" and Internet Explorer is being used, first edit the hosts file to include "fe80::220:6bff:fe10:2f16IPv6\_MFP\_1", and then specify the URL with the domain name.

The User mode page that appears is for a user who has logged on.



#### Detail

*If user authentication settings have been specified, the user name and password must be entered. For details, refer to ["Logging on as a registered user" on page 9-9](#).*

*For details on specifying the IP address of this machine, refer to the ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).*

*PageScope Web Connection has Flash and HTML display formats. For details, refer to ["Logging on and logging off" on page 9-6](#).*

### 9.1.3 Web browser cache

The most recent information may not appear in the PageScope Web Connection pages because older versions of pages are saved in the cache for the Web browser. In addition, problems may occur when the cache is used.

When using PageScope Web Connection, disable the cache for the Web browser.



#### Reminder

*The menus and commands may vary depending on the Web browser version. For details, refer to the Help for the Web browser.*

*If the utility is used with the cache enabled and Administrator mode was timed out, the timeout page may appear even when PageScope Web Connection is accessed again. In addition, since the machine's control panel remains locked and cannot be used, the machine must be restarted with the power switch. In order to avoid this problem, disable the cache.*

#### With Internet Explorer

- 1 On the "Tools" menu, click "Internet Options".
- 2 On the General tab, click the [Settings] button under "Temporary Internet files".
- 3 Select "Every visit to the page", and then click the [OK] button.

#### With Netscape Navigator


- 1 On the "Edit" menu, click "Preferences".
- 2 Under "Category" on the left, click "Advanced", then "Cache".
- 3 Under "Document in cache is compared to document on network:", select "Every time".

#### With Mozilla Firefox

- 1 On the "Tools" menu, click "Options".
- 2 Click "Privacy", and then click the [Settings] button at the bottom of the dialog box.
- 3 Select the "Cache" check box under "Private data", select the "Clear private data when closing Firefox" check box under "Settings", and then click the [OK] button.

### 9.1.4 Structure of pages

The pages of PageScope Web Connection are constructed as shown below.

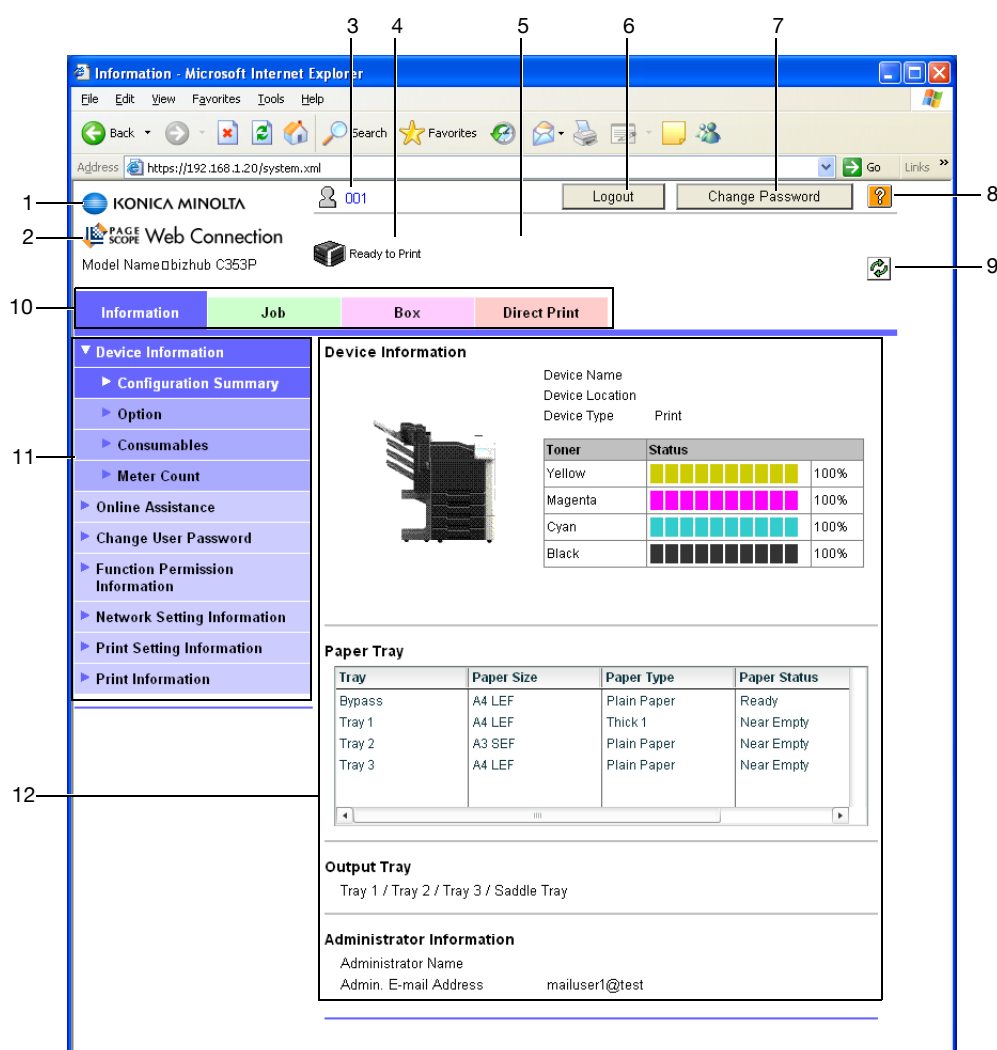

No.	Item	Description
1	Konica Minolta logo	Click the logo to go to the Konica Minolta Web site at the following URL. <a href="http://konicaminolta.com">http://konicaminolta.com</a>
2	PageScope Web Connection logo	Click the logo to display the version information for PageScope Web Connection.
3	Logon user name	Displays the icon of the current mode and the name of the user who is logged on (public, administrator, registered user or account). Click the user name to display the name of the user who is logged on.
4	Status display	Displays icons and messages indicating the status of the machine. If an error occurred, click the icon to display the error information (consumables, paper trays and registered user information) so that the status can be checked.
5	Message display	Displays the operating status of the machine.
6	[Logout] button	Click to log off from the current mode.
7	[Change Password] button	Click to go to the Change User Password page. (Refer to <b>"Information" on page 9-11.</b> ) This button appears only in User mode when a registered user is logged on.
8	[Help] button	Click to display the page specified as the online manual Web page. For details on specifying the Web page, refer to <b>"Information" on page 9-11.</b>
9	[Refresh] button	Click to update the displayed page.

No.	Item	Description
10	Tabs	Select the category of the page to be displayed. The following tabs are displayed in User mode. <ul style="list-style-type: none"><li>• Information</li><li>• Job List</li><li>• User Box</li><li>• Direct Print</li></ul>
11	Menu	Information and settings for the selected tab are listed. The menu that appears differs depending on the tab that is selected.
12	Information and settings	Displays details of the item selected in the menu.

**Detail**

*The page that appears immediately after accessing the machine with PageScope Web Connection is called the "User mode" page. This page appears when a user has logged on.*

*If user authentication settings have been specified, the user name and password must be entered. For details, refer to ["Logging on as a registered user" on page 9-9](#).*

*The PageScope Web Connection pages appear differently depending on the options installed on the machine and the specified machine settings. For details on logging on as a different user or as the administrator, refer to ["Logging on and logging off" on page 9-6](#).*


## 9.2 Logging on and logging off

### 9.2.1 Login and logout operations

When the machine is accessed with PageScope Web Connection, the logon page appears if user authentication and account track settings have been specified on the machine. If user authentication and account track settings have not been specified, the page for a public user appears. In order to log on as a different user or as an administrator after login, it is necessary to log off first, then log on again.

#### When user authentication and account track settings are not specified


The user logs in automatically as a public user.

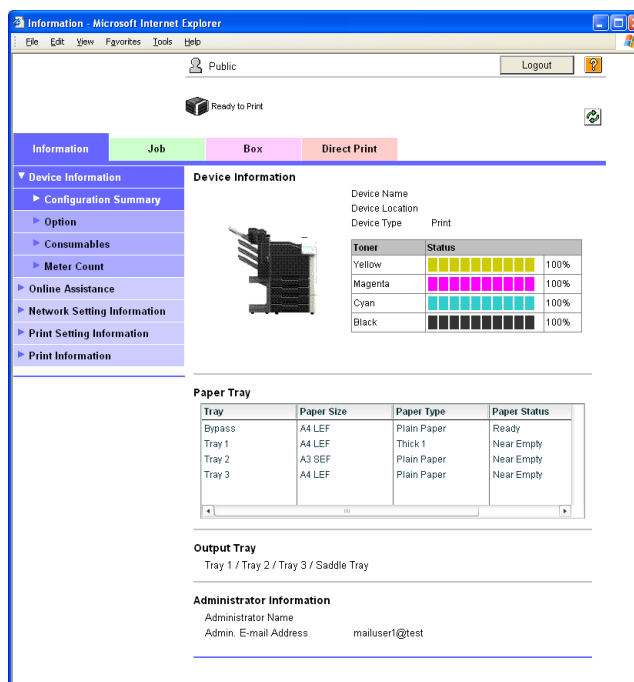

To log in as an administrator, log out.




Log in again as an administrator.

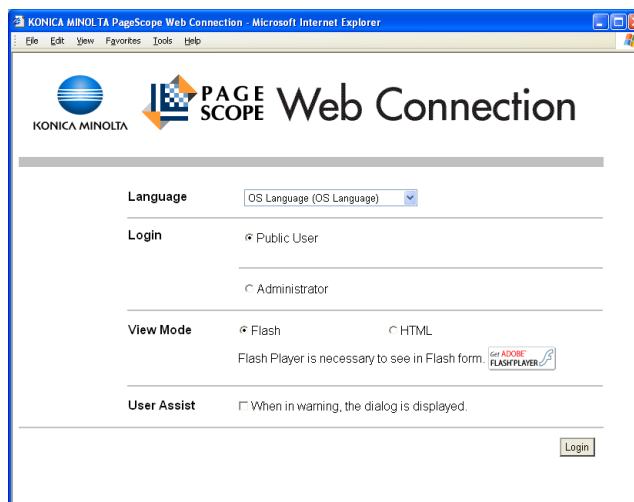

**When user authentication and account track settings are specified**


The User Authentication/Account Track screen appears. Enter the required information to log in.

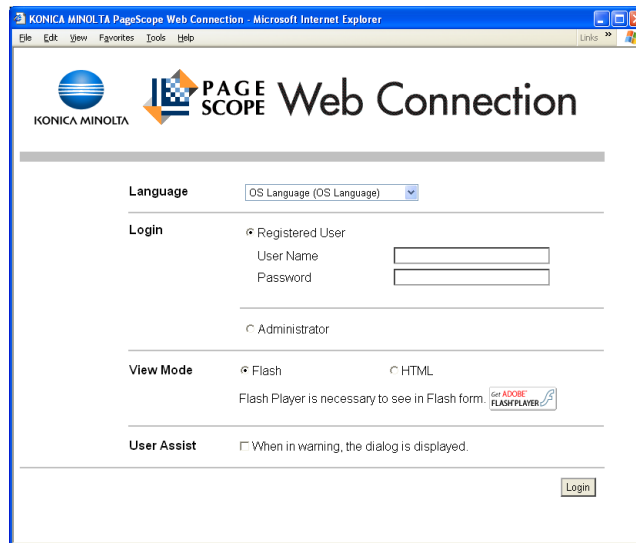

To log in as a different user or an administrator, log out.



Log in again.

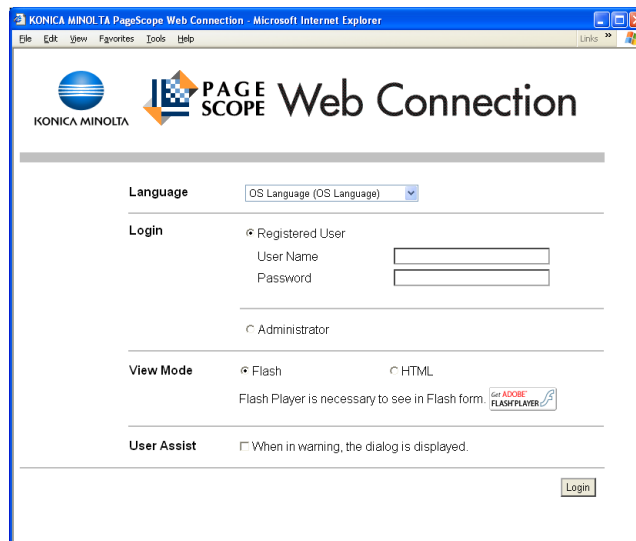

## 9.2.2 Logout

Click the [Logout] button in the upper right side of the window to display a logoff confirmation dialog box. To return to the logon page again, click the [OK] button.




### Detail

*The logon page that appears differs depending on the authentication settings specified on the machine.*

*If a timeout occurs because no operation is performed for a set length of time while logged on or if the authentication settings are changed from the machine's control panel while logged on to User mode, you will automatically be logged off.*

*For details on specifying the timeout periods for User mode and Administrator mode, refer to ["Security" on page 9-15](#).*

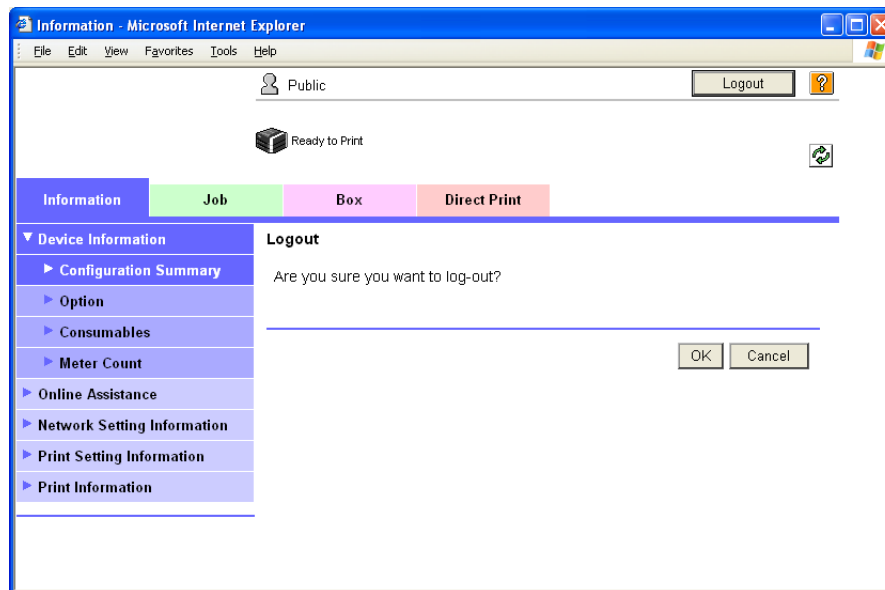

## 9.2.3 Login

Depending on the logon method used, PageScope Web Connection will be in User mode or Administrator mode.



### Detail

*If you log in to PageScope Web Connection as an administrator in the User mode, it is possible to delete jobs that cannot be done so in the Administrator mode.*

### Options that can be selected when logged on to PageScope Web Connection

If necessary, select the display language and format.

If "When in warning, the dialog is displayed." check box is selected, warning messages appear during operation after logon.

If "Flash" is selected as the display format, the following items are displayed using Flash.

- Status icons and messages
- Status of "Paper Tray" in the page displayed when "Device Information" is selected on the Information tab
- Page display of the Job List tab

Flash Player is required in order to use the "Flash" features.

If screen reader software is used, we recommend selecting "HTML" as the display format. In an IPv6 environment, select "HTML".

### Logging on as a public user

If user authentication settings have not been specified on the machine, logon will be as a public user. In the logon page, select "Public user", and then click the [Login] button.

KONICA MINOLTA PAGE SCOPE Web Connection

Language OS Language (OS Language)

Login ☒ Public User ☐ Administrator

View Mode ☒ Flash ☐ HTML  
Flash Player is necessary to see in Flash form. [Get ADOBE FLASHPLAYER](#)

User Assist ☐ When in warning, the dialog is displayed.

Login

### Logging on as a registered user

If user authentication settings have been specified on the machine, the name and password for a registered user is required to log on. In the logon page, enter the user name and the password, and then click the [Login] button.

- If account track settings have been specified, type in the account name and password.
- If external server authentication was selected, select server.
- To log on to PageScope Web Connection as the administrator in User mode, select "Administrator" - "Administrator (User Mode)", and then enter the administrator password.

KONICA MINOLTA PAGE SCOPE Web Connection

Language OS Language (OS Language)

Login ☒ Registered User ☐ Administrator  
User Name   
Password

View Mode ☒ Flash ☐ HTML  
Flash Player is necessary to see in Flash form. [Get ADOBE FLASHPLAYER](#)

User Assist ☐ When in warning, the dialog is displayed.

Login

**Detail**

If "ProhibitFunctions" in [Admin. Settings] - [Security Details] is set to "Mode 2" and a user enters an incorrect password the specified number of times, that user is locked out and can no longer use the machine. Contact the administrator to cancel operation restrictions.

**Logging on to Administrator mode**

In order to specify system and network settings, log on to Administrator mode. In the logon page, select "Administrator", type in the administrator password, and then click the [Login] button.

**Detail**

When logged on to Administrator mode, the control panel of the machine is locked and cannot be used.

Depending on the status of the machine, you may not be able to log on to Administrator mode.

If "ProhibitFunctions" in [Admin. Settings] - [Security Details] is set to "Mode 2" and an incorrect password is entered the specified number of times, it is no longer possible to log on to Administrator mode. For details on authentication settings, refer to ["Admin. Settings Menu" on page 8-24](#).

The password input dialog box differs depending on the specified machine settings.

Specify the password in [Admin. Password] accessed by selecting [Admin. Settings] - [Security Settings].

For details on the administrator password, refer to ["Admin. Settings Menu" on page 8-24](#).

## 9.3 Overview of User mode

By logging on to PageScope Web Connection in User mode, the following functions can be specified.




### Note

For other details on the User mode, refer to the PageScope Web Connection Help on the PageScope Utilities CD-ROM.

### 9.3.1 Information

This is the first page that appears when you access PageScope Web Connection.

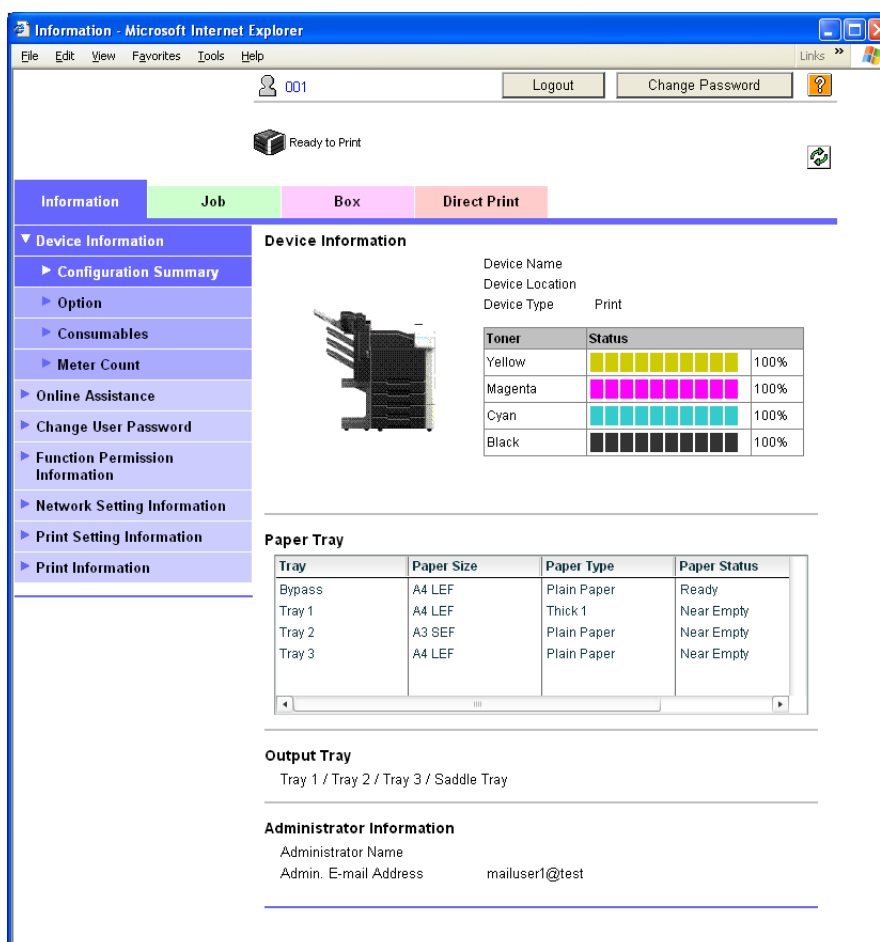


Item	Description
Device Information	The current system configuration, options, consumables and counter values can be displayed.
Online Assistance	Support information for the machine can be displayed.
Change User Password	The password for the user who is logged on can be changed.
Function Permission Information	Information on operations permitted by users and accounts can be displayed.
Network Setting Information	Network settings for the machine can be displayed.
Print Setting Information	Settings for the printer controller of the machine can be displayed.
Print Information	Font and settings information can be printed.



### Note


Display items related to Copy, Scan or Fax are not available for this machine.

### 9.3.2 Job

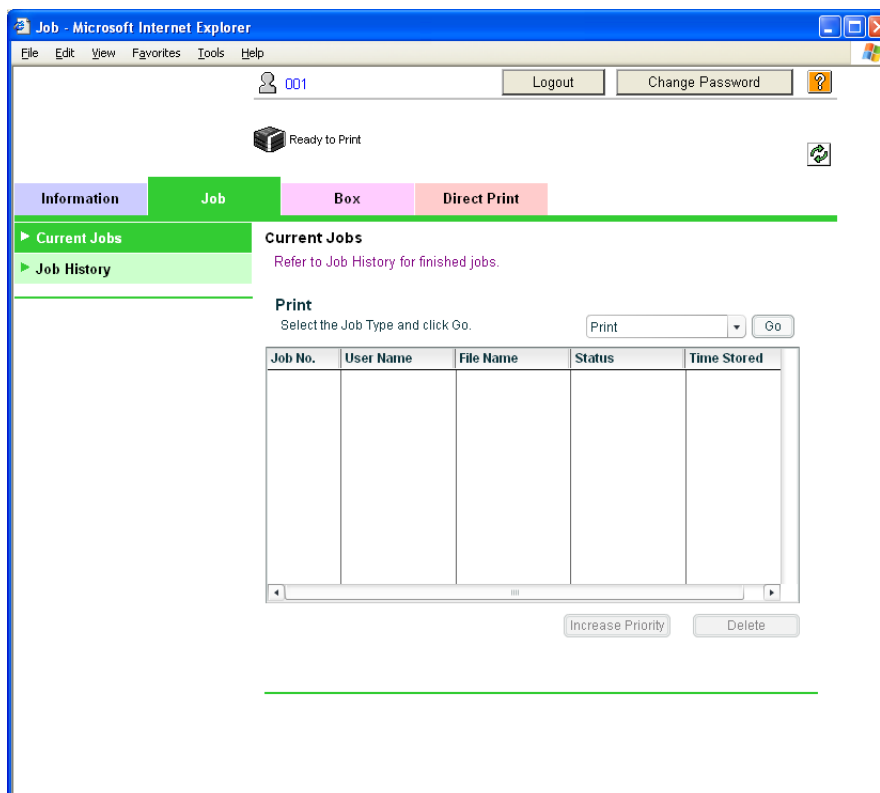

Item	Description
Current Jobs	The running job and queued jobs can be displayed.
Job History	The completed jobs can be displayed.

### 9.3.3 Box

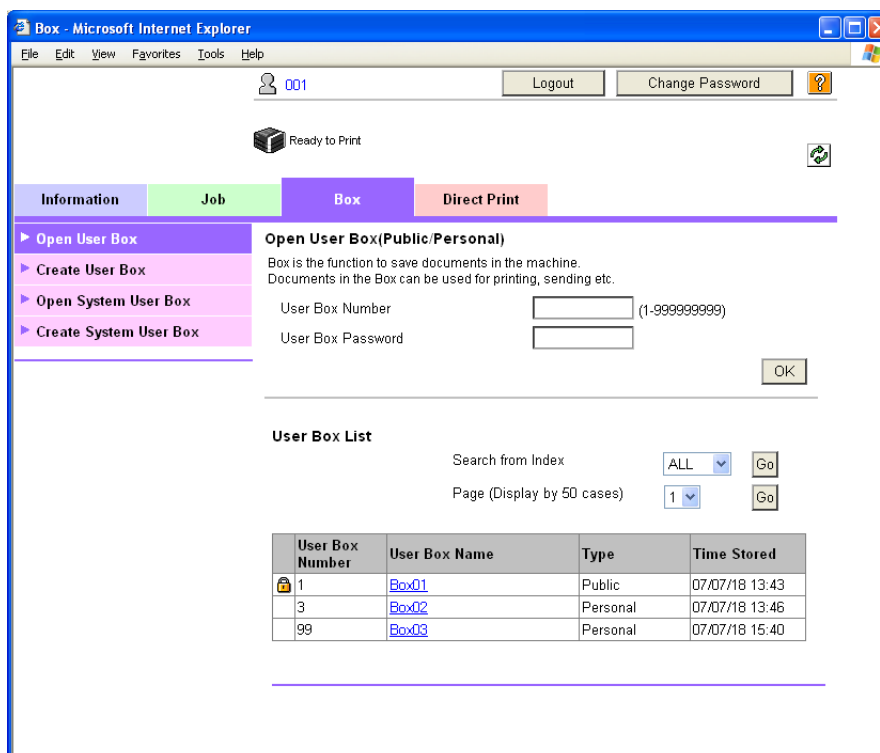


Item	Description
Open User Box	A currently created public, personal or group user box can be opened to work on a saved document or to change user box settings.
Create User Box	New user boxes can be created.
Open System User Box	System user boxes can be opened to work on a saved document or to change user box settings. This item appears when you have logged in as an administrator in the User mode.
Create System User Box	New system user boxes can be created. This item appears when you have logged in as an administrator in the User mode.

**Note**

*The Box tab appears only if the optional HDD is installed.*

### 9.3.4 Direct Print

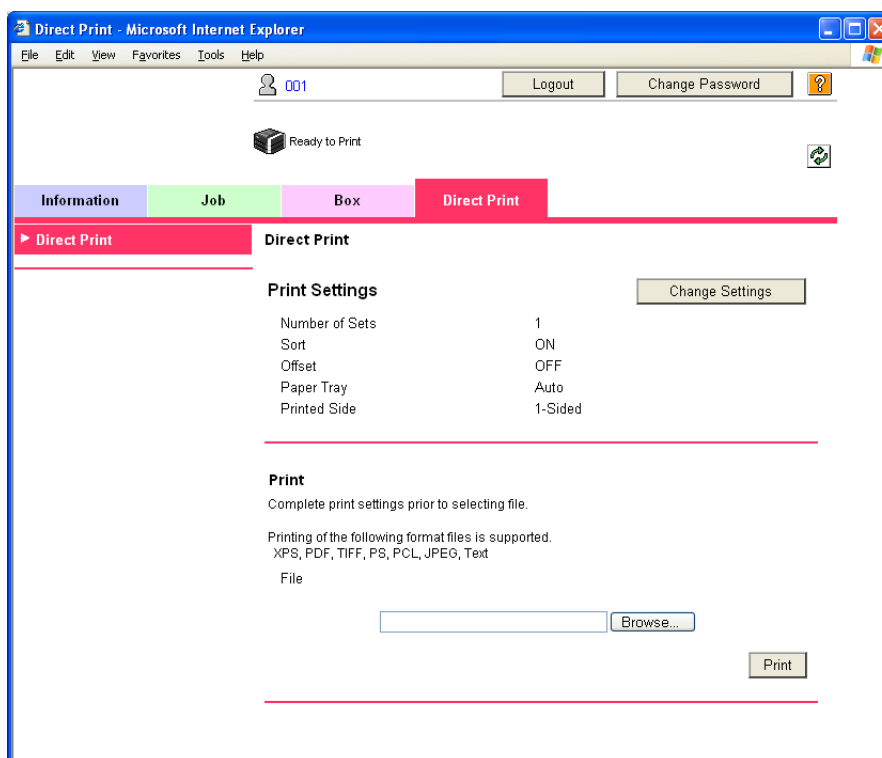

Item	Description
Direct Print	Files that are saved in a computer can be specified and printed with this machine.

## 9.4 Overview of Administrator mode

By logging on to PageScope Web Connection in Administrator mode, the following functions can be specified.

### 9.4.1 Maintenance

The screenshot shows the 'Maintenance' page in Administrator mode. The sidebar on the left contains the following links: Meter Count, ROM Version, Import/Export, Status Notification Setting, Total Counter Notification Setting, Machine Setting, Online Assistance, Date/Time Setting, Timer Setting, Network TWAIN, Reset, and Header/Footer Registration. The main content area displays several tables and sections:

- Total Counter**

Total	221
Total Duplex	6
# of Originals	176
# of Used Paper	174
- Copy Counter**

	Full Color	Black	Single Color	2 Color	Total
Total	41	61	0	0	102
Large Size	0	0	0	0	0
- Print Counter**

	Full Color	Black	2 Color	Total
Total	41	75	0	116
Large Size	0	0	0	0
- Scan Counter**

	Print (Full Color)	Print (Black)	Scans
Total	3	0	70
Large Size	0	0	4
- Total (Copy + Print)**

	Full Color	Black	2 Color
Total	82	136	0
- Paper Type Counter**

Paper Type	Count
Plain Paper	40
Thick 1	0
Thick 2	0
Thick 3	0
Thick 4	0
Transparency	0
Envelope	0
Single-Sided Only	0
Letterhead	0
Not Specified	0


Item	Description
Meter Count	Counters managed by the machine can be displayed.
ROM Version	The ROM version can be displayed.
Import/Export	Machine settings can be saved as a file (exported), or settings can be written to the machine (imported). In addition, counter information and others can be exported as text files.
Status Notification Setting	Specify settings for sending a notification if a machine error occurred. Settings can be specified for the destination of error notifications and the occasions when notifications are sent.
Total Counter Notification Setting	Specify the settings for sending notifications of the total counter by E-Mail and the E-Mail address where notifications are sent.
Machine Setting	The registered machine information can be changed.
Online Assistance	Specify the support information for the machine. To display this information, click the Information tab in User mode, and then click "Online Assistance" in the menu.
Date/Time Settings	Specify the date and time that are displayed on the machine. Not available for this machine.
Timer Settings	Specify the power save functions.

Item	Description
Network TWAIN	Not available for this machine.
Reset	Resets the network settings or controller settings.
Header/Footer Registration	The list of headers/footers can be displayed, and they can be registered or edited.

**Note**

Display items related to Copy, Scan or Fax are not available for this machine.

## 9.4.2 Security

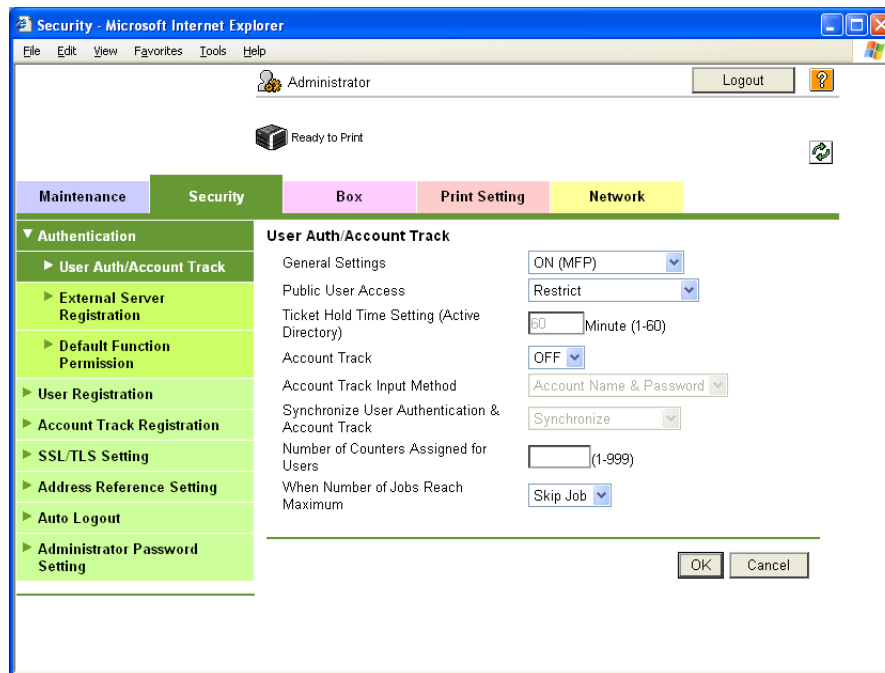


Item	Description
Authentication	Specify user authentication and account track settings for the machine. To perform authentication, an external server and default function permission can also be specified.
User Registration	If user authentication settings are specified, users can be registered and their settings can be changed.
Account Track Registration	If account track is specified, accounts can be registered and their settings can be changed.
SSL/TLS Setting	Specify the settings for SSL/TLS. With SSL/TLS enabled, communication between this machine and a client computer is encrypted to prevent passwords and messages being leaked.
Address Reference Setting	Not available for this machine.
Auto Logout	Specify the length of time until Administrator mode or User mode is automatically logged off.
Administrator Password Setting	Specify the password for logging on to PageScope Web Connection in the Administrator mode.

**Note**

"Administrator Password Settings" does not appear in the following cases:  
 No SSL certificate is installed.  
 The "EnhancedSecurity" Mode is enabled.

9.4.3 Box

When logged on in Administrator mode, user boxes can be used without typing in the password.

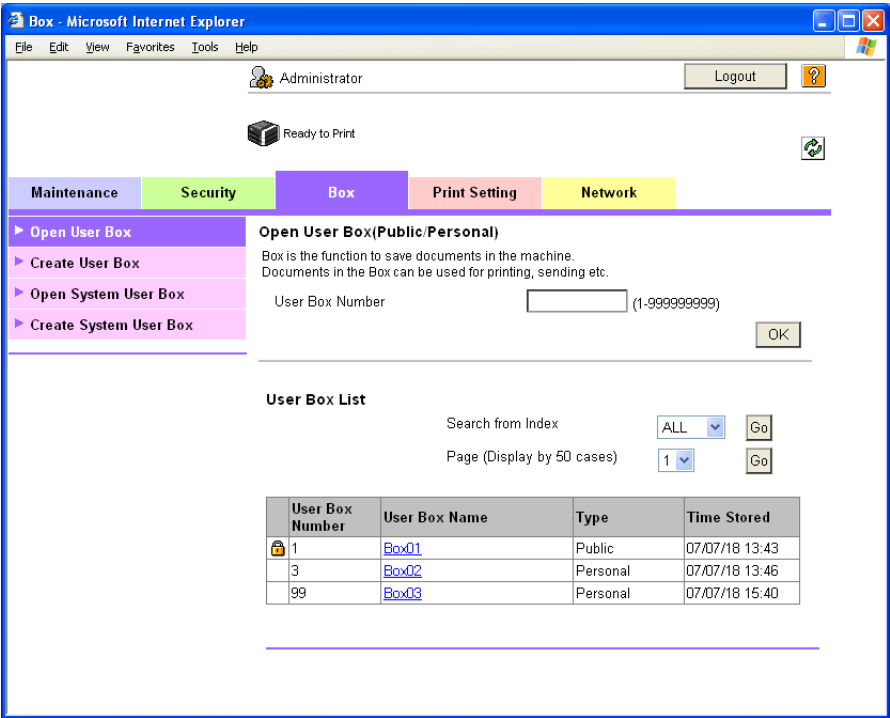


Item	Description
Open User Box	A currently created public, personal or group user box can be opened to work on a saved document or to change user box settings.
Create User Box	New user boxes can be created.
Open System User Box	System user boxes (Annotation User Box) can be opened to work on a saved document or to change user box settings.
Create System User Box	New annotation user boxes can be created.



**Note**  
*The Box tab appears only if the optional HDD is installed.*

## 9.4.4 Print Setting

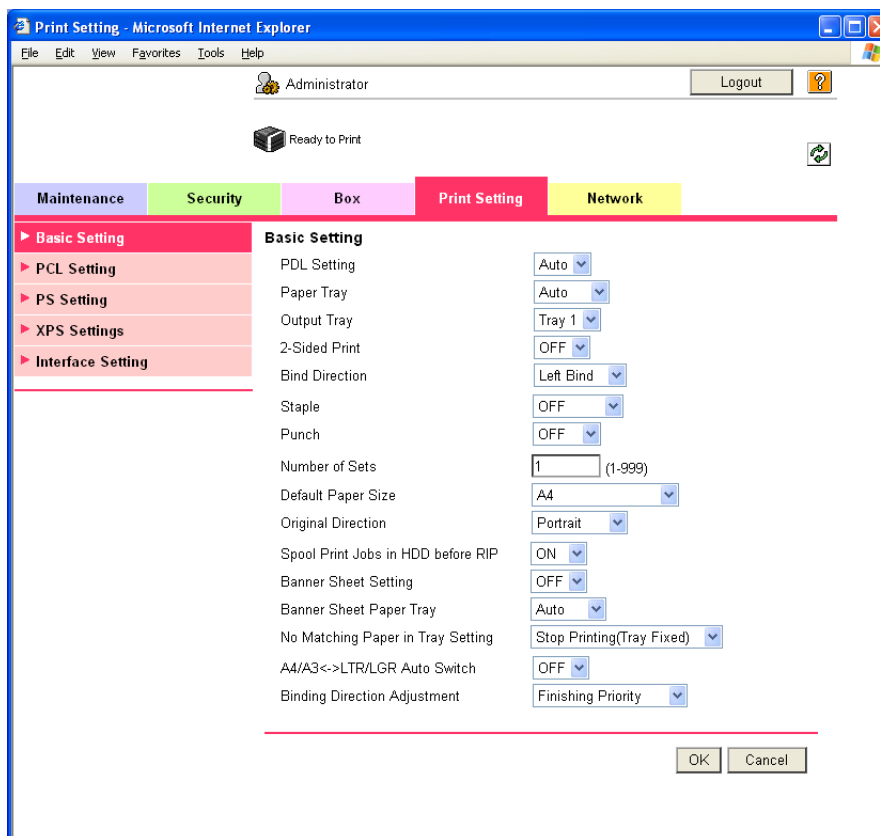

Item	Description
Basic Setting	The default printer settings can be specified.
PCL Setting	The default settings for PCL mode can be specified.
PS Setting	The default settings for PS mode can be specified.
XPS Settings	The XPS print settings can be specified.
Interface Setting	The interface timeout can be specified.

## 9.4.5 Network

Network - Microsoft Internet Explorer

Administrator Logout

Ready to Print

Maintenance Security Box Print Setting Network

**TCP/IP Setting**

TCP/IP Setting

IP Filtering

IPsec

E-mail Setting

LDAP Setting

IPP Setting

FTP Setting

SNMP Setting

SMB Setting

Web Service Settings

Bonjour Setting

NetWare Setting

AppleTalk Setting

Network Fax Setting

WebDAV Settings

OpenAPI Setting

TCP Socket Setting

**TCP/IP Setting**

\* Is reflected after reset.

TCP/IP\* ON

(Turn the main switch OFF, and then ON, when changing TCP/IP.)

Network Speed Auto

IP Address Setting Method\* Auto Setting

☒ DHCP\*

☒ BootP\*

☒ ARP/PING\*

☒ AutoIP\*

IP Address 192.168.1.20

Subnet Mask 255.255.255.0

Default Gateway 192.168.1.1

IPv6 ON

Auto IPv6 Setting\* ON

Link-Local Address fe80::220:6bff:fe5c:a477

Global Address

Prefix Length

Gateway Address

RAW Port Number

☒ Port 1 9100 (1-65535)

☒ Port 2 9112 (1-65535)

☒ Port 3 9113 (1-65535)

☒ Port 4 9114 (1-65535)

☒ Port 5 9115 (1-65535)

☒ Port 6 9116 (1-65535)

Dynamic DNS Setting Disable

Host Name Printer1

DNS Domain Name Setting

DNS Domain Auto Obtain Disable

DNS Default Domain Name testlocal

DNS Search Domain Name1

DNS Search Domain Name2

DNS Search Domain Name3

DNS Server Setting

DNS Server Auto Obtain Disable

Primary DNS Server 192.168.1.2

Secondary DNS Server1 0.0.0.0

Secondary DNS Server2 0.0.0.0

**SLP Setting**

SLP Enable

**LPD Setting**

LPD Enable

OK Cancel

Item	Description
TCP/IP Setting	Specify the TCP/IP settings to connect the machine to the network.
E-Mail Setting	Specify the E-Mail TX/RX setting. Display items related to the S/MIME function are not available for this machine.

Item	Description
LDAP Setting	Not available for this machine.
IPP Setting	Specify the settings for IPP printing.
FTP Setting	Specify the settings to use this machine as an FTP server. "FTP TX Setting" is not available for this machine.
SNMP Setting	Specify the SNMP settings.
SMB Setting	Specify the settings for the WINS, and SMB print.
Web Service Settings	Specify the settings for print via the Web service. "Scanner Settings" is not available for this machine.
Bonjour Setting	Specify the Bonjour settings.
NetWare Setting	Specify the NetWare settings.
AppleTalk Setting	Specify the AppleTalk settings.
Network Fax Setting	Not available for this machine.
WebDAV Settings	Not available for this machine.
Open API Setting	Specify OpenAPI settings.
TCP Socket Setting	Specify TCP Socket settings used for data transmissions between the computer application and this machine.

## 9.5 Box settings

This section describes other items specifiable on the Box tab for the PageScope Web Connection. From the Box tab, user boxes can be created and basic user box information can be viewed.



### Note

*The Box tab appears only if the optional HDD is installed.*

### 9.5.1 Changing user box settings or deleting a user box

Change created user box settings or delete a user box.



### Detail


*In Administrator mode, user box settings can be changed and a user box can be deleted without entering the user box password. In the user mode, files in the box can be operated.*

#### Open User Box

In Administrator mode of PageScope Web Connection, select the Box tab - "Open User Box".

Specify the following settings.

Select the box to specify from the list or specify the box number, and then click the [OK] button.

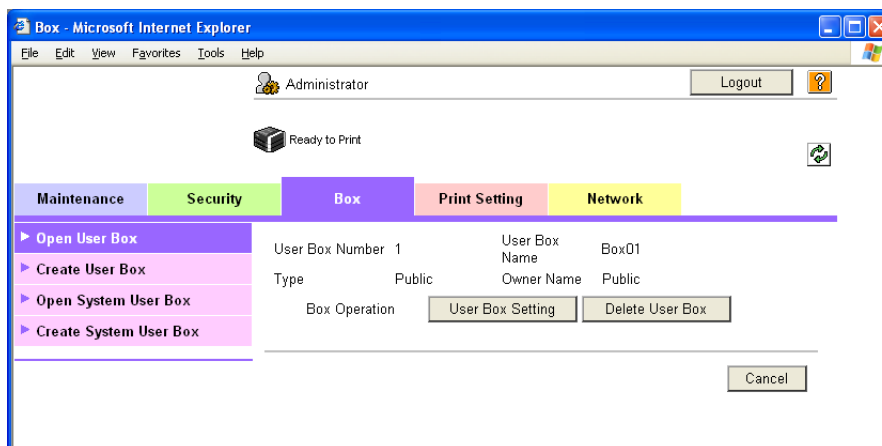

Item	Definition
[User Box Setting]	Changes the user box settings.
[Delete User Box]	Deletes the user box.

#### User Box Setting

Item	Definition
User Box Number	Displays the user box number.
User Box Name	Specify the user box name (up to 20 characters).
Index	Specify the indexing characters.
Auto Delete Document	Specify the period during which data in the user box is saved.
User Box Password is changed.	To change the user box password, select the check box. Specify the current password and the new password (up to 8 characters).
User Box Owner is changed.	To change the user box owner, select this check box to select the box type.

## 9.5.2 Creating a new user box

Create a new user box.



### Detail

Public user boxes can be created only, and they cannot be changed in Administrator mode. User Boxes include Public User Boxes, Personal User Boxes for individual users that can be used when the user authentication function is enabled, and Account User Boxes for accounts that can be used when the Account Track function is enabled. Personal User Box and Account User Box can be created on the Box tab in the User Mode. To create a Personal User Box, log in to the User Mode as the desired User and create a box in the Box tab. To create an Account User Box, log in to the User Mode with the desired Account and create a box in the Box tab. Procedure to create individual user boxes is the same as in the Administrator mode.

### Create User Box

In Administrator mode of PageScope Web Connection, select the Box tab - "Create User Box".

Specify the following settings.

Item	Definition
User Box Number	Select the registration number of the box to be created ("Use opening number" or "Direct Input").
User Box Name	Specify the user box name (up to 20 characters). To specify the user box password, select the "Use Box Password" check box, and then specify the password (up to 8 characters).
Index	Specify the indexing characters.
Type	Specify the user box type. Public user boxes can be created only, and they cannot be changed in Administrator mode. The following User Box Types are available. Public User Box: Available for all users. Personal User Box: Available for an individual user. This User Box can be used when the user authentication function is available. Account User Box: Available for an individual account. This User Box can be used when the Account Track function is available.
Auto Delete Document	Specify the period during which data in the user box is saved.

**Detail**

*If "Password Rules" is enabled, no password containing less than eight characters can be registered. If you have already registered a user password containing less than eight characters, change it to one using eight characters before enabling "Password Rules". For details on the password rules, refer to "Admin. Settings Menu" on page 8-24.*

### 9.5.3 Changing system box settings or deleting system boxes

Change the settings for created system boxes (annotation user box) or delete the boxes.

**Detail**

*annotation user box:*


*This is the box to print the saved document data with an image of the date/time and an annotation number. You can set the character string added to the saved box and change it when you print a document.*

#### Open System User Box

In Administrator mode of PageScope Web Connection, select the Box tab - "Open System User Box".

Specify the following settings.

Click the [OK] button, select the box to specify from the list or specify the box number, and then click the [OK] button.

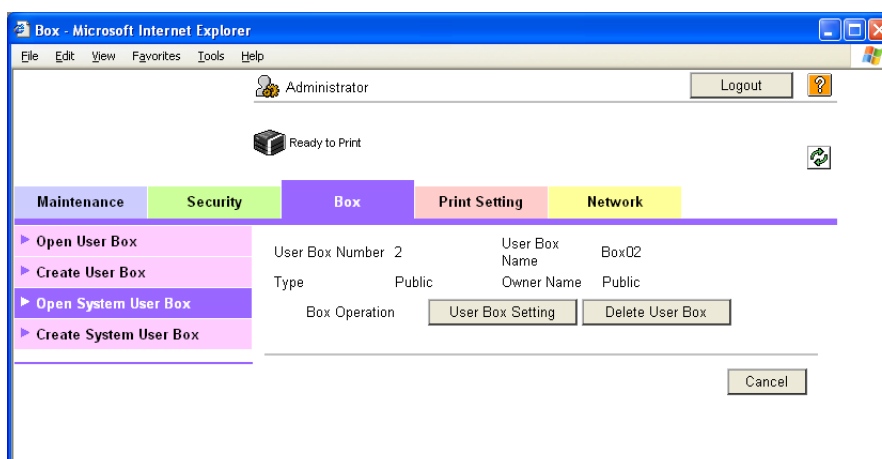

Item	Definition
[User Box Setting]	Changes the user box settings.
[Delete User Box]	Deletes the user box.

"Annotation User Box" settings

Item	Definition
User Box Number	Displays the user box number.
User Box Name	Specify the user box name (up to 20 characters).
Auto Delete Document	Specify the period during which data in the user box is saved.
Change User Box Password	Change the user box password.
Change Count Up	To change the counting method, select the check box, and then specify the counting method. If the user box contains documents, the setting cannot be specified.
Change Stamp Elements	To change the text, select the check box, and then specify settings for "Primary field", "Secondary Field", "Date/Time", "Print Position", "Density", and "Number Type".

### 9.5.4 Creating a new system user box

Create a new system user box.

#### Create System User Box

In Administrator mode of PageScope Web Connection, select the Box tab - "Create System User Box". Specify the following settings.

When "Annotation User Box" is selected

Item	Definition
User Box Number	Specify the registration number of the box to be created ("Use opening number" or "Direct Input").
User Box Name	Specify the user box name (up to 20 characters). To specify the user box password, select the "Use Box Password" check box, and then specify the password (up to 8 characters).
Auto Delete Document	Specify the period during which data in the user box is saved.
Count Up	Select the counting method. If the user box contains documents, the setting cannot be specified.
Stamp Elements	Specify settings for "Primary Field", "Secondary Field", "Date/Time Setting", "Print Position", "Density", and "Number Type"



#### Detail

*If "Password Rules" is enabled, no password containing less than eight characters can be registered. If you have already registered a user password containing less than eight characters, change it to one using eight characters before enabling "Password Rules". For details on the password rules, refer to ["Admin. Settings Menu" on page 8-24](#).*

## 9.6 Importing or exporting setting information


Import or export setting information of this machine.

Machine settings can be saved (exported) from this machine to the computer, or can be written from the computer to the machine (imported).

### Import/Export

In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Import/Export".

Specify the following settings.

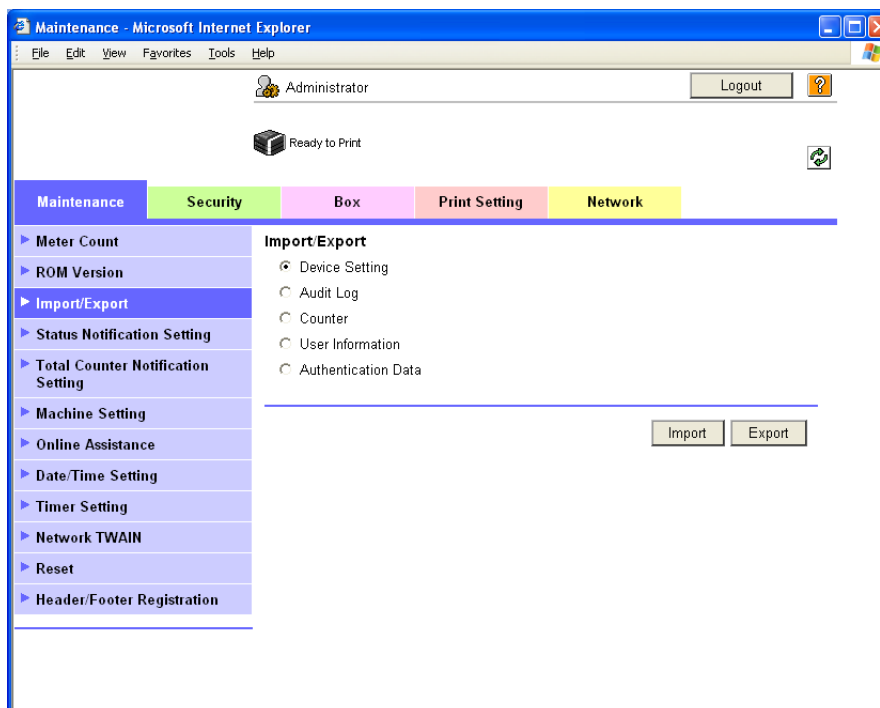

Item	Definition
Device Setting	Imports or exports device settings.
Audit Log	Exports the audit log information.
Counter	Exports the counter information.
User Information	Imports or exports user information. When user authentication or account track is enabled, counter information for every user or account can be exported as text files.
Authentication Data	When using an authentication unit (biometric type) on this machine, biometrics information can be imported or exported.



#### Detail

*Exported files cannot be edited.*

*When E-mail destinations with certificates are exported and imported, the certificate information must be registered again after importing.*

*"Audit Log" and "Counter" are available only for exporting.*

*When importing or exporting authentication data, operate user registration information in the same way. Operate the authentication data after operate the user authentication information.*

*"Audit Log" is available when audit log setting is enabled on this machine.*


## 9.7 Specifying the date and time on this machine

Specify the date and time of the internal clock of this machine.

The following specification methods are available: manual specification and acquisition from the NTP server via the network.

To make this machine log in to the Active Directory, it may be necessary to specify the date and time of this machine.

Specify the settings according to the following flowchart.

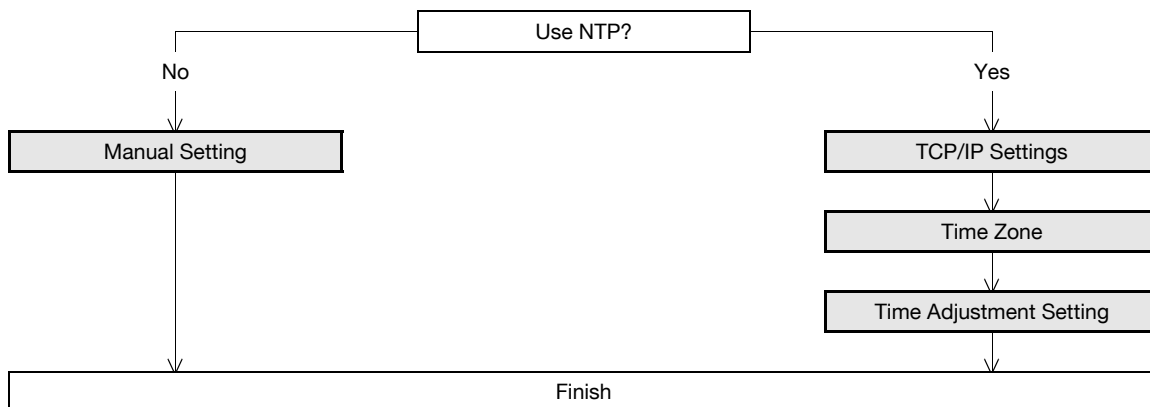

### Detail

The following sections contain descriptions on the settings to make this machine log in to the Active Directory. For details, refer to the respective sections.

["Limiting users using this machine \(Active Directory\)" on page 9-33](#)

### 9.7.1 Manual Setting

In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Date/Time Setting" - "Manual Setting".

Specify the following settings.

The screenshot shows the 'Maintenance - Microsoft Internet Explorer' window. The 'Maintenance' tab is selected, and the 'Date/Time Setting' section is expanded, showing the 'Manual Setting' sub-section. The settings are as follows:

Manual Setting	
Date	
Year	2007
Month	7
Day	19
Time	
Hour	11
Minute	29
Time Zone	GMT +9:00
<input type="checkbox"/> Daylight Saving Time	(1-150)

At the bottom right of the form are 'OK' and 'Cancel' buttons.

Item	Definition	Prior confirmation
Year	Enter the year.	
Month	Enter the month.	
Day	Enter the day.	
Hour	Enter the hour.	
Minute	Enter the minutes.	
Time Zone	Select the time difference from GMT.	Time zone
Daylight Saving Time	If necessary, specify the daylight saving time setting.	

### 9.7.2 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2.](#)

### 9.7.3 Time Zone


On the Manual Setting screen, specify setting for "Time Zone".

For details, refer to ["Manual Setting" on page 9-25.](#)

### 9.7.4 Time Adjustment Setting

In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Date/Time Setting" - "Time Adjustment Setting".

Specify the following settings.

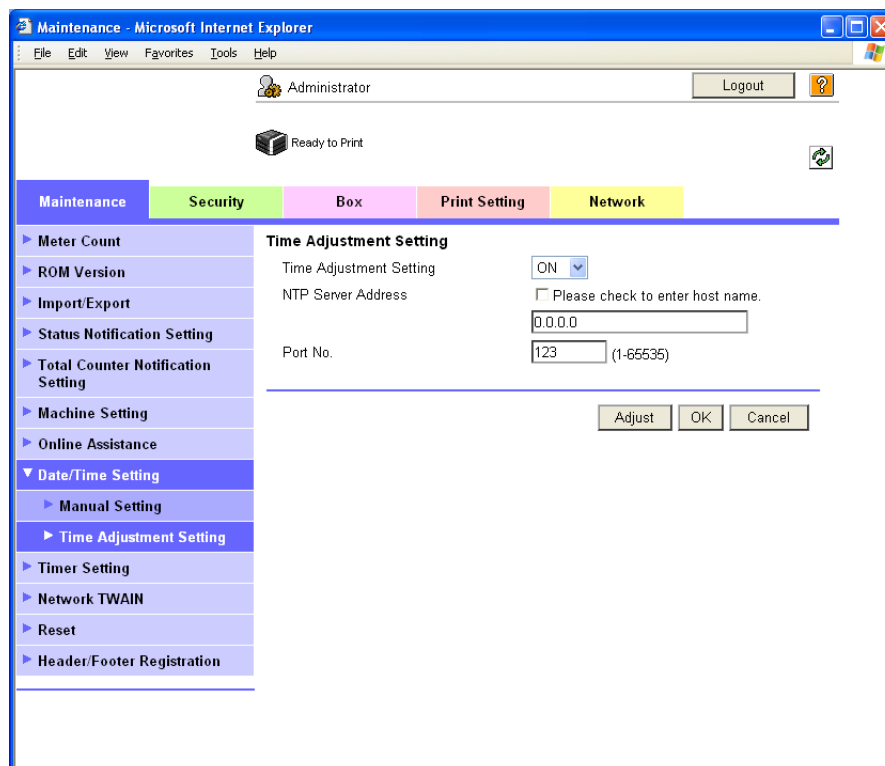

Item	Definition	Prior confirmation
Time Adjustment Setting	Select "ON".	
NTP Server Address	Specify the NTP server address. (Format: "****.***.***.***", Range for ***: 0 to 255) If the DNS server is specified, the address can be specified using the host name. This item can also be specified with IPv6.	Address of the server


Item	Definition	Prior confirmation
Port Number	Default setting: 123 Specify the port number.	Port number for the server
[Adjust]	Connects to the NTP server with the specified conditions to adjust the time.	

## 9.8 Limiting users using this machine (Machine authentication)

Specify settings for using this machine using machine authentication.

Specify user authentication and account track settings in order to control the use of this machine. User authentication settings are specified to manage individuals, and account track settings are specified to manage groups and multiple users. By specifying both user authentication and account track settings, the number of prints made by each account can be managed for each individual user.

Specify the settings according to the following flowchart.

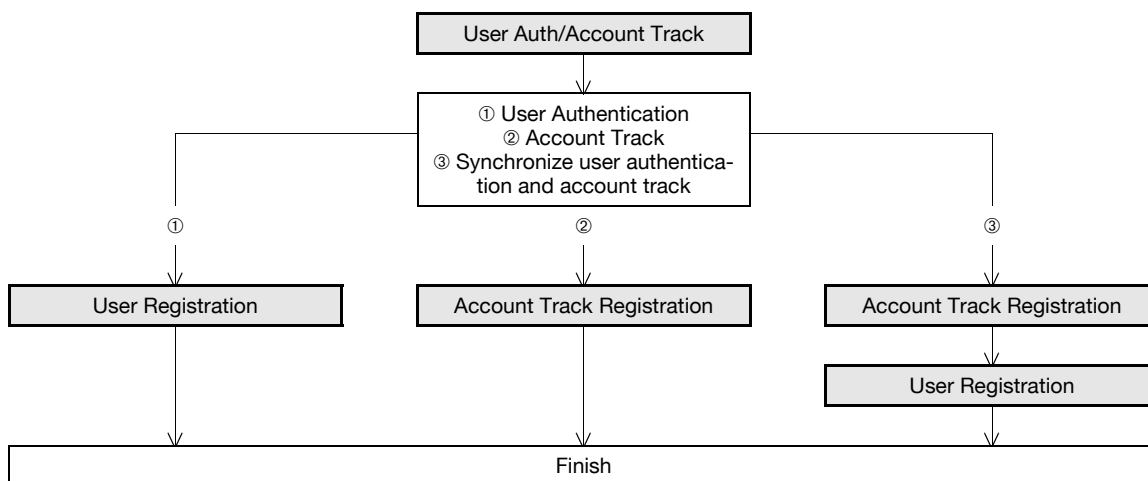

### Note

For ① User Authentication, select "ON" for "General Settings" in [User Auth/Account Track].

For ② Account Track, select "ON" for "Account Track" in [User Auth/Account Track].


For ③ Synchronize user authentication and account track, select "ON" for both "General Settings" and "Account Track", and select "Synchronize" for "Synchronize User Authentication & Account Track".

For details, refer to ["User Auth/Account Track" on page 9-29](#).

### 9.8.1 User Auth/Account Track

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "User Auth/Account Track".

Specify the following settings.

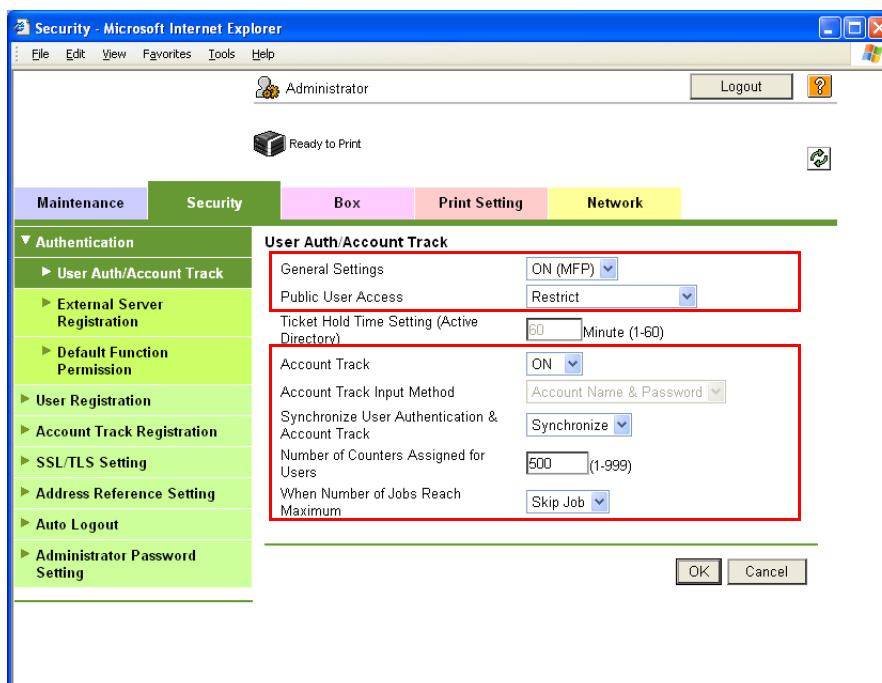

Item	Definition	Prior confirmation
General Settings	Select "ON (MFP)".	
Public User Access	Specify whether to allow public users.	Whether to allow public users
Account Track	To use the account track function, select "ON".	Whether to use Account Track
Account Track Input Method	To use the account track function, select the desired authentication method.	
Synchronize User Authentication & Account Track	To synchronize user authentication and account track functions, select "Synchronize".	Whether to synchronize the user authentication and account track functions
Number of Counters Assigned for Users	To use the user authentication and account track, specify the number of counters assigned for users.	
When Number of Jobs Reach Maximum	Specify the operation that is performed when the number of copies or printouts have reached its maximum.	



#### Detail

If "EnhancedSecurity" is set to "ON", the authentication method cannot be set to "OFF". In addition, "Public User Access" is set to "Restrict".

## 9.8.2 User Registration

In Administrator mode of PageScope Web Connection, select the Security tab - "User Registration" - [New Registration].

Specify the following settings.

The screenshot shows the 'User Registration' form in the 'Security' tab of the PageScope Web Connection interface. The form is displayed within a Microsoft Internet Explorer window. The 'Security' tab is selected, and the 'User Registration' section is active. The form includes fields for user information, function permissions, output permissions, and limiting access to destinations.

**User Registration**

No.

User Name

E-mail Address

User Password

Retype User Password

Account Name

Registered Account Name

---

**Function Permission**

Copy

Scan

Save to External Memory

Print

User Box

Print Scan/Fax from User Box

---

**Output Permission(Print)**

Color

Black

---

**Output Permission(Tx)**

Color

---

**Max. Allowance Set**

Total Allowance

☐ Total  (1-9999999)

Individual Allowance

☐ Color  (1-9999999)

☐ Black  (1-9999999)

Box Administration

☐ Box Count  (0-1000)

---

**Limiting Access to Destinations**

☐ Reference Allowed Group

Registered Reference Group Number

TotalID

☒ Access Allowed Level

Item	Definition	Prior confirmation
No.	Enter the registration number.	
User Name	Enter the user name.	
E-mail Address	Not available for this machine.	
User Password	Enter the password.	
Retype User Password	Enter the password again.	
Account Name	Register the account to which the user belongs. Before selecting the account name, register the account. When "Synchronize" of the user authentication and account is specified, this item appears.	
Function Permission	Specify whether to allow printing, user box operation, and print from user box. Display items related to Copy, Scan, External Memory or Fax are not available for this machine.	
Output Permission (Print)	Specify whether to allow color or black output when printing.	
Output Permission (TX)	Not available for this machine.	
Max. Allowance Set	Specify whether to limit the max. allowance of output.	
Limiting Access to Destinations	Not available for this machine.	



#### Detail

*If "Password Rules" is enabled, no password containing less than eight characters can be registered. If you have already registered a user password containing less than eight characters, change it to one using eight characters before enabling "Password Rules". For details on the password rules, refer to ["Admin. Settings Menu" on page 8-24](#).*

### 9.8.3 Account Track Registration

In Administrator mode of PageScope Web Connection, select the Security tab - "Account Track Registration" - [New Registration].

Specify the following settings.

Item	Definition	Prior confirmation
No.	Enter the registration number.	
Account Name	Enter the account name.	
Password	Enter the password.	
Retype Password	Enter the password again.	
Output Permission (Print)	Specify whether to allow color or black output when printing.	
Output Permission (TX)	Not available for this machine.	
Max. Allowance Set	Displays whether to limit the max. allowance of output.	



#### Detail


*If "Password Rules" is enabled, no password containing less than eight characters can be registered. If you have already registered a user password containing less than eight characters, change it to one using eight characters before enabling "Password Rules". For details on the password rules, refer to "Admin. Settings Menu" on page 8-24.*

## 9.9 Limiting users using this machine (Active Directory)

Specify settings for limiting users of this machine using Active Directory.

To perform authentication using Active Directory of Windows Server, use this setting. This setting limits functions available on a user basis.

Specify the settings according to the following flowchart.

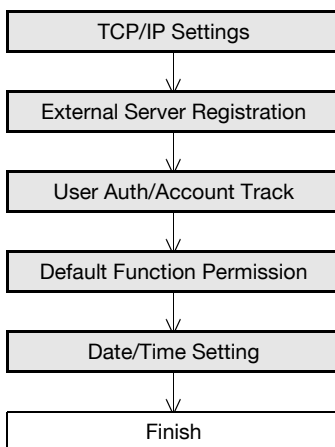

### 9.9.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

When using Active Directory, specify a DNS server synchronized with Active Directory in the DNS Server Settings of this machine.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

## 9.9.2 External Server Registration

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "External Server Registration" - [Edit].

Specify the following settings.

The screenshot shows the 'External Server Registration' configuration page. The left sidebar has a tree view under 'Authentication' with 'External Server Registration' selected. The main area contains the following fields:

- No.:** 1
- External Server Name:** [Text Input]
- External Server Type:** Active Directory (dropdown)
- Active Directory:** [Text Input]
- Default Domain Name:** [Text Input]
- NTLM:**
  - Default Domain Name:** [Text Input]
- NDS:**
  - Default NDS Tree Name:** [Text Input]
  - Default NDS Context Name:** [Text Input]
- LDAP:**
  - Server Address:** [Text Input] (with checkbox 'Please check to enter host name.')
  - Port No.:** [Text Input] (with '(1-65535)' hint)
  - Enable SSL:** [Checkbox]
  - Port No. (SSL):** [Text Input] (with '(1-65535)' hint)
  - Search Base:** [Text Input]
  - Timeout:** [Text Input] sec. (5-300)
  - Authentication Method:** Simple (dropdown)
  - Search Attribute:** [Text Input]


Buttons: OK, Cancel

Item	Definition	Prior confirmation
No.	Displays the registration number.	
External Server Name	Enter the name of the external authentication server (up to 32 characters).	
External Server Type	Select "Active Directory".	
Default Domain Name	Enter the default domain name.	Default domain name

9.9.3 User Auth/Account Track

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "User Auth/Account Track".

Specify the following settings.

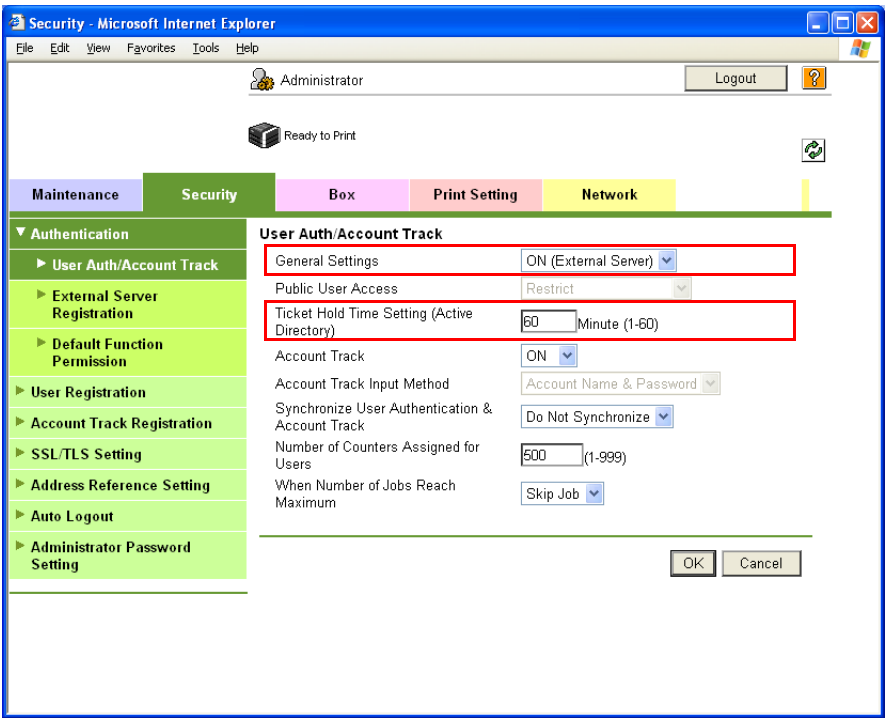


Item	Definition	Prior confirmation
General Settings	Select "ON (External Server)".	
Ticket Hold Time Setting (Active Directory)	Specify the ticket hold time.	

9.9.4 Default Function Permission

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "Default Function Permission".

Specify the following settings.

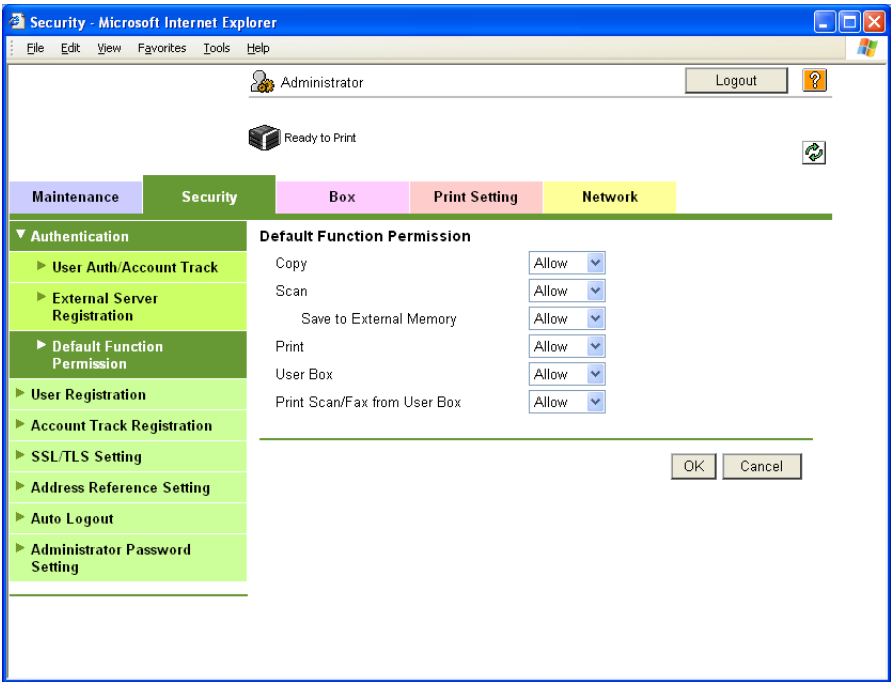

Item	Definition	Prior confirmation
Copy	Limits functions available to authorized users on this machine. Specify whether to allow each function. Display items related to Copy, Scan, External Memory or Fax are not available for this machine.	
Scan		
Save to External Memory		
Fax		
Print		
User Box		
Print Scan/Fax from User Box		

9.9.5 Date/Time Setting

When using Active Directory, specify the date and time on this machine.


For details, refer to "Specifying the date and time on this machine" on page 9-25.

## 9.10 Limiting users using this machine (Windows domain/workgroup)

Specify settings for limiting users of this machine using NTLM authentication.

To perform authentication using NTLM when using Active Directory of Windows Server, use this setting. This setting limits functions available on a user basis.

Specify the settings according to the following flowchart.

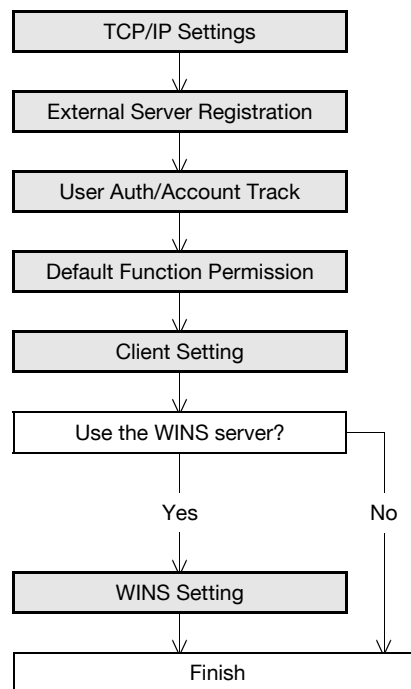

### Note

To use SMB printing in the IPv6 environment, the Direct Hosting setting must be enabled. When the Direct Hosting setting is enabled, the DNS server is used for name resolution to start communication with the server name specified and the IPv6 address is acquired. For details, refer to ["Direct Hosting Setting" on page 2-10](#).

### 9.10.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

## 9.10.2 External Server Registration

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "External Server Registration" - [Edit].


Specify the following settings.

Item	Definition	Prior confirmation
No.	Displays the registration number.	
External Server Name	Enter the name of the external authentication server (up to 32 characters).	
External Server Type	Select "NTLM v1" or "NTLM v2". NTLMv2 is applied from Windows NT 4.0 (Service Pack 4).	
Default Domain Name	Enter the default domain name. Enter the default domain name in uppercase letters.	Default domain name

9.10.3 User Auth/Account Track

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "User Auth/Account Track".

Specify the following setting.

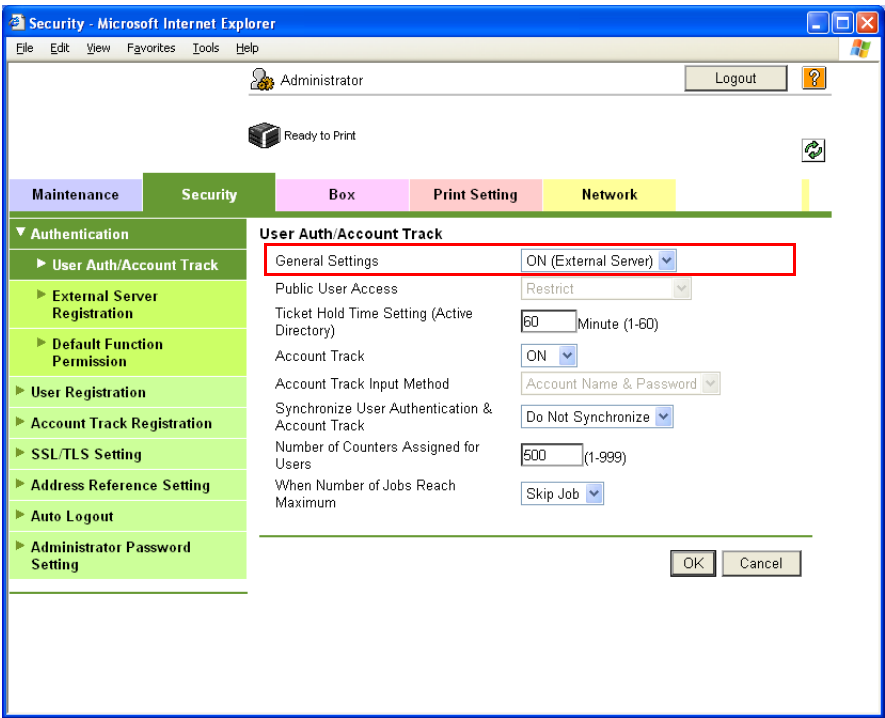

Item	Definition	Prior confirmation
General Settings	Select "ON (External Server)".	

9.10.4 Default Function Permission


Limits functions available to authorized users on this machine.

For details, refer to "Default Function Permission" on page 9-36.

### 9.10.5 Client Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "SMB Setting" - "Client Setting".

Specify the following setting.

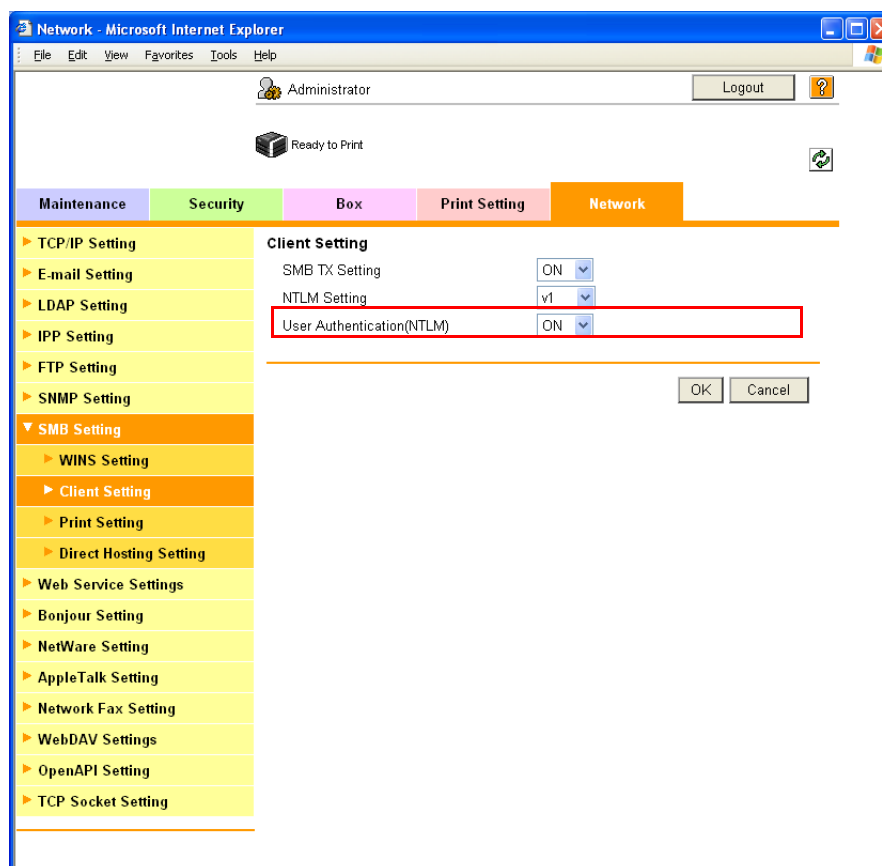

Item	Definition	Prior confirmation
User Authentication (NTLM)	Select "ON".	




#### Detail

*Specifying "OFF" for "User authentication (NTLM)" when "OFF" is specified for "User authentication (NTLM)", "NTLM v1" or "NTLM v2" cannot be selected for External Server Type.*

### 9.10.6 WINS Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "SMB Setting" - "WINS Setting".

Specify the following settings.

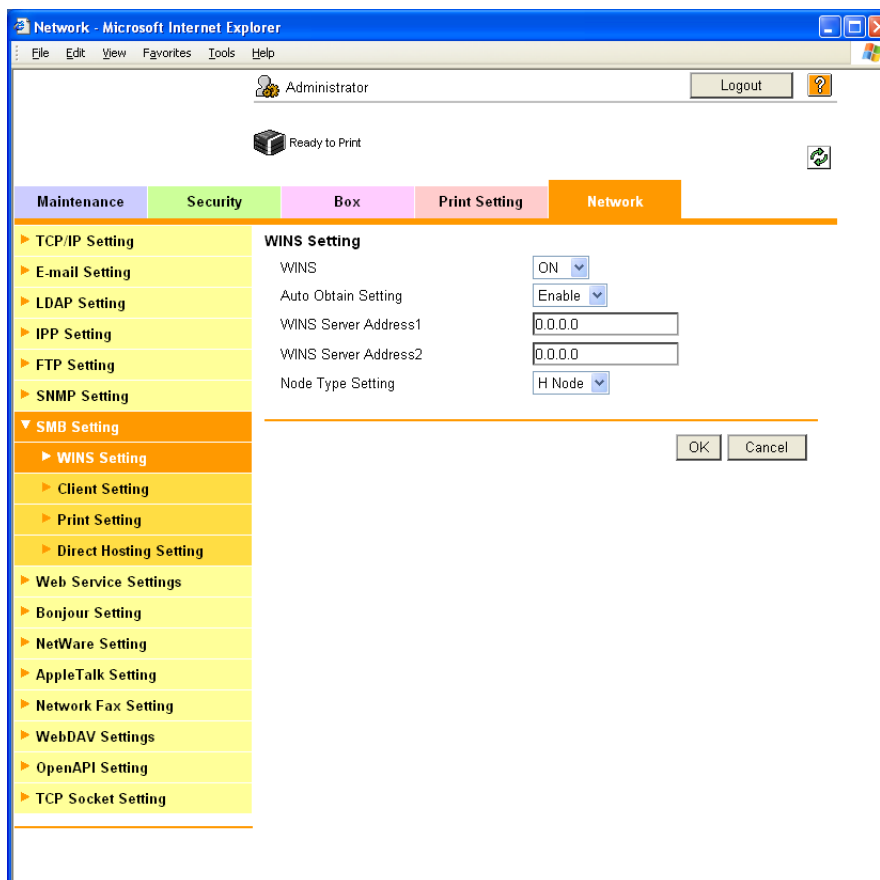


Item	Definition	Prior confirmation
WINS	To use the WINS server, select "ON".	
Auto Obtain Setting	To automatically obtain the WINS server address, select "Enable". This item is enabled when the DHCP is enabled.	Whether automatic acquisition is available with DHCP
WINS Server Address 1 and 2	Specify the WINS server address. (Format: "****.***.***.***", Range for ***: 0 to 255)	Address of the server
Node Type Setting	Specify the name resolution method. <ul style="list-style-type: none"> <li>B Node: Query by broadcast</li> <li>P Node: Query to WINS server</li> <li>M Node: Query in the order of broadcast, then WINS server</li> <li>H Node: Query in the order of WINS server, then broadcast</li> </ul>	

## 9.11 Limiting users using this machine (NDS)

Specify settings for limiting users of this machine using NDS.

To perform NDS-based authentication using NetWare 5.1 or NetWare 6.0, use this setting. This setting limits functions available on a user basis.

Specify the settings according to the following flowchart.

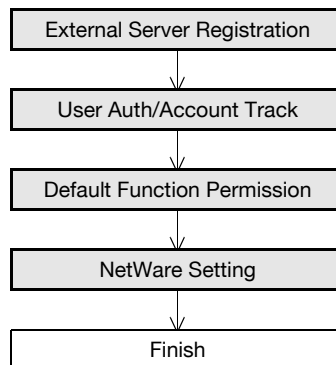

### Detail

*NDS is available only when IPX is used as the protocol. NDS is not available when IP is used.*

### 9.11.1 External Server Registration

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "External Server Registration" - [Edit].

Specify the following settings.

Security - Microsoft Internet Explorer

Administrator Logout

Ready to Print

Maintenance Security Box Print Setting Network

Authentication

- User Auth/Account Track
- External Server Registration
- Default Function Permission
- User Registration
- Account Track Registration
- SSL/TLS Setting
- Address Reference Setting
- Auto Logout
- Administrator Password Setting

**External Server Registration**

No. 2

External Server Name

External Server Type NDS

Active Directory

Default Domain Name

NTLM

Default Domain Name

NDS

Default NDS Tree Name

Default NDS Context Name

LDAP

Server Address ☐ Please check to enter host name.

Port No. (1-65535)

☐ Enable SSL

Port No. (SSL) (1-65535)

Search Base

Timeout sec. (5-300)

Authentication Method Simple

Search Attribute


OK Cancel

Item	Definition	Prior confirmation
No.	Displays the registration number.	
External Server Name	Enter the name of the external authentication server (up to 32 characters).	
External Server Type	Select "NDS".	
Default NDS Tree Name	Enter the default NDS tree name.	
Default NDS Context Name	Enter the default NDS context name.	

### 9.11.2 User Auth/Account Track

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "User Auth/Account Track".

Specify the following setting.

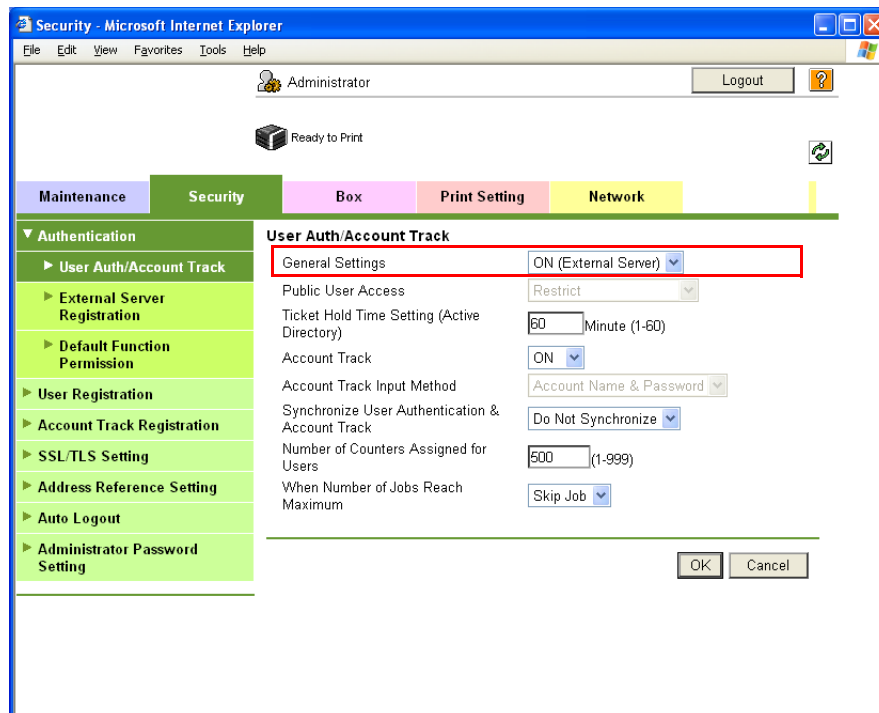

Item	Definition	Prior confirmation
General Settings	Select "ON (External Server)".	

### 9.11.3 Default Function Permission

Limits functions available to authorized users on this machine.

For details, refer to ["Default Function Permission" on page 9-36](#).

### 9.11.4 NetWare Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "NetWare Setting" - "NetWare Setting".

Specify the following settings.

The screenshot shows the 'NetWare Setting' page in the PageScope Web Connection Administrator. The page is titled 'NetWare Setting' and includes a sidebar with various network settings. The main content area shows configuration options for IPX Setting, Ethernet Frame Type, NetWare Print Mode, PServer, Bindery/NDS Setting, and Nprinter/Rprinter. Red boxes highlight the IPX Setting (ON), Ethernet Frame Type (Auto Detect), and User Authentication Setting (ON).


Item	Definition	Prior confirmation
IPX Setting	Select "ON".	
Ethernet Frame Type	Specify the frame type to be used.	Frame type
User Authentication Setting	Select "ON".	

## 9.12 Limiting users using this machine (LDAP)

Specify settings for limiting users of this machine using the LDAP server.

To perform authentication using the LDAP server, use this setting. This setting limits functions available on a user basis.

Specify the settings according to the following flowchart.

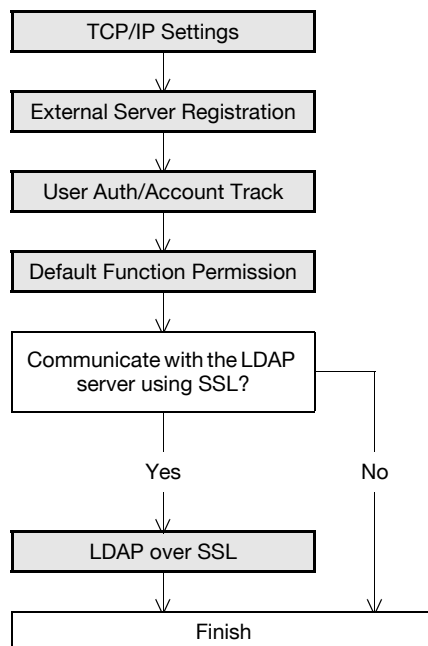

### 9.12.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

### 9.12.2 External Server Registration

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "External Server Registration" - [Edit].

Specify the following settings.


The screenshot shows the 'External Server Registration' configuration window. The 'LDAP' section is highlighted with a red box, indicating the settings to be configured. The 'No.' field is set to 2. The 'External Server Name' field is empty. The 'External Server Type' is set to LDAP. The 'LDAP' section includes fields for Server Address, Port No., Enable SSL, Port No. (SSL), Search Base, Timeout, Authentication Method, and Search Attribute. The 'Active Directory' section includes fields for Default Domain Name, NTLM Default Domain Name, NDS Default NDS Tree Name, and NDS Default NDS Context Name. The 'OK' and 'Cancel' buttons are at the bottom right.

Item	Definition	Prior confirmation
No.	Displays the registration number.	
External Server Name	Enter the name of the external authentication server (up to 32 characters).	
External Server Type	Select "LDAP".	
Server Address	Specify the LDAP server address. (Format: "****.***.***.***", Range for ***: 0 to 255) If the DNS server is specified, the address can be specified using the host name. This item can also be specified with IPv6.	Address of the server
Port No.	Specify the port number.	Port number for the server
Search Base	Specify the search starting point in a hierarchical structure placed on the LDAP server. Searches are performed by also including the subdirectories lower than the starting point that was specified.	
Timeout	Specify the maximum wait time for a search operation.	
Authentication Method	Select the authentication method used for logging in to the LDAP server.	Authentication method for the server
Search Attribute	If "Digest-MD5" is selected as the authentication method, specify the search attribute.	

9.12.3 User Auth/Account Track

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "User Auth/Account Track".

Specify the following setting.

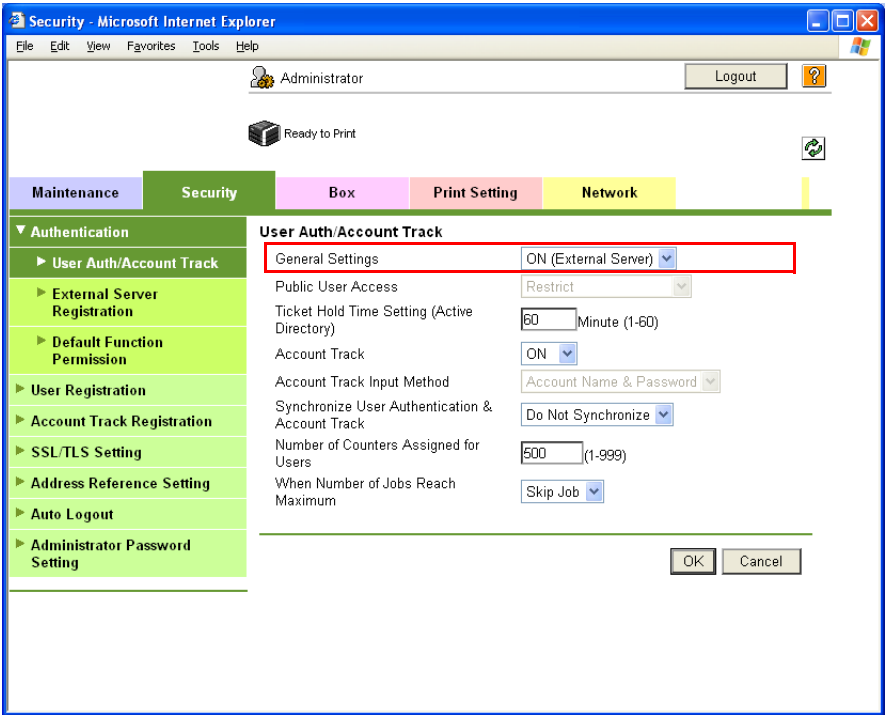

Item	Definition	Prior confirmation
General Settings	Select "ON (External Server)".	

9.12.4 Default Function Permission

Limits functions available to authorized users on this machine.

For details, refer to "Default Function Permission" on page 9-36.

## 9.12.5 LDAP over SSL

### External Server Registration

In Administrator mode of PageScope Web Connection, select the Security tab - "Authentication" - "External Server Registration" - [Edit].

Specify the following settings.

Item	Definition	Prior confirmation
Enable SSL	To encrypt communication between this machine and the LDAP server using SSL, select the "Enable SSL" check box.	Whether the sever supports SSL
Port Number (SSL)	Specify the port number used in SSL communication.	Port number for the server

### Action for Invalid Certificate


In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "Action for Invalid Certificate".

Specify the following setting.



#### Detail

To specify settings for "Action for Invalid Certificate", create a certificate for this machine in advance. For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49](#).

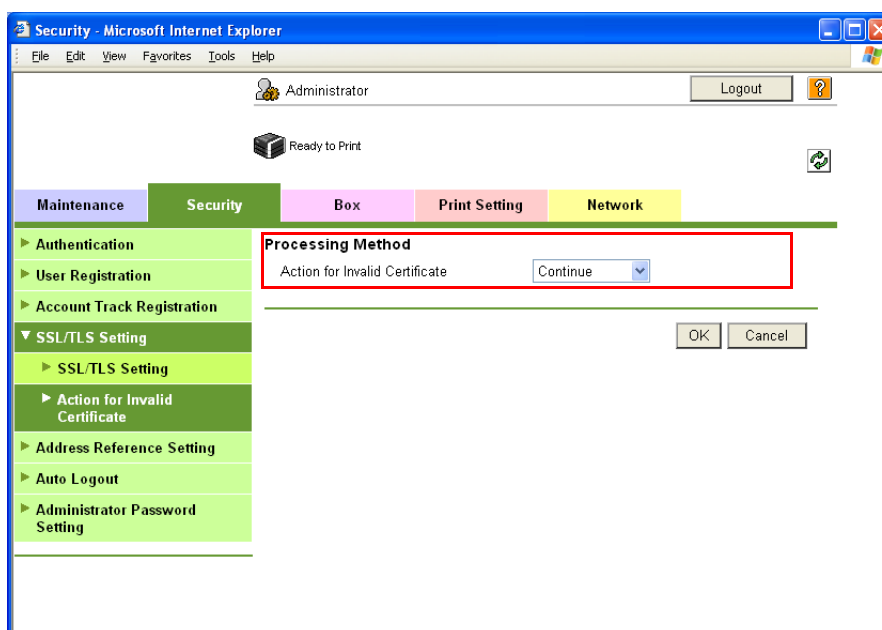


Item	Definition	Prior confirmation
Action for Invalid Certificate	Specify the operation when the validity period for the received certificate has expired. If "Continue" is selected, processing continues even if the date of the certificate is invalid. If "Delete the Job" is selected, the job is deleted if the date of the certificate is invalid.	

## 9.13 Creating a certificate for this machine for SSL-based communication

Specify settings to create a certificate for this machine for SSL-based communication.

Creating a certificate for this machine encrypts communication from a client computer to this machine using SSL in order to prevent disclosure of communication contents and password.

Specify the settings according to the following flowchart.

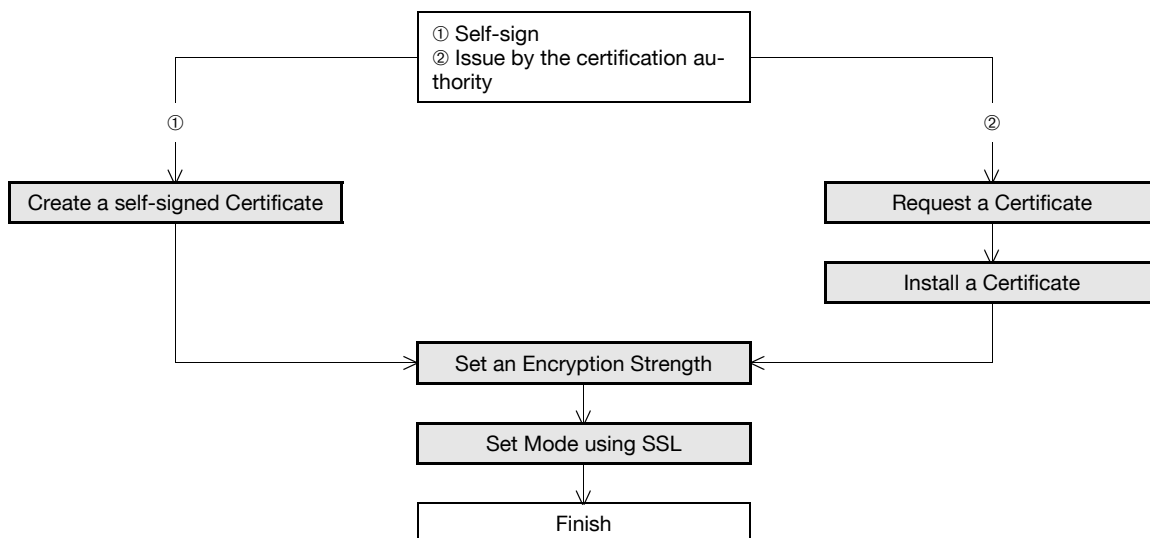

### Detail

When specifying the following settings, communication from a client computer to this machine can be encrypted using SSL. For details, refer to the respective sections.

["Using PageScope Web Connection" on page 2-4](#)

["Specifying IPP print settings" on page 2-12](#)

["Using SSL for communication from Vista to this machine with Web Service Function" on page 9-55](#)

["Using the TCP Socket/OpenAPI/FTP server function" on page 9-79](#)

### 9.13.1 Create a self-signed Certificate

In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "SSL/TLS Setting" - [Setup] - "Create a self-signed Certificate".

Specify the following settings.

Item	Definition	Prior confirmation
Common Name	Displays the IP address or domain name of the machine.	
Organization	Enter the name of the organization or group used for creating an organization certificate (up to 63 characters).	
Organizational Unit	Enter the name of the account used for creating an account certificate (up to 63 characters).	
Locality	Enter the name of the locality used for creating a locality certificate (up to 127 characters).	
State/Province	Enter the name of the state/province used for creating a state/province certificate (up to 127 characters).	
Country	When creating a country certificate, enter a two-character country code regulated by ISO 3166. United States: US, Great Britain: GB, Italy: IT, Australia: AU, The Netherlands: NL, Canada: CA, Spain: ES, Czech Republic: CZ, China: CN, Denmark: DK, Germany: DE, Japan: JP, France: FR, Belgium: BE, Russia: RU	
Admin. E-mail Address	Enter the address for the administrator (up to 127 characters).	Address for the administrator
Validity Start Date	Enter the starting date for the period of validity. Displays the date and time when this page was displayed.	
Validity Period	Enter the number of days from the starting date for the period of validity for the certificate.	
Encryption Strength	Specify the encryption method.	
Mode using SSL/TLS	Specify the mode using SSL/TLS.	
[OK]	Creates a self-signed certificate. It may take a few minutes to create a certificate.	

### 9.13.2 Request a Certificate

In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "SSL/TLS Setting" - [Setup] - "Request a Certificate".


Specify the following settings.

The screenshot shows the 'Request a Certificate' form in the PageScope Web Connection Administrator. The form is titled 'Request a Certificate' and is part of the 'Security' tab. It contains the following fields:

- Common Name: 192.168.1.20
- Organization: [Empty text box]
- Organizational Unit: [Empty text box]
- Locality: [Empty text box]
- State/Province: [Empty text box]
- Country: [Empty text box]
- Admin. E-mail Address: mailuser1@test

The form has 'OK' and 'Cancel' buttons at the bottom right.

Item	Definition	Prior confirmation
Common Name	Displays the IP address or domain name of the machine.	
Organization	Enter the name of the organization or group used for creating an organization certificate (up to 63 characters).	
Organizational Unit	Enter the name of the account used for creating an account certificate (up to 63 characters).	
Locality	Enter the name of the locality used for creating a locality certificate (up to 127 characters).	
State/Province	Enter the name of the state or province used for creating a state/province certificate (up to 127 characters).	
Country	When creating a country certificate, enter a two-character country code regulated by ISO 3166. United States: US, Great Britain: GB, Italy: IT, Australia: AU, The Netherlands: NL, Canada: CA, Spain: ES, Czech Republic: CZ, China: CN, Denmark: DK, Germany: DE, Japan: JP, France: FR, Belgium: BE, Russia: RU	
Admin. E-mail Address	Specify the address for the administrator (up to 127 characters).	Address for the administrator
[OK]	Creates certificate signing request data.	

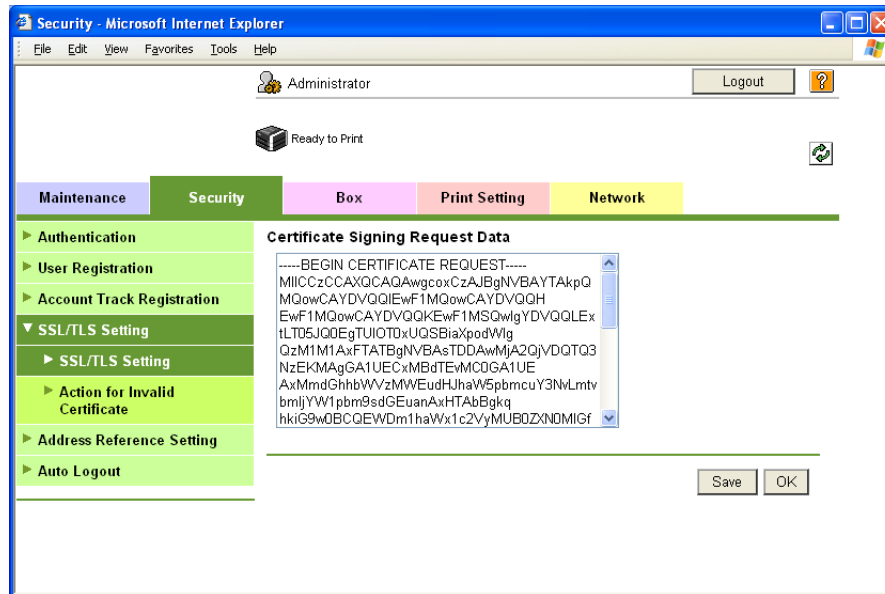


Item	Definition	Prior confirmation
Certificate Signing Request Data	Displays certificate signing request data.	
[Save]	Saves certificate signing request data in the computer as a file.	


### 9.13.3 Install a Certificate

In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "SSL/TLS Setting" - [Setup] - "Install a Certificate".

After requesting a certificate to the certification authority, install the certificate sent from the certification authority on this machine.

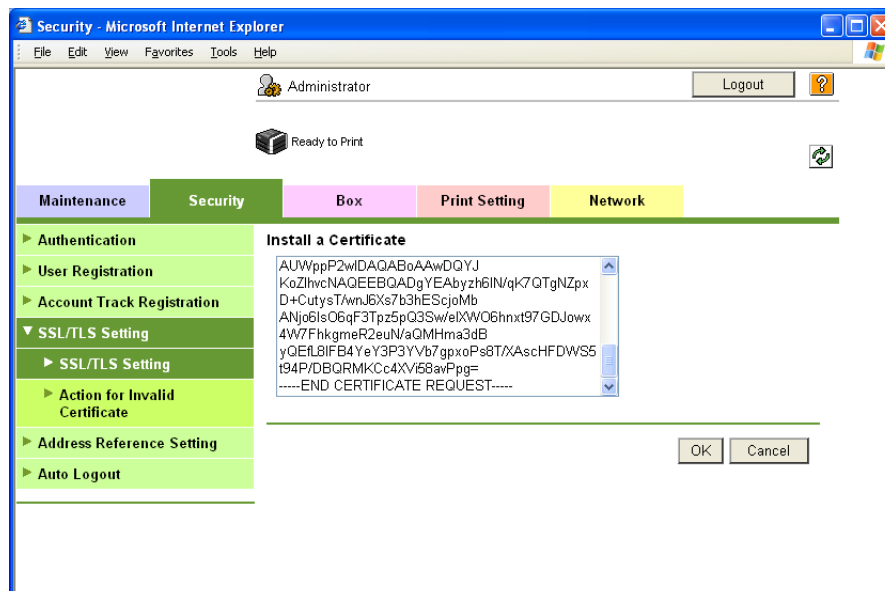

Item	Definition	Prior confirmation
Install a Certificate	Paste text data sent from the certification authority.	
[OK]	Moves to the Set an Encryption Strength and Set Mode using SSL screen.	

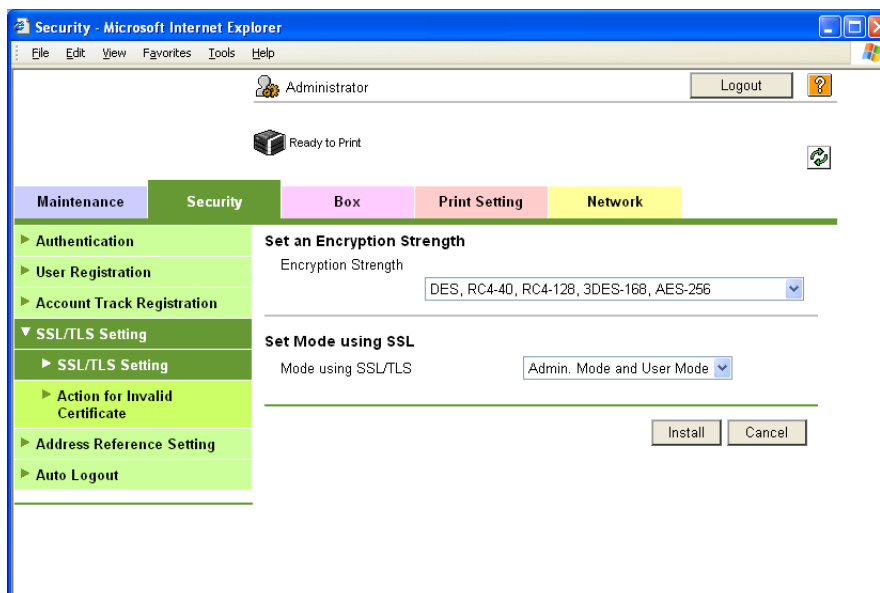


Item	Definition	Prior confirmation
Encryption Strength	Specify the encryption method.	
Mode using SSL/TLS	Specify the SSL/TLS application range.	
[Install]	Installs the certificate.	

### 9.13.4 Set an Encryption Strength

In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "SSL/TLS Setting" - [Setup] - "Set an Encryption Strength".

Specify the following setting.

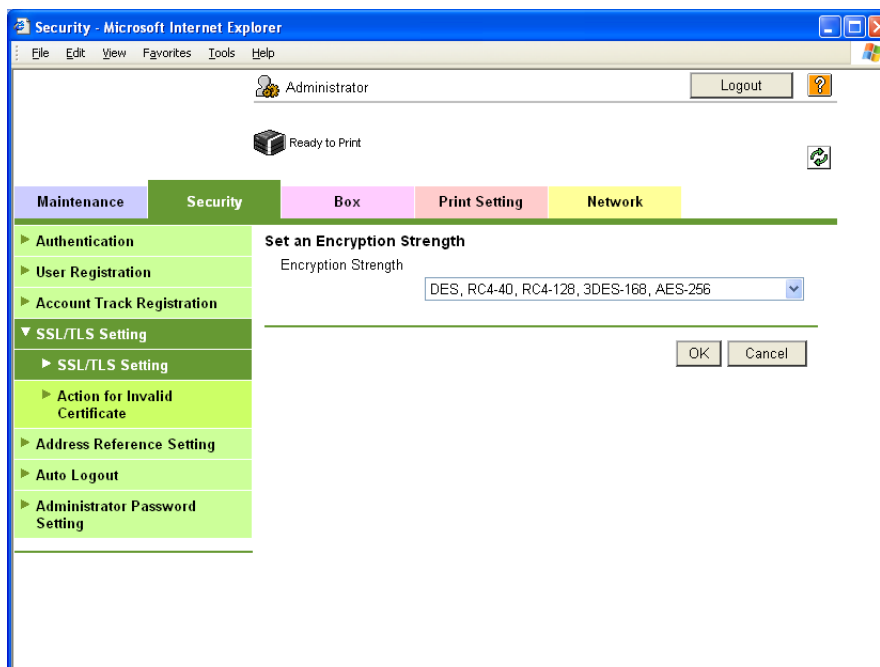


Item	Definition	Prior confirmation
Encryption Strength	If necessary, change the set encryption strength. Specify the encryption strength.	

9.13.5 Set Mode using SSL

In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "SSL/TLS Setting" - [Setup] - "Set Mode using SSL".

Specify the following setting.

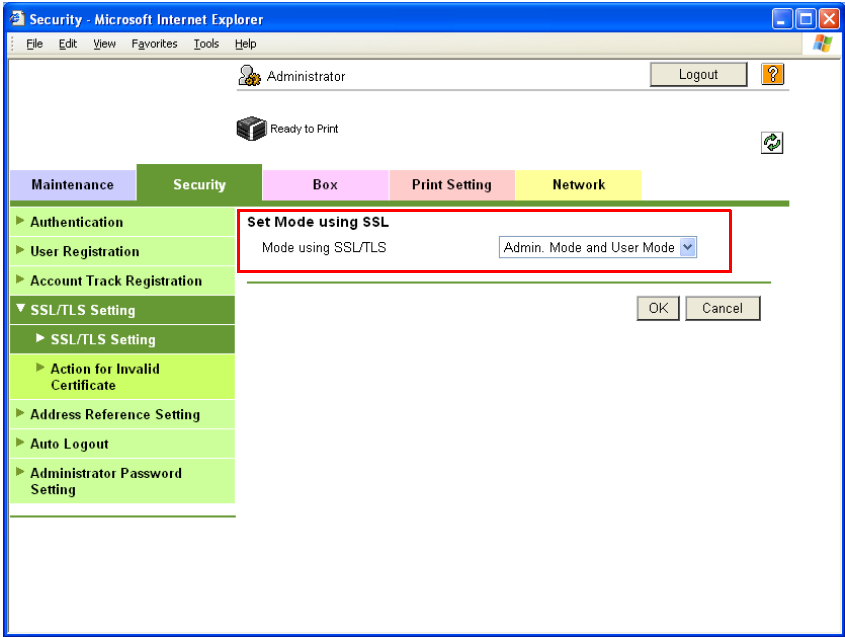


Item	Definition	Prior confirmation
Mode using SSL/TLS	If necessary, change the set SSL/TSL application range. Specify the SSL/TLS application range.	

9.13.6 Remove a certificate

In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "SSL/TLS Setting" - [Setup] - "Remove a Certificate".

If necessary, remove the certificate installed on this machine. To remove the installed certificate, click [OK].

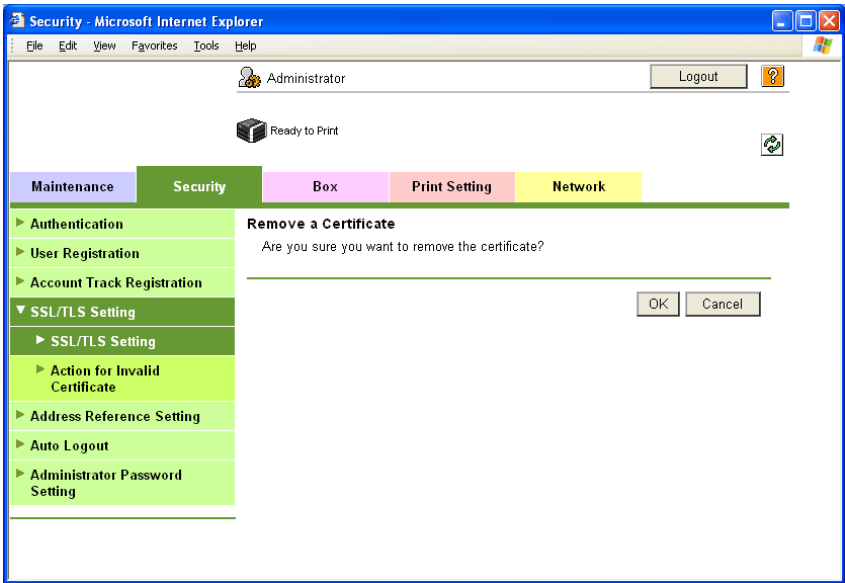

Detail

If "EnhancedSecurity" is set to "ON", the certificate cannot be removed.

## 9.14 Using SSL communication between Vista and this machine with Web Service Function


When using the Web Service function, execute SSL-based encryption of communication from a Windows Vista-equipped computer to this machine. To perform SSL communication, both communications from the computer to this machine and from this machine to the computer must be encrypted by SSL.

Perform settings for the following "Using SSL for communication from Vista to this machine with Web Service Function" and "Using SSL for communication from this machine to Vista with Web Service Function".

### 9.14.1 Using SSL for communication from Vista to this machine with Web Service Function

When using the Web Service function, specify settings for SSL-based encryption of communication from a Windows Vista-equipped computer to this machine. These settings ensure safer file transmission by encrypting Web service-based communication using SSL.

Specify the settings according to the following flowchart.

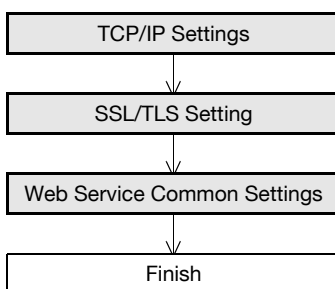

#### Detail


*To encrypt communication from a Windows Vista-equipped computer to this machine using SSL, the computer must be able to resolve the names for this machine using the DNS server. Register this machine to the DNS server in advance, and specify settings for DNS at the computer side.*

*When the certificate of this machine is not published by certificate authority, register the certificate of this machine to Windows Vista as a certificate of "Trusted Root Certification Authorities" for "Local Computer" in advance.*

### 9.14.2 Using SSL for communication from this machine to Vista with Web Service Function

When using the Web Service function, specify settings for SSL-based encryption of communication from this machine to a Windows Vista-equipped computer. These settings ensure safer file transmission by encrypting Web service-based communication using SSL.

Specify the settings according to the following flowchart.

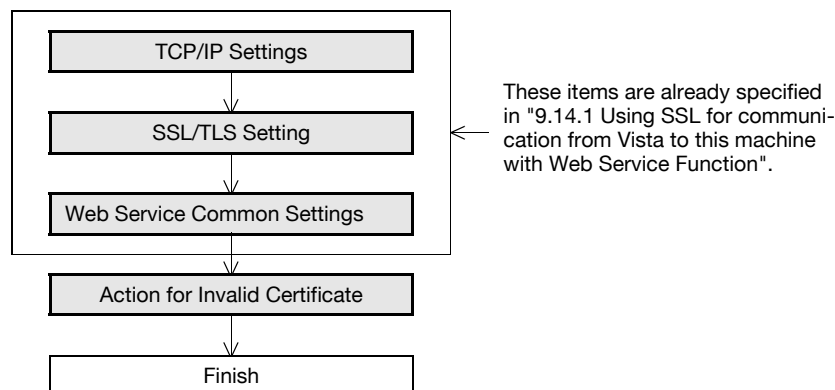

#### Detail

*To encrypt communication from this machine to a Windows Vista-equipped computer using SSL, create a certificate at the computer side in advance to associate communication port of the computer with the TCP/IP (Default setting: port number 5385).*

### 9.14.3 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2.](#)

### 9.14.4 SSL/TLS Setting

Encrypt communication with this machine using SSL.

For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49.](#)

### 9.14.5 Web Service Common Settings

In Administrator mode of PageScope Web Connection, select the Network tab - "Web Service Settings" - "Web Service Common Settings".


Specify the following settings.

Item	Definition	Prior confirmation
Friendly Name	Specify setting for Friendly Name (up to 62 characters).	
SSL Setting	Select "ON".	

### 9.14.6 Action for Invalid Certificate

In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "Action for Invalid Certificate".

Specify the following setting.

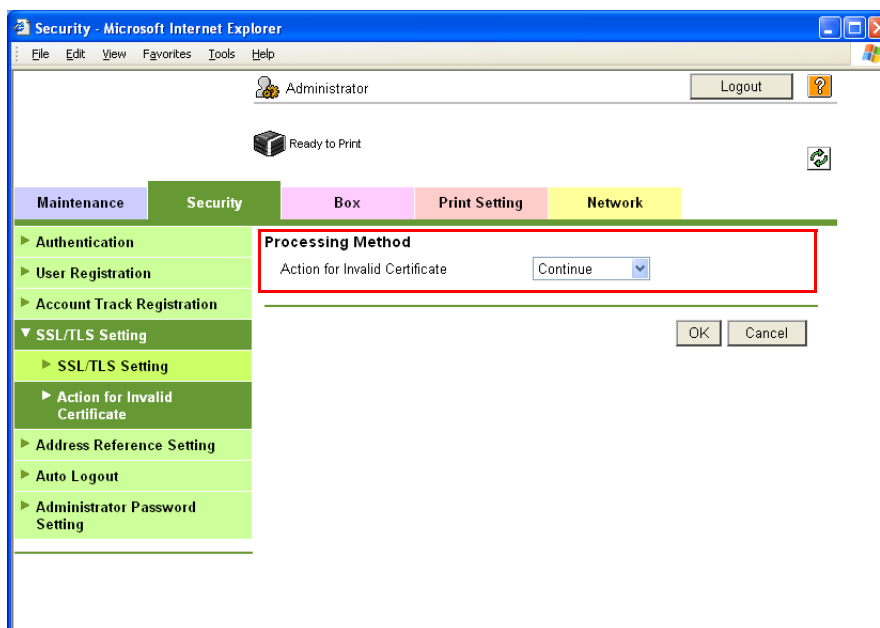


Item	Definition	Prior confirmation
Action for Invalid Certificate	Specify the operation when the validity period for the received certificate has expired. If "Continue" is selected, processing continues even if the date of the certificate is invalid. If "Delete the Job" is selected, the job is deleted if the date of the certificate is invalid.	

## 9.15 Performing IP address filtering

Specify settings for performing IP address filtering.

Performing IP address filtering limits access from specified IP addresses. Specify addresses from which this machine is accessible and inaccessible.

Specify the settings according to the following flowchart.

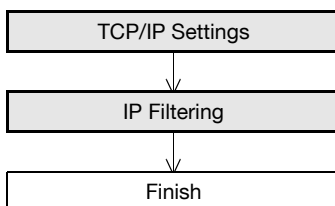

### 9.15.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

### 9.15.2 IP Filtering

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP/IP Setting" - "IP Filtering".

Specify the following settings.

Item	Definition	Prior confirmation
Permit Access	To specify permitted addresses, select "Enable".	
Set 1 to 5	Specify permitted addresses. (Format: "****.***.***.***", Range for ***: 0 to 255)	Permitted addresses
Deny Access	To specify denied addresses, select "Enable".	
Set 1 to 5	Specify denied addresses. (Format: "****.***.***.***", Range for ***: 0 to 255)	Denied addresses

## 9.16 Communicating using IPv6

Specifying settings for IPv6-based communication

To allocate the IPv6 address to this machine, use this setting. IPv6 can run simultaneously with IPv4. However, Ipv6 does not run independently.

When using this machine under the IPv6 environment, there are the following restrictions.

- SMB Print and NTLM Authentication are not available.
- PageScope NDPS Gateway cannot be used.
- DHCPv6 cannot be used.
- IP filtering is not available.
- The printer driver installer cannot be used.
- PageScope Web Connection cannot be displayed with Flash.



**Note**

*For details on direct hosting service, refer to ["Direct Hosting Setting" on page 2-10](#).*

### TCP/IP Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP/IP Setting" - "TCP/IP Setting".

Specify the following settings.

**Network - Microsoft Internet Explorer**

File Edit View Favorites Tools Help

Administrator Logout ?

Ready to Print

**Maintenance Security Box Print Setting Network**

**TCP/IP Setting**

▼ TCP/IP Setting

► TCP/IP Setting

► IP Filtering

► IPsec

► E-mail Setting

► LDAP Setting

► IPP Setting

► FTP Setting

► SNMP Setting

► SMB Setting

► Web Service Settings

► Bonjour Setting

► NetWare Setting

► AppleTalk Setting

► Network Fax Setting

► WebDAV Settings

► OpenAPI Setting

► TCP Socket Setting

**TCP/IP Setting**

\* Is reflected after reset.

TCP/IP\* ON

(Turn the main switch OFF, and then ON, when changing TCP/IP.)

Network Speed Auto

IP Address Setting Method\* Auto Setting

☒ DHCP\*

☒ BootP\*

☒ ARP/PING\*

☒ AutoIP\*

IP Address 192.168.1.20

Subnet Mask 255.255.255.0

Default Gateway 192.168.1.1

**IPv6**

ON

Auto IPv6 Setting\* ON

Link-Local Address fe80::220:6bff:fe5c:a477

Global Address

Prefix Length

Gateway Address

**RAW Port Number**

☒ Port 1 9100 (1-65535)

☒ Port 2 9112 (1-65535)

☒ Port 3 9113 (1-65535)

☒ Port 4 9114 (1-65535)

☒ Port 5 9115 (1-65535)

☒ Port 6 9116 (1-65535)

Dynamic DNS Setting Disable

Host Name Printer1

**DNS Domain Name Setting**

DNS Domain Auto Obtain Disable

DNS Default Domain Name test.local

DNS Search Domain Name1

DNS Search Domain Name2

DNS Search Domain Name3

**DNS Server Setting**

DNS Server Auto Obtain Disable

Primary DNS Server 192.168.1.2

Secondary DNS Server1 0.0.0.0

Secondary DNS Server2 0.0.0.0

**SLP Setting**

SLP Enable

**LPD Setting**

LPD Enable

OK Cancel

Item	Definition	Prior confirmation
TCP/IP	Select "ON".	
IPv6	Select "ON".	
Auto IPv6 Setting	To automatically obtain the IPv6 address, select "ON".	Whether to automatically obtain the IPv6 address
Link-Local Address	Displays the link-local address generated from the MAC address.	
Global Address	When not automatically obtain the IPv6 address, specify the IPv6 global address.	IPv6 address
Prefix Length	When not automatically obtain the IPv6 address, specify the IPv6 global address prefix length.	Prefix length
Gateway Address	When not automatically obtain the IPv6 address, specify the IPv6 gateway address.	Gateway address

**Detail**


*If necessary, specify settings for DNS. For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).*

## 9.17 Communicating using IPsec

Specify settings for IPsec-based communication

Communicating using IPsec prevents falsification and disclosure of data by IP packet. This function ensure safer communication even if transport or application that does not support encryption is used

Specify the settings according to the following flowchart.

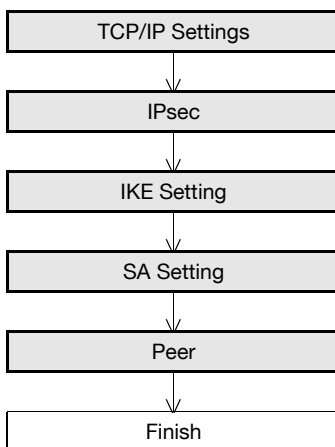

### 9.17.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to "[Specifying general settings for TCP/IP-based communication](#)" on page 2-2.

### 9.17.2 IPsec

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP/IP Setting" - "IPsec".  
Specify the following setting.

Network - Microsoft Internet Explorer

Administrator Logout

Ready to Print

Maintenance Security Box Print Setting **Network**

▼ TCP/IP Setting

- ▶ TCP/IP Setting
- ▶ IP Filtering
- ▶ IPsec**
- ▶ E-mail Setting
- ▶ LDAP Setting
- ▶ IPP Setting
- ▶ FTP Setting
- ▶ SNMP Setting
- ▶ SMB Setting
- ▶ Web Service Settings
- ▶ Bonjour Setting
- ▶ NetWare Setting
- ▶ AppleTalk Setting
- ▶ Network Fax Setting
- ▶ WebDAV Settings
- ▶ OpenAPI Setting
- ▶ TCP Socket Setting

**IPsec**

IPsec OFF

IKE

Key Validity Period 28800 sec. (80-604800)

Diffie-Hellman Group Group 2

No.	Set	Edit	Delete
1		Edit	Delete
2		Edit	Delete
3		Edit	Delete
4		Edit	Delete

SA

Lifetime After Establishing SA 3600 sec. (120-604800)

No.	Set	Edit	Delete
1		Edit	Delete
2		Edit	Delete
3		Edit	Delete
4		Edit	Delete
5		Edit	Delete
6		Edit	Delete
7		Edit	Delete
8		Edit	Delete

Peer

No.	Set	Edit	Delete
1		Edit	Delete
2		Edit	Delete
3		Edit	Delete
4		Edit	Delete
5		Edit	Delete
6		Edit	Delete
7		Edit	Delete
8		Edit	Delete
9		Edit	Delete
10		Edit	Delete


OK Cancel

Item	Definition	Prior confirmation
IPsec	Select "ON".	

### 9.17.3 IKE Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP/IP Setting" - "IPsec" - "IKE" - [Edit].

Specify the following settings. (Up to four groups can be registered in "IKE".)

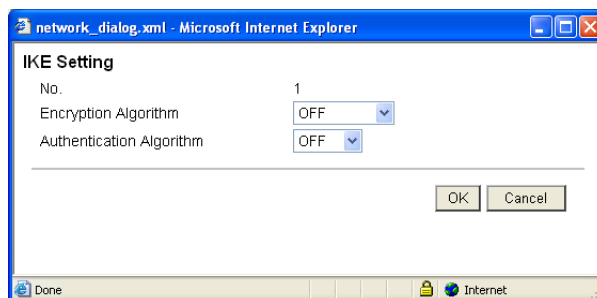


Item	Definition	Prior confirmation
Key Validity Period	Specify the validity period of a key generated when creating a control tunnel.	
Diffie-Hellman Group	Select "Diffie-Hellman Group".	
Encryption Algorithm	Select the encryption algorithm to be used when creating a control tunnel.	
Authentication Algorithm	Select the authentication algorithm to be used when creating a control tunnel.	

### 9.17.4 SA Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP/IP Setting" - "IPsec" - "SA" - [Edit].

Specify the following settings. (Up to eight groups can be registered in "SA".)

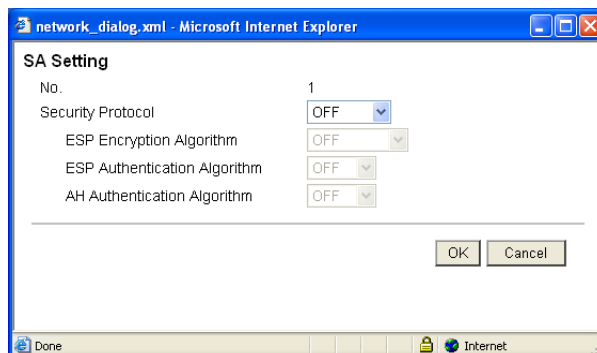


Item	Definition	Prior confirmation
Lifetime After Establishing SA	Specify the validity period of a key generated when creating a communication tunnel.	
Security Protocol	Select the security protocol.	
ESP Encryption Algorithm	When "ESP" is selected for "Security Protocol", specify the ESP encryption algorithm.	
ESP Authentication Algorithm	When "ESP" is selected for "Security Protocol", specify the ESP authentication algorithm.	
AH Authentication Algorithm	When "AH" is selected for "Security Protocol", specify the AH authentication algorithm.	

9.17.5 Peer

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP/IP Setting" - "IPsec" - "Peer" - [Edit].

Specify the following settings. (Up to 10 peers can be registered in "Peer".)

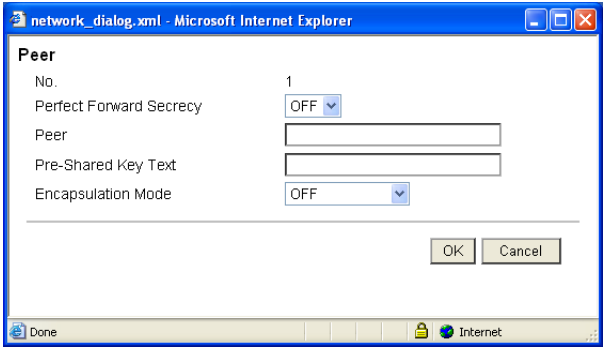

Item	Definition	Prior confirmation
Perfect Forward Secrecy	To increase the IKE strength, select "ON".	
Peer	Specify the IP address of the peer.	IP address of the peer
Pre-Shared Key Text	Specify the Pre-Shared Key text shared with the peer.	
Encapsulation Mode	Specify the operation mode of IPsec.	


## 9.18 Monitoring this machine using the SNMP manager

Specify settings for monitoring this machine using a general SNMP manager.

SNMP manager-based communication with this machine allows acquisition, management, and monitoring of the information of this machine via the network. SNMP runs in a TCP/IP or IPX/SPX environment.

In addition, use of the TRAP function of SNMP allows setting for notification of the status of this machine. For details, refer to ["Providing notification of the status of this machine \(TRAP\)" on page 9-77](#).

Specify the settings according to the following flowchart.

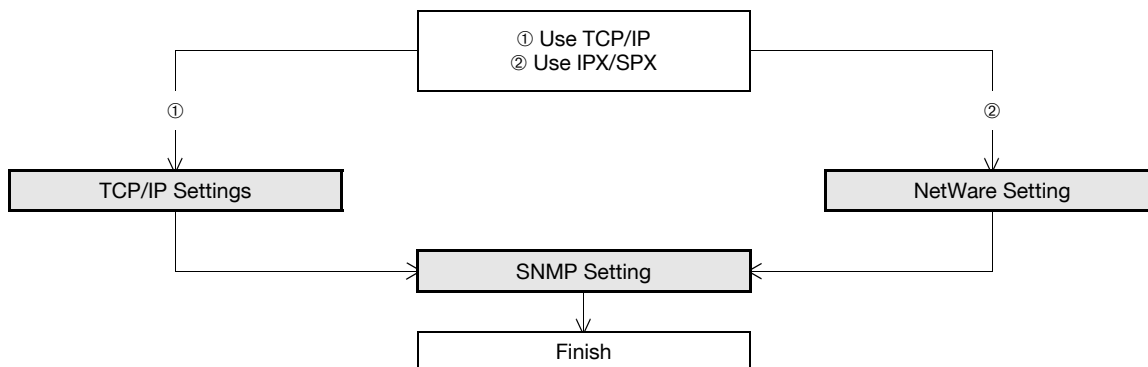

### 9.18.1 TCP/IP Settings


Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

9.18.2 NetWare Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "NetWare Setting" - "NetWare Setting".

Specify the following settings.

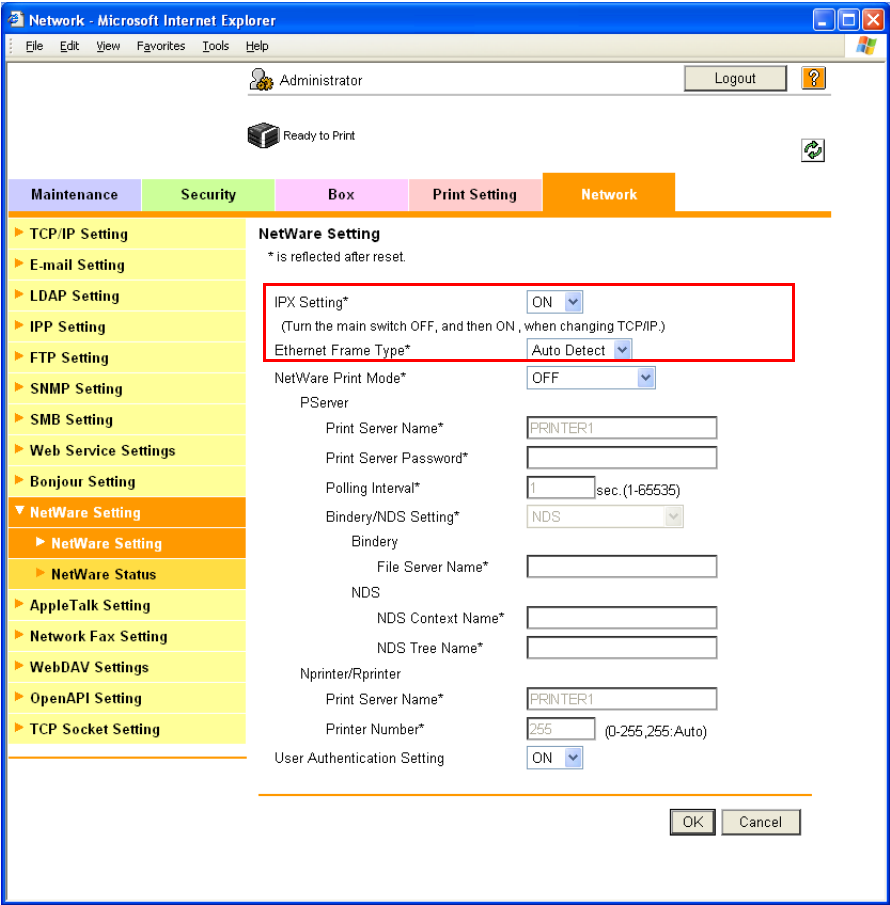

Item	Definition	Prior confirmation
IPX Setting	Select "ON".	
Ethernet Frame Type	Specify the frame type to be used.	Frame type

### 9.18.3 SNMP Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "SNMP Setting".  
Specify the following settings.

The screenshot shows the 'SNMP Setting' page in the PageScope Web Connection interface. The page is titled 'Network - Microsoft Internet Explorer' and shows the 'Network' tab selected. The 'SNMP Setting' section is highlighted with a red box. It includes settings for SNMP (ON), UDP Port Setting (161), SNMP v1/v2c Setting (Read Community Name: public, Write Community Name: private), SNMP v3 Setting (Context Name, Discovery User Name, Read User Name, Security Level, auth-password, priv-password, Write User Name, Security Level, auth-password, priv-password, Encryption Algorithm, Authentication Method), and TRAP Setting (Allow Setting, Trap Setting when Authentication Fails).

Item	Definition	Prior confirmation
SNMP	Specifies whether to use the SNMP. If yes, specify whether to use SNMP v1/v2 (IP), SNMP v3, and SNMP v1 (IPX). SNMP v1 (IPX) can be specified only when IPX is enabled.	Protocol to be used (TCP/IP or IPX/SPX)
UDP Port Setting	Default setting: 161 Specify the UDP port number.	
SNMP v1/v2c Setting	Specify settings for using SNMP v1/v2c.	
Read Community Name	Specify the community name to be used for scanning (up to 15 characters).	
Write Community Name	Specify the community name to be used for reading and writing (up to 15 characters).	
SNMP v3 Setting	Specify settings for SNMP v3.	
Context Name	Specify the context name (up to 63 characters).	
Discovery User Name	Specify the user name for detection (up to 32 characters).	
Read User Name	Specify the name of read only user (up to 32 characters).	
Security Level	Specify the security level for read only user.	
auth-password	Specify the read only user authentication password to be used for authentication (up to 32 characters).	

Item	Definition	Prior confirmation
priv-password	Specify the read only user privacy password to be used for privacy (encryption) (up to 32 characters).	
Write User Name	Specify the reading/writing user name (up to 32 characters).	
Security Level	Specify the security level for reading/writing user.	
auth-password	Specify the reading/writing user authentication password to be used for authentication (up to 32 characters).	
priv-password	Specify the reading/writing user privacy password to be used for privacy (encryption) (up to 32 characters).	
Encryption Algorithm	Specify the encryption algorithm.	
Authentication Method	Specify the authentication method.	


## 9.19 Providing notification of the status of this machine (E-mail)

Specify settings for notifying the administrator of the machine status via E-mail.

Using this function provides notification for a specified address when a warning message occurs on this machine.

Communication by combining POP before SMTP, APOP, SMTP authentication or encryption using SSL/TLS is available.

Specify the settings according to the following flowchart.

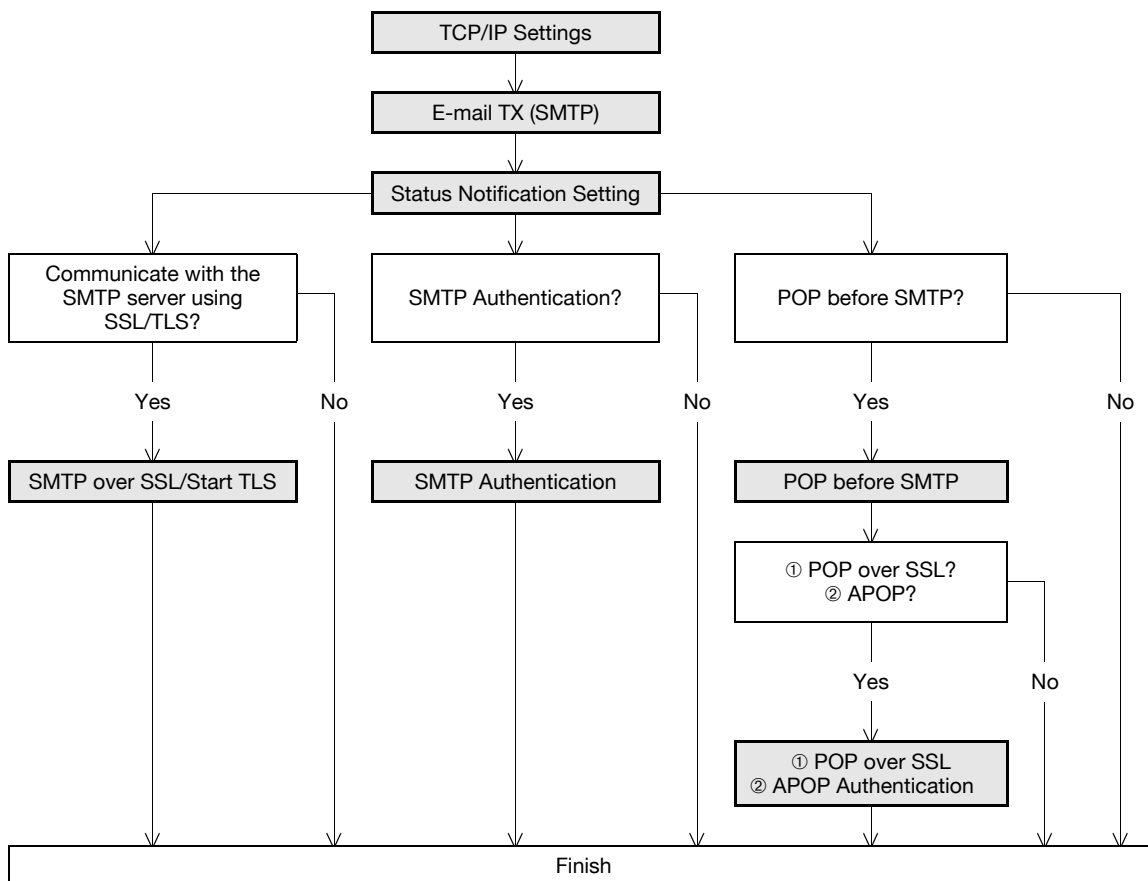

### 9.19.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

### 9.19.2 E-mail TX (SMTP)

In Administrator mode of PageScope Web Connection, select the Network tab - "E-mail Setting" - "E-mail TX (SMTP)".

Specify the following settings.

Item	Definition	Prior confirmation
E-mail TX Setting	Select "ON".	
E-mail Notification	Select "ON".	
SMTP Server Address	Specify the SMTP server address. (Format: "****.***.***.***", Range for ***: 0 to 255) If the DNS server is specified, the address can be specified using the host name. This item can also be specified with IPv6.	Address of the server
Port Number	Default setting: 25 Specify the port number.	Port number for the server
Connection Timeout	Specify the time period before the server connection times out.	
Max Mail Size	Select whether to limit the size of sent messages.	
Server Capacity	To limit the maximum mail size, specify the max. allowance of the mail size including the attached file. Mails exceeding the maximum allowance are removed. If a mail is separated, this setting is disabled.	Receiving limit of the server
Admin. E-mail Address	Displays the administrator address. If the administrator address is not specified, specify it at "Machine Setting".	Address for the administrator
Binary Division	To divide the mail size, select "ON". If the mail software used for receiving mails does not have the mail restore function, the mails may not be read.	Restore function of the mail soft
Divided Mail Size	To divide the mail, specify a divided mail size.	Receiving limit of the server

### 9.19.3 Status Notification Setting

In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Status Notification Setting" - "E-mail Address" - [Edit].

Specify the following settings.

Item	Definition	Prior confirmation
Notification Address	Specify the notification address.	Notification address
Replenish Paper Tray	Provides notification when a paper-out condition occurs.	
JAM	Provides notification when a paper misfeed occurs.	
PM Call	Provides notification when a periodic inspection is required.	
Replace Staples	Provides notification when a staple-out condition occurs.	
Replenish Toner	Provides notification when a toner-out condition occurs.	
Finisher Tray Full	Provides notification when the finisher tray becomes full.	
Service Call	Provides notification when a service call occurs.	
Job Finished	Provides notification when the job is completed.	
Hole-Punch Scrap Box Full	Provides notification when hole-punch scraps must be removed.	
Waste Toner Box Full	Provides notification when the waste toner box must be replaced.	
Imaging Unit Yield	Provides notification when the imaging unit must be replaced.	
Fusing Unit Yield	Provides notification when the fusing unit must be replaced.	
Transfer Belt Unit Yield	Provides notification when the transfer belt must be replaced.	

## 9.19.4 SMTP over SSL/Start TLS

### E-mail TX (SMTP)

In Administrator mode of PageScope Web Connection, select the Network tab - "E-mail Setting" - "E-mail TX (SMTP)".

Specify the following settings.

Item	Definition	Prior confirmation
Use SSL/TLS	To encrypt communication between this machine and the SMTP server using SSL/TLS, select "SMTP over SSL" or "Start TLS".	Whether the sever supports SSL or START TLS
Port Number	Default setting: 25 If "Start TLS" is selected, specify the port number.	Port number for the server
Port No. (SSL)	Default setting: 465 If "SMTP over SSL" is selected, specify the port number to be used for SSL communication.	Port number for the server

### Action for Invalid Certificate


In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "Action for Invalid Certificate".

Specify the following settings.



#### Detail

To specify settings for "Action for Invalid Certificate", create a certificate for this machine in advance. For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49](#).

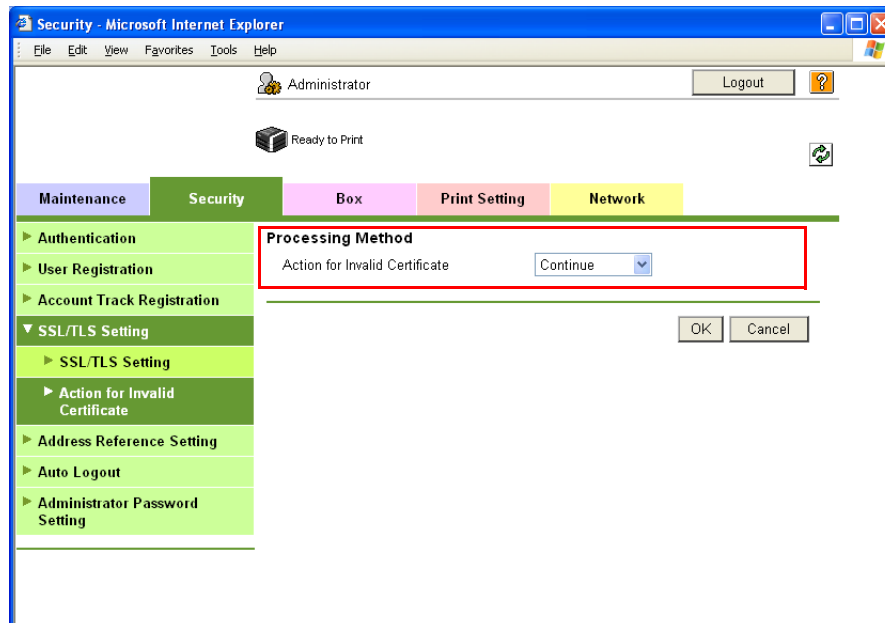

Item	Definition	Prior confirmation
Action for Invalid Certificate	Specify the operation when the validity period for the received certificate has expired. If "Continue" is selected, processing continues even if the date of the certificate is invalid. If "Delete the Job" is selected, the job is deleted if the date of the certificate is invalid.	

### 9.19.5 SMTP Authentication

In Administrator mode of PageScope Web Connection, select the Network tab - "E-mail Setting" - "E-mail TX (SMTP)".

Specify the following settings.

Item	Definition	Prior confirmation
SMTP Authentication	To perform SMTP authentication, select the "SMTP Authentication" check box.	Whether the sever requests SMTP
User ID	Specify the user ID for the SMTP authentication (up to 255 characters).	
Password	Specify the password for the SMTP authentication (up to 128 characters).	
Domain Name	Specify the domain name for the SMTP authentication (up to 255 characters). If the authentication method is Digest-MD5, the domain name must be specified.	Authentication method
Authentication Settings	Specify whether to synchronize with user authentication. When user authentication is performed, this item is displayed.	Whether to synchronize the user authentication



#### Detail

*A SMTP authentication method that is supported by the SMTP server and provided with the strongest encryption strength is automatically selected from Digest-MD5, CRAM-MD5, PLAIN, and LOGIN.*

*If there is just one domain (realm) to which the user belongs, it is notified from the SMTP server at the time of initial communication, and communication is automatically made using the domain name. Therefore, no domain name setting on this machine is not required. If there are two domains or more to which the user belongs, however, specify the domain name to which the user belongs.*

### 9.19.6 POP before SMTP

#### POP before SMTP

In Administrator mode of PageScope Web Connection, select the Network tab - "E-mail Setting" - "E-mail TX (SMTP)".

Specify the following settings.

Item	Definition	Prior confirmation
POP before SMTP	To perform POP before SMTP, select "ON".	Whether the sever requires POP before SMTP authentication
POP before SMTP Time	Specify the time period to access the SMTP server after logging in to the POP server.	Whether the POP server is different from the SMTP server



#### Detail

*If the POP server is different from the SMTP server, the POP server informs the SMTP server that it has been logged in. Therefore, if the set POP before SMTP time is too short, messages may not be sent.*

## E-mail RX (POP)

In Administrator mode of PageScope Web Connection, select the Network tab - "E-mail Setting" - "E-mail RX (POP)".

Specify the following settings.

The screenshot shows the 'E-mail RX (POP)' configuration page in the PageScope Web Connection interface. The page is titled 'Network - Microsoft Internet Explorer' and shows the 'Network' tab selected. The left sidebar lists various settings, with 'E-mail RX (POP)' highlighted. The main area contains fields for 'E-mail RX Setting' (ON), 'POP Server Address' (0.0.0.0), 'Login Name', 'Password', 'APOP Authentication' (OFF), 'MDN Response' (ON), 'Connection Timeout' (30 sec), 'Port Number' (110), and 'Port No. (SSL)' (995). Red boxes highlight the 'E-mail RX Setting', 'POP Server Address', 'Login Name', 'Password', 'Connection Timeout', and 'Port Number' fields.

Item	Definition	Prior confirmation
E-mail RX Setting	To perform POP before SMTP, select "ON".	
POP Server Address	Specify the POP server address. (Format: "****.***.***.***", Range for ***: 0 to 255) If the DNS server is specified, the address can be specified using the host name. This item can also be specified with IPv6.	Address of the server
Login Name	Enter the login name for the POP server (up to 63 characters).	
Password	Specify the password for logging in to the POP server (up to 15 characters).	
Connection Timeout	Specify the time period before the server connection times out.	
Port Number	Default setting: 110 Specify the port number.	Port number for the server

## 9.19.7 POP over SSL

### E-mail RX (POP)

In Administrator mode of PageScope Web Connection, select the Network tab - "E-mail Setting" - "E-mail RX (POP)".

Specify the following settings.

Item	Definition	Prior confirmation
Use SSL/TLS	To encrypt communication between this machine and the POPS server using SSL, select the "Use SSL/TLS" check box.	Whether the sever supports SSL
Port No. (SSL)	Default setting: 995 Specify the port number used in SSL communication.	Port number for the server

### Action for Invalid Certificate


In Administrator mode of PageScope Web Connection, select the Security tab - "SSL/TLS Setting" - "Action for Invalid Certificate".

Specify the following settings.



#### Detail

To specify settings for "Action for Invalid Certificate", create a certificate for this machine in advance. For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49](#).

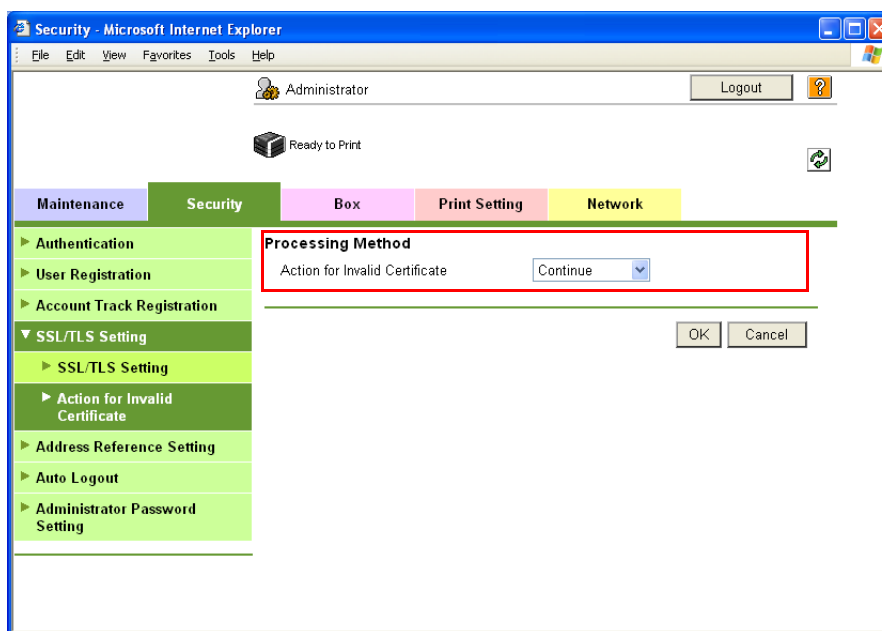

Item	Definition	Prior confirmation
Action for Invalid Certificate	Specify the operation when the validity period for the received certificate has expired. If "Continue" is selected, processing continues even if the date of the certificate is invalid. If "Delete the Job" is selected, the job is deleted if the date of the certificate is invalid.	

### 9.19.8 APOP Authentication

In Administrator mode of PageScope Web Connection, select the Network tab - "E-mail Setting" - "E-mail RX (POP)".

Specify the following settings.

Item	Definition	Prior confirmation
APOP Authentication	To encrypt the login name and password when logging in to the POP server, select "ON".	Whether the sever re-requests APOP

**Detail**


*When the POP server is logged in with APOP, the password is encrypted with Digest-MD5. If "ON" is specified for APOP authentication, you cannot log in to the server if the POP server does not support APOP.*

## 9.20 Providing notification of the status of this machine (TRAP)

Specify settings for notifying the administrator of the machine status using the TRAP function of SNMP.

Using this function provides notification for a specified IP address or IPX address when a warning message occurs on this machine.

Specify the settings according to the following flowchart.

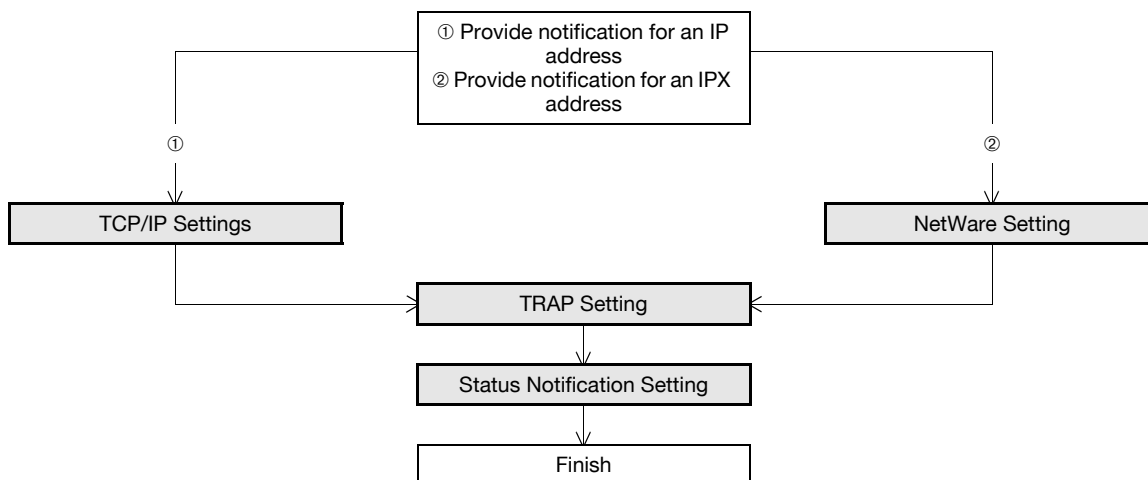

### Detail

To use the TRAP function of SNMP, specify settings for SNMP in advance. For details, refer to ["Monitoring this machine using the SNMP manager" on page 9-65](#).

### 9.20.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

### 9.20.2 NetWare Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "NetWare Setting" - "NetWare Setting".

Specify the following settings.

Item	Definition	Prior confirmation
IPX Setting	Select "ON".	
Ethernet Frame Type	Specify the frame type to be used.	Frame type

### 9.20.3 TRAP Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "SNMP Setting".

Specify the following settings.

Item	Definition	Prior confirmation
Allow Setting	Select "Allow".	
Trap Setting when Authentication Fails	Select whether to enable the TRAP function when authentication failed.	

### 9.20.4 Status Notification Setting

In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Status Notification Setting" - "IP (IPX) Address" - [Edit].

For details on the settings, refer to ["Status Notification Setting" on page 9-71](#).

9.21 Using the TCP Socket/OpenAPI/FTP server function


Specify settings for TCP Socket, OpenAPI, and FTP server of this machine.

TCP socket is used during data transmissions between the computer application and this machine.

To synchronize this machine with a different OpenAPI-based system, specify settings for OpenAPI.

This machine serves as an FTP server by specifying settings for the FTP server function of this machine. To use an application that synchronizes with this machine as an FTP client, use this setting.

Specify the settings according to the following flowchart.

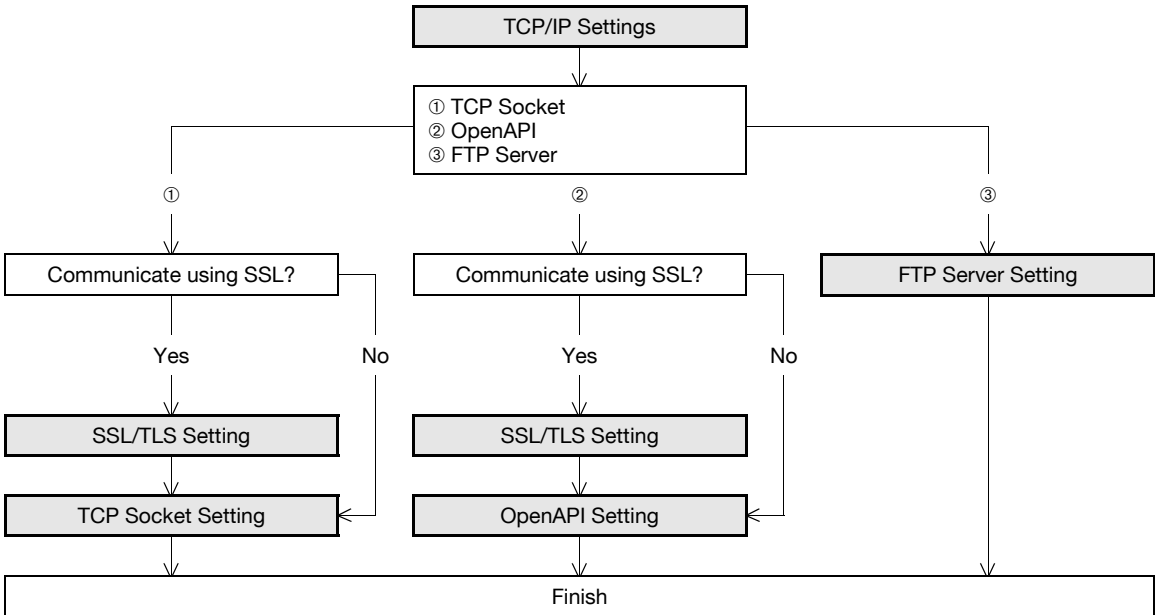

9.21.1 TCP/IP Settings

Specify settings to use this machine in a TCP/IP network environment.

For details, refer to ["Specifying general settings for TCP/IP-based communication" on page 2-2](#).

9.21.2 SSL/TLS Setting

Specify settings for SSL-based communication.

For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49](#).


9.21.3 TCP Socket Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "TCP Socket Setting".  
Specify the following settings.



Detail

To use SSL/TLS, install the certificate in advance. For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49](#).

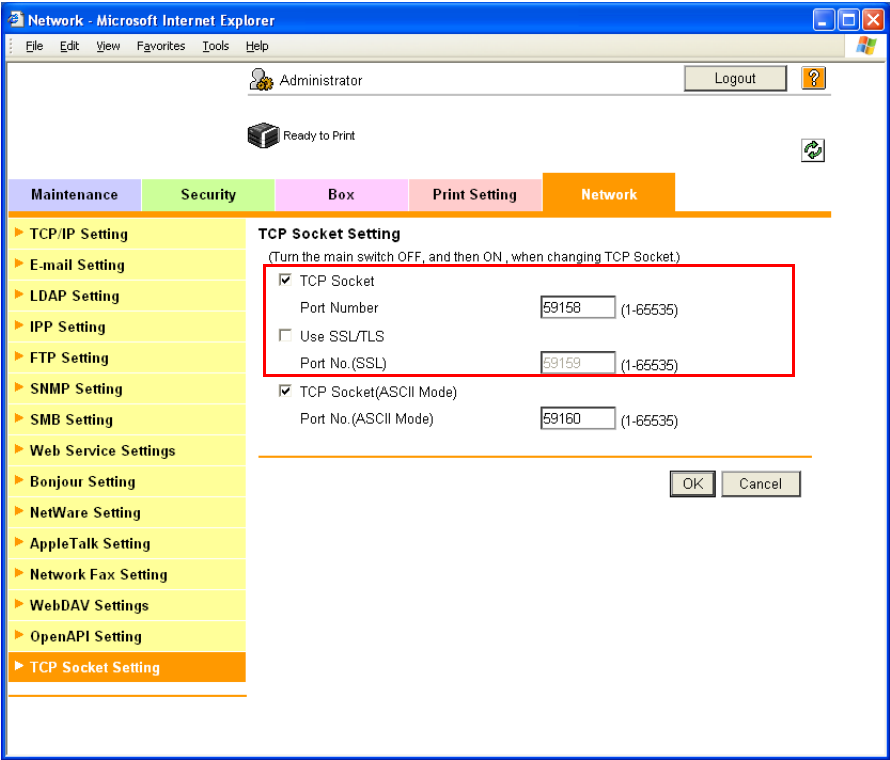

Item	Definition	Prior confirmation
TCP Socket	Select the "TCP Socket" check box.	
Port Number	Specify the port number.	
Use SSL/TLS	To use SSL/TLS, select the "Use SSL/TLS" check box.	Whether to use SSL/TLS
Port No. (SSL)	Specify the port number used in SSL communication.	



Detail

If "EnhancedSecurity" is set to "ON", the "Use SSL/TLS" check box is selected.


### 9.21.4 OpenAPI Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "OpenAPI Setting".  
Specify the following settings.



#### Detail

To use SSL/TLS, install the certificate in advance. For details, refer to ["Creating a certificate for this machine for SSL-based communication" on page 9-49](#).

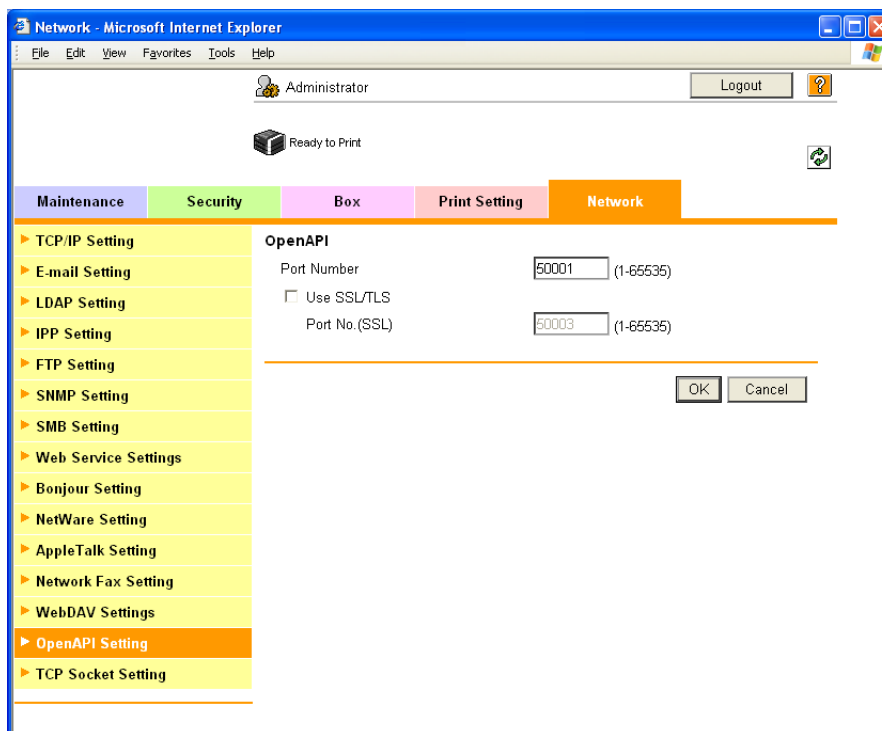

Item	Definition	Prior confirmation
Port Number	Specify the port number.	
Use SSL/TLS	To use SSL/TLS, select the "Use SSL/TLS" check box.	Whether to use SSL/TLS
Port No. (SSL/TLS)	Specify the port number used in SSL communication.	




#### Detail

If "EnhancedSecurity" is set to "ON", the "Use SSL/TLS" check box is selected.

9.21.5 FTP Server Setting

In Administrator mode of PageScope Web Connection, select the Network tab - "FTP Setting" - "FTP Server Setting".

Specify the following setting.

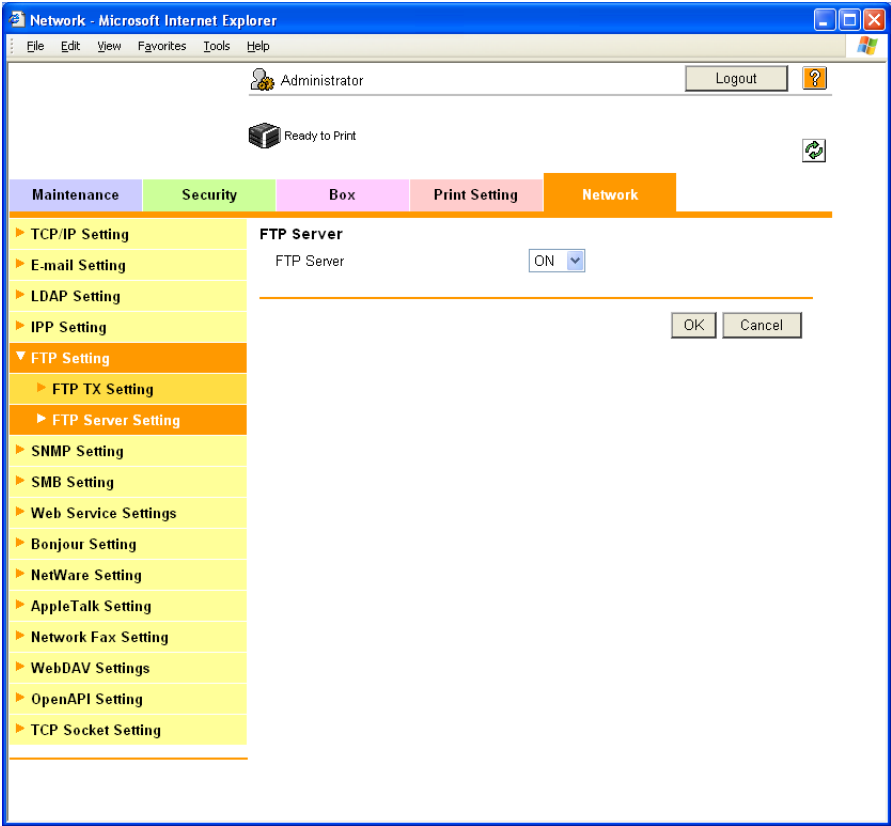

Item	Definition	Prior confirmation
FTP Server	Select "ON".	



Detail

If "EnhancedSecurity" is set to "ON", "OFF" is selected.

## 9.22 Other items on the Maintenance tab

This section describes other items specifiable on the Maintenance tab for the PageScope Web Connection.

### 9.22.1 Using the timer function


Specify settings for the timer function of this machine.

Settings for the power save function can be specified.

#### Power Save Setting

In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Timer Setting" - "Power Save Setting".

Specify the following settings.

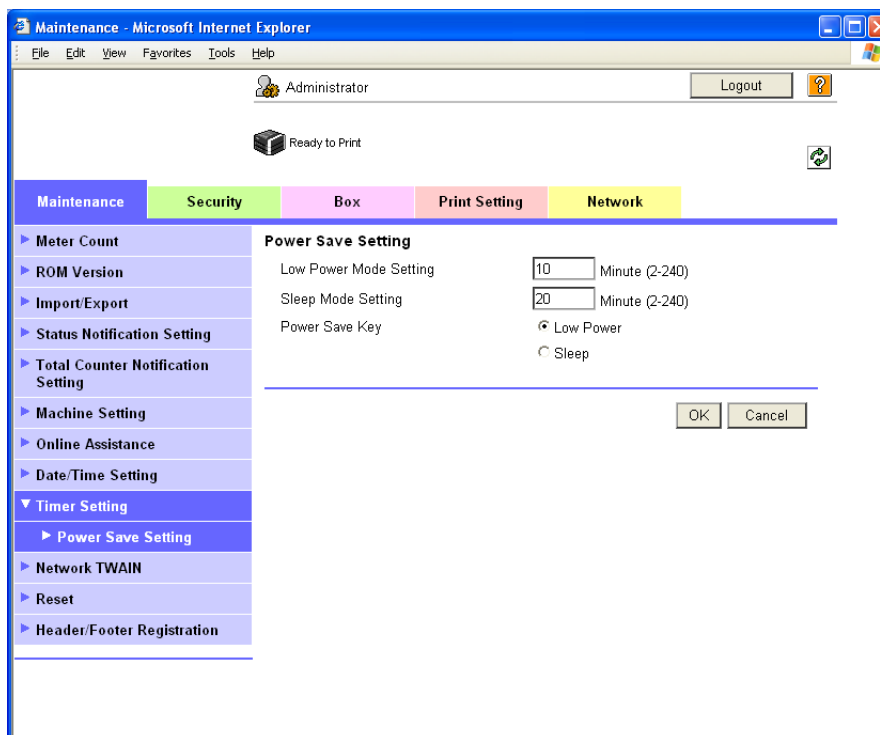

Item	Definition
Low Power Mode Setting	Specify the time period before the machine enters Low Power mode.
Sleep Mode Setting	Specify the time period before the machine enters Sleep mode.
Power Save Key	Manually specify the setting for the power save function (Low Power or Sleep mode).

### 9.22.2 Resetting setting information

Reset machine settings.

Network settings and controller settings can be reset.

#### Network Setting Clear


In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Reset" - "Network Setting Clear".

To reset to the factory default network settings, click [Clear].




#### Detail

*If "EnhancedSecurity" is set to "ON", this menu item does not appear.*

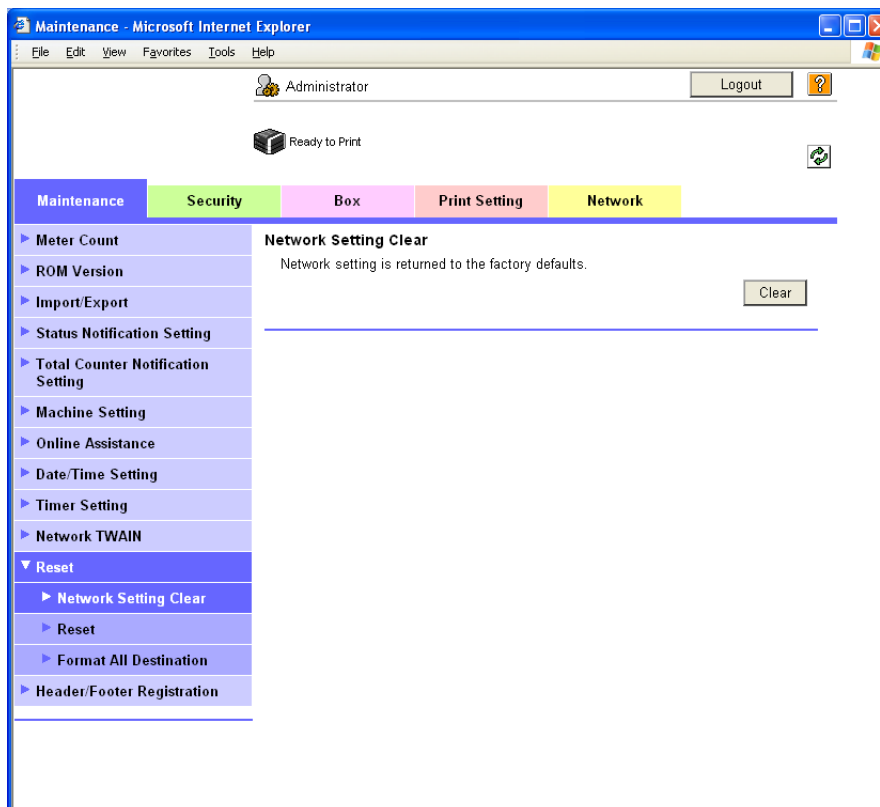

## Reset

In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Reset" - "Reset".  
To reset the controller, click [Reset].

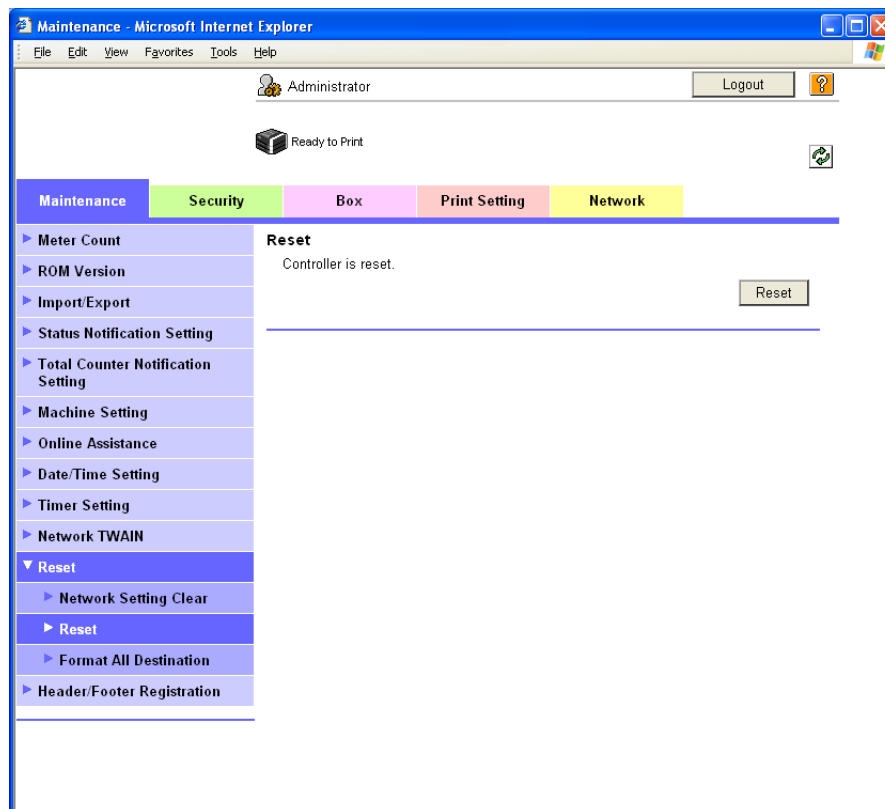

### 9.22.3 Registering the header or footer

To print on this machine, register a text that can be printed as a header or footer.

The header or footer registered here can be selected in the printer driver.

#### Header/Footer Registration

In Administrator mode of PageScope Web Connection, select the Maintenance tab - "Header/Footer Registration" - [Edit].

Specify the following settings.

Item	Definition
No.	Displays the registration number.
Name	Specify the registration name.
Color	Specify the color.
Pages	Select the pages to be printed.
Size	Specify the size.
Date/Time Setting	Specify the date and time formats.
Distribution Number	Specify the distribution number text. Select the output format, and then specify the starting number.

Item	Definition
Header/Footer	<p>Specify whether to print the following items.</p> <ul style="list-style-type: none"><li>• Header String/Footer String (up to 40 characters each)</li><li>• Date/Time Setting</li><li>• Distribution Number</li><li>• Job Number</li><li>• Serial Number</li><li>• User Name/Account Name</li></ul>

## 9.23 Other items on the Security tab

This section describes other items specifiable on the Security tab for the PageScope Web Connection.

### 9.23.1 Specifying the auto logout time


Specify the length of time before Administrator mode or User mode is automatically logged out.

If no operation is performed for the length of time specified here, the user will automatically be logged out.

#### Auto Logout

In Administrator mode of PageScope Web Connection, select the Security tab - "Auto Logout".

Specify the following settings.

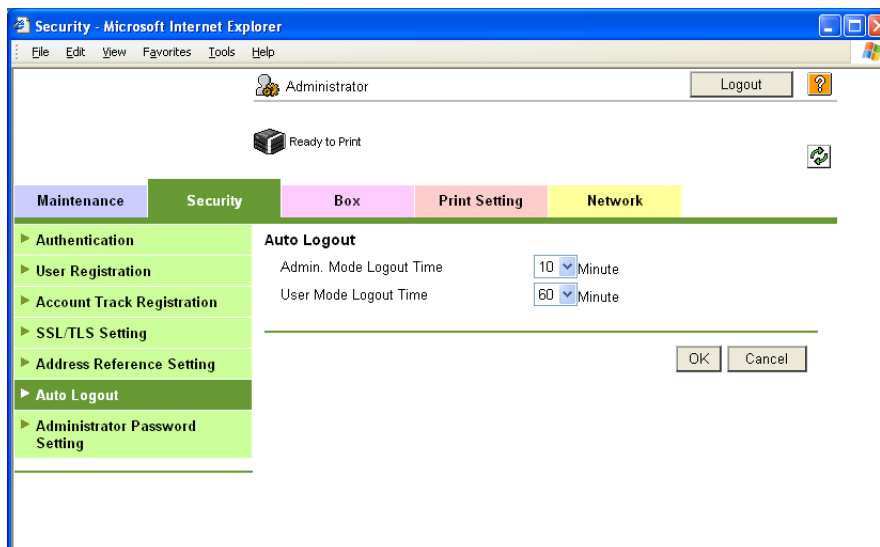

Item	Definition
Admin. Mode Logout Time	Specify the time period before the user is automatically logged out when no operation is performed for a certain period of time in Administrator mode.
User Mode Logout Time	Specify the time period before the user is automatically logged out when no operation is performed for a certain period of time in the user mode.

9.23.2 Specifying the Administrator password

Specify the password for the machine’s administrator.

Administrator Password Setting


In Administrator mode of PageScope Web Connection, select the Security tab - "Administrator Password Setting".

Specify the following settings.



Detail

If "EnhancedSecurity" is set to "ON", this menu item does not appear.  
If the certificate for this machine is not installed, this menu item does not appear.

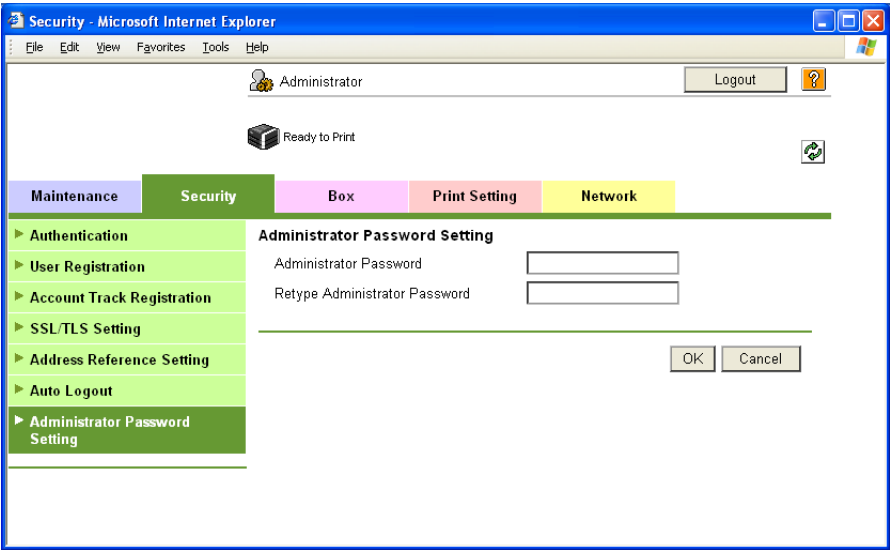

Item	Definition
Administrator Password	Specify the administrator password (up to 8 characters).
Retype Administrator Password	Enter the administrator password again for confirmation.



Detail

If "Password Rules" is enabled, no password containing less than eight characters can be registered.  
If you have already registered a user password containing less than eight characters, change it to one using eight characters before enabling "Password Rules". For details on the password rules, refer to "Admin. Settings Menu" on page 8-24.

## 9.24 Print Setting tab settings

This section describes other items specifiable on the Print Setting tab for the PageScope Web Connection. On the Print Setting tab, specify settings for the print function of this machine.

### 9.24.1 Specifying initial settings for the print function

Specify initial settings for the print function.

#### Basic Setting

In Administrator mode of PageScope Web Connection, select the Print Setting tab - "Basic Setting". Specify the following settings.

Item	Definition
PDL Setting	Specify the PDL language.
Paper Tray	Specify the paper tray.
Output Tray	Specify the output tray.
2-Sided Print	Specify whether to perform 2-sided print.
Bind Direction	Specify the binding direction.
Staple	Specify whether to perform staple. If yes, specify the number of staples.
Punch	Specify whether to perform punch.
Number of Sets	Specifies the number of copies to be printed.
Default Paper Size	Specifies the paper size.
Original Direction	Select the original direction.
Spool Print Jobs in HDD before RIP	Select whether to spool a print job to HDD.
Banner Sheet Setting	Specify whether to print the first page on the banner page.
Banner Sheet Paper Tray	Select the default paper tray used for printing the banner pages.

Item	Definition
No Matching Paper in Tray Setting	Specify whether to continue printing from a different paper tray when there is no paper of the appropriate size in the specified paper tray.
A4/A3 $\longleftrightarrow$ LTR/LGR Auto Switch	Select whether to print an A4 (Letter)/A3 (Ledger) original in the same size with disregard to image missing when the Letter (A4)/Ledger (A3) paper tray is selected.
Binding Direction Adjustment	Specify the binding direction adjustment method.



#### Detail

*The staple function is available only if the optional finisher is installed.*

*The punch function is available only if the optional finisher and punch kit are installed.*

## 9.24.2 Specifying settings for PCL/PS/XPS print

Specify settings for PCL/PS/XPS print

### PCL Settings

In Administrator mode of PageScope Web Connection, select the Print Setting tab - "PCL Setting".

Specify the following settings.

The screenshot shows a web browser window titled 'Print Setting - Microsoft Internet Explorer'. The page has a navigation bar with tabs: Maintenance, Security, Box, Print Setting (selected), and Network. Under 'Print Setting', there are sub-tabs: Basic Setting, PCL Setting (selected), PS Setting, XPS Settings, and Interface Setting. The 'PCL Setting' section contains the following controls:


- Symbol Set: A dropdown menu showing 'PC-8, Code Page 437'.
- Typeface: A radio button group with 'Resident Font' selected and 'Download Font' unselected. Below 'Resident Font' is a dropdown menu showing 'Courier'.
- Font Size: Two input fields. 'Scalable Font' has '12.00' and 'Point (4.00-999.75)'. 'Bitmap Font' has '10.00' and 'Pitch (0.44-99.00)'.
- Line/Page: An input field with '64' and a dropdown showing '(5-128)'.
- CR/LF Mapping: A dropdown menu showing 'OFF'.

At the bottom right of the settings area are 'OK' and 'Cancel' buttons.

Item	Definition
Symbol Set	Specify the symbol set.
Typeface	Select the internal font ("Resident Font") or downloaded font ("Download Font").
Font Size	Specify the font size.
Line/Page	Specify the number of lines per page.
CR/LF Mapping	Specify the text data CR/LF replacement method.

## PS Setting


In Administrator mode of PageScope Web Connection, select the Print Setting tab - "PS Setting". Specify the following settings.

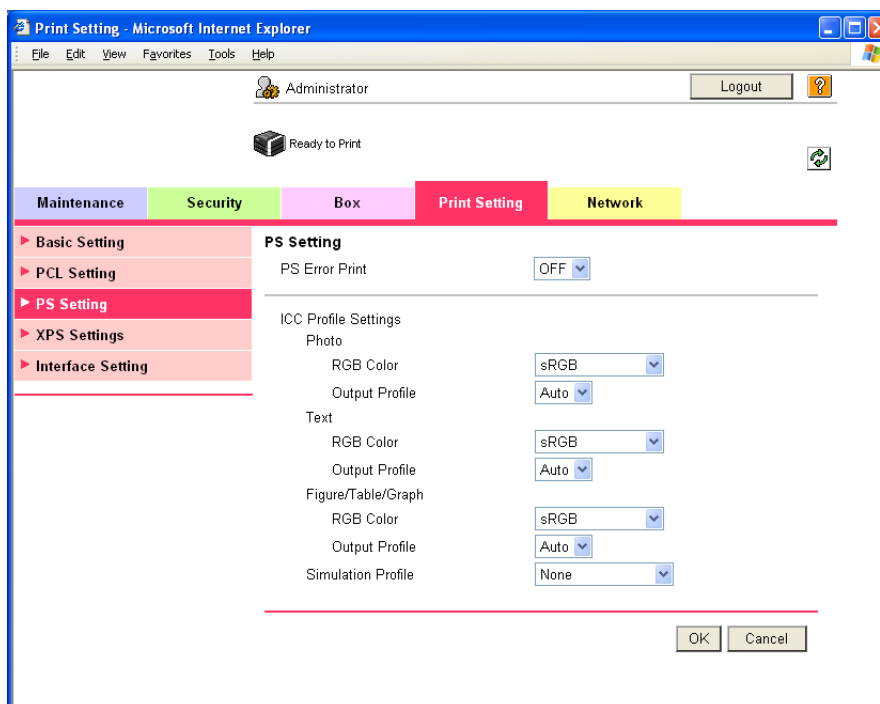

Item	Definition
PS Error Print	Specify whether to print error message when an error occurs during PS rasterization.
ICC Profile Settings	Specify the ICC profile.
Photo	Specify the default value of the profile when "Photo" is selected by the printer driver.
Text	Specify the default value of the profile when "Text" is selected by the printer driver.
Figure/Table/Graph	Specify the default value of the profile when "Figure/Table/Graph" is selected by the printer driver.
Simulation Profile	Specify the default value of the ICC profile for simulation.

## XPS Settings

In Administrator mode of PageScope Web Connection, select the Print Setting tab - "XPS Settings". Specify the following settings.

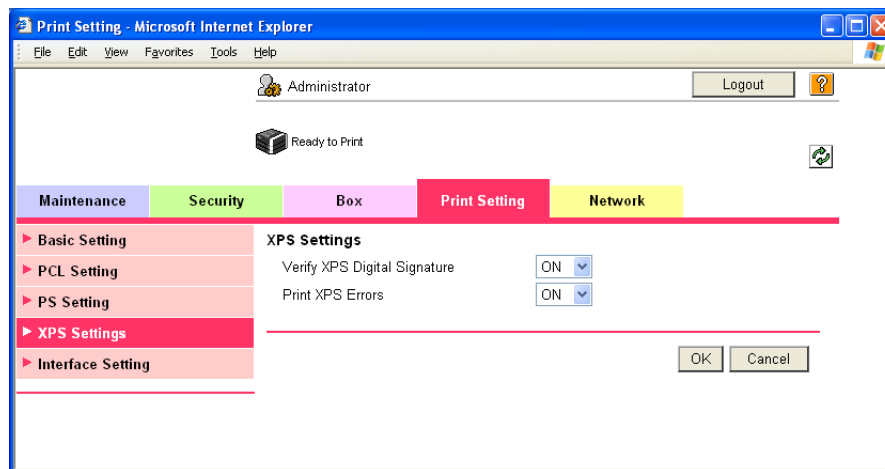


Item	Definition
Verify XPS Digital Signature	Specify whether to verify digital signature. When "ON" is selected, the document without a valid digital signature is not printed.
Print XPS Errors	Specify whether to print error message when an error occurs during XPS print.

### 9.24.3 Specifying the interface timeout

Specify the time period before the interfaced connection times out.

#### Interface Setting

In Administrator mode of PageScope Web Connection, select the Print Setting tab - "Interface Setting". Specify the following settings.

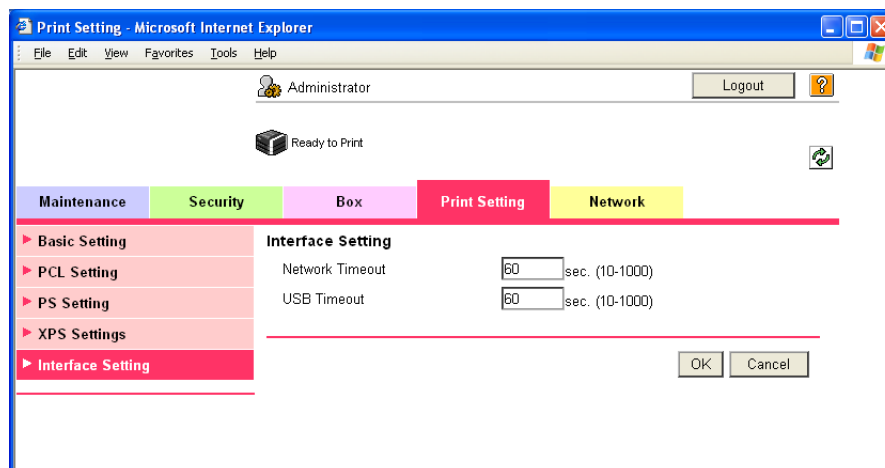

Item	Definition
Network Timeout	Specify the reception timeout for the network.
USB Timeout	Specify the USB timeout.



---

# 10


## Troubleshooting

## 10 Troubleshooting

### 10.1 When an error code appears

There are three types of errors; errors that can be cleared by opening/closing the front door, errors that can be cleared by turning the power off/on, and errors that cannot be cleared. Clear the error by following the on-screen instructions. If the error cannot be cleared or released, contact your service representative with the error code.


**Example: Error that can be cleared by turning the power off/on (C-0001)**

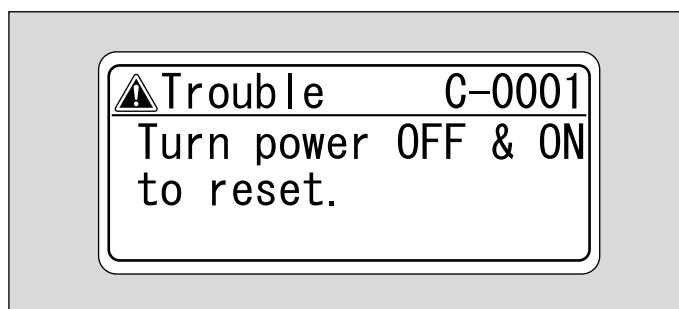

#### Reminder

*Since the machine may be damaged, contact the service representative according to the procedure described below as soon as the call service representative screen appears.*

- 1 Write down the trouble code (for example, C-0001) in the call service representative screen.
- 2 Use the power switch to turn off the machine.

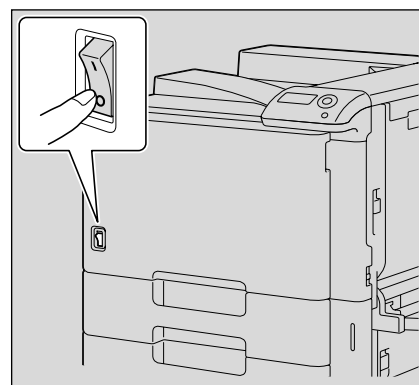


- 3 Unplug the machine.
- 4 Contact the service representative, and inform them of the trouble code.

## 10.2 When the message "Misfeed detected. XXXX Remove paper." appears

If a misfeed occurs during printing, the message "Misfeed detected. XXXX Remove paper." appears and the location of the misfeed is indicated in the screen. (misfeed location screen)


At this time, printing cannot continue until the misfeed is adequately cleared.

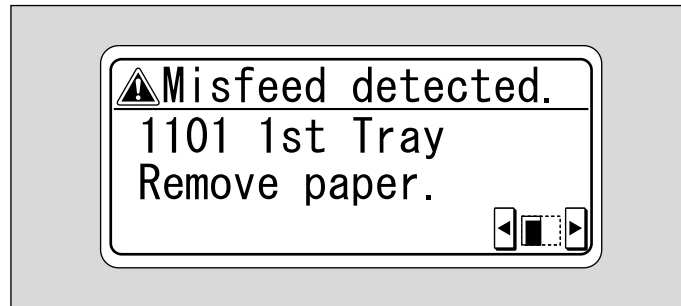


### Note

*The procedure for clearing misfed paper differs depending on where the misfeed occurs. Determine the misfeed location, and then clear the misfeed according to the appropriate procedure.*


## 10.2.1 Paper misfeed indications

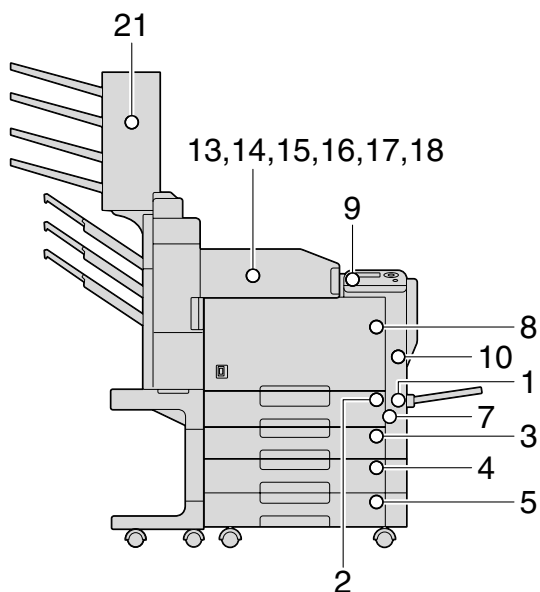

\*The illustration above shows the main unit with optional finisher FS-519, mailbin kit and the double paper feed cabinet installed.

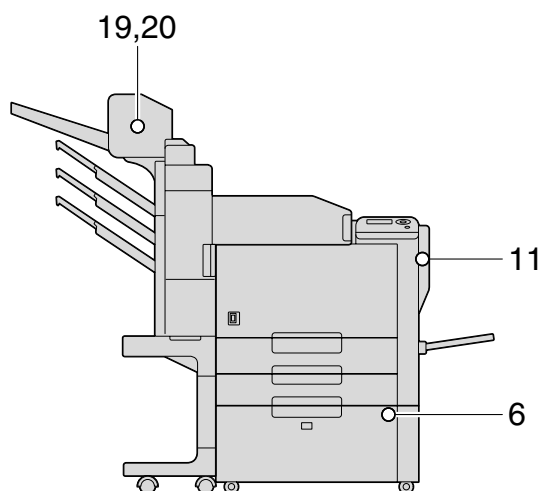

\*The illustration above shows optional finisher FS-519, saddle stitcher and the LCT installed.

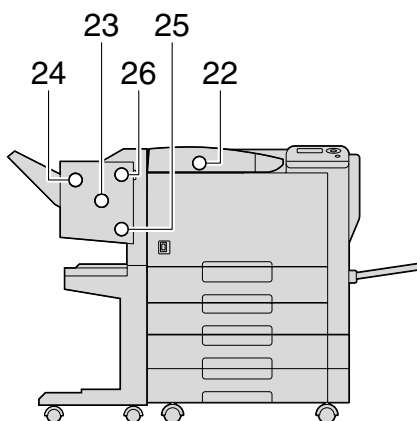

\*The illustration above shows optional finisher FS-609 and the double paper feed cabinet installed.

No.	Code	Description
1	1001	A paper misfeed in the bypass tray (p. 10-12)
2	1101	A paper misfeed in the tray 1 (p. 10-16)
3	1201	A paper misfeed in the tray 2 (p. 10-19)
4	1301	A paper misfeed in the tray 3 (p. 10-20)
5	1401	A paper misfeed in the tray 4 (p. 10-20)
6	1501	A paper misfeed in the tray LCT (p. 10-22)
7	2001	A paper misfeed in the paper transport section (p. 10-14)
8	3001	A paper misfeed in the main unit (p. 10-8)
9	3201	A paper misfeed in the fusing unit (p. 10-5)
10	9201	A paper misfeed in the main unit (p. 10-8)
11	9301	A paper misfeed in the automatic duplex unit (p. 10-11)
12	9901	A paper misfeed in the main unit (p. 10-8)
13	7216	A paper misfeed in the finisher FS-519 (p. 10-28)
14	7218	A paper misfeed in the finisher FS-519 (p. 10-28)
15	7221	A paper misfeed in the finisher FS-519 (p. 10-28)
16	7225	A paper misfeed in the finisher FS-519 (p. 10-28)
17	7243	A paper misfeed in the finisher FS-519 (p. 10-28)
18	7281	A paper misfeed in the finisher FS-519 (p. 10-28)
19	7284	A paper misfeed in the saddle stitcher (p. 10-32)
20	7285	A paper misfeed in the saddle stitcher (p. 10-32)
21	7290	A paper misfeed in the mailbin (p. 10-31)
22	7216	A paper misfeed in the finisher FS-609 (p. 10-34)
23	7218	A paper misfeed in the finisher FS-609 (p. 10-34)
24	7221	A paper misfeed in the finisher FS-609 (p. 10-34)
25	7225	A paper misfeed in the finisher FS-609 (p. 10-34)
26	7281	A paper misfeed in the finisher FS-609 (p. 10-34)


## 10.2.2 Clearing a paper misfeed in the fusing unit



### Detail


For details on the positions of paper misfeeds, refer to *"Paper misfeed indications" on page 10-4.*

- 1 Pull up the upper right-side door release lever, and then open the upper right-side door.

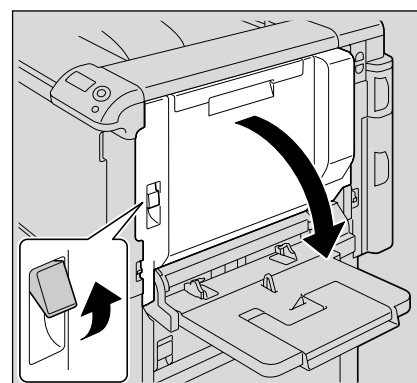


**2** Slowly remove any misfed paper from the fusing unit.


- Pull down any misfed paper from the fusing unit.
- Toner that did not pass through the fusing unit may get on your hands or clothes. Be extremely careful when removing the paper.

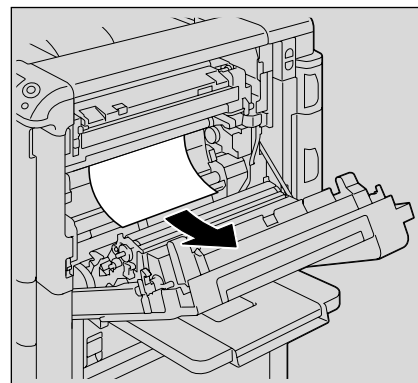


- If the paper cannot be removed by pulling it down, open the fusing unit upper cover, and then pull it up.

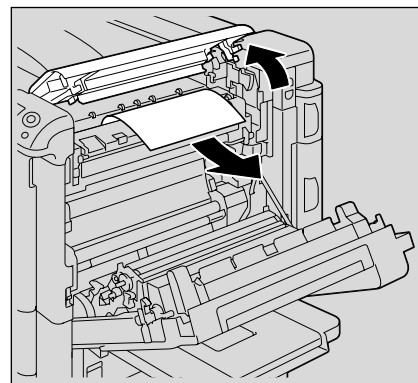

- If the paper is zigzag folded and jammed in the fusing unit, open the fusing cover, and then remove the paper.

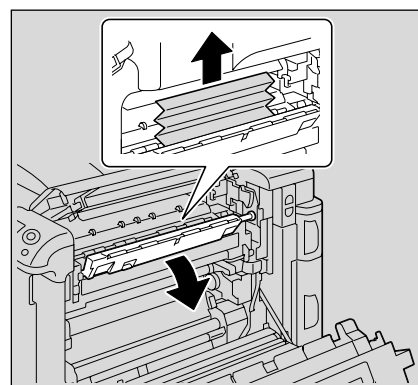


**3** Close the upper right-side door.

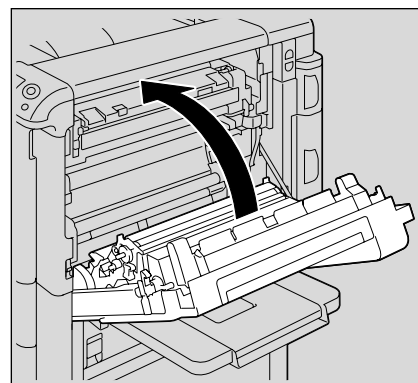

**4** Pull out the tray being used.

- 5 Remove any misfed paper.

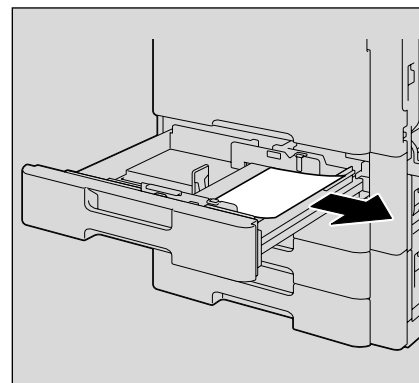


- 6 Close the tray.

## CAUTION

The area around the fusing unit is extremely hot.



→ Touching anything other than the indicated levers and dials may result in burns. If you get burnt, immediately cool the skin under cold water, and then seek professional medical attention.

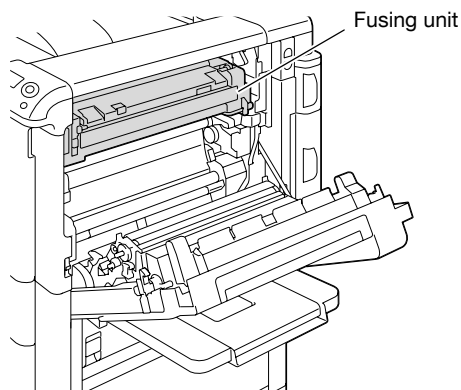

## CAUTION

### Precautions for toner spills

- Be careful not to spill toner inside the machine or get toner on your clothes or hands.
- If your hands become soiled with toner, immediately wash them with soap and water.
- If toner gets in your eyes, immediately flush them with water, and then seek professional medical attention.



### Reminder


*If the paper is misfed as described below, contact your service representative.*

*The paper is wrapped around the roller in the fusing unit.*

*The paper is folded or shredded by the roller in the fusing unit.*

*The paper that was removed tore and remains in the fusing unit.*

*Decreased image quality may result if the surface of the transfer belt or transfer roller is touched. Be careful not to touch the surface of the transfer belt or the transfer roller.*

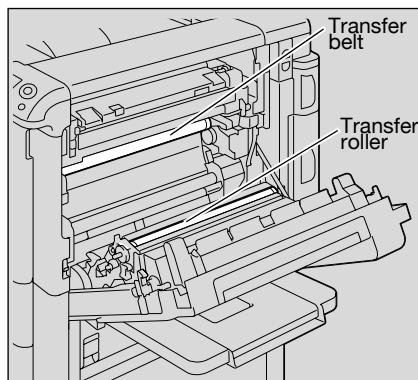

*Be careful not to touch the film with your hands.*


## 10.2.3 Clearing a paper misfeed in the main unit




### Detail

*For details on the positions of paper misfeeds, refer to "Paper misfeed indications" on page 10-4.*


- 1 Pull up the upper right-side door release lever, and then open the upper right-side door.

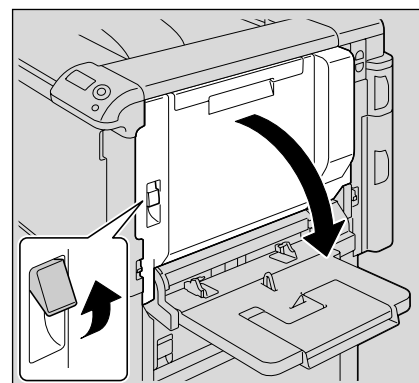


- 2 Slowly remove any misfed paper from the main unit.

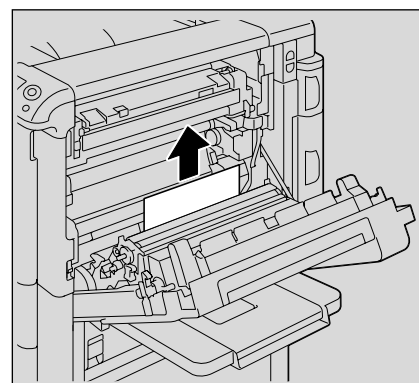


- 3** If the edge of the paper is around the timing roller, open the internal cover M1.

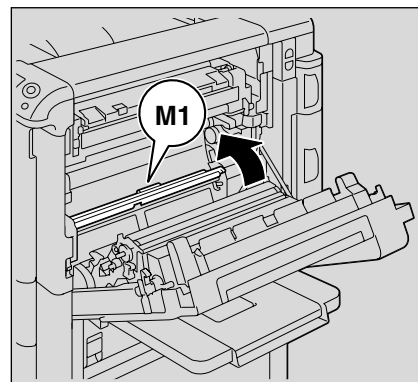

- 4** Slowly remove any misfed paper from the timing roller.
- Toner that did not pass through the fusing unit may get on your hands or clothes. Be extremely careful when removing the paper.

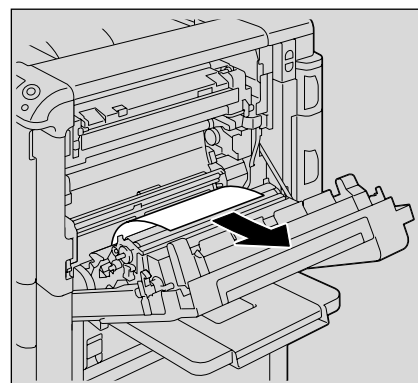


- 5** Close the upper right-side door.

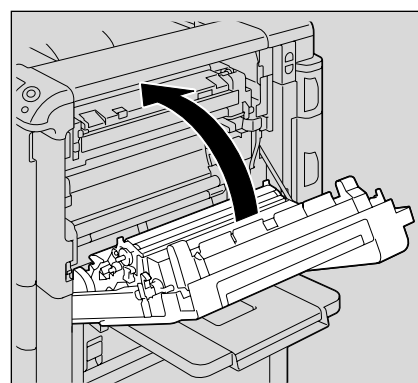

- 6** Pull out the tray being used.

- 7** Remove any misfed paper.

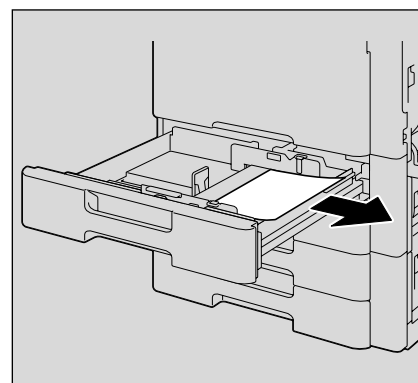


## 8 Close the tray.

### CAUTION

The area around the fusing unit is extremely hot.



→ Touching anything other than the indicated levers and dials may result in burns. If you get burnt, immediately cool the skin under cold water, and then seek professional medical attention.

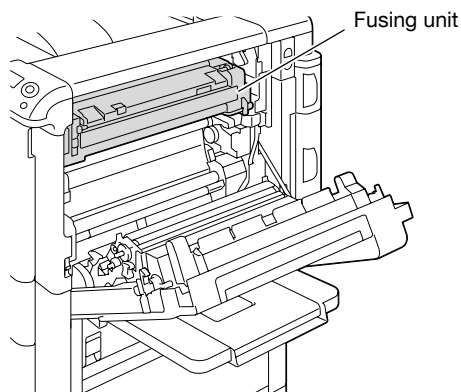

### CAUTION

#### Precautions for toner spills

- Be careful not to spill toner inside the machine or get toner on your service or hands.
- If your hands become soiled with toner, immediately wash them with soap and water.
- If toner gets in your eyes, immediately flush them with water, and then seek professional medical attention.




#### Reminder

*If the paper is misfed as described below, contact your service representative.*

*The paper is wrapped around the timing roller.*

*The paper is folded or shredded by the timing roller.*

*Decreased image quality may result if the surface of the transfer belt or transfer roller is touched. Be careful not to touch the surface of the transfer belt or the transfer roller.*

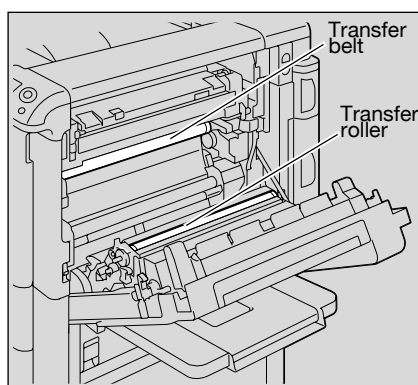

*Be careful not to touch the film with your hands.*


## 10.2.4 Clearing a paper misfeed in the automatic duplex unit




### Detail

For details on the positions of paper misfeeds, refer to *"Paper misfeed indications" on page 10-4.*


- 1 Open the door of the automatic duplex unit.

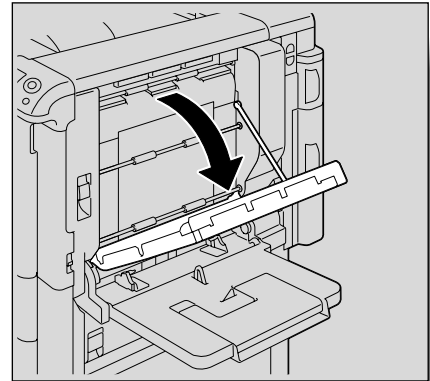

- 2 Slowly remove any misfed paper from the automatic duplex unit.

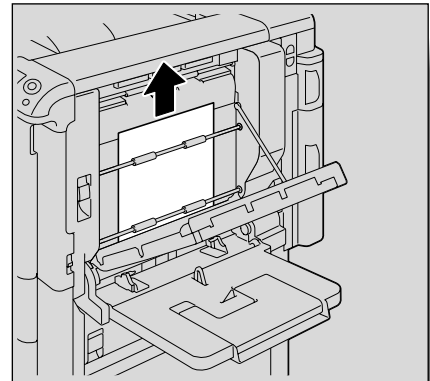


- 3 Close the door of the automatic duplex unit.

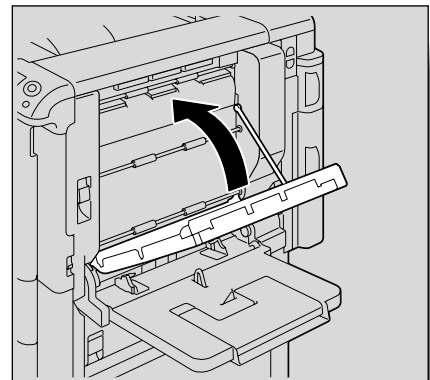

- 4 Pull out the tray being used.

- 5 Remove any misfed paper.

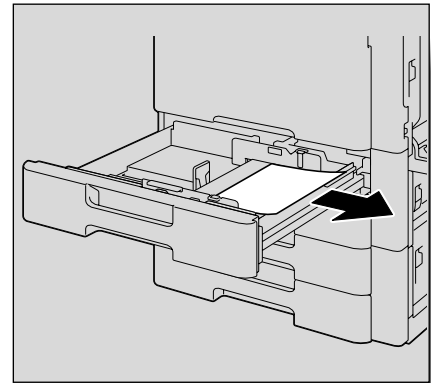

- 6 Close the tray.



**Reminder**

*Be careful not to touch the film with your hands.*


## 10.2.5 Clearing a paper misfeed in the bypass tray




**Detail**


*For details on the positions of paper misfeeds, refer to "Paper misfeed indications" on page 10-4.*

- 1 Remove the paper from the bypass tray.

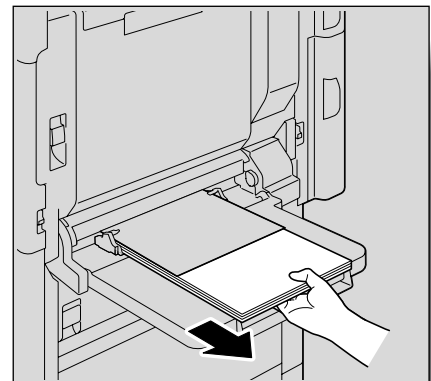

- 2 Open the upper right-side door.

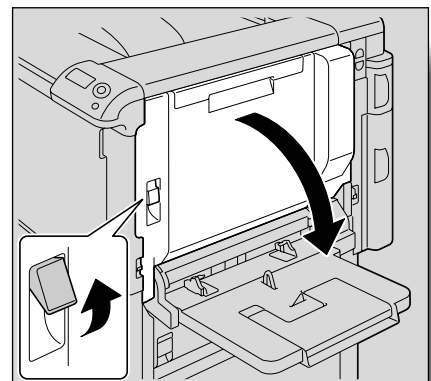

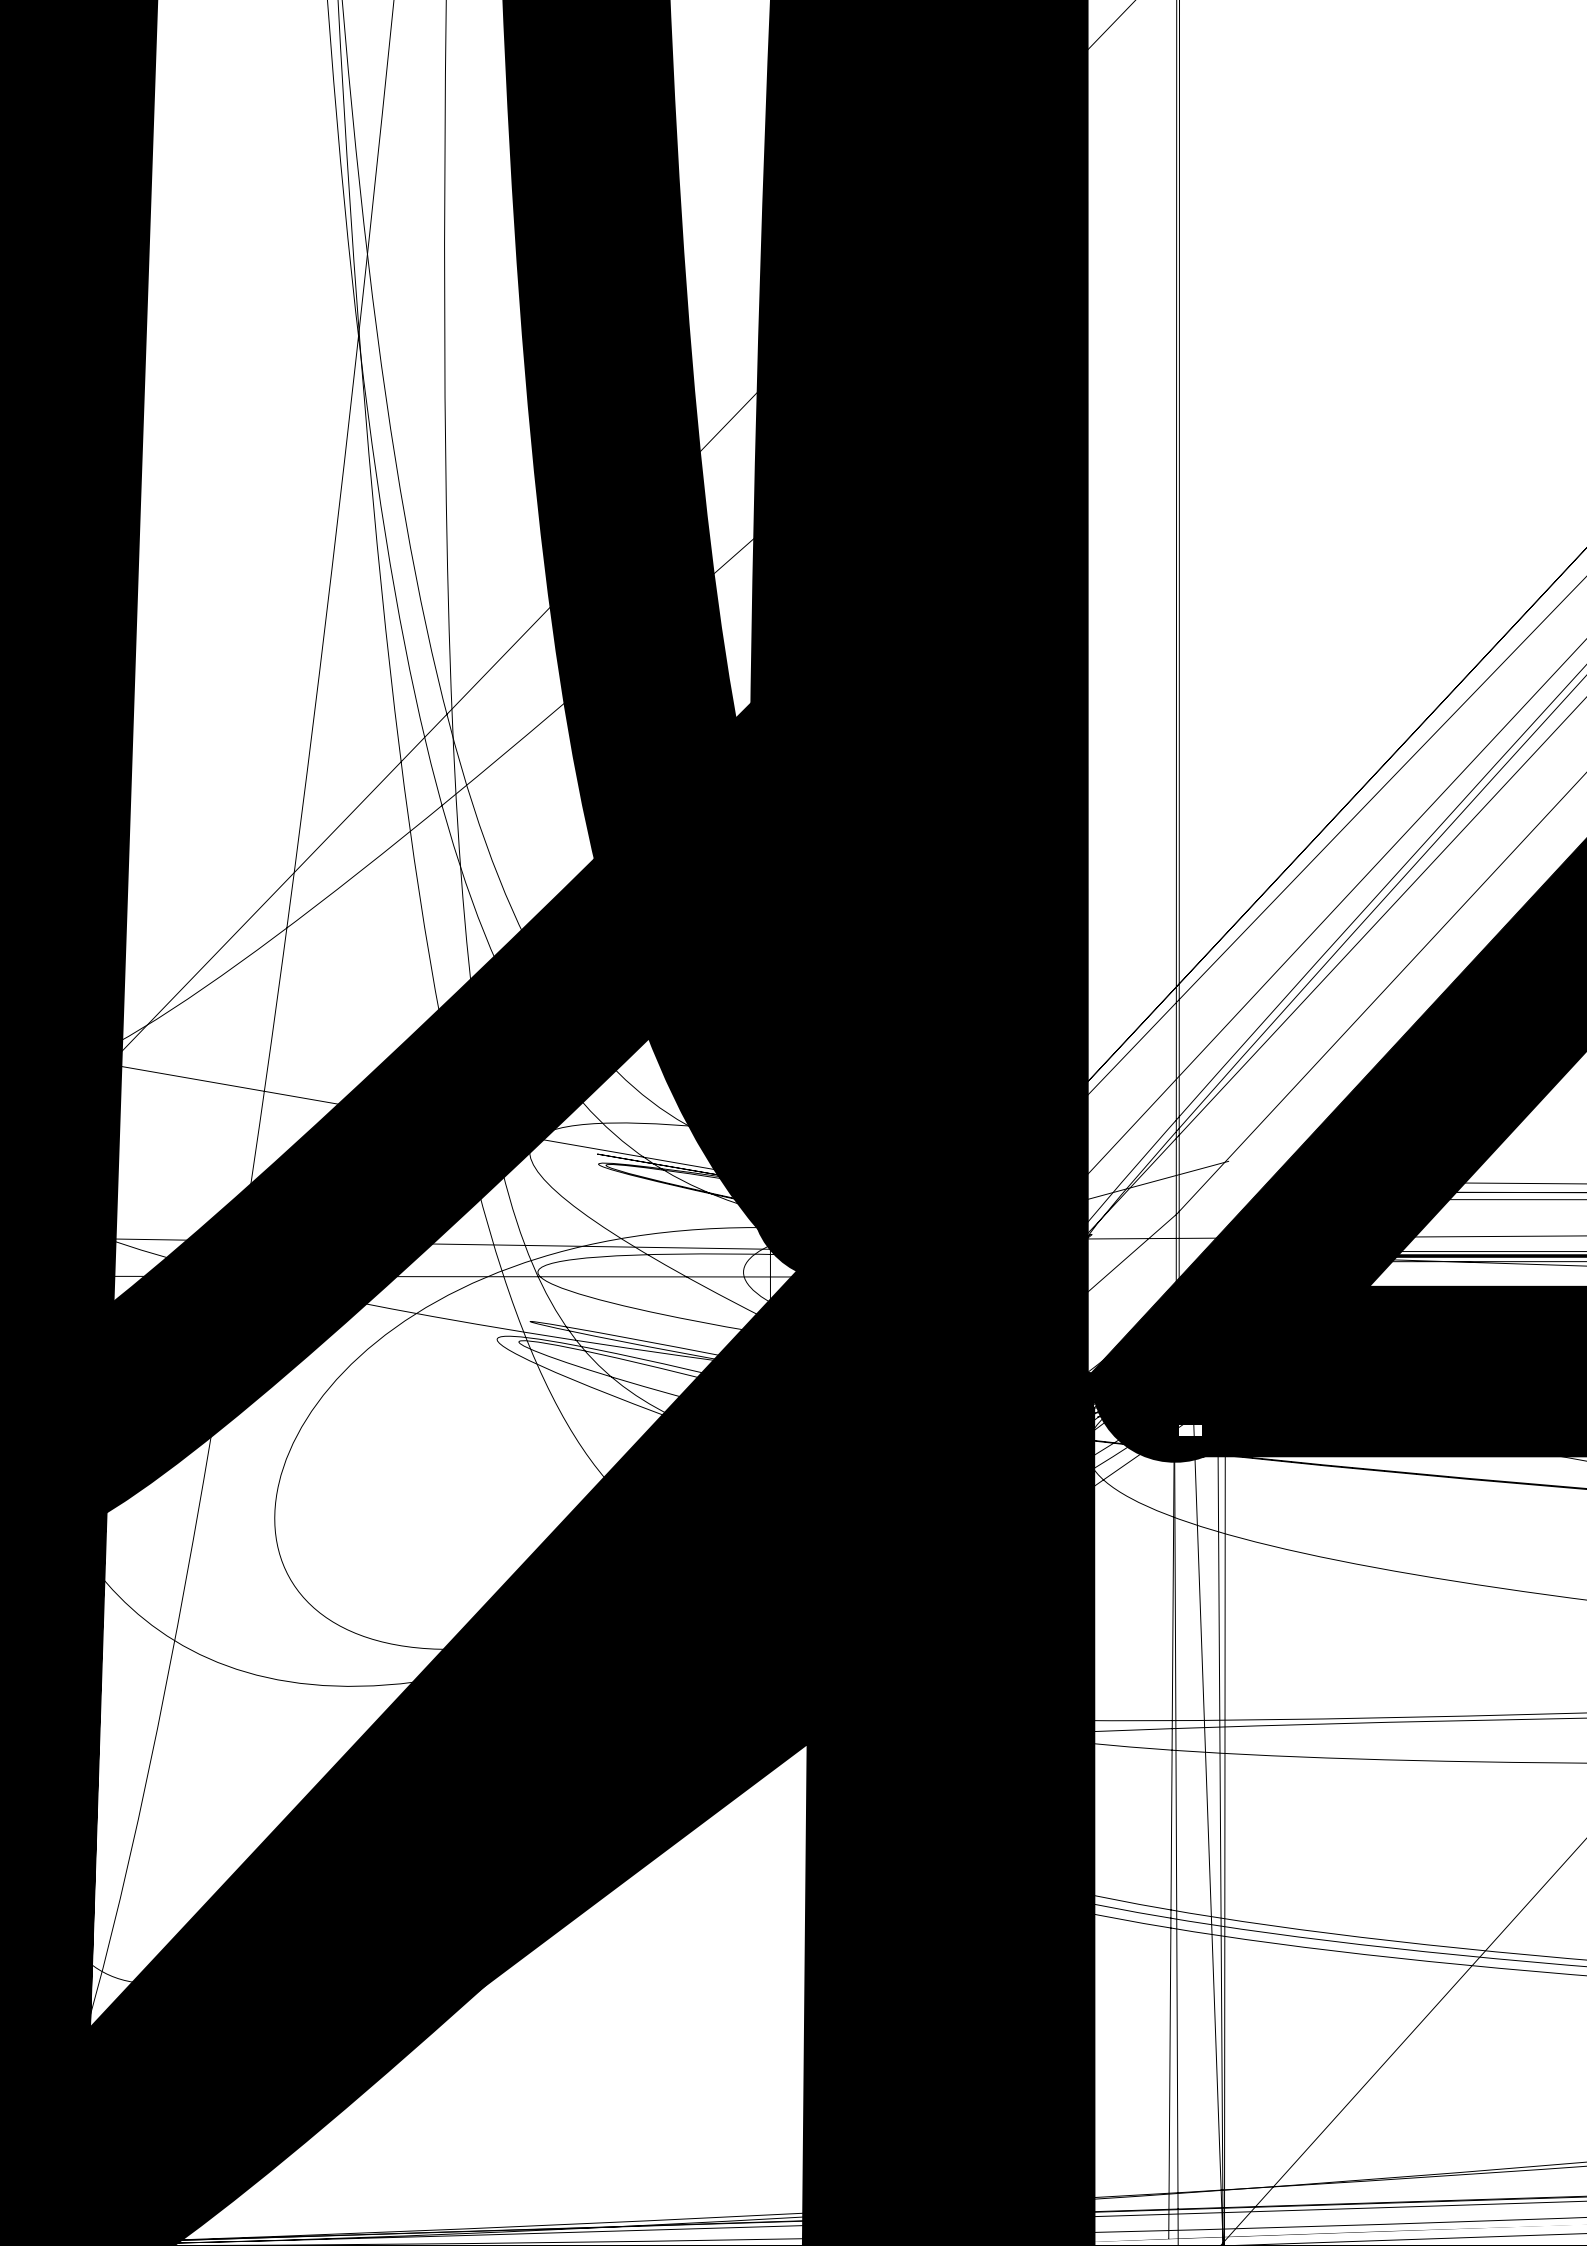


## ⚠ CAUTION

The area around the fusing unit is extremely hot.



→ Touching anything other than the indicated levers and dials may result in burns. If you get burnt, immediately cool the skin under cold water, and then seek professional medical attention.

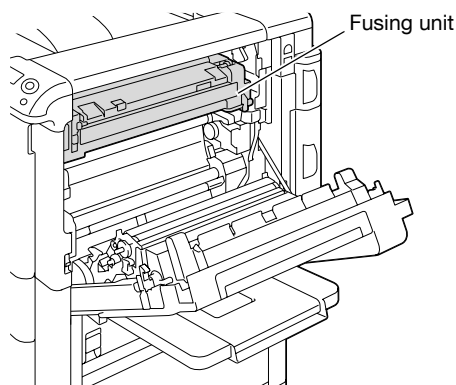

## ⚠ CAUTION


**Precautions for toner spills**

- Be careful not to spill toner inside the machine or get toner on your clothes or hands.
- If your hands become soiled with toner, immediately wash them with soap and water.
- If toner gets in your eyes, immediately flush them with water, and then seek professional medical attention.



### Reminder

*Decreased image quality may result if the surface of the transfer belt or transfer roller is touched. Be careful not to touch the surface of the transfer belt or the transfer roller.*

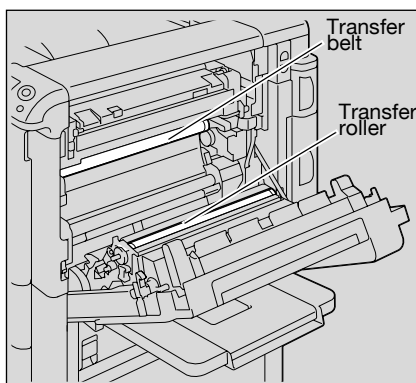


## 10.2.6 Clearing a paper misfeed in the paper transport section




### Detail

*For details on the positions of paper misfeeds, refer to "[Paper misfeed indications](#)" on page 10-4.*


- 1 Pull up the center right-side door release lever, and then open the center right-side door.

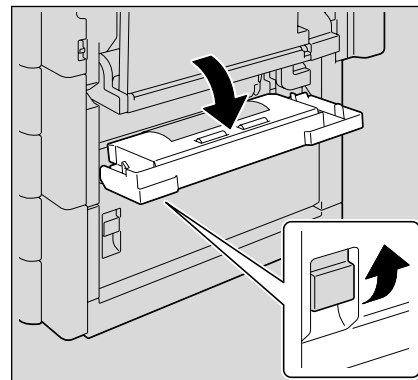


- 2 Carefully remove any misfed paper.

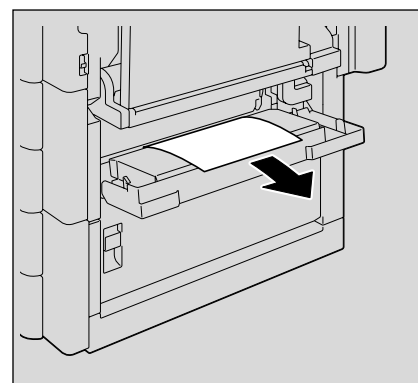


- 3 Close the center right-side door.

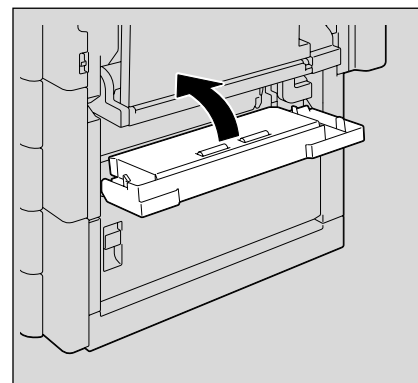

- 4 Pull out the tray being used.

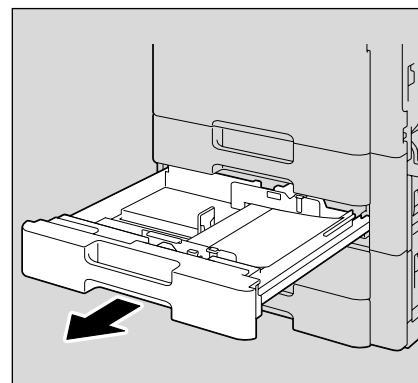

- 5 Remove any misfed paper.

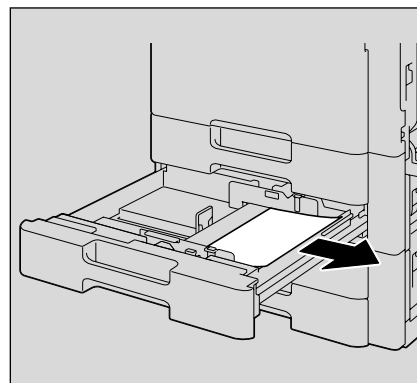

- 6 Close the tray.



**Reminder**

*Be careful not to touch the film with your hands.*


## 10.2.7 Clearing a paper misfeed in tray 1




**Detail**

*For details on the positions of paper misfeeds, refer to "Paper misfeed indications" on page 10-4.*


- 1 Pull up the upper right-side door release lever, and then open the upper right-side door.

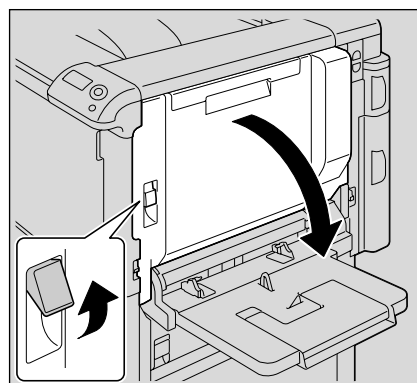


- 2 Open the internal cover M1.

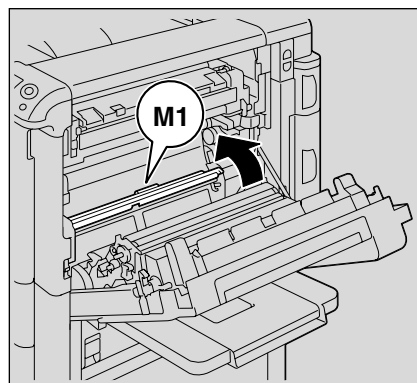


- 3 Carefully remove any misfed paper.

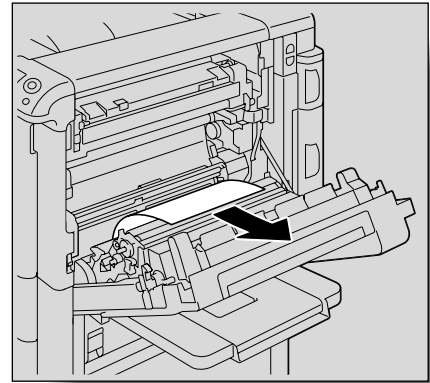


- 4 Close the upper right-side door.

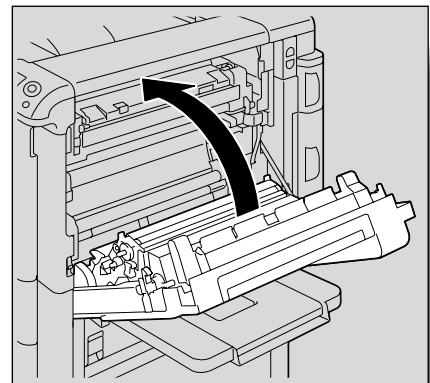

- 5 Pull out tray 1.

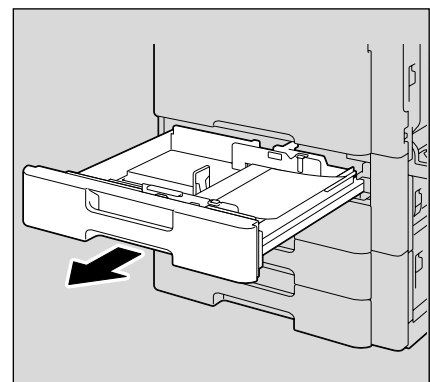

- 6 Remove any misfed paper.

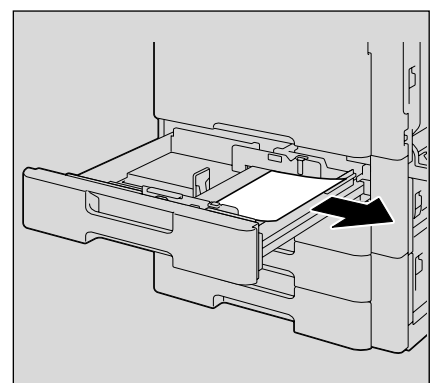

- 7 Close the tray.



**Precaution**


- Be
- If you
- If the

### 10.2.8 Clearing a paper misfeed in tray 2


**Detail**

For details on the positions of paper misfeeds, refer to *"Paper misfeed indications" on page 10-4.*


- 1 Pull up the center right-side door release lever, and then open the center right-side door.

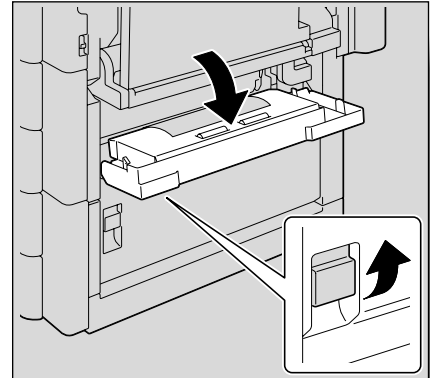


- 2 Carefully remove any misfed paper.

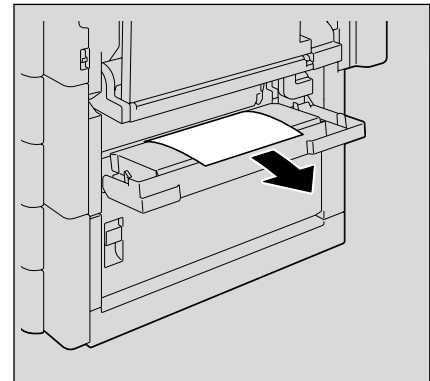


- 3 Close the center right-side door.

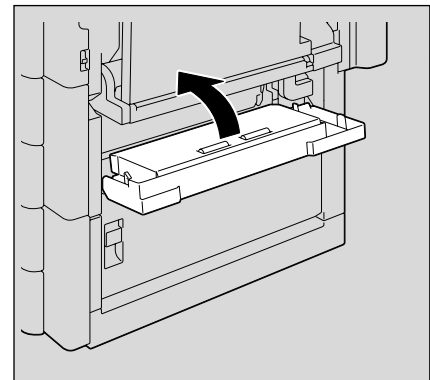

- 4 Pull out tray 2.

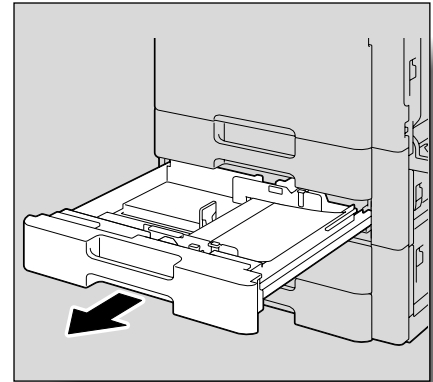

- 5 Remove any misfed paper.

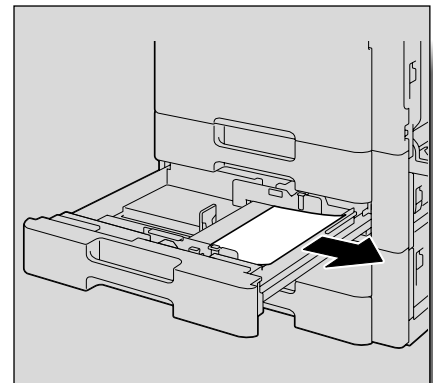

- 6 Close the tray.



**Reminder**

*Be careful not to touch the film with your hands.*


### 10.2.9 Clearing a paper misfeed in paper feed cabinet (Tray 3/4)




**Detail**

*For details on the positions of paper misfeeds, refer to "Paper misfeed indications" on page 10-4.*


- 1 Pull up the lower right-side door release lever, and then open the lower right-side door.

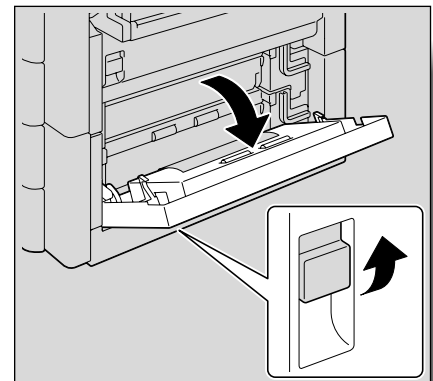


- 2 Carefully remove any misfed paper.

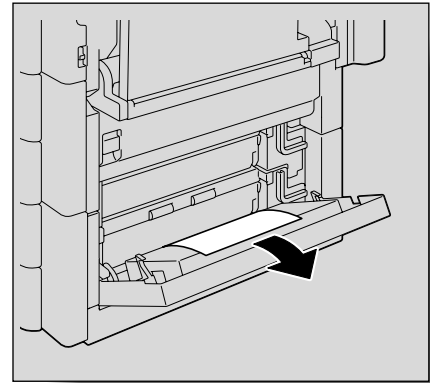


- 3 Close the lower right-side door.

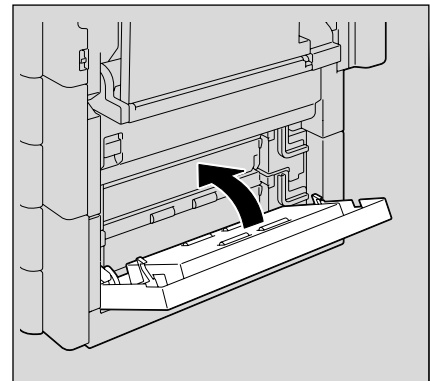

- 4 Pull out paper tray.

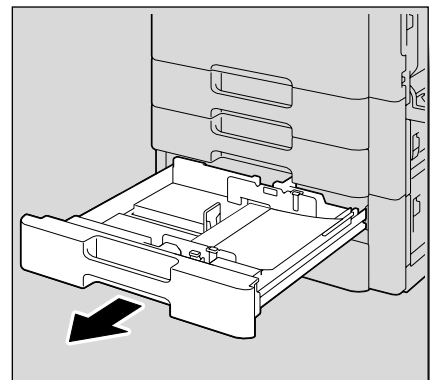

- 5 Remove any misfed paper.

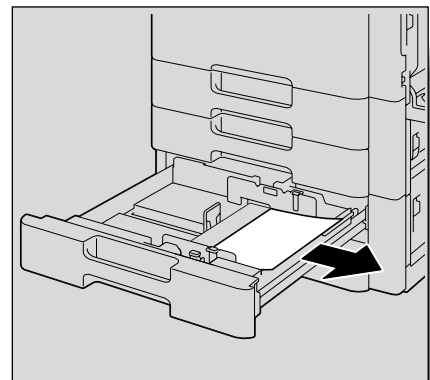

- 6 Close the tray.



**Reminder**

*Be careful not to touch the film with your hands.*


## 10.2.10 Clearing a paper misfeed in the LCT




**Detail**

*For details on the positions of paper misfeeds, refer to "Paper misfeed indications" on page 10-4.*


- 1 Pull up the lower right-side door release lever, and then open the lower right-side door.

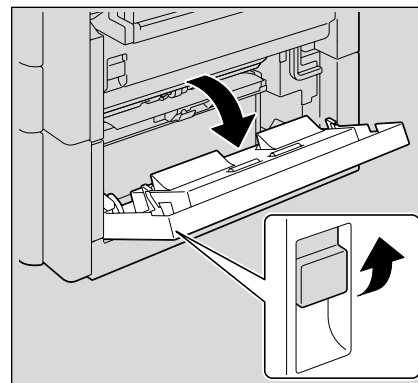


- 2 Carefully remove any misfed paper.

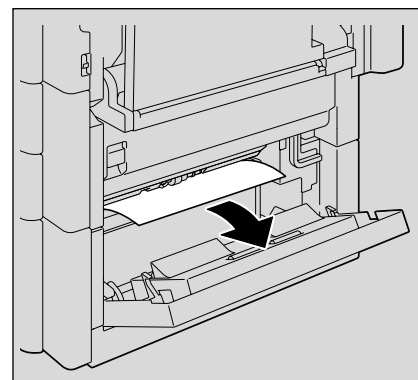


- 3 Close the lower right-side door.

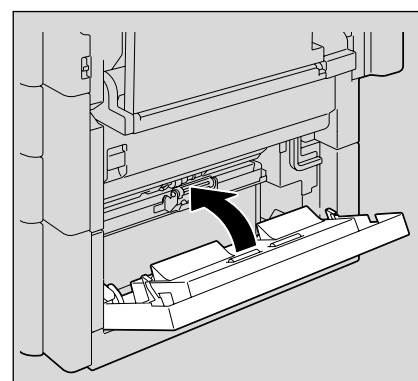

- 4 Press the tray release button, and then pull out the LCT.

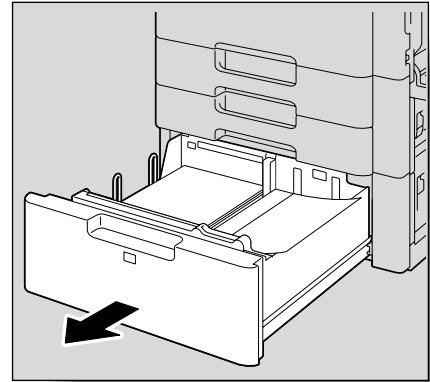

- 5 Remove any misfed paper.

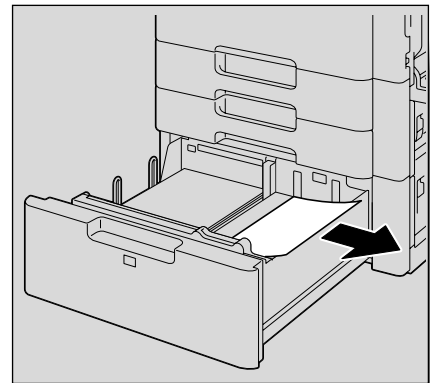

- 6 Close the LCT.




**Reminder**



*Be careful not to touch the film with your hands.*

### 10.2.11 To clear a banner paper misfeed


- 1 Pull up the upper right-side door release lever, and then open the upper right-side door.

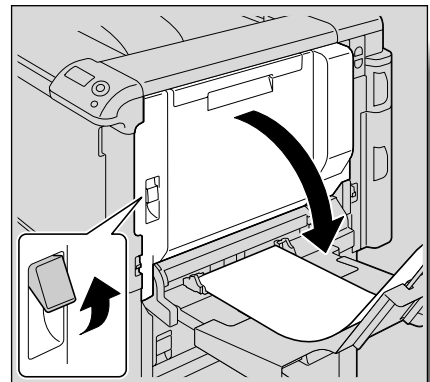


h u/  
y mis

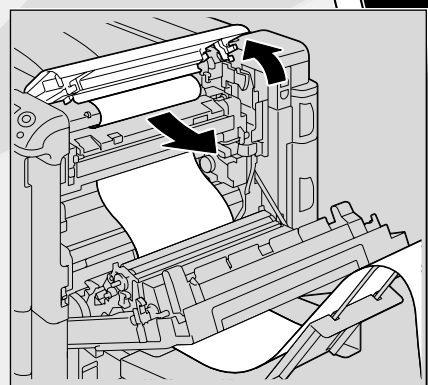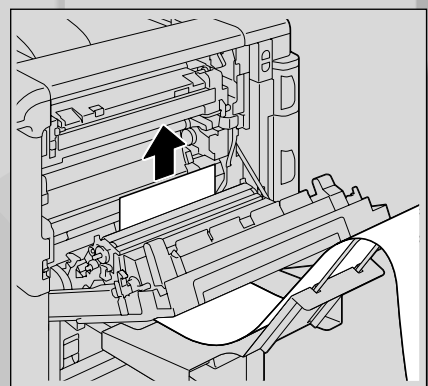


- 5 Open the fusing cover M2.

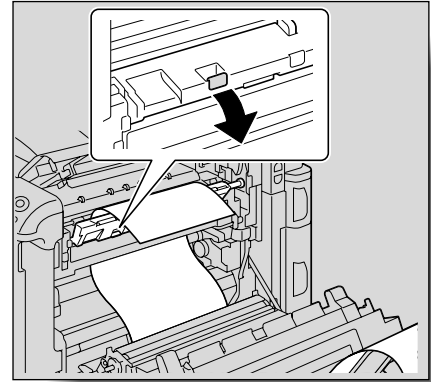


- 6 Remove any misfed paper.

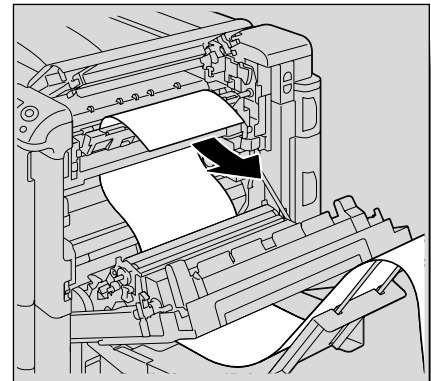


- 7 Remove any paper caught in the fusing unit.

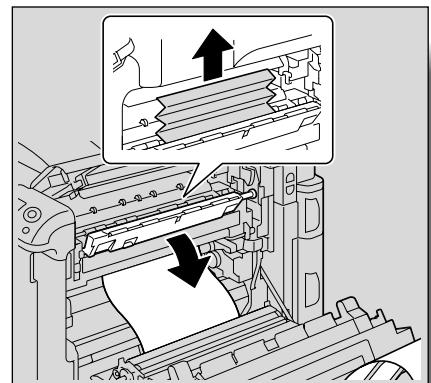


- 8 Close the fusing cover M2.

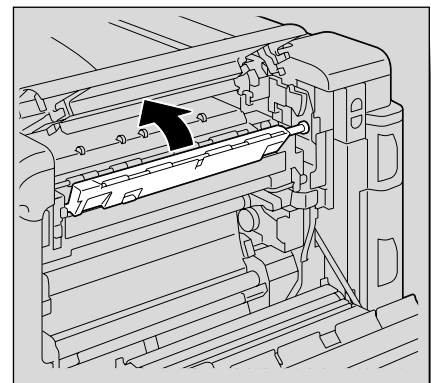

- 9 Close the fusing unit upper cover.

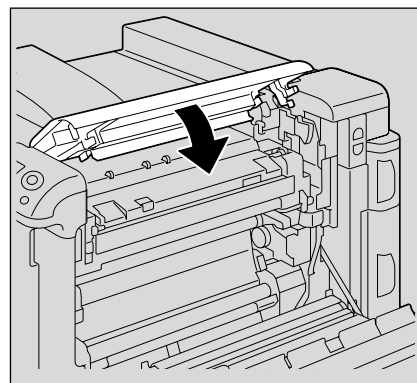

- 10 Close the upper right-side door.

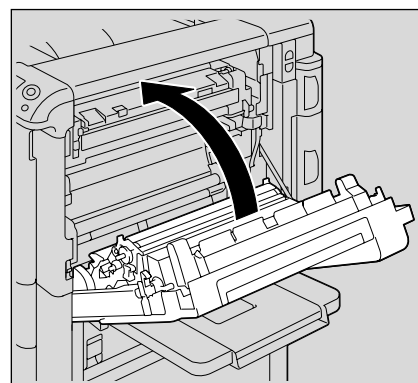


## ⚠ CAUTION

The area around the fusing unit is extremely hot.



→ Touching anything other than the indicated levers and dials may result in burns. If you get burnt, immediately cool the skin under cold water, and then seek professional medical attention.

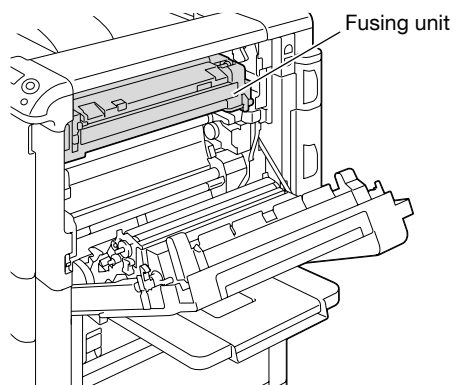

## ⚠ CAUTION

### Precautions for toner spills

- Be careful not to spill toner inside the machine or get toner on your clothes or hands.
- If your hands become soiled with toner, immediately wash them with soap and water.
- If toner gets in your eyes, immediately flush them with water, and then seek professional medical attention.



### Reminder


*If the paper is misfed as described below, contact your service representative.*



*The paper is wrapped around the timing roller.*

*The paper is folded or shredded by the timing roller.*


*Decreased image quality may result if the surface of the transfer belt or the transfer roller is touched.*

*Be careful not to touch the surface of the transfer belt or the transfer roller.*

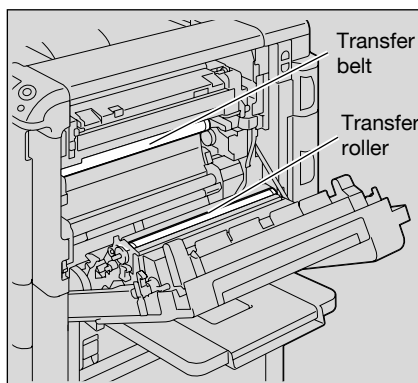


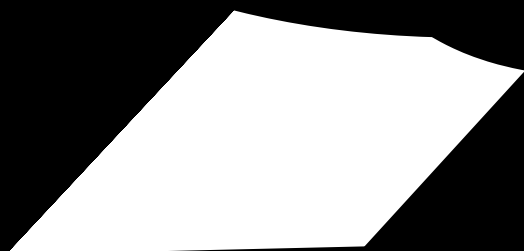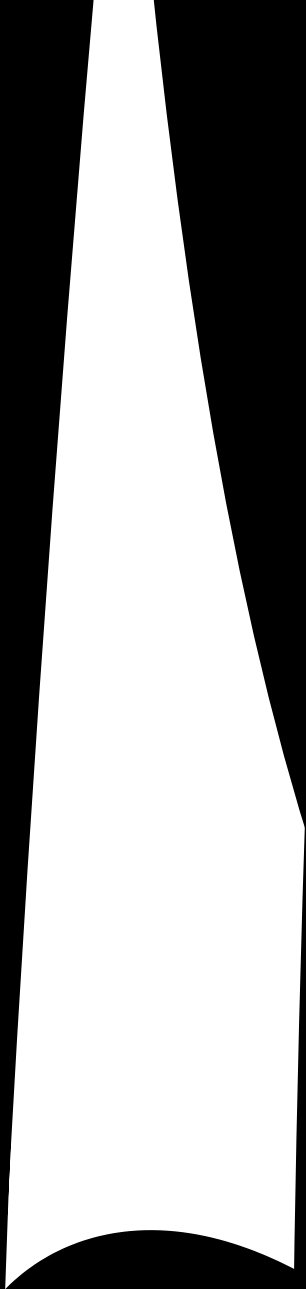


- 4 Raise lever FN1, turn dial FN2, and then remove any paper.

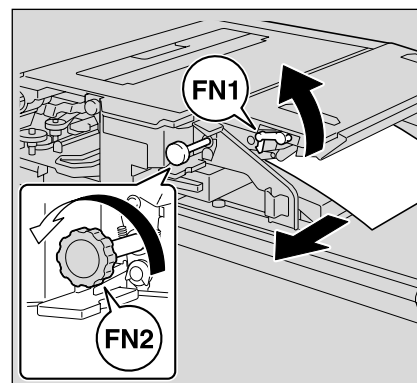

- 5 Lower guide FN3, and then remove any paper.

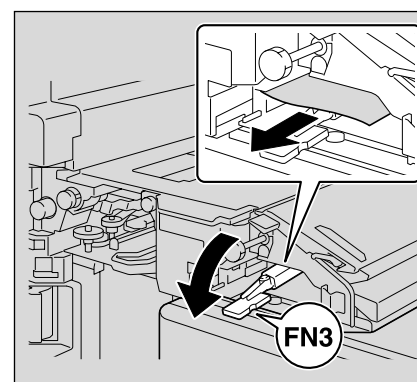


- If the punch kit is installed, pull out the punch scrap box FN3.1.

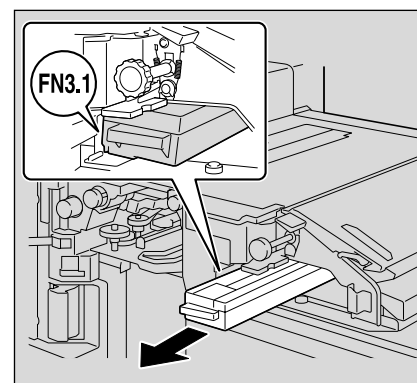


- 6 Return guide FN3 to its original position.
  - If the punch kit is installed, insert the punch scrap box FN3.1 into its original position.

- 7 Turn dial FN4 to feed the paper, open the transport unit cover, and then remove any paper.

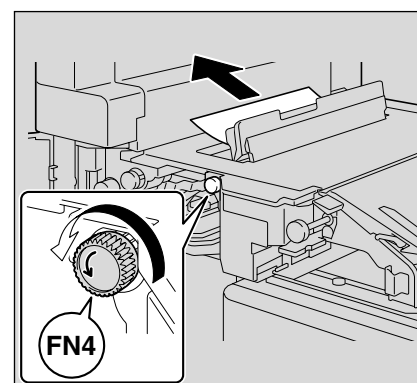



- 8 Turn dial FN5 or dial FN6, and then remove any paper.

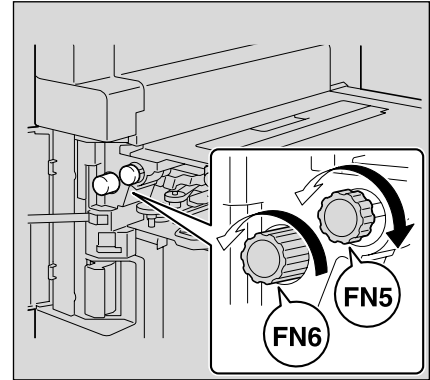

- 9 Close the front door.

- 10 Return the finisher to its original position.

- When returning the finisher to its original position, do not grab the handle on the front door, the control panel, the mail bins, or the saddle stitcher.

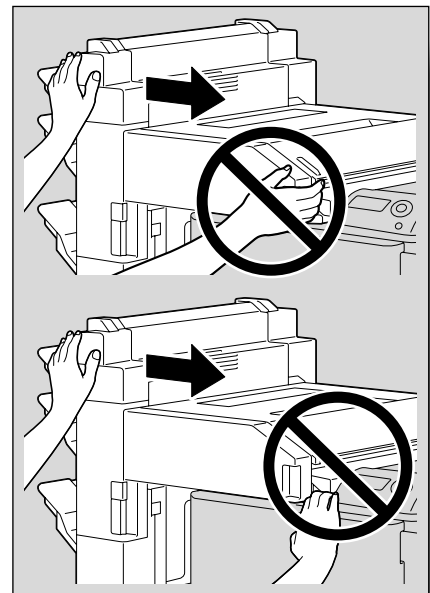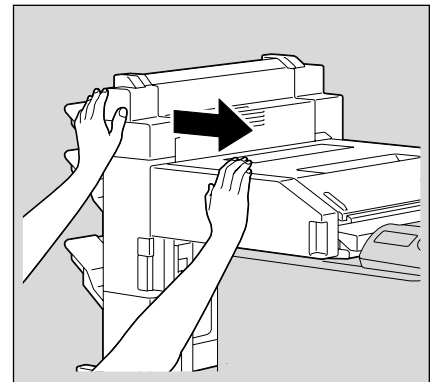


### 10.2.13 Clearing a paper misfeed in the mailbin


**Detail**

For details on the positions of paper misfeeds, refer to *"Paper misfeed indications" on page 10-4.*


- 1 Open the front door.

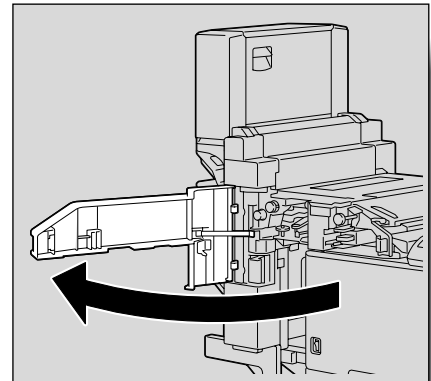


- 2 Turn dial FN5 or dial FN6 to feed out the paper.

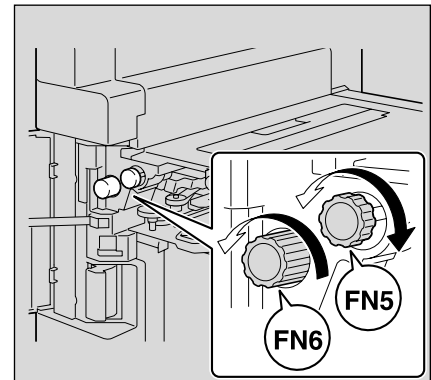


- 3 While pressing down lever FN7, remove any paper.

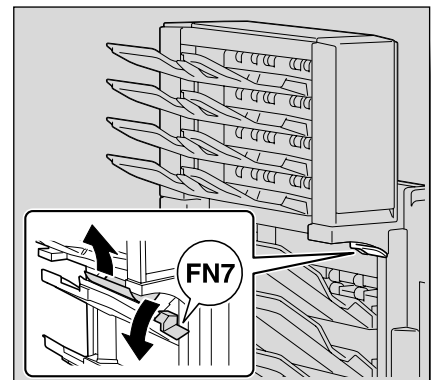

- 4 Pull lever FN8 to open the misfeed-clearing door.

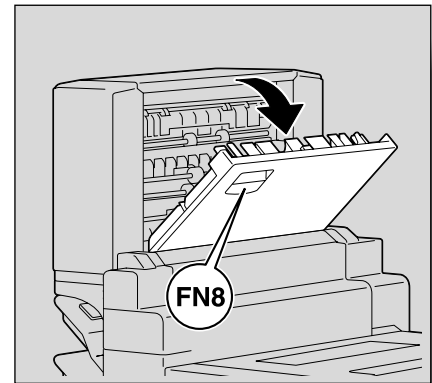

- 5 Remove any paper in the mailbin.

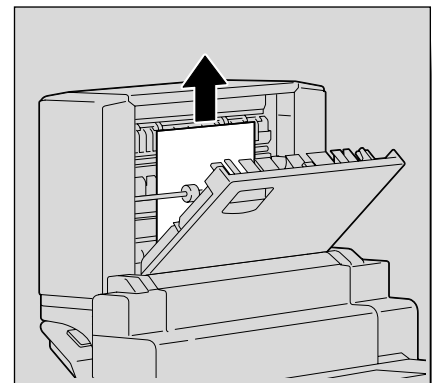

- 6 Close the misfeed-clearing door.

- 7 Close the front door.


#### 10.2.14 Clearing a paper misfeed in the saddle stitcher




##### Detail

For details on the positions of paper misfeeds, refer to *"Paper misfeed indications" on page 10-4*.


- 1 Open the front door.

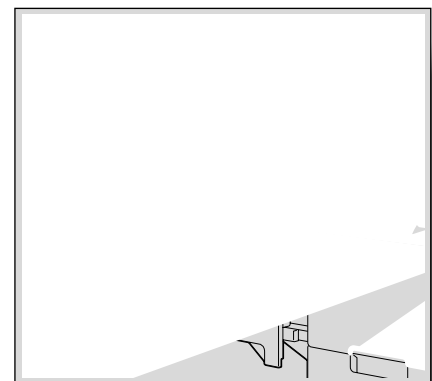


- 2 Turn dial FN5 or dial FN6 to feed out the paper.

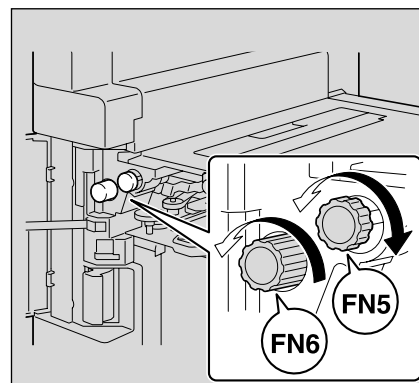

- 3 Remove all paper from the finishing tray.

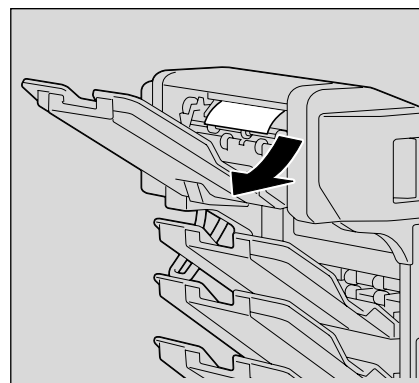

- 4 Open the misfeed-clearing door, and then remove any paper.

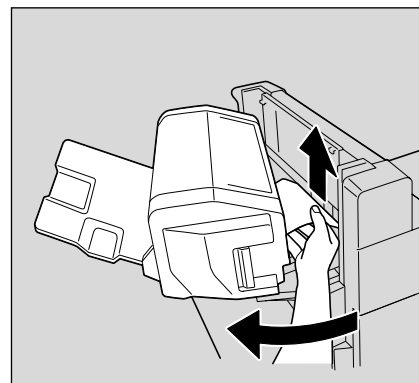


- 5 Close the misfeed-clearing door.


- 6 Close the front door.

## 10.2.15 To clear a paper misfeed in finisher FS-609

- 1 Slide the finisher away from the machine.

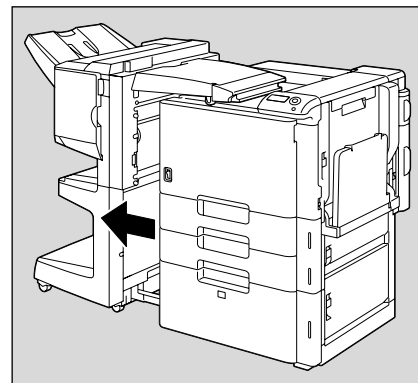


- 2 Open the horizontal transport unit cover, and then remove any misfed paper.

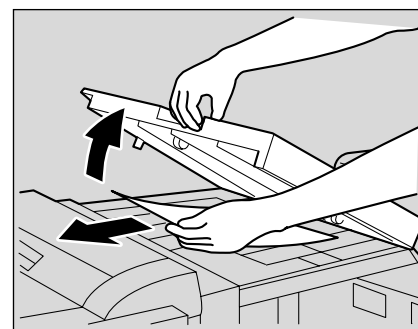

- 3 Close the horizontal transport unit cover.


- 4 Open the front door of the finisher.

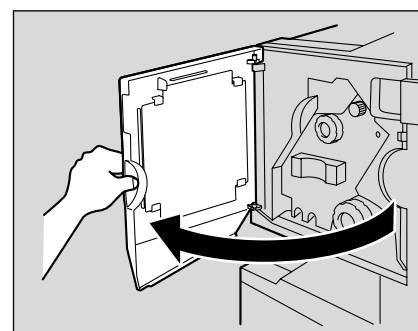


- 5 Turn misfeed-clearing dial 1 clockwise until the removal indicator is completely blue.

? What should be done if misfeed-clearing dial 1 is turned too far?

→ Turn the misfeed-clearing dial 1 counterclockwise to finely adjust it.

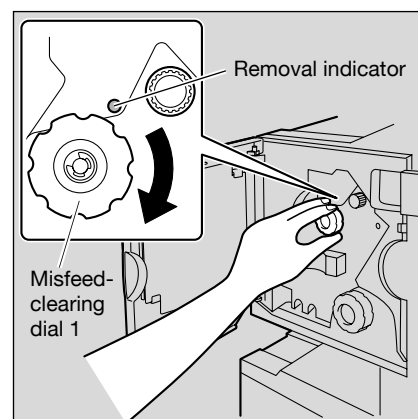


- 6 Open the upper cover of the finisher, and then remove any paper in the feed section.

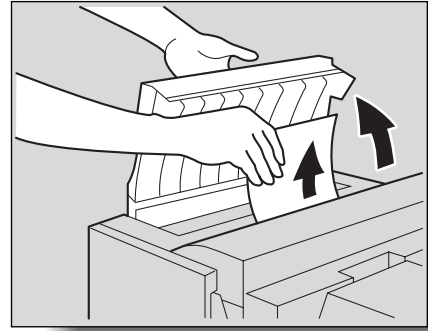


- 7 Close the upper cover.


- 8 Remove all paper fed into the output tray 1.

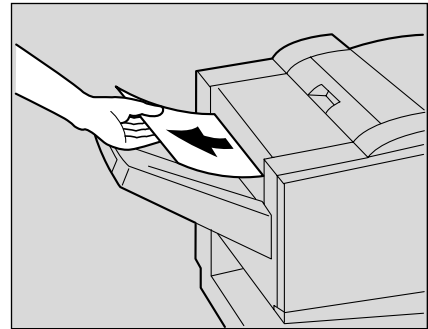


- 9 Open the misfeed-clearing guide for the finisher, and then remove any misfed paper.

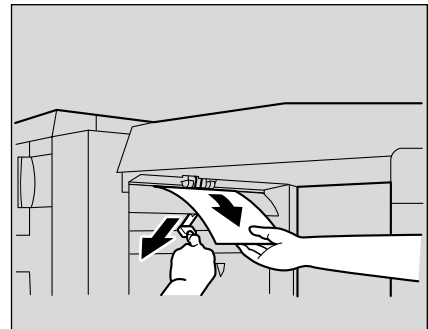


- 10 Open the right-side door, and then remove any misfed paper in the transport section.

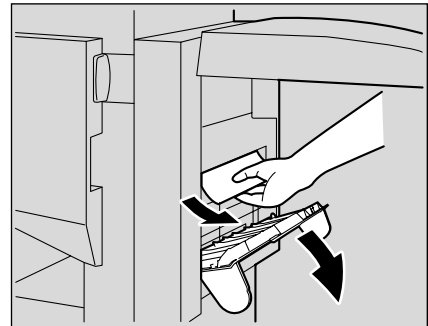

- 11** If the paper could not be removed in step 10, turn the misfeed-clearing dial in the folding section clockwise. Feed the paper into the output tray 2, and then remove it.

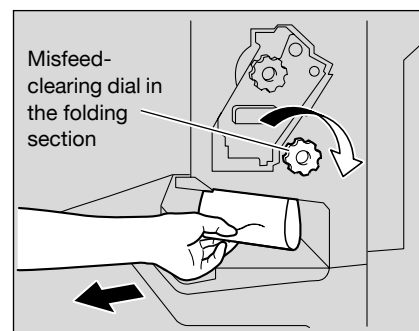

- 12** Close the front door of the finisher.

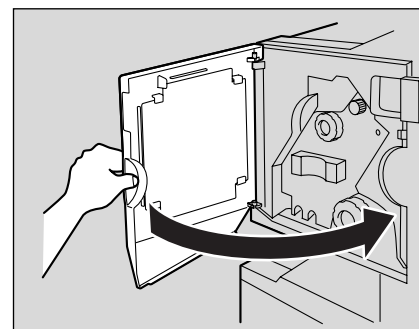

- 13** Slide the finisher back against the machine.



**Reminder**

*If the message "Misfeed detected." appears, be sure to open the front door, turn the misfeed-clearing dial until the removal indicator is completely blue, and then remove the paper. If the paper is removed with too much force, the finisher may be damaged.*


*Do not remove paper remaining in the transfer unit with too much force, otherwise the folding unit may be damaged.*

*Be careful that your fingers are not pinched when the front door is closed.*

*For details on the positions of paper misfeeds, refer to **"Paper misfeed indications" on page 10-4.***

### 10.3 When the message "Staple Jam Detection" appears

If a staple jam occurs in the finisher, the message shown below appears.

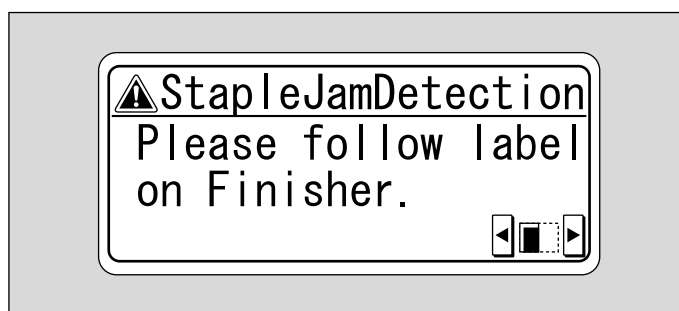

#### Reminder

*Be careful when clearing jammed staples since injuries may result.*


#### 10.3.1 Clearing jammed staples in finisher FS-519




#### Detail

*For details on clearing misfed paper in the finisher, refer to "Clearing a paper misfeed in finisher FS-519" on page 10-28.*


- 1 Remove all paper from the finisher.
- 2 Open the front door.

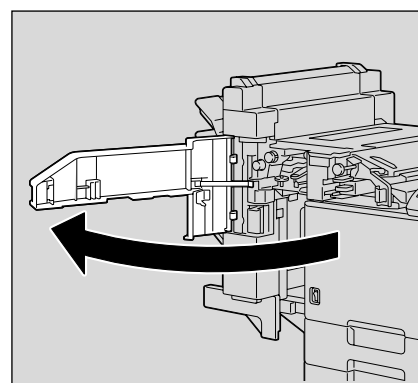


- 3 Turn the dial to the left to move the stapler toward the front.

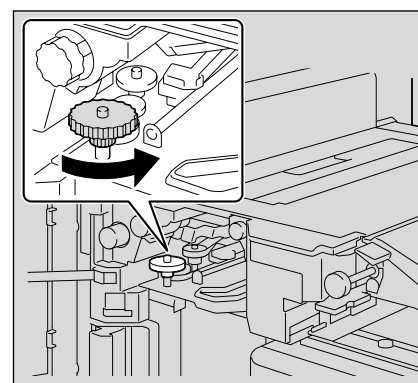

- 4 Remove the staple cartridge holder.
  - Pull the staple cartridge holder toward you to remove it.

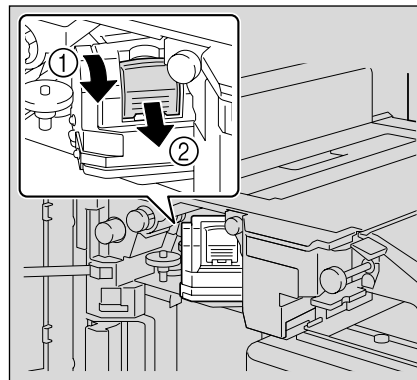


- 5 Raise the shutter of the staple cartridge holder, and then remove one sheet of staples.

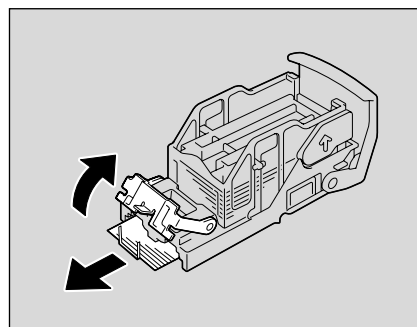

- 6 Return the shutter of the staple cartridge holder to its original position.

- 7 Insert the staple cartridge holder, sliding it along the rails in the compartment.
  - Check that the staple cartridge holder is securely inserted as far as possible.

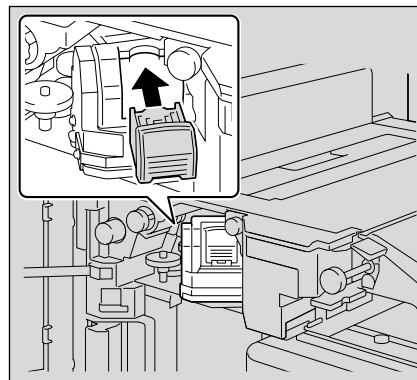

- 8 Close the front door.



**Reminder**

*If stapling still cannot be resumed, even after performing the above procedure, contact your service representative.*

### 10.3.2 Clearing jammed staples in the saddle stitcher




#### Detail


For details on clearing misfed paper in the finisher, refer to *"Clearing a paper misfeed in finisher FS-519" on page 10-28*.

For details on clearing misfed paper in the saddle stitcher, refer to *"Clearing a paper misfeed in the saddle stitcher" on page 10-32*.


- 1 Remove all paper from the finisher.
- 2 Raise the output tray, and then push down the staple cartridge holder to remove it.

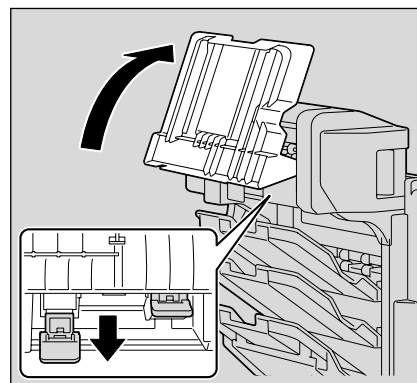

- 3 Raise the shutter of the staple cartridge holder, and then remove one sheet of staples.

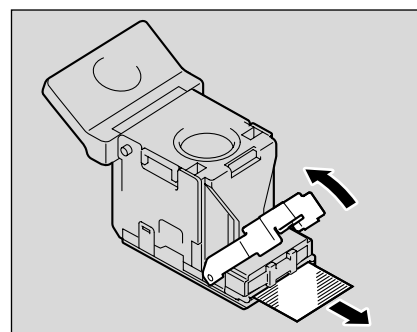

- 4 Return the shutter of the staple cartridge holder to its original position.
- 5 Insert the staple cartridge holder, and then push it up until it locks into place.
  - When inserting the staple cartridge holder, be sure to insert it so that it faces the correct direction.

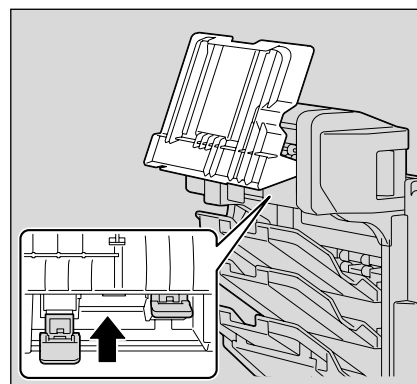

- 6 Return the output tray to its original position.

### 10.3.3 To clear jammed staples in finisher FS-609



#### Reminder


*If the following procedure is not followed and the paper is removed with too much force, the stapler unit may be damaged.*




#### Detail

*For details on clearing misfed paper in the finisher, refer to "To clear a paper misfeed in finisher FS-609" on page 10-34.*

- 1 Remove all paper from the finisher.
- 2 Open the front door of the finisher.

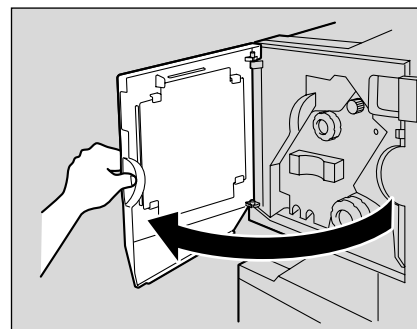


- 3 Slowly pull out the stapler unit as far as possible.

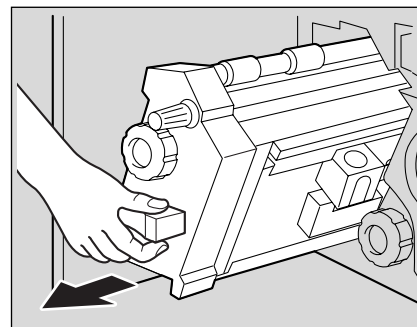


- 4 Turn misfeed-clearing dial 2 clockwise until the cartridge removal indicators are aligned. The staple cartridge moves to a position from where it can be removed.

? What should be done if misfeed-clearing dial 2 is turned too far?


→ Turn the misfeed-clearing dial 2 counterclockwise to adjust it so the cartridge removal indicators are aligned.

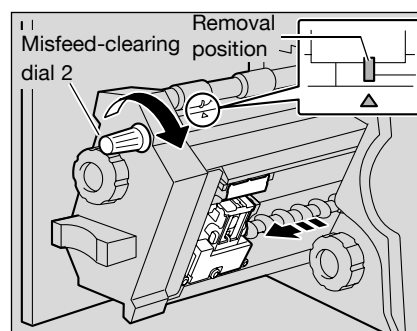

- 5** Grasp both sides of the staple cartridge holder, lift it up, and then pull it out.

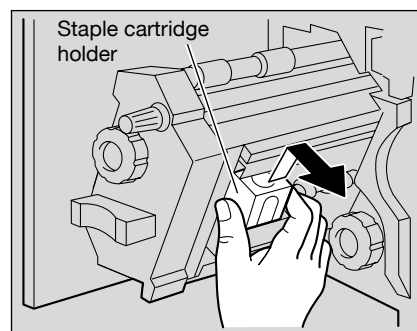


- 6** Swing open the shutter of the staple cartridge.

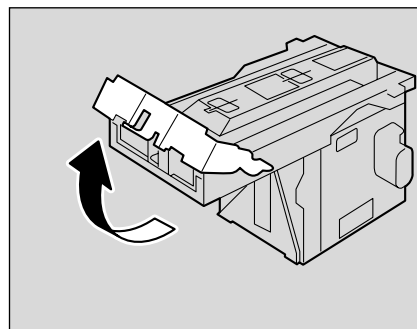


- 7** Pull out toward you the two staples jammed at the end of the staple cartridge.

? What happens if two staples are not removed?  
→ Stapling cannot continue correctly.

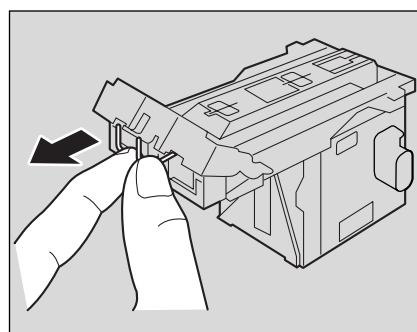


- 8** Return the shutter of the staple cartridge to its original position.


- 9** Insert the staple cartridge holder, making sure the tabs on the holder slide along the rails in the compartment.

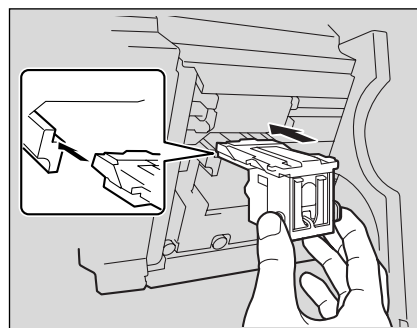

- 10 Insert the staple cartridge holder until it locks into place.
  - Check that the staple cartridge holder is securely installed.

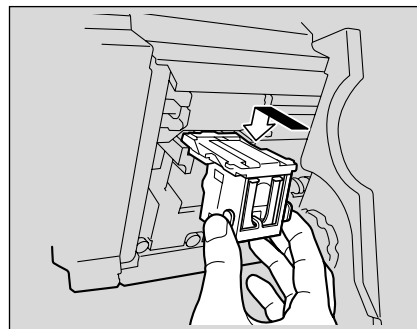

- 11 Carefully move the stapler unit back into its original position.

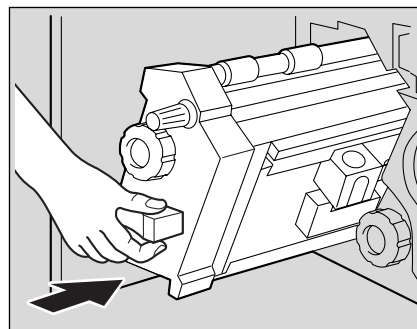

- 12 Close the front door.

- 13 Slide the finisher back against the machine.




**Reminder**

*Do not remove paper with too much force, otherwise the folding unit may be damaged.*

*If stapling still cannot be resumed, even after performing the above procedure, contact your service representative.*

## 10.4 When the message "Replenish paper" appears

If a tray has run out of paper during printing, the message "Replenish paper" appears.

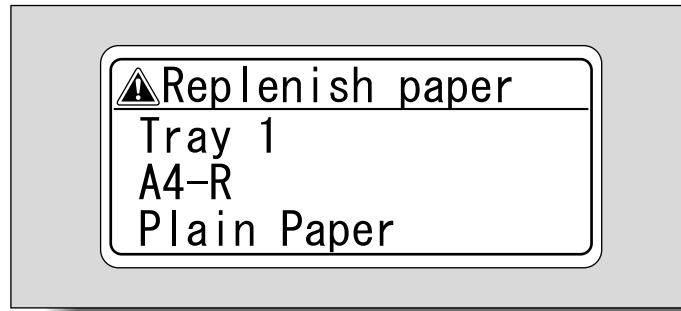


### Detail

For details on loading paper, refer to ["Loading paper into tray 1/2/3/4" on page 1-22](#), and ["Loading paper into the LCT" on page 1-23](#), and ["Loading paper into the bypass tray" on page 1-25](#).

## 10.5 When the message "Memory Over flow" appears


This message appears when memory space is not sufficient and the job being read was deleted.

Check the size of the data to be sent.

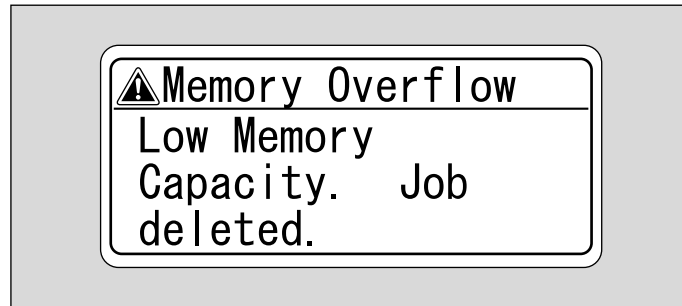

## 10.6 When the message "Replace XXXX soon." appears

When it is almost time to replace consumables or a part within this machine, a message similar to the one shown below appears, warning about the replacement period.

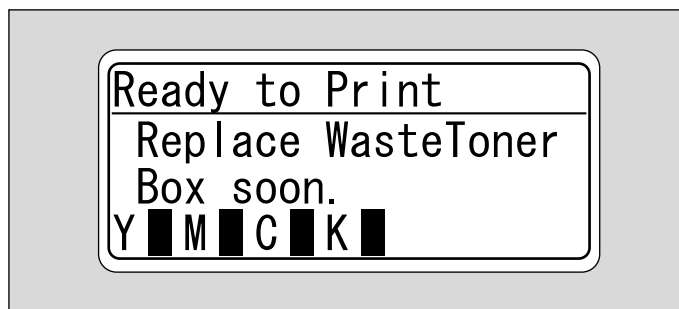

### Detail


*When the message appears, replace the specified consumables or part according to your maintenance agreement.*

*After the message "Replace XXXX soon." appears, the message "Please replace XXXX." appears and the machine stops operating.*

*The number of pages that can be printed after the message "Replace XXXX soon." appears and before the message "Please replace XXXX." appears differs depending on the printing conditions, the consumables and the part to be replaced.*

## 10.7 When the message "Please replace XXXX." appears

When it is time to replace consumables or a part within this machine, a message similar to the one shown below appears.

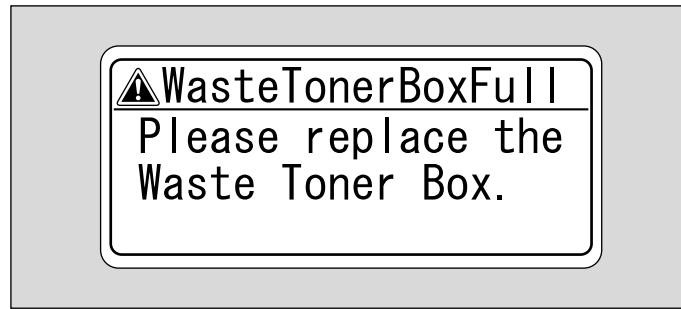**Note**


*When the message appears, replace the specified consumables or part according to your maintenance agreement.*

**Detail**

*Do not throw away used consumables or parts. Instead, keep them in their boxes to be collected by your service representative.*

## 10.8 When the message "Remote Operation Please do not turn off power." appears

This message appears when the machine is being accessed in Administrator mode of PageScope Web Connection.

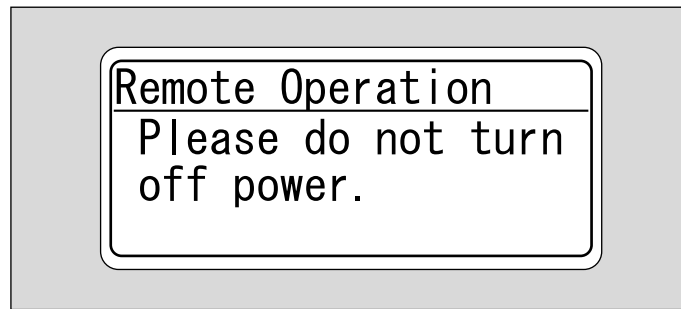

### **Reminder**

*Do not turn off the machine while this message is displayed. After access to the machine with PageScope Web Connection has ended, the Basic screen appears again.*

## 10.9 Simple troubleshooting

	Symptom	Possible cause	Remedy
Main unit	The machine does not start up when the power switch is turned on.	Is no power supplied from the electrical outlet?	Correctly insert the power supply plug into the electrical outlet.
	The machine does not start printing.	Is the right-side door of the machine open?	Securely close the right-side door of the machine.
		Is there no paper that matches the document?	Load paper of the appropriate size into the paper tray.
	The printed output is too light.	Was the print density changed from the printer driver?	Check the printer driver setting.
		Is the paper damp?	Replace the paper with new paper. (See <a href="#">p. 1-22</a> , <a href="#">p. 1-23</a> and <a href="#">p. 1-25</a> .)
	The printed output is too dark.	Was the print density changed from the printer driver?	Check the printer driver setting.
	The printed output is blurry.	Is the paper damp?	Replace the paper with new paper. (See <a href="#">p. 1-22</a> , <a href="#">p. 1-23</a> and <a href="#">p. 1-25</a> .)
	There are dark specks or spots throughout the printed output. There are streaks in the printed output.	Is the electrostatic charger wire dirty?	Use the charger-cleaning tool to clean the electrostatic charger wire. (See <a href="#">p. 12-3</a> .)
	The image is not aligned properly on the paper.	Are the lateral guides incorrectly positioned against the edges of the paper?	Slide the lateral guides against the edges of the paper.
		Was curled paper loaded into the paper tray?	Flatten the paper before loading it.
	The printed page is curled.	Was paper that curls easily (as with recycled paper) used?	Remove the paper from the paper tray, turn it over, and then load it again.
			Replace the paper with paper that is not damp.
	Even though the paper misfeed was cleared, prints cannot be produced.	Are there paper misfeeds at other locations?	Check the control panel for other paper misfeed indications, and then remove any misfed paper at all other locations. (See <a href="#">p. 10-4</a> .)
	Printing is not possible even though the password is entered on a machine with user authentication/account track set.	Did the message "Over Max Allowance Total Ctr for User Please delete job." appear?	Contact your administrator.
Finisher	The finisher cannot be used.	Is no power supplied to the connector?	Check that the cord is correctly inserted into the connector.
	The pages cannot be stapled.	Have the staples run out?	Replace the staple cartridge. (See <a href="#">p. 11-14</a> .)
	The pages that were fed out were not uniformly loaded and the punched holes or staples are incorrectly positioned.	Is the paper curled?	Remove the paper from the paper tray, turn it over, and then load it again.
		Is there a gap between the lateral guides in the paper tray and the side of the paper?	Slide the lateral guides in the paper tray against the side of the paper so that there is no gap.
	Even though a Punch setting was selected, holes are not punched. (when Punch Kit is installed on Finisher)	Did the message "Punch Scrap Box Full." appear?	Empty the punch scrap box.

If any message other than those listed above appears, perform the operation described in the message.

If the problem is not corrected after the described operation is performed, contact your technical representative.

	Symptom	Possible cause	Remedy
Printer driver	The message "No printers are connected." or "Print error" appears.	The printer driver selected for printing is not compatible with the printer controller.	Check the printer name selected.
		The network cable, parallel cable, or USB cable is disconnected.	Check that the cable is connected properly.
		Available memory space is not sufficient.	Perform a test print to check whether printing is possible.
		An error has occurred in this machine.	Check this machine's control panel.
	A postscript error appears.	Available computer memory space is not sufficient.	Perform a test print to check whether printing is possible.
		There is an error in the application software settings.	Refer to the user's manual of the application software to check the settings.
		The file printing settings are incorrect.	Change the settings and try to print again.
	The machine does not start printing although the print job was completed on the computer.	The printer driver selected for printing is not compatible with the printer controller.	Check the printer name selected.
		The network cable, or USB cable is disconnected.	Check that the cable is connected properly.
		An error has occurred in this machine.	Check this machine's control panel.
		A print job is queued in this machine, delaying printing.	Check the job order on the Active Jobs list of the machine's control panel.
		"Save in User Box" was selected for the print job.	Check if the print job is stored on the Box screen of this machine's control panel.
		"Secure Print" was selected for the print job.	Check if the print job is held on the Secure Print User Box screen of this machine's control panel.
		If the account track settings have been applied, an unregistered account name (or password) may have been entered.	Enter the correct account name (or password).
		Available computer memory space is not sufficient.	Perform a test print to check whether printing is possible.
		The connection of this machine to the network is not yet established (while connecting to a network).	Consult with the network administrator.
	A printer driver setting cannot be selected.	Some functions cannot be combined.	Do not try to select settings that are not available.
	The "Conflicts" message with "Unable to Select" or "Function Canceled" appears.	An incorrect combination of functions has been specified.	Check the settings and specify the functions correctly.
	Printing is not performed as specified.	Incorrect settings are specified.	Check each setting in the printer driver.
		A combination of functions, although possible in the printer driver, is not possible with this machine.	
		The paper size, orientation, and other settings specified in the application have priority over those specified in the printer driver.	Enter the correct settings in the application.
	The watermark cannot be printed.	The watermark is not correctly set.	Check the watermark settings.
		The watermark density is set to a level that is too low.	Check the density settings.
		Watermarks cannot be printed in graphics applications.	No watermark can be printed in this case.


	Symptom	Possible cause	Remedy
	The staple function cannot be specified.	Stapling is not possible if "Paper Type" is set to "Thick" or "Transparency".	Check each setting in the printer driver.
		For stapling, an optional finisher must be installed.	Install the required optional finisher and enable it using the printer driver.
	Stapling cannot be performed.	Stapling is not possible if the document contains pages of different sizes.	Check the document.
	The stapling position is not as expected.	The orientation setting is not correct.	Check the stapling position in the printer driver setup dialog box.
	The hole punch function cannot be specified.	Hole punching cannot be specified if "Booklet" is selected or paper not compatible with the finisher is used.	Check each setting in the printer driver.
		The punch kit must be installed on optional finisher FS-519 or FS-609.	Install the required optional finisher and enable it using the printer driver.
	The pages are not punched.	Printed pages may be fed out without being punched if the paper is loaded into the paper source with an incorrect orientation.	Check the orientation setting.
	The hole punch position is not as expected.	The orientation setting is not correct.	Check the punch position on the Layout tab of the printer driver setup dialog box.
	The form is not printed properly.	Available computer memory space is not sufficient.	Simplify the form to reduce the data size.
	The image is not printed properly.	Available computer memory space is not sufficient.	Simplify the image to reduce the data size.
	Paper is not fed from the specified paper source.	Paper will not be fed from the specified paper source if that paper source is loaded with paper of a different size or orientation.	Load the paper source with paper of the appropriate size and orientation.
	The access number cannot be specified.	To specify access numbers, a HDD must be added in the Option tab of the printer driver.	Add a HDD in the Option tab of the printer driver.

## 10.10 Main messages and their remedies

Message	Cause	Remedy
Set correct paper Check paper Size Check paper Type	Paper of a suitable size is not loaded in a paper tray.	Either select a different size or feed paper of a suitable size from the by-pass tray.
Capacity Over XXXX Remove Paper	Since the maximum amount of papers for the indicated finisher output tray has been exceeded, the machine is unable to make prints.	Remove all papers from the indicated tray.
Account Name	Account track settings have been specified. Prints cannot be made unless an account name and its correct password are entered.	Type in your account name and password. (See <a href="#">p. 7-25</a> .)
Over Max Allowance Total Ctr for User Please delete job.	The limit on the number of prints that can be made has been reached.	Contact your administrator.
Door open Please close.	Since a machine door or cover is open or an option is not installed correctly, the machine is unable to make prints.	Make sure that all doors and covers are closed and that all options are installed correctly.
IU not installed Please set IU. [X]	The imaging unit is not installed correctly.	Reinstall the supplies or parts, or contact your technical representative.
Toner Not Installed Please set Toner Cartridge. [X]	The indicated toner cartridge is not installed correctly.	
No Waste Toner Box Please install Waste Toner Box.	The waste-toner box is not installed correctly.	
Replenish paper	The indicated tray has run out of paper.	Load paper into the indicated tray. (See <a href="#">p. 1-22</a> , <a href="#">p. 1-23</a> and <a href="#">p. 1-25</a> .)
Toner low. Replace when indicate [X]	The toner for the indicated color is about to run out.	Prepare to replace the toner cartridge according to your maintenance agreement.
Replace Toner & Clean Elec. Charger W [X]	Since the toner for the indicated color has run out, the machine is unable to make prints.	Replace the toner cartridge according to your maintenance agreement.
Replace Staple cartridge	The staples have run out.	Replace the staple cartridge. (See <a href="#">p. 11-14</a> .)
Misfeed detected. XXXX Remove paper.	Since a paper misfeed occurred, the machine is unable to make prints.	Clear the paper misfeed. (See <a href="#">p. 10-4</a> .)
HDD Password Error	The password is incorrect.	Register the correct password.
Encryption pass Err	The encryption key is incorrect.	Register the correct encryption key, or format the HDD.
Trouble C-xxxx	The machine malfunctioned and is unable to make prints.	Inform your service representative of the code displayed on the display panel.

If any message other than those listed above appears, perform the operation described in the message.



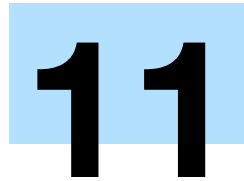


## Replacing consumables

## 11 Replacing consumables

### 11.1 Replacing the toner cartridge


When the toner is about to run out, an advanced warning message similar to the one shown below appears.

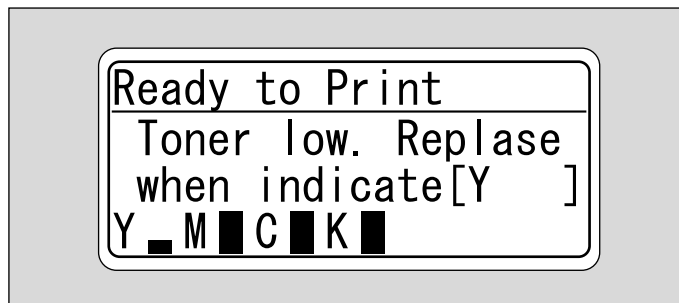

#### Detail

*When the message appears, prepare to replace the toner cartridge according to your maintenance agreement.*

When the toner is empty, a message similar to the one shown below appears, warning that the toner cartridge should be replaced.

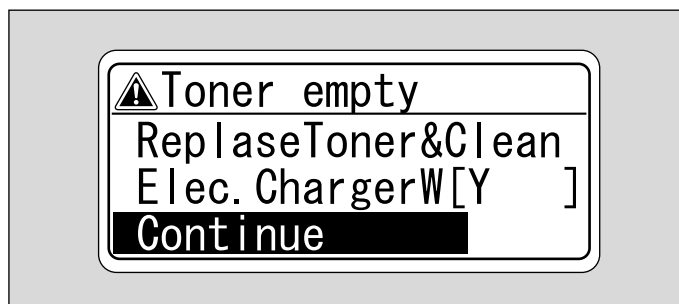

#### Note

*After the message appears, the machine stops operating. Replace the toner cartridge according to your maintenance agreement. Do not replace the toner cartridge for any color not indicated in the message.*

*If toner other than black is empty, printing can continue in black.*

*Select [Continue], and then touch [Menu/Select].*



#### Detail

*For details on replacing the toner cartridge, refer to ["To replace the toner cartridge" on page 11-3](#).*

## ⚠ CAUTION

### Handling toner and the toner cartridges

- Do not throw toner or the toner cartridge into a fire.
- Toner expelled from the fire may cause burns.

## ⚠ CAUTION

### Precautions for toner spills

- Be careful not to spill toner inside the machine or get toner on your clothes or hands.
- If your hands become soiled with toner, immediately wash them with soap and water.
- If toner gets in your eyes, immediately flush them with water, and then seek professional medical attention.

### 11.1.1 To replace the toner cartridge

The procedure for replacing any of the toner cartridges (yellow (Y), magenta (M), cyan (C) or black (K)) is the same.

Example: Replacing the black toner cartridge




#### Note

*Be careful about the installation location of the toner cartridges, since it is different for other colors.*

*The shape of the black toner cartridge is different from the shapes of the toner cartridges for the other colors.*


- 1 Open the machine's front door.
  - Check that a toner cartridge of the same color as the one to be replaced has been prepared.

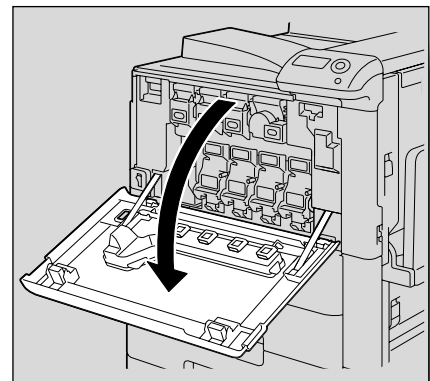

- 2 Pull up the locking tab of the empty toner cartridge to unlock it. Pull out the toner cartridge as far as possible, and then pull it up to remove it.


? How are used toner cartridges disposed of?

- Do not throw away used toner cartridges. Instead, keep them in their boxes to be collected by your service representative.

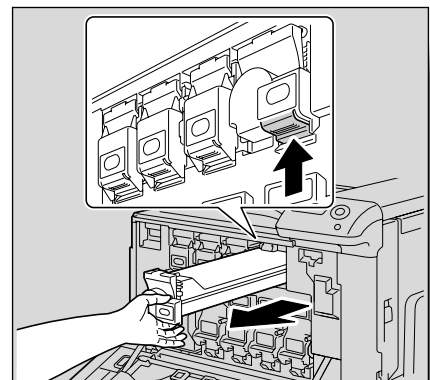


- 3 Prepare the new toner cartridge.
- Make sure that the toner cartridge is the same color as the label in the cartridge compartment.
- ? Can a toner cartridge of a different color be installed?
- The toner cartridge of a color different than the one that was removed cannot be installed. If the wrong toner cartridge is installed with extreme force, the machine may be damaged.


- 4 Remove the new toner cartridge from its packaging, and then shake the cartridge up and down 5 to 10 times.
- The toner within the toner cartridge may have become compacted. If it has, be sure to shake the toner cartridge until the toner is mostly broken up before installing the cartridge.

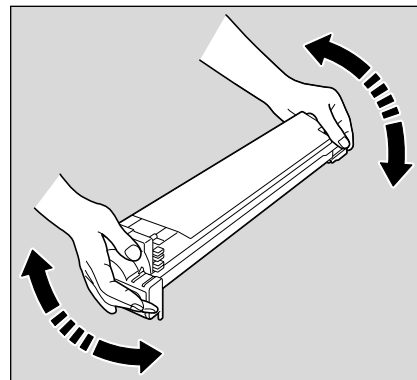


- 5 Align the toner cartridge with the slots in the machine, and then insert the cartridge until the locking tab locks into place.
- When inserting the new toner cartridge, fully insert it until it snaps into place.

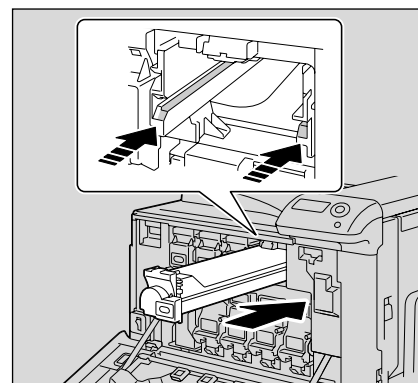

- 6 Slowly pull out the charger-cleaning tool as far as possible. Next, slowly push in the charger-cleaning tool as far as possible. Repeat the above operations three times.

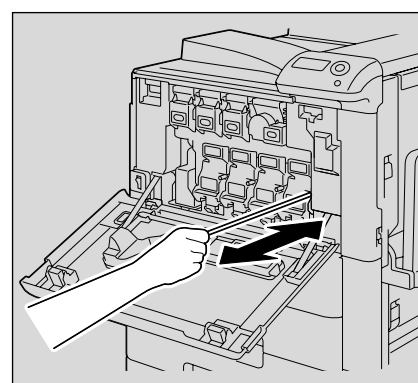

- 7 Close the front door.

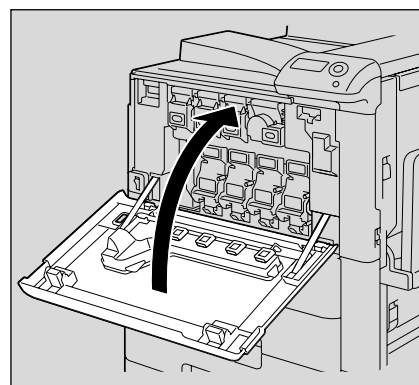


**Reminder**

*When replacing a toner cartridge, be sure to clean the electrostatic charger wire corresponding to the color of the replaced toner cartridge.*

## 11.2 Replacing the waste toner box

When it is almost time to replace the waste toner box, the message shown in the following illustration appears, warning about the replacement period.

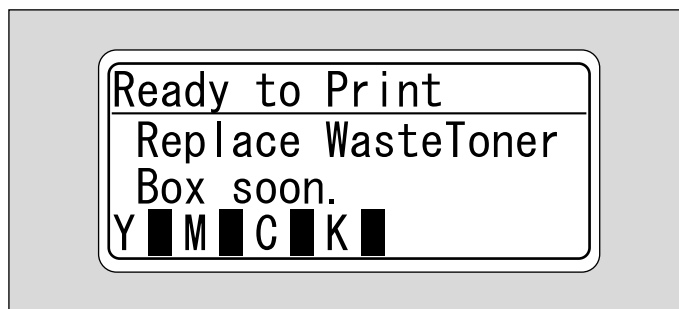

### Note


*When the message appears, prepare to replace the waste toner box according to your maintenance agreement.*



### Detail


*The number of prints that can be made from the time that the message "Replace Waste Toner soon." appears until the time that the message "Waste Toner Box Full Please replace the Waste Toner Box." appears differs depending on the specified print settings and the consumables/parts.*

When it is time to replace the waste toner box (and if it is replaceable by the user), the message "Waste Toner Box Full Please replace the Waste Toner Box." appears and the machine stops operating.

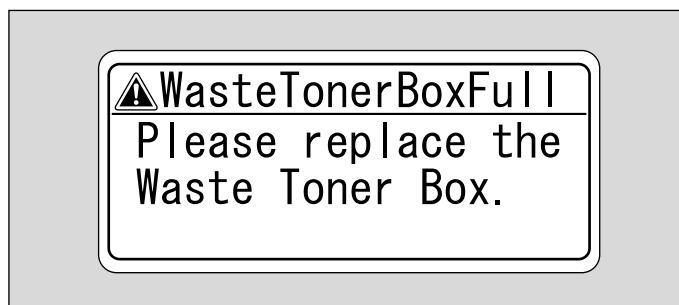


### 11.2.1 To replace the waste toner box


- 1 Open the machine's front door.

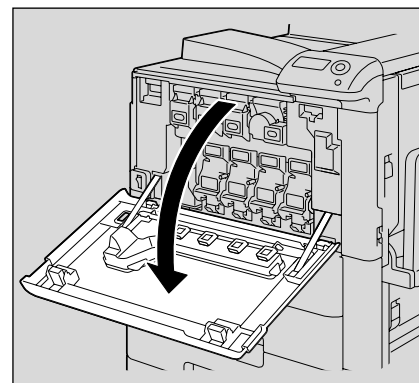


- 2 Lift up and remove the waste toner box.

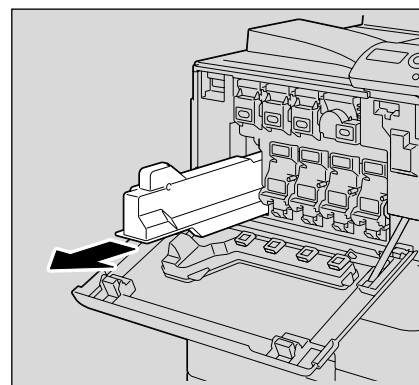

- 3 Install the new waste toner box.

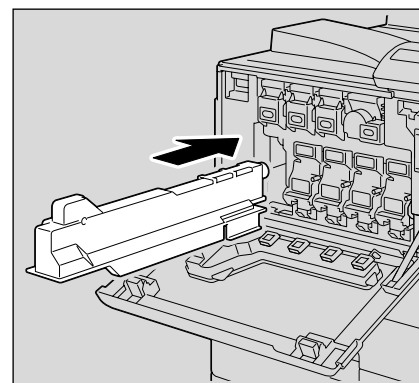

- 4 Close the front door.

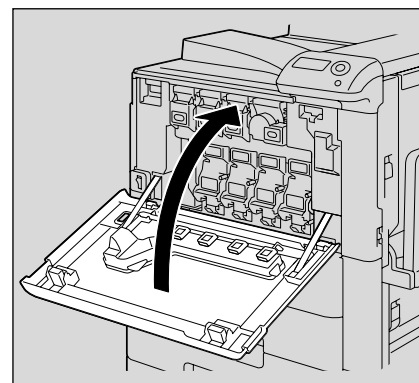

---

## CAUTION

### Handling toner and the waste toner box

- Do not throw toner or the waste toner box into a fire.
- Toner expelled from the fire may cause burns.

---

## CAUTION

### Precautions for toner spills

- Be careful not to spill toner inside the machine or get toner on your clothes or hands.
  - If your hands become soiled with toner, immediately wash them with soap and water.
  - If toner gets in your eyes, immediately flush them with water, and then seek professional medical attention.
-


**Reminder**

*Do not tilt the removed waste toner box, otherwise waste toner may spill.*

*Do not throw away used waste toner boxes. Instead, keep them in their boxes to be collected by your service representative.*

### 11.3 Replacing an imaging unit


When it is almost time to replace an imaging unit, an advanced warning message similar to the one shown below appears.

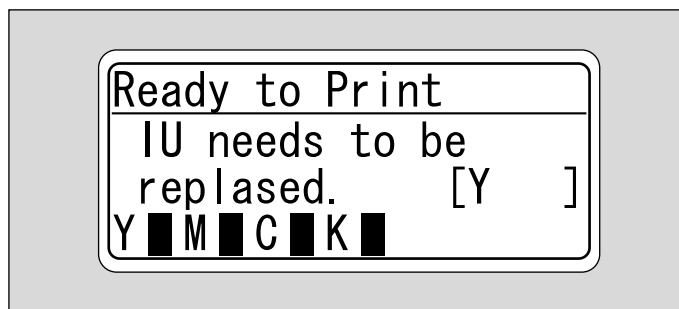

#### Note

*When the message appears, prepare to replace the imaging unit according to your maintenance agreement.*

When the time to replace the imaging unit is reached, an advanced warning message similar to the one shown below appears.

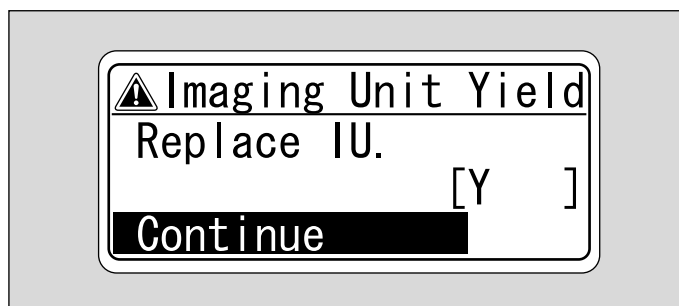

#### Note

*If it is time to replace an imaging unit other than the black imaging unit, printing can continue in black. Select [Continue], and then touch [Menu/Select].*



#### Detail

*For details on replacing the imaging unit, refer to ["To replace the imaging unit" on page 11-9](#).*



#### Reminder

*Be sure to replace the imaging unit only after the message "IU needs to be replaced. [x]" appears. In addition, do not replace the imaging unit of any color other than the one indicated in the message on the message window.*


#### 11.3.1 To replace the imaging unit

1


Set the power switch to "O".

Check that the control panel is turned off.


- 2 Open the front door.
- Check that an imaging unit of the same color as the one to be replaced has been prepared.

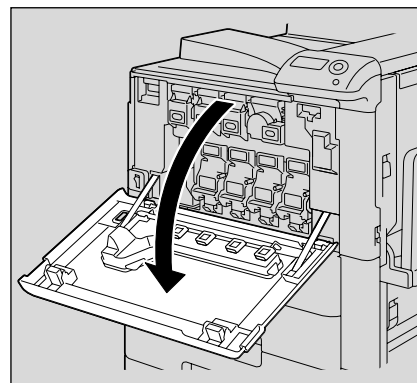


- 3 Press down to release the unlock lever of the imaging unit to be replaced.

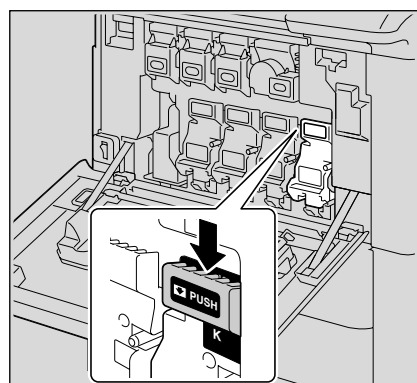


- 4 Pull the imaging unit towards you to remove it.

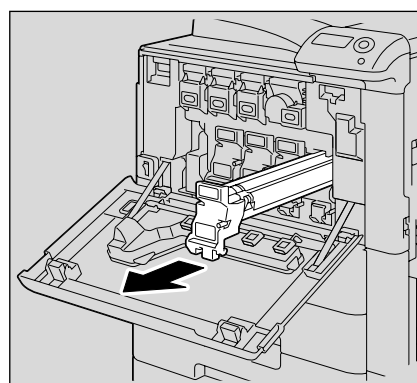


- 5 Remove the imaging unit from its packaging.
- The imaging unit can easily be damaged by light. Leave the imaging unit in the black protective bag until immediately before it is to be installed.
  - Do not hold the top part of the imaging unit, otherwise the PC drum may be damaged, resulting in decreased image quality.

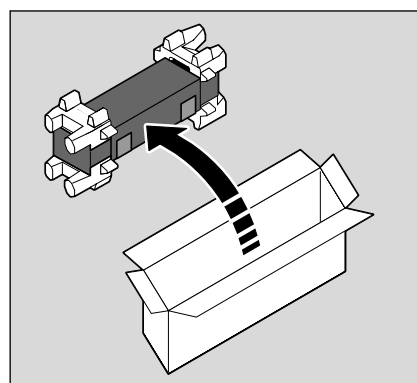


- 6 Peel off the tape, and then remove the packing material.

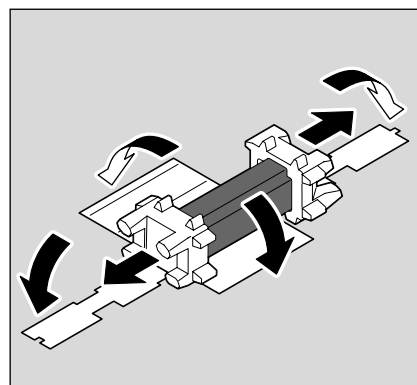


- 7 Remove the imaging unit from the black protective bag.

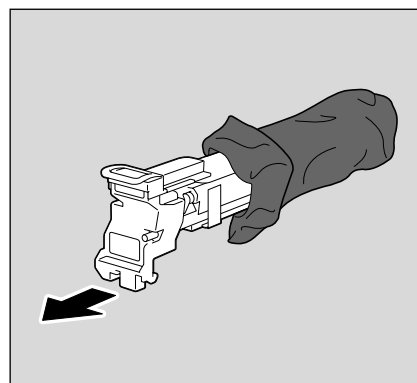

- 8 Tilt the imaging unit to the left and lightly shake it twice in the direction of the tilt, and then tilt the unit to the right and lightly shake it twice in the direction of the tilt.

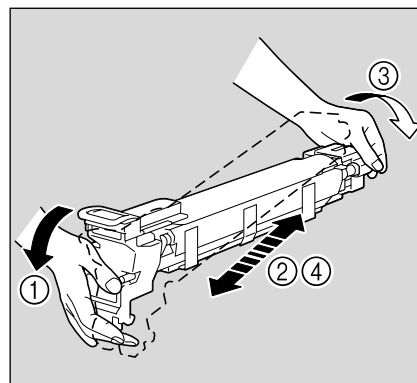

- 9 Peel off the tape.

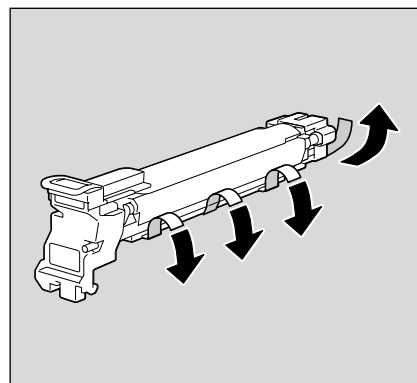


11

12 Lift up  
sheet

13 Push the imaging unit until it be


- 14** Close the front door.

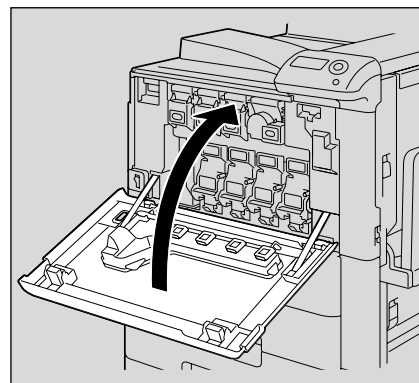

- 15** Insert the used imaging unit into the empty black protective bag and box of the new imaging unit.

? How are used imaging units disposed of?

→ Do not throw away used imaging units. Instead, keep them in their boxes to be collected by your service representative.

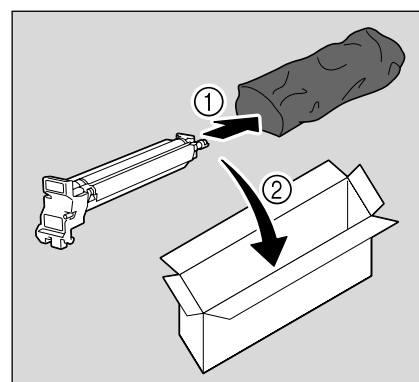

- 16** Set the power switch "I".

- 17** Adjust the image stabilization.

– For details on adjusting the image stabilization, refer to **"Expert Adjustment"** on page 8-27.

## CAUTION


### Precautions for toner spills

- Be careful not to spill toner inside the machine or get toner on your clothes or hands.
- If your hands become soiled with toner, immediately wash them with soap and water.
- If toner gets in your eyes, immediately flush them with water, and then seek professional medical attention.



### Reminder


*Be careful not to touch the PC drum.*

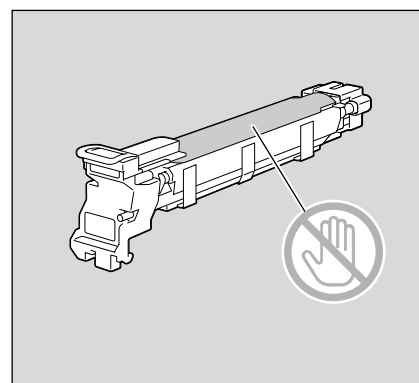

## 11.4 Replacing the staple cartridge

When the staple cartridge is empty, the message "Replace Staple Cartridge" appears.

Replace the staple cartridge.

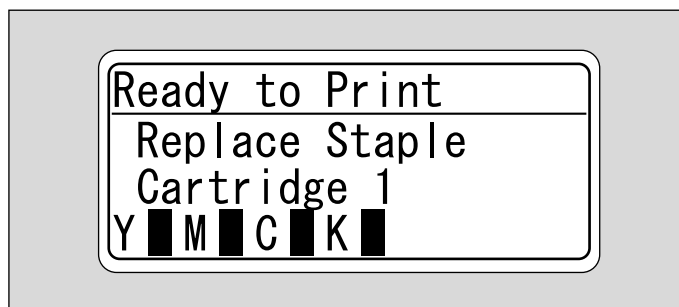


### Reminder

*Be sure to replace the staple cartridge only after the message appears, otherwise the machine may be damaged.*


### 11.4.1 To replace the staple cartridge in the finisher FS-519

- 1 Open the front door.

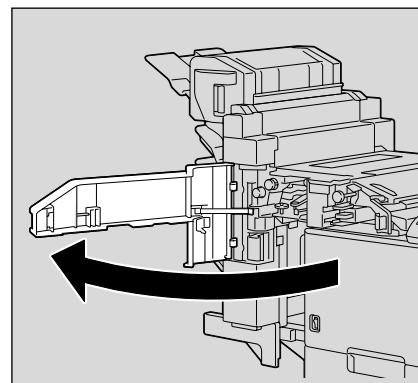


- 2 Remove the staple cartridge holder.


- Pull the staple cartridge holder toward you to remove it.
- Only touch the blue parts of the staple cartridge.

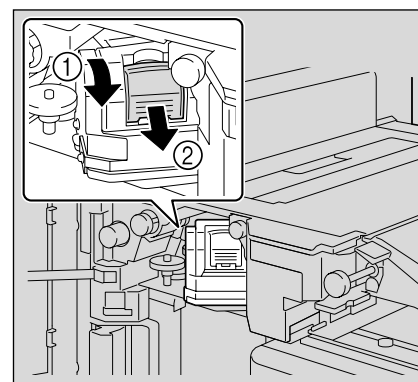


- 3** Remove the empty cartridge from the staple cartridge holder.

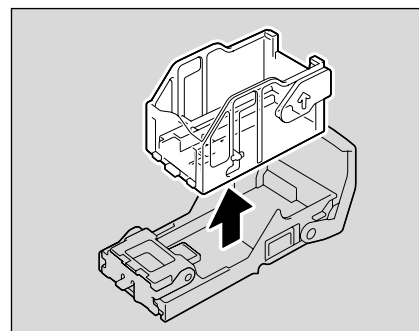

- 4** Load the new staple cartridge into the staple cartridge holder.
- Do not remove the remaining staples, otherwise the machine will not be able to staple after the cartridge is replaced.

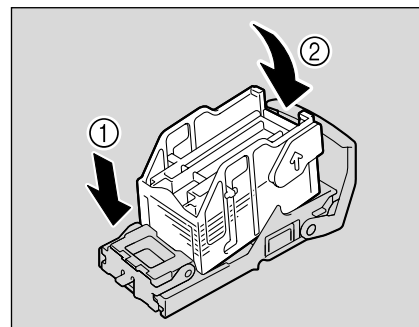

- 5** Insert the staple cartridge holder along the rails in the compartment until it snaps into place.
- Check that the staple cartridge holder is securely installed.

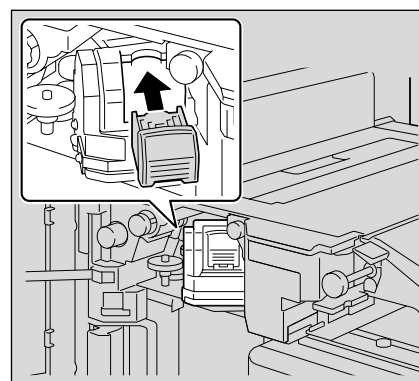

- 6** Close the front door.




**Reminder**

*Replace the staple cartridge only after the message has appeared.*



*If the staple cartridge is replaced before the message appears, the machine may be damaged.*

### 11.4.2 To replace the staple cartridge in saddle stitcher


- 1 Raise the output tray, and then push down the staple cartridge holder and remove it.

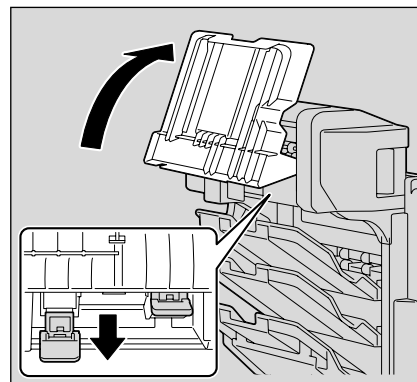

- 2 Press in the area marked "PUSH" to unlock the staple cartridge holder.

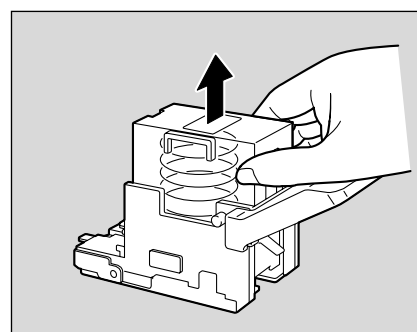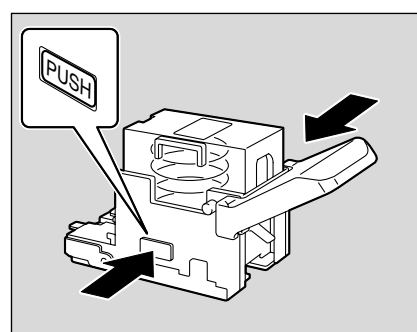

- 3 Remove the empty staple cartridge from the staple cartridge holder.

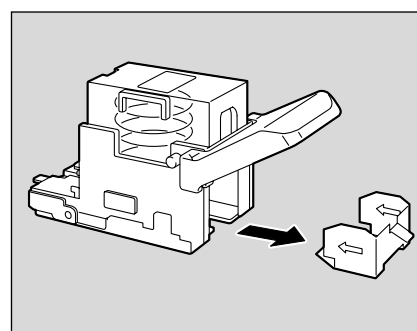




6


Insert the  
it looks like  
Where  
insert

- 8 Pull the handle of the misfeed-clearing door to open it, and then close it.

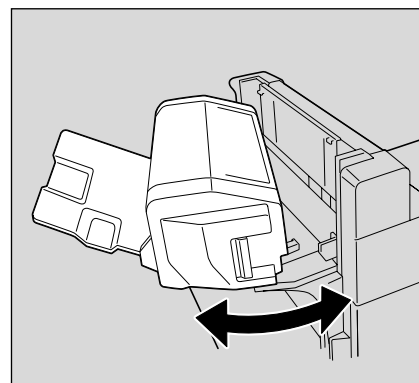


### 11.4.3 To replace the staple cartridge for finisher FS-609


- 1 Open the front door of the finisher.

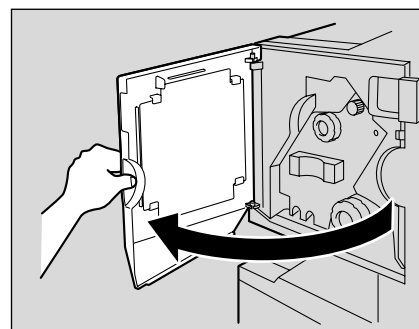


- 2 Slowly pull out the stapler unit as far as possible.

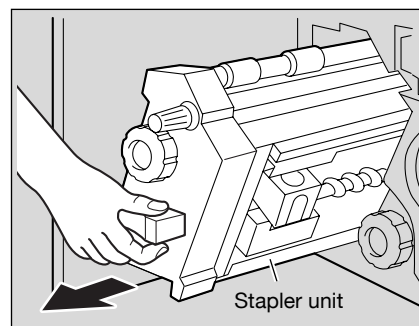


- 3 Grasp both sides of the staple cartridge holder, lift it up, and then pull it out.

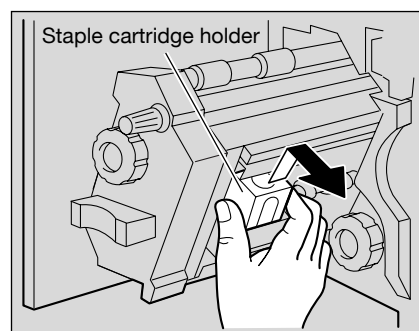


- 4 Press the button marked "PUSH" on the side of the staple cartridge holder.  
The staple case is released.

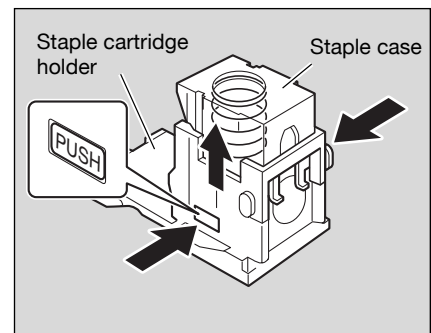


- 5 Pull up the staple case.

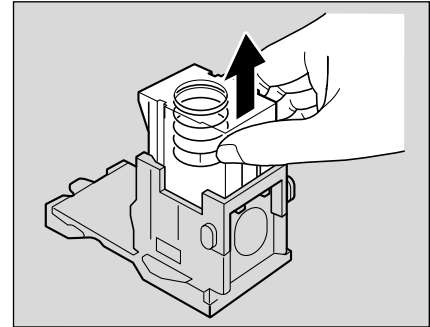


- 6 Remove the staple cartridge from the staple case.

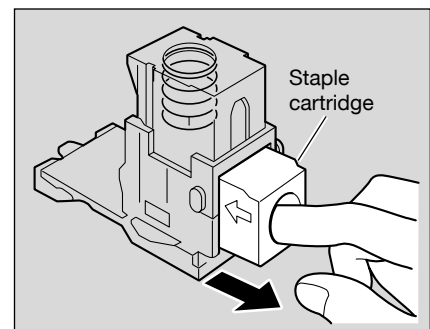


- 7 Load the new staple cartridge into the staple cartridge holder.  
– Fully insert the staple cartridge as far as possible.

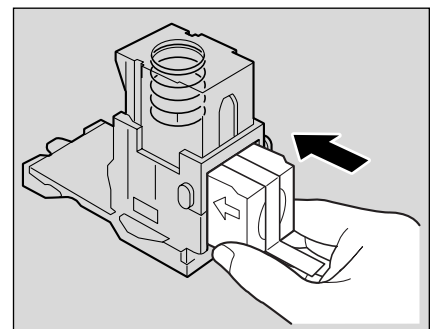


- 8** Press the staple case down.

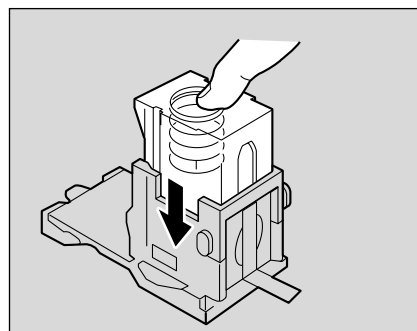


- 9** Peel the tape off of the staple cartridge.

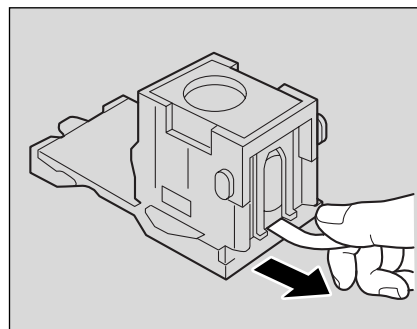

- 10** Insert the staple cartridge holder, making sure the tabs on the holder slide along the rails in the compartment.

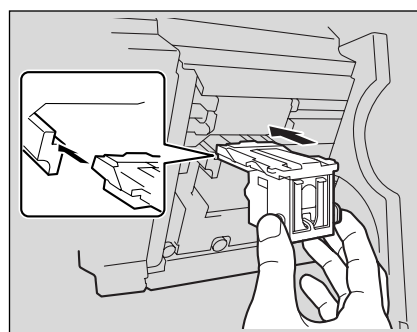

- 11** Insert the staple cartridge holder until it locks into place.
- Check that the staple cartridge holder is securely installed.

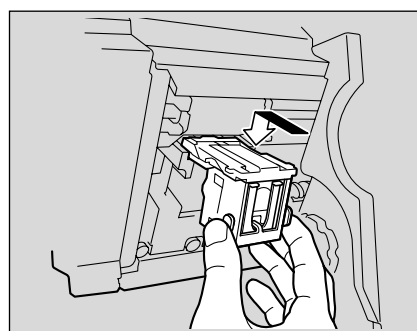

- 12** Carefully move the stapler unit back into its original position.

- 13** Close the front door.


**Reminder**

*Replace the staple cartridge only after the message has appeared.*

*If the staple cartridge is replaced before the message appears, the machine may be damaged.*

## 11.5 Emptying the punch scrap box

If the punch scrap box in the punch kit installed on the finisher becomes full, the message shown below appears.

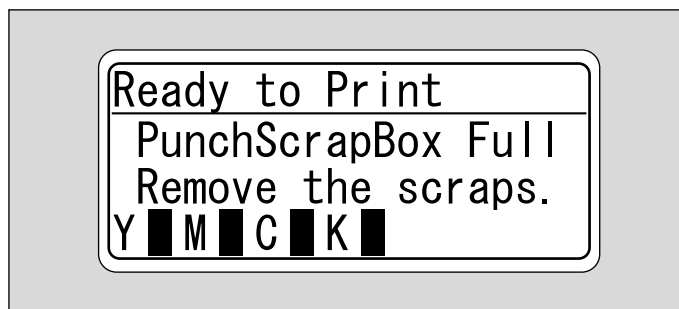

### Note


*The setting for emptying the punch scrap box should be specified by the service representative. For details, contact the service representative.*

*The default setting is "Service". If a message appears, immediately contact the service representative.*


### 11.5.1 To empty the punch scrap box in the finisher FS-519


Follow the procedure described below to empty the punch scrap box.

- 1 Open the front door.

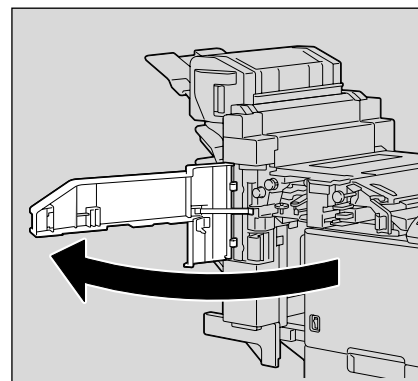


- 2 Pull out the punch scrap box FN3.1.

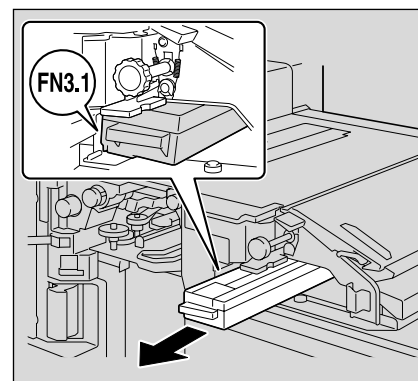

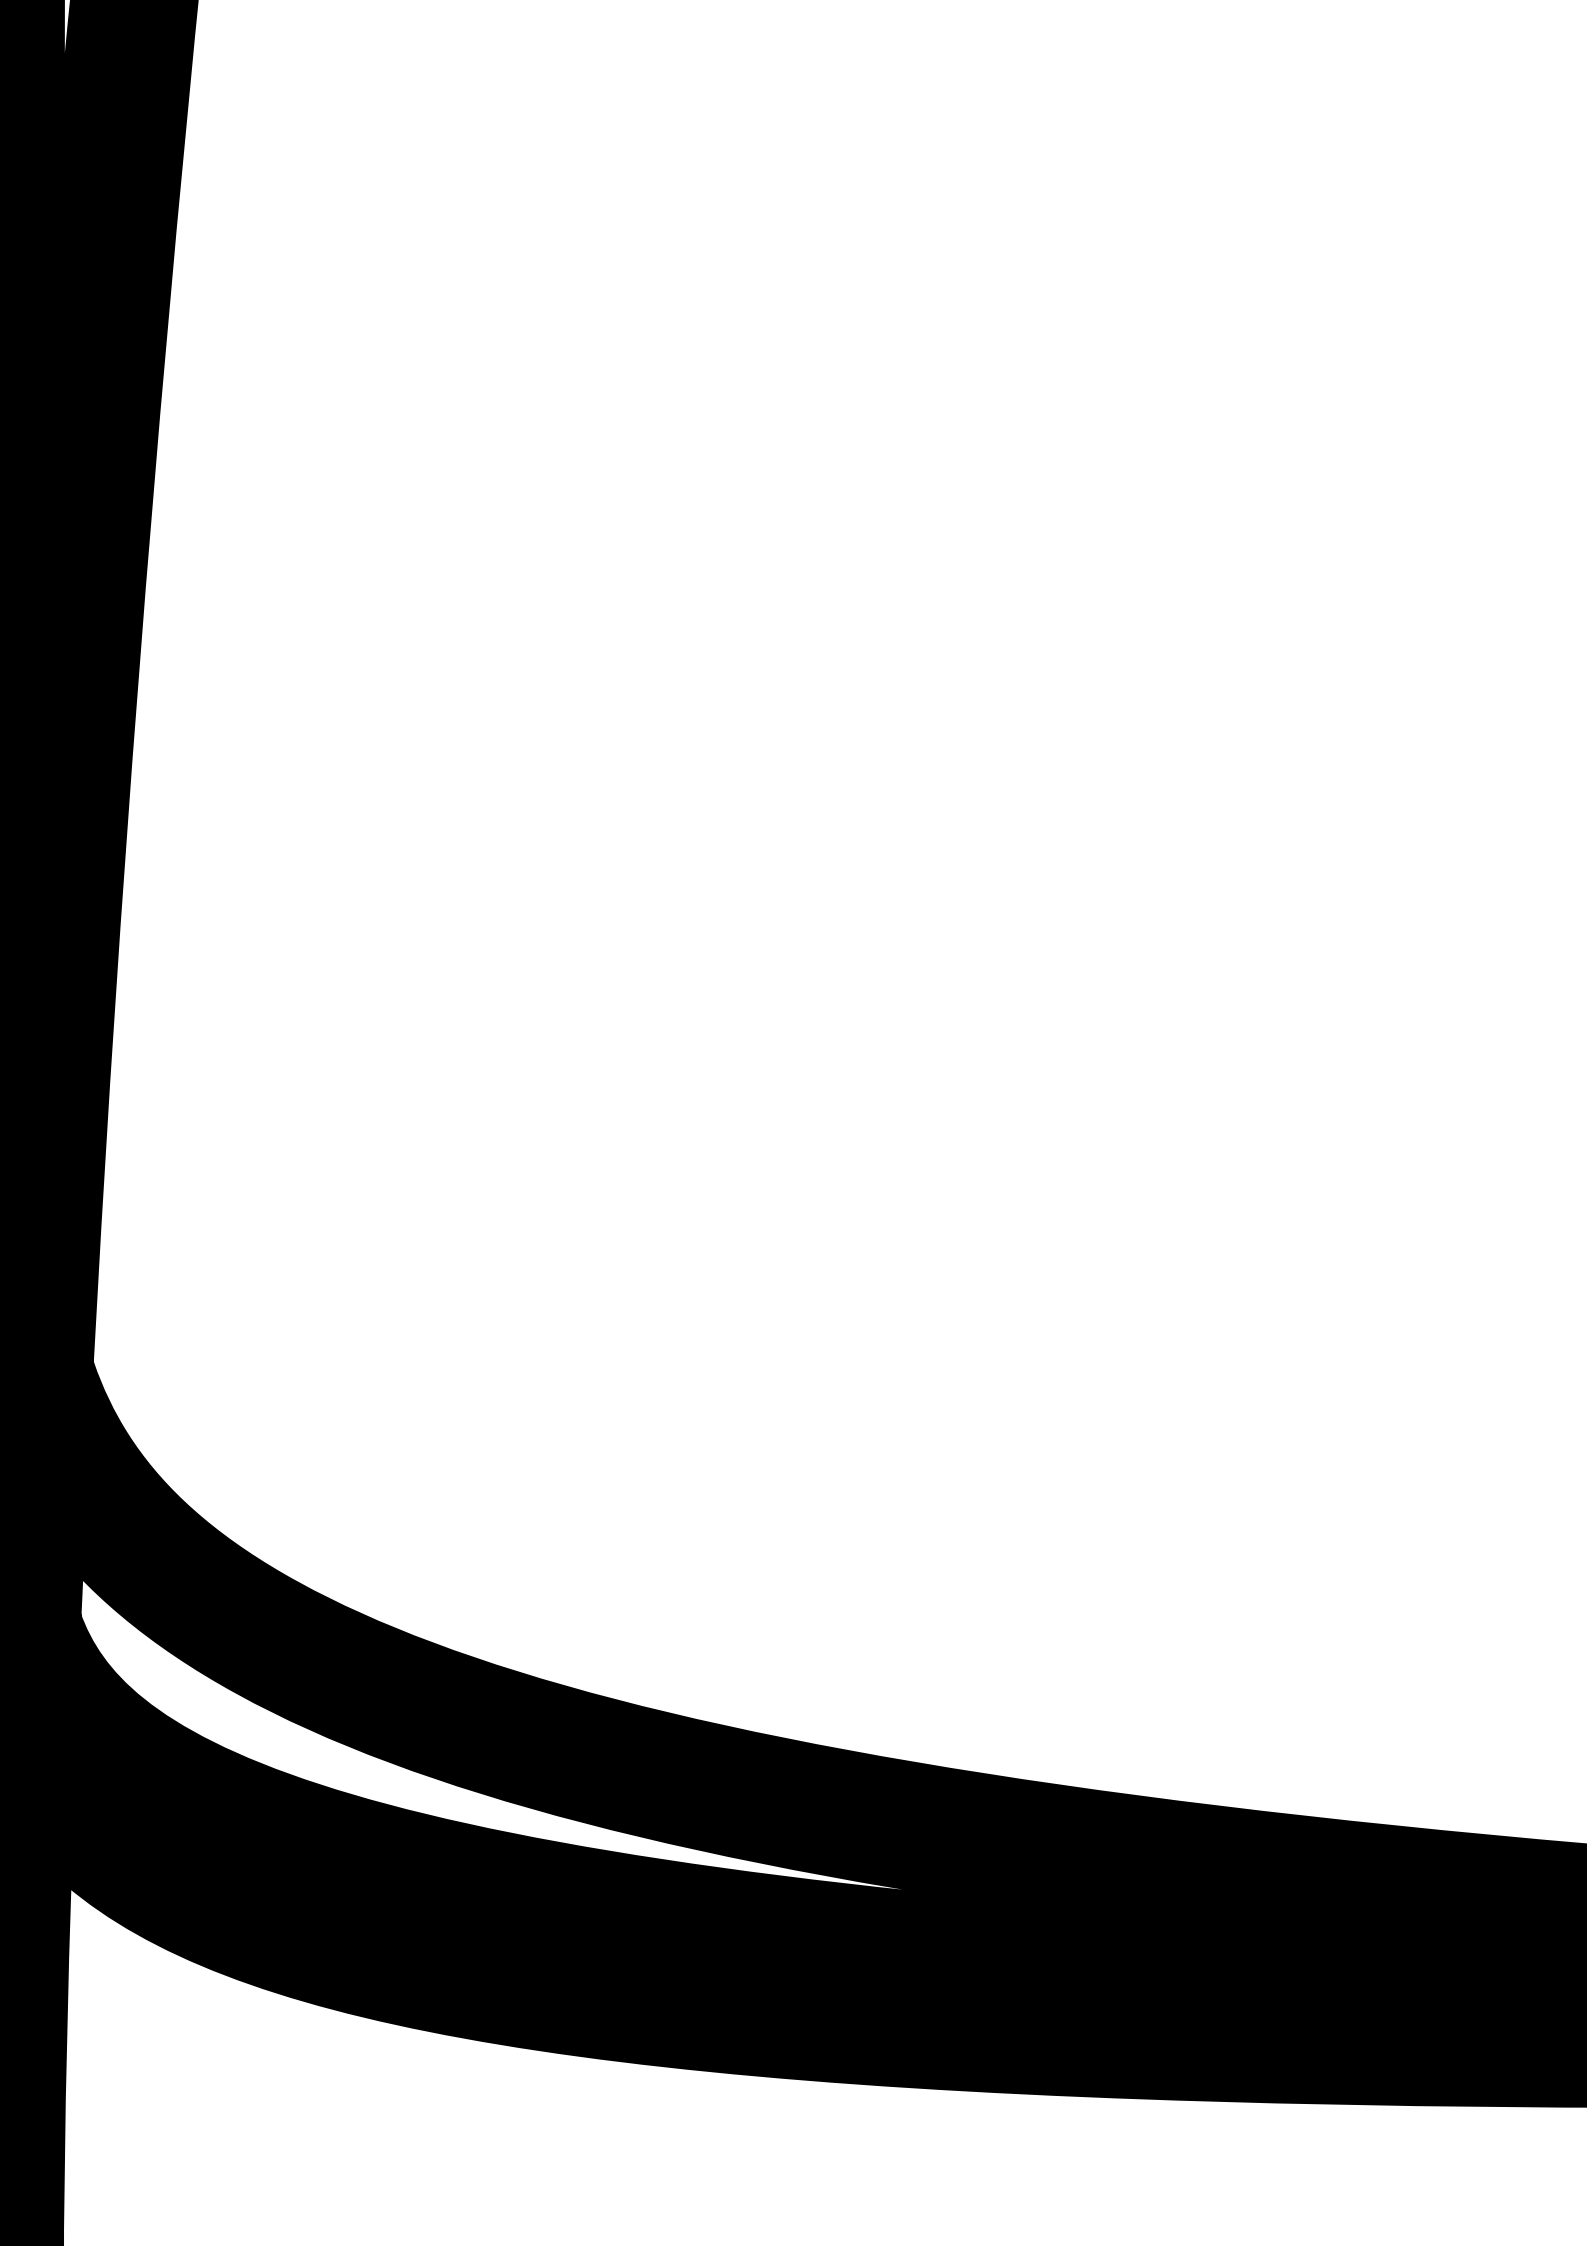

- 3 Empty the punch scrap box.

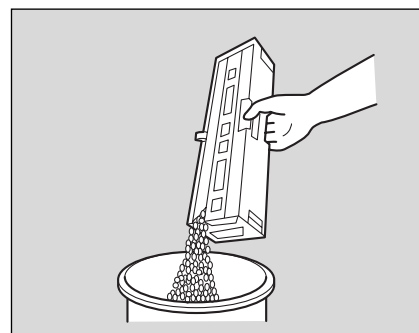

- 4 Insert the punch scrap box into its original position.
- 5 Slide the finisher back against the machine.

---

# **12**

## **Care of the machine**


## 12 Care of the machine

### 12.1 Cleaning

This section describes the procedures for cleaning each part.

#### 12.1.1 Housing

- Clean the surface of the housing by wiping it with a soft cloth dampened with a mild household detergent.

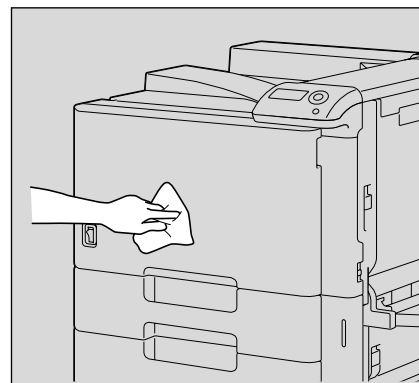


#### Reminder

*Be sure to turn off the machine (set the power switch to  $\bigcirc$ ) before cleaning it. For details on how to turn off the machine, refer to **"Turning off the machine"** on page 1-15.*

*Never use solvents, such as benzene or thinner, to clean the housing.*

#### 12.1.2 Control panel

- Clean the control panel by wiping it with a soft, dry cloth.

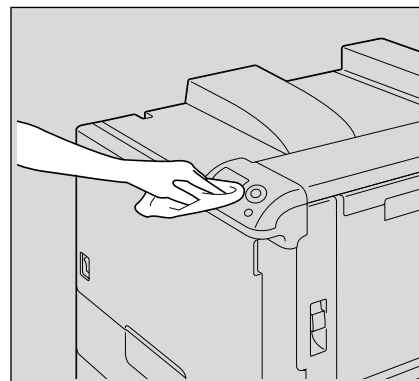


#### Reminder

*Pressing too hard on a key in the control panel may damage it. In addition, never use a mild household detergent, glass cleaner, benzene or thinner to clean the control panel.*

### 12.1.3 Electrostatic charger wire

If the electrostatic charger wire is dirty, streaks will appear though the printed images. If this occurs, follow the procedure described below to clean the electrostatic charger wire.

- 1 Open the machine's front door.
- 2 Slowly pull out the charger-cleaning tool as far as possible.  
Next, slowly push in the charger-cleaning tool as far as possible.  
Repeat the above operations three times.

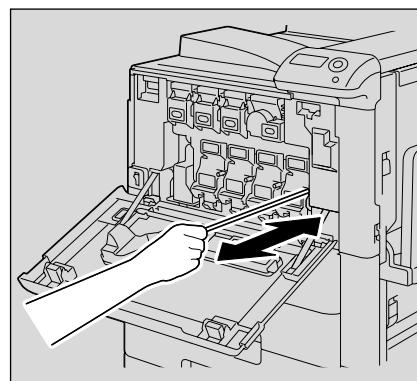


- 3 Securely insert the charger-cleaning tool, and then close the front door.


### 12.1.4 Print head

If the print head becomes dirty, decreased print quality may result. If this occurs, clean the print head according to the following procedure.


- 1 Open the machine's front door.

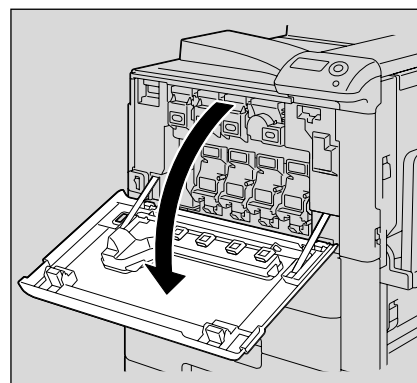

- 2 Remove the print head glass cleaning tool from the front door of the machine.

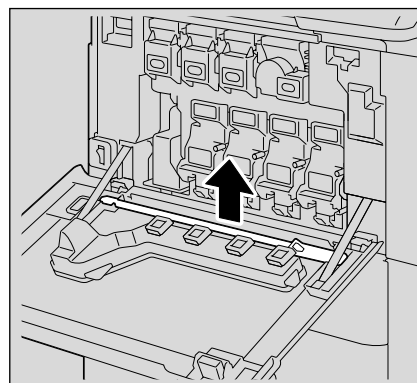


- 3 Insert the print head glass cleaning tool into the print head cleaning opening, pull it out, and then repeat this back-and-forth movement twice or three times.

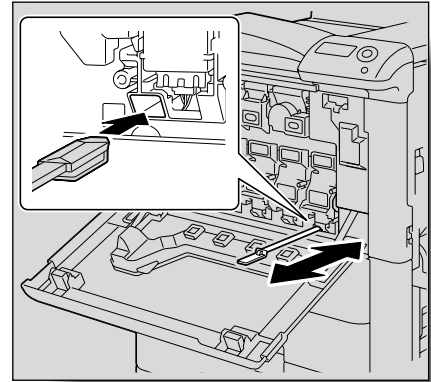

## 12.2 When the message "Time for periodic device check." appears

If the message "Time for periodic device check." appears, contact Technical support and request a periodic maintenance inspection.

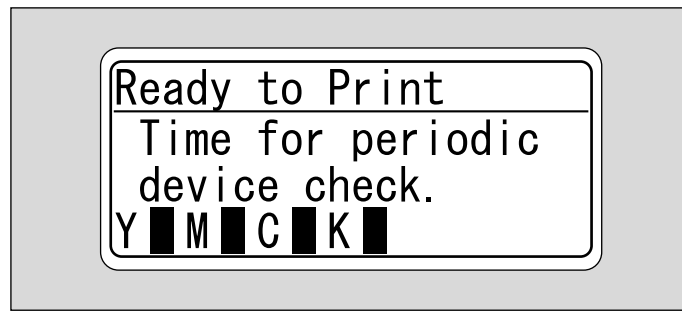



---









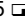
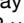
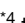
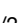
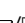
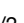
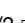
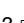

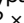
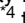
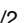
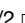
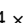
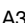



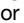

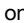



# 13
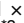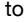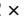
## Specifications


## 13 Specifications

### 13.1 Specifications



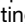


#### 13.1.1 Main unit

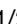Specifications	
Type	Desktop/Freestanding printer
Photoconductor	OPC
Copying system	Laser electrostatic copy method
Developing system	Dry-type dual-component HMT developing method
Fusing system	Roller fixing
Paper types	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 1 24-1/4 lb to 40 lb (91 g/m <sup>2</sup> to 150 g/m <sup>2</sup> ), thick paper 2 40-1/4 lb to 55-1/2 lb (151 g/m <sup>2</sup> to 209 g/m <sup>2</sup> ), thick paper 3 55-3/4 lb to 68 lb (210 g/m <sup>2</sup> to 256 g/m <sup>2</sup> ), thick paper 4 68-1/4 lb to 72 lb (257 g/m <sup>2</sup> to 271 g/m <sup>2</sup> )*, OHP transparencies*, postcards*, letterheads, colored paper, envelopes*, label sheets*, banner paper 33-3/4 lb to 55-3/4 lb (127 g/m <sup>2</sup> to 210 g/m <sup>2</sup> )* Duplex: Plain paper 17 lb to 24 lb (64 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 1/2/3 24-1/4 lb to 68 lb (91 g/m <sup>2</sup> to 256 g/m <sup>2</sup> ) *Can only be fed through the bypass tray.
Print sizes	Tray 1: 11 × 17  to 8-1/2 × 11  , 5-1/2 × 8-1/2  <sup>*1</sup> , A3  to B5  , A5  <sup>*2</sup> , 8 × 13  <sup>*3</sup> , 16K  , 8K  Tray 2: 12 × 18  <sup>*4</sup> to 8-1/2 × 11  , 5-1/2 × 8-1/2  <sup>*1</sup> , A3  to B5  , 8 × 13  <sup>*3</sup> , 16K  , 8K  Bypass tray*: 12 × 18  <sup>*4</sup> to 5-1/2 × 8-1/2  , 4 × 6  , A3  to B6  , A6  , banner paper, 8 × 13  <sup>*1</sup> , 16K  , 8K  Width: 3-9/16 to 12-1/4 (90 mm to 311.1 mm); length: 5-1/2 to 47-1/4 (139.7 mm to 1,200 mm) *For thick paper 4, only A3  , A4  , 11 × 17  and 8-1/2 × 11  are available for printing.
Paper tray capacity	Tray 1 and tray 2: Plain paper: 500 sheets; thick paper 1/2/3: 150 sheets Bypass tray: Plain paper: 150 sheets; thick paper 1/2/3/4, OHP transparencies, postcards, label sheets: 20 sheets; envelopes: 10 sheets; banner paper: 10 sheets
Print output tray capacity	Plain paper: 250 sheets Thick paper: 10 sheets OHP transparencies: 1 sheet
Warm-up time	The time from when the power switch is turned on, until the machine is ready to begin making prints (at room temperature 73.4 °F (23 °C)). 75 seconds or less
Image loss width	Leading edge: 3/16 (4.2 mm); trailing edge: 1/8 (3 mm); rear edge: 1/8 (3 mm); front edge: 1/8 (3 mm)
First Print time	5.9 seconds or less (monochrome and 8-1/2 × 11 (A4) paper)
Print speed	Full color: 35 ppm (single-sided), 35 sides/min. (double-sided) Black: 35 ppm (single-sided), 35 sides/min. (double-sided) (when printing on 8-1/2 × 11  (A4  ))
RAM	1,024 MB
Hard disk	60 GB
Interface	Ethernet port (1,000Base-T/100Base-TX/10Base-T) USB 2.0
Frame type	Ethernet 802.2 Ethernet 802.3 Ethernet II Ethernet SNAP

Specifications		
Supported protocols		TCP/IP (IPv4/IPv6), BOOTP, ARP, ICMP, DHCP, AutoIP, SNMP, LPR/LPD, RAW Socket, SMB over TCP/IP, IPP, HTTP, POP, SMTP, LDAP, NTP, SSL, IPX/SPX, AppleTalk, Bonjour, NetBEUI, DPWS, IPsec, DNS, DynamicDNS
Printer language		PCL5e/c Emulation PCL XL ver 2.1 Emulation PostScript 3 Emulation (3016) XPS ver.1.0
Operating environment conditions		Temperature 50 to 86 °F (10 to 30 °C) Humidity 15% to 85% RH
Resolution	Data processing	600 × 600 dpi
	Printing	1800 dpi equivalent × 600 dpi
Printer fonts		<PCL> Latin 80 Fonts <Postscript 3 Emulation> Latin 137 Fonts
Compatible computers		IBM PC or compatible, and Macintosh (PowerPC or Intel Processor) (Intel Processor is Mac OS X 10.4 only)
Printer driver	Konica Minolta PCL Driver (PCL driver)	Windows NT Workstation /Server Version4.0 (Service Pack 6 or later) Windows 2000 Professional /Server (Service Pack 3 or later) Windows XP Home Edition/Professional, Windows XP Professional x64 Edition Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise x64 Edition Windows Server 2003 Standard Edition, Windows Server 2003 x64 Edition
	Konica Minolta PostScript Driver (PS driver)	Windows 2000 Professional /Server (Service Pack 3 or later) Windows XP Home Edition/Professional, Windows XP Professional x64 Edition Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise, Windows Vista Home Basic/Home Premium/Ultimate/Business/Enterprise x64 Edition Windows Server 2003 Standard Edition, Windows Server 2003 x64 Edition
	PostScript PPD driver (PS-PPD)	Mac OS 9.2 or later Mac OS X 10.2.8, Mac OS X 10.3, or Mac OS X 10.4 (Intel Processor for Mac OS X 10.4 only)
Utility		PageScope Web Connection Compatible Web browsers: Microsoft Internet Explorer Ver. 6 or later (JavaScript and Cookies enabled) Netscape Navigator Ver. 7.02 or later (JavaScript and Cookies enabled) Mozilla Firefox Ver. 1.0 or later (JavaScript and Cookies enabled) Adobe® Flash® (Plug-in Ver. 7.0 or later required if "Flash" is selected as the display format)
Operating environment for MetaFrame		The operation of this driver has been confirmed only in the following environments. Server OS: Windows 2000 Advanced server/ Windows 2003 Enterprise Server MetaFrame: Citrix® MetaFrame® Presentation Server 3.0 Citrix® MetaFrame® Presentation Server 4.0 Client OS: Windows 2000/Windows XP ICAClient: ICA32bit * For operating in an environment other than those described, contact your service representative.
Power requirements		AC120 V, 12 A, 60 Hz AC220-240 V, 8 A, 50/60 Hz
Power consumption		1,500 W or less
Dimensions		25-1/4 (W) × 27-3/4 (D) × 25 (H) (643 mm (W) × 708 mm (D) × 637 mm (H))
Space requirements*5		When finisher FS-519 and saddle stitcher are installed 65-3/4 (W) × 46 (D) (1668 mm (W) × 1178 mm (D)) When finisher FS-608 is installed 67-3/4 (W) × 46 (D) (1719 mm (W) × 1178 mm (D))
Weight		Approx. 174 lb (79 kg)

\*1 5-1/2 × 8-1/2  can be used with the North American (inch) model only.

\*2 A5  can be used with the European (metric) model only.

\*3 There are five Foolscap sizes: 220 × 330 mm , 8-1/2 × 13 , 8-1/4 × 13 , 8-1/8 × 13-1/4  and 8 × 13 . Any one of these sizes can be selected. For details, contact your service representative.

\*4 12 × 18 is equivalent to 304.8 mm × 457.2 mm, which is one size larger than A3.

\*5 The indicated space requirements represent the space required to open the paper trays.

In order to incorporate improvements, these product specifications are subject to change without notice.

### 13.1.2 Automatic duplex unit

Specifications	
Paper types	Plain paper 17 lb to 24 lb (64 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 1 24-1/4 lb to 40 lb (91 g/m <sup>2</sup> to 150 g/m <sup>2</sup> ), thick paper 2 40-1/4 lb to 55-1/2 lb (151 g/m <sup>2</sup> to 209 g/m <sup>2</sup> ), thick paper 3 55-3/4 lb to 68 lb (210 g/m <sup>2</sup> to 256 g/m <sup>2</sup> )
Paper sizes	12 × 18 <sup>*1</sup> to 5-1/2 × 8-1/2 <sup>□</sup> , 12-1/4 × 18 <sup>□</sup> , A3 <sup>□</sup> to A5 <sup>□/□</sup> , 8 × 13 <sup>□</sup> <sup>*2</sup> , 8K <sup>□</sup> , 16K <sup>□/□</sup> Width: 5-1/2 to 12-1/4 (139.7 mm to 311.1 mm); length: 5-3/4 to 18 (148 mm to 457.2 mm)
Power requirements	Supplied from main unit

\*1 12 × 18 is equivalent to 304.8 mm × 457.2 mm, which is one size larger than A3.

\*2 There are five Foolscap sizes: 220 × 330 mm <sup>□</sup>, 8-1/2 × 13 <sup>□</sup>, 8-1/4 × 13 <sup>□</sup>, 8-1/8 × 13-1/4 <sup>□</sup> and 8 × 13 <sup>□</sup>. Any one of these sizes can be selected. For details, contact your service representative.

### 13.1.3 Paper feed cabinet PC-104

Specifications	
Paper types	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ) Thick paper 1 24-1/4 lb to 40 lb (91 g/m <sup>2</sup> to 150 g/m <sup>2</sup> ) Thick paper 2 40-1/4 lb to 55-1/2 lb (151 g/m <sup>2</sup> to 209 g/m <sup>2</sup> ) Thick paper 3 55-3/4 lb to 68 lb (210 g/m <sup>2</sup> to 256 g/m <sup>2</sup> )
Paper sizes	11 × 17 <sup>□</sup> to 8-1/2 × 11 <sup>□/□</sup> , 5-1/2 × 8-1/2 <sup>□</sup> <sup>*1</sup> , A3 <sup>□</sup> to B5 <sup>□/□</sup> , A5 <sup>□</sup> <sup>*2</sup> , 8 × 13 <sup>□</sup> <sup>*3</sup> , 16K <sup>□</sup> , 18K <sup>□</sup>
Tray paper capacity	Tray 3; Plain paper: 500 sheets, thick paper 1/2/3: 150 sheets
Power requirements	Supplied from main unit
Power consumption	Less than 15 W
Dimensions	23-1/2 (W) × 22-3/4 (D) × 11-3/4 (H) (600 mm (W) × 578 mm (D) × 301 mm (H))
Weight	Approx. 52-3/4 lb (24 kg)
Unit structure	1 paper tray

\*1 5-1/2 × 8-1/2 <sup>□</sup> can be used with the North American (inch) model only.

\*2 A5 <sup>□</sup> can be used with the European (metric) model only.





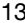
\*3 There are five Foolscap sizes: 220 × 330 mm <sup>□</sup>, 8-1/2 × 13 <sup>□</sup>, 8-1/4 × 13 <sup>□</sup>, 8-1/8 × 13-1/4 <sup>□</sup> and 8 × 13 <sup>□</sup>. Any one of these sizes can be selected. For details, contact your service representative.

### 13.1.4 Paper feed cabinet PC-204



Specifications	
Paper types	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ) Thick paper 1 24-1/4 lb to 40 lb (91 g/m <sup>2</sup> to 150 g/m <sup>2</sup> ) Thick paper 2 40-1/4 lb to 55-1/2 lb (151 g/m <sup>2</sup> to 209 g/m <sup>2</sup> ) Thick paper 3 55-3/4 lb to 68 lb (210 g/m <sup>2</sup> to 256 g/m <sup>2</sup> )
Paper sizes	11 × 17 <sup>□</sup> to 8-1/2 × 11 <sup>□/□</sup> , 5-1/2 × 8-1/2 <sup>□</sup> <sup>*1</sup> , A3 <sup>□</sup> to B5 <sup>□/□</sup> , A5 <sup>□</sup> <sup>*2</sup> , 8 × 13 <sup>□</sup> <sup>*3</sup> , 16K <sup>□</sup> , 18K <sup>□</sup>
Tray paper capacity	Upper tray (Tray 3); Plain paper: 500 sheets, thick paper 1/2/3: 150 sheets Lower tray (Tray 4); Plain paper: 500 sheets, thick paper 1/2/3: 150 sheets
Power requirements	Supplied from main unit
Power consumption	Less than 15 W
Dimensions	23-1/2 (W) × 22-3/4 (D) × 11-3/4 (H) (600 mm (W) × 578 mm (D) × 301 mm (H))
Weight	Approx. 61-3/4 lb (28 kg)
Unit structure	2 paper trays

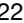\*1 5-1/2 × 8-1/2 <sup>□</sup> can be used with the North American (inch) model only.




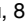
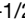

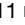
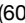
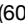






\*2 A5  can be used with the European (metric) model only.

\*3 There are five Foolscap sizes: 220 × 330 mm , 8-1/2 × 13 , 8-1/4 × 13 , 8-1/8 × 13-1/4  and 8 × 13 . Any one of these sizes can be selected. For details, contact your service representative.



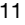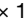




### 13.1.5 Paper feed cabinet PC-405

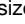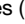Specifications	
Paper types	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ) Thick paper 1 24-1/4 lb to 40 lb (91 g/m <sup>2</sup> to 150 g/m <sup>2</sup> ) Thick paper 2 40-1/4 lb to 55-1/2 lb (151 g/m <sup>2</sup> to 209 g/m <sup>2</sup> ) Thick paper 3 55-3/4 lb to 68 lb (210 g/m <sup>2</sup> to 256 g/m <sup>2</sup> )
Paper sizes	8-1/2 × 11  , A4 
Tray paper capacity	Plain paper: 2,500 sheets, thick paper 1/2/3: 1,000 sheets
Power requirements	Supplied from main unit
Power consumption	Less than 45 W
Dimensions	23-1/2 (W) × 22-3/4 (D) × 11-3/4 (H) (600 mm (W) × 578 mm (D) × 301 mm (H))
Weight	Approx. 61-3/4 lb (28 kg)







### 13.1.6 Finisher FS-519

Specifications	
Finishing trays	Finishing tray 1, finishing tray 2
Feed settings	"Sort (each set of prints)", "Group (each page of prints)", "Offset/Sort", "Offset/Group", and "Staple"
Paper types	Finishing tray 1, finishing tray 2: "Sort", "Group": Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 72 lb (91 g/m <sup>2</sup> to 271 g/m <sup>2</sup> ), OHP, postcards, envelopes, label sheets, letter heads "Offset /Sort", "Offset /Group": Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 72 lb (91 g/m <sup>2</sup> to 271 g/m <sup>2</sup> ) "Staple" settings: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 55-1/2 (91 g/m <sup>2</sup> to 209 g/m <sup>2</sup> )
Paper sizes	11 × 17  , 8-1/2 × 11  , 5-1/2 × 8-1/2  , 12-1/4 × 18  , A3  to B6  , A6 
Paper capacity	Output tray 1: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ): 200 sheets Thick paper 24-1/4 lb to 72 lb (91 g/m <sup>2</sup> to 271 g/m <sup>2</sup> ), OHP, postcards, envelopes, or label sheets, letterheads: 20 sheets Output tray 2: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ): 1,000 sheets of 8-1/2 × 11  (A4  ) or smaller, or 500 sheets of 8-1/2 × 14  (B4  ) or larger Thick paper 24-1/4 lb to 72 lb (91 g/m <sup>2</sup> to 271 g/m <sup>2</sup> ), OHP, postcards, envelopes, or label sheets, letterheads: 20 sheets
Amount of shift	1-1/4 (30 mm)
Staple settings	Paper sizes (no. of bound pages): 11 × 17  to 8-1/2 × 11  , A3  to A5  (Plain paper: 2 sheets to 50 sheets)
Power requirements	Supplied from main unit
Power consumption	Less than 66 W
Dimensions	13-3/4 (W) × 18-1/2 (D) × 22-1/2 (H) (352 mm (W) × 471 mm (D) × 573 mm (H)) When the tray is pulled out: 17-1/4 (435 mm) (W)
Weight	Approx. 73-1/4 lb (33.2 kg)
Consumables	Staples SK-602 (containing 5,000 staples) × 1

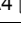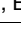

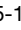
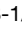



### 13.1.7 Punch kit PK-515

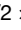Specifications	
Punched holes	2, 3, 4
Paper types	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 68 lb (91 g/m <sup>2</sup> to 256 g/m <sup>2</sup> )
Paper sizes	2-hole: 11 × 17  to 8-1/2 × 11  3-hole: 11 × 17  8-1/2 × 11  4-hole: A3  A4  B5 
Power requirements	Supplied from finisher
Dimensions	4-1/2 (W) × 18-1/4 (D) × 4-1/4 (H) (114 mm (W) × 461 mm (D) × 106 mm (H))
Weight	Approx. 4-1/4 lb (1.9 kg)

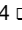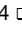

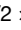


### 13.1.8 Saddle stitcher SD-505

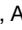Specifications	
Number of bins	1 bin
Paper types	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 55-1/2 lb (91 g/m <sup>2</sup> to 209 g/m <sup>2</sup> )
Paper sizes	11 × 17  8-1/2 × 11  A3  B4  A4  B5 
Paper capacity	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ): Maximum 200 sheets or 20 sets
Staple settings	Number of bound pages: 2 to 15 sheets
Dimensions	17-1/2 (W) × 18-3/4 (D) × 8 (H) (445 mm (W) × 478 mm (D) × 203 mm (H)) When the tray is pulled out: 22-3/4 (576 mm) (W) × 11 (281 mm) (H)
Weight	16-1/4 lb (7.4 kg)
Consumables	MS-2C cartridge (for 2,000) × 1
Power requirements	Supplied from finisher



































### 13.1.9 Output tray OT-602

Specifications	
Number of bins	1 bin
Paper type	Finishing tray 1, finishing tray 2: "Sort", "Group": Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 72 lb (91 g/m <sup>2</sup> to 271 g/m <sup>2</sup> ), OHP, postcards, envelopes, label sheets, letter heads "Offset /Sort", "Offset /Group": Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 72 lb (91 g/m <sup>2</sup> to 271 g/m <sup>2</sup> ) "Staple" settings: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 55-1/2 (91 g/m <sup>2</sup> to 209 g/m <sup>2</sup> )
Paper size	11 × 17  8-1/2 × 11  5-1/2 × 8-1/2  12-1/4 × 18  A3  to B6  A6 
Paper capacity	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ): 200 sheets Thick paper 24-1/4 lb to 72 lb (91 g/m <sup>2</sup> to 271 g/m <sup>2</sup> ), postcards, envelopes, OHP, or label sheets, letterheads: 20 sheets
Dimensions	11 (W) × 14-1/2 (D) × 2-1/4 (H) (282 mm (W) × 368 mm (D) × 57 mm (H))
Weight	1-1/2 lb (0.7 kg)

### 13.1.10 Mailbin kit MT-502

Specifications	
Number of bins	4 bins
Paper types	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> )
Paper sizes	8-1/2 × 11  , 5-1/2 × 8-1/2  , A4  , B5  , A5 
Paper capacity	Maximum 125 sheets per bin
Dimensions	13-1/2 (W) × 20 (D) × 15-1/4 (H) (340 mm (W) × 509 mm (D) × 387 mm (H))
Weight	Approx. 17-1/2 lb (8 kg) (unit weight)
Power requirements	Supplied from finisher

### 13.1.11 Finisher FS-609

Specifications	
Output trays	Output tray 1, output tray 2
Settings	Normal settings: "Group", "Sort", "Offset/Group", "Offset/Sort", "Offset/Staple", and "Saddle Staple"
Paper types	Output tray 1: "Group/Sort" setting: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 68 lb (91 g/m <sup>2</sup> to 256 g/m <sup>2</sup> ), envelopes, OHP, label sheets "Offset/Sort" setting, "Offset/Group" setting: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ) Staple: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ) Output tray 2: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> )
Paper sizes	Output tray 1: "Group" setting: 11 × 17  , 5-1/2 × 8-1/2  , 12 × 18  , A3  to B5  "Sort" setting: 11 × 17  , 5-1/2 × 8-1/2  , A3  to A5  "Staple" setting: 11 × 17  , 8-1/2 × 11  , A3  to A5  Output tray 2: 11 × 17  , 8-1/2 × 11  , A3  , B4  , A4 
Paper capacity	Output tray 1: Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ): 1,000 sheets of 8-1/2 × 11  (A4  ) size paper or smaller, or 500 sheets of 8-1/2 × 14  (B4  ) size paper or larger Thick paper 24-1/4 lb to 68 lb (91 g/m <sup>2</sup> to 256 g/m <sup>2</sup> ), envelopes, OHP, label sheets: 20 sheets Output tray 2: 10 prints (6 to 15 bound pages)* 20 prints (2 to 5 bound pages)
Amount of shift	13/16 (20 mm)
Staple settings	Output tray 1: Paper sizes (no. of bound pages): 8-1/2 × 11  (A4  , B5  ) (2 to 50 pages), 11 × 17  , 8-1/2 × 14  (A3  , B4  ) (2 to 25 pages) Output tray 2: Paper sizes (no. of bound pages): 11 × 17  , 8-1/2 × 11  (A3  , B4  , A4  ) (2 to 15 pages)
Power requirements	Supplied from main unit
Power consumption	Less than 65 W
Dimensions	23-1/4 (W) × 23-3/4 (D) × 38-3/4 (H) (601 mm (W) × 603 mm (D) × 933 mm (H))
Weight	Approx. 92-1/2 lb (4.2 kg) (including the horizontal transport unit)
Consumables	Staples MS-5D (5,000 staples for stapling 50 sheets) × 1

\* The number of pages that can be bound together differs depending on the paper weight. If 17 lb (64 g/m<sup>2</sup>) paper is used, 6 to 15 pages can be bound together. If 21-1/4 lb (80 g/m<sup>2</sup>) paper is used, 6 to 10 pages can be bound together.

### 13.1.12 Punch kit PK-501

Specifications	
Number of punched holes	2, 3, 4

Specifications	
Paper types	Plain paper 16 lb to 24 lb (60 g/m <sup>2</sup> to 90 g/m <sup>2</sup> ), thick paper 24-1/4 lb to 55-1/2 lb (91 g/m <sup>2</sup> to 209 g/m <sup>2</sup> )
Power requirements	Supplied from finisher
Dimensions	3-1/2 (W) × 22 (D) × 6-3/4 (H) (90 mm (W) × 560 mm (D) × 170 mm (H))
Weight	Approx. 16-1/2 lb (3 kg)

---

**14**

**Authentication unit  
(Biometric type AU-101)**

## 14 Authentication unit (Biometric type AU-101)

### 14.1 Safety information

#### 14.1.1 Important information

When using the authentication unit (biometric type), observe the following precautions in addition to the safety information in the Quick Guide.

- Authentication unit (biometric type) is optional. It is sold or permitted to use as it is.
- This product is designed, manufactured and intended for general business use. Do not use it for applications requiring high reliability and which may have an extreme impact on lives and property. (Applications requiring high reliability: Chemical plant management, medical equipment management and emergency communications management)
- Use with other authentication devices is not guaranteed.
- In order to incorporate improvements in the product, the specifications concerning this product are subject to change without notice.

#### 14.1.2 For safe use

When using the authentication unit (biometric type), observe the following precautions.

- Do not use this product near water, otherwise it may be damaged.
- Do not cut, damage, modify or forcefully bend the USB cable. A malfunction may occur as a result of a damaged or cut USB cable.
- Do not disassemble this device, otherwise it may be damaged.

#### 14.1.3 Regulation notices

##### USER INSTRUCTIONS FCC PART 15 - RADIO FREQUENCY DEVICES (For U.S.A. Users)

FCC: Declaration of Conformity

Product Type	Authentication Unit (Biometric Type)
Product Name	AU-101

This device complies with Part 15 of the FCC Rules  
Operation is subject to the following two conditions:

- This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.



##### Note

*This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.*

*These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

*Reorient or relocate the receiving antenna.*

*Increase the separation between the equipment and receiver.*

*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*

*Consult the dealer or an experienced radio/TV technician for help*


##### WARNING

The design and production of this unit conform to FCC regulations, and any changes or modifications must be registered with the FCC and are subject to FCC control. Any changes made by the purchaser or user without first contacting the manufacturer will be subject to penalty under FCC regulations.

## 14.2 Product features

This device is a biometric authentication system that performs user authentication by scanning vein patterns in a finger. Print job operations can be authenticated with finger vein patterns when using machines with user authentication settings specified.

14.3 Part names and their functions

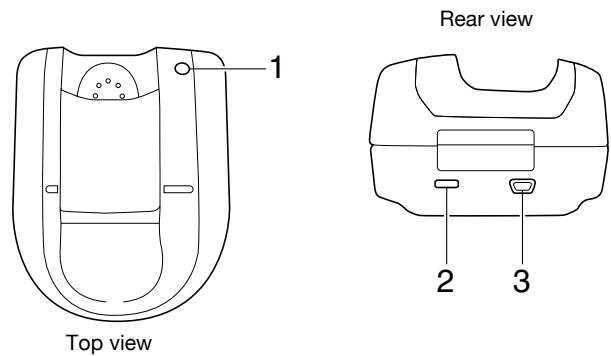

No.	Part name	Description
1	Status indicator	Indicates this device's status.
2	Security slot	Used for connecting the security cable to prevent thefts. (complies with the security cable standards of the Kensington Computer Products Group)
3	USB port (type mini-B)	Used to connect a USB cable (mini-B plug).

The status of this device is indicated by a status indicator and tone.

Status indicator	Device status
Lit (green)	Standing by/authentication completed
Flashing (green)	Authenticating/scanning
Lit (red)	Authentication failed/scanning failed
Off	This device is not detected.

Tone	Device status
One short beep	Starting to scan
One short beep	Retrying after authentication failed
One short beep	Authentication completed
Two short beeps	Authentication failed

## 14.4 Using authentication unit (Biometric type) AU-101

In order to use this device, user finger vein patterns must first be registered with the machine. A registered user can print a print job after completing authentication with their finger vein patterns. The following procedures describe how to specify the necessary settings on the machine and register users.



### Note

*Align the index finger with the indentation and notch in the scanner, and then position the finger so that the tip lightly touches the edge of the scanner. Place your thumb and middle finger down to hold this device in place on both sides, and avoid moving the index finger being used for authentication.*




### Reminder

*Do not place any object other than your finger in the scanner of this device while scanning, otherwise the device may malfunction.*


*Do not disconnect the cable connecting the device to the computer while scanning, otherwise the system may become unstable.*

### 14.4.1 Positioning your finger

- 1 Lightly stretch out your fingers, and then position the finger to be registered or authenticated on this device.

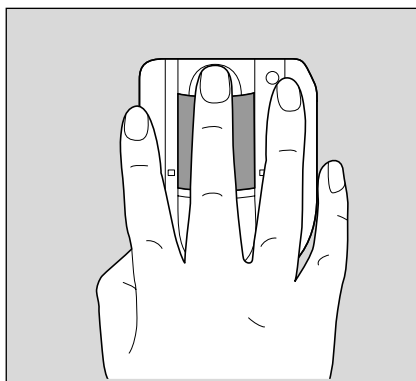


- 2 Align the tip of the finger with the notch, and lightly position the finger so that the tab can be felt at the tip of the finger.

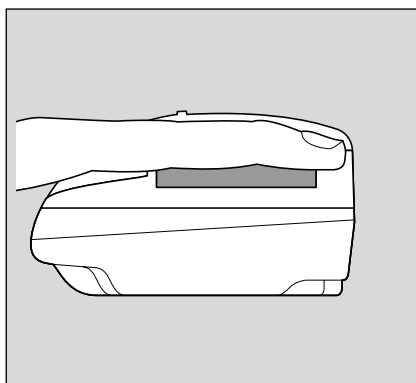

### Note


*If registration or authentication is not possible, check for the following. Remove the finger from this device, and then reposition it correctly.*

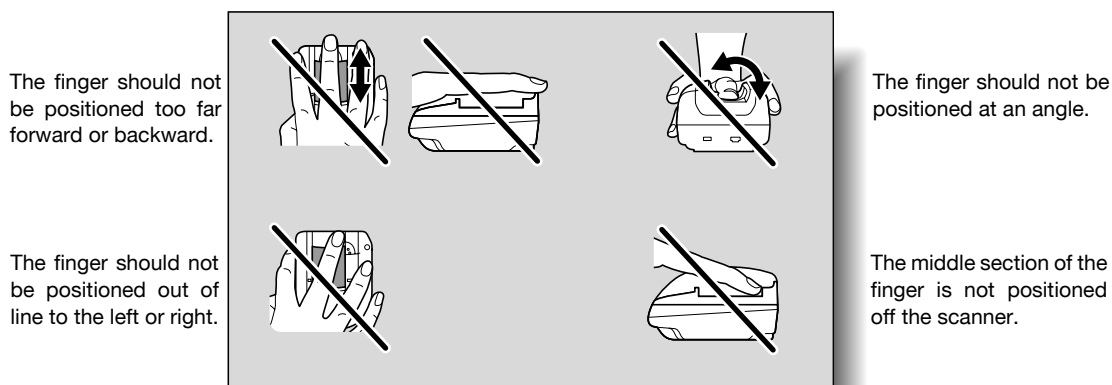


#### 14.4.2 Machine settings

To use the authentication unit (biometric type), an optional HDD and local interface kit must be installed.


- 1 From the "Main Menu" on the control panel, display the Admin. Settings screen.
  - For details on displaying the Admin. Settings screen, refer to ["Operations for changing numeric values" on page 8-4.](#)

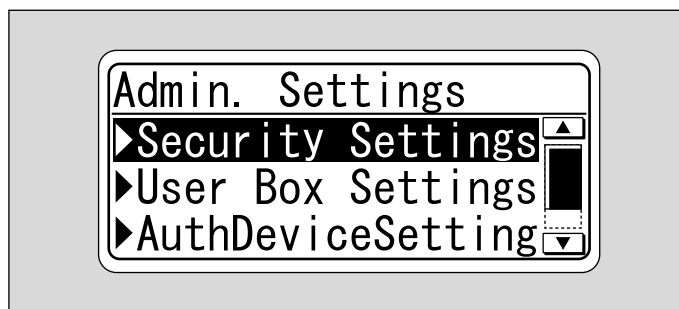


- 2 From the Auth Device Setting screen, select "Bio Auth. Setting", and then press the [Menu/Select] key.

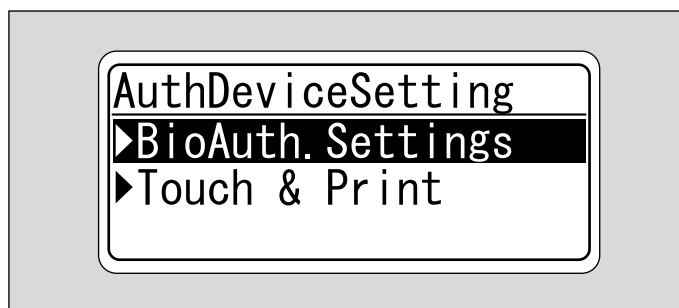


- 3 Specify the settings for "Beep Sound" and "Operation Setting".

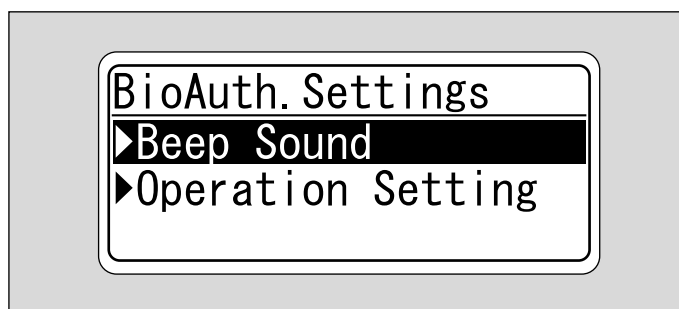

- For "Beep Sound", specify whether or not to raise an electric sound when scan of the vein patterns in the finger is successfully completed.

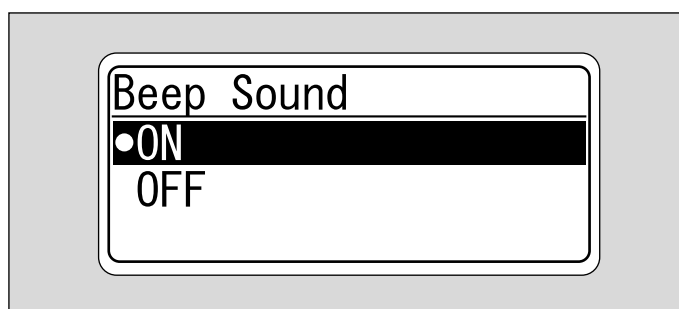


- For "Operation Setting", specify the print method after registration.

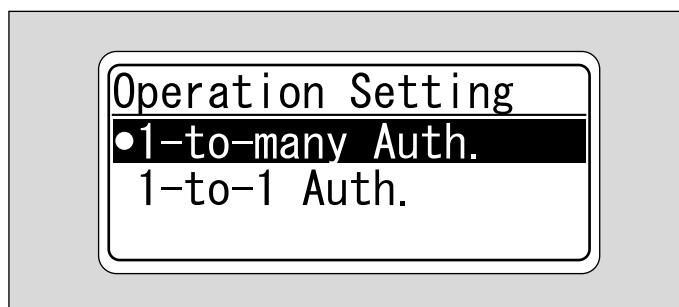


1-to-many Auth.: Documents can be printed by specifying the user name and password in the printer driver, and placing the finger on the authentication unit.

1-to-1 Auth.: Documents can be printed if the specified user name and password in the printer driver are correct. If "1-to-1 Auth." is selected, the Touch & Print function cannot be used.


- 4 Press the [◀] key twice.  
The Auth Device Setting screen appears again.
- 5 Select [Touch & Print], and then press the [Menu/Select] key.

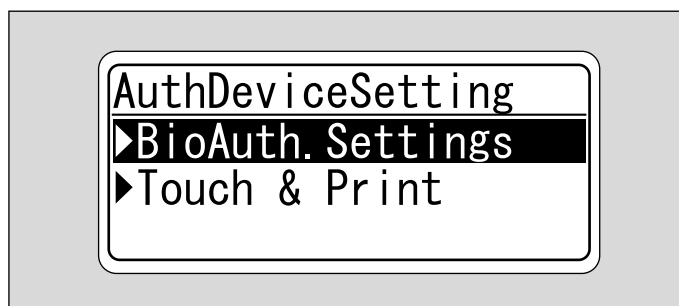


## 6 Specify the settings for "Touch & Print User Box" and "Print".

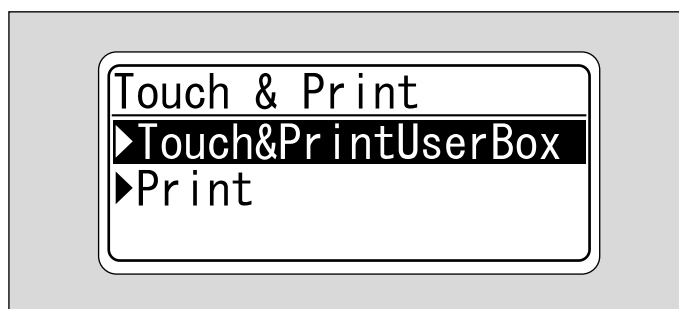

- If "OFF" is selected for "Touch & Print User Box", the Touch & Print function cannot be used.
- If "ON" is selected for "Touch & Print User Box", "1-to-1 Auth." cannot be selected.

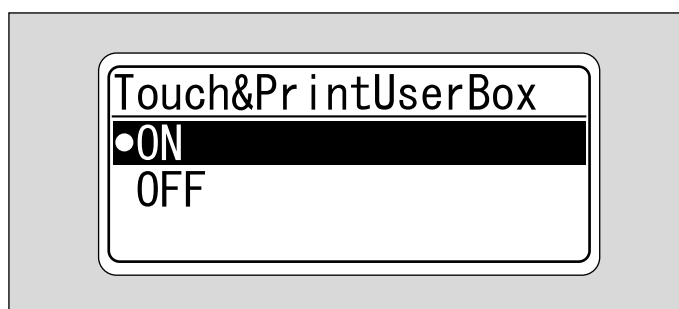

- For "Print", specify the printing method for the Touch & Print function.

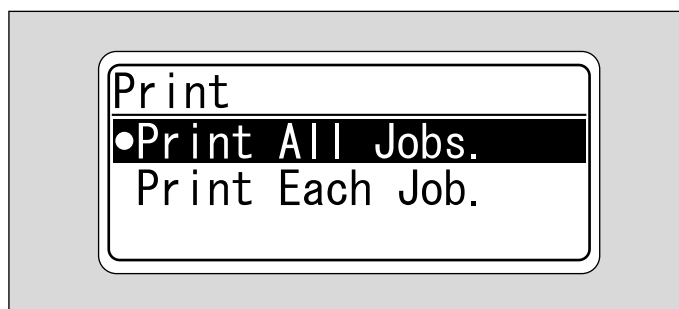

Print All Jobs.:Select this setting to print all documents after completed authentication once when multiple documents are saved in the Touch & Print user box.

Print Each Job.:Select this setting to print one document saved in the Touch & Print user box each time authentication is completed.

### 14.4.3 Registering users

To register users, connect this machine to a computer, and use PageScope Data Administrator.



#### Detail

*Registered user data is stored on the hard disk of the machine. If the user authentication method on the machine is changed or the hard disk is reformatted, the registered user data is erased.*



...

#### Note

*In order to use PageScope Data Administrator, settings must be specified on the machine and the setup procedure must be performed. The setup procedure includes installing this device's BioDriver(USB-Driver), then installing PageScope Data Administrator Bio Plugin.*

**Reminder**


*PageScope Data Administrator ver. 3.0 or later must first be installed on the computer. For details on the operating environment and installation procedure for PageScope Data Administrator, refer to the User's Guide for the PageScope Data Administrator.*

**Setup**


- 1 Turn off the machine with the power switch, and then disconnect this device from the machine.
- 2 Install BioDriver(USB-Driver).  
Plug the cable from this device into the USB port on the computer.  
The Found New Hardware Wizard starts.
- 3 Select "Yes, now and every time I connect a device", and then click [Next].



- 4 Insert the application CD-ROM included with this device into the CD-ROM drive of the computer.
- 5 Select "Install from a list or specific location (Advanced)", and then click [Next].

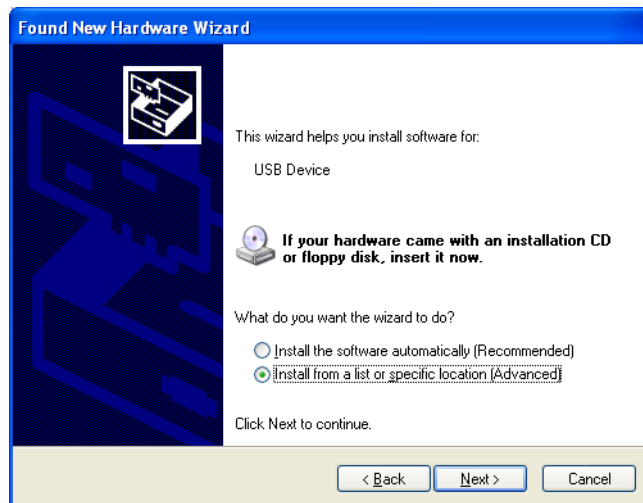


- 6 Select the "Include this location in the search" check box, check that the application CD-ROM appears as a location to be searched, and then click [Next].

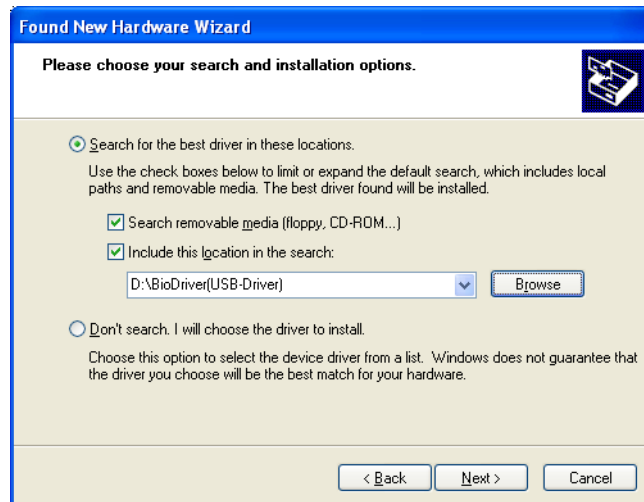

- If the application CD-ROM does not appear as a location to be searched for the driver, click [Browse], select the BioDriver (USB-Driver) folder on the CD-ROM, and then click [OK].




The installation begins.

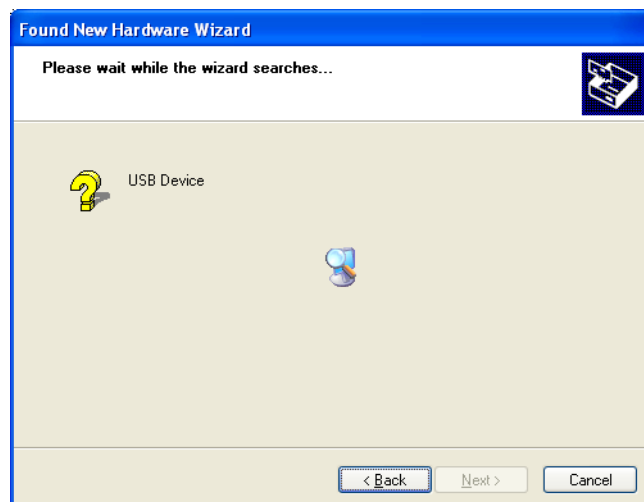

- 7 Click [Finish].




- 8 Repeat steps 5 through 7.  
The installation of BioDriver (USB-Driver) is completed.
- 9 Install PageScope Data Administrator Bio Plugin.  
Open the DA\_Bio\_Plugin folder on the application CD-ROM, and then click "setup.exe".
- 10 Select the language, and then click [OK].

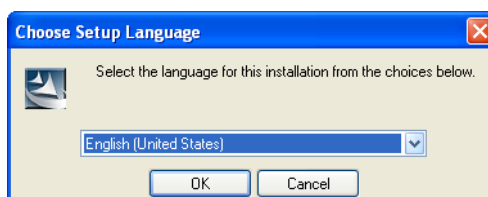

The installer starts up.


- 11 Follow the instructions that appear on the screen to complete the installation.
- 12 Click [Next].

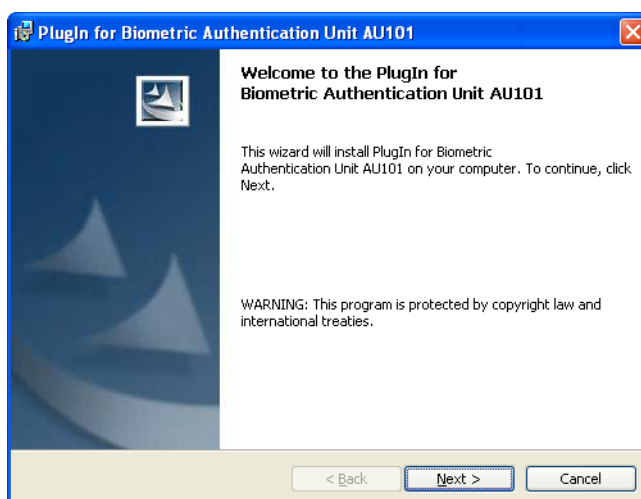


- 13 Select "I accept the terms of the license agreement", and then click [Next].



- 14 Click [Install].

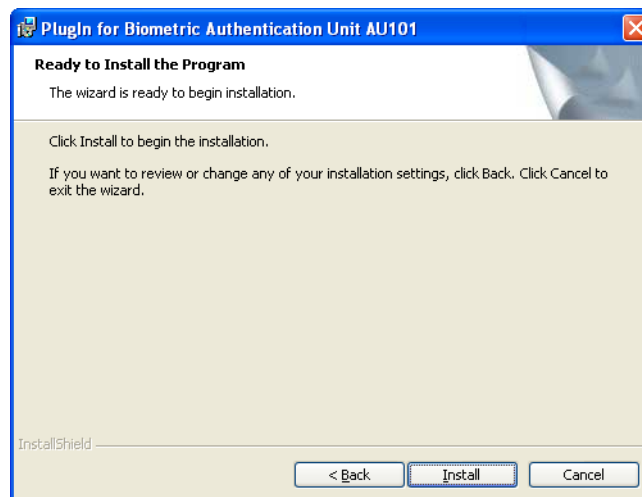

- 15 Click [Finish].

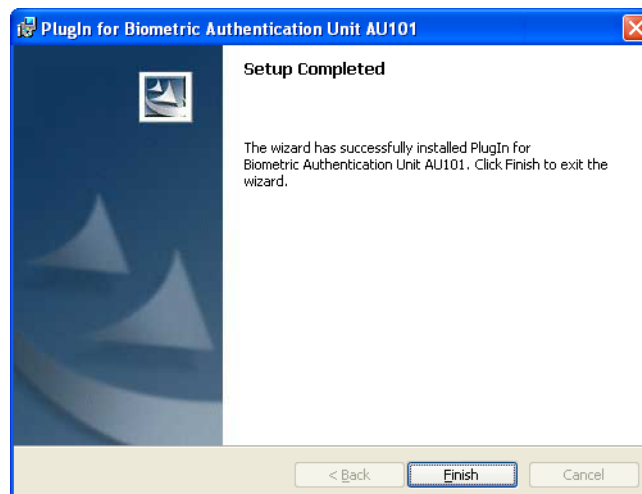


PageScope Data Administrator Bio Plugin is installed, and the setup is completed.

## Registering users



### Detail

*In order to register users with PageScope Data Administrator, this device must be connected to the USB port of the computer, and the computer and the machine must be connected over a network.*

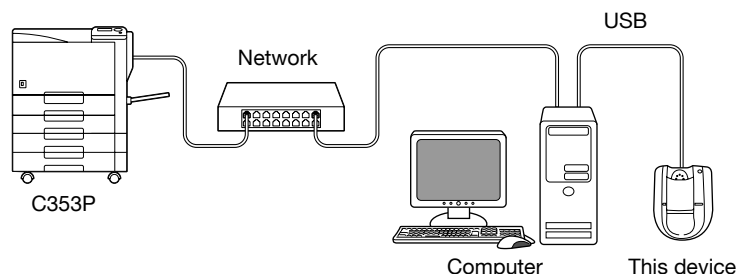

### Note

*When the machine is turned off, then on again with the power switch, wait at least 10 seconds to turn the machine on after turning it off. The machine may not operate correctly if it is turned on immediately after being turned off.*

*Hold the plug when plugging and unplugging the USB cable, otherwise the cable may be damaged.*



### Reminder

*Do not connect other USB devices to the same port where this device is connected. If enough USB power is not provided, this device may not operate correctly.*


*When using a USB hub, be sure to use a self-powered USB hub that can provide 500 mA or more.*

*After connecting this device, wait at least 5 seconds before operating it.*

- 1** If this device is connected to the machine, turn off the machine with the power switch, and then disconnect this device.
  - If this device is connected to the computer, continue with step 4.
- 2** Turn on the machine with the power switch.
- 3** Connect this device to the USB port of the computer installed with PageScope Data Administrator.
- 4** Start up PageScope Data Administrator, and then import the device information for the machine.
  - For details on importing the device information, refer to the User's Guide for PageScope Data Administrator.




- 6 Select a template, and then click [OK].

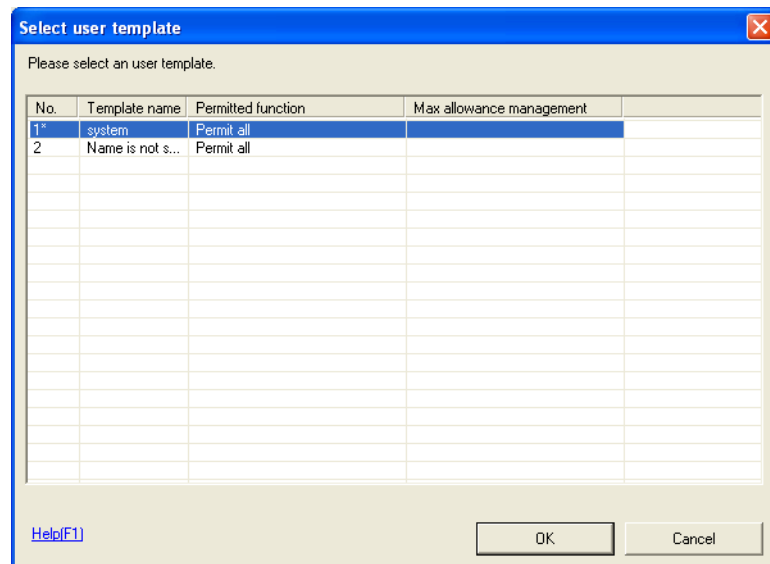


The User settings dialog box appears.

- 7 Type in the user name and password, click the Vein Authentication tab, and then click [Import].
- If desired, type in the e-mail address.

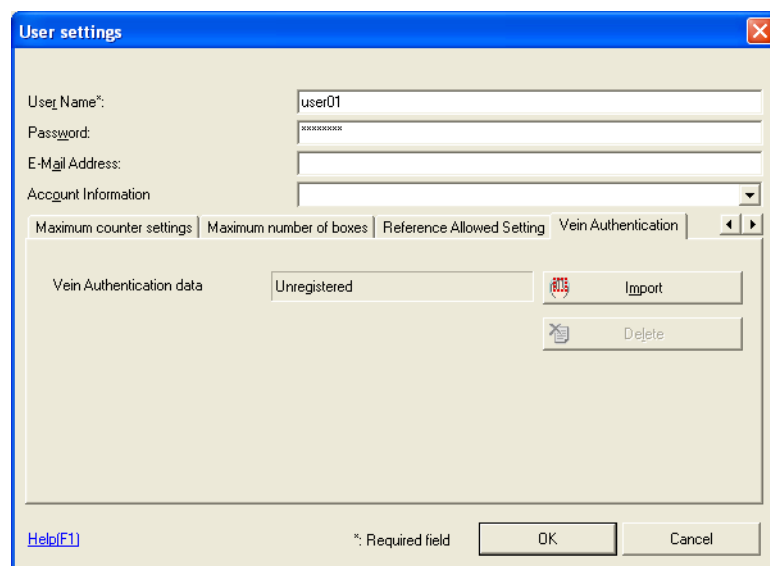

- 8 Position the finger on this device, and then click [Start reading].

- Scan the finger vein pattern three times, removing and repositioning the same finger each time.

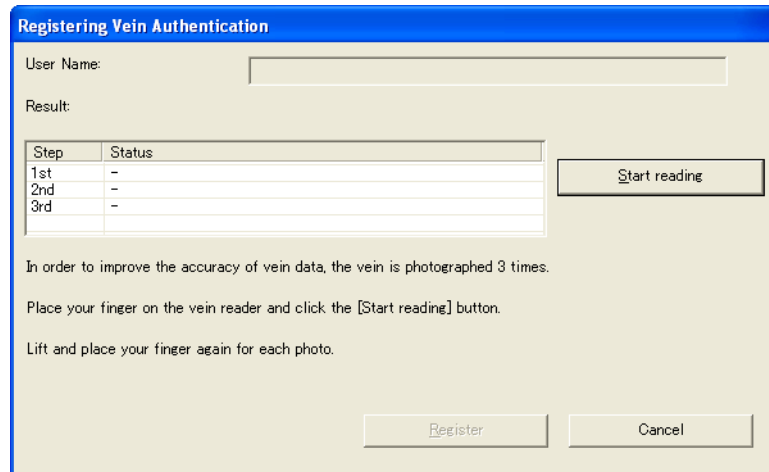

**Registering Vein Authentication**

User Name:

Result:

Step	Status
1st	-
2nd	-
3rd	-

In order to improve the accuracy of vein data, the vein is photographed 3 times.


Place your finger on the vein reader and click the [Start reading] button.

Lift and place your finger again for each photo.

9 Click [Register].

10 Click [OK].

- Repeat steps 5 through 10 until all users have been registered.

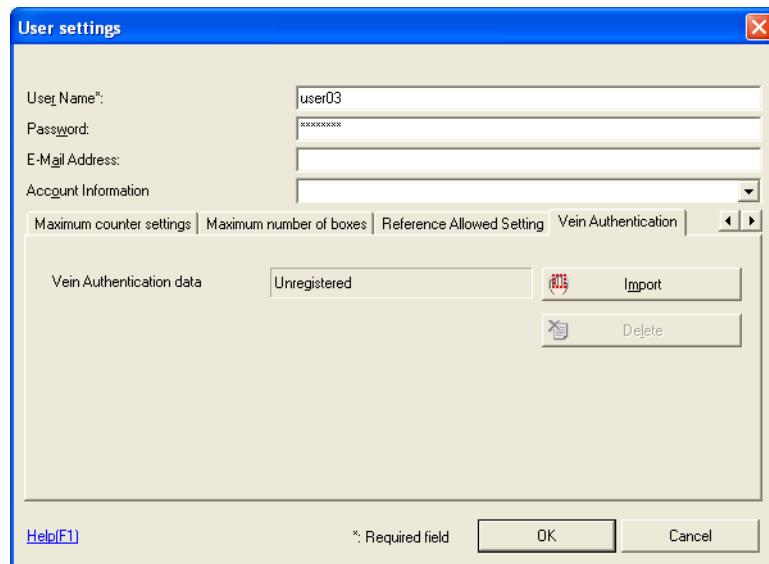

**User settings**

User Name\*:

Password:

E-Mail Address:


Account Information:

Maximum counter settings | Maximum number of boxes | Reference Allowed Setting | **Vein Authentication**

Vein Authentication data:


[Help\(F1\)](#) \*: Required field

# 11 Click [Export to the device].

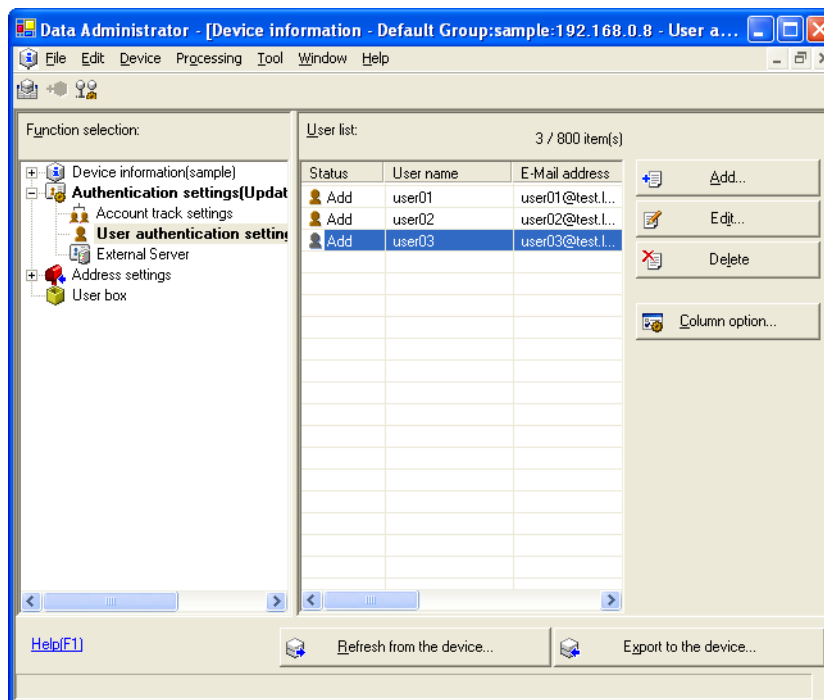


- To change the registered data, select the user name, and then click [Edit].

# 12 Click [Write].

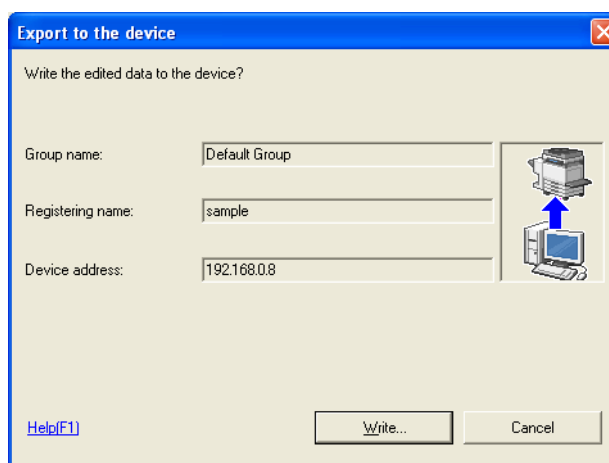

The registered user data is specified on the machine.

# 13 Click [OK].

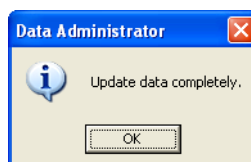

# 14 Disconnect this device from this USB port of the computer.

# 15 Turn off the machine with the power switch, connect this device, and then turn on the machine with the power switch.

**Detail**

*PageScope Data Administrator is equipped with a batch copy feature that allows the registered user data to be specified on multiple machines specified to be used with this device.*



...

**Note**

*When the machine is turned off, then on again with the power switch, wait at least 10 seconds to turn the machine on after turning it off. The machine may not operate correctly if it is turned on immediately after being turned off.*

*Hold the plug when plugging and unplugging the USB cable, otherwise the cable may be damaged.*

## 14.5 Care of authentication unit (Biometric type) AU-101



### Reminder

*Before cleaning this device, disconnect it from the machine. If a force is applied to the USB port, it may be damaged.*

*When cleaning this device, do not allow water to enter the device, otherwise the system may be damaged.*

*Never use organic solvents, such as benzene or alcohol, to clean this device, otherwise it may be damaged.*



### Note

*When disconnecting or connecting this device, turn off the machine with the power switch, and then wait at least 10 seconds before turning it on again. The machine may not operate correctly if it is turned on immediately after being turned off.*

*Hold the plug when plugging and unplugging the USB cable, otherwise the cable may be damaged.*

### Care of the housing


Frequency: Once a month, or when it is dirty

Wipe the housing with a soft, dry cloth. If the housing cannot be cleaned by wiping it, wash it with a cloth dampened with a mild detergent and wrung out well. After the housing is cleaned, rinse the cloth and wring it out well before wiping off the detergent.

### Care of the cover

Frequency: Once a month, or when it is dirty or covered with fingerprints

Clean the scanner with a soft cloth. If it is extremely dirty, remove the dirt before cleaning it.

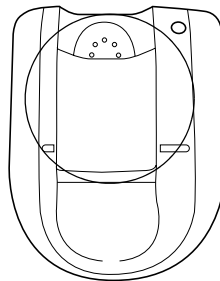

## 14.6 Specifications

Product name		Authentication unit (Biometric type) AU-101
Compatible finger width		3/8 to less than 1 (10 mm to less than 25 mm)
Interface		USB 2.0
Dimensions		Approx. 3 (W) × 3-3/4 (D) × 2-1/4 (H) (78 mm (W) × 95 mm (D) × 55 mm (H))
Weight		Approx. 5/16 lb (150 g) *not including the USB cable
Power consumption		DC 5 V, 500 mA
Environment conditions (when operating)	Temperature	50 to 86 °F (10 to 35 °C)
	Humidity	10 to 80 % (Must be no condensation)
Environment conditions (when not operating)	Temperature	14 to 140 °F (-10 to 60 °C)
	Humidity	10 to 80 % (Must be no condensation)
Computer	Processor	PC/AT compatible, 1 GHz or more
	Memory	128 MB or more
	Hard disk drive	Available hard disk space: 100 MB or more
	Monitor	800 × 600 pixels, 16-bit color or more
	Network	TCP/IP protocol
	Application	Microsoft Internet Explorer 6.0 (Service Pack 1) or later Microsoft .NET Framework (Service Pack 1) or later
	Interface	USB 1.1 or later
Supported operating systems		Windows 2000 Professional (Service Pack 4) Windows XP Professional Edition (Service Pack 2)

## 14.7 Troubleshooting

If a problem occurs while running the system, refer to the following.

Condition	Possible cause	Remedy
The USB cable is connected between this device and the machine, but the status indicator is not lit in green.	The USB port of the machine may be malfunctioning.	Turn the machine off with the power switch and temporarily disconnect the USB cable from this device or the machine before connecting it again and waiting 10 seconds before turning on the machine with the power switch.
The USB cable is connected between this device and the computer, but the status indicator is not lit in green.	The USB port of the computer may be malfunctioning.	Restart the computer.
	Is the driver for this device correctly installed?	Refer to "Registering from Page-Scope Data Administrator", and check if the driver is correctly installed on the computer. (p. 14-8)
A tone does not sound from the machine when scanning begins and when authentication is completed.	Has the tone setting on the machine been set to "OFF"?	Refer to "Registering users", and set the tone setting to "ON". (p. 14-6)
The message "Failed to Auth." appears on the machine.	With this device, the scanning time is limited for each scan. This message appears if scanning is not possible within the limited period of time. For details on the scanning time, consult with the technical representative.	Refer to " <a href="#">Positioning your finger</a> " on <a href="#">page 14-5</a> and check how to position the finger for authentication and scanning in order to complete scanning within the limited period of time. Correctly position the finger to be scanned on the scanner, and do not move the finger until the scanning results are received.
The message "Failed to read data. Place your finger once again and click the [Start reading] button." appears on a computer where registration failed.	With this device, the scanning time is limited to five seconds for each scan. This message appears if scanning is not possible within the five-second time period.	If the area of the finger to be scanned is dirty or chapped, a correct image cannot be created and scanning may not be completed. Wash your hands and try scanning again, or try to correct chapped fingers. If the area of the finger to be scanned is too wide or too thin (outside of the finger width range of 3/8 (10 mm) to 1 (25 mm), a correct image cannot be created and scanning may not be completed. Try widening your finger or inserting it deeper or less deep into the scanner.
Scanning does not begin.	Is the finger correctly positioned?	Refer to " <a href="#">Positioning your finger</a> " on <a href="#">page 14-5</a> and check how to position the finger for authentication and scanning. Correctly position the finger to be scanned on the scanner, and do not move the finger until the scanning results are received. If the area of the finger to be scanned is dirty or chapped, a correct image cannot be created and scanning may not be completed. Wash your hands and try scanning again, or try to correct chapped fingers. If the area of the finger to be scanned is too wide or too thin (outside of the finger width range of 3/8 (10 mm) to 1 (25 mm), a correct image cannot be created and scanning may not be completed. Try widening your finger or inserting it deeper or less deep into the scanner.
	Was the machine restarted after this device was connected to it?	Turn the machine off with the power switch and temporarily disconnect the USB cable from this device or the machine before connecting it again and waiting 10 seconds before turning on the machine with the power switch.

Condition	Possible cause	Remedy
The Add New Hardware Wizard starts when this device is connected to the computer.	Is this device connected to the same USB port used when the driver was installed?	If this device is connected to a USB port different from the one used when the driver was installed, the Add New Hardware Wizard may start. Use the same USB port used when the driver was installed.

If the problem is not corrected after the described operation is performed, contact your technical representative.

---

**15**

**Authentication unit  
(IC card type AU-201)**

## 15 Authentication unit (IC card type AU-201)

### 15.1 Safety information

#### 15.1.1 Important information

When using the authentication unit (IC card type), observe the following precautions in addition to the safety information in the Quick Guide.

- Authentication unit (IC card type) is optional. It is sold or permitted to use as it is.
- This product is designed, manufactured and intended for general business use. Do not use it for applications requiring high reliability and which may have an extreme impact on lives and property. (Applications requiring high reliability: Chemical plant management, medical equipment management and emergency communications management)
- Use with other authentication devices is not guaranteed.
- In order to incorporate improvements in the product, the specifications concerning this product are subject to change without notice.
- Do not store the IC card within 1-1/2(40mm) of the card scanning area.

#### 15.1.2 For safe use

When using the authentication unit (IC card type), observe the following precautions.

- Do not this product near water, otherwise it may be damaged.
- Do not cut, damage, modify or forcefully bend the USB cable. A malfunction may occur as a result of a damaged or cut USB cable.
- Do not disassembly this device, otherwise it may be damaged.

#### 15.1.3 Regulation notices

##### USER INSTRUCTIONS FCC PART 15 - RADIO FREQUENCY DEVICES (For U.S.A. Users)

FCC: Declaration of Conformity	
Product Type	Authentication Unit (IC card Type)
Product Name	AU-201
(This device complies with Part 15 of the FCC Rules.) Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.	



##### Note

*This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.*

*These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

*Reorient or relocate the receiving antenna.*

*Increase the separation between the equipment and receiver.*

*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*

*Consult the dealer or an experienced radio/TV technician for help*

##### WARNING

The design and production of this unit conform to FCC regulations, and any changes or modifications must be registered with the FCC and are subject to FCC control. Any changes made by the purchaser or user without first contacting the manufacturer will be subject to penalty under FCC regulations.

**INTERFERENCE-CAUSING EQUIPMENT STANDARD (ICES- 003 ISSUE 4) (For Canada Users)**

(This device complies with RSS-Gen of IC Rules.) Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.


This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## 15.2 Product features

This device is an IC card authentication system that performs user authentication by IC cards. Print job operations can be authenticated with IC cards when using machines with user authentication settings specified.

15.3 Part names and their functions

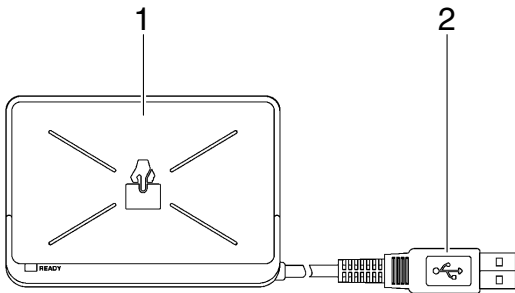

No.	Part name	Description
1	Card scanning area	Position the IC card on this area.
2	USB cable	Used for connecting this device to the machine.

## 15.4 Using authentication unit (IC card type) AU-201

In order to use this device, user IC card IDs must first be registered with the machine. A registered user can print a print job after completing authentication with their IC card IDs. The following procedures describe how to specify the necessary settings on the machine and register users.



### Reminder

*Do not disconnect the USB cable while this device is being used, otherwise the system may become unstable.*

### 15.4.1 Positioning the IC card

- Place the IC card horizontally on the card scanning area.




### Reminder

*Do not store the IC card within 1-1/2 (40 mm) of the card scanning area.*


### 15.4.2 Multifunctional product settings

To use the authentication unit (IC card type), an optional HDD and local interface kit must be installed.


- 1 From the "Main Menu" on the control panel, display the Admin. Settings screen.
  - For details on displaying the Admin. Settings screen, refer to ["Operations for changing numeric values" on page 8-4](#).

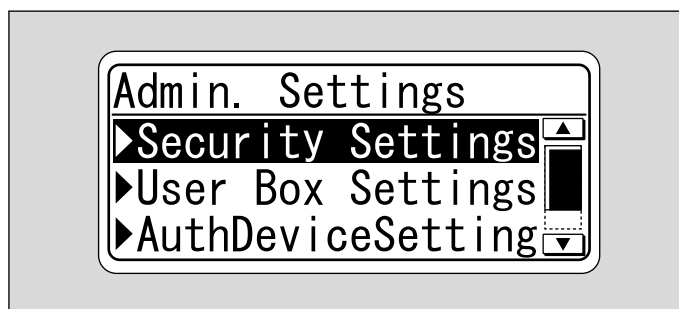


- 2 From the Auth Device Setting screen, select [Card Auth. Setting], and then press the [Menu/Select] key.

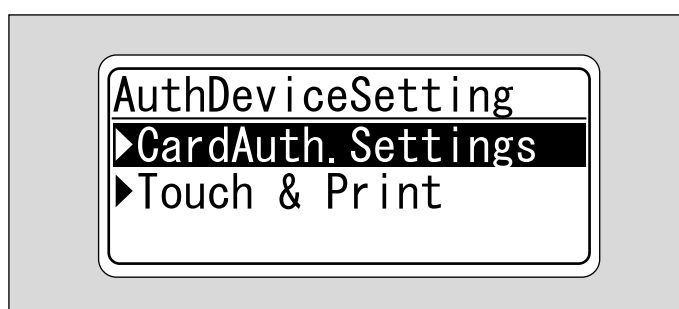


- 3 Specify the settings for "IC Card Type" and "Operation Setting".

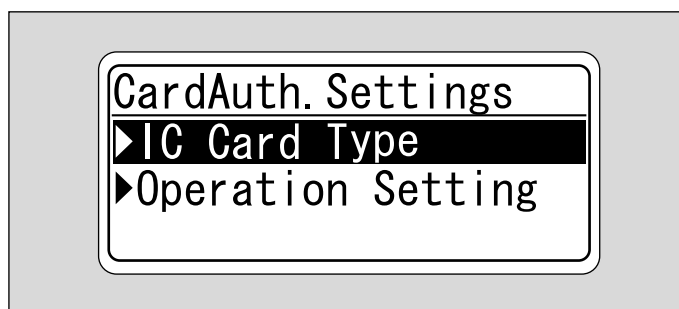

- For "IC Card Type", specify the IC card type to be used.

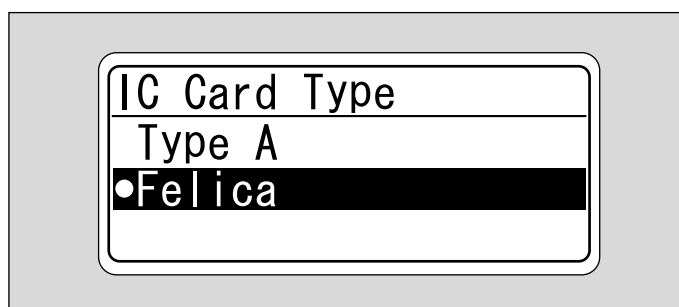


- For "Operation Setting", specify the print method after registration.

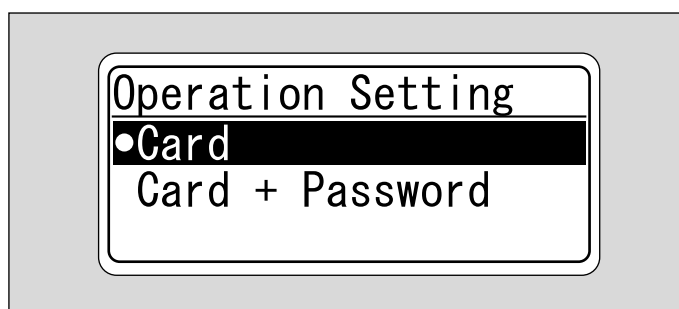


Card: Documents can be printed by specifying the user name and password in the printer driver, and placing the card on the authentication unit.

Card + Password: Documents can be printed if the specified user name and password in the printer driver are correct. If "Card + Password" is selected, the Touch & Print function cannot be used.


- 4 Press the [◀] key twice.  
The Auth Device Setting screen appears again.
- 5 Select [Touch & Print], and then press the [Menu/Select] key.

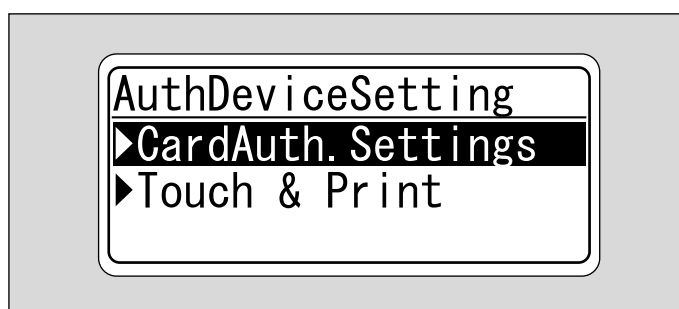


## 6 Specify the settings for "Touch & Print User Box" and "Print".

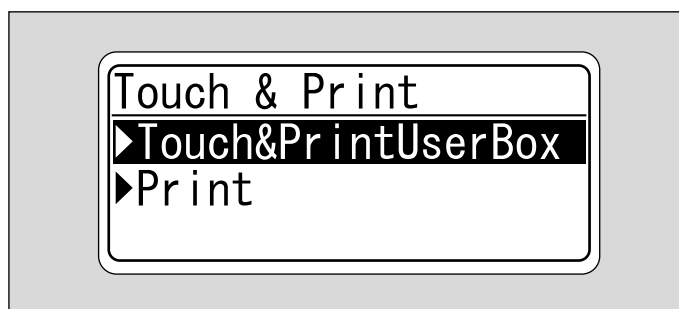

- If "OFF" is selected for "Touch & Print User Box", the Touch & Print function cannot be used.
- If "ON" is selected for "Touch & Print User Box", "Card + Password" cannot be selected.

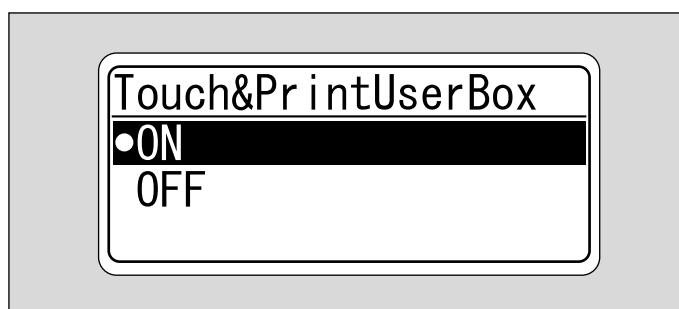

- For "Print", specify the printing method for the Touch & Print function.

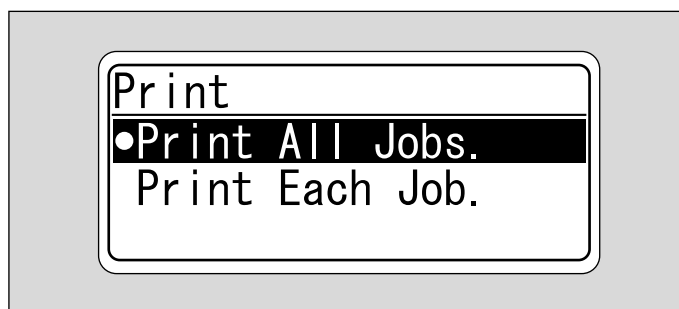

Print All Jobs.:Select this setting to print all documents after completed authentication once when multiple documents are saved in the Touch & Print user box.

Print Each Job.:Select this setting to print one document saved in the Touch & Print user box each time authentication is completed.

### 15.4.3 Registering users

To register users, connect this machine to a computer, and use PageScope Data Administrator.



#### Detail

*Registered user data is stored on the hard disk of the machine. If the user authentication method on the machine is changed or the hard disk is reformatted, the registered user data is erased.*



...

#### Note


*In order to use PageScope Data Administrator, settings must be specified on the machine and the setup procedure must be performed. The setup procedure includes installing this device's IC Card Driver (USB-Driver), then installing PageScope Data Administrator IC Card Plugin.*

**Reminder**


*PageScope Data Administrator ver. 3.0 or later must first be installed on the computer. For details on the operating environment and installation procedure for PageScope Data Administrator, refer to the User's Guide for the PageScope Data Administrator.*

**Setup**


- 1 Turn off the machine with the power switch, and then disconnect this device from the machine.
- 2 Install IC Card Driver (USB-Driver).  
Plug the cable from this device into the USB port on the computer.  
The Found New Hardware Wizard starts.
- 3 Select "Yes, now and every time I connect a device", and then click [Next].

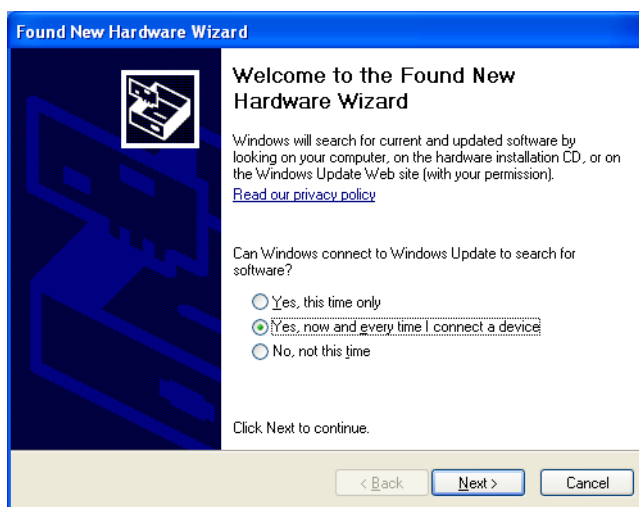

- 4 Insert the application CD-ROM included with this device into the CD-ROM drive of the computer.
- 5 Select "Install from a list or specific location (Advanced)", and then click [Next].

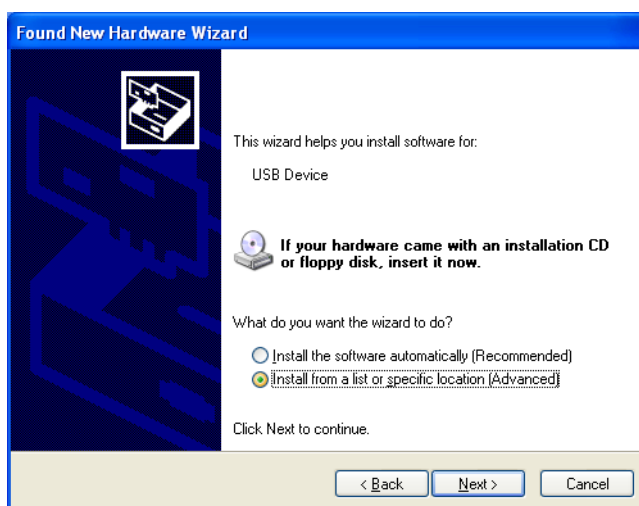

- 6 Select the "Include this location in the search" check box, check that the application CD-ROM appears as a location to be searched, and then click [Next].

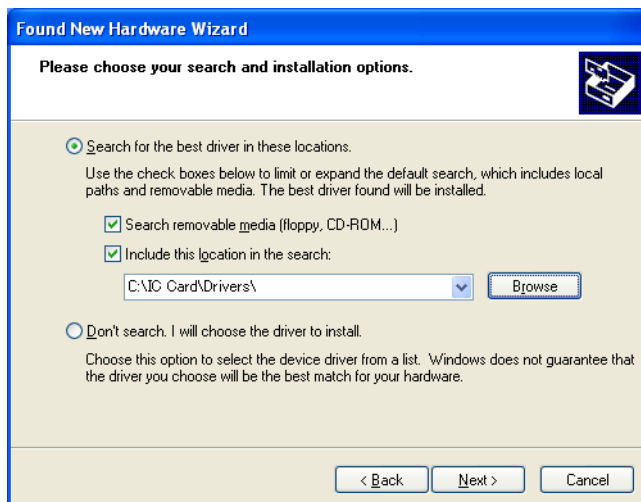

- If the application CD-ROM does not appear as a location to be searched for the driver, click [Browse], select the IC Card Driver (USB-Driver) folder on the CD-ROM, and then click [OK].



The installation begins.




- 7 Click [Finish].



The installation of IC Card Driver (USB-Driver) is completed.

- 8 Install PageScope Data Administrator IC Card Plugin.  
Open the IC\_Card\_Plugin folder on the application CD-ROM, and then click "setup.exe".
- 9 Select the language, and then click [OK].

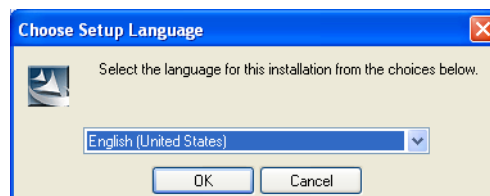

The installer starts up.


- 10 Follow the instructions that appear on the screen to complete the installation.
- 11 Click [Next].




- 12 Select "I accept the terms of the license agreement", and then click [Next].



- 13 Click [Install].

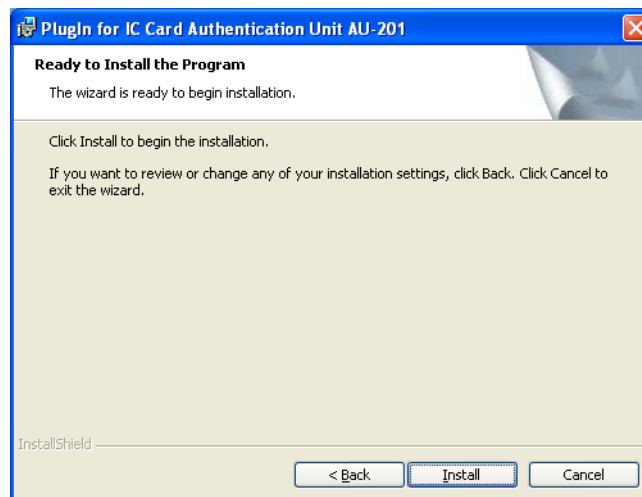

- 14 Click [Finish].

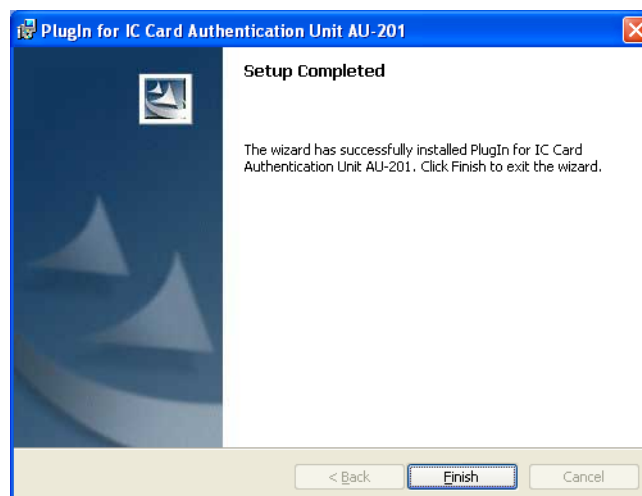


Data Administrator IC Card Plugin is installed, and the setup is completed.

## Registering users



### Detail

*In order to register users with PageScope Data Administrator, this device must be connected to the USB port of the computer, and the computer and machine must be connected over a network.*

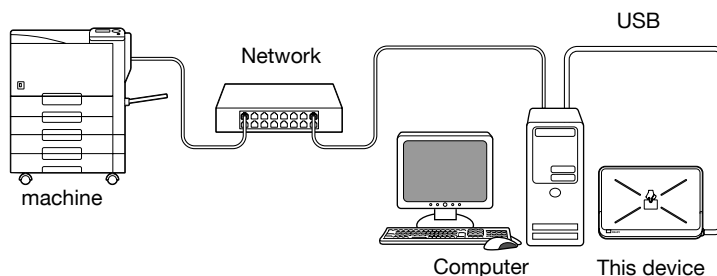

...

### Note

*When the machine is turned off, then on again with the power switch, wait at least 10 seconds to turn the machine on after turning it off. The machine may not operate correctly if it is turned on immediately after being turned off.*

*Hold the plug when plugging and unplugging the USB cable, otherwise the cable may be damaged.*



...

### Reminder


*Do not connect other USB devices to the same port where this device is connected. If enough USB power is not provided, this device may not operate correctly.*

*When using a USB hub, be sure to use a self-powered USB hub that can provide 500 mA or more.*


*After connecting this device, wait at least 5 seconds before operating it.*

- 1** If this device is connected to the machine, turn off the machine with the power switch, and then disconnect this device.
  - If this device is connected to the computer, continue with step 4.
- 2** Turn on the machine with the power switch.
- 3** Connect this device to the USB port of the computer installed with PageScope Data Administrator.
- 4** Start up PageScope Data Administrator, and then import the device information for the machine.
  - For details on importing the device information, refer to the User's Guide for PageScope Data Administrator.

The Device information pane appears.

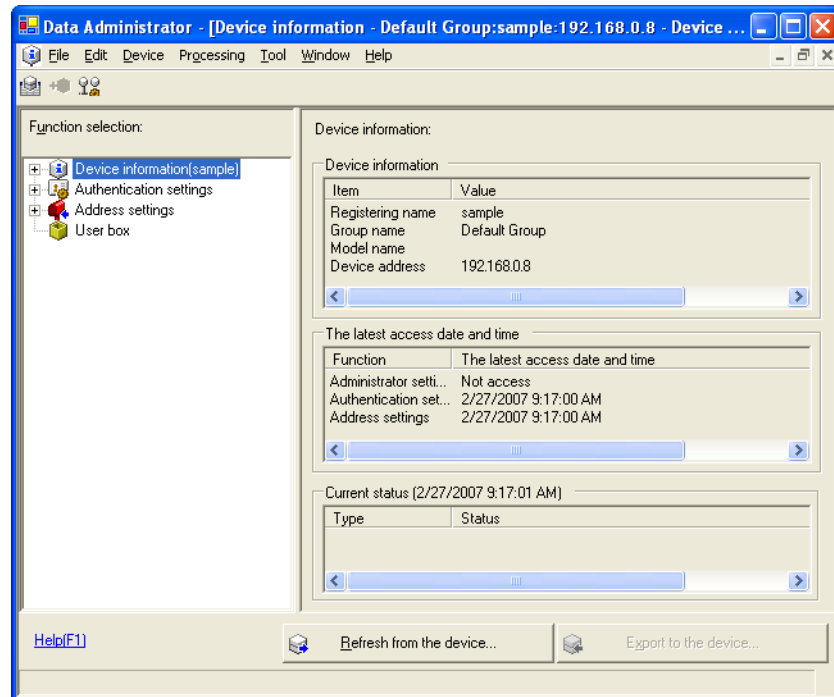

- 5 Select "User authentication settings" in the Function selection pane, and then click [Add].

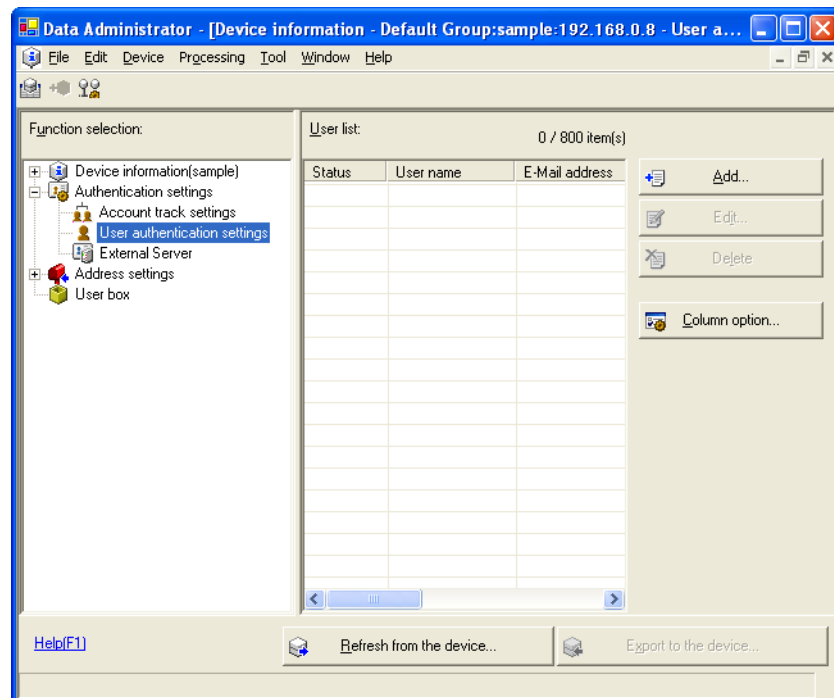



- Repeat steps 5 through 9 until all users have been registered.

User settings

User Name\*: user03

Password\*: XXXXXXXX

E-Mail Address:

Account Information

Maximum counter settings | Maximum number of boxes | Reference Allowed Setting | IC card authentication

Card Type: TypeA

Result: Unregistered

Card ID:

☒ Read the data from the Card Reader

☐ Input the card ID directly

Start reading

Delete

(HEX 8 digit, ex. 112233EE)

Help[F1] \*: Required field OK Cancel

- 10** Click [Export to the device].

Data Administrator - [Device information - Default Group:sample:192.168.0.8 - User a...]

File Edit Device Processing Tool Window Help

Function selection:

- Device information(sample)
  - Authentication settings(Update)
  - Account track settings
  - User authentication settings
  - External Server
  - Address settings
  - User box

User list: 3 / 800 item(s)


Status	User name	E-Mail address
Add	user01	user01@test.l...
Add	user02	user02@test.l...
Add	user03	user03@test.l...

+ Add...  
Edit...  
Delete  
Column option...

Help(F1) Refresh from the device... Export to the device...


- To change the registered data, select the user name, and then click [Edit].

- 11 Click [Write].

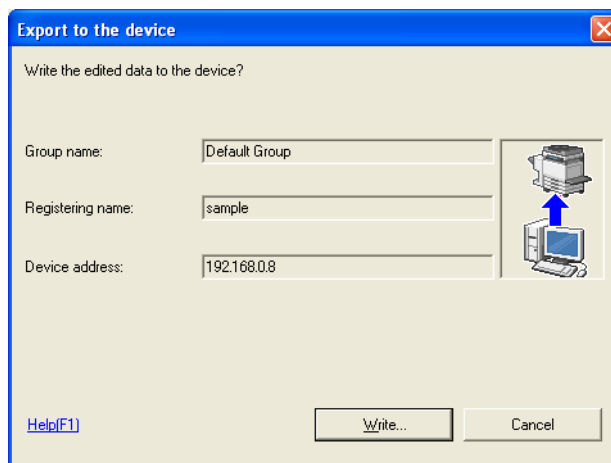

The registered user data is specified on the machine.

- 12 Click [OK].

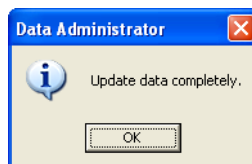

- 13 Disconnect this device from this USB port of the computer.

- 14 Turn off the machine with the power switch, connect this device, and then turn on the machine with the power switch.



#### Detail

*PageScope Data Administrator is equipped with a batch copy feature that allows the registered user data to be specified on multiple machines specified to be used with this device.*



#### Note

*When the machine is turned off, then on again with the power switch, wait at least 10 seconds to turn the machine on after turning it off. The machine may not operate correctly if it is turned on immediately after being turned off.*

*Hold the plug when plugging and unplugging the USB cable, otherwise the cable may be damaged.*

## 15.5 Care of authentication unit (IC card type) AU-201



### Reminder

*Before cleaning this device, disconnect it from the machine. If a force is applied to the USB port, it may be damaged.*

*When cleaning this device, do not allow water to enter the device, otherwise the system may be damaged.*

*Never use organic solvents, such as benzene or alcohol, to clean this device, otherwise it may be damaged.*



### Note

*When disconnecting or connecting this device, turn off the machine with the power switch, and then wait at least 10 seconds before turning it on again. The machine may not operate correctly if it is turned on immediately after being turned off.*

*Hold the plug when plugging and unplugging the USB cable, otherwise the cable may be damaged.*

Frequency: Once a month, or when it is dirty

Wipe this device with a soft, dry cloth. If this device cannot be cleaned by wiping it, wash it with a cloth dampened with a mild detergent and wrung out well. After this device is cleaned, rinse the cloth and wring it out well before wiping off the detergent.

## 15.6 Specifications

Product name		Authentication unit (IC card type) AU-201
Dimensions		Approx. 3-1/2 (W) × 2-1/2 (D) × 3/4 (H) (92 mm (W) × 64 mm (D) × 16 mm (H))
Weight		Approx. 1/4 lb (120 g)
Power requirements		Through USB port
Environment conditions (when operating)	Temperature	32 to 104 °F (0 to 40 °C)
	Humidity	20 to 85% (Must be no condensation)
Environment conditions (when not operating)	Temperature	-4 to 122 °F (-20 to 50 °C)
	Humidity	20 to 85% (Must be no condensation)
Radio waves classification		Induced reading/writing communication equipment
Compatible card		Contactless IC card compliant with ISO 14443 Type A and Felica
Computer	Processor	PC/AT compatible, 1 GHz or more
	Memory	128 MB or more
	Hard disk drive	Available hard disk space: 100 MB or more
	Monitor	800 × 600 pixels, 16-bit color or more
	Network	TCP/IP protocol
	Application	Microsoft Internet Explorer 6.0 (Service Pack 1) or later Microsoft .NET Framework (Service Pack 1) or later
	Interface	USB 1.1 or later
Supported operating systems		Windows 2000 Professional (Service Pack 4) Windows XP Professional Edition (Service Pack 2)

## 15.7 Troubleshooting

If a problem occurs while running the system, refer to the following.

Condition	Possible cause	Remedy
The message appears on a computer where registration failed.	With this device, the scanning time is limited to 10 seconds. This message appears if scanning was not possible within the limited period of time.	Refer to <a href="#">"Positioning the IC card" on page 15-6</a> and check how to position the IC card in order to complete scanning within the limited period of time.
The message "Failed to Auth." appears on the machine.	If "Card Authentication + Password" was selected: Is the password typed in correctly?	Check the password, and type it in correctly.
Scanning does not begin.	Was the machine restarted after this device was connected to it?	Turn the machine off with the power switch and temporarily disconnect the USB cable from this device or the machine before connecting it again and waiting 10 seconds before turning on the multifunctional product with the power switch.
The Add New Hardware Wizard starts when this device is connected to the computer.	Is this device connected to the same USB port used when the driver was installed?	If this device is connected to a USB port different from the one used when the driver was installed, the Add New Hardware Wizard may start. Use the same USB port used when the driver was installed.

If the problem is not corrected after the described operation is performed, contact your technical representative.

---

# 16

## Appendix

## 16 Appendix

### 16.1 Configuration page

**KONICA MINOLTA C353P**  
**Configuration Page**

<p><u>Print Operation Menu Map</u></p> <p><b>Basic Setting</b></p> <p>Default Paper Size = A4          Paper Tray = Auto          Output Tray = Tray 1          Binding Position = Left Binding          Double-Sided = Off          Staple = Off          Hole-Punch = Off          Orientation = Portrait          # of Sets = 1          No Matching Paper in Tray Setting = Stop Printing (Tray Fixed)          Spool Setting = On          Convert = Off          PDL Setting = Auto          Banner Setting = Disable          Banner Paper Tray = Auto</p> <p><b>PCL Setting</b></p> <p>Font Source = 1          Font Number = 0          Font Point = 12.00          Font Pitch = 10.00          Symbol Set = PC-8, Code Page 437          Line/Page = 64 [ Line / Page ]          CR/LF Mapping = Off</p> <p><b>PS Setting</b></p> <p>Print Reports = Disable          Text RGB Source = 4          Text Destination Profile = Auto          Image RGB Source = 4          Image Destination Profile = Auto          Graphics RGB Source = 4          Graphics Destination Profile = Auto          Simulation Profile = None</p> <p><b>XPS Settings</b></p> <p>Verify XPS Digital Signature = Enable</p> <p><b>Test Print</b></p> <p>Configuration          PCL Font List          PS Font List          Demo Page</p> <p><b>I/F Setting</b></p> <p>Network Rx Timeout = 60 [ sec. ]          USB Timeout = 60 [ sec. ]          Print XPS Errors = Enable</p>	<p><u>Installed</u></p> <p>Printer HDD = Installed          Printer Memory = 320 [ MByte ]</p> <p><u>Printer Information</u></p> <p><b>Installed Tray</b></p> <p>Tray 1 = A4          Tray 2 = A3          Tray 3 = A4          Tray 4 = None          LCT = None</p> <p><b>Option</b></p> <p>Duplex Unit = Installed          Finisher = Available          Punch Unit = Available          Fold Unit = Available          Fax Unit = Not Available          Mailbin Unit = Not Available</p> <p><u>Firmware Version</u></p> <p>Printer Controller = A02E0Y0-3000-G00-15</p> <p><u>Network</u></p> <p><b>MAC Address</b></p> <p>MAC Address = 00:20:6B:5C:A4:77</p> <p><b>TCP/IP</b></p> <p>TCP/IP = Enable          IP Address = 150.16.154.48          Subnet Mask = 255.255.255.0          Default Gateway = 150.16.154.1          RAW Port 0 = 9100          RAW Port 1 = 9112          RAW Port 2 = 9113          RAW Port 3 = 9114          RAW Port 4 = 9115          RAW Port 5 = 9116</p> <p><b>Netware</b></p> <p>Netware = Disable</p> <p><b>Appletalk</b></p> <p>Appletalk = Enable</p> <p><b>SMB</b></p> <p>SMB = Enable</p>
---	--

## 16.2 Font list

### 16.2.1 PCL Font List

KONICA MINOLTA C353P

PCL Font List

P.1


Resident Fonts

Font	Pitch/Point	Escape Sequence	Font #	Font ID
Courier	Scalable	<esc>(01X<esc>(&0p10h0s0b4099T	00000	
CG Times	Scalable	<esc>(01X<esc>(&1p12v0s0b4101T	00001	
CG Times Bold	Scalable	<esc>(01X<esc>(&1p12v0s3b4101T	00002	
CG Times Italic	Scalable	<esc>(01X<esc>(&1p12v1s0b4101T	00003	
CG Times Bold Italic	Scalable	<esc>(01X<esc>(&1p12v1s3b4101T	00004	
CG Omega	Scalable	<esc>(01X<esc>(&1p12v0s0b4113T	00005	
CG Omega Bold	Scalable	<esc>(01X<esc>(&1p12v0s3b4113T	00006	
CG Omega Italic	Scalable	<esc>(01X<esc>(&1p12v1s0b4113T	00007	
CG Omega Bold Italic	Scalable	<esc>(01X<esc>(&1p12v1s3b4113T	00008	
Coronet	Scalable	<esc>(01X<esc>(&1p12v1s0b4116T	00009	
Clarendon Condensed	Scalable	<esc>(01X<esc>(&1p12v4s3b4140T	00010	
Univers Medium	Scalable	<esc>(01X<esc>(&1p12v0s0b4148T	00011	
Univers Bold	Scalable	<esc>(01X<esc>(&1p12v0s3b4148T	00012	
Univers Medium Italic	Scalable	<esc>(01X<esc>(&1p12v1s0b4148T	00013	
Univers Bold Italic	Scalable	<esc>(01X<esc>(&1p12v1s3b4148T	00014	
Univers Condensed Medium	Scalable	<esc>(01X<esc>(&1p12v4s0b4148T	00015	
Univers Condensed Bold	Scalable	<esc>(01X<esc>(&1p12v4s3b4148T	00016	
Univers Condensed Medium Italic	Scalable	<esc>(01X<esc>(&1p12v5s0b4148T	00017	
Univers Condensed Bold Italic	Scalable	<esc>(01X<esc>(&1p12v5s3b4148T	00018	
Antique Olive	Scalable	<esc>(01X<esc>(&1p12v0s0b4168T	00019	
Antique Olive Bold	Scalable	<esc>(01X<esc>(&1p12v0s3b4168T	00020	
Antique Olive Italic	Scalable	<esc>(01X<esc>(&1p12v1s0b4168T	00021	
Garamond Antiqua	Scalable	<esc>(01X<esc>(&1p12v0s0b4197T	00022	
Garamond Halbfett	Scalable	<esc>(01X<esc>(&1p12v0s3b4197T	00023	
Garamond Kursiv	Scalable	<esc>(01X<esc>(&1p12v1s0b4197T	00024	

## 16.2.2 PS Font List

KONICA MINOLTA C353P		
PS Font List		P.1
Resident Fonts		
Font		Font #
Albertus MT	AlbertusMT	00000
<i>Albertus MT Italic</i>	AlbertusMT-Italic	00001
Albertus MT Light	AlbertusMT-Light	00002
Antique Olive Roman	AntiqueOlive-Roman	00003
<i>Antique Olive Italic</i>	AntiqueOlive-Italic	00004
<b>Antique Olive Bold</b>	AntiqueOlive-Bold	00005
<b>Antique Olive Compact</b>	AntiqueOlive-Compact	00006
<i>Apple Chancery</i>	Apple-Chancery	00007
Arial	ArialMT	00008
<i>Arial Italic</i>	Arial-ItalicMT	00009
<b>Arial Bold</b>	Arial-BoldMT	00010
<b>Arial Bold Italic</b>	Arial-BoldItalicMT	00011
ITC Avant Garde Gothic Book	AvantGarde-Book	00012
<i>ITC Avant Garde Gothic Book Oblique</i>	AvantGarde-BookOblique	00013
<b>ITC Avant Garde Gothic Demi</b>	AvantGarde-Demi	00014
<i>ITC Avant Garde Gothic Demi Oblique</i>	AvantGarde-DemiOblique	00015
Bodoni Roman	Bodoni	00016
<i>Bodoni Italic</i>	Bodoni-Italic	00017
<b>Bodoni Bold</b>	Bodoni-Bold	00018
<b>Bodoni Bold Italic</b>	Bodoni-BoldItalic	00019
<b>Bodoni Poster</b>	Bodoni-Poster	00020
<i>Bodoni Poster Compressed</i>	Bodoni-PosterCompressed	00021
ITC Bookman Light	Bookman-Light	00022
<i>ITC Bookman Light Italic</i>	Bookman-LightItalic	00023
<b>ITC Bookman Demi</b>	Bookman-Demi	00024
<i>ITC Bookman Demi Italic</i>	Bookman-DemiItalic	00025
Carta	Carta	00026
<b>Chicago</b>	Chicago	00027
Clarendon Roman	Clarendon	00028
<b>Clarendon Bold</b>	Clarendon-Bold	00029

16.2.3 Demo page

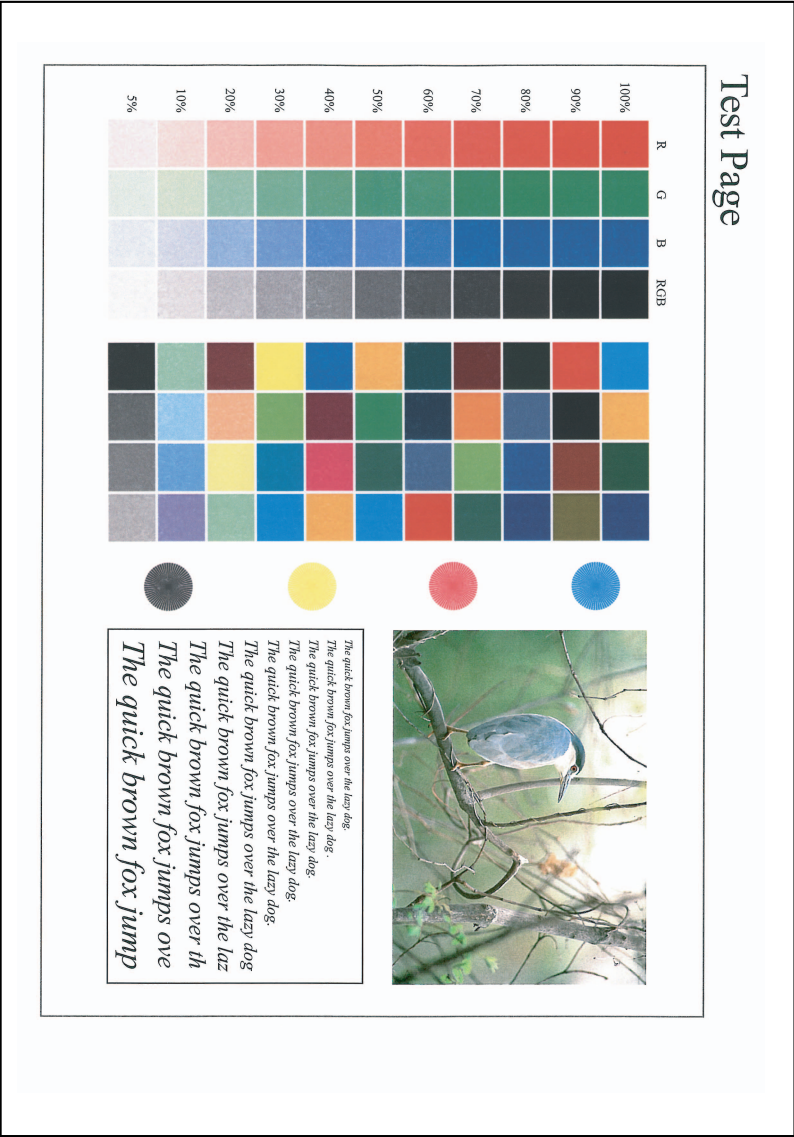

## 16.3 PPD driver (for Linux and applications)

### 16.3.1 PPD driver types

The PPD driver contains the PPD information for Mac OS 9, Linux, and applications.

Driver for Linux: Install for use with Linux  
(Contains PPD for Linux and PPD for OpenOffice)

Driver for applications: Install the driver when using applications such as Adobe PageMaker that require the PPD driver.

### 16.3.2 About the PPD driver for Linux

Operating environment

Supported operating systems: Red Hat Linux 9/SuSE Linux 8.2

Supported PostScript level: 3.0

CUPS: 1.1.17

#### ***To register the PPD driver for Linux***

- 1 Copy the PPD file to the CUPS model directory. (/usr/share/cups/model when mainly Linux)
- 2 In CUPS Printing System, click the [Add Printer] button, and then specify PPD to add this machine.



#### **Note**

*For details on CUPS, click the [Help] button in the CUPS Web management page.*

#### ***To set up the PPD driver for Linux***

Specify the functions by clicking the [Configure Printer] button in CUPS Printing System.

#### ***To register the PPD driver for OpenOffice***

- 1 In CUPS Printing System, click the [Add Printer] button, and then specify PPD to add this machine.
- 2 Open the OpenOffice Printer Administrator tool.
- 3 Click the [New Printer] button.
- 4 In the Choose a device type dialog box, select "Add a printer", and then click the [Next] button.
- 5 In the Choose a driver dialog box, click the [Import] button.
- 6 Select "KONICA MINOLTA C353 OpenOffice PPD", and then click the [OK] button.
- 7 From the "Please Select a Suitable driver." list, select "KONICA MINOLTA C353 OpenOffice PPD", and then click the [Next] button.
- 8 In the Choose a command line dialog box, select the printer that was added to CUPS, and then click the [Next] button.
- 9 Click the [Finish] button.

#### ***To print with OpenOffice***

- 1 From the [File] menu in OpenOffice, select "Print".
- 2 Select "KONICA MINOLTA C353 OpenOfficePPD" in "Printer name".
- 3 Click the [Properties] button.
- 4 Select the desired setting from the "Page size" drop-down list, and then click the [OK] button. To specify settings other than the page size, click the [Configure Printer] button in CUPS Printing System.
- 5 To print, click the [OK] button in the OpenOffice print dialog box.

### 16.3.3 About the PPD driver for applications

PPD registration destination (example: Adobe PageMaker)

- For PageMaker 6.0  
Copy the PPD file to RSR\CPPD4, which is under the folder to which PageMaker is installed.
- For PageMaker 6.5/7.0  
Copy the PPD file to RSRC\<Language>\PPD4, which is under the folder to which PageMaker is installed.

#### *To print*

- 1 Select [File], then [Print].
- 2 From the "Model" box in the print dialog box, select this machine.
- 3 Specify "Paper Setting" or "Features" for the printer.
- 4 To print, click the [Print] button.

## 16.4 NetWare

### 16.4.1 Connection methods selectable for NetWare

The following protocols are available for NetWare.

NetWare version	Protocol used	Connection method
NetWare 4.x	IPX	Bindery Pserver Nprinter/Rprinter
NetWare 5.x	IPX	NDS Pserver Nprinter/Rprinter
	TCP/IP	NDPS
NetWare 6.x	IPX	NDS Pserver
	TCP/IP	NDPS



#### Note

For details on the NetWare functions, refer to the NetWare operation manual of the NetWare.

Before using this machine in a NetWare environment, the network settings must be specified for this machine. For details, refer to ["NetWare Setting" on page 16-8](#).

### 16.4.2 NetWare Setting

Specify settings for printing in a NetWare environment. Before printing in the NetWare environment, settings for using this machine in the NetWare environment must be specified.

In Administrator mode of PageScope Web Connection, select the Network tab - "NetWare Setting" - "NetWare Setting".

Network - Microsoft Internet Explorer

Administrator Logout

Ready to Print

Maintenance Security Box Print Setting **Network**

▶ TCP/IP Setting  
 ▶ E-mail Setting  
 ▶ LDAP Setting  
 ▶ IPP Setting  
 ▶ FTP Setting  
 ▶ SNMP Setting  
 ▶ SMB Setting  
 ▶ Web Service Settings  
 ▶ Bonjour Setting  
 ▼ **NetWare Setting**  
   ▶ **NetWare Setting**  
   ▶ NetWare Status  
 ▶ AppleTalk Setting  
 ▶ Network Fax Setting  
 ▶ WebDAV Settings  
 ▶ OpenAPI Setting  
 ▶ TCP Socket Setting

**NetWare Setting**  
\* Is reflected after reset.

IPX Setting\*  (Turn the main switch OFF, and then ON, when changing TCP/IP.)

Ethernet Frame Type\*

NetWare Print Mode\*

PServer

Print Server Name\*

Print Server Password\*

Polling Interval\*  sec. (1-65535)

Bindery/NDS Setting\*

Bindery

File Server Name\*

NDS

NDS Context Name\*

NDS Tree Name\*

Nprinter/Rprinter

Print Server Name\*

Printer Number\*  (0-255, 255: Auto)

User Authentication Setting

OK Cancel

Settings are different depending on the environment used. Specify the settings according to the following procedures.

**For Remote Printer mode with NetWare 4.x bindery emulation**

- ✓ Before using bindery emulation, check that bindery emulation is compatible with the NetWare server.
- 1 From a client computer, log in to NetWare with the Administrator permission as Bindery.
- 2 Start up Pconsole.
- 3 From the "Available Options" list, select "Quick Setup", and then press the [Enter] key.
- 4 Enter the appropriate names in the "Print Server Name", "Printer Name", and "Print Queue Name" fields, select "Other/Unknown" from the "Printer type" field, and then save the specified settings.
- 5 Press the [Esc] key to quit Pconsole.
- 6 Use the NetWare server console to load PSERVER.NLM.

Next, specify the following settings for "NetWare Setting".

Item	Definition	Prior confirmation
IPX Setting*	Select "ON".	
Ethernet Frame Type*	Specify the frame type to be used.	Frame type
NetWare Print Mode*	Select "NPrinter/Rprinter".	
Print Server Name*	Specify the printer server name to allow it to serve as Nprinter/Rprinter (up to 63 characters).	Print server name registered in step 4
Printer Number*	Enter the Nprinter/Rprinter printer number.	

**For the print server mode with NetWare 4.x bindery emulation**

- ✓ Before using bindery emulation, check that bindery emulation is compatible with the NetWare server.
- ✓ To use the printer server mode, the IPX protocol must be loaded on the NetWare server.
- 1 From a client computer, log in to NetWare with the Administrator permission as Bindery.
- 2 Start up Pconsole.
- 3 From the "Available Options" list, select "Quick Setup", and then press the [Enter] key.
- 4 Enter the appropriate names in the "Print Server Name", "Printer Name", and "Print Queue Name" fields, select "Other/Unknown" from the "Printer type" field, and then save the specified settings.
- 5 Press the [Esc] key to quit Pconsole.

Next, specify the following settings for "NetWare Setting".

Item	Definition	Prior confirmation
IPX Setting*	Select "ON".	
Ethernet Frame Type*	Specify the frame type to be used.	Frame type
NetWare Print Mode*	Select "PServer".	
Print Server Name*	Specify the printer server name to allow it to serve as Pserver (up to 63 characters).	Print server name registered in step 4
Print Server Password*	If necessary, specify the password for the printer server (up to 63 characters).	
Polling Interval*	Specify an interval to make queries for jobs.	
Bindery/NDS Setting	Select "NDS/Bindery".	
File Server Name	Specify the priority file server name for Bindery mode (up to 47 characters).	

**For NetWare 4.x Remote Printer mode (NDS)**

- 1** Log in to NetWare as an administrator from a client computer.
- 2** Start up NWadmin.
- 3** Select either the organization or organizational unit container that offers the print service, and then click "Print Services Quick Setup" on the "Tools" menu.
- 4** Enter the appropriate names in the "Print Server Name", "Printer Name", "Print Queue Name", and "Print Queue Volume" fields, select "Other/Unknown" from the "Printer type" field, and then save the specified settings.
- 5** Use the NetWare server console to load PSERVER.NLM.

Next, specify the following settings for "NetWare Setting".

Item	Definition	Prior confirmation
IPX Setting*	Select "ON".	
Ethernet Frame Type*	Specify the frame type to be used.	Frame type
NetWare Print Mode*	Select "NPrinter/Rprinter".	
Print Server Name*	Specify the printer server name to allow it to serve as Nprinter/Rprinter (up to 63 characters).	Print server name registered in step 4
Printer Number*	Enter the Nprinter/Rprinter printer number.	

**For NetWare 4.x/5.x/6 Print Server mode (NDS)**

- ✓ To use the printer server mode, the IPX protocol must be loaded on the NetWare server.

- 1** Log in to NetWare as an administrator from a client computer.
- 2** Start up NWadmin.
- 3** Select either the organization or organizational unit container that offers the print service, and then click "Print Services Quick Setup (non-NDPS)" on the "Tools" menu.
- 4** Enter the appropriate names in the "Print Server Name", "Printer Name", "Print Queue Name", and "Print Queue Volume" fields, select "Other/Unknown" from the "Printer type" field, and then click [Create].

Next, specify the following settings for "NetWare Setting".

Item	Definition	Prior confirmation
IPX Setting*	Select "ON".	
Ethernet Frame Type*	Specify the frame type to be used.	Frame type
NetWare Print Mode*	Select "PServer".	
Print Server Name*	Specify the printer server name to allow it to serve as PServer (up to 63 characters).	Print server name registered in step 4
Print Server Password*	If necessary, specify the password for the printer server (up to 63 characters).	
Polling Interval*	Specify an interval to make queries for jobs.	
Bindery/NDS Setting	Select "NDS".	
NDS Context Name	Specify the NDS context name connected with the print server (up to 191 characters).	
NDS Tree Name	Specify the NDS tree name connected with the printer server (up to 63 characters).	


**For NetWare 5.x/6 Novell Distributed Print Service (NDPS)**

- ✓ Before specifying settings for NDPS, check that the NDPS broker and NDPS manager have been created and loaded.
  - ✓ Also, check that the TCP/IP protocol is specified in the NetWare server, the IP address is specified for this machine, then this machine is running.
- 1** Log in to NetWare as an administrator from a client computer.
  - 2** Start up NWadmin.
  - 3** Right-click "Organization" or "Organizational unit" container where a printer agent is created, and then select "NDPS Printer" on the "Create" submenu.
  - 4** In the "NDPS Printer Name" box, enter the "printer name".
  - 5** In the "Printer Agent Source" column, select "Create a New Printer Agent", and then click "Create".
  - 6** Check the printer agent name, and then in the "NDPS Manager Name" box, browse through the NDPS manager names, and register it.
  - 7** In "Gateway Types", select "Novell Printer Gateway", and then register it.
  - 8** In the "Configure Novell DPS for Printer Agent" window, select "(None)" for the printer type and "Novell Port Handler" for the port handler type, and then register the settings.
  - 9** In "Connection type", select "Remote (LPR on IP)", and then register it.
  - 10** Enter the IP address set for this machine as the host address, enter "Print" as the printer name, and then click the "Finish" button to register the settings.
  - 11** The printer driver registration screen appears. Select "None" for each operating system to complete the registration.

### 16.4.3 NetWare Status

In Administrator mode of PageScope Web Connection, select the Network tab - "NetWare Setting" - "NetWare Status".

NetWare connection status can be checked, if necessary.

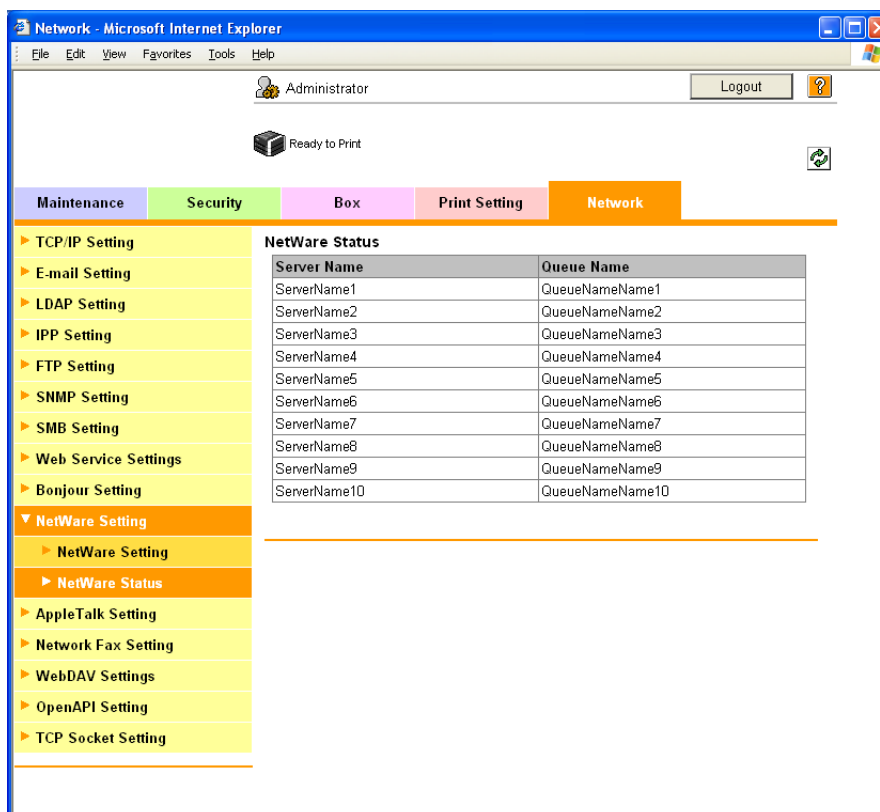

### 16.4.4 Windows Client Setting

Install the printer driver using the Add Printer Wizard for an Window client who uses a printer.



#### Reminder

*When installing on NT4.0/2000/XP/Vista/Server 2003, administrator permissions are required.*

- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
- 2 Open the Printers window or Printers and Faxes window.
- 3 Perform "Add a printer" or "Add Printer".  
Add Printer Wizard starts.
- 4 In the port settings, browse the network, and specify the name of the created queue (or NDPS printer name).
- 5 From the printer model list, specify the desired folder on the CD-ROM that contains the printer driver.
  - Select the specified folder according to the printer driver to be used, the operating system, and the language. Printer drivers that can be selected: Windows 2000/XP/Vista/Server 2003: PCL driver, PS driver Windows NT4.0: PCL driver
- 6 Follow the on-screen instructions to complete the installation.

---

# 17

## Index

# 17 Index

## 17.1 Index

### Numerics

2-Sided Print .....8-19

### A

Accept IPP jobs .....8-22

Access Setting .....8-23

Accessing .....9-2

Account name .....8-16

Account Track .....5-8, 6-8, 7-25, 9-29

Account track .....1-42, 9-7

Account Track Registration .....9-32

Account User Box .....7-13, 8-16

Action for Invalid Certificate .....9-48

Active Directory .....9-33

Add Printer .....3-8, 3-12, 3-14, 3-17, 3-19, 3-22, 3-24, 3-28, 3-31, 3-32, 3-34

Admin. Password .....8-24

Admin. Sec. Levels .....8-24

Admin. Settings Menu .....8-13, 8-24

Administrator mode .....2-6, 9-10, 9-14

Administrator password .....9-10, 9-89

Annotation User Box .....7-15

Annotation user box .....9-22

AnnotationUserBox .....8-16

APOP Authentication .....9-76

AppleTalk .....4-2, 4-5, 4-10, 4-14, 8-22

AppleTalk Setting .....2-16, 8-22

Audit Log .....8-24

AuthDeviceSetting .....8-26

Authentication .....5-8, 8-23

Authentication unit .....7-28

Authentication unit (Biometric type AU-101) .....14-2

Authentication unit (IC card type AU-201) .....15-2

Auto Logout .....9-88

Auto tray switch .....1-21

Automatic duplex unit .....1-4, 10-11, 13-4

AutoTray Switch .....8-18

AutoTraySelection .....8-18

### B

Back Cover .....5-11, 6-15, 6-26

Banner paper .....1-18, 10-23

Banner paper printing .....7-39

Banner PaperTray .....8-19

Banner Printing Menu .....8-15

Banner Sheet .....8-19

Basic operations .....8-2

Basic Setting .....9-90

Basic Settings .....8-19

Basic tab .....5-7

Beep Sound .....8-26

Bin Assignment .....8-18

Binding Margin .....5-9

Binding Position .....5-9, 6-12, 6-26, 8-17, 8-19

BindingPos. Adjust .....8-19

BioAuth.Settings .....8-26

Blank Page Print .....8-18

Bonjour .....4-2, 4-4, 4-9, 8-22

Bonjour Name .....8-22

Bonjour Setting .....2-15, 8-22

Booklet printing .....5-9, 6-12, 6-26

Border .....6-25

Box .....9-12, 9-16

Bypass .....8-17

Bypass tray .....1-25, 10-12

### C

Call service representative .....10-2

CallRemoteCenter .....8-23

CardAuth.Settings .....8-26

Center Erase .....5-10, 6-12

Center Staple and Fold .....5-10

Center Staple Pos .....8-27

Centering .....8-27

Certificate .....9-49

Changing numeric values .....8-4

Chapters .....5-9, 6-12

CheckHDDCapacity .....8-25

Cleaning .....12-2

Client Setting .....9-40, 16-12

Collate .....5-8, 6-8

Collated .....6-8, 6-25

Color Matching .....6-26

Color Settings .....5-17, 6-20, 6-26

ColorRegistration .....8-27

Combination .....5-9, 6-26

Common settings .....5-6, 6-5

Compatible computers .....1-31

Configuration .....8-17

Configuration page .....16-2

Configure tab .....5-3

Connection diagram .....1-32

Connection methods .....3-2

Consumables .....8-17, 8-18, 11-2

Control panel .....1-14, 8-2, 12-2

Copies .....5-8, 6-8, 6-25

Copies & Pages .....6-7

Copy Protect .....5-13, 6-16

Counter List .....8-21

Cover Mode tab .....5-11

Cover Mode/Transparency Interleave .....6-14

- CR/LF Mapping .....8-19
- Create a self-signed Certificate .....9-50
- Create Overlay File .....5-12
- Create System User Box .....9-23
- Create User Box .....9-21
- Custom Page Size .....6-24
- Custom paper size .....6-6
- Custom Size .....5-7, 7-39
- Custom size .....6-6
- D**
- Date and time .....9-25
- Date Setting .....8-21
- Date/Time .....5-13, 6-16
- Date/time .....5-16, 6-18
- Date/TimeSettings .....8-21
- Daylight Saving .....8-21
- Default Function Permission .....9-36
- Default settings .....5-5, 6-3, 6-22
- Delete Time .....8-26
- Delete User Box .....8-26
- DeleteJobHistory .....8-24
- DeleteSecurePrint .....8-26
- Demo page .....16-5
- DensityAdjustment .....8-27
- Detail Settings .....8-23
- Device Option .....5-4
- Direct Hosting .....8-22
- Direct Hosting Setting .....2-10
- Direct Print .....7-20, 9-13
- Display panel .....1-14
- DNS Domain .....8-22
- DNS Server .....8-22
- Doc.Hold .....8-26
- Driver Encryption .....8-25
- DST Setting .....8-21
- Duplex printing .....5-9, 6-12, 6-26
- DynamicDNSSetting .....8-22
- E**
- Edge Enhancement .....5-17, 6-20, 6-27
- Editing copy protect .....5-15, 6-17
- Editing header/footer .....6-19
- Editing watermark .....5-14
- Electrostatic charger wire .....12-3
- E-mail RX (POP) .....9-74
- E-mail TX (SMTP) .....9-70, 9-72
- Enable SSL .....8-23
- Encrypt. Passphrase .....5-4
- Encrypted PDF Box .....7-20
- EncryptedPDFBox .....8-16, 8-26
- Encryption Passphrase .....6-10
- Encryption passphrase .....7-30
- EncryptionPassphrase .....8-25
- EncryptionSetting .....8-25
- EnhancedSecurity .....8-24
- EnteringPowerSave .....8-18
- EnteringSleepMode .....8-18
- EraseLeadingEdge .....8-27
- Ethernet .....1-32
- Expert Adjustment .....8-27
- Exporting .....9-24
- External Server Registration .....9-34
- F**
- Finish tab .....5-10
- Finisher Adjust .....8-27
- Finisher FS-519 .....1-8, 10-28, 10-37, 11-14, 11-22, 13-5
- Finisher FS-609 .....1-12, 10-34, 10-40, 11-18, 11-23, 13-7
- Finishing Options .....6-26
- Finishing Priority .....6-12
- Fold .....5-10, 6-26
- Fold & Staple .....6-12
- Fold Position .....8-17
- Font List .....8-20
- Font list .....16-3
- Font Setting .....8-19
- Font Settings .....5-17
- Font Size .....8-19
- Format HDD .....8-25
- Front Cover .....5-11, 6-15, 6-26
- FTP server .....9-79
- FTP Server Setting .....9-82
- Fusing unit .....10-5
- Fusing unit area .....1-7
- G**
- GDI Demo Page .....8-17
- General .....6-25
- Glossy Mode .....5-17, 6-20, 6-26
- H**
- Half-Fold Pos. .....8-27
- HDD EncryptionSet .....8-25
- HDD Settings .....8-25
- Header/Footer .....5-13, 6-16
- Header/Footer Registration .....9-86
- Host Name .....8-22
- Housing .....12-2
- HTTP Server .....8-22
- HTTPServerSetting .....8-22
- I**
- IC Card Type .....8-26
- ICC profile .....7-34
- ICC profiles .....7-36
- IKE Setting .....9-63
- Image Compression .....5-17
- Image Shift .....5-9, 6-12, 6-26
- Imaging unit .....11-9
- Importing .....9-24

- Information .....9-11
- Initial settings .....9-90
- Initializing .....5-3
- Inside of machine .....1-7
- Install a Certificate .....9-52
- Installation .....3-4
- Installer .....3-4
- Installing .....4-3, 4-14
- Interface Setting .....9-93
- Interfaces .....1-32
- IP address .....3-4
- IP address filtering .....9-57
- IP Filtering .....8-22, 9-57
- IP Setting .....8-22
- IPP
  - ..... 2-12, 3-2, 3-4, 3-14, 3-22, 3-32, 4-2, 4-8, 4-12
- IPP Auth. Setting .....8-22
- IPP Authentication Setting .....2-14
- IPP Setting .....2-13, 8-22
- IPPS ..... 2-14, 3-2, 3-4, 3-14, 3-22, 3-32
- IPsec .....8-22, 9-61, 9-62
- IPv6 .....8-22, 9-58
- IPX .....8-22
- J**
- Job .....9-12
- Job Operation Menu .....8-6, 8-16
- Job Settings List .....8-21
- L**
- Language Setting .....8-18
- Layout (Pages per sheet) .....6-25
- Layout direction .....6-25
- Layout tab .....5-9
- Layout/Finish .....6-11
- LCD Brightness .....8-21
- LCT .....1-4, 1-23, 8-17, 10-22
- LDAP .....9-45
- LDAP over SSL .....9-48
- Leading .....8-27
- Leading Edge Adj. .....8-27
- Linux .....16-6
- List of "Utility" menu parameters .....8-6
- Local connection .....1-34, 3-15, 3-27, 3-33
- Login .....9-6, 9-8
- Logout .....9-6, 9-8
- Low Power mode .....1-16
- Low Power Setting .....8-18
- LPD ..... 3-8, 3-17, 3-28, 3-34, 4-6, 4-11, 4-15
- LPD Setting .....2-7
- LPR ..... 2-7, 3-2, 3-8, 3-17, 3-28, 3-34, 4-2, 4-6, 4-11, 4-15
- M**
- Machine authentication .....9-28
- Macintosh .....1-31, 4-2
- Mailbin kit MT-502 .....1-10, 10-31, 13-7
- Main Menu .....8-6
- Main unit .....10-8, 13-2
- Maintenance .....9-14
- Maintenance tab .....9-83
- Manage Profile .....7-36
- Manage the profile .....5-17, 6-20
- Management List .....8-21
- Manual Setting .....9-25
- Memory .....10-44
- Menu operations .....8-2
- Menu/Select .....8-2
- Message
  - ..... 10-43, 10-44, 10-45, 10-46, 10-47, 10-51
- Meter Count .....8-17
- Misfeed .....10-3
- N**
- NDS .....9-42
- NetBIOS Name .....2-9
- NetWare .....8-22, 16-8
- NetWare Print .....8-22
- NetWare Setting .....9-44, 16-8
- Network .....9-18
- Network connection .... 1-34, 3-8, 3-11, 3-14, 3-17, 3-21, 3-23, 3-28, 3-30, 3-32, 3-34
- Network print .....2-7
- Network Setting Clear .....9-84
- Network Settings .....8-21
- Network settings .....2-2
- Network Speed .....8-23
- Network Timeout .....8-23
- Network window .....3-23
- No Matching Paper .....8-18
- Notification .....9-69, 9-77
- Number of Copies .....8-17, 8-19
- O**
- Offset .....5-8, 6-8, 6-26
- OpenAPI .....9-79
- OpenAPI Setting .....9-81
- OpenAPI Settings .....8-23
- Operating environment .....1-31, 3-4, 9-2
- Operating System .....1-31
- Operation Setting .....8-26
- Options .....1-2, 6-3, 6-22
- Orientation .....6-7, 6-24
- Original Orientation .....5-7
- Original Size .....5-7
- OriginalDirection .....8-19
- OS 9 .....6-21
- OS 9.2 .....4-14
- OS X .....6-2
- OS X 10.2 .....4-3
- OS X 10.3 .....4-3
- OS X 10.4 .....4-3
- Other tab .....5-18
- Output Method .....5-8, 6-8, 6-26

- Output Settings .....8-18
- Output Tray .....5-10, 6-13, 6-26, 8-18
- Output tray OT-602 .....1-8, 13-6
- Overlap width line .....6-12
- OverwriteAllArea .....8-25
- OverwritePriority .....8-25
- Ovewrite HDDdata .....8-25
- P**
- Page Attributes .....6-7, 6-24
- Page Number .....5-13, 6-16
- Page number .....5-16, 6-19
- Pages .....6-8, 6-25
- Pages per sheet .....6-25
- PageScope Web Connection .....2-4, 9-2
- Paper .... x-28, 1-18, 1-22, 1-23, 1-25, 6-24, 10-43
- Paper Arrangement .....5-10, 6-12
- Paper capacities .....1-19
- Paper feed cabinet PC-104 .....13-4
- Paper feed cabinet PC-204 .....13-4
- Paper feed cabinet PC-405 .....13-5
- Paper Setting Menu .....8-7
- Paper Settings .....8-19
- Paper Settings for Each Tray .....5-8, 6-13
- Paper Size .....5-7, 6-7, 8-19
- Paper Size Switch .....8-19
- Paper Source .....6-25
- Paper storage .....1-21
- Paper Tray .....5-7, 6-13, 8-19
- Paper Tray Information .....5-4
- Paper Tray/Output Tray .....6-13
- Paper Type .....5-7, 6-13
- Paper types .....1-19
- PaperTray Setting .....8-18
- Parameter detail .....6-24
- Parameter details .....5-7, 6-7
- Parameters .....8-16
- Part name .....1-2
- Password Rules .....8-24
- Pattern .....5-17
- PCL .....1-33
- PCL driver .....1-33, 5-3
- PCL Font List .....8-17, 16-3
- PCL Settings .....8-19, 9-91
- PDL Setting .....8-19
- Peer .....9-64
- Per Page Setting .....5-11, 6-15
- Periodic device .....12-5
- Personal User Box .....7-13, 8-16
- Ping Confirmation .....8-23
- Pitch .....8-19
- Plug-and-play .....3-15, 3-27, 3-33
- POP before SMTP .....9-73
- Port9100 .....2-7, 3-2, 3-4, 3-8, 3-17, 3-28
- PortNumberSetting .....8-23
- Poster Mode .....6-12
- PostScript .....1-33
- Power Save mode .....1-17
- Power Save Setting .....9-83
- Power supply .....1-15
- PowerSave Setting .....8-18
- PPD .....4-14
- PPD driver .....1-33, 16-6
- Print .....5-8, 6-8, 8-17, 8-26
- Print head .....12-3
- Print in Overlay .....5-13
- Print Output .....8-18
- Print PS Errors .....8-19
- Print Reports .....8-17
- Print Service Name .....2-9
- Print Setting .....8-22, 9-17
- Print Setting tab .....9-90
- Print Type .....5-9, 6-12, 6-26
- Print XPS Errors .....8-23
- PrintDataCapture .....8-24
- Printer cables .....1-32
- Printer controller .....1-29
- Printer description .....4-14
- Printer driver .....1-33, 3-5
- Printer driver for Macintosh .....6-2
- Printer drivers for Windows .....5-2
- Printer Info .....6-3
- Printer Info. ....8-22
- Printer Setting .....8-22
- Printer Settings .....8-19, 8-23
- PrinterAdjustment .....8-27
- Printing flow .....1-30
- Printing operations .....5-2, 6-2, 6-21
- Productivity priority .....6-12
- ProhibitFunctions .....8-24
- Proof Print .....5-8, 6-8, 8-16
- Proof print .....6-26, 7-2
- Properties screen .....5-3
- PS driver .....1-33, 5-3
- PS Font List .....8-17, 16-4
- PS Setting .....9-92
- PS Settings .....8-19
- PSWC Setting .....8-22
- PSWC Settings .....2-4
- Public user .....9-9
- Public User Box .....7-13, 8-16
- Punch .....5-10, 6-12, 6-26, 8-19
- Punch kit PK-501 .....1-12, 13-7
- Punch kit PK-515 .....1-8, 13-6
- Punch scrap .....11-22
- Pure Black .....6-26
- Q**
- Quality .....6-20
- Quality Adjustment .....5-17, 6-20
- Quality tab .....5-17

**R**

RAW Port Number .....	2-7, 8-22
Recalling a job .....	7-4, 7-8, 7-13, 7-18, 7-21, 7-29
Registered user .....	9-9
RegisterHDDLockPW .....	8-25
Registering the header or footer .....	9-86
Remove a certificate .....	9-54
Rendezvous .....	4-2, 4-9
Request a Certificate .....	9-51
Reset .....	9-85
Resetting setting information .....	9-84
Resolution .....	5-17, 6-26
Rotate _180 .....	6-12
Rotate 180 .....	5-9

**S**

SA Setting .....	9-63
Saddle stitcher SD-505 .....	1-10, 10-32, 10-39, 11-16, 13-6
Save in User Box .....	5-8, 6-8, 7-10
Save in User Box and Print .....	6-8
Save in User Box/Print .....	5-8, 7-10
Saving Time .....	8-21
Scale .....	6-7, 6-24
Screen .....	6-26
Secure Print .....	5-8, 6-8
Secure print .....	7-5
Secure print user box .....	7-8
Secure PrintBox .....	7-8, 8-16, 8-26
SecurePrintAccess .....	7-8, 7-9, 8-24
Security .....	9-15
Security Details .....	8-24
Security Settings .....	8-24
Security tab .....	9-88
Select Color .....	5-17, 6-20, 6-26
Selecting the printer .....	4-4, 4-9, 4-14
Set an Encryption Strength .....	9-53
Set ICC Profile .....	8-19
Set Mode using SSL .....	9-54
Setting information .....	9-24
Setting up .....	1-34
Settings tab .....	5-4
Setup method .....	3-2
Shift Each Job .....	8-18
Simplex/Duplex .....	8-17
Skip Blank Pages .....	5-9
Sleep mode .....	1-16
SleepMode Setting .....	8-18
SMB .....	2-8, 3-2, 3-11, 3-17, 3-30, 8-22
Smoothing .....	6-26
SNMP .....	8-22
SNMP manager .....	9-65
SNMP Setting .....	9-67
Special paper .....	1-19
Spool Setting .....	8-19
SSL communication .....	9-55

SSL-based communication .....	9-49
Stabilization .....	8-27
Stamp/Composition .....	6-16
Stamp/Composition tab .....	5-12
Staple .....	5-10, 6-12, 6-26, 8-19, 10-37
Staple cartridge .....	11-14
Staple jam .....	10-37
Statistics Page .....	8-17
Status Notification Setting .....	9-71
Structure of pages .....	9-4
Support Info. ....	8-22
Symbol Set .....	8-19
SysAutoReset Set .....	8-21
SysAutoReset Time .....	8-21
System Auto Reset .....	1-16, 8-21
System box .....	9-22
System Connection .....	8-23
System Setting Menu .....	8-10
System Settings .....	8-18, 8-21
System Settings Menu .....	8-21

**T**

TCP Socket .....	8-23
TCP Socket Setting .....	2-5, 9-80
TCP/IP .....	8-22
TCP/IP Setting .....	8-22
TCP/IP Settings .....	2-2
Test Pattern .....	8-27
Thin Line Support .....	5-18
Time Adjustment .....	8-21
Time Adjustment Setting .....	9-26
Time Setting .....	8-21
Time Zone .....	9-26
Time Zone Setting .....	8-21
TimeAdjustmentSet .....	8-23
Timeout .....	9-93
Timer .....	9-83
Toner cartridge .....	11-2
Toner Save .....	5-17, 6-20, 6-26
Touch & Print .....	8-26
Touch and Print .....	7-28
Touch&PrintBox .....	8-16, 8-26
Touch&PrintUserBox .....	8-26
Transparency Interleave .....	5-12, 6-15, 6-26
TRAP .....	9-77
TRAP Settings .....	8-22
Tray .....	8-17
Tray 1 .....	1-4, 1-22, 10-16
Tray 2 .....	1-4, 1-22, 10-19
Tray 3 .....	1-4, 1-22, 10-20
Tray 4 .....	1-4, 1-22, 10-20
Tray Priority .....	8-18
Trouble code .....	10-2
Troubleshooting .....	10-48

**U**

UDP Port Number .....	8-22
Uninstallation .....	3-36
Uninstalling .....	3-36, 4-17
USB .....	1-32, 3-2, 3-27
USB Timeout .....	8-23
User Auth .....	9-29
User Authentication .....	6-8
User authentication .....	1-40, 1-42, 7-22, 9-7
User box .....	9-20
User Box Settings .....	8-26
User mode .....	9-11
User name .....	8-16
User Registration .....	9-30
User Setting Menu .....	8-8
User Settings Menu .....	8-17
UserAuth. Set NDS .....	8-22
User-defined .....	7-30
Using the TCP Socket .....	9-79
Utility menu .....	8-6

**V**

Verify XPS Sign. ....	8-19
Vertical Adj. ....	8-27

**W**

Waste toner box .....	11-6
Watermark .....	5-12
Web browser .....	9-2
Web Service .....	8-22
Web Service Common Settings .....	2-18
Web Service Function .....	2-17, 9-55
WebServiceSetting .....	8-22
When InvalidCert. ....	8-23
Windows .....	1-31
Windows 2000 .....	3-28
Windows NT 4.0 .....	3-34
Windows Server 2003 .....	3-8
Windows Vista .....	3-17
WINS .....	8-22
WINS Setting .....	2-11, 9-41
Workgroup .....	2-9

**X**

XPS Setting .....	8-19
XPS Settings .....	9-93

**Z**

Zone Name .....	8-22
Zoom .....	5-7





**KONICA MINOLTA**

<http://konicaminolta.com>