




e-STUDIO901/1101/1351

Operating Instructions General Settings Guide

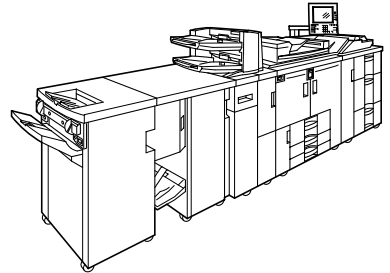

-
- 1 Connecting the Machine
 - 2 System Settings
 - 3 Tray Paper Settings
 - 4 Copier/Document Server Features
 - 5 Printer Features
 - 6 Scanner Features
 - 7 Registering Addresses and Users for Scanner Functions
 - 8 Other User Tools
 - 9 Appendix

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.



Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.



Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see p.225 "Specifications for the Main Unit".)

- Type 1: e-STUDIO901
- Type 2: e-STUDIO1101
- Type 3: e-STUDIO1351

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

❖ **About This Machine**

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

❖ **General Settings Guide**

Explains User Tools settings, and Address Book procedures such as registering e-mail addresses and user codes. Also refer to this manual for explanations on how to connect the machine.

❖ **Troubleshooting**

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables.

❖ **Security Reference**

This manual is for administrators of the machine. It explains security functions that the administrators can use to protect data from being tampered, or prevent the machine from unauthorized use.

Also refer to this manual for the procedures for registering administrators, as well as setting user and administrator authentication.

❖ **Copy / Document Server Reference**

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

❖ **Printer Reference**

Explains Printer functions and operations.

❖ **Scanner Reference**

Explains Scanner functions and operations.

❖ **Network Guide**

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

❖ Other manuals

- PostScript3 Supplement
- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide

Note

- ❑ Manuals provided are specific to machine types. For details, refer to the appendix in About This Machine.
- ❑ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- ❑ "PostScript3 Supplement" includes descriptions of functions and settings that might not be available on this machine.

TABLE OF CONTENTS

Manuals for This Machine	i
How to Read This Manual	1
Symbols	1
Display	2
Accessing User Tools (System Settings)	3
Changing Default Settings	3
Quitting User Tools	4
Displaying Counter	4
About Menu Protect	5

1. Connecting the Machine

Connecting to the Interfaces	7
Connecting to the Ethernet Interface	8
Connecting with the USB Interface	9
Network Settings	10
Settings Required to Use the Printer.....	10
Settings Required to Use E-mail Function	11
Settings Required to Use Scan to Folder Function	12
Settings Required to Use Network TWAIN Scanner	13
Settings Required to Use Document Server	14
Using Utilities to Make Settings.....	15

2. System Settings

General Features	23
Output tray settings	28
Timer Settings	29
Interface Settings	32
Network	32
Print List	36
File Transfer	37
Administrator Tools	42
Program / Change / Delete LDAP Server	50
Programming the LDAP server	51
System Settings on Main and Sub-machines	56
General Features	56
Timer Settings	57
Administrator Tools	58

3. Tray Paper Settings

Tray Paper Settings	61
Changing Tray Paper Settings	61
Quitting Tray Paper Settings	62
Items of Tray Paper Settings	63
Tray Paper Setting on Main and Sub-machines	83

4. Copier/Document Server Features

General Features	85
Reproduction Ratio	92
Edit	96
Stamp	102
Background Numbering	102
Preset Stamp	103
User Stamp	105
Date Stamp	107
Page Numbering	110
Stamp Text.....	112
Input/Output	115
Settings for the Document Server	118
Copier/Document Server Features on Main and Sub-machines	119
General Features	119
Reproduction Ratio	121
Edit.....	122
Stamp.....	124
Input/Output	128

5. Printer Features

List / Test Print	131
Printing the configuration page	132
Interpreting the configuration page	132
Maintenance	134
System	135
Host Interface	140
PCL Menu	141
PS Menu	143
PDF Menu	144

6. Scanner Features

General Settings	145
Scan Settings	147
Send Settings	149

7. Registering Addresses and Users for Scanner Functions

Address Book	151
Managing names in the Address Book	154
Sending e-mail by Quick Dial	154
Sending scanned files to a shared folder directly.....	155
Preventing unauthorized user access to shared folders from the machine	155
Managing users and machine usage	155
Registering Names	156
Registering Names.....	156
Changing a Registered Name.....	157
Deleting a Registered Name	158
Authentication Information	159
Registering a User Code.....	159
Changing a User Code.....	161
Deleting a User Code.....	162
Displaying the Counter for Each User.....	163
Printing the Counter for Each User	164
Printing the Counter for All User	165
Clearing the Number of Prints.....	166
E-mail Destination	168
Registering an E-mail Destination.....	168
Changing an E-mail Destination.....	170
Deleting an E-mail Destination.....	171
Registering Folders	172
Using SMB to Connect.....	172
Using FTP to Connect.....	178
Using NCP to Connect	183
Registering Names to a Group	189
Registering a Group	189
Registering Names to a Group.....	190
Adding a Groupe to Another Group	192
Displaying Names Registered in a Group	193
Removing a Name from a Group	194
Deleting a Group Within Another Group	195
Changing a Group Name	197
Deleting a Group	198
Registering a Protection Code	199
Registering a Protection Code to a Single User.....	199
Registering a Protection Code to a Group User.....	201
Registering SMTP and LDAP Authentication	202
SMTP Authentication	202
LDAP Authentication	204

8. Other User Tools

Changing the Display Language	207
Inquiry	208
Counter	210
Displaying the Total Counter.....	210
Method of Counting.....	211

9. Appendix

- Adjustment Settings for Operators 213**
 - Changing the Adjustment Settings for Operators..... 213
 - Setting Values 214
- Specifications for the Main Unit 225**
 - Document Server 230
 - Auto Document Feeder 231
- Specifications for Options 232**
 - Finisher SR5000 232
 - Booklet Finisher BK5000..... 233
 - Cover Interposer Tray CI5000..... 234
 - Punch Unit PU5000..... 234
 - Z-folding Unit ZF4000 235
 - LCIT RT5000..... 235
 - LCIT RT5010..... 236
 - Multi Bypass Tray BY5000 (Tray 7) 237
 - Others 237
- Information about Installed Software..... 238**
 - expat 238
 - NetBSD 239
 - Sablotron..... 241
 - JPEG LIBRARY 241
 - SASL 242
 - MD4..... 243
 - MD5..... 243
 - Samba(Ver 3.0.4)..... 244
 - RSA BSAFE® 244
 - Open SSL..... 245
 - Open SSH 247
 - Open LDAP 252
- INDEX..... 254**

How to Read This Manual

Symbols

This manual uses the following symbols:

WARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]



Indicates the names of keys that appear on the machine's display panel.

[]


Indicates the names of keys on the machine's control panel.

Display

The display panel shows machine status, error messages, and function menus. The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them.


When you select or specify an item on the display panel, it is highlighted like . Keys appearing as  cannot be used.

Important

 A force or impact of more than 30 N (about 3 kgf) will damage the display panel.

To display the following screen, press the **[User Tools]** key to display the User Tools menu, and then press **[System Settings]**.

Using the System Settings menu screen as an example, this section explains how to use the machine's control panel.

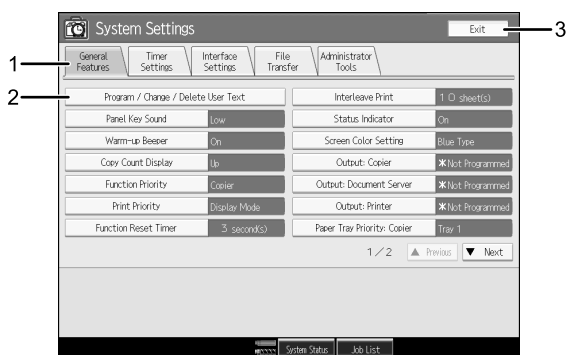

1. The menu tabs for various settings appear. To display the setting you want to specify or change, press the appropriate menu tab.

2. A list of settings appears. To display the setting you want to specify or change, select the appropriate entry in the list.

3. Press this to close the User Tools menu.

Accessing User Tools (System Settings)

This section is for Administrators in charge of this machine.

User Tools allow you to change or set defaults.

Note

- Operations for system settings differ from normal operations. Always quit User Tools when you have finished.
- Any changes you make with User Tools remain in effect even if the main power switch or operation switch is turned off, or the **[Energy Saver]** or **[Clear Modes]** key is pressed.

Reference

p.4 "Quitting User Tools"


Changing Default Settings

This section describes how to change the settings of User Tools.

Important

- If the Administrator Authentications specified, contact your administrator.

1 Press the **[User Tools]** key.

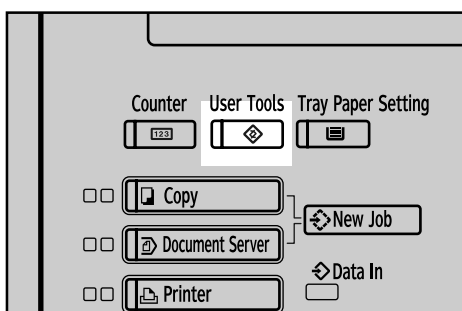

APD014S

2 Select the menu.

To change the System Settings, Press **[System Settings]**.

To change the Copier/Document Server Features, Press **[Copier/Document Server Features]**.

To change the Printer Features, Press **[Printer Features]**.

To change the Scanner Features, Press **[Scanner Features]**.

To adjust color registration or gradation, press **[Maintenance]**.

To find out who to contact for maintenance and where to order consumables, press **[Inquiry]**.

3 Select the menu tab.

4 Change settings by following instructions on the display, and then press **[OK]**.

 **Note**

- To cancel changes made to settings and return to the initial display, press the **[User Tools]** key.


 **Reference**

- p.23 "System Settings"
- p.85 "Copier/Document Server Features"
- p.131 "Printer Features"
- p.145 "Scanner Features"
- p.207 "Other User Tools"

Quitting User Tools

This section describes how to end User Tools.

- 1** Press the **[User Tools]** key.

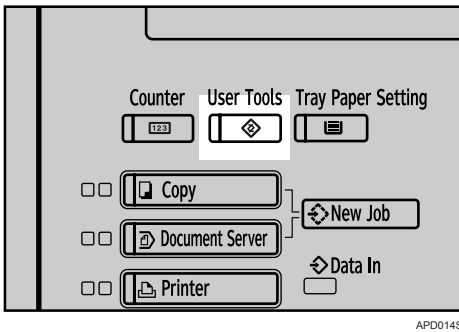


 **Note**

- You can also quit User Tools by pressing **[Exit]**.

Displaying Counter

This section describes how to display Counter.

- 1** Press the **[Counter]** key.

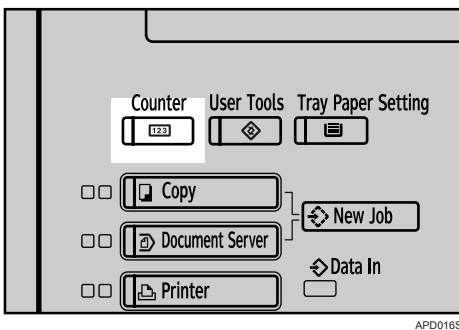

 **Note**

- You can quit displaying Counter by pressing the **[Counter]** key again.

About Menu Protect

Using Menu Protect, you can limit the settings available to users other than the administrator. In the following User Tools menus, you can specify Menu Protect for each setting.

- Copier/Document Server Features
- Printer Features
- Scanner Features


For details about menu protect, contact your administrator.

1. Connecting the Machine

Connect the machine to the network to configure network environment.

Connecting to the Interfaces

This section explains how to check the machine's interface, connect the machine according to the network environment, and specify the network settings.

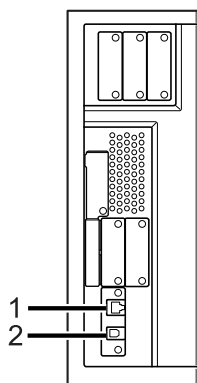

APD999S

1. 10BASE-T/100BASE-TX port

Port for connecting the 10BASE-T or 100BASE-TX cable

Port for connecting the 1000BASE-T, 100BASE-TX or 10BASE-T cable when the Gigabit Ethernet (Optional) is installed

2. USB2.0 port

Port for connecting the USB2.0 interface cable

Connecting to the Ethernet Interface

Connect 10BASE-T or 100BASE-TX cable to the Ethernet interface.


1

Important

If the main power switch is turned "On", turn it "Off".

1 Make sure the main power switch on the machine is "Off".


2 Connect the Ethernet interface cable to the 10BASE-T/100BASE-TX port.

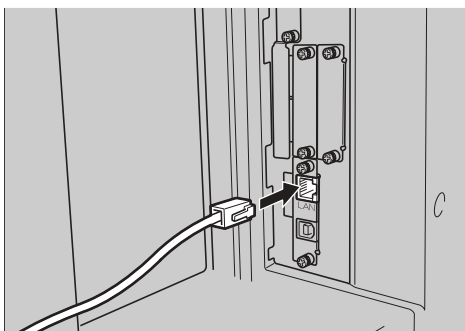

APD998S

3 Connect the other end of the Ethernet cable to a network connection device such as a hub.

4 Turn the main power switch of the machine on.

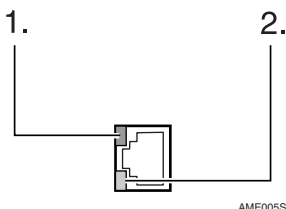

AME005S

① Indicator (green)

Remains green when the machine is properly connected to the network.

② Indicator (yellow)

Turns yellow when 100 BASE-TX is operating. Turns off when 10 BASE-T is operating.

Note

For details about installing the printer driver, see "Preparing the Machine" **Printer Reference**

Reference


"Turning On the Power" **About This Machine**

"Preparing the Machine" **Printer Reference**

Connecting with the USB Interface

Make the connection with the USB 2.0 interface.

- 1** Connect the USB 2.0 interface cable to the USB2.0 port.

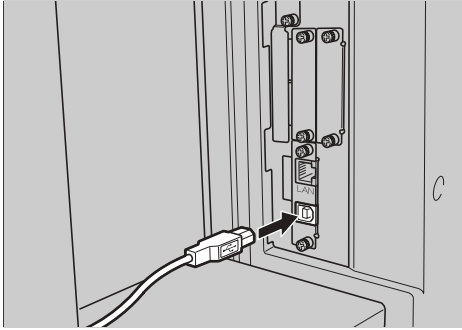

- 2** Connect the other end to the USB port on the host computer.

Note

- Purchase a USB cable separately according to a personal computer in use.
- The USB 2.0 interface board is supported by Windows Me / 2000 / XP, Windows Server 2003, Mac OS X v10.3.3 or higher.
 - For Windows Me:
Make sure to install "USB Printing Support". If USB 2.0 is used with Windows Me, only a speed equal to that of USB 1.1 is possible.
- For details about installing the printer driver, see "Preparing the Machine" **Printer Reference**

Reference

"Preparing the Machine" **Printer Reference**

Network Settings

This section describes the network settings you can change with User Tools (System Settings). Make settings according to functions you want to use and the interface to be connected.

Important

- These settings should be made by the systems administrator, or after consulting with the systems administrator.

Settings Required to Use the Printer

This section lists the settings required for using the printer function.

Ethernet

This section lists the settings required for using the printer function with an Ethernet connection.

For details about specifying the settings, see "Interface Settings" and "File Transfer".

Heading	Setting Item	Setting Requirements
interface settings/Network	Machine IPv4 Address	Mandatory
interface settings/Network	IPv4 Gateway Address	As required
interface settings/Network	Machine IPv6 Address	As required
interface settings/Network	IPv6 Gateway Address	As required
interface settings/Network	IPv6 Stateless Address Autoconfiguration	As required
interface settings/Network	DNS Configuration	As required
interface settings/Network	DDNS Configuration	As required
interface settings/Network	Domain Name	As required
interface settings/Network	WINS Configuration	As required
interface settings/Network	Effective Protocol	Mandatory
interface settings/Network	NCP Delivery Protocol	As required
interface settings/Network	NW Frame Type	As required
interface settings/Network	SMB Computer Name	As required
interface settings/Network	SMB Work Group	As required
interface settings/Network	Ethernet Speed	As required
interface settings/Network	Permit SNMPv3 Communication	As required
interface settings/Network	Permit SSL/TLS Communication	As required
interface settings/Network	Host Name	As required
interface settings/Network	Machine Name	As required

 **Note**

- IPv6 can be used only for the printer function.
- In **[Effective Protocol]**, check that the protocol you want to use is set to **[Active]**.

 **Reference**

p.32 "Interface Settings"

p.37 "File Transfer"

Settings Required to Use E-mail Function

This section describes necessary set items for sending e-mail.

Ethernet

This section describes necessary set items for sending e-mail with Ethernet cable. For details about specifying the settings, see "Interface Settings" and "File Transfer".

Heading	Setting Item	Setting Requirements
interface settings/Network	Machine IPv4 Address	Mandatory
interface settings/Network	IPv4 Gateway Address	Mandatory
interface settings/Network	DNS Configuration	As required
interface settings/Network	DDNS Configuration	As required
interface settings/Network	Domain Name	As required
interface settings/Network	WINS Configuration	As required
interface settings/Network	Effective Protocol	Mandatory
interface settings/Network	Ethernet Speed	As required
interface settings/Network	Permit SNMPv3 Communication	As required
interface settings/Network	Permit SNMPv3 Communication	As required
interface settings/Network	Host Name	As required
File Transfer	SMTP Server	Mandatory
File Transfer	SMTP Authentication	As required
File Transfer	POP before SMTP	As required
File Transfer	Reception Protocol	As required
File Transfer	POP3/IMAP4 Settings	As required
File Transfer	Administrator's E-mail Address	As required
File Transfer	E-mail Communication Port	As required
File Transfer	Program/Change/Delete E-mail Message	As required
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

 **Note**

- As to **[Effective Protocol]**, check if the protocol to use is set as **[Active]**.
- When setting **[POP before SMTP]** to **[On]**, also make setting for **[Reception Protocol]** and **[POP3/IMAP4 Settings]**.
- When setting **[POP before SMTP]** to **[On]**, check **[POP3]** port number in **[E-mail Communication Port]**.

 **Reference**

p.32 "Interface Settings"

p.37 "File Transfer"

Settings Required to Use Scan to Folder Function

This section describes necessary set items for sending file.

Ethernet

This section describes necessary set items for sending file with ethernet cable.

For details about specifying the settings, see "Interface Settings" and "File Transfer".

Heading	Setting Item	Setting Requirements
interface settings/Network	Machine IPv4 Address	Mandatory
interface settings/Network	IPv4 Gateway Address	Mandatory
interface settings/Network	DNS Configuration	As required
interface settings/Network	DDNS Configuration	As required
interface settings/Network	Domain Name	As required
interface settings/Network	WINS Configuration	As required
interface settings/Network	Effective Protocol	Mandatory
interface settings/Network	Ethernet Speed	As required
interface settings/Network	Permit SNMPv3 Communication	As required
interface settings/Network	Permit SSL/TLS Communication	As required
interface settings/Network	Host Name	As required
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

 **Note**

- As to **[Effective Protocol]**, check if the protocol to use is set as **[Active]**.

 **Reference**

p.32 "Interface Settings"

p.37 "File Transfer"

Settings Required to Use Network TWAIN Scanner

This section describes necessary set items for using TWAIN Scanner under the network environment.

Ethernet

This section describes necessary set items for using network TWAIN Scanner with Ethernet cable.

For details about specifying the settings, see "Interface Settings" and "File Transfer".

Heading	Setting Item	Setting Requirements
interface settings/Network	Machine IPv4 Address	Mandatory
interface settings/Network	IPv4 Gateway Address	As required
interface settings/Network	DNS Configuration	As required
interface settings/Network	DDNS Configuration	As required
interface settings/Network	Domain Name	As required
interface settings/Network	WINS Configuration	As required
interface settings/Network	Effective Protocol	Mandatory
interface settings/Network	Ethernet Speed	As required
interface settings/Network	Permit SNMPv3 Communication	As required
interface settings/Network	Permit SSL/TLS Communication	As required
interface settings/Network	Host Name	As required

Note

- As to **[Effective Protocol]**, check if the protocol to use is set as **[Active]**.

Reference

p.32 "Interface Settings"

p.37 "File Transfer"

Settings Required to Use Document Server

This section describes necessary set items for using Document Server function under the network environment.

Ethernet

This section describes necessary set items for using Document Server function with Ethernet cable.

For details about specifying the settings, see "Interface Settings" and "File Transfer".

Heading	Setting Item	Setting Requirements
interface settings/Network	Machine IPv4 Address	Mandatory
interface settings/Network	IPv4 Gateway Address	As required
interface settings/Network	DNS Configuration	As required
interface settings/Network	DDNS Configuration	As required
interface settings/Network	Domain Name	As required
interface settings/Network	WINS Configuration	As required
interface settings/Network	Effective Protocol	Mandatory
interface settings/Network	Ethernet Speed	As required
interface settings/Network	Permit SNMPv3 Communication	As required
interface settings/Network	Permit SSL/TLS Communication	As required
interface settings/Network	Host Name	As required

Note

- As to **[Effective Protocol]**, check if the protocol to use is set as **[Active]**.

Reference

p.32 "Interface Settings"

p.37 "File Transfer"

Using Utilities to Make Settings

The network settings can be specified not only on the machine's control panel but also using utilities such as Web Image Monitor, SmartDeviceMonitor for Admin, and telnet.

Note

- ❑ For details about using Web Image Monitor, see "Using Web Image Monitor", **Network Guide**.
- ❑ For details about using SmartDeviceMonitor for Admin, see "Using SmartDeviceMonitor for Admin", **Network Guide**.
- ❑ For Details about using telnet, see "Remote Maintenance", **Network Guide**.

Reference

"Using Web Image Monitor" **Network Guide**

"Using SmartDeviceMonitor for Admin" **Network Guide**

"Remote Maintenance by telnet" **Network Guide**

Interface Settings

Change set values of **[Interface Settings]** in **[System Settings]** of this machine by using Web Image Monitor, SmartDeviceMonitor for Admin, and telnet.

- ❖ **[Network]→[Machine IPv4 Address]→[Auto-Obtain (DHCP)]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Can be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[Machine IPv4 Address]→[Specify]→[IPv4 Address]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Can be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[Machine IPv4 Address]→[Specify]→[Sub-net Mask]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Can be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[IPv4 Gateway Address]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Can be used for specifying the setting.
 - telnet:Can be used for specifying the setting.

- ❖ **[Network]→[Machine IPv6 Address]→[Manual Configuration Address]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[IPv6 Stateless Address Autoconfiguration]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[DNS Configuration]→[Auto-Obtain (DHCP)]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[DNS Configuration]→[Specify]→[DNS Server1-3]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[DDNS Configuration]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[Domain Name]→[Auto-Obtain (DHCP)]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[Domain Name]→[Specify] →[Domain Name]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
 - telnet:Can be used for specifying the setting.
- ❖ **[Network]→[WINS Configuration]→[WINS Server]**
 - Web Image Monitor:Can be used for specifying the setting.
 - SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
 - telnet:Can be used for specifying the setting.

❖ [Network]→[WINS Configuration]→[Scope ID]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Effective Protocol]→[IPv4]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:You can make the TCP/IP settings if SmartDeviceMonitor for Admin is communicating with the machine using IPX/SPX.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Effective Protocol]→[IPv6]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:You can make the TCP/IP settings if SmartDeviceMonitor for Admin is communicating with the machine using IPX/SPX.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Effective Protocol]→[NetWare]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:You can make the IPX/SPX settings if SmartDeviceMonitor for Admin is communicating with the machine using TCP/IP.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Effective Protocol]→[Net BEUI]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Can be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Effective Protocol]→[AppleTalk]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Can be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ [Network]→[NCP Delivery Protocol]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Can be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[Network]→[NW Frame Type]→[Auto Select]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ **[Network]→[NW Frame Type]→[Ethernet II]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ **[Network]→[NW Frame Type]→[Ethernet 802.2]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ **[Network]→[NW Frame Type]→[Ethernet 802.3]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ **[Network]→[NW Frame Type]→[Ethernet SNAP]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ **[Network]→[SMB Computer Name]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ **[Network]→[SMB Work Group]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ **[Network]→[Ethernet Speed]**

- Web Image Monitor:Cannot be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [Network]→[LAN Type]→[Ethernet]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Permit SNMPv3 Communication]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Can be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Permit SSL/TLS Communication]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Can be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Host Name]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Can be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ [Network]→[Machine Name]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Can be used for specifying the setting.

❖ [File Transfer]→[SMTP Server]→[Server Name]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[SMTP Server]→[Port No.]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[SMTP Authentication]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[POP before SMTP]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[Reception Protocol]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[POP3/IMAP4 Settings]→[Server Name]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[POP3/IMAP4 Settings]→[Encryption]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[Administrator's E-mail Address]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[E-mail Communication Port]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[E-mail Reception Interval]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[Max. Reception E-mail Size]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[E-mail Storage in Server]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[Default User Name/Password (Send)]→[SMB User Name]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[Default User Name/Password (Send)]→[SMB Password]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[Default User Name/Password (Send)]→[FTP User Name]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[Default User Name/Password (Send)]→[FTP Password]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[Default User Name/Password (Send)]→[NCP User Name]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[Default User Name/Password (Send)]→[NCP Password]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ [File Transfer]→[Program/Change/Delete E-mail Message]→[Program/Change]

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[Program/Change/Delete E-mail Message]→[Delete]**

- Web Image Monitor:Can be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[Scanner Resend Interval Time]**

- Web Image Monitor:Cannot be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

❖ **[File Transfer]→[Number of Scanner Resends]**

- Web Image Monitor:Cannot be used for specifying the setting.
- SmartDeviceMonitor for Admin:Cannot be used for specifying the setting.
- telnet:Cannot be used for specifying the setting.

2. System Settings

This chapter describes various items of **[System Settings]** available in this machine.

General Features

This section describes various items of **[General Features]** under **[System Settings]**. Default settings are shown in **bold type**.

For the procedure of entering the **[System Settings]**, see "Accessing User tools (System Settings)".

❖ Program/Change/Delete User Text

You can register character strings you use frequently when specifying settings, such as ".com" and "Regards".

You can register up to 40 items.

- Program/Change

- ① Press **[System Settings]**.
- ② Check that **[General Features]** is selected.
- ③ Press **[Program/Change/Delete User Text]**.
- ④ Press **[Program/Change]**
- ⑤ Select the user text you want to change.
To program new user text, press **[Not Programmed]**.
- ⑥ Press **[OK]**.
- ⑦ Press **[Exit]**.

- Delete

- ① Press **[System Settings]**.
- ② Check that **[General Features]** is selected.
- ③ Press **[Program/Change/Delete User Text]**.
- ④ Press **[Delete]**.
- ⑤ Select the user text you want to delete.
- ⑥ Press **[Clear]**.
- ⑦ Press **[Exit]**.

❖ Panel Key Sound

The beeper (key tone) sounds when a key is pressed.

- Low
- **Medium**
- High
- Off

❖ Warm-up Beeper (copier/Document Server)

You can have the beeper sound when the machine becomes ready to copy after leaving Energy Saver mode, or when the power is turned on.

- On
- Off

❖ Copy Count Display (copier/Document Server)

The copy counter can be set to show the number of copies made (count up) or the number of copies yet to be made (count down).

- Up
- Down

❖ Function Priority

You can specify the mode to be displayed immediately after the operation switch is turned on, or when System Reset mode is turned on.

- Copier
- Document Server
- Printer
- Scanner

❖ Print Priority

Print Priority is given to the mode selected.

- Display Mode
- Copier/Document Server
- Printer
- Interleave
- Job Order

When **[Interleave]** is selected, the current print job will be interrupted after a maximum of five sheets.

❖ Function Reset Timer

You can set the length of time the machine waits before changing modes when using the multi-access function.

This is useful if you are making many copies and have to change settings for each copy. If you set a longer reset period, you can prevent interruption from other functions.

The default time is **three seconds**.

- Set Time
- Immediate

When you select **[Set Time]**, enter the time (3–30 seconds, in 1 second increments) using the number keys.

❖ Interleave Print

You can set the timing for functions to switch when **[Print Priority]** has been set to **[Interleave]**.

Default: **10 sheets**

Depending on printing time, set values may change.

The timing for functions can be set from 1 to 20 sheets.

❖ Status Indicator

You can specify whether the status indicator shows the machine status or not.

- On
- Off


❖ Screen Color Setting

You can select the screen color among from five types.

- Blue Type
- Blue & Gray Type
- Gray Type
- Green Type
- Red Type

❖ Output: Copier (copier)

You can specify a tray to which documents are delivered.

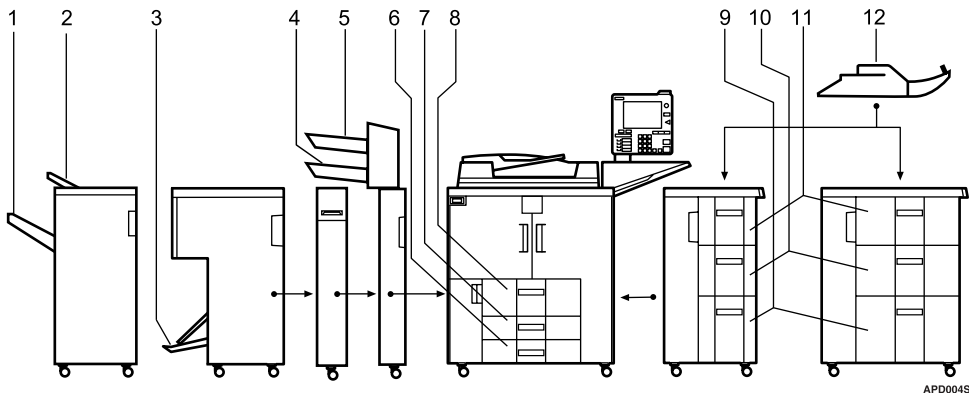

1. Finisher Shift Tray

2. Finisher Upper Tray

3. Finisher Booklet Tray

4. Interposer Lower Tray

5. Interposer Upper Tray

6. Tray 3

7. Tray 2

8. Tray 1

9. Tray 6

10. Tray 5

11. Tray 4

12. Tray 7

❖ Output: Document Server (Document Server)

You can specify a tray to which documents are delivered.

- Finisher SR5000
 - **Finisher Upper Tray**
 - Finisher Shift Tray
- Booklet Finisher BK5000
 - **Finisher Booklet Tray**

❖ Output: Printer (printer)

You can specify a tray to which documents are delivered.

The output trays set on the printer driver have priority over the output tray specified below.

- Finisher SR5000
 - **Finisher Upper Tray**
 - Finisher Shift Tray
- Booklet Finisher BK5000
 - **Finisher Booklet Tray**

❖ Paper Tray Priority: Copier (copier)

You can specify the tray to supply paper for output.

- **Tray 1**
- Tray 2
- Tray 3
- Tray 4
- Tray 5
- Tray 6
- Tray 7

❖ Paper Tray Priority: Printer (printer)

You can specify the tray to supply paper for output.

- **Tray 1**
- Tray 2
- Tray 3
- Tray 4
- Tray 5
- Tray 6
- Tray 7

❖ System Status/Job List Display Time

You can specify how long to display the System Status and Job List display for.

- On
- Off

By selecting **[On]**, you can specify a display time between 10 and 999 seconds. The timing is set to “**15 second(s)**” by default.

❖ Time Interval between Printing Jobs

You can set the length of interval between the end of a job and the start of a new job.

If you select “Set Time”, enter the time, 0 - 999 seconds (in 1 second increments), using the number keys. Default value is **3 seconds**.

- Set Time
- Do not set

❖ ADF Original Table Elevation

You can set the timing for elevating the ADF original table.

- When original is set
- When **[Start]** is pressed

❖ ADF Feed Speed

When you use thick paper, you can slow down the printing speed to avoid fusing the image by selecting **[slow]**.

- Normal
- Slow

❖ Optimum for Thick Paper

You can set the optimum for thick paper to On or Off.

- On
- Off

❖ Key Repeat

You can enable or disable repetition of an operation if a key on the screen or control panel is pressed continuously.

- Off
- Normal
- Repeat Time: Medium
- Repeat Time: Long

❖ Z-fold position

Set the folding-back position in units of 1 mm when you specify Z-folding. The machine is shipped from the factory with this value set to **2 mm (metric version)** or **0.1 inch (inch version)**.

The setting range of the folding position for each paper size is given below:

- Metric version
 - A3: 2 - 25 mm
 - B4 JIS: 2 - 40 mm
 - A4: 2 - 10 mm
 - 11 × 17: 2 - 20 mm
 - 8_{1/2} × 14: 2-35 mm
- Inch version
 - A3: 0.1 - 1.0 inch
 - B4 JIS: 0.1 - 1.6 inch
 - A4: 0.1 - 0.4 inch
 - 11 × 17: 0.1 - 0.8 inch
 - 8_{1/2} × 14: 0.1 - 1.4 inch

 Note

- If the Panel Key Sound setting is **[Off]**, the beeper does not sound, whatever the Warm Up Notice setting.
- The Function Reset Timer setting is ignored if Interleave is set for Print Priority.

 Reference

p.3 "Accessing User Tools (System Settings)"

"Function Compatibility", **Copy/Document Server Reference**

Output tray settings

 Important

- You cannot interrupt the current stapling job even if a stapling job is specified by a different function.
- When the optional Finisher SR5000 or the optional Booklet Finisher BK5000 is installed and stapling or shift sorting are specified for a job, the job will be delivered to the finisher shift tray regardless of the output tray specified.
- Paper that is fed from the bypass tray cannot be delivered to finisher trays.

Timer Settings

This section describes various items of [Timer Settings] under [System Settings].

❖ Auto Off Timer

After a specified period has passed, following job completion, the machine automatically turns off, in order to conserve energy. This function is called "Auto Off". The machine status after the Auto Off operation is referred to as "Off mode", or "Sleep mode". For the Auto Off Timer, specify the time to elapse before Auto Off.

The timing is set to "90 minute(s)"(Type 2,3: 120 minute(s)) by default.

The time can be set from 10 seconds to 240 minutes, using the number keys.

Auto Off may not work when error messages appear.

❖ Energy Saver Timer

Set the amount of time the machine waits before switching to lower-power mode after copying has finished or the last operation is performed.

The time can be set from 1 to 240 minutes, using the number keys.

The timing is set to "15 minute(s)" by default.

❖ Panel Off Timer

Set the amount of time the machine waits before switching the panel off after copying has finished or the last operation is performed.

The warm up time for making a copy from standby mode is 10 seconds.

Enter a time interval between 10 seconds and 240 minutes, using the number keys.

The timing is set to "1 minute(s)" by default.

❖ System Auto Reset Timer

The System Reset setting automatically switches the screen to that of the function set in Function Priority when no operations are in progress, or when an interrupted job is cleared. This setting determines the system reset interval.

- On
- Off

The time can be set from 10 to 999 seconds, using the number keys

The timing is set to "60 second(s)" by default.

❖ Copier/Document Server Auto Reset Timer (copier/Document Server)

Specifies the time to elapse before copier and Document Server modes reset.

- On
- Off

If [Off] is selected, the machine does not automatically switch to the user code entry screen.

The time can be set from 10 to 999 seconds, using the number keys.

The timing is set to "60 second(s)" by default.

❖ Printer Auto Reset Timer (printer)

Specifies the time to elapse before the printer function resets.

- On
- Off

The time can be set from 10 to 999 seconds, using the number keys.

The timing is set to "60 second(s)" by default.

❖ Scanner Auto Reset Timer (scanner)

Specifies the time to elapse before the scanner function resets.

- On
- Off

If [Off] is selected, the machine will not automatically switch to the user code entry screen.

The time can be set from 10 to 999 seconds, using the number keys.

The timing is set to "60 second(s)" by default.

❖ Set Date

Set the date for the copier's internal clock using the number keys.

To change between year, month, and day, press [←] and [→].

❖ Set Time

Set the time for the copier's internal clock using the number keys.

Enter the time using the 24-hour format (in 1 second increments).

To change between hours, minutes and seconds, press [←] and [→].

❖ Auto Logout Timer

You can specify whether or not to automatically log out a user when the user does not operate the machine for a specified period of time after logging in.

- On
- Off

When [On] is selected, the time can be set from 60 to 999 seconds, in one second increments, using the number keys.

The timing is set to "180 second(s)" by default.

❖ Weekly Timer Code

Set an eight-digit code to turn the main power on and off at the time set in "Weekly Timer".

- Off
- On

If "On" is selected, enter the Weekly Timer Code with number keys. Not doing so may result in the machine being disabled, even if the power is turned on.

❖ Weekly Timer: Monday-Sunday

Set the time to turn on/off the power for each day of the week.

- Power On Time
- Power Off Time

Enter the Power On Time and the Power Off Time using the 24-hour system. Enter the "hour" and "minute" using the number keys.

Interface Settings

This section describes various items of **[Interface Settings]** under **[System Settings]**.

Network

2

This section describes various items of **[Network]** under **[Interface Settings]**.

❖ Machine IPv4 Address

Before using this machine in the network environment, you must configure the IP address and subnet mask.

When you select **[Specify]**, enter the **[Machine IPv4 Address]** and **[Sub-net Mask]** as "xxx.xxx.xxx.xxx" ("x" indicates a number).

When you select **[Specify]**, be sure not to set the same **[Machine IPv4 Address]** as that of another machines on the network.

The physical address (MAC address) also appears.

- **Auto-Obtain (DHCP)**
- Specify
 - Machine IPv4 Address: 011.022.033.044
 - Sub-net Mask: 000.000.000.000

❖ IPv4 Gateway Address

A gateway is a connection or interchange point between two networks.

Configure the gateway address for the router or host computer used as a gateway.

- IPv4 Gateway Address: **000.000.000.000**

❖ Machine IPv6 Address

You can specify the machine's IPv6 network address.

- Link-local Address
 - The machine's specified link-local address appears.
- manual Configuration Address
 - The machine's manually configuration address appears.
- Stateless Address: 1-5
 - The specified stateless address appears.

❖ IPv6 Gateway Address

The machine's IPv6 gateway address appears.

❖ IPv6 Stateless Address Autoconfiguration

You can set "IPv6 Stateless Address Autoconfiguration" to "Active" or "Inactive".

- **Active**
- Inactive

❖ DNS Configuration

Make settings for the DNS server.

When you select **[Specify]**, enter the **[DNS Server]** IP address as "xxx.xxx.xxx.xxx" ("x" indicates a number).

- **Auto-Obtain (DHCP)**
- Specify
 - DNS Server 1: 000.000.000.000
 - DNS Server 2: 000.000.000.000
 - DNS Server 3: 000.000.000.000

❖ DDNS Configuration

You can specify the DDNS settings.

- **Active**
- Inactive

❖ Domain Name

You can specify the domain name.

- **Auto-Obtain (DHCP)**
- Specify

❖ WINS Configuration

You can specify the WINS server settings.

If **[On]** is selected, enter the **[WINS Server]** IP address as "xxx.xxx.xxx.xxx" ("x" indicates a number).

If DHCP is in use, specify the **[Scope ID]**.

Enter a **[Scope ID]** using up to 31 alphanumeric characters.

- **On**
 - Primary WINS Server: 000.000.000.000
 - Secondary WINS Server: 000.000.000.000
 - Scope ID
- Off

❖ Effective Protocol

Select the protocol to use in the network.

- IPv4: **Active** / Inactive
- IPv6: Active / **Inactive**
- NetWare: **Active** / Inactive
- NetBEUI: **Active** / Inactive
- AppleTalk: **Active** / Inactive

❖ NCP Delivery Protocol

Select the protocol for NCP delivery.

- IPX Priority
- **TCP/IP Priority**
- IPX Only
- TCP/IP Only

❖ NW Frame Type

Select the frame type when you use NetWare.

- **Auto Select**
- Ethernet II
- Ethernet 802.2
- Ethernet 802.3
- Ethernet SNAP

❖ SMB Computer Name

Specify the SMB computer name.

Enter the computer name using up to 15 alphanumerical characters.

"*+/,/;<>=?[\]|. and spaces cannot be entered.

Setting a computer name starting with RNP and rnp is inhibited.

Use uppercase letters for alphabet.

❖ SMB Work Group

Specify the SMB work group.

Enter the computer name using up to 15 alphanumerical characters.

"*+/,/;<>=?[\]|. and spaces cannot be entered.

Use uppercase letters for alphabet.

❖ Ethernet Speed

Set the access speed for networks.

Select a speed that matches your network environment. **[Auto Select]** should usually be selected.

- **Auto Select**
- 10Mbps Full Duplex
- 10Mbps Half Duplex
- 100Mbps Full Duplex
- 100Mbps Half Duplex

❖ Ping Command

Check the network connection with ping command using given IP address. If you fail to connect to the network, check the following, and then retry the ping command.

- Check TCP/IP of the printer is active.
- Check that the machine with assigned IP address is connected to the network.
- There is a possibility that same IP address is used for the specified equipment.

❖ Permit SNMPv3 Communication

Set the encrypted communication of SNMPv3.

- Encryption Only
- **Encryption/Clear Text**

If you set to **[Encryption Only]**, you need to set password for the machine.

❖ Permit SSL/TLS Communication

Set the encrypted communication of SSL/TLS.

- Ciphertext Only
- **Ciphertext Priority**
- Ciphertext/Clear Text

If you set to **[Ciphertext Only]**, you need to install the server authentication for the machine.

❖ Host Name

Specify the host name.

Enter the host name using up to 63 alphanumerical characters.

❖ Machine Name

Specify the machine name.

Enter the machine name using up to 31 alphanumerical characters.


Print List

You can check items related to the network in use.


The configuration page shows the current network settings and network information.

1 Press **[System Settings]**.

2 Press **[Interface Settings]**.

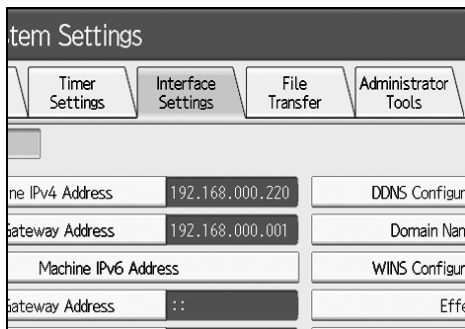

3 Press **[Print List]**.

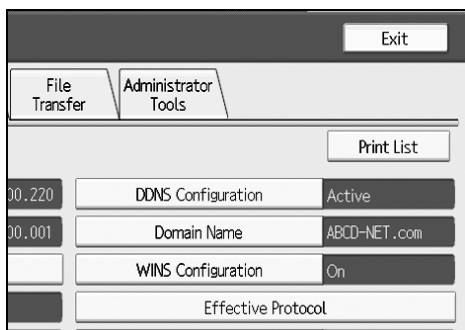

4 Press the **[Start]** key.

The configuration page is printed.

5 Press **[Exit]**.

6 Press the **[User Tools]** key.

Note

- You can also exit by pressing **[Exit]** on the User Tools main menu.

File Transfer

This section describes various items of **[File Transfer]** under **[System Settings]**.

❖ SMTP Server

If DNS is in use, enter the host name.

If DNS is not in use, enter the SMTP server IP address.

- Server Name
- Port No.

Enter the **[Server Name]** using up to 127 alphanumeric characters. Spaces cannot be used.

Enter **[Port No.]** between 1 and 65535 using the number keys, and then press the **[#]** key.

The Port No. is set to **25** by default.

❖ SMTP Authentication

You can configure SMTP authentication (PLAIN, LOGIN, CRAMMD5, DIGEST-MD5).

When sending e-mail to an SMTP server, you can enhance the SMTP server security level by authentication that requires entering the user name and password.

If the SMTP server requires authentication, set **[SMTP Authentication]** to **[On]**, and then specify **[User Name]**, **[Password]**, and **[Encryption]**.

- SMTP Authentication

- On

User Name

Enter **[User Name]** using up to 191 alphanumeric characters. Spaces cannot be used. Depending on the SMTP server type, "realm" must be specified. Add "@" after the user name, as in "user name@realm".

E-mail Address

Password

Enter **[Password]** using up to 63 alphanumeric characters. Spaces cannot be used.

Encryption: **Auto** / On / Off

[Encryption]-[Auto]: If the authentication method is PLAIN, LOGIN, CRAM-MD5, or DIGEST-MD5.

[Encryption]-[On]: If the authentication method is CRAMMD5 or DIGEST-MD5.

[Encryption]-[Off]: If the authentication method is PLAIN, or LOGIN.

- Off

❖ POP before SMTP

You can configure POP authentication (POP before SMTP).

When sending e-mail to an SMTP server, you can enhance the SMTP server security level by connecting to the POP server for authentication.

To enable POP server authentication before sending e-mail via the SMTP server, set **[POP before SMTP]** to **[On]**. E-mail is sent to the SMTP server after the time specified for **[Wait Time after Authent.]** has elapsed.

If you select **[On]**, enter **[Server Name]** in **[POP3/IMAP4 Setting]**. Also, check the port number for **[POP3]** in **[E-mail Communication Port]**.

- **On**
 - **Wait Time after Authent.**

Using the number keys, you can set **[Wait Time after Authent.]** from zero to 10,000 milliseconds, in increments of one millisecond. The timing is set to **300msec** by default.
 - **User Name**

Enter **[User Name]** using up to 63 alphanumeric characters. Spaces cannot be used.
 - **E-mail Address**
 - **Password**

Enter **[Password]** using up to 63 alphanumeric characters. Spaces cannot be used.
- **Off**

❖ Reception Protocol

Specify Reception Protocol for the function "Auto E-mail Notification". For details about the function "Auto E-mail Notification", see the Web Image-Monitor Help.

- **POP3**
- **IMAP4**
- **SMTP**

❖ POP3/IMAP4 Settings

Specify the POP3/IMAP4 server name for sending or receiving E-mail. The specified POP3/IMAP4 server name is used for **[POP before SMTP]**.

- **Server Name**
If DNS is in use, enter the host name. If DNS is not in use, enter the POP3/IMAP4 or server IP address. Enter POP3/IMAP4 **[Server Name]** using up to 127 alphanumeric characters. Spaces cannot be used.
- **Encryption**
 - **Auto**
Password encryption is automatically set according to the POP/IMAP server settings.
 - **On**
Encrypt password.
 - **Off**
Do not encrypt password.

❖ Administrator's E-mail Address

On e-mailed scanned documents, if the sender is not specified this appears as the sender's address.

If you have specified the user name and e-mail address in **[SMTP Authentication]**, make sure to specify this setting.

Enter within up to 128 alphanumeric characters.

On e-mailed scanned documents, if **[Auto Specify Sender Name]** is **[Off]**, specify the sender.

❖ E-mail Communication Port

Specify the port numbers for sending or receiving E-mail. The specified POP3 port number is used for **[POP before SMTP]**.

- **POP3: 110**
- **IMAP4: 143**
- **SMTP: 25**

Enter a port number between 1 and 65535 using the number keys, and then press the **[#]** key.

❖ E-mail Reception Interval

Specify, in minutes, the time interval for the function "Auto E-mail Notification" via POP3 or IMAP4 server. For details about the function "Auto E-mail Notification", see the Web ImageMonitor Help.

- **On: 15 minute(s)**
- **Off**

If **[On]** is selected, the number of times can be set from 2 to 1440 in increments of one minute, using the number keys.

❖ Max. Reception E-mail Size

Specify the maximum reception e-mail size for the function "Auto E-mail Notification". For details about the function "Auto E-mail Notification", see the Web ImageMonitor Help.

- **2MB**

Using the number keys, enter a size from one to 50 MB in increments of one megabyte.

❖ E-mail Storage in Server

Specify whether or not to store received e-mails of the function "Auto E-mail Notification" on the POP3 or IMAP4 server. For details about the function "Auto E-mail Notification", see the Web ImageMonitor Help.

- **Off**
- All
- Errors Only

❖ Default User Name/Password (Send)

You can specify the user name and password required when sending scan file directly to a shared folder on a computer running Windows, to an FTP server, or to a NetWare server.

- SMB User Name
- SMB Password
- FTP User Name
- FTP Password
- NCP User Name
- NCP Password

Enter in up to 128 alphanumeric characters.

❖ Program/Change/Delete E-mail Message

You can program, change, or delete the e-mail message used when sending scan file as an attachment.

- Program/Change
 - ① Press **[System Settings]**.
 - ② Press **[File Transfer]**.
 - ③ Press **[Program/Change/Delete E-mail Message]**.
 - ④ Press **[Program/Change]**.
 - ⑤ Press **[Not Programmed]**.
 - ⑥ Press **[Change]**.

- ⑦ Enter a name, and the press **[OK]**.

Enter the name using up to 20 alphanumeric characters.

- ⑧ Press **[Edit]**.

To start a new line, press **[OK]** to return to the e-mail message screen, and then press **[▼]** in "Select Line to Edit:".

- ⑨ Enter the text, and then press **[OK]**.
Enter up to five lines of text. Each line can consist of up to 80 alphanumeric characters.
 - ⑩ Press **[OK]**.
 - ⑪ Press **[Exit]**.
- Delete
 - ① Press **[System Settings]**.
 - ② Press **[File Transfer]**.
 - ③ Press **[Program/Change/Delete E-mail Message]**.
 - ④ Press **[Delete]**.
 - ⑤ Select the e-mail message to delete.
The confirmation message about deleting appears.
 - ⑥ Press **[Yes]**.
- ❖ **Auto Specify Sender Name**
Set whether or not to specify the name of the sender when sending e-mail.
- **On**
If you select **[On]**, the specified e-mail address will appear in the "From:" box. If you do not specify the sender's address, the administrator's e-mail address will appear in the "From:" box.
 - **Off**
If you select **[Off]**, the specified e-mail address will appear in the "From:" box, but you cannot send e-mail without specifying the sender's e-mail address.
- ❖ **Scanner Resend Interval Time**
Specifies the interval the machine waits before resending scan file, if they cannot be sent to the mail server.
The timing is set to "300 second(s)" by default.
The interval time can be set from 60 to 900 seconds in one second increments, using the number keys.
This setting is for the scanner function.
- ❖ **Number of Scanner Resends**
Sets a maximum number of times scan file is resent to the mail server.
- **On: 3 time(s)**
 - **Off**
If **[On]** is selected, the number of times can be set from 1 to 99 using the number keys. This setting is for the scanner function.

Administrator Tools

This section describes various items of **[Administrator Tools]** under **[System Settings]**.

Administrator Tools are used by the administrator. To change these settings, contact the administrator.

2

We recommend specifying Administrator Authentication before making Administrator Tools settings.

❖ Address Book Management

You can add, change or delete information registered in the Address Book. For details, see "Address Book".

- Program/Change
You can register and change names as well as user codes.
 - Names
You can register a name, key display, registration number, and title selection.
 - Auth. Info
You can register a user code, and specify the functions available to each user code. You can also register user names and passwords to be used when sending e-mail, sending files to folders, or accessing an LDAP server.
 - Protection
You can register a protection code.
 - E-mail
You can register an e-mail address.
 - Folder
You can register the protocol, SMB, FTP, NCP, path.
 - Add to Group
You can put names registered in the Address Book into a group.
- Delete
You can delete a name from the Address Book.

You can register up to 2,000 names.

You can register up to 500 user codes.

You can also register and manage names in the Address Book using Web Image Monitor or SmartDeviceMonitor for Admin.

Use SmartDeviceMonitor for Admin provided with Printer/Scanner unit.

❖ Address Book: Program/Change/Delete Group

Names registered in the Address Book can be added into a group. You can then easily manage the names registered in each group.

- Program/Change
You can register and change groups.
 - Names
You can register a name, key display, registration number, and title selection.
 - Programmed User/Group
You can check the names or groups registered in each group.
 - Protection
You can register a protection code.
 - Add to Group
You can put groups registered in the Address Book into a group.
- Delete
You can delete a group from the Address Book.

You can register up to 100 groups.

You can also register and manage groups in the Address Book using Web Image Monitor or SmartDeviceMonitor for Admin.

Use SmartDeviceMonitor for Admin provided with the printer scanner unit.


❖ Address Book: Change Order

Changes the order of registered name.


You can rearrange the order of items on the same page, but you cannot move items to another page.

For example, you cannot move an item from “PLANNING” ([OPQ]) to “DAILY” ([CD]).

- ① Press **[System Settings]**.
- ② Press **[Administrator Tools]**.
- ③ Press **[Address Book: Change Order]**.

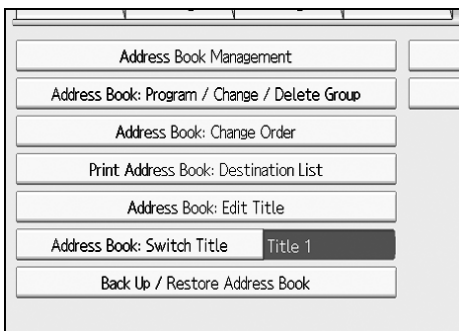


- ④ Press the name key to be move.

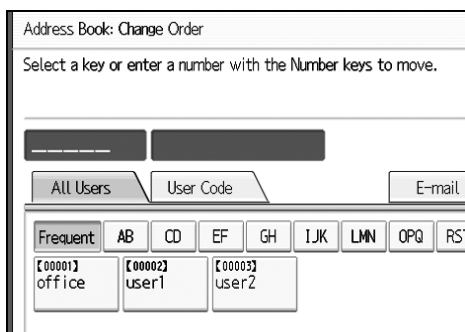

You can select a name using the number keys.


- ⑤ Press the name key in the place you want to move to.

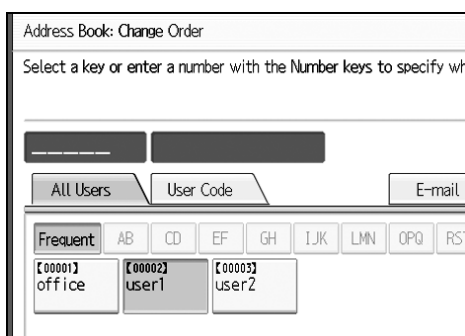

The selected user key is moved to the selected position, and the user key currently at the selected position is moved forward or backward.

If you move the selected user key forward, the user key currently at the selected position is moved backward.

If you move the selected user key backward, the user key currently at the selected position is moved forward.

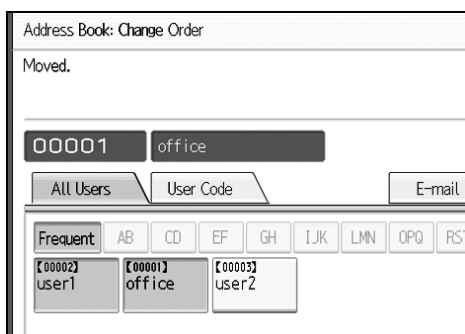

You can also select a name using the number keys.

❖ Print Address Book: Destination List

You can print the destination list registered in the Address Book.


- Print in Title 1 Order
Prints the Address Book in Title 1 order.
- Print in Title 2 Order
Prints the Address Book in Title 2 order.
- Print in Title 3 Order
Prints the Address Book in Title 3 order.
- Print Group Dial List
Prints the group Address Book.

- ① Press **[System Settings]**.
- ② Press **[Administrator Tools]**.
- ③ Press **[Print Address Book: Destination List]**.
- ④ Select the print format.
- ⑤ To print the list on two-sided pages, select **[Print on 2 Sides]**.
- ⑥ Press the **[Start]** key.
The list prints out.


❖ Address Book: Edit Title

You can edit the title to easily find a user.

- ① Press **[System Settings]**.
- ② Press **[Administrator Tools]**.
- ③ Press **[Address Book: Edit Title]**.

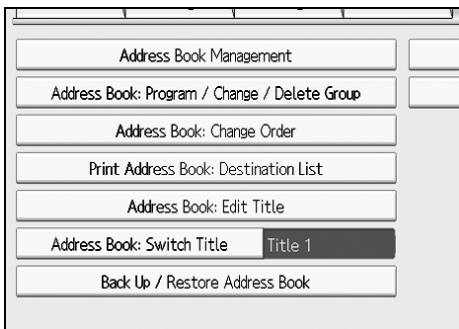

- ④ Press the title key you want to change.

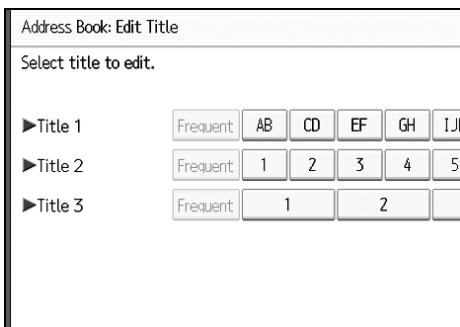

- ⑤ Enter the new name, and then press **[OK]**.
- ⑥ Press **[OK]**.

❖ **Address Book: Switch Title**

Specifies the title to select a name.

- **Title 1**
- Title 2
- Title 3

❖ **Back Up / Restore Address Book**

You can back up the machine's address book to external storage or restore the backup copy from the external storage.

- **Back Up**
You can back up the machine's address book onto an SD card.
For details about SD cards, contact your local sales representative.
You can also perform backup using Web Image Monitor or SmartDevice-Monitor for Admin. For details, see the Web Image Monitor Help, or "Monitoring and Configuring the Printer", Network Guide.
- **Restore**
You can restore the backup copy of the address book from external storage.
- **Format**
You can format the external storage.
- **Obtain Media Info**
The free space and occupied space of the external storage are displayed.

❖ **Display / Print Counter**

Allows you to view and print the number of prints.

- **Display/Print Counter**
Displays the number of prints for each function (Total, and Copier, Printer, A3/DLT, Duplex, Send/TX Total Color, Send/TX Total Black & White, Scanner Send Color, Scanner Send Black & White, GPC, GPC Printer).
- **Print Counter List**
Prints out a list of the number of prints made under each function.

❖ **Display / Clear / Print Counter per User**

Allows you to view and print the numbers of prints accessed with user codes, and to set those values to 0.

Press **[▲Previous]** and **[▼Next]** to show all the numbers of prints.

The number of prints may differ from the counter value shown in Display / Print Counter.

- **Print Counter**
 - **Print Counter List for All Users**
Prints the counter values for all the users.
 - **Clear Counter for All Users**
Sets the counter value for all the users.

- **Print Counter List per User**
Prints the counter values for each user.
- **Clear Counter per User**
Sets the counter value for each user.
- **Scanner Counter**
 - **Print Counter List for All Users**
Prints the counter values for all the users.
 - **Clear Counter for All Users**
Sets the counter value for all the users.
 - **Print Counter List per User**
Prints the counter values for each user.
 - **Clear Counter per User**
Sets the counter value for each user.

❖ **User Authentication Management**

- **User Code Auth.**
Using User Code Authentication, you can limit the available functions and supervise their use.
When using User Code Authentication, register the user code.
Using the Printer PC Control function, you can obtain a log of prints corresponding to the codes entered using the printer driver.
If User Code Authentication has been specified, Auto color Selection cannot be used.
For details about Basic Authentication, Windows Authentication and LDAP Authentication, consult your administrator.
- **Functions to Restrict**
 - Copier
 - Printer
 - Document Server
 - Printer: PC Control
 - Scanner
- **Printer Job Authentication**
 - Entire
 - Simple (Limitation)
 - Simple (All)
- **Basic Auth.**
- **Windows Auth.**
- **LDAP Auth.**
- **Off**

❖ **Administrator Authentication Management**

For details about this function, consult your administrator.

❖ Program/Change Administrator

For details about this function, consult your administrator.

❖ Key Counter Management

You can specify that functions that you want to manage with the key counter.

- Copier
- Document Server
- Printer
- Scanner

❖ Extended Security

You can specify whether or not to use the extended security functions. For details about the extended security functions, consult your administrator.

❖ Auto Delete File in Document Server

You can specify whether documents stored in the Document Server will or will not be deleted after a specified period of time.

- **On: 3 day(s)**
- Off

If you select **[On]**, documents stored subsequently are deleted after the specified period.

If you select **[Off]**, documents are not automatically deleted.

If you select **[On]**, enter a number of days from 1 to 180 (in 1 day increments). The default is **3 days**, this means documents are deleted 3 days (72 hours) after they are stored.

❖ Delete All Files in Document Server

You can delete files stored in the Document Server, including files stored for Sample Print, Locked Print, Hold Print, and Stored Print under the printer function.

- No
- Yes

Even if a password is always set, all documents are deleted.

A confirmation message appears. To delete all documents, select **[Yes]**.

❖ Program / Change / Delete LDAP Server

Program the LDAP server to find up e-mail destinations in the LDAP server Address Book directly. This function is possible when sending scan files by e-mail using the scanner.

- Name
- Server Name
- Search Base
- Port Number
- Use Secure Connection (SSL)
- Authentication

- Search Conditions
- Search Options

To start an LDAP search, make sure that the items listed below are set. For other items, check your environment and make any necessary changes.

- Server Name
- Search Base
- Port Number
- Search Conditions
- Authentication method selection

To use the LDAP server in Administrator Tools, select **[On]** under LDAP server.

This function supports LDAP Version 2.0 and 3.0. Ver 2.0 does not support High Security authentication.

- Program/Change
 - ① Press **[System Settings]**.
 - ② Press **[Administrator Tools]**, and then press **[▼Next]** twice.
 - ③ Press **[Program/Change/Delete LDAP Server]**.
 - ④ Select the LDAP server you want to program or change.
When programming the server, select **[Not Programmed]**.

- ⑤ Set each item as necessary.
 - ⑥ Press **[OK]** after setting each item.
 - ⑦ Press **[Exit]** twice.
 - ⑧ Press the **[User Tools]** key.
- Delete
 - ① Press **[System Settings]**.
 - ② Press **[Administrator Tools]**, and then press **[▼Next]** twice.
 - ③ Press **[Program/Change/Delete LDAP Server]**.
 - ④ Press **[Delete]**.
 - ⑤ Select the LDAP server you want to delete.
 - ⑥ Press **[Yes]**.
 - ⑦ Press **[Exit]**.
 - ⑧ Press the **[User Tools]** key.

❖ LDAP Search

You can specify whether or not to use the LDAP server for searching.

- Off
- On

If you select **[Off]**, **[Search LDAP]** will not appear on the searching display.

❖ AOF (Always On)

Specify whether or not to use Auto Off.

- On
- Off

❖ Firmware Version

You can check the version of the software installed in this machine.

❖ Network Security Level

For details about this function, consult your administrator.

❖ Transfer Log Setting

For details about this function, consult your administrator.

 **Reference**

p.151 "Address Book"

p.164 "Printing the Counter for Each User"

p.210 "Counter"

Program / Change / Delete LDAP Server

This section explains how to specify the LDAP server settings.

To program / change the LDAP server

1 Press **[System Settings]**.

2 Press **[Administrator Tools]**, and then press **[▼Next]** twice.

3 Press **[Program / Change / Delete LDAP Server]**.

4 Check that **[Program / Change]** is selected.

5 Select the LDAP server you want to program or change.

When programming the server, select **[Not Programmed]**.

6 Set each item as necessary.

7 Press **[OK]** after setting each item.

For details about LDAP server, see "Programming the LDAP server".

8 Press **[Exit]**.

9 Press the **[User Tools]** key.

 **Reference**

p.51 “Programming the LDAP server”

To delete the programmed LDAP server

- 1** Press **[System Settings]**.
 - 2** Press **[Administrator Tools]**, and then press **[▼Next]** twice.
 - 3** Press **[Program / Change / Delete LDAP Server]**.
 - 4** Press **[Delete]**.
 - 5** Select the LDAP server you want to delete.
 - 6** Press **[Yes]**.
 - 7** Press **[Exit]**.
 - 8** Press the **[User Tools]** key.
-

Programming the LDAP server

This section explains how to specify the LDAP server settings.

To enter an identification name

- 1** Press **[Change]** under “Name”.
Register a name for the LDAP server that will appear on the server selection screen of the LDAP search operation.
 - 2** Enter the server’s identification name.
 - 3** Press **[OK]**.
-

To enter a server name

- 1** Press **[Change]** under “Server Name”.
Register the LDAP server’s host name or IPv4 address.
- 2** Enter the LDAP server name.
- 3** Press **[OK]**.

To enter the search base

1 Press **[Change]** under “Search Base”.

Select a route folder to start the search from e-mail addresses registered in the selected folder are search targets.

2 Enter the search base.

For example, if the search target is the sales department of ABC company, enter “dc=sales department, o=ABC”. (In this example, the description is for an active directory. “dc” is for the organization unit, and “o” is for the company.) Search base registration may be required depending on your server environment. When registration is required, unspecified searches will result in error. Check you server environment and enter any required specifications.

3 Press **[OK]**.

To enter a port number

1 Press **[Change]** under “Port No.”.

Specify the port number for communicating with the LDAP server. Specify a port that is compliant with your environment.

2 Enter the port number using the number keys, and then press the **[#]** key.

When SSL is set to **[On]**, the port number automatically changes to “636”.

To start SSL communication

1 Press **[On]**.

Use SSL to communicate with the LDAP server.

To use SSL, the LDAP server must support SSL.

When SSL is set to **[On]**, the port number automatically changes to “689”.

SSL setting must be enabled on this machine. For details, consult your network administrator.

2 Enter the port number using the number keys, and then press the **[#]** key.

When SSL is set to **[On]**, the port number automatically changes to “636”.

To set authentication

1 Press [▼Next].

2 Press [On] or [High Security] under “Authentication”.

To make a search request to the LDAP server, use the administrator account for authentication.

Authentication settings must comply with your server’s authentication settings. Check your server settings before setting this machine.

[High Security] is available only with LDAP Version 3.0.

When [High Security] is selected, the administrator password is encrypted before it is sent to the network. When [On] is selected, the password is sent without encryption.



To enter the user name and password

1 Press [Change] under “Name”.

When [On] or [High Security] is selected for the authentication setting, use the administrator account name and password. Do not enter the administrator account name and password when using authentication for each individual or each search.

2 Enter the user name, and then press [OK].

Procedures for the user name setting differ depending on server environment. Check your server environment before making the setting.

Example: Domain Name\User Name, User Name@Domain Name, CN=Name, OU=Department Name, DC=Server Name

3 Press [Change] under “Password”.


4 Enter the password, and then press [OK].

The user name and password are required for administrator authentication to access the LDAP server.

You can set the user name and password in this machine's Address Book to allow individual authentication access to the LDAP server. Use Administrator Tools to select the user name and password you want to use.

To test the connection

- 1** Press [Connection Test].

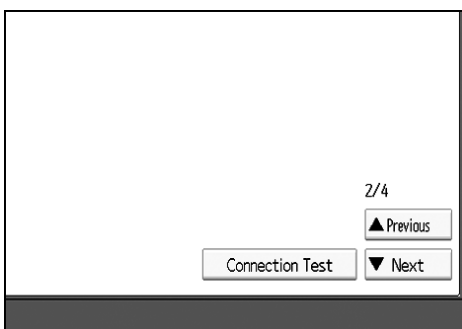

Access the LDAP server to check the proper connection is established. Check authentication works according to the authentication settings.

A connection test is carried out.

- 2** Press [OK].

If the connection test fails, check your settings and try again.

This function does not check search conditions or the search base.

To set search conditions

- 1** Press [▼Next] twice.

- 2** Press [Change] for items you want to use as search conditions from the following: [Name], [E-mail Address], [Company Name], and [Department Name].

You can enter an attribute as a typical search keyword. Using the entered attribute, the function searches the LDAP server's Address Book.

- 3** Enter the attribute you want to use when searching for e-mail addresses, and then press [OK].

The attribute value may change depending on the server environment. Check the attribute value complies with your server environment before setting it.

You can leave items blank, but you cannot leave attributes blank when searching for e-mail addresses from the LDAP server Address Book.

To set search options

- 1** Press [▼Next] three times.

- 2** Press [Change] under "Attribute".

- 3** Enter the attribute you want to use when searching for e-mail addresses, and then press [OK].

To search the LDAP server data using a keyword other than prepared keywords such as Name, E-mail Address, Company Name, and Department Name, specify the attribute for the keyword registered in your LDAP server, and the name to be displayed on the control panel during the search. For example, to search e-mail addresses by employee number, enter “employeeNo.” in the Attribute field, and “Employee No.” in the key display field.

The attribute value may change depending on the server environment. Check the attribute complies with your server environment before setting it.

- 4** Press [Change] under "Key Display".

- 5** Enter the key display, and then press [OK].

The registered “key display” appears as a keyword for searching LDAP.

- Without key display registration

Name	Beginning Word	End Word	Exact Match
Fax Destination	Beginning Word	End Word	Exact Match
E-mail Address	Beginning Word	End Word	Exact Match
Company Name	Beginning Word	End Word	Exact Match
Department Name	Beginning Word	End Word	Exact Match

- With key display registration

Name	Beginning Word	End Word	Exact Match
Fax Destination	Beginning Word	End Word	Exact Match
E-mail Address	Beginning Word	End Word	Exact Match
Company Name	Beginning Word	End Word	Exact Match
Department Name	Beginning Word	End Word	Exact Match
EmpLove no	Beginning Word	End Word	Exact Match

The key does not appear on the search screen unless both “Attribute” and “Key Display” are registered. Make sure you register both to use the optional search.

Reference

p.204 “LDAP Authentication”

System Settings on Main and Sub-machines

This section explains the System Settings on the two machines during Connect Copy.

While Connect Copy is under way, the **[User Tools]** keys of the sub-machines remain disabled. If it is desired to change the defaults, press **[Connect Copy]** on the main machine, and then, clear Connect Copy before making changes.

General Features

How the defaults in the General Features of copying of the main and sub-machines are used in Connect Copy will be explained.

❖ Program/Change/Delete User Text

- The main and sub-machines follow their respective set values.

❖ Panel Key Sound

- The main and sub-machines follow their respective set values.

❖ Warm Up Notice (copier/Document Server)

- The main and sub-machines follow their respective set values.

❖ Copy Count Display (copier/Document Server)

- The set values of the main and sub-machines do not affect Connect Copy.
- The copy counter is always displayed as Up (count up).

❖ Function Priority

- The set values of the main and sub-machines do not affect Connect Copy.
- When the Auto Reset time of the main machine has lapsed, Connect Copy will be cancelled. After that, the machine switches back to the mode selected in Function Priority upon reaching the System Reset time.

❖ Print Priority

- The set values of the main and sub-machines do not affect Connect Copy.
- When the Auto Reset time of the main machine has lapsed, Connect Copy will be cancelled. After that, the machine switches back to the mode selected in Function Priority upon reaching the System Reset time.

❖ Function Reset Timer

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Interleave Print

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Output: Copier

- The main and sub-machines follow their respective set values.

❖ Output: Document Server

- The main and sub-machines follow their respective set values.

❖ Output: Printer

- The main and sub-machines follow their respective set values.

❖ ADF Original Table Elevation

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ System Status/Job List Display Time

The main and sub-machines follow their respective set values.

❖ Key Repeat

- The main and sub-machines follow their respective set values.

❖ Z-fold Position

- The main and sub-machines follow their respective set values.
- Make the same settings on both machines.

Timer Settings

How the defaults in the Timer Settings of copying of the main and sub-machines are used in Connect Copy will be explained.

❖ Auto Off Timer

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Energy Saver Timer

- The set values of the main and sub-machines do not affect Connect Copy.
- In Connect Copy mode, neither machine will enter Energy Saver modes (Low Power mode, or Energy Saver mode).

❖ Power Off Timer

- The set values of the main and sub-machines do not affect Connect Copy.
- In Connect Copy mode, neither machine will enter Energy Saver modes (Low Power mode, or Energy Saver mode). When the preset time elapses after Connect Copy is cleared, the machines will transit to the power-saving status.

❖ System Auto Reset Timer

- The set values of the main machine do not affect Connect Copy. The sub-machines can be used with the interruption copying function only.
- When the sub-machines is copying by interruption, the interruption copying is cleared as the time period set on the sub-machines elapses.

❖ Copy/Document Server Auto Reset Timer

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Printer Auto Reset Timer

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Scanner Auto Reset Timer

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Set Date

- The main and sub-machines follow their respective set values.

❖ Set Time

- The main and sub-machines follow their respective set values.

❖ Auto Logout Timer

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Weekly Timer Code

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Weekly Timer: Monday-Sunday

- The set values of the main and sub-machines do not affect Connect Copy.
- In Connect Copy mode, Weekly timer settings on the sub-machine will be disabled.

Administrator Tools

How the defaults in the Administrator Tools of copying of the main and sub-machines are used in Connect Copy will be explained.

❖ Address Book Management

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Address Book: Program/Change/Delete Group

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Address Book: Change Order

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Print Address Book: Destination List

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Address Book: Edit Title

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Address Book: Select Title

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Back Up / Restore Address Book

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Display/Print Counter

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Display/Clear/Print Counter per User

- The set values of the main and sub-machines do not affect Connect Copy.

❖ User Authentication Management

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Administrator Authentication Management

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Program/Change Administrator

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Key Counter Management

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Extended Security

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Auto Delete File in Document Server

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Delete All Files in Document Server

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Program/Change/Delete LDAP Server

- The set values of the main and sub-machines do not affect Connect Copy.

❖ LDAP Search

- The set values of the main and sub-machines do not affect Connect Copy.

❖ AOF (Always On)

- The set values of the main and sub-machines do not affect Connect Copy.
- During Connect Copy, neither the main machine nor the sub-machines is automatically switched off. Once Connect Copy is cleared, the power is cut off as the time period set in "Auto-Off Time Setting" elapses in accordance with the setting of AOF.

❖ Firmware Version

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Network Security Level

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Auto Erase Memory Setting

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Erase All Memory

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Delete All Logs

- The main and sub-machines follow their respective set values.

❖ Transfer Log Setting

- The main and sub-machines follow their respective set values.

❖ Back Up Printing: Delete All Documents

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Back Up Printing: Settings for Compressing

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Settings for Back Up Printing: Initial Values for Types

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Settings for Back Up Printing: Initial Values for Resolution

- The set values of the main and sub-machines do not affect Connect Copy.

3. Tray Paper Settings


This section describes various items of **[Tray Paper Settings]** available in this machine. If the specified paper size differs from the actual size of the paper loaded in the paper tray, a misfeed might occur because the correct paper size was not detected.

Tray Paper Settings

Changing Tray Paper Settings


This section describes how to change the settings of Tray Paper Settings.

- 1 Press the **[Tray Paper Settings]** key.

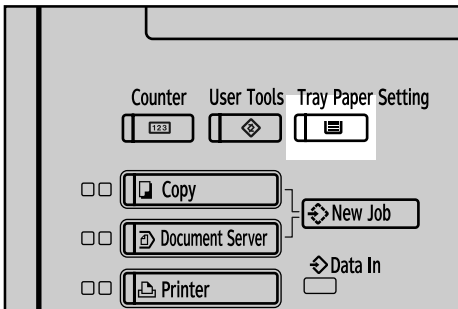


APD017S

- 2 Select the tray that you want to change the settings.

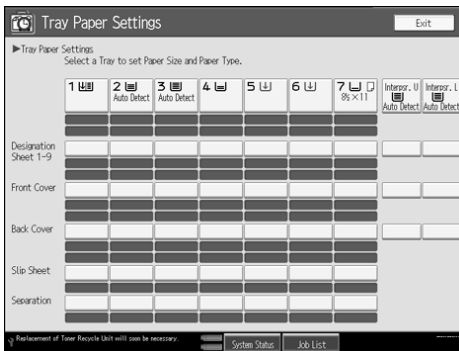

3 Change settings, and then press [OK].

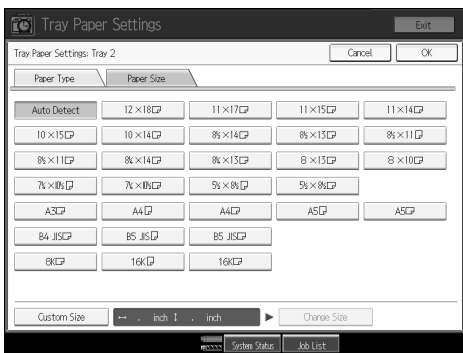


3

Quitting Tray Paper Settings

This section describes how to change the settings of Tray Paper Settings.

1 Press the [Tray Paper Settings] key.

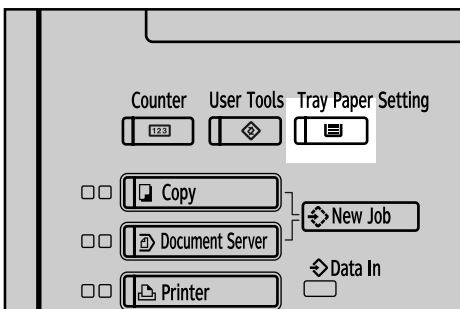

APD017S

Note

- You can also quit Tray Paper Settings by pressing [Exit].



Items of Tray Paper Settings

Default settings are shown in **bold type**.



❖ Tray 1

You can set the display to show the type of paper loaded the tray 1 (LCT). This information is used by the print function to automatically select the paper tray.

❖ The paper types

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1
- Color Paper 2
- Yellow
- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red
- Gray
- Preprinted Paper
- Bond Paper
- Cardstock
- Prepunched Paper









❖ The paper sizes (without the LCT, A3 / 11"×17" Tray Unit TK5000)

"11×8¹/₂", "A4"

Note

- The paper size is fixed for a paper size. It is not available to change the size.

❖ The paper sizes (utilizing the LCT, A3 / 11"×17" Tray Unit TK5000)

"11×17", "8¹/₂×14", "8¹/₂×11", "11×8¹/₂", "A3", "A4", "A4", "B4 JIS"

Custom Size: 210.0 - 305.0 mm (vertically) and 210 - 439.0 mm (horizontally).

Note

- The paper guide of the optional LCT is fixed for a paper size. Contact your service representative if you need to change the paper size.

❖ Copying Method in Duplex

- 2 Sided Copy
- 1 Sided Copy

❖ Apply Auto Paper Select

- Yes
- No

❖ Thick Paper Setting

If the LCT (A3 / 11"×17" Tray Unit TK5000) is utilized, this function is not available.

- On
- Off

❖ Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Front Cover

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Back Cover

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Slip Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Separation Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Tray 2 - 3

You can set the display to show the type of paper loaded in each of the trays. This information is used by the print function to automatically select the paper tray.

❖ The paper types

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1
- Color Paper 2
- Yellow
- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red
- Gray
- OHP (Transparency)
- Translucent Paper
- Preprinted Paper
- Bond Paper
- Cardstock
- Prepunched Paper

❖ **The paper sizes**

"Auto Detect", "12×18□", "11×17□", "11×15□", "11×14□", "10×15□", "10×14□", "8¹/₂×14□", "8¹/₂×13□", "8¹/₂×11□", "11×8¹/₂□", "8¹/₄×14□", "8¹/₄×13□", "8×13□", "8×10□", "7¹/₄×10¹/₂□", "10¹/₂×7¹/₄□", "5¹/₂×8¹/₂□", "8¹/₂×5¹/₂□", "A3□", "A4□", "A4□", "A5□", "A5□", "B4 JIS□", "B5 JIS□", "B5 JIS□", "8K□", "16K□", "16K□"
 Custom Size:

- Metric version: Max. 330.2 mm (vertically) and 458.0 mm (horizontally).
- Inch version: Max. 13.00 inch (vertically) and 18.03 inch (horizontally).

❖ **Copying Method in Duplex**

- 2 Sided Copy
- 1 Sided Copy

❖ **Apply Auto Paper Select**

- Yes
- No

❖ **Thick Paper Setting**

- On
- Off

❖ **Designation Sheet 1 - 9**

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ **Front Cover**

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Back Cover

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Slip Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Separation Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Tray 4

You can set the display to show the type of paper loaded in the tray 4. This information is used by the print function to automatically select the paper tray.

❖ The paper types utilizing LCIT RT5000 (A4 LCT)

If the LCIT RT5000 is utilized, the paper types are available as follows:

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1
- Color Paper 2
- Yellow
- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red

- Gray
- OHP (Transparency)
- Translucent Paper
- Preprinted Paper
- Prepunched Paper
- Tab Stock
 - Tab Position Shift
 - Number of Tabs

3

❖ **The paper types utilizing LCIT RT5010 (A3 LCT)**

If the LCIT RT5010 is utilized, the paper types are available as follows:

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1
- Color Paper 2
- Yellow
- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red
- Gray
- OHP (Transparency)
- Translucent Paper
- Preprinted Paper
- Prepunched Paper
- Tab Stock
 - Tab Position Shift
 - Number of Tabs

❖ **The paper sizes utilizing LCIT RT5000 (A4 LCT)**

If the LCIT RT5000 is utilized, the paper sizes are available as follows:

"Auto Detect", "11×8¹/₂ □", "8¹/₂×5¹/₂ □", "5¹/₂×8¹/₂ □", "A4 □", "A5 □", "A5 □", "B5 JIS □"

Custom Size: 139.0 - 230.0 mm (vertically) and 210.0 - 305.0 mm (horizontally)

❖ The paper sizes utilizing LCIT RT5010 (A3 LCT)

If the LCIT RT5010 is utilized, the paper sizes are available as follows:

- Metric version:

"Auto Detect", "12×18□", "11×17□", "11×8¹/₂□", "8¹/₂×14□", "8¹/₂×11□", "5¹/₂×8¹/₂□", "8¹/₂×5¹/₂□", "8¹/₂×13□", "8¹/₄×13□", "8×13□", "10¹/₂×7¹/₄□", "7¹/₄×10¹/₂□", "11×15□", "10×14□", "8¹/₄×14□", "A3□", "B4 JIS□", "A4□", "A4□", "A5□", "A5□", "B5 JIS□", "B5 JIS□", "B6 JIS□", "A6□", "8K□", "16K□", "16K□"
 Custom Size: 100.0 - 330.2 mm (vertically) and 139.7 - 458.0 mm (horizontally)

Note

- The paper width between 100 and 139.7 mm are available only when the special side fence is utilized.
- "Auto Detect" is available for "12×18□" and "11×17□", "11×8¹/₂□", "5¹/₂×8¹/₂□", "8×13□", "A3□", "B4 JIS□", "A4□", "A4□", "B5 JIS□", "A5□", "A5□".

- Inch version:

"Auto Detect", "12×18□", "11×17□", "11×8¹/₂□", "8¹/₂×14□", "8¹/₂×11□", "5¹/₂×8¹/₂□", "8¹/₂×5¹/₂□", "8¹/₂×13□", "8¹/₄×13□", "8×13□", "10¹/₂×7¹/₄□", "7¹/₄×10¹/₂□", "11×15□", "10×14□", "8¹/₄×14□", "A3□", "B4 JIS□", "A4□", "A4□", "A5□", "A5□", "B5 JIS□", "B5 JIS□", "B6 JIS□", "A6□"
 Custom Size: 3.93 - 13.00 inch (vertically) and 5.50 - 18.03 inch (horizontally)

Note

- The paper width between 3.93 and 5.50 inch are available only when the special side fence is utilized.
- "Auto Detect" is available for "12×18□" and "11×17□", "11×8¹/₂□", "8¹/₂×11□", "8¹/₂×5¹/₂□", "5¹/₂×8¹/₂□", "8×13□", "A3□", "B4 JIS□", "A4□", "B5 JIS□", "A5□".

❖ Copying Method in Duplex

- 2 Sided Copy
- 1 Sided Copy

❖ Apply Auto Paper Select

- Yes
- No

❖ Thick Paper Setting

- On
- Off

❖ Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Front Cover

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Back Cover

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Slip Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Separation Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Tray 5

You can set the display to show the type of paper loaded in each of the tray 5. This information is used by the print function to automatically select the paper tray.

❖ The paper types utilizing LCIT RT5000 (A4 LCT)

If the LCIT RT5000 is utilized, the paper types are available as follows:

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1
- Color Paper 2
- Yellow
- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red
- Gray
- OHP (Transparency)
- Translucent Paper
- Label Paper
- Preprinted Paper
- Prepunched Paper
- Tab Stock
 - Tab Position Shift
 - Number of Tabs

❖ The paper types utilizing LCIT RT5010 (A3 LCT)

If the LCIT RT5010 is utilized, the paper types are available as follows:

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1
- Color Paper 2
- Yellow

- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red
- Gray
- OHP (Transparency)
- Translucent Paper
- Label Paper
- Preprinted Paper
- Prepunched Paper
- Tab Stock
 - Tab Position Shift
 - Number of Tabs

❖ The paper sizes utilizing LCIT RT5000 (A4 LCT)

If the LCIT RT5000 is utilized, the paper sizes are available as follows:

"Auto Detect", "11×8¹/₂□", "8¹/₂×5¹/₂□", "5¹/₂×8¹/₂□", "A4□", "A5□", "A5□", "B5 JIS□"

Custom Size: 139.0 - 230.0 mm (vertically) and 210.0 - 305.0 mm (horizontally)

❖ The paper sizes utilizing LCIT RT5010 (A3 LCT)

If the LCIT RT5010 is utilized, the paper sizes are available as follows:

- Metric version:

"Auto Detect", "12×18□", "11×17□", "11×8¹/₂□", "8¹/₂×14□", "8¹/₂×11□", "5¹/₂×8¹/₂□", "8¹/₂×5¹/₂□", "8¹/₂×13□", "8¹/₄×13□", "8×13□", "10¹/₂×7¹/₄□", "7¹/₄×10¹/₂□", "11×15□", "10×14□", "8¹/₄×14□", "A3□", "B4 JIS□", "A4□", "A4□", "A5□", "A5□", "B5 JIS□", "B5 JIS□", "B6 JIS□", "A6 JIS□", "8K□", "16K□", "16K□"

Custom Size: 100.0 - 330.2 mm (vertically) and 139.7 - 458.0 mm (horizontally)

Note

- The paper width between 100 and 139.7 mm are available only when the special side fence is utilized.
- "Auto Detect" is available for "12×18□" and "11×17□", "11×8¹/₂□", "5¹/₂×8¹/₂□", "8×13□", "A3□", "B4 JIS□", "A4□", "A4□", "B5 JIS□", "A5□", "A5□".

- Inch version:
 "Auto Detect", "12×18", "11×17", "11×8¹/₂", "8¹/₂×14",
 "8¹/₂×11", "5¹/₂×8¹/₂", "8¹/₂×5¹/₂", "8¹/₂×13", "8¹/₄×13",
 "8×13", "10¹/₂×7¹/₄", "7¹/₄×10¹/₂", "11×15", "10×14",
 "8¹/₄×14", "A3", "B4 JIS", "A4", "A4", "A5", "A5", "B5
 JIS", "B5 JIS", "B6 JIS", "A6 JIS"
 Custom Size: 3.93 - 13.00 inch (vertically) and 5.50 - 18.03 inch (horizontally)

 **Note**

- The paper width between 3.93 and 5.50 inch are available only when the special side fence is utilized.
- "Auto Detect" is available for "12×18" and "11×17", "11×8¹/₂", "8¹/₂×11", "8¹/₂×5¹/₂", "5¹/₂×8¹/₂", "8×13", "A3", "B4 JIS", "A4", "B5 JIS", "A5".

❖ **Copying Method in Duplex**

- 2 Sided Copy
- 1 Sided Copy

❖ **Apply Auto Paper Select**

- Yes
- No

❖ **Thick Paper Setting**

- On
- Off

❖ **Designation Sheet 1 - 9**

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
 You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
 You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
 Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Front Cover

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Back Cover

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Slip Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Separation Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Tray 6

You can set the display to show the type of paper loaded the tray 6
This information is used by the print function to automatically select the paper tray.

❖ The paper types utilizing LCIT RT5000 (A4 LCT)

If the LCIT RT5000 is utilized, the paper types are available as follows:

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1

- Color Paper 2
- Yellow
- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red
- Gray
- OHP (Transparency)
- Translucent Paper
- Preprinted Paper
- Prepunched Paper

❖ **The paper types utilizing LCIT RT5010 (A3 LCT)**

If the LCIT RT5010 is utilized, the paper types are available as follows:

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1
- Color Paper 2
- Yellow
- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red
- Gray
- OHP (Transparency)
- Translucent Paper
- Preprinted Paper
- Prepunched Paper
- Tab Stock
 - Tab Position Shift
 - Number of Tabs

❖ The paper sizes utilizing LCIT RT5000 (A4 LCT)

If the LCIT RT5000 is utilized, the paper sizes are available as follows:

"11×8¹/₂" □, "8¹/₂×5¹/₂" □, "5¹/₂×8¹/₂" □, "A4" □, "A5" □, "A5" □, "B5 JIS" □

Custom Size: 139.0 - 230.0 mm (vertically) and 210.0 - 305.0 mm (horizontally)

❖ The paper sizes utilizing LCIT RT5010 (A3 LCT)

If the LCIT RT5010 is utilized, the paper sizes are available as follows:

- Metric version:

"Auto Detect", "12×18" □, "11×17" □, "11×8¹/₂" □, "8¹/₂×14" □, "8¹/₂×11" □, "5¹/₂×8¹/₂" □, "8¹/₂×5¹/₂" □, "8¹/₂×13" □, "8¹/₄×13" □, "8×13" □, "10¹/₂×7¹/₄" □, "7¹/₄×10¹/₂" □, "11×15" □, "10×14" □, "8¹/₄×14" □, "A3" □, "B4 JIS" □, "A4" □, "A4" □, "A5" □, "A5" □, "B5 JIS" □, "B5 JIS" □, "B6 JIS" □, "A6 JIS" □, "8K" □, "16K" □, "16K" □

Custom Size: 100.0 - 330.2 mm (vertically) and 139.7 - 458.0 mm (horizontally)

Note

- The paper width between 100 and 139.7 mm are available only when the special side fence is utilized.

□ "Auto Detect" is available for "12×18" □ and "11×17" □, "11×8¹/₂" □, "5¹/₂×8¹/₂" □, "8×13" □, "A3" □, "B4 JIS" □, "A4" □, "A4" □, "B5 JIS" □, "A5" □, "A5" □.

- Inch version:

"Auto Detect", "12×18" □, "11×17" □, "11×8¹/₂" □, "8¹/₂×14" □, "8¹/₂×11" □, "5¹/₂×8¹/₂" □, "8¹/₂×5¹/₂" □, "8¹/₂×13" □, "8¹/₄×13" □, "8×13" □, "10¹/₂×7¹/₄" □, "7¹/₄×10¹/₂" □, "11×15" □, "10×14" □, "8¹/₄×14" □, "A3" □, "B4 JIS" □, "A4" □, "A4" □, "A5" □, "A5" □, "B5 JIS" □, "B5 JIS" □, "B6 JIS" □, "A6 JIS" □

Custom Size: 3.93 - 13.00 inch (vertically) and 5.50 - 18.03 inch (horizontally)

Note

- The paper width between 3.93 and 5.50 inch are available only when the special side fence is utilized.

□ "Auto Detect" is available for "12×18" □ and "11×17" □, "11×8¹/₂" □, "8¹/₂×11" □, "8¹/₂×5¹/₂" □, "5¹/₂×8¹/₂" □, "8×13" □, "A3" □, "B4 JIS" □, "A4" □, "B5 JIS" □, "A5" □.

❖ Copying Method in Duplex

- 2 Sided Copy
- 1 Sided Copy

❖ Apply Auto Paper Select

- Yes
- No

❖ Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Front Cover

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Back Cover

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Slip Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Separation Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Tray 7

You can set the display to show the type of paper loaded in tray 7. This information is used by the print function to automatically select the paper tray.

❖ The paper types

- Do not Display
- Recycled Paper
- Special Paper
- Letterhead
- Color Paper 1
- Color Paper 2
- Yellow
- Green
- Blue
- Purple
- Ivory
- Orange
- Pink
- Red
- Gray
- OHP (Transparency)
- Translucent Paper
- Preprinted Paper
- Prepunched Paper
- Tab Stock
 - Tab Position Shift
 - Number of Tabs

❖ The paper sizes

- Metric version:

"Auto Detect", "12×18□", "11×17□", "11×8¹/₂□", "8¹/₂×14□", "8¹/₂×11□", "5¹/₂×8¹/₂□", "8¹/₂×5¹/₂□", "8¹/₂×13□", "8¹/₄×13□", "8×13□", "10¹/₂×7¹/₄□", "7¹/₄×10¹/₂□", "11×15□", "10×14□", "8¹/₄×14□", "8×10□", "A3□", "B4 JIS□", "A4□", "A4□", "A5□", "A5□", "B5 JIS□", "B5 JIS□", "B6 JIS□", "A6 JIS□", "8K□", "16K□", "16K□"

Custom Size (when LCIT RT5000 is installed): 100.0 - 305.0 mm (vertically) and 139.7 - 458.0 mm (horizontally)

Custom Size (when LCIT RT5010 is installed): 100.0 - 330.2 mm (vertically) and 139.7 - 458.0 mm (horizontally)

Note

- The paper width between 100 and 139.7 mm are available only when the special side fence is utilized.
- "Auto Detect" is available for "12×18□" and "11×17□", "11×8¹/₂□", "5¹/₂×8¹/₂□", "8×13□", "A3□", "B4 JIS□", "A4□", "A4□", "B5 JIS□", "A5□", "A5□".

- Inch version:

"Auto Detect", "12×18□", "11×17□", "11×8¹/₂□", "8¹/₂×14□", "8¹/₂×11□", "5¹/₂×8¹/₂□", "8¹/₂×5¹/₂□", "8¹/₂×13□", "8¹/₄×13□", "8×13□", "10¹/₂×7¹/₄□", "7¹/₄×10¹/₂□", "11×15□", "10×14□", "8¹/₄×14□", "8×10□", "A3□", "B4 JIS□", "A4□", "A4□", "A5□", "A5□", "B5 JIS□", "B5 JIS□", "B6 JIS□", "A6 JIS□"

Custom Size (when LCIT RT5000 is installed): 3.93 - 12.00 inch (vertically) and 5.50 - 18.03 inch (horizontally)

Custom Size (when LCIT RT5010 is installed): 3.93 - 13.00 inch (vertically) and 5.50 - 18.03 inch (horizontally)

Note

- The paper width between 3.93 and 5.50 inch are available only when the special side fence is utilized.
- "Auto Detect" is available for "12×18□" and "11×17□", "11×8¹/₂□", "8¹/₂×11□", "8¹/₂×5¹/₂□", "5¹/₂×8¹/₂□", "8×13□", "A3□", "B4 JIS□", "A4□", "B5 JIS□", "A5□".

❖ Copying Method in Duplex

- 2 Sided Copy
- 1 Sided Copy

❖ Apply Auto Paper Select

- Yes
- No

❖ Thick Paper Setting

- On
- Off

❖ Designation Sheet 1 - 9

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Front Cover

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Back Cover

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Slip Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Separation Sheets

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.

❖ Interposer Upper - Lower

You can set the display to show the type of paper loaded in each of the trays. This information is used by the print function to automatically select the paper tray.

❖ The paper sizes

- Metric version:

"Auto Detect", "12×18□", "11×17□", "11×8¹/₂□", "8¹/₂×14□", "8¹/₂×11□", "5¹/₂×8¹/₂□", "8¹/₂×5¹/₂□", "8¹/₂×13□", "8¹/₄×13□", "8×13□", "10¹/₂×7¹/₄□", "7¹/₄×10¹/₂□", "11×15□", "10×14□", "8¹/₄×14□", "8×10□", "A3□", "B4 JIS□", "A4□", "A4□", "A5□", "A5□", "B5 JIS□", "B5 JIS□", "8K□", "16K□", "16K□"

Custom Size: 139.7 - 330.2 mm (vertically) and 139.7 - 458.0 mm (horizontally)

Note

□ "Auto Detect" is available for "12×18□" and "11×17□", "11×8¹/₂□", "5¹/₂×8¹/₂□", "8×13□", "A3□", "B4 JIS□", "A4□", "A4□", "B5 JIS□", "A5□", "A5□".

- Inch version:

"Auto Detect", "12×18□", "11×17□", "11×8¹/₂□", "8¹/₂×14□", "8¹/₂×11□", "5¹/₂×8¹/₂□", "8¹/₂×5¹/₂□", "8¹/₂×13□", "8¹/₄×13□", "8×13□", "10¹/₂×7¹/₄□", "7¹/₄×10¹/₂□", "11×15□", "10×14□", "8¹/₄×14□", "8×10□", "A3□", "B4 JIS□", "A4□", "A4□", "A5□", "A5□", "B5 JIS□", "B5 JIS□"

Custom Size: 5.50 - 13.00 inch (vertically) and 5.50 - 18.03 inch (horizontally)

Note

□ "Auto Detect" is available for "12×18□" and "11×17□", "11×8¹/₂□", "8¹/₂×11□", "8¹/₂×5¹/₂□", "5¹/₂×8¹/₂□", "8×13□", "A3□", "B4 JIS□", "A4□", "B5 JIS□", "A5□".

❖ Designation Sheet 1 - 9

You can specify the paper trays to set designation sheets.

❖ Front Cover

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time

You can select **[At Mode Selected]** or **[Full Time]**.

- Copying Method in Duplex

You can select **[2 Sided Copy]** or **[1 Sided Copy]**.


Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

❖ Back Cover

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

- Display Time
You can select **[At Mode Selected]** or **[Full Time]**.
- Copying Method in Duplex
You can select **[2 Sided Copy]** or **[1 Sided Copy]**.
Copy Method in Duplex is enabled only when you select **[At Mode Selected]** in Display Time.

3 **Note**

- When paper of the same type and size is loaded in two different paper trays and you want to specify tray for 2 Sided Copy. If one of the trays is specified as the default in Paper Tray Priority, assign 2 Sided Copy to that tray.
- A  mark appears next to the paper tray if **[No]** is selected in **[Apply Auto Paper Select]**.
- [Apply Auto Paper Select]** is effective for the copier function only if **[Do not Display]** or **[Recycled Paper]** are selected. If **[No]** is selected, Auto Paper Select is not valid for the tray.

Tray Paper Setting on Main and Sub-machines

This section explains the Tray Paper Setting on the two machines during Connect Copy.

While Connect Copy is under way, the **[User Tools]** keys of the sub-machines remain disabled. If it is desired to change the defaults, press **[Connect Copy]** on the main machine, and then, clear Connect Copy before making changes.

How the defaults in the Tray Paper Settings of copying of the main and sub-machines are used in Connect Copy will be explained.

3

❖ Paper Tray Priority: Copier (Copier/Document Server)

- The main and sub-machines follow their respective set values.

❖ Paper Tray Priority: Printer (Printer)

- The main and sub-machines follow their respective set values.

❖ Paper Type: Tray 1 (LCT)

- The main and sub-machines follow their respective set values.
- In Connect Copy, only the paper tray corresponding to the paper size, orientation, and type that are set in common on the main and sub-machines can be used. To make the most of Connect Copy function, it is advisable that you make the same paper settings on both the main and sub-machines.

❖ Paper Type: Tray 2 - 3

- The main and sub-machines follow their respective set values.
- In Connect Copy, only the paper tray corresponding to the paper size, orientation, and type that are set in common on the main and sub-machines can be used. To make the most of Connect Copy function, it is advisable that you make the same paper settings on both the main and sub-machines.

❖ Paper Type: Tray 4

- The main and sub-machines follow their respective set values.
- In Connect Copy, only the paper tray corresponding to the paper size, orientation, and type that are set in common on the main and sub-machines can be used. To make the most of Connect Copy function, it is advisable that you make the same paper settings on both the main and sub-machines.

❖ **Paper Type: Tray 5**

- The main and sub-machines follow their respective set values.
- In Connect Copy, only the paper tray corresponding to the paper size, orientation, and type that are set in common on the main and sub-machines can be used. To make the most of Connect Copy function, it is advisable that you make the same paper settings on both the main and sub-machines.

❖ **Paper Type: Tray 6**

- The main and sub-machines follow their respective set values.
- In Connect Copy, only the paper tray corresponding to the paper size, orientation, and type that are set in common on the main and sub-machines can be used. To make the most of Connect Copy function, it is advisable that you make the same paper settings on both the main and sub-machines.

❖ **Paper Type: Tray 7**

- The Tray 7 on both of the main and sub-machines utilizes only for the cover sheet and the designation sheet.

❖ **Paper Type: Interposer Upper - Lower**

- The main and sub-machines follow their respective set values.
- In Connect Copy, only the paper tray corresponding to the paper size, orientation, and type that are set in common on the main and sub-machines can be used. To make the most of Connect Copy function, it is advisable that you make the same paper settings on both the main and sub-machines.

4. Copier/Document Server Features

This chapter describes various items of **[Copier/Document Server Features]** available in this machine.

General Features

This section describes various items of **[General Features]** under **[Copier/Document Server Features]**.

Default settings are shown in **bold type**.

For the procedure for accessing the **[Copier/Document Server Features]**, see "Accessing User Tools (System Settings)".

❖ **Auto Image Density Priority**

You can set whether Auto Image Density is "On" or "Off" when the machine is turned on, reset, or modes are cleared.

- Text
 - **On**
 - Off
- Text/Photo
 - **On**
 - Off
- Photo
 - On
 - **Off**
- Pale
 - **On**
 - Off
- General Copy
 - **On**
 - Off

❖ **Original Orientation in Duplex Mode**

You can set the original orientation when making two-sided copies.

- **Top to Top**
- Top to Bottom

❖ **Copy Orientation in Duplex Mode**

You can set the copy orientation when making two-sided copies.

- **Top to Top**
- Top to Bottom

❖ Reserve Job Mode

You can set whether to reset the mode to the initial state or return to the mode in use before the reserved operation was started when you return to the initial screen after reserved copying finishes.

- Reset
- **Previous job**

❖ Reservation Screen Auto-off Timer

You can set the time required until the display is switched to the reserved first job display after reservation is set.

If you select Yes, use the numbers keys to enter the time (10-99 seconds). The default setting is **15 seconds**.

- Yes
- **No**

❖ Max. Copy Quantity

The maximum copy quantity can be set between 1 and 9999.

The default setting is **9999 sheets**.

❖ Original counter reset key

You can set whether to enable the document counter reset key.

- On
- **Off**

❖ Auto Tray Switching

When the paper runs out during copying, it can be automatically fed from a substitute paper feed tray, irrespective of the orientation of paper in that tray – provided it is the same size as that set in the other paper feed tray during automatic paper selection. This function is called “Auto Tray Switching”. You can set whether to perform the Auto Tray Switching.

- **With Image Rotation**

You can copy using the Auto Tray Switching function. Depending on the function being performed rotation may not be possible.

- **Without Image Rotation**

You can make continuous copies provided paper of the same size and orientation is loaded. The “Supply paper” message appears when paper of the same size and orientation runs out. Copying is interrupted when this happens.

- **Off**

The “Supply paper” message appears when paper runs out. Copying is interrupted when this happens.

❖ Text

You can adjust the edges of finished image.

The outline of a character becomes soft when you select "Soft". The outline of a character can be sharply copied when you select "Sharp".

- Copy Quality
 - Soft
 - **Normal**
 - Sharp
 - Custom Setting
- Image Density
 - Light
 - **Normal**
 - Dark

❖ Text/photo

You can select which has priority, photographs or characters, when an original contains both.

If you select "Normal", character and photo quality is balanced in the copy.

- Copy Quality
 - Photo priority
 - **Normal**
 - Text Priority
 - Custom Setting
- Image Density
 - Light
 - **Normal**
 - Dark

❖ Photo

You can adjust the quality of finished images according to the type of photo original.

"Printed photo" is set for magazine and catalog photo originals. You can smooth photos by selecting "Printed photo".

"Glossy Photo" is set for the silver-salt photos printed from photo film.

If you select "Normal", you can finish characters that exist together in a photo block. .

- Copy Quality
 - Printed photo
 - **Normal**
 - Glossy Photo
 - Custom Setting
- Image Density
 - Light
 - **Normal**
 - Dark

❖ Pale

You can adjust the image quality of a pale original so the copy is at normal density.

- Copy Quality
 - Soft
 - **Normal**
 - Sharp
 - Custom Setting
- Image Density
 - Light
 - **Normal**
 - Dark

❖ Generation Copy

You can adjust the image quality to prevent characters in the copy becoming too thick.

- Copy Quality
 - Soft
 - **Normal**
 - Sharp
 - Custom Setting
- Image Density
 - Light
 - **Normal**
 - Dark

❖ Dark Background

You can set whether "Dark Background" can be selected as an original type.

- On
- **Off**

❖ Panel Features Default

You can set which items will appear as the function buttons on the basic display.

- **Off**
- Reduce/Enlarge
- Dup./Combine/Series
- Edit Image
- Cover/Slip Sheet
- Stamp
- Output/Customize Function/Finisher

❖ Image Adjustment Priority

You can set the items, to be preferentially displayed, to the function buttons on the basic display.

- **Off**
- Erase Inside
- Edit Image

❖ Paper Display

You can choose to have the available paper trays and sizes shown on the initial display.

- Hide
- **Display**

❖ Original Type Display

You can have the original types shown on the initial display.

- Hide
- **Display**

❖ Special Original Display

You can set whether to show the original types on the initial display.

- On
- **Off**

❖ Special Original Display Defaults

You can set up to three items for displaying on the initial display from five items below.

- Mixed Sizes
- Batch
- SADF
- Thin Paper
- Original Size

❖ Tone: Original Remains

You can set whether to use a buzzer to alert you when you forget to remove an original.

- On
- Off

If the “Panel key sound” during system settings is set to “Off”, this function is invalidated even if it is set to “On”.

❖ Job End Call

You can set whether to generate a buzzer sound (“pi”) when a copy is completed.

If “Panel key sound” when performing system settings is set to “On”, the buzzer sounds four times if copying is interrupted because the paper has run out or become jammed. This notifies you that the copy job could not be completed.

- On
- Off

❖ Connect Copy Key Display

You can set whether to display the **[Connect Copy]**. If you select “Off”, the key does not appear and a master unit cannot be obtained.

- On
- Off


❖ Switch Original Counter Display

You can set whether to count the two-sided documents by number of sheets or pages.

- Original Sheet Counter
- Original Page Counter

❖ Customize Function: Copier


A maximum of four often-used functions can be registered to the function keys.

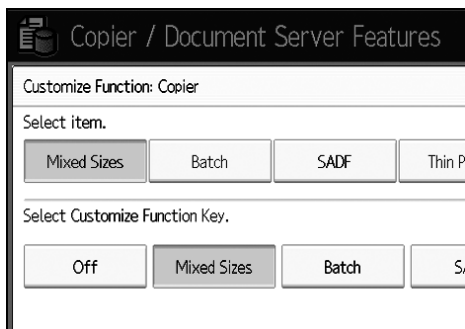

- Off
- Mixed Sizes
- Batch
- SADF
- Thin Paper

❖ Customize Function: Document Server Storage

A maximum of four often-used functions can be registered to the function keys. Registered functions can also be changed.

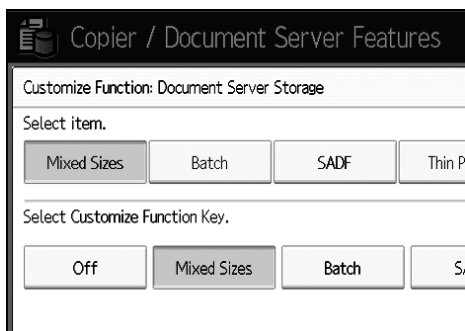

- Off
- Mixed Sizes
- Batch
- SADF
- Thin Paper

🔍 Reference

p.23 "Panel Key Sound"

"Selecting the Original Type Setting", **Copy/ Document Server Reference**

"Adjusting Copy Image Density", **Copy/ Document Server Reference**

"Selecting Copy Paper", **Copy/ Document Server Reference**

Reproduction Ratio

This section describes various items of **[Reproduction Ratio]** under **[Copier/Document Server Features]**.

❖ Shortcut R/E


You can register up to two frequently used Reduce/Enlarge ratios other than the fixed Reduce/Enlarge ratio and have them shown on the initial display. You can also change registered Reduce/ Enlarge ratios.

- Metric version
 - 25%
 - 50% (A3→A5, F→A5)
 - 65% (A3→F)
 - 71% (A3→A4, A4→A5)
 - 75% (B4→F4)
 - 82% (F→A4, B4→A4)
 - 93%
 - 115% (B4→A3)
 - 122% (F→A3, A4→B4)
 - 141% (A4→A3, A5→A4)
 - 200% (A5→A3)
 - 400%
 - User R/E Ratio (25-400%)
 - Off
- Default:
 - F1: **71%**
 - F2: **141%**
- Inch version
 - 25%
 - 50% ($11'' \times 17'' \rightarrow 5\frac{1}{2}'' \times 8\frac{1}{2}''$)
 - 65% ($11'' \times 17'' \rightarrow 8\frac{1}{2}'' \times 11''$)
 - 73% ($11'' \times 15'' \rightarrow 8\frac{1}{2}'' \times 11''$)
 - 78% ($8\frac{1}{2}'' \times 14'' \rightarrow 8\frac{1}{2}'' \times 11''$)
 - 85% (F→ $8\frac{1}{2}'' \times 11''$)
 - 93%
 - 121% ($8\frac{1}{2}'' \times 14'' \rightarrow 11'' \times 17''$)
 - 129% ($8\frac{1}{2}'' \times 11'' \rightarrow 11'' \times 17''$)
 - 155% ($8\frac{1}{2}'' \times 8\frac{1}{2}'' \rightarrow 8\frac{1}{2}'' \times 14''$)
 - 200% ($5\frac{1}{2}'' \times 8\frac{1}{2}'' \rightarrow 11'' \times 17''$)

- 400%
 - User R/E Ratio (25-400%)
 - Off
- Default:
- F1: 73%
 - F2: 155%

❖ R/E Ratio

You can specify the enlargement and reduction ratios that appear if **[Reduce/Enlarge]** is pressed on the copier screen.

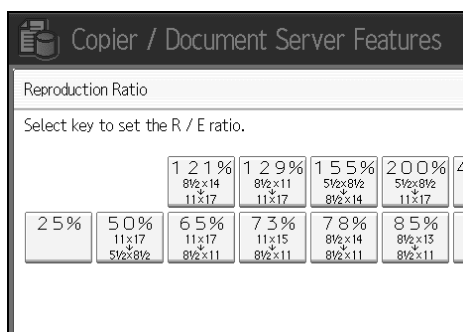

- Metric version
 - 25%
 - 50% (A3→A5, F→A5)
 - 65% (A3→F)
 - 71% (A3→A4, A4→A5)
 - 75% (B4→F4)
 - 82% (F→A4, B4→A4)
 - 93%
 - 115% (B4→A3)
 - 122% (F→A3, A4→B4)
 - 141% (A4→A3, A5→A4)
 - 200% (A5→A3)
 - 400%
 - User R/E Ratio (25-400%)
- Inch version
 - 25%
 - 50% (11"×17"→5 1/2"×8 1/2")
 - 65% (11"×17"→8 1/2"×11")
 - 73% (11"×15"→8 1/2"×11")
 - 78% (8 1/2"×14"→8 1/2"×11")
 - 85% (F→8 1/2"×11")

- 93%
- 121% ($8\frac{1}{2}'' \times 14'' \rightarrow 11'' \times 17''$)
- 129% ($8\frac{1}{2}'' \times 11'' \rightarrow 11'' \times 17''$)
- 155% ($8\frac{1}{2}'' \times 8\frac{1}{2}'' \rightarrow 8\frac{1}{2}'' \times 14''$)
- 200% ($5\frac{1}{2}'' \times 8\frac{1}{2}'' \rightarrow 11'' \times 17''$)
- 400%
- User R/E Ratio (25-400%)

❖ **R/E Ratio Priority**

You can set the ratio with priority when **[Reduce / Enlarge]** is pressed.

• Metric version

- 400%
- 200%
- 141%
- 122%
- 115%
- 93%
- 82%
- 75%
- 71%
- 65%
- 50%
- 25%

• Inch version

- 400%
- 200%
- 155%
- 129%
- 121%
- 93%
- 85%
- 78%
- 73%
- 65%
- 50%
- 25%

❖ Ratio for Create Margin

You can set a Reduce/Enlarge ratio when registering Create Margin in a shortcut key.

Enter a ratio using number keys (in the range of 90 to 99%).

The ratio is set to 93% by default.

 Note

- For the procedure of entering the **[Copier/Document Server Features]**, see p.3 “Accessing User Tools (System Settings)”

 Reference

p.3 “Accessing User Tools (System Settings)”

Edit

This section describes various items of **[Edit]** under **[Copier/Document Server Features]**.

Default settings are shown in **bold type**.

Enter the width of the binding margin with the number keys as follows:

- Metric version: 0–30 mm (in increments of 1 mm)
- Inch version: 0"-1.2" (in increments of 0.1 inch)

Enter the width of the erased margin with the number keys as follows:

- Metric version: 2–99 mm (in increments of 1 mm)
- Inch version: 0.1"-3.9" (in increments of 0.1 inch)

An image of approximately 1.5 mm (0.06") will not be displayed as the width of the separation line, when specifying solid or broken lines.

❖ **Front Margin: Left/Right**

You can specify left and right margins on the front side of copies in Margin Adjustment mode.

- **Left**
- **Right**

Default:

- Metric version: **Left 5 mm**
- Inch version: **Left 0.2"**

❖ **Back Margin: Left/Right**

You can specify left and right margins on the back side of copies in Margin Adjustment mode.

- **Left**
- **Right**

Default:

- Metric version: **Right 5 mm**
- Inch version: **Right 0.2"**

❖ **Front Margin: Top/Bottom**

You can specify top and bottom margins on the front side of copies in Margin Adjustment mode.

- **Top**
- **Bottom**

Default:

- Metric version: **Top/Bottom 0 mm**
- Inch version: **Top/Bottom 0.0"**

❖ **Back Margin: Top / Bottom**

You can specify top and bottom margins on the back side of copies in Margin Adjustment mode.

- **Top**
- **Bottom**

Default:

- Metric version: **Top/Bottom 0 mm**
- Inch version: **Top/Bottom 0.0"**

❖ **1 Sided → 2 Sided Auto Margin: TtoT**

In 1 sided to 2 sided Duplex mode, you can specify the margins on the back side.

The margin is set to the same value of "Back Margin: Left/Right".

- **Left**
- **Right**

Default:

- Metric version: **Right 5 mm**
- Inch version: **Right 0.2"**

❖ **1 Sided → 2 Sided Auto Margin: TtoB**

In 1 sided to 2 sided Duplex mode, you can specify the margins on the back side.

The value set for "Back Margin: Top/Bottom" is used.

- **Top**
- **Bottom**

Default:

- Metric version: **Top/Bottom 0 mm**
- Inch version: **Top/Bottom 0.0"**

❖ **Creep Setting for Magazine**

You can specify the creep binding margin width.

Range:

- Metric version: 0 to 99 mm (in increments of 1 mm)
- Inch version: 0 to 3.9 inch (in increments of 0.1 inch)

Default:

- Metric version: **5 mm**
- Inch version: **0.2"**

❖ **Erase Border Width**

You can specify the width for erasing border in the range of "2 to 99 mm" (in units of 1 mm).

Default:

- Metric version: **10 mm**
- Inch version: **0.4"**

❖ **Erase Original Shadow in Combine**

In Combine mode, you can specify whether to erase a 3 mm, 0.1" boundary margin around all four edges of each original.

- On
- Off

❖ **Erase Center Width**

You can specify the width of the erased center margins with this function.

Default:

- Metric version: **10 mm**
- Inch version: **0.4"**

❖ **Front Cover Copy in Combine**

You can make a combined copy on the front cover sheet when you select Front Cover mode.

Combine				Not Combined				
1	2	5	6	1	2	3	6	7
3	4	7	8		4	5	8	

GCST019E

- **Combine**
- Do not Combine

❖ **Copy Order in Combine**

You can set the copy order in Combine mode.

From Left to Right	Top to Bottom from Left								
<table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr><td>1</td><td>3</td></tr> <tr><td>2</td><td>4</td></tr> </table>	1	3	2	4
1	2								
3	4								
1	3								
2	4								
From Right to Left	Top to Bttm from Right								
<table border="1"> <tr><td>2</td><td>1</td></tr> <tr><td>4</td><td>3</td></tr> </table>	2	1	4	3	<table border="1"> <tr><td>3</td><td>1</td></tr> <tr><td>4</td><td>2</td></tr> </table>	3	1	4	2
2	1								
4	3								
3	1								
4	2								

APD007S

- **From Left to Right**
- From Right to Left
- Top to Bottom from Left
- Top to Bttm from Right

❖ Orientation: Booklet, Magazine

You can select the orientation of copies to open when using Booklet or Magazine mode.

- **Open to Left**
- Open to Right

❖ Copy on Designating Page in Combine

You can specify whether to make a combined copy on the inserted slip sheets in Desig./Chapter mode.

- **Combine**
- Don not Combine

❖ Image Repeat Separation Line

You can select a separation line from: None, Solid, Broken A, Broken B, or Crop Marks.

- **None**



- **Solid**



- **Broken A**



- **Broken B**



- **Crop Marks**



❖ **Double Copies Separation Line**

You can select a separation line using the Double Copies function from: None, Solid, Broken A, Broken B, or Crop Marks.

- **None**



- **Solid**



- **Broken A**



- **Broken B**



- **Crop Marks**



❖ Separation Line in Combine

You can select a separation line using the Combine function from: None, Solid, Broken A, Broken B, or Crop Marks.

- **None**



- **Solid**



- **Broken A**



- **Broken B**



- **Crop Marks**



❖ Copy Back Cover

When copying the back cover, you can specify whether to have the back cover outside (outside page) or inside (inside page).

- **Outside**
- **Inside**

❖ Double Copies Position

You can select the copy position of bottom or left page according to top or right page as the original image position.

- **Same Position as Original Image Position**
- **Symmetrical to Original Image Position**

Note

- ❑ For the procedure of entering the **[Copier/Document Server Features]**, see p.3 "Accessing User Tools (System Settings)"

Reference

p.3 "Accessing User Tools (System Settings)"

"Booklet/Magazine", **Copy/ Document Server Reference**

Stamp

This section describes various items of **[Stamp]** under **[Copier/Document Server Features]**.

Default settings are shown in **bold type**.

Background Numbering

This section describes various items of **[Background Numbering]** under **[Stamp]**.

❖ Size

You can set the size of the numbers.

- Small
- **Normal**
- Large

❖ Density

You can set the density of the numbers.

- Light
- **Normal**
- Dark
- Very Dark

Preset Stamp

This section describes various items of **[Preset Stamp]** under **[Stamp]**.

❖ Stamp Language

You can select the language of the message printed in Stamp mode.

- English
- German
- French
- Italian
- Spanish
- Dutch
- Portuguese
- Polish
- Czech
- Swedish
- Finnish
- Hungarian
- Norwegian
- Danish
- Russian
- Japanese
- Simplified Chinese
- Traditional Chinese
- Hangul

❖ Stamp Priority

You can select the stamp type given priority when **[Preset Stamp]** is pressed.

- COPY
- URGENT
- PRIORITY
- For Your Info.
- PRELIMINARY
- For Internal Use Only
- CONFIDENTIAL
- DRAFT

❖ Stamp Format

You can specify how each of stamp is printed.

- Stamp Position

You can specify where to print the stamp.

- Top Left
- Top Center
- **Top Right**
- Center Left
- Center
- Center Right
- Bottom Left
- Bottom Center
- Bottom Right

- Stamp Position

You can adjust the print position of the stamp within the available range as shown below.

Metric version:

- "Top Left"...T/B: 4-144mm, L/R: 4-144mm
- "Top Center"...T/B: 4-144mm, L/R: 72-72mm
- "Top Right"...T/B: 4-144mm, L/R: 4-144mm
- "Center Left"...T/B: 72-72mm, L/R: 4-144mm
- "Center"...T/B: 72-72mm, L/R: 72-72mm
- "Center Right"...T/B: 72-72mm, L/R: 4-144mm
- "Bottom Left"...T/B: 4-144mm, L/R: 4-144mm
- "Bottom Center"...T/B: 4-144mm, L/R: 72-72mm
- "Bottom Right"...T/B: 4-144mm, L/R: 4-144mm

Inch version:

- "Top Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Top Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
- "Top Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Center Left"...T/B: 2.8-2.8", L/R: 0.1-5.7"
- "Center"...T/B: 2.8-2.8", L/R: 2.8-2.8"
- "Center Right"...T/B: 2.8-2.8", L/R: 0.1-5.7"
- "Bottom Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Bottom Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
- "Bottom Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"

- **Size**
You can set the size of the stamp.
 - **1X**
 - **2X**
 - **4X**
- **Density**
You can set the pattern used to print the stamp.
 - **Normal**
The stamp is printed on the image. You cannot check which parts will overlap.
 - **Lighter**
The image can be seen through the stamp.
 - **Lightest**
The image appears even clearer than in the Lighter setting.
- **Page to Stamp**
You can specify whether to print the stamp on all pages or only the first page.
 - **All Pages**
 - **1st Page Only**
- **Dup. Back Pg. Stamp Pos.**
You can adjust the stamp position for back side in duplex mode, within the available range as shown below.
Metric version:
 - **Left-Right: Left 432 mm – Right 432 mm**
 - **Top-Bottom: Top 432 mm – Bottom 432 mm**Inch version:
 - **Left-Right: Left 17.0" – Right 17.0"**
 - **Top-Bottom: Top 17.0" – Bottom 17.0"**



Reference

"Preset Stamp", **Copy/ Document Server Reference**

User Stamp

This section describes various items of **[User Stamp]** under **[Stamp]**.

❖ **Program/Delete Stamp**

You can register, change, or delete these designs as user stamps.

You can register up to five custom stamps with your favorite designs.

❖ **Stamp Format:1-5**

You can specify how each of registered User Stamps 1 to 5 is printed.

- Stamp Position
You can specify where to print the User Stamp.
 - Top Left
 - Top Center
 - **Top Right**
 - Center Left
 - Center
 - Center Right
 - Bottom Left
 - Bottom Center
 - Bottom Right
- Stamp Position
You can adjust the print position of the User Stamp within the available range as shown below.

Metric version:

- "Top Left"...T/B: 4-144mm, L/R: 4-144mm
- "Top Center"...T/B: 4-144mm, L/R: 72-72mm
- "Top Right"...T/B: 4-144mm, L/R: 4-144mm
- "Center Left"...T/B: 72-72mm, L/R: 4-144mm
- "Center"...T/B: 72-72mm, L/R: 72-72mm
- "Center Right"...T/B: 72-72mm, L/R: 4-144mm
- "Bottom Left"...T/B: 4-144mm, L/R: 4-144mm
- "Bottom Center"...T/B: 4-144mm, L/R: 72-72mm
- "Bottom Right"...T/B: 4-144mm, L/R: 4-144mm

Inch version:

- "Top Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Top Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
- "Top Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Center Left"...T/B: 2.8-2.8", L/R: 0.1-5.7"
- "Center"...T/B: 2.8-2.8", L/R: 2.8-2.8"
- "Center Right"...T/B: 2.8-2.8", L/R: 0.1-5.7"
- "Bottom Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Bottom Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
- "Bottom Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"

- **Page to Stamp**
You can specify whether to print the stamp on all pages or only the first page.
 - All Pages
 - **1st Page Only**
- **Dup. Back Pg. Stamp Pos.**
You can adjust the stamp position for back side in duplex mode, within the available range as shown below.
Metric version:
 - Left-Right: Left 432 mm – Right 432 mm
 - Top-Bottom: Top 432 mm – Bottom 432 mmInch version:
 - Left-Right: Left 17.0" – Right 17.0"
 - Top-Bottom: Top 17.0" – Bottom 17.0"



Reference

Copy/ Document Server Reference "User Stamp"

Date Stamp

This section describes various items of **[Date Stamp]** under **[Stamp]**.

❖ Format

You can select the date format for Date Stamp mode.

- MM/DD/YYYY
- MM.DD.YYYY
- DD/MM/YYYY
- DD.MM.YYYY
- YYYY.MM.DD

Default:

- Metric version: **DD/MM/YYYY**
- Inch version: **MM/DD/YYYY**

❖ Font

You can select the Date Stamp font.

- **Font 1**
- Font 2
- Font 3

❖ Size

You can set the Date Stamp size.

- **Auto**
- Large
- Middle
- Small

❖ Superimpose

You can have the Date Stamp printed in white when it overlaps black parts of the image.

- On
- **Off**

4**❖ Stamp Setting**

You can specify how Date Stamp is printed.

- Stamp Position

You can specify where to print the Date Stamp.

- **Top Left**
- Top Center
- Top Right
- Bottom Left
- Bottom Center
- Bottom Right

- Stamp Position

You can adjust the print position of the Date Stamp within the available range as shown below.

Metric version:

- "Top Left"...T/B: 4-144mm, L/R: 4-144mm
- "Top Center"...T/B: 4-144mm, L/R: 72-72mm
- "Top Right"...T/B: 4-144mm, L/R: 4-144mm
- "Center Left"...T/B: 72-72mm, L/R: 4-144mm
- "Center"...T/B: 72-72mm, L/R: 72-72mm
- "Center Right"...T/B: 72-72mm, L/R: 4-144mm
- "Bottom Left"...T/B: 4-144mm, L/R: 4-144mm
- "Bottom Center"...T/B: 4-144mm, L/R: 72-72mm
- "Bottom Right"...T/B: 4-144mm, L/R: 4-144mm

Inch version:

- "Top Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
 - "Top Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
 - "Top Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"
 - "Center Left"...T/B: 2.8-2.8", L/R: 0.1-5.7"
 - "Center"...T/B: 2.8-2.8", L/R: 2.8-2.8"
 - "Center Right"...T/B: 2.8-2.8", L/R: 0.1-5.7"
 - "Bottom Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
 - "Bottom Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
 - "Bottom Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- Page to Stamp
You can specify whether to print the stamp on all pages or only the first page.

- **All Pages**

- 1st Page Only

- Dup. Back Pg. Stamp Pos.

You can adjust the stamp position for back side in duplex mode, within the available range as shown below.

Metric version:

- Left-Right: Left 432 mm – Right 432 mm
- Top-Bottom: Top 432 mm – Bottom 432 mm

Inch version:

- Left-Right: Left 17.0" – Right 17.0"
- Top-Bottom: Top 17.0" – Bottom 17.0"

Page Numbering

This section describes various items of **[Page Numbering]** under **[Stamp]**.

❖ **Stamp Format**

You can select the page number format given priority when **[Page Numbering]** is pressed.

- **P1,P2...**
- **1/5,2/5...**
- **-1,-2-...**
- **P.1,P.2...**
- **1,2...**
- **1-1,1-2...**

❖ **Font**

You can select the font in Page Numbering mode.

- **Font 1**
- **Font 2**
- **Font 3**

❖ **Size**

You can set the size of the stamp printed in Page Numbering mode.

- **Auto**
- **Large**
- **Middle**
- **Small**

❖ **Duplex Back Page Stamping Position**

You can set the position of the duplex back page number printed in Duplex mode.

- **Opposite Position**
- **Same Position**

❖ **Page Numbering in Combine**

You can set page numbering when using the Combine function and the Page Numbering function together.

- **Per Original**
- **Per Copy**

❖ **Stamp on Designating Slip Sheet**

You can select to print the page number onto slip sheets when using the Designate function set to **[Copy]** and the Page Numbering function together.

- **On**
- **Off**

❖ Stamp Position

You can specify how each of stamp is printed.

- Stamp Position
You can specify where to print the stamp.
 - Top Left
 - Top Center
 - Top Right
 - Bottom Left
 - Bottom Center
 - Bottom Right

For the patterns of "P1, P2, ---", "1/5, 2/5, ---", "P.1, P.2, ---", "1, 2, --", and "Page 1, Page 2, ---", the machine is shipped from the factory with this position set to **"Top Right"**.

For the patterns of "-1-, -2-, ---" and "1-1, 1-2, ---", the machine has this position set to **"Bottom Center"**.

The setting range is as follows:

- Stamp Position
You can adjust the print position of the stamp within the available range as shown below.

Metric version:

- "Top Left"...T/B: 4-144mm, L/R: 4-144mm
- "Top Center"...T/B: 4-144mm, L/R: 72-72mm
- "Top Right"...T/B: 4-144mm, L/R: 4-144mm
- "Center Left"...T/B: 72-72mm, L/R: 4-144mm
- "Center"...T/B: 72-72mm, L/R: 72-72mm
- "Center Right"...T/B: 72-72mm, L/R: 4-144mm
- "Bottom Left"...T/B: 4-144mm, L/R: 4-144mm
- "Bottom Center"...T/B: 4-144mm, L/R: 72-72mm
- "Bottom Right"...T/B: 4-144mm, L/R: 4-144mm

Inch version:

- "Top Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Top Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
- "Top Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Center Left"...T/B: 2.8-2.8", L/R: 0.1-5.7"
- "Center"...T/B: 2.8-2.8", L/R: 2.8-2.8"
- "Center Right"...T/B: 2.8-2.8", L/R: 0.1-5.7"
- "Bottom Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- "Bottom Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
- "Bottom Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"

- **Dup. Back Pg. Stamp Pos.**
You can adjust the stamp position for back side in duplex mode, within the available range as shown below.

Metric version:

- Left-Right: Left 432 mm – Right 432 mm
- Top-Bottom: Top 432 mm – Bottom 432 mm

Inch version:

- Left-Right: Left 17.0" – Right 17.0"
- Top-Bottom: Top 17.0" – Bottom 17.0"

❖ **Superimpose**

You can have page numbers printed in white when they overlap black parts of the image.

- On
- Off

❖ **Page Numbering Initial Letter**

Switch the page print language.

- P1, P2, ... / P.1, P.2 ...
- S1, S2, ... / S.1, S.2 ...

Stamp Text

This section describes various items of **[Stamp Text]** under **[Stamp]**.

❖ **Font**

You can select the font in Stamp Text mode.

- **Font 1**
- Font 2
- Font 3

❖ **Size**

You can set the size of the stamp printed in Stamp Text mode.

- **Auto**
- Large
- Middle
- Small

❖ **Superimpose**

You can have the Stamp Text printed in white when it overlaps black parts of the image.

- On
- Off

❖ Stamp Setting

You can specify how Stamp Text is printed.

- Stamp Position
You can specify where to print the Stamp Text.
 - Top Left
 - Top Center
 - **Top Right**
 - Bottom Left
 - Center Right
- Stamp Position
You can adjust the print position of the Stamp Text within the available range as shown below.
Metric version:
 - "Top Left"...T/B: 4-144mm, L/R: 4-144mm
 - "Top Center"...T/B: 4-144mm, L/R: 72-72mm
 - "Top Right"...T/B: 4-144mm, L/R: 4-144mm
 - "Center Left"...T/B: 72-72mm, L/R: 4-144mm
 - "Center"...T/B: 72-72mm, L/R: 72-72mm
 - "Center Right"...T/B: 72-72mm, L/R: 4-144mm
 - "Bottom Left"...T/B: 4-144mm, L/R: 4-144mm
 - "Bottom Center"...T/B: 4-144mm, L/R: 72-72mm
 - "Bottom Right"...T/B: 4-144mm, L/R: 4-144mm
 Inch version:
 - "Top Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
 - "Top Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
 - "Top Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"
 - "Center Left"...T/B: 2.8-2.8", L/R: 0.1-5.7"
 - "Center"...T/B: 2.8-2.8", L/R: 2.8-2.8"
 - "Center Right"...T/B: 2.8-2.8", L/R: 0.1-5.7"
 - "Bottom Left"...T/B: 0.1-5.7", L/R: 0.1-5.7"
 - "Bottom Center"...T/B: 0.1-5.7", L/R: 2.8-2.8"
 - "Bottom Right"...T/B: 0.1-5.7", L/R: 0.1-5.7"
- Page to Stamp
You can specify whether to print the stamp on all pages or only the first page.
 - **All Pages**
 - 1st Page Only

- Dup. Back Pg. Stamp Pos.

You can adjust the stamp position for back side in duplex mode, within the available range as shown below.

Metric version:

- Left-Right: Left 432 mm – Right 432 mm
- Top-Bottom: Top 432 mm – Bottom 432 mm

Inch version:

- Left-Right: Left 17.0" – Right 17.0"
- Top-Bottom: Top 17.0" – Bottom 17.0"

 **Note**

- For the procedure of entering the **[Copier/Document Server Features]**, see p.3 "Accessing User Tools (System Settings)"

Input/Output

This section describes various items of **[Input/Output]** under **[Copier/Document Server Features]**.

❖ SADF Auto Reset

In SADF mode, an original must be set within a specified time after the previous original has been fed.

You can adjust this time from 3 to 99 seconds in increments of 1 second.

The timing is set to "5 second(s)" by default.

❖ Copy Eject Face Method in Glass Mode

You can specify the way in which copies are delivered when copying an original placed on the exposure glass.

- Face Up
- Face Down

❖ Memory Full Auto Scan Restart

When memory becomes full while scanning originals, the machine can make copies of scanned originals first, and then automatically proceed scanning remaining originals.

- On
You can leave the machine unattended to make copies, but sorted pages will not be sequential.
- Off
When memory becomes full, the machine stops operation allowing you to remove the copy pages delivered on the output tray.

❖ Sort/Stack Shift setting

You can specify whether to shift the Shift Tray in sort mode or stack mode.

- On
- Off

❖ Insert Separation Sheet

You can specify the number of copy pages for inserting the Separation Sheet from 1 to 999 pages in increments of 1 page.

❖ Letterhead Setting

If you select **[Yes]** in this function, the machine rotates the image correctly.

- Yes
- No

Orientation-fixed (top to bottom) or two-sided paper might not be printed correctly depending on how the originals and paper are placed.

❖ Staple Position

Specify which Top 2 staples or Bottom shown on the initial display with priority.

The optional Finisher SR5000 or the optional Booklet Finisher BK5000 is required to use this function.

- Top 1
- Slant
- Left 2
- Top 2
- Bottom 1
- Top Right 1
- Right 2
- Off

4

❖ Punch Type

Specify which punch type (2 holes or 3 holes) has priority to be shown on the initial display.

The optional Finisher SR5000 and Multi-hole Punch Unit is required to use this function.

- Left 2
- Top 2
- Right 2
- Left 3
- Top 3
- Right 3
- Off

❖ Finisher: Staple Position

Specify the stapling position.

The optional Finisher SR5000 or the optional Booklet Finisher BK5000 is required to use this function.

- Top 1
- Slant
- Left 2
- Top 2
- Bottom 1
- Center
- Top Right 1
- Right 2
- Off

❖ Finisher: Punch Type

Specify the punch type.

The optional Finisher SR5000 and Multi-hole Punch Unit are required to use this function.

- Left 2
- Top 2
- Right 2
- Left 3
- Top 3
- Right 3
- Off

❖ Simplified Screen: Finishing Types

You can select which key is displayed with higher priority for “Finishing Types” on the Simplified Screen.

- Stack
- Slant
- Top 1
- Bottom 1
- Left 2
- 2 Holes Left
- 3 Holes Left
- Do not Display

 Reference

"Orientation-Fixed Paper or Two-Sided Paper", **Troubleshooting**

"Batch mode", **Copy/ Document Server Reference**

"Sort", **Copy/ Document Server Reference**

Settings for the Document Server

For details, see "System Settings", and "Copier/Document Server Features".

❖ Copier/Document Server Features

Heading	items	Default
General Features	Document Server Storage key	2 Sided original: Top to Top
General Features	Document Server Storage key	1 Sided → 1 Sided Combine: 2 originals
General Features	Document Server Storage key	1 Sided → 1 Sided Combine: 4 originals
General Features	Document Server Storage key	1 Sided → 1 Sided Combine: 8 originals
General Features	Document Server Storage key	Create Margin
General Features	Document Server Storage key	Original Orientation

❖ System Settings

Heading	Item	Default
General Features	Warm Up Notice	On
General Features	Copy Count Display	Up
General Features	Output: Document Server	Finisher Upper Tray
General Features	Paper Tray Priority: Copier	Tray 1
Tray Paper Settings	Cover Sheet Tray	Off
Tray Paper Settings	Slip Sheet Tray	Off
Timer Settings	Copier/Document Server Auto Reset Timer	60 second(s)
Administrator Tools	Auto Delete File in Document Server	3 day(s)
Administrator Tools	Delete All Files in Document Server	-

Reference

p.85 "Copier/Document Server Features"

p.23 "System Settings"

Copier/Document Server Features on Main and Sub-machines

This section explains the Copier/Document Server Features on the two machines during Connect Copy.

While Connect Copy is under way, the **[User Tools]** keys of the sub-machines remain disabled. If it is desired to change the defaults, press **[Connect Copy]** on the main machine, and then, clear Connect Copy before making changes.

General Features

How the defaults in the General Features of copying of the main and sub-machines are used in Connect Copy will be explained.

4

❖ Auto Image Density Priority

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.
- The paper size, orientation, and paper type currently set in common on the main and sub-machines are selected automatically.

❖ Original Orientation in Duplex Mode

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Copy Orientation in Duplex Mode

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Reserve Job Mode

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Reservation Screen Auto-off Timer

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Max. Copy Quantity

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Original Counter Reset Key

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Auto Tray Switching

- The main and sub-machines follow their respective set values.

❖ Text

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Text/Photo

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Photo

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Pale

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Generation Copy

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Dark Background

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Panel Features Default

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Image Adjustment Priority

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Paper Display

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Original Type Display

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Special Original Display

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Special Original Display Default

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Tone: Original Remains

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Job End Call

- The main and sub-machines follow their respective set values.
- When **[On]** is selected, only the main machine beeper sounds.

❖ Switch Original Counter Display

- The main and sub-machines follow their respective set values.

❖ Customize Function: Copier

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Customize Function: Document Server Storage

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

Reproduction Ratio

How the defaults in the Reproduction Ratio of copying of the main and sub-machines are used in Connect Copy will be explained.

❖ Shortcut R/E

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ R/E Ratio

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ R/E Ratio Priority

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Ratio for Create Margin

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

Edit

How the defaults in the Edit of copying of the main and sub-machines are used in Connect Copy will be explained.

❖ **Front Margin: Left/Right**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- The operation takes place using the set values of the main machine.

❖ **Back Margin: Left/Right**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- The operation takes place using the set values of the main machine.

❖ **Front Margin: Top/Bottom**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- The operation takes place using the set values of the main machine.

❖ **Back Margin: Top/Bottom**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- The operation takes place using the set values of the main machine.

❖ **1 Sided → 2 Sided Auto Margin: TtoT**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- The operation takes place using the set values of the main machine.

❖ **1 Sided → 2 Sided Auto Margin: TtoB**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- The operation takes place using the set values of the main machine.

❖ **Creep Setting for Magazine**

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Erase Border Width

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- The operation takes place using the set values of the main machine.

❖ Erase Original Shadow in Combine

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Erase Center Width

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Front Cover Copy in Combine

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Copy Order in Combine

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Orientation: Booklet, Magazine

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Copy on Designating Page in Combine

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Image Repeat Separation Line

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Double Copies Separation Line

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Separation Line in Combine**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Copy Back Cover**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- The operation takes place using the set values of the main machine.

❖ **Double Copies Position**

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

4

Stamp

How the defaults in the Stamp of copying of the main and sub-machines are used in Connect Copy will be explained.

Background Numbering

❖ **Size**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Density**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
-

Preset Stamp

❖ **Stamp Language**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Stamp Priority**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Stamp Format

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Dup. Back Pg. Stanp Pos.

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

User Stamp

❖ Program/Delete Stamp

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Stamp Format:1-5

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Dup. Back Pg. Stanp Pos.

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

Date Stamp

❖ Format

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Font

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Size

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Superimpose**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Stamp Setting**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Dup. Back Pg. Stamp Pos.**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

Page Numbering

❖ **Stamp Format**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Font**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Size**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Duplex Back Page Stamping Position**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Page Numbering in Combine**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Stamp on Designating Slip Sheet**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Stamp Position

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Superimpose

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Dup. Back Pg. Stamp Pos.

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

Stamp Text

❖ Font

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Size

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Superimpose

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Stamp Setting

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Page to Stamp

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Stamp Position

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Dup. Back Pg. Stamp Pos.

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

Input/Output

How the defaults in the Stamp of copying of the main and sub-machines are used in Connect Copy will be explained.

❖ SADF Auto Reset

- The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Copy Eject Face Method in Glass Mode

- The set values of the main and sub-machines do not affect Connect Copy.

❖ Memory Full Auto Scan Restart

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.
- Main machine settings have priority.

❖ Sort/Stack Shift setting

The main machine follows the values that are set in it. The set values of the sub-machines do not affect Connect Copy.

❖ Insert Separation Sheet

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Stapling Position

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Select Punch Type

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ Finisher: Staple Position

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Finisher: Punch Type**

- The main machine follows the values that are set in it. The sub-machines follows the settings made on the main machine, regardless of the settings made in it.

❖ **Simplified Screen: Finishing Types**

- The set values of the main and sub-machines do not affect Connect Copy.
- When the main machine is set to the simplified screen, you can not utilize Connect Copy.

5. Printer Features

This chapter explains various items of **[Printer Features]** available in this machine.

List / Test Print

This section describes various items of **[List / Test Print]** under **[Printer Features]**.

Default settings are shown in **bold type**.

For the procedure for accessing the **[Printer Features]**, see "Accessing User Tools (System Settings)".

❖ Multiple Lists

You can print the configuration page and error log.

❖ Configuration Page

You can print the machine's current configuration values.

❖ Error Log

You can print error logs listing all errors that occurred during printing. The most recent 50 errors are stored in the error log. If a new error is added when there are 50 errors already stored, the oldest error is deleted. However, if the oldest error belongs to one of the following print jobs, it is not deleted. The error is stored separately until the number of those errors reaches 30. You can check any of these print jobs for error log information.

- Sample Print
- Locked Print
- Hold Print
- Stored Print

The records of Auto Job Cancel and jobs canceled manually from the control panel can be printed.

❖ Menu List

You can print a Menu List showing the machine's function menus.

❖ PCL Configuration/Font Page

You can print the current configuration and installed PCL font list.

❖ PS Configuration/Font Page

You can print the current configuration and installed PostScript font list. This menu can be selected only when the optional PostScript 3 unit is installed.

❖ PDF Configuration/Font Page


You can print the current configuration and installed PDF font list. This menu can be selected only when the optional PostScript 3 unit is installed.

❖ Hex Dump

You can print in the Hex Dump mode.

Printing the configuration page

- 1** Press [Printer Features].
- 2** Press [Configuration Page] on the [List / Test Print].

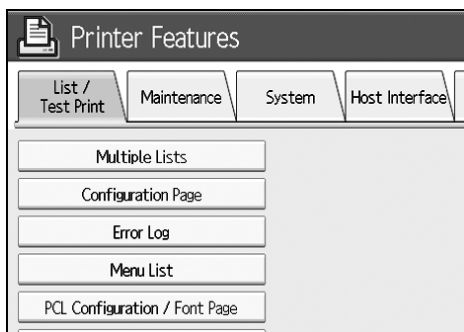

The configuration page is printed.

- 3** Press the [User Tools] key.

Interpreting the configuration page

❖ System Reference

- Unit Number
Displays the serial number assigned to the board by its manufacturer.
- Total Memory
Displays the total amount of memory (SDRAM) installed on the printer.
- Firmware Version
 - Printer
Displays the version number of the printer firmware.
 - System
Displays the version number of the system firmware.
 - Engine
Displays the version number of the printer engine.
 - LCDC
Displays the version number of the panel display.
 - NIB
Displays the version number of the Network interface.
- Device Connection
This item(s) appears when the device option(s) is installed.
- HDD: Font / Macro Download
Displays the capacity of the hard disk drive.

- **Printer Language**
Displays the version number of the printer driver language.
- **Connection Equipment**
Displays the installed optional equipments.
- ❖ **Paper Input**
Displays settings made under Tray Paper Settings menu.
- ❖ **System**
Displays settings made under the System menu.
- ❖ **PCL Menu**
Displays settings made under PCL Menu.
- ❖ **PS Menu**
Displays settings made under PS Menu.
- ❖ **PDF Menu**
Displays settings made under PDF Menu.
- ❖ **Host Interface**
Displays settings made under the Host Interface menu.
When DHCP is active on the network, the actual IP address, subnet mask and gateway address appear in parentheses on the configuration page.
- ❖ **Interface Information**
Displays the interface information.

Maintenance

This section describes various items of **[Maintenance]** under **[Printer Features]**

❖ **List / Test Print Lock**

You can Lock the **[List/Test Print]** menu.

- On
- **Off**

❖ **Delete All Temporary Print Jobs**

You can delete all print jobs temporarily stored in the machine.

❖ **Delete All Stored Print Jobs**

You can delete all print jobs stored in the machine.

Reference

p.23 "System Settings"

System

This section describes various items of **[System]** under **[Printer Features]**.

❖ **Print Error Report**

Select this to have an error report printed when a printer or memory error occurs.

- On
- **Off**

❖ **Auto Continue**

You can select this to enable Auto Continue. When it is On, printing continues after a system error occurs.

- **Off**
- Immediate
- 1 minute
- 5 minutes
- 10 minutes
- 15 minutes

❖ **Memory Overflow**

Select this to have a memory overflow error report printed.

- **Do not Print**
- Error Information

❖ **Job Separation**

You can enable Job Separation.

This menu can be selected only when a finisher (optional) is installed.

- On
- **Off**

❖ **Auto Delete Temporary Print Jobs**

You can select to automatically delete print jobs temporarily stored in the machine.

- On
- **Off: 8 hours**
If you select **[on]**, you can set up to 200 hours for auto file deleting.

❖ **Auto Delete Stored Print Jobs**

You can select to automatically delete print jobs stored in the machine.

- **On: 3 days**
If you select **[on]**, you can set up to 180 days for auto file deleting.
- Off

❖ Initial Print Job List

You can set the desired type of print job list that appears on the screen when you press **[Print Jobs]**.

- **Complete List**
Displays the list of print jobs stored in the machine.
- **List Per User ID**
Displays the list of the User ID who stored a file in the machine.

❖ Memory Usage

You can select the amount of memory used in Font Priority or Frame Priority, according to paper size or resolution.

- **Font Priority**
This setting uses memory for registering fonts.
- **Frame Priority**
This setting uses frame memory for high speed printing.

❖ Duplex

You can select to have print on both sides of each pages.

- **Off**
- **Long Edge Bind**
- **Short Edge Bind**

❖ Copies

You can specify the number of print sets. This setting is disabled if the number of pages to print has been specified with the printer driver or another command.

- 1–9999
Default: 1

❖ Blank Page Print

You can select whether or not to print blank pages.

- **On**
- **Off**

Pages that match one of the following conditions are identified as blank.

- There are no images.
- There are images but they are outside of the printable area.
- There are only blank characters.

❖ Toner Saving

Select either to apply or not to apply Toner Saving.

- **On**
- **Off**

❖ Spool Image

You can select to print spool images. The print job transmitted from the computer is temporarily stored on the machine's hard disk as bit map images that can be printed when transmission is complete. If more than one print job is transmitted, a spool image is printed for each.

- **Off**
- On

❖ Reserved Job Waiting Time

You can specify how long the machine waits to receive a print job before allowing other functions such as the copier and scanner functions to interrupt it.

- Long Wait
- Medium Wait
- **Short Wait**
- In Reserved Job Order

❖ Printer Language

You can specify the printer language.

- **Auto**
- PCL
- PS
- PDF

This menu appears only when the PostScript 3 unit (optional) is installed.

❖ Sub Paper Size

You can enable the Auto Substitute Paper Size (A4, 8¹/₂" × 11") feature.

- Auto
- **Off**

❖ Page Size

You can select the default paper size.

- 12×18
- 11×17
- 8¹/₂×14
- 8¹/₂×11
- 5¹/₂×8¹/₂
- 7¹/₄×10¹/₂
- 8×13
- 8¹/₂×13
- 8¹/₄×13
- A3
- B4 JIS
- A4
- B5 JIS
- A5
- B6 JIS
- A6
- 8K
- 16K
- Custom Size

Default:

- Metric version: **A4**
- Inch version: **8¹/₂×11**

❖ Letterhead Setting

You can rotate original images when printing.

When printing, original images are always rotated by 180 degrees. Therefore, output might not be as expected when printing onto letterhead or preprinted paper requiring orientation. Using this function, you can specify image rotation.

- **Off**
When set to Off, original images are rotated by 180 degrees.
- **Auto Detect**
When set to Auto Detect, the machine detects a letterhead or preprinted paper automatically, and does not rotate them.
- **On (Always)**
When set to On (Always), the machine does not rotate the original images. This function reduces printing speed.

❖ Bypass Tray Setting Priority

You can specify which of the two options, (Printer) Driver / Command or Machine Settings, has priority for determining the paper size for the bypass tray.

- **Driver / Command**
- Machine Settings

❖ Edge to Edge Print

You can select whether or not to print on the entire sheet.

- On
- **Off**

The 5 mm margin along the edges may not be printed properly.

❖ Default Printer Language

You can set the default printer language if the machine cannot find the printer language automatically.

- **PCL**
- PS
- PDF

This menu appears only when the PostScript 3 unit (optional) is installed.

❖ Tray Switching

You can set to switch the paper tray.

- **Off**
- On

 Reference

"Loading paper", **Troubleshooting**

Host Interface

This section describes various items of **[Host Interface]** under **[Printer Features]**. Default settings are shown in **bold type**.

❖ I/O Buffer

You can set the size of the I/O Buffer. Normally it is not necessary to change this setting.

- **128KB**
- 256KB

❖ I/O Timeout

You can set how many seconds the machine should wait before ending a print job. If data from another port usually arrives in the middle of a print job, you should increase this timeout period.

- 10 seconds
- **15 seconds**
- 20 seconds
- 25 seconds
- 60 seconds

PCL Menu

This section describes various items of **[PCL Menu]** under **[Printer Features]**. Default settings are shown in **bold type**.

❖ Orientation

You can set the page orientation.

- **Portrait**
- Landscape

❖ Form Lines

You can set the number of lines per page.

- 5 to 128 by 1

Default:

- Metric version: 64
- Inch version: 60

❖ Font Source

You can set the storage location of the default font.

- **Resident**
- RAM
- HDD
- SD

RAM, HDD and SD can be selected only when fonts have been downloaded to the machine.

❖ Font Number

You can set the ID of the default font you want to use.

- 0 to 63 by 1

The ID is set to "0" by default.

❖ Point Size

You can set the point size you want to use for the selected font.

- 4.00 to 999.75 by 0.25

This setting is effective only with variable-space fonts.

The size is set to "**12.00**" by default.

❖ Font Pitch

You can set the number of characters per inch for the selected font.

- 0.44 to 99.99 by 0.01

This setting is effective only with fixed-space fonts.

The font pitch is set to "**10.00**" by default.

❖ Symbol Set

You can specify the set of print characters for the selected font. The available options are as follows:

Roman-8, ISO L1, ISO L2, ISO L5, **PC-8**, PC-8 D/N, PC-850, PC-852, PC8-TK, Win L1, Win L2, Win L5, Desktop, PS Text, VN Intl, VN US, MS Publ, Math-8, PS Math, VN Math, Pifont, Legal, ISO 4, ISO 6, ISO 11, ISO 15, ISO 17, ISO 21, ISO 60, ISO 69, Win 3.0

❖ Courier Font

You can select a courier font type.

- **Regular**
- **Dark**

❖ Extend A4 Width

You can extend the printing area width (when printing on A4 sheet with PCL).

- **Off**
- **On**

When the setting is On, the width will be 8¹/₂ inches.

❖ Append CR to LF

When set to On, a carriage return will follow each line feed: CR=CR, LF=CR-LF, FF=CR-FF.

- **Off**
- **On**

❖ Resolution

You can set the print resolution in dots per inch.

- 300 dpi
- **600 dpi**

PS Menu

This section describes various items of **[PS Menu]** under **[Printer Features]**.

Default settings are shown in **bold type**.

This menu appears only when the optional PostScript 3 unit is installed.

❖ Data Format

You can select a data format.

- Binary Data

- **TBCP**

This setting is not effective when operating the machine with a EtherTalk connection.

When operating the machine with an Ethernet connection, the print job is canceled under the following conditions;

- The printer driver data format is TBCP, and the data format selected on the display panel is Binary Data.
- The printer driver data format is binary, and the data format selected on the display panel is TBCP.

❖ Resolution

You can set the print resolution in dots per inch.

- 300 dpi
- **600 dpi**
- 1200 dpi

PDF Menu

This section describes various items of **[PDF Menu]** under **[Printer Features]**. Default settings are shown in **bold type**.

❖ **Change PDF Password**

Set the password for the PDF file executing PDF Direct Print.

- Current Password
- New Password
- Confirm New Password

A password can be set using on the Web Image Monitor, but in this case the password information is sent through the network. If security is a priority, set the password using this menu from the Control Panel.

❖ **PDF Group Password**

Set the group password already specified with DeskTopBinder Lite.

- Current Password
- New Password
- Confirm New Password

A password can be set using on the Web Image Monitor, but in this case the password information is sent through the network. If security is a priority, set the password using this menu from the Control Panel.

❖ **Resolution**

You can set the print resolution in dots per inch.

- 300 dpi
- **600 dpi**
- 1200 dpi

6. Scanner Features

This chapter describes various items of **[Scanner Features]** available in this machine.

General Settings

Following describes various items of **[General Settings]** under **[Scanner Features]**. Default settings are shown in **bold type**.

For the procedure for accessing the **[Scanner Features]**, see "Accessing User Tools (System Settings)".

❖ **Switch Title**

Sets index to use when the list of receivers from the machine is displayed.

❖ **Search Destination**

Select a destination list to be used in "Search Destination".

To search from LDAP server, it is necessary to register the LDAP server in **[System Settings]** and set **[LDAP Search]** to **[On]**.

❖ **TWAIN Standby Time**

When the machine is being used to send e-mail or a file, or functioning as Document Server, a scanning request to the machine as a TWAIN scanner will switch the machine to the network TWAIN scanner function. This setting determines the delay until the machine switches to the network TWAIN scanner function.

- **Immediate**

When **[Immediate]** is selected, the machine will switch to the network TWAIN scanner function at once.

- **Set Time: 10 second(s)**

When **[Set Time]** is selected, you can enter the delay time with the number keys (3-30 seconds). The machine will switch to the network TWAIN scanner function when the time set here passes after the last key operation.

❖ **Destination List Display Priority 1**

Select a destination list to be displayed when the machine is in the initial state. You can select either **[E-mail / Folder]**.

- E-mail / Folder

❖ **Destination List Display Priority 2**

In the machine's address book, select which address book appears by default. You can select either **[E-mail Address]** or **[Folder]**.

- E-mail Address

- Folder

❖ **Print & Delete Scanner Journal**

Up to 100 transmission results can be checked on this machine. If the stored transmission results reach 100, select whether to print the transmission journal.

- **On**
The transmission journal is printed automatically. The printed journal is deleted.
- **Off**
Transmission results are deleted one by one as new results are stored.
- **Do not Print: Disable Send**
Transmission cannot be performed when the journal is full.

When printed, all records are deleted after printing. When not printed, records over the limit are automatically deleted in succession from the oldest record.

While the journal is being printed, files with the status waiting cannot be sent.

❖ **Print Scanner Journal**

The scanner journal is printed and deleted.

❖ **Delete Scanner Journal**

The scanner journal is deleted without being printed.

Scan Settings

Following describes various items of **[Scan Settings]** under **[Scanner Features]**.

❖ A.C.S. Sensitivity Level

Sets the sensitivity level for judging color/black and white for scanning originals when **[Scan Type]** is set to **[Auto Color Selection]**.

❖ Wait Time for Next Orig.: Exposure Glass

When dividing originals and scanning them individually with the exposure glass to form a single file, select **[Continuous Wait]**, **[Off]**, or **[Set Wait Time]** for the waiting status.

- Continuous Wait
- Off
- **Set Wait Time: 60 second(s)**

If you select **[SADF]** in **[Original Feed Type]** on the Scan to Folder screen, the **[Wait Time for Next Orig.: Exposure Glass]** setting becomes invalid.

If you select **[Batch]** in **[Original Feed Type]** on the Scan to Folder screen, the **[Wait Time for Next Orig.: Exposure Glass]** setting becomes invalid, and the machine waits for an additional original to be put in place.

If **[Set Wait Time]** is selected, enter the wait time in seconds (3-999) for placing additional originals with the number keys. Scanning will start if additional originals are placed and the **[Start]** key is pressed within this time. You can end scanning and begin transmission by pressing the **[#]** key within this time. Once the specified time has elapsed, transmission starts automatically.

If **[Continuous Wait]** is selected, the machine will wait for additional originals until the **[#]** key is pressed. Scanning will start when additional originals are placed and the **[Start]** key is pressed. You can end scanning and begin sending by pressing the **[#]** key.

If originals are placed in the auto document feeder (ADF), transmission will start without waiting for additional originals after all originals in the ADF have been scanned, regardless of the specified settings.

If a paper misfeed occurs or any of the following operations is performed while the machine is waiting for additional originals, the countdown stops and does not start again until the **[#]** key is pressed.

- Changing the settings such as the scan settings
- Opening the upper cover of the ADF
- Pressing the **[Interrupt]** key to activate the copy mode

❖ **Wait Time for Next Original(s): SADF**

When dividing originals and scanning them separately with the ADF to form a single file, select **[Set Wait Time]** or **[Continuous Wait]** for the waiting status.

- Continuous Wait
- **Set Wait Time: 60 second(s)**

This setting is valid if **[SADF]** is specified for **[Original Feed Type]** when scanning.

If **[Set Wait Time]** is selected, enter the wait time in seconds (3-999) for placing additional originals with the number keys. Scanning will start automatically if additional originals are placed within this time. You can end scanning and begin transmission by pressing the **[#]** key within this time. Once the specified time has elapsed, transmission starts automatically.

If **[Continuous Wait]** is selected, the machine will wait for the additional originals until the **[#]** key is pressed. Scanning will start when additional originals are placed and the **[Start]** key is pressed. You can end scanning and begin sending by pressing the **[#]** key.

Even if originals are placed on the exposure glass, the machine will operate according to the specified settings. However, every time originals are placed on the exposure glass, you must press the **[Start]** key to start scanning. Scanning will start if additional originals are placed and the **[Start]** key is pressed within this time. You can end scanning and begin transmission by pressing the **[#]** key within this time. Once the specified time has elapsed, transmission starts automatically.

If originals are placed in the auto document feeder (ADF), transmission will start without waiting for additional originals after all originals in the ADF have been scanned, regardless of the specified settings.

If a paper misfeed occurs or any of the following operations is performed while the machine is waiting for additional originals, the countdown stops and does not start again until the **[#]** key is pressed.

- Changing the settings such as the scan settings
- Opening the upper cover of the ADF
- Pressing the **[Interrupt]** key to activate the copy mode

❖ **Background Density of ADS (Full Color)**

Characteristics due to the type of paper such as non-whiteness like newspaper or transparent originals can be reduced by correcting the scanning density.

Reference

"Batch, SADF", **Scanner Reference**

"Items for Specifying Scan Settings", **Scanner Reference**

"Setting Items for Original Feed Type", **Scanner Reference**

"Scanning Multiple Pages of Originals as One File", **Scanner Reference**

Send Settings

This section describes various items of **[Send Settings]** under **[Scanner Features]**.

❖ **Compression (Black & White)**

Select whether or not to compress black and white scan files.

- **On**
- **Off**

Compression reduces the time required for transferring the scan file.

The actual time required for file transfer will vary depending on the file size and network load.

❖ **Compression (Gray Scale / Full Color)**

Specify whether or not to compress multi level (gray scale) scan files.

- **On: Compression Level 3**
- **Off**

If you select **[On]**, you can specify the compression level between one and five. The image quality is better for lower compression, but the time required for file transfer increases accordingly.

The actual time required for file transfer will vary depending on the file size and network load.

❖ **High Compression PDF Level**

Select compression level when creating high compression PDF files.

- **Higher**
- **Standard**

❖ **Max. E-mail Size**

Select whether or not to limit the size of an e-mail to which an image is attached.

- **On: 2048KB**
- **Off**

When **[On]** is selected, enter the size limit (128-102400 KB) with the number keys.

When the SMTP limits the size, match that setting.

❖ **Divide & Send E-mail**

This function is effective only when **[On]** is selected for **[Max. E-mail Size]**. Select whether or not an image exceeding the size specified in **[Max. E-mail Size]** should be divided and sent using more than one e-mail.

- **Yes (per Max. Size): 5**
- Yes (per Page)
- No

When **[Yes (per Max. Size)]** is selected, enter the Max. Number of Divisions (2-500) with the number keys.

When **[Multi-page: TIFF]** or **[Multipage: PDF]** is selected for **[File Type Priority]**, the image will not be divided even if **[Yes (per Page)]** is selected.

When **[Yes (per Max. Size)]** is selected, some received files may not be able to be restored, depending on the type of e-mail software.

When **[No]** is selected, the e-mail is not sent if its size exceeds the limit, and an error message appears. The scan file is discarded.

Set the maximum e-mail size within the capacity of the SMTP server.

❖ **E-mail Information Language**

Select the language in which e-mail information such as title, document name, and sender's name is sent.

Select one of the following 20 languages:

British English, **American English**, German, French, Italian, Spanish, Dutch, Portuguese, Polish, Czech, Swedish, Finnish, Hungarian, Norwegian, Danish, Japanese, Simplified Chinese, Traditional Chinese, Russian, and Hangul. Default:

- Metric version: **British English**
- Inch version: **American English**

The e-mail text which is a template cannot be changed.

❖ **No. of Digits for Single Page Files**

Sets digit number for serial number to attach to Single Page file name.

- **4 Digits**
- 8 Digits

❖ **Stored File E-mail Method**

Specify the e-mail setting for sending stored files. You can select **[Send File]** or **[Send URL Link]**. This setting can be used for the following:

- **Send File**
- Send URL Link

If you select **[Send File]**, actual files are attached to e-mails.

If you select **[Send URL Link]**, URL Links to file locations are attached to e-mails.

7. Registering Addresses and Users for Scanner Functions

Following describes the procedure for registering the destination and the user.

Address Book

Registering information such as the names of users and their e-mail addresses in the Address Book allows you to manage them easily.

❗ Important


- ❑ Address Book data is stored on the hard disk. It can be lost if there is some kind of hard disk failure. The manufacturer shall not be responsible for any damages resulting data loss.

You can register and manage the following items in the Address Book:

❖ Names

You can register the name of the user and the key display. This is the basic information required for managing user of the machine.

To register a e-mail address in the address book, you must register information such as the user name and destination name in advance.

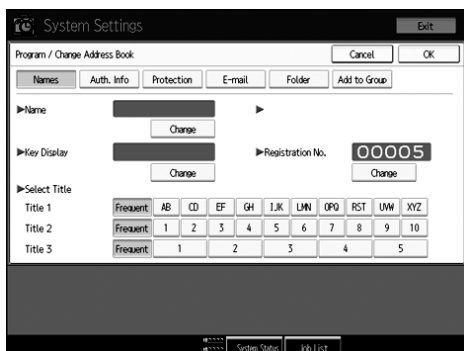

❖ Auth. Info

You can register user codes in order to restrict particular functions to certain users, and to check their use of each function. You can also register login user names and login passwords to be used when sending e-mail, sending to folders, or accessing an LDAP server.



❖ Protection

You can set protection codes to stop sender's name from being used or folders from being accessed without authorization.



❖ E-mail


You can register e-mail destinations in the Address Book.



❖ Folder

You can register the protocol, path name and server name.


- SMB

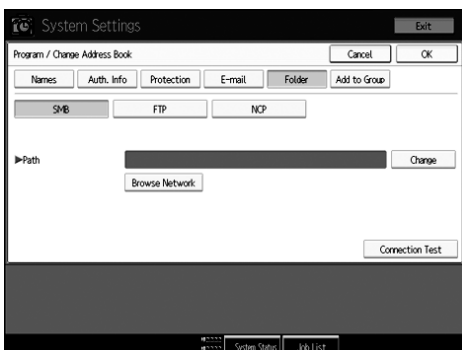

- FTP




- NCP

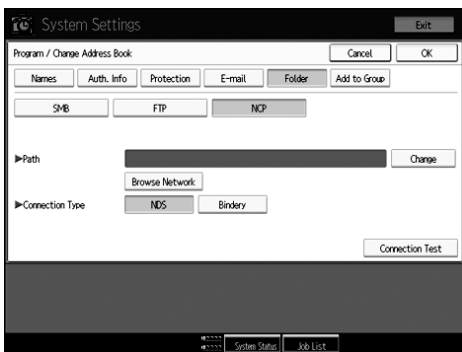

❖ Add to Group

You can put registered e-mail and folder destinations into a group for easier management.

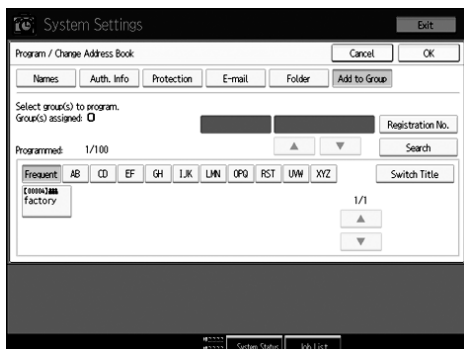

📌 Note

- ❑ You can also use a Web Image Monitor to register names in the Address Book. With the SmartDeviceMonitor for Admin, you can register multiple names at the same time.
- ❑ Using **[Address Management Tool]** in SmartDeviceMonitor for Admin, you can backup Address Book data. We recommend backing up data when using the Address Book.
- ❑ For details about using Web Image Monitor, see the Web Image Monitor Help.
- ❑ For operating instructions, see SmartDeviceMonitor for Admin Help.

7

Managing names in the Address Book

By registering a name and key display beforehand, you can specify e-mail and folder destinations simply by selecting the name key.

🔍 Reference

p.156 "Registering Names"

Sending e-mail by Quick Dial

You can also specify an e-mail address by selecting the destination shown on the initial scanner display when sending a document using the scanner function. A registered e-mail address can be used as the sender's address, and the sender's address are automatically entered in the "From" field of an mail header.

🔍 Reference

p.168 "E-mail Destination"

Sending scanned files to a shared folder directly

After registering the path name, user name and password, you can connect to a shared folder simply by selecting the destination shown on the initial scanner display whenever sending files using the scanner function to a shared folder.

To share the folder using Windows, select the SMB protocol.

To register the folder to the FTP server, select the FTP protocol.

To register the folder to the NetWare server, select the NCP protocol.

Reference

p.172 "Registering Folders"

Preventing unauthorized user access to shared folders from the machine

After registering a protection code, you can specify the object of protection to prevent an e-mail destination from being used without permission.

You can prevent unauthorized access to registered folders.

Reference

p.199 "Registering a Protection Code"

Managing users and machine usage

Register user codes to limit users to the following functions and check their use of each function:

- Copier
- Document Server
- Scanner
- Printer

Reference

p.159 "Authentication Information"

Registering Names

Register user information including their names.

The user name is useful for selecting a destination when sending e-mail. You can also use it as a folder destination.

You can register up to 2000 names.


Registering Names

Following describes the procedure for registering names.

- 1** Press [System Settings].



- 2** Press [Administrator Tools].
- 3** Press [Address Book Management].
- 4** Check that [Program/Change] is selected.
- 5** Press [New Program].
- 6** Press [Change] on the right of the Name.
The name entry display appears.
- 7** Enter the name, and then press [OK].
- 8** Press the key for the classification you want to use under Select Title.

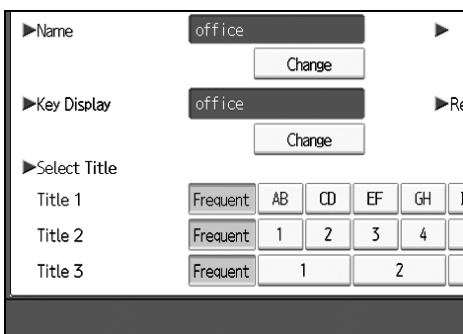

9 Press [OK] twice.

10 Press the [User Tools] key.

Note

- The name can be used for documents in the Document Server. For details about the Document Server, see "Using the Document Server", Copy/Document Server Reference.
- The keys you can select are as follows:
 - [Freq.]: Added to the page that is displayed first.
 - [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]: Added to the list of items in the selected title.
- You can select [Freq.] and one more page for each title.

Reference

"Entering Text", About This Machine

"Document Server", Copy/ Document Server Reference

Changing a Registered Name

This section describes the procedure for changing a name.

1 Press [System Settings].



2 Press [Administrator Tools].

3 Press [Address Book Management].

4 Check that [Program/Change] is selected.

5 Select the registered name you want to change.

Press the name key, or enter the registered number using the number keys.

6 To change the name or key display, press [Change] on the right of the name or key display.

7 Enter the name or key display, and then press [OK].

8 To change the title, press the key for the classification you want to use from **Select Title**.

Note

- You can search by the registered name, user code, folder name, or e-mail address.

Reference

"Entering Text", **About This Machine**

To change a registration number

1 Press [Change] to the right of "Registration No."

2 Enter a new registration number using the number keys, and then press the [#] key.

Deleting a Registered Name

Following describes the procedure for deleting a user.

1 Press [System Settings].



2 Press [Administrator Tools].

3 Press [Address Book Management].

4 Press [Delete].

5 Select the name you want to delete.

Press the name key, or enter the registered number using the number keys.

6 Press [Yes].

7 Press [Exit].

8 Press the [User Tools] key.

Authentication Information

Following describes the procedure for authenticating a user code.

Important

- The functions associated with each user code are the same. If you change or delete user codes, management data and limits associated with that code become invalid.

Register user codes to limit users to the following functions and check their use of each function:

Copier

Document Server

Scanner

Printer

Note

- You can register up to 500 user codes.
- The number of copies scanned using the scanner function is counted for each user code. This allows you to check each user's usage.
- To automatically register the printer driver user code, select **[Printer: PC Control]** for the printer in User Code Authentication. To use the user code set in User Tools, set the user codes registered in User Tools for the printer driver.
- For details about setting user codes for the printer driver, see Printer Driver Help.

Reference

p.47 "User Authentication Management"

Registering a User Code

Following describes the procedure for registering a user code.

- 1** Press **[System Settings]**.



- 2** Press **[Administrator Tools]**.

- 3** Press **[Address Book Management]**.
- 4** Check that **[Program/Change]** is selected.
- 5** Press the name whose code is to be registered, or enter the registered number using the number key.

You can search by the registered name, user code, folder name, or e-mail address.


- 6** Press **[Auth. Info]**.
- 7** Enter the user code using the number keys, and then press **[#]** key.



If you make a mistake, press **[Clear]** or the **[Clear/Stop]** key.

7

- 8** Press **[▼Next]** twice.
- 9** Select the functions to be used with the user code from Available Functions.

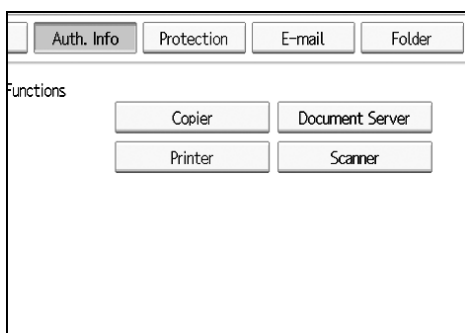

- 10** Press **[OK]**.
- 11** Press **[Exit]**.
- 12** Press the **[User Tools]** key.

 **Note**

- User codes can contain up to eight digits.
- To register the name, see "Registering Names".

 **Reference**

p.156 "Registering Names"


Changing a User Code

Following describes the procedure for changing a registered user code.

Important

- Even if you change a user code, the counter value will not be cleared.

1 Press [System Settings].

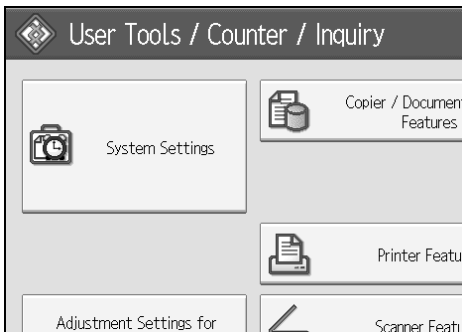

2 Press [Administrator Tools].

3 Press [Address Book Management].

4 Check that [Program/Change] is selected.

5 Select the user whose user code you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

6 Press [Auth. Info].

7 Press [Change], and then enter the new user code using the number keys



8 Press [#] key.

9 To change the available functions, press [Auth. Info] and then press [▼Next] twice.

10 Press the key to select the functions to enable them.

Press the key to highlight it, and then the function is enabled. To cancel a selection, press the highlighted key.

11 Press [OK].**12 Press [Exit].****13 Press the [User Tools] key.****Note**

- To change the name, key display and title, see “Changing a Registered Name”.

Reference

p.157 “Changing a Registered Name”

Deleting a User Code

Following describes the procedure for deleting a user code

Important

- After clearing the user code, the counter is automatically cleared.

1 Press [System Settings].**2 Press [Administrator Tools].****3 Press [Address Book Management].****4 Press [Program/Change].****5 Select the name whose code is to be deleted.**

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

6 Press [Auth. Info].

- 7** Press [Change] to delete the user code, and then press [#] key.



- 8** Press [OK].

- 9** Press [Exit].

- 10** Press the [User Tools] key.

 **Note**

- To delete a name from the Address Book entirely, see “Deleting a Registered Name”.

 **Reference**

p.158 “Deleting a Registered Name”

Displaying the Counter for Each User

Following describes the procedure for displaying the counter on individual user basis.

- 1** Press [System Settings].



- 2** Press [Administrator Tools].

- 3** Press [Display/Clear/Print Counter per User].

- 4** Select the function usage you want to print from [Copier Counter], [Print Counter] or [Scanner Counter].

Counters for individual function usage under each user code appear.

Printing the Counter for Each User

Following describes the procedure for printing the counter that counts on individual user basis.


- 1 Press **[System Settings]**.



- 2 Press **[Administrator Tools]**.


- 3 Press **[Display/Clear/Print Counter per User]**.

- 4 Select a user code from the left side of the display.

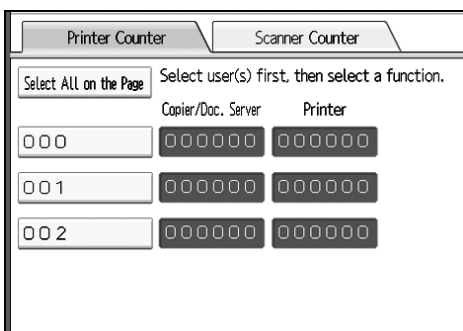

Press **[Select All on the Page]** to select all user codes on the page.

- 5 Press **[Print Counter List]** under Per User.

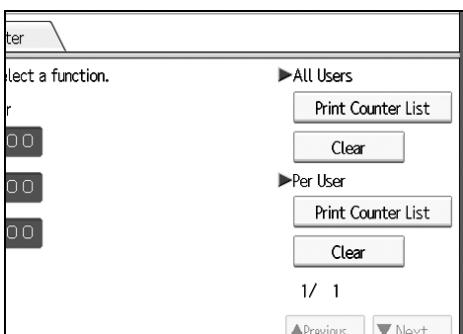

Enter the user code, and then press **[#]** if the user code is registered.


6 Select the function usage you want to print from [Copier Counter], [Print Counter], and [Scanner Counter].

7 Press [Print].

Printing the Counter for All User

Following describes the procedure for printing the counter for all users.


1 Press [System Settings].

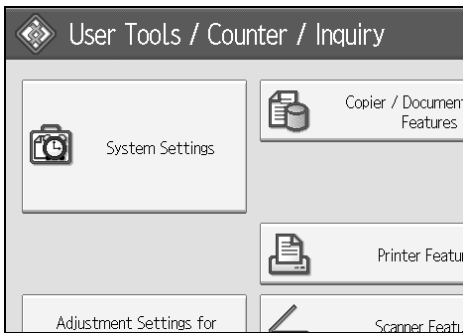

2 Press [Administrator Tools].

3 Press [Display/Clear/Print Counter per User].

4 Press [Print Counter List] under All Users.

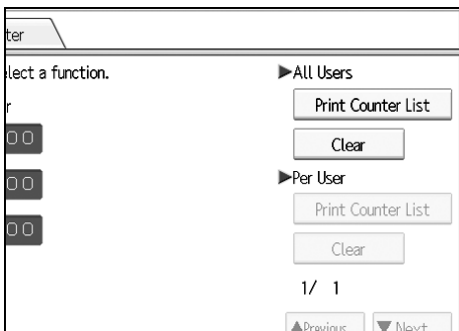

Enter the user code, and then press [#] if the user code is registered.

5 Select the function usage you want to print from [Copier Counter], [Print Counter], [Scanner Counter] and [All Counters].

6 Press [Print].

Clearing the Number of Prints

Following describes the procedure for clearing the counter.

- 1 Press [System Settings].




- 2 Press [Administrator Tools].

- 3 Press [Display/Clear/Print Counter per User].

- 4 Select the user code to clear.


- 5 To clear the number of prints made under a user code, Select the user code from the left side of the display.

7

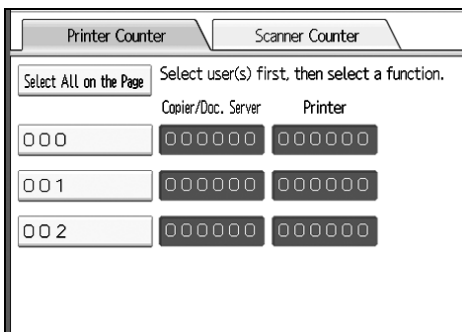

Press [Select All on the Page] to select all user codes on the page.

- 6 Press [Clear] under Per User Codes.

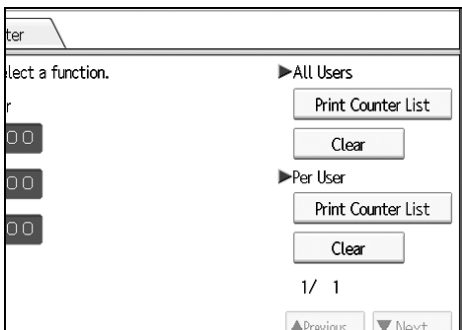

- 7** Select the function usage you want to clear from [Copier Counter], [Print Counter], [Scanner Counter] and [All Counters].
- 8** Press [OK].
- 9** To clear the number of prints for all user codes, press [Clear] under All Users.
- 10** Select the function usage you want to clear from [Copier Counter], [Print Counter], and [Scanner Counter].
- 11** Press [OK].

E-mail Destination

Register e-mail destinations so you do not need to enter an e-mail address every time, and can send scan files from scanner function by e-mail.

- It is easy to select the e-mail destination if you register "Name" and "Key Display" as the e-mail destination.
- You can register e-mail destinations as a group.
- You can use the e-mail address as the sender's address when sending scan files in scanner mode. If you want to do this, set a protection code on the sender address to prevent unauthorized access.

Note

- You can select an e-mail address from an LDAP server, and then register it in the Address Book. See "Sending Scan File by E-mail", Scanner Reference.

Reference



p.199 "Registering a Protection Code"

Registering an E-mail Destination

- 1** Press [System Settings].



- 2** Press [Administrator Tools].
- 3** Press [Address Book Management].
- 4** Check that [Program/Change] is selected.
- 5** Select the name whose e-mail address you want to register. Press the name key, or enter the registered number using the number keys.
- 6** Press [E-mail].

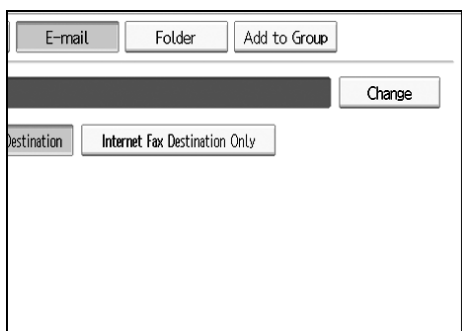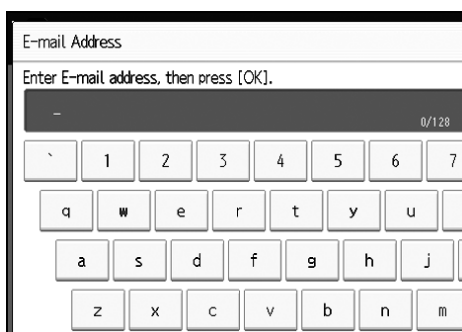7 Press [Change].**8** Enter the e-mail address.**9** Press [OK].**10** Select [E-mail].**11** Press [OK].**Note**

- You can enter up to 128 characters for the e-mail address.
- To register the name, see "Registering Names".

Reference

- p.156 "Registering Names"
- p.159 "Registering a User Code"
- p.190 "Registering Names to a Group"

Changing an E-mail Destination

- 1 Press [System Settings].



- 2 Press [Administrator Tools].

- 3 Press [Address Book Management].

- 4 Check that [Program/Change] is selected.


- 5 Select the name whose e-mail address you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

- 6 Press [E-mail].

- 7 Press [Change] under E-mail Address.

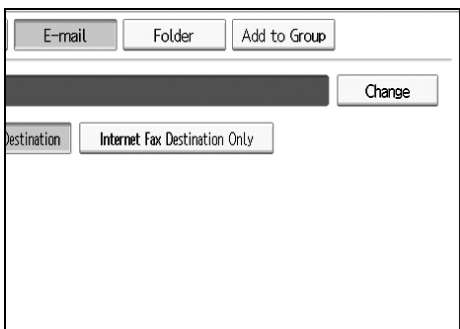

- 8 Enter the e-mail address, and then press [OK].

- 9 Press [OK].

Note

- To change the name, key display and title, see "Changing a Registered Name".

Reference

p.157 "Changing a Registered Name"

"Entering Text", **About This Machine**

Using the e-mail address as the sender

- 1** Press [Protection].
 - 2** Press [Sender] under [Use Name as].
-

Deleting an E-mail Destination

- 1** Press [System Settings].



- 2** Press [Administrator Tools].
- 3** Press [Address Book Management].
- 4** Check that [Program/Change] is selected.
- 5** Select the name whose e-mail address you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

- 6** Press [E-mail].
- 7** Press [Change] under E-mail Address.
- 8** Press [Delete All].
- 9** Press [OK] twice.
- 10** Press the [User Tools] key.

 **Note**

- To delete the name, key display, and title, see “Deleting a Registered Name”.

 **Reference**

p.158 “Deleting a Registered Name”

Registering Folders

By registering a shared folder, you can send scan files to it directly.

There are three types of protocol you can use:

- SMB
For sending files to shared Windows folders.
- FTP
Use when sending files to an FTP server.
- NCP
Use when sending files to an Net- Ware server.

Note

- For details about protocols, server names, and folder levels, consult your network administrator.
- You can prevent unauthorized users from accessing folders from the machine. See "Registering a Protection Code".
- You can only select either SMB, FTP, or NCP. If you change protocol after finishing your settings, all previous entries are cleared.
- You can register folder destinations in a group.

7

Using SMB to Connect

Note

- To register a folder in an FTP server, see "Using FTP to Connect".
- To register a folder in an NetWare server, see "Using NCP to Connect".

Reference

- p.178 "Using FTP to Connect"
- p.183 "Using NCP to Connect"

Registering a Folder


- 1** Press [System Settings].



- 2** Press [Administrator Tools].
- 3** Press [Address Book Management].
- 4** Check that [Program / Change] is selected.
- 5** Select the name whose folder you want to register. Press the name key, or enter the registered number using the number keys.
- 6** Press [Auth. Info], and then press [Next].



- 7** Press [Specify Other Auth. Info] on the right side of Folder Authentication.
- 8** Press [Change] under Login User Name.
- 9** Enter the login user name, and then press [OK].
- 10** Press [Change] under Login Password.
- 11** Enter the password, and then press [OK].
- 12** Enter the password again to confirm, and then press [OK].
- 13** Press [Folder].
- 14** Press [SMB].

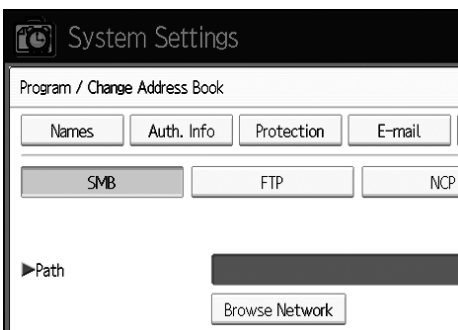

- 15** Press [Connection Test] to check the path is set correctly.
- 16** Press [Exit].
- 17** Press [OK].

18 Press **[Exit]**. **Note**

- To register the name, see Registering Names”.
- You can enter a path using up to 128 characters.
- To specify a folder, you can either enter the path manually or locate the folder by browsing the network.
- If the connection test fails, check the settings, and then try again.
- When Do not Specify is selected, the SMB User Name and SMB Password that you have specified in Default User Name / Password (Send) of File Transfer settings applies.
- If User Authentication is specified, contact your administrator.

 **Reference**

p.156 “Registering Names”

p.174 “To locate the folder manually”

p.174 “Using Browse Network to locate the folder”

To locate the folder manually

1 Press **[Change]** under **Path**.**2** Enter the path where the folder is located.**3** Press **[OK]**.

If the format of the entered path is not correct, a message appears. Press **[Exit]**, and then enter the path again.

 **Note**

- Enter the path using the format as follows : “\\ServerName\Share-Name\PathName”
- You can also enter an IPv4 address.
- You can enter a path using up to 128 characters.

Using Browse Network to locate the folder

1 Press **[Browse Network]**.

Work groups on the same network are displayed.


Network display only lists client computers you are authorized to access.

2 Select the work group.

Computers in the selected work group are displayed.

3 Select a client computer.

Shared folders under it appear.

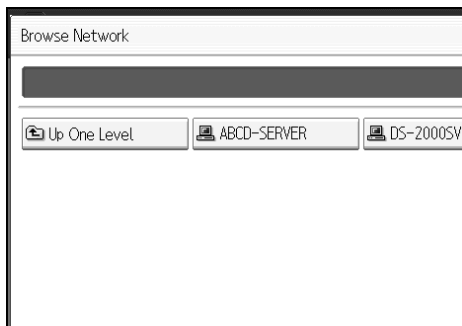

You can press **[Up One Level]** to switch between levels.

4 Select the folder you want to register.**5** **[OK]**.

If a Login Screen Appears

This section explains how to log on to the machine if the login screen appears when you try to access a folder by browsing the network.

If you have not specified folder authentication, or if an incorrect user name or password has been entered for folder authentication, the login screen appears.

1 Enter the login user name, and then press **[OK]**.

Enter the login user name specified for folder authentication.

2 Enter the password, and then press **[OK]**.

The path to the selected folder appears.

If a message appears, press **[Exit]**, and then enter the login user name and password again.

Changing a Folder

1 Press **[System Settings]**.

2 Press **[Administrator Tools]**.

3 Press **[Address Book Management]**.

4 Check that **[Program/Change]** is selected.

5 Select the name whose folder you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

6 Press **[Folder]**.

7 Select the items you want to change.

When specifying a folder, enter the path directly or select it by referencing the network. For more information, see "To locate the folder manually" and "Using Browse Network to locate the folder".

8 Press **[Connection Test]** to check the path is set correctly.

9 Press **[OK]**.

10 Press **[Exit]**.

 **Note**


To change the name, key display and title, see "Changing a Registered Name".

 **Reference**

p.157 "Changing a Registered Name"

To change the protocol

1 Press **[FTP]** or **[NCP]**.

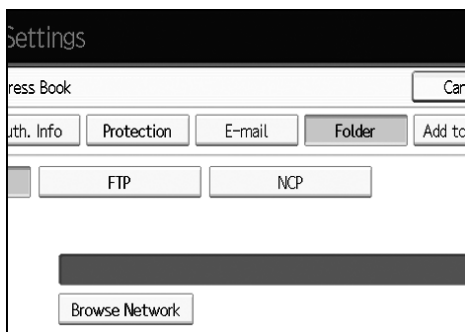

2 A confirmation message appears. Press **[Yes]**.

Changing the protocol will clear all settings made under the previous protocol.

3 Enter each items again. **Reference**

p.178 “Registering a Folder”

Changing SMB settings

To change SMB settings:

1 Press **[Change]** of path name.**2** Enter the name of the path on which the folder is located, and then press **[OK]**. **Note**

-
- The folder destination can be selected using Network Reference.

 **Reference**

p.174 “Using Browse Network to locate the folder”

Deleting a registered folder

1 **[System Settings]**.**2** Press **[Administrator Tools]**.**3** Press **[Address Book Management]**.**4** Press **[Delete]**.**5** Select the name whose folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

6 Press **[Folder]**.**7** Press the protocol which is not currently selected.

A confirmation message appears.

8 Press [Yes].

9 Press [OK].

10 Press [Exit].

 **Note**

- To delete the name, key display, and title, see “Deleting a Registered Name”.

 **Reference**

p.158 “Deleting a Registered Name”

Using FTP to Connect

 **Note**

- To register a shared folder configured in Windows, see “Using SMB to Connect”.
- To register a folder in an NetWare server, see “Using NCP to Connect”.

 **Reference**

p.172 “Using SMB to Connect”

p.183 “Using NCP to Connect”

Registering a Folder

1 Press [System Settings].



2 Press [Administrator Tools].


3 Press [Address Book Management].

4 Check that [Program/Change] is selected.

5 Select the name whose folder you want to register.

You can search by the registered name, user code, folder name, or e-mail address.

- 6** Press [Auth. Info], and then press [Next].
- 7** Press [Specify Other Auth. Info] on the right side of Folder Authentication.
- 8** Press [Change] under Login User Name.
- 9** Enter the login user name, and then press [OK].
- 10** Press [Change] under Login Password.
- 11** Enter the password, and then press [OK].
- 12** Enter the password again to confirm, and then press [OK].
- 13** Press [Folder].
- 14** Press [FTP].

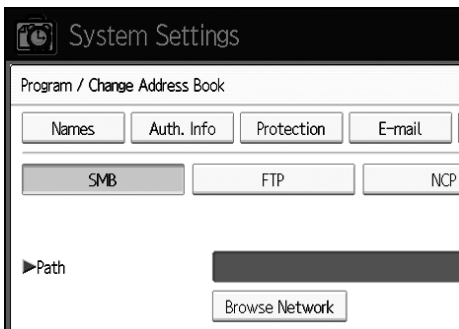

- 15** A confirmation message appears. Press [Yes].
- 16** Press [Change] under Server Name.
- 17** Enter the server name, and then press [OK].
- 18** Press [Change] under Path.
- 19** Enter the path.
- 20** Press [OK].
- 21** Press [Change] under "Port Number".
- 22** Enter Port Number.
- 23** Press [Connection Test] to check the path is set correctly.
- 24** Press [Exit].
- 25** Press [OK].
- 26** Press [Exit].

 **Note**

- To register the name, see "Registering Names".
- You can enter up to 128 characters for the user name.
- You can enter up to 128 characters for the password.
- You can enter a server name using up to 64 characters.
- You can enter an absolute path, using this format: "/user/ home/user-name"; or a relative path, using this format: "directory/sub-directory".
- If you leave the path blank, the login directory is assumed to be the current working directory.
- You can also enter an IPv4 address.
- You can enter a path using up to 128 characters.
- To change the port number, press **[Change]** under Port No.. Enter the port number using the number keys, and then press **[#]**.
- Specify the port number within the range of 1 to 65535.
- If the connection test fails, check the settings, and then try again.
- When **[Do not Specify]** is selected, the FTP User Name and FTP Password that you have specified in Default User Name / Password (Send) of File Transfer settings applies. For details, see "File Transfer".
- If User Authentication is specified, contact your administrator.

 **Reference**

- p.156 "Registering Names"
- p.174 "To locate the folder manually"
- p.174 "Using Browse Network to locate the folder"

7

Changing a Folder

1 Press **[System Settings]**.



2 Press **[Administrator Tools]**.

3 Press **[Address Book Management]**.

4 Check that **[Program/Change]** is selected.

- 5** Select the name whose folder you want to change, and then press **[Folder]**.
Press the name key, or enter the registered number using the number keys.
You can search by the registered name, user code, folder name, or e-mail address.
- 6** Press **[Folder]**.
- 7** Select the items you want to change.
- 8** Press **[Connection Test]** to check the path is set correctly.
- 9** Press **[OK]**.
- 10** Press **[Exit]**.

 **Note**


- To change the name, key display and title, see “Changing a Registered Name”.

 **Reference**

p.157 “Changing a Registered Name”

To change the protocol

- 1** Press **[SMB]**, or **[NCP]**.

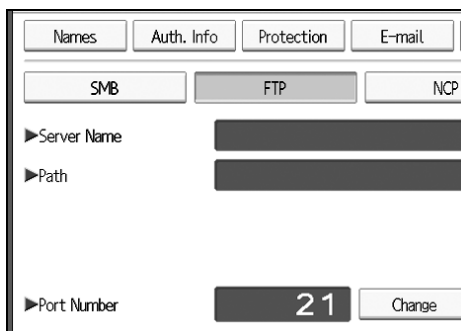

The screenshot shows a configuration window with several tabs at the top: 'Names', 'Auth. Info', 'Protection', and 'E-mail'. Below the tabs are three buttons for selecting a protocol: 'SMB', 'FTP', and 'NCP'. Underneath these are three fields with expandable arrows: 'Server Name', 'Path', and 'Port Number'. The 'Port Number' field is currently set to '21' and has a 'Change' button next to it.

- 2** A confirmation message appears. Press **[Yes]**.
Changing the protocol will clear all settings made under the previous protocol.
- 3** Enter each items again.

 **Reference**

p.172 “Registering a Folder”

Changing items under FTP

- 1** Press [Change] under "Port Number".
- 2** Enter the new port number, and then press [#].
- 3** Press [Change] under Server Name.
- 4** Enter the new server name, and then press [OK].
- 5** Press [Change] under "Path".
- 6** Enter the new path, and then press [OK].

Deleting a Folder

- 1** Press [System Settings].



- 2** Press [Administrator Tools].
- 3** Press [Address Book Management].
- 4** Check that [Program/Change] is selected.
- 5** Select the name whose folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

- 6** Press [Folder].
- 7** Press the protocol which is not currently selected.
A confirmation message appears.

8 Press [Yes].

9 Press [OK].

10 Press [Exit].

Note

- ☐ To delete a name entirely, see “Deleting a Registered Name”.

Reference

p.158 “Deleting a Registered Name”

Using NCP to Connect**Note**

- ☐ To register a shared folder configured in Windows, see “Using SMB to Connect”
- ☐ To register a folder in an FTP server, see “Using FTP to Connect”

Reference

p.172 “Using SMB to Connect”

p.178 “Using FTP to Connect”

Registering a Folder**1** Press [System Settings].**2** Press [Administrator Tools].**3** Press [Address Book Management].**4** Check that [Program/Change] is selected.**5** Press the name you want to register or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

6 Press [Auth. Info], and then press [Next].**7** Press [Specify Other Auth. Info] on the right side of Folder Authentication.**8** Press [Change] under Login User Name.

- 9 Enter the login user name, and then press [OK].
- 10 Press [Change] under Login Password.
- 11 Enter the password, and then press [OK].
- 12 Enter the password again to confirm, and then press [OK].
- 13 Press [Folder].
- 14 Press [NCP].
- 15 A confirmation message appears. Press [Yes].
- 16 Select "Connection Type".
If you want to specify a folder in an NDS tree, press [NDS]. If you want to specify a folder on a NetWare server, press [Bindery].
- 17 Specify the folder.
- 18 Press [OK].
- 19 Press [Exit].

Note

- To register the name, see "Registering Names".
- You can enter up to 64 characters for the user name.
- If you have set "Connection Type" to [NDS], enter the user name followed by the name of the context where the user object is located. If the user name is "user" and the context name is "context", enter "user.context"
- You can enter up to 64 characters for the password.
- To specify a folder, you can either enter the path manually or locate the folder by browsing the network.
- When [Do not Specify] is selected, the NCP User Name and NCP Password that you have specified in Default User Name / Password (Send) of File Transfer settings applies. For details, see "File Transfer".
- If User Authentication is specified, contact your administrator.

Reference

- p.156 "Registering Names"
- p.185 "To locate the folder manually"
- p.185 "Using Browse Network to locate the folder"
- "Entering Text", **About This Machine**

To locate the folder manually

- 1** Press **[Change]** under **Path**.
- 2** Enter the path where the folder is located.
- 3** **[OK]**.
- 4** Press **[Connection Test]** to check the path is set correctly.
- 5** Press **[Exit]**.

 **Note**

- If you set "Connection Type" to **[NDS]**, and if the NDS tree name is "tree", the name of the context including the volume is "context", the volume name is "volume" and the folder name is "folder", then the path will be "\\tree\volume.context\folder".
- If you set "Connection Type" to **[Bindery]**, and if the Net-Ware server name is "server", the volume name is "volume" and the folder name is "folder", then the path will be "\\server\volume\folder".
- You can enter a path using up to 128 characters.
- If the connection test fails, check the settings, and then try again.

Using Browse Network to locate the folder

- 1** Press **[Browse Network]**.
- 2** If you have set "Connection Type" to **[NDS]**, a list of items in the NDS tree appears. If you have set "Connection Type" to **[Bindery]**, a list of items on the NetWare server appears.
- 3** Search for the destination folder in the NDS tree or NetWare server.
You can press **[Up One Level]** to switch between levels.
- 4** Select the folder you want to register.
- 5** **[OK]**.

 **Note**

- Only the folders you are allowed to access appear in **[Browse Network]**.
- If the languages used on the machine and the destination you want to view differ, the items in the list may not appear correctly.
- Up to 100 items can be displayed in the list.

Changing a registered folder

1 Press **[System Settings]**.



2 Press **[Administrator Tools]**.

3 Press **[Address Book Management]**.

4 Check that **[Program / Change]** is selected.

5 Select the user of the registered folder you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

6 Press **[Folder]**.

7 Select **"Connection Type"**.

If you want to specify a folder in an NDS tree, press **[NDS]**. If you want to specify a folder on a NetWare server, press **[Bindery]**.

8 Specify the folder.

To specify a folder, you can either enter the path manually or locate the folder by browsing the network.

9 Press **[Connection Test]** to check the path is set correctly.

10 Press **[OK]**.

11 Press **[Exit]**.

 **Note**

- To change the name, key display and title, see "Changing a Registered Name".

 **Reference**

p.157 "Changing a Registered Name"

Changing NCP settings

To change NCP settings:

- 1** Select the type of connection.
- 2** Press [Change] of path name.
- 3** Enter the name of the path on which the folder is located, and then press [OK].
- 4** Press [Connection Test] to make sure the path is correctly set up.
- 5** When you have made the necessary changes to the information, press [Set].
- 6** Press [Close].

 **Note**

- To specify a folder, enter its path directly or select it using Browser Network.

 **Reference**

p.185 "To locate the folder manually"

p.185 "Using Browse Network to locate the folder"

To change the protocol

- 1** Press [SMB], or [FTP].
- 2** A confirmation message appears. Press [Yes].
Changing the protocol will clear all settings made under the previous protocol.
- 3** Enter each item again.

 **Reference**

p.172 "Registering a Folder"

p.178 "Registering a Folder"

Deleting a Folder

- 1** Press **[System Settings]**.



- 2** Press **[Administrator Tools]**.
- 3** Press **[Address Book Management]**.
- 4** Check that **[Program/Change]** is selected.
- 5** Select a user of the folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

- 6** Press **[Folder]**.
- 7** Press the protocol which is not currently selected.
A confirmation message appears.

- 8** Press **[Yes]**.

- 9** Press **[OK]**.

- 10** **[Exit]**.

 **Note**

- To delete a name entirely, see "Deleting a Registered Name".

 **Reference**

p.158 "Deleting a Registered Name"

Registering Names to a Group

You can register names to a group to enable easy management of e-mail addresses and folders for each group.

To add names to a group, the groups must be registered beforehand.

Important

- When using Scan to Folder function, you cannot send scan files to a group with over 50 folders registered.
- The maximum number of destinations registerable to a group is 500.

Note


- You can set a protection code to prevent unauthorized access to the folders registered in a group. For details, see "Registering a Protection Code".

Reference

p.199 "Registering a Protection Code"


Registering a Group

- 1** Press [System Settings].

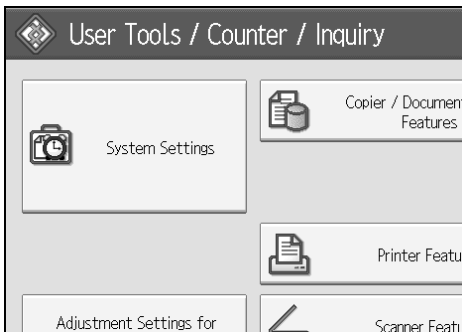

- 2** Press [Administrator Tools].
- 3** Press [Address Book: Program/Change/Delete Group].
- 4** Check that [Program/Change] is selected.
- 5** Press [New Program].

6 Press **[Change]** under **Group Name**.

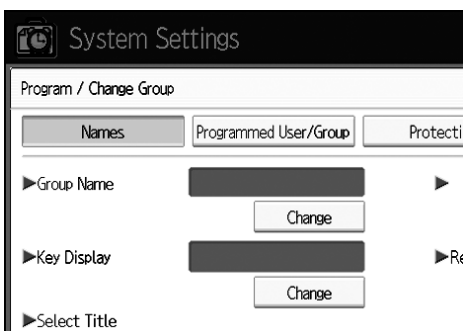

7 Enter the group name, and then press **[OK]**.

The Key Display name is set automatically.

8 Press the title key under **Select Title**, if necessary.

9 When you want to change the key display, press **[Change]** under **Key Display**. Enter the key display, and then press **[OK]**.

10 Press **[OK]**.

Note

- The keys you can select are as follows:
 - **[Freq.]**: Added to the page that is displayed first.
 - **[AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]**... Added to the list of items in the selected title.
- You can select **[Freq.]** and one more page for each title.

Reference

"Entering Text", **About This Machine**

Registering Names to a Group

You can put names that have been registered in the Address Book into a group. When registering new names, you can also register groups at the same time.


1 Press **[System Settings]**.



- 2** Press [Administrator Tools].
- 3** Press [Address Book Management].
- 4** Check that [Program / Change] is selected.
- 5** Select the name to register in a group.


Press the name key, or enter the registered number using the number keys.
You can search by the registered name, user code, folder name, or e-mail address.

- 6** Press [Add to Group].
- 7** Select a group to which you want to add the name to.

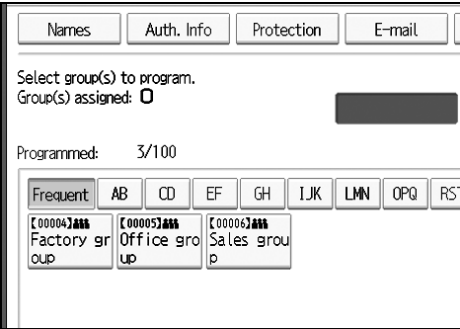

The group key that you have selected becomes highlighted, and the name is added to it.

7

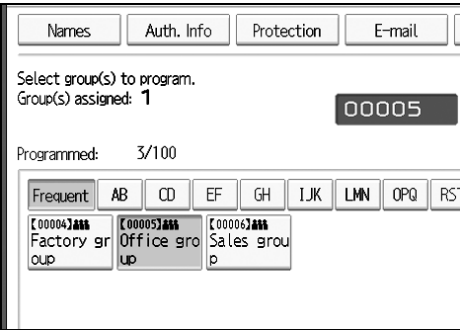

- 8** Press [OK].

Adding a Groupe to Another Group

You can add a group to another group.


- 1** Press **[System Settings]**.




- 2** Press **[Administrator Tools]**.
- 3** Press **[Address Book: Program / Change / Delete Group]**.
- 4** Check that **[Program / Change]** is selected.
- 5** Select the group that you want to put into another group.

Press the group key, or enter the registered number using the number keys.
You can search by the registered name, user code, folder name, or e-mail address.

- 6** Press **[Add to Group]**.

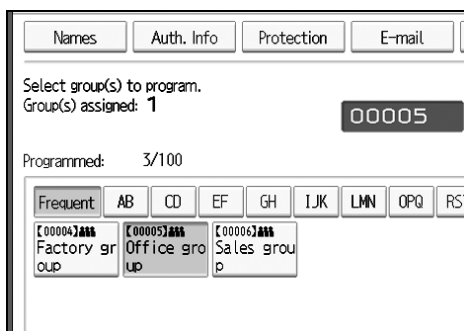7 Select the group which you want to add to.

The group key that you have selected becomes highlighted, and the group is added to it.

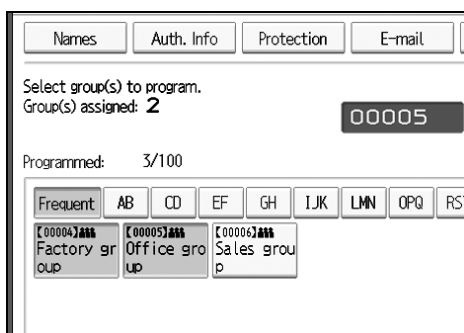**8** Press [OK].

7

Displaying Names Registered in a Group

You can check the names or groups registered in each group.

1 Press [System Settings].**2** Press [Administrator Tools].**3** Press [Address Book: Program / Change / Delete Group].**4** Check that [Program / Change] is selected.

5 Select the group where the members you want to check is egistered.

You can search by the registered name, user code, folder name, or e-mail address.

6 Press [Programmed User/Group].

All the names registered will be displayed.

7 Press [OK].

Removing a Name from a Group

1 Press [System Settings].



2 Press [Administrator Tools].

3 Press [Address Book Management].

4 Check that [Program / Change] is selected.


5 Select the name to remove from a group.

Press the name key, or enter the registered number using the number keys.


You can search by the registered name, user code, folder name, or e-mail address.

6 Press [Add to Group].

- 7** Select the group from which you want to remove the name.

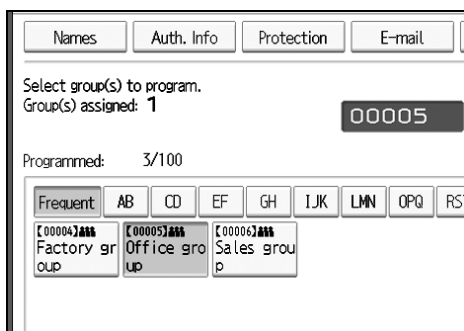

The group key is deselected, and the name is removed from the group.

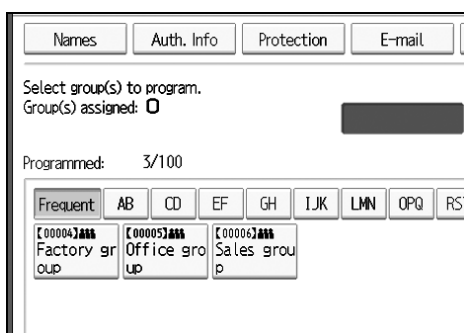

- 8** Press [OK].

7

Deleting a Group Within Another Group

- 1** Press [System Settings].



- 2** Press [Administrator Tools].
- 3** Press [Address Book: Program / Change / Delete Group].
- 4** Check that [Program / Change] is selected.

5 Select the group that you want to delete from.


Press the group key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.


6 Press [Add to Group].

The keys of groups in which the group is registered appear highlighted.

7 Select the group that you want to delete from.

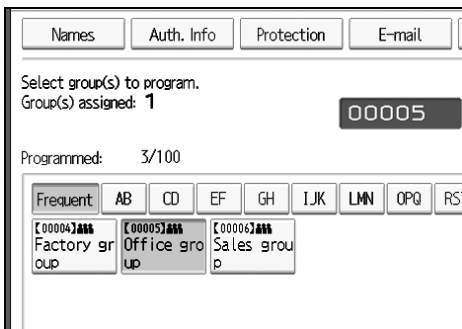

The group key is deselected and the group is deleted from it.

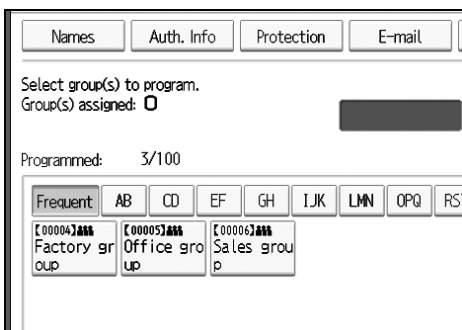

8 Press [OK].

7

Changing a Group Name

1 Press [System Settings].



2 Press [Administrator Tools].


3 Press [Address Book: Program / Change / Delete Group].

4 Check that [Program / Change] is selected.

5 Press the group key you want to change.

You can search by the registered name, user code, folder name, or e-mail address.

6 To change the group name and key display, press [Change] under Group Name or Key Display.

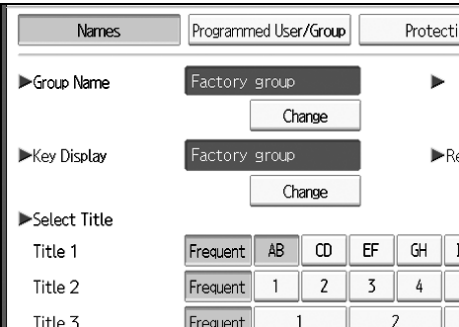

7 Enter the new group name or key display, and then press [OK].

8 To change the title, press the title key under Select Title.

9 To change the registration number, press [Change] under Registration No..

10 Enter the new registration number using the number keys.

11 Press the [#] key.

12 Press [OK].

Deleting a Group

1 Press [System Settings].



2 Press [Administrator Tools].

3 Press [Address Book: Program / Change / Delete Group].

4 Press [Delete].

5 Press [Yes].

6 Press a group key you want to delete.

You can search by the registered name, user code, folder name, or e-mail address.

7 Press [Yes].

Registering a Protection Code

You can stop sender's names or folders being accessed by setting a protection code.

You can use this function to protect the following:


- Folders
You can prevent unauthorized access to folders.
- Sender's names
You can prevent misuse of sender's names.

Reference

p.159 "Registering a User Code"

Registering a Protection Code to a Single User

1 Press [System Settings].

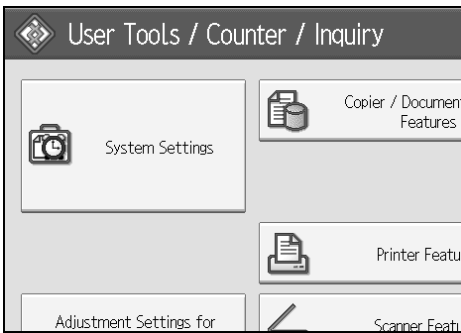

2 Press [Administrator Tools].


3 Press [Address Book Management].

4 Check that [Program / Change] is selected.


5 Select the name whose protection code you want to register.

You can search by the registered name, user code, folder name, or e-mail address.

6 Press **[Protection]**.

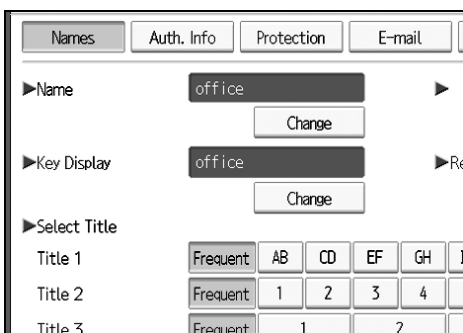

7 Press **[Destination]** or **[Sender]** under Use Name as.

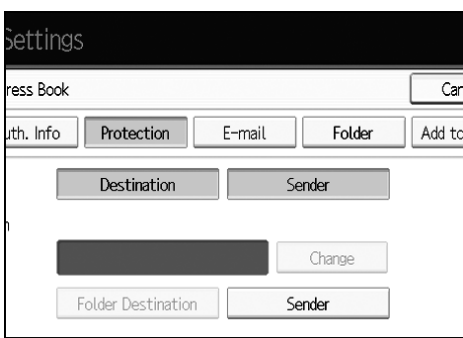

7

Both **[Destination]** and **[Sender]** can be selected at the same time.

8 Press **[Change]** under Protection Code.

9 Enter a protection code using the number keys, and then press **[#]**.

10 Press **[OK]**.


11 Press **[Exit]**.

 **Note**

- You can specify a protection code of up to eight digits. You can also specify "Protection" without specifying a protection code.

Registering a Protection Code to a Group User

- 1** Press [System Settings].

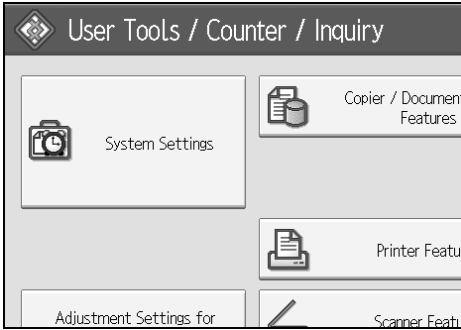

- 2** Press [Administrator Tools].
- 3** Press [Address Book: Program / Change / Delete Group].
- 4** Check that [Program / Change] is selected.
- 5** Press the group key you want to register or enter the registered number using the number keys.
- 6** Press [Protection].
- 7** Press [Folder Destination] under Protection Object.
- 8** Press [Change] under Protection Code.
- 9** Enter a protection code using the number keys, and then press the [#] key.
- 10** Press [OK].
- 11** Press [Exit].

 **Note**

- You can specify a protection code of up to eight digits. You can also specify "Protection" without specifying a protection code.

Registering SMTP and LDAP Authentication

SMTP Authentication

For each user registered in the Address Book, you can register a login user name and login password to be used when accessing an SMTP server.

To use an SMTP server, you need to program it beforehand.

Important

- When [Do not Specify] is selected for SMTP Authentication, the User Name and Password that you have specified in SMTP Authentication of File Transfer settings applies. For details, see "File Transfer".

1 Press [System Settings].



2 Press [Administrator Tools].

3 Press [Address Book Management].

4 Check that [Program / Change] is selected.


5 Press the name you want to register or enter the registered number using the number keys

You can search by the registered name, user code, folder name, or e-mail address.

6 Press [Auth. Info].

7 Press [Specify Other Auth. Info] on the right side of SMTP Authentication.

8 Press **[Change]** under Login User Name.

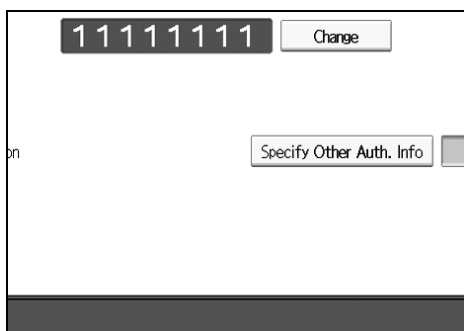

9 Enter the login user name, and then press **[OK]**.

10 Press **[Change]** under Login Password.

11 Enter the password, and then press **[OK]**.

12 Enter the password again to confirm, and then press **[OK]**.

13 **[OK]**.

 **Note**

- To register the name, see "Registering Names".
- You can enter up to 191 characters for the user name.
- When using POP before SMTP Authentication, you can enter up to 63 alphanumeric characters.
- You can enter up to 64 characters for the password.
- To change the SMTP Authentication settings, repeat step **2** to **13**.

 **Reference**

p.156 "Registering Names"

p.10 "Network Settings"

"Entering Text", **About This Machine**

LDAP Authentication

For each user registered in the Address Book, you can register a login user name and login password to be used when accessing an LDAP server.

To use an LDAP server, you need to program it beforehand. For details, see "LDAP Server Settings", Network Guide.

Important

- When **[Do not Specify]** is selected for LDAP Authentication, the User Name and Password that you have specified in Program/Change LDAP Server of Administrator Tools settings applies. For details, see "LDAP Server Settings".
- If there is user authentication in place, check with the administrator.

1 Press [System Settings].



2 Press [Administrator Tools].

3 Press [Address Book Management].

4 Check that [Program / Change] is selected.


You can search by the registered name, user code, folder name, or e-mail address.

5 Press the name you want to register or enter the registered number using the number keys.

6 Press [Auth. Info], and then press [Next].

7 Press [Specify Other Auth. Info] on the right side of LDAP Authentication.

8 Press **[Change]** under Login User Name.

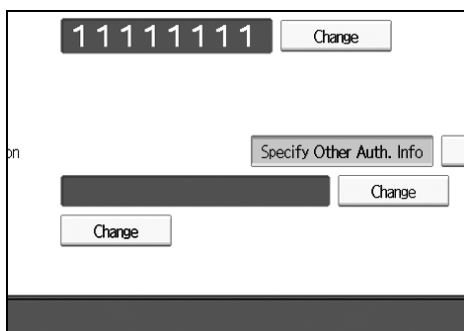

9 Enter the login user name, and then press **[OK]**.

10 Press **[Change]** under Login Password.

11 Enter the password, and then press **[OK]**.

12 Enter the password again to confirm, and then press **[OK]**.

13 Press **[OK]**.

 **Note**

- To register the name, see "Registering Names".
- When **[Do not Specify]** is selected for LDAP Authentication, the User Name and Password that you have specified in Program/Change LDAP Server of Administrator Tools settings applies.
- You can enter up to 128 characters for the user name.
- To change the LDAP Authentication settings, repeat step **2** to **13**.

 **Reference**

p.156 "Registering Names"
 "Entering Text", **About This Machine**


8. Other User Tools

Initial settings allow you switch the language as well as checking the number of printed papers by displaying the counter.

Changing the Display Language

You can change the language used on the display. English is set as default.

1 Press the **[Language Selection]** key.

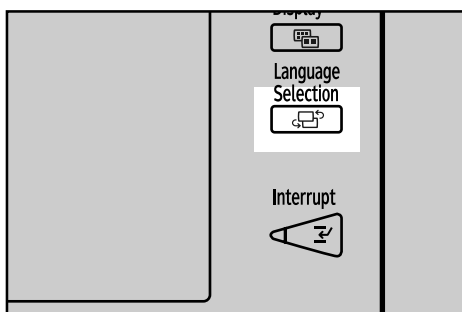

APD015S

Note

- If you want to return the display language to “English”, repeat the step above.

Inquiry

The Inquiry function lets you check the telephone numbers to contact for repairs, or ordering consumables such as toner. Be sure to contact your service engineer to verify the following:

❖ Consumables

- Telephone No. to order
- Toner
- Staple
- Staple (Center)


❖ Machine Maintenance/Repair

- Telephone No.
- Serial No. of Machine

❖ Sales Representative


- Telephone No.

1 Press [Inquiry].

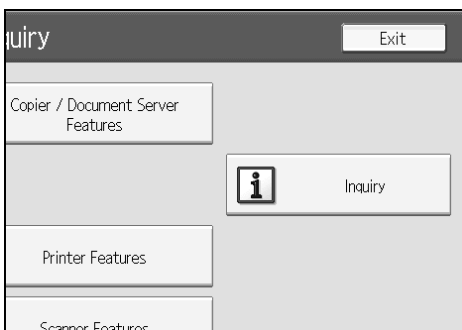

Inquiry information appears.

2 Press [Print Inquiry List].

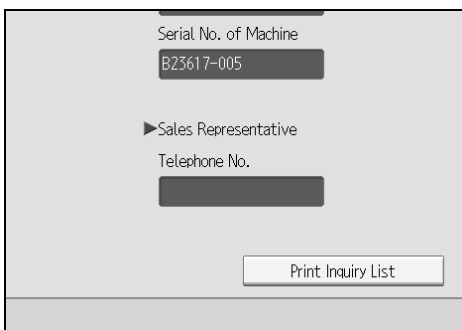

3 Press the **[Start]** key.

The inquiry information list is printed out.

4 Press **[Exit]** twice.


Counter

Displaying the Total Counter


You can display the total counter value used for all functions.

You can also print out a counter data list.

1 Press **[Counter]** key.

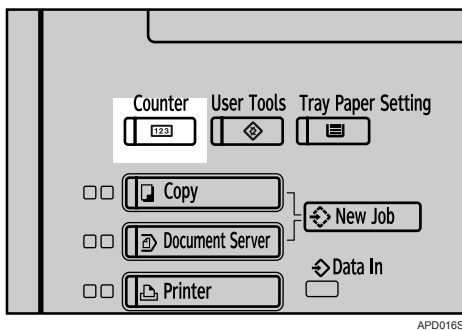

2 To print a counter list, press **[Print Counter List]**.

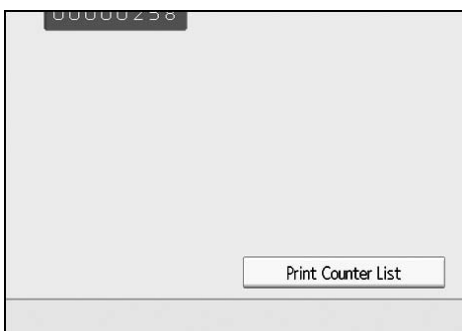

3 Press the **[Start]** key.

A counter list prints out.

4 Press **[Exit]** twice.

Method of Counting

The counter increments “1” for each original sheets. In duplex mode, it counts “2” for front and back of original sheet.

❖ **The counter increments at the functions below:**

- Copying
- Printing
- Scanning
- Test Print (Multiple Lists, Configuration Page, Error Log, Menu List, PCL Configuration/Font Page, PS Configuration/Font Page, PDF Configuration/Font Page, Hex Dump)
- Printing Destination List of Address Book


❖ **The counter does not count at the functions below:**

- Printing Counter List
- Printing Error Report
- Printing in SP Mode
- Printing Inquiry List
- Printing Interface Settings Configuration List
- Cover sheet and Designation sheet, Slip sheet, Separation sheet, without printing

Adjustment Settings for Operators


Changing the Adjustment Settings for Operators

- 1** Press the [User Tools] key.

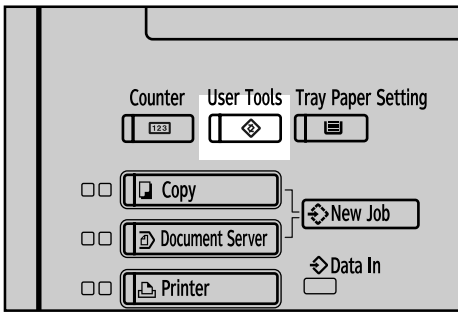

APD014S

- 2** Press [Adjustment Settings for Operators].

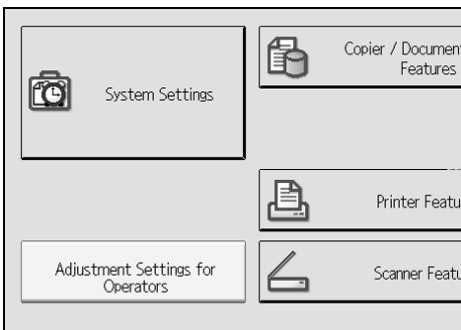

- 3** Select the item that you want to change the value.

- 4** Specify the setting value.

To select the setting value, press the value on the display.

To input the value, use the number keys.

To input a minus value, first press *****, and then enter the number, use the number keys.

- 5** Press [enter].

- 6** Press [Exit] twice.

Setting Values

Feed

❖ Shift Image With Feed

❖ 1-710-001 : Front Side

- Max.: 2 mm
- Min.: -2 mm
- Step: 0.1 mm
- Initial value: 0

❖ 1-710-002 : Back Side

- Max.: 2 mm
- Min.: -2 mm
- Step: 0.1 mm
- Initial value: 0

❖ 1-710-003 : Front Side (Low Speed Mode)

- Max.: 2 mm
- Min.: -2 mm
- Step: 0.1 mm
- Initial value: 0

❖ 1-710-004 : Back Side (Low Speed Mode)

- Max.: 2 mm
- Min.: -2 mm
- Step: 0.1 mm
- Initial value: 0

❖ Shift Image Across Feed

❖ 1-720-001 : Tray 1

- Max: 2 mm
- Min:-2 mm
- Step: 0.1 mm
- Initial value: 0

- ❖ **1-720-002 : Tray 2**
 - Max: 2 mm
 - Min:-2 mm
 - Step: 0.1 mm
 - Initial value: 0
- ❖ **1-720-003 : Tray 3**
 - Max: 2 mm
 - Min:-2 mm
 - Step: 0.1 mm
 - Initial value: 0
- ❖ **1-720-004 : Tray 4 LCT**
 - Max: 2 mm
 - Min:-2 mm
 - Step: 0.1 mm
 - Initial value: 0
- ❖ **1-720-005 : Tray 5 LCT**
 - Max: 2 mm
 - Min:-2 mm
 - Step: 0.1 mm
 - Initial value: 0
- ❖ **1-720-006 : Tray 6 LCT**
 - Max: 2 mm
 - Min:-2 mm
 - Step: 0.1 mm
 - Initial value: 0
- ❖ **1-720-007 : Tray 7 Bypass**
 - Max: 2 mm
 - Min:-2 mm
 - Step: 0.1 mm
 - Initial: value 0
- ❖ **1-720-008 : Duplex**
 - Max: 2 mm
 - Min:-2 mm
 - Step: 0.1 mm
 - Initial: value 0

❖ Set Fusing Temperature**❖ 1-740-001 : Set Fusing Temperature**

- 1: Raise temperature to improve fusing
- 2: Lower temperature to reduce curl

❖ Double-Feed Detection**❖ 1-908-001 : Tray 1**

- 0: Off
- 1: On

❖ 1-908-002 : Tray 2

- 0: Off
- 1: On

❖ 1-908-003 : Tray 3

- 0: Off
- 1: On

❖ 1-908-004 : Tray 4 (LCT Tray 1)

- 0: Off
- 1: On

❖ 1-908-005 : Tray 5 (LCT Tray 2)

- 0: Off
- 1: On

❖ 1-908-006 : Tray 6 (LCT Tray 3)

- 0: Off
- 1: On

❖ 1-908-007 : Tray 7 (Bypass Tray)

- 0: Off
- 1: On

❖ 1-908-008 : After Double-Feed Detection

❖ CIS Img Pos Adj: Feed Setting**❖ 1-911-001 : Tray 1**

- 0: Off
- 1: On

❖ 1-911-002 : Tray 2

- 0: Off
- 1: On

❖ 1-911-003 : Tray 3

- 0: Off
- 1: On

❖ 1-911-004 : Tray 4 (LCT Tray 1)

- 0: Off
- 1: On

❖ 1-911-005 : Tray 5 (LCT Tray 2)

- 0: Off
- 1: On

❖ 1-911-006 : Tray 6 (LCT Tray 3)

- 0: Off
- 1: On

❖ 1-911-007 : Tray 7 (Bypass Tray)

- 0: Off
- 1: On

❖ 1-911-008 : Duplex Tray

- 0: Off
- 1: On

Drum

❖ Magnification Adjustment Across Feed

❖ 2-750-001 : Copy Image: Front Side

- Max: 0.3 %
- Min: -0.3 %
- Step: 0.1 %
- Initial value: 0 %

❖ 2-750-002 : Copy Image: Back Side

- Max: 0.3 %
- Min: -0.3 %
- Step: 0.1 %
- Initial value: 0 %

❖ 2-750-003 : Print Image: Front Side

- Max: 0.3 %
- Min: -0.3 %
- Step: 0.1 %
- Initial value: 0 %

❖ 2-750-004 : Print Image: Back Side

- Max: 0.3 %
- Min: -0.3 %
- Step: 0.1 %
- Initial value: 0 %

❖ Magnification Adjustment With Feed

❖ 2-760-001 : Magnification Adjustment With Feed

- Max: 0.3 %
- Min: -0.3 %
- Step: 0.1 %
- Initial value: 0 %

❖ Temp / Humidity Display**❖ 2-770-001 : Internal Temperature**

- Max: 60 °C
- Min: -20 °C
- Step: 1 °C
- Initial value: –

❖ 2-770-002 : Internal Humidity

- Max: 100 %
- Min: 0 %
- Step: 1 %
- Initial value: –

Process

❖ Select Test Pattern**❖ 3-740-001 : Select Test Pattern**

- Trim Pattern

❖ Reset to Defaults**❖ 3-740-002 : Reset to Defaults**

Peripherals

❖ Staple Position Adjustment**❖ 6-700-001 : A3-Lengthwise**

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ 6-700-002 : B4 SEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ 6-700-003 : A4 SEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ 6-700-004 : A4 LEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.1 mm
- Initial value: 0 mm

❖ 6-700-005 : B5 SEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.1 mm
- Initial value: 0 mm

❖ 6-700-006 : B5 LEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.1 mm
- Initial value: 0 mm

❖ 6-700-007 : DLT SEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ 6-700-008 : LG SEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ 6-700-009 : LT SEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ 6-700-010 : LT LEF

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ 6-700-011 : Other

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ Adjust Punch Hole : With Feed**❖ 6-705-002 : 3-Hole: NA**

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ 6-705-005 : 2-Hole: NA

- Max: 2 mm
- Min: -2 mm
- Step: 0.5 mm
- Initial value: 0 mm

❖ Adjust Booklet Stapling Position**❖ 6-730-001 : A3 SEF**

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-730-002 : B4 SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-730-003 : A4 SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-730-004 : B5 SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-730-005 : 12 x 18 SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-730-006 : DLT SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-730-007 : LG SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-730-008 : LT SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-730-009 : Custom Size

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ Adjust Booklet Fold Position**❖ 6-735-001 : A3 SEF**

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-735-002 : B4 SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-735-003 : A4 SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-735-004 : B5 SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-735-005 : 12 x 18 SEF

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ 6-735-006 : DLT

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ **6-735-007 : LG**

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm







❖ **6-735-008 : LT SEF**

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

❖ **6-735-009 : Custom Size**

- Max: 3.0 mm
- Min: -3.0 mm
- Step: 0.2 mm
- Initial value: 0 mm

Specifications for the Main Unit

- ❖ **Configuration:**
Console
- ❖ **Photosensitivity type:**
OPC drum (Ø100)
- ❖ **Original scanning:**
One-dimensional solid scanning system through CCD
- ❖ **Copy process:**
Dry electrostatic transfer system
- ❖ **Development:**
Dry two-component magnetic brush development system
- ❖ **Fusing:**
Heating roll pressure system
- ❖ **Resolution:**
1200 dpi
- ❖ **Exposure glass:**
Stationary original exposure type
- ❖ **Original reference position:**
Rear left corner
- ❖ **Warm-up time:**
Less than 300 seconds (23°C)
- ❖ **Originals:**
Sheet/Book/Objects
- ❖ **Original size:**
A3  - A5  , 11" × 17"  - 5¹/₂" × 8¹/₂"  
- ❖ **Copy paper size:**
13" × 18" – Postcard (depending on the paper trays)

❖ **Copy paper weight:**

- Tray 1 - Tray 3 : 52 - 216 g/m², 16 lb. Bond - 80 lb. Cover
- Tray 4, Tray 5 (LCIT RT5000), Tray 4 - Tray 6 (LCIT RT5010) : 52 - 216 g/m², 16 lb. Bond - 80 lb. Cover
- Tray 6 (LCIT RT5000): 52 - 163 g/m², 16 lb. Bond - 60 lb. Bond
- Tray 7 (Multi Bypass Tray BY5000): 52 - 216 g/m², 16 lb. Bond - 80 lb. Cover

🔍 **Reference**

p.235 "LCIT RT5000"

p.236 "LCIT RT5010"







❖ **Non-reproduction area:**

- Leading edge: More than 4 ± 2 mm
- Trailing edge: More than $2 + 2/-1.7$ mm
- Left edge: More than 2 ± 1.5 mm
- Right edge: More than 2 ± 1.5 mm

❖ **First copy time:**

- Type 1
 - 3.5 seconds (for Face Up)
 - 5 seconds (for Face Down)
- Type 2
 - 3.2 seconds (for Face Up)
 - 4.5 seconds (for Face Down)
- Type 3
 - 3 seconds (for Face Up)
 - 4 seconds (for Face Down)

❖ **Copying speed:**

- Type 1
 - 90 copies/minute (A4 , 8¹/₂" × 11" )
- Type 2
 - 110 copies/minute (A4 , 8¹/₂" × 11" )
- Type 3
 - 135 copies/minute (A4 , 8¹/₂" × 11" )

❖ **Reproduction ratio:**

Preset reproduction ratios:

- Enlargement
Metric version: 400 %, 200 %, 141 %, 122 %, 115 %
Inch version: 400 %, 200 %, 155 %, 129 %, 121 %
- Full Size
Metric version: 100 %
Inch version: 100 %
- Reduction
Metric version: 93 %, 82 %, 75 %, 71 %, 65 %, 50 %, 25 %
Inch version: 93 %, 85 %, 78 %, 73 %, 65 %, 50 %, 25 %
- Zoom
From 25 % to 400 % in 1 % steps

❖ **Maximum number of continuous copy sets**

1 – 9999 copies

❖ **Copy paper capacity:**

- Tray 1 (Tandem tray) : 2,000 sheets (1,000 sheets × 2) (80 g/m², 20 lb. Bond)
- Tray 2 (550-sheet tray) : 500 sheets (80 g/m², 20 lb. Bond)
- Tray 3 (550-sheet tray) : 500 sheets (80 g/m², 20 lb. Bond)
- Tray 4 (LCIT RT5000): 1,000 sheets (80 g/m², 20 lb. Bond)
- Tray 4 (LCIT RT5010): 1,000 sheets (80 g/m², 20 lb. Bond)
- Tray 5 (LCIT RT5000): 1,000 sheets (80 g/m², 20 lb. Bond)
- Tray 5 (LCIT RT5010): 2,000 sheets (80 g/m², 20 lb. Bond)
- Tray 6 (LCIT RT5000): 2,550 sheets (80 g/m², 20 lb. Bond)
- Tray 6 (LCIT RT5010): 1,000 sheets (80 g/m², 20 lb. Bond)
- Tray 7: 500 sheets (80 g/m², 20 lb. Bond)

❖ **Power consumption (Type 1: 90 copies/minute model):**

	Main machine only	Full system ^{*1}
Warm-up	2210W	2290W
Stand-by	370W	420W
Copying	1680W	1830W
Maximum	2940W	3060W

^{*1} Main machine with Finisher SR5000, Booklet Finisher BK5000, A3 LCIT, Multi bypass tray (Tray 7), ADF, interposer and Z-folding Unit.

❖ **Power consumption (Type 2: 110 copies/minute model):**

	Main machine only	Full system ^{*1}
Warm-up	2190W	2250W
Stand-by	400W	460W
Copying	1890W	2110W
Maximum	2960W	3080W

^{*1} Main machine with Finisher SR5000, Booklet Finisher BK5000, A3 LCIT, Multi bypass tray (Tray 7), ADF, interposer and Z-folding Unit.

❖ **Power consumption (Type 3: 135 copies/minute model):**

	Main machine only	Full system ^{*1}
Warm-up	2240W	2310W
Stand-by	430W	480W
Copying	2160W	2340W
Maximum	3730W	3850W

^{*1} Main machine with Finisher SR5000, Booklet Finisher BK5000, A3 LCIT, Multi bypass tray (Tray 7), ADF, interposer and Z-folding Unit.

❖ **Dimensions (W × D × H up to exposure glass):**

870 × 858.5 × 1,000 mm, 34.23" × 33.78" × 39.34"

❖ **Space for main machine (W × D):**

- 1,202 × 858.5 mm, 47.3" × 33.78" (ADF external extender is not used, optional output tray is installed.)
- 2,218 × 858.5 mm, 87.3" × 33.78" (ADF external extender is used for larger size originals, optional finisher proof tray is installed.)

❖ **Noise emission ^{*1} (Type 1):**

Sound power level

	Main machine only	Complete system ^{*3}
Copying	less than 74 dB (A)	less than 78 dB (A)
Stand-by	less than 60 dB (A)	less than 64 dB (A)

Sound pressure level ^{*2}

	Main machine only	Complete system ^{*3}
Copying	less than 68 dB (A)	–
Stand-by	less than 54 dB (A)	–

^{*1} The above measurements are ISO 7779 actual values.

^{*2} Measured at the position of the bystander/operator. During printing.

^{*3} Main machine with full options.

❖ **Noise emission ^{*1} (Type 2):**

Sound power level

	Main machine only	Complete system ^{*3}
Copying	less than 76 dB (A)	less than 80 dB (A)
Stand-by	less than 66 dB (A)	less than 70 dB (A)

Sound pressure level ^{*2}

	Main machine only	Complete system ^{*3}
Copying	less than 70 dB (A)	–
Stand-by	less than 60 dB (A)	–

^{*1} The above measurements are ISO 7779 actual values.^{*2} Measured at the position of the bystander/operator. During printing.^{*3} Main machine with full options.❖ **Noise emission ^{*1} (Type 3):**

Sound power level

	Main machine only	Complete system ^{*3}
Copying	less than 79 dB (A)	less than 83 dB (A)
Stand-by	less than 74 dB (A)	less than 78 dB (A)

Sound pressure level ^{*2}

	Main machine only	Complete system ^{*3}
Copying	less than 73 dB (A)	–
Stand-by	less than 68 dB (A)	–

^{*1} The above measurements are ISO 7779 actual values.^{*2} Measured at the position of the bystander/operator. During printing.^{*3} Main machine with full options.❖ **Weight:**

Type 1, 2: Approx. 299kg, 659.2 lb. (main machine with the ADF)

Type 3: Approx. 305kg, 672.4 lb. (main machine with the ADF)

Document Server

❖ HDD:160 GB × 2 ^{*1}**❖ HDD (Document Server):**45 GB ^{*1}**❖ Capacity:**

- Copy: Approx. 3,000 sheets (ITUT-No.4 chart)
- Batch mode: Approx. 3,000 sheets (ITUT-No.4 chart)
- Printer: Approx. 15,000 sheets (600 dpi)
- Scanner: Approx. 3,000 sheets (200 dpi/Text) (ITUT-No.4 chart) ^{*2}

**Note**

- If you need to change the capacity of the document server, contact your service representative.

❖ Maximum number of stored documents:

3,000

❖ Maximum pages of stored documents:

15,000 sheets

❖ Maximum number of pages per document:

2,000

❖ Capacity (Memory Sorting):6.75 GB (A4/8¹/₂" × 11" : Approx. 333 sheets-3000 sheets at maximum) ^{*3}**❖ Capacity (Others):**

10.0 GB

^{*1} For hard drives, GB means 1 billion bytes. (Total hard drive accessible capacity may vary depending on operating environment.)

^{*2} Scanning Condition: ITUT-No.4 chart/200 dpi/Text/A4/MMR







^{*3} The capacity will change when the multiple functions are used.

Auto Document Feeder

❖ Mode:

ADF mode, Batch mode, SADF mode, Mixed Sizes mode, Thin mode

❖ Original size:

- A3  - A5  
- 11" × 17"  - 8¹/₂" × 5¹/₂"  



❖ Original weight:

- 1-sided originals: 52 - 157 g/m² (16 lb. Bond - 58 lb. Cover)
- 2-sided originals: 52 - 128 g/m² (16 lb. Bond - 34 lb. Bond) (Duplex)
- Thin paper mode: 40 - 156 g/m² (16 lb. Bond - 57 lb. Cover)

❖ Number of originals that can be set:

100 sheets (80 g/m², 20 lb. Bond) of less than 12 mm, 0.5"

❖ Copying speed:

80 copies/minute (A4 , 8¹/₂" × 11" , 1 to 1 copying)

❖ Power Source:

Supplied from the main machine.

 Note

-  Specifications are subject to change without notice.

Specifications for Options

Finisher SR5000

Finisher Upper Tray:

❖ Paper size:

A3, B4, A4, B5, A5, 11" × 17", 8¹/₂" × 14", 8¹/₂" × 11", 5¹/₂" × 8¹/₂", 12" × 18"

❖ Paper weight:

52 - 216 g/m², 16 lb. Bond - 80 lb. Cover

❖ Stack capacity:

- 500 sheets (A4, B5, A5, 8¹/₂" × 11", 5¹/₂" × 8¹/₂) (80 g/m², 20 lb. Bond)
- 250 sheets (A3, B4, 11" × 17", 8¹/₂" × 14", 12" × 18") (80 g/m², 20 lb. Bond)

Finisher Shift Tray:

❖ Paper size:

A3, B4, A4, B5, A5, 11" × 17", 8¹/₂" × 14", 8¹/₂" × 11", 5¹/₂" × 8¹/₂", 12" × 18"

❖ Paper weight:

52 - 300 g/m², 16 lb. Bond - 110 lb. Cover

❖ Stack capacity:

- 3,000 sheets (A4, B5, 8¹/₂" × 11") (80 g/m², 20 lb. Bond)
- 1,500 sheets (A3, B4, A4, B5, 11" × 17", 8¹/₂" × 14", 8¹/₂" × 11", 12" × 18") (80 g/m², 20 lb. Bond)
- 500 sheets (A5, 5¹/₂" × 8¹/₂") (80 g/m², 20 lb. Bond)
- 100 sheets (A5, 5¹/₂" × 8¹/₂") (80 g/m², 20 lb. Bond)

❖ Staple paper size:

A3, B4, A4, B5, 11" × 17", 8¹/₂" × 14", 8¹/₂" × 11"















❖ Staple paper weight:

64 - 80 g/m², 17 lb. Bond - 21 lb. Bond

❖ Staple capacity:

- 100 sheets (A4, B5, 8¹/₂" × 11") (80 g/m², 20 lb. Bond)
- 50 sheets (A3, B4, 11" × 17", 8¹/₂" × 14") (80 g/m², 20 lb. Bond)

❖ **Stack capacity after stapling**

- 200–30 sets (10–100 sheets) (A4 , B5 , 8¹/₂" × 11" ) (80 g/m², 20 lb. Bond)
- 150 sets (2–9 sheets) (A4 , B5 , 8¹/₂" × 11" ) (80 g/m², 20 lb. Bond)
- 150–30 sets (10–50 sheets) (A3 , B4 , 11" × 17" , 8¹/₂" × 14" ) (80 g/m², 20 lb. Bond)
- 150 sets (2–9 sheets) (A3 , B4 , 11" × 17" , 8¹/₂" × 14" ) (80 g/m², 20 lb. Bond)

❖ **Staple position:**

4 position (Top, Top Slant, Bottom, 2 Staples)

❖ **Power consumption:**

Approx. 120 W (supplied from the main machine)

❖ **Dimensions (W × D × H):**

800 × 730 × 980 mm, 31.5" × 28.7" × 38.6"

❖ **Weight:**

Approx. 75 kg, 163.3 lb.









 **Note**

- Specifications are subject to change without notice.

Booklet Finisher BK5000

To use Booklet Finisher BK5000, Finisher SR5000 is required.

❖ **Saddle stitch paper size:**

A3 , B4 , A4 , B5 , 12" × 18" , 11" × 17" , 8¹/₂" × 14" , 8¹/₂" × 11" 

❖ **Saddle stitch paper weight:**

64 - 90 g/m², 17 lb. Bond - 24 lb. Bond

❖ **Saddle stitch capacity:**

Max. 15 sheets (80 g/m², 20 lb. Bond)

❖ **Stack capacity after Saddle stitching**

- 30 sets (2 - 5 sheets) (80 g/m², 20 lb. Bond)
- 15 sets (6 - 10 sheets) (80 g/m², 20 lb. Bond)
- 10 sets (11–15 sheets) (80 g/m², 20 lb. Bond)

❖ **Saddle stitch position:**

center 2 position

❖ **Power consumption:**

Approx. 100 W (power is supplied from the mainframe)

❖ **Dimensions (W × D × H):**

600 × 730 × 980 mm, 23.6" × 28.7" × 38.6"

❖ **Weight:**

Approx. 70 kg, 152.4 lb.

 **Note** Specifications are subject to change without notice.

Cover Interposer Tray CI5000

To use the Cover Interposer Tray CI5000, Finisher SR5000 or Booklet Finisher BK5000 is required.

❖ **Paper size:**

- Width: 13" - A5 / 5¹/₂" × 8¹/₂"
- Length: A5 / 5¹/₂" × 8¹/₂" - 19"

❖ **Paper weight:**64 - 216 g/m², 17 lb. Bond - 80 lb. Cover❖ **Paper capacity:**200 sheets (80 g/m², 20 lb. Bond) × 2❖ **Power consumption (Max):**

Approx. 95 W (supplied from the main machine)

❖ **Dimensions (W × D × H):**

543 × 730 × 1270 mm, 21.3" × 28.7" × 50"

❖ **Weight:**

Approx. 45 kg, 98.0 lb.

 **Note** Specifications are subject to change without notice.

Punch Unit PU5000

To use Punch Unit PU5000, Finisher SR5000 or Booklet Finisher BK5000 is required.

❖ **Paper size:**

- 2 holes
 - : A3 - A6, 11" × 17" - 5¹/₂" × 8¹/₂"
 - : A4 - A5, 8¹/₂" × 11", 5¹/₂" × 8¹/₂"
- 3 holes
 - : A3, B4, 11" × 17"
 - : A4, B5, 8¹/₂" × 11"

❖ **Paper weight:**

52 - 163 g/m², 16 lb. Bond - 40 lb. Bond

- 2 holes
52 - 163 g/m², 16 lb. Bond - 40 lb. Bond
- 3 holes
52 - 163 g/m², 16 lb. Bond - 40 lb. Bond











 **Note**

Specifications are subject to change without notice.

Z-folding Unit ZF4000

To use Z-folding Unit ZF4000, Booklet Finisher BK5000 is required.

❖ **Paper size:**

A3 , B4JIS , A4  , B5  , 11" × 17" , 8¹/₂" × 14" , 8¹/₂" × 11"  

❖ **Paper weight:**

64 – 80 g/m², 17 lb. Bond - 21 lb. Bond

❖ **Power consumption**

Maximum. 100 W (a separate power source is required)

❖ **Dimensions (W × D × H):**

177 × 620 × 960 mm, 6.9" × 24.4" × 37.8"

❖ **Weight:**

Approx. 55 kg, 121.3 lb.








 **Note**

Specifications are subject to change without notice.

LCIT RT5000

A4, 8¹/₂" × 11" Large Capacity Tray

❖ **Paper size:**

A4 , B5 JIS , A5  , 8¹/₂" × 11" , 5¹/₂" × 8¹/₂"  

❖ **Paper weight:**

Tray 4, 5: 52 – 216 g/m², 16 lb. Bond – 80 lb. Cover
Tray 6: 52 – 163 g/m², 16 lb. Bond – 60 lb. Bond

❖ **Paper capacity:**

Tray 4, 5: 1,000 sheets (80 g/m², 20 lb. Bond)
Tray 6: 2,550 sheets (80 g/m², 20 lb. Bond)
Total 4,550 sheets (80 g/m², 20 lb. Bond)

❖ **Power consumption**

Maximum. 135 W (supplied from the main machine)

❖ **Dimensions (W × D × H, option unit):**

540 × 730 × 980 mm, 21.3" × 28.8" × 38.6"

❖ **Weight:**

Approx. 87 kg (192 lb.) or less

 **Note**

Specifications are subject to change without notice.

LCIT RT5010

A3, 11" × 17" Large Capacity Tray

❖ **Paper size:**

Length: A5 / 8¹/₂" × 5¹/₂" – 19"

Width: A5 / 8¹/₂" × 5¹/₂" – 13", 100 mm width with the special side fence

❖ **Paper weight:**

Tray 4 – Tray 6: 52 – 216 g/m², 16 lb. Bond – 80 lb. Cover

❖ **Paper capacity:**

Tray 4, 6: 1,000 sheets (80 g/m², 20 lb. Bond)

Tray 5: 2,000 sheets (80 g/m², 20 lb. Bond)

Total 4,000 sheets (80 g/m², 20 lb. Bond)

❖ **Power consumption**

Maximum. 135 W (supplied from the main machine)

❖ **Dimensions (W × D × H, option unit):**

880 × 730 × 980 mm, 21.3" × 28.8" × 38.6"

❖ **Weight:**

Approx. 163 kg, 359.5 lb.



 **Note**

Specifications are subject to change without notice.

Multi Bypass Tray BY5000 (Tray 7)

❖ **Paper size:**

Width: 100 mm – 13"

Length: A5  / 8¹/₂" × 5¹/₂"  – 19"

❖ **Paper weight:**

52 - 216 g / m², 16 lb. Bond - 80 lb. Cover

❖ **Paper capacity:**

500 sheets (80 g/m², 20 lb. Bond)

❖ **Power consumption:**

Maximum. 75 W (supplied from the main machine)

❖ **Dimensions (W × D × H):**

702 × 556 × 202 mm, 27.6" × 21.9" × 8.0"

❖ **Weight:**

Approx. 18 kg (39.7 lb.) or less

 **Note**

Specifications are subject to change without notice.

Others

❖ **A3 / 11" × 17" Tray Unit TK5000**

You can load A3  or 11" × 17"  paper in tray 1 using this unit.

❖ **Copy Connector Type 3260**

You can utilize the connect copy function bridging two machines with the Copy Connector Type 3260.

❖ **Data OverWriteSecurity Unit F**

The Data OverWriteSecurity Unit F overwrites the data that remains on the hard disk, automatically.

Information about Installed Software

expat

- The software including controller, etc. (hereinafter "software") installed on this product uses the expat under the conditions mentioned below.
- The product manufacturer provides warranty and support to the software of the product including the expat, and the product manufacturer makes the initial developer and copyright holder of the expat, free from these obligations.
- Information relating to the expat is available at:
<http://expat.sourceforge.net/>

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Centre, Ltd. and Clark Cooper.

Copyright © 2001, 2002 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

NetBSD

1. Copyright Notice of NetBSD

For all users to use this product:

This product contains NetBSD operating system:

For the most part, the software constituting the NetBSD operating system is not in the public domain; its authors retain their copyright.

The following text shows the copyright notice used for many of the NetBSD source code. For exact copyright notice applicable for each of the files/binaries, the source code tree must be consulted.

A full source code can be found at <http://www.netbsd.org/>.

Copyright © 1999, 2000 The NetBSD Foundation, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- ① Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- ② Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- ③ All advertising materials mentioning features or use of this software must display the following acknowledgment:
This product includes software developed by The NetBSD Foundation, Inc. and its contributors.
- ④ Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

2. Authors Name List

All product names mentioned herein are trademarks of their respective owners. The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Jonathan R. Stone for the NetBSD Project.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Manuel Bouyer.
- This product includes software developed by Charles Hannum.
- This product includes software developed by Charles M. Hannum.
- This product includes software developed by Christopher G. Demetriou.
- This product includes software developed by TooLs GmbH.
- This product includes software developed by Terrence R. Lambert.
- This product includes software developed by Adam Glass and Charles Hannum.
- This product includes software developed by Theo de Raadt.
- This product includes software developed by Jonathan Stone and Jason R. Thorpe for the NetBSD Project.
- This product includes software developed by the University of California, Lawrence Berkeley Laboratory and its contributors.
- This product includes software developed by Christos Zoulas.
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.
- This product includes software developed by Paul Kranenburg.
- This product includes software developed by Adam Glass.
- This product includes software developed by Jonathan Stone.
- This product includes software developed by Jonathan Stone for the NetBSD Project.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by Frank van der Linden for the NetBSD Project.
- This product includes software developed for the NetBSD Project by Frank van der Linden
- This product includes software developed for the NetBSD Project by Jason R. Thorpe.
- The software was developed by the University of California, Berkeley.
- This product includes software developed by Chris Provenzano, the University of California, Berkeley, and contributors.

Sablotron

Sablotron (Version 0.82) Copyright © 2000 Ginger Alliance Ltd. All Rights Reserved

- a) The application software installed on this product includes the Sablotron software Version 0.82 (hereinafter, "Sablotron 0.82"), with modifications made by the product manufacturer. The original code of the Sablotron 0.82 is provided by Ginger Alliance Ltd., the initial developer, and the modified code of the Sablotron 0.82 has been derived from such original code provided by Ginger Alliance Ltd.
- b) The product manufacturer provides warranty and support to the application software of this product including the Sablotron 0.82 as modified, and the product manufacturer makes Ginger Alliance Ltd., the initial developer of the Sablotron 0.82, free from these obligations.
- c) The Sablotron 0.82 and the modifications thereof are made available under the terms of Mozilla Public License Version 1.1 (hereinafter, "MPL 1.1"), and the application software of this product constitutes the "Larger Work" as defined in MPL 1.1. The application software of this product except for the Sablotron 0.82 as modified is licensed by the product manufacturer under separate agreement(s).
- d) The source code of the modified code of the Sablotron 0.82 is available at: <http://support-download.com/services/device/sablot/notice082.html>
- e) The source code of the Sablotron software is available at: <http://www.ginger-all.com>
- f) MPL 1.1 is available at: <http://www.mozilla.org/MPL/MPL-1.1.html>

JPEG LIBRARY

- The software installed on this product is based in part on the work of the Independent JPEG Group.

SASL

CMU libsasl

Tim Martin

Rob Earhart

Rob Siemborski

Copyright (c) 2001 Carnegie Mellon University. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- ① Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- ② Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- ③ The name "Carnegie Mellon University" must not be used to endorse or promote products derived from this software without prior written permission. For permission or any other legal details, please contact:

Office of Technology Transfer
Carnegie Mellon University
5000 Forbes Avenue
Pittsburgh, PA 15213-3890
(412) 268-4387, fax: (412) 268-7395
tech-transfer@andrew.cmu.edu

- ④ Redistributions of any form whatsoever must retain the following acknowledgment:
"This product includes software developed by Computing Services at Carnegie Mellon University (<http://www.cmu.edu/computing/>)."

CARNEGIE MELLON UNIVERSITY DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL CARNEGIE MELLON UNIVERSITY BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

MD4

Copyright (C) 1990-2, RSA Data Security, Inc. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

MD5

Copyright (C) 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

Samba(Ver 3.0.4)

For SMB transmission, this machine uses Samba ver 3.0.4 (hereinafter referred to as Samba 3.0.4).

Copyright © Andrew Tridgell 1994-1998

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.

 **Note**

- The source code for SMB transmission by this machine can be downloaded from the following website:

<http://support-download.com/services/scbs>

RSA BSAFE®



9

- This product includes RSA BSAFE® cryptographic or security protocol software from RSA Security Inc.
- RSA and BSAFE are registered trademarks of RSA Security Inc. in the United States and/or other countries.
- RSA Security Inc. All rights reserved.

Open SSL

Copyright (c) 1998-2004 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com).

The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

9

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

Open SSH

The licences which components of this software fall under are as follows. First, we will summarize and say that all components are under a BSD licence, or a licence more free than that.

OpenSSH contains no GPL code.

1)

Copyright (c) 1995 Tatu Ylonen <ylo@cs.hut.fi>, Espoo, Finland All rights reserved

As far as I am concerned, the code I have written for this software can be used freely for any purpose. Any derived versions of this software must be clearly marked as such, and if the derived work is incompatible with the protocol description in the RFC file, it must be called by a name other than "ssh" or "Secure Shell".

[Tatu continues]

However, I am not implying to give any licenses to any patents or copyrights held by third parties, and the software includes parts that are not under my direct control. As far as I know, all included source code is used in accordance with the relevant license agreements and can be used freely for any purpose (the GNU license being the most restrictive); see below for details.

[However, none of that term is relevant at this point in time. All of these restrictively licenced software components which he talks about have been removed from OpenSSH, i.e.,

- RSA is no longer included, found in the OpenSSL library
- IDEA is no longer included, its use is deprecated
- DES is now external, in the OpenSSL library
- GMP is no longer used, and instead we call BN code from OpenSSL
- Zlib is now external, in a library
- The make-ssh-known-hosts script is no longer included
- TSS has been removed
- MD5 is now external, in the OpenSSL library
- RC4 support has been replaced with ARC4 support from OpenSSL
- Blowfish is now external, in the OpenSSL library

[The licence continues]

Note that any information and cryptographic algorithms used in this software are publicly available on the Internet and at any major bookstore, scientific library, and patent office worldwide. More information can be found e.g. at "<http://www.cs.hut.fi/crypto>".

The legal status of this program is some combination of all these permissions and restrictions. Use only at your own responsibility. You will be responsible for any legal consequences yourself; I am not making any claims whether possessing or using this is legal or not in your country, and I am not taking any responsibility on your behalf.

9

NO WARRANTY

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

2)

The 32-bit CRC compensation attack detector in deattack.c was contributed by CORE SDI S.A. under a BSD-style license.

Cryptographic attack detector for ssh - source code

Copyright (c) 1998 CORE SDI S.A., Buenos Aires, Argentina.

All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that this copyright notice is retained.

THIS SOFTWARE IS PROVIDED "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES ARE DISCLAIMED. IN NO EVENT SHALL CORE SDI S.A. BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OR MISUSE OF THIS SOFTWARE.

Ariel Futoransky <futo@core-sdi.com>

<<http://www.core-sdi.com>>

3)

One component of the ssh source code is under a 3-clause BSD license, held by the University of California, since we pulled these parts from original Berkeley code.

Copyright (c) 1983, 1990, 1992, 1993, 1995

The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

4)

Remaining components of the software are provided under a standard 2-term BSD licence with the following names as copyright holders:

Markus Friedl
Theo de Raadt
Niels Provos
Dug Song
Kevin Steves
Daniel Kouril
Wesley Griffin
Per Allansson
Jason Downs
Solar Designer
Todd C. Miller

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

5)

Portable OpenSSH contains the following additional licenses:

c) Compatibility code (openbsd-compat)

Apart from the previously mentioned licenses, various pieces of code in the openbsd-compat/ subdirectory are licensed as follows:

Some code is licensed under a 3-term BSD license, to the following copyright holders:

Todd C. Miller

Theo de Raadt

Damien Miller

Eric P. Allman

The Regents of the University of California

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Open LDAP

The OpenLDAP Public License Version 2.8, 17 August 2003

Redistribution and use of this software and associated documentation ("Software"), with or without modification, are permitted provided that the following conditions are met:

1. Redistributions in source form must retain copyright statements and notices,
2. Redistributions in binary form must reproduce applicable copyright statements and notices, this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution, and
3. Redistributions must contain a verbatim copy of this document.

The OpenLDAP Foundation may revise this license from time to time. Each revision is distinguished by a version number. You may use this Software under terms of this license revision or under the terms of any subsequent revision of the license.

THIS SOFTWARE IS PROVIDED BY THE OPENLDAP FOUNDATION AND ITS CONTRIBUTORS ``AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENLDAP FOUNDATION, ITS CONTRIBUTORS, OR THE AUTHOR(S) OR OWNER(S) OF THE SOFTWARE BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The names of the authors and copyright holders must not be used in advertising or otherwise to promote the sale, use or other dealing in this Software without specific, written prior permission. Title to copyright in this Software shall at all times remain with copyright holders.

OpenLDAP is a registered trademark of the OpenLDAP Foundation.

Copyright 1999-2003 The OpenLDAP Foundation, Redwood City, California, USA. All Rights Reserved. Permission to copy and distribute verbatim copies of this document is granted.

INDEX

A

About Address Book, 151
Accessing User Tools (System Settings), 3
A.C.S. Sensitivity Level, 147
Address Book
 Change Order, 42
 Edit Title, 42
 Program/Change/Delete Group, 42
 Select Title, 42
Address Book Management, 42
ADF Original Table Elevation, 23
Adjustment Settings for Operators, 213
Administrator Authentication Management, 42
Administrator's E-mail Address, 37
Administrator Tools / System Settings, 42
AOF (Always On), 42
Append CR to LF, 141
Authentication Information, 159, 202
Auto Continue, 135
Auto Delete File in Document Server, 42
Auto Delete Stored Print Jobs, 135
Auto Delete Temporary Print, 135
Auto Image Density Priority, 85
Auto Logout Timer, 29
Auto Off Timer, 29
Auto Specify Sender Name, 37
Auto Tray Switching, 85

B

Background Density of ADS (Full Color), 147
Background Numbering, 102
Back Margin
 Left/Right, 96
 Top/Bottom, 96
Back Up / Restore Address Book, 42
Blank Page Print, 135
Booklet Finisher BK5000, 233
Bypass Tray Setting Priority, 135

C

Capture Server IP Address, 37
Change Original Counter Display, 85
Change PDF Password, 144
Changing a FTP Folder Destination, 180
Changing a Group Name, 197
Changing an E-mail Destination, 170
Changing a Registered Name, 157
Changing a User Code, 161
Changing the Display Language, 207

Changing the registered
 SMB Folder Destination, 175
Changing Tray Paper Settings, 61
Clearing the Counter, 166
Clearing the Number of Prints, 166
Compression, 149
Configuration Page, 131
Connect Copy Key Display, 85
Connecting to the Ethernet Interface, 8
Connecting to the Interface, 7
Connecting with the USB Interface, 9
Copier/Document Server Auto Reset Timer, 29
Copier/Document Server Features / Edit, 96
Copier/Document Server Features /
 General Features, 85
Copier/Document Server Features /
 Input/Output, 115
Copier/Document Server Features on
 Main and Sub-machines, 119
Copier/Document Server Features /
 Reproduction Ratio, 92
Copier/Document Server Features / Stamp, 102
Copies, 135
Copy Back Cover, 96
Copy Count Display, 23
Copy Eject Face Method in Glass Mode, 115
Copy on Designating Page in Combine, 96
Copy Order in Combine, 96
Copy Orientation in Duplex Mode, 85
Counter, 210
Courier Font, 141
Cover Interposer Tray CI5000, 234
Creep Setting for Magazine, 96
Customized Function
 Document Server Storage, 85
Customize Function
 Copier, 85

D

Dark Background, 85
Data Format, 143
Date Stamp, 107
DDNS Configuration, 32
Default Printer Language, 135
Default User Name/Password (Send), 37
Delete All Files in Document Server, 42
Delete All Stored Print Jobs, 134
Delete All Temporary Print Jobs, 134
Delete Scanner Journal, 145
Deleting a FTP Folder Destination, 182
Deleting a Goup, 198

Deleting a Group Within Another Group, 195
Deleting a NCP Folder Destination, 188
Deleting an E-mail Destination, 171
Deleting a Registered Name, 158
Deleting a User Code, 162
Density (Background Numbering), 102
Destination List Display Priority 1, 145
Destination List Display Priority 2, 145
Display, 2
Display / Clear / Print Counter per User, 42
Displaying Names Registered in a Group, 193
Displaying the Counter for Each User, 163
Display / Print Counter, 42
Divide. Send E-mail, 149
DNS Configuration, 32
Document Server, 118
Domain Name, 32
Double Copies Position, 96
Double Copies Separation Line, 96
Duplex, 135
Duplex Back Page Stamping Position
(Page Numbering), 110

E

Edge to Edge Print, 135
Edit / Copier/Document Server Features, 96
Effective Protocol, 32
E-mail Communication Port, 37
E-mail Destination, 168
E-mail Information Language, 149
E-mail Reception Interval, 37
E-mail Storage in Server, 37
Energy Saver Timer, 29
Erase Border Width, 96
Erase Center Width, 96
Erase Original Shadow in Combine, 96
Error Log, 131
Ethernet Speed, 32
Extend A4 Width, 141
Extended Security, 42

F

File Transfer / System Settingse, 37
Finisher
 Punch Type, 115
 Stapling Position, 115
Finisher SR5000, 232
Firmware Version, 42
Folder Destination, 172
Font (Date Stamp), 107
Font Number, 141
Font (Page Numbering), 110
Font Pitch, 141

Font Source, 141
Font (Stamp Text), 112
Format (Date Stamp), 107
Form Lines, 141
Front Cover Copy in Combine, 96
Front Margin
 Left/Right, 96
 Top/Bottom, 96
Function Priority, 23
Function Reset Timer, 23

G

General Features / Copier/
 Document Server Features, 85
General Settings / Scanner Features, 145
General Settings / System Settings, 23
Generation Copy, 85

H

Hex Dump, 131
High Compression PDF Level, 149
Host Interface / Printer Features, 140
Host Name, 32

I

Image Adjustment Priority, 85
Image Repeat Separation Line, 96
Input/Output / Copier/
 Document Server Features, 115
Inquiry, 208
Insert Separation Sheet, 115
Interface Settings / System Settings, 32
Interleave Print, 23
Interpreting the configuration page, 132
I/O Buffer, 140
I/O Timeout, 140
IPv4 Gateway Address, 32
IPv6 Gateway Address, 32
IPv6 Stateless Address
 Autoconfiguration, 32
Items of Tray Paper Settings, 63

J

Job End Call, 85
Job Separation, 135

K

Key Counter Management, 42
Key Repeat, 23

L

LAN Type, 32
LCIT RT5000, 235
LCIT RT5010, 236
LDAP Authentication, 204
LDAP Search, 42
Letterhead Setting, 135
List / Test Print Lock, 134

M

Machine IPv4 Address, 32
Machine IPv6 Address, 32
Machine Name, 32
Maintenance / Printer Features, 134
Max. Copy Quantity, 85
Max. E-mail Size, 149
Max. Reception E-mail Size, 37
Memory Full Auto Scan Restart, 115
Memory Overflow, 135
Memory Usage, 135
Menu List, 131
Multi Bypass Tray BY5000 (Tray 7), 237
Multiple Lists, 131

N

Network, 32
Network Security Level, 42
Network Settings, 10
No. of Digits for Single Page Files, 149
Number of Scanner Resends, 37
NW Frame Type, 32

O

Orientation, 141
 Booklet, Magazine, 96
Original counter reset key, 85
Original Orientation in Duplex Mode, 85
Original Type Display, 85
Output
 Copier, 23
 Document Server, 23
 Printer, 23
Output tray settings, 28

P

Page Numbering, 110
Page Numbering in Combine
 (Page Numbering), 110
Page Numbering Initial Letter
 (Page Numbering), 110
Page Size, 135

Pale, 85
Panel Features Default, 85
Panel Key Sound, 23
Panel Off Timer, 29
Paper Display, 85
Paper Tray Priority
 Copier, 23
 Printer, 23
PCL Configuration/Font Page, 131
PCL Menu / Printer Features, 141
PDF Configuration/Font Page, 131
PDF Group Password, 144
PDF Menu / Printer Features, 144
Permit SNMPv3 Communication, 32
Permit SSL/TLS Communication, 32
Photo, 85
Ping Command, 32
Point Size, 141
POP3/IMAP4 Settings, 37
POP before SMTP, 37
Preset Stamp, 103
Print Address Book
 Destination List, 42
Print & Delete Scanner Journal, 145
Printer Auto Reset Timer, 29
Printer Features / Host Interface, 140
Printer Features / Maintenance, 134
Printer Features / PCL Menu, 141
Printer Features / PDF Menu, 144
Printer Features / PS Menu, 143
Printer Features / System, 135
Printer Features / Test Print, 131
Printer Language, 135
Print Error Report, 135
Printing the configuration page, 132
Printing the Counter for All User, 165
Printing the Counter for Each User, 164
Print List, 36
Print Priority, 23
Print Scanner Journal, 145
Program/Change Administrator, 42
Program/Change/Delete E-mail Message, 37
Program / Change / Delete
 LDAP Server, 42, 50
Program/Change/Delete User Text, 23
Program/Delete Stamp (User Stamp), 105
Programming the LDAP server, 51
PS Configuration/Font Page, 131
PS Menu / Printer Features, 143
Punch Unit PU5000, 234

Q

Quitting Tray Paper Settings, 62

R

Ratio for Create Margin, 92
Reception Protocol, 37
Registering a FTP Folder Destination, 178
Registering a Group, 189
Registering a NCP Folder Destination, 183
Registering an E-mail Destination, 168
Registering an SMB Folder Destination, 172
Registering a Protection Code
to a Group User, 201
Registering a Protection Code
to a Single User, 199
Registering a User Code, 159
Registering Folders, 172
Registering LDAP Authentication, 202, 204
Registering Names, 156
Registering Names to a Group, 190
Registering SMTP Authentication, 202
Registering user names and
destination names, 156
Removing a Name from a Group, 194
Reproduction Ratio / Copier/
Document Server Features, 92
R/E Ratio, 92
R/E Ratio Priority, 92
Reservation Screen Auto-off Timer, 85
Reserved Job Waiting Time, 135
Reserve Job Mode, 85
Resolution, 141, 143, 144

S

SADF Auto Reset, 115
Scanner Auto Reset Timer, 29
Scanner Features / General Settings, 145
Scanner Features / Scan Settings, 147
Scanner Features / Send Settings, 149
Scanner Resend Interval Time, 37
Scan Settings / Scanner Features, 147
Screen Color Setting, 23
Search Destination, 145
Select Punch Type, 115
Send Settings / Scanner Features, 149
Separation Line in Combine, 96
Set Date, 29
Set Time, 29
Settings for the Document Server, 118
Settings Required to Use
Document Server, 14
Settings Required to Use
Document Server / Ethernet, 14
Settings Required to Use
E-mail Function / Ethernet, 11

Settings Required to Use
Network TWAIN Scanner, 13
Settings Required to Use
Network TWAIN Scanner / Ethernet, 13
Settings Required to Use
Scan to Folder Function, 12
Settings Required to Use
Scan to Folder Function / Ethernet, 12
Settings Required to Use the Printer, 10
Settings Required to
Use the Printer/ Ethernet, 10
Shortcut R/E, 92
Simplified Screen
Finishing Types, 115
Size (Background Numbering), 102
Size (Date Stamp), 107
Size (Page Numbering), 110
Size (Stamp Text), 112
SMB Computer Name, 32
SMB Work Group, 32
SMTP Authentication, 37, 202
SMTP Server, 37
Sort/Stack Shift setting, 115
Special Original Display, 85
Special Original Display Defaults, 85
Specifications, 225
Specifications for the Main Unit, 225
Stamp / Copier/
Document Server Features, 102
Stamp Format
1-5 (User Stamp), 105
Stamp Format (Page Numbering), 110
Stamp Format (Preset Stamp), 103
Stamp Language (Preset Stamp), 103
Stamp on Designating Slip Sheet
(Page Numbering), 110
Stamp Position (Page Numbering), 110
Stamp Setting (Date Stamp), 107
Stamp Setting (Stamp Text), 112
Stamp Text, 112
Stapling Position, 115
Status Indicator, 23
Stored File E-mail Method, 149
Sub Paper Size, 135
Superimpose (Date Stamp), 107
Superimpose (Page Numbering), 110
Superimpose (Stamp Text), 112
Switch Title of Quick Dial Table, 145
Symbol Set, 141
System Auto Reset Timer, 29
System / Printer Features, 135
System Settings / Administrator Tools, 42
System Settings / File Transfer, 37
System Settings / General Features, 23

System Settings on
Main and Sub-machines, 56
System Settings / Timer Settings, 29
System Status/Job List Display Time, 23

T

Test Print / Printer Features, 131
Text, 85
Text/photo, 85
Time Interval between Printing Jobs, 23
Timer Settings / System Settings, 29
Tone
 Original Remains, 85
Toner Saving, 135
Transfer Log Setting, 42
Tray 1, 63
Tray 2 - 3, 63
Tray 4, 63
Tray 5, 63
Tray 6, 63
Tray 7, 63
Tray Paper Setting on
 Main and Sub-machines, 83
Tray Paper Settings, 61
Tray Switching, 135
TWAIN Standby Time, 145

U

User Authentication Management, 42
User Code, 159
User Stamp, 105
Using SMB to Connect, 172
Using Utilities to Make Settings, 15

W

Wait Time for Next Orig.
 Exposure Glass, 147
Wait Time for Next Original(s)
 SADF, 147
Warm Up Beeper, 23
Weekly Timer
 Monday-Sunday, 29
Weekly Timer Code, 29
WINS Configuration, 32

Z

Z-folding Unit ZF4000, 235
Z-fold position, 23

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

I means **POWER ON**.

⏻ means **STAND BY**.

Trademarks

Microsoft®, Windows® and Windows NT® are registered trademarks of Microsoft Corporation in the United States and/or other countries.


Acrobat® is a registered trademark of Adobe Systems Incorporated.

NetWare is a registered trademark of Novell, Inc.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product name of Windows® 95 is Microsoft® Windows® 95
- The product name of Windows® 98 is Microsoft® Windows® 98
- The product name of Windows® Me is Microsoft® Windows® Millennium Edition (Windows Me)
- The product names of Windows® 2000 are as follows:
 - Microsoft® Windows® 2000 Advanced Server
 - Microsoft® Windows® 2000 Server
 - Microsoft® Windows® 2000 Professional
- The product names of Windows® XP are as follows:
 - Microsoft® Windows® XP Professional
 - Microsoft® Windows® XP Home Edition
- The product names of Windows Server™ 2003 are as follows:
 - Microsoft® Windows Server™ 2003 Standard Edition
 - Microsoft® Windows Server™ 2003 Enterprise Edition
 - Microsoft® Windows Server™ 2003 Web Edition
- The product names of Windows® NT are as follows:
 - Microsoft® Windows NT® Server 4.0
 - Microsoft® Windows NT® Workstation 4.0

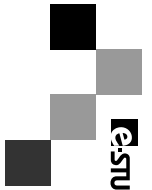

Estudio 901/1101/1351 Operating Instructions General Settings Guide