



---

# **FS-3540MFP**

# **FS-3640MFP**

# **SERVICE**

# **MANUAL**

Published in March 2011  
842MD110  
2MDSM060  
First Edition

## **CAUTION**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

It may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for proper disposal.

## **ATTENTION**

IL Y A UN RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UN MODÈLE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES UTILISÉES SELON LES INSTRUCTIONS DONNÉES.

Il peut être illégal de jeter les batteries dans des eaux d'égout municipales. Vérifiez avec les fonctionnaires municipaux de votre région pour les détails concernant des déchets solides et une mise au rebut appropriée.

**Revision history**

<b>Revision</b>	<b>Date</b>	<b>Replaced pages</b>	<b>Remarks</b>

This page is intentionally left blank.



---


# Safety precautions


---


This booklet provides safety warnings and precautions for our service personnel to ensure the safety of their customers, their machines as well as themselves during maintenance activities. Service personnel are advised to read this booklet carefully to familiarize themselves with the warnings and precautions described here before engaging in maintenance activities.

## Safety warnings and precautions

Various symbols are used to protect our service personnel and customers from physical danger and to prevent damage to their property. These symbols are described below:

 **DANGER:** High risk of serious bodily injury or death may result from insufficient attention to or incorrect compliance with warning messages using this symbol.

 **WARNING:** Serious bodily injury or death may result from insufficient attention to or incorrect compliance with warning messages using this symbol.

 **CAUTION:** Bodily injury or damage to property may result from insufficient attention to or incorrect compliance with warning messages using this symbol.

### Symbols

The triangle ( $\triangle$ ) symbol indicates a warning including danger and caution. The specific point of attention is shown inside the symbol.



General warning.



Warning of risk of electric shock.



Warning of high temperature.

 indicates a prohibited action. The specific prohibition is shown inside the symbol.



General prohibited action.



Disassembly prohibited.

 indicates that action is required. The specific action required is shown inside the symbol.



General action required.





Remove the power plug from the wall outlet.











Always ground the copier.

# 1. Installation Precautions

## WARNING











- Do not use a power supply with a voltage other than that specified. Avoid multiple connections to one outlet: they may cause fire or electric shock. When using an extension cable, always check that it is adequate for the rated current. .... 
- Connect the ground wire to a suitable grounding point. Not grounding the copier may cause fire or electric shock. Connecting the earth wire to an object not approved for the purpose may cause explosion or electric shock. Never connect the ground cable to any of the following: gas pipes, lightning rods, ground cables for telephone lines and water pipes or faucets not approved by the proper authorities. .... 

## CAUTION:





- Do not place the copier on an infirm or angled surface: the copier may tip over, causing injury. .... 
- Do not install the copier in a humid or dusty place. This may cause fire or electric shock. .... 
- Do not install the copier near a radiator, heater, other heat source or near flammable material. This may cause fire. .... 
- Allow sufficient space around the copier to allow the ventilation grills to keep the machine as cool as possible. Insufficient ventilation may cause heat buildup and poor copying performance. .... 
- Always handle the machine by the correct locations when moving it. .... 
- Always use anti-toppling and locking devices on copiers so equipped. Failure to do this may cause the copier to move unexpectedly or topple, leading to injury. .... 
- Avoid inhaling toner or developer excessively. Protect the eyes. If toner or developer is accidentally ingested, drink a lot of water to dilute it in the stomach and obtain medical attention immediately. If it gets into the eyes, rinse immediately with copious amounts of water and obtain medical attention. .... 
- Advise customers that they must always follow the safety warnings and precautions in the copier's instruction handbook. .... 












## 2. Precautions for Maintenance

### WARNING

- Always remove the power plug from the wall outlet before starting machine disassembly. .... 
- Always follow the procedures for maintenance described in the service manual and other related brochures. .... 
- Under no circumstances attempt to bypass or disable safety features including safety mechanisms and protective circuits. .... 
- Always use parts having the correct specifications. .... 
- Always use the thermostat or thermal fuse specified in the service manual or other related brochure when replacing them. Using a piece of wire, for example, could lead to fire or other serious accident. .... 
- When the service manual or other serious brochure specifies a distance or gap for installation of a part, always use the correct scale and measure carefully. .... 
- Always check that the copier is correctly connected to an outlet with a ground connection. .... 
- Check that the power cable covering is free of damage. Check that the power plug is dust-free. If it is dirty, clean it to remove the risk of fire or electric shock. .... 
- Never attempt to disassemble the optical unit in machines using lasers. Leaking laser light may damage eyesight. .... 
- Handle the charger sections with care. They are charged to high potentials and may cause electric shock if handled improperly. .... 



### CAUTION

- Wear safe clothing. If wearing loose clothing or accessories such as ties, make sure they are safely secured so they will not be caught in rotating sections. .... 
- Use utmost caution when working on a powered machine. Keep away from chains and belts. .... 
- Handle the fixing section with care to avoid burns as it can be extremely hot. .... 
- Check that the fixing unit thermistor, heat and press rollers are clean. Dirt on them can cause abnormally high temperatures. .... 

- Do not remove the ozone filter, if any, from the copier except for routine replacement. .... 
- Do not pull on the AC power cord or connector wires on high-voltage components when removing them; always hold the plug itself. .... 
- Do not route the power cable where it may be stood on or trapped. If necessary, protect it with a cable cover or other appropriate item. .... 
- Treat the ends of the wire carefully when installing a new charger wire to avoid electric leaks. .... 
- Remove toner completely from electronic components. .... 
- Run wire harnesses carefully so that wires will not be trapped or damaged. .... 
- After maintenance, always check that all the parts, screws, connectors and wires that were removed, have been refitted correctly. Special attention should be paid to any forgotten connector, trapped wire and missing screws. .... 
- Check that all the caution labels that should be present on the machine according to the instruction handbook are clean and not peeling. Replace with new ones if necessary. .... 
- Handle greases and solvents with care by following the instructions below: ..... 
  - Use only a small amount of solvent at a time, being careful not to spill. Wipe spills off completely.
  - Ventilate the room well while using grease or solvents.
  - Allow applied solvents to evaporate completely before refitting the covers or turning the power switch on.
  - Always wash hands afterwards.
- Never dispose of toner or toner bottles in fire. Toner may cause sparks when exposed directly to fire in a furnace, etc. .... 
- Should smoke be seen coming from the copier, remove the power plug from the wall outlet immediately. .... 

### 3. Miscellaneous

#### WARNING

- Never attempt to heat the drum or expose it to any organic solvents such as alcohol, other than the specified refiner; it may generate toxic gas. .... 
- Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur. .... 

This page is intentionally left blank.

# CONTENTS

## 1-1 Specifications

1-1-1 Specifications .....	1-1-1
1-1-2 Parts names .....	1-1-5
(1) Overall .....	1-1-5
(2) Operation panel .....	1-1-6
1-1-3 Machine cross section .....	1-1-7

## 1-2 Installation

1-2-1 Installation environment.....	1-2-1
1-2-2 Unpacking.....	1-2-2
(1) Unpacking.....	1-2-2
(2) Removing the tapes.....	1-2-3
1-2-3 Installing the expansion memory (option).....	1-2-7
1-2-4 Installing the memory card (option).....	1-2-8

## 1-3 Maintenance Mode

1-3-1 Maintenance mode.....	1-3-1
(1) Executing a maintenance item .....	1-3-1
(2) Maintenance modes item list .....	1-3-2
(3) Contents of the maintenance mode items .....	1-3-5
1-3-2 Service mode.....	1-3-55
(1) Executing a service mode .....	1-3-55
(2) Description of service mode .....	1-3-56

## 1-4 Troubleshooting

1-4-1 Paper misfeed detection.....	1-4-1
(1) Paper misfeed indication .....	1-4-1
(2) Paper misfeed detection condition .....	1-4-1
1-4-2 Self-diagnostic function .....	1-4-4
(1) Self-diagnostic function .....	1-4-4
(2) Self diagnostic codes.....	1-4-5
1-4-3 Image formation problems.....	1-4-13
(1) Completely blank printout.....	1-4-14
(2) All-black printout.....	1-4-15
(3) Dropouts.....	1-4-16
(4) Black dots.....	1-4-16
(5) Black horizontal streaks.....	1-4-16
(6) Black vertical streaks.....	1-4-17
(7) Unsharpness.....	1-4-17
(8) Gray background.....	1-4-17
(9) Dirt on the top edge or back of the paper.....	1-4-18
(10) Undulated printing at the right edge (scanning start position).....	1-4-18
1-4-4 Electric problems.....	1-4-19
1-4-5 Mechanical problems.....	1-4-25

1-4-6	Send error code .....	1-4-27
	(1) Scan to SMB error codes .....	1-4-27
	(2) Scan to FTP error codes .....	1-4-28
	(3) Scan to E-mail error codes .....	1-4-29
	(4) Network Twain error codes .....	1-4-30
	(5) Software trouble error codes .....	1-4-30
1-4-7	Error codes .....	1-4-31
	(1) Error code .....	1-4-31
	(2) Table of general classification .....	1-4-32
	(2-1) U004XX error code table: Interrupted phase B .....	1-4-34
	(2-2) U006XX error code table: Problems with the unit .....	1-4-34
	(2-3) U008XX error code table: Page transmission error .....	1-4-34
	(2-4) U009XX error code table: Page reception error .....	1-4-34
	(2-5) U010XX error code table: G3 transmission .....	1-4-35
	(2-6) U011XX error code table: G3 reception .....	1-4-36
	(2-7) U017XX error code table: V.34 transmission .....	1-4-37
	(2-8) U018XX error code table: V.34 reception .....	1-4-37
	(2-9) U044XX error code table: Encrypted transmission .....	1-4-37

## 1-5 Assembly and disassembly

1-5-1	Precautions for assembly and disassembly .....	1-5-1
	(1) Precautions .....	1-5-1
	(2) Drum .....	1-5-1
	(3) Toner .....	1-5-1
	(4) How to tell a genuine Kyocera Mita toner container .....	1-5-2
1-5-2	Outer covers .....	1-5-3
	(1) Detaching and refitting the right cover and left cover .....	1-5-3
1-5-3	Paper feed section .....	1-5-6
	(1) Detaching and refitting the paper feed assembly (paper feed roller and pickup roller) ....	1-5-6
	(2) Detaching and refitting the retard roller assembly .....	1-5-7
	(3) Detaching and refitting the upper registration and lower roller .....	1-5-8
	(4) Detaching and refitting the MP paper feed roller .....	1-5-10
1-5-4	Optical section .....	1-5-11
	(1) Detaching and refitting the Document processor .....	1-5-11
	(2) Detaching and refitting the scanner unit .....	1-5-13
	(3) Detaching and refitting the laser scanner unit .....	1-5-16
1-5-5	Developing section .....	1-5-19
	(1) Detaching and refitting the developing unit .....	1-5-19
1-5-6	Drum section .....	1-5-20
	(1) Detaching and refitting the drum unit .....	1-5-20
	(2) Detaching and refitting the main charger unit .....	1-5-20
1-5-7	Transfer/separation section .....	1-5-21
	(1) Detaching and refitting the transfer roller and separation brush unit .....	1-5-21
1-5-8	Fuser section .....	1-5-23
	(1) Detaching and refitting the fuser unit .....	1-5-23
1-5-9	PWBs .....	1-5-24
	(1) Detaching and refitting the engine PWB .....	1-5-24
	(2) Detaching and refitting the main PWB .....	1-5-28
	(3) Detaching and refitting the power source PWB .....	1-5-31
	(4) Detaching and refitting the FAX control PWB .....	1-5-36



1-5-10 Others .....	1-5-37
(1) Detaching and refitting the paper feed drive unit .....	1-5-37
(2) Detaching and refitting the main drive unit .....	1-5-39
(3) Direction of installing the principal fan motors .....	1-5-40
1-5-11 Document processor .....	1-5-41
(1) Detaching and refitting the DP rear cover and DP front cover .....	1-5-41
(2) Detaching and refitting the DP drive PWB.....	1-5-42
(3) Detaching and refitting the DP forwarding pulley assembly and DP separation pad assembly. ....	1-5-43
<b>1-6 Requirements on PWB Replacement</b>	
1-6-1 Upgrading the firmware .....	1-6-1
1-6-2 Remarks on engine PWB replacement .....	1-6-2
<b>2-1 Mechanical Construction</b>	
2-1-1 Paper feed/conveying section .....	2-1-1
(1) Cassette paper feed section .....	2-1-1
(2) MP tray paper feed section.....	2-1-3
(3) Paper conveying section .....	2-1-4
2-1-2 Drum section .....	2-1-5
2-1-3 Optical section .....	2-1-6
(1) Scanner unit .....	2-1-6
(2) Image scanner unit (ISU).....	2-1-7
(3) Laser scanner unit.....	2-1-9
2-1-4 Developing section .....	2-1-11
2-1-5 Transfer/Separation section .....	2-1-13
2-1-6 Cleaning section .....	2-1-14
2-1-7 Fuser section .....	2-1-16
2-1-8 Eject/Rear unit section.....	2-1-18
2-1-9 Duplex conveying section.....	2-1-20
2-1-10 Document processor .....	2-1-21
(1) Original feed section.....	2-1-21
(2) Original conveying section.....	2-1-22
(3) Original switchback/eject sections.....	2-1-23
<b>2-2 Electrical Parts Layout</b>	
2-2-1 Electrical parts layout .....	2-2-1
(1) PWBs.....	2-2-1
(2) Switches and sensors.....	2-2-3
(3) Motors.....	2-2-5
(4) Other electrical components.....	2-2-6
(5) Document processor .....	2-2-7
<b>2-3 Operation of the PWBs</b>	
2-3-1 Power source PWB .....	2-3-1
2-3-2 Engine PWB .....	2-3-3
2-3-3 Main PWB.....	2-3-8
2-3-4 Connect-L PWB.....	2-3-16
2-3-5 Connect-R PWB .....	2-3-20
2-3-6 DP drive PWB.....	2-3-23

## 2-4 Appendixes

2-4-1 Appendixes .....	2-4-1
(1) Wiring diagram .....	2-4-1
(2) Repetitive defects gauge .....	2-4-3
(3) Maintenance kits.....	2-4-4
(4) Firmware Environment Commands .....	2-4-5
(5) Maintenance Commands.....	2-4-11

## 1-1-1 Specifications

### Basic functions

Item	Specifications	
	3 in 1 model (without FAX)	4 in 1 model (with FAX)
Type	Desktop	
Printing method	Electrophotography by semiconductor laser, single drum system	
Originals	Sheet, Book, 3-dimensional objects (maximum original size: Folio/Legal)	
Original feed system	Contact glass: fixed	
Paper weight	Cassette	60 to 120 g/m <sup>2</sup> (Duplex: 60 to 120 g/m <sup>2</sup> )
	MP tray	60 to 220 g/m <sup>2</sup>
Paper type	Cassette	Plain, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, High Quality, Custom 1 to 8 (Duplex: Same as simplex)
	MP tray	Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color (Colour), Prepunched, Letterhead, Thick, Envelope, High Quality, Custom 1 to 8
Paper size	Cassette	A4, B5, A5, A6, Legal, Letter, Statement, Executive, Oficio II, Folio, 16K, Custom
	MP tray	A4, B5, B5(ISO), A5, A6, B6, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki, Oufuku Hagaki, Youkei 2, Youkei 4, Legal, Letter, Statement, Executive, Oficio II, Folio, 16K, Custom
Zoom level	Manual mode: 25 - 400%, 1% increments Auto mode: 400%, 200%, 141%, 129%, 115%, 90%, 86%, 78%, 70%, 64%, 50%, 25%	
Copying speed	Simplex	A4R : 40 ppm LetterR : 42 ppm Legal : 33 ppm B5R : 33 ppm A5R/A6R : 22 ppm
	Duplex	A4R : 24.5 ppm LetterR : 26 ppm Legal : 16.5 ppm B5R : 24 ppm A5R : 21 ppm
First copy time (A4, feed from cassette)	7.0 second or less	
Warm-up time (22°C/71.6°F, 60%RH)	Power on: 22 second or less	
Paper capacity	Cassette	500 sheets (80g/m <sup>2</sup> )
	MP tray	100 sheets (80 g/m <sup>2</sup> , plain paper, Letter/A4 or smaller)
Output tray capacity	500 sheets (80g/m <sup>2</sup> )	
Continuous printing	1 to 999 sheets	
Scanning system	Flat bed scanning by CCD image sensor	

Item	Specifications	
	3 in 1 model (without FAX)	4 in 1 model (with FAX)
<b>Photoconductor</b>	a-Si drum (diameter 30 mm)	
<b>Image write system</b>	Semiconductor laser (1 beam)	
<b>Charging system</b>	Contact charger roller method (positive charging)	
<b>Developing system</b>	Mono component dry developing method Toner replenishing: Automatic from the toner container	
<b>Transfer system</b>	Transfer roller (negative-charged)	
<b>Separation system</b>	Small diameter separation, discharger brush (negative-charged)	
<b>Cleaning system</b>	Counter blade cleaning + cleaning roller	
<b>Charge erasing system</b>	Exposure by eraser lamp (LED)	
<b>Fusing system</b>	Heat roller system Heat source: halogen heater Abnormally high temperature protection devices: thermostat	
<b>CPU</b>	PowerPC464 (800MHz)	
<b>Memory</b>	<b>Standard</b>	512MB
	<b>Maximum</b>	2048MB
<b>Interface</b>	USB: 1 port (Hi-speed USB 2.0) USB host: 2 port Ethernet: 1 port (10BASE-T/100BASE-TX/1000BASE-TX)	
<b>Resolution</b>	1200×1200 dpi	
<b>Operating environment</b>	<b>Temperature</b>	10 to 32.5 °C/50 to 90.5 °F
	<b>Humidity</b>	15 to 80%
	<b>Altitude</b>	2,500 m/8,202 ft maximum
	<b>Brightness</b>	1,500 lux maximum
<b>Dimensions (W × D × H)</b>	494 × 497.1 × 566.5 mm 19 7/16" × 19 9/16" × 22 5/16"	
<b>Weight</b>	Approx. 26.38 kg / 58.16 lbs	Approx. 26.68 kg / 58.82 lbs
<b>Space Space required (W × D)</b>	Without MP tray: 494 × 497.1 mm 19 7/16" × 19 9/16" With MP tray : 494 × 656.1 mm 19 7/16" × 25 13/16"	
<b>Power source</b>	120 V AC, 60 Hz, more than 10.0 A 220 - 240 V AC, 50/60 Hz, more than 6.0A	
<b>Options</b>	Paper feeder × 3, Expanded memory	

## Document processor functions

Item	Specifications
<b>Original feed method</b>	Automatic feed
<b>Supported original types</b>	Sheet originals
<b>Original sizes</b>	Maximum: Legal/A4 Minimum: Statement/A5
<b>Original weights</b>	Simplex: 50 to 120 g/m <sup>2</sup> Duplex: 50 to 110 g/m <sup>2</sup>
<b>Loading capacity</b>	50 sheets (50 to 80 g/m <sup>2</sup> ) maximum
<b>Dimensions (W × D × H)</b>	490 × 339 × 104 mm 19 5/16" × 13 5/16" × 4 1/8"
<b>Weight</b>	3 kg or less / 6.6 lbs. or less

## Printing functions

Item	Specifications
<b>Printing speed</b>	Same as copying speed.
<b>First print time (A4, feed from cassette)</b>	9.5 seconds or less
<b>Resolution</b>	Fine 1200, Fast 1200, 600 dpi, 300 dpi
<b>Operating system</b>	Windows 2000, Windows XP, Windows XP Professional, Windows Server 2003, Windows Server 2003 x64 Edition, Windows Vista x86 Edition, Windows Vista x64 Edition, Windows 2008 Server, Windows Server 2008 x64 Edition, Windows 7, Apple Macintosh OS 10.x
<b>Interface</b>	USB: 1 port (Hi-speed USB 2.0) USB host: 1 port Ethernet: 1 port (10BASE-T/100BASE-TX/1000BASE-TX)
<b>Page description language</b>	PRESCRIBE

## Scanning functions

Item	Specifications
<b>Compatible operation system</b>	Windows 2000 (Service Pack 4), Windows XP, Windows Vista, Windows Server 2003, Windows Server 2008, Windows 7
<b>System requirements</b>	IBM PC/AT compatible CPU: Celeron 600MHz or higher RAM: 128MB or more HDD free space: 20MB or more Interface: USB
<b>Resolution</b>	600 dpi, 400 dpi, 300 dpi, 200 dpi
<b>File format</b>	JPEG, TIFF, PDF, XPS

Item	Specifications
<b>Scanning speed</b>	1-sided: B/W 35 images/min Color 13 images/min (A4 landscape, 600 dpi, Image quality: Text/Photo original)
<b>Interface</b>	Ethernet (10 BASE-T/100 BASE-TX/1000BASE-TX) USB2.0 (Hi-Speed USB)
<b>Network protocol</b>	TCP/IP
<b>Transmission system</b>	PC transmission SMB Scan to SMB FTP Scan to FTP, FTP over SSL E-mail transmission SNMP Scan to E-mail TWAIN scan WIA scan

#### Fax functions : 4in1 model (with FAX) only

Item	Specifications
<b>Compatibility</b>	Super G3
<b>Communication line</b>	Subscriber telephone line
<b>Transmission time</b>	3 seconds or less (33600 bps, JBIG, ITU-T A4 #1 chart)
<b>Transmission speed</b>	33600/31200/28800/26400/24000/21600/19200/16800/14400/12000/9600/ 7200/4800/2400 bps
<b>Coding scheme</b>	JBIG/MMR/MR/MH
<b>Error correction</b>	ECM
<b>Original size</b>	Max. width: 8 1/2"/215 mm Max. length: 14"/355.6 mm
<b>Automatic document feed</b>	Max. 50 sheets
<b>Scanner resolution</b>	Horizontal × Vertical 200 × 100 dpi Normal (8 dot/mm × 3.85 line/mm) 200 × 200 dpi Fine (8 dot/mm × 7.7 line/mm) 200 × 400 dpi Super fine (8 dot/mm × 15.4 line/mm) 400 × 400 dpi Ultra fine (16 dot/mm × 15.4 line/mm)
<b>Printing resolution</b>	600×600 dpi
<b>Gradations</b>	256 shades (Error diffusion)
<b>One-Touch key</b>	100 keys
<b>Multi-Station transmission</b>	Max. 100 destinations
<b>Substitute memory reception</b>	256 sheets or more (when using ITU-T A4 #1)
<b>Image memory capacity</b>	3.5 MB (standard) (for incoming faxed originals)
<b>Report output</b>	Sent result report, FAX RX result report, Activity report, Status page

NOTE: These specifications are subject to change without notice.

## 1-1-2 Parts names

### (1) Overall



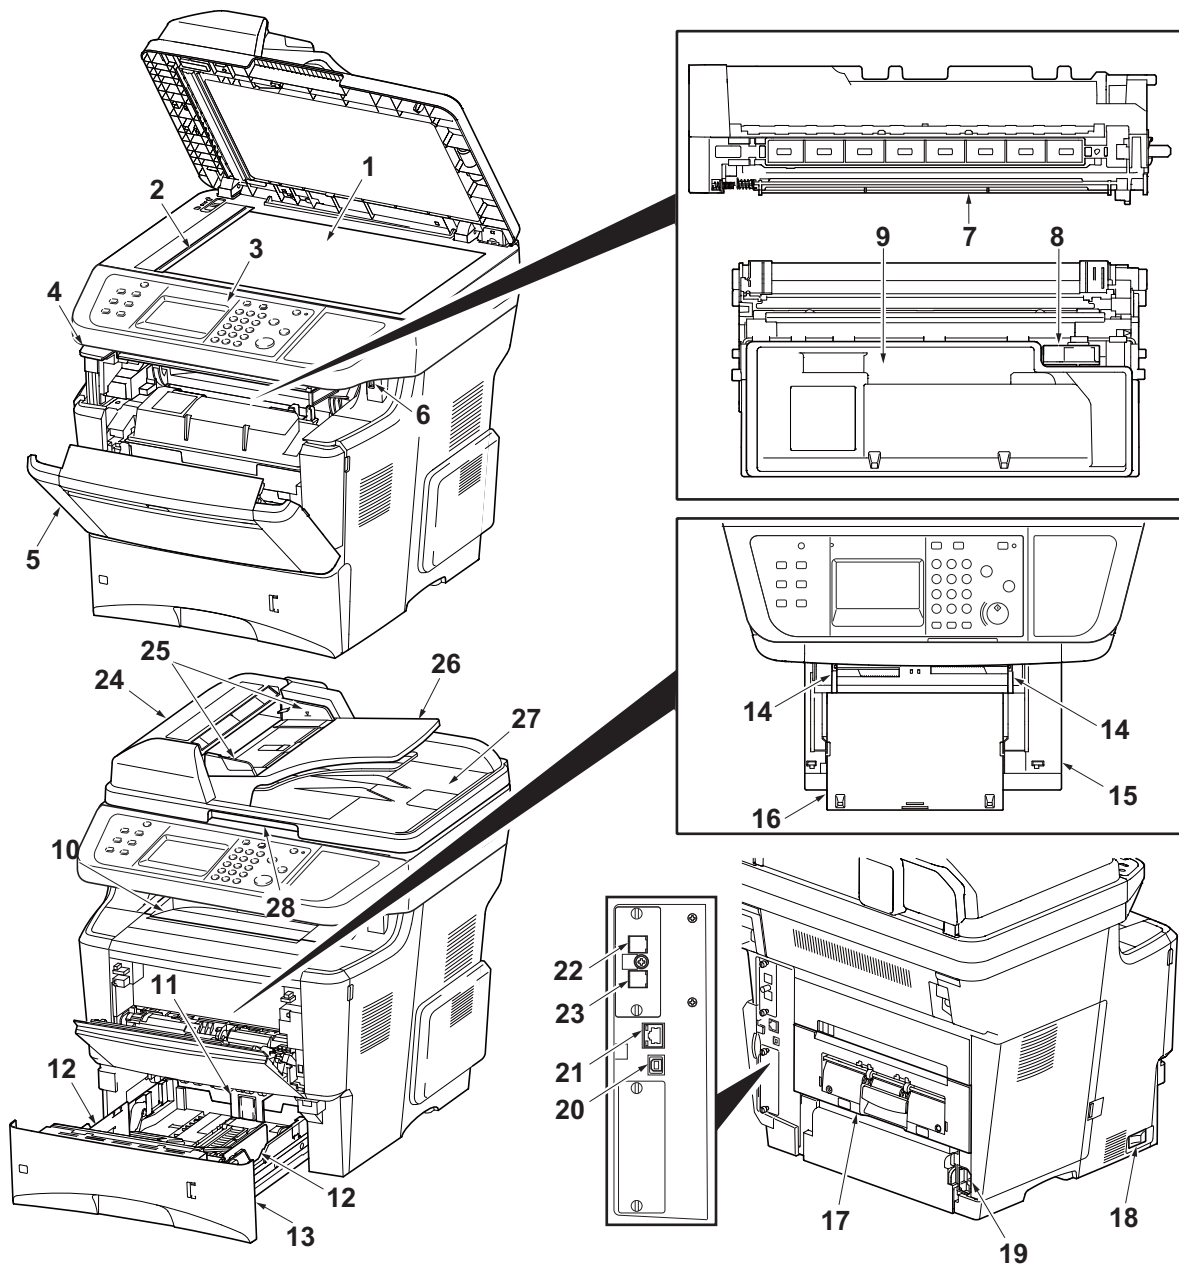


Figure 1-1-1

- |                                    |                                    |                           |
|------------------------------------|------------------------------------|---------------------------|
| 1. Platen (contact glass)          | 12. Paper width guides             | 23. Tel connector (T1) *  |
| 2. Original size Indicator plate   | 13. Cassette                       | 24. DP top cover          |
| 3. Operation panel                 | 14. Paper width guides (MP tray)   | 25. Original width guides |
| 4. Front upper cover               | 15. MP (Multi-Purpose) tray        | 26. Original table        |
| 5. Front cover                     | 16. MP tray extension              | 27. Original eject table  |
| 6. USB Interface connector (front) | 17. Rear unit                      | 28. Opening handle        |
| 7. Drum unit                       | 18. Main power switch              |                           |
| 8. Lock lever                      | 19. Power cord connector           |                           |
| 9. Toner container                 | 20. USB Interface connector (rear) |                           |
| 10. Inner tray                     | 21. Network Interface connector    |                           |
| 11. Paper length guide             | 22. Line connector (L1) *          |                           |

\* 4in1 model (with FAX) only

**(2) Operation panel**

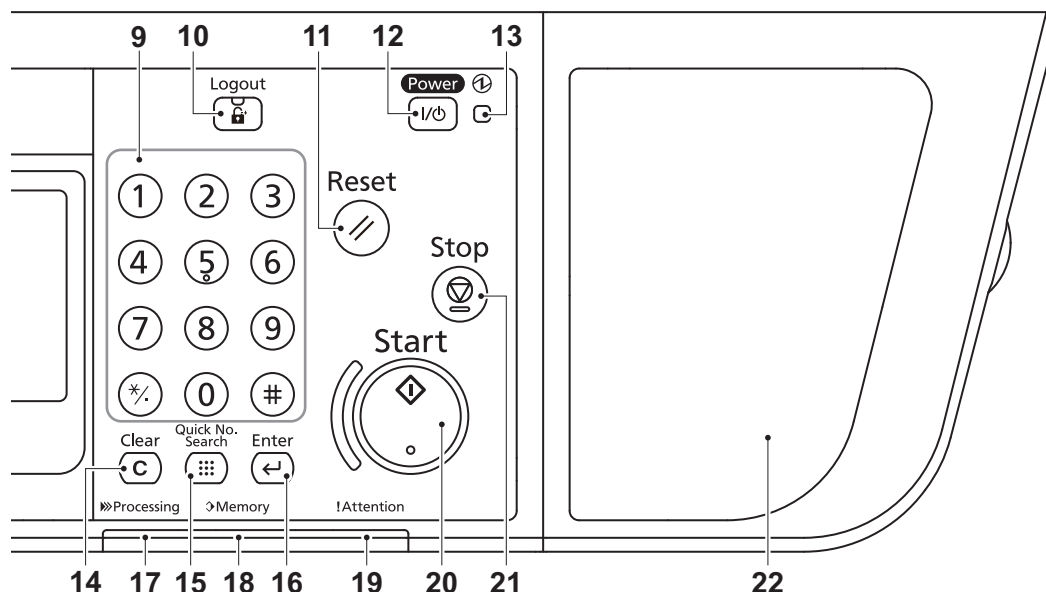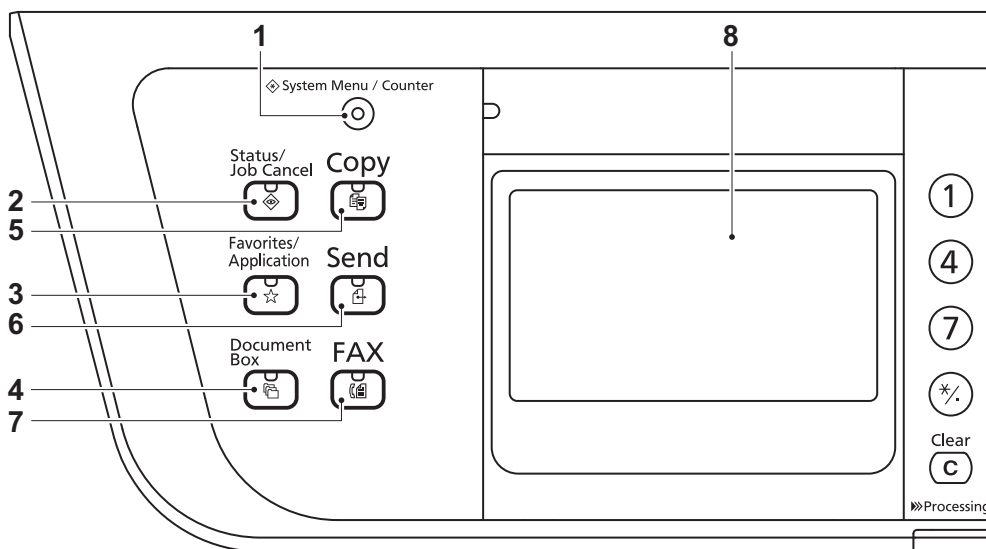

**Figure 1-1-2**

- |                              |                          |                          |
|------------------------------|--------------------------|--------------------------|
| 1. System menu/Counter key   | 10. Black and White key  | 19. Enter key            |
| 2. Status/Job cancel key     | 11. Message display      | 20. Processing indicator |
| 3. Favorites/application key | 12. Numeric keys         | 21. Memory indicator     |
| 4. Document box key          | 13. Logout key           | 22. Attention indicator  |
| 5. Copy key                  | 14. Reset key            | 23. Start key            |
| 6. Send key                  | 15. Power key            | 24. Stop key             |
| 7. FAX key*                  | 16. Main power LED       | 25. IC Card reader box   |
| 8. Auto color key            | 17. Clear key            |                          |
| 9. Full color key            | 18. Quick No. Search key |                          |

\*: 4 in 1 model (with FAX) only



### 1-1-3 Machine cross section


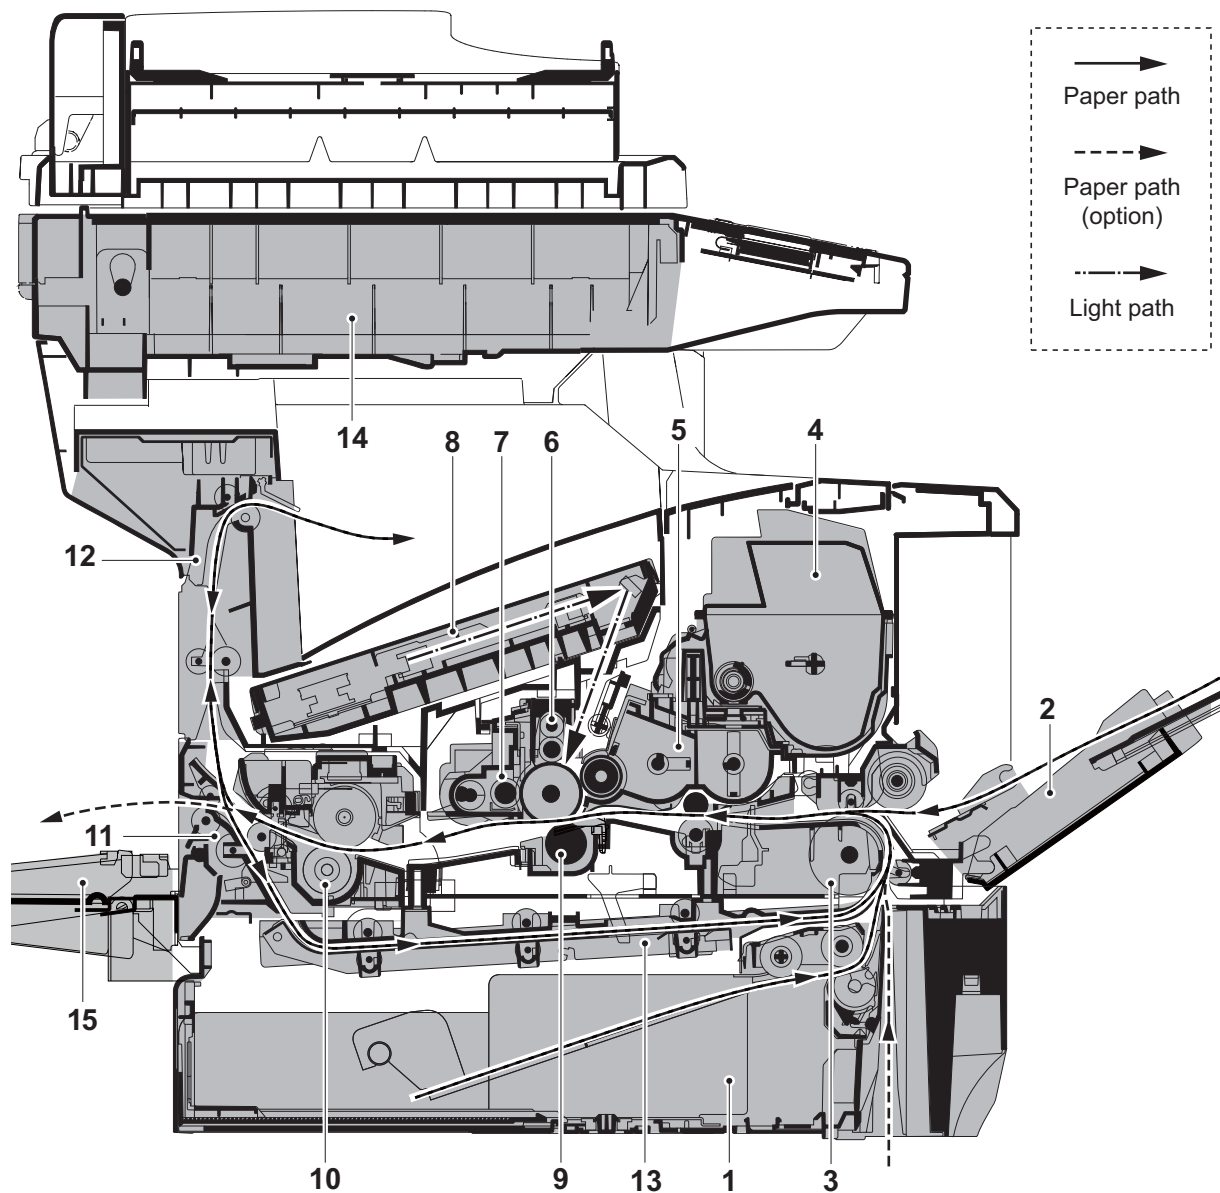


Figure 1-1-3

- |                                 |                                |
|---------------------------------|--------------------------------|
| 1. Cassette                     | 9. Transfer/separation section |
| 2. MP tray                      | 10. Fuser unit                 |
| 3. Paper feed/conveying section | 11. Rear unit                  |
| 4. Toner container              | 12. Eject section              |
| 5. Developing unit              | 13. Duplex/conveying section   |
| 6. Main charger unit            | 14. Scanner unit               |
| 7. Drum unit                    |                                |
| 8. Laser scanner unit (LSU)     |                                |

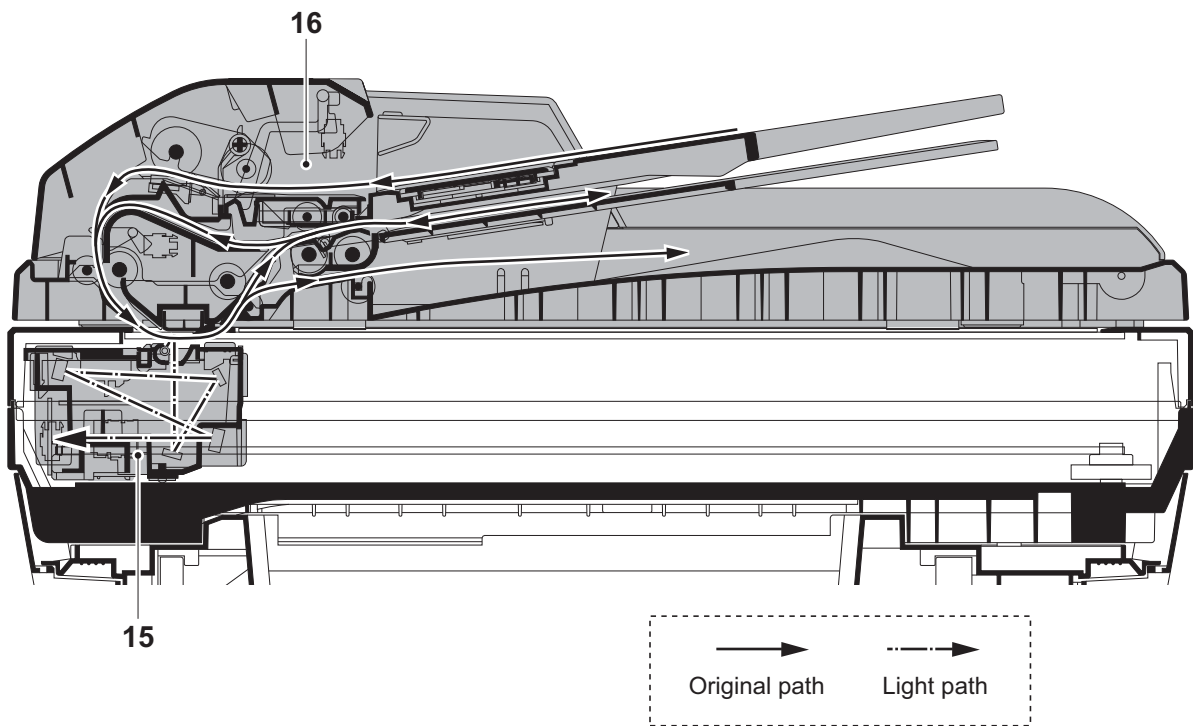

**Figure 1-1-4**

- 15. Image scanner unit (ISU)
- 16. Document processor (DP)

## 1-2-1 Installation environment

1. Temperature: 10 to 32.5°C/50 to 90.5°F
2. Humidity: 15 to 80%RH
3. Power supply: 120 V AC, 10.0 A  
220 - 240 V AC, 6.0A
4. Power source frequency: 50 Hz  $\pm$ 2%/60 Hz  $\pm$ 2%

### 5. Installation location

Avoid direct sunlight or bright lighting. Ensure that the photoconductor will not be exposed to direct sunlight or other strong light when removing paper jams.

Avoid locations subject to high temperature and high humidity or low temperature and low humidity; an abrupt change in the environmental temperature; and cool or hot, direct air.

Avoid places subject to dust and vibrations.

Choose a surface capable of supporting the weight of the machine.

Place the machine on a level surface (maximum allowance inclination: 1°).

Avoid air-borne substances that may adversely affect the machine or degrade the photoconductor, such as mercury, acidic or alkaline vapors, inorganic gasses, NOx, SOx gases and chlorine-based organic solvents.

Select a well-ventilated location.

6. Allow sufficient access for proper operation and maintenance of the machine.

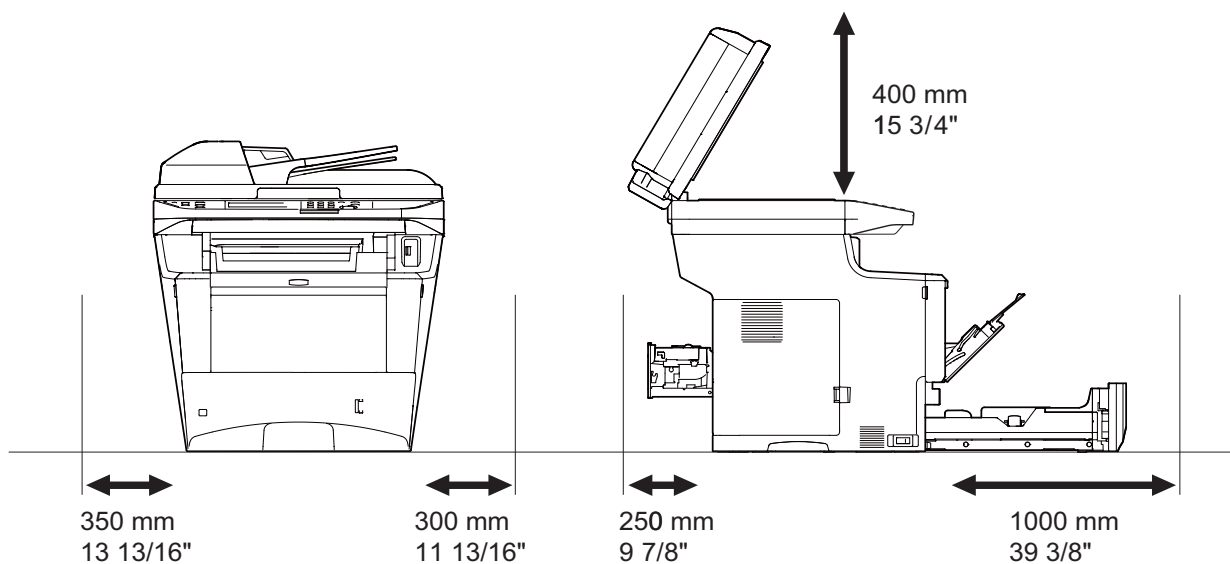


Figure 1-2-1

# 1-2-2 Unpacking

## (1) Unpacking

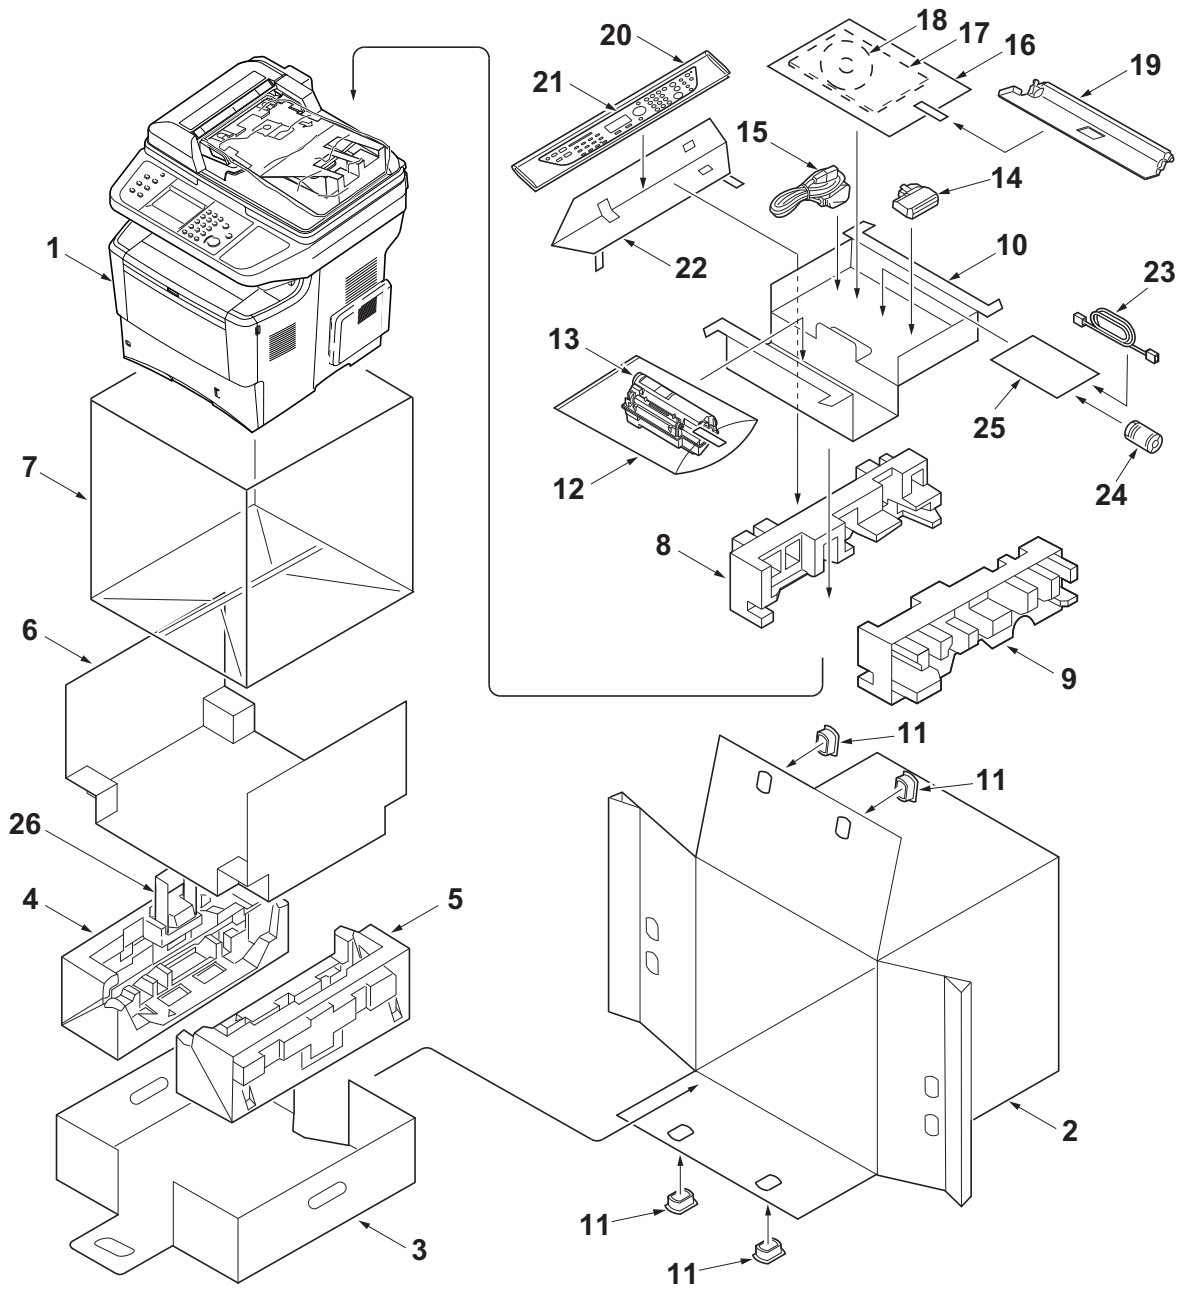


Figure 1-2-2

- |                   |                             |                           |
|-------------------|-----------------------------|---------------------------|
| 1. Machine        | 10. Accessory spacer        | 19. Cassette cover        |
| 2. Outer case     | 11. Hinge joints            | 20. Plastic bag (250×600) |
| 3. Bottom case    | 12. Plastic bag (250×600)   | 21. Operation labels      |
| 4. Bottom pad L   | 13. Toner container         | 22. Operation label pad   |
| 5. Bottom pad R   | 14. Waste toner box         | 23. Modular cable *       |
| 6. Machine spacer | 15. Power cord              | 24. Ferrite core          |
| 7. Machine cover  | 16. Plastic bag (240×350)   | 25. Plastic bag           |
| 8. Top pad L      | 17. Installation guide etc. | 26. Machine spacer B      |
| 9. Top pad R      | 18. CD-ROM *                |                           |

\* 120V/240V AC model only.

## (2) Removing the tapes

### <Procedure>

1. Remove the tape.

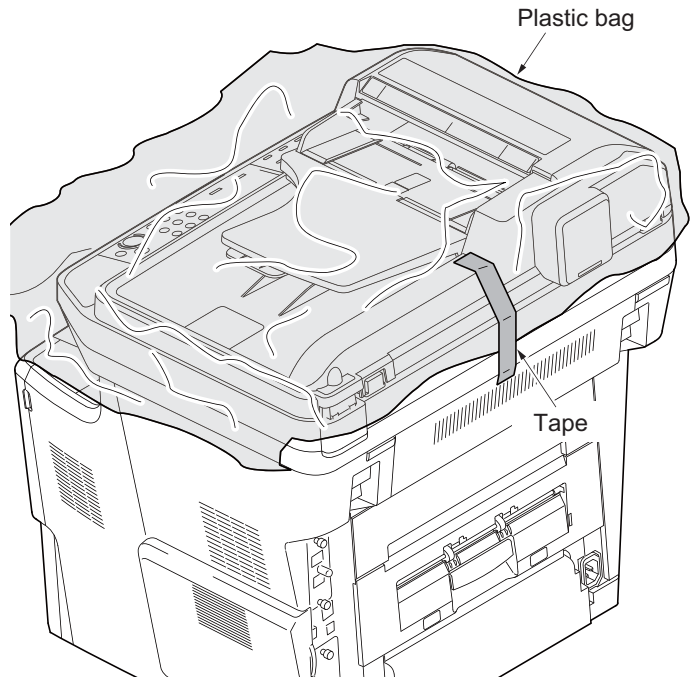


Figure 1-2-3

2. Open the DP.
3. Remove the plastic bag by pulling upwards.
4. Remove two tapes.
5. Remove the sheet and paper.

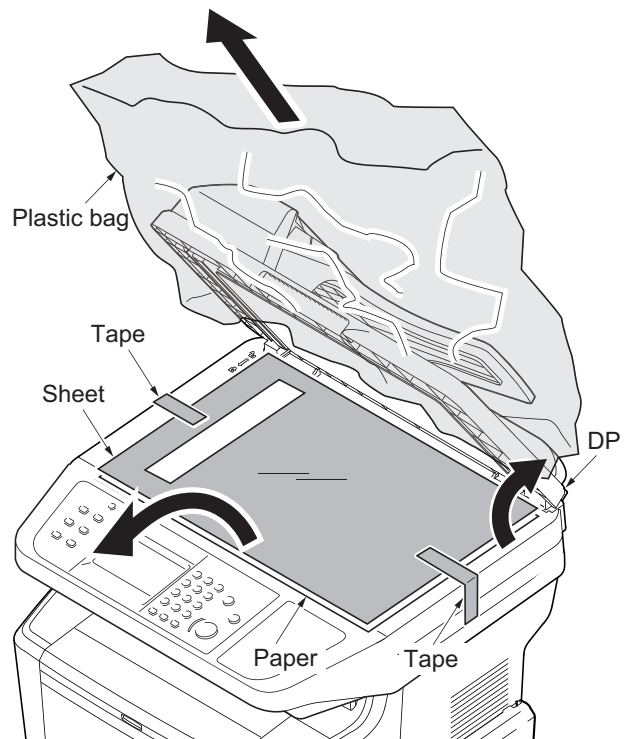


Figure 1-2-4

6. Remove the tape A.
7. Move the lock lever to the position of release.
- \* : When turning on power if the lock lever is not released, the error message is displayed.
8. Close the DP.
9. Remove ten tapes B.
10. Open the left side cover and then remove the tape C and spacer.
11. Close the left side cover.

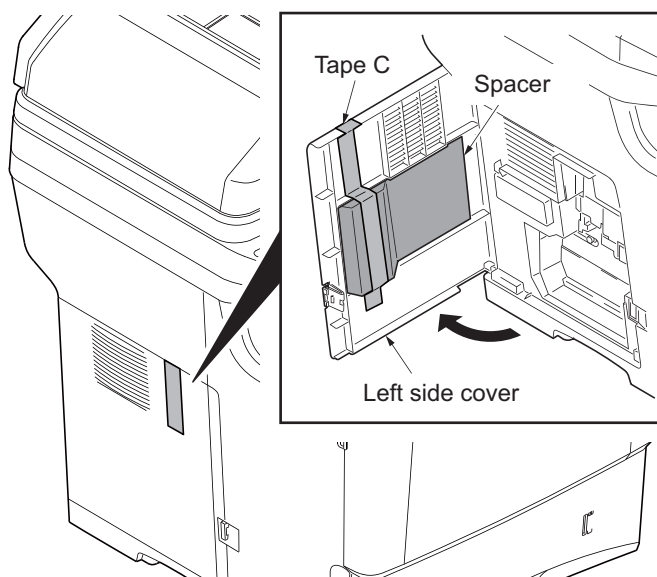
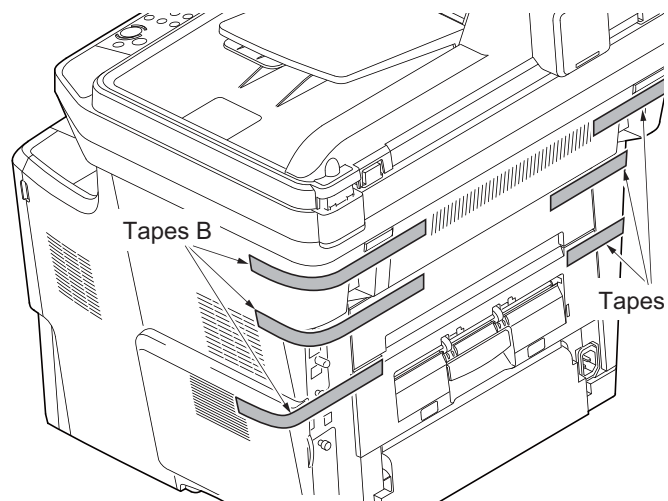
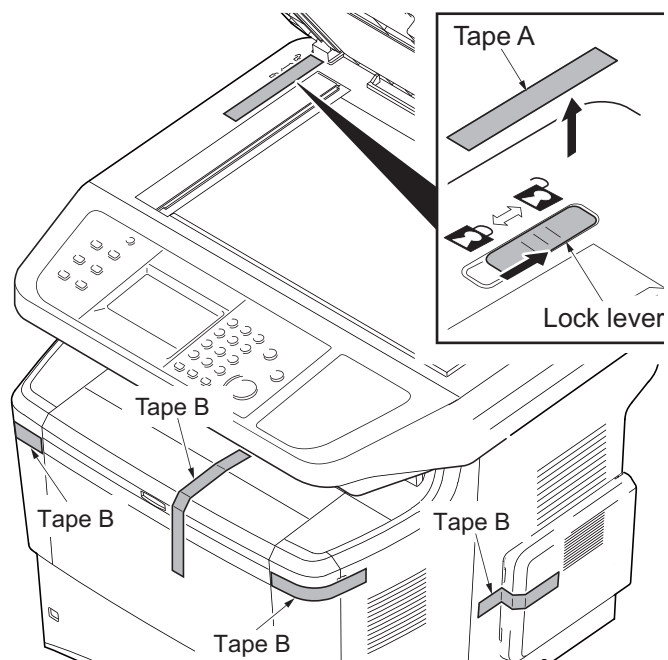


Figure 1-2-5

12. Remove the tape.

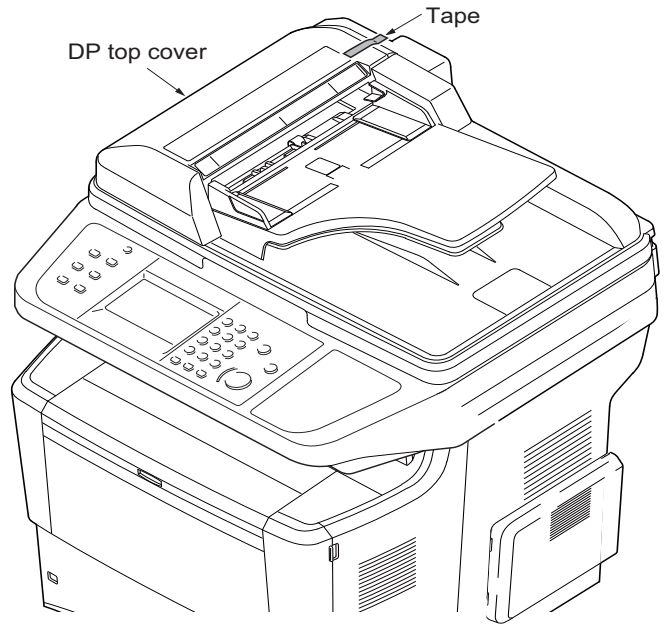


Figure 1-2-6

13. Remove the protection film.

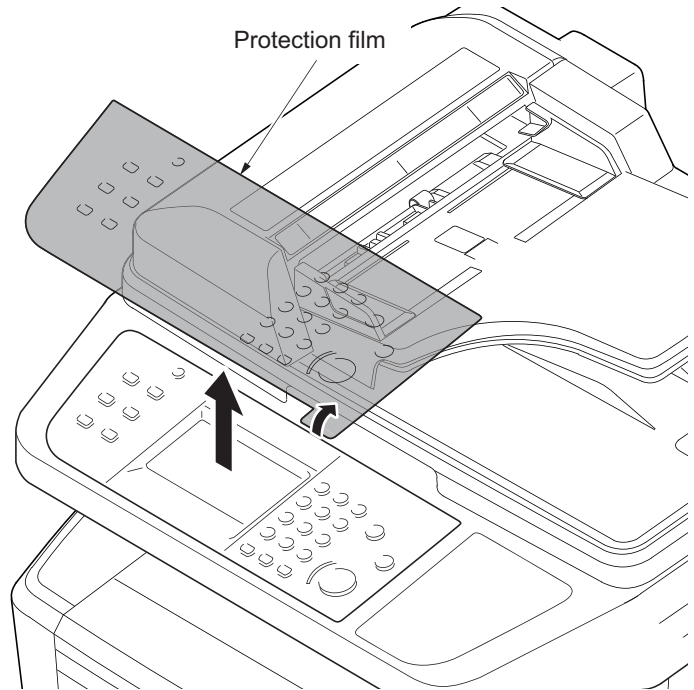


Figure 1-2-7

- 14. Open the front cover.
- 15. Remove the tape and pad.

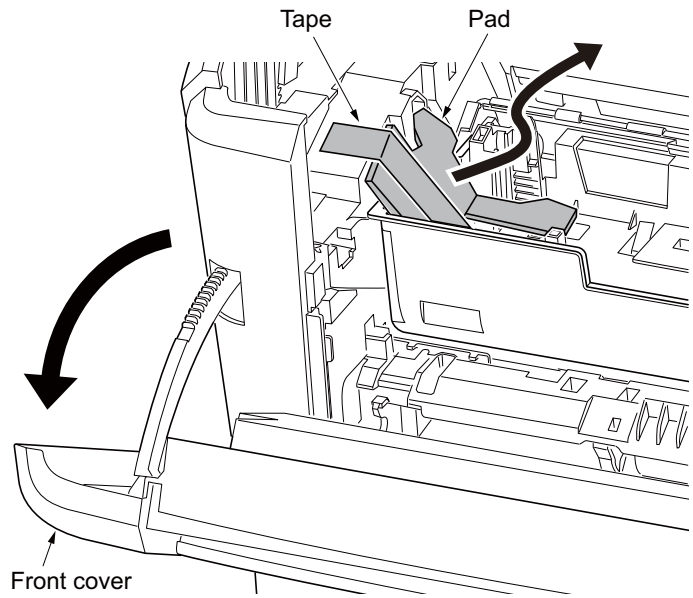


Figure 1-2-8

- 16. Remove the tape.
- 17. Close the front cover.

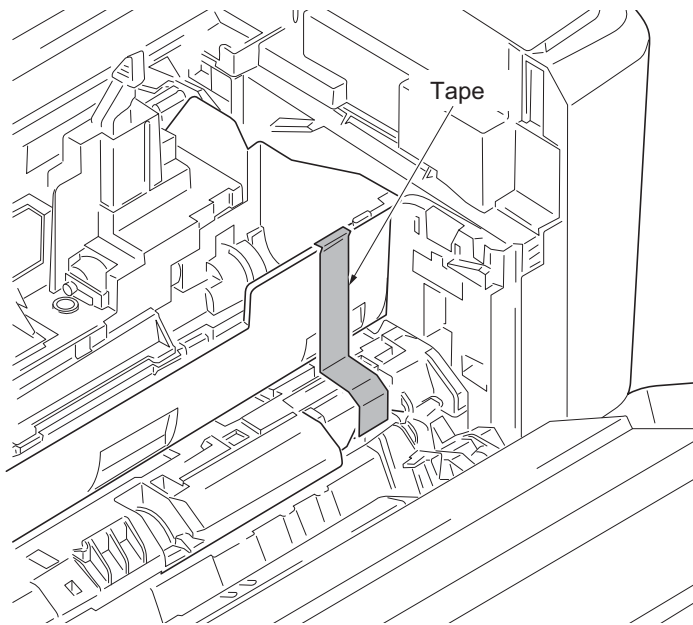


Figure 1-2-9



## 1-2-3 Installing the expansion memory (option)

### <Procedure>

1. Turn off the main power switch.  
Caution: Do not insert or remove expansion memory while machine power is on.  
Doing so may cause damage to the machine and the expansion memory.
2. Remove the right side cover.

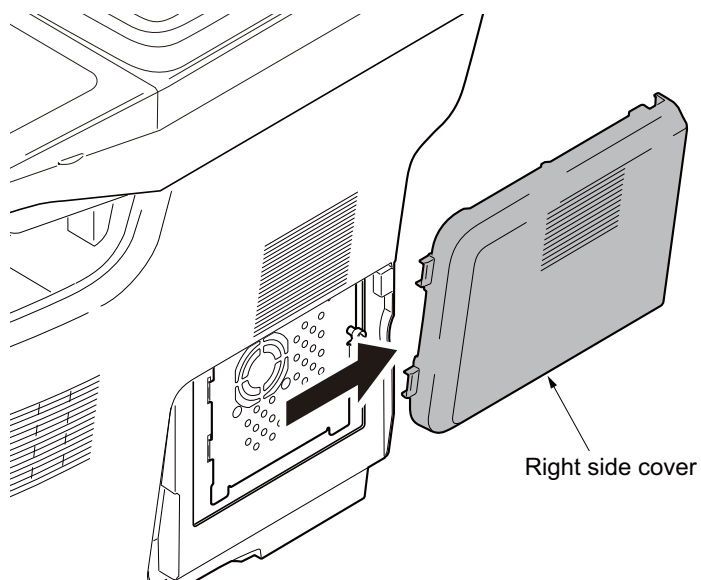


Figure 1-2-10

3. Remove the screw.
4. Open the memory slot cover and then remove the connector of the controller fan motor.
5. Remove the memory slot cover.
6. Insert the expansion memory into the memory socket so that the notches on the memory align with the corresponding protrusions in the slot.
7. Connect the connector of the controller fan motor and then close the memory slot cover.
8. Secure the screw.
9. Refit the right side cover.
10. Print a status page to check the memory expansion.

If memory expansion has been properly performed, information on the installed memory is printed with the total memory capacity has been increased. Standard memory capacity 256 MB.



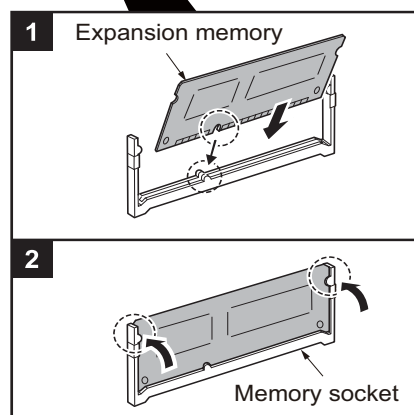


Figure 1-2-11

## 1-2-4 Installing the memory card (option)

### <Procedure>

1. Turn off the main power switch.  
Caution: Do not insert or remove memory card while machine power is on. Doing so may cause damage to the machine and the memory card.
2. Remove two screws and then remove the option interface slot cover.
3. Install the memory card into the option interface slot.
4. Refit the option interface slot cover by two screws.

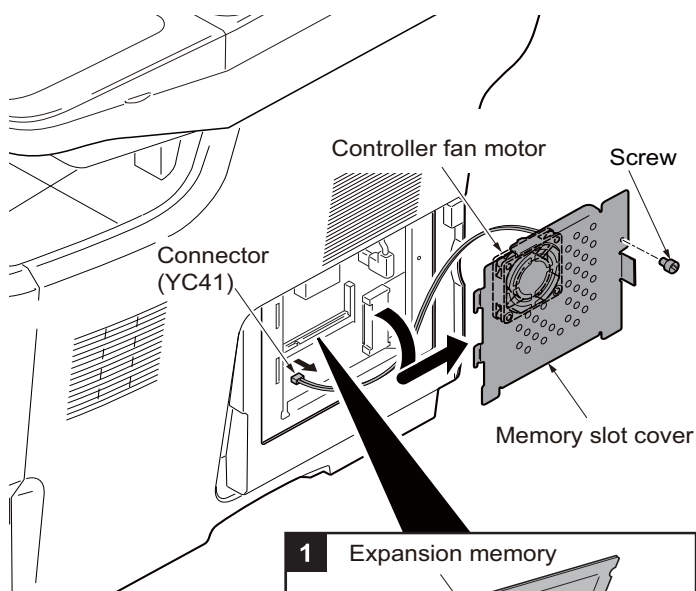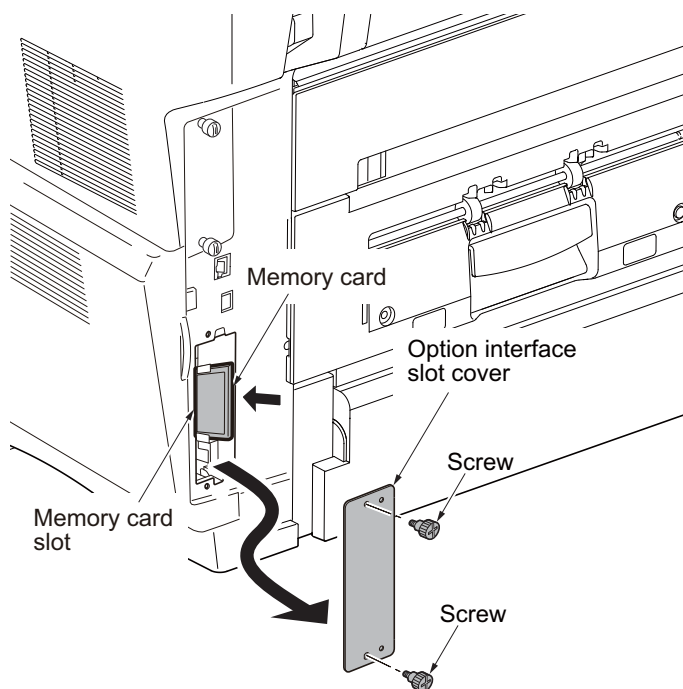


This page is intentionally left blank.



## 1-3-1 Maintenance mode

The machine is equipped with a maintenance function which can be used to maintain and service the machine.

### (1) Executing a maintenance item

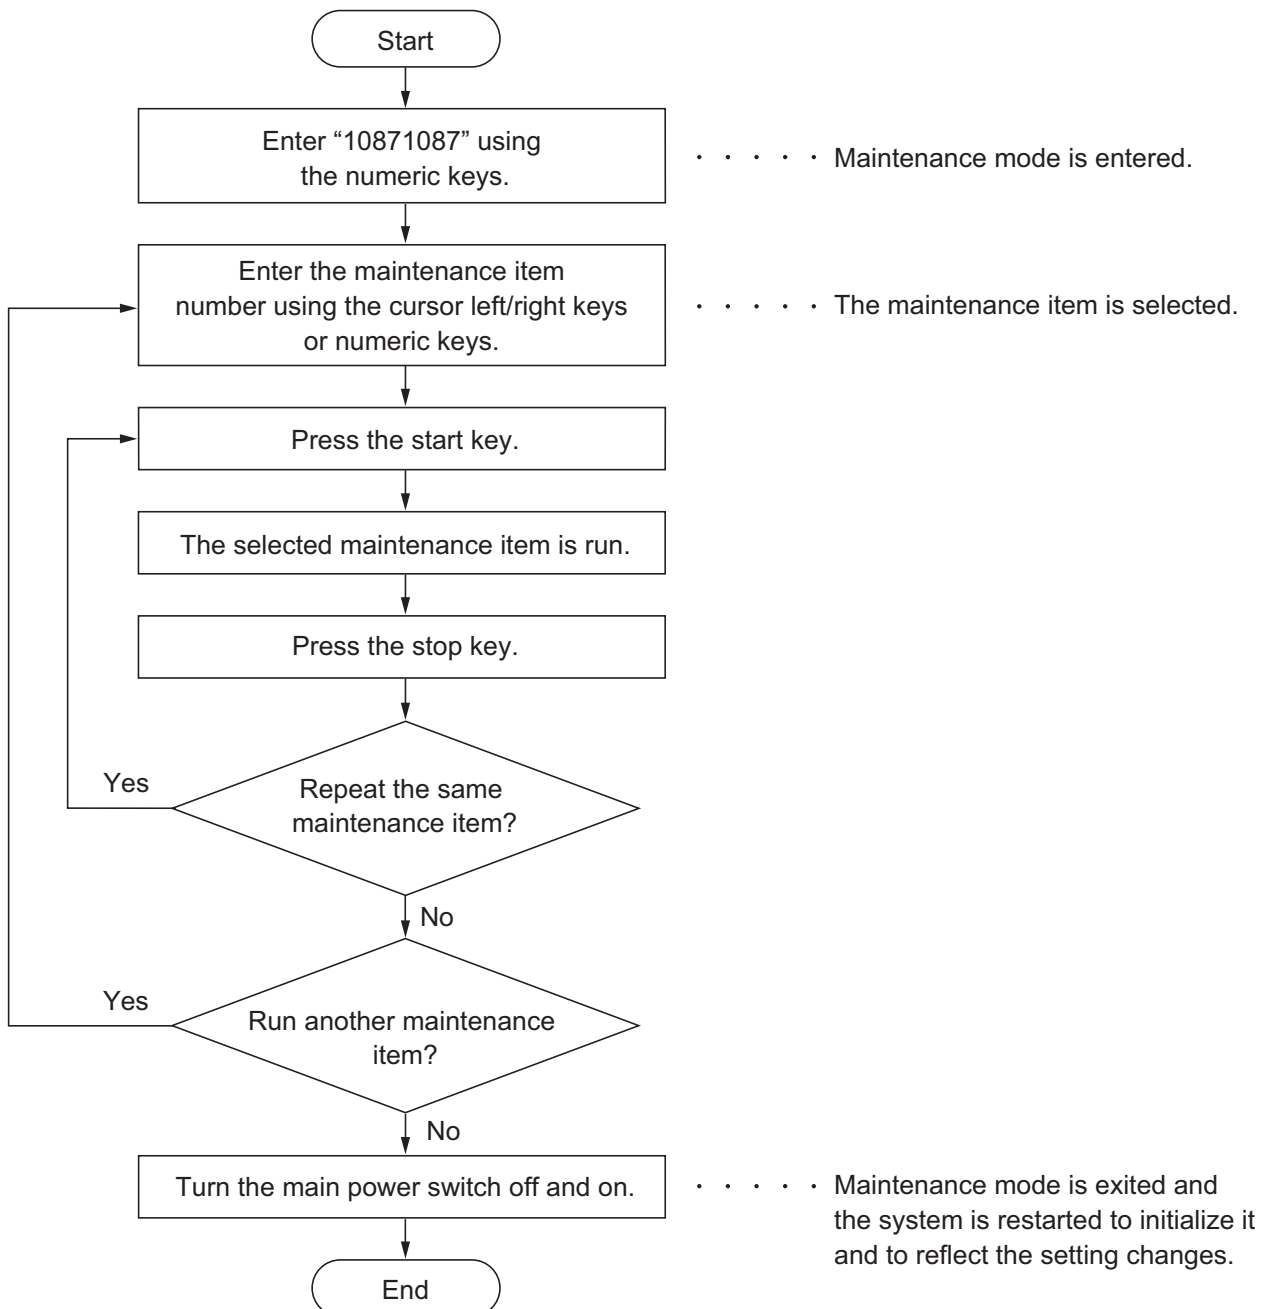

**(2) Maintenance modes item list**

Section	Item No.	Content of maintenance item	Initial setting	
General	U000	Outputting an own-status report	-	
	U002	Setting the factory default data	-	
	U004	Setting the machine number	-	
Operation panel and support equipment	U201	Initializing the touch panel	-	
	U203	Checking DP operation	-	
	U222	Setting the IC card type	Other	
	U224	Panel sheet extension	-	
Mode setting	U250	Setting the maintenance cycle	100000	
	U251	Checking/clearing the maintenance count	-	
	U253	Switching between double and single counts	Double count	
	U260	Selecting the timing for copy counting	EJECT	
	U285	Setting service status page	ON	
	U332	Setting the size conversion factor	1.0	
	U345	Setting the value for maintenance due indication	0	
Image processing	U411	Adjusting the scanner automatically	-	
	U425	Setting the target	-	
Fax	U600	Initializing all data	-	
	U601	Initializing permanent data	-	
	U603	Setting user data 1	DTMF	
	U604	Setting user data 2	2 (120 V) 1 (220-240 V)	
	U605	Clearing data	-	
	U610	Setting system 1		
		Setting the number of lines to be ignored when receiving a fax at 100% magnification		3
		Setting the number of lines to be ignored when receiving a fax in the auto reduction mode		0
U611	Setting the number of lines to be ignored when receiving a fax (A4R/LetterR) in the auto reduction mode		0	
	Setting system 2			
	Setting the number of adjustment lines for automatic reduction		7	
	Setting the number of adjustment lines for automatic reduction when A4 paper is set		22	
	Setting the number of adjustment lines for automatic reduction when letter size paper is set		26	

Section	Item No.	Content of maintenance item	Initial setting
Fax	U612	Setting system 3 Selecting if auto reduction in the auxiliary direction is to be performed	ON
		Setting the automatic printing of the protocol list	OFF
	U620	Setting the remote switching mode	ONE
	U625	Setting the transmission system 1 Setting the auto redialing interval	3 (120 V) 2 (220-240 V)
		Setting the auto redialing interval	2 (120 V) 3 (220-240 V)
	U630	Setting communication control 1 Setting the communication starting speed	14400bps/V17 14400bps
		Setting the reception speed	300
		Setting the waiting period to prevent echo problems at the sender	75
		Setting the waiting period to prevent echo problems at the receiver	
	U631	Setting communication control 2 Setting ECM transmission	ON
Setting ECM reception		ON	
Setting the frequency of the CED signal		2100	
U632	Setting communication control 3 Setting the DIS signal to 4 bytes	OFF	
	Setting the short protocol transmission	ON	
	Setting the reception of a short protocol transmission	ON	
	Setting the CNG detection times in the fax/telephone auto select mode	2TIME	
U633	Setting communication control 4 Enabling/disabling V.34 communication	ON	
	Setting the V.34 symbol speed (3429 Hz)	ON	
	Setting the number of times of DIS signal reception	ONCE	
	Setting the reference for RTN signal output	15%	
U634	Setting communication control 5	0	
U640	Setting communication time 1 Setting the one-shot detection time for remote switching	7	
	Setting the continuous detection time for remote switching	80	
U641	Setting communication time 2 Setting the T0 time-out time	56	
	Setting the T1 time-out time	36	
	Setting the T2 time-out time	69	
	Setting the Ta time-out time	30	
	Setting the Tb1 time-out time	20	
	Setting the Tb2 time-out time	80	
	Setting the Tc time-out time	60	
	Setting the Td time-out time	9 (120 V) 6 (220-240 V)	

Section	Item No.	Content of maintenance item	Initial setting
Fax	U650	Setting modem 1 Setting the G3 transmission cable equalizer Setting the G3 reception cable equalizer Setting the modem detection level	0dB 0dB 43dBm
	U651	Setting modem 2 Modem output level  DTMF output level (main value)  DTMF output level (level difference)	9 (120 V) 10 (220-240 V) 5 (120 V) 10.5 (220-240 V) 2 (120 V) 2.5 (220-240 V)
	U660	Setting the NCU Setting the connection to PBX/PSTN Setting PSTN dial tone detection Setting busy tone detection Setting for a PBX Setting the loop current detection before dialing	PSTN ON ON LOOP ON
	U670	Outputting lists	-
	U695	FAX function customize	ON/OFF
	U699	Setting the software switches	-
	Others	U910	Clearing the black ratio data
U917		Setting backup data reading/writing	-
U927		Clearing the all copy counts and machine life counts (one time only)	-
U977		Data capture mode	-



**(3) Contents of the maintenance mode items**

Item No.	Description																
U000	<p data-bbox="287 286 702 320"><b>Outputting an own-status report</b></p> <p data-bbox="287 353 438 387"><b>Description</b></p> <p data-bbox="287 392 1425 526">Outputs lists of the current settings of the maintenance items and paper jam and service call occurrences. Outputs the event log. Also sends output data to the USB memory. Printing a report is disabled either when a job is remaining in the buffer or when [Pause All Print Jobs] is pressed to halt printing.</p> <p data-bbox="287 530 399 564"><b>Purpose</b></p> <p data-bbox="287 566 1433 667">To check the current setting of the maintenance items, or paper jam or service call occurrences. Before initializing or replacing the backup RAM, output a list of the current settings of the maintenance items to reenter the settings after initialization or replacement.</p> <p data-bbox="287 701 391 734"><b>Method</b></p> <ol data-bbox="303 736 670 801" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be output.</li> </ol> <table border="1" data-bbox="335 813 1401 1008"> <thead> <tr> <th data-bbox="339 819 639 864">Display</th> <th data-bbox="639 819 1396 864">Output list</th> </tr> </thead> <tbody> <tr> <td data-bbox="339 864 639 909">MAINTENANCE</td> <td data-bbox="639 864 1396 909">List of the current settings of the maintenance modes</td> </tr> <tr> <td data-bbox="339 909 639 954">EVENT</td> <td data-bbox="639 909 1396 954">Outputs the event log</td> </tr> <tr> <td data-bbox="339 954 639 999">ALL</td> <td data-bbox="639 954 1396 999">Outputs the all reports</td> </tr> </tbody> </table> <ol data-bbox="303 1014 746 1048" style="list-style-type: none"> <li>3. Press the start key. A list is output.</li> </ol> <p data-bbox="287 1081 726 1115"><b>Method: Send to the USB memory</b></p> <ol data-bbox="303 1117 1425 1395" style="list-style-type: none"> <li>1. Press the power key on the operation panel, and after verifying the main power indicator has gone off, switch off the main power switch.</li> <li>2. Insert USB memory in USB memory slot.</li> <li>3. Turn the main power switch on.</li> <li>4. Enter the maintenance item.</li> <li>5. Press the start key.</li> <li>6. Select the item to be send.</li> <li>7. Select [TEXT] or [HTML].</li> </ol> <table border="1" data-bbox="335 1406 1401 1601"> <thead> <tr> <th data-bbox="339 1413 639 1458">Display</th> <th data-bbox="639 1413 1396 1458">Output list</th> </tr> </thead> <tbody> <tr> <td data-bbox="339 1458 639 1503">Print</td> <td data-bbox="639 1458 1396 1503">Outputs the report</td> </tr> <tr> <td data-bbox="339 1503 639 1547">USB (TEXT)</td> <td data-bbox="639 1503 1396 1547">Sends output data to the USB memory (text type)</td> </tr> <tr> <td data-bbox="339 1547 639 1592">USB (HTML)</td> <td data-bbox="639 1547 1396 1592">Sends output data to the USB memory (HTML type)</td> </tr> </tbody> </table> <ol data-bbox="303 1608 805 1675" style="list-style-type: none"> <li>8. Press the start key. Output will be sent to the USB memory.</li> </ol> <p data-bbox="287 1709 438 1742"><b>Completion</b></p> <p data-bbox="287 1744 1257 1778">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Output list	MAINTENANCE	List of the current settings of the maintenance modes	EVENT	Outputs the event log	ALL	Outputs the all reports	Display	Output list	Print	Outputs the report	USB (TEXT)	Sends output data to the USB memory (text type)	USB (HTML)	Sends output data to the USB memory (HTML type)
Display	Output list																
MAINTENANCE	List of the current settings of the maintenance modes																
EVENT	Outputs the event log																
ALL	Outputs the all reports																
Display	Output list																
Print	Outputs the report																
USB (TEXT)	Sends output data to the USB memory (text type)																
USB (HTML)	Sends output data to the USB memory (HTML type)																

Item No.	Description																																																																																																																																																																																																											
U000	<p data-bbox="288 241 411 271"><b>Event log</b></p> <div data-bbox="323 304 1396 1608" style="border: 1px solid black; padding: 10px;"> <p data-bbox="355 331 576 376"><b>Event Log</b></p> <p data-bbox="355 383 411 407">MFP</p> <p data-bbox="1153 383 1361 407">(2) 06/Apr/2010 08:40</p> <p data-bbox="347 439 831 463">(1) Firmware version 2LX_2000.000.000 2010.04.06</p> <p data-bbox="979 421 1361 468">(3) [XXXXXXXX] (4) [XXXXXXXX] (5) [XXXXXXXX]</p> <hr/> <div style="display: flex; justify-content: space-between;"> <div data-bbox="355 506 790 940"> <p data-bbox="355 506 555 530"><b>(7) Paper Jam Log</b></p> <table border="1"> <thead> <tr> <th>#</th> <th>Count.</th> <th>Event Descriptions</th> </tr> </thead> <tbody> <tr><td>16</td><td>1876543</td><td>10.01.08.01.01</td></tr> <tr><td>15</td><td>166554</td><td>10.01.08.01.02</td></tr> <tr><td>14</td><td>4988</td><td>10.01.08.01.01</td></tr> <tr><td>13</td><td>4988</td><td>10.01.08.01.02</td></tr> <tr><td>12</td><td>4988</td><td>10.01.08.01.01</td></tr> <tr><td>11</td><td>4988</td><td>10.01.08.01.02</td></tr> <tr><td>10</td><td>1103</td><td>10.01.08.01.01</td></tr> <tr><td>9</td><td>1103</td><td>10.01.08.01.02</td></tr> <tr><td>8</td><td>1103</td><td>10.01.08.01.01</td></tr> <tr><td>7</td><td>1103</td><td>10.01.08.01.02</td></tr> <tr><td>6</td><td>1027</td><td>10.01.08.01.01</td></tr> <tr><td>5</td><td>1027</td><td>10.01.08.01.02</td></tr> <tr><td>4</td><td>1027</td><td>10.01.08.01.01</td></tr> <tr><td>3</td><td>1027</td><td>10.01.08.01.02</td></tr> <tr><td>2</td><td>406</td><td>10.01.08.01.01</td></tr> <tr><td>1</td><td>36</td><td>10.01.08.01.02</td></tr> </tbody> </table> </div> <div data-bbox="895 506 1276 745"> <p data-bbox="895 506 1110 530"><b>(8) Service Call Log</b></p> <table border="1"> <thead> <tr> <th>#</th> <th>Count.</th> <th>Service Code</th> </tr> </thead> <tbody> <tr><td>8</td><td>1881214</td><td>01.0030</td></tr> <tr><td>7</td><td>178944</td><td>01.1010</td></tr> <tr><td>6</td><td>5296</td><td>01.4000</td></tr> <tr><td>5</td><td>5295</td><td>01.3100</td></tr> <tr><td>4</td><td>2099</td><td>01.2000</td></tr> <tr><td>3</td><td>1054</td><td>01.2000</td></tr> <tr><td>2</td><td>809</td><td>01.2500</td></tr> <tr><td>1</td><td>30</td><td>01.2500</td></tr> </tbody> </table> </div> <div data-bbox="895 761 1197 1001"> <p data-bbox="895 761 1121 786"><b>(9) Maintenance Log</b></p> <table border="1"> <thead> <tr> <th>#</th> <th>Count.</th> <th>Item</th> </tr> </thead> <tbody> <tr><td>8</td><td>1045571</td><td>01.00</td></tr> <tr><td>7</td><td>104511</td><td>01.00</td></tr> <tr><td>6</td><td>7045</td><td>01.00</td></tr> <tr><td>5</td><td>3454</td><td>01.00</td></tr> <tr><td>4</td><td>3454</td><td>02.00</td></tr> <tr><td>3</td><td>3454</td><td>02.00</td></tr> <tr><td>2</td><td>417</td><td>02.00</td></tr> <tr><td>1</td><td>34</td><td>02.20</td></tr> </tbody> </table> </div> <div data-bbox="887 1014 1197 1182"> <p data-bbox="887 1014 1150 1039"><b>(10) Unknown toner Log</b></p> <table border="1"> <thead> <tr> <th>#</th> <th>Count.</th> <th>Item</th> </tr> </thead> <tbody> <tr><td>5</td><td>3454</td><td>01.00</td></tr> <tr><td>4</td><td>3454</td><td>01.00</td></tr> <tr><td>3</td><td>3454</td><td>01.00</td></tr> <tr><td>2</td><td>406</td><td>01.00</td></tr> <tr><td>1</td><td>32</td><td>01.00</td></tr> </tbody> </table> </div> </div> <div style="margin-top: 20px;"> <p data-bbox="523 994 807 1039"><b>10.01.08.01.01</b></p> <p data-bbox="531 1039 799 1064">(a) (b) (c) (d) (e)</p> </div> <div data-bbox="339 1198 909 1500"> <p data-bbox="339 1198 523 1223"><b>(11) Counter Log</b></p> <table border="1"> <thead> <tr> <th>(f)</th> <th>J0010:000</th> <th>J0030:000</th> <th>(g)</th> <th>C0030:001</th> <th>C2000:001</th> <th>(h)</th> <th>M00:01</th> </tr> </thead> <tbody> <tr> <td></td> <td>J0011:000</td> <td>J0031:000</td> <td></td> <td>C0070:001</td> <td>C2200:001</td> <td></td> <td>M00:01</td> </tr> <tr> <td></td> <td>J0012:000</td> <td>J0032:000</td> <td></td> <td>C0100:001</td> <td>C3100:001</td> <td></td> <td></td> </tr> <tr> <td></td> <td>J0020:000</td> <td>J0040:000</td> <td></td> <td>C0120:001</td> <td>C3200:001</td> <td></td> <td></td> </tr> <tr> <td></td> <td>J0021:002</td> <td>J0041:002</td> <td></td> <td>C0130:001</td> <td>C3300:001</td> <td></td> <td></td> </tr> <tr> <td></td> <td>.</td> <td>.</td> <td></td> <td>.</td> <td>.</td> <td></td> <td></td> </tr> <tr> <td></td> <td>.</td> <td>.</td> <td></td> <td>.</td> <td>.</td> <td></td> <td></td> </tr> <tr> <td></td> <td>.</td> <td>.</td> <td></td> <td>.</td> <td>.</td> <td></td> <td></td> </tr> <tr> <td></td> <td>.</td> <td>.</td> <td></td> <td>.</td> <td>.</td> <td></td> <td></td> </tr> <tr> <td></td> <td>.</td> <td>.</td> <td></td> <td>.</td> <td>.</td> <td></td> <td></td> </tr> </tbody> </table> </div> <p data-bbox="1086 1554 1353 1579">(6) [XXXXXXXXXXXXXXXXXXXX]</p> </div>	#	Count.	Event Descriptions	16	1876543	10.01.08.01.01	15	166554	10.01.08.01.02	14	4988	10.01.08.01.01	13	4988	10.01.08.01.02	12	4988	10.01.08.01.01	11	4988	10.01.08.01.02	10	1103	10.01.08.01.01	9	1103	10.01.08.01.02	8	1103	10.01.08.01.01	7	1103	10.01.08.01.02	6	1027	10.01.08.01.01	5	1027	10.01.08.01.02	4	1027	10.01.08.01.01	3	1027	10.01.08.01.02	2	406	10.01.08.01.01	1	36	10.01.08.01.02	#	Count.	Service Code	8	1881214	01.0030	7	178944	01.1010	6	5296	01.4000	5	5295	01.3100	4	2099	01.2000	3	1054	01.2000	2	809	01.2500	1	30	01.2500	#	Count.	Item	8	1045571	01.00	7	104511	01.00	6	7045	01.00	5	3454	01.00	4	3454	02.00	3	3454	02.00	2	417	02.00	1	34	02.20	#	Count.	Item	5	3454	01.00	4	3454	01.00	3	3454	01.00	2	406	01.00	1	32	01.00	(f)	J0010:000	J0030:000	(g)	C0030:001	C2000:001	(h)	M00:01		J0011:000	J0031:000		C0070:001	C2200:001		M00:01		J0012:000	J0032:000		C0100:001	C3100:001				J0020:000	J0040:000		C0120:001	C3200:001				J0021:002	J0041:002		C0130:001	C3300:001				.	.		.	.				.	.		.	.				.	.		.	.				.	.		.	.				.	.		.	.		
#	Count.	Event Descriptions																																																																																																																																																																																																										
16	1876543	10.01.08.01.01																																																																																																																																																																																																										
15	166554	10.01.08.01.02																																																																																																																																																																																																										
14	4988	10.01.08.01.01																																																																																																																																																																																																										
13	4988	10.01.08.01.02																																																																																																																																																																																																										
12	4988	10.01.08.01.01																																																																																																																																																																																																										
11	4988	10.01.08.01.02																																																																																																																																																																																																										
10	1103	10.01.08.01.01																																																																																																																																																																																																										
9	1103	10.01.08.01.02																																																																																																																																																																																																										
8	1103	10.01.08.01.01																																																																																																																																																																																																										
7	1103	10.01.08.01.02																																																																																																																																																																																																										
6	1027	10.01.08.01.01																																																																																																																																																																																																										
5	1027	10.01.08.01.02																																																																																																																																																																																																										
4	1027	10.01.08.01.01																																																																																																																																																																																																										
3	1027	10.01.08.01.02																																																																																																																																																																																																										
2	406	10.01.08.01.01																																																																																																																																																																																																										
1	36	10.01.08.01.02																																																																																																																																																																																																										
#	Count.	Service Code																																																																																																																																																																																																										
8	1881214	01.0030																																																																																																																																																																																																										
7	178944	01.1010																																																																																																																																																																																																										
6	5296	01.4000																																																																																																																																																																																																										
5	5295	01.3100																																																																																																																																																																																																										
4	2099	01.2000																																																																																																																																																																																																										
3	1054	01.2000																																																																																																																																																																																																										
2	809	01.2500																																																																																																																																																																																																										
1	30	01.2500																																																																																																																																																																																																										
#	Count.	Item																																																																																																																																																																																																										
8	1045571	01.00																																																																																																																																																																																																										
7	104511	01.00																																																																																																																																																																																																										
6	7045	01.00																																																																																																																																																																																																										
5	3454	01.00																																																																																																																																																																																																										
4	3454	02.00																																																																																																																																																																																																										
3	3454	02.00																																																																																																																																																																																																										
2	417	02.00																																																																																																																																																																																																										
1	34	02.20																																																																																																																																																																																																										
#	Count.	Item																																																																																																																																																																																																										
5	3454	01.00																																																																																																																																																																																																										
4	3454	01.00																																																																																																																																																																																																										
3	3454	01.00																																																																																																																																																																																																										
2	406	01.00																																																																																																																																																																																																										
1	32	01.00																																																																																																																																																																																																										
(f)	J0010:000	J0030:000	(g)	C0030:001	C2000:001	(h)	M00:01																																																																																																																																																																																																					
	J0011:000	J0031:000		C0070:001	C2200:001		M00:01																																																																																																																																																																																																					
	J0012:000	J0032:000		C0100:001	C3100:001																																																																																																																																																																																																							
	J0020:000	J0040:000		C0120:001	C3200:001																																																																																																																																																																																																							
	J0021:002	J0041:002		C0130:001	C3300:001																																																																																																																																																																																																							
	.	.		.	.																																																																																																																																																																																																							
	.	.		.	.																																																																																																																																																																																																							
	.	.		.	.																																																																																																																																																																																																							
	.	.		.	.																																																																																																																																																																																																							
	.	.		.	.																																																																																																																																																																																																							

Figure 1-3-1

Item No.	Description				
U000	<b>Detail of event log</b>				
	<b>No.</b>	<b>Items</b>	<b>Description</b>		
	(1)	System version			
	(2)	System date			
	(3)	Engine soft version			
	(4)	Engine boot version			
	(5)	Operation panel mask version			
	(6)	Machine serial number			
	(7)	Paper Jam Log	#	Count.	Event
			Remembers 1 to 16 of occurrence. If the occurrence of the previous paper jam is less than 16, all of the paper jams are logged. When the occurrence exceeds 16, the oldest occurrence is removed.	The total page count at the time of the paper jam.	Log code (2 digit, hexadecimal, 5 categories)  (a) Cause of a paper jam (b) Paper source (c) Paper size (d) Paper type (e) Paper eject
(a) Cause of paper jam (Hexadecimal)					
<p>Refer to P.1-4-1 for paper jam location</p> <p>10: Paper does not arrive at the registration sensor. (MP tray)</p> <p>10: Paper does not arrive at the registration sensor. (Cassette)</p> <p>10: Paper does not arrive at the registration sensor. (Paper feeder)</p> <p>10: Paper does not arrive at the registration sensor. (Duplex)</p> <p>11: Paper does not pass the registration sensor</p> <p>12: Paper remains at the registration sensor when power is turned on.</p> <p>20: Paper does not arrive at the eject sensor.</p> <p>21: Paper does not pass the eject sensor.</p> <p>22: Paper remains at the eject sensor when power is turned on.</p> <p>30: Paper does not arrive at the PF paper feed sensor 1. (Paper feeder 1)</p> <p>30: Paper does not arrive at the PF paper feed sensor 1. (Paper feeder 2)</p> <p>31: Paper does not pass the PF paper feed sensor 1. (Paper feeder 1)</p> <p>32: Paper remains at the PF paper feed sensor 1 when power is turned on. (Paper feeder 1)</p> <p>40: Paper does not arrive at the PF paper feed sensor 2. (Paper feeder 2)</p> <p>41: Paper does not pass the PF paper sensor 2.(Paper feeder 2)</p> <p>42: Paper remains at the PF paper feed sensor 2 when power is turned on. (Paper feeder 2)</p> <p>50: Paper does not arrive at the PF paper feed sensor 3. (Paper feeder 3)</p> <p>51: Paper does not pass the PF paper sensor 3.(Paper feeder 3)</p> <p>52: Paper remains at the PF paper feed sensor 3 when power is turned on. (Paper feeder 3)</p>					

Item No.	Description				
U000	<b>No.</b>	<b>Items</b>	<b>Description</b>		
	(7) cont.	Paper Jam Log	70: No original feed 71: An original jam in the original conveying section 1. 72: An original jam in the original conveying section 2. 73: An original jam in the original switchback section. 74: An original jam in the original switchback/feed section. 78: Top cover open. A1: Paper does not arrive at the duplex sensor. A2: Paper does not pass the duplex sensor. A3: Paper does not arrive at the duplex jam sensor. A4: Paper does not pass the duplex jam sensor. A5: Paper remains at the duplex sensor or the duplex jam sensor when power is turned on. E0: Paper misfeed occurs due to forced stop when an error occurs during printing. F0: Paper does not arrive at the paper full sensor. F1: Paper misfeed by system error. F2: Paper misfeed by system error.		
	(b) Detail of paper source (Hexadecimal)				
	00: MP tray 01: Cassette 1 02: Cassette 2 (paper feeder 1) 03: Cassette 3 (paper feeder 2) 04: Cassette 4 (paper feeder 3) 05 to 09: Reserved				
	(c) Detail of paper size (Hexadecimal)				
<table border="0"> <tbody> <tr> <td data-bbox="576 1245 855 1984">           00: (Not specified)            01: Monarch            02: Business            03: International DL            04: International C5            05: Executive            06: Letter-R            86: Letter-E            07: Legal            08: A4R            88: A4E            09: B5R            89: B5E            0A: A3         </td> <td data-bbox="855 1245 1134 1984">           0B: B4            0C: Ledger            0D: A5R            0E: A6            0F: B6            10: Commercial #9            11: Commercial #6            12: ISO B5            13: Custom size            1E: C4            1F: Postcard            20: Reply-paid post-                card            21: Oficio II         </td> <td data-bbox="1134 1245 1439 1984">           22: Special 1            23: Special 2            24: A3 wide            25: Ledger wide            26: Full bleed paper                (12 x 8)            27: 8K            28: 16K-R            A8: 16K-E            32: Statement-R            B2: Statement-E            33: Folio            34: Western type 2            35: Western type 4         </td> </tr> </tbody> </table>			00: (Not specified) 01: Monarch 02: Business 03: International DL 04: International C5 05: Executive 06: Letter-R 86: Letter-E 07: Legal 08: A4R 88: A4E 09: B5R 89: B5E 0A: A3	0B: B4 0C: Ledger 0D: A5R 0E: A6 0F: B6 10: Commercial #9 11: Commercial #6 12: ISO B5 13: Custom size 1E: C4 1F: Postcard 20: Reply-paid post- card 21: Oficio II	22: Special 1 23: Special 2 24: A3 wide 25: Ledger wide 26: Full bleed paper (12 x 8) 27: 8K 28: 16K-R A8: 16K-E 32: Statement-R B2: Statement-E 33: Folio 34: Western type 2 35: Western type 4
00: (Not specified) 01: Monarch 02: Business 03: International DL 04: International C5 05: Executive 06: Letter-R 86: Letter-E 07: Legal 08: A4R 88: A4E 09: B5R 89: B5E 0A: A3	0B: B4 0C: Ledger 0D: A5R 0E: A6 0F: B6 10: Commercial #9 11: Commercial #6 12: ISO B5 13: Custom size 1E: C4 1F: Postcard 20: Reply-paid post- card 21: Oficio II	22: Special 1 23: Special 2 24: A3 wide 25: Ledger wide 26: Full bleed paper (12 x 8) 27: 8K 28: 16K-R A8: 16K-E 32: Statement-R B2: Statement-E 33: Folio 34: Western type 2 35: Western type 4			

Item No.	Description				
<b>U000</b>	(7) cont. Paper Jam Log		<b>Description</b>		
			(d) Detail of paper type (Hexadecimal)		
			01: Plain 02: Transparency 03: Preprinted 04: Labels 05: Bond 06: Recycled 07: Vellum 08: Rough 09: Letterhead	0A: Color 0B: Prepunched 0C: Envelope 0D: Cardstock 0E: Coated 0F: 2nd side 10: Media 16 11: High quality	15: Custom 1 16: Custom 2 17: Custom 3 18: Custom 4 19: Custom 5 1A: Custom 6 1B: Custom 7 1C: Custom 8
			(e) Detail of paper eject location (Hexadecimal)		
	01: Face down (FD)				
	(8) Service Call Log	#	Count.	Service Code	
			Remembers 1 to 8 of occurrence of self diagnostics error. If the occurrence of the previous diagnostics error is less than 8, all of the diagnostics errors are logged.	The total page count at the time of the self diagnostics error.	Self diagnostic error code (See page 1-4-5)  Example: 01.6000  01: Self diagnostic error 6000: Self diagnostic error code number
	(9) Maintenance Log	#	Count.	Item	
			Remembers 1 to 8 of occurrence of replacement. If the occurrence of the previous replacement of toner container is less than 8, all of the occurrences of replacement are logged.	The total page count at the time of the replacement of the toner container.	Code of maintenance replacing item (1 byte, 2 categories)  First byte (Replacing item) 01: Toner container 02: Maintenance kit  Second byte (Type of replacing item) 00: Black 01: MK-350/MK-370

Item No.	Description				
<p><b>U000</b></p>	<b>No.</b>	<b>Items</b>	<b>Description</b>		
	(10)	Unknown Toner Log	<p>#</p> <p>Remembers 1 to 5 of occurrence of unknown toner detection. If the occurrence of the previous unknown toner detection is less than 5, all of the unknown toner detection are logged.</p>	<p>Count.</p> <p>The total page count at the time of the [Toner Empty] error with using an unknown toner container.</p> <p>Item</p> <p>Unknown toner log code (1 byte, 2 categories)</p> <p>First byte 01: Fixed (Toner container)</p> <p>Second byte 00: Fixed (Black)</p>	
	(11)	<p>Counter Log</p> <p>Comprised of three log counters including paper jams, self diagnostics errors, and replacement of the toner container.</p>	<p>(f) Paper jam</p> <p>Indicates the log counter of paper jams depending on location.</p> <p>Refer to Paper Jam Log.</p> <p>All instances including those are not occurred are displayed.</p>	<p>(g) Self diagnostic error</p> <p>Indicates the log counter of self diagnostics errors depending on cause.</p> <p>(See page 1-4-5)</p> <p>Example: C6000: 4</p> <p>Self diagnostics error 6000 has happened four times.</p>	<p>(h) Maintenance item replacing</p> <p>Indicates the log counter depending on the maintenance item for maintenance.</p> <p>T: Toner container 00: Black M: Maintenance kit 00: MK-350/MK-370</p> <p>Example: T00: 1 The toner container has been replaced once.</p>

Item No.	Description										
U002	<p><b>Setting the factory default data</b></p> <p><b>Description</b> Restores the machine conditions to the factory default settings.</p> <p><b>Purpose</b> To move the image scanner unit to the home position. (position in which the frame can be fixed).</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select [MODE1(ALL)].</li> <li>3. Press the start key. The image scanner returns to the home position.</li> <li>4. Turn the main power switch off and on. * : An error code is displayed in case of an initialization error. When errors occurred, turn main power switch off then on, and execute initialization using maintenance item U002.</li> </ol> <p><b>Error codes</b></p> <table border="1" data-bbox="336 875 1401 1066"> <thead> <tr> <th>Codes</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0001</td> <td>Controller error</td> </tr> <tr> <td>0020</td> <td>Engine error</td> </tr> <tr> <td>0040</td> <td>Scanner error</td> </tr> </tbody> </table>	Codes	Description	0001	Controller error	0020	Engine error	0040	Scanner error		
Codes	Description										
0001	Controller error										
0020	Engine error										
0040	Scanner error										
U004	<p><b>Setting the machine number</b></p> <p><b>Description</b> Sets or displays the machine number.</p> <p><b>Purpose</b> To check or set the machine number.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Press the start key. If the machine serial number of engine PWB matches with that of main PWB</li> </ol> <table border="1" data-bbox="349 1422 1412 1505"> <thead> <tr> <th>Display</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>MACHINE No.</td> <td>Displays the machine serial number</td> </tr> </tbody> </table> <p>If the machine serial number of engine PWB does not match with that of main PWB</p> <table border="1" data-bbox="349 1559 1412 1684"> <thead> <tr> <th>Display</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>MACHINE No. (MAIN)</td> <td>Displays the machine serial number of main</td> </tr> <tr> <td>MACHINE No.</td> <td>Displays the machine serial number of engine</td> </tr> </tbody> </table> <p><b>Setting</b> Carry out if the machine serial number does not match.</p> <ol style="list-style-type: none"> <li>1. Press [EXECUTE].</li> <li>2. Press the start key. Writing of serial No. starts.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Operation	MACHINE No.	Displays the machine serial number	Display	Operation	MACHINE No. (MAIN)	Displays the machine serial number of main	MACHINE No.	Displays the machine serial number of engine
Display	Operation										
MACHINE No.	Displays the machine serial number										
Display	Operation										
MACHINE No. (MAIN)	Displays the machine serial number of main										
MACHINE No.	Displays the machine serial number of engine										

Item No.	Description						
U201	<p data-bbox="287 241 630 275"><b>Initializing the touch panel</b></p> <p data-bbox="287 309 438 342"><b>Description</b></p> <p data-bbox="287 344 1173 378">Automatically correct the positions of the X- and Y-axes of the touch panel.</p> <p data-bbox="287 380 399 414"><b>Purpose</b></p> <p data-bbox="287 416 1268 450">To automatically correct the display positions on the touch panel after it is replaced.</p> <p data-bbox="287 483 391 517"><b>Method</b></p> <ol data-bbox="303 519 710 586" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the [Initialize] or [Check].</li> </ol> <table border="1" data-bbox="347 593 1412 719"> <thead> <tr> <th data-bbox="355 600 651 633">Display</th> <th data-bbox="651 600 1404 633">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="355 633 651 678">Initialize</td> <td data-bbox="651 633 1404 678">Adjusts the display on the panel automatically.</td> </tr> <tr> <td data-bbox="355 678 651 719">Check</td> <td data-bbox="651 678 1404 719">Checks the display on the touch panel.</td> </tr> </tbody> </table> <p data-bbox="287 763 510 797"><b>Method: Initialize</b></p> <ol data-bbox="303 799 1300 972" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Press the center of the + keys. Be sure to press three + keys displayed in order. The touch panel is adjusted automatically.</li> <li>3. Press the indicated three + keys, and then check the display.</li> <li>4. Press the stop key. The screen for selecting a maintenance item No. is displayed.</li> </ol> <p data-bbox="287 1008 486 1041"><b>Method: Check</b></p> <ol data-bbox="303 1043 1372 1180" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Press the indicated three + keys, and then check the display. When adjusting the display, press [INITIALIZE] to execute the adjustment automatically.</li> <li>3. Press the stop key. The screen for selecting a maintenance item No. is displayed.</li> </ol> <p data-bbox="287 1216 438 1249"><b>Completion</b></p> <p data-bbox="287 1252 1252 1285">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	Initialize	Adjusts the display on the panel automatically.	Check	Checks the display on the touch panel.
Display	Description						
Initialize	Adjusts the display on the panel automatically.						
Check	Checks the display on the touch panel.						



Item No.	Description																
U203	<p data-bbox="288 241 587 275"><b>Checking DP operation</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 1046 376">Simulates the original conveying operation separately in the DP.</p> <p data-bbox="288 383 400 412"><b>Purpose</b></p> <p data-bbox="288 416 612 448">To check the DP operation.</p> <p data-bbox="288 486 387 515"><b>Method</b></p> <ol data-bbox="308 519 1082 618" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Place an original in the DP if running this simulation with paper.</li> <li>3. Select the speed to be operated.</li> </ol> <table border="1" data-bbox="336 631 1401 775"> <thead> <tr> <th data-bbox="336 631 639 676">Display</th> <th data-bbox="639 631 1401 676">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 676 639 721">NORMAL SPEED</td> <td data-bbox="639 676 1401 721">Normal reading (600 dpi)</td> </tr> <tr> <td data-bbox="336 721 639 775">HIGH SPEED</td> <td data-bbox="639 721 1401 775">High-speed reading</td> </tr> </tbody> </table> <ol data-bbox="308 786 702 851" style="list-style-type: none"> <li>4. Press the start key.</li> <li>5. Select the item to be operated.</li> </ol> <table border="1" data-bbox="336 864 1401 1171"> <thead> <tr> <th data-bbox="336 864 639 909">Display</th> <th data-bbox="639 864 1401 909">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 909 639 996">CCD ADP (NON P)</td> <td data-bbox="639 909 1401 996">Without paper, single-sided original of CCD (continuous operation)</td> </tr> <tr> <td data-bbox="336 996 639 1041">CCD ADP</td> <td data-bbox="639 996 1401 1041">With paper, single-sided original of CCD</td> </tr> <tr> <td data-bbox="336 1041 639 1128">CCD RADP (NON P)</td> <td data-bbox="639 1041 1401 1128">Without paper, double-sided original of CCD (continuous operation)</td> </tr> <tr> <td data-bbox="336 1128 639 1171">CCD RADP</td> <td data-bbox="639 1128 1401 1171">With paper, double-sided original of CCD</td> </tr> </tbody> </table> <ol data-bbox="308 1187 916 1252" style="list-style-type: none"> <li>6. Press the start key. The operation starts.</li> <li>7. To stop continuous operation, press the stop key.</li> </ol> <p data-bbox="288 1290 440 1319"><b>Completion</b></p> <p data-bbox="288 1323 1254 1355">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	NORMAL SPEED	Normal reading (600 dpi)	HIGH SPEED	High-speed reading	Display	Description	CCD ADP (NON P)	Without paper, single-sided original of CCD (continuous operation)	CCD ADP	With paper, single-sided original of CCD	CCD RADP (NON P)	Without paper, double-sided original of CCD (continuous operation)	CCD RADP	With paper, double-sided original of CCD
Display	Description																
NORMAL SPEED	Normal reading (600 dpi)																
HIGH SPEED	High-speed reading																
Display	Description																
CCD ADP (NON P)	Without paper, single-sided original of CCD (continuous operation)																
CCD ADP	With paper, single-sided original of CCD																
CCD RADP (NON P)	Without paper, double-sided original of CCD (continuous operation)																
CCD RADP	With paper, double-sided original of CCD																

Item No.	Description						
U222	<p data-bbox="292 241 592 275"><b>Setting the IC card type</b></p> <p data-bbox="292 315 440 342"><b>Description</b></p> <p data-bbox="292 349 579 376">Sets the type of IC card.</p> <p data-bbox="292 387 400 414"><b>Purpose</b></p> <p data-bbox="292 421 647 448">To change the type of IC card.</p> <p data-bbox="292 488 384 515"><b>Setting</b></p> <ol data-bbox="308 521 890 584" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item using the cursor up/down keys.</li> </ol> <table border="1" data-bbox="338 600 1401 741"> <thead> <tr> <th data-bbox="338 600 641 645">Display</th> <th data-bbox="641 600 1401 645">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="338 645 641 689">Other</td> <td data-bbox="641 645 1401 689">The type of IC card is SSFC.</td> </tr> <tr> <td data-bbox="338 689 641 741">SSFC</td> <td data-bbox="641 689 1401 741">The type of IC card is not SSFC.</td> </tr> </tbody> </table> <p data-bbox="338 757 608 784">* : Initial setting: Other</p> <ol data-bbox="308 790 783 817" style="list-style-type: none"> <li>3. Press the start key. The setting is set.</li> </ol> <p data-bbox="292 857 440 884"><b>Completion</b></p> <p data-bbox="292 891 1254 918">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	Other	The type of IC card is SSFC.	SSFC	The type of IC card is not SSFC.
Display	Description						
Other	The type of IC card is SSFC.						
SSFC	The type of IC card is not SSFC.						

Item No.	Description														
U224	<p data-bbox="287 241 574 273"><b>Panel sheet extension</b></p> <p data-bbox="287 309 438 340"><b>Description</b> Changes the image data and the message of the opening screen at the machine startup and the image data and the message of the service call screen to user specified data.</p> <p data-bbox="287 414 399 445"><b>Purpose</b> Set according to the preference of the user.</p> <p data-bbox="287 519 383 551"><b>Setting</b></p> <ol data-bbox="303 555 1077 757" style="list-style-type: none"> <li>1. Write the image data or the message data to the USB memory.</li> <li>2. Insert USB memory in USB memory slot of the machine.</li> <li>3. Turn the main power switch on.</li> <li>4. Enter the maintenance item.</li> <li>5. Press the start key.</li> <li>6. Select the [Install] or [UnInstall].</li> </ol> <table border="1" data-bbox="347 766 1412 891"> <thead> <tr> <th data-bbox="355 777 651 808">Display</th> <th data-bbox="651 777 1404 808">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="355 808 651 840">Install</td> <td data-bbox="651 808 1404 840">Installs the image data or the message data</td> </tr> <tr> <td data-bbox="355 840 651 871">UnInstall</td> <td data-bbox="651 840 1404 871">Restores the original image data or message data</td> </tr> </tbody> </table> <ol data-bbox="303 907 518 938" style="list-style-type: none"> <li>1. Select the item.</li> </ol> <table border="1" data-bbox="347 947 1412 1111"> <thead> <tr> <th data-bbox="355 958 651 990">Display</th> <th data-bbox="651 958 1404 990">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="355 990 651 1021">Call Msg Top</td> <td data-bbox="651 990 1404 1021">Service call screen 1</td> </tr> <tr> <td data-bbox="355 1021 651 1052">Call Msg Detail</td> <td data-bbox="651 1021 1404 1052">Service call screen 2</td> </tr> <tr> <td data-bbox="355 1052 651 1084">Call Msg TEL No.</td> <td data-bbox="651 1052 1404 1084">TEL No. for service call.</td> </tr> </tbody> </table> <ol data-bbox="303 1167 1013 1232" style="list-style-type: none"> <li>1. Press the start key. Installation or uninstallation is started.</li> <li>2. When normally completed, [Complete] is displayed.</li> </ol> <p data-bbox="287 1263 438 1294"><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	Install	Installs the image data or the message data	UnInstall	Restores the original image data or message data	Display	Description	Call Msg Top	Service call screen 1	Call Msg Detail	Service call screen 2	Call Msg TEL No.	TEL No. for service call.
Display	Description														
Install	Installs the image data or the message data														
UnInstall	Restores the original image data or message data														
Display	Description														
Call Msg Top	Service call screen 1														
Call Msg Detail	Service call screen 2														
Call Msg TEL No.	TEL No. for service call.														

Item No.	Description						
<p><b>U250</b></p>	<p><b>Setting the maintenance cycle</b></p> <p><b>Description</b> Displays, clears and changes the maintenance cycle.</p> <p><b>Purpose</b> To check and change the maintenance cycle.</p> <p><b>Method</b> 1. Press the start key. The currently set maintenance cycle is displayed.</p> <p><b>Setting</b> 1. Select [M.CNT A]. 2. Change the setting using the cursor left/right keys or numeric keys.</p> <table border="1" data-bbox="338 701 1401 797"> <thead> <tr> <th data-bbox="338 701 868 748">Description</th> <th data-bbox="868 701 1134 748">Setting range</th> <th data-bbox="1134 701 1401 748">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="338 748 868 797">Maintenance cycle</td> <td data-bbox="868 748 1134 797">0 to 9999999</td> <td data-bbox="1134 748 1401 797">100000</td> </tr> </tbody> </table> <p>3. Press the start key. The value is set.</p> <p><b>Clearing</b> 1. Select [CLEAR]. 2. Press the start key. The count is cleared.</p> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Description	Setting range	Initial setting	Maintenance cycle	0 to 9999999	100000
Description	Setting range	Initial setting					
Maintenance cycle	0 to 9999999	100000					

Item No.	Description						
U251	<p data-bbox="290 241 823 271"><b>Checking/clearing the maintenance count</b></p> <p data-bbox="290 311 440 340"><b>Description</b></p> <p data-bbox="290 344 925 374">Displays, clears and changes the maintenance count.</p> <p data-bbox="290 380 400 409"><b>Purpose</b></p> <p data-bbox="290 414 683 443">To check the maintenance count.</p> <p data-bbox="290 448 1171 477">Also to clear the count during maintenance service (replacing the maintenance kit).</p> <p data-bbox="290 512 387 542"><b>Method</b></p> <p data-bbox="308 546 1005 575">1. Press the start key. The maintenance count is displayed.</p> <p data-bbox="290 616 384 645"><b>Setting</b></p> <p data-bbox="308 649 550 678">1. Select [M.CNT A].</p> <p data-bbox="308 683 1128 712">2. Change the setting using the cursor left/right keys or numeric keys.</p> <table border="1" data-bbox="338 728 1399 824"> <thead> <tr> <th data-bbox="338 728 868 779">Description</th> <th data-bbox="868 728 1134 779">Setting range</th> <th data-bbox="1134 728 1399 779">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="338 779 868 824">Maintenance count</td> <td data-bbox="868 779 1134 824">0 to 9999999</td> <td data-bbox="1134 779 1399 824">0</td> </tr> </tbody> </table> <p data-bbox="308 835 767 864">3. Press the start key. The count is set.</p> <p data-bbox="290 904 400 934"><b>Clearing</b></p> <p data-bbox="308 938 531 967">1. Select [CLEAR].</p> <p data-bbox="308 972 820 1001">2. Press the start key. The count is cleared.</p> <p data-bbox="290 1041 440 1070"><b>Completion</b></p> <p data-bbox="290 1075 1254 1104">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Description	Setting range	Initial setting	Maintenance count	0 to 9999999	0
Description	Setting range	Initial setting					
Maintenance count	0 to 9999999	0					

Item No.	Description														
U252	<p><b>Setting the destination</b></p> <p><b>Description</b> Switches the operations and screens of the machine according to the destination.</p> <p><b>Purpose</b> To be executed after initializing the backup RAM, in order to return the setting to the value before replacement or initialization.</p> <p><b>Setting</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the destination.</li> </ol> <table border="1" data-bbox="347 629 1412 920"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Inch</td> <td>Inch (North America) specifications</td> </tr> <tr> <td>Europe Metric</td> <td>Metric (Europe) specifications</td> </tr> <tr> <td>Asia Pacific</td> <td>Metric (Asia Pacific) specifications</td> </tr> <tr> <td>Australia</td> <td>Australia specifications</td> </tr> <tr> <td>China</td> <td>China specifications</td> </tr> <tr> <td>Korea</td> <td>Korea specifications</td> </tr> </tbody> </table> <ol style="list-style-type: none"> <li>3. Press the start key.</li> <li>4. Turn the main power switch off and on.</li> </ol> <p><b>Supplement</b> The specified initial settings are provided according to the destinations in the maintenance items below. To change the initial settings in those items, be sure to run maintenance item U021 after changing the destination.</p>	Display	Description	Inch	Inch (North America) specifications	Europe Metric	Metric (Europe) specifications	Asia Pacific	Metric (Asia Pacific) specifications	Australia	Australia specifications	China	China specifications	Korea	Korea specifications
Display	Description														
Inch	Inch (North America) specifications														
Europe Metric	Metric (Europe) specifications														
Asia Pacific	Metric (Asia Pacific) specifications														
Australia	Australia specifications														
China	China specifications														
Korea	Korea specifications														
U253	<p><b>Switching between double and single counts</b></p> <p><b>Description</b> Switches the count system for the total counter and other counters.</p> <p><b>Purpose</b> Used to select, according to the preference of the user (copy service provider), if folio size paper is to be counted as one sheet (single count) or two sheets (double count).</p> <p><b>Setting</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the count system.</li> </ol> <table border="1" data-bbox="336 1644 1401 1789"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>SGL (ALL)</td> <td>Single count for all size paper</td> </tr> <tr> <td>DBL (FOLIO)</td> <td>Double count for Folio size or larger</td> </tr> </tbody> </table> <p>* : Initial setting: DBL COUNT(FOLIO)</p> <ol style="list-style-type: none"> <li>3. Press the start key. The setting is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	SGL (ALL)	Single count for all size paper	DBL (FOLIO)	Double count for Folio size or larger								
Display	Description														
SGL (ALL)	Single count for all size paper														
DBL (FOLIO)	Double count for Folio size or larger														

Item No.	Description						
U260	<p><b>Selecting the timing for copy counting</b></p> <p><b>Description</b> Changes the copy count timing for the total counter and other counters.</p> <p><b>Purpose</b> To be set according to user request.</p> <p><b>Setting</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the copy count timing.</li> </ol> <table border="1" data-bbox="338 598 1401 741"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>FEED</td> <td>When secondary paper feed starts</td> </tr> <tr> <td>EJECT</td> <td>When the paper is ejected</td> </tr> </tbody> </table> <p>* : Initial setting: EJECT</p> <ol style="list-style-type: none"> <li>3. Press the start key. The setting is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	FEED	When secondary paper feed starts	EJECT	When the paper is ejected
Display	Description						
FEED	When secondary paper feed starts						
EJECT	When the paper is ejected						
U285	<p><b>Setting service status page</b></p> <p><b>Description</b> Determines displaying the digital dot coverage report on reporting.</p> <p><b>Purpose</b> According to user request, changes the setting.</p> <p><b>Setting</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select ON or OFF.</li> </ol> <table border="1" data-bbox="338 1290 1401 1433"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>Displays the digital dot coverage</td> </tr> <tr> <td>OFF</td> <td>Not to display the digital dot coverage</td> </tr> </tbody> </table> <p>* : Initial setting: ON</p> <ol style="list-style-type: none"> <li>3. Press the start key. The setting is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	ON	Displays the digital dot coverage	OFF	Not to display the digital dot coverage
Display	Description						
ON	Displays the digital dot coverage						
OFF	Not to display the digital dot coverage						

Item No.	Description								
U332	<p><b>Setting the size conversion factor</b></p> <p><b>Description</b> Sets the coefficient of nonstandard sizes in relation to the A4/Letter size. The coefficient set here is used to convert the black ratio in relation to the A4/Letter size and to display the result in user simulation.</p> <p><b>Purpose</b> To set the coefficient for converting the black ratio for nonstandard sizes in relation to the A4/Letter size.</p> <p><b>Setting</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="338 698 1385 797"> <thead> <tr> <th>Display</th> <th>Description</th> <th>Setting range</th> <th>Initial setting</th> </tr> </thead> <tbody> <tr> <td>Calc. Rate</td> <td>Size parameter</td> <td>0.1 to 3.0</td> <td>1.0</td> </tr> </tbody> </table> <ol style="list-style-type: none"> <li>3. Press the start key. The value is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	Setting range	Initial setting	Calc. Rate	Size parameter	0.1 to 3.0	1.0
Display	Description	Setting range	Initial setting						
Calc. Rate	Size parameter	0.1 to 3.0	1.0						
U345	<p><b>Setting the value for maintenance due indication</b></p> <p><b>Description</b> Sets when to display a message notifying that the time for maintenance is about to be reached, by setting the number of copies that can be made before the current maintenance cycle ends. When the difference between the number of copies of the maintenance cycle and that of the maintenance count reaches the set value, the message is displayed.</p> <p><b>Purpose</b> To change the time for maintenance due indication.</p> <p><b>Setting</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select [COUNT].</li> <li>3. Change the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="338 1424 1401 1590"> <thead> <tr> <th>Description</th> <th>Setting range</th> <th>Initial setting</th> </tr> </thead> <tbody> <tr> <td>Time for maintenance due indication (Remaining number of copies that can be made before the current maintenance cycle ends)</td> <td>0 to 9999</td> <td>0</td> </tr> </tbody> </table> <ol style="list-style-type: none"> <li>4. Press the start key. The value is set.</li> </ol> <p><b>Clearing</b></p> <ol style="list-style-type: none"> <li>1. Select [CLEAR].</li> <li>2. Press the start key. The value is cleared.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Description	Setting range	Initial setting	Time for maintenance due indication (Remaining number of copies that can be made before the current maintenance cycle ends)	0 to 9999	0		
Description	Setting range	Initial setting							
Time for maintenance due indication (Remaining number of copies that can be made before the current maintenance cycle ends)	0 to 9999	0							



Item No.	Description												
U411	<p data-bbox="287 241 753 275"><b>Adjusting the scanner automatically</b></p> <p data-bbox="287 309 440 342"><b>Description</b></p> <p data-bbox="287 344 1431 412">Uses a specified original and automatically adjusts the following items in the scanner and the DP scanning sections.</p> <p data-bbox="287 414 1431 481">Scanner section: Original size magnification, leading edge timing, center line, input gamma, input gamma in monochrome mode and matrix</p> <p data-bbox="287 483 1246 517">DP scanning section: Original size magnification, leading edge timing, center line</p> <p data-bbox="287 519 400 553"><b>Purpose</b></p> <p data-bbox="287 555 1431 589">To perform automatic adjustment of various items in the scanner and the DP scanning sections.</p> <p data-bbox="287 622 387 656"><b>Method</b></p> <ol data-bbox="303 658 979 725" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item. The screen for executing is displayed.</li> </ol> <table border="1" data-bbox="336 734 1399 1099"> <thead> <tr> <th data-bbox="336 734 564 815">Display</th> <th data-bbox="564 734 1096 815">Description</th> <th data-bbox="1096 734 1399 815">Original to be used for adjustment (P/N)</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 815 564 936">ALL</td> <td data-bbox="564 815 1096 936">Performs automatic adjustment in the DP scanning section following automatic adjustment in the scanner section</td> <td data-bbox="1096 815 1399 936">302FZ56990/ 303LJ57010</td> </tr> <tr> <td data-bbox="336 936 564 1016">ADJUST TABLE</td> <td data-bbox="564 936 1096 1016">Automatic adjustment in the scanner section</td> <td data-bbox="1096 936 1399 1016">302FZ56990</td> </tr> <tr> <td data-bbox="336 1016 564 1099">ADJUST DP</td> <td data-bbox="564 1016 1096 1099">Automatic adjustment in the DP scanning section:</td> <td data-bbox="1096 1016 1399 1099">303LJ57010</td> </tr> </tbody> </table> <p data-bbox="287 1144 491 1178"><b>Method: TABLE</b></p> <ol data-bbox="303 1180 1431 1561" style="list-style-type: none"> <li>1. Enter the target values which are shown on the specified original (P/N: 302FZ56990) executing maintenance item U425.</li> <li>2. Set a specified original (P/N: 302FZ56990) on the platen.</li> <li>3. Enter maintenance item U411.</li> <li>4. Select [ADJUST TABLE] using the cursor up/down keys.</li> <li>5. Press the start key. Auto adjustment starts.</li> <li>6. When automatic adjustment has normally completed, [OK] is displayed. If a problem occurs during auto adjustment, [NG XX] (XX is replaced by an error code) is displayed and operation stops. Should this happen, determine the details of the problem and repeat the procedure from the beginning.</li> <li>7. To return to the screen for selecting an item, press the stop key.</li> </ol> <p data-bbox="287 1594 440 1628"><b>Method: DP</b></p> <ol data-bbox="303 1630 1431 1906" style="list-style-type: none"> <li>1. Select [ADJUST DP] using the cursor up/down keys.</li> <li>2. Set a specified original (P/N: 303LJ57010) in the DP.</li> <li>3. Press the start key. Auto adjustment starts.</li> <li>4. When automatic adjustment has normally completed, [OK] is displayed. If a problem occurs during auto adjustment, [NG XX] (XX is replaced by an error code) is displayed and operation stops. Should this happen, determine the details of the problem and repeat the procedure from the beginning.</li> <li>5. To return to the screen for selecting an item, press the stop key.</li> </ol> <p data-bbox="287 1939 440 1973"><b>Completion</b></p> <p data-bbox="287 1975 1206 2009">Press the stop key. The screen for selecting a maintenance item is displayed.</p>	Display	Description	Original to be used for adjustment (P/N)	ALL	Performs automatic adjustment in the DP scanning section following automatic adjustment in the scanner section	302FZ56990/ 303LJ57010	ADJUST TABLE	Automatic adjustment in the scanner section	302FZ56990	ADJUST DP	Automatic adjustment in the DP scanning section:	303LJ57010
Display	Description	Original to be used for adjustment (P/N)											
ALL	Performs automatic adjustment in the DP scanning section following automatic adjustment in the scanner section	302FZ56990/ 303LJ57010											
ADJUST TABLE	Automatic adjustment in the scanner section	302FZ56990											
ADJUST DP	Automatic adjustment in the DP scanning section:	303LJ57010											

Item No.	Description																																		
U425	<p data-bbox="288 241 512 275"><b>Setting the target</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 1366 409">Enters the lab values that is indicated on the back of the chart (P/N: 302FZ56990) used for adjustment.</p> <p data-bbox="288 414 400 443"><b>Purpose</b></p> <p data-bbox="288 448 1406 479">Performs data input in order to correct for differences in originals during automatic adjustment.</p> <p data-bbox="288 517 387 546"><b>Method</b></p> <ol data-bbox="304 553 999 618" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set using the cursor up/down keys.</li> </ol> <table border="1" data-bbox="336 631 1399 1158"> <thead> <tr> <th data-bbox="336 631 639 676">Display</th> <th data-bbox="639 631 1399 676">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 676 639 721">N875</td> <td data-bbox="639 676 1399 721">Setting the N875 patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 721 639 766">N475</td> <td data-bbox="639 721 1399 766">Setting the N475 patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 766 639 810">N125</td> <td data-bbox="639 766 1399 810">Setting the N125 patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 810 639 855">CYAN</td> <td data-bbox="639 810 1399 855">Setting the cyan patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 855 639 900">MAGENTA</td> <td data-bbox="639 855 1399 900">Setting the magenta patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 900 639 945">YELLOW</td> <td data-bbox="639 900 1399 945">Setting the yellow patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 945 639 990">RED</td> <td data-bbox="639 945 1399 990">Setting the red patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 990 639 1034">GREEN</td> <td data-bbox="639 990 1399 1034">Setting the green patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 1034 639 1079">BLUE</td> <td data-bbox="639 1034 1399 1079">Setting the blue patch for the original for adjustment</td> </tr> <tr> <td data-bbox="336 1079 639 1158">ADJUST ORIGINAL</td> <td data-bbox="639 1079 1399 1158">Setting the main and auxiliary scanning directions</td> </tr> </tbody> </table> <ol data-bbox="304 1169 999 1200" style="list-style-type: none"> <li>3. Select the item to be set using the cursor up/down keys.</li> </ol> <table border="1" data-bbox="336 1214 1399 1404"> <thead> <tr> <th data-bbox="336 1214 639 1258">Display</th> <th data-bbox="639 1214 1018 1258">Description</th> <th data-bbox="1018 1214 1399 1258">Setting range</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1258 639 1303">L</td> <td data-bbox="639 1258 1018 1303">Setting the L value</td> <td data-bbox="1018 1258 1399 1303">0.0 to 100.0</td> </tr> <tr> <td data-bbox="336 1303 639 1348">a</td> <td data-bbox="639 1303 1018 1348">Setting the a value</td> <td data-bbox="1018 1303 1399 1348">-200.0 to 200.0</td> </tr> <tr> <td data-bbox="336 1348 639 1404">b</td> <td data-bbox="639 1348 1018 1404">Setting the b value</td> <td data-bbox="1018 1348 1399 1404">-200.0 to 200.0</td> </tr> </tbody> </table> <ol data-bbox="304 1415 1406 1514" style="list-style-type: none"> <li>4. Enters the value that is indicated on the back of the chart using the cursor left/right keys or numeric keys.</li> <li>5. Press the start key. The value is set.</li> </ol>	Display	Description	N875	Setting the N875 patch for the original for adjustment	N475	Setting the N475 patch for the original for adjustment	N125	Setting the N125 patch for the original for adjustment	CYAN	Setting the cyan patch for the original for adjustment	MAGENTA	Setting the magenta patch for the original for adjustment	YELLOW	Setting the yellow patch for the original for adjustment	RED	Setting the red patch for the original for adjustment	GREEN	Setting the green patch for the original for adjustment	BLUE	Setting the blue patch for the original for adjustment	ADJUST ORIGINAL	Setting the main and auxiliary scanning directions	Display	Description	Setting range	L	Setting the L value	0.0 to 100.0	a	Setting the a value	-200.0 to 200.0	b	Setting the b value	-200.0 to 200.0
Display	Description																																		
N875	Setting the N875 patch for the original for adjustment																																		
N475	Setting the N475 patch for the original for adjustment																																		
N125	Setting the N125 patch for the original for adjustment																																		
CYAN	Setting the cyan patch for the original for adjustment																																		
MAGENTA	Setting the magenta patch for the original for adjustment																																		
YELLOW	Setting the yellow patch for the original for adjustment																																		
RED	Setting the red patch for the original for adjustment																																		
GREEN	Setting the green patch for the original for adjustment																																		
BLUE	Setting the blue patch for the original for adjustment																																		
ADJUST ORIGINAL	Setting the main and auxiliary scanning directions																																		
Display	Description	Setting range																																	
L	Setting the L value	0.0 to 100.0																																	
a	Setting the a value	-200.0 to 200.0																																	
b	Setting the b value	-200.0 to 200.0																																	

Item No.	Description
U425	<p><b>Setting: [ADJUST ORIGINAL]</b></p> <ol style="list-style-type: none"> <li>Measure the distance from the left edge to the black belt (a) of the original at A, B and C. Measurement procedure               <ol style="list-style-type: none"> <li>Measure the distance from the edge to the black belt (a) of the original at A (30 mm from the leading edge), B (148.5 mm from the leading edge) and C (267 mm from the leading edge), respectively.</li> <li>Apply the following formula for the values obtained: <math>((A + C) / 2 + B) / 2</math></li> </ol> </li> <li>Enter the values solved using the cursor left/right keys or numeric keys in [MAIN].</li> <li>Press the start key. The value is set.</li> <li>Measure the distance from the leading edge to the black belt (b) of the original at D, E and F. Measurement procedure               <ol style="list-style-type: none"> <li>Measure the distance from the edge to the black belt (b) of the original at D (35 mm from the left edge), E (110 mm from the left edge) and F (185 mm from the left edge), respectively.</li> <li>Apply the following formula for the values obtained: <math>((D + F) / 2 + E) / 2</math></li> </ol> </li> <li>Enter the values solved using the cursor left/right keys or numeric keys in [SUB LEAD].</li> <li>Press the start key. The value is set.</li> <li>Measure the length (G) from the edge of the black belt (b) to edge of the black belt (c) of the original.</li> <li>Enter the measured value using the cursor left/right keys or numeric keys in [SUB TAIL].</li> <li>Press the start key. The value is set.</li> </ol> <div style="text-align: center; margin-top: 20px;"> <p style="text-align: center;">Original for adjustment (P/N: 302FZ56990)</p> </div> <p style="text-align: center; margin-top: 10px;"><b>Figure 1-3-2</b></p> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>

Item No.	Description																																																																												
U600	<p data-bbox="287 241 523 273"><b>Initializing all data</b></p> <p data-bbox="287 309 440 340"><b>Description</b></p> <p data-bbox="287 344 1423 407">Initializes software switches and all data in the backup data on the FAX control PWB, according to the destination and OEM.</p> <p data-bbox="287 412 1423 474">Executes the check of the file system, when abnormality of the file system is detected, initializes the file system, communication past record and register setting contents.</p> <p data-bbox="287 479 402 510"><b>Purpose</b></p> <p data-bbox="287 515 689 546">To initialize the FAX control PWB.</p> <p data-bbox="287 582 389 613"><b>Method</b></p> <ol data-bbox="303 618 1423 963" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select [Execute]. The screen for entering the destination code and OEM code is displayed.</li> <li>3. Select [Country Code] and enter a destination code using the numeric keys (refer to the destination code list on following for the destination code).</li> <li>4. Press the start key. There is no operation necessary on this screen. The destination code and the OEM code are displayed with the values currently set.</li> <li>5. Press the start key. Data initialization starts. To cancel data initialization, press the stop key.</li> <li>6. After data initialization, the entered destination, OEM codes and ROM version are displayed. A ROM version displays three kinds, application, boot, and IPL.</li> </ol> <p data-bbox="287 999 555 1030"><b>Destination code list</b></p> <table border="1" data-bbox="335 1043 1398 1953"> <thead> <tr> <th>Code</th> <th>Destination</th> <th>Code</th> <th>Destination</th> </tr> </thead> <tbody> <tr> <td>000</td> <td>Japan</td> <td>253</td> <td>CTR21 (European nations)</td> </tr> <tr> <td>009</td> <td>Australia</td> <td></td> <td>Italy</td> </tr> <tr> <td>038</td> <td>China</td> <td></td> <td>Germany</td> </tr> <tr> <td>080</td> <td>Hong Kong</td> <td></td> <td>Spain</td> </tr> <tr> <td>084</td> <td>Indonesia</td> <td></td> <td>U.K.</td> </tr> <tr> <td>088</td> <td>Israel</td> <td></td> <td>Netherlands</td> </tr> <tr> <td>097</td> <td>Korea</td> <td></td> <td>Sweden</td> </tr> <tr> <td>108</td> <td>Malaysia</td> <td></td> <td>France</td> </tr> <tr> <td>126</td> <td>New Zealand</td> <td></td> <td>Austria</td> </tr> <tr> <td>136</td> <td>Peru</td> <td></td> <td>Switzerland</td> </tr> <tr> <td>137</td> <td>Philippines</td> <td></td> <td>Belgium</td> </tr> <tr> <td>152</td> <td>Middle East</td> <td></td> <td>Denmark</td> </tr> <tr> <td>156</td> <td>Singapore</td> <td></td> <td>Finland</td> </tr> <tr> <td>159</td> <td>South Africa</td> <td></td> <td>Portugal</td> </tr> <tr> <td>169</td> <td>Thailand</td> <td></td> <td>Ireland</td> </tr> <tr> <td>181</td> <td>U.S.A.</td> <td></td> <td>Norway</td> </tr> <tr> <td>242</td> <td>South America</td> <td>254</td> <td>Taiwan</td> </tr> <tr> <td>243</td> <td>Saudi Arabia</td> <td></td> <td></td> </tr> </tbody> </table>	Code	Destination	Code	Destination	000	Japan	253	CTR21 (European nations)	009	Australia		Italy	038	China		Germany	080	Hong Kong		Spain	084	Indonesia		U.K.	088	Israel		Netherlands	097	Korea		Sweden	108	Malaysia		France	126	New Zealand		Austria	136	Peru		Switzerland	137	Philippines		Belgium	152	Middle East		Denmark	156	Singapore		Finland	159	South Africa		Portugal	169	Thailand		Ireland	181	U.S.A.		Norway	242	South America	254	Taiwan	243	Saudi Arabia		
Code	Destination	Code	Destination																																																																										
000	Japan	253	CTR21 (European nations)																																																																										
009	Australia		Italy																																																																										
038	China		Germany																																																																										
080	Hong Kong		Spain																																																																										
084	Indonesia		U.K.																																																																										
088	Israel		Netherlands																																																																										
097	Korea		Sweden																																																																										
108	Malaysia		France																																																																										
126	New Zealand		Austria																																																																										
136	Peru		Switzerland																																																																										
137	Philippines		Belgium																																																																										
152	Middle East		Denmark																																																																										
156	Singapore		Finland																																																																										
159	South Africa		Portugal																																																																										
169	Thailand		Ireland																																																																										
181	U.S.A.		Norway																																																																										
242	South America	254	Taiwan																																																																										
243	Saudi Arabia																																																																												

Item No.	Description								
U601	<p><b>Initializing permanent data</b></p> <p><b>Description</b> Initializes software switches on the FAX control PWB according to the destination and OEM.</p> <p><b>Purpose</b> To initialize the FAX control PWB without changing user registration data.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select [Execute]. The screen for entering the destination code and OEM code is displayed.</li> <li>3. Select [Country Code] and enter a destination code using the numeric keys (refer to the destination code list on page 1-3-24 for the destination code).</li> <li>4. Press the start key. There is no operation necessary on this screen. The destination code and the OEM code are displayed with the values currently set.</li> <li>5. Press the start key. Data initialization starts. To cancel data initialization, press the back key.</li> <li>6. After data initialization, the entered destination, OEM codes and ROM version are displayed. A ROM version displays three kinds, application, boot, and IPL.</li> </ol>								
U603	<p><b>Setting user data 1</b></p> <p><b>Description</b> Makes user settings to enable the use of the machine as a fax.</p> <p><b>Purpose</b> To be run after installation of the facsimile kit if necessary.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select [LINE TYPE] and press the start key.</li> <li>3. Select the setting.</li> </ol> <table border="1" data-bbox="336 1301 1399 1494"> <thead> <tr> <th data-bbox="336 1301 639 1350">Display</th> <th data-bbox="639 1301 1399 1350">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1350 639 1400">DTMF</td> <td data-bbox="639 1350 1399 1400">DTMF</td> </tr> <tr> <td data-bbox="336 1400 639 1449">10PPS</td> <td data-bbox="639 1400 1399 1449">10 PPS</td> </tr> <tr> <td data-bbox="336 1449 639 1494">20PPS</td> <td data-bbox="639 1449 1399 1494">20 PPS</td> </tr> </tbody> </table> <p>* : Initial setting: DTMF</p> <ol style="list-style-type: none"> <li>4. Press the start key. The setting is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	DTMF	DTMF	10PPS	10 PPS	20PPS	20 PPS
Display	Description								
DTMF	DTMF								
10PPS	10 PPS								
20PPS	20 PPS								

Item No.	Description						
<b>U604</b>	<p><b>Setting user data 2</b></p> <p><b>Description</b> Makes user settings to enable the use of the machine as a fax.</p> <p><b>Purpose</b> Use this if the user wishes to adjust the number of rings that occur before the unit switches into fax receiving mode when fax/telephone auto-select is enabled.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select [RINGS(F/P)#].</li> <li>3. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="336 667 1401 763"> <thead> <tr> <th data-bbox="336 667 868 712">Description</th> <th data-bbox="868 667 1098 712">Setting range</th> <th data-bbox="1098 667 1401 712">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 712 868 763">Number of fax/telephone rings</td> <td data-bbox="868 712 1098 763">0 to 15</td> <td data-bbox="1098 712 1401 763">2 (120 V)/1 (220-240 V)</td> </tr> </tbody> </table> <p>* : If you set this to 0, the unit will start fax reception without any ringing.</p> <ol style="list-style-type: none"> <li>4. Press the start key. The value is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Description	Setting range	Initial setting	Number of fax/telephone rings	0 to 15	2 (120 V)/1 (220-240 V)
Description	Setting range	Initial setting					
Number of fax/telephone rings	0 to 15	2 (120 V)/1 (220-240 V)					
<b>U605</b>	<p><b>Clearing data</b></p> <p><b>Description</b> Initializes data related to the fax transmission such as transmission history.</p> <p><b>Purpose</b> To clear the transmission history.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select [CLEAR COM.REC.].</li> <li>3. Press the start key. Initialization processing starts. When processing is finished, [Completed] is displayed.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>						

Item No.	Description																								
U610	<p data-bbox="290 241 502 273"><b>Setting system 1</b></p> <p data-bbox="290 311 438 342"><b>Description</b></p> <p data-bbox="290 344 1404 412">Makes settings for fax reception regarding the sizes of the fax paper and received images and automatic printing of the protocol list.</p> <p data-bbox="290 450 386 481"><b>Method</b></p> <ol data-bbox="308 486 632 548" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 562 1401 860"> <thead> <tr> <th data-bbox="336 562 639 607">Display</th> <th data-bbox="639 562 1401 607">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 607 639 689">CUT LINE:100%</td> <td data-bbox="639 607 1401 689">Sets the number of lines to be ignored when receiving a fax at 100% magnification.</td> </tr> <tr> <td data-bbox="336 689 639 772">CUT LINE:AUTO</td> <td data-bbox="639 689 1401 772">Sets the number of lines to be ignored when receiving a fax in the auto reduction mode.</td> </tr> <tr> <td data-bbox="336 772 639 860">CUT LINE:A4</td> <td data-bbox="639 772 1401 860">Sets the number of lines to be ignored when receiving a fax (A4R/LetterR) in the auto reduction mode.</td> </tr> </tbody> </table> <p data-bbox="290 904 1372 936"><b>Setting the number of lines to be ignored when receiving a fax at 100% magnification</b></p> <p data-bbox="290 938 1431 1039">Sets the maximum number of lines to be ignored if the received data volume exceeds the recording capacity when recording the data at 100% magnification. If the number of excess lines is below the setting, those lines are ignored. If over the setting, they are recorded on the next page.</p> <ol data-bbox="308 1041 1126 1072" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="336 1086 1401 1252"> <thead> <tr> <th data-bbox="336 1086 823 1169">Description</th> <th data-bbox="823 1086 1003 1169">Setting range</th> <th data-bbox="1003 1086 1187 1169">Initial setting</th> <th data-bbox="1187 1086 1401 1169">Change in value per step</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1169 823 1252">Number of lines to be ignored when receiving at 100%</td> <td data-bbox="823 1169 1003 1252">0 to 22</td> <td data-bbox="1003 1169 1187 1252">3</td> <td data-bbox="1187 1169 1401 1252">16 lines</td> </tr> </tbody> </table> <p data-bbox="336 1258 1362 1326">* : Increase the setting if a blank second page is output, and decrease it if the received image does not include the entire transmitted data.</p> <ol data-bbox="308 1328 766 1359" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p data-bbox="290 1397 1431 1429"><b>Setting the number of lines to be ignored when receiving a fax in the auto reduction mode</b></p> <p data-bbox="290 1431 1431 1565">Sets the maximum number of lines to be ignored if the received data volume exceeds the recording capacity when the data is recorded in the auto reduction mode. If the number of excess lines is below the setting, those lines are ignored. If over the setting, the entire data on a page is further reduced so that it can be recorded on the same page.</p> <ol data-bbox="308 1568 1126 1599" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="336 1612 1401 1778"> <thead> <tr> <th data-bbox="336 1612 823 1695">Description</th> <th data-bbox="823 1612 1003 1695">Setting range</th> <th data-bbox="1003 1612 1187 1695">Initial setting</th> <th data-bbox="1187 1612 1401 1695">Change in value per step</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1695 823 1778">Number of lines to be ignored when receiving in the auto reduction mode</td> <td data-bbox="823 1695 1003 1778">0 to 22</td> <td data-bbox="1003 1695 1187 1778">0</td> <td data-bbox="1187 1695 1401 1778">16 lines</td> </tr> </tbody> </table> <p data-bbox="336 1785 1394 1886">* : Increase the setting if a page received in the reduction mode is over-reduced and too much trailing edge margin is left. Decrease it if the received image does not include all transmitted data.</p> <ol data-bbox="308 1888 766 1919" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol>	Display	Description	CUT LINE:100%	Sets the number of lines to be ignored when receiving a fax at 100% magnification.	CUT LINE:AUTO	Sets the number of lines to be ignored when receiving a fax in the auto reduction mode.	CUT LINE:A4	Sets the number of lines to be ignored when receiving a fax (A4R/LetterR) in the auto reduction mode.	Description	Setting range	Initial setting	Change in value per step	Number of lines to be ignored when receiving at 100%	0 to 22	3	16 lines	Description	Setting range	Initial setting	Change in value per step	Number of lines to be ignored when receiving in the auto reduction mode	0 to 22	0	16 lines
Display	Description																								
CUT LINE:100%	Sets the number of lines to be ignored when receiving a fax at 100% magnification.																								
CUT LINE:AUTO	Sets the number of lines to be ignored when receiving a fax in the auto reduction mode.																								
CUT LINE:A4	Sets the number of lines to be ignored when receiving a fax (A4R/LetterR) in the auto reduction mode.																								
Description	Setting range	Initial setting	Change in value per step																						
Number of lines to be ignored when receiving at 100%	0 to 22	3	16 lines																						
Description	Setting range	Initial setting	Change in value per step																						
Number of lines to be ignored when receiving in the auto reduction mode	0 to 22	0	16 lines																						

Item No.	Description								
U610	<p data-bbox="288 241 1409 304"><b>Setting the number of lines to be ignored when receiving a fax (A4R/LetterR) in the auto reduction mode</b></p> <p data-bbox="288 311 1433 409">Sets the maximum number of lines to be ignored if the received data volume exceeds the recording capacity when the data is recorded in the auto reduction mode onto A4R or LetterR paper under the conditions below.</p> <p data-bbox="288 416 1425 479">If the number of excess lines is below the setting, those lines are ignored. If over the setting, the entire data on a page is further reduced so that it can be recorded on the same page.</p> <p data-bbox="308 486 1126 517">1. Change the setting using the cursor left/right keys or numeric keys.</p> <table border="1" data-bbox="336 526 1401 728"> <thead> <tr> <th data-bbox="336 526 823 607">Description</th> <th data-bbox="823 526 1003 607">Setting range</th> <th data-bbox="1003 526 1187 607">Initial setting</th> <th data-bbox="1187 526 1401 607">Change in value per step</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 607 823 728">Number of lines to be ignored when receiving a fax (A4R, letter) in the auto reduction mode</td> <td data-bbox="823 607 1003 728">0 to 22</td> <td data-bbox="1003 607 1187 728">0</td> <td data-bbox="1187 607 1401 728">16 lines</td> </tr> </tbody> </table> <p data-bbox="336 741 1394 840">* : Increase the setting if a page received in the reduction mode is over-reduced and too much trailing edge margin is left. Decrease it if the received image does not include all transmitted data.</p> <p data-bbox="308 846 767 878">2. Press the start key. The value is set.</p> <p data-bbox="288 913 440 945"><b>Completion</b></p> <p data-bbox="288 952 1254 983">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Description	Setting range	Initial setting	Change in value per step	Number of lines to be ignored when receiving a fax (A4R, letter) in the auto reduction mode	0 to 22	0	16 lines
Description	Setting range	Initial setting	Change in value per step						
Number of lines to be ignored when receiving a fax (A4R, letter) in the auto reduction mode	0 to 22	0	16 lines						



Item No.	Description																										
U611	<p data-bbox="288 241 507 275"><b>Setting system 2</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 1005 374">Sets the number of adjustment lines for automatic reduction.</p> <p data-bbox="288 414 387 443"><b>Method</b></p> <ol data-bbox="308 450 632 515" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 526 1401 790"> <thead> <tr> <th data-bbox="336 526 639 571">Display</th> <th data-bbox="639 526 1401 571">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 571 639 616">ADJ LINES</td> <td data-bbox="639 571 1401 616">Sets the number of adjustment lines for automatic reduction.</td> </tr> <tr> <td data-bbox="336 616 639 705">ADJ LINES(A4)</td> <td data-bbox="639 616 1401 705">Sets the number of adjustment lines for automatic reduction when A4 paper is set.</td> </tr> <tr> <td data-bbox="336 705 639 790">ADJ LINES(LT)</td> <td data-bbox="639 705 1401 790">Sets the number of adjustment lines for automatic reduction when letter size paper is set.</td> </tr> </tbody> </table> <p data-bbox="288 831 1094 860"><b>Setting the number of adjustment lines for automatic reduction</b></p> <p data-bbox="288 864 1005 893">Sets the number of adjustment lines for automatic reduction.</p> <ol data-bbox="308 900 1126 929" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="336 943 1401 1039"> <thead> <tr> <th data-bbox="336 943 975 987">Description</th> <th data-bbox="975 943 1187 987">Setting range</th> <th data-bbox="1187 943 1401 987">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 987 975 1039">Number of adjustment lines for automatic reduction</td> <td data-bbox="975 987 1187 1039">0 to 22</td> <td data-bbox="1187 987 1401 1039">7</td> </tr> </tbody> </table> <ol data-bbox="308 1050 766 1079" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p data-bbox="288 1120 1366 1149"><b>Setting the number of adjustment lines for automatic reduction when A4 paper is set</b></p> <p data-bbox="288 1153 1262 1182">Sets the number of adjustment lines for automatic reduction when A4 paper is set.</p> <ol data-bbox="308 1189 1126 1218" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="336 1232 1401 1364"> <thead> <tr> <th data-bbox="336 1232 975 1276">Description</th> <th data-bbox="975 1232 1187 1276">Setting range</th> <th data-bbox="1187 1232 1401 1276">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1276 975 1364">Number of adjustment lines for automatic reduction when A4 paper is set</td> <td data-bbox="975 1276 1187 1364">0 to 22</td> <td data-bbox="1187 1276 1401 1364">22</td> </tr> </tbody> </table> <ol data-bbox="308 1375 766 1404" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p data-bbox="288 1444 1409 1505"><b>Setting the number of adjustment lines for automatic reduction when letter size paper is set</b></p> <p data-bbox="288 1509 1342 1538">Sets the number of adjustment lines for automatic reduction when letter size paper is set.</p> <ol data-bbox="308 1545 1126 1574" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="336 1588 1401 1720"> <thead> <tr> <th data-bbox="336 1588 975 1632">Description</th> <th data-bbox="975 1588 1187 1632">Setting range</th> <th data-bbox="1187 1588 1401 1632">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1632 975 1720">Number of adjustment lines for automatic reduction when letter size paper is set</td> <td data-bbox="975 1632 1187 1720">0 to 26</td> <td data-bbox="1187 1632 1401 1720">26</td> </tr> </tbody> </table> <ol data-bbox="308 1731 766 1760" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p data-bbox="288 1800 440 1830"><b>Completion</b></p> <p data-bbox="288 1834 1254 1863">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	ADJ LINES	Sets the number of adjustment lines for automatic reduction.	ADJ LINES(A4)	Sets the number of adjustment lines for automatic reduction when A4 paper is set.	ADJ LINES(LT)	Sets the number of adjustment lines for automatic reduction when letter size paper is set.	Description	Setting range	Initial setting	Number of adjustment lines for automatic reduction	0 to 22	7	Description	Setting range	Initial setting	Number of adjustment lines for automatic reduction when A4 paper is set	0 to 22	22	Description	Setting range	Initial setting	Number of adjustment lines for automatic reduction when letter size paper is set	0 to 26	26
Display	Description																										
ADJ LINES	Sets the number of adjustment lines for automatic reduction.																										
ADJ LINES(A4)	Sets the number of adjustment lines for automatic reduction when A4 paper is set.																										
ADJ LINES(LT)	Sets the number of adjustment lines for automatic reduction when letter size paper is set.																										
Description	Setting range	Initial setting																									
Number of adjustment lines for automatic reduction	0 to 22	7																									
Description	Setting range	Initial setting																									
Number of adjustment lines for automatic reduction when A4 paper is set	0 to 22	22																									
Description	Setting range	Initial setting																									
Number of adjustment lines for automatic reduction when letter size paper is set	0 to 26	26																									

Item No.	Description																						
U612	<p data-bbox="288 241 507 275"><b>Setting system 3</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 1398 409">Makes settings for fax transmission regarding operation and automatic printing of the protocol list.</p> <p data-bbox="288 450 387 479"><b>Method</b></p> <ol data-bbox="308 486 632 546" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 562 1401 790"> <thead> <tr> <th data-bbox="336 562 639 607">Display</th> <th data-bbox="639 562 1401 607">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 607 639 689">Auto Reduction</td> <td data-bbox="639 607 1401 689">Selects if auto reduction in the auxiliary direction is to be performed.</td> </tr> <tr> <td data-bbox="336 689 639 734">Protocol List</td> <td data-bbox="639 689 1401 734">Sets the automatic printing of the protocol list.</td> </tr> <tr> <td data-bbox="336 734 639 790">Detect Trail</td> <td data-bbox="639 734 1401 790">Sets how trailing edge margins are detected</td> </tr> </tbody> </table> <p data-bbox="288 831 1185 860"><b>Selecting if auto reduction in the auxiliary direction is to be performed</b></p> <p data-bbox="288 864 1425 929">Sets whether to receive a long document by automatically reducing it in the auxiliary direction or at 100% magnification.</p> <ol data-bbox="308 936 911 965" style="list-style-type: none"> <li>1. Select the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 981 1401 1158"> <thead> <tr> <th data-bbox="336 981 639 1025">Display</th> <th data-bbox="639 981 1401 1025">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1025 639 1108">On</td> <td data-bbox="639 1025 1401 1108">Auto reduction is performed if the received document is longer than the fax paper.</td> </tr> <tr> <td data-bbox="336 1108 639 1158">Off</td> <td data-bbox="639 1108 1401 1158">Auto reduction is not performed.</td> </tr> </tbody> </table> <p data-bbox="336 1167 579 1196">* : Initial setting: ON</p> <ol data-bbox="308 1202 780 1232" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1272 914 1301"><b>Setting the automatic printing of the protocol list</b></p> <p data-bbox="288 1305 884 1335">Sets if the protocol list is automatically printed out.</p> <ol data-bbox="308 1341 911 1370" style="list-style-type: none"> <li>1. Select the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 1386 1401 1646"> <thead> <tr> <th data-bbox="336 1386 639 1431">Display</th> <th data-bbox="639 1386 1401 1431">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1431 639 1514">On</td> <td data-bbox="639 1431 1401 1514">The protocol list is automatically printed out after communication.</td> </tr> <tr> <td data-bbox="336 1514 639 1559">Off</td> <td data-bbox="639 1514 1401 1559">The protocol list is not printed out automatically.</td> </tr> <tr> <td data-bbox="336 1559 639 1646">Err</td> <td data-bbox="639 1559 1401 1646">The protocol list is automatically printed out after communication only if a communication error occurs.</td> </tr> </tbody> </table> <p data-bbox="336 1655 592 1684">* : Initial setting: OFF</p> <ol data-bbox="308 1691 780 1720" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1760 887 1789"><b>Setting how trailing edge margins are detected</b></p> <p data-bbox="288 1794 1425 1859">This determines whether trailing edge margin is detected (to prevent image from being mutilated) while printing a received Fax.</p>	Display	Description	Auto Reduction	Selects if auto reduction in the auxiliary direction is to be performed.	Protocol List	Sets the automatic printing of the protocol list.	Detect Trail	Sets how trailing edge margins are detected	Display	Description	On	Auto reduction is performed if the received document is longer than the fax paper.	Off	Auto reduction is not performed.	Display	Description	On	The protocol list is automatically printed out after communication.	Off	The protocol list is not printed out automatically.	Err	The protocol list is automatically printed out after communication only if a communication error occurs.
Display	Description																						
Auto Reduction	Selects if auto reduction in the auxiliary direction is to be performed.																						
Protocol List	Sets the automatic printing of the protocol list.																						
Detect Trail	Sets how trailing edge margins are detected																						
Display	Description																						
On	Auto reduction is performed if the received document is longer than the fax paper.																						
Off	Auto reduction is not performed.																						
Display	Description																						
On	The protocol list is automatically printed out after communication.																						
Off	The protocol list is not printed out automatically.																						
Err	The protocol list is automatically printed out after communication only if a communication error occurs.																						

Item No.	Description						
<b>U612</b>	<p>1. Select On or Off using the cursor left/right keys.</p> <table border="1" data-bbox="338 286 1401 430"> <thead> <tr> <th data-bbox="338 286 641 331">Display</th> <th data-bbox="641 286 1401 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="338 331 641 376">On</td> <td data-bbox="641 331 1401 376">Detects trailing edge margin</td> </tr> <tr> <td data-bbox="338 376 641 430">Off</td> <td data-bbox="641 376 1401 430">Does not detect trailing edge margin</td> </tr> </tbody> </table> <p>* : Initial setting: On</p> <p>2. Press the start key. The setting is set.</p> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	On	Detects trailing edge margin	Off	Does not detect trailing edge margin
Display	Description						
On	Detects trailing edge margin						
Off	Does not detect trailing edge margin						
<b>U620</b>	<p><b>Setting the remote switching mode</b></p> <p><b>Description</b> Sets the signal detection method for remote switching. Be sure to change the setting according to the type of telephone connected to the machine.</p> <p><b>Setting</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select [REMORT MODE] and press the start key.</li> <li>3. Select the mode.</li> </ol> <table border="1" data-bbox="338 1043 1401 1187"> <thead> <tr> <th data-bbox="338 1043 641 1088">Display</th> <th data-bbox="641 1043 1401 1088">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="338 1088 641 1133">ONE</td> <td data-bbox="641 1088 1401 1133">One-shot detection</td> </tr> <tr> <td data-bbox="338 1133 641 1187">CONT</td> <td data-bbox="641 1133 1401 1187">Continuous detection</td> </tr> </tbody> </table> <p>* : Initial setting: ONE</p> <p>4. Press the start key. The setting is set.</p> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	ONE	One-shot detection	CONT	Continuous detection
Display	Description						
ONE	One-shot detection						
CONT	Continuous detection						
<b>U625</b>	<p><b>Setting the transmission system 1</b></p> <p><b>Description</b> Makes settings for the auto redialing interval and the number of times of auto redialing.</p> <p><b>Purpose</b> Change the setting to prevent the following problems: fax transmission is not possible due to too short redial interval, or fax transmission takes too much time to complete due to too long redial interval.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="338 1805 1401 1948"> <thead> <tr> <th data-bbox="338 1805 641 1850">Display</th> <th data-bbox="641 1805 1401 1850">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="338 1850 641 1895">INTERVAL</td> <td data-bbox="641 1850 1401 1895">Setting the auto redialing interval</td> </tr> <tr> <td data-bbox="338 1895 641 1948">TIMES</td> <td data-bbox="641 1895 1401 1948">Setting the number of times of auto redialing</td> </tr> </tbody> </table>	Display	Description	INTERVAL	Setting the auto redialing interval	TIMES	Setting the number of times of auto redialing
Display	Description						
INTERVAL	Setting the auto redialing interval						
TIMES	Setting the number of times of auto redialing						

Item No.	Description																				
<b>U625</b>	<p><b>Setting the auto redialing interval</b></p> <p>1. Change the setting using the cursor left/right keys.</p> <table border="1" data-bbox="336 320 1401 416"> <thead> <tr> <th>Description</th> <th>Setting range</th> <th>Initial setting</th> </tr> </thead> <tbody> <tr> <td>Redialing interval</td> <td>1 to 9 (min.)</td> <td>3 (120 V)/2 (220-240 V)</td> </tr> </tbody> </table> <p>2. Press the start key. The value is set.</p> <p><b>Setting the number of times of auto redialing</b></p> <p>1. Change the setting using the cursor left/right keys or numeric keys.</p> <table border="1" data-bbox="336 573 1401 669"> <thead> <tr> <th>Description</th> <th>Setting range</th> <th>Initial setting</th> </tr> </thead> <tbody> <tr> <td>Number of redialing</td> <td>0 to 15</td> <td>2 (120 V)/3 (220-240 V)</td> </tr> </tbody> </table> <p>2. Press the start key. The value is set.</p> <p><b>Completion</b></p> <p>Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Description	Setting range	Initial setting	Redialing interval	1 to 9 (min.)	3 (120 V)/2 (220-240 V)	Description	Setting range	Initial setting	Number of redialing	0 to 15	2 (120 V)/3 (220-240 V)								
Description	Setting range	Initial setting																			
Redialing interval	1 to 9 (min.)	3 (120 V)/2 (220-240 V)																			
Description	Setting range	Initial setting																			
Number of redialing	0 to 15	2 (120 V)/3 (220-240 V)																			
<b>U630</b>	<p><b>Setting communication control 1</b></p> <p><b>Description</b></p> <p>Makes settings for fax transmission regarding the communication.</p> <p><b>Method</b></p> <p>1. Press the start key.</p> <p>2. Select the item to be set.</p> <table border="1" data-bbox="336 1115 1401 1422"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TX SPEED</td> <td>Sets the communication starting speed.</td> </tr> <tr> <td>RX SPEED</td> <td>Sets the reception speed.</td> </tr> <tr> <td>TX ECHO</td> <td>Sets the waiting period to prevent echo problems at the sender.</td> </tr> <tr> <td>RX ECHO</td> <td>Sets the waiting period to prevent echo problems at the receiver.</td> </tr> </tbody> </table> <p><b>Setting the communication starting speed</b></p> <p>Sets the initial communication speed when starting transmission. When the destination unit has V.34 capability, V.34 is selected for transmission, regardless of this setting.</p> <p>1. Select the setting.</p> <table border="1" data-bbox="336 1615 1401 1854"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>14400bps/V17</td> <td>V.17, 14400 bps</td> </tr> <tr> <td>9600bps/V29</td> <td>V.17, 9600 bps</td> </tr> <tr> <td>4800bps/V27ter</td> <td>V.27ter, 4800 bps</td> </tr> <tr> <td>2400bps/V27ter</td> <td>V.27ter, 2400 bps</td> </tr> </tbody> </table> <p>* : Initial setting: 14400bps/V17</p> <p>2. Press the start key. The setting is set.</p>	Display	Description	TX SPEED	Sets the communication starting speed.	RX SPEED	Sets the reception speed.	TX ECHO	Sets the waiting period to prevent echo problems at the sender.	RX ECHO	Sets the waiting period to prevent echo problems at the receiver.	Display	Description	14400bps/V17	V.17, 14400 bps	9600bps/V29	V.17, 9600 bps	4800bps/V27ter	V.27ter, 4800 bps	2400bps/V27ter	V.27ter, 2400 bps
Display	Description																				
TX SPEED	Sets the communication starting speed.																				
RX SPEED	Sets the reception speed.																				
TX ECHO	Sets the waiting period to prevent echo problems at the sender.																				
RX ECHO	Sets the waiting period to prevent echo problems at the receiver.																				
Display	Description																				
14400bps/V17	V.17, 14400 bps																				
9600bps/V29	V.17, 9600 bps																				
4800bps/V27ter	V.27ter, 4800 bps																				
2400bps/V27ter	V.27ter, 2400 bps																				

Item No.	Description																						
<b>U630</b>	<p data-bbox="288 241 644 271"><b>Setting the reception speed</b></p> <p data-bbox="288 277 1410 340">Sets the reception speed that the sender is informed of using the DIS or NSF signal. When the destination unit has V.34 capability, V.34 is selected, regardless of the setting.</p> <p data-bbox="308 347 549 376">1. Select the setting.</p> <table border="1" data-bbox="336 389 1399 629"> <thead> <tr> <th data-bbox="336 389 639 434">Display</th> <th data-bbox="639 389 1399 434">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 434 639 479">14400bps</td> <td data-bbox="639 434 1399 479">V.17, V.33, V.29, V.27ter</td> </tr> <tr> <td data-bbox="336 479 639 524">9600bps</td> <td data-bbox="639 479 1399 524">V.29, V.27ter</td> </tr> <tr> <td data-bbox="336 524 639 568">4800bps</td> <td data-bbox="639 524 1399 568">V.27ter</td> </tr> <tr> <td data-bbox="336 568 639 629">2400bps</td> <td data-bbox="639 568 1399 629">V.27ter (fallback only)</td> </tr> </tbody> </table> <p data-bbox="336 638 657 667">* : Initial setting: 14400bps</p> <p data-bbox="308 674 780 703">2. Press the start key. The setting is set.</p> <p data-bbox="288 741 1126 770"><b>Setting the waiting period to prevent echo problems at the sender</b></p> <p data-bbox="288 777 1418 840">Sets the period before a DCS signal is sent after a DIS signal is received. Used when problems occur due to echoes at the sender.</p> <p data-bbox="308 846 549 875">1. Select the setting.</p> <table border="1" data-bbox="336 889 1399 1032"> <thead> <tr> <th data-bbox="336 889 639 934">Display</th> <th data-bbox="639 889 1399 934">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 934 639 978">500</td> <td data-bbox="639 934 1399 978">Sends a DCS 500 ms after receiving a DIS.</td> </tr> <tr> <td data-bbox="336 978 639 1032">300</td> <td data-bbox="639 978 1399 1032">Sends a DCS 300 ms after receiving a DIS.</td> </tr> </tbody> </table> <p data-bbox="336 1041 584 1070">* : Initial setting: 300</p> <p data-bbox="308 1077 780 1106">2. Press the start key. The setting is set.</p> <p data-bbox="288 1144 1142 1173"><b>Setting the waiting period to prevent echo problems at the receiver</b></p> <p data-bbox="288 1180 1391 1243">Sets the period before an NSF, CSI or DIS signal is sent after a CED signal is received. Used when problems occur due to echoes at the receiver.</p> <p data-bbox="308 1249 549 1279">1. Select the setting.</p> <table border="1" data-bbox="336 1292 1399 1435"> <thead> <tr> <th data-bbox="336 1292 639 1337">Display</th> <th data-bbox="639 1292 1399 1337">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1337 639 1382">500</td> <td data-bbox="639 1337 1399 1382">Sends an NSF, CSI or DIS 500 ms after receiving a CED.</td> </tr> <tr> <td data-bbox="336 1382 639 1435">75</td> <td data-bbox="639 1382 1399 1435">Sends an NSF, CSI or DIS 75 ms after receiving a CED.</td> </tr> </tbody> </table> <p data-bbox="336 1444 569 1473">* : Initial setting: 75</p> <p data-bbox="308 1480 780 1509">2. Press the start key. The setting is set.</p> <p data-bbox="288 1547 440 1576"><b>Completion</b></p> <p data-bbox="288 1583 1254 1612">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	14400bps	V.17, V.33, V.29, V.27ter	9600bps	V.29, V.27ter	4800bps	V.27ter	2400bps	V.27ter (fallback only)	Display	Description	500	Sends a DCS 500 ms after receiving a DIS.	300	Sends a DCS 300 ms after receiving a DIS.	Display	Description	500	Sends an NSF, CSI or DIS 500 ms after receiving a CED.	75	Sends an NSF, CSI or DIS 75 ms after receiving a CED.
Display	Description																						
14400bps	V.17, V.33, V.29, V.27ter																						
9600bps	V.29, V.27ter																						
4800bps	V.27ter																						
2400bps	V.27ter (fallback only)																						
Display	Description																						
500	Sends a DCS 500 ms after receiving a DIS.																						
300	Sends a DCS 300 ms after receiving a DIS.																						
Display	Description																						
500	Sends an NSF, CSI or DIS 500 ms after receiving a CED.																						
75	Sends an NSF, CSI or DIS 75 ms after receiving a CED.																						

Item No.	Description																										
U631	<p data-bbox="288 241 710 271"><b>Setting communication control 2</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 799 374">Makes settings regarding fax transmission.</p> <p data-bbox="288 414 387 443"><b>Method</b></p> <ol data-bbox="308 448 632 515" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 526 1399 719"> <thead> <tr> <th data-bbox="336 526 639 571">Display</th> <th data-bbox="639 526 1399 571">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 571 639 616">ECM TX</td> <td data-bbox="639 571 1399 616">Sets ECM transmission.</td> </tr> <tr> <td data-bbox="336 616 639 660">ECM RX</td> <td data-bbox="639 616 1399 660">Sets ECM reception.</td> </tr> <tr> <td data-bbox="336 660 639 719">CED FREQ.</td> <td data-bbox="639 660 1399 719">Sets the frequency of the CED signal.</td> </tr> </tbody> </table> <p data-bbox="288 761 624 790"><b>Setting ECM transmission</b></p> <p data-bbox="288 795 1393 862">To be set to OFF when reduction of transmission costs is of higher priority than image quality. This should not be set to OFF when connecting to the IP (Internet Protocol) telephone line.</p> <ol data-bbox="308 866 549 896" style="list-style-type: none"> <li>1. Select the setting.</li> </ol> <table border="1" data-bbox="336 907 1399 1055"> <thead> <tr> <th data-bbox="336 907 639 952">Display</th> <th data-bbox="639 907 1399 952">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 952 639 996">ON</td> <td data-bbox="639 952 1399 996">ECM transmission is enabled.</td> </tr> <tr> <td data-bbox="336 996 639 1055">OFF</td> <td data-bbox="639 996 1399 1055">ECM transmission is disabled.</td> </tr> </tbody> </table> <p data-bbox="336 1059 579 1088">* : Initial setting: ON</p> <ol data-bbox="308 1093 782 1122" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1164 576 1193"><b>Setting ECM reception</b></p> <p data-bbox="288 1198 1393 1265">To be set to OFF when reduction of transmission costs is of higher priority than image quality. This should not be set to OFF when connecting to the IP (Internet Protocol) telephone line.</p> <ol data-bbox="308 1270 549 1299" style="list-style-type: none"> <li>1. Select the setting.</li> </ol> <table border="1" data-bbox="336 1310 1399 1458"> <thead> <tr> <th data-bbox="336 1310 639 1355">Display</th> <th data-bbox="639 1310 1399 1355">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1355 639 1400">ON</td> <td data-bbox="639 1355 1399 1400">ECM reception is enabled.</td> </tr> <tr> <td data-bbox="336 1400 639 1458">OFF</td> <td data-bbox="639 1400 1399 1458">ECM reception is disabled.</td> </tr> </tbody> </table> <p data-bbox="336 1462 579 1491">* : Initial setting: ON</p> <ol data-bbox="308 1496 782 1525" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1568 798 1597"><b>Setting the frequency of the CED signal</b></p> <p data-bbox="288 1601 1433 1668">Sets the frequency of the CED signal. Used as one of the measures to improve transmission performance for international communications.</p> <ol data-bbox="308 1673 549 1702" style="list-style-type: none"> <li>1. Select the setting.</li> </ol> <table border="1" data-bbox="336 1713 1399 1861"> <thead> <tr> <th data-bbox="336 1713 639 1758">Display</th> <th data-bbox="639 1713 1399 1758">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1758 639 1803">2100</td> <td data-bbox="639 1758 1399 1803">2100 Hz</td> </tr> <tr> <td data-bbox="336 1803 639 1861">1100</td> <td data-bbox="639 1803 1399 1861">1100 Hz</td> </tr> </tbody> </table> <p data-bbox="336 1865 600 1895">* : Initial setting: 2100</p> <ol data-bbox="308 1899 782 1928" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1971 440 2000"><b>Completion</b></p> <p data-bbox="288 2004 1254 2033">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	ECM TX	Sets ECM transmission.	ECM RX	Sets ECM reception.	CED FREQ.	Sets the frequency of the CED signal.	Display	Description	ON	ECM transmission is enabled.	OFF	ECM transmission is disabled.	Display	Description	ON	ECM reception is enabled.	OFF	ECM reception is disabled.	Display	Description	2100	2100 Hz	1100	1100 Hz
Display	Description																										
ECM TX	Sets ECM transmission.																										
ECM RX	Sets ECM reception.																										
CED FREQ.	Sets the frequency of the CED signal.																										
Display	Description																										
ON	ECM transmission is enabled.																										
OFF	ECM transmission is disabled.																										
Display	Description																										
ON	ECM reception is enabled.																										
OFF	ECM reception is disabled.																										
Display	Description																										
2100	2100 Hz																										
1100	1100 Hz																										

Item No.	Description																												
U632	<p data-bbox="288 241 708 271"><b>Setting communication control 3</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 1069 374">Makes settings for fax transmission regarding the communication.</p> <p data-bbox="288 414 387 443"><b>Method</b></p> <ol data-bbox="308 448 632 515" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 526 1399 801"> <thead> <tr> <th data-bbox="336 526 639 571">Display</th> <th data-bbox="639 526 1399 571">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 571 639 616">DIS 4BYTE</td> <td data-bbox="639 571 1399 616">Sets the DIS signal to 4 bytes.</td> </tr> <tr> <td data-bbox="336 616 639 660">SHORT PRTCL TX</td> <td data-bbox="639 616 1399 660">Sets the short protocol transmission.</td> </tr> <tr> <td data-bbox="336 660 639 705">SHORT PRTCL RX</td> <td data-bbox="639 660 1399 705">Sets the reception of short protocol transmission.</td> </tr> <tr> <td data-bbox="336 705 639 801">NUM OF CNG(F/T)</td> <td data-bbox="639 705 1399 801">Sets the CNG detection times in the fax/telephone auto select mode.</td> </tr> </tbody> </table> <p data-bbox="288 842 699 871"><b>Setting the DIS signal to 4 bytes</b></p> <p data-bbox="288 875 976 904">Sets if bit 33 and later bits of the DIS/DTC signal are sent.</p> <ol data-bbox="308 909 549 940" style="list-style-type: none"> <li>1. Select the setting.</li> </ol> <table border="1" data-bbox="336 954 1399 1099"> <thead> <tr> <th data-bbox="336 954 639 999">Display</th> <th data-bbox="639 954 1399 999">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 999 639 1043">ON</td> <td data-bbox="639 999 1399 1043">Bit 33 and later bits of the DIS/DTC signal are not sent.</td> </tr> <tr> <td data-bbox="336 1043 639 1099">OFF</td> <td data-bbox="639 1043 1399 1099">Bit 33 and later bits of the DIS/DTC signal are sent.</td> </tr> </tbody> </table> <p data-bbox="336 1106 592 1135">* : Initial setting: OFF</p> <ol data-bbox="308 1140 780 1171" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1211 793 1240"><b>Setting the short protocol transmission</b></p> <p data-bbox="288 1245 855 1274">Sets if short protocol transmission is performed.</p> <ol data-bbox="308 1279 549 1310" style="list-style-type: none"> <li>1. Select the setting.</li> </ol> <table border="1" data-bbox="336 1323 1399 1469"> <thead> <tr> <th data-bbox="336 1323 639 1368">Display</th> <th data-bbox="639 1323 1399 1368">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1368 639 1413">ON</td> <td data-bbox="639 1368 1399 1413">Short protocol transmission is performed.</td> </tr> <tr> <td data-bbox="336 1413 639 1469">OFF</td> <td data-bbox="639 1413 1399 1469">Short protocol transmission is not performed.</td> </tr> </tbody> </table> <p data-bbox="336 1476 579 1505">* : Initial setting: ON</p> <ol data-bbox="308 1509 780 1541" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1581 976 1610"><b>Setting the reception of a short protocol transmission</b></p> <p data-bbox="288 1615 1123 1644">Selects whether to receive or ignore transmission using short protocol.</p> <p data-bbox="288 1648 1423 1744">If a short protocol transmission is received when an auto switching device is attached to the machine, communication problems, including auto switching inability, sometimes occur. Change the setting to ignore short protocol transmission to prevent such problems.</p> <ol data-bbox="308 1749 549 1780" style="list-style-type: none"> <li>1. Select the setting.</li> </ol> <table border="1" data-bbox="336 1794 1399 1939"> <thead> <tr> <th data-bbox="336 1794 639 1839">Display</th> <th data-bbox="639 1794 1399 1839">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1839 639 1883">ON</td> <td data-bbox="639 1839 1399 1883">Receives short protocol transmission.</td> </tr> <tr> <td data-bbox="336 1883 639 1939">OFF</td> <td data-bbox="639 1883 1399 1939">Ignores short protocol transmission.</td> </tr> </tbody> </table> <p data-bbox="336 1946 579 1975">* : Initial setting: ON</p> <ol data-bbox="308 1980 780 2011" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol>	Display	Description	DIS 4BYTE	Sets the DIS signal to 4 bytes.	SHORT PRTCL TX	Sets the short protocol transmission.	SHORT PRTCL RX	Sets the reception of short protocol transmission.	NUM OF CNG(F/T)	Sets the CNG detection times in the fax/telephone auto select mode.	Display	Description	ON	Bit 33 and later bits of the DIS/DTC signal are not sent.	OFF	Bit 33 and later bits of the DIS/DTC signal are sent.	Display	Description	ON	Short protocol transmission is performed.	OFF	Short protocol transmission is not performed.	Display	Description	ON	Receives short protocol transmission.	OFF	Ignores short protocol transmission.
Display	Description																												
DIS 4BYTE	Sets the DIS signal to 4 bytes.																												
SHORT PRTCL TX	Sets the short protocol transmission.																												
SHORT PRTCL RX	Sets the reception of short protocol transmission.																												
NUM OF CNG(F/T)	Sets the CNG detection times in the fax/telephone auto select mode.																												
Display	Description																												
ON	Bit 33 and later bits of the DIS/DTC signal are not sent.																												
OFF	Bit 33 and later bits of the DIS/DTC signal are sent.																												
Display	Description																												
ON	Short protocol transmission is performed.																												
OFF	Short protocol transmission is not performed.																												
Display	Description																												
ON	Receives short protocol transmission.																												
OFF	Ignores short protocol transmission.																												

Item No.	Description																				
<b>U632</b>	<p><b>Setting the CNG detection times in the fax/telephone auto select mode</b> Sets the CNG detection times in the fax/telephone auto select mode.</p> <ol style="list-style-type: none"> <li>Select the setting using the cursor up/down keys.</li> </ol> <table border="1" data-bbox="338 353 1401 499"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1TIME</td> <td>Detects CNG once.</td> </tr> <tr> <td>2TIMES</td> <td>Detects CNG twice.</td> </tr> </tbody> </table> <p>* : Initial setting: 2TIMES</p> <ol style="list-style-type: none"> <li>Press the start key. The setting is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	1TIME	Detects CNG once.	2TIMES	Detects CNG twice.														
Display	Description																				
1TIME	Detects CNG once.																				
2TIMES	Detects CNG twice.																				
<b>U633</b>	<p><b>Setting communication control 4</b></p> <p><b>Description</b> Makes settings for fax transmission regarding the communication.</p> <p><b>Purpose</b> To reduce transmission errors when a low quality line is used.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>Press the start key.</li> <li>Select the item to be set.</li> </ol> <table border="1" data-bbox="338 1048 1401 1285"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>V.34</td> <td>Enables or disables V.34 communication.</td> </tr> <tr> <td>V.34-3429Hz</td> <td>Sets the V.34 symbol speed (3429 Hz).</td> </tr> <tr> <td>DIS 2RES</td> <td>Sets the number of times of DIS signal reception.</td> </tr> <tr> <td>RTN CHECK</td> <td>Sets the reference for RTN signal output.</td> </tr> </tbody> </table> <p><b>Enabling/disabling V.34 communication</b> Sets whether V.34 communication is enabled/disabled for transmission and reception.</p> <ol style="list-style-type: none"> <li>Select the setting.</li> </ol> <table border="1" data-bbox="338 1444 1401 1682"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>V.34 communication is enabled for both transmission and reception.</td> </tr> <tr> <td>TX</td> <td>V.34 communication is enabled for transmission only.</td> </tr> <tr> <td>RX</td> <td>V.34 communication is enabled for reception only.</td> </tr> <tr> <td>OFF</td> <td>V.34 communication is disabled for both transmission and reception.</td> </tr> </tbody> </table> <p>* : Initial setting: ON</p> <ol style="list-style-type: none"> <li>Press the start key. The setting is set.</li> </ol>	Display	Description	V.34	Enables or disables V.34 communication.	V.34-3429Hz	Sets the V.34 symbol speed (3429 Hz).	DIS 2RES	Sets the number of times of DIS signal reception.	RTN CHECK	Sets the reference for RTN signal output.	Display	Description	ON	V.34 communication is enabled for both transmission and reception.	TX	V.34 communication is enabled for transmission only.	RX	V.34 communication is enabled for reception only.	OFF	V.34 communication is disabled for both transmission and reception.
Display	Description																				
V.34	Enables or disables V.34 communication.																				
V.34-3429Hz	Sets the V.34 symbol speed (3429 Hz).																				
DIS 2RES	Sets the number of times of DIS signal reception.																				
RTN CHECK	Sets the reference for RTN signal output.																				
Display	Description																				
ON	V.34 communication is enabled for both transmission and reception.																				
TX	V.34 communication is enabled for transmission only.																				
RX	V.34 communication is enabled for reception only.																				
OFF	V.34 communication is disabled for both transmission and reception.																				



Item No.	Description																						
U633	<p data-bbox="288 241 802 271"><b>Setting the V.34 symbol speed (3429 Hz)</b></p> <p data-bbox="288 275 850 304">Sets if the V.34 symbol speed 3429 Hz is used.</p> <p data-bbox="308 309 549 338">1. Select the setting.</p> <table border="1" data-bbox="336 353 1401 499"> <thead> <tr> <th data-bbox="336 353 639 398">Display</th> <th data-bbox="639 353 1401 398">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 398 639 443">ON</td> <td data-bbox="639 398 1401 443">V.34 symbol speed 3429 Hz is used.</td> </tr> <tr> <td data-bbox="336 443 639 499">OFF</td> <td data-bbox="639 443 1401 499">V.34 symbol speed 3429 Hz is not used.</td> </tr> </tbody> </table> <p data-bbox="336 510 579 539">* : Initial setting: ON</p> <p data-bbox="308 544 783 573">2. Press the start key. The setting is set.</p> <p data-bbox="288 611 943 640"><b>Setting the number of times of DIS signal reception</b></p> <p data-bbox="288 645 1426 712">Sets the number of times to receive the DIS signal to once or twice. Used as one of the correction measures for transmission errors and other problems.</p> <p data-bbox="308 716 549 745">1. Select the setting.</p> <table border="1" data-bbox="336 761 1401 907"> <thead> <tr> <th data-bbox="336 761 639 806">Display</th> <th data-bbox="639 761 1401 806">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 806 639 851">ONCE</td> <td data-bbox="639 806 1401 851">Responds to the first signal.</td> </tr> <tr> <td data-bbox="336 851 639 907">TWICE</td> <td data-bbox="639 851 1401 907">Responds to the second signal.</td> </tr> </tbody> </table> <p data-bbox="336 918 617 947">* : Initial setting: ONCE</p> <p data-bbox="308 952 783 981">2. Press the start key. The setting is set.</p> <p data-bbox="288 1019 841 1048"><b>Setting the reference for RTN signal output</b></p> <p data-bbox="288 1052 1401 1120">Sets the error line rate as the reference for RTN signal output. If transmission errors occur frequently due to the quality of the line, they can be reduced by lowering this setting.</p> <p data-bbox="308 1124 549 1153">1. Select the setting.</p> <table border="1" data-bbox="336 1169 1401 1406"> <thead> <tr> <th data-bbox="336 1169 639 1214">Display</th> <th data-bbox="639 1169 1401 1214">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1214 639 1258">5%</td> <td data-bbox="639 1214 1401 1258">Error line rate of 5%</td> </tr> <tr> <td data-bbox="336 1258 639 1303">10%</td> <td data-bbox="639 1258 1401 1303">Error line rate of 10%</td> </tr> <tr> <td data-bbox="336 1303 639 1348">15%</td> <td data-bbox="639 1303 1401 1348">Error line rate of 15%</td> </tr> <tr> <td data-bbox="336 1348 639 1406">20%</td> <td data-bbox="639 1348 1401 1406">Error line rate of 20%</td> </tr> </tbody> </table> <p data-bbox="336 1417 593 1447">* : Initial setting: 15%</p> <p data-bbox="308 1451 783 1480">2. Press the start key. The setting is set.</p> <p data-bbox="288 1518 440 1547"><b>Completion</b></p> <p data-bbox="288 1552 1254 1581">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	ON	V.34 symbol speed 3429 Hz is used.	OFF	V.34 symbol speed 3429 Hz is not used.	Display	Description	ONCE	Responds to the first signal.	TWICE	Responds to the second signal.	Display	Description	5%	Error line rate of 5%	10%	Error line rate of 10%	15%	Error line rate of 15%	20%	Error line rate of 20%
Display	Description																						
ON	V.34 symbol speed 3429 Hz is used.																						
OFF	V.34 symbol speed 3429 Hz is not used.																						
Display	Description																						
ONCE	Responds to the first signal.																						
TWICE	Responds to the second signal.																						
Display	Description																						
5%	Error line rate of 5%																						
10%	Error line rate of 10%																						
15%	Error line rate of 15%																						
20%	Error line rate of 20%																						

Item No.	Description																		
U634	<p><b>Setting communication control 5</b></p> <p><b>Description</b> Sets the maximum number of error bytes judged acceptable when receiving a TCF signal. Used as a measure to ease transmission conditions if transmission errors occur.</p> <p><b>Setting</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="336 562 1401 658"> <thead> <tr> <th>Description</th> <th>Setting range</th> <th>Initial setting</th> </tr> </thead> <tbody> <tr> <td>Number of allowed error bytes when detecting TCF</td> <td>0 to 255</td> <td>0</td> </tr> </tbody> </table> <ol style="list-style-type: none"> <li>3. Press the start key. The value is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Description	Setting range	Initial setting	Number of allowed error bytes when detecting TCF	0 to 255	0												
Description	Setting range	Initial setting																	
Number of allowed error bytes when detecting TCF	0 to 255	0																	
U640	<p><b>Setting communication time 1</b></p> <p><b>Description</b> Sets the detection time when one-shot detection is selected for remote switching. (This setting item will be displayed, but the setting made is ineffective.) Sets the detection time when continuous detection is selected for remote switching. (This setting item will be displayed, but the setting made is ineffective.)</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 1209 1401 1352"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TIME (ONE)</td> <td>Sets the one-shot detection time for remote switching.</td> </tr> <tr> <td>TIME (CONT)</td> <td>Sets the continuous detection time for remote switching.</td> </tr> </tbody> </table> <p><b>Setting the one-shot detection time for remote switching</b></p> <ol style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 1471 1401 1568"> <thead> <tr> <th>Description</th> <th>Setting range</th> <th>Initial setting</th> </tr> </thead> <tbody> <tr> <td>One-shot detection time for remote switching</td> <td>0 to 255</td> <td>7</td> </tr> </tbody> </table> <ol style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p><b>Setting the continuous detection time for remote switching</b></p> <ol style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 1724 1401 1821"> <thead> <tr> <th>Description</th> <th>Setting range</th> <th>Initial setting</th> </tr> </thead> <tbody> <tr> <td>Continuous detection time for remote switching</td> <td>0 to 255</td> <td>80</td> </tr> </tbody> </table> <ol style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	TIME (ONE)	Sets the one-shot detection time for remote switching.	TIME (CONT)	Sets the continuous detection time for remote switching.	Description	Setting range	Initial setting	One-shot detection time for remote switching	0 to 255	7	Description	Setting range	Initial setting	Continuous detection time for remote switching	0 to 255	80
Display	Description																		
TIME (ONE)	Sets the one-shot detection time for remote switching.																		
TIME (CONT)	Sets the continuous detection time for remote switching.																		
Description	Setting range	Initial setting																	
One-shot detection time for remote switching	0 to 255	7																	
Description	Setting range	Initial setting																	
Continuous detection time for remote switching	0 to 255	80																	

Item No.	Description																														
U641	<p data-bbox="288 241 675 271"><b>Setting communication time 2</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 799 374">Sets the time-out time for fax transmission.</p> <p data-bbox="288 380 400 409"><b>Purpose</b></p> <p data-bbox="288 414 1222 443">To improve transmission performance for international communications mainly.</p> <p data-bbox="288 483 387 512"><b>Method</b></p> <ol data-bbox="308 517 632 582" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 595 1399 1028"> <thead> <tr> <th data-bbox="336 595 639 640">Display</th> <th data-bbox="639 595 1399 640">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 640 639 685">T0 TIME OUT</td> <td data-bbox="639 640 1399 685">Sets the T0 time-out time.</td> </tr> <tr> <td data-bbox="336 685 639 730">T1 TIME OUT</td> <td data-bbox="639 685 1399 730">Sets the T1 time-out time.</td> </tr> <tr> <td data-bbox="336 730 639 775">T2 TIME OUT</td> <td data-bbox="639 730 1399 775">Sets the T2 time-out time.</td> </tr> <tr> <td data-bbox="336 775 639 819">Ta TIME OUT</td> <td data-bbox="639 775 1399 819">Sets the Ta time-out time.</td> </tr> <tr> <td data-bbox="336 819 639 864">Tb1 TIME OUT</td> <td data-bbox="639 819 1399 864">Sets the Tb1 time-out time.</td> </tr> <tr> <td data-bbox="336 864 639 909">Tb2 TIME OUT</td> <td data-bbox="639 864 1399 909">Sets the Tb2 time-out time.</td> </tr> <tr> <td data-bbox="336 909 639 954">Tc TIME OUT</td> <td data-bbox="639 909 1399 954">Sets the Tc time-out time.</td> </tr> <tr> <td data-bbox="336 954 639 1028">Td TIME OUT</td> <td data-bbox="639 954 1399 1028">Sets the Td time-out time.</td> </tr> </tbody> </table> <p data-bbox="288 1070 647 1099"><b>Setting the T0 time-out time</b></p> <p data-bbox="288 1104 1390 1205">Sets the time before detecting a CED or DIS signal after a dialing signal is sent. Depending on the quality of the exchange, or when the auto select function is selected at the destination unit, a line can be disconnected. Change the setting to prevent this problem.</p> <ol data-bbox="308 1209 932 1238" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 1252 1399 1348"> <thead> <tr> <th data-bbox="336 1252 975 1296">Description</th> <th data-bbox="975 1252 1187 1296">Setting range</th> <th data-bbox="1187 1252 1399 1296">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1296 975 1348">T0 time-out time</td> <td data-bbox="975 1296 1187 1348">30 to 90 s</td> <td data-bbox="1187 1296 1399 1348">56</td> </tr> </tbody> </table> <ol data-bbox="308 1352 767 1382" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p data-bbox="288 1424 647 1453"><b>Setting the T1 time-out time</b></p> <p data-bbox="288 1458 1425 1523">Sets the time before receiving the correct signal after call reception. No change is necessary for this maintenance item.</p> <ol data-bbox="308 1527 932 1556" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 1570 1399 1666"> <thead> <tr> <th data-bbox="336 1570 975 1615">Description</th> <th data-bbox="975 1570 1187 1615">Setting range</th> <th data-bbox="1187 1570 1399 1615">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1615 975 1666">T1 time-out time</td> <td data-bbox="975 1615 1187 1666">30 to 90 s</td> <td data-bbox="1187 1615 1399 1666">36</td> </tr> </tbody> </table> <ol data-bbox="308 1671 767 1700" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol>	Display	Description	T0 TIME OUT	Sets the T0 time-out time.	T1 TIME OUT	Sets the T1 time-out time.	T2 TIME OUT	Sets the T2 time-out time.	Ta TIME OUT	Sets the Ta time-out time.	Tb1 TIME OUT	Sets the Tb1 time-out time.	Tb2 TIME OUT	Sets the Tb2 time-out time.	Tc TIME OUT	Sets the Tc time-out time.	Td TIME OUT	Sets the Td time-out time.	Description	Setting range	Initial setting	T0 time-out time	30 to 90 s	56	Description	Setting range	Initial setting	T1 time-out time	30 to 90 s	36
Display	Description																														
T0 TIME OUT	Sets the T0 time-out time.																														
T1 TIME OUT	Sets the T1 time-out time.																														
T2 TIME OUT	Sets the T2 time-out time.																														
Ta TIME OUT	Sets the Ta time-out time.																														
Tb1 TIME OUT	Sets the Tb1 time-out time.																														
Tb2 TIME OUT	Sets the Tb2 time-out time.																														
Tc TIME OUT	Sets the Tc time-out time.																														
Td TIME OUT	Sets the Td time-out time.																														
Description	Setting range	Initial setting																													
T0 time-out time	30 to 90 s	56																													
Description	Setting range	Initial setting																													
T1 time-out time	30 to 90 s	36																													

Item No.	Description																						
<b>U641</b>	<p data-bbox="288 241 646 271"><b>Setting the T2 time-out time</b></p> <p data-bbox="288 277 801 306">The T2 time-out time decides the following.</p> <p data-bbox="288 313 863 342">From CFR signal output to image data reception</p> <p data-bbox="288 349 940 378">From image data reception to the next signal reception</p> <p data-bbox="288 385 1035 414">In ECM, from RNR signal detection to the next signal reception</p> <p data-bbox="308 421 932 450">1. Change the setting using the cursor left/right keys.</p> <table border="1" data-bbox="336 459 1399 589"> <thead> <tr> <th data-bbox="336 459 807 539">Description</th> <th data-bbox="807 459 991 539">Setting range</th> <th data-bbox="991 459 1171 539">Initial setting</th> <th data-bbox="1171 459 1399 539">Change in value per step</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 539 807 589">T2 time-out time</td> <td data-bbox="807 539 991 589">1 to 255</td> <td data-bbox="991 539 1171 589">69</td> <td data-bbox="1171 539 1399 589">100 ms</td> </tr> </tbody> </table> <p data-bbox="308 600 766 629">2. Press the start key. The value is set.</p> <p data-bbox="288 667 643 696"><b>Setting the Ta time-out time</b></p> <p data-bbox="288 703 1422 871">In the fax/telephone auto select mode, sets the time to continue ringing an operator through the connected telephone after receiving a call as a fax machine (see figure 1-3-3). A fax signal is received within the Ta set time, or the fax mode is selected automatically when the time elapses. In fax/telephone auto select mode, change the setting when fax reception is unsuccessful or a telephone fails to receive a call.</p> <p data-bbox="308 878 932 907">1. Change the setting using the cursor left/right keys.</p> <table border="1" data-bbox="336 916 1399 1014"> <thead> <tr> <th data-bbox="336 916 975 965">Description</th> <th data-bbox="975 916 1187 965">Setting range</th> <th data-bbox="1187 916 1399 965">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 965 975 1014">Ta time-out time</td> <td data-bbox="975 965 1187 1014">1 to 255</td> <td data-bbox="1187 965 1399 1014">30</td> </tr> </tbody> </table> <p data-bbox="308 1025 766 1055">2. Press the start key. The value is set.</p> <div data-bbox="518 1084 1220 1458" style="text-align: center;"> </div> <p data-bbox="619 1494 1102 1523"><b>Figure 1-3-3 Ta/Tb1/Tb2 time-out time</b></p> <p data-bbox="288 1561 662 1590"><b>Setting the Tb1 time-out time</b></p> <p data-bbox="288 1597 1412 1697">In the fax/telephone auto select mode, sets the time to start sending the ring back tone after receiving a call as a fax machine (see figure 1-3-3). In fax/telephone auto select mode, change the setting when fax reception is unsuccessful or a telephone fails to receive a call.</p> <p data-bbox="308 1704 932 1733">1. Change the setting using the cursor left/right keys.</p> <table border="1" data-bbox="336 1742 1399 1872"> <thead> <tr> <th data-bbox="336 1742 807 1823">Description</th> <th data-bbox="807 1742 991 1823">Setting range</th> <th data-bbox="991 1742 1171 1823">Initial setting</th> <th data-bbox="1171 1742 1399 1823">Change in value per step</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1823 807 1872">Tb1 time-out time</td> <td data-bbox="807 1823 991 1872">1 to 255</td> <td data-bbox="991 1823 1171 1872">20</td> <td data-bbox="1171 1823 1399 1872">100 ms</td> </tr> </tbody> </table> <p data-bbox="308 1883 766 1912">2. Press the start key. The value is set.</p>	Description	Setting range	Initial setting	Change in value per step	T2 time-out time	1 to 255	69	100 ms	Description	Setting range	Initial setting	Ta time-out time	1 to 255	30	Description	Setting range	Initial setting	Change in value per step	Tb1 time-out time	1 to 255	20	100 ms
Description	Setting range	Initial setting	Change in value per step																				
T2 time-out time	1 to 255	69	100 ms																				
Description	Setting range	Initial setting																					
Ta time-out time	1 to 255	30																					
Description	Setting range	Initial setting	Change in value per step																				
Tb1 time-out time	1 to 255	20	100 ms																				

Item No.	Description																				
U641	<p data-bbox="288 241 662 271"><b>Setting the Tb2 time-out time</b></p> <p data-bbox="288 277 1430 409">In the fax/telephone auto select mode, sets the time to start ringing an operator through the connected telephone after receiving a call as a fax machine (see figure 1-3-3). In the fax/telephone auto select mode, change the setting when fax reception is unsuccessful or a telephone fails to receive a call.</p> <ol data-bbox="308 416 930 445" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 459 1401 589"> <thead> <tr> <th data-bbox="336 459 807 539">Description</th> <th data-bbox="807 459 991 539">Setting range</th> <th data-bbox="991 459 1171 539">Initial setting</th> <th data-bbox="1171 459 1401 539">Change in value per step</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 539 807 589">Tb2 time-out time</td> <td data-bbox="807 539 991 589">1 to 255</td> <td data-bbox="991 539 1171 589">80</td> <td data-bbox="1171 539 1401 589">100 ms</td> </tr> </tbody> </table> <ol data-bbox="308 600 766 629" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p data-bbox="288 667 643 696"><b>Setting the Tc time-out time</b></p> <p data-bbox="288 703 1426 799">In the TAD mode, set the time to check if there are any triggers for shifting to fax reception after a connected telephone receives a call. Only the telephone function is available if shifting is not made within the set Tc time.</p> <p data-bbox="288 806 1410 869">In the TAD mode, change the setting when fax reception is unsuccessful or a telephone fails to receive a call.</p> <ol data-bbox="308 875 930 904" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 918 1401 1014"> <thead> <tr> <th data-bbox="336 918 975 965">Description</th> <th data-bbox="975 918 1187 965">Setting range</th> <th data-bbox="1187 918 1401 965">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 965 975 1014">Tc time-out time</td> <td data-bbox="975 965 1187 1014">1 to 255</td> <td data-bbox="1187 965 1401 1014">60</td> </tr> </tbody> </table> <ol data-bbox="308 1025 766 1055" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p data-bbox="288 1093 647 1122"><b>Setting the Td time-out time</b></p> <p data-bbox="288 1128 1426 1261">Sets the length of the time required to determine silent status (fax), one of the triggers for Tc time check. In the TAD mode, change the setting when fax reception is unsuccessful or a telephone fails to receive a call. Be sure not to set it too short; otherwise, the mode may be shifted to fax while the unit is being used as a telephone.</p> <ol data-bbox="308 1267 930 1296" style="list-style-type: none"> <li>1. Change the setting using the cursor left/right keys.</li> </ol> <table border="1" data-bbox="336 1310 1401 1406"> <thead> <tr> <th data-bbox="336 1310 868 1357">Description</th> <th data-bbox="868 1310 1096 1357">Setting range</th> <th data-bbox="1096 1310 1401 1357">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1357 868 1406">Td time-out time</td> <td data-bbox="868 1357 1096 1406">1 to 255</td> <td data-bbox="1096 1357 1401 1406">9 (120 V)/6 (220-240 V)</td> </tr> </tbody> </table> <ol data-bbox="308 1417 766 1447" style="list-style-type: none"> <li>2. Press the start key. The value is set.</li> </ol> <p data-bbox="288 1485 440 1514"><b>Completion</b></p> <p data-bbox="288 1520 1254 1550">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Description	Setting range	Initial setting	Change in value per step	Tb2 time-out time	1 to 255	80	100 ms	Description	Setting range	Initial setting	Tc time-out time	1 to 255	60	Description	Setting range	Initial setting	Td time-out time	1 to 255	9 (120 V)/6 (220-240 V)
Description	Setting range	Initial setting	Change in value per step																		
Tb2 time-out time	1 to 255	80	100 ms																		
Description	Setting range	Initial setting																			
Tc time-out time	1 to 255	60																			
Description	Setting range	Initial setting																			
Td time-out time	1 to 255	9 (120 V)/6 (220-240 V)																			

Item No.	Description								
U650	<p data-bbox="288 241 507 271"><b>Setting modem 1</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 1015 374">Sets the G3 cable equalizer. Sets the modem detection level.</p> <p data-bbox="288 380 400 409"><b>Purpose</b></p> <p data-bbox="288 414 1417 479">Perform the following adjustment to make the equalizer compatible with the line characteristics. To improve the transmission performance when a low quality line is used.</p> <p data-bbox="288 519 387 548"><b>Method</b></p> <ol data-bbox="304 553 632 618" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 631 1399 824"> <thead> <tr> <th data-bbox="336 631 639 676">Display</th> <th data-bbox="639 631 1399 676">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 676 639 721">REG. G3 TX EQR</td> <td data-bbox="639 676 1399 721">Sets the G3 transmission cable equalizer.</td> </tr> <tr> <td data-bbox="336 721 639 766">REG. G3 RX EQR</td> <td data-bbox="639 721 1399 766">Sets the G3 reception cable equalizer.</td> </tr> <tr> <td data-bbox="336 766 639 810">RX MODEM LEVEL</td> <td data-bbox="639 766 1399 810">Sets the modem detection level.</td> </tr> </tbody> </table> <p data-bbox="288 869 847 898"><b>Setting the G3 transmission cable equalizer</b></p> <ol data-bbox="304 902 783 1003" style="list-style-type: none"> <li>1. Select [0dB], [4dB], [8dB] or [12dB]. * : Initial setting: 0dB</li> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1043 802 1072"><b>Setting the G3 reception cable equalizer</b></p> <ol data-bbox="304 1077 783 1178" style="list-style-type: none"> <li>1. Select [0dB], [4dB], [8dB] or [12dB]. * : Initial setting: 0dB</li> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1218 727 1247"><b>Setting the modem detection level</b></p> <ol data-bbox="304 1252 895 1352" style="list-style-type: none"> <li>1. Select [33dBm], [38dBm], [43dBm] or [48dBm]. * : Initial setting: 43dBm</li> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="288 1393 440 1422"><b>Completion</b></p> <p data-bbox="288 1426 1254 1456">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	REG. G3 TX EQR	Sets the G3 transmission cable equalizer.	REG. G3 RX EQR	Sets the G3 reception cable equalizer.	RX MODEM LEVEL	Sets the modem detection level.
Display	Description								
REG. G3 TX EQR	Sets the G3 transmission cable equalizer.								
REG. G3 RX EQR	Sets the G3 reception cable equalizer.								
RX MODEM LEVEL	Sets the modem detection level.								

Item No.	Description																
U651	<p data-bbox="290 241 507 273"><b>Setting modem 2</b></p> <p data-bbox="290 309 440 340"><b>Description</b> Sets the modem output level. Sets the DTMF output level of a push-button dial telephone.</p> <p data-bbox="290 416 400 448"><b>Purpose</b> Used if problems occur when sending a signal with a push-button dial telephone.</p> <p data-bbox="290 519 384 551"><b>Setting</b></p> <ol data-bbox="308 555 1126 654" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> <li>3. Change the setting using the cursor left/right keys or numeric keys.</li> </ol> <table border="1" data-bbox="336 667 1385 963"> <thead> <tr> <th data-bbox="336 667 564 712">Display</th> <th data-bbox="564 667 959 712">Description</th> <th data-bbox="959 667 1157 712">Setting range</th> <th data-bbox="1157 667 1385 712">Initial setting</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 712 564 801">SGL LV MDM</td> <td data-bbox="564 712 959 801">Modem output level</td> <td data-bbox="959 712 1157 801">1 to 15</td> <td data-bbox="1157 712 1385 801">9 (120 V) 10 (220-240 V)</td> </tr> <tr> <td data-bbox="336 801 564 891">DTMF LV(C)</td> <td data-bbox="564 801 959 891">DTMF output level (main value)</td> <td data-bbox="959 801 1157 891">0 to 15.0</td> <td data-bbox="1157 801 1385 891">5 (120 V) 10.5 (220-240 V)</td> </tr> <tr> <td data-bbox="336 891 564 963">DTMF LV(D)</td> <td data-bbox="564 891 959 963">DTMF output level (level difference)</td> <td data-bbox="959 891 1157 963">0 to 5.5</td> <td data-bbox="1157 891 1385 963">2 (120 V) 2.5 (220-240 V)</td> </tr> </tbody> </table> <ol data-bbox="308 976 783 1008" style="list-style-type: none"> <li>4. Press the start key. The setting is set.</li> </ol> <p data-bbox="290 1043 440 1075"><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	Setting range	Initial setting	SGL LV MDM	Modem output level	1 to 15	9 (120 V) 10 (220-240 V)	DTMF LV(C)	DTMF output level (main value)	0 to 15.0	5 (120 V) 10.5 (220-240 V)	DTMF LV(D)	DTMF output level (level difference)	0 to 5.5	2 (120 V) 2.5 (220-240 V)
Display	Description	Setting range	Initial setting														
SGL LV MDM	Modem output level	1 to 15	9 (120 V) 10 (220-240 V)														
DTMF LV(C)	DTMF output level (main value)	0 to 15.0	5 (120 V) 10.5 (220-240 V)														
DTMF LV(D)	DTMF output level (level difference)	0 to 5.5	2 (120 V) 2.5 (220-240 V)														

Item No.	Description																								
U660	<p data-bbox="290 241 496 271"><b>Setting the NCU</b></p> <p data-bbox="290 311 440 340"><b>Description</b> Makes setting regarding the network control unit (NCU).</p> <p data-bbox="290 380 400 409"><b>Purpose</b> To be set when installing the facsimile kit.</p> <p data-bbox="290 486 387 515"><b>Method</b></p> <ol data-bbox="308 519 632 582" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be set.</li> </ol> <table border="1" data-bbox="336 598 1401 887"> <thead> <tr> <th data-bbox="336 598 639 642">Display</th> <th data-bbox="639 598 1401 642">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 642 639 687">EXCHANGE</td> <td data-bbox="639 642 1401 687">Sets the connection to PBX/PSTN.</td> </tr> <tr> <td data-bbox="336 687 639 732">DIAL TONE</td> <td data-bbox="639 687 1401 732">Sets PSTN dial tone detection.</td> </tr> <tr> <td data-bbox="336 732 639 777">BUSY TONE</td> <td data-bbox="639 732 1401 777">Sets busy tone detection.</td> </tr> <tr> <td data-bbox="336 777 639 822">PBX SETTING</td> <td data-bbox="639 777 1401 822">Setting for a PBX.</td> </tr> <tr> <td data-bbox="336 822 639 887">DC LOOP</td> <td data-bbox="639 822 1401 887">Sets the loop current detection before dialing.</td> </tr> </tbody> </table> <p data-bbox="290 929 754 958"><b>Setting the connection to PBX/PSTN</b></p> <p data-bbox="290 963 1329 992">Selects if a fax is to be connected to either a PBX or public switched telephone network.</p> <ol data-bbox="308 996 549 1025" style="list-style-type: none"> <li>1. Select the setting.</li> </ol> <table border="1" data-bbox="336 1041 1401 1187"> <thead> <tr> <th data-bbox="336 1041 639 1086">Display</th> <th data-bbox="639 1041 1401 1086">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1086 639 1131">PSTN</td> <td data-bbox="639 1086 1401 1131">Connected to the public switched telephone network.</td> </tr> <tr> <td data-bbox="336 1131 639 1187">PBX</td> <td data-bbox="639 1131 1401 1187">Connected to a PBX.</td> </tr> </tbody> </table> <p data-bbox="336 1196 611 1225">* : Initial setting: PSTN</p> <ol data-bbox="308 1229 780 1258" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol> <p data-bbox="290 1299 703 1328"><b>Setting PSTN dial tone detection</b></p> <p data-bbox="290 1332 1425 1395">Selects if the dial tone is detected to check the telephone is off the hook when a fax is connected to a public switched telephone network.</p> <ol data-bbox="308 1400 549 1429" style="list-style-type: none"> <li>1. Select the setting.</li> </ol> <table border="1" data-bbox="336 1444 1401 1590"> <thead> <tr> <th data-bbox="336 1444 639 1489">Display</th> <th data-bbox="639 1444 1401 1489">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1489 639 1534">ON</td> <td data-bbox="639 1489 1401 1534">Detects the dial tone.</td> </tr> <tr> <td data-bbox="336 1534 639 1590">OFF</td> <td data-bbox="639 1534 1401 1590">Does not detect the dial tone.</td> </tr> </tbody> </table> <p data-bbox="336 1599 579 1628">* : Initial setting: ON</p> <ol data-bbox="308 1632 780 1662" style="list-style-type: none"> <li>2. Press the start key. The setting is set.</li> </ol>	Display	Description	EXCHANGE	Sets the connection to PBX/PSTN.	DIAL TONE	Sets PSTN dial tone detection.	BUSY TONE	Sets busy tone detection.	PBX SETTING	Setting for a PBX.	DC LOOP	Sets the loop current detection before dialing.	Display	Description	PSTN	Connected to the public switched telephone network.	PBX	Connected to a PBX.	Display	Description	ON	Detects the dial tone.	OFF	Does not detect the dial tone.
Display	Description																								
EXCHANGE	Sets the connection to PBX/PSTN.																								
DIAL TONE	Sets PSTN dial tone detection.																								
BUSY TONE	Sets busy tone detection.																								
PBX SETTING	Setting for a PBX.																								
DC LOOP	Sets the loop current detection before dialing.																								
Display	Description																								
PSTN	Connected to the public switched telephone network.																								
PBX	Connected to a PBX.																								
Display	Description																								
ON	Detects the dial tone.																								
OFF	Does not detect the dial tone.																								



Item No.	Description																				
U660	<p data-bbox="288 241 644 271"><b>Setting busy tone detection</b></p> <p data-bbox="288 277 1430 443">When a fax signal is sent, sets whether the line is disconnected immediately after a busy tone is detected, or the busy tone is not detected and the line remains connected until T0 time-out time. Fax transmission may fail due to incorrect busy tone detection. When set to 2, this problem may be prevented. However, the line is not disconnected within the T0 time-out time even if the destination line is busy.</p> <p data-bbox="308 450 549 479">1. Select the setting.</p> <table border="1" data-bbox="336 495 1401 636"> <thead> <tr> <th data-bbox="336 495 639 539">Display</th> <th data-bbox="639 495 1401 539">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 539 639 584">ON</td> <td data-bbox="639 539 1401 584">Detects busy tone.</td> </tr> <tr> <td data-bbox="336 584 639 636">OFF</td> <td data-bbox="639 584 1401 636">Does not detect busy tone.</td> </tr> </tbody> </table> <p data-bbox="336 647 579 676">* : Initial setting: ON</p> <p data-bbox="308 683 780 712">2. Press the start key. The setting is set.</p> <p data-bbox="288 750 512 779"><b>Setting for a PBX</b></p> <p data-bbox="288 786 1129 815">Selects the mode to connect an outside call when connected to a PBX.</p> <p data-bbox="288 822 1326 851">According to the type of the PBX connected, select the mode to connect an outside call.</p> <p data-bbox="308 857 549 887">1. Select the setting.</p> <table border="1" data-bbox="336 902 1401 1090"> <thead> <tr> <th data-bbox="336 902 639 947">Display</th> <th data-bbox="639 902 1401 947">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 947 639 992">EARTH</td> <td data-bbox="639 947 1401 992">Earth mode</td> </tr> <tr> <td data-bbox="336 992 639 1037">FLASH</td> <td data-bbox="639 992 1401 1037">Flashing mode</td> </tr> <tr> <td data-bbox="336 1037 639 1090">LOOP</td> <td data-bbox="639 1037 1401 1090">Code number mode</td> </tr> </tbody> </table> <p data-bbox="336 1102 614 1131">* : Initial setting: LOOP</p> <p data-bbox="308 1137 780 1167">2. Press the start key. The setting is set.</p> <p data-bbox="288 1205 903 1234"><b>Setting the loop current detection before dialing</b></p> <p data-bbox="288 1240 1005 1270">Sets if the loop current detection is performed before dialing.</p> <p data-bbox="308 1276 549 1305">1. Select the setting.</p> <table border="1" data-bbox="336 1321 1401 1462"> <thead> <tr> <th data-bbox="336 1321 639 1366">Display</th> <th data-bbox="639 1321 1401 1366">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1366 639 1411">ON</td> <td data-bbox="639 1366 1401 1411">Performs loop current detection before dialing.</td> </tr> <tr> <td data-bbox="336 1411 639 1462">OFF</td> <td data-bbox="639 1411 1401 1462">Does not perform loop current detection before dialing.</td> </tr> </tbody> </table> <p data-bbox="336 1473 579 1503">* : Initial setting: ON</p> <p data-bbox="308 1509 780 1538">2. Press the start key. The setting is set.</p> <p data-bbox="288 1576 440 1606"><b>Completion</b></p> <p data-bbox="288 1612 1254 1641">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	ON	Detects busy tone.	OFF	Does not detect busy tone.	Display	Description	EARTH	Earth mode	FLASH	Flashing mode	LOOP	Code number mode	Display	Description	ON	Performs loop current detection before dialing.	OFF	Does not perform loop current detection before dialing.
Display	Description																				
ON	Detects busy tone.																				
OFF	Does not detect busy tone.																				
Display	Description																				
EARTH	Earth mode																				
FLASH	Flashing mode																				
LOOP	Code number mode																				
Display	Description																				
ON	Performs loop current detection before dialing.																				
OFF	Does not perform loop current detection before dialing.																				

Item No.	Description																				
U670	<p data-bbox="287 241 491 275"><b>Outputting lists</b></p> <p data-bbox="287 309 440 342"><b>Description</b></p> <p data-bbox="287 344 879 378">Outputs a list of data regarding fax transmissions.</p> <p data-bbox="287 380 1385 445">Printing a list is disabled either when a job is remaining in the buffer or when [Pause All Print Jobs] is pressed to halt printing.</p> <p data-bbox="287 448 400 481"><b>Purpose</b></p> <p data-bbox="287 483 1189 517">To check conditions of use, settings and transmission procedures of the fax.</p> <p data-bbox="287 551 387 584"><b>Method</b></p> <ol data-bbox="304 586 879 689" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Select the item to be output.</li> <li>3. Press the start key. The selected list is output.</li> </ol> <table border="1" data-bbox="336 701 1399 1283"> <thead> <tr> <th data-bbox="344 712 641 745">Display</th> <th data-bbox="641 712 1391 745">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="344 757 641 824">SETTING LIST</td> <td data-bbox="641 757 1391 824">Outputs a list of software switches, self telephone number, confidential boxes, ROM versions and other information.</td> </tr> <tr> <td data-bbox="344 835 641 902">ACTION LIST</td> <td data-bbox="641 835 1391 902">Outputs a list of error history, transmission line details and other information.</td> </tr> <tr> <td data-bbox="344 913 641 981">SELF ST REPORT</td> <td data-bbox="641 913 1391 981">Outputs a list of settings in maintenance mode (own-status report) regarding fax transmission only.</td> </tr> <tr> <td data-bbox="344 992 641 1037">PROTOCOL LIST</td> <td data-bbox="641 992 1391 1037">Outputs a list of transmission procedures.</td> </tr> <tr> <td data-bbox="344 1048 641 1093">ERROR LIST</td> <td data-bbox="641 1048 1391 1093">Outputs a list of error.</td> </tr> <tr> <td data-bbox="344 1104 641 1149">ADDR BOOK(No.)</td> <td data-bbox="641 1104 1391 1149">Outputs address book in order IDs were added</td> </tr> <tr> <td data-bbox="344 1160 641 1205">ADDR BOOK(Name)</td> <td data-bbox="641 1160 1391 1205">Outputs address book in order of names</td> </tr> <tr> <td data-bbox="344 1216 641 1261">ONE-TOUCH LIST</td> <td data-bbox="641 1216 1391 1261">Outputs a list of one-touch.</td> </tr> <tr> <td data-bbox="344 1272 641 1317">GROUP LIST</td> <td data-bbox="641 1272 1391 1317">Outputs a list of group.</td> </tr> </tbody> </table> <p data-bbox="287 1328 440 1361"><b>Completion</b></p> <p data-bbox="287 1364 1254 1397">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	SETTING LIST	Outputs a list of software switches, self telephone number, confidential boxes, ROM versions and other information.	ACTION LIST	Outputs a list of error history, transmission line details and other information.	SELF ST REPORT	Outputs a list of settings in maintenance mode (own-status report) regarding fax transmission only.	PROTOCOL LIST	Outputs a list of transmission procedures.	ERROR LIST	Outputs a list of error.	ADDR BOOK(No.)	Outputs address book in order IDs were added	ADDR BOOK(Name)	Outputs address book in order of names	ONE-TOUCH LIST	Outputs a list of one-touch.	GROUP LIST	Outputs a list of group.
Display	Description																				
SETTING LIST	Outputs a list of software switches, self telephone number, confidential boxes, ROM versions and other information.																				
ACTION LIST	Outputs a list of error history, transmission line details and other information.																				
SELF ST REPORT	Outputs a list of settings in maintenance mode (own-status report) regarding fax transmission only.																				
PROTOCOL LIST	Outputs a list of transmission procedures.																				
ERROR LIST	Outputs a list of error.																				
ADDR BOOK(No.)	Outputs address book in order IDs were added																				
ADDR BOOK(Name)	Outputs address book in order of names																				
ONE-TOUCH LIST	Outputs a list of one-touch.																				
GROUP LIST	Outputs a list of group.																				

Item No.	Description																		
U695	<p data-bbox="288 241 596 271"><b>FAX function customize</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 1428 409">Sets fax batch transmission ON/OFF. Also changes the print size priority at the time of small size reception.</p> <p data-bbox="288 414 400 443"><b>Purpose</b></p> <p data-bbox="288 448 624 477">To be executed as required.</p> <p data-bbox="288 517 384 546"><b>Setting</b></p> <p data-bbox="304 551 549 580">1. Select the setting.</p> <table border="1" data-bbox="336 595 1399 741"> <thead> <tr> <th data-bbox="336 595 639 640">Display</th> <th data-bbox="639 595 1399 640">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 640 639 685">FAX BULK TX</td> <td data-bbox="639 640 1399 685">fax batch transmission ON/OFF</td> </tr> <tr> <td data-bbox="336 685 639 741">A5 PT PRI CHG</td> <td data-bbox="639 685 1399 741">Change of print size priority at the time of small size reception</td> </tr> </tbody> </table> <p data-bbox="288 786 592 815"><b>Setting: [FAX BULK TX]</b></p> <p data-bbox="304 819 587 848">1. Select [ON] or [OFF].</p> <table border="1" data-bbox="336 864 1399 1010"> <thead> <tr> <th data-bbox="336 864 639 909">Display</th> <th data-bbox="639 864 1399 909">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 909 639 954">ON</td> <td data-bbox="639 909 1399 954">Fax batch transmission is enabled.</td> </tr> <tr> <td data-bbox="336 954 639 1010">OFF</td> <td data-bbox="639 954 1399 1010">Fax batch transmission is disabled.</td> </tr> </tbody> </table> <p data-bbox="336 1016 580 1046">* : Initial setting: ON</p> <p data-bbox="304 1050 783 1079">2. Press the start key. The setting is set.</p> <p data-bbox="288 1124 612 1153"><b>Setting: [A5 PT PRI CHG]</b></p> <p data-bbox="304 1158 587 1187">1. Select [ON] or [OFF].</p> <table border="1" data-bbox="336 1202 1399 1348"> <thead> <tr> <th data-bbox="336 1202 639 1247">Display</th> <th data-bbox="639 1202 1399 1247">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1247 639 1292">ON</td> <td data-bbox="639 1247 1399 1292">At the time of A5 size reception: A5→B5→A4</td> </tr> <tr> <td data-bbox="336 1292 639 1348">OFF</td> <td data-bbox="639 1292 1399 1348">At the time of A5 size reception: A5→A4→B5</td> </tr> </tbody> </table> <p data-bbox="336 1355 592 1384">* : Initial setting: OFF</p> <p data-bbox="304 1388 783 1417">2. Press the start key. The setting is set.</p> <p data-bbox="288 1462 440 1491"><b>Completion</b></p> <p data-bbox="288 1496 1254 1525">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>	Display	Description	FAX BULK TX	fax batch transmission ON/OFF	A5 PT PRI CHG	Change of print size priority at the time of small size reception	Display	Description	ON	Fax batch transmission is enabled.	OFF	Fax batch transmission is disabled.	Display	Description	ON	At the time of A5 size reception: A5→B5→A4	OFF	At the time of A5 size reception: A5→A4→B5
Display	Description																		
FAX BULK TX	fax batch transmission ON/OFF																		
A5 PT PRI CHG	Change of print size priority at the time of small size reception																		
Display	Description																		
ON	Fax batch transmission is enabled.																		
OFF	Fax batch transmission is disabled.																		
Display	Description																		
ON	At the time of A5 size reception: A5→B5→A4																		
OFF	At the time of A5 size reception: A5→A4→B5																		

Item No.	Description																																														
U699	<p data-bbox="288 241 667 271"><b>Setting the software switches</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 1046 374">Sets the software switches on the FAX control PWB individually.</p> <p data-bbox="288 380 400 409"><b>Purpose</b></p> <p data-bbox="288 414 1366 515">To change the setting when a problem such as split output of received originals occurs. Since the communication performance is largely affected, normally this setting need not be changed.</p> <p data-bbox="288 555 387 584"><b>Method</b></p> <ol data-bbox="304 589 1390 790" style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Press [SW No.].</li> <li>3. Enter the desired software switch number (3 digits) using the numeric keys and press the enter key.</li> <li>4. Use numeric keys 7 to 0 to switch each bit between 0 and 1.</li> <li>5. Press the start key to set the value.</li> </ol> <p data-bbox="288 831 440 860"><b>Completion</b></p> <p data-bbox="288 864 1254 893">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p> <p data-bbox="288 934 1102 963"><b>List of Software Switches of Which the Setting Can Be Changed</b></p> <p data-bbox="288 1003 762 1032">&lt;Communication control procedure&gt;</p> <table border="1" data-bbox="336 1046 1399 2004"> <thead> <tr> <th data-bbox="336 1046 427 1090">No.</th> <th data-bbox="427 1046 595 1090">Bit</th> <th data-bbox="595 1046 1399 1090">Item</th> </tr> </thead> <tbody> <tr> <td data-bbox="336 1090 427 1189" rowspan="2">36</td> <td data-bbox="427 1090 595 1144">7654</td> <td data-bbox="595 1090 1399 1144">Coding format in transmission</td> </tr> <tr> <td data-bbox="427 1144 595 1189">3210</td> <td data-bbox="595 1144 1399 1189">Coding format in reception</td> </tr> <tr> <td data-bbox="336 1189 427 1476" rowspan="6">37</td> <td data-bbox="427 1189 595 1243">5</td> <td data-bbox="595 1189 1399 1243">33600 bps/V34</td> </tr> <tr> <td data-bbox="427 1243 595 1296">4</td> <td data-bbox="595 1243 1399 1296">31200 bps/V34</td> </tr> <tr> <td data-bbox="427 1296 595 1350">3</td> <td data-bbox="595 1296 1399 1350">28800 bps/V34</td> </tr> <tr> <td data-bbox="427 1350 595 1404">2</td> <td data-bbox="595 1350 1399 1404">26400 bps/V34</td> </tr> <tr> <td data-bbox="427 1404 595 1458">1</td> <td data-bbox="595 1404 1399 1458">24000 bps/V34</td> </tr> <tr> <td data-bbox="427 1458 595 1512">0</td> <td data-bbox="595 1458 1399 1512">21600 bps/V34</td> </tr> <tr> <td data-bbox="336 1512 427 1861" rowspan="8">38</td> <td data-bbox="427 1512 595 1565">7</td> <td data-bbox="595 1512 1399 1565">19200 bps/V34</td> </tr> <tr> <td data-bbox="427 1565 595 1619">6</td> <td data-bbox="595 1565 1399 1619">16800 bps/V34</td> </tr> <tr> <td data-bbox="427 1619 595 1673">5</td> <td data-bbox="595 1619 1399 1673">14400 bps/V34</td> </tr> <tr> <td data-bbox="427 1673 595 1727">4</td> <td data-bbox="595 1673 1399 1727">12000 bps/V34</td> </tr> <tr> <td data-bbox="427 1727 595 1780">3</td> <td data-bbox="595 1727 1399 1780">9600 bps/V34</td> </tr> <tr> <td data-bbox="427 1780 595 1834">2</td> <td data-bbox="595 1780 1399 1834">7200 bps/V34</td> </tr> <tr> <td data-bbox="427 1834 595 1888">1</td> <td data-bbox="595 1834 1399 1888">4800 bps/V34</td> </tr> <tr> <td data-bbox="427 1888 595 1942">0</td> <td data-bbox="595 1888 1399 1942">2400 bps/V34</td> </tr> <tr> <td data-bbox="336 1942 427 1995">41</td> <td data-bbox="427 1942 595 1995">3</td> <td data-bbox="595 1942 1399 1995">FSK detection in V.8</td> </tr> <tr> <td data-bbox="336 1995 427 2033" rowspan="2">42</td> <td data-bbox="427 1995 595 2049">4</td> <td data-bbox="595 1995 1399 2049">4800 bps when low-speed setting is active</td> </tr> <tr> <td data-bbox="427 2049 595 2033">2</td> <td data-bbox="595 2049 1399 2033">FIF length in transmission of more than 4 times of DIS/DTC signal</td> </tr> </tbody> </table>	No.	Bit	Item	36	7654	Coding format in transmission	3210	Coding format in reception	37	5	33600 bps/V34	4	31200 bps/V34	3	28800 bps/V34	2	26400 bps/V34	1	24000 bps/V34	0	21600 bps/V34	38	7	19200 bps/V34	6	16800 bps/V34	5	14400 bps/V34	4	12000 bps/V34	3	9600 bps/V34	2	7200 bps/V34	1	4800 bps/V34	0	2400 bps/V34	41	3	FSK detection in V.8	42	4	4800 bps when low-speed setting is active	2	FIF length in transmission of more than 4 times of DIS/DTC signal
No.	Bit	Item																																													
36	7654	Coding format in transmission																																													
	3210	Coding format in reception																																													
37	5	33600 bps/V34																																													
	4	31200 bps/V34																																													
	3	28800 bps/V34																																													
	2	26400 bps/V34																																													
	1	24000 bps/V34																																													
	0	21600 bps/V34																																													
38	7	19200 bps/V34																																													
	6	16800 bps/V34																																													
	5	14400 bps/V34																																													
	4	12000 bps/V34																																													
	3	9600 bps/V34																																													
	2	7200 bps/V34																																													
	1	4800 bps/V34																																													
	0	2400 bps/V34																																													
41	3	FSK detection in V.8																																													
42	4	4800 bps when low-speed setting is active																																													
	2	FIF length in transmission of more than 4 times of DIS/DTC signal																																													

Item No.	Description		
<b>U699</b>	<b>&lt;Communication time setting&gt;</b>		
	<b>No.</b>	<b>Bit</b>	<b>Item</b>
	53	76543210	T3 timeout setting
	54	76543210	T4 timeout setting (automatic equipment)
	55	76543210	T5 timeout setting
	60	76543210	Time before transmission of CNG (1100 Hz) signal
	63	76543210	T0 timeout setting (manual equipment)
	64	7	Phase C timeout in ECM reception
	66	76543210	Timeout 1 in countermeasures against echo
	68	76543210	Timeout for FSK detection start in V.8
	<b>&lt;Modem setting&gt;</b>		
	<b>No.</b>	<b>Bit</b>	<b>Item</b>
	89	76543	RX gain adjust
	<b>&lt;NCU setting&gt;</b>		
	<b>No.</b>	<b>Bit</b>	<b>Item</b>
	121	7654	Dial tone/busy tone detection pattern
	122	7654	Busy tone detection pattern
		1	Busy tone detection in automatic FAX/TEL switching
	125	76543210	Access code registration for connection to PSTN
	126	7654	FAX/TEL automatic switching ringback tone ON/OFF cycle
	<b>&lt;Calling time setting&gt;</b>		
	<b>No.</b>	<b>Bit</b>	<b>Item</b>
	133	76543210	DTMF signal transmission time
	134	76543210	DTMF signal pause time
	141	76543210	Ringer detection cycle (minimum)
	142	76543210	Ringer detection cycle (maximum)
	143	76543210	Ringer ON time detection
	144	76543210	Ringer OFF time detection
145	76543210	Ringer OFF non-detection time	
147	76543210	Dial tone detection time (continuous tone)	
148	76543210	Allowable dial tone interruption time	
149	76543210	Time for transmitting selection signal after closing the DC circuit	
151	76543210	Ringer frequency detection invalid time	

Item No.	Description
U910	<p data-bbox="287 241 651 275"><b>Clearing the black ratio data</b></p> <p data-bbox="287 311 440 340"><b>Description</b></p> <p data-bbox="287 344 922 374">Clears the accumulated black ratio data for A4 sheet.</p> <p data-bbox="287 380 400 409"><b>Purpose</b></p> <p data-bbox="287 414 1129 443">To clear data as required at times such as during maintenance service.</p> <p data-bbox="287 486 387 515"><b>Method</b></p> <ol data-bbox="304 519 1094 618" style="list-style-type: none"><li data-bbox="304 519 564 548">1. Press the start key.</li><li data-bbox="304 553 584 582">2. Select [ALL CLEAR].</li><li data-bbox="304 586 1094 616">3. Press the start key. The accumulated black ratio data is cleared.</li></ol> <p data-bbox="287 658 440 687"><b>Completion</b></p> <p data-bbox="287 692 1254 721">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>

Item No.	Description																														
U917	<p data-bbox="290 241 746 273"><b>Setting backup data reading/writing</b></p> <p data-bbox="290 309 440 340"><b>Description</b></p> <p data-bbox="290 344 1423 412">Retrieves the backup data to a USB memory from the machine; or writes the data from the USB memory to the machine.</p> <p data-bbox="290 416 400 448"><b>Purpose</b></p> <p data-bbox="290 452 957 483">To store and write data when replacing the control PWB.</p> <p data-bbox="290 519 387 551"><b>Method</b></p> <ol data-bbox="306 555 1423 828" style="list-style-type: none"> <li>1. Press the power key on the operation panel, and after verifying the power indicator has gone off, switch off the main power switch.</li> <li>2. Insert USB memory in USB memory slot.</li> <li>3. Turn the main power switch on. Wait for 10 seconds to allow the machine to recognize the USB memory.</li> <li>4. Enter the maintenance item.</li> <li>5. Press the start key.</li> <li>6. Select [Export] or [Import] and press the start key.</li> </ol> <table border="1" data-bbox="338 837 1401 981"> <thead> <tr> <th data-bbox="338 837 641 882">Display</th> <th data-bbox="641 837 1401 882">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="338 882 641 927">IMPORT</td> <td data-bbox="641 882 1401 927">Writing data from the USB memory to the machine</td> </tr> <tr> <td data-bbox="338 927 641 981">EXPORT</td> <td data-bbox="641 927 1401 981">Retrieving from the machine to a USB memory</td> </tr> </tbody> </table> <ol data-bbox="306 994 523 1025" style="list-style-type: none"> <li>7. Select the item.</li> </ol> <table border="1" data-bbox="338 1034 1401 1559"> <thead> <tr> <th data-bbox="338 1034 549 1079">Display</th> <th data-bbox="549 1034 928 1079">Description</th> <th data-bbox="928 1034 1401 1079">Depending data</th> </tr> </thead> <tbody> <tr> <td data-bbox="338 1079 549 1160">ADDRESS BOOK</td> <td data-bbox="549 1079 928 1160">Address book</td> <td data-bbox="928 1079 1401 1160">-</td> </tr> <tr> <td data-bbox="338 1160 549 1205">JOB ACCNT.</td> <td data-bbox="549 1160 928 1205">Job accounting</td> <td data-bbox="928 1160 1401 1205">-</td> </tr> <tr> <td data-bbox="338 1205 549 1249">ONE TOUCH</td> <td data-bbox="549 1205 928 1249">Information on one-touch key</td> <td data-bbox="928 1205 1401 1249">Address book</td> </tr> <tr> <td data-bbox="338 1249 549 1294">USER</td> <td data-bbox="549 1249 928 1294">User managements</td> <td data-bbox="928 1249 1401 1294">Job accounting</td> </tr> <tr> <td data-bbox="338 1294 549 1375">PROGRAM</td> <td data-bbox="549 1294 928 1375">Program information</td> <td data-bbox="928 1294 1401 1375">Job accountings and user managements</td> </tr> <tr> <td data-bbox="338 1375 549 1456">DOCUMENT BOX</td> <td data-bbox="549 1375 928 1456">Document box information</td> <td data-bbox="928 1375 1401 1456">Job accountings and user managements</td> </tr> <tr> <td data-bbox="338 1456 549 1559">FAX FORWARD</td> <td data-bbox="549 1456 928 1559">FAX transfer information</td> <td data-bbox="928 1456 1401 1559">Job accountings, user managements and document box information</td> </tr> </tbody> </table> <p data-bbox="338 1568 1356 1635">* : Since data are dependent with each other, data other than those assigned are also retrieved or written in.</p> <ol data-bbox="306 1639 1391 1841" style="list-style-type: none"> <li>8. Select [ON].</li> <li>9. Press the start key. Starts reading or writing. The progress of selected item is displayed in %. When an error occurs, the operation is canceled and an error code is displayed.</li> <li>10. When normally completed, [FIN] is displayed.</li> <li>11. Turn the main power switch off and on after completing writing when selecting [IMPORT].</li> </ol>	Display	Description	IMPORT	Writing data from the USB memory to the machine	EXPORT	Retrieving from the machine to a USB memory	Display	Description	Depending data	ADDRESS BOOK	Address book	-	JOB ACCNT.	Job accounting	-	ONE TOUCH	Information on one-touch key	Address book	USER	User managements	Job accounting	PROGRAM	Program information	Job accountings and user managements	DOCUMENT BOX	Document box information	Job accountings and user managements	FAX FORWARD	FAX transfer information	Job accountings, user managements and document box information
Display	Description																														
IMPORT	Writing data from the USB memory to the machine																														
EXPORT	Retrieving from the machine to a USB memory																														
Display	Description	Depending data																													
ADDRESS BOOK	Address book	-																													
JOB ACCNT.	Job accounting	-																													
ONE TOUCH	Information on one-touch key	Address book																													
USER	User managements	Job accounting																													
PROGRAM	Program information	Job accountings and user managements																													
DOCUMENT BOX	Document box information	Job accountings and user managements																													
FAX FORWARD	FAX transfer information	Job accountings, user managements and document box information																													

Item No.	Description			
U917	<b>Error Codes</b>			
	<b>Codes</b>	<b>Description</b>	<b>Codes</b>	<b>Description</b>
	e002	Parameter error	e31e	User managements error
	e003	File write error	e31f	User managements open error
	e004	File initialization error	e320	User managements error
	e005	File error	e410	Box file open error
	e006	Processing error	e411	Box error in writing
	e010	Address book clear error (contact)	e412	Box error in reading
	e011	Address book open error (contact)	e413	Box list error
	e012	Address book list error (contact)	e414	Box list error
	e013	Address book list error (contact)	e415	Box error
	e014	Address book clear error (group)	e416	Box error
	e015	Address book open error (group)	e417	Box open error
	e016	Address book list error (group)	e418	Box close error
	e017	Address book list error (group)	e419	Box creation error
	e110	Job accounting clear error	e41a	Box creation error
	e111	Job accounting open error	e41b	Box deletion error
	e112	Job accounting open error	e41c	Box movement error
	e113	Job accounting error in writing	e510	Program error in writing
	e114	Job accounting list error	e511	Program error in reading
	e115	Job accounting list error	e710	Fax memory open error
	e210	One-touch open error	e711	Fax memory initialization error
	e211	One-touch list error	e712	Fax memory list error
	e212	One-touch list error	e713	Fax memory error
	e310	User managements backup error	e714	Fax memory error
	e311	User managements clear error	e715	Fax memory mode error
	e312	User managements open error	e716	Fax memory error
	e313	User managements open error	e717	Fax memory error
	e314	User managements open error	e718	Fax memory mode error
	e315	User managements error in writing	e910	File reading error
	e316	User managements list error	e911	File writing error
	e317	User managements list error	e912	Data mismatch
	e318	User managements list error	e913	Log file open error
	e319	User managements list error	e914	Log file error in writing
	e31a	User managements open error	e915	Directory open error
	e31b	User managements error	e916	Directory error in reading
	e31c	User managements error	e917	Synchronization error
	e31d	User managements open error	e918	Synchronization error




Item No.	Description																																																		
U917	<b>Error Codes</b>																																																		
	<table border="1"> <thead> <tr> <th data-bbox="295 286 414 331">Codes</th> <th data-bbox="414 286 901 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="295 331 414 376">d000</td> <td data-bbox="414 331 901 376">Unspecified error</td> </tr> <tr> <td data-bbox="295 376 414 421">d001</td> <td data-bbox="414 376 901 421">HDD unavailable</td> </tr> <tr> <td data-bbox="295 421 414 465">d002</td> <td data-bbox="414 421 901 465">USB memory is not inserted</td> </tr> <tr> <td data-bbox="295 465 414 510">d003</td> <td data-bbox="414 465 901 510">File for writing is not found in the USB</td> </tr> <tr> <td data-bbox="295 510 414 555">d004</td> <td data-bbox="414 510 901 555">File for reading is not found in the HDD</td> </tr> <tr> <td data-bbox="295 555 414 600">d005</td> <td data-bbox="414 555 901 600">USB error in writing</td> </tr> <tr> <td data-bbox="295 600 414 645">d006</td> <td data-bbox="414 600 901 645">USB error in reading</td> </tr> <tr> <td data-bbox="295 645 414 689">d007</td> <td data-bbox="414 645 901 689">USB unmount error</td> </tr> <tr> <td data-bbox="295 689 414 734">d008</td> <td data-bbox="414 689 901 734">File rename error</td> </tr> <tr> <td data-bbox="295 734 414 779">d009</td> <td data-bbox="414 734 901 779">File open error</td> </tr> <tr> <td data-bbox="295 779 414 824">d00a</td> <td data-bbox="414 779 901 824">File close error</td> </tr> </tbody> </table>		Codes	Description	d000	Unspecified error	d001	HDD unavailable	d002	USB memory is not inserted	d003	File for writing is not found in the USB	d004	File for reading is not found in the HDD	d005	USB error in writing	d006	USB error in reading	d007	USB unmount error	d008	File rename error	d009	File open error	d00a	File close error	<table border="1"> <thead> <tr> <th data-bbox="901 286 1021 331">Codes</th> <th data-bbox="1021 286 1439 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="901 331 1021 376">d00b</td> <td data-bbox="1021 331 1439 376">File reading error</td> </tr> <tr> <td data-bbox="901 376 1021 421">d00c</td> <td data-bbox="1021 376 1439 421">File writing error</td> </tr> <tr> <td data-bbox="901 421 1021 465">d00d</td> <td data-bbox="1021 421 1439 465">File copy error</td> </tr> <tr> <td data-bbox="901 465 1021 510">d00e</td> <td data-bbox="1021 465 1439 510">File compressed error</td> </tr> <tr> <td data-bbox="901 510 1021 555">d00f</td> <td data-bbox="1021 510 1439 555">File decompressed error</td> </tr> <tr> <td data-bbox="901 555 1021 600">d010</td> <td data-bbox="1021 555 1439 600">Directory open error</td> </tr> <tr> <td data-bbox="901 600 1021 645">d011</td> <td data-bbox="1021 600 1439 645">Directory creation error</td> </tr> <tr> <td data-bbox="901 645 1021 689">d012</td> <td data-bbox="1021 645 1439 689">File writing error</td> </tr> <tr> <td data-bbox="901 689 1021 734">d013</td> <td data-bbox="1021 689 1439 734">File reading error</td> </tr> <tr> <td data-bbox="901 734 1021 779">d014</td> <td data-bbox="1021 734 1439 779">File deletion error</td> </tr> <tr> <td data-bbox="901 779 1021 824">d015</td> <td data-bbox="1021 779 1439 824">File copy error to the USB</td> </tr> </tbody> </table>		Codes	Description	d00b	File reading error	d00c	File writing error	d00d	File copy error	d00e	File compressed error	d00f	File decompressed error	d010	Directory open error	d011	Directory creation error	d012	File writing error	d013	File reading error	d014	File deletion error	d015
Codes	Description																																																		
d000	Unspecified error																																																		
d001	HDD unavailable																																																		
d002	USB memory is not inserted																																																		
d003	File for writing is not found in the USB																																																		
d004	File for reading is not found in the HDD																																																		
d005	USB error in writing																																																		
d006	USB error in reading																																																		
d007	USB unmount error																																																		
d008	File rename error																																																		
d009	File open error																																																		
d00a	File close error																																																		
Codes	Description																																																		
d00b	File reading error																																																		
d00c	File writing error																																																		
d00d	File copy error																																																		
d00e	File compressed error																																																		
d00f	File decompressed error																																																		
d010	Directory open error																																																		
d011	Directory creation error																																																		
d012	File writing error																																																		
d013	File reading error																																																		
d014	File deletion error																																																		
d015	File copy error to the USB																																																		
U927	<b>Clearing the all copy counts and machine life counts (one time only)</b>																																																		
	<p data-bbox="279 1406 1439 1451"><b>Description</b> Resets all of the counts back to zero.</p> <p data-bbox="279 1496 1439 1585"><b>Supplement</b> The total account counter and the machine life counter can be cleared only once if all count values are 1000 or less.</p> <p data-bbox="279 1630 1439 1787"><b>Method</b>  <ol style="list-style-type: none"> <li>1. Press the start key.</li> <li>2. Press [EXECUTE].</li> <li>3. Press the start key. All copy counts and machine life counts are cleared. [CAN NOT EXECUTE] is displayed if the count cannot be cleared.</li> </ol> </p> <p data-bbox="279 1832 1439 1877"><b>Completion</b> Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>																																																		

Item No.	Description
U977	<p data-bbox="288 241 533 271"><b>Data capture mode</b></p> <p data-bbox="288 311 440 340"><b>Description</b></p> <p data-bbox="288 344 983 374">Store the print data sent to the machine into USB memory.</p> <p data-bbox="288 380 400 409"><b>Purpose</b></p> <p data-bbox="288 414 1211 443">In case to occur the error at printing, check the print data sent to the machine.</p> <p data-bbox="288 483 387 512"><b>Method</b></p> <ol data-bbox="304 517 823 757" style="list-style-type: none"><li>1. Insert USB memory in USB memory slot.</li><li>2. Turn the main power switch on.</li><li>3. Enter the maintenance item.</li><li>4. Press the start key.</li><li>5. Select [EXECUTE].</li><li>6. Press the start key.</li><li>7. Send the print data to the machine.</li></ol> <p data-bbox="336 761 1150 790">Once the print data is stored into USB memory, OK will be displayed.</p> <p data-bbox="288 831 440 860"><b>Completion</b></p> <p data-bbox="288 864 1254 893">Press the stop key. The screen for selecting a maintenance item No. is displayed.</p>

## 1-3-2 Service mode

The machine is equipped with a maintenance function which can be used to maintain and service the machine.

### (1) Executing a service mode

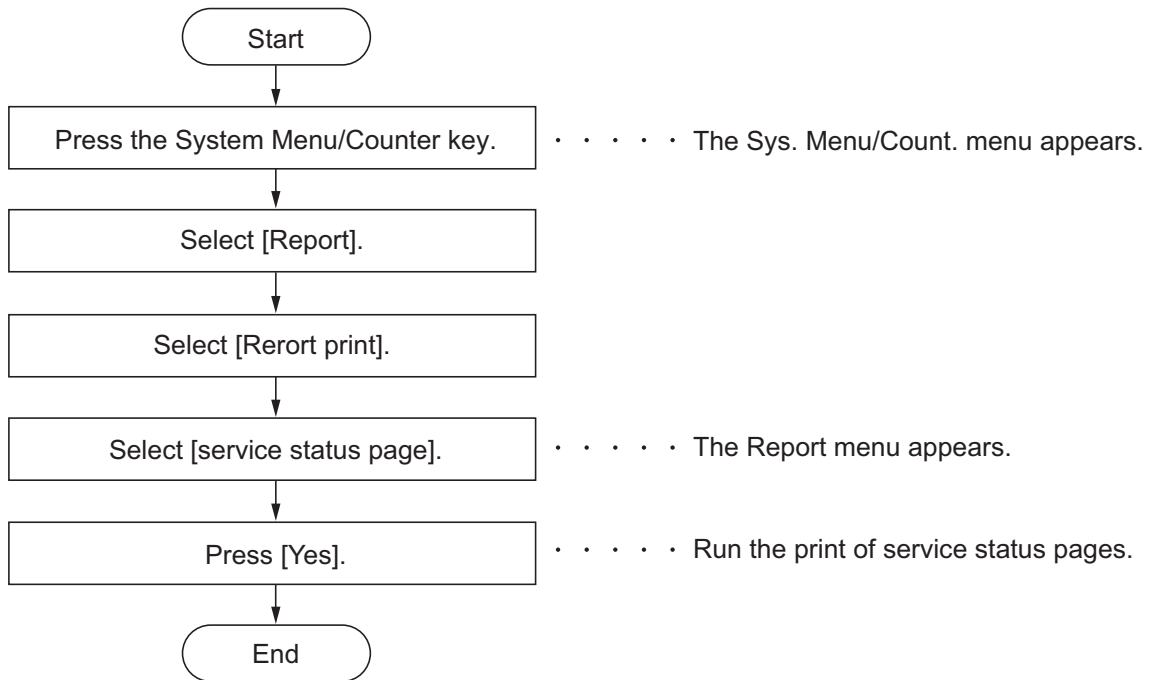

**(2) Description of service mode**

Service items	Description
Service Status	<p><b>Printing a status page for service purpose</b></p> <p><b>Description</b> Prints a status page for service purpose. The status page includes various settings and service cumulative.</p> <p><b>Purpose</b> To acquire the current printing environmental parameters and cumulative information.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Select [Service status].</li> <li>2. Select [YES]. Two pages will be printed.</li> </ol> <p><b>Completion</b> Press the System Menu/Counter key.</p>

Service items	Description																																																								
	<p data-bbox="387 241 683 275"><b>Service status page (1)</b></p> <div data-bbox="338 304 1396 1765" style="border: 1px solid black; padding: 10px;"> <h3 data-bbox="363 331 801 376">Service Status Page</h3> <p data-bbox="363 376 422 405">MFP</p> <p data-bbox="1150 376 1342 405"><b>(2)</b> 08/03/2011 12:00</p> <p data-bbox="352 427 829 456"><b>(1)</b> Firmware version 2MD_2F00.001.020 2011.02.24</p> <p data-bbox="979 405 1353 456"><b>(3)</b> [XXXXXXXX] <b>(4)</b> [XXXXXXXX] <b>(5)</b> [XXXXXXXX]</p> <hr/> <h4 data-bbox="368 506 655 535">Controller Information</h4> <p data-bbox="400 539 544 568"><b>Memory status</b></p> <table data-bbox="363 568 702 645"> <tr> <td><b>(7)</b> Standard Size</td> <td>128.0 KB</td> </tr> <tr> <td><b>(8)</b> Option Slot</td> <td>128.0 KB</td> </tr> <tr> <td><b>(9)</b> Total Size</td> <td>256.0 KB</td> </tr> </table> <p data-bbox="874 562 1050 591"><b>(28)</b> FRPO Status</p> <table data-bbox="927 591 1353 645"> <tr> <td>User Top Margin</td> <td>A1+A2/100</td> <td>0.00</td> </tr> <tr> <td>User Left Margin</td> <td>A3+A4/100</td> <td>0.00</td> </tr> </table> <p data-bbox="400 674 448 703"><b>Time</b></p> <table data-bbox="352 703 772 779"> <tr> <td><b>(10)</b> Local Time Zone</td> <td>+01:00 Tokio</td> </tr> <tr> <td><b>(11)</b> Date and Time</td> <td>06/04/2010 12:00</td> </tr> <tr> <td><b>(12)</b> Time Server</td> <td>10.183.53.13</td> </tr> </table> <p data-bbox="400 808 564 837"><b>Installed Options</b></p> <table data-bbox="352 837 815 965"> <tr> <td><b>(13)</b> Paper feeder</td> <td>Cassette</td> </tr> <tr> <td><b>(14)</b> Memory Card</td> <td>Not Installed</td> </tr> <tr> <td><b>(15)</b> Card Authentication Kit (B)</td> <td>Not Installed</td> </tr> <tr> <td><b>(16)</b> USB Keyboard</td> <td>Connected</td> </tr> <tr> <td><b>(17)</b> USB Keyboard Type</td> <td>US-English</td> </tr> </table> <p data-bbox="400 994 603 1023"><b>Digital Dot Coverage</b></p> <table data-bbox="352 1023 879 1317"> <tr> <td><b>(18)</b> Average(%) / Usage Page(A4/Letter Conversion)</td> <td></td> </tr> <tr> <td><b>(19)</b> Total</td> <td></td> </tr> <tr> <td>    K: 1.10</td> <td>/ 1111111.11</td> </tr> <tr> <td><b>(20)</b> Copy</td> <td></td> </tr> <tr> <td>    K: 1.10</td> <td>/ 1111111.11</td> </tr> <tr> <td><b>(21)</b> Printer</td> <td></td> </tr> <tr> <td>    K: 1.10</td> <td>/ 1111111.11</td> </tr> <tr> <td><b>(22)</b> FAX</td> <td></td> </tr> <tr> <td>    K: 1.10</td> <td>/ 1111111.11</td> </tr> <tr> <td><b>(23)</b> Period</td> <td>(27/10/2009 - 03/11/2009 08:40)</td> </tr> <tr> <td><b>(24)</b> Last Page (%)</td> <td>1.00</td> </tr> </table> <p data-bbox="927 1256 1331 1285">PDF mode      Y5      00</p> <p data-bbox="400 1361 560 1391"><b>FAX Information</b></p> <table data-bbox="352 1391 628 1467"> <tr> <td><b>(25)</b> Rings (Normal)</td> <td>3</td> </tr> <tr> <td><b>(26)</b> Rings (FAX/TEL)</td> <td>3</td> </tr> <tr> <td><b>(27)</b> Rings (TAD)</td> <td>3</td> </tr> </table> <hr/> <p data-bbox="858 1697 874 1727" style="text-align: center;">1</p> <p data-bbox="1098 1697 1362 1727" style="text-align: right;"><b>(6)</b> [XXXXXXXXXXXXXXXXXXXX]</p> </div>	<b>(7)</b> Standard Size	128.0 KB	<b>(8)</b> Option Slot	128.0 KB	<b>(9)</b> Total Size	256.0 KB	User Top Margin	A1+A2/100	0.00	User Left Margin	A3+A4/100	0.00	<b>(10)</b> Local Time Zone	+01:00 Tokio	<b>(11)</b> Date and Time	06/04/2010 12:00	<b>(12)</b> Time Server	10.183.53.13	<b>(13)</b> Paper feeder	Cassette	<b>(14)</b> Memory Card	Not Installed	<b>(15)</b> Card Authentication Kit (B)	Not Installed	<b>(16)</b> USB Keyboard	Connected	<b>(17)</b> USB Keyboard Type	US-English	<b>(18)</b> Average(%) / Usage Page(A4/Letter Conversion)		<b>(19)</b> Total		K: 1.10	/ 1111111.11	<b>(20)</b> Copy		K: 1.10	/ 1111111.11	<b>(21)</b> Printer		K: 1.10	/ 1111111.11	<b>(22)</b> FAX		K: 1.10	/ 1111111.11	<b>(23)</b> Period	(27/10/2009 - 03/11/2009 08:40)	<b>(24)</b> Last Page (%)	1.00	<b>(25)</b> Rings (Normal)	3	<b>(26)</b> Rings (FAX/TEL)	3	<b>(27)</b> Rings (TAD)	3
<b>(7)</b> Standard Size	128.0 KB																																																								
<b>(8)</b> Option Slot	128.0 KB																																																								
<b>(9)</b> Total Size	256.0 KB																																																								
User Top Margin	A1+A2/100	0.00																																																							
User Left Margin	A3+A4/100	0.00																																																							
<b>(10)</b> Local Time Zone	+01:00 Tokio																																																								
<b>(11)</b> Date and Time	06/04/2010 12:00																																																								
<b>(12)</b> Time Server	10.183.53.13																																																								
<b>(13)</b> Paper feeder	Cassette																																																								
<b>(14)</b> Memory Card	Not Installed																																																								
<b>(15)</b> Card Authentication Kit (B)	Not Installed																																																								
<b>(16)</b> USB Keyboard	Connected																																																								
<b>(17)</b> USB Keyboard Type	US-English																																																								
<b>(18)</b> Average(%) / Usage Page(A4/Letter Conversion)																																																									
<b>(19)</b> Total																																																									
K: 1.10	/ 1111111.11																																																								
<b>(20)</b> Copy																																																									
K: 1.10	/ 1111111.11																																																								
<b>(21)</b> Printer																																																									
K: 1.10	/ 1111111.11																																																								
<b>(22)</b> FAX																																																									
K: 1.10	/ 1111111.11																																																								
<b>(23)</b> Period	(27/10/2009 - 03/11/2009 08:40)																																																								
<b>(24)</b> Last Page (%)	1.00																																																								
<b>(25)</b> Rings (Normal)	3																																																								
<b>(26)</b> Rings (FAX/TEL)	3																																																								
<b>(27)</b> Rings (TAD)	3																																																								

Figure 1-3-4



Service items	Description	
	<b>Detail of service status page</b>	
	<b>No.</b>	<b>Description</b>
		<b>Supplement</b>
(1)	Firmware version	-
(2)	System date	-
(3)	Engine soft version	-
(4)	Engine boot version	-
(5)	Operation panel mask version	-
(6)	Machine serial number	-
(7)	Standard memory size	-
(8)	Optional memory size	-
(9)	Total memory size	-
(10)	Local time zone	-
(11)	Report output date	Day/Month/Year hour:minute
(12)	NTP server name	-
(13)	Presence or absence of the optional paper feeder	Paper feeder 1/Paper feeder 2/Paper feeder 3
(14)	Presence or absence of the optional memory card	-
(15)	Presence or absence of the card authentication kit (B)	-
(16)	Presence or absence of the USB Keyboard	-
(17)	Type of the USB Keyboard	-
(18)	Page of relation to the A4/Letter	-
(19)	Average coverage for total	-
(20)	Average coverage for copy	-
(21)	Average coverage for printer	-
(22)	Average coverage for fax	-
(23)	Cleared date and output date	-
(24)	Coverage on the final output page	-
(25)	Number of rings	0 to 15
(26)	Number of rings before auto-automatic switching	0 to 15
(27)	Number of rings before connecting to answering machine	0 to 15
(28)	FRPO setting	-

Service items	Description				
	<table border="1"> <thead> <tr> <th data-bbox="295 286 387 331">No.</th> <th data-bbox="387 286 798 331">Description</th> <th data-bbox="798 286 1423 331">Supplement</th> </tr> </thead> </table>	No.	Description	Supplement	
No.	Description	Supplement			
	(29) NV RAM version	<p>           _ 1F3 1225 _ 1F3 1225            (a) (b) (c) (d) (e) (f)         </p> <p>           (a) Consistency of the present software version and the database            _ (underscore): OK            * (Asterisk): NG         </p> <p>           (b) Database version            (c) The oldest time stamp of database version            (d) Consistency of the present software version and the ME firmware version            _ (underscore): OK            * (Asterisk): NG         </p> <p>           (e) ME firmware version            (f) The oldest time stamp of the ME database version         </p> <p>           Normal if (a) and (d) are underscored, and (b) and (e) are identical with (c) and (f).         </p>			
	(30) Scanner firmware version	-			
	(31) Fax firmware version	-			
	(32) Mac address	-			
	(33) Number of original feed from DP	-			
	(34) The last sent date and time	-			
	(35) Transmission address	-			
	(36) Destination information	-			
	(37) Area information	-			
	(38) Margin settings	Top margin/Left margin			
	(39) Low power mode settings	Low power mode ON/OFF setting/ Time of low power mode			
	(40) Top offset setting	-			
	(41) Left offset setting	-			
	(41) Margin/Page length/Page width settings	Top margin integer part/Top margin decimal part/ Left margin integer part/Left margin decimal part/ Page length integer part/Page length decimal part/ Page width integer part/Page width decimal part			
	(42) Life counter (The first line)	Machine life/MP tray/Cassette 1/Cassette 2/ Cassette 3 /Duplex			
	(43) Life counter (The second line)	Maintenance kit			
	(44) Panel lock information	0: OFF/1: Partial lock/2: Full lock			
	(45) USB information	0: Not installed/1: Full speed/2: Hi speed			
	(46) Paper handling information	0: Paper source unit select/1: Paper source unit			



Service items	Description																																																																					
	<table border="1"> <thead> <tr> <th data-bbox="295 286 379 331">No.</th> <th data-bbox="379 286 794 331">Description</th> <th data-bbox="794 286 1425 331">Supplement</th> </tr> </thead> <tr> <td data-bbox="295 331 379 421">(47)</td> <td data-bbox="379 331 794 421">Black and white printing double count mode</td> <td data-bbox="794 331 1425 421">0: All single counts 3: Folio, Single count, Less than 330 mm (length)</td> </tr> <tr> <td data-bbox="295 421 379 465">(48)</td> <td data-bbox="379 421 794 465">Billing counting timing</td> <td data-bbox="794 421 1425 465">-</td> </tr> <tr> <td data-bbox="295 465 379 510">(49)</td> <td data-bbox="379 465 794 510">Temperature (machine inside)</td> <td data-bbox="794 465 1425 510">-</td> </tr> <tr> <td data-bbox="295 510 379 555">(50)</td> <td data-bbox="379 510 794 555">Temperature (machine outside)</td> <td data-bbox="794 510 1425 555">-</td> </tr> <tr> <td data-bbox="295 555 379 645">(51)</td> <td data-bbox="379 555 794 645">Relative temperature (machine outside)</td> <td data-bbox="794 555 1425 645">-</td> </tr> <tr> <td data-bbox="295 645 379 734">(52)</td> <td data-bbox="379 645 794 734">Absolute temperature (machineoutside)</td> <td data-bbox="794 645 1425 734">-</td> </tr> <tr> <td data-bbox="295 734 379 779">(53)</td> <td data-bbox="379 734 794 779">LXI calibration information</td> <td data-bbox="794 734 1425 779">-</td> </tr> <tr> <td data-bbox="295 779 379 824">(54)</td> <td data-bbox="379 779 794 824">Fixed assets number</td> <td data-bbox="794 779 1425 824">-</td> </tr> <tr> <td data-bbox="295 824 379 869">(55)</td> <td data-bbox="379 824 794 869">Job end judgment time-out time</td> <td data-bbox="794 824 1425 869">-</td> </tr> <tr> <td data-bbox="295 869 379 913">(56)</td> <td data-bbox="379 869 794 913">Job end detection mode</td> <td data-bbox="794 869 1425 913">-</td> </tr> <tr> <td data-bbox="295 913 379 1211">(57)</td> <td data-bbox="379 913 794 1211">Media type attributes 1 to 28 (Not used: 18, 19, 20)</td> <td data-bbox="794 913 1425 1211">Weight settings 0: Light/1: Normal 1 / 2: Normal 2 / 3: Normal 3/ 4: Heavy 1 / 5: Heavy 2 / 6: Heavy 3 / 7: Extra Heavy Fuser settings 0: High / 1: Middle / 2: Low / 3: Vellum Duplex settings 0: Disable / 1: Enable</td> </tr> <tr> <td data-bbox="295 1211 379 1256">(58)</td> <td data-bbox="379 1211 794 1256">RFID information</td> <td data-bbox="794 1211 1425 1256">-</td> </tr> <tr> <td data-bbox="295 1256 379 1346">(59)</td> <td data-bbox="379 1256 794 1346">RFID reader/writer version information</td> <td data-bbox="794 1256 1425 1346">-</td> </tr> <tr> <td data-bbox="295 1346 379 1424">(60)</td> <td data-bbox="379 1346 794 1424">Toner installation mode information</td> <td data-bbox="794 1346 1425 1424">-</td> </tr> <tr> <td data-bbox="295 1424 379 1469">(61)</td> <td data-bbox="379 1424 794 1469">Drum status</td> <td data-bbox="794 1424 1425 1469">1 byte</td> </tr> <tr> <td data-bbox="295 1469 379 1514">(62)</td> <td data-bbox="379 1469 794 1514">Drum surface potential</td> <td data-bbox="794 1469 1425 1514">16 byte</td> </tr> <tr> <td data-bbox="295 1514 379 1559">(63)</td> <td data-bbox="379 1514 794 1559">Drum sensitivity</td> <td data-bbox="794 1514 1425 1559">16 byte</td> </tr> <tr> <td data-bbox="295 1559 379 1603">(64)</td> <td data-bbox="379 1559 794 1603">Quantity of light (LSU)</td> <td data-bbox="794 1559 1425 1603">32 byte</td> </tr> <tr> <td data-bbox="295 1603 379 1648">(65)</td> <td data-bbox="379 1603 794 1648">DRT parameter coefficient</td> <td data-bbox="794 1603 1425 1648">1012 byte</td> </tr> <tr> <td data-bbox="295 1648 379 1738">(66)</td> <td data-bbox="379 1648 794 1738">Soft version of the optional paper feeder</td> <td data-bbox="794 1648 1425 1738">-</td> </tr> <tr> <td data-bbox="295 1738 379 1783">(67)</td> <td data-bbox="379 1738 794 1783">Version of the optional message</td> <td data-bbox="794 1738 1425 1783">-</td> </tr> <tr> <td data-bbox="295 1783 379 1839">(68)</td> <td data-bbox="379 1783 794 1839">Maintenance information</td> <td data-bbox="794 1783 1425 1839">-</td> </tr> </table>	No.	Description	Supplement	(47)	Black and white printing double count mode	0: All single counts 3: Folio, Single count, Less than 330 mm (length)	(48)	Billing counting timing	-	(49)	Temperature (machine inside)	-	(50)	Temperature (machine outside)	-	(51)	Relative temperature (machine outside)	-	(52)	Absolute temperature (machineoutside)	-	(53)	LXI calibration information	-	(54)	Fixed assets number	-	(55)	Job end judgment time-out time	-	(56)	Job end detection mode	-	(57)	Media type attributes 1 to 28 (Not used: 18, 19, 20)	Weight settings 0: Light/1: Normal 1 / 2: Normal 2 / 3: Normal 3/ 4: Heavy 1 / 5: Heavy 2 / 6: Heavy 3 / 7: Extra Heavy Fuser settings 0: High / 1: Middle / 2: Low / 3: Vellum Duplex settings 0: Disable / 1: Enable	(58)	RFID information	-	(59)	RFID reader/writer version information	-	(60)	Toner installation mode information	-	(61)	Drum status	1 byte	(62)	Drum surface potential	16 byte	(63)	Drum sensitivity	16 byte	(64)	Quantity of light (LSU)	32 byte	(65)	DRT parameter coefficient	1012 byte	(66)	Soft version of the optional paper feeder	-	(67)	Version of the optional message	-	(68)	Maintenance information	-
No.	Description	Supplement																																																																				
(47)	Black and white printing double count mode	0: All single counts 3: Folio, Single count, Less than 330 mm (length)																																																																				
(48)	Billing counting timing	-																																																																				
(49)	Temperature (machine inside)	-																																																																				
(50)	Temperature (machine outside)	-																																																																				
(51)	Relative temperature (machine outside)	-																																																																				
(52)	Absolute temperature (machineoutside)	-																																																																				
(53)	LXI calibration information	-																																																																				
(54)	Fixed assets number	-																																																																				
(55)	Job end judgment time-out time	-																																																																				
(56)	Job end detection mode	-																																																																				
(57)	Media type attributes 1 to 28 (Not used: 18, 19, 20)	Weight settings 0: Light/1: Normal 1 / 2: Normal 2 / 3: Normal 3/ 4: Heavy 1 / 5: Heavy 2 / 6: Heavy 3 / 7: Extra Heavy Fuser settings 0: High / 1: Middle / 2: Low / 3: Vellum Duplex settings 0: Disable / 1: Enable																																																																				
(58)	RFID information	-																																																																				
(59)	RFID reader/writer version information	-																																																																				
(60)	Toner installation mode information	-																																																																				
(61)	Drum status	1 byte																																																																				
(62)	Drum surface potential	16 byte																																																																				
(63)	Drum sensitivity	16 byte																																																																				
(64)	Quantity of light (LSU)	32 byte																																																																				
(65)	DRT parameter coefficient	1012 byte																																																																				
(66)	Soft version of the optional paper feeder	-																																																																				
(67)	Version of the optional message	-																																																																				
(68)	Maintenance information	-																																																																				

  |

Service items	Description																																																																					
	<table border="1" data-bbox="296 293 1422 595"> <thead> <tr> <th data-bbox="296 293 384 338">No.</th> <th data-bbox="389 293 794 338">Description</th> <th colspan="8" data-bbox="799 293 1422 338">Supplemen</th> </tr> </thead> <tbody> <tr> <td data-bbox="296 344 384 389">(69)</td> <td data-bbox="389 344 794 389">Durm ID</td> <td colspan="8" data-bbox="799 344 1422 389">-</td> </tr> <tr> <td data-bbox="296 396 384 441">(70)</td> <td data-bbox="389 396 794 441">Drum serial number</td> <td colspan="8" data-bbox="799 396 1422 441">-</td> </tr> <tr> <td colspan="2" data-bbox="296 448 794 595">Code conversion</td> <td colspan="8" data-bbox="691 472 1374 568"> <table border="1" data-bbox="691 472 1374 568"> <thead> <tr> <th data-bbox="691 472 759 517">A</th> <th data-bbox="764 472 833 517">B</th> <th data-bbox="837 472 906 517">C</th> <th data-bbox="911 472 979 517">D</th> <th data-bbox="984 472 1053 517">E</th> <th data-bbox="1058 472 1126 517">F</th> <th data-bbox="1131 472 1200 517">G</th> <th data-bbox="1204 472 1273 517">H</th> <th data-bbox="1278 472 1347 517">I</th> <th data-bbox="1351 472 1420 517">J</th> </tr> </thead> <tbody> <tr> <td data-bbox="691 524 759 568">0</td> <td data-bbox="764 524 833 568">1</td> <td data-bbox="837 524 906 568">2</td> <td data-bbox="911 524 979 568">3</td> <td data-bbox="984 524 1053 568">4</td> <td data-bbox="1058 524 1126 568">5</td> <td data-bbox="1131 524 1200 568">6</td> <td data-bbox="1204 524 1273 568">7</td> <td data-bbox="1278 524 1347 568">8</td> <td data-bbox="1351 524 1420 568">9</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>										No.	Description	Supplemen								(69)	Durm ID	-								(70)	Drum serial number	-								Code conversion		<table border="1" data-bbox="691 472 1374 568"> <thead> <tr> <th data-bbox="691 472 759 517">A</th> <th data-bbox="764 472 833 517">B</th> <th data-bbox="837 472 906 517">C</th> <th data-bbox="911 472 979 517">D</th> <th data-bbox="984 472 1053 517">E</th> <th data-bbox="1058 472 1126 517">F</th> <th data-bbox="1131 472 1200 517">G</th> <th data-bbox="1204 472 1273 517">H</th> <th data-bbox="1278 472 1347 517">I</th> <th data-bbox="1351 472 1420 517">J</th> </tr> </thead> <tbody> <tr> <td data-bbox="691 524 759 568">0</td> <td data-bbox="764 524 833 568">1</td> <td data-bbox="837 524 906 568">2</td> <td data-bbox="911 524 979 568">3</td> <td data-bbox="984 524 1053 568">4</td> <td data-bbox="1058 524 1126 568">5</td> <td data-bbox="1131 524 1200 568">6</td> <td data-bbox="1204 524 1273 568">7</td> <td data-bbox="1278 524 1347 568">8</td> <td data-bbox="1351 524 1420 568">9</td> </tr> </tbody> </table>								A	B	C	D	E	F	G	H	I	J	0	1	2	3	4	5	6	7	8	9
No.	Description	Supplemen																																																																				
(69)	Durm ID	-																																																																				
(70)	Drum serial number	-																																																																				
Code conversion		<table border="1" data-bbox="691 472 1374 568"> <thead> <tr> <th data-bbox="691 472 759 517">A</th> <th data-bbox="764 472 833 517">B</th> <th data-bbox="837 472 906 517">C</th> <th data-bbox="911 472 979 517">D</th> <th data-bbox="984 472 1053 517">E</th> <th data-bbox="1058 472 1126 517">F</th> <th data-bbox="1131 472 1200 517">G</th> <th data-bbox="1204 472 1273 517">H</th> <th data-bbox="1278 472 1347 517">I</th> <th data-bbox="1351 472 1420 517">J</th> </tr> </thead> <tbody> <tr> <td data-bbox="691 524 759 568">0</td> <td data-bbox="764 524 833 568">1</td> <td data-bbox="837 524 906 568">2</td> <td data-bbox="911 524 979 568">3</td> <td data-bbox="984 524 1053 568">4</td> <td data-bbox="1058 524 1126 568">5</td> <td data-bbox="1131 524 1200 568">6</td> <td data-bbox="1204 524 1273 568">7</td> <td data-bbox="1278 524 1347 568">8</td> <td data-bbox="1351 524 1420 568">9</td> </tr> </tbody> </table>								A	B	C	D	E	F	G	H	I	J	0	1	2	3	4	5	6	7	8	9																																									
A	B	C	D	E	F	G	H	I	J																																																													
0	1	2	3	4	5	6	7	8	9																																																													
<b>Network Status</b>	<p data-bbox="384 658 826 692"><b>Printing a status page for network</b></p> <p data-bbox="384 725 539 759"><b>Description</b> Prints a status page for network.</p> <p data-bbox="384 792 501 826"><b>Purpose</b> To acquire the detailed network setting information.</p> <p data-bbox="384 898 488 931"><b>Method</b></p> <ol data-bbox="405 936 1254 1070" style="list-style-type: none"> <li>1. Enter the Service Setting menu.</li> <li>2. Select [Network Status].</li> <li>3. Press the start key.</li> <li>4. Press [Yes] (the Left Select key). Network status page will be printed.</li> </ol> <p data-bbox="384 1106 539 1140"><b>Completion</b> Press the stop key.</p>																																																																					
<b>New Developer</b>	<p data-bbox="384 1189 695 1223"><b>Performing toner install</b></p> <p data-bbox="384 1256 539 1290"><b>Description</b> Replenishes toner rapidly from the toner container into the developing unit.</p> <p data-bbox="384 1323 501 1357"><b>Purpose</b> Perform the developer refreshing when the destiny is light or the faint of dark part occurs.</p> <p data-bbox="384 1464 488 1498"><b>Method</b></p> <ol data-bbox="405 1503 1214 1637" style="list-style-type: none"> <li>1. Enter the Service Setting menu.</li> <li>2. Select [New Developer].</li> <li>3. Press the start key.</li> <li>4. Press [Yes] (the Left Select key). Toner install mode is performed.</li> </ol> <p data-bbox="384 1673 539 1706"><b>Completion</b> Press the stop key.</p>																																																																					

Service items	Description								
<b>Auto DrumRefresh</b>	<p><b>Automatic drum refreshing</b></p> <p><b>Description</b> Sets the specify the duration of automatic drum refreshing.</p> <p><b>Purpose</b> To prevent bleeding of the output image when operating environment is one of high humidity.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Enter the Service Setting menu.</li> <li>2. Select [Auto DrumRefresh].</li> <li>3. Press the start key.</li> <li>4. Select the setting.</li> </ol> <table border="1" data-bbox="437 701 1385 963"> <thead> <tr> <th>Display</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>Disables automatic drum refreshing</td> </tr> <tr> <td>Standard</td> <td>Sets the standard duration for automatic drum refreshing (maximum 140 s)</td> </tr> <tr> <td>Long</td> <td>Sets a longer time for automatic drum refreshing (maximum 180 s)</td> </tr> </tbody> </table> <ol style="list-style-type: none"> <li>5. Press the start key. The setting is set.</li> </ol> <p><b>Completion</b> Press the stop key.</p>	Display	Description	OFF	Disables automatic drum refreshing	Standard	Sets the standard duration for automatic drum refreshing (maximum 140 s)	Long	Sets a longer time for automatic drum refreshing (maximum 180 s)
Display	Description								
OFF	Disables automatic drum refreshing								
Standard	Sets the standard duration for automatic drum refreshing (maximum 140 s)								
Long	Sets a longer time for automatic drum refreshing (maximum 180 s)								
<b>Drum Refresh</b>	<p><b>Performing drum refreshing</b></p> <p><b>Description</b> To perform drum refreshing.</p> <p><b>Purpose</b> To clean the drum surface when image failure occurs due to the drum. This mode is effective when dew condensation on the drum occurs.</p> <p><b>Method</b></p> <ol style="list-style-type: none"> <li>1. Enter the Service Setting menu.</li> <li>2. Select [Drum Refresh].</li> <li>3. Press the start key.</li> <li>4. Press [Yes] (the Left Select key). Drum refresh is performed.</li> </ol> <p><b>Completion</b> Press the stop key.</p>								



This page is intentionally left blank.

# 1-4-1 Paper misfeed detection

## (1) Paper misfeed indication

When a paper misfeed occurs, the machine immediately stops printing and displays the paper misfeed message on the operation panel. To remove paper misfeed in the machine, pull out the paper cassette, pull out the rear unit, remove the developing unit or open the duplex cover.

## (2) Paper misfeed detection condition

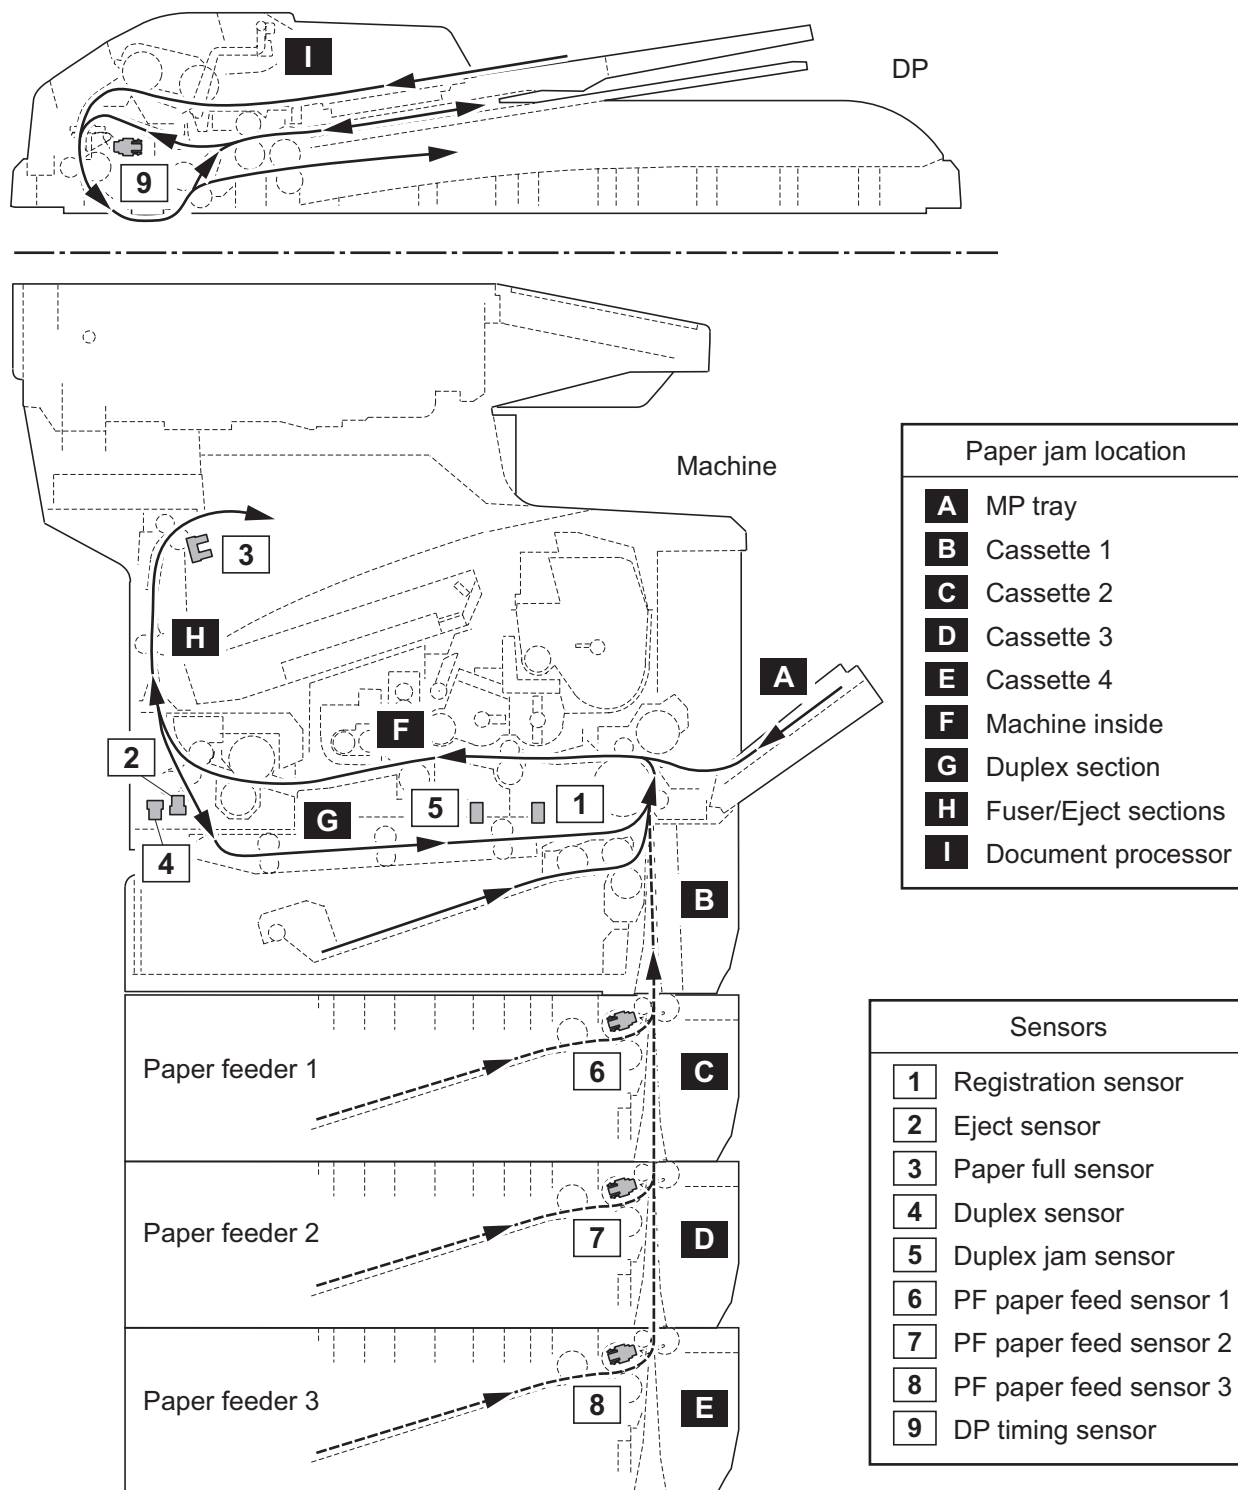


Figure 1-4-1

Section	Code	Conditions	Jam location
Machine	<b>0010</b>	Paper does not arrive at the registration sensor (RS) within specified time from start of paper feed (paper feed from MP tray).	<b>A</b>
		Paper does not arrive at the registration sensor (RS) within specified time from start of paper feed (paper feed from cassette).	<b>B</b>
		Paper does not arrive at the registration sensor (RS) within specified time of PF paper feed sensor turning on (paper feed from paper feeder).	<b>B</b>
		Paper does not arrive at the registration sensor (RS) within specified time from start of paper switchback (duplex refeeding).	<b>G</b>
	<b>0011</b>	Paper does not pass the registration sensor (RS) within specified time from start of secondary paper feed.	<b>F</b>
	<b>0012</b>	Paper remains at the registration sensor (RS) when power is turned on.	<b>F</b>
	<b>0020</b>	Paper does not arrive at the eject sensor (ES) within specified time from start of secondary paper feed.	<b>F</b>
	<b>0021</b>	Paper does not pass the eject sensor (ES) within specified time of the registration sensor (RS) turning off.	<b>H</b>
	<b>0022</b>	Paper remains at the eject sensor (ES) when power is turned on.	<b>H</b>
	<b>00A1</b>	Paper does not arrive at the duplex sensor (DUS) within specified time from start of paper switchback.	<b>H</b>
	<b>00A2</b>	Paper does not pass the duplex sensor (DUS) within specified time of the duplex sensor (DUS) turning on.	<b>H</b>
	<b>00A3</b>	Paper does not arrive at the duplex jam sensor (DUJS) within specified time of the duplex sensor (DUS) turning on.	<b>G</b>
	<b>00A4</b>	Paper does not pass the duplex jam sensor (DUJS) within specified time from start of secondary paper feed (duplex refeeding).	<b>G</b>
	<b>00A5</b>	Paper remains at the duplex sensor (DUS) or the duplex jam sensor (DUJS) when power is turned on.	<b>G</b>
	<b>00E0</b>	Paper misfeed occurs due to forced stop when an error occurs during printing.	-
	<b>00F0</b>	Paper does not arrive at the paper full sensor (PFS) within specified time of the eject sensor (ES) turning on.	<b>H</b>
	<b>00F1</b>	Paper misfeed by system error.	-
	<b>00F2</b>	Paper misfeed by system error.	-

\*: Refer to figure 1-4-2 for paper jam location (see page 1-4-1)

Section	Code	Conditions	Jam location
Paper feeder	<b>0030</b>	Paper does not arrive at the PF paper feed sensor 1 within specified time from start of paper feed (paper feed from paper feeder 1).	<b>C</b>
		Paper does not arrive at the PF paper feed sensor 1 within specified time of the PF paper feed sensor 2 turning on (paper feed from paper feeder 2).	<b>C</b>
		Paper does not arrive at the PF paper feed sensor 1 within specified time of the PF paper feed sensor 3 turning on (paper feed from paper feeder 3).	<b>C</b>
	<b>0031</b>	Paper does not pass the PF paper feed sensor 1 within specified time of the PF paper feed sensor 1 turning on.	<b>C</b>
	<b>0032</b>	Paper remains at the PF paper feed sensor 1 when power is turned on.	<b>C</b>
	<b>0040</b>	Paper does not arrive at the PF paper feed sensor 2 within specified time from start of paper feed (paper feed from paper feeder 2).	<b>D</b>
		Paper does not arrive at the PF paper feed sensor 2 within specified time of the PF paper feed sensor 3 turning on (paper feed from paper feeder 3).	<b>D</b>
	<b>0041</b>	Paper does not pass the PF paper feed sensor 2 within specified time of the PF paper feed sensor 2 turning on.	<b>D</b>
	<b>0042</b>	Paper remains at the PF paper feed sensor 2 when power is turned on.	<b>D</b>
	<b>0050</b>	Paper does not arrive at the PF paper feed sensor 3 within specified time from start of paper feed (paper feed from paper feeder 3).	<b>E</b>
	<b>0051</b>	Paper does not pass the PF paper feed sensor 3 within specified time of the PF paper feed sensor 3 turning on.	<b>E</b>
	<b>0052</b>	Paper remains at the PF paper feed sensor 3 when power is turned on.	<b>E</b>
Document processor	<b>9000</b>	The DP timing sensor (DPTS) does not turn on within specified time during the first sheet feeding (Retry 5 times).	<b>I</b>
	<b>9001</b>	DP timing sensor (DPTS) turns off within the specified time since the sensor turns on.	<b>I</b>
	<b>9003</b>	During duplex switchback scanning, the DP timing sensor (DPTS) does not turn off within specified time.	<b>I</b>
	<b>9004</b>	During duplex switchback scanning, the DP timing sensor (DPTS) does not turn on within specified time since original switchback operation starts.	<b>I</b>
	<b>9011</b>	The DP or DP top cover is opened during original feeding.	<b>I</b>
	<b>9401</b>	The DP timing sensor (DPTS) does not turn off within specified time of the DP timing sensor (DPTS) turning on.	<b>I</b>
*: Refer to figure 1-4-2 for paper jam location (see page 1-4-1)			



## 1-4-2 Self-diagnostic function

### (1) Self-diagnostic function

This machine is equipped with self-diagnostic function. When a problem is detected, the machine stops printing and display an error message on the operation panel. An error message consists of a message prompting a contact to service personnel, total print count, and a four-digit error code indicating the type of the error. (The display varies depending on the type of the error.)



Figure 1-4-2

**(2) Self diagnostic codes**


Code	Contents	Causes	Check procedures/ corrective measures
0030	<b>FAX control PWB system error</b> Processing with the fax software was disabled due to a hardware problem.	Defective FAX control PWB.	Replace the fax control PWB and check for correct operation. (see page 1-5-36).
0070	<b>FAX control PWB incompatible detection error</b> Abnormal detection of FAX control PWB incompatibility In the initial communication with the FAX control PWB, any normal communication command is not transmitted.	Defective FAX software.	Install the fax software.
		Defective FAX control PWB.	Replace the fax control PWB and check for correct operation. (see page 1-5-36).
0100	<b>Backup memory device error</b>	Defective flash memory.	Replace the main PWB and check for correct operation (see page 1-5-28).
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
0120	<b>MAC address data error</b> For data in which the MAC address is invalid.	Defective flash memory.	Replace the main PWB and check for correct operation (see page 1-5-28).
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
0130	<b>Backup memory read/write error (main PWB)</b>	Defective flash memory.	Replace the main PWB and check for correct operation (see page 1-5-28).
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
0140	<b>Backup memory data error (main PWB)</b>	Defective flash memory.	Replace the main PWB and check for correct operation (see page 1-5-28).
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
0150	<b>Engine PWB EEPROM error</b> Detecting engine PWB EEPROM communication error.	Improper installation engine PWB EEPROM.	Check the installation of the EEPROM and remedy if necessary.
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
		Device damage of EEPROM.	Contact the Service Administrative Division.
0170	<b>Billing counting error</b> A checksum error is detected in the main and engine backup memories for the billing counters.	Data damage of EEPROM.	Contact the Service Administrative Division.
		Defective PWB.	Replace the main PWB or the engine PWB and check for correct operation (see page 1-5-28).

Code	Contents	Causes	Check procedures/ corrective measures
0180	<b>Machine number mismatch</b> Machine number of main and engine does not match.	Data damage of EEPROM.	Contact the Service Administrative Division.
0420	<b>Paper feeder communication error</b> Communication error between engine PWB and optional paper feeder.	Improper installation paper feeder.	Follow installation instruction carefully again.
		Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Paper feeder interface and connect-L PWB (YC2) Connect-L PWB (YC6) and engine PWB (YC504)
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
		Defective PF main PWB.	Replace the PF main PWB (Refer to the service manual for the paper feeder).
0830	<b>FAX control PWB flash program area checksum error</b> A checksum error occurred with the program of the FAX control PWB.	Defective FAX software.	Install the fax software.
		Defective FAX control PWB.	Replace the FAX control PWB (see page 1-5-36).
0840	<b>Faults of RTC</b> The time is judged to go back based on the comparison of the RTC time and the current time or five years or more have passed.	The battery is disconnected from the main PWB.	Check visually and remedy if necessary
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
0870	<b>FAX control PWB to main PWB high capacity data transfer error</b> High-capacity data transfer between the FAX control PWB and the main PWB of the machine was not normally performed even if the data transfer was retried the specified times.	Improper installation FAX control PWB.	Reinstall the FAX control PWB (see page 1-5-36).
		Defective FAX control PWB or main PWB.	Replace the FAX control PWB or main PWB and check for correct operation (see page 1-5-36 or 1-5-28).
0920	<b>Fax file system error</b> The backup data is not retained for file system abnormality of flash memory of the FAX control PWB.	Defective FAX control PWB.	Replace the FAX control PWB and check for correct operation (see page 1-5-36).

Code	Contents	Causes	Check procedures/ corrective measures
<b>1010</b>	<b>Lift motor error</b> During driving the lift motor, a motor overcurrent signal is detected for 5 s. This error is detected five times successively.	Defective bottom plate elevation mechanism in the cassette.	Check to see if the bottom plate can move smoothly and repair it if any problem is found.
		Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Lift motor and connect-R PWB (YC8) Connect-R PWB (YC2) and engine PWB (YC502)
		Defective drive transmission system of the lift motor.	Check if the gears rotate smoothly. If not, grease the bushes and gears. Check for broken gears and replace if any.
		Defective lift motor.	Replace the lift motor
		Defective engine PWB or connect-R PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
<b>2000</b>	<b>Main motor steady-state error</b> The main motor ready input is not given for 2 s during the main motor is ON.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Main motor and engine PWB (YC501)
		Defective drive transmission system of the main motor.	Check if the rollers and gears rotate smoothly. If not, grease the bushes and gears. Check for broken gears and replace if any.
		Defective main motor.	Replace the main motor.
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
<b>2200</b>	<b>Drum motor steady-state error</b> The drum motor ready input is not given for 2 s during the drum motor is ON.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Drum motor and engine PWB (YC11)
		Defective drive transmission system of the drum motor.	Check if the rollers and gears rotate smoothly. If not, grease the bushes and gears. Check for broken gears and replace if any.
		Defective drum motor.	Replace the drum motor.
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).

Code	Contents	Causes	Check procedures/ corrective measures
3100	<b>ISU home position error</b> The home position is not correct when the power is turned on or at the start of copying using the table.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Home position sensor and CCD PWB (YC3) CCD PWB (YC2) and main PWB (YC8) ISU motor and main PWB (YC1004)
		Defective home position sensor.	Replace the home position sensor.
		Defective ISU motor.	Replace the ISU motor.
		Defective CCD PWB.	Replace the scanner unit (see page 1-5-19).
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
3200	<b>Exposure lamp error</b> When input value at the time of exposure lamp illumination does not exceed the threshold value between 5 s.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Exposure lamp and inverter PWB (YC102) Inverter PWB (YC101) and CCD PWB (YC3) CCD PWB (YC2) and main PWB (YC8)
		Defective exposure lamp or inverter PWB.	Replace the scanner unit (see page 1-5-19).
		Defective CCD PWB.	Replace the scanner unit (see page 1-5-19).
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
3500	<b>Communication error between scanner and ASIC</b> An error code is detected.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. CCD PWB (YC2) and main PWB (YC8)
		Defective CCD PWB.	Replace the scanner unit (see page 1-5-19).
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
4000	<b>Polygon motor synchronization error</b> The polygon motor ready input is not given for 10 s during the polygon motor is ON.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Laser scanner unit and main PWB (YC14)
		Defective polygon motor.	Replace the laser scanner unit (see page 1-5-16).
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).

Code	Contents	Causes	Check procedures/ corrective measures
4200	<b>BD steady-state error</b>	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Laser scanner unit and main PWB (YC16)
		Defective laser scanner unit.	Replace the laser scanner unit (see page 1-5-16).
		Defective main PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
4700	<b>VIDEO ASIC device error</b> Mismatch of reading data from two locations occurs eight times successively. Mismatch between writing data and reading data occurs eight times successively.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, replace the cable. Main PWB (YC13) and engine PWB (YC12)
		Defective main PWB or engine PWB.	Replace the main PWB or the engine PWB and check for correct operation (see page 1-5-34, 1-5-30).
5100	<b>Main charger high-voltage error</b> Five pages have been printed with the main charger output short-circuited.	Drum unit installed incorrectly.	Verify harness is not pinched.
		Engine PWB installed incorrectly.	Verify harness is not pinched.
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
6000	<b>Broken fuser heater wire</b> The temperature does not reach 100°C/212°F after the fuser heater has been turned on continuously for 30 s. The temperature does not rise by 1°C/1.8°F after the fuser heater lamp has been turned on continuously for 15 s during warm-up or at standby. (Only when the detection temperature is less than 200°C.)	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Fuser heater and power source PWB (YC102) Fuser unit and engine PWB (YC506)
		Deformed connector pin.	See page 1-4-10.
		Defective triac.	See page 1-4-10.
		Fuser thermostat triggered.	Reinsert the fuser unit (see page 1-5-23).
		Broken fuser heater wire.	Replace the fuser unit (see page 1-5-23).
6020	<b>Abnormally high fuser thermistor 2 temperature</b> The temperature of the fuser thermistor 2 detects 250°C/482°F or more continuously for 3 s.	Shorted fuser thermistor 2.	Replace the fuser unit (see page 1-5-23).
		Deformed connector pin.	See page 1-4-10.
		Defective triac.	See page 1-4-10.
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).

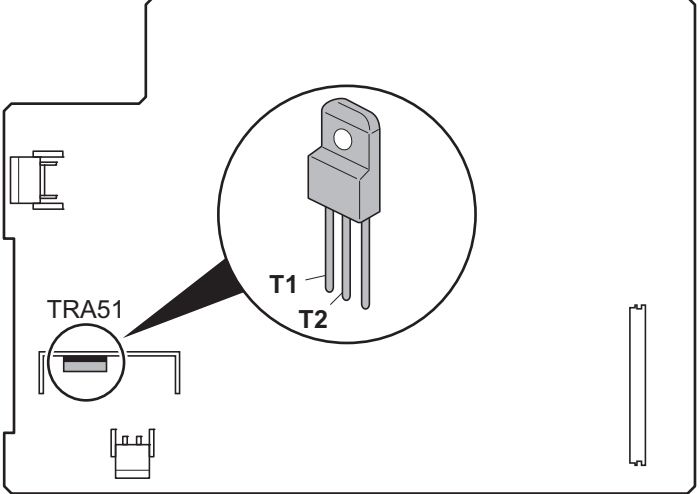Code	Contents	Causes	Check procedures/ corrective measures
6030	<b>Broken fuser thermistor 2 wire</b> average AD value input from fuser thermistor 2 for 1.8 seconds is less than one. (Only when the detection temperature is 50°C or more.)	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Fuser unit and engine PWB (YC506)
		Deformed connector pin.	See page 1-4-10.
		Defective triac.	See page 1-4-10.
		Broken fuser thermistor 2 wire.	Replace the fuser unit (see page 1-5-23).
		Fuser thermostat triggered.	Reinsert the fuser unit (see page 1-5-23).
		Broken fuser heater wire.	Replace the fuser unit (see page 1-5-23).
6000/ 6020/ 6030 Combined	<b>Broken fuser heater wire</b> <b>Abnormally high fuser thermistor temperature</b> <b>Broken fuser thermistor wire</b>	Deformed connector pin.	If the I/F connector pins of the fuser unit and the main unit are deformed owing to foreign matters, such as paper dusts, replace the connectors or the units including the connectors.
		Defective triac.	Remove the power cord and check that the resistance between terminals T1 and T2 of the triac TRA51 is of several Mega-Ohms and not shorted (see figure 1-4-4). If failed, replace the power source PWB (see page 1-5-31).
			<b>Figure 1-4-3</b>
6220	<b>Abnormally high fuser thermistor 1 temperature</b> The temperature of the fuser thermistor 1 detects 255°C/491°F or more continuously for 3 s.	Shorted fuser thermistor 1.	Replace the fuser unit (see page 1-5-23).
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).

Code	Contents	Causes	Check procedures/ corrective measures
6230	<b>Broken fuser thermistor 1 wire</b> average AD value input from fuser thermistor 1 for 1.8 seconds is less than one.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Fuser unit and engine PWB (YC506)
		Broken fuser thermistor 1 wire.	Replace the fuser unit (see page 1-5-23).
		Fuser thermostat triggered.	Reinsert the fuser unit (see page 1-5-23).
		Broken fuser heater wire.	Replace the fuser unit (see page 1-5-23).
6400	<b>Zero-cross signal error</b> The zero-cross signal does not reach the engine PWB for more than 2 s.	Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Power source PWB (YC103) and connect-L PWB (YC1) Connect-L PWB (YC8) and engine PWB (YC503)
		Defective power source PWB.	Replace the power source PWB and check for correct operation (see page 1-5-31).
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
7000	<b>Toner motor lock error</b> During driving the toner motor, a motor overcurrent signal is detected for 5 s.	Lump of toner inside toner container.	Replace the toner container.
		Defective drive transmission system of the toner motor.	Replace the developing unit (see page 1-5-19).
		Defective toner motor.	Replace the developing unit (see page 1-5-19).
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
7410	<b>Drum unit non- installing error</b> The drum unit is not installed or not installed properly. The drum PWB EEPROM does not communicate normally.	The drum unit is not installed.	Install the drum unit (see page 1-5-20).
		Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Drum PWB (YC1) and connect-L PWB (YC3)
		Defective drum PWB EEPROM.	Replace the drum unit (see page 1-5-20).
		Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).



<b>Code</b>	<b>Contents</b>	<b>Causes</b>	<b>Check procedures/ corrective measures</b>
<b>9500</b>	<b>BRU communication error</b>	IPU PWB error	Contact the Service Administrative Division.
<b>9510</b>	<b>BRU PWB error</b>		
<b>9520</b>	<b>BRU PWB data error</b>		
<b>F000</b>	<b>Main PWB - operation panel PWB communication error</b>	Defective main PWB.	Turn the main power switch off/on to restart the machine. If the error is not resolved, replace main PWB.
		Defective operation panel PWB.	Replace the operation panel PWB.
<b>F020</b>	<b>Main PWB RAM checksum error</b>	Defective main memory (RAM) on the main PWB.	Turn the main power switch off/on to restart the machine. If the error is not resolved, replace main PWB.
		Defective expanded memory (DIMM).	Replace the expanded memory (DIMM).
<b>F040</b>	<b>Main PWB - engine PWB communication error</b>	Defective main PWB.	Turn the main power switch off/on to restart the machine. If the error is not resolved, replace main PWB.
		Defective engine PWB.	Replace the engine PWB.
<b>F041</b>	<b>Main PWB - scanner communication error</b>	Defective main PWB.	Turn the main power switch off/on to restart the machine. If the error is not resolved, replace main PWB.
<b>F050</b>	<b>Engine ROM checksum error</b>	Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
<b>F051</b>	<b>Scan engine ROM checksum error</b>	Defective engine PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).

### 1-4-3 Image formation problems

(1) Completely blank printout.




see page 1-4-14

(2) All-black print-out.




see page 1-4-15

(3) Dropouts.

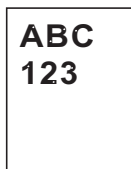


see page 1-4-16

(4) Black dots.

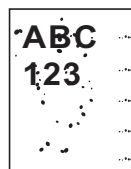


see page 1-4-16

(5) Black horizontal streaks.

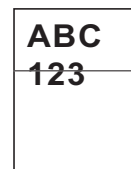


see page 1-4-16

(6) Black vertical streaks.

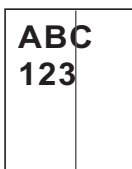


see page 1-4-17

(7) Unsharpness.

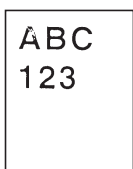


see page 1-4-17

(8) Gray background.

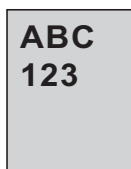


see page 1-4-17

(9) Dirt on the top edge or back of the paper.

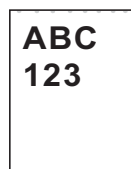


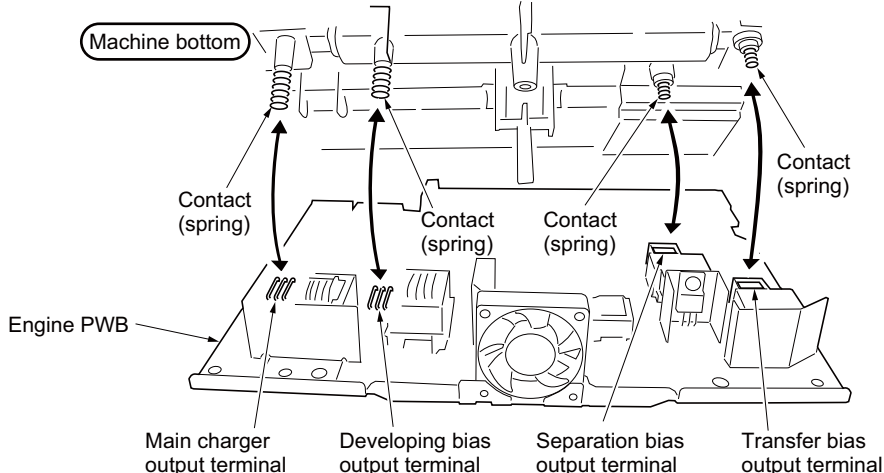
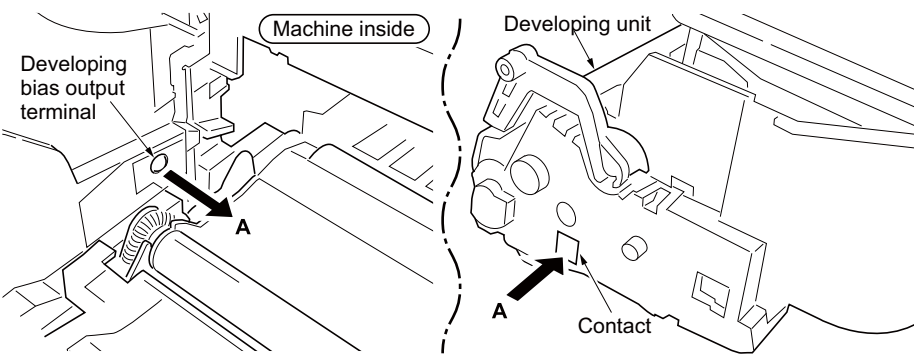
see page 1-4-18

(10) Undulated printing at the right edge (scanning start position).

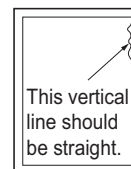
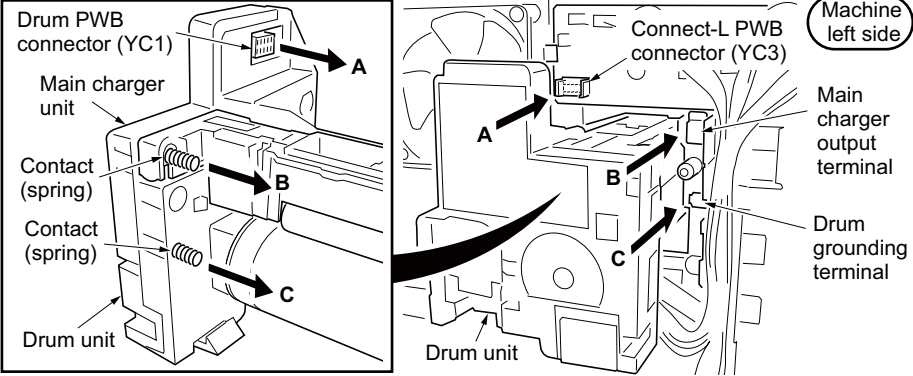


see page 1-4-18


**(1) Completely blank printout.**

Print example	Causes	Check procedures/corrective measures
	<p>Defective transfer bias output.</p> <p>Poor contact of engine PWB's transfer bias output terminal and machine's contact (spring).</p>	<p>Check the installation position of the engine PWB. Refer to figure 1-4-4 below.</p>
	 <p style="text-align: center;"><b>Figure 1-4-4</b></p>	
	<p>Defective engine PWB.</p>	<p>Replace the engine PWB (See page 1-5-24).</p>
	<p>Defective developing bias output.</p> <p>Poor contact of engine PWB's developing bias output terminal and machine's contact (spring).</p> <p>Poor contact of machine's developing bias output terminal and developing unit's contact.</p>	<p>Check the installation position of the engine PWB. Refer to figure 1-4-4 above.</p> <p>Check the installation of the developing unit. Refer to figure 1-4-5 below.</p>
 <p style="text-align: center;"><b>Figure 1-4-5</b></p>		
<p>Defective engine PWB.</p>	<p>Replace the engine PWB (See page 1-5-24).</p>	
<p>No LSU laser is output.</p>	<p>Defective laser scanner unit.</p>	<p>Replace the laser scanner unit (See page 1-5-16).</p>
	<p>Defective main PWB.</p>	<p>Replace the main PWB (See page 1-5-28).</p>


**(2) All-black printout.**

Print example	Causes		Check procedures/corrective measures
	No main charging.	Defective main charger unit.	Replace the main charger unit (See page 1-5-20).
		Poor contact of engine PWB's main charger output terminal and machine's contact (spring).	Check the installation position of the engine PWB. See page 1-4-14, refer to figure 1-4-4.
		Poor contact of machine's main charger output terminal and main charger unit's contact (spring).	Check the installation of the drum (main charger) unit. Refer to figure 1-4-6 below.
		 <p style="text-align: center;"><b>Figure 1-4-6</b></p>	
Defective engine PWB.	Replace the engine PWB (See page 1-5-24).		


**(3) Dropouts.**

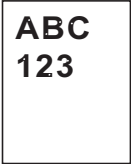Print example	Causes	Check procedures/corrective measures
	Defective developing roller (developing unit).	If the defects occur at regular intervals of 39 mm/1 9/16" (see page 2-4-3), the problem may be the damaged developing roller (in the developing unit). Replace the developing unit (see page 1-5-19).
	Defective drum unit.	If the defects occur at regular intervals of 94 mm/3 11/16" (see page 2-4-3), the problem may be the damaged drum (in the drum unit). Replace the drum unit (see page 1-5-20).
	Defective fuser unit (heat roller or press roller).	If the defects occur at regular intervals of 82 mm/3 1/4", or 93 mm/3 11/16" (see page 2-4-3), the problem may be the damaged heat roller or press roller (in the fuser unit). Replace fuser unit (see page 1-5-23).
	Defective paper specifications.	Paper with rugged surface or dump tends to cause dropouts. Replace paper with the one that satisfies the paper specifications.
	Defective transfer roller installation.	The transfer roller must be supported by the bushes at the both ends. Clean the bush to remove oil and debris. Replace the transfer roller if necessary (see page 1-5-21).
	Defective transfer bias output.	Replace the engine PWB (see page 1-5-24).


**(4) Black dots.**

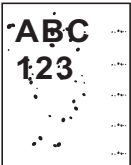Print example	Causes	Check procedures/corrective measures
	Defective drum unit or developing unit.	If the defects occur at regular intervals of 94 mm/3 11/16" (see page 2-4-3), the problem may be the damaged drum (in the drum unit). Replace drum unit (see page 1-5-19). If the defects occur at random intervals, the toner may be leaking from the developing unit or drum unit. Replace the developing unit or drum unit (see page 1-5-19 or 1-5-20).


**(5) Black horizontal streaks.**

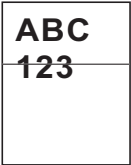Print example	Causes	Check procedures/corrective measures
	Defective drum unit's ground.	Defective drum unit's ground. The contact (spring) in the drum unit and its counter part, the drum grounding terminal in the printer, must be in a good contact. See page 1-4-14, refer to figure 1-4-4
	Defective drum unit.	Replace the drum unit (see page 1-5-20).


**(6) Black vertical streaks.**

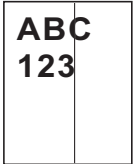Print example	Causes	Check procedures/corrective measures
	Flawed main charger roller	Replace the main charger unit (see page 1-5-20).
	Defective drum unit.	A streak of toner remaining on drum after printing means that the cleaning blade (in the drum unit) is not working properly. Replace the drum unit (see page 1-5-20).
	Defective developing roller (developing unit).	Replace the developing unit (see page 1-5-19).


**(7) Unsharpness.**

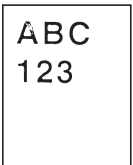Print example	Causes	Check procedures/corrective measures
	Defective paper specifications.	Replace paper with the one that satisfies the paper specification.
	Defective transfer roller installation.	The transfer roller must be supported by the bushes at the both ends. Clean the bush to remove oil and debris. Replace the transfer roller if necessary (see page 1-5-21).
	Poor contact of engine PWB's transfer bias output terminal and machine's contact (spring).	Check the installation position of the engine PWB. See page 1-4-14, refer to figure 1-4-4.
	EcoPrint mode setting.	The EcoPrint mode can provides faint, unsharp printing because it acts to conserve toner for draft printing purpose. For normal printing, turn the EcoPrint mode off by using the operator panel. For details, refer to the operation guide.


**(8) Gray background.**

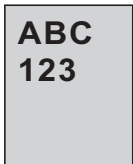Print example	Causes	Check procedures/corrective measures
	Print density setting.	The print density may be set too high. Try adjusting the print density. For details, refer to the operation guide.
	Defective potential on the drum surface.	Replace the drum unit (see page 1-5-20).
	Defective main charger unit.	Replace the main charger unit (see page 1-5-20).
	Defective developing roller (developing unit).	Replace the developing unit (see page 1-5-19).

**(9) Dirt on the top edge or back of the paper.**

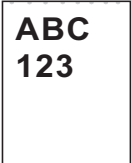Print example	Causes	Check procedures/corrective measures
	Toner contamination in various parts.	Dirty edges and back of the paper can be caused by toner accumulated on such parts as the paper chute guide, paper conveying paths, the bottom of the drum and developing unit, and the fuser unit inlet. Clean these areas and parts to remove toner.
	Defective transfer roller.	If the transfer roller is contaminated with toner, clean the transfer roller using a vacuum cleaner or by continuously printing a low density page until the symptom has faded away.

**(10) Undulated printing at the right edge (scanning start position).**

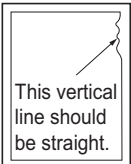Print example	Causes	Check procedures/corrective measures
	Defective polygon motor (laser scanner unit).	Replace the laser scanner unit (see page 1-5-16).
	Defective main PWB.	Replace the main PWB (see page 1-5-28).

## 1-4-4 Electric problems

Troubleshooting to each failure must be in the order of the numbered symptoms.

<b>Problem</b>	<b>Causes</b>	<b>Check procedures/corrective measures</b>
(1) The machine does not operate when the main power switch is turned on.	1. No electricity at the power outlet.	Measure the input voltage.
	2. The power cord is not plugged in properly.	Check the contact between the power plug and the outlet.
	3. The top cover is not closed completely.	Check the top cover.
	4. Broken power cord.	Check for continuity. If none, replace the cord.
	5. Defective main power switch.	Check for continuity across the contacts. If none, replace the power source PWB (see page 1-5-31).
	6. Defective interlock switch.	Check for continuity across the contacts of interlock switch. If none, replace the power source PWB (see page 1-5-31).
	7. Defective power source PWB.	Replace the power source PWB (see page 1-5-31).
(2) Switchback motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Switchback motor and connect-R PWB (YC3) Connect-R PWB (YC1) and engine PWB (YC9)
	2. Defective drive transmission system.	Check if the rollers and gears rotate smoothly. If not, grease the bushes and gears. Check for broken gears and replace if any.
	3. Defective motor.	Replace the switchback motor.
	4. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
(3) Toner motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Toner motor and developing PWB (YC2) Developing PWB (YC1) and connect-L PWB (YC9) Connect-L PWB (YC8) and engine PWB (YC503)
	2. Defective motor.	Replace the toner motor.
	3. Defective PWB.	Replace the engine PWB or connect-L PWB and check for correct operation (see page 1-5-24).



<b>Problem</b>	<b>Causes</b>	<b>Check procedures/corrective measures</b>
(4) Right fan motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Right fan motor and connect-R PWB (YC11) Connect-R PWB (YC1) and engine PWB (YC9)
	2. Defective motor.	Replace the right fan motor.
	3. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
(5) Left fan motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Left fan motor and connect-L PWB (YC4) Connect-L PWB (YC6) and engine PWB (YC504)
	2. Defective motor.	Replace the left fan motor.
	3. Defective PWB.	Replace the engine PWB or connect-L PWB and check for correct operation (see page 1-5-24).
(6) Power source fan motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Power source fan motor and connect-L PWB (YC11) Connect-L PWB (YC8) and engine PWB (YC503)
	2. Defective motor.	Replace the power source fan motor.
	3. Defective PWB.	Replace the engine PWB or connect-L PWB and check for correct operation (see page 1-5-24).
(7) Feed fan motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Feed fan motor and engine PWB (YC15)
	2. Defective motor.	Replace the feed fan motor.
	3. Defective PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
(8) Eject fan motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Eject fan motor and connect-R PWB (YC13) Connect-R PWB (YC2) and engine PWB (YC502)
	2. Defective motor.	Replace the eject fan motor.
	3. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
(9) Controller fan motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Controller fan motor and main PWB (YC41)
	2. Defective motor.	Replace the controller fan motor.
	3. Defective PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).

<b>Problem</b>	<b>Causes</b>	<b>Check procedures/corrective measures</b>
(10) ISU motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. ISU motor and main PWB (YC1004)
	2. Defective drive transmission system.	Check if the gears rotate smoothly. If not, grease the gears. Check for broken gears and replace if any.
	3. Defective motor.	Replace the ISU motor.
	4. Defective PWB.	Replace the main PWB and check for correct operation (see page 1-5-28).
(11) Paper feed clutch does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Paper feed clutch and connect-R PWB (YC5) Connect-R PWB (YC2) and engine PWB (YC502)
	2. Defective clutch.	Replace the paper feed clutch.
	3. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
(12) Registration clutch does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Registration clutch and connect-R PWB (YC6) Connect-R PWB (YC2) and engine PWB (YC502)
	2. Defective clutch.	Replace the registration clutch.
	3. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
(13) Middle clutch does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Middle clutch and connect-R PWB (YC7) Connect-R PWB (YC2) and engine PWB (YC502)
	2. Defective clutch.	Replace the middle clutch.
	3. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
(14) Duplex clutch does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Duplex clutch and connect-R PWB (YC9) Connect-R PWB (YC2) and engine PWB (YC502)
	2. Defective clutch.	Replace the duplex clutch.
	3. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
(15) MP solenoid does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. MP solenoid and connect-R PWB (YC10) Connect-R PWB (YC1) and engine PWB (YC9)
	2. Defective solenoid.	Replace the MP solenoid.
	3. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).

<b>Problem</b>	<b>Causes</b>	<b>Check procedures/corrective measures</b>
(16) Developing solenoid does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Developing solenoid and connect-R PWB (YC4) Connect-R PWB (YC2) and engine PWB (YC502)
	2. Defective solenoid.	Replace the developing solenoid.
	3. Defective PWB.	Replace the engine PWB or connect-R PWB and check for correct operation (see page 1-5-24).
(17) Feedshift solenoid does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Feedshift solenoid and engine PWB (YC506)
	2. Defective solenoid.	Replace the feedshift solenoid.
	3. Defective PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
(18) Cleaning lamp does not turn on.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Cleaning lamp and drum PWB (YC2) Drum PWB (YC1) and connect-L PWB (YC3) Connect-L PWB (YC6) and engine PWB (YC504)
	2. Defective cleaning lamp.	Replace the cleaning lamp.
	3. Defective PWB.	Replace the engine PWB or connect-L PWB and check for correct operation (see page 1-5-24).
(19) The message requesting paper to be loaded is shown when paper is present on the cassette.	1. Deformed actuator of the paper sensor.	Check visually and remedy or replace if necessary.
	2. Defective paper sensor.	Replace the engine PWB and check for correct operation (see page 1-5-24).
	3. Defective PWB.	Replace the engine PWB and check for correct operation (see page 1-5-24).
(20) The message requesting paper to be loaded is shown when paper is present on the MP tray.	1. Deformed actuator of the MP paper sensor.	Check visually and remedy or replace if necessary.
	2. Defective MP paper sensor.	Replace the power source PWB and check for correct operation (see page 1-5-31).
	3. Defective PWB.	Replace the power source PWB and check for correct operation (see page 1-5-31).

<b>Problem</b>	<b>Causes</b>	<b>Check procedures/corrective measures</b>
(21) The size of paper on the cassette is not displayed correctly.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. Cassette size switch and connect-L PWB (YC10) Connect-L PWB (YC8) and engine PWB (YC503)
	2. Defective cassette size switch.	Replace the cassette size switch.
	3. Defective PWB.	Replace the engine PWB or connect-L PWB and check for correct operation (see page 1-5-24).
(22) A paper jam in the paper feed, paper conveying, eject or duplex section is indicated when the main power switch is turned on.	1. A piece of paper torn from paper is caught around registration sensor, eject sensor, duplex sensor or duplex jam sensor.	Check visually and remove it, if any.
	2. Defective eject sensor.	Replace the eject sensor.
	3. Defective duplex sensor.	Replace the duplex sensor.
	4. Defective registration sensor or duplex jam sensor.	Replace the engine PWB and check for correct operation (see page 1-5-24).
(23) A message indicating cover open is displayed when the top cover is closed.	1. Deformed actuator of the interlock switch.	Check visually and remedy or replace if necessary.
	2. Defective interlock switch.	Replace the power source PWB and check for correct operation (see page 1-5-31).
(24) DP paper feed motor does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. DP paper feed motor and DP drive PWB (YC3) DP drive PWB (YC1) and main PWB (YC1008)
	2. Defective drive transmission system.	Check if the rollers and gears rotate smoothly. If not, grease the bushes and gears. Check for broken gears and replace if any.
	3. Defective motor.	Replace the DP paper feed motor.
	4. Defective PWB.	Replace the DP drive PWB or main PWB and check for correct operation (see page 1-5-42).
(25) DP paper feed clutch does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. DP paper feed clutch and DP drive PWB (YC6) DP drive PWB (YC8) and main PWB (YC1005)
	2. Defective clutch.	Replace the DP paper feed clutch.
	3. Defective PWB.	Replace the DP drive PWB or main PWB and check for correct operation (see page 1-5-42).

<b>Problem</b>	<b>Causes</b>	<b>Check procedures/corrective measures</b>
(26) DP pressure solenoid does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. DP pressure solenoid and DP drive PWB (YC4) DP drive PWB (YC8) and main PWB (YC1005)
	2. Defective solenoid.	Replace the DP pressure solenoid.
	3. Defective PWB.	Replace the DP drive PWB or main PWB and check for correct operation (see page 1-5-42).
(27) DP switchback solenoid does not operate.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. DP switchback solenoid and DP drive PWB (YC5) DP drive PWB (YC8) and main PWB (YC1005)
	2. Defective solenoid.	Replace the DP switchback solenoid.
	3. Defective PWB.	Replace the DP drive PWB or main PWB and check for correct operation (see page 1-5-42).
(28) An original jams when the main power switch is turned on.	1. A piece of paper torn from an original is caught around the DP timing sensor.	Check visually and remove it, if any.
	2. Defective DP timing sensor.	Replace the DP timing sensor.
(29) A message indicating cover open is displayed when the DP top cover is closed.	1. Defective connector cable or poor contact in the connector.	Reinsert the connector. Also check for continuity within the connector cable. If none, remedy or replace the cable. DP open/close sensor and DP drive PWB (YC2) DP drive PWB (YC8) and main PWB (YC1005)
	2. Defective DP open/close sensor.	Replace the DP open/close sensor.

## 1-4-5 Mechanical problems

Problem	Causes/check procedures	Corrective measures
(1) No primary paper feed.	Check if the surfaces of the following rollers are dirty with paper powder. Pickup roller Paper feed roller MP paper feed roller	Clean with isopropyl alcohol.
	Check if the following rollers is deformed. Pickup roller Paper feed roller MP paper feed roller	Check visually and replace any deformed (see page 1-5-6).
	Defective paper feed clutch installation.	Check visually and remedy if necessary.
(2) No secondary paper feed.	Check if the surfaces of the following rollers are dirty with paper powder. Upper registration roller Lower registration roller	Clean with isopropyl alcohol.
	Defective registration clutch installation.	Check visually and remedy if necessary.
(3) Skewed paper feed.	Paper width guide in a cassette installed incorrectly.	Check the paper width guide visually and remedy or replace if necessary.
(4) Multiple sheets of paper are fed.	Check if the paper is excessively curled.	Change the paper.
	Paper is loaded incorrectly.	Load the paper correctly.
	Check if the retard roller is worn.	Replace the retard roller if it is worn (see page 1-5-7).
(5) Paper jams.	Check if the paper is excessively curled.	Change the paper.
	Check if the contact between the upper and lower registration rollers is correct.	Check visually and remedy if necessary.
	Check if the heat roller or press roller is extremely dirty or deformed.	Check visually and replace the fuser unit (see page 1-5-23).
(6) Toner drops on the paper conveying path.	Check if the drum unit or developing unit is extremely dirty.	Clean the drum unit or developing unit.
(7) Abnormal noise is heard.	Check if the rollers, pulleys and gears operate smoothly.	Grease the bushes and gears.
	Check if the following clutches are installed correctly. Paper feed clutch Registration clutch Middle clutch Duplex clutch	Check visually and remedy if necessary.

Problem	Causes/check procedures	Corrective measures
(8) No primary original feed.	Check if the surfaces of the following pulleys are dirty with paper powder. DP forwarding pulley DP feed pulley	Clean with isopropyl alcohol.
	Check if the following pulleys is deformed. DP forwarding pulley DP feed pulley	Check visually and replace any deformed (see page 1-5-43).
(9) Multiple sheets of original are fed.	Original is not correctly set.	Set the original correctly.
	Check if the DP separation pad is worn.	Replace the DP separation pad if it is worn (see page 1-5-43).
(10) Originals jam.	Originals outside the specifications are used.	Use only originals conforming to the specifications.
	Check if the surfaces of the following pulleys are dirty with paper powder. DP forwarding pulley DP feed pulley	Clean with isopropyl alcohol.
	Check if the contact between the conveying roller and conveying pulley is correct.	Check visually and remedy if necessary.
	Check if the contact between the eject roller and eject pulley is correct.	Check visually and remedy if necessary.
	Check if the contact between the switchback roller and switchback pulley is correct.	Check visually and remedy if necessary.

## 1-4-6 Send error code

### (1) Scan to SMB error codes

Code	Display	Causes	Check procedures/corrective measures
1102	<b>Error: User/Password or Shared Name/ Folder Name</b>	Domain name is not entered.	Enter the user name with the form of either [Domain¥User], [Domain/User] or [Domain@User].
		Assign disable user/password.	Enter the correct user name/password.
		Assign the user who is not allowed to access to folder.	Enter correct user name/password. Check the access limit of destination folder.
		Assign disable shared name.	Enter the correct shared name. Check if the prohibited letters below are used to shared name. @ ( ) ! & # \$ % ^ ~ [ ] `
		Host name error.	Check if the prohibited letters are used to shared name. " & ' ( )   ; < >
1103	<b>Error: Path Name or File Name</b>	Domain name is not enter	Enter the user name with the form of either [Domain¥User], [Domain/User] or [Domain@User].
		Connect to the folder which is not permitted for reference/writing.	Enter correct user name/password. Check the access limit of destination folder.
		Assign disable folder path.	Enter correct folder path.
1105	<b>Error: Not support protocol</b>	SMB Protocol is set to OFF.	Check ON in the [Scanner]-[SMB] screen in COMMAND CENTER.
2101	<b>Error: Can not connect</b>	Enter the disable host name/IP address.	Enter the correct host name or IP address.
		Assign the wrong port number.	Enter the correct port number.
		Network is not connected.	Check if the server is operating properly. Check the network connection (cable. network condition within LAN, etc.).
2103	<b>Error: Response wait with timeout</b>	The server is unable to communicate.	Check if the server is operating properly.
2201	<b>Error: Network transfer</b>	Error occurs on the network.	Check the network connection (cable. network condition within LAN, etc.).
2203	<b>Error: Response wait with timeout</b>	Response is not returned from the server above specified time.	Check the network connection (cable. network condition within LAN, etc.).
9181	<b>Error: Page max count over</b>	The number of pages of a send file exceeded 999 pages.	Set the number of pages as 999 or less.



**(2) Scan to FTP error codes**

<b>Code</b>	<b>Display</b>	<b>Causes</b>	<b>Check procedures/corrective measures</b>
1101	<b>Error: Host name</b>	Enter the disable host name/IP address.	Enter the correct host name or IP address.
1102	<b>Error: User/Password</b>	Domain name is not entered.	Enter the user name with the form of either [Domain¥User] or [Domain/User].
		Assign disable user/pass-word.	Enter the correct user name/password.
1103	<b>Error: Path Name or File Name</b>	Connect to the folder which is not permitted for reference/writing.	Enter correct user name/password. Check the access limit of destination folder.
		Assign disable folder path.	Enter correct folder path.
1105	<b>Error: Not support protocol</b>	FTP Protocol is set to OFF.	Check ON in the [Scanner]-[FTP] screen in COMMAND CENTER.
2101	<b>Error: Can not connect</b>	Enter the disable host name/IP address.	Enter the correct host name or IP address.
		Assign the wrong port number.	Enter the correct port number.
		Network is not connected.	Check if the server is operating properly. Check the network connection (cable. network condition within LAN, etc.).
2102	<b>Error: Can not connect with timeout</b>	The server is unable to communicate.	Check if the server is operating properly.
		Send the server which does not support FTP server.	Enter the correct host name or IP address.
2103	<b>Error: Response wait with timeout</b>	The server is unable to communicate.	Check if the server is operating properly.
2201	<b>Error: Network transfer</b>	Error occurs on the network.	Check the network connection (cable. network condition within LAN, etc.).
2202	<b>Error: Network transfer with timeout</b>	Error occurs on the network.	Check the network connection (cable. network condition within LAN, etc.).
2203	<b>Error: Response wait with timeout</b>	Response is not returned from the server above specified time.	Check the network connection (cable. network condition within LAN, etc.).
3101	<b>Error: Server response</b>	The server is error status.	Check if the server is working properly.
9181	<b>Error: Page max count over</b>	The number of pages of a send file exceeded 999 pages.	Set the number of pages as 999 or less.

**(3) Scan to E-mail error codes**

Code	Display	Causes	Check procedures/corrective measures
1101	<b>Error: Host name</b>	SMTP sever name is not set. Error SMTP server name.	Register [SMTP Server Name] in [Advanced]-[SMTP] -[General] in COMMAND CENTER.
1102	<b>Error: User/Password</b>	User ID for the authentication is not entered or entered wrongly. Wrong authentication password is entered.	Enter the correct user ID/password for authentication at [Advance] in COMMAND CENTER. Enter the password of [Login User Name] of the [POP3] page or the [SMTP] page correctly.
1104	<b>Error: No Recipient address</b>	The destination address is not specified.	Specify the destination address.
1105	<b>Error: Not support protocol</b>	SMTP Protocol is set to OFF.	Check ON [SMTP] in [Advanced]-[SMTP] -[General] in COMMAND CENTER.
1106	<b>Error: No Sender Info</b>	Sender address is not enter	Enter the correct [Sender Address] in [Advanced]-[SMTP] -[General] in COMMAND CENTER.
2101	<b>Error: Can not connect</b>	Select [Other authenticate] when authenticating POP before SMTP.	Select valid POP3 user other than [Other].
		The specified server is not SMTP server.	Enter the correct [SMTP Server Name] in [Advanced]-[SMTP] -[General] in COMMAND CENTER.
		Network is not connected.	Check if the server is operating properly. Check the network connection (cable. network condition within LAN, etc.).
2102	<b>Error: Can not connect with timeout</b>	The server is unable to communicate.	Check if the server is operating properly.
2103	<b>Error: Response wait with timeout</b>	The server is unable to communicate.	Check if the server is operating properly.
2201	<b>Error: Network transfer</b>	Error occurs on the network.	Check the network connection (cable. network condition within LAN, etc.).
2202	<b>Error: Network transfer with timeout</b>	Error occurs on the network.	Check the network connection (cable. network condition within LAN, etc.).
2203	<b>Error: Response wait with timeout</b>	Response is not returned from the server above specified time.	Check the network connection (cable. network condition within LAN, etc.).
2204	<b>Error: E-Mail Size limit</b>	The size of E-mail exceeds its limit.	Change the [E-mail Size Limit] in [Advanced]-[SMTP] -[General]-[E-mail Setting] in COMMAND CENTER.
3101	<b>Error: Server response</b>	The server is error status.	Check if the server is working properly.
		Server setting is not authenticated normally.	Check the settings for client/server authentication.

Code	Display	Causes	Check procedures/corrective measures
3201	<b>Error: Not Found Authentication Mechanism</b>	Unsupported SMTP Authentication Mechanism is found.	Check the settings for client/server Authentication Mechanism.
9181	<b>Error: Page max count over</b>	The number of pages of a send file exceeded 999 pages.	Set the number of pages as 999 or less.

#### (4) Network Twain error codes

Code	Display	Causes	Check procedures/corrective measures
2202	<b>Error: Network transfer with timeout</b>	Response is not returned from the server above specified time.	Check the network connection (cable, network condition within LAN, etc.).
9181	<b>Error: Page max count over</b>	The number of pages of a send file exceeded 999 pages.	Set the number of pages as 999 or less.

#### (5) Software trouble error codes

Code	Display	Causes	Check procedures/corrective measures
5101	<b>Error: Not yet connected</b>	Operation handle error. Error for stored status in the operation handle.	Turn the main power switch off and on.
5102	<b>Error: Already connected</b>	Operation handle error. Error for stored status in the operation handle.	Turn the main power switch off and on.
5103	<b>Error: Not yet opened</b>	Error for stored status in the operation handle.	Turn the main power switch off and on.
5104	<b>Error: Already opened</b>	Error for stored status in the operation handle.	Turn the main power switch off and on.
7101	<b>Error: Memory Allocation</b>	Insufficient memory space.	Turn the main power switch off and on.
7102	<b>Error: Socket Create</b>	Unable to create a communication socket.	Turn the main power switch off and on.
720f	<b>Error: Unknown error</b>	Unable to determine the cause.	Turn the main power switch off and on.

## 1-4-7 Error codes

### (1) Error code

Error codes are listed on the communication reports, activity report, etc. The codes consist of an error code indication U followed by a 5-digit number. (Error codes for V34 communication errors start with an E indication, followed by five digits.)

The upper three of the five digits indicate general classification of the error and its cause, while the lower two indicate the detailed classification. Items for which detailed classification is not necessary have 00 as the last two digits.

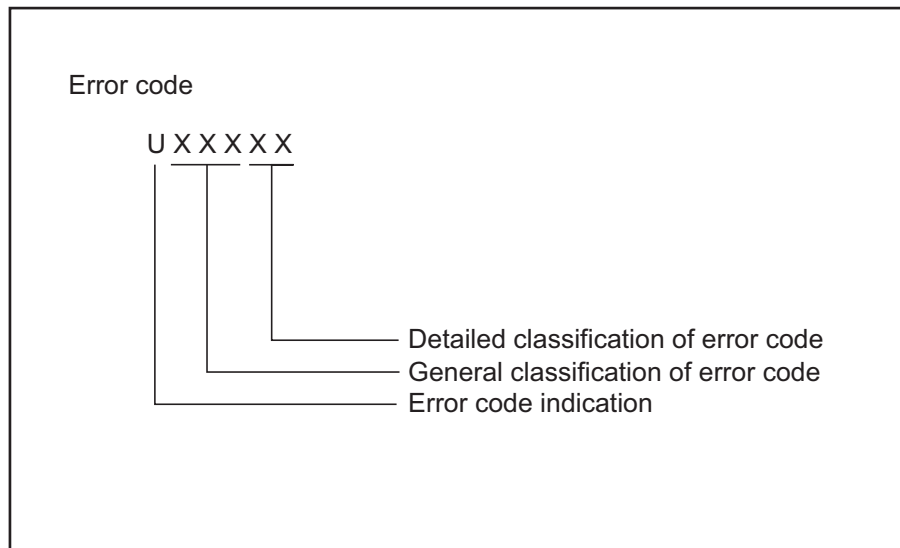


Figure 1-4-7

**(2) Table of general classification**

<b>Error code</b>	<b>Description</b>
U00000	No response or busy after the set number of redials.
U00100	Transmission was interrupted by a press of the stop/clear key.
U00200	Reception was interrupted by a press of the stop/clear key.
U00300	Recording paper on the destination unit has run out during transmission.
U004XX	A connection was made but interrupted during handshake with the receiver unit (refer to 1-4-34 U004XX error code table).
U006XX	Communication was interrupted because of a machine problem (refer to 1-4-34 U006XX error code table).
U00700	Communication was interrupted because of a problem in the destination unit.
U008XX	A page transmission error occurred in G3 mode (refer to 1-4-34 U008XX error code table).
U009XX	A page reception error occurred in G3 mode (refer to 1-4-34 U009XX error code table).
U010XX	Transmission in G3 mode was interrupted by a signal error (refer to 1-4-35 U010XX error code table).
U011XX	Reception in G3 mode was interrupted by a signal error (refer to 1-4-36 U011XX error code table).
U01400	An invalid one-touch key was specified during communication.
U01500	A communication error occurred when calling in V.8 mode.
U01600	A communication error occurred when called in V.8 mode.
U017XX	A communication error occurred before starting T.30 protocol during transmission in V.34 mode (refer to 1-4-37 U017XX error code table).
U018XX	A communication error occurred before starting T.30 protocol during reception in V.34 mode (refer to 1-4-37 U018XX error code table).
U03000	No document was present in the destination unit when polling reception started.
U03200	In interoffice subaddress-based bulletin board reception, data was not stored in the box specified by the destination unit.
U03300	In polling reception from a unit of our make, operation was interrupted due to a mismatch in permit ID or telephone number. Or, in interoffice subaddress-based bulletin board reception, operation was interrupted due to a mismatch in permit ID or telephone number.
U03400	Polling reception was interrupted because of a mismatch in individual numbers (destination unit is either of our make or by another manufacturer).
U03500	In interoffice subaddress-based bulletin board reception, the specified Subaddress confidential box number was not registered in the destination unit.
U03600	An interoffice subaddress-based bulletin board reception was interrupted because of a mismatch in the specified subaddress confidential box number.
U03700	Interoffice subaddress-based bulletin board reception failed because the destination unit had no subaddress-based bulletin board transmission capability, or data was not stored in any subaddress confidential box in the destination unit.
U04000	In interoffice subaddress-based transmission mode, the specified subaddress box number was not registered in the destination unit.

Error code	Description
U04100	Subaddress-based transmission failed because the destination unit had no subaddress-based reception capability.
U04200	In encrypted transmission, the specified encryption box was not registered in the destination unit.
U04300	Encrypted transmission failed because the destination unit had no encrypted communication capability.
U044XX	Communication was interrupted because of an encryption key error during encrypted transmission (refer to 1-4-37 U044XX error code table).
U04500	Encrypted reception was interrupted because of a mismatch in encryption keys.
U05100	Password check transmission or restricted transmission was interrupted because the permit ID's did not agree with.
U05200	Password check reception or restricted reception was interrupted because the permit ID's did not match, the rejected FAX number's did match, or the destination receiver did not return its phone number.
U05300	The password check reception or the restricted reception was interrupted because the permitted numbers did not match, the rejected numbers did match, or the machine in question did not acknowledge its phone number.
U14000	Memory overflowed during confidential reception. Or, in subaddress-based confidential reception, memory overflowed.
U14100	In interoffice subaddress-based transmission, memory overflowed in the destination unit.
U19000	Memory overflowed during memory reception.
U19100	Memory overflowed in the destination unit during transmission.
U19300	Transmission failed because an error occurred during JBIG encoding.

**(2-1) U004XX error code table: Interrupted phase B**

<b>Error code</b>	<b>Description</b>
U00430	Polling request was received but interrupted because of a mismatch in permit number. Or, subaddress-based bulletin board transmission request was received but interrupted because of a mismatch in permit ID in the transmitting unit.
U00431	An subaddress-based bulletin board transmission was interrupted because the specified subaddress confidential box was not registered.
U00432	An subaddress-based bulletin board transmission was interrupted because of a mismatch in Subaddress confidential box numbers.
U00433	Subaddress-based bulletin board transmission request was received but data was not present in the subaddress confidential box.
U00440	Subaddress-based confidential reception was interrupted because the specified subaddress box was not registered.
U00450	The destination transmitter disconnected because the permit ID's did not agree with while the destination transmitter is in password-check transmission or restricted transmission.
U00460	Encrypted reception was interrupted because the specified encryption box number was not registered.
U00462	Encrypted reception was interrupted because the encryption key for the specified encryption box was not registered.

**(2-2) U006XX error code table: Problems with the unit**

<b>Error code</b>	<b>Description</b>
U00601	Document jam or the document length exceeds the maximum.
U00613	Image writing section problem
U00656	Data was not transmitted to a modem error.
U00690	System error.

**(2-3) U008XX error code table: Page transmission error**

<b>Error code</b>	<b>Description</b>
U00800	A page transmission error occurred because of reception of a RTN or PIN signal.
U00811	A page transmission error reoccurred after retry of transmission in the ECM mode.

**(2-4) U009XX error code table: Page reception error**

<b>Error code</b>	<b>Description</b>
U00900	An RTN or PIN signal was transmitted because of a page reception error.
U00910	A page reception error remained after retry of transmission in the ECM mode.

**(2-5) U010XX error code table: G3 transmission**

Error code	Description
U01000	An FTT signal was received for a set number of times after TCF signal transmission at 2400 bps. Or, an RTN signal was received in response to a Q signal (excluding EOP) after transmission at 2400 bps.
U01001	Function of the unit differs from that indicated by a DIS signal.
U01016	An MCF signal was received but no DIS signal was received after transmission of an EOM signal, and T1 timeout was detected.
U01019	No relevant signal was received after transmission of a CNC signal, and the preset number of command retransfers was exceeded (between units of our make).
U01020	No relevant signal was received after transmission of a CTC signal, and the preset number of command retransfers was exceeded (ECM).
U01021	No relevant signal was received after transmission of an EOR.Q signal, and the preset number of command retransfers was exceeded (ECM).
U01022	No relevant signal was received after transmission of an RR signal, and the preset number of command retransfers was exceeded (ECM).
U01028	T5 time-out was detected during ECM transmission (ECM).
U01052	A DCN signal was received after transmission of an RR signal (ECM).
U01080	A PIP signal was received after transmission of a PPS.NULL signal.
U01092	During transmission in V.34 mode, communication was interrupted because of an impossible combination of the symbol speed and communication speed.
U01093	A DCN or other inappropriate signal was received during phase B of transmission.
U01094	The preset number of command retransfers for DCS/NSS signals was exceeded during phase B of transmission.
U01095	No relevant signal was received after transmission of a PPS (Q) signal during phase D of transmission, and the preset number of command transfers was exceeded.
U01096	A DCN signal or invalid command was received during phase D of transmission.
U01097	The preset number of command retransfers was exceeded after transmission of an RR signal or no response.



**(2-6) U011XX error code table: G3 reception**

<b>Error code</b>	<b>Description</b>
U01100	Function of the unit differs from that indicated by a DCS signal.
U01101	Function of the unit (excl. communication mode select) differs from that indicated by an NSS signal.
U01102	A DTC (NSC) signal was received when no transmission data was in the unit.
U01110	No response after transmission of a DIS signal.
U01111	No response after transmission of a DTC (NSC) signal.
U01113	No response after transmission of an FTT signal.
U01125	No response after transmission of a CNS signal (between units of our make).
U01129	No response after transmission of an SPA signal (short protocol).
U01141	A DCN signal was received after transmission of a DTC signal.
U01143	A DCN signal was received after transmission of an FTT signal.
U01155	A DCN signal was received after transmission of an SPA signal (short protocol).
U01160	During message reception, transmission time exceeded the maximum transmission time per line.
U01162	Reception was aborted due to a modem malfunction during message reception.
U01191	Communication was interrupted because an error occurred during an image data reception sequence in the V.34 mode.
U01193	There was no response, or a DCN signal or invalid command was received, during phase C/D of reception.
U01194	A DCN signal was received during phase B of reception.
U01195	No message was received during phase C of reception.
U01196	Error line control was exceeded and a decoding error occurred for the message being received.

**(2-7) U017XX error code table: V.34 transmission**

<b>Error code</b>	<b>Description</b>
U01700	A communication error occurred in phase 2 (line probing).
U01720	A communication error occurred in phase 4 (modem parameter exchange).
U01721	Operation was interrupted due to the absence of a common communication speed between units.

U01700: A communication error that occurs at the transmitting unit in the period after transmission of INFO0 before entering phase 3 (primary channel equivalent device training). For example, INFO0/A/Abar (B/Bbar, for polling transmission)/INFOh was not detected.

U01720: A communication error that occurs at the transmitting unit in the period after initiating the control channel before entering the T.30 process. For example, PPh/ALT/MPh/E was not detected.

U01721: In the absence of a common communication speed between units (including when an impossible combination of communication speed and symbol speed occurs) after MPh exchange; 1) a DCN signal was received from the destination unit, and the line was cut; or 2) a DIS (NSF, CSI) signal was received from the destination unit and, in response to the signal, the unit transmitted a DCN signal, and the line was cut.

**(2-8) U018XX error code table: V.34 reception**

<b>Error code</b>	<b>Description</b>
U01800	A communication error occurred in phase 2 (line probing).
U01810	A communication error occurred in phase 3 (primary channel equivalent device training).
U01820	A communication error occurred in phase 4 (modem parameter exchange).
U01821	Operation was interrupted due to the absence of a common communication speed between units.

U01800: A communication error that occurs at the receiver unit in the period after transmission of INFO0 before entering phase 3 (primary channel equivalent device training). For example, INFO0/B/Bbar (A/Abar, for polling reception)/probing tone was not detected.

U01810: A communication error that occurs at the receiver unit in phase 3 (primary channel equivalent device training). For example, S/Sbar/PP/TRN was not detected.

U01820: A communication error that occurs at the receiver unit in the period after initiating the control channel before entering the T.30 process. For example, PPh/ALT/MPh/E was not detected.

U01821: In the absence of a common communication speed between units (including when an impossible combination of communication speed and symbol speed occurs) after MPh exchange, a DCN signal was transmitted to the destination unit and the line was cut.

**(2-9) U044XX error code table: Encrypted transmission**

<b>Error code</b>	<b>Description</b>
U04400	Encrypted transmission was interrupted because encryption keys did not agree.

This page is intentionally left blank.

## 1-5-1 Precautions for assembly and disassembly

### (1) Precautions

Before starting disassembly, press the Power key on the operation panel to off. Make sure that the Power lamp is off before turning off the main power switch. And then unplug the power cable from the wall outlet.

When the fax kit is installed, be sure to disconnect the modular code before starting disassembly.

When handling PWBs (printed wiring boards), do not touch parts with bare hands.

The PWBs are susceptible to static charge.

Do not touch any PWB containing ICs with bare hands or any object prone to static charge.

When removing the hook of the connector, be sure to release the hook.

Take care not to get the cables caught.

To reassemble the parts, use the original screws. If the types and the sizes of screws are not known, refer to the PARTS LIST.

### (2) Drum

Note the following when handling or storing the drum.

When removing the drum unit, never expose the drum surface to strong direct light.

Keep the drum at an ambient temperature between -20°C/-4°F and 40°C/104°F and at a relative humidity not higher than 90% RH. Avoid abrupt changes in temperature and humidity.

Avoid exposure to any substance which is harmful to or may affect the quality of the drum.

Do not touch the drum surface with any object. Should it be touched by hands or stained with oil, clean it.

### (3) Toner

Store the toner container in a cool, dark place.

Avoid direct light and high humidity.

#### (4) How to tell a genuine Kyocera Mita toner container

As a means of brand protection, the Kyocera Mita toner container utilizes an optical security technology to enable visual validation. A validation viewer is required to accomplish this.

Hold the validation viewer over the left side part of the brand protection seal on the toner container. Through each window of the validation viewer, the left side part of the seal should be seen as follows:

A black-colored band when seen through the left side window ( ● )

A shiny or gold-colored band when seen through the right side window ( ☀ )

The above will reveal that the toner container is a genuine Kyocera Mita branded toner container, otherwise, it is a counterfeit.

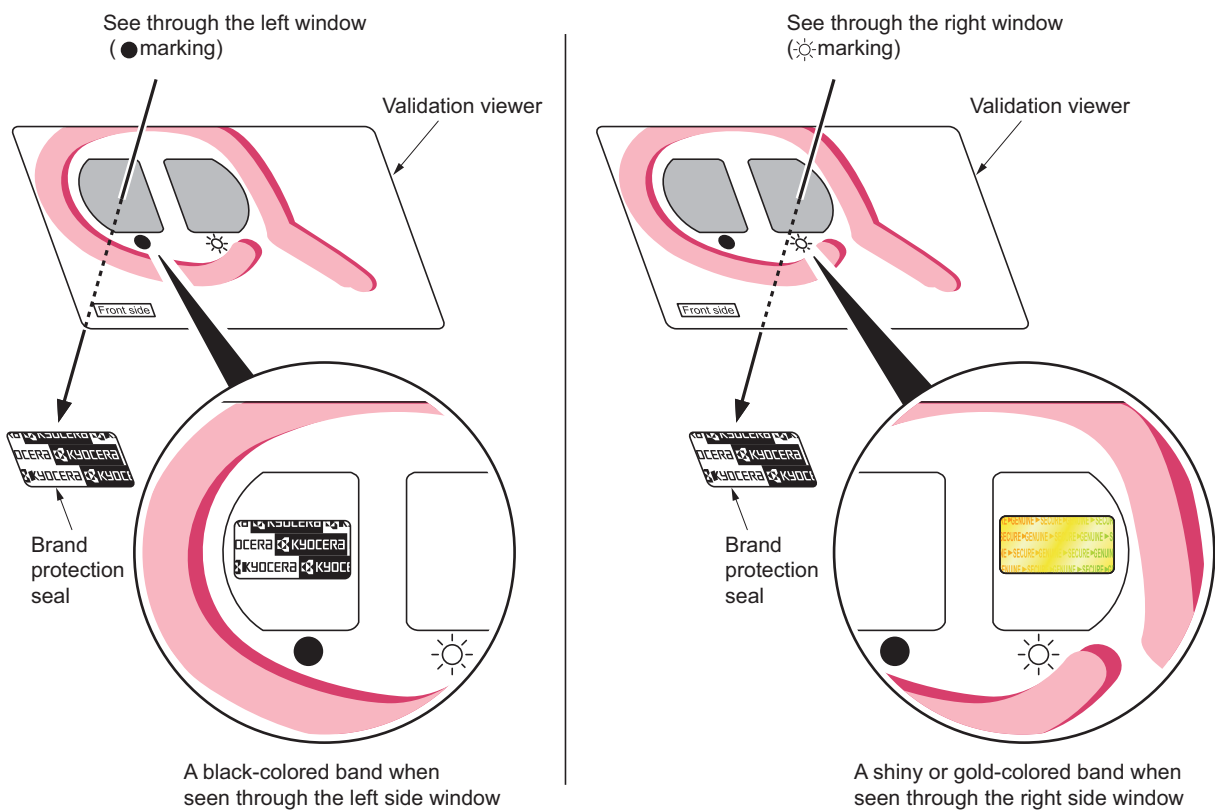


Figure 1-5-1

The brand protection seal has an incision as shown below to prohibit reuse.

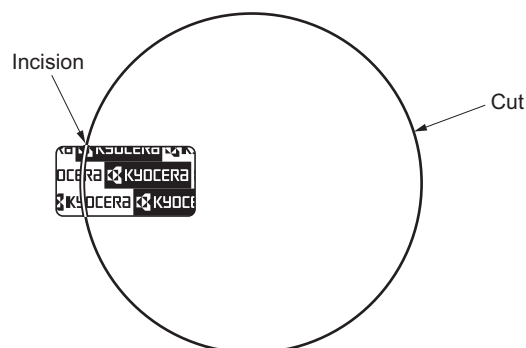


Figure 1-5-2

## 1-5-2 Outer covers

### (1) Detaching and refitting the right cover and left cover

#### Procedure

1. Remove the cassette. (See page 1-5-6)
2. Open the front cover.
3. Remove the one screw.
4. Unhook six hooks and then remove the right cover.


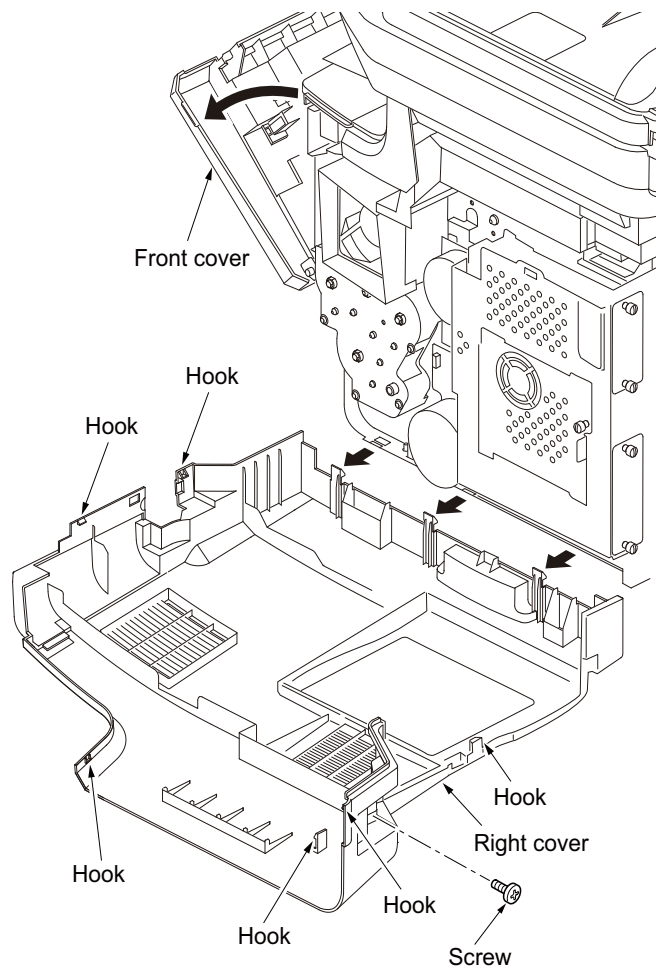


Figure 1-5-3

- 5. Remove two fulcrum of the front cover.
- 6. Unhook the hook of the front cover rack and then remove the front cover.

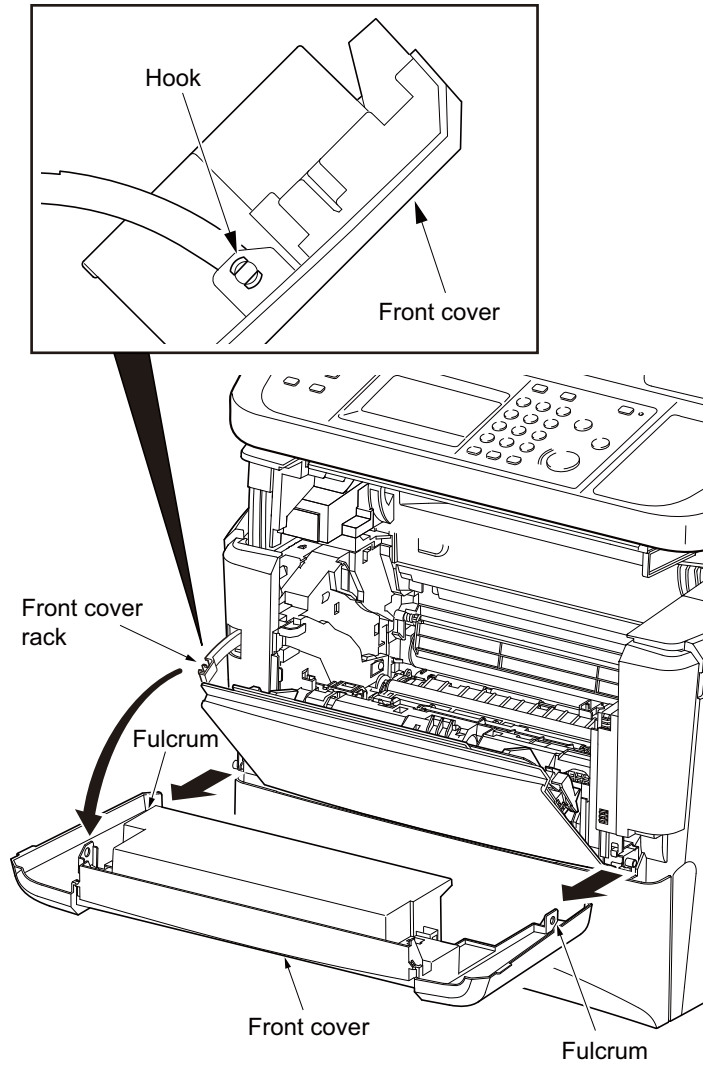

**Figure 1-5-4**

7. Open the left side cover and then remove the waste toner box.  
(See page 1-5-20)
8. Remove the one screw and then remove the rear upper cover.
9. Unhook four hooks and then remove the rear upper cover.

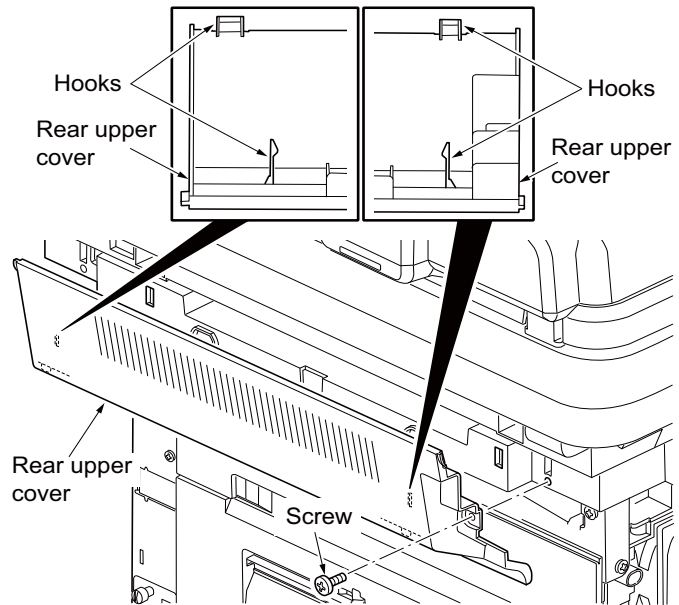


Figure 1-5-5

10. Draw the rear unit.
11. Open the rear middle cover.
12. Unhook seven hooks and then remove the left cover.

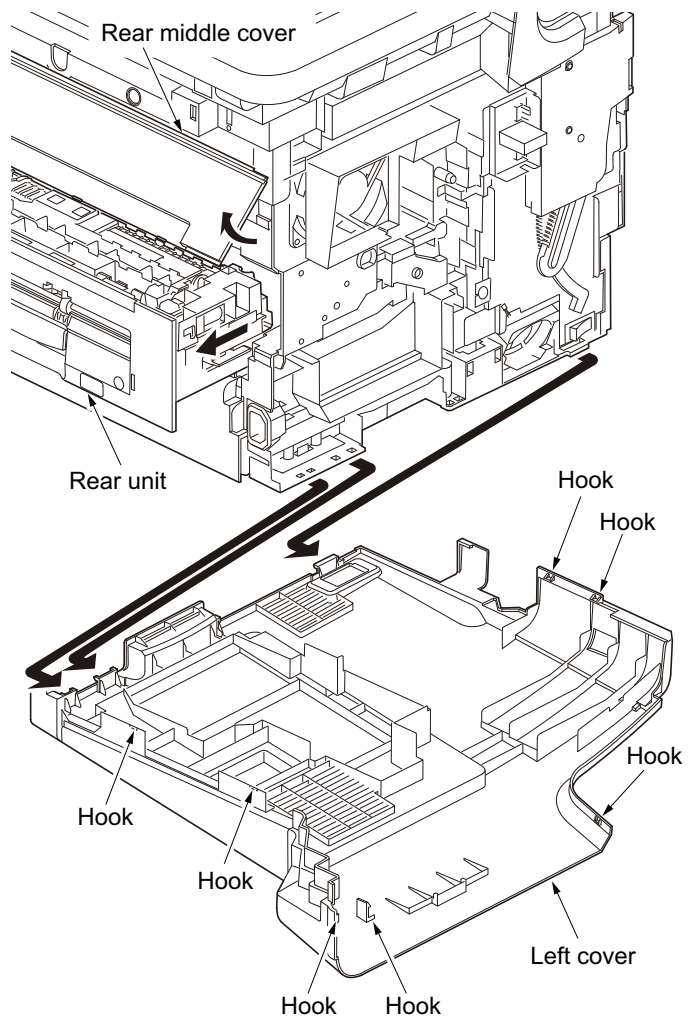


Figure 1-5-6



## 1-5-3 Paper feed section

### (1) Detaching and refitting the paper feed assembly (paper feed roller and pickup roller)

#### Procedure

1. Remove the cassette.
2. While pushing the lock and then slide the paper feed roller pin.
3. While pressing the lever and then remove the paper feed assembly.
4. Check or replace the paper feed assembly and refit all the removed parts.

#### NOTE:

When the periodic maintenance (replacing the maintenance kit, see page 2-4-4), perform maintenance mode.:

U251 Clearing the maintenance count (see page 1-3-17)

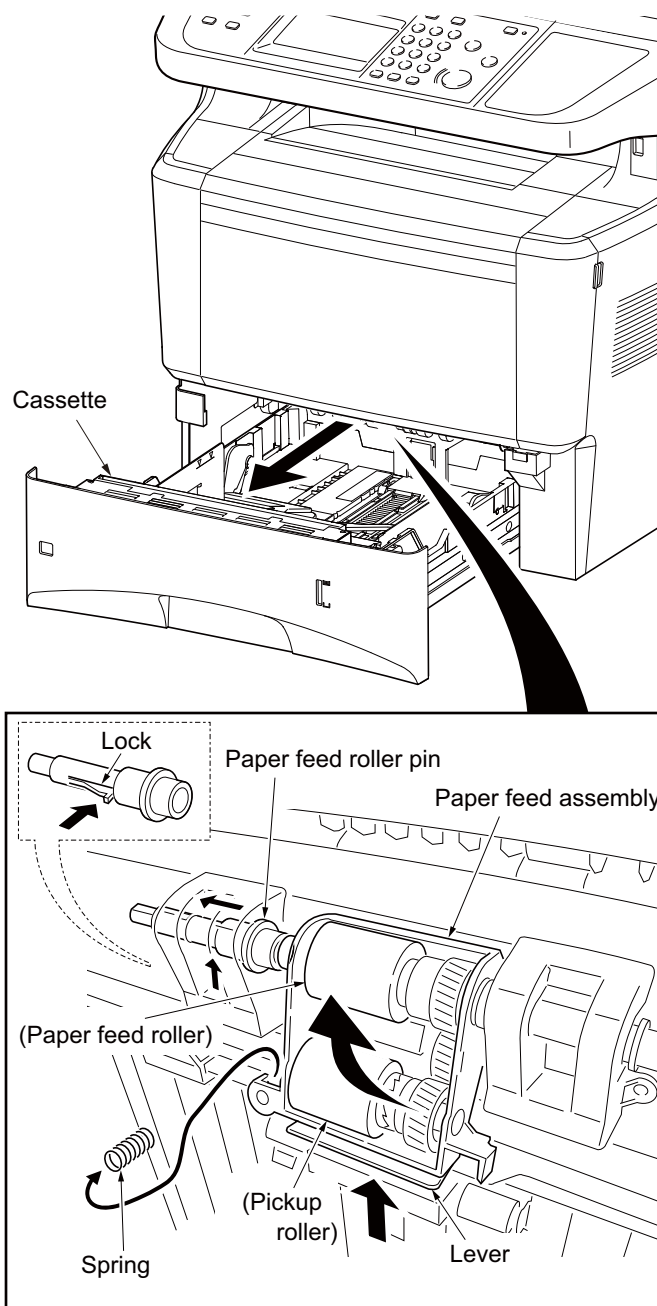


Figure 1-5-7

## (2) Detaching and refitting the retard roller assembly

### Procedure

1. Remove the cassette.
2. Unhook two hooks and then remove the retard guide.

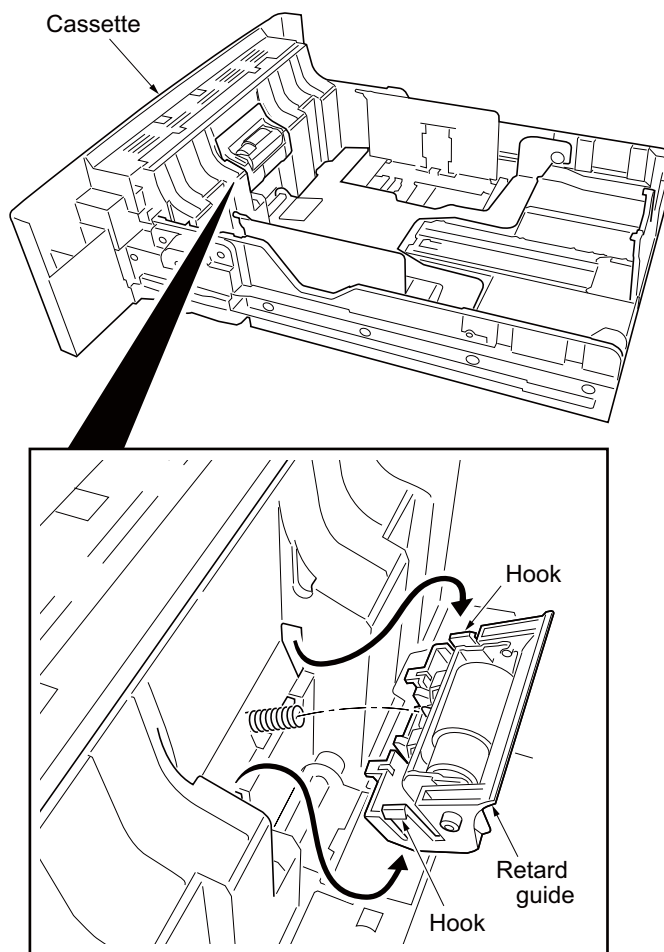


Figure 1-5-8

3. Remove the retard holder (roller) from the retard guide.
4. Check or replace the retard roller and refit all the removed parts.

### NOTE:

When the periodic maintenance (replacing the maintenance kit, see page 2-4-4), perform maintenance mode.:

U251 Clearing the maintenance count (see page 1-3-17)

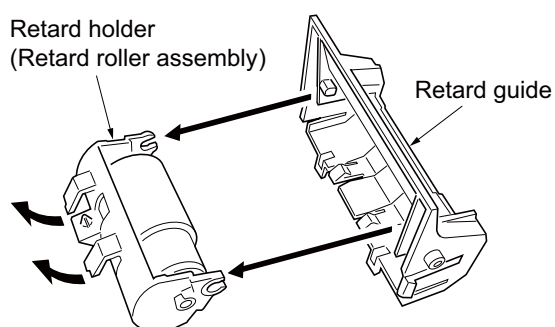


Figure 1-5-9

### (3) Detaching and refitting the upper registration and lower roller

#### Procedure

1. Remove the developing unit.  
(See page 1-5-19)
2. Remove the spring.
3. Pull the upper registration roller.

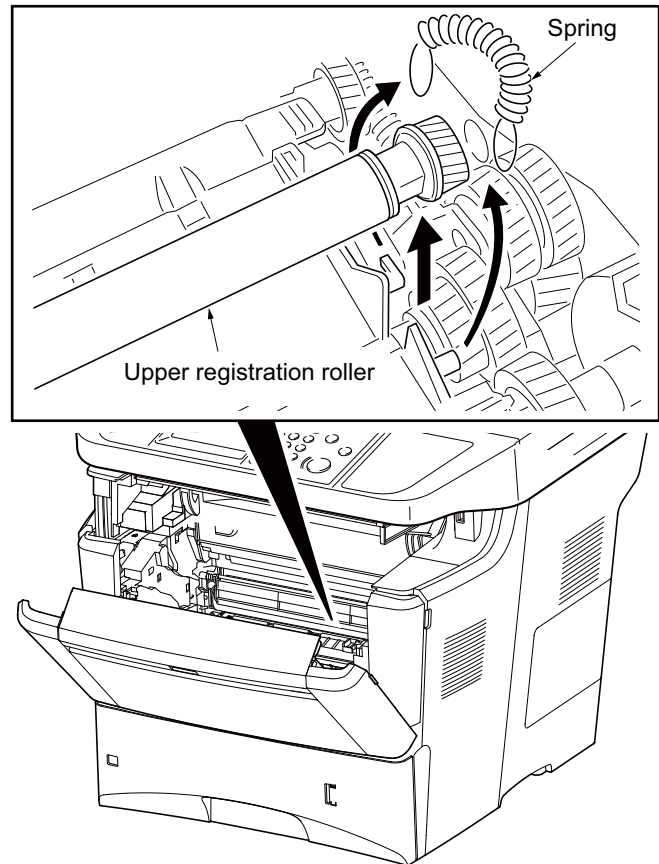


Figure 1-5-10

4. Remove the upper registration roller from the bush.
5. Remove the gear and bush from the upper registration roller.


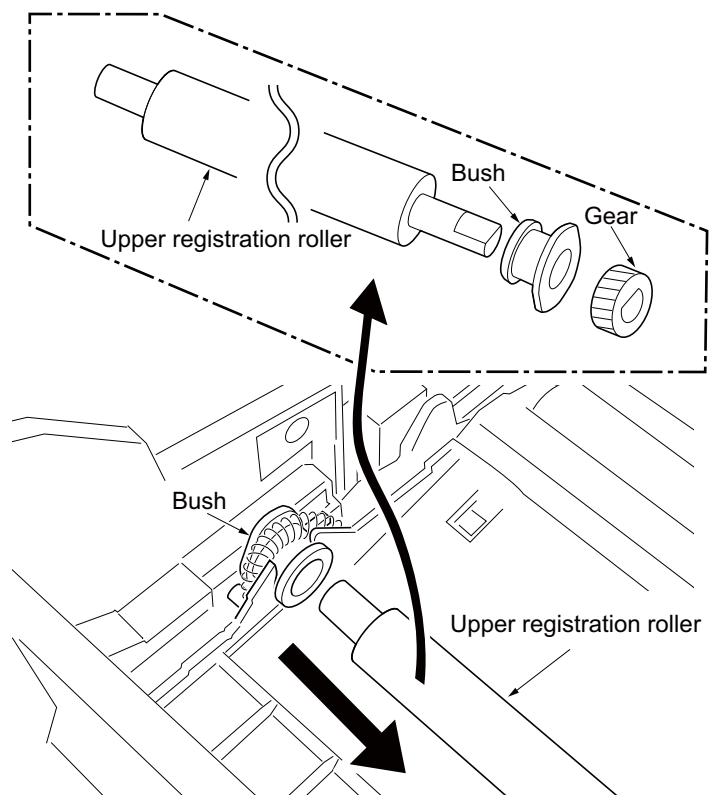


Figure 1-5-11

6. Remove the lower registration roller.
7. Remove the stopper, gear and three bushes from the lower registration roller.
8. Check or replace the upper registration and lower roller and refit all the removed parts.

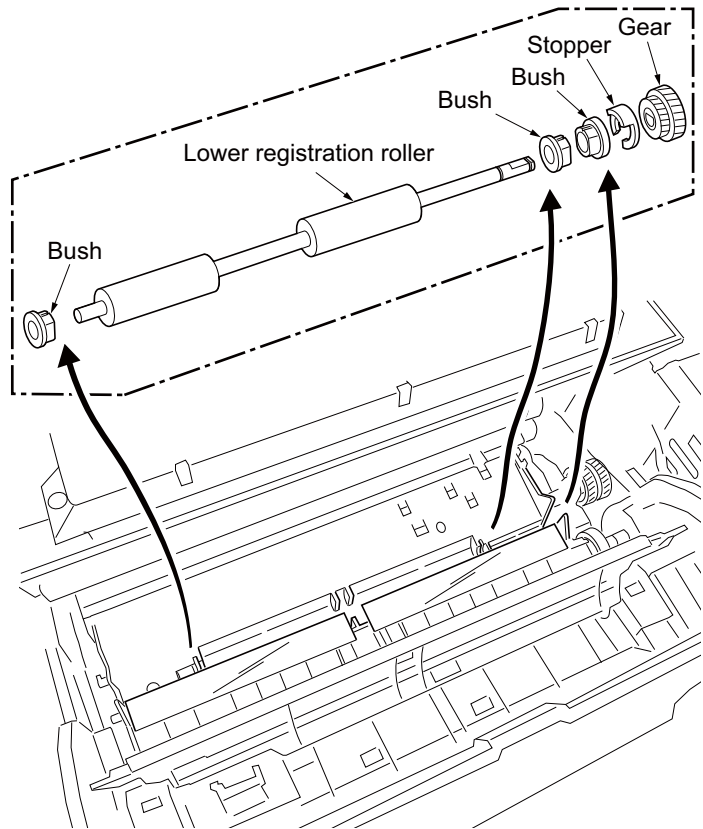

**Figure 1-5-12**

#### (4) Detaching and refitting the MP paper feed roller

##### Procedure

1. Open the front cover.
2. Remove the developing unit.  
(See page 1-5-19)
3. Remove the front cover.  
(See page 1-5-3)
4. Pull the MP paper feed tray upwards until it is removed from the machine.

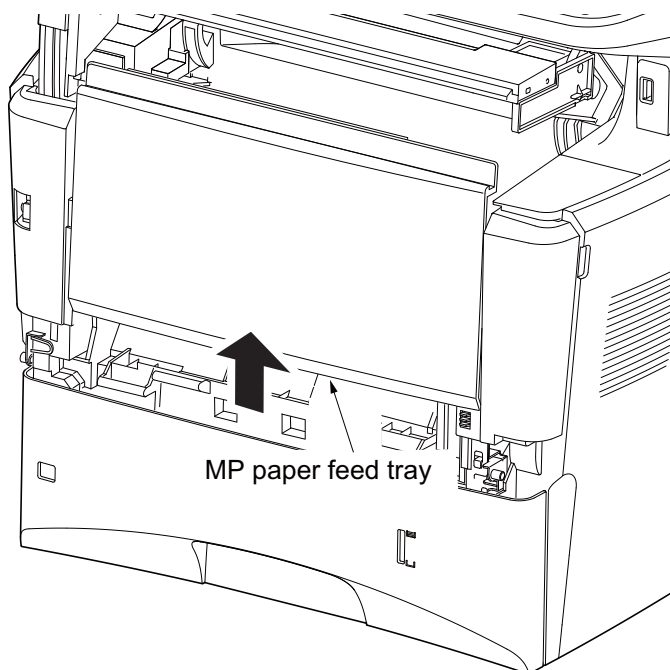


Figure 1-5-13

5. Pull the MP paper feed roller holder. (1)
6. Slide the MP paper feed roller holder. (2)
7. Remove the MP paper feed roller.
8. Check or replace the MP paper feed roller and refit all the removed parts.

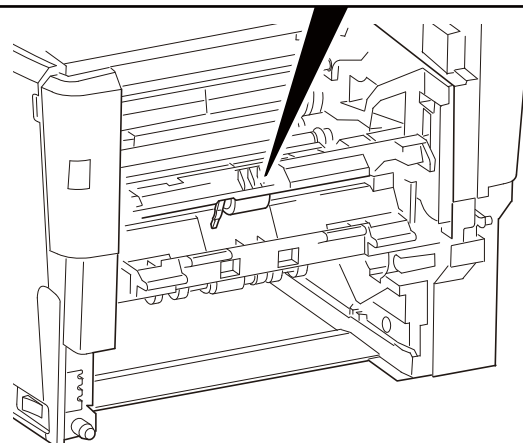
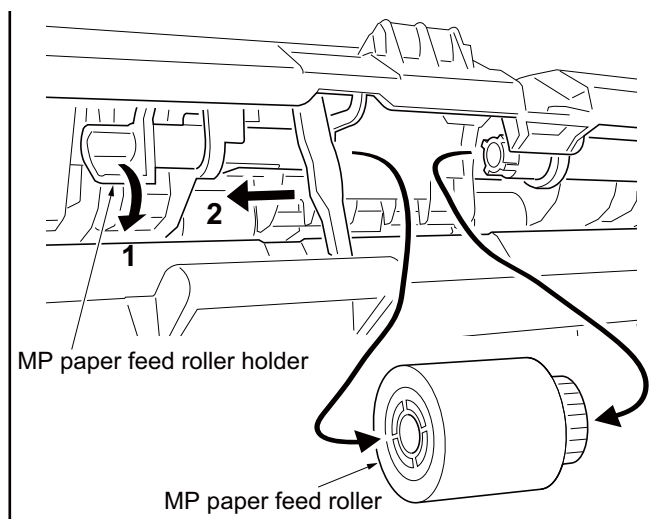


Figure 1-5-14

## 1-5-4 Optical section

### (1) Detaching and refitting the Document processor

#### Procedure

1. Remove the right cover.  
(See page 1-5-3)
2. Remove two connectors from the main PWB.


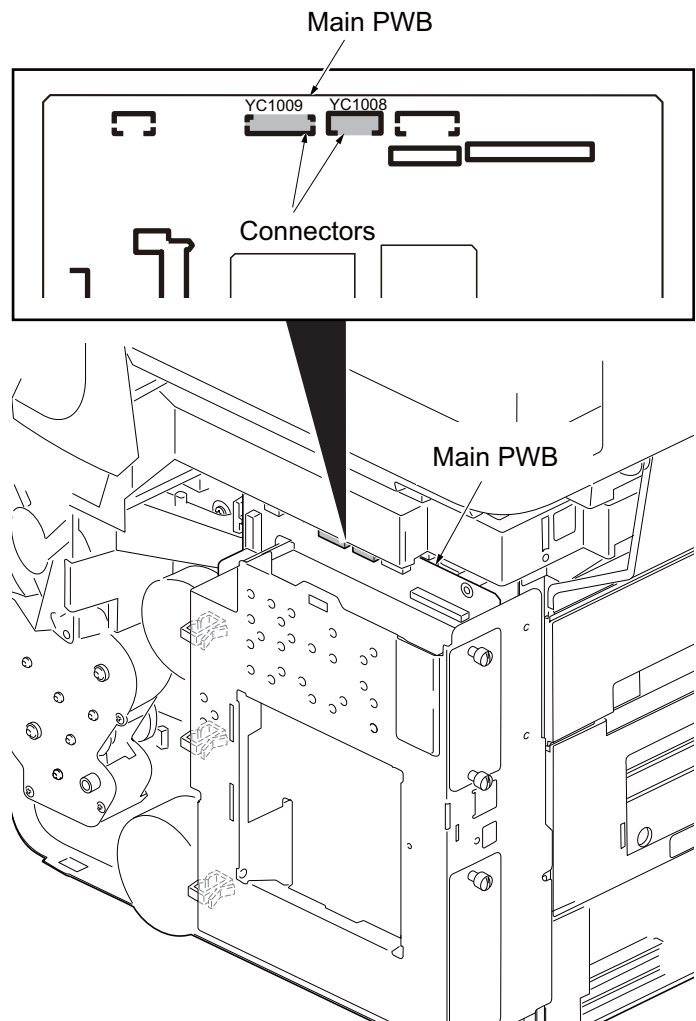



Figure 1-5-15

3. Remove the ferrite core.
4. Remove the screw and grounding terminal.
5. Release the clamp and then remove the electrical wires.

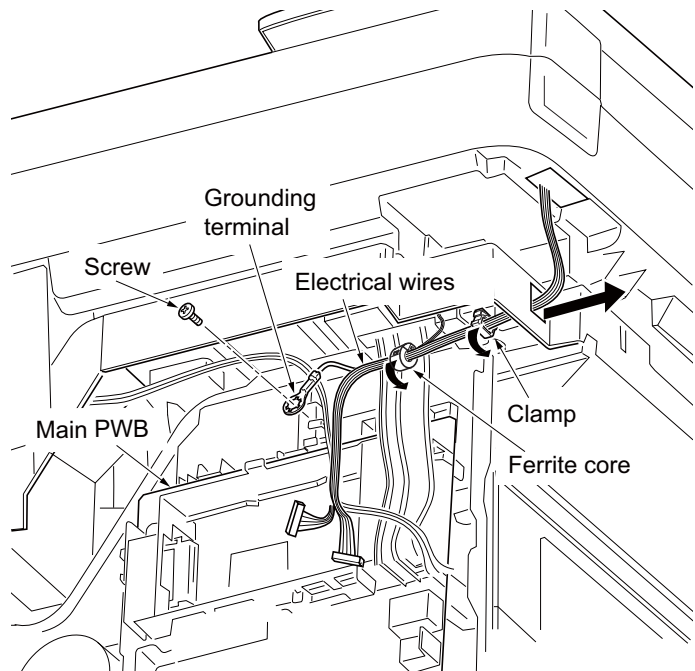

**Figure 1-5-16**

6. Pull the Document processor out.

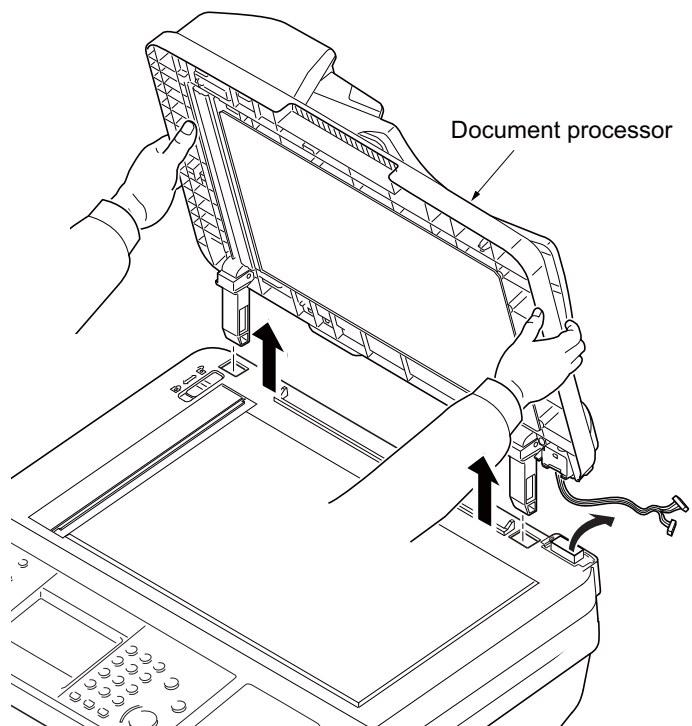

**Figure 1-5-17**

## (2) Detaching and refitting the scanner unit

### Procedure

1. Remove the right cover and left cover.  
(See page 1-5-3)
2. Remove the document processor.  
(See page 1-5-11)
3. Remove the FFC and three connectors and the USB from the main PWB.

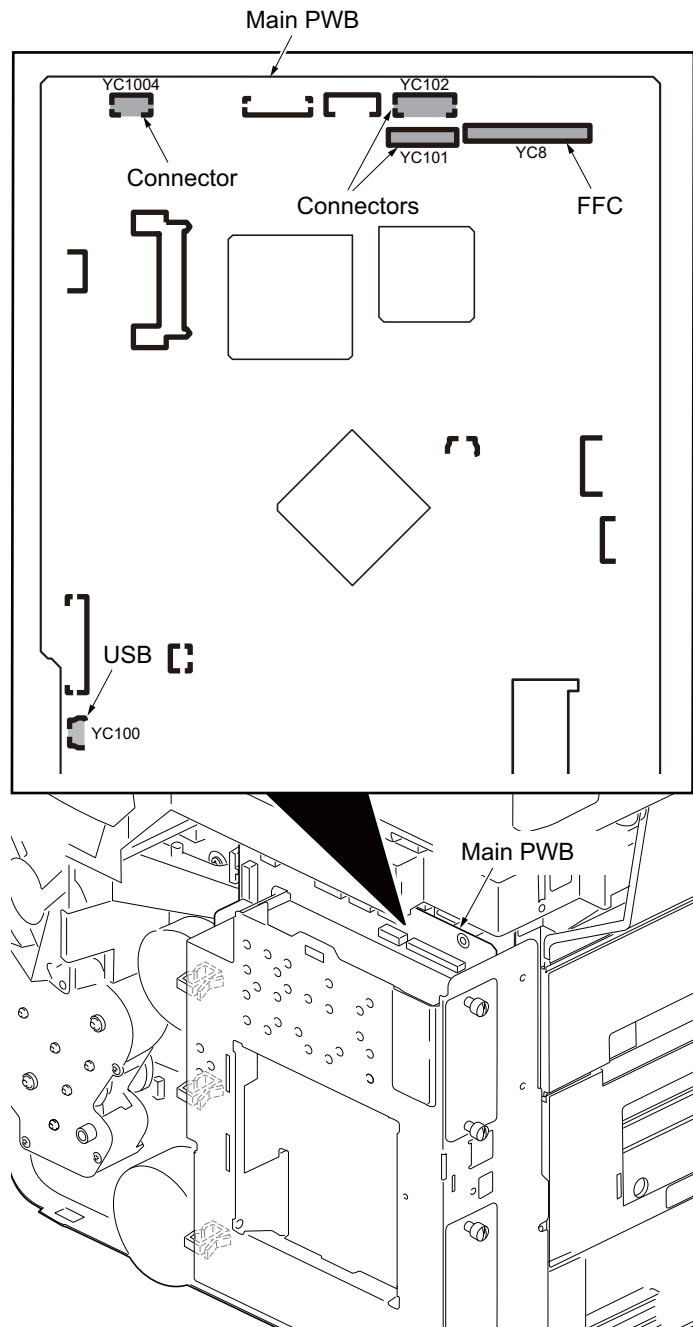


Figure 1-5-18



4. Release clamps and then remove the wires.

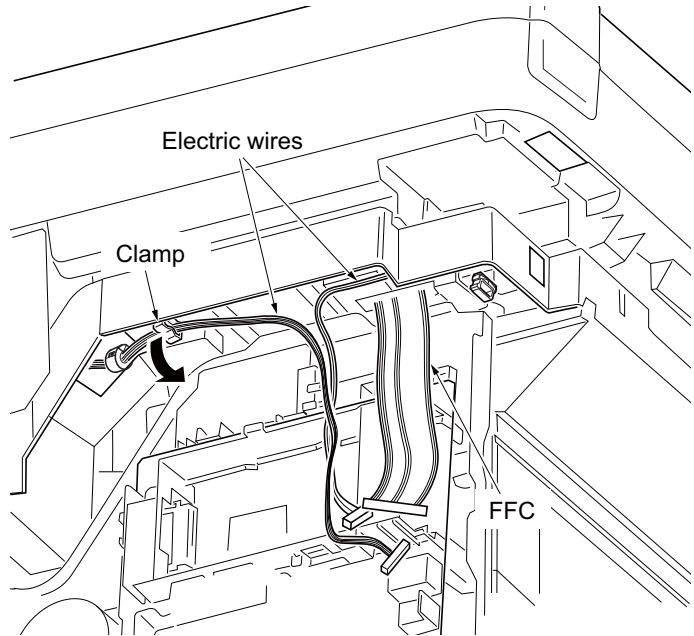


Figure 1-5-19

5. Remove two screws.

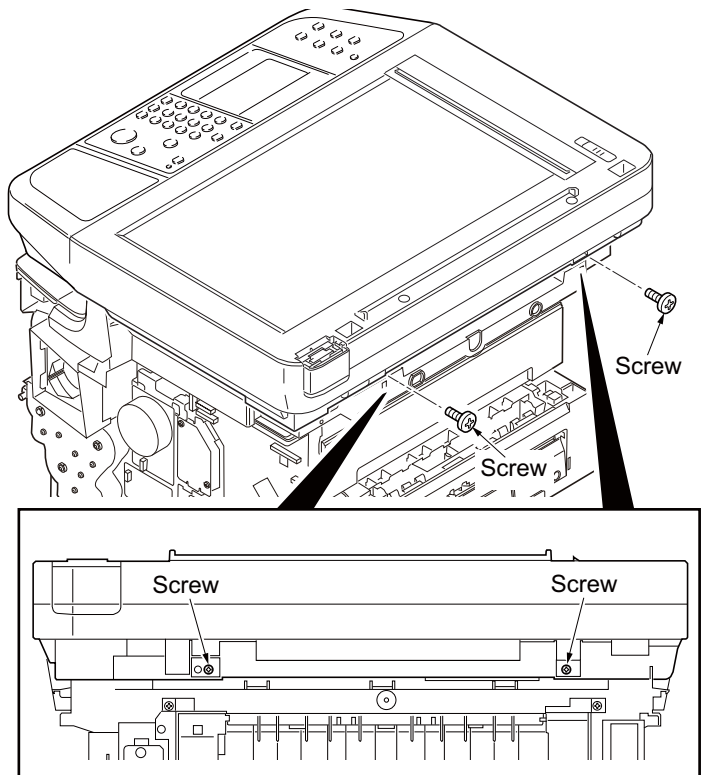


Figure 1-5-20

6. Unhook four hooks and then remove the scanner unit.

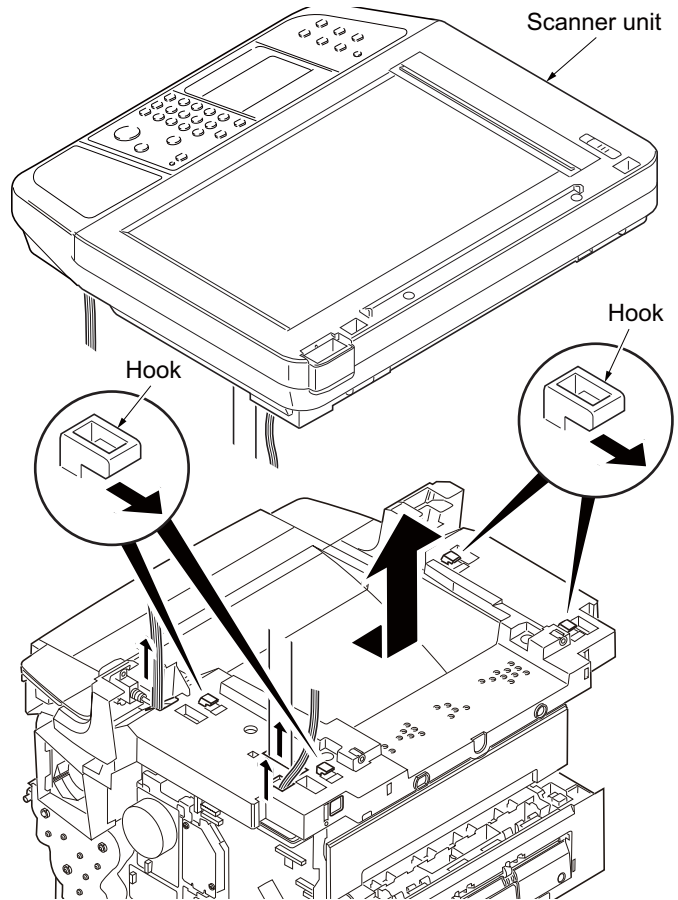


Figure 1-5-21

### (3) Detaching and refitting the laser scanner unit

#### Procedure

1. Remove the right cover and left cover.  
(See page 1-5-3)
2. Remove the document processor.  
(See page 1-5-11)
3. Remove the scanner unit.  
(See page 1-5-13)
4. Remove the connector from the main PWB.
5. Remove the screw and grounding terminal.
6. Unhook the hook and then remove the right front upper cover.

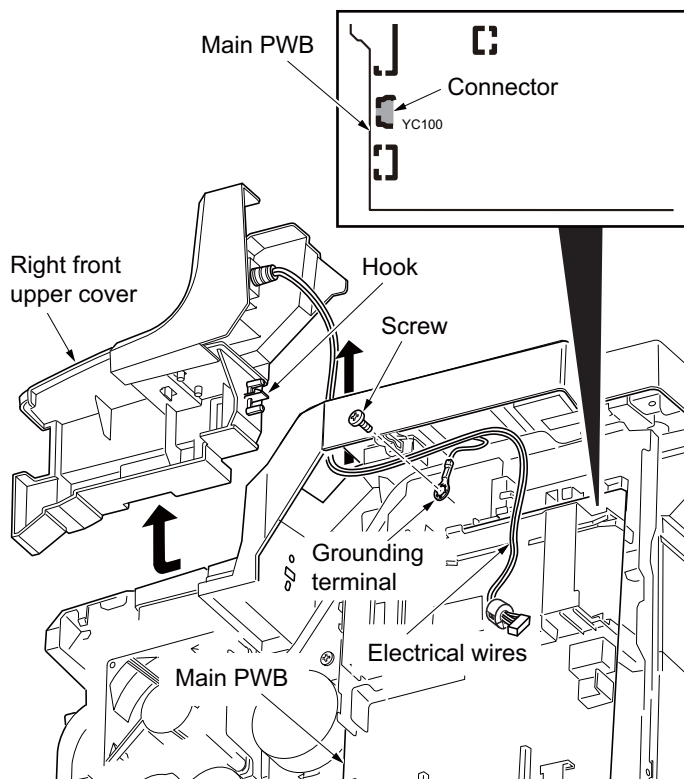


Figure 1-5-22

7. Unhook the hook and then remove the left front upper cover.
8. Remove the one screw on upper cover rack.

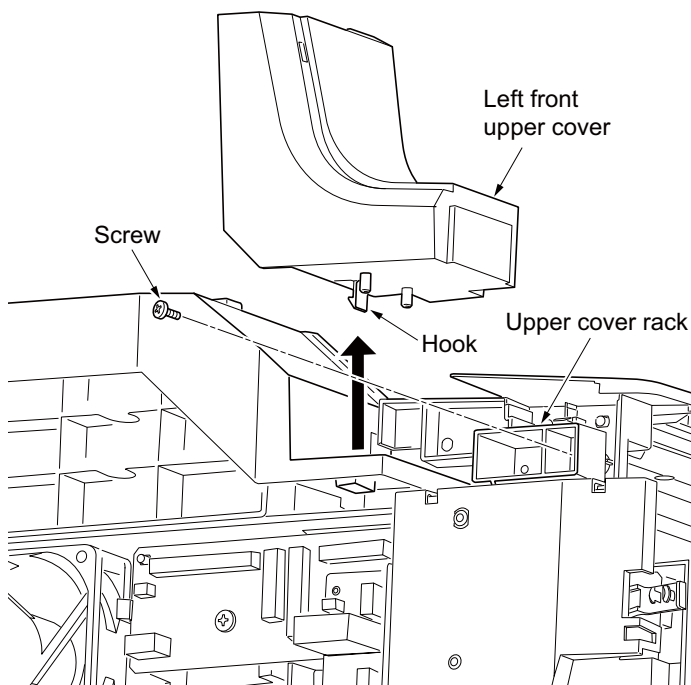


Figure 1-5-23

9. Remove two fulcrum of the upper cover.

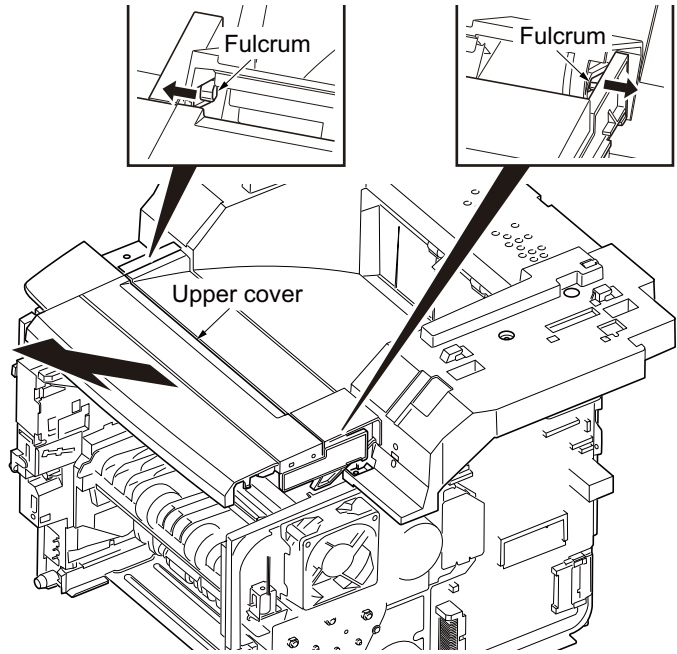


Figure 1-5-24

10. Remove six screws on the inner tray.

11. Remove the inner tray.

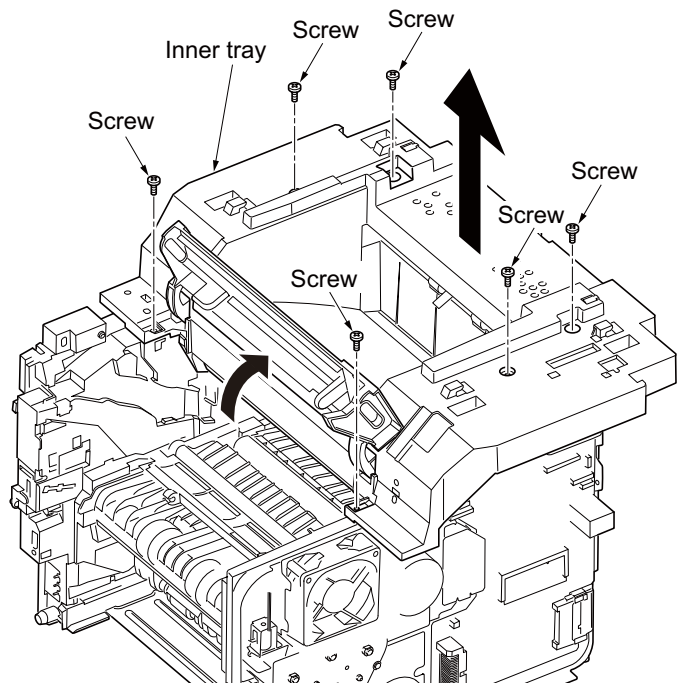


Figure 1-5-25

12. Remove two connectors from the main PWB.

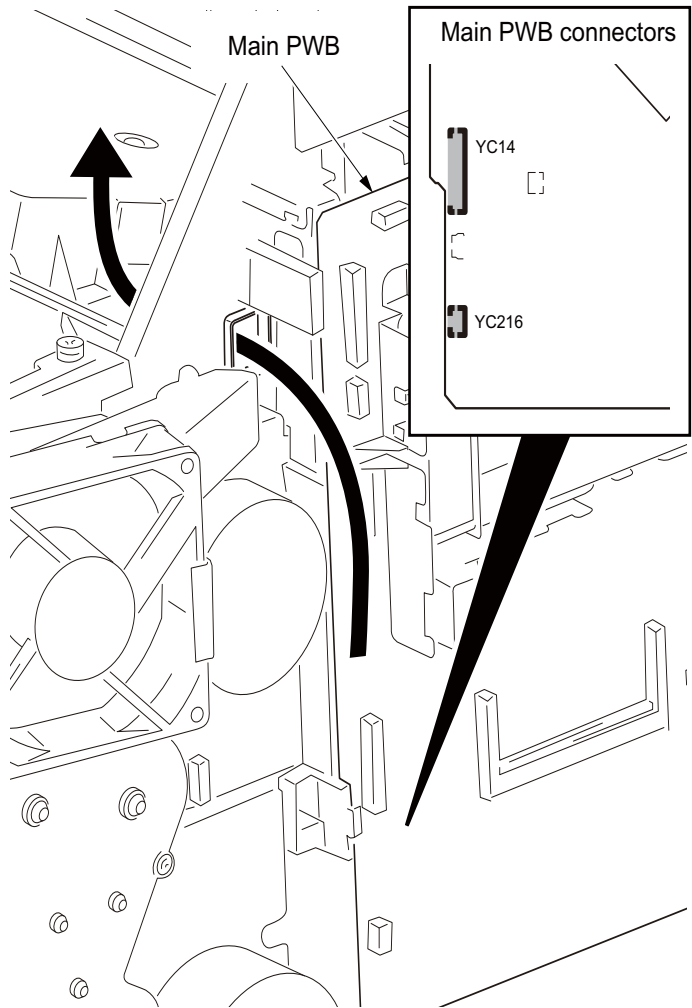


Figure 1-5-26

13. Remove four screws and then remove the laser scanner unit.
14. Check or replace the laser scanner unit and refit all the removed parts.

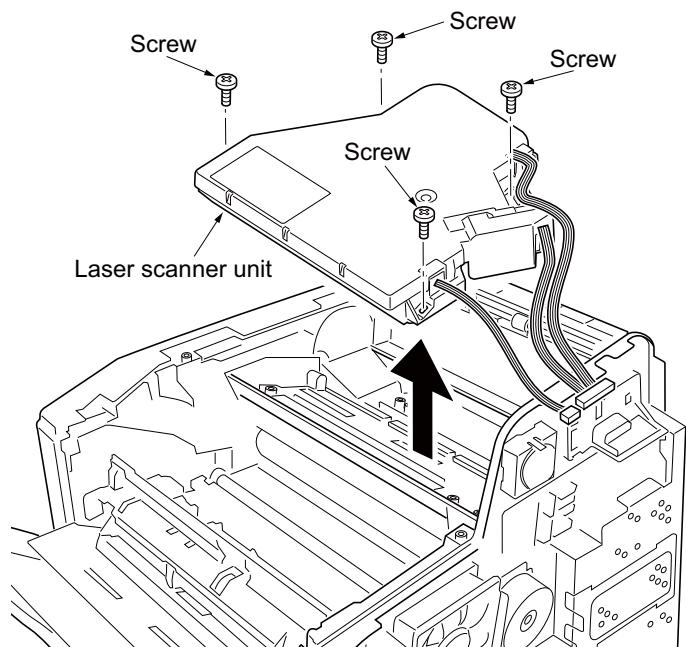


Figure 1-5-27

## 1-5-5 Developing section

### (1) Detaching and refitting the developing unit

#### Procedure

1. Open the front cover.
2. Remove the developing unit.
3. Check or replace the developing unit and refit all the removed parts.

#### NOTE:

When the periodic maintenance (replacing the maintenance kit, see page 2-4-4), perform maintenance mode.:

U251 Clearing the maintenance count (see page 1-3-17)

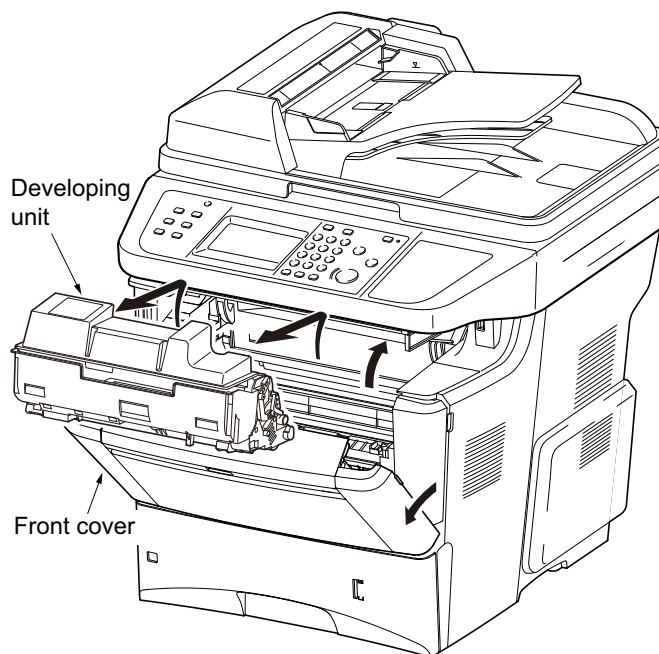


Figure 1-5-28

## 1-5-6 Drum section

### (1) Detaching and refitting the drum unit

#### Procedure

1. Remove the developing unit.  
(See page 1-5-19)
2. Open the left side cover and then remove the waste toner box.
3. Remove the drum stopper.
4. Unlock the drum unit lock and then remove the drum unit.
5. Check or replace the drum unit and refit all the removed parts.

#### NOTE:

When the periodic maintenance (replacing the maintenance kit, see page 2-4-4), perform maintenance mode.:  
U251 Clearing the maintenance count (see page 1-3-17)

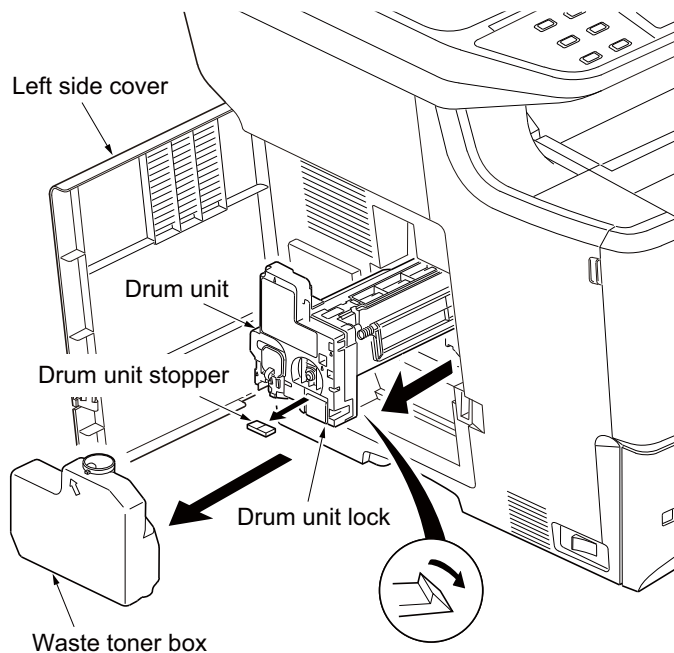


Figure 1-5-29

### (2) Detaching and refitting the main charger unit

#### Procedure

1. Remove the drum unit.  
(See page 1-5-20)
2. Unlock the lock lever and then remove the main charger unit.
3. Check or replace the main charger unit and refit all the removed parts.

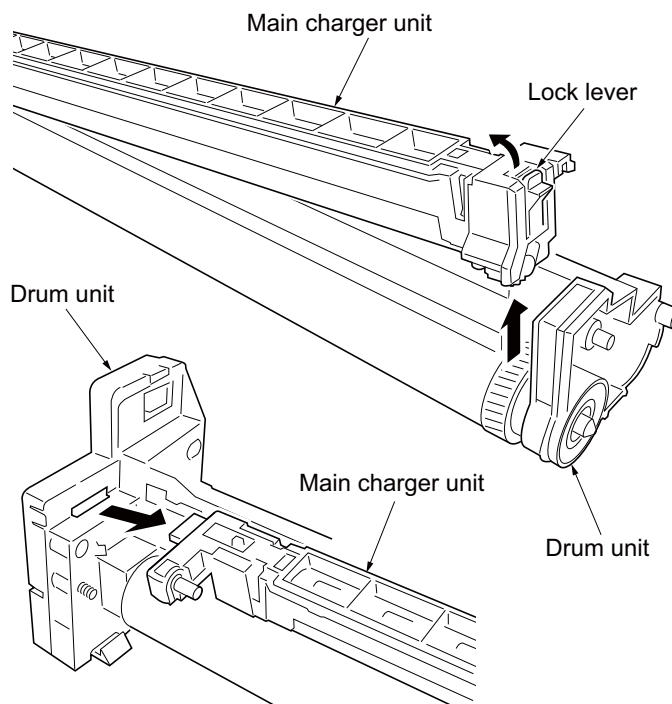


Figure 1-5-30

## 1-5-7 Transfer/separation section

### (1) Detaching and refitting the transfer roller and separation brush unit

#### Procedure

1. Remove the developing unit.  
(See page 1-5-19)
2. Remove the drum unit.  
(See page 1-5-20)
3. Slide the paper chute guide and unhook the hooks.
4. Remove the paper chute guide.

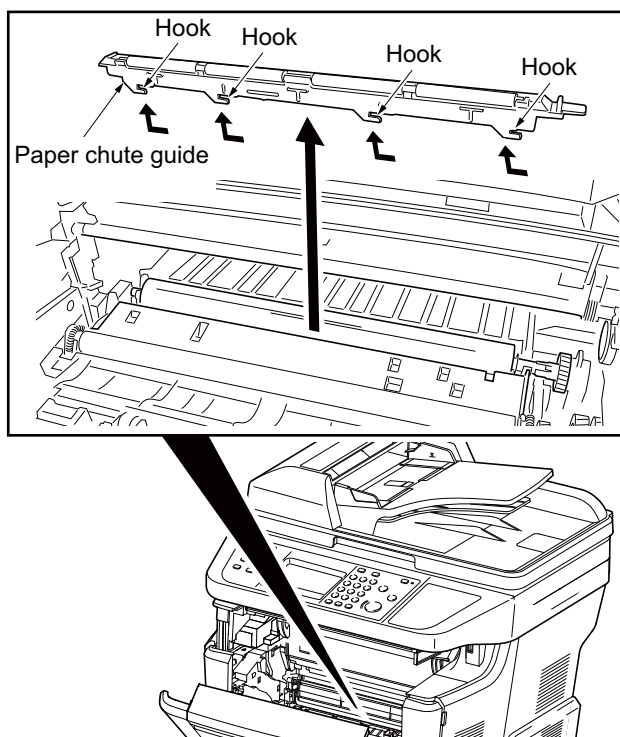


Figure 1-5-31

5. Remove the transfer roller's shaft from the both bushes.

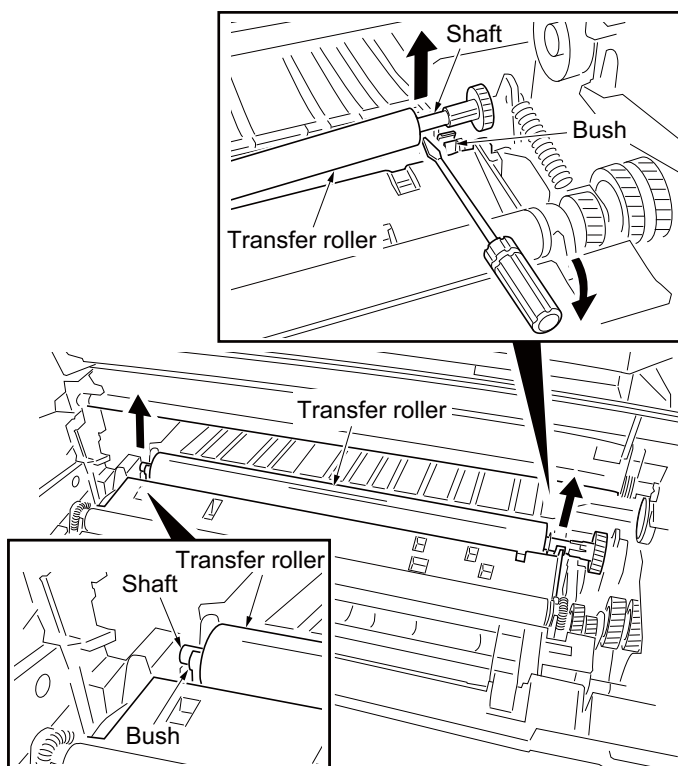


Figure 1-5-32



6. Release four hooks and then remove the separation brush unit.
7. Check or replace the transfer roller and separation brush unit and refit all the removed parts.

**CAUTION:** Note the following, when refitting the transfer roller and separation brush unit.

**A: Transferroller**

To avoid damaging the bush, place the transfer roller so that its gear does not hit the U-shaped bush.

**B: Separation brush unit**

While inserting the separation holder in place, align the ends of the holder with the guides until they click in.

(a) The separation brush unit is inserted into the two projections of the frame and does not run on to the projections.

(b) The separation brush unit is firmly in contact with the separation plate of the frame.

**NOTE:**

When the periodic maintenance (replacing the maintenance kit, see page 2-4-4), perform maintenance mode.:

U251 Clearing the maintenance count (see page 1-3-17)

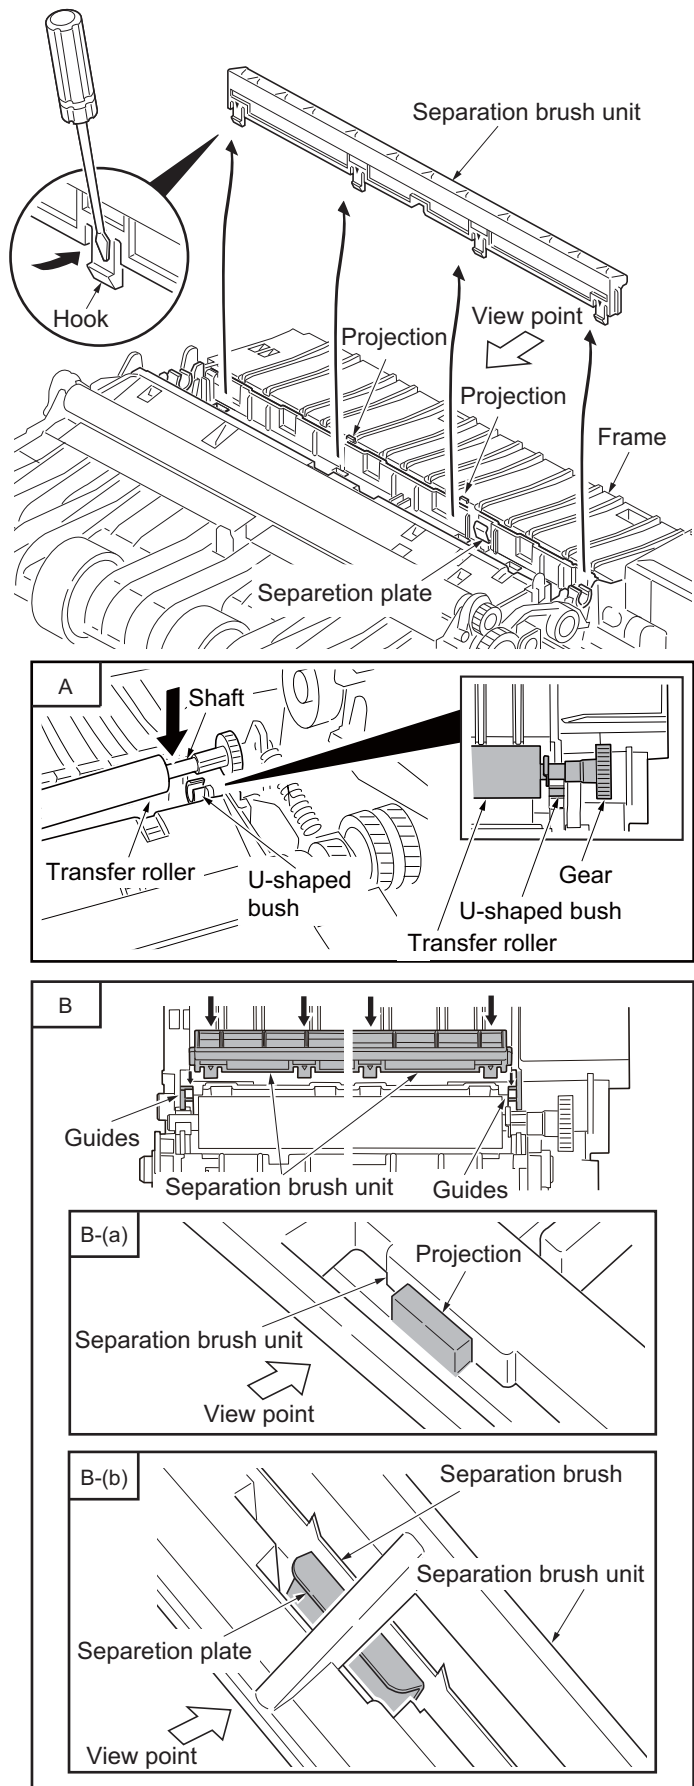


Figure 1-5-33

## 1-5-8 Fuser section

### (1) Detaching and refitting the fuser unit

#### Procedure

1. Draw the rear unit.
2. Insert a flat-blade screwdriver to push the fuser lock (gray colored) on the rear unit and the fuser unit is separated from the rear unit (rails).  
Do it both ends of the rear unit.
3. Check or replace the fuser unit and refit all the removed parts.  
Place the fuser unit on the rear unit (rails) and push the fuser lock so that the fuser lock catches the fuser unit.  
Do it for the both ends of the fuser unit.

#### NOTE:

When the periodic maintenance (replacing the maintenance kit, see page 2-4-4), perform maintenance mode.:

U251 Clearing the maintenance count (see page 1-3-17)

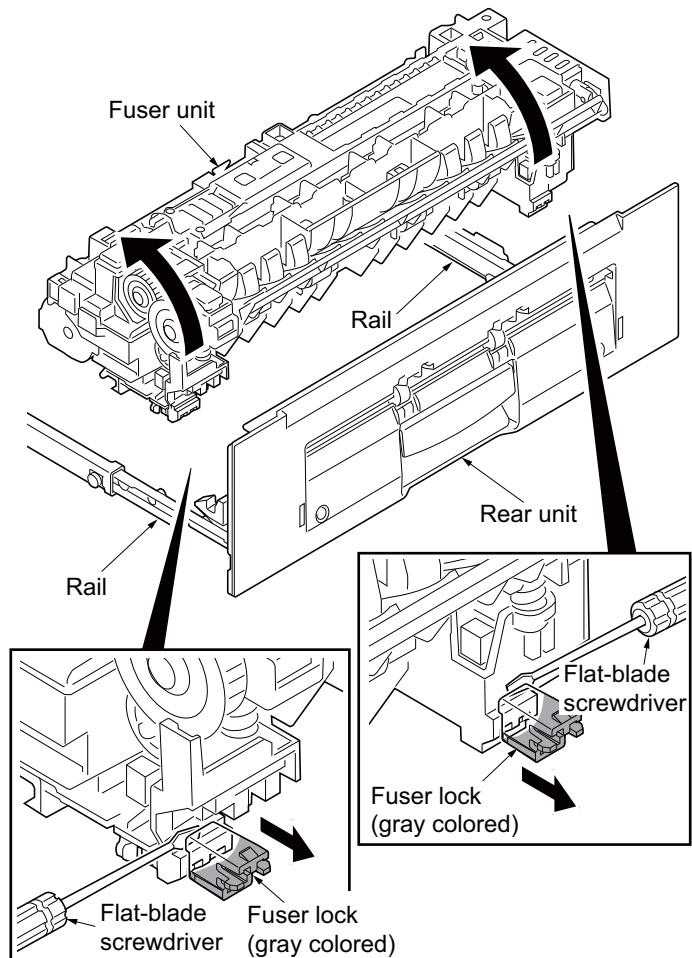


Figure 1-5-34

## 1-5-9 PWBs

### (1) Detaching and refitting the engine PWB

#### Procedure

1. Remove the developing unit.  
(See page 1-5-19)
2. Remove the drum unit.  
(See page 1-5-20)
3. Remove the right cover and left cover.  
(See page 1-5-3)
4. Remove the PSU fan motor.  
(See page 1-5-31)
5. Stand the main body front side up.
6. Remove five screws and then remove the bottom plate 1.
7. Remove two screws and then remove the bottom plate 2.

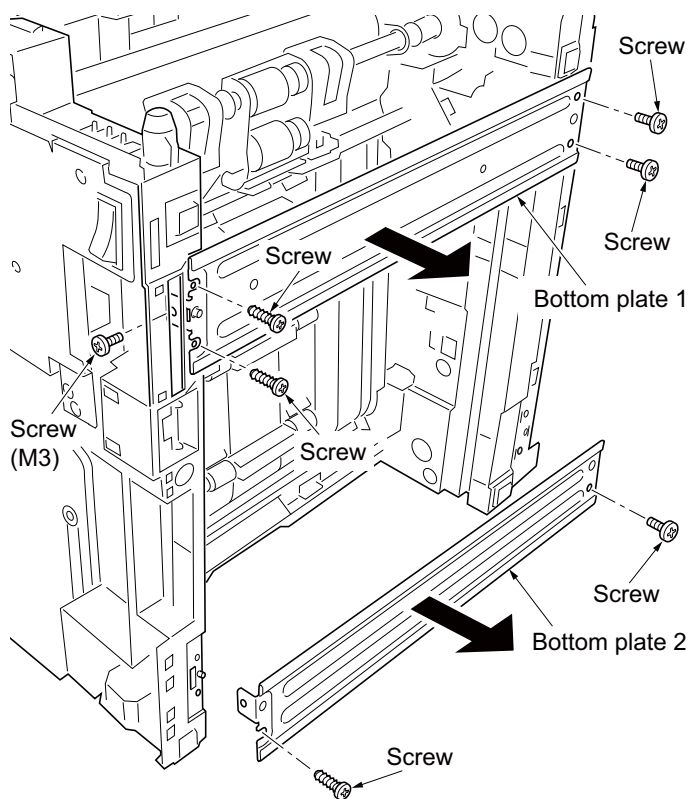


Figure 1-5-35

8. Remove two wires from the hooks and notches.
9. Open the DU guide (duplex cover).

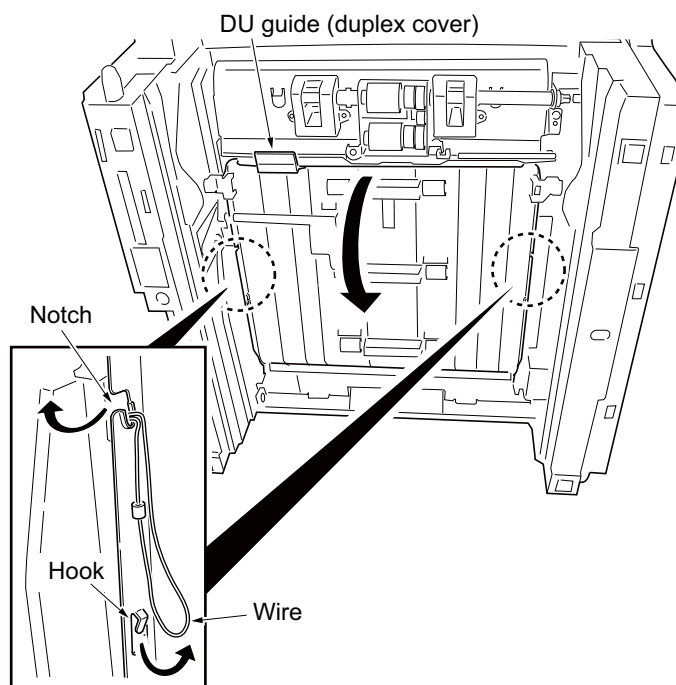


Figure 1-5-36

10. Remove the cord cover.
11. Remove the connector.
12. Detach the joint.
13. Remove the six screws and then remove the DU base.

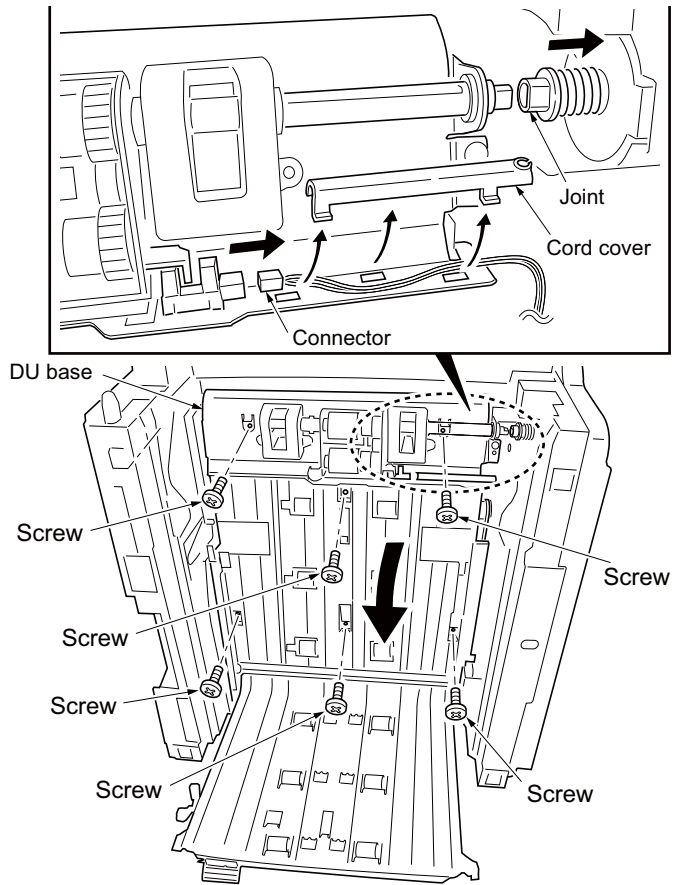


Figure 1-5-37

14. Release four snaps.
15. Remove one tab.
16. Remove five connectors.

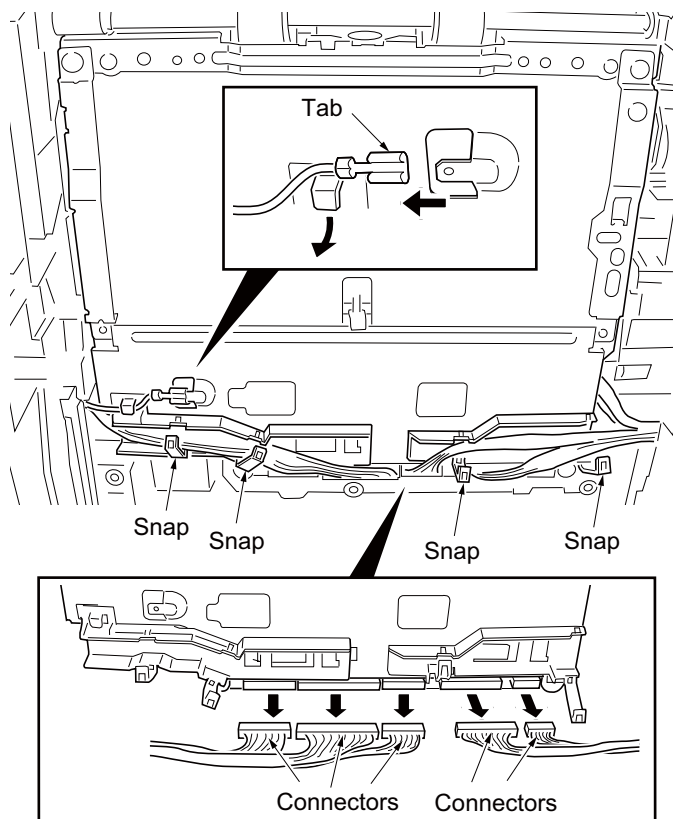


Figure 1-5-38

17. Remove four screws.

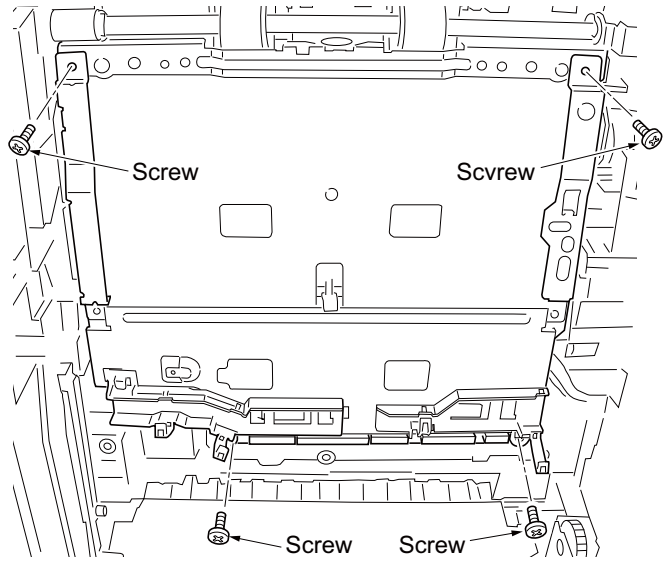


Figure 1-5-39

- 18. Detach the engine PWB assembly.
- 19. Remove four connectors.
- 20. Remove the engine PWB assembly.

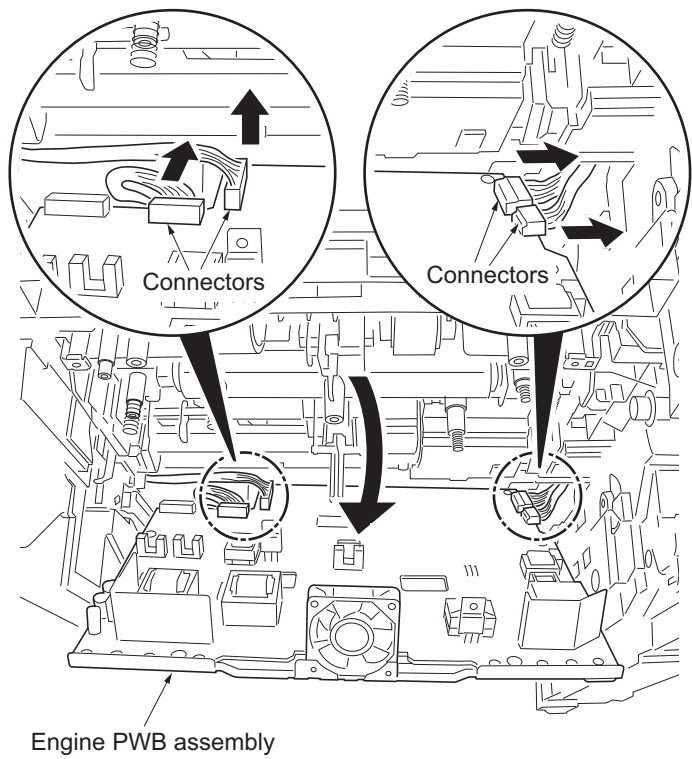


Figure 1-5-40



## (2) Detaching and refitting the main PWB

### Procedure

1. Remove the right cover.  
(See page 1-5-3)
2. Remove the screw.
3. Remove the connector of the controller fan motor and then remove the memory slot cover.

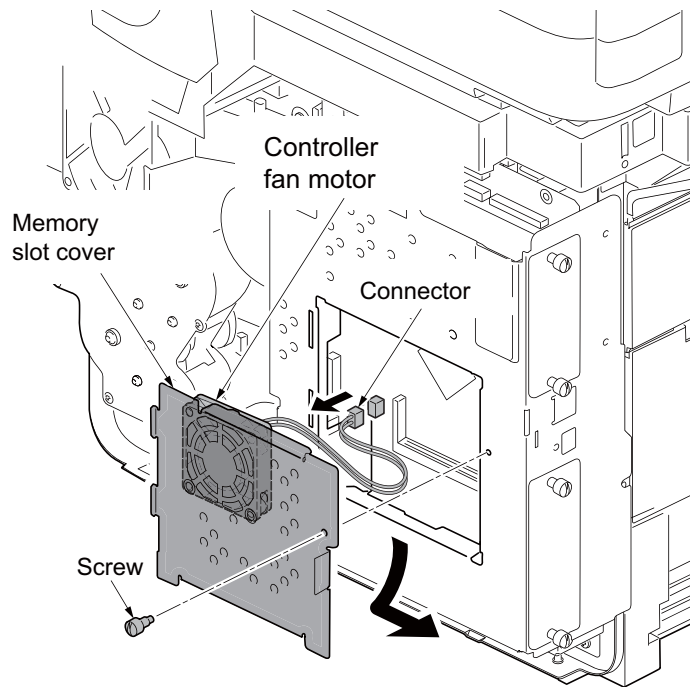


Figure 1-5-42

4. Remove the electrical wires from the three wire saddles.

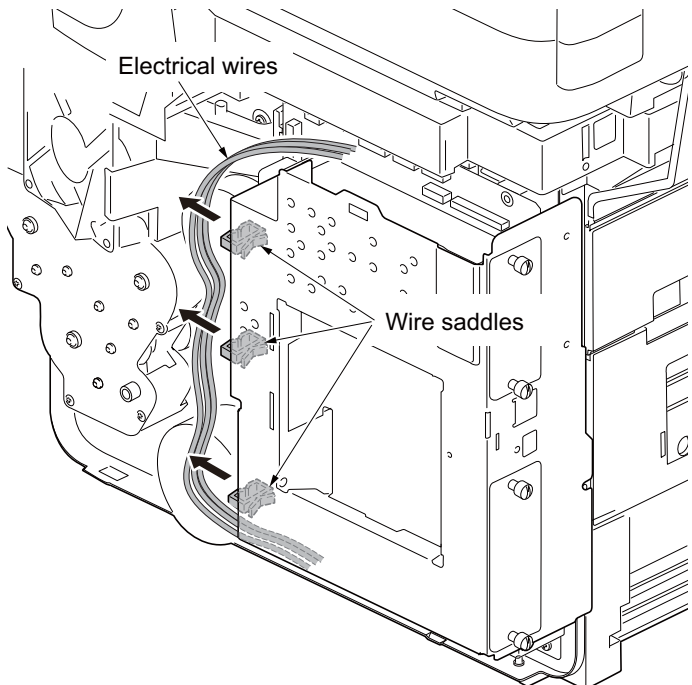


Figure 1-5-43

- 5. Draw the rear unit.
- 6. Remove seven screws and then remove the controller box.

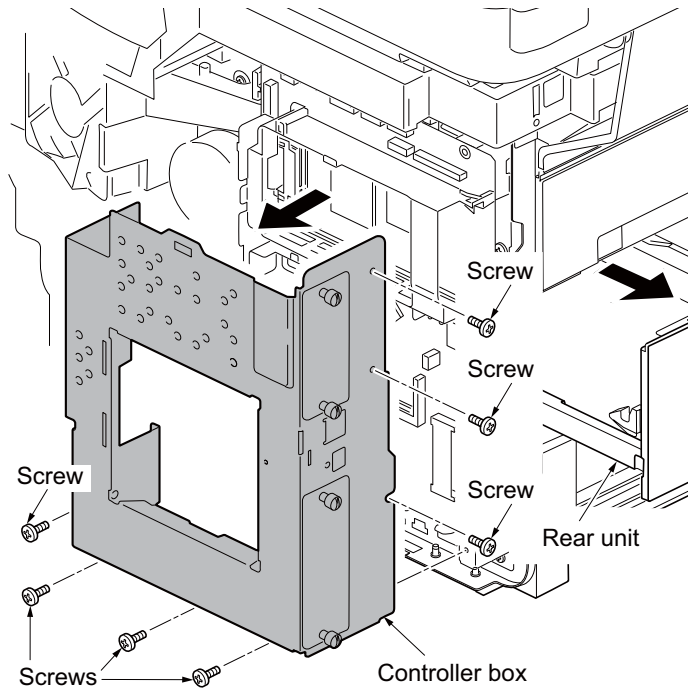


Figure 1-5-44



7. Remove fourteen connectors from the main PWB.
8. Remove six screws and then remove the main PWB.
9. Check or replace the main PWB and refit all the removed parts.

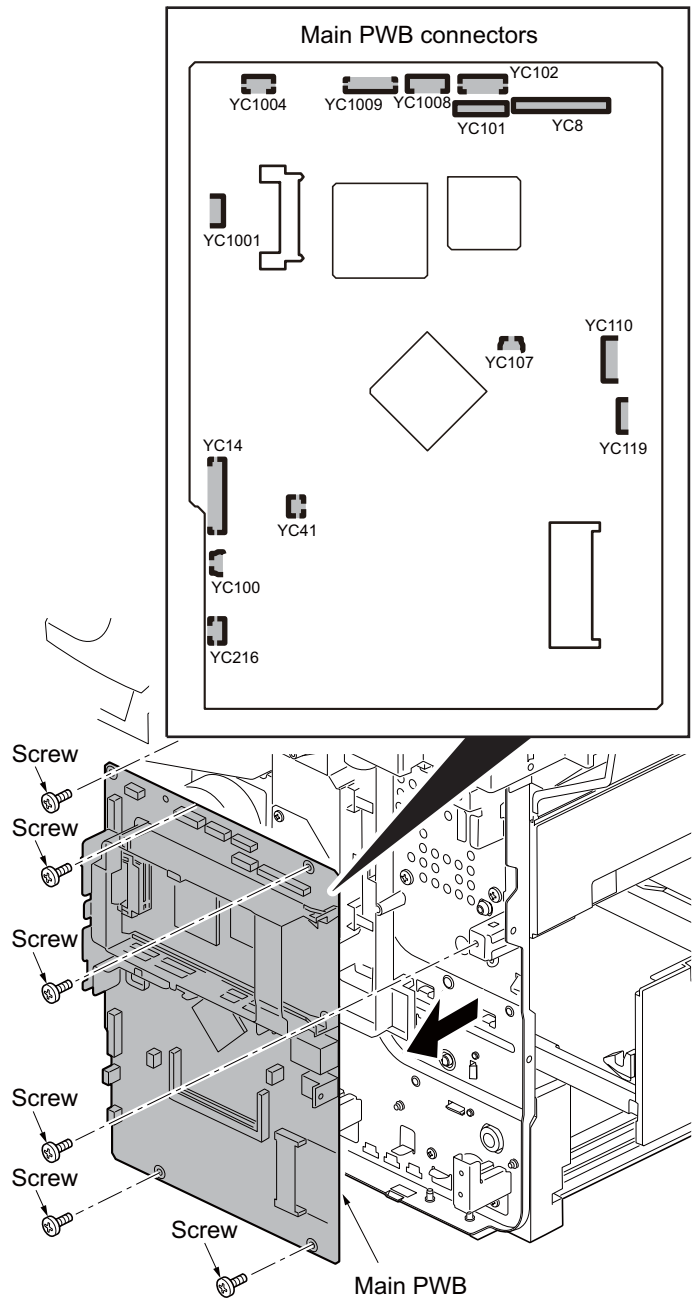


Figure 1-5-45

### (3) Detaching and refitting the power source PWB

#### Procedure

1. Remove the right cover and left cover.  
(See page 1-5-3)
2. Remove the drum unit.  
(See page 1-5-20)
3. Remove three connectors from the relay PWB.
4. Release three clamps and then remove the wires.

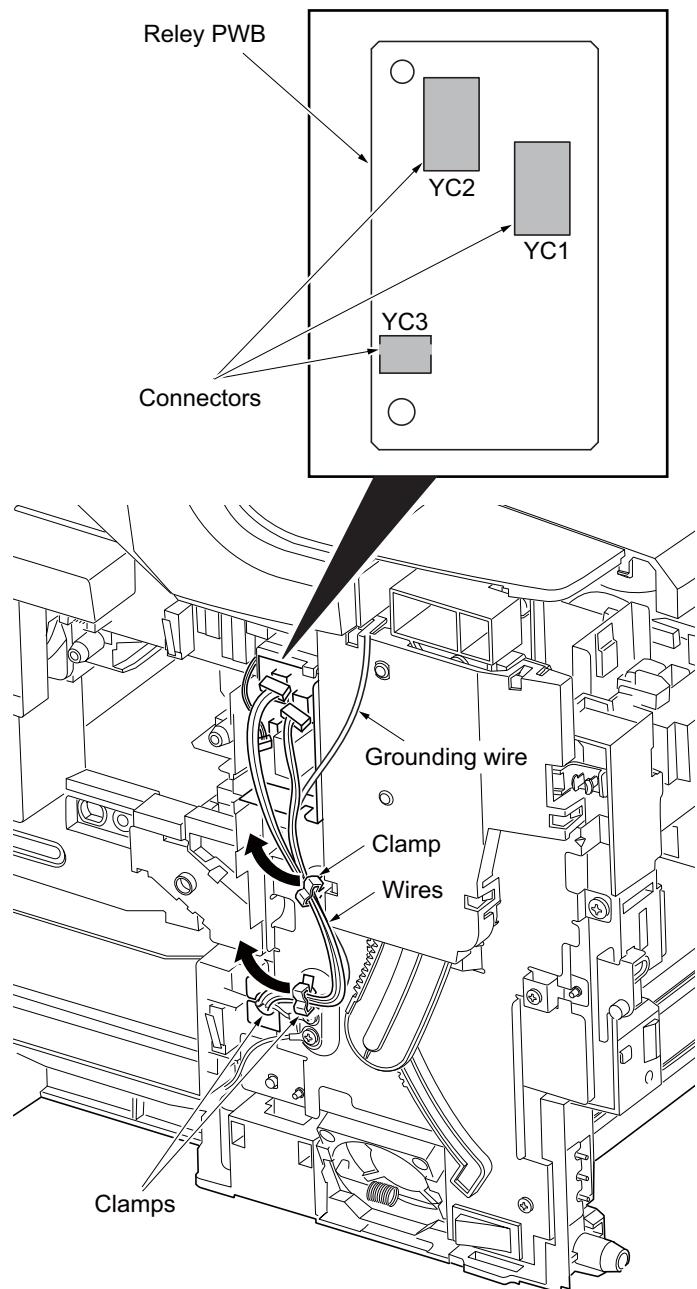


Figure 1-5-46

5. Unhook five hooks and then remove the rack cover.
6. Remove the one screw and then remove upper cover rack.
7. Remove the gear and front cover rack each.
8. Unhook two hooks and then remove the gear holder by pulling upwards.

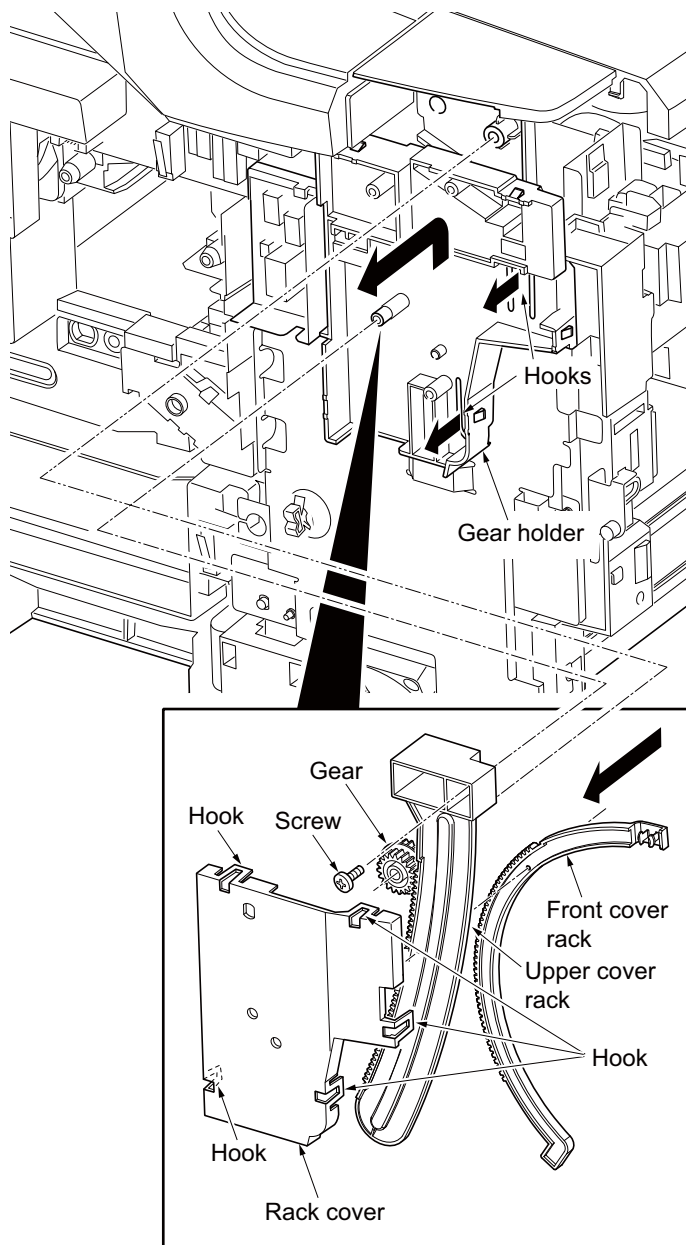


Figure 1-5-47

9. Remove one connector (YC11) from the connect-L PWB.
10. Remove the wire from the drum grounding plate and clamp.
11. Release two hooks and then remove the power source fan motor.



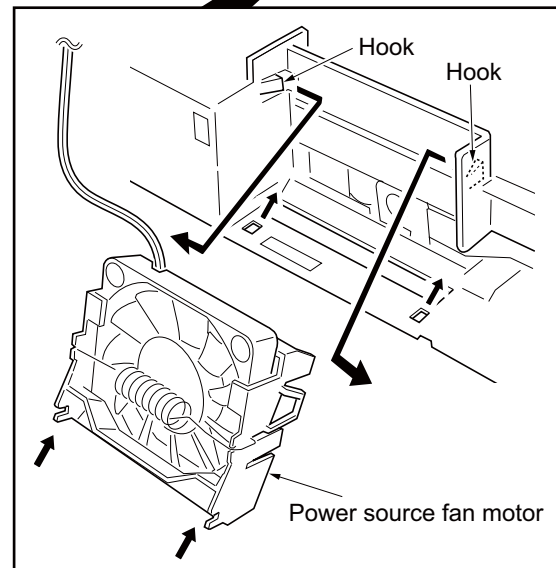



Figure 1-5-48

12. Remove seven screws-A and drum grounding plate and two grounding terminals.
13. Remove the AC inlet.

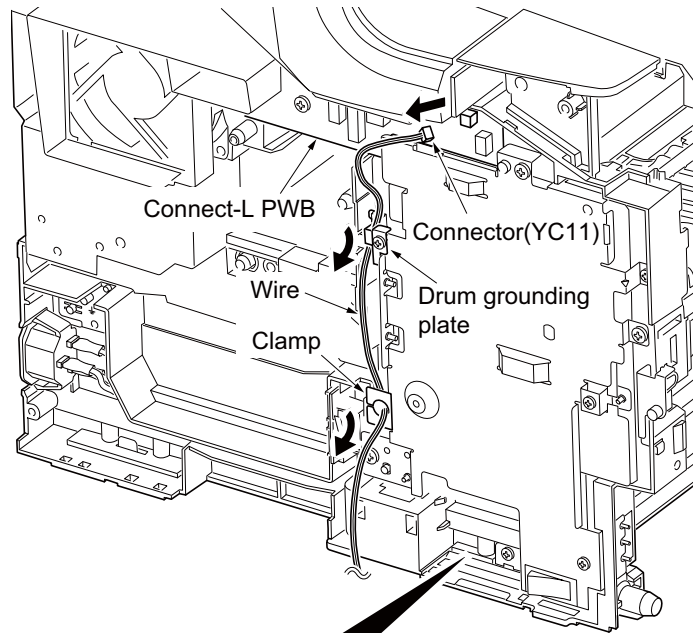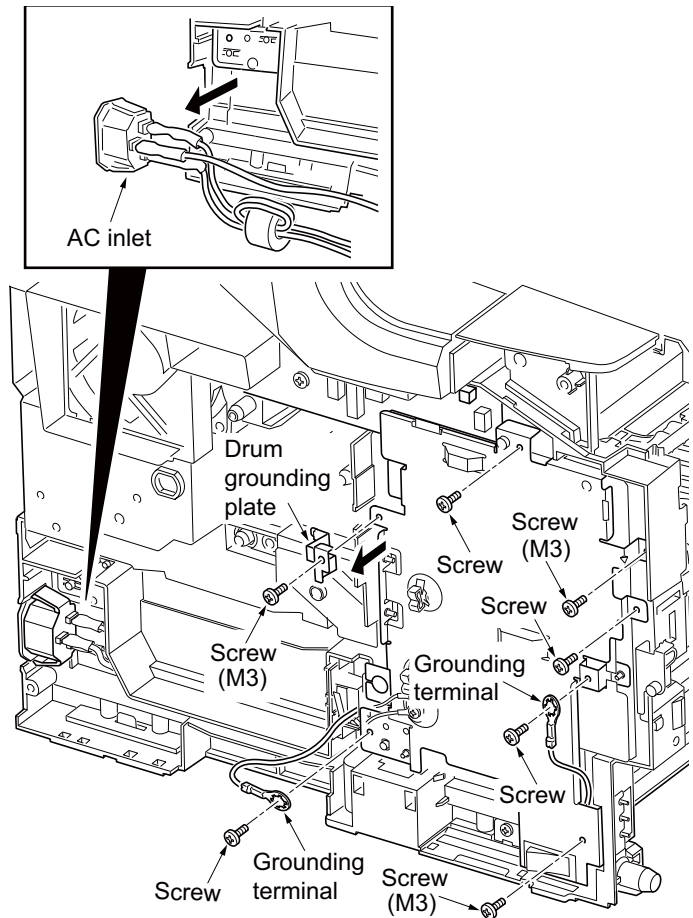

**Figure 1-5-49**

14. Remove two screws and three grounding terminals.
15. Remove one connector.
16. Remove the PWB connector between connect-L PWB and power source unit.
17. Remove the power source unit.

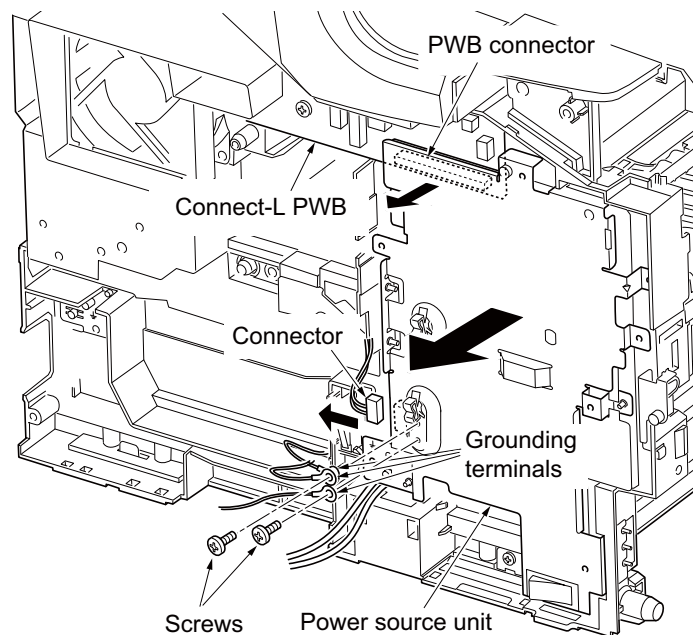


**Figure 1-5-50**


18. Remove one connector.
19. Remove seven screws and then remove the power source PWB.
20. Check or replace the power source PWB and refit all the removed parts.

**Note:**

While assembling the rack component, align the guiding holes on either the upper cover rack and the front cover rack with each other.

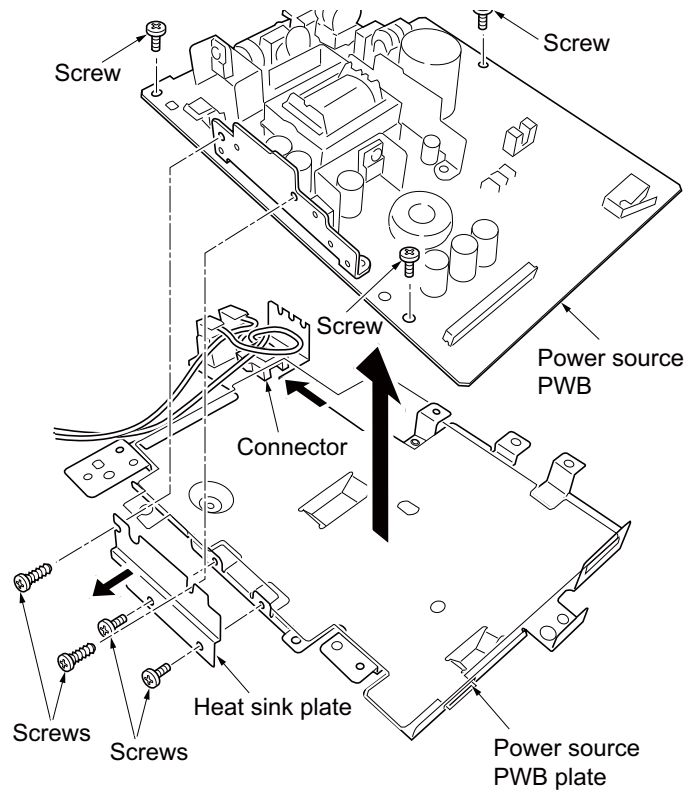

**Figure 1-5-51**

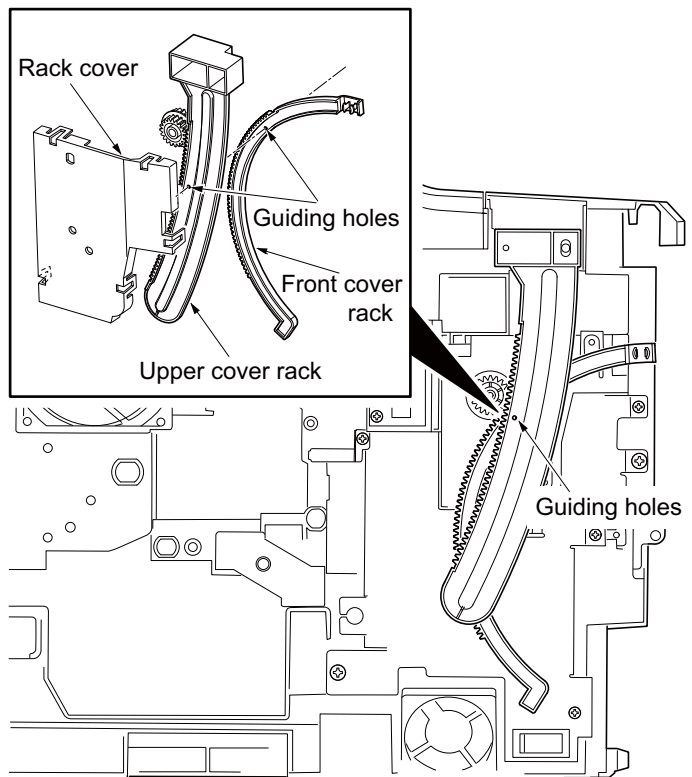

**Figure 1-5-52**

#### (4) Detaching and refitting the FAX control PWB

##### Procedure

1. Remove two screws and then remove the FAX control PWB.
2. Check or replace the FAX control PWB and refit all the removed parts.

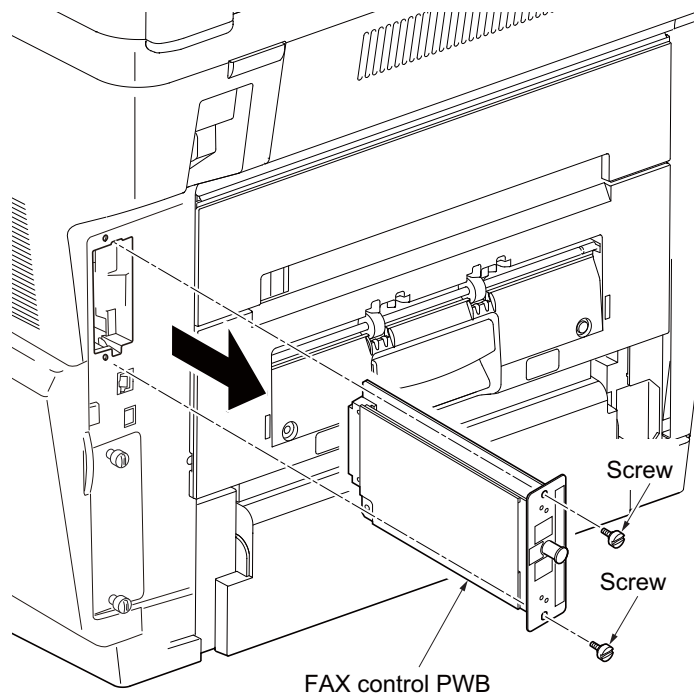


Figure 1-5-53

## 1-5-10 Others

### (1) Detaching and refitting the paper feed drive unit

#### Procedure

1. Remove the cassette.  
(See page 1-5-6)
2. Remove the developing unit.  
(See page 1-5-19)
3. Remove the right cover.  
(See page 1-5-3)
4. Remove five connectors from the connect-R PWB.
5. While opening the one hook and then remove the wire.
6. While opening three hooks and then remove the right fan motor.

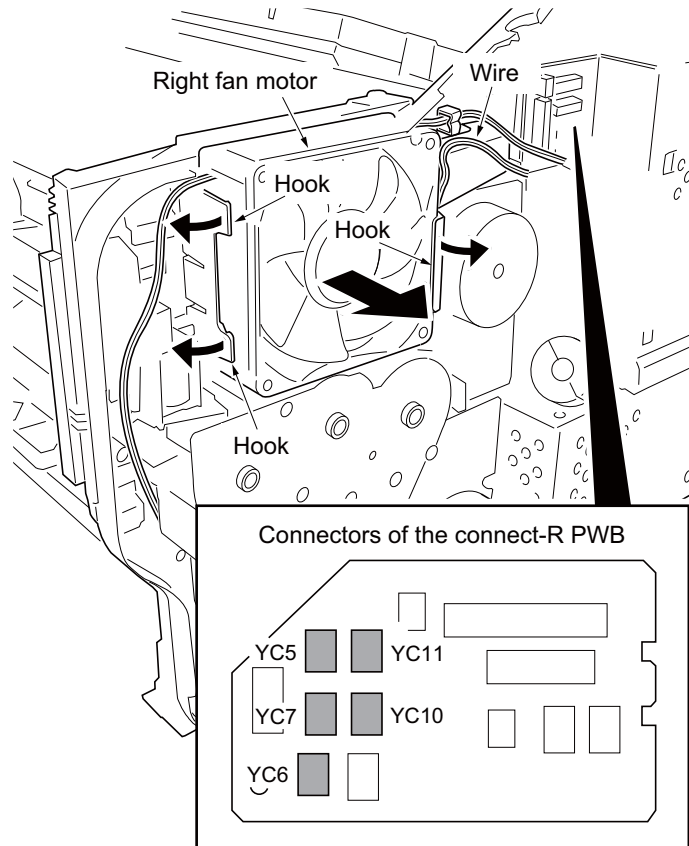


Figure 1-5-54

7. Remove two hooks and then remove the duct.
8. Remove wire from the clamp.


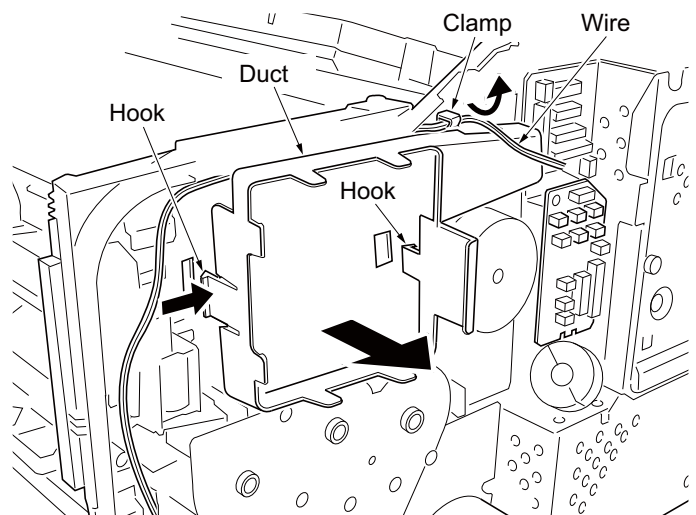


Figure 1-5-55

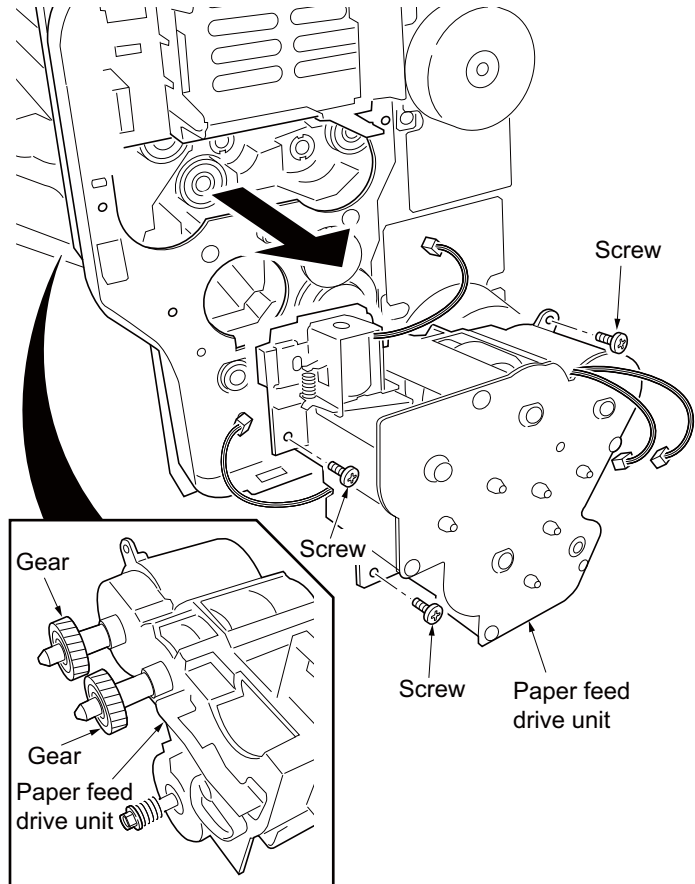

9. Remove three screws and then remove the paper feed drive unit.
10. Check or replace the paper feed drive unit and refit all the removed parts.  
To refit the paper feed drive unit, make sure mesh of gears.

**Figure 1-5-56**

## (2) Detaching and refitting the main drive unit

### Procedure

1. Remove the right cover.  
(See page 1-5-3)
2. Remove the controller box.  
(See page 1-5-28)
3. Remove two connectors.
4. Remove five screws and then remove the main drive unit.
5. Check or replace the main drive unit and refit all the removed parts.


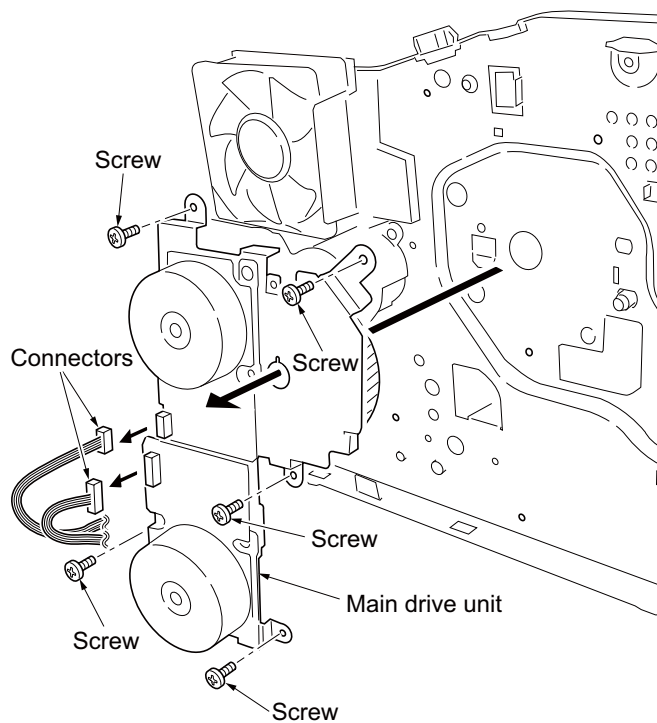


Figure 1-5-57

### (3) Direction of installing the principal fan motors

When detaching or refitting the left fan motor or right fan motor or controller fan motor, be careful of the airflow direction (intake or exhaust).

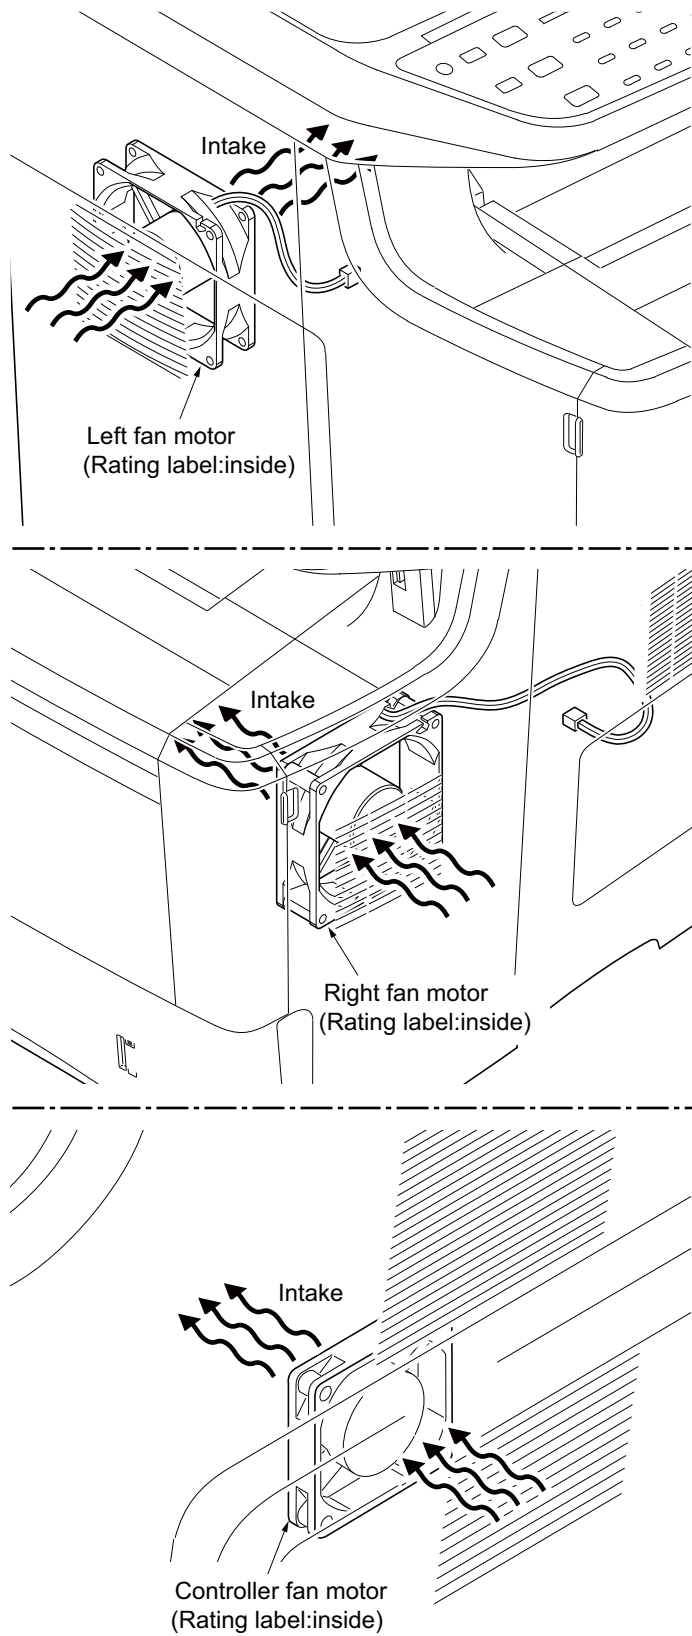

**Figure 1-5-58**

## 1-5-11 Document processor

### (1) Detaching and refitting the DP rear cover and DP front cover

#### Procedure

1. Open the DP top cover.
2. Remove two screws.
3. Unhook the hook and then remove the DP rear cover.

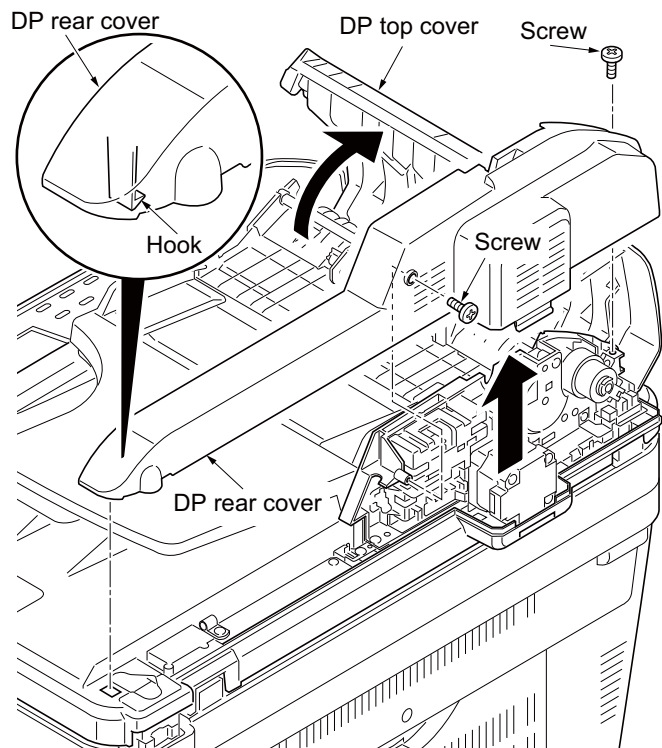


Figure 1-5-59

4. Unhook two hooks and then remove the DP front cover.

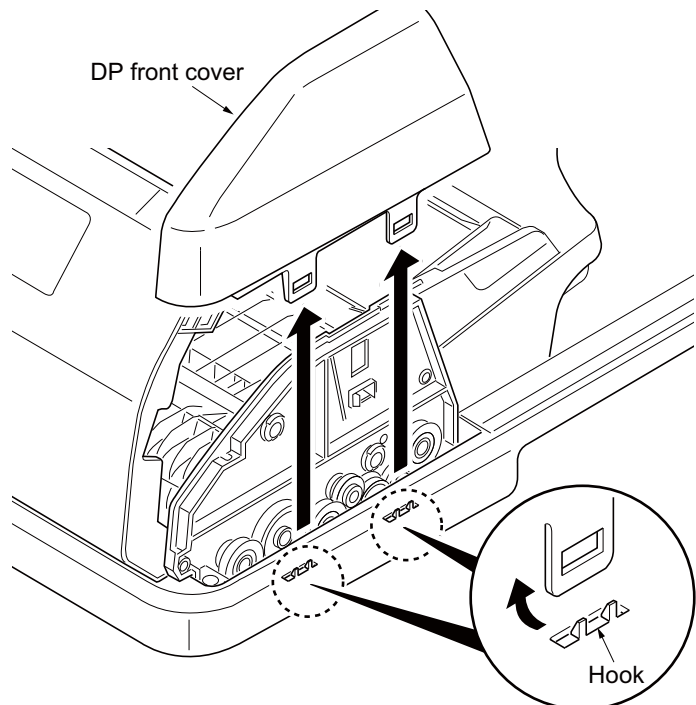


Figure 1-5-60

## (2) Detaching and refitting the DP drive PWB

Follow the procedure below to check or replace the DP drive PWB.

### Procedure

1. Remove the DP rear cover.  
(See page 1-5-41).
2. Remove seven connectors from the DP drive PWB.
3. Remove the screw and then remove the DP drive PWB.
4. Check or replace the DP drive PWB.  
Refit all the removed parts.

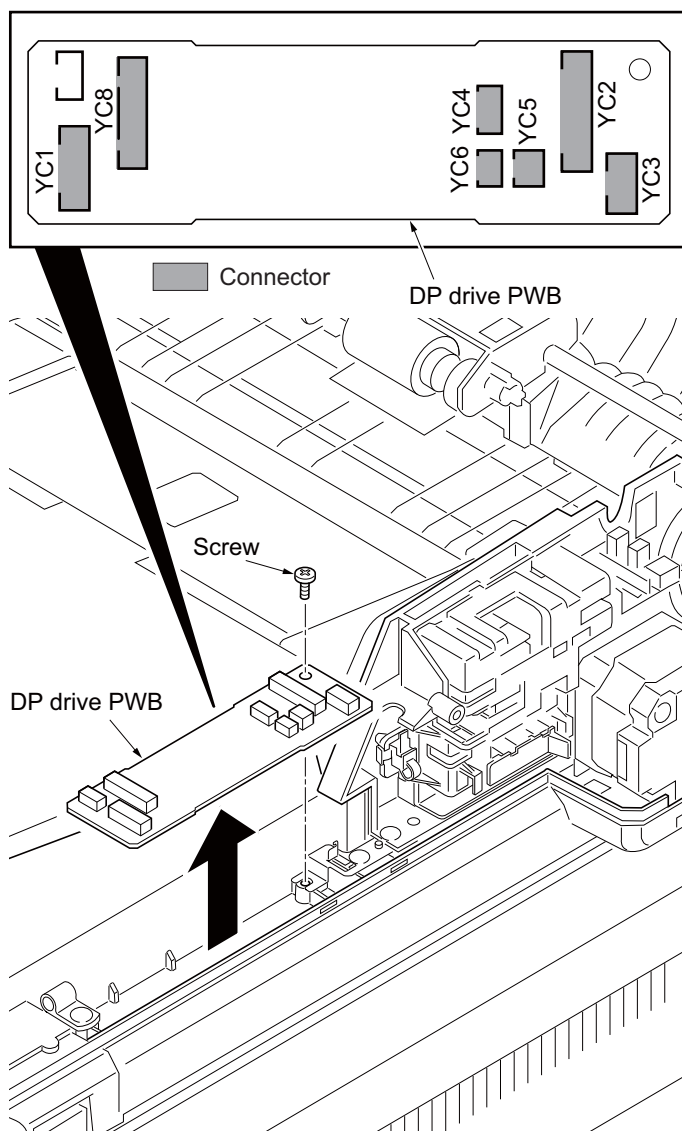


Figure 1-5-61

### (3) Detaching and refitting the DP forwarding pulley assembly and DP separation pad assembly.

#### Procedure

1. Open the DP top cover.
2. Unlatch the lock lever and slide the shaft.

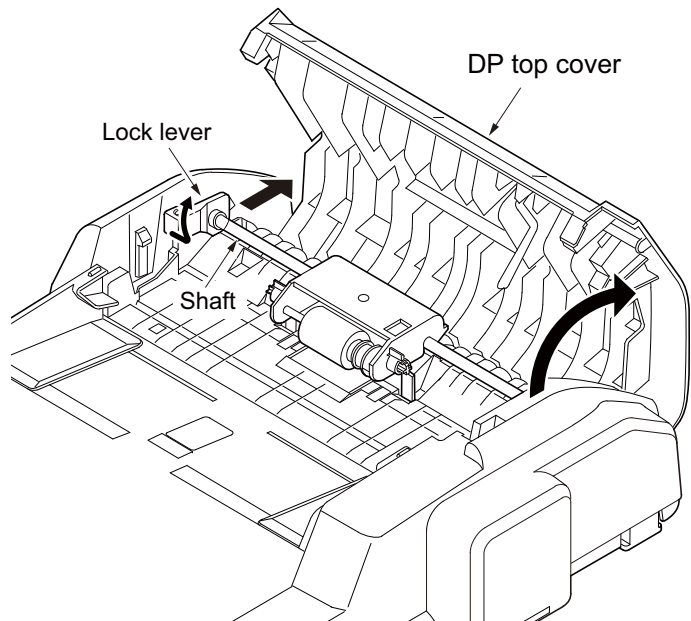


Figure 1-5-62

3. Remove the DP forwarding pulley assembly.


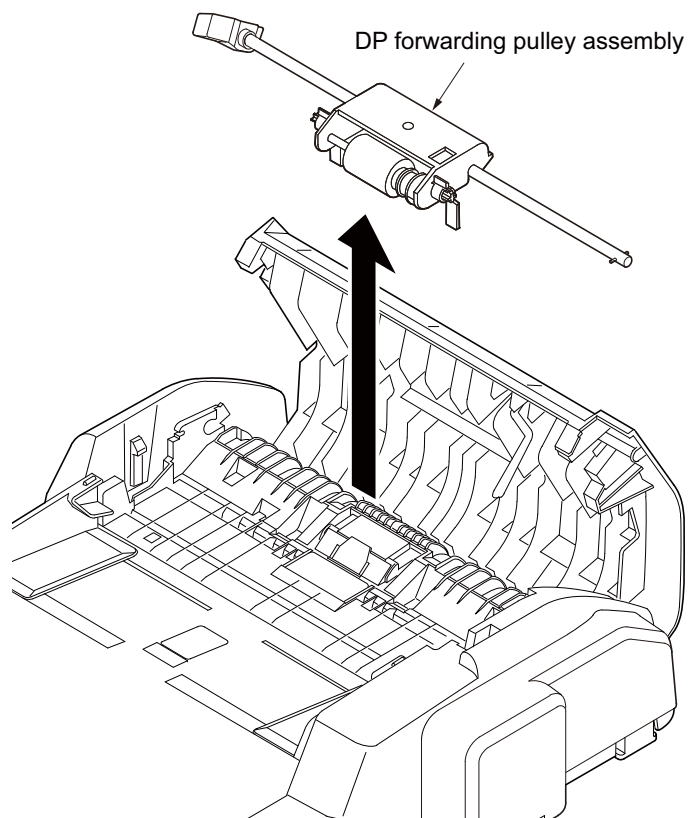


Figure 1-5-63

4. Unhook two hooks and remove the DP separation pad assembly.
  5. Check or replace the DP forwarding pulley assembly and DP separation pad assembly.
- Refit all the removed parts.

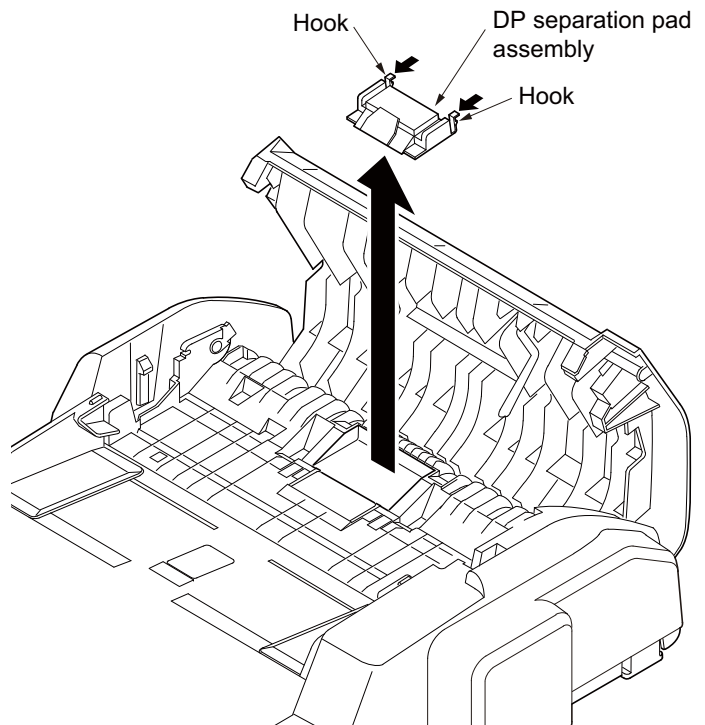

**Figure 1-5-64**

## 1-6-1 Upgrading the firmware

Follow the procedure below to upgrade the firmware of main PWB (main controller and scanner) and engine PWB and FAC control PWB and Option language.

### Preparation

Extract the file that has the download firmware and put them in the USB Memory.

### Procedure

1. Turn ON the main power switch and confirm if the screen shows "Ready to print" then, turn OFF the main power switch.
2. Insert USB memory that has the firm-ware in the USB memory slot.
3. Turn ON the main power switch.
4. About 40 seconds later, "FW-Update" will be displayed and blinking the data LED (this shows to start the download).
5. Display the software that now upgrad-ing.

"FW-Update [CTRL]"

"FW-Update [ENGIN]"

"FW-Update [SCAN]"

"FW-Update [FAX ]"

"FW-Update [OPT ]"

6. Display the completion of the upgrade (Data LED is ON condition).
7. ROM version is confirmed by the con-tent of the display.
8. Turn OFF the main power switch and remove the USB memory.


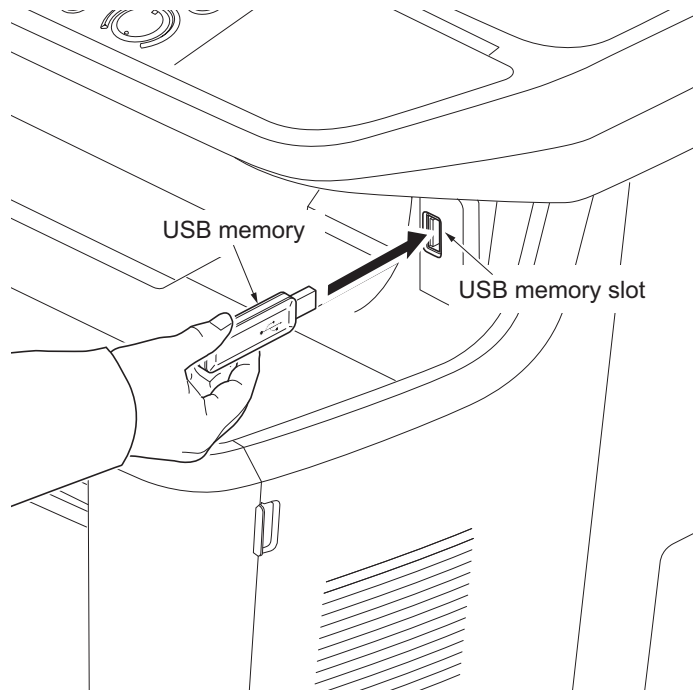


Figure 1-6-1



## 1-6-2 Remarks on engine PWB replacement

When replacing the engine PWB, remove the EEPROM (U7) from the engine PWB that has been removed and then reattach it to the new engine PWB.

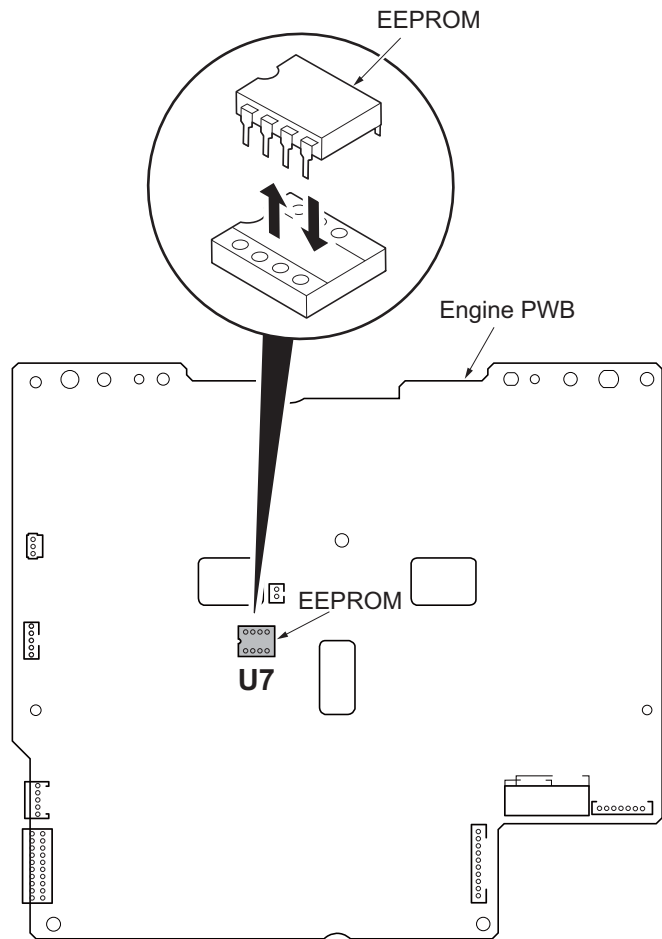

## 2-1-1 Paper feed/conveying section

Paper feed/conveying section consists of the paper feed unit that feeds paper from the cassette and the MP tray paper feed unit that feeds paper from the MP tray, and the paper conveying section that conveys the fed paper to the transfer/separation section.

### (1) Cassette paper feed section

Paper cassette is the universal type that is applicable to various paper sizes by adjusting the side guides and paper stopper and approximate 500 pages can be put in. Mechanism in the paper cassette consists of the bottom plate that lifts the paper in order to let it touch the pickup roller and the retard roller that prevents papers from multiple feeding. Paper that is drawn out by the rotation of pickup roller of the cassette paper feed section is then sent in between the feed roller and the retard roller. Function of the built-in torque limiter in the retard roller gives weak resistance force against the rotation. Normally, when only a page is drawn out by the rotation of pickup roller, the paper is conveyed to the machine by the rotation of feed roller on its own. If the pickup roller drew out two lapped pages somehow, the upper paper is conveyed by the feed roller and the lower paper stays due to the rotation resistant force of the retard roller because the friction force between papers is smaller than the rotation resistance force of the retard roller and then the multiple paper feed can be prevented.

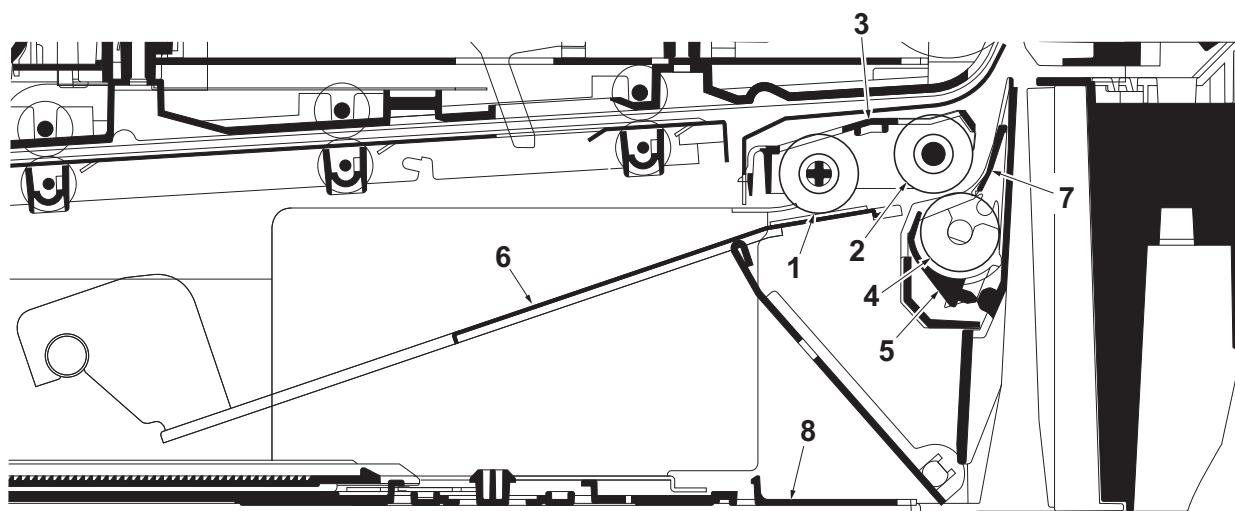


Figure 2-1-1 Cassette paper feed section

- |                      |                  |
|----------------------|------------------|
| 1. Pickup roller     | 5. Retard holder |
| 2. Paper feed roller | 6. Bottom plate  |
| 3. Feed holder       | 7. Retard guide  |
| 4. Retard roller     | 8. Cassette base |


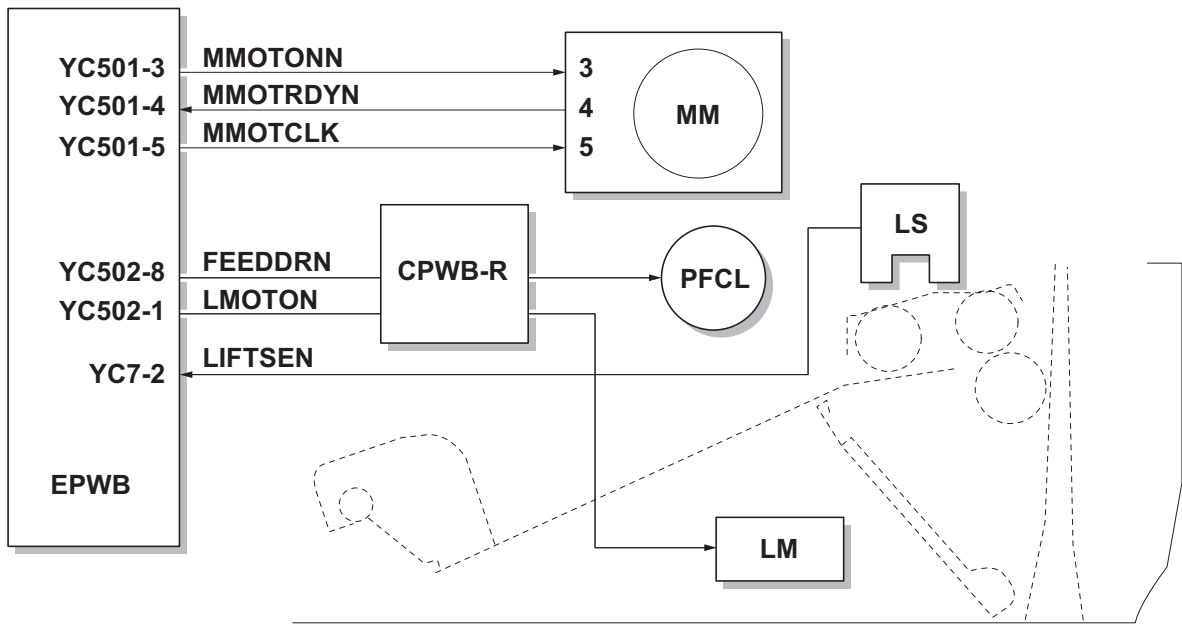


Figure 2-1-2 Cassette paper feed section block diagram


**(2) MP tray paper feed section**

The MP tray can contain about 100 pages. Feeding is performed by the rotation of the MP tray feed roller from the MP tray. Function of the MP tray friction pad prevents papers from multiple feeding.

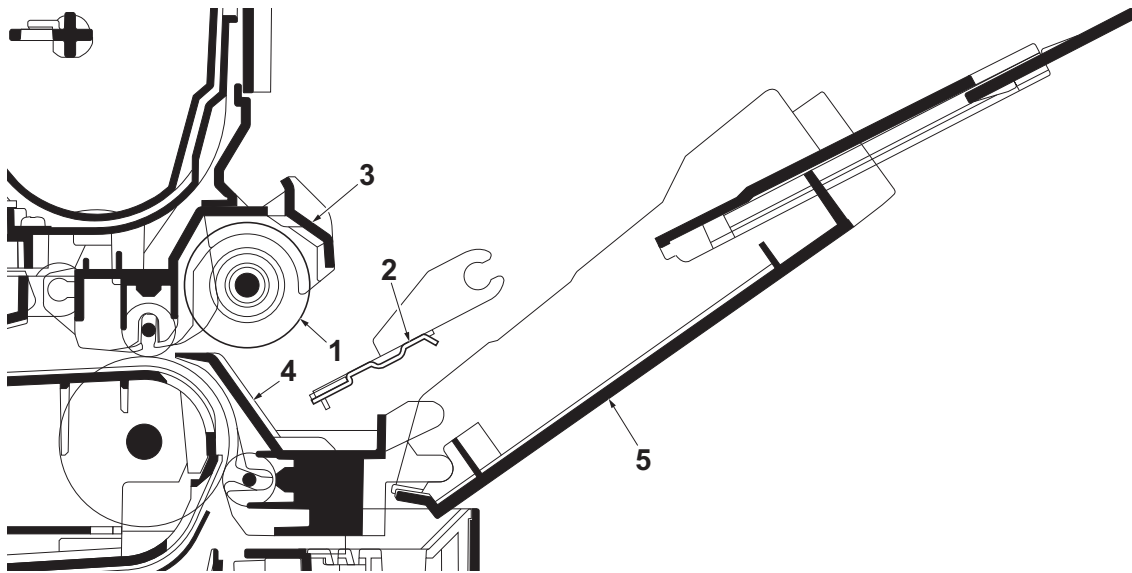

**Figure 2-1-3 MP tray paper feed section**

- 1. MP paper feed roller
- 2. Bottom plate
- 3. MP tray frame
- 4. MPF base
- 5. MP tray cover

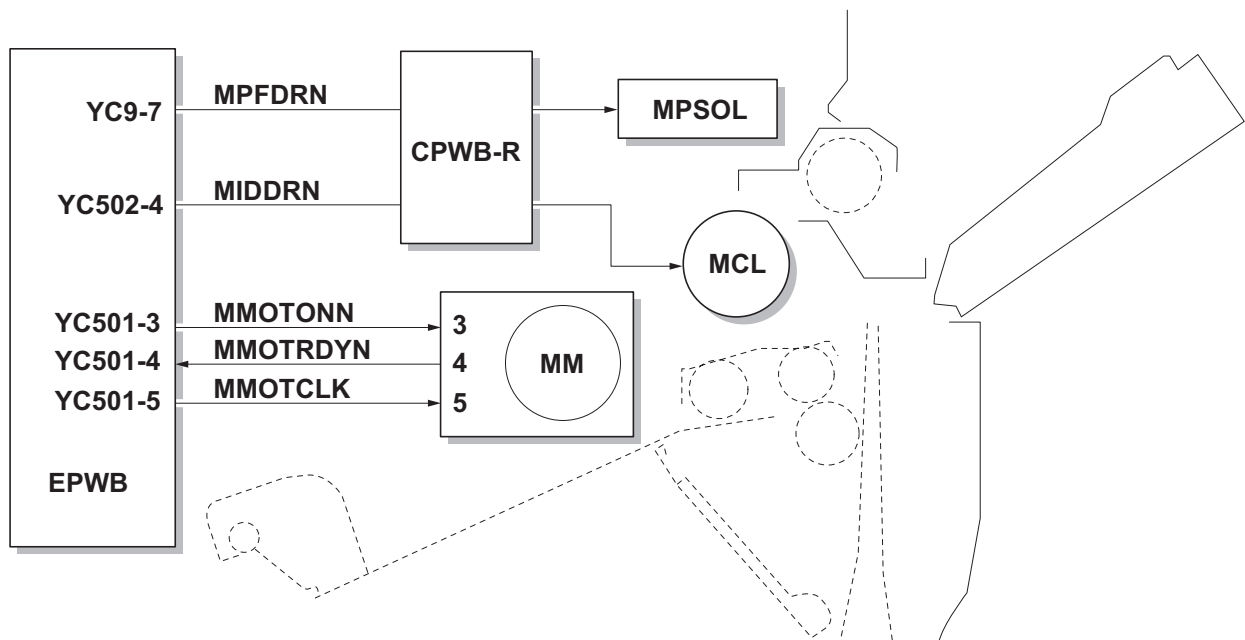

**Figure 2-1-4 MP tray paper feed section block diagram**

### (3) Paper conveying section

Paper conveying section consists of the parts shown in the following illustration and conveys papers from the paper cassette or the MP tray to the transfer/separation section when papers are fed. Paper by feeding or refeeding is conveyed by the middle roller to the position where the registration sensor (RS) is turned on, and then sent to the transfer/separation section by the upper registration roller and lower registration roller.

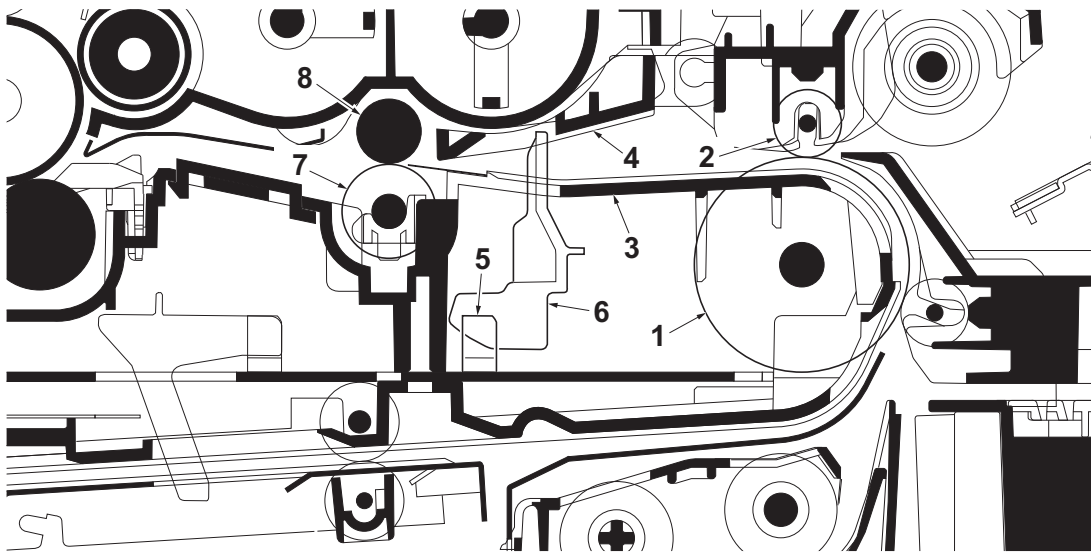


Figure 2-1-5 Paper conveying section

- |                             |                                   |
|-----------------------------|-----------------------------------|
| 1. Middle roller            | 5. Registration sensor (RS)       |
| 2. Feed DU pulley           | 6. Actuator (registration sensor) |
| 3. Feed frame               | 7. Lower registration roller      |
| 4. Registration upper guide | 8. Upper registration roller      |

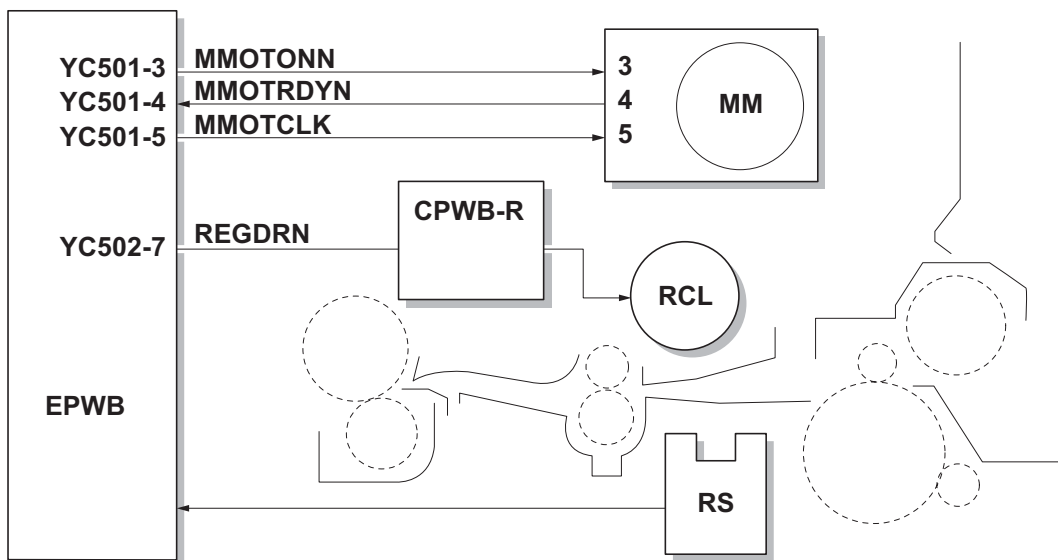


Figure 2-1-6 Paper conveying section block diagram

## 2-1-2 Drum section

The drum unit includes a photoconductive drum, eraser lamp, cleaning blade and, a main charger unit. The drum unit is removable with the main charger unit.

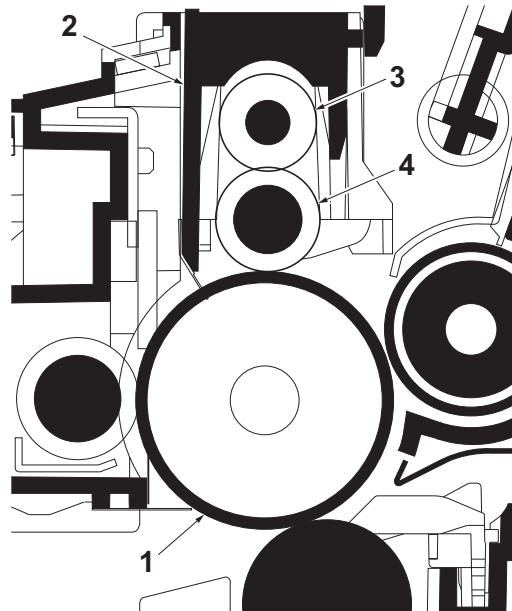


Figure 2-1-7 Drum section

1. Drum
2. Main charger case
3. Charger cleaning roller
4. Main charger roller

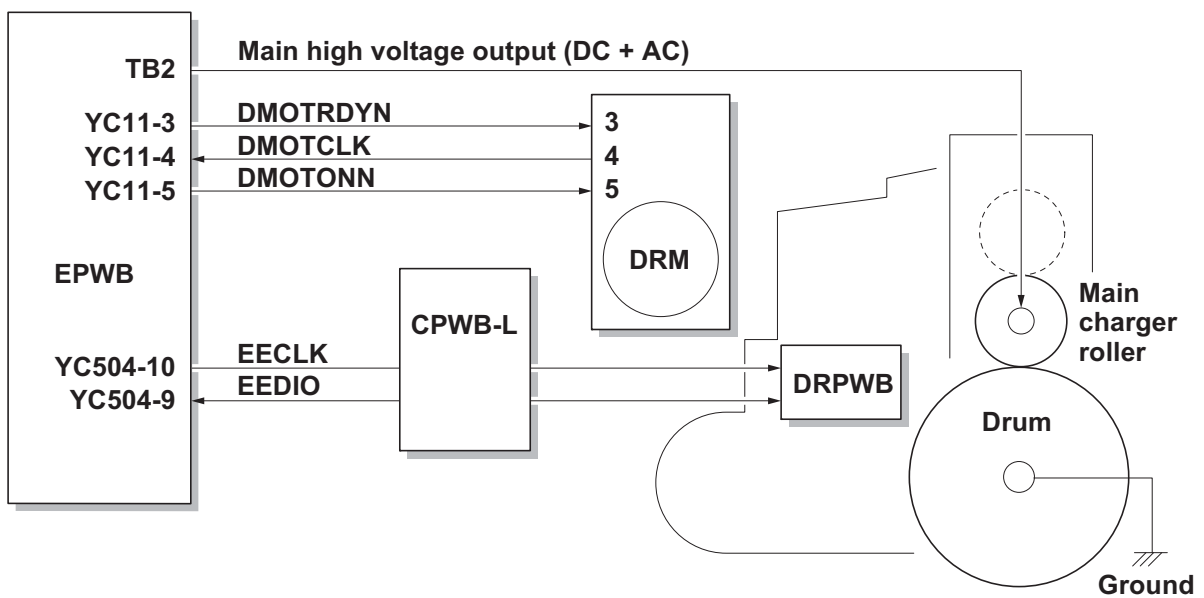


Figure 2-1-8 Drum section block diagram

## 2-1-3 Optical section

### (1) Scanner unit

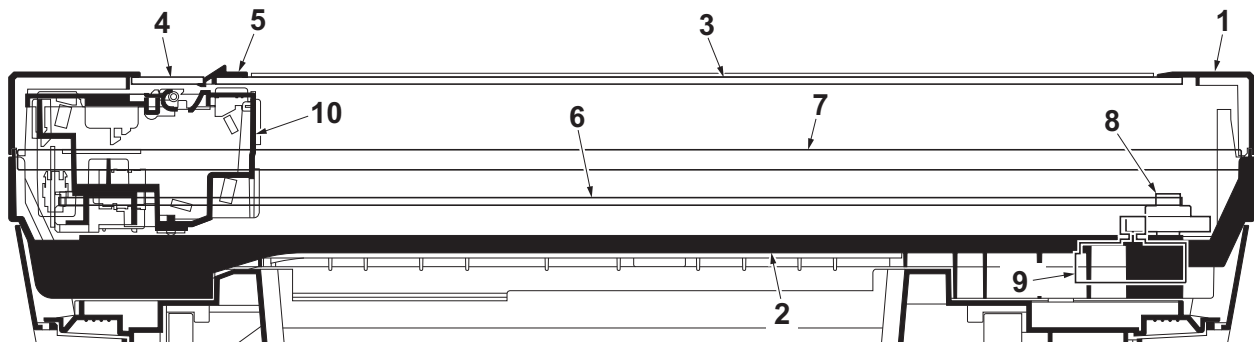


Figure 2-1-9 Scanner unit

- |                         |                              |
|-------------------------|------------------------------|
| 1. ISU top frame        | 6. ISU belt                  |
| 2. ISU bottom frame     | 7. ISU shaft                 |
| 3. Contact glass        | 8. ISU gear 63/32            |
| 4. DP contact glass     | 9. ISU motor                 |
| 5. Size indicator plate | 10. Image scanner unit (ISU) |

## (2) Image scanner unit (ISU)

The original image is illuminated by the LED and scanned by the CCD image sensor in the CCD PWB (CCD-PWB) via the four mirrors and ISU lens, the reflected light being converted to an electrical signal.

If a document processor (DP) is used, the image scanner unit stops at the position of the DP contact glass and scans sequentially one row of the image on the original in synchronization with the moving timing of the original in the sub scan direction by driving the DP.

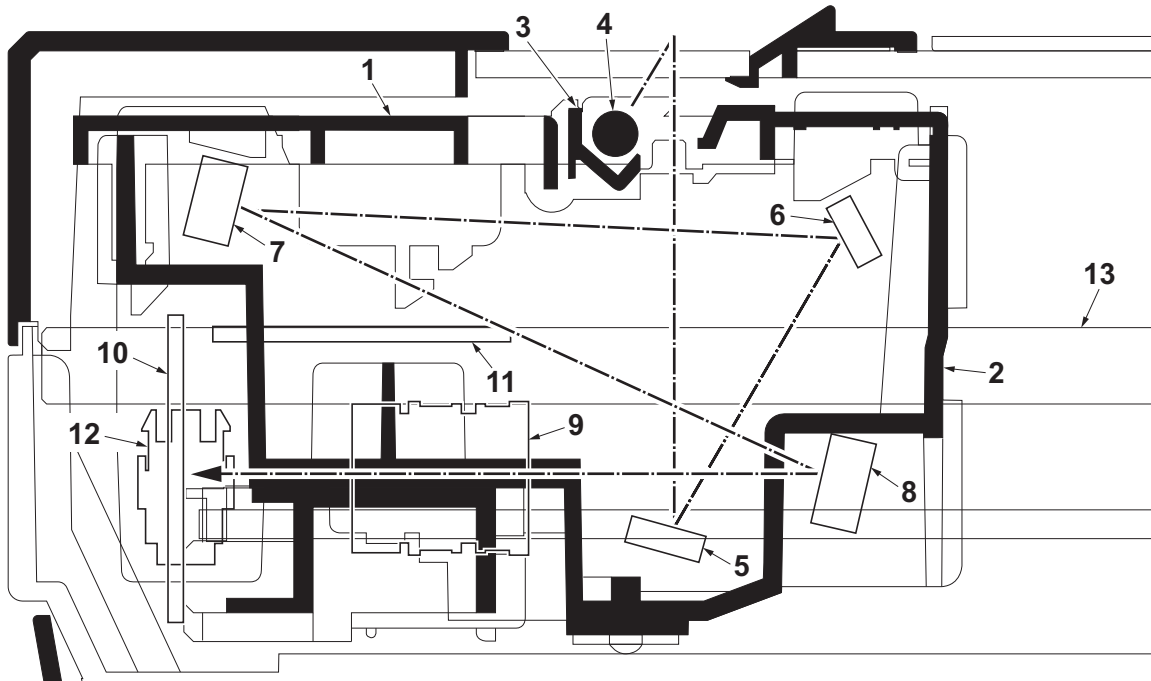


Figure 2-1-10 Image scanner unit (ISU)

- |                         |                                |
|-------------------------|--------------------------------|
| 1. Lamp mount           | 8. Mirror D                    |
| 2. ISU housing          | 9. ISU lens                    |
| 3. ISU reflector        | 10. CCD PWB (CCDPWB)           |
| 4. Transparent material | 11. Inverter PWB (INPWB)       |
| 5. Mirror A             | 12. Home position sensor (HPS) |
| 6. Mirror B             | 13. ISU shaft                  |
| 7. Mirror C             |                                |



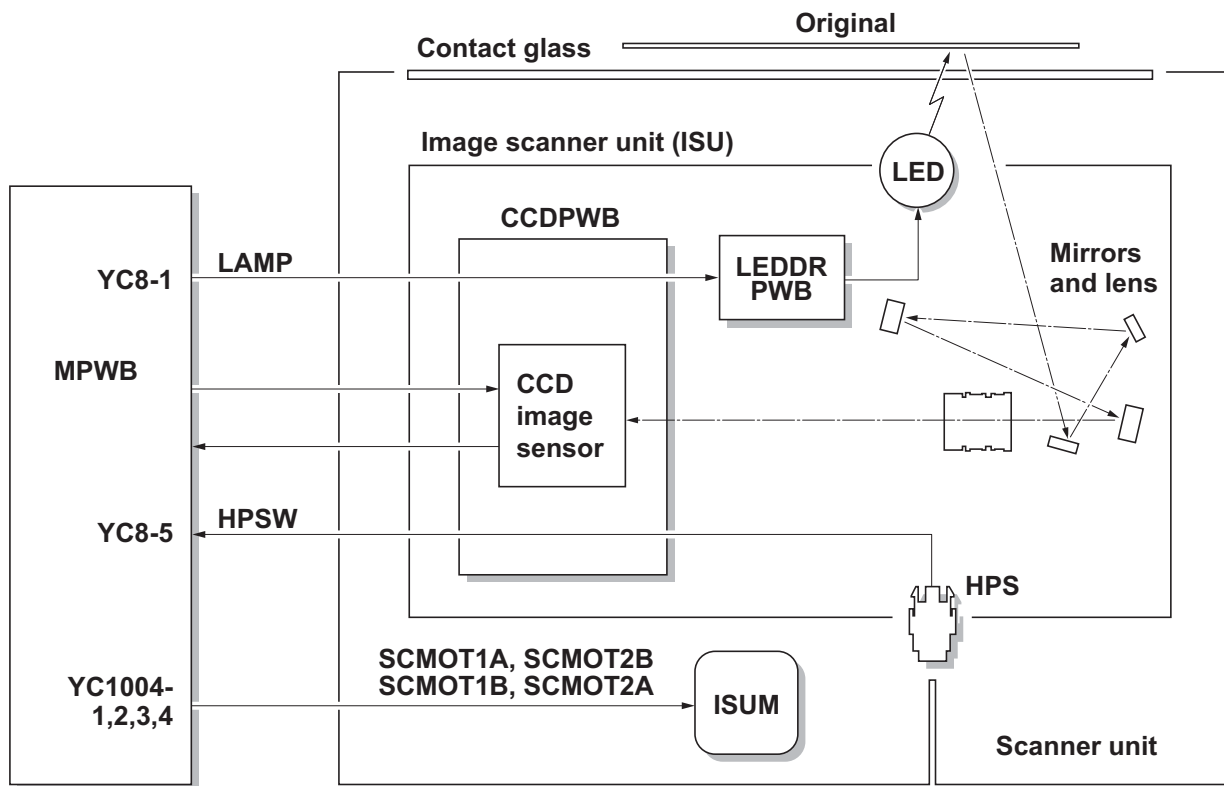


Figure 2-1-11 Scanner unit block diagram

### (3) Laser scanner unit

The charged surface of the drum is then scanned by the laser beam from the laser scanner unit. The laser beam is dispersed as the polygon motor (PM) revolves to reflect the laser beam over the drum. Various lenses and mirror are housed in the laser scanner unit, adjust the diameter of the laser beam, and focalize it at the drum surface.

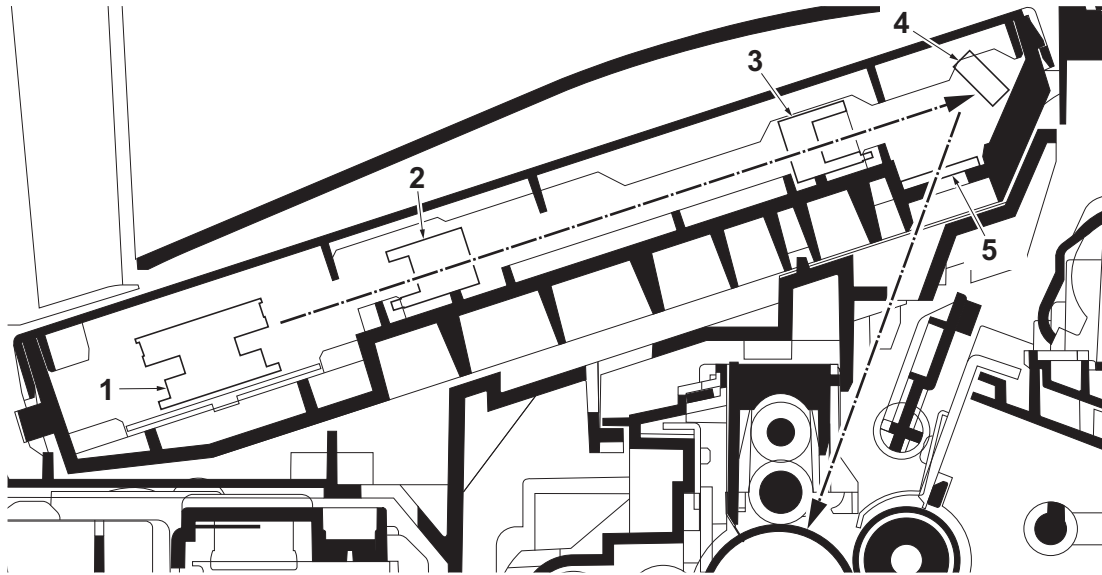


Figure 2-1-12 Laser scanner unit

1. Polygon motor (PM)
2. f- $\theta$  sub lens
3. f- $\theta$  main lens
4. Direction change mirror
5. Protective glass

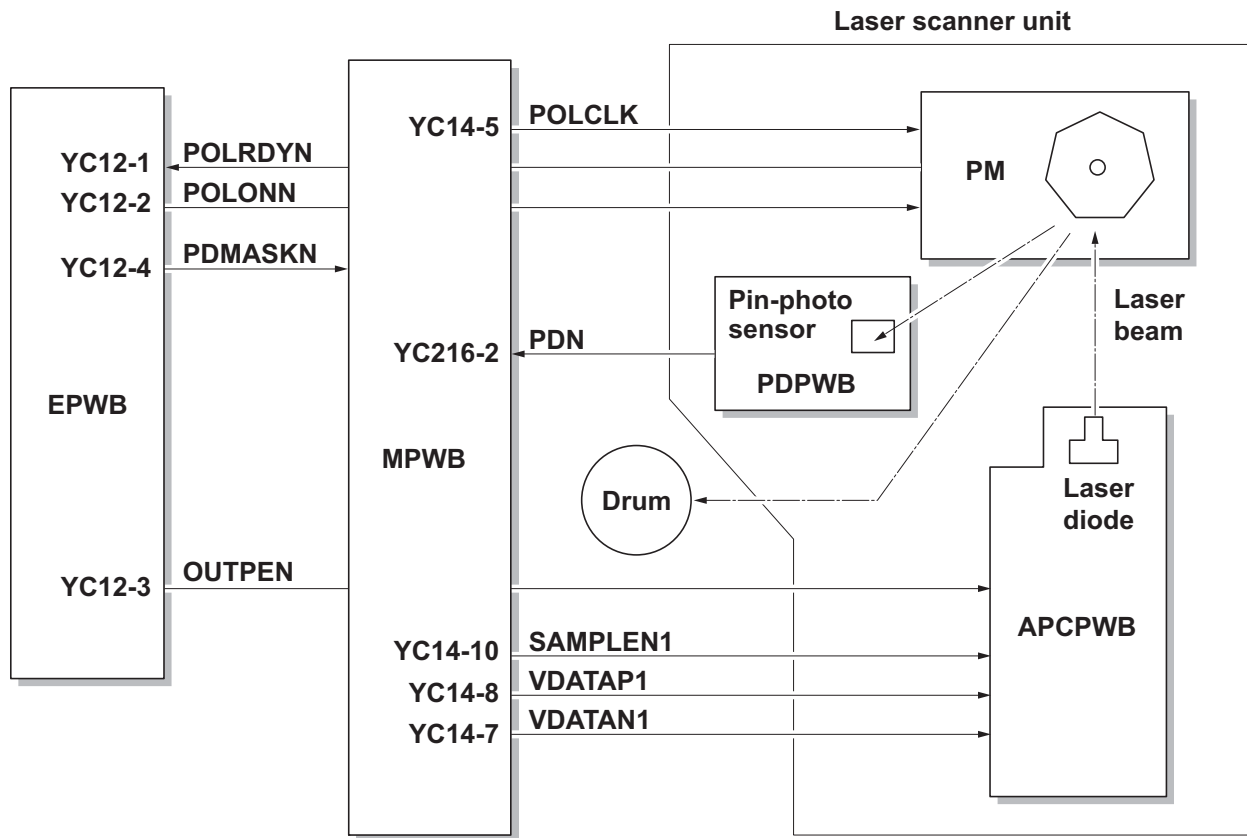


Figure 2-1-13 Laser scanner unit block diagram

## 2-1-4 Developing section

The latent image constituted on the drum is developed into a visible image. The developing roller contains a 3-pole (S-NS) magnet roller and an aluminum cylinder rotating around the magnet roller. Toner attracts to the magnet sleeve since it is powdery ink made of black resin bound to iron particles. Developing blade, magnetized by magnet, is positioned approximately 0.3 mm above the magnet sleeve to constitute a smooth layer of toner in accordance with the magnet sleeve revolution.

The developing roller is applied with the AC-weighted, positive DC power source. Toner on the magnet sleeve is given a positive charge. The positively charged toner is then attracted to the areas of the drum which was exposed to the laser light. (The gap between the drum and the magnet sleeve is approximately 0.32 mm.) The non-exposed areas of the drum repel the positively charged toner as these areas maintain the positive charge.

The developing roller is also AC-biased to ensure contrast in yielding by compensating the toner's attraction and repelling action during development.

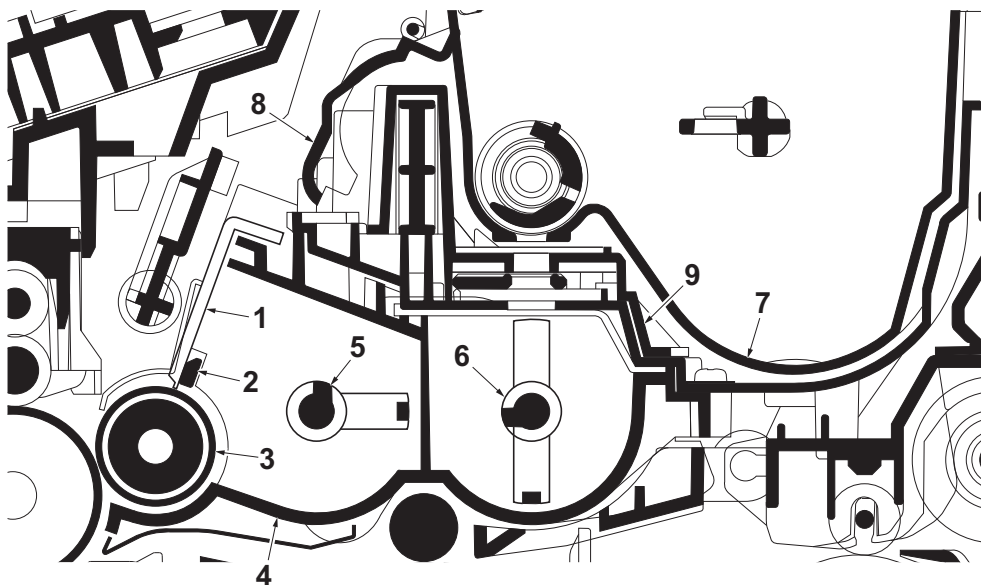


Figure 2-1-14 Developing section

- |                      |                    |
|----------------------|--------------------|
| 1. Developing blade  | 6. DLP screw B     |
| 2. Blade magnet      | 7. Toner container |
| 3. Developing roller | 8. Sleeve cover    |
| 4. Developer case    | 9. Developer lid   |
| 5. DLP screw A       |                    |


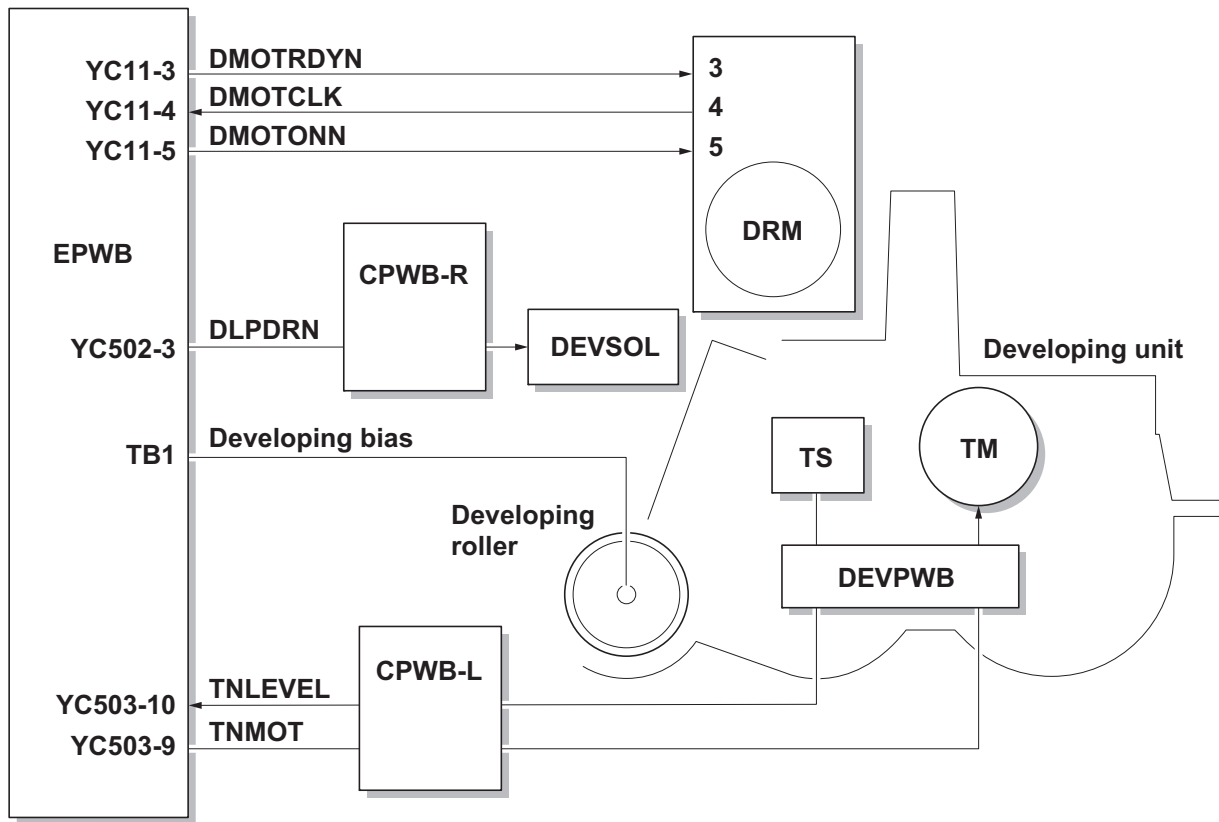


Figure 2-1-15 Developing section block diagram


## 2-1-5 Transfer/Separation section

The image developed by toner on the drum is transferred onto the paper because of the electrical attraction between the toner itself and the transfer roller. The transfer roller is negatively biased so that the positively charged toner is attracted onto the paper while it is pinched by the drum and the transfer roller.

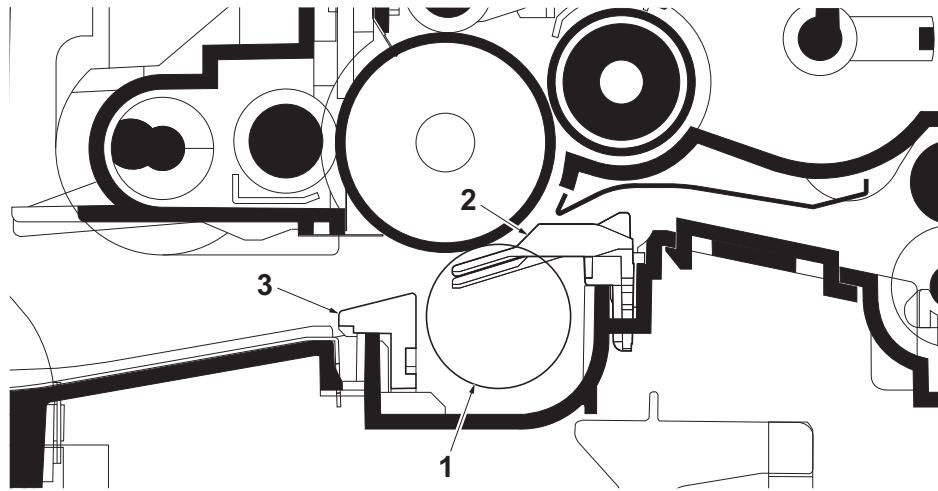

**Figure 2-1-16 Transfer/Separation section**

1. Transfer roller
2. Paper chute guide
3. Separation brush

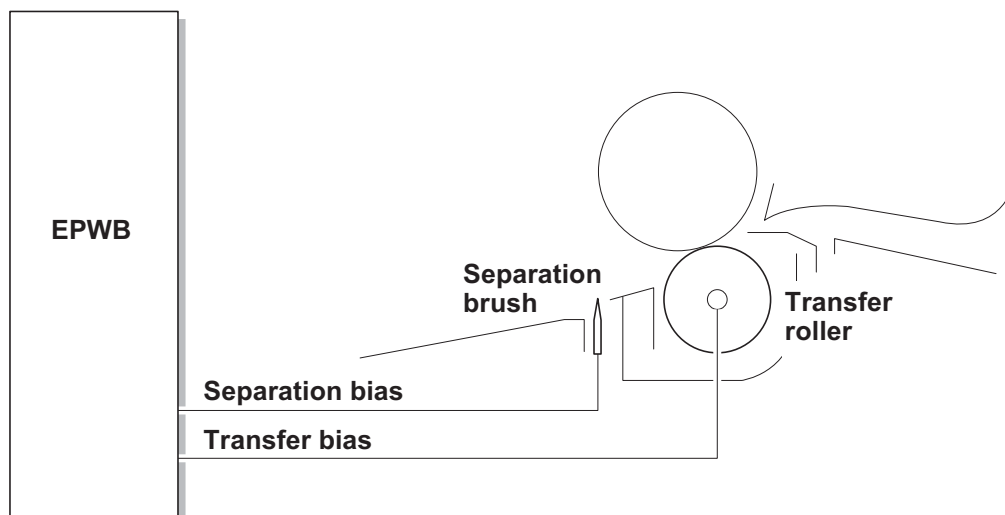


**Figure 2-1-17 Transfer/Separation section block diagram**

## 2-1-6 Cleaning section

After the transferring process, the drum needs to be physically cleaned of toner which is residual after the development process. The cleaning blade is constantly pressed against the drum and scrapes the residual toner off to the cleaning roller. The waste toner is collected at the output end of the sweep roller and sent to the waste toner box.

After the drum is physically cleaned, it then must be cleaned to the electrically neutral state. This is necessary to erase any residual positive charge, ready to accept the uniform charge for the next print process. The residual charge is canceled by exposing the drum to the light emitted from the cleaning lamp (CL). This lowers the electrical conductivity of the drum surface making the residual charge on the drum surface escape to the ground.

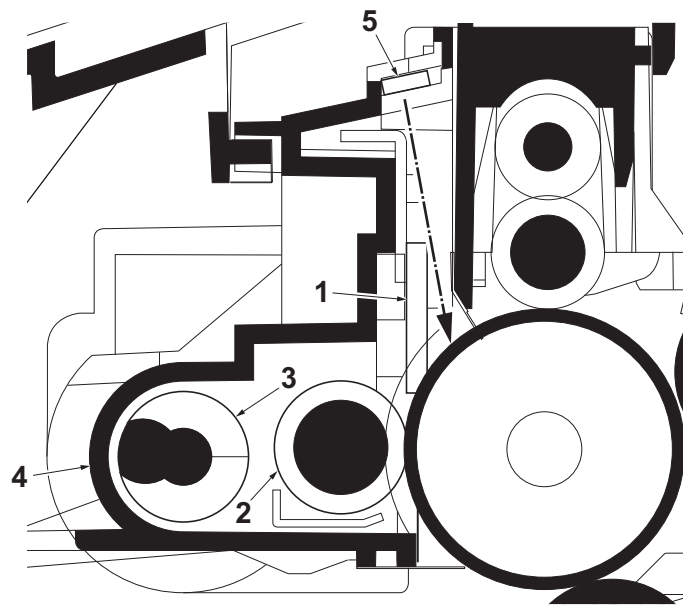

**Figure 2-1-18 Cleaning section**

1. Cleaning blade
2. Cleaning roller
3. Sweep roller
4. Drum frame
5. Cleaning lamp (CL)

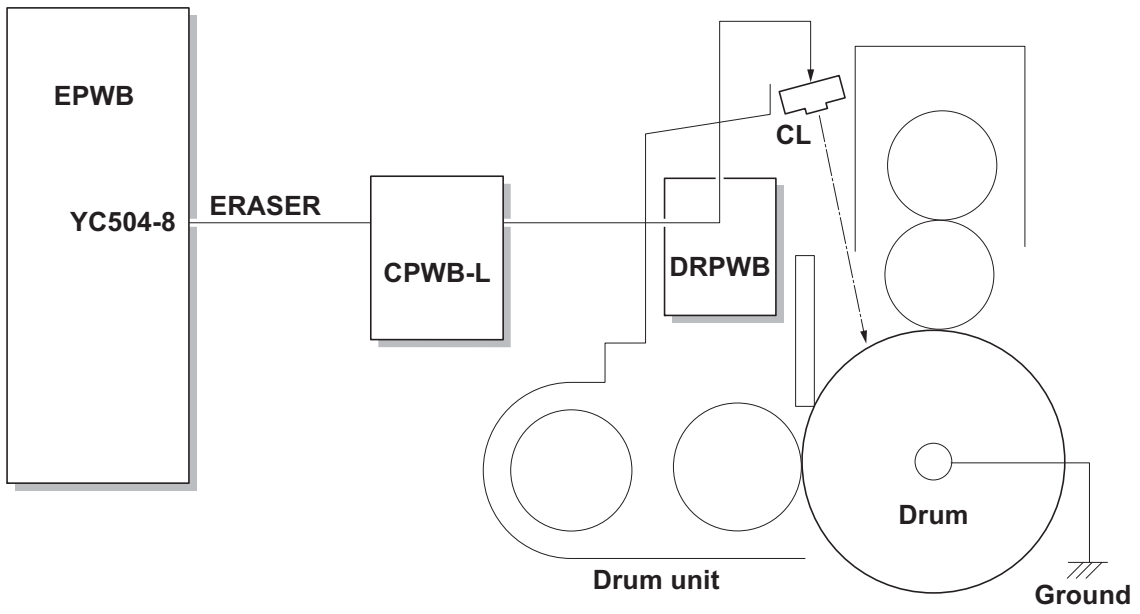


Figure 2-1-19 Cleaning section block diagram



## 2-1-7 Fuser section

The toner on the paper is molten and pressed into the paper as it passes between the heat roller and the press roller in the fuser unit.

The heat roller has a fuser heater (FH) inside which continuously turns on and off by the fuser thermistor (FTH) to maintain the constant temperature onto the heat roller surface.

Should the temperature of the heat roller exceed the predetermined value, the fuser thermostat (FTS) is activated to effectively disconnect the fuser heater (FH) from power.

Fuser temperature is optimized to the paper type. The heat roller is resin coated by fluorine to prevent toner from accumulating on the roller after a long run. Care must be taken while handling the heat roller not to scratch the roller surface as doing so may result in print problems. The heat roller has four separators (claws) which are continuously in contact with its surface. These separators (claws) prevent the paper on which toner has been fused from being wound around the heat roller causing paper jam.

The press roller is made of the heat-resistant silicone rubber. This roller is used to strongly press the paper towards the heat roller by means of press springs.

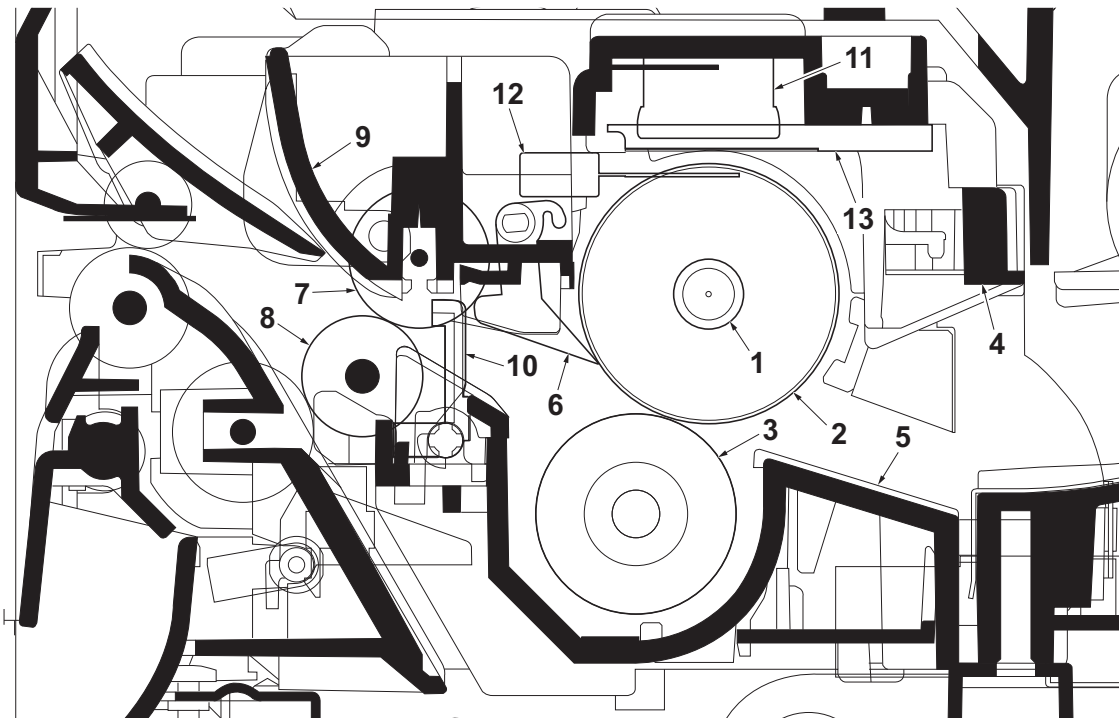


Figure 2-1-20 Fuser section

- |                      |                               |
|----------------------|-------------------------------|
| 1. Fuser heater (FH) | 8. Eject roller               |
| 2. Heat roller       | 9. Feed guide                 |
| 3. Press roller      | 10. Actuator (eject sensor)   |
| 4. Fuser upper frame | 11. Fuser thermostat (FTS)    |
| 5. Fuser lower frame | 12. Fuser thermistor 1 (FTH1) |
| 6. Separators        | 13. Fuser thermistor 2 (FTH2) |
| 7. Eject pulley      |                               |

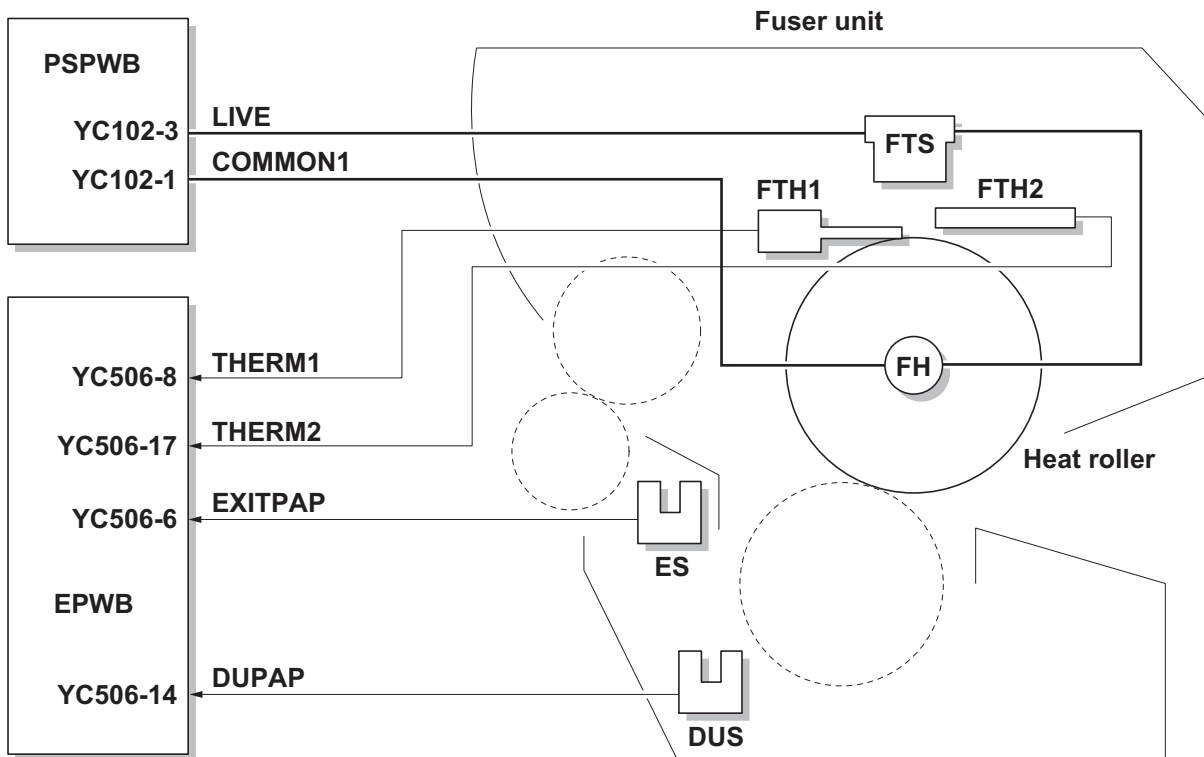


Figure 2-1-21 Fuser section block diagram

## 2-1-8 Eject/Rear unit section

Eject/Rear unit section transports the paper which passed the fuser unit towards the top tray, face up tray or duplex conveying section.

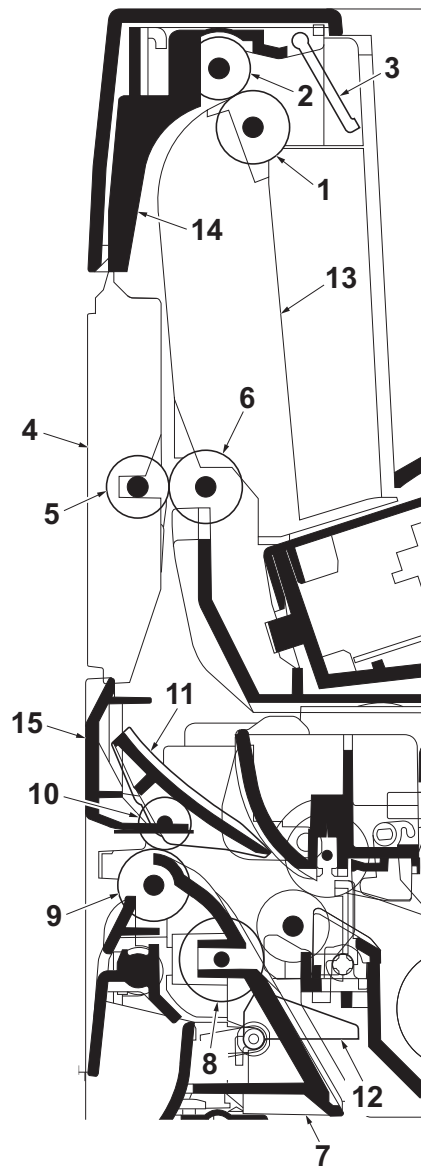


Figure 2-1-22 Eject/Rear unit section

- |                                 |                              |
|---------------------------------|------------------------------|
| 1. Face down upper roller       | 9. Face up roller            |
| 2. Eject FD pulley              | 10. Eject FU pulley          |
| 3. Actuator (paper full sensor) | 11. Face up guide            |
| 4. FD cover                     | 12. Actuator (duplex sensor) |
| 5. Feed FD pulley               | 13. Vertical guide           |
| 6. Face down lower roller       | 14. Paper eject guide        |
| 7. DU guide                     | 15. Rear cover               |
| 8. Feed DU pulley               |                              |

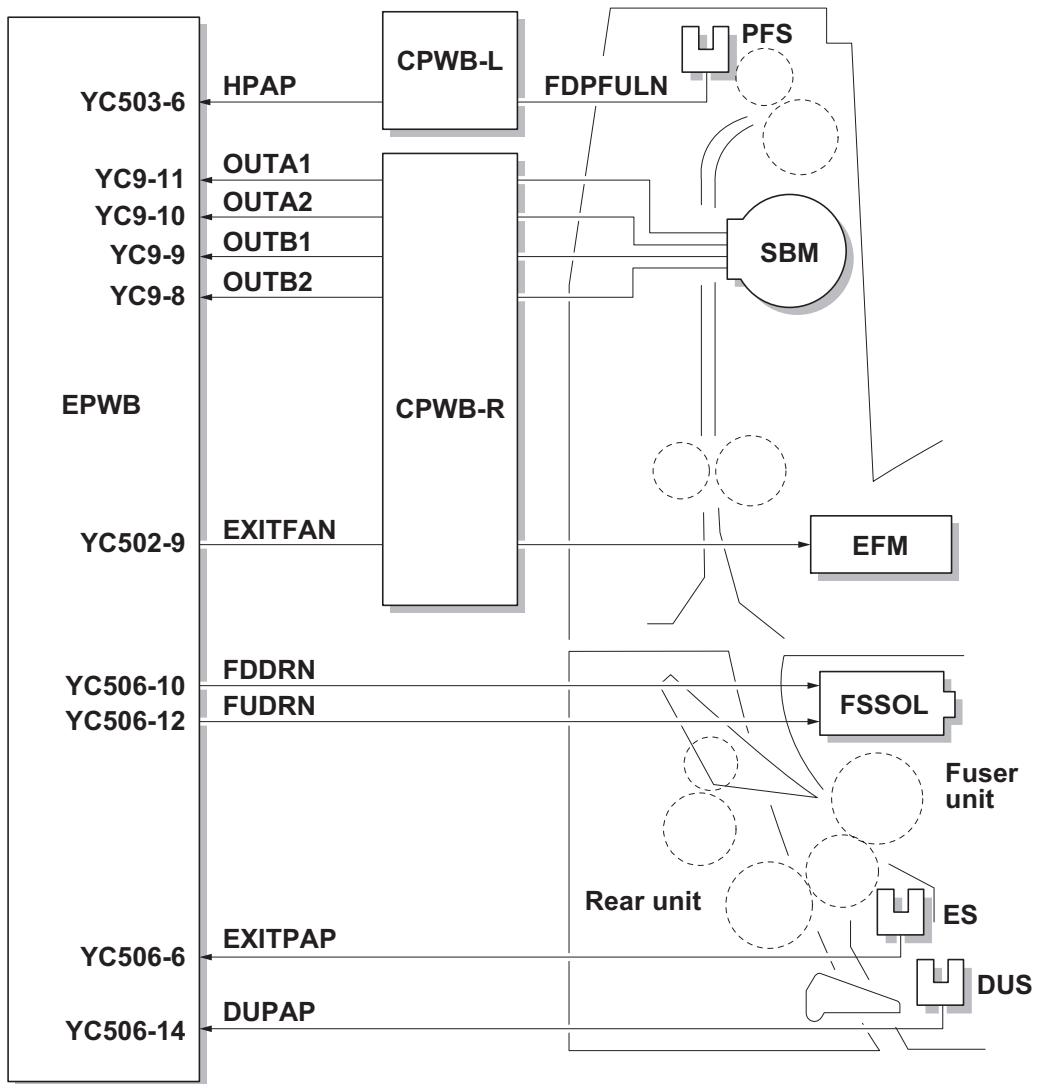


Figure 2-1-23 Eject/rear unit section block diagram

## 2-1-9 Duplex conveying section

Duplex conveying section consists of conveying path which sends the paper sent from the eject/rear unit section to the paper feed/conveying section when duplex printing.

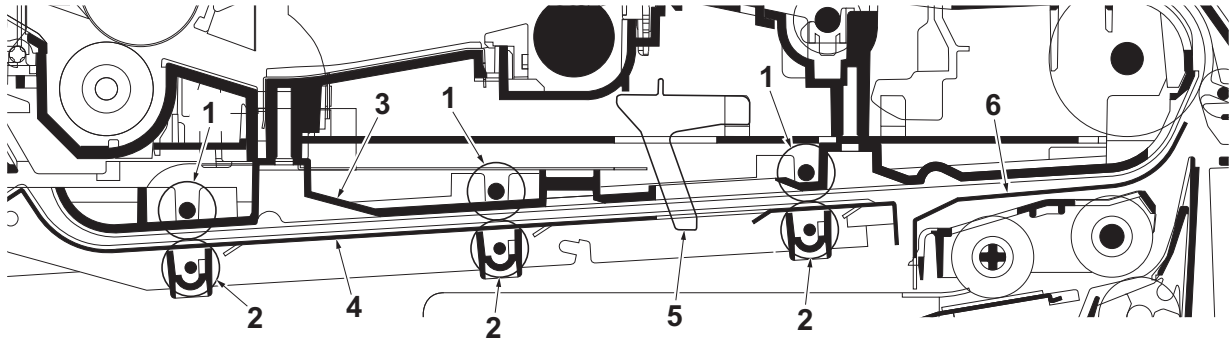


Figure 2-1-24 Duplex conveying section

1. DU roller
2. DU feed pulley
3. DU base
4. DU lower guide
5. Actuator (duplex jam sensor)
6. Feed upper guide

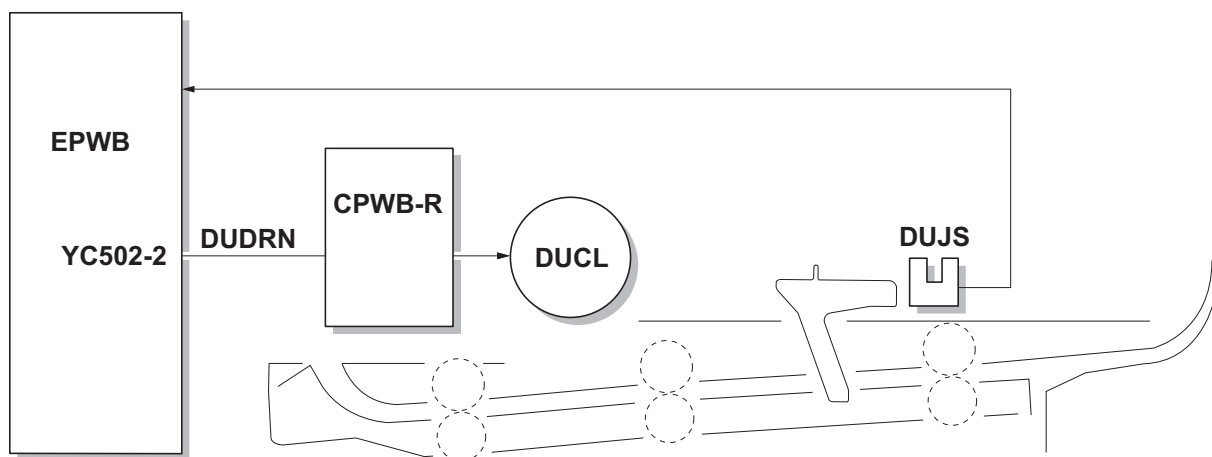


Figure 2-1-25 Duplex conveying section block diagram

## 2-1-10 Document processor

### (1) Original feed section

The original feed section consists of the parts shown in figure. An original placed on the original table is conveyed to the original conveying section. Original is fed by the rotation of the DP forwarding pulley and DP feed pulley.

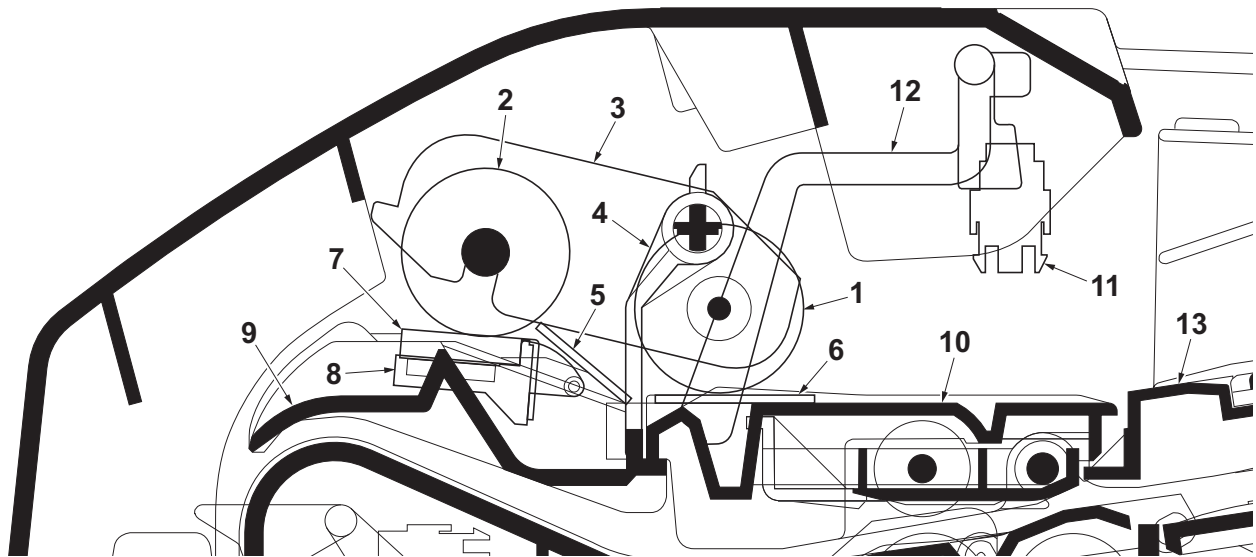


Figure 2-1-26 Original feed section

- |                         |                                   |
|-------------------------|-----------------------------------|
| 1. DP forwarding pulley | 8. Separation mount               |
| 2. DP feed pulley       | 9. Upper guide                    |
| 3. LF holder            | 10. Switchback guide              |
| 4. PF stopper           | 11. DP original sensor (DPOS)     |
| 5. Front separation pad | 12. Actuator (DP original sensor) |
| 6. LF friction plate    | 13. Original table                |
| 7. DP separation pad    |                                   |

]


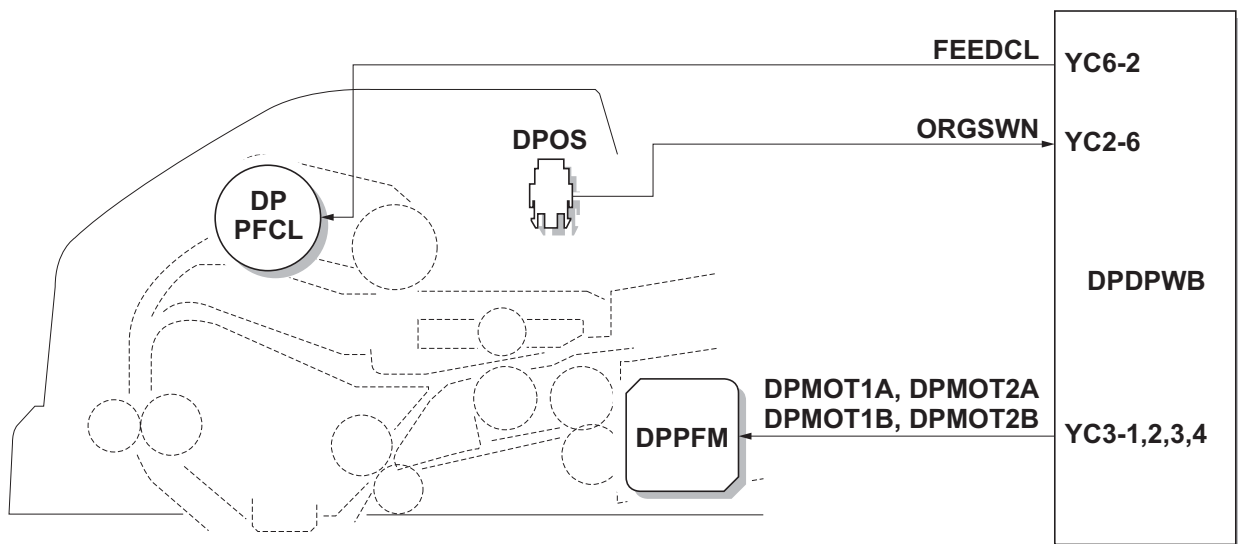


Figure 2-1-27 Original feed section block diagram


**(2) Original conveying section**

The original conveying section consists of the parts shown in figure. A conveyed original is scanned by the optical section (CCD) of main machine when it passes through the DP contact glass of main machine.

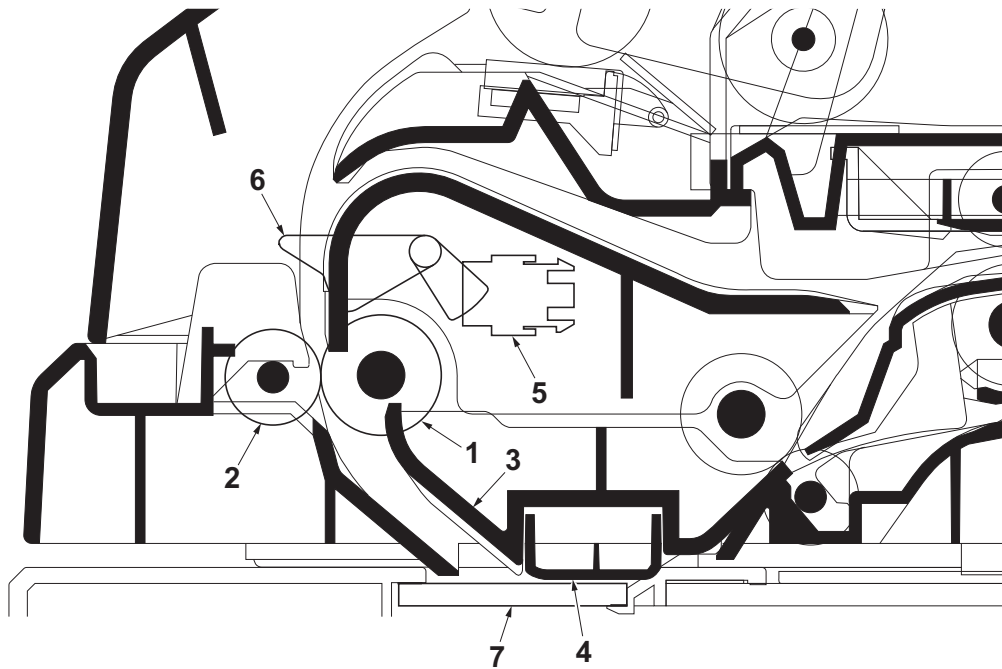

**Figure 2-1-28 Original conveying section**

- |                       |                                |
|-----------------------|--------------------------------|
| 1. Conveying roller A | 5. DP timing sensor (DPTS)     |
| 2. Conveying pulley   | 6. Actuator (DP timing sensor) |
| 3. Conveying bottom   | 7. DP contact glass            |
| 4. Reading guide      |                                |

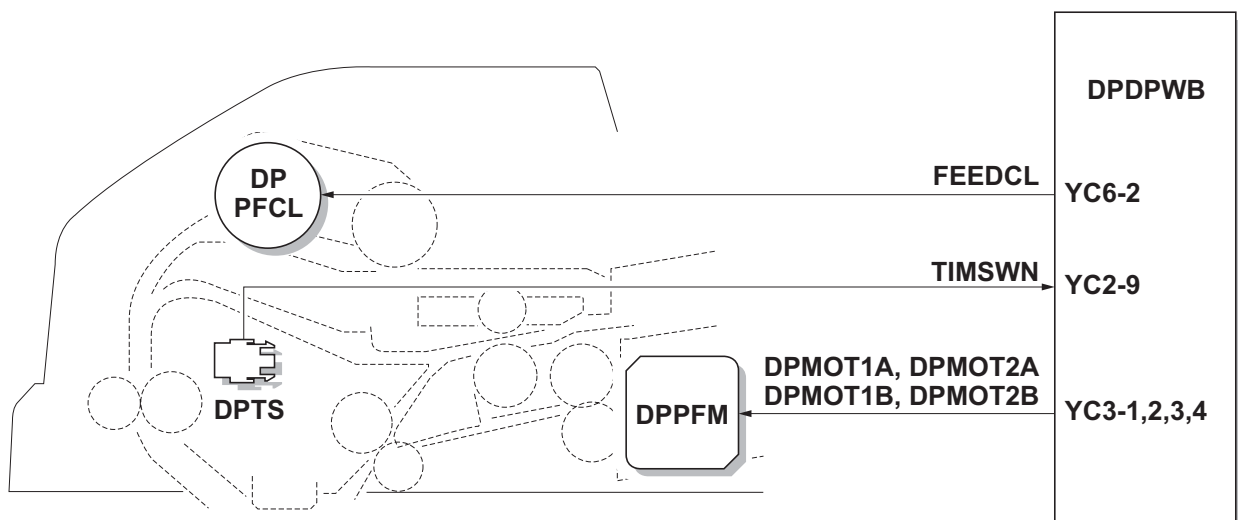

**Figure 2-1-29 Original conveying section block diagram**

### (3) Original switchback/eject sections

The original switchback/eject sections consists of the parts shown in figure. An original of which scanning is complete is ejected to the original eject table by the eject roller. In the case of duplex switchback scanning, an original is conveyed temporarily to the switchback tray and conveyed again to the original conveying section by the switchback roller.

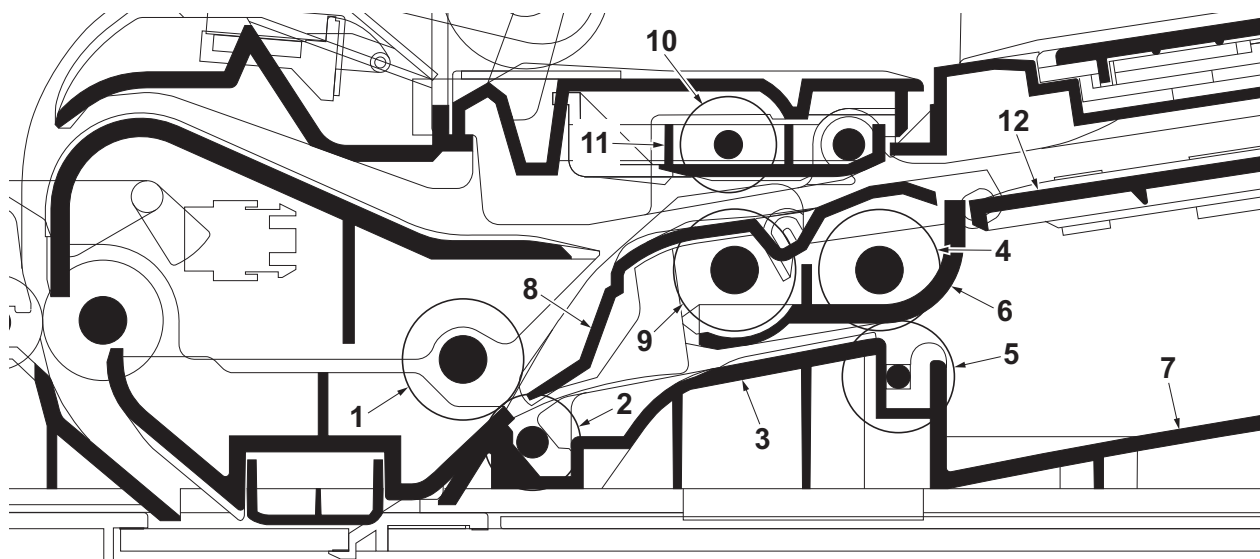


Figure 2-1-30 Original switchback/eject sections

- |                       |                             |
|-----------------------|-----------------------------|
| 1. Conveying roller B | 7. Original eject table     |
| 2. Conveying pulley   | 8. Switchback guide         |
| 3. DP base            | 9. Switchback roller        |
| 4. Eject roller       | 10. Switchback pulley       |
| 5. Eject pulley       | 11. Switchback pulley mount |
| 6. PF housing         | 12. Switchback tray         |

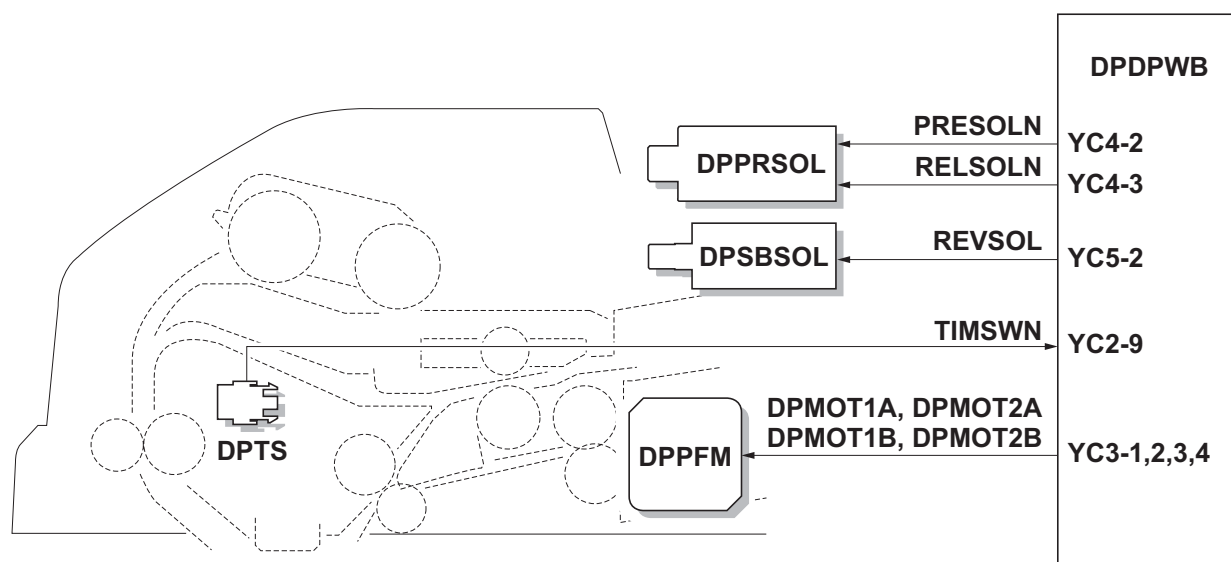



Figure 2-1-31 Original switchback/eject sections block diagram



This page is intentionally left blank.

## 2-2-1 Electrical parts layout

### (1) PWBs

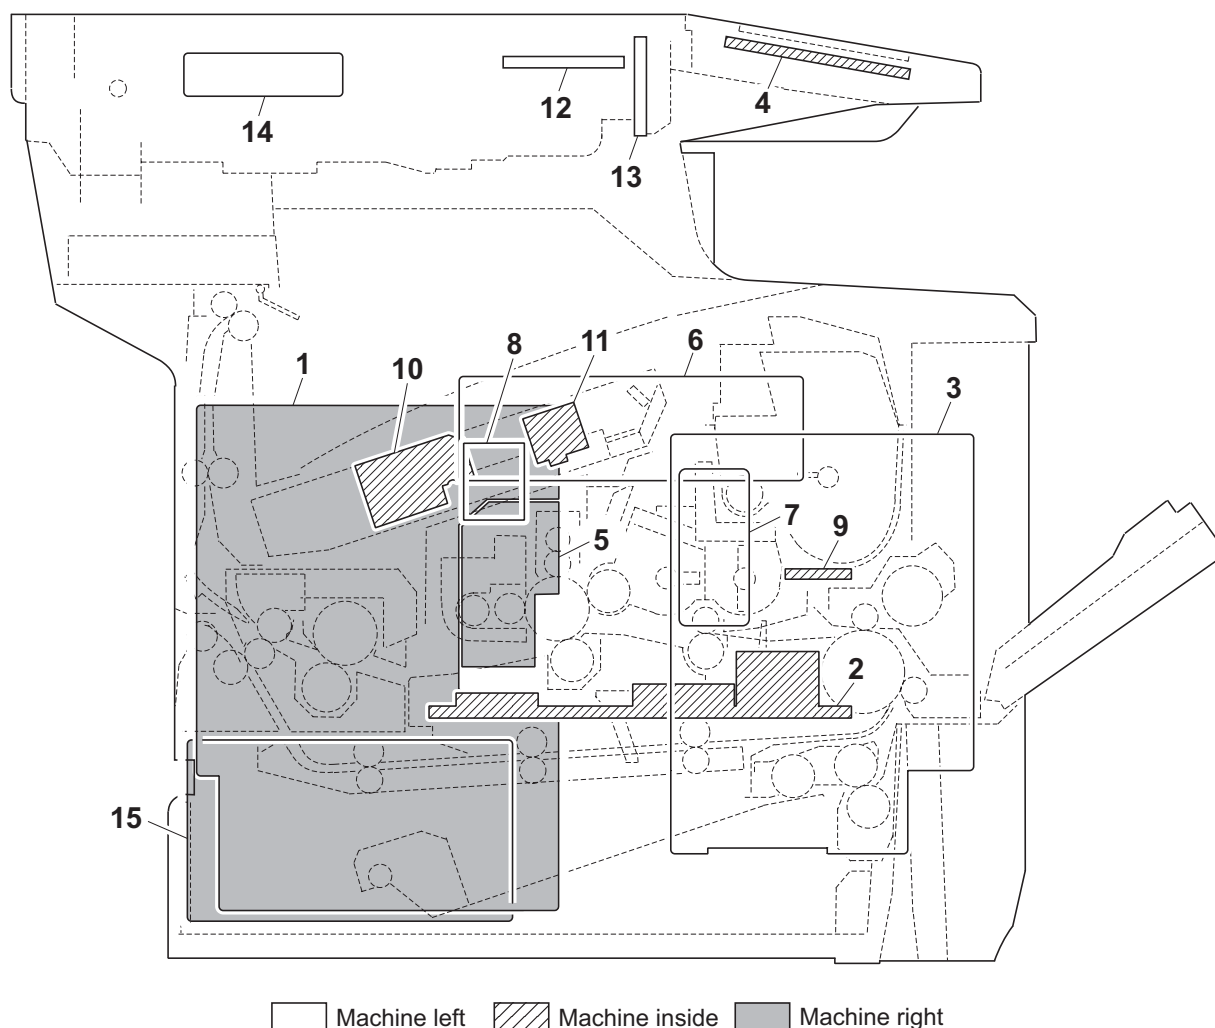

**Figure 2-2-1 PWBs**

- |                                      |   |
|--------------------------------------|---|
| 1. Main PWB (MPWB) .....             | Controls the software such as the print data processing and provides the interface with computers.                                      |
| 2. Engine PWB (EPWB).....            | Controls printer hardware such as high voltage/bias output control, paper conveying system control, and fuser temperature control, etc. |
| 3. Power source PWB (PSPWB) .....    | After full-wave rectification of AC power source input, switching for converting to 24 V DC for output. Controls the fuser heater.      |
| 4. Operation panel PWB (OPPWB) ..... | Consists the LCD, LED indicators and key switches.  |
| 5. Connect-R PWB (CPWB-R).....       | Interconnects the engine PWB and the electrical parts.  |
| 6. Connect-L PWB (CPWB-L).....       | Interconnects the engine PWB and the electrical parts.  |
| 7. Relay PWB (RYPWB) .....           | Interconnects the power source PWB and the fuser heater.  |
| 8. Drum PWB (DRPWB) .....            | Relays wirings from electrical components on the drum unit. Drum individual information in EEPROM storage.                              |
| 9. Developing PWB (DEVPWB).....      | Relays wirings from electrical components on the developing unit.   |
| 10. APC PWB (APCPWB) .....           | Generates and controls the laser beam.  |

11. PD PWB (PDPWB) ..... Controls horizontal synchronizing timing of laser beam.  
 12. LED drive PWB (LEDDRPWB) ..... Controls the LED.  
 13. LED PWB (LEDPWB) ..... Controls the LED.  
 14. CCD PWB (CCDPWB)..... Reads the image of originals.  
 15. FAX control PWB (FCPWB)\* ..... Modulates, demodulates, compresses, decompresses and  
 smoothes out image data, and converts resolution of image data.

\*: Only 4in1 model (with FAX)


#### List of correspondences of PWB names

No.	Name used in service manual	Name used in parts list
1	Main PWB (MPWB)	PARTS MAIN PWB ASSY EU SP
2	Engine PWB (EPWB)	PARTS ENGINE PWB ASSY SP
3	Power source PWB (PSPWB)	PARTS SWITCHING REGULATOR (U) SP *1
3	Power source PWB (PSPWB)	PARTS SWITCHING REGULATOR (E) SP *2,*3
4	Operation panel PWB (OPPWB)	-
5	Connect-R PWB (CPWB-R)	P.W.BOARD ASSY CONNECT-R
6	Connect-L PWB (CPWB-L)	P.W.BOARD ASSY CONNECT-L
7	Relay PWB (RYPWB)	P.W.BOARD ASSY RELAY
8	Drum PWB (DRPWB)	-
9	Developer PWB (DEVPWB)	-
10	APC PWB (APCPWB)	-
11	PD PWB (PDPWB)	-
12	LED drive PWB (LEDDRPWB)	-
13	LED PWB (LEDPWB)	-
14	CCD PWB (CCDPWB)	-
15	FAX control PWB (FCPWB)	PARTS FAX UNIT(U) SP *1
15	FAX control PWB (FCPWB)	PARTS FAX UNIT(E) SP *2
15	FAX control PWB (FCPWB)	PARTS FAX UNIT(AS) SP *3

\*1: 120V

\*2: 220V


\*3: 240V

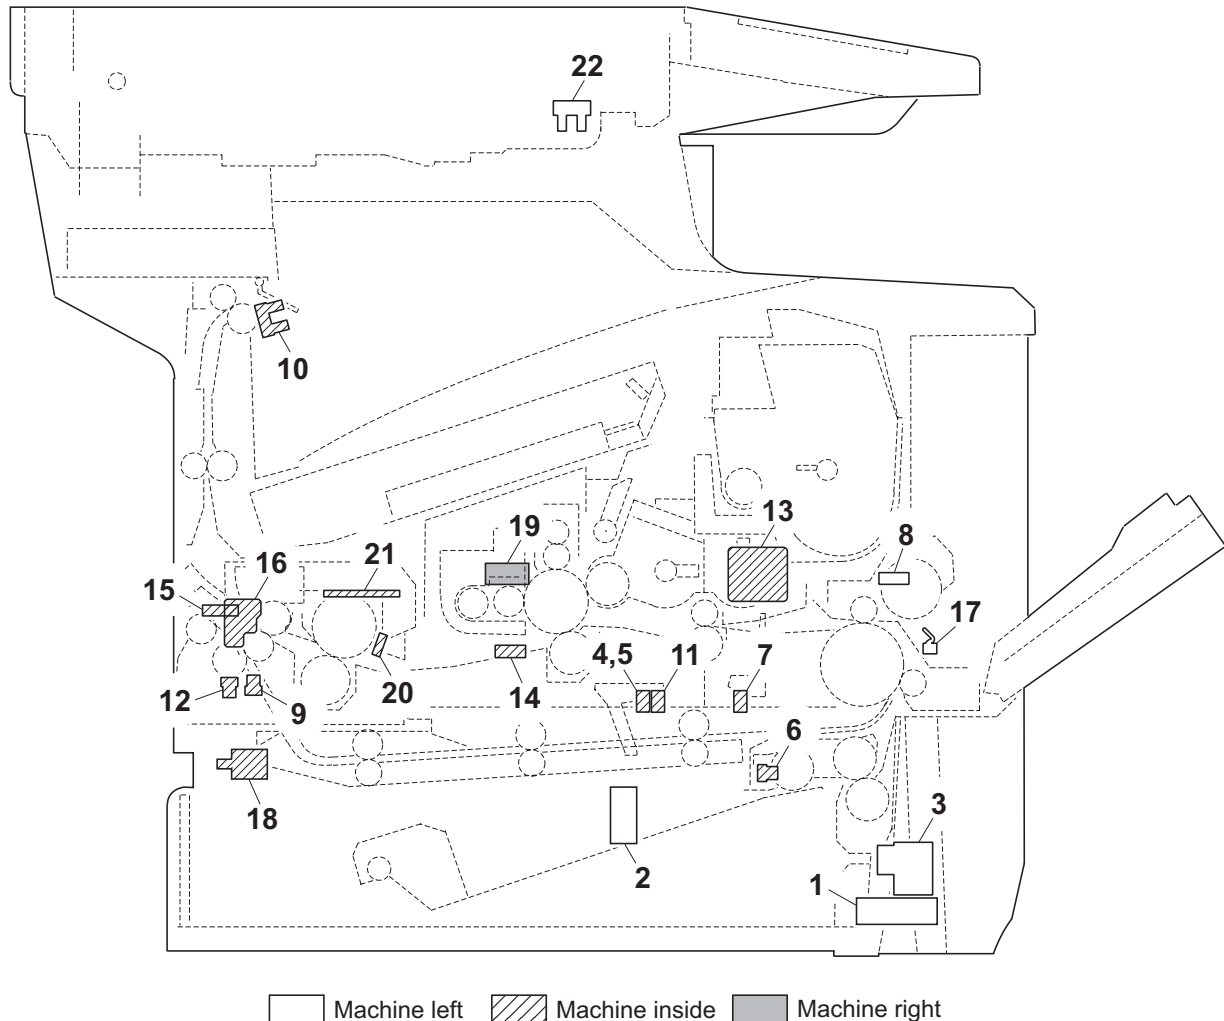**(2) Switches and sensors****Figure 2-2-2 Switches and sensors**

- |   |  |
|---|--|
| 1. Main power switch (MSW) .....        | Turns ON/OFF the AC power source.  |
| 2. Interlock switch (ILSW) .....        | Shuts off 24 V DC power line when the front cover is opened.                 |
| 3. Cassette size switch (CSSW) .....    | Detects the paper size dial setting of the paper setting dial.               |
| 4. Paper sensor 1 (PS1) .....           | Detects the paper remaining amount level.                                    |
| 5. Paper sensor 2 (PS2) .....           | Detects the paper remaining amount level.                                    |
| 6. Lift sensor (LS).....                | Detects activation of upper limit of the bottom plate in the paper cassette. |
| 7. Registration sensor (RS).....        | Detects the timing of primary feeding.                                       |
| 8. MP paper sensor (MPPS) .....         | Detects the presence of paper on the MP tray.                                |
| 9. Eject sensor (ES).....               | Detects paper jam in the fuser unit.   |
| 10. Paper full sensor (PFS).....        | Detects whether the face down tray is full.                                  |
| 11. Duplex jam sensor (DUJS) .....      | Detects paper jam in the duplex conveying section.                           |
| 12. Duplex sensor (DUS) .....           | Detects paper jam in the rear unit.  |
| 13. Toner sensor (TS) .....             | Detects the toner in the toner container.                                    |
| 14. Waste toner sensor (WTS).....       | Detects the waste toner box being full.                                      |
| 15. Envelope switch-R (EVSW-R) .....    | Detects the position of the envelope switch (right).                         |
| 16. Envelope switch-L (EVSW-L).....     | Detects the position of the envelope switch (left).                          |
| 17. Envelope feeder switch (EVFSW)..... | Detects optional envelope feeder.  |


18. Fuser unit switch (FUSW) ..... Detects open/close rear unit (fuser unit).
19. Temperature sensor (TEMS)..... Detects the ambient temperature and absolute humidity.
20. Fuser thermistor 1 (FTH1) ..... Measures the heat roller temperature.
21. Fuser thermistor 2 (FTH2) ..... Measures the heat roller (center) temperature.
22. Home position sensor (HPS) ..... Detects the ISU in the home position.

**(3) Motors**

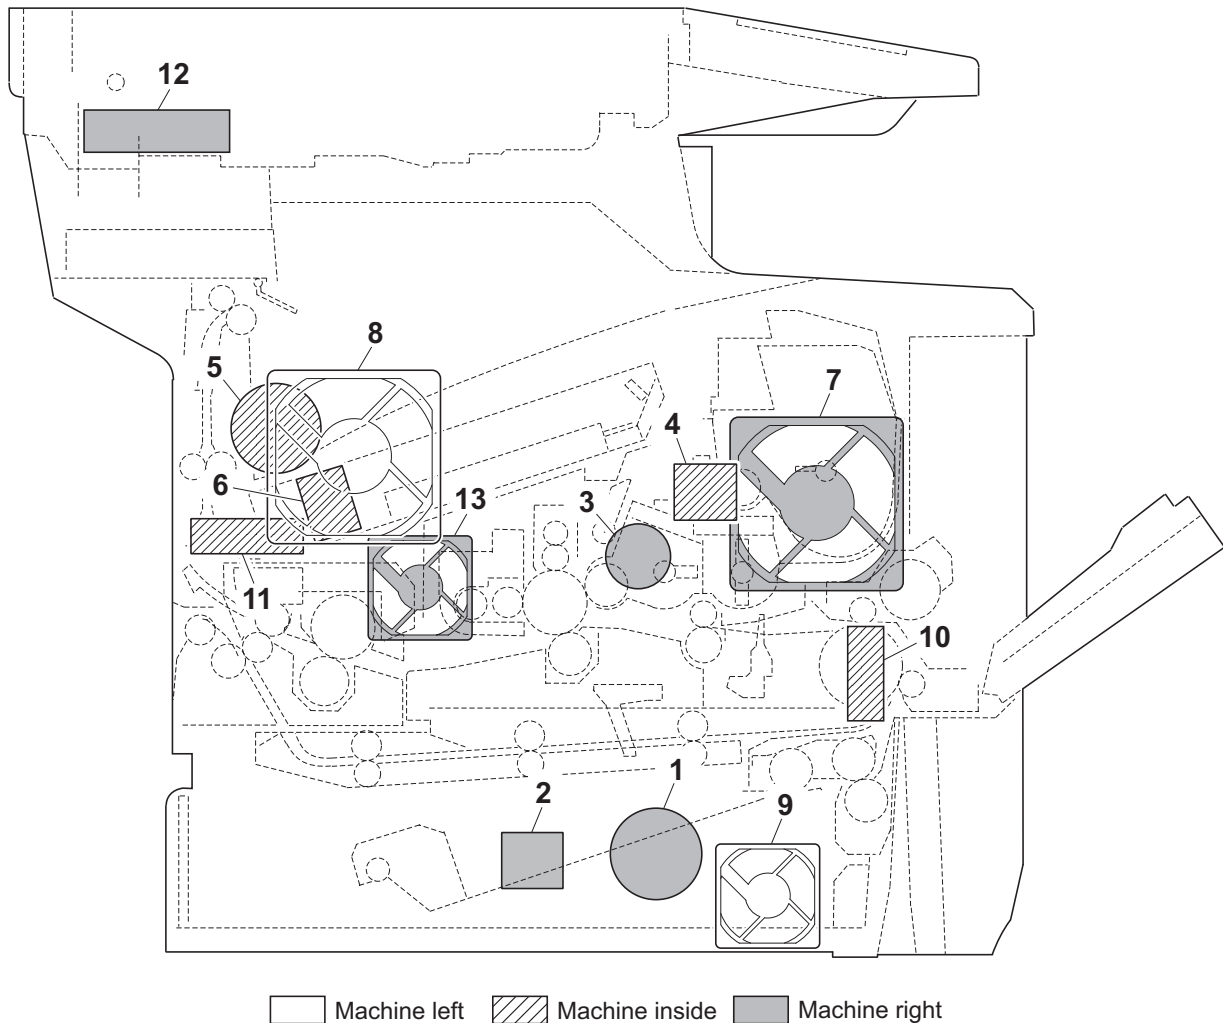


**Figure 2-2-3 Motors**

- 1. Main motor (MM)..... Drives the paper feed/conveying section and fuser unit.
- 2. Lift motor (LM)..... Operates the bottom plate in the paper cassette.
- 3. Drum motor (DRM) ..... Drives the drum unit and developing unit.
- 4. Toner motor (TM) ..... Replenishes the developing unit with toner.
- 5. Switchback motor (SBM) ..... Drives paper eject (switchback) section.
- 6. Polygon motor (PM) ..... Drives the polygon mirror.
- 7. Right fan motor (RFM) ..... Cools the interior of machine.
- 8. Left fan motor (LFM) ..... Cools the interior of machine.
- 9. Power source fan motor (PSFM) ..... Cools the power source unit.
- 10. Feed fan motor (FFM)..... Cools the paper feed conveying section and duplex conveying section.
- 11. Eject fan motor (EFM)..... Disperses steam.
- 12. ISU motor (ISUM) ..... Drives the ISU.
- 13. Controller fan motor (CONFM)..... Cools the controller section.

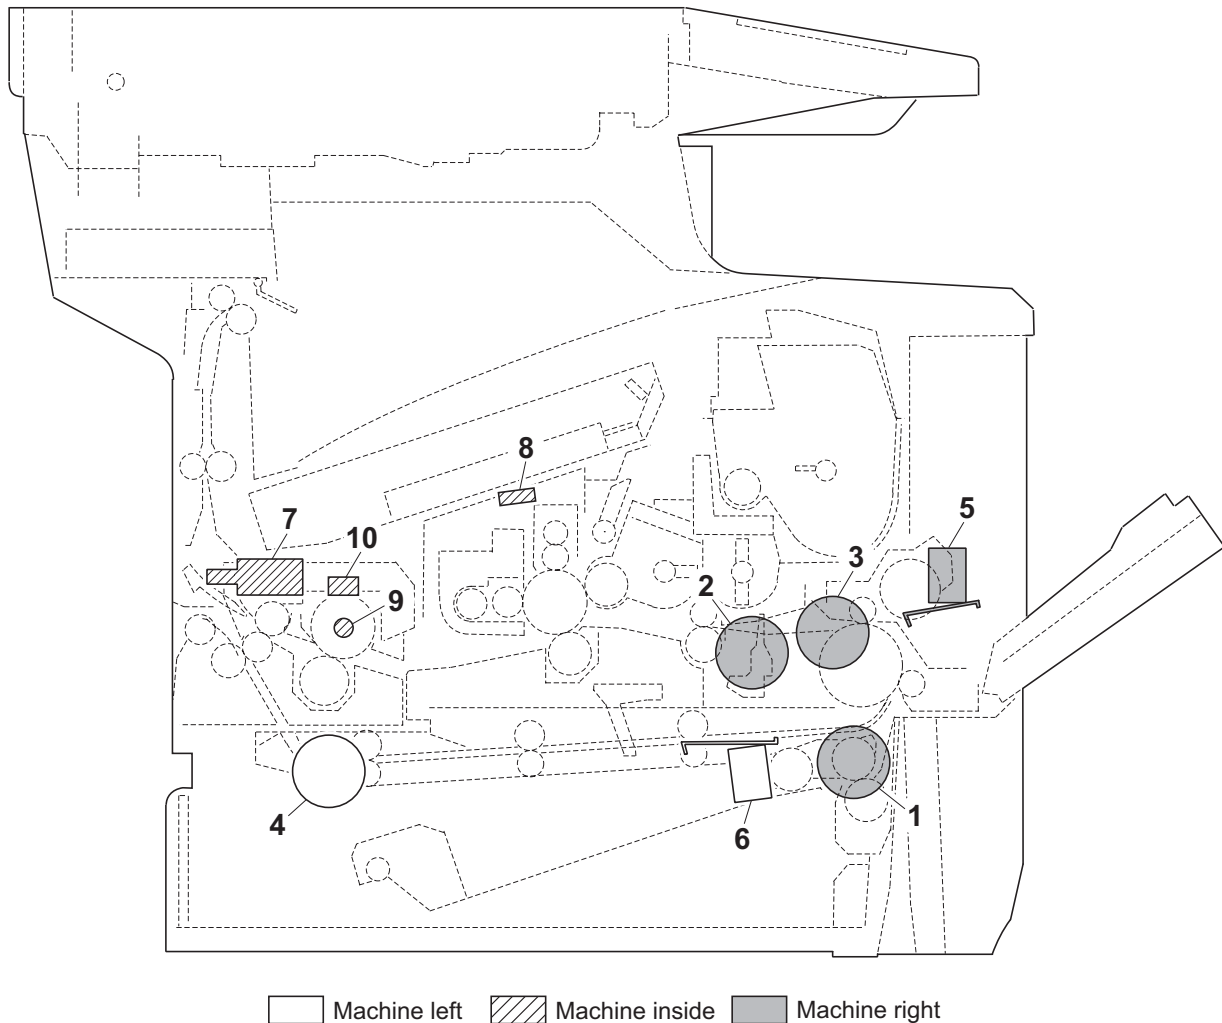**(4) Other electrical components****Figure 2-2-4 Other electrical components**

- |                                      |  |
|--------------------------------------|--|
| 1. Paper feed clutch (PFCL) .....    | Controls the paper cassette paper feed.  |
| 2. Registration clutch (RCL).....    | Controls the secondary paper feed.   |
| 3. Middle feed clutch (MCL).....     | Controls the paper conveying at the conveying section.   |
| 4. Duplex clutch (DUCL) .....        | Controls the paper conveying at the duplex conveying section.  |
| 5. MP solenoid (MPSOL) .....         | Controls the primary paper feed from the MP tray.  |
| 6. Developing solenoid (DEVSOL)..... | Controls the developing unit drive.  |
| 7. Feedshift solenoid (FSSOL).....   | Switches the output stack between face up and face down.   |
| 8. Cleaning lamp (CL).....           | Eliminates the residual electrostatic charge on the drum.  |
| 9. Fuser heater (FH) .....           | Heats the heat roller.   |
| 10. Fuser thermostat (FTS).....      | Shuts off the power source to the fuser heater lamp when the heat roller reaches extremely high temperature. |

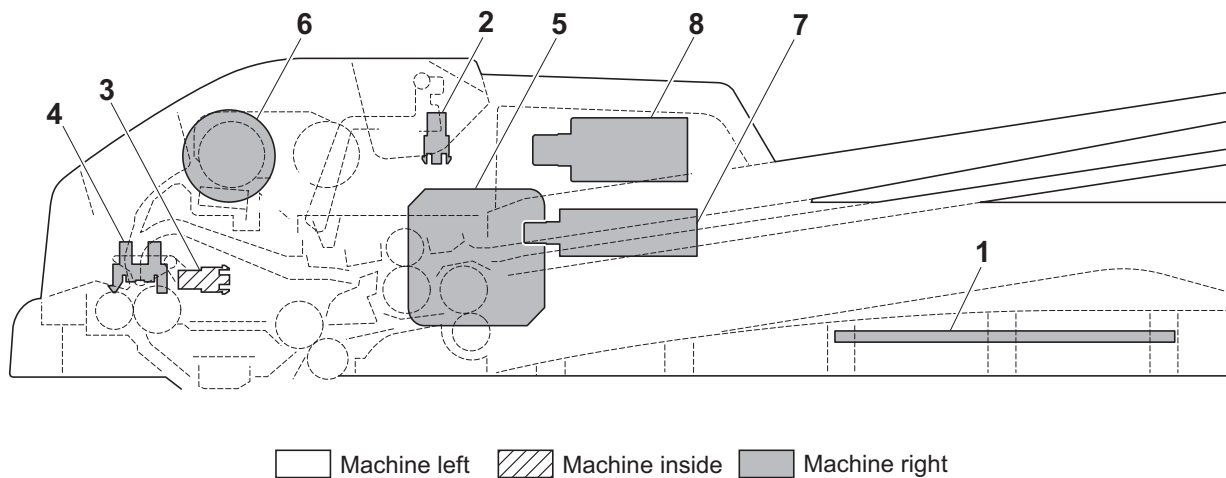**(5) Document processor****Figure 2-2-5 Document processor**

1. DP drive PWB (DPDPWB)..... Consists the solenoids and clutch driver circuit and wiring relay circuit.
2. DP original sensor (DPOS)..... Detects the presence of an original.
3. DP timing sensor (DPTS)..... Detects the original scanning timing.
4. DP open/close sensor (DPOCS)..... Detects the opening/closing of the DP.
5. DP paper feed motor (DPPFM)..... Drives the original feed section.
6. DP paper feed clutch (DPPFCL)..... Controls the drive of the forwarding pulley and feed pulley.
7. DP switchback solenoid (DPSBSOL).... Operates the switchback guide.
8. DP pressure solenoid (DPPRSOL)..... Operates the switchback pulley.



This page is intentionally left blank.

## 2-3-1 Power source PWB

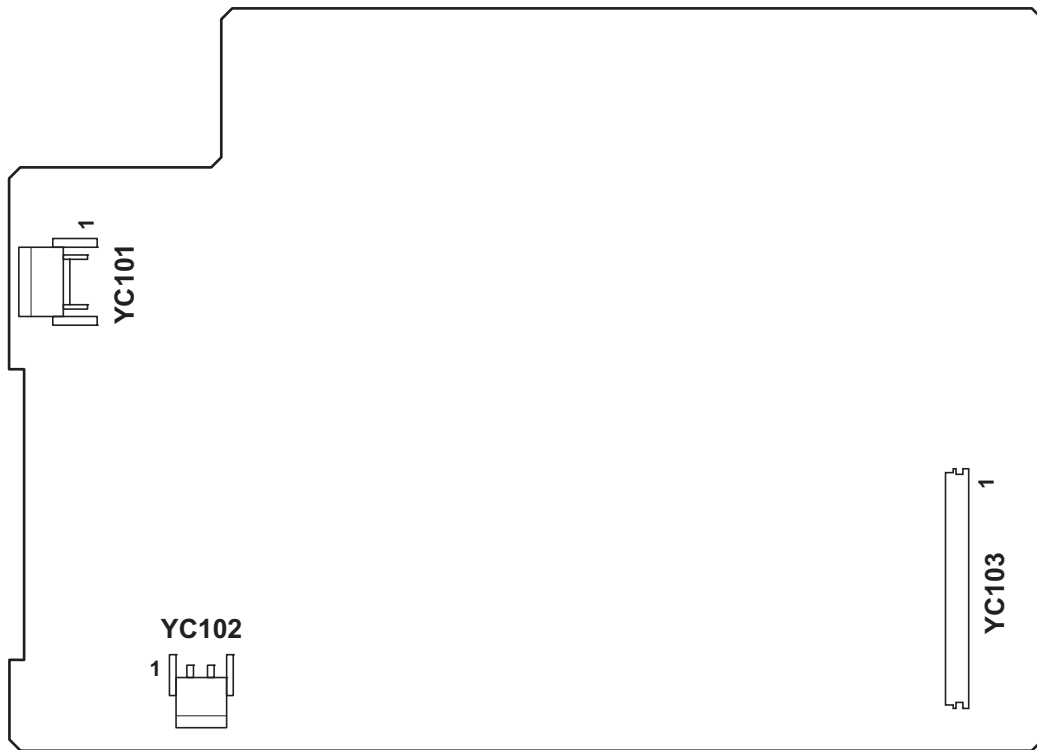


Figure 2-3-1 Power source PWB silk-screen diagram

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC101</b>	1	LIVE	I	120 V AC 220-240 V AC	AC power input
Connected to AC inlet and main power switch	2	NEUTRAL	I	120 V AC 220-240 V AC	AC power input
<b>YC102</b>	1	COMMON1	O	120 V AC/0V 220-240 V AC/0V	FH: On/Off
Connected to relay PWB	2	N.C	-	-	Not used
	3	LIVE	O	120 V AC 220-240 V AC	AC power to RYPWB
<b>YC103</b>	1	+5V1	O	5 V DC	5 V DC power to CPWB-L
Connected to connect-L PWB	2	+5V1	O	5 V DC	5 V DC power to CPWB-L
	3	+5V1	O	5 V DC	5 V DC power to CPWB-L
	4	+24V1	O	24 V DC	24 V DC power to CPWB-L
	5	HUNITN	O	0/5 V DC	EVFSW: On/Off
	6	HANDSN	O	0/5 V DC	MPPS: On/Off
	7	N.C.	-	-	Not used
	8	HEATONN1	I	0/5 V DC	FH: On/Off
	9	ZCROSS	O	0/5 V DC (pulse)	Zero-cross signal
	10	SWSLEEPN	I	0/5 V DC	Sleep mode signal: On/Off
	11	+24V2	O	24 V DC	24 V DC power to CPWB-L (via ILSW)
	12	GND	-	-	Ground
	13	GND	-	-	Ground
	14	GND	-	-	Ground
	15	GND	-	-	Ground
	16	+24V2	O	24 V DC	24 V DC power to CPWB-L (via ILSW)
	17	+24V2	O	24 V DC	24 V DC power to CPWB-L (via ILSW)

### 2-3-2 Engine PWB

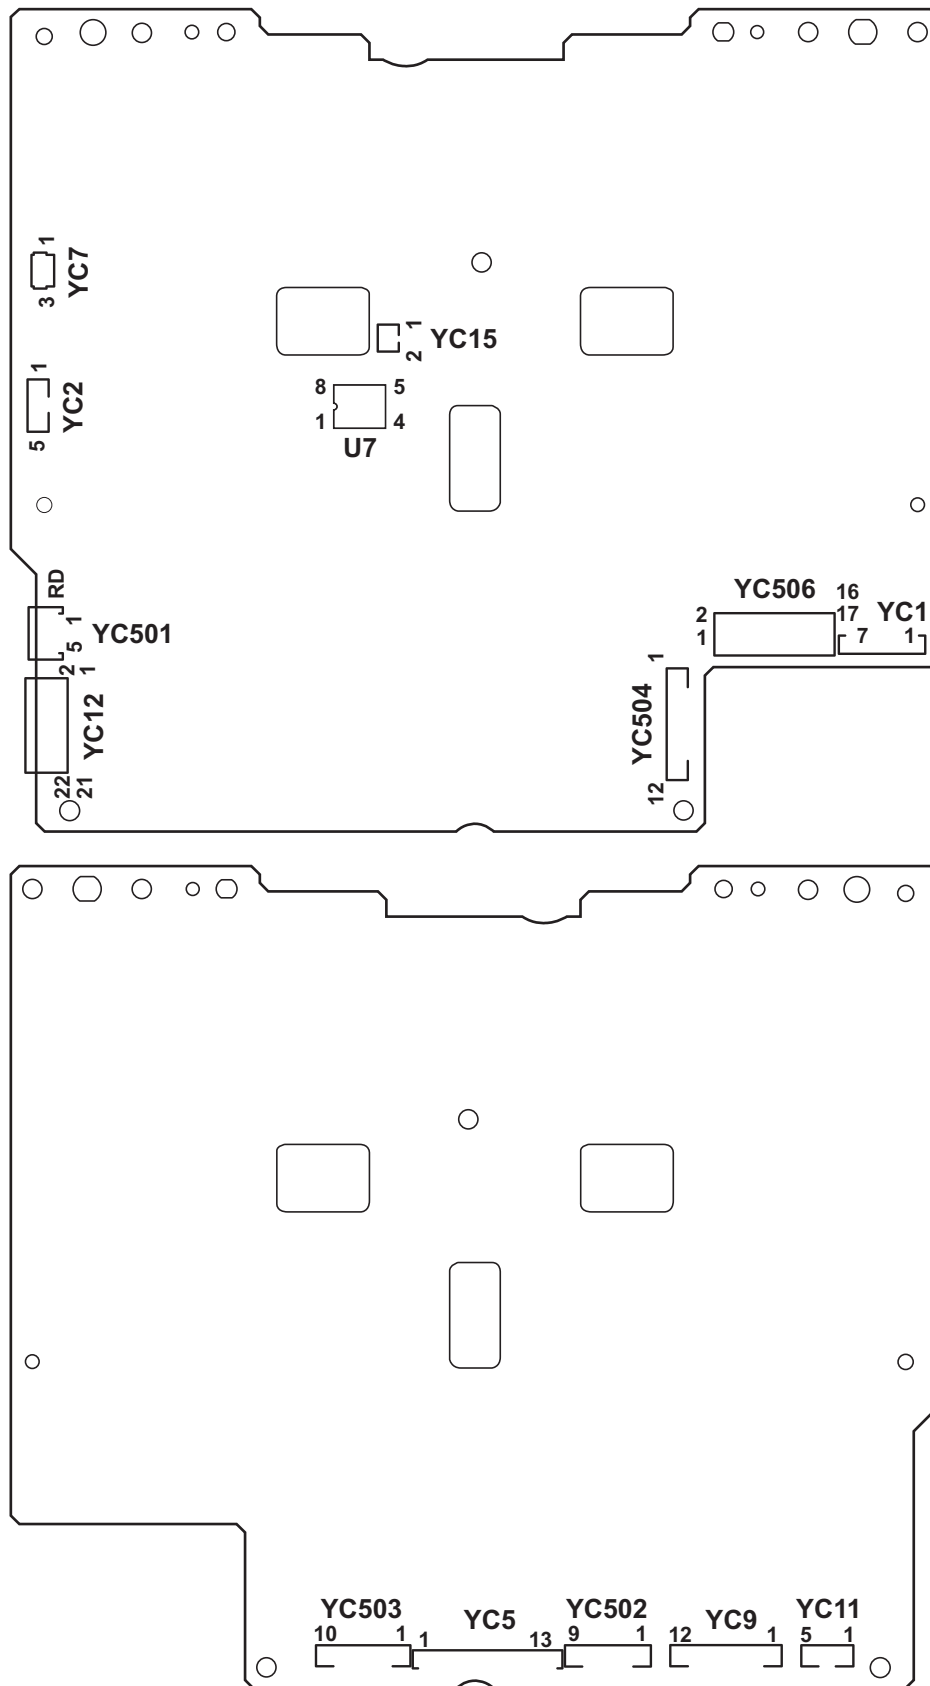


Figure 2-3-2 Engine PWB silk-screen diagram

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC5</b>	1	OPSDO	O	0/5 V DC (pulse)	Serial communication data signal output
Connected to connect-L PWB	2	+24V2	I	24 V DC	24 V DC power from CPWB-L (via ILSW)
	3	+24V2	I	24 V DC	24 V DC power from CPWB-L (via ILSW)
	4	GND	-	-	Ground
	5	GND	-	-	Ground
	6	GND	-	-	Ground
	7	GND	-	-	Ground
	8	GND	-	-	Ground
	9	+24V1	I	24 V DC	24 V DC power from CPWB-L
	10	+5V1	I	5 V DC	5 V DC power from CPWB-L
	11	+5V1	I	5 V DC	5 V DC power from CPWB-L
	12	+5V1	I	5 V DC	5 V DC power from CPWB-L
	13	+5V2	O	5 V DC	5 V DC power to CPWB-L
<b>YC7</b>	1	GND	-	-	Ground
Connected to lift sensor	2	LIFTSEN	I	0/5 V DC	LS: On/Off
	3	+5V2	O	5 V DC	5 V DC power to LS
<b>YC9</b>	1	WETCLK2	O	0/5 V DC (pulse)	TEMS clock signal
Connected to connect-R PWB			I	Analog	TEMS detection voltage (humidity)
	2	WETCLK1	O	0/5 V DC (pulse)	TEMS clock signal
	3	+5V1	O	5 V DC	5 V DC power to CPWB-R
	4	AIRTEMP	I	Analog	TEMS detection voltage (temperature)
	5	RFANDRN	O	0/12/24 V DC	RFM: Full speed/Half speed/Off
	6	+24V1	O	24 V DC	24 V DC power to CPWB-R
	7	MPFDRN	O	0/24 V DC	MPSOL: On/Off
	8	OUTB2	O	0/24 V DC (pulse)	SBM drive control signal
	9	OUTB1	O	0/24 V DC (pulse)	SBM drive control signal
	10	OUTA2	O	0/24 V DC (pulse)	SBM drive control signal
	11	OUTA1	O	0/24 V DC (pulse)	SBM drive control signal
12	GND	-	-	Ground	
<b>YC11</b>	1	+24V4	O	24 V DC	24 V DC power to DRM
Connected to drum motor	2	GND	-	-	Ground
	3	DMOTRDYN	I	0/5 V DC	DRM ready signal
	4	DMOTCLK	O	0/5 V DC (pulse)	DRM clock signal
	5	DMOTONN	O	0/5 V DC	DRM: On/Off

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC12</b>	1	POLRDYN	I	0/5 V DC	PM ready signal
Connected to main PWB	2	POLONN	O	0/5 V DC	PM: On/Off
	3	OUTPEN	O	0/5 V DC	Laser output enable signal
	4	PDMASKN	O	0/5 V DC	Horizontal synchronizing signal
	5	SBSY	O	0/5 V DC	Serial busy signal
	6	SDIR	O	0/5 V DC	Serial communication direction change signal
	7	EGIRN	O	0/5 V DC	Engine interruption signal
	8	EGSI	I	0/5 V DC (pulse)	Serial communication data signal input
	9	EGSO	O	0/5 V DC (pulse)	Serial communication data signal output
	10	SCKN	I	0/5 V DC (pulse)	Serial communication clock signal
	11	EECLK			
	12	EEDIO			
	13	POLCLK			
	14	+24V5	O	24 V DC	24 V DC power to MPWB
	15	+5V1	O	5 V DC	5 V DC power to MPWB
	16	+5V1	O	5 V DC	5 V DC power to MPWB
	17	+5V1	O	5 V DC	5 V DC power to MPWB
	18	GND	-	-	Ground
	19	GND	-	-	Ground
	20	GND	-	-	Ground
	21	+24V4	O	24 V DC	24 V DC power to MPWB
	22	GND	-	-	Ground
<b>YC15</b>	1	+5V1	O	5 V DC	5 V DC power to FFM
Connected to feed fan motor	2	FFANDRN	O	0/2.5/5 V DC	FFM: Full speed/Half speed/Off
<b>YC501</b>	1	+24V4	O	24 V DC	24 V DC power to MM
Connected to main motor	2	GND	-	-	Ground
	3	MMOTONN	O	0/5 V DC	MM ready signal
	4	MMOTRDYN	I	0/5 V DC	MM clock signal
	5	MMOTCLK	O	0/5 V DC (pulse)	MM: On/Off

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC502</b>	1	LMOTON	O	0/24 V DC	LM: On/Off
Connected to connect-R PWB	2	DUDRN	O	0/24 V DC	DUCL: On/Off
	3	DLPDRN	O	0/24 V DC	DEVSOL: On/Off
	4	MIDDRN	O	0/24 V DC	MCL: On/Off
	5	+24V2	O	24 V DC	24 V DC power to CPWB-R
	6	+24V2	O	24 V DC	24 V DC power to CPWB-R
	7	REGDRN	O	0/24 V DC	RCL: On/Off
	8	FEEDRN	O	0/24 V DC	PFCL: On/Off
	9	EXITFAN	O	0/24 V DC	EFM: On/Off
<b>YC503</b>	1	NC	-	-	Not used
Connected to connect-L PWB	2	HEATONN1	O	0/5 V DC	FH: On/Off
	3	ZCROSS	I	0/5 V DC (pulse)	Zero-cross signal
	4	SWSLEEPN	O	0/5 V DC	Sleep mode signal: On/Off
	5	HANDSN	I	0/5 V DC	MPPS: On/Off
	6	HPAP	I	0/5 V DC	EVFSW: On/Off
	7	SWFAN	O	0/24 V DC	PSFM: On/Off
	8	CASET	I	Analog	CSSW detection voltage
	9	TNMOT	O	0/24 V DC	TM: On/Off
	10	TNLEVEL	I	Analog	TS detection voltage
	<b>YC504</b>	1	OPSDI	I	0/5 V DC (pulse)
Connected to connect-L PWB	2	OPSEL2	O	0/5 V DC	Paper feeder select signal (2)
	3	OPSEL1	O	0/5 V DC	Paper feeder select signal (1)
	4	OPSEL0	O	0/5 V DC	Paper feeder select signal (0)
	5	OPRDYN	I	0/5 V DC	Paper feeder ready signal
	6	OPSCCLK	O	0/5 V DC (pulse)	Serial communication clock signal
	7	WTNLEDN	O	0/5 V DC (pulse)	WTS (light emission) control signal
	8	ERASER	O	24/0 V DC	CL: On/Off
	9	EEDIO	I/O	0/5 V DC (pulse)	DRPWB EEPROM data signal
	10	EECLK	O	0/5 V DC (pulse)	DRPWB clock signal
	11	LFANDRN	O	0/12/24 V DC	LFM: Full speed/Half speed/Off
	12	WTNFUL	I	0/5 V DC (pulse)	WTS detection signal

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC506</b>	1	FUSER-L	I	2 to 5 V DC	EVSW-L detection voltage
Connected to fuser unit	2	FUSER-R	I	2 to 5 V DC	EVSW-R detection voltage
	3	+5V1	O	5 V DC	5 V DC power to fuser unit
	4	THERM3	-	-	Not used
	5	+5V2	O	5 V DC	5 V DC power to ES
	6	EXITPAP	I	0/5 V DC	ES: On/Off
	7	GND	-	-	Ground
	8	THERM1	I	Analog	FTH1 detection voltage
	9	+5V1	O	5 V DC	5 V DC power to FTH1
	10	FDDRN	O	0/24 V DC	FSSOL: On/Off
	11	+24V2	O	24 V DC	24 V DC power to FSSOL
	12	FUDRN	O	0/24 V DC	FSSOL: On/Off
	13	+5V2	O	5 V DC	5 V DC power to DUS
	14	DUPAP	I	0/5 V DC	DUS: On/Off
	15	GND	-	-	Ground
	16	+5V1	O	5 V DC	5 V DC power to FTH2
		17	THERM2	I	Analog



### 2-3-3 Main PWB

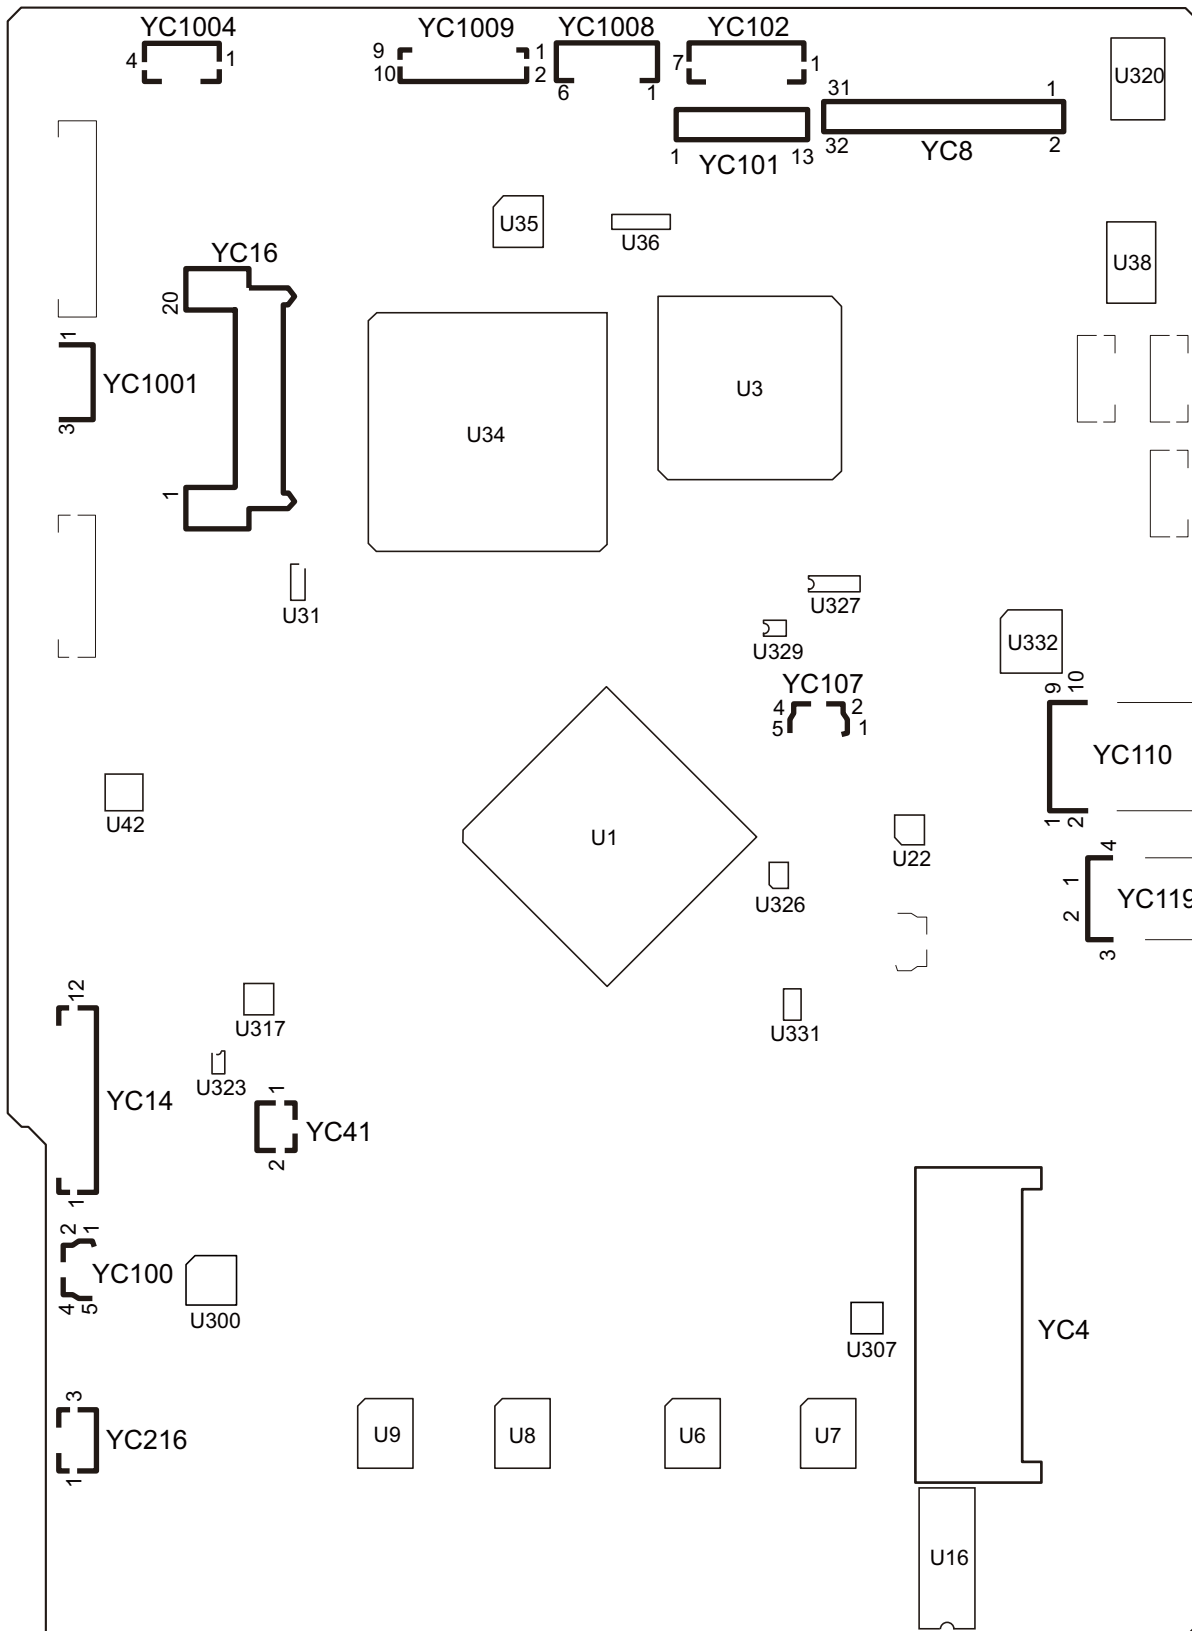


Figure 2-3-3 Main PWB silk-screen diagram

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC8</b>	1	LAMP	O	0/24 V DC	EL drive signal
Connected to CCD PWB	2	NC	-	-	Not used
	3	GND	-	-	Ground
	4	GND	-	-	Ground
	5	HPSW	I	0/3.3 V DC	HPS: On/Off
	6	+3.3V	O	3.3 V DC	3.3 V DC power to CCDPWB
	7	GND	-	-	Ground
	8	CCDRSN	O	LVDS	CCD reset signal
	9	CCDRSP	O	LVDS	CCD reset signal
	10	GND	-	-	Ground
	11	CCDCLPP	O	LVDS	CCD clamp signal
	12	CCDCLPN	O	LVDS	CCD clamp signal
	13	GND	-	-	Ground
	14	CCDPH1N	O	LVDS	CCD shift register clock signal
	15	CCDPH1P	O	LVDS	CCD shift register clock signal
	16	GND	-	-	Ground
	17	CCDPH2P	O	LVDS	CCD shift register clock signal
	18	CCDPH2N	O	LVDS	CCD shift register clock signal
	19	GND	-	-	Ground
	20	CCDSH	O	0/3.3 V DC	CCD shift gate signal
	21	CCDSW	O	0/3.3 V DC	CCD color/BW change signal
	22	GND	-	-	Ground
	23	CCDDATAR	I	Analog	CCD image output signal (R)
	24	GND	-	-	Ground
	25	CCDDATAG	I	Analog	CCD image output signal (G)
	26	GND	-	-	Ground
	27	CCDDATAB	I	Analog	CCD image output signal (B)
	28	GND	-	-	Ground
	29	NC	-	-	Not used
	30	+12V	O	DC12V	12 V DC power to CCDPWB
	31	+5V1	O	5 V DC	5 V DC power to CCDPWB
	32	+5V1	O	5 V DC	5 V DC power to CCDPWB

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC13</b>	1	POLRDYN	O	0/5 V DC	PM ready signal
Connected to engine PWB	2	POLONN	I	0/5 V DC	PM: On/Off
	3	OUTPEN	I	0/5 V DC	Laser output enable signal
	4	PDMASKN	I	0/3.3 V DC	Horizontal synchronizing signal
	5	SBSY	I	0/3.3 V DC	Serial busy signal
	6	SDIR	I	0/3.3 V DC	Serial communication direction change signal
	7	EGIRN	I	0/3.3 V DC	Engine interruption signal
	8	EGSI	O	0/3.3 V DC (pulse)	Serial communication data signal input
	9	EGSO	I	0/3.3 V DC (pulse)	Serial communication data signal output
	10	SCKN	O	0/3.3 V DC (pulse)	Serial communication clock signal
	11	EECLK			
	12	EEDIO			
	13	POLCLK			
<b>YC14</b>	1	+24V5	O	24 V DC	24 V DC power to PM
Connected to laser scanner unit	2	GND	-	-	Ground
	3	POLONN	O	0/5 V DC	PM: On/Off
	4	POLRDYN	I	0/5 V DC	PM ready signal
	5	POLCLK	O	0/5 V DC (pulse)	Serial communication clock signal
	6	GND	-	-	Ground
	7	VDATAN1	O		Video data signal (-)
	8	VDATAP1	O		Video data signal (+)
	9	OUTPEN	O	0/5 V DC	Laser output enable signal
	10	SAMPLEN1	O	0/3.3 V DC	Sample/hold signal
	11	+5V3		5 V DC	5 V DC power to APCPWB
	12	NC	-	-	Not used

Connector	Pin	Signal	I/O	Voltage	Description
YC16	A1	NC	-	-	Not used
Connected to FAX control PWB	B1	NC	-	-	Not used
	A2	NC	-	-	Not used
	B2	TXDREQ	I	0/3.3 V DC	Transmission DMA request signal
	A3	AUDIO	I	0/3.3 V DC	Audio signal
	B3	3.3V	O	3.3 V DC	3.3 V DC power output
	A4	3.3V	O	3.3 V DC	3.3 V DC power output
	B4	A15	O	0/3.3 V DC (pulse)	Address bus signal
	A5	GND	-	-	Ground
	B5	A14	O	0/3.3 V DC (pulse)	Address bus signal
	A6	A13	O	0/3.3 V DC (pulse)	Address bus signal
	B6	A12	O	0/3.3 V DC (pulse)	Address bus signal
	A7	A11	O	0/3.3 V DC (pulse)	Address bus signal
	B7	A10	O	0/3.3 V DC (pulse)	Address bus signal
	A8	A9	O	0/3.3 V DC (pulse)	Address bus signal
	B8	A8	O	0/3.3 V DC (pulse)	Address bus signal
	A9	GND	-	-	Ground
	B9	A7	O	0/3.3 V DC (pulse)	Address bus signal
	A10	A6	O	0/3.3 V DC (pulse)	Address bus signal
	B10	A5	O	0/3.3 V DC (pulse)	Address bus signal
A11	A4	O	0/3.3 V DC (pulse)	Address bus signal	
B11	A3	O	0/3.3 V DC (pulse)	Address bus signal	
A12	A2	O	0/3.3 V DC (pulse)	Address bus signal	
B12	A1	O	0/3.3 V DC (pulse)	Address bus signal	
A13	GND	-	-	Ground	
B13	3.3V	-	3.3 V DC	3.3 V DC power output	
A14	OP2IFN	O	0/3.3 V DC	Select signal	
B14	OP2ACKN	I	0/3.3 V DC (pulse)	OP2ACKN signal	
A15	OP2IRN	I	0/3.3 V DC	Interruption signal	
B15	5V	-	5 V DC	5 V DC power output	
A16	RDY	O	0/3.3 V DC	Ready signal	
B16	RXDREQ	I	0/3.3 V DC	Reception DMA request signal	
A17	GND	-	-	Ground	
B17	RXDMACKN	O	0/3.3 V DC (pulse)	Reception DMAACK signal	
A18	IORN	O	0/3.3 V DC	Read enable signal	
B18	IOWN	O	0/3.3 V DC	Write enable signal	
A19	RESETN	O	0/3.3 V DC	Reset signal	

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC16</b>	B19	TXDMAACKN	I	0/3.3 V DC	Transmission DMAACK signal
Connected to FAX control PWB	A20	D15	I/O	0/3.3 V DC (pulse)	Data bus signal
	B20	D14	I/O	0/3.3 V DC (pulse)	Data bus signal
	A21	GND	-	-	Ground
	B21	D13	I/O	0/3.3 V DC (pulse)	Data bus signal
	A22	D12	I/O	0/3.3 V DC (pulse)	Data bus signal
	B22	D11	I/O	0/3.3 V DC (pulse)	Data bus signal
	A23	D10	I/O	0/3.3 V DC (pulse)	Data bus signal
	B23	D9	I/O	0/3.3 V DC (pulse)	Data bus signal
	A24	D8	I/O	0/3.3 V DC (pulse)	Data bus signal
	B24	D7	I/O	0/3.3 V DC (pulse)	Data bus signal
	A25	GND	-	-	Ground
	B25	D6	I/O	0/3.3 V DC (pulse)	Data bus signal
	A26	D5	I/O	0/3.3 V DC (pulse)	Data bus signal
	B26	D4	I/O	0/3.3 V DC (pulse)	Data bus signal
	A27	D3	I/O	0/3.3 V DC (pulse)	Data bus signal
	B27	D2	I/O	0/3.3 V DC (pulse)	Data bus signal
	A28	D1	I/O	0/3.3 V DC (pulse)	Data bus signal
	B28	D0	I/O	0/3.3 V DC (pulse)	Data bus signal
	A29	GND	-	-	Ground
	B29	NC	-	-	Not used
A30	NC	-	-	Not used	
B30	NC	-	-	Not used	
<b>YC41</b>	1	+24V6	0	DC24V	24 V DC power output to CONF M
Connected to controller fan motor	2	CONFANDR N	0	DC0V/24V (pulse)	CONF M driving control signal
<b>YC100</b>	1	VBUS	O	5 V DC	5 V DC power output
Connected to operation panel PWB	2	DATA-	I/O	-	USB data signal
	3	DATA+	I/O	-	USB data signal
	4	NC	-	-	Not used
	5	GND	-	-	Ground

Connector	Pin	Signal	I/O	Voltage	Description
YC101	1	GND	-	-	Ground
Connected to operation panel PWB	2	PANEL_STAT US	O	DC0V/3.3V	Operation panel status signal
	3	INT_POWER KEY_N	O	DC0V/3.3V	Power key?On/Off
	4	PANEL_RESE T	O	DC0V/3.3V	Reset signal
	5	AUDIO	O	Analog	Audio output signal
	6	LIGHTOFF_P OWERON	O	DC0V/3.3V	Sleep return signal
	7	SHUTDOWN	O	DC0V/3.3V	24V down signal
	8	LED_PROCE SSIING_N	O	DC0V/3.3V	Processing LED control signal
	9	LED_ATTENS ION_N	O	DC0V/3.3V	Attention LED control signal
	10	LED_MEMOR Y_N	O	DC0V/3.3V	Memory LED control signal
	11	SUSPEND_P OWER	O	DC3.3V	3.3 V DC power output to OPPWB
	12	ENERGY_SA VE	O	DC0V/3.3V	Energy save signal
	13	BEEP_POWE RON	O	DC0V/3.3V	Sleep return signal
	YC102	1	+5V2	O	DC5V
Connected to operation panel PWB	2	+5V2	O	DC5V	5 V DC power output to OPPWB
	3	+5V2	O	DC5V	5 V DC power output to OPPWB
	4	GND	-	-	Ground
	5	GND	-	-	Ground
	6	GND	-	-	Ground
	7	NC	-	-	Not used
	YC107	1	VBUS	O	5 V DC
Connected to USB	2	DATA-	I/O	-	USB data signal
	3	DATA+	I/O	-	USB data signal
	4	GND	-	-	Ground

Connector	Pin	Signal	I/O	Voltage	Description
YC108	1	VBUS	O	DC5V	5 V DC power output
Connected to IC card reader	2	DATA-	I/O	-	USB data signal
	3	DATA+	I/O	-	USB data signal
	4	NC	-	-	Not used
	5	GND	-	-	Ground
<b>YC110</b>	1	TCT	O	3.3 V DC	3.3 V DC power output
Connected to ethernet	2	TD+	O	0/3.3 V DC (pulse)	Transmission data
	3	TD-	O	0/3.3 V DC (pulse)	Transmission data
	4	RD+	I	0/3.3 V DC (pulse)	Received data
	5	RD-	I	0/3.3 V DC (pulse)	Received data
	6	RCT	O	3.3 V DC	3.3 V DC power output
	7	100B_LED_K	-	-	100 Base/10 Base display
	8	100B_LED_A	-	-	100 Base/10 Base display
	9	LINK_LED_K	-	-	LINK LED
	10	LINK_LED_A	-	-	LINK LED
<b>YC119</b>	U1	VBUS	O	5 V DC	5 V DC power output
Connected to USB	U2	DATA-	I/O	-	USB data signal
	U3	DATA+	I/O	-	USB data signal
	U4	GND	-	-	Ground
<b>YC215</b>	1	+24V5	I	24 V DC	24 V DC power from EPWB
Connected to engine PWB	2	+5V1	I	5 V DC	5 V DC power from EPWB
	3	+5V1	I	5 V DC	5 V DC power from EPWB
	4	GND	-	-	Ground
	5	+5V1	I	5 V DC	5 V DC power from EPWB
	6	GND	-	-	Ground
	7	GND	-	-	Ground
	8	GND	-	-	Ground
	9	+24V4	I	24 V DC	24 V DC power from EPWB
<b>YC216</b>	1	+3.3V	-	3.3 V DC	3.3 V DC power to PDPWB
Connected to PD PWB	2	PDN	I	0/5 V DC (pulse)	Horizontal synchronizing signal
	3	GND	-	-	Ground
<b>YC1001</b>	1	+24V1	I	24 V DC	24 V DC power from CPWB-L
Connected to connect-L PWB	2	NC	-	-	Not used
	3	GND	-	-	Ground

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC1004</b> Connected to ISU motor	1	SCMOT1A	O	0/24 V DC (pulse)	ISUM drive control signal
	2	SCMOT2B	O	0/24 V DC (pulse)	ISUM drive control signal
	3	SCMOT1B	O	0/24 V DC (pulse)	ISUM drive control signal
	4	SCMOT2A	O	0/24 V DC (pulse)	ISUM drive control signal
<b>YC1008</b> Connected to DP drive PWB	1	MOT1A	O	0/24 V DC (pulse)	DPPFM drive control signal
	2	MOT2A	O	0/24 V DC (pulse)	DPPFM drive control signal
	3	MOT1B	O	0/24 V DC (pulse)	DPPFM drive control signal
	4	MOT2B	O	0/24 V DC (pulse)	DPPFM drive control signal
	5	+24V6	O	24 V DC	24 V DC power to PDPWB
	6	GND	-	-	Ground
<b>YC1009</b> Connected to DP drive PWB	1	+3.3V	O	3.3 V DC	3.3 V DC power to DPDPWB
	2	GND	-	-	Ground
	3	TIMSWN	I	0/3.3 V DC	DPTS: On/Off
	4	ORGSWN	I	0/3.3 V DC	DPOS: On/Off
	5	OPSWN	I	0/3.3 V DC	DPOCS: On/Off
	6	DPDETN	I	0/3.3 V DC	DP set signal
	7	RELSOLN	O	0/24 V DC	DPPRSOL: On (Release)/Off
	8	PRESOLN	O	0/24 V DC	DPPRSOL: On (Press)/Off
	9	REVSOL	O	0/24 V DC	DPSBSOL: On/Off
	10	FEEDCL	O	0/24 V DC	DPPFCL: On/Off



### 2-3-4 Connect-L PWB

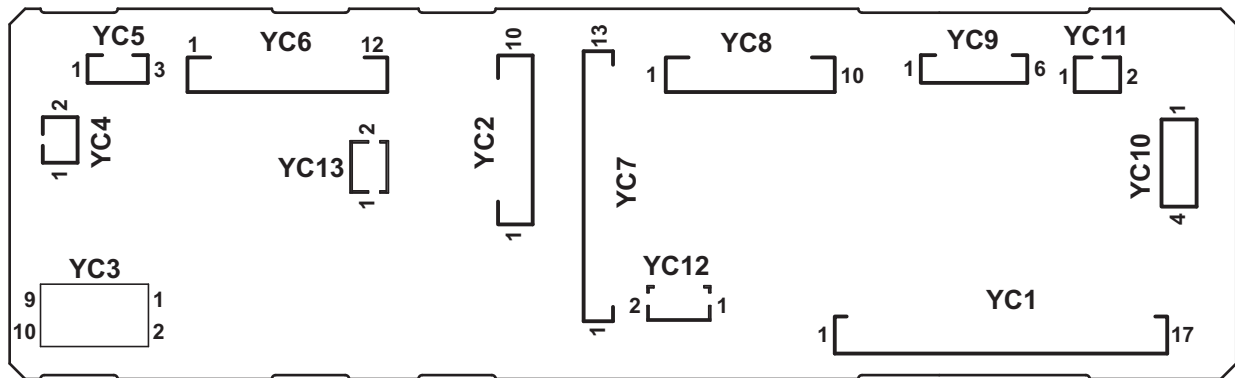


Figure 2-3-4 Connect-L PWB silk-screen diagram

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC1</b> Connected to power source PWB	1	+24V2	I	24 V DC	24 V DC power from PSPWB (via ILSW)
	2	+24V2	I	24 V DC	24 V DC power from PSPWB (via ILSW)
	3	GND	-	-	Ground
	4	GND	-	-	Ground
	5	GND	-	-	Ground
	6	GND	-	-	Ground
	7	+24V2	I	24 V DC	24 V DC power from PSPWB (via ILSW)
	8	SWSLEEPN	O	0/5 V DC	Sleep mode signal: On/Off
	9	ZCROSS	I	0/5 V DC (pulse)	Zero-cross signal
	10	HEATONN1	O	0/5 V DC	FH: On/Off
	11	N.C.	-	-	Not used
	12	HANDSN	I	0/5 V DC	MPPS: On/Off
	13	HUNITN	I	0/5 V DC	EVFSW: On/Off
	14	+24V1	I	24 V DC	24 V DC power from PSPWB
	15	+5V1	I	5 V DC	5 V DC power from PSPWB
	16	+5V1	I	5 V DC	5 V DC power from PSPWB
	17	+5V1	I	5 V DC	5 V DC power from PSPWB
<b>YC2</b> Connected to paper feeder	1	+24V1	O	24 V DC	24 V DC power to paper feeder
	2	OPCLK	O	0/5 V DC (pulse)	Serial communication clock signal
	3	+5V1	O	5 V DC	5 V DC power to paper feeder
	4	OPRDYN	I	0/5 V DC	Paper feeder ready signal
	5	OPSEL0	O	0/5 V DC	Paper feeder select signal (0)
	6	OPSEL1	O	0/5 V DC	Paper feeder select signal (1)
	7	OPSEL2	O	0/5 V DC	Paper feeder select signal (2)
	8	OPSDI	I	0/5 V DC (pulse)	Serial communication data signal input
	9	OPSDO	O	0/5 V DC (pulse)	Serial communication data signal output
	10	GND	-	-	Ground
<b>YC3</b> Connected to drum PWB	1	GND	-	-	Ground
	2	ERASER	O	0/24 V DC	CL: On/Off
	3	GND	-	-	Ground
	4	WTNLEDN	O	0/5 V DC (pulse)	WTS (light emission) control signal
	5	EECLK	O	0/5 V DC (pulse)	DRPWB clock signal
	6	WTNFUL	I	0/5 V DC (pulse)	WTS detection signal
	7	EEDIO	I/O	0/5 V DC (pulse)	DRPWB EEPROM data signal
	8	+5V2	O	5 V DC	5 V DC power to DRPWB
	9	GND	-	-	Ground
	10	+5V2	O	5 V DC	5 V DC power to DRPWB

Connector	Pin	Signal	I/O	Voltage	Description	
<b>YC4</b>	1	+24V1	O	24 V DC	24 V DC power to LFM	
	Connected to left fan motor	2	LFANDRN	O	0/12/24 V DC	LFM: Full speed/Half speed/Off
<b>YC5</b>	1	GND	-	-	Ground	
	Connected to paper full sensor	2	FDPFULN	I	0/5 V DC	PFS: On/Off
	3	+5V2	O	5 V DC	5 V DC power to PFS	
<b>YC6</b>	1	WTNFUL	O	0/5 V DC (pulse)	WTS detection signal	
	Connected to engine PWB	2	LFANDRN	I	0/12/24 V DC	LFM: Full speed/Half speed/Off
	3	EECLK	I	0/5 V DC (pulse)	DRPWB clock signal	
	4	EEDIO	I/O	0/5 V DC (pulse)	DRPWB EEPROM data signal	
	5	ERASER	I	24/0 V DC	CL: On/Off	
	6	WTNLEDN	I	0/5 V DC (pulse)	WTS (light emission) control signal	
	7	OPSCCLK	I	0/5 V DC (pulse)	Serial communication clock signal	
	8	OPRDYN	O	0/5 V DC	Paper feeder ready signal	
	9	OPSEL0	I	0/5 V DC	Paper feeder select signal (0)	
	10	OPSEL1	I	0/5 V DC	Paper feeder select signal (1)	
	11	OPSEL2	I	0/5 V DC	Paper feeder select signal (2)	
	12	OPSDI	O	0/5 V DC (pulse)	Serial communication data signal output	
<b>YC7</b>	1	OPSDO	I	0/5 V DC (pulse)	Serial communication data signal output	
	Connected to engine PWB	2	+24V2	O	24 V DC	24 V DC power to EPWB (via ILSW)
	3	+24V2	O	24 V DC	24 V DC power to EPWB (via ILSW)	
	4	GND	-	-	Ground	
	5	GND	-	-	Ground	
	6	GND	-	-	Ground	
	7	GND	-	-	Ground	
	8	GND	-	-	Ground	
	9	+24V1	O	24 V DC	24 V DC power to EPWB	
	10	+5V1	O	5 V DC	5 V DC power to EPWB	
	11	+5V1	O	5 V DC	5 V DC power to EPWB	
	12	+5V1	O	5 V DC	5 V DC power to EPWB	
	13	+5V2	I	5 V DC	5 V DC power from EPWB	

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC8</b>	1	TNLEVEL	O	Analog	TS detection voltage
Connected to engine PWB	2	TNMOT	I	0/24 V DC	TM: On/Off
	3	CASET	O	Analog	CSSW detection voltage
	4	SWFAN	I	0/24 V DC	PSFM: On/Off
	5	HPAP	O	0/5 V DC	EVFSW: On/Off
	6	HANDSN	O	0/5 V DC	MPPS: On/Off
	7	SWSLEEPN	I	0/5 V DC	Sleep mode signal: On/Off
	8	ZCROSS	O	0/5 V DC (pulse)	Zero-cross signal
	9	HEATONN1	I	0/5 V DC	FH: On/Off
	10	NC	-	-	Not used
<b>YC9</b>	1	RFDATA	I/O	0/5 V DC (pulse)	RFID data signal
Connected to developing PWB	2	TNMOT	O	0/24 V DC	TM: On/Off
	3	TNLEVEL	I	Analog	TS detection voltage
	4	+5V2	O	5 V DC	5 V DC power to DEVPWB
	5	GND	-	-	Ground
	6	RFCLK	O	0/5 V DC (pulse)	RFID clock signal
<b>YC10</b>	1	CAS2	I	0/5 V DC	CSSW: On/Off
Connected to cassette size switch	2	CAS1	I	0/5 V DC	CSSW: On/Off
	3	CASET	I	Analog	CSSW detection voltage
	4	CAS0	I	0/5 V DC	CSSW: On/Off
<b>YC11</b>	1	+24V1	O	24 V DC	24 V DC power to PSFM
Connected to power source fan motor	2	SWFAN	O	0/24 V DC	PSFM: On/Off
<b>YC12</b>	1	+24V1	O	24 V DC	24 V DC power to MPWB
Connected to main PWB	2	GND	-	-	Ground
<b>YC13</b>	1	RELAY	O	0/5 V DC	Relay mode signal: On/Off
Connected to relay PWB	2	GND	-	-	Ground

### 2-3-5 Connect-R PWB

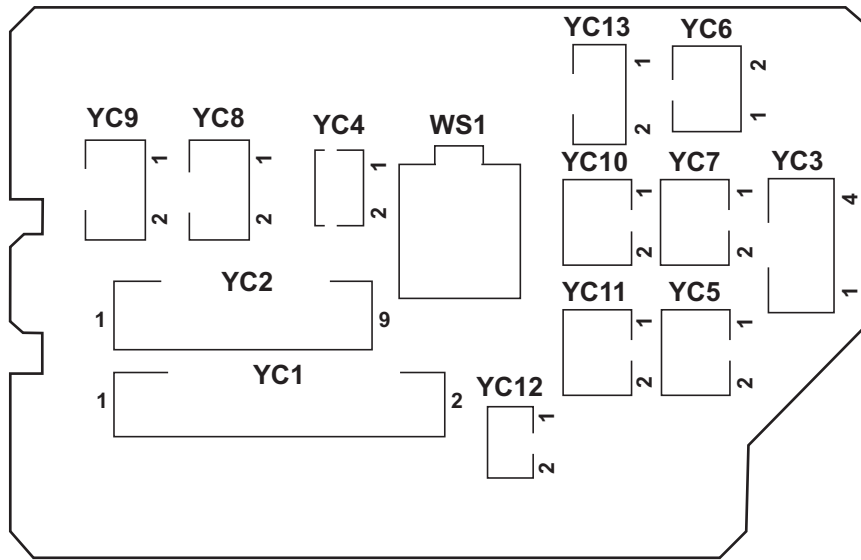


Figure 2-3-5 Connect-R PWB silk-screen diagram

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC1</b>	1	GND	-	-	Ground
Connected to engine PWB	2	OUTA1	I	0/24 V DC (pulse)	SBM drive control signal
	3	OUTA2	I	0/24 V DC (pulse)	SBM drive control signal
	4	OUTB1	I	0/24 V DC (pulse)	SBM drive control signal
	5	OUTB2	I	0/24 V DC (pulse)	SBM drive control signal
	6	MPFDRN	I	0/24 V DC	MPSOL: On/Off
	7	+24V1	I	24 V DC	24 V DC power from EPWB
	8	RFANDRN	I	0/12/24 V DC	RFM: Full speed/Half speed/Off
	9	AIRTEMP	O	Analog	TEMS detection voltage (temperature)
	10	+5V1	I	5 V DC	5 V DC power from EPWB
	11	WETCLK1	I	0/5 V DC (pulse)	TEMS clock signal
	12	WETCLK2	I	0/5 V DC (pulse)	TEMS clock signal
				O	Analog
<b>YC2</b>	1	LMOTON	I	0/24 V DC	LM: On/Off
Connected to engine PWB	2	DUDRN	I	0/24 V DC	DUCL: On/Off
	3	DLPDRN	I	0/24 V DC	DEVSOL: On/Off
	4	MIDDRN	I	0/24 V DC	MCL: On/Off
	5	+24V2	I	24 V DC	24 V DC power from EPWB
	6	+24V2	I	24 V DC	24 V DC power from EPWB
	7	REGDRN	I	0/24 V DC	RCL: On/Off
	8	FEEDDRN	I	0/24 V DC	PFCL: On/Off
	9	EXITFAN	I	0/24 V DC	EFM: On/Off
	<b>YC3</b>	1	OUTA1	O	0/24 V DC (pulse)
Connected to switchback motor	2	OUTA2	O	0/24 V DC (pulse)	SBM drive control signal
	3	OUTB1	O	0/24 V DC (pulse)	SBM drive control signal
	4	OUTB2	O	0/24 V DC (pulse)	SBM drive control signal
	<b>YC4</b>	1	+24V2	O	24 V DC
Connected to developing solenoid	2	DLPDRN	O	0/24 V DC	DEVSOL: On/Off
	<b>YC5</b>	1	+24V2	O	24 V DC
Connected to paper feed clutch	2	FEEDDRN	O	0/24 V DC	PFCL: On/Off
	<b>YC6</b>	1	+24V2	O	24 V DC
Connected to registration clutch	2	REGDRN	O	0/24 V DC	RCL: On/Off

Connector	Pin	Signal	I/O	Voltage	Description
<b>YC7</b> Connected to middle clutch	1	+24V2	O	24 V DC	24 V DC power to MCL
	2	MIDDRN	O	0/24 V DC	MCL: On/Off
<b>YC8</b> Connected to lift motor	1	LMOTON	O	0/24 V DC	LM: On/Off
	2	GND	-	-	Ground
<b>YC9</b> Connected to duplex clutch	1	+24V2	O	24 V DC	24 V DC power to DUCL
	2	DUDRN	O	0/24 V DC	DUCL: On/Off
<b>YC10</b> Connected to MP solenoid	1	+24V2	O	24 V DC	24 V DC power to MPSOL
	2	MPFDRN	O	0/24 V DC	MPSOL: On/Off
<b>YC11</b> Connected to right fan motor	1	+24V1	O	24 V DC	24 V DC power to RFM
	2	RFANDRN	O	0/12/24 V DC	RFM: Full speed/Half speed/Off
<b>YC12</b> Connected to fuser unit switch	1	ATRTEMP	O	5 V DC	5 V DC power to FUSW
	2	ATRTEMP2	I	0/5 V DC	FUSW: On/Off
<b>YC13</b> Connected to eject fan motor	1	+24V1	O	24 V DC	24 V DC power to EFM
	2	EXITFAN	O	0/24 V DC	EFM: On/Off

### 2-3-6 DP drive PWB

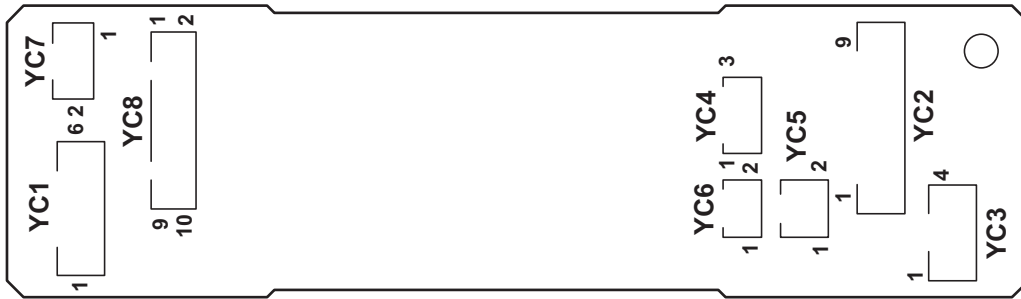


Figure 2-3-6 DP drive PWB silk-screen diagram




Connector	Pin	Signal	I/O	Voltage	Description
<b>YC1</b> Connected to main PWB	1	MOT1A	I	0/24 V DC (pulse)	DPPFM drive control signal
	2	MOT2A	I	0/24 V DC (pulse)	DPPFM drive control signal
	3	MOT1B	I	0/24 V DC (pulse)	DPPFM drive control signal
	4	MOT2B	I	0/24 V DC (pulse)	DPPFM drive control signal
	5	+24V6	I	24 V DC	24 V DC power from MPWB
	6	GND	-	-	Ground
<b>YC2</b> Connected to DP open/close sensor, DP original sensor and DP timing sensor	1	PILED	O	3.3 V DC	3.3 V DC power to DPOCS
	2	GND	-	-	Ground
	3	OPSWN	I	0/3.3 V DC	DPOCS: On/Off
	4	PILED	O	3.3 V DC	3.3 V DC power to DPOS
	5	GND	-	-	Ground
	6	ORGSWN	I	0/3.3 V DC	DPOS: On/Off
	7	PILED	O	3.3 V DC	3.3 V DC power to DPTS
	8	GND	-	-	Ground
	9	TIMSWN	I	0/3.3 V DC	DPTS: On/Off
<b>YC3</b> Connected to DP paper feed motor	1	DPMOT1A	O	0/24 V DC (pulse)	DPPFM drive control signal
	2	DPMOT2A	O	0/24 V DC (pulse)	DPPFM drive control signal
	3	DPMOT1B	O	0/24 V DC (pulse)	DPPFM drive control signal
	4	DPMOT2B	O	0/24 V DC (pulse)	DPPFM drive control signal
<b>YC4</b> Connected to DP pressure solenoid	1	+24V6	O	24 V DC	24 V DC power to DPPRSOL
	2	PRESOLN	O	0/24 V DC	DPPRSOL: ON (Press)/Off
	3	RELSOLN	O	0/24 V DC	DPPRSOL: On (Release)/Off
<b>YC5</b> Connected to DP switch-back solenoid	1	+24V6	O	24 V DC	24 V DC power to DPSBSOL
	2	REVSOL	O	0/24 V DC	DPSBSOL: On/Off
<b>YC6</b> Connected to DP paper feed clutch	1	+24V6	O	24 V DC	24 V DC power to DPPFCL
	2	FEEDCL	O	0/24 V DC	DPPFCL: On/Off


Connector	Pin	Signal	I/O	Voltage	Description
<b>YC8</b>	1	+3.3V	I	3.3 V DC	3.3 V DC power from MPWB
Connected to main PWB	2	GND	-	-	Ground
	3	TIMSWN	O	0/3.3 V DC	DPTS: On/Off
	4	ORGSWN	O	0/3.3 V DC	DPOS: On/Off
	5	OPSWN	O	0/3.3 V DC	DPOCS: On/Off
	6	DPDETN	O	0/3.3 V DC	DP set signal
	7	RELSOLN	I	0/24 V DC	DPPRSOL: On (Release)/Off
	8	PRESOLN	I	0/24 V DC	DPPRSOL: ON (Press)/Off
	9	REVSOL	I	0/24 V DC	DPSBSOL: On/Off
	10	FEEDCL	I	0/24 V DC	DPPFCL: On/Off

This page is intentionally left blank.


# 2-4-1 Appendixes

## (1) Wiring diagram

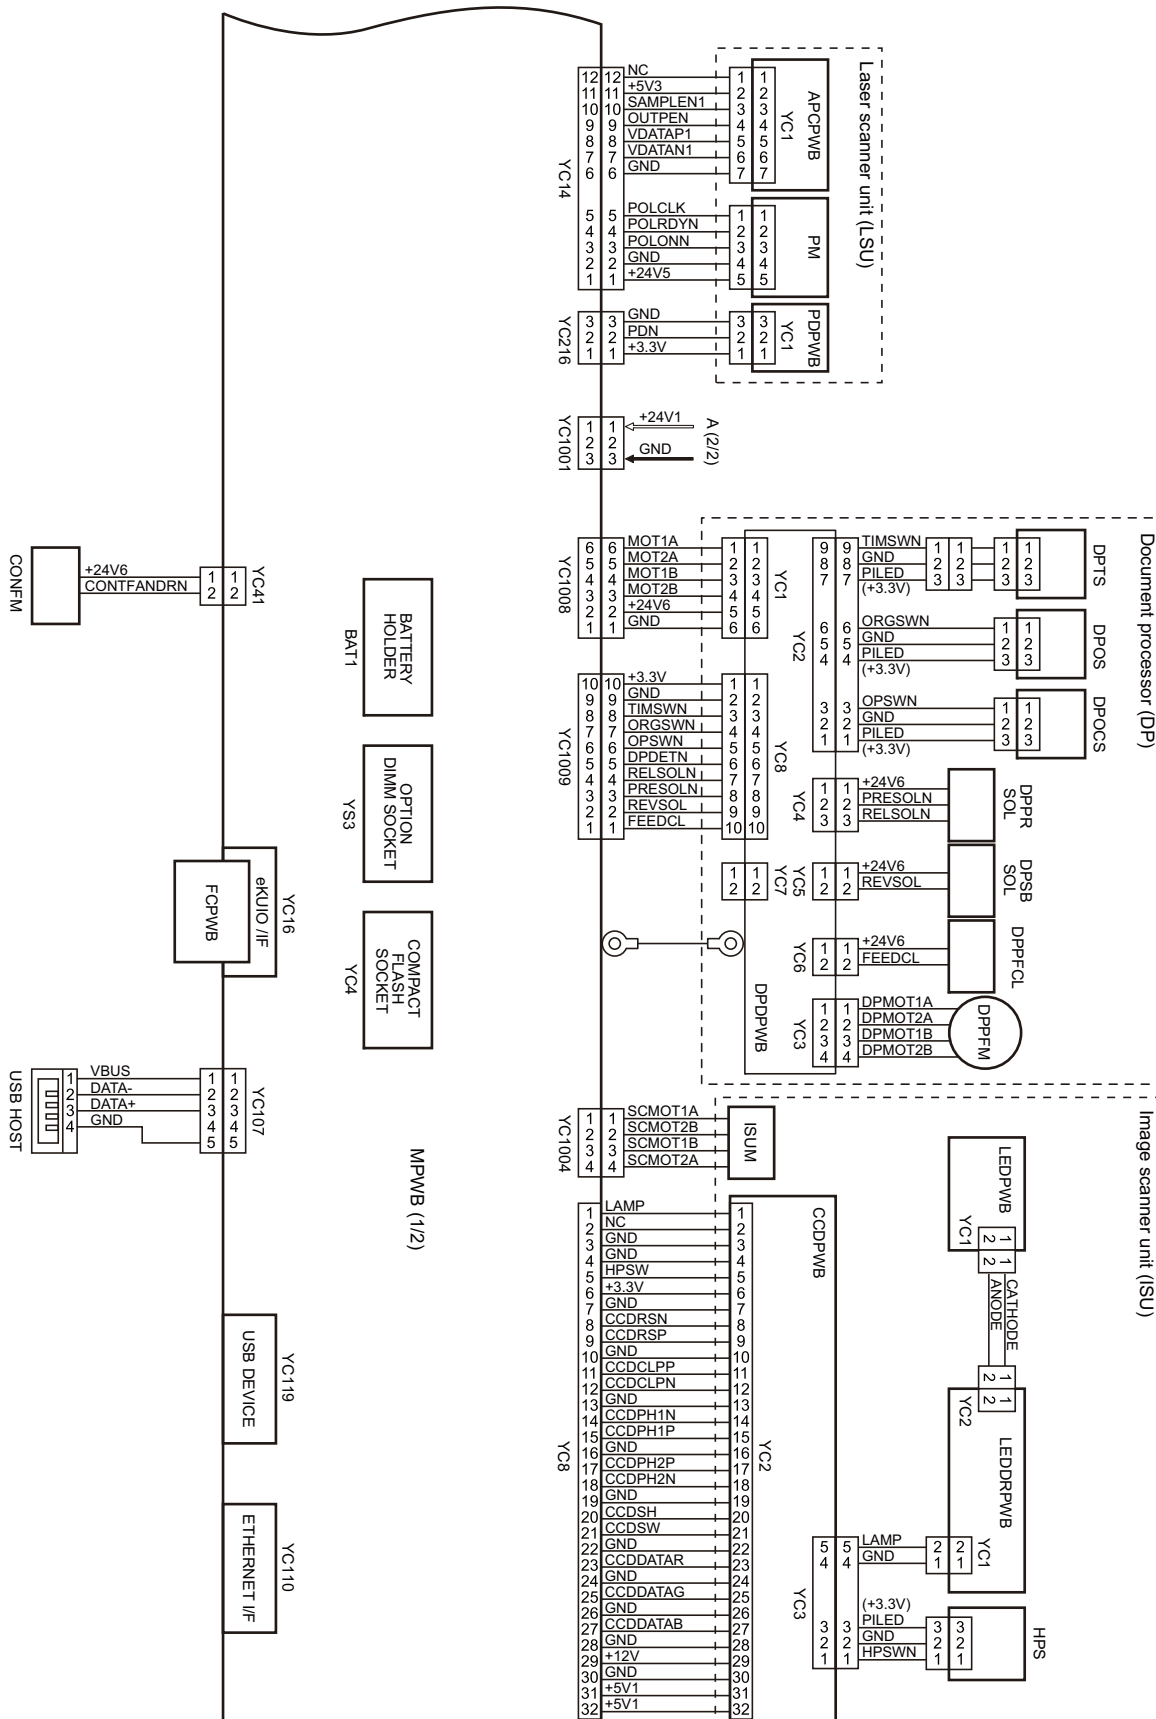

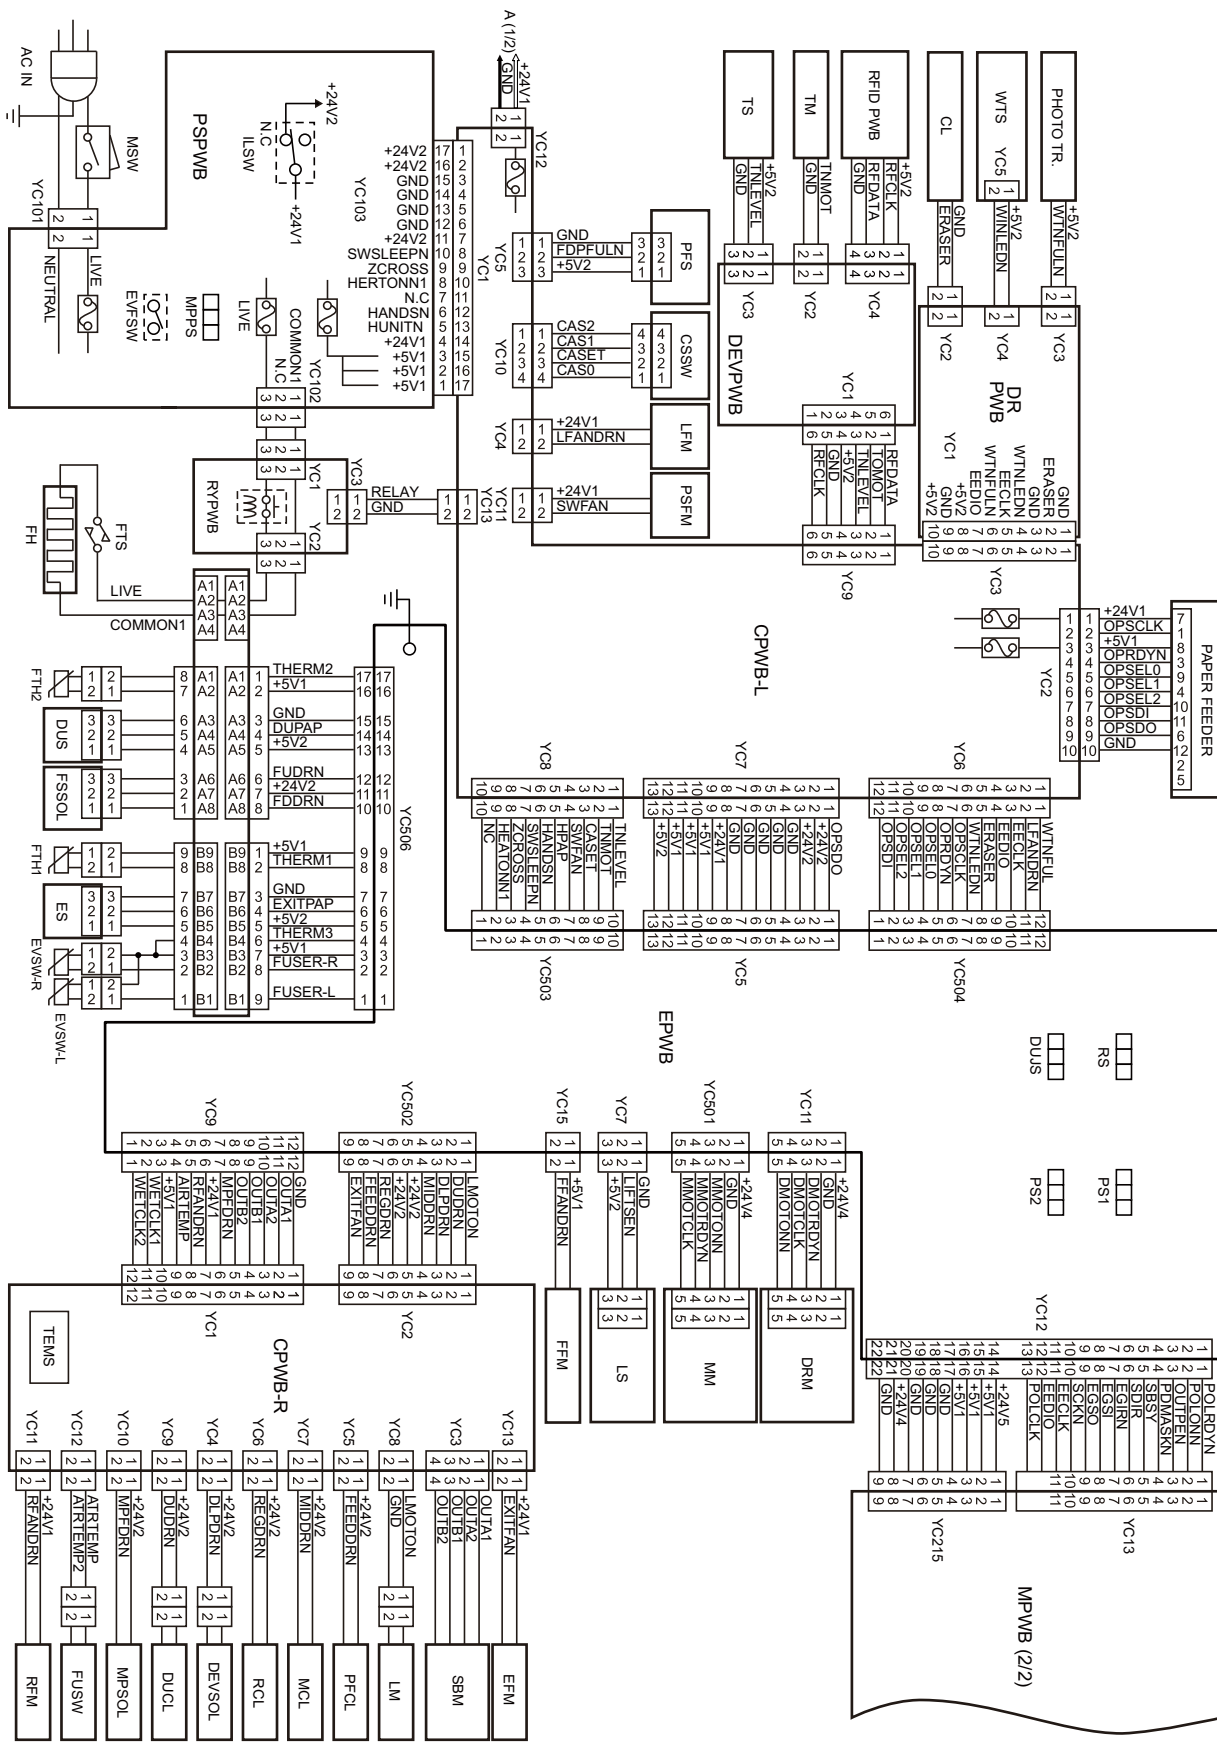

## (2) Repetitive defects gauge

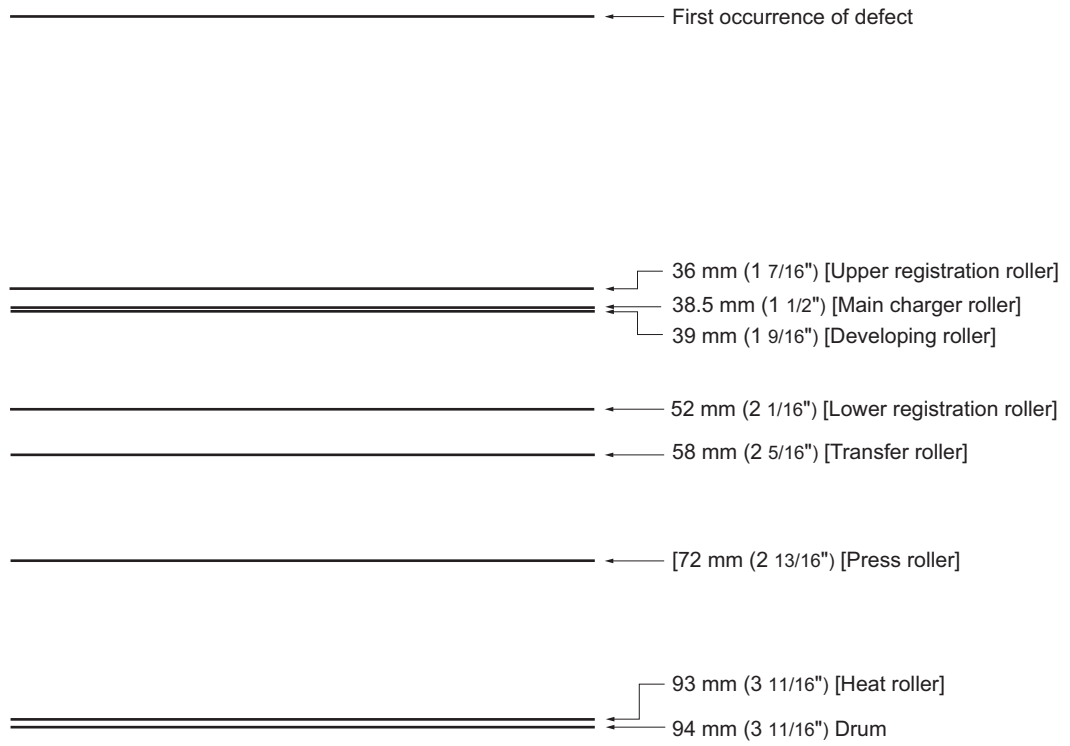

**(3) Maintenance kits**

<b>Maintenance part name</b>		<b>Parts No.</b>	<b>Alternative part No.</b>
<b>Name used in service</b>	<b>Name used in parts list</b>		
Maintenance kit (300,000 pages)	MK-350 B/MAINTENANCE KIT (OPTION)	1702LX7US0 1702LX8AS0 1702LX8NL0	072LX7US 072LX8AS 072LX8NL
Drum unit	DK-320	-	-
Developing unit	DV-350(E) B	-	-
	DV-352(U) B	-	-
	DV-354(AO) B	-	-
Fuser unit	FK-350(E)	-	-
	FK-350(U)	-	-
Retard roller assembly	RETARD ROLLER ASSY	-	-
Paper feed assembly	FEED HOLDER ASSY	-	-
Separation brush unit	DC BRUSH ASSY	-	-
Transfer roller	ROLLER TRANSFER ASSY	-	-
Maintenance kit (150,000 pages)	MK-370/MAINTENANCE KIT (OPTION)	1702LX0UN0	072LX0UN
DP forwarding pulley assembly	-	-	-
DP separation pad assembly	-	-	-

## (4) Firmware Environment Commands

The printer maintains a number of printing parameters in its memory. These parameters may be changed permanently with the FRPO (Firmware RePrOgram) commands.

This section provides information on how to use the FRPO command and its parameters using examples.

### Using FRPO Commands for Reprogramming Firmware

The current settings of the FRPO parameters are listed as optional values on the service status page.

Note: Before changing any FRPO parameter, print out a service status page, so you will know the parameter values before the changes are made. To return FRPO parameters to their factory default values, send the FRPO INIT (FRPO-INITialize) command.(!R! FRPO INIT; EXIT;)

The FRPO command is sent to the printer in the following sequence:

!R! FRPO parameter, value; EXIT;

Example: Changing emulation mode to PC-PR201/65A

!R! FRPO P1, 11; EXIT;

### FRPO Parameters

Environment	Parameter	Values	Factory setting
Top margin	A1	Integer value in inches	0
	A2	Fraction value in 1/100 inches	0
Left margin	A3	Integer value in inches	0
	A4	Fraction value in 1/100 inches	0
Page length	A5	Integer value in inches	16
	A6	Fraction value in 1/100 inches	61
Page width	A7	Integer value in inches	16
	A8	Fraction value in 1/100 inches	61
Default pattern resolution	B8	0: 300 dpi 1: 600 dpi	0
Page orientation	C1	0: Portrait 1: Landscape	0
Default font No. *	C2	Middle two digits of power-up font	0
	C3	Last two digits of power-up font	0
	C5	First two digits of power-up font	0
PCL font switch	C8	0:HP compatibility mode (Characters higher than 127 are not printed.) 32:Conventional mode (Characters higher than 127 are printed. Supported symbol sets: ISO-60 Norway [00D], ISO-15 Italian [00I], ISO-11 Sweden [00S], ISO-6 ASCII [00U], ISO-4 U.K. [01E], ISO-69 France [01F], ISO-21 Germany [01G], ISO-17 Spain [02S], Symbol [19M] <sup>a</sup> )	0
Print density	D4	Number from 1 (Light) to 5 (Dark)	3
Total host buffer size	H8	0 to 99 in units of the size defined by FRPO S5	5
Form feed time-out value	H9	Value in units of 5 seconds (0 to 99).	1



Environment	Parameter	Values	Factory setting
Setting of AGFA	I6	Place of 0: Setting of memory of rasterizer of AGFA Place of ten: Font cache mode of FM	0
KIR mode	N0	0: Off 2: On	2
Duplex binding	N4	0: Off 1: Long edge 2: Short edge	0
Sleep timer time-out time	N5	1 to 240 minutes [0: Off]	15
Ecoprint level	N6	0: Off 2: On	0
Function switch in Duplex mode	N7	0: It skips to next page 1: Disregard	0
Default emulation mode	P1	0: Line Printer 1: IBM Proprinter X24E 2: Diablo 630 5: Epson LQ-850 6: PCL 6 9: KPDL	6
Carriage-return action *	P2	0: Ignores 0x0d 1: Carriage-return 2: Carriage-return + linefeed	1
Linefeed action *	P3	0: Ignores 0x0d 1: Linefeed 2: Linefeed + carriage-return	1
Automatic emulation sensing (For KPDL3)	P4	0: AES disabled 1: AES enabled	0
Alternative emulation (For KPDL3)	P5	Same as the P1 values except that 9 is ignored.	6
Automatic emulation switching trigger (For KPDL3)	P7	0: Page eject commands 1: None 2: Page eject and Prescribe EXIT 3: Prescribe EXIT 4: Formfeed (^L) 6: Page eject, Prescribe EXIT and formfeed 10: Page eject commands; if AES fails, resolves to KPDL	10
Command recognition character	P9	ASCII code of 33 to 126	82 (R)

Environment	Parameter	Values	Factory setting
Default paper size	R2	0: Size of the default paper cassette (See R4.) 1: Monarch (3-7/8 × 7-1/2 inches) 2: Business (4-1/8 × 9-1/2 inches) 3: International DL (11 × 22 cm) 4: International C5 (16.2 × 22.9 cm) 5: Executive (7-1/4 × 10-1/2 inches) 6: US Letter (8-1/2 × 11 inches) 7: US Legal (8-1/2 × 14 inches) 8: A4 (21.0 × 29.7 cm) 9: JIS B5 (18.2 × 25.7 cm) 13: ISO A5 14: A6 (10.5 × 14.8 cm) 15: JIS B6 (12.8 × 18.2 cm) 16: Commercial #9 (3-7/8 × 8-7/8 inches) 17: Commercial #6 (3-5/8 × 6-1/2 inches) 18: ISO B5 (17.6 × 25 cm) 19: Custom (11.7 × 17.7 inches)f 20: B4 → A4 reduces 21: A3 → A4 reduces 22: A4 → A4 98% reduces 23: Stock form → A4 reduces 31: Hagaki (10 × 14.8 cm)f 32: Ofuku-Hagaki (14.8 × 20 cm)f 33: Officio II 40: 16K 50: Statement 51: Folio 52: Youkei 2 53: Youkei 4	0
Margin setting of emulation	R3	0: Interchangeable to HP 1: All PCL print area	0
Default cassette	R4	0: Multi-purpose tray 1 1: Cassette 1 2: Cassette 2 3: Cassette 3 4: Cassette 4	1
MP tray paper size	R7	Same as the R2 values except: 0	8 (A4)
A4/letter equation	S4	0: Off 1: On	0
Host buffer size	S5	0: 10kB (x H8) 1: 100kB (x H8) 2: 1024kB (x H8)	1
RAM disk size	S6	1 to 1024 MB	400
RAM disk mode	S7	0: Off 1: On	0

Environment	Parameter	Values	Factory setting
Wide A4	T6	0:Off 1:On	0
Line spacing *	U0	Lines per inch (integer value)	6
Line spacing *	U1	Lines per inch (fraction value)	0
Character spacing *	U2	Characters per inch (integer value)	10
Character spacing *	U3	Characters per inch (fraction value)	0
KPDL interpreter mode according to I/F	U4	0: ASCII (text mode) 1: Binary (binary mode)	1
Country code	U6	0: US-ASCII 1: France 2: Germany 3: UK 4: Denmark 5: Sweden 6: Italy 7: Spain 8: Japan 9: US Legal 10: IBM PC-850 (Multilingual) 11: IBM PC-860 (Portuguese) 12: IBM PC-863 (Canadian French) 13: IBM PC-865 (Norwegian) 14: Norway 15: Denmark 2 16: Spain 2 17: Latin America 21: US ASCII (U7=50 SET) 77: HP Roman-8 (U7=52 SET)	41
Code set at power up in daisywheel emulation	U7	0: Same as the default emulation mode (P1) 1: IBM 6: IBM PC-8 50: US ASCII (U6=21 SET) 52: HP Roman-8 (U6=77 SET)	53
Font pitch for fixed pitch scalable font	U8	Integer value in cpi: 0 – 99	10
	U9	Fraction value in 1/100 cpi: 0 – 99	0
Font height for the default scalable font *	V0	Integer value in 100 points: 0–9	0
	V1	Integer value in points: 0–99	12
	V2	Fraction value in 1/100 points: 0, 25, 50, 75	0
Default scalable font *	V3	Name of typeface of up to 32 characters, enclosed with single or double quotation marks	Courier

Environment	Parameter	Values	Factory setting
Default weight (courier and letter Gothic)	V9	0: Courier = darkness Letter Gothic = darkness 1: Courier = regular letter Gothic = darkness 4: Courier = darkness Letter Gothic = regular 5: Courier = regular letter Gothic = regular	5
Paper type for the MP tray	X0	1: Plain 1 2: Transparency 3: Preprinted 4: Label 5: Bond 6: Recycle 7: Vellum 9: Letterhead 10: Color 11: Prepunched 12: Envelope 13: Cardstock 16: Thick 17: High Quality 21: Custom1 22: Custom2 23: Custom3 24: Custom4 25: Custom5 26: Custom6 27: Custom7 28: Custom8	1
Paper type for paper cassettes 1	X1	1: Plain 3: Preprinted 5: Bond 6: Recycled 9: Letterhead 10: Color 11: Prepunched 17: High Quality 21: Custom1 22: Custom2 23: Custom3 24: Custom4 25: Custom5 26: Custom6 27: Custom7 28: Custom8	1

Environment	Parameter	Values	Factory setting
Paper type for paper cassettes 2 to 4	X2	1: Plain	1
	X3	3: Preprinted	
	X4	5: Bond	
		6: Recycled	
		9: Letterhead	
		10: Color	
		11: Prepunched	
		17: High Quality	
		21: Custom1	
		22: Custom2	
		23: Custom3	
		24: Custom4	
		25: Custom5	
		26: Custom6	
	27: Custom7		
	28: Custom8		
PCL paper source	X9	0: Performs paper selection depending on media type. 1: Performs paper selection depending on paper sources.	0
Automatic continue for 'Press GO'	Y0	0:Off 1:On	0
Automatic continue timer	Y1	number from 0 to 99 in increments of 5 seconds	6 (30seconds)
Error message for device error	Y3	0:Not Detect 1:Detect	127
Duplex operation for specified paper type (Prepunched, Preprintedand Letter-head)	Y4	0:Off 1:On	0
Default operation for PDF direct printing	Y5	0: Enlarges or reduces the image to fit in the current paper size. Loads paper from the current paper cassette. 1: Through the image. Loads paper which is the same size as the image. 2: Enlarges or reduces the image to fit in the current paper size. Loads Letter, A4 size paper depending on the image size. 3: Through the image. Loads Letter, A4 size paper depending on the image size. 8: Through the image. Loads paper from the current paper cassette. 9: Through the image. Loads Letter, A4 size paper depending on the image size. 10: Enlarges or reduces the image to fit in the current paper size. Loads Letter, A4 size paper depending on the imagesize.	0

- a. Characters higher than 127 are printed regardless of the C8 value. However, setting C8 to 0 does not print character code 160.

\*. Ignored in some emulation modes.

## (5) Maintenance Commands

This section provides information on how to use the maintenance command and its parameters using examples.

### Adjusting the print start timing (alternative command for the maintenance mode U034)

#### Description

Adjusts the leading edge registration or left edge.

#### Purpose


Make the adjustment if there is a regular error between the leading edges of the copy image and original.

Make the adjustment if there is a regular error between the left edges of the copy image and original.


Format	!R! KCFG"PFRC",#1 ,#2 ,#3;	
Parameter	#1	Paper source number 0: MP tray 2-6 : Cassette2-6 100: Duplex (e.g. landscape images short-edge bind) 200: Rotated duplex (e.g. portrait images long-edge bind)
	#2	Edge to adjust 1: Leading edge 2: Left edge
	#3	Adjustable range (-128 to +127) number of dot in 600dpi

#### Example: Set the leading edge of MP tray to +30 dots


```
!R! KCFG "PFRC",0,1,30;EXIT;
```

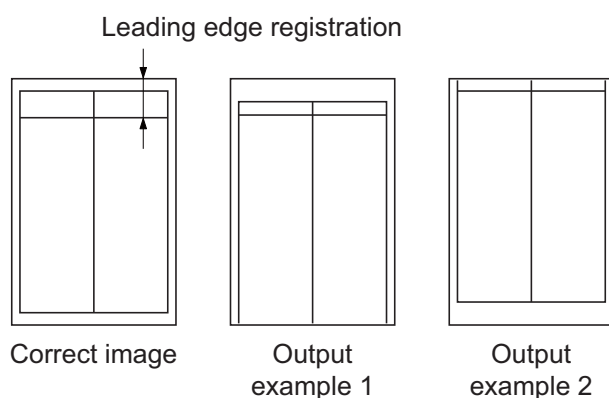


Left edge of printing

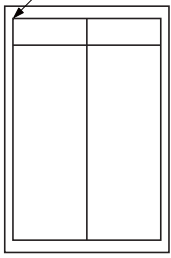

Correct image

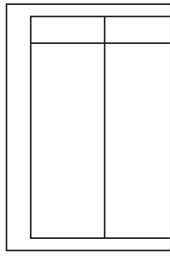

Output example 1

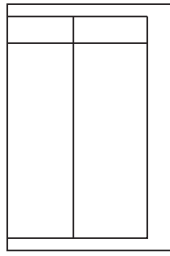

Output example 2

**Adjusting the scanner magnification (alternative command for the maintenance mode U065)**

**Description**

Adjusts the magnification of the original scanning.

**Purpose**


Make the adjustment if the magnification in the main scanning direction is incorrect.

Make the adjustment if the magnification in the auxiliary scanning direction is incorrect.


<b>Format</b>	!R! KCFG "SCAN",8, #1,#2;EXIT;	
<b>Parameter</b>	#1	1: Y SCAN ZOOM Scanner magnification in the main scanning direction 2: X SCAN ZOOM Scanner magnification in the auxiliary scanning direction
	#2	#1=1: Adjustable range: -32 to 127 (in 0.1% increment) (0: default) #2=2 : Adjustable range: -25 to 25 (in 0.1% increment) (0: default)

**Example: Y SCAN ZOOM set to 55, X SCAN ZOOM set to 10**

!R! KCFG "SCAN",8,1,55; KCFG "SCAN",8,2,10;EXIT;

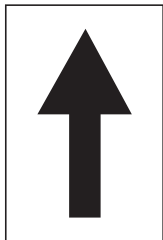

Original

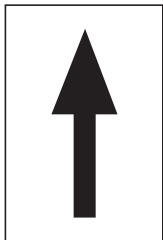


Copy example 1




Copy example 2


Magnified in the main scanning direction

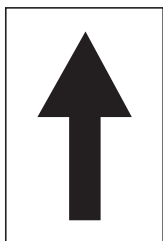

Original

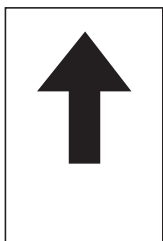

Copy example 1

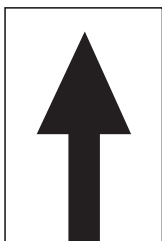

Copy example 2

Magnified in the auxiliary scanning direction



## Adjusting the scanner leading edge registration (alternative command for the maintenance U066)

### Description

Adjusts the scanner leading edge registration of the original scanning.


### Purpose

Make the adjustment if there is a regular error between the leading edges of the copy image and original.

<b>Format</b>	!R! KCFG "SCAN",5,#1,#2;EXIT;	
<b>Parameter</b>	#1	1: Scanner leading edge registration 2: Scanner leading edge registration of rotated scan
	#2	Adjustable range: -45 to 45 (in 0.086mm increment) (0: default)

### Example: Scanner leading edge registration set to 10 to increase 0.86mm

!R! KCFG "SCAN",5,1,"10";EXIT;

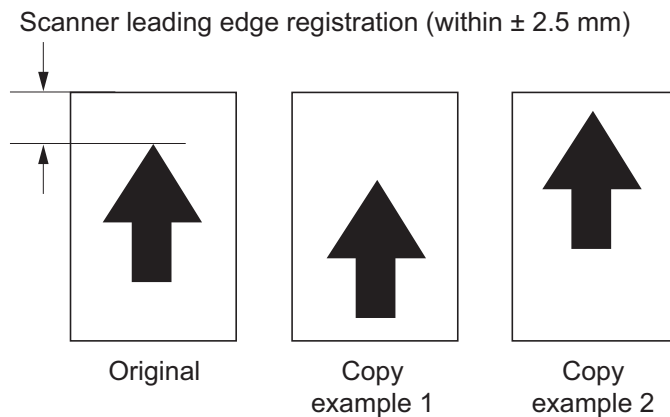

## Adjusting the scanner center line (alternative command for the maintenance mode U067)

### Description

Adjusts the scanner center line of the original scanning.

### Purpose


Make the adjustment if there is a regular error between the center lines of the copy image and original.

<b>Format</b>	!R! KCFG "SCAN",6, #1;#2;EXIT;	
<b>Parameter</b>	#1	1: Scanner center line 2: Scanner center line of rotated scan
	#2	#1=1: Adjustable range: -70 to 70 (in 0.086mm increment) (0: default) #1=2: Adjustable range: -40 to 40 (in 0.086mm increment) (0: default)

### Example: Scanner leading edge registration set to 20 to increase 1.72mm

!R! KCFG "SCAN",6,1,20;EXIT;

Scanner center line (within  $\pm 2.0$  mm)

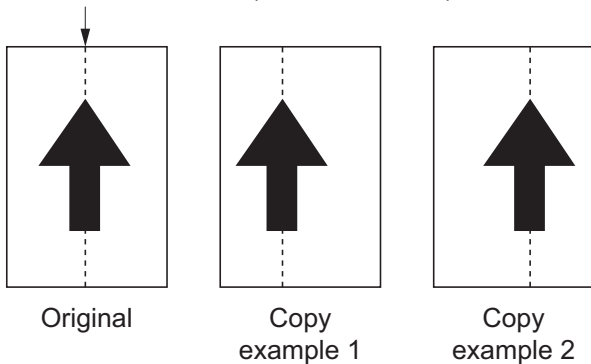

## Adjusting the scanning position for originals from the DP (alternative command for the maintenance mode U068)

### Description

Adjusts the position for scanning originals from the DP. Performs the test copy at the four scanning positions after adjusting.

### Purpose

Used when the image fogging occurs because the scanning position is not proper when the DP is used. Execute KCFG "EESS",4, 107, 1, "#1"; command to adjust the timing of DP leading edge when the scanning position is changed.

<b>Format</b>	!R! KCFG "SCAN",9, #1,#2;EXIT;	
<b>Parameter</b>	#1	1: DP READ Starting position adjustment for scanning originals 2: BLACK LINE Scanning position for the test copy originals
	#2	#1=1: Adjustable range: -33 to 33 (in 0.086mm increment) (0: default) #1=2: Adjustable range: 0 to 3 (in 0.22mm increment) (0: default)

### Example: DP READ set to 15, BLACK LINE set to 3

!R! KCFG "SCAN",9,1,15; KCFG "SCAN",9,2,3;EXIT;

## Adjusting the DP magnification (alternative command for the maintenance mode U070)

### Description

Adjusts the DP original scanning speed.

### Purpose


Make the adjustment if the magnification is incorrect in the auxiliary scanning direction when the DP is used.

<b>Format</b>	!R! KCFG "SCAN",4, #1;#2;EXIT;	
<b>Parameter</b>	#1	2: CONVEYING SPEED Magnification in the auxiliary scanning direction
	#2	Adjustable range: --25 to 25 (in 0.1% increment) (0: default)


### Example: DP scanning magnification set to 20 to increase 2%

!R! KCFG "SCAN",4,2,20;EXIT;


### Leading edge registration

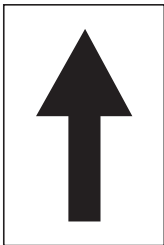

Original

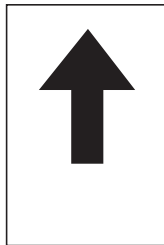

Copy  
example 1

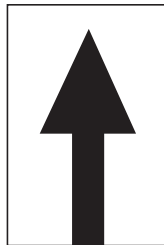

Copy  
example 2

## Adjusting the DP scanning timing (alternative command for the maintenance mode U071)

### Description

Adjusts the DP original scanning timing.


### Purpose

Make the adjustment if there is a regular error between the leading or trailing edges of the original and the copy image when the DP is used.


<b>Format</b>	!R! KCFG "SCAN",2,#1,#2;EXIT;	
<b>Parameter</b>	#1	1: FRONT HEAD Leading edge registration (first page) 2: FRONT TAIL Trailing edge registration (first page) 3: BACK HEAD Leading edge registration (second page) 4: BACK TAIL Trailing edge registration (second page) 5: ROTATE Leading edge registration (rotate scan)
	#2	#1=1: Adjustable range: -32 to 32 (in 0.196mm increment) (0: default) #1=2: Adjustable range: -32 to 32 (in 0.196mm increment) (0: default) #1=3: Adjustable range: -45 to 45 (in 0.196mm increment) (0: default) #1=4: Adjustable range: -45 to 45 (in 0.196mm increment) (0: default) #1=5: Adjustable range: -128 to 128 (in 0.196mm increment) (0: default)

**Example: FRONT HEAD set to 10, FRONT TAIL set to 15, BACK HEAD set to 10, BACK TAIL 15**  
!R! KCFG "SCAN",2,1,10; KCFG "SCAN",2,2,15; KCFG "SCAN",2,3,10; KCFG "SCAN",2,4,15;EXIT;


### Leading edge registration

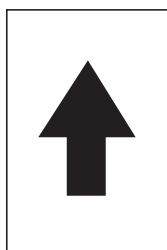

Original

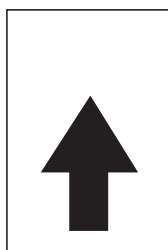


Copy example 1

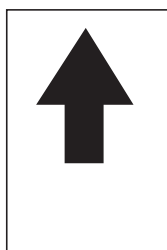


Copy example 2

### Trailing edge registration

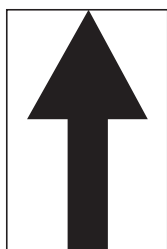

Original

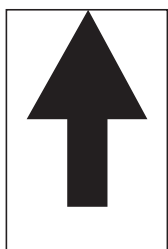

Copy example 1



Copy example 2

## Adjusting the DP center line (alternative command for the maintenance mode U072)

### Description

Adjusts the scanning center line for the DP original.

### Purpose


Make the adjustment if there is a regular error between the centers of the original and the copy image when the DP is used.

<b>Format</b>	!R! KCFG "SCAN",3, #1,#2;EXIT;	
<b>Parameter</b>	#1	1: FRONT Center line (first page) 2: BACK Center line (second page) 3: ROTATE Center line (rotated scan)
	#2	Setting range: -39 to 39 (in 0.086mm increment) (initial: 0)


### Example: FRONT set to 15, BACK set to 3

!R! KCFG "SCAN",3,1,15; KCFG "SCAN",3,2,3;EXIT;


### DP center line

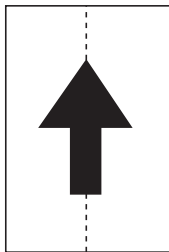

Original

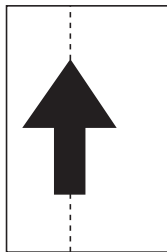

Copy  
example 1

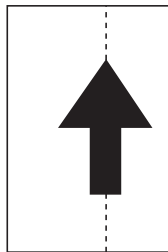

Copy  
example 2

## **KYOCERA MITA EUROPE B.V.**

Bloemlaan 4, 2132 NP Hoofddorp,  
The Netherlands  
Phone: +31.20.654.0000  
Home page: <http://www.kyoceramita-europe.com>  
Email: [info@kyoceramita-europe.com](mailto:info@kyoceramita-europe.com)

**KYOCERA MITA NEDERLAND B.V.**  
Beechavenue 25, 1119RA Schiphol-Rijk  
The Netherlands  
Phone: +31.20.58.77.200

**KYOCERA MITA (UK) LTD**  
8 Beacontree Plaza  
Gillette Way Reading Berks RG2 0BS,  
U.K.  
Phone: +44.1189.311.500

**KYOCERA MITA ITALIA S.p.A.**  
Via G. Verdi, 89 / 91, 20063 Cernusco s/N  
Milano, Italy  
Phone: +39.02.92179.1

**S.A. KYOCERA MITA BELGIUM N.V.**  
Sint-Martinusweg 199-201, 1930 Zaventem,  
Belgium  
Phone: +32.2.720.9270

**KYOCERA MITA FRANCE S.A.**  
Espace Technologique de St Aubin  
Route de l' Orme  
91195 Gif-sur-Yvette CEDEX, France  
Phone: +33.1.6985.2600

**KYOCERA MITA ESPAÑA S.A.**  
Edificio Kyocera, Avda de Manacor No. 2,  
28290 Las Matas (Madrid),  
Spain  
Phone: +34.91.631.8392

**KYOCERA MITA FINLAND OY**  
Atomitie 5C, 00370 Helsinki,  
Finland  
Phone: +358.9.4780.5200

**KYOCERA MITA (SCHWEIZ)**  
Hohlstrasse 614, 8048 Zürich  
Switzerland  
Phone: +41.44.908.4949

**KYOCERA MITA DEUTSCHLAND GMBH**  
Otto-Hahn-Str. 12 D-40670 Meerbusch,  
Germany  
Phone: +49.2159.918.0

**KYOCERA MITA GMBH AUSTRIA**  
Eduard-Kittenberger-Gasse 95,  
1230 Wien,  
Austria  
Phone: +43.1.86338

**KYOCERA MITA SVENSKA AB**  
Esbogatan 16B 164 75 Kista,  
Sweden  
Phone: +46.8.546.55000

**KYOCERA MITA NORGE**  
Postboks 150 Oppsal, NO 0619 Oslo  
Olaf Helsetsvai 6, NO 0694 Oslo,  
Norway  
Phone: +47.22.62.73.00

**KYOCERA MITA DANMARK A/S**  
Ejby Industrivej 60, DK-2600 Glostrup,  
Denmark  
Phone: +45.7022.3880

**KYOCERA MITA PORTUGAL LDA.**  
Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisboa,  
Portugal  
Phone: +351.21.843.6780

**KYOCERA MITA SOUTH AFRICA (PTY) LTD.**  
49 Kyalami Boulevard,  
Kyalami Business Park Midrand,  
South Africa  
Phone: +27.(0)11.540.2600

## **KYOCERA MITA AMERICA, INC.**

Headquarters:  
225 Sand Road,  
Fairfield, New Jersey 07004-0008,  
U.S.A.  
Phone: (973) 808-8444

**KYOCERA MITA AUSTRALIA PTY. LTD.**  
Level 3, 6-10 Talavera Road, North Ryde,  
N.S.W. 2113 Australia  
Phone: (02) 9888-9999

**KYOCERA MITA NEW ZEALAND LTD.**  
1-3 Parkhead Place, Albany  
P.O. Box 302 125 NHPC, Auckland,  
New Zealand  
Phone: (09) 415-4517

## **KYOCERA MITA Asia Limited**

16/F., Mita Centre,  
552-566, Castle Peak Road,  
Tsuen Wan, New Territories, Hong Kong  
Phone: (852)-2610-2181

## **KYOCERA MITA Corporation**

2-28, 1-chome, Tamatsukuri, Chuo-ku  
Osaka 540-8585, Japan  
Phone: (06) 6764-3555  
<http://www.kyoceramita.com>

©2011 KYOCERA MITA Corporation

 **KYOCERA** is a trademark of Kyocera Corporation

## KYOCERA MITA AMERICA, INC.

### **Headquarters:**

225 Sand Road,  
Fairfield, New Jersey 07004-0008  
TEL : (973) 808-8444  
FAX : (973) 882-6000

### **New York Branch:**

30-30 47th Avenue  
Long Island City, NY 11101  
TEL : (718) 289-2500  
FAX : (718) 289-2501

### **Northeastern Region:**

225 Sand Road,  
Fairfield, New Jersey 07004-0008  
TEL : (973) 808-8444  
FAX : (973) 882-4401

### **Midwestern Region:**

201 Hansen Court Suite 119  
Wood Dale, Illinois 60191  
TEL : (630) 238-9982  
FAX : (630) 238-9487

### **Western Region:**

14101 Alton Parkway,  
Irvine, California 92618-7006  
TEL : (949) 457-9000  
FAX : (949) 457-9119

### **Southeastern Region:**

3100 Breckinridge Blvd. NW Building 100,  
Suite 105 Duluth, Georgia 30096  
TEL : (770) 729-9786  
FAX : (770) 729-9873

### **Southwestern Region:**

2825 West Story Road,  
Irving, Texas 75038-5299  
TEL : (972) 550-8987  
FAX : (972) 570-4704

### **National Operation Center & National Training Center:**

2825 West Story Road,  
Irving, Texas 75038-5299  
TEL : (972) 659-0055  
FAX : (972) 570-5816

### **Latin America Division:**

8240 N.W. 52nd. Terrace Dawson Building,  
Suite 108 Miami, Florida 33166  
TEL : (305) 421-6640  
FAX : (305) 421-6666

## KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga,  
Ontario L5T 1S8, Canada  
TEL : (905) 670-4425  
FAX : (905) 670-8116

## KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407  
Col. Santa Inés,  
Azcapotzalco México,  
D.F. 02130, México  
TEL : (55) 5383-2741  
FAX : (55) 5383-7804

## KYOCERA MITA Asia Limited

16/F., Mita Centre,  
552-566, Castle Peak Road,  
Tsuen Wan, New Territories, Hong Kong  
Phone: (852)-2610-2181

### **KYOCERA MITA (Thailand) Corp., Ltd.**

335 Ratchadapisek Road, Bangsue,  
Bangkok, 10800, Thailand  
Phone: (66)-2-586-0333

### **KYOCERA MITA Singapore Pte Ltd.**

121 Genting Lane, 3rd Level,  
Singapore 349572  
Phone: (65)-6741-8733

### **KYOCERA MITA Hong Kong Li**

16/F., Mita Centre,  
552-566, Castle Peak Road,  
Tsuen Wan, New Territories,  
Hong Kong  
Phone: (852)-2429-7422

6F., No.37, Sec. 3, Minquan E. Rd.,  
Zhongshan Dist., Taipei 104, Taiwan R.O.C.  
Phone: (886)-2-2507-6709