



**RICOH UNIVERSITY**

Learning ♦ Knowledge ♦ Performance



**B230/B237/D042**  
**SERVICE MANUAL**

002722MIU

**LANIER RICOH SAVIN**





**B230/B237D042**  
**SERVICE MANUAL**

**LANIER**  
**RICOH**  
**SAVIN®**





**RICOH UNIVERSITY**  
Learning ♦ Knowledge ♦ Performance

# **B230/B237/D042**

# **SERVICE MANUAL**

002722MIU

**LANIER RICOH SAVIN®**



It is the reader's responsibility when discussing the information contained within this document to maintain a level of confidentiality that is in the best interest of Ricoh Americas Corporation and its member companies.

***NO PART OF THIS DOCUMENT MAY BE REPRODUCED IN ANY FASHION AND DISTRIBUTED WITHOUT THE PRIOR PERMISSION OF RICOH AMERICAS CORPORATION.***

All product names, domain names or product illustrations, including desktop images, used in this document are trademarks, registered trademarks or the property of their respective companies.

They are used throughout this book in an informational or editorial fashion only and for the benefit of such companies. No such use, or the use of any trade name, or web site is intended to convey endorsement or other affiliation with Ricoh products.





## **WARNING**

*The Service Manual contains information regarding service techniques, procedures, processes and spare parts of office equipment distributed by Ricoh Americas Corporation. Users of this manual should be either service trained or certified by successfully completing a Ricoh Technical Training Program.*

*Untrained and uncertified users utilizing information contained in this service manual to repair or modify Ricoh equipment risk personal injury, damage to property or loss of warranty protection.*

*Ricoh Americas Corporation*



# LEGEND

| PRODUCT CODE | COMPANY   |        |                 |       |
|--------------|-----------|--------|-----------------|-------|
|              | GESTETNER | LANIER | RICOH           | SAVIN |
| B230         | DSc525    | LD425c | Aficio MP C2500 | C2525 |
| B237         | DSc530    | LD430c | Aficio MP C3000 | C3030 |
| D042         | DSc520    | LD420c | Aficio MP C2000 | C2020 |

# DOCUMENTATION HISTORY

| REV. NO. | DATE    | COMMENTS          |
|----------|---------|-------------------|
| *        | 06/2006 | Original Printing |
| 1        | 08/2007 | Added D042        |



# Read This First

## Safety Notices

### Important Safety Notices

#### Prevention of Physical Injury

1. Before disassembling or assembling parts of the copier and peripherals, make sure that the copier power cord is unplugged.
2. The wall outlet should be near the copier and easily accessible.
3. If any adjustment or operation check has to be made with exterior covers off or open while the main switch is turned on, keep hands away from electrified or mechanically driven components.
4. The copier drives some of its components when it completes the warm-up period. Be careful to keep hands away from the mechanical and electrical components as the copier starts operation.
5. The inside and the metal parts of the fusing unit become extremely hot while the copier is operating. Be careful to avoid touching those components with your bare hands.

#### Health Safety Conditions

1. Toner and developer are non-toxic, but if you get either of them in your eyes by accident, it may cause temporary eye discomfort. Immediately wash eyes with plenty of water. If unsuccessful, get medical attention.
2. The copier, which use high voltage power source, can generate ozone gas. High ozone density is harmful to human health. Therefore, the machine must be installed in a well-ventilated room.

#### Observance of Electrical Safety Standards

The copier and its peripherals must be serviced by a customer service representative who has completed the training course on those models.

#### **WARNING**

- ☉ Keep the machine away from flammable liquids, gases, and aerosols. A fire or an explosion might occur.

#### **CAUTION**

- The Controller board on this machine contains a lithium battery. The danger of explosion exists if a battery of this type is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer. Discard batteries in accordance with the manufacturer's instructions and local regulations.
- The optional fax and memory expansion units contain lithium batteries, which can

explode if replaced incorrectly. Replace only with the same or an equivalent type recommended by the manufacturer. Do not recharge or burn the batteries. Used batteries must be handled in accordance with local regulations.

#### Safety and Ecological Notes for Disposal

1. Do not incinerate toner bottles or used toner. Toner dust may ignite suddenly when exposed to an open flame.
2. Dispose of used toner, the maintenance unit which includes developer or the organic photoconductor in accordance with local regulations. (These are non-toxic supplies.)
3. Dispose of replaced parts in accordance with local regulations.
4. When keeping used lithium batteries in order to dispose of them later, do not put more than 100 batteries per sealed box. Storing larger numbers or not sealing them apart may lead to chemical reactions and heat build-up.

#### Laser Safety


The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical units in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

#### **WARNING**

- **Use of controls, or adjustment, or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.**





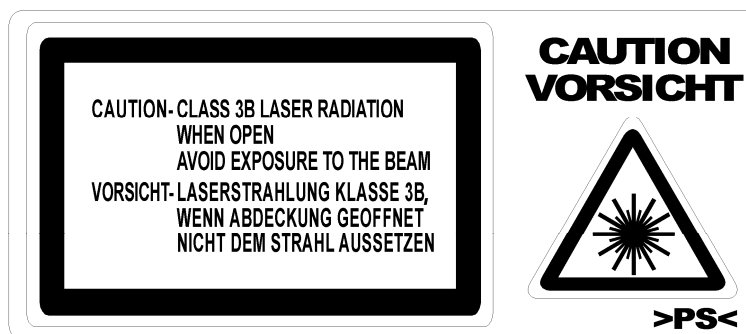

#### **WARNING**

- **WARNING:** Turn off the main switch before attempting any of the procedures in the Laser Optics Housing Unit section. Laser beams can seriously damage your eyes.
- **CAUTION MARKING:**




## Symbols, Abbreviations and Trademarks

This manual uses several symbols and abbreviations. The meaning of those symbols and abbreviations are as follows:

|   |                 |
|---|-----------------|
|  | See or Refer to |
|  | Clip ring       |
|  | Screw           |
|  | Connector       |
|  | Clamp           |
|  | E-ring          |
| SEF   | Short Edge Feed |
| LEF   | Long Edge Feed  |



**Short Edge Feed (SEF)**

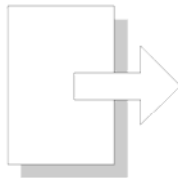

**Long Edge Feed (LEF)**

### Trademarks

Microsoft<sup>®</sup>, Windows<sup>®</sup>, and MS-DOS<sup>®</sup> are registered trademarks of Microsoft Corporation in the United States and /or other countries.

PostScript<sup>®</sup> is a registered trademark of Adobe Systems, Incorporated.

PCL<sup>®</sup> is a registered trademark of Hewlett-Packard Company.

Ethernet<sup>®</sup> is a registered trademark of Xerox Corporation.

PowerPC<sup>®</sup> is a registered trademark of International Business Machines Corporation.

Other product names used herein are for identification purposes only and may be trademarks of their respective companies. We disclaim any and all rights involved with those marks.





# B230/B237/D042

## TABLE OF CONTENTS

### INSTALLATION

---

|   |            |
|---|------------|
| <b>1. INSTALLATION .....</b>                  | <b>1-1</b> |
| 1.1 INSTALLATION REQUIREMENTS.....            | 1-1        |
| 1.1.1 ENVIRONMENT .....                       | 1-1        |
| 1.1.2 MACHINE LEVEL .....                     | 1-1        |
| 1.1.3 MACHINE SPACE REQUIREMENTS .....        | 1-2        |
| 1.1.4 POWER REQUIREMENTS.....                 | 1-2        |
| 1.2 OPTIONAL UNIT COMBINATIONS.....           | 1-3        |
| 1.2.1 MACHINE OPTIONS .....                   | 1-3        |
| 1.2.2 CONTROLLER OPTIONS .....                | 1-4        |
| 1.3 COPIER INSTALLATION.....                  | 1-5        |
| 1.3.1 POWER SOCKETS FOR PERIPHERALS.....      | 1-5        |
| 1.3.2 INSTALLATION FLOW CHART .....           | 1-6        |
| 1.3.3 ACCESSORY CHECK.....                    | 1-7        |
| 1.3.4 INSTALLATION PROCEDURE.....             | 1-9        |
| 1.3.5 MOVING THE MACHINE.....                 | 1-14       |
| 1.3.6 TRANSPORTING THE MACHINE .....          | 1-14       |
| 1.4 PAPER FEED UNIT (B800) .....              | 1-16       |
| 1.4.1 ACCESSORY CHECK.....                    | 1-16       |
| 1.4.2 INSTALLATION PROCEDURE.....             | 1-16       |
| 1.5 LCT (B801) .....                          | 1-20       |
| 1.5.1 ACCESSORY CHECK.....                    | 1-20       |
| 1.5.2 INSTALLATION PROCEDURE.....             | 1-20       |
| 1.6 AUTO REVERSE DOCUMENT FEEDER (B789) ..... | 1-24       |
| 1.6.1 COMPONENT CHECK .....                   | 1-24       |
| 1.6.2 INSTALLATION PROCEDURE.....             | 1-25       |
| 1.7 1-BIN TRAY UNIT (B790) .....              | 1-28       |
| 1.7.1 COMPONENT CHECK .....                   | 1-28       |
| 1.7.2 INSTALLATION PROCEDURE.....             | 1-28       |
| 1.8 SHIFT TRAY UNIT (B791) .....              | 1-31       |

|  |      |
|--|------|
| 1.8.1 COMPONENT CHECK .....                  | 1-31 |
| 1.8.2 INSTALLATION PROCEDURE.....            | 1-32 |
| 1.9 BRIDGE UNIT (B227) .....                 | 1-34 |
| 1.9.1 COMPONENT CHECK .....                  | 1-34 |
| 1.9.2 INSTALLATION PROCEDURE.....            | 1-34 |
| 1.10 500-SHEET FINISHER (B792).....          | 1-37 |
| 1.10.1 ACCESSORY CHECK.....                  | 1-37 |
| 1.10.2 INSTALLATION PROCEDURE.....           | 1-38 |
| 1.11 1000-SHEET FINISHER (B408).....         | 1-41 |
| 1.11.1 ACCESSORY CHECK.....                  | 1-41 |
| 1.11.2 INSTALLATION PROCEDURE.....           | 1-42 |
| 1.12 1000-SHEET BOOKLET FINISHER (B793)..... | 1-44 |
| 1.12.1 ACCESSORY CHECK.....                  | 1-44 |
| 1.12.2 INSTALLATION PROCEDURE.....           | 1-45 |
| 1.13 PUNCH UNIT .....                        | 1-49 |
| 1.13.1 COMPONENT CHECK .....                 | 1-49 |
| 1.13.2 INSTALLATION .....                    | 1-50 |
| 1.14 MECHANICAL COUNTER (NA ONLY).....       | 1-55 |
| 1.14.1 INSTALLATION PROCEDURE.....           | 1-55 |
| 1.15 MECHANICAL COUNTER (NA ONLY).....       | 1-56 |
| 1.15.1 INSTALLATION PROCEDURE.....           | 1-56 |
| 1.16 KEY COUNTER BRACKET .....               | 1-57 |
| 1.16.1 INSTALLATION PROCEDURE.....           | 1-57 |
| 1.17 KEY COUNTER INTERFACE UNIT.....         | 1-58 |
| 1.17.1 INSTALLATION PROCEDURE.....           | 1-58 |
| 1.18 ANTI-CONDENSATION HEATER (SCANNER)..... | 1-61 |
| 1.18.1 INSTALLATION PROCEDURE.....           | 1-61 |
| 1.19 TRAY HEATER .....                       | 1-62 |
| 1.19.1 INSTALLATION PROCEDURE.....           | 1-62 |
| 1.20 CONTROLLER OPTIONS .....                | 1-63 |
| 1.20.1 OVERVIEW.....                         | 1-63 |
| 1.20.2 SD CARD APPLI MOVE .....              | 1-64 |
| 1.20.3 POSTSCRIPT 3.....                     | 1-66 |
| 1.20.4 FILE FORMAT CONVERTER.....            | 1-67 |
| 1.20.5 IEEE1394 (FIREWIRE) .....             | 1-68 |
| 1.20.6 IEEE1284.....                         | 1-70 |

|   |      |
|---|------|
| 1.20.7 IEEE 802.11B (WIRELESS LAN).....                 | 1-71 |
| 1.20.8 BLUETOOTH.....                                   | 1-74 |
| 1.20.9 COPY DATA SECURITY UNIT.....                     | 1-75 |
| 1.20.10 DATA OVERWRITE SECURITY UNIT TYPE D (B735)..... | 1-76 |
| 1.20.11 USB HOST INTERFACE.....                         | 1-80 |
| 1.20.12 PICTBRIDGE.....                                 | 1-81 |
| 1.20.13 BROWSER UNIT TYPE B.....                        | 1-82 |
| 1.20.14 VM CARD TYPE C (JAVA PLATFORM).....             | 1-83 |
| 1.20.15 CHECK ALL CONNECTIONS.....                      | 1-84 |
| 1.21 REMOTE COMMUNICATIONS GATE INSTALLATION.....       | 1-85 |
| 1.22 FIERY E-3000 (B889).....                           | 1-87 |

## PREVENTIVE MAINTENANCE

---

|   |            |
|---|------------|
| <b>2. PREVENTIVE MAINTENANCE .....</b>        | <b>2-1</b> |
| 2.1 SETTINGS.....                             | 2-1        |
| 2.1.1 BEFORE REMOVING THE OLD PM PARTS.....   | 2-1        |
| 2.1.2 AFTER INSTALLING THE NEW PM PARTS.....  | 2-2        |
| 2.1.3 PREPARATION BEFORE OPERATION CHECK..... | 2-2        |
| 2.1.4 OPERATION CHECK.....                    | 2-2        |
| 2.2 MAINTENANCE TABLES.....                   | 2-3        |
| 2.2.1 PREVENTIVE MAINTENANCE TABLES.....      | 2-3        |
| 2.2.2 OTHERS IN MAINFRAME.....                | 2-8        |

## REPLACEMENT AND ADJUSTMENT

---

|  |            |
|--|------------|
| <b>3. REPLACEMENT AND ADJUSTMENT .....</b> | <b>3-1</b> |
| 3.1 BEFOREHAND.....                        | 3-1        |
| 3.2 SPECIAL TOOLS.....                     | 3-2        |
| 3.3 IMAGE ADJUSTMENT.....                  | 3-3        |
| 3.3.1 SCANNING.....                        | 3-3        |
| 3.3.2 ARDF.....                            | 3-4        |
| 3.3.3 REGISTRATION.....                    | 3-5        |
| 3.3.4 ERASE MARGIN ADJUSTMENT.....         | 3-6        |
| 3.3.5 COLOR REGISTRATION.....              | 3-7        |
| 3.3.6 PRINTER GAMMA CORRECTION.....        | 3-8        |
| 3.4 EXTERIOR COVERS.....                   | 3-14       |

|  |      |
|--|------|
| 3.4.1 FRONT DOOR.....                        | 3-14 |
| 3.4.2 LEFT COVER .....                       | 3-15 |
| 3.4.3 REAR COVER .....                       | 3-15 |
| 3.4.4 RIGHT REAR COVER .....                 | 3-16 |
| 3.4.5 OPERATION PANEL .....                  | 3-16 |
| 3.4.6 DUST FILTER.....                       | 3-17 |
| 3.5 SCANNER UNIT .....                       | 3-18 |
| 3.5.1 EXPOSURE GLASS.....                    | 3-18 |
| 3.5.2 ORIGINAL LENGTH/WIDTH SENSORS .....    | 3-19 |
| 3.5.3 EXPOSURE LAMP .....                    | 3-19 |
| 3.5.4 SCANNER MOTOR .....                    | 3-21 |
| 3.5.5 SENSOR BOARD UNIT (SBU).....           | 3-22 |
| 3.5.6 EXPOSURE LAMP STABILIZER.....          | 3-23 |
| 3.5.7 FRONT SCANNER WIRE.....                | 3-23 |
| 3.5.8 REAR SCANNER WIRE .....                | 3-26 |
| 3.5.9 TOUCH PANEL POSITION ADJUSTMENT .....  | 3-27 |
| 3.6 LASER OPTICS.....                        | 3-29 |
| 3.6.1 CAUTION DECAL LOCATION.....            | 3-29 |
| 3.6.2 LASER OPTICS HOUSING UNIT.....         | 3-29 |
| 3.6.3 POLYGON MIRROR MOTOR .....             | 3-34 |
| 3.7 IMAGE CREATION .....                     | 3-36 |
| 3.7.1 PCU .....                              | 3-36 |
| 3.7.2 DRUM UNIT AND DEVELOPMENT UNIT .....   | 3-36 |
| 3.7.3 TONER COLLECTION BOTTLE.....           | 3-40 |
| 3.7.4 TONER SUPPLY TUBE FAN.....             | 3-41 |
| 3.7.5 TONER PUMP UNIT.....                   | 3-41 |
| 3.7.6 TONER END SENSOR.....                  | 3-47 |
| 3.8 IMAGE TRANSFER .....                     | 3-48 |
| 3.8.1 IMAGE TRANSFER BELT UNIT.....          | 3-48 |
| 3.8.2 IMAGE TRANSFER BELT CLEANING UNIT..... | 3-49 |
| 3.8.3 IMAGE TRANSFER BELT .....              | 3-50 |
| 3.9 PAPER TRANSFER.....                      | 3-55 |
| 3.9.1 PAPER TRANSFER ROLLER UNIT .....       | 3-55 |
| 3.9.2 PAPER TRANSFER UNIT .....              | 3-55 |
| 3.9.3 ID SENSOR BOARD .....                  | 3-57 |
| 3.10 DRIVE UNIT.....                         | 3-60 |

|         |   |      |
|---------|---|------|
| 3.10.1  | DRIVE UNIT FAN .....  | 3-61 |
| 3.10.2  | GEAR UNIT .....   | 3-61 |
| 3.10.3  | REGISTRATION MOTOR.....   | 3-64 |
| 3.10.4  | PAPER FEED MOTOR.....   | 3-64 |
| 3.10.5  | DRUM/DEVELOPMENT MOTOR-K .....  | 3-65 |
| 3.10.6  | ITB DRIVE MOTOR .....   | 3-66 |
| 3.10.7  | FUSING/PAPER EXIT MOTOR .....   | 3-66 |
| 3.10.8  | IMAGE TRANSFER BELT CONTACT MOTOR.....  | 3-67 |
| 3.10.9  | PAPER TRANSFER CONTACT MOTOR.....   | 3-67 |
| 3.10.10 | DUPLEX INVERTER MOTOR.....  | 3-68 |
| 3.10.11 | TONER TRANSPORT MOTOR .....   | 3-68 |
| 3.10.12 | TONER COLLECTION UNIT.....  | 3-69 |
| 3.10.13 | PAPER FEED CLUTCHES .....   | 3-69 |
| 3.10.14 | DRUM MOTOR-MCY .....  | 3-70 |
| 3.10.15 | DEVELOPMENT MOTOR-MCY.....  | 3-71 |
| 3.10.16 | DEVELOPMENT CLUTCH-K .....  | 3-71 |
| 3.11    | FUSING .....  | 3-72 |
| 3.11.1  | FUSING UNIT .....   | 3-72 |
| 3.11.2  | FUSING BELT, PRESSURE ROLLER, FUSING LAMPS .....                              | 3-73 |
| 3.11.3  | HEATING, FUSING AND TENSION ROLLER.....                                       | 3-78 |
| 3.11.4  | LUBRICANT ROLLER AND CLEANING ROLLER .....                                    | 3-79 |
| 3.11.5  | FUSING/PAPER EXIT FAN .....   | 3-80 |
| 3.11.6  | HEATING ROLLER THERMOSTATS.....   | 3-81 |
| 3.11.7  | HEATING ROLLER THERMISTOR .....   | 3-81 |
| 3.11.8  | PRESSURE ROLLER THERMISTOR AND THERMOSTAT ...                                 | 3-82 |
| 3.11.9  | THERMOPILE.....   | 3-83 |
| 3.11.10 | FUSING GEAR AND ONE-WAY CLUTCH.....   | 3-84 |
| 3.11.11 | HEATING ROLLER BEARING AND INSULATING BUSHING                                 | 3-85 |
| 3.11.12 | PRESSURE ROLLER BEARING .....   | 3-87 |
| 3.12    | PAPER FEED .....  | 3-88 |
| 3.12.1  | PAPER FEED UNIT .....   | 3-88 |
| 3.12.2  | PICK-UP, FEED AND SEPARATION ROLLERS.....                                     | 3-88 |
| 3.12.3  | TRAY LIFT MOTOR.....  | 3-89 |
| 3.12.4  | VERTICAL TRANSPORT SENSOR, PAPER OVERFLOW<br>SENSOR AND PAPER END SENSOR..... | 3-90 |
| 3.12.5  | REGISTRATION SENSOR .....   | 3-91 |

|   |       |
|---|-------|
| 3.12.6 BY-PASS PAPER SIZE DETECTION SWITCH..... | 3-92  |
| 3.12.7 BY-PASS PAPER FEED UNIT .....            | 3-93  |
| 3.13 DUPLEX UNIT .....                          | 3-95  |
| 3.13.1 DUPLEX UNIT .....                        | 3-95  |
| 3.13.2 DUPLEX TRANSPORT MOTOR .....             | 3-95  |
| 3.14 ELECTRICAL COMPONENTS .....                | 3-97  |
| 3.14.1 CONTROLLER UNIT .....                    | 3-97  |
| 3.14.2 CONTROLLER BOX COVER .....               | 3-97  |
| 3.14.3 CONTROLLER BOX.....                      | 3-98  |
| 3.14.4 BICU .....                               | 3-100 |
| 3.14.5 IOB.....                                 | 3-101 |
| 3.14.6 PSU .....                                | 3-101 |
| 3.14.7 SIO (SCANNER IN/OUT) BOARD.....          | 3-102 |
| 3.14.8 HIGH VOLTAGE SUPPLY BOARD .....          | 3-103 |
| 3.14.9 HIGH VOLTAGE SUPPLY BOARD BRACKET .....  | 3-104 |
| 3.14.10 CONTROLLER BOARD .....                  | 3-105 |
| 3.14.11 HDD .....                               | 3-106 |
| 3.14.12 NVRAM REPLACEMENT PROCEDURE.....        | 3-107 |

## TROUBLESHOOTING

---

|   |            |
|---|------------|
| <b>4. TROUBLESHOOTING .....</b>               | <b>4-1</b> |
| 4.1 PROCESS CONTROL ERROR CONDITIONS.....     | 4-1        |
| 4.1.1 DEVELOPER INITIALIZATION RESULT .....   | 4-1        |
| 4.1.2 PROCESS CONTROL SELF-CHECK RESULT ..... | 4-2        |
| 4.1.3 LINE POSITION ADJUSTMENT RESULT .....   | 4-6        |
| 4.2 SCANNER TEST MODE.....                    | 4-7        |
| 4.2.1 VPU TEST MODE.....                      | 4-7        |
| 4.2.2 BICU (IPU) TEST MODE .....              | 4-7        |
| 4.3 SERVICE CALL CONDITIONS.....              | 4-9        |
| 4.3.1 SUMMARY.....                            | 4-9        |
| 4.4 SC TABLE.....                             | 4-13       |
| 4.5 TROUBLESHOOTING GUIDE.....                | 4-97       |
| 4.5.1 IMAGE QUALITY .....                     | 4-97       |
| 4.5.2 LINE POSITION ADJUSTMENT.....           | 4-100      |

|   |       |
|---|-------|
| 4.6 JAM DETECTION .....                 | 4-109 |
| 4.6.1 PAPER JAM DISPLAY .....           | 4-109 |
| 4.6.2 JAM CODES AND DISPLAY CODES ..... | 4-109 |
| 4.7 ELECTRICAL COMPONENT DEFECTS .....  | 4-119 |
| 4.7.1 SENSORS .....                     | 4-119 |
| 4.7.2 BLOWN FUSE CONDITIONS .....       | 4-124 |

## SERVICE TABLES

---

|   |            |
|---|------------|
| <b>5. SERVICE TABLES.....</b>                         | <b>5-1</b> |
| 5.1 SERVICE PROGRAM MODE .....                        | 5-1        |
| 5.1.1 ENTERING AND EXITING SERVICE PROGRAM MODE ..... | 5-1        |
| 5.1.2 TYPES OF SP MODES .....                         | 5-1        |
| 5.1.3 REMARKS .....                                   | 5-5        |
| 5.2 COPY SERVICE MODE .....                           | 5-7        |
| 5.2.1 SERVICE MODE TABLE .....                        | 5-7        |
| 5.2.2 INPUT CHECK TABLE .....                         | 5-368      |
| 5.2.3 OUTPUT CHECK TABLE .....                        | 5-381      |
| 5.2.4 TEST PATTERN PRINTING .....                     | 5-393      |
| 5.3 PRINTER SERVICE MODE .....                        | 5-395      |
| 5.3.1 SP1-XXX (SERVICE MODE) .....                    | 5-395      |
| 5.4 SCANNER SERVICE MODE .....                        | 5-399      |
| 5.4.1 SP1-XXX (SYSTEM AND OTHERS) .....               | 5-399      |
| 5.4.2 SP2-XXX (SCANNING-IMAGE QUALITY).....           | 5-399      |
| 5.5 REBOOT/SYSTEM SETTING RESET .....                 | 5-401      |
| 5.5.1 SOFTWARE RESET.....                             | 5-401      |
| 5.5.2 SYSTEM SETTINGS AND COPY SETTING RESET .....    | 5-401      |
| 5.6 FIRMWARE UPDATE .....                             | 5-403      |
| 5.6.1 TYPE OF FIRMWARE .....                          | 5-403      |
| 5.6.2 BEFORE YOU BEGIN .....                          | 5-404      |
| 5.6.3 UPDATING FIRMWARE .....                         | 5-405      |
| 5.6.4 UPDATING THE LCDC FOR THE OPERATION PANEL ..... | 5-407      |
| 5.6.5 DOWNLOADING STAMP DATA.....                     | 5-408      |
| 5.6.6 NVRAM DATA UPLOAD/DOWNLOAD.....                 | 5-408      |
| 5.6.7 ADDRESS BOOK UPLOAD/DOWNLOAD.....               | 5-410      |

|        |  |       |
|--------|--|-------|
| 5.6.8  | INSTALLING ANOTHER LANGUAGE.....                 | 5-411 |
| 5.6.9  | HANDLING FIRMWARE UPDATE ERRORS .....            | 5-413 |
| 5.7    | SD CARD APPLI MOVE .....                         | 5-416 |
| 5.7.1  | OVERVIEW.....                                    | 5-416 |
| 5.7.2  | MOVE EXEC.....                                   | 5-417 |
| 5.7.3  | UNDO EXEC.....                                   | 5-417 |
| 5.8    | CONTROLLER SELF-DIAGNOSTICS.....                 | 5-419 |
| 5.8.1  | OVERVIEW.....                                    | 5-419 |
| 5.8.2  | DETAILED SELF-DIAGNOSTICS.....                   | 5-420 |
| 5.9    | USING THE DEBUG LOG .....                        | 5-422 |
| 5.9.1  | SWITCHING ON AND SETTING UP SAVE DEBUG LOG ..... | 5-422 |
| 5.9.2  | RETRIEVING THE DEBUG LOG FROM THE HDD .....      | 5-426 |
| 5.9.3  | RECORDING ERRORS MANUALLY .....                  | 5-426 |
| 5.9.4  | NEW DEBUG LOG CODES.....                         | 5-427 |
| 5.10   | DIP SWITCHES .....                               | 5-429 |
| 5.10.1 | CONTROLLER BOARD.....                            | 5-429 |
| 5.10.2 | BICU BOARD.....                                  | 5-429 |

## DETAILED DESCRIPTIONS

---

|           |   |            |
|-----------|---|------------|
| <b>6.</b> | <b>DETAILED SECTION DESCRIPTIONS.....</b> | <b>6-1</b> |
| 6.1       | OVERVIEW.....                             | 6-1        |
| 6.1.1     | COMPONENT LAYOUT .....                    | 6-1        |
| 6.1.2     | PAPER PATH .....                          | 6-2        |
| 6.1.3     | DRIVE LAYOUT.....                         | 6-3        |
| 6.1.4     | BOARD STRUCTURE .....                     | 6-4        |
| 6.1.5     | PRINTING PROCESS .....                    | 6-6        |
| 6.2       | PROCESS CONTROL .....                     | 6-8        |
| 6.2.1     | OVERVIEW.....                             | 6-8        |
| 6.2.2     | POTENTIAL CONTROL.....                    | 6-8        |
| 6.2.3     | PROCESS CONTROL SELF CHECK PROCEDURE..... | 6-10       |
| 6.2.4     | TONER DENSITY ADJUSTMENT MODE .....       | 6-12       |
| 6.2.5     | TONER SUPPLY CONTROL.....                 | 6-13       |
| 6.2.6     | TONER NEAR END/TONER END DETECTION .....  | 6-14       |
| 6.2.7     | DEVELOPER INITIALIZATION.....             | 6-15       |



|   |      |
|---|------|
| 6.3 SCANNING .....  | 6-16 |
| 6.3.1 OVERVIEW.....   | 6-16 |
| 6.3.2 SCANNER DRIVE .....   | 6-17 |
| 6.3.3 ORIGINAL SIZE DETECTION .....                                   | 6-18 |
| 6.3.4 ANTI-CONDENSATION HEATER .....                                  | 6-19 |
| 6.4 IMAGE PROCESSING.....   | 6-20 |
| 6.4.1 OVERVIEW.....   | 6-20 |
| 6.4.2 SBU (SENSOR BOARD UNIT).....                                    | 6-20 |
| 6.4.3 IPU (IMAGE PROCESSING UNIT).....                                | 6-21 |
| 6.5 LASER EXPOSURE .....  | 6-22 |
| 6.5.1 OVERVIEW.....   | 6-22 |
| 6.5.2 OPTICAL PATH.....   | 6-23 |
| 6.5.3 LASER SYNCHRONIZING DETECTORS .....                             | 6-24 |
| 6.5.4 LD SAFETY SWITCH .....  | 6-25 |
| 6.5.5 AUTOMATIC LINE POSITION ADJUSTMENT .....                        | 6-26 |
| 6.6 PCU (PHOTO CONDUCTOR UNIT).....                                   | 6-31 |
| 6.6.1 OVERVIEW.....   | 6-31 |
| 6.6.2 AROUND THE DRUM .....   | 6-32 |
| 6.6.3 DEVELOPMENT .....   | 6-35 |
| 6.7 TONER SUPPLY .....  | 6-38 |
| 6.7.1 OVERVIEW.....   | 6-38 |
| 6.7.2 TONER SUPPLY MECHANISM .....                                    | 6-39 |
| 6.7.3 TONER CARTRIDGE .....   | 6-41 |
| 6.8 WASTE TONER COLLECTION.....                                       | 6-42 |
| 6.8.1 TONER COLLECTION PATH AND DRIVE.....                            | 6-42 |
| 6.8.2 TONER COLLECTION BOTTLE SET/ NEAR-FULL/ FULL<br>DETECTION ..... | 6-44 |
| 6.9 IMAGE TRANSFER AND PAPER SEPARATION.....                          | 6-45 |
| 6.9.1 IMAGE TRANSFER .....  | 6-45 |
| 6.9.2 PAPER TRANSFER AND SEPARATION.....                              | 6-51 |
| 6.10 PAPER FEED .....   | 6-54 |
| 6.10.1 OVERVIEW.....  | 6-54 |
| 6.10.2 DRIVE – TRAY 1, TRAY 2, AND BY-PASS TRAY .....                 | 6-55 |
| 6.10.3 PAPER LIFT – TRAYS 1 & 2 .....                                 | 6-56 |
| 6.10.4 PAPER SIZE DETECTION – TRAYS 1 & 2.....                        | 6-57 |
| 6.10.5 PAPER HEIGHT DETECTION – TRAYS 1 & 2 .....                     | 6-58 |

|  |      |
|--|------|
| 6.10.6 PAPER END DETECTION – TRAYS 1 & 2 ..... | 6-59 |
| 6.10.7 REGISTRATION .....                      | 6-60 |
| 6.10.8 PAPER FEED LINE SPEED .....             | 6-60 |
| 6.10.9 TRAY LOCK MECHANISM.....                | 6-61 |
| 6.10.10 PAPER DUST COLLECTION.....             | 6-62 |
| 6.10.11 BY-PASS PAPER SEPARATION.....          | 6-62 |
| 6.10.12 BY-PASS PAPER SIZE DETECTION.....      | 6-63 |
| 6.11 FUSING .....                              | 6-64 |
| 6.11.1 OVERVIEW.....                           | 6-64 |
| 6.11.2 FUSING UNIT DRIVE .....                 | 6-65 |
| 6.11.3 PRESSURE RELEASE MECHANISM.....         | 6-66 |
| 6.11.4 FUSING TEMPERATURE CONTROL.....         | 6-66 |
| 6.11.5 ENERGY SAVER MODES.....                 | 6-70 |
| 6.11.6 NEW UNIT DETECTION.....                 | 6-72 |
| 6.12 PAPER EXIT .....                          | 6-73 |
| 6.12.1 OVERVIEW.....                           | 6-73 |
| 6.12.2 JUNCTION GATE MECHANISM .....           | 6-74 |
| 6.13 DUPLEX UNIT .....                         | 6-75 |
| 6.13.1 OVERVIEW.....                           | 6-75 |
| 6.13.2 DUPLEX DRIVE.....                       | 6-76 |
| 6.13.3 INVERTER MECHANISM.....                 | 6-77 |
| 6.13.4 DUPLEX OPERATION .....                  | 6-78 |
| 6.14 PRINTER FUNCTIONS .....                   | 6-80 |
| 6.14.1 OVERVIEW.....                           | 6-80 |
| 6.14.2 HARD DISK .....                         | 6-82 |
| 6.14.3 CONTROLLER FUNCTIONS.....               | 6-82 |
| 6.14.4 JOB SPOOLING .....                      | 6-83 |
| 6.15 PICTBRIDGE .....                          | 6-86 |
| 6.15.1 GENERAL FUNCTION .....                  | 6-86 |
| 6.15.2 PRINTING FUNCTION LIST.....             | 6-86 |
| 6.15.3 PRINTING FUNCTION DESCRIPTION.....      | 6-87 |
| 6.16 COPY DATA SECURITY UNIT .....             | 6-94 |
| 6.16.1 GENERAL FUNCTION .....                  | 6-94 |
| 6.16.2 MASK TYPE FOR COPYING .....             | 6-95 |
| 6.17 FILE FORMAT CONVERTER (MLB) .....         | 6-96 |
| 6.18 DATA OVERWRITE SECURITY UNIT (B735).....  | 6-97 |

|                                |      |
|--------------------------------|------|
| 6.18.1 AUTO ERASE MEMORY ..... | 6-97 |
|--------------------------------|------|

## **SPECIFICATIONS**

---

|   |            |
|---|------------|
| <b>7. SPECIFICATIONS.....</b>                       | <b>7-1</b> |
| 7.1 GENERAL SPECIFICATIONS .....                    | 7-1        |
| 7.1.1 MAIN FRAME .....                              | 7-1        |
| 7.2 PRINTER .....                                   | 7-5        |
| 7.3 SCANNER .....                                   | 7-7        |
| 7.4 SUPPORTED PAPER SIZES .....                     | 7-8        |
| 7.4.1 PAPER FEED .....                              | 7-8        |
| 7.4.2 PAPER EXIT.....                               | 7-10       |
| 7.4.3 PLATEN/ARDF ORIGINAL SIZE DETECTION.....      | 7-16       |
| 7.5 SOFTWARE ACCESSORIES.....                       | 7-18       |
| 7.5.1 PRINTER DRIVERS .....                         | 7-18       |
| 7.5.2 SCANNER AND LAN FAX DRIVERS .....             | 7-18       |
| 7.5.3 UTILITY SOFTWARE .....                        | 7-19       |
| 7.6 MACHINE CONFIGURATION .....                     | 7-20       |
| 7.7 OPTIONAL EQUIPMENT.....                         | 7-24       |
| 7.7.1 ARDF.....                                     | 7-24       |
| 7.7.2 PAPER FEED UNIT.....                          | 7-25       |
| 7.7.3 LARGE CAPACITY TRAY .....                     | 7-25       |
| 7.7.4 1000-SHEET BOOKLET FINISHER & PUNCH UNIT..... | 7-26       |
| 7.7.5 1000-SHEET FINISHER .....                     | 7-27       |
| 7.7.6 500-SHEET FINISHER .....                      | 7-28       |
| 7.7.7 BRIDGE UNIT.....                              | 7-29       |
| 7.7.8 SHIFT TRAY UNIT.....                          | 7-29       |
| 7.7.9 1-BIN TRAY UNIT.....                          | 7-29       |

### **BRIDGE UNIT BU3000 B227**

---

SEE SECTION B227 FOR DETAILED TABLE OF CONTENTS

### **FAX OPTION B786**

---

SEE SECTION B786 FOR DETAILED TABLE OF CONTENTS

## **ARDF DF3000 B789**

---

SEE SECTION B789 FOR DETAILED TABLE OF CONTENTS

## **BIN TRAY B790**

---

SEE SECTION B790 FOR DETAILED TABLE OF CONTENTS

## **INTERNAL SHIFT TRAY B791**

---

SEE SECTION B791 FOR DETAILED TABLE OF CONTENTS

## **FINISHER B792**

---

SEE SECTION B792 FOR DETAILED TABLE OF CONTENTS

## **BOOKLET FINISHER B793**

---

SEE SECTION B793 FOR DETAILED TABLE OF CONTENTS

## **PAPER FEED UNIT B800**

---

SEE SECTION B759 FOR DETAILED TABLE OF CONTENTS

## **LCIT B801**

---

SEE SECTION B801 FOR DETAILED TABLE OF CONTENTS

**INSTALLATION**

**ARDF B789**

**PAPER FEED UNIT B800**

**FAX OPTION B786**

**TAB  
POSITION 1**

**PREVENTIVE MAINTENANCE**

**TAB  
POSITION 2**

**REPLACEMENT AND ADJUSTMENT**

**LCIT B801**

**TAB  
POSITION 3**

**TROUBLESHOOTING**

**FINISHER B792**

**BOOKLET FINISHER B793**

**TAB  
POSITION 4**

**SERVICE TABLES**

**TAB  
POSITION 5**

**DETAILED DESCRIPTIONS**

**TAB  
POSITION 6**

**SPECIFICATIONS**

**1 BIN TRAY B790**

**TAB  
POSITION 7**

**BRIDGE UNIT B227**

**INTERNAL SHIFT TRAY B791**

**TAB  
POSITION 8**



# **INSTALLATION**






# 1. INSTALLATION

## 1.1 INSTALLATION REQUIREMENTS

### 1.1.1 ENVIRONMENT

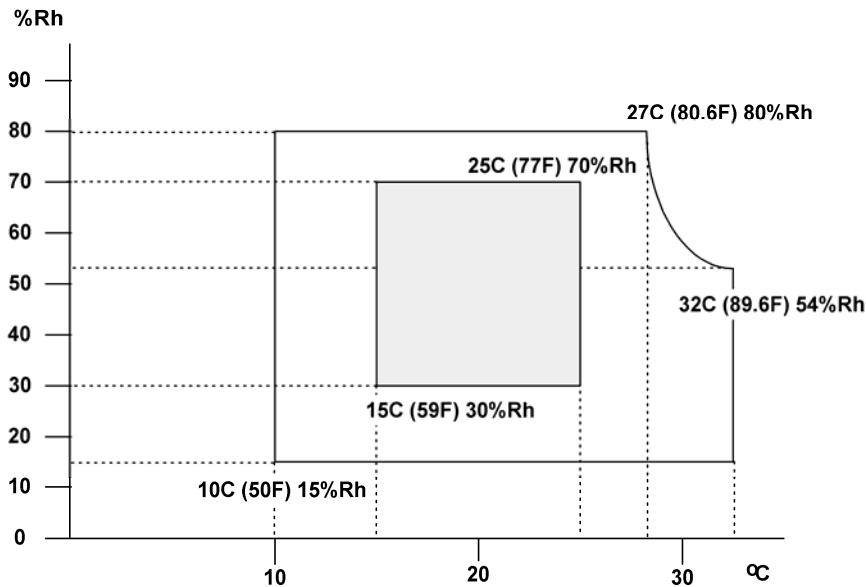

1. Temperature Range: 10°C to 32°C (50°F to 89.6°F)
2. Humidity Range: 15% to 80% RH
3. Ambient Illumination: Less than 1500 lux (do not expose to direct sunlight)
4. Ventilation: 3 times/hr/person or more
5. Do not let the machine get exposed to the following:
  - 1) Cool air from an air conditioner
  - 2) Heat from a heater
6. Do not install the machine in areas that are exposed to corrosive gas.
7. Install the machine at locations lower than 2,500 m (8,200 ft.) above sea level.
8. Install the machine on a strong, level base. (Inclination on any side must be no more than 5 mm.)
9. Do not install the machine in areas that get strong vibrations.

### 1.1.2 MACHINE LEVEL


Front to back: Within 5 mm (0.2")

Right to left: Within 5 mm (0.2")

### 1.1.3 MACHINE SPACE REQUIREMENTS

#### **⚠ CAUTION**

- This machine, which uses high voltage power sources, can generate ozone gas. High ozone density is harmful to human health. Therefore, the machine must be installed in a well-ventilated room.

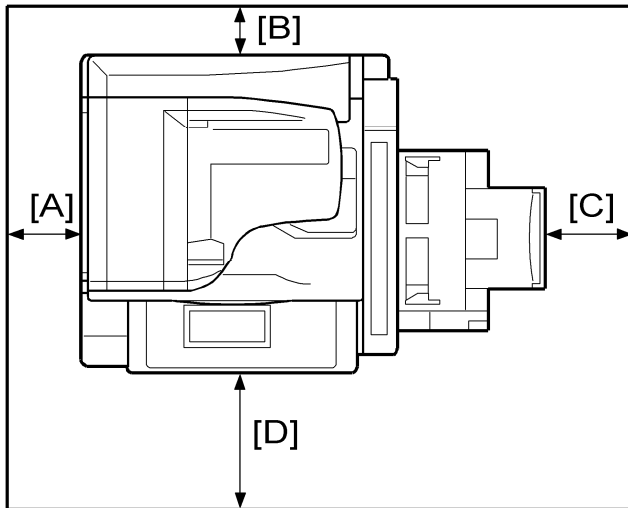

A: Over 100 mm (3.9")

B: Over 100 mm (3.9")

C: Over 100 mm (3.9")

D: Over 100 mm (3.9")

Put the machine near the power source with the clearance shown above.

### 1.1.4 POWER REQUIREMENTS

#### **⚠ CAUTION**

- Insert the plug firmly in the outlet.
  - Do not use an outlet extension plug or cord.
  - Ground the machine.
1. Input voltage level:
    - 120 V, 60 Hz: More than 12 A
    - 220 V to 240 V, 50 Hz/60 Hz: More than 8 A
  2. Permissible voltage fluctuation:  $\pm 10\%$
  3. Do not put things on the power cord.

## 1.2 OPTIONAL UNIT COMBINATIONS

### 1.2.1 MACHINE OPTIONS

| No. | Options                     | Remarks   |
|-----|-----------------------------|---|
| 1   | 2-tray paper feed unit      | One from No.1 or No.2   |
| 2   | Large capacity tray         |   |
| 3   | Platen cover                | One from No.3 or No.4   |
| 4   | ARDF                        |   |
| 5   | 1-bin tray unit             | -   |
| 6   | Bridge unit                 | One from No.6 or No.7   |
| 7   | Shift tray                  |   |
| 8   | 1000-sheet booklet finisher | One from No.8, No.10 or No.11;<br>Requires No.6 and one from No.1 and No.2. |
| 9   | *Punch kit (3 types)        | No. 8 required; One of the three types                                      |
| 10  | 1000-sheet finisher         | One from No.8, No.10 or No.11;<br>Requires No.6 and one from No.1 and No.2. |
| 11  | 500-sheet finisher          | One from No.8, No.10 or No.11;<br>Requires No.6.                            |

\*: Child options (Child options require a parent option.)

## 1.2.2 CONTROLLER OPTIONS

| No. | Options                      | Remarks                                       |
|-----|------------------------------|---|
| 1   | IEEE 1394                    | One from the two (I/F Slot A)                 |
| 2   | USB Host Interface Unit      |   |
| 3   | IEEE 802.11b                 | One from the three (I/F Slot B)               |
| 4   | IEEE 1284                    |   |
| 5   | Bluetooth                    |   |
| 6   | File Format Converter        | I/F Slot C<br>Requires fax unit option (B786) |
| 7   | PostScript 3                 | One from the three (SD card slot 2)           |
| 8   | PictBridge Option            |   |
| 9   | Data Overwrite Security Unit |   |
| 11  | Browser Unit                 | SD card slot 3 (during installation only)     |
| 12  | Copy Data Security Unit      | -   |

## 1.3 COPIER INSTALLATION


### **⚠ CAUTION**

- Make sure that the image transfer belt is in its correct position before you move the machine. Otherwise, the image transfer belt and the black PCU can be damaged.

### 1.3.1 POWER SOCKETS FOR PERIPHERALS


### **⚠ CAUTION**

- Rating voltage for peripherals.
- Make sure to plug the cables into the correct sockets.

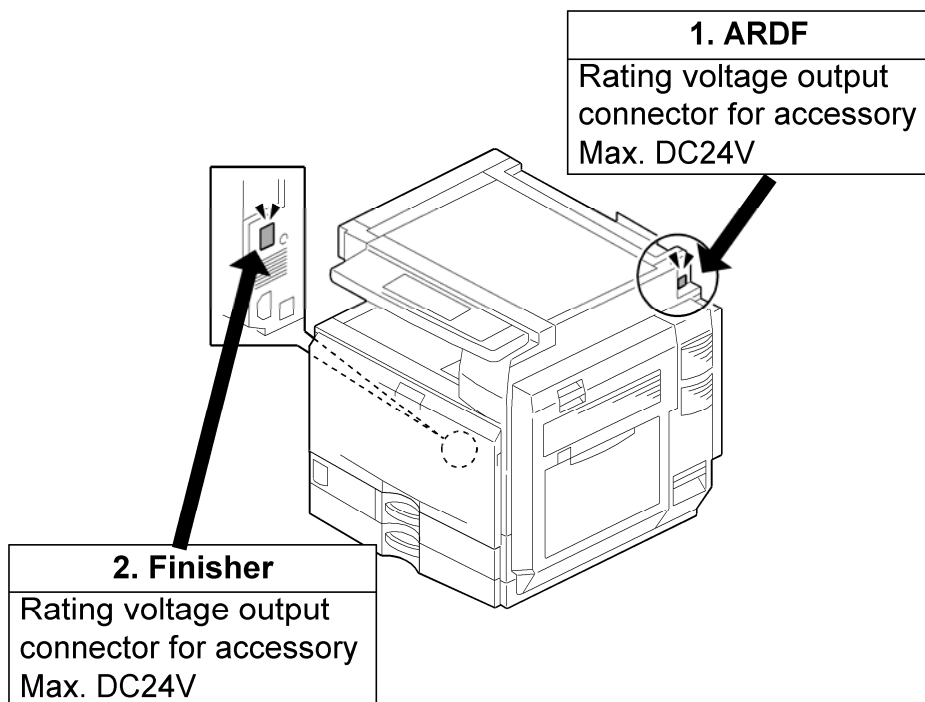

### 1.3.2 INSTALLATION FLOW CHART

This flow chart shows the best procedure for installation.

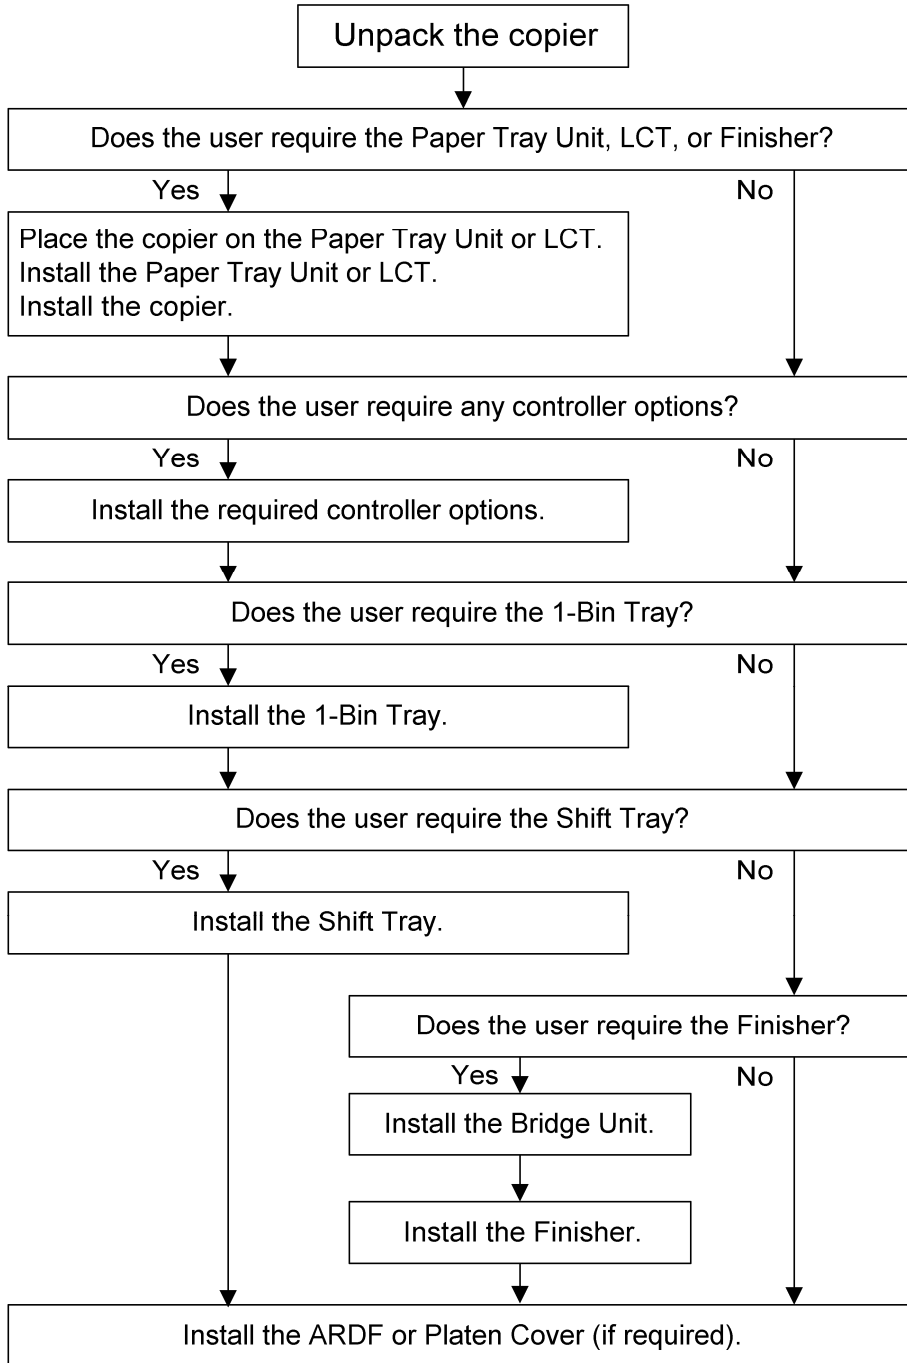

You need the optional paper tray unit or the LCT if you want to install the finisher (B408 or B793).

The punch unit is for 1000-sheet booklet finisher (B793).

### 1.3.3 ACCESSORY CHECK

Check the quantity and condition of these accessories.

|     | Description                                     | Q'ty | Destination                        |
|-----|---|------|------------------------------------|
| 1.  | Operating Instruction - Troubleshooting         | 1    | -57 -29 -58 -21 -19                |
| 2.  | Operating Instruction - About This Machine      | 1    | -57 -29 -58 -21 -19                |
| 3.  | Operating Instruction - Security                | 1    | -57 -29 -58 -21 -19                |
| 4.  | Operation Instruction - Quick Reference Guide   | 1    | -29 -21 -19                        |
| 5.  | Operation Instruction - Printer Quick Reference | 1    | -29 -21 -19                        |
| 6.  | Operation Instruction - Scanner Quick Reference | 1    | -29 -21 -19                        |
| 7.  | CD-ROM - Instruction                            | 1    | -29                                |
| 8.  | CD-ROM - Printer Instruction - RIC              | 1    | -67 -29 -26                        |
| 9.  | CD-ROM - Printer Instruction - NRG              | 1    | -67                                |
| 10. | CD-ROM - Printer Instruction - LAN              | 1    | -67                                |
| 11. | CD-ROM - Scanner Instruction - RIC              | 1    | -67 -29 -26                        |
| 12. | CD-ROM - Scanner Instruction - NRG              | 1    | -67                                |
| 13. | CD-ROM - Scanner Instruction - LAN              | 1    | -67                                |
| 14. | Model Name Decal                                | 1    | -57 -67 -29 -58                    |
| 15. | Stamp   | 1    | -57 -29 -28 -19 -58                |
| 16. | Cloth Holder                                    | 1    | -57 -67 -29 -28 -21 -19<br>-58 -26 |
| 17. | Exposure Glass Cleaning Cloth                   | 1    | -57 -67 -29 -28 -21 -19<br>-58 -26 |
| 18. | Rivet   | 2    | -57 -67 -29 -28 -21 -19<br>-58 -26 |

|    | Description                          | Q'ty | Destination                        |
|----|--------------------------------------|------|------------------------------------|
| 19 | Operating Instructions Holder        | 1    | -57 -67 -29 -28 -21 -19<br>-58 -26 |
| 20 | Ferrite Core                         | 1    | -57 -67 -29 -28 -21 -19<br>-58 -26 |
| 21 | Power Supply Cord                    | 1    | -57 -67 -29 -28 -21 -19<br>-58     |
| 22 | Cover                                | 1    | -57 -67 -29 -28 -21 -19<br>-58 -26 |
| 23 | Decal - Paper Size                   | 1    | -57 -67 -29 -28 -21 -19<br>-58 -26 |
| 24 | Emblem Cover                         | 1    | -57 -67 -29 -58                    |
| 25 | Sheet - Eula: 16 Languages           | 1    | -57 -67 -29 -26 -58                |
| 26 | Sheet - Caution 16 Languages         | 1    | -57 -67 -29 -26 -58                |
| 27 | Decal - Safety Sheet                 | 1    | -67 -26                            |
| 28 | Decal - Caution - Original           | 1    | -67 -29 -28 -26 -57 -58            |
| 29 | Sheet Data                           | 1    | -67 -29 -28 -26 -21                |
| 30 | Decal - Caution - Inkjet             | 1    | -67 -26 (14 Lang.)                 |
| 31 | Sheet - Caution - Security Reference | 1    | -29                                |
| 32 | Warranty Sheet (Chinese)             | 1    | -21                                |
| 33 | Sheet - Name - Tel                   | 1    | -21                                |



## 1.3.4 INSTALLATION PROCEDURE

### **⚠ CAUTION**


- Remove the tape from the development units before you turn the main switch on. The development units can be severely damaged if you do not remove the tape.

Put the machine on the paper tray unit or the LCT first if you install an optional paper tray unit or the optional LCT at the same time. Then install the machine and other options.

#### **Note**


- Keep the shipping retainers after you install the machine. You may need them in the future if you transport the machine to another location.

### ***Tapes and Retainers***

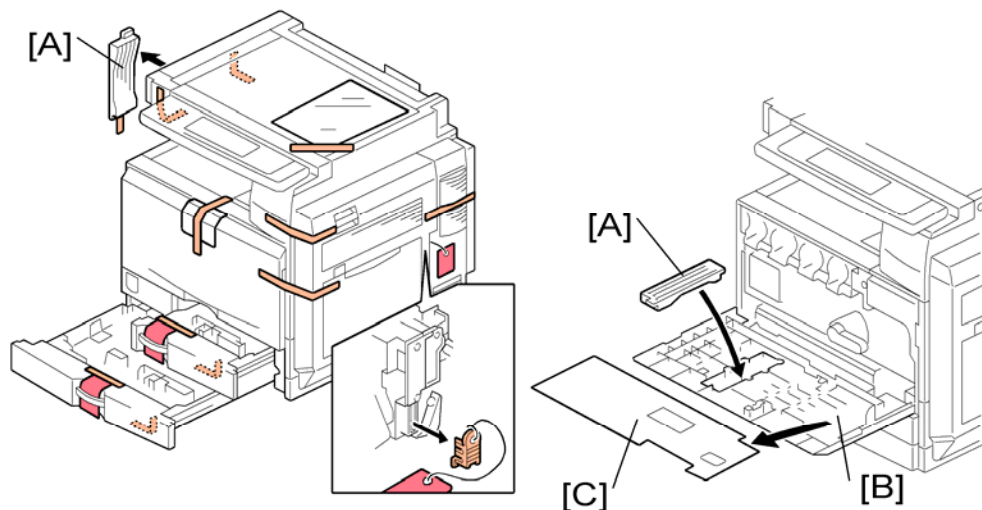


1. Remove all the tapes and retainers on the machine.
2. Remove all the tapes and retainers in trays 1 and 2, and then take out the power cord from tray 1 (if applicable).
3. Remove the scanner unit stay [A].
4. Open the front door [B], and then remove the jam location sheet [C].
5. Keep the scanner unit stay [A] inside the front door [B].
6. Reattach the jam location sheet.
7. Close the front door.

## Developer and Toner Bottles

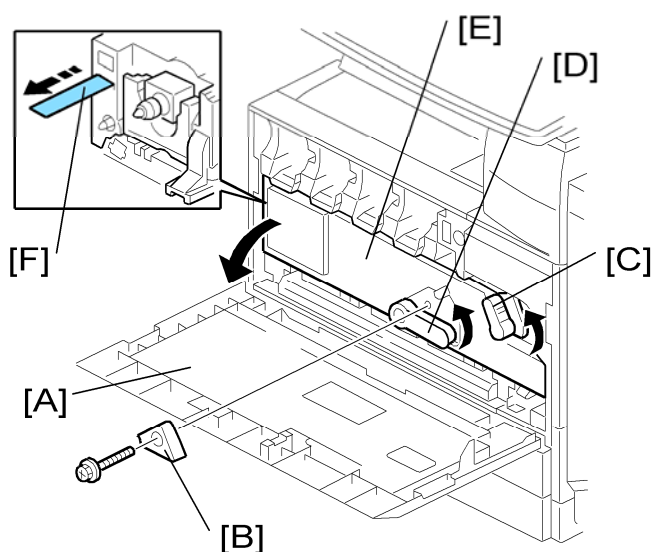

1. Open the front door [A].
  2. Remove the stopper [B] (🔑 x 1).
- ↓ Note
- This stopper locks the drum positioning plate lever.
3. Release the image transfer belt lever [C], and turn the drum positioning plate lever [D] counterclockwise.
  4. Open the drum positioning plate [E].
  5. Remove all tapes [F] from the four development units.

- ↓ Note
- When you remove the tape from the development unit, hold the development unit with your hand, and then pull the tape.
6. Close the drum positioning plate. Then lock the image transfer belt lever and turn the drum positioning plate lever clockwise.
  7. Lock the drum positioning plate lever with the stopper [B] (🔑 x 1).
  8. Shake each toner bottle five or six times.

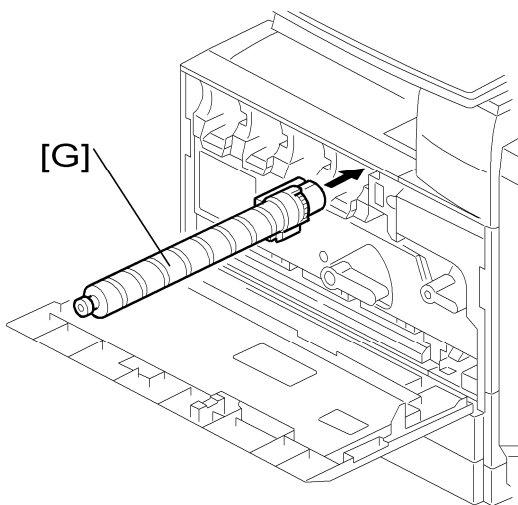


- 9. Install each toner bottle [G] in the machine.
- 10. Close the front door.

### ***Paper Trays***

- 1. Pull each paper tray out. Then adjust the side guides and end guide to match the paper size.


↓ Note

- To move the side guides, first pull out the tray fully. Then push down the green lock at the rear inside the tray.

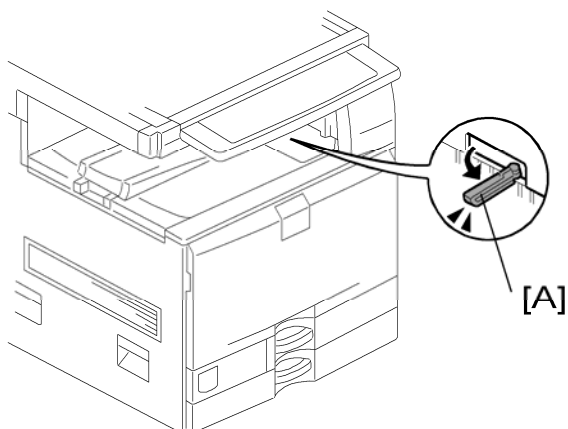

- 2. Pull out the feeler [A] for the output tray full detection mechanism.

## Emblem and Decals

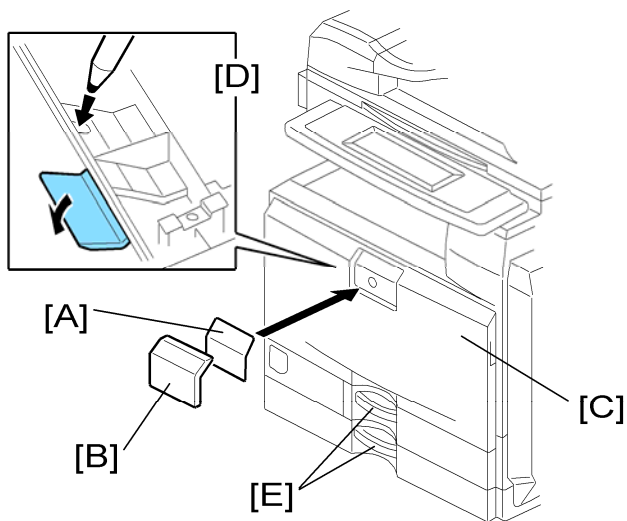

1. **Attach the correct emblem [A] and the cover [B] to the front door [C] of the machine, if the emblem is not attached.**

### ↓ Note


- If you want to change the emblem that has already been attached, remove the panel with an object (not a sharp object) as shown [D], and then install the correct emblem.

2. **Attach the correct paper tray number and size decals to the paper trays [E].**

### ↓ Note

- Paper tray number and size decals are also used for the optional paper tray or the optional LCT. Keep these decals for use with these optional units.


## Fire Prevention Cover

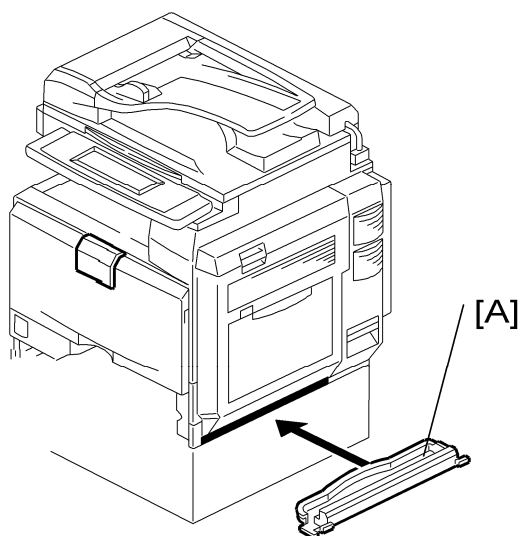

When the copier is installed on the floor without the optional paper tray unit or a table, the cover [A] must be attached to the copier.

Install the cover [A] at the right side of the copier.

### **Manual Pocket Attachment**

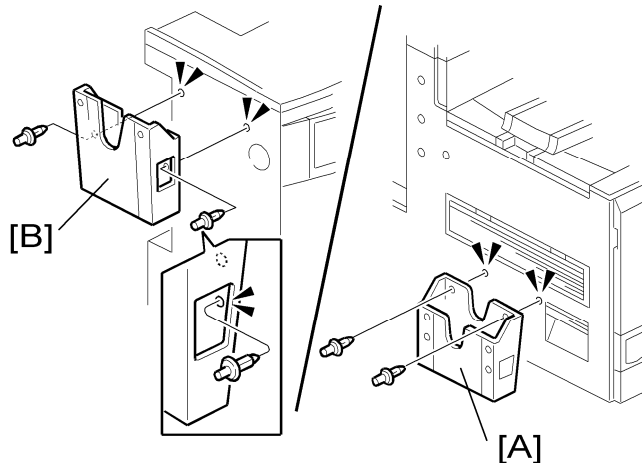

1. Attach the manual pocket [A] to the left side of the copier (snap rivet x 2).
2. If any finisher has been installed, attach the manual pocket [B] to the rear side of a finisher (snap rivet x 2).

### **Initialize the Developer**

1. Plug in the machine.
2. Make sure that the platen or ARDF is closed and the main power is turned off.
3. Turn the main power switch on. The machine automatically starts the initialization procedure. The Start button LED (Ⓢ) turns green when this procedure has finished.
4. Make copies of image samples (text, photo, and text/photo modes).
5. Do the Automatic Color Calibration process (ACC) as follows:
  1. Print the ACC test pattern (User tools > Maintenance > ACC > Start).
  2. Put the printout on the exposure glass.
  3. Put 10 sheets of white paper on top of the test chart.
  4. Close the ARDF or the platen cover.
  5. Press "Start Scanning" on the LCD panel. The machine starts the ACC.
6. Check that the sample image has been copied normally.

## Settings Relevant to the Service Contract

Change the necessary settings for the following SP modes if the customer has a service contract.

### Note

- You must select one of the counter methods (developments/prints) in accordance with the contract (SP5-045-001).

| Item                         | SP No.                  | Function   | Default               |
|------------------------------|-------------------------|--|-----------------------|
| Counting method              | SP5-045-001             | Specifies if the counting method used in meter charge mode is based on developments or prints. NOTE: You can set this one time only. You cannot change the setting after you have set it for the first time. | "0":<br>Developments  |
| A3/11" x 17" double counting | SP5-104-001             | Specifies whether the counter is doubled for A3/11" x 17" paper. When you have to change this setting, contact your supervisor.  | "No": Single counting |
| Service Tel. No. Setting     | SP5-812-001 through 004 | 5812-002 programs the service station fax number. The number is printed on the counter list when the meter charge mode is selected. This lets the user fax the counter data to the service station.          |                       |

## 1.3.5 MOVING THE MACHINE

This section shows you how to manually move the machine from one floor to another floor. See the section "Transporting the Machine" if you have to pack the machine and move it a longer distance.

Remove all trays from the optional paper feed unit or LCT.

## 1.3.6 TRANSPORTING THE MACHINE

### Main Frame

- Do SP 4806-001 to move the scanner carriage from the home position. This prevents dust from falling into the machine during transportation.
- Remove the toner cartridges. This prevents toner flow into the toner supply tube,

which is caused by vibration during transport. This can also cause the tube to be clogged with toner.

3. Make sure there is no paper left in the paper trays. Then fix down the bottom plates with a sheet of paper and tape.
4. Empty the toner collection bottle. Then attach securing tape to stop the toner bottle from coming out.
5. Do one of the following:
  - Attach shipping tape to the covers and doors.
  - Shrink-wrap the machine tightly.

↓ Note

- After you move the machine, Make sure you do the "Auto Color Registration" as follows. This optimizes color registration.
  1. Do the "Forced Line Position Adj. Mode c" (SP2-111-3).
  2. Then do the "Forced Line Position Adj. Mode a" (SP2-111-1).

To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.
- Make sure that the side fences in the trays are correctly positioned to prevent color registration errors.

### 1000-sheet Booklet Finisher


Before the 1000-sheet booklet finisher is transported, move the shift tray to the shipping position with SP6137-003 ("ON"), and then remove the shift tray cover.

## 1.4 PAPER FEED UNIT (B800)

### 1.4.1 ACCESSORY CHECK

Check the quantity and condition of the accessories against the following list.

| No. | Description                 | Q'ty |
|-----|-----------------------------|------|
| 1   | Caster stand                | 6    |
| 2   | Securing bracket            | 2    |
| 3   | Screw (M3x6 x 6, M4x10 x 2) | 8    |
| 4   | Spring Washer Screw         | 1    |
| 5   | Rear stand cover            | 1    |
| 6   | Left stand cover            | 1    |
| 7   | Front stand cover           | 1    |

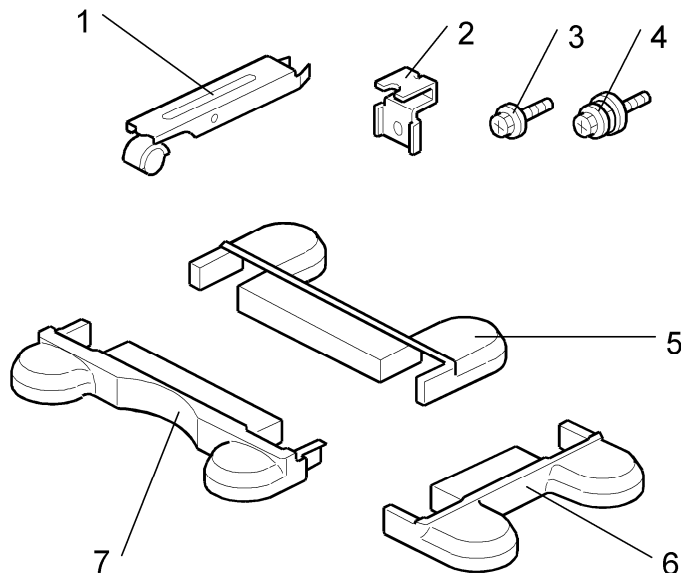

### 1.4.2 INSTALLATION PROCEDURE


#### CAUTION

- Turn off the main switch of the copier and unplug the power cord before you




start the installation procedure.


- You need two or more persons to lift the copier. The copier is highly unstable when lifted by one person, and may cause human injury or property damage.
- Do not lift the copier with the paper feed unit installed. Otherwise, the handle and grips may be damaged.

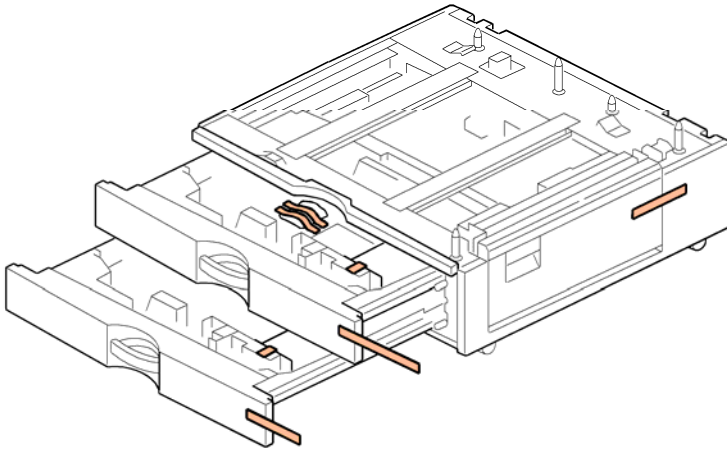


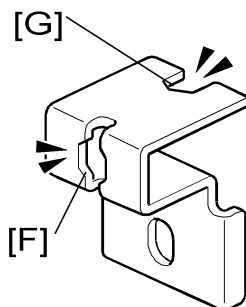
1. Remove all tape on the paper feed unit.
2. Remove the paper trays and remove all tape and padding.

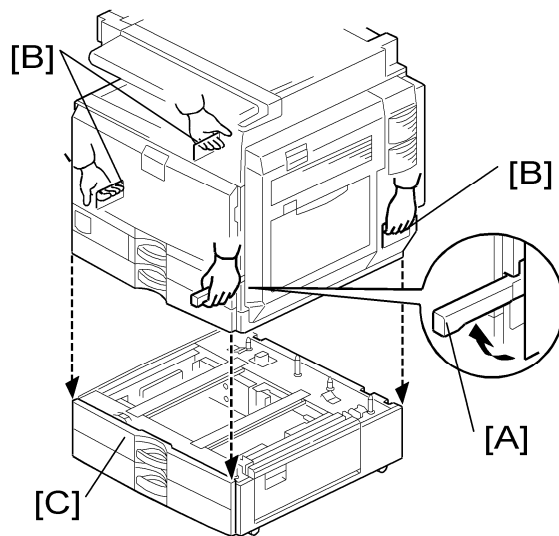

3. Grasp the handle [A] and grips [B] of the machine.
4. Lift the copier and install it on the paper feed unit [C].

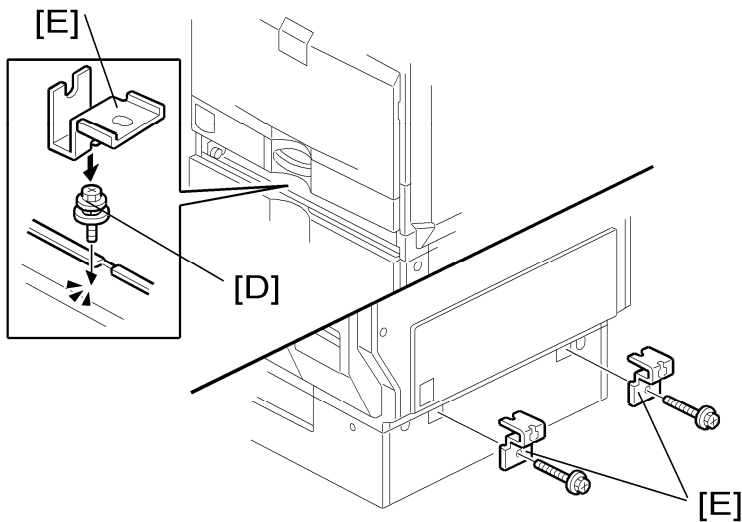


5. Remove tray 2 of the machine.
6. Fasten the spring washer screw [D], using the cutout in the securing bracket [E] as a tool.
7. Reinstall tray 2.
8. Attach the securing brackets [E] (M4x10  x 1 each).




 Note

- One of the securing brackets is used as a securing tool (the cutout [F] is used in step 6). But the cutout [G] is for attaching the tray heater. Therefore, attach the securing brackets [E] after installing the tray heater if you will install the tray heater.

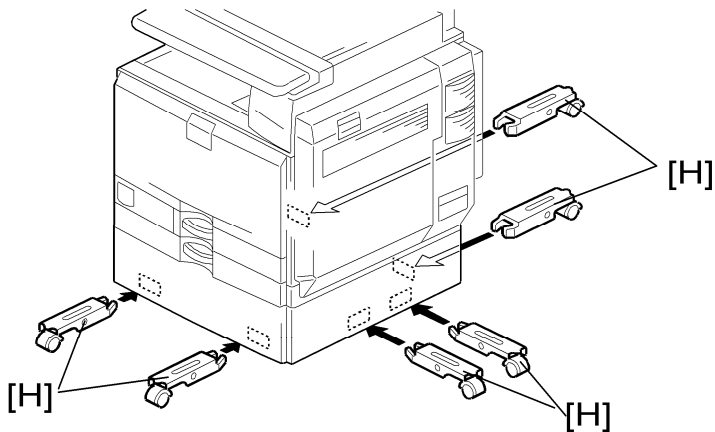

9. Attach the two caster stands [H] to front, left, and rear sides of the machine.

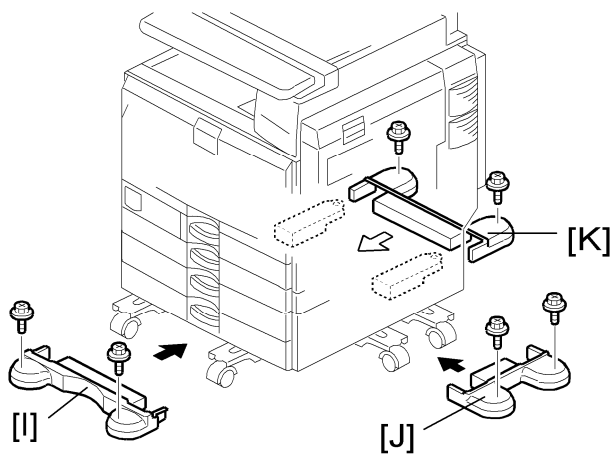

10. Attach the front stand cover [I], right stand cover [J] and rear stand cover [K] to the correct sides of the machine (M3x6  x 2: each).

11. Load paper into the paper feed unit.

12. Turn on the main power switch of the machine.


13. Check the paper feed unit operation and copy quality.

## 1.5 LCT (B801)

### 1.5.1 ACCESSORY CHECK

Check the quantity and condition of the accessories against the following list.

| No. | Description                 | Q'ty |
|-----|-----------------------------|------|
| 1   | Caster stand                | 6    |
| 2   | Securing bracket            | 2    |
| 3   | Screw (M3x6 x 6, M4x10 x 2) | 8    |
| 4   | Spring washer screw         | 1    |
| 5   | Rear stand cover            | 1    |
| 6   | Right stand cover           | 1    |
| 7   | Front stand cover           | 1    |

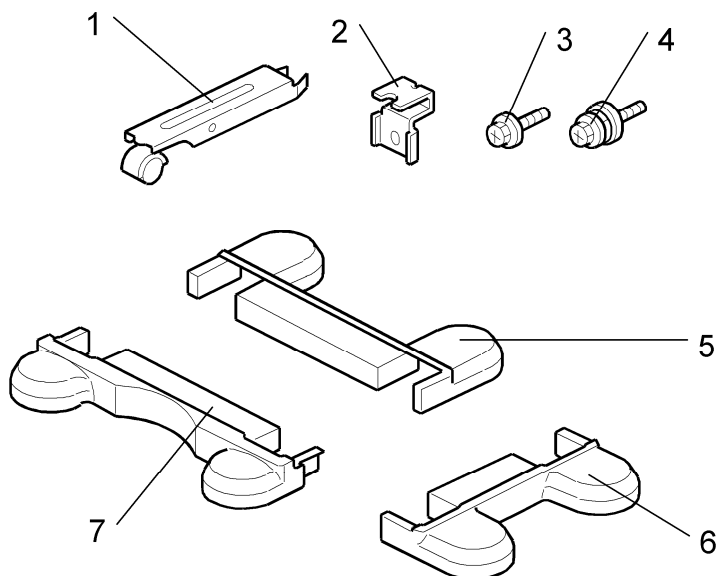


### 1.5.2 INSTALLATION PROCEDURE

#### **⚠ CAUTION**


- Turn off the main switch of the copier and unplug the power cord before you

start the installation procedure.


- You need two or more persons to lift the copier. The copier is highly unstable when lifted by one person, and may cause human injury or property damage.
- Do not lift the copier with the paper feed unit installed. Otherwise, the handle and grips may be damaged.

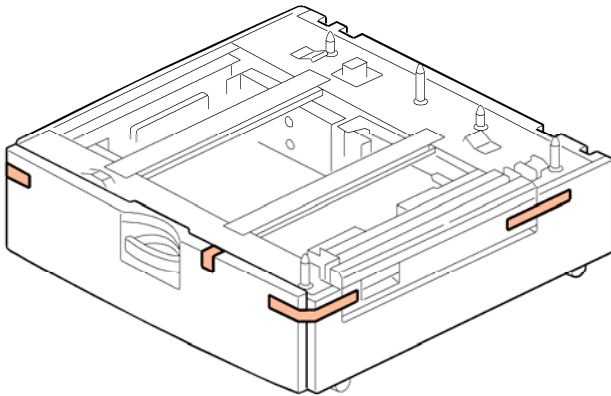


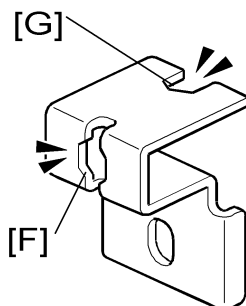
1. Remove all tapes and retainers in the LCT.

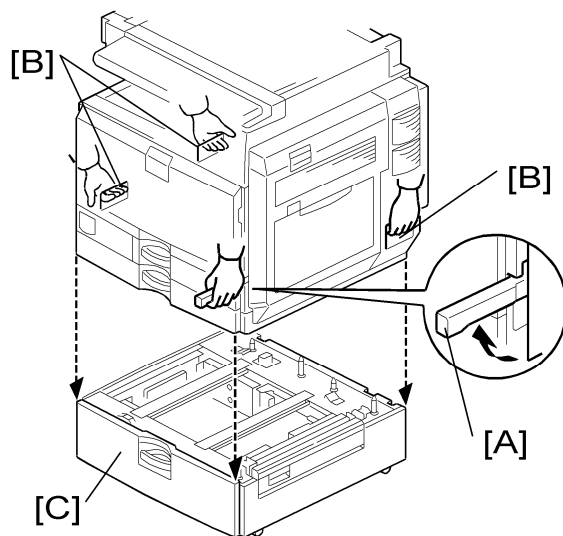

2. Grasp the handle [A] and grips [B] of the machine.
3. Lift the copier and install it on the LCT [C].

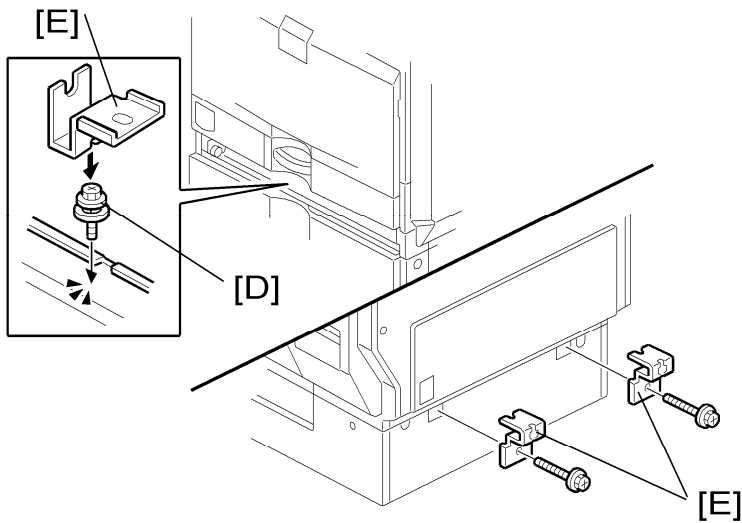


4. Remove tray 2 of the machine.
5. Fasten the spring washer screw [D], using the cutout in the securing bracket [E] as a tool.
6. Reinstall tray 2.
7. Attach the securing brackets [E] (M4x10  x 1 each).




 Note

- One of the securing brackets is used as a securing tool (the cutout [F] is used in step 6). But the cutout [G] is for attaching the tray heater. Therefore, attach the securing brackets [E] after installing the tray heater if you will install the tray heater.

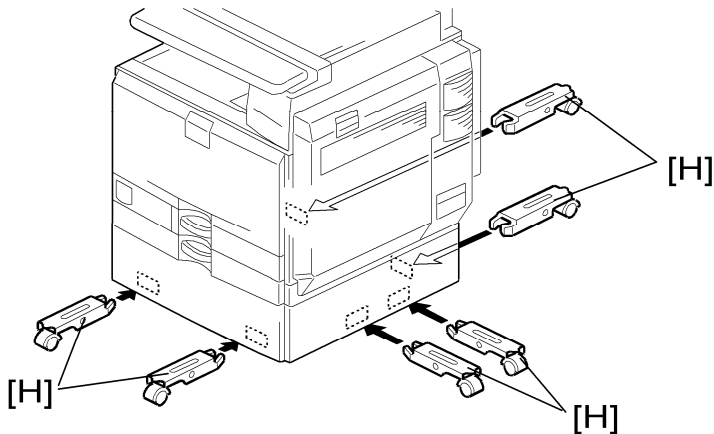

8. Attach the two caster stands [H] to the front, right, and rear sides of the machine.

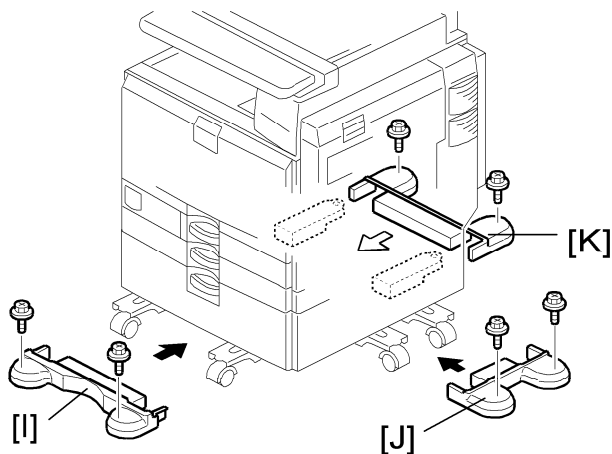

9. Attach the front stand cover [I], right stand cover [J] and rear stand cover [K] to the correct sides of the machine (M3x6  x 2 each).

10. Load paper into the LCT.

11. Turn on the main power switch of the machine.


12. Check the LCT operation and copy quality.

## 1.6 AUTO REVERSE DOCUMENT FEEDER (B789)

### 1.6.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.

| No. | Description                 | Q'ty |
|-----|-----------------------------|------|
| 1   | ARDF                        | 1    |
| 2   | Stamp Cartridge             | 1    |
| 3   | Screwdriver                 | 1    |
| 4   | Knob Screw                  | 2    |
| 5   | Stud Screw                  | 2    |
| 6   | Attention Decal – Top Cover | 1    |

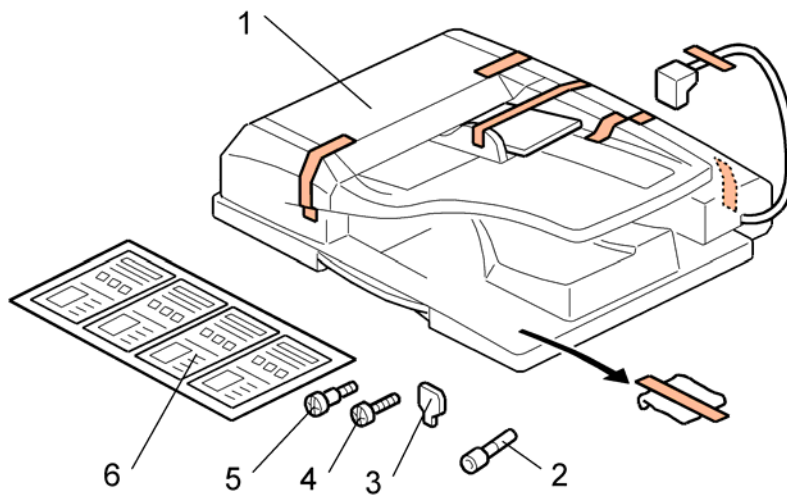





## 1.6.2 INSTALLATION PROCEDURE

### **⚠ CAUTION**


- Unplug the copier power cord before starting the following procedure.

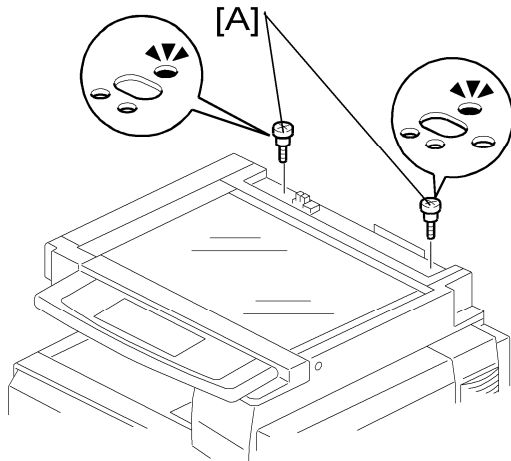


1. Remove all tapes and shipping retainers.
2. Remove the two screws already installed at the top rear of the machine.
3. Insert the two stud screws [A] on the top of the machine.

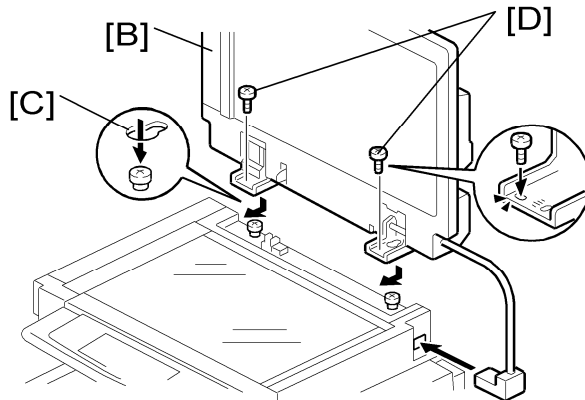


4. Mount the ARDF [B] by aligning the screw keyholes [C] in the ARDF support plate over the stud screws.
5. Slide the ARDF toward the front of the machine.
6. Secure the ARDF with the two knob screws [D].

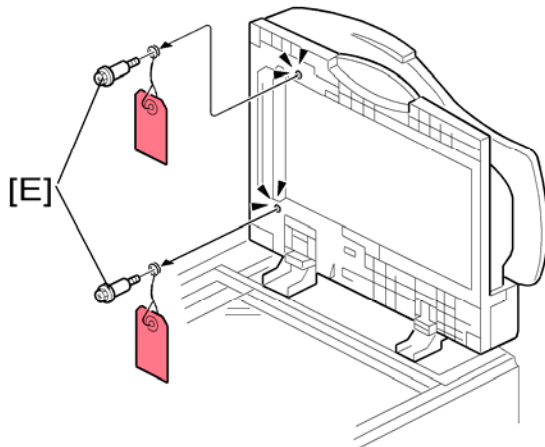

7. Remove two screws [E] from the bottom of the ARDF.

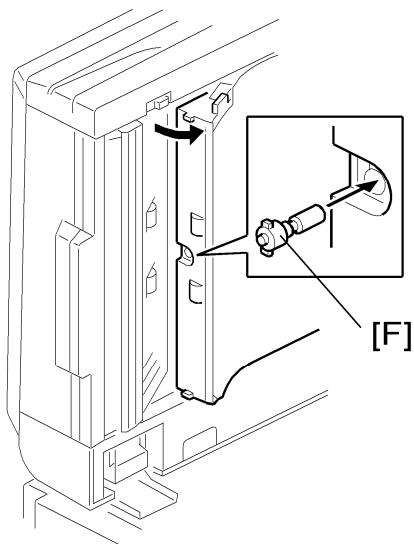


8. Install the stamp cartridge [F] in the ARDF.

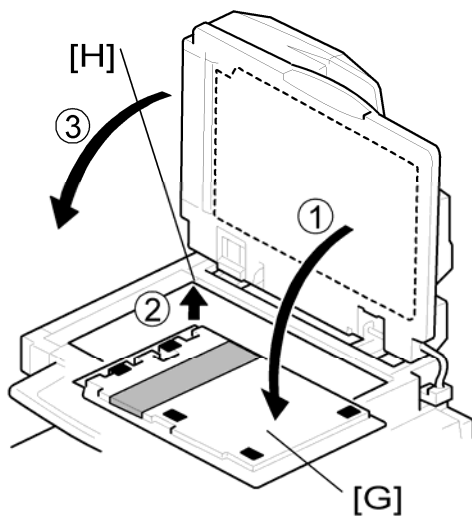

9. Peel off the platen sheet [G] and place it on the exposure glass.

10. Align the rear left corner of the platen sheet with the corner [H] on the exposure glass.
11. Close the ARDF.
12. Open the ARDF and check that the platen sheet is correctly attached.

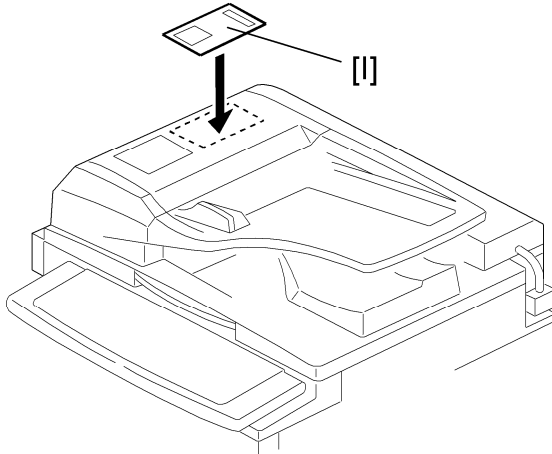


13. Attach the decal [I] to the top cover as shown. Choose the language you want.
14. Plug in and turn on the main power switch of the machine, and then check the ARDF operation.
15. Make a full size copy. Check that the registrations (side-to-side and leading edge) and image skew are correct. If they are not, adjust the registrations and image skew referring to "Copy Adjustments" in the "Replacements and Adjustments" section.

## 1.7 1-BIN TRAY UNIT (B790)

### 1.7.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.

| No. | Description      | Q'ty |
|-----|------------------|------|
| 1   | 1-Bin Tray Unit  | 1    |
| 2   | End-fence        | 1    |
| 3   | Screws (M3 x 8)  | 3    |
| 4   | Tray Support Bar | 1    |
| 5   | Tray             | 1    |

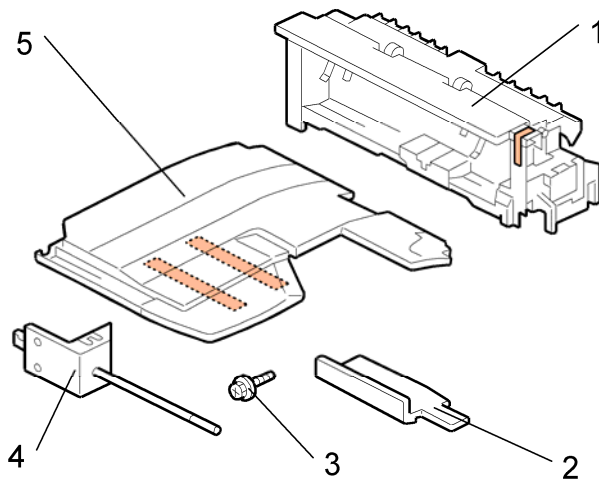


### 1.7.2 INSTALLATION PROCEDURE


#### **⚠ CAUTION**

- **Unplug the copier power cord before starting the following procedure.**


If the bridge unit (B227) has already been installed in the machine, remove it before installing 1-bin tray unit (B790). This will make it easier for you to do the following procedure.

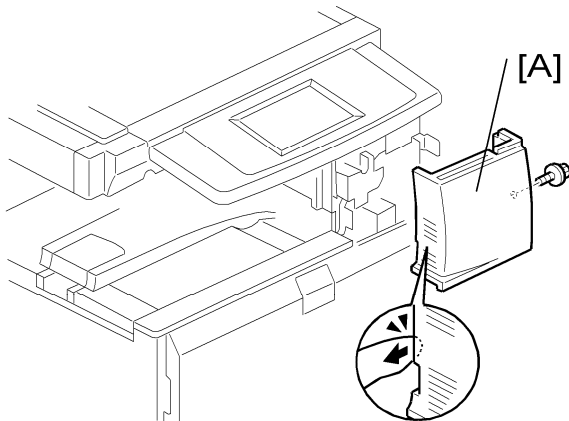


1. Remove all tapes.
2. Open the duplex unit at the right side of the machine.
3. Remove the front right cover [A] (🔩 x 1).

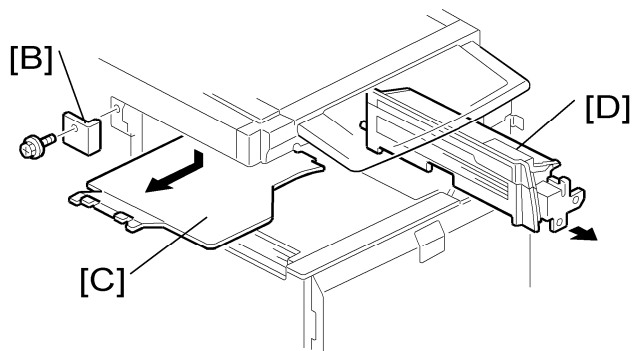

4. Remove the cover [B].
5. Remove the tray [C].
6. Remove the paper exit unit [D] (🔩 x 1).

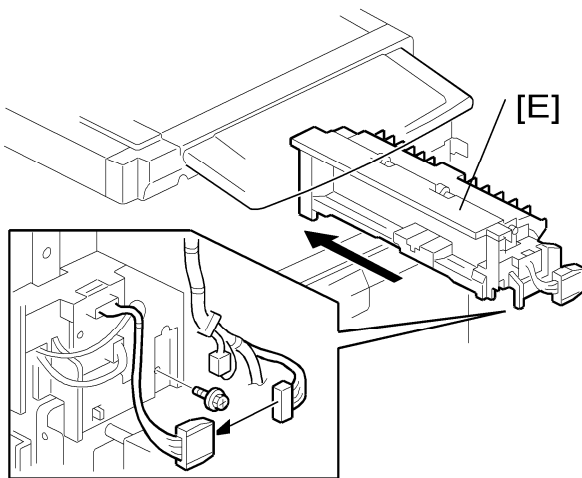

1. Install the 1-bin tray unit [E] (🔩 x 1, 📦 x 1).

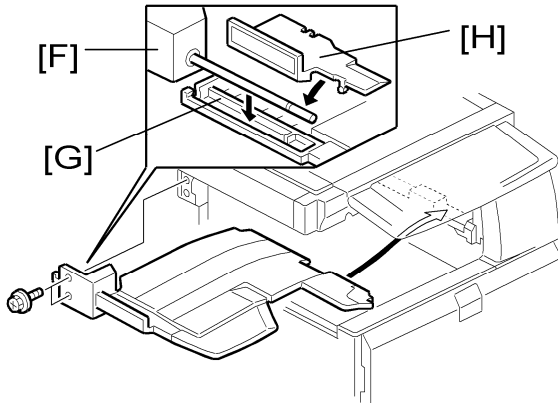


2. **Attach the tray support bar [F] to the tray [G] as shown, and then attach the end-fence [H].**
3. **Install the tray [G] (with the tray support bar) in the machine.**
4. **Reinstall the front right cover in the machine, and then close the right door of the machine.**
5. **Turn on the main power switch of the machine.**
6. **Check the 1-bin tray unit operation.**

## 1.8 SHIFT TRAY UNIT (B791)

### 1.8.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.


| No. | Description         | Q'ty |
|-----|---------------------|------|
| 1   | Shift Tray Unit     | 1    |
| 2   | Paper Guide - Large | 1    |
| 3   | Paper Guide - Small | 2    |
| 4   | Knob Screw          | 1    |
| 5   | Connector Cover     | 1    |

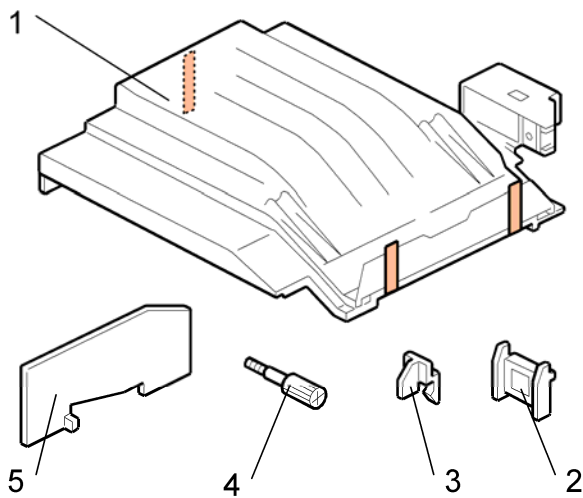


## 1.8.2 INSTALLATION PROCEDURE

### CAUTION

- Unplug the copier power cord before starting the following procedure.

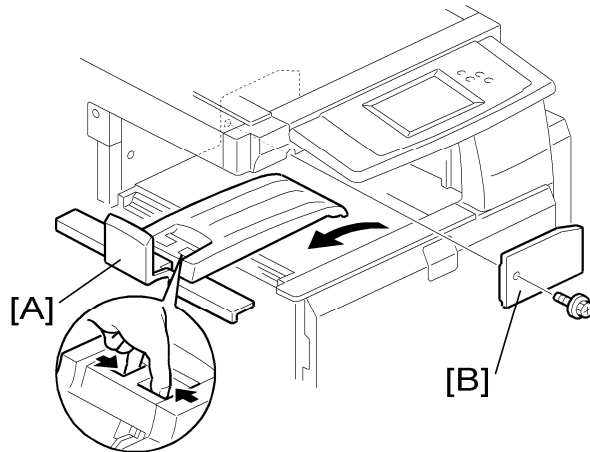


1. Remove all tapes.
2. Remove the standard tray [A].
3. Remove the inner cover [B] (⚙️ x 1).

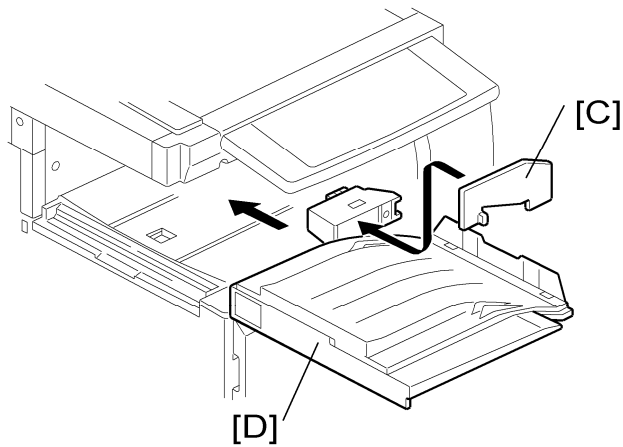

4. Attach the connector cover [C] to the shift tray unit [D].
5. Install the shift tray unit [D] to the machine.



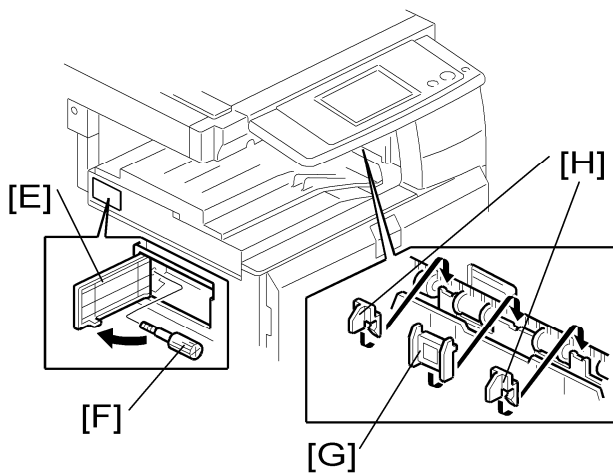


6. Open the left side door [E] of the shift tray unit.
7. Attach the shift tray unit to the machine with the knob screw [F].
8. Install the large paper guide [G] and two small paper guides [H].
9. Turn on the main power switch of the machine.
10. Check the shift tray unit operation.

## 1.9 BRIDGE UNIT (B227)

### 1.9.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.

| No. | Description    | Q'ty |
|-----|----------------|------|
| 1   | Bridge Unit    | 1    |
| 2   | Screw          | 1    |
| 3   | Knob screw     | 1    |
| 4   | Holder bracket | 1    |

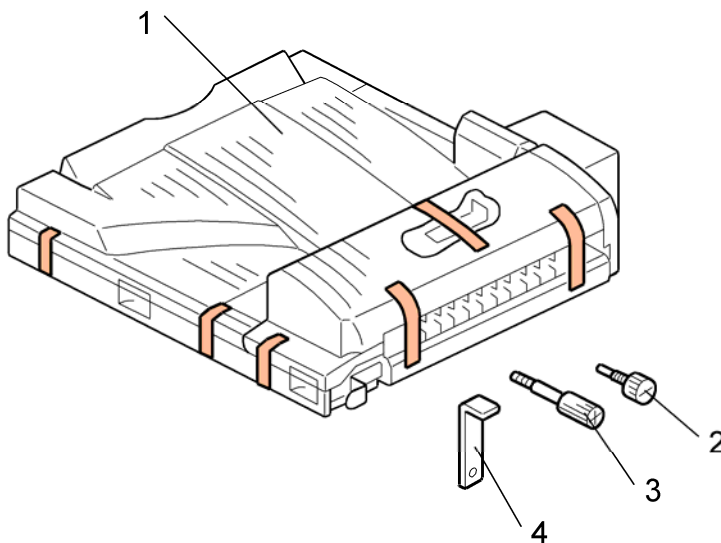

### 1.9.2 INSTALLATION PROCEDURE


#### **CAUTION**

- Unplug the copier power cord before starting the following procedure.


#### **Note**

- 1. If you will install the 1-bin tray (B790) in the machine, install the 1-bin tray before you installing the bridge unit (B227). This will make it easier for you to do the following procedure.
- 2. If you will install a finisher (B408, B792 or B793) in the machine, install the


finisher after you install the bridge unit (B227).

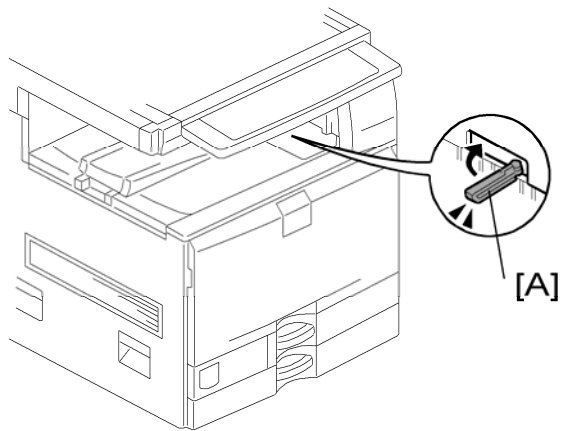


1. Remove all tapes.
2. If the sensor feeler [A] is out, fold it into the machine.
3. Open the duplex unit at the right side of the machine.

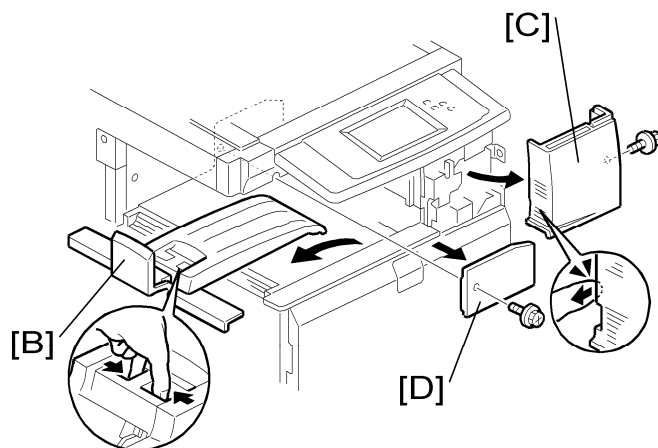

4. Remove the standard tray [B].
5. Remove the front right cover [C] (⚙️ x 1).
6. Remove the connector cover [D] (⚙️ x 1).

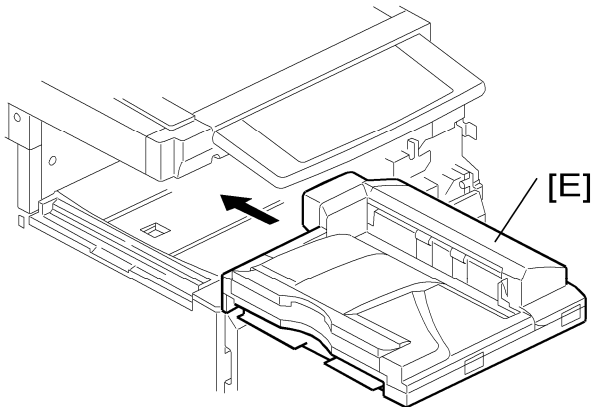

**7. Install the bridge unit [E] in the machine.**

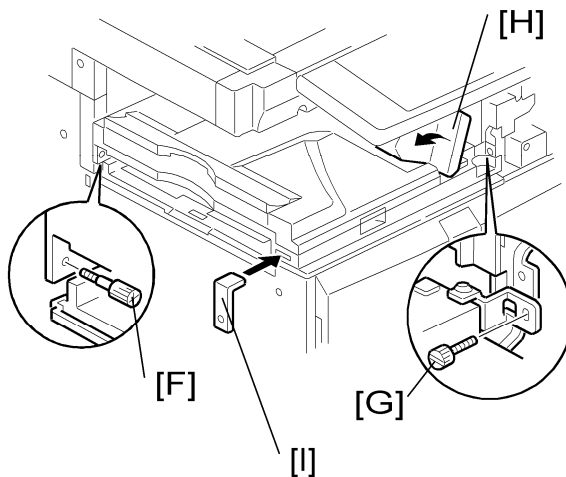

**8. Secure the bridge unit with the knob screw [F] and screw [G].**

**9. Reinstall the front right cover in the machine. Then close the right door of the machine.**

↓ Note

- Open the bridge unit cover [H] when installing the front right cover. Otherwise, the bridge unit cover is an obstacle for attaching the front right cover.

**10. Install the optional finisher (refer to the finisher installation procedure).**

↓ Note

- If you will not install the finisher at this time, install the holder bracket [I]. Otherwise, the customer will damage the bridge unit if they pull up the bridge unit tray. When you install the finisher, you will need this bracket during the installation procedure.

**11. Turn on the main power switch of the machine.**


**12. Check the bridge unit operation.**

## 1.10 500-SHEET FINISHER (B792)

### 1.10.1 ACCESSORY CHECK

Check the quantity and condition of the accessories against the following list.

| No. | Description           | Q'ty |
|-----|-----------------------|------|
| 1   | Output Tray           | 1    |
| 2   | Unit Holder           | 1    |
| 3   | Support Bracket       | 2    |
| 4   | Support Bracket Cover | 2    |
| 5   | Screws                | 6    |
| 6   | Knob Screws           | 4    |
| 7   | Snap Rings            | 2    |
| 8   | Bracket Cover         | 1    |
| 9   | Paper Guide           | 1    |

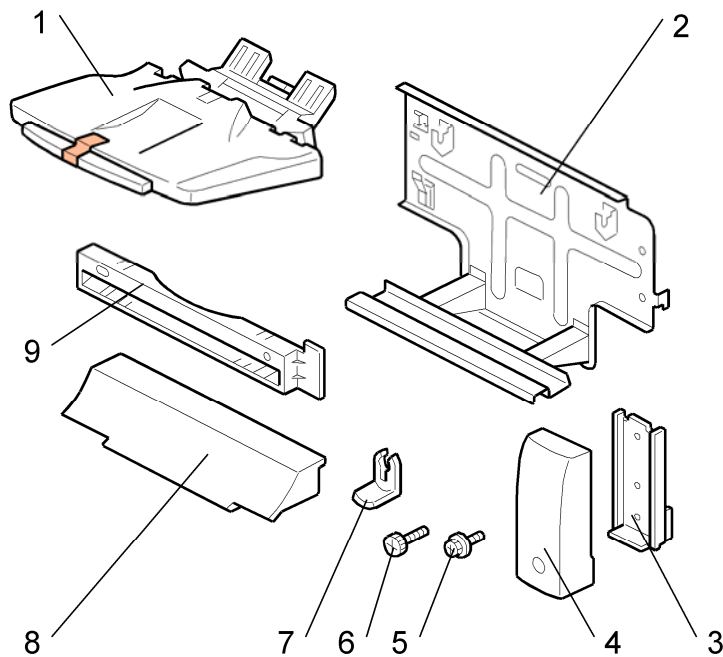

## 1.10.2 INSTALLATION PROCEDURE

### **⚠ CAUTION**


- Unplug the main machine power cord before starting the following procedure.

#### **↓ Note**

- Before you install the 500-sheet finisher, the optional bridge unit (B227) must be installed


### ***Beforehand: Installing on a machine with the optional paper feed unit or LCT***

When you install this unit on a machine with the optional paper feed unit or LCT, you must install support brackets on the optional paper feed unit or LCT. These support brackets can prevent the machine from falling to the left side. You do not need to install support brackets on machines without the optional paper feed unit or LCT.

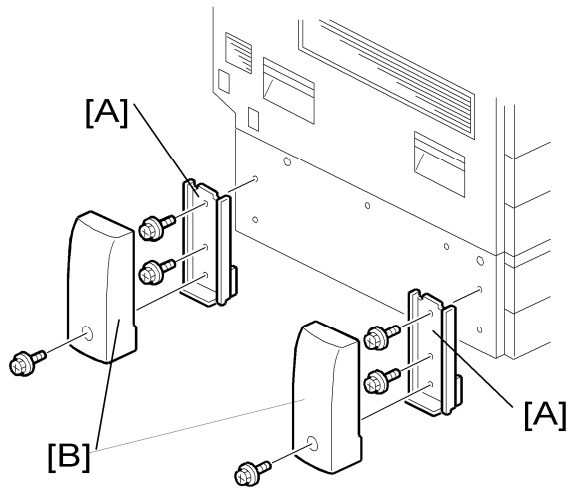


1. Install the two support brackets [A] on the left side of the machine (🔩 x 1 each).
2. Install the two support bracket covers [B] on the support brackets (🔩 x 1 each).

***Installation of the 500-Sheet Finisher***

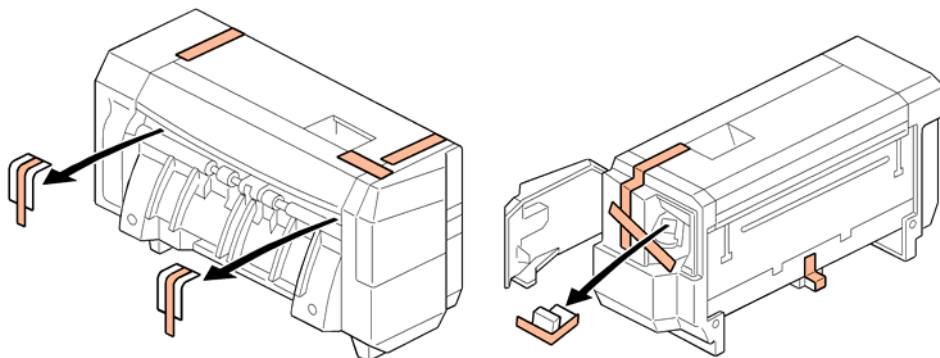


1. **Unpack the finisher and remove all tapes and retainers.**

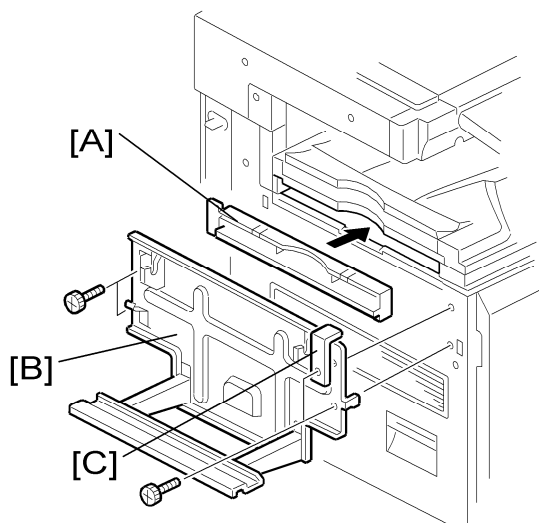


2. Attach the paper guide [A].
3. Attach the unit holder [B] and the holder bracket [C] (knob screw x 4).

↓ Note

- The holder bracket [C] must be placed outside the unit holder [B]. The holder bracket is provided with the bridge unit (B227).

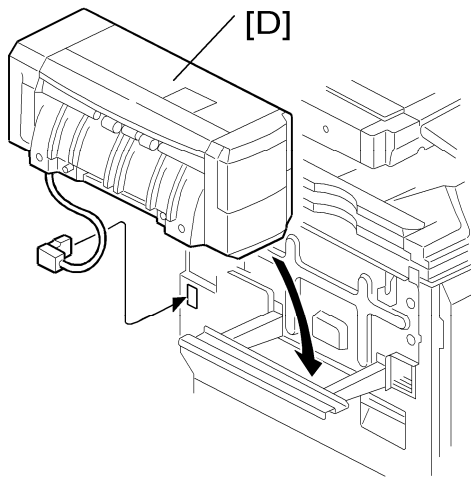

4. Install the 500-sheet finisher [D] on the machine (📄 x 1).

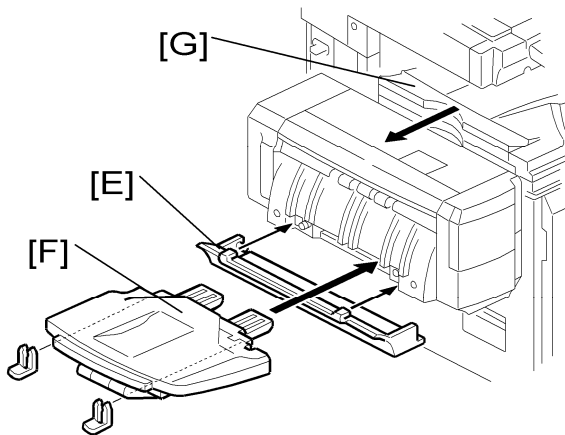

5. Attach the bracket cover [E].
6. Install the output tray [F] on the 500-sheet finisher (2 snap rings).
7. Pull out the tray extension [G] of the bridge unit.
8. Turn on the main power switch, and then check the finisher operation.




## 1.11 1000-SHEET FINISHER (B408)

### 1.11.1 ACCESSORY CHECK

Check the quantity and condition of the accessories against the following list.

| No. | Description           | Q'ty | B230/B237/D042 |
|-----|-----------------------|------|----------------|
| 1   | Front Joint Bracket   | 1    | O              |
| 2   | Rear Joint Bracket    | 1    | ---            |
| 3   | Rear Joint Bracket    | 1    | O              |
| 4   | Grounding Plate       | 1    | O              |
| 5   | Copy Tray             | 1    | O              |
| 6   | Staple Position Decal | 1    | O              |
| 7   | Screw - M4 x 14       | 4    | O              |
| 8   | Knob Screw - M4 x 10  | 1    | O              |
| 9   | Screw - M3 x 8        | 1    | O              |
| 10  | Knob Screw - M3 x 8   | 1    | O              |


O = Necessary, --- = Not necessary

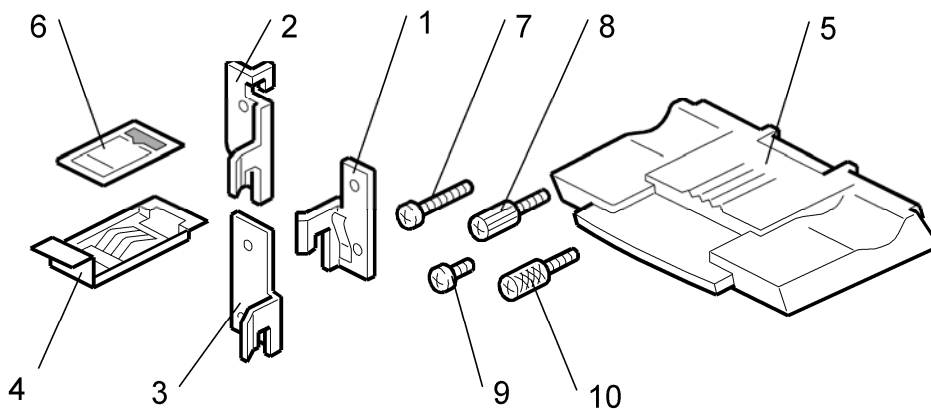

## 1.11.2 INSTALLATION PROCEDURE

### **⚠ CAUTION**


- Unplug the main machine power cord before starting the following procedure.

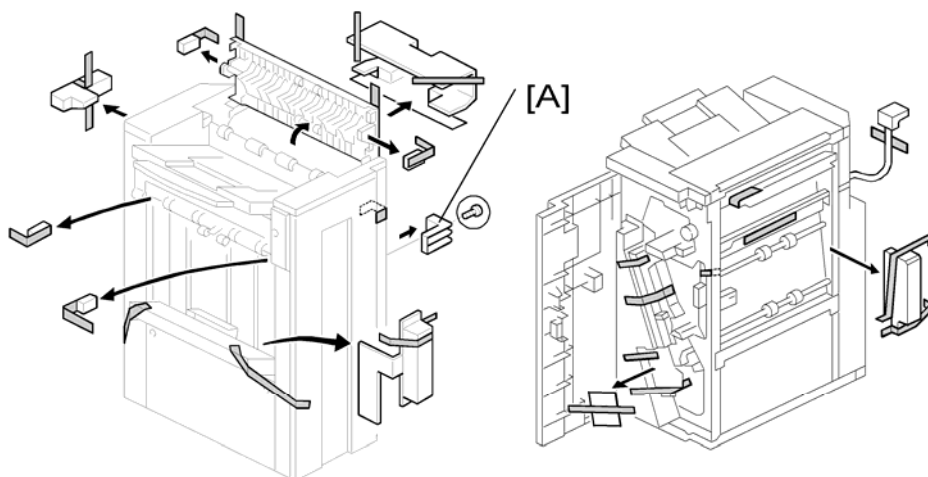

If this finisher will be installed on the B230/B237/D042 copier, the following options must be installed before installing this finisher.

- Bridge Unit (B227)
- Paper Feed Unit (B800) or LCT (B801)


1. Unpack the finisher, and then remove the stopper [A] and tapes (🔩 x 1).

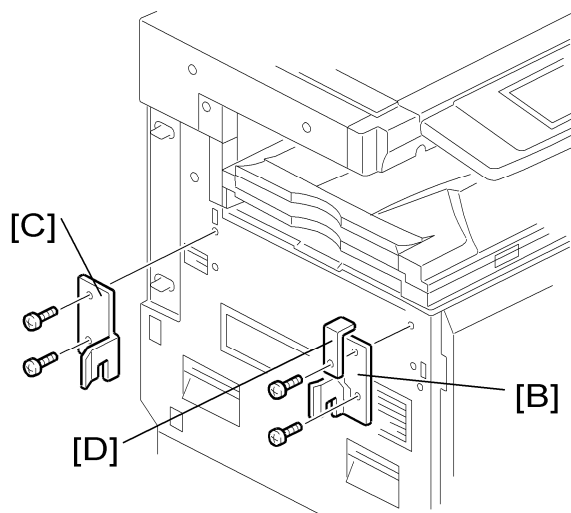

2. Install the front joint bracket [B], holder bracket [C] (🔩 x 2 - M4 x 14), and rear joint bracket [D] (🔩 x 2 - M4 x 14).

#### ↓ Note

- The holder bracket [C] must be placed outside the front joint bracket [B]. The holder bracket is provided with the bridge unit (B227).

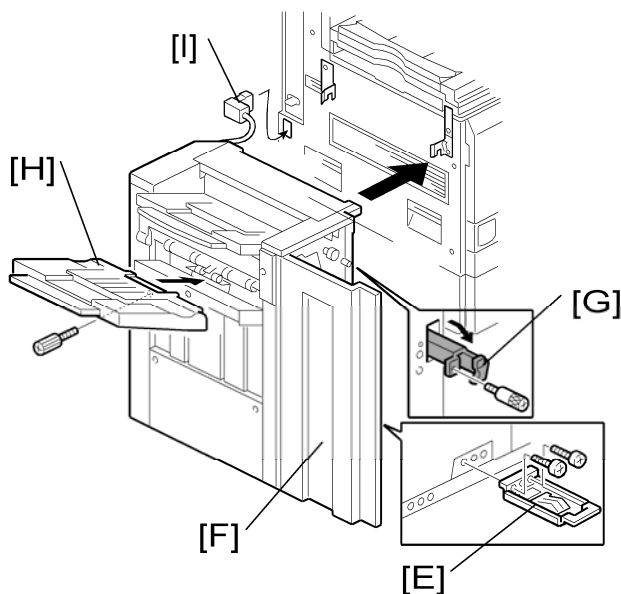


3. Install the grounding plate [E] on the finisher (1 x 2 - M3 x 8).

↓ Note

- Use the screw removed in step 1 and the screw from the accessory box.

4. Open the front door [F] of the finisher, and then pull the locking lever [G].
5. Align the finisher on the joint brackets, and lock it in place by pushing the locking lever.
6. Secure the locking lever (1 knob screw - M3 x 8).
7. Close the front door.
8. Install the copy tray [H] (1 knob screw - M4 x 10).
9. Connect the finisher cable [I] to the main machine below the right rear handle.

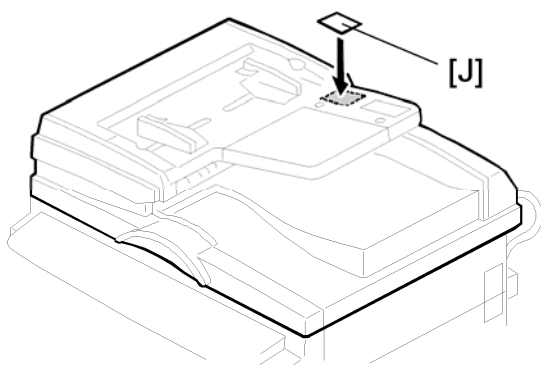

10. Attach the staple position decal [J] to the ARDF as shown.


11. Turn on the main power switch and check the finisher operation.

## 1.12 1000-SHEET BOOKLET FINISHER (B793)

### 1.12.1 ACCESSORY CHECK

Check the quantity and condition of the accessories against the following list.

| No. | Description         | Q'ty |
|-----|---------------------|------|
| 1   | Rear Joint Bracket  | 1    |
| 2   | Front Joint Bracket | 1    |
| 3   | Grounding Plate     | 1    |
| 4   | Upper Output Tray   | 1    |
| 5   | Cushion             | 2    |
| 6   | Lower Output Tray   | 1    |
| 7   | Short Knob Screw    | 1    |
| 8   | Long Knob Screw     | 1    |
| 9   | Screw (M3 x 8)      | 2    |
| 10  | Screw (M4 x 14)     | 4    |

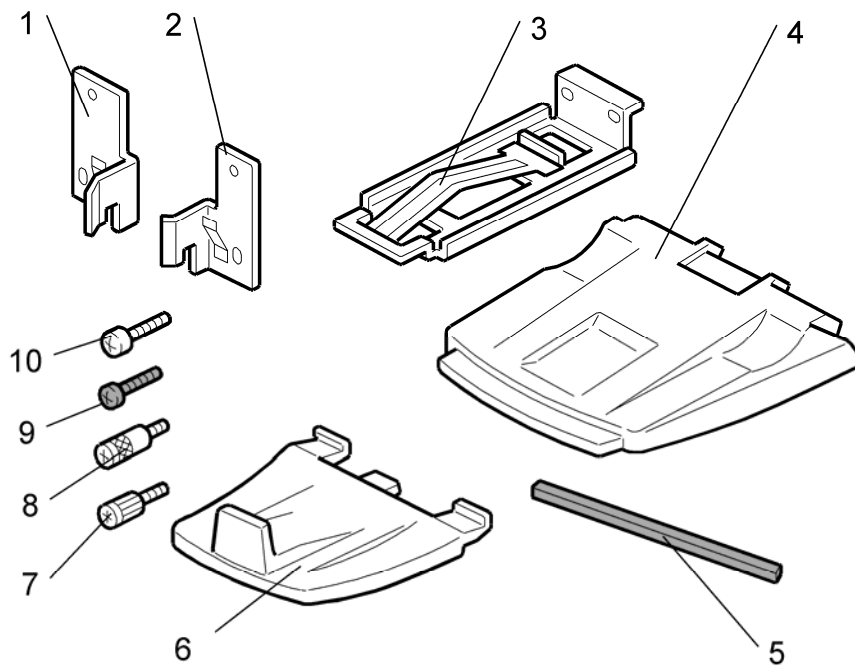


### 1.12.2 INSTALLATION PROCEDURE


#### **⚠ CAUTION**

- **Unplug the main machine power cord before starting the following procedure.**


The bridge unit (B227) and optional paper feed unit (B800 or B801) must be installed before installing this finisher (B793).

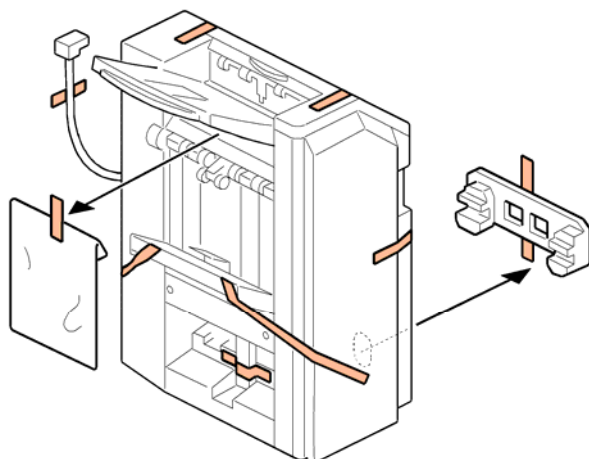

- 1. Unpack the finisher and remove all tapes and packing materials from the finisher.**

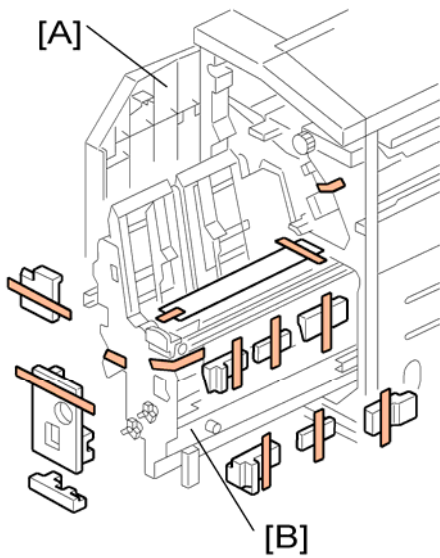

2. Open the front door [A] of the 1000-sheet booklet finisher, and then pull out the jogger unit [B].
3. Remove all tapes and packing materials from the inside of the finisher.

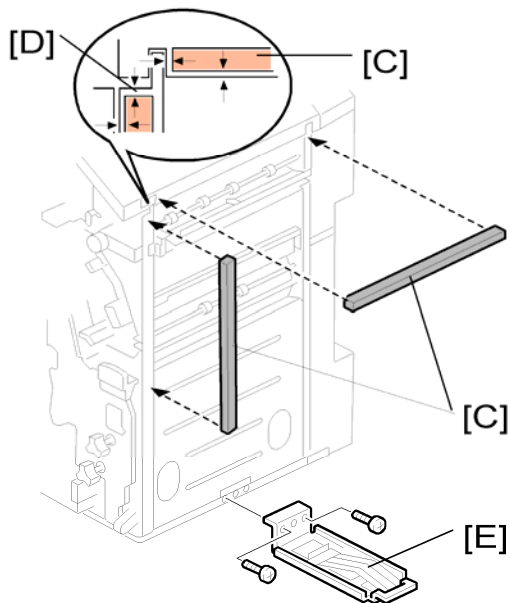




4. Attach the cushions [C] to the finisher.

↓ Note

- Make sure that the cushions are placed within 0 to 1 mm [D] from the edge of the cover or frame.

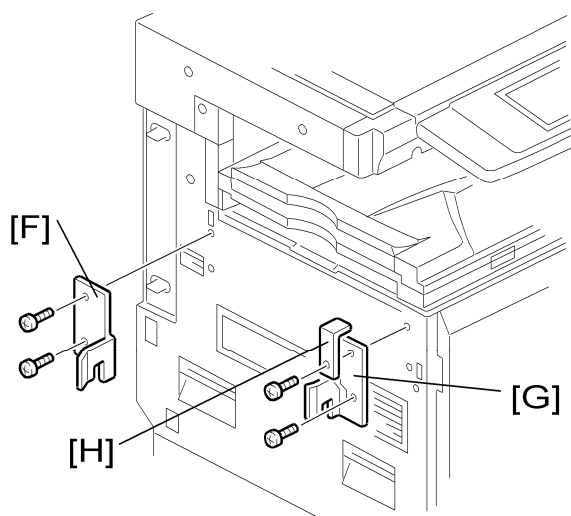
5. Install the ground plate [E] on the finisher (⚙ x 2; M3 x 8).




6. **Attach the rear joint bracket [F]**  
( x 2, M4 x 14).
7. **Attach the front joint bracket [G] and the holder bracket [H]** ( x 2; M4 x 14).

 **Note**

- The holder bracket [H] must be placed outside the front joint bracket [G]. The holder bracket is provided with the bridge unit (B227).

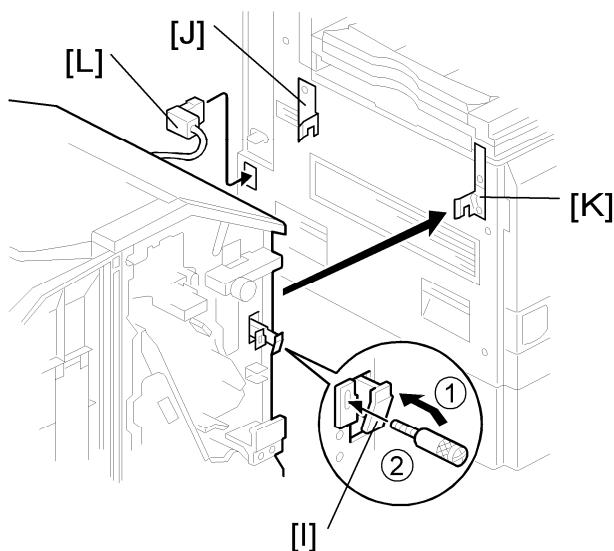

8. **Pull the lock lever [I]** (Long knob screw x 1).
9. **Slowly push the finisher to the left side of the machine, keeping its front door open until the brackets [J] [K] go into their slots.**
10. **Push the lock lever [I], and then secure it (Long knob screw x 1).**
11. **Close the front door of the finisher.**
12. **Connect the finisher connector [L] to the machine.**

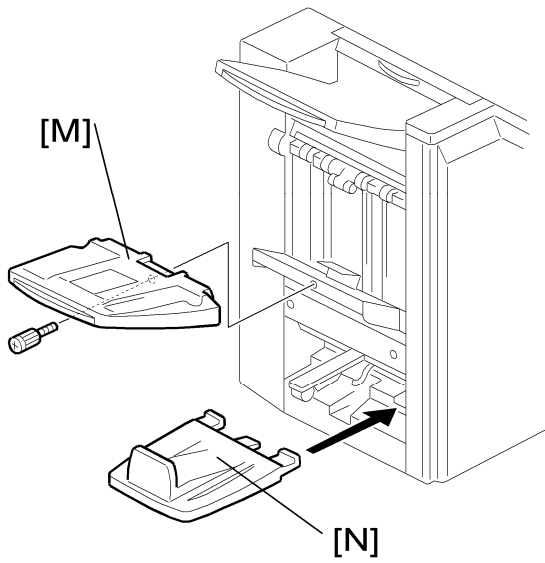

13. Install the upper output tray [M] (Short knob screw x 1).
14. Install the lower output tray [N].
15. Turn on the main power switch of the machine.
16. Check the 1000-sheet booklet finisher operation.




## 1.13 PUNCH UNIT

### 1.13.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.


| No. | Description                        | Q'ty |
|-----|------------------------------------|------|
| 1   | Punch Unit                         | 1    |
| 2   | Punch Drive Motor                  | 1    |
| 3   | Hopper Full Sensor Arm             | 1    |
| 4   | Sub-scan Registration Sensor Unit  | 1    |
| 5   | Punch Unit Stay                    | 1    |
| 6   | Sub-scan Registration Sensor Guide | 1    |
| 7   | Hopper                             | 1    |
| 8   | Screw                              | 1    |
| 9   | Step Screw                         | 1    |
| 10  | Spring                             | 1    |

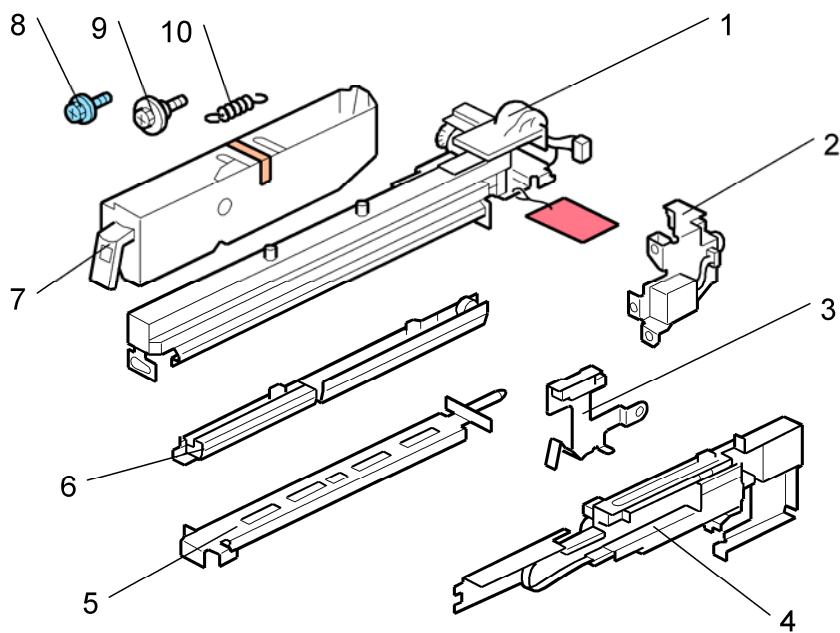


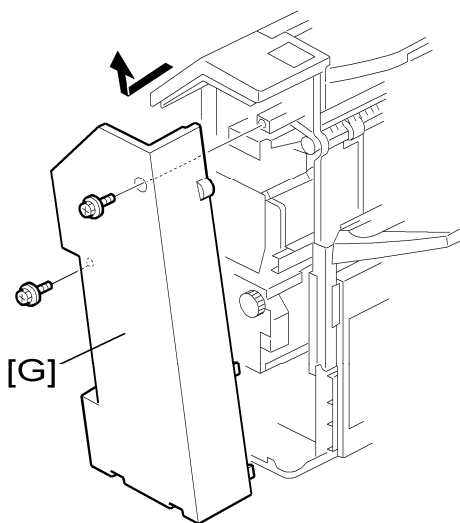
## 1.13.2 INSTALLATION

### CAUTION


- Unplug the main machine power cord before starting the following procedure. If the 1000-sheet booklet finisher has been installed, disconnect it and pull it away from the machine.

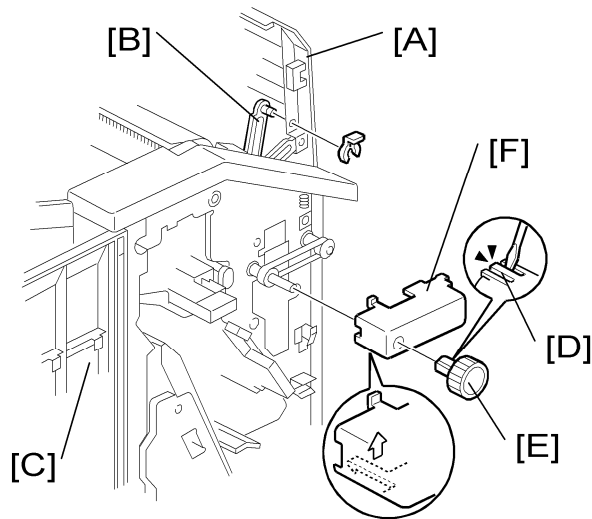


1. If the finisher is connected to the machine, disconnect it.
2. Open the top cover [A] and then release the guide arm [B] ( x 1).
3. Open the front door [C].
4. Pull the hook [D] up then remove the knob [E].
5. Timing belt cover [F].




6. Rear cover of the 1000-sheet booklet finisher [G] ( x 2).

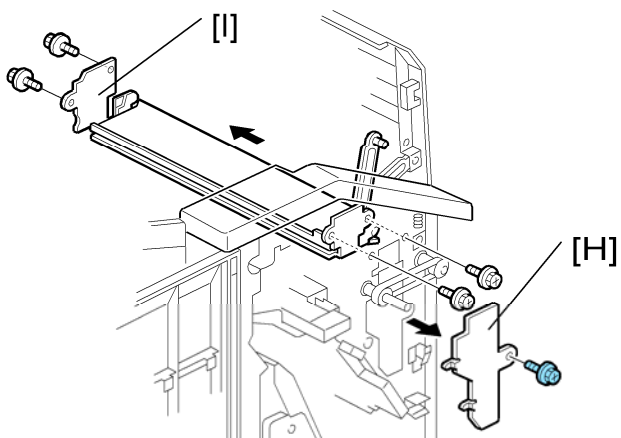


7. Cover bracket [H] (⚙ x 1)
8. Remove the paper guide plate [I] from the rear side (⚙ x 4).

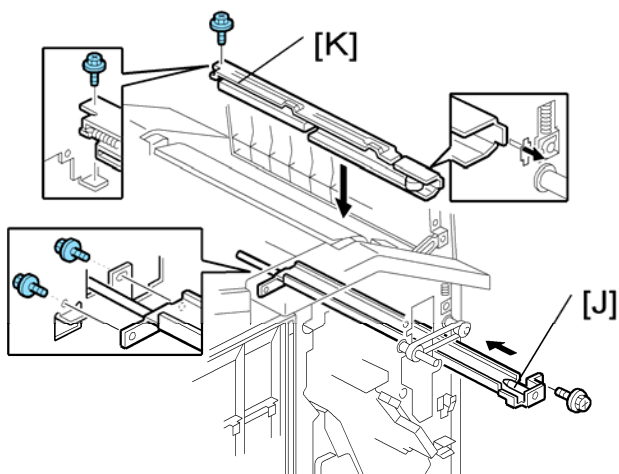

9. Install the punch unit stay [J] from the front side (⚙ x 3).
10. Install the sub-scan registration sensor guide [K] from the top (⚙ x 1).

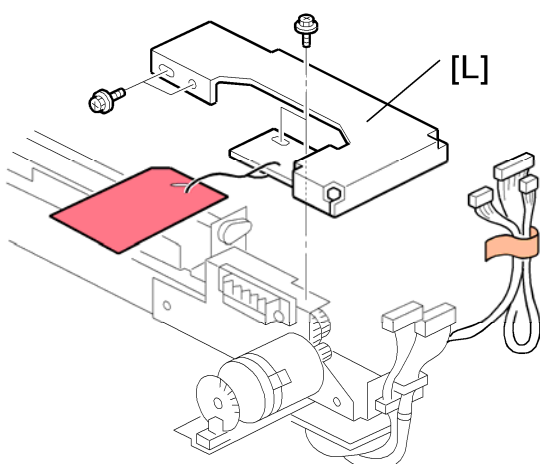


11. Remove the bracket [L] from the punch unit (🔧 x 1).

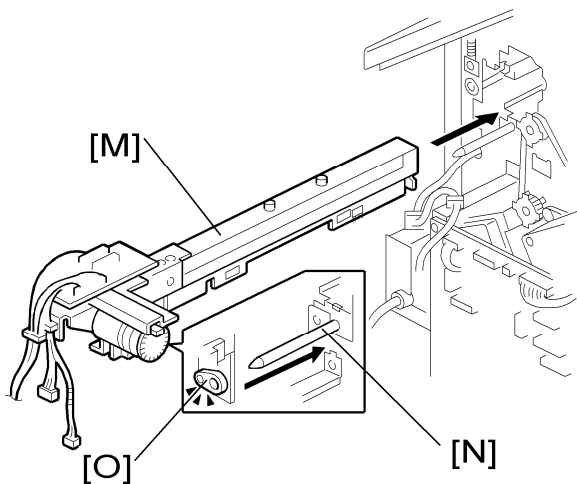


12. Install the punch unit [M] along the punch unit stay from the rear side.

13. Make sure to put the punch unit stay pin [N] through the hole

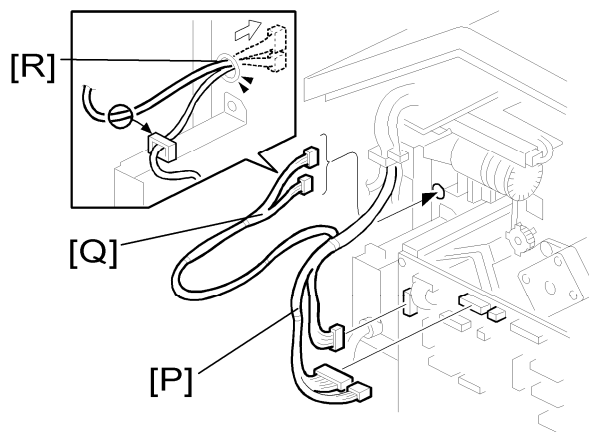


14. Connect the harnesses [P] to the main PCB.


15. Put the harnesses [Q] through the hole [R] in the rear frame (🔧 x 1).

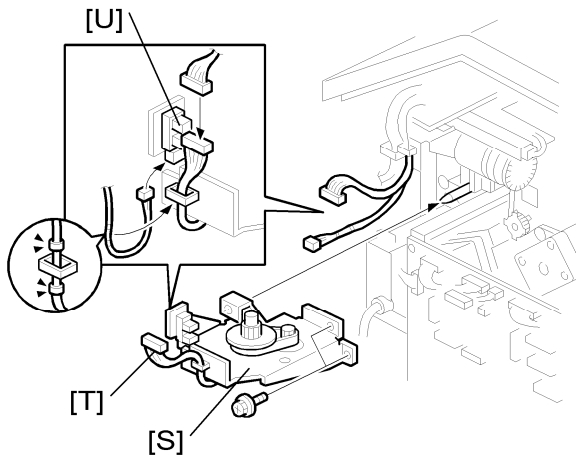


16. Install the punch drive motor [S] on the rear frame (🔩 x 2).
17. Connect the drive motor harness [T] to the harness from the punch unit (🔌 x 1).
18. Connect the home position sensor harness from the punch unit to the home position sensor [U].

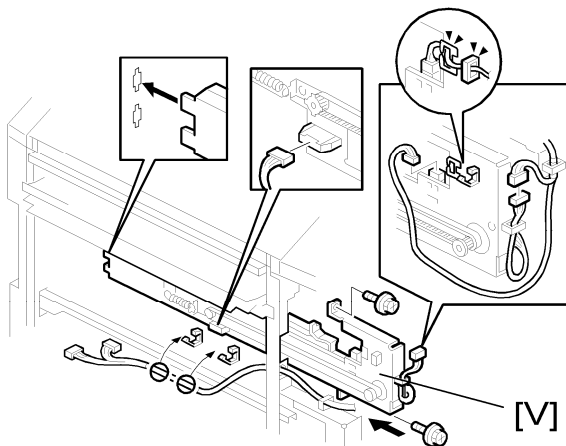

19. Install the sub-scan registration sensor unit [V] from the rear side (🔩 x 2).
20. Route and connect the harnesses as shown (🔌 x 2).

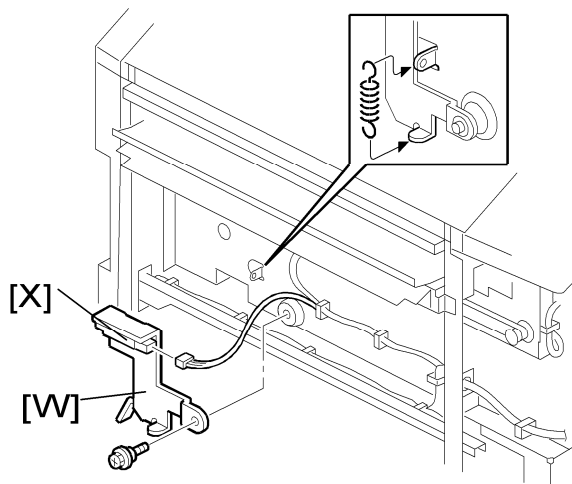


21. Install the hopper full sensor arm [W] (⚙️ x 1, spring x 1).
22. Connect the harness from the sub-scan registration sensor unit to the hopper full sensor [X].

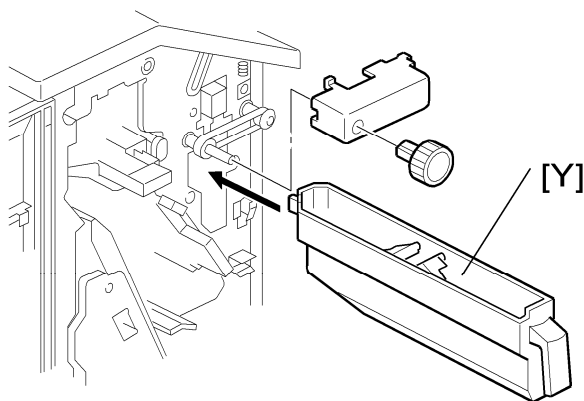

23. Install the hopper [Y] from the front side.
24. Reinstall the timing belt cover and knob.
25. Reinstall the rear cover (⚙️ x 2).
26. Close the front door and top cover.
27. Install the 1000-sheet booklet finisher on the copier.
28. Plug in and turn on the main power switch.
29. Check the 1000-sheet booklet finisher operation.

## 1.14 MECHANICAL COUNTER (NA ONLY)

### 1.14.1 INSTALLATION PROCEDURE

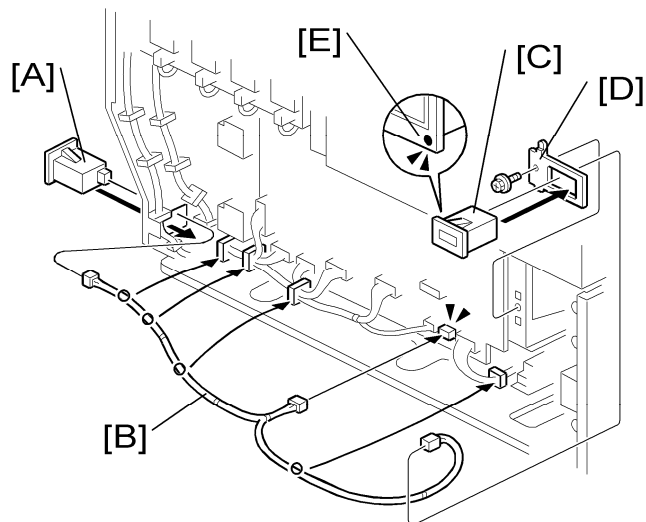


1. Rear cover (see "Rear Cover" in the "Replacement and Adjustment" section)
2. Right rear cover (see "Right Rear Cover" in the "Replacement and Adjustment" section)
3. PSU bracket (see "PSU" in the "Replacement and Adjustment" section)
4. Install the mechanical counter for Bk [A] in the right frame of the machine.
5. Connect the harness [B] to the mechanical counter for Bk.
6. Route the harness as shown with clamps, and then connect it to CN260 on the IOB.
7. Install the mechanical counter for Full Color [C] in the bracket [D].

**Note**

- The mark [E] should be at the lower side, as shown in the diagram.
8. Connect the harness to the mechanical counter for Full Color.
  9. Attach the bracket [D] to the frame of the IOB (⚙ x 1).
  10. Reassemble the machine.
  11. Plug in the power cord and turn on the main power switch.
  12. Enter the SP mode.
  13. Set SP5987-001 to "1: ON".
  14. Exit the SP mode, and then turn the machine off and on.

## 1.15 MECHANICAL COUNTER (NA ONLY)

### 1.15.1 INSTALLATION PROCEDURE

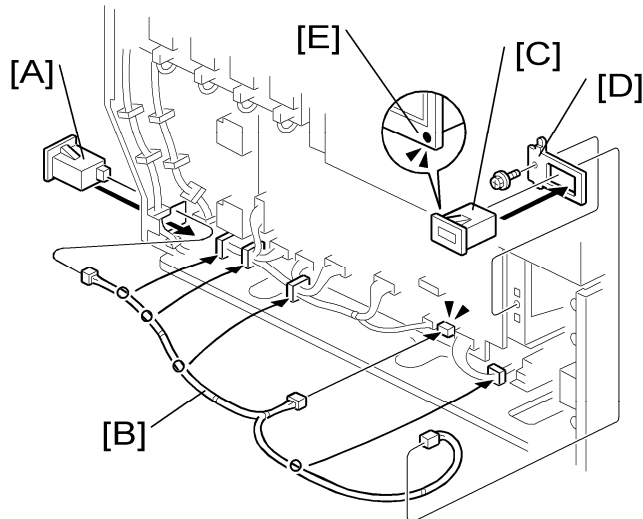

1. Rear cover (see "Rear Cover" in the "Replacement and Adjustment" section)
2. Right rear cover (see "Right Rear Cover" in the "Replacement and Adjustment" section)
3. PSU bracket (see "PSU" in the "Replacement and Adjustment" section)
4. Install the mechanical counter for Bk [A] in the right frame of the machine.
5. Connect the harness [B] to the mechanical counter for Bk.
6. Route the harness as shown with clamps, and then connect it to CN260 on the IOB.
7. Install the mechanical counter for Full Color [C] in the bracket [D].

↓ Note


- The mark [E] should be at the lower side, as shown in the diagram.
8. Connect the harness to the mechanical counter for Full Color.
  9. Attach the bracket [D] to the frame of the IOB (⚙ x 1).
  10. Reassemble the machine.
  11. Plug in the power cord and turn on the main power switch.
  12. Enter the SP mode.
  13. Set SP5987-001 to "1: ON".
  14. Exit the SP mode, and then turn the machine off and on.




## 1.16 KEY COUNTER BRACKET

### 1.16.1 INSTALLATION PROCEDURE


1. Open the right door.
2. Rear cover [A] (⚙ x 7)
3. Scanner right cover [B] (⚙ x 2)
4. Cut off the part [C] of the scanner right cover.
5. Punch out the small hole [D] using a screwdriver.

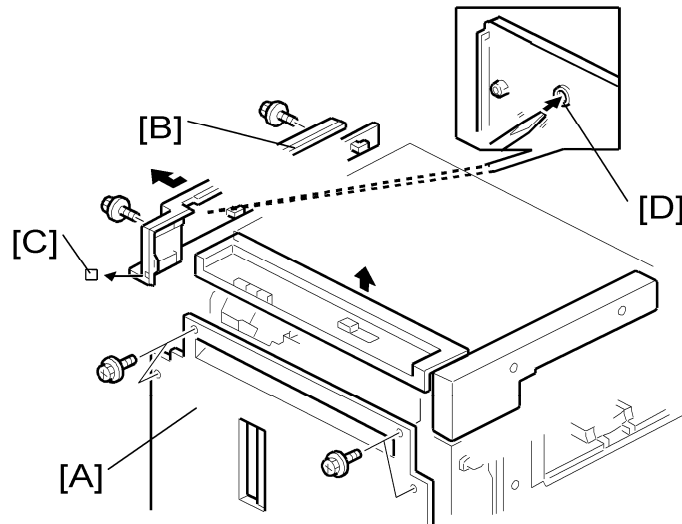

6. Hold the key counter plate nuts [E] on the inside of the key counter bracket [F] and insert the key counter holder [G].
7. Secure the key counter holder to the bracket (⚙ x 2).
8. Install the key counter cover [H] (⚙ x 2).

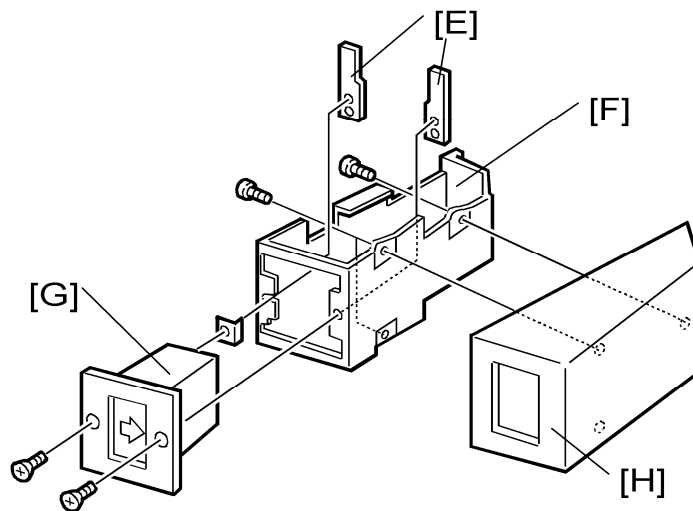


9. Connect the harness to the connector [I] inside the machine.
10. Install the key counter.
11. Reassemble the machine.

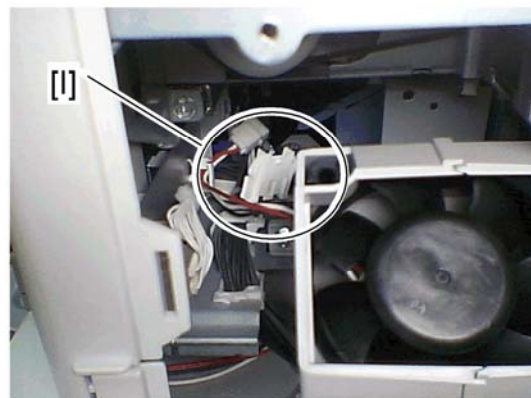


## ⇒ 1.17 KEY CARD INTERFACE UNIT

### 1.17.1 INSTALLATION PROCEDURE

1. Remove the rear cover (🔩 x 7).


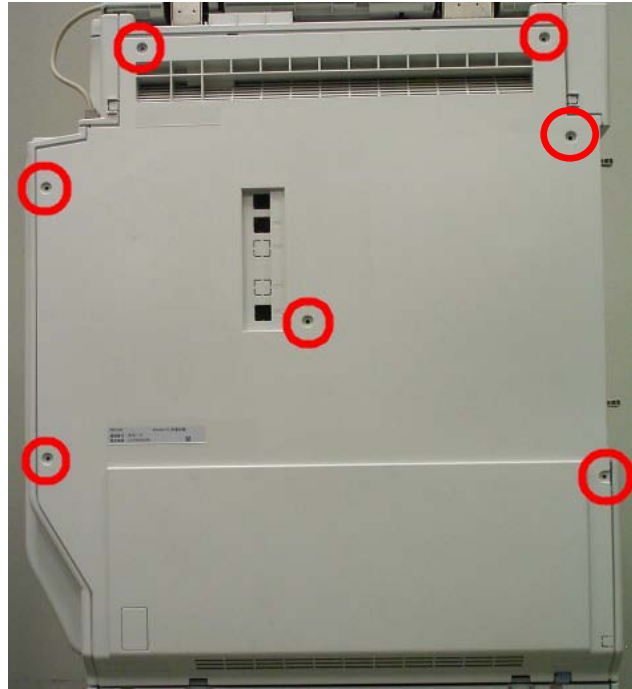


2. Loosen the seven screws (🔩 x 7).


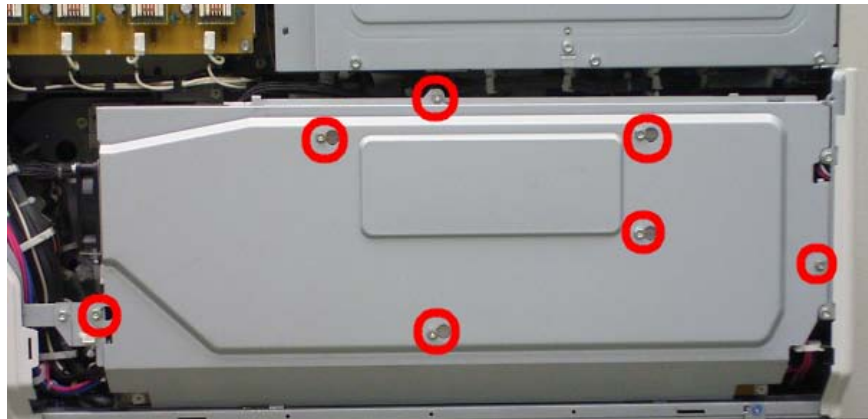


3. Slide the PSU box cover to the left side and then remove it.

⇒ 4. Remove the four screws (🔩 x 4) and ten connectors (🔌 x 10).

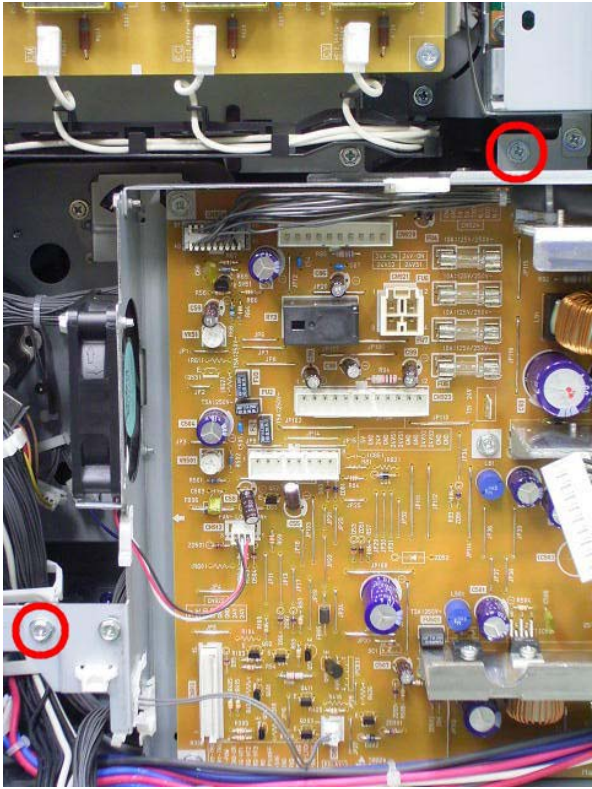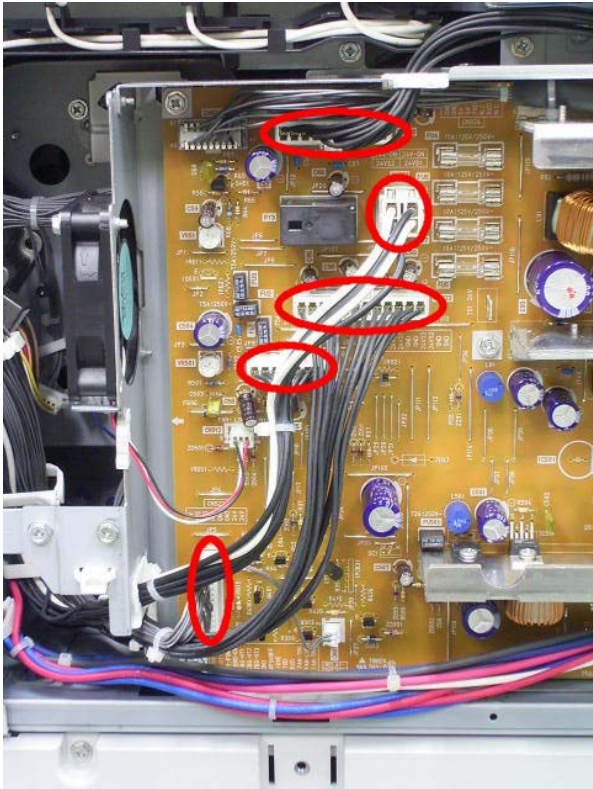

Left side

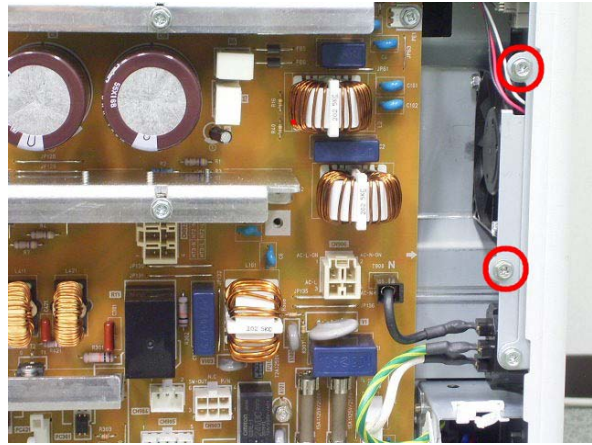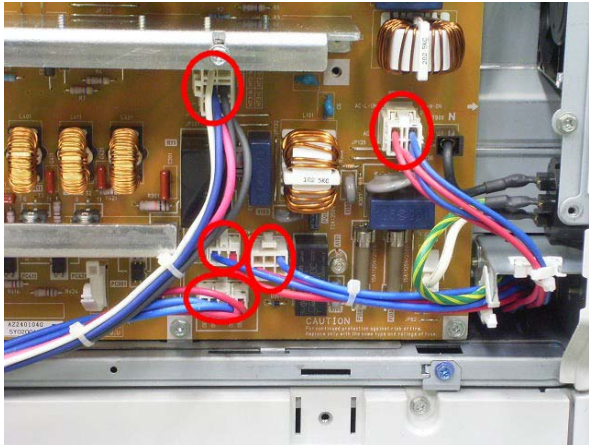

<Right side>

5. Slide the PSU to the left together with its bracket, and then remove it.


- ⇒ 6. Attach the key counter I/F board to the rear side of the PSU bracket (4 stud stays).



7. Connect one end of the harness to CN3 on the key counter I/F board, and the other end to CN252 on the IOB board.



CN3 on key counter I/F

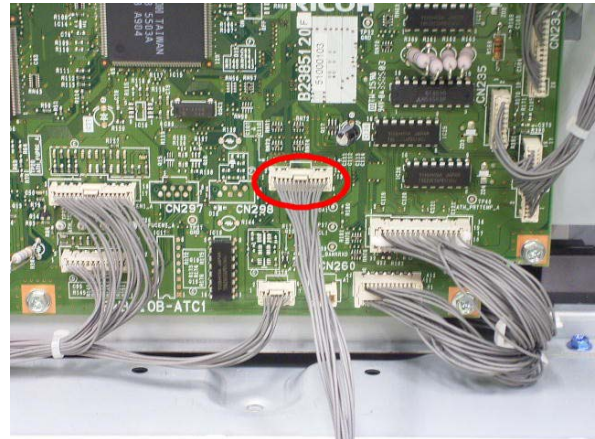

CN 252 on IOB board

8. Remove the cutout on the rear cover shown in the photo to the right.

9. Connect one end of the harness to CN4 on the key counter I/F board.



10. Reattach the PSU with its bracket (⚙ x 4), (🔩 x 10).

11. Attach the key counter I/F board.

12. Reattach the PSU box cover and tighten the seven screws.

13. Reattach the rear cover.


**IMPORTANT:** Lead the harness through the cutout space in the rear cover.

14. Connect the other end of the harness to the counter device.


## 1.18 ANTI-CONDENSATION HEATER (SCANNER)

### 1.18.1 INSTALLATION PROCEDURE

1. Rear cover (see "Rear Cover" in the "Replacement and Adjustment" section)
2. Open the ARDF or platen cover.
3. Glass cover [A] (⚙ x 4)
4. ARDF exposure glass [B]
5. Rear scale [C] (⚙ x 3)
6. Exposure glass with left scale [D]

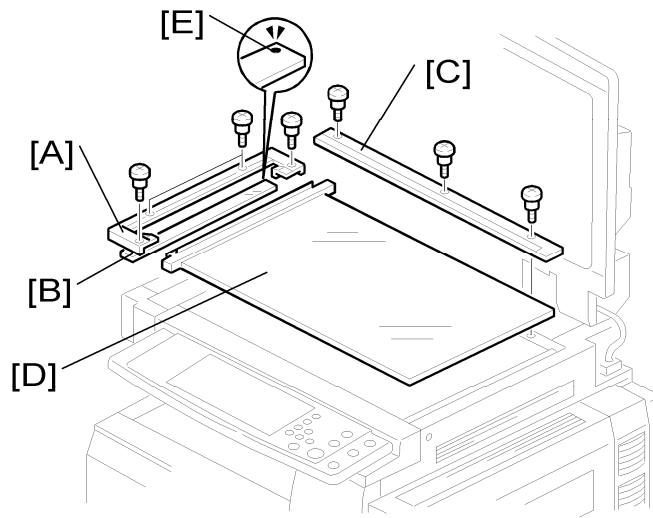


7. Move the scanner carriage to the right side by rotating the scanner motor [E].
8. Install the heater [F] in the scanner unit (⚙ x 1, hook)
9. Put the connector [G] through the cutout.
10. Connect it to the connector [H] (blue and red cords) in the frame of the machine.
11. Reassemble the machine.

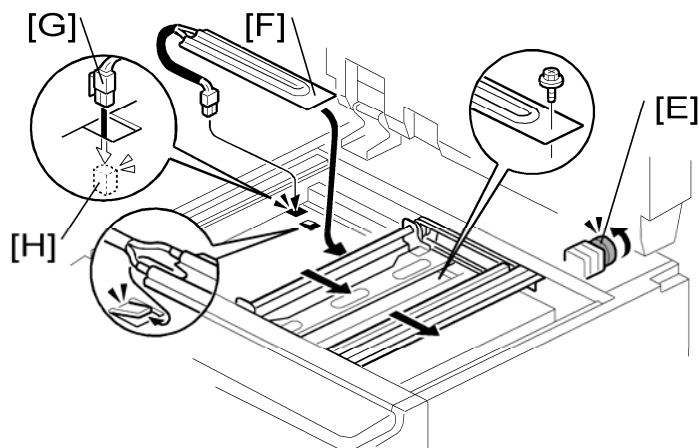

## 1.19 TRAY HEATER

### 1.19.1 INSTALLATION PROCEDURE

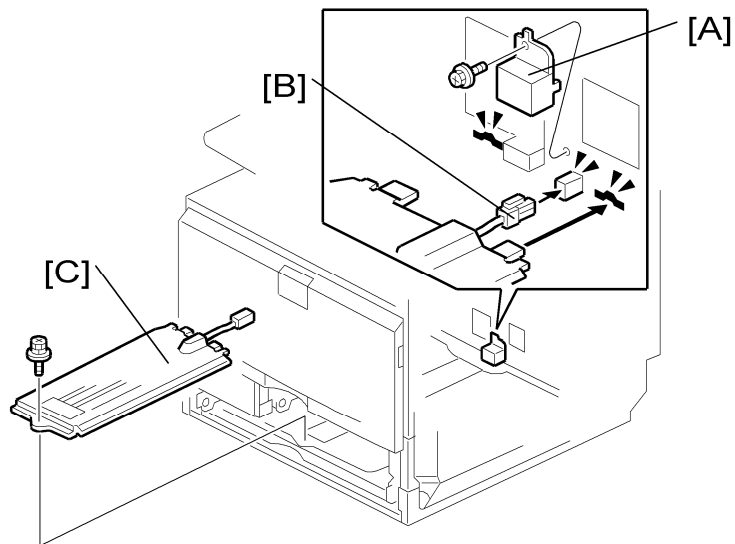


1. Remove trays 1 and 2 from the machine.
2. Remove the connector cover [A] (⚙️ x 1).
3. Connect the connector [B] of the heater to the connector of the main machine.
4. Install the heater [C] inside the machine (⚙️ x 1)
5. Reassemble the machine.

## 1.20 CONTROLLER OPTIONS

### 1.20.1 OVERVIEW

This machine has I/F card slots and SD card slots for optional I/F connections and applications.

After you install an option, check that the machine can recognize it (see “Check All Connections” at the end of this section).

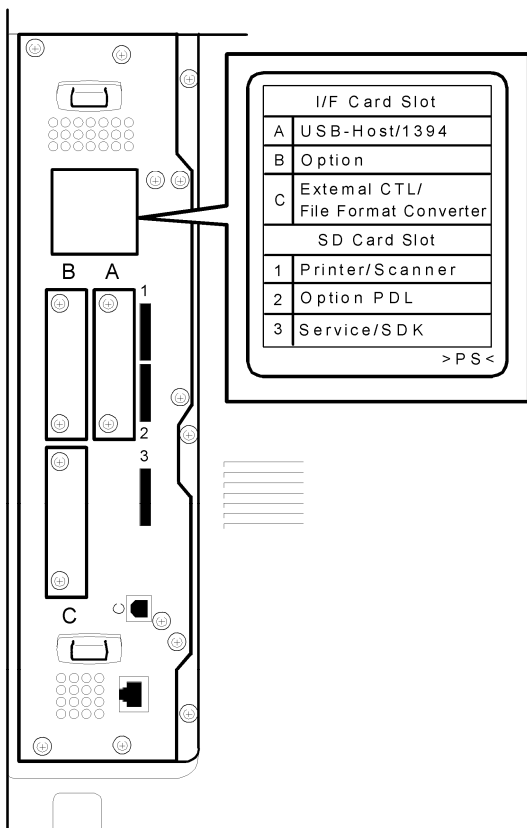

#### ***I/F Card Slots***

- Slot A is used for the IEEE1394 (FireWire) or USB Host only.
- Slot B is used for one of the optional I/F connections (only one can be installed): IEEE1284, IEEE802.11 (Wireless LAN), or Bluetooth
- Slot C is used for the file format converter only.

**Note**

- Only one of these cards (IEEE1284, IEEE802.11, and Bluetooth) can be installed at same time in this machine.

#### ***SD Card Slots***

- Slot 1 is used for the standard printer/scanner application only.

- ⇒
  - Slot 2 is used for one of the optional applications: PostScript 3, Data Overwrite Security Unit, PictBridge, VM Card
  - Slot 3 is used for installing the Browser Unit, VM Card, or for service only (for example, updating the firmware).

## 1.20.2 SD CARD APPLI MOVE

### Overview

The service program “SD Card Appli Move” (SP5-873) lets you copy application programs from one SD card to another SD card.

Slot 1 and Slot 2 are used to store application programs. But there are 3 possible applications (PostScript 3, DOS unit, PictBridge). You cannot run application programs from Slot 3. However you can move application programs from Slot 3 to either Slot 1 or Slot 2 with the following procedure (Slot 1 has the priority in this procedure if both Slot 1 and Slot 2 are used.):

Make sure that the target SD card has enough space.


1. Enter SP5873 “SD Card Appli Move”.
2. Then move the application from the SD Card in Slot 3 to the card in slot 1.



- Do steps 1-2 again if you want to move another application program.
3. Exit the SP mode.

Be very careful when you do the SD Card Appli Move procedure:

- The data necessary for authentication is transferred with the application program from an SD card to another SD card. Authentication fails if you try to use the SD card after you copy the application program from one card to another card.
- Do not use the SD card if it has been used before for other purposes. Normal operation is not guaranteed when such an SD card is used.

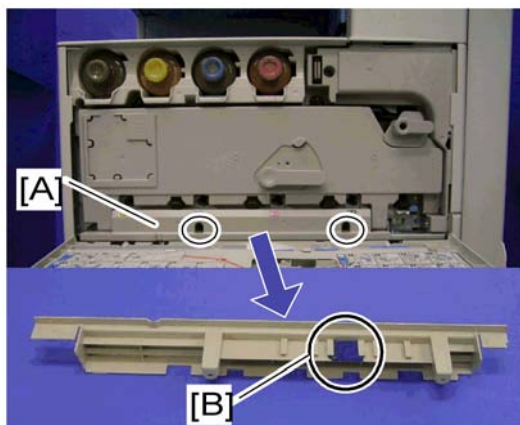

- Remove the cover [A] (🔧 x 2), and then keep the SD card in the place [B] after you



copy the application program from one card to another card. This is done for the following reasons:

1. The SD card can be the only proof that the user is licensed to use the application program.
  2. You may need to check the SD card and its data to solve a problem in the future.
- You cannot copy PostScript application to another SD card. You have to copy the other application (PictBridge, DOS Unit) to the SD card that stores the PostScript application.

### ***Move Exec***

The menu “Move Exec” (SP5-873-001) lets you copy application programs from the original SD card to another SD card.

#### **★ Important**

- Do not turn ON the write protect switch of the system SD card or application SD card on the machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.

1. **Turn the main switch off.**
2. **Make sure that an SD card is in SD Card Slot 1. The application program is copied into this SD card.**
3. **Insert the SD card (having stored the application program) in SD Card Slot 3. The application program is copied from this SD card.**
4. **Turn the main switch on.**
5. **Start the SP mode.**
6. **Select SP5-873-001 “Move Exec.”**
7. **Follow the messages shown on the operation panel.**
8. **Turn the main switch off.**
9. **Remove the SD card from SD Card Slot 3.**
10. **Turn the main switch on.**
11. **Check that the application programs run normally.**

### ***Undo Exec***

“Undo Exec” (SP5-873-002) lets you copy back application programs from an SD card to the original SD card. You can use this program when, for example, you have mistakenly copied some programs by using Move Exec (SP5-873-001).

#### **★ Important**

- Do not turn ON the write protect switch of the system SD card or application SD card on the machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.

1. Turn the main switch off.
2. Insert the original SD card in SD Card Slot 3. The application program is copied back into this card.
3. Insert the SD card (having stored the application program) to SD Card Slot 1. The application program is copied back from this SD card.
4. Turn the main switch on.
5. Start the SP mode.
6. Select SP5-873-002 “Undo Exec.”
7. Follow the messages shown on the operation panel.
8. Turn the main switch off.
9. Remove the SD card from SD Card Slot 3.

**Note**


- This step assumes that the application programs in the SD card are used by the machine.

10. Turn the main switch on.
11. Check that the application programs run normally.
12. Make sure that the machine can recognize the option (see ‘Check All Connections’ at the end of this section).

### 1.20.3 POSTSCRIPT 3


#### **CAUTION**

- Unplug the main machine power cord before you do the following procedure.

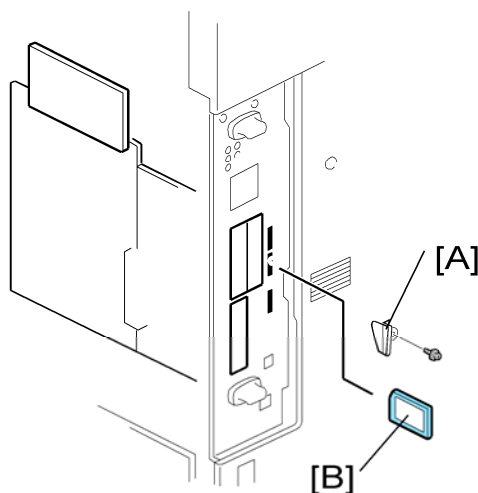

1. Remove the slot cover [A] from SD card slot 2 (⚙ x 1).
2. Turn the SD-card [B] label face to the rear of the machine. Then push it slowly into slot 2 until you hear a click.

3. Attach the slot cover [A] (🔩 x 1).

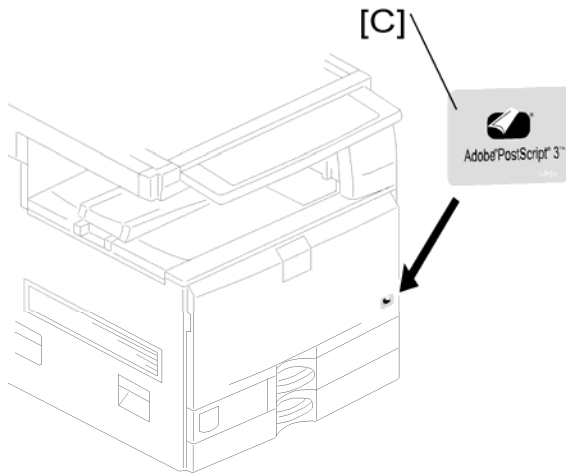


4. Attach the “Adobe PostScript 3” decal [C] to the front door.
5. Make sure that the machine can recognize the option (see ‘Check All Connections’ at the end of this section).

#### 1.20.4 FILE FORMAT CONVERTER

##### **⚠ CAUTION**

- Unplug the main machine power cord before you do the following procedure.

The fax unit (B786) must be installed before installing this unit. This is because the mother board that comes with the fax unit is necessary to connect the file format converter inside the machine.

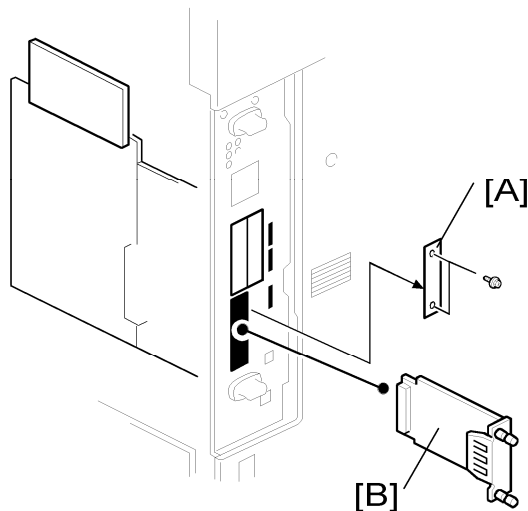

1. Remove the slot cover [A] from I/F card slot C (🔩 x 2).
2. Install the file format converter [B] into I/F card slot C and then fasten it with screws.

3. Plug in and turn on the main power switch.
4. Check or set the following SP codes with the values shown below.

| SP No.      | Title                         | Setting |
|-------------|-------------------------------|---------|
| SP5-836-001 | Capture Function (0:Off 1:On) | "1"     |
| SP5-836-002 | Panel Setting                 | "0"     |

5. Check the operation.
6. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).


### 1.20.5 IEEE1394 (FIREWIRE)

#### *Installation Procedure*

#### **⚠ CAUTION**

- Unplug the main machine power cord before you do the following procedure.

You cannot install the USB host interface at the same time as the IEEE1394 unit.

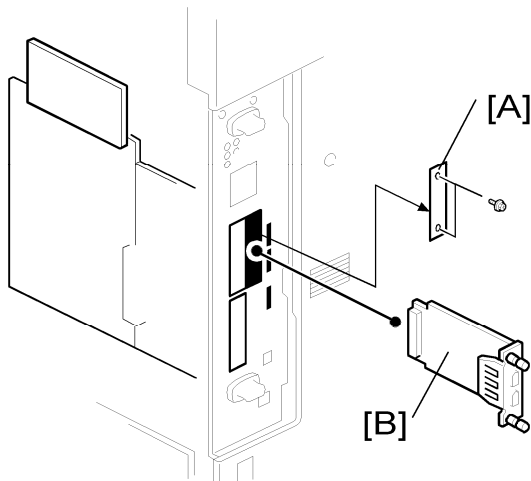

1. Remove the slot cover [A] from I/F Card Slot A (⚙ x 2).
2. Install the FireWire board [B] (Knob-screw x 2) into I/F card slot A.
3. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).

#### ***UP Mode Settings for IEEE 1394***

Enter the UP mode. Then do the procedure below to perform the initial interface settings for IEEE 1394. These settings take effect every time the machine is powered on.

1. Press the “User Tools/Counter” key.
2. On the touch panel, press “System Settings”.
3. Press “Interface Settings”.
4. Press “IEEE1394”.
5. Press the following soft keys on the touch panel. Then set up the following settings:
  - “IP Address”: Set the IP Address and Subnet Mask.
  - “IP over 1394”: Enable or disable this setting as required. This setting enables IP over 1394 as the default setting for the printing method.
  - “SCSI Print”: Enable or disable this setting as required. This setting enables SCSI Print as the default setting for the printing method.
  - “Bi-directional SCSI Print”: Switch bi-directional printing on or off for SCSI print.

### ***SP Mode Settings for IEEE 1394***

The following SP commands can be set for IEEE 1394.

| SP No.   | Name            | Function  |
|----------|-----------------|---|
| 5839 007 | Cycle Master    | Enables or disables cycle master function of the IEEE 1394 standard bus.  |
| 5839 008 | BCR Mode        | Sets the BCR (Broadcast Channel Register) setting for the Auto Node operation for the standard IEEE1394 bus for when IRM is not in use. The following three settings are available: “Standard,” “IRM Color Copy,” and “Always Effective.” |
| 5839 009 | IRM 1394a Check | Determines whether an IRM check for IEEE 1394a is conducted for the Auto Node when IRM is not used.   |
| 5839 010 | Unique ID       | Enables the “Node_Unique_Id” setting for enumeration on the standard IEEE 1394 bus.   |
| 5839 011 | Logout          | Determines how successive initiator login requests are handled during login in for SBP-2.   |
| 5839 012 | Login           | Enables or disables exclusive login for SBP-2.  |
| 5839 013 | Login MAX       | Sets the limit for the number of logins for SBP-2.<br>Range: 1 to 62.   |


## 1.20.6 IEEE1284

### *Installation Procedure*

#### **⚠ CAUTION**

- **Unplug the main machine power cord before you do the following procedure.**

You can only install one of the following network interfaces at a time: (IEEE 802.11b (Wireless LAN), IEEE1284, Bluetooth).

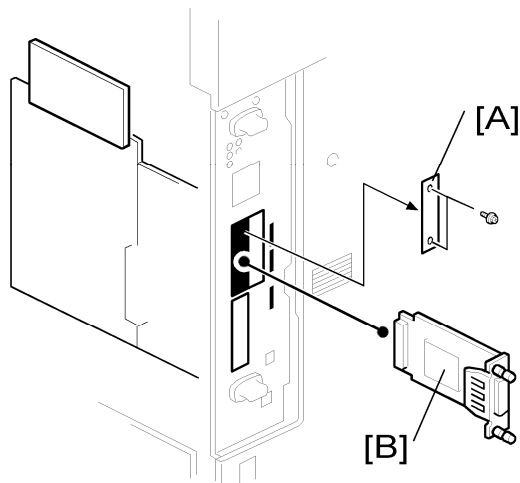

1. **Remove the slot cover [A] from I/F Card Slot B (⚙ x 2).**
2. **Install the interface board [B] (Knob-screw x 2) into I/F card slot B.**
3. **Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).**


## 1.20.7 IEEE 802.11B (WIRELESS LAN)

### Installation Procedure

#### **CAUTION**

- Unplug the main machine power cord before you do the following procedure.

You can only install one of the following network interfaces at a time: (IEEE 802.11b (Wireless LAN), IEEE1284, Bluetooth).

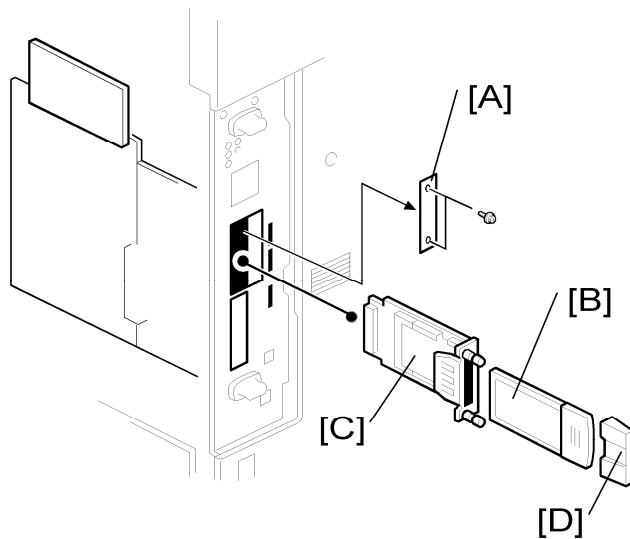

1. Remove the slot cover [A] from I/F Card Slot B (⚙ x 2).
2. Install the wireless LAN board (Knob-screw x 2) into I/F card slot B.
3. Install the wireless LAN card [B] in the wireless LAN board [C]. Make sure the card label faces to the front of the machine.
4. Attach the cover [D] to the wireless LAN card.
5. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).

You may have to move the machine if the reception is not clear.

1. Make sure that the machine is not located near an appliance or any type of equipment that generates strong magnetic fields.
2. Put the machine as close as possible to the access point.

### UP Mode Settings for Wireless LAN

Enter the UP mode. Then do the procedure below to perform the initial interface settings for IEEE 802.11b. These settings take effect every time the machine is powered on.

#### **Note**

- You cannot use the wireless LAN if you use Ethernet.

1. Press the “User Tools/Counter” key.
2. On the touch panel, press “System Settings”.

↓ Note

- The Network I/F (default: Ethernet) must be set for either Ethernet or wireless LAN.

3. Select “Interface Settings” → “Network” (tab) → “Network I/F Setting”
4. Press “IEEE 802.11b”. Only the wireless LAN options show.
5. Communication Mode. Select either “802.11 Ad hoc”, “Ad hoc” or “Infrastructure”.
6. SSID Setting. Enter the SSID setting. (The setting is case sensitive.)
7. Channel. You need this setting when Ad Hoc Mode is selected.

Range: 1 to 14 (default: 11)

↓ Note

- The allowed range for the channel settings may vary for different countries.

8. WEP (Encryption) Setting. The WEP (Wired Equivalent Privacy) setting is designed to protect wireless data transmission. The same WEP key is required on the receiving side in order to unlock encoded data. There are 64 bit and 128 bit WEP keys.

WEP:

Selects “Active” or “Inactive”. (“Inactive” is default.)

Range of Allowed Settings:

64 bit 10 characters

128 bit 26 characters

9. Transmission Speed. Press the Next button to show more settings. Then select the transmission speed for the mode: Auto, 11 Mbps, 5.5 Mbps, 2 Mbps, 1 Mbps (default: Auto). This setting should match the distance between the closest machine or access point. This depends on which mode is selected.

↓ Note

- For the Ad Hoc Mode, this is the distance between the machine and the closest PC in the network. For the Infrastructure Mode, this is the distance between the machine and the closest access point.

11 Mbps: 140 m (153 yd.)

5.5 Mbps: 200 m (219 yd.)

2 Mbps: 270 m (295 yd.)

1 Mbps: 400 m (437 yd.)

- ⇒ 10. Reboot the machine for these settings to take affect.



## ⇒ *SP Mode Settings for IEEE 802.11b Wireless LAN*

The following SP commands and UP modes can be set for IEEE 802.11b


| SP No.   | Name  | Function  |
|----------|---|---|
| 5840 006 | Channel MAX   | Sets the maximum range of the channel settings for the country.           |
| 5840 007 | Channel MIN   | Sets the minimum range of the channels settings allowed for your country. |
| 5840 011 | WEP Key Select  | Used to select the WEP key (Default: 00).                                 |
| UP mode  | Name  | Function  |
|          | SSID  | Used to confirm the current SSID setting.                                 |
| WEP Key  | Used to confirm the current WEP key setting.  |   |
| WEP Mode | Used to show the maximum length of the string that can be used for the WEP Key entry. |   |

## 1.20.8 BLUETOOTH

### **⚠ CAUTION**

- **Unplug the main machine power cord before you do the following procedure.**

You can only install one of the following network interfaces at a time: (IEEE 802.11b (Wireless LAN), IEEE1284, Bluetooth).

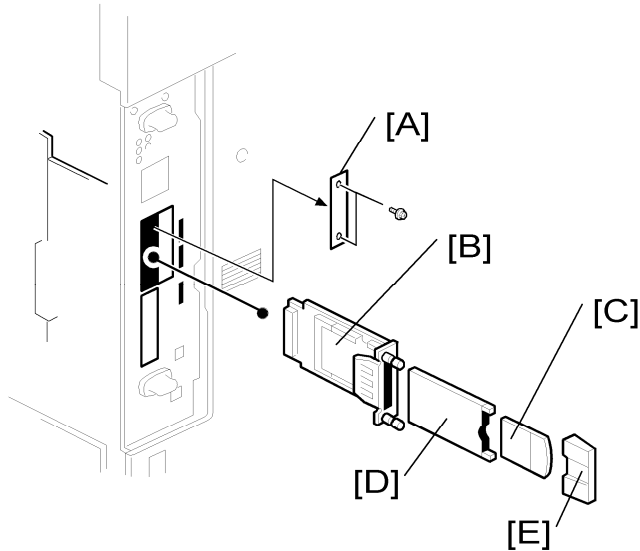

1. Remove the slot cover [A] from I/F Card Slot B [A] (⚙ x 2).
2. Install the Bluetooth board [B] (Knob-screw x 2) into I/F card slot B.
3. Insert the Bluetooth card [C] into the Bluetooth card adaptor [D]. .
4. Attach the antenna cap [E] to the Bluetooth card.
5. Install the Bluetooth card adaptor [D] into Bluetooth board [B].
6. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).


## 1.20.9 COPY DATA SECURITY UNIT

### **⚠ CAUTION**


- Unplug the main machine power cord before you do the following procedure.

#### **↓ Note**

- If you install this option, you cannot use scanner or fax functions.

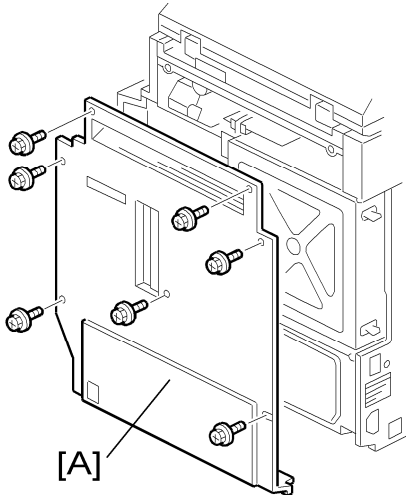

1. Remove the rear cover [A] of the machine (⚙ x 7).

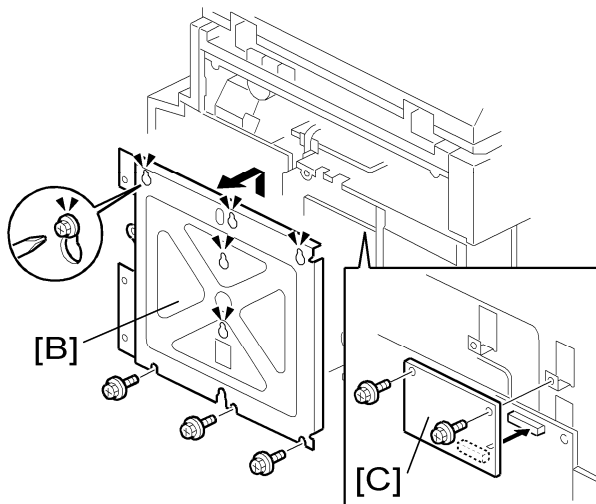

1. Loosen the eight screws.
2. Slide up the controller box cover [B], and then remove it.
3. Attach the ICIB-2 (copy data security board) [C] to CN 504 on the BICU (⚙ x 2).
4. Reassemble the machine.

### ***Installing Setting***

1. Plug in and turn on the main power switch.
2. Go into the User Tools mode, and select System Settings > Administrator Tools > Copy Data Security Option > "On".
3. Exit the User Tools.
4. Check the operation.



- The machine will issue an SC165 error if the machine is powered on with the ICIB-2 removed and the "Data Security for Copying" feature set to "ON".

5. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).

### **1.20.10 DATA OVERWRITE SECURITY UNIT TYPE D (B735)**

#### ***Before You Begin the Procedure***

1. Make sure that the following settings are not at their factory default values:

- Supervisor login password
- Administrator login name
- Administrator login password

If any of these settings is at a factory default value, tell the customer these settings must be changed before you do the installation procedure.

2. Make sure that "Admin. Authentication" is ON.

[System Settings] – [Administrator Tools] – [Administrator Authentication Management]  
- [Admin. Authentication]

If this setting is OFF, tell the customer this setting must be ON before you do the installation procedure.


3. Make sure that "Administrator Tools" is enabled (selected).

[System Settings] – [Administrator Tools] – [Administrator Authentication Management]  
- [Available Settings]

If this setting is disabled (not selected), tell the customer this setting must be enabled (selected) before you do the installation procedure.

- ⇒ 4. When you remove this option from the machine, first set the setting to "OFF" with the user tool before removing this board. If you forget to do this, then SC165 will appear every time the machine is switched ON, and the machine cannot be used.

## Seal Check and Removal

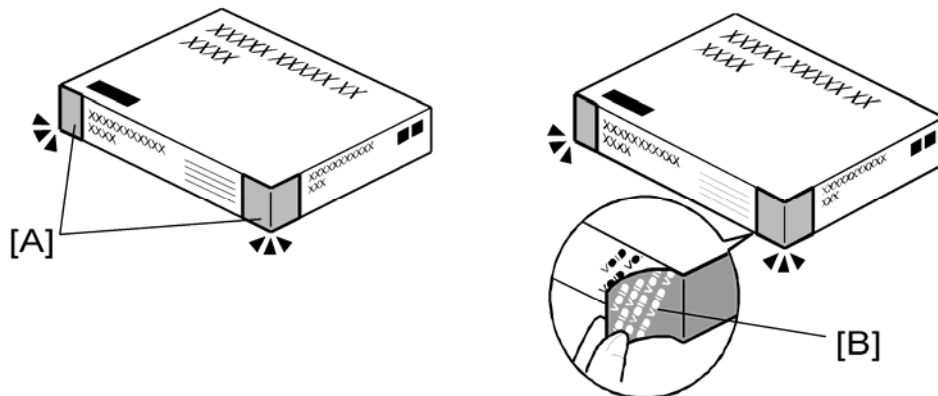

### CAUTION

- You must check the box seals to make sure that they were not removed after the items were sealed in the box at the factory before you do the installation.
1. Check the box seals [A] on each corner of the box.
    - Make sure that a tape is attached to each corner.
    - The surfaces of the tapes must be blank. If you see “VOID” on the tapes, do not install the components in the box.
  2. If the surfaces of the tapes do not show “VOID”, remove them from the corners of the box.
  3. You can see the “VOID” marks [B] when you remove each seal. In this condition, they cannot be attached to the box again.


## Installation Procedure

### CAUTION

- Unplug the main machine power cord before you do the following procedure.

#### Note

- You must install the data overwrite security unit in SD Card slot 2. However, the Postscript option and the PictBridge option are also installed in SD Card slot 2. You must do the SD Card Appli move procedure first if you have the postscript or PictBridge option installed and you want to install the data overwrite security unit.

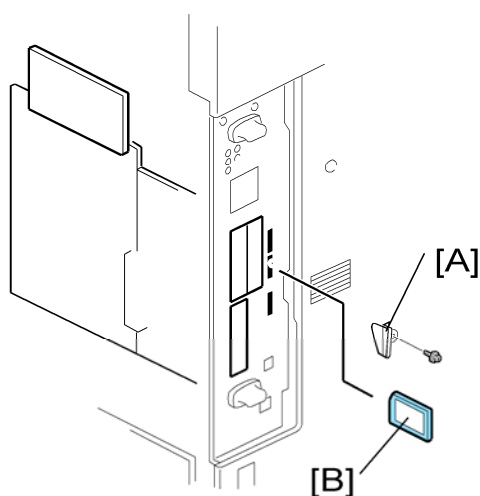

1. Turn off the main power switch if the machine is turned on.
2. Disconnect the network cable if the NIB is installed.
3. Remove the slot cover [A] of SD card slot 2 (🔧 x 1).
4. Turn the SD-card [B] label face to the rear of the machine. Then push it slowly into slot 2 until you hear a click.
5. Connect the network cable if the NIB option is installed.
6. Turn on the main power switch.
7. Go into the SP mode and push “EXECUTE” with SP5-878.
8. Exit the SP mode and turn off the operation switch. Then turn off the main power switch.
9. Turn on the machine power.
10. Do SP5990-005 (SP print mode Diagnostic Report).
11. Make sure the ROM number and firmware version in area [A] of the diagnostic report are the same as those in area [B].
  - [A]: “ROM Number/Firmware Version” – “HDD Format Option”
  - [B]: “Loading Program” – “GW2a\_zoffy”

|                              |                                       |                                |
|------------------------------|---------------------------------------|--------------------------------|
| Diagnostic Report:           | “ROM No. / Firmware Version” [A]      | “Loading Program” [B]          |
| Data Overwrite Security Unit | HDD Format Option:<br>B7355060 / 0.03 | GW2a_zoffy:<br>B7355060 / 0.03 |

**★ Important**

- The ROM number and firmware version number change when the firmware is upgraded. However, the important thing is to make sure the numbers in [A] are the same as the numbers in [B].
- If the ROM numbers are not the same, or the version numbers are not the same, this means the unit was not installed correctly.

If this happens:

Make sure the unit type (Type D).

If they do not match:



- 1) Replace the NV-RAM on the controller board.
- 2) Replace the “Data Overwrite Security Unit” (SD card) with the correct type.
- 3) Do the installation procedure in this procedure again, from Step 1.

**12. Go into the User Tools mode, and select System Settings> Administrator Tools> Auto Erase Memory Setting> On.**

**13. Exit the User Tools mode.**

|                  |       |       |        |  |  |
|------------------|-------|-------|--------|--|--|
| 09/09/2006 14:13 |       |       |        |  |  |
|                  | Orig. | Total | Copies |  |  |
|                  | 0     | 0     | 0      |  |  |

**14. Check the display and make sure that the overwrite erase icon [A] shows.**

**15. Make a Sample Copy.**


**16. Check the overwrite erase icon.**

- The icon [C] changes to [D] when job data is stored in the HDD.
- The icon goes back to its usual shape [E] after this function has completed a data overwriting in the HDD.

## 1.20.11 USB HOST INTERFACE

### CAUTION

- Unplug the main machine power cord before you do the following procedure.

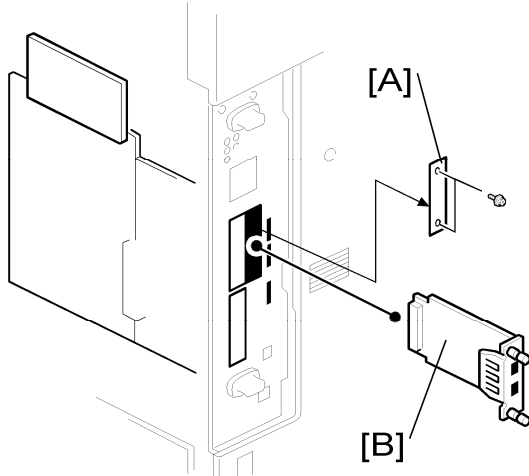

1. If the IEEE1394 unit is installed in I/F Card Slot A, remove it.
2. Remove the slot cover [A] from I/F Card Slot A (⚙ x 2).
3. Install the USB Host Interface [B] (Knob-screw x 2) into I/F card slot A.
4. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).




## 1.20.12 PICTBRIDGE

### **⚠ CAUTION**

- **Unplug the main machine power cord before you do the following procedure.**

#### **↓ Note**

- You must install the PictBridge option in SD Card slot 2. However, the Postscript option and the data overwrite security unit option are also installed in SD Card slot 2. You must do the SD Card Appli move procedure first if you have the postscript or data overwrite security unit option installed and you want to install the PictBridge unit.
- You must install the USB Host Interface when using the PictBridge unit.

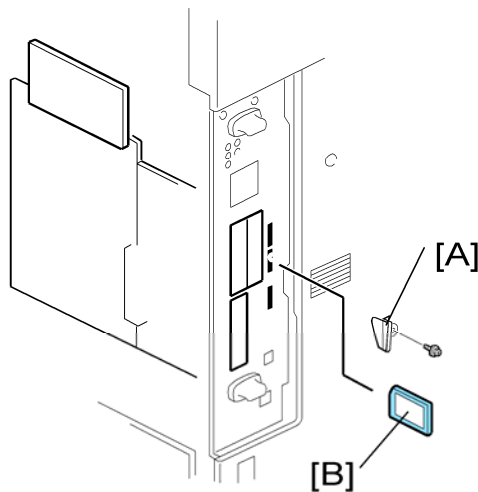


1. Remove the slot cover [A] from SD card slot 2 (🔧 x 1).
2. Turn the SD-card [B] label face to the rear of the machine. Then push it slowly into slot 2 until you hear a click.
3. Attach the slot cover [A] (🔧 x 1).
4. Make sure that the machine can recognize the option (see 'Check All Connections' at the end of this section).

## 1.20.13 BROWSER UNIT TYPE B

### **⚠ CAUTION**

- **Unplug the main machine power cord before you do the following procedure.**

SD card slot 3 is basically used only for service maintenance. Do not leave an SD card in slot 3 after installing an application.

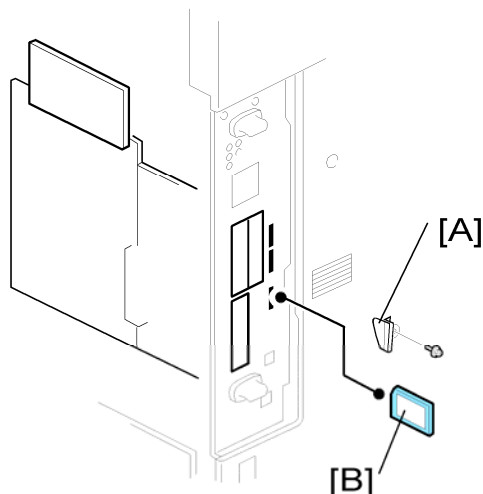

1. Remove the slot cover [A] from SD card slot 3 (1 x 1).
2. Turn the SD-card [B] label face to the rear of the machine. Then push it slowly into slot 3 until you hear a click.
3. Plug in and turn on the main power switch.
4. Push the "User Tools" key.
5. Push the "Login/ Logout" key.
6. Login with the administrator user name and password.
7. Touch "Extended Feature Settings" on the LCD.
8. Touch "Install" on the LCD.
9. Touch "SD Card".
10. Touch the "Browser" line.
11. Under "Install to:" touch "Machine HDD" and touch "Next".
12. When you see "Ready to Install", check the information on the screen to confirm your previous selection.
13. Touch "OK". You will see "Installing...", and then "Completed".
14. Touch "Exit" to go back to the setting screen.
15. Touch "Change Allocation".
16. Touch the "Browser" line.
17. Press one of the hard keys, which you want to use for the Browser Unit.


18. Touch "OK".
19. Touch "Exit" twice to go back to the copy screen.
20. Turn off the main power switch.
21. Remove the SD card from slot 3.
22. Attach the slot cover [A] (🔑 x 1).

### 1.20.14 VM CARD TYPE C (JAVA PLATFORM)

#### **⚠ CAUTION**

- Unplug the main machine power cord before you do the following procedure.


Do not remove the SD card from slot 3 after installing the platform.

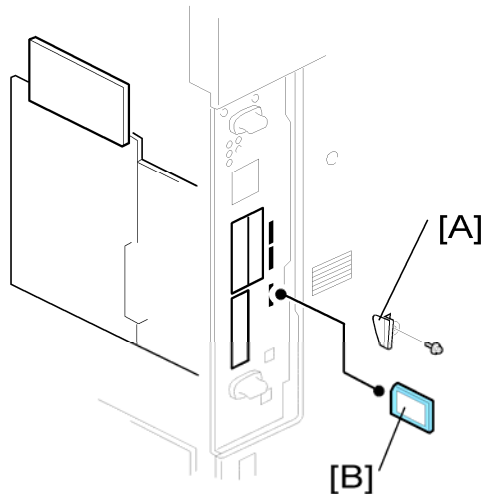

- ⇒ 1. With the power OFF and the machine unplugged, remove the slot cover [A] from SD card slot 2 or 3 (🔑 x 1).
- ⇒ 2. Insert the VM-Card Type C [B] label face to the rear of the machine. Then push it slowly into slot 2 or 3 until you hear a click.
- ⇒ 3. Replace the sixth key-slot cover with the appropriate "Other function" key.
4. Plug in and turn ON the main power switch. The installation of the Java VM platform will start automatically.

**IMPORTANT:** DO NOT turn the main power OFF. Also, do not open any of the covers or do any machine operations. This will damage the SD card. A damaged SD card cannot be repaired.

- ⇒ 5. **Wait five minutes, and then press the “Other function” key. You will hear two beeps.**
- If the screen does not change, this means the installation is not finished yet. Wait a few more minutes and then press the “Other function” key again.
  - When the installation is finished, the following will be displayed:

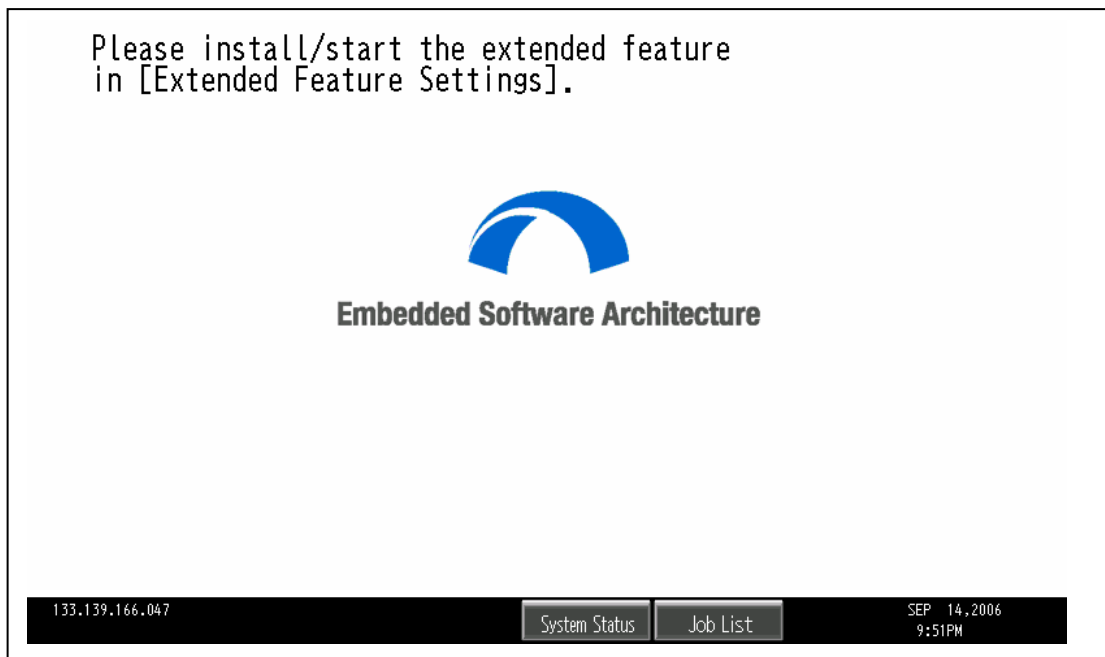

6. **Set the heap size and stack size for the application. (In User Tools/Extended Features setting, see the Administrator Tools tab.)**
7. **Install the application using the installation procedure provided with the application.**

### 1.20.15 CHECK ALL CONNECTIONS

23. **Plug in the power cord. Then turn on the main switch.**
24. **Enter the printer user mode. Then print the configuration page.**

User Tools > Printer Settings > List Test Print > Config. Page

All installed options are shown in the “System Reference” column.


## ⇒ 1.21 REMOTE COMMUNICATION GATE INSTALLATION

### 1.21.1 COMPONENT CHECK

| No. | Description                 | Q'ty |
|-----|-----------------------------|------|
| 1   | Remote Comm. Gate Interface | 1    |
| 2   | Cover                       | 1    |
| 3   | Screw                       | 3    |

### 1.21.2 INSTALLATION PROCEDURE

1. Remove one cover bracket from I/F Card Slot B (⌀ x 2)
2. Install the modem board into the card slot for the device (⌀ x 2).
3. Check the following SP settings before starting the installation flow chart
  - SP5-816-150 (To Select the country)
  - SP5-816-154 (To set the telephone number for outside connection)
  - SP5-816-161 (To set the telephone number)
4. Follow the Installation Flow Chart as shown on the next page with SP mode.

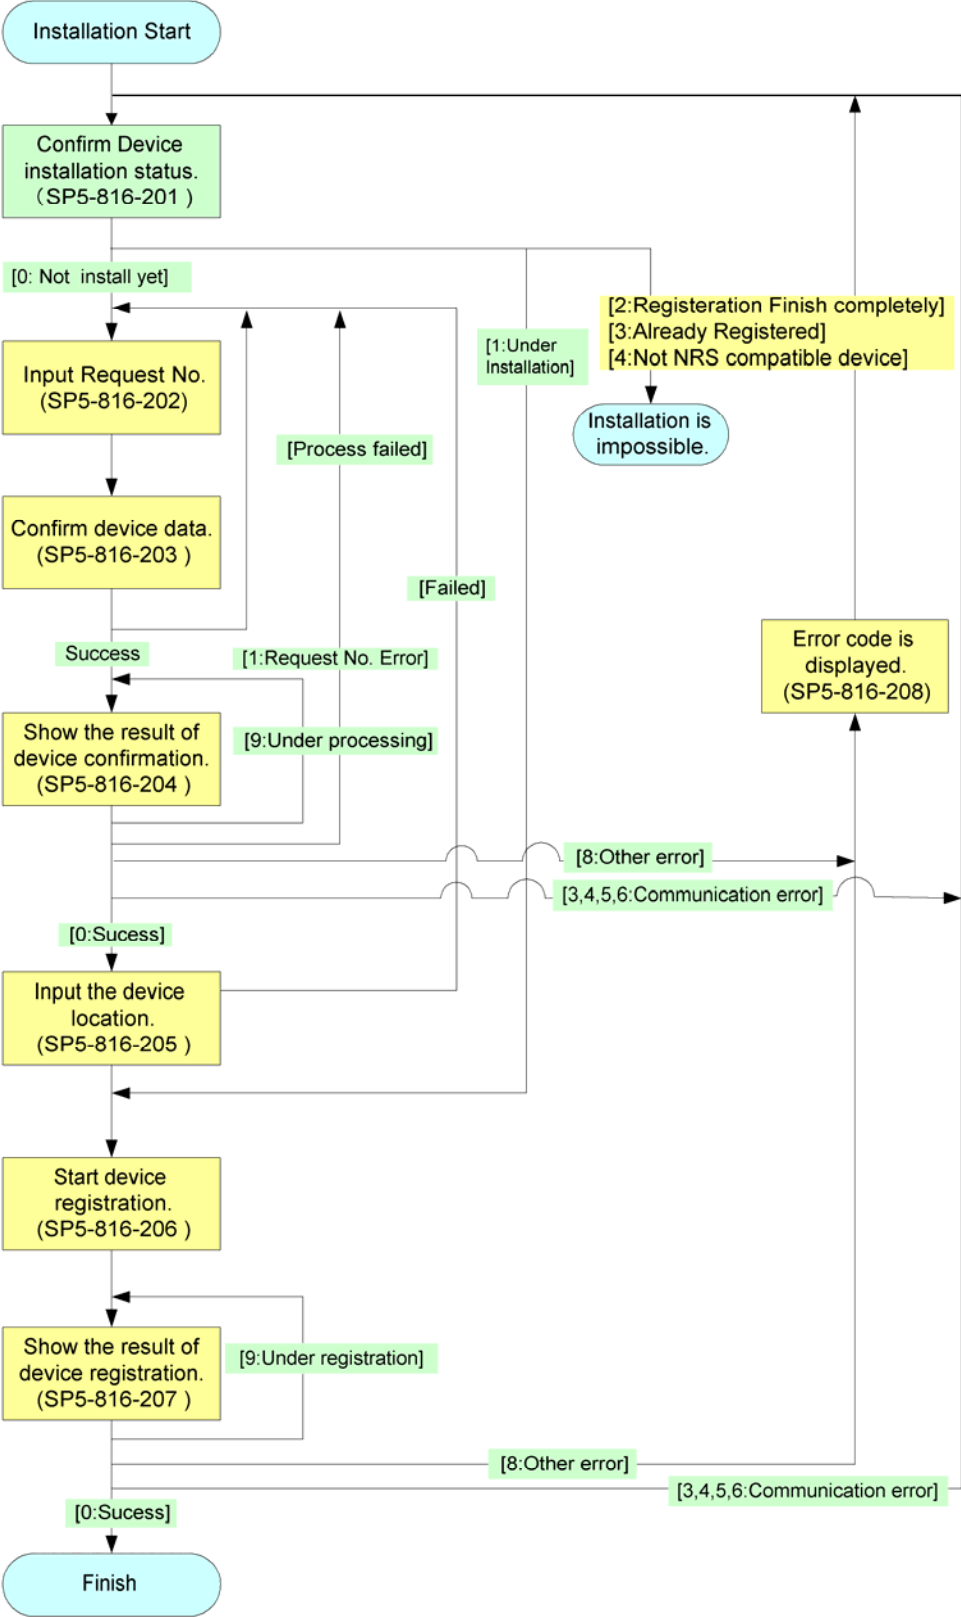

## ⇒ 1.22 FIERY E-3000 (B889)

### 1.22.1 ENVIRONMENT

1. Temperature Range: 5°C to 40°C (41°F to 104°F)
2. Humidity Range: 10% to 90% RH
3. Ambient Illumination: Less than 1500 lux (do not expose to direct sunlight or strong light)
4. Ambient Dust: Less than 0.10 mg/m<sup>3</sup>
5. If the place of installation is air-conditioned or heated, do not place the machine where it will be:
  - 1) Subjected to sudden temperature changes
  - 2) Directly exposed to cool air from an air-conditioner
  - 3) Directly exposed to heat from a heater
6. Do not place the machine where it will be exposed to corrosive gases.
7. Do not install the machine at any location over 3,048 m (10,000 feet) above sea level.
8. Place the controller on a strong and level base.
9. Do not place the machine where it may be subjected to strong vibrations.
10. Do not connect the machine to a power source shared with another electrical appliance.
11. The machine can generate an electromagnetic field, which could interfere with radio or television reception.


### 1.22.2 MACHINE LEVEL

1. Front to back: Within  $\pm 5^\circ$  (0.2") away from level
2. Right to left: Within  $\pm 5^\circ$  (0.2") away from level

### 1.22.3 MINIMUM SPACE REQUIREMENTS

Place the machine near the power source, providing clearance as shown.

You may place the E-3000 on the rear side of the large capacity tray or finisher as shown in the illustration.

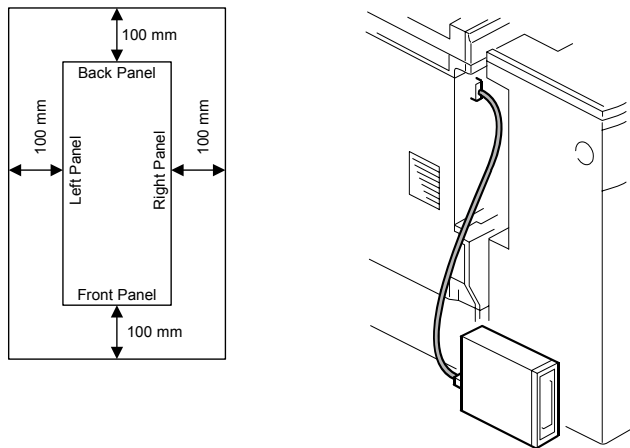

### 1.22.4 POWER REQUIREMENTS

#### **⚠ CAUTION**


1. Insert firmly the plug in the outlet.
2. Avoid using an outlet extension plug or cord.
3. Ground the machine. Avoid using a 3-prong adapter in a 2-hole ungrounded outlet.
4. Use the supplied AC power cord with this product.

1. Input voltage level: 100 – 240V, 50-60Hz; 3A
2. Do not put anything on the AC power cord.



## 1.22.5 INSTALLATION FLOW CHART

Recommended installation steps are as follows:

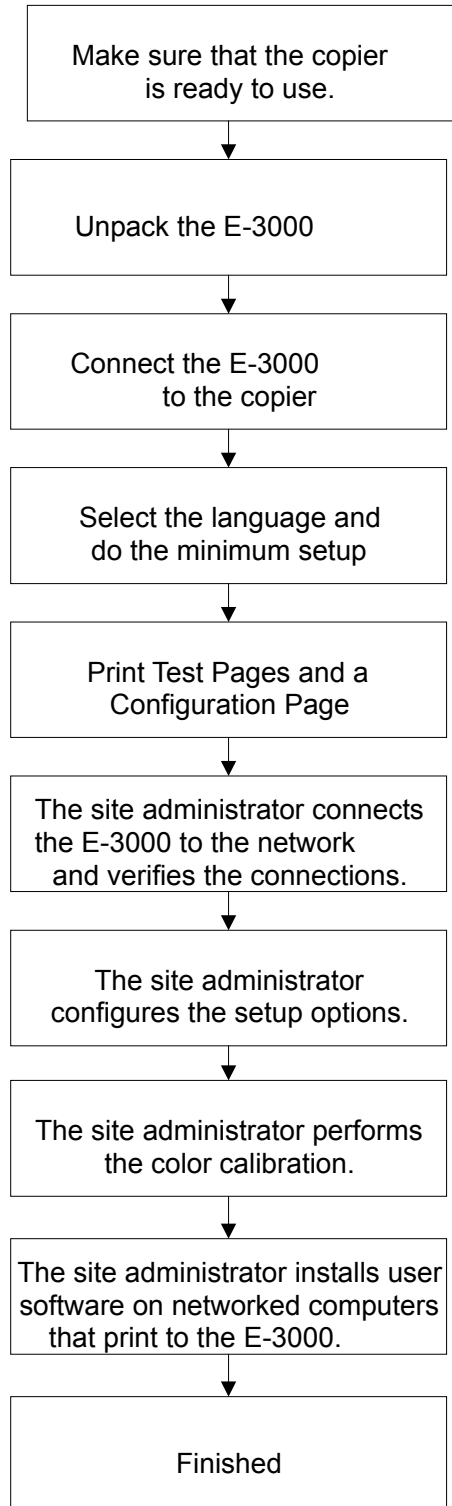

## 1.22.6 MACHINE INSTALLATION

### *Setting Customer Expectations*


Before installation, the customer should be informed of the following:

- Some nodes on the network may be unavailable for up to one hour.
- The copier may be unavailable for up to one hour
- The site administrator should be available during the installation for network connectivity.
- Equipment downtime and impact on the network can be minimized if the site administrator installs a network connector for the Color Controller and confirms network connection for the Color Controller installation.
- The site administrator should have a networked computer available during the installation. The appropriate software should already be installed. Documentation for the networked computer and the network operating software should be available.
- The site administrator should install the user software shipped with the Color Controller (user documentation is also included) onto the networked PCs and Mac OS computers that will print to the Color Controller.

This guide covers hardware installation and service. It provides general information on connecting the Color Controller to the customer's network. For network setup and configuration information, refer the site administrator to the *Configuration and Setup* manual.

## 1.22.7 UNPACKING THE COLOR CONTROLLER

1. Open the box and remove the packing material.
2. Remove the contents from the top container. Inspect the contents for visible damage. The top container should include the following items:

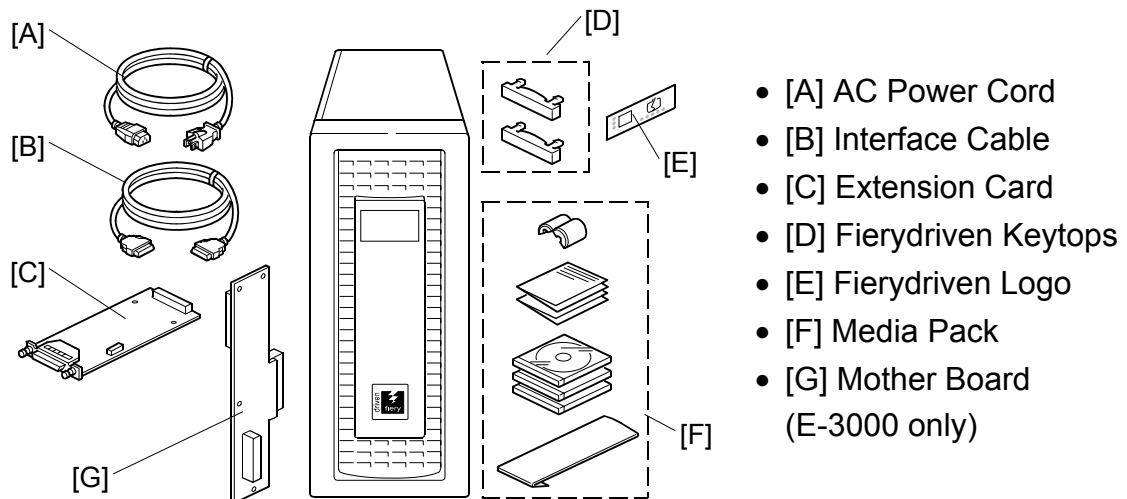


3. Give the Media Pack [F] to the site administrator.
4. Take the remaining components out of the top container.
5. Remove the top container and any packing materials.
6. Carefully lift the Color Controller out of the box.


## 1.22.8 FRONT AND BACK PANELS

After unpacking the Color Controller, familiarize yourself with the front and back panels before you connect the Color Controller to the copier.

- **Front Panel**

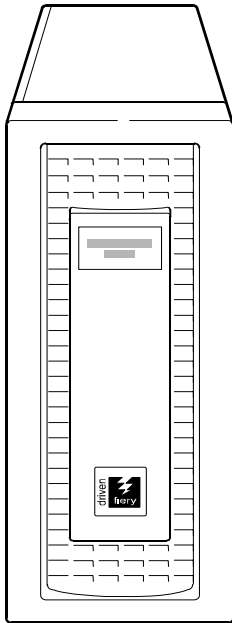

- **Back Panel**

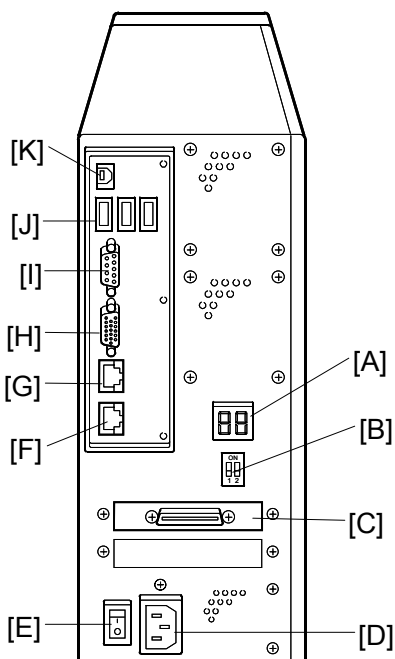

|   |  |
|---|--|
| A | Diagnostic LEDs (for service use only)           |
| B | Service Switches (for service use only)          |
| C | Video Interface                                  |
| D | Power Connector                                  |
| E | Power Switch                                     |
| F | Not Used   |
| G | RJ-45 Connector<br>(10BaseT/100BaseTX/1000BaseT) |
| H | Not used (Monitor port)                          |
| I | Not used (Serial Port)                           |
| J | USB Ports  |
| K | Not used (USB Type B port)                       |

## 1.22.9 CONNECTING COLOR CONTROLLER TO THE COPIER

**NOTE:** The installation of the Color Controller has already been done at the factory. You do not need to perform the following installation procedure. This procedure is provided for your information only.


### *Preparation for Installing the Color Controller E-3000*

After you unpack the Color Controller, connect the Color Controller to the copier before you connect it to the network. This is to confirm that there are no problems with the hardware and controller itself.


#### **⚠ WARNING**

**Turn the controller main power switch and copier main power switch to off and disconnect the power cords before you do these procedures.**


1. Remove the printer and scanner CDs from the copier accessories (B230 or B237).
2. Remove the EULA and Caution sheets from the copier accessories.
3. Remove the rear cover [A] of the copier (⚙ x 6).

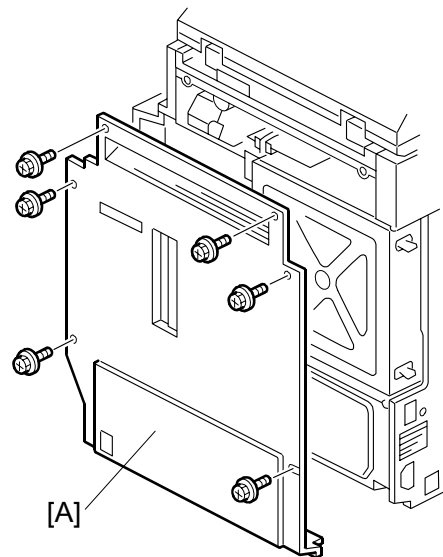


4. Remove the controller box cover [B] (⚙ x 8).
5. Remove the lower memory [C] of the two DIMM memories.

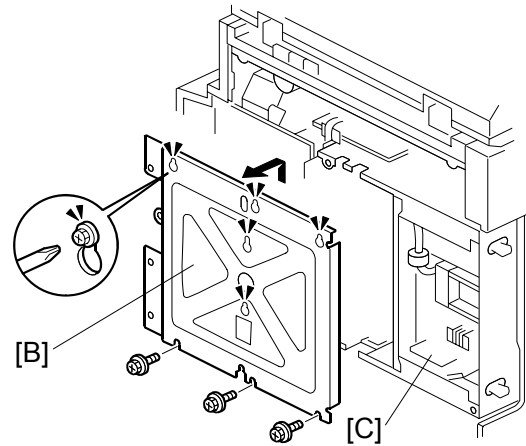

6. Remove the mother board bracket [D] (⚙ x 6).
7. Attach the mother board [E] to the mother board bracket (⚙ x 4).
8. Reinstall the mother board [E] with the mother board bracket [D] to the BICU board (⚙ x 6).

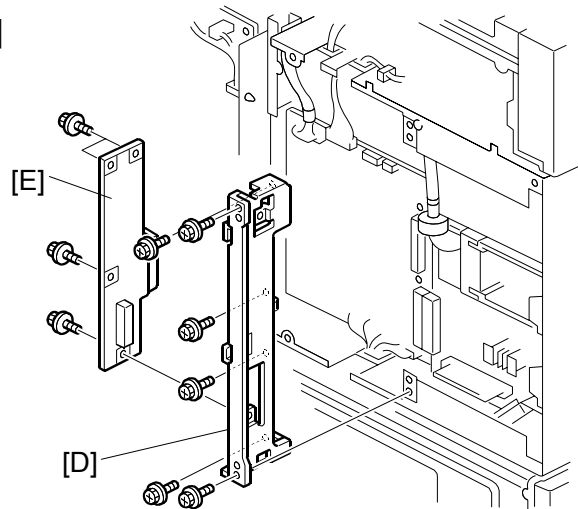


9. Remove all SD slot covers on the left side of the controller box.
10. Remove all SD cards from the three SD slots.
11. Remove the I/F slot cover [F] of **Slot C** (this is the slot for the external controller) (⚙ x 2).

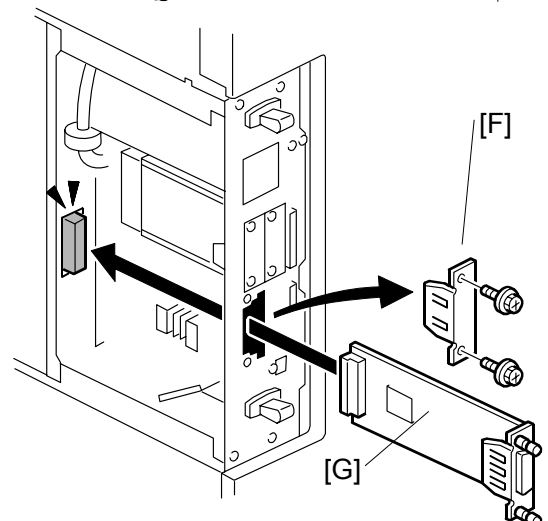


12. Touch a metal surface to remove static charge from your hands before you touch the extension card.
13. Insert the extension card [G] into **Slot C** and fasten it with the screws (⚙ x 2).

**NOTE:** Make sure that the extension card [G] is inserted straight and firmly.

14. Reassemble the I/F slot cover, SD slot covers, controller box cover and rear cover.
15. Remove the Slot Covers of the printer key and scanner key slots on the operation panel of the copier, and then discard them.
16. Install the "Fierydriven" key top in the slot, which was for printer key and the blank key top in the slot, which was for scanner key.
17. Change the setting of SP5-985-001 from "1" (default) to "0".
18. Attach the Fiery Decal [H] to the copier front cover.

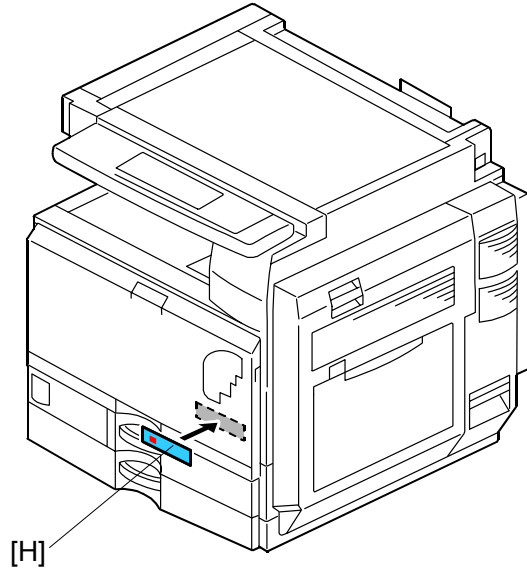

**Connecting the Color Controller to the Copier**

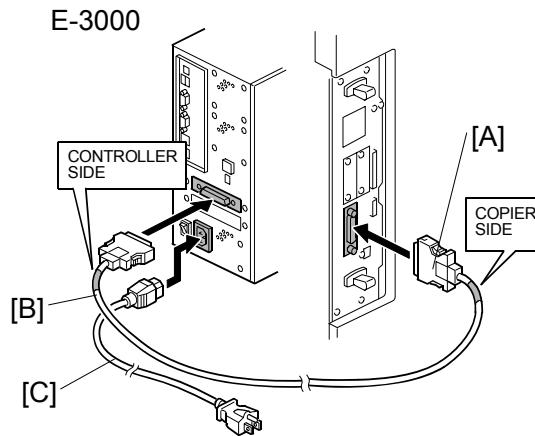

19. Connect the interface cable as follows:

- 1) "Copier Side" [A]: Connect this to the extension card.
- 2) "Controller Side" [B]: Connect this to the video interface on the rear of the Color Controller.

**NOTE:** If the interface cable is connected in the opposite direction, the copier engine will fail to communicate with the controller.


20. Connect the AC power cord [C] to the power connector at the back of the Color Controller.

**CAUTION**

**Power Supply:** The socket-outlet shall be installed near the product and shall be easily accessible.

21. Place the E-3000 [D] on the rear side of finisher as shown in the illustration.

22. Make sure to provide with clearance as shown in the left illustration.

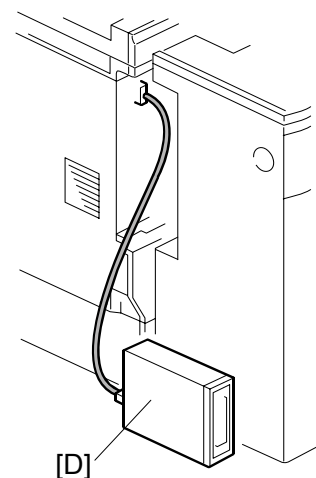



### 1.22.10 STARTUP AND INITIAL SETUP


1. Connect the power cord of the copier to a power outlet and switch on the copier main power.

**NOTE:** 1) The copier must be turned on before you turn the Color Controller on.  
 2) Make sure that all firmware modules for the copier are updated to the newest versions. If they are not, update them before you turn on the Color Controller.

2. Turn the power switch on the Color Controller back panel to ON.
3. Allow startup to proceed without interruption, while you watch the diagnostic LEDs on the back panel of the Color Controller.
4. When the diagnostic LEDs remain at '00', go to the copier operation panel and press the **Fierydriven** key. 'Please wait' may be shown on the copier operation panel.
5. The language selection screen is shown. (If this screen is not shown, then press the **Fierydriven** key again.)

Select the desired language with the down arrow “▼” key and up arrow “▲” key, and touch “OK”.


- English
- Dutch
- Spanish
- Italian
- German
- French

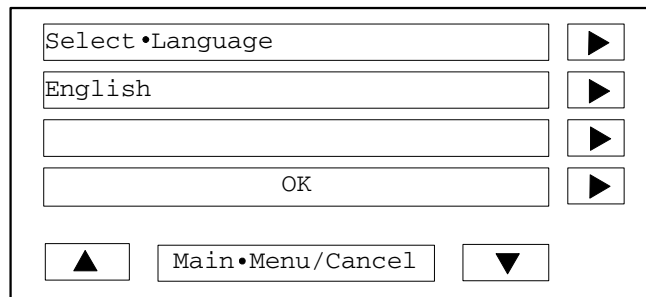


- NOTE:** 1) Once you have selected a language, you cannot change the language unless you perform “Factory Defaults” (☛ 4.3) or re-install the system software.  
 2) The default settings for the Color Controller depends on the language selection as follows:

|             |                             | Selected Language & Market Region |   |
|-------------|-----------------------------|-----------------------------------|---|
|             |                             | English - US                      | English – UK / Dutch / Spanish / Italian / German/ French |
| PS Setting  | Default Paper Sizes         | <b>US</b>                         | <b>Metric</b>   |
| PCL Setting | Paper Size                  | <b>Letter</b>                     | <b>A4</b>   |
|             | Paper Size for System Pages | <b>US</b>                         | <b>Metric</b>   |

If you selected “**English**” at the language selection screen, you are prompted to select the market region. Select either “**US**” or “**UK**” with the down arrow “▼” key and up arrow “▲” key, then touch “**OK**”.

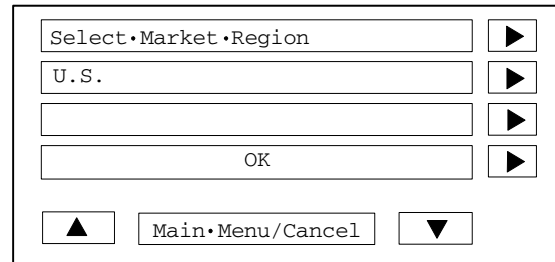

6. “Please wait...” will be indicated on the Fiery menu screen, then the Fiery menu screen will disappear from the operation panel.
7. Wait for a moment, then press the **Fierydriven** key again on the operation panel. The Setup main menu will appear on the Fiery menu screen.

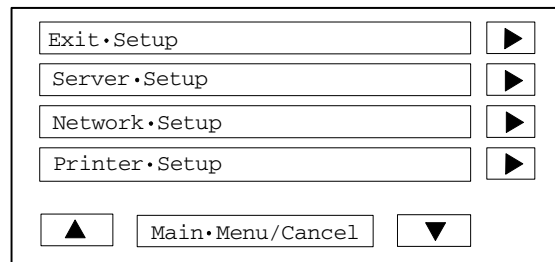

**NOTE:** The Color Controller setup options should be configured later by the site administrator. However, during the installation, a field technician must check that the Color Controller works correctly with the default configuration. Therefore, the next steps show the steps for minimum configuration.

8. “Enter Password” message will appear. Enter the default administrator password: “**Fiery.1**”.

9. Touch the keys in the following order, to configure the minimum setup.

- 1) “**Server Setup**” key
- 2) “**Main Menu/Cancel**” key
- 3) (When you see “Save Changes for Server Setup / YES”)
  - “**OK**” key
- 4) “**Network Setup**” key
- 5) “**Exit Network**” key
- 6) (When you see “Save Changes for Server Setup/ YES”)
  - “**OK**” key
- 7) “**Printer Setup**” key
- 8) “**Main Menu/Cancel**” key
- 9) (When you see “Save Changes for Printer Setup / YES”)
  - “**OK**” key

10. Select “**Exit Setup**”.

|                 |                    |   |
|-----------------|--------------------|---|
| Exit • Setup    | ▶                  |   |
| Server • Setup  | ▶                  |   |
| Network • Setup | ▶                  |   |
| Printer • Setup | ▶                  |   |
| ▲               | Main • Menu/Cancel | ▼ |

11. The system will reboot. The **Fierydriven** key will have no effect until after the system reboots. To confirm that the reboot was successful, press the **Fierydriven** key. The Fiery Menu screen will appear on the operation panel of the copier.

|                      |                    |   |
|----------------------|--------------------|---|
| Server • Name        | ▶                  |   |
| Idle                 | ▶                  |   |
|                      | ▶                  |   |
| XXXXXXMB • (Version) | ▶                  |   |
| ▲                    | Main • Menu/Cancel | ▼ |

### 1.22.11 VERIFYING THE CONNECTION (LOCAL TEST PRINT)

After you connect the Color Controller to the copier, print the Test Page and the Configuration Page to verify that the connection between the Color Controller and the copier is good.

1. Make sure that the copier is not in use.
2. Check the settings in the following table, and make sure that Letter or A4 paper is loaded in at least one of the paper trays of the copier.

| Setup Option                   | PS Setting<br>Default Paper Size |          | PCL Setting<br>Paper Size for System<br>Settings |          |
|--------------------------------|----------------------------------|----------|--|----------|
|                                | “US”                             | “Metric” | “US”   | “Metric” |
| Configuration Page requires... | Letter                           | A4       | -  | -        |
| PS Test Page requires...       | Letter                           | A4       | -  | -        |
| PCL Test Page requires....     | -                                | -        | Letter   | A4       |

3. On the operation panel of the copier, press the **Fierydriven** key to access the printer initial menu screen.
4. Access the menu list. To do this, touch the “**Main Menu/Cancel**” key, and select “**Print Pages**”.
5. Print the following pages:
  - Configuration Page
  - PS Test Page
  - PCL Test Page
6. Examine the quality of the test pages.
  - All patches should be visible, but it is acceptable if they are very faint in the 5% and 2% ranges.
  - Each patch set should show uniform gradation from patch to patch as the shade lightens from 100% to 0%.
  - Poor image quality may indicate that the copier needs service. For more information, see the documentation provided with the copier.

## 1.22.12 VERIFYING CONNECTION TO THE NETWORK

The Color Controller provides twisted pair connectivity to an Ethernet network.


Cable requirements:

- 10BaseT (Ethernet): Unshielded Twisted Pair (UTP), Category 3 or higher
- 100BaseTX (Fast Ethernet): UTP, Category 5 or higher (4-pair/8-wire, short length)
- 1000BaseT (Gigabit Ethernet): UTP, Category 5e or higher (4-pair/8-wire, short-length)

**NOTE:** If the print engine is 230V, use a shielded network cable.

1. Turn off the Color Controller power before connecting the Color Controller to any network device.
2. Connect the network cable to the RJ-45 connector (upper connector) on the Color Controller. (The lower connector cannot be used.)
3. Make sure that the copier power is switched on.
4. Turn the power switch on the Color Controller back panel to ON.
5. Allow startup to proceed without interruption, while you watch the diagnostic LED on the back panel of the Color Controller. When the diagnostic LEDs show '00', go to the copier operation panel.
6. Configure the Setup options.

- 1) Press the **Fierydriven** key on the copier operation panel. ('Please wait' may be shown on the copier operation panel. If the next screen is not shown after 'Please wait', then press the **Fierydriven** key again.)

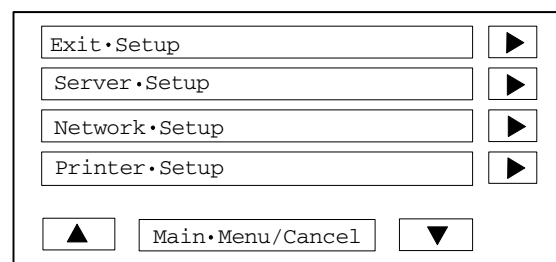

- 2) Touch the "**Main Menu/Cancel**" key.
- 3) Touch the down arrow "▼" key.
- 4) Select "**Run Setup**".
- 5) Touch "**OK**".
- 6) Wait for a while and then press the **Fierydriven** key again.
- 7) Wait until the setup main screen appears.
- 8) Ask the site administrator to configure the Setup options.

**NOTE:** It is the site administrator's responsibility to configure the correct setup options for the network and user environment. The default settings in the setup may be adequate, but they may not be optimal for the user's environment. Refer the site administrator to the Configuration and Setup manual for setup information.

7. After configuring the Setup options, verify the network connection. Ask the site administrator to install the printer driver on a client PC, and to make a test print from that PC.

## 1.22.13 INSTALLING OPTIONAL FEATURES

### Overview

The system software for the Color Controller contains the following optional features:

- EFI Hot Folders
- EFI Auto Trap
- EFI Spot On

Initially, the above three optional functions cannot be used. When the customer purchases these options, a hardware USB dongle which includes a license for the optional feature will be provided.

After the license for the feature is transferred to the Color Controller, the dongle will be locked to that particular Color Controller (a unique value will be written to the dongle).

- To transfer the license from the dongle to the Color Controller, you turn off the Color Controller power, connect the dongle, turn on the Color Controller power, wait for the Color Controller to get to the idle condition, then remove the dongle. The feature is now activated. There is a detailed procedure on the next page.

After this, the same dongle cannot be used on another Color Controller, unless the license is first removed from the original Color Controller using that dongle. (You must use the same dongle.)

- To remove the license from the Color Controller, do exactly the same procedure that you use when you transfer the license from the dongle to the Color Controller. This deactivates the feature.

When the feature is removed from the original Color Controller, the unique value will be removed from the dongle. The dongle can now be used on another Color Controller.

If a dongle that has already a unique value (had its unit ID locked to a Color Controller) is inserted into another Color Controller unit, the dongle will have no effect.

The number of times the license can be removed from the Color Controller is limited as shown in the table below. (Activate 4 times and deactivate 3 times.) When this limit is reached, the dongle can no longer be used to remove the license, so the license will stay on the Color Controller. If a dongle is inserted to remove a feature but the limit has been reached, there will be no effect.

| Color Controller <b>Power Turned On (or Color Controller Rebooted) with Dongle Connected</b> | <b>Activates/Deactivates the feature on the Color Controller</b> | <b>License Transferred to</b> |
|--|--|-------------------------------|
| 1 <sup>st</sup> time   | Activates  | Color Controller              |
| 2 <sup>nd</sup> time   | Deactivates  | Original Dongle               |
| 3 <sup>rd</sup> time   | Activates  | Color Controller              |
| 4 <sup>th</sup> time   | Deactivates  | Original Dongle               |
| 5 <sup>th</sup> time   | Activates  | Color Controller              |
| 6 <sup>th</sup> time   | Deactivates  | Original Dongle               |
| 7 <sup>th</sup> time   | Activates  | Color Controller              |
| 8 <sup>th</sup> time and after   | No effect  | No effect                     |

### ***Activate / Deactivate An Optional Feature Using A Dongle***

The optional feature dongle can be used to either activate or deactivate a feature. The operation for both of these procedures is exactly the same, and the successful activation or deactivation can be confirmed by printing the configuration page.

The purpose of the ability to remove the license (deactivation) is to handle cases where the license was accidentally installed on the wrong Color Controller unit.

Immediately after the Color Controller main power is turned on or the Color Controller is rebooted, the Color Controller checks for the presence of the feature activation dongle.

1. Print the configuration sheet of the Color Controller. (☛ G889 SM Section 2.3)
2. With the configuration sheet, check the condition of the optional feature that you will activate/deactivate. (If activated, the option name will appear on the configuration sheet.)



3. Shut down the Color Controller and turn the power of the Color Controller OFF. (☛ G889 SM Section 2.1.3)
4. Insert the dongle in the left USB port.  
(There are three USB ports in the back panel of the Color Controller. Insert the dongle to the left USB port.)
5. Make sure that the copier main power is already ON.
6. Turn the power switch of the Color Controller ON.
7. Wait for the Color Controller to come to the idle status.  
During this startup sequence, the optional feature will be activated/deactivated.

**NOTE:** 1) If the Color Controller already has a particular feature activated, and a new dongle for the same feature is inserted, the license will not be affected and the new dongle will remain active.

2) If the Color Controller already has a particular feature activated and the matching dongle is inserted, the feature will be removed, and the dongle can then be re-used on another Color Controller unit.

8. Remove the dongle from the USB port.

** CAUTION**

**Do not forget to remove the dongle at this time.**

**If you leave the dongle in the USB port and the Color Controller main power is restarted or the Color Controller is rebooted, then the condition of the optional feature will be reversed. (For example, if you wanted to activate the feature, it is now deactivated.) The only exception is that after you activate a feature for the 4<sup>th</sup> time, it cannot be deactivated.**

9. Print a configuration sheet (☛ G889 SM Section 2.1.3).
10. On the configuration sheet, check if the desired optional feature is activated/deactivated. (If activated, the option name will appear on the configuration sheet.)

If you have activated an optional feature, keep the configuration sheet. You may need it later for troubleshooting purposes, as shown in the following caution.

**⚠ CAUTION**

After an optional feature has been activated, the optional feature license information is kept inside the ACT chip on the video board of the Color Controller.


If the ACT chip becomes defective, the following are needed as evidence in order to get a new ACT chip and optional feature dongle:

- The defective ACT chip
- The configuration sheet that shows that the defective ACT chip had the optional feature license installed.

Therefore, always print a configuration sheet and keep it when you activate a new optional feature on the Color Controller.

11. 3 tags with 6 labels are attached to each optional feature dongle.

- a) Optional Feature Name: **Printed**
- b) Optional dongle serial number: **Printed**
- c) Installed Controller Model Name: **Blank**
- d) Installed Controller Serial Number: **Blank**
- e) 4 check boxes for Activation: **Not checked**
- f) 3 check boxes for Deactivation: **Not checked**

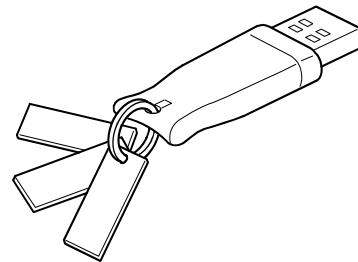

For the labels c) to f), you can fill in the related information or check the boxes, if you want to keep a record of the status of each dongle

# **PREVENTIVE MAINTENANCE**



## 2. PREVENTIVE MAINTENANCE

### 2.1 SETTINGS

#### 2.1.1 BEFORE REMOVING THE OLD PM PARTS

1. Enter the SP mode.
2. Output the SMC logging data with SP5-990-004.
3. Set the following SPs to "1" before you turn the power off. Then, the machine will reset the PM counters automatically. In the case of developer, the developer initialization will also be done automatically.
4. Exit the SP mode.

| Item   | SP   |
|--|--|
| Developer  | Black: 3902-005<br>Yellow: 3902-006<br>Cyan: 3902-007<br>Magenta: 3902-008 |
| Drum Unit  | Black: 3902-009<br>Yellow: 3902-010<br>Cyan: 3902-011<br>Magenta: 3902-012 |
| Fusing Unit Parts (not necessary for complete fusing units; see below) | 3902-014   |
| Image Transfer Belt Cleaning Unit                                      | 3902-015   |
| Paper Transfer Unit  | 3902-016   |
| Toner Collection Bottle (if not full or near-full)                     | 3902-017   |

For the following units, there is a new unit detection mechanism. It is not necessary to reset PM counters.

- PCU
- Development unit
- Complete fusing unit

- Toner Collection Bottle (if full or near-full)

## 2.1.2 AFTER INSTALLING THE NEW PM PARTS

1. Turn on the main power switch.
2. Output the SMC logging data with SP5-990-004 and check the counter values.
3. Make sure that the PM counters for the replaced units are "0" with SP7-803. If the  
⇒ PM counter for a unit was not reset, then reset that counter with SP 7-804.
4. Make sure that the exchange counter counts up with SP7-853.
5. Make sure that the counters for the previous units (SP7-906) on the new SMC logging data list (from step 2 above) are equal to the counters (SP7-803) for these units on the previous SMC logging data list (the list that was output in the "Before removing the old parts" section).
6. Make sure that the unit replacement date is updated with SP7-950.

## 2.1.3 PREPARATION BEFORE OPERATION CHECK

1. Clean the exposure glasses (for DF and book scanning).
2. Enter the user tools mode.
3. Do the "Automatic Color Calibration "(ACC) for the copier mode & printer mode as follows:
  1. Print the ACC test pattern (User Tools > Maintenance > ACC > Start).
  2. Put the printout on the exposure glass.
  3. Put 10 sheets of white paper on the test chart. This ensures the precise ACC adjustment.
  4. Close the ARDF or the platen cover.
  5. Press "Start Scanning" on the LCD. Then, the machine starts the ACC.
4. Exit the User Tools mode, and then enter the SP mode.
5. Do the "Forced line position adjustment" as follows.
  1. First do SP2-111-3 (Mode c).
  2. Then do SP2-111-1 (Mode a).
  3. To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.
6. Exit the SP mode.

## 2.1.4 OPERATION CHECK

Check if the sample image has been copied normally.

## 2.2 MAINTENANCE TABLES

### 2.2.1 PREVENTIVE MAINTENANCE TABLES

Chart: A4 (LT)/5%

Mode: 2 copies/original (prints/job)

Environment: Normal temperature and humidity

Yield may change depending on circumstances and print conditions.

Symbol keys: C: Clean, R: Replace, L: Lubricant, I: Inspect

#### **Mainframe**

| Item                 | 80K | 160K | 240K | 320K | EM | Remarks            |
|----------------------|-----|------|------|------|----|--------------------|
| <b>Scanner</b>       |     |      |      |      |    |                    |
| Reflector            | C   |      |      |      |    | Optics cloth       |
| 1st/2nd/3rd mirrors  | C   |      |      |      |    | Optics cloth       |
| Front and Rear Rails | C   |      |      |      |    | Dry cloth          |
| Exposure Glass       | C   |      |      |      | C  | Dry cloth; alcohol |
| ADF Exposure Glass   | C   |      |      |      | C  | Dry cloth; alcohol |
| Exposure Lamp        |     |      |      |      | I  |                    |
| APS Sensor           | C   |      |      |      | C  | Dry cloth          |
| <b>PCU</b>           |     |      |      |      |    |                    |
| Dev. Unit-K          |     |      |      | R    |    |                    |
| Drum Unit-K, C, M, Y | R   |      |      |      |    |                    |
| Developer-K, C, M, Y |     | R    |      |      |    |                    |
| Dev. Unit Entrance   | C   |      |      |      |    | Vacuum             |

| Item                              | 80K | 160K | 240K | 320K | EM | Remarks   |
|-----------------------------------|-----|------|------|------|----|-----------|
| Mylar-K, C, M, Y                  |     |      |      |      |    |           |
| <b><i>Transfer</i></b>            |     |      |      |      |    |           |
| Image transfer belt-cleaning unit |     | R    |      |      |    |           |
| Paper transfer roller unit        |     |      | R    |      |    |           |
| Toner Collection Bottle           |     | R    |      |      |    |           |
| ID Sensor                         |     |      |      | C    |    | Dry cloth |
| <b><i>Fusing</i></b>              |     |      |      |      |    |           |
| Fusing unit                       |     | R    |      |      |    |           |
| Fusing Belt                       |     | R    |      |      |    |           |
| Pressure Roller                   |     | R/L  |      |      |    | S552R     |
| -Bearing                          |     | R    |      |      |    |           |
| Fusing Roller                     |     | R/L  |      |      |    | S552R     |
| -Bearing                          |     | R/L  |      |      |    | S552R     |
| Heating Roller                    |     | R    |      |      |    |           |
| -Insulating Bushing               |     | R    |      |      |    |           |
| Tension Roller                    |     | R    |      |      |    |           |
| -Bushing                          |     | R    |      |      |    |           |
| Lubricant Roller                  |     | R    |      |      |    |           |
| -Bearing-Front                    |     | R    |      |      |    |           |
| -Bearing-Rear                     |     | R    |      |      |    |           |
| Cleaning Roller                   |     | R    |      |      |    |           |



| Item                        | 80K | 160K | 240K | 320K | EM | Remarks                 |
|-----------------------------|-----|------|------|------|----|-------------------------|
| One-way Clutch Gear         |     | R    |      |      |    |                         |
| Idle Gear                   |     | R    |      |      |    |                         |
| Thermopile                  |     | C    |      |      |    | Dry cloth               |
| Themistor (Fusing Roller)   |     | C    |      |      |    | Dry cloth* <sup>1</sup> |
| Themistor (Pressure Roller) |     | C    |      |      |    | Dry cloth               |
| Guide Plate (Entrance)      |     | C    |      |      |    | Dry cloth;<br>alcohol   |
| Guide Plate (Exit)          |     | C    |      |      |    | Dry cloth;<br>alcohol   |
| Stripper Plate              |     | C    |      |      |    | Dry cloth;<br>alcohol   |
| <b><i>Paper Path</i></b>    |     |      |      |      |    |                         |
| Registration Roller         |     |      |      |      | C  | Damp cloth              |
| Registration Sensor         |     |      |      |      | C  | Dry cloth               |
| Vertical Transport Roller   |     |      |      |      | C  | Damp cloth              |
| Vertical Transport Sensor   |     |      |      |      | C  |                         |
| Fusing Entrance Sensor      |     |      |      |      | C  | Dry cloth               |
| Fusing Exit Sensor          |     |      |      |      | C  |                         |
| Paper Dust Container        |     |      |      |      | C  |                         |

| Item                 | 80K | 160K | 240K | 320K | EM | Remarks      |
|----------------------|-----|------|------|------|----|--------------|
| <b>Duplex Unit</b>   |     |      |      |      |    |              |
| Inverter Roller      |     |      |      |      | C  | Dry cloth    |
| Transport Roller     |     |      |      |      | C  | Dry cloth    |
| Inverter Sensor      |     |      |      |      | C  | Blower brush |
| Duplex Exit Sensor   |     |      |      |      | C  |              |
| <b>Miscellaneous</b> |     |      |      |      |    |              |
| Dust Filter          |     | R    |      |      |    |              |

\*1: Clean this thermistor only when it gets paper dust.

### **ARDF**

| Item               | EM | Remarks                                    |
|--------------------|----|--|
| Pick-up Roller     | C  | Damp cloth; alcohol                        |
| Feed Belt          | C  | Damp cloth; alcohol                        |
| Separation Roller  | C  | Damp cloth; alcohol                        |
| Sensors            | C  | Blower brush                               |
| Platen Sheet Cover | C  | Damp cloth; alcohol (Replace if required.) |
| White Plate        | C  | Dry or damp cloth                          |
| Drive Gear         | L  | Grease G501                                |
| Transport Roller   | C  | Damp cloth; alcohol                        |
| Exit Roller        | C  | Damp cloth; alcohol                        |
| Inverter Roller    | C  | Damp cloth; alcohol                        |
| Idle Rollers       | C  | Damp cloth; alcohol                        |

**Two-tray Paper Feed Unit**

| Item             | EM | Remarks    |
|------------------|----|------------|
| Relay Roller     | C  | Damp cloth |
| Bottom Plate Pad | C  | Damp cloth |

**LCT**

| Item             | EM | Remarks    |
|------------------|----|------------|
| Relay Roller     | C  | Damp cloth |
| Bottom Plate Pad | C  | Damp cloth |

**1000-Sheet Booklet Finisher**

| Items           | EM | Remarks      |
|-----------------|----|--------------|
| Rollers         | C  | Damp cloth   |
| Discharge Brush | C  | Dry cloth    |
| Sensors         | C  | Blower brush |

**1000-Sheet Booklet Finisher Punch Kit**

| Items       | EM | Remarks        |
|-------------|----|----------------|
| Punch Chads | C  | Discard chads. |

**1000-Sheet Finisher**



| Items           | EM | Remarks      |
|-----------------|----|--------------|
| Rollers         | C  | Damp cloth   |
| Discharge Brush | C  | Dry cloth    |
| Sensors         | C  | Blower brush |

**500-Sheet Finisher**

| Item    | EM | Remarks    |
|---------|----|------------|
| Rollers | C  | Damp cloth |

|                 |   |              |
|-----------------|---|--------------|
| Discharge Brush | C | Dry cloth    |
| Sensors         | C | Blower brush |

## 2.2.2 OTHERS IN MAINFRAME

| Item              | 320K | 360K | Remarks  |
|-------------------|------|------|--|
| Dev. Unit–C, M, Y | R    |      |  *1 |
| Image Transfer    |      | R    |  *2 |

\*1: The color development units are considered EM parts because the actual life time of the color development units depends on the usage of color ration.

\*2: The image transfer belt unit is considered EM parts because its expected lifetime is relatively long.

# **REPLACEMENT AND ADJUSTMENT**



---

## 3. REPLACEMENT AND ADJUSTMENT

### 3.1 BEFOREHAND

#### CAUTION

- Before installing options, please do the following:
  1. If there is a fax unit in the machine, print out all messages stored in the memory, the lists of user-programmed items, and the system parameter list.
  2. If there are printer jobs in the machine, print out all jobs in the printer buffer.
  3. Turn off the main switch and disconnect the power cord, the telephone line, and the network cable.

## 3.2 SPECIAL TOOLS

| Part Number | Description                                 | Q'ty |
|-------------|---|------|
| B645 5010   | SD Card                                     | 1    |
| B645 6705   | PCMCIA Card Adapter                         | 1    |
| B645 6820   | USB Reader/Writer                           | 1    |
| VSSM9000    | Digital Multimeter – FLUKE87                | 1    |
| G021 9350   | Loop-back Connector – Parallel <b>*NOTE</b> | 1    |
| C401 9503   | 20X Magnification Scope                     | 1    |
| A257 9300   | Grease Barrierta – S552R                    | 1    |
| 5203 9502   | Silicone Grease G-501                       | 1    |
| A092 9503   | C4 Color Test Chart (3 pcs/set)             | 1    |
| A006 9104   | Scanner Positioning Pin (4 pcs/set)         | 1    |
| B679 5100   | Plug - IEEE1284 Type C                      | 1    |
| B132 9700   | Lubricant Powder                            | 1    |

 Note

- The “Loop-back Connector–Parallel” requires the “Plug-IEEE1284 Type C”, and the optional IEEE1284 interface option must also be installed.



## ⇒ 3.3 IMAGE ADJUSTMENT

### 3.3.1 SCANNING

Check the printing registration/side-to-side adjustment and the blank margin adjustment before you do the following scanner adjustments.


**Note**

- Use a S-2-1 test chart to do the following adjustments.

#### **Scanner sub-scan magnification**

A: Sub-scan magnification

- Put the test chart on the exposure glass. Then make a copy from one of the feed stations.
- Check the magnification ratio. Adjust with SP4-008 if necessary.  
Standard:  $\pm 1.0\%$ .

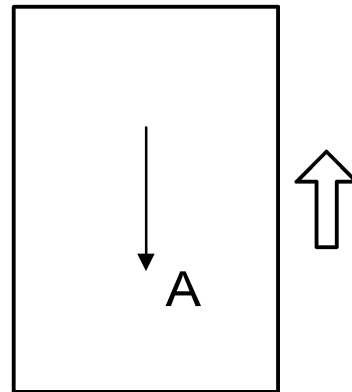


Replacement Adjustment

#### **Scanner leading edge and side-to-side registration**

A: Leading Edge Registration


- Put the test chart on the exposure glass. Then make a copy from one of the feed stations.
- Check the leading edge and side-to-side registration. Adjust the following SP modes if necessary. Standard:  $0 \pm 2\text{mm}$  for the leading edge registration,  $0 \pm 2.5\text{mm}$  for the side-to-side registration.

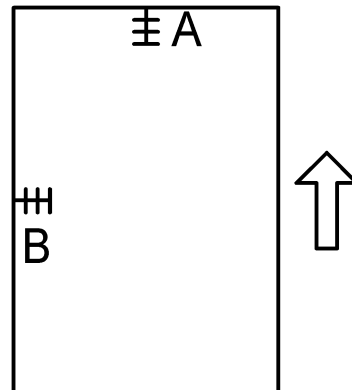

|                           | SP mode     |
|---------------------------|-------------|
| Leading Edge Registration | SP4-010-001 |
| Side-to-Side Registration | SP4-011-001 |

### 3.3.2 ARDF

#### *ARDF side-to-side, leading edge registration and trailing edge*

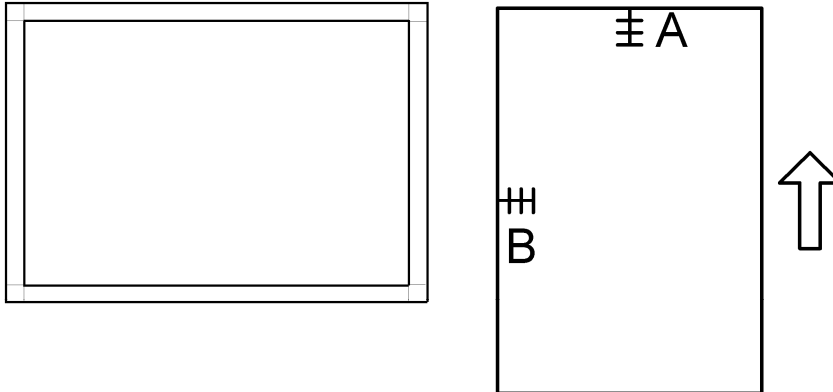

A: Leading edge registration

Use A3/DLT paper to make a temporary test chart as shown above.

1. Put the temporary test chart on the ARDF. Then make a copy from one of the feed stations.
2. Check the registration. Check the leading edge and side-to-side registration. Adjust the following SP modes if necessary. Standard:  $4.2 \pm 2$  mm for the leading edge registration,  $2 \pm 1$  mm for the side-to-side registration. Use the following SP modes to adjust if necessary.

| SP Code     | What It Does                    | Adjustment Range |
|-------------|---------------------------------|------------------|
| SP6-006-001 | Side-to-Side Registration       | $\pm 3.0$ mm     |
| SP6-006-003 | Leading Edge Registration       | $\pm 5.0$ mm     |
| SP6-006-005 | Buckle: Duplex Front            | $\pm 5.0$ mm     |
| SP6-006-006 | Buckle: Duplex Rear             | $\pm 5.0$ mm     |
| SP6-006-007 | Rear Edge Erase (Trailing Edge) | $\pm 5.0$ mm     |

#### *ARDF sub-scan magnification*


1. Put the temporary test chart on the ARDF. Then make a copy from one of the feed stations.
2. Check the magnification ratio. Adjust with SP6-017-001 if necessary.  
Standard:  $\pm 1.0\%$   
Reduction mode:  $\pm 1.0\%$   
Enlargement mode:  $\pm 1.0\%$

### 3.3.3 REGISTRATION

#### *Image Area*

$A = C = 4.2\text{mm}$  (1.6"),  $B = 2.0\text{mm}$

Make sure that the registration is adjusted within the adjustment standard range as shown below.

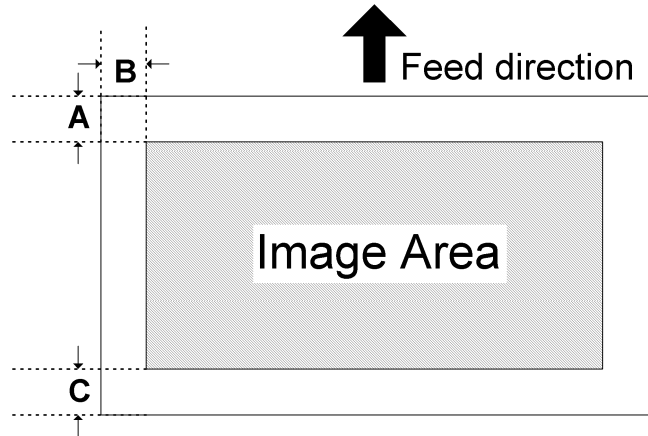

#### *Leading Edge*

Adjusts the leading edge registration for each paper type and process line speed.

#### *Side to Side*

Adjusts the side-to-side registration for each paper feed station. Use SP mode (SP1-002) to adjust the side-to-side registration for the optional paper feed unit, LCT, and duplex unit.

#### *Adjustment Standard*

- Leading edge (sub-scan direction):  $4.2 \pm 2$  mm
- Side to side (main-scan direction):  $2 \pm 1$  mm

#### *Paper Registration Standard*

The registration in both main and sub-scan directions can change within the following tolerance.

- Sub-scan direction:  $0 \pm 9$  mm
- Main-scan direction:  $0 \pm 4$  mm

#### *Adjustment Procedure*

1. Enter SP2-109-003.
2. Print out the test pattern (14: 1-dot trimming pattern) with SP2-109.



- Registration can change slightly as shown on the previous page. Print some pages of the 1-dot trimming pattern for step 3 and 4. Then average the leading edge and side-to-side registration values and adjust each SP mode.

3. Do the leading edge registration adjustment.
  1. Check the leading edge registration and adjust it with SP1-001.
  2. Select the adjustment conditions (paper type and process line speed).
  3. Input the value. Then press the  $\oplus$  key.
  4. Generate a trim pattern to check the leading edge adjustment.

#### 4. Do the side-to-side registration adjustment.


1. Check the side-to-side registration and adjust it with SP1-002.
2. Select the adjustment conditions (paper feed station).
3. Input the value. Then press the  $\oplus$  key.
4. Generate a trim pattern to check the leading edge adjustment.

### 3.3.4 ERASE MARGIN ADJUSTMENT

#### Note

- Adjust the erase margin C and D only if the registration (main scan and sub scan) cannot be adjusted within the standard values. Do the registration adjustment after adjusting the erase margin C and D, and then adjust the erase margin A and B.

1. Enter SP2-109.
2. Print out the test pattern (14: 1-dot trimming pattern) with SP2-109.
3. Check the erase margin A and B. Adjust them with SP2-103 if necessary.  
 Leading edge: 1.5 to 5.0 mm,  
 Side-to-side: 0.5 to 4.0 mm,  
 Trailing edge: 0.5 to 0.6 mm

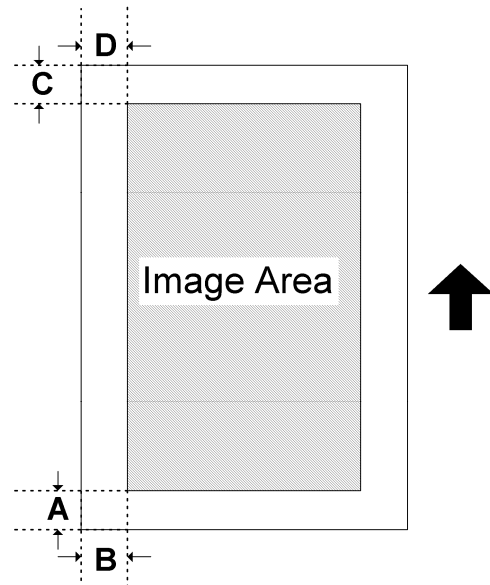

### 3.3.5 COLOR REGISTRATION

#### Line Position Adjustment

The automatic line position adjustment usually is done for a specified condition to get the best color prints.

Do the following if color registration shifts:

- Do "Auto Color Registration" as follows to do the forced line position adjustment.
  1. First do SP2-111-3.
  2. Then do SP2-111-1.  
 To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.
- You should also do the line position adjustment at these times:
  - After you transport or move the machine (you should do the forced line position adjustment if you install the machine at the user location.) if the machine is pre-installed at the workshop and moved to the user location,

- When you open the drum positioning plate
- When you remove or replace the motors, clutches, and/or gears related to the drum/development/transfer sections
- When you remove or replace the image transfer belt, image transfer belt unit or laser optical housing unit

### 3.3.6 PRINTER GAMMA CORRECTION

#### ↓ Note

- The ACC is usually sufficient to adjust the color balance to get the best print output. You only need the printer gamma correction to fine-tune to meet user requirements.

Use SP modes if you want to modify the printer gamma curve created with ACC. You can adjust the gamma data for the following:

- Highlight
- Middle
- Shadow areas
- IDmax.

The adjustable range is from 0 to 30 (31 steps).

#### **Copy Mode**

##### **- KCMY Color Balance Adjustment -**

The adjustment uses only "Offset" values.


#### ↓ Note

- Never change "Option" values (default value is 0).

|                    |   |
|--------------------|---|
| Highlight (Low ID) | Levels 2 through 5 in the C4 chart 10-level scale   |
| Middle (Middle ID) | Levels 3 through 7 in the C4 chart 10-level scale   |
| Shadow (High ID)   | Levels 6 through 9 in the C4 chart 10-level scale   |
| ID max             | Level 10 in the C4 chart 10-level scale (affects the entire image density.)   |
| Offset             | The higher the number in the range associated with the low ID, middle ID, high ID, and ID max, the greater the density. |

There are four adjustable modes (can be adjusted with SP4-918-009):

- Copy Photo mode
- Copy Letter mode
- Copy Letter (Single Color) mode
- Copy Photo (Single Color) mode

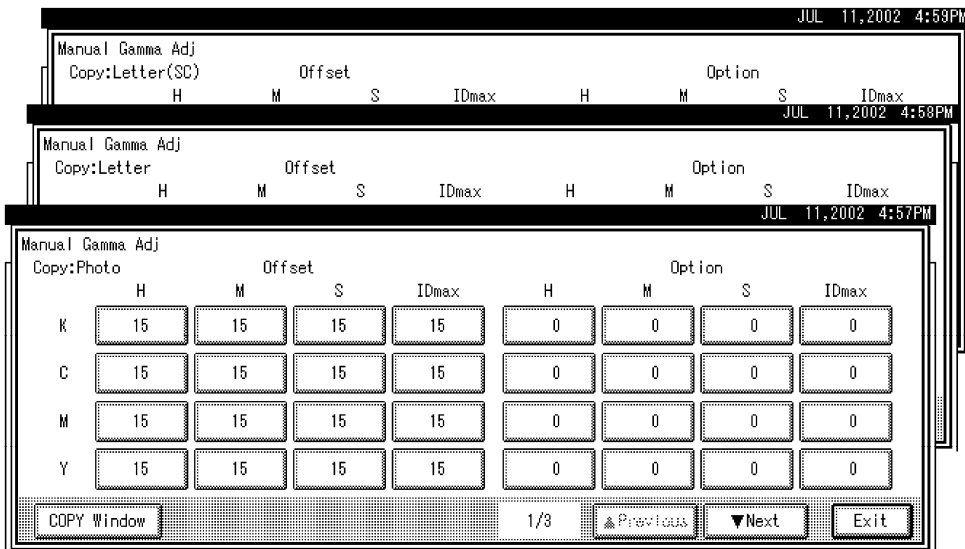

**- Adjustment Procedure -**



1. Copy the C-4 chart in the mode that you want to adjust.
2. Enter the SP mode.
3. Select "Copy SP."
4. Select SP4-918-009.
5. Adjust the offset values until the copy quality conforms to the standard (see the table below).

**Note**

- 1. Never change "Option" value (default value is 0).
- 2. Adjust the density in this order: "ID Max," "Middle," "Shadow," "Highlight."




**- Photo Mode, Full Color -**


|   | Item to Adjust                         | Level on the C-4 chart  | Adjustment Standard |   |   |   |   |   |    |   |   |    |  |
|---|--|---|---------------------|---|---|---|---|---|----|---|---|----|--|
| 1 | ID max:<br>(K, C, M, and Y)            | <table border="1" style="display: inline-table;"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td> </tr> </table><br> | 1                   | 2 | 3 | 4 | 5 | 6 | 7  | 8 | 9 | 10 | Adjust the offset value so that the density of level 10 matches that of level 10 on the C-4 chart. |
| 1 | 2                                      | 3   | 4                   | 5 | 6 | 7 | 8 | 9 | 10 |   |   |    |  |
| 2 | Middle (Middle ID)<br>(K, C, M, and Y) | <table border="1" style="display: inline-table;"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td> </tr> </table><br> | 1                   | 2 | 3 | 4 | 5 | 6 | 7  | 8 | 9 | 10 | Adjust the offset value so that the density of level 6 matches that of level 6 on the C-4 chart.   |
| 1 | 2                                      | 3   | 4                   | 5 | 6 | 7 | 8 | 9 | 10 |   |   |    |  |
| 3 | Shadow (High ID)<br>(K, C, M, and Y)   | <table border="1" style="display: inline-table;"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td> </tr> </table><br> | 1                   | 2 | 3 | 4 | 5 | 6 | 7  | 8 | 9 | 10 | Adjust the offset value so that the density of level 8 matches                                     |
| 1 | 2                                      | 3   | 4                   | 5 | 6 | 7 | 8 | 9 | 10 |   |   |    |  |
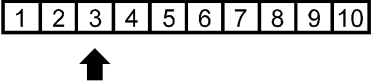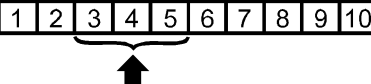
|   |  |   |   |
|---|--|---|---|
|   |  |   | that of level 8 on the C-4 chart.   |
| 4 | Highlight (Low ID)<br>(K, C, M, and Y)                           |  | Adjust the offset value so that dirty background does not show on the copy and the density of level 3 is slightly lighter than that of level 3 on the C-4 chart.  |
| 5 | K Highlight (Low ID)<br>(C,M, and Y)<br><on the full color copy> |  | Adjust the offset value so that the color balance of black scale levels 3 through 5 in the copy is seen as gray (no C, M, or Y should be visible). If the black scale contains C, M, or Y, do steps 1 to 4 again. |





Replacement Adjustment

**- Photo Mode, Single Color -**

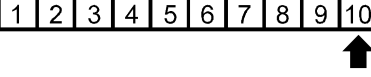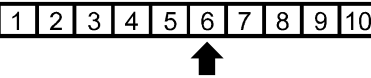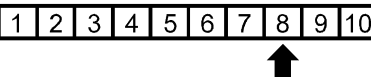
|   | Item to Adjust         | Level on the C-4 chart  | Adjustment Standard  |
|---|------------------------|---|--|
| 1 | ID max: (K)            |  | Adjust the offset value so that the density of level 10 matches that of level 10 on the C-4 chart. |
| 2 | Middle (Middle ID) (K) |  | Adjust the offset value so that the density of level 6 matches that of level 6 on the C-4 chart.   |
| 3 | Shadow (High ID) (K)   |  | Adjust the offset value so that the density of level 8 matches that of level 8 on the C-4 chart.   |
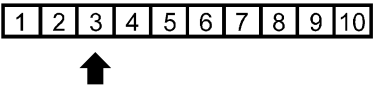
|   |                           |   |  |
|---|---------------------------|---|--|
| 4 | Highlight (Low ID)<br>(K) |  | Adjust the offset value so that dirty background does not show on the copy and the density of level 3 is slightly lighter than that of level 3 on the C-4 chart. |
|---|---------------------------|---|--|




**- Text (Letter) Mode, Full Color -**
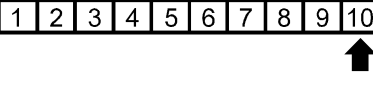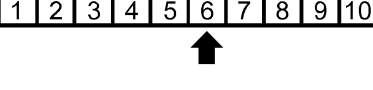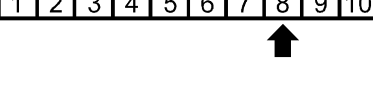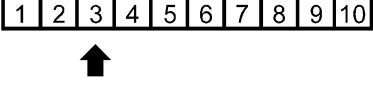
|   | Item to Adjust                         | Level on the C-4 chart (K)  | Adjustment Standard  |
|---|--|---|--|
| 1 | ID max: (K, C, M, and Y)               |    | Adjust the offset value so that the density of level 10 matches that of level 10 on the C-4 chart.   |
| 2 | Middle (Middle ID)<br>(K, C, M, and Y) |  | Adjust the offset value so that the density of level 6 matches that of level 6 on the C-4 chart.   |
| 3 | Shadow (High ID)<br>(K, C, M, and Y)   |  | Adjust the offset value so that the density of level 8 matches that of level 8 on the C-4 chart.   |
| 4 | Highlight (Low ID)<br>(K, C, M, and Y) |  | Adjust the offset value so that dirty background does not show on the copy and the density of level 3 is slightly lighter than that of level 3 on the C-4 chart. |

**- Text (Letter) Mode, Single Color -**
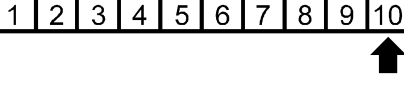
|   | Item to Adjust | Level on the C-4 chart (K)  | Adjustment Standard                                     |
|---|----------------|---|---|
| 1 | ID max: (K)    |  | Adjust the offset value so that the density of level 10 |

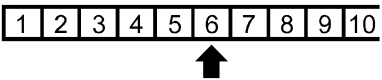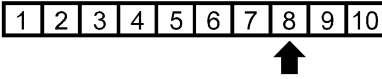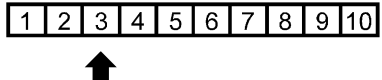

|   |                        |  |  |
|---|------------------------|--|--|
|   |                        |  | matches that of level 10 on the C-4 chart.   |
| 2 | Middle (Middle ID) (K) |   | Adjust the offset value so that the density of level 6 matches that of level 6 on the C-4 chart.   |
| 3 | Shadow (High ID) (K)   |   | Adjust the offset value so that the density of level 8 matches that of level 8 on the C-4 chart.   |
| 4 | Highlight (Low ID) (K) |  | Adjust the offset value so that dirty background does not show on the copy and the density of level 3 is slightly lighter than that of level 3 on the C-4 chart. |

Replacement Adjustment

 Note

- Text parts of the test pattern cannot be printed clearly after you adjust “shadow” as shown above. At this time, check if the 5 line/mm pattern at each corner is printed clearly. If it is not, adjust the offset value of “shadow” again until it is.

**Printer Mode**

There are six adjustable modes (select these modes with printer SP1-102-001):

- 2400 x 600 photo mode
- 2400 x 600 text mode
- 1800 x 600 photo mode
- 1800 x 600 text mode
- 600 x 600 photo mode
- 600 x 600 text mode

|           | K         | C          | M          | Y          |
|-----------|-----------|------------|------------|------------|
| Highlight | SP1-104-1 | SP1-104-21 | SP1-104-41 | SP1-104-61 |
| Shadow    | SP1-104-2 | SP1-104-22 | SP1-104-42 | SP1-104-62 |

|        |           |            |            |            |
|--------|-----------|------------|------------|------------|
| Middle | SP1-104-3 | SP1-104-23 | SP1-104-43 | SP1-104-63 |
| IDmax  | SP1-104-4 | SP1-104-24 | SP1-104-44 | SP1-104-64 |

**- Adjustment Procedure -**

1. Do ACC for the printer mode.
2. Turn the main power off and on.
3. Enter SP mode.
4. Select "Printer SP".
5. Select SP1-102-001. Then select the necessary print mode to adjust.
6. Choose SP1-103-1 to print out a tone control test sheet if you want to examine the image quality for these settings.
7. Adjust the color density with SP1-104 as shown following table lists. Compare the tone control test sheet with the C4 test chart.



- Adjust the density in this order: "ID Max", "Shadow", "Middle", "Highlight".


8. Use SP1-105-001 to keep the adjusted settings.

⇒ ***Horizontal Parallelism Adjustment***

1. Access SP2-109 and print out test pattern 14 (1-dot trimming pattern).
2. Make sure the horizontal lines are parallel.  
"Parallel": The gap between horizontal lines is 1.8 mm or less.
3. If the lines are not parallel, check the following and apply corrections as necessary:
  - Make sure the side fences are set neatly against the sides of the paper.
  - Make sure the PTR unit is connected to the bracket correctly.
  - Make sure the shafts of the duplex unit are not bent nor damaged.
4. If the lines are still not parallel, do the following procedure:
  - 1) Open the duplex unit.
  - 2) Remove the fusing unit.
  - 3) Open the front cover.
  - 4) Open the drum positioning plate (1 screw).
  - 5) Remove the ITB unit.
  - 6) Remove front right cover (1 screw).
  - 7) Remove the upper right front cover (1 screw).
  - 8) Remove the upper right inner cover (2 screws).

5. Loosen the 8 screws for the front fusing guide plate [A].
6. Remove the 2 screws for the levers of the front fusing guide plate [B], [C].


**NOTE:** You do not need to reattach these two screws after you finish this procedure.

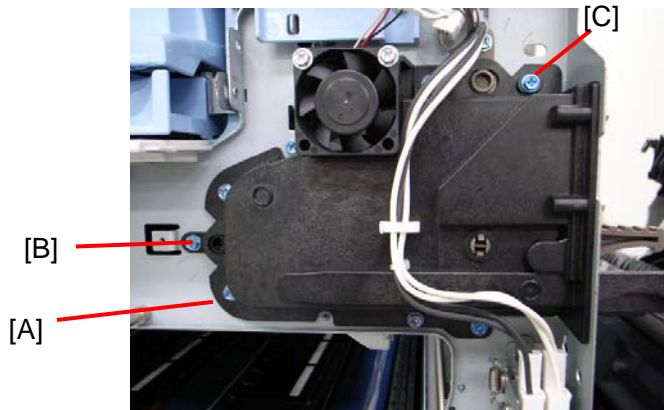

Replacement Adjustment

7. If the horizontal lines slopes **down to the left** (see illustration), move the front fusing guide plate upward. To do this, turn both levers of the front fusing guide plate **clockwise**.

**IMPORTANT:** Turn both levers in the same direction. If you do not, the fusing belt may be damaged.

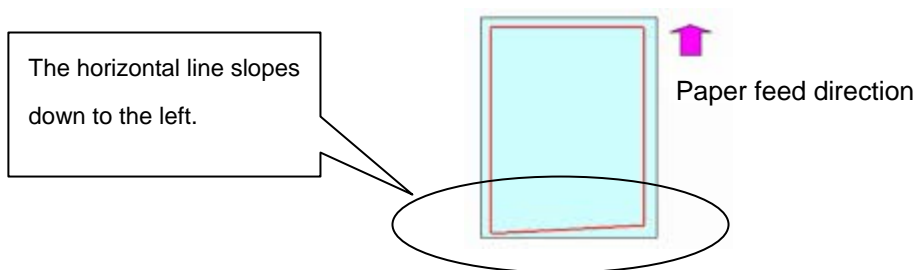

8. If the horizontal lines slopes **down to the right**, move the front fusing guide plate downward. To do this, turn both levers of the front fusing guide plate **counterclockwise**.

**IMPORTANT:** Turn both levers in the same direction. If you do not, the fusing belt may be damaged.


9. Retighten the 8 screws for the front fusing guide plate.
10. Print out the test pattern and check the image quality.
11. If the symptom still occurs, repeat the above steps.

## 3.4 EXTERIOR COVERS

### 3.4.1 FRONT DOOR




1. Open the front door [A].

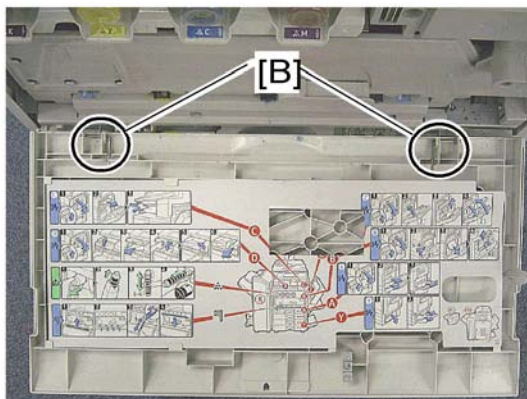


2. Remove the two pins [B], and then remove the front cover.

### 3.4.2 LEFT COVER

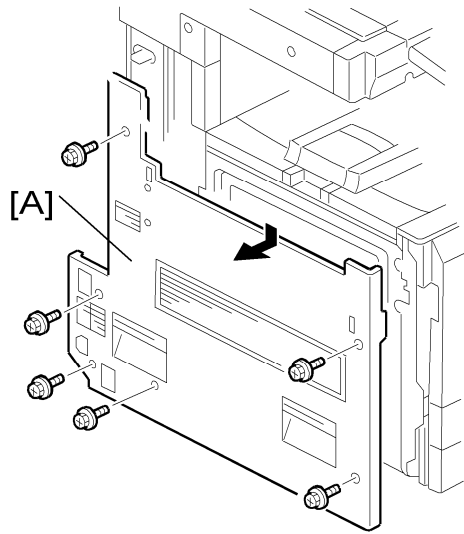

1. Left cover [A] (🔩 x 6)


### 3.4.3 REAR COVER

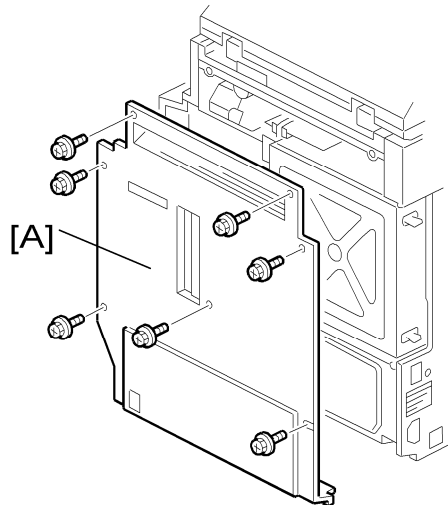

1. Rear cover [A] (🔩 x 7)


Replacement  
Adjustment

### 3.4.4 RIGHT REAR COVER

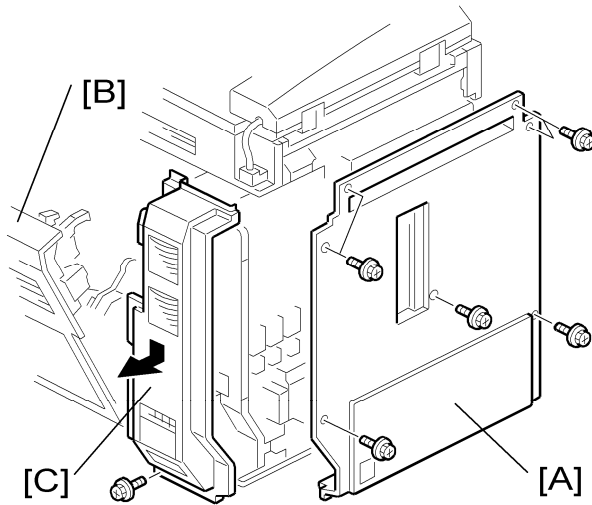


1. Rear cover [A] (🔩 x 7)
2. Open the right door [B].
3. Right rear cover [C] (🔩 x 1)

### 3.4.5 OPERATION PANEL

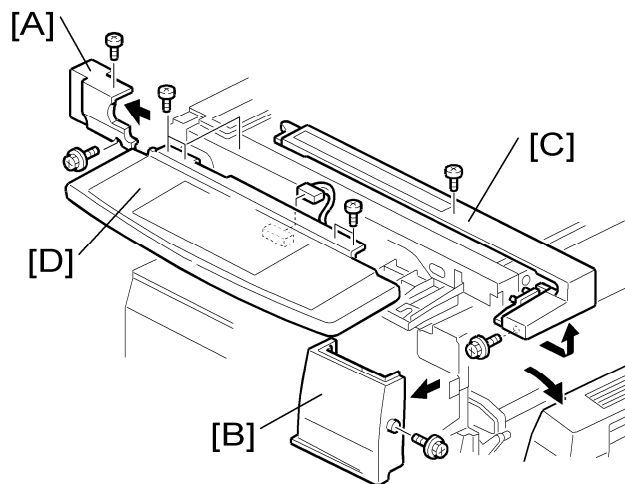

1. Top left front cover [A] (🔩 x 2)
2. Open the right door.
3. Front right cover [B] (🔩 x 1)
4. Top front cover [C] (🔩 x 2)
5. Operation panel [D] (🔩 x 2, 📏 x 1)


### 3.4.6 DUST FILTER

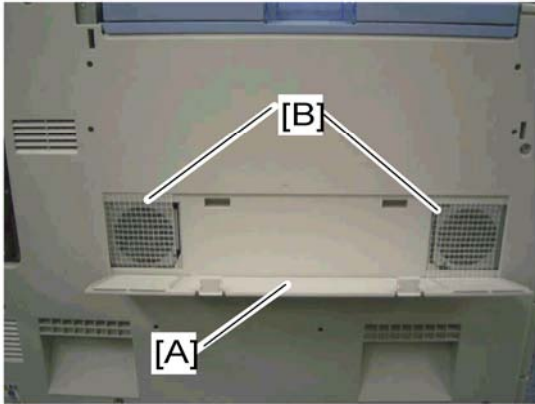

1. Dust filter cover [A]
2. Two dust filters [B]

## 3.5 SCANNER UNIT

### 3.5.1 EXPOSURE GLASS

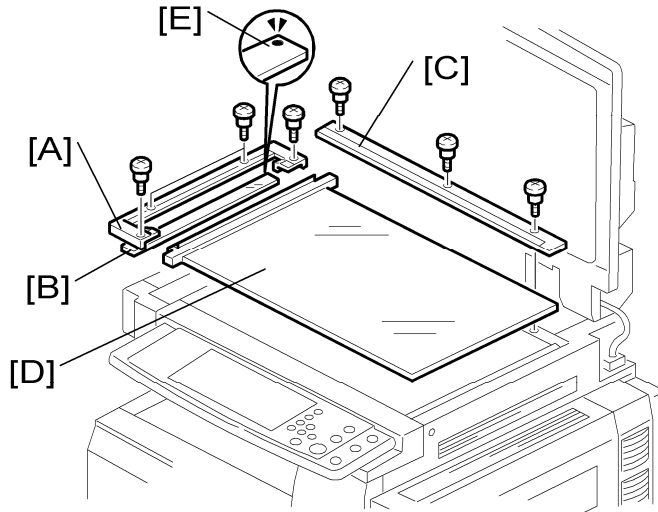


1. Glass cover [A] (⚙ x 4)
2. ARDF exposure glass [B]
3. Rear scale [C] (⚙ x 3)
4. Exposure glass with left scale [D]

↓ Note

- Position the white marker [E] at the rear-left corner and the blue marker at the front-left corner when you reattach the ARDF exposure glass.




### 3.5.2 ORIGINAL LENGTH/WIDTH SENSORS

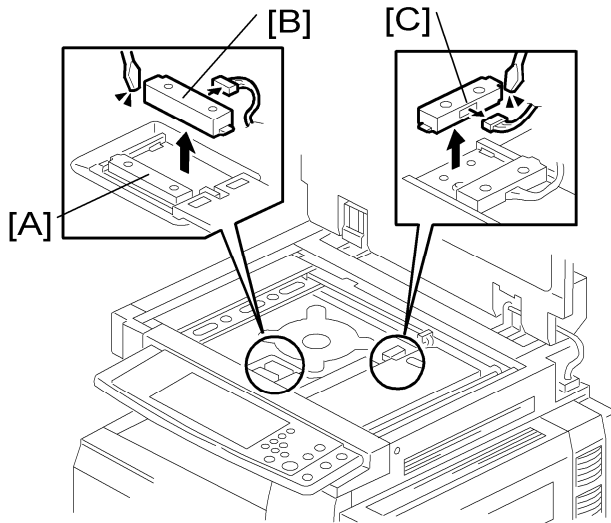


Replacement  
Adjustment

1. Exposure glass with left scale (🖨️ "Scanner Unit")
2. Original length sensor bracket [A] (🔧 x 1, 🖨️ x1)
3. Original length sensors [B] (snap, 🖨️ x 1 each)
4. The number of the original length sensors depends on the model; 3 for EU, 2 for others.
5. Original width sensors [C] (snap, 🔧 x 1, 🖨️ x1 each)


### 3.5.3 EXPOSURE LAMP

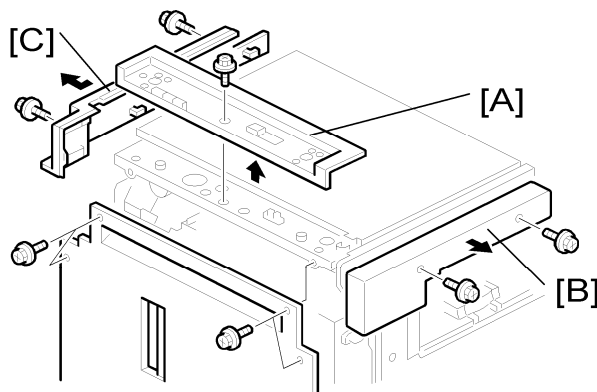


1. Rear cover (🖨️ "Rear Cover")
2. Operation panel (🖨️ "Operational Panel")
3. Exposure glass (🖨️ "Exposure Glass")
4. Scanner rear cover [A] (🔧 x 1)
5. Scanner left cover [B] (🔧 x 2)
6. Scanner right cover [C] (🔧 x 2)

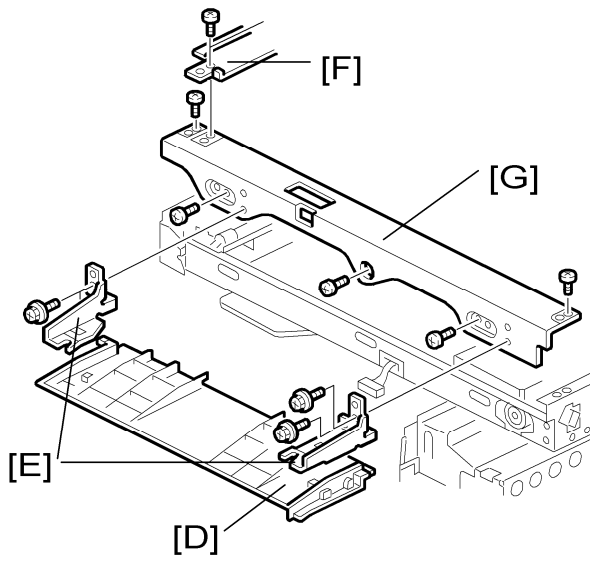

7. Operation panel bottom cover [D]
8. Operation panel support brackets [E] (🔩 x 2 each)
9. Scanner left stay [F] (🔩 x 2)
10. Scanner front frame [G] (🔩 x 6)

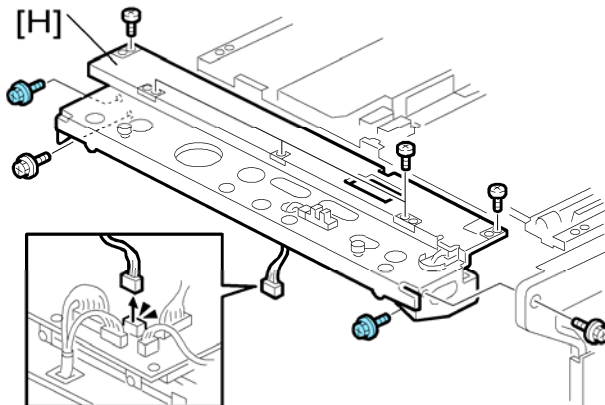


11. Scanner rear frame [H] (🔩 x 9, 📏 x 1)
12. Disconnect the exposure lamp cable [I] from the lamp stabilizer (🔌 x 2).

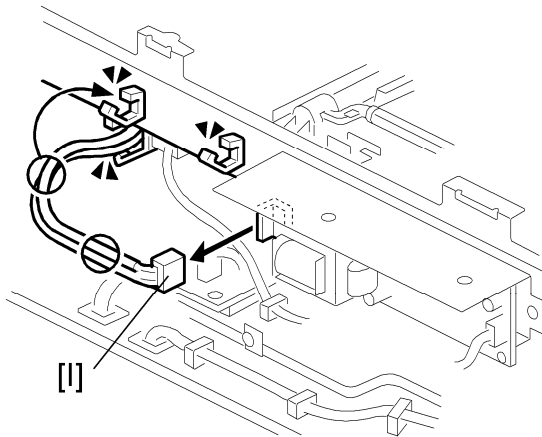

13. Release the clamp [J] (⚙️ x 1).
14. Remove the pulley [K].
15. Hold down the snap [L], and then slide the exposure lamp [M] to the front side.
16. Exposure lamp [M]

Replacement Adjustment


**Reassembling**

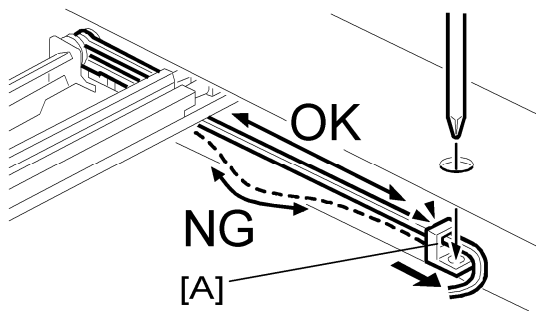


- Run the cable so there is no slack. Slide the clamp [A] to adjust the cable slack.

**3.5.4 SCANNER MOTOR**


1. Rear cover (📁 "Rear Cover")
2. Scanner motor assembly [A] (⚙️ x 2, 📁 x 1, spring x 1)
3. Scanner motor [B] (⚙️ x 2)
- ⇒ 4. After you replace the motor, do the adjustments in the following section of the manual: Image Adjustment – Scanning.

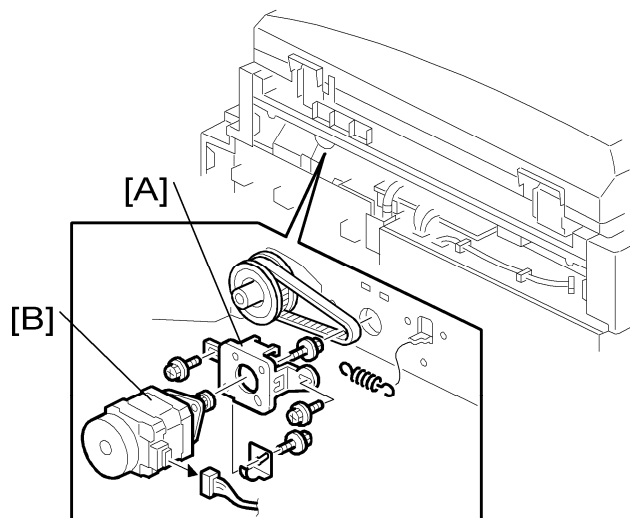

### 3.5.5 SENSOR BOARD UNIT (SBU)

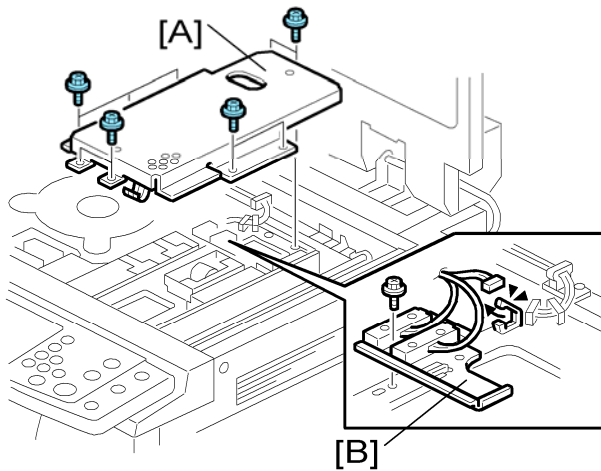

1. Exposure glass (☞ "Exposure Glass")
2. SBU cover bracket [A] (☞ x 9)
3. Original length sensor bracket [B] (☞ x 1, ☞ x 1)

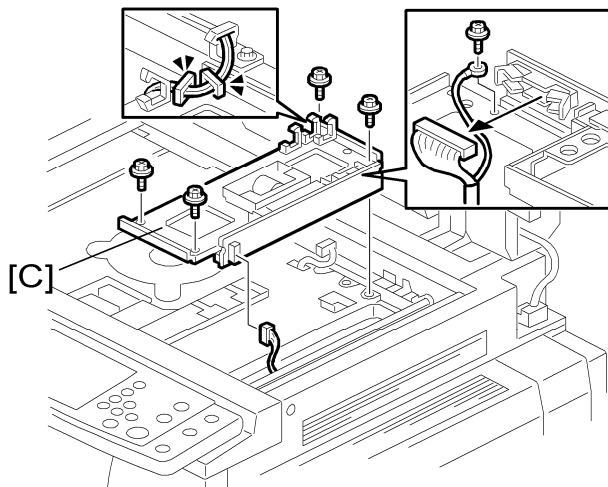

4. Sensor board unit [C] (☞ x 5, ☞ x 2, ☞ x 2)


#### ***When reassembling***

Adjust the following SP modes after you replace the sensor board unit:

- SP4-008 (Sub Scan Mag): See "Image Adjustment: Scanning".
- SP4-010 (Sub Mag Reg.): See "Image Adjustment: Scanning".
- SP4-011 (Main Scan Reg): See "Image Adjustment: Scanning".


- SP4-688 (DF: Density Adjustment): Use this to adjust the density level if the ID of outputs made in the DF and Platen mode is different.

### 3.5.6 EXPOSURE LAMP STABILIZER

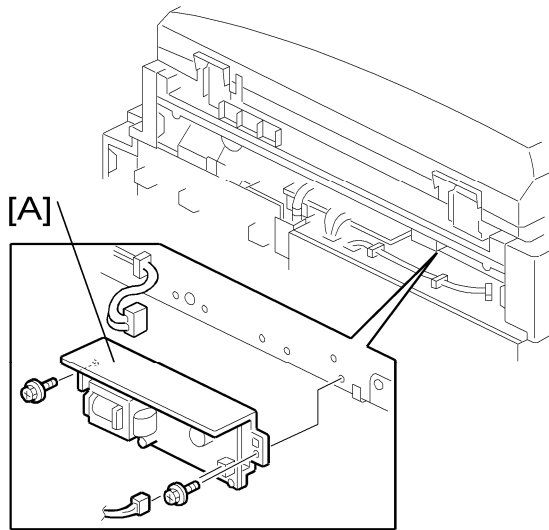

1. Rear cover (Image "Rear Cover")
2. Exposure lamp stabilizer [A] (Image x 2, Image x 2)


### 3.5.7 FRONT SCANNER WIRE

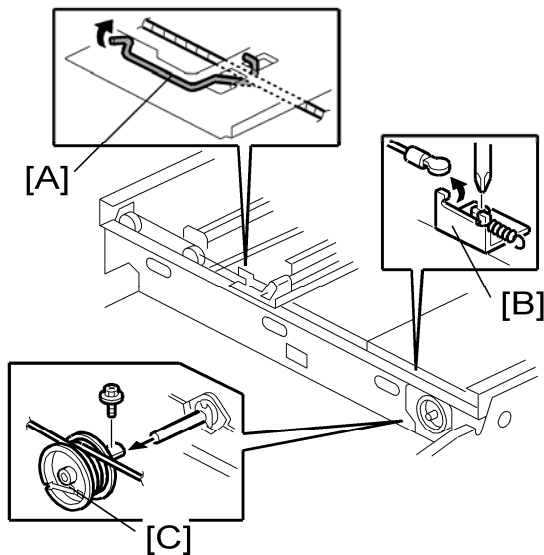

1. Exposure glass (Image "Exposure Glass")
2. Front frame (Image "Exposure Lamp")
3. Front scanner wire clamp [A]
4. Front scanner wire bracket [B] (Image x 1)
5. Front scanner wire and scanner drive pulley [C] (Image x 1)

Replacement Adjustment


## Reinstalling the Front Scanner Wire

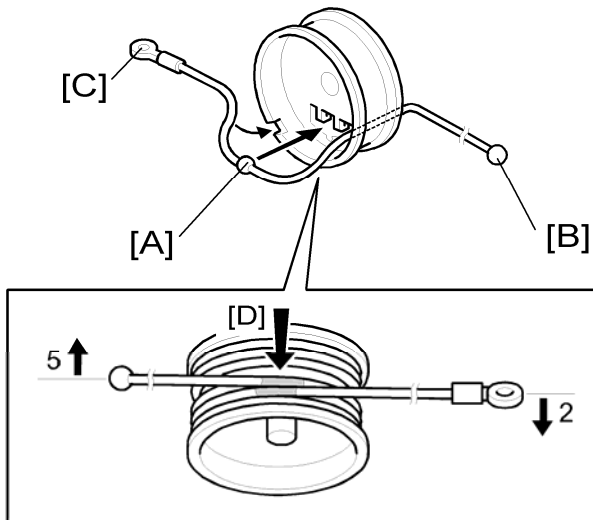

1. Position the center ball [A] in the middle of the forked holder.
2. Pass the right end (with the ball) [B] through the square hole. Pass the left end (with the ring) [C] through the notch.
3. Wind the right end counterclockwise (shown from the machine's front) five times. Wind the left end clockwise twice.

### Note

- The two red marks [D] come together when you have done this. Stick the wire to the pulley with tape. This lets you easily handle the assembly at the time of installation.

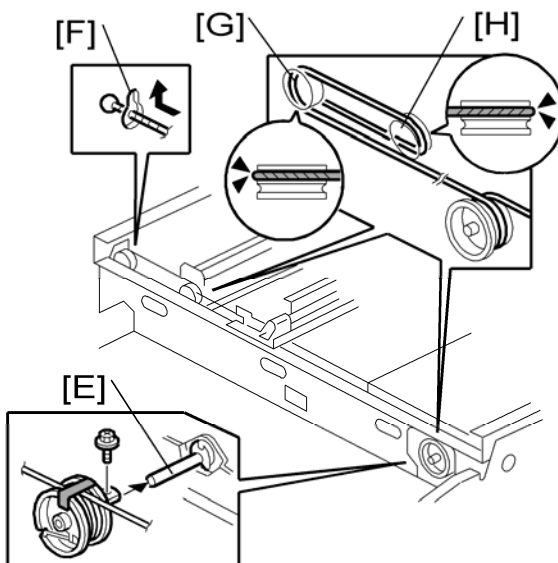


4. Install the drive pulley on the shaft [E].

### Note

- Do not attach the pulley to the shaft with the screw at this time.

5. Insert the left end into the slit [F]. The end should go via the rear track of the left pulley [G] and the rear track of the movable pulley [H].

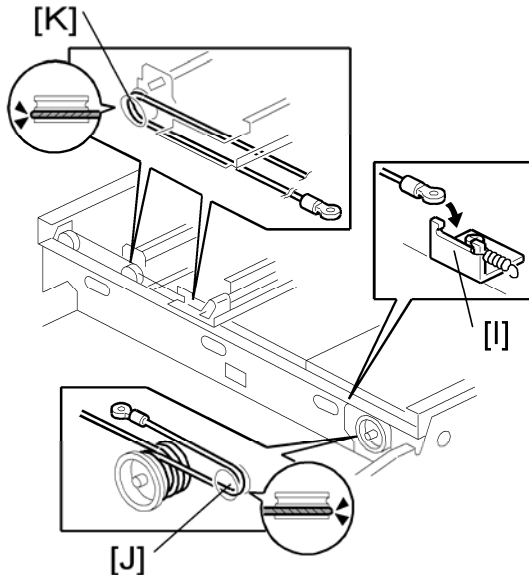


6. Hook the right end onto the front scanner wire bracket [I]. The end should go via the front track of the right pulley [J] and the front track of the movable pulley [K].

↓ Note

- Do not attach the scanner wire bracket with the screw at this time.

- ⇒ 7. Remove the tape from the drive pulley.
8. Insert a scanner-positioning pin [L] through the 2nd carriage hole [M] and the left holes [N] in the front rail. Insert another scanner positioning pin [O] through the 1st carriage hole [P] and the right holes in the front rail [Q].
9. Insert two more scanner positioning pins through the holes in the rear rail.
10. Screw the drive pulley to the shaft [R].
11. Screw the scanner wire bracket to the front rail [S].

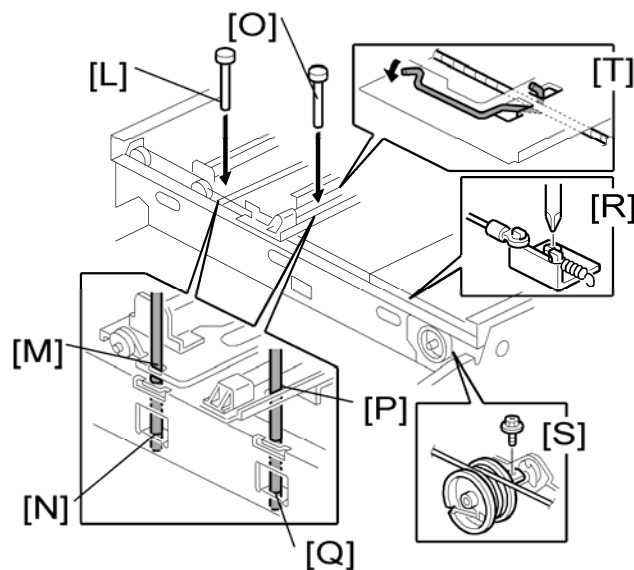


12. Install the scanner wire clamp [T].
13. Pull out the positioning pins.
- ⇒ 14. After you replace the wire, do the adjustments in the following section of the manual: Image Adjustment – Scanning.

↓ Note

- Make sure the 1st and 2nd carriages move smoothly after you remove the positioning pins. Do steps 8 through 13 again if they do not.

### 3.5.8 REAR SCANNER WIRE

#### *Reinstalling the Rear Scanner Wire*

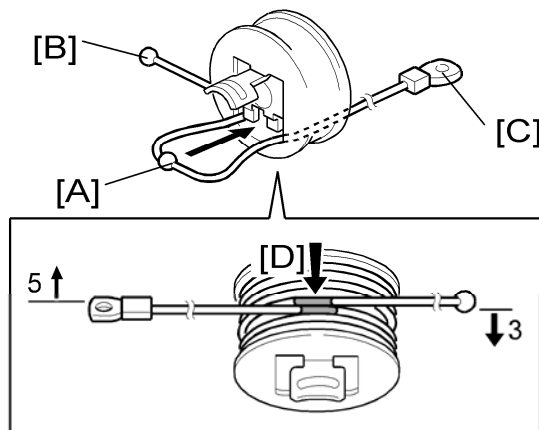

1. Position the center ball [A] in the middle of the forked holder.
2. Pass the left end (with the ball) [B] through the drive pulley notch. Pass the right end (with the ring) [C] through the drive pulley hole.
3. Wind the left end [B] clockwise (shown from the machine's front) five times. Wind the right end [C] counterclockwise three times.

↓ Note

- The two red marks [D] come together when you do this. Attach the wire to the pulley with tape. This lets you easily handle the assembly at the time of installation.

4. Install the drive pulley on the shaft.

↓ Note

- Do not attach the pulley on the shaft with the screw at this time.

5. Install the wire.

↓ Note

- The winding of the wire on the three pulleys at the rear of the scanner should



be the same as the winding on the three pulleys at the front. This must show as a mirror image.

Example: At the front of the machine, the side of the drive pulley with the three windings must face the front of the machine. At the rear of the machine, it must face the rear.

6. Do steps 7 through 13 again in the “” Section.


### 3.5.9 TOUCH PANEL POSITION ADJUSTMENT

**Note**


- It is necessary to calibrate touch panel at the following times:
- When you replace the operation panel.
- When you replace the controller board.
- When the touch panel detection function does not operate correctly



Do not use items [2] to [9] on the Self-Diagnostic Menu. These items are for design use only.

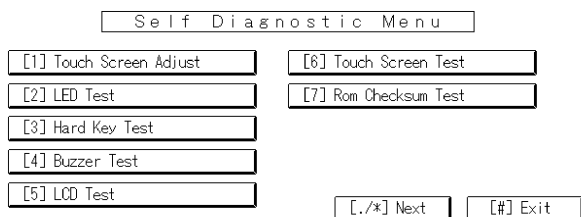1. Press , press    , press  5 times to open the Self-Diagnostics menu.

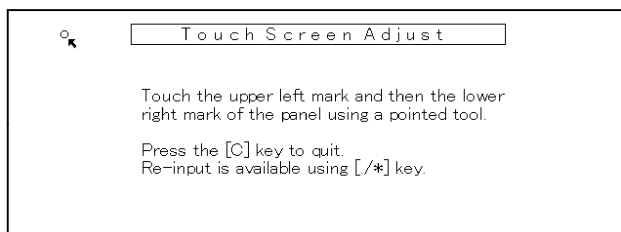

2. On the touch screen press “Touch Screen Adjust” (or press ).
3. Use a pointed (not sharp) tool to press the upper left mark .



4. Press the lower right mark when “” shows.
5. Touch a few spots on the touch panel to make sure that the marker “+” shows exactly where the screen is touched.
6. Press Cancel. Then start from Step 2 again if the “+” mark does not show where the screen is touched.
7. Press [#] OK on the screen (or press ) when you are finished.

8. Touch [#] Exit on the screen to close the Self-Diagnostic menu. Save the calibration settings.


## 3.6 LASER OPTICS

### **⚠ WARNING**

- Turn off the main switch and unplug the machine before beginning any of the procedures in this section. Laser beams can cause serious eye injury.

### 3.6.1 CAUTION DECAL LOCATION

⇒ Caution decals are placed as shown at the right.

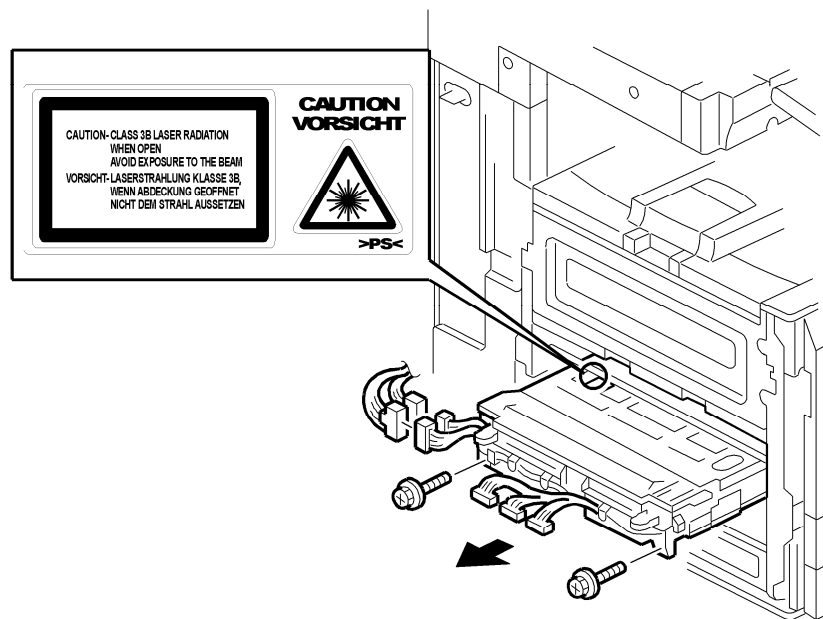

Replacement  
Adjustment

### **⚠ WARNING**

- Be sure to turn off the main switch and disconnect the power plug from the power outlet before beginning any disassembly or adjustment of the laser unit. This copier uses a class IIIb laser beam with a wavelength of 655 nm and an output of 7 mW. The laser can cause serious eye injury.

### 3.6.2 LASER OPTICS HOUSING UNIT


#### **⚠ CAUTION**

- Before installing a new laser optics housing unit, remove the sponge padding and the tag from the new unit.


↓ Note

- ⇒
- A new laser optics housing unit has a bracket to protect the LD units. When you install the new unit, do not remove the bracket until near the end of the installation procedure. (The correct time is stated in the manual.) This bracket protects a capacitor on the unit. If the bracket is removed too early, you could break the capacitor on the corner of the main frame when you install the new unit.

## Preparing the new laser optics housing unit

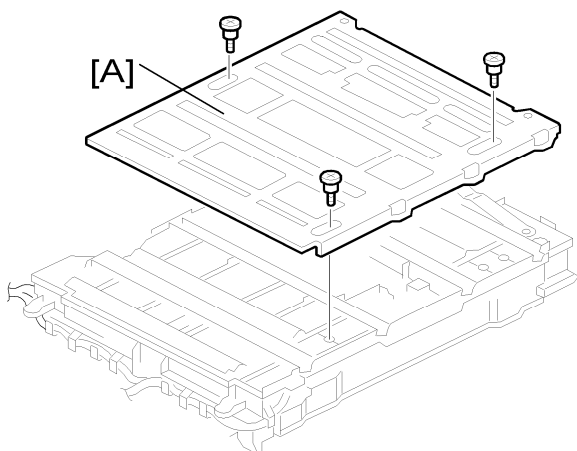

1. Shutter [A] of the laser optics housing unit (🔩 x 3)

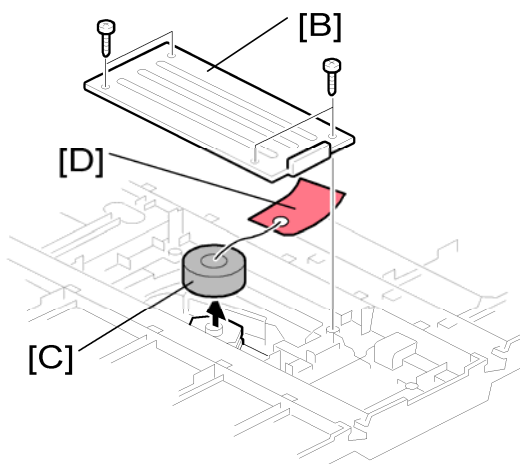

2. Polygon motor cover [B] of the laser optics housing unit (🔩 x 4)
3. Sponge padding [C]
4. Tag [D]
5. Reinstall the polygon motor cover [B].

## Before removing the old laser optics housing unit

Do the following settings before removing the laser optics housing unit. These are adjustments for skew adjustment motors in the laser optics housing unit.


1. Plug in and turn on the main power switch of the copier.
2. Enter the SP mode.
3. Execute SP9511-001 to clear the WTL positioning motor setting for Magenta.
4. Execute SP9511-002 to clear the WTL positioning motor setting for Cyan.
5. Execute SP9511-003 to clear the WTL positioning motor setting for Yellow.
6. Exit the SP mode.

7. Turn off the main power switch and disconnect the power cord of the copier.

⇒ **Recovery procedure for omitting the "Before removing the old laser optics housing unit" procedure (See page 3-30)**


If you did not do the procedure in 'Before removing the old laser optics housing' before removing the old laser optics housing unit, you must do the following.

1. Turn off the main power switch and disconnect the power cord of the copier.
2. Remove the left cover and harness cover bracket (see the following "Removing the old laser optics housing unit")

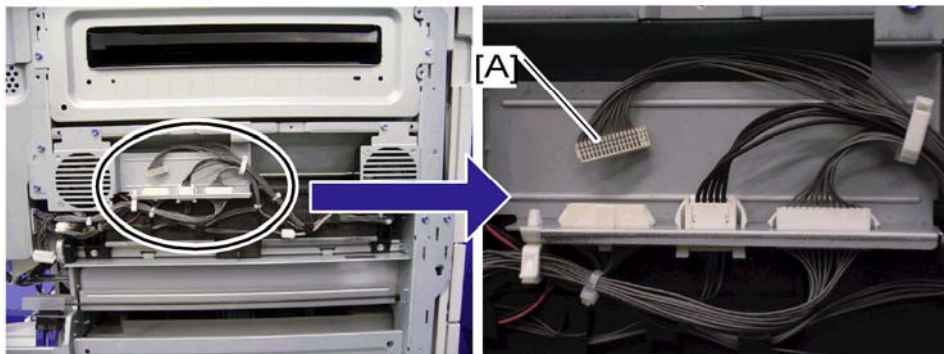


3. Disconnect the harness [A] of the skew correction motor.
4. Do steps 1 to 7 of "Before removing the old laser optics housing unit".
5. Connect the harness [A] and reinstall the harness bracket and left cover.
6. Plug in and turn on the main power switch.

**Removing the old laser optics housing unit**

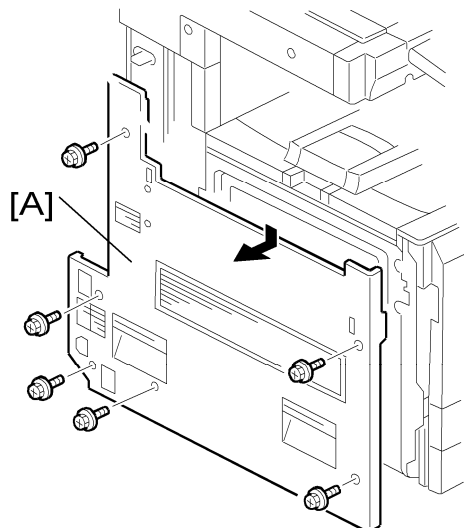


1. Left cover [A] (🔩 x 6)

Replacement  
Adjustment

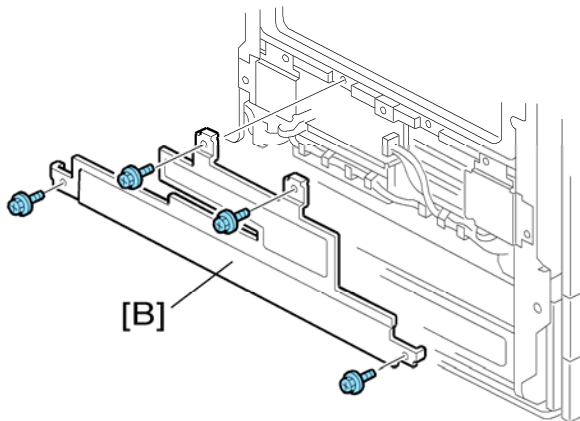


2. Harness cover bracket [B] (🔩 x 4).

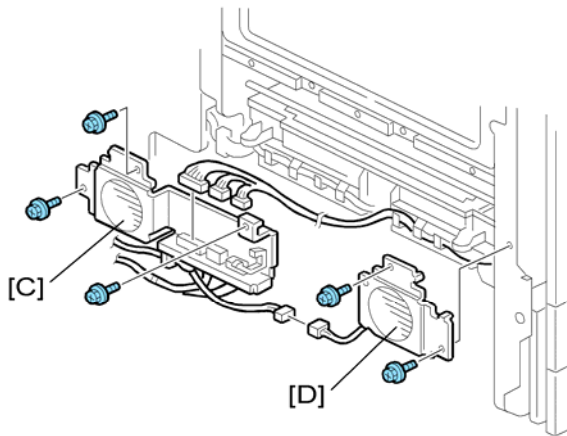

3. Rear fan bracket [C] for the laser housing optics unit (🔩 x 3, 📏 x 7)

4. Front fan bracket [D] for the laser housing optics unit (🔩 x 2)

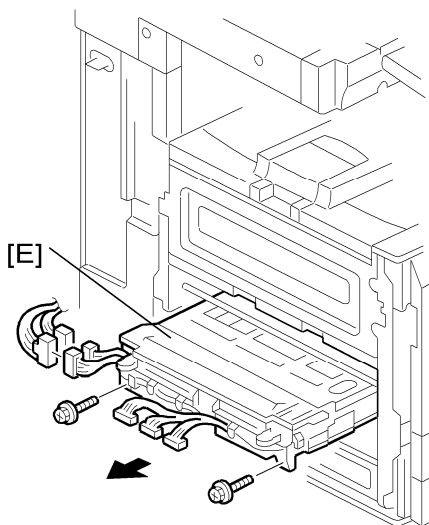


5. Remove the old laser optics housing unit [E] (🔩 x 2, 📏 x 2)

## Installing a new Laser Optics Housing Unit

### Note

- A new laser optics housing unit has a bracket to protect the LD units. When you replace the laser optics housing unit, use caution.

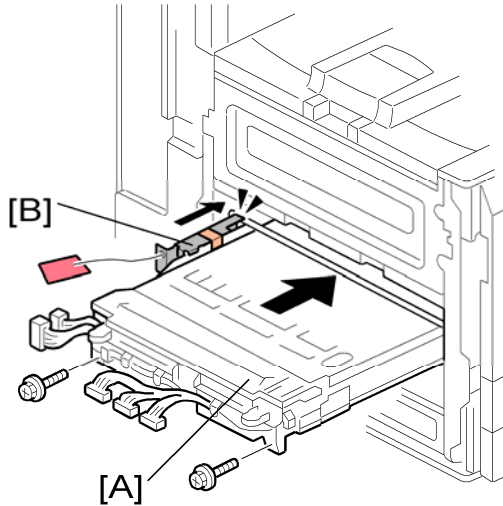

Replacement Adjustment

- Push the new laser optics housing unit [A] slowly into the copier until the bracket [B] bumps against the frame of the copier.
- Remove the bracket [B], and then push the new laser optics housing unit fully into the copier (🔧 x 2, All x 🖨️).
- Reassemble the machine.

### After installing the new laser optics housing unit

Do the following adjustment after installing the new laser optics housing unit.

- Plug in and turn on the main power switch.

| Input data for SP modes             |                          |
|-------------------------------------|--------------------------|
| Main Scan Length Detection Disp. Bk | SP 2-185-001: 247975 [A] |
| Color Registration Correction Bk    | SP 2-101-001: -031 [B]   |

- Adjust the main scan magnification only for black (Bk).
  - Input the standard value [A] provided with a new laser optics housing unit for the

main scan magnification adjustment with SP2-185-001.

↓ Note




- The value [A] is different for each laser optics housing unit.
2. Print the test pattern (14: 1-dot trimming pattern in the SP2-109-003).
  3. Check that the left and right trim margin is within  $4 \pm 1$  mm. If not, change the standard value for the main scan magnification adjustment.
- 3. Adjust the main scan registration only for the black (Bk).**
1. Input the registration value [B] provided with a new laser optics housing unit for the main scan registration adjustment with SP2101-001.

↓ Note

- The value [B] is different for each laser optics housing unit.
2. Print the test pattern (14: 1-dot trimming pattern in the SP2-109-003).
  3. Check that the left trim margin is within  $2 \pm 1$  mm. If not, change the registration value for the main scan registration adjustment.
- 4. Select "0" with SP2-109-003 after printing the "1-dot trimming pattern.**
- 5. Do the line position adjustment.**
1. First do SP2-111-3.
  2. Then do SP2-111-1.
- To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.


- 6. Exit the SP mode.**

### 3.6.3 POLYGON MIRROR MOTOR

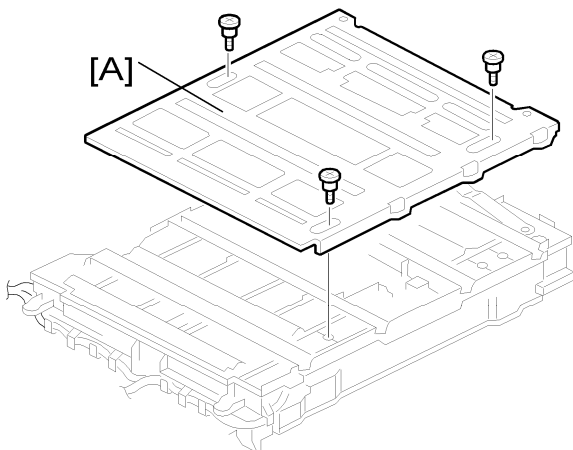

1. Laser optics housing unit (🔧 "Laser Optics Housing Unit")
2. Shutter [A] of the laser housing optics unit (🔧 x 3)



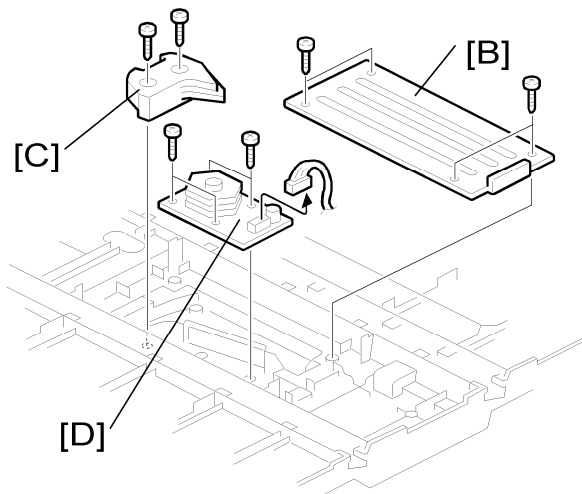

3. Polygon mirror motor cover [B] of the laser optics housing unit (🔩 x 4)
4. Polygon mirror motor holder [C] (🔩 x 2)
5. Polygon mirror motor [D] (🔩 x 4, 📡 x 1)

After installing the laser optics housing unit:

1. Do the "Forced Line Position Adj. Mode c" (SP2-111-3).
2. Then do the "Forced Line Position Adj. Mode a" (SP2-111-1).

To check if SP 2-111-1 was successful, watch the screen during the process. A message is displayed at the end. Also, you can check the result with SP 2-194-10 to -12.


- ⇒ 6. After you replace the housing unit, do the adjustments in the following section of the manual: Image Adjustment – Registration.

## 3.7 IMAGE CREATION


### 3.7.1 PCU

**Note**

- Do not touch the OPC drum. Do not let metal objects touch the development sleeve.

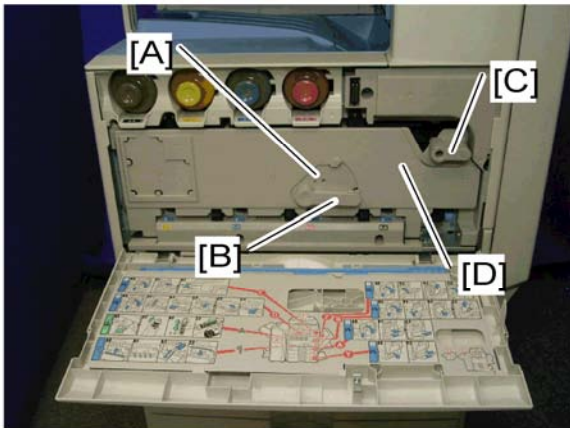

1. Open the front door.
2. Lever lock [A] (⚙️ x 1)
3. Turn the release lever [B] and the image transfer unit contact lever [C] counter-clockwise.
4. Open the drum positioning plate [D].

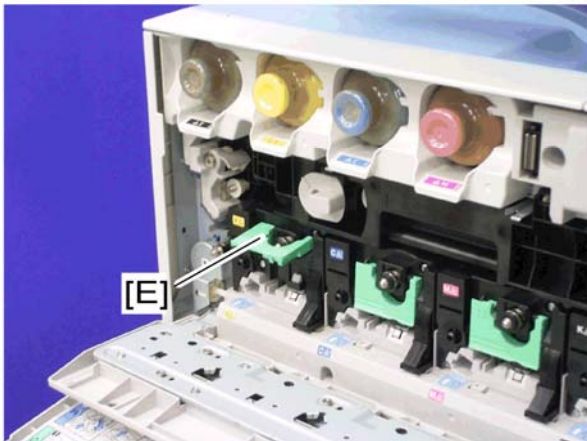

5. Pull out the PCU (hold the grip while you pull it out) [E].

### 3.7.2 DRUM UNIT AND DEVELOPMENT UNIT

The new drum unit has a front cover and a front joint. When you attach the new drum unit to the development unit, remove a front cover and a front joint at first.

And use them for reassembling the new drum unit and development unit.

**1. If you install a new drum unit, set SP 3902-xxx to "1".**

Black: 3902-009


Yellow: 3902-010

Cyan: 3902-011

Magenta: 3902-012

↓ Note


- If you do this, then the machine will reset the PM counter for the drum unit automatically, after you turn the power on again.

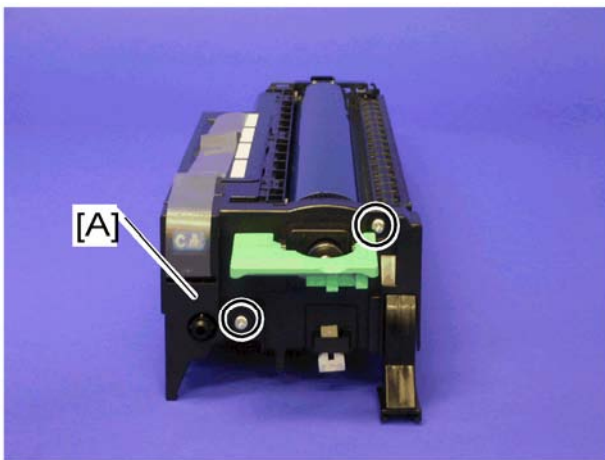

**2. Turn the machine power off.**

**3. PCU (PCU)**

**4. Front cover [A] (x 2)**

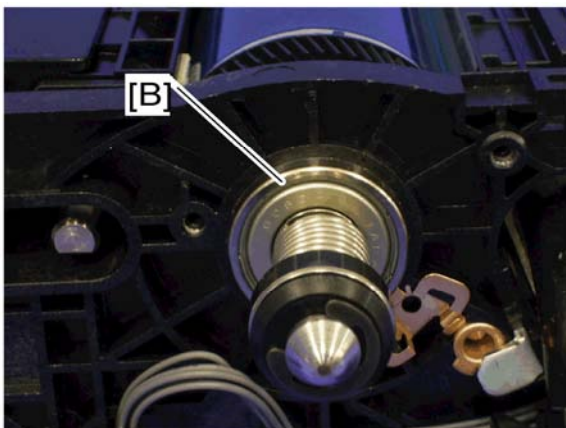


↓ Note

- Do not touch the bearing [B] after removing the front cover. The bearing is properly applied with lubricant.



Note: Remove the toner duct [G] first to avoid breaking it during this procedure.


5. Remove the bushing [C] of the development roller at the rear of the PCU (C x 1).

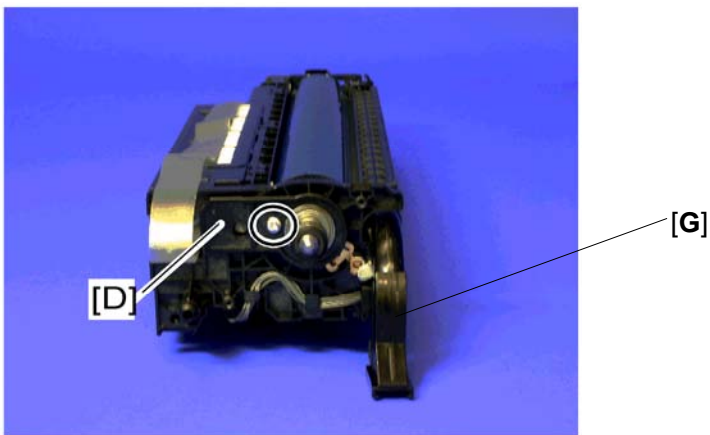

6. Remove the front joint [D] (⚙ x 1, ⚙ x 1).

↓ Note

- The front joint [D] is firmly set. Remove it with a watchmaker's or jeweller's screwdriver.

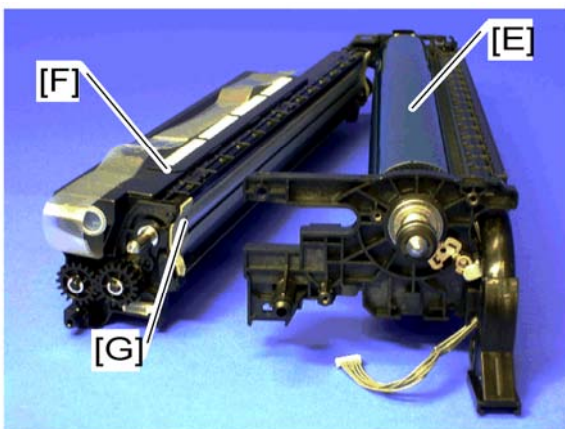


7. Drum unit [E] and Development Unit [F]

↓ Note

- When the development unit is removed from the drum unit, clean the entrance mylar [G] with a vacuum.

8. If you change the development unit, do the ACC procedure.

### Developer

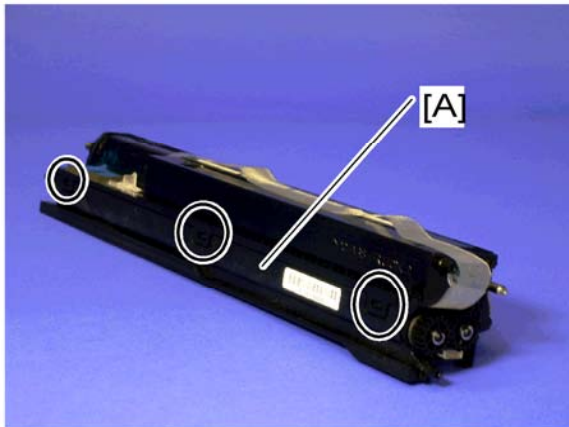

Replacement  
Adjustment

1. Set SP 3902-xxx to "1".  
Black: 3902-005  
Yellow: 3902-006  
Cyan: 3902-007  
Magenta: 3902-008
2. Turn the machine power off.
3. Development unit (☛ "Drum Unit and Development Unit")
4. Hopper cover [A] (hook x 3)



5. Shake a bag of developer and pour it into the development hopper [B].
6. Reattach the hopper cover (hook x 3)
7. Turn the machine power on. The machine initializes the developer and resets the

PM counter for the developer. (For details of the developer initialization result, see "Developer Initialization Result" in the "Troubleshooting" chapter.)


8. Do the ACC procedure.

### 3.7.3 TONER COLLECTION BOTTLE

If you will install a new bottle, and the old bottle is not in a full or near-full condition, then set SP 3902-017 to 1.

#### ↓ Note

- If you do this, then the machine will reset the PM counter for the bottle automatically, after you turn the power on again.
- If the bottle is in a full or near-full condition, it is not necessary to do this.

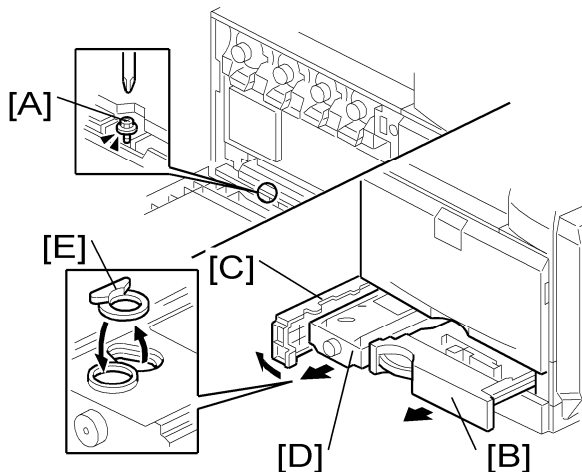


1. Turn off the main power switch.
2. Open the front door and remove the screw [A].
3. Close the front door.
4. Pull out tray 1 [B].
5. Open the toner collection bottle door [C].
6. Pull out the toner collection bottle [D].

#### ↓ Note

- Remove the cap [E], and then attach the cap on the opening of the toner collection bottle before taking it out.

### 3.7.4 TONER SUPPLY TUBE FAN

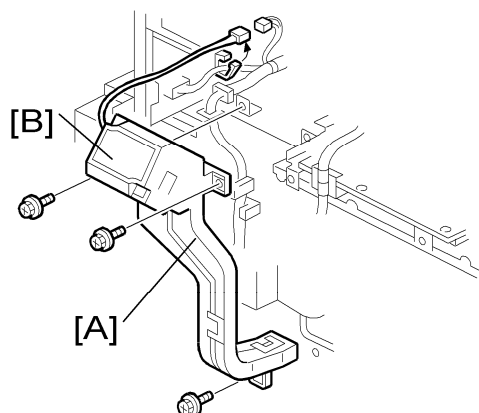

1. Rear cover (🖨️ "Rear Cover")
2. High voltage supply board bracket (🖨️ "High Voltage Supply Board Bracket")
3. Toner supply tube fan duct [A] (🔧 x 3, 📄 x 1, 🖨️ x 1)
4. Split the fan duct (4 hooks).
5. Toner supply tube fan [B]

#### ***When reinstalling the toner supply tube fan***


Make sure that the toner supply tube fan is installed with its decal facing to the rear of the machine.

### 3.7.5 TONER PUMP UNIT

There are four pump units inside the machine. This procedure describes the replacement procedure only for one unit. If you need to replace another unit, do the same as this procedure.

#### 📄 Note


- Put some sheets of paper on the floor before doing this procedure. Toner may fall on the floor.

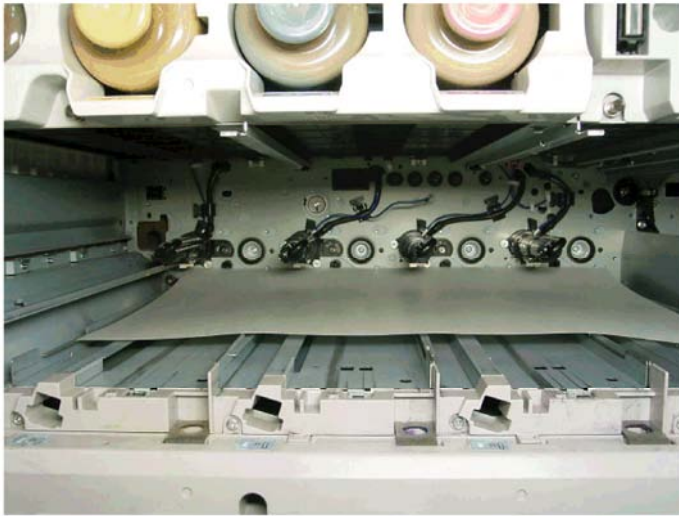

1. Front door (🔒 "Rear Cover")
2. Image transfer belt unit (🔒 "Image Transfer Belt")
3. All PCUs (🔒 "PCU")
4. Put a sheet of paper (A3/DLT) inside the machine as shown and on the floor.

↓ Note

- The sheet of paper on the floor is used in a later step.

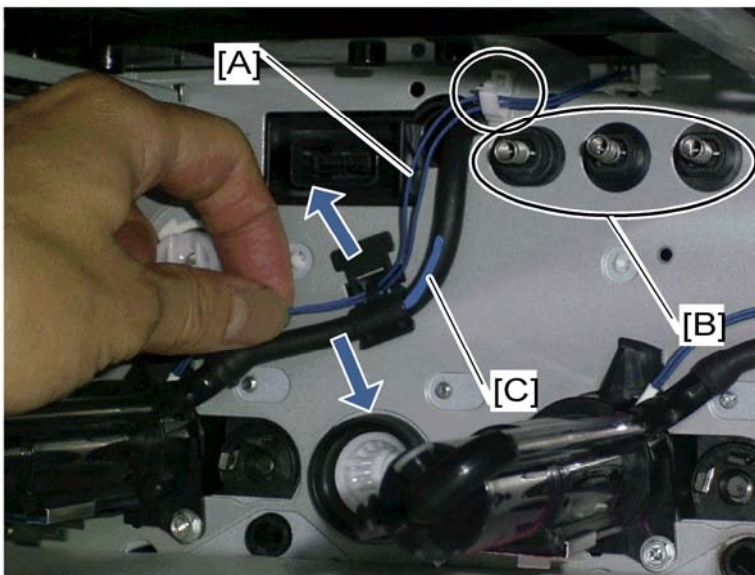


5. Release the harness [A] from the clamp (🔒 x 1 for YCM, 🔒 x 3 for K) and hook, and then disconnect the harness.

↓ Note

- Avoid touching these spring terminals [B].

6. Release the toner supply tube [C].




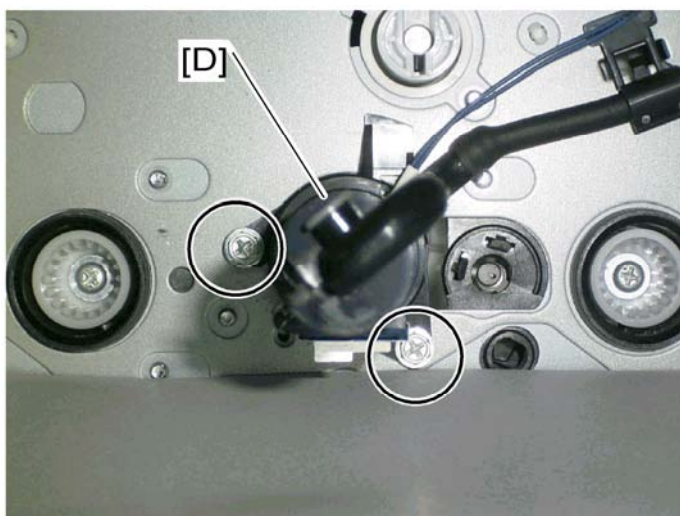

7. Remove the toner pump unit [D] (⚙ x 2)



Make sure that a sheet of paper is attached to the frame of the rear side and covers the four gears. The picture on the left shows a sheet of paper that is correctly set, but the picture on the right shows a sheet of paper that is not correctly set. This sheet of paper prevents toner and screws from falling into the laser optics housing unit through cutouts.

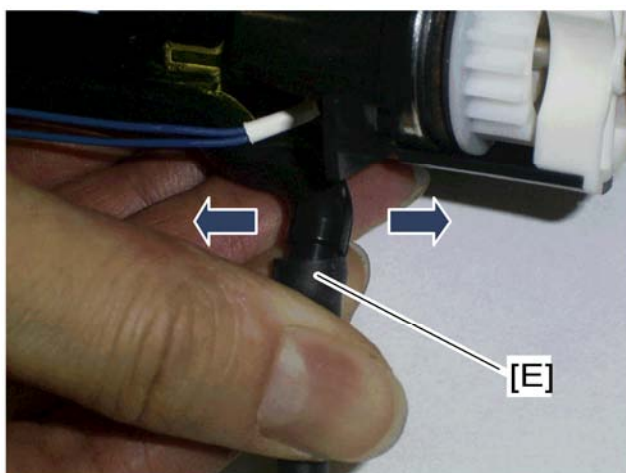


8. Slowly remove the toner supply tube [E] from the toner pump unit by pulling the

tube right and left.


9. Turn up the openings of the toner pump unit and toner supply tube just after removing the tube.

↓ Note

- If not, the toner may scatter away and fall down.

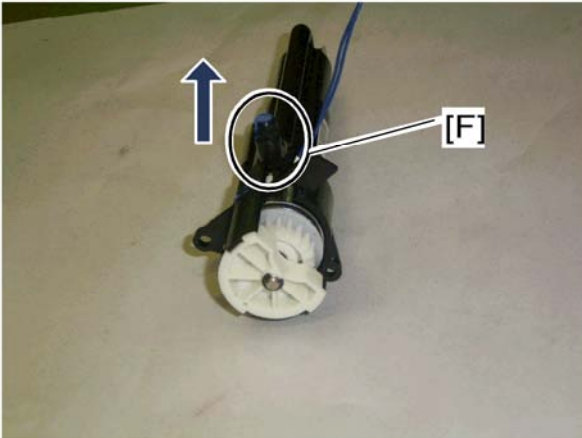


10. Put the toner pump unit on the sheet of paper, which has been put in step 4, with its opening [F] up.

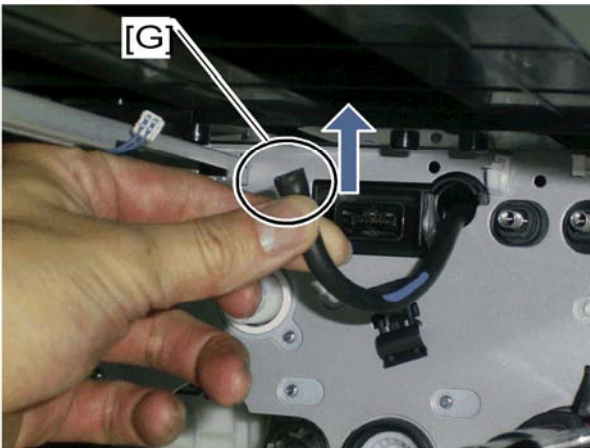


11. Keep the opening [G] of the toner supply tube up, and then clip the opening of the toner supply.

### ***When you install the new toner pump unit***

Before installing the new toner pump unit, mask the opening of the old toner pump unit with tape. Dispose of it following local rules.

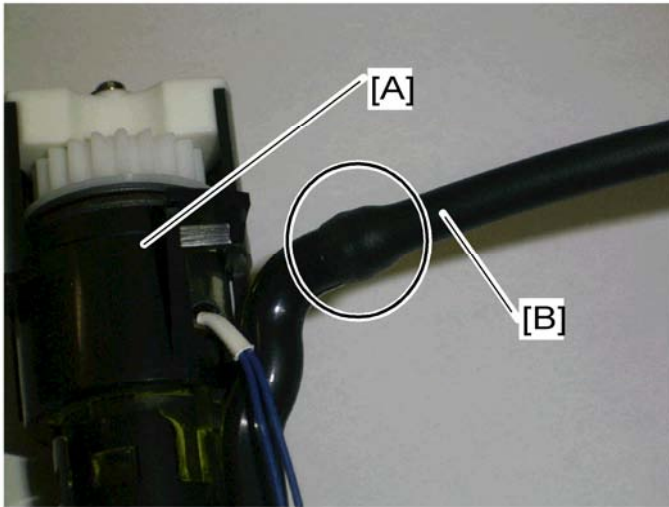

1. Put a sheet of paper (A3/DLT) inside the machine.
2. Turn up the opening of the toner supply tube, and then remove the object that was used to clip the opening of the toner supply tube.
3. Insert the opening of the toner pump unit [A] into the opening of the toner supply tube [B] as far as possible.

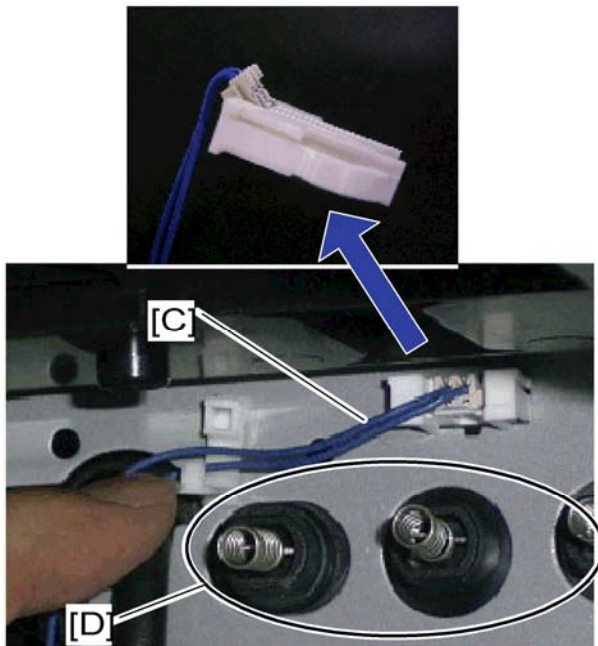

4. Connect the harness [C] to the connector of the machine.


↓ Note

- On the above picture, the magnified picture of the connector shows the easiest way to connect it.

5. Clamp the harness [C] (🖨️ x 1 for YCM, 🖨️ x 3 for K).

↓ Note


- Avoid touching these spring terminals [D].

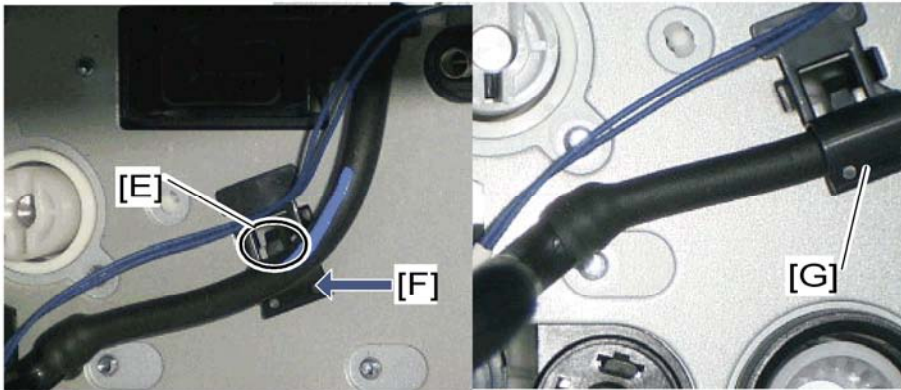

6. Pass the harness of the toner pump unit behind the hook [E], while pressing at [F].
7. Secure the toner supply tube with the holder [G], lifting up the edge of the holder "very gently".


↓ Note

- Be careful when you lift the edge of the holder, because the holder is easily broken.

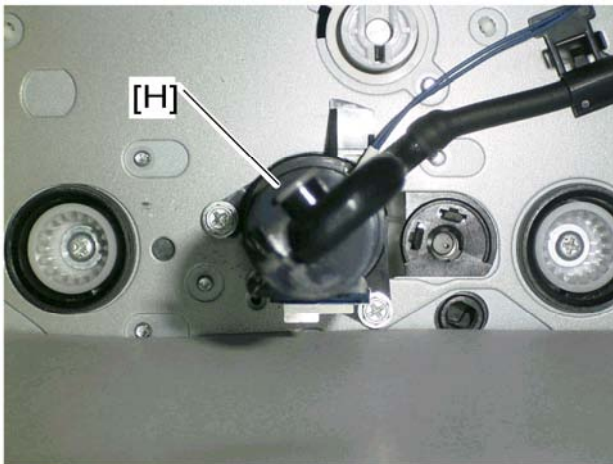

8. Insert the toner pump unit [H] into the rear frame of the machine (🔧 x 2).


### 3.7.6 TONER END SENSOR

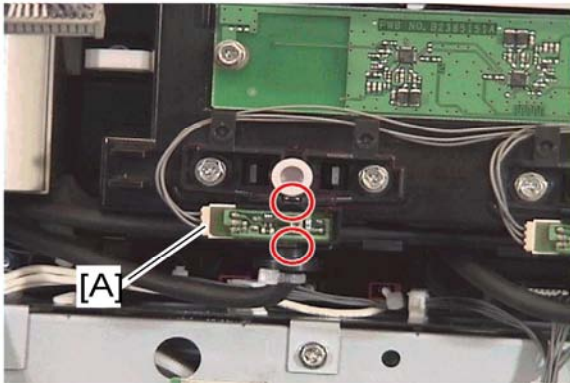


1. Rear cover (🔧 "Rear Cover")
2. Controller box (🔧 "Controller Box")
3. Toner end sensor [A] (🔧 x 1, 2 hooks each)

## 3.8 IMAGE TRANSFER

### 3.8.1 IMAGE TRANSFER BELT UNIT

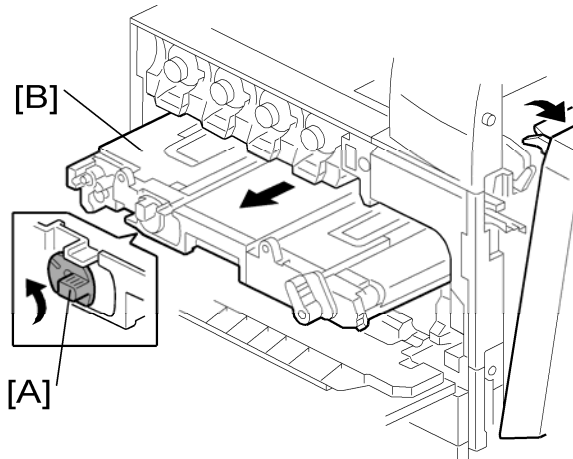


1. Open the right door.
2. Open the front door
3. Open the drum positioning plate. (PCU)
4. Turn the image transfer belt unit lock lever [A] counterclockwise.
5. Pull out the image transfer belt unit [B] halfway.

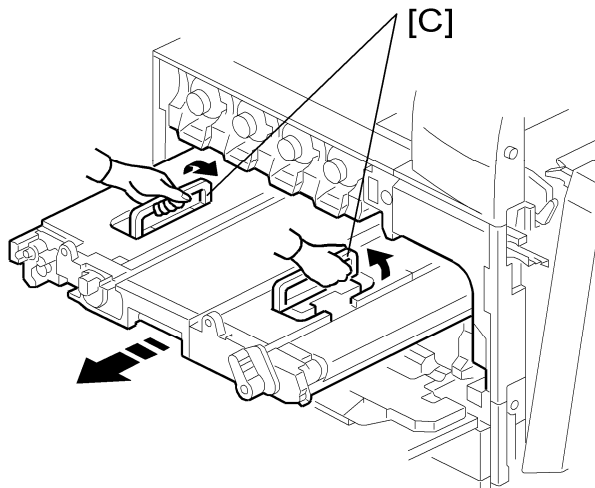

6. Grasp the handles [C], and then pull out the image transfer belt unit fully.

## 3.8.2 IMAGE TRANSFER BELT CLEANING UNIT

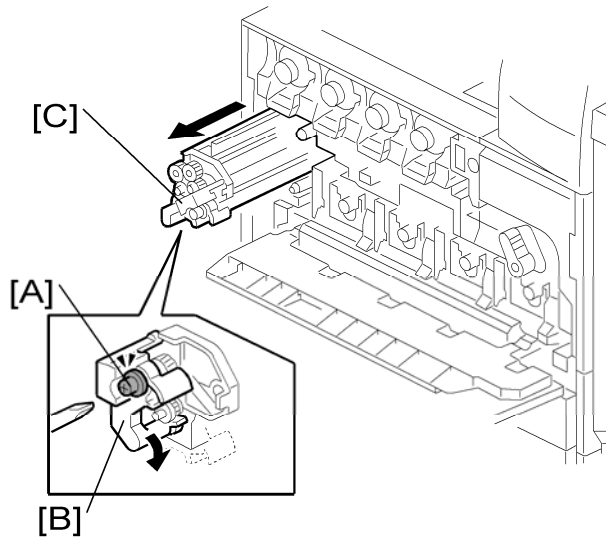

1. If you will install a new belt cleaning unit, then set SP 3902-015 to 1.


**Note**

- If you do this, then the machine will reset the PM counter for the belt cleaning unit automatically, after you turn the power on again.


Do not use SP3902-015 or 013 if you replace the complete ITB unit.

2. Turn off the main power switch.
3. Open the right door.
4. Open the front door
5. Open the drum positioning plate. (PCU)
6. Loosen the screw [A].
7. Turn the lock lever [B] clockwise
8. Pull out the image transfer belt cleaning unit [C].

### 3.8.3 IMAGE TRANSFER BELT

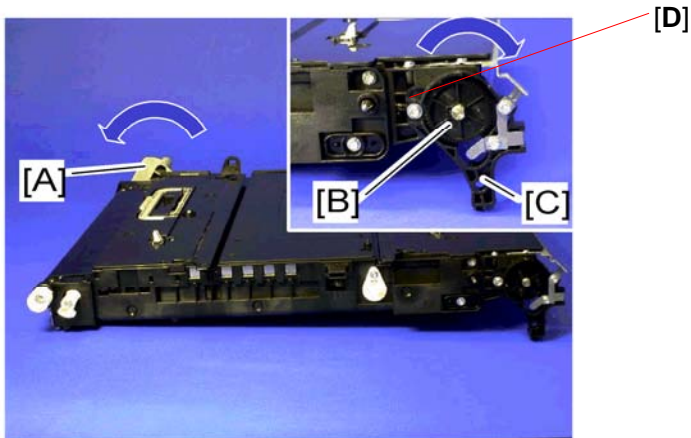


1. Image transfer belt cleaning unit (Image Transfer Belt Cleaning Unit)
2. Image transfer belt unit (PCU)
3. Turn the image transfer unit contact lever [A] counterclockwise (as seen from the rear).
4. Gear [B] (hook x 1)
5. Turn the gear cover [C] clockwise (as seen from the rear) (x 1) [D].

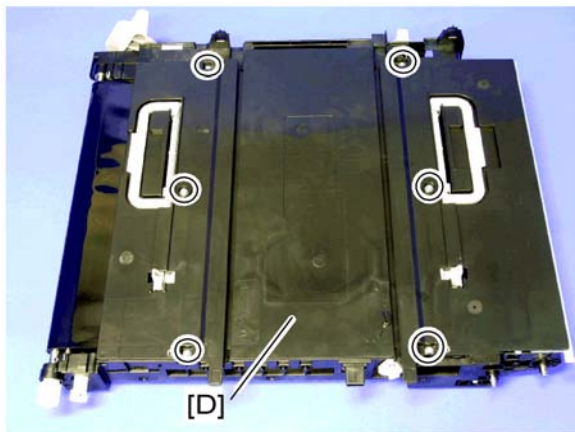


6. Image transfer belt unit top cover [D] (x 6).



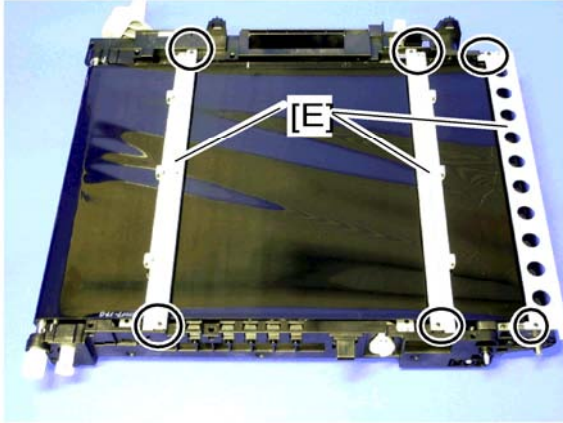


7. Three stays [E] (🔩 x 6)

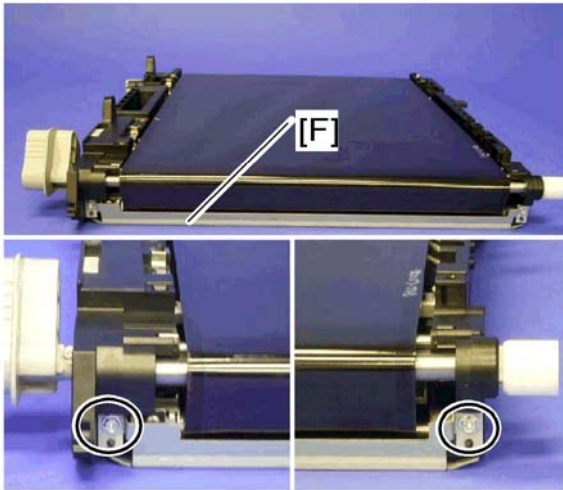

8. Guide plate [F] (as seen from the right side of the machine) (🔩 x 2)




9. Remove the two screws and then rear hold bracket [G] (as seen from the rear).

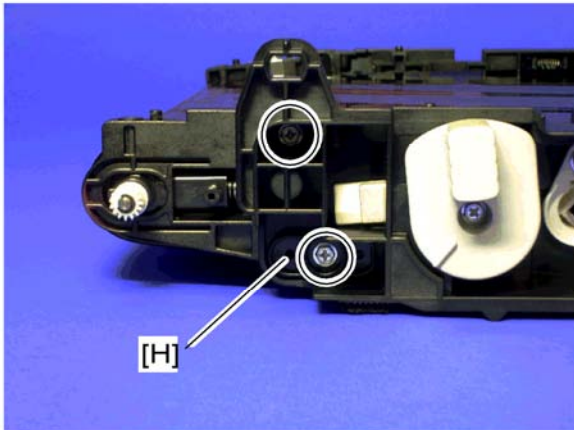

10. Remove the two screws and then front hold bracket [H] (as seen from the front).



11. Put the front side of the image transfer belt unit on a corner of the table or a box as shown.

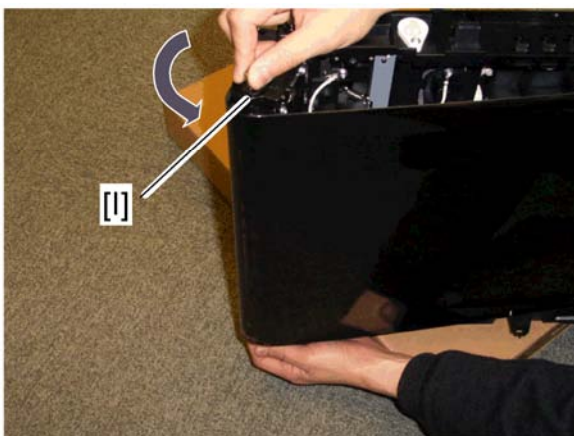


12. Pull the tension roller [I] as shown.



13. Image transfer belt [J]

**When reinstalling the image transfer belt**

- Clean all rollers with dry cloth before installing the image transfer belt.

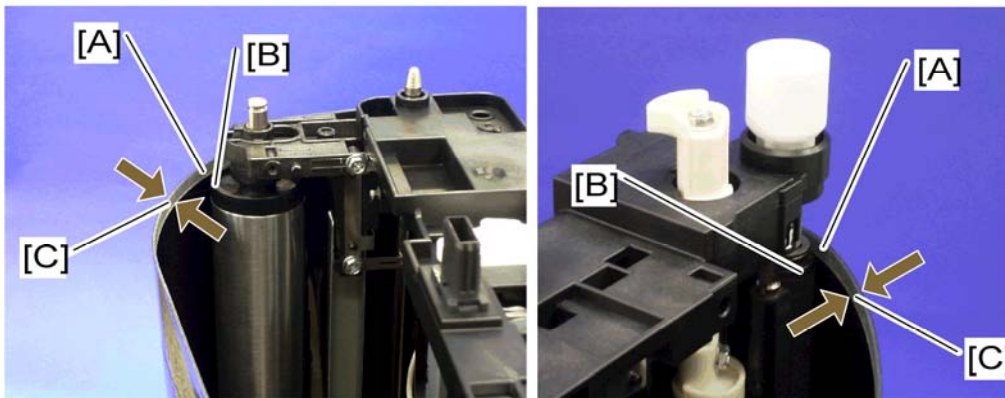


- Make sure that the tape [A] inside the front or rear edge of the image transfer belt catches the rim [B] of the tension roller or image transfer belt drive roller.

- ⇒
- There is a rim at each edge of the transfer belt. All the rollers in the transfer belt unit must be between the two rims.


↓ Note

- Two tapes (width [C]: about 5 mm) are attached inside the front and rear edge of the image transfer belt.

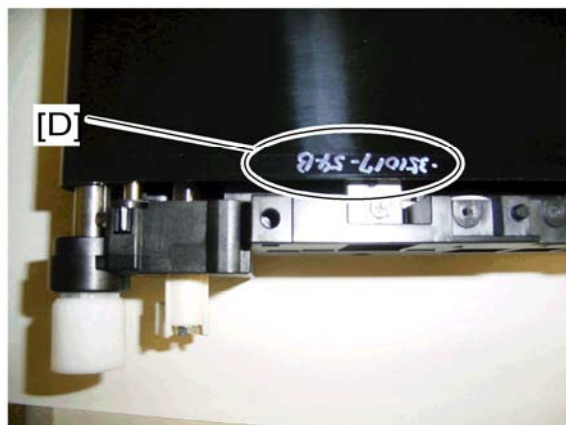

Replacement Adjustment

- This belt must be installed the correct way around. When you reinstall the image transfer belt unit, install it with the painted number [D] on the belt at the rear side of the unit.

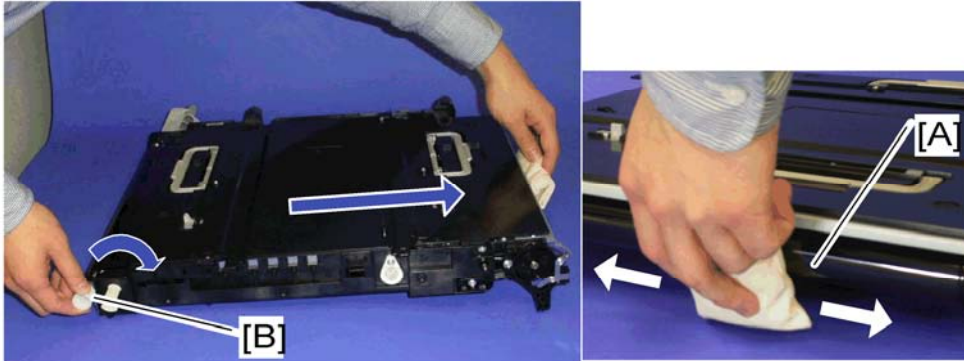

- Put "Lubricant Powder" (B132 9700) on the surface of the image transfer belt [A], while you turn the drive gear [B] at a constant speed, as shown. (The straight arrow in the picture shows belt movement direction.) Lubricant powder prevents the image transfer cleaning blade from turning up.

↓ Note

- Do not put the lubricant powder at the right side of the image transfer belt unit (the above picture is taken from the rear). Otherwise, lubricant powder may damage the encoder sensor.


## 3.9 PAPER TRANSFER

### 3.9.1 PAPER TRANSFER ROLLER UNIT

If you will install a new paper transfer unit, then set SP 3902-016 to 1.

↓ Note

- If you do this, then the machine will reset the PM counter for the paper transfer unit automatically, after you turn the power on again.

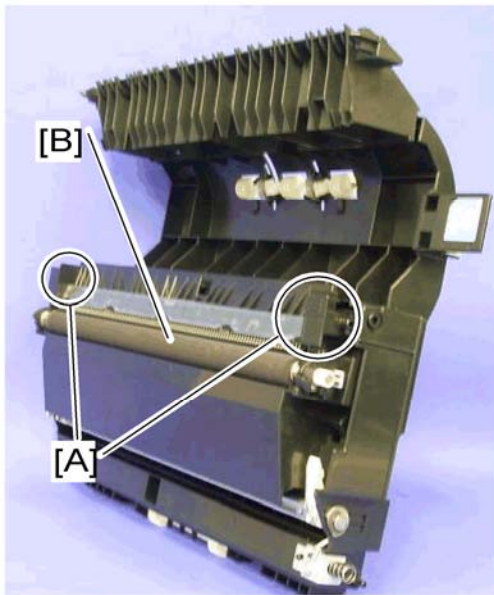

1. Open the right door.
2. Release the two locks [A].
3. Paper transfer roller unit [B]


### 3.9.2 PAPER TRANSFER UNIT

If you will install a new paper transfer unit, then set SP 3902-016 to 1.


↓ Note

- If you do this, then the machine will reset the PM counter for the paper transfer unit automatically, after you turn the power on again.


1. Turn off the main power switch.

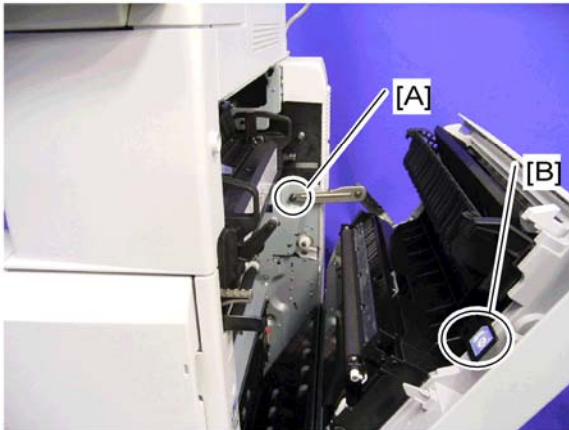


2. Open the right door.
3. Remove the clip ring [A].
4. Move the vertical transport unit to the left side with lever "Z" [B].

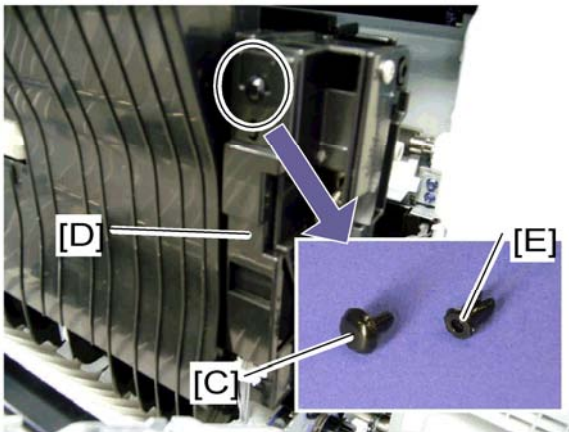

5. Remove the pin [C], and then remove the harness cover [D].
6. You do not need to remove the pin bushing [E] from the harness cover.

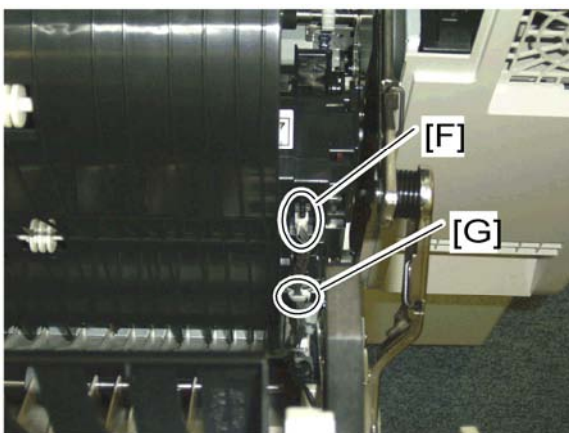

7. Disconnect the connector [F] and release the clamp [G].

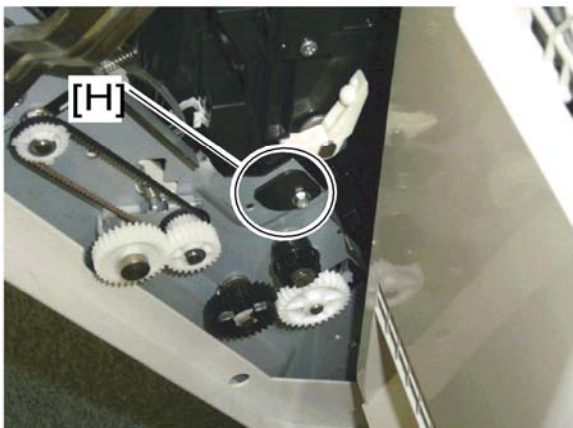


8. Remove the bushing [H] (🔧 x 1).



9. Slide up the paper transfer unit [I], and then remove it.

### 3.9.3 ID SENSOR BOARD

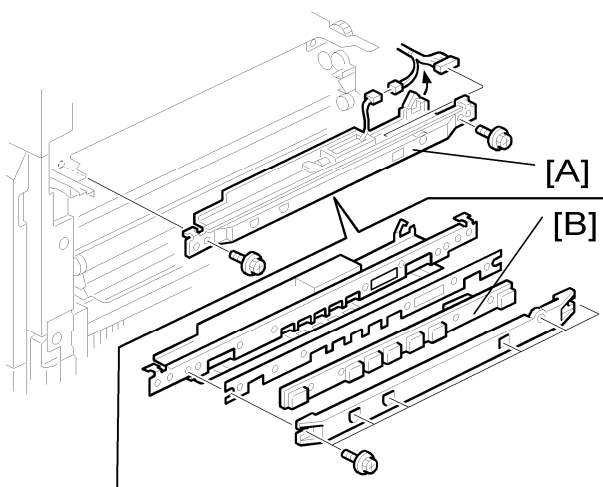


1. K PCU (🔧 "PCU")
2. Rear cover (🔧 "Rear Cover")

3. Right rear cover (🔧 "Right Rear Cover")
4. Duplex unit (🔧 "Duplex Unit")
5. Fusing unit (🔧 "Fusing Unit")
6. Image transfer belt unit (🔧 "Image Transfer Belt Unit")
7. ID sensor unit [A] (🔧 x 2, 📄 x 2, 🖨️ x 1)
8. ID sensor board [B] (🔧 x 6)

### ***Cleaning for ID sensors***

ID sensors require a cleaning procedure every 320K. Do the following steps for ID sensor cleaning.

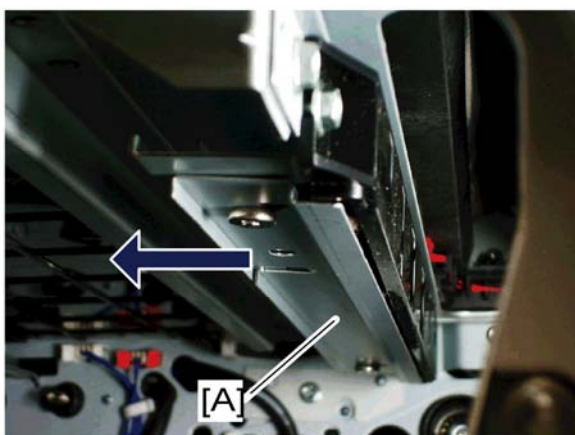

1. K PCU (🔧 "PCU")
2. Fusing unit (🔧 "Fusing Unit")
3. Image transfer belt unit (🔧 "Image Transfer Belt Unit")
4. Slide the ID sensor shutter [A] to the left side.
5. Clean the ID sensors keeping the ID sensor shutter to the left.

### ***After installing a new ID sensor unit/board***

Do the following adjustment after installing a new ID sensor unit/board.


1. Plug in and turn on the main power switch of the copier.
2. Enter the SP mode.
3. Input all correction coefficients [A] for the ID sensor with the SP modes referring to the barcode sheet provided with the new ID sensor unit/board.

#### **↓ Note**

- For example, input "1.00" with SP3-362-013.


4. Exit the SP mode.



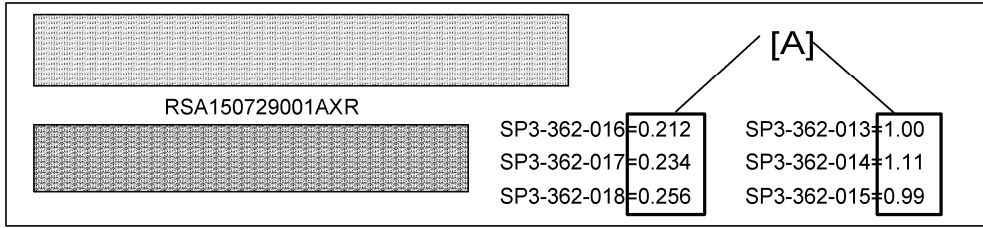

Replacement  
Adjustment

### 3.10 DRIVE UNIT

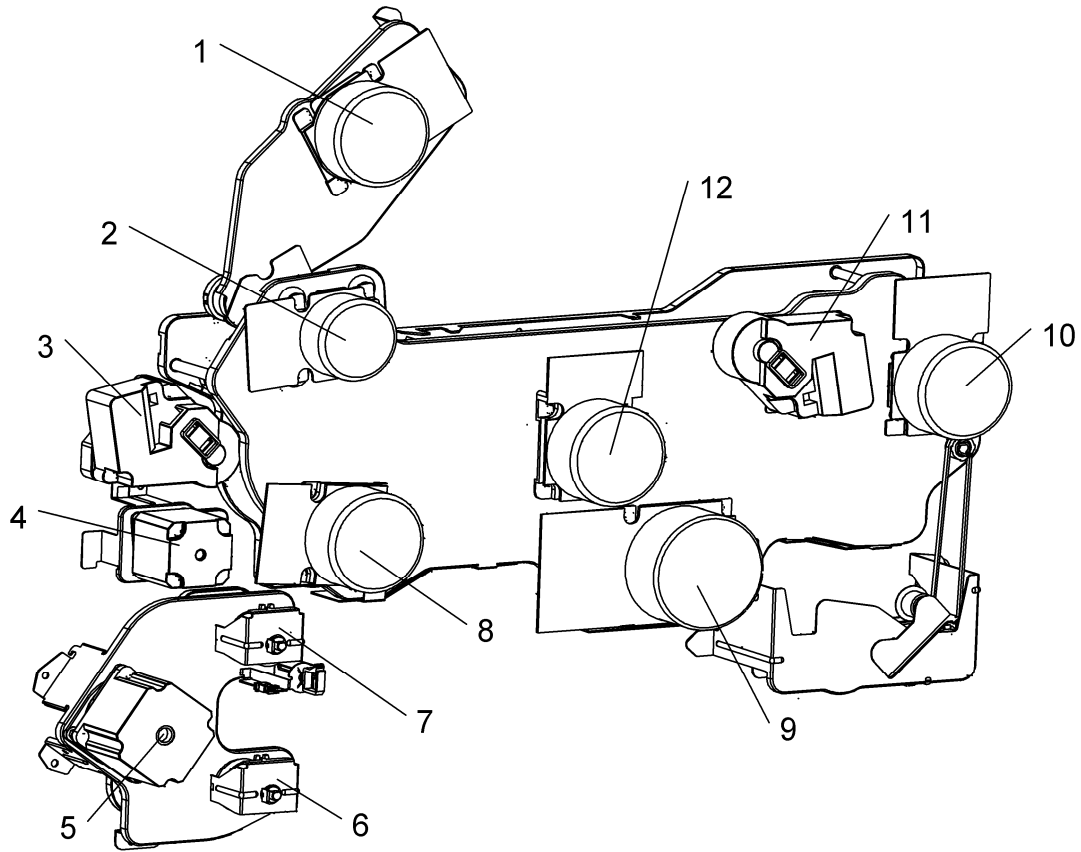


The drawing above shows the drive unit layout.

|  |  |
|--|--|
| <ul style="list-style-type: none"> <li>1. Fusing/paper exit motor</li> <li>2. ITB drive motor</li> <li>3. Paper transfer contact motor</li> <li>4. Registration motor</li> <li>5. Paper feed motor</li> <li>6. Paper feed clutch – Tray 2</li> </ul> | <ul style="list-style-type: none"> <li>7. Paper feed clutch – Tray 1</li> <li>8. Drum/Development drive motor-K</li> <li>9. Development drive motor-CMY</li> <li>10. Toner transport motor</li> <li>11. Image transfer belt contact motor</li> <li>12. Drum drive motor-CMY</li> </ul> |
|--|--|

There are some motors and clutches, which are not shown in the above drawing:


|  |   |
|--|---|
| <ul style="list-style-type: none"> <li>▪ Tray lift motor 1 and 2</li> <li>▪ Duplex inverter motor</li> <li>▪ Duplex/By-pass Motor</li> </ul> | <ul style="list-style-type: none"> <li>▪ Shutter motor</li> <li>▪ Development clutch</li> </ul> |
|--|---|

### 3.10.1 DRIVE UNIT FAN

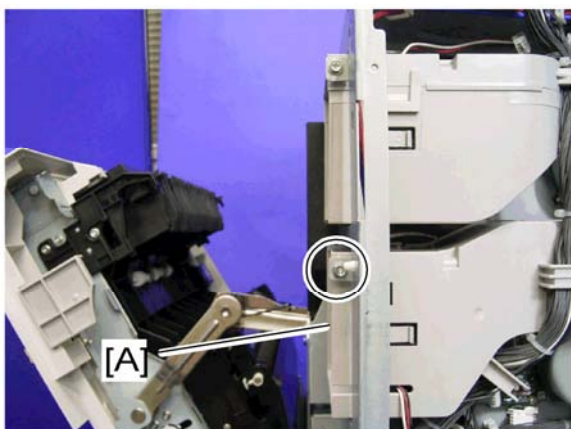

1. Rear cover (🔧 "Rear Cover")
2. Right rear cover (🔧 "Right Rear Cover")
3. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
4. Remove the drive unit fan [A] (🔧 x 1, 🛠️ x 1, hook x 2)

*When installing the drive unit fan*

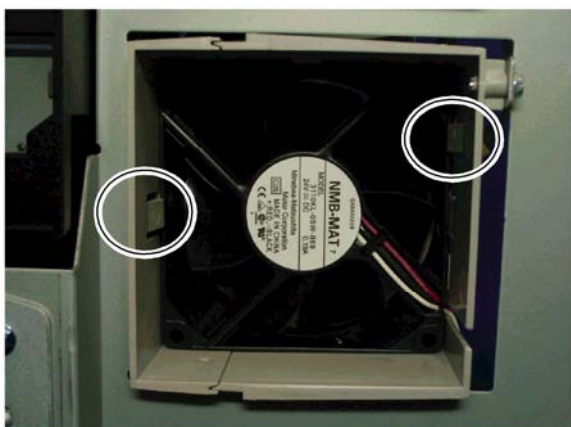


Make sure that the drive unit fan is installed with its decal facing to the right side.

### 3.10.2 GEAR UNIT


↓ Note

- Do not remove the drum motor-MCY from the gear unit. It is not easy in the field to adjust the gear position between the drum motor MCY and the gear unit.


1. Rear cover (🔧 "Rear Cover")
2. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
3. Controller box (🔧 "Controller Box")
4. Toner supply tube fan duct (🔧 "Toner Supply Tube Fan")

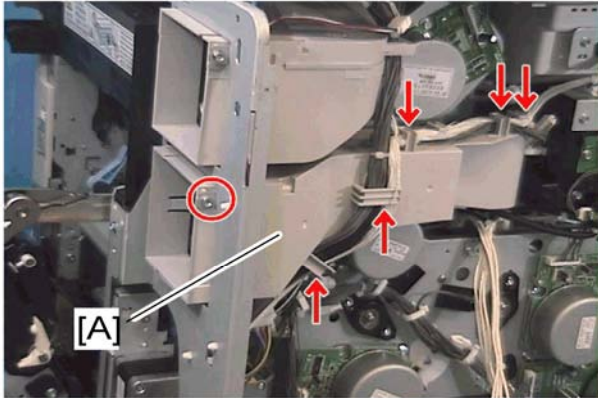


5. Release the four hooks of the duct from the frame.
6. Remove the drive unit fan duct [A] (🔧 x 1, 📏 x 1, 🛠️ x 1).
7. PSU bracket (🔧 "PSU")
8. IOB bracket (🔧 "IOB")
9. Drum/development motor-K (🔧 "Drum/Development Motor-K")
10. Image transfer belt contact motor (🔧 "Image Transfer Belt Contact Motor")
11. Toner transport motor (🔧 "Toner Transport Motor")
12. Open the front door and right door.
13. Open the drum positioning plate.
14. Pull the image transfer belt unit a little (🔧 "Image Transfer Belt Unit").
15. Pull the four PCUs a little (🔧 "PCU").

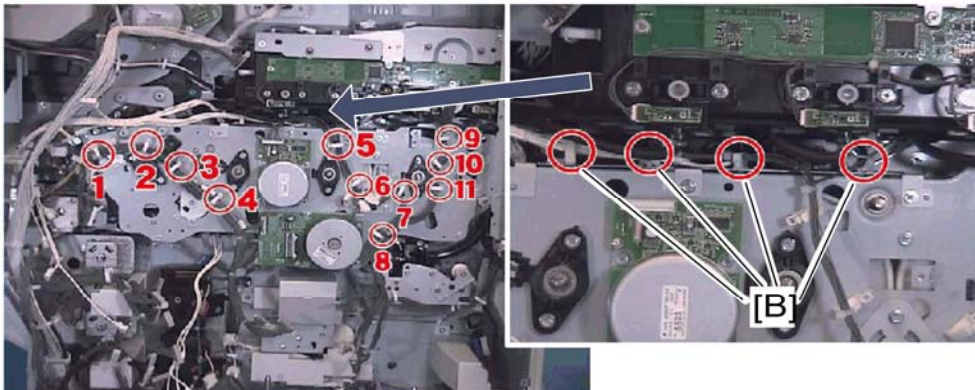

16. Release all the clamps on the rear side of the gear unit (🔧 x 11).
17. Release all the clamps [B] on the top of the gear unit (🔧 x 4).

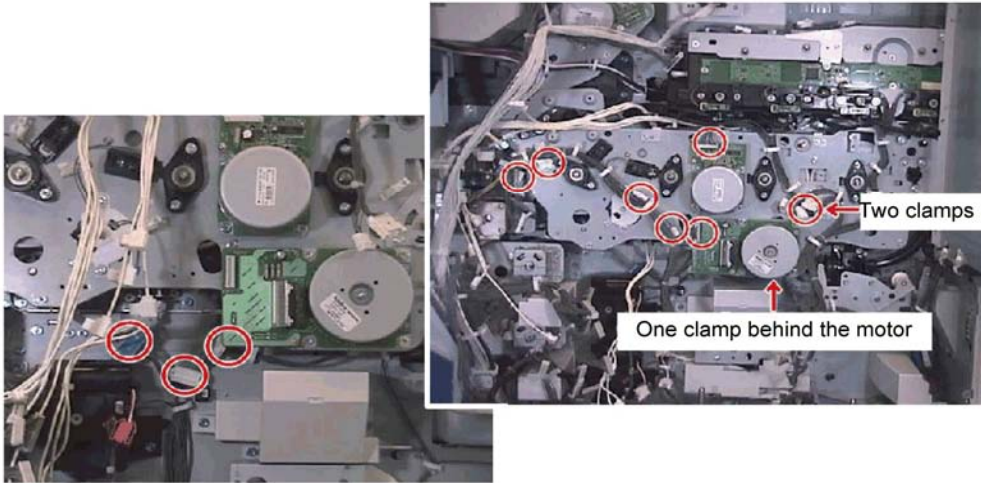


18. Disconnect all the connectors (🔌 x 12).

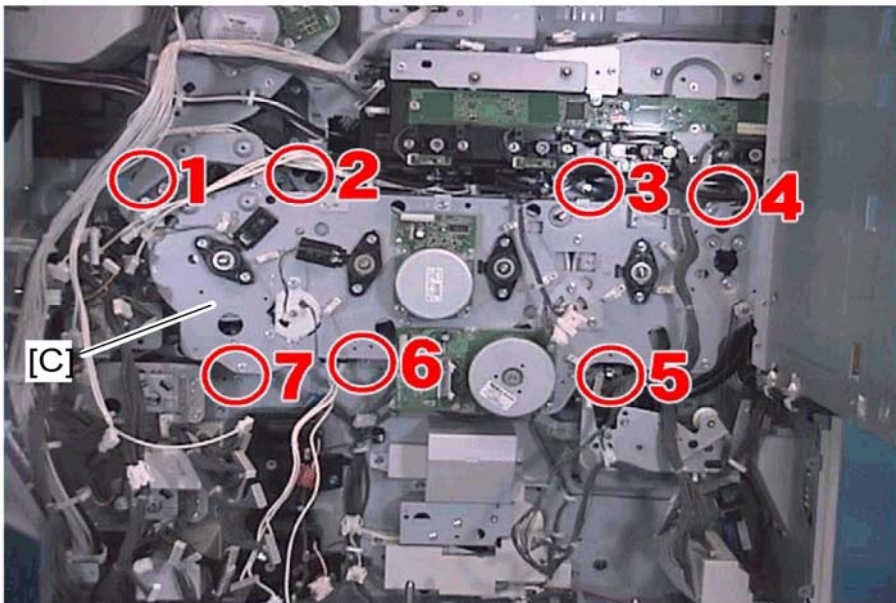


19. Gear unit [C] (🔧 x 7, timing belt x 1)

### 3.10.3 REGISTRATION MOTOR

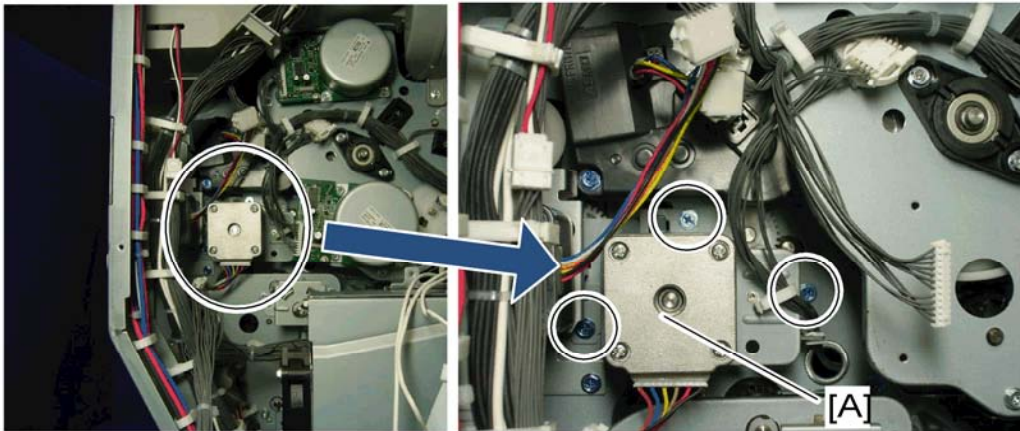


1. Rear cover (🔧 "Rear Cover")
2. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
3. Drum/development motor-K (🔧 "Drum/Development Motor-K")
4. Registration motor bracket [A] (🔧 x 3, 📏 x 1, 📏 x 2, timing belt x 1)
5. Remove the registration motor from the bracket (🔧 x 2).

### 3.10.4 PAPER FEED MOTOR

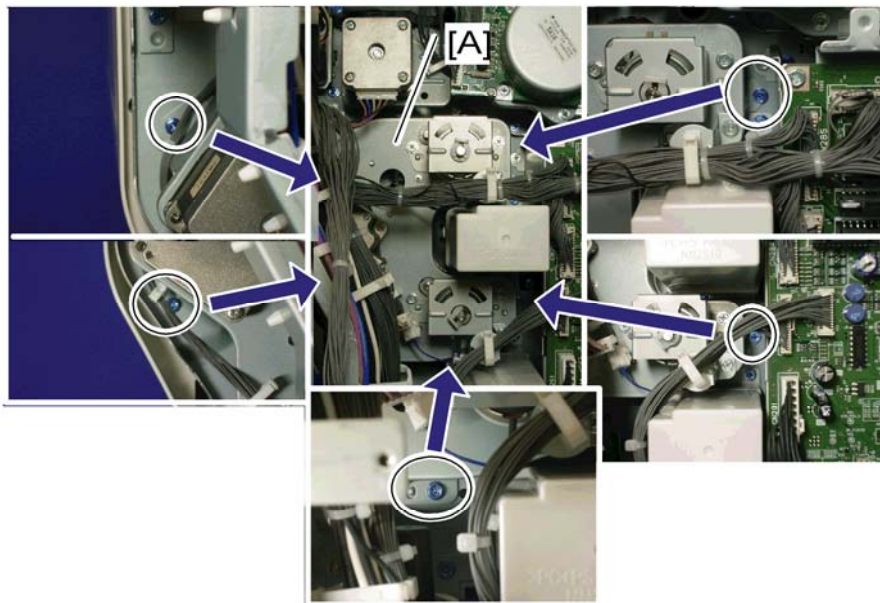


1. Rear cover (🔧 "Rear Cover")
2. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
3. PSU bracket (🔧 "PSU")
4. Right rear cover (🔧 "Right Rear Cover")
5. Paper feed clutch 1 and 2 (🔧 "Paper Feed Clutches")

6. Paper feed motor bracket [A] (🔩 x 5, 📏 x 1, 📏 x 3)

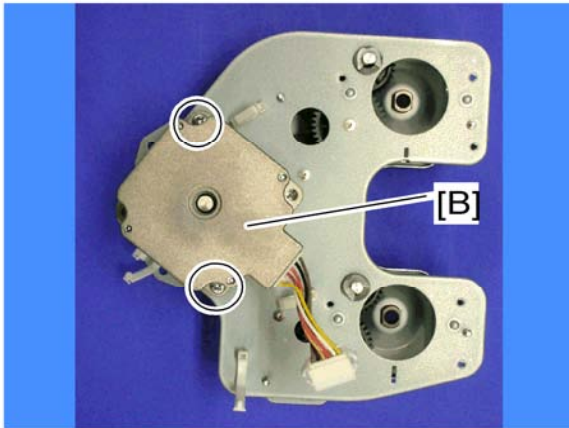


7. Paper feed motor [B] (🔩 x 2, timing belt x 1)

### 3.10.5 DRUM/DEVELOPMENT MOTOR-K

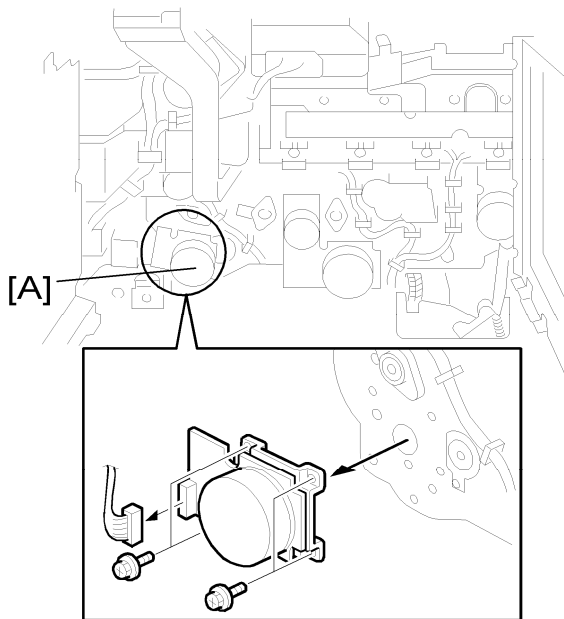


1. Rear cover (📏 "Rear Cover")
2. High voltage supply board bracket (📏 "High Voltage Supply Board Bracket")
3. Drum/Development motor-K [A] (🔩 x 4, 📏 x 1)

### 3.10.6 ITB DRIVE MOTOR

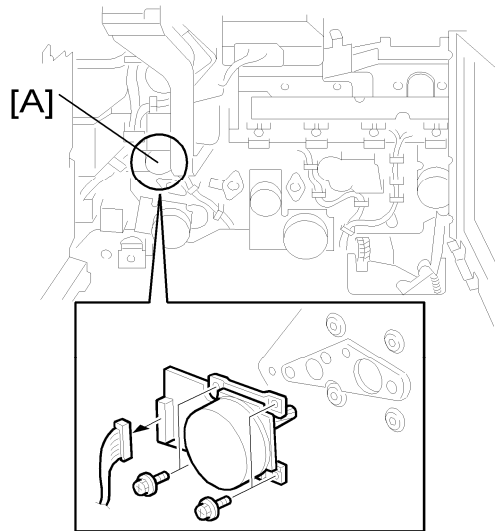

1. Rear cover (🔧 "Rear Cover")
2. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
3. ITB drive motor [A] (🔧 x 4, 📦 x 1)


### 3.10.7 FUSING/PAPER EXIT MOTOR

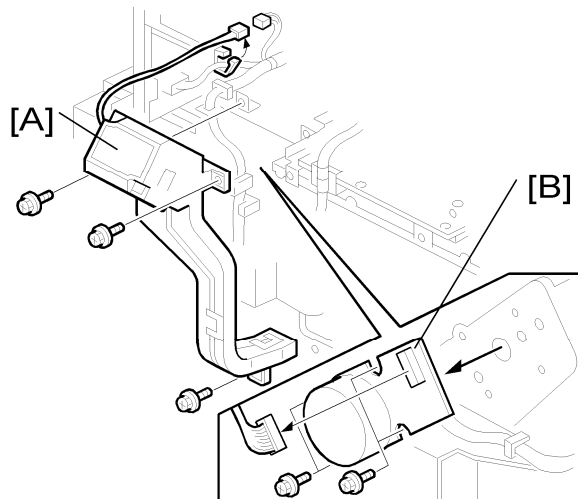

1. Rear cover (🔧 "Rear Cover")
2. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
3. Toner supply tube fan duct [A] (🔧 x 3, 📦 x 1, 📦 x 1)
4. Fusing/paper exit motor [B] (🔧 x 4, 📦 x 1)




### 3.10.8 IMAGE TRANSFER BELT CONTACT MOTOR

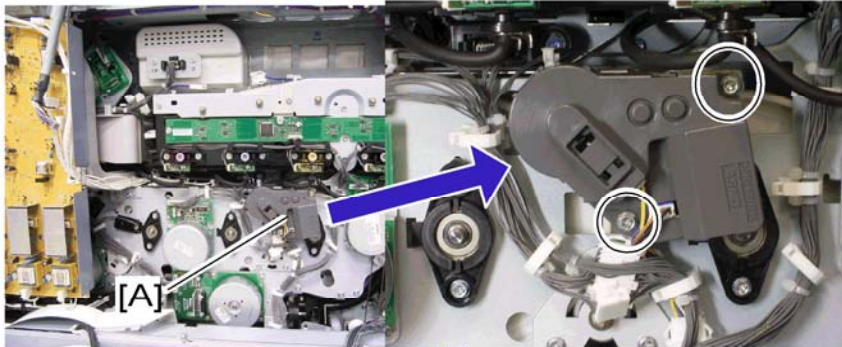


1. Rear cover (🔧 "Rear Cover")
2. Open the controller box. (🔧 "Controller Box")
3. Transfer belt contact motor [A] (🔧 x 2, 📏 x 1, 📏 x 1)

### 3.10.9 PAPER TRANSFER CONTACT MOTOR

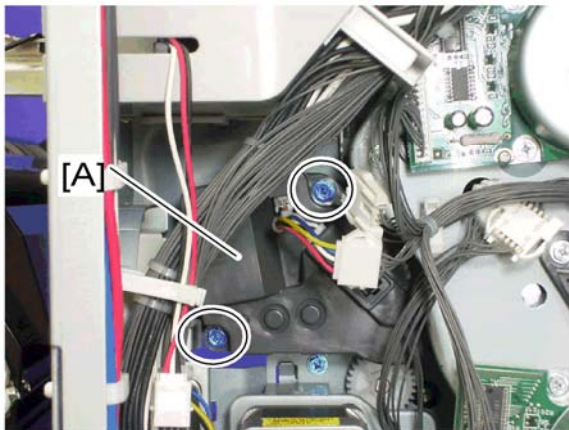


1. Rear cover (🔧 "Rear Cover")
2. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
3. Right rear cover (🔧 "Right Rear Cover")
4. Paper transfer contact motor [A] (🔧 x 2, 📏 x 1)

### 3.10.10 DUPLEX INVERTER MOTOR

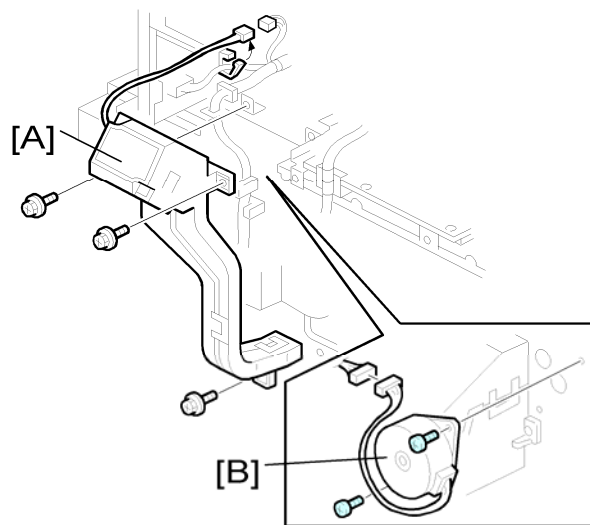


1. Rear cover (🔧 "Rear Cover")
2. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
3. Toner supply tube fan duct [A] (🔧 x 3, 📦 x 1, 📦 x 1)
4. Duplex inverter motor [B] (🔧 x 2, 📦 x 1, 📦 x 1)

### 3.10.11 TONER TRANSPORT MOTOR

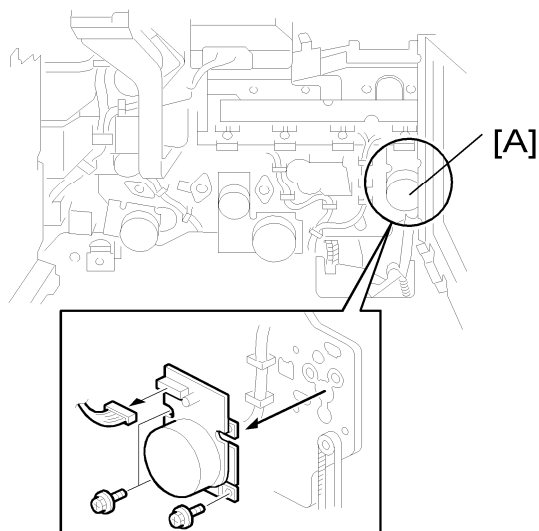


1. Rear cover (🔧 "Rear Cover")
2. Controller box (🔧 "Controller Box")
3. Toner transport motor [A] (🔧 x 3, 📦 x 1)

### 3.10.12 TONER COLLECTION UNIT

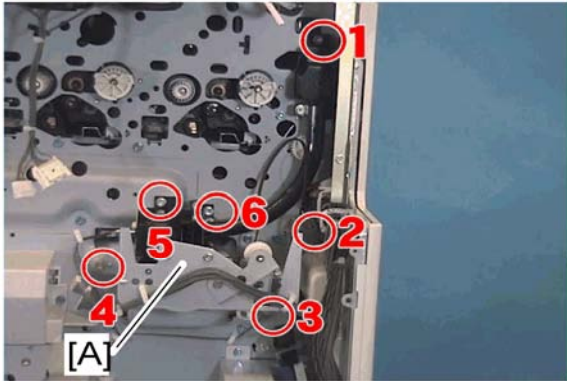


1. Gear unit (🔧 "Gear Unit")
2. Toner collection unit [A] (🔧 x 6, 📦 x 3)


### 3.10.13 PAPER FEED CLUTCHES

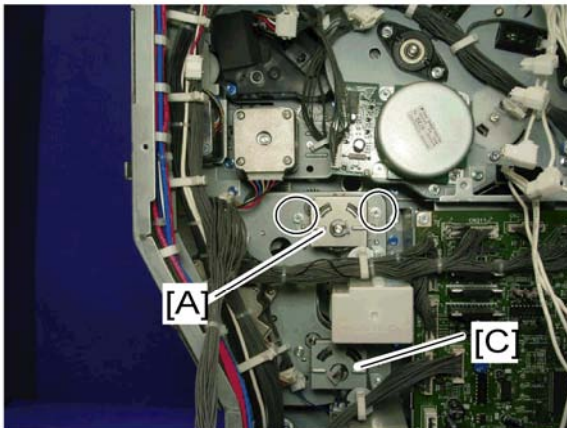

1. Rear cover (🔧 "Rear Cover")
2. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
3. PSU bracket (🔧 "PSU")
4. Paper feed clutch 1 bracket [A] (🔧 x 2, 📦 x 1, bushing x 1)

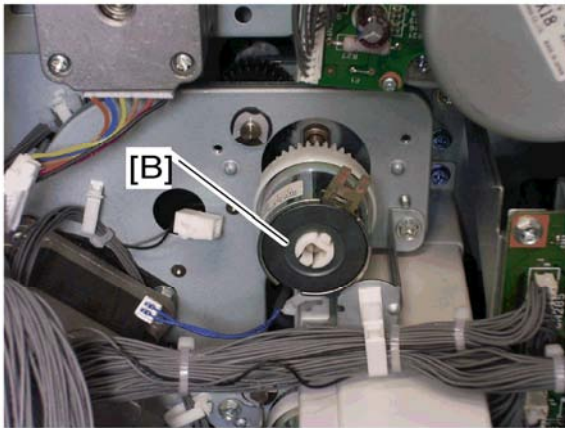

5. Paper feed clutch 1 [B] (🔩 x 1, 🛠️ x 1)

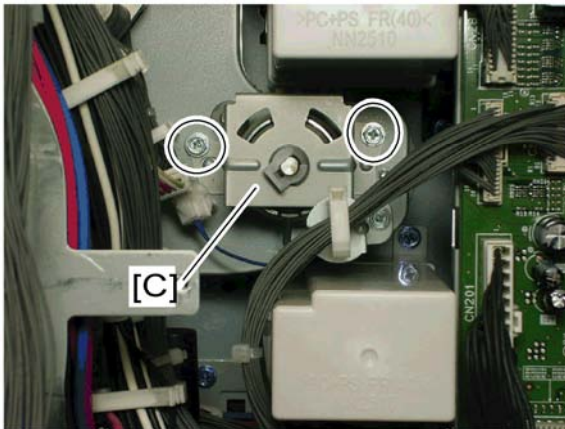


6. Paper feed clutch 2 bracket [C] (🔩 x 2, 🛠️ x 1, bushing x 1)

7. Paper feed clutch 2 (🔩 x 1, 🛠️ x 1)

### 3.10.14 DRUM MOTOR-MCY


**Note**

- Do not remove the PCUs when you replace the drum motor-MCY.

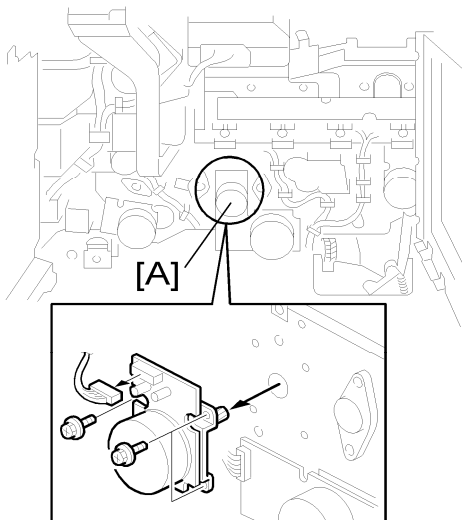


1. Rear cover (🔧 "Rear Cover")
2. Open the controller box. (🔧 "Controller Box")
3. Drum motor-MCY [A] (🔧 x 4, 🛠️ x 1)

### 3.10.15 DEVELOPMENT MOTOR-MCY

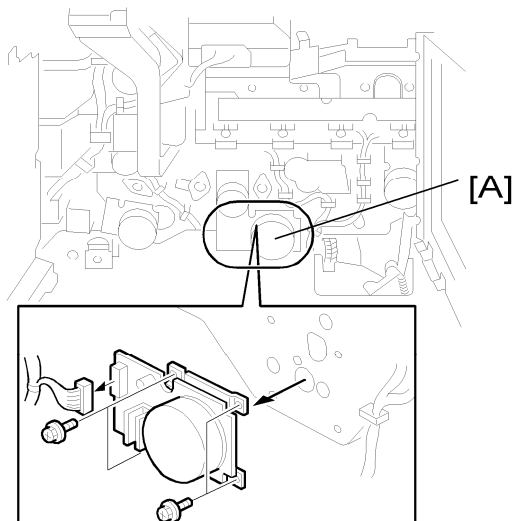

1. Rear cover (🔧 "Rear Cover")
2. PSU bracket (🔧 "PSU")
3. Open the controller box. (🔧 "Controller Box").
4. Development motor-MCY [A] (🔧 x 4, 🛠️ x 1)

### 3.10.16 DEVELOPMENT CLUTCH-K

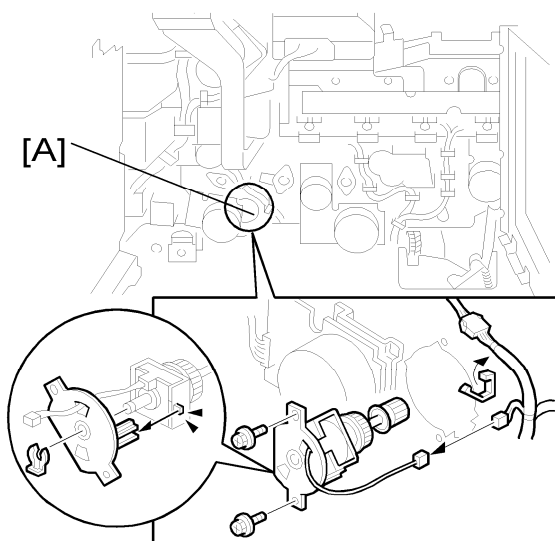


1. Rear cover (🔧 "Rear Cover")
2. Open the controller box. (🔧 "Controller Box").
3. Development clutch-K [A] (🔧 x 2, 🛠️ x 1, 🛠️ x 1)

## 3.11 FUSING

### 3.11.1 FUSING UNIT

#### CAUTION

- Turn off the main switch and wait until the fusing unit cools down before beginning any of the procedures in this section. The fusing unit can cause serious burns.

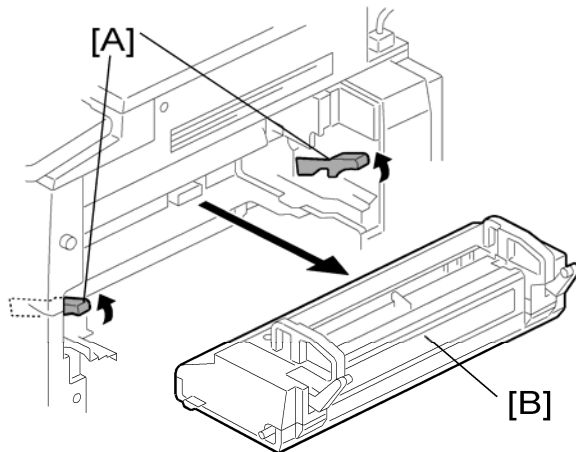

1. If you will install a lot of new parts in the fusing unit (at PM for example), then set SP 3902-014 to "1".


#### Note

- If you do this, then the machine will reset the PM counter for the fusing unit automatically, after you turn the power on again.  
Do not do this if you replace the complete fusing unit. This is because the fusing unit has a new detection mechanism.
2. Turn off the main power switch.
  3. Open the right door.
  4. Release the lock levers [A].
  5. Fusing unit [B]


### 3.11.2 FUSING BELT, PRESSURE ROLLER, FUSING LAMPS




1. Fusing unit (Fusing Unit)
2. Fusing upper cover [A] (x 4)

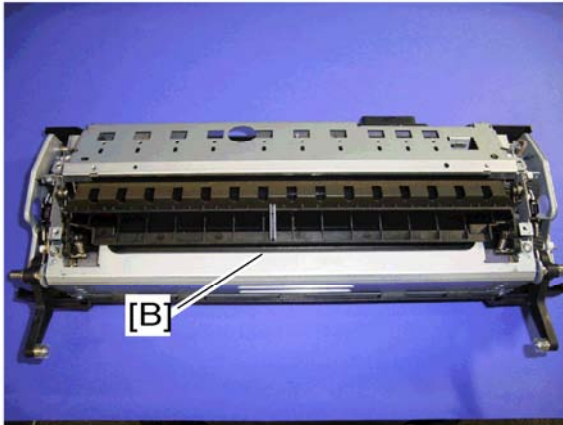


3. Cleaning unit [B] (x 2)

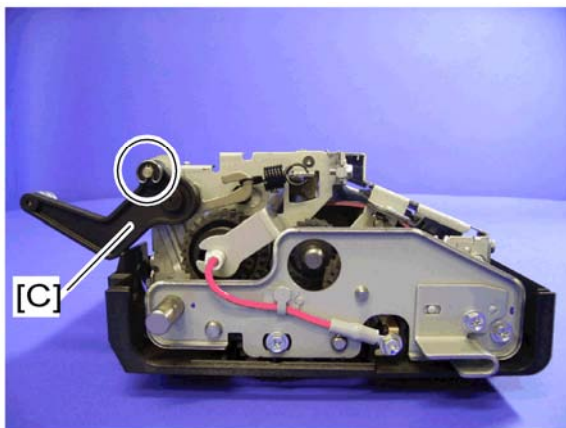


4. Lock lever front and rear [C] (snap ring x 1 each)

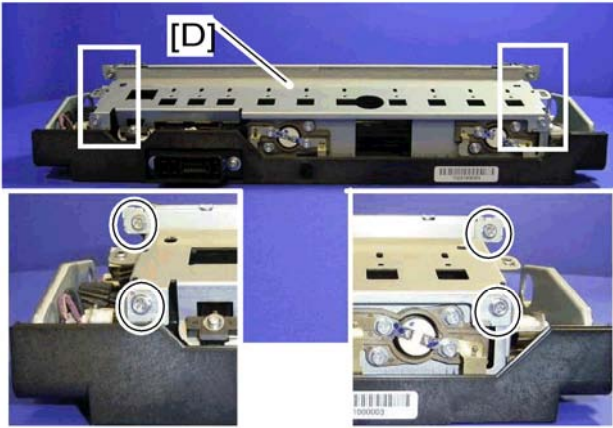

5. Top frame [D] (🔩 x 4, 📌 x 1)

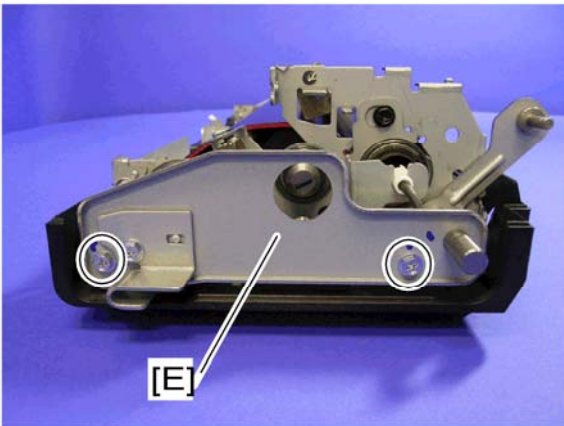

6. Front side stay [E] (🔩 x 2)

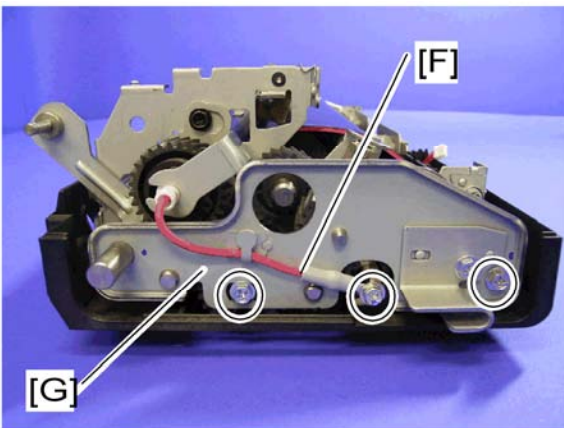


7. Release the pressure roller lamp cord [F] (🔩 x 1).

↓ Note


- The color of the fusing lamp cord differs depending on the destination.
- **Red:** 220 - 240 V, **Blue:** 120 V

8. Rear side stay [G] (🔩 x 2)




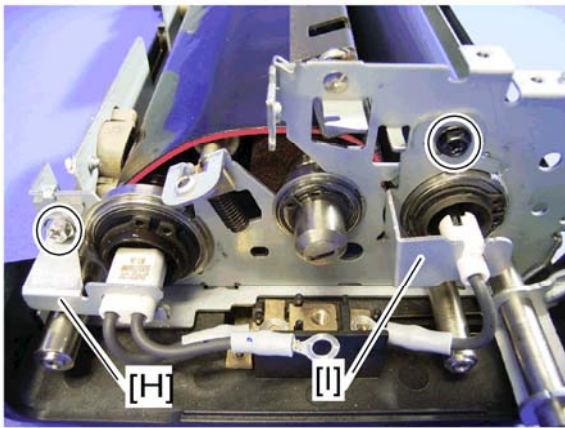


- 9. Heating roller fusing lamp front stay [H] (🔩 x 1)
- 10. Pressure roller lamp front stay [I] (🔩 x 1)

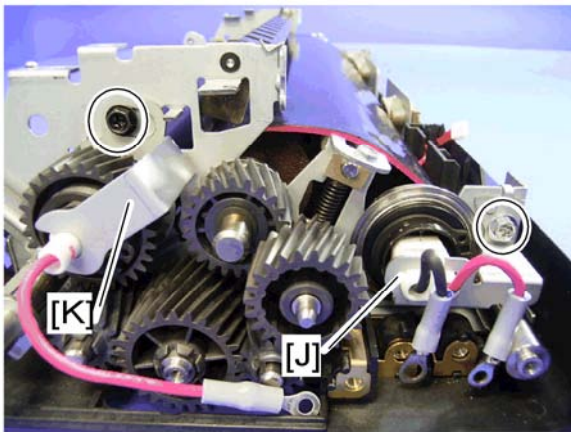


- 11. Heating roller fusing lamp rear stay [J] (🔩 x 1)
- 12. Pressure roller fusing lamp rear stay [K] (🔩 x 1)

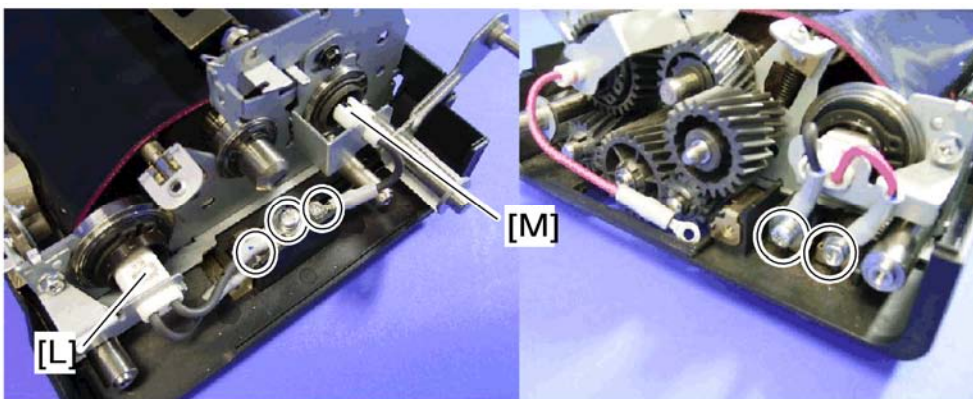


- 13. Heating roller fusing lamp assembly [L] (🔩 x 4)
- 14. Pressure roller fusing lamp [M] (🔩 x 1)

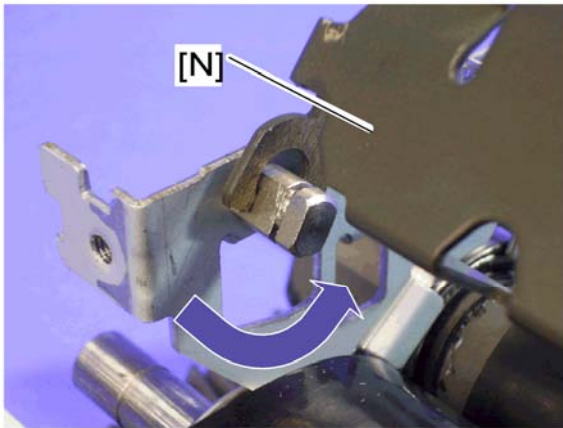


15. Separation plate [N] (C Ringx 2, spring x 2)

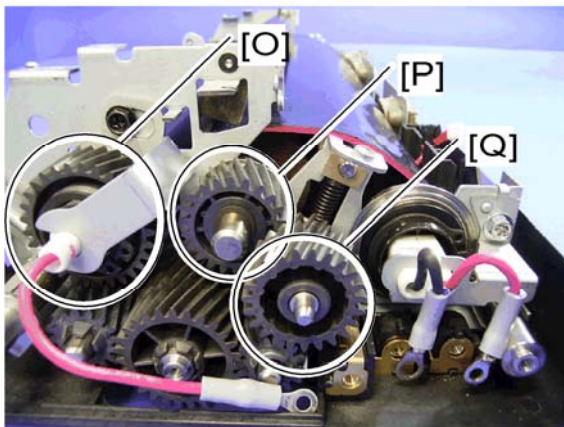


16. Remove the pressure roller gear [O] (C Ring x 1), one-way clutch gear [P] (C Ring x 1) and idle gear [Q].

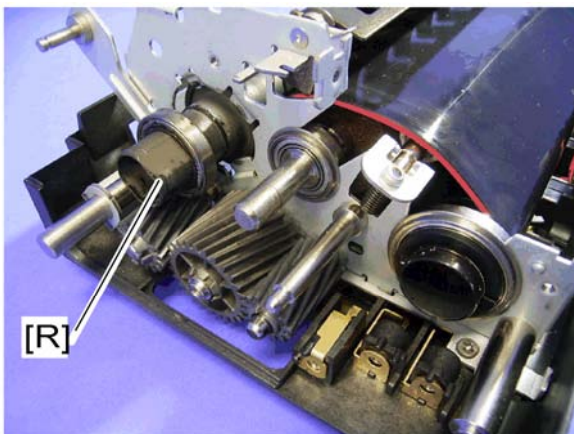

17. Pressure roller [R] (bearing x 2)

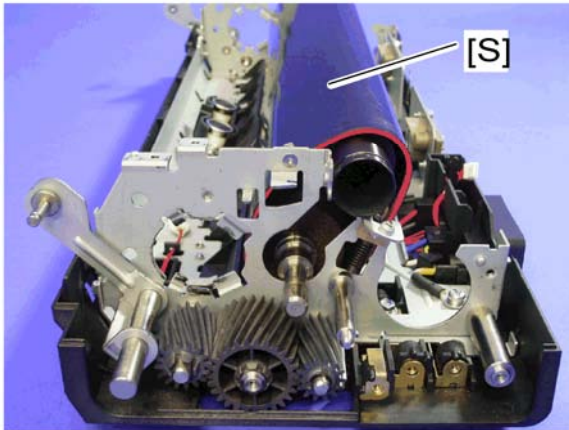

18. Fusing belt [S] with rollers (bearing x 4, insulating bushing x 2, C Ring x3)

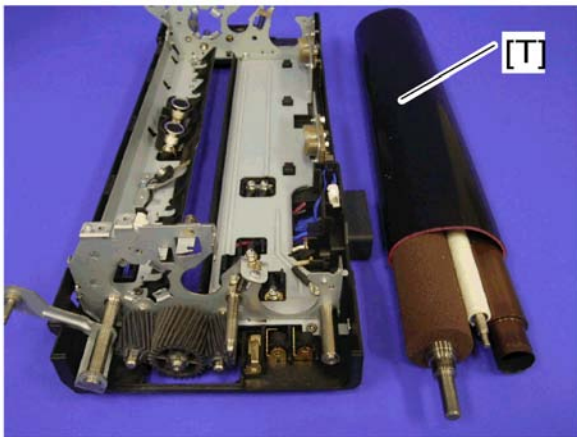


19. Fusing belt [T]

***When reassembling the fusing unit***

When replacing the fusing roller or pressure roller, you have to apply lubricant to the following places.

**Fusing Roller**

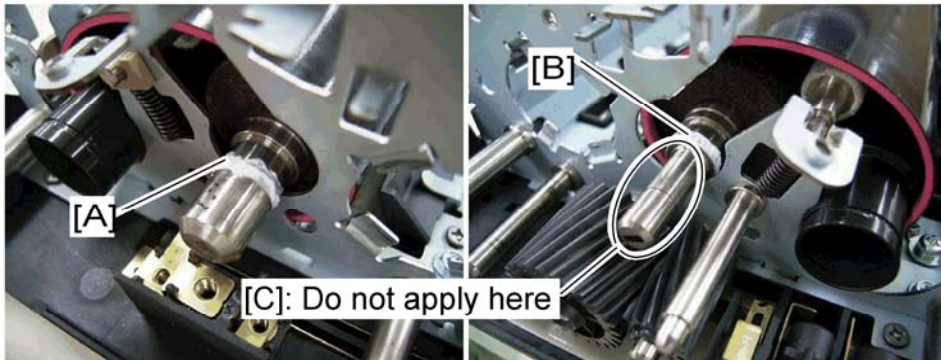


- Apply "Barrierta S552R" to the notch [A] at the front side of the fusing roller.

- Apply "Barrierta S552R" to the edge [B] of the step at the rear side of the fusing roller.

↓ Note


- Do not apply lubricant to the area [C] as shown.

**Pressure Roller**

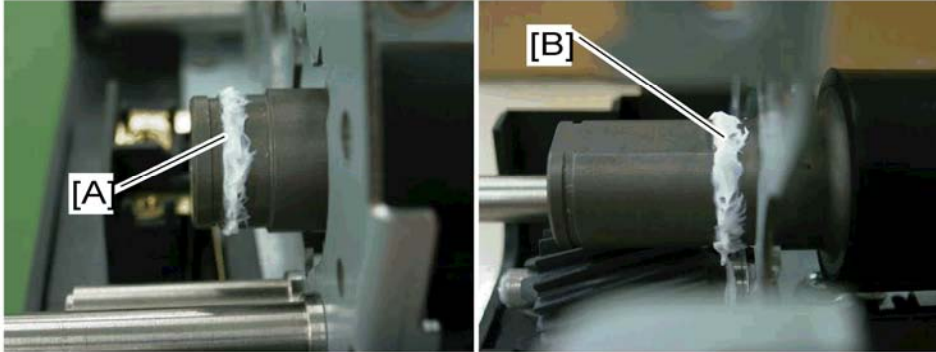


- Apply "Barrierta S552R" to the front edge [A] and rear edge [B] of the pressure roller as shown above.

**3.11.3 HEATING, FUSING AND TENSION ROLLER**

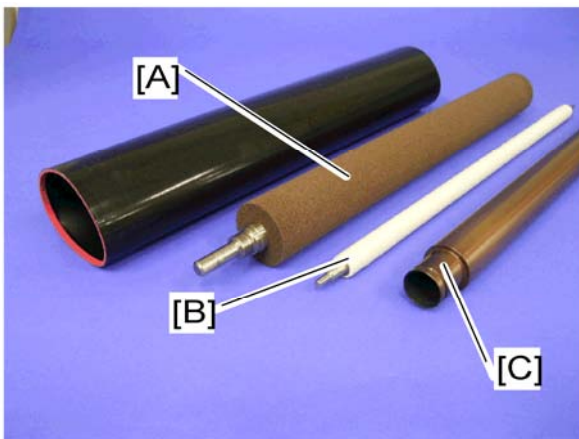

1. Fusing belt with rollers (☛ "Fusing Belt, Pressure Roller, Fusing Lamps")
2. Fusing roller [A]
3. Tension roller [B]
4. Heating roller [C]

### 3.11.4 LUBRICANT ROLLER AND CLEANING ROLLER

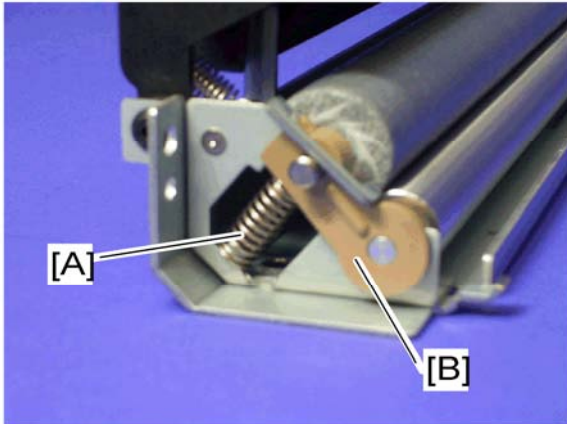


1. Cleaning unit (☞ "Fusing Belt, Pressure Roller, Fusing Lamps")
2. Remove the spring [A] and bushing [B] at the front and rear side of the cleaning unit.




3. Lubricant roller [C]
4. Cleaning roller [D]

### 3.11.5 FUSING/PAPER EXIT FAN

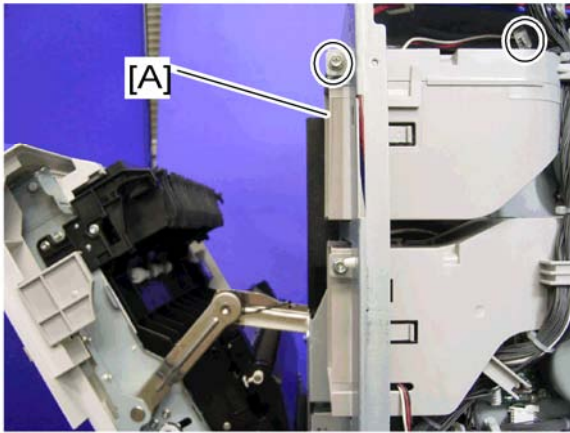


1. Open the right door.
2. Rear cover
3. Right rear cover (🔧 "Right Rear Cover")
4. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket")
5. Fusing/paper exit fan [A] (🔧 x 1, 📏 x 1, hook x 2)

#### *When Reinstalling the Fan*

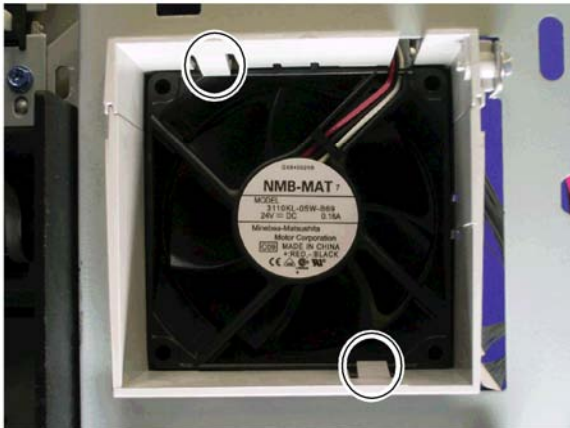

Make sure that the fusing/paper exit fan is installed with its decal facing to the right side.

## ⇒ 3.11.6 HEATING ROLLER THERMOSTATS

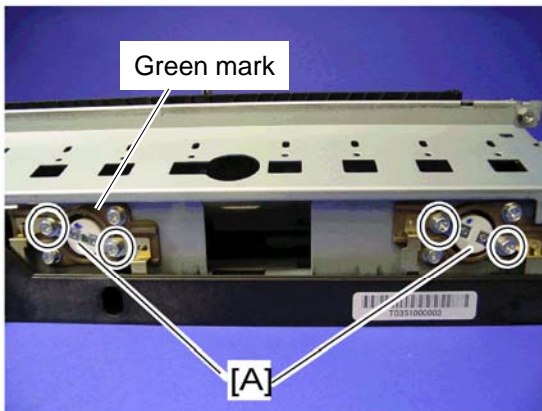


**Notes:**


1. Attach the Thermostats under the electrode plates.
2. Attach the Thermostat with the green mark at the middle position
3. Attach the Thermostat with no mark at the rear position.

1. Fusing upper cover (🔩 "Fusing Belt, Pressure Roller, Fusing Lamps")
2. Heating roller thermostats [A] (🔩 x 2 each)

## 3.11.7 HEATING ROLLER THERMISTOR

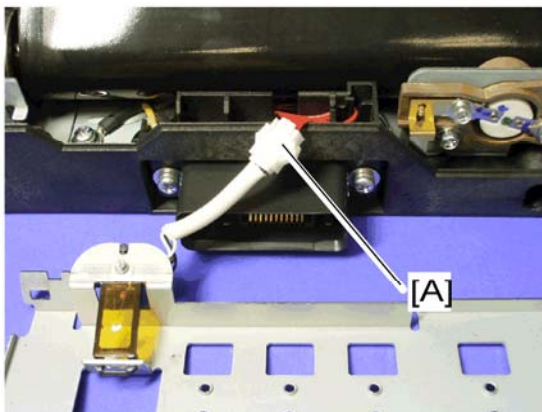


1. Fusing upper cover (🔩 "Fusing Belt, Pressure Roller, Fusing Lamps")
2. Top frame (🔩 "Fusing Belt, Pressure Roller, Fusing Lamps")
3. Release the connector [A].

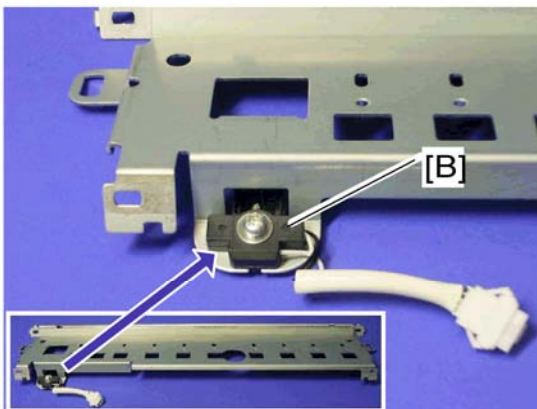


4. Heating roller thermistor [B] (🔩 x 1)

Replacement  
Adjustment

### 3.11.8 PRESSURE ROLLER THERMISTOR AND THERMOSTAT

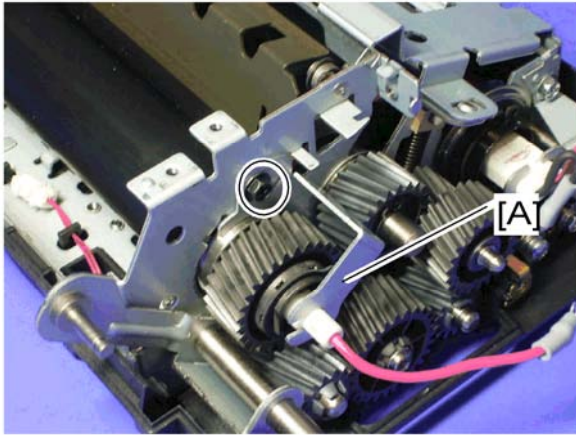


1. Fusing upper cover (🔧 "Fusing Belt, Pressure Roller, Fusing Lamps")
2. Front and rear side stay (🔧 "Fusing Belt, Pressure Roller, Fusing Lamps")
3. Pressure roller fusing lamp rear stay [A]

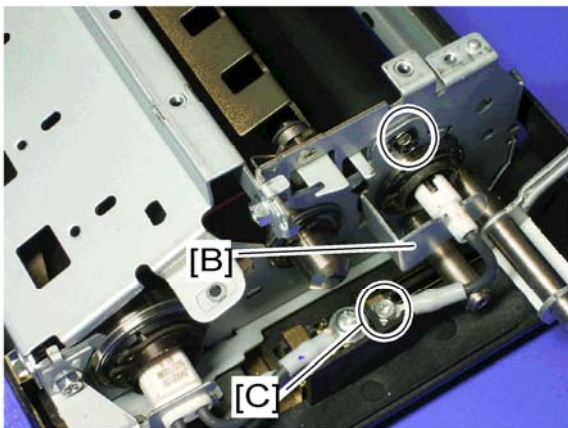


4. Pressure roller fusing lamp front stay [B] (🔧 x 1) and screw [C] for the pressure roller lamp terminal
5. Pressure roller (🔧 "Fusing Belt, Pressure Roller, Fusing Lamps")



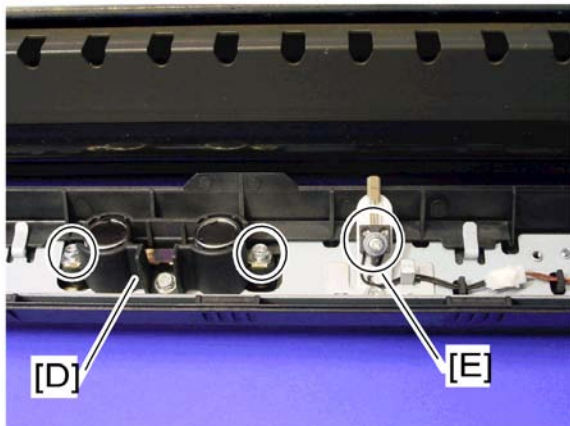


6. Pressure roller thermostat [D] (🔩 x 2)
7. Pressure roller thermistor [E] (🔩 x 1)


### 3.11.9 THERMOPILE

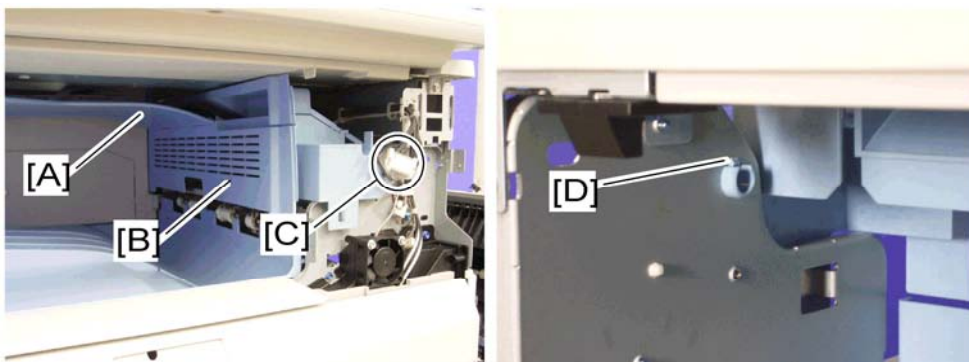

1. Open the right door.
2. Front right cover (🔩 "Operation Panel")
3. Fusing unit (🔩 "Fusing Unit")
4. Remove the inverter tray [A].
5. Release the hook [D] of the inner cover at the inside frame, and then remove the inner cover [B].
6. Disconnect the connector [C].

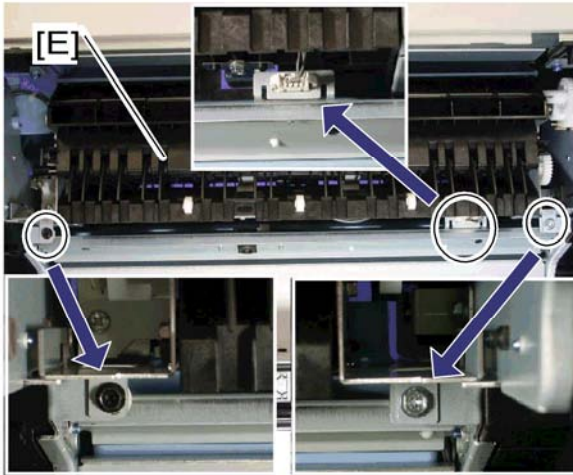


7. Paper exit unit [E] (🔩 x 2, 📌 x 1)

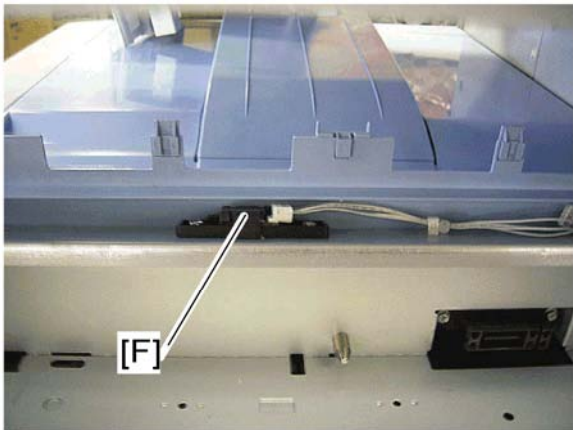


8. Thermopile [F] (🔩 x 2, 📌 x 1)

### 3.11.10 FUSING GEAR AND ONE-WAY CLUTCH

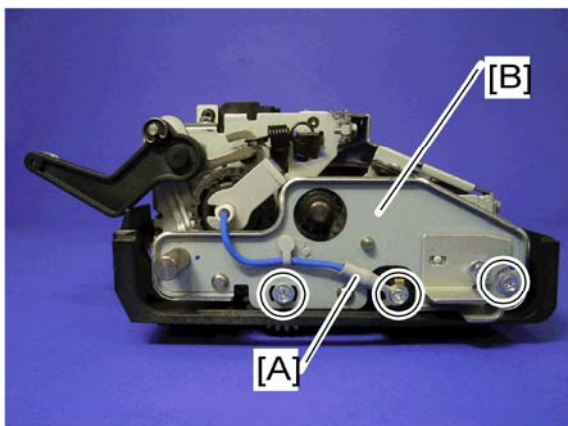


1. Fusing unit (🔩 "Fusing Unit")
2. Fusing upper cover (🔩 "Fusing Belt, Pressure Roller, Fusing Lamps")
3. Release the pressure roller lamp cord [A] (🔩 x 1).

4. Rear side stay [B] (🔩 x 2)

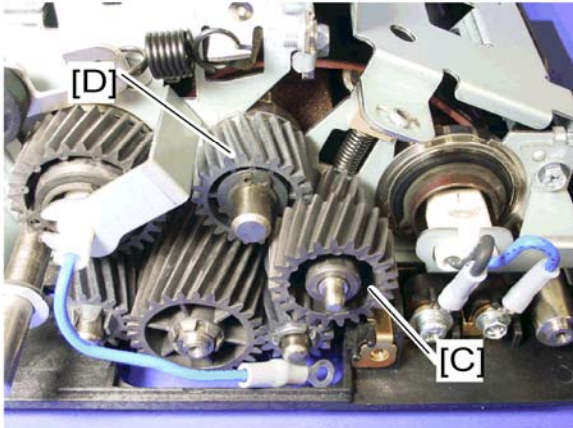


5. Release the idle gear [C]
6. Release the One-way clutch gear [D] (C-ring x 1)


### 3.11.11 HEATING ROLLER BEARING AND INSULATING BUSHING

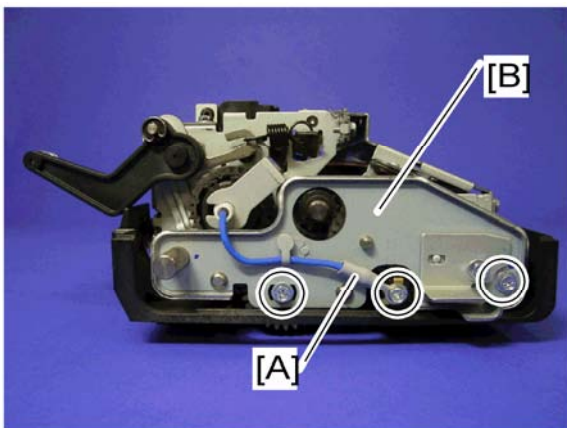


1. Fusing unit (🔩 "Fusing Unit")
2. Fusing upper cover (🔩 "Fusing Belt, Pressure Roller, Fusing Lamps")
3. Release the pressure roller lamp cord [A] (🔩 x 1).
4. Rear side stay [B] (🔩 x 2)

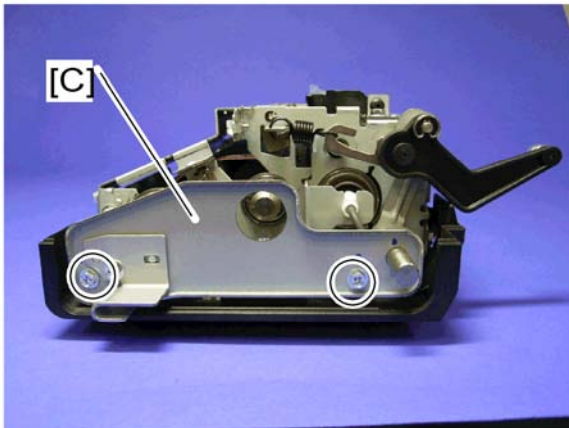

5. Front side stay [C] (🔧 x 2)

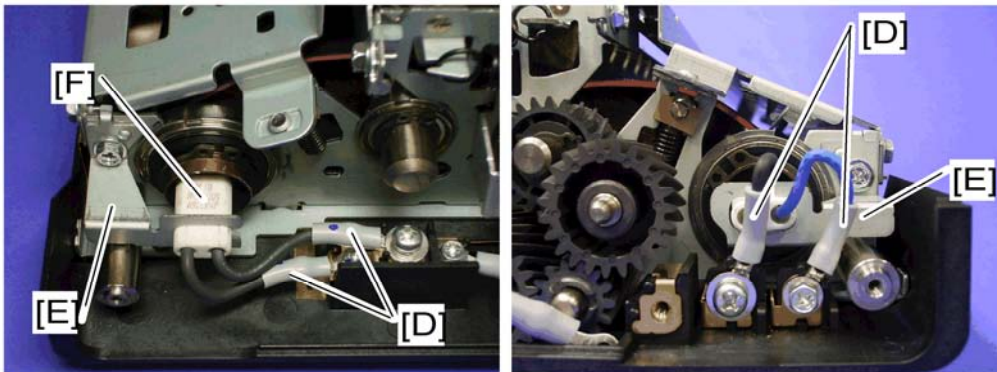


6. Release the heating roller lamp cord [D] (🔧 x 4)  
 7. Remove the rear and front heating lamp brackets [E] (🔧 x 1 each)  
 8. Remove the heating roller lamp [F].

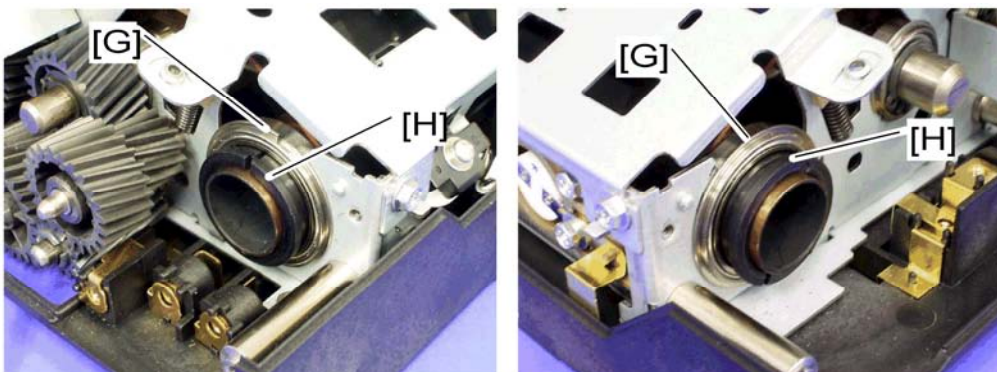


9. Remove the rear and front heating roller bearings [G] and insulating bushings [H].


### 3.11.12 PRESSURE ROLLER BEARING

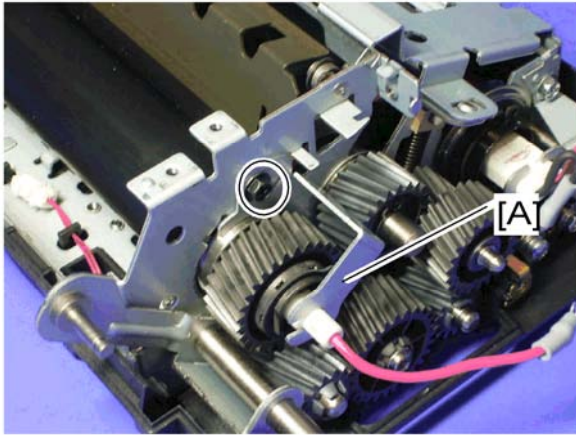

1. Fusing upper cover (☞ "Fusing Belt, Pressure Roller, Fusing Lamps")
2. Front and rear side stay (☞ "Heating Roller Bearing and Insulating Bushing")
3. Pressure roller fusing lamp rear stay [A]

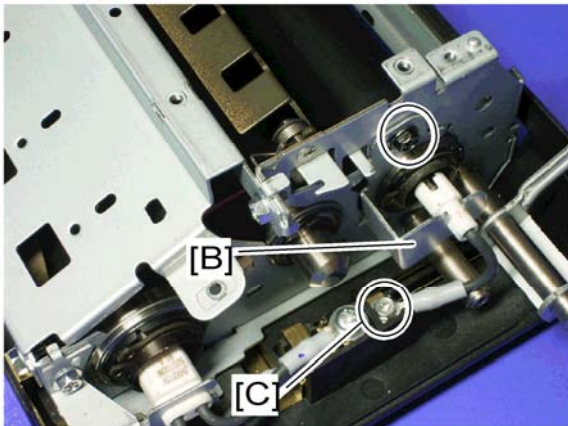


4. Pressure roller fusing lamp front stay [B] (☞ x 1) and screw [C] for the pressure roller lamp terminal

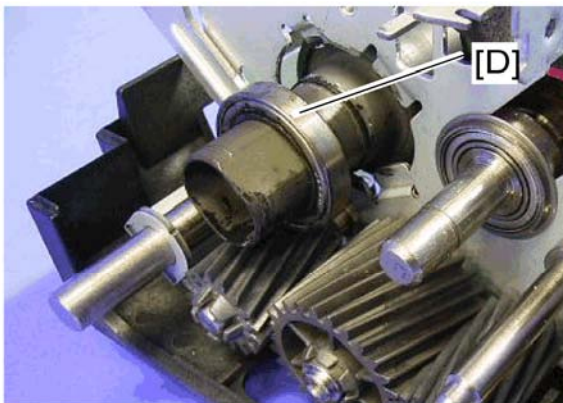

5. Pressure roller bearing [D]

## 3.12 PAPER FEED


### 3.12.1 PAPER FEED UNIT

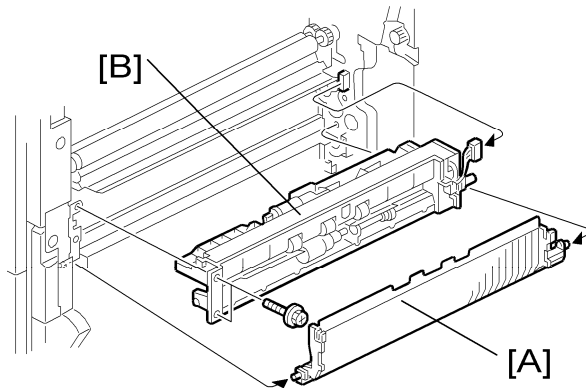

1. Rear cover (🔧 "Rear Cover")
2. Right rear cover (🔧 "Right Rear Cover")
3. Duplex unit (🔧 "Duplex Unit")
4. Pull out tray 1 and tray 2.
5. Paper guide plate [A] (hook x 2)
6. Paper feed unit [B] (🔧 x 2, 🛠️ x 1)

### 3.12.2 PICK-UP, FEED AND SEPARATION ROLLERS


#### *Tray 1 and Tray 2*

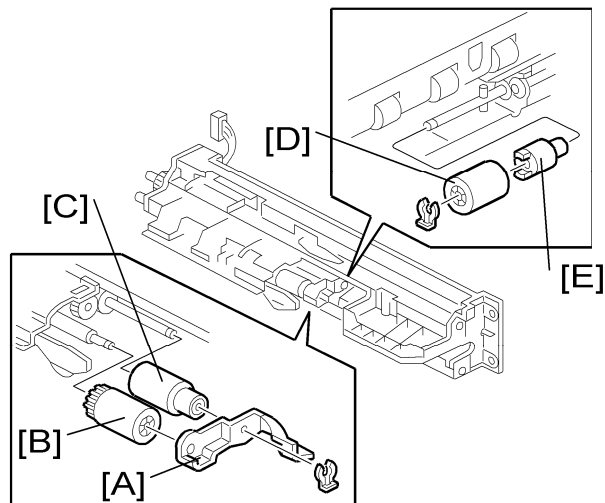

1. Paper feed unit (🔧 "Paper Feed Unit")
2. Roller holder [A] (🔧 x 1)
3. Pick-up roller [B]
4. Feed roller [C]

5. Separation roller [D] and torque limiter [E] (🔧 x 1)


### 3.12.3 TRAY LIFT MOTOR

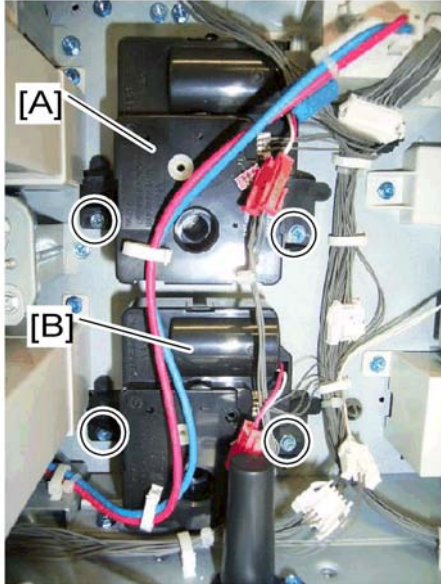

1. Rear cover (🔧 "Rear Cover")
2. PSU bracket (🔧 "PSU")
3. Open the controller box (🔧 "Controller Box")
4. IOB bracket (🔧 "IOB")
5. Tray lift motor 1 [A] (🔧 x 2, 📦 x 3)
6. Tray lift motor 2 [B] (🔧 x 2, 📦 x 3)

Replacement  
Adjustment


### ⇒ 3.12.4 VERTICAL TRANSPORT SENSOR, PAPER LIFT SENSOR AND PAPER END SENSOR

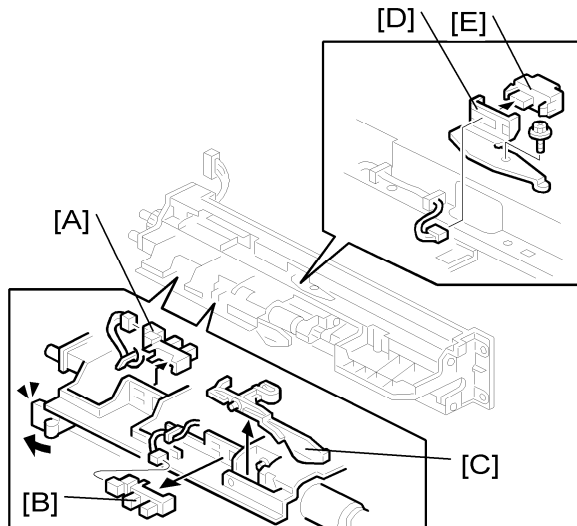

1. Rear cover (🔧 "Rear Cover")
2. Right rear cover (🔧 "Right Rear Cover")
3. Paper feed unit (🔧 "Paper Feed Unit")
4. Paper lift sensor [A] and paper end sensor [B] (hook, 📌 x 1 each)
5. Paper end feeler [C]
6. Vertical transport sensor bracket [D] (🔧 x 1, 📌 x 1)
7. Vertical transport sensor [E] (📌 x 1, hook)




### 3.12.5 REGISTRATION SENSOR

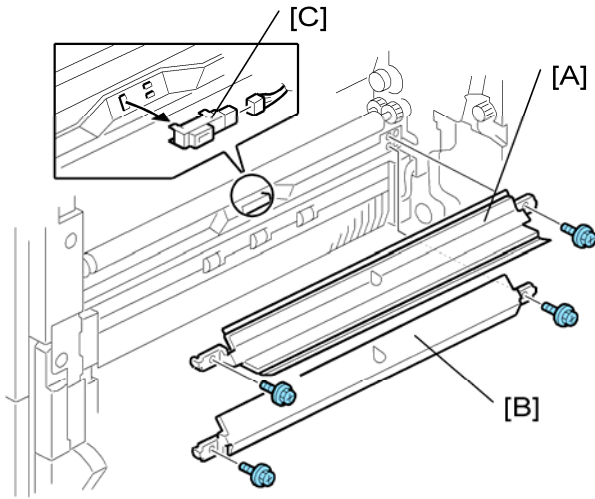


1. Rear cover (🔧 "Rear Cover")
2. Right rear cover (🔧 "Right Rear Cover")
3. Paper feed unit (🔧 "Paper Feed Unit")
4. Paper guide plate 1 [A] and 2 [B] (🔧 x 2 each)
5. Registration sensor [C] (🔧 x 1, hook)

### 3.12.6 BY-PASS PAPER SIZE DETECTION SWITCH

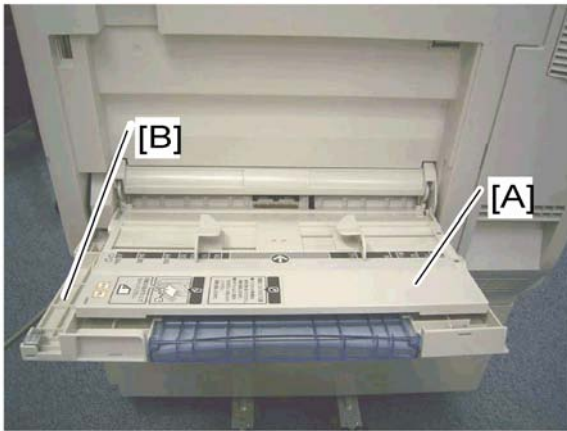


1. Open the by-pass tray [A].
2. By-pass tray cover [B] (4 hooks)

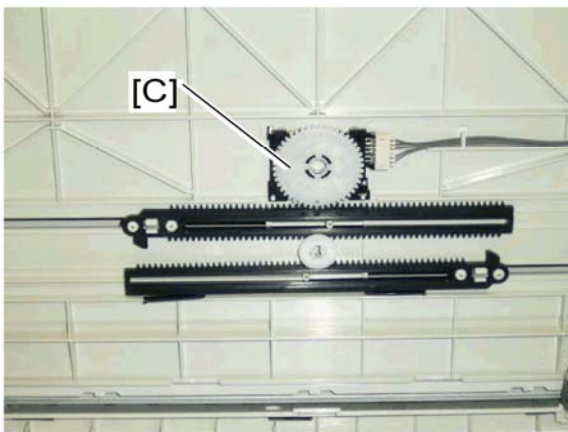

3. Close the by-pass tray.
4. By-pass paper size detection switch [C] (☞ x 1)

***When reinstalling this switch***

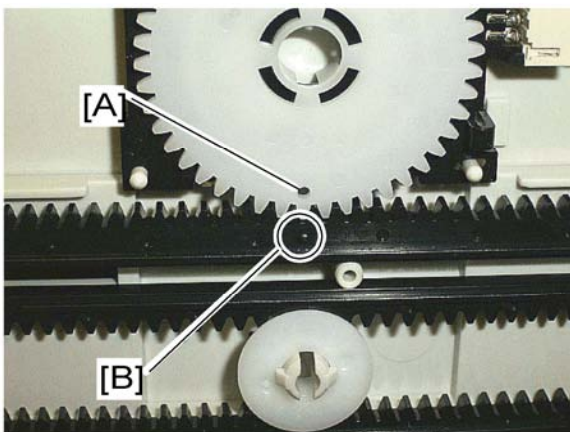


1. Adjust the projection [B] of the left side fence bar (it must be centered).
2. Install the by-pass paper size detection switch so that the hole [A] in this switch faces the projection [B] of the left side fence bar.
3. Reassemble the copier.
4. Plug in and turn on the main power switch.
5. Check this switch operation with SP5803-071 (By-pass paper size < Input Check).

- Display on the LCD -

| Paper Size | Display  | Paper Size | Display  |
|------------|----------|------------|----------|
| A3 SEF     | 10010000 | B5 SEF     | 11100000 |
| B4 SEF     | 11010000 | B6 SEF     | 00110000 |
| A4 SEF     | 11000000 | A6 SEF     | 10110000 |


### 3.12.7 BY-PASS PAPER FEED UNIT

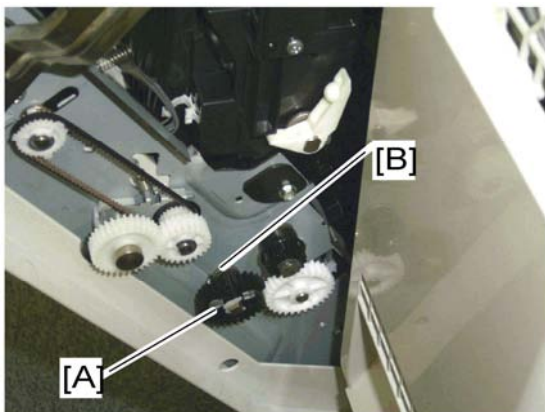

1. Open the right door.
2. Remove the by-pass tray unit gear [A] (Ⓒ x 1) and bushing [B], at the rear of the tray.
3. Close the right door.




4. Open the by-pass tray unit.
5. By-pass tray cover [C] (4 hooks)

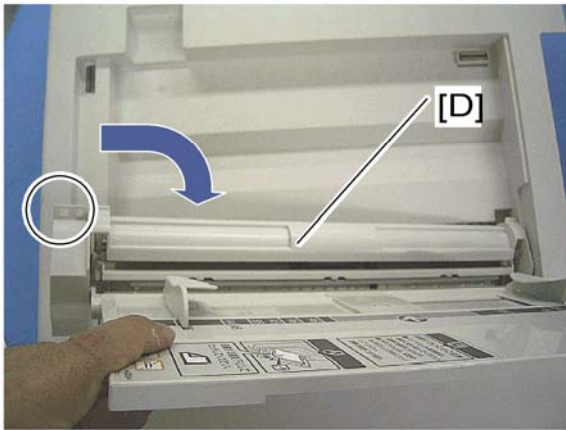

6. By-pass paper feed unit [D] (🔧 x 1, 📄 x 2)

## 3.13 DUPLEX UNIT

### 3.13.1 DUPLEX UNIT

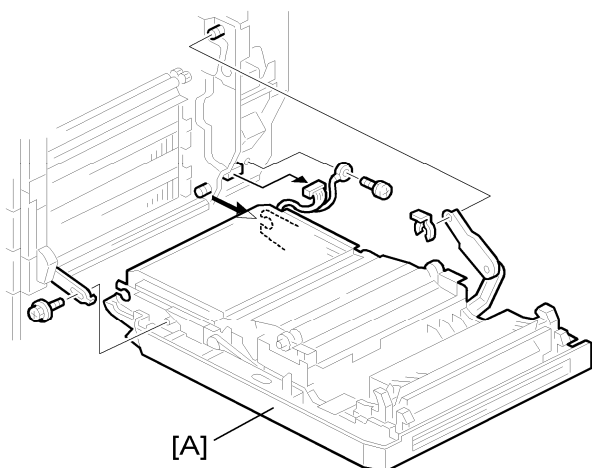


1. Rear cover (🔧 "Rear Cover")
2. Right rear cover (🔧 "Right Rear Cover")
3. Open the right door.
4. Duplex unit [A] (🔧 x 2, 📏 x 1, 🛠️ x 1)


↓ Note

- When removing the duplex unit, pull it to the rear side.

### 3.13.2 DUPLEX TRANSPORT MOTOR

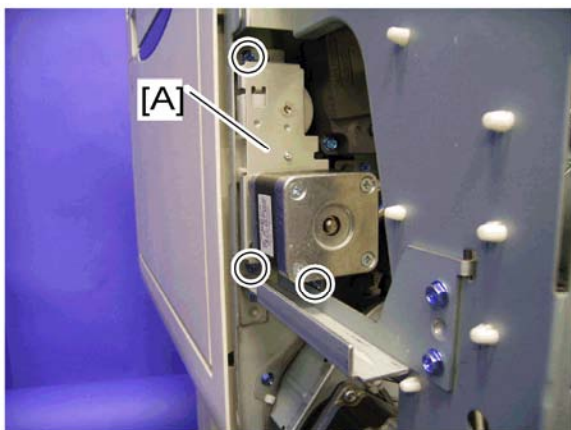


1. Rear cover (🔧 "Rear Cover")
2. Right rear cover (🔧 "Right Rear Cover")
3. High voltage supply board bracket (🔧 "High Voltage Supply Board Bracket ")
4. Duplex transport motor bracket [A] (🔧 x 3, 📏 x 1)

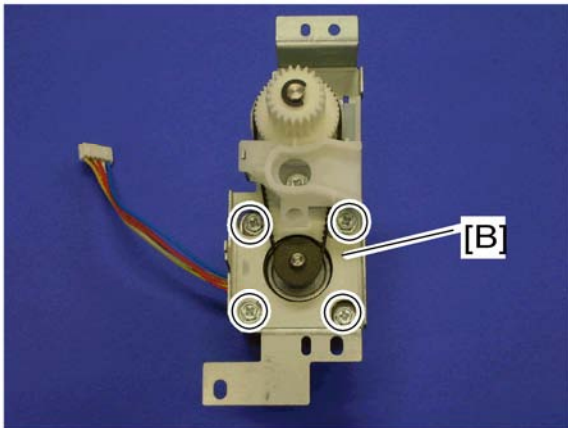

5. Duplex transport motor [B] (🔩 x 4, timing belt x 1)


## 3.14 ELECTRICAL COMPONENTS

### 3.14.1 CONTROLLER UNIT

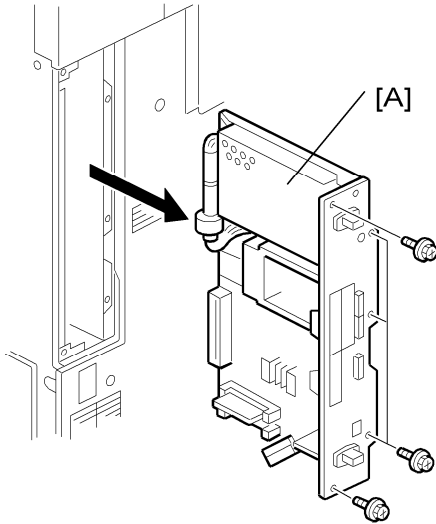


1. Controller unit [A] (🔩 x 5)

### 3.14.2 CONTROLLER BOX COVER

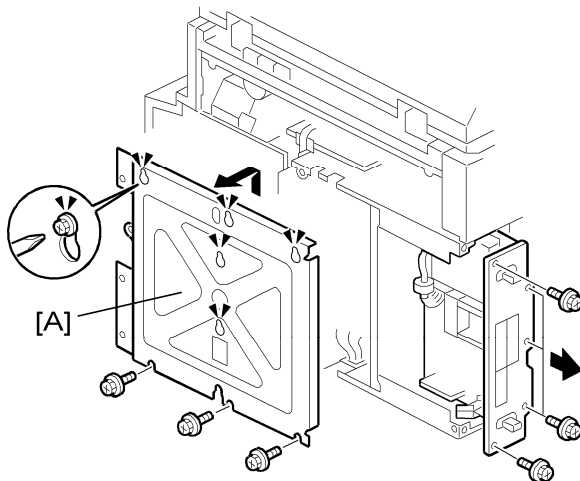

1. Rear cover (🔩 "Rear Cover")
2. Loosen the eight screws.
3. Slide up the controller box cover [A], and then remove it.



### 3.14.3 CONTROLLER BOX

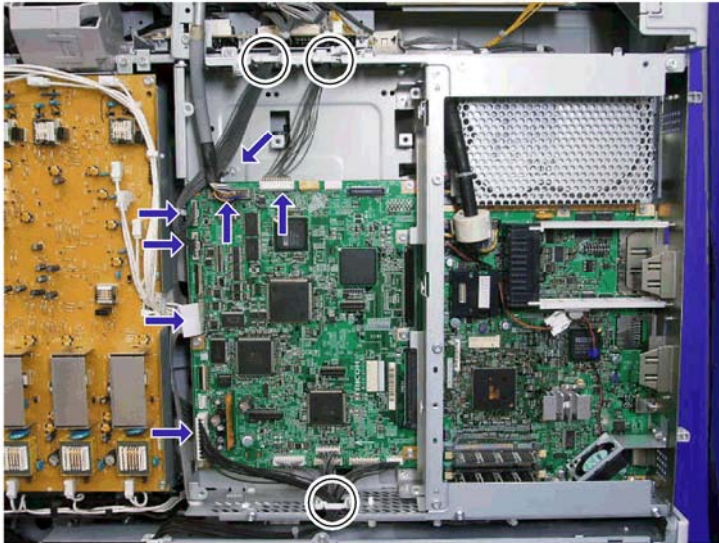

1. Rear cover (🔧 "Rear Cover")
2. Controller box cover (🔧 "Controller Box Cover")
3. Disconnect all the connectors on the BICU and release the clamps. (🔧 x 5, 🔧 x 3)
4. Remove the ground cable (🔧 x 1) and one flat cable.


⚠ Note

- Make sure that the flat cable is removed. If not, the flat cable can be damaged.

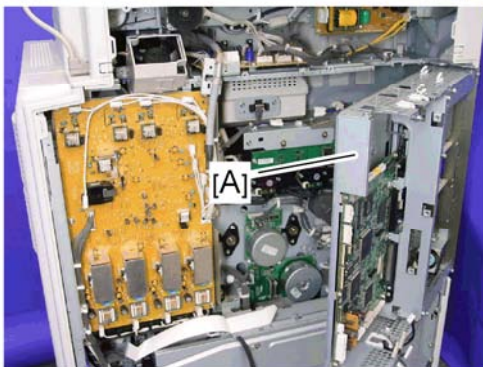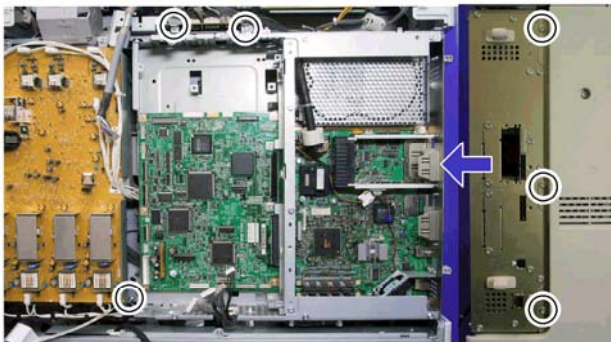




5. Open the controller box [A] (🔧 x 6).

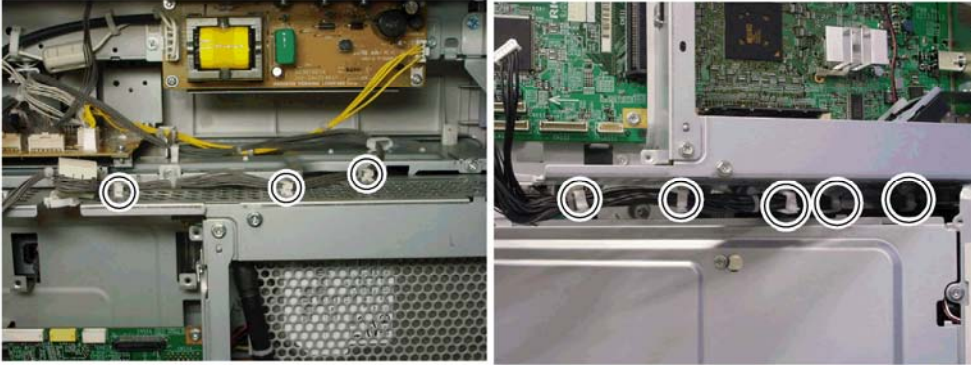

6. Release all the clamps on the top and bottom of the controller box (top: 🛠️ x 3, bottom: 🛠️ x 5).

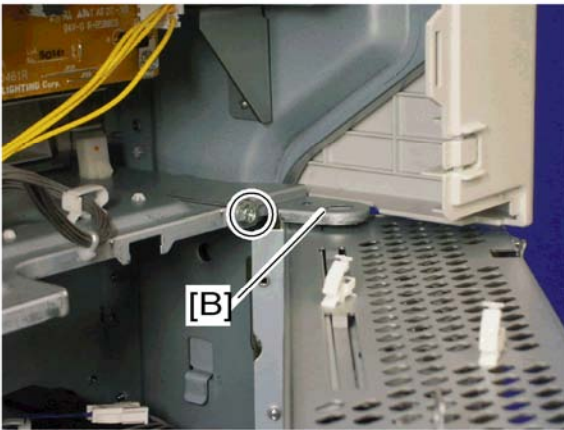


7. Hinge bracket [B] (🔧 x 1)



8. Controller box [C]

### 3.14.4 BICU

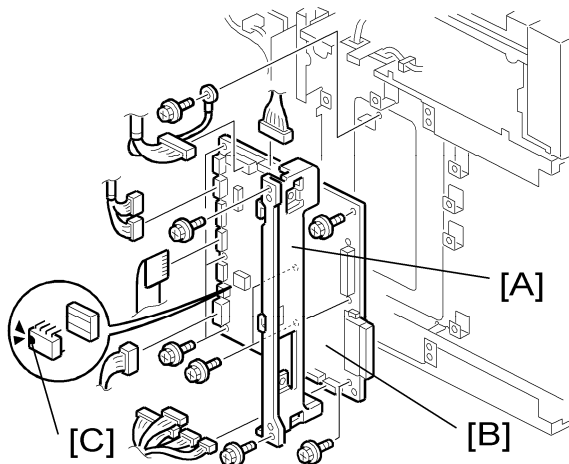

1. Rear cover (🔩 "Rear Cover")
2. Controller box cover (🔩 "Controller Box Cover")
3. Mother board bracket [A] (🔩 x 4)
4. BICU [B] (🔩 x 5, 📏 x 10, one flat cable)

#### ***When installing the new BICU***

Remove the NVRAM from the old BICU. Then install it on the new BICU after you replace the BICU. Replace the NVRAM (🔩 "NVRAM Replacement Procedure") if the NVRAM on the old BICU is defective.


#### **Note**

- Make sure you print out the SMC reports ("SP Mode Data" and "Logging Data") before you replace the NVRAM.

#### **CAUTION**


- Keep NVRAMs away from any objects that can cause static electricity. Static electricity can damage NVRAM data.
- Make sure the NVRAM is correctly installed on the BICU. Insert the NVRAM in the NVRAM slot with the "half-moon" [C] pointing to the left.
- Make sure that the DIP-switch settings on the old BICU are the same for the new BICU when. Do not change the DIP switches on the BICU in the field.

### 3.14.5 IOB

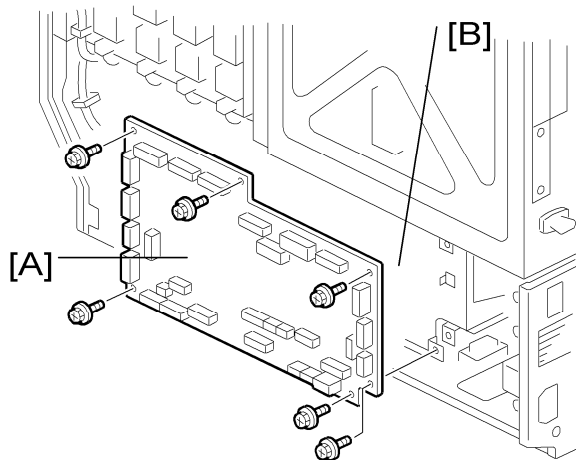


1. Rear cover (🔩 "Rear Cover")
2. PSU bracket (🔩 "RPSU")
3. IOB [A] (🔩 x 7, ALL 📏s)
4. Open the controller box (🔩 "Controller Box Cover")
5. IOB bracket [B] (🔩 x 5, 📏 x 2)


### 3.14.6 PSU

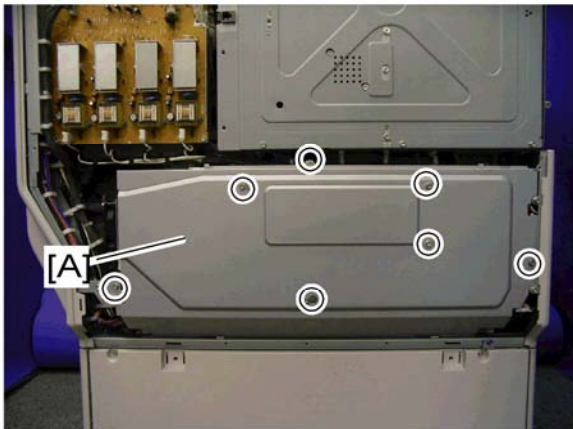

1. Rear cover (🔩 "Rear Cover")
2. Loosen the seven screws.
3. Slide the PSU box cover [A] to the left side and then remove it.

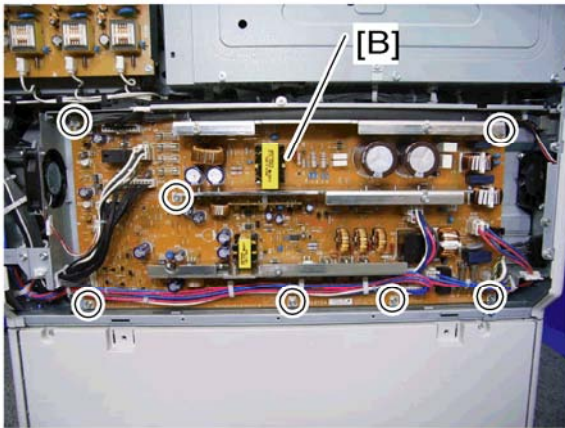


4. PSU [B] (🔩 x 7, All 📏s, 🛠️ x 3)

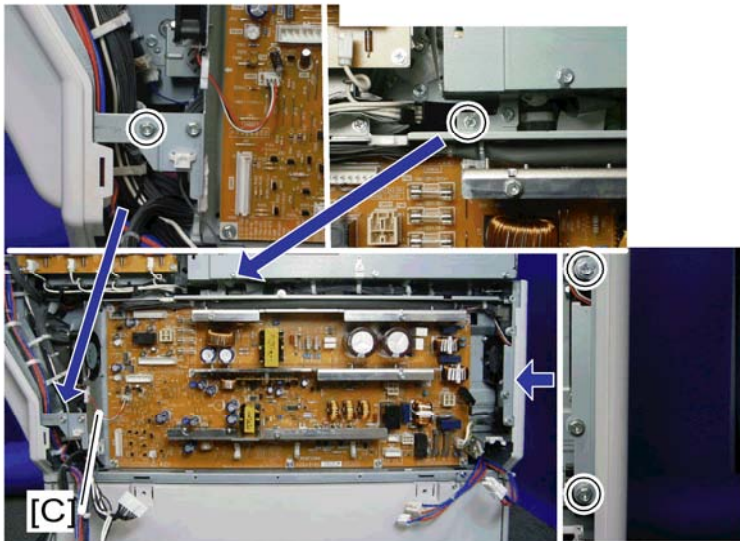


5. PSU bracket [C] (🔩 x 4, 🛠️ x 10)

### 3.14.7 SIO (SCANNER IN/OUT) BOARD

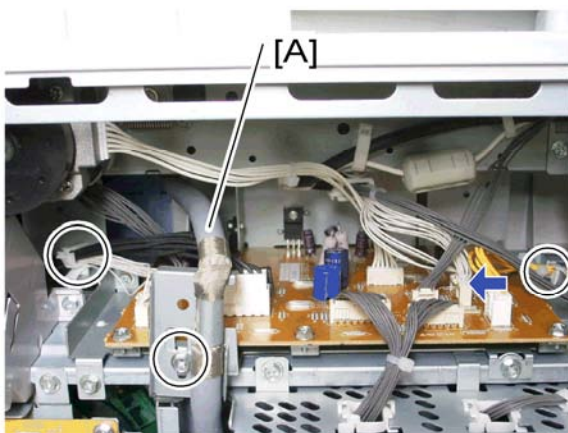


1. Rear cover (📏 "Rear Cover")
2. Remove the screw of the SBU harness [A] (🛠️ x 2).

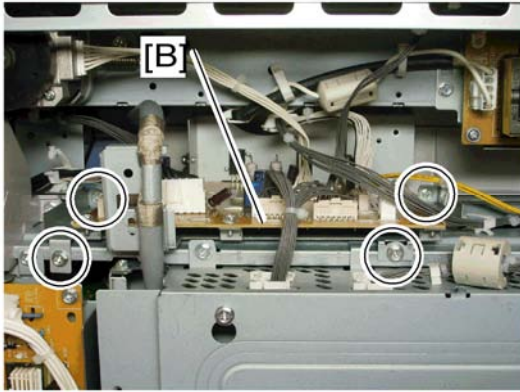


3. SIO board with bracket [B] (🔩 x 4, All 📏s)

### 3.14.8 HIGH VOLTAGE SUPPLY BOARD

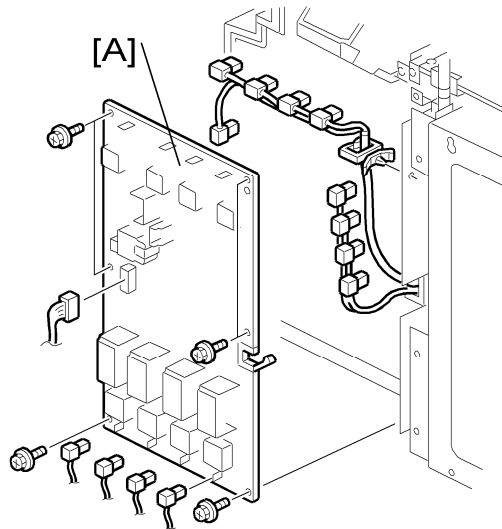


1. Rear cover (📏 "Rear Cover")
2. High voltage supply board [A] (🔩 x 6, All 📏s, 📏 x 1)

### 3.14.9 HIGH VOLTAGE SUPPLY BOARD BRACKET

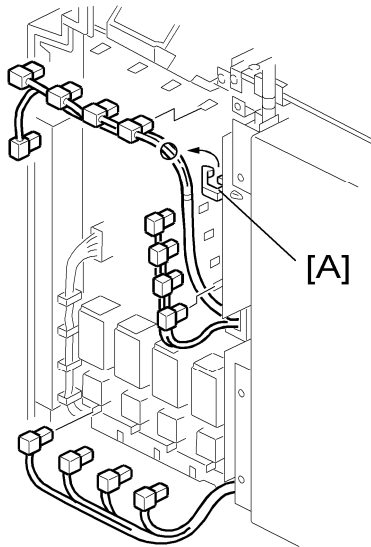


1. Rear cover (🔧 "Rear Cover")
2. Remove all the connectors and release the clamp [A].

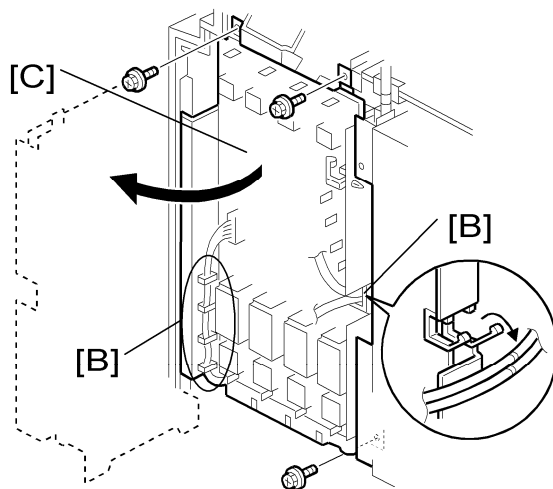


3. Release all the clamps [B].
4. Open out the high voltage supply board bracket [C] (🔧 x 3) and then remove it.

### 3.14.10 CONTROLLER BOARD

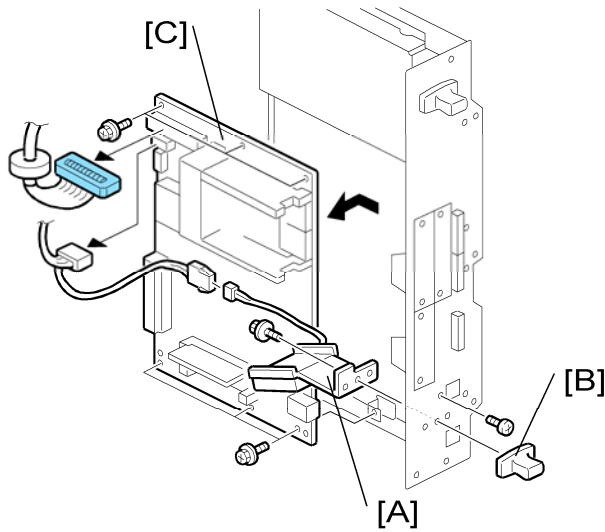

1. Controller unit (🔧 "Controller Box")
2. Fan bracket [A] and grip [B] (🔧 x 1, 📏 x 1)
3. Controller board [C] (🔧 x 7, 📏 x 2)

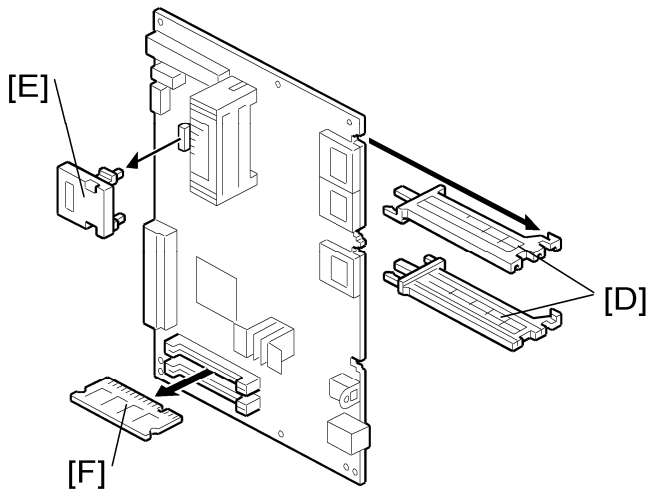

4. Interface rails [D], NV-RAM [E] and RAM-DIMM(s) [F]

#### ***When installing the new BICU***

Remove the NVRAM from the old controller board. Then install it on the new controller board after you replace the controller board. Replace the NVRAM (🔧 "NVRAM Replacement Procedure") if the NVRAM on the old controller board is defective.


#### **Note**

- Make sure you print out the SMC reports ("SP Mode Data" and "Logging Data") before you replace the NVRAM.


## ⚠ CAUTION

- Keep NVRAMs away from any objects that can cause static electricity. Static electricity can damage NVRAM data.
- Make sure the NVRAM is correctly installed on the controller board.
- Make sure that the DIP-switch settings on the old controller board are the same for the new controller board. Do not change the DIP switches on the controller board in the field.

### 3.14.11 HDD

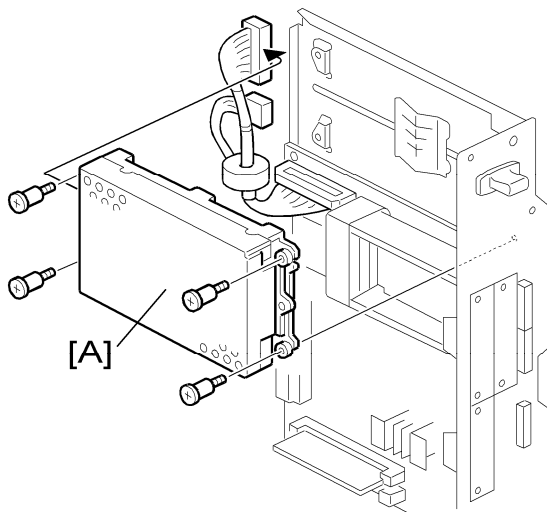

1. Controller unit (☛ "Controller Box")
2. HDD unit [A] (☛ x 4, ☛ x 2)
3. HDD unit upper cover [B] and lower cover [C] (☛ x 5)
4. HDD [D]
5. Turn the main switch on. The disk is automatically formatted.
6. Install the stamp data using "SP5853".
7. Switch the machine off and on to enable the fixed stamps for use.

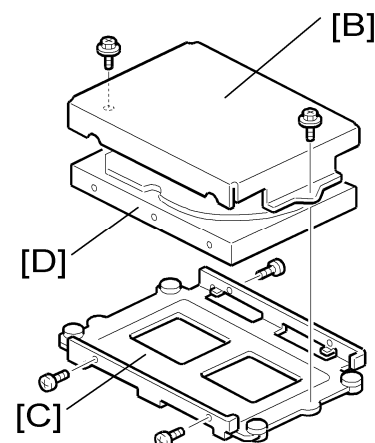

↓ Note

If you previously backed up the address book to an SD card with SP5846 051, you can use SP 5846 052 to copy the data from the SD card to the hard disk.



***Disposal of HDD Units***

- Never remove an HDD unit from the work site without the consent of the client.
- If the customer has any concerns about the security of any information on the HDD, the HDD must remain with the customer for disposal or safe keeping.
- The HDD may contain proprietary or classified (Confidential, Secret) information. Specifically, the HDD contains document server documents and data stored in temporary files created automatically during copy job sorting and jam recovery. Such data is stored on the HDD in a special format so it cannot normally be read but can be recovered with illegal methods.

***Reinstallation***

Explain to the customer that the following information stored on the HDD is lost when the HDD is replaced:

- Document server documents
- Custom-made stamps
- Document server address book

The address book and document server documents (if needed) must be input again.

If the customer is using the Data Overwrite Security feature, the DOS function must be set up again. For more, see Section 1 (Installation).

If the customer is using the optional Browser Unit, this unit must be installed again. For more, see Section 1 (Installation).

**3.14.12 NVRAM REPLACEMENT PROCEDURE*****NVRAM on the BICU***

1. **Make sure that you have the SMC report (factory settings). This report comes with the machine.**
2. **Output the SMC data (☞ SP5-990-001) if possible.**
3. **Turn the main switch off.**
4. **Install an SD card into SD card slot 3. Then turn the main power on.**
5. **Copy the NVRAM data to an SD card (☞ SP5-824-001) if possible.**
6. **Turn off the main switch. Then unplug the power cord.**
7. **Replace the NVRAM on the BICU and reassemble the machine.**
8. **Plug in the power cord. Then turn the main switch on.**
9. **Select a paper-size type (☞ SP5-131-001).**
10. **Specify the device number and destination code of the machine.**

↓ Note

- Contact your supervisor for details on how to enter the device number and destination code.
- SC 999 or “Fusing Unit Setting Error” can be shown until the device number and destination code are correctly programmed.

11. Turn the main switch off and on.
12. Copy the data from the SD card to the NVRAM (☞ SP5-825-001) if you have successfully copied them to the SD card.
13. Turn the main switch off. Then remove the SD card from SD card slot 3.
14. Turn the main switch on.
15. Specify the SP and UP mode settings.
16. Do the process control self-check.
17. Do ACC for the copier application program.
18. Do ACC for the printer application program.

### ***NVRAM on the Controller***

#### **⚠ CAUTION**

- If you change the NVRAM in the controller, and the Data Overwrite Security unit is installed, this Data Overwrite Security unit must be replaced with a new one.
1. Make sure that you have the SMC report (factory settings). This report comes with the machine.
  2. Output the SMC data (☞ SP5-990-001) if possible.
  3. Turn the main switch off. Then put a blank formatted SD card into SD card slot 3.
  4. Turn the main switch on.
  5. Copy the NVRAM data (☞ SP5-824-001) and the address book data in the HDD (SP5846-051) to an SD card if possible.

↓ Note

- An error message shows if local user information cannot be stored in an SD card because the capacity is not enough.
  - You cannot do this procedure if the SD card is write-protected.
6. Enter SP mode. Then print out the SMC reports (☞ SP5-990-001) if possible.
  7. Turn off the main switch. Then unplug the power cord.
  8. Replace the NVRAM on the controller. Then reassemble the machine.
  9. Check if the serial number shows on the operation panel. (SP5-811-002). Input the serial number if it does not show. (Contact your supervisor about this setting.)
  10. Plug in the power cord. Then turn the main switch on.

- 11. Copy the data from the SD card to the NVRAM (SP5-825-001) and HDD (SP5-846-52) if you have successfully copied them to the SD card.**

**Note**

- The counter data in the user code information clears even if step 11 is done correctly.
  - An error message shows if the download is incomplete. However, you can still use the part of the address book data that has already been downloaded in step 11.
  - An error message shows when the download data does not exist in the SD card, or, if it is already deleted.
  - You cannot do this procedure if the SD card is write-protected.
- 12. Go out of SP mode. Then turn the main switch off. Then remove the SD card from SD card slot 3.**
- 13. Turn the main switch on.**
- 14. Specify the SP and UP mode settings.**
- 15. Do ACC for the copier application program.**
- 16. Do ACC for the printer application program.**



# **TROUBLESHOOTING**



## 4. TROUBLESHOOTING

### 4.1 PROCESS CONTROL ERROR CONDITIONS

#### 4.1.1 DEVELOPER INITIALIZATION RESULT

##### SP-3-014-001 (Developer Initialization Result)

| No. | Result                 | Description   | Possible Causes   | Action   |
|-----|------------------------|---|---|--|
| 1   | Successfully completed | Developer initialization is successfully completed.       | -   |  |
| 2   | Forced termination     | Developer initialization was forcibly terminated.         | A cover was opened or the main switch was turned off during the initialization.   | When done in SP mode, do the developer initialization again. Reinstall the engine main firmware if the result is the same.<br>Turn the main switch off and on when done at unit replacement. |
| 6   | Vt error               | Vt is more than 0.7V when Vcnt is 4.3V.                   | <ol style="list-style-type: none"> <li>1. Make sure that the heat seal on the development unit is not removed.</li> <li>2. Defective TD sensor</li> </ol> |  |
| 7   | Vcnt error 1           | Vcnt is less than 4.7V when Vcnt is Vt target $\pm$ 0.2V. | <ol style="list-style-type: none"> <li>1. Defective TD sensor</li> <li>2. Vt target settings are not correct.</li> <li>3. Toner density error</li> </ol>  |  |
| 8   | Vcnt error 2           | Vt is more than 0.7V when Vcnt is                         | <ol style="list-style-type: none"> <li>1. Make sure that the heat seal on the development unit is not removed.</li> <li>2. Defective TD sensor</li> </ol> |  |

| No. | Result       | Description  | Possible Causes  | Action |
|-----|--------------|--|--|--------|
|     |              | 4.3V and Vcnt is less than 4.7V when Vcnt is Vt target $\pm$ 0.2V. |  |        |
| 9   | Vcnt error 3 | Vcnt is less than 4.7V.  | <ol style="list-style-type: none"> <li>1. Make sure that the heat seal on the development unit is not removed</li> <li>2. Defective TD sensor</li> <li>3. Vt target settings are not correct.</li> <li>4. Toner density error</li> </ol> |        |

 Note

- The machine starts developer initialization after you set "Enable" in SP3-902-005, 006, 007, or 008. Developer initialization automatically resumes when you open and close the front door or turn the main switch off and on if an error other than Error 8 occurs.

## 4.1.2 PROCESS CONTROL SELF-CHECK RESULT

### SP3-012-001 to -010 (Process Control Self-check Result)

| No. | Result                 | Description  | Possible Causes   | Action  |
|-----|------------------------|--|---|---|
| 11  | Successfully completed | Process control self-check successfully completed. | -   | Check the Vsg adjustment. See the "Vsg Adjustment Result" following this table.   |
| 41  | Vt error               | Vt maximum or minimum error is detected.           | <ol style="list-style-type: none"> <li>1. Defective development unit</li> </ol> | <p>Vt maximum error and an image is faint:</p> <ul style="list-style-type: none"> <li>▪ Replace the toner supply pump unit.</li> </ul> <p>Vt maximum error and an image is O.K:</p> <ul style="list-style-type: none"> <li>▪ Replace the</li> </ul> |



| No. | Result  | Description  | Possible Causes   | Action  |
|-----|---|--|---|---|
|     |   |  |   | <p>development unit.</p> <ul style="list-style-type: none"> <li>▪ Replace the IOB board.</li> </ul> <p>Vt minimum error:</p> <ul style="list-style-type: none"> <li>▪ Replace the development unit.</li> <li>▪ Replace the IOB board.</li> </ul>  |
| 53  | ID sensor coefficient (K5) detection error        | Not enough data can be sampled.  | -   | <p>Solid image is not sufficient density:</p> <ul style="list-style-type: none"> <li>▪ Retry the process control.</li> <li>▪ Replace the ID sensors.</li> <li>▪ Replace the IOB board.</li> </ul> <p>Solid image is O.K.</p> <ul style="list-style-type: none"> <li>▪ Replace the ID sensors.</li> <li>▪ Replace the IOB board.</li> </ul> <p>ID sensor is dirty:</p> <ul style="list-style-type: none"> <li>▪ Clean the ID sensors.</li> <li>▪ Retry the process control.</li> </ul> |
| 54  | ID sensor coefficient (K5) maximum/ minimum error | When the K5 is more than the value of SP3-362-003 or less than the value of SP3-362-004, the error 54 is | <ol style="list-style-type: none"> <li>1. ID sensor pattern density is too high or low.</li> <li>2. ID sensor or shutter is defective.</li> </ol> | Same as 53  |

| No. | Result                                      | Description   | Possible Causes   | Action   |
|-----|---|---|---|--|
|     |   | displayed.  |   |  |
| 55  | Gamma error:<br>Maximum                     | Gamma is out of range. $5.0 < \text{Gamma}$                 | <ol style="list-style-type: none"> <li>1. ID sensor pattern density is too high.</li> <li>2. Hardware defective.</li> </ol>                             | Same as 53   |
| 56  | Gamma error:<br>Minimum                     | Gamma is out of range.<br>$\text{Gamma} < 0.15$             | <ol style="list-style-type: none"> <li>1. ID sensor pattern density is too low.</li> <li>2. Hardware defective.</li> </ol>                              | Same as 53 <ul style="list-style-type: none"> <li>▪ Replace the toner supply pump unit.</li> </ul> |
| 57  | Vk error:<br>Maximum                        | Vk is out of range.<br>$150 < \text{Vk}$                    | <ol style="list-style-type: none"> <li>1. ID sensor pattern density is too low.</li> <li>2. Hardware defective.</li> </ol>                              | Same as 53   |
| 58  | Vk error:<br>Minimum                        | Vk is out of range.<br>$\text{Vk} < -150$                   | <ol style="list-style-type: none"> <li>1. ID sensor pattern density is too high.</li> <li>2. Background dirty</li> <li>3. Hardware defective</li> </ol> | Same as 53   |
| 59  | Sampling data error during gamma correction | Not enough data can be sampled during the gamma correction. | <ol style="list-style-type: none"> <li>1. ID sensor pattern density is too high or low.</li> <li>2. Hardware defective</li> </ol>                       | Same as 53   |

## Vsg Adjustment Result

### SP3-325-001 to -010 (Vsg Adjustment Result)

| No. | Result                     | Description   | Possible Causes   | Action  |
|-----|----------------------------|---|---|---|
| 1   | O.K                        | Vsg adjustment is correctly done.                               | -   | -   |
| 2   | ID sensor adjustment error | Vsg cannot be adjusted within $4.0 \pm 0.5V$ .                  | <ol style="list-style-type: none"> <li>1. Dirty ID sensor (toner, dust, or foreign material)</li> <li>2. Dirty transfer belt</li> <li>3. Scratched image transfer belt</li> <li>4. Defective ID sensor</li> <li>5. Poor connection</li> <li>6. Defective IOB</li> </ol> | <ul style="list-style-type: none"> <li>▪ Clean the ID sensor.</li> <li>▪ Check the belt cleaning. Clean or replace the transfer belt.</li> <li>▪ Replace the image transfer belt.</li> <li>▪ Replace the ID sensor.</li> <li>▪ Check the connection.</li> <li>▪ Replace the IOB board.</li> </ul> |
| 3   | ID sensor output error     | ID sensor output is more than "Voffset Threshold" (SP3-324-004) | <ol style="list-style-type: none"> <li>1. Defective ID sensor</li> <li>2. Poor connection</li> <li>3. Defective IOB</li> </ol>  | <ul style="list-style-type: none"> <li>▪ Replace the ID sensor.</li> <li>▪ Check the connection.</li> <li>▪ Replace the IOB board.</li> </ul>   |
| 9   | Vsg Adjustment error       | Vsg adjustment has not been completed.                          | Other cases   | <ul style="list-style-type: none"> <li>▪ Retry the SP3-321-010.</li> </ul>  |

### 4.1.3 LINE POSITION ADJUSTMENT RESULT

SP2-194-010 to -012 (Line Position Adjustment Result: M, C, Y)

This SP shows the number as a line position adjustment result on the LCD. It shows which color has an error (M, Y or C).

| No. | Result                                     | Description  | Note     |
|-----|--|--|----------|
| 0   | Not done                                   | Line position adjustment has not been done.  | -        |
| 1   | Completed successfully                     | Line position adjustment has correctly been done,  | -        |
| 2   | Cannot detect patterns                     | ID sensors have not detected the patterns for line position adjustment.  | See Note |
| 3   | Fewer lines on the pattern than the target | The patterns, which ID sensors has detected, are not enough for line position adjustment.  | See Note |
| 4   | More lines on the pattern than the target  | Not used in this machine.  | -        |
| 5   | Out of the adjustment range                | ID sensors has correctly detected the patterns for line position adjustment, but a shift of patterns is out of adjustable range. | See Note |
| 6-9 | Not used                                   | -  | -        |

 Note

- For details, see the "Troubleshooting Guide - Line Position Adjustment" section.

## 4.2 SCANNER TEST MODE

### 4.2.1 VPU TEST MODE

Output the VPU test pattern with SP4-907-001 to make sure the scanner VPU control operates correctly. The VPU test pattern prints out after you have set the SP mode settings and pressed the start key.

- The CCD on the SBU board may be defective if the copy is abnormal and the VPU test pattern is normal.
- The following can be the cause if the copy is normal and the VPU test pattern is abnormal:
  - The harness may not be correctly connected between the SBU and the BICU
  - The BICU (IPU) or SBU board may be defective.

### 4.2.2 BICU (IPU) TEST MODE

You can check the BICU (IPU) board with the SP mode menu, SP4-904-1 or -2.

If no error is detected, the test ends. Then the completion code shows in the operation panel display. If an error is detected, the test is interrupted. Then an error code shows. The table below lists the completion and error codes.

#### ***SP4-904-1 Register Access***

There are 16 bit switches in this SP. Each bit indicates each CPU as follows. The error result is displayed on the operation panel in decimal number.

0: Normal, 1: Error

|                        |                        |
|------------------------|------------------------|
| Bit 0: TAURUS register | Bit 3 to 11: Not used  |
| Bit 1: ORION register  | Bit 12: Ri20 register  |
| Bit 2: LUPUS register  | Bit 13 to 15: Not used |

#### ***SP4-904-2 Image Path***

There are 16 bits switches in this SP. Each bit indicates each CPU path as follows. The error result is displayed on the operation panel in decimal number.

0: Normal, 1: Error

|  |                                       |
|--|---------------------------------------|
| Bit 0: Image path from SBU to TAURUS   | Bit 4 to 11: Not used                 |
| Bit 1: Image path from TAURUS to ORION | Bit 12: Image path from LUPUS to Ri20 |
| Bit 2: Image path from ORION to TAURUS | Bit 13: Image path from Ri20 to GAVD  |
| Bit 3: Image path from TAURUS to LUPUS | Bit 14 and 15: Not used               |

Errors may be caused by the following problems:

1. Short circuit on the signal lines
  - When the BICU board is installed, a pin or two on the ASIC is damaged.
  - Some conductive matter or object is trapped among the pins.
  - Condensation
2. Destruction of circuit elements
  - Over current or a defective element breaks the circuit.
3. Abnormal power supply
  - The required voltage is not supplied to the devices.
4. Overheat/overcooling
  - The environment is inappropriate for the board (the scanner unit).
5. Static electricity
  - Static electricity of a high voltage occurs during the test.
6. Others
  - The scanner and BICU are incorrectly connected.

When you have completed a check, turn the main switch off and on before you do another check. When you have completed all necessary checks, turn the main switch off and on.

## 4.3 SERVICE CALL CONDITIONS

### 4.3.1 SUMMARY

The 'SC Table' section shows the SC codes for controller errors and other errors. The latter (not controller errors) are put into four types. The type is determined by their reset procedures. The table shows the classification of the SC codes.

|                   | Key | Definition  | Reset Procedure   |
|-------------------|-----|---|---|
| Controller errors | CTL | The error has occurred in the controller.   | See "Troubleshooting Procedure" in the table.   |
| Other errors      | A   | The error involves the fusing unit. The machine operation is disabled. The user cannot reset the error.   | Turn the main switch off and on.<br>Reset the SC (set SP5-810-1).<br>Turn the main switch off and on. |
|                   | B   | The error involves one or some specific units. The machine operates as usual, excluding the related units.  | Turn the operation switch off and on.   |
|                   | C   | The error is logged. The SC-code history is updated. The machine operates as usual.   | The SC will not show. Only the SC history is updated.   |
|                   | D   | The machine operation is disabled. You can reset the machine by turning the operation switch or main switch off and on. If the error occurs again, the same SC code is displayed. | Turn the operation switch or main power switch off and on.  |

After you turn the main power switch off, wait for one second or more before you turn the main power switch on (SC 672). All SCs are logged. The print log data (SP5-990-004) in SP mode can check the latest 10 SC codes detected and total counters when the SC

code is detected.

**Note**

- If the problem is related electrical circuit boards, first disconnect then reconnect the connectors before you replace the PCBs.
- If the problem concerns a motor lock, first check the mechanical load before you replace motors or sensors.

**SC Code Classification**

The table shows the classification of the SC codes:

| Class 1 | Section             | SC Code | Detailed section            |
|---------|---------------------|---------|-----------------------------|
| 1XX     | Scanning            | 100 -   | Scanner                     |
|         |                     | 190 -   | Unique for a specific model |
| 2XX     | Laser exposure      | 200 -   | Polygon motor               |
|         |                     | 220 -   | Synchronization control     |
|         |                     | 230 -   | FGATE signal related        |
|         |                     | 240 -   | LD control                  |
|         |                     | 260 -   | Magnification               |
|         |                     | 280 -   | Unique for a specific model |
| 3XX     | Image development 1 | 300 -   | Charge                      |
|         |                     | 330 -   | Drum potential              |
|         |                     | 350 -   | Development                 |
|         |                     | 380 -   | Unique for a specific model |
| 4XX     | Image development 2 | 400 -   | Image transfer              |
|         |                     | 420 -   | Paper separation            |
|         |                     | 430 -   | Cleaning                    |
|         |                     | 440 -   | Around drum                 |
|         |                     | 460 -   | Unit                        |



| Class 1 | Section             | SC Code | Detailed section            |
|---------|---------------------|---------|-----------------------------|
|         |                     | 480 -   | Others                      |
| 5XX     | Paper feed / Fusing | 500 -   | Paper feed                  |
|         |                     | 515 -   | Duplex                      |
|         |                     | 520 -   | Paper transport             |
| 5XX     | Paper feed / Fusing | 530 -   | Fan motor                   |
|         |                     | 540 -   | Fusing                      |
|         |                     | 560 -   | Others                      |
|         |                     | 570 -   | Unique for a specific model |
| 6XX     | Communication       | 600 -   | Electrical counters         |
|         |                     | 620 -   | Mechanical counters         |
|         |                     | 630 -   | Account control             |
|         |                     | 640 -   | CSS                         |
|         |                     | 650 -   | Network                     |
|         |                     | 670 -   | Internal data processing    |
|         |                     | 680 -   | Unique for a specific model |
| 7XX     | Peripherals         | 700 -   | Original handling           |
|         |                     | 720 -   | Two-tray finisher           |
|         |                     | 740 -   | Booklet finisher            |
| 8XX     | Controller          | 800 -   | Error after ready condition |
|         |                     | 820 -   | Diagnostics error           |
|         |                     | 860 -   | Hard disk                   |
|         |                     | 880 -   | Unique for a specific model |

| Class 1 | Section | SC Code | Detailed section |
|---------|---------|---------|------------------|
| 9XX     | Others  | 900 -   | Counter          |
|         |         | 920 -   | Memory           |
|         |         | 990 -   | Others           |

## 4.4 SC TABLE

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 101 | D    | Exposure lamp error<br>-001: Shading at AGC<br>-002: Shading at scanning  |
|     |      | The peak white level is less than 64/255 digits (8 bits) when scanning the shading plate. (The shading data peak does not reach the specified threshold)  |
|     |      | <ul style="list-style-type: none"> <li>▪ Exposure lamp defective</li> <li>▪ Lamp stabilizer defective</li> <li>▪ Exposure lamp connector defective</li> <li>▪ Standard white plate dirty</li> <li>▪ Scanner mirror or scanner lens out of position or dirty</li> <li>▪ SBU defective</li> </ul>                                     |
|     |      | <ol style="list-style-type: none"> <li>1. Check and clean the scanner mirror(s) and scanner lens.</li> <li>2. Check and clean the shading plate.</li> <li>3. Replace the exposure lamp.</li> <li>4. Replace the lamp stabilizer.</li> <li>5. Replace the scanner mirror(s) or scanner lens.</li> <li>6. Replace the SBU.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 120 | D    | Scanner home position error 1  |
|     |      | The scanner home position sensor does not detect the "OFF" condition during operation.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Scanner motor driver defective</li> <li>▪ Scanner motor defective</li> <li>▪ Harness between SIO board and scanner motor disconnected</li> <li>▪ Scanner HP sensor defective</li> <li>▪ Harness between SBU and HP sensor disconnected</li> </ul> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
|     |      | <ol style="list-style-type: none"> <li>1. Check the cable connection between the SIO board and scanner motor.</li> <li>2. Check the cable connection between the SBU and HP sensor.</li> <li>3. Replace the scanner motor.</li> <li>4. Replace the HP sensor.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 121 | D    | Scanner home position error 2  |
|     |      | The scanner home position sensor does not detect the "ON" condition during operation.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Scanner motor driver defective</li> <li>▪ Scanner motor defective</li> <li>▪ Harness between SIO board and scanner motor disconnected</li> <li>▪ Scanner HP sensor defective</li> <li>▪ Harness between SBU and HP sensor disconnected</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check the cable connection between the SIO board and scanner motor.</li> <li>2. Check the cable connection between the SBU and HP sensor.</li> <li>3. Replace the scanner motor.</li> <li>4. Replace the HP sensor.</li> </ol>                   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)                                 |
|-----|------|---|
| 141 | D    | Black level detection error<br>-001: After the home position detection<br>-002: After the AGC |
|     |      | The black level cannot be adjusted within the target value during the zero clamp.             |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective SBU</li> </ul>                             |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the SBU.</li> </ol>                         |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 142 | D    | White level detection error  |
|     |      | The white level cannot be adjusted within the target during auto gain control.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Dirty exposure glass or optics section</li> <li>▪ SBU board defective</li> <li>▪ Exposure lamp defective</li> <li>▪ Lamp stabilizer defective</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Clean the exposure glass, white plate, mirrors, and lens.</li> <li>2. Check if the exposure lamp is lit during initialization.</li> <li>3. Check the harness connection between SBU and BICU.</li> <li>4. Replace the exposure lamp.</li> <li>5. Replace the SBU board.</li> </ol> |

| No.  | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|------|------|---|
| 144  |      | SBU communication error   |
| -001 | D    | SBU connection error  |
|      |      | The SBU connection cannot be detected at power on or recovery from the energy save mode.  |
|      |      | <ul style="list-style-type: none"> <li>▪ Insufficient power supply for SBU</li> <li>▪ Defective SBU</li> <li>▪ Defective harness</li> <li>▪ Defective detection port on the BICU</li> </ul> |
|      |      | <ol style="list-style-type: none"> <li>1. Replace the harness.</li> <li>2. Replace the SBU.</li> <li>3. Replace the BICU.</li> </ol>  |
| -002 | D    | SBU serial communication error  |
|      |      | The power ON of the SBU is not detected.  |

| No.  | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|------|------|---|
|      |      | <ul style="list-style-type: none"> <li>▪ Defective SIO</li> <li>▪ Defective harness</li> <li>▪ Defective detection port on the BICU</li> </ul>    |
|      |      | <ol style="list-style-type: none"> <li>1. Replace the harness.</li> <li>2. Replace the SIO.</li> <li>3. Replace the BICU.</li> </ol>              |
| -003 | D    | GASBU reset error   |
|      |      | The serial communication does not work.   |
|      |      | <ul style="list-style-type: none"> <li>▪ Defective SBU</li> <li>▪ Defective detection circuit on the BICU</li> <li>▪ Defective harness</li> </ul> |
|      |      | <ol style="list-style-type: none"> <li>1. Replace the SBU.</li> <li>2. Replace the BICU.</li> <li>3. Replace the harness.</li> </ol>              |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 161 | D    | IPU error   |
|     |      | The error result of self-diagnostic by the Taurus (ASIC on the IPU) is detected.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective BICU</li> <li>▪ Defective connection between BICU and SBU</li> </ul>       |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connection between BICU and SBU.</li> <li>2. Replace the BICU.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 165 | D    | Copy Data Security Unit error   |
|     |      | <ul style="list-style-type: none"> <li>▪ The copy data security board is not detected when the copy data security function is set "ON" with the initial setting.</li> <li>▪ A device check error occurs when the copy data security function is set "ON" with the initial setting.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Incorrect installation of the copy data security board</li> <li>▪ Defective copy data security board</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Reinstall the copy data security board.</li> <li>2. Replace the copy data security board.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 195 | D    | Serial Number Mismatch  |
|     |      | <ul style="list-style-type: none"> <li>▪ Serial number stored in the memory does not have the correct code.</li> </ul>  |
|     |      | <ul style="list-style-type: none"> <li>▪ NVRAM defective</li> <li>▪ BICU replaced without original NVRAM</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Check the serial number with SP5-811-002.</li> <li>2. If the stored serial number is incorrect, contact your supervisor.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 202 | D    | Polygon motor error 1: ON timeout   |
|     |      | The polygon mirror motor does not reach the targeted operating speed within the specified time after turning on or changing speed   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective or disconnected harness to polygon motor driver board</li> <li>▪ Defective polygon motor driver board</li> <li>▪ Defective polygon motor.</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the polygon motor.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the harness.</li> <li>4. Replace the BICU.</li> </ol>       |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 203 | D    | Polygon motor error 2: OFF timeout   |
|     |      | The polygon mirror motor does leave the READY status within 3 seconds after the polygon motor switches off.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Disconnected or defective harness to polygon motor driver board</li> <li>▪ Defective polygon motor driver board</li> <li>▪ Defective polygon motor</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the polygon motor.</li> </ol>  |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 204 | D    | Polygon motor error 3: XSCRDY signal error   |
|     |      | The SCRDY_N signal goes HIGH (inactive) while the laser diode is firing.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Disconnected or defective harness to polygon motor driver board</li> <li>▪ Defective polygon motor</li> <li>▪ Defective polygon motor driver board</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the polygon motor.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 210 | C    | Laser synchronizing detection error: end position [K]  |
| 211 | C    | Laser synchronizing detection error: end position [Y]  |
| 212 | C    | Laser synchronizing detection error: end position [M]  |
| 213 | C    | Laser synchronizing detection error: end position [C]  |
|     |      | The laser synchronizing detection signal for the end position of LDB [K], [Y], [M], [C] is not detected for one second after the LDB unit turned on when detecting the main scan magnification.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Disconnected or defective harness to synchronizing detector for end position</li> <li>▪ Defective synchronizing detector board</li> <li>▪ Defective LD board or driver</li> <li>▪ Defective BICU</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the harness of the LD board.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the BICU.</li> </ol>   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 220 | D    | Laser synchronizing detection error: start position [K]   |
| 222 | D    | Laser synchronizing detection error: start position [Y]   |
| 224 | D    | Laser synchronizing detection error: start position [M]   |
| 226 | D    | Laser synchronizing detection error: start position [C]   |
|     |      | The laser synchronizing detection signal for the start position of the LDB [K], [Y], [M], [C] is not output for two seconds after LDB unit turns on while the polygon motor is rotating normally.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Disconnected cable from the laser synchronizing detection unit or defective connection</li> <li>▪ Defective laser synchronizing detector</li> <li>▪ Defective LDB</li> <li>▪ Defective BICU</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connectors.</li> <li>2. Replace the laser-synchronizing detector.</li> <li>3. Replace the LDB.</li> <li>4. Replace the BICU.</li> </ol>   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 230 | D    | FGATE ON error: Bk   |
|     |      | The PFGATE ON signal does not assert within 5 seconds after processing the image in normal job or MUSIC for start position [K].  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective ASIC (Lupus)</li> <li>▪ Poor connection between controller and BICU.</li> <li>▪ Defective BICU</li> </ul>                                 |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connection between the controller board and the BICU.</li> <li>2. Replace the BICU.</li> <li>3. Replace the controller board.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 231 | D    | FGATE OFF error: Bk   |
|     |      | <ul style="list-style-type: none"> <li>▪ The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for end position [K].</li> <li>▪ The PFGATE ON signal still asserts when the next job starts.</li> </ul> |
|     |      | See SC 230 for troubleshooting details.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 232 | D    | FGATE ON error: Y   |
|     |      | The PFGATE ON signal does not assert within 5 seconds after processing the image in normal job or MUSIC for start position [Y]. |
|     |      | See SC 230 for troubleshooting details.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 233 | D    | FGATE OFF error: Y  |
|     |      | <ul style="list-style-type: none"> <li>▪ The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for end position [Y].</li> <li>▪ The PFGATE ON signal still asserts when the next job starts.</li> </ul> |
|     |      | See SC 230 for troubleshooting details.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 234 | D    | FGATE ON error: M   |
|     |      | The PFGATE ON signal does not assert within 5 seconds after processing the image in normal job or MUSIC for start position [M]. |
|     |      | See SC 230 for troubleshooting details.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 235 | D    | FGATE OFF error: M  |
|     |      | <ul style="list-style-type: none"> <li>▪ The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for end position [M].</li> <li>▪ The PFGATE ON signal still asserts when the next job starts.</li> </ul> |
|     |      | See SC 230 for troubleshooting details.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 236 | D    | FGATE ON error: C   |
|     |      | The PFGATE ON signal does not assert within 5 seconds after processing the image in normal job or MUSIC for start position [C]. |
|     |      | See SC 230 for troubleshooting details.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 237 | D    | FGATE OFF error: C  |
|     |      | <ul style="list-style-type: none"> <li>▪ The PFGATE ON signal still asserts within 5 seconds after processing the image in normal job or MUSIC for end position [C].</li> <li>▪ The PFGATE ON signal still asserts when the next job starts.</li> </ul> |
|     |      | See SC 230 for troubleshooting details.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 240 | C    | LD error: Bk   |
| 241 | C    | LD error: Y  |
| 242 | C    | LD error: M  |
| 243 | C    | LD error: C  |
|     |      | The BICU detects LDB error a few times consecutively when LDB unit turns on after LDB initialization.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Worn-out LD</li> <li>▪ Disconnected or broken harness of the LD</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the harness of the LD.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the BICU.</li> </ol> |

Trouble shooting

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 285 | D    | Line position adjustment (MUSIC) error  |
|     |      | Line position adjustment fails four consecutive times.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Pattern sampling error ( insufficient image density )</li> <li>▪ Defective ID sensors for the line position adjustment</li> <li>▪ Defective image transfer belt unit</li> <li>▪ Defective PCU(s)</li> <li>▪ Defective laser optics housing unit</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Do the recovery procedure for SC285 (see "Laser Optics Housing Unit" in "Replacement &amp; Adjustment").</li> <li>2. Check and reinstall the image transfer belt unit and PCUs.</li> <li>3. Check if each toner bottle has enough toner.</li> <li>4. Replace the ID sensor.</li> <li>5. Replace the image transfer belt unit.</li> <li>6. Replace the PCU(s).</li> <li>7. Replace the laser optics housing unit.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 290 | D    | Shutter sensor time over error: Close  |
|     |      | The shutter close sensor does not detect "ON" for 2000msec after the shutter motor turns on.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective shutter close sensor</li> <li>▪ Disconnected or broken harness</li> <li>▪ Defective shutter motor</li> <li>▪ Defective shutter</li> <li>▪ Shutter motor overload</li> <li>▪ Defective IOB</li> </ul>                |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the shutter on the laser optics housing unit.</li> <li>3. Replace the shutter motor.</li> <li>4. Replace the shutter close sensor.</li> <li>5. Replace the IOB.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 291 | C    | Shutter overrun error 1: Close   |
|     |      | The shutter close sensor loses the "ON" signal after the shutter was closed.                                   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective motor</li> <li>▪ Change of load to shutter motor</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the shutter on the laser optics housing unit.</li> </ol>     |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 292 | D    | Shutter overrun error 2: Close   |
|     |      | The shutter close sensor detects "ON" after SC 291 has occurred.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective motor</li> <li>▪ Change of load to shutter motor</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the shutter on the laser optics housing unit.</li> </ol>     |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 293 | D    | Shutter sensor time over error: Open   |
|     |      | The shutter open sensor does not detect "ON" for 2000msec after the shutter motor turns on.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective shutter close sensor</li> <li>▪ Disconnected or broken harness</li> <li>▪ Defective shutter motor</li> <li>▪ Defective shutter</li> <li>▪ Shutter motor overload</li> <li>▪ Defective IOB</li> </ul>                |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the shutter on the laser optics housing unit.</li> <li>3. Replace the shutter motor.</li> <li>4. Replace the shutter close sensor.</li> <li>5. Replace the IOB.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 294 | C    | Shutter overrun error 1: Open  |
|     |      | The shutter open sensor loses the "ON" signal after the shutter was closed.                                    |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective motor</li> <li>▪ Change of load to shutter motor</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the shutter on the laser optics housing unit.</li> </ol>     |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 295 | D    | Shutter overrun error 2: Open  |
|     |      | The shutter open sensor detects "ON" after SC 291 has occurred.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective motor</li> <li>▪ Change of load to shutter motor</li> </ul> |
|     |      | 1. Replace the shutter on the laser optics housing unit.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 296 | D    | Shutter open/close sensor error  |
|     |      | Both shutter open sensor and close sensor detect "ON" at the same time.                                  |
|     |      | <ul style="list-style-type: none"> <li>▪ Broken harness(es) of the shutter open/close sensors</li> </ul> |
|     |      | 1. Replace the shutter on the laser optics housing unit.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 300 | D    | AC charge output error [K]   |
| 301 | D    | AC charge output error [M]   |
| 302 | D    | AC charge output error [C]   |
| 303 | D    | AC charge output error [Y]   |
|     |      | The measured voltage is not proper when BICU measures the charge output for each color.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Disconnected or broken high voltage cable</li> <li>▪ Defective or not installed PCU</li> <li>▪ Defective high voltage power supply</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the connectors.</li> <li>2. Replace the PCU for black.</li> <li>3. Replace the high voltage power supply.</li> </ol>        |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 325 | D    | Color development motor error  |
|     |      | The motor LOCK signal is not detected for more than two seconds while the motor START signal is on.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Color development motor slip due to an increase in the torque</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Adjust the torque properly by replacing or cleaning the development unit.</li> <li>2. Replace the color development motor if the load torque is normal.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 360 | D    | TD sensor (Vt high) error 1: K   |
| 361 | D    | TD sensor (Vt high) error 1: M   |
| 362 | D    | TD sensor (Vt high) error 1: C   |
| 363 | D    | TD sensor (Vt high) error 1: Y   |
|     |      | <ul style="list-style-type: none"> <li>▪ The Vt value of the black, magenta, cyan, or yellow TD sensor exceeds the specified value (default: 4.7V) with SP3020-002 for twenty counts.</li> <li>▪ The [Vt - Vtref] value of the black, magenta, cyan, or yellow TD sensor exceeds the specified value (default: 5.0V) with SP3020-001.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Black, magenta, cyan, or yellow TD sensor disconnected</li> <li>▪ Harness between TD sensor and PCU defective</li> <li>▪ Defective TD sensor.</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the black, magenta, cyan, or yellow TD sensor connector and harness between the TD sensor and PCU for damage.</li> <li>2. Check the drawer connector.</li> <li>3. Replace the defective PCU.</li> </ol>  |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 380 | C    | Drum gear position sensor error  |
|     |      | The machine does not detect the drum position signal for three second at the drum phase adjustment.                      |
|     |      | <ul style="list-style-type: none"> <li>▪ Dirty or defective drum gear position sensor</li> </ul>                         |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the drum gear position sensor.</li> <li>2. Replace the PCU.</li> </ol> |

⇒

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 396 | D    | Black Development/PCU drive motor error   |
|     |      | The machine detects a High signal from the Black Development/PCU drive motor for two continuous seconds.                                    |
|     |      | <ul style="list-style-type: none"> <li>• Motor overload</li> <li>• Defective Black Development/PCU drive motor</li> </ul>                   |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness</li> <li>2. Replace the Black Development/PCU drive motor</li> </ol> |

⇒

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 397 | D    | Color drum drive motor error   |
|     |      | The machine detects a High signal from the color drum drive motor for two continuous seconds.                                    |
|     |      | <ul style="list-style-type: none"> <li>• Motor overload</li> <li>• Defective color drum drive motor</li> </ul>                   |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness</li> <li>2. Replace the color drum drive motor</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 400 | D    | ID sensor adjustment error   |
|     |      | When the Vsg error counter reaches "3", the machine detects "SC400". The Vsg error counter counts "1" when the Vsg detected by ID sensor is more than the value (default: 4.5V) specified with SP3234-005 or less than the value (default: 3.5V) specified with SP SP3234-006.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Dirty or defective ID sensor</li> <li>▪ Defective ID sensor shutter</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the harness of the ID sensor.</li> <li>2. Clean or replace the ID sensor.</li> </ol> <div style="border: 1px solid blue; padding: 2px; margin-bottom: 5px;"> <span style="color: blue;">↓</span> Note         </div> <ul style="list-style-type: none"> <li>▪ After replacing the ID sensor, input the ID sensor correction coefficient with SP3362-013 to -018. For details, refer to "ID sensor board" in the Replacement and Adjustment section.</li> </ul> <ol style="list-style-type: none"> <li>3. Replace the IOB.</li> <li>4. Replace the image transfer belt unit.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 441 | D    | Image transfer unit motor error   |
|     |      | The motor LOCK signal is not detected for more than two seconds while the motor START signal is on.                     |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor overload</li> <li>▪ Defective image transfer unit motor</li> </ul>       |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the image transfer belt unit.</li> <li>2. Replace the IOB.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 442 | D    | Image transfer belt contact motor error  |
|     |      | The image transfer belt contact sensor does not detect the movement of actuator at the sensor while the polygon motor rotates.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Dirty image transfer belt contact sensor</li> <li>▪ Defective image transfer belt contact motor</li> <li>▪ Disconnected connector of image transfer belt contact sensor or motor</li> <li>▪ Disconnected cable</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the image transfer belt contact sensor.</li> <li>2. Replace the image transfer belt contact motor.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 443 | D    | Image transfer unit error   |
|     |      | The machine detects the encoder sensor error.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective encoder sensor</li> <li>▪ Image transfer unit installation error</li> <li>▪ Defective image transfer unit motor</li> </ul>                           |
|     |      | <ol style="list-style-type: none"> <li>1. Check if the image transfer unit is correctly set.</li> <li>2. Replace the image transfer unit motor.</li> <li>3. Replace the image transfer unit.</li> </ol> |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 452 | D    | Paper transfer unit contact error  |
|     |      | The paper transfer unit contact sensor does not detect the movement of actuator at the sensor while the polygon motor rotates.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective paper transfer unit contact sensor</li> <li>▪ Defective paper transfer unit contact motor</li> <li>▪ Broken +24V fuse on PSU</li> <li>▪ Defective IOB</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connection between the paper transfer unit and PSU.</li> <li>2. Replace the paper transfer unit contact sensor.</li> <li>3. Replace the paper transfer unit contact motor.</li> <li>4. Replace the +24V fuse on the PSU.</li> <li>5. Replace the IOB.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 460 | D    | Separation power pack output error   |
|     |      | An interrupt checks the status of the power pack every 20 ms. This SC is issued if the BICU detects a short in the power pack 10 times at D(ac).                                 |
|     |      | <ul style="list-style-type: none"> <li>▪ Damaged insulation on the high-voltage supply cable</li> <li>▪ Damaged insulation around the high-voltage power supply.</li> </ul>      |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the high-voltage supply cable.</li> <li>2. Replace the high-voltage power supply unit.</li> <li>3. Replace the IOB.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 490 | D    | Toner transport motor error  |
|     |      | The LOCK signal is not detected for 2 seconds when the transport motor turns on.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Toner transport motor overload</li> <li>▪ Disconnected or broken harness</li> <li>▪ Defective toner transport motor</li> <li>▪ Opened +24V fuse on the PSU</li> <li>▪ Defective interlock switch</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the toner transport motor.</li> <li>3. Replace the +24V fuse on the PSU.</li> <li>4. Replace the interlock switch.</li> </ol>                            |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 491 | D    | High voltage power: Drum/ development bias output error  |
|     |      | An error signal is detected for 0.2 seconds when charging the drum or development.   |
|     |      | <ul style="list-style-type: none"> <li>▪ High voltage leak</li> <li>▪ Broken harness</li> <li>▪ Defective drum unit or development unit</li> <li>▪ Defective high voltage supply unit</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the drum unit or paper transfer unit.</li> <li>3. Replace the high voltage supply unit.</li> </ol>   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 492 | D    | High voltage power: Image transfer/ paper transfer bias output error   |
|     |      | An error signal is detected for 0.2 seconds when charging the separation, image transfer bet or paper transfer roller.   |
|     |      | <ul style="list-style-type: none"> <li>▪ High voltage leak</li> <li>▪ Broken harness</li> <li>▪ Defective image transfer belt unit or paper transfer unit</li> <li>▪ Defective high voltage supply unit</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check or replace the harness.</li> <li>2. Replace the image transfer belt unit or paper transfer unit.</li> <li>3. Replace the high voltage supply unit.</li> </ol>      |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 498 | C    | Temperature and humidity sensor error 2  |
|     |      | <ul style="list-style-type: none"> <li>▪ The thermistor output of the temperature sensor was not within the prescribed range (0.5V to 4.2V).</li> <li>▪ The thermistor output of the humidity sensor was not within the prescribed range (0.01V to 2.4V).</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Temperature and humidity sensor harness disconnected, loose, defective</li> <li>▪ Temperature and humidity sensor defective</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connector and harness.</li> <li>2. Replace the temperature/humidity sensor.</li> </ol>   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 501 | B    | Paper Tray 1 error   |
| 502 | B    | Paper Tray 2 error   |
|     |      | When the tray lift motor is turned on, (if the upper limit is not detected within 10 seconds), the machine asks the user to reset the tray. If this condition occurs three consecutive times, the SC is generated. |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective paper lift sensor</li> <li>▪ Defective tray lift motor</li> <li>▪ Defective bottom plate lift mechanism</li> <li>▪ Defective IOB</li> </ul>                     |
|     |      | <ol style="list-style-type: none"> <li>1. Check if the bottom plate smoothly moves up and down manually.</li> <li>2. Check and/or replace the tray lift motor.</li> <li>3. Replace the IOB.</li> </ol>             |

| No.    | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|--------|------|---|
| 503-01 | B    | Tray 3 error (Paper Feed Unit or LCT)   |
|        |      | <p><b>For the paper feed unit:</b></p> <ul style="list-style-type: none"> <li>▪ When the tray lift motor is turned on, the upper limit is not detected within 10 seconds</li> </ul> <p><b>For the LCT:</b></p> <ul style="list-style-type: none"> <li>▪ SC 503-01 occurs if the upper or lower limit is not detected within 8 seconds when the tray lift motor is turned on to lift or lower the tray.</li> </ul>   |
|        |      | <p><b>For the paper feed unit:</b></p> <ul style="list-style-type: none"> <li>▪ Defective tray lift motor or connector disconnection</li> <li>▪ Defective lift sensor or connector disconnection</li> </ul> <p><b>For the LCT:</b></p> <ul style="list-style-type: none"> <li>▪ Defective stack transport clutch or connector disconnection</li> <li>▪ Defective tray motor or connector disconnection</li> <li>▪ Defective end fence home position sensor or connector disconnection</li> <li>▪ Defective upper limit sensor or connector disconnection</li> <li>▪ Defective tray lift motor or connector disconnection</li> </ul> |
|        |      | <ol style="list-style-type: none"> <li>1. Check the cable connections.</li> <li>2. Check and/or replace the defective component.</li> </ol>   |

| No.    | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|--------|------|---|
| 503-02 | B    | Tray 3 error (Paper Feed Unit or LCT)   |
|        |      | <p>This SC is generated if the following condition occurs 3 consecutive times.</p> <p><b>For the paper feed unit:</b></p> <ul style="list-style-type: none"> <li>▪ When the tray lowers, the tray lift sensor does not go off within 1.5 sec.</li> </ul> <p><b>For the LCT:</b></p> <ul style="list-style-type: none"> <li>▪ When the main switch is turned on or when the LCT is set, if the end fence is not in the home position (home position sensor ON), the tray lift motor stops.</li> <li>▪ If the upper limit does not go off for 1.5 seconds even the tray lift motor turns on to lower the tray after the upper limit has been detected at power on.</li> </ul> |
|        |      | <p><b>For the paper feed unit:</b></p> <ul style="list-style-type: none"> <li>▪ Defective tray lift motor or connector disconnection</li> <li>▪ Defective lift sensor or connector disconnection</li> </ul> <p><b>For the LCT:</b></p> <ul style="list-style-type: none"> <li>▪ Defective stack transport clutch or connector disconnection</li> <li>▪ Defective tray motor or connector disconnection</li> <li>▪ Defective end fence home position sensor or connector disconnection</li> </ul>  |
|        |      | <ol style="list-style-type: none"> <li>1. Check the cable connections.</li> <li>2. Check and/or replace the defective component.</li> </ol>   |

| No.    | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|--------|------|---|
| 504-01 | B    | Tray 4 error (Paper Feed Unit or LCT)   |
|        |      | <p><b>For the two-tray paper feed unit</b></p> <p>When the tray lift motor is turned on, the upper limit is not detected within 10 seconds. If this condition occurs three consecutive times, the SC is generated.</p> <p><b>For the LCT</b></p> <p>If the upper or lower limit is not detected within 8 seconds when the tray lift motor is turned on to lift up or lower the tray</p> |
|        |      | <ul style="list-style-type: none"> <li>▪ Defective tray lift motor or connector disconnection</li> <li>▪ Defective lift sensor or connector disconnection</li> </ul>  |
|        |      | <ol style="list-style-type: none"> <li>1. Check the cable connections.</li> <li>2. Check and/or replace the defective component.</li> </ol>   |

| No.    | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|--------|------|--|
| 504-02 | B    | Tray 4 error (3 Tray Paper Feed Unit)  |
|        |      | This SC is generated if the following condition occurs 3 consecutive times.<br><b>For the two-tray paper feed unit</b> <ul style="list-style-type: none"> <li>▪ When the tray lowers, the tray lift sensor does not go off within 1.5 sec.</li> </ul> <b>For the LCT</b> <ul style="list-style-type: none"> <li>▪ If the upper limit does not go off for 1.5 seconds even the tray lift motor turns on to lower the tray after the upper limit has been detected at power on.</li> </ul> |
|        |      | <ul style="list-style-type: none"> <li>▪ Defective tray lift motor or connector disconnection</li> <li>▪ Defective lift sensor or connector disconnection</li> </ul>   |
|        |      | <ol style="list-style-type: none"> <li>1. Check the cable connections.</li> <li>2. Check and/or replace the defective component.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 530 | D    | Fusing/Paper exit fan error  |
|     |      | The BICU does not receive the lock signal 10 seconds after turning on the fusing/paper exit fan.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective fusing/paper exit fan motor or connector disconnection</li> <li>▪ Defective BICU</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connector and/or replace the fusing/paper exit fan motor.</li> </ol>                       |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)                                   |
|-----|------|---|
| 531 | D    | Drive unit fan error  |
|     |      | The BICU does not receive the lock signal 10 seconds after turning on the drive unit fan motor. |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective drive unit fan motor</li> </ul>              |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the drive unit fan motor.</li> </ol>          |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 532 | D    | Ventilation fan (at the left side of the machine) motor-front/rear error  |
|     |      | The BICU does not receive the lock signal 10 seconds after turning on the ventilation fan motor-front/rear.                             |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective ventilation fan motor-front or rear</li> </ul>                                       |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the ventilation fan (at the left side of the machine) motor-front or rear.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 533 | D    | Toner supply tube fan error   |
|     |      | The BICU does not receive the lock signal 10 seconds after turning on the toner supply tube fan motor.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective toner supply tube fan motor-front or rear</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the toner supply tube fan motor.</li> </ol>           |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 534 | D    | Fusing exit sensor fan error  |
|     |      | The BICU does not receive the lock signal 10 seconds after turning on the fusing fan motor.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective fusing fan motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the fusing exit sensor fan motor (at the front right side of the machine).</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)                                |
|-----|------|--|
| 535 | D    | PSU fan 1/2 error  |
|     |      | The BICU does not receive the lock signal 10 seconds after turning on the PSU fan 1/2 motor. |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective PSU fan motor 1/2</li> </ul>              |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the PSU fan motor 1/2</li> </ol>           |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 536 | D    | Controller fan error   |
|     |      | The motor lock signal error is detected for 10 seconds after the motor lock signal was first detected. |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective controller fan motor</li> </ul>                     |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the controller fan motor.</li> </ol>                 |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 540 | D    | Fusing/Paper exit motor error   |
|     |      | The BICU does not receive the lock signal 10 seconds after turning on the Fusing/Paper exit motor.              |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor overload</li> <li>▪ Defective fusing/paper exit motor</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the fusing/paper exit motor.</li> </ol>                       |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 541 | A    | Heating roller thermopile error 1  |
|     |      | The temperature measured by the heating roller thermopile does not reach 0°C for 6 seconds.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Loose connection of the heating roller thermopile</li> <li>▪ Defective thermopile</li> </ul>                |
|     |      | <ol style="list-style-type: none"> <li>1. Check if the heating roller thermopile is firmly connected.</li> <li>2. Replace the thermopile.</li> </ol> |

Trouble shooting

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 542 | A    | Heating roller warm-up error 1  |
|     |      | <ul style="list-style-type: none"> <li>▪ After the main switch is turned on or the cover is closed, the increment of the heating roller temperature per 10 seconds is 30°C or less. If this condition is detected five times consecutively, SC 542 is defined.</li> <li>▪ The temperature detected by the heating roller thermopile does not reach 100°C for 15 seconds after the heating lamp is on.</li> <li>▪ The heating roller temperature does not reach the ready temperature while 60 seconds after the heating lamp is on.</li> <li>▪ The center temperature of the heating roller does not reach the ready temperature for 30 seconds after the both edge temperature of the heating roller has reached the ready temperature.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Dirty or defective thermopile</li> <li>▪ Defective thermistor</li> <li>▪ Defective heating roller lamp</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check if the heating roller thermistor is firmly connected.</li> <li>2. Replace the thermistor.</li> <li>3. Check or replace the thermopile.</li> <li>4. Replace the heating roller lamp.</li> </ol>  |

| ⇒ No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-------|------|--|
| 543   | A    | Heating roller fusing lamp overheat 1 (software error)   |
|       |      | The temperature detected by the heating roller thermopile stays at 230°C for 1 second.   |
|       |      | <ul style="list-style-type: none"> <li>▪ Defective PSU</li> <li>▪ Defective IOB</li> <li>▪ Defective BICU</li> </ul>             |
|       |      | <ol style="list-style-type: none"> <li>1. Replace the PSU.</li> <li>2. Replace the IOB.</li> <li>3. Replace the BICU.</li> </ol> |

| ⇒ No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-------|------|---|
| 544   | A    | Heating roller fusing lamp overheat 1 (hardware error)  |
|       |      | The temperature detected by the heating roller thermopile reaches 250 °C.   |
|       |      | <ul style="list-style-type: none"> <li>▪ Defective PSU</li> <li>▪ Defective IOB</li> <li>▪ Defective BICU</li> <li>▪ Defective fusing control system</li> </ul> |
|       |      | <ol style="list-style-type: none"> <li>1. Replace the PSU.</li> <li>2. Replace the IOB.</li> <li>3. Replace the BICU.</li> </ol>                                |

Trouble shooting

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 545 | A    | Heating roller fusing lamp consecutive full power 1   |
|     |      | When the fusing unit is not running in the ready condition, the heating roller fusing lamp keeps ON full power for 8 seconds or more. |
|     |      | <ul style="list-style-type: none"> <li>▪ Broken heating roller fusing lamp</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the heating roller fusing lamp.</li> <li>2. Replace the PSU.</li> </ol>             |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 547 | D    | Zero cross error  |
|     |      | <ul style="list-style-type: none"> <li>▪ The zero cross signal is detected three times even though the heater relay is off when turning on the main power.</li> <li>▪ The zero cross signal is not detected for 2 seconds even though the heater relay is on after turning on the main power or closing the front door.</li> <li>▪ The detection error occurs twice or more in the 11 zero cross signal detections. This error is defined when the detected zero cross signal is less than 45.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective fusing lamp relay</li> <li>▪ Defective fusing lamp relay circuit</li> <li>▪ Unstable power supply</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Check the power supply source.</li> <li>2. Replace the PSU</li> </ol>   |

| ⇒ No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-------|------|---|
| 551   | A    | Heating roller thermistor error   |
|       |      | The temperature detected by the heating roller thermistor does not reach 0 °C for 6 seconds.  |
|       |      | <ul style="list-style-type: none"> <li>▪ Loose connection of heating roller thermistor</li> <li>▪ Defective heating roller thermistor</li> <li>▪ Defective thermopile</li> </ul>                        |
|       |      | <ol style="list-style-type: none"> <li>1. Check if the heating roller thermistor is firmly connected.</li> <li>2. Replace the heating roller thermistor.</li> <li>3. Replace the thermopile.</li> </ol> |

| ⇒ No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-------|------|--|
| 552   | A    | Heating roller warm-up error 2   |
|       |      | After the main switch is turned on or the door is closed, the temperature detected by the heating roller thermistor does not reach the ready temperature within 70 seconds during fusing unit warm-up. |
|       |      | <ul style="list-style-type: none"> <li>▪ Heating roller fusing lamp broken</li> </ul>  |
|       |      | <ol style="list-style-type: none"> <li>1. Check if the heating roller thermistor is firmly connected.</li> <li>2. Replace the heating roller fusing lamp.</li> </ol>                                   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 553 | A    | Heating roller fusing lamp overheat 2 (software error)   |
|     |      | The temperature detected by the heating roller thermistor stays at 230°C or more for 1 second.                                   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective PSU</li> <li>▪ Defective IOB</li> <li>▪ Defective BICU</li> </ul>             |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the PSU.</li> <li>2. Replace the IOB.</li> <li>3. Replace the BICU.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 554 | A    | Heating roller fusing lamp overheat 1 (hardware error)  |
|     |      | The temperature detected by the heating roller thermistor reaches 250°C or more.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective PSU</li> <li>▪ Defective IOB</li> <li>▪ Defective BICU</li> <li>▪ Defective fusing control system</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the PSU.</li> <li>2. Replace the IOB.</li> <li>3. Replace the BICU.</li> </ol>                                |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 555 | A    | Heating roller lamp consecutive full power 2  |
|     |      | The heating roller fusing lamp stays ON for 8 seconds or more while the fusing unit is in the Ready condition.            |
|     |      | <ul style="list-style-type: none"> <li>▪ Broken heating roller fusing lamp</li> </ul>                                     |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the heating roller fusing lamp.</li> <li>2. Replace the PSU.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 557 | C    | Zero cross frequency error   |
|     |      | When the zero cross signal is 66 or more and it is detected 10 times or more in 11 detections, the machine determines that input 60 Hz and SC557 occurs. |
|     |      | <ul style="list-style-type: none"> <li>▪ Noise (High frequency)</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Check the power supply source.</li> </ol>  |

Trouble shooting

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 559 | A    | Consecutive fusing jam  |
|     |      | The paper jam counter for the fusing unit reaches 3 times. The paper jam counter is cleared if the paper is fed correctly.                    |
|     |      | This SC is activated only when SP1159-001 is set to "1" (default "0").  |
|     |      | <ul style="list-style-type: none"> <li>▪ Paper jam in the fusing unit.</li> </ul>   |
|     |      | Remove the paper that is jammed in the fusing unit. Then make sure that the fusing unit is clean and has no obstacles in the paper feed path. |

⇒

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 561 | A    | Pressure roller thermistor error  |
|     |      | The temperature measured by the pressure roller thermistor does not reach 0 °C for 20 seconds.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Loose connection of the pressure roller thermistor</li> <li>▪ Defective thermopile</li> <li>▪ Defective pressure roller thermistor</li> </ul>                    |
|     |      | <ol style="list-style-type: none"> <li>1. Check if the pressure roller thermistor is firmly connected.</li> <li>2. Replace the thermopile.</li> <li>3. Replace the pressure roller thermistor.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 563 | A    | Pressure roller fusing lamp overheat (software error)  |
|     |      | The temperature detected by the pressure roller thermistor stays at 230°C or more for 1 second.                                  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective PSU</li> <li>▪ Defective IOB</li> <li>▪ Defective BICU</li> </ul>             |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the PSU.</li> <li>2. Replace the IOB.</li> <li>3. Replace the BICU.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 564 | A    | Pressure roller fusing lamp overheat (hardware error)   |
|     |      | The temperature detected by the pressure roller thermistor reaches 250°C or more.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective PSU</li> <li>▪ Defective IOB</li> <li>▪ Defective BICU</li> <li>▪ Defective fusing control system</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the PSU.</li> <li>2. Replace the IOB.</li> <li>3. Replace the BICU.</li> </ol>                                |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 565 | A    | Pressure roller lamp consecutive full power   |
|     |      | The pressure roller-fusing lamp stays ON at full power for 120 seconds or more while the fusing unit is in the Ready condition. |
|     |      | <ul style="list-style-type: none"><li>▪ Broken pressure roller fusing lamp</li></ul>  |
|     |      | <ol style="list-style-type: none"><li>1. Replace the pressure roller fusing lamp.</li><li>2. Replace the PSU.</li></ol>         |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 610 | D    | Mechanical counter error: Bk   |
| 611 | D    | Mechanical counter error: FC   |
|     |      | This SC is only for NA models.<br>The machine detects the mechanical counter error when SP5987-001 is set to "1".        |
|     |      | <ul style="list-style-type: none"><li>▪ Disconnected mechanical counter</li><li>▪ Defective mechanical counter</li></ul> |
|     |      | <ol style="list-style-type: none"><li>1. Check or replace the mechanical counter.</li></ol>                              |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 620 | D    | ARDF communication error  |
|     |      | After the ARDF is detected, the break signal occurs or communication timeout occurs.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Incorrect installation of ARDF</li> <li>▪ ARDF defective</li> <li>▪ BICU board defective</li> <li>▪ External noise</li> </ul>                                  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the cable connection of the ARDF.</li> <li>2. Shut out the external noise.</li> <li>3. Replace the ARDF.</li> <li>4. Replace the BICU board.</li> </ol> |

Trouble shooting

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 621 | D    | Finisher communication error  |
| 622 | D    | Paper tray unit communication error   |
|     |      | <p>While the BICU communicates with an optional unit, an SC code is displayed if one of following conditions occurs.</p> <ul style="list-style-type: none"> <li>▪ The BICU receives the break signal which is generated by the peripherals only just after the main switch is turned on.</li> <li>▪ When the BICU does not receive an OK signal from a peripheral 100ms after sending a command to it. The BICU resends the command. The BICU does not receive an OK signal after sending the command 3 times.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Cable problems</li> <li>▪ BICU problems</li> <li>▪ PSU problems in the machine</li> <li>▪ Main board problems in the peripherals</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check if the cables of peripherals are correctly connected.</li> <li>2. Replace the PSU if no power is supplied to peripherals.</li> <li>3. Replace the BICU or main board of peripherals.</li> </ol>   |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)                |
|-----|----------|--|
| 630 | CTL<br>C | CSS communication error  |
|     |          | A communication error occurred during communication with the CSS.            |
|     |          | <ul style="list-style-type: none"> <li>▪ Communication line error</li> </ul> |
|     |          | Logging only.  |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 632 | CTL<br>B | MF accounting device error 1  |
|     |          | The controller sends data to the accounting device, but the device does not respond. This occurs three times.         |
|     |          | <ul style="list-style-type: none"> <li>▪ Loose connection between the controller and the accounting device</li> </ul> |
|     |          | <ol style="list-style-type: none"> <li>1. Check the connection.</li> </ol>  |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 633 | CTL<br>B | MF accounting device error 2  |
|     |          | After communication is established, the controller receives the brake signal from the accounting device.              |
|     |          | <ul style="list-style-type: none"> <li>▪ Loose connection between the controller and the accounting device</li> </ul> |
|     |          | <ol style="list-style-type: none"> <li>1. Check the connection.</li> </ol>  |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 634 | CTL<br>B | MF accounting device error 3  |
|     |          | The accounting device sends the controller the report that indicates a backup RAM error has occurred.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective controller of the MF accounting device</li> <li>▪ Battery error</li> </ul>   |
|     |          | <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Replace the controller board of the accounting device.</li> <li>3. Replace the battery.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 635 | CTL<br>B | MF accounting device error 4  |
|     |          | The accounting device sends the controller the report that indicates the battery voltage error has occurred.  |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective controller of the MF accounting device</li> <li>▪ Battery error</li> </ul>   |
|     |          | <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Replace the controller board of the accounting device.</li> <li>3. Replace the battery.</li> </ol> |

| No.  | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|------|----------|--|
| 650  | CTL<br>B | Communication error of the remote service modem (Cumin-M)  |
| -001 |          | Authentication error   |
|      |          | The authentication for the Cumin-M fails at a dial up connection.  |
|      |          | <ul style="list-style-type: none"> <li>▪ Incorrect SP settings</li> <li>▪ Disconnected telephone line</li> <li>▪ Disconnected modem board</li> </ul> |
|      |          | <ol style="list-style-type: none"> <li>1. Check and set the correct user name (SP5816-156) and password (SP5816-157).</li> </ol>                     |
| -004 |          | Incorrect modem setting  |
|      |          | Dial up fails due to the incorrect modem setting.  |
|      |          | Same as -001   |
|      |          | <ol style="list-style-type: none"> <li>1. Check and set the correct AT command (SP5819-160).</li> </ol>  |
| -005 |          | Communication line error   |
|      |          | The supplied voltage is not sufficient due to the defective communication line or defective connection.  |



| No.  | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|------|------|---|
|      |      | Same as -001  |
|      |      | 1. Consult with the user's local telephone company.   |
| -011 |      | Incorrect network setting   |
|      |      | Both the NIC and Cumin-M are activated at the same time.  |
|      |      | Same as -001  |
|      |      | 1. Disable the NIC with SP5985-1.   |
| -012 |      | Modem board error   |
|      |      | The modem board does not work properly even though the setting of the modem board is installed with a dial up connection.   |
|      |      | Same as -001  |
|      |      | <ol style="list-style-type: none"> <li>1. Install the modem board.</li> <li>2. Check and reset the modem board setting with SP5816.</li> <li>3. Replace the modem board.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 651 | CTL<br>C | Incorrect dial up connection  |
|     |          | -001: Program parameter error   |
|     |          | -002: Program execution error   |
|     |          | An unexpected error occurs when the modem (Cumin-M) tries to call the center with a dial up connection. |
|     |          | <ul style="list-style-type: none"> <li>▪ Caused by a software bug</li> </ul>                            |
|     |          | No action required because this SC does not interfere with operation of the machine.                    |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)                                    |
|-----|------|--|
| 669 | D    | EEPROM error   |
|     |      | Retry of EEPROM communication fails three times after the machine has detected the EEPROM error. |
|     |      | <ul style="list-style-type: none"> <li>▪ Caused by noise</li> </ul>                              |
|     |      | Turn the main power switch off and on.   |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 670 | CTL<br>D | No response from BICU at power on  |
|     |          | When the main power is turned on or the machine starts warming up from energy-saving mode, the controller does not receive a command signal from the BICU.                   |
|     |          | <ul style="list-style-type: none"> <li>▪ Loose connection</li> <li>▪ Defective controller</li> <li>▪ Defective BICU</li> </ul>   |
|     |          | <ol style="list-style-type: none"> <li>1. Check the connection between the BICU and controller.</li> <li>2. Replace the controller.</li> <li>3. Replace the BICU.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 672 | CTL<br>D | <p>Controller-to-operation panel communication error at startup</p> <ul style="list-style-type: none"> <li>▪ After the machine is powered on, the communication between the controller and the operation panel is not established, or communication with controller is interrupted after a normal startup.</li> <li>▪ After startup reset of the operation panel, the attention code or the attention acknowledge code is not sent from the controller within 15 seconds.</li> <li>▪ After the controller issues a command to check the communication line with the controller at 30-second intervals, the controller fails to respond twice.</li> </ul> |
|     |          | <ul style="list-style-type: none"> <li>▪ Controller stalled</li> <li>▪ Controller board installed incorrectly</li> <li>▪ Controller board defective</li> <li>▪ Operation panel connector loose or defective</li> <li>▪ The controller is not completely shutdown when you turn the main switch off.</li> </ul>   |
|     |          | <ol style="list-style-type: none"> <li>1. Check the setting of SP5875-001. If the setting is set to "1 (OFF)", change it to "0 (OFF)".</li> <li>2. Check the condition of the controller board.</li> <li>3. Check the condition of the operation panel.</li> <li>4. Replace the controller board.</li> <li>5. Replace the operation panel.</li> <li>6. Turn the main switch off, wait for one second or more, and turn the main switch on.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 681 | D    | RFID: Communication error <ul style="list-style-type: none"> <li>▪ Communication error occurs when the RFID starts to communicate with the RFID receptor.</li> <li>▪ Retry of RFID communication fails three times after the machine has detected the RFID communication error.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective RFID reader and writer</li> <li>▪ Disconnected ASAP I/F</li> <li>▪ No memory chip on the toner cartridge</li> <li>▪ Noise</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the RFID controller board.</li> <li>2. Replace the toner cartridge.</li> </ol>   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 682 | D    | Memory chip at TD sensor: Communication error  |
|     |      | Retry of memory chip communication fails three times after the machine has detected the memory chip communication error.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Damaged memory chip data</li> <li>▪ Disconnected inter face</li> <li>▪ No memory chip on the development unit</li> <li>▪ Noise</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the PCU.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 683 | B    | RFID: Unit check error  |
|     |      | The machine gets RFID communication error even the toner cartridges have not been installed in the machine. |
|     |      | Caused by noise   |
|     |      | 1. Turn the main power switch off and on.   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 687 | D    | Memory address command error  |
|     |      | The BICU does not receive a memory address command from the controller 120 seconds after paper is in the position for registration.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Loose connection</li> <li>▪ Defective controller</li> <li>▪ Defective BICU</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check if the controller is firmly connected to the BICU.</li> <li>2. Replace the controller.</li> <li>3. Replace the BICU.</li> </ol> |

Trouble shooting

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 690 | D    | GAVD communication error <ul style="list-style-type: none"> <li>▪ The I2C bus device ID is not identified during initialization.</li> <li>▪ A device-status error occurs during I2C bus communication.</li> <li>▪ The I2C bus communication is not established due to an error other than a buffer shortage.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Loose connection</li> <li>▪ Defective BICU</li> <li>▪ Defective LD controller board</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Check the cable connection.</li> <li>3. Replace the laser optics-housing unit.</li> <li>4. Replace the BICU board.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 721 | B    | Booklet finisher jogger motor error  |
|     |      | The jogger home position sensor is not activated within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor harness disconnected, loose, defective</li> <li>▪ Defective motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections to the jogger motor.</li> <li>2. Defective jogger motor.</li> </ol>                                |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 723 | B    | Booklet finisher stack feed out motor error  |
|     |      | The stack feed out home position sensor is not activated within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor harness disconnected, loose, defective</li> <li>▪ Defective motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>3. Check the connections to the stack feed out motor.</li> <li>4. Defective stack feed out motor.</li> </ol>                        |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 725 | B    | Finisher exit guide plate motor error   |
|     |      | After moving away from the guide plate position sensor, the exit guide is not detected at the home position within the prescribed time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Guide plate motor disconnected, defective</li> <li>▪ Guide plate motor overloaded due to obstruction</li> <li>▪ Guide plate position sensor disconnected, defective</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections and cables for the components mentioned above.</li> <li>2. Check for blockages in the guide plate motor mechanism.</li> <li>3. Replace the guide plate position sensor and/or guide plate motor</li> <li>4. Replace the finisher main board.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 730 | B    | Finisher Tray 1 shift motor error  |
|     |      | The shift roller HP sensor of the upper tray does not activate within the prescribed time after the shift tray starts to move toward or away from the home position. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.                                      |
|     |      | <ul style="list-style-type: none"> <li>▪ Shift tray HP sensor of the upper tray disconnected, defective</li> <li>▪ Shift tray motor of the upper tray is disconnected, defective</li> <li>▪ Shift tray motor of the upper tray overloaded due to obstruction</li> </ul>                          |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections and cables for the components mentioned above.</li> <li>2. Check for blockages in shift motor mechanism.</li> <li>3. Replace the shift tray HP sensor and/or shift motor</li> <li>4. Replace the finisher main board.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 740 | B    | Finisher corner stapler motor error  |
|     |      | <p>The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.</p> <p><b>For 1000-sheet (booklet) finisher</b></p> <ul style="list-style-type: none"> <li>▪ The stapler motor does not switch off within the prescribed time after operating.</li> <li>▪ The HP sensor of the staple unit does not detect the home position after the staple unit moves to its home position.</li> <li>▪ The HP sensor of the staple unit detects the home position after the staple unit moves from its home position.</li> </ul> <p><b>For 500-sheet finisher</b></p> <ul style="list-style-type: none"> <li>▪ The stapler HP sensor does not detect "ON"/"OFF" signal even the stapler moves from the "OFF"/"ON" position for 0.6 seconds.</li> <li>▪ The stapler HP sensor does not detect "ON" when a stapling job is commanded or the stapler moves.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Staple jam</li> <li>▪ Motor overload</li> <li>▪ Defective stapler motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections and cables for the components mentioned above.</li> <li>2. Replace the HP sensor and/or stapler motor</li> <li>3. Replace the finisher main board.</li> </ol>  |



| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 742 | B    | Finisher stapler movement motor error   |
|     |      | <p><b>For 1000-sheet (booklet) finisher</b></p> <ul style="list-style-type: none"> <li>▪ The stapler HP sensor is not activated within the specified time after the stapler motor turned on. (first detection: jam error, consecutive twice detection SC code).</li> </ul> <p><b>For 500-sheet finisher</b></p> <ul style="list-style-type: none"> <li>▪ The stapler HP sensor does not detect "OFF" signal even the stapler moves from the "ON" position for 0.35 seconds.</li> <li>▪ The stapler HP sensor does not detect "ON" signal even the stapler moves from the "OFF" position for 5.5 seconds.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor overload</li> <li>▪ Loose connection of the stapler home position sensor</li> <li>▪ Loose connection of the stapler movement motor</li> <li>▪ Defective stapler home position sensor</li> <li>▪ Defective stapler movement motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connection of the stapler movement motor.</li> <li>2. Check the connection of the stapler home position sensor.</li> <li>3. Replace the stapler home position sensor.</li> <li>4. Replace the stapler movement motor.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 746 | B    | 1000-sheet booklet finisher: Stack feed motor error <ul style="list-style-type: none"> <li>▪ The stack feed HP sensor does not detect "ON" twice (once: jam error) for specified time after the stack feed motor has turned on.</li> <li>▪ The stack feed HP sensor does not detect "OFF" twice (once: jam error) for specified time after the stack feed motor has turned on.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor overload</li> <li>▪ Loose connection of the stack feed motor</li> <li>▪ Defective stack feed motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections and cables for the stack feed motor and HP sensor.</li> <li>2. Check for blockages in the stack feed motor mechanism.</li> <li>3. Replace the stack feed HP sensor and/or stack feed motor</li> <li>4. Replace the finisher main board.</li> </ol>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 750 | B    | 1000-sheet (booklet) finisher: Tray lift motor error  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections to the shift tray motor.</li> <li>2. Defective shift tray motor.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 760 | B    | Finisher punch motor error   |
|     |      | The punch HP sensor is not activated within the specified time after the punch motor turned on. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Punch HP sensor disconnected, defective</li> <li>▪ Punch motor disconnected or defective</li> <li>▪ Punch motor overload due to obstruction</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections and cables for the punch motor and HP sensor.</li> <li>2. Check for blockages in the punch motor mechanism.</li> <li>3. Replace the punch HP sensor and/or punch motor</li> <li>4. Replace the finisher main board.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 761 | B    | Finisher folder plate motor error  |
|     |      | The folder plate moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code.  |
|     |      | <ul style="list-style-type: none"> <li>▪ Folder plate HP sensor disconnected, defective</li> <li>▪ Folder plate motor disconnected, defective</li> <li>▪ Folder plate motor overloaded due to obstruction.</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections and cables for the folder plate motor and HP sensor.</li> <li>2. Check for blockages in the folder plate motor mechanism.</li> <li>3. Replace the folder plate HP sensor and/or folder plate motor</li> <li>4. Replace the finisher main board.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 763 | B    | Punch movement motor error  |
|     |      | The punch unit moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor harness disconnected, loose, defective</li> <li>▪ Defective motor</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections to the punch movement motor.</li> <li>2. Defective punch movement motor</li> </ol>                              |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 764 | B    | Paper position sensor slide motor error  |
|     |      | The paper position sensor moves but is not detected at the home position within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor harness disconnected, loose, defective</li> <li>▪ Defective motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections to the paper position sensor slide motor.</li> <li>2. Defective paper position sensor slide motor.</li> </ol>              |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 765 | B    | Booklet finisher bottom fence lift motor error   |
|     |      | The bottom fence home position sensor is not activated within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor harness disconnected, loose, defective</li> <li>▪ Defective motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections to the bottom fence lift motor.</li> <li>2. Defective bottom fence lift motor.</li> </ol>                |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 766 | B    | Booklet finisher lower retraction motor error  |
|     |      | The lower clamp roller home position sensor is not activated within the specified time. The 1st detection failure issues a jam error, and the 2nd failure issues this SC code. |
|     |      | <ul style="list-style-type: none"> <li>▪ Motor harness disconnected, loose, defective</li> <li>▪ Defective motor</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>3. Check the connections to the lower retraction motor.</li> <li>4. Defective lower retraction motor.</li> </ol>                        |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 770 | B    | Shift motor error  |
|     |      | The shift motor HP sensor does not detect any change for 1.86 seconds after the shift motor has turned on at power on or during its operation.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective shift motor</li> <li>▪ Defective shift motor HP sensor</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections to the shift motor and the shift motor HP sensor.</li> <li>2. Defective shift motor or the shift motor HP sensor.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 791 | D    | Bridge unit error  |
|     |      | The machine recognizes the finisher, but does not the bridge unit.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective connector</li> <li>▪ Broken harness</li> </ul>  |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections between the bridge unit and the machine.</li> <li>2. Install a new bridge unit.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 792 | B    | Finisher error   |
|     |      | The machine does not recognize the finisher, but recognizes the bridge unit.   |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective connector</li> <li>▪ Defective harness</li> <li>▪ Incorrect installation</li> </ul>               |
|     |      | <ol style="list-style-type: none"> <li>1. Check the connections between the finisher and the machine.</li> <li>2. Install a new finisher.</li> </ol> |


| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 793 | B    | <p>Front jogger motor error</p> <ul style="list-style-type: none"> <li>▪ The machine does not detect that the front jogger HP sensor is OFF for 40 ms after the front jogger fence moved.</li> <li>▪ The machine does not detect that the front jogger fence HP sensor is ON for 830 ms after the front jogger fence returned to its home position.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective front jogger motor</li> <li>▪ Disconnected connector</li> <li>▪ Overload to front jogger motor</li> <li>▪ Defective front jogger fence HP sensor</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Turn the main power switch off and on.</li> <li>2. Check the connectors to the front jogger motor and front jogger fence HP sensor.</li> <li>3. Check for problems in the jogger fence mechanism.</li> <li>4. Replace the front jogger motor.</li> <li>5. Replace the front jogger fence HP sensor.</li> </ol>       |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 794 | B    | <p>Rear jogger motor error</p> <ul style="list-style-type: none"> <li>▪ The machine does not detect that the rear jogger HP sensor is OFF for 40 ms after the rear jogger fence moved.</li> <li>▪ The machine does not detect that the rear jogger fence HP sensor is ON for 830 ms after the rear jogger fence returned to its home position.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective rear jogger motor</li> <li>▪ Disconnected connector</li> <li>▪ Overload to rear jogger motor</li> <li>▪ Defective rear jogger fence HP sensor</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Turn the main power switch off and on.</li> <li>2. Check the connectors to the rear jogger motor and rear jogger fence HP sensor.</li> <li>3. Check for problems in the jogger fence mechanism.</li> <li>4. Replace the rear jogger motor.</li> <li>5. Replace the rear jogger fence HP sensor.</li> </ol>      |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 795 | B    | <p>Paper exit unit lift up/ down error</p> <ul style="list-style-type: none"> <li>▪ The paper exit unit HP sensor does not turn off for 650 msec after the paper exit unit has lifted down.</li> <li>▪ The paper exit unit HP sensor does not turn on for 650 msec after the paper exit unit has lifted up.</li> </ul> |
|     |      | <ul style="list-style-type: none"> <li>▪ Disconnected harness</li> <li>▪ Defective paper exit unit contact motor</li> <li>▪ Defective paper exit unit HP sensor</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Check the harness connection.</li> <li>2. Replace the paper exit unit contact motor.</li> <li>3. Replace the paper exit unit HP sensor.</li> </ol>   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
| 796 | B    | Transport belt solenoid error   |
|     |      | <ul style="list-style-type: none"> <li>▪ Disconnected harness</li> <li>▪ Defective transport motor</li> <li>▪ Transport belt HP sensor</li> </ul>                             |
|     |      | <ol style="list-style-type: none"> <li>1. Check the harness connection.</li> <li>2. Replace the transport motor.</li> <li>3. Replace the transport belt HP sensor.</li> </ol> |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
| 797 | B    | EEPROM data error  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective EEPROM on the main board</li> </ul>                                 |
|     |      | <ol style="list-style-type: none"> <li>1. Check the harness connection.</li> <li>2. Replace the main board.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 818 | CTL<br>B | Watch-dog error   |
|     |          | While the system program is running, other processes do not operate at all.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective controller</li> <li>▪ Software error</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Replace the controller.</li> </ol>  |
|     |          | <div style="border: 1px solid black; padding: 2px; display: inline-block;">  Note         </div> <ul style="list-style-type: none"> <li>▪ See Note 1 at the end of the SC table</li> </ul> |



| No.    | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|--------|----------|--|
| 819    | CTL<br>D | Fatal error  |
| [696E] |          | Process error  |
|        |          | System completely down   |
|        |          | <ul style="list-style-type: none"> <li>▪ Defective RAM DIMM</li> <li>▪ Defective ROM DIMM</li> <li>▪ Defective controller</li> <li>▪ Software error</li> </ul>                             |
|        |          | <ol style="list-style-type: none"> <li>1. Check and/or replace the RAM DIMM.</li> <li>2. Check and/or replace the ROM DIMM.</li> <li>3. Replace the controller.</li> </ol>                 |
|        |          | <div style="border: 1px solid black; padding: 2px; display: inline-block;">  Note         </div> <ul style="list-style-type: none"> <li>▪ See Note 1 at the end of the SC table</li> </ul> |
| [766D] |          | Memory error   |
|        |          | Unexpected system memory size  |
|        |          | <ul style="list-style-type: none"> <li>▪ Defective RAM DIMM</li> <li>▪ Defective ROM DIMM</li> <li>▪ Defective controller</li> <li>▪ Software error</li> </ul>                             |
|        |          | <ol style="list-style-type: none"> <li>1. Check and/or replace the RAM DIMM.</li> <li>2. Check and/or replace the ROM DIMM.</li> <li>3. Replace the controller.</li> </ol>                 |
|        |          |  |
| [4361] |          | Kernel stop error  |
|        |          | The cache error trap occurs in the CPU.  |
|        |          | <ul style="list-style-type: none"> <li>▪ CPU cache error</li> </ul>  |
|        |          | <ol style="list-style-type: none"> <li>1. Replace the controller.</li> </ol>   |
|        |          | Kernel stop error  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|------|---|
|     |      | An error in the operation system (An error message is output.)  |
|     |      | <ul style="list-style-type: none"> <li>▪ Defective CPU</li> <li>▪ Defective memory</li> <li>▪ Defective flash memory</li> <li>▪ Incorrect software</li> </ul> |
|     |      | <ol style="list-style-type: none"> <li>1. Replace the memory.</li> <li>2. Replace the controller.</li> </ol>  |

| No.                                     | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|---|----------|--|
| 820                                     | CTL<br>D | Self-diagnostics error: CPU<br>[XXXX]: Detailed error code   |
| [0001] to<br>[06FF]<br>[0801] to [4005] |          | <p>CPU error</p> <p>During the self-diagnostic, the controller CPU detects an error. There are 47 types of error code (0001 to 4005) depending on the cause of the error. The CPU detects an error and displays the specific error code with the program address where the error occurs.</p> <ul style="list-style-type: none"> <li>▪ System firmware problem</li> <li>▪ Defective controller</li> </ul> <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Reinstall the controller system firmware.</li> <li>3. Replace the controller.</li> </ol> <p>When the problem cannot be fixed with the above procedure, the following information displayed on the screen needs to be fed back to a technical support center.</p> <ul style="list-style-type: none"> <li>▪ SC code</li> <li>▪ Detailed error code</li> <li>▪ Program address</li> </ul> |
| [0702]<br>[0709]<br>[070A]              |          | <p>CPU/Memory Error</p> <ul style="list-style-type: none"> <li>▪ System firmware problem</li> </ul>  |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
|     |      | <ul style="list-style-type: none"> <li>▪ Defective RAM-DIMM</li> <li>▪ Defective controller</li> </ul>   |
|     |      | <ol style="list-style-type: none"> <li>1. Reinstall the controller system software.</li> <li>2. Replace the RAM-DIMM.</li> <li>3. Replace the controller.</li> </ol> |

| No.    | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|--------|----------|--|
| 821    | CTL<br>D | Self-diagnostics error: ASIC<br>[XXXX]: Detailed error code  |
| [0B00] |          | ASIC error   |
|        |          | The write-&-verify check error has occurred in the ASIC.   |
|        |          | <ul style="list-style-type: none"> <li>▪ Defective ASIC device</li> </ul>  |
|        |          | <ol style="list-style-type: none"> <li>1. Replace the controller.</li> </ol>   |
| [0B06] |          | ASIC detection error   |
|        |          | The I/O ASIC for system control is not detected.   |
|        |          | <ul style="list-style-type: none"> <li>▪ Defective ASIC</li> <li>▪ Defective North Bridge and PCI I/F</li> </ul>   |
|        |          | <ol style="list-style-type: none"> <li>1. Replace the controller board.</li> </ol>   |
| [0B10] |          | SHM register error <ul style="list-style-type: none"> <li>▪ The initialization of bus connection or read for SHM fails.</li> <li>▪ The register of SHM is different from specified value.</li> </ul> |
|        |          | <ul style="list-style-type: none"> <li>▪ Defective connection bus</li> <li>▪ Defective SHM</li> </ul>  |
|        |          | <ol style="list-style-type: none"> <li>1. Replace the controller board</li> </ol>  |
| [0D05] |          | Self-diagnosis error: ASIC   |

| No. | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|------|--|
|     |      | The CPU checks if the ASIC timer works correctly compared with the CPU timer. If the ASIC timer does not function in the specified range, this SC code is displayed.       |
|     |      | <ul style="list-style-type: none"> <li>▪ System firmware problem</li> <li>▪ Defective RAM-DIMM</li> <li>▪ Defective controller</li> </ul>                                  |
|     |      | <ol style="list-style-type: none"> <li>1. Reinstall the controller system firmware.</li> <li>2. Replace the RAM-DIMM.</li> <li>3. Replace the controller board.</li> </ol> |

| No.    | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|--------|----------|--|
| 822    | CTL<br>B | Self-diagnostic error: HDD (Hard Disk Drive)<br>[XXXX]: Detailed error code  |
| [3003] |          | Timeout error  |
| [3004] |          | Command error  |
|        |          | When the main switch is turned on or starting the self-diagnostic, the HDD stays busy for the specified time or more.  |
|        |          | <ul style="list-style-type: none"> <li>▪ Loose connection</li> <li>▪ Defective HDD</li> <li>▪ Defective controller</li> </ul>  |
|        |          | <ol style="list-style-type: none"> <li>1. Check that the HDD is correctly connected to the controller.</li> <li>2. Replace the HDD.</li> <li>3. Replace the controller.</li> </ol> |

| No.    | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|--------|----------|--|
| 823    | CTL<br>B | Self-diagnostic error: NIB<br>[XXXX]: Detailed error code  |
| [6101] |          | MAC address check sum error<br>The result of the MAC address check sum does not match the check sum stored in ROM. |
| [6104] |          | PHY IC error<br>The PHY IC on the controller cannot be correctly recognized.                                       |
| [6105] |          | PHY IC loop-back error<br>An error occurred during the loop-back test for the PHY IC on the controller.            |
|        |          | 1. Replace the controller.   |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 824 | CTL<br>D | [1401]<br>Self-diagnosis error: Standard NVRAM<br>The controller cannot recognize the standard NVRAM installed or detects that the NVRAM is defective.                              |
|     |          | <ul style="list-style-type: none"> <li>▪ Loose connection</li> <li>▪ Defective standard NVRAM</li> <li>▪ Defective controller</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Check the standard NVRAM is firmly inserted into the socket.</li> <li>2. Replace the NVRAM.</li> <li>3. Replace the controller</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 826 | CTL<br>D | [15FF]<br>Self-diagnostic Error: RTC/optional NVRAM<br>The RTC device is not detected.  |
|     |          | <ul style="list-style-type: none"> <li>▪ RTC defective</li> <li>▪ NVRAM without RTC installed</li> <li>▪ Backup battery discharged</li> </ul> |
|     |          | 1. Replace the NVRAM with another NVRAM with an RTC device.   |

| No.    | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|--------|----------|---|
| 827    | CTL<br>D | Self-diagnostic error: Standard SDRAM DIMM<br>[XXXX]: Detailed error code   |
| [0201] |          | Verification error  |
|        |          | Error detected during a write/verify check for the standard RAM (SDRAM DIMM).   |
|        |          | <ul style="list-style-type: none"> <li>▪ Loose connection</li> <li>▪ Defective SDRAM DIMM</li> <li>▪ Defective controller</li> </ul>                          |
|        |          | <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Replace the SDRAM DIMM.</li> <li>3. Replace the controller.</li> </ol> |
| [0202] |          | Resident memory error   |
|        |          | The SPD values in all RAM DIMM are incorrect or unreadable.   |
|        |          | <ul style="list-style-type: none"> <li>▪ Defective RAM DIMM</li> <li>▪ Defective SPD ROM on RAM DIMM</li> <li>▪ Defective 12C bus</li> </ul>                  |
|        |          | 1. Replace the RAM DIMM.  |

| No.    | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|--------|----------|--|
| 828    | CTL<br>D | Self-diagnostic error: ROM<br>[XXXX]: Detailed error code  |
| [0101] |          | <p>Check sum error 1</p> <ul style="list-style-type: none"> <li>▪ The boot monitor and OS program stored in the ROM DIMM is checked. If the check sum of the program is incorrect, this SC code is displayed.</li> </ul> |
| [0104] |          | <p>Check sum error 2</p> <p>All areas of the ROM DIMM are checked. If the check sum of all programs stored in the ROM DIMM is incorrect, this SC code is displayed.</p>  |
|        |          | <ul style="list-style-type: none"> <li>▪ Defective ROM DIMM</li> <li>▪ Defective controller</li> </ul>   |
|        |          | <ol style="list-style-type: none"> <li>1. Turn the main switch on and off.</li> <li>2. Replace the ROM DIMM</li> <li>3. Replace the controller.</li> </ol>   |

| No.    | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|--------|----------|---|
| 829    | CTL<br>B | Self-diagnosis error: optional RAM<br>[XXXX]: Detailed error code   |
| [0401] |          | Verification error (Slot 1)<br>The data stored in the optional RAM in Slot 1 does not match the data when reading.  |
| [0402] |          | Composition error (Slot 1)<br>The result of checking the composition data of the optional RAM in Slot 1 on the controller is incorrect.                           |
|        |          | <ul style="list-style-type: none"> <li>▪ Not specified RAM DIMM installed</li> <li>▪ Defective RAM DIMM</li> </ul>  |
|        |          | <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Replace the RAM DIMM.</li> <li>3. Replace the controller board.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 851 | CTL<br>B | IEEE1394 interface error  |
|     |          | The 1394 interface is unusable.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective IEEE1394</li> <li>▪ Defective controller.</li> </ul>   |
|     |          | <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Replace the IEEE1394 interface board.</li> <li>3. Replace the controller.</li> </ol> |



| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 853 | CTL<br>B | Wireless LAN card not detected  |
|     |          | The wireless LAN card is not detected before communication is established, though the wireless LAN board is detected. |
|     |          | <ul style="list-style-type: none"> <li>▪ Loose connection</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Check the connection.</li> </ol>  |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 854 | CTL<br>B | Wireless LAN/Bluetooth card not detected  |
|     |          | The wireless LAN/Bluetooth card is not detected after communication is established, but the wireless LAN board is detected. |
|     |          | <ul style="list-style-type: none"> <li>▪ Loose connection</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Check the connection.</li> </ol>  |

| No.        | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|------------|----------|---|
| 855<br>856 | CTL<br>B | Wireless LAN/Bluetooth card error   |
|            |          | An error is detected in the wireless LAN/Bluetooth card.  |
|            |          | <ul style="list-style-type: none"> <li>▪ Loose connection</li> <li>▪ Defective wireless LAN/Bluetooth card</li> </ul>           |
|            |          | <ol style="list-style-type: none"> <li>1. Check the connection.</li> <li>2. Replace the wireless LAN/Bluetooth card.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 857 | CTL<br>B | USB interface error   |
|     |          | The USB interface cannot be used due to a driver error.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective USB driver</li> <li>▪ Loose connection</li> </ul>          |
|     |          | <ol style="list-style-type: none"> <li>1. Check the connection.</li> <li>2. Replace the USB board.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)                                       |
|-----|----------|---|
| 860 | CTL<br>B | HDD: Initialization error   |
|     |          | The controller detects that the hard disk fails.  |
|     |          | <ul style="list-style-type: none"> <li>▪ HDD not initialized</li> <li>▪ Defective HDD</li> </ul>    |
|     |          | <ol style="list-style-type: none"> <li>1. Reformat the HDD.</li> <li>2. Replace the HDD.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 861 | CTL<br>D | HDD: Reboot error  |
|     |          | The HDD does not become ready within 30 seconds after the power is supplied to the HDD.  |
|     |          | <ul style="list-style-type: none"> <li>▪ Loose connection</li> <li>▪ Defective cables</li> <li>▪ Defective HDD</li> <li>▪ Defective controller</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Check the connection between the HDD and controller.</li> <li>2. Check and replace the cables.</li> <li>3. Replace the HDD.</li> <li>4. Replace the controller.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 863 | CTL<br>D | HDD: Read error   |
|     |          | The data stored in the HDD cannot be read correctly.  |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective HDD</li> <li>▪ Defective controller</li> </ul>         |
|     |          | <ol style="list-style-type: none"> <li>1. Replace the HDD.</li> <li>2. Replace the controller.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)                        |
|-----|----------|--|
| 864 | CTL<br>D | HDD: CRC error   |
|     |          | While reading data from the HDD or storing data in the HDD, data transmission fails. |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective HDD</li> </ul>                    |
|     |          | <ol style="list-style-type: none"> <li>1. Replace the HDD.</li> </ol>                |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures) |
|-----|----------|---|
| 865 | CTL<br>D | HDD: Access error   |
|     |          | An error is detected while operating the HDD.                 |
|     |          | Defective HDD   |
|     |          | Replace the HDD.  |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)                           |
|-----|----------|---|
| 866 | CTL<br>B | SD card authentication error  |
|     |          | A correct license is not found in the SD card.  |
|     |          | <ul style="list-style-type: none"> <li>▪ SD-card data is corrupted.</li> </ul>          |
|     |          | <ol style="list-style-type: none"> <li>1. Store correct data in the SD card.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 867 | CTL<br>D | SD card error  |
|     |          | The SD card is ejected from the slot.  |
|     |          | <ol style="list-style-type: none"> <li>1. Install the SD card.</li> <li>2. Turn the main switch off and on.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 868 | CTL<br>D | SD card access error <ul style="list-style-type: none"> <li>▪ -13 to -3: File system error</li> <li>▪ Other number: Device error</li> </ul>   |
|     |          | An error report is sent from the SD card reader. <ul style="list-style-type: none"> <li>▪ An error is detected in the SD card.</li> </ul>   |
|     |          | <ol style="list-style-type: none"> <li>1. For a file system error, format the SD card on your PC.</li> <li>2. For a device error, turn the mains switch off and on.</li> <li>3. Replace the SD card.</li> <li>4. Replace the controller.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 870 | CTL<br>B | Address book error   |
|     |          | An error is detected in the data copied to the address book over a network.  |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective software program</li> <li>▪ Defective HDD</li> <li>▪ Incorrect path to the server</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Initialize the address book data (SP5-846-050).</li> <li>2. Initialize the user information (SP5-832-006).</li> <li>3. Replace the HDD.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 872 | CTL<br>B | HDD mail data error  |
|     |          | An error is detected in the HDD at machine initialization.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective HDD</li> <li>▪ Power failure during an access to the HDD</li> </ul>   |
|     |          | <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Initialize the HDD partition (SP5-832-007).</li> <li>3. Replace the HDD.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 873 | CTL<br>B | HDD mail transfer error   |
|     |          | An error is detected in the HDD at machine initialization.  |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective HDD</li> <li>▪ Power failure during an access to the HDD</li> </ul>        |
|     |          | <ol style="list-style-type: none"> <li>1. Initialize the HDD partition (SP5-832-008).</li> <li>2. Replace the HDD.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 874 | CTL<br>D | Delete All error 1: HDD  |
|     |          | An error is detected while all of the HDD or NVRAM are formatted physically by the Data Overwrite Security Unit (B735).            |
|     |          | <ul style="list-style-type: none"> <li>▪ Data Overwrite Security Unit (SD card) not installed</li> <li>▪ Defective HDD</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Install the Data Overwrite Security Unit (B735).</li> <li>2. Replace the HDD.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 875 | CTL<br>D | Delete All error 2: Data area  |
|     |          | An error is detected while all of the HDD or NVRAM are formatted logically by the Data Overwrite Security Unit (B735). |
|     |          | <ul style="list-style-type: none"> <li>▪ The logical format for the HDD fails.</li> </ul>                              |
|     |          | 1. Turn the main switch off/on and try the operation again   |

| No.  | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|------|----------|--|
| 876  | CTL<br>D | <p>Log Data Error</p> <p>An error was detected in the handling of the log data at power on or during machine operation. This can be caused by switching the machine off while it is operating.</p> |
| -001 |          | Log Data Error 1   |
|      |          | <ul style="list-style-type: none"> <li>▪ Damaged log data file in the HDD</li> </ul>   |
|      |          | 1. Initialize the HDD with SP5832-004.   |
| -002 |          | Log Data Error 2   |
|      |          | <ul style="list-style-type: none"> <li>▪ An encryption module not installed</li> </ul>   |
|      |          | 1. Disable the log encryption setting with SP9730-004 ("0" is off.)  |
|      |          | 1. Install the DESS module.  |
| -003 |          | Log Data Error 3   |
|      |          | <ul style="list-style-type: none"> <li>▪ Invalid log encryption key due to defective NVRAM data</li> </ul>   |
|      |          | <ol style="list-style-type: none"> <li>1. Initialize the HDD with SP5832-004.</li> <li>2. Disable the log encryption setting with SP9730-004 ("0" is off.)</li> </ol>                              |
| -004 |          | Log Data Error 4   |
|      |          | <ul style="list-style-type: none"> <li>▪ Unusual log encryption function due to defective NVRAM data</li> </ul>  |

| No.  | Type | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|------|------|---|
|      |      | 1. Initialize the HDD with SP5832-004.  |
| -005 |      | Log Data Error 5  |
|      |      | <ul style="list-style-type: none"> <li>▪ Installed NVRAM or HDD which is used in another machine</li> </ul>                               |
|      |      | <ol style="list-style-type: none"> <li>1. Reinstall the previous NVRAM or HDD.</li> <li>2. Initialize the HDD with SP5832-004.</li> </ol> |
| -099 |      | Log Data Error 99   |
|      |      | <ul style="list-style-type: none"> <li>▪ Other than the above causes</li> </ul>   |
|      |      | <ol style="list-style-type: none"> <li>1. Ask your supervisor.</li> </ol>   |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 877 | CTL<br>D | HDD Data Overwrite Security SD card error   |
|     |          | The 'all delete' function cannot be executed but the Data Overwrite Security Unit (B735) is installed and activated.  |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective SD card (B735)</li> <li>▪ SD card (B735) not installed</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Replace the NVRAM and then install the new SD card (B735).</li> <li>2. Check and reinstall the SD card (B735).</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)                           |
|-----|----------|---|
| 880 | CTL<br>D | File format converter error   |
|     |          | The file format converter does not respond.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective file format converter</li> </ul>     |
|     |          | <ol style="list-style-type: none"> <li>1. Replace the file format converter.</li> </ol> |



| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 900 | CTL<br>D | Electric counter error   |
|     |          | Abnormal data in the counters.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective NVRAM</li> <li>▪ Defective controller</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Check the connection between the NVRAM and controller.</li> <li>2. Replace the NVRAM.</li> <li>3. Replace the controller.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 910 | CTL<br>D | External Controller Error 1   |
| 911 |          | External Controller Error 2   |
| 912 |          | External Controller Error 3   |
| 913 |          | External Controller Error 4   |
| 914 |          | External Controller Error 5   |
|     |          | The external controller alerted the machine about an error.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Please refer to the instructions for the external controller (application).</li> </ul> |

Trouble shooting

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 919 | CTL<br>D | External Controller Error 6   |
|     |          | While EAC (External Application Converter), the conversion module, was operating normally, the receipt of a power line interrupt signal from the FLUTE serial driver was detected, or BREAK signal from the other station was detected. |
|     |          | <ul style="list-style-type: none"> <li>▪ Power outage at the EFI controller</li> <li>▪ EFI controller was rebooted</li> <li>▪ Connection to EFI controller loose</li> </ul>   |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 920 | CTL<br>D | Printer application error  |
|     |          | An error is detected in the printer application program.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective software</li> <li>▪ Unexpected hardware resource (e.g., memory shortage)</li> </ul>   |
|     |          | <ol style="list-style-type: none"> <li>1. Software defective; switch off/on, or change the controller firmware if the problem is not solved</li> <li>2. Insufficient memory</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 921 | CTL<br>D | Printer font error  |
|     |          | A necessary font is not found in the SD card.   |
|     |          | <ul style="list-style-type: none"> <li>▪ A necessary font is not found in the SD card.</li> <li>▪ The SD card data is corrupted.</li> </ul> |
|     |          | <ol style="list-style-type: none"> <li>1. Check that the SD card has the correct data.</li> </ol>   |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 925 | CTL<br>D | Netfile function error  |
|     |          | The management area or management file on the HDD is corrupted.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective HDD</li> <li>▪ Data inconsistency (e.g., caused by power failure)</li> </ul>   |
|     |          | <p><b>When SC 860-865 keep occurring:</b></p> <ol style="list-style-type: none"> <li>1. Follow the troubleshooting procedures.</li> </ol> <p><b>In other cases:</b></p> <ol style="list-style-type: none"> <li>1. Initialize the netfile partition.</li> <li>2. Initialize the hard disk.</li> <li>3. Replace the HDD.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 990 | CTL<br>D | Software performance error  |
|     |          | The software makes an unexpected operation.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Defective software</li> <li>▪ Defective controller</li> <li>▪ Software error</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Turn the main switch off and on.</li> <li>2. Reinstall the controller and/or engine main firmware.</li> </ol>                                     |
|     |          | <div style="border: 1px solid black; padding: 2px; display: inline-block;">  Note         </div> <ul style="list-style-type: none"> <li>▪ See Note 1 at the end of the SC table.</li> </ul> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 991 | CTL<br>C | Software continuity error  |
|     |          | The software has attempted to perform an unexpected operation. However, unlike SC 990, the object of the error is continuity of the software.    |
|     |          | <ul style="list-style-type: none"> <li>▪ Software program error</li> <li>▪ Internal parameter incorrect, insufficient working memory.</li> </ul> |
|     |          | 1. This SC is not displayed on the LCD (logging only).   |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 992 | CTL<br>D | Undefined error   |
|     |          | Defective software program  |
|     |          | <ul style="list-style-type: none"> <li>▪ An error undetectable by any other SC code occurred</li> </ul> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 994 | CTL<br>C | Operation panel management records exceeded  |
|     |          | An error occurred because the number of records exceeded the limit for images managed in the service layer of the firmware. This can occur if there if there are too many application screens open on the operation panel. |
|     |          | <ul style="list-style-type: none"> <li>▪ No action required because this SC does not interfere with operation of the machine.</li> </ul>   |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)                        |
|-----|----------|--|
| 995 | CTL<br>D | Controller Board Mismatch  |
|     |          | The information on the controller board does not match that of the machine           |
|     |          | <ul style="list-style-type: none"> <li>▪ Wrong controller board installed</li> </ul> |
|     |          | Reinstall the correct controller board for this machine.                             |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)  |
|-----|----------|--|
| 997 | CTL<br>B | Application function selection error   |
|     |          | <ul style="list-style-type: none"> <li>▪ The application selected by the operation panel key does not start or ends abnormally.</li> <li>▪ Software (including the software configuration) defective</li> <li>▪ An option required by the application (RAM, DIMM, board) is not installed</li> <li>▪ Nesting of the fax group addresses is too complicated</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Check the devices necessary for the application program. If necessary devices have not been installed, install them.</li> <li>2. Check that application programs are correctly configured.</li> <li>3. For a fax operation problem, simplify the nesting of the fax group addresses.</li> <li>4. Take necessary countermeasures specific to the application program. If the logs can be displayed on the operation panel, see the logs.</li> </ol> |

| No. | Type     | Details (Symptom, Possible Cause, Troubleshooting Procedures)   |
|-----|----------|---|
| 998 | CTL<br>D | Application start error   |
|     |          | No applications start within 60 seconds after the power is turned on.   |
|     |          | <ul style="list-style-type: none"> <li>▪ Loose connection of RAM-DIMM, ROM-DIMM</li> <li>▪ Defective controller</li> <li>▪ Software problem</li> </ul>  |
|     |          | <ol style="list-style-type: none"> <li>1. Check the setting of SP5875-001. If the setting is set to "1 (OFF)", change it to "0 (OFF)".</li> <li>2. Check if the RAM-DIMM and ROM-DIMM are correctly connected.</li> <li>3. Reinstall the controller system firmware.</li> <li>4. Replace the controller.</li> </ol> |


**Note 1**


If a problem always occurs in a specific condition (for example. printer driver setting, image file), the problem may be caused by a software error. In this case, the following data and information needs to be sent back to your product specialist. Please understand that it may take some time to get a reply on how to solve the problem, because in some cases the design staff in Japan must analyze the data.

- Symptom / Possible Causes / Action taken
- Summary sheet (SP mode "Printer SP", SP1-004 [Print Summary])
- SMC - All (SP5-990-001)
- SMC - Logging (SP5-990-004)
- Printer driver settings used when the problem occurs
- All data displayed on the screen (SC code, error code, and program address where the problem is logged.)
- Image file which causes the problem, if possible

## 4.5 TROUBLESHOOTING GUIDE


### 4.5.1 IMAGE QUALITY

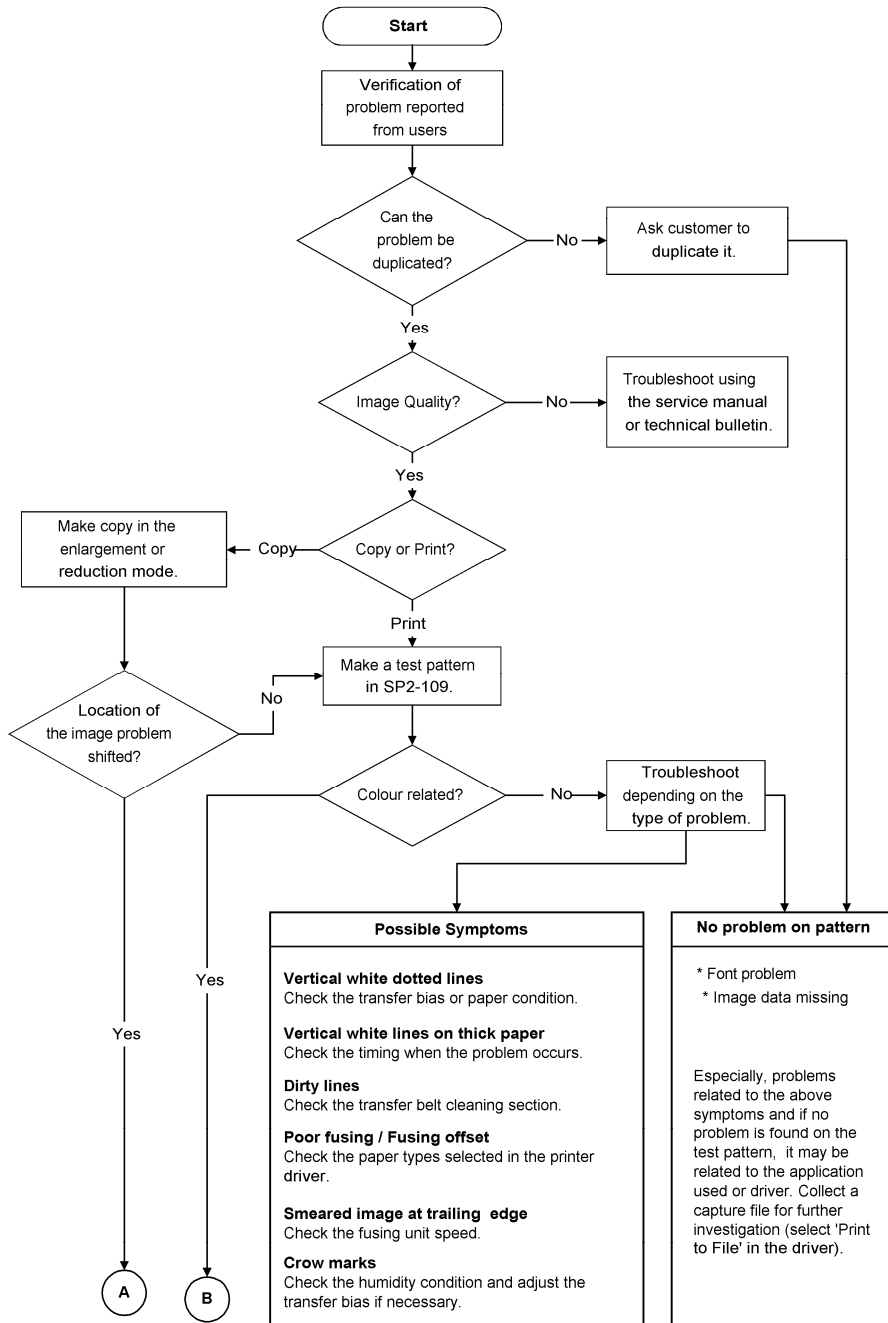

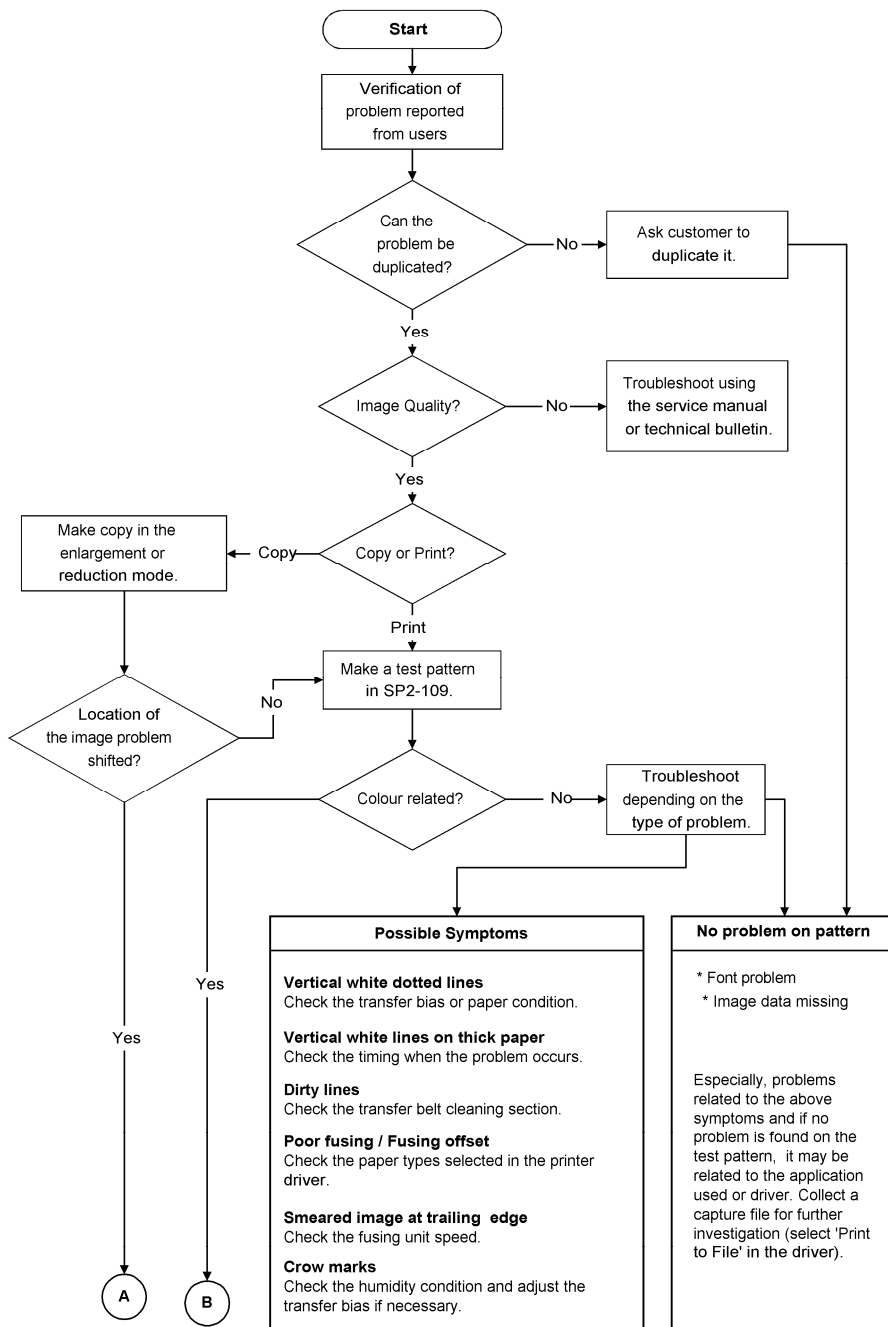

The following work-flow shows the basic troubleshooting steps for the image quality problems on this product.



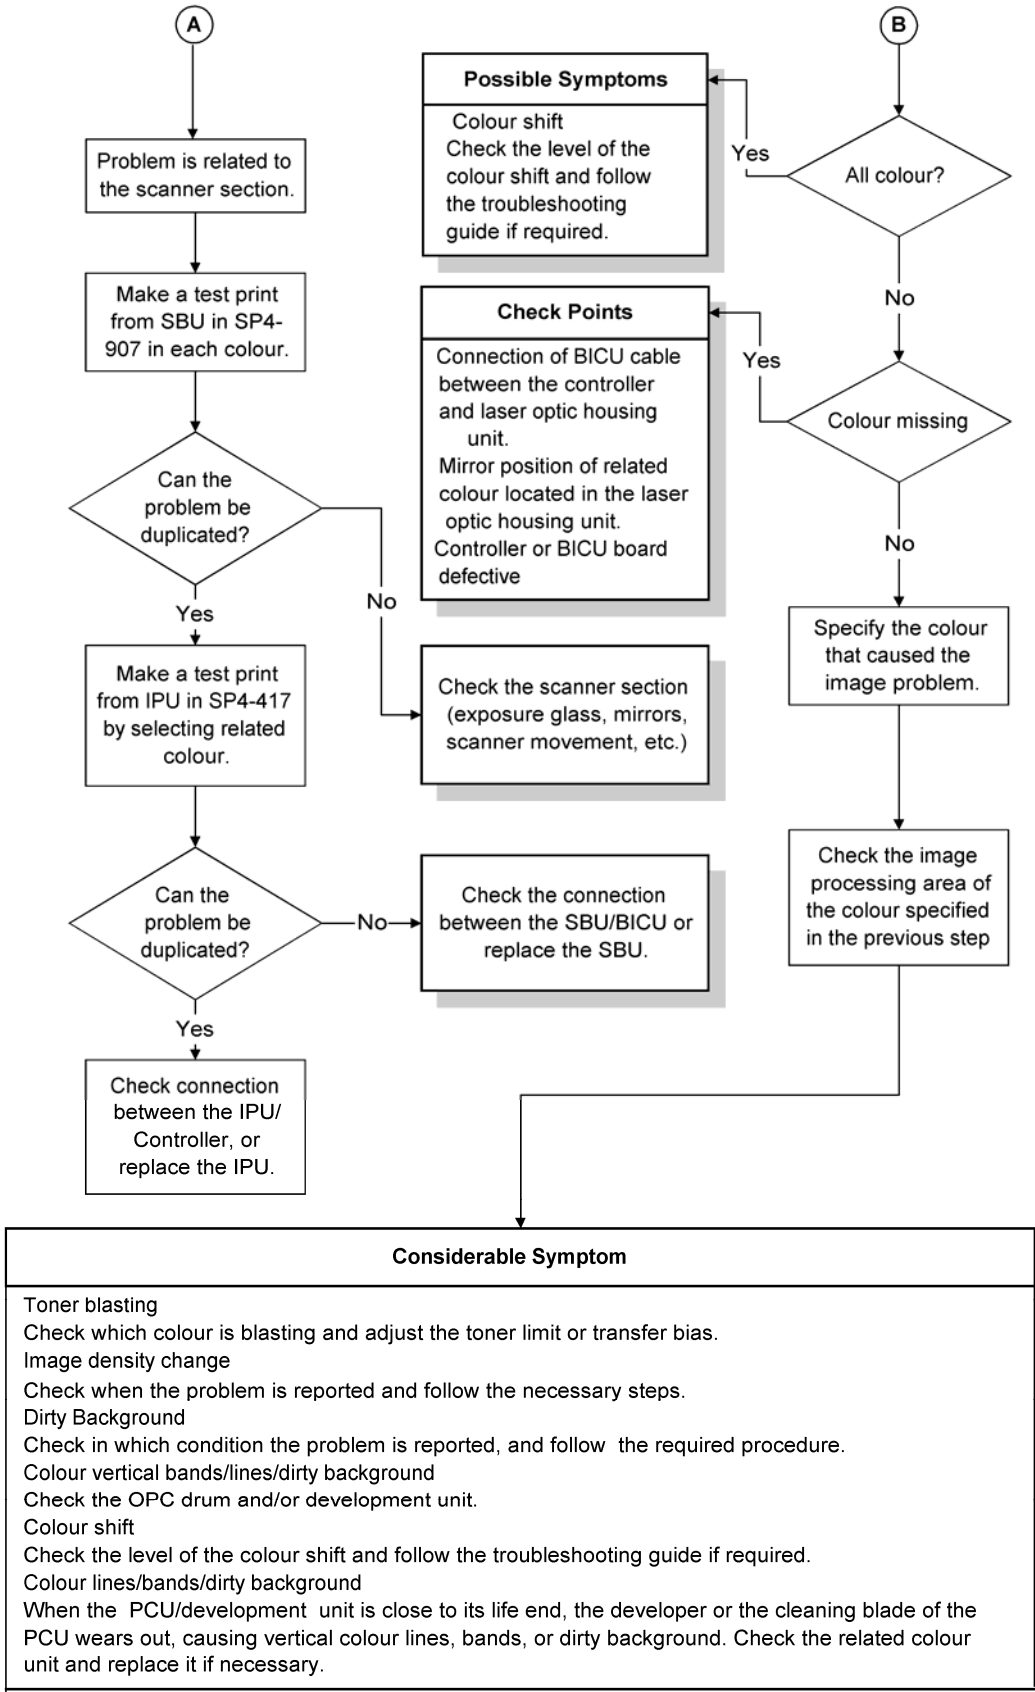

(From the previous diagram)

## 4.5.2 LINE POSITION ADJUSTMENT

When there are color registration errors on the output, do the line position adjustment as follows.



- Use A3/DLT size paper for this adjustment.

### Test

1. Do SP2-111-003 (Mode c: rough adjustment).
2. Use SP2-194-007 to check if the result of the line position adjustment is correct (0: Completed successfully, 1: Not completed). If the result is "1", refer to 'Countermeasure list for color registration errors'.
3. Do SP2-111-001 (Mode a: fine adjustment twice).
4. Use SP2-194-007 to check if the result of the line position adjustment is correct (0: Completed successfully, 1: Not completed). If the result is "1", refer to 'Countermeasure list for color registration errors'.
5. Put some A3/DLT paper on the by-pass tray.



- When you print a test pattern, use the by-pass tray to feed the paper.
6. Print out test pattern "7" with SP2-109-003.
  7. Check the printed output with a loupe.
  8. If there are no color registration errors on the output, the line position adjustment is correctly done. If not, refer to the countermeasure list for color registration errors.

Countermeasure list for color registration errors

| After Executing SP2-111-003 |  |   |   |
|-----------------------------|--|---|---|
| Result (SP2-194)            |  | Test pattern check  | Possible cause/Countermeasure   |
| -007                        | -010, -011,<br>-012  |   |   |
| Result: "1"                 | Result:<br>"2" or "3"<br>(Line pattern<br>detection<br>failure)                    | White image,<br>Abnormal image, Low<br>density  | <ul style="list-style-type: none"> <li>▪ Defective laser optics housing unit shutter</li> <li>▪ Defective image processing unit</li> <li>▪ Low density of test pattern</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the shutter motor.</li> <li>2. Replace the high voltage power supply unit.</li> <li>3. Do the forced process control (SP3-011-001) or supply some toner (SP3-015-xxx).</li> <li>4. Replace the BICU.</li> </ol> |
|                             |  | Normal image, but<br>with color registration<br>errors  | <ul style="list-style-type: none"> <li>▪ Defective ID sensor shutter</li> <li>▪ Defective ID sensor</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor shutter solenoid.</li> <li>2. Replace the ID sensor.</li> <li>3. Replace the BICU.</li> </ol>  |
|                             | One of<br>results (-010,<br>-011, -012):<br>"5"<br>(Out of<br>adjustable<br>range) | The main scan<br>registrations of M, C,<br>Y are shifted by more<br>than $\pm 15$ mm from<br>the main scan<br>registration of Bk. | <ul style="list-style-type: none"> <li>▪ Defective laser optics housing unit</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the laser optics housing unit.</li> <li>2. Replace the BICU.</li> </ol>   |

|  |  |  |  |
|--|--|--|--|
|  |  | <p>The sub scan registrations of M, C, Y are shifted by more than <math>\pm 20</math> mm from the sub scan registration of Bk.</p> | <ul style="list-style-type: none"> <li>▪ Defective image transfer belt</li> <li>▪ Defective drive units</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the image transfer belt.</li> <li>2. Replace the drum motor.</li> <li>3. Replace the BICU.</li> </ol> |
|--|--|--|--|

|             |   |  |   |
|-------------|---|--|---|
|             |   | The main scan registration is shifted by more than $\pm 0.66$ mm, but only at the central area of the image on the output. | <ul style="list-style-type: none"> <li>▪ Defective ID sensor at center</li> <li>▪ Deformed center area on the image transfer belt</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor.</li> <li>2. Replace the image transfer belt.</li> <li>3. Replace the BICU.</li> </ol> |
|             |   | The skew for M, C, Y is more than $\pm 0.75$ mm from the main scan registration of Bk                                      | <ul style="list-style-type: none"> <li>▪ Defective PCU</li> <li>▪ Defective laser optics housing unit</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Reinstall or replace the PCU.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the BICU.</li> </ol>                |
|             |   | Others   | <ul style="list-style-type: none"> <li>▪ Skew correction upper limit error</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Reset the skew correction value (see the note at the bottom of the table).</li> <li>2. Replace the BICU.</li> </ol>   |
| Result: "0" | - | -  | Do SP2-111-001 or -002.   |

Note

- For details about how to reset the skew correction value, see "Recovery procedure for SC285 and no replacement preparation of laser optics housing unit" in "Laser Optics Housing Unit Replacement" (in the Replacement and Adjustment section of the manual).

| After Executing SP2-111-001 |   |  |   |
|-----------------------------|---|--|---|
| Result (SP2-194)            |   | Test pattern check                                     | Possible cause/Countermeasure   |
| -007                        | -010, -011,<br>-012   |  |   |
| Result:<br>"1"              | Result:<br>"2" or "3"<br>(Line pattern<br>detection<br>failure) | White image,<br>Abnormal image,<br>Low density         | <ul style="list-style-type: none"> <li>▪ Defective laser optics housing unit shutter</li> <li>▪ Defective image processing unit</li> <li>▪ Low density of test pattern</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the shutter motor.</li> <li>2. Replace the high voltage power supply unit.</li> <li>3. Do the forced process control (SP3-011-001) or supply some toner (SP3-015-xxx).</li> <li>4. Replace the BICU.</li> </ol> |
|                             |   | Normal image, but<br>with color registration<br>errors | <ul style="list-style-type: none"> <li>▪ Defective ID sensor shutter</li> <li>▪ Defective ID sensor</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor shutter solenoid.</li> <li>2. Replace the ID sensor.</li> <li>3. Replace the BICU.</li> </ol>  |
|                             | Result: "5"<br>(Out of<br>adjustable<br>range)                  | Low image density<br>on the output                     | <ul style="list-style-type: none"> <li>▪ Low pattern density</li> </ul> <ol style="list-style-type: none"> <li>1. Do the forced process control (SP3-011-001) or supply some toner (SP3-015-xxx).</li> </ol>  |

|  |  |  |  |
|--|--|--|--|
|  |  | <p>The main scan registrations of M, C, Y are shifted by more than <math>\pm 1.4</math> mm from the main scan registration of Bk.</p>        | <ul style="list-style-type: none"> <li>▪ No defective component</li> <li>▪ Defective laser optics housing unit</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Do SP2-111-003 again.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the BICU.</li> </ol>  |
|  |  | <p>The sub scan registrations of M, C, Y are shifted by more than <math>\pm 1.4</math> mm from the sub scan registration of Bk.</p>          | <ul style="list-style-type: none"> <li>▪ No defective component</li> <li>▪ Defective image transfer belt</li> <li>▪ Defective drive units</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Do SP2-111-003 again.</li> <li>2. Replace the image transfer belt.</li> <li>3. Replace the drum motor.</li> <li>4. Replace the BICU.</li> </ol> |
|  |  | <p>The main scan registration is shifted by more than <math>\pm 0.66</math> mm, but only at the central area of the image on the output.</p> | <ul style="list-style-type: none"> <li>▪ Defective ID sensor at center</li> <li>▪ Deformed center area on the image transfer belt</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the ID sensor.</li> <li>2. Replace the image transfer belt.</li> <li>3. Replace the BICU.</li> </ol>  |
|  |  | <p>The skew for M, C, Y is more than <math>\pm 0.75</math> mm from the main scan registration of Bk. – at the end of the scan line?</p>      | <ul style="list-style-type: none"> <li>▪ Defective PCU</li> <li>▪ Defective laser optics housing unit</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Reinstall or replace the PCU.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the BICU.</li> </ol>   |
|  |  | <p>Others</p>  | <ul style="list-style-type: none"> <li>▪ Skew correction upper limit error</li> <li>▪ Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>1. Reset the skew correction value</li> </ol>   |

|                |                              |   |  |
|----------------|------------------------------|---|--|
|                |                              |   | <p>(see the note at the bottom of the table).</p> <ol style="list-style-type: none"> <li>Replace the BICU.</li> </ol>  |
| Result:<br>"0" | No color registration errors | The main scan registration of Bk is shifted.  | <ul style="list-style-type: none"> <li>Abnormal SP setting value of main scan: Bk</li> </ul> <ol style="list-style-type: none"> <li>Adjust the value with SP2-101-001.</li> </ol>  |
|                |                              | The main scan length of Bk is shifted.  | <ul style="list-style-type: none"> <li>Abnormal SP setting value of main scan length detection: Bk</li> </ul> <ol style="list-style-type: none"> <li>Adjust the value with SP2-185-001.</li> </ol>   |
|                | Color registration errors    | Low image density on the output   | <ul style="list-style-type: none"> <li>Low pattern density</li> </ul> <ol style="list-style-type: none"> <li>Do the forced process control (SP3-011-001) or supply some toner (SP3-015-xxx).</li> </ol>  |
|                |                              | The main scan registration is shifted, but only at the central area of the image on the output. | <ul style="list-style-type: none"> <li>Defective ID sensor at center</li> <li>Deformed center area on the image transfer belt</li> <li>Defective BICU</li> </ul> <ol style="list-style-type: none"> <li>Replace the ID sensor.</li> <li>Replace the image transfer belt.</li> <li>Replace the BICU.</li> </ol> |



|  |  |  |   |
|--|--|--|---|
|  |  | <p>The main scan registrations of M, C, Y are shifted.</p> | <ul style="list-style-type: none"> <li>▪ Defective laser optics housing unit</li> <li>▪ Defective ID sensor</li> <li>▪ Defective BICU</li> <li>▪ Incorrect SP value</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the laser optics housing unit.</li> <li>2. Replace the ID sensor.</li> <li>3. Replace the BICU.</li> <li>4. Adjust the value with SP2-182-004 to -021.</li> </ol>  |
|  |  | <p>The sub scan registrations of M, C, Y are shifted.</p>  | <ul style="list-style-type: none"> <li>▪ Defective image transfer belt</li> <li>▪ Defective drive units</li> <li>▪ Defective ID sensor</li> <li>▪ Defective BICU</li> <li>▪ Incorrect SP value</li> </ul> <ol style="list-style-type: none"> <li>1. Replace the image transfer belt.</li> <li>2. Replace the ID sensor.</li> <li>3. Replace the drum motor.</li> <li>4. Replace the BICU.</li> <li>5. Adjust the value with SP2-182-022 to -039.</li> </ol> |
|  |  |  | <ul style="list-style-type: none"> <li>▪</li> </ul>   |
|  |  | <p>The skew of M, C, Y is different.</p>                   | <ul style="list-style-type: none"> <li>▪ Defective PCU</li> <li>▪ Defective laser optics housing unit</li> <li>▪ Defective IOB</li> </ul> <ol style="list-style-type: none"> <li>1. Reinstall or replace the PCU.</li> <li>2. Replace the laser optics housing unit.</li> <li>3. Replace the IOB.</li> </ol>  |

↓ Note

- For details about how to reset the skew correction value, see "Recovery procedure for SC285 and no replacement preparation of laser optics housing unit" in "Laser Optics Housing Unit Replacement" (in the Replacement and Adjustment section of the manual).

## 4.6 JAM DETECTION

### 4.6.1 PAPER JAM DISPLAY

SP7-504 shows the paper jam history.

```

CODE :011
SIZE  :05h
TOTAL:000034
DATE  :Fri Feb 15 11:44:50 2006
    
```

CODE: indicates the jam code.

SIZE: indicates the paper Size Code.

Total: Indicates the total counter (SP7-502-001).

DATE: indicates the date when the jam occurred.

### 4.6.2 JAM CODES AND DISPLAY CODES

| Jam Code<br>SP | Display                     | Description   | LCD<br>Display |
|----------------|-----------------------------|---|----------------|
| 7504 1         | At Power On                 | Paper is not fed at power on.   | A              |
| 7504 3         | Tray 1: ON                  | Paper is not fed from tray 1.   | A              |
| 7504 4         | Tray 2: ON                  | Paper is not fed from tray 2.   | Y              |
| 7504 5         | Tray 3: ON                  | Paper is not fed from tray 3 (LCT).   | Y              |
| 7504 6         | Tray 4: ON                  | Paper is not fed from tray 4.   | A              |
| 7504 8         | Bypass: ON                  | Paper is not fed from the by-pass tray.                                       | Z              |
| 7504 9         | Duplex: ON                  | Paper is jammed at the duplex unit.   | Z              |
| 7504 11        | Vertical Transport 1:<br>ON | Paper feed sensor 1 does not detect paper from tray 1.                        | A              |
| 7504 12        | Vertical Transport 2:<br>ON | Paper feed sensor 2 does not detect paper from tray 2.                        | A              |
| 7504 13        | Bank Transport 1            | Vertical transport sensor 1 or relay sensor does not detect paper from tray 3 | Y              |

| Jam Code SP | Display             | Description  | LCD Display |
|-------------|---------------------|--|-------------|
|             |                     | (LCT).   |             |
| 7504 17     | Registration: ON    | Registration sensor does not detect paper.                     | B           |
| 7504 18     | Fusing Entrance: ON | Fusing entrance sensor does not detect paper.                  | B           |
| 7504 19     | Fusing Exit: ON     | Fusing exit sensor does not detect paper.                      | B           |
| 7504 20     | Paper Exit: ON      | Paper exit sensor does not detect paper.                       | C           |
| 7504 21     | Relay Exit: ON      | Tray exit sensor (bridge unit) does not detect paper.          | D           |
| 7504 22     | Relay Transport: ON | Relay sensor (bridge unit) does not detect paper.              | D           |
| 7504 25     | Duplex Exit: ON     | Duplex exit sensor does not detect paper.                      | Z           |
| 7504 26     | Duplex Reverse: ON  |  | Z           |
| 7504 27     | Duplex Entrance: ON | Duplex entrance sensor does not detect paper.                  | Z           |
| 7504 28     | 1-Bin Exit Sensor   | 1-bin tray exit sensor does not detect paper.                  | C           |
| 7504 51     | SEF Sensor 1        | Paper feed sensor 1 does not turn off.                         | B           |
| 7504 52     | SEF Sensor 2        | Paper feed sensor 2 does not turn off.                         | A           |
| 7504 53     | Bank SEF Sensor 1   | Vertical transport sensor or relay sensor 1 does not turn off. | Y           |
| 7504 54     | Bank SEF Sensor 2   | Vertical transport sensor 2 does not turn off.                 | Y           |

| Jam Code SP | Display                         | Description  | LCD Display |
|-------------|---------------------------------|--|-------------|
| 7504 57     | Regist Sensor                   | Registration sensor does not turn off.   | B           |
| 7504 59     | Fusing Exit Sensor              | Fusing exit sensor does not turn off.  | C           |
| 7504 60     | Exit Sensor                     | Paper exit sensor does not turn off.   | C           |
| 7504 61     | Relay Exit Sensor               | Tray exit sensor (bridge unit) does not turn off.  | D           |
| 7504 62     | Relay Sensor                    | Relay sensor (bridge unit) does not turn off.  | D           |
| 7504 65     | Duplex Exit Sensor              | Duplex exit sensor does not turn off.  | Z           |
| 7504 66     | Duplex Entrance Sensor          | Duplex entrance sensor does not turn off.  | Z           |
| 7504 130    | 1-Bin Exit: ON                  | 1-bin tray exit sensor does not turn off.  | C           |
| 7504 100    | Finisher Entrance (B408)        | Paper does not reach to the entrance sensor or stay at the entrance sensor.  | R1-R2       |
| 7504 101    | Finisher Shift Tray Exit (B408) | Paper does not reach to the lower tray exit sensor or stay at the lower tray exit sensor.  | R1-R2       |
| 7504 102    | Finisher Staple (B408)          | Paper does not reach to the staple tray entrance sensor or stay at the staple tray entrance sensor.  | R3-R5       |
| 7504 103    | Finisher Exit (B408)            | <ul style="list-style-type: none"> <li>▪ Lower tray exit sensor does not detect paper after the stack feed-out belt has fed paper.</li> <li>▪ Lower tray exit sensor still detects paper after the stack feed-out belt has returned to the home position.</li> </ul> | R3-R5       |
| 7504 104    | Finisher Drive Motor (B408)     | Exit guide plate HP sensor does not turn on or off for specified time.   |             |

| Jam Code<br>SP | Display                         | Description  | LCD<br>Display |
|----------------|---------------------------------|--|----------------|
| 7504 105       | Finisher Tray Lift Motor (B408) | <ul style="list-style-type: none"> <li>▪ Stack height sensor does not detect paper after the lower tray has lifted up.</li> <li>▪ Stack height sensor still detects paper after the lower tray has lifted down.</li> </ul>   | R1-R2          |
| 7504 106       | Finisher Jogger Motor (B408)    | <ul style="list-style-type: none"> <li>▪ Jogger fence HP sensor does not turn off after the jogger fence has moved from its home position.</li> <li>▪ Jogger fence HP sensor does not turn on after the jogger fence has returned to its home position.</li> </ul>                   | R3-R5          |
| 7504 107       | Finisher Shift Motor (B408)     | <ul style="list-style-type: none"> <li>▪ Shift roller HP sensor does not turn off after the shift roller has moved from its home position.</li> <li>▪ Shift roller HP sensor does not turn on after the shift roller has returned to its home position.</li> </ul>                   | R1-R2          |
| 7504 108       | Finisher Staple Motor (B408)    | <ul style="list-style-type: none"> <li>▪ Stapler HP sensor does not turn off after the stapler has moved from its home position.</li> <li>▪ Stapler HP sensor does not turn on after the stapler has returned to its home position.</li> </ul>                                       | R3-R5          |
| 7504 109       | Finisher Exit Motor (B408)      | <ul style="list-style-type: none"> <li>▪ Stack feed-out belt HP sensor does not turn off after the stack feed-out belt has moved from its home position.</li> <li>▪ Stack feed-out belt HP sensor does not turn on after the stack feed-out belt has returned to its home</li> </ul> | R3-R5          |

| Jam Code SP | Display                         | Description   | LCD Display |
|-------------|---------------------------------|---|-------------|
|             |                                 | position.   |             |
| 7504 130    | Finisher Entrance (B793)        | Entrance sensor does not detect paper after   | R1-R3       |
| 7504 131    | Finisher Proof Exit (B793)      | Paper does not reach to the proof tray exit sensor or stay at the proof tray exit sensor.   | R1-R3       |
| 7504 132    | Finisher Shift Tray Exit (B793) | Paper does not reach to the shift tray exit sensor or stay at the shift tray exit sensor.   | R1-R3       |
| 7504 133    | Finisher Staple Exit (B793)     | <ul style="list-style-type: none"> <li>▪ Staple tray exit sensor does not turn on after the entrance sensor has turned on.</li> <li>▪ Staple tray exit sensor does not turn off after it has turned on.</li> </ul>  | R4-R6       |
| 7504 134    | Finisher Exit (B793)            | <ul style="list-style-type: none"> <li>▪ Shift tray exit sensor does not turn on while the stack feed-out roller has turned on.</li> <li>▪ Shift tray exit sensor does not turn off after the stack feed-out roller has returned to its home position.</li> </ul> | R4-R6       |
| 7504 135    | Finisher Folding (B793)         | Fold unit entrance sensor does not turn on after the stopper S HP sensor has turned on.   | R7-R11      |
| 7504 136    | Finisher Folding Exit (B793)    | <ul style="list-style-type: none"> <li>▪ Fold unit exit sensor does not turn on after the folding has been done.</li> <li>▪ Fold unit exit sensor does not turn off after it has turned on.</li> </ul>  | R7-R11      |
| 7504 137    | Finisher Guide Motor (B793)     | <ul style="list-style-type: none"> <li>▪ Exit guide plate HP sensor does not turn off after the exit guide plate has</li> </ul>   | R1-R3       |

| Jam Code<br>SP | Display                             | Description  | LCD<br>Display |
|----------------|-------------------------------------|--|----------------|
|                |                                     | <p>opened.</p> <ul style="list-style-type: none"> <li>▪ Exit guide plate HP sensor does not turn on after the exit guide plate has closed.</li> </ul>  |                |
| 7504 138       | Finisher Staple Moving Motor (B793) | <ul style="list-style-type: none"> <li>▪ Staple unit HP sensor does not turn off after the staple unit has moved from its home position.</li> <li>▪ Staple unit HP sensor does not turn on after the staple unit has returned to its home position.</li> </ul>   | R7-R11         |
| 7504 139       | Finisher Punch Motor (B793)         | <ul style="list-style-type: none"> <li>▪ Punch HP, punch movement HP or paper position slide HP sensor does not turn off after each unit has moved from its home position.</li> <li>▪ Punch HP, punch movement HP or paper position slide HP sensor does not turn on after each unit has returned to its home position.</li> </ul> | R1-R3          |
| 7504 140       | Finisher Tray Lift Motor (B793)     | <ul style="list-style-type: none"> <li>▪ Shift tray position sensor does not turn on after the shift tray has lifted up.</li> <li>▪ Shift tray position sensor does not turn off after the shift tray has lifted down.</li> </ul>  | R1-R3          |
| 7504 141       | Finisher Jogger Motor (B793)        | <ul style="list-style-type: none"> <li>▪ Jogger HP sensor does not turn off after the jogger fences have moved from its home position.</li> <li>▪ Jogger HP sensor does not turn on after the jogger fences have returned to its home position.</li> </ul>   | R7-R11         |



| Jam Code<br>SP | Display                               | Description  | LCD<br>Display |
|----------------|---------------------------------------|--|----------------|
| 7504 142       | Finisher Shift Roller Motor (B793)    | <ul style="list-style-type: none"> <li>▪ Shift motor HP sensor does not turn off after the shift roller has moved from its home position.</li> <li>▪ Shift motor HP sensor does not turn on after the shift roller has returned to its home position.</li> </ul>           | R1-R3          |
| 7504 143       | Finisher Folding Plate Motor (B793)   | <ul style="list-style-type: none"> <li>▪ Fold plate HP sensor does not turn off after the fold plate has moved from its home position.</li> <li>▪ Fold plate HP sensor does not turn on after the fold plate has returned to its home position.</li> </ul>                 | R7-R11         |
| 7504 144       | Finisher Staple Motor (B793)          | <ul style="list-style-type: none"> <li>▪ Staple HP sensor does not turn off after the staple has moved from its home position.</li> <li>▪ Staple HP sensor does not turn on after the staple has returned to its home position.</li> </ul>                                 | R7-R11         |
| 7504 145       | Finisher Exit Motor (B793)            | <ul style="list-style-type: none"> <li>▪ Stack feed-out HP sensor does not turn off after the stack feed-out has moved from its home position.</li> <li>▪ Stack feed-out HP sensor does not turn on after the stack feed-out has returned to its home position.</li> </ul> | R7-R11         |
| 7504 146       | Finisher Stack 1 Release Motor (B793) | <ul style="list-style-type: none"> <li>▪ Stopper S HP sensor does not turn off after the upper clamp roller has moved from its home position.</li> <li>▪ Stopper S HP sensor does not turn on after the upper clamp roller has returned to its home position.</li> </ul>   | R7-R11         |

| Jam Code<br>SP | Display                                  | Description  | LCD<br>Display |
|----------------|--|--|----------------|
| 7504 147       | Finisher Stack 2<br>Release Motor (B793) | <ul style="list-style-type: none"> <li>▪ Lower clamp roller HP sensor does not turn off after the lower clamp roller has moved from its home position.</li> <li>▪ Lower clamp roller HP sensor does not turn on after the lower clamp roller has returned to its home position.</li> </ul> | R7-R11         |
| 7504 148       | Finisher Stopper<br>Motor (B793)         | <ul style="list-style-type: none"> <li>▪ Stopper S HP sensor does not turn off after the stopper S has moved from its home position.</li> <li>▪ Stopper S HP sensor does not turn on after the stopper S has returned to its home position.</li> </ul>                                     | R7-R11         |
| 7504 160       | Finisher Entrance: ON                    | Entrance sensor does not turn on for specified time.   | R              |
| 7504 161       | Finisher Entrance:<br>OFF                | Entrance sensor does not turn off for specified time after the trailing edge of paper has passed this sensor.  | R              |
| 7504 162       | Finisher Stack Exit                      | Stack height sensor does not turn off after the pick-up roller has fed a stack.  | R              |
| 7504 163       | Finisher Staple                          | <ul style="list-style-type: none"> <li>▪ Staple HP sensor does not turn on when stapling movement starts.</li> <li>▪ Staple HP sensor does not turn off after the stapling movement has finished.</li> </ul>   | R              |
| 7504 164       | Finisher Staple Cancel                   | Jogger position sensor does not turn off when the stapling movement starts.  | R              |
| 7504 165       | Finisher Jogger Motor                    | <ul style="list-style-type: none"> <li>▪ Rear jogger fence HP sensor does</li> </ul>   | R              |

| Jam Code<br>SP | Display                    | Description   | LCD<br>Display |
|----------------|----------------------------|---|----------------|
|                |                            | <p>not turn off after the rear jogger fence has moved from its home position.</p> <ul style="list-style-type: none"> <li>▪ Rear jogger fence HP sensor does not turn on after the rear jogger fence has returned to its home position.</li> </ul>   |                |
| 7504 166       | Finisher Pickup Lift Motor | <ul style="list-style-type: none"> <li>▪ Pick-up roller HP sensor does not turn off after the pick-up roller has moved from its home position.</li> <li>▪ Pick-up roller HP sensor does not turn on after the pick-up roller has returned to its home position.</li> </ul>  | R              |
| 7504 167       | Finisher Staple Slide      | <ul style="list-style-type: none"> <li>▪ Stapler unit HP sensor does not turn on or off at power on initialization.</li> <li>▪ Stapler unit HP sensor does not turn off after the stapler unit has moved from its home position.</li> <li>▪ Stapler unit HP sensor does not turn on after the stapler unit has returned to its home position.</li> </ul>                                | R              |
| 7504 168       | Finisher Stack Tray        | <ul style="list-style-type: none"> <li>▪ Stack height sensor does not detect the home position of the output tray when the output tray lifts up for specified time.</li> <li>▪ Tray upper limit sensor turns on when/ while the output tray lifts up.</li> <li>▪ Tray upper limit sensor turns on even the stack height sensor detects the home position of the output tray.</li> </ul> | R              |

| Jam Code<br>SP | Display                      | Description  | LCD<br>Display |
|----------------|------------------------------|--|----------------|
|                |                              | <ul style="list-style-type: none"> <li>▪ Tray upper limit sensor does not turn off after the output tray has lifted down.</li> <li>▪ Both tray upper limit and stack near-limit sensor turn on when the output tray lifts down.</li> <li>▪ Stack near-limit sensor does not turn off after the output tray has lifted up.</li> </ul> |                |
| 7504 169       | Finisher Belt Lift Solenoid  | Belt lift sensor does not turn on at power on initialization.  | R              |
| 7504 230       | Finisher Exit No Response    | The machine does not get paper exit signal from the finisher.  | -              |
| 7504 231       | Finisher Communication Error | The machine does not detect the finisher.  | -              |

### **Paper Size Code**

| Size Code | Paper Size | Size Code | Paper Size |
|-----------|------------|-----------|------------|
| 05        | A4 LEF     | 141       | B4 SEF     |
| 06        | A5 LEF     | 142       | B5 SEF     |
| 14        | B5 LEF     | 160       | DLT SEF    |
| 38        | LT LEF     | 164       | LG SEF     |
| 44        | HLT LEF    | 166       | LT SEF     |
| 132       | A3 SEF     | 172       | HLT SEF    |
| 133       | A4 SEF     | 255       | Others     |
| 134       | A5 SEF     |           |            |

## 4.7 ELECTRICAL COMPONENT DEFECTS

### 4.7.1 SENSORS

 Note

- The CN numbers in the following table are the connector numbers on the BICU.

| No.  | Sensor Name/<br>Sensor Board Name  | Active | CN        | Condition        | Symptom                                    |
|------|------------------------------------|--------|-----------|------------------|--|
| SW01 | Right Cover Open Switch            | L      | CN211/35  | Open             | "Open Cover" is displayed                  |
|      |                                    |        |           | Shorted          | Right cover open cannot be detected.       |
| S01  | ID Sensor                          | A      | CN213     | Open/<br>Shorted | SC400                                      |
| S02  | Registration Sensor                | L      | CN212/2   | Open             | Jam A (Jam8, 17)                           |
|      |                                    |        |           | Shorted          | Jam A, B (Jam1)                            |
| S03  | Drum Gear Position Sensor-K        | H      | CN212/5   | Open/<br>Shorted | SC380                                      |
| S04  | Drum Gear Position Sensor-CMY      | H      | CN212/8   | Open/<br>Shorted | SC380                                      |
| S05  | Shutter Positioning Sensor - Open  | H      | CN214/26  | Open             | SC296                                      |
|      |                                    |        |           | Shorted          | SC293                                      |
| S06  | Shutter Positioning Sensor - Close | H      | CN214/29  | Open             | SC296                                      |
|      |                                    |        |           | Shorted          | SC290                                      |
| S07  | Toner End Sensor - Y               | L      | CN232/A16 | Open             | Toner end cannot be detected.              |
| S08  | Toner End Sensor - C               |        | CN232/B1  |                  |  |
| S09  | Toner End Sensor -                 |        | CN232/B4  | Shorted          | Toner end is detected when there is enough |
| S10  | M                                  |        | CN232/B7  |                  |  |

| No.        | Sensor Name/<br>Sensor Board Name      | Active | CN                      | Condition        | Symptom  |
|------------|--|--------|-------------------------|------------------|--|
|            | Toner End Sensor - K                   |        |                         |                  | toner.   |
| S11        | Image Transfer Belt<br>Rotation Sensor | H/L    | CN233/15                | Open/<br>Shorted | SC443  |
| S12        | Paper Feed Sensor 1                    | L      | CN281/2                 | Open             | Jam A (Jam3, 11)   |
|            |  |        |                         | Shorted          | Jam A, B (Jam1)  |
| S13<br>S16 | Paper End<br>Sensor 1, 2               | L      | CN281/5,<br>14          | Open             | Paper end is not<br>detected when there is<br>no paper in the paper<br>tray. |
|            |  |        |                         | Shorted          | Paper end is detected<br>when there is paper in<br>the paper tray.           |
| S14<br>S17 | Paper Lift Sensor 1, 2                 | H      | CN281/8,<br>17          | Open/<br>Shorted | SC501, SC502   |
| S15        | Paper Feed Sensor 2                    | L      | CN281/11                | Open             | Jam A (Jam4, 12)   |
|            |  |        |                         | Shorted          | Jam A, B (Jam1)  |
| S18<br>S19 | Tray 1 Paper Height<br>Sensor 1, 2     | L      | CN282/2, 5              | Open/<br>Shorted | Remaining paper<br>volume on the LCD is<br>wrong.                            |
| SW02       | Tray 1 Set Switch                      | L      | CN282/17                | Open             | Tray 1 is not detected<br>when tray 1 is set.                                |
|            |  |        |                         | Shorted          | Tray 1 is detected when<br>tray 1 is not set.                                |
| S22        | By-pass Paper Size<br>Sensor           | L      | CN283/A1,<br>A2, A4, A5 | Open/<br>Shorted | Paper size error   |
| S23        | By-pass Paper                          | L      | CN283/A7                | Open             | Paper on the by-pass   |

| No. | Sensor Name/<br>Sensor Board Name | Active | CN        | Condition        | Symptom  |
|-----|-----------------------------------|--------|-----------|------------------|--|
|     | Detection Sensor                  |        |           |                  | tray is not detected when paper is set.                      |
|     |                                   |        |           | Shorted          | Paper on the by-pass tray is detected when paper is not set. |
| S24 | Fusing Entrance Sensor            | L      | CN283/B6  | Open             | Jam C (Jam 18)   |
|     |                                   |        |           | Shorted          | Jam C (Jam 1)  |
| S25 | Duplex Entrance Sensor            | L      | CN283/B9  | Open             | Jam Z (Jam 27)   |
|     |                                   |        |           | Shorted          | Jam Z (Jam 1)  |
| S26 | Duplex Exit Sensor                | L      | CN283/B12 | Open             | Jam Z (Jam 25)   |
|     |                                   |        |           | Shorted          | Jam Z (Jam 1)  |
| S27 | TD Sensor - K                     | A      | CN217/7   | Open/<br>Shorted | SC372  |
| S28 | TD Sensor - C                     | A      | CN217/15  | Open/<br>Shorted | SC374  |
| S29 | TD Sensor - Y                     | A      | CN217/23  | Open/<br>Shorted | SC375  |
| S30 | TD Sensor - M                     | A      | CN217/31  | Open/<br>Shorted | SC373  |
| S31 | Fusing Exit Sensor                | L      | CN253/2   | Open             | Jam C (Jam 19)   |
|     |                                   |        |           | Shorted          | Jam C (Jam 1)  |
| S32 | Waste Toner Sensor                | H      | CN251/A2  | Open             | Waste toner near full indicated when it is not near full.    |
|     |                                   |        |           | Shorted          | Waste toner near full  |

| No.  | Sensor Name/<br>Sensor Board Name | Active | CN                     | Condition        | Symptom  |
|------|-----------------------------------|--------|------------------------|------------------|--|
|      |                                   |        |                        |                  | cannot be detected when the waste toner bottle is nearly full.   |
| SW03 | Waste Toner Bottle Set Switch     | L      | CN251/A4               | Open             | Waste toner bottle is not detected when the waste toner bottle is set.                                     |
|      |                                   |        |                        | Shorted          | Waste toner bottle is detected when the waste toner bottle is set.   |
| S33  | Tray 2 Paper Size Switch          | L      | CN251/B8, B9, B10, B12 | Open/<br>Shorted | Paper size error   |
| S34  | Temperature/<br>Humidity Sensor   | A      | CN286/1, 3             | Open/<br>Shorted | SC498<br>Printed image has some problems such as rough image, dirty background, weak image or poor fusing. |
| S35  | Thermopile                        | A      | CN286/8                | Open/<br>Shorted | SC541  |
| TH1  | Thermistor<br>- Heating Roller    | A      | CN257/9,<br>11         | Open/<br>Shorted | SC551  |
| TH2  | Thermistor<br>- Pressure Roller   | A      | CN257/30               | Open/<br>Shorted | SC561  |
| S36  | Paper Exit Sensor                 | L      | CN218/12               | Open             | Jam C (Jam 20)   |
|      |                                   |        |                        | Shorted          | Jam C (Jam 1)  |



| No.  | Sensor Name/<br>Sensor Board Name | Active | CN       | Condition        | Symptom  |
|------|-----------------------------------|--------|----------|------------------|--|
| S37  | Paper Overflow Sensor             | L      | CN218/15 | Open             | Paper overflow message is not displayed when the paper overflow condition still remains. |
|      |                                   |        |          | Shorted          | Paper overflow message is displayed when the paper overflow condition does not remain.   |
| S38  | Original Width Sensor 1           | A      | CN313/2  | Open/<br>Shorted | Original paper size cannot be detected.  |
| S39  | Original Width Sensor 2           | A      | CN313/5  | Open/<br>Shorted | Original paper size cannot be detected.  |
| S40  | Original Length Sensor 1          | A      | CN313/8  |                  |  |
| S41  | Original Length Sensor 2          | A      | CN313/11 |                  |  |
| S42  | Original Length Sensor 3          | A      | CN313/14 |                  |  |
| S43  | Scanner HP Sensor                 | H      | CN318/2  | Open             | SC120  |
|      |                                   |        |          | Shorted          | SC121  |
| S44  | Platen Cover Sensor               | L      | CN318/5  | Open/<br>Shorted | Platen cover open cannot be detected.  |
| (M6) | Paper Transfer Roller HP Sensor   | L      | CN214/19 | Open/<br>Shorted | SC452  |
| (M8) | Image Transfer Belt               | L      | CN215/2  | Open/            | SC442  |

| No. | Sensor Name/<br>Sensor Board Name | Active | CN | Condition | Symptom |
|-----|-----------------------------------|--------|----|-----------|---------|
|     | Contact Sensor                    |        |    | Shorted   |         |

## 4.7.2 BLOWN FUSE CONDITIONS

### Power Supply Unit

| Fuse  | Rating   |             | Symptom when turning on the main switch                             |
|-------|----------|-------------|---|
|       | 115V     | 220V - 240V |   |
| FU1   | 5A/250V  | 5A/250V     | 5VE power to the SIO and IOB not supplied.                          |
| FU2   | 5A/250V  | 5A/250V     | No response. (5V power to the BICU and controller is not supplied.) |
| FU3   | 5A/250V  | 5A/250V     | 5V power to the IOB and finisher is not supplied.                   |
| FU4   | 10A/125V | 10A/125V    | 24V power to the BICU finisher is not supplied.                     |
| FU5   | 10A/125V | 10A/125V    | 24V power to the SIO and IOB not supplied.                          |
| FU6   | 10A/125V | 10A/125V    | 24VS1 power to the IOB not supplied.                                |
| FU7   | 10A/125V | 10A/125V    | 24VS2 power to the IOB not supplied.                                |
| FU501 | 2A/250V  | 2A/250V     | PSU fan does not turn on.   |
| FU101 | 15A/125V | 8A/250V     | No response.  |
| FU102 | 15A/125V | 6.3A/250V   | Fusing heater does not turn on.                                     |
| FU103 | 2A/250V  | 2A/250V     | Tray heater does not turn on.                                       |

# **SERVICE TABLES**



---

## 5. SERVICE TABLES

### 5.1 SERVICE PROGRAM MODE

#### CAUTION

- Make sure that the data-in LED (🔌) is not on before you go into the SP mode. This LED indicates that some data is coming to the machine. When the LED is on, wait for the copier to process the data.

#### 5.1.1 ENTERING AND EXITING SERVICE PROGRAM MODE

##### Note

- The Service Program Mode is for use by service representatives only. If this mode is used by anyone other than service representatives for any reason, data might be deleted or settings might be changed. In such case, product quality cannot be guaranteed any more.

#### *Entering SP Mode*

1. Press the "Clear Mode" key (🗑️).
2. Use keypad to enter "107" (1 0 7).
3. Hold down "Clear/Stop" (⏹️) for 3 seconds at least.
4. Enter the Service Mode.

#### *Exiting SP Mode*

1. Press "Exit" on the LCD twice to return to the copy window.

#### 5.1.2 TYPES OF SP MODES


- Copy SP: SP modes related to the engine functions
- Printer SP: SP modes related to the controller functions
- Scanner SP: SP modes related to the scanner functions
- Fax SP: SP modes related to the fax functions

Select one of the Service Program modes (Copy, Printer, Scanner, or Fax) from the touch panel as shown in the diagram below after you access the SP mode. This section explains the functions of the Printer/Copy/Scanner SP modes. Refer to the Fax service manual for the Fax SP modes.



### SP Mode Button Summary


Here is a short summary of the touch-panel buttons.

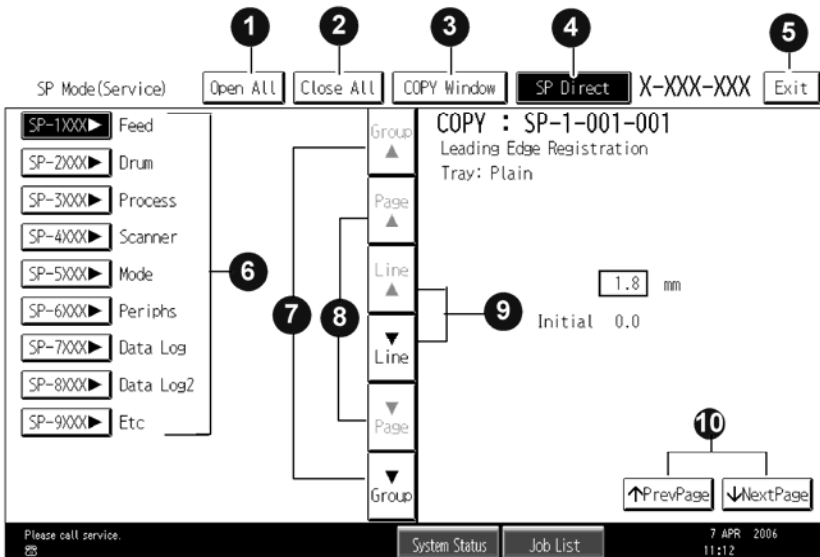

|          |   |
|----------|---|
| <b>1</b> | Opens all SP groups and sublevels.  |
| <b>2</b> | Closes all open groups and sublevels and restores the initial SP mode display.  |
| <b>3</b> | Opens the copy window (copy mode) so you can make test copies. Press SP Mode (highlighted) in the copy window to return to the SP mode screen,  |
| <b>4</b> | Enter the SP code directly with the number keys if you know the SP number. Then press $\oplus$ . (The required SP Mode number will be highlighted when pressing $\oplus$ . If not, just press the required SP Mode number.) |
| <b>5</b> | Press two times to leave the SP mode and return to the copy window to resume  |

|   |  |
|---|--|
|   | normal operation.  |
| ⑥ | Press any Class 1 number to open a list of Class 2 SP modes.                                       |
| ⑦ | Press to scroll the show to the previous or next group.  |
| ⑧ | Press to scroll to the previous or next display in segments the size of the screen display (page). |
| ⑨ | Press to scroll the show the previous or next line (line by line).                                 |
| ⑩ | Press to move the highlight on the left to the previous or next selection in the list.             |


### ***Switching Between SP Mode and Copy Mode for Test Printing***

1. In the SP mode, select the test print. Then press Copy Window.
2. Use the copy window (copier mode), to select the appropriate settings (paper size, etc.) for the test print.
3. Press Start  to start the test print.
4. Press SP Mode (highlighted) to return to the SP mode screen and repeat from step 1.

### ***Selecting the Program Number***

Program numbers have two or three levels.

1. Refer to the Service Tables to find the SP that you want to adjust before you begin.
2. Press the Group number on the left side SP Mode window that contains the SP that you want to adjust.
3. Use the scrolling buttons in the center of the SP mode window to show the SP number that you want to open. Then press that number to expand the list.
4. Use the center touch-panel buttons to scroll to the number and title of the item that you want to set and press it. The small entry box on the right activates and shows the default or the current settings.

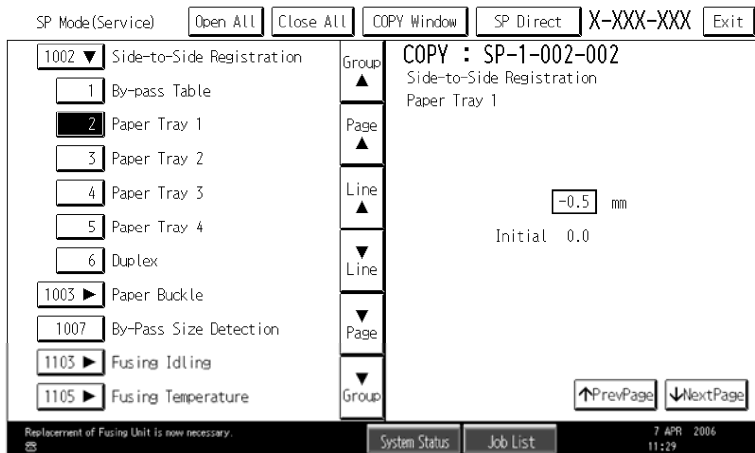

↓ Note

- Refer to the Service Tables for the range of allowed settings.
1. Do this procedure to enter a setting:
    - Press to toggle between plus and minus and use the keypad to enter the appropriate number. The number you enter writes over the previous setting.
    - Press to enter the setting. (The value is not registered if you enter a number that is out of range.)
    - Press “Yes” when you are prompted to complete the selection.
  2. If you need to perform a test print, press Copy Window to open the copy window and select the settings for the test print. Press Start and then press SP Mode (highlighted) in the copy window to return to the SP mode display.
  3. Press Exit two times to return to the copy window when you are finished.

### Exiting Service Mode

Press the Exit key on the touch-panel.

### Service Mode Lock/Unlock

At locations where the machine contains sensitive data, the customer engineer cannot operate the machine until the Administrator turns the service mode lock off. This function makes sure that work on the machine is always done with the permission of the Administrator.

1. If you cannot go into the SP mode, ask the Administrator to log in with the User Tool and then set “Service Mode Lock” to OFF after he or she logs in:
 

User Tools > System Settings > Administrator Tools > Service Mode Lock > OFF

  - This unlocks the machine and lets you get access to all the SP codes.
  - The CE can service the machine and turn the machine off and on. It is not necessary to ask the Administrator to log in again each time the machine is turned on.



2. Go into the SP mode and set SP5169 to “1” if you must use the printer bit switches.
3. After machine servicing is completed:
  - Change SP5169 from “1” to “0”.
  - Turn the machine off and on. Tell the administrator that you have completed servicing the machine.
  - The Administrator will then set the “Service Mode Lock” to ON.

### 5.1.3 REMARKS

#### ***Display on the Control Panel Screen***

The maximum number of characters which can show on the control panel screen is limited to 30 characters. For this reason, some of the SP modes shown on the screen need to be abbreviated. The following are abbreviations used for the SP modes for which the full description is over 20 characters.

|  |   |
|--|---|
| <p><b>Paper Type</b><br/>         N: Normal paper<br/>         MTH: Middle thick paper<br/>         TH: Thick paper</p>  | <p><b>Paper Feed Station</b><br/>         P: Paper tray<br/>         B: By-pass table</p>   |
| <p><b>Color Mode [Color]</b><br/>         [K]: Black in B&amp;W mode<br/>         [Y], [M], or [C]: Yellow, Magenta, or Cyan in Full Color mode<br/>         [YMC]: Only for Yellow, Magenta, and Cyan<br/>         [FC]: Full Color mode<br/>         [FC, K], [FC, Y], [FC, M], or [FC, C]: Black, Yellow, Magenta, or Cyan in full color mode</p> |   |
| <p><b>Print Mode</b><br/>         S: Simplex<br/>         D: Duplex</p>  | <p><b>Process Speed</b><br/>         L: Low speed (77 mm/s)<br/>         M: Middle speed (Not used in this machine)<br/>         H: High speed (138 mm/s)</p> |

#### ***Others***

The following symbols are used in the SP mode tables.

**FA:** Factory setting

(Data may be adjusted from the default setting at the factory. Refer to the factory setting sheets enclosed. You can find it under the jammed paper removal decal.)

**DFU:** Design/Factory Use only

Do not touch these SP modes in the field.

A sharp (#) to the right hand side of the mode number column means that the main switch must be turned off and on to effect the setting change.

An asterisk (\*) to the right hand side of the mode number column means that this mode is stored in the NVRAM. If you do a RAM clear, this SP mode will be reset to the default value. “ENG” and “CTL” show which NVRAM contains the data.

- ENG: NVRAM on the BICU board
- CTL: NVRAM on the controller board

The settings of each SP mode are explained in the right-hand column of the SP table in the following way.

[Adjustable range / **Default setting** / Step ] Alphanumeric



- If “Alphanumeric” is written to the right of the bracket as shown above, the setting of the SP mode shows on the screen using alphanumeric characters instead of only numbers. However, the settings in the bracket in the SP mode table are explained by using only the numbers.

**SSP:** This denotes a “Special Service Program” mode setting.

## 5.2 COPY SERVICE MODE

### 5.2.1 SERVICE MODE TABLE

#### SP1-XXX (Feed)

|      |  |      |                                      |
|------|--|------|--------------------------------------|
| 1001 | [Leading Edge Registration] Leading Edge Registration Adjustment<br>(Tray Location, Paper Type, Color Mode), Paper Type -> Plain, Thick 1 or Thick 2 |      |                                      |
|      | Adjusts the leading edge registration by changing the registration clutch operation timing for each mode.  |      |                                      |
| 001  | Tray: Plain: BW  | *ENG | [-9 to 9 / <b>0.0</b> / 0.1 mm/step] |
| 002  | Tray: Thick 1: BW  | *ENG |                                      |
| 003  | Tray: Thick 2: BW  | *ENG |                                      |
| 004  | By-pass Table: Plain: BW   | *ENG |                                      |
| 005  | By-pass Table: Thick 1: BW   | *ENG |                                      |
| 006  | By-pass Table: Thick 2: BW   | *ENG |                                      |
| 007  | Duplex: Plain: BW  | *ENG |                                      |
| 008  | Duplex: Thick 1: BW  | *ENG |                                      |
| 009  | Paper Tray: Plain: Color   | *ENG |                                      |
| 010  | Paper Tray: Thick 1: Color   | *ENG |                                      |
| 011  | Paper Tray: Thick 2: Color   | *ENG |                                      |
| 012  | By-pass Table: Plain: Color  | *ENG |                                      |
| 013  | By-pass Table: Thick 1: Color  | *ENG |                                      |

|     |                      |      |  |
|-----|----------------------|------|--|
|     | Color                |      |  |
| 015 | Duplex: Plain: Color | *ENG |  |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>1002</b> | <b>[Side to Side Reg.]</b> Side-to-Side Registration Adjustment                                     |      |                                      |
|             | Adjusts the side-to-side registration by changing the laser main scan start position for each mode. |      |                                      |
| 001         | By-pass Table   | *ENG | [-4 to 4 / <b>0.0</b> / 0.1 mm/step] |
| 002         | Paper Tray 1  | *ENG |                                      |
| 003         | Paper Tray 2  | *ENG |                                      |
| 004         | Paper Tray 3  | *ENG |                                      |
| 005         | Paper Tray 4  | *ENG |                                      |
| 006         | Duplex  | *ENG |                                      |

|             |  |      |                                  |
|-------------|--|------|----------------------------------|
| <b>1003</b> | <b>[Paper Buckle]</b> Paper Buckle Adjustment<br>(Tray Location, Paper Type), Paper Type: N: Normal, TH: Thick |      |                                  |
|             | Adjusts the amount of paper buckle at the registration roller by changing the paper feed timing.               |      |                                  |
| 001         | Paper Tray1: Plain   | *ENG | [-5 to 5 / <b>0</b> / 1 mm/step] |
| 002         | Paper Tray1: Thick1  | *ENG |                                  |
| 003         | Paper Tray1: Thick2  | *ENG |                                  |
| 004         | Paper Tray2/3/4: Plain   | *ENG |                                  |
| 005         | Paper Tray2/3/4: Thick 1   | *ENG |                                  |
| 006         | Paper Tray2/3/4: Thick 2   | *ENG |                                  |
| 007         | By-pass: Plain   | *ENG |                                  |
| 008         | By-pass: Thick1  | *ENG |                                  |

|     |                          |      |  |
|-----|--------------------------|------|--|
| 009 | By-pass: Thick2          | *ENG |  |
| 010 | Duplex: Plain            | *ENG |  |
| 011 | Duplex: Thick1           | *ENG |  |
| 012 | Tray 1: Thin             | *ENG |  |
| 013 | Tray 1: Middle Thick     | *ENG |  |
| 014 | Tray 2/3/4: Thin         | *ENG |  |
| 015 | Tray 2/3/4: Middle Thick | *ENG |  |
| 016 | By-pass: Thin            | *ENG |  |
| 017 | By-pass: Middle Thick    | *ENG |  |
| 018 | By-pass: Thick 3         | *ENG |  |
| 020 | Duplex: Middle Thick     | *ENG |  |

|             |   |      |  |
|-------------|---|------|--|
| <b>1007</b> | <b>[By-Pass Size Detection]</b> By-Pass Size Detection Display  |      |  |
|             | LG  | *ENG | [0 or 1 / <b>0</b> / – ] 0: Disable, 1: Enable |
| 001         | <p>Enables or disables the automatic paper size detection function of the by-pass tray.</p> <p>This SP determines what paper size the machine detects if the detected size is less than 8.5".</p> <p>0: OFF (Letter/SEF), 1: ON (Legal/SEF)</p> |      |  |

|             |  |      |   |
|-------------|--|------|---|
| <b>1103</b> | <b>[Fusing Idling]</b> Fusing Idling Adjustment                    |      |   |
| 001         | Extra Idling Time  | *ENG | [0 to 60 / <b>0</b> / 1 sec/step] <b>Not used</b> |
|             | Specifies how long the extra idling operation is executed.         |      |   |
| 010         | Idling Speed   | *ENG | [0 to 3 / <b>1</b> / 1 /step] <b>Not used</b>     |
|             | In this machine, only the selection of "1" (77 mm/s) is effective. |      |   |

|     |  |      |   |
|-----|--|------|---|
| 011 | Idling Start Temp.                                       | *ENG | [0 to 180 / <b>100</b> / 1 deg/step]  |
|     | Specifies the threshold temperature to start the idling. |      |   |
| 012 | Forced Idling Stop                                       | *ENG | [0 or 1 / <b>1</b> / - ] <b>DFU</b>   |
|     | Enables or disables the forced idling stop.              |      |   |
| 013 | Forced Idling Stop Temp.                                 | *ENG | [120 to 180 / <b>150</b> / 1 deg/step] <b>DFU</b>   |
|     | Specifies the threshold temperature to stop the idling.  |      |   |
| 014 | Minimum Idling Time                                      | *ENG | [0 to 10 / <b>2</b> / 1 sec/step]   |
|     | Specifies the minimum idling time.                       |      |   |
| 015 | Minimum Idling Time:<br>Recovery                         | *ENG | [0 to 10 / <b>0</b> / 1 sec/step]   |
|     | Specifies the minimum idling time at recovery.           |      |   |
| 016 | Extra Idling Time (L)                                    | *ENG | Specifies how long the extra idling operation is executed for each environment.<br>[0 to 60 / <b>0</b> / 1 sec/step]<br>Each environment is determined with SP1112-001 and 002. |
| 017 | Extra Idling Time (H)                                    | *ENG |   |
| 018 | Extra Idling Time (M)                                    | *ENG |   |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>1105</b> | <b>[Fusing Temperature]</b> Fusing Temperature Adjustment   |      |                                      |
|             | (Printing Mode, Roller Type, [Color], Simplex/Duplex)<br>Roller Type → Center and Ends: Heating roller, Pressure → Pressure roller<br>Paper Type → Plain, Thin, Thick, OHP, Middle Thick, Special |      |                                      |
| 001         | Fusing Ready Temp.  | *ENG | [120 to 180 / <b>170</b> / 1°C/step] |
|             | Specifies the heating roller target temperature for the ready condition.  |      |                                      |
| 002         | Fusing Ready: Offset  | *ENG | [5 to 30 / <b>10</b> / 1°C/step]     |
|             | Sets the heating roller offset temperature for the printing ready condition.<br>Ready temperature = (Target temperature specified in SP1-105-1) –   |      |                                      |

|     |  |       |                                      |
|-----|--|-------|--------------------------------------|
|     | Temperature specified in this SP mode  |       |                                      |
| 007 | Pressure Ready Temp.   | *ENG  | [0 to 100 / <b>20</b> / 1°C/step]    |
|     | Specifies the pressure roller target temperature for the ready condition.  |       |                                      |
| 008 | Fusing Limit Temp.   | *ENG  | [0 to 30 / <b>15</b> / 1°C/step]     |
|     | Specifies the limit temperature for the heating roller. The paper can be fed when the heating roller temperature is lower than the specified temperature (print ready temperature + the value specified with this SP.) |       |                                      |
| 009 | Printable Pressure Temp.   | * ENG | [0 to 100 / <b>50</b> / 1°C/step]    |
|     | Specifies the print ready temperature for the pressure roller.   |       |                                      |
| 010 | Stand-By: Center   | * ENG | [130 to 180 / <b>165</b> / 1°C/step] |
|     | Specifies the stand-by temperature for the heating roller.   |       |                                      |
| 011 | Stand-By: Ends   | * ENG | [130 to 180 / <b>165</b> / 1°C/step] |
|     | Specifies the stand-by temperature for the heating roller.   |       |                                      |
| 012 | Stand-By: Pressure   | * ENG | [130 to 160 / <b>150</b> / 1°C/step] |
|     | Specifies the stand-by temperature for the pressure roller.  |       |                                      |
| 013 | Panel Off Mode: Center   | * ENG | [100 to 180 / <b>140</b> / 1°C/step] |
|     | Specifies the temperature of the panel off mode for the heading roller.  |       |                                      |
| 014 | Panel Off Mode: Ends   | * ENG | [100 to 180 / <b>140</b> / 1°C/step] |
|     | Specifies the temperature of the panel off mode for the heading roller.  |       |                                      |
| 015 | Panel Off Mode: Pressure   | * ENG | [100 to 160 / <b>150</b> / 1°C/step] |
|     | Specifies the temperature of the panel off mode for the pressure roller.   |       |                                      |
| 016 | Low Power: Center  | * ENG | [30 to 180 / <b>40</b> / 1°C/step]   |
|     | Specifies the temperature of the low power mode for the heading roller.  |       |                                      |

|   |  |       |                                      |
|---|--|-------|--------------------------------------|
| 017   | Low Power: Ends  | * ENG | [30 to 180 / <b>40</b> / 1°C/step]   |
|   | Specifies the temperature of the low power mode for the heading roller.  |       |                                      |
| 018   | Low Power: Pressure  | * ENG | [30 to 160 / <b>100</b> / 1°C/step]  |
|   | Specifies the temperature of the low power mode for the pressure roller. |       |                                      |
| 019   | Off Mode: Center   | * ENG | [0 to 180 / <b>0</b> / 1°C/step]     |
|   | Specifies the temperature of the off mode for the heading roller.        |       |                                      |
| 020   | Off Mode: Ends   | * ENG | [0 to 180 / <b>0</b> / 1°C/step]     |
|   | Specifies the temperature of the off mode for the heading roller.        |       |                                      |
| 021   | Off Mode: Pressure   | * ENG | [0 to 170 / <b>0</b> / 1°C/step]     |
|   | Specifies the temperature of the off mode for the pressure roller.       |       |                                      |
| The following SPs except SP1105-085 set the target operating temperatures of the heating roller in various modes. |  |       |                                      |
| 030   | Plain: FC: Simplex   | *ENG  | [120 to 180 / <b>160</b> / 1°C/step] |
| 032   | Plain: FC: Duplex  | *ENG  | [120 to 180 / <b>160</b> / 1°C/step] |
| 034   | Plain: BW: Simplex   | *ENG  | [120 to 180 / <b>160</b> / 1°C/step] |
| 036   | Plain: BW: Duplex  | *ENG  | [120 to 180 / <b>160</b> / 1°C/step] |
| 038   | Thin: FC: Simplex  | *ENG  | [120 to 180 / <b>155</b> / 1°C/step] |
| 040   | Thin: FC: Duplex   | *ENG  | [120 to 180 / <b>155</b> / 1°C/step] |
| 042   | Thin: BW: Simplex  | *ENG  | [120 to 180 / <b>155</b> / 1°C/step] |
| 044   | Thin: BW: Duplex   | *ENG  | [120 to 180 / <b>155</b> / 1°C/step] |
| 046   | Thick 1: FC: Simplex   | *ENG  | [120 to 180 / <b>165</b> / 1°C/step] |
| 048   | Thick 1: FC: Duplex  | *ENG  | [120 to 180 / <b>170</b> / 1°C/step] |
| 050   | Thick 1: BW: Simplex   | *ENG  | [120 to 180 / <b>165</b> / 1°C/step] |
| 052   | Thick 1: BW: Duplex  | *ENG  | [120 to 180 / <b>170</b> / 1°C/step] |



|     |                             |      |   |
|-----|-----------------------------|------|---|
| 054 | Thick 2: FC: Simplex        | *ENG | [120 to 180 / <b>175</b> / 1°C/step]  |
| 055 | Thick 2: BW: Simplex        | *ENG | [120 to 180 / <b>175</b> / 1°C/step]  |
| 056 | OHP: FC                     | *ENG | [120 to 180 / <b>175</b> / 1°C/step]  |
| 057 | OHP: BW                     | *ENG | [120 to 180 / <b>165</b> / 1°C/step]  |
| 058 | Special 1: FC: Simplex      | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 060 | Special 1: FC: Duplex       | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 062 | Special 1: BW: Simplex      | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 064 | Special 1: BW: Duplex       | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 066 | Special 2: FC: Simplex      | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 068 | Special 2: FC: Duplex       | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 070 | Special 2: BW: Simplex      | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 072 | Special 2: BW: Duplex       | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 074 | Special 3: FC: Simplex      | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 076 | Special 3: FC: Duplex       | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 078 | Special 3: BW: Simplex      | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 080 | Special 3: BW: Duplex       | *ENG | [120 to 200 / <b>165</b> / 1°C/step]  |
| 082 | Target Temp. After Ready    | *ENG | [120 to 180 / <b>170</b> / 1°C/step]  |
| 083 | Recovery Target Temp.       | *ENG | [120 to 180 / <b>160</b> / 1°C/step]  |
| 084 | Target Temp. After Recovery | *ENG | [120 to 180 / <b>170</b> / 1°C/step]  |
| 085 | Print Start: Offset         | *ENG | Specifies the paper feed start temperature. This value is the offset temperature in relation to the target temperature for the ready condition. |

|     |                           |      |                                      |
|-----|---------------------------|------|--------------------------------------|
|     |                           |      | [0 to 30 / <b>10</b> / 1°C/step]     |
| 089 | Thick 3: FC: Simplex      | *ENG | [120 to 180 / <b>180</b> / 1°C/step] |
| 091 | Thick 3: BW: Simplex      | *ENG | [120 to 180 / <b>170</b> / 1°C/step] |
| 109 | Middle Thick: FC: Simplex | *ENG | [120 to 180 / <b>170</b> / 1°C/step] |
| 110 | Middle Thick: FC: Duplex  | *ENG | [120 to 180 / <b>170</b> / 1°C/step] |
| 111 | Middle Thick: BW: Simplex | *ENG | [120 to 180 / <b>170</b> / 1°C/step] |
| 112 | Middle Thick: BW: Duplex  | *ENG | [120 to 180 / <b>170</b> / 1°C/step] |

|             |  |   |   |
|-------------|--|---|---|
| <b>1106</b> | <b>[Fusing Temperature Display]</b> Fusing Temperature Display (Heating or Pressure) |   |   |
|             | Displays the current temperature of the heating and pressure rollers.                |   |   |
| 001         | Fusing: Center   | - | [-20 to 250 / - / 1°C/step]   |
| 002         | Fusing: Ends   | - | The heating roller has two lamps. One heats the center of the heating roller and the other heats both ends of the heating roller. |
| 003         | Pressure   | - |   |

|             |   |      |   |
|-------------|---|------|---|
| <b>1109</b> | <b>[Fusing Nip Band Check]</b>                                  |      |   |
| 001         | Execute   | -    | Executes the nip band measurement between fusing belt and pressure roller. If the nip band width is not 8 mm, and fusing is not good, replace the pressure roller or install a new fusing unit. |
| 002         | Pre-Idling Time   | *ENG | [0 to 120 / <b>0</b> / 1 sec/step]  |
|             | Specifies the fusing rotation time before executing SP1109-001. |      |   |

|     |   |       |                                    |
|-----|---|-------|------------------------------------|
| 003 | Stop Time                                 | * ENG | [5 to 30 / <b>10</b> / 1 sec/step] |
|     | Specifies the time for measuring the nip. |       |                                    |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>1112</b> | <b>[Environmental Correction: Fusing]</b>   |      |                                   |
| 001         | Temp.: Threshold: Low   | *ENG | [10 to 23 / <b>17</b> / 1°C/step] |
|             | Specifies the threshold temperature for low temperature condition.  |      |                                   |
| 002         | Temp.: Threshold: High  | *ENG | [24 to 40 / <b>30</b> / 1°C/step] |
|             | Specifies the threshold temperature for high temperature condition.   |      |                                   |
| 003         | Low Temp. Correction  | *ENG | [0 to 15 / <b>5</b> / 1°C/step]   |
|             | Specifies the temperature correction for the heating roller. When the low temperature condition (specified with SP1112-001) is detected, the value of this SP is added to the heating roller temperature.         |      |                                   |
| 004         | High Temp. Correction   | *ENG | [0 to 15 / <b>5</b> / 1°C/step]   |
|             | Specifies the temperature correction for the heating roller. When the high temperature condition (specified with SP1112-002) is detected, the value of this SP is subtracted from the heating roller temperature. |      |                                   |

|             |   |      |  |
|-------------|---|------|--|
| <b>1113</b> | <b>[Stand-by Time]</b>  |      |  |
| 001         | After Ready   | *ENG | [0 to 60 / <b>10</b> / 1 sec/step]                 |
|             | Specifies the interval from the ready mode to the stand-by mode.<br>If the machine does not do any printing job for the time specified with this SP after the heating roller has reached the ready temperature, the machine returns to the stand-by mode. |      |  |
| 002         | Recovery Target Temp.   | *ENG | [0 to 60 / <b>10</b> / 1 sec/step] <b>Not used</b> |
| 003         | After Recovery  | *ENG | [0 to 60 / <b>10</b> / 1 sec/step]                 |
|             | Specifies the interval from the recovery to the stand-by mode.<br>If the machine does not do any printing job for the time specified with this SP   |      |  |

|  |   |
|--|---|
|  | after the machine has recovered from the energy save mode, it returns to the stand-by mode. |
|--|---|

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>1114</b> | <b>[First Print Correction]</b>   |      |                                    |
| 001         | Correction Temp.  | *ENG | [0 to 30 / <b>10</b> / 1°C/step]   |
|             | Specifies the additional temperature for the first print job.<br>This temperature is added to the heating roller for the time specified with SP1114-002.  |      |                                    |
| 002         | Operation Time  | *ENG | [0 to 60 / <b>2</b> / 1 sec/step]  |
|             | Specifies the time for adding the first print additional temperature, which is specified with SP1114-001.   |      |                                    |
| 003         | Shift Time  | *ENG | [0 to 5 / <b>0</b> / 0.1 sec/step] |
|             | Specifies the start time for adding the first print additional temperature at 138 mm/s line speed.<br>The machine starts to add the first print additional temperature when the time specified with this SP has passed after feeding paper. |      |                                    |
| 004         | Shift Time: Half Speed  | *ENG | [0 to 5 / <b>0</b> / 0.1 sec/step] |
|             | Specifies the start time for adding the first print additional temperature at 77 mm/s line speed.<br>The machine starts to add the first print additional temperature when the time specified with this SP has passed after feeding paper.  |      |                                    |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>1115</b> | <b>[Stand-by Idling]</b>   |      |                                     |
| 001         | Interval   | *ENG | [1 to 240 / <b>60</b> / 1 min/step] |
|             | Specifies the interval between idling during stand-by mode.<br>This idling during the stand-by mode prevents the roller deformation. |      |                                     |
| 002         | Idling Time  | *ENG | [1 to 60 / <b>2</b> / 0.1 sec/step] |
|             | Specifies the length of each idling operation during stand-by mode.  |      |                                     |

|     |              |      |   |
|-----|--------------|------|---|
| 003 | Idling Speed | *ENG | [0 to 3 / 1 / 1 mm/sec /step] <b>Not used</b> |
|-----|--------------|------|---|

|             |  |      |                            |
|-------------|--|------|----------------------------|
| <b>1116</b> | <b>[Ends Temp. Correction]</b>   |      |                            |
| 010         | Center Temp. 1: 226–   | *ENG | [–30 to 0 / 0 / 1°C/step]  |
|             | Specifies the temperature correction for the heating roller (center) when the paper width is 226 mm or more.<br>The start time of this SP can be adjusted with SP1116-018.   |      |                            |
| 011         | Ends Temp. 1: 226–   | *ENG | [–30 to 0 / 0 / 1°C/step]  |
|             | Specifies the temperature correction for the heating roller (ends) when the paper width is 226 mm or more.<br>The start time of this SP can be adjusted with SP1116-018.     |      |                            |
| 012         | Center Temp. 2: 226–   | *ENG | [–30 to 0 / 0 / 1°C/step]  |
|             | Specifies the temperature correction for the heating roller (center) when the paper width is 226 mm or more.<br>The start time of this SP can be adjusted with SP1116-019.   |      |                            |
| 013         | Ends Temp. 2: 226–   | *ENG | [–30 to 0 / 0 / 1°C/step]  |
|             | Specifies the temperature correction for the heating roller (ends) when the paper width is 226 mm or more.<br>The start time of this SP can be adjusted with SP1116-019.     |      |                            |
| 014         | Center Temp. 3: –226   | *ENG | [–30 to 0 / –5 / 1°C/step] |
|             | Specifies the temperature correction for the heating roller (center) when the paper width is less than 226 mm.<br>The start time of this SP can be adjusted with SP1116-020. |      |                            |
| 015         | Ends Temp. 3: –226   | *ENG | [–30 to 0 / –5 / 1°C/step] |
|             | Specifies the temperature correction for the heating roller (ends) when the paper width is less than 226 mm.<br>The start time of this SP can be adjusted with SP1116-020.   |      |                            |
| 016         | Center Temp. 4: –226   | *ENG | [–30 to 0 / –5 / 1°C/step] |

|     |  |      |                              |
|-----|--|------|------------------------------|
|     | Specifies the temperature correction for the heating roller (center) when the paper width is less than 226 mm.<br>The start time of this SP can be adjusted with SP1116-021.                                 |      |                              |
| 017 | Ends Temp. 4: -226   | *ENG | [-30 to 0 / -10 / 1°C/step]  |
|     | Specifies the temperature correction for the heating roller (ends) when the paper width is less than 226 mm.<br>The start time of this SP can be adjusted with SP1116-021.                                   |      |                              |
| 018 | Control Time 1: 226-   | *ENG | [0 to 250 / 0 / 1 sec/step]  |
|     | Specifies the start time of the temperature correction that is set with SP1116-010 and -011.<br>The temperature correction is added when the time specified with this SP has passed after feeding the paper. |      |                              |
| 019 | Control Time 2: 226-   | *ENG | [0 to 250 / 0 / 1 sec/step]  |
|     | Specifies the start time of the temperature correction that is set with SP1116-012 and -013.<br>The temperature correction is added when the time specified with this SP has passed after feeding the paper. |      |                              |
| 020 | Control Time 3: -226   | *ENG | [0 to 250 / 30 / 1 sec/step] |
|     | Specifies the start time of the temperature correction that is set with SP1116-014 and -015.<br>The temperature correction is added when the time specified with this SP has passed after feeding the paper. |      |                              |
| 021 | Control Time 4: -226   | *ENG | [0 to 250 / 60 / 1 sec/step] |
|     | Specifies the start time of the temperature correction that is set with SP1116-016 and -017.<br>The temperature correction is added when the time specified with this SP has passed after feeding the paper. |      |                              |
| 022 | Center Temp. 1 Duplex:<br>226-   | *ENG | [-30 to 0 / 0 / 1°C/step]    |

|     |   |      |                             |
|-----|---|------|-----------------------------|
|     | <p>Specifies the temperature correction for the heating roller (center) when the paper width is 226 mm or more in duplex mode.</p> <p>The start time of this SP can be adjusted with SP1116-026.</p>                    |      |                             |
| 023 | Ends Temp. 1 Duplex:<br>226–  | *ENG | [–30 to 0 / 0 / 1°C/step]   |
|     | <p>Specifies the temperature correction for the heating roller (ends) when the paper width is 226 mm or more in duplex mode.</p> <p>The start time of this SP can be adjusted with SP1116-026.</p>                      |      |                             |
| 024 | Center Temp. 2 Duplex:<br>226–  | *ENG | [–30 to 0 / 0 / 1°C/step]   |
|     | <p>Specifies the temperature correction for the heating roller (center) when the paper width is 226 mm or more in duplex mode.</p> <p>The start time of this SP can be adjusted with SP1116-027.</p>                    |      |                             |
| 025 | Ends Temp. 2 Duplex:<br>226–  | *ENG | [–30 to 0 / 0 / 1°C/step]   |
|     | <p>Specifies the temperature correction for the heating roller (ends) when the paper width is 226 mm or more in duplex mode.</p> <p>The start time of this SP can be adjusted with SP1116-027.</p>                      |      |                             |
| 026 | Control Time 1 Duplex:<br>226–  | *ENG | [0 to 250 / 0 / 1 sec/step] |
|     | <p>Specifies the start time of the temperature correction that is set with SP1116-022 and -023.</p> <p>The temperature correction is added when the time specified with this SP has passed after feeding the paper.</p> |      |                             |
| 027 | Control Time 2 Duplex:<br>226–  | *ENG | [0 to 250 / 0 / 1 sec/step] |
|     | <p>Specifies the start time of the temperature correction that is set with SP1116-024 and -025.</p> <p>The temperature correction is added when the time specified with this SP has passed after feeding the paper.</p> |      |                             |

|             |  |      |   |
|-------------|--|------|---|
| <b>1117</b> | <b>[Idling Time After Heater OFF]</b>  |      |   |
| 001         | After Ready  | *ENG | [0 to10 / <b>4</b> / 1 sec/step] <b>DFU</b> |
|             | Specifies the idling time without the lamp on after reaching the ready temperature.  |      |   |
| 002         | After Job End  | *ENG | [0 to10 / <b>4</b> / 1 sec/step]            |
|             | Specifies the idling time without the lamp on after job end.<br>This idling prevents the heating roller overheating after job end. |      |   |

|             |   |      |  |
|-------------|---|------|--|
| <b>1159</b> | <b>[Fusing Jam Detection]</b>   |      |  |
| 001         | SC Display  | *ENG | [0 or 1 / <b>0</b> / 1 /step]<br>0: Disable, 1: Enable |
|             | Enables or disables the fusing consecutive jam detection.<br>If this SP is set to "1" (default: 0), SC559 occurs when the machine detects the paper jam three times consecutively at the fusing unit. |      |  |

|             |                              |      |  |
|-------------|------------------------------|------|--|
| <b>1801</b> | <b>[Motor Speed Adj.] FA</b> |      |  |
| 001         | Registration: 77             | *ENG | [-4 to 4 / <b>0</b> / 0.05 %/step]                 |
| 002         | Registration: 138            | *ENG |  |
| 003         | Registration: 150            | *ENG |  |
| 004         | Bk PCU Drive: 154            | *ENG | [-4 to 4 / <b>0</b> / 0.01 %/step] <b>Not used</b> |
| 005         | Bk PCU Drive: 138            | *ENG | [-4 to 4 / <b>0.3</b> / 0.01 %/step]               |
| 006         | Bk PCU Drive: 77             | *ENG | [-4 to 4 / <b>0.28</b> / 0.01 %/step]              |
| 007         | MCY PCU Drive: 154           | *ENG | [-4 to 4 / <b>0</b> / 0.01 %/step] <b>Not used</b> |
| 008         | MCY PCU Drive: 138           | *ENG | [-4 to 4 / <b>0.3</b> / 0.01 %/step]               |
| 009         | MCY PCU Drive: 77            | *ENG | [-4 to 4 / <b>0.28</b> / 0.01 %/step]              |



|     |                                 |      |  |
|-----|---------------------------------|------|--|
| 010 | MCY Development: 154            | *ENG | [-4 to 4 / <b>0</b> / 0.01 %/step] <b>Not used</b> |
| 011 | MCY Development: 138            | *ENG | [-4 to 4 / <b>0</b> / 0.01 %/step]                 |
| 012 | MCY Development: 77             | *ENG | [-4 to 4 / <b>0</b> / 0.01 %/step]                 |
| 013 | Fusing: 154                     | *ENG | [-4 to 4 / <b>0</b> / 0.01 %/step] <b>Not used</b> |
| 014 | Fusing: 138                     | *ENG | [-4 to 4 / <b>0.4</b> / 0.01 %/step]               |
| 015 | Fusing: 77                      | *ENG |  |
| 016 | Image Transfer: 154             | *ENG | [-4 to 4 / <b>0</b> / 0.01 %/step] <b>Not used</b> |
| 017 | Image Transfer: 138             | *ENG | [-4 to 4 / <b>0.3</b> / 0.01 %/step]               |
| 018 | Image Transfer: 77              | *ENG | [-4 to 4 / <b>0.28</b> / 0.01 %/step]              |
| 043 | Registration: 77: Thin          | *ENG | [-4 to 4 / <b>0</b> / 0.05 %/step]                 |
| 044 | Registration: 77: Middle thick  | *ENG |  |
| 045 | Registration: 77: Thick 1       | *ENG | [-4 to 4 / <b>-0.4</b> / 0.05 %/step]              |
| 046 | Registration: 77: Thick 2       | *ENG |  |
| 047 | Registration: 77: Thick 3       | *ENG |  |
| 048 | Registration: 138: Thin         | *ENG | [-4 to 4 / <b>0</b> / 0.05 %/step]                 |
| 049 | Registration: 138: Middle Thick | *ENG |  |

|             |                                   |      |  |
|-------------|-----------------------------------|------|--|
| <b>1901</b> | <b>[Recovery Temp. Ope. Time]</b> |      |  |
| 004         | -                                 | *ENG | [0 to 60 / <b>10</b> / 1 sec/step] <b>Not used</b> |

|             |                                |      |                                    |
|-------------|--------------------------------|------|------------------------------------|
| <b>1903</b> | <b>[Drive Current Setting]</b> |      |                                    |
| 001         | Duplex Motor Clockwise         | *ENG | [0 or 1 / <b>0</b> / 1 /step]      |
| 002         | Duplex Motor                   | *ENG | 0: Large Current, 1: Small Current |

|  |                  |  |  |
|--|------------------|--|--|
|  | Counterclockwise |  |  |
|--|------------------|--|--|

|             |                                     |      |                                    |
|-------------|-------------------------------------|------|------------------------------------|
| <b>1907</b> | <b>[Paper Feed Timing Adj.] DFU</b> |      |                                    |
| 003         | Feed Clutch OFF: Plain              | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |
| 004         | Feed Clutch ON: Plain               | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |
| 005         | Inverter Stop Position              | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |
| 006         | Exit Stop Position: 3rd Sheet       | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |
| 011         | Entrance Stop Position              | *ENG | [-7 to 10 / <b>0</b> / 1 mm/step]  |
| 013         | Feed Clutch OFF: Thick              | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |
| 014         | Feed Clutch ON: Thick               | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |
| 015         | Exit Stop Position: 1st/2nd Sheet   | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |
| 016         | By-pass Solenoid ON: Plain          | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |
| 017         | By-pass Solenoid ON: Thick          | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step] |

|             |  |      |                                      |
|-------------|--|------|--------------------------------------|
| <b>1908</b> | <b>[Paper Bank Feed Timing Adj.] DFU</b> |      |                                      |
| 001         | Paper Pre-Feed                           | *ENG | [0 or 1 / <b>0</b> / 1 /step]        |
| 002         | Feed Solenoid ON: Plain                  | *ENG | [-10 to 40 / <b>0</b> / 2.5 mm/step] |
| 003         | Feed Solenoid ON: Thick                  | *ENG | [-10 to 40 / <b>0</b> / 2.5 mm/step] |
| 004         | Feed Clutch OFF: Plain                   | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step]   |
| 005         | Feed Clutch OFF: Thick                   | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step]   |
| 006         | Feed Clutch ON: Plain                    | *ENG | [-10 to 10 / <b>0</b> / 1 mm/step]   |

|     |                       |      |                             |
|-----|-----------------------|------|-----------------------------|
| 007 | Feed Clutch ON: Thick | *ENG | [-10 to 10 / 0 / 1 mm/step] |
|-----|-----------------------|------|-----------------------------|

### SP2-XXX (Drum)

|      |   |      |                                    |
|------|---|------|------------------------------------|
| 2005 | <b>[Charge DC Voltage]</b> Charge Roller DC Voltage Adjustment<br>(Paper Type, Process Speed, Color)<br>Paper Type → Plain, Thick 1, Thick 2  |      |                                    |
|      | Adjusts the DC component of the charge roller bias in the various print modes. Charge bias (DC component) is automatically adjusted during process control; therefore, adjusting these settings does not effect while process control mode (SP3-041-1 Default: ON) is activated. When deactivating process control mode with SP3-041-1, the values in these SP modes are used for printing. |      |                                    |
| 001  | Plain: Bk   | *ENG | [0 to 1000 / 690 / 10 –volts/step] |
| 002  | Plain: M  | *ENG |                                    |
| 003  | Plain: C  | *ENG |                                    |
| 004  | Plain: Y  | *ENG |                                    |
| 005  | Thick 1: Bk   | *ENG |                                    |
| 006  | Thick 1: M  | *ENG |                                    |
| 007  | Thick 1: C  | *ENG |                                    |
| 008  | Thick 1: Y  | *ENG |                                    |
| 009  | Thick 2&FINE: Bk  | *ENG |                                    |
| 010  | Thick 2&FINE: M   | *ENG |                                    |
| 011  | Thick 2&FINE: C   | *ENG |                                    |
| 012  | Thick 2&FINE: Y   | *ENG |                                    |

|      |  |  |  |
|------|--|--|--|
| 2006 | <b>[Charge AC Voltage]</b> Charge Roller AC Voltage Adjustment<br>(Paper Type, Process Speed, Color)<br>Paper Type → Plain, Thick 1, Thick 2 |  |  |
|      | Adjusts the AC component of the charge roller bias in the various print modes.   |  |  |

|     |   |      |                                       |
|-----|---|------|---------------------------------------|
|     | Charge bias (AC component) is adjusted by environment correction (SP2-007-xxx to SP2-011-xxx). These SPs are activated only when SP2-012-1 is set to "1: manual control". |      |                                       |
| 001 | Plain: Bk   | *ENG | [0 to 3000 / <b>2100</b> / 10 V/step] |
| 002 | Plain: M  | *ENG |                                       |
| 003 | Plain: C  | *ENG |                                       |
| 004 | Plain: Y  | *ENG |                                       |
| 005 | Thick 1: Bk   | *ENG |                                       |
| 006 | Thick 1: M  | *ENG |                                       |
| 007 | Thick 1: C  | *ENG |                                       |
| 008 | Thick 1: Y  | *ENG |                                       |
| 009 | Thick 2&FINE: Bk  | *ENG |                                       |
| 010 | Thick 2&FINE: M   | *ENG |                                       |
| 011 | Thick 2&FINE: C   | *ENG |                                       |
| 012 | Thick 2&FINE: Y   | *ENG |                                       |

|             |  |      |   |
|-------------|--|------|---|
| <b>2007</b> | <b>[Charge AC Current: LL]</b> Charge Roller AC Current Adjustment for LL (Color)  |      |   |
|             | Displays/sets the AC current target of the charge roller for LL environment (Low temperature and Low humidity). <b>DFU</b> |      |   |
| 001         | Environmental Target: Bk   | *ENG | [0 to 3000 / <b>1060</b> / 10 $\mu$ A/step] |
| 002         | Environmental Target: M  | *ENG |   |
| 003         | Environmental Target: C  | *ENG |   |
| 004         | Environmental Target: Y  | *ENG | [0 to 3000 / <b>1100</b> / 10 $\mu$ A/step] |

|             |   |      |   |
|-------------|---|------|---|
| <b>2008</b> | <b>[Charge AC Current: ML]</b> Charge Roller AC Current Adjustment for MM (Color)   |      |   |
|             | Displays/sets the AC current target of the charge roller for ML environment (Meddle temperature and Low humidity). <b>DFU</b> |      |   |
| 001         | Environmental Target: Bk  | *ENG | [0 to 3000 / <b>1040</b> / 10 $\mu$ A/step] |
| 002         | Environmental Target: M   | *ENG | [0 to 3000 / <b>1030</b> / 10 $\mu$ A/step] |
| 003         | Environmental Target: C   | *ENG |   |
| 004         | Environmental Target: Y   | *ENG | [0 to 3000 / <b>1070</b> / 10 $\mu$ A/step] |

|             |  |      |   |
|-------------|--|------|---|
| <b>2009</b> | <b>[Charge AC Current: MM]</b> Charge Roller AC Current Adjustment for MM (Color)  |      |   |
|             | Displays/sets the AC current target of the charge roller for MM environment (Middle temperature and Middle humidity). <b>DFU</b> |      |   |
| 001         | Environmental Target: Bk   | *ENG | [0 to 3000 / <b>980</b> / 10 $\mu$ A/step]  |
| 002         | Environmental Target: M  | *ENG | [0 to 3000 / <b>960</b> / 10 $\mu$ A/step]  |
| 003         | Environmental Target: C  | *ENG |   |
| 004         | Environmental Target: Y  | *ENG | [0 to 3000 / <b>1000</b> / 10 $\mu$ A/step] |

|             |  |      |  |
|-------------|--|------|--|
| <b>2010</b> | <b>[Charge AC Current: MH]</b> Charge Roller AC Current Adjustment for MH (Color)  |      |  |
|             | Displays/sets the AC current target of the charge roller for MH environment (Middle temperature and High humidity). <b>DFU</b> |      |  |
| 001         | Environmental Target: Bk   | *ENG | [0 to 3000 / <b>960</b> / 10 $\mu$ A/step] |
| 002         | Environmental Target: M  | *ENG | [0 to 3000 / <b>940</b> / 10 $\mu$ A/step] |
| 003         | Environmental Target: C  | *ENG |  |
| 004         | Environmental Target: Y  | *ENG | [0 to 3000 / <b>970</b> / 10 $\mu$ A/step] |

|      |  |      |  |
|------|--|------|--|
| 2011 | <b>[Charge AC Current: HH]</b> Charge Roller AC Current Adjustment for HH (Color)  |      |  |
|      | Displays/sets the AC current target of the charge roller for HH environment (High temperature and High humidity). <b>DFU</b> |      |  |
| 001  | Environmental Target: Bk   | *ENG | [0 to 3000 / <b>940</b> / 10 $\mu$ A/step] |
| 002  | Environmental Target: M  | *ENG | [0 to 3000 / <b>930</b> / 10 $\mu$ A/step] |
| 003  | Environmental Target: C  | *ENG |  |
| 004  | Environmental Target: Y  | *ENG | [0 to 3000 / <b>960</b> / 10 $\mu$ A/step] |

|      |                                |      |  |
|------|--------------------------------|------|--|
| 2012 | <b>[Charge Output Control]</b> |      |  |
| 001  | AC Voltage                     | *ENG | Selects the AC voltage control type.<br>[0 or 1 / <b>0</b> / 1/step]<br>0: Process control<br>1: Manual control (AC voltages are decided with SP2006.) |

|      |  |      |  |
|------|--|------|--|
| 2013 | <b>[Environmental Correction: PCU]</b> |      |  |
| 001  | Current Environmental: Display         | *ENG | Displays the environmental condition, which is measured in absolute humidity.<br>[1 to 5 / - / 1 /step]<br>1: LL (LL $\leq$ 4.3 g/m <sup>3</sup> )<br>2: ML (4.3 < ML $\leq$ 11.3 g/m <sup>3</sup> )<br>3: MM (11.3 < MM $\leq$ 18.0 g/m <sup>3</sup> )<br>4: MH (18.0 < MH $\leq$ 24.0 g/m <sup>3</sup> )<br>5: HH (24.0 g/m <sup>3</sup> < HH) |
| 002  | Forced Setting                         | *ENG | Selects the environmental condition manually.<br>[0 to 5 / <b>0</b> / 1 /step]<br>0: The environmental condition is determined automatically.  |

|     |                                     |      |   |
|-----|-------------------------------------|------|---|
|     |                                     |      | 1: LL, 2: ML, 3: MM, 4: MH, 5: HH   |
| 003 | Absolute Humidity:<br>Threshold 1   | *ENG | Changes the humidity threshold between LL and ML.<br>[0 to 100 / <b>4.3</b> / 0.01 g/m <sup>3</sup> /step]  |
| 004 | Absolute Humidity:<br>Threshold 2   | *ENG | Changes the humidity threshold between ML and MM.<br>[0 to 100 / <b>11.3</b> / 0.01 g/m <sup>3</sup> /step]   |
| 005 | Absolute Humidity:<br>Threshold 3   | *ENG | Changes the humidity threshold between MM and MH.<br>[0 to 100 / <b>18.0</b> / 0.01 g/m <sup>3</sup> /step]   |
| 006 | Absolute Humidity:<br>Threshold 4   | *ENG | Changes the humidity threshold between MH and HH.<br>[0 to 100 / <b>24.0</b> / 0.01 g/m <sup>3</sup> /step]   |
| 007 | Current Temp.: Display              | *ENG | Displays the current temperature.<br>[0 to 100 / – / 1°C/step]  |
| 008 | Current Relative Humidity: Display  | *ENG | Displays the current relative humidity.<br>[0 to 100 / – / 1%/step]   |
| 009 | Current Absolute Humidity: Display  | *ENG | Displays the absolute humidity.<br>[0 to 100 / – / 0.01 g/m <sup>3</sup> /step]   |
| 010 | Previous Environmental: Display     | *ENG | Displays the previous environmental condition, which is measured in absolute humidity.<br>[1 to 5 / – / 1 /step]<br>1: LL, 2: ML, 3: MM, 4: MH, 5: HH |
| 011 | Previous Temp.: Display             | *ENG | Displays the previous temperature.<br>[0 to 100 / – / 1°C/step]   |
| 012 | Previous Relative Humidity: Display | *ENG | Displays the previous relative humidity.<br>[0 to 100 / – / 1%/step]  |
| 013 | Previous Absolute Humidity: Display | *ENG | Displays the previous absolute humidity.<br>[0 to 100 / – / 0.01 g/m <sup>3</sup> /step]  |

|             |  |              |  |
|-------------|--|--------------|--|
| <b>2101</b> | <b>[Color Registration Correction] FA</b>  |              |  |
|             | These values are the parameters for the automatic line position adjustment and are adjusted at the factory. However, you must input a value for SP2101-001 after replacing the laser optics housing unit. For details, see "Laser Optics Housing Unit" in the "Replacement and Adjustment" section. The value should be provided with the new laser optics housing unit. |              |  |
|             | 001  | Main Dot: Bk | *ENG                                       |
|             | 002  | Main Dot: M  | *ENG                                       |
|             | 003  | Main Dot: C  | *ENG                                       |
| 004         | Main Dot: Y  | *ENG         | [-512 to 511 / <b>0</b> / 1 dot/step]      |
| 005         | Subdot: Bk   | *ENG         |  |
| 006         | Subdot: M  | *ENG         |  |
| 007         | Subdot: C  | *ENG         |  |
| 008         | Subdot: Y  | *ENG         | [-16384 to 16383 / <b>0</b> / 1 line/step] |

|             |                                       |      |  |
|-------------|---------------------------------------|------|--|
| <b>2102</b> | <b>[Magnification Adjustment] DFU</b> |      |  |
| 001         | Main Mag.: High Speed:<br>Bk          | *ENG | These are results of the main scan length adjustment.<br>[0 to 560 / <b>280</b> / 1 /step] |
| 002         | Main Mag.: Medium<br>Speed: Bk        | *ENG |  |
| 003         | Main Mag.: Low Speed:<br>Bk           | *ENG |  |
| 004         | Main Mag.: High Speed:<br>M           | *ENG |  |
| 005         | Main Mag.: Medium<br>Speed: M         | *ENG |  |



|     |                               |      |  |
|-----|-------------------------------|------|--|
| 006 | Main Mag.: Low Speed:<br>M    | *ENG |  |
| 007 | Main Mag.: High Speed:<br>C   | *ENG |  |
| 008 | Main Mag.: Medium<br>Speed: C | *ENG |  |
| 009 | Main Mag.: Low Speed: C       | *ENG |  |
| 010 | Main Mag.: High Speed:<br>Y   | *ENG |  |
| 011 | Main Mag.: Medium<br>Speed: Y | *ENG |  |
| 012 | Main Mag.: Low Speed: Y       | *ENG |  |



|             |   |      |                                       |
|-------------|---|------|---------------------------------------|
| <b>2103</b> | <b>[Erase Margin Adjustment]</b> (Area, Paper Size)             |      |                                       |
|             | Adjusts the erase margin by deleting image data at the margins. |      |                                       |
| 001         | Lead Edge Width   | *ENG | [0 to 9.9 / <b>4.2</b> / 0.1 mm/step] |
| 002         | Trail. Edge Width   | *ENG |                                       |
| 003         | Left  | *ENG | [0 to 9.9 / <b>2</b> / 0.1 mm/step]   |
| 004         | Right   | *ENG |                                       |
| 005         | Lead Edge Width: Thin   | *ENG | [0 to 9.9 / <b>5</b> / 0.1 mm/step]   |
| 006         | Duplex Trail. L Size  | *ENG | [0 to 4 / <b>0</b> / 0.1 mm/step]     |
| 007         | Duplex Trail. M Size  | *ENG |                                       |
| 008         | Duplex Trail. S Size  | *ENG |                                       |
| 009         | Duplex Left Edge  | *ENG | [0 to 1.5 / <b>0.3</b> / 0.1 mm/step] |
| 010         | Duplex Right Edge   | *ENG |                                       |

|             |   |      |  |
|-------------|---|------|--|
| <b>2105</b> | <b>[LD Power Adj.] (Process Speed, Color)</b>   |      |  |
|             | Displays the LD power of each color for each process speed.<br>Each LD power setting is decided by process control. |      |  |
| 001         | High Speed: Bk  | *ENG | [50 to 120 / <b>100</b> / 1%/step]<br>Decreasing a value makes lines thinner on the output.<br>Increasing a value makes lines thicker on the output. |
| 002         | High Speed: M   | *ENG |  |
| 003         | High Speed: C   | *ENG |  |
| 004         | High Speed: Y   | *ENG |  |
| 005         | Middle Speed: Bk  | *ENG |  |
| 006         | Middle Speed: M   | *ENG |  |
| 007         | Middle Speed: C   | *ENG |  |
| 008         | Middle Speed: Y   | *ENG |  |
| 009         | Low Speed: Bk   | *ENG |  |
| 010         | Low Speed: M  | *ENG |  |
| 011         | Low Speed: C  | *ENG |  |
| 012         | Low Speed: Y  | *ENG |  |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2106</b> | <b>[Polygon Rotation Time]</b>                             |      |                                    |
|             | Adjusts the time of the polygon motor rotation. <b>DFU</b> |      |                                    |
| 001         | Warming-Up   | *ENG | [0 to 60 / <b>10</b> / 1 sec/step] |
| 002         | Job End  | *ENG |                                    |

|             |                          |      |                               |
|-------------|--------------------------|------|-------------------------------|
| <b>2107</b> | <b>[Image Parameter]</b> |      |                               |
|             | <b>DFU</b>               |      |                               |
| 001         | Image Gamma Flag         | *ENG | [0 or 1 / <b>1</b> / 1 /step] |

|     |                         |      |                        |
|-----|-------------------------|------|------------------------|
| 002 | Shading Correction Flag | *ENG | [0 or 1 / 1 / 1 /step] |
|-----|-------------------------|------|------------------------|

|      |  |   |   |
|------|--|---|---|
| 2109 | <b>[Test Pattern]</b>  |   |   |
|      | Generates the test pattern using "COPY Window" tab in the LCD. |   |   |
| 003  | Pattern Selection  | - | <p>[0 to 23 / 0 / 1/step]</p> <p>0 None</p> <p>1: 1-dot line pattern (Vertical)</p> <p>2: 2-dot line pattern (Vertical)</p> <p>3: 1-dot line pattern (Horizontal)</p> <p>4: 2-dot line pattern (Horizontal)</p> <p>5: 1-dot grid pattern (Vertical)</p> <p>6: 1-dot grid pattern (Horizontal)</p> <p>7: 1-dot grid pattern (Fine)</p> <p>8: 1-dot grid pattern (Rough)</p> <p>9: 1-dot slant pattern (Fine)</p> <p>10: 1-dot slant pattern (Rough)</p> <p>11. 1-dot pattern</p> <p>12. 2-dot pattern</p> <p>13. 4-dot pattern</p> <p>14. 1-dot trimming pattern</p> <p>15: None</p> <p>16: Cross stitch: main-scan</p> <p>17: Belt pattern (Horizontal)</p> <p>18: Belt pattern (Vertical)</p> <p>19: Checkered flag</p> <p>20: Gray scale (Vertical)</p> <p>21: Gray scale (Horizontal)</p> <p>22: None</p> <p>23: Solid</p> |
| 005  | Color Selection  | - | <p>Specifies the color for the test pattern.</p> <p>[1 to 4 / 1 / 1/step]</p> <p>1: All colors, 2: Magenta, 3: Yellow, 4: Cyan</p>  |
| 006  | Density: Bk  | - | Specifies the color density for the test  |

|     |            |   |  |
|-----|------------|---|--|
| 007 | Density: M | - | pattern.                                   |
| 008 | Density: C | - | [0 to 15 / <b>15</b> / 1 /step]            |
| 009 | Density: Y | - | 0: Lightest density<br>15: Darkest density |

|             |                                    |   |   |
|-------------|------------------------------------|---|---|
| <b>2111</b> | <b>[Forced Line Position Adj.]</b> |   |   |
| 001         | Mode a                             | - | Executes the fine line position adjustment twice.<br>If this SP is not completed (NG is displayed), do SP2111-003 first and then try this SP again.                               |
| 002         | Mode b                             | - | Executes the fine line position adjustment once.<br>If this SP is not completed, do SP2111-003 first and then try this SP again.  |
| 003         | Mode c                             | - | Executes the rough line position adjustment once.<br>After doing this SP, make sure to execute SP2111-001 or -002. Otherwise, the line position adjustment is not perfectly done. |

|             |  |  |   |
|-------------|--|--|---|
| <b>2112</b> | <b>[TM/ID Sensor Check] ID Sensor Check FA</b> |  |   |
| 001         | Execute  |  | This SP is used to check the ID sensors at the factory. The results of this SP are displayed in SP2140 to SP2145. |

|             |   |  |  |
|-------------|---|--|--|
| <b>2117</b> | <b>[Skew Adjustment]</b>  |  |  |
|             | Specifies a skew adjustment value for the skew motor M, C or Y.<br>These SPs must be used when a new laser optics housing unit is installed or when SC285 occurs. For details, see "Laser Optics Housing Unit" in the "Replacement and Adjustment" section. |  |  |

|     |          |      |   |
|-----|----------|------|---|
| 001 | Pulse: M | *ENG | [-100 to 100 / <b>0</b> / 1 pulse/step] |
| 002 | Pulse: C | *ENG |   |
| 003 | Pulse: Y | *ENG |   |

|             |                          |      |  |
|-------------|--------------------------|------|--|
| <b>2118</b> | <b>[Skew Adjustment]</b> |      |  |
| 001         | Pulse: M                 | *ENG | Changes the current skew adjustment values to the values specified with SP2117. These SPs must be used when a new laser optics housing unit is installed or when SC285 occurs. For details, see "Laser Optics Housing Unit" in the "Replacement and Adjustment" section. |
| 002         | Pulse: C                 | *ENG |  |
| 003         | Pulse: Y                 | *ENG |  |

|             |   |      |                                       |
|-------------|---|------|---------------------------------------|
| <b>2119</b> | <b>[Skew Adjustment Display]</b>                                |      |                                       |
|             | Displays the current skew adjustment value for each skew motor. |      |                                       |
| 001         | M   | *ENG | [-50 to 50 / <b>0</b> / 1 pulse/step] |
| 002         | C   | *ENG |                                       |
| 003         | Y   | *ENG |                                       |

|             |   |      |                          |
|-------------|---|------|--------------------------|
| <b>2140</b> | <b>[ID Sensor Check Result] DFU</b>   |      |                          |
|             | Displays the results of the ID sensor check.<br>Bk, M, C, Y: ID sensors for the process control<br>Front, Center, Rear: ID sensors for the automatic line position adjustment |      |                          |
| 001         | Bk  | *ENG | [0 to 1024 / - / 1/step] |
| 002         | M   | *ENG |                          |
| 003         | C   | *ENG |                          |
| 004         | Y   | *ENG |                          |

|     |        |      |  |
|-----|--------|------|--|
| 005 | Front  | *ENG |  |
| 006 | Center | *ENG |  |
| 007 | Rear   | *ENG |  |

|             |   |      |                           |
|-------------|---|------|---------------------------|
| <b>2141</b> | <b>[ID Sensor Check Result: Ave.] DFU</b>   |      |                           |
|             | Displays the average result values of the ID sensor check.<br>Bk, M, C, Y: ID sensors for the process control<br>Front, Center, Rear: ID sensors for the automatic line position adjustment |      |                           |
| 001         | Bk  | *ENG | [0 to 5 / 0 / 0.01V/step] |
| 002         | M   | *ENG |                           |
| 003         | C   | *ENG |                           |
| 004         | Y   | *ENG |                           |
| 005         | Front   | *ENG |                           |
| 006         | Center  | *ENG |                           |
| 007         | Rear  | *ENG |                           |

|             |   |      |                           |
|-------------|---|------|---------------------------|
| <b>2142</b> | <b>[ID Sensor Check Result] DFU</b>   |      |                           |
|             | Displays the maximum result values of the ID sensor check.<br>Bk, M, C, Y: ID sensors for the process control<br>Front, Center, Rear: ID sensors for the automatic line position adjustment |      |                           |
| 001         | Maximum: Bk   | *ENG | [0 to 5 / 0 / 0.01V/step] |
| 002         | Maximum: M  | *ENG |                           |
| 003         | Maximum: C  | *ENG |                           |
| 004         | Maximum: Y  | *ENG |                           |
| 005         | Maximum: Front  | *ENG |                           |

|     |                 |      |  |
|-----|-----------------|------|--|
| 006 | Maximum: Center | *ENG |  |
| 007 | Maximum: Rear   | *ENG |  |

|             |   |      |                           |
|-------------|---|------|---------------------------|
| <b>2143</b> | <b>[ID Sensor Check Result] DFU</b>   |      |                           |
|             | Displays the minimum result values of the ID sensor check.<br>Bk, M, C, Y: ID sensors for the process control<br>Front, Center, Rear: ID sensors for the automatic line position adjustment |      |                           |
| 001         | Minimum: Bk   | *ENG | [0 to 5 / 0 / 0.01V/step] |
| 002         | Minimum: M  | *ENG |                           |
| 003         | Minimum: C  | *ENG |                           |
| 004         | Minimum: Y  | *ENG |                           |
| 005         | Minimum: Front  | *ENG |                           |
| 006         | Minimum: Center   | *ENG |                           |
| 007         | Minimum: Rear   | *ENG |                           |

|             |   |      |                           |
|-------------|---|------|---------------------------|
| <b>2144</b> | <b>[ID Sensor Check Result] DFU</b>   |      |                           |
|             | Displays the maximum result 2 values of the ID sensor check.<br>Bk, M, C, Y: ID sensors for the process control<br>Front, Center, Rear: ID sensors for the automatic line position adjustment |      |                           |
| 001         | Maximum 2: Bk   | *ENG | [0 to 5 / 0 / 0.01V/step] |
| 002         | Maximum 2: M  | *ENG |                           |
| 003         | Maximum 2: C  | *ENG |                           |
| 004         | Maximum 2: Y  | *ENG |                           |
| 005         | Maximum 2: Front  | *ENG |                           |
| 006         | Maximum 2: Center   | *ENG |                           |
|             |   |      |                           |

|     |                 |      |  |
|-----|-----------------|------|--|
| 007 | Maximum 2: Rear | *ENG |  |
|-----|-----------------|------|--|

|      |   |      |                           |
|------|---|------|---------------------------|
| 2145 | <b>[ID Sensor Check Result] DFU</b>   |      |                           |
|      | Displays the minimum result 2 values of the ID sensor check.<br>Bk, M, C, Y: ID sensors for the process control<br>Front, Center, Rear: ID sensors for the automatic line position adjustment |      |                           |
| 001  | Minimum 2: Bk   | *ENG | [0 to 5 / 0 / 0.01V/step] |
| 002  | Minimum 2: M  | *ENG |                           |
| 003  | Minimum 2: C  | *ENG |                           |
| 004  | Minimum 2: Y  | *ENG |                           |
| 005  | Minimum 2: Front  | *ENG |                           |
| 006  | Minimum 2: Center   | *ENG |                           |
| 007  | Minimum 2: Rear   | *ENG |                           |

|      |  |      |                                     |
|------|--|------|-------------------------------------|
| 2150 | <b>[Area Mag. Correction] LD Pulse Area Correction (Color, Area) FA</b>  |      |                                     |
|      | Adjusts the magnification for each area. The main scan (297 mm) is divided into 8 areas. Area 1 is at the front side of the machine (left side of the image) and area 8 is at the rear side of the machine (right side of the image).<br>Decreasing a value makes the image shift to the left side on the print.<br>Increasing a value makes the image shift to the right side on the print.<br>1 pulse = 1/16 dot |      |                                     |
| 027  | Area0: Bk  | *ENG | <b>DFU</b>                          |
| 028  | Area1: Bk  | *ENG | [-256 to 255 / 0 / 1 sub-dot/step ] |
| 029  | Area2: Bk  | *ENG |                                     |
| 030  | Area3: Bk  | *ENG |                                     |
| 031  | Area4: Bk  | *ENG |                                     |



|     |            |      |                                    |
|-----|------------|------|------------------------------------|
| 032 | Area5: Bk  | *ENG |                                    |
| 033 | Area6: Bk  | *ENG |                                    |
| 034 | Area7: Bk  | *ENG |                                    |
| 035 | Area8: Bk  | *ENG |                                    |
| 036 | Area9: Bk  | *ENG | Not used                           |
| 037 | Area10: Bk | *ENG |                                    |
| 038 | Area11: Bk | *ENG |                                    |
| 039 | Area12: Bk | *ENG |                                    |
| 079 | Area0: M   | *ENG | Not used                           |
| 080 | Area1: M   | *ENG | [-256 to 255 / 0 / 1 sub-dot/step] |
| 081 | Area2: M   | *ENG |                                    |
| 082 | Area3: M   | *ENG |                                    |
| 083 | Area4: M   | *ENG |                                    |
| 084 | Area5: M   | *ENG |                                    |
| 085 | Area6: M   | *ENG |                                    |
| 086 | Area7: M   | *ENG |                                    |
| 087 | Area8: M   | *ENG |                                    |
| 088 | Area9: M   | *ENG | Not used                           |
| 089 | Area10: M  | *ENG |                                    |
| 090 | Area11: M  | *ENG |                                    |
| 091 | Area12: M  | *ENG |                                    |
| 131 | Area0: C   | *ENG | Not used                           |
| 132 | Area1: C   | *ENG | [-256 to 255 / 0 / 1 sub-dot/step] |

|     |           |      |                                    |
|-----|-----------|------|------------------------------------|
| 133 | Area2: C  | *ENG |                                    |
| 134 | Area3: C  | *ENG |                                    |
| 135 | Area4: C  | *ENG |                                    |
| 136 | Area5: C  | *ENG |                                    |
| 137 | Area6: C  | *ENG |                                    |
| 138 | Area7: C  | *ENG |                                    |
| 139 | Area8: C  | *ENG |                                    |
| 140 | Area9: C  | *ENG |                                    |
| 141 | Area10: C | *ENG |                                    |
| 142 | Area11: C | *ENG |                                    |
| 143 | Area12: C | *ENG |                                    |
| 183 | Area0: Y  | *ENG | Not used                           |
| 184 | Area1: Y  | *ENG | [-256 to 255 / 0 / 1 sub-dot/step] |
| 185 | Area2: Y  | *ENG |                                    |
| 186 | Area3: Y  | *ENG |                                    |
| 187 | Area4: Y  | *ENG |                                    |
| 188 | Area5: Y  | *ENG |                                    |
| 189 | Area6: Y  | *ENG |                                    |
| 190 | Area7: Y  | *ENG |                                    |
| 191 | Area8: Y  | *ENG |                                    |
| 192 | Area9: Y  | *ENG | Not used                           |
| 193 | Area10: Y | *ENG |                                    |
| 194 | Area11: Y | *ENG |                                    |

|     |           |      |  |
|-----|-----------|------|--|
| 195 | Area12: Y | *ENG |  |
|-----|-----------|------|--|

|      |  |      |  |
|------|--|------|--|
| 2152 | <b>[Area Shad. Correct. Setting] FA</b>  |      |  |
|      | <p>Adjusts the area correction value for each LD power.</p> <p>The main scan is divided into 16 areas. However, the image areas are limited from area 1 to area 14.</p> <p>For BK and Magenta, area 1 is at the rear side of the machine (left side of the image) and area 14 is at the front side of the machine (right side of the image).</p> <p>For Cyan and Yellow, area 1 is at the front side of the machine (right side of the image) and area 14 is at the rear side of the machine (left side of the image).</p> |      |  |
| 001  | Area 0: Bk   | *ENG | This is for the synchronizing detection board. |
| 002  | Area 1: Bk   | *ENG | [50 to 150 / <b>100</b> / 1 %/step]            |
| 003  | Area 2: Bk   | *ENG |  |
| 004  | Area 3: Bk   | *ENG |  |
| 005  | Area 4: Bk   | *ENG |  |
| 006  | Area 5: Bk   | *ENG |  |
| 007  | Area 6: Bk   | *ENG |  |
| 008  | Area 7: Bk   | *ENG |  |
| 009  | Area 8: Bk   | *ENG |  |
| 010  | Area 9: Bk   | *ENG |  |
| 011  | Area 10: Bk  | *ENG |  |
| 012  | Area 11: Bk  | *ENG |  |
| 013  | Area 12: Bk  | *ENG |  |
| 014  | Area 13: Bk  | *ENG |  |
| 015  | Area 14: Bk  | *ENG |  |

|     |             |      |  |
|-----|-------------|------|--|
| 016 | Area 15: Bk | *ENG | This is out of the image area.                 |
| 033 | Area 0: M   | *ENG | This is for the synchronizing detection board. |
| 034 | Area 1: M   | *ENG | [50 to 150 / <b>100</b> / 1 %/step]            |
| 035 | Area 2: M   | *ENG |  |
| 036 | Area 3: M   | *ENG |  |
| 037 | Area 4: M   | *ENG |  |
| 038 | Area 5: M   | *ENG |  |
| 039 | Area 6: M   | *ENG |  |
| 040 | Area 7: M   | *ENG |  |
| 041 | Area 8: M   | *ENG |  |
| 042 | Area 9: M   | *ENG |  |
| 043 | Area 10: M  | *ENG |  |
| 044 | Area 11: M  | *ENG |  |
| 045 | Area 12: M  | *ENG |  |
| 046 | Area 13: M  | *ENG |  |
| 047 | Area 14: M  | *ENG |  |
| 048 | Area 15: M  | *ENG | This is out of the image area.                 |
| 065 | Area 0: C   | *ENG | This is for the synchronizing detection board. |
| 066 | Area 1: C   | *ENG | [50 to 150 / <b>100</b> / 1 %/step]            |
| 067 | Area 2: C   | *ENG |  |
| 068 | Area 3: C   | *ENG |  |
| 069 | Area 4: C   | *ENG |  |

|     |            |      |  |
|-----|------------|------|--|
| 070 | Area 5: C  | *ENG |  |
| 071 | Area 6: C  | *ENG |  |
| 072 | Area 7: C  | *ENG |  |
| 073 | Area 8: C  | *ENG |  |
| 074 | Area 9: C  | *ENG |  |
| 075 | Area 10: C | *ENG |  |
| 076 | Area 11: C | *ENG |  |
| 077 | Area 12: C | *ENG |  |
| 078 | Area 13: C | *ENG |  |
| 079 | Area 14: C | *ENG |  |
| 080 | Area 15: C | *ENG | This is out of the image area.                 |
| 097 | Area 0: Y  | *ENG | This is for the synchronizing detection board. |
| 098 | Area 1: Y  | *ENG | [50 to 150 / <b>100</b> / 1 %/step]            |
| 099 | Area 2: Y  | *ENG |  |
| 100 | Area 3: Y  | *ENG |  |
| 101 | Area 4: Y  | *ENG |  |
| 102 | Area 5: Y  | *ENG |  |
| 103 | Area 6: Y  | *ENG |  |
| 104 | Area 7: Y  | *ENG |  |
| 105 | Area 8: Y  | *ENG |  |
| 106 | Area 9: Y  | *ENG |  |
| 107 | Area 10: Y | *ENG |  |
| 108 | Area 11: Y | *ENG |  |

|     |            |      |                                |
|-----|------------|------|--------------------------------|
| 109 | Area 12: Y | *ENG |                                |
| 110 | Area 13: Y | *ENG |                                |
| 111 | Area 14: Y | *ENG |                                |
| 112 | Area 15: Y | *ENG | This is out of the image area. |

|             |   |   |            |
|-------------|---|---|------------|
| <b>2180</b> | <b>[Line Position Adj. Setting Clear]</b> |   |            |
| 001         | Color Regist                              | - | <b>DFU</b> |
| 002         | Main Scan Length Detection                | - | <b>DFU</b> |
| 003         | MUSIC Result                              | - | <b>DFU</b> |
| 004         | Area Magnification Correction             | - | <b>DFU</b> |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>2181</b> | <b>[Line Position Adj. Result]</b>  |      |                                      |
|             | <p>Displays the values for each correction.</p> <ul style="list-style-type: none"> <li>▪ "Paper Int. Mag: Subdot" indicates the magnification correction value between two sheets of paper.</li> <li>▪ "Mag.Cor. Subdot" indicates the magnification correction value.</li> <li>▪ "M. Scan Erro." indicates the shift correction value in the main scan direction.</li> <li>▪ "S. Scan Erro." Indicates the shift correction value in the sub scan direction.</li> <li>▪ "M. Cor.: Dot" indicates the dot correction value in the main scan direction.</li> <li>▪ "M. Cor.: Subdot" indicates the sub dot correction value in the main scan direction.</li> </ul> |      |                                      |
| 001         | Paper Int. Mag: Subdot: Bk  | *ENG | [-32768 to 32767 / 0 / 1 pulse/step] |
| 002         | Mag.Cor. Subdot: Bk   | *ENG | [-32768 to 32767 / 0 / 1 pulse/step] |

|     |                              |      |                                      |
|-----|------------------------------|------|--------------------------------------|
| 003 | Skew: M                      | *ENG | [-5000 to 5000 / 0 / 0.001 um/step]  |
| 004 | Bent: M                      | *ENG |                                      |
| 005 | M. Scan Erro.: Left: M       | *ENG | [-5000 to 5000 / 0 / 0.001 um/step]  |
| 006 | M. Scan Erro.: Center: M     | *ENG |                                      |
| 007 | M. Scan Erro.: Right: M      | *ENG |                                      |
| 008 | S. Scan Erro.: Left: M       | *ENG |                                      |
| 009 | S. Scan Erro.: Center: M     | *ENG |                                      |
| 010 | S. Scan Erro.: Right: M      | *ENG |                                      |
| 011 | M. Cor.: Dot: M              | *ENG | [-512 to 511 / 0 / 1 dot/step]       |
| 012 | M. Cor.: Subdot: M           | *ENG |                                      |
| 013 | Paper Int. Mag: Subdot:<br>M | *ENG | [-32768 to 32767 / 0 / 1 pulse/step] |
| 014 | Mag.Cor. Subdot: M           | *ENG |                                      |
| 015 | M. Left Mag.: Subdot: M      | *ENG |                                      |
| 016 | M. Right Mag.: Subdot: M     | *ENG |                                      |
| 017 | S. Cor.: 600 Line: M         | *ENG | [-16384 to 16383 / 0 / 1 line/step]  |
| 018 | S. Cor.: 600 Sub: M          | *ENG | [-1 to 1 / 0 / 0.001 line/step]      |
| 019 | S. Cor.: 1200 Line: M        | *ENG | [-16384 to 16383 / 0 / 1 line/step]  |
| 020 | S. Cor.: 1200 Sub: M         | *ENG | [-1 to 1 / 0 / 0.001 line/step]      |
| 021 | Skew: C                      | *ENG | [-5000 to 5000 / 0 / 0.001 um/step]  |
| 022 | Bent: C                      | *ENG |                                      |
| 023 | M. Scan Erro.: Left: C       | *ENG | [-5000 to 5000 / 0 / 0.001 um/step]  |
| 024 | M. Scan Erro.: Center: C     | *ENG |                                      |
| 025 | M. Scan Erro.: Right: C      | *ENG |                                      |

|     |                              |      |   |
|-----|------------------------------|------|---|
| 026 | S. Scan Erro.: Left: C       | *ENG |   |
| 027 | S. Scan Erro.: Center: C     | *ENG | [-5000 to 5000 / <b>0</b> / 0.001 um/step]  |
| 028 | S. Scan Erro.: Right: C      | *ENG |   |
| 029 | M. Cor.: Dot: C              | *ENG |   |
| 030 | M. Cor.: Subdot: C           | *ENG | [-15 to 15 / <b>0</b> / 1 pulse/step]       |
| 031 | Paper Int. Mag: Subdot:<br>C | *ENG |   |
| 032 | Mag.Cor. Subdot: C           | *ENG | [-32768 to 32767 / <b>0</b> / 1 pulse/step] |
| 033 | M. Left Mag.: Subdot: C      | *ENG |   |
| 034 | M. Right Mag.: Subdot: C     | *ENG |   |
| 035 | S. Cor.: 600 Line: C         | *ENG |   |
| 036 | S. Cor.: 600 Sub: C          | *ENG | [-1 to 1 / <b>0</b> / 0.001 line/step]      |
| 037 | S. Cor.: 1200 Line: C        | *ENG | [-16384 to 16383 / <b>0</b> / 1 line/step]  |
| 038 | S. Cor.: 1200 Sub: C         | *ENG | [-1 to 1 / <b>0</b> / 0.001 line/step]      |
| 039 | Skew: Y                      | *ENG | [-5000 to 5000 / <b>0</b> / 0.001 um/step]  |
| 040 | Bent: Y                      | *ENG |   |
| 041 | M. Scan Erro.: Left: Y       | *ENG |   |
| 042 | M. Scan Erro.: Center: Y     | *ENG | [-5000 to 5000 / <b>0</b> / 0.001 um/step]  |
| 043 | M. Scan Erro.: Right: Y      | *ENG |   |
| 044 | S. Scan Erro.: Left: Y       | *ENG |   |
| 045 | S. Scan Erro.: Center: Y     | *ENG | [-5000 to 5000 / <b>0</b> / 0.001 um/step]  |
| 046 | S. Scan Erro.: Right: Y      | *ENG |   |
| 047 | M. Cor.: Dot: Y              | *ENG |   |
| 048 | M. Cor.: Subdot: Y           | *ENG | [-15 to 15 / <b>0</b> / 1 pulse/step]       |



|     |                           |      |                                     |
|-----|---------------------------|------|-------------------------------------|
| 049 | Paper Int. Mag: Subdot: Y | *ENG | [-32768 to 32767 / 0 / 1 dot/step]  |
| 050 | Mag.Cor. Subdot: Y        | *ENG |                                     |
| 051 | M. Left Mag.: Subdot: Y   | *ENG |                                     |
| 052 | M. Right Mag.: Subdot: Y  | *ENG |                                     |
| 053 | S. Cor.: 600 Line: Y      | *ENG | [-16384 to 16383 / 0 / 1 line/step] |
| 054 | S. Cor.: 600 Sub: Y       | *ENG | [-1 to 1 / 0 / 0.001 line/step]     |
| 055 | S. Cor.: 1200 Line: Y     | *ENG | [-16384 to 16383 / 0 / 1 line/step] |
| 056 | S. Cor.: 1200 Sub: Y      | *ENG | [-1 to 1 / 0 / 0.001 line/step]     |

|             |   |      |  |
|-------------|---|------|--|
| <b>2182</b> | <b>[Line Position Adj. Offset]</b><br>(Color) M. Scan: Main scan, S. Scan: Sub-scan<br>High: 138 mm/sec, Medium: Not used, Low: 77 mm/sec   |      |  |
| 001         | M Magnification   | *ENG | Adjusts the line position manually.<br>[-1 to 1 / 0 / 0.001%/step]<br>When line shifts are not corrected by the automatic line position adjustment, do this SP.<br>Increasing a value reduces the image in the main scan direction.<br>Decreasing a value enlarges the image in the main scan direction. |
| 002         | CMagnification  | *ENG |  |
| 003         | Y Magnification   | *ENG |  |
| 004-021     | Adjusts the main scan registration for each color and speed.<br>Decreasing a value makes the image shift to the left side on the print.<br>Increasing a value makes the image shift to the right side on the print.<br>1 dot = 21µm, 1 pulse = 1.3µm<br>Dot: Rough adjustment, Subdot: Fine adjustment. Adjust 'dot' first, then adjust 'subdot'. |      |  |
| 004         | M. Scan: High: Dot: M   | *ENG | [-512 to 512 / 0 / 1 dot/step]   |
| 005         | M. Scan: High: Subdot: M  | *ENG | [-15 to 15 / 0 / 1 pulse/step]   |

|         |  |      |  |
|---------|--|------|--|
| 006     | M. Scan: Medium: Dot: M  | *ENG | Not used                                   |
| 007     | M. Scan: Medium:<br>Subdot: M  | *ENG |  |
| 008     | M. Scan: Low: Dot: M   | *ENG | [-512 to 512 / <b>0</b> / 1 dot/step]      |
| 009     | M. Scan: Low: Subdot: M  | *ENG | [-15 to 15 / <b>0</b> / 1 pulse/step]      |
| 010     | M. Scan: High: Dot: C  | *ENG | [-512 to 512 / <b>0</b> / 1 dot/step]      |
| 011     | M. Scan: High: Subdot: C   | *ENG | [-15 to 15 / <b>0</b> / 1 pulse/step]      |
| 012     | M. Scan: Medium: Dot: C  | *ENG | Not used                                   |
| 013     | M. Scan: Medium:<br>Subdot: C  | *ENG |  |
| 014     | M. Scan: Low: Dot: C   | *ENG | [-512 to 512 / <b>0</b> / 1 dot/step]      |
| 015     | M. Scan: Low: Subdot: C  | *ENG | [-15 to 15 / <b>0</b> / 1 pulse/step]      |
| 016     | M. Scan: High: Dot: Y  | *ENG | [-512 to 512 / <b>0</b> / 1 dot/step]      |
| 017     | M. Scan: High: Subdot: Y   | *ENG | [-15 to 15 / <b>0</b> / 1 pulse/step]      |
| 018     | M. Scan: Medium: Dot: Y  | *ENG | Not used                                   |
| 019     | M. Scan: Medium:<br>Subdot: Y  | *ENG |  |
| 020     | M. Scan: Low: Dot: Y   | *ENG | [-512 to 512 / <b>0</b> / 1 dot/step]      |
| 021     | M. Scan: Low: Subdot: Y  | *ENG | [-15 to 15 / <b>0</b> / 1 pulse/step]      |
| 022-039 | <p>Adjusts the sub-scan registration for each color and speed.</p> <p>Decreasing a value makes the image shift to the leading edge side on the print.</p> <p>Increasing a value makes the image shift to the trailing edge side on the print.</p> <p>1 line = 42μm</p> |      |  |
| 022     | S. Scan: High: Line: M   | *ENG | [-16384 to 16384 / <b>0</b> / 1 line/step] |
| 023     | S. Scan: High: Subline: M  | *ENG | Not used                                   |

|     |                                |      |  |
|-----|--------------------------------|------|--|
| 024 | S. Scan: Medium: Line: M       | *ENG |  |
| 025 | S. Scan: Medium:<br>Subline: M | *ENG |  |
| 026 | S. Scan: Low: Line: M          | *ENG | [-16384 to 16384 / <b>0</b> / 1 line/step] |
| 027 | S. Scan: Low: Subline: M       | *ENG | Not used                                   |
| 028 | S. Scan: High: Line: C         | *ENG | [-16384 to 16384 / <b>0</b> / 1 line/step] |
| 029 | S. Scan: High: Subline: C      | *ENG | Not used                                   |
| 030 | S. Scan: Medium: Line: C       | *ENG |  |
| 031 | S. Scan: Medium:<br>Subline: C | *ENG |  |
| 032 | S. Scan: Low: Line: C          | *ENG | [-16384 to 16384 / <b>0</b> / 1 line/step] |
| 033 | S. Scan: Low: Subline: C       | *ENG | Not used                                   |
| 034 | S. Scan: High: Line: Y         | *ENG | [-16384 to 16384 / <b>0</b> / 1 line/step] |
| 035 | S. Scan: High: Subline: Y      | *ENG | Not used                                   |
| 036 | S. Scan: Medium: Line: Y       | *ENG |  |
| 037 | S. Scan: Medium:<br>Subline: Y | *ENG |  |
| 038 | S. Scan: Low: Line: Y          | *ENG | [-16384 to 16384 / <b>0</b> / 1 line/step] |
| 039 | S. Scan: Low: Subline: Y       | *ENG | Not used                                   |

|             |   |   |  |
|-------------|---|---|--|
| <b>2183</b> | <b>[Main Scan Length Detection] DFU</b> |   |  |
| 001         | Execute: High: Bk                       | - | Executes the adjustment for the main scan length detection manually. |
| 002         | Execute: Medium: Bk                     | - |  |
| 003         | Execute: Low: Bk                        | - |  |
| 004         | Execute: High: M                        | - |  |

|     |                    |   |  |
|-----|--------------------|---|--|
| 005 | Execute: Medium: M | - |  |
| 006 | Execute: Low: M    | - |  |
| 007 | Execute: High: C   | - |  |
| 008 | Execute: Medium: C | - |  |
| 009 | Execute: Low: C    | - |  |
| 010 | Execute: High: Y   | - |  |
| 011 | Execute: Medium: Y | - |  |
| 012 | Execute: Low: Y    | - |  |

|             |  |   |   |
|-------------|--|---|---|
| <b>2184</b> | <b>[Main Scan Length Detection Target] DFU</b> |   |   |
| 001         | Execute: Bk                                    | - | Executes the target value for the main scan length detection. |
| 002         | Execute: M                                     | - |   |
| 003         | Execute: C                                     | - |   |
| 004         | Execute: Y                                     | - |   |

|             |   |      |  |
|-------------|---|------|--|
| <b>2185</b> |   |      |  |
|             | <p>Displays/adjusts the target value for the main scan magnification correction of the line position adjustment.</p> <p>After replacing the laser optics housing unit, input the standard value for Bk provided with the new unit. For details, see "Laser Optics Housing Unit" in the "Replacement Adjustment" section. It is not necessary to input the values for the other colors; these are automatically adjusted after doing the line position adjustment.</p> |      |  |
| 001         | Bk  | *ENG | [0 to 266667 / <b>249449</b> / 1 sub-dot/step] |
| 002         | M   | *ENG | <b>DFU</b>                                     |
| 003         | C   | *ENG |  |

|     |   |      |  |
|-----|---|------|--|
| 004 | Y | *ENG |  |
|-----|---|------|--|

|             |  |      |   |
|-------------|--|------|---|
| <b>2186</b> | <b>[Main Scan Length Detection] DFU</b>  |      |   |
| 001         | Selection  | *ENG | [0 or 1 / 1 / 1/step]<br>0: OFF, 1: ON                  |
|             | Enables or disables the main scan length detection for the laser.              |      |   |
| 002         | Paper Interval   | *ENG | [0 to 999 / 1 / 1 sec/step]                             |
|             | Adjusts the interval of the main scan length detection for the laser.          |      |   |
| 003         | Freq. Selection  | *ENG | [0 or 1 / 1 / 1/step]<br>0: D-phase, 1: D-phase and PLL |
|             | Selects the correction method of the main scan length detection for the laser. |      |   |
| 004         | Freq. Threshold  | *ENG | Not used  |

|             |                                |      |   |
|-------------|--------------------------------|------|---|
| <b>2190</b> | <b>[Line Position Adj.]</b>    |      |   |
| 001         | Paper Int. Mag.: Subdot:<br>Bk | *ENG | Not used                                    |
| 002         | Paper Int. Mag.: Subdot:<br>M  | *ENG |   |
| 003         | Paper Int. Mag.: Subdot:<br>C  | *ENG |   |
| 004         | Paper Int. Mag.: Subdot:<br>Y  | *ENG |   |
| 005         | M. Scan Mag.: Subdot: M        | *ENG | <b>DFU</b>                                  |
| 006         | M. Scan Mag.: Subdot: C        | *ENG | [0 or 1 / 1 / 1/step]                       |
| 007         | M. Scan Mag.: Subdot: Y        | *ENG | 0: Disable correction, 1: Enable correction |
| 008         | Area Mag.: Subdot: M           | *ENG | Not used                                    |

|     |                      |      |   |
|-----|----------------------|------|---|
| 009 | Area Mag.: Subdot: C | *ENG |   |
| 010 | Area Mag.: Subdot: Y | *ENG |   |
| 011 | S. Scan Cor. Setting | *ENG | <b>DFU</b><br>[0 or 1 / <b>1</b> / 1/step]<br>0: Adjusted with Bk<br>1: Adjusted in minimum shift among four colors |

|             |  |      |  |
|-------------|--|------|--|
| <b>2191</b> | <b>[MUSIC Coefficient Setting]</b> Line Position Adjustment: Coefficient Setting<br><b>DFU</b><br>ch 0: ID sensor at rear, ch 1: ID sensor at center, ch 2: ID sensor at front |      |  |
| 001         | ch 0: Filter: Front: a1  | *ENG | [-131071 to 131071 / <b>125869</b> / 1 bit/step] |
| 002         | ch 0: Filter: Front: a2  | *ENG | [-131071 to 131071 / <b>-60488</b> / 1 bit/step] |
| 003         | ch 0: Filter: Front: b0  | *ENG | [-131071 to 131071 / <b>39</b> / 1 bit/step]     |
| 004         | ch 0: Filter: Front: b1  | *ENG | [-131071 to 131071 / <b>77</b> / 1 bit/step]     |
| 005         | ch 0: Filter: Front: b2  | *ENG | [-131071 to 131071 / <b>39</b> / 1 bit/step]     |
| 006         | ch 0: Filter: Rear: a1   | *ENG | [-131071 to 131071 / <b>128596</b> / 1 bit/step] |
| 007         | ch 0: Filter: Rear: a2   | *ENG | [-131071 to 131071 / <b>-63398</b> / 1 bit/step] |
| 008         | ch 0: Filter: Rear: b0   | *ENG | [-131071 to 131071 / <b>84</b> / 1 bit/step]     |
| 009         | ch 0: Filter: Rear: b1   | *ENG | [-131071 to 131071 / <b>168</b> / 1 bit/step]    |
| 010         | ch 0: Filter: Rear: b2   | *ENG | [-131071 to 131071 / <b>84</b> / 1 bit/step]     |
| 011         | ch 1: Filter: Front: a1  | *ENG | [-131071 to 131071 / <b>125869</b> / 1 bit/step] |
| 012         | ch 1: Filter: Front: a2  | *ENG | [-131071 to 131071 / <b>-60488</b> / 1 bit/step] |
| 013         | ch 1: Filter: Front: b0  | *ENG | [-131071 to 131071 / <b>39</b> / 1 bit/step]     |
| 014         | ch 1: Filter: Front: b1  | *ENG | [-131071 to 131071 / <b>77</b> / 1 bit/step]     |
| 015         | ch 1: Filter: Front: b2  | *ENG | [-131071 to 131071 / <b>39</b> / 1 bit/step]     |

|     |                         |      |  |
|-----|-------------------------|------|--|
| 016 | ch 1: Filter: Rear: a1  | *ENG | [−131071 to 131071 / <b>128596</b> / 1 bit/step] |
| 017 | ch 1: Filter: Rear: a2  | *ENG | [−131071 to 131071 / <b>−63398</b> / 1 bit/step] |
| 018 | ch 1: Filter: Rear: b0  | *ENG | [−131071 to 131071 / <b>84</b> / 1 bit/step]     |
| 019 | ch 1: Filter: Rear: b1  | *ENG | [−131071 to 131071 / <b>168</b> / 1 bit/step]    |
| 020 | ch 1: Filter: Rear: b2  | *ENG | [−131071 to 131071 / <b>84</b> / 1 bit/step]     |
| 021 | ch 2: Filter: Front: a1 | *ENG | [−131071 to 131071 / <b>125869</b> / 1 bit/step] |
| 022 | ch 2: Filter: Front: a2 | *ENG | [−131071 to 131071 / <b>−60488</b> / 1 bit/step] |
| 023 | ch 2: Filter: Front: b0 | *ENG | [−131071 to 131071 / <b>39</b> / 1 bit/step]     |
| 024 | ch 2: Filter: Front: b1 | *ENG | [−131071 to 131071 / <b>77</b> / 1 bit/step]     |
| 025 | ch 2: Filter: Front: b2 | *ENG | [−131071 to 131071 / <b>39</b> / 1 bit/step]     |
| 026 | ch 2: Filter: Rear: a1  | *ENG | [−131071 to 131071 / <b>128596</b> / 1 bit/step] |
| 027 | ch 2: Filter: Rear: a2  | *ENG | [−131071 to 131071 / <b>−63398</b> / 1 bit/step] |
| 028 | ch 2: Filter: Rear: b0  | *ENG | [−131071 to 131071 / <b>84</b> / 1 bit/step]     |
| 029 | ch 2: Filter: Rear: b1  | *ENG | [−131071 to 131071 / <b>168</b> / 1 bit/step]    |
| 030 | ch 2: Filter: Rear: b2  | *ENG | [−131071 to 131071 / <b>84</b> / 1 bit/step]     |
| 031 | Q Format Selection      | *ENG | [0 to 3 / <b>3</b> / 1/step]                     |

|      |   |           |      |
|------|---|-----------|------|
| 2192 | <b>[MUSIC Threshold Setting]</b> Line Position Adjustment: Threshold Setting <b>DFU</b><br>ch 0: ID sensor at rear, ch 1: ID sensor at center, ch 2: ID sensor at front |           |      |
|      | 001   | ch 0: 1st | *ENG |
|      | 002   | ch 0: 2nd | *ENG |
|      | 003   | ch 0: 3rd | *ENG |
|      | 004   | ch 0: 4th | *ENG |
|      | 005   | ch 1: 1st | *ENG |

[0.5 to 3 / **1.2** / 0.1 V/step]

[0.5 to 3 / **1.2** / 0.1 V/step]

|     |           |      |                                      |
|-----|-----------|------|--------------------------------------|
| 006 | ch 1: 2nd | *ENG | [0.5 to 3 / <b>1.2</b> / 0.1 V/step] |
| 007 | ch 1: 3rd | *ENG |                                      |
| 008 | ch 1: 4th | *ENG |                                      |
| 009 | ch 2: 1st | *ENG |                                      |
| 010 | ch 2: 2nd | *ENG |                                      |
| 011 | ch 2: 3rd | *ENG |                                      |
| 012 | ch 2: 4th | *ENG |                                      |

|             |   |      |   |
|-------------|---|------|---|
| <b>2193</b> | <b>[MUSIC Condition Set]</b> Line Position Adjustment: Condition Setting                            |      |   |
| 001         | Auto Execution  | *ENG | [0 or 1 / <b>1</b> / – ]<br>0: OFF, 1: ON |
|             | Enables/disables the automatic line position adjustment   |      |   |
| 002         | Page: Job End: BW+FC  | *ENG | [0 to 999 / <b>500</b> / 1 page/step]     |
|             | Adjusts the threshold of the line position adjustment for BW and color printing mode after job end. |      |   |
| 003         | Page: Job End: FC   | *ENG | [0 to 999 / <b>200</b> / 1 page/step]     |
|             | Adjusts the threshold of the line position adjustment for color printing mode after job end.        |      |   |
| 004         | Page: Interrupt: BW+FC  | *ENG | [0 to 999 / <b>200</b> / 1 page/step]     |
|             | Adjusts the threshold of the line position adjustment for BW and color printing mode during job.    |      |   |
| 005         | Page: Interrupt: FC   | *ENG | [0 to 999 / <b>200</b> / 1 page/step]     |
|             | Adjusts the threshold of the line position adjustment for color printing mode during jobs.          |      |   |
| 006         | Page: Stand-By: BW  | *ENG | [0 to 999 / <b>100</b> / 1 page/step]     |



|     |   |      |  |
|-----|---|------|--|
|     | Adjusts the threshold of the line position adjustment for BW printing mode in stand-by mode. The line position adjustment is done when the number of outputs in BW printing mode reaches the value specified with this SP and the condition of SP2-193-008 or SP2-193-009 is satisfied.               |      |  |
| 007 | Page: Stand-By: FC  | *ENG | [0 to 999 / <b>100</b> / 1 page/step]    |
|     | Adjusts the threshold of the line position adjustment for BW printing mode in stand-by mode. The line position adjustment is done when the number of outputs in color printing mode reaches the value specified with this SP and the condition of SP2-193-008 or SP2-193-009 is satisfied.            |      |  |
| 008 | Temp.   | *ENG | [0 to 100 / <b>5</b> / 1°C/step]         |
|     | Adjust the temperature change threshold for the line position adjustment (Mode b: adjustment once). The timing for line position adjustment depends on the combinations of several conditions. For details, see 'Automatic Line Position Adjustment' in the "Detailed Section Descriptions" section.  |      |  |
| 009 | Time  | *ENG | [1 to 1440 / <b>300</b> / 1 minute/step] |
|     | Adjust the time threshold for the line position adjustment (Mode b: adjustment once). The timing for line position adjustment depends on the combinations of several conditions. For details, see 'Automatic Line Position Adjustment' in the "Detailed Section Descriptions" section.                |      |  |
| 010 | Magnification   | *ENG | [0 to 10 / <b>1</b> / 1%/step]           |
|     | Adjusts the magnification threshold for line position adjustment. If the length of the main scan is changed by this amount since the previous MUSIC, then MSUIC is done again.  |      |  |
| 011 | Temp. 2   | *ENG | [0 to 100 / <b>10</b> / 1°C/step]        |
|     | Adjust the temperature change threshold for the line position adjustment (Mode a: adjustment twice). The timing for line position adjustment depends on the combinations of several conditions. For details, see 'Automatic Line Position Adjustment' in the "Detailed Section Descriptions" section. |      |  |
| 012 | Time 2  | *ENG | [1 to 9999 / <b>600</b> / 1 minute/step] |

|  |   |
|--|---|
|  | Adjust the time threshold for the line position adjustment (Mode a: adjustment twice). The timing for line position adjustment depends on the combinations of several conditions. For details, see 'Automatic Line Position Adjustment' in the "Detailed Section Descriptions" section. |
|--|---|

|             |  |      |   |
|-------------|--|------|---|
| <b>2194</b> | <b>[MUSIC Execution Result] Line Position Adjustment: Execution Result</b> |      |   |
| 001         | Year   | *ENG | [0 to 99 / <b>0</b> / 1 year/step]  |
| 002         | Month  | *ENG | [1 to 12 / <b>1</b> / 1 month/step]   |
| 003         | Day  | *ENG | [1 to 31 / <b>1</b> / 1 day/step]   |
| 004         | Hour   | *ENG | [0 to 23 / <b>0</b> / 1 hour/step]  |
| 005         | Minute   | *ENG | [0 to 59 / <b>0</b> / 1 minute/step]  |
| 006         | Temperature  | *ENG | [0 to 100 / <b>0</b> / 1 page/step]   |
| 007         | Execution Result   | *ENG | [0 or 1 / <b>0</b> / 1 /step]<br>0: Completed successfully, 1: Failed   |
| 008         | Number of Execution  | *ENG | [0 to 999999 / <b>0</b> / 1 time/step]  |
| 009         | Number of Failure  | *ENG | [0 to 999999 / <b>0</b> / 1 /step]  |
| 010         | Error Result: M  | *ENG | [0 to 9 / <b>0</b> / 1 /step]<br>0: Not done  |
| 011         | Error Result: C  | *ENG | 1: Completed successfully   |
| 012         | Error Result: Y  | *ENG | 2: Cannot detect patterns<br>3: Fewer lines on the pattern than the target<br>4: Not used<br>5: Out of the adjustment range<br>6 to 9: Not used |

|             |                           |      |                                    |
|-------------|---------------------------|------|------------------------------------|
| <b>2197</b> | <b>[MUSIC Start Time]</b> |      |                                    |
|             | <b>DFU</b>                |      |                                    |
| 001         | MUSIC Start Time (EDT)    | *ENG | [10 to 40 / <b>20</b> / 10ms/step] |

|     |                    |      |   |
|-----|--------------------|------|---|
| 002 | TM Sensor Position | *ENG | [50 to 500 / <b>105.5</b> / 0.1mm/step] |
|-----|--------------------|------|---|

|      |                             |      |                                       |
|------|-----------------------------|------|---------------------------------------|
| 2198 | <b>[Music A/D Interval]</b> |      |                                       |
|      | <b>DFU</b>                  |      |                                       |
| 001  | ADC Trigger Counter         | *ENG | [7.5 to 20 / <b>10</b> / 0.1 μm/step] |

|      |                                   |      |   |
|------|-----------------------------------|------|---|
| 2199 | <b>[Music Error Time Setting]</b> |      |   |
|      | <b>DFU</b>                        |      |   |
| 001  | Error Detection Counter           | *ENG | [0.5 to 4 / <b>2.5</b> / 0.1 sec /step] |

|      |   |      |  |
|------|---|------|--|
| 2221 | <b>[LD Power] LD Power Control</b>  |      |  |
|      | Adjusts the fixed LD power for each line speed and color.<br>These SPs are activated only when SP3-041-002 is set to "0". |      |  |
| 001  | Plain: Bk   | *ENG | [0 to 200 / <b>100</b> / 1%/step]<br>Increasing this value makes the image density darker. |
| 002  | Plain: M  | *ENG |  |
| 003  | Plain: C  | *ENG |  |
| 004  | Plain: Y  | *ENG |  |
| 009  | Thick 2&FINE: Bk  | *ENG |  |
| 010  | Thick 2&FINE: M   | *ENG |  |
| 011  | Thick 2&FINE: C   | *ENG |  |
| 012  | Thick 2&FINE: Y   | *ENG |  |

|      |  |  |  |
|------|--|--|--|
| 2229 | <b>[Development DC Bias] Development DC Bias Adjustment</b>  |  |  |
|      | Adjusts the development bias.<br>Development bias is automatically adjusted during process control; therefore, adjusting these settings has no effect while Process Control (SP3-041-001 |  |  |

|     |  |      |                                      |
|-----|--|------|--------------------------------------|
|     | Default: ON) is activated.<br>After deactivating Process Control with SP3-041-001, the values in these SP modes are used for printing. |      |                                      |
| 001 | Plain: Bk  | *ENG | [0 to 700 / <b>550</b> / 10 –V/step] |
| 002 | Plain: M   | *ENG |                                      |
| 003 | Plain: C   | *ENG |                                      |
| 004 | Plain: Y   | *ENG |                                      |
| 005 | Thick 1: Bk  | *ENG |                                      |
| 006 | Thick 1: M   | *ENG |                                      |
| 007 | Thick 1: C   | *ENG |                                      |
| 008 | Thick 1: Y   | *ENG |                                      |
| 009 | Thick 2: Bk  | *ENG |                                      |
| 010 | Thick 2: M   | *ENG |                                      |
| 011 | Thick 2: C   | *ENG |                                      |
| 012 | Thick 2: Y   | *ENG |                                      |
| 013 | Fine: Bk   | *ENG |                                      |
| 014 | Fine: M  | *ENG |                                      |
| 015 | Fine: C  | *ENG |                                      |
| 016 | Fine: Y  | *ENG |                                      |

|             |  |   |                                |
|-------------|--|---|--------------------------------|
| <b>2241</b> | <b>[Temperature/Humidity: Display]</b>             |   |                                |
|             | Displays the environment temperature and humidity. |   |                                |
| 001         | Temperature  | - | [-128 to 127 / - / 0.1°C/step] |
| 002         | Relative Humidity                                  | - | [0 to 100 / - / 0.1 %RH/step]  |

|     |                   |   |  |
|-----|-------------------|---|--|
| 003 | Absolute Humidity | - | [0 to 100 / - / 0.01 g/m <sup>3</sup> /step] |
|-----|-------------------|---|--|

|             |   |      |  |
|-------------|---|------|--|
| <b>2302</b> | <b>[Environmental Correction: Transfer]</b><br>Environmental Correction: Image Transfer Belt Unit |      |  |
| 002         | Forced Setting  | *ENG | Sets the environment condition manually.<br>[0 to 5 / <b>0</b> / 1/step]<br>0: Automatic environment control<br>1: LL (Low temperature/ Low humidity)<br>2: ML (Middle temperature/ Low humidity)<br>3: MM (Middle temperature/ Middle humidity)<br>4: MH (Middle temperature/ High humidity)<br>5: HH (High temperature/ High humidity) |
| 003         | Absolute Humidity:<br>Threshold 1   | *ENG | Adjusts the threshold value between LL and ML.<br>[0 to 100 / <b>4.3</b> / 0.01 g/m <sup>3</sup> /step]  |
| 004         | Absolute Humidity:<br>Threshold 2   | *ENG | Adjusts the threshold value between ML and MM.<br>[0 to 100 / <b>11.3</b> / 0.01 g/m <sup>3</sup> /step]   |
| 005         | Absolute Humidity:<br>Threshold 3   | *ENG | Adjusts the threshold value between MM and MH.<br>[0 to 100 / <b>18</b> / 0.01 g/m <sup>3</sup> /step]   |
| 006         | Absolute Humidity:<br>Threshold 4   | *ENG | Adjusts the threshold value between MH and HH.<br>[0 to 100 / <b>24</b> / 0.01 g/m <sup>3</sup> /step]   |

|             |  |      |  |
|-------------|--|------|--|
| <b>2308</b> | <b>[Paper Size Correction]</b>                             |      |  |
|             | Adjusts the threshold value for the paper size correction. |      |  |
| 001         | Threshold 1  | *ENG | [0 to 350 / <b>297</b> / 1 mm/step]<br>Threshold 1 ≤ paper:<br>Paper is detected as "S1" size. |

|     |             |      |   |
|-----|-------------|------|---|
| 002 | Threshold 2 | *ENG | [0 to 350 / <b>257</b> / 1 mm/step]<br>Threshold 2 ≤ paper ≤ Threshold 1:<br>Paper is detected as "S2" size.  |
| 003 | Threshold 3 | *ENG | [0 to 350 / <b>210</b> / 1 mm/step]<br>Threshold 3 ≤ paper ≤ Threshold 2:<br>Paper is detected as "S3" size.  |
| 004 | Threshold 4 | *ENG | [0 to 350 / <b>148</b> / 1 mm/step]<br>Threshold 4 ≤ paper ≤ Threshold 3:<br>Paper is detected as "S4" size.<br>Paper ≤ Threshold 4:<br>Paper is detected as "S5" size. |

|             |                                  |      |  |
|-------------|----------------------------------|------|--|
| <b>2311</b> | <b>[Non Image Area: Bias]</b>    |      |  |
| 001         | Image Transfer                   | *ENG | Adjusts the bias of the image transfer belt between images. This value is added to the value of the image transfer belt bias.<br>[10 to 250 / <b>100</b> / 5 %/step]             |
| 002         | Paper Transfer                   | *ENG | Adjusts the bias of the paper transfer roller between images.<br>[0 to 130 / <b>5</b> / 1 -μA/step]  |
| 003         | Paper Transfer:<br>Resistance FB | *ENG | Adjusts the bias of the paper transfer roller for measuring the resistance of the paper transfer roller when the image processing starts.<br>[0 to 130 / <b>30</b> / 1 -μA/step] |

|             |  |      |   |
|-------------|--|------|---|
| <b>2314</b> | <b>[P/M Pattern: Bias]</b><br>Paper type: Plain, Thick, Thick2 |      |   |
| 001         | Image Transfer: Plain  | *ENG | Adjusts the bias of the image transfer belt during the process control and automatic line position control. |

|     |                                |      |   |
|-----|--------------------------------|------|---|
|     |                                |      | [0 to 80 / <b>22</b> / 1 $\mu$ A /step] |
| 002 | Image Transfer: Thick 1        | *ENG | Not used                                |
| 003 | Image Transfer: Thick 2 & FINE | *ENG | Not used                                |

|             |                         |      |  |
|-------------|-------------------------|------|--|
| <b>2316</b> | <b>[Power ON: Bias]</b> |      |  |
| 001         | Image Transfer          | *ENG | Adjusts the bias of the image transfer belt at warming up mode after a machine has been turned on or any door has been closed.<br>[0 to 80 / <b>5</b> / 1 $\mu$ A /step] |

|             |   |      |   |
|-------------|---|------|---|
| <b>2326</b> | <b>[Transfer Roller CL: Bias]</b> Transfer Roller Cleaning: Bias Adjustment                             |      |   |
| 001         | Positive  | *ENG | [0 to 5000 / <b>2000</b> / 1 V /step]     |
|             | Adjusts the positive voltage of the paper transfer roller for cleaning the paper transfer roller.       |      |   |
| 002         | Negative  | *ENG | [0 to 200 / <b>50</b> / 1 $-\mu$ A /step] |
|             | Adjusts the negative current of the paper transfer roller for cleaning the paper transfer roller.       |      |   |
| 003         | Negative: Limit Voltage   | *ENG | [0 to 5000 / <b>2000</b> / 1 $-V$ /step]  |
|             | Adjusts the negative current limit of the paper transfer roller for cleaning the paper transfer roller. |      |   |

|             |  |      |                                   |
|-------------|--|------|-----------------------------------|
| <b>2351</b> | <b>[Common: BW: Bias]</b> Image Transfer Belt: B/W: Bias Adjustment          |      |                                   |
| 001         | Image Transfer: Plain  | *ENG | [0 to 80 / <b>24</b> / 1 $\mu$ A] |
|             | Adjusts the current for the image transfer belt in B/W mode for plain paper. |      |                                   |
| 002         | Image Transfer: Thick 1  | *ENG | [0 to 80 / <b>14</b> / 1 $\mu$ A] |

|     |   |      |                                   |
|-----|---|------|-----------------------------------|
|     | Adjusts the current for the image transfer belt in B/W mode for thick 1 paper.              |      |                                   |
| 003 | Image Transfer: Thick 2 & FINE  | *ENG | [0 to 80 / <b>12</b> / 1 $\mu$ A] |
|     | Adjusts the current for the image transfer belt in B/W mode for thick 2 paper or FINE mode. |      |                                   |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2357</b> | <b>[Common: FC: Bias]</b> Image Transfer Belt: Full Color: Bias Adjustment                        |      |                                   |
| 001         | Image Transfer: Plain: Bk   | *ENG | [0 to 80 / <b>20</b> / 1 $\mu$ A] |
|             | Adjusts the current for the image transfer belt for Black in full color mode for plain paper.     |      |                                   |
| 002         | Image Transfer: Plain: M  | *ENG | [0 to 80 / <b>20</b> / 1 $\mu$ A] |
|             | Adjusts the current for the image transfer belt for Magenta in full color mode for plain paper.   |      |                                   |
| 003         | Image Transfer: Plain: C  | *ENG | [0 to 80 / <b>22</b> / 1 $\mu$ A] |
|             | Adjusts the current for the image transfer belt for Cyan in full color mode for plain paper.      |      |                                   |
| 004         | Image Transfer: Plain: Y  | *ENG | [0 to 80 / <b>30</b> / 1 $\mu$ A] |
|             | Adjusts the current for the image transfer belt for Yellow in full color mode for plain paper.    |      |                                   |
| 005         | Image Transfer: Thick 1: Bk   | *ENG | [0 to 80 / <b>11</b> / 1 $\mu$ A] |
|             | Adjusts the current for the image transfer belt for Black in full color mode for thick 1 paper.   |      |                                   |
| 006         | Image Transfer: Thick 1: M  | *ENG | [0 to 80 / <b>11</b> / 1 $\mu$ A] |
|             | Adjusts the current for the image transfer belt for Magenta in full color mode for thick 1 paper. |      |                                   |



|     |  |      |                                   |
|-----|--|------|-----------------------------------|
| 007 | Image Transfer: Thick 1:<br>C  | *ENG | [0 to 80 / <b>12</b> / 1 $\mu$ A] |
|     | Adjusts the current for the image transfer belt for Cyan in full color mode for thick 1 paper.       |      |                                   |
| 008 | Image Transfer: Thick 1:<br>Y  | *ENG | [0 to 80 / <b>17</b> / 1 $\mu$ A] |
|     | Adjusts the current for the image transfer belt for Yellow in full color mode for thick 1 paper.     |      |                                   |
| 009 | Image Transfer: Thick 2 &<br>FINE: Bk  | *ENG | [0 to 80 / <b>12</b> / 1 $\mu$ A] |
|     | Adjusts the current for the image transfer belt for Black in full color mode for Thick 2 and fine.   |      |                                   |
| 010 | Image Transfer: Thick 2 &<br>FINE: M   | *ENG | [0 to 80 / <b>12</b> / 1 $\mu$ A] |
|     | Adjusts the current for the image transfer belt for Magenta in full color mode for Thick 2 and fine. |      |                                   |
| 011 | Image Transfer: Thick 2 &<br>FINE: C   | *ENG | [0 to 80 / <b>12</b> / 1 $\mu$ A] |
|     | Adjusts the current for the image transfer belt for Cyan in full color mode for Thick 2 and fine.    |      |                                   |
| 012 | Image Transfer: Thick 2 &<br>FINE: Y   | *ENG | [0 to 80 / <b>12</b> / 1 $\mu$ A] |
|     | Adjusts the current for the image transfer belt for Yellow in full color mode for Thick 2 and fine.  |      |                                   |

|      |   |  |  |
|------|---|--|--|
| 2381 | <b>[Common: LL]</b>   |  |  |
|      | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2351 and SP2357 are multiplied by these SP values. |  |  |

|     |                                |      |  |
|-----|--------------------------------|------|--|
| 001 | Image Transfer: Plain          | *ENG | [10 to 250 / <b>70</b> / 5%/step]  |
| 002 | Image Transfer: Thick 1        | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 003 | Image Transfer: Thick 2 & FINE | *ENG | Not used   |
| 004 | Image Transfer: P/M Pattern    | *ENG | [10 to 250 / <b>100</b> / 5%/step]<br>P/M Pattern: When doing process control or automatic line position adjustment. |

|             |   |      |  |
|-------------|---|------|--|
| <b>2382</b> | <b>[Common: ML]</b>   |      |  |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2351 and SP2357 are multiplied by these SP values. |      |  |
| 001         | Image Transfer: Plain   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002         | Image Transfer: Thick 1   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 003         | Image Transfer: Thick 2 & FINE  | *ENG | Not used   |
| 004         | Image Transfer: P/M Pattern   | *ENG | [10 to 250 / <b>100</b> / 5%/step]<br>P/M Pattern: When doing the process control or automatic line position adjustment. |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2383</b> | <b>[Common: MM]</b>   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2351 and SP2357 are multiplied by these SP values. |      |                                    |
| 001         | Image Transfer: Plain   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 002         | Image Transfer: Thick 1   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 003         | Image Transfer: Thick 2 & FINE  | *ENG | Not used                           |

|     |                             |      |  |
|-----|-----------------------------|------|--|
| 004 | Image Transfer: P/M Pattern | *ENG | [10 to 250 / <b>100</b> / 5%/step]<br>P/M Pattern: When doing the process control or automatic line position adjustment. |
|-----|-----------------------------|------|--|

|      |   |      |  |
|------|---|------|--|
| 2384 | <b>[Common: MH]</b>   |      |  |
|      | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2351 and SP2357 are multiplied by these SP values. |      |  |
| 001  | Image Transfer: Plain   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002  | Image Transfer: Thick 1   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 003  | Image Transfer: Thick 2 & FINE  | *ENG | Not used   |
| 004  | Image Transfer: P/M Pattern   | *ENG | [10 to 250 / <b>100</b> / 5%/step]<br>P/M Pattern: When doing the process control or automatic line position adjustment. |

|      |   |      |  |
|------|---|------|--|
| 2385 | <b>[Common: HH]</b>   |      |  |
|      | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2351 and SP2357 are multiplied by these SP values. |      |  |
| 001  | Image Transfer: Plain   | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 002  | Image Transfer: Thick 1   | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 003  | Image Transfer: Thick 2 & FINE  | *ENG | Not used   |
| 004  | Image Transfer: P/M Pattern   | *ENG | [10 to 250 / <b>100</b> / 5%/step]<br>P/M Pattern: When doing the process control or automatic line position adjustment. |

|             |  |      |  |
|-------------|--|------|--|
| <b>2401</b> | <b>[Plain: Bias]</b>   |      |  |
|             | Adjusts the DC voltage of the discharge plate for plain paper. |      |  |
| 001         | Separation DC: Plain<br>(138 mm/s): 1st Side                   | *ENG | [0 to 5000 / <b>1000</b> / 10 –V/step] |
| 002         | Separation DC: Plain<br>(138 mm/s): 2nd Side                   | *ENG |  |
| 003         | Separation DC: Fine: 1st<br>Side                               | *ENG | Not used                               |
| 004         | Separation DC: Fine: 2nd<br>Side                               | *ENG |  |


|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2403</b> | <b>[Plain: Bias: BW]</b>   |      |                                     |
|             | Adjusts the current for the paper transfer roller for plain paper in black-and-white mode. |      |                                     |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side  | *ENG | [0 to 130 / <b>20</b> / 1 –μA/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side  | *ENG | [0 to 130 / <b>25</b> / 1 –μA/step] |
| 003         | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                            |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                     |


|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>2407</b> | <b>[Plain: Bias: FC]</b>  |      |                                     |
|             | Adjusts the current for the paper transfer roller for plain paper in full color mode. |      |                                     |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 130 / <b>30</b> / 1 –μA/step] |

|     |   |      |   |
|-----|---|------|---|
| 002 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side | *ENG | [0 to 130 / <b>30</b> / 1 $\mu$ A/step] |
| 003 | Paper Transfer: FINE: 1st<br>Side             | *ENG | Not used                                |
| 004 | Paper Transfer: FINE:<br>2nd Side             | *ENG |   |

|      |   |      |  |
|------|---|------|--|
| 2411 | <b>[Plain: Paper Size Correction]</b>   |      |  |
|      | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2403 and SP2407 are multiplied by these SP values. |      |  |
| 001  | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S1   | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size $\geq$ 297 mm (Paper width)               |
| 002  | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S1   | *ENG |  |
| 003  | Paper Transfer: FINE: 1st<br>Side: S1   | *ENG |  |
| 004  | Paper Transfer: FINE:<br>2nd Side: S1   | *ENG |  |
| 005  | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S2   | *ENG | [100 to 600 / <b>130</b> / 5%/step]<br>297 mm $\geq$ S2 size $\geq$ 275 mm (Paper width) |
| 006  | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S2   | *ENG |  |
| 007  | Paper Transfer: FINE: 1st<br>Side: S2   | *ENG | Not used   |
| 008  | Paper Transfer: FINE:<br>2nd Side: S2   | *ENG |  |
| 009  | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S3   | *ENG | [100 to 600 / <b>160</b> / 5%/step]<br>275 mm $\geq$ S3 size $\geq$ 210 mm (Paper width) |


|     |   |      |  |
|-----|---|------|--|
| 010 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S3 | *ENG | [100 to 600 / <b>200</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 011 | Paper Transfer: FINE: 1st<br>Side: S3             | *ENG | Not used   |
| 012 | Paper Transfer: FINE:<br>2nd Side: S3             | *ENG |  |
| 013 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S4 | *ENG | [100 to 600 / <b>220</b> / 5%/step]<br>210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 014 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S4 | *ENG |  |
| 015 | Paper Transfer: FINE: 1st<br>Side: S4             | *ENG | Not used   |
| 016 | Paper Transfer: FINE:<br>2nd Side: S4             | *ENG |  |
| 017 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S5 | *ENG | [100 to 600 / <b>240</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width)          |
| 018 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S5 | *ENG |  |
| 019 | Paper Transfer: FINE: 1st<br>Side: S5             | *ENG | Not used   |
| 020 | Paper Transfer: FINE:<br>2nd Side: S5             | *ENG |  |

|      |   |      |                                   |
|------|---|------|-----------------------------------|
| 2421 | <b>[Plain: Leading Edge Correction]</b> Plain Paper: Leading Edge Correction  |      |                                   |
|      | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2403 and SP2407 are multiplied by these SP values.<br> <b>Note</b><br><ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2422.</li> </ul> |      |                                   |
| 001  | Paper Transfer: Plain   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |

|             |  |      |                                   |
|-------------|--|------|-----------------------------------|
|             | (138 mm/s): 1st Side   |      |                                   |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side  | *ENG | [0 to 400 / <b>150</b> / 5%/step] |
| 003         | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                          |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                   |
| <b>2421</b> | <p>Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2401 is multiplied by these SPs values.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2422.</li> </ul> |      |                                   |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Page   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Page   | *ENG |                                   |
| 007         | Separation DC: Fine: 1st<br>Page   | *ENG | Not used                          |
| 008         | Separation DC: Fine: 2nd<br>Page   | *ENG |                                   |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2422</b> | <b>[Plain: Switch Timing: Lead. Edge]</b>   |      |                                   |
|             | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. |      |                                   |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 30 / <b>0</b> / 2 mm/step]  |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG | [0 to 30 / <b>20</b> / 2 mm/step] |
| 003         | Paper Transfer: FINE: 1st   | *ENG | Not used                          |

|     |  |      |                                  |
|-----|--|------|----------------------------------|
|     | Side   |      |                                  |
| 004 | Paper Transfer: FINE:<br>2nd Side            | *ENG |                                  |
| 005 | Separation DC: Plain<br>(138 mm/s): 1st Page | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 006 | Separation DC: Plain<br>(138 mm/s): 2nd Page | *ENG |                                  |
| 007 | Separation DC: Fine: 1st<br>Page             | *ENG | Not used                         |
| 008 | Separation DC: Fine: 2nd<br>Page             | *ENG |                                  |

|             |  |      |                                   |
|-------------|--|------|-----------------------------------|
| <b>2423</b> | <b>[Plain: Trailing Edge Correction]</b> Plain Paper: Trailing Edge Correction   |      |                                   |
|             | <p>Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2403 and SP2407 are multiplied by these SP values.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2424.</li> </ul> |      |                                   |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side  | *ENG |                                   |
| 003         | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                          |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                   |



|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2424</b> | <b>[Plain: Switch Timing: Trail. Edge]</b>   |      |                                    |
|             | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side  | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2431</b> | <b>[Plain: LL] Plain Paper: LL Environment Coefficient Adjustment</b>   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2403 and SP2407 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2431</b> | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2401 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |

|     |   |      |          |
|-----|---|------|----------|
| 006 | Separation DC: Plain<br>(138 mm/s): 2nd Side: | *ENG | Not used |
| 007 | Separation DC: FINE: 1st<br>Side              | *ENG |          |
| 008 | Separation DC: FINE:<br>2nd Side              | *ENG |          |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2432</b> | <b>[Plain: ML]</b> Plain Paper: ML Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2403 and SP2407 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2432</b> | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2401 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Side:   | *ENG | [10 to 250 / <b>170</b> / 5%/step] |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2433</b> | <b>[Plain: MM]</b> Plain Paper: MM Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2403 and SP2407 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2433</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2401 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Side:   | *ENG | [10 to 250 / <b>140</b> / 5%/step] |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2434</b> | <b>[Plain: MH]</b> Plain Paper: MH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2403 and SP2407 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 002         | Paper Transfer: Plain   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
|             | (138 mm/s): 2nd Side  |      |                                    |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                    |
| <b>2434</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2401 is multiplied by these SP values. |      |                                    |
| 005         | Separation DC: Plain (138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>150</b> / 5%/step] |
| 006         | Separation DC: Plain (138 mm/s): 2nd Side:  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 007         | Separation DC: FINE: 1st Side   | *ENG | Not used                           |
| 008         | Separation DC: FINE: 2nd Side   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2435</b> | <b>[Plain: HH]</b> Plain Paper: HH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2403 and SP2407 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                    |
| <b>2435</b> | Adjusts the environment coefficient for each mode. When the environment is  |      |                                    |

|     |  |      |                                   |
|-----|--|------|-----------------------------------|
|     | detected as HH, SP2401 is multiplied by these SP values. |      |                                   |
| 005 | Separation DC: Plain<br>(138 mm/s): 1st Side             | *ENG | [10 to 250 / <b>80</b> / 5%/step] |
| 006 | Separation DC: Plain<br>(138 mm/s): 2nd Side:            | *ENG |                                   |
| 007 | Separation DC: FINE: 1st<br>Side                         | *ENG | Not used                          |
| 008 | Separation DC: FINE:<br>2nd Side                         | *ENG |                                   |

|             |   |      |  |
|-------------|---|------|--|
| <b>2451</b> | <b>[Thin: Bias]</b>   |      |  |
|             | Adjusts the DC voltage of the discharge plate for thin paper. |      |  |
| 001         | Separation DC: Plain<br>(138 mm/s): 1st Side                  | *ENG | [0 to 5000 / <b>1000</b> / 10 –V/step] |
| 002         | Separation DC: Plain<br>(138 mm/s): 2nd Side                  | *ENG | [0 to 5000 / <b>1500</b> / 10 –V/step] |
| 003         | Separation DC: Fine: 1st<br>Side                              | *ENG | Not used                               |
| 004         | Separation DC: Fine: 2nd<br>Side                              | *ENG |  |

|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>2453</b> | <b>[Thin: Bias: BW]</b>   |      |                                     |
|             | Adjusts the current for the paper transfer roller for thin paper in black-and-white mode. |      |                                     |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 130 / <b>20</b> / 1 –μA/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG | [0 to 130 / <b>25</b> / 1 –μA/step] |



|     |                                |      |          |
|-----|--------------------------------|------|----------|
| 003 | Paper Transfer: FINE: 1st Side | *ENG | Not used |
| 004 | Paper Transfer: FINE: 2nd Side | *ENG | Not used |

|             |  |      |   |
|-------------|--|------|---|
| <b>2457</b> | <b>[Thin: Bias: FC]</b>  |      |   |
|             | Adjusts the current for the paper transfer roller for thin paper in full color mode. |      |   |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side   | *ENG | [0 to 130 / <b>30</b> / 1 $\mu$ A/step] |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side   | *ENG | [0 to 130 / <b>30</b> / 1 $\mu$ A/step] |
| 003         | Paper Transfer: FINE: 1st Side   | *ENG | Not used                                |
| 004         | Paper Transfer: FINE: 2nd Side   | *ENG | Not used                                |

|             |   |      |  |
|-------------|---|------|--|
| <b>2461</b> | <b>[Thin: Paper Size Correction]</b>  |      |  |
|             | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2453 and SP2457 are multiplied by these SP values. |      |  |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side: S1  | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size $\geq$ 297 mm (Paper width) |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side: S1  | *ENG |  |
| 003         | Paper Transfer: FINE: 1st Side: S1  | *ENG | Not used   |
| 004         | Paper Transfer: FINE: 2nd Side: S1  | *ENG |  |
| 005         | Paper Transfer: Plain   | *ENG | [100 to 600 / <b>130</b> / 5%/step]  |

|     |   |      |  |
|-----|---|------|--|
|     | (138 mm/s): 1st Side: S2                          |      |  |
| 006 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S2 | *ENG | 297 mm ≥ S2 size ≥ 275 mm (Paper width)  |
| 007 | Paper Transfer: FINE: 1st<br>Side: S2             | *ENG | Not used   |
| 008 | Paper Transfer: FINE:<br>2nd Side: S2             | *ENG |  |
| 009 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S3 | *ENG | [100 to 600 / <b>160</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 010 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S3 | *ENG | [100 to 600 / <b>200</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 011 | Paper Transfer: FINE: 1st<br>Side: S3             | *ENG | Not used   |
| 012 | Paper Transfer: FINE:<br>2nd Side: S3             | *ENG |  |
| 013 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S4 | *ENG | [100 to 600 / <b>220</b> / 5%/step]<br>210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 014 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S4 | *ENG |  |
| 015 | Paper Transfer: FINE: 1st<br>Side: S4             | *ENG | Not used   |
| 016 | Paper Transfer: FINE:<br>2nd Side: S4             | *ENG |  |
| 017 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S5 | *ENG | [100 to 600 / <b>240</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width)          |
| 018 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S5 | *ENG |  |
| 019 | Paper Transfer: FINE: 1st                         | *ENG | Not used   |

|     |                                       |      |  |
|-----|---------------------------------------|------|--|
|     | Side: S5                              |      |  |
| 020 | Paper Transfer: FINE:<br>2nd Side: S5 | *ENG |  |

|      |   |      |                                   |
|------|---|------|-----------------------------------|
| 2471 | <b>[Thin: Leading Edge Correction]</b> Thin Paper: Leading Edge Correction  |      |                                   |
|      | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2453 and SP2457 are multiplied by these SP values.<br> Note <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2472.</li> </ul> |      |                                   |
| 001  | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002  | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                   |
| 003  | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                          |
| 004  | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                   |
| 2471 | Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2451 is multiplied by these SP values.<br> Note <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2472.</li> </ul>                 |      |                                   |
| 005  | Separation DC: Plain<br>(138 mm/s): 1st Page  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 006  | Separation DC: Plain<br>(138 mm/s): 2nd Page  | *ENG |                                   |
| 007  | Separation DC: Fine: 1st<br>Page  | *ENG | Not used                          |
| 008  | Separation DC: Fine: 2nd<br>Page  | *ENG |                                   |



|             |   |      |                                  |
|-------------|---|------|----------------------------------|
|             | <b>[Thin: Switch Timing: Lead. Edge]</b>  |      |                                  |
| <b>2472</b> | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. |      |                                  |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                  |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                         |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                  |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Page  | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Page  | *ENG |                                  |
| 007         | Separation DC: Fine: 1st<br>Page  | *ENG | Not used                         |
| 008         | Separation DC: Fine: 2nd<br>Page  | *ENG |                                  |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
|             | <b>[Thin: Trailing Edge Correction]</b> Thin Paper: Trailing Edge Correction  |      |                                   |
| <b>2473</b> | Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2453 and SP2457 are multiplied by these SP values.<br><a href="#">↓ Note</a><br><ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2474.</li> </ul> |      |                                   |
| 001         | Paper Transfer: Plain   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |

|     |   |      |          |
|-----|---|------|----------|
|     | (138 mm/s): 1st Side                          |      | Not used |
| 002 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side | *ENG |          |
| 003 | Paper Transfer: FINE: 1st<br>Side             | *ENG |          |
| 004 | Paper Transfer: FINE:<br>2nd Side             | *ENG |          |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2474</b> | <b>[Thin: Switch Timing: Trail. Edge]</b>  |      |                                    |
|             | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side  | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2481</b> | <b>[Thin: LL] Thin Paper: LL Environment Coefficient Adjustment</b>   |      |                                   |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2453 and SP2457 are multiplied by these SP values. |      |                                   |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>80</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                   |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                    |
| <b>2481</b> | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2451 is multiplied by these SP values. |      |                                    |
| 005         | Separation DC: Plain (138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Plain (138 mm/s): 2nd Side:  | *ENG |                                    |
| 007         | Separation DC: FINE: 1st Side   | *ENG | Not used                           |
| 008         | Separation DC: FINE: 2nd Side   | *ENG |                                    |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2482</b> | <b>[Thin: ML]</b> Thin Paper: ML Environment Coefficient Adjustment   |      |                                   |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2453 and SP2457 are multiplied by these SP values. |      |                                   |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>90</b> / 5%/step] |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side  | *ENG |                                   |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                          |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                   |
| <b>2482</b> | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2451 is multiplied by these SP values.             |      |                                   |

|     |   |      |                                    |
|-----|---|------|------------------------------------|
| 005 | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006 | Separation DC: Plain<br>(138 mm/s): 2nd Side: | *ENG | [10 to 250 / <b>170</b> / 5%/step] |
| 007 | Separation DC: FINE: 1st<br>Side              | *ENG | Not used                           |
| 008 | Separation DC: FINE:<br>2nd Side              | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2483</b> | <b>[Thin: MM]</b> Thin Paper: MM Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2453 and SP2457 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2483</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2451 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Thin: 1st<br>Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Thin: 2nd<br>Side:   | *ENG | [10 to 250 / <b>140</b> / 5%/step] |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |

|     |                                  |      |  |
|-----|----------------------------------|------|--|
| 008 | Separation DC: FINE:<br>2nd Side | *ENG |  |
|-----|----------------------------------|------|--|

|      |   |      |                                    |
|------|---|------|------------------------------------|
| 2484 | <b>[Thin: MH]</b> Thin Paper: MH Environment Coefficient Adjustment   |      |                                    |
|      | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2453 and SP2457 are multiplied by these SP values. |      |                                    |
| 001  | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 002  | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003  | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004  | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| 2484 | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2451 is multiplied by these SP values.             |      |                                    |
| 005  | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>150</b> / 5%/step] |
| 006  | Separation DC: Plain<br>(138 mm/s): 2nd Side:   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 007  | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008  | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|      |   |  |  |
|------|---|--|--|
| 2485 | <b>[Thin: HH]</b> Thin Paper: HH Environment Coefficient Adjustment   |  |  |
|      | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2453 and SP2457 are multiplied by these SP values. |  |  |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2485</b> | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2451 is multiplied by these SP values. |      |                                    |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Side:   | *ENG |                                    |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2501</b> | <b>[Thick 1: Bias]</b>   |      |                                     |
|             | Adjusts the DC voltage of the discharge plate for thick 1 paper. |      |                                     |
| 001         | Separation DC: Thick 1<br>(138 mm/s): 1st Side                   | *ENG | [0 to 5000 / <b>0</b> / 10 -V/step] |
| 002         | Separation DC: Thick 1<br>(138 mm/s): 2nd Side                   | *ENG |                                     |
| 003         | Separation DC: Fine: 1st<br>Side                                 | *ENG | Not used                            |
| 004         | Separation DC: Fine: 2nd   | *ENG |                                     |

|  |      |  |  |
|--|------|--|--|
|  | Side |  |  |
|--|------|--|--|

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2502</b> | <b>[Thick 1: Bias: BW]</b>   |      |                                     |
|             | Adjusts the current for the paper transfer roller for thick 1 paper in black-and-white mode. |      |                                     |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [0 to 130 / <b>12</b> / 1 -μA/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side   | *ENG | [0 to 130 / <b>12</b> / 1 -μA/step] |
| 003         | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                            |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG | Not used                            |

|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>2507</b> | <b>[Thick 1: Bias: FC]</b>  |      |                                     |
|             | Adjusts the current for the paper transfer roller for thick 1 paper in full color mode. |      |                                     |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [0 to 130 / <b>15</b> / 1 -μA/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG | [0 to 130 / <b>15</b> / 1 -μA/step] |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                            |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG | Not used                            |

|      |   |      |  |
|------|---|------|--|
| 2511 | <b>[Thick 1: Paper Size Correction]</b>   |      |  |
|      | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2502 and SP2507 are multiplied by these SP values. |      |  |
| 001  | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side: S1  | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size ≥ 297 mm (Paper width)          |
| 002  | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side: S1  | *ENG |  |
| 003  | Paper Transfer: FINE: 1st<br>Side: S1   | *ENG | Not used   |
| 004  | Paper Transfer: FINE:<br>2nd Side: S1   | *ENG |  |
| 005  | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side: S2  | *ENG | [100 to 600 / <b>150</b> / 5%/step]<br>297 mm ≥ S2 size ≥ 275 mm (Paper width) |
| 006  | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side: S2  | *ENG |  |
| 007  | Paper Transfer: FINE: 1st<br>Side: S2   | *ENG | Not used   |
| 008  | Paper Transfer: FINE:<br>2nd Side: S2   | *ENG |  |
| 009  | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side: S3  | *ENG | [100 to 600 / <b>240</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 010  | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side: S3  | *ENG |  |
| 011  | Paper Transfer: FINE: 1st<br>Side: S3   | *ENG | Not used   |
| 012  | Paper Transfer: FINE:<br>2nd Side: S3   | *ENG |  |
| 013  | Paper Transfer: Thick 1   | *ENG | [100 to 600 / <b>370</b> / 5%/step]  |




|     |  |      |   |
|-----|--|------|---|
|     | (77 mm/s): 1st Side: S4                            |      | 210 mm ≥ S4 size ≥ 148 mm (Paper width)                               |
| 014 | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side: S4 | *ENG |   |
| 015 | Paper Transfer: FINE: 1st<br>Side: S4              | *ENG | Not used  |
| 016 | Paper Transfer: FINE:<br>2nd Side: S4              | *ENG |   |
| 017 | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side: S5 | *ENG | [100 to 600 / <b>500</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width) |
| 018 | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side: S5 | *ENG |   |
| 019 | Paper Transfer: FINE: 1st<br>Side: S5              | *ENG | Not used  |
| 020 | Paper Transfer: FINE:<br>2nd Side: S5              | *ENG |   |

|      |  |      |                                   |
|------|--|------|-----------------------------------|
| 2521 | <b>[Thick 1: Leading Edge Correction]</b> Thick 1 Paper: Leading Edge Correction   |      |                                   |
|      | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2502 and SP2507 are multiplied by these SP values.<br><a href="#">↓ Note</a><br><ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2522.</li> </ul> |      |                                   |
| 001  | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002  | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side   | *ENG |                                   |
| 003  | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                          |
| 004  | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                   |

|      |   |      |                                   |
|------|---|------|-----------------------------------|
| 2521 | Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2501 is multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block; margin: 5px 0;">  Note </div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2522.</li> </ul> |      |                                   |
| 005  | Separation DC: Thick 1<br>(77 mm/s): 1st Page   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 006  | Separation DC: Thick 1<br>(77 mm/s): 2nd Page   | *ENG |                                   |
| 007  | Separation DC: Fine: 1st<br>Page  | *ENG | Not used                          |
| 008  | Separation DC: Fine: 2nd<br>Page  | *ENG |                                   |

|      |   |      |                                  |
|------|---|------|----------------------------------|
| 2522 | <b>[Thick 1: Switch Timing: Lead. Edge]</b>   |      |                                  |
|      | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. |      |                                  |
| 001  | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 002  | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG |                                  |
| 003  | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                         |
| 004  | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                  |
| 005  | Separation DC: Thick 1<br>(77 mm/s): 1st Page   | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 006  | Separation DC: Thick 1<br>(77 mm/s): 2nd Page   | *ENG |                                  |

|     |                               |      |          |
|-----|-------------------------------|------|----------|
| 007 | Separation DC: Fine: 1st Page | *ENG | Not used |
| 008 | Separation DC: Fine: 2nd Page | *ENG |          |

|      |  |      |                                   |
|------|--|------|-----------------------------------|
| 2523 | <b>[Thick 1: Trailing Edge Correction]</b> Thick 1 Paper: Trailing Edge Correction   |      |                                   |
|      | Adjusts the correction coefficient to the paper transfer roller current for the paper trailing edge in each mode. SP2502 and SP2507 are multiplied by these SP values.<br> Note <ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2524.</li> </ul> |      |                                   |
| 001  | Paper Transfer: Thick 1 (77 mm/s): 1st Side  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002  | Paper Transfer: Thick 1 (77 mm/s): 2nd Side  | *ENG |                                   |
| 003  | Paper Transfer: FINE: 1st Side   | *ENG | Not used                          |
| 004  | Paper Transfer: FINE: 2nd Side   | *ENG |                                   |

|      |  |      |                                    |
|------|--|------|------------------------------------|
| 2524 | <b>[Thick 1: Switch Timing: Trail. Edge]</b>   |      |                                    |
|      | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001  | Paper Transfer: Thick 1 (77 mm/s): 1st Side  | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |
| 002  | Paper Transfer: Thick 1 (77 mm/s): 2nd Side  | *ENG |                                    |
| 003  | Paper Transfer: FINE: 1st  | *ENG | Not used                           |

|     |                                   |      |  |
|-----|-----------------------------------|------|--|
|     | Side                              |      |  |
| 004 | Paper Transfer: FINE:<br>2nd Side | *ENG |  |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2531</b> | <b>[Thick 1: LL]</b> Thick 1 Paper: LL Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2502 and SP2507 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2531</b> | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2501 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 006         | Separation DC: Thick 1<br>(77 mm/s): 2nd Side:  | *ENG |                                    |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |  |  |  |
|-------------|--|--|--|
| <b>2532</b> | <b>[Thick 1: ML]</b> Thick 1 Paper: ML Environment Coefficient Adjustment  |  |  |
|             | Adjusts the environment coefficient for each mode. When the environment is |  |  |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
|             | detected as ML, SP2502 and SP2507 are multiplied by these SP values.  |      |                                    |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2532</b> | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2501 is multiplied by these SP values. |      |                                    |
| 005         | Separation DC: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 006         | Separation DC: Thick 1<br>(77 mm/s): 2nd Side:  | *ENG |                                    |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2533</b> | <b>[Thick 1: MM]</b> Thick 1 Paper: MM Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2502 and SP2507 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st   | *ENG | Not used                           |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
|             | Side  |      |                                    |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2533</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2501 is multiplied by these SP values. |      |                                    |
| 005         | Separation DC: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 006         | Separation DC: Thick 1<br>(77 mm/s): 2nd Side:  | *ENG |                                    |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2534</b> | <b>[Thick 1: MH]</b> Thick 1 Paper: MH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2502 and SP2507 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2534</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2501 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Thick 1  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |

|     |  |      |          |
|-----|--|------|----------|
|     | (77 mm/s): 1st Side                            |      |          |
| 006 | Separation DC: Thick 1<br>(77 mm/s): 2nd Side: | *ENG |          |
| 007 | Separation DC: FINE: 1st<br>Side               | *ENG |          |
| 008 | Separation DC: FINE:<br>2nd Side               | *ENG | Not used |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2535</b> | <b>[Thick 1: HH]</b> Thick 1 Paper: HH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2502 and SP2507 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2535</b> | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2501 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 006         | Separation DC: Thick 1<br>(77 mm/s): 2nd Side:  | *ENG |                                    |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:  | *ENG |                                    |

|  |          |  |  |
|--|----------|--|--|
|  | 2nd Side |  |  |
|--|----------|--|--|

|      |  |      |                                     |
|------|--|------|-------------------------------------|
| 2551 | <b>[Thick 2: Bias]</b>   |      |                                     |
|      | Adjusts the DC voltage of the discharge plate for thick 2 paper. |      |                                     |
| 001  | Separation DC: 1st Side  | *ENG | [0 to 5000 / <b>0</b> / 10 -V/step] |
| 002  | Separation DC: 2nd Side  | *ENG |                                     |

|      |  |      |                                     |
|------|--|------|-------------------------------------|
| 2553 | <b>[Thick 2: Bias: BW]</b>   |      |                                     |
|      | Adjusts the current for the paper transfer roller for thick 2 paper in black-and-white mode. |      |                                     |
| 001  | Paper Transfer: 1st Side   | *ENG | [0 to 130 / <b>12</b> / 1 -μA/step] |
| 002  | Paper Transfer: 2nd Side   | *ENG | [0 to 130 / <b>12</b> / 1 -μA/step] |

|      |   |      |                                     |
|------|---|------|-------------------------------------|
| 2558 | <b>[Thick 2: Bias: FC]</b>  |      |                                     |
|      | Adjusts the current for the paper transfer roller for thick 2 paper in full color mode. |      |                                     |
| 001  | Paper Transfer: 1st Side  | *ENG | [0 to 130 / <b>15</b> / 1 -μA/step] |
| 002  | Paper Transfer: 2nd Side  | *ENG | [0 to 130 / <b>15</b> / 1 -μA/step] |

|      |   |      |   |
|------|---|------|---|
| 2561 | <b>[Thick 2: Paper Size Correction]</b>   |      |   |
|      | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2553 and SP2558 are multiplied by these SP values. |      |   |
| 001  | Paper Transfer: 1st Side:<br>S1   | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size ≥ 297 mm (Paper width) |
| 002  | Paper Transfer: 2nd Side:<br>S1   | *ENG |   |




|     |                                 |      |   |
|-----|---------------------------------|------|---|
| 003 | Paper Transfer: 1st Side:<br>S2 | *ENG | [100 to 600 / <b>160</b> / 5%/step]     |
| 004 | Paper Transfer: 2nd Side:<br>S2 | *ENG | 297 mm ≥ S2 size ≥ 275 mm (Paper width) |
| 005 | Paper Transfer: 1st Side:<br>S3 | *ENG | [100 to 600 / <b>260</b> / 5%/step]     |
| 006 | Paper Transfer: 2nd Side:<br>S3 | *ENG | 275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 007 | Paper Transfer: 1st Side:<br>S4 | *ENG | [100 to 600 / <b>430</b> / 5%/step]     |
| 008 | Paper Transfer: 2nd Side:<br>S4 | *ENG | 210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 009 | Paper Transfer: 1st Side:<br>S5 | *ENG | [100 to 600 / <b>600</b> / 5%/step]     |
| 010 | Paper Transfer: 2nd Side:<br>S5 | *ENG | 148 mm ≥ S5 size (Paper width)          |

|      |   |      |                                   |
|------|---|------|-----------------------------------|
| 2571 | <b>[Thick 2: Leading Edge Correction]</b> Thick 2 Paper: Leading Edge Correction  |      |                                   |
|      | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2553 and SP2558 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">↓ Note</div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2572.</li> </ul> |      |                                   |
| 001  | Paper Transfer: 1st Side  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002  | Paper Transfer: 2nd Side  | *ENG |                                   |
| 2571 | Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2551 is multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">↓ Note</div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2572.</li> </ul>                   |      |                                   |
| 003  | Separation DC: 1st Page   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |

|     |                         |      |  |
|-----|-------------------------|------|--|
| 004 | Separation DC: 2nd Page | *ENG |  |
|-----|-------------------------|------|--|

|      |   |      |                                  |
|------|---|------|----------------------------------|
| 2572 | <b>[Thick 2: Switch Timing: Lead. Edge]</b>   |      |                                  |
|      | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. |      |                                  |
| 001  | Paper Transfer: 1st Side  | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 002  | Paper Transfer: 2nd Side  | *ENG |                                  |
| 003  | Separation DC: 1st Page   | *ENG |                                  |
| 004  | Separation DC: 2nd Page   | *ENG |                                  |

|      |   |      |                                   |
|------|---|------|-----------------------------------|
| 2573 | <b>[Thick 2: Trailing Edge Correction]</b> Thick 2 Paper: Trailing Edge Correction  |      |                                   |
|      | Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2553 and SP2558 are multiplied by these SP values.<br> Note<br><ul style="list-style-type: none"> <li>The paper trailing edge area can be adjusted with SP2574.</li> </ul> |      |                                   |
| 001  | Paper Transfer: 1st Side  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002  | Paper Transfer: 2nd Side  | *ENG |                                   |

|      |  |      |                                    |
|------|--|------|------------------------------------|
| 2574 | <b>[Thick 2: Switch Timing: Trail. Edge]</b>   |      |                                    |
|      | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001  | Paper Transfer: 1st Side   | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |
| 002  | Paper Transfer: 2nd Side   | *ENG |                                    |

|      |   |  |  |
|------|---|--|--|
| 2581 | <b>[Thick 2: LL]</b> Thick 2 Paper: LL Environment Coefficient Adjustment |  |  |
|------|---|--|--|

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2553 and SP2558 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: 1st Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 002         | Paper Transfer: 2nd Side  | *ENG |                                    |
| <b>2581</b> | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2551 is multiplied by these SP values.             |      |                                    |
| 003         | Separation DC: 1st Side   | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 004         | Separation DC: 2nd Side:  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2582</b> | <b>[Thick 2: ML]</b> Thick 2 Paper: ML Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2553 and SP2558 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: 1st Side  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002         | Paper Transfer: 2nd Side  | *ENG |                                    |
| <b>2582</b> | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2551 is multiplied by these SP values.             |      |                                    |
| 003         | Separation DC: 1st Page   | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 004         | Separation DC: 2nd Page   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2583</b> | <b>[Thick 2: MM]</b> Thick 2 Paper: MM Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2553 and SP2558 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: 1st Side  | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: 2nd Side  | *ENG |                                    |
| <b>2583</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2551 is multiplied by these SP values.             |      |                                    |

|     |                         |      |                                    |
|-----|-------------------------|------|------------------------------------|
| 003 | Separation DC: 1st Page | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 004 | Separation DC: 2nd Page | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2584</b> | <b>[Thick 2: MH]</b> Thick 2 Paper: MH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2553 and SP2558 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: 1st Side  | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 002         | Paper Transfer: 2nd Side  | *ENG |                                    |
| <b>2584</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2551 is multiplied by these SP values.             |      |                                    |
| 003         | Separation DC: 1st Page   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 004         | Separation DC: 2nd Page   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2585</b> | <b>[Thick 2: HH]</b> Thick 2 Paper: HH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2553 and SP2558 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: 1st Side  | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 002         | Paper Transfer: 2nd Side  | *ENG |                                    |
| <b>2585</b> | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2551 is multiplied by these SP values.             |      |                                    |
| 003         | Separation DC: 1st Page   | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 004         | Separation DC: 2nd Page   | *ENG |                                    |

|             |  |      |  |
|-------------|--|------|--|
| <b>2601</b> | <b>[OHP: Bias]</b>                                     |      |  |
|             | Adjusts the DC voltage of the discharge plate for OHP. |      |  |
| 001         | Separation DC  | *ENG | [0 to 5000 / <b>1500</b> / 10 –V/step] |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2603</b> | <b>[OHP: Bias: BW]</b>   |      |                                     |
|             | Adjusts the current for the paper transfer roller for OHP in black-and-white mode. |      |                                     |
| 001         | Paper Transfer   | *ENG | [0 to 200 / <b>12</b> / 1 –μA/step] |

|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>2608</b> | <b>[OHP: Bias: FC]</b>  |      |                                     |
|             | Adjusts the current for the paper transfer roller for OHP in full color mode. |      |                                     |
| 001         | Paper Transfer  | *ENG | [0 to 200 / <b>15</b> / 1 –μA/step] |

|             |   |      |  |
|-------------|---|------|--|
| <b>2611</b> | <b>[OHP: Paper Size Correction]</b>   |      |  |
|             | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2603 and SP2608 are multiplied by these SP values. |      |  |
| 001         | Paper Transfer: S1  | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size ≥ 297 mm (Paper width)          |
| 002         | Paper Transfer: S2  | *ENG | [100 to 600 / <b>150</b> / 5%/step]<br>297 mm ≥ S2 size ≥ 275 mm (Paper width) |
| 003         | Paper Transfer: S3  | *ENG | [100 to 600 / <b>240</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 004         | Paper Transfer: S4  | *ENG | [100 to 600 / <b>370</b> / 5%/step]<br>210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 005         | Paper Transfer: S5  | *ENG | [100 to 600 / <b>500</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width)          |

|      |  |               |                                   |
|------|--|---------------|-----------------------------------|
| 2621 | <b>[OHP: Leading Edge Correction]</b> OHP: Leading Edge Correction   |               |                                   |
|      | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2603 and SP2608 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2622.</li> </ul> |               |                                   |
| 001  | Paper Transfer   | *ENG          | [0 to 400 / <b>100</b> / 5%/step] |
| 2621 | Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2601 is multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2622.</li> </ul>                   |               |                                   |
|      | 002  | Separation DC | *ENG                              |

|      |   |      |                                  |
|------|---|------|----------------------------------|
| 2622 | <b>[OHP: Switch Timing: Lead. Edge]</b>   |      |                                  |
|      | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. |      |                                  |
| 001  | Paper Transfer  | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 002  | Separation DC   | *ENG |                                  |

|      |   |      |                                   |
|------|---|------|-----------------------------------|
| 2623 | <b>[OHP: Trailing Edge Correction]</b> OHP: Trailing Edge Correction  |      |                                   |
|      | Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2603 and SP2608 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> <li>▪ The paper trailing edge area can be adjusted with SP2624.</li> </ul> |      |                                   |
| 001  | Paper Transfer  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |

|      |   |  |  |
|------|---|--|--|
| 2624 | <b>[OHP: Switch Timing: Trail. Edge]</b>                                      |  |  |
|      | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge |  |  |

|     |  |      |                                    |
|-----|--|------|------------------------------------|
|     | plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001 | Paper Transfer   | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2631</b> | <b>[OHP: LL]</b> OHP: LL Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2603 and SP2608 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| <b>2631</b> | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2601 is multiplied by these SP values.             |      |                                    |
| 002         | Separation DC   | *ENG | [10 to 250 / <b>120</b> / 5%/step] |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2632</b> | <b>[OHP: ML]</b> OHP: ML Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2603 and SP2608 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| <b>2632</b> | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2601 is multiplied by these SP values.             |      |                                    |
| 002         | Separation DC   | *ENG | [10 to 250 / <b>110</b> / 5%/step] |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2633</b> | <b>[OHP: MM]</b> OHP: MM Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2603 and SP2608 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer  | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| <b>2633</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2601 is multiplied by these SP values.             |      |                                    |
| 002         | Separation DC   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |

|             |   |               |  |
|-------------|---|---------------|--|
| <b>2634</b> | <b>[OHP: MH]</b> OHP: MH Environment Coefficient Adjustment   |               |  |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2603 and SP2608 are multiplied by these SP values. |               |  |
| 001         | Paper Transfer  | *ENG          | [10 to 250 / <b>110</b> / 5%/step]     |
| <b>2634</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2601 is multiplied by these SP values.             |               |  |
|             | 002   | Separation DC | *ENG [10 to 250 / <b>90</b> / 5%/step] |

|             |   |               |  |
|-------------|---|---------------|--|
| <b>2635</b> | <b>[OHP: HH]</b> OHP Paper: HH Environment Coefficient Adjustment   |               |  |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2603 and SP2608 are multiplied by these SP values. |               |  |
| 001         | Paper Transfer  | *ENG          | [10 to 250 / <b>120</b> / 5%/step]     |
| <b>2635</b> | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2601 is multiplied by these SP values.             |               |  |
|             | 002   | Separation DC | *ENG [10 to 250 / <b>80</b> / 5%/step] |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2650</b> | <b>[Thick 3: Bias]</b>   |      |                                     |
|             | Adjusts the DC voltage of the discharge plate for thick paper 3. |      |                                     |
| 001         | Separation DC: Thick 3:<br>1st Side                              | *ENG | [0 to 5000 / <b>0</b> / 10 –V/step] |
| 002         | Separation DC: Thick 3:<br>2nd Side                              | *ENG |                                     |

|             |  |  |  |
|-------------|--|--|--|
| <b>2651</b> | <b>[Thick 3: Bias: BW]</b>   |  |  |
|             | Adjusts the current for the paper transfer roller for thick paper 3 in black-and-white mode. |  |  |



|     |                                      |      |                                     |
|-----|--------------------------------------|------|-------------------------------------|
| 001 | Paper Transfer: Thick 3:<br>1st Side | *ENG | [0 to 130 / <b>12</b> / 1 -μA/step] |
| 002 | Paper Transfer: Thick 3:<br>2nd Side | *ENG | [0 to 130 / <b>12</b> / 1 -μA/step] |

|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>2652</b> | <b>[Thick 3: Bias: FC]</b>  |      |                                     |
|             | Adjusts the current for the paper transfer roller for thick paper 3 in full color mode. |      |                                     |
| 001         | Paper Transfer: Thick 3:<br>1st Side  | *ENG | [0 to 130 / <b>15</b> / 1 -μA/step] |
| 002         | Paper Transfer: Thick 3:<br>2nd Side  | *ENG | [0 to 130 / <b>15</b> / 1 -μA/step] |

|             |   |      |  |
|-------------|---|------|--|
| <b>2653</b> | <b>[Thick 3: Paper Size Correction]</b>   |      |  |
|             | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2651 and SP2652 are multiplied by these SP values. |      |  |
| 001         | Paper Transfer: Thick 3:<br>1st Side: S1  | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size ≥ 297 mm (Paper width)          |
| 002         | Paper Transfer: Thick 3:<br>1st Side: S2  | *ENG | [100 to 600 / <b>160</b> / 5%/step]<br>297 mm ≥ S2 size ≥ 275 mm (Paper width) |
| 003         | Paper Transfer: Thick 3:<br>1st Side: S3  | *ENG | [100 to 600 / <b>260</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 004         | Paper Transfer: Thick 3:<br>1st Side: S4  | *ENG | [100 to 600 / <b>430</b> / 5%/step]<br>210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 005         | Paper Transfer: Thick 3:<br>1st Side: S5  | *ENG | [100 to 600 / <b>600</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width)          |
| 006         | Paper Transfer: Thick 3:<br>2nd Side: S1  | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size ≥ 297 mm (Paper width)          |

|     |  |      |  |
|-----|--|------|--|
| 007 | Paper Transfer: Thick 3:<br>2nd Side: S2 | *ENG | [100 to 600 / <b>160</b> / 5%/step]<br>297 mm ≥ S2 size ≥ 275 mm (Paper width) |
| 008 | Paper Transfer: Thick 3:<br>2nd Side: S3 | *ENG | [100 to 600 / <b>260</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 009 | Paper Transfer: Thick 3:<br>2nd Side: S4 | *ENG | [100 to 600 / <b>430</b> / 5%/step]<br>210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 010 | Paper Transfer: Thick 3:<br>2nd Side: S5 | *ENG | [100 to 600 / <b>600</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width)          |

|      |   |      |                                   |
|------|---|------|-----------------------------------|
| 2654 | <b>[Thick 3: Leading Edge Correction]</b> Thick 3 Paper: Leading Edge Correction  |      |                                   |
|      | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2651 and SP2652 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">↓ Note</div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2655.</li> </ul> |      |                                   |
| 001  | Paper Transfer: Thick 3:<br>1st Side  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002  | Separation DC: Thick 3:<br>1st Page   | *ENG |                                   |
| 2654 | Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2650 is multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">↓ Note</div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2655.</li> </ul>                   |      |                                   |
| 003  | Paper Transfer: Thick 3:<br>2nd Side  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 004  | Separation DC: Thick 3:<br>2nd Page   | *ENG |                                   |

|             |   |      |                                  |
|-------------|---|------|----------------------------------|
|             | <b>[Thick 3: Switch Timing: Lead. Edge]</b>   |      |                                  |
| <b>2655</b> | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. |      |                                  |
| 001         | Paper Transfer: Thick 3:<br>1st Side  | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 002         | Separation DC: Thick 3:<br>1st Page   | *ENG |                                  |
| 003         | Paper Transfer: Thick 3:<br>2nd Side  | *ENG |                                  |
| 004         | Separation DC: Thick 3:<br>2nd Page   | *ENG |                                  |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
|             | <b>[Thick 3: Trailing Edge Correction]</b> Thick 3 Paper: Trailing Edge Correction  |      |                                   |
| <b>2656</b> | Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2651 and SP2652 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> <li>▪ The paper trailing edge area can be adjusted with SP2657.</li> </ul> |      |                                   |
| 001         | Paper Transfer: Thick 3:<br>1st Side  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Thick 3:<br>2nd Side  | *ENG |                                   |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
|             | <b>[Thick 3: Switch Timing: Trail. Edge]</b>   |      |                                    |
| <b>2657</b> | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001         | Paper Transfer: Thick 3:<br>1st Side   | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |

|     |                                      |      |  |
|-----|--------------------------------------|------|--|
| 002 | Paper Transfer: Thick 3:<br>2nd Side | *ENG |  |
|-----|--------------------------------------|------|--|

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2658</b> | <b>[Thick 3: LL]</b> Thick 3 Paper: LL Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2651 and SP2652 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 3:<br>1st Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 002         | Separation DC: Thick 3:<br>1st Side   | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| <b>2658</b> | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2650 is multiplied by these SP values.             |      |                                    |
| 003         | Paper Transfer: Thick 3:<br>2nd Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 004         | Separation DC: Thick 3:<br>2nd Side:  | *ENG | [10 to 250 / <b>120</b> / 5%/step] |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2659</b> | <b>[Thick 3: ML]</b> Thick 3 Paper: ML Environment Coefficient Adjustment  |      |                                    |
|             | Adjusts the environment coefficient for each mode When the environment is detected as ML, SP2651 and SP2652 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 3:<br>1st Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002         | Separation DC: Thick 3:<br>1st Side  | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| <b>2659</b> | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2650 is multiplied by these SP values.            |      |                                    |
| 003         | Paper Transfer: Thick 3:<br>2nd Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |

|     |                                      |      |                                    |
|-----|--------------------------------------|------|------------------------------------|
| 004 | Separation DC: Thick 3:<br>2nd Side: | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
|-----|--------------------------------------|------|------------------------------------|

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2660</b> | <b>[Thick 3: MM]</b> Thick 3 Paper: MM Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2651 and SP2652 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 3:<br>1st Side  | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 002         | Separation DC: Thick 3:<br>1st Side   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| <b>2660</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2650 is multiplied by these SP values.             |      |                                    |
| 003         | Paper Transfer: Thick 3:<br>2nd Side  | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 004         | Separation DC: Thick 3:<br>2nd Side:  | *ENG | [10 to 250 / <b>100</b> / 5%/step] |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2661</b> | <b>[Thick 3: MH]</b> Thick 3 Paper: MH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2651 and SP2652 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 3:<br>1st Side  | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 002         | Separation DC: Thick 3:<br>1st Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| <b>2661</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2650 is multiplied by these SP values.             |      |                                    |
| 003         | Paper Transfer: Thick 3:<br>2nd Side  | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 004         | Separation DC: Thick 3:<br>2nd Side:  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2662</b> | <b>[Thick 3: HH]</b> Thick 3 Paper: HH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2651 and SP2652 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 3:<br>1st Side  | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 002         | Separation DC: Thick 3:<br>1st Side   | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| <b>2662</b> | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2650 is multiplied by these SP values.             |      |                                    |
| 003         | Paper Transfer: Thick 3:<br>2nd Side  | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 004         | Separation DC: Thick 3:<br>2nd Side:  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |

|             |  |      |  |
|-------------|--|------|--|
| <b>2751</b> | <b>[Special 1: Bias]</b>   |      |  |
|             | Adjusts the DC voltage of the discharge plate for special paper 1. |      |  |
| 001         | Separation DC: Plain<br>(138 mm/s): 1st Side                       | *ENG | [0 to 5000 / <b>1000</b> / 10 –V/step] |
| 002         | Separation DC: Plain<br>(138 mm/s): 2nd Side                       | *ENG | [0 to 5000 / <b>1500</b> / 10 –V/step] |
| 003         | Separation DC: Fine: 1st<br>Side                                   | *ENG | Not used                               |
| 004         | Separation DC: Fine: 2nd<br>Side                                   | *ENG |  |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2753</b> | <b>[Special 1: Bias: BW]</b>   |      |                                     |
|             | Adjusts the current for the paper transfer roller for special paper 1 in black-and-white mode. |      |                                     |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side  | *ENG | [0 to 130 / <b>20</b> / 1 –μA/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side  | *ENG |                                     |
| 003         | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                            |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                     |


|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>2757</b> | <b>[Special 1: Bias: FC]</b>  |      |                                     |
|             | Adjusts the current for the paper transfer roller for special paper 1 in full color mode. |      |                                     |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 130 / <b>30</b> / 1 –μA/step] |


|     |   |      |          |
|-----|---|------|----------|
| 002 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side | *ENG | Not used |
| 003 | Paper Transfer: FINE: 1st<br>Side             | *ENG |          |
| 004 | Paper Transfer: FINE:<br>2nd Side             | *ENG |          |

|      |   |      |  |
|------|---|------|--|
| 2761 | <b>[Special 1: Paper Size Correction]</b>   |      |  |
|      | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2753 and SP2757 are multiplied by these SP values. |      |  |
| 001  | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S1   | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size $\geq$ 297 mm (Paper width)               |
| 002  | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S1   | *ENG |  |
| 003  | Paper Transfer: FINE: 1st<br>Side: S1   | *ENG | Not used   |
| 004  | Paper Transfer: FINE:<br>2nd Side: S1   | *ENG |  |
| 005  | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S2   | *ENG | [100 to 600 / <b>130</b> / 5%/step]<br>297 mm $\geq$ S2 size $\geq$ 275 mm (Paper width) |
| 006  | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S2   | *ENG |  |
| 007  | Paper Transfer: FINE: 1st<br>Side: S2   | *ENG | Not used   |
| 008  | Paper Transfer: FINE:<br>2nd Side: S2   | *ENG |  |
| 009  | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S3   | *ENG | [100 to 600 / <b>160</b> / 5%/step]<br>275 mm $\geq$ S3 size $\geq$ 210 mm (Paper width) |



|     |   |      |  |
|-----|---|------|--|
| 010 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S3 | *ENG | [100 to 600 / <b>200</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 011 | Paper Transfer: FINE: 1st<br>Side: S3             | *ENG | Not used   |
| 012 | Paper Transfer: FINE:<br>2nd Side: S3             | *ENG |  |
| 013 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S4 | *ENG | [100 to 600 / <b>220</b> / 5%/step]<br>210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 014 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S4 | *ENG |  |
| 015 | Paper Transfer: FINE: 1st<br>Side: S4             | *ENG | Not used   |
| 016 | Paper Transfer: FINE:<br>2nd Side: S4             | *ENG |  |
| 017 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S5 | *ENG | [100 to 600 / <b>240</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width)          |
| 018 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S5 | *ENG |  |
| 019 | Paper Transfer: FINE: 1st<br>Side: S5             | *ENG | Not used   |
| 020 | Paper Transfer: FINE:<br>2nd Side: S5             | *ENG |  |

|      |   |
|------|---|
| 2771 | <b>[Special 1: Leading Edge Correction]</b> Special 1 Paper: Leading Edge Correction  |
|      | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2753 and SP2757 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note         </div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2772.</li> </ul> |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG | [0 to 400 / <b>150</b> / 5%/step] |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                          |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                   |
| <b>2771</b> | Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2751 is multiplied by these SP values.<br> Note <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2772.</li> </ul> |      |                                   |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Page  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Page  | *ENG |                                   |
| 007         | Separation DC: Fine: 1st<br>Page  | *ENG | Not used                          |
| 008         | Separation DC: Fine: 2nd<br>Page  | *ENG |                                   |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2772</b> | <b>[Special 1: Switch Timing: Lead. Edge]</b>   |      |                                   |
|             | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. |      |                                   |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 30 / <b>0</b> / 2 mm/step]  |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG | [0 to 30 / <b>20</b> / 2 mm/step] |

|     |   |      |                           |
|-----|---|------|---------------------------|
| 003 | Paper Transfer: FINE: 1st Side            | *ENG | Not used                  |
| 004 | Paper Transfer: FINE: 2nd Side            | *ENG |                           |
| 005 | Separation DC: Plain (138 mm/s): 1st Page | *ENG | [0 to 30 / 0 / 2 mm/step] |
| 006 | Separation DC: Plain (138 mm/s): 2nd Page | *ENG |                           |
| 007 | Separation DC: Fine: 1st Page             | *ENG | Not used                  |
| 008 | Separation DC: Fine: 2nd Page             | *ENG |                           |

|             |  |      |                            |
|-------------|--|------|----------------------------|
| <b>2773</b> | <b>[Special 1: Trailing Edge Correction]</b> Special 1 Paper: Trailing Edge Correction   |      |                            |
|             | Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2753 and SP2757 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;"> <span style="color: blue;">↓</span> Note </div> <ul style="list-style-type: none"> <li>▪ The paper trailing edge area can be adjusted with SP2774.</li> </ul> |      |                            |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side   | *ENG | [0 to 400 / 100 / 5%/step] |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side   | *ENG |                            |
| 003         | Paper Transfer: FINE: 1st Side   | *ENG | Not used                   |
| 004         | Paper Transfer: FINE: 2nd Side   | *ENG |                            |

|             |  |  |  |
|-------------|--|--|--|
| <b>2774</b> | <b>[Special 1: Switch Timing: Trail. Edge]</b> |  |  |
|-------------|--|--|--|

|     |  |      |                                    |
|-----|--|------|------------------------------------|
|     | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001 | Paper Transfer: Plain (138 mm/s): 1st Side   | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |
| 002 | Paper Transfer: Plain (138 mm/s): 2nd Side   | *ENG |                                    |
| 003 | Paper Transfer: FINE: 1st Side   | *ENG | Not used                           |
| 004 | Paper Transfer: FINE: 2nd Side   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2781</b> | <b>[Special 1: LL]</b> Special 1 Paper: LL Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2753 and SP2757 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                    |
| <b>2781</b> | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2751 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Plain (138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Plain (138 mm/s): 2nd Side:  | *ENG |                                    |

|     |                               |      |          |
|-----|-------------------------------|------|----------|
| 007 | Separation DC: FINE: 1st Side | *ENG | Not used |
| 008 | Separation DC: FINE: 2nd Side | *ENG |          |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2782</b> | <b>[Special 1: ML]</b> Special 1 Paper: ML Environment Coefficient Adjustment  |      |                                    |
|             | Adjusts the environment coefficient for each mode When the environment is detected as ML, SP2753 and SP2757 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side   | *ENG |                                    |
| <b>2782</b> | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2751 is multiplied by these SP values.            |      |                                    |
| 005         | Separation DC: Plain (138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Plain (138 mm/s): 2nd Side:   | *ENG | [10 to 250 / <b>170</b> / 5%/step] |
| 007         | Separation DC: FINE: 1st Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE: 2nd Side  | *ENG |                                    |

|             |   |  |  |
|-------------|---|--|--|
| <b>2783</b> | <b>[Special 1: MM]</b> Special 1 Paper: MM Environment Coefficient Adjustment |  |  |
|-------------|---|--|--|

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2753 and SP2757 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| <b>2783</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2751 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Side:   | *ENG | [10 to 250 / <b>140</b> / 5%/step] |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2784</b> | <b>[Special 1: MH]</b> Special 1 Paper: MH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2753 and SP2757 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                    |
| <b>2784</b> | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2751 is multiplied by these SP values. |      |                                    |
| 005         | Separation DC: Plain (138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>150</b> / 5%/step] |
| 006         | Separation DC: Plain (138 mm/s): 2nd Side:  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 007         | Separation DC: FINE: 1st Side   | *ENG | Not used                           |
| 008         | Separation DC: FINE: 2nd Side   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2785</b> | <b>[Special 1: HH]</b> Special 1 Paper: HH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2753 and SP2757 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                    |
| <b>2785</b> | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2751 is multiplied by these SP values.             |      |                                    |

|     |   |      |                                   |
|-----|---|------|-----------------------------------|
| 005 | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step] |
| 006 | Separation DC: Plain<br>(138 mm/s): 2nd Side: | *ENG |                                   |
| 007 | Separation DC: FINE: 1st<br>Side              | *ENG | Not used                          |
| 008 | Separation DC: FINE:<br>2nd Side              | *ENG |                                   |

|             |  |      |  |
|-------------|--|------|--|
| <b>2801</b> | <b>[Special 2: Bias]</b>   |      |  |
|             | Adjusts the DC voltage of the discharge plate for special paper 2. |      |  |
| 001         | Separation DC: Plain<br>(138 mm/s): 1st Side                       | *ENG | [0 to 5000 / <b>1000</b> / 10 –V/step] |
| 002         | Separation DC: Plain<br>(138 mm/s): 2nd Side                       | *ENG | [0 to 5000 / <b>1500</b> / 10 –V/step] |
| 003         | Separation DC: Fine: 1st<br>Side                                   | *ENG | Not used                               |
| 004         | Separation DC: Fine: 2nd<br>Side                                   | *ENG |  |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2803</b> | <b>[Special 2: Bias: BW]</b>   |      |                                     |
|             | Adjusts the current for the paper transfer roller for special paper 2 in black-and-white mode. |      |                                     |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side  | *ENG | [0 to 130 / <b>20</b> / 1 –μA/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side  | *ENG |                                     |
| 003         | Paper Transfer: FINE: 1st  | *ENG | Not used                            |



|     |                                   |      |  |
|-----|-----------------------------------|------|--|
|     | Side                              |      |  |
| 004 | Paper Transfer: FINE:<br>2nd Side | *ENG |  |

|      |   |      |   |
|------|---|------|---|
| 2807 | <b>[Special 2: Bias: FC]</b>  |      |   |
|      | Adjusts the current for the paper transfer roller for special paper 2 in full color mode. |      |   |
| 001  | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 130 / <b>30</b> / 1 $\mu$ A/step] |
| 002  | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |   |
| 003  | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                                |
| 004  | Paper Transfer: FINE:<br>2nd Side   | *ENG |   |

|      |   |      |  |
|------|---|------|--|
| 2811 | <b>[Special 2: Paper Size Correction]</b>   |      |  |
|      | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2803 and SP2807 are multiplied by these SP values. |      |  |
| 001  | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S1   | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size $\geq$ 297 mm (Paper width) |
| 002  | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S1   | *ENG |  |
| 003  | Paper Transfer: FINE: 1st<br>Side: S1   | *ENG | Not used   |
| 004  | Paper Transfer: FINE:<br>2nd Side: S1   | *ENG |  |
| 005  | Paper Transfer: Plain   | *ENG | [100 to 600 / <b>130</b> / 5%/step]  |


|     |   |      |  |
|-----|---|------|--|
|     | (138 mm/s): 1st Side: S2                          |      |  |
| 006 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S2 | *ENG | 297 mm ≥ S2 size ≥ 275 mm (Paper width)  |
| 007 | Paper Transfer: FINE: 1st<br>Side: S2             | *ENG | Not used   |
| 008 | Paper Transfer: FINE:<br>2nd Side: S2             | *ENG |  |
| 009 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S3 | *ENG | [100 to 600 / <b>160</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 010 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S3 | *ENG | [100 to 600 / <b>200</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 011 | Paper Transfer: FINE: 1st<br>Side: S3             | *ENG | Not used   |
| 012 | Paper Transfer: FINE:<br>2nd Side: S3             | *ENG |  |
| 013 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S4 | *ENG | [100 to 600 / <b>220</b> / 5%/step]<br>210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 014 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S4 | *ENG |  |
| 015 | Paper Transfer: FINE: 1st<br>Side: S4             | *ENG | Not used   |
| 016 | Paper Transfer: FINE:<br>2nd Side: S4             | *ENG |  |
| 017 | Paper Transfer: Plain<br>(138 mm/s): 1st Side: S5 | *ENG | [100 to 600 / <b>240</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width)          |
| 018 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side: S5 | *ENG |  |
| 019 | Paper Transfer: FINE: 1st                         | *ENG | Not used   |


|     |                                       |      |  |
|-----|---------------------------------------|------|--|
|     | Side: S5                              |      |  |
| 020 | Paper Transfer: FINE:<br>2nd Side: S5 | *ENG |  |

|             |  |      |                                       |
|-------------|--|------|---------------------------------------|
| <b>2814</b> | <b>[Gear Phase Adjustment]</b>                                     |      |                                       |
| 001         | Bk - M Gear  | *ENG | [-180 to 180 / <b>0</b> / 5 deg/step] |
|             | Adjusts the phases of the black drum gear and the color drum gear. |      |                                       |

|             |                               |      |                                       |
|-------------|-------------------------------|------|---------------------------------------|
| <b>2815</b> | <b>[Line Speed Hold Time]</b> |      |                                       |
| 001         | 20 from 77mm/sec              | *ENG | [5 to 200 / <b>100</b> / 5 msec/step] |
|             | <b>DFU</b>                    |      |                                       |

|             |                                   |      |                                       |
|-------------|-----------------------------------|------|---------------------------------------|
| <b>2816</b> | <b>[Start-up Time Adjustment]</b> |      |                                       |
|             | <b>DFU</b>                        |      |                                       |
| 001         | Low Speed ( to 77mm)              | *ENG | [5 to 200 / <b>100</b> / 5 msec/step] |
| 002         | High Speed (77mm from )           | *ENG | [5 to 200 / <b>50</b> / 5 msec/step]  |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2821</b> | <b>[Special 2: Leading Edge Correction]</b> Special 2 Paper: Leading Edge Correction  |      |                                   |
|             | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2803 and SP2807 are multiplied by these SP values.  |      |                                   |
|             | <div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2822.</li> </ul> |      |                                   |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG | [0 to 400 / <b>150</b> / 5%/step] |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                          |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                   |
| <b>2821</b> | Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2801 is multiplied by these SP values.<br> Note <ul style="list-style-type: none"> <li>The paper leading edge area can be adjusted with SP2822.</li> </ul> |      |                                   |
| 005         | Separation DC: Plain (138 mm/s): 1st Page   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 006         | Separation DC: Plain (138 mm/s): 2nd Page   | *ENG |                                   |
| 007         | Separation DC: Fine: 1st Page   | *ENG | Not used                          |
| 008         | Separation DC: Fine: 2nd Page   | *ENG |                                   |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2822</b> | <b>[Special 2: Switch Timing: Lead. Edge]</b>   |      |                                   |
|             | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge plate at the paper leading edge between the erase margin area and the image area. |      |                                   |
| 001         | Paper Transfer: Plain (138 mm/s): 1st Side  | *ENG | [0 to 30 / <b>0</b> / 2 mm/step]  |
| 002         | Paper Transfer: Plain (138 mm/s): 2nd Side  | *ENG | [0 to 30 / <b>20</b> / 2 mm/step] |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                          |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                   |

|     |  |      |                                  |
|-----|--|------|----------------------------------|
| 005 | Separation DC: Plain<br>(138 mm/s): 1st Page | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 006 | Separation DC: Plain<br>(138 mm/s): 2nd Page | *ENG |                                  |
| 007 | Separation DC: Fine: 1st<br>Page             | *ENG | Not used                         |
| 008 | Separation DC: Fine: 2nd<br>Page             | *ENG |                                  |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2823</b> | <b>[Special 2: Trailing Edge Correction]</b> Special 2 Paper: Trailing Edge Correction  |      |                                   |
|             | Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2803 and SP2807 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block; margin: 5px 0;"> <span style="color: blue;">↓</span> Note </div> <ul style="list-style-type: none"> <li>▪ The paper trailing edge area can be adjusted with SP2824.</li> </ul> |      |                                   |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                   |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                          |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                   |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2824</b> | <b>[Special 2: Switch Timing: Trail. Edge]</b>   |      |                                    |
|             | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001         | Paper Transfer: Plain  | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |

|     |   |      |          |
|-----|---|------|----------|
|     | (138 mm/s): 1st Side                          |      | Not used |
| 002 | Paper Transfer: Plain<br>(138 mm/s): 2nd Side | *ENG |          |
| 003 | Paper Transfer: FINE: 1st<br>Side             | *ENG |          |
| 004 | Paper Transfer: FINE:<br>2nd Side             | *ENG |          |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2831</b> | <b>[Special 2: LL] Special 2 Paper: LL Environment Coefficient Adjustment</b>   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2803 and SP2807 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| 005-008     | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2801 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Side:   | *ENG |                                    |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:  | *ENG |                                    |

|  |          |  |  |
|--|----------|--|--|
|  | 2nd Side |  |  |
|--|----------|--|--|

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2832</b> | <b>[Special 2: ML]</b> Special 2 Paper: ML Environment Coefficient Adjustment  |      |                                    |
|             | Adjusts the environment coefficient for each mode When the environment is detected as ML, SP2803 and SP2807 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                    |
| 005-008     | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2801 is multiplied by these SP values.            |      |                                    |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006         | Separation DC: Plain<br>(138 mm/s): 2nd Side:  | *ENG | [10 to 250 / <b>170</b> / 5%/step] |
| 007         | Separation DC: FINE: 1st Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2833</b> | <b>[Special 2: MM]</b> Special 2 Paper: MM Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2803 and SP2807 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |

|         |   |      |                                    |
|---------|---|------|------------------------------------|
|         | (138 mm/s): 1st Side  |      |                                    |
| 002     | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003     | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004     | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| 005-008 | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2801 is multiplied by these SP values. |      |                                    |
| 005     | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>200</b> / 5%/step] |
| 006     | Separation DC: Plain<br>(138 mm/s): 2nd Side:   | *ENG | [10 to 250 / <b>140</b> / 5%/step] |
| 007     | Separation DC: FINE: 1st Side   | *ENG | Not used                           |
| 008     | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2834</b> | <b>[Special 2: MH]</b> Special 2 Paper: MH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2803 and SP2807 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:   | *ENG |                                    |



|         |   |      |                                    |
|---------|---|------|------------------------------------|
|         | 2nd Side  |      |                                    |
| 005-008 | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2801 is multiplied by these SP values. |      |                                    |
| 005     | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>150</b> / 5%/step] |
| 006     | Separation DC: Plain<br>(138 mm/s): 2nd Side:   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 007     | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008     | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2835</b> | <b>[Special 2: HH] Special 2 Paper: HH Environment Coefficient Adjustment</b>   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2803 and SP2807 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Plain<br>(138 mm/s): 1st Side   | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 002         | Paper Transfer: Plain<br>(138 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| 005-008     | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2801 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Plain<br>(138 mm/s): 1st Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step]  |
| 006         | Separation DC: Plain  | *ENG |                                    |

|     |                               |      |          |
|-----|-------------------------------|------|----------|
|     | (138 mm/s): 2nd Side:         |      |          |
| 007 | Separation DC: FINE: 1st Side | *ENG | Not used |
| 008 | Separation DC: FINE: 2nd Side | *ENG |          |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2851</b> | <b>[Special 3: Bias]</b>   |      |                                     |
|             | Adjusts the DC voltage of the discharge plate for special paper 3. |      |                                     |
| 001         | Separation DC: Thick 1<br>(77 mm/s): 1st Side                      | *ENG | [0 to 5000 / <b>0</b> / 10 –V/step] |
| 002         | Separation DC: Thick 1<br>(77 mm/s): 2nd Side                      | *ENG |                                     |
| 003         | Separation DC: Fine: 1st Side                                      | *ENG | Not used                            |
| 004         | Separation DC: Fine: 2nd Side                                      | *ENG |                                     |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>2852</b> | <b>[Special 3: Bias: BW]</b>   |      |                                     |
|             | Adjusts the current for the paper transfer roller for special paper 3 in black-and-white mode. |      |                                     |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [0 to 130 / <b>12</b> / 1 –μA/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side   | *ENG |                                     |
| 003         | Paper Transfer: FINE: 1st Side   | *ENG | Not used                            |
| 004         | Paper Transfer: FINE: 2nd Side   | *ENG |                                     |


|             |   |      |   |
|-------------|---|------|---|
| <b>2857</b> | <b>[Special 3: Bias: FC]</b>  |      |   |
|             | Adjusts the current for the paper transfer roller for special paper 3 in full color mode. |      |   |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [0 to 130 / <b>15</b> / 1 $\mu$ A/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG |   |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                                |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |   |

|             |   |      |  |
|-------------|---|------|--|
| <b>2861</b> | <b>[Special 3: Paper Size Correction]</b>   |      |  |
|             | Adjusts the size correction coefficient for the paper transfer roller current for each paper size. SP2852 and SP2857 are multiplied by these SP values. |      |  |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side: S1  | *ENG | [100 to 600 / <b>100</b> / 5%/step]<br>S1 size $\geq$ 297 mm (Paper width)               |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side: S1  | *ENG |  |
| 003         | Paper Transfer: FINE: 1st<br>Side: S1   | *ENG | Not used   |
| 004         | Paper Transfer: FINE:<br>2nd Side: S1   | *ENG |  |
| 005         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side: S2  | *ENG | [100 to 600 / <b>150</b> / 5%/step]<br>297 mm $\geq$ S2 size $\geq$ 275 mm (Paper width) |
| 006         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side: S2  | *ENG |  |

|     |   |      |  |
|-----|---|------|--|
| 007 | Paper Transfer: FINE: 1st Side: S2              | *ENG | Not used   |
| 008 | Paper Transfer: FINE: 2nd Side: S2              | *ENG |  |
| 009 | Paper Transfer: Thick 1 (77 mm/s): 1st Side: S3 | *ENG | [100 to 600 / <b>240</b> / 5%/step]<br>275 mm ≥ S3 size ≥ 210 mm (Paper width) |
| 010 | Paper Transfer: Thick 1 (77 mm/s): 2nd Side: S3 | *ENG |  |
| 011 | Paper Transfer: FINE: 1st Side: S3              | *ENG | Not used   |
| 012 | Paper Transfer: FINE: 2nd Side: S3              | *ENG |  |
| 013 | Paper Transfer: Thick 1 (77 mm/s): 1st Side: S4 | *ENG | [100 to 600 / <b>370</b> / 5%/step]<br>210 mm ≥ S4 size ≥ 148 mm (Paper width) |
| 014 | Paper Transfer: Thick 1 (77 mm/s): 2nd Side: S4 | *ENG |  |
| 015 | Paper Transfer: FINE: 1st Side: S4              | *ENG | Not used   |
| 016 | Paper Transfer: FINE: 2nd Side: S4              | *ENG |  |
| 017 | Paper Transfer: Thick 1 (77 mm/s): 1st Side: S5 | *ENG | [100 to 600 / <b>500</b> / 5%/step]<br>148 mm ≥ S5 size (Paper width)          |
| 018 | Paper Transfer: Thick 1 (77 mm/s): 2nd Side: S5 | *ENG |  |
| 019 | Paper Transfer: FINE: 1st Side: S5              | *ENG | Not used   |
| 020 | Paper Transfer: FINE: 2nd Side: S5              | *ENG |  |

|             |  |      |                                   |
|-------------|--|------|-----------------------------------|
|             | <b>[Special 3: Leading Edge Correction]</b> Special 3 Paper: Leading Edge Correction   |      |                                   |
| <b>2871</b> | Adjusts the correction to the paper transfer roller current at the paper leading edge in each mode. SP2852 and SP2857 are multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2872.</li> </ul> |      |                                   |
| 001         | Paper Transfer: Thick 1 (77 mm/s): 1st Side  | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1 (77 mm/s): 2nd Side  | *ENG |                                   |
| 003         | Paper Transfer: FINE: 1st Side   | *ENG | Not used                          |
| 004         | Paper Transfer: FINE: 2nd Side   | *ENG |                                   |
| 005-008     | Adjusts the correction to the discharge plate current at the paper leading edge in each mode. SP2851 is multiplied by these SP values.<br><div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> <li>▪ The paper leading edge area can be adjusted with SP2872.</li> </ul>                   |      |                                   |
| 005         | Separation DC: Thick 1 (77 mm/s): 1st Page   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 006         | Separation DC: Thick 1 (77 mm/s): 2nd Page   | *ENG |                                   |
| 007         | Separation DC: Fine: 1st Page  | *ENG | Not used                          |
| 008         | Separation DC: Fine: 2nd Page  | *ENG |                                   |
| <b>2872</b> | <b>[Special 3: Switch Timing: Lead. Edge]</b>  |      |                                   |
|             | Adjusts the bias/ voltage switch timing of the paper transfer roller/ discharge  |      |                                   |

|     |   |      |                                  |
|-----|---|------|----------------------------------|
|     | plate at the paper leading edge between the erase margin area and the image area. |      |                                  |
| 001 | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side                                    | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 002 | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side                                    | *ENG |                                  |
| 003 | Paper Transfer: FINE: 1st Side  | *ENG | Not used                         |
| 004 | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                  |
| 005 | Separation DC: Thick 1<br>(77 mm/s): 1st Page                                     | *ENG | [0 to 30 / <b>0</b> / 2 mm/step] |
| 006 | Separation DC: Thick 1<br>(77 mm/s): 2nd Page                                     | *ENG |                                  |
| 007 | Separation DC: Fine: 1st Page   | *ENG | Not used                         |
| 008 | Separation DC: Fine: 2nd Page   | *ENG |                                  |

|             |  |      |                                   |
|-------------|--|------|-----------------------------------|
| <b>2873</b> | <b>[Special 3: Trailing Edge Correction]</b> Special 3 Paper: Trailing Edge Correction   |      |                                   |
|             | Adjusts the correction to the paper transfer roller current for the paper trailing edge in each mode. SP2852 and SP2857 are multiplied by these SP values.<br> <b>Note</b><br><ul style="list-style-type: none"> <li>▪ The paper trailing edge area can be adjusted with SP2874.</li> </ul> |      |                                   |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [0 to 400 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side   | *ENG |                                   |

|     |                                |      |          |
|-----|--------------------------------|------|----------|
| 003 | Paper Transfer: FINE: 1st Side | *ENG | Not used |
| 004 | Paper Transfer: FINE: 2nd Side | *ENG |          |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2874</b> | <b>[Special 3: Switch Timing: Trail. Edge]</b>   |      |                                    |
|             | Adjusts the bias/voltage switch timing of the paper transfer roller/discharge plate at the paper trailing edge between the erase margin area and the image area. |      |                                    |
| 001         | Paper Transfer: Thick 1 (77 mm/s): 1st Side  | *ENG | [-100 to 0 / <b>0</b> / 2 mm/step] |
| 002         | Paper Transfer: Thick 1 (77 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side   | *ENG |                                    |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>2881</b> | <b>[Special 3: LL] Special 3 Paper: LL Environment Coefficient Adjustment</b>   |      |                                   |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2852 and SP2857 are multiplied by these SP values. |      |                                   |
| 001         | Paper Transfer: Thick 1 (77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>80</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1 (77 mm/s): 2nd Side   | *ENG |                                   |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                          |
| 004         | Paper Transfer: FINE:   | *ENG |                                   |

|         |   |      |                                    |
|---------|---|------|------------------------------------|
|         | 2nd Side  |      |                                    |
| 005-008 | Adjusts the environment coefficient for each mode. When the environment is detected as LL, SP2851 is multiplied by these SP values. |      |                                    |
| 005     | Separation DC: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 006     | Separation DC: Thick 1<br>(77 mm/s): 2nd Side:  | *ENG |                                    |
| 007     | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008     | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>2882</b> | <b>[Special 3: ML]</b> Special 3 Paper: ML Environment Coefficient Adjustment  |      |                                    |
|             | Adjusts the environment coefficient for each mode When the environment is detected as ML, SP2852 and SP2857 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side  | *ENG |                                    |
| 005-008     | Adjusts the environment coefficient for each mode. When the environment is detected as ML, SP2851 is multiplied by these SP values.            |      |                                    |
| 005         | Separation DC: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 006         | Separation DC: Thick 1   | *ENG |                                    |



|     |                               |      |          |
|-----|-------------------------------|------|----------|
|     | (77 mm/s): 2nd Side:          |      |          |
| 007 | Separation DC: FINE: 1st Side | *ENG | Not used |
| 008 | Separation DC: FINE: 2nd Side | *ENG |          |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2883</b> | <b>[Special 3: MM]</b> Special 3 Paper: MM Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2852 and SP2857 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 1 (77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1 (77 mm/s): 2nd Side   | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st Side  | *ENG | Not used                           |
| 004         | Paper Transfer: FINE: 2nd Side  | *ENG |                                    |
| 005-008     | Adjusts the environment coefficient for each mode. When the environment is detected as MM, SP2851 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Thick 1 (77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>100</b> / 5%/step] |
| 006         | Separation DC: Thick 1 (77 mm/s): 2nd Side:   | *ENG |                                    |
| 007         | Separation DC: FINE: 1st Side   | *ENG | Not used                           |
| 008         | Separation DC: FINE: 2nd Side   | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2884</b> | <b>[Special 3: MH]</b> Special 3 Paper: MH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2852 and SP2857 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>110</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1<br>(77 mm/s): 2nd Side  | *ENG |                                    |
| 003         | Paper Transfer: FINE: 1st<br>Side   | *ENG | Not used                           |
| 004         | Paper Transfer: FINE:<br>2nd Side   | *ENG |                                    |
| 005-008     | Adjusts the environment coefficient for each mode. When the environment is detected as MH, SP2851 is multiplied by these SP values.             |      |                                    |
| 005         | Separation DC: Thick 1<br>(77 mm/s): 1st Side   | *ENG | [10 to 250 / <b>90</b> / 5%/step]  |
| 006         | Separation DC: Thick 1<br>(77 mm/s): 2nd Side:  | *ENG |                                    |
| 007         | Separation DC: FINE: 1st<br>Side  | *ENG | Not used                           |
| 008         | Separation DC: FINE:<br>2nd Side  | *ENG |                                    |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>2885</b> | <b>[Special 3: HH]</b> Special 3 Paper: HH Environment Coefficient Adjustment   |      |                                    |
|             | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2852 and SP2857 are multiplied by these SP values. |      |                                    |
| 001         | Paper Transfer: Thick 1<br>(77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>120</b> / 5%/step] |
| 002         | Paper Transfer: Thick 1   | *ENG |                                    |

|         |   |      |                                   |
|---------|---|------|-----------------------------------|
|         | (77 mm/s): 2nd Side   |      |                                   |
| 003     | Paper Transfer: FINE: 1st Side  | *ENG | Not used                          |
| 004     | Paper Transfer: FINE: 2nd Side  | *ENG |                                   |
| 005-008 | Adjusts the environment coefficient for each mode. When the environment is detected as HH, SP2851 is multiplied by these SP values. |      |                                   |
| 005     | Separation DC: Thick 1 (77 mm/s): 1st Side  | *ENG | [10 to 250 / <b>80</b> / 5%/step] |
| 006     | Separation DC: Thick 1 (77 mm/s): 2nd Side:   | *ENG |                                   |
| 007     | Separation DC: FINE: 1st Side   | *ENG | Not used                          |
| 008     | Separation DC: FINE: 2nd Side   | *ENG |                                   |

|             |  |      |   |
|-------------|--|------|---|
| <b>2901</b> | <b>[OPC Drum Brake Time]</b>   |      |   |
|             | Adjusts the time when the OPC drum motor reverses from normal rotation after job end. <b>DFU</b> |      |   |
| 001         | Plain  | *ENG | [100 to 1500 / <b>500</b> / 10 msec/step] |
| 002         | Thick 1  | *ENG |   |
| 003         | Thick 2 & FINE   | *ENG |   |

|             |   |      |                                       |
|-------------|---|------|---------------------------------------|
| <b>2902</b> | <b>[OPC Drum Reverse Time]</b>  |      |                                       |
|             | Adjusts the time for how long the OPC drum motor reverses after job end. <b>DFU</b> |      |                                       |
| 001         | All: BW   | *ENG | [0 to 200 / <b>40</b> / 10 msec/step] |
| 002         | All: FC   | *ENG |                                       |

|             |   |      |   |
|-------------|---|------|---|
| <b>2903</b> | <b>[Image Transfer Roller Brake Time]</b>   |      |   |
|             | Adjusts the time when the image transfer belt motor reverses from normal rotation after job end. <b>DFU</b> |      |   |
| 003         | Plain   | *ENG | [100 to 1500 / <b>500</b> / 10 msec/step] |
| 004         | Thick 1   | *ENG |   |
| 005         | Thick 2 & FINE  | *ENG |   |

|             |  |      |                                       |
|-------------|--|------|---------------------------------------|
| <b>2904</b> | <b>[OPC Drum Reverse Time]</b>   |      |                                       |
|             | Adjusts the time for how long the image transfer belt motor reverses after job end. <b>DFU</b> |      |                                       |
| 003         | All  | *ENG | [0 to 200 / <b>30</b> / 10 msec/step] |

|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>2907</b> | <b>[ACS Setting (FC to Bk)]</b>   |      |                                     |
|             | Adjusts the threshold for moving away the image transfer belt from the color PCUs. This SP moves the image transfer belt away from the color PCUs when the number of B/W image printouts reaches the number of sheets specified with this SP after consecutive full color image printouts in the full color mode. If this SP is set to "0", the image transfer belt does not move away. |      |                                     |
| 001         | Continuous Bk Pages   | *ENG | [0 to 10 / <b>0</b> / 1 sheet/step] |

|             |  |      |  |
|-------------|--|------|--|
| <b>2908</b> | <b>[GainAdjust]</b> Gain Adjustment of Image Transfer Belt Motor |      |  |
|             | <b>DFU</b>   |      |  |
| 001         | 154 mm/sec   | *ENG | [0 or 1 / <b>1</b> / 1/step]<br>0: High speed (Low level)<br>1: Low speed (High level) |
| 002         | 138 mm/sec   | *ENG |  |
| 003         | 115 mm/sec   | *ENG |  |
| 004         | 77 mm/sec  | *ENG |  |

|      |                              |      |   |
|------|------------------------------|------|---|
| 2909 | <b>[Motor Start Control]</b> |      |   |
|      | Not used                     |      |   |
| 001  | On                           | *ENG | [0 to 1 / <b>0</b> / 1 sheet/step]<br>0: normal, 1: synchro |

|      |                             |      |   |
|------|-----------------------------|------|---|
| 2910 | <b>[Motor Stop Control]</b> |      |   |
|      | Not used                    |      |   |
| 001  | On                          | *ENG | [0 to 1 / <b>0</b> / 1 sheet/step]<br>0: normal, 1: synchro |

|      |   |      |                                     |
|------|---|------|-------------------------------------|
| 2911 | <b>[Drum Stop Timing]</b> OPC Drum Motor Stop Timing Adjustment |      |                                     |
|      | Not used  |      |                                     |
| 001  | Bk  | *ENG | [0 to 360 / <b>30</b> / 6 deg/step] |
| 002  | MCY   | *ENG |                                     |

|      |                                    |      |                                       |
|------|------------------------------------|------|---------------------------------------|
| 2912 | <b>[Gear Phase Control Result]</b> |      |                                       |
|      | DFU                                |      |                                       |
| 001  | Bk - M                             | *ENG | [-180 to 180 / <b>0</b> / 1 deg/step] |

|      |  |      |   |
|------|--|------|---|
| 2913 | <b>[Gear Phase Control]</b>                                      |      |   |
|      | Enables or disables the OPC gear phase adjustment after job end. |      |   |
| 001  | Job End  | *ENG | [0 or 1 / <b>1</b> / 1/step]<br>0: OFF, 1: ON |

|      |                                    |  |  |
|------|------------------------------------|--|--|
| 2914 | <b>[Dust Shield Shutter Motor]</b> |  |  |
|------|------------------------------------|--|--|

|     |                   |      |   |
|-----|-------------------|------|---|
| 001 | Stop Delay: Open  | *ENG | <b>DFU</b><br>[1 to 50 / <b>38</b> / 1 ms/step]                                 |
| 002 | Stop Delay: Close | *ENG |   |
| 003 | Open Execution    | *ENG | Opens the shutter on the laser optics housing unit manually for test purposes.  |
| 004 | Close Execution   | *ENG | Closes the shutter on the laser optics housing unit manually for test purposes. |
| 007 | Presence          | *ENG | Not used  |

|             |  |      |  |
|-------------|--|------|--|
| <b>2915</b> | <b>[GainAdjust]</b> Gain Adjustment of OPC Bk Drum Motor |      |  |
|             | DFU  |      |  |
| 001         | 154 mm/sec   | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: TGAIN: High, 1: GAIN: Low |
| 002         | 138 mm/sec   | *ENG |  |
| 003         | 115 mm/sec   | *ENG |  |
| 004         | 77 mm/sec  | *ENG |  |

|             |   |      |  |
|-------------|---|------|--|
| <b>2916</b> | <b>[GainAdjust]</b> Gain Adjustment of OPC MCY Drum Motor |      |  |
|             | DFU   |      |  |
| 001         | 154 mm/sec  | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: TGAIN: High, 1: GAIN: Low |
| 002         | 138 mm/sec  | *ENG |  |
| 003         | 115 mm/sec  | *ENG |  |
| 004         | 77 mm/sec   | *ENG |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>2930</b> | <b>[SecondaryFB: Threshold]</b> Paper Transfer Roller Feed-back: Threshold Adjustment  |  |  |
|             | Adjusts the threshold between high resistance (division 1) and low resistance (division 2) at the paper transfer roller. This SP affects SP2931 to SP2939. |  |  |

|     |         |      |  |
|-----|---------|------|--|
| 001 | Voltage | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |
|-----|---------|------|--|

|      |  |      |  |
|------|--|------|--|
| 2931 | <b>[SecondaryFB: Plain]</b>  |      |  |
|      | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only used for plain paper use in full color mode. |      |  |
| 001  | Limit Voltage: Division 1  | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002  | Limit Voltage: Division 2  | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

|      |   |      |  |
|------|---|------|--|
| 2932 | <b>[SecondaryFB: Thin]</b>  |      |  |
|      | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only used for thin paper use in full color mode. |      |  |
| 001  | Limit Voltage: Division 1   | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002  | Limit Voltage: Division 2   | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

|      |  |      |  |
|------|--|------|--|
| 2933 | <b>[SecondaryFB: Special 1]</b>  |      |  |
|      | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only used for special 1 paper use in full color mode. |      |  |
| 001  | Limit Voltage: Division 1  | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002  | Limit Voltage: Division 2  | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

|      |  |      |  |
|------|--|------|--|
| 2934 | <b>[SecondaryFB: Special 2]</b>  |      |  |
|      | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only used for special 2 paper use in full color mode. |      |  |
| 001  | Limit Voltage: Division 1  | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002  | Limit Voltage: Division 2  | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

|             |  |      |  |
|-------------|--|------|--|
| <b>2935</b> | <b>[SecondaryFB: Thick 1]</b>  |      |  |
|             | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only used for thick 1 paper use in full color mode. |      |  |
| 001         | Limit Voltage: Division 1  | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002         | Limit Voltage: Division 2  | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

|             |  |      |  |
|-------------|--|------|--|
| <b>2936</b> | <b>[SecondaryFB: Thick 2]</b>  |      |  |
|             | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only used for thick 2 paper use in full color mode. |      |  |
| 001         | Limit Voltage: Division 1  | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002         | Limit Voltage: Division 2  | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

|             |  |      |  |
|-------------|--|------|--|
| <b>2937</b> | <b>[SecondaryFB: Thick 3]</b>  |      |  |
|             | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only used for thick 3 paper use in full color mode. |      |  |
| 001         | Limit Voltage: Division 1  | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002         | Limit Voltage: Division 2  | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

|             |  |      |  |
|-------------|--|------|--|
| <b>2938</b> | <b>[SecondaryFB: OHP]</b>  |      |  |
|             | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only used for OHP paper use in full color mode. |      |  |
| 001         | Limit Voltage: Division 1  | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002         | Limit Voltage: Division 2  | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

|             |   |  |  |
|-------------|---|--|--|
| <b>2939</b> | <b>[SecondaryFB: Special 3]</b>   |  |  |
|             | Adjusts the upper limit voltage for the paper transfer roller. These SPs are only |  |  |



|     |  |      |  |
|-----|--|------|--|
|     | used for special 3 paper use in full color mode. |      |  |
| 001 | Limit Voltage: Division 1                        | *ENG | [0 to 7000 / <b>6000</b> / 10 –V/step] |
| 002 | Limit Voltage: Division 2                        | *ENG | [0 to 7000 / <b>5000</b> / 10 –V/step] |

### SP3-XXX (Process)

|             |   |  |   |
|-------------|---|--|---|
| <b>3011</b> | <b>[Process Cont. Manual Execution]</b> |  |   |
| 001         | Normal                                  |  | Executes the normal process control manually (potential control).<br>Check the result with SP3-325-001 and 3-012-001 after executing this SP. |
| 002         | Density Adjustment                      |  | Executes the toner density adjustment manually.   |
| 003         | Pre-ACC                                 |  | Executes the process control that is normally done before ACC.<br>The type of process control is selected with SP3-041-004.                   |
| 004         | Full MUSIC                              |  | Executes the process control that is normally done at the same time as MUSIC.<br>This SP does the MUSIC (line position adjustment) twice.     |
| 005         | Normal MUSIC                            |  | Executes the process control that is normally done at the same time as MUSIC.<br>This SP does the MUSIC (line position adjustment) once.      |

|             |  |
|-------------|--|
|             | <b>[Process Cont. Check Result]</b> Process Control Self-check Result  |
| <b>3012</b> | Displays the result of the latest process control self-check.<br>All colors are displayed. The results are displayed in the order “Y C M K”<br>e.g., 11 (Y) 99 (C) 11 (M) 11 (K): The self-check for Cyan failed but the others were successful. |

|     |  |      |                                     |
|-----|--|------|-------------------------------------|
|     | See the troubleshooting section for details. |      |                                     |
| 001 | History: Latest                              | *ENG | [11111111 to 99999999 / - / 1/step] |
| 002 | Result: Latest 1                             | *ENG |                                     |
| 003 | Result: Latest 2                             | *ENG |                                     |
| 004 | Result: Latest 3                             | *ENG |                                     |
| 005 | Result: Latest 4                             | *ENG |                                     |
| 006 | Result: Latest 5                             | *ENG |                                     |
| 007 | Result: Latest 6                             | *ENG |                                     |
| 008 | Result: Latest 7                             | *ENG |                                     |
| 009 | Result: Latest 8                             | *ENG |                                     |
| 010 | Result: Latest 9                             | *ENG |                                     |

|             |   |   |            |
|-------------|---|---|------------|
| <b>3013</b> | <b>[T Sensor Initial Set: Execution]</b> Developer Initialization Setting |   |            |
| 001         | Execution: ALL  | - | <b>DFU</b> |
| 002         | Execution: COL (MCY)  | - |            |
| 003         | Execution: Bk   | - |            |
| 004         | Execution: M  | - |            |
| 005         | Execution: C  | - |            |
| 006         | Execution: Y  | - |            |

|             |  |      |   |
|-------------|--|------|---|
| <b>3014</b> | <b>[T Sensor Initial Set Result: Display]</b> Developer Initialization Result: Display |      |   |
| 001         | Display: YCMK  | *ENG | [0 to 9999 / - / - ]<br>1: Success<br>2 to 9: Failure |
|             | Displays the developer initialization result. See section 4.1.1 for details on the     |      |   |

|  |  |
|--|--|
|  | <p>meaning of each code.</p> <p>All colors are displayed. Values are displayed in the order Y C M Bk.<br/> e.g., 1 (Y) 2 (C) 1 (M) 1 (Bk): Initialization of Cyan failed but the others succeeded.</p> |
|--|--|

|             |  |   |   |
|-------------|--|---|---|
| <b>3015</b> | <b>[Forced Toner Supply]</b> Forced Toner Supply ([Color]) |   |   |
| 001         | Execution: ALL   | - | Executes the manual toner supply to the development unit. |
| 002         | Execution: COL (MCY)                                       | - |   |
| 003         | Execution: Bk  | - |   |
| 004         | Execution: M   | - |   |
| 005         | Execution: C   | - |   |
| 006         | Execution: Y   | - |   |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>3016</b> | <b>[Forced Toner Supply: Setting]</b> Forced Toner Supply Setting ([Color]) |      |                                   |
|             | Specifies the manual toner supply time for each color.                      |      |                                   |
| 001         | Supply Time: Bk   | *ENG | [0 to 30 / <b>4</b> / 1 sec/step] |
| 002         | Supply Time: M  | *ENG |                                   |
| 003         | Supply Time: C  | *ENG |                                   |
| 004         | Supply Time: Y  | *ENG |                                   |

|             |                                   |      |                                     |
|-------------|-----------------------------------|------|-------------------------------------|
| <b>3020</b> | <b>[Vt Limit Error]</b>           |      |                                     |
|             | <b>DFU</b>                        |      |                                     |
| 001         | Delta Vt Threshold                | *ENG | [0 to 5 / <b>5</b> / 0.01 V/step]   |
| 002         | Upper Threshold                   | *ENG | [0 to 5 / <b>4.7</b> / 0.01 V/step] |
| 003         | Threshold Number of Upper counter | *ENG | [0 to 99 / <b>20</b> / 1 time/step] |

|     |                         |      |                                     |
|-----|-------------------------|------|-------------------------------------|
| 004 | Lower Threshold         | *ENG | [0 to 5 / <b>0.5</b> / 0.01 V/step] |
| 005 | Number of Lower counter | *ENG | [0 to 99 / <b>10</b> / 1 time/step] |
| 006 | Upper Counter: Bk       | *ENG | [0 to 99 / <b>0</b> / 1 time/step]  |
| 007 | Upper Counter: M        | *ENG |                                     |
| 008 | Upper Counter: C        | *ENG |                                     |
| 009 | Upper Counter: Y        | *ENG |                                     |
| 010 | Lower Counter: Bk       | *ENG |                                     |
| 011 | Lower Counter: M        | *ENG |                                     |
| 012 | Lower Counter: C        | *ENG |                                     |
| 013 | Lower Counter: Y        | *ENG |                                     |

|             |   |      |   |
|-------------|---|------|---|
| <b>3021</b> | <b>[TD Sensor Initial Set]</b> Developer Initialization Setting                                   |      |   |
|             | Specifies the developer agitation time for each color at the developer initialization. <b>DFU</b> |      |   |
| 001         | Agitation Time: Bk  | *ENG | [0 to 200 / <b>30</b> / 1 sec/step]   |
| 002         | Agitation Time: M   | *ENG |   |
| 003         | Agitation Time: C   | *ENG |   |
| 004         | Agitation Time: Y   | *ENG |   |
| 005-008     | Sets the execution flag of the developer initialization for each color. <b>DFU</b>                |      |   |
| 005         | Execution Flag: Bk  | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: Flag OFF, 1: Flag ON<br>This flag is cleared after executing TD sensor initialization. |
| 006         | Execution Flag: M   | *ENG |   |
| 007         | Execution Flag: C   | *ENG |   |
| 008         | Execution Flag: Y   | *ENG |   |
| 009         | Prohibition   | *ENG | Enables or disables developer initialization.   |

|  |  |  |   |
|--|--|--|---|
|  |  |  | <b>DFU</b><br>[0 or 1 / <b>0</b> / 1/step]<br>0: Enable, 1: Disable |
|--|--|--|---|

|             |  |      |   |
|-------------|--|------|---|
| <b>3022</b> | <b>[Toner Replenishment Mode] DFU</b>                                    |      |   |
|             | Specifies the toner supply time for each color in the toner supply mode. |      |   |
| 001         | Number: Bk   | *ENG | [0 to 30 / <b>8</b> / 1 sec/step]   |
| 002         | Number: M  | *ENG | [0 to 30 / <b>6</b> / 1 sec/step]   |
| 003         | Number: C  | *ENG |   |
| 004         | Number: Y  | *ENG |   |
| 005-008     | Sets the execution flag for the toner supply mode for each color.        |      |   |
| 005         | Execution Flag: Bk   | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: Flag OFF, 1: Flag ON<br>This flag is cleared after executing TD sensor initialization. |
| 006         | Execution Flag: M  | *ENG |   |
| 007         | Execution Flag: C  | *ENG |   |
| 008         | Execution Flag: Y  | *ENG |   |

|             |  |      |  |
|-------------|--|------|--|
| <b>3041</b> | <b>[Process Control Type]</b>          |      |  |
| 001         | Voltage Control                        | *ENG | [0 or 1 / <b>1</b> / 1/step ] Alphanumeric<br>0: FIXED (Use the fixed values for the charge DC bias and development DC bias set with SP2-005 and SP2-229.)<br>1: CONTROL |
|             | Enables or disables potential control. |      |  |
| 002         | LD Power Control                       | *ENG | [0 or 1 / <b>1</b> / 1/step] Alphanumeric<br>0: FIXED (at the value in SP2221-xxx)<br>1: CONTROL (adjusted by process control)   |
|             | Selects the LD power control mode.     |      |  |

|     |   |      |   |
|-----|---|------|---|
| 004 | Pre-ACC Process Control                                   | *ENG | [0 to 2 / <b>2</b> / 1/step]<br>0: Not Executed<br>1: Process Control<br>2: TC Control (TD Adjustment)<br>3: Not used |
|     | Selects the process control mode that is done before ACC. |      |   |

|             |  |      |                                   |
|-------------|--|------|-----------------------------------|
| <b>3043</b> | <b>[TD Adjustment Mode]</b>  |      |                                   |
| 001         | Repeat Number: Power ON  | *ENG | [0 to 9 / <b>4</b> / 1 time/step] |
|             | <p>Specifies the maximum number of repeats of the toner density adjustment at power on.</p> <p>0: Disabled, 1 to 3: Repeat number,<br/>4: Repeat three times (No consumption mode)<br/>5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.)<br/>6 to 9: Disabled</p>                     |      |                                   |
| 002         | Repeat Number: Initialization  | *ENG | [0 to 9 / <b>3</b> / 1 time/step] |
|             | <p>Specifies the maximum number of repeats of the toner density adjustment at the developer initialization.</p> <p>0: Disabled, 1 to 3: Repeat number,<br/>4: Repeat three times (No consumption mode)<br/>5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.)<br/>6 to 9: Disabled</p> |      |                                   |
| 003         | Repeat Number: Non-use   | *ENG | [0 to 9 / <b>0</b> / 1 time/step] |
|             | <p>Specifies the maximum number of repeats of the toner density adjustment in stand by mode.</p> <p>0: Disabled, 1 to 3: Repeat number,<br/>4: Repeat three times (No consumption mode)</p>  |      |                                   |

|     |   |      |                                 |
|-----|---|------|---------------------------------|
|     | 5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.)<br>6 to 9: Disabled  |      |                                 |
| 004 | Repeat Number: ACC  | *ENG | [0 to 9 / 3 / 1 time/step]      |
|     | Specifies the maximum number of repeats of the toner density adjustment at ACC.<br>0: Disabled, 1 to 3: Repeat number,<br>4: Repeat three times (No consumption mode)<br>5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.)<br>6 to 9: Disabled     |      |                                 |
| 005 | Repeat Number:<br>Recovery  | *ENG | [0 to 9 / 0 / 1 time/step]      |
|     | Not used  |      |                                 |
| 006 | Repeat Number: Job End  | *ENG | [0 to 9 / 4 / 1 time/step]      |
|     | Specifies the maximum number of repeats of the toner density adjustment at job end.<br>0: Disabled, 1 to 3: Repeat number,<br>4: Repeat three times (No consumption mode)<br>5: Repeat three times (Toner is supplied only when the toner density is too low, and toner is consumed only when the toner density is too dark.)<br>6 to 9: Disabled |      |                                 |
| 007 | Repeat Number: Interrupt  | *ENG | [0 to 9 / 0 / 1 time/step]      |
|     | Specifies the maximum number of repeats of the toner density adjustment during printing. <b>DFU</b>   |      |                                 |
| 008 | Toner Supply Coefficient  | *ENG | [0 to 25.5 / 10 / 0.1 sec/step] |
|     | Adjusts the time for the toner supply mode when a toner density is detected to be low.  |      |                                 |
| 009 | Consumption pattern: Bk   | *ENG | [0 to 255 / 5 / 1 time/step]    |

|     |  |      |  |
|-----|--|------|--|
|     | Specifies the belt mark generating time for checking the black toner density when toner density is detected to be low at the toner density adjustment.   |      |  |
| 010 | Consumption pattern: M   | *ENG | [0 to 255 / <b>5</b> / 1 time/step]    |
|     | Specifies the belt mark generating time for checking the magenta toner density when toner density is detected to be low at the toner density adjustment. |      |  |
| 011 | Consumption pattern: C   | *ENG | [0 to 255 / <b>5</b> / 1 time/step]    |
|     | Specifies the belt mark generating time for checking the cyan toner density when toner density is detected to be low at the toner density adjustment.    |      |  |
| 012 | Consumption pattern: Y   | *ENG | [0 to 255 / <b>5</b> / 1 time/step]    |
|     | Specifies the belt mark generating time for checking the yellow toner density when toner density is detected to be low at the toner density adjustment.  |      |  |
| 013 | T1 Bias: Bk  | *ENG | [0 to 80 / <b>20</b> / 1 $\mu$ A/step] |
|     | Adjusts the image transfer belt bias for Black.  |      |  |
| 014 | T1 Bias: M   | *ENG | [0 to 80 / <b>20</b> / 1 $\mu$ A/step] |
|     | Adjusts the image transfer belt bias for Magenta.  |      |  |
| 015 | T1 Bias: C   | *ENG | [0 to 80 / <b>22</b> / 1 $\mu$ A/step] |
|     | Adjusts the image transfer belt bias for Cyan.   |      |  |
| 016 | T1 Bias: Y   | *ENG | [0 to 80 / <b>30</b> / 1 $\mu$ A/step] |
|     | Adjusts the image transfer belt bias for Yellow.   |      |  |
| 017 | Developer Mixing Time  | *ENG | [0 to 250 / <b>10</b> / 1 sec/step]    |
|     | Specifies the developer mixing time at the toner density adjustment.   |      |  |
| 018 | Consumption Pattern:<br>LD: DUTY: Bk   | *ENG | [0 to 15 / <b>15</b> / 1 /step]        |
|     | Adjusts the LD duty for the toner consumption mode at the toner density adjustment.<br>In toner consumption mode, toner is discharged when the detected  |      |  |



|     |   |      |                                 |
|-----|---|------|---------------------------------|
|     | development gamma values (SP3611-001) exceed the target values (SP3611-005) by more than the specified thresholds (SP3239-009).   |      |                                 |
| 019 | Consumption Pattern:<br>LD: DUTY: M   | *ENG | [0 to 15 / <b>15</b> / 1 /step] |
|     | Adjusts the LD duty for the toner consumption mode at the toner density adjustment.<br>In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-002) exceed the target values (SP3611-006) by more than the specified thresholds (SP3239-009). |      |                                 |
| 020 | Consumption Pattern:<br>LD: DUTY: C   | *ENG | [0 to 15 / <b>15</b> / 1 /step] |
|     | Adjusts the LD duty for the toner consumption mode at the toner density adjustment.<br>In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-003) exceed the target values (SP3611-007) by more than the specified thresholds (SP3239-009). |      |                                 |
| 021 | Consumption Pattern:<br>LD: DUTY: Y   | *ENG | [0 to 15 / <b>15</b> / 1 /step] |
|     | Adjusts the LD duty for the toner consumption mode at the toner density adjustment.<br>In toner consumption mode, toner is discharged when the detected development gamma values (SP3611-004) exceed the target values (SP3611-008) by more than the specified thresholds (SP3239-009). |      |                                 |

|      |  |      |  |
|------|--|------|--|
| 3044 | <b>[Toner Supply Type]</b> Toner Supply Type ([Color]) |      |  |
|      | Selects the toner supply method type.                  |      |  |
| 001  | Bk   | *ENG | [0 to 3 / <b>2</b> / 1/step] Alphanumeric            |
| 002  | M  | *ENG | 0: FIXED (with the supply rates stored with SP 3401) |
| 003  | C  | *ENG | 1: PID (Vtref_Fixed)                                 |

|     |   |      |                                       |
|-----|---|------|---------------------------------------|
| 004 | Y | *ENG | 2: PID (Vtref_Control)<br>3: Not used |
|-----|---|------|---------------------------------------|

|      |  |      |  |
|------|--|------|--|
| 3045 | <b>[Toner End Detection Set]</b>                     |      |  |
|      | Enables/disables the toner alert display on the LCD. |      |  |
| 001  | ON/OFF   | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: Detect, 1: Not Detect |

|         |   |      |   |
|---------|---|------|---|
| 3101    | <b>[Toner End/Near End]</b>   |      |   |
|         | Displays the amount of each color toner. <b>DFU</b>   |      |   |
| 001     | Toner Replenishment: Bk   | *ENG | [1 to 600 / <b>450</b> / 1 g/step]        |
| 002     | Toner Replenishment: M  | *ENG | [1 to 600 / <b>360</b> / 1 g/step]        |
| 003     | Toner Replenishment: C  | *ENG |   |
| 004     | Toner Replenishment: Y  | *ENG |   |
| 005-008 | Displays the consumed amount of each color toner.   |      |   |
| 005     | Toner Consumption: Bk   | *ENG | [0 to 3000 / <b>0</b> / 0.001 g/step]     |
| 006     | Toner Consumption: M  | *ENG |   |
| 007     | Toner Consumption: C  | *ENG |   |
| 008     | Toner Consumption: Y  | *ENG |   |
| 009-012 | Displays the remaining amount of each color toner. These are calculated by the operating times of the toner supply pumps. |      |   |
| 009     | Toner Remaining: Bk   | *ENG | [-50000 to 600 / <b>0</b> / 0.001 g/step] |
| 010     | Toner Remaining: M  | *ENG |   |
| 011     | Toner Remaining: C  | *ENG |   |
| 012     | Toner Remaining: Y  | *ENG |   |

|         |  |      |  |
|---------|--|------|--|
| 013-016 | Adjusts the threshold of toner near end for each color. The toner near end message appears on the LCD when the remaining toner amount reaches this threshold. When one of these SPs (SP3-101-009 to 012 or -032 to -035) reaches this threshold, toner near end is detected. |      |  |
| 013     | Near End Threshold: Bk   | *ENG | [0 to 600 / <b>50</b> / 1 g/step]        |
| 014     | Near End Threshold: M  | *ENG |  |
| 015     | Near End Threshold: C  | *ENG |  |
| 016     | Near End Threshold: Y  | *ENG |  |
| 017-020 | <b>DFU</b>   |      |  |
| 017     | Cartridge Error Threshold: Bk  | *ENG | [-50000 to 0 / <b>-50000</b> / 1 g/step] |
| 018     | Cartridge Error Threshold: M   | *ENG |  |
| 019     | Cartridge Error Threshold: C   | *ENG |  |
| 020     | Cartridge Error Threshold: Y   | *ENG |  |
| 021     | Delta Vt Threshold   | *ENG | [0 to 5 / <b>0.5</b> / 0.01 V/step]      |
|         | This SP is the threshold for toner end. Delta Vt: Vt-Vtref<br>When both this SP and SP3-101-026 occur at same time, toner end is determined.   |      |  |
| 022-025 | Displays the total delta Vt (Vt-Vtref) value for each color.<br>These are calculated by pixel counting.  |      |  |
| 022     | Delta Vt Sum: Bk   | *ENG | [0 to 655 / <b>0</b> / 0.01 V/step]      |
| 023     | Delta Vt Sum: M  | *ENG |  |
| 024     | Delta Vt Sum: C  | *ENG |  |
| 025     | Delta Vt Sum: Y  | *ENG |  |

|         |  |      |  |
|---------|--|------|--|
| 026     | Delta Vt Sum Threshold   | *ENG | [0 to 255 / 10 / 1 V/step]                             |
| 027     | Gamma Threshold:<br>Coefficient  | *ENG | Not used   |
| 028-031 | Displays the consumed toner amount calculated with the pixel count for each color. |      |  |
| 028     | Pixel: Consumption: Bk   | *ENG | [0 to 3000 / <b>0</b> / 0.001 g/step]                  |
| 029     | Pixel: Consumption: M  | *ENG |  |
| 030     | Pixel: Consumption: C  | *ENG |  |
| 031     | Pixel: Consumption: Y  | *ENG |  |
| 032-035 | Displays the remaining toner amount for each color, using pixel count.             |      |  |
| 032     | Pixel: Remaining : Bk  | *ENG | [-50000 to 600 / <b>0</b> / 0.001 g/step]              |
| 033     | Pixel: Remaining : M   | *ENG |  |
| 034     | Pixel: Remaining : C   | *ENG |  |
| 035     | Pixel: Remaining : Y   | *ENG |  |
| 036-039 | Adjusts the threshold of toner end for each color.                                 |      |  |
| 036     | End Threshold: Bk  | *ENG | Not used   |
| 037     | End Threshold: M   | *ENG |  |
| 038     | End Threshold: C   | *ENG |  |
| 039     | End Threshold: Y   | *ENG |  |
| 040-043 | Displays the pixel M/A for each color.   |      |  |
| 040     | Pixel M/A: Bk  | *ENG | [0 to 1 / <b>0.4</b> / 0.001 mg/cm <sup>2</sup> /step] |
| 041     | Pixel M/A: M   | *ENG |  |
| 042     | Pixel M/A: C   | *ENG |  |
| 043     | Pixel M/A: Y   | *ENG |  |

|     |  |      |  |
|-----|--|------|--|
| 044 | Delta Vt Threshold Before Near End     | *ENG | Adjusts the delta Vt ( $V_t - V_{tref}$ ) of toner end before toner near end is detected.<br>[0 to 5 / <b>0.5</b> / 0.01 V/step]     |
| 045 | Delta Vt Sum Threshold Before Near End | *ENG | Adjusts the total delta Vt ( $V_t - V_{tref}$ ) of toner end before toner near end is detected.<br>[0 to 255 / <b>10</b> / 1 V/step] |

|      |  |      |                                    |
|------|--|------|------------------------------------|
| 3102 | <b>[Toner End Recovery]</b>  |      |                                    |
|      | Adjusts the number of times toner supply is attempted for each color when the TD sensor continues to detect toner end during toner recovery. |      |                                    |
| 001  | Repeat: Bk   | *ENG | [1 to 20 / <b>5</b> / 1 time/step] |
| 002  | Repeat: M  | *ENG |                                    |
| 003  | Repeat: C  | *ENG |                                    |
| 004  | Repeat: Y  | *ENG |                                    |

|      |  |      |                                    |
|------|--|------|------------------------------------|
| 3131 | <b>[TE Count m: Display]</b>                               |      |                                    |
|      | Display the number of toner end detections for each color. |      |                                    |
| 001  | Bk   | *ENG | [0 to 99 / <b>0</b> / 1 time/step] |
| 002  | M  | *ENG |                                    |
| 003  | C  | *ENG |                                    |
| 004  | Y  | *ENG |                                    |

|      |  |      |  |
|------|--|------|--|
| 3201 | <b>[TD Sensor: Vt Display]</b>                               |      |  |
|      | Display the current voltage of the TD sensor for each color. |      |  |
| 001  | Current: Bk  | *ENG | [0 to 5.5 / <b>0.01</b> / 0.01 V/step] |

|     |            |      |  |
|-----|------------|------|--|
| 002 | Current: M | *ENG |  |
| 003 | Current: C | *ENG |  |
| 004 | Current: Y | *ENG |  |

|             |  |      |                                      |
|-------------|--|------|--------------------------------------|
| <b>3211</b> | <b>[Vt Shift: Display/Set]</b>                       |      |                                      |
|             | Adjusts the Vt correction value for each line speed. |      |                                      |
| 001         | Thick 1 Shift: Bk                                    | *ENG | [0 to 5 / <b>0.21</b> / 0.01 V/step] |
| 002         | Thick 1 Shift: M                                     | *ENG |                                      |
| 003         | Thick 1 Shift: C                                     | *ENG |                                      |
| 004         | Thick 1 Shift: Y                                     | *ENG |                                      |
| 005         | Thick 2 & FINE Shift: Bk                             | *ENG | [0 to 5 / <b>0.21</b> / 0.01 V/step] |
| 006         | Thick 2 & FINE Shift: M                              | *ENG |                                      |
| 007         | Thick 2 & FINE Shift: C                              | *ENG |                                      |
| 008         | Thick 2 & FINE Shift: Y                              | *ENG |                                      |

|             |   |      |                                   |
|-------------|---|------|-----------------------------------|
| <b>3221</b> | <b>[Vtcnt: Display/Set]</b>   |      |                                   |
|             | Displays or adjusts the current Vtcnt value for each color.                                   |      |                                   |
| 001         | Current: Bk   | *ENG | [2 to 5 / <b>4</b> / 0.01 V/step] |
| 002         | Current: M  | *ENG |                                   |
| 003         | Current: C  | *ENG |                                   |
| 004         | Current: Y  | *ENG |                                   |
| 005-008     | Displays or adjusts the Vtcnt value for each color at developer initialization.<br><b>DFU</b> |      |                                   |
| 005         | Initial: Bk   | *ENG | [2 to 5 / <b>4</b> / 0.01 V/step] |

|     |            |      |  |
|-----|------------|------|--|
| 006 | Initial: M | *ENG |  |
| 007 | Initial: C | *ENG |  |
| 008 | Initial: Y | *ENG |  |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>3222</b> | <b>[Vtref: Display/Set]</b>   |      |                                      |
|             | Displays or adjusts the current Vtref value for each color.                                   |      |                                      |
| 001         | Current: Bk   | *ENG | [0 to 5.5 / <b>3</b> / 0.01 V/step]  |
| 002         | Current: M  | *ENG |                                      |
| 003         | Current: C  | *ENG |                                      |
| 004         | Current: Y  | *ENG |                                      |
| 005-008     | Displays or adjusts the Vtref value for each color at developer initialization.<br><b>DFU</b> |      |                                      |
| 005         | Initial: Bk   | *ENG | [0 to 5.5 / <b>3</b> / 0.01 V/step]  |
| 006         | Initial: M  | *ENG |                                      |
| 007         | Initial: C  | *ENG |                                      |
| 008         | Initial: Y  | *ENG |                                      |
| 009-012     | Displays and adjusts Vtref correction by pixel coverage for each color. <b>DFU</b>            |      |                                      |
| 009         | Pixel Correction: Bk  | *ENG | [-5 to 5.5 / <b>0</b> / 0.01 V/step] |
| 010         | Pixel Correction: M   | *ENG |                                      |
| 011         | Pixel Correction: C   | *ENG |                                      |
| 012         | Pixel Correction: Y   | *ENG |                                      |

|             |   |  |  |
|-------------|---|--|--|
| <b>3223</b> | <b>[Vtref Upper Lower: Set] DFU</b>                             |  |  |
|             | Adjusts the lower or upper limit value of Vtref for each color. |  |  |

|     |                               |      |  |
|-----|-------------------------------|------|--|
| 001 | Lower: Bk                     | *ENG | [0 to 5 / <b>2</b> / 0.01 V/step]  |
| 002 | Lower: M                      | *ENG |  |
| 003 | Lower: C                      | *ENG |  |
| 004 | Lower: Y                      | *ENG |  |
| 005 | Upper: Bk                     | *ENG | [0 to 5 / <b>4</b> / 0.01 V/step]  |
| 006 | Upper: M                      | *ENG |  |
| 007 | Upper: C                      | *ENG |  |
| 008 | Upper: Y                      | *ENG |  |
| 009 | Initial TC                    | *ENG | Adjusts the initial toner concentration.<br>[1 to 15 / <b>7</b> / 0.1 wt%/step]                          |
| 010 | Upper: TC                     | *ENG | Adjusts the upper limit of the toner concentration.<br>[1 to 15 / <b>10.5</b> / 0.1 wt%/step]            |
| 011 | Lower: TC                     | *ENG | Adjusts the lower limit of the toner concentration.<br>[1 to 15 / <b>4</b> / 0.1 wt%/step]               |
| 012 | Upper Sensitivity             | *ENG | Adjusts the upper limit of the TD sensor sensitivity.<br>[0.2 to 0.5 / <b>0.44</b> / 0.001 V/wt% /step]  |
| 013 | Lower Sensitivity             | *ENG | Adjusts the lower limit of the TD sensor sensitivity.<br>[0.2 to 0.5 / <b>0.209</b> / 0.001 V/wt% /step] |
| 014 | Toner Density Between H and M | *ENG | [1 to 10 / <b>3.4</b> / 0.1 wt%/step]  |
| 015 | Toner Density Between M and L | *ENG | [1 to 10 / <b>4.3</b> / 0.1 wt%/step]  |



|      |  |      |  |
|------|--|------|--|
| 3224 | <b>[Vtref Correction: Pixel] DFU</b>                                     |      |  |
|      | Adjusts the coefficient of Vtref correction for each coverage and color. |      |  |
| 001  | Low Coverage<br>Coefficient: Bk  | *ENG | [0 to 5 / <b>1</b> / 0.1 /step]  |
| 002  | Low Coverage<br>Coefficient: M   | *ENG |  |
| 003  | Low Coverage<br>Coefficient: C   | *ENG |  |
| 004  | Low Coverage<br>Coefficient: Y   | *ENG |  |
| 005  | High Coverage<br>Coefficient: Bk   | *ENG | [0 to 5 / <b>1</b> / 0.01 V/step]  |
| 006  | High Coverage<br>Coefficient: M  | *ENG | [0 to 5 / <b>0.5</b> / 0.01 V/step]  |
| 007  | High Coverage<br>Coefficient: C  | *ENG |  |
| 008  | High Coverage<br>Coefficient: Y  | *ENG |  |
| 009  | Low Coverage: Threshold  | *ENG | Adjusts the threshold of the low coverage.<br>[0 to 20 / <b>3</b> / 0.1 %/step]  |
| 010  | High Coverage:<br>Threshold  | *ENG | Adjusts the threshold of the high coverage.<br>[0 to 100 / <b>60</b> / 1 %/step] |
| 011  | TC Upper Limit<br>Correction   | *ENG | [0 to 5 / <b>0.5</b> / 0.1 wt%/step]   |
| 012  | Upper Limit TC: Display:<br>Bk   | *ENG | [1 to 15 / <b>10</b> / 0.01 wt% /step]   |
| 013  | Upper Limit TC: Display:<br>M  | *ENG |  |

|     |  |      |                                      |
|-----|--|------|--------------------------------------|
| 014 | Upper Limit TC: Display:<br>C          | *ENG |                                      |
| 015 | Upper Limit TC: Display:<br>Y          | *ENG |                                      |
| 016 | Process Control<br>Execution Threshold | *ENG | [0 to 255 / <b>50</b> / 1 time/step] |

|             |   |      |  |
|-------------|---|------|--|
| <b>3231</b> | <b>[Toner Supply: Setting]</b>  |      |  |
|             | Adjusts the coefficient of the toner supply time for each color. <b>DFU</b> |      |  |
| 001         | Conversion Coefficient:<br>Bk   | *ENG | [0.5 to 9.99 / <b>1.48</b> / 0.01 /step] |
| 002         | Conversion Coefficient: M   | *ENG | [0.5 to 9.99 / <b>1.67</b> / 0.01 /step] |
| 003         | Conversion Coefficient: C   | *ENG | [0.5 to 9.99 / <b>1.45</b> / 0.01 /step] |
| 004         | Conversion Coefficient: Y   | *ENG | [0.5 to 9.99 / <b>1.74</b> / 0.01 /step] |

|             |  |      |  |
|-------------|--|------|--|
| <b>3232</b> | <b>[Toner Supply Coefficient: Setting] DFU</b> |      |  |
| 001         | Vt Proportion: Bk                              | *ENG | [0 to 2550 / <b>50</b> / 1 /step]      |
| 002         | Vt Proportion: M                               | *ENG |  |
| 003         | Vt Proportion: C                               | *ENG |  |
| 004         | Vt Proportion: Y                               | *ENG |  |
| 005         | Pixel Proportion: Bk                           | *ENG | [0 to 2.55 / <b>0.47</b> / 0.01 /step] |
| 006         | Pixel Proportion: M                            | *ENG |  |
| 007         | Pixel Proportion: C                            | *ENG |  |
| 008         | Pixel Proportion: Y                            | *ENG |  |
| 009         | Vt Integral Control: Bk                        | *ENG | [0 to 2550 / <b>500</b> / 1 /step]     |

|     |                        |      |  |
|-----|------------------------|------|--|
| 010 | Vt Integral Control: M | *ENG |  |
| 011 | Vt Integral Control: C | *ENG |  |
| 012 | Vt Integral Control: Y | *ENG |  |
| 013 | Vt Sum Times: Bk       | *ENG |  |
| 014 | Vt Sum Times: M        | *ENG |  |
| 015 | Vt Sum Times: C        | *ENG |  |
| 016 | Vt Sum Times: Y        | *ENG |  |

[1 to 255 / **20** / 1 time/step]

|             |  |      |  |
|-------------|--|------|--|
| <b>3233</b> | <b>[Pixel Proportion Coefficient 2: Setting] DFU</b> |      |  |
| 001         | Correction Coefficient: 1                            | *ENG | [0 to 2.55 / <b>1</b> / 0.01 /step]    |
| 002         | Correction Coefficient: 2                            | *ENG | [0 to 2.55 / <b>0.5</b> / 0.01 /step]  |
| 003         | Correction Coefficient: 3                            | *ENG | [0 to 2.55 / <b>0</b> / 0.01 /step]    |
| 004         | Correction Coefficient: 4                            | *ENG | [0 to 2.55 / <b>0.25</b> / 0.01 /step] |
| 005         | Correction Coefficient: 5                            | *ENG | [0 to 2.55 / <b>0.5</b> / 0.01 /step]  |

|             |  |      |   |
|-------------|--|------|---|
| <b>3234</b> | <b>[Pixel Proportion Coefficient 3: Setting] DFU</b> |      |   |
| 001         | Correction Value 1                                   | *ENG | [-0.1 to 0 / <b>-0.01</b> / 0.01 /step] |
| 002         | Correction Value 2                                   | *ENG | [0 to 0.1 / <b>0.01</b> / 0.01 /step]   |

|             |  |      |                                     |
|-------------|--|------|-------------------------------------|
| <b>3235</b> | <b>[Toner Supply Coefficient: Display] DFU</b> |      |                                     |
| 001         | Pixel Proportion 2: Bk                         | *ENG | [0 to 2.55 / <b>1</b> / 0.01 /step] |
| 002         | Pixel Proportion 2: M                          | *ENG |                                     |
| 003         | Pixel Proportion 2: C                          | *ENG |                                     |
| 004         | Pixel Proportion 2: Y                          | *ENG |                                     |

|     |                        |      |                                |
|-----|------------------------|------|--------------------------------|
| 005 | Pixel Proportion 3: Bk | *ENG | [0.7 to 1.3 / 1 / 0.01 /step]  |
| 006 | Pixel Proportion 3: M  | *ENG |                                |
| 007 | Pixel Proportion 3: C  | *ENG |                                |
| 008 | Pixel Proportion 3: Y  | *ENG |                                |
| 009 | Vt Integral Value: Bk  | *ENG | [-255 to 255 / 0 / 0.01 /step] |
| 010 | Vt Integral Value: M   | *ENG |                                |
| 011 | Vt Integral Value: C   | *ENG |                                |
| 012 | Vt Integral Value: Y   | *ENG |                                |

|             |  |      |                                |
|-------------|--|------|--------------------------------|
| <b>3236</b> | <b>[Toner Supply Consumption: Display] DFU</b>                       |      |                                |
|             | Displays the toner amount of the latest toner supply for each color. |      |                                |
| 001         | Latest: Bk   | *ENG | [0 to 40000 / 0 / 0.1 mg/step] |
| 002         | Latest: M  | *ENG |                                |
| 003         | Latest: C  | *ENG |                                |
| 004         | Latest: Y  | *ENG |                                |

|             |   |      |                             |
|-------------|---|------|-----------------------------|
| <b>3237</b> | <b>[Developer Mixing Setting]</b>   |      |                             |
|             | Displays the toner amount of the latest toner supply for each color. <b>DFU</b> |      |                             |
| 001         | Mixing Time   | *ENG | [0 to 200 / 5 / 1 sec/step] |

|             |  |      |                              |
|-------------|--|------|------------------------------|
| <b>3238</b> | <b>[Vt Target: Setting]</b>  |      |                              |
|             | Displays the Vt target value at developer initialization. <b>DFU</b> |      |                              |
| 001         | Bk   | *ENG | [0 to 5 / 2.7 / 0.01 V/step] |
| 002         | M  | *ENG |                              |

|     |   |      |  |
|-----|---|------|--|
| 003 | C | *ENG |  |
| 004 | Y | *ENG |  |

|             |  |      |                                       |
|-------------|--|------|---------------------------------------|
| <b>3239</b> | <b>[Vtref Correction: Setting]</b>                                 |      |                                       |
|             | Adjusts the parameter for Vtref correction at the process control. |      |                                       |
| 001         | (+)Consumption: Bk   | *ENG | [0 to 1 / <b>0.1</b> / 0.01 V/step]   |
| 002         | (+)Consumption: M  | *ENG |                                       |
| 003         | (+)Consumption: C  | *ENG |                                       |
| 004         | (+)Consumption: Y  | *ENG |                                       |
| 005         | (-)Consumption: Bk   | *ENG |                                       |
| 006         | (-)Consumption: M  | *ENG |                                       |
| 007         | (-)Consumption: C  | *ENG |                                       |
| 008         | (-)Consumption: Y  | *ENG |                                       |
| 009-012     | Threshold for development gamma rank.                              |      |                                       |
| 009         | P Rank 1 Threshold   | *ENG | [0 to 2 / <b>0.2</b> / 0.1 /step]     |
| 010         | P Rank 2 Threshold   | *ENG | [0 to 2 / <b>0.1</b> / 0.1 /step]     |
| 011         | P Rank 3 Threshold   | *ENG | [-2 to 0 / <b>-0.1</b> / 0.1 /step]   |
| 012         | P Rank 4 Threshold   | *ENG | [-2 to 0 / <b>-0.2</b> / 0.1 /step]   |
| 013-014     | Threshold for image density rank on the image transfer belt.       |      |                                       |
| 013         | T Rank 1 Threshold   | *ENG | [-1 to 0 / <b>-0.2</b> / 0.01 V/step] |
| 014         | T Rank 2 Threshold   | *ENG | [0 to 1 / <b>0.2</b> / 0.01 V/step]   |

|             |                                       |      |  |
|-------------|---------------------------------------|------|--|
| <b>3241</b> | <b>[Background Potential Setting]</b> |      |  |
| 001         | Coefficient: Bk                       | *ENG | These are parameters for calculating the |

|     |                |      |   |
|-----|----------------|------|---|
| 002 | Coefficient: M | *ENG | charge bias referring to the development bias at process control.   |
| 003 | Coefficient: C | *ENG |   |
| 004 | Coefficient: Y | *ENG | DC charge bias = Development bias x (1 + 0.001 x these vales) + SP3-241-005 to -008   |
| 005 | Offset: Bk     | *ENG | These are additional values for calculating the charge bias referring to the development bias at process control.<br>[0 to 255 / <b>140</b> / 1 V/step]<br>DC charge bias = Development bias x (1 + 0.001 x SP3-241-001 to -004) + these values |
| 006 | Offset: M      | *ENG |   |
| 007 | Offset: C      | *ENG |   |
| 008 | Offset: Y      | *ENG |   |

|             |  |      |                                       |
|-------------|--|------|---------------------------------------|
| <b>3242</b> | <b>[LD Power Setting]</b>  |      |                                       |
|             | Adjusts the coefficient for LD power control value at the process control. |      |                                       |
| 001         | Coefficient: Bk  | *ENG | [-1000 to 1000 / <b>75</b> / 1 /step] |
| 002         | Coefficient: M   | *ENG |                                       |
| 003         | Coefficient: C   | *ENG |                                       |
| 004         | Coefficient: Y   | *ENG |                                       |
| 005         | Offset: Bk   | *ENG | [-1000 to 1000 / <b>79</b> / 1 /step] |
| 006         | Offset: M  | *ENG |                                       |
| 007         | Offset: C  | *ENG |                                       |
| 008         | Offset: Y  | *ENG |                                       |

|             |  |      |  |
|-------------|--|------|--|
| <b>3251</b> | <b>[Coverage]</b>  |      |  |
|             | These (-001 to -016) are coefficients for SP3-222-009 to -012. |      |  |
| 001         | Latest Pixel: Bk   | *ENG | Displays the latest coverage for each color. |

|         |  |      |   |
|---------|--|------|---|
| 002     | Latest Pixel: M  | *ENG | [0 to 9999 / 0 / 1 cm <sup>2</sup> /step] |
| 003     | Latest Pixel: C  | *ENG |   |
| 004     | Latest Pixel: Y  | *ENG |   |
| 005-008 | Displays the average coverage of each color for the Vtref correction.<br>"Average S" is defined when the number of developed pages does not reach the number specified with SP3251-017.  |      |   |
| 005     | Average S: Bk  | *ENG | [0 to 100 / 5 / 0.01 %/step]              |
| 006     | Average S: M   | *ENG |   |
| 007     | Average S: C   | *ENG |   |
| 008     | Average S: Y   | *ENG |   |
| 009-012 | Displays the average coverage of each color for the Vtref correction.<br>"Average M" is defined when the number of developed pages does not reach the number specified with SP3251-018.  |      |   |
| 009     | Average M: Bk  | *ENG | [0 to 100 / 5 / 0.01 %/step]              |
| 010     | Average M: M   | *ENG |   |
| 011     | Average M: C   | *ENG |   |
| 012     | Average M: Y   | *ENG |   |
| 013-016 | Displays the average coverage of each color for the Vtref correction.<br>"Average L" is defined when the number of developed pages does not reach the number specified with SP3-251-019. |      |   |
| 013     | Average L: Bk  | *ENG | [0 to 100 / 5 / 0.01 %/step]              |
| 014     | Average L: M   | *ENG |   |
| 015     | Average L: C   | *ENG |   |
| 016     | Average L: Y   | *ENG |   |
| 017-019 | Adjusts the threshold for SP3-251-005 to -016.   |      |   |

|         |  |      |                                       |
|---------|--|------|---------------------------------------|
| 017     | Total Page Setting: S                              | *ENG | [1 to 100 / <b>10</b> / 1 sheet/step] |
| 018     | Total Page Setting: M                              | *ENG | [1 to 500 / <b>10</b> / 1 sheet/step] |
| 019     | Total Page Setting: L                              | *ENG | [1 to 999 / <b>50</b> / 1 sheet/step] |
| 024-027 | Displays the latest coverage ratio for each color. |      |                                       |
| 024     | Latest Coverage: Bk                                | *ENG | [0 to 100 / - / 0.01 %/step]          |
| 025     | Latest Coverage: M                                 | *ENG |                                       |
| 026     | Latest Coverage: C                                 | *ENG |                                       |
| 027     | Latest Coverage: Y                                 | *ENG |                                       |

|             |  |      |                              |
|-------------|--|------|------------------------------|
| <b>3311</b> | <b>[ID Sensor Detection Value: Voffset]</b>                            |      |                              |
|             | Displays the ID sensor (regular) offset voltage for Vsg adjustments.   |      |                              |
| 001         | Voffset reg: Bk  | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 002         | Voffset reg: M   | *ENG |                              |
| 003         | Voffset reg: C   | *ENG |                              |
| 004         | Voffset reg: Y   | *ENG |                              |
| 005-007     | Displays the ID sensor (diffusion) offset voltage for Vsg adjustments. |      |                              |
| 005         | Voffset dif: M   | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 006         | Voffset dif: C   | *ENG |                              |
| 007         | Voffset dif: Y   | *ENG |                              |
| 008-010     | Displays the ID sensor offset voltage for Vsg adjustments.             |      |                              |
| 008         | Voffset TM (Front)   | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 009         | Voffset TM (Center)  | *ENG |                              |
| 010         | Voffset TM (Rear)  | *ENG |                              |



|             |  |      |                              |
|-------------|--|------|------------------------------|
| <b>3313</b> | <b>[ID Sensor Detection Value: Vsgave]</b> |      |                              |
|             | Not used                                   |      |                              |
| 001         | Vsgave reg: Bk                             | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 002         | Vsgave reg: M                              | *ENG |                              |
| 003         | Vsgave reg: C                              | *ENG |                              |
| 004         | Vsgave reg: Y                              | *ENG |                              |
| 005-007     | Not used                                   |      |                              |
| 005         | Vsgave dif: M                              | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 006         | Vsgave dif: C                              | *ENG |                              |
| 007         | Vsgave dif: Y                              | *ENG |                              |
| 008-010     | Not used                                   |      |                              |
| 008         | Vsgave TM (Front)                          | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 009         | Vsgave TM (Center)                         | *ENG |                              |
| 010         | Vsgave TM (Rear)                           | *ENG |                              |

|             |                                    |   |  |
|-------------|------------------------------------|---|--|
| <b>3321</b> | <b>[Vsg Adjustment: Execution]</b> |   |  |
| 010         | P/TM Sensor All                    | - | Execute the ID sensor initialization setting for all sensors |

|             |  |      |                              |
|-------------|--|------|------------------------------|
| <b>3322</b> | <b>[Vsg Adjustment Result: Vsg]</b>                              |      |                              |
|             | Displays the result value of the Vsg adjustment for each sensor. |      |                              |
| 001         | Vsg reg: Bk  | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 002         | Vsg reg: M   | *ENG |                              |
| 003         | Vsg reg: C   | *ENG |                              |

|     |                 |      |                              |
|-----|-----------------|------|------------------------------|
| 004 | Vsg reg: Y      | *ENG |                              |
| 005 | Vsg dif: M      | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 006 | Vsg dif: C      | *ENG |                              |
| 007 | Vsg dif: Y      | *ENG |                              |
| 008 | Vsg TM (Front)  | *ENG |                              |
| 009 | Vsg TM (Center) | *ENG | [0 to 5.5 / - / 0.01 V/step] |
| 010 | Vsg TM (Rear)   | *ENG |                              |

|             |  |      |                             |
|-------------|--|------|-----------------------------|
| <b>3323</b> | <b>[Vsg Adjustment Result: Ifsg] DFU</b> |      |                             |
| 001         | Ifsg: Bk                                 | *ENG | [0 to 50 / - / 0.1 mA/step] |
| 002         | Ifsg: M                                  | *ENG |                             |
| 003         | Ifsg: C                                  | *ENG |                             |
| 004         | Ifsg: Y                                  | *ENG |                             |
| 005         | Ifsg TM (Front)                          | *ENG | [0 to 50 / - / 0.1 mA/step] |
| 006         | Ifsg TM (Center)                         | *ENG |                             |
| 007         | Ifsg TM (Rear)                           | *ENG |                             |

|             |                                  |      |                                     |
|-------------|----------------------------------|------|-------------------------------------|
| <b>3324</b> | <b>[Vsg Adjustment: Set] DFU</b> |      |                                     |
| 002         | Vofset Error Counter             | *ENG | [0 to 99 / - / 0.1 time/step]       |
| 003         | Vofset Error Counter             | *ENG |                                     |
| 004         | Vofset Threshold                 | *ENG | [0 to 5 / 1 / 0.01 V/step]          |
| 005         | Vsg Upper Threshold              | *ENG | [0 to 5 / <b>4.5</b> / 0.01 V/step] |
| 006         | Vsg Lower Threshold              | *ENG | [0 to 5 / <b>3.5</b> / 0.01 V/step] |

|             |  |      |  |
|-------------|--|------|--|
| <b>3325</b> | <b>[Vsg Adjustment Result]</b>   |      |  |
|             | Displays the result of the Vsg adjustment.<br>The displayed numbers mean the result of each sensor (sensor for Front, sensor for Bk, sensor for Cyan, sensor for Center, sensor for Magenta, sensor for Yellow and sensor for Rear). |      |  |
| 001         | Latest   | *ENG | [1111111 to 9999999 / <b>9999999</b> / 1 /step]<br>9: Unexpected error<br>3: Offset voltage error<br>2: Vsg adjustment value error<br>1: O.K |
| 002         | Latest 1   | *ENG |  |
| 003         | Latest 2   | *ENG |  |
| 004         | Latest 3   | *ENG |  |
| 005         | Latest 4   | *ENG |  |
| 006         | Latest 5   | *ENG |  |
| 007         | Latest 6   | *ENG |  |
| 008         | Latest 7   | *ENG |  |
| 009         | Latest 8   | *ENG |  |
| 010         | Latest 9   | *ENG |  |

|             |  |      |                             |
|-------------|--|------|-----------------------------|
| <b>3361</b> | <b>[ID Sensor Sensitivity: Display] Not Used</b> |      |                             |
| 001         | K2K (Latest)                                     | *ENG | [0 to 5 / - / 0.0001 /step] |
| 002         | K5K (Latest)                                     | *ENG |                             |
| 003         | K2M (Latest)                                     | *ENG |                             |
| 004         | K5M (Latest)                                     | *ENG |                             |
| 005         | K2C (Latest)                                     | *ENG |                             |
| 006         | K5C (Latest)                                     | *ENG |                             |
| 007         | K2Y (Latest)                                     | *ENG |                             |
| 008         | K5Y (Latest)                                     | *ENG |                             |

|             |   |      |   |
|-------------|---|------|---|
| <b>3362</b> | <b>[ID Sensor Sensitivity: Setting] DFU</b> |      |   |
| 001         | K2: Upper                                   | *ENG | [0 to 1 / <b>0.32</b> / 0.01 /step]                 |
| 002         | K2: Lower                                   | *ENG | [0 to 1 / <b>0.22</b> / 0.01 /step]                 |
| 003         | K5: Upper                                   | *ENG | [0 to 10 / <b>5</b> / 0.01 /step]                   |
| 004         | K5: Lower                                   | *ENG | [0 to 10 / <b>0.5</b> / 0.01 /step]                 |
| 005         | Kn: Lower                                   | *ENG | [0 to 1 / <b>0.1</b> / 0.01 /step]                  |
| 006         | Kn: Upper                                   | *ENG | [0 to 1 / <b>1</b> / 0.01 /step]                    |
| 007         | K5 Edit Point                               | *ENG | [0 to 1 / <b>0.15</b> / 0.01 /step]                 |
| 008         | K5 Target Voltage                           | *ENG | [0 to 5 / <b>1.63</b> / 0.01 V/step]                |
| 009         | K5 Approximate Method                       | *ENG | [0 to 1 / <b>1</b> / 1 /step]<br>0:Linear, 1: Curve |
| 010         | K2: Upper/Lower Limit<br>Coefficient 1      | *ENG | [0 to 1 / <b>0</b> / 0.01 /step]                    |
| 011         | K2: Upper Limit<br>Correction               | *ENG | [-0.2 to 0.4 / <b>0.07</b> / 0.01 /step]            |
| 012         | K2: Lower Limit<br>Correction               | *ENG | [-0.2 to 0.4 / <b>-0.07</b> / 0.01 /step]           |
| 013         | Diffusion Correction: M                     | *ENG | [0.75 to 1.35 / <b>1</b> / 0.01 /step]              |
| 014         | Diffusion Correction: C                     | *ENG |   |
| 015         | Diffusion Correction: Y                     | *ENG |   |
| 016         | K2: Check: M                                | *ENG | [0 to 1 / <b>0.25</b> / 0.001 /step]                |
| 017         | K2: Check: C                                | *ENG |   |
| 018         | K2: Check: Y                                | *ENG |   |

|             |  |      |  |
|-------------|--|------|--|
| <b>3363</b> | <b>[ID Pattern Timing Setting] DFU</b> |      |  |
| 001         | Scan YCMBk                             | *ENG | Adjusts the detection timing for the process control pattern.<br>[-500 to 500 / <b>13.7</b> / 1 mm/step]                                   |
| 002         | Paper Transfer Release Start Time      | *ENG | Adjusts the timing when the paper transfer unit is kept away from the image transfer belt.<br>[0 to 2500 / <b>0</b> / 1 msec/step]         |
| 003         | Delay Time                             | *ENG | Adjusts the processing timing for the process control pattern.<br>[0 to 2500 / <b>600</b> / 1 msec/step]                                   |
| 004         | MUSIC Delay Time                       | *ENG | Adjusts the processing timing for the pattern that is used for the line position adjustment.<br>[-2500 to 2500 / <b>300</b> / 1 msec/step] |

|             |                              |      |   |
|-------------|------------------------------|------|---|
| <b>3371</b> | <b>[M/A Calculation] DFU</b> |      |   |
| 001         | Correction Coefficient: Bk   | *ENG | [0.5 to 2.0 / <b>1.04</b> / 0.01 /step] |
| 002         | Correction Coefficient: M    | *ENG | [0.5 to 2.0 / <b>0.98</b> / 0.01 /step] |
| 003         | Correction Coefficient: C    | *ENG | [0.5 to 2.0 / <b>1.11</b> / 0.01 /step] |
| 004         | Correction Coefficient: Y    | *ENG | [0.5 to 2.0 / <b>0.91</b> / 0.01 /step] |

|             |   |      |   |
|-------------|---|------|---|
| <b>3401</b> | <b>[Fixed Supply Mode]</b>                                    |      |   |
|             | Adjusts the toner supply rate in the fixed toner supply mode. |      |   |
| 001         | Fixed Rate: Bk  | *ENG | [0 to 100 / <b>5</b> / 1 %/step]                    |
| 002         | Fixed Rate: M   | *ENG | These SPs are used only when SP3-044 is set to "1". |
| 003         | Fixed Rate: C   | *ENG |   |

|     |               |      |  |
|-----|---------------|------|--|
| 004 | Fixed Rate: Y | *ENG |  |
|-----|---------------|------|--|

|      |   |      |                           |
|------|---|------|---------------------------|
| 3411 | <b>[Toner Supply Rate: Display]</b>     |      |                           |
|      | Displays the current toner supply rate. |      |                           |
| 001  | Latest: Bk                              | *ENG | [0 to 100 / - / 1 %/step] |
| 002  | Latest: M                               | *ENG |                           |
| 003  | Latest: C                               | *ENG |                           |
| 004  | Latest: Y                               | *ENG |                           |

|      |                             |      |   |
|------|-----------------------------|------|---|
| 3421 | <b>[Toner Supply Range]</b> |      |   |
| 001  | Upper Limit: Bk             | *ENG | Adjusts the toner supply rate during printing.<br>[0 to 100 / <b>100</b> / 1%/step] |
| 002  | Upper Limit: M              | *ENG |   |
| 003  | Upper Limit: C              | *ENG |   |
| 004  | Upper Limit: Y              | *ENG |   |
| 005  | Minimum Supply Time: Bk     | *ENG | Adjusts the minimum toner supply time.<br>[0 to 1000 / <b>0</b> / 1 msec/step]      |
| 006  | Minimum Supply Time: M      | *ENG |   |
| 007  | Minimum Supply Time: C      | *ENG |   |
| 008  | Minimum Supply Time: Y      | *ENG |   |

|      |   |      |                                       |
|------|---|------|---------------------------------------|
| 3451 | <b>[Toner Supply Carry Over: Display] DFU</b> |      |                                       |
| 001  | Bk  | *ENG | [0 to 10000 / <b>0</b> / 1 msec/step] |
| 002  | M   | *ENG |                                       |
| 003  | C   | *ENG |                                       |
| 004  | Y   | *ENG |                                       |

|             |   |      |  |
|-------------|---|------|--|
| <b>3452</b> | <b>[Toner Supply Carry Over: Setting] DFU</b> |      |  |
| 001         | Maximum: Bk                                   | *ENG | [0 to 10000 / <b>1000</b> / 1 msec/step] |
| 002         | Maximum: M                                    | *ENG |  |
| 003         | Maximum: C                                    | *ENG |  |
| 004         | Maximum: Y                                    | *ENG |  |

|             |                                     |      |   |
|-------------|-------------------------------------|------|---|
| <b>3501</b> | <b>[Process Control Target M/A]</b> |      |   |
|             | Adjusts the target M/A.             |      |   |
| 001         | Maximum M/A: Bk                     | *ENG | [0 to 1 / <b>0.42</b> / 0.001 mg/cm <sup>2</sup> /step] |
| 002         | Maximum M/A: M                      | *ENG |   |
| 003         | Maximum M/A: C                      | *ENG |   |
| 004         | Maximum M/A: Y                      | *ENG | [0 to 1 / <b>0.43</b> / 0.001 mg/cm <sup>2</sup> /step] |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>3510</b> | <b>[Image Quality Adj. Counter: Display]</b>              |      |                                      |
|             | Displays the total page counter for each adjustment mode. |      |                                      |
| 001         | Potential Control: BW                                     | *ENG | [0 to 2000 / <b>0</b> / 1 page/step] |
| 002         | Potential Control: FC                                     | *ENG |                                      |
| 003         | Power ON: BW  | *ENG |                                      |
| 004         | Power ON: FC  | *ENG |                                      |
| 005         | MUSIC: BW   | *ENG |                                      |
| 006         | MUSIC: FC   | *ENG |                                      |
| 007         | Vsg Adj.  | *ENG |                                      |
| 008         | Charge AC Control   | *ENG |                                      |

|      |   |      |  |
|------|---|------|--|
| 3511 | <b>[Execution Interval: Setting]</b>            |      |  |
|      | Adjusts the threshold for each adjustment mode. |      |  |
| 001  | Job End: Potential<br>Control: BW               | *ENG | [0 to 2000 / <b>250</b> / 1 page/step]                                 |
| 002  | Job End: Potential<br>Control: FC               | *ENG | [0 to 2000 / <b>100</b> / 1 page/step]                                 |
| 003  | Interrupt: Potential<br>Control: BW             | *ENG | [0 to 2000 / <b>500</b> / 1 page/step]                                 |
| 004  | Interrupt: Potential<br>Control: FC             | *ENG | [0 to 2000 / <b>200</b> / 1 page/step]                                 |
| 005  | Initial: Potential Control:<br>BW               | *ENG | [0 to 2000 / <b>200</b> / 1 page/step]                                 |
| 006  | Initial: Potential Control:<br>FC               | *ENG | [0 to 2000 / <b>100</b> / 1 page/step]                                 |
| 007  | Vsg Adj. Counter                                | *ENG | [0 to 2000 / <b>500</b> / 1 page/step]                                 |
| 008  | Charge AC Control<br>Counter                    | *ENG | [0 to 2000 / <b>500</b> / 1 page/step]                                 |
| 019  | Environmental Correction                        | *ENG | [0 or 1 / <b>1</b> / 1 /step]<br>0: Not Correct (OFF), 1: Correct (ON) |
| 020  | Gamma Correction                                | *ENG | [0 or 1 / <b>1</b> / 1 /step]<br>0: Not Correct (OFF), 1: Correct (ON) |
| 021  | Non-use Time Correction                         | *ENG | [0 or 1 / <b>1</b> / 1 /step]<br>0: Not Correct (OFF), 1: Correct (ON) |
| 022  | Correction Coefficient 1:<br>JE: BW             | *ENG | [0 to 1 / <b>0.2</b> / 0.01 page/step]                                 |
| 023  | Correction Coefficient 2:<br>JE: BW             | *ENG | [0 to 1 / <b>1</b> / 0.01/step]  |
| 024  | Correction Coefficient 1:                       | *ENG | [0 to 1 / <b>0.5</b> / 0.01/step]                                      |



|     |  |      |                                    |
|-----|--|------|------------------------------------|
|     | JE: FC                                     |      |                                    |
| 025 | Correction Coefficient 2:<br>JE: FC        | *ENG | [0 to 1 / <b>1</b> / 0.01/step]    |
| 026 | Correction Coefficient 1:<br>Interrupt: BW | *ENG | [0 to 1 / <b>0.1</b> / 0.01/step]  |
| 027 | Correction Coefficient 2:<br>Interrupt: BW | *ENG | [0 to 1 / <b>1</b> / 0.01/step]    |
| 028 | Correction Coefficient 1:<br>Interrupt: FC | *ENG | [0 to 1 / <b>0.25</b> / 0.01/step] |
| 029 | Correction Coefficient 2:<br>Interrupt: FC | *ENG | [0 to 1 / <b>1</b> / 0.01/step]    |
| 030 | Max. Number Correction<br>Threshold        | *ENG | [0 to 99 / <b>2</b> / 1/step]      |
| 031 | Max. Number Correction<br>Counter          | *ENG | [0 to 255 / <b>0</b> / 1/step]     |

|             |   |      |  |
|-------------|---|------|--|
| <b>3512</b> | <b>[Image Quality Adj.: Interval]</b>   |      |  |
|             | Adjusts the timing for execution of process control and line position adjustment. |      |  |
| 001         | During Job  | *ENG | [0 to 100 / <b>30</b> / 1 page/step]   |
| 002         | During Stand-by   | *ENG | [0 to 100 / <b>10</b> / 1 minute/step] |

|             |   |      |                               |
|-------------|---|------|-------------------------------|
| <b>3513</b> | <b>[PCU Motor Stop Time: Bk]</b>  |      |                               |
|             | Displays the last time that the PCU motors stopped.<br>These are used for process control execution timing. |      |                               |
| 001         | Year  | *ENG | [0 to 99 / <b>0</b> / 1/step] |
| 002         | Month   | *ENG | [1 to 12 / <b>1</b> / 1/step] |
| 003         | Date  | *ENG | [1 to 31 / <b>1</b> / 1/step] |

|     |        |      |                        |
|-----|--------|------|------------------------|
| 004 | Hour   | *ENG | [0 to 23 / 0 / 1/step] |
| 005 | Minute | *ENG | [0 to 59 / 0 / 1/step] |

|      |   |      |   |
|------|---|------|---|
| 3514 | <b>[Environmental Display: Job End]</b>   |      |   |
|      | Displays the environmental conditions for the last job.<br>These are used for process control execution timing. |      |   |
| 001  | Temperature   | *ENG | [-1280 to 1270 / 0 / 0.1°C/step]              |
| 002  | Relative Humidity   | *ENG | [0 to 1000 / - / 0.1%RH/step]                 |
| 003  | Absolute Humidity   | *ENG | [0 to 1000 / - / 0.1 g/cm <sup>3</sup> /step] |

|      |   |      |                               |
|------|---|------|-------------------------------|
| 3515 | <b>[Execution Interval: Display]</b>  |      |                               |
|      | Displays the current interval for process control execution.<br>When the machine calculates the timing for process control, it uses a number of conditions. These are the results after considering all the conditions. |      |                               |
| 001  | Job End: Potential<br>Control: BW   | *ENG | [0 to 2000 / - / 1 page/step] |
| 002  | Job End: Potential<br>Control: FC   | *ENG | [0 to 2000 / - / 1 page/step] |
| 003  | Interrupt: Potential<br>Control: BW   | *ENG | [0 to 2000 / - / 1 page/step] |
| 004  | Interrupt: Potential<br>Control: FC   | *ENG | [0 to 2000 / - / 1 page/step] |

|      |  |  |  |
|------|--|--|--|
| 3516 | <b>[Refresh Mode] DFU</b>  |  |  |
|      | While making prints with low coverage, the developer is agitated with less toner consumption and the toner carrier attraction tends to increase. This may cause low image density or poor transfer (white dots). To prevent this, the coagulated toner or overcharged toner has to be consumed by performing the refresh |  |  |

|     |                                     |      |  |
|-----|-------------------------------------|------|--|
|     | mode.                               |      |  |
| 001 | Dev. Motor Rotation:<br>Display: Bk | *ENG | [0 to 1000 / <b>0</b> / 1 m/step]                  |
| 002 | Dev. Motor Rotation:<br>Display: M  | *ENG |  |
| 003 | Dev. Motor Rotation:<br>Display: C  | *ENG |  |
| 004 | Dev. Motor Rotation:<br>Display: Y  | *ENG |  |
| 005 | Rotation Threshold                  | *ENG | [0 to 1000 / <b>1</b> / 1 m/step]                  |
| 006 | Pixel Coverage Sum: Bk              | *ENG | [0 to 65535 / <b>0</b> / 1 cm <sup>2</sup> /step]  |
| 007 | Pixel Coverage Sum: M               | *ENG |  |
| 008 | Pixel Coverage Sum: C               | *ENG |  |
| 009 | Pixel Coverage Sum: Y               | *ENG |  |
| 010 | Required Area: Bk                   | *ENG | [0 to 65535 / <b>0</b> / 1 cm <sup>2</sup> /step]  |
| 011 | Required Area: M                    | *ENG |  |
| 012 | Required Area: C                    | *ENG |  |
| 013 | Required Area: Y                    | *ENG |  |
| 014 | Refresh Threshold: Bk               | *ENG | [0 to 255 / <b>14</b> / 1 cm <sup>2</sup> /m/step] |
| 015 | Refresh Threshold: M                | *ENG |  |
| 016 | Refresh Threshold: C                | *ENG |  |
| 017 | Refresh Threshold: Y                | *ENG |  |
| 018 | Pattern Generation<br>Number: Bk    | *ENG | [0 to 255 / <b>0</b> / 1 time/step]                |
| 019 | Pattern Generation                  | *ENG |  |

|     |   |      |  |
|-----|---|------|--|
|     | Number: M                                 |      |  |
| 020 | Pattern Generation<br>Number: C           | *ENG |  |
| 021 | Pattern Generation<br>Number: Y           | *ENG |  |
| 022 | Pattern Generation<br>Number: Upper limit | *ENG | [0 to 255 / <b>0</b> / 1 time/step]                  |
| 023 | Toner Consumption<br>Pattern Area         | *ENG | [10 to 2550 / <b>320</b> / 10 cm <sup>2</sup> /step] |
| 024 | Supply Coefficient                        | *ENG | [0 to 2.55 / <b>1</b> / 0.01/step]                   |
| 025 | Job End Area Coefficient                  | *ENG | [0.1 to 25.5 / <b>1</b> / 0.1/step]                  |
| 026 | Job End Vb Coefficient                    | *ENG | [0 to 100 / <b>40</b> / 1%/step]                     |
| 027 | Job End Length                            | *ENG | [0 to 56 / <b>12</b> / 1mm/step]                     |
| 028 | Job End Supply                            | *ENG | [0 to 1 / 0.45 / 0.001 mg/cm <sup>2</sup> /step]     |

|             |   |      |                                 |
|-------------|---|------|---------------------------------|
|             | <b>[Blade damage prevention mode]</b>   |      |                                 |
| <b>3517</b> | Adjusts the threshold temperature for preventing the cleaning blade at the drum unit from being damaged. If the temperature is above this value, the drum reverses briefly at the end of the job to prevent the blade from flipping over. |      |                                 |
| 001         | Execution Temp.<br>Threshold  | *ENG | [0 to 50/ <b>40</b> / 1°C/step] |

|             |  |      |   |
|-------------|--|------|---|
| <b>3518</b> | <b>[Image Quality Adj. Execution Flag] DFU</b> |      |   |
| 001         | Toner End Recovery: Bk                         | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF. 1: ON |
| 002         | Toner End Recovery: M                          | *ENG |   |
| 003         | Toner End Recovery: C                          | *ENG |   |

|     |                         |      |   |
|-----|-------------------------|------|---|
| 004 | Toner End Recovery: Y   | *ENG |   |
| 005 | Vsg Adj.                | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF. 1: ON |
| 006 | Developer Mixing        | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF. 1: ON |
| 007 | Process Control         | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF. 1: ON |
| 008 | MUSIC                   | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF. 1: ON |
| 009 | MUSIC (Skew Correction) | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF. 1: ON |
| 010 | Charge AC Control       | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF. 1: ON |
| 011 | Blade Damage Prevention | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF. 1: ON |

|      |  |      |  |
|------|--|------|--|
| 3519 | <b>[Toner End Prohibition Setting]</b>                 |      |  |
|      | Enables or disables each adjustment at toner near end. |      |  |
| 001  | Process Control  | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: Permit (adjustment is done even toner near end condition)<br>1: Forbid (adjustment is not done at toner near end condition) |
| 002  | MUSIC  | *ENG |  |
| 003  | TC Adj.  | *ENG |  |

|      |   |  |  |
|------|---|--|--|
| 3522 | <b>[Initial Process Control Setting]</b>  |  |  |
|      | Adjusts the threshold for the process control at power on.<br>When the current condition has changed by more than the values of these SPs when compared with the conditions at the previous operation, the process control at power on is executed. |  |  |

|     |                         |      |   |
|-----|-------------------------|------|---|
| 002 | Non-use Time Setting    | *ENG | [0 to 1440 / <b>360</b> / 1 minute/step]        |
| 003 | Temperature Range       | *ENG | [0 to 99 / <b>10</b> / 1°C/step]                |
| 004 | Relative Humidity Range | *ENG | [0 to 99 / <b>50</b> / 1 %RH/step]              |
| 005 | Absolute Humidity Range | *ENG | [0 to 99 / <b>6</b> / 1 g/m <sup>3</sup> /step] |

|      |   |                         |  |
|------|---|-------------------------|--|
| 3531 | <b>[Non-use Time Process Control Setting]</b>   |                         |  |
|      | Adjusts the threshold for the process control at stand-by.<br>When the current condition has changed by more than the values of these SPs when compared with the conditions at the previous operation, the process control at stand-by is executed. |                         |  |
|      | 001   | Non-use Time Setting    | *ENG [0 to 1440 / <b>360</b> / 1 minute/step]  |
|      | 002   | Temperature Range       | *ENG [0 to 99 / <b>10</b> / 1°C/step]  |
|      | 003   | Relative Humidity Range | *ENG [0 to 99 / <b>50</b> / 1 %RH/step]  |
|      | 004   | Absolute Humidity Range | *ENG [0 to 99 / <b>6</b> / 1 g/m <sup>3</sup> /step]   |
| 005  | Maximum Execution Number  | *ENG                    | Adjusts the maximum execution time for the process control at stand-by.<br>[0 to 99 / <b>10</b> / 1 time/step] |

|      |   |      |   |
|------|---|------|---|
| 3611 | <b>[Development Gamma: Display/Set]</b> |      |   |
| 001  | Bk (Current)                            | *ENG | Displays the current development gamma for each color.<br>[0 to 5 / - / 0.01 mg/cm <sup>2</sup> /kV /step]          |
| 002  | M (Current)                             | *ENG |   |
| 003  | C (Current)                             | *ENG |   |
| 004  | Y (Current)                             | *ENG |   |
| 005  | Bk (Target Display)                     | *ENG | Displays the target development gamma for each color.<br>[0 to 5 / <b>0.85</b> / 0.01 mg/cm <sup>2</sup> /kV /step] |
| 006  | M (Target Display)                      | *ENG |   |

|     |                          |      |  |
|-----|--------------------------|------|--|
| 007 | C (Target Display)       | *ENG | Displays the target development gamma for each color.<br>[0 to 5 / <b>0.8</b> / 0.01 mg/cm <sup>2</sup> /kV /step]                   |
| 008 | Y (Target Display)       | *ENG |  |
| 009 | Bk (Standard Target Set) | *ENG | Displays the standard target development gamma for each color.<br>[0 to 5 / <b>0.9</b> / 0.01 mg/cm <sup>2</sup> /kV /step]          |
| 010 | M (Standard Target Set)  | *ENG | [0 to 5 / <b>0.8</b> / 0.01 mg/cm <sup>2</sup> /kV /step]  |
| 011 | C (Standard Target Set)  | *ENG |  |
| 012 | Y (Standard Target Set)  | *ENG |  |
| 013 | Environmental Correction | *ENG | Turns on or off the environmental correction for target development gamma.<br>[0 or 1 / <b>1</b> / - ]<br>0: Not Correct, 1: Correct |

|             |                             |      |                              |
|-------------|-----------------------------|------|------------------------------|
| <b>3612</b> | <b>[Vk Display]</b>         |      |                              |
|             | Displays Vk for each color. |      |                              |
| 001         | Bk                          | *ENG | [-300 to 300 / - / 1 V/step] |
| 002         | M                           | *ENG |                              |
| 003         | C                           | *ENG |                              |
| 004         | Y                           | *ENG |                              |

|   |   |      |                                     |
|---|---|------|-------------------------------------|
| <b>3621</b>   | <b>[Development DC Control: Display]</b>      |      |                                     |
|   | Plain: 138 mm/sec, Thick 2 and Fin: 77 mm/sec |      |                                     |
| Displays the development DC bias adjusted with the process control for each line speed and color. |   |      |                                     |
| 001   | Plain: Bk                                     | *ENG | [0 to 700 / <b>550</b> / 1 -V/step] |
| 002   | Plain: M                                      | *ENG |                                     |

|     |                    |      |                                     |
|-----|--------------------|------|-------------------------------------|
| 003 | Plain: C           | *ENG | [0 to 700 / <b>550</b> / 1 -V/step] |
| 004 | Plain: Y           | *ENG |                                     |
| 009 | Thick 2 & FINE: Bk | *ENG |                                     |
| 010 | Thick 2 & FINE: M  | *ENG |                                     |
| 011 | Thick 2 & FINE: C  | *ENG |                                     |
| 012 | Thick 2 & FINE: Y  | *ENG |                                     |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>3631</b> | <b>[Charge DC Control: Display]</b><br>Plain: 138 mm/sec, Thick 2 and Fin: 77 mm/sec            |      |                                      |
|             | Displays the charge DC voltage adjusted with the process control for each line speed and color. |      |                                      |
| 001         | Plain: Bk   | *ENG | [0 to 2000 / <b>690</b> / 1 -V/step] |
| 002         | Plain: M  | *ENG |                                      |
| 003         | Plain: C  | *ENG |                                      |
| 004         | Plain: Y  | *ENG |                                      |
| 009         | Thick 2 & FINE: Bk  | *ENG | [0 to 2000 / <b>690</b> / 1 -V/step] |
| 010         | Thick 2 & FINE: M   | *ENG |                                      |
| 011         | Thick 2 & FINE: C   | *ENG |                                      |
| 012         | Thick 2 & FINE: Y   | *ENG |                                      |

|             |  |      |                                       |
|-------------|--|------|---------------------------------------|
| <b>3641</b> | <b>[Charge AC Control: Display]</b><br>Plain: 138 mm/sec, Thick 2 and Fin: 77 mm/sec |      |                                       |
|             | Displays the charge AC voltage adjusted with the process control for each color.     |      |                                       |
| 001         | Plain: Bk  | *ENG | [0 to 3 / <b>1.75</b> / 0.01 kV/step] |



|     |          |      |  |
|-----|----------|------|--|
| 002 | Plain: M | *ENG |  |
| 003 | Plain: C | *ENG |  |
| 004 | Plain: Y | *ENG |  |

|  |   |      |                                    |
|--|---|------|------------------------------------|
| <b>3651</b>  | <b>[LD Power Control: Display]</b>            |      |                                    |
|  | Plain: 138 mm/sec, Thick 2 and Fin: 77 mm/sec |      |                                    |
| Displays the LD power adjusted for each environment. |   |      |                                    |
| 001  | Plain: Bk                                     | *ENG | [0 to 200 / <b>100</b> / 1 %/step] |
| 002  | Plain: M                                      | *ENG |                                    |
| 003  | Plain: C                                      | *ENG |                                    |
| 004  | Plain: Y                                      | *ENG |                                    |
| 009  | Thick 2 & FINE: Bk                            | *ENG | [0 to 200 / <b>100</b> / 1 %/step] |
| 010  | Thick 2 & FINE: M                             | *ENG |                                    |
| 011  | Thick 2 & FINE: C                             | *ENG |                                    |
| 012  | Thick 2 & FINE: Y                             | *ENG |                                    |

|  |  |      |  |
|--|--|------|--|
| <b>3710</b>  | <b>[HST Concentration Control: Set]</b>        |      |  |
|  | TD Sensor: Toner Concentration Control Setting |      |  |
| Selects the toner concentration control method by HST memory, which is in the TD sensor. |  |      |  |
| 001  | Control Method:<br>Selection                   | *ENG | [0 or 1 / <b>1</b> / - ]<br>0: Not Use, 1: Use |

|             |   |      |                                  |
|-------------|---|------|----------------------------------|
| <b>3711</b> | <b>[HST Concentration Control: Bk]</b>          |      |                                  |
|             | Displays the factory settings of the black PCU. |      |                                  |
| 001         | Vcnt  | *ENG | [0 to 5 / <b>4</b> / 0.1 V/step] |

|     |                         |      |  |
|-----|-------------------------|------|--|
| 002 | Vt                      | *ENG | [0 to 5 / <b>2.5</b> / 0.1 V/step]                         |
| 003 | Sensitivity: HL         | *ENG | [0 to 5 / <b>2.5</b> / 0.1 V/step]                         |
| 004 | Sensitivity: HM         | *ENG | [0 to 5 / <b>1.3</b> / 0.1 V/step]                         |
| 005 | Sensitivity: ML         | *ENG | [0 to 5 / <b>1.2</b> / 0.1 V/step]                         |
| 006 | Set Detection           | *ENG | [0 to 5 / <b>1</b> / 0.1 V/step]                           |
| 007 | Without Developer       | *ENG | [0 to 5 / <b>1.2</b> / 0.1 V/step]                         |
| 008 | With Developer          | *ENG | [0 to 5 / <b>1.3</b> / 0.1 V/step]                         |
| 009 | Serial Number 1         | *ENG | [0 to 255 / - / 1 V/step]                                  |
| 010 | Serial Number 2         | *ENG |  |
| 011 | Adjustment: Vt          | *ENG | [0 to 5 / <b>3</b> / 0.1 V/step]                           |
| 012 | Adjustment: Vtref       | *ENG | [0 to 5 / <b>3</b> / 0.1 V/step]                           |
| 013 | Adjustment: Vtcnt       | *ENG | [0 to 5 / <b>4</b> / 0.01 V/step]                          |
| 014 | Adjustment: Gamma       | *ENG | [0 to 2.55 / <b>0</b> / 0.01 mg/cm <sup>2</sup> /kV /step] |
| 015 | Adjustment: Vcnt Result | *ENG | [0 to 9 / <b>9</b> / 1 /step]                              |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>3712</b> | <b>[HST Concentration Control: M]</b>             |      |                                    |
|             | Displays the factory settings of the magenta PCU. |      |                                    |
| 001         | Vcnt  | *ENG | [0 to 5 / <b>4</b> / 0.1 V/step]   |
| 002         | Vt  | *ENG | [0 to 5 / <b>2.5</b> / 0.1 V/step] |
| 003         | Sensitivity: HL                                   | *ENG | [0 to 5 / <b>2.5</b> / 0.1 V/step] |
| 004         | Sensitivity: HM                                   | *ENG | [0 to 5 / <b>1.3</b> / 0.1 V/step] |
| 005         | Sensitivity: ML                                   | *ENG | [0 to 5 / <b>1.2</b> / 0.1 V/step] |
| 006         | Set Detection                                     | *ENG | [0 to 5 / <b>1</b> / 0.1 V/step]   |
| 007         | Without Developer                                 | *ENG | [0 to 5 / <b>1.2</b> / 0.1 V/step] |

|     |                         |      |  |
|-----|-------------------------|------|--|
| 008 | With Developer          | *ENG | [0 to 5 / <b>1.3</b> / 0.1 V/step]                         |
| 009 | Serial Number 1         | *ENG | [0 to 255 / - / 1 V/step]                                  |
| 010 | Serial Number 2         | *ENG |  |
| 011 | Adjustment: Vt          | *ENG | [0 to 5 / <b>3</b> / 0.1 V/step]                           |
| 012 | Adjustment: Vtref       | *ENG | [0 to 5 / <b>3</b> / 0.1 V/step]                           |
| 013 | Adjustment: Vtcnt       | *ENG | [0 to 5 / <b>4</b> / 0.01 V/step]                          |
| 014 | Adjustment: Gamma       | *ENG | [0 to 2.55 / <b>0</b> / 0.01 mg/cm <sup>2</sup> /kV /step] |
| 015 | Adjustment: Vcnt Result | *ENG | [0 to 9 / <b>9</b> / 1 /step]                              |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>3713</b> | <b>[HST Concentration Control: C]</b>          |      |                                    |
|             | Displays the factory settings of the cyan PCU. |      |                                    |
| 001         | Vcnt   | *ENG | [0 to 5 / <b>4</b> / 0.1 V/step]   |
| 002         | Vt   | *ENG | [0 to 5 / <b>2.5</b> / 0.1 V/step] |
| 003         | Sensitivity: HL                                | *ENG | [0 to 5 / <b>2.5</b> / 0.1 V/step] |
| 004         | Sensitivity: HM                                | *ENG | [0 to 5 / <b>1.3</b> / 0.1 V/step] |
| 005         | Sensitivity: ML                                | *ENG | [0 to 5 / <b>1.2</b> / 0.1 V/step] |
| 006         | Set Detection                                  | *ENG | [0 to 5 / <b>1</b> / 0.1 V/step]   |
| 007         | Without Developer                              | *ENG | [0 to 5 / <b>1.2</b> / 0.1 V/step] |
| 008         | With Developer                                 | *ENG | [0 to 5 / <b>1.3</b> / 0.1 V/step] |
| 009         | Serial Number 1                                | *ENG | [0 to 255 / - / 1 V/step]          |
| 010         | Serial Number 2                                | *ENG |                                    |
| 011         | Adjustment: Vt                                 | *ENG | [0 to 5 / <b>3</b> / 0.1 V/step]   |
| 012         | Adjustment: Vtref                              | *ENG | [0 to 5 / <b>3</b> / 0.1 V/step]   |
| 013         | Adjustment: Vtcnt                              | *ENG | [0 to 5 / <b>4</b> / 0.01 V/step]  |

|     |                         |      |  |
|-----|-------------------------|------|--|
| 014 | Adjustment: Gamma       | *ENG | [0 to 2.55 / <b>0</b> / 0.01 mg/cm <sup>2</sup> /kV /step] |
| 015 | Adjustment: Vcnt Result | *ENG | [0 to 9 / <b>9</b> / 1 /step]                              |

|             |  |      |  |
|-------------|--|------|--|
| <b>3714</b> | <b>[HST Concentration Control: Y]</b>            |      |  |
|             | Displays the factory settings of the yellow PCU. |      |  |
| 001         | Vcnt   | *ENG | [0 to 5 / <b>4</b> / 0.1 V/step]                           |
| 002         | Vt   | *ENG | [0 to 5 / <b>2.5</b> / 0.1 V/step]                         |
| 003         | Sensitivity: HL                                  | *ENG | [0 to 5 / <b>2.5</b> / 0.1 V/step]                         |
| 004         | Sensitivity: HM                                  | *ENG | [0 to 5 / <b>1.3</b> / 0.1 V/step]                         |
| 005         | Sensitivity: ML                                  | *ENG | [0 to 5 / <b>1.2</b> / 0.1 V/step]                         |
| 006         | Set Detection                                    | *ENG | [0 to 5 / <b>1</b> / 0.1 V/step]                           |
| 007         | Without Developer                                | *ENG | [0 to 5 / <b>1.2</b> / 0.1 V/step]                         |
| 008         | With Developer                                   | *ENG | [0 to 5 / <b>1.3</b> / 0.1 V/step]                         |
| 009         | Serial Number 1                                  | *ENG | [0 to 255 / - / 1 V/step]                                  |
| 010         | Serial Number 2                                  | *ENG |  |
| 011         | Adjustment: Vt                                   | *ENG | [0 to 5 / <b>3</b> / 0.1 V/step]                           |
| 012         | Adjustment: Vtref                                | *ENG | [0 to 5 / <b>3</b> / 0.1 V/step]                           |
| 013         | Adjustment: Vtcnt                                | *ENG | [0 to 5 / <b>4</b> / 0.01 V/step]                          |
| 014         | Adjustment: Gamma                                | *ENG | [0 to 2.55 / <b>0</b> / 0.01 mg/cm <sup>2</sup> /kV /step] |
| 015         | Adjustment: Vcnt Result                          | *ENG | [0 to 9 / <b>9</b> / 1 /step]                              |

|             |   |  |  |
|-------------|---|--|--|
| <b>3800</b> | <b>[Toner Collection Bottle Full Detection]</b>   |  |  |
|             | Displays/ adjusts the toner collection bottle detection settings. These SPs are used for NRS. |  |  |

|     |                               |      |   |
|-----|-------------------------------|------|---|
| 001 | Condition                     | *CTL | [0 to 4 / <b>0</b> / 1 /step]   |
| 002 | Detection Times               | *CTL | [0 to 50 / - / 1 /step]   |
| 003 | Print Page After Near Full    | *CTL | [0 to 1000 / <b>0</b> / 1 sheet/step]   |
| 004 | Pixel Count After Near Full   | *CTL | [0 to 200000 / - / 1 cm <sup>2</sup> /step]   |
| 005 | Pixel Count After Replacement | *CTL | Displays the pixel counter after replacement of toner collection bottle.<br>[0 to 200000 / - / 1 cm <sup>2</sup> /step]   |
| 008 | Coefficient                   | *ENG | [0.5 to 1.5 / <b>1</b> / 0.1 /step]   |
| 011 | Notice Setting                | *ENG | Enables or disables the calling for NRS.<br>[0 or 1 / <b>1</b> / - ]<br>0: Enable NRS calling<br>1: Disable NRS calling<br><b>NOTE:</b><br>If the toner collection bottle has been replaced before the machine detects used toner near full when this setting is set to "0", the machine cannot detect toner collection bottle near full. In that case, set SP3-902-017 to "1". |

|      |   |      |   |
|------|---|------|---|
| 3900 | <b>[Toner Collection Bottle Full Detection]</b>         |      |   |
|      | Turns toner collection bottle full detection on or off. |      |   |
| 001  | ON/OFF Setting  | *ENG | [0 or 1 / <b>1</b> / - ]<br>0: OFF, 1: ON |

|      |                                    |      |                          |
|------|------------------------------------|------|--------------------------|
| 3901 | <b>[New PCU Detection]</b>         |      |                          |
|      | Turns new PCU detection on or off. |      |                          |
| 001  | ON/OFF Setting                     | *ENG | [0 or 1 / <b>1</b> / - ] |

|  |  |  |               |
|--|--|--|---------------|
|  |  |  | 0: OFF, 1: ON |
|--|--|--|---------------|

|             |  |      |  |
|-------------|--|------|--|
| <b>3902</b> | <b>[Manual New Unit Set]</b>   |      |  |
|             | Turns the new unit detection flag for each PM unit on or off.<br>The use of these counters is explained in the PM section and in the relevant parts of section 3 (Replacement and Adjustment). |      |  |
| 001         | Development Unit: Bk   | *ENG | [0 or 1 / <b>0</b> / - ]<br>0: OFF, 1: ON  |
| 002         | Development Unit: Y  | *ENG |  |
| 003         | Development Unit: C  | *ENG |  |
| 004         | Development Unit: M  | *ENG |  |
| 005         | Developer: Bk  | *ENG | [0 or 1 / <b>0</b> / - ]<br>0: OFF, 1: ON  |
| 006         | Developer: Y   | *ENG |  |
| 007         | Developer: C   | *ENG |  |
| 008         | Developer: M   | *ENG |  |
| 009         | PCU: Bk  | *ENG | [0 or 1 / <b>0</b> / - ]<br>0: OFF, 1: ON  |
| 010         | PCU: Y   | *ENG |  |
| 011         | PCU: M   | *ENG |  |
| 012         | PCU: C   | *ENG |  |
| 013         | Image Transfer Unit  | *ENG | [0 or 1 / <b>0</b> / - ]<br>0: OFF, 1: ON<br>Do not use 3902-013 if you only change the cleaning unit.<br>3902-015: This is for the image transfer belt cleaning unit. |
| 014         | Fusing Unit  | *ENG |  |
| 015         | Cleaning Unit  | *ENG |  |
| 016         | Paper Transfer Unit  | *ENG |  |
| 017         | Toner Collection Bottle  | *ENG |  |

SP4-XXX (Scanner)

|             |   |      |  |
|-------------|---|------|--|
| <b>4008</b> | <b>[Sub Scan Magnification Adjustment]</b>                              |      |  |
|             | Adjusts the sub-scan magnification by changing the scanner motor speed. |      |  |
| 001         | Sub Scan Magnification Adjustment                                       | *CTL | [-1.0 to 1.0 / <b>0</b> / 0.1%/step] <b>FA</b> |

|             |  |      |  |
|-------------|--|------|--|
| <b>4010</b> | <b>[Leading Edge Registration Adjustment]</b>  |      |  |
|             | Adjusts the leading edge registration by changing the scanning start timing in the sub-scan direction. |      |  |
| 001         |  | *CTL | [-2.0 to 3.0 / <b>0</b> / 0.1 mm/step] <b>FA</b> |

|             |   |      |   |
|-------------|---|------|---|
| <b>4011</b> | <b>[Side-to-Side registration Adjustment]</b>   |      |   |
|             | Adjusts the side-to-side registration by changing the scanning start timing in the main scan direction. |      |   |
| 001         |   | *CTL | [-2.5 to 2.5 / <b>0</b> / 0.1 mm/step ] <b>FA</b> |

|             |  |      |  |
|-------------|--|------|--|
| <b>4012</b> | <b>[Scanner Erase Margin: Scale]</b> Scanner: Erase Margin: Scale  |      |  |
|             | Sets the blank margin at each side for erasing the original shadow caused by the gap between the original and the scale. |      |  |
| 001         | Book: Leading Edge   | *ENG | [0 to 3.0 / <b>0</b> / 0.1 mm/step ] <b>FA</b> |
| 002         | Book: Trailing Edge  |      |  |
| 003         | Book: Left   |      |  |
| 004         | Book: Right  |      |  |
| 005         | ADF: Leading Edge  | *ENG | [0 to 3.0 / <b>0</b> / 0.1 mm/step ] <b>FA</b> |

Service Tables

|     |            |  |  |
|-----|------------|--|--|
| 007 | ADF: Right |  |  |
| 008 | ADF: Left  |  |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>4013</b> | <b>[Scanner Free Run]</b>  |  |  |
|             | Performs the scanner free run with the exposure lamp on or off in the following mode.<br>Full color mode / Full Size / A3 or DLT |  |  |
| 001         | Lamp: ON   |  |  |
| 002         | Lamp: OFF  |  |  |

|             |  |   |   |
|-------------|--|---|---|
| <b>4014</b> | <b>[Scan]</b>                                |   |   |
|             | Execute the scanner free fun with each mode. |   |   |
| 001         | HP Detection Enable                          | - | Scanner free run with HP sensor check.    |
| 002         | HP Detection Disable                         | - | Scanner free run without HP sensor check. |

|             |                     |      |   |
|-------------|---------------------|------|---|
| <b>4020</b> | <b>[Dust Check]</b> |      |   |
| 001         | Detection: ON/OFF   | *ENG | Turns the ADF scan glass dust check on/off.<br>[0 or 1 / <b>0</b> / 1 /step]<br>0: OFF, 1: ON                         |
| 002         | Dust Detect: Level  | *ENG | Selects the detect level.<br>[0 to 8 / <b>4</b> / 1 /step]<br>0: lowest detection level<br>8: highest detection level |
| 003         | Correction Level    | *ENG | Selects the level of the sub scan line correction when using the ARDF.<br>[0 to 4 / <b>0</b> / 1 /step]<br>0: Off     |



|  |  |  |  |
|--|--|--|--|
|  |  |  | 1: Weakest<br>2: Weak<br>3: Strong<br>4: Strongest |
|--|--|--|--|

|      |  |   |   |
|------|--|---|---|
| 4301 | <b>[APS Operation Check]</b>   |   |   |
|      | Displays a code that represents the original size detected by the original sensors. (See Input Check Table.) |   |   |
| 001  | APS Operation Check  | - | - |

|      |   |      |   |
|------|---|------|---|
| 4303 | <b>[APS Min Size (A5/HLT/16K)]</b>  |      |   |
|      | Specifies the result of the detection when the outputs from the original sensors are all OFF. |      |   |
| 001  | APS Min. Size<br><b>(A5/HLT/16K)</b>  | *ENG | [0 to 2 / <b>0</b> / 1 /step]<br>0: No Original<br>1: A5-Lengthwise (16K SEF if 4305 is set to 3)<br>2: A5-Sideways (16K LEF if 4305 is set to 3) |

|      |  |      |   |
|------|--|------|---|
| 4305 | <b>[8K/16K Detection]</b>  | *ENG | [0 to 3 / <b>0</b> / 1 /step]<br>0: Normal Detection (the machine detects A4/LT size as A4 or LT, depending on the paper size setting)<br>1: A4-Sideways LT-Lengthwise<br>2: LT-Sideways A4-Lengthwise<br>3: 8K 16K |
| 001  | This program enables the machine to automatically recognize the 8K/16K size. |      |   |

|      |                               |      |  |
|------|-------------------------------|------|--|
| 4400 | <b>[Scanner Erase Margin]</b> | *ENG |  |
|------|-------------------------------|------|--|

|     |   |                              |
|-----|---|------------------------------|
|     | Set the Mask for Original.<br>These SPs set the area to be masked during platen (book) mode scanning. |                              |
| 001 | Book: Leading Edge  | [0 to 3.0 / 0 / 0.1 mm/step] |
| 002 | Book: Trailing Edge   |                              |
| 003 | Book: Left  |                              |
| 004 | Book: Right   |                              |
| 005 | ADF: Leading Edge   |                              |
| 007 | ADF: Right  |                              |
| 008 | ADF: Left   |                              |

|      |                                |  |  |
|------|--------------------------------|--|--|
| 4417 | <b>[IPU Test Pattern]</b>      |  |  |
|      | Selects the BICU test pattern. |  |  |
| 001  | Test Pattern Selection         | [0 to 24 / 0 / 1/step ]<br>0: Scanned image<br>1: Gradation main scan A<br>2: Gradation main scan B<br>3: Gradation main scan C<br>4: Gradation main scan D<br>5: Gradation sub scan (1)<br>6: Grid pattern<br>7: Slant grid pattern<br>8: Gradation RGBCMYK<br>9: UCR pattern<br>10: Color patch 16 (1)<br>11: Color patch 16 (2)<br>12: Color patch 64 | 13: Grid pattern CMYK<br>14: Color patch CMYK<br>15: Gray pattern (1)<br>16: Gray pattern (2)<br>17: Gray Pattern (3)<br>18: Shading pattern<br>19: Thin line pattern<br>20: Scanned + Grid pattern<br>21: Scanned + Gray scale<br>22: Scanned + Color patch<br>23: Scanned + Slant Grid C<br>24: Scanned + Slant Grid D |

|      |                                       |  |
|------|---------------------------------------|--|
| 4429 | <b>[ICI Output Selection]</b>         |  |
|      | Adjusts the ICI output density level. |  |

|     |   |      |  |
|-----|---|------|--|
| 001 | - | *ENG | [32 to 255 / <b>128</b> / 1 /step]<br>255: Strongest density |
|-----|---|------|--|

|      |  |      |  |
|------|--|------|--|
| 4440 | <b>[Saturation Adjustment]</b>               |      |  |
|      | Adjusts the level of saturation for copying. |      |  |
| 001  | Saturation Adj. 1                            | *ENG | [0 to 5 / <b>3</b> / 1 /step]<br>0: High<br>1: Lowest<br>2: Lower<br>3: Default<br>4: Higher<br>5: Highest |

|      |  |  |   |
|------|--|--|---|
| 4450 | <b>[Scan Image Pass Selection]</b>                   |  |   |
| 001  | Black Subtraction ON/OFF                             |  | [0 or 1 / <b>1</b> / - ] 0: OFF, 1: ON      |
|      | Uses or does not use the black reduction image path. |  |   |
| 002  | SH ON/OFF  |  | [0 or 1 / <b>0</b> / 1 /step] 0: ON, 1: OFF |
|      | Uses or does not use the shading image path.         |  |   |

|      |  |      |   |
|------|--|------|---|
| 4460 | <b>[Digital AE Set] DFU</b>  |      |   |
|      | Specifies the level of deleting the background in the ADS mode. You can adjust its level for each scanning method (platen, ADF). |      |   |
| 001  | Lower Limit  | *ENG | [0 to 1024 / <b>364</b> / 4 digit/step]   |
| 002  | Background Level   | *ENG | [512 to 1532 / <b>972</b> / 1 digit/step] |

|      |                             |  |  |
|------|-----------------------------|--|--|
| 4501 | <b>[ACC Target Density]</b> |  |  |
|      | Selects the ACC result.     |  |  |

|     |                 |      |   |
|-----|-----------------|------|---|
| 001 | Copy: Bk: Text  | *ENG | [0 to 10 / <b>5</b> / 1 /step]<br>10: Darkest density |
| 002 | Copy: M: Text   | *ENG |   |
| 003 | Copy: C: Text   | *ENG |   |
| 004 | Copy: Y: Text   | *ENG |   |
| 005 | Copy: Bk: Photo | *ENG |   |
| 006 | Copy: M: Photo  | *ENG |   |
| 007 | Copy: C: Photo  | *ENG |   |
| 008 | Copy: Y: Photo  | *ENG |   |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>4505</b> | <b>[ACC Offset: Light]</b>  |      |                                    |
|             | Adjusts the offset correction for light areas of the ACC pattern. |      |                                    |
| 001         | Self Machine: Bk  | *ENG | [-128 to 127 / <b>0</b> / 1 /step] |
| 002         | Self Machine: M   | *ENG |                                    |
| 003         | Self Machine: C   | *ENG |                                    |
| 004         | Self Machine: Y   | *ENG |                                    |
| 005         | Other Machine: Bk   | *ENG | Reserved                           |
| 006         | Other Machine: M  | *ENG |                                    |
| 007         | Other Machine: C  | *ENG |                                    |
| 008         | Other Machine: Y  | *ENG |                                    |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>4506</b> | <b>[ACC Offset: Dark]</b>  |      |                                    |
|             | Adjusts the offset correction for dark areas of the ACC pattern. |      |                                    |
| 001         | Self Machine: Bk   | *ENG | [-128 to 127 / <b>0</b> / 1 /step] |
| 002         | Self Machine: M  | *ENG |                                    |

|     |                   |      |          |
|-----|-------------------|------|----------|
| 003 | Self Machine: C   | *ENG | Reserved |
| 004 | Self Machine: Y   | *ENG |          |
| 005 | Other Machine: Bk | *ENG |          |
| 006 | Other Machine: M  | *ENG |          |
| 007 | Other Machine: C  | *ENG |          |
| 008 | Other Machine: Y  | *ENG |          |

|         |  |      |  |
|---------|--|------|--|
| 4540    | <b>[Printer Vector Correction]</b>   |      |  |
|         | This SP corrects the printer coverage of 12 hues (RY, YR, YG, etc. x 4 Colors [R, G, B, Option]) for a total of 48 parameters. |      |  |
| 001-004 | RY Phase: Option/R/G/B   | *ENG | Specifies the printer vector correction value.<br>[0 to 255 / 0 / 1 /step] |
| 005-008 | YR Phase: Option/R/G/B   |      |  |
| 009-012 | YG Phase: Option/R/G/B   |      |  |
| 013-016 | GY Phase: Option/R/G/B   |      |  |
| 017-020 | GC Phase: Option/R/G/B   |      |  |
| 021-024 | CG Phase: Option/R/G/B   |      |  |
| 025-028 | CB Phase: Option/R/G/B   |      |  |
| 029-032 | BC Phase: Option/R/G/B   |      |  |
| 033-036 | BM Phase: Option/R/G/B   |      |  |
| 037-040 | MB Phase: Option/R/G/B   |      |  |
| 041-044 | MR Phase: Option/R/G/B   |      |  |
| 045-048 | RM Phase: Option/R/G/B   |      |  |

|      |   |
|------|---|
| 4550 | <b>[Scanner Application: text/Printing] DFU</b> |
|------|---|

|      |  |      |  |
|------|--|------|--|
| 4551 | [Scanner Application: text] DFU  |      |  |
| 4552 | [Scanner Application: text (Drop Out Coor)] DFU  |      |  |
| 4553 | [Scanner Application: text·Photo] DFU  |      |  |
| 4554 | [Scanner Application: Photo] DFU   |      |  |
| 4565 | [Scanner Application: GrayScale] DFU   |      |  |
| 4570 | [Scanner Application: Color: Text·Photo] DFU   |      |  |
| 4571 | [Scanner Application: Color: Glossy Photo] DFU   |      |  |
| 4572 | [Scanner Application: AutoColor] DFU   |      |  |
| -005 | MTF: 0 (Off), 1-15<br>(Strong)   | *ENG | [0 to 15 / <b>8</b> / 1 /step]<br>0: MTF Off |
|      | Sets the MTF level (Modulation Transfer Function) designed to improve image contrast. Set higher for stronger effect, lower for weaker effect. |      |  |
| -006 | Smoothing: 0 (x1), 1-7<br>(Strong)   | *ENG | [0 to 7 / <b>4</b> / 1 /step]                |
|      | Use to remove "jaggies" if they appear. Set higher for smoother images.  |      |  |
| -007 | Brightness: 1–255  | *ENG | [1 to 255 / <b>128</b> / 1 /step]            |
|      | Set higher for darker, set lower for lighter.  |      |  |
| -008 | Contrast: 1–255  | *ENG | [1 to 255 / <b>128</b> / 1 /step]            |
|      | Set higher for more contrast, set lower for less contrast.   |      |  |
| -009 | Independent Dot Erase<br>(0), 1-7 (Strong)   | *ENG | [0 to 7 / <b>0</b> / 1 /step]                |
|      | Sets the erasure level of Irregular Dots. Set higher for stronger effect, lower for weaker effect.<br>0: Not activated                         |      |  |

|      |  |      |  |
|------|--|------|--|
| 4580 | [FAX Application: Text·Chart] DFU  |      |  |
| 4581 | [FAX Application: Text] DFU  |      |  |
| 4582 | [FAX Application: Text·Photo] DFU  |      |  |
| 4583 | [FAX Application: Photo] DFU   |      |  |
| 4584 | [FAX Application: Original 1] DFU  |      |  |
| 4585 | [FAX Application: Original 2] DFU  |      |  |
| -005 | MTF: 0 (Off), 1-15<br>(Strong)   | *ENG | [0 to 15 / <b>8</b> / 1 /step]<br>0: MTF Off |
|      | Sets the MTF level (Modulation Transfer Function) designed to improve image contrast. Set higher for stronger effect, lower for weaker effect.                                 |      |  |
| -006 | Smoothing: 0 (x1), 1-7<br>(Strong)   | *ENG | [0 to 7 / <b>4</b> / 1 /step]                |
|      | Use to remove "jaggies" if they appear. Set higher for smoother images.  |      |  |
| -007 | Brightness: 1–255  | *ENG | [1 to 255 / <b>128</b> / 1 /step]            |
|      | Set higher for darker, set lower for lighter.  |      |  |
| -008 | Contrast: 1–255  | *ENG | [1 to 255 / <b>128</b> / 1 /step]            |
|      | Set higher for more contrast, set lower for less contrast.   |      |  |
| -009 | Independent Dot Erase<br>(0), 1-7 (Strong)   | *ENG | [0 to 7 / <b>0</b> / 1 /step]                |
|      | Selects the contrast level for B/W the Text mode. Sets the erasure level of Irregular Dots. Set higher for stronger effect, lower for weaker effect.<br>0: Not activated       |      |  |
| -010 | Texture Erase: 0   | *ENG | [0 to 2 / <b>0</b> / 1 /step]                |
|      | Sets the erasure level of textures. Set higher for stronger effect, lower for weaker effect. This SP (suffix "-010") only exists in SP4580, 4582 and 4583.<br>0: Not activated |      |  |

|             |                              |   |                             |
|-------------|------------------------------|---|-----------------------------|
| <b>4600</b> | <b>[SBU Version Display]</b> |   |                             |
| 001         | -                            | - | Displays the ID of the SBU. |

|             |                                |   |   |
|-------------|--------------------------------|---|---|
| <b>4602</b> | <b>[Scanner Memory Access]</b> |   |   |
| 001         | Scanner Memory Access          | - | Enables the read and write check for the SBU registers. |
| 002         | Address Set                    | - | Not used  |
| 003         | Data Set                       | - |   |

|             |                        |   |                   |
|-------------|------------------------|---|-------------------|
| <b>4603</b> | <b>[AGC Execution]</b> |   |                   |
| 001         | HP Detection Enable    | - | Executes the AGC. |
| 002         | HP Detection Disable   | - | <b>DFU</b>        |

|             |                               |   |   |
|-------------|-------------------------------|---|---|
| <b>4604</b> | <b>[FGATE Open/Close] DFU</b> |   |   |
| 001         | -                             | - | Opens or closes the FGATE signal. This SP automatically returns to the default status (close) after exiting this SP.<br>[0 or 1 / <b>0</b> / 1/step]<br>0: OFF, 1: ON |

|             |                                      |      |  |
|-------------|--------------------------------------|------|--|
| <b>4606</b> | <b>[White Balance Target: R] DFU</b> |      |  |
| 001         | -                                    | *ENG | This value is the target value of red for the white level adjustment.<br>[0 to 1024 / <b>784</b> / 1 digit/step] |

|             |                                      |      |   |
|-------------|--------------------------------------|------|---|
| <b>4607</b> | <b>[White Balance Target: G] DFU</b> |      |   |
| 001         | -                                    | *ENG | This value is the target value of green for the white level adjustment. |



|  |  |  |   |
|--|--|--|---|
|  |  |  | [0 to 1024 / <b>784</b> / 1 digit/step] |
|--|--|--|---|

|             |                                      |      |   |
|-------------|--------------------------------------|------|---|
| <b>4608</b> | <b>[White Balance Target: B] DFU</b> |      |   |
| 001         | -                                    | *ENG | This value is the target value of blue for the white level adjustment.<br>[0 to 1024 / <b>784</b> / 1 digit/step] |

|             |   |   |   |
|-------------|---|---|---|
| <b>4623</b> | <b>[Black Level Fine Adj. Display]</b><br>RE: Red Even signal, RO: Red Odd signal |   |   |
| 001         | Latest: RE Color  | - | Displays the black offset value (rough adjustment) for the even red signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]           |
| 002         | Latest: RO Color  | - | Displays the black offset value (rough adjustment) for the odd red signal in the CCD circuit board (color printing speed).  |
| 003         | Latest: RE Color  | - | Displays the black offset value (fine adjustment) for the even red signal in the CCD circuit board (color printing speed).  |
| 004         | Latest: RO Color  | - | Displays the black offset value (fine adjustment) for the odd red signal in the CCD circuit board (color printing speed).   |
| 005         | Latest: RE BW   | - | Displays the black offset value (rough adjustment) for the even red signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step] |
| 006         | Latest: RO BW   | - | Displays the black offset value (rough adjustment) for the odd red signal in the CCD circuit board (black and white printing speed).  |

|     |               |   |  |
|-----|---------------|---|--|
| 007 | Latest: RE BW | - | Displays the black offset value (fine adjustment) for the even red signal in the CCD circuit board (black and white printing speed). |
| 008 | Latest: RO BW | - | Displays the black offset value (fine adjustment) for the odd red signal in the CCD circuit board (black and white printing speed).  |

|             |  |   |   |
|-------------|--|---|---|
| <b>4624</b> | <b>[Black Level Rough Adj. Display]</b><br>GE: Green Even signal, GO: Green Odd signal |   |   |
| 001         | Latest: GE Color   | - | Displays the black offset value (rough adjustment) for the even green signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]           |
| 002         | Latest: GO Color   | - | Displays the black offset value (rough adjustment) for the odd green signal in the CCD circuit board (color printing speed).  |
| 003         | Latest: GE Color   | - | Displays the black offset value (fine adjustment) for the even green signal in the CCD circuit board (color printing speed).  |
| 004         | Latest: GO Color   | - | Displays the black offset value (fine adjustment) for the odd green signal in the CCD circuit board (color printing speed).   |
| 005         | Latest: GE BW  | - | Displays the black offset value (rough adjustment) for the even green signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step] |

|     |               |   |  |
|-----|---------------|---|--|
| 006 | Latest: GO BW | - | Displays the black offset value (rough adjustment) for the odd green signal in the CCD circuit board (black and white printing speed). |
| 007 | Latest: GE BW | - | Displays the black offset value (fine adjustment) for the even green signal in the CCD circuit board (black and white printing speed). |
| 008 | Latest: GO BW | - | Displays the black offset value (fine adjustment) for the odd green signal in the CCD circuit board (black and white printing speed).  |

|             |  |   |  |
|-------------|--|---|--|
| <b>4625</b> | <b>[Black Level Rough Adj. Display]</b><br>BE: Blue Even signal, BO: Blue Odd signal |   |  |
| 001         | Latest: BE Color   | - | Displays the black offset value (rough adjustment) for the even blue signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step] |
| 002         | Latest: BO Color   | - | Displays the black offset value (rough adjustment) for the odd blue signal in the CCD circuit board (color printing speed).  |
| 003         | Latest: BE Color   | - | Displays the black offset value (fine adjustment) for the even blue signal in the CCD circuit board (color printing speed).  |
| 004         | Latest: BO Color   | - | Displays the black offset value (fine adjustment) for the odd blue signal in the CCD circuit board (color printing speed).   |
| 005         | Latest: BE BW  | - | Displays the black offset value (rough adjustment) for the even blue signal in the CCD circuit board (black and white printing   |

|     |               |   |   |
|-----|---------------|---|---|
|     |               |   | speed).<br>[0 to255 / <b>128</b> / 1 digit/step]  |
| 006 | Latest: BO BW | - | Displays the black offset value (rough adjustment) for the odd blue signal in the CCD circuit board (black and white printing speed). |
| 007 | Latest: BE BW | - | Displays the black offset value (fine adjustment) for the even blue signal in the CCD circuit board (black and white printing speed). |
| 008 | Latest: BO BW | - | Displays the black offset value (fine adjustment) for the odd blue signal in the CCD circuit board (black and white printing speed).  |

|             |  |   |                                      |
|-------------|--|---|--------------------------------------|
| <b>4628</b> | <b>[Gain Adjustment]</b>   |   |                                      |
|             | Displays the gain value of the amplifiers on the controller for Red. |   |                                      |
| 001         | Latest: RE Color   | - | [0 to 255 / <b>0</b> / 1 digit/step] |
| 002         | Latest: RO Color   | - |                                      |
| 003         | Latest: RE BW  | - |                                      |
| 004         | Latest: RO BW  | - |                                      |

|             |  |   |                                      |
|-------------|--|---|--------------------------------------|
| <b>4629</b> | <b>[Gain Adjustment]</b>   |   |                                      |
|             | Displays the gain value of the amplifiers on the controller for Green. |   |                                      |
| 001         | Latest: GE Color   | - | [0 to 255 / <b>0</b> / 1 digit/step] |
| 002         | Latest: GO Color   | - |                                      |
| 003         | Latest: GE BW  | - |                                      |

|     |               |   |  |
|-----|---------------|---|--|
| 004 | Latest: GO BW | - |  |
|-----|---------------|---|--|

|      |   |   |                                      |
|------|---|---|--------------------------------------|
| 4630 | <b>[Gain Adjustment]</b>  |   |                                      |
|      | Displays the gain value of the amplifiers on the controller for Blue. |   |                                      |
| 001  | Latest: BE Color  | - | [0 to 255 / <b>0</b> / 1 digit/step] |
| 002  | Latest: BO Color  | - |                                      |
| 003  | Latest: BE BW   | - |                                      |
| 004  | Latest: BO BW   | - |                                      |

|      |   |   |                                |
|------|---|---|--------------------------------|
| 4640 | <b>[Black Level Adj. Loop] Black Level Adjustment Loop Counter</b>  |   |                                |
|      | Displays the black level adjustment time for each mode.<br>The black level adjustment is done twice. The 1st adjustment decides the reference value for the 2nd adjustment. |   |                                |
| 001  | Adj. 1 Number: Color  | - | 1st adjustment                 |
| 002  | Adj. 1 Number: BW   | - | [0 to 20 / <b>0</b> / 1 /step] |
| 003  | Adj. 2 Number: Color  | - | 2nd adjustment                 |
| 004  | Adj. 2 Number: BW   | - | [0 to 20 / <b>0</b> / 1 /step] |

|      |  |   |                                |
|------|--|---|--------------------------------|
| 4641 | <b>[White Level Adj. Loop] White Level Adjustment Loop Counter</b> |   |                                |
|      | Displays the white level adjustment time for each mode.            |   |                                |
| 001  | Adj. Number: Color   | - | [0 to 20 / <b>0</b> / 1 /step] |
| 002  | Adj. Number: BW  | - |                                |

|      |   |  |  |
|------|---|--|--|
| 4646 | <b>[Scan Adj. Time Out Error]</b>   |  |  |
|      | Displays the result of the AGC adjustment.<br>If the AGC adjustment fails, SC141 (B/W mode) or SC142 (Color mode) |  |  |

|     |                           |   |  |
|-----|---------------------------|---|--|
|     | occurs.                   |   |  |
| 001 | Black Offset Correction 1 | - | [0 or 1 / <b>0</b> / 1/step]<br>0: OK, 1: AGC adjustment failure |
| 002 | Black Offset Correction 2 | - |  |
| 003 | White Offset Correction   | - |  |

|             |  |   |   |
|-------------|--|---|---|
| <b>4647</b> | <b>[Read Hard Error]</b>                         |   |   |
|             | Displays the result of the SBU connection check. |   |   |
| 001         | Power-ON   | - | [0 or 1 / <b>0</b> / 1/step]<br>0: OK, 1: SBU connection check failure<br>If the SBU connection check fails,<br>SC141-001, -002 or -003 occurs. |

|             |   |                                 |   |   |
|-------------|---|---------------------------------|---|---|
| <b>4654</b> | <b>[Black Level Fine Adj. Display]</b>  |                                 |   |   |
|             | RE: Red Even signal, RO: Red Odd signal |                                 |   |   |
|             | 001                                     | Last Correct Value: RE<br>Color | *ENG  | Displays the previous black offset value<br>(rough adjustment) for the even red signal<br>in the CCD circuit board (color printing<br>speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
|             | 002                                     | Last Correct Value: RO<br>Color | *ENG  | Displays the previous black offset value<br>(rough adjustment) for the odd red signal<br>in the CCD circuit board (color printing<br>speed).  |
|             | 003                                     | Last Correct Value: RE<br>Color | *ENG  | Displays the previous black offset value<br>(fine adjustment) for the even red signal in<br>the CCD circuit board (color printing<br>speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]  |
| 004         | Last Correct Value: RO<br>Color         | *ENG                            | Displays the previous black offset value<br>(fine adjustment) for the odd red signal in |   |

|     |                              |      |   |
|-----|------------------------------|------|---|
|     |                              |      | the CCD circuit board (color printing speed).   |
| 005 | Last Correct Value: RE<br>BW | *ENG | Displays the previous black offset value (rough adjustment) for the even red signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / 112 / 1 digit/step] |
| 006 | Last Correct Value: RO<br>BW | *ENG | Displays the previous black offset value (rough adjustment) for the odd red signal in the CCD circuit board (black and white printing speed).                                     |
| 007 | Last Correct Value: RE<br>BW | *ENG | Displays the previous black offset value (fine adjustment) for the even red signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / 128 / 1 digit/step]  |
| 008 | Last Correct Value: RO<br>BW | *ENG | Displays the previous black offset value (fine adjustment) for the odd red signal in the CCD circuit board (black and white printing speed).                                      |

|             |  |      |   |
|-------------|--|------|---|
| <b>4655</b> | <b>[Black Level Rough Adj. Display]</b><br>GE: Green Even signal, GO: Green Odd signal |      |   |
| 001         | Last Correct Value: GE<br>Color  | *ENG | Displays the previous black offset value (rough adjustment) for the even green signal in the CCD circuit board (color printing speed).<br>[0 to 255 / 112 / 1 digit/step] |
| 002         | Last Correct Value: GO<br>Color  | *ENG | Displays the previous black offset value (rough adjustment) for the odd green signal in the CCD circuit board (color printing speed).                                     |

|     |                                 |      |  |
|-----|---------------------------------|------|--|
| 003 | Last Correct Value: GE<br>Color | *ENG | Displays the previous black offset value (fine adjustment) for the even green signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]            |
| 004 | Last Correct Value: GO<br>Color | *ENG | Displays the previous black offset value (fine adjustment) for the odd green signal in the CCD circuit board (color printing speed).   |
| 005 | Last Correct Value: GE<br>BW    | *ENG | Displays the previous black offset value (rough adjustment) for the even green signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 006 | Last Correct Value: GO<br>BW    | *ENG | Displays the previous black offset value (rough adjustment) for the odd green signal in the CCD circuit board (black and white printing speed).  |
| 007 | Last Correct Value: GE<br>BW    | *ENG | Displays the previous black offset value (fine adjustment) for the even green signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]  |
| 008 | Last Correct Value: GO<br>BW    | *ENG | Displays the previous black offset value (fine adjustment) for the odd green signal in the CCD circuit board (black and white printing speed).   |

|             |  |      |   |
|-------------|--|------|---|
| <b>4656</b> | <b>[Black Level Rough Adj. Display]</b><br>BE: Blue Even signal, BO: Blue Odd signal |      |   |
| 001         | Last Correct Value: BE<br>Color  | *ENG | Displays the previous black offset value (rough adjustment) for the even blue |



|     |                                 |      |   |
|-----|---------------------------------|------|---|
|     |                                 |      | signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step]   |
| 002 | Last Correct Value: BO<br>Color | *ENG | Displays the previous black offset value (rough adjustment) for the odd blue signal in the CCD circuit board (color printing speed).  |
| 003 | Last Correct Value: BE<br>Color | *ENG | Displays the previous black offset value (fine adjustment) for the even blue signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]            |
| 004 | Last Correct Value: BO<br>Color | *ENG | Displays the previous black offset value (fine adjustment) for the odd blue signal in the CCD circuit board (color printing speed).   |
| 005 | Last Correct Value: BE<br>BW    | *ENG | Displays the previous black offset value (rough adjustment) for the even blue signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 006 | Last Correct Value: BO<br>BW    | *ENG | Displays the previous black offset value (rough adjustment) for the odd blue signal in the CCD circuit board (black and white printing speed).  |
| 007 | Last Correct Value: BE<br>BW    | *ENG | Displays the previous black offset value (fine adjustment) for the even blue signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]  |
| 008 | Last Correct Value: BO<br>BW    | *ENG | Displays the previous black offset value (fine adjustment) for the odd blue signal in   |

|  |  |  |   |
|--|--|--|---|
|  |  |  | the CCD circuit board (black and white printing speed). |
|--|--|--|---|

|             |   |      |                               |
|-------------|---|------|-------------------------------|
| <b>4658</b> | <b>[Gain Adjustment]</b>  |      |                               |
|             | Displays the previous gain value of the amplifiers on the controller for Red. |      |                               |
| 001         | Last Correct Value: RE<br>Color   | *ENG | [0 to 255 / 0 / 1 digit/step] |
| 002         | Last Correct Value: RO<br>Color   | *ENG |                               |
| 003         | Last Correct Value: RE<br>BW  | *ENG |                               |
| 004         | Last Correct Value: RO<br>BW  | *ENG |                               |

|             |   |      |                               |
|-------------|---|------|-------------------------------|
| <b>4659</b> | <b>[Gain Adjustment]</b>  |      |                               |
|             | Displays the previous gain value of the amplifiers on the controller for Green. |      |                               |
| 001         | Last Correct Value: GE<br>Color   | *ENG | [0 to 255 / 0 / 1 digit/step] |
| 002         | Last Correct Value: GO<br>Color   | *ENG |                               |
| 003         | Last Correct Value: GE<br>BW  | *ENG |                               |
| 004         | Last Correct Value: GO<br>BW  | *ENG |                               |

|             |  |  |  |
|-------------|--|--|--|
| <b>4660</b> | <b>[Gain Adjustment]</b>   |  |  |
|             | Displays the previous gain value of the amplifiers on the controller for Blue. |  |  |

|     |                                 |      |                                      |
|-----|---------------------------------|------|--------------------------------------|
| 001 | Last Correct Value: BE<br>Color | *ENG | [0 to 255 / <b>0</b> / 1 digit/step] |
| 002 | Last Correct Value: BO<br>Color | *ENG |                                      |
| 003 | Last Correct Value: BE<br>BW    | *ENG |                                      |
| 004 | Last Correct Value: BO<br>BW    | *ENG |                                      |

|             |  |      |  |
|-------------|--|------|--|
| <b>4661</b> | <b>[Black Level 2 Rough Adj. Display]</b><br>RE: Red Even signal, RO: Red Odd signal |      |  |
| 001         | Last Correct Value: RE<br>Color  | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the even red signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 002         | Last Correct Value: RO<br>Color  | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the odd red signal in the CCD circuit board (color printing speed).  |
| 003         | Last Correct Value: RE<br>Color  | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the even red signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]  |
| 004         | Last Correct Value: RO<br>Color  | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the odd red signal in the CCD circuit board (color printing speed).   |
| 005         | Last Correct Value: RE<br>BW   | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the even red   |

|     |                              |      |   |
|-----|------------------------------|------|---|
|     |                              |      | signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step]   |
| 006 | Last Correct Value: RO<br>BW | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the odd red signal in the CCD circuit board (black and white printing speed).   |
| 007 | Last Correct Value: RE<br>BW | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the even red signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step] |
| 008 | Last Correct Value: RO<br>BW | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the odd red signal in the CCD circuit board (black and white printing speed).  |

|             |  |      |  |
|-------------|--|------|--|
| <b>4662</b> | <b>[Black Level 2 Rough Adj. Display]</b><br>GE: Green Even signal, GO: Green Odd signal |      |  |
| 001         | Last Correct Value: GE<br>Color  | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the even green signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 002         | Last Correct Value: GO<br>Color  | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the odd green signal in the CCD circuit board (color printing speed).  |
| 003         | Last Correct Value: GE<br>Color  | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the even green signal in the CCD circuit board (color printing speed).  |

|     |                                 |      |  |
|-----|---------------------------------|------|--|
|     |                                 |      | [0 to 255 / <b>128</b> / 1 digit/step]   |
| 004 | Last Correct Value: GO<br>Color | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the odd green signal in the CCD circuit board (color printing speed).   |
| 005 | Last Correct Value: GE<br>BW    | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the even green signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 006 | Last Correct Value: GO<br>BW    | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the odd green signal in the CCD circuit board (black and white printing speed).  |
| 007 | Last Correct Value: GE<br>BW    | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the even green signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]  |
| 008 | Last Correct Value: GO<br>BW    | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the odd green signal in the CCD circuit board (black and white printing speed).   |

|             |  |      |   |
|-------------|--|------|---|
| <b>4663</b> | <b>[Black Level 2 Rough Adj. Display]</b><br>BE: Blue Even signal, BO: Blue Odd signal |      |   |
| 001         | Last Correct Value: BE<br>Color  | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the even blue signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |

|     |                                 |      |   |
|-----|---------------------------------|------|---|
| 002 | Last Correct Value: BO<br>Color | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the odd blue signal in the CCD circuit board (color printing speed).  |
| 003 | Last Correct Value: BE<br>Color | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the even blue signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]            |
| 004 | Last Correct Value: BO<br>Color | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the odd blue signal in the CCD circuit board (color printing speed).   |
| 005 | Last Correct Value: BE<br>BW    | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the even blue signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 006 | Last Correct Value: BO<br>BW    | *ENG | Displays the previous 2nd black offset value (rough adjustment) for the odd blue signal in the CCD circuit board (black and white printing speed).  |
| 007 | Last Correct Value: BE<br>BW    | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the even blue signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]  |
| 008 | Last Correct Value: BO<br>BW    | *ENG | Displays the previous 2nd black offset value (fine adjustment) for the odd blue signal in the CCD circuit board (black and white printing speed).   |

|      |  |      |   |
|------|--|------|---|
| 4673 | <b>[Black Level Rough Adj. Display]</b><br>RE: Red Even signal, RO: Red Odd signal |      |   |
| 001  | Factory Setting: RE Color  | *ENG | Displays the factory setting values of the black level adjustment for the even red signal in the CCD circuit board (color printing speed)..<br>[0 to 255 / <b>112</b> / 1 digit/step]                             |
| 002  | Factory Setting: RO Color  | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the odd red signal in the CCD circuit board (color printing speed).  |
| 003  | Factory Setting: RE Color  | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the even red signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]            |
| 004  | Factory Setting: RO Color  | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the odd red signal in the CCD circuit board (color printing speed).   |
| 005  | Factory Setting: RE BW   | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the even red signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 006  | Factory Setting: RO BW   | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the odd red signal in the CCD circuit board (black and white printing speed).  |
| 007  | Factory Setting: RE BW   | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the even red signal in the CCD circuit board  |

|     |                        |      |   |
|-----|------------------------|------|---|
|     |                        |      | (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]   |
| 008 | Factory Setting: RO BW | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the odd red signal in the CCD circuit board (black and white printing speed). |

|             |  |      |   |
|-------------|--|------|---|
| <b>4674</b> | <b>[Black Level Rough Adj. Display]</b><br>GE: Green Even signal, GO: Green Odd signal |      |   |
| 001         | Factory Setting: GE Color  | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the even green signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step]           |
| 002         | Factory Setting: GO Color  | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the odd green signal in the CCD circuit board (color printing speed).  |
| 003         | Factory Setting: GE Color  | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the even green signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]            |
| 004         | Factory Setting: GO Color  | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the odd green signal in the CCD circuit board (color printing speed).   |
| 005         | Factory Setting: GE BW   | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the even green signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |



|     |                        |      |  |
|-----|------------------------|------|--|
| 006 | Factory Setting: GO BW | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the odd green signal in the CCD circuit board (black and white printing speed).   |
| 007 | Factory Setting: GE BW | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the even green signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step] |
| 008 | Factory Setting: GO BW | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the odd green signal in the CCD circuit board (black and white printing speed).  |

|             |  |      |  |
|-------------|--|------|--|
| <b>4675</b> | <b>[Black Level Rough Adj. Display]</b><br>BE: Blue Even signal, BO: Blue Odd signal |      |  |
| 001         | Factory Setting: BE Color  | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the even blue signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 002         | Factory Setting: BO Color  | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the odd blue signal in the CCD circuit board (color printing speed).  |
| 003         | Factory Setting: BE Color  | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the even blue signal in the CCD circuit board (color printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]  |
| 004         | Factory Setting: BO Color  | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for  |

|     |                        |      |  |
|-----|------------------------|------|--|
|     |                        |      | the odd blue signal in the CCD circuit board (color printing speed).   |
| 005 | Factory Setting: BE BW | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the even blue signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>112</b> / 1 digit/step] |
| 006 | Factory Setting: BO BW | *ENG | Displays the factory setting values of the black level adjustment (rough adjustment) for the odd blue signal in the CCD circuit board (black and white printing speed).  |
| 007 | Factory Setting: BE BW | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the even blue signal in the CCD circuit board (black and white printing speed).<br>[0 to 255 / <b>128</b> / 1 digit/step]  |
| 008 | Factory Setting: BO BW | *ENG | Displays the factory setting values of the black level adjustment (fine adjustment) for the odd blue signal in the CCD circuit board (black and white printing speed).   |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>4677</b> | <b>[Gain Adjustment]</b>  |      |                                      |
|             | Displays the factory setting values of the gain adjustment for Red. |      |                                      |
| 001         | Factory Setting: RE Color   | *ENG | [0 to 255 / <b>0</b> / 1 digit/step] |
| 002         | Factory Setting: RO Color   | *ENG |                                      |
| 003         | Factory Setting: RE BW  | *ENG |                                      |
| 004         | Factory Setting: RO BW  | *ENG |                                      |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>4678</b> | <b>[Gain Adjustment]</b>  |      |                                      |
|             | Displays the factory setting values of the gain adjustment for Green. |      |                                      |
| 001         | Factory Setting: GE Color   | *ENG | [0 to 255 / <b>0</b> / 1 digit/step] |
| 002         | Factory Setting: GO Color   | *ENG |                                      |
| 003         | Factory Setting: GE BW  | *ENG |                                      |
| 004         | Factory Setting: GO BW  | *ENG |                                      |

|             |  |      |                                      |
|-------------|--|------|--------------------------------------|
| <b>4679</b> | <b>[Gain Adjustment]</b>   |      |                                      |
|             | Displays the factory setting values of the gain adjustment for Blue. |      |                                      |
| 001         | Factory Setting: BE Color  | *ENG | [0 to 255 / <b>0</b> / 1 digit/step] |
| 002         | Factory Setting: BO Color  | *ENG |                                      |
| 003         | Factory Setting: BE BW   | *ENG |                                      |
| 004         | Factory Setting: BO BW   | *ENG |                                      |

|             |  |      |  |
|-------------|--|------|--|
| <b>4685</b> | <b>[Gray Balance Set: R] DFU</b>                                   |      |  |
|             | Adjusts the gray balance of the red signal for each scanning mode. |      |  |
| 001         | Book Read  | *ENG | [-512 to 511 / <b>-240</b> / 1 digit/step] |
| 002         | DF Read  | *ENG |  |

|             |  |      |  |
|-------------|--|------|--|
| <b>4686</b> | <b>[Gray Balance Set: G] DFU</b>                                     |      |  |
|             | Adjusts the gray balance of the green signal for each scanning mode. |      |  |
| 001         | Book Read  | *ENG | [-512 to 511 / <b>-240</b> / 1 digit/step] |
| 002         | DF Read  | *ENG |  |

|             |   |      |  |
|-------------|---|------|--|
| <b>4687</b> | <b>[Gray Balance Set: B] DFU</b>                                    |      |  |
|             | Adjusts the gray balance of the blue signal for each scanning mode. |      |  |
| 001         | Book Read   | *ENG | [-512 to 511 / <b>-240</b> / 1 digit/step] |
| 002         | DF Read   | *ENG |  |

|             |  |      |                                       |
|-------------|--|------|---------------------------------------|
| <b>4688</b> | <b>[DF: Density Adjustment]</b>  |      |                                       |
|             | Adjusts the white shading parameter when scanning an image with the ARDF.<br>Adjusts the density level if the ID of outputs made in the DF and Platen mode is different. |      |                                       |
| 001         | -  | *ENG | [50 to 150 / <b>109</b> / 1 %/ step ] |

|             |  |   |                                       |
|-------------|--|---|---------------------------------------|
| <b>4690</b> | <b>[White Level Peak Read]</b>                       |   |                                       |
|             | Displays the peak level of the white level scanning. |   |                                       |
| 001         | RE   | - | [0 to 1024 / <b>0</b> / 1 digit/step] |
| 002         | RO   | - |                                       |
| 003         | RE: Bk   | - |                                       |
| 004         | RO: Bk   | - |                                       |

|             |  |   |                                       |
|-------------|--|---|---------------------------------------|
| <b>4691</b> | <b>[White Level Peak Read]</b>                       |   |                                       |
|             | Displays the peak level of the white level scanning. |   |                                       |
| 001         | GE   | - | [0 to 1024 / <b>0</b> / 1 digit/step] |
| 002         | GO   | - |                                       |
| 003         | GE: Bk   | - |                                       |
| 004         | GO: Bk   | - |                                       |

|             |  |   |                                       |
|-------------|--|---|---------------------------------------|
| <b>4692</b> | <b>[White Level Peak Read]</b>                       |   |                                       |
|             | Displays the peak level of the white level scanning. |   |                                       |
| 001         | BE   | - | [0 to 1024 / <b>0</b> / 1 digit/step] |
| 002         | BO   | - |                                       |
| 003         | BE: Bk   | - |                                       |
| 004         | BO: Bk   | - |                                       |

|             |  |   |                                       |
|-------------|--|---|---------------------------------------|
| <b>4693</b> | <b>[Black Level Peak Read]</b>                       |   |                                       |
|             | Displays the peak level of the black level scanning. |   |                                       |
| 001         | RE   | - | [0 to 1024 / <b>0</b> / 1 digit/step] |
| 002         | RO   | - |                                       |
| 003         | RE: Bk   | - |                                       |
| 004         | RO: Bk   | - |                                       |

|             |  |   |                                       |
|-------------|--|---|---------------------------------------|
| <b>4694</b> | <b>[Black Level Peak Read]</b>                       |   |                                       |
|             | Displays the peak level of the black level scanning. |   |                                       |
| 001         | GE   | - | [0 to 1024 / <b>0</b> / 1 digit/step] |
| 002         | GO   | - |                                       |
| 003         | GE: Bk   | - |                                       |
| 004         | GO: Bk   | - |                                       |

|             |  |   |                                       |
|-------------|--|---|---------------------------------------|
| <b>4695</b> | <b>[Black Level Peak Read]</b>                       |   |                                       |
|             | Displays the peak level of the black level scanning. |   |                                       |
| 001         | BE   | - | [0 to 1024 / <b>0</b> / 1 digit/step] |

|     |        |   |  |
|-----|--------|---|--|
| 002 | BO     | - |  |
| 003 | BE: Bk | - |  |
| 004 | BO: Bk | - |  |

|             |                             |   |   |
|-------------|-----------------------------|---|---|
| <b>4802</b> | <b>[DF Shading FreeRun]</b> |   |   |
| 001         | Lamp ON                     | - | Executes the scanner free run of shading movement with exposure lamp on or off. Press "OFF" to stop this free run. Otherwise, the free run lasts. |
| 002         | Lamp OFF                    |   |   |

|             |                        |   |                                    |
|-------------|------------------------|---|------------------------------------|
| <b>4804</b> | <b>[Home Position]</b> |   |                                    |
| 001         | Lamp ON                | - | Executes the scanner HP detection. |

|             |                        |   |   |
|-------------|------------------------|---|---|
| <b>4806</b> | <b>[Carriage Save]</b> |   |   |
| 001         | Lamp ON                | - | Moves the carriage from the scanner home position. Dust may fall through the DF exposure glass. Therefore, do this SP when you transport the machine a long distance. |

|             |   |      |                                |
|-------------|---|------|--------------------------------|
|             | <b>[ACC Data Display]</b>   |      |                                |
| <b>4902</b> | This SP outputs the final data read at the end of ACC execution. A zero is returned if there was an error reading the data.<br>[0 to 255 / 0 / 1 /step] |      |                                |
| 001         | R DATA1   | *ENG | Photo C Patch Level 1 (8-bit)  |
| 002         | G DATA1   | *ENG | Photo M Patch Level 1 (8-bit)  |
| 003         | B DATA1   | *ENG | Photo Y Patch Level 1 (8-bit)  |
| 004         | R DATA2   | *ENG | Photo C Patch Level 17 (8-bit) |

|     |         |      |                                |
|-----|---------|------|--------------------------------|
| 005 | G DATA2 | *ENG | Photo M Patch Level 17(8-bit)  |
| 006 | B DATA2 | *ENG | Photo Y Patch Level 17 (8-bit) |

|             |                                 |   |   |
|-------------|---------------------------------|---|---|
| <b>4904</b> | <b>[Scanner IPU Board Test]</b> |   |   |
| 001         | Test1                           | - | Bit0: TAURUS register<br>Bit1: ORION register<br>Bit2: LUPUS register<br>Bit3: Not used<br>Bit4: Strix register<br>Bit5 to 15: Not used<br>0: OK, 1: Error  |
|             |                                 |   | Performs a write and read check of the ASICs on the BICU board and displays the result.   |
| 002         | Test2                           | - | Bit0: Image path from SBU to TAURUS<br>Bit1: Image path from TAURUS to ORION<br>Bit2: Image path from ORION to TAURUS<br>Bit3: Image path from TAURUS to LUPUS<br>Bit4: Image path from LUPUS to Strix<br>Bit5: Image path from Strix to GAVD<br>Bit6 and 15: Not used<br>0: OK, 1: Error |
|             |                                 |   | Performs an image path check on the BICU board and displays the result.   |

|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>4905</b> | <b>[Dither Selection] DFU</b>               |      |                                     |
|             | Changes the parameters for error diffusion. |      |                                     |
| 4905 1      | Dither Selection                            | *ENG | [0 to 255 / 0 / 1 /step] <b>DFU</b> |

|   |                                  |   |  |
|---|----------------------------------|---|--|
| <b>4907</b>   | <b>[SBU Test Pattern Change]</b> |   |  |
| 4907 1  | Test Pattern: R                  | - | [0 to 255 / <b>0</b> / 1 /step]<br>0: Default (Scanning Image)<br>1: Grid pattern<br>2: Gradation main scan<br>3: Gradation sub scan<br>4 to 250: Default (Scanning Image) |
| Selects the test pattern generated by the controller board. |                                  |   |  |

|             |   |      |  |
|-------------|---|------|--|
| <b>4918</b> | <b>[Manual Gamma Adj.]</b>  |      |  |
|             | Adjusts the offset data of the printer gamma for yellow in Photo mode.<br>See "Replacement and Adjustment – Gamma Correction – Copy Mode" for how to use. |      |  |
| 001         | Offset: Highlight   | *ENG | [0 to 30 / <b>15</b> / 1 /step]  |
| 002         | Offset: Middle  |      |  |
| 003         | Offset: Shadow  |      |  |
| 004         | Offset: IDmax   |      |  |
|             | Adjusts the option data of the printer gamma for yellow in Photo mode.  |      |  |
| 005         | Option: Highlight   | *ENG | [0 to 255 / <b>0</b> / 1 /step] <b>DFU</b>   |
| 006         | Option: Middle  |      |  |
| 007         | Option: Shadow  |      |  |
| 008         | Option: IDmax   |      |  |
| 009         | Change  | -    | Enter the manual gamma adjustment screen (-001 to 008). For details, see the "Printer Gamma Correction" in the section "Replace and Adjustment". |



|      |   |      |                                |
|------|---|------|--------------------------------|
| 4991 | <b>[IPU Image Pass Selection ]</b>  |      |                                |
|      | Selects the image path.<br>Enter the number to be selected using the 10-key pad.  |      |                                |
| 001  | RGB Frame Memory  | *ENG | [0 to 9 / <b>5</b> / 1 /step ] |
|      | 0: Scanner input RGB images<br>1: Scanner I/F RGB images<br>2: RGB images done by Shading correction (Shading ON, Black offset ON)<br>3: Shading data<br>4: Inner pattern data: Gray scale<br>5: RGB images done by Line skipping correction<br>6: RGB images done by Digital AE<br>7: RGB images done by Vertical line correction<br>8: RGB image done by Scanner gamma correction<br>9: RGB image done by Filtering correction<br>10: RGB images done by Full color ADS<br>11: RGB image done by Color correction |      |                                |

|      |                                |      |  |
|------|--------------------------------|------|--|
| 4993 | <b>[High Light Correction]</b> |      |  |
| 001  | Sensitivity Selection          | *ENG | Selects the Highlight correction level.<br>[0 to 9 / <b>4</b> / 1 /step]<br>0: weakest sensitivity<br>9: strongest sensitivity                   |
| 002  | Range Selection                | *ENG | Selects the range level of Highlight correction.<br>[0 to 9 / <b>4</b> / 1 /step]<br>0: weakest skew correction,<br>9: strongest skew correction |

|      |   |      |                               |
|------|---|------|-------------------------------|
| 4994 | <b>[Text/Photo Detection Level Adj.]</b>                                      |      |                               |
|      | Selects the definition level between Text and Photo for high compression PDF. |      |                               |
| 001  | PDF Sensitivity Level   | *ENG | [0 to 2 / <b>1</b> / 1 /step] |

|  |            |  |  |
|--|------------|--|--|
|  | text/photo |  | 0: Text priority<br>1: Normal<br>2: Photo priority |
|--|------------|--|--|

SP5-XXX (Mode)

|      |  |      |                                      |
|------|--|------|--------------------------------------|
| 5024 | <b>[mm/inch Display Selection]</b>                 |      |                                      |
|      | Display units (mm or inch) for custom paper sizes. |      |                                      |
| 001  | 0:mm 1:inch  | *CTL | 0: mm (Europe/Asia)<br>1: inch (USA) |

|      |   |      |  |
|------|---|------|--|
| 5045 | <b>[Accounting Counter]</b>   |      |  |
|      | Selects the counting method.<br><b>NOTE:</b> The counting method can be changed only once, regardless of whether the counter value is negative or positive. |      |  |
| 001  | Counter Method  | *CTL | [0 or 1 / <b>0</b> / - ]<br>0: Developments<br>1: Prints |

|      |   |      |   |
|------|---|------|---|
| 5047 | <b>[Paper Display]</b>                                |      |   |
|      | Turns on or off the printed paper display on the LCD. |      |   |
| 001  | -   | *CTL | [0 or 1 / <b>0</b> / - ]<br>0: OFF, 1: ON |

|        |   |      |  |
|--------|---|------|--|
| 5051   | <b>[Toner Refill Detection Display]</b>                 |      |  |
|        | Enables or disables the toner refill detection display. |      |  |
| 5051 1 | Toner Refill Detection Display                          | *CTL | [0 or 1 / <b>0</b> / - ] Alphanumeric<br>0: ON<br>1: OFF |

|      |  |      |   |
|------|--|------|---|
| 5055 | <b>[Display IP Address]</b>                            |      |   |
|      | Display or does not display the IP address on the LCD. |      |   |
| 001  | -  | *CTL | [0 or 1 / <b>0</b> / -]<br>0: Not display, 1: Display |

|      |  |      |   |
|------|--|------|---|
| 5056 | <b>[Coverage Counter Display]</b>                            |      |   |
|      | Display or does not display the coverage counter on the LCD. |      |   |
| 001  | -  | *CTL | [0 or 1 / <b>0</b> / -]<br>0: Not display, 1: Display |

|      |   |      |   |
|------|---|------|---|
| 5057 | <b>[Eye Catch Icon ON/OFF]</b>                              |      |   |
|      | Display or does not display the color mode icon on the LCD. |      |   |
| 001  | -   | *CTL | [0 or 1 / <b>1</b> / -]<br>0: Not display, 1: Display |

|      |  |      |   |
|------|--|------|---|
| 5061 | <b>[Toner Remaining Icon Display]</b>                                    |      |   |
|      | Display or does not display the remaining toner display icon on the LCD. |      |   |
| 001  | -  | *CTL | [0 or 1 / <b>0</b> / -]<br>0: Not display, 1: Display |

|      |   |      |  |
|------|---|------|--|
| 5062 | <b>[Parts PM Display Setting]</b>   |      |  |
|      | Display or does not display the PM part yield on the LCD. <b>Not used in this model</b> |      |  |
| 001  | -   | *CTL | [0 or 1 / <b>1</b> / -]<br>0: ON, 1: OFF |

|        |  |      |  |
|--------|--|------|--|
| 5104   | <b>[A3/DLT Double Count] SSP</b>   |      |  |
|        | Specifies whether the counter is double clicked for A3/DLT size prints.<br>When you have to change this SP, ask your supervisor. |      |  |
| 5104 1 | Double Count   | *CTL | [0 to 2 / 0 / 1 /step]<br>0: Normal count<br>1: Double count<br>2: Normal count for unknown size |

|      |   |  |  |
|------|---|--|--|
| 5112 | <b>[Non-Std. Paper Sel.] Non-Standard Paper Selection</b>   |  |  |
| 001  | Determines whether a non-standard paper size can be input for the universal cassette trays (Tray 2, and Optional paper tray unit trays 1 and 2)<br>[0 or 1/ 0 / - ]<br>0: OFF<br>1: ON, If "1" is selected, the customer will be able to input a non-standard paper size using the UP mode. |  |  |

|      |                                |      |   |
|------|--------------------------------|------|---|
| 5113 | <b>[Optional Counter Type]</b> |      |   |
| 001  | Default Optional Counter Type  | *CTL | This program specifies the counter type.<br><b>0: None</b> , 1: Key card (RK 3, 4)<br>2: Key card (down), 3: Prepaid card<br>4: Coin rack, 5: MF key card<br>8: Key counter + Vendor<br>9: Bar-code Printer |
| 002  | External Optional Counter Type | *CTL | This program specifies the external counter type.<br><b>0: None</b><br>1: Expansion Device 1<br>2: Expansion Device 2<br>3: Expansion Device 3  |

|      |                          |      |                                |
|------|--------------------------|------|--------------------------------|
| 5118 | <b>[Disable Copying]</b> | *CTL | [0: Not disabled/ 1: Disabled] |
|------|--------------------------|------|--------------------------------|

|     |                                |  |  |
|-----|--------------------------------|--|--|
| 001 | This program disables copying. |  |  |
|-----|--------------------------------|--|--|

|             |   |      |  |
|-------------|---|------|--|
| <b>5120</b> | <b>[Mode Clear Opt. Counter Removal]</b>  | *CTL | [0: <b>Yes (removed)</b> / 1: Standby (installed but not used)/ 2: No (not removed)] |
| 001         | This program updates the information on the optional counter. When you install or remove an optional counter, check the settings. |      |  |

|             |  |      |                            |
|-------------|--|------|----------------------------|
| <b>5121</b> | <b>[Counter Up Timing]</b>   | *CTL | [0: <b>Feed</b> / 1: Exit] |
| 001         | This program specifies when the counter goes up. The settings refer to “paper feed” and “paper exit” respectively. |      |                            |

|             |                                  |      |   |
|-------------|----------------------------------|------|---|
| <b>5126</b> | <b>[F Size Original Setting]</b> | *ENG | [0 to 2 / <b>0</b> / 1 /step]<br>0: 8 1/2" x 13" (Foolscap)<br>1: 8 1/4" x 13" (Folio)<br>2: 8" x 13" (F) |
| 001         | Selects F size original setting. |      |   |

|             |                                |      |                                |
|-------------|--------------------------------|------|--------------------------------|
| <b>5127</b> | <b>[APS Mode]</b>              | *CTL | [0: Not disabled/ 1: Disabled] |
| 001         | This program disables the APS. |      |                                |

|             |   |      |   |
|-------------|---|------|---|
| <b>5128</b> | <b>[Code Mode With Key/Card Option]</b> | *CTL | - |
| 001         | <b>DFU</b>                              |      |   |

|             |   |      |                                |
|-------------|---|------|--------------------------------|
| <b>5131</b> | <b>[Paper Size Type Selection]</b>  | *ENG | [0: JP (Japan)/ 1: NA / 2: EU] |
| 001         | The program selects a paper size system from the following alternatives: the AB system (0), the LT system (1), and the AF system (2). |      |                                |

|             |  |      |                 |
|-------------|--|------|-----------------|
| <b>5150</b> | <b>[By-Pass Length Setting]</b>  | *CTL | [0: OFF/ 1: ON] |
| 001         | Determines whether the transfer sheet from the by-pass tray is used or not. Normally the paper length for sub scanning paper from the by-pass tray is limited to 600 mm, but this can be extended with this SP to 1260 mm. |      |                 |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>5162</b> | <b>[App. Switch Method]</b>  | *CTL | [0: Soft Key Set/ 1: Hard Key Set] |
| 001         | This program specifies the switch that selects an application program. |      |                                    |

|             |   |      |  |
|-------------|---|------|--|
| <b>5167</b> | <b>[Fax Printing Mode at Optional]</b>  |      |  |
|             | Enables or disables the automatic print out without an accounting device. This SP is used when the receiving fax is accounted by an external accounting device. |      |  |
| 001         | Fax Printing Mode at Optional Counter Off   | *CTL | [0 or 1 / 0 / - ]<br>0: Automatic printing<br>1: No automatic printing |

|             |   |      |  |
|-------------|---|------|--|
| <b>5169</b> | <b>[CE Login]</b>   |      |  |
|             | If you will change the printer bit switches, you must 'log in' to service mode with this SP before you go into the printer SP mode. |      |  |
| 001         | CE Login  | *CTL | [0 or 1 / 0 / - ]<br>0: Disabled<br>1: Enabled |





|      |  |      |  |
|------|--|------|--|
| 5179 | <b>[By-pass Size Error Detection]</b>                |      |  |
|      | Turns on or off the by-pass tray size error message. |      |  |
| 001  | -  | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: OFF<br>1: ON (Paper size error message is displayed when the paper jam occurs due to the wrong direction of set paper in by-pass mode.) |

|      |                                       |      |   |
|------|---------------------------------------|------|---|
| 5181 | <b>[Size Adjust]</b>                  |      |   |
|      | Adjusts the paper size for each tray. |      |   |
| 001  | TRAY 1                                | *ENG | [0 to 3 / <b>0 (NA/ASIA), 1 (EU)</b> / 1 /step]<br>0: A4 LEF, 1: LT LEF, 2: B5 LEF, 3: A5 LEF |
| 002  | TRAY 2: 1                             | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: A4 LEF, 1: LT LEF                            |
| 003  | TRAY 2: 2                             | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: A3, 1: LT                                    |
| 004  | TRAY 2: 3                             | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: B4, 1: LG                                    |
| 005  | TRAY 2: 4                             | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: B5 LEF, 1: Exe LEF                           |
| 006  | TRAY 3: 1 (LCT)                       | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: A4 LEF, 1: LT LEF                            |

|     |                 |      |   |
|-----|-----------------|------|---|
| 007 | TRAY 3: 2 (LCT) | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: A3, 1: DLT         |
| 008 | TRAY 3: 3 (LCT) | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: B4, 1: LG          |
| 009 | TRAY 3: 4 (LCT) | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: B5 LEF, 1: Exe LEF |
| 010 | TRAY 4: 1       | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: A4 LEF, 1: LT LEF  |
| 011 | TRAY 4: 2       | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: A3, 1: DLT         |
| 012 | TRAY 4: 3       | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: B4, 1: LG          |
| 013 | TRAY 4: 4       | *ENG | [0 or 1 / <b>0 (NA/ASIA), 1 (EU)</b> / - ]<br>0: B5 LEF, 1: Exe LEF |


|             |   |      |   |
|-------------|---|------|---|
| <b>5186</b> | <b>[RK 4]</b>   |      |   |
|             | Enables or disables the prevention for RK4 (accounting device) disconnection. If the RK4 is disconnected for 10 seconds when this SP is set to "1 (Enable)", the machine automatically jams a sheet of paper and stops. |      |   |
| 001         | -   | *ENG | [0 or 1 / <b>0</b> / 1/step]<br>0: Disable<br>1: Enable |

|             |   |      |                                    |
|-------------|---|------|------------------------------------|
| <b>5212</b> | <b>[Page Numbering]</b>   | *CTL |                                    |
|             | This program adjusts the position of the second side page numbers. A "- value" moves the page number positions to the left edge. A "+ value" moves the page number positions to the right edge. |      |                                    |
| 003         | Duplex Printout Right/Left Position   |      | [-10 to 10 / <b>0</b> / 1 mm/step] |



|     |                                   |  |                                    |
|-----|-----------------------------------|--|------------------------------------|
| 004 | Duplex Printout High/Low Position |  | [-10 to 10 / <b>0</b> / 1 mm/step] |
|-----|-----------------------------------|--|------------------------------------|

|      |  |        |  |
|------|--|--------|--|
| 5302 | <b>[Set Time]</b>  |        |  |
|      | Adjusts the RTC (real time clock) time setting for the local time zone.<br>Examples: For Japan (+9 GMT), enter 540 (9 hours x 60 min.)<br>DOM: +540 (Tokyo)<br>NA: -300 (New York)<br>EU: + 60 (Paris)<br>CH: +480 (Peking)<br>TW: +480 (Taipei)<br>AS: +480 (Hong Kong) |        |  |
| 002  | Time Difference  | *CTL # | [-1440 to 1440 / <b>Area</b> / 1 min./step ] |

|      |  |  |  |
|------|--|--|--|
| 5307 | <b>[Summer Time]</b>   |  |  |
| 001  | Setting  |  | [ 0 to 1 / <b>NA, EU, ASIA</b> / 1 /step]<br>0: Disabled<br>1: Enabled<br>NA and EUR: 1, ASIA: 0 |
|      | Enables or disables the summer time mode.<br> <ul style="list-style-type: none"> <li>Make sure that both SP5-307-3 and -4 are correctly set. Otherwise, this SP is not activated even if this SP is set to "1".</li> </ul>  |  |  |
| 003  | Rule Set (Start)   |  |  |
|      | Specifies the start setting for the summer time mode.<br>There are 8 digits in this SP. For months 1 to 9, the "0" cannot be input in the first digit, so the eight-digit setting for -2 or -3 becomes a seven-digit setting.<br>1st and 2nd digits: The month. [1 to 12]<br>3rd digit: The week of the month. [1 to 5]<br>4th digit: The day of the week. [0 to 6 = Sunday to Saturday] |  |  |

|             |  |      |  |
|-------------|--|------|--|
|             | <p>5th and 6th digits: The hour. [00 to 23]</p> <p>7th digit: The length of the advanced time. [0 to 9 / 1 hour /step]</p> <p>8th digit: The length of the advanced time. [0 to 5 / 10 minutes /step]</p> <p>For example: 3500010 (EU default)</p> <p>The timer is advanced by 1 hour at am 0:00 on the 5th Sunday in March</p> <ul style="list-style-type: none"> <li>▪ The digits are counted from the left.</li> <li>▪ Make sure that SP5-307-1 is set to "1".</li> </ul>                               |      |  |
|             | Rule Set (End)   | -    | -  |
| 004         | <p>Specifies the end setting for the summer time mode.</p> <p>There are 8 digits in this SP. The digits are counted from the left.</p> <p>1st and 2nd digits: The month. [1 to 12]</p> <p>3rd digit: The week of the month. [0 to 5]</p> <p>4th digit: The day of the week. [0 to 7 = Sunday to Saturday]</p> <p>5th and 6th digits: The hour. [00 to 23]</p> <p>The 7th and 8 digits must be set to "00".</p> <ul style="list-style-type: none"> <li>▪ Make sure that SP5-307-1 is set to "1".</li> </ul> |      |  |
| <b>5401</b> | <b>[Access Control]</b>  |      |  |
|             | When installing the SDK application, SAS (VAS) adjusts the following: <b>DFU</b>   |      |  |
| ⇒ 103       | <p>Default Document ACL: Used to assign the default access privileges of users to their own documents on the Document Server. <b>0</b>:Read only (default) <b>1</b>:edit <b>2</b>:edit/delete <b>3</b>:full control <b>NOTE</b>: Available only when using Windows / LDAP / Integration Server Authentication. Applies to new users only, it will not affect existing users.</p>   |      |  |
| 200         | SDK1 Unique ID   | *CTL | This ID is overwritten by SAS (VAS) when you install or uninstall the SDK application. |
| 201         | SDK1 Cert Method   | *CTL | [0 to 255 / <b>0</b> / 1 /step]  |
| 210         | SDK2 Unique ID   | *CTL | -  |
| 211         | SDK2 Cert Method   | *CTL | [0 to 255 / <b>0</b> / 1 /step]  |
| 220         | SDK3 Unique ID   | *CTL | -  |
| 221         | SDK3 Certification   | *CTL | [0 to 255 / <b>0</b> / 1 /step]  |

|  |        |  |  |
|--|--------|--|--|
|  | Method |  |  |
|--|--------|--|--|

|             |                                  |  |                                |
|-------------|----------------------------------|--|--------------------------------|
| <b>5404</b> | <b>[User Code Counter Clear]</b> |  |                                |
| 001         | UCodeCtrClr                      |  | Clears all counters for users. |

|             |                      |   |   |
|-------------|----------------------|---|---|
| <b>5501</b> | <b>[PM Alarm]</b>    | *CTL  | - |
| 001         | PM Alarm Level       | [0 to 9999 / <b>0</b> / 1 /step]<br>0: Alarm off<br>1 to 9999: Alarm goes off when <b>Value (1 to 9999)</b><br><b>x 1000 ≥ PM counter</b> |   |
| 002         | Original Count Alarm | [0 or 1 / <b>1</b> / - ]<br>0: No alarm sounds<br>1: Alarm sounds after the number of originals<br>passing through the ARDF ≥ 10,000      |   |

|             |   |      |   |
|-------------|---|------|---|
| <b>5504</b> | <b>[Jam Alarm]</b>  | *CTL | - |
| 001         | Sets the alarm to sound for the specified jam level (document misfeeds are not included).<br>[0 to 3 / <b>3</b> / 1 /step]<br>0: Zero (Off)<br>1: Low (2.5K jams)<br>2: Medium (3K jams)<br>3: High (6K jams) |      |   |

|             |   |  |  |
|-------------|---|--|--|
|             | <b>[Error Alarm]</b>  |  |  |
| <b>5505</b> | Sets the error alarm level.<br>The error alarm counter counts "1" when any SC is detected. However, the error alarm counter decreases by "1" when an SC is not detected during a set number of copied sheets (for example, default 1500 sheets).<br>The error alarm occurs when the SC error alarm counter reaches "5". |  |  |

|     |   |      |  |
|-----|---|------|--|
| 001 | - | *CTL | [0 to 255 / <b>50/75 (C1a/C1b)</b> / 100 copies /step] |
|-----|---|------|--|

|             |                       |  |   |
|-------------|-----------------------|--|---|
| <b>5507</b> | <b>[Supply Alarm]</b> | *CTL                                       | - |
| 001         | Paper Supply Alarm    | <b>0: Off, 1: On, DFU</b>                  |   |
| 002         | Staple Supply Alarm   | <b>0: Off, 1: On, Japan only</b>           |   |
| 003         | Toner Supply Alarm    | <b>0: Off, 1: On, DFU</b>                  |   |
| 128         | Interval :Others      | <b>[250 to 10000 / 1000 / 1 /step] DFU</b> |   |
| 132         | Interval :A3          |  |   |
| 133         | Interval :A4          |  |   |
| 134         | Interval :A5          |  |   |
| 141         | Interval :B4          |  |   |
| 142         | Interval :B5          |  |   |
| 160         | Interval :DLT         |  |   |
| 164         | Interval :LG          |  |   |
| 166         | Interval :LT          |  |   |
| 172         | Interval :HLT         |  |   |

|              |   |                       |   |
|--------------|---|-----------------------|---|
| <b>5508*</b> | <b>[CC Call]</b>  | *CTL                  | - |
| 001*         | Jam Remains   | 0: Disable, 1: Enable |   |
|              | Enables/disables initiating a call for an unattended paper jam. |                       |   |
| 002*         | Continuous Jams   | 0: Disable, 1: Enable |   |
|              | Enables/disables initiating a call for consecutive paper jams.  |                       |   |
| 003*         | Continuous Door Open  | 0: Disable, 1: Enable |   |

|      |   |  |
|------|---|--|
|      | Enables/disables initiating a call when the front door remains open.  |  |
| 011* | Jam Detection: Time Length  | [3 to 30 / <b>10</b> / 1 minute /step]             |
|      | Sets the time a jam must remain before it becomes an “unattended paper jam”. This setting is enabled only when SP5508-004 is set to "1".  |  |
| 012* | Jam Detection: Continuous Count   | [2 to 10 / <b>5</b> / 1 /step]                     |
|      | Sets the number of consecutive paper jams required to initiate a call. This setting is enabled only when SP5508-004 is set to "1".  |  |
| 013* | Door Open: Time Length  | [3 to 30 / <b>10</b> / 1 /step]                    |
|      | Sets the length of time the door remains open before the machine initiates a call.<br>This setting is enabled only when SP5-508-004 is set to "1".  |  |
| 021* | Jam Operation: Time Length  | 0: Automatic Call<br>1: Audible Warning at Machine |
|      | Determines what happens when a paper jam is left unattended.  |  |
| 022* | Jam Operation: Continuous Count   | 0: Automatic Call<br>1: Audible Warning at Machine |
|      | Determines what happens when consecutive paper jams occur.  |  |
| 023* | Door Operation: Time Length   | 0: OFF, 1: ON                                      |
|      | Determines what happens if the door remains open (15 min.).<br>Displays a warning if set to ON. Pressing the call button will contact the service center. This setting is available for setting only if SP5508-004 is set to "1". |  |

|      |   |      |   |
|------|---|------|---|
| 5515 | [SC/Alarm Setting]  | *CTL | - |
|      | With NRS (New Remote Service) in use, these SP codes can be set to issue an SC call when an SC error occurs. If this SP is switched off, the SC call is not issued when an SC error occurs. |      |   |

|     |                                |                                      |
|-----|--------------------------------|--------------------------------------|
| 001 | SC Call                        |                                      |
| 002 | Service Parts Near End Call    |                                      |
| 003 | Service Parts End Call         |                                      |
| 004 | User Call                      |                                      |
| 006 | Communication Test Call        | [0 or 1 / 1 / - ]<br>0: Off<br>1: On |
| 007 | Machine Information Notice     |                                      |
| 008 | Alarm Notice                   |                                      |
| 009 | Non Genuine Toner Alarm        |                                      |
| 010 | Supply Automatic Ordering Call |                                      |
| 011 | Supply Management Report Call  |                                      |
| 012 | Jam/Door Open Call             |                                      |

|             |  |   |   |
|-------------|--|---|---|
| <b>5516</b> | <b>[Individual PM Part Alarm Call]</b> | *CTL  | - |
| 001         | Disable/ Enable Setting                | Enables or disables the PM part alarm call.<br>[0 or 1 / 1 / - ]<br>0: Not Send, 1: Send                        |   |
| 002         | Alarm Flag                             | Displays the condition of the PM part alarm call.<br>[0 or 1 / 1 / - ]<br>0: Ready (to send), 1: Already Send   |   |
| 003         | Alarm Flag Clear                       | Clears the alarm flag (SP5-516-002).<br>Do this SP after servicing for PM parts. So, SP5-516-002 is set to "0". |   |

|             |  |   |   |
|-------------|--|---|---|
| <b>5610</b> | <b>[ACC Factory Setting]</b>                             |   |   |
| 004         | Recall   | - | - |
|             | Recalls the factory settings.                            |   |   |
| 005         | Overwrite  | - | - |
|             | Overwrites the current values onto the factory settings. |   |   |
| 006         | Previous Setting   | - | - |
|             | Recalls the previous settings.                           |   |   |

|             |  |      |   |
|-------------|--|------|---|
| <b>5611</b> | <b>[Toner Color in 2C]</b>   |      |   |
| 001         | B-C  | *ENG | [0 to 128 / <b>100</b> / 1 /step]<br>128: Darkest density |
|             | Adjusts the Cyan correction value of the blue signal in two-color mode.    |      |   |
| 002         | B-M  | *ENG | [0 to 128 / <b>100</b> / 1 /step]<br>128: Darkest density |
|             | Adjusts the Magenta correction value of the blue signal in two-color mode. |      |   |
| 003         | G-C  | *ENG | [0 to 128 / <b>100</b> / 1 /step]<br>128: Darkest density |
|             | Adjusts the Cyan correction value of the blue signal in two-color mode.    |      |   |
| 004         | G-Y  | *ENG | [0 to 128 / <b>100</b> / 1 /step]<br>128: Darkest density |
|             | Adjusts the Yellow correction value of the blue signal in two-color mode.  |      |   |
| 005         | R-M  | *ENG | [0 to 128 / <b>100</b> / 1 /step]<br>128: Darkest density |
|             | Adjusts the Magenta correction value of the blue signal in two-color mode. |      |   |
| 006         | R-Y  | *ENG | [0 to 128 / <b>100</b> / 1 /step]                         |

|   |  |  |                      |
|---|--|--|----------------------|
|   |  |  | 128: Darkest density |
| Adjusts the Yellow correction value of the blue signal in two-color mode. |  |  |                      |


|   |                                       |      |   |
|---|---------------------------------------|------|---|
| <b>5618</b>                                     | <b>[Color Mode Display Selection]</b> |      |   |
| 001   | -                                     | *CTL | [0 or 1 / 1 / - ]<br>0: ACS, Colour, Black & White, Two Colour, Single colour<br>1: ACD, Full Colour, Black & White |
| Selects the color selection display on the LCD. |                                       |      |   |

|             |   |   |   |
|-------------|---|---|---|
| <b>5801</b> | <b>[Memory Clear]</b><br><b>NOTE:</b> For more information, see "NOTE 1" following "SP8-xxx" table.   |   |   |
| 001         | All Clear   |   |   |
|             | Resets all correction data for process control and all software counters, and returns all modes and adjustments to their default values.<br>Use this SP only after replacing the NVRAM, or after the copier has malfunctioned due to a damaged NVRAM. |   |   |
| 002         | Engine  | - | - |
|             | Clears the engine settings.   |   |   |
| 003         | SCS   | - | - |
|             | Clears the system settings.   |   |   |
| 004         | IMH Memory Clr  | - | - |
|             | Clears IMH data. <b>DFU</b>   |   |   |
| 005         | MCS   | - | - |
|             | Clears MCS data. <b>DFU</b>   |   |   |
| 006         | Copier Application  | - | - |



|     |  |   |   |
|-----|--|---|---|
|     | Clears the copy application settings.  |   |   |
| 007 | Fax Application  | - | - |
|     | Clears the fax application settings.   |   |   |
| 008 | Printer Application  | - | - |
|     | Clears the printer application settings.   |   |   |
| 009 | Scanner Application  | - | - |
|     | Clears the scanner application settings.   |   |   |
| 010 | Web Service/Network Application  | - | - |
|     | Delete the netfile application management files and thumbnails, and initializes the job login ID.  |   |   |
| 011 | NCS  | - | - |
|     | Initializes the system default and interface settings (IP address also), SmartDeviceMonitor for Admin, WebStatusMonitor settings, and the TELNET settings. |   |   |
| 012 | R-FAX  | - | - |
|     | Initializes the job login ID, SmartDeviceMonitor for Admin, job history, and local storage file numbers.   |   |   |
| 014 | Clear DCS Settings   | - | - |
|     | Initializes the DCS (Delivery Control Service) settings.   |   |   |
| 015 | Clear UCS Settings   | - | - |
|     | Initializes the UCS (User Information Control Service) settings.   |   |   |
| 016 | MIRS Setting   | - | - |
|     | Initializes the MIRS (Machine Information Report Service) settings.  |   |   |
| 017 | CCS  | - | - |

|     |  |   |   |
|-----|--|---|---|
|     | Initializes the CCS (Certification and Charge-control Service) settings. |   |   |
| 018 | SRM Memory Clr   | - | - |
|     | Initializes the SRM (System Resource Manager) settings.                  |   |   |
| 019 | LCS  | - | - |
|     | Initializes the LCS (Log Count Service) settings.                        |   |   |
| 020 | WebUapl  |   | - |
|     | Initializes the WebUapl settings.  |   |   |

|      |   |                  |   |
|------|---|------------------|---|
| 5802 | <b>[Free Run]</b>   |                  |   |
|      | Performs a free run on the copier engine.   |                  |   |
|      |  Note <ul style="list-style-type: none"> <li>▪ The machine starts free run in the same condition as the sequence of A4/LT, A3 or A4 SEF printing from the 1st or 2nd tray. Therefore, the correct paper should be loaded in the 1st tray or 2nd tray, but paper is not fed.</li> <li>▪ The main switch has to be turned off and on after using the free run mode for a test.</li> </ul> |                  |   |
|      | 001   | TRAY1: A4LEF: FC | - |
| 002  | TRAY2: A3: FC   | -                | - |
| 003  | TRAY2: A4SEF: FC  | -                |   |

|      |                       |   |                                     |
|------|-----------------------|---|-------------------------------------|
| 5803 | <b>[Input Check]</b>  | - | See "Input Check" in this section.  |
| 5804 | <b>[Output Check]</b> | - | See "Output Check" in this section. |

|      |   |  |  |
|------|---|--|--|
| 5810 | <b>[SC Reset]</b>                       |  |  |
|      | Resets a type A service call condition. |  |  |





|     |   |   |   |
|-----|---|---|---|
|     | <b>NOTE:</b> Turn the main switch off and on after resetting the SC code. |   |   |
| 001 | Fusing SC Reset   | - | - |

|             |   |      |                                     |
|-------------|---|------|-------------------------------------|
| <b>5811</b> | <b>[Machine Serial]</b> Machine Serial Number Display |      |                                     |
| 002         | Display   | *ENG | Displays the machine serial number. |

|             |  |      |   |
|-------------|--|------|---|
| <b>5812</b> | <b>[Service Tel. No. Setting]</b>  |      |   |
| 001         | Service  | *CTL | - |
|             | Sets the telephone number for a service representative. This number is printed on the Counter List, which can be printed with the user's "Counter" menu.<br>This can be up to 20 characters (both numbers and alphabetic characters can be input). |      |   |
| 002         | Facsimile  | *CTL | - |
|             | Sets the fax or telephone number for a service representative. This number is printed on the Counter List.<br>This can be up to 20 characters (both numbers and alphabetic characters can be input).   |      |   |
| 003         | Supply   | *CTL | - |
|             | Use this to input the telephone number of your supplier for consumables. Enter the number and press #.   |      |   |
| 004         | Operation  | *CTL | - |
|             | Use this to input the telephone number of your sales agency. Enter the number and press #.   |      |   |

|             |  |      |   |
|-------------|--|------|---|
| <b>5816</b> | <b>[Remote Service]</b>  | *CTL | - |
|             | I/F Setting  |      |   |
| 001         | Selects the remote service setting.<br>[0 to 2 / <b>2</b> / 1 /step]<br>0: Remote service off<br>1: CSS remote service on<br>2: NRS remote service on  |      |   |
|             | CE Call  |      |   |
| 002         | Performs the CE Call at the start or end of the service.<br>[0 or 1 / <b>0</b> / 1 /step]<br>0: Start of the service<br>1: End of the service<br><ul style="list-style-type: none"> <li>▪ This SP is activated only when SP 5816-001 is set to “2”.</li> </ul> |      |   |
|             | Function Flag  |      |   |
| 003         | Enables or disables the remote service function.<br>[0 to 1 / <b>0</b> / 1 /step]<br>0: Disabled<br>1: Enabled   |      |   |
|             | Device Information Call Display Setting  |      |   |
| 006         | Displays or does not display the device information call content.<br>[0 to 1 / <b>0</b> / 1 /step]<br>0: Not displayed<br>1: Displayed   |      |   |
|             | SSL Disable  |      |   |
| 007         | Uses or does not use the RCG certification by SSL when calling the RCG.<br>[0 to 1 / <b>0</b> / 1 /step]<br>0: Uses the RCG certification<br>1: Does no use the RCG certification  |      |   |
| 008         | RCG Connect Timeout  |      |   |

|     |  |   |
|-----|--|---|
|     | Specifies the connect timeout interval when calling the RCG.<br>[1 to 90 / <b>10</b> / 1 second /step]                                       |   |
| 009 | RCG Write Timeout  |   |
|     | Specifies the write timeout interval when calling the RCG.<br>[1 to 100 / <b>60</b> / 1 second /step]  |   |
| 010 | RCG Read Timeout   |   |
|     | Specifies the read timeout interval when calling the RCG.<br>[1 to 100 / <b>60</b> / 1 second /step]   |   |
| 011 | Port 80 Enable   | -   |
|     | Enables/disables access via port 80 to the SOAP method.<br>[0 or 1 / <b>0</b> / - ]<br>0: Disabled<br>1: Enabled                             |   |
| 021 | RCG – C Registered   |   |
|     | This SP displays the Cumin installation end flag.<br>0: Installation not completed<br>1: Installation completed                              |   |
| 022 | RCG – C Registered Detail  |   |
|     | This SP displays the Cumin installation status.<br>0: Basil not registered<br>1: Basil registered<br>2: Device registered                    |   |
| 023 | Connect Type (N/M)   |   |
|     | This SP displays and selects the Cumin connection method.<br>[0 or 1 / <b>0</b> / 1 /step<br>0: Internet connection<br>1: Dial-up connection |   |
| 061 | Cert. Expire Timing <b>DFU</b>   | Proximity of the expiration of the certification. |

|     |  |   |
|-----|--|---|
| 062 | Use Proxy  | This SP setting determines if the proxy server is used when the machine communicates with the service center. |
| 063 | <p>Proxy Host</p> <p>This SP sets the address of the proxy server used for communication between Cumin-N and the gateway. Use this SP to set up or display the customer proxy server address. The address is necessary to set up Cumin-N.</p> <p> Note</p> <ul style="list-style-type: none"> <li>▪ The address display is limited to 128 characters. Characters beyond the 128 character are ignored.</li> <li>▪ This address is customer information and is not printed in the SMC report.</li> </ul> |   |
| 064 | <p>Proxy Port Number</p> <p>This SP sets the port number of the proxy server used for communication between Cumin-N and the gateway. This setting is necessary to set up Cumin-N.</p> <p> Note</p> <ul style="list-style-type: none"> <li>▪ This port number is customer information and is not printed in the SMC report.</li> </ul>   |   |
| 065 | <p>Proxy User Name</p> <p>This SP sets the HTTP proxy certification user name.</p> <p> Note</p> <ul style="list-style-type: none"> <li>▪ The length of the name is limited to 31 characters. Any character beyond the 31st character is ignored.</li> <li>▪ This name is customer information and is not printed in the SMC report.</li> </ul>  |   |
| 066 | <p>Proxy Password</p> <p>This SP sets the HTTP proxy certification password.</p> <p> Note</p> <ul style="list-style-type: none"> <li>▪ The length of the password is limited to 31 characters. Any character beyond the 31st character is ignored.</li> </ul>   |   |

|     |   |   |
|-----|---|---|
|     | <ul style="list-style-type: none"> <li>This name is customer information and is not printed in the SMC report.</li> </ul>             |   |
| 067 | CERT: Up State  |   |
|     | Displays the status of the certification update.  |   |
|     | 0   | The certification used by Cumin is set correctly.   |
|     | 1   | The certification request (setAuthKey) for update has been received from the GW URL and certification is presently being updated.   |
|     | 2   | The certification update is completed and the GW URL is being notified of the successful update.  |
|     | 3   | The certification update failed, and the GW URL is being notified of the failed update.   |
|     | 4   | The period of the certification has expired and new request for an update is being sent to the GW URL.  |
|     | 11  | A rescue update for certification has been issued and a rescue certification setting is in progress for the rescue GW connection.   |
|     | 12  | The rescue certification setting is completed and the GW URL is being notified of the certification update request.   |
|     | 13  | The notification of the request for certification update has completed successfully, and the system is waiting for the certification update request from the rescue GW URL. |
|     | 14  | The notification of the certification request has been received from the rescue GW controller, and the certification is being stored.                                       |
|     | 15  | The certification has been stored, and the GW URL is being notified of the successful completion of this event.   |
|     | 16  | The storing of the certification has failed, and the GW URL is being notified of the failure of this event.   |
| 17  | The certification update request has been received from the GW URL, the GW URL was notified of the results of the update after it was |   |


|     |   |   |
|-----|---|---|
|     |   | completed, but an certification error has been received, and the rescue certification is being recorded.  |
|     | 18  | The rescue certification of No. 17 has been recorded, and the GW URL is being notified of the failure of the certification update.  |
| 068 | CERT: Error   |   |
|     | Displays a number code that describes the reason for the request for update of the certification. |   |
|     | 0   | Normal. There is no request for certification update in progress.   |
|     | 1   | Request for certification update in progress. The current certification has expired.  |
|     | 2   | An SSL error notification has been issued. Issued after the certification has expired.  |
|     | 3   | Notification of shift from a common authentication to an individual certification.  |
|     | 4   | Notification of a common certification without ID2.   |
|     | 5   | Notification that no certification was issued.  |
|     | 6   | Notification that GW URL does not exist.  |
| 069 | CERT: Up ID   | The ID of the request for certification.  |
| 083 | Firmware Up Status  | Displays the status of the firmware update.   |
| 084 | Non-HDD Firm Up   | This setting determines if the firmware can be updated, even without the HDD installed.<br>0: Not allowed update<br>1: Allowed update   |
| 085 | Firm Up User Check  | This SP setting determines if the operator can confirm the previous version of the firmware before the firmware update execution. If the option to confirm the previous version is selected, a notification is sent to the system manager and the |



|     |  |  |
|-----|--|--|
|     |  | firmware update is done with the firmware files from the URL.  |
| 086 | Firmware Size  | Allows the service technician to confirm the size of the firmware data files during the firmware update execution.   |
| 087 | CERT: Macro Version  | Displays the macro version of the NRS certification.   |
| 088 | CERT: PAC Version  | Displays the PAC version of the NRS certification.   |
| 089 | CERT: ID2 Code   | Displays ID2 for the NRS certification. Spaces are displayed as underscores (_). Asterisks (*) indicate that no NRS certification exists.                                    |
| 090 | CERT: Subject  | Displays the common name of the NRS certification subject. CN = the following 17 bytes. Spaces are displayed as underscores (_). Asterisks (*) indicate that no DESS exists. |
| 091 | CERT: Serial Number  | Displays serial number for the NRS certification. Asterisks (*) indicate that no DESS exists.  |
| 092 | CERT: Issuer   | Displays the common name of the issuer of the NRS certification. CN = the following 30 bytes. Asterisks (*) indicate that no DESS exists.                                    |
| 093 | CERT: Valid Start  | Displays the start time of the period for which the current NRS certification is enabled.  |
| 094 | CERT: Valid End  | Displays the end time of the period for which the current NRS certification is enabled.  |
|     | Selection Country  |  |
| 150 | <p>Select from the list the name of the country where Cumin-M is installed in the machine. After selecting the country, you must also set the following SP codes for Cumin-M:</p> <ul style="list-style-type: none"> <li>▪ SP5816-153</li> <li>▪ SP5816-154</li> </ul> |  |

|     |   |
|-----|---|
|     | <ul style="list-style-type: none"> <li>▪ SP5816-161</li> </ul> <p>0: Japan, 1: USA, 2: Canada, 3: UK, 4: Germany, 5: France, 6: Italy, 7: Netherlands, 8: Belgium, 9: Luxembourg, 10: Spain</p>   |
| 151 | <p>Line Type Authentication Judgment</p> <p>Touch [Execute].</p> <p>Setting this SP classifies the telephone line where Cumin-M is connected as either dial-up or push type, so Cumin-M can automatically distinguish the number that connects to the outside line.</p> <ul style="list-style-type: none"> <li>▪ The current progress, success, or failure of this execution can be displayed with SP5816-152.</li> <li>▪ If the execution succeeded, SP5816-153 will display the result for confirmation and SP5816-154 will display the telephone number for the connection to the outside line.</li> </ul> |
| 152 | <p>Line Type Judgment Result</p> <p>Displays a number to show the result of the execution of SP5816 151. Here is a list of what the numbers mean.</p> <p>0: Success</p> <p>1: In progress (no result yet). Please wait.</p> <p>2: Line abnormal</p> <p>3: Cannot detect dial tone automatically</p> <p>4: Line is disconnected</p> <p>5: Insufficient electrical power supply</p> <p>6: Line classification not supported</p> <p>7: Error because fax transmission in progress – ioctl() occurred.</p> <p>8: Other error occurred</p> <p>9: Line classification still in progress. Please wait.</p>           |
| 153 | <p>Selection Dial/Push</p> <p>This SP displays the classification (tone or pulse) of the telephone line to the access point for Cumin-M. The numbered displayed (0 or 1) is the result of the execution of SP5816 151. However, this setting can also be changed manually.</p> <p>[0 to 1/ 0 / 1 /step]</p>   |

|     |   |
|-----|---|
|     | <p>0: Tone Dialing Phone<br/> 1: Pulse Dialing Phone<br/> Inside Japan "2" may also be displayed:<br/> 0: Tone Dialing Phone<br/> 1: Pulse Dialing Phone 10PPS<br/> 2: Pulse Dialing Phone 20PPS</p>  |
| 154 | <p>Outside Line/Outgoing Number</p> <p>The SP sets the number that switches to PSTN for the outside connection for Cumin-M in a system that employs a PBX (internal line).</p> <ul style="list-style-type: none"> <li>▪ If the execution of SP5816 151 has succeeded and Cumin-M has connected to the <b>external</b> line, this SP display is completely blank.</li> <li>▪ If Cumin-M has connected to an <b>internal</b> line, then the number of the connection to the external line is displayed.</li> <li>▪ If Cumin-M has connected to an external line, a comma is displayed with the number. The comma is inserted for a 2 sec. pause.</li> <li>▪ The number setting for the external line can be entered manually (including commas).</li> </ul> |
| 156 | <p>Dial Up User Name</p> <p>Use this SP to set a user name for access to remote dial up. Follow these rules when setting a user name:</p> <ul style="list-style-type: none"> <li>▪ Name length: Up to 32 characters</li> <li>▪ Spaces and # allowed but the entire entry must be enclosed by double quotation marks (").</li> </ul>   |
| 157 | <p>Dial Up Password</p> <p>Use this SP to set a password for access to remote dial up. Follow these rules when setting a user name:</p> <ul style="list-style-type: none"> <li>▪ Name length: Up to 32 characters</li> <li>▪ Spaces and # allowed but the entire entry must be enclosed by double quotation marks (").</li> </ul>   |
| 161 | <p>Local Phone Number</p> <p>Use this SP to set the telephone number of the line where Cumin-M is</p>   |

|     |   |   |
|-----|---|---|
|     | <p>connected. This number is transmitted to and used by the Call Center to return calls.</p> <p>Limit: 24 numbers (numbers only)</p>  |   |
| 162 | <p>Connection Timing Adjustment: Incoming</p>   |   |
|     | <p>When the Call Center calls out to a Cumin-M modem, it sends a repeating ID tone (*#1#). This SP sets the line remains open to send these ID tones after the number of the Cumin-M modem is dialed up and connected.</p> <p>[0 to 24 / 1 / 1 /step]</p> <p>The actual amount of time is this setting x 2 sec. For example, if you set "2" the line will remain open for 4 sec.</p>  |   |
| 163 | <p>Access Point</p>   |   |
|     | <p>This is the number of the dial-up access point for Cumin-M. If no setting is done for this SP code, then a preset value (determined by the country selected) is used.</p> <p>Default: 0</p> <p>Allowed: Up to 16 alphanumeric characters</p>   |   |
| 164 | <p>Line Connecting</p>  |   |
|     | <p>This SP sets the connection conditions for the customer. This setting dedicates the line to Cumin-M only, or sets the line for sharing between Cumin-M and a fax unit.</p> <p>[0 to 1 / 0 / 1 /step]</p> <p>0: Sharing Fax</p> <p>1: No Sharing Fax</p> <p> Note</p> <ul style="list-style-type: none"> <li>▪ If this setting is changed, the copier must be cycled off and on.</li> <li>▪ SP5816 187 determines whether the off-hook button can be used to interrupt a Cumin-M transmission in progress to open the line for fax transaction.</li> </ul> |   |
| 173 | Modem Serial Number   | <p>This SP displays the serial number registered for the Cumin-M.</p> |
| 174 | <p>Retransmission Limit</p>   |   |

|     |   |  |                              |
|-----|---|--|------------------------------|
|     | Normally, it is best to allow unlimited time for certification and ID2 update requests, and for the notification that the certification has been completed. However, Cumin-M generates charges based on transmission time for the customer, so a limit is placed upon the time allowed for these transactions. If these transactions cannot be completed within the allowed time, do this SP to cancel the time restriction.  |  |                              |
| 175 | Modem Modulation Mode Setting   |  |                              |
| 187 | FAX TX Priority   | -  |                              |
|     | This SP determines whether pushing the off-hook button will interrupt a Cumin-M transmission in progress to open the line for fax transaction. This SP can be used only if SP5816 164 is set to "0".<br>[0 or 1/ 0 / - ]<br>0: Disable, 1: Enable   |  |                              |
| 200 | Manual Polling  | -  | Executes the manual polling. |
| 201 | Regist: Status  |  |                              |
|     | Displays a number that indicates the status of the NRS service device.<br>0: Neither the NRS device nor Cumin device are set.<br>1: The Cumin device is being set. Only Box registration is completed. In this status the Basil unit cannot answer a polling request.<br>2: The Cumin device is set. In this status the Basil unit cannot answer a polling request.<br>3: The NRS device is being set. In this status the Cumin device cannot be set.<br>4: The NRS module has not started. |  |                              |
| 202 | Letter Number   | Allows entry of the number of the request needed for the Cumin device. |                              |
| 203 | Confirm Execute   | Executes the inquiry request to the NRS GW URL.                        |                              |
| 204 | Confirm Result  |  |                              |
|     | Displays a number that indicates the result of the inquiry executed with SP5816 203.<br>0: Succeeded  |  |                              |


|     |   |                              |                      |
|-----|---|------------------------------|----------------------|
|     | 1: Inquiry number error<br>2: Registration in progress<br>3: Proxy error (proxy enabled)<br>4: Proxy error (proxy disabled)<br>5: Proxy error (Illegal user name or password)<br>6: Communication error<br>7: Certification update error<br>8: Other error<br>9: Inquiry executing  |                              |                      |
| 205 | Confirm Place   |                              |                      |
|     | Displays the result of the notification sent to the device from the GW URL in answer to the inquiry request. Displayed only when the result is registered at the GW URL.  |                              |                      |
| 206 | Register Execute  | Executes Cumin Registration. |                      |
| 207 | Register Result   |                              |                      |
|     | Displays a number that indicates the registration result.<br>0: Succeeded<br>2: Registration in progress<br>3: Proxy error (proxy enabled)<br>4: Proxy error (proxy disabled)<br>5: Proxy error (Illegal user name or password)<br>6: Communication error<br>7: Certification update error<br>8: Other error<br>9: Registration executing |                              |                      |
| 208 | Error Code  |                              |                      |
|     | Displays a number that describes the error code that was issued when either SP5816-204 or SP5816-207 was executed.  |                              |                      |
|     | <b>Cause</b>  | <b>Code</b>                  | <b>Meaning</b>       |
|     | Illegal Modem   | -11001                       | Chat parameter error |

|       |  |  |   |
|-------|--|--|---|
|       | Parameter                                  | -11002                                     | Chat execution error  |
|       |  | -11003                                     | Unexpected error  |
|       | Operation Error,<br>Incorrect Setting      | -12002                                     | Inquiry, registration attempted without acquiring device status.                              |
|       |  | -12003                                     | Attempted registration without execution of an inquiry and no previous registration.          |
|       |  | -12004                                     | Attempted setting with illegal entries for certification and ID2.                             |
|       | Error Caused by<br>Response from GW<br>URL | -2385                                      | Attempted dial up overseas without the correct international prefix for the telephone number. |
|       |  | -2387                                      | Not supported at the Service Center   |
|       |  | -2389                                      | Database out of service   |
|       |  | -2390                                      | Program out of service  |
|       |  | -2391                                      | Two registrations for same device   |
|       |  | -2392                                      | Parameter error   |
|       |  | -2393                                      | Basil not managed   |
|       |  | -2394                                      | Device not managed  |
|       |  | -2395                                      | Box ID for Basil is illegal   |
| -2396 |  | Device ID for Basil is illegal             |   |
| -2397 | Incorrect ID2 format                       |  |   |
| -2398 | Incorrect request number format            |  |   |
| 209   | @Remote Setting Clear                      | Releases the machine from its Cumin setup. |   |
| 250   | CommLog Print                              | Prints the communication log.              |   |

|             |                                 |      |  |
|-------------|---------------------------------|------|--|
| <b>5821</b> | <b>[Remote Service Address]</b> |      |  |
| 001         | CSS-PI Device Code              | *CTL | Sets the PI device code. After you change this setting, you must turn the machine off and on.<br>[0 to 4 / 0 / 1 /step]  |
| 002         | RCG IP Address                  |      | Sets the IP address of the RCG (Remote Communication Gate) destination for call processing at the remote service center. |

|             |   |   |   |
|-------------|---|---|---|
|             | <b>[NV-RAM Data Upload]</b>   |   |   |
| <b>5824</b> | Uploads the UP and SP mode data (except for counters and the serial number) from the NVRAM to an SD card. For details, see the " NVRAM Data Upload/Download" in this section. |   |   |
| 5824 1      | NV-RAM Data Upload  | # | - |

|             |   |   |   |
|-------------|---|---|---|
|             | <b>[NV-RAM Data Download]</b>   |   |   |
| <b>5825</b> | Downloads the UP and SP mode data from an SD card to the NVRAM. For details, see the " NVRAM Data Upload/Download" in this section. |   |   |
| 5825 1      | NV-RAM Download   | # | - |

|             |                             |  |   |
|-------------|-----------------------------|--|---|
| <b>5828</b> | <b>[Network Setting]</b>    | *CTL   | - |
| 050         | 1284 Compatibility (Centro) | Enables or disables 1284 Compatibility.<br>[0 or 1 / 1 / 1 / step]<br>0: Disabled, 1: Enabled  |   |
| 052         | ECP (Centro)                | Enables or disables ECP Compatibility.<br>[0 or 1 / 1 / 1 / step]<br>0: Disabled, 1: Enabled<br> Note<br><ul style="list-style-type: none"> <li>▪ This SP is activated only when</li> </ul> |   |





|     |                                   |  |
|-----|-----------------------------------|--|
|     |                                   | SP5-828-50 is set to "1".  |
| 065 | Job Spooling                      | Enables/disables Job Spooling.<br>[0 or 1 / <b>0</b> / 1 / step]<br>0: Disabled, 1: Enabled  |
| 066 | Job Spooling Clear:<br>Start Time | Treatment of the job when a spooled job exists at power on.<br>0: ON (Data is cleared)<br>1: OFF (Automatically printed)   |
| 069 | Job Spooling (Protocol)           | Validates or invalidates the job spooling function for each protocol.<br><b>0</b> : Validates<br>1: Invalidates<br>bit0: LPR<br>bit1: FTP<br>bit2: IPP<br>bit3: SMB<br>bit4: BMLinkS<br>bit5: DIPRINT<br>bit6: sftp<br>bit7: (Reserved)    |
| 090 | TELNET (0: OFF 1: ON)             | Enables or disables the Telnet protocol.<br>[0 or 1 / <b>1</b> / – ]<br>0: Disable, 1: Enable  |
| 091 | Web (0: OFF 1: ON)                | Enables or disables the Web operation.<br>[0 or 1 / <b>1</b> / – ]<br>0: Disable, 1: Enable  |
| 145 | Active IPv6 Link Local Address    | This is the IPv6 local address link referenced on the Ethernet or wireless LAN (802.11b) in the format:<br>"Link Local Address" + "Prefix Length"<br>The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each. |

|     |                                 |  |
|-----|---------------------------------|--|
| 147 | Active IPv6 Stateless Address 1 | <p>These SPs are the IPv6 status addresses (1 to 5) referenced on the Ethernet or wireless LAN (802.11b) in the format:<br/> "Status Address" + "Prefix Length"</p> <p>The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.</p> |
| 149 | Active IPv6 Stateless Address 2 |  |
| 151 | Active IPv6 Stateless Address 3 |  |
| 153 | Active IPv6 Stateless Address 4 |  |
| 155 | Active IPv6 Stateless Address 5 |  |
| 156 | IPv6 Manual Address             | <p>This SP is the IPv6 manually set address referenced on the Ethernet or wireless LAN (802.11b) in the format:<br/> "Manual Set Address" + "Prefix Length"</p> <p>The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.</p>     |
| 158 | IPv6 Gateway Address            | <p>This SP is the IPv6 gateway address referenced on the Ethernet or wireless LAN (802.11b). The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.</p>   |

|             |                                 |  |   |
|-------------|---------------------------------|--|---|
| <b>5832</b> | <b>[HDD] HDD Initialization</b> | *CTL   | - |
| 001         | HDD Formatting (ALL)            | <p>Initializes the hard disk. Use this SP mode only if there is a hard disk error.</p> |   |
| 002         | HDD Formatting (IMH)            |  |   |
| 003         | HDD Formatting (Thumbnail)      |  |   |
| 004         | HDD Formatting (Job Log)        |  |   |
| 005         | HDD Formatting (Printer         |  |   |



|     |                                    |  |
|-----|------------------------------------|--|
|     | Fonts)                             |  |
| 006 | HDD Formatting (User Info)         |  |
| 007 | Mail RX Data                       |  |
| 008 | Mail TX Data                       |  |
| 009 | HDD Formatting (Data for a Design) |  |
| 010 | HDD Formatting (Log)               |  |
| 011 | HDD Formatting (Ridoc I/F)         |  |

|  |   |  |   |  |
|--|---|--|---|--|
| 5836   | <b>[Capture Settings]</b>   | *CTL                                     | - |  |
| 001  | Capture Function (0:Off 1:On)   | 0: Disable, 1: Enable                    |   |  |
|  | With this function disabled, the settings related to the capture feature cannot be initialized, displayed, or selected. |  |   |  |
| 002  | Panel Setting   | 0: Displayed, 1: Not displayed           |   |  |
|  | Displays or does not display the capture function buttons.  |  |   |  |
| <b>5836-71 to 5836-78, Copier and Printer Document Reduction</b><br>The following 6 SP modes set the default reduction for stored documents sent to the document management server via the MLB.<br>Enabled only when optional MLB (Media Link Board) is installed. |   |  |   |  |
| 071  | Reduction for Copy Color  | 0: 1to-1, 1: 1/2, <b>2: 1/3</b> , 3: 1/4 |   |  |
| 072  | Reduction for Copy B&W Text   | <b>0: 1to-1</b> , 1: 1/2, 2: 1/3, 3: 1/4 |   |  |
| 073  | Reduction for Copy B&W Other  | <b>0: 1to-1</b> , 1: 1/2, 2: 1/3, 3: 1/4 |   |  |
| 074  | Reduction for Printer Color   | 0: 1to-1, 1: 1/2, <b>2: 1/3</b> , 3: 1/4 |   |  |
| 075  | Reduction for Printer B&W   | <b>0: 1to-1</b> , 1: 1/2, 2: 1/3, 3: 1/4 |   |  |

|  |  |  |  |
|--|--|--|--|
| 076  | Reduction for Printer B&W HQ   | <b>0: 1to-1</b> , 1: 1/2, 2: 1/3, 3: 1/4   |  |
| 077  | Reduction for Printer Color 1200   | 1: 1/2, 3: 1/4, <b>4: 1/6</b> , 5: 1/8 (2: skipped)  |  |
| 078  | Reduction for Printer B&W 1200   | <b>1: 1/2</b> , 3: 1/4, 4: 1/6, 5: 1/8 (2: skipped)  |  |
| <p><b>5836-81 to 5836-86, Stored document format</b></p> <p>The following 6 SP modes set Sets the default format for stored documents sent to the document management server via the MLB.</p> <p>Enabled only when optional MLB (Media Link Board) is installed.</p> |  |  |  |
| 081  | Format for Copy Color  | <b>0: JFIF/JPEG</b> , 1: TIFF/MMR,<br>2: TIFF/MH, 3: TIFF/MR<br> Note<br><ul style="list-style-type: none"> <li>▪ This SP is not used in this model.</li> </ul>   |  |
| 082  | Format for Copy B&W Text   | 0: JFIF/JPEG, <b>1: TIFF/MMR</b> ,<br>2: TIFF/MH, 3: TIFF/MR   |  |
| 083  | Format Copy B&W Other  | 0: JFIF/JPEG, <b>1: TIFF/MMR</b> ,<br>2: TIFF/MH, 3: TIFF/MR   |  |
| 084  | Format for Printer Color   | <b>0: JFIF/JPEG</b> , 1: TIFF/MMR,<br>2: TIFF/MH, 3: TIFF/MR<br> Note<br><ul style="list-style-type: none"> <li>▪ This SP is not used in this model.</li> </ul> |  |
| 085  | Format for Printer B&W   | 0: JFIF/JPEG, <b>1: TIFF/MMR</b> ,<br>2: TIFF/MH, 3: TIFF/MR   |  |
| 086  | Format for Printer B&W HQ  | 0: JFIF/JPEG, 1: TIFF/MMR,<br><b>2: TIFF/MH</b> , 3: TIFF/MR   |  |
|  | Default for JPEG   | [5 to 95 / <b>50</b> / 1 /step]  |  |
| 091  | Sets the JPEG format default for documents sent to the document management server via the MLB with JPEG selected as the format.<br>Enabled only when optional MLB (Media Link Board) is installed. |  |  |

|             |                   |   |   |
|-------------|-------------------|---|---|
| <b>5839</b> | <b>[IEEE1394]</b> | *CTL  | - |
| 007         | Cycle Master      | Turns the cycle master function on/off.<br>[0 or 1 / <b>1</b> / 1 /step]<br>0: OFF<br>1: ON   |   |
| 008         | BCR mode          | Selects either 'Standard', 'IRM Color Copy', or ' <b>Always Effective</b> '.  |   |
| 009         | IRM 1394a Check   | Turns the IRM 1394a check on/off.<br>[0 or 1 / <b>0</b> / - ]<br>0: OFF<br>1: ON<br>If the IRM is not defined as 1394a standard, its node is used as IRM.   |   |
| 010         | Unique ID         | [0 or 1 / <b>1</b> / - ]<br>0: OFF<br>1: ON   |   |
| 011         | Logout            | Prevents initiators from logging on or makes initiators log off.<br>[0 or 1 / <b>1</b> / - ]<br>0: OFF (Prevents the initiators, having already logged on, to log on if they try to log on.)<br>1: ON (Makes initiators, having already logged on, to log off if they try to log on.) |   |
| 012         | Login             | Allows/disallows an initiator to exclusively log on.<br>[0 or 1 / <b>0</b> / - ]<br>0: OFF (Disallows)<br>1: ON (Allows)  |   |
| 013         | Login MAX         | Specifies the maximum initiators able to log on.<br>[0 to 63 / <b>8</b> / 1 /step]  |   |

|             |                       |
|-------------|-----------------------|
| <b>5840</b> | <b>[IEEE 802.11b]</b> |
|-------------|-----------------------|

|     |   |      |  |
|-----|---|------|--|
| 006 | Channel Max   | *CTL | [1 to 11 or 13 / <b>11 or 13</b> / 1 /step]<br>Europe/Asia: 1 to 13<br>NA/ Asia: 1 to 11   |
|     | <p>Sets the maximum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the maximum end of the range for each area. Adjust the upper 4 bits to set the maximum number of channels. <b>DFU</b></p> <p> Note</p> <ul style="list-style-type: none"> <li>Do not change the setting.</li> </ul>   |      |  |
| 007 | Channel Min   | *CTL | [1 to 11 or 13 / <b>1</b> / 1 /step]<br>Europe: 1 to 13<br>NA/ Asia: 1 to 11   |
|     | <p>Sets the minimum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the minimum end of the range for each area. Adjust the lower 4 bits to set the minimum number of channels. <b>DFU</b></p> <p> Note</p> <ul style="list-style-type: none"> <li>Do not change the setting.</li> </ul> |      |  |
| 011 | WEP key Select  | *CTL | Selects the WEP key.<br>[00 to 11 / <b>00</b> / 1 binary]<br>00: Key #1<br>01: Key #2 (Reserved)<br>10: Key #3 (Reserved)<br>11: Key #4 (Reserved) |

|             |                              |      |   |
|-------------|------------------------------|------|---|
| <b>5841</b> | <b>[Supply Name Setting]</b> |      |   |
| 001         | Toner Name Setting:<br>Black | *CTL | Specifies supply names. These appear on the screen when the user presses the Inquiry button in the user tools screen. |
| 002         | Toner Name Setting:<br>Cyan  |      |   |
| 003         | Toner Name Setting:          |      |   |

|     |                                |  |  |
|-----|--------------------------------|--|--|
|     | Yellow                         |  |  |
| 004 | Toner Name Setting:<br>Magenta |  |  |
| 007 | OrgStamp                       |  |  |
| 011 | Staple Std1                    |  |  |
| 012 | Staple Std2                    |  |  |
| 013 | Staple Std3                    |  |  |
| 014 | Staple Std4                    |  |  |

|             |                                 |      |  |
|-------------|---------------------------------|------|--|
| <b>5842</b> | <b>[GWWS Analysis Mode] DFU</b> |      |  |
| 001         | Setting 1                       | *CTL | Default: <b>00000000</b> – do not change<br>Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software        |
| 002         | Setting 2                       | *CTL | Adjusts the debug program modesetting.<br>Bit7: 5682 mmseg-log setting<br>0: Date/Hour/Minute/Second<br>1: Minute/Second/Msec.<br>0 to 6: Not used |

|             |                                |      |  |
|-------------|--------------------------------|------|--|
| <b>5844</b> | <b>[USB]</b>                   |      |  |
| 001         | Transfer Rate                  | *CTL | 0x01: Full speed<br><b>0x04: Auto Change</b> |
|             | Adjusts the USB transfer rate. |      |  |
| 002         | Vendor ID                      | *CTL | Displays the vendor ID. <b>DFU</b>           |
| 003         | Product ID                     | *CTL | Displays the product ID. <b>DFU</b>          |
| 004         | Device Release Number          | *CTL | Displays the development release version     |

|  |  |  |                    |
|--|--|--|--------------------|
|  |  |  | number. <b>DFU</b> |
|--|--|--|--------------------|


|      |   |  |             |
|------|---|--|-------------|
| 5845 | [Delivery Server Setting]   | *CTL   | -           |
|      | Provides items for delivery server settings.  |  |             |
| 001  | FTP Port No.  | [0 to 65535 / <b>3670</b> / 1 /step]             |             |
|      | Sets the FTP port number used when image files to the Scan Router Server.   |  |             |
| 002  | IP Address (Primary)  | Range: <b>000.000.000.000</b> to 255.255.255.255 |             |
|      | Use this SP to set the Scan Router Server address. The IP address under the transfer tab can be referenced by the initial system setting.   |  |             |
| 006  | Delivery Error Display Time   | [0 to 999 / <b>300</b> / 1 second /step]         |             |
|      | Use this setting to determine the length of time the prompt message is displayed when a test error occurs during document transfer with the NetFile application and an external device.                           |  |             |
| 008  | IP Address (Secondary)  | Range: <b>000.000.000.000</b> to 255.255.255.255 |             |
|      | Specifies the IP address assigned to the computer designated to function as the secondary delivery server of Scan Router. This SP allows only the setting of the IP address without reference to the DNS setting. |  |             |
| 009  | Delivery Server Model   | [0 to 4/ <b>0</b> / 1 /step]                     |             |
|      | Allows changing the model of the delivery server registered by the I/O device.<br>0: Unknown<br>1: SG1 Provided<br>2: SG1 Package<br>3: SG2 Provided<br>4: SG2 Package  |  |             |
| 010  | Delivery Svr Capability   | [0 to 255 / <b>0</b> / 1 /step]                  |             |
|      | Bit7 = 1 Comment information exits  |  | Changes the |





|     |  |  |
|-----|--|--|
|     | Bit6 = 1 Direct specification of mail address possible   | capability of the registered that the I/O device registered. |
|     | Bit5 = 1 Mail RX confirmation setting possible   |  |
|     | Bit4 = 1 Address book automatic update function exists   |  |
|     | Bit3 = 1 Fax RX delivery function exists   |  |
|     | Bit2 = 1 Sender password function exists   |  |
|     | Bit1 = 1 Function to link MK-1 user and Sender exists  |  |
|     | Bit0 = 1 Sender specification required (if set to 1, Bit6 is set to "0")   |  |
| 011 | Delivery Svr Capability (Ext)  | [0 to 255 / 0 / 1 /step]                                     |
|     | Changes the capability of the registered that the I/O device registered.   |  |
|     | Bit7 = 1 Address book usage limitation (Limitation for each authorized user)<br>Bit6 = 1 RDH authorization link<br>Bit5 to 0: Not used |  |
| 013 | Server Scheme (Primary)  |  |
|     | NIA  |  |
| 014 | Server Port Number (Primary)   |  |
|     | NIA  |  |
| 015 | Server URL Path (Primary)  |  |
|     | NIA  |  |
| 016 | Server Scheme (Secondary)  |  |
|     | NIA  |  |
| 017 | Server Port Number (Secondary)   |  |
|     | NIA  |  |
| 018 | Server URL Path (Secondary)  |  |

|     |                            |
|-----|----------------------------|
|     | NIA                        |
| 019 | Capture Server Scheme      |
|     | NIA                        |
| 020 | Capture Server Port Number |
|     | NIA                        |
| 021 | Capture Server URL Path    |
|     | NIA                        |

|             |  |                                       |   |
|-------------|--|---------------------------------------|---|
| <b>5846</b> | <b>[UCS Settings]</b>  | *CTL                                  | - |
| 001         | Machine ID (For Delivery Server)   | Displays ID                           |   |
|             | Displays the unique device ID in use by the delivery server directory. The value is only displayed and cannot be changed. This ID is created from the NIC MAC or IEEE 1394 EUI. The ID is displayed as either 6-byte or 8-byte binary.   |                                       |   |
| 002         | Machine ID Clear (For Delivery Server)   | Clears ID                             |   |
|             | Clears the unique ID of the device used as the name in the file transfer directory. Execute this SP if the connection of the device to the delivery server is unstable. After clearing the ID, the ID will be established again automatically by cycling the machine off and on. |                                       |   |
| 003         | Maximum Entries  | [2000 to 20000/ <b>2000</b> /1 /step] |   |
|             | Changes the maximum number of entries that UCS can handle. If a value smaller than the present value is set, the UCS managed data is cleared, and the data (excluding user code information) is displayed.   |                                       |   |
| 006         | Delivery Server Retry Timer  | [0 to 255 / <b>0</b> / 1 /step]       |   |
|             | Sets the interval for retry attempts when the delivery server fails to acquire the delivery server address book.   |                                       |   |
| 007         | Delivery Server Retry Times  | [0 to 255 / <b>0</b> / 1 /step]       |   |

|     |  |  |
|-----|--|--|
|     | Sets the number of retry attempts when the delivery server fails to acquire the delivery server address book.  |  |
| 008 | Delivery Server Maximum Entries  | [2000 to 50000 / <b>2000</b> / 1/step] |
|     | Sets the maximum number account entries of the delivery server user information managed by UCS.  |  |
| 010 | LDAP Search Timeout  | [1 to 255 / <b>60</b> / 1 /step]       |
|     | Sets the length of the timeout for the search of the LDAP server.  |  |
| 040 | Addr Book Migration (SD -> HDD)  |  |
|     | <p>This SP moves the address book data from an SD card to the HDD. You must cycle the machine off and on after executing this SP.</p> <ol style="list-style-type: none"> <li>1. Turn the machine off.</li> <li>2. Install the HDD.</li> <li>3. Insert the SD card with the address book data in SD card Slot.</li> <li>4. Turn the machine on.</li> <li>5. Do SP5846 040.</li> <li>6. Turn the machine off.</li> <li>7. Remove the SD card from SD card Slot.</li> <li>8. Turn the machine on.</li> </ol> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>▪ Executing this SP overwrites any address book data already on the HDD with the data from the SD card.</li> <li>▪ We recommend that you back up all directory information to an SD card with SP5846-051 before you execute this SP. After the address book data is copied to HDD, all the address book data is deleted from the source SD card. If the operation fails, the data is not erased from the SD card.</li> </ul> |  |
| 041 | Fill Addr Acl Info.  |  |
|     | This SP must be executed immediately after installation of an HDD unit in a basic machine that previously had no HDD. The first time the machine is powered on with the new HDD installed, the system automatically takes the  |  |

|     |  |  |
|-----|--|--|
|     | <p>address book from the NVRAM and writes it onto the new HDD. However, the new address book on the HDD can be accessed only by the system administrator at this stage. Executing this SP by the service technician immediately after power on grants full address book access to all users.</p> <p>Procedure</p> <ol style="list-style-type: none"> <li>1. Turn the machine off.</li> <li>2. Install the new HDD.</li> <li>3. Turn the machine on.</li> <li>4. The address book and its initial data are created on the HDD automatically.</li> <li>5. However, at this point the address book can be accessed by only the system administrator or key operator.</li> <li>6. Enter the SP mode and do SP5846 041. After this SP executes successfully, any user can access the address book.</li> </ol> |  |
| 047 | Initialize Local Addr Book   | Clears the local address book information, including the user code.  |
| 048 | Initialize Delivery Addr Book  | Clears the distribution address book information, except the user code.  |
| 049 | Initialize LDAP Addr Book  | Clears the LDAP address book information, except the user code.  |
| 050 | Initialize All Addr Book   | Clears all directory information managed by UCS, including all user codes.   |
| 051 | Backup All Addr Book   | Uploads all directory information to the SD card.  |
| 052 | Restore All Addr Book  | Downloads all directory information from the SD card.  |
| 053 | Clear Backup Info  | <p>Deletes the address book data from the SD card in the service slot.</p> <p>Deletes only the files that were uploaded from this machine.</p> <p>This feature does not work if the card is write-protected.</p> <p> Note</p> |

|     |   |  |
|-----|---|--|
|     |   | <ul style="list-style-type: none"> <li>▪ After you do this SP, go out of the SP mode, and then turn the power off.</li> <li>▪ Do not remove the SD card until the Power LED stops flashing.</li> </ul> |
| 060 | Search Option   |  |
|     | <p>This SP uses bit switches to set up the fuzzy search options for the UCS local address book.</p> <p>Bit: Meaning</p> <p>0: Checks both upper/lower case characters</p> <p>1: Japan Only</p> <p>2: Japan Only</p> <p>3: Japan Only</p> <p>4 to 7: Not Used</p>  |  |
| 062 | Complexity Option 1   |  |
|     | <p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to <b>upper case</b> and sets the length of the password.</p> <p>[0 to 32 / <b>0</b> / 1 /step]</p> <p> Note</p> <ul style="list-style-type: none"> <li>▪ This SP does not normally require adjustment.</li> <li>▪ This SP is enabled only after the system administrator has set up a group password policy to control access to the address book.</li> </ul> |  |
| 063 | Complexity Option 2 <b>DFU</b>  |  |
| 064 | Complexity Option 3 <b>DFU</b>  |  |
| 065 | Complexity Option 4 <b>DFU</b>  |  |
| 091 | FTP Auth Port Setting   | <p>Specifies the FTP port for getting a distribution server address book that is used in the identification mode.</p> <p>[0 to 65535 / <b>3671</b> / 1 /step]</p>                                      |
| 094 | Encryption Stat   | Shows the status of the encryption function for the address book data.   |

|             |  |   |   |
|-------------|--|---|---|
|             | <b>[Rep Resolution Reduction]</b>  | *CTL  | - |
| <b>5847</b> | <p>5847 1 through 5847 8 changes the default settings of image data transferred externally by the Net File page reference function. [ 0 to 5 / <b>2</b> / 1 /step]</p> <p>5847 21 sets the default for JPEG image quality of image files handled by NetFile.</p> <p>“Net files” are jobs to be printed from the document server using a PC and the DeskTopBinder software.</p> |   |   |
| 001         | Rate for Copy Color  | 0: 1x<br>1: 1/2x<br><b>2: 1/3x</b><br>3: 1/4x<br>4: 1/6x<br>5: 1/8x |   |
| 002         | Rate for Copy B&W Text   |   |   |
| 003         | Rate for Copy B&W Other  |   |   |
| 004         | Rate for Printer Color   |   |   |
| 005         | Rate for Printer B&W   |   |   |
|             | Network Quality Default for JPEG   |   |   |
| 021         | Sets the default value for the quality of JPEG images sent as NetFile pages. This function is available only with the MLB (Media Link Board) option installed.<br>[5 to 95 / <b>50</b> / 1 /step]  |   |   |

|             |  |                      |   |
|-------------|--|----------------------|---|
|             | <b>[Web Service]</b>   | *CTL                 | - |
| <b>5848</b> | <p>5848 2 sets the 4-bit switch assignment for the access control setting. Setting of 0001 has no effect on access and delivery from Scan Router.</p> <p>5848 100 sets the maximum size allowed for downloaded images. The default is equal to 1 gigabyte.</p> |                      |   |
| 001         | ACC Ctrl: Netfile Protocol<br>(Lower 4 bits only)  | Bit switch settings. |   |
|             | <b>0000</b> : No access control<br>0001: Denies access to DeskTop Binder. Access and deliveries from Scan Router have no effect on capture.  |                      |   |


|     |  |  |
|-----|--|--|
| 002 | Access Ctrl: Repository (only Lower 4 bits)        | 0000: No access control<br>0001: Denies access to DeskTop Binder.<br><b>0010</b> : No writing control            |
| 003 | Access Control: Doc. Svr. Print (Lower 4 bits)     | Switches access control on and off.<br><b>0000</b> : No access control<br>0001: Denies access to DeskTop Binder. |
| 004 | Access Control: User Directory (only Lower 4 bits) |  |
| 005 | Access Ctrl: For Cherry(only lower 4bits)          |  |
| 007 | Access Ctrl: Comm. Log Fax (Lower 4 bits)          |  |
| 009 | Access Ctrl: Job Ctrl (Lower 4 bits)               |  |
| 011 | Access Ctrl: Device management (Lower 4 bits)      |  |
| 021 | Access Ctrl: Delivery (Lower 4 bits)               |  |
| 022 | Access Ctrl: uAdministration (Lower 4bits)         |  |
| 100 | Repository: Download Image Max. Size               |  |
| 210 | Setting: LogType: Job1                             | NIA  |
| 211 | Setting: LogType: Job2                             |  |
| 212 | Setting: LogType: Access                           |  |
| 213 | Setting: Primary Srv                               |  |
| 214 | Setting: Secondary Srv                             |  |
| 215 | Setting: Start Time                                |  |

|     |                        |  |
|-----|------------------------|--|
| 216 | Setting: Interval Time |  |
| 217 | Setting: Timing        |  |

|             |                            |  |   |
|-------------|----------------------------|--|---|
| <b>5849</b> | <b>[Installation Date]</b> | *CTL   | - |
| 5849 1      | Display                    | The “Counter Clear Day” has been changed to “Installation Date” or “Inst. Date”.   |   |
| 5849 2      | Switch to Print            | Determines whether the installation date is printed on the printout for the total counter.<br>[0 or 1 / 1 / - ]<br>0: No Print<br>1: Print |   |

|             |   |      |   |
|-------------|---|------|---|
| <b>5850</b> | <b>[Address Book Function]</b>  | *CTL | - |
| 003         | Replacement of Circuit Classification <b>Japan Only</b><br>The machine is sold ready to use with a G3 line. This SP allows you to switch all at once to convert to G4 after you add a G4 line. Conversely, if for some reason the G4 line becomes unusable, you can easily switch back to G3. |      |   |

|             |  |
|-------------|--|
| <b>5851</b> | Bluetooth Mode   |
|             | Sets the operation mode for the Bluetooth Unit. Press either key.<br>[0:Public] [1: Private] |

|             |  |
|-------------|--|
| <b>5853</b> | <b>[Stamp Data Download]</b>   |
|             | Use this SP to download the fixed stamp data stored in the firmware of the ROM and copy it to the HDD. This SP can be executed as many times as required. This SP must be executed after replacing or formatting the hard disks.<br> <b>Note</b><br>▪ This SP can be executed only with the hard disks installed. |



|      |   |      |   |
|------|---|------|---|
| 5856 | <b>[Remote ROM Update]</b>  |      |   |
|      | Allows the technician to upgrade the firmware using a local port (IEEE1284) when updating the remote ROM. |      |   |
| 002  | Local Port  | *CTL | [0 to 1 / <b>0</b> / 1/step]<br>0: Disable<br>1: Enable |


|        |  |                                    |   |
|--------|--|------------------------------------|---|
| 5857   | <b>[Save Debug Log]</b>  | *CTL                               | - |
| 5857 1 | On/Off (1:ON 0:OFF)  | <b>0</b> : OFF, <b>1</b> : ON      |   |
|        | Switches the debug log feature on and off. The debug log cannot be captured until this feature is switched on.   |                                    |   |
| 5857 2 | Target (2: HDD 3: SD)  | <b>2</b> : HDD, <b>3</b> : SD Card |   |
|        | Selects the storage device to save debug logs information when the conditions set with SP5-858 are satisfied.<br>[ 2 to 3 / <b>2</b> / 1 /step]  |                                    |   |
| 005    | <b>[Save to HDD]</b>   | <b>DFU</b>                         |   |
|        | Saves the debug log in memory to the HDD.<br>A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card. |                                    |   |
| 006    | Save to SD Card  |                                    |   |
| 009    | Copy HDD to SD Card (Latest 4 MB)  |                                    |   |
| 010    | Copy HDD to SD Card (Latest 4 MB Any Key)  |                                    |   |
| 011    | Erase HDD Debug Data   |                                    |   |
| 012    | Erase SD Card Debug Data   |                                    |   |
| 013    | Free Space on SD Card  |                                    |   |
| 014    | Copy SD to SD (Latest 4 MB)  |                                    |   |

|     |                                     |
|-----|-------------------------------------|
| 015 | Copy SD to SD (Latest 4 MB Any Key) |
| 016 | Make HDD Debug                      |
| 017 | Make SD Debug                       |

|             |   |  |   |
|-------------|---|--|---|
| <b>5858</b> | <b>[Debug Save When]</b>  | *CTL   | - |
|             | <p>These SPs select the content of the debugging information to be saved to the destination selected by SP5857-002.</p> <p>SP5858-3 stores one SC specified by number. Refer to Section 4 for a list of SC error codes.</p> |  |   |
| 001         | Engine SC Error   | <p>Turns on/off the debug save for SC codes generated by copier engine errors.</p> <p>[0 or 1 / <b>0</b> / 1/ step]</p> <p>0: OFF, 1: ON</p> |   |
| 002         | Controller SC Error   | <p>Turns on/off the debug save for SC codes generated by GW controller errors.</p> <p>[0 or 1 / <b>0</b> / 1/ step]</p> <p>0: OFF, 1: ON</p> |   |
| 003         | Any SC Error  | <p>[0 to 65535 / <b>0</b> / 1 /step]</p>   |   |
| 004         | Jam   | <p>Turns on/off the debug save for jam errors.</p> <p>[0 or 1 / <b>0</b> / 1/ step]</p> <p>0: OFF, 1: ON</p>                                 |   |

|             |                             |  |   |
|-------------|-----------------------------|--|---|
| <b>5859</b> | <b>[Debug Save Key No.]</b> | *CTL   | - |
| 001         | Key 1                       | <p>These SPs allow you to set up to 10 keys for log files for functions that use common memory on the controller board.</p> <p>[–9999999 to 9999999 / <b>0</b> / – ]</p> |   |
| 002         | Key 2                       |  |   |
| 003         | Key 3                       |  |   |
| 004         | Key 4                       |  |   |
| 005         | Key 5                       |  |   |

|     |        |  |
|-----|--------|--|
| 006 | Key 6  |  |
| 007 | Key 7  |  |
| 008 | Key 8  |  |
| 009 | Key 9  |  |
| 010 | Key 10 |  |

|             |   |                             |   |
|-------------|---|-----------------------------|---|
| <b>5860</b> | <b>[SMTP/POP3/IMAP4]</b>  | *CTL                        | - |
| 020         | Partial Mail Receive Timeout  | [1 to 168 / <b>72</b> / - ] |   |
|             | Sets the amount of time to wait before saving a mail that breaks up during reception. The received mail is discarded if the remaining portion of the mail is not received during this prescribed time.  |                             |   |
| 021         | MDN Response RFC2298 Compliance   | [0 to 1 / <b>1</b> / - ]    |   |
|             | Determines whether RFC2298 compliance is switched on for MDN reply mail.<br>0: No<br>1: Yes   |                             |   |
| 022         | SMTP Auth. From Field Replacement   | [0 to 1 / <b>0</b> / - ]    |   |
|             | Determines whether the FROM item of the mail header is switched to the validated account after the SMTP server is validated.<br><b>0</b> : No. "From" item not switched.<br>1: Yes. "From item switched.  |                             |   |
| 025         | SMTP Auth. Direct Setting   | [0 or 1 / <b>0</b> / - ]    |   |
|             | Selects the authentication method for SMPT.<br><b>Bit switch:</b> <ul style="list-style-type: none"> <li>• Bit 0: LOGIN</li> <li>• Bit 1: PLAIN</li> <li>• Bit 2: CRAM MD5</li> <li>• Bit 3: DIGEST MD5</li> <li>• Bit 4 to 7: Not used</li> </ul> <div style="border: 1px solid blue; padding: 2px; display: inline-block;">  Note       </div> |                             |   |

|  |  |
|--|--|
|  | <ul style="list-style-type: none"> <li>This SP is activated only when SMTP authorization is enabled by UP mode.</li> </ul> |
|--|--|

|             |                                |      |  |
|-------------|--------------------------------|------|--|
| <b>5866</b> | <b>[E-mail Alert] Not Used</b> |      |  |
| 001         | Report Validity                | -    | Enables or disables the E-mail alert function.<br>[0 or 1 / <b>0</b> / - ] 0: Enabled, 1: Disabled                         |
| 005         | Add Date Field                 | *CTL | Adds or does not add the date field to the header of the alert mail.<br>[0 or 1 / <b>0</b> / - ]<br>0: Not added, 1: Added |

|             |                                  |      |  |
|-------------|----------------------------------|------|--|
| <b>5870</b> | <b>[Common Key Info Writing]</b> |      |  |
| 001         | Writing                          | *CTL | Writes to flash ROM the common proof for validating the device for NRS specifications. |

|             |                             |  |  |
|-------------|-----------------------------|--|--|
| <b>5873</b> | <b>[SD Card Appli Move]</b> |  |  |
| 001         | Move Exec                   |  | This SP copies the application programs from the original SD card in SD card slot 3 to an SD card in SD card slot 1 or 2 (slot 1 has the priority to be copied).   |
| 002         | Undo Exec                   |  | This SP copies back the application programs from an SD card in SD Card Slot 3 to the original SD card in SD card slot 1 or 2 (slot 1 has the priority to be copied). Use this menu when you have mistakenly copied some programs by using "Move Exec" (SP5873-1). |

|             |                         |  |  |
|-------------|-------------------------|--|--|
| <b>5875</b> | <b>[SC Auto Reboot]</b> |  |  |
|-------------|-------------------------|--|--|

|     |                |      |  |
|-----|----------------|------|--|
| 001 | Reboot Setting | *CTL | <p>Enables or disables the automatic reboot function when an SC error occurs.</p> <p>[0 or 1 / <b>0</b> / - ]</p> <p>0: The machine reboots automatically when the machine issues an SC error and logs the SC error code. If the same SC occurs again, the machine does not reboot.</p> <p>1: The machine does not reboot when an SC error occurs.</p> <p>The reboot is not executed for Type A or C SC codes.</p> |
| 002 | Reboot Type    | *CTL | <p>Selects the reboot method for SC.</p> <p>[0 or 1 / <b>0</b> / -]</p> <p>0: Manual reboot, 1: Automatic reboot</p>   |

|             |                       |   |  |
|-------------|-----------------------|---|--|
| <b>5878</b> | <b>[Option Setup]</b> |   |  |
| 001         | Option Setup          | - | <p>Enables the Data Overwrite Security unit.</p> <p>Press "EXECUTE" on the operation panel.</p> <p>Then turn the machine off and on.</p> |

|             |                                     |   |                           |
|-------------|-------------------------------------|---|---------------------------|
| <b>5881</b> | <b>[Fixed Phrase Block Erasing]</b> |   |                           |
| 001         | -                                   | - | Deletes the fixed phrase. |

|             |   |      |   |
|-------------|---|------|---|
| <b>5885</b> | <b>[WIM Settings] Web Image Monitor Settings</b>      |      |   |
|             | Close or disclose the functions of web image monitor. |      |   |
| 020         | Document Server ACC Ctrl                              | *CTL | <p>0: OFF, 1: ON</p> <p>Bit Meaning</p> <p>0: Forbid all document server access (1)</p> <p>1: Forbid user mode access (1)</p> <p>2: Forbid print function (1)</p> |

|  |  |  |  |
|--|--|--|--|
|  |  |  | 3: Forbid fax TX (1)<br>4: Forbid scan sending (1)<br>5: Forbid downloading (1)<br>6: Forbid delete (1)<br>7: Reserved |
|--|--|--|--|

|             |  |      |   |
|-------------|--|------|---|
| <b>5886</b> | <b>[Permit ROM Updating] DFU</b>                   |      |   |
|             | This SP determines whether the ROM can be updated. |      |   |
| 001         | -  | *CTL | [0 or 1 / <b>0</b> / 1/step]<br>0: ON, 1: OFF |

|             |  |      |   |
|-------------|--|------|---|
| <b>5907</b> | <b>[Plug &amp; Play Maker/Model Name] Plug &amp; Play Name Selection</b>   |      |   |
|             | Specifies the manufacturer and model name. These names are registered in the NVRAM. If the NVRAM becomes defective, these names should be re-registered. |      |   |
| 001         | Plug/Play  | *ENG | [0 to 11 / <b>0</b> / 1 /step ] <b>FA</b><br>0: RICOH Aficio MP C3000<br>1: RICOH Aficio MP C2500<br>2: SAVIN C2525<br>3: SAVIN C3030<br>4: Gestetner MPC 2500/DSc525<br>5: Gestetner MPC 3000/DSc530<br>6: NRG MP C2500<br>7: NRG MP C3000<br>8: infotec ISC2525<br>9: infotec ISC3030<br>10: LANIER MP C2500/LD425c<br>11: LANIER MP C3000/LD430c |


|             |  |      |                                       |
|-------------|--|------|---------------------------------------|
| <b>5913</b> | <b>[Switchover Permission Time]</b>  |      |                                       |
|             | Print Application Timer  | *CTL | [3 to 30 / <b>3</b> / 1 second /step] |
| 002         | Sets the amount of time to elapse while the machine is in standby mode (and the operation panel keys have not been used) before another application can gain control of the display. |      |                                       |

|             |  |      |                      |
|-------------|--|------|----------------------|
| <b>5967</b> | <b>[Copy Server Set Function]</b>  | *CTL | <b>0: ON, 1: OFF</b> |
|             | Enables and disables the document server. This is a security measure that prevents image data from being left in the temporary area of the HDD. After changing this setting, you must switch the main switch off and on to enable the new setting. |      |                      |

|             |  |      |   |
|-------------|--|------|---|
| <b>5974</b> | <b>[Cherry Server]</b>   |      |   |
|             | Specifies which version of ScanRouter, "Lite" or "Full", is installed. |      |   |
| 001         | Cherry Server  | *CTL | [0 or 1 / <b>0</b> / -]<br>0: Lite<br>1: Full |

|             |  |  |  |
|-------------|--|--|--|
|             | <b>[Device Setting]</b>  |  |  |
| <b>5985</b> | The NIC and USB support features are built into the GW controller. Use this SP to enable and disable these features. In order to use the NIC and USB functions built into the controller board, these SP codes must be set to "1". |  |  |
| 001         | On Board NIC   |  | [0 to 2 / <b>0</b> / 1 /step]<br>0: Disable, 1: Enable, 2: Function limitation<br>When the "Function limitation" is set, "On board NIC" is limited only for the NRS or LDAP/NT authentication.<br><a href="#">↓ Note</a><br><ul style="list-style-type: none"> <li>Other network applications than NRS or LDAP/NT authentication are not available when</li> </ul> |

|     |              |   |
|-----|--------------|---|
|     |              | this SP is set to "2". Even though you can change the initial settings of those network applications, the settings do not work. |
| 002 | On Board USB | [0 or 1 / 0 / 1/step]<br>0: Disable, 1: Enable  |

|             |   |   |
|-------------|---|---|
| <b>5987</b> | <b>[Counter Falsification Prevention]</b> |   |
| 001         | 0: OFF / 1: ON                            | <p>This SP detects that a mechanical counter device is removed. If it is detected, SC610 occurs.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>The mechanical counter is provided only for NA model.</li> </ul> |

|             |                            |   |  |
|-------------|----------------------------|---|--|
| <b>5990</b> | <b>[SP print mode]</b>     |   |  |
|             | Prints out the SMC sheets. |   |  |
| 001         | All (Data List)            | - |  |
| 002         | SP (Mode Data List)        | - |  |
| 003         | User Program               | - |  |
| 004         | Logging Data               | - |  |
| 005         | Diagnostic Report          | - |  |
| 006         | Non-Default                | - |  |
| 007         | NIB Summary                | - |  |
| 008         | Capture Log                | - |  |
| 021         | Copier User Program        | - |  |
| 022         | Scanner SP                 | - |  |
| 023         | Scanner User Program       | - |  |



SP6-XXX (Peripherals)

|             |   |      |   |
|-------------|---|------|---|
| <b>6006</b> | <b>[ADF Adj.] ADF Adjustment</b>  |      |   |
|             | Adjusts the side-to-side and leading registration of originals with the ARDF.             |      |   |
| 001         | Side-to-Side Registration   | *ENG | [-3.0 to 3.0 / <b>0</b> / 0.1 mm/step ] |
| 003         | Leading Edge Registration   |      | [-5.0 to 5.0 / <b>0</b> / 0.1 mm/step ] |
|             | Adjusts the amount of paper buckle to correct original skew for the front and rear sides. |      |   |
| 005         | Buckle: Duplex Front  | *ENG | [-5.0 to 5.0 / <b>0</b> / 0.1 mm/step ] |
| 006         | Buckle: Duplex Rear   |      |   |
|             | Adjusts the erase margin at the original trailing edge.                                   |      |   |
| 007         | Rear Edge Erase   | *ENG | [-5.0 to 5.0 / <b>0</b> / 0.1 mm/step ] |

|             |   |  |
|-------------|---|--|
| <b>6007</b> | <b>[ADF Input Check]</b>  |  |
|             | Displays the signals received from the sensors and switches of the ARDF.<br>Only Bit 0 is used for ADF input check. |  |
| 001         | Original Length 1 (B5 Detection Sensor)   | 0: Paper not detected<br>1: Paper detected |
| 002         | Original Length 2 (A4 Detection Sensor)   |  |
| 003         | Original Length 3 (LG Detection Sensor)   |  |
| 004         | Original Width S  |  |
| 005         | Original Width M  |  |
| 006         | Original Width L  |  |
| 007         | Original Width LL   |  |

|     |                     |   |
|-----|---------------------|---|
| 009 | Original Detection  |   |
| 010 | Rear Edge Detection |   |
| 011 | Skew Correction     |   |
| 013 | Registration        |   |
| 014 | Exit                |   |
| 015 | Feed Cover          | 0: ADF cover close<br>1: ADF cover open |
| 016 | Lift Up             | 0: ADF close<br>1: ADF open             |

|             |   |   |                                   |
|-------------|---|---|-----------------------------------|
| <b>6008</b> | <b>[ADF Output Check]</b>   |   |                                   |
|             | Activates the electrical components for functional check.<br>It is not possible to activate more than one component at the same time. |   |                                   |
| 003         | Feed Motor Forward  | - | Feed Motor-Forward rotation       |
| 004         | Feed Motor Reverse  |   | Feed Motor-Reverse rotation       |
| 005         | Relay Motor Forward   |   | Transport Motor- Forward rotation |
| 006         | Relay Motor Reverse   |   | Transport Motor- Forward rotation |
| 009         | Feed Clutch   |   | -                                 |
| 010         | Feed Solenoid   |   | Pick-up Solenoid                  |
| 011         | Inverter Solenoid   |   | -                                 |
| 012         | Stamp   |   | Stamp Solenoid                    |

|             |  |   |   |
|-------------|--|---|---|
| <b>6009</b> | <b>[ADF Free Run]</b>                                |   |   |
|             | Performs a DF free run in duplex mode or stamp mode. |   |   |
| 002         | Free Run Duplex Motion                               | - | - |

|             |  |      |                                      |
|-------------|--|------|--------------------------------------|
| <b>6010</b> | <b>[Stamp Position Adj.]</b> Fax Stamp Position Adjustment             |      |                                      |
|             | Adjusts the horizontal position of the stamp on the scanned originals. |      |                                      |
| 6010 1      | Stamp Position Adj.  | *ENG | [-5.0 to 5.0 / <b>0</b> / 1 mm/step] |

|             |  |      |   |
|-------------|--|------|---|
| <b>6016</b> | <b>[Original Size Detection Priority]</b> Original Size Detection Priority   |      |   |
|             | Specifies the original size for a size detected by the original sensor, since original sensors cannot recognize all sizes. |      |   |
| 001         | Original Size Detection Priority   | *ENG | <p>[0 or 1 / <b>0</b> / - ]</p> <p>0: Setting 1</p> <p>1: Setting 2</p> <p>Setting 1 Setting 2</p> <p>Bit 7: A4 (L)/LT (L)</p> <p>Bit 6: 11" x 15"/DLT (L)</p> <p>Bit 5: DLT (L)/ 11" x 15"</p> <p>Bit 4: LT (S)/ US Exec (S)</p> <p>Bit 3: LT (L)/ 8" x 10" (L)</p> <p>Bit 2: LG (L)/ F4 (L)</p> <p>Bit 1: A4 (L)/ 16K (L)</p> <p>Bit 0: 8K (L)/ DLT (L)</p> <p>Bits used for detection differ depending on destination as shown below.</p> <p>Bit 7 to 6: Only for Japan</p> <p>Bit 5 to 2: Only for US</p> <p>Bit 1 to 0: Only for EU/AA</p> |

|             |   |      |                                       |
|-------------|---|------|---------------------------------------|
| <b>6017</b> | <b>[DF Magnification Adj.]</b> DF Magnification Adjustment        |      |                                       |
|             | Adjusts the magnification in the sub-scan direction for the ARDF. |      |                                       |
| 001         | DF Magnification Adj.   | *CTL | [-5.0 to 5.0 / <b>0</b> / 0.1 %/step] |

|             |                               |  |  |
|-------------|-------------------------------|--|--|
| <b>6123</b> | <b>[Jogger Position Adj.]</b> |  |  |
|-------------|-------------------------------|--|--|

|     |                              |      |  |
|-----|------------------------------|------|--|
|     | Adjusts the jogger position. |      |  |
| 001 | -                            | *ENG | [-4.0 to 4.0 / <b>0</b> / 0.4 mm/step] |

|             |  |      |   |
|-------------|--|------|---|
| <b>6128</b> | <b>[Punch Position: Sub Scan]</b>                        |      |   |
|             | Adjusts the punching position in the sub scan direction. |      |   |
| 001         | Domestic 2Hole   | *ENG | [-7.5 to 7.5 / <b>0</b> / 0.5 mm/step]] |
| 002         | North America 3Hole                                      | *ENG |   |
| 003         | Europe 4Hole   | *ENG |   |
| 004         | North Europe 4Hole                                       | *ENG |   |
| 005         | North Europe 2Hole                                       | *ENG |   |

|             |   |      |   |
|-------------|---|------|---|
| <b>6129</b> | <b>[Punch Position: Main Scan]</b>                        |      |   |
|             | Adjusts the punching position in the main scan direction. |      |   |
| 001         | Domestic 2Hole  | *ENG | [-2.0 to 2.0 / <b>0</b> / 0.4 mm/step]] |
| 002         | North America 3Hole                                       | *ENG |   |
| 003         | Europe 4Hole  | *ENG |   |
| 004         | North Europe 4Hole  | *ENG |   |
| 005         | North Europe 2Hole  | *ENG |   |

|             |   |      |  |
|-------------|---|------|--|
| <b>6130</b> | <b>[Skew Correction: Buckle Adj.]</b>         |      |  |
|             | Adjusts the paper buckle for each paper size. |      |  |
| 001         | A3T (SEF)                                     | *ENG | [-5.0 to 5.0 / <b>0</b> / 0.25 mm/step]] |
| 002         | B4T (SEF)                                     | *ENG |  |
| 003         | A4T (SEF)                                     | *ENG |  |


|     |             |      |  |
|-----|-------------|------|--|
| 004 | A4Y (LEF)   | *ENG |  |
| 005 | B5T (SEF)   | *ENG |  |
| 006 | B5Y (LEF)   | *ENG |  |
| 007 | DLT-T (SEF) | *ENG |  |
| 008 | LG-T (SEF)  | *ENG |  |
| 009 | LT-T (SEF)  | *ENG |  |
| 010 | LT-Y (LEF)  | *ENG |  |
| 011 | 12" x 18"   | *ENG |  |
| 012 | Other       | *ENG |  |


|             |   |      |  |
|-------------|---|------|--|
| <b>6131</b> | <b>[Skew Correction Control]</b>  |      |  |
|             | Selects the skew correction control for each paper size. These are only activated for B793. |      |  |
| 001         | A3T (SEF)   | *ENG | [0 to 2 / 1 / 1/step]<br>0: No (No skew correction)<br>1: Roller Stop Skew Correction<br>2: Roller Reverse Skew Correction |
| 002         | B4T (SEF)   | *ENG |  |
| 003         | A4T (SEF)   | *ENG |  |
| 004         | A4Y (LEF)   | *ENG |  |
| 005         | B5T (SEF)   | *ENG |  |
| 006         | B5Y (LEF)   | *ENG |  |
| 007         | DLT-T (SEF)   | *ENG |  |
| 008         | LG-T (SEF)  | *ENG |  |
| 009         | LT-T (SEF)  | *ENG |  |
| 010         | LT-Y (LEF)  | *ENG |  |
| 011         | 12" x 18"   | *ENG |  |

|     |       |      |  |
|-----|-------|------|--|
| 012 | Other | *ENG |  |
|-----|-------|------|--|

|             |  |      |   |
|-------------|--|------|---|
| <b>6132</b> | <b>[Jogger Fence Fine Adj]</b>   |      |   |
|             | This SP adjusts the distance between the jogger fences and the sides of the stack on the finisher stapling tray in the Booklet Finisher B793. The adjustment is done perpendicular to the direction of paper feed. |      |   |
| 001         | A3T (SEF)  | *ENG | [-1.5 to 1.5 / <b>0</b> / 1/step]<br>+ Value: Increases distance between jogger fences and the sides of the stack.<br>- Value: Decreases the distance between the jogger fences and the sides of the stack. |
| 002         | B4T (SEF)  | *ENG |   |
| 003         | A4T (SEF)  | *ENG |   |
| 004         | A4Y (LEF)  | *ENG |   |
| 005         | B5T (SEF)  | *ENG |   |
| 006         | B5Y (LEF)  | *ENG |   |
| 007         | DLT-T (SEF)  | *ENG |   |
| 008         | LG-T (SEF)   | *ENG |   |
| 009         | LT-T (SEF)   | *ENG |   |
| 010         | LT-Y (LEF)   | *ENG |   |
| 011         | 12" x 18"  | *ENG |   |
| 012         | Other  | *ENG |   |

|             |  |      |                                    |
|-------------|--|------|------------------------------------|
| <b>6133</b> | <b>[Staple Position Adjustment]</b>  |      |                                    |
|             | Adjusts the staple position for each finisher (B408/B793/B792).<br>+ Value: Moves the staple position to the rear side.<br>- Value: Moves the staple position to the front side. |      |                                    |
| 001         | Finisher 1 (B408/B793)   | *ENG | [-3.5 to 3.5 / <b>0</b> / 1/step]] |
| 002         | Finisher 2 (B792)  | *ENG | [-2.0 to 2.0 / <b>0</b> / 1/step]] |

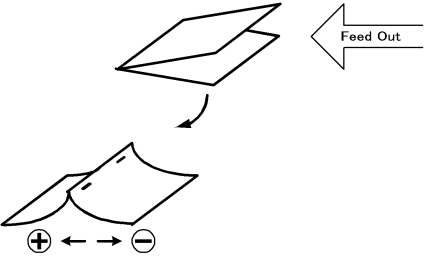
|                |   |   |
|----------------|---|---|
| <b>6134</b>    | <b>[Saddle Stitch Position Adjustment]</b>  |   |
| <b>User SP</b> | Use this SP to adjust the stapling position of the booklet stapler when paper is stapled and folded in the Booklet Finisher B793. |   |
| 001            | A3 SEF  | <p>[-3.0 to 3.0 / 0 / 0.2 mm/step]</p> <p>+ Value: Shifts staple position toward the crease.<br/>- Value: Shifts staple position away from the crease.</p>  |
| 002            | B4 SEF  |   |
| 003            | A4 SEF  |   |
| 004            | B5 SEF  |   |
| 005            | DLT-T (SEF)   |   |
| 006            | LG-T (SEF)  |   |
| 007            | LT-T (SEF)  |   |
| 008            | 12" x 18"   |   |
| 009            | Other   |   |

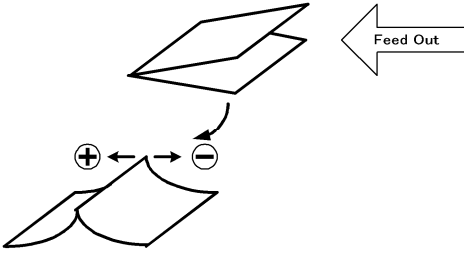
|                |  |   |
|----------------|--|---|
| <b>6135</b>    | <b>[Folder Position Adj.]</b>  |   |
| <b>User SP</b> | This SP corrects the folding position when paper is stapled and folded in the Booklet Finisher B793. |   |
| 001            | A3 SEF   | <p>[-3.0 to 3.0 / 0 / 0.2 mm/step]</p> <p>+ Value: Shifts staple position toward the crease.<br/>- Value: Shifts staple position away from the crease.</p>  |
| 002            | B4 SEF   |   |
| 003            | A4 SEF   |   |
| 004            | B5 SEF   |   |
| 005            | DLT-T (SEF)  |   |
| 006            | LG-T (SEF)   |   |
| 007            | LT-T (SEF)   |   |
| 008            | 12" x 18"  |   |
| 009            | Other  |   |


Service  
Tables


|   |      |   |                            |
|---|------|---|----------------------------|
| ⇒ | 6136 | <b>[Folding Number]</b>   |                            |
|   |      | Sets the number of times that folding is done in the Booklet Finisher (B804). |                            |
|   | 001  | -   | [2 to 30 / 2 / 1 time/step |

|  |      |  |  |
|--|------|--|--|
|  | 6137 | <b>[Finisher Free Run]</b>                 |  |
|  |      | These SPs are used only for B793 finisher. |  |
|  | 001  | Free Run 1                                 | Free run for paper edge stapling.                                |
|  | 002  | Free Run 2                                 | Free run for booklet stapling.                                   |
|  | 003  | Free Run 3                                 | Shipping free run. Simulates standby conditions during shipping. |
|  | 004  | Free Run 4                                 | <b>DFU</b>   |

|             |  |  |  |
|-------------|--|--|--|
| <b>6138</b> | <b>[FIN (TIG) INPUT Check]</b> Finisher (B793) Input Check   |  |  |
|             | Displays the signals received from sensors and switches of the booklet finisher.<br>(  "Input Check Table") |  |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>6139</b> | <b>[FIN (KIN) INPUT Check]</b> Finisher (B408) Input Check   |  |  |
|             | Displays the signals received from sensors and switches of the booklet finisher.<br>(  "Input Check Table") |  |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>6141</b> | <b>[FIN (KAN) INPUT Check]</b> Finisher (B792) Input Check   |  |  |
|             | Displays the signals received from sensors and switches of the booklet finisher.<br>(  "Input Check Table") |  |  |

|             |   |  |  |
|-------------|---|--|--|
| <b>6143</b> | <b>[FIN (TIG) OUPUT Check]</b> Finisher (B793) Output Check   |  |  |
|             | Displays the signals received from sensors and switches of the booklet finisher.<br>(  "Output Check Table") |  |  |



|             |   |
|-------------|---|
| <b>6144</b> | <b>[FIN (KIN) OUPUT Check]</b> Finisher (B408) Output Check   |
|             | Displays the signals received from sensors and switches of the booklet finisher.<br>(☛"Output Check Table") |

|             |   |
|-------------|---|
| <b>6146</b> | <b>[FIN (KAN) OUPUT Check]</b> Finisher (B792) Output Check   |
|             | Displays the signals received from sensors and switches of the booklet finisher.<br>(☛"Output Check Table") |

SP7-XXX (Data Log)

|             |   |      |                           |
|-------------|---|------|---------------------------|
| <b>7401</b> | <b>[Total SC Counter]</b>                 |      |                           |
|             | Displays the number of SC codes detected. |      |                           |
| 7401 1      | SC Counter                                | *CTL | [0 to 9999 / 0 / 1/step ] |

|             |  |      |   |
|-------------|--|------|---|
| <b>7403</b> | <b>[SC History]</b>  |      |   |
|             | Logs the SC codes detected.<br>The 10 most recently detected SC Codes are not displayed on the screen, but can be seen on the SMC (logging) outputs. |      |   |
| 7403 1      | Latest   | *CTL | - |
| 7403 2      | Latest 1   |      |   |
| 7403 3      | Latest 2   |      |   |
| 7403 4      | Latest 3   |      |   |
| 7403 5      | Latest 4   |      |   |
| 7403 6      | Latest 5   |      |   |
| 7403 7      | Latest 6   |      |   |
| 7403 8      | Latest 7   |      |   |
| 7403 9      | Latest 8   |      |   |

Service Tables

|         |          |  |  |
|---------|----------|--|--|
| 7403 10 | Latest 9 |  |  |
|---------|----------|--|--|

|        |   |          |                                 |
|--------|---|----------|---------------------------------|
| 7502   | <b>[Total Paper Jam Counter]</b>            |          |                                 |
|        | Displays the total number of jams detected. |          |                                 |
| 7502 1 | Total Jam                                   | *<br>CTL | [0 to 9999 / 0 / 1 sheet/step ] |

|        |   |      |                                    |
|--------|---|------|------------------------------------|
| 7503   | <b>[Total Original Jam Counter]</b>         |      |                                    |
|        | Displays the total number of original jams. |      |                                    |
| 7503 1 | Original Jam counter                        | *CTL | [0 to 9999 / 0 / 1 original/step ] |

|   |                              |      |   |
|---|------------------------------|------|---|
| 7504  | <b>[Paper Jam Location]</b>  |      |   |
|   | ON: On check, OFF: Off Check |      |   |
| Displays the number of jams according to the location where jams were detected. |                              |      |   |
| <b>NOTE:</b> The LCT is counted as the 3rd feed station.                        |                              |      |   |
| 7504 1  | At Power On                  | *CTL | For details, see the "Jam Detection" in the Troubleshooting (section 4)". |
| 7504 3  | Tray 1: ON                   | *CTL |   |
| 7504 4  | Tray 2: ON                   | *CTL |   |
| 7504 5  | Tray 3: ON                   | *CTL |   |
| 7504 6  | Tray 4: ON                   | *CTL |   |
| 7504 8  | Bypass: ON                   | *CTL |   |
| 7504 9  | Duplex: ON                   | *CTL |   |
| 7504 11   | Vertical Transport 1: ON     | *CTL |   |
| 7504 12   | Vertical Transport 2: ON     | *CTL |   |
| 7504 13   | Bank Transport 1             | *CTL |   |

|          |                        |      |
|----------|------------------------|------|
| 7504 17  | Registration: ON       | *CTL |
| 7504 18  | Fusing Entrance: ON    | *CTL |
| 7504 19  | Fusing Exit: ON        | *CTL |
| 7504 20  | Paper Exit: ON         | *CTL |
| 7504 21  | Relay Exit: ON         | *CTL |
| 7504 22  | Relay Transport: ON    | *CTL |
| 7504 25  | Duplex Exit: ON        | *CTL |
| 7504 26  | Duplex Reverse: ON     | *CTL |
| 7504 27  | Duplex Entrance: ON    | *CTL |
| 7504 28  | 1+Y59 Bin Exit Sensor  | *CTL |
| 7504 51  | SEF Sensor 1           | *CTL |
| 7504 52  | SEF Sensor 2           | *CTL |
| 7504 53  | Bank SEF Sensor 1      | *CTL |
| 7504 54  | Bank SEF Sensor 2      | *CTL |
| 7504 57  | Regist Sensor          | *CTL |
| 7504 59  | Fusing Exit Sensor     | *CTL |
| 7504 60  | Exit Sensor            | *CTL |
| 7504 61  | Relay Exit Sensor      | *CTL |
| 7504 62  | Relay Sensor           | *CTL |
| 7504 65  | Duplex Exit Sensor     | *CTL |
| 7504 66  | Duplex Entrance Sensor | *CTL |
| 7504 68  | 1-Bin Exit: ON         | *CTL |
| 7504 100 | Finisher Entrance      | *CTL |

|          |                                 |      |
|----------|---------------------------------|------|
| 7504 101 | Finisher Shift Tray Exit        | *CTL |
| 7504 102 | Finisher Staple                 | *CTL |
| 7504 103 | Finisher Exit                   | *CTL |
| 7504 104 | Finisher Drive Motor            | *CTL |
| 7504 105 | Finisher Tray Lift Motor        | *CTL |
| 7504 106 | Finisher Jogger Motor           | *CTL |
| 7504 107 | Finisher Shift Motor            | *CTL |
| 7504 108 | Finisher Staple Motor           | *CTL |
| 7504 109 | Finisher Exit Motor             | *CTL |
| 7504 130 | Finisher Entrance               | *CTL |
| 7504 131 | Finisher Proof Exit             | *CTL |
| 7504 132 | Finisher Shift Tray Exit        | *CTL |
| 7504 133 | Finisher Staple Exit            | *CTL |
| 7504 134 | Finisher Exit                   | *CTL |
| 7504 135 | Finisher Folding                | *CTL |
| 7504 136 | Finisher Folding Exit           | *CTL |
| 7504 137 | Finisher Guide Motor            | *CTL |
| 7504 138 | Finisher Staple Moving<br>Motor | *CTL |
| 7504 139 | Finisher Punch Motor            | *CTL |
| 7504 140 | Finisher Tray Lift Motor        | *CTL |
| 7504 141 | Finisher Jogger Motor           | *CTL |
| 7504 142 | Finisher Shift Roller<br>Motor  | *CTL |

|          |                                |      |
|----------|--------------------------------|------|
| 7504 143 | Finisher Folding Plate Motor   | *CTL |
| 7504 144 | Finisher Staple Motor          | *CTL |
| 7504 145 | Finisher Exit Motor            | *CTL |
| 7504 146 | Finisher Stack 1 Release Motor | *CTL |
| 7504 147 | Finisher Stack 2 Release Motor | *CTL |
| 7504 148 | Finisher Stopper Motor         | *CTL |
| 7504 160 | Finisher Entrance: ON          | *CTL |
| 7504 161 | Finisher Entrance: OFF         | *CTL |
| 7504 162 | Finisher Stack Exit            | *CTL |
| 7504 163 | Finisher Staple                | *CTL |
| 7504 164 | Finisher Staple Cancel         | *CTL |
| 7504 165 | Finisher Jogger Motor          | *CTL |
| 7504 166 | Finisher Pickup Lift Motor     | *CTL |
| 7504 167 | Finisher Staple Slide          | *CTL |
| 7504 168 | Finisher Stack Tray            | *CTL |
| 7504 169 | Finisher Belt Lift Solenoid    | *CTL |
| 7504 230 | Finisher Exit No Response      | *CTL |
| 7504 231 | Finisher Communication Error   | *CTL |

Service Tables

|             |   |      |   |
|-------------|---|------|---|
| <b>7505</b> | <b>[Original Jam Detection]</b>                         |      |   |
|             | Displays the total number of original jams by location. |      |   |
| 7505 1      | At Power On   | *CTL | - |
| 7505 3      | Skew Correction: ON                                     |      |   |
| 7505 4      | Registration: ON  |      |   |
| 7505 5      | Paper Exit: ON  |      |   |
| 7505 53     | Skew Correction: OFF                                    |      |   |
| 7505 54     | Registration: OFF                                       |      |   |
| 7505 55     | Paper Exit: OFF   |      |   |

|             |  |      |                                 |
|-------------|--|------|---------------------------------|
| <b>7506</b> | <b>[Jam Count by Paper Size]</b>                         |      |                                 |
|             | Displays the number of jams according to the paper size. |      |                                 |
| 7506 5      | A4 LEF   | *CTL | [0 to 9999 / 0 / 1 sheet/step ] |
| 7506 6      | A5 LEF   |      |                                 |
| 7506 14     | B5 LEF   |      |                                 |
| 7506 38     | LT LEF   |      |                                 |
| 7506 44     | HLT LEF  |      |                                 |
| 7506 132    | A3 SEF   |      |                                 |
| 7506 133    | A4 SEF   |      |                                 |
| 7506 134    | A5 SEF   |      |                                 |
| 7506 141    | B4 SEF   |      |                                 |
| 7506 142    | B5 SEF   |      |                                 |
| 7506 160    | DLT SEF  |      |                                 |
| 7506 164    | LG SEF   |      |                                 |

|          |         |  |  |
|----------|---------|--|--|
| 7506 166 | LT SEF  |  |  |
| 7506 172 | HLT SEF |  |  |
| 7506 255 | Others  |  |  |

|             |  |        |  |
|-------------|--|--------|--|
| <b>7507</b> | <b>[Plotter Jam History]</b>                       |        |  |
|             | Displays the 10 most recently detected paper jams. |        |  |
| 7507 1      | Latest   | *CTL - |  |
| 7507 2      | Latest 1   |        |  |
| 7507 3      | Latest 2   |        |  |
| 7507 4      | Latest 3   |        |  |
| 7507 5      | Latest 4   |        |  |
| 7507 6      | Latest 5   |        |  |
| 7507 7      | Latest 6   |        |  |
| 7507 8      | Latest 7   |        |  |
| 7507 9      | Latest 8   |        |  |
| 7507 10     | Latest 9   |        |  |

|             |   |        |  |
|-------------|---|--------|--|
| <b>7508</b> | <b>[Original Jam History]</b>                         |        |  |
|             | Displays the 10 most recently detected original jams. |        |  |
| 7508 1      | Latest  | *CTL - |  |
| 7508 2      | Latest-1  |        |  |
| 7508 3      | Latest-2  |        |  |
| 7508 4      | Latest-3  |        |  |
| 7508 5      | Latest-4  |        |  |

|         |          |  |  |
|---------|----------|--|--|
| 7508 6  | Latest-5 |  |  |
| 7508 7  | Latest-6 |  |  |
| 7508 8  | Latest-7 |  |  |
| 7508 9  | Latest-8 |  |  |
| 7508 10 | Latest-9 |  |  |

|             |                                   |   |   |
|-------------|-----------------------------------|---|---|
| <b>7801</b> | <b>[ROM No./Firmware Version]</b> |   |   |
| 7801 255    | Engine                            | - | Displays all versions and ROM numbers in SP7-910 and SP7-911. |

|             |  |      |                                   |
|-------------|--|------|-----------------------------------|
| <b>7803</b> | <b>[PM Counter Display]</b>  |      |                                   |
|             | (Page, Unit, [Color])  |      |                                   |
|             | <p>Displays the number of sheets printed for each current maintenance unit. PM counters click up based on the number of A4 (LT) LEF size sheets printed. Therefore, the A3 (DLT) Double Count is activated. The Double Count cannot be deactivated.</p> <p>When a unit is replaced, the machine automatically detects that the new unit is installed. Then, the current PM counter value is automatically moved to the PM Counter - Previous (SP7-906-1 to 10) and is reset to "0".</p> <p>The total number of sheets printed with the last unit replaced can be checked with SP7-906-1 to 10.</p> <p><b>NOTE:</b> The LCT is counted as the 3rd feed station.</p> |      |                                   |
| 7803 1      | Paper  | *ENG | [0 to 9999999 / 0 / 1 page/step ] |
| 7803 2      | Page: PCU: Bk  |      |                                   |
| 7803 3      | Page: PCU: M   |      |                                   |
| 7803 4      | Page: PCU: C   |      |                                   |
| 7803 5      | Page: PCU: Y   |      |                                   |



|         |   |      |                                   |
|---------|---|------|-----------------------------------|
| 7803 6  | Page: Development<br>Unit: Bk   |      |                                   |
| 7803 7  | Page: Development<br>Unit: M  |      |                                   |
| 7803 8  | Page: Development<br>Unit: C  |      |                                   |
| 7803 9  | Page: Development<br>Unit: Y  |      |                                   |
| 7803 10 | Page: Developer: Bk   |      |                                   |
| 7803 11 | Page: Developer: M  |      |                                   |
| 7803 12 | Page: Developer: C  |      |                                   |
| 7803 13 | Page: Developer: Y  |      |                                   |
| 7803 14 | Page: Image Transfer  |      |                                   |
| 7803 15 | Page: Cleaning Unit   |      |                                   |
| 7803 16 | Page: Fusing Unit   |      |                                   |
| 7803 17 | Page: Paper Transfer<br>Unit  |      |                                   |
| 7803 18 | Page: Toner Collection<br>Bottle  |      |                                   |
|         | <p>Displays the number of revolutions of motors or clutches for each current maintenance unit.<br/>[ 0 to 9999999 / 0 / 1 revolution/step ]</p> <p>When a unit is replaced, the machine automatically detects that the new unit is installed. Then, the current PM counter value is automatically moved to the PM Counter - Previous (SP7-906-11 to 20) and is reset to "0". The total number of revolutions made with the last unit replaced can be checked with SP7-906-11 to 20.</p> |      |                                   |
| 7803 31 | Rotation: PCU: Bk   | *ENG | [0 to 999999999 / - / 1 mm/step ] |

|         |  |  |  |
|---------|--|--|--|
| 7803 32 | Rotation: PCU: M   |  |  |
| 7803 33 | Rotation: PCU: C   |  |  |
| 7803 34 | Rotation: PCU: Y   |  |  |
| 7803 35 | Rotation: Development<br>Unit: Bk  |  |  |
| 7803 36 | Rotation: Development<br>Unit: M   |  |  |
| 7803 37 | Rotation: Development<br>Unit: C   |  |  |
| 7803 38 | Rotation: Development<br>Unit: Y   |  |  |
| 7803 39 | Rotation: Developer: Bk  |  |  |
| 7803 40 | Rotation: Developer: M   |  |  |
| 7803 41 | Rotation: Developer: C   |  |  |
| 7803 42 | Rotation: Developer: Y   |  |  |
| 7803 43 | Rotation: Image<br>Transfer Belt   |  |  |
| 7803 44 | Rotation: Cleaning Unit  |  |  |
| 7803 45 | Rotation: Fusing Unit  |  |  |
| 7803 46 | Rotation: Paper<br>Transfer Unit   |  |  |
| 7803 47 | Measurement: Toner<br>Collection bottle  |  |  |
|         | <p>Displays the value given by the following formula:<br/> <math>(\text{Current revolution} \div \text{Target revolution}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Rotation% counter is based on rotations, not prints. If the number of</p> |  |  |

|         |  |      |                           |
|---------|--|------|---------------------------|
|         | rotations reaches the limit, the machine enters the end condition for that unit.<br>If the print count lifetime is reached first, the machine also enters the end condition, even though the R% counter is still less than 100%. |      |                           |
| 7803 61 | Rotation (%): PCU: Bk  | *ENG | [0 to 255 / - / 1 %/step] |
| 7803 62 | Rotation (%): PCU: M   |      |                           |
| 7803 63 | Rotation (%): PCU: C   |      |                           |
| 7803 64 | Rotation (%): PCU: Y   |      |                           |
| 7803 65 | Rotation (%):<br>Development Unit: Bk  |      |                           |
| 7803 66 | Rotation (%):<br>Development Unit: M   |      |                           |
| 7803 67 | Rotation (%):<br>Development Unit: C   |      |                           |
| 7803 68 | Rotation (%):<br>Development Unit: Y   |      |                           |
| 7803 69 | Rotation (%):<br>Developer: Bk   |      |                           |
| 7803 70 | Rotation (%):<br>Developer: M  |      |                           |
| 7803 71 | Rotation (%):<br>Developer: C  |      |                           |
| 7803 72 | Rotation (%):<br>Developer: Y  |      |                           |
| 7803 73 | Rotation (%): Image<br>Transfer  |      |                           |
| 7803 74 | Rotation (%): Cleaning<br>Unit   |      |                           |
| 7803 75 | Rotation (%): Fusing   |      |                           |

|          |   |      |                           |
|----------|---|------|---------------------------|
|          | Unit  |      |                           |
| 7803 76  | Rotation (%): Paper Transfer Unit   |      |                           |
| 7803 77  | Measurement (%): Toner Collection bottle  |      |                           |
|          | <p>Displays the value given by the following formula:<br/> <math>(\text{Current printouts} \div \text{Target printouts}) \times 100</math>. This shows how much of the unit's expected lifetime has been used up.</p> <p>The Page% counter is based on printouts, not revolutions. If the number of printouts reaches the limit, the machine enters the end condition for that unit. If the revolution count lifetime is reached first, the machine also enters the end condition, even though the Page% counter is still less than 100%.</p> |      |                           |
| 7803 91  | Page (%): PCU: Bk   | *ENG | [0 to 255 / - / 1 %/step] |
| 7803 92  | Page (%): PCU: M  |      |                           |
| 7803 93  | Page (%): PCU: C  |      |                           |
| 7803 94  | Page (%): PCU: Y  |      |                           |
| 7803 95  | Page (%): Development Unit: Bk  |      |                           |
| 7803 96  | Page (%): Development Unit: M   |      |                           |
| 7803 97  | Page (%): Development Unit: C   |      |                           |
| 7803 98  | Page (%): Development Unit: Y   |      |                           |
| 7803 99  | Page (%): Developer: Bk   |      |                           |
| 7803 100 | Page (%): Developer: M  |      |                           |
| 7803 101 | Page (%): Developer: C  |      |                           |

|          |                               |  |  |
|----------|-------------------------------|--|--|
| 7803 102 | Page (%): Developer: Y        |  |  |
| 7803 103 | Page (%): Image Transfer      |  |  |
| 7803 104 | Page (%): Cleaning Unit       |  |  |
| 7803 105 | Page (%): Fusing Unit         |  |  |
| 7803 106 | Page (%): Paper Transfer Unit |  |  |

|             |  |   |   |
|-------------|--|---|---|
| <b>7804</b> | <b>[PM Counter Reset] PM Counter Clear</b>   |   |   |
|             | (Unit, [Color])  |   |   |
|             | <p>Clears the PM counter.</p> <p>Press the Enter key after the machine asks "Execute?", which will store the PM counter value in SP7-906 (PM Counter - Previous) and reset the value of the current PM counter (SP7-803) to "0".</p> |   |   |
| 7804 1      | Paper  | - | - |
| 7804 2      | PCU: K   |   |   |
| 7804 3      | PCU: M   |   |   |
| 7804 4      | PCU: C   |   |   |
| 7804 5      | PCU: Y   |   |   |
| 7804 6      | PCU: All   |   |   |
| 7804 7      | Development Unit: Bk   |   |   |
| 7804 8      | Development Unit: M  |   |   |
| 7804 9      | Development Unit: C  |   |   |
| 7804 10     | Development Unit: Y  |   |   |
| 7804 11     | Development Unit: All  |   |   |

|          |                         |  |  |
|----------|-------------------------|--|--|
| 7804 12  | Developer: Bk           |  |  |
| 7804 13  | Developer: M            |  |  |
| 7804 14  | Developer: C            |  |  |
| 7804 15  | Developer: Y            |  |  |
| 7804 16  | Developer: All          |  |  |
| 7804 17  | Image Transfer Belt     |  |  |
| 7804 18  | Cleaning Unit           |  |  |
| 7804 19  | Fusing Unit             |  |  |
| 7804 20  | Paper Transfer Unit     |  |  |
| 7804 21  | Toner Collection Bottle |  |  |
| 7804 100 | All                     |  |  |

|             |   |   |   |
|-------------|---|---|---|
| <b>7807</b> | <b>[SC/Jam Counter Reset]</b>                           |   |   |
|             | Clears the counters related to SC codes and paper jams. |   |   |
| 7807 1      | SC/Jam Clear  | - | - |

|             |                                      |  |  |
|-------------|--------------------------------------|--|--|
| <b>7826</b> | <b>[MF Error Counter] Japan Only</b> |  |  |
| 7826 1      | Error Total                          |  |  |
| 7826 2      | Error Staple                         |  |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>7827</b> | <b>[MF Error Counter Clear] Japan Only</b> |  |  |
|-------------|--|--|--|

|             |   |      |   |
|-------------|---|------|---|
| <b>7832</b> | <b>[Self-Diagnose Result Display]</b>   |      |   |
|             | Displays the result of the diagnostics. |      |   |
| 7832 1      | Diag. Result                            | *CTL | - |

|      |  |  |  |
|------|--|--|--|
| 7836 | <b>Total Memory Size</b>                               |  |  |
|      | Displays the memory capacity of the controller system. |  |  |

|        |   |      |                           |
|--------|---|------|---------------------------|
| 7852   | <b>[DF Scan Glass Dust Check Counter]</b>   |      |                           |
|        | Counts the number of occurrences (0 to 65,535) when dust was detected on the scanning glass of the ADF or resets the dust detection counter. Counting is done only if SP4-020-1 (ADF Scan Glass Dust Check) is switched on. |      |                           |
| 7852 1 | Dust Detection Counter  | *CTL | [0 to 9999 / - / 1 /step] |
| 7852 2 | Dust Detection Clear Counter  | *CTL | [0 to 9999 / - / 1 /step] |

|         |   |      |                          |
|---------|---|------|--------------------------|
| 7853    | <b>[Replacement Counter]</b>              |      |                          |
|         | Displays the PM parts replacement number. |      |                          |
| 7853 1  | PCU: Bk                                   | *CTL | [0 to 255 / - / 1 /step] |
| 7853 2  | PCU: M                                    | *CTL |                          |
| 7853 3  | PCU: C                                    | *CTL |                          |
| 7853 4  | PCU: Y                                    | *CTL |                          |
| 7853 5  | Development Unit: Bk                      | *CTL |                          |
| 7853 6  | Development Unit: M                       | *CTL |                          |
| 7853 7  | Development Unit: C                       | *CTL |                          |
| 7853 8  | Development Unit: Y                       | *CTL |                          |
| 7853 9  | Developer: Bk                             | *CTL |                          |
| 7853 10 | Developer: M                              | *CTL |                          |
| 7853 11 | Developer: C                              | *CTL |                          |

|         |                         |      |  |
|---------|-------------------------|------|--|
| 7853 12 | Developer: Y            | *CTL |  |
| 7853 13 | Image Transfer          | *CTL |  |
| 7853 14 | Cleaning Unit           | *CTL |  |
| 7853 15 | Fusing Unit             | *CTL |  |
| 7853 16 | Paper Transfer Unit     | *CTL |  |
| 7853 17 | Toner Collection Bottle | *CTL |  |

|        |  |      |   |
|--------|--|------|---|
| 7901   | <b>[Assert Info]</b>   |      |   |
|        | Records the location where a problem is detected in the program. The data stored in this SP is used for problem analysis. <b>DFU</b> |      |   |
| 7901 1 | File Name  | *CTL | - |
| 7901 2 | Number of Lines  |      |   |
| 7901 3 | Location   |      |   |

|        |  |      |                                   |
|--------|--|------|-----------------------------------|
| 7906   | <b>[Prev. Unit PM Counter]</b>   |      |                                   |
|        | (Page or Rotations, Unit, [Color]), Dev.: Development Unit                 |      |                                   |
|        | Displays the number of sheets printed with the previous maintenance units. |      |                                   |
| 7906 1 | Page: PCU: Bk  | *ENG | [0 to 9999999 / 0 / 1 page/step ] |
| 7906 2 | Page: PCU: M   |      |                                   |
| 7906 3 | Page: PCU: C   |      |                                   |
| 7906 4 | Page: PCU: Y   |      |                                   |
| 7906 5 | Page: Development<br>Unit: Bk  |      |                                   |
| 7906 6 | Page: Development<br>Unit: M   |      |                                   |



|         |  |      |                                 |
|---------|--|------|---------------------------------|
| 7906 7  | Page: Development<br>Unit: C   |      |                                 |
| 7906 8  | Page: Development<br>Unit: Y   |      |                                 |
| 7906 9  | Page: Developer: Bk  |      |                                 |
| 7906 10 | Page: Developer: M   |      |                                 |
| 7906 11 | Page: Developer: C   |      |                                 |
| 7906 12 | Page: Developer: Y   |      |                                 |
| 7906 13 | Page: Image Transfer   |      |                                 |
| 7906 14 | Page: Cleaning Unit  |      |                                 |
| 7906 15 | Page: Fusing Unit  |      |                                 |
| 7906 16 | Page: Paper Transfer<br>Unit   |      |                                 |
| 7906 17 | Page: Toner Collection<br>Bottle   |      |                                 |
|         | Displays the number of revolutions for motors or clutches in the previous maintenance units. |      |                                 |
| 7906 31 | Rotation: PCU: Bk  | *ENG | [0 to 9999999 / 0 / 1 mm/step ] |
| 7906 32 | Rotation: PCU: M   |      |                                 |
| 7906 33 | Rotation: PCU: C   |      |                                 |
| 7906 34 | Rotation: PCU: Y   |      |                                 |
| 7906 35 | Rotation: Development<br>Unit: Bk  |      |                                 |
| 7906 36 | Rotation: Development<br>Unit: M   |      |                                 |
| 7906 37 | Rotation: Development  |      |                                 |

|         |  |      |                            |
|---------|--|------|----------------------------|
|         | Unit: C  |      |                            |
| 7906 38 | Rotation: Development<br>Unit: Y   |      |                            |
| 7906 39 | Rotation: Developer: Bk  |      |                            |
| 7906 40 | Rotation: Developer: M   |      |                            |
| 7906 41 | Rotation: Developer: C   |      |                            |
| 7906 42 | Rotation: Developer: Y   |      |                            |
| 7906 43 | Rotation: Image<br>Transfer Belt   |      |                            |
| 7906 44 | Rotation: Cleaning Unit  |      |                            |
| 7906 45 | Rotation: Fusing Unit  |      |                            |
| 7906 46 | Rotation: Paper<br>Transfer Unit   |      |                            |
| 7906 47 | Measurement: Toner<br>Collection bottle  |      |                            |
|         | Displays the number of sheets printed with the previous maintenance unit or toner cartridge. |      |                            |
| 7906 61 | Rotation (%): PCU: Bk  | *ENG | [0 to 255 / 0 / 1 %/step ] |
| 7906 62 | Rotation (%): PCU: M   |      |                            |
| 7906 63 | Rotation (%): PCU: C   |      |                            |
| 7906 64 | Rotation (%): PCU: Y   |      |                            |
| 7906 65 | Rotation (%):<br>Development Unit: Bk  |      |                            |
| 7906 66 | Rotation (%):<br>Development Unit: M   |      |                            |
| 7906 67 | Rotation (%):  |      |                            |

|         |   |      |                            |
|---------|---|------|----------------------------|
|         | Development Unit: C   |      |                            |
| 7906 68 | Rotation (%):<br>Development Unit: Y  |      |                            |
| 7906 69 | Rotation (%):<br>Developer: Bk  |      |                            |
| 7906 70 | Rotation (%):<br>Developer: M   |      |                            |
| 7906 71 | Rotation (%):<br>Developer: C   |      |                            |
| 7906 72 | Rotation (%):<br>Developer: Y   |      |                            |
| 7906 73 | Rotation (%): Image<br>Transfer   |      |                            |
| 7906 74 | Rotation (%): Cleaning<br>Unit  |      |                            |
| 7906 75 | Rotation (%): Fusing<br>Unit  |      |                            |
| 7906 76 | Rotation (%): Paper<br>Transfer Unit  |      |                            |
| 7906 77 | Measurement (%):<br>Toner Collection bottle   |      |                            |
|         | Displays the value given by the following formula:<br>(Current count ÷ Yield count) x 100, where "Current count" is the current values in the counter for the part, and "Yield count" is the recommended yield. |      |                            |
| 7906 91 | Page (%): PCU: Bk   | *ENG | [0 to 255 / 0 / 1 %/step ] |
| 7906 92 | Page (%): PCU: M  |      |                            |
| 7906 93 | Page (%): PCU: C  |      |                            |
| 7906 94 | Page (%): PCU: Y  |      |                            |

|          |                                   |  |  |
|----------|-----------------------------------|--|--|
| 7906 95  | Page (%): Development<br>Unit: Bk |  |  |
| 7906 96  | Page (%): Development<br>Unit: M  |  |  |
| 7906 97  | Page (%): Development<br>Unit: C  |  |  |
| 7906 98  | Page (%): Development<br>Unit: Y  |  |  |
| 7906 99  | Page (%): Developer:<br>Bk        |  |  |
| 7906 100 | Page (%): Developer: M            |  |  |
| 7906 101 | Page (%): Developer: C            |  |  |
| 7906 102 | Page (%): Developer: Y            |  |  |
| 7906 103 | Page (%): Image<br>Transfer       |  |  |
| 7906 104 | Page (%): Cleaning Unit           |  |  |
| 7906 105 | Page (%): Fusing Unit             |  |  |
| 7906 106 | Page (%): Paper<br>Transfer Unit  |  |  |

|             |   |      |  |
|-------------|---|------|--|
| <b>7931</b> | <b>[Toner Bottle Bk]</b>                      |      |  |
|             | Displays the toner bottle information for Bk. |      |  |
| 7931 1      | Machine Serial ID                             | *ENG |  |
| 7931 2      | Cartridge Ver                                 |      |  |
| 7931 3      | Brand ID                                      |      |  |
| 7931 4      | Area ID                                       |      |  |

|         |                           |  |  |
|---------|---------------------------|--|--|
| 7931 5  | Product ID                |  |  |
| 7931 6  | Color ID                  |  |  |
| 7931 7  | Maintenance ID            |  |  |
| 7931 8  | New Product Information   |  |  |
| 7931 9  | Recycle Counter           |  |  |
| 7931 10 | Date                      |  |  |
| 7931 11 | Serial No.                |  |  |
| 7931 12 | Toner Remaining           |  |  |
| 7931 13 | EDP Code                  |  |  |
| 7931 14 | End History               |  |  |
| 7931 15 | Refill Information        |  |  |
| 7931 16 | Attachment: Total Counter |  |  |
| 7931 17 | Attachment: Color Counter |  |  |
| 7931 18 | End: Total Counter        |  |  |
| 7931 19 | End: Color Counter        |  |  |
| 7931 20 | Attachment Date           |  |  |
| 7931 21 | End Date                  |  |  |

|             |  |      |  |
|-------------|--|------|--|
| <b>7932</b> | <b>[Toner Bottle M]</b>                      |      |  |
|             | Displays the toner bottle information for M. |      |  |
| 7932 1      | Machine Serial ID                            | *ENG |  |
| 7932 2      | Cartridge Ver                                |      |  |

|         |                           |  |  |
|---------|---------------------------|--|--|
| 7932 3  | Brand ID                  |  |  |
| 7932 4  | Area ID                   |  |  |
| 7932 5  | Product ID                |  |  |
| 7932 6  | Color ID                  |  |  |
| 7932 7  | Maintenance ID            |  |  |
| 7932 8  | New Product Information   |  |  |
| 7932 9  | Recycle Counter           |  |  |
| 7932 10 | Date                      |  |  |
| 7932 11 | Serial No.                |  |  |
| 7932 12 | Toner Remaining           |  |  |
| 7932 13 | EDP Code                  |  |  |
| 7932 14 | End History               |  |  |
| 7932 15 | Refill Information        |  |  |
| 7932 16 | Attachment: Total Counter |  |  |
| 7932 17 | Attachment: Color Counter |  |  |
| 7932 18 | End: Total Counter        |  |  |
| 7932 19 | End: Color Counter        |  |  |
| 7932 20 | Attachment Date           |  |  |
| 7932 21 | End Date                  |  |  |

|             |  |
|-------------|--|
| <b>7933</b> | <b>[Toner Bottle C]</b>                      |
|             | Displays the toner bottle information for C. |

|         |                           |      |  |
|---------|---------------------------|------|--|
| 7933 1  | Machine Serial ID         | *ENG |  |
| 7933 2  | Cartridge Ver             |      |  |
| 7933 3  | Brand ID                  |      |  |
| 7933 4  | Area ID                   |      |  |
| 7933 5  | Product ID                |      |  |
| 7933 6  | Color ID                  |      |  |
| 7933 7  | Maintenance ID            |      |  |
| 7933 8  | New Product Information   |      |  |
| 7933 9  | Recycle Counter           |      |  |
| 7933 10 | Date                      |      |  |
| 7933 11 | Serial No.                |      |  |
| 7933 12 | Toner Remaining           |      |  |
| 7933 13 | EDP Code                  |      |  |
| 7933 14 | End History               |      |  |
| 7933 15 | Refill Information        |      |  |
| 7933 16 | Attachment: Total Counter |      |  |
| 7933 17 | Attachment: Color Counter |      |  |
| 7933 18 | End: Total Counter        |      |  |
| 7933 19 | End: Color Counter        |      |  |
| 7933 20 | Attachment Date           |      |  |
| 7933 21 | End Date                  |      |  |

|             |  |      |  |
|-------------|--|------|--|
| <b>7934</b> | <b>[Toner Bottle Y]</b>                      |      |  |
|             | Displays the toner bottle information for Y. |      |  |
| 7934 1      | Machine Serial ID                            | *ENG |  |
| 7934 2      | Cartridge Ver                                |      |  |
| 7934 3      | Brand ID                                     |      |  |
| 7934 4      | Area ID                                      |      |  |
| 7934 5      | Product ID                                   |      |  |
| 7934 6      | Color ID                                     |      |  |
| 7934 7      | Maintenance ID                               |      |  |
| 7934 8      | New Product Information                      |      |  |
| 7934 9      | Recycle Counter                              |      |  |
| 7934 10     | Date   |      |  |
| 7934 11     | Serial No.                                   |      |  |
| 7934 12     | Toner Remaining                              |      |  |
| 7934 13     | EDP Code                                     |      |  |
| 7934 14     | End History                                  |      |  |
| 7934 15     | Refill Information                           |      |  |
| 7934 16     | Attachment: Total Counter                    |      |  |
| 7934 17     | Attachment: Color Counter                    |      |  |
| 7934 18     | End: Total Counter                           |      |  |
| 7934 19     | End: Color Counter                           |      |  |
| 7934 20     | Attachment Date                              |      |  |



|         |          |  |  |
|---------|----------|--|--|
| 7934 21 | End Date |  |  |
|---------|----------|--|--|

|             |   |      |   |
|-------------|---|------|---|
| <b>7935</b> | <b>[Toner Bottle Log 1/2/3/4/5: Bk]</b> |      |   |
| 7935 1      | Serial No.                              | *ENG | Displays the toner bottle information log 1 for Bk. |
| 7935 2      | Attachment Date                         |      |   |
| 7935 3      | Attachment: Total Counter               |      |   |
| 7935 4      | Serial No.                              | *ENG | Displays the toner bottle information log 2 for Bk. |
| 7935 5      | Attachment Date                         |      |   |
| 7935 6      | Attachment: Total Counter               |      |   |
| 7935 7      | Serial No.                              | *ENG | Displays the toner bottle information log 3 for Bk. |
| 7935 8      | Attachment Date                         |      |   |
| 7935 9      | Attachment: Total Counter               |      |   |
| 7935 10     | Serial No.                              | *ENG | Displays the toner bottle information log 4 for Bk. |
| 7935 11     | Attachment Date                         |      |   |
| 7935 12     | Attachment: Total Counter               |      |   |
| 7935 13     | Serial No.                              | *ENG | Displays the toner bottle information log 5 for Bk. |
| 7935 14     | Attachment Date                         |      |   |
| 7935 15     | Attachment: Total Counter               |      |   |

|             |  |      |   |
|-------------|--|------|---|
| <b>7936</b> | <b>[Toner Bottle Log 1/2/3/4/5: M]</b> |      |   |
| 7936 1      | Serial No.                             | *ENG | Displays the toner bottle information log 1 |

|         |                           |      |  |
|---------|---------------------------|------|--|
| 7936 2  | Attachment Date           |      | for M.   |
| 7936 3  | Attachment: Total Counter |      |  |
| 7936 4  | Serial No.                | *ENG | Displays the toner bottle information log 2 for M. |
| 7936 5  | Attachment Date           |      |  |
| 7936 6  | Attachment: Total Counter |      |  |
| 7936 7  | Serial No.                | *ENG | Displays the toner bottle information log 3 for M. |
| 7936 8  | Attachment Date           |      |  |
| 7936 9  | Attachment: Total Counter |      |  |
| 7936 10 | Serial No.                | *ENG | Displays the toner bottle information log 4 for M. |
| 7936 11 | Attachment Date           |      |  |
| 7936 12 | Attachment: Total Counter |      |  |
| 7936 13 | Serial No.                | *ENG | Displays the toner bottle information log 5 for M. |
| 7936 14 | Attachment Date           |      |  |
| 7936 15 | Attachment: Total Counter |      |  |

|             |  |      |  |
|-------------|--|------|--|
| <b>7937</b> | <b>[Toner Bottle Log 1/2/3/4/5: C]</b> |      |  |
| 7937 1      | Serial No.                             | *ENG | Displays the toner bottle information log 1 for C. |
| 7937 2      | Attachment Date                        |      |  |
| 7937 3      | Attachment: Total Counter              |      |  |
| 7937 4      | Serial No.                             | *ENG | Displays the toner bottle information log 2        |

|         |                           |      |  |
|---------|---------------------------|------|--|
| 7937 5  | Attachment Date           |      | for C.   |
| 7937 6  | Attachment: Total Counter |      |  |
| 7937 7  | Serial No.                | *ENG | Displays the toner bottle information log 3 for C. |
| 7937 8  | Attachment Date           |      |  |
| 7937 9  | Attachment: Total Counter |      |  |
| 7937 10 | Serial No.                | *ENG | Displays the toner bottle information log 4 for C. |
| 7937 11 | Attachment Date           |      |  |
| 7937 12 | Attachment: Total Counter |      |  |
| 7937 13 | Serial No.                | *ENG | Displays the toner bottle information log 5 for C. |
| 7937 14 | Attachment Date           |      |  |
| 7937 15 | Attachment: Total Counter |      |  |

|             |  |      |  |
|-------------|--|------|--|
| <b>7938</b> | <b>[Toner Bottle Log 1/2/3/4/5: Y]</b> |      |  |
| 7938 1      | Serial No.                             | *ENG | Displays the toner bottle information log 1 for Y. |
| 7938 2      | Attachment Date                        |      |  |
| 7938 3      | Attachment: Total Counter              |      |  |
| 7938 4      | Serial No.                             | *ENG | Displays the toner bottle information log 2 for Y. |
| 7938 5      | Attachment Date                        |      |  |
| 7938 6      | Attachment: Total Counter              |      |  |
| 7938 7      | Serial No.                             | *ENG | Displays the toner bottle information log 3        |

|         |                           |      |  |
|---------|---------------------------|------|--|
| 7938 8  | Attachment Date           |      | for Y.   |
| 7938 9  | Attachment: Total Counter |      |  |
| 7938 10 | Serial No.                | *ENG | Displays the toner bottle information log 4 for Y. |
| 7938 11 | Attachment Date           |      |  |
| 7938 12 | Attachment: Total Counter |      |  |
| 7938 13 | Serial No.                | *ENG | Displays the toner bottle information log 5 for Y. |
| 7938 14 | Attachment Date           |      |  |
| 7938 15 | Attachment: Total Counter |      |  |

|             |  |      |  |
|-------------|--|------|--|
| <b>7950</b> | <b>[Unit Replacement Date]</b>                 |      |  |
|             | Displays the replacement date of each PM unit. |      |  |
| 7950 1      | Image Transfer Belt                            | *ENG |  |
| 7950 2      | Cleaning Unit                                  |      |  |
| 7950 3      | Paper Transfer Unit                            |      |  |
| 7950 4      | Fusing Unit                                    |      |  |
| 7950 5      | Toner Collection Bottle                        |      |  |

|             |   |      |                                      |
|-------------|---|------|--------------------------------------|
| <b>7951</b> | <b>[Remaining Day Counter]</b>                    |      |                                      |
|             | Displays the remaining unit life of each PM unit. |      |                                      |
| 7951 1      | Page: PCU: Bk                                     | *ENG | [0 to 255 / <b>255</b> / 1 day/step] |
| 7951 2      | Page: PCU: M                                      |      |                                      |
| 7951 3      | Page: PCU: C                                      |      |                                      |

|         |                                   |      |                                      |
|---------|-----------------------------------|------|--------------------------------------|
| 7951 4  | Page: PCU: Y                      |      |                                      |
| 7951 5  | Page: Development<br>Unit: Bk     |      |                                      |
| 7951 6  | Page: Development<br>Unit: M      |      |                                      |
| 7951 7  | Page: Development<br>Unit: C      |      |                                      |
| 7951 8  | Page: Development<br>Unit: Y      |      |                                      |
| 7951 9  | Page: Developer: Bk               |      |                                      |
| 7951 10 | Page: Developer: M                |      |                                      |
| 7951 11 | Page: Developer: C                |      |                                      |
| 7951 12 | Page: Developer: Y                |      |                                      |
| 7951 13 | Page: Image Transfer<br>Belt      |      |                                      |
| 7951 14 | Page: Cleaning Unit               |      |                                      |
| 7951 15 | Page: Fusing Unit                 |      |                                      |
| 7951 16 | Page: Paper Transfer<br>Unit      |      |                                      |
| 7951 31 | Rotation: PCU: Bk                 | *ENG | [0 to 255 / <b>255</b> / 1 day/step] |
| 7951 32 | Rotation: PCU: M                  |      |                                      |
| 7951 33 | Rotation: PCU: C                  |      |                                      |
| 7951 34 | Rotation: PCU: Y                  |      |                                      |
| 7951 35 | Rotation: Development<br>Unit: Bk |      |                                      |
| 7951 36 | Rotation: Development             |      |                                      |

|         |   |  |  |
|---------|---|--|--|
|         | Unit: M                                 |  |  |
| 7951 37 | Rotation: Development<br>Unit: C        |  |  |
| 7951 38 | Rotation: Development<br>Unit: Y        |  |  |
| 7951 39 | Rotation: Developer: Bk                 |  |  |
| 7951 40 | Rotation: Developer: M                  |  |  |
| 7951 41 | Rotation: Developer: C                  |  |  |
| 7951 42 | Rotation: Developer: Y                  |  |  |
| 7951 43 | Rotation: Image<br>Transfer Belt        |  |  |
| 7951 44 | Rotation: Cleaning Unit                 |  |  |
| 7951 45 | Rotation: Fusing Unit                   |  |  |
| 7951 46 | Rotation: Paper<br>Transfer Unit        |  |  |
| 7951 47 | Measurement: Toner<br>Collection bottle |  |  |

|             |   |      |   |
|-------------|---|------|---|
| <b>7952</b> | <b>[PM Yield Setting]</b>               |      |   |
|             | Adjusts the unit yield of each PM unit. |      |   |
| 7952 1      | Rotation: Image<br>Transfer Belt        | *CTL | [0 to 999999999 / <b>256597000</b> / 1 mm/step] |
| 7952 2      | Rotation: Cleaning Unit                 | *CTL | [0 to 999999999 / <b>128299000</b> / 1 mm/step] |
| 7952 3      | Rotation: Fusing Unit                   | *CTL | [0 to 999999999 / <b>155595000</b> / 1 mm/step] |
| 7952 4      | Rotation: Paper<br>Transfer Unit        | *CTL | [0 to 999999999 / <b>192448000</b> / 1 mm/step] |

|         |                                     |      |  |
|---------|-------------------------------------|------|--|
| 7952 11 | Page: Image Transfer Belt           | *CTL | [0 to 999999 / <b>320000</b> / 1 sheet/step]   |
| 7952 12 | Page: Cleaning Unit                 | *CTL | [0 to 999999 / <b>160000</b> / 1 sheet/step]   |
| 7952 13 | Page: Fusing Unit                   | *CTL | [0 to 999999 / <b>160000</b> / 1 sheet/step]   |
| 7952 14 | Page: Paper Transfer Unit           | *CTL | [0 to 999999 / <b>240000</b> / 1 sheet/step]   |
| 7952 21 | Day Threshold: PCU: Bk              | *CTL | Adjusts the threshold day for the near end from each PM unit.<br>[1 to 30 / <b>15</b> / 1 day/step]<br>These threshold days are used for NRS alarms. |
| 7952 22 | Day Threshold: PCU: M               |      |  |
| 7952 23 | Day Threshold: PCU: C               |      |  |
| 7952 24 | Day Threshold: PCU: Y               |      |  |
| 7952 25 | Day Threshold: Development Unit: Bk |      |  |
| 7952 26 | Day Threshold: Development Unit: M  |      |  |
| 7952 27 | Day Threshold: Development Unit: C  |      |  |
| 7952 28 | Day Threshold: Development Unit: Y  |      |  |
| 7952 29 | Day Threshold: Developer: Bk        |      |  |
| 7952 30 | Day Threshold: Developer: M         |      |  |
| 7952 31 | Day Threshold: Developer: C         |      |  |
| 7952 32 | Day Threshold: Developer: Y         |      |  |

|         |                                       |  |  |
|---------|---------------------------------------|--|--|
| 7952 33 | Day Threshold: Image Transfer Belt    |  |  |
| 7952 34 | Day Threshold: Cleaning Unit          |  |  |
| 7952 35 | Day Threshold: Fusing Unit            |  |  |
| 7952 36 | Day Threshold: Paper Transfer Unit]   |  |  |
| 7952 37 | Day Threshold: Toner Collection Botte |  |  |

|             |  |      |                                 |
|-------------|--|------|---------------------------------|
| <b>7953</b> | <b>[Operation Env. Log: PCU: Bk]</b>   |      |                                 |
|             | Displays the PCU rotation distance in each specified operation environment.<br>T: Temperature (°C), H: Relative Humidity (%) |      |                                 |
| 7953 1      | T<=5: 0<=H<30  | *CTL | [0 to 99999999 / - / 1 mm/step] |
| 7953 2      | T<=5: 30<=H<55   |      |                                 |
| 7953 3      | T<=5: 55<=H<80   |      |                                 |
| 7953 4      | T<=5: 80<=H<=100   |      |                                 |
| 7953 5      | 5<T<15: 0<=H<30  |      |                                 |
| 7953 6      | 5<T<15: 30<=H<55   |      |                                 |
| 7953 7      | 5<T<15: 55<=H<80   |      |                                 |
| 7953 8      | 5<T<15: 80<=H<=100   |      |                                 |
| 7953 9      | 15<=T<25: 0<=H<30  |      |                                 |
| 7953 10     | 15<=T<25: 30<=H<55   |      |                                 |
| 7953 11     | 15<=T<25: 55<=H<80   |      |                                 |
| 7953 12     | 15<=T<25:  |      |                                 |



|         |                         |  |  |
|---------|-------------------------|--|--|
|         | 80<=H<=100              |  |  |
| 7953 13 | 25<=T<30: 0<=H<30       |  |  |
| 7953 14 | 25<=T<30: 30<=H<55      |  |  |
| 7953 15 | 25<=T<30: 55<=H<80      |  |  |
| 7953 16 | 25<=T<30:<br>80<=H<=100 |  |  |
| 7953 17 | 30<=T: 0<=H<30          |  |  |
| 7953 18 | 30<=T: 30<=H<55         |  |  |
| 7952 19 | 30<=T: 55<=H<80         |  |  |
| 7952 20 | 30<=T: 80<=H<=100       |  |  |

|             |                                       |  |  |
|-------------|---------------------------------------|--|--|
| <b>7954</b> | <b>[Operation Env. Log Clear]</b>     |  |  |
|             | Clears the operation environment log. |  |  |
| 7954 1      |                                       |  |  |

SP8-XXX: Data Log2

Many of these counters are provided for features that are currently not available, such as sending color faxes, and so on. However, here are some Group 8 codes that when used in combination with others, can provide useful information.

| SP Numbers         | What They Do   |
|--------------------|--|
| SP8 211 to SP8 216 | The number of pages scanned to the document server.  |
| SP8 401 to SP8 406 | The number of pages printed from the document server |
| SP8 691 to SP8 696 | The number of pages sent from the document server    |

Specifically, the following questions can be answered:

- How is the document server actually being used?
- What application is using the document server most frequently?
- What data in the document server is being reused?

Most of the SPs in this group are prefixed with a letter that indicates the mode of operation (the mode of operation is referred to as an “application”). Before reading the Group 8 Service Table, make sure that you understand what these prefixes mean.

| Prefixes | What it means   |  |
|----------|---|--|
| T:       | Total: (Grand Total).   | Grand total of the items counted for all applications (C, F, P, etc.)..  |
| C:       | Copy application.   | Totals (pages, jobs, etc.) executed for each application when the job was not stored on the document server.   |
| F:       | Fax application.  |  |
| P:       | Print application.  |  |
| S:       | Scan application.   |  |
| L:       | Local storage (document server)                                 | Totals (jobs, pages, etc.) for the document server. The L: counters work differently case by case. Sometimes, they count jobs/pages stored on the document server; this can be in document server mode (from the document server window), or from another mode, such as from a printer driver or by pressing the Store File button in the Copy mode window. Sometimes, they include occasions when the user uses a file that is already on the document server. Each counter will be discussed case by case. |
| O:       | Other applications (external network applications, for example) | Refers to network applications such as Web Image Monitor. Utilities developed with the SDK (Software Development Kit) will also be counted with this group in the future.  |

The Group 8 SP codes are limited to 17 characters, forced by the necessity of displaying them on the small LCDs of printers and faxes that also use these SPs. Read over the list of abbreviations below and refer to it again if you see the name of an SP that you do not understand.

**Key for Abbreviations**

| Abbreviation | What it means   |
|--------------|---|
| /            | "By", e.g. "T:Jobs/Apl" = Total Jobs "by" Application   |
| >            | More (2> "2 or more", 4> "4 or more")   |
| AddBook      | Address Book  |
| Apl          | Application   |
| B/W          | Black & White   |
| Bk           | Black   |
| C            | Cyan  |
| ColCr        | Color Create  |
| ColMode      | Color Mode  |
| Comb         | Combine   |
| Comp         | Compression   |
| Deliv        | Delivery  |
| DesApl       | Designated Application. The application (Copy, Fax, Scan, Print) used to store the job on the document server, for example. |
| Dev Counter  | Development Count, no. of pages developed.  |
| Dup, Duplex  | Duplex, printing on both sides  |
| Emul         | Emulation   |
| FC           | Full Color  |
| FIN          | Post-print processing, i.e. finishing (punching, stapling, etc.)  |
| Full Bleed   | No Margins  |
| GenCopy      | Generation Copy Mode  |
| GPC          | Get Print Counter. For jobs 10 pages or less, this counter does   |

| Abbreviation | What it means   |
|--------------|---|
|              | not count up. For jobs larger than 10 pages, this counter counts up by the number that is in excess of 10 (e.g., for an 11-page job, the counter counts up 11-10 =1)  |
| IFax         | Internet Fax  |
| ImgEdt       | Image Edit performed on the original with the copier GUI, e.g. border removal, adding stamps, page numbers, etc.  |
| K            | Black (YMCK)  |
| LS           | Local Storage. Refers to the document server.   |
| LSize        | Large (paper) Size  |
| Mag          | Magnification   |
| MC           | One color (monochrome)  |
| NRS          | New Remote Service, which allows a service center to monitor machines remotely. "NRS" is used overseas, "CSS" is used in Japan.   |
| Org          | Original for scanning   |
| OrgJam       | Original Jam  |
| Palm 2       | Print Job Manager/Desk Top Editor: A pair of utilities that allows print jobs to be distributed evenly among the printers on the network, and allows files to moved around, combined, and converted to different formats. |
| PC           | Personal Computer   |
| PGS          | Pages. A page is the total scanned surface of the original. Duplex pages count as two pages, and A3 simplex count as two pages if the A3/DLT counter SP is switched ON.   |
| PJob         | Print Jobs  |
| Ppr          | Paper   |

| Abbreviation | What it means   |
|--------------|---|
| PrtJam       | Printer (plotter) Jam   |
| PrtPGS       | Print Pages   |
| R            | Red (Toner Remaining). Applies to the wide format model A2 only. This machine is under development and currently not available. |
| Rez          | Resolution  |
| SC           | Service Code (Error SC code displayed)  |
| Scn          | Scan  |
| Sim, Simplex | Simplex, printing on 1 side.  |
| S-to-Email   | Scan-to-E-mail  |
| SMC          | SMC report printed with SP5990. All of the Group 8 counters are recorded in the SMC report.                                     |
| Svr          | Server  |
| TonEnd       | Toner End   |
| TonSave      | Toner Save  |
| TXJob        | Send, Transmission  |
| YMC          | Yellow, Magenta, Cyan   |
| YMCK         | Yellow, Magenta, Cyan, Black  |

 Note

- All of the Group 8 SPs are reset with SP5 801 1 Memory All Clear.

|              |              |      |   |
|--------------|--------------|------|---|
| <b>8 001</b> | T:Total Jobs | *CTL | These SPs count the number of times each application is used to do a job.<br>[0 to 9999999/ 0 / 1]<br><b>Note:</b> The L: counter is the total number of times the other applications are used to send a job to the |
| <b>8 002</b> | C:Total Jobs | *CTL |   |
| <b>8 003</b> | F:Total Jobs | *CTL |   |

|              |              |      |  |
|--------------|--------------|------|--|
| <b>8 004</b> | P:Total Jobs | *CTL | document server, plus the number of times a file already on the document server is used. |
| <b>8 005</b> | S:Total Jobs | *CTL |  |
| <b>8 006</b> | L:Total Jobs | *CTL |  |

- These SPs reveal the number of times an application is used, not the number of pages processed.
- When an application is opened for image input or output, this counts as one job.
- Interrupted jobs (paper jams, etc.) are counted, even though they do not finish.
- Only jobs executed by the customer are counted. Jobs executed by the customer engineer using the SP modes are not counted.
- When using secure printing (when a password is required to start the print job), the job is counted at the time when either “Delete Data” or “Specify Output” is specified.
- A job is counted as a fax job when the job is stored for sending.
- When a fax is received to fax memory, the F: counter increments but the L: counter does not (the document server is not used).
- A fax broadcast counts as one job for the F: counter (the fax destinations in the broadcast are not counted separately).
- A fax broadcast is counted only after all the faxes have been sent to their destinations. If one transmission generates an error, then the broadcast will not be counted until the transmission has been completed.
- A printed fax report counts as one job for the F: counter.
- The F: counter does not distinguish between fax sending or receiving.
- When a copy job on the document server is printed, SP8022 also increments, and when a print job stored on the document server is printed, SP8024 also increments.
- When an original is both copied and stored on the document server, the C: and L: counters both increment.
- When a print job is stored on the document server, only the L: counter increments.
- When the user presses the Document Server button to store the job on the document server, only the L: counter increments.
- When the user enters document server mode and prints data stored on the document server, only the L: counter increments.
- When an image received from Palm 2 is received and stored, the L: counter increments.
- When the customer prints a report (user code list, for example), the O: counter increments. However, for fax reports and reports executed from the fax application, the

F: counter increments.

|       |           |      |   |
|-------|-----------|------|---|
| 8 011 | T:Jobs/LS | *CTL | <p>These SPs count the number of jobs stored to the document server by each application, to reveal how local storage is being used for input.</p> <p>[0 to 9999999/ 0 / 1]</p> <p>The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.</p> |
| 8 012 | C:Jobs/LS | *CTL |   |
| 8 013 | F:Jobs/LS | *CTL |   |
| 8 014 | P:Jobs/LS | *CTL |   |
| 8 015 | S:Jobs/LS | *CTL |   |
| 8 016 | L:Jobs/LS | *CTL |   |
| 8 017 | O:Jobs/LS | *CTL |   |

- When a scan job is sent to the document server, the S: counter increments. When you enter document server mode and then scan an original, the L: counter increments.
- When a print job is sent to the document server, the P: counter increments.
- When a network application sends data to the document server, the O: counter increments.
- When an image from Palm 2 is stored on the document server, the O: counter increments.
- When a fax is sent to the document server, the F: counter increments.

|       |           |      |   |
|-------|-----------|------|---|
| 8 021 | T:Pjob/LS | *CTL | <p>These SPs reveal how files printed from the document server were stored on the document server originally.</p> <p>[0 to 9999999/ 0 / 1]</p> <p>The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.</p> |
| 8 022 | C:Pjob/LS | *CTL |   |
| 8 023 | F:Pjob/LS | *CTL |   |
| 8 024 | P:Pjob/LS | *CTL |   |
| 8 025 | S:Pjob/LS | *CTL |   |
| 8 026 | L:Pjob/LS | *CTL |   |
| 8 027 | O:Pjob/LS | *CTL |   |

- When a copy job stored on the document server is printed with another application, the C: counter increments.

- When an application like DeskTopBinder merges a copy job that was stored on the document server with a print job that was stored on the document server, the C: and P: counters both increment.
- When a job already on the document server is printed with another application, the L: counter increments.
- When a scanner job stored on the document server is printed with another application, the S: counter increments. If the original was scanned from within document server mode, then the L: counter increments.
- When images stored on the document server by a network application (including Palm 2), are printed with another application, the O: counter increments.
- When a copy job stored on the document server is printed with a network application (Web Image Monitor, for example), the C: counter increments.
- When a fax on the document server is printed, the F: counter increments.

|       |               |      |  |
|-------|---------------|------|--|
| 8 031 | T:Pjob/DesApl | *CTL | <p>These SPs reveal what applications were used to output documents from the document server.</p> <p>[0 to 9999999/ 0 / 1]</p> <p>The L: counter counts the number of jobs printed from within the document server mode screen at the operation panel.</p> |
| 8 032 | C:Pjob/DesApl | *CTL |  |
| 8 033 | F:Pjob/DesApl | *CTL |  |
| 8 034 | P:Pjob/DesApl | *CTL |  |
| 8 035 | S:Pjob/DesApl | *CTL |  |
| 8 036 | L:Pjob/DesApl | *CTL |  |
| 8 037 | O:Pjob/DesApl | *CTL |  |

- When documents already stored on the document server are printed, the count for the application that started the print job is incremented.
- When the print job is started from a network application (Desk Top Binder, Web Image Monitor, etc.) the L: counter increments.

|       |              |      |  |
|-------|--------------|------|--|
| 8 041 | T:TX Jobs/LS | *CTL | <p>These SPs count the applications that stored files on the document server that were later accessed for transmission over the telephone line or over a network (attached to an e-mail,</p> |
| 8 042 | C:TX Jobs/LS | *CTL |  |
| 8 043 | F:TX Jobs/LS | *CTL |  |



|       |              |      |  |
|-------|--------------|------|--|
| 8 044 | P:TX Jobs/LS | *CTL | or as a fax image by I-Fax).<br>[0 to 9999999/ <b>0</b> / 1]<br><b>Note:</b> Jobs merged for sending are counted separately.<br>The L: counter counts the number of jobs scanned from within the document server mode screen at the operation panel. |
| 8 045 | S:TX Jobs/LS | *CTL |  |
| 8 046 | L:TX Jobs/LS | *CTL |  |
| 8 047 | O:TX Jobs/LS | *CTL |  |

- When a stored copy job is sent from the document server, the C: counter increments.
- When images stored on the document server by a network application or Palm2 are sent as an e-mail, the O: counter increments.

|       |                  |      |  |
|-------|------------------|------|--|
| 8 051 | T:TX Jobs/DesApl | *CTL | These SPs count the applications used to send files from the document server over the telephone line or over a network (attached to an e-mail, or as a fax image by I-Fax). Jobs merged for sending are counted separately.<br>[0 to 9999999/ <b>0</b> / 1]<br>The L: counter counts the number of jobs sent from within the document server mode screen at the operation panel. |
| 8 052 | C:TX Jobs/DesApl | *CTL |  |
| 8 053 | F:TX Jobs/DesApl | *CTL |  |
| 8 054 | P:TX Jobs/DesApl | *CTL |  |
| 8 055 | S:TX Jobs/DesApl | *CTL |  |
| 8 056 | L:TX Jobs/DesApl | *CTL |  |
| 8 057 | O:TX Jobs/DesApl | *CTL |  |

- If the send is started from Desk Top Binder or Web Image Monitor, for example, then the O: counter increments.

|       |   |      |                              |
|-------|---|------|------------------------------|
| 8 061 | T:FIN Jobs  | *CTL | [0 to 9999999/ <b>0</b> / 1] |
|       | These SPs total the finishing methods. The finishing method is specified by the application.                |      |                              |
| 8 062 | C:FIN Jobs  | *CTL | [0 to 9999999/ <b>0</b> / 1] |
|       | These SPs total finishing methods for copy jobs only. The finishing method is specified by the application. |      |                              |

|         |   |  |                       |
|---------|---|--|-----------------------|
| 8 063   | F:FIN Jobs  | *CTL   | [0 to 9999999/ 0 / 1] |
|         | <p>These SPs total finishing methods for fax jobs only. The finishing method is specified by the application.</p> <p><b>Note:</b> Finishing features for fax jobs are not available at this time.</p>             |  |                       |
| 8 064   | P:FIN Jobs  | *CTL   | [0 to 9999999/ 0 / 1] |
|         | <p>These SPs total finishing methods for print jobs only. The finishing method is specified by the application.</p>   |  |                       |
| 8 065   | S:FIN Jobs  | *CTL   | [0 to 9999999/ 0 / 1] |
|         | <p>These SPs total finishing methods for scan jobs only. The finishing method is specified by the application.</p> <p><b>Note:</b> Finishing features for scan jobs are not available at this time.</p>           |  |                       |
| 8 066   | L:FIN Jobs  | *CTL   | [0 to 9999999/ 0 / 1] |
|         | <p>These SPs total finishing methods for jobs output from within the document server mode screen at the operation panel. The finishing method is specified from the print window within document server mode.</p> |  |                       |
| 8 067   | O:FIN Jobs  | *CTL   | [0 to 9999999/ 0 / 1] |
|         | <p>These SPs total finishing methods for jobs executed by an external application, over the network. The finishing method is specified by the application.</p>  |  |                       |
| 8 06x 1 | Sort  | Number of jobs started in Sort mode. When a stored copy job is set for Sort and then stored on the document server, the L: counter increments. (See SP8 066 1) |                       |
| 8 06x 2 | Stack   | Number of jobs started out of Sort mode.   |                       |
| 8 06x 3 | Staple  | Number of jobs started in Staple mode.   |                       |
| 8 06x 4 | Booklet   | Number of jobs started in Booklet mode. If the machine is in staple mode, the Staple counter also increments.  |                       |
| 8 06x 5 | Z-Fold  | Number of jobs started In any mode other than the Booklet mode and set for folding (Z-fold).   |                       |

|         |       |  |
|---------|-------|--|
| 8 06x 6 | Punch | Number of jobs started in Punch mode. When Punch is set for a print job, the P: counter increments. (See SP8 064 6.) |
| 8 06x 7 | Other | Reserved. Not used.  |

|       |   |      |                       |
|-------|---|------|-----------------------|
| 8 071 | T:Jobs/PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the number of jobs broken down by the number of pages in the job, regardless of which application was used.                                     |      |                       |
| 8 072 | C:Jobs/PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count and calculate the number of copy jobs by size based on the number of pages in the job.  |      |                       |
| 8 073 | F:Jobs/PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count and calculate the number of fax jobs by size based on the number of pages in the job.   |      |                       |
| 8 074 | P:Jobs/PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count and calculate the number of print jobs by size based on the number of pages in the job.   |      |                       |
| 8 075 | S:Jobs/PGS  |      | [0 to 9999999/ 0 / 1] |
|       | These SPs count and calculate the number of scan jobs by size based on the number of pages in the job.  |      |                       |
| 8 076 | L:Jobs/PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count and calculate the number of jobs printed from within the document server mode window at the operation panel, by the number of pages in the job. |      |                       |
| 8 077 | O:Jobs/PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count and calculate the number of "Other" application jobs (Web Image Monitor, Palm 2, etc.) by size based on the number of pages in the job.         |      |                       |

|         |                |          |                   |
|---------|----------------|----------|-------------------|
| 8 07x 1 | 1 Page         | 8 07x 8  | 21 to 50 Pages    |
| 8 07x 2 | 2 Pages        | 8 07x 9  | 51 to 100 Pages   |
| 8 07x 3 | 3 Pages        | 8 07x 10 | 101 to 300 Pages  |
| 8 07x 4 | 4 Pages        | 8 07x 11 | 301 to 500 Pages  |
| 8 07x 5 | 5 Pages        | 8 07x 12 | 501 to 700 Pages  |
| 8 07x 6 | 6 to 10 Pages  | 8 07x 13 | 701 to 1000 Pages |
| 8 07x 7 | 11 to 20 Pages | 8 07x 14 | 1001 to Pages     |

- For example: When a copy job stored on the document server is printed in document server mode, the appropriate L: counter (SP8076 0xx) increments.
- Printing a fax report counts as a job and increments the F: counter (SP 8073).
- Interrupted jobs (paper jam, etc.) are counted, even though they do not finish.
- If a job is paused and re-started, it counts as one job.
- If the finisher runs out of staples during a print and staple job, then the job is counted at the time the error occurs.
- For copy jobs (SP 8072) and scan jobs (SP 8075), the total is calculated by multiplying the number of sets of copies by the number of pages scanned. (One duplex page counts as 2.)
- The first test print and subsequent test prints to adjust settings are added to the number of pages of the copy job (SP 8072).
- When printing the first page of a job from within the document server screen, the page is counted.

|       |  |      |                       |
|-------|--|------|-----------------------|
| 8 111 | T:FAX TX Jobs  | *CTL | [0 to 9999999/ 0 / 1] |
|       | <p>These SPs count the total number of jobs (color or black-and-white) sent by fax, either directly or using a file stored on the document server, on a telephone line.</p> <p><b>Note:</b> Color fax sending is not available at this time.</p> |      |                       |
| 8 113 | F: FAX TX Jobs   | *CTL | [0 to 9999999/ 0 / 1] |
|       | <p>These SPs count the total number of jobs (color or black-and-white) sent by fax directly on a telephone line.</p>   |      |                       |

|         |   |
|---------|---|
|         | <b>Note:</b> Color fax sending is not available at this time. |
| 8 11x 1 | B/W   |
| 8 11x 2 | Color   |

- These counters count jobs, not pages.
- This SP counts fax jobs sent over a telephone line with a fax application, including documents stored on the document server.
- If the mode is changed during the job, the job will count with the mode set when the job started.
- If the same document is faxed to both a public fax line and an I-Fax at a destination where both are available, then this counter increments, and the I-Fax counter (8 12x) also increments.
- The fax job is counted when the job is scanned for sending, not when the job is sent.

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 121   | T:IFAX TX Jobs   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total number of jobs (color or black-and-white) sent, either directly or using a file stored on the document server, as fax images using I-Fax.<br><b>Note:</b> Color fax sending is not available at this time. |      |                       |
| 8 123   | F: IFAX TX Jobs  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the number of jobs (color or black-and-white) sent (not stored on the document server), as fax images using I-Fax.<br><b>Note:</b> Color fax sending is not available at this time.                                  |      |                       |
| 8 12x 1 | B/W  |      |                       |
| 8 12x 2 | Color  |      |                       |

- These counters count jobs, not pages.
- The counters for color are provided for future use; the color fax feature is not available at this time.
- The fax job is counted when the job is scanned for sending, not when the job is sent.

|         |   |      |                       |
|---------|---|------|-----------------------|
| 8 131   | T:S-to-Email Jobs   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total number of jobs (color or black-and-white) scanned and attached to an e-mail, regardless of whether the document server was used or not. |      |                       |
| 8 135   | S: S-to-Email Jobs  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the number of jobs (color or black-and-white) scanned and attached to e-mail, without storing the original on the document server.                |      |                       |
| 8 13x 1 | B/W   |      |                       |
| 8 13x 2 | Color   |      |                       |
| 8 13x 3 | ACS   |      |                       |

- These counters count jobs, not pages.
- If the job is stored on the document server, after the job is stored it is determined to be color or black-and-white then counted.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be sent, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- If several jobs are combined for sending to the Scan Router, Scan-to-Email, or Scan-to-PC, or if one job is sent to more than one destination. each send is counted separately. For example, if the same document is sent by Scan-to-Email as well as Scan-to-PC, then it is counted twice (once for Scan-to-Email and once for Scan-to-PC).

|       |   |      |                       |
|-------|---|------|-----------------------|
| 8 141 | T:Deliv Jobs/Svr  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the total number of jobs (color or black-and-white) scanned and sent to a Scan Router server. |      |                       |
| 8 145 | S: Deliv Jobs/Svr   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the number of jobs (color or black-and-white) scanned in                                      |      |                       |

|         |  |
|---------|--|
|         | scanner mode and sent to a Scan Router server. |
| 8 14x 1 | B/W  |
| 8 14x 2 | Color  |
| 8 14x 3 | ACS  |

- These counters count jobs, not pages.
- The jobs are counted even though the arrival and reception of the jobs at the Scan Router server cannot be confirmed.
- If even one color image is mixed with black-and-white images, then the job is counted as a “Color” job.
- If the job is cancelled during scanning, or if the job is cancelled while the document is waiting to be delivered, the job is not counted.
- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

|         |   |      |                       |
|---------|---|------|-----------------------|
| 8 151   | T:Deliv Jobs/PC   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total number of jobs (color or black-and-white) scanned and sent to a folder on a PC (Scan-to-PC).<br><b>Note:</b> At the present time, 8 151 and 8 155 perform identical counts. |      |                       |
| 8 155   | S:Deliv Jobs/PC   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total number of jobs (color or black-and-white) scanned and sent with Scan-to-PC.   |      |                       |
| 8 15x 1 | B/W   |      |                       |
| 8 15x 2 | Color   |      |                       |
| 8 15x 3 | ACS   |      |                       |

- These counters count jobs, not pages.
- If the job is cancelled during scanning, it is not counted.
- If the job is cancelled while it is waiting to be sent, the job is not counted.

- If the job is cancelled during sending, it may or may not be counted, depending on what stage of the process had been reached when the job was cancelled.
- Even if several files are combined for sending, the transmission counts as one job.

|       |                 |      |   |
|-------|-----------------|------|---|
| 8 161 | T:PCFAX TX Jobs | *CTL | These SPs count the number of PC Fax transmission jobs. A job is counted from when it is registered for sending, not when it is sent.<br>[0 to 99999999/ 0 / 1]<br><b>Note:</b> At the present time, these counters perform identical counts. |
| 8 163 | F:PCFAX TX Jobs | *CTL |   |

- This counts fax jobs started from a PC using a PC fax application, and sending the data out to the destination from the PC through the copier.

|       |                  |      |   |
|-------|------------------|------|---|
| 8 191 | T:Total Scan PGS | *CTL | These SPs count the pages scanned by each application that uses the scanner to scan images.<br>[0 to 99999999/ 0 / 1] |
| 8 192 | C:Total Scan PGS | *CTL |   |
| 8 193 | F:Total Scan PGS | *CTL |   |
| 8 195 | S:Total Scan PGS | *CTL |   |
| 8 196 | L:Total Scan PGS | *CTL |   |

- SP 8 191 to 8 196 count the number of scanned sides of pages, not the number of physical pages.
- These counters do not count reading user stamp data, or reading color charts to adjust color.
- Previews done with a scanner driver are not counted.
- A count is done only after all images of a job have been scanned.
- Scans made in SP mode are not counted.

### Examples

- If 3 B5 pages and 1 A3 page are scanned with the scanner application but not stored, the S: count is 4.
- If both sides of 3 A4 sheets are copied and stored to the document server using the Store File button in the Copy mode window, the C: count is 6 and the L: count is 6.
- If both sides of 3 A4 sheets are copied but not stored, the C: count is 6.



- If you enter document server mode then scan 6 pages, the L: count is 6.

|       |  |      |                       |
|-------|--|------|-----------------------|
| 8 201 | T:LSize Scan PGS   | *CTL | [0 to 9999999/ 0 / 1] |
|       | <p>These SPs count the total number of large pages input with the scanner for scan and copy jobs. Large size paper (A3/DLT) scanned for fax transmission are not counted.</p> <p><b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.</p> |      |                       |
| 8 203 | F: LSize Scan PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | <p>These SPs count the total number of large pages input with the scanner for fax transmission.</p> <p><b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.</p>   |      |                       |
| 8 205 | S:LSize Scan PGS   | *CTL | [0 to 9999999/ 0 / 1] |
|       | <p>These SPs count the total number of large pages input with the scanner for scan jobs only. Large size paper (A3/DLT) scanned for fax transmission are not counted.</p> <p><b>Note:</b> These counters are displayed in the SMC Report, and in the User Tools display.</p>     |      |                       |

|       |               |      |  |
|-------|---------------|------|--|
| 8 211 | T:Scan PGS/LS | *CTL | <p>These SPs count the number of pages scanned into the document server .</p> <p>[0 to 9999999/ 0 / 1]</p> <p>The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen</p> |
| 8 212 | C:Scan PGS/LS | *CTL |  |
| 8 213 | F:Scan PGS/LS | *CTL |  |
| 8 215 | S:Scan PGS/LS | *CTL |  |
| 8 216 | L:Scan PGS/LS | *CTL |  |

- Reading user stamp data is not counted.
- If a job is cancelled, the pages output as far as the cancellation are counted.
- If the scanner application scans and stores 3 B5 sheets and 1 A4 sheet, the S: count is

4.

- If pages are copied but not stored on the document server, these counters do not change.
- If both sides of 3 A4 sheets are copied and stored to the document server, the C: count is 6 and the L: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

|         |   |   |                       |
|---------|---|---|-----------------------|
| 8 221   | ADF Org Feeds   | *CTL  | [0 to 9999999/ 0 / 1] |
|         | These SPs count the number of pages fed through the ADF for front and back side scanning. |   |                       |
| 8 221 1 | Front   | <p>Number of front sides fed for scanning:</p> <p>With an ADF that can scan both sides simultaneously, the Front side count is the same as the number of pages fed for either simplex or duplex scanning.</p> <p>With an ADF that cannot scan both sides simultaneously, the Front side count is the same as the number of pages fed for duplex front side scanning. (The front side is determined by which side the user loads face up.)</p> |                       |
| 8 221 2 | Back  | <p>Number of rear sides fed for scanning:</p> <p>With an ADF that can scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex scanning.</p> <p>With an ADF that cannot scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex rear-side scanning.</p>  |                       |

- When 1 sheet is fed for duplex scanning the Front count is 1 and the Back count is 1.
- If a jam occurs during the job, recovery processing is not counted to avoid double counting. Also, the pages are not counted if the jam occurs before the first sheet is output.

|       |   |      |                       |
|-------|---|------|-----------------------|
| 8 231 | Scan PGS/Mode   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the number of pages scanned by each ADF mode to |      |                       |

|         |                                     |   |
|---------|-------------------------------------|---|
|         | determine the work load on the ADF. |   |
| 8 231 1 | Large Volume                        | Selectable. Large copy jobs that cannot be loaded in the ADF at one time.   |
| 8 231 2 | SADF                                | Selectable. Feeding pages one by one through the ADF.                       |
| 8 231 3 | Mixed Size                          | Selectable. Select "Mixed Sizes" on the operation panel.                    |
| 8 231 4 | Custom Size                         | Selectable. Originals of non-standard size.                                 |
| 8 231 5 | Platen                              | Book mode. Raising the ADF and placing the original directly on the platen. |

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.
- The user cannot select mixed sizes or non-standard sizes with the fax application so if the original's page sizes are mixed or non-standard, these are not counted.
- If the user selects "Mixed Sizes" for copying in the platen mode, the Mixed Size count is enabled.
- In the SADF mode if the user copies 1 page in platen mode and then copies 2 pages with SADF, the Platen count is 1 and the SADF count is 3.

|       |  |      |                       |
|-------|--|------|-----------------------|
| 8 241 | T:Scan PGS/Org   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the total number of scanned pages by original type for all jobs, regardless of which application was used. |      |                       |
| 8 242 | C:Scan PGS/Org   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the number of pages scanned by original type for Copy jobs.  |      |                       |
| 8 243 | F:Scan PGS/Org   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the number of pages scanned by original type for Fax jobs.   |      |                       |

|                          |  |      |                       |              |              |              |  |
|--------------------------|--|------|-----------------------|--------------|--------------|--------------|--|
| 8 245                    | S:Scan PGS/Org   | *CTL | [0 to 9999999/ 0 / 1] |              |              |              |  |
|                          | These SPs count the number of pages scanned by original type for Scan jobs.  |      |                       |              |              |              |  |
| 8 246                    | L:Scan PGS/Org   | *CTL | [0 to 9999999/ 0 / 1] |              |              |              |  |
|                          | These SPs count the number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen |      |                       |              |              |              |  |
|                          | <b>8 241</b>   |      | <b>8 242</b>          | <b>8 243</b> | <b>8 245</b> | <b>8 246</b> |  |
| 8 24x 1: Text            | Yes  | Yes  | Yes                   | Yes          | Yes          | Yes          |  |
| 8 24x 2: Text/Photo      | Yes  | Yes  | Yes                   | Yes          | Yes          | Yes          |  |
| 8 24x 3: Photo           | Yes  | Yes  | Yes                   | Yes          | Yes          | Yes          |  |
| 8 24x 4: GenCopy, Pale   | Yes  | Yes  | No                    | Yes          | Yes          | Yes          |  |
| 8 24x 5: Map             | Yes  | Yes  | No                    | Yes          | Yes          | Yes          |  |
| 8 24x 6: Normal/Detail   | Yes  | No   | Yes                   | No           | No           | No           |  |
| 8 24x 7: Fine/Super Fine | Yes  | No   | Yes                   | No           | No           | No           |  |
| 8 24x 8: Binary          | Yes  | No   | No                    | Yes          | No           | No           |  |
| 8 24x 9: Grayscale       | Yes  | No   | No                    | Yes          | No           | No           |  |
| 8 24x 10: Color          | Yes  | No   | No                    | Yes          | No           | No           |  |
| 8 24x 11: Other          | Yes  | Yes  | Yes                   | Yes          | Yes          | Yes          |  |

- If the scan mode is changed during the job, for example, if the user switches from ADF to Platen mode, the count is done for the last selected mode.

|       |                   |      |  |
|-------|-------------------|------|--|
| 8 251 | T:Scan PGS/ImgEdt | *CTL | These SPs show how many times Image Edit features have been selected at the operation panel for each application. Some examples of these editing features are: |
| 8 252 | C:Scan PGS/ImgEdt | *CTL |  |
| 8 254 | P:Scan PGS/ImgEdt | *CTL |  |

|       |                   |      |  |
|-------|-------------------|------|--|
| 8 256 | L:Scan PGS/ImgEdt | *CTL | <ul style="list-style-type: none"> <li>▪ Erase&gt; Border</li> <li>▪ Erase&gt; Center</li> <li>▪ Image Repeat</li> <li>▪ Centering</li> <li>▪ Positive/Negative</li> </ul> [0 to 9999999/ 0 / 1]<br>Note: The count totals the number of times the edit features have been used. A detailed breakdown of exactly which features have been used is not given. |
| 8 257 | O:Scan PGS/ImgEdt | *CTL |  |

The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen.

|         |                   |  |   |
|---------|-------------------|--|---|
| 8 261   | T:Scan PGS/ColCr  | *CTL   | - |
| 8 262   | C:Scan PGS/ ColCr | *CTL   | - |
| 8 266   | L:Scn PGS/ColCr   | *CTL   | - |
| 8 26x 1 | Color Conversion  | These SPs show how many times color creation features have been selected at the operation panel. |   |
| 8 26x 2 | Color Erase       |  |   |
| 8 26x 3 | Background        |  |   |
| 8 26x 4 | Other             |  |   |

|       |                  |      |   |
|-------|------------------|------|---|
| 8 281 | T:Scan PGS/TWAIN | *CTL | These SPs count the number of pages scanned using a TWAIN driver. These counters reveal how the TWAIN driver is used for delivery functions.<br>[0 to 9999999/ 0 / 1]<br><b>Note:</b> At the present time, these counters perform identical counts. |
| 8 285 | S:Scan PGS/TWAIN | *CTL |   |

|       |                  |      |  |
|-------|------------------|------|--|
| 8 291 | T:Scan PGS/Stamp | *CTL | These SPs count the number of pages stamped with the stamp in the ADF unit.<br>[0 to 9999999/ 0 / 1]<br><br>The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen |
| 8 293 | F:Scan PGS/Stamp | *CTL |  |
| 8 295 | S:Scan PGS/Stamp | *CTL |  |
| 8 296 | L:Scan PGS/Stamp | *CTL |  |

|       |  |      |                       |
|-------|--|------|-----------------------|
| 8 301 | T:Scan PGS/Size  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by size the total number of pages scanned by all applications. Use these totals to compare original page size (scanning) and output (printing) page size [SP 8-441].   |      |                       |
| 8 302 | C:Scan PGS/Size  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by size the total number of pages scanned by the Copy application. Use these totals to compare original page size (scanning) and output (printing) page size [SP 8-442].   |      |                       |
| 8 303 | F:Scan PGS/Size  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by size the total number of pages scanned by the Fax application. Use these totals to compare original page size (scanning) and output page size [SP 8-443].   |      |                       |
| 8 305 | S:Scan PGS/Size  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by size the total number of pages scanned by the Scan application. Use these totals to compare original page size (scanning) and output page size [SP 8-445].  |      |                       |
| 8 306 | L:Scan PGS/Size  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by size the total number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen. Use these totals to compare original page size (scanning) and output page size [SP |      |                       |

|           |                  |  |
|-----------|------------------|--|
|           | 8-446].          |  |
| 8 30x 1   | A3               |  |
| 8 30x 2   | A4               |  |
| 8 30x 3   | A5               |  |
| 8 30x 4   | B4               |  |
| 8 30x 5   | B5               |  |
| 8 30x 6   | DLT              |  |
| 8 30x 7   | LG               |  |
| 8 30x 8   | LT               |  |
| 8 30x 9   | HLT              |  |
| 8 30x 10  | Full Bleed       |  |
| 8 30x 254 | Other (Standard) |  |
| 8 30x 255 | Other (Custom)   |  |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 311   | T:Scan PGS/Rez   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings.  |      |                       |
| 8 315   | S: Scan PGS/Rez  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by resolution setting the total number of pages scanned by applications that can specify resolution settings.<br><b>Note:</b> At the present time, SP8-311 and SP8-315 perform identical counts. |      |                       |
| 8 31x 1 | 1200dpi <  |      |                       |
| 8 31x 2 | 600dpi to 1199dpi  |      |                       |
| 8 31x 3 | 400dpi to 599dpi   |      |                       |
| 8 31x 4 | 200dpi to 399dpi   |      |                       |

|         |          |  |  |
|---------|----------|--|--|
| 8 31x 5 | < 199dpi |  |  |
|---------|----------|--|--|

- Copy resolution settings are fixed so they are not counted.
- The Fax application does not allow finely-adjusted resolution settings so no count is done for the Fax application.

|       |                |      |  |
|-------|----------------|------|--|
| 8 381 | T:Total PrtPGS | *CTL | <p>These SPs count the number of pages printed by the customer. The counter for the application used for storing the pages increments.</p> <p>[0 to 9999999/ 0 / 1]</p> <p>The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter.</p> |
| 8 382 | C:Total PrtPGS | *CTL |  |
| 8 383 | F:Total PrtPGS | *CTL |  |
| 8 384 | P:Total PrtPGS | *CTL |  |
| 8 385 | S:Total PrtPGS | *CTL |  |
| 8 386 | L:Total PrtPGS | *CTL |  |
| 8 387 | O:Total PrtPGS | *CTL |  |

- When the A3/DLT double count function is switched on with SP5104, 1 A3/DLT page is counted as 2.
- When several documents are merged for a print job, the number of pages stored are counted for the application that stored them.
- These counters are used primarily to calculate charges on use of the machine, so the following pages are not counted as printed pages:
  - Blank pages in a duplex printing job.
  - Blank pages inserted as document covers, chapter title sheets, and slip sheets.
  - Reports printed to confirm counts.
  - All reports done in the service mode (service summaries, engine maintenance reports, etc.)
  - Test prints for machine image adjustment.
  - Error notification reports.
  - Partially printed pages as the result of a copier jam.

|       |   |      |                       |
|-------|---|------|-----------------------|
| 8 391 | LSize PrtPGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count pages printed on paper sizes A3/DLT and larger. |      |                       |



|  |   |
|--|---|
|  | <b>Note:</b> In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine. |
|--|---|

|       |             |      |  |
|-------|-------------|------|--|
| 8 401 | T:PrtPGS/LS | *CTL | <p>These SPs count the number of pages printed from the document server. The counter for the application used to print the pages is incremented.</p> <p>The L: counter counts the number of jobs stored from within the document server mode screen at the operation panel.</p> <p>[0 to 9999999/ 0 / 1]</p> |
| 8 402 | C:PrtPGS/LS | *CTL |  |
| 8 403 | F:PrtPGS/LS | *CTL |  |
| 8 404 | P:PrtPGS/LS | *CTL |  |
| 8 405 | S:PrtPGS/LS | *CTL |  |
| 8 406 | L:PrtPGS/LS | *CTL |  |

- Print jobs done with Web Image Monitor and Desk Top Binder are added to the L: count.
- Fax jobs done with Web Image Monitor and Desk Top Binder are added to the F: count.

|       |               |      |  |
|-------|---------------|------|--|
| 8 411 | Prints/Duplex | *CTL | <p>This SP counts the amount of paper (front/back counted as 1 page) used for duplex printing. Last pages printed only on one side are not counted.</p> <p>[0 to 9999999/ 0 / 1]</p> |
|-------|---------------|------|--|

|       |   |      |                       |
|-------|---|------|-----------------------|
| 8 421 | T:PrtPGS/Dup Comb   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by binding and combine, and n-Up settings the number of pages processed for printing. This is the total for all applications. |      |                       |
| 8 422 | C:PrtPGS/Dup Comb   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the copier application.               |      |                       |
| 8 423 | F:PrtPGS/Dup Comb   | *CTL | [0 to 9999999/ 0 / 1] |

|          |  |                          |                       |
|----------|--|--------------------------|-----------------------|
|          | These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the fax application.   |                          |                       |
| 8 424    | P:PrtPGS/Dup Comb  | *CTL                     | [0 to 9999999/ 0 / 1] |
|          | These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the printer application.   |                          |                       |
| 8 425    | S:PrtPGS/Dup Comb  | *CTL                     | [0 to 9999999/ 0 / 1] |
|          | These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the scanner application.   |                          |                       |
| 8 426    | L:PrtPGS/Dup Comb  | *CTL                     | [0 to 9999999/ 0 / 1] |
|          | These SPs count by binding and combine, and n-Up settings the number of pages processed for printing from within the document server mode window at the operation panel. |                          |                       |
| 8 427    | O:PrtPGS/Dup Comb  | *CTL                     | [0 to 9999999/ 0 / 1] |
|          | These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by Other applications   |                          |                       |
| 8 42x 1  | Simplex> Duplex  |                          |                       |
| 8 42x 2  | Duplex> Duplex   |                          |                       |
| 8 42x 3  | Book> Duplex   |                          |                       |
| 8 42x 4  | Simplex Combine  |                          |                       |
| 8 42x 5  | Duplex Combine   |                          |                       |
| 8 42x 6  | 2>   | 2 pages on 1 side (2-Up) |                       |
| 8 42x 7  | 4>   | 4 pages on 1 side (4-Up) |                       |
| 8 42x 8  | 6>   | 6 pages on 1 side (6-Up) |                       |
| 8 42x 9  | 8>   | 8 pages on 1 side (8-Up) |                       |
| 8 42x 10 | 9>   | 9 pages on 1 side (9-Up) |                       |

|          |          |                            |  |  |
|----------|----------|----------------------------|--|--|
| 8 42x 11 | 16>      | 16 pages on 1 side (16-Up) |  |  |
| 8 42x 12 | Booklet  |                            |  |  |
| 8 42x 13 | Magazine |                            |  |  |

- These counts (SP8 421 to SP8 427) are especially useful for customers who need to improve their compliance with ISO standards for the reduction of paper consumption.
- Pages that are only partially printed with the n-Up functions are counted as 1 page.
- Here is a summary of how the counters work for Booklet and Magazine modes:

| Booklet        |       |  | Magazine       |       |
|----------------|-------|--|----------------|-------|
| Original Pages | Count |  | Original Pages | Count |
| 1              | 1     |  | 1              | 1     |
| 2              | 2     |  | 2              | 2     |
| 3              | 2     |  | 3              | 2     |
| 4              | 2     |  | 4              | 2     |
| 5              | 3     |  | 5              | 4     |
| 6              | 4     |  | 6              | 4     |
| 7              | 4     |  | 7              | 4     |
| 8              | 4     |  | 8              | 4     |

|       |   |      |                       |
|-------|---|------|-----------------------|
| 8 431 | T:PrtPGS/ImgEdt   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the total number of pages output with the three features below, regardless of which application was used. |      |                       |
| 8 432 | C:PrtPGS/ImgEdt   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count the total number of pages output with the three features below with the copy application.                 |      |                       |

|         |  |   |                       |
|---------|--|---|-----------------------|
| 8 434   | P:PrtPGS/ImgEdt  | *CTL  | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total number of pages output with the three features below with the print application.   |   |                       |
| 8 436   | L:PrtPGS/ImgEdt  | *CTL  | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total number of pages output from within the document server mode window at the operation panel with the three features below. |   |                       |
| 8 437   | O:PrtPGS/ImgEdt  | *CTL  | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total number of pages output with the three features below with Other applications.  |   |                       |
| 8 43x 1 | Cover/Slip Sheet   | Total number of covers or slip sheets inserted. The count for a cover printed on both sides counts 2.     |                       |
| 8 43x 2 | Series/Book  | The number of pages printed in series (one side) or printed as a book with booklet right/left pagination. |                       |
| 8 43x 3 | User Stamp   | The number of pages printed where stamps were applied, including page numbering and date stamping.        |                       |

|       |  |      |                       |
|-------|--|------|-----------------------|
| 8 441 | T:PrtPGS/Ppr Size  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by print paper size the number of pages printed by all applications.     |      |                       |
| 8 442 | C:PrtPGS/Ppr Size  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by print paper size the number of pages printed by the copy application. |      |                       |
| 8 443 | F:PrtPGS/Ppr Size  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by print paper size the number of pages printed by the fax application.  |      |                       |

|           |   |      |                       |
|-----------|---|------|-----------------------|
| 8 444     | P:PrtPGS/Ppr Size   | *CTL | [0 to 9999999/ 0 / 1] |
|           | These SPs count by print paper size the number of pages printed by the printer application.   |      |                       |
| 8 445     | S:PrtPGS/Ppr Size   | *CTL | [0 to 9999999/ 0 / 1] |
|           | These SPs count by print paper size the number of pages printed by the scanner application.   |      |                       |
| 8 446     | L:PrtPGS/Ppr Size   | *CTL | [0 to 9999999/ 0 / 1] |
|           | These SPs count by print paper size the number of pages printed from within the document server mode window at the operation panel. |      |                       |
| 8 447     | O:PrtPGS/Ppr Size   | *CTL | [0 to 9999999/ 0 / 1] |
|           | These SPs count by print paper size the number of pages printed by Other applications.  |      |                       |
| 8 44x 1   | A3  |      |                       |
| 8 44x 2   | A4  |      |                       |
| 8 44x 3   | A5  |      |                       |
| 8 44x 4   | B4  |      |                       |
| 8 44x 5   | B5  |      |                       |
| 8 44x 6   | DLT   |      |                       |
| 8 44x 7   | LG  |      |                       |
| 8 44x 8   | LT  |      |                       |
| 8 44x 9   | HLT   |      |                       |
| 8 44x 10  | Full Bleed  |      |                       |
| 8 44x 254 | Other (Standard)  |      |                       |
| 8 44x 255 | Other (Custom)  |      |                       |

- These counters do not distinguish between LEF and SEF.

|          |  |                          |                       |
|----------|--|--------------------------|-----------------------|
| 8 451    | PrtPGS/Ppr Tray  | *CTL                     | [0 to 9999999/ 0 / 1] |
|          | These SPs count the number of sheets fed from each paper feed station. |                          |                       |
| 8 451 1  | Bypass   | Bypass Tray              |                       |
| 8 451 2  | Tray 1   | Copier                   |                       |
| 8 451 3  | Tray 2   | Copier                   |                       |
| 8 451 4  | Tray 3   | Paper Tray Unit (Option) |                       |
| 8 451 5  | Tray 4   | Paper Tray Unit (Option) |                       |
| 8 451 6  | Tray 5   | LCT (Option)             |                       |
| 8 451 7  | Tray 6   | Currently not used.      |                       |
| 8 451 8  | Tray 7   | Currently not used.      |                       |
| 8 451 9  | Tray 8   | Currently not used.      |                       |
| 8 451 10 | Tray 9   | Currently not used.      |                       |

|       |   |      |                       |
|-------|---|------|-----------------------|
| 8 461 | T:PrtPGS/Ppr Type   | *CTL | [0 to 9999999/ 0 / 1] |
|       | <p>These SPs count by paper type the number pages printed by all applications.</p> <ul style="list-style-type: none"> <li>▪ These counters are not the same as the PM counter. The PM counter is based on feed timing to accurately measure the service life of the feed rollers. However, these counts are based on output timing.</li> <li>▪ Blank sheets (covers, chapter covers, slip sheets) are also counted.</li> <li>▪ During duplex printing, pages printed on both sides count as 1, and a page printed on one side counts as 1.</li> </ul> |      |                       |
| 8 462 | C:PrtPGS/Ppr Type   | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by paper type the number pages printed by the copy application.   |      |                       |
| 8 463 | F:PrtPGS/Ppr Type   | *CTL | [0 to 9999999/ 0 / 1] |

|         |  |      |                       |
|---------|--|------|-----------------------|
|         | These SPs count by paper type the number pages printed by the fax application.   |      |                       |
| 8 464   | P:PrtPGS/Ppr Type  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by paper type the number pages printed by the printer application.   |      |                       |
| 8 466   | L:PrtPGS/Ppr Type  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by paper type the number pages printed from within the document server mode window at the operation panel. |      |                       |
| 8 46x 1 | Normal   |      |                       |
| 8 46x 2 | Recycled   |      |                       |
| 8 46x 3 | Special  |      |                       |
| 8 46x 4 | Thick  |      |                       |
| 8 46x 5 | Normal (Back)  |      |                       |
| 8 46x 6 | Thick (Back)   |      |                       |
| 8 46x 7 | OHP  |      |                       |
| 8 46x 8 | Other  |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 471   | PrtPGS/Mag   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by magnification rate the number of pages printed. |      |                       |
| 8 471 1 | < 49%  |      |                       |
| 8 471 2 | 50% to 99%   |      |                       |
| 8 471 3 | 100%   |      |                       |
| 8 471 4 | 101% to 200%   |      |                       |
| 8 471 5 | 201% <   |      |                       |

- Counts are done for magnification adjusted for pages, not only on the operation panel

but performed remotely with an external network application capable of performing magnification adjustment as well.

- Magnification adjustments done with printer drivers with PC applications such as Excel are also counted.
- Magnification adjustments done for adjustments after they have been stored on the document server are not counted.
- Magnification adjustments performed automatically during Auto Reduce/Enlarge copying are counted.
- The magnification rates of blank cover sheets, slip sheets, etc. are automatically assigned a rate of 100%.

|  |                  |      |  |
|--|------------------|------|--|
| 8 481  | T:PrtPGS/TonSave | *CTL |  |
| 8 484  | P:PrtPGS/TonSave | *CTL |  |
| <p>These SPs count the number of pages printed with the Toner Save feature switched on.</p> <p><b>Note:</b> These SPs return the same results as this SP is limited to the Print application.</p> <p>[0 to 9999999/ 0 / 1]</p> |                  |      |  |

|         |                   |      |  |
|---------|-------------------|------|--|
| 8 491   | T:PrtPGS/Col Mode | *CTL | These SPs count the number of pages printed in the Color Mode by each application. |
| 8 492   | C:PrtPGS/Col Mode | *CTL |  |
| 8 493   | F:PrtPGS/Col Mode | *CTL |  |
| 8 496   | L:PrtPGS/Col Mode | *CTL |  |
| 8 497   | O:PrtPGS/Col Mode | *CTL |  |
| 8 49x 1 | B/W               |      |  |
| 8 49x 2 | Single Color      |      |  |



|         |            |
|---------|------------|
| 8 49x 3 | Two Color  |
| 8 49x 4 | Full Color |

|         |                      |      |   |
|---------|----------------------|------|---|
| 8 501   | T:PrtPGS/Col<br>Mode | *CTL | These SPs count the number of pages printed in the Color Mode by the print application. |
| 8 504   | P:PrtPGS/Col<br>Mode | *CTL |   |
| 8 057   | O:PrtPGS/Col<br>Mode | *CTL |   |
| 8 50x 1 | B/W                  |      |   |
| 8 50x 2 | Mono Color           |      |   |
| 8 50x 3 | Full Color           |      |   |
| 8 50x 4 | Single Color         |      |   |
| 8 50x 5 | Two Color            |      |   |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 511   | T:PrtPGS/Emul  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by printer emulation mode the total number of pages printed. |      |                       |
| 8 514   | P:PrtPGS/Emul  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by printer emulation mode the total number of pages printed. |      |                       |
| 8 514 1 | RPCS   |      |                       |
| 8 514 2 | RPDL   |      |                       |
| 8 514 3 | PS3  |      |                       |
| 8 514 4 | R98  |      |                       |
| 8 514 5 | R16  |      |                       |

|          |          |            |  |  |
|----------|----------|------------|--|--|
| 8 514 6  | GL/GL2   |            |  |  |
| 8 514 7  | R55      |            |  |  |
| 8 514 8  | RTIFF    |            |  |  |
| 8 514 9  | PDF      |            |  |  |
| 8 514 10 | PCL5e/5c |            |  |  |
| 8 514 11 | PCL XL   |            |  |  |
| 8 514 12 | IPDL-C   |            |  |  |
| 8 514 13 | BM-Links | Japan Only |  |  |
| 8 514 14 | Other    |            |  |  |

- SP8 511 and SP8 514 return the same results as they are both limited to the Print application.
- Print jobs output to the document server are not counted.

|       |   |      |                        |
|-------|---|------|------------------------|
| 8 521 | T:PrtPGS/FIN  | *CTL | [0 to 9999999 / 0 / 1] |
|       | These SPs count by finishing mode the total number of pages printed by all applications.  |      |                        |
| 8 522 | C:PrtPGS/FIN  | *CTL | [0 to 9999999 / 0 / 1] |
|       | These SPs count by finishing mode the total number of pages printed by the Copy application.  |      |                        |
| 8 523 | F:PrtPGS/FIN  | *CTL | [0 to 9999999 / 0 / 1] |
|       | These SPs count by finishing mode the total number of pages printed by the Fax application.<br><b>NOTE:</b> Print finishing options for received faxes are currently not available. |      |                        |
| 8 524 | P:PrtPGS/FIN  | *CTL | [0 to 9999999 / 0 / 1] |
|       | These SPs count by finishing mode the total number of pages printed by  |      |                        |

|         |   |      |                        |
|---------|---|------|------------------------|
|         | the Print application.  |      |                        |
| 8 525   | S:PrtPGS/FIN  | *CTL | [0 to 9999999 / 0 / 1] |
|         | These SPs count by finishing mode the total number of pages printed by the Scanner application.   |      |                        |
| 8 526   | L:PrtPGS/FIN  | *CTL | [0 to 9999999 / 0 / 1] |
|         | These SPs count by finishing mode the total number of pages printed from within the document server mode window at the operation panel. |      |                        |
| 8 52x 1 | Sort  |      |                        |
| 8 52x 2 | Stack   |      |                        |
| 8 52x 3 | Staple  |      |                        |
| 8 52x 4 | Booklet   |      |                        |
| 8 52x 5 | Z-Fold  |      |                        |
| 8 52x 6 | Punch   |      |                        |
| 8 52x 7 | Other   |      |                        |

↓ Note

- If stapling is selected for finishing and the stack is too large for stapling, the unstapled pages are still counted.
- The counts for staple finishing are based on output to the staple tray, so jam recoveries are counted.

|       |         |      |   |
|-------|---------|------|---|
| 8 531 | Staples | *CTL | This SP counts the amount of staples used by the machine.<br>[0 to 9999999 / 0 / 1] |
|-------|---------|------|---|

|       |   |      |                        |
|-------|---|------|------------------------|
| 8 581 | T:Counter   | *CTL | [0 to 9999999 / 0 / 1] |
|       | These SPs count the total output broken down by color output, regardless of the application used. In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy |      |                        |

|          |                               |
|----------|-------------------------------|
|          | machine.                      |
| 8 581 1  | Total                         |
| 8 581 2  | Total: Full Color             |
| 8 581 3  | B&W/Single Color              |
| 8 581 4  | Development: CMY              |
| 8 581 5  | Development: K                |
| 8 581 6  | Copy: Color                   |
| 8 581 7  | Copy: B/W                     |
| 8 581 8  | Print: Color                  |
| 8 581 9  | Print: B/W                    |
| 8 581 10 | Total: Color                  |
| 8 581 11 | Total: B/W                    |
| 8 581 12 | Full Color: A3                |
| 8 581 13 | Full Color: B4 JIS or Smaller |
| 8 581 14 | Full Color Print              |
| 8 581 15 | Mono Color Print              |
| 8 581 16 | Full Color GPC                |

|         |   |      |                       |
|---------|---|------|-----------------------|
| 8 582   | C:Counter   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total output of the copy application broken down by color output. |      |                       |
| 8 582 1 | B/W   |      |                       |
| 8 582 2 | Single Color  |      |                       |
| 8 582 3 | Two Color   |      |                       |

|         |            |
|---------|------------|
| 8 582 4 | Full Color |
|---------|------------|

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 583   | F:Counter  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total output of the fax application broken down by color output. |      |                       |
| 8 583 1 | B/W  |      |                       |
| 8 583 2 | Single Color   |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 584   | P:Counter  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total output of the print application broken down by color output. |      |                       |
| 8 584 1 | B/W  |      |                       |
| 8 584 2 | Mono Color   |      |                       |
| 8 584 3 | Full Color   |      |                       |
| 8 584 4 | Single Color   |      |                       |
| 8 584 5 | Two Color  |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 586   | L:Counter  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the total output of the local storage broken down by color output. |      |                       |
| 8 582 1 | B/W  |      |                       |
| 8 582 2 | Single Color   |      |                       |
| 8 582 3 | Two Color  |      |                       |
| 8 582 4 | Full Color   |      |                       |

|       |           |      |                       |
|-------|-----------|------|-----------------------|
| 8 591 | O:Counter | *CTL | [0 to 9999999/ 0 / 1] |
|-------|-----------|------|-----------------------|

|         |   |  |  |  |
|---------|---|--|--|--|
|         | These SPs count the totals for A3/DLT paper use, number of duplex pages printed, and the number of staples used. These totals are for Other (O:) applications only. |  |  |  |
| 8 591 1 | A3/DLT  |  |  |  |
| 8 591 2 | Duplex  |  |  |  |

|          |  |      |                       |
|----------|--|------|-----------------------|
| 8 601    | Coverage Counter   | *CTL | [0 to 9999999/ 0 / 1] |
|          | These SPs count the total coverage for each color and the total printout pages for each printing mode. |      |                       |
| 8 601 1  | B/W  |      |                       |
| 8 601 2  | Color  |      |                       |
| 8 601 11 | B/W Printing Pages   |      |                       |
| 8 601 12 | Color Printing Pages   |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 631   | T:FAX TX PGS   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by color mode the number of pages sent by fax to a telephone number. |      |                       |
| 8 633   | F:FAX TX PGS   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by color mode the number of pages sent by fax to a telephone number. |      |                       |
| 8 63x 1 | B/W  |      |                       |
| 8 63x 2 | Color  |      |                       |

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W or Color.
- At the present time, this feature is provided for the Fax application only so SP8631 and SP8633 are the same.
- The counts include error pages.

- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.

|         |   |      |                       |
|---------|---|------|-----------------------|
| 8 641   | T:IFAX TX PGS   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by color mode the number of pages sent by fax to as fax images using I-Fax. |      |                       |
| 8 643   | F:IFAX TX PGS   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by color mode the number of pages sent by Fax as fax images using I-Fax.    |      |                       |
| 8 64x 1 | B/W   |      |                       |
| 8 64x 2 | Color   |      |                       |

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W or Color.
- At the present time, this feature is provided for the Fax application only so SP8641 and SP8643 are the same.
- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.

|       |   |      |                       |
|-------|---|------|-----------------------|
| 8 651 | T:S-to-Email PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by color mode the total number of pages attached to an e-mail for both the Scan and document server applications. |      |                       |
| 8 655 | S-to-Email PGS  | *CTL | [0 to 9999999/ 0 / 1] |
|       | These SPs count by color mode the total number of pages attached to an  |      |                       |

|         |                                       |
|---------|---------------------------------------|
|         | e-mail for the Scan application only. |
| 8 65x 1 | B/W                                   |
| 8 65x 2 | Color                                 |

↓ Note

- The count for B/W and Color pages is done after the document is stored on the HDD. If the job is cancelled before it is stored, the pages are not counted.
- If Scan-to-Email is used to send a 10-page document to 5 addresses, the count is 10 (the pages are sent to the same SMTP server together).
- If Scan-to-PC is used to send a 10-page document to 5 folders, the count is 50 (the document is sent to each destination of the SMB/FTP server).
- Due to restrictions on some devices, if Scan-to-Email is used to send a 10-page document to a large number of destinations, the count may be divided and counted separately. For example, if a 10-page document is sent to 200 addresses, the count is 10 for the first 100 destinations and the count is also 10 for the second 100 destinations, for a total of 20.)

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 661   | T:Deliv PGS/Svr  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by color mode the total number of pages sent to a Scan Router server by both Scan and LS applications. |      |                       |
| 8 665   | Deliv PGS/Svr  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by color mode the total number of pages sent to a Scan Router server by the Scan application.          |      |                       |
| 8 66x 1 | B/W  |      |                       |
| 8 66x 2 | Color  |      |                       |

↓ Note

- The B/W and Color counts are done after the document is stored on the HDD of the Scan Router server.
- If the job is canceled before storage on the Scan Router server finishes, the counts are not done.
- The count is executed even if regardless of confirmation of the arrival at the Scan Router server.



|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 671   | T:Deliv PGS/PC   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by color mode the total number of pages sent to a folder on a PC (Scan-to-PC) with the Scan and LS applications. |      |                       |
| 8 675   | Deliv PGS/PC   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count by color mode the total number of pages sent with Scan-to-PC with the Scan application.                          |      |                       |
| 8 67x 1 | B/W  |      |                       |
| 8 67x 2 | Color  |      |                       |

|       |               |      |   |
|-------|---------------|------|---|
| 8 681 | T:PCFAX TXPGS | *CTL | These SPs count the number of pages sent by PC Fax. These SPs are provided for the Fax application only, so the counts for SP8 681 and SP8 683 are the same.<br>[0 to 9999999/ 0 / 1] |
| 8 683 | F:PCFAX TXPGS | *CTL |   |

- This counts pages sent from a PC using a PC fax application, from the PC through the copier to the destination.
- When sending the same message to more than one place using broadcasting, the pages are only counted once. (For example, a 10-page fax is sent to location A and location B. The counter goes up by 10, not 20.)

|       |             |      |   |
|-------|-------------|------|---|
| 8 691 | T:TX PGS/LS | *CTL | These SPs count the number of pages sent from the document server. The counter for the application that was used to store the pages is incremented.<br>[0 to 9999999/ 0 / 1]<br>The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter. |
| 8 692 | C:TX PGS/LS | *CTL |   |
| 8 693 | F:TX PGS/LS | *CTL |   |
| 8 694 | P:TX PGS/LS | *CTL |   |
| 8 695 | S:TX PGS/LS | *CTL |   |
| 8 696 | L:TX PGS/LS | *CTL |   |

↓ Note

- Print jobs done with Web Image Monitor and Desk Top Binder are added to the count.
- If several documents are merged for sending, the number of pages stored are counted for the application that stored them.
- When several documents are sent by a Fax broadcast, the F: count is done for the number of pages sent to each destination.

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 701   | TX PGS/Port  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the number of pages sent by the physical port used to send them. For example, if a 3-page original is sent to 4 destinations via ISDN G4, the count for ISDN (G3, G4) is 12. |      |                       |
| 8 701 1 | PSTN-1   |      |                       |
| 8 701 2 | PSTN-2   |      |                       |
| 8 701 3 | PSTN-3   |      |                       |
| 8 701 4 | ISDN (G3,G4)   |      |                       |
| 8 701 5 | Network  |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 711   | T:Scan PGS/Comp  | *CTL | [0 to 9999999/ 0 / 1] |
| 8 715   | S:Scan PGS/Comp  | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the number of pages sent by each compression mode. |      |                       |
| 8 715 1 | JPEG/JPEG2000  |      |                       |
| 8 715 2 | TIFF(Multi/Single)   |      |                       |
| 8 715 3 | PDF  |      |                       |
| 8 715 4 | Other  |      |                       |

|       |             |      |                       |
|-------|-------------|------|-----------------------|
| 8 741 | RX PGS/Port | *CTL | [0 to 9999999/ 0 / 1] |
|-------|-------------|------|-----------------------|

|         |   |  |  |
|---------|---|--|--|
|         | These SPs count the number of pages received by the physical port used to receive them. |  |  |
| 8 741 1 | PSTN-1  |  |  |
| 8 741 2 | PSTN-2  |  |  |
| 8 741 3 | PSTN-3  |  |  |
| 8 741 4 | ISDN (G3,G4)  |  |  |
| 8 741 5 | Network   |  |  |

|         |   |      |                       |
|---------|---|------|-----------------------|
| 8 771   | Dev Counter   | *CTL | [0 to 9999999/ 0 / 1] |
|         | These SPs count the frequency of use (number of rotations of the development rollers) for black and other color toners. |      |                       |
| 8 771 1 | Total   |      |                       |
| 8 771 2 | K   |      |                       |
| 8 771 3 | Y   |      |                       |
| 8 771 4 | M   |      |                       |
| 8 771 5 | C   |      |                       |

|         |  |                                     |                       |
|---------|--|-------------------------------------|-----------------------|
| 8 781   | Toner Bottle Info.   | *ENG                                | [0 to 9999999/ 0 / 1] |
|         | These SPs display the number of already replaced toner bottles.<br><b>NOTE:</b> Currently, the data in SP7-833-011 through 014 and the data in SP8-781-001 through 004 are the same. |                                     |                       |
| 8 781 1 | Toner: BK  | The number of black-toner bottles   |                       |
| 8 781 2 | Toner: Y   | The number of yellow-toner bottles  |                       |
| 8 781 3 | Toner: M   | The number of magenta-toner bottles |                       |
| 8 781 4 | Toner: C   | The number of cyan-toner bottles    |                       |

|       |                  |      |   |
|-------|------------------|------|---|
| 8 791 | LS Memory Remain | *CTL | This SP displays the percent of space available on the document server for storing documents.<br>[0 to 100 / 0 / 1] |
|-------|------------------|------|---|

|         |   |      |                   |
|---------|---|------|-------------------|
| 8 801   | Toner Remain  | *CTL | [0 to 100/ 0 / 1] |
|         | These SPs display the percent of toner remaining for each color. This SP allows the user to check the toner supply at any time.<br><b>Note:</b> This precise method of measuring remaining toner supply (1% steps) is better than other machines in the market that can only measure in increments of 10 (10% steps). |      |                   |
|         | 8 801 1   | K    |                   |
|         | 8 801 2   | Y    |                   |
|         | 8 801 3   | M    |                   |
| 8 801 4 | C   |      |                   |

|          |   |          |                       |
|----------|---|----------|-----------------------|
| 8 851    | Coverage Count:<br>0-10%  | *ENG     | [0 to 9999999/ 0 / 1] |
|          | These SPs display the number of scanned sheets on which the coverage of each color is from 0% to 10%. |          |                       |
| 8 851 11 | 0 to 2%: BK   | 8 851 31 | 5 to 7%: BK           |
| 8 851 12 | 0 to 2%: Y  | 8 851 32 | 5 to 7%: Y            |
| 8 851 13 | 0 to 2%: M  | 8 851 33 | 5 to 7%: M            |
| 8 851 14 | 0 to 2%: C  | 8 851 34 | 5 to 7%: C            |
| 8 851 21 | 3 to 4%: BK   | 8 851 41 | 8 to 10%: BK          |
| 8 851 22 | 3 to 4%: Y  | 8 851 42 | 8 to 10%: Y           |
| 8 851 23 | 3 to 4%: M  | 8 851 43 | 8 to 10%: M           |

|          |            |          |             |
|----------|------------|----------|-------------|
| 8 851 24 | 3 to 4%: C | 8 851 44 | 8 to 10%: C |
|----------|------------|----------|-------------|

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 861   | Coverage Count:<br>11-20%  | *ENG | [0 to 9999999/ 0 / 1] |
|         | These SPs display the number of scanned sheets on which the coverage of each color is from 11% to 20%. |      |                       |
| 8 861 1 | BK   |      |                       |
| 8 861 2 | Y  |      |                       |
| 8 861 3 | M  |      |                       |
| 8 861 4 | C  |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 871   | Coverage Count:<br>21-30%  | *ENG | [0 to 9999999/ 0 / 1] |
|         | These SPs display the number of scanned sheets on which the coverage of each color is from 21% to 30%. |      |                       |
| 8 871 1 | BK   |      |                       |
| 8 871 2 | Y  |      |                       |
| 8 871 3 | M  |      |                       |
| 8 871 4 | C  |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 881   | Coverage Count:<br>31%-  | *ENG | [0 to 9999999/ 0 / 1] |
|         | These SPs display the number of scanned sheets on which the coverage of each color is 31% or higher. |      |                       |
| 8 881 1 | BK   |      |                       |
| 8 881 2 | Y  |      |                       |

|         |   |
|---------|---|
| 8 881 3 | M |
| 8 881 4 | C |

|         |   |      |                       |
|---------|---|------|-----------------------|
| 8 891   | Printing PGS:<br>Present Ink  | *ENG | [0 to 9999999/ 0 / 1] |
|         | These SPs display the amount of the remaining current toner for each color. |      |                       |
| 8 891 1 | BK  |      |                       |
| 8 891 2 | Y   |      |                       |
| 8 891 3 | M   |      |                       |
| 8 891 4 | C   |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 901   | Printing PGS: Log:<br>Latest 1   | *ENG | [0 to 9999999/ 0 / 1] |
|         | These SPs display the amount of the remaining previous toner for each color. |      |                       |
| 8 901 1 | BK   |      |                       |
| 8 901 2 | Y  |      |                       |
| 8 901 3 | M  |      |                       |
| 8 901 4 | C  |      |                       |

|         |  |      |                       |
|---------|--|------|-----------------------|
| 8 911   | Printing PGS: Log:<br>Latest 2   | *ENG | [0 to 9999999/ 0 / 1] |
|         | These SPs display the amount of the remaining 2nd previous toner for each color. |      |                       |
| 8 911 1 | BK   |      |                       |

|         |   |
|---------|---|
| 8 911 2 | Y |
| 8 911 3 | M |
| 8 911 4 | C |

|          |   |      |                       |
|----------|---|------|-----------------------|
| 8 921    | Coverage Count:<br>Total  | *CTL | [0 to 9999999/ 0 / 1] |
|          | Displays the total coverage and total printout number for each color. |      |                       |
| 8 921 1  | BK (%)  |      |                       |
| 8 921 2  | Y (%)   |      |                       |
| 8 921 3  | M (%)   |      |                       |
| 8 921 4  | C (%)   |      |                       |
| 8 921 14 | BK (Page)   |      |                       |
| 8 921 15 | Y (Page)  |      |                       |
| 8 921 16 | M (Page)  |      |                       |
| 8 921 17 | C (Page)  |      |                       |

|         |  |  |                       |
|---------|--|--|-----------------------|
| 8 941   | Machine Status   | *CTL   | [0 to 9999999/ 0 / 1] |
|         | These SPs count the amount of time the machine spends in each operation mode. These SPs are useful for customers who need to investigate machine operation for improvement in their compliance with ISO Standards. |  |                       |
| 8 941 1 | Operation Time   | Engine operation time. Does not include time while controller is saving data to HDD (while engine is not operating).                         |                       |
| 8 941 2 | Standby Time   | Engine not operating. Includes time while controller saves data to HDD. Does not include time spent in Energy Save, Low Power, or Off modes. |                       |

|         |                    |   |
|---------|--------------------|---|
| 8 941 3 | Energy Save Time   | Includes time while the machine is performing background printing.  |
| 8 941 4 | Low Power Time     | Includes time in Energy Save mode with Engine on. Includes time while machine is performing background printing.                          |
| 8 941 5 | Off Mode Time      | Includes time while machine is performing background printing. Does not include time machine remains powered off with the power switches. |
| 8 941 6 | SC                 | Total time when SC errors have been staying.  |
| 8 941 7 | PrtJam             | Total time when paper jams have been staying during printing.   |
| 8 941 8 | OrgJam             | Total time when original jams have been staying during scanning.  |
| 8 941 9 | Supply PM Unit End | Total time when toner end has been staying  |

|         |  |   |                       |  |
|---------|--|---|-----------------------|--|
| 8 951   | AddBook Register   | *CTL  |                       |  |
|         | These SPs count the number of events when the machine manages data registration. |   |                       |  |
| 8 951 1 | User Code  | User code registrations.  | [0 to 9999999/ 0 / 1] |  |
| 8 951 2 | Mail Address   | Mail address registrations.   |                       |  |
| 8 951 3 | Fax Destination  | Fax destination registrations.  |                       |  |
| 8 951 4 | Group  | Group destination registrations.  |                       |  |
| 8 951 5 | Transfer Request   | Fax relay destination registrations for relay TX.                       |                       |  |
| 8 951 6 | F-Code   | F-Code box registrations.   |                       |  |
| 8 951 7 | Copy Program   | Copy application registrations with the Program (job settings) feature. | [0 to 255 / 0 / 255]  |  |



|          |                 |  |  |
|----------|-----------------|--|--|
| 8 951 8  | Fax Program     | Fax application registrations with the Program (job settings) feature.     |  |
| 8 951 9  | Printer Program | Printer application registrations with the Program (job settings) feature. |  |
| 8 951 10 | Scanner Program | Scanner application registrations with the Program (job settings) feature. |  |

|          |   |      |                       |
|----------|---|------|-----------------------|
| 8 999    | Admin. Counter List   | *CTL | [0 to 9999999/ 0 / 1] |
|          | Displays the total coverage and total printout number for each color. |      |                       |
| 8 999 1  | Total   |      |                       |
| 8 999 2  | Copy: Full Color  |      |                       |
| 8 999 3  | Copy: BW  |      |                       |
| 8 999 4  | Copy: Single Color  |      |                       |
| 8 999 5  | Copy: Two Color   |      |                       |
| 8 999 6  | Printer Full Color  |      |                       |
| 8 999 7  | Printer BW  |      |                       |
| 8 999 8  | Printer Single Color  |      |                       |
| 8 999 9  | Printer Two Color   |      |                       |
| 8 999 10 | Fax Print: BW   |      |                       |
| 8 999 12 | A3/DLT  |      |                       |
| 8 999 13 | Duplex  |      |                       |
| 8 999 14 | Coverage: Color (%)   |      |                       |
| 8 999 15 | Coverage: BW (%)  |      |                       |

|           |                                   |  |  |
|-----------|-----------------------------------|--|--|
| 8 999 16  | Coverage: Color<br>Print Page (%) |  |  |
| 8 999 17  | Coverage: BW Print<br>Page (%)    |  |  |
| 8 999 101 | Transmission Total:<br>Color      |  |  |
| 8 999 102 | Transmission Total:<br>BW         |  |  |
| 8 999 103 | FAX Transmission                  |  |  |
| 8 999 104 | Scanner<br>Transmission: Color    |  |  |
| 8 999 105 | Scanner<br>Transmission: BW       |  |  |

SP9-XXX: Others

|         |                 |      |   |
|---------|-----------------|------|---|
| 9 511   | Skew Origin Set | *CTL |   |
| 9 511 1 | M: Skew Motor   |      | These SPs reset the skew correction value (SP2-119-001 to -003) to "0". |
| 9 511 2 | C: Skew Motor   |      |   |
| 9 511 3 | Y: Skew Motor   |      |   |

|       |                            |      |  |
|-------|----------------------------|------|--|
| 9 921 | Page Correction<br>Setting | *CTL | Not used in this machine.<br>[0 to 9999999/ 0 / 1] |
|-------|----------------------------|------|--|

 Note

- Memory Clear (SP5-801)
- The following tables list the items that are cleared. The serial number information, meter charge setting and meter charge counters (SP8-581, 582, 583, 584, and 586) are not cleared.

|        |                       |  |
|--------|-----------------------|--|
| 5801   | <b>[Memory Clear]</b> |  |
| 5801 1 | All Clear             | Resets all correction data for process control and all software counters, and returns all modes and adjustments to their default values.   |
| 5801 2 | ENG All               | Clears the engine settings.  |
| 5801 3 | SCS                   | Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.   |
| 5801 4 | IMH                   | No SP modes are cleared. But, all files stored in the HDD are cleared.<br>(IMH: Image Memory Handler)  |
| 5801 5 | MCS                   | No SP modes are cleared.<br>(MCS: Memory Control Service)  |
| 5801 6 | Copier application    | Initializes all copier application settings.   |
| 5801 7 | Fax application       | Initializes the fax reset time, job login ID, all TX/RX settings, local storage file numbers, and off-hook timer.  |
| 5801 8 | Printer application   | The following service settings: <ul style="list-style-type: none"> <li>▪ Bit switches</li> <li>▪ Gamma settings (User &amp; Service)</li> <li>▪ Toner Limit</li> </ul> The following user settings: <ul style="list-style-type: none"> <li>▪ Tray Priority</li> <li>▪ Menu Protect</li> <li>▪ System Setting except for setting of Energy Saver</li> <li>▪ I/F Setup (I/O Buffer and I/O Timeout)</li> <li>▪ PCL Menu</li> </ul> |
| 5801 9 | Scanner application   | Initializes the scanner defaults for the scanner and all the scanner SP modes.   |

|         |                     |  |
|---------|---------------------|--|
| 5801 10 | Netfile application | Deletes the network file application management files and thumbnails, and initializes the job login ID.  |
| 5801 11 | NCS                 | All setting of Network Setup (User Menu) (NCS: Network Control Service)                                  |
| 5801 12 | IPU                 | Clears the BICU settings   |
| 5801 13 | R-Fax               | Initializes the job login ID, SmartDeviceMonitor for Admin, job history, and local storage file numbers. |
| 5801 14 | Clear DCS Settings  | Initializes the DCS (Delivery Control Service) settings.   |
| 5801 15 | Clear UCS Settings  | Initializes the UCS (User Information Control Service) settings.   |
| 5801 16 | MIRS Setting        | Initializes the MIRS (Machine Information Report Service) settings.                                      |
| 5801 17 | CCS                 | Initializes the CCS (Certification and Charge-control Service) settings.                                 |

|             |                       |  |
|-------------|-----------------------|--|
| <b>5998</b> | <b>[Memory Clear]</b> |  |
| 5998 1      | ENG Setting           | All engine related SP modes except for the following: <ul style="list-style-type: none"> <li>▪ Serial number information</li> <li>▪ SP modes related to meter charge</li> <li>▪ Counters and logging data</li> </ul> |
| 5998 2      | ENG Counter           | All counters and logging data related to engine  |

## 5.2.2 INPUT CHECK TABLE

When entering the Input Check mode, 8 digits display the result for a section. Each digit corresponds to a different device as shown in the table.

|                |          |          |          |          |          |          |          |          |
|----------------|----------|----------|----------|----------|----------|----------|----------|----------|
| <b>Bit No.</b> | <b>7</b> | <b>6</b> | <b>5</b> | <b>4</b> | <b>3</b> | <b>2</b> | <b>1</b> | <b>0</b> |
| <b>Result</b>  | 0 or 1   | 0 or 1   | 0 or 1   | 0 or 1   | 0 or 1   | 0 or 1   | 0 or 1   | 0 or 1   |

## Copier

| 5803                               | Bit                                     | Description                   | Reading         |                  |
|------------------------------------|---|-------------------------------|-----------------|------------------|
|                                    |   |                               | 0               | 1                |
| <b>Interlock Release Detection</b> |   |                               |                 |                  |
| 5803 1                             | 0                                       | Interlock Release Detection 1 | Front door open | Front door close |
|                                    | 4                                       | Interlock Release Detection 2 | Front door open | Front door close |
| 5803 2                             | Right Cover Open/Close                  |                               | Close           | Open             |
| 5803 3                             | Toner Collection Bottle Set             |                               | Set             | Not set          |
| 5803 4                             | Image Transfer Contact/Release Position |                               | Not contact     | Contact          |
| 5803 6                             | Contact/Release Motor Overcurrent       |                               | Normal          | Over current     |
| 5803 7                             | Tray 1 Lift Motor Overcurrent           |                               | Over current    | Normal           |
| 5803 8                             | Tray 2 Lift Motor Overcurrent           |                               | Over current    | Normal           |
| 5803 9                             | Paper Transfer Contact/Release Position |                               | Not contact     | Contact          |
| 5803 10                            | Drum Motor: Bk: Lock                    |                               | Normal          | Lock error       |
| 5803 11                            | Drum Motor: MCY: Lock                   |                               | Normal          | Lock error       |
| 5803 12                            | Development Motor: MCY: Lock            |                               | Normal          | Lock error       |
| 5803 13                            | Toner Relay Motor: Lock                 |                               | Normal          | Lock error       |
| 5803 14                            | Fusing Exit Motor: Lock                 |                               | Normal          | Lock error       |
| 5803 15                            | Image Transfer Motor: Lock              |                               | Normal          | Lock error       |
| 5803 19                            | Electrical Section Cooling Fan: Lock    |                               | Normal          | Lock error       |
| 5803 21                            | Fan 1: Lock                             |                               | Normal          | Lock error       |
| 5803 22                            | Fan 2: Lock                             |                               | Normal          | Lock error       |

|         |                                   |                     |                 |
|---------|-----------------------------------|---------------------|-----------------|
| 5803 23 | Fusing Exit Fan: Lock             | Normal              | Lock error      |
| 5803 24 | Drive Unit Cooling Fan: Lock      | Normal              | Lock error      |
| 5803 25 | Fusing Exit Sensor Fan: Lock      | Normal              | Lock error      |
| 5803 26 | PSU Cooling Fan: Lock             | Normal              | Lock error      |
| 5803 27 | Toner Collection Full Sensor      | Not full            | Full            |
| 5803 28 | Drum Phase Sensor: Bk             | Filler not detected | Filler detected |
| 5803 32 | Drum Phase Sensor: MCY            | Filler not detected | Filler detected |
| 5803 35 | Toner End Sensor: Bk              | Toner end           | Toner remaining |
| 5803 36 | Toner End Sensor: M               | Toner end           | Toner remaining |
| 5803 37 | Toner End Sensor: C               | Toner end           | Toner remaining |
| 5803 38 | Toner End Sensor: Y               | Toner end           | Toner remaining |
| 5803 39 | Fusing Destination Detection: DOM | Set                 | Not set         |
| 5803 40 | Fusing Destination Detection: NA  | Set                 | Not set         |
| 5803 41 | Fusing Destination Detection: EU  | Set                 | Not set         |
| 5803 42 | Keycard: Set                      | Set                 | Not set         |
| 5803 43 | Mechanical Counter Bk: Set        | Not set             | Set             |
| 5803 44 | Mechanical Counter FC: Set        | Not set             | Set             |
| 5803 45 | Key Counter: Set                  | Set                 | Not set         |
| 5803 46 | Fusing New Unit Detection         | New                 | Not new         |
| 5803 47 | PP: SC Detection                  | SC detected         | SC not detected |
| 5803 48 | Tray 1 Set Detection              | Set                 | Not set         |
| 5803 49 | Tray 1 Paper End                  | No paper            | Paper           |

|         |                                      |                                   |                    |
|---------|--------------------------------------|-----------------------------------|--------------------|
|         |                                      |                                   | remaining          |
| 5803 50 | Tray 1 Paper Height Detection 1      | See table 1 following this table. |                    |
| 5803 51 | Tray 1 Paper Height Detection 2      | See table 1 following this table. |                    |
| 5803 52 | Tray 1 Lift Detection                | Not upper limit                   | Upper limit        |
| 5803 53 | Tray 2 Set Detection                 | Set                               | Not set            |
| 5803 54 | Tray 2 Paper End                     | No paper                          | Paper remaining    |
| 5803 55 | Tray 2 Paper Height Detection 1      | See table 1 following this table. |                    |
| 5803 56 | Tray 2 Paper Height Detection 2      | See table 1 following this table. |                    |
| 5803 57 | Tray 2 Lift Detection                | Not upper limit                   | Upper limit        |
| 5803 58 | Tray 2 Paper Size                    | See table 2 following this table. |                    |
| 5803 59 | Registration Sensor                  | Paper detected                    | Paper not detected |
| 5803 60 | Relay Sensor 1 (Paper feed sensor 1) | Paper detected                    | Paper not detected |
| 5803 61 | Relay Sensor 2 (Paper feed sensor 2) | Paper detected                    | Paper not detected |
| 5803 64 | Fusing Entrance Sensor               | Paper detected                    | Paper not detected |
| 5803 65 | Fusing Exit Sensor                   | Paper not detected                | Paper detected     |
| 5803 66 | Exit Sensor                          | Paper detected                    | Paper not detected |
| 5803 67 | Exit Full Detection                  | Paper not full                    | Paper full         |
| 5803 70 | By-pass Tray Paper End               | Paper remaining                   | No paper           |
| 5803 71 | By-Pass Paper Size                   | See table 3 following this table. |                    |

|         |   |   |  |
|---------|---|---|--|
| 5803 72 | Bridge Exit   | Paper detected                                | Paper not detected                             |
| 5803 73 | Bridge Relay Sensor   | Paper detected                                | Paper not detected                             |
| 5803 74 | Bridge Paper Full   | Paper not full                                | Paper full                                     |
| 5803 75 | Bridge Unit Set   | Set   | Not set  |
| 5803 76 | Bridge Exit Cover Detection                                     | Close   | Open   |
| 5803 77 | Bridge Relay Cover Detection                                    | Close   | Open   |
| 5803 78 | Duplex Entrance Sensor  | Paper detected                                | Paper not detected                             |
| 5803 79 | Duplex Exit Sensor  | Paper detected                                | Paper not detected                             |
| 5803 80 | Duplex Open/Close Detection                                     | Close   | Open   |
| 5803 82 | 1 Bin Tray Set Detection  | Set   | Not set  |
| 5803 83 | 1 Bin Tray Sensor   | Paper not detected                            | Paper detected                                 |
| 5803 84 | 1 Bin Tray Relay Sensor   | Paper detected                                | Paper not detected                             |
| 5803 85 | Shift Tray Set Detection  | Set   | Not set  |
| 5803 86 | Shift Tray Control Sensor                                       | Stay at Rear/<br>moving from rear<br>to front | Stay at Front/<br>moving from<br>front to rear |
| 5803 87 | Bank SEF (Vertical transport sensor 1/<br>Relay sensor) Sensor3 | Paper not<br>detected                         | Paper detected                                 |
| 5803 88 | Bank SEF (Vertical transport sensor<br>2) Sensor4               | Paper not<br>detected                         | Paper detected                                 |
| 5803 89 | Bank Feed Sensor 3  | Paper not                                     | Paper detected                                 |



|          |                            |                    |                 |
|----------|----------------------------|--------------------|-----------------|
|          |                            | detected           |                 |
| 5803 90  | Bank Feed Sensor 4         | Paper not detected | Paper detected  |
| 5803 91  | Bank Relay Cover Detection | Close              | Open            |
| 5803 94  | GAVD Open/Close Detection  | Close (LD5V ON)    | Open (LD5V OFF) |
| 5803 95  | Tube Cooling Fan: Lock     | Normal             | Lock error      |
| 5803 200 | Scanner HP Sensor          | Not HP             | HP              |
| 5803 201 | Platen Cover Sensor        | Open               | Close           |

**1000-Sheet Booklet Finisher (B793)**

| 6138   | Bit | Description  | Reading            |                   |
|--------|-----|--|--------------------|-------------------|
|        |     |  | 0                  | 1                 |
| 6138 1 |     | Interference Escape Sensor<br>(Stapler Safety Sensor)        | Not interfered     | Interfered        |
| 6138 2 |     | Staple Moving HP Sensor<br>(Staple Unit HP Sensor)           | Not home position  | Home position     |
| 6138 3 |     | Stuck Relay1 Release HP Sensor<br>(Stopper S HP Sensor)      | Not home position  | Home position     |
| 6138 4 |     | Exit Junction Gate HP Sensor<br>(Stack Feed Out HP Sensor)   | Home position      | Not home position |
| 6138 5 |     | Jogger HP Sensor<br>(Jogger Fence HP Sensor)                 | Not home position  | Home position     |
| 6138 6 |     | Staple Tray Paper Sensor<br>(Staple Tray Paper Sensor)       | Paper not detected | Paper detected    |
| 6138 7 |     | Rear Edge Fence HP Sensor<br>(Paper Stack Stopper HP Sensor) | Not home position  | Home position     |
| 6138 8 |     | Saddle Stitch Exit Sensor                                    | Paper detected     | Paper not         |

|         |   |                         |                     |
|---------|---|-------------------------|---------------------|
|         |   |                         | detected            |
| 6138 9  | Stuck Relay2 Roller HP Sensor<br>(Clamp Roller HP Sensor)     | Home position           | Not home position   |
| 6138 10 | Folder Tray Full Sensor 1<br>(Bottom Tray HP 1 Sensor)        | Full                    | Not full            |
| 6138 11 | Folder Tray Full Sensor 2<br>(Bottom Tray HP 2 Sensor)        | Not full                | Full                |
| 6138 12 | Folder Plate HP Sensor<br>(Fold Plate HP Sensor)              | Not home position       | Home position       |
| 6138 13 | Saddle Stitch Arrival Sensor<br>(Fold Unit Entrance Sensor)   | Paper not detected      | Paper detected      |
| 6138 14 | Folder Cam HP Sensor<br>(Fold Plate Cam HP Sensor)            | Not home position       | Home position       |
| 6138 15 | Staple Exit Sensor<br>(Stapler Tray Exit Sensor)              | Paper detected          | Paper not detected  |
| 6138 16 | Shift Tray Paper Sensor<br>(Shift Tray Paper Position Sensor) | Shift tray not detected | Shift tray detected |
| 6138 17 | Shift Tray Full   | Full                    | Nor full            |
| 6138 18 | Shift Roller HP Sensor  | Not home position       | Home position       |
| 6138 20 | Entrance Sensor<br>(Finisher Entrance Sensor)                 | Paper detected          | Paper not detected  |
| 6138 21 | Shift Exit Sensor<br>(Shift Tray Exit Sensor)                 | Paper not detected      | Paper detected      |
| 6138 22 | Proof Exit Sensor<br>(Proof Tray Exit Sensor)                 | Paper detected          | Paper not detected  |
| 6138 23 | Exit Guide Plate HP Sensor                                    | Not home position       | Home position       |
| 6138 24 | Proof Full Sensor<br>(Proof Tray Full Sensor)                 | Not full                | Full                |

|         |  |                   |                     |
|---------|--|-------------------|---------------------|
| 6138 25 | Upper Cover Sensor   | Open              | Close               |
| 6138 26 | Door SW<br>(Front Door Switch)                                 | Close             | Open                |
| 6138 27 | Clincher Timing Sensor   | Encoder           |                     |
| 6138 28 | Clincher HP Sensor   | Home position     | Not home position   |
| 6138 29 | Driver Timing Sensor   | Encoder           |                     |
| 6138 30 | Staple Near End  | Staple remaining  | Staple near end     |
| 6138 31 | Self Priming   | Staple detected   | Staple not detected |
| 6138 32 | Driver HP Sensor   | Home position     | Not home position   |
| 6138 33 | Punch Registration Detection HP Sensor                         | Not home position | Home position       |
| 6138 34 | Punch Moving HP Sensor<br>(Punch Movement HP Sensor)           | Not home position | Home position       |
| 6138 35 | Punch HP Sensor<br>(Punch HP Sensor)                           | Home position     | Not home position   |
| 6138 36 | Punch Pulse Count Sensor<br>(Punch Encoder Sensor)             | Encoder           |                     |
| 6138 37 | Punch Chad Full Sensor<br>(Punch Hopper Full Sensor)           | Not full          | Full                |
| 6138 38 | Punch Registration Detection Sensor<br>(Paper Position Sensor) | Paper detected    | Paper not detected  |

**1000-Sheet Finisher (B408)**

| 6139 | Bit | Description | Reading |
|------|-----|-------------|---------|
|------|-----|-------------|---------|

|         |  | <b>0</b>                 | <b>1</b>             |
|---------|--|--------------------------|----------------------|
| 6139 1  | Entrance Sensor  | Paper detected           | Paper not detected   |
| 6139 2  | Shift Exit Sensor<br>(Lower Tray Exit Sensor)            | Paper not detected       | Paper detected       |
| 6139 3  | Staple Entrance Sensor<br>(Stapler Tray Entrance Sensor) | Paper detected           | Paper not detected   |
| 6139 4  | Staple Moving HP Sensor<br>(Stapler HP Sensor)           | Not home position        | Home position        |
| 6139 5  | Jogger HP Sensor<br>(Jogger Fence HP Sensor)             | Not home position        | Home position        |
| 6139 6  | Stack Feed-out Belt HP Sensor                            | Home position            | Not home position    |
| 6139 7  | Staple Tray Paper Sensor                                 | Paper not detected       | Paper detected       |
| 6139 8  | Staple Rotation Sensor<br>(Staple Rotation HP Sensor)    | Not home position        | Home position        |
| 6139 9  | Staple Sensor  | Staple detected          | Staple not detected  |
| 6139 10 | Staple READY Detection                                   | Staple detected          | Staple not detected  |
| 6139 11 | Exit Guide Plate HP<br>(Exit Guide Plate HP Sensor)      | Not home position        | Home position        |
| 6139 12 | Shift HP Sensor  | Not home position        | Home position        |
| 6139 13 | Paper Sensor<br>(Stack Height Sensor)                    | Output tray not detected | Output tray detected |
| 6139 14 | Tray Lower Sensor<br>(Lower Tray Lower Limit Sensor)     | Lower limit              | Not lower limit      |

|         |   |          |      |
|---------|---|----------|------|
| 6139 15 | Proof Full Sensor<br>(Paper Limit Sensor) | Not full | Full |
|---------|---|----------|------|

### 500-Sheet Finisher (B792)

| 6141    | Bit | Description  | Reading            |                    |
|---------|-----|--|--------------------|--------------------|
|         |     |  | 0                  | 1                  |
| 6141 1  |     | Entrance Sensor  | Paper detected     | Paper not detected |
| 6141 2  |     | Empty Sensor   | Paper not detected | Paper detected     |
| 6141 3  |     | Front Jogger HP Sensor<br>(Front Jogger Fence HP Sensor) | Home position      | Not home position  |
| 6141 4  |     | Rear Jogger HP Sensor<br>(Rear Jogger Fence HP Sensor)   | Home position      | Not home position  |
| 6141 5  |     | Paper Detection Sensor 1<br>(Lever Sensor)               | See the table 5.   |                    |
| 6141 6  |     | Paper Detection Sensor 2<br>(Stack Height Sensor)        |                    |                    |
| 6141 7  |     | Tray Upper Sensor<br>(Tray Upper Limit Sensor)           | Not upper limit    | Upper limit        |
| 6141 8  |     | Tray Lower Sensor<br>(Stack Near-limit Sensor)           | Not lower limit    | Lower limit        |
| 6141 9  |     | Belt Sensor  | Not home position  | Home position      |
| 6141 10 |     | Staple Slide HP Sensor                                   | Home position      | Not home position  |
| 6141 11 |     | Jogger Plate HP Sensor<br>(Jogger Position Sensor)       | Not home position  | Home position      |
| 6141 12 |     | Pick Roller Sensor<br>(Pick-Up Roller Unit HP Sensor)    | Not home position  | Home position      |

|         |  |                     |                  |
|---------|--|---------------------|------------------|
| 6141 13 | Staple HP Sensor   | Not home position   | Home position    |
| 6141 14 | Staple Near Empty Sensor                                 | Staple near empty   | Staple remaining |
| 6141 15 | Staple Self Prime Sensor<br>(End Fence Detection Sensor) | Staple not detected | Staple detected  |
| 6141 16 | Top Cover Sensor   | Close               | Open             |
| 6141 17 | Staple Cover Sensor<br>(Front Cover Switch)              | Close               | Open             |

Table 1: Paper Height Sensor

0: Deactivated, 1: Activated (actuator inside sensor)

| Remaining paper | Paper height sensor 1 | Paper height sensor 2 |
|-----------------|-----------------------|-----------------------|
| Full            | 0                     | 0                     |
| Nearly full     | 1                     | 0                     |
| Near end        | 1                     | 1                     |
| Almost empty    | 0                     | 1                     |

Table 2: Paper Size Switch (Tray 2)

Switch 1 is used for tray set detection.

0: Pushed, 1: Not pushed

| Models                                    |   | Switch Location |   |   |
|---|---|-----------------|---|---|
| North America                             | Europe/Asia                               | 2               | 3 | 4 |
| 11" x 17" SEF* <sup>1</sup><br>(A3 SEF)   | A3 SEF* <sup>1</sup><br>(11" x 17" SEF)   | 1               | 0 | 0 |
| 8.5" x 14" SEF * <sup>2</sup><br>(B4 SEF) | B4 SEF * <sup>2</sup><br>(8.5" x 14" SEF) | 0               | 0 | 0 |
| A4 SEF                                    | A4 SEF                                    | 0               | 1 | 1 |

|   |   |   |   |   |
|---|---|---|---|---|
| 8.5" x 11" SEF                              | 8.5" x 11" SEF                              | 1 | 1 | 1 |
| B5 LEF                                      | B5 LEF                                      | 1 | 1 | 0 |
| 11" x 8 1/2" LEF* <sup>3</sup><br>(A4 LEF)  | A4 LEF* <sup>3</sup><br>(11" x 8 1/2" LEF)  | 0 | 0 | 1 |
| B5 LEF* <sup>4</sup><br>(10.5" x 7.25" LEF) | B5 LEF* <sup>4</sup><br>(10.5" x 7.25" LEF) | 0 | 1 | 0 |
| A5 LEF                                      | A5 LEF                                      | 1 | 0 | 1 |

↓ Note

- \*1: The machine detects either 11" x 17" SEF or A3 SEF, depending on the setting of SP 1-181-003.
- \*2: The machine detects either 8.5" x 14" SEF or B4 SEF, depending on the setting of SP 1-181-004.
- \*3: The machine detects either 11" x 8 1/2" LEF or A4 LEF, depending on the setting of SP 1-181-002.
- \*4: The machine detects either B5 LEF or 10.5" x 7.25" LEF, depending on the setting of SP 1-181-005.

**Table 3: Paper Size (By-pass Table)**

0: Pushed, 1: Not pushed

| Models  |                                  | Bit No. |   |   |   |
|---|----------------------------------|---------|---|---|---|
| North America   | Europe/Asia                      | 6       | 5 | 4 | 3 |
| 11" x 17" SEF* <sup>1</sup><br>(11" x 8.5" LEF)                 | A3 SEF* <sup>1</sup><br>(A4 LEF) | 1       | 0 | 0 | 1 |
| 11" x 17" SEF* <sup>1</sup><br>(11" x 8.5" LEF)                 | A3 SEF* <sup>1</sup><br>(A4 LEF) | 1       | 0 | 1 | 1 |
| 8.5" x 11" SEF* <sup>1</sup><br>(8.5" x 11" SEF* <sup>2</sup> ) | A4 SEF* <sup>1</sup><br>(A5 LEF) | 0       | 0 | 1 | 1 |
| 8.5" x 11" SEF* <sup>1</sup><br>(8.5" x 11" SEF* <sup>2</sup> ) | A4 SEF* <sup>1</sup><br>(A5 LEF) | 0       | 1 | 1 | 1 |

|                 |        |   |   |   |   |
|-----------------|--------|---|---|---|---|
| 5.5" x 8.5" SEF | A5 LEF | 1 | 1 | 1 | 1 |
| 5.5" x 8.5" SEF | A5 LEF | 1 | 1 | 1 | 0 |
| 5.5" x 8.5" SEF | A5 LEF | 1 | 1 | 0 | 0 |
| 5.5" x 8.5" SEF | A6 LEF | 1 | 1 | 0 | 1 |

 **Note**

- \*1: When the machine determines that the paper feed direction is "LEF", it considers that the paper size is bracketed size.

**Table 4: APS Original Size Detection**

| Original Size  |                             | Length Sensor |    |    | Width Sensor |    | SP4-301 display |
|--|-----------------------------|---------------|----|----|--------------|----|-----------------|
| Metric version   | Inch version                | L3            | L2 | L1 | W1           | W2 |                 |
| A3   | 11" x 17"                   | O             | O  | O  | O            | O  | 00011111        |
| B4   | 10" x 14"                   | O             | O  | O  | O            | X  | 00011110        |
| F4<br>8.5" x 13", 8.25" x 13", or 8" x 13"<br>SP 5126 controls the size that is detected | 8.5" x 14"                  | O             | O  | O  | X            | X  | 00011100        |
| A4 LEF   | 8.5" x 11"                  | X             | X  | X  | O            | O  | 00000011        |
| B5 LEF   | -                           | X             | X  | X  | O            | X  | 00000010        |
| A4 SEF   | 11" x 8.5"                  | X             | O  | O  | X            | X  | 00001100        |
| B5 SEF   | -                           | X             | X  | O  | X            | X  | 00000100        |
| A5 LEF/ SEF  | 5.5" x 8.5",<br>8.5" x 5.5" | X             | X  | X  | X            | X  | 00000000        |

**Table 5: Paper and Tray Detection (500-Sheet Finisher)**

|  |                          |                |                                |                    |
|--|--------------------------|----------------|--------------------------------|--------------------|
|  | Home Position<br>(Lever) | Paper detected | Home Position<br>(Output Tray) | Paper not detected |
|--|--------------------------|----------------|--------------------------------|--------------------|



|           |   |   |   |   |
|-----------|---|---|---|---|
| SP6-141-5 | 0 | 1 | 1 | 0 |
| SP6-141-6 | 1 | 1 | 0 | 0 |

### 5.2.3 OUTPUT CHECK TABLE

#### *Copier*

| 5804    | Display                                 | Description                              |
|---------|---|--|
| 5804 1  | Image Transfer Motor                    | Image Transfer Belt Contact Motor        |
| 5804 2  | Drum Motor: Bk:<br>Full Speed           | Drum/Development Drive Motor-K: 138 mm/s |
| 5804 3  | Drum Motor: Bk:<br>Medium Speed         | DFU                                      |
| 5804 4  | Drum Motor: Bk:<br>Low Speed            | Drum/Development Drive Motor-K: 77 mm/s  |
| 5804 14 | Drum Motor: MCY:<br>Full Speed          | Drum Drive Motor-CMY: 138 mm/s           |
| 5804 15 | Drum Motor: MCY:<br>Medium Speed        | DFU                                      |
| 5804 16 | Drum Motor: MCY:<br>Low Speed           | Drum Drive Motor-CMY: 77 mm/s            |
| 5804 17 | Development Motor: MCY: Full Speed      | Development Drive Motor-CMY: 138 mm/s    |
| 5804 18 | Development Motor: MCY:<br>Medium Speed | DFU                                      |
| 5804 19 | Development Motor: MCY: Low Speed       | Development Drive Motor-CMY: 77 mm/s     |

|         |                                    |  |
|---------|------------------------------------|--|
| 5804 20 | Toner Relay Motor                  | Toner Transport Motor                          |
| 5804 23 | Paper Transfer Motor               | Paper Transfer Roller Contact Motor            |
| 5804 24 | Image Transfer Motor: Full Speed   | Image Transfer Belt Unit Drive Motor: 138 mm/s |
| 5804 25 | Image Transfer Motor: Medium Speed | DFU  |
| 5804 26 | Image Transfer Motor: Low Speed    | Image Transfer Belt Unit Drive Motor: 77 mm/s  |
| 5804 27 | Fusing Exit Motor: Full Speed      | Fusing Paper Exit Motor: 138 mm/s              |
| 5804 28 | Fusing Exit Motor: Medium Speed    | DFU  |
| 5804 29 | Fusing Exit Motor: Low Speed       | Fusing Paper Exit Motor: 77 mm/s               |
| 5804 30 | Development Clutch: Bk             | Development Clutch                             |
| 5804 36 | Toner Supply Pump: Bk              | Toner Supply Clutch: Bk                        |
| 5804 37 | Toner Supply Pump: M               | Toner Supply Clutch: M                         |
| 5804 38 | Toner Supply Pump: C               | Toner Supply Clutch: C                         |
| 5804 39 | Toner Supply Pump: Y               | Toner Supply Clutch: Y                         |
| 5804 46 | Drive Unit Cooling Fan: High Speed | Drive Unit Fan                                 |

|         |  |   |
|---------|--|---|
| 5804 47 | Electrical Section<br>Cooling Fan: High<br>Speed | Controller Fan                                |
| 5804 48 | Fan 1: High Speed                                | Ventilation Fan - Front                       |
| 5804 49 | Fan 2: High Speed                                | Ventilation Fan - Front                       |
| 5804 50 | Fusing Exit Fan:<br>High Speed                   | Fusing/Paper Exit Fan: 138 mm/s               |
| 5804 51 | Fusing Exit Fan:<br>Low Speed                    | Fusing/Paper Exit Fan: 77 mm/s                |
| 5804 52 | Fusing Exit S Fan<br>High Speed                  | Fusing Fan: 138 mm/s                          |
| 5804 53 | Fusing Exit S Fan<br>Low Speed                   | Fusing Fan: 77 mm/s                           |
| 5804 54 | PSU Fan1: High<br>Speed                          | PSU Fan 1: 138 mm/s                           |
| 5804 56 | Dust Shield Shutter<br>Motor                     | Shutter Motor (Laser Optics Housing Unit)     |
| 5804 57 | TM Sensor Shutter<br>SOL                         | ID Sensor Shutter Solenoid                    |
| 5804 58 | TM Sensor LED<br>Output: F                       | ID Sensor LED Output: Front                   |
| 5804 59 | TM Sensor LED<br>Output: C                       | ID Sensor LED Output: Center                  |
| 5804 60 | TM Sensor LED<br>Output: R                       | ID Sensor LED Output: Rear                    |
| 5804 61 | P Sensor LED<br>Output: Bk                       | ID Sensor (mirror reflection) - K: LED Output |
| 5804 62 | P Sensor LED                                     | ID Sensor (mirror reflection) - M: LED Output |

|         |                              |   |
|---------|------------------------------|---|
|         | Output: M                    |   |
| 5804 63 | P Sensor LED<br>Output: C    | ID Sensor (mirror reflection) - C: LED Output |
| 5804 64 | P Sensor LED<br>Output: Y    | ID Sensor (mirror reflection) - Y: LED Output |
| 5804 65 | ST Sensor Output:<br>Bk      | ID Sensor (diffusion) - K: LED Output         |
| 5804 66 | ST Sensor Output:<br>M       | ID Sensor (diffusion) - M: LED Output         |
| 5804 67 | ST Sensor Output:<br>C       | ID Sensor (diffusion) - C: LED Output         |
| 5804 68 | ST Sensor Output:<br>Y       | ID Sensor (diffusion) - Y: LED Output         |
| 5804 69 | Toner End Sensor:<br>Bk      | Toner End Sensor - K                          |
| 5804 70 | Toner End Sensor:<br>M       | Toner End Sensor - M                          |
| 5804 71 | Toner End Sensor:<br>C       | Toner End Sensor - C                          |
| 5804 72 | Toner End Sensor:<br>Y       | Toner End Sensor - Y                          |
| 5804 73 | Separation Voltage           | Discharge Plate Voltage                       |
| 5804 74 | Image Transfer<br>Output: Bk | Image TRANSFER BELT UNIT BIAS OUTPUT: K       |
| 5804 75 | Image Transfer<br>Output: M  | Image Transfer Belt Unit Bias Output: M       |
| 5804 76 | Image Transfer<br>Output: C  | Image Transfer Belt Unit Bias Output: C       |

|         |                                    |  |
|---------|------------------------------------|--|
| 5804 77 | Image Transfer Output: Y           | Image Transfer Belt Unit Bias Output: Y    |
| 5804 78 | Charge DC Output: Bk               | Drum Charge DC Voltage Output: K           |
| 5804 79 | Charge DC Output: M                | Drum Charge DC Voltage Output: M           |
| 5804 80 | Charge DC Output: C                | Drum Charge DC Voltage Output: C           |
| 5804 81 | Charge DC Output: Y                | Drum Charge DC Voltage Output: Y           |
| 5804 82 | Charge AC Output: Bk: Full Speed   | Drum Charge AC Voltage Output: K: 138 mm/s |
| 5804 83 | Charge AC Output: Bk: Medium Speed | DFU  |
| 5804 84 | Charge AC Output: Bk: Low Speed    | Drum Charge AC Voltage Output: K: 77 mm/s  |
| 5804 85 | Charge AC Output: M: Full Speed    | Drum Charge AC Voltage Output: M: 138 mm/s |
| 5804 86 | Charge AC Output: M: Medium Speed  | DFU  |
| 5804 87 | Charge AC Output: M: Low Speed     | Drum Charge AC Voltage Output: M: 77 mm/s  |
| 5804 88 | Charge AC Output: C: Full Speed    | Drum Charge AC Voltage Output: C: 138 mm/s |
| 5804 89 | Charge AC Output: C: Medium Speed  | DFU  |
| 5804 90 | Charge AC Output: C: Low Speed     | Drum Charge AC Voltage Output: C: 77 mm/s  |

|          |                                      |  |
|----------|--------------------------------------|--|
| 5804 91  | Charge AC Output:<br>Y: Full Speed   | Drum Charge AC Voltage Output: Y: 138 mm/s     |
| 5804 92  | Charge AC Output:<br>Y: Medium Speed | DFU  |
| 5804 93  | Charge AC Output:<br>Y: Low Speed    | Drum Charge AC Voltage Output: Y: 77 mm/s      |
| 5804 94  | Development<br>Output: Bk            | Development Bias Output: Bk                    |
| 5804 95  | Development<br>Output: M             | Development Bias Output: M                     |
| 5804 96  | Development<br>Output: C             | Development Bias Output: C                     |
| 5804 97  | Development<br>Output: Y             | Development Bias Output: Y                     |
| 5804 98  | Paper Transfer<br>Output +           | Paper Transfer Roller Output: Positive current |
| 5804 99  | Paper Transfer<br>Output –           | Paper Transfer Roller Output: Negative current |
| 5804 100 | PCL: Bk                              | Toner Supply Motor Clutch: K                   |
| 5804 101 | PCL: M                               | Toner Supply Motor Clutch: M                   |
| 5804 102 | PCL: C                               | Toner Supply Motor Clutch: C                   |
| 5804 103 | PCL: Y                               | Toner Supply Motor Clutch: Y                   |
| 5804 104 | Polygon Motor: LL                    | Polygon Motor: 77 mm/s                         |
| 5804 105 | Polygon Motor: L                     | DFU  |
| 5804 106 | Polygon Motor: H                     | Polygon Motor: 138 mm/s                        |
| 5804 107 | Polygon Motor: HH                    | DFU  |

|          |                             |                                   |
|----------|-----------------------------|-----------------------------------|
| 5804 109 | Feed Motor:<br>77mm/s       | Paper Feed Motor: 77 mm/s         |
| 5804 110 | Feed Motor:<br>115mm/s      | DFU                               |
| 5804 111 | Feed Motor:<br>138mm/s      | Paper Feed Motor: 138 mm/s        |
| 5804 116 | Feed Motor:<br>220mm/s      | DFU                               |
| 5804 118 | Feed CL1                    | Tray 1 Paper Feed Clutch          |
| 5804 119 | Feed CL2                    | Tray 2 Paper Feed Clutch          |
| 5804 120 | By Pass SOL                 | By-pass Tray Solenoid             |
| 5804 123 | Regist Motor:<br>77mm/s     | Registration Motor: 77 mm/s       |
| 5804 125 | Regist Motor:<br>138mm/s    | Registration Motor: 138 mm/s      |
| 5804 128 | Tray Lock SOL               | Tray Lock Solenoid                |
| 5804 129 | Up Motor1: Up               | Tray Lift Motor 1: Lift Up        |
| 5804 130 | Up Motor1: Down             | Tray Lift Motor 1: Lift Down      |
| 5804 131 | Up Motor2: Up               | Tray Lift Motor 2: Lift Up        |
| 5804 132 | Up Motor2: Down             | Tray Lift Motor 2: Lift Down      |
| 5804 135 | Junction Gate SOL           | Junction Gate Solenoid            |
| 5804 138 | Duplex Motor CW:<br>77mm/s  | Duplex/By-pass Motor: CW 77 mm/s  |
| 5804 139 | Duplex Motor CW:<br>115mm/s | DFU                               |
| 5804 140 | Duplex Motor CW:            | Duplex/By-pass Motor: CW 138 mm/s |

|          |                                 |                                       |
|----------|---------------------------------|---------------------------------------|
|          | 138mm/s                         |                                       |
| 5804 142 | Duplex Motor CW:<br>220mm/s     | DFU                                   |
| 5804 143 | Duplex Motor<br>CCW: 77mm/s     | Duplex/By-pass Motor: CCW 77 mm/s     |
| 5804 144 | Duplex Motor<br>CCW: 115mm/s    | DFU                                   |
| 5804 145 | Duplex Motor<br>CCW: 138mm/s    | Duplex/By-pass Motor: CCW 138 mm/s    |
| 5804 149 | Duplex Motor<br>CCW: 220mm/s    | DFU                                   |
| 5804 150 | Inverter Motor CW:<br>77mm/s    | Duplex Inverter Motor: CW 77 mm/s     |
| 5804 151 | Inverter Motor CW:<br>115mm/s   | DFU                                   |
| 5804 152 | Inverter Motor CW:<br>138mm/s   | Duplex Inverter Motor: CW 138 mm/s    |
| 5804 153 | Relay Motor:<br>77mm/s          | Bridge Unit Transport Motor: 77 mm/s  |
| 5804 155 | Relay Motor:<br>138mm/s         | Bridge Unit Transport Motor: 138 mm/s |
| 5804 158 | Relay Junction<br>gate Solenoid | Bridge Unit Junction Gate Solenoid    |
| 5804 159 | Relay Cooling Fan:<br>Strong    | Not used                              |
| 5804 160 | Relay Cooling Fan:<br>weak      | Not used                              |
| 5804 162 | Shift Tray Motor                | Shift Tray Motor                      |



|          |                                 |  |
|----------|---------------------------------|--|
| 5804 163 | Bank Motor:<br>77mm/s           | Feed Motor: 77 mm/s (Optional Paper Feed Unit or LCT)            |
| 5804 164 | Bank Motor:<br>115mm/s          | DFU  |
| 5804 165 | Bank Motor:<br>138mm/s          | Feed Motor: 138 mm/s (Optional Paper Feed Unit or LCT)           |
| 5804 166 | Bank Motor:<br>220mm/s          | DFU  |
| 5804 169 | Bank Feed CL3                   | Paper Feed Clutch 3<br>(Optional Paper Feed Unit: Tray 3 or LCT) |
| 5804 170 | Bank Feed CL4                   | Paper Feed Clutch 4 (Optional Paper Feed Unit: Tray 4)           |
| 5804 171 | Bank Pickup SOL3                | Pickup Solenoid 3<br>(Optional Paper Feed Unit: Tray 3 or LCT)   |
| 5804 172 | Bank Pickup SOL4                | Pickup Solenoid 4 (Optional Paper Feed Unit: Tray 4)             |
| 5804 173 | Bank Tray Lock SO               | Tray Lock Solenoid for Tray 3 and Tray 4                         |
| 5804 174 | Tube Cooling Fan:<br>High Speed | Toner Supply Tube Fan: High Speed                                |
| 5804 175 | Tube Cooling Fan:<br>Low Speed  | Toner Supply Tube Fan: Low Speed                                 |
| 5804 176 | Toner Bottle<br>Clutch: K       | Toner Bottle Clutch - K  |
| 5804 177 | Toner Bottle<br>Clutch: M       | Toner Bottle Clutch - M  |
| 5804 178 | Toner Bottle<br>Clutch: C       | Toner Bottle Clutch - C  |
| 5804 179 | Toner Bottle<br>Clutch: Y       | Toner Bottle Clutch - Y  |

|          |                               |   |
|----------|-------------------------------|---|
| 5804 189 | Relay Motor:<br>Current Chang | Drive Motor (Bridge Unit): Current Change |
| 5804 190 | Relay Motor: Reset            | Drive Motor (Bridge Unit): Reset          |
| 5804 191 | Relay Motor:<br>Enable        | Drive Motor (Bridge Unit): Enable         |
| 5804 192 | RFID ON/OFF:K                 | RFID ON/OFF - K                           |
| 5804 193 | RFID ON/OFF:M                 | RFID ON/OFF - M                           |
| 5804 194 | RFID ON/OFF:C                 | RFID ON/OFF - C                           |
| 5804 195 | RFID ON/OFF:Y                 | RFID ON/OFF - Y                           |
| 5804 196 | RFID COM ON:K                 | RFID Communication ON - K                 |
| 5804 197 | RFID COM ON:M                 | RFID Communication ON - M                 |
| 5804 198 | RFID COM ON:C                 | RFID Communication ON - C                 |
| 5804 199 | RFID COM ON:Y                 | RFID Communication ON - Y                 |
| 5804 202 | Scanner Lamp                  | Scanner Exposure Lamp                     |

**1000-Sheet Booklet Finisher (B793)**

| <b>6143</b> | <b>Display</b>         | <b>Description</b>        |
|-------------|------------------------|---------------------------|
| 6143 1      | Shift Motor            | Shift Tray Motor          |
| 6143 2      | Entrance Motor         | -                         |
| 6143 3      | Staple Relay Motor     | Stapler Unit Motor        |
| 6143 4      | Knock Solenoid         |                           |
| 6143 5      | Junction Gate SOL<br>1 | Proof Tray Gate Solenoid  |
| 6143 6      | Junction Gate SOL<br>2 | Staple Tray Gate Solenoid |
| 6143 7      | Folder Roller          | Fold Roller Motor         |

|         |                                 |                                   |
|---------|---------------------------------|-----------------------------------|
|         | Rotation Motor                  |                                   |
| 6143 8  | Staple Motor                    | Staple Fold Motor                 |
| 6143 10 | Exit Guide Plate Motor          | -                                 |
| 6143 11 | Shift Relay Motor               | Upper Transport Motor             |
| 6143 12 | Tray Motor                      | Shift Tray Motor                  |
| 6143 13 | Stack Feed-out Motor            | Positioning Roller Solenoid       |
| 6143 14 | Stuck Relay1 Motor              | Upper Clamp Roller Motor          |
| 6143 15 | Stuck Relay1 Release Motor      | Upper Retraction Motor            |
| 6143 16 | Rear Edge Fence Drive Motor     | Bottom Fence Lift Motor           |
| 6143 17 | Folder Plate Motor              | -                                 |
| 6143 18 | Drive Roller Oscillating Motor  | Lower Retraction Motor            |
| 6143 19 | Staple Moving Motor             | Staple Unit Driver Motor          |
| 6143 20 | Jogger Motor                    | Jogger Motor                      |
| 6143 21 | Punch Registration Moving Motor | Paper Position Sensor Slide Motor |
| 6143 22 | Punch Motor                     | -                                 |
| 6143 23 | Punch Moving Motor              | Punch Movement Motor              |

**1000-Sheet Finisher (B408)**

| 6144 | Display | Description |
|------|---------|-------------|
|------|---------|-------------|

|         |                             |                                |
|---------|-----------------------------|--------------------------------|
| 6144 1  | Relay Up Motor              | Upper Transport Motor          |
| 6144 2  | Relay Down Motor            | Lower Transport Motor          |
| 6144 3  | Exit Motor                  | -                              |
| 6144 4  | Proof Junction Gate SOL     | Tray Junction Gate Solenoid    |
| 6144 5  | Tray Up Motor               | Lower Tray Lift Motor          |
| 6144 6  | Jogger Motor                | Jogger Fence Motor             |
| 6144 7  | Staple Moving Motor         | Stapler Motor                  |
| 6144 8  | Staple Motor                | Stapler Hammer                 |
| 6144 9  | Staple Junction Gate SOL    | Stapler Junction Gate Solenoid |
| 6144 10 | Positioning Roller Solenoid | Positioning Roller Solenoid    |
| 6144 11 | Stack Feed-out Motor        | -                              |
| 6144 12 | Shift Motor                 | -                              |
| 6144 13 | Exit Guide Plate Motor      | -                              |

**500-Sheet Finisher (B792)**

| <b>6146</b> | <b>Display</b>           | <b>Description</b>    |
|-------------|--------------------------|-----------------------|
| 6146 1      | Relay Pulse Motor        | Paper Transport Motor |
| 6146 2      | Front Jogger Pulse Motor | Front Jogger Motor    |
| 6146 3      | Rear Jogger Pulse Motor  | Rear Jogger Motor     |

|         |                          |                              |
|---------|--------------------------|------------------------------|
| 6146 4  | Staple Slide Pulse Motor | Stapler Unit Movement Motor  |
| 6146 5  | Stuck Exit Pulse Motor   | Paper Reverse/Exit Motor     |
| 6146 6  | Pick Roller Pluse Motor  | Pick-Up Roller Contact Motor |
| 6146 7  | Staple DC Motor          | Staple Unit Motor            |
| 6146 8  | Paper Tray Lift DC Motor | Output tray motor            |
| 6146 9  | Paper Detection SOL      | Stack Height Lever Solenoid  |
| 6146 10 | Paddle Rotation SOL      | Paddle Roller Solenoid       |
| 6146 11 | Belt SOL                 | Belt Lift Solenoid           |

## 5.2.4 TEST PATTERN PRINTING

Printing Test pattern: SP2-109

Some of these test patterns are used for copy image adjustments but most are used primarily for design testing.

### ↓ Note

- Do not operate the machine until the test pattern is printed out completely. Otherwise, an SC occurs.
1. Enter the SP mode and select **SP2-109-003**.
  2. Enter the number for the test pattern that you want to print and press [#].
  3. When you want to select the single color of Magenta, Yellow or Cyan for printing a test pattern, select the color with SP2-109-005 (2: Magenta, 3: Yellow, 4: Cyan).
  4. When you want to change the density of printing a test pattern, select the density with SP2-109-006 to -009 for each color.

### ↓ Note

- If you select "0" with SP2-109-006 to -009, the color to be adjusted to "0" does not come up on a test pattern.

5. When you are prompted to confirm your selection, touch "Yes" to select the test pattern for printing.
6. Touch "Copy Window" to open the copy window, then select the settings for the test print (paper size etc.).

**Note**

- If you want to use black and white printing, touch "Black & White" on the LCD.  
If you want to use color printing, touch "Full Colour" on the LCD.
7. Press the "Start" key to start the test print.
  8. After checking the test pattern, touch "SP Mode" on the LCD to return to the SP mode display.
  9. Reset all settings to the default values.
  10. Touch "Exit" twice to exit SP mode.

| No. | Pattern                         | No. | Pattern                   |
|-----|---------------------------------|-----|---------------------------|
| 0   | None                            | 12  | 2-dot pattern             |
| 1   | 1-dot line pattern (Vertical)   | 13  | 4-dot pattern             |
| 2   | 2-dot line pattern (Vertical)   | 14  | 1-dot trimming pattern    |
| 3   | 1-dot line pattern (Horizontal) | 15  | None                      |
| 4   | 2-dot line pattern (Horizontal) | 16  | Cross stitch: main-scan   |
| 5   | 1-dot grid pattern (Vertical)   | 17  | Belt pattern (Horizontal) |
| 6   | 1-dot grid pattern (Horizontal) | 18  | Belt pattern (Vertical)   |
| 7   | 1-dot grid pattern (Fine)       | 19  | Checkered flag            |
| 8   | 1-dot grid pattern (Rough)      | 20  | Gray scale (Vertical)     |
| 9   | 1-dot slant pattern (Fine)      | 21  | Gray scale (Horizontal)   |
| 10  | 1-dot slant pattern (Rough)     | 22  | None                      |
| 11  | 1-dot pattern                   | 23  | Solid                     |

## 5.3 PRINTER SERVICE MODE

### 5.3.1 SP1-XXX (SERVICE MODE)

|             |                       |      |   |
|-------------|-----------------------|------|---|
| <b>1001</b> | [Bit Switch]          |      |   |
| 1001 1      | Bit Switch 1 Settings | *CTL | Adjusts the bit switch settings. <b>DFU</b> |
| 1001 2      | Bit Switch 2 Settings |      |   |
| 1001 3      | Bit Switch 3 Settings |      |   |
| 1001 4      | Bit Switch 4 Settings |      |   |
| 1001 5      | Bit Switch 5 Settings |      |   |
| 1001 6      | Bit Switch 6 Settings |      |   |
| 1001 7      | Bit Switch 7 Settings |      |   |
| 1001 8      | Bit Switch 8 Settings |      |   |

|             |   |  |  |
|-------------|---|--|--|
| <b>1003</b> | [Clear Setting]   |  |  |
| 1003 1      | Initialize Printer System                                   |  |  |
|             | Initializes settings in the "System" menu of the user mode. |  |  |
| 1003 3      | Delete Program  |  |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>1004</b> | [Print Summary]  |  |  |
| 1004 1      | Print Summary  |  |  |
|             | Prints the service summary sheet (a summary of all the controller settings). |  |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>1005</b> | [Display Version]                                |  |  |
| 1005 1      | Disp. Version                                    |  |  |
|             | Displays the version of the controller firmware. |  |  |

|             |  |      |                                |
|-------------|--|------|--------------------------------|
| <b>1006</b> | [Sample/Locked Print]  | *CTL | <b>0:</b> Linked, <b>1:</b> On |
| 1006 1      | Enables and disables the document server. When you select “0,” the document server is enabled or disabled in accordance with Copy Service Mode SP5-967. When you select “1,” the document server is enabled regardless of Copy Service Mode SP5-967. |      |                                |

|             |   |      |  |
|-------------|---|------|--|
| <b>1101</b> | [Data Recall]   |      |  |
|             | Recalls a set of gamma settings. This can be either a) the factory setting, b) the previous setting, or c) the current setting. |      |  |
| 1101 1      | Factory   | *CTL |  |
| 1101 2      | Previous  |      |  |
| 1101 3      | Current   |      |  |
| 1101 4      | ACC   |      |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>1102</b> | [Resolution Setting]   |  |  |
|             | Selects the printing mode (resolution) for the printer gamma adjustment.                             |  |  |
| 1102 1      | <b>2400x600 Photo</b> , 1800x600 Photo, 600 x 600 Photo, 2400x600 Text, 1800x600, Text, 600x600 Text |  |  |

|             |  |  |  |
|-------------|--|--|--|
| <b>1103</b> | [Test Page]  |  |  |
|             | Prints the test page to check the color balance before and after the gamma adjustment. |  |  |
| 1103 1      | Color Gray Scale   |  |  |
| 1103 2      | Color Pattern  |  |  |

|             |                    |  |  |
|-------------|--------------------|--|--|
| <b>1104</b> | [Gamma Adjustment] |  |  |
|-------------|--------------------|--|--|



|         |   |      |                          |
|---------|---|------|--------------------------|
|         | Adjusts the printer gamma for the mode selected in the “Mode Selection” menu. |      |                          |
| 1104 1  | Black: Highlight  | *CTL | [0 to 30 / 15 / 1/step ] |
| 1104 2  | Black: Shadow   |      |                          |
| 1104 3  | Black: Middle   |      |                          |
| 1104 4  | Black: IDmax  |      |                          |
| 1104 21 | Cyan: Highlight   |      |                          |
| 1104 22 | Cyan: Shadow  |      |                          |
| 1104 23 | Cyan: Middle  |      |                          |
| 1104 24 | Cyan: IDmax   |      |                          |
| 1104 41 | Magenta: Highlight  |      |                          |
| 1104 42 | Magenta: Shadow   |      |                          |
| 1104 43 | Magenta: Middle   |      |                          |
| 1104 44 | Magenta: IDmax  |      |                          |
| 1104 61 | Yellow: Highlight   |      |                          |
| 1104 62 | Yellow: Shadow  |      |                          |
| 1104 63 | Yellow: Middle  |      |                          |
| 1104 64 | Yellow: IDmax   |      |                          |

|             |   |
|-------------|---|
|             | [Save Tone Control Value]   |
| <b>1105</b> | Stores the print gamma adjusted with the “Gamma Adj.” menu item as the current setting. Before the machine stores the new “current setting”, it moves the data currently stored as the “current setting” to the “previous setting” memory storage location. |
| 1105 1      | Save Tone Control Value   |

|             |   |      |                                       |
|-------------|---|------|---------------------------------------|
| <b>1106</b> | [Toner Limit]   |      |                                       |
|             | Adjusts the maximum toner amount for image development. |      |                                       |
| 1106 1      | Toner Limit: Photo                                      | *CTL | [100 to 400 / <b>260</b> / 1 %/step ] |

## 5.4 SCANNER SERVICE MODE

### 5.4.1 SP1-XXX (SYSTEM AND OTHERS)

|        |   |      |   |
|--------|---|------|---|
| 1004   | <b>[Compression Type]</b>                                   |      |   |
|        | Selects the compression type for binary picture processing. |      |   |
| 1004 1 | Compression Type  | *CTL | [1 to 3 / <b>1</b> / 1/step ]<br>1: MH, 2: MR, 3: MMR |

|        |  |      |                                  |
|--------|--|------|----------------------------------|
| 1005   | <b>[Erase margin]</b>  |      |                                  |
|        | Creates an erase margin for all edges of the scanned image.<br>If the machine has scanned the edge of the original, create a margin. |      |                                  |
| 1005 1 | Range from 0 to 5 mm   | *CTL | [0 to 5 / <b>0</b> / 1 mm/step ] |

|        |                                |      |  |
|--------|--------------------------------|------|--|
| 1009   | <b>[Remote scan disable]</b>   | *CTL | [0 to 1 / <b>0</b> / 1 /step]<br>0: enable, 1: disable |
| 1009 1 | Enable or disable remote scan. |      |  |

### 5.4.2 SP2-XXX (SCANNING-IMAGE QUALITY)



|        |  |      |                                  |
|--------|--|------|----------------------------------|
| 2021   | <b>[Compression Level (Gray-scale)]</b>  |      |                                  |
|        | Selects the compression ratio for grayscale processing mode (JPEG) for the three settings that can be selected at the operation panel. |      |                                  |
| 2021 1 | Level 3 (Middle Image Quality)   | *CTL | [5 to 95 / <b>40</b> / 1 /step ] |
| 2021 2 | Level 2 (High Image Quality)   |      | [5 to 95 / <b>50</b> / 1 /step ] |
| 2021 3 | Level 4 (Low Image Quality)  |      | [5 to 95 / <b>30</b> / 1 /step ] |
| 2021 4 | Level 1 (Highest Image Quality)  |      | [5 to 95 / <b>60</b> / 1 /step ] |
| 2021 5 | Level 5 (Lowest Image Quality)   |      | [5 to 95 / <b>20</b> / 1 /step ] |

|             |  |      |                                  |
|-------------|--|------|----------------------------------|
| <b>2024</b> | <b>[Compression ratio of ClearLight PDF]</b>   |      |                                  |
|             | Selects the compression ratio for clearlight PDF for the two settings that can be selected at the operation panel. |      |                                  |
| 2024 1      | Compression Ratio (Normal image)   | *CTL | [5 to 95 / <b>20</b> / 1 /step ] |
| 2024 2      | Compression Ratio (High comp image)  |      | [5 to 95 / <b>20</b> / 1 /step ] |

## 5.5 REBOOT/SYSTEM SETTING RESET

### 5.5.1 SOFTWARE RESET



You can reboot the software with one of the following two procedures:

1. Turn the main power switch off and on.
2. Press and hold down   together for over 10 seconds. When the machine beeps once, release both buttons. After “Now loading. Please wait” shows for a few seconds, the copy window will open. The machine is ready for normal operation.


### 5.5.2 SYSTEM SETTINGS AND COPY SETTING RESET


#### ***System Setting Reset***

The system settings in the UP mode can be reset to their defaults. Use the following procedure.

1. Press User Tools/Counter .
2. Hold down  and then press System Settings.

 **Note**

- You must press  first.

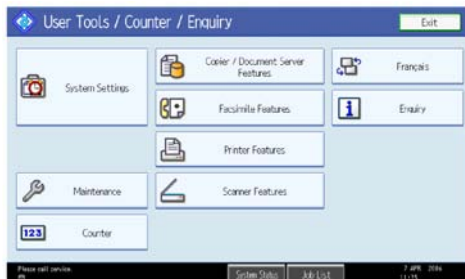

3. Press yes when the message prompts you to confirm that you want to reset the system settings.
4. Press exit when the message tells you that the settings have been reset.


#### ***Copier Setting Reset***

Use the following procedure to reset the copy settings in the UP mode to their defaults.

1. Press User Tools/Counter .
2. Hold down  and then press Copier/Document Server Settings.

 **Note**

- You must press  first.

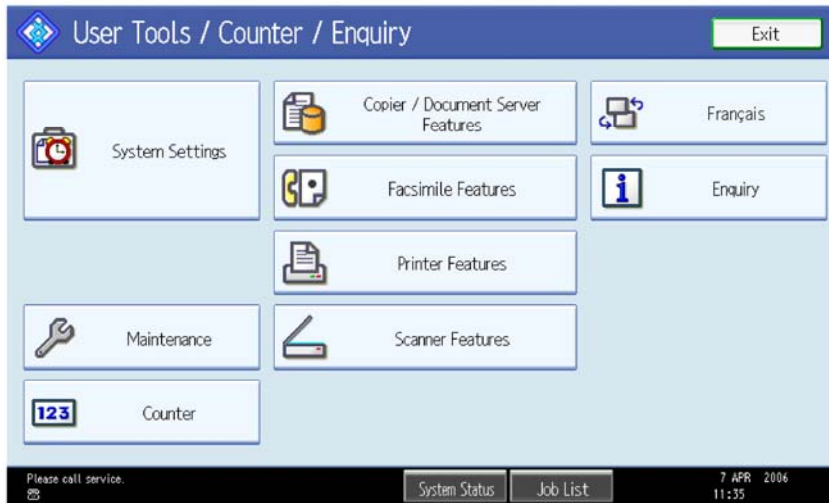

3. Press "Yes" when the message prompts you to confirm that you want to reset the Copier Document Server settings.
4. Press exit when the message tells you that the settings have been reset.

## 5.6 FIRMWARE UPDATE

To update the firmware for this machine, you must have the new version of the firmware downloaded onto an SD (Secure Digital) Card. The SD Card is inserted into SD Card Slot 3 on the right side of the controller box.

### 5.6.1 TYPE OF FIRMWARE

There are 16 types of firmware as shown below.

| Type of firmware        | Function  | Location of firmware              | Message shown |
|-------------------------|---|-----------------------------------|---------------|
| Engine                  | Printer engine control  | BICU Flash ROM                    | Engine        |
| System/Copy Application | Operating system  | Flash ROM on the controller board | System/Copy   |
| Netfile Application     | Feature application   | Printer/scanner SD card           | NetworkDocBox |
| Printer Application     | Feature application   | Printer/scanner SD card           | SD Printer    |
| Scanner Application     | Feature application   | Printer/scanner SD card           | SD Scanner    |
| Fax Application         | Feature application   | Flash ROM on the controller board | Fax           |
| NIB                     | Network Interface   | Printer/scanner SD card           | Network       |
| Operation Panel         | Panel control   | Operation Panel                   | OpePanel.     |
| Fax FCU                 | Fax control   | FCU                               | GWFCU 3-3     |
| Language (16 languages) | Language firmware<br>Two languages can be selected from 16 languages. | Operation Panel                   | LANG          |
| WebDocBox               | Document server   | Printer/scanner                   | Web Uapl      |


|                         |  |                            |                 |
|-------------------------|--|----------------------------|-----------------|
|                         | application                                | SD card                    |                 |
| WebSys                  | Web Service application                    | Printer/scanner<br>SD card | Web Support     |
| PS3                     | Page description<br>language (PostScript3) | PS3 SD card                | Option PS3      |
| DESS                    | Security control                           | Printer/Scanner<br>SD card | Security Module |
| ARDF                    | ARDF control                               | ARDF                       | ADF             |
| Finisher (B793<br>only) | Finisher control                           | Finisher (B793<br>only)    | Finisher        |

## 5.6.2 BEFORE YOU BEGIN

An SD card is a precision device. Always observe the following precautions when you handle SD cards:

- Always switch the machine off before you insert an SD card. Never insert the SD card into the slot with the power on.
- Do not remove the SD card from the service slot after the power has been switched on.
- Never switch the machine off while the firmware is downloading from the SD card.
- Keep SD cards in a safe location where they are not exposed to high temperature, high humidity, or exposure to direct sunlight.
- Always handle SD cards with care. Do not bend or scratch them. Do not let the SD card get exposed to shock or vibration.
- Make sure that the write protection of an SD card is unlocked when you download an application to it. If not, downloading fails and a download error (e.g. Error Code 44) occurs during a firmware upgrade.

Keep the following points in mind when you use the firmware update software:

- “Upload” means to send data from the machine to the SD card. “Download” means to send data from the SD card to the machine.
- To select an item on the LCD, touch the appropriate button on the soft touch-screen of the LCD, or, press the appropriate number key on the 10-key pad of the operation panel. For example, when “Exit (0)” shows on the screen you can touch the Exit button on the screen, or, press the  button on the operation panel of the copier.



- Make sure that the machine is disconnected from the network to prevent a print job from arriving while the firmware update is in progress before you start the firmware update procedure.


## 5.6.3 UPDATING FIRMWARE

### Preparation

1. If the SD card is blank, copy the entire "romdata" folder onto the SD card.
2. If the card already contains the "romdata" folder, copy the "B230" folder onto the card. If the card already contains folders up to "B230", copy the necessary firmware files (e.g. B230xxxx.fwu) into this folder.

#### ↓ Note

- Do not put multiple machine firmware programs on the same SD card. Copy the only model firmware you want.
- ⇒
- Controller firmware and operation panel firmware cannot be updated at the same time. It is recommended to update firmware modules one by one.

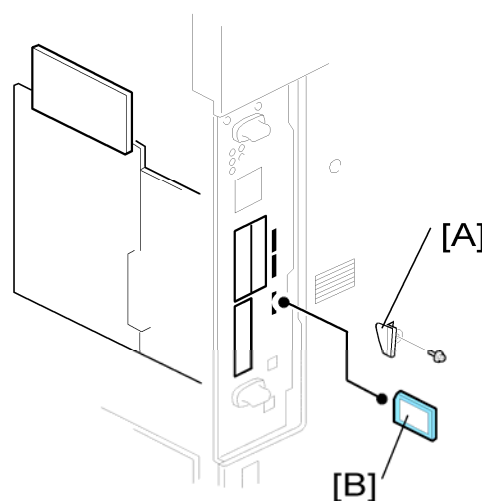


1. Turn the main power switch off.
2. Remove the slot cover [A] (🔧 x 1).
3. Insert the SD card into SD Card Slot 3. Make sure the label on the SD card [B] faces the rear side of the machine.
4. Slowly push the SD card into the slot so it locks in place. You will hear it click. Make sure the SD card locks in place.

#### ↓ Note

- To remove the SD card, push it in to unlock the spring lock. Then release it so it pops out of the slot.
5. Disconnect the network cable from the copier if the machine is connected to a network.
  6. Switch the main power switch on. After about 45 seconds, the initial version update screen appears on the LCD in English.

- On the screen, touch the button or press the corresponding number key on the operation panel to select the item in the menu that you want to update.

| ROM/NEW | What it means  |
|---------|--|
| ROM:    | Tells you the number of the module and name of the version currently installed. The first line is the module number, the second line the version name. |
| NEW:    | Tells you the number of the module and name version on the SD card. The first line is the module number, the second line the version name.             |


- Touch “UpDate (#)” (or ) to start the update.



- The progress bar does not show for the operation panel firmware after you touch “OpPanel”. The power on key flashes on and off at 0.5 s intervals when the LCDC firmware is updating. The power key flashes on and off at 3 s intervals when the update is finished.
- The “Update is Done” message appears on the operation panel after completing the updating. The message differs depending on the firmware that has been updated.
  - Switch the copier main power switch off when you see the “Update is Done” message or follow the procedure that is displayed on the operation panel.
  - Press in the SD card to release it. Then remove it from the slot.
  - Switch the copier on for normal operation.


#### Error Messages

An error message shows in the first line if an error occurs during the download.

The error code consists of the letter “E” and a number. The example above shows error “E24” displayed. For details, refer to the Error Message Table. ( “Handling Firmware Update Errors”)

#### ***Firmware Update Error***

If a firmware update error occurs, this means the update was cancelled during the update because the module selected for update was not on the SD card.

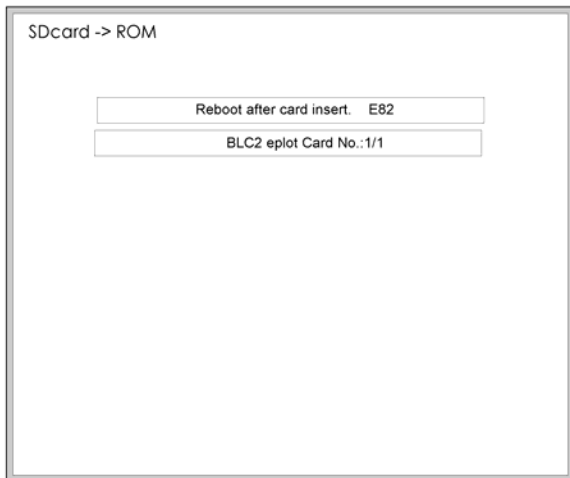

### ***Recovery after Power Loss***

If the ROM update is interrupted as a result of accidental loss of power while the firmware is updating, then the correct operation of the machine cannot be guaranteed after the machine is switched on again. If the ROM update does not complete successfully for any reason, then in order to ensure the correct operation of the machine, the ROM update error will continue to show until the ROM is updated successfully.

In this case, insert the card again and switch on the machine to continue the firmware download automatically from the card without the menu display.

### **5.6.4 UPDATING THE LCDC FOR THE OPERATION PANEL**

Do the following procedure to update the LCDC (LCD Control Board).

1. Turn the copier main switch off.
2. Insert the SD card into SD Card Slot 3.
3. Switch the copier main switch on.
4. The initial screen opens in English after about 45 seconds.
5. Touch "Ope Panel.xx".
6. "xx" differs depending on the destination.
7. Touch "UpDate(#)" or (Ⓜ) to start the update.
8. Downloading starts after about 9 seconds.
9. The operation panel goes off and the main power on key flashes in red at 0.5 s intervals when the data is downloading. The same key starts flashing in green at 1 s intervals when the update is finished.
10. Switch the copier main power switch off and remove the SD card. Then switch the copier on.


## 5.6.5 DOWNLOADING STAMP DATA

The stamp data should be downloaded from the controller firmware to the hard disks at the following times:

- After the hard disks have been replaced.

The print data contains the controller software. Execute SP 5853 to download the fixed stamp data required by the hard disks.

1. **Enter the SP mode.**
2. **Select SP5853 and then press “EXECUTE”. The following screen opens while the stamp data is downloading.**

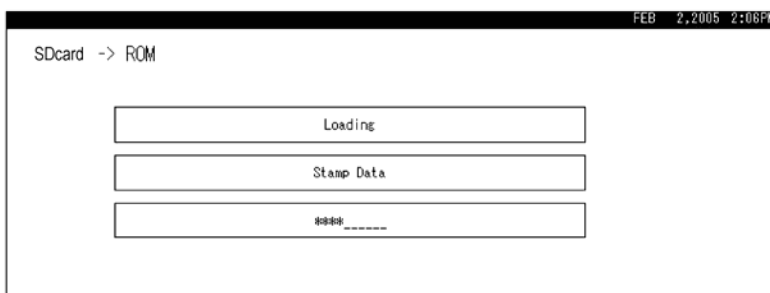

The download is finished when the message prompts you to close.



3. **Press the “Exit” button. Then turn the copier off and on again.**

## 5.6.6 NVRAM DATA UPLOAD/DOWNLOAD

### *Uploading Content of NVRAM to an SD card*

Do the following procedure to upload SP code settings from NVRAM to an SD card.

#### Note

- This data should always be uploaded to an SD card before the NVRAM is replaced.
  - Make sure that the write protection of an SD card is unlocked
1. **Do SP5990-001 (SMC Print) before you switch the machine off. You will need a record of the NVRAM settings if the upload fails.**
  2. **Switch the copier main power switch off.**
  3. **Insert the SD card into SD card slot 3. Then switch the copier on.**

4. Execute SP5824-001 (NVRAM Data Upload) and then press the “Execute” key
5. The following files are copied to an NVRAM folder on the SD card when the upload procedure is finished. The file is saved to the path and the following filename:

**NVRAM¥<serial number>.NV**

Here is an example with Serial Number “K5000017114”:

**NVRAM¥K5000017114.NV**

6. In order to prevent an error during the download, be sure to mark the SD card that holds the uploaded data with the number of the machine from which the data was uploaded.

 **Note**

- You can upload NVRAM data from more than one machine to the same SD card.

### ***Downloading an SD Card to NVRAM***

Do the following procedure to download SP data from an SD card to the NVRAM in the machine.

- The NVRAM data download may fail if the SD card with the NVRAM data is damaged, or if the connection between the controller and BICU is defective.
  - Do the download procedure again if the download fails.
  - Do the following procedure if the second attempt fails:
  - Enter the NVRAM data manually using the SMC print you created before uploading the NVRAM data.
1. **Switch the copier main power switch off.**
  2. **Insert the SD card with the NVRAM data into SD Card Slot 3.**
  3. **Switch the copier main power switch on.**
  4. **Do SP5825-001 (NVRAM Data Download) and press the “Execute” key.**

 **Note**

- The serial number of the file on the SD card must match the serial number of the machine for the NVRAM data to download successfully. The download fails if the serial numbers do not match.

This procedure does not download the following data to the NVRAM:

- Total Count
- C/O, P/O Count

## 5.6.7 ADDRESS BOOK UPLOAD/DOWNLOAD

### *Information List*

The following information is possible to be uploaded and downloaded.

| Information   |   |
|---|---|
| <ul style="list-style-type: none"><li>▪ Registration No.</li><li>▪ User Code</li><li>▪ E-mail</li><li>▪ Protection Code</li><li>▪ Fax Destination</li><li>▪ Fax Option</li><li>▪ Group Name</li><li>▪ Key Display</li></ul> | <ul style="list-style-type: none"><li>▪ Select Title</li><li>▪ Folder</li><li>▪ Local Authentication</li><li>▪ Folder Authentication</li><li>▪ Account ACL</li><li>▪ New Document Initial<br/>ACL</li><li>▪ LDAP Authentication</li></ul> |

### *Download*

1. Prepare a formatted SD card.
2. Make sure that the write-protection on the SD card is off.
3. Turn off the main power switch of the main machine.
4. Remove the slot cover 3 at the left rear side of the machine (🔧 x 1).
5. Install the SD card into the SD card slot 3 (for service use).
6. Turn on the main power switch.
7. Enter the SP mode.
8. Do SP5-846-051 (Backup All Addr Book).
9. Exit the SP mode, and then turn off the main power switch.
10. Remove the SD card from the SD card slot 3.
11. Install the slot cover 3.

#### ↓ Note

- If the capacity of SD card is not enough to store the local user information, an error message is displayed.
- Carefully handle the SD card, which contains user information. Do not take it back to your location.

### *Upload*

1. Turn off the main power switch of the main machine.
2. Remove the slot cover 3 at the left rear side of the machine (🔧 x 1).
3. Install the SD card, which has already been uploaded, into the SD card slot 3.
4. Turn on the main power switch.


5. Enter the SP mode.
6. Do SP5-846-052 (Restore All Addr Book).
7. Exit the SP mode, and then turn off the main power switch.
8. Remove the SD card form the SD card slot 3.
9. Install the slot cover 3.


**Note**

- The counter in the user code information is initialized after uploading.
- The information of an administrator and supervisor cannot be downloaded nor uploaded.
- If there is no data of address book information in the SD card, an error message is displayed.

## 5.6.8 INSTALLING ANOTHER LANGUAGE

Many languages are available. But you can only switch between two languages at a time. Do the following procedure to select the two languages you want. You can select both of the languages you want from the user interface on the operation panel.

1. Switch the copier main power switch off.
2. Insert the SD card with the language data into SD Card Slot 3.
3. Switch the copier main power switch on. The initial screen opens after about 45 seconds.
4. Touch “Language Data (2)” on the screen (or press ).

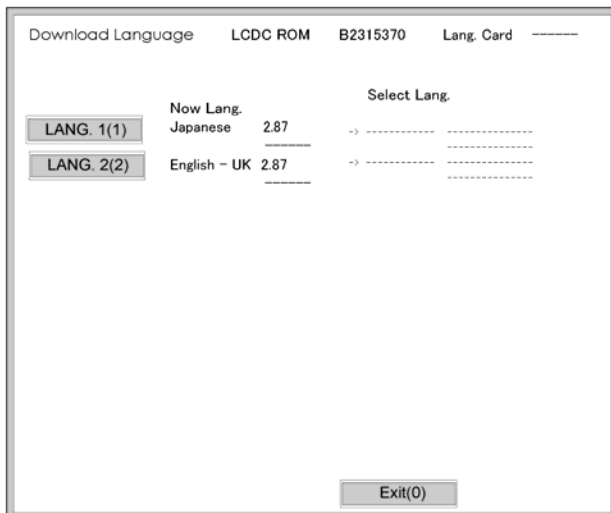


5. Touch “LANG. 1(1)” or “LANG. 2(2)”

| Key | What it does |
|-----|--------------|
|     |              |


|            |  |
|------------|--|
| LANG. 1(1) | Touch this button on the screen (or press ① on the 10-key pad) to open the next screen so you can select the 1st language. |
| LANG. 1(2) | Touch this button on the screen (or press ② on the 10-key pad) to open the next screen so you can select the 2nd language. |
| Exit(0)    | Touch this key on the screen (or press ⑩ on the 10-key pad) to quit the update procedure and return to normal screen.      |

6. Touch “LANG 1(1)” to select the 1st Language. Touch “LANG (2)” to select the 2nd Language.

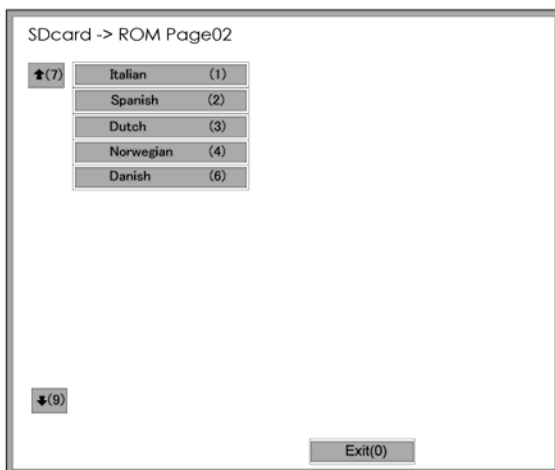

7. Touch the appropriate button on the screen (or press the number on the 10-key pad) to select a language as the 1st (or 2nd) language.  
If a language is already selected, it will show in reverse.  
Touching “Exit (0)” returns you to the previous screen.
8. If you do not see the language that you want to select, touch “↑(7)” or “↓(9)” on the screen (or press ⑦ or ⑨) to show more choices.  
The Download Screen opens after you select a language.  
The 1st or 2nd language selected for updating shows.
- The following show to right of the selection:
  - The first column shows the language currently selected
- The 2nd column shows the language selected to replace that language.  
The example below shows that the download will replace “Japanese” with “Italian” as the 1st language.



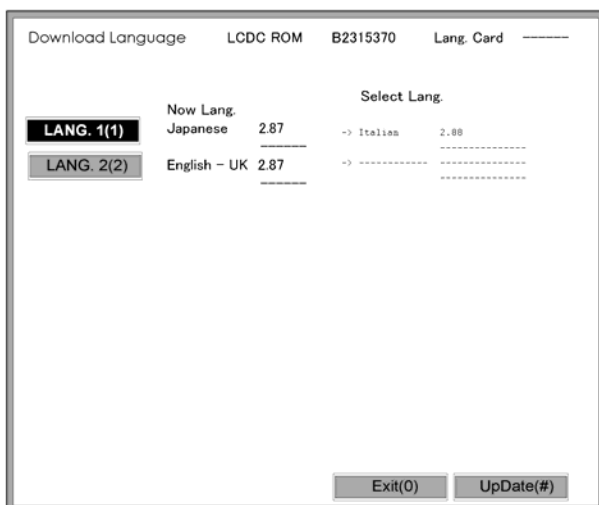

**9. Touch “Update(##)” on the screen (or press  $\text{\#}$ ) to start the download.**

Another screen with a progress bar does not show when the language is downloading.

The following occur at the time the language is downloading:

- The operation panel switches off.
- The LED on the power on key flashes rapidly.

**10. After the message of installation completed has shown on the LCD, switch the copier main power switch off. Then remove the SD card from the slot.**

**11. Switch the copier main power switch on to resume normal operation.**

### 5.6.9 HANDLING FIRMWARE UPDATE ERRORS

An error message shows in the first line if an error occurs during a download. The error code consists of the letter “E” and a number (“E20”, for example).

Error Message Table

| Code | Meaning  | Solution  |
|------|--|---|
| 20   | Cannot map logical address                     | Make sure the SD card is inserted correctly.  |
| 21   | Cannot access memory                           | HDD connection incorrect or replace hard disks.                                     |
| 22   | Cannot decompress compressed data              | Incorrect ROM data on the SD card, or data is corrupted.                            |
| 23   | Error occurred when ROM update program started | Controller program abnormal. If the second attempt fails, replace controller board. |
| 24   | SD card access error                           | Make sure SD card inserted correctly, or use another SD card.                       |

|    |   |  |
|----|---|--|
| 30 | No HDD available for stamp data download                    | HDD connection incorrect or replace hard disks.  |
| 31 | Data incorrect for continuous download                      | Insert the SD card with the remaining data required for the download, then re-start the procedure.                           |
| 32 | Data incorrect after download interrupted                   | Execute the recovery procedure for the intended module download, then repeat the installation procedure.                     |
| 33 | Incorrect SD card version                                   | Incorrect ROM data on the SD card, or data is corrupted.   |
| 34 | Module mismatch - Correct module is not on the SD card)     | SD update data is incorrect. Acquire the correct data (Japan, Overseas, OEM, etc.) then install again.                       |
| 35 | Module mismatch – Module on SD card is not for this machine | SD update data is incorrect. The data on the SD card is for another machine. Acquire correct update data then install again. |
| 36 | Cannot write module – Cause other than E34, E35             | SD update data is incorrect. The data on the SD card is for another machine. Acquire correct update data then install again. |
| 40 | Engine module download failed                               | Replace the update data for the module on the SD card and try again, or replace the BICU board.                              |
| 42 | Operation panel module download failed                      | Replace the update data for the module on the SD card and try again, or replace the LCDC.                                    |
| 43 | Stamp data module download failed                           | Replace the update data for the module on the SD card and try again, or replace the hard disks.                              |
| 44 | Controller module download failed                           | Replace the update data for the module on the SD card and try again, or replace controller board.                            |
| 50 | Electronic confirmation check                               | SD update data is incorrect. The data on the SD  |

|  |        |  |
|--|--------|--|
|  | failed | card is for another machine. Acquire correct update data then install again. |
|--|--------|--|

## 5.7 SD CARD APPLI MOVE

### 5.7.1 OVERVIEW

The service program “SD Card Appli Move” (SP5-873) lets you to copy application programs from one SD card to another SD card.

Slot 1 and Slot 2 are used to store application programs. But there are 3 possible applications (PostScript 3, DOS unit, PictBridge). You cannot run application programs from Slot 3. However you can move application programs from Slot 3 to either Slot 1 or Slot 2 with the following procedure (Slot 1 has the priority in the SD card Appli Move procedure if both Slot 1 and Slot 2 are used):


1. Choose a SD card with enough space.
2. Enter SP5873 “SD Card Appli Move”. Then move the application from the SD Card in Slot 3 to the Slot you want.

↓ Note

- Do steps 1-2 again if you want to move another application program.
3. Exit the SP mode

Use high caution when you do the SD Card Appli Move procedure:

1. **The data necessary for authentication is transferred with the application program from an SD card to another SD card. Authentication fails if you try to use the SD card after you copy the application program from one card to another card.**
2. **Do not use the SD card if it has been used by the user on the computer. Normal operation is not guaranteed when such an SD card is used.**

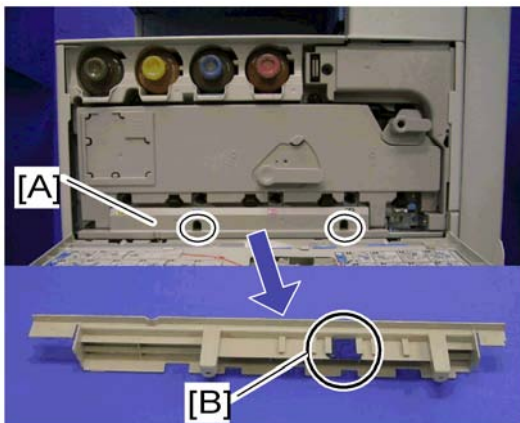

3. Remove the cover [A] (⚙️ x 2).
4. Keep the SD card in the place [B] after you copy the application program from

**one card to another card. This is done for the following reasons:**

1. The SD card can be the only proof that the user is licensed to use the application program.
  2. You may need to check the SD card and its data to solve a problem in the future.
- 5. You cannot copy PostScript data to another SD card. You have to copy other data to the same SD card that stores PostScript data.**

### **5.7.2 MOVE EXEC**

The menu “Move Exec” (SP5-873-001) lets you copy application programs from the original SD card to another SD card.

#### **★ Important**

- Do not turn ON the write protect switch of the system SD card or application SD card on the machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.

1. **Turn the main switch off.**
2. **Make sure that an SD card is in SD Card Slot 1. The application program is copied into this SD card.**
3. **Insert the SD card (having stored the application program) to SD Card Slot 3. The application program is copied from this SD card.**
4. **Turn the main switch on.**
5. **Start the SP mode.**
6. **Select SP5-873-001 “Move Exec.”**
7. **Follow the messages shown on the operation panel.**
8. **Turn the main switch off.**
9. **Remove the SD card from SD Card Slot 3.**
10. **Turn the main switch on.**
11. **Check that the application programs run normally.**

### **5.7.3 UNDO EXEC**

The menu “Undo Exec” (SP5-873-002) lets you copy back application programs from an SD card to the original SD card. You can use this program when, for example, you have mistakenly copied some programs by using Move Exec (SP5-873-001).

#### **★ Important**

- Do not turn ON the write protect switch of the system SD card or application SD card on the machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.

1. **Turn the main switch off.**

2. **Insert the original SD card in SD Card Slot 3. The application program is copied back into this card.**
3. **Insert the SD card (having stored the application program) to SD Card Slot 1. The application program is copied back from this SD card.**
4. **Turn the main switch on.**
5. **Start the SP mode.**
6. **Select SP5-873-002 “Undo Exec.”**
7. **Follow the messages shown on the operation panel.**
8. **Turn the main switch off.**
9. **Remove the SD card from SD Card Slot 3.**

 **Note**

- This step assumes that the application programs in the SD card are used by the machine.
10. **Turn the main switch on.**
  11. **Check that the application programs run normally.**


## 5.8 CONTROLLER SELF-DIAGNOSTICS

### 5.8.1 OVERVIEW

There are three types of self-diagnostics for the controller.

1. Power-on self-diagnostics: The machine automatically starts the self-diagnostics just after the power has been turned on.
2. Detailed self-diagnostics: The machine does the detailed self-diagnostics by using a loop-back connector (P/N G0219350)
3. SC detection: The machine automatically detects SC conditions at power-on or during operation.

The following shows the workflow of the power-on and detailed self-diagnostics.

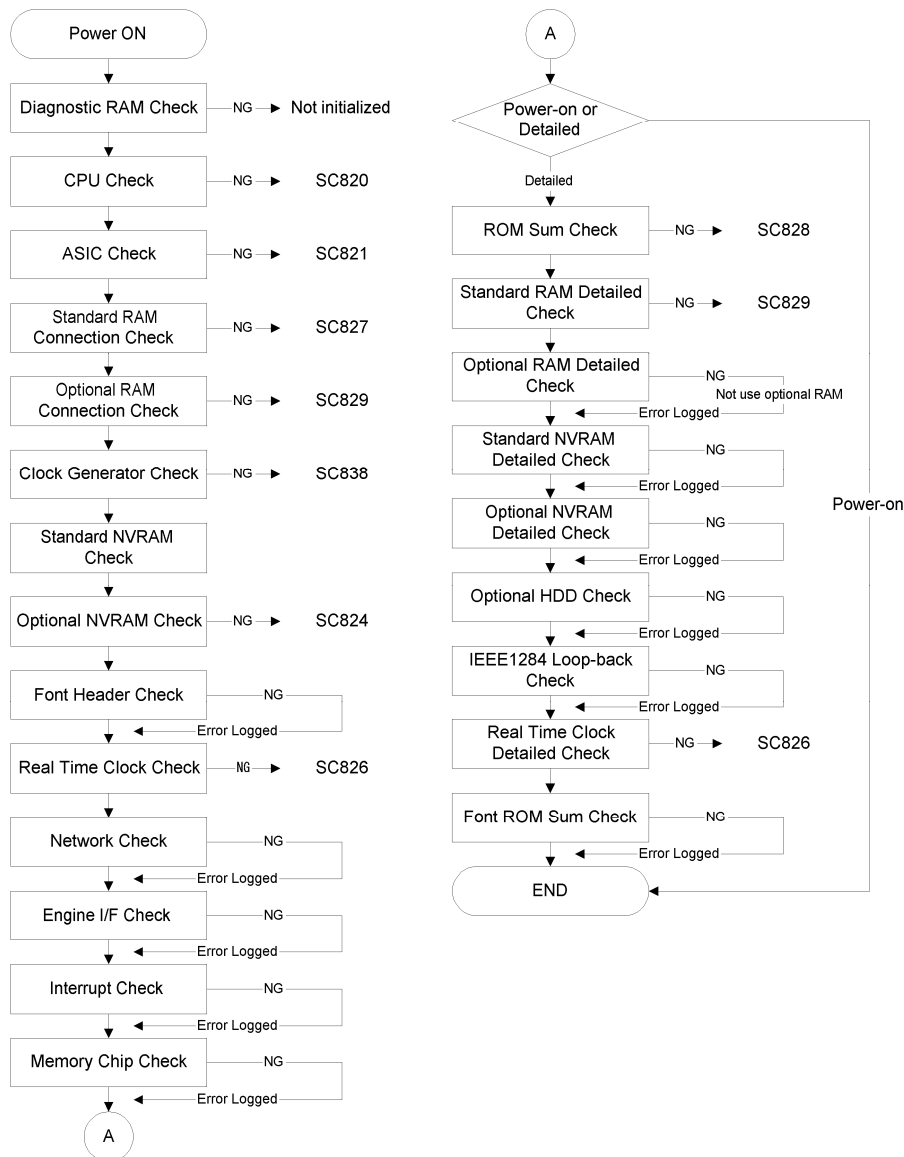

## 5.8.2 DETAILED SELF-DIAGNOSTICS



In addition to the self-diagnostic test initiated every time the main machine is powered on, you can set the machine in a more detailed diagnostic mode manually. This lets you test other components or conditions that are not tested during self-diagnosis after power on. The following device is required in order to put the machine in the detailed self-diagnosis mode:

| No.      | Name                        |
|----------|-----------------------------|
| G0219350 | Parallel Loopback Connector |



## Executing Detailed Self-Diagnosis

Do the following procedure to execute detailed self-diagnosis.

1. **Switch off the machine, and connect the parallel loopback device to the Centronics I/F port.**
2. **Hold down , press and hold down . Then switch on the machine while pressing both keys at the same time.**

You will see “Now Loading” on the touch-panel. Then you will see the results of the test.

The machine automatically starts the self-diagnostics and prints the diagnostic report after completing the test.

- Refer to the diagnostics report for the detected errors. You can check the errors detected during self-diagnostics with SP7-832-001 (Diag. Result).

## 5.9 USING THE DEBUG LOG

This machine provides a Save Debug Log feature that allows the Customer Engineer to save and retrieve error information for analysis.

Every time an error occurs, debug information is recorded in volatile memory. But this information is lost when the machine is switched off and on.

To capture this debug information, the Save Debug Log feature provides two main features:






- Switching on the debug feature so error information is saved directly to the HDD for later retrieval.
- Copying the error information from the HDD to an SD card.

Do the following procedure below to set up the machine so the error information is saved automatically to the HDD when a user has problems with the machine. Then ask the user to reproduce the problem.


### 5.9.1 SWITCHING ON AND SETTING UP SAVE DEBUG LOG

The debug information cannot be saved until the “Save Debug Log” function has been switched on and a target has been selected.

#### 1. Enter the SP mode and switch the Save Debug Log feature on.

- Press  then use the 10-key pad to enter .
- Press and hold down  for more than 3 seconds.
- Touch “Copy SP”.
- On the LCD panel, open SP5857.


#### 2. Under “5857 Save Debug Log”, touch “1 On/Off”.

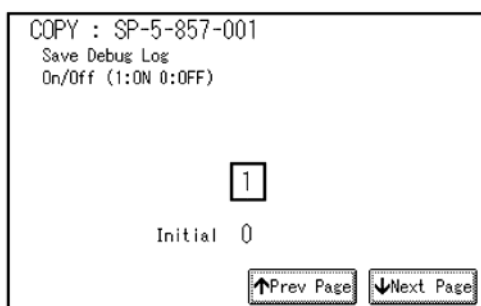


#### 3. On the control panel keypad, press “1”. Then press . This switches the Save Debug Log feature on.

##### Note

- The default setting is “0” (OFF). This feature must be switched on in order for the debug information to be saved.

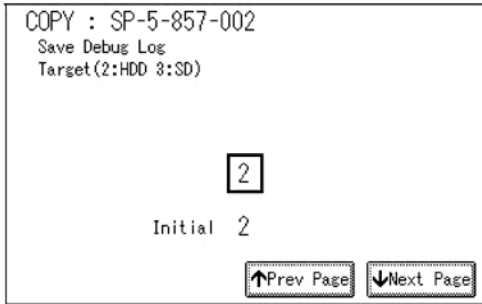

4. Select the target destination where the debug information will be saved. Under “5857 Save Debug Log”, touch “2 Target”, enter “2” with the operation panel key to select the hard disk as the target destination. Then press .

 Note

- Select “3 SD Card” to save the debug information directly to the SD card if it is inserted in the service slot.

5. Now touch “5858” and specify the events that you want to record in the debug log. SP5858 (Debug Save When) provides the following items for selection.


|   |                     |   |
|---|---------------------|---|
| 1 | Engine SC Error     | Saves data when an engine-related SC code is generated.                   |
| 2 | Controller SC Error | Saves debug data when a controller-related SC Code is generated.          |
| 3 | Any SC Error        | Saves data only for the SC code that you specify by entering code number. |
| 4 | Jam                 | Saves data for jams.  |

 Note

- More than one event can be selected.


**Example 1: To Select Items 1, 2, 4**

Touch the appropriate items(s). Press “ON” for each selection. This example shows “Engine SC Error” selected.

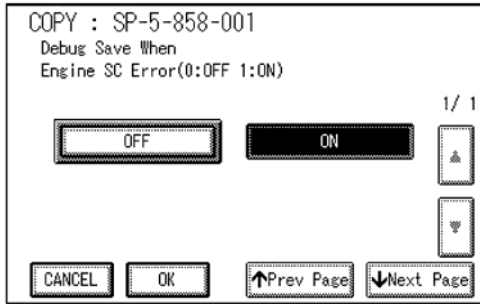

**Example 2: To Specify an SC Code**

Touch “3 Any SC Error”, enter the 3-digit SC code number with the control panel number keys. Then press #. This example shows an entry for SC670.

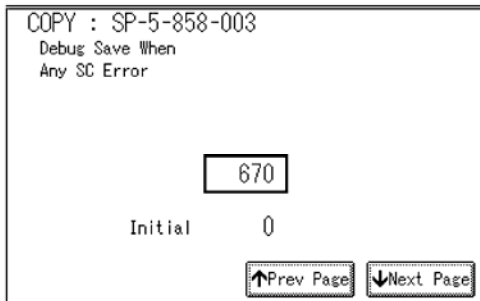

**Note**

- For details about SC code numbers, please refer to the SC tables in Section 4. “Troubleshooting”.


**6. Select one or more memory modules for reading and recording debug information. Touch “5859”.**

Under “5859” press the necessary key item for the module that you want to record. Enter the appropriate 4-digit number. Then press #.

**Note**

- Refer to the two tables below for the 4-digit numbers to enter for each key.

The example below shows “Key 1” with “2222” entered.

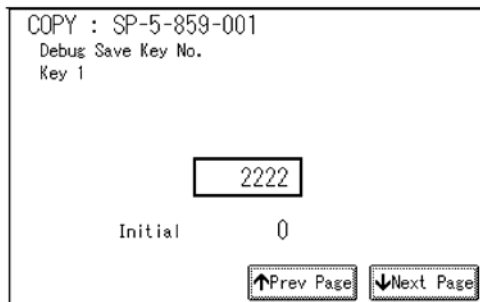

The following keys can be set with the corresponding numbers. (The initials in parentheses indicate the names of the modules.)

#### 4-Digit Entries for Keys 1 to 10

| Key No. | Copy        | Printer       | Scanner     | Web           |
|---------|-------------|---------------|-------------|---------------|
| 1       | 2222 (SCS)  |               |             |               |
| 2       | 2223 (SRM)  |               |             |               |
| 3       | 256 (IMH)   |               |             |               |
| 4       | 1000 (ECS)  |               |             |               |
| 5       | 1025 (MCS)  |               |             |               |
| 6       | 4848 (COPY) | 4400 (GPS)    | 5375 (Scan) | 5682 (NFA)    |
| 7       | 2224 (BICU) | 4500 (PDL)    | 5682 (NFA)  | 6600 (WebDB)  |
| 8       |             | 4600 (GPS-PM) | 3000 (NCS)  | 3300 (PTS)    |
| 9       |             | 2000 (NCS)    | 2000 (NCS)  | 6666 (WebSys) |
| 10      |             | 2224 (BICU)   |             | 2000 (NCS)    |

 Note

- The default settings for Keys 1 to 10 are all zero ("0").

#### Key to Acronyms

| Acronym | Meaning                         | Acronym | Meaning                    |
|---------|---------------------------------|---------|----------------------------|
| ECS     | Engine Control Service          | NFA     | Net File Application       |
| GPS     | GW Print Service                | PDL     | Printer Design Language    |
| GSP-PM  | GW Print Service – Print Module | PTS     | Print Server               |
| IMH     | Image Memory Handler            | SCS     | System Control Service     |
| MCS     | Memory Control Service          | SRM     | System Resource Management |
| NCS     | Network Control Service         | WebDB   | Web Document Box           |

|  |  |  |                   |
|--|--|--|-------------------|
|  |  |  | (Document Server) |
|--|--|--|-------------------|

The machine is now set to record the debugging information automatically on the HDD (the target selected with SP5857-002) for the events that you selected with SP5858 and the memory modules selected with SP5859.

Please keep the following important points in mind when you do this setting:

- Note that the number entries for Keys 1 to 5 are the same for the Copy, Printer, Scanner, and Web memory modules.
- The initial settings are all zero.
- These settings remain in effect until you change them. Be sure to check all the settings, especially the settings for Keys 6 to 10. To switch off a key setting, enter a zero for that key.
- You can select any number of keys from 1 to 10 (or all) by entering the corresponding 4-digit numbers from the table.
- You cannot mix settings for the groups (COPY, PRINTER, etc.) for 006 to 010. For example, if you want to create a PRINTER debug log you must select the settings from the 9 available selections for the “PRINTER” column only.
- One area of the disk is reserved to store the debug log. The size of this area is limited to 4 MB.

### 5.9.2 RETRIEVING THE DEBUG LOG FROM THE HDD

Retrieve the debug log by copying it from the hard disk to an SD card.

1. **Insert the SD card into the service slot of the copier.**
2. **Enter the SP mode and execute SP5857-009 (Copy HDD to SD Card (Latest 4 MB)) to write the debugging data to the SD card.**
3. **Use a card reader to copy the file and send it for analysis to your local Ricoh representative by email. You can also send the SD card by regular mail if you want.**


### 5.9.3 RECORDING ERRORS MANUALLY

SC errors and jams only are recorded to the debug log automatically. Please instruct the user to do the following immediately after occurrence to save the debug data for any other errors that occur while the customer engineer is not on site. Such problems also include a controller or panel freeze.



- You must previously switch on the Save Debug Feature (SP5857-001) and select the hard disk as the save destination (SP5857-002) if you want to use this feature.

1. **Press  (Clear Modes), on the operation panel when the error occurs.**

2. On the control panel, enter “01”. Then hold down  for at least 3 seconds until the machine beeps and then release it. This saves the debug log to the hard disk for later retrieval with an SD card by the service representatives.

3. Switch the machine off and on to resume operation.

The debug information for the error is saved on the hard disk. This lets the service representative retrieve it on their next visit by copying it from the HDD to an SD card.

## 5.9.4 NEW DEBUG LOG CODES

### ***SP5857-015 Copy SD Card-to-SD Card: Any Desired Key***

This SP copies the log on an SD card (the file that contains the information written directly from shared memory) to a log specified by key number. The copy operation is executed in the log directory of the SD card inserted in the same slot. (This function does not copy from one slot to another.) Each SD card can hold up to 4 MB of file data. Unique file names are created for the data during the copy operation to prevent overwriting files of the same name. This means that log data from more than one machine can be copied onto the same SC card. This command does not execute if there is no log on the HDD for the name of the specified key.

### ***SP5857-016 Create a File on HDD to Store a Log***

This SP creates a 32 MB file to store a log on the HDD. However, this is not a completely empty file. The created file will hold the number “2225” as the SCS key number and other non-volatile information. Even if this SP is not executed, a file is created on the HDD when the first log is stored on the HDD (it takes some time to complete this operation). This creates the possibility that the machine may be switched off and on before the log can be created completely. If you execute this SP to create the log file beforehand, this will greatly reduce the amount of time required to acquire the log information and save onto the HDD. With the file already created on the HDD for the log file, the data only needs to be recorded. A new log file does not need to be created. To create a new log file, do SP5857-011 to delete the debug log data from the HDD. Then do SP5857-016.

### ***SP5857-017 Create a File on SD Card to Store a Log***

This SP creates a 4 MB file to store a log on an SD card. However, this is not a completely empty file. The created file will hold the number “2225” as the SCS key number and other non-volatile information. Even if this SP is not executed, a file is created on the SD card when the first log is stored on the SD card (it takes some time to complete this operation). This creates the possibility that the machine may be switched off and on before the log can be created completely. If you execute this SP to create the log file beforehand, this will greatly reduce the amount of time required to acquire the log information and save onto the

SD card. With the file already created on the SD card for the log file, the data only needs to be recorded; a new log file does not require creation. To create a new log file, do SP5857-012 to delete the debug log data from the SD card. Then do SP5857-017.



## 5.10 DIP SWITCHES

### 5.10.1 CONTROLLER BOARD

| DIP SW No. | OFF  | ON                   |
|------------|--|----------------------|
| 1          | Boot-up from Flash Memory                            | Boot-up from SD card |
| 2 to 8     | Factory Use Only: Do not change the switch settings. |                      |

### 5.10.2 BICU BOARD

| DIP SW No. | OFF  | ON |
|------------|--|----|
| 1 and 2    | Factory Use Only: Do not change the switch settings. |    |




# **DETAILED DESCRIPTIONS**



## 6. DETAILED SECTION DESCRIPTIONS

### 6.1 OVERVIEW

#### 6.1.1 COMPONENT LAYOUT

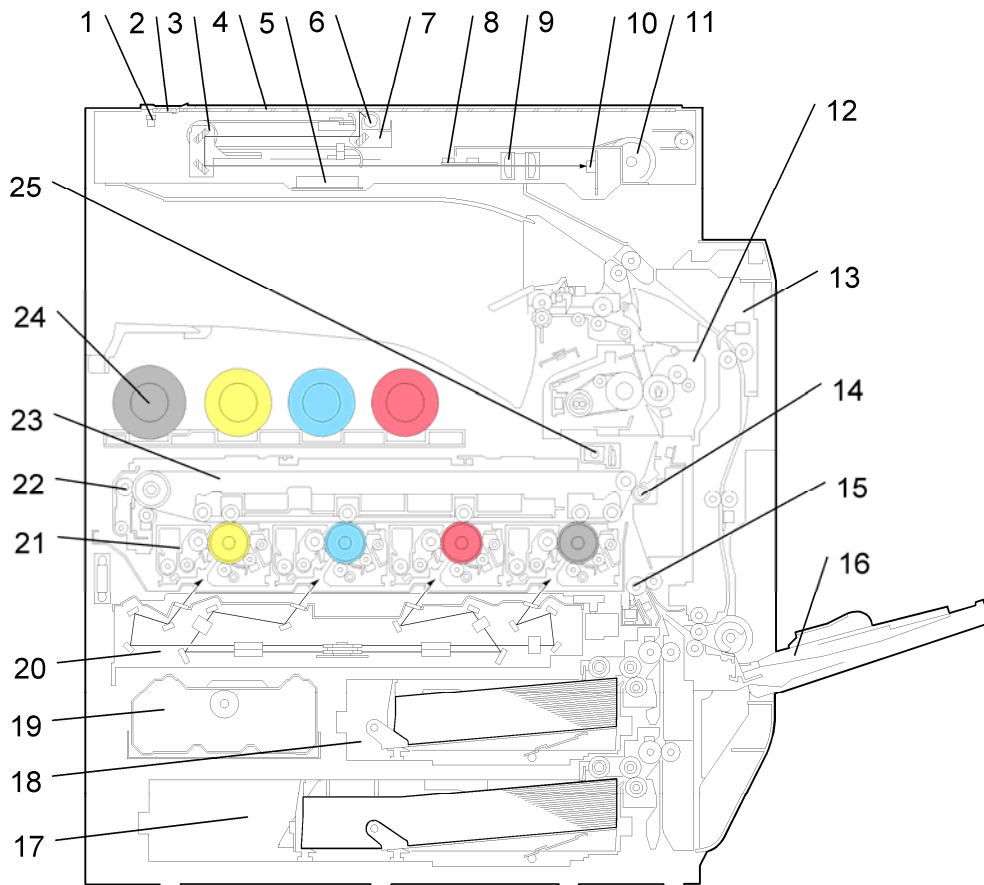


|                               |                                       |
|-------------------------------|---------------------------------------|
| 1. Scanner HP sensor          | 14. Paper transfer roller             |
| 2. ADF exposure glass         | 15. Registration roller               |
| 3. 2nd scanner (2nd carriage) | 16. By-pass feed table                |
| 4. Exposure glass             | 17. Tray 2                            |
| 5. Original width sensor      | 18. Tray 1                            |
| 6. Scanner lamp               | 19. Toner collection bottle           |
| 7. 1st scanner (1st carriage) | 20. Laser optics housing unit         |
| 8. Original length sensor     | 21. PCU (4 colors)                    |
| 9. Lens block                 | 22. Image transfer belt cleaning unit |

|                             |                              |
|-----------------------------|------------------------------|
| 10. Sensor board unit (SBU) | 23. Image transfer belt unit |
| 11. Scanner motor           | 24. Toner bottle (4 colors)  |
| 12. Fusing unit             | 25. ID sensor                |
| 13. Duplex unit             |                              |

## 6.1.2 PAPER PATH


This diagram shows the copier with the 1000-sheet booklet finisher.

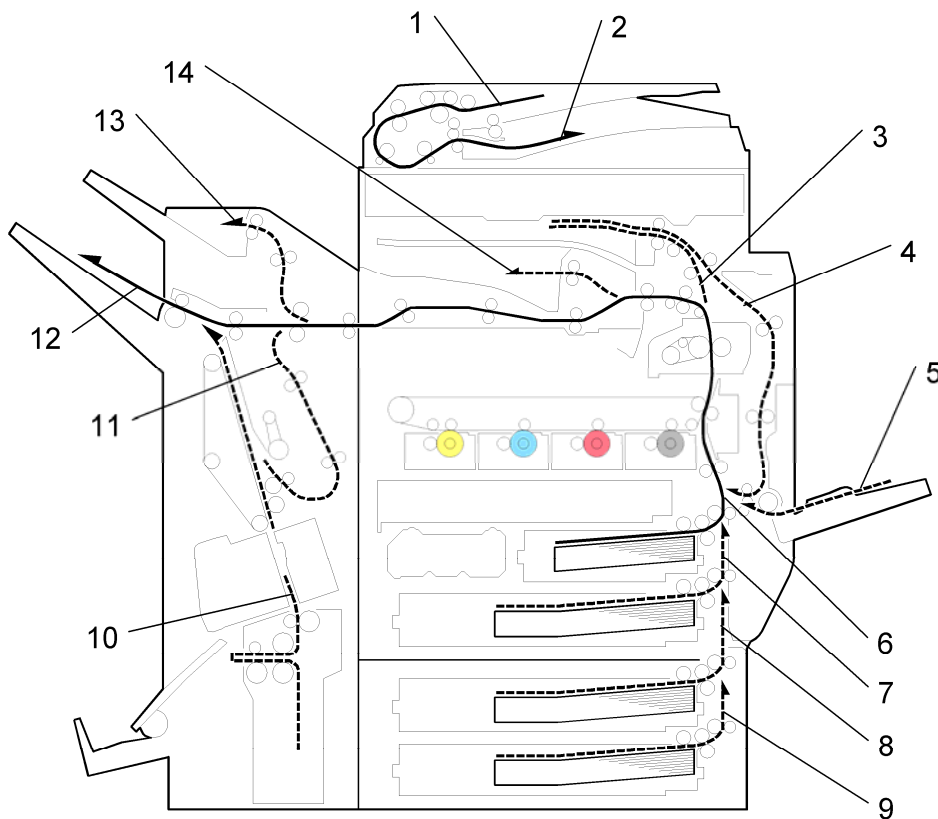

|                       |   |
|-----------------------|---|
| 1. Original tray      | 8. Tray 3: Optional paper feed unit/LCT |
| 2. Original exit tray | 9. Tray 4: Optional paper feed unit     |
| 3. Duplex inverter    | 10. Finisher stapler (Optional)         |
| 4. Duplex feed        | 11. Finisher punch (Optional)           |
| 5. By-pass tray feed  | 12. Finisher lower tray (Optional)      |
| 6. Tray 1 feed        | 13. Finisher proof tray (Optional)      |
| 7. Tray 2 feed        | 14. Inner Tray                          |

The 1000-sheet finisher and 1000-sheet booklet finisher require the bridge unit (B227) and one from the two-tray paper feed unit (B800) or the LCT (B801).

### 6.1.3 DRIVE LAYOUT

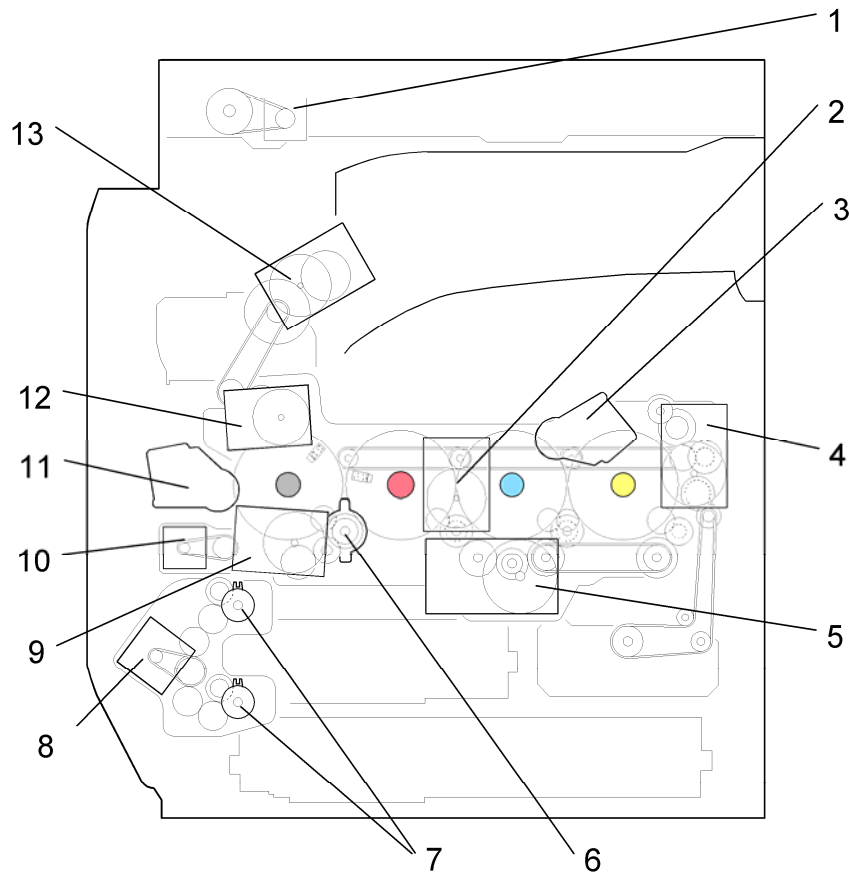


|   |  |
|---|--|
| 1. Scanner motor:                           | Drives the scanner unit.   |
| 2. Drum drive motor-CMY:                    | Drives the drums for magenta, cyan, and yellow.  |
| 3. ITB (Image Transfer Belt) contact motor: | Moves the ITB into contact and away from the color PCUs.   |
| 4. Toner transport motor:                   | Drives the toner attraction pumps and the toner collection coils from the PCUs, from the transfer belt unit, and inside the toner collection bottle. Also rotates the toner bottles. |
| 5. Development drive motor-CMY:             | Drives the color development units (magenta/cyan/yellow).  |
| 6. Development clutch-K                     | Turns on/off the drive power to the development unit-K.  |

Detailed Descriptions

|                                    |  |
|------------------------------------|--|
| 7. Paper feed clutch               | Switches the drive power between the tray 1 and tray 2.                  |
| 8. Paper feed motor:               | Drives the paper feed mechanisms (tray 1/tray 2/by-pass tray).           |
| 9. Drum/Development drive motor-K: | Drives the black drum and development unit.                              |
| 10. Registration motor:            | Drives the registration roller.  |
| 11. Paper transfer contact motor   | Moves the paper transfer roller in contact with the image transfer belt. |
| 12. ITB drive motor:               | Drives the image transfer belt unit.                                     |
| 13. Fusing/paper exit motor:       | Drives the fusing unit and paper exit section.                           |

## 6.1.4 BOARD STRUCTURE

### Overview

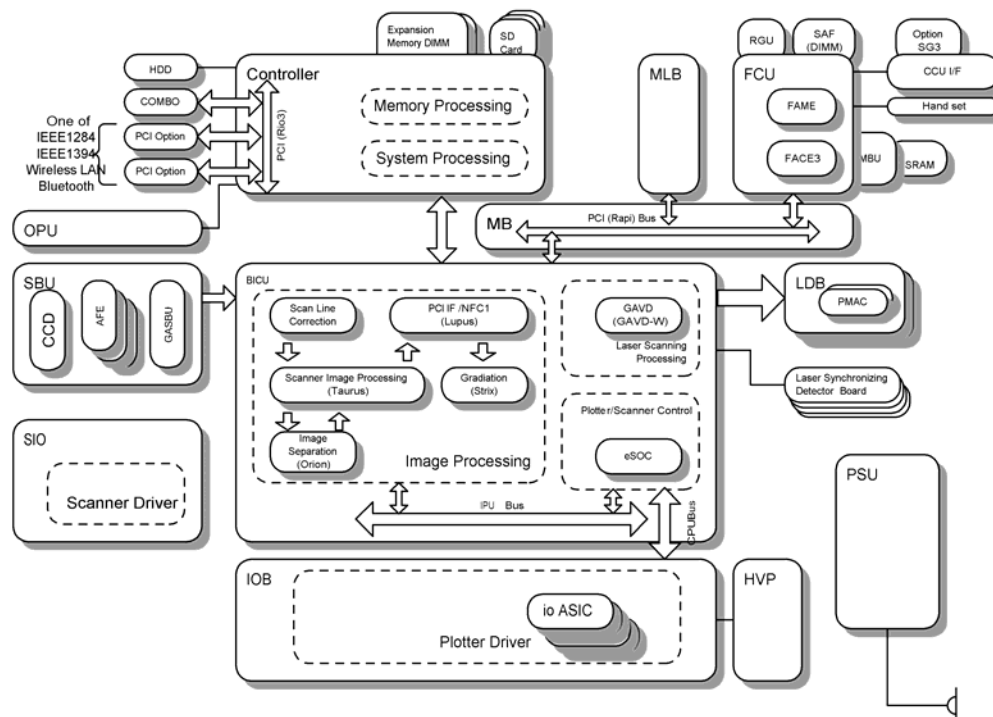

#### Note

- In the diagram, 'MLB' is the File Format Converter

### Descriptions

#### BICU (Base Engine Control Unit):

The BICU controls all the mechanical components. The BICU has six CPUs. The CPUs



control the following functions:

- Engine sequence
- Engine operation
- Polygon motor control
- Image processing

**Controller:**

The controller connects to the BICU through a PCI bus. The controller handles the following functions:

- Machine-to-host interface
- Operation panel interface
- Network interface
- Interfacing and control of the optional IEEE1284, Bluetooth, IEEE1394, IEEE802.11b (wireless LAN), USB Host, HDD, and DRAM DIMM

**LD Drive Board:**

This is the laser diode drive circuit board.

**SBU:**

The Sensor Board Unit has a CCD (charge-coupled device) and an analog-to-digital conversion circuit.

**Operation Panel Board:**

This controls the display panel, the LED and the keypad.

**Scanner I/O Board (SIO):**

The scanner I/O board is a circuit board that transmits control signals, image data, and electricity.

**I/O Board (IOB):**

Contains drivers for motors and other mechanical components.


**Motherboard:**

Connects the FCU board to the BICU. This board is supplied with the optional fax unit.

**FCU:**

The FCU (fax controller unit) controls the fax programs and communicates with the controller to share copier resources.

## 6.1.5 PRINTING PROCESS

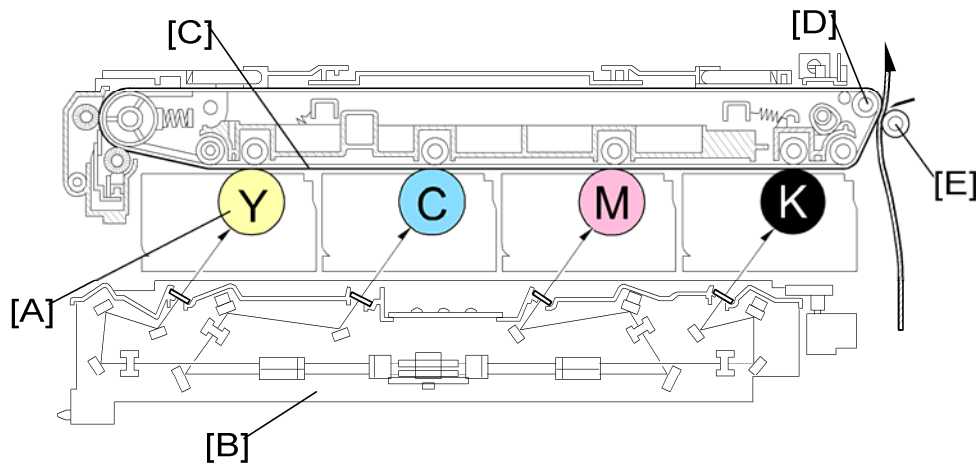


This machine uses four PCUs, and four laser beams for color printing. Each PCU consists of the drum unit and the development unit. Each drum unit has a drum, charge roller, cleaning brush, and blade. From the left, the PCU stations are yellow, cyan, magenta, and black.

The drum [A] is charged with a negative voltage, and is exposed by the laser from the laser optics housing unit [B]. The laser neutralizes the negative charge on the surface of the drum. So, the white parts of the image correspond to areas of the drum that still have a high negative charge. The toner has a negative charge, and it moves to the areas of the drum that have the smallest negative charge (i.e., the areas written by the laser beam).

The image on each drum is moved to the transfer belt by the positive bias that is applied to the transfer belt [C]. All four toners are put on the belt at the same time. Then, the completed four-color image is moved to the paper by a negative charge applied to the ITB drive roller [D] (the transfer roller [E] is an idle roller).

1. **Drum charge:** The charge roller gives the drum a negative charge
2. **Laser exposure:** The laser beam from the laser diode (LD) goes through the lens and mirrors and reaches the drum. The machine turns the laser beam on and off to make a latent image on the drum.
3. **Development:** The development roller carries negatively charged toner to the latent image on the drum surface. This machine uses four independent development units (one for each color).
4. **Transfer:**
  - Image transfer:** Bias rollers opposite the OPC drums transfer toner from the drums to the transfer belt. Four toner images are super-imposed onto the belt.
  - Paper transfer:** Then, the ITB drive roller pushes the toner from the transfer belt to the paper (the transfer roller is an idle roller).

5. **Cleaning for OPC drum:** The cleaning brush and blade remove remaining toner on the drum surface after image transfer to the paper.
6. **Quenching for OPC drum:** Quenching is done by illuminating the whole area of the drum with the laser at the end of every job.
7. **Cleaning and quenching for transfer belt:** The cleaning brush and blade clean the belt surface. The grounding roller inside the transfer belt unit removes the remaining charge on the belt.

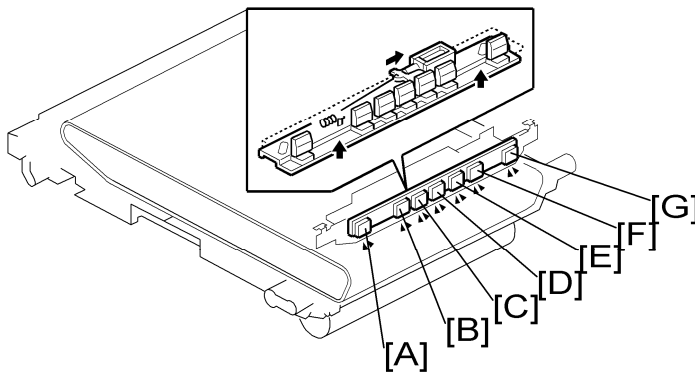

8. **ID sensors:** The ID sensors detect the density of ID sensor patterns on the transfer belt.

The ID sensor board contains three ID sensors for the line position adjustment (front, center, and rear) and four ID sensors for the process control. On this board, there are 7 ID sensors in total, as follows.

- [A]: Line position adjustment (front)
- [B] Process control (K)
- [C]: Process control (C)
- [D]: Line position adjustment (centre)
- [E] Process control (M)
- [F]: Process control (Y)
- [G]: Line position adjustment (rear)

The ID sensor output is used for the following:

- Process control and for automatic line position
- Skew correction
- Color registration adjustments for the latent image.

## 6.2 PROCESS CONTROL

### 6.2.1 OVERVIEW

This machine has the following two forms of process control:

- Potential control
- Toner supply control

The following machine components are used for process control:

- Four ID (image density) sensors (black, magenta, cyan and yellow).
- TD sensor.

Normally, process control is not disabled. If process control is disabled, fixed supply mode is used for toner supply, and the VREF stored in SP 3222 is used.

### 6.2.2 POTENTIAL CONTROL

#### **Overview**

The machine determines  $V_D$  using the ID sensor output, and then determines  $V_B$  and  $V_L$ .

- $V_D$ : Drum potential without exposure – to adjust this, the machine adjusts the charge roller voltage.
- $V_B$ : Development bias
- $V_L$ : Drum potential at the strongest exposure – to adjust this, the machine adjusts the laser power

At the same time, the machine also determines VREF: Reference TD sensor output, used for toner supply control

If potential control is disabled (SP3-041-001 is set to "0"),  $V_D$  and  $V_B$  are fixed by the following SP mode settings.

- SP2-005 for  $V_D$ , SP2-229 for  $V_B$

If LD power control is disabled (SP3-041-002 is set to "0"), the LD power is fixed by the following SP mode setting.

- SP2-221 for  $V_L$

#### **Process Control Self Check**

This machine uses the process control self check method to do the potential control. The machine uses seven types of process control self check. These are categorized according to their execution timing.

The counter (SP3-510) is reset if a self-check is done (except for a forced self-check).

$\Delta T$  = Temperature change between the temperature of the previous process control and the current temperature

$\Delta RH = RH$  (Relative Humidity) change between the relative humidity of the previous process control and the current relative humidity

$\Delta AH = AH$  (Absolute Humidity) change between the absolute humidity of the previous process control and the current absolute humidity

1. Manual execution (forced): This is done when SP3-011-1 is used.

2. Initial

This starts automatically when the power is turned on, or, when the machine recovers from energy saver mode.

This is done automatically if one of these conditions occurs.

- a)  $\Delta T$  is greater than or equal to Temperature Threshold (SP3-522-003: 10°C)
- b)  $\Delta RH$  is greater than or equal to Relative Humidity Threshold (SP3-522-004: 50%RH)
- c)  $\Delta AH$  is greater than or equal to Absolute Humidity Threshold (SP3-522-005: 6 g/m<sup>3</sup>)
- d) If the following conditions both occur.

BW Counter (SP3-510-003) is greater than or equal to Execution Interval (SP3-511-005)

OR

FC Counter (SP3-510-004) is greater than or equal to Execution Interval (SP3-511-006)

Non-use Time is greater than or equal to SP3522-002 (default: 6 hours)

3. Interval: Job End

This starts automatically at the end of a print job if the following condition occurs:

BW Counter (SP3-510-001) is greater than or equal to Execution Interval (SP3-515-001)

OR

FC Counter (SP3-510-002) is greater than or equal to Execution Interval (SP3-515-002)

4. Interval: During a Job

This interrupts printing and then starts automatically if the following condition occurs:

BW Counter (SP3-510-001) is greater than or equal to Execution Interval (SP3-515-003)

OR

FC Counter (SP3-510-002) is greater than or equal to Execution Interval (SP3-515-004)

After process control is completed, the machine continues to make prints.

5. In standby mode

This is done automatically if one of these conditions occurs.

- a)  $\Delta T$  is greater than or equal to Temperature Threshold (SP3-531-002: 10°C)
- b)  $\Delta RH$  is greater than or equal to Relative Humidity Threshold (SP3-531-003: 50%RH)
- c)  $\Delta AH$  is greater than or equal to Absolute Humidity Threshold (SP3-531-004: 6 g/m<sup>3</sup>)
- d) Non-use Time is greater than or equal to SP3-531-001 (default: 6 hours)

It is not done if the machine is in energy saver mode.

The default non-use time is 6 hours (see condition 4 below), so normally it will only be done if the user disables energy saver mode.

6. After Toner End Recovery


This starts after recovery from a toner end condition.

7. After Developer Initialization

Developer initialization occurs automatically in the following conditions:

- After a new development unit has been installed
- After new developer is installed and 3902-005 to 008 is done, depending on the color (see 'Maintenance' for details).

### 6.2.3 PROCESS CONTROL SELF CHECK PROCEDURE

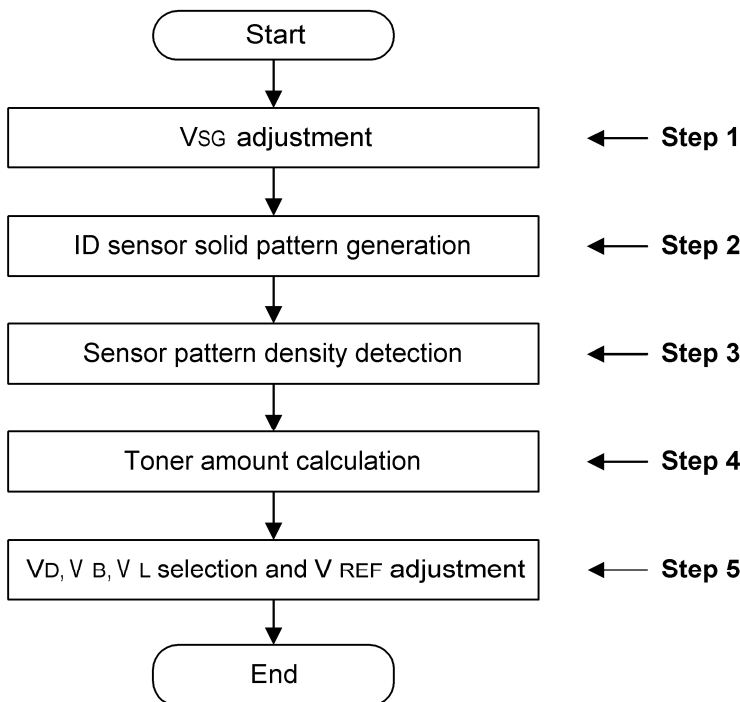

#### Step 1: VSG Adjustment

This machine uses four ID sensors (direct reflection type) for the process control. Each

sensor detects a pattern for each color (see the 'Printing Process' section).

The ID sensor checks the bare transfer belt's reflectivity. Then the machine calibrates the ID sensor until its output when reading the bare transfer belt (known as VSG) is as follows.

- $VSG = 4.0 \pm 0.5$  Volts

This calibration compensates for the transfer belt's condition and the ID sensor condition.

For example, dirt on the surface of the belt or ID sensor.

VSG adjustment is always done during initial process control. But, at other times, it is only done if the VSG adjustment counter (SP3-510-007) is more than the value set with SP3-511-007 (default: 500) during a job or at job end.

SC400 is displayed if VSG is out of adjustment range sequentially 3 times.

SP3-321: Forced VSG Adjustment for each sensor

SP 3-325: Shows the results of the VSG adjustment (automatic or forced VSG adjustment)  
- 7 digits (Front, Bk, C, Center, M, Y, Rear)

### Step 2: ID Sensor Solid Pattern Generation



First, the machine agitates the developer for between 15 and 30 seconds until the fluctuation in TD sensor output becomes less than 0.3V.

Second, the machine makes the grade patterns (see the diagram). This 10-grade pattern is made in black, yellow, cyan, and magenta (40 squares in total).

- The machine first makes the first five grades for each color (the first 20 squares), and then the second five grades for each color (the remaining 20 squares).

The patterns are made by changing the development bias and charge roller voltage. The difference between development bias and charge roller voltage is always the same. But, the development potential changes for each pattern.

- The development potential is the difference between the development bias and the charge remaining on the drum where the laser writes a black area. The development bias changes for each grade, and the charge on black areas of the image is always the same, so the development potential also changes.

### Step 3: Sensor Pattern Detection

The ID sensor measures the light reflected from each grade of the pattern, to detect the densities of each grade. This data goes to memory.

#### **Step 4: Toner Amount Calculation**

The machine calculates the amount of toner on the transfer belt that is required to make each of the 10 grades of the sensor pattern. To do this, the machine uses the output values of the ID sensor from each grade of the pattern.

The amounts of toner are expressed as M/A (mass per unit area, mg/cm<sup>2</sup>)

#### **Step 5: V<sub>D</sub>, V<sub>B</sub>, V<sub>L</sub> Selection and V<sub>TREF</sub> Adjustment**

The machine determines the relationship between the amount of toner on the transfer belt and the development bias for each of the 10 grades.

From this, the machine determines the best V<sub>D</sub> to get the target M/A for each color. Then, based on this V<sub>D</sub>, the machine determines the best V<sub>B</sub> and V<sub>L</sub>. This process ensures that enough toner is deposited to make black pixels.

The machine also adjusts V<sub>TREF</sub> (toner density target) at the same time so that the development gamma used by the machine fall within the target development gamma range stored in the machine's software. If it does not fall within this range, the amount of toner deposited on the latent image will be too high or too low.

### **6.2.4 TONER DENSITY ADJUSTMENT MODE**

If the toner density becomes too high or too low because of an incorrect development gamma, this is corrected by process control (see the previous section). But sometimes, it takes many copies before the toner density comes to the correct value.

Toner density adjustment mode can be used to bring the toner concentration to the correct level much more quickly, if users complain about the toner density.

SP 3-043 controls when the toner density adjustment mode is done.

To do the toner density adjustment mode manually, execute SP 3-011-2.

It is also done automatically before ACC, if SP3-041-4 is set to "2: TC Control" (this is the default setting).

During this procedure, the machine generates ID sensor patterns and detects the current development gamma. The gamma must be within  $\pm 0.2$  of the target development gamma.

If the current gamma is too high (above the target by 0.2 or more: 0.2 limit is set with SP3-239-009), the machine consumes toner in the development unit until the development gamma is within the correct range. To consume toner, the machine generates solid patterns.

If the current gamma is too low (below the target by more than 0.2: 0.2 limit is set with SP3-239-012), the machine supplies toner to the development unit until the development gamma is within the correct range.



## 6.2.5 TONER SUPPLY CONTROL

### Overview

Toner supply control determines how long the toner supply clutch turns on. This determines the amount of toner supplied. This is done before every development for each color.

Toner supply control uses the following factors:

- Density of the toner in the developer (detected by the TD sensor) -  $V_{REF}$ ,  $V_T$
- Pixel count: Determines how much toner was used for the page

The image density is kept constant by adjusting the density of toner in the development unit. At the same time, it accommodates changes in the development conditions through the potential control mechanism. Environmental changes and the number of prints made are also used in the calculation.

The amount of toner supplied is determined by the 'on' time of the toner supply clutch. The total 'on' time for each toner supply clutch is stored in the memory chip for the relevant

⇒ toner cartridge. The machine supplies the calculated amount of toner for each color.

The machine automatically changes the toner supply mode to fixed supply mode if the TD sensor is broken. However, the supply amount will be 70% of the normal fixed value to prevent too high image density.

The machine automatically changes the toner supply mode to PID control mode (Fixed  $V_{tref}$ ) if the ID sensors are broken.

### Toner Supply Control Modes

This machine has three toner supply control modes. You can select them with SP3-044-1 to -4.

#### 1. Fixed supply mode

This mode is used when the TD sensor becomes faulty. You can adjust the amount of toner supply with SP3-401-1 to -4 if the image density is incorrect (the default setting is 5%).


#### 2. PID (Proportional Integral Differential) control mode (Fixed $V_{TREF}$ )

This mode is used when the ID sensor becomes faulty. Only the TD sensor is used to control toner supply. The machine uses the  $V_{TREF}$  that is stored in SP3-222-1 to -4.

#### 3. Fuzzy control mode

This is the default toner supply control mode. The TD sensor, ID sensor, and pixel count are used in this mode.  $V_{TREF}$  is adjusted by process control.

## 6.2.6 TONER NEAR END/TONER END DETECTION

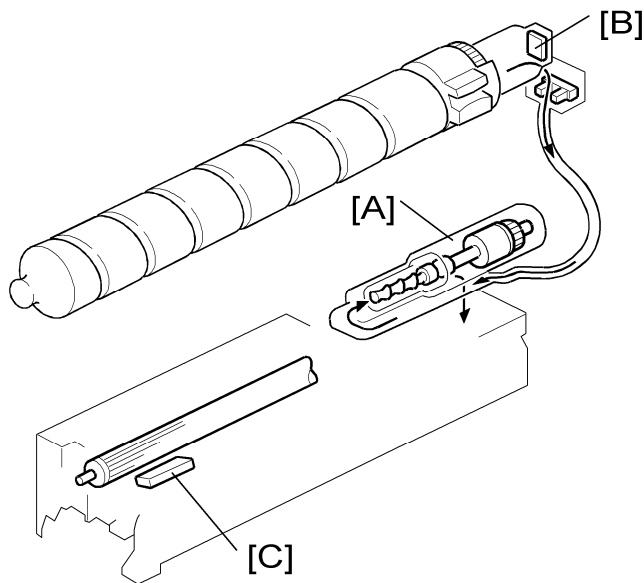

### Toner Near End

The controller considers the following information to determine the toner near end status:

- Operation time counter of the toner attraction pump [A]
- Pixel counter

These values are both stored in the memory chip [B] on the toner cartridge, and copied from the memory chip to the NVRAM on the BICU.

If either value indicates that the amount of remaining toner is 50g or less, the machine enters the near-end condition.

### Toner End

To determine the toner end status, the machine uses the TD sensor [C] in the development unit. The machine must first be in a toner near-end condition, or toner end cannot be detected.

Toner end is detected if both the following conditions occurs:

- $V_T - V_{TREF}$  greater than or equal to "0.5" (SP3-101-021)
- $SUM(V_T - V_{TREF})$  greater than or equal to "10" (SP3-101-026)

The machine cannot print until the toner cartridge is replaced after it detects toner end for black. The machine can print in black and white only if cyan, magenta, or yellow are in a toner end condition during standby mode. At this time the machine cannot do color print jobs.

#### ↓ Note

- If the yellow, cyan, or magenta toner ends during a color-printing job, the job is suspended until toner is supplied. If new color toner is not installed, the user can

print black-and-white jobs only.

### Toner End Recovery

The machine assumes that the toner cartridge has been replaced if either of the following occurs when the near-end or end status exists:

- The front door is opened and closed.
- The main switch is turned off and on.

Then the machine starts to supply toner to the development unit. After supplying toner, the machine clears the toner near-end or end status if the following condition is detected:

- Toner end sensor detects that toner is supplied.

The machine tries to supply toner for a maximum of 5 times (SP 3-102).

## 6.2.7 DEVELOPER INITIALIZATION

### When is it done?

When you install new developer, you must set the following SPs to "1" before you turn the power off. Then, the machine will reset the PM counters automatically. Developer initialization will also be done automatically.

- Black: SP3902-005
- Yellow: SP3902-006
- Cyan: SP3902-007
- Magenta: SP3902-008

When a new development unit or PCU is installed, the machine detects the new unit automatically and initializes the developer.

### How is it done?

The procedure is as follows.

1. The machine agitates the developer for 30 seconds.
2. The machine adjusts  $V_{CNT}$  (control voltage for TD sensor) so that  $V_T$  (TD sensor output) becomes within  $2.7 \pm 0.2$ .
3. The machine keeps this as  $V_{TREF}$  if it is successful. SC372 to SC375 is displayed if it fails sequentially 3 times.


The result of developer initialization can be checked with SP3-014.



During developer initialization, the machine forcibly supplies toner because there is no toner inside the toner transport tube at installation. Then the machine does the process control self check.

## 6.3 SCANNING

### 6.3.1 OVERVIEW

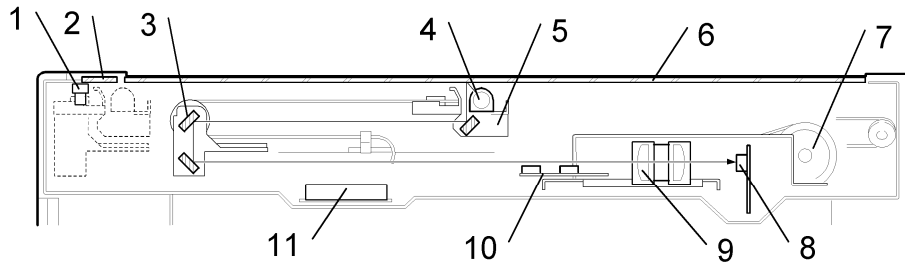


|                               |                            |
|-------------------------------|----------------------------|
| 1. Scanner HP sensor          | 6. Exposure glass          |
| 2. ADF exposure glass         | 7. Scanner motor           |
| 3. 2nd scanner (2nd carriage) | 8. Sensor board unit (SBU) |
| 4. Scanner lamp               | 9. Lens Block              |
| 5. 1st scanner (1st carriage) | 10. Original length sensor |
|                               | 11. Original width sensor  |

The original on the exposure glass or ARDF exposure glass reflects the light emitted from the scanner lamp. The reflected light goes to the CCD on the sensor board by way of the 1st and 2nd scanners. The sensor board converts the CCD analog signals into digital signals.

When the original is manually placed on the exposure glass, the scanner motor pulls the 1st and 2nd scanners via mechanical linkage. The original is scanned from left to right. When the original is fed from the optional ARDF, it is automatically transported onto the ARDF exposure glass, and to the original exit. The original does not stay on the glass; but goes to the exit. The 1st and 2nd scanners stay at their home positions.

## 6.3.2 SCANNER DRIVE

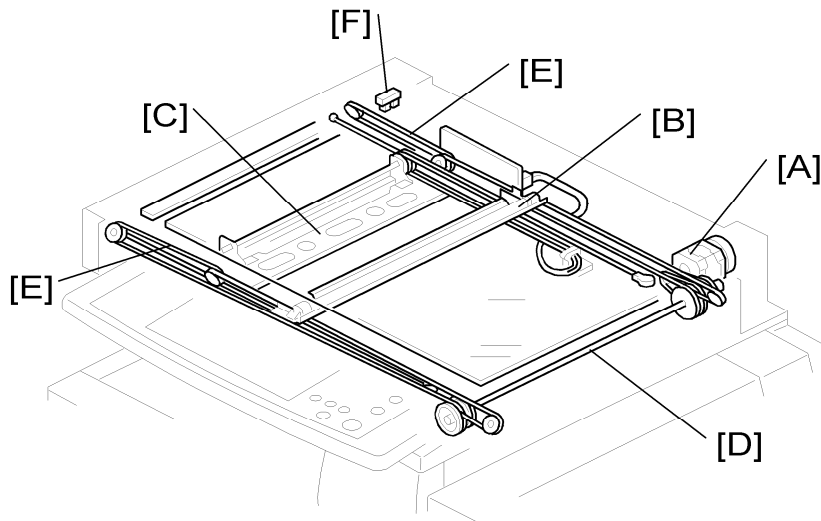

The scanner motor [A] drives the 1st scanner [B] and the 2nd scanner [C] through the scanner drive pulley, scanner drive shaft [D], and two scanner wires [E].

### **Book mode -**

The SBU board controls the scanner drive motor. The 2nd scanner speed is half that of the 1st scanner.


In reduction or enlargement mode, the scanning speed depends on the magnification ratio. The returning speed is always the same, whether in full size or magnification mode. The image length change in the sub scan direction is done by changing the scanner motor speed. In the main scan direction it is done by image processing on the BICU board. You can adjust the magnification in the sub-scan direction by changing the scanner motor speed with SP4-008.

### **ARDF mode -**


The scanners always stay in their home position (the scanner HP sensor [F] detects the 1st scanner) to scan the original. The ARDF motor feeds the original through the ARDF. In reduction/enlargement mode, the image length change in the sub-scan direction is done by changing the ARDF motor speed. Magnification in the main scan direction is done in the BICU board. This is the same as for book mode.

You can adjust magnification in the sub-scan direction by changing the ARDF motor speed with SP6-017.

### 6.3.3 ORIGINAL SIZE DETECTION

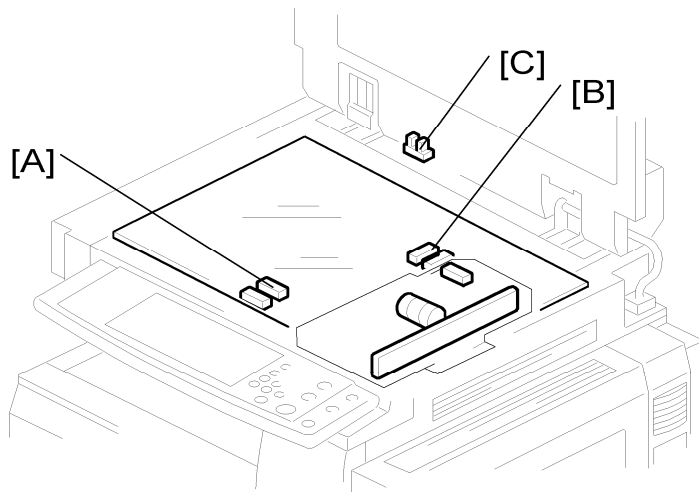

- The original width sensors [A] detect the original width. The original length sensors [B] detect the original length.
- The SBU controller on the SBU board checks each sensor status when the platen cover sensor [C] is activated as it is closed. It detects the original size by the on/off signals it gets from each sensor.
- If the copy is made with the platen cover fully open, the SBU controller on the SBU board determines the original size from the sensor outputs after the Start key is pressed.

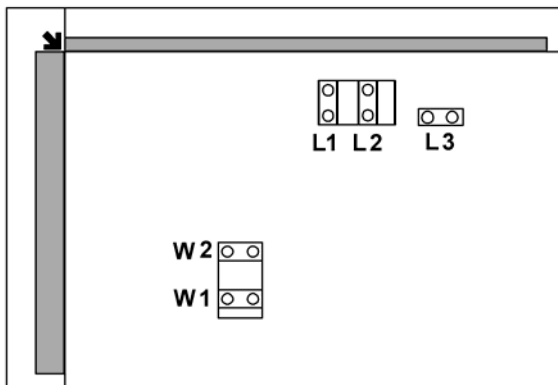

| Original Size  |              | Length Sensor |    |    | Width Sensor |    | SP4-301 display |
|----------------|--------------|---------------|----|----|--------------|----|-----------------|
| Metric version | Inch version | L3            | L2 | L1 | W1           | W2 |                 |
| A3             | 11" x 17"    | O             | O  | O  | O            | O  | 00011111        |
| B4             | 10" x 14"    | O             | O  | O  | O            | X  | 00011110        |

|  |                             |   |   |   |   |   |          |
|--|-----------------------------|---|---|---|---|---|----------|
| F4<br>8.5" x 13", 8.25" x<br>13", or 8" x 13"<br>SP 5126 controls the<br>size that is detected | 8.5" x 14"                  | O | O | O | X | X | 00011100 |
| A4 LEF   | 8.5" x 11"                  | X | X | X | O | O | 00000011 |
| B5 LEF   | -                           | X | X | X | O | X | 00000010 |
| A4 SEF   | 11" x 8.5"                  | X | O | O | X | X | 00001100 |
| B5 SEF   | -                           | X | X | O | X | X | 00000100 |
| A5 LEF/ SEF  | 5.5" x 8.5",<br>8.5" x 5.5" | X | X | X | X | X | 00000000 |

 Note

- O: Paper present, X: Paper not present

The above table shows the outputs of the sensors for each original size. This original size detection method eliminates the necessity for a pre-scan and increases the machine's productivity.

However, if the by-pass tray is used, the machine assumes that the copy paper is lengthwise (L). For example, if A4 sideways paper is placed on the by-pass tray, the machine assumes it is A3 paper and scans a full A3 area. Information from the original size sensors is disregarded.


Refer to the ARDF manual for more information on original size detection with the ARDF.

### 6.3.4 ANTI-CONDENSATION HEATER

The anti-condensation heater is available as an optional unit. The anti-condensation heater prevents condensation on the mirrors. Condensation can occur when the scanner unit is, for example, moved from a cold room to a warm room. Condensation can cause abnormal images.

## 6.4 IMAGE PROCESSING

### 6.4.1 OVERVIEW

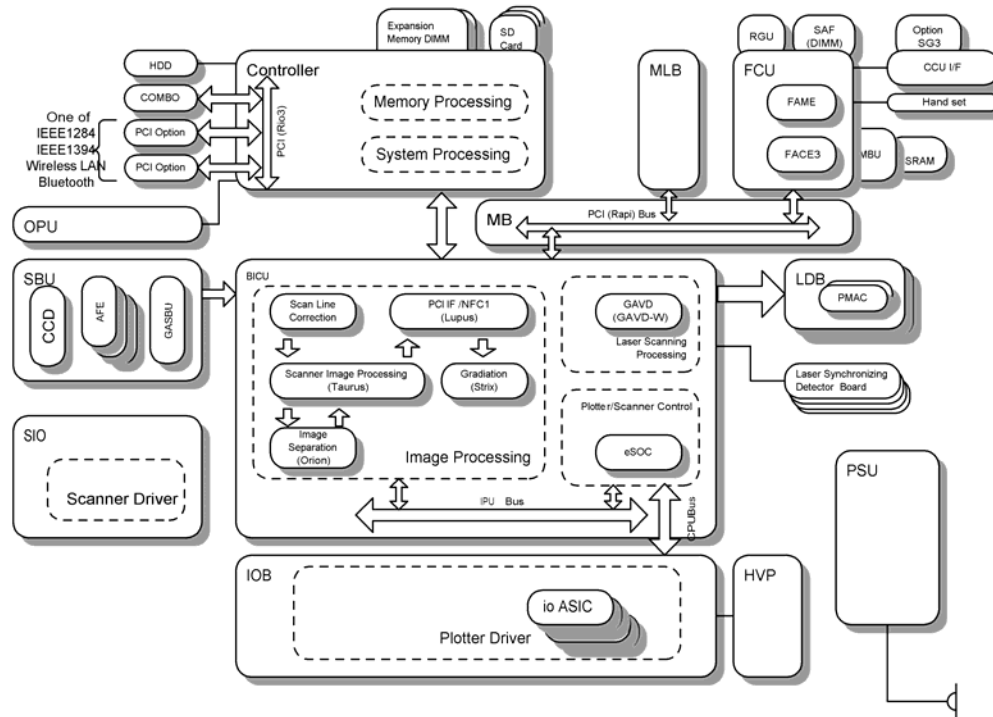

### 6.4.2 SBU (SENSOR BOARD UNIT)

#### SBU

The VPU (Video Processor Unit) does the following functions:

- Black level correction
- White level correction
- Gradation calibration
- ADS control (Background Density)
- Creating the SBU test pattern

#### Operation Summary

The signals from the 3-line CCD, one line for each color (R, G, B) and 2 analog signals per line (ODD, EVEN), are sampled by the ASIC and converted to digital signals in the 10-bit A/D converter. This is the first phase of processing the data scanned from the original.

#### Storing Operation Settings

The controller stores the SBU settings. These values must be restored after the lens block is replaced:



|                    |               |                                   |
|--------------------|---------------|-----------------------------------|
| <b>SP4-008-001</b> | Sub Scan Mag  | Sub Scan Magnification Adjustment |
| <b>SP4-010-001</b> | Sub Scan Reg  | Sub Scan Registration Adjustment  |
| <b>SP4-011-001</b> | Main Scan Reg | Main Scan Registration Adjustment |

Also, before lens block replacement, enter the SP mode and note the settings of **SP4-800-001** to **-003** (ARDF density adjustments for R, G, B). After lens block replacement, do some copy samples with the ARDF, then check the copies. If the copies have background, change **SP4-800-001** to **-003** to their previous settings, or adjust until the background is acceptable. These SP codes are also used to adjust the ARDF scanning density, if the scanning densities of the ARDF and the platen mode are not the same.

#### **SBU Test Mode**

There are two SP codes to create a test pattern which can be used as a diagnostic tool to troubleshoot problems in the SBU:

- SP4907 001 SBU Pattern - Test Pattern
- SP4907 002 SBU Pattern - Select Fixed Pattern

To print the pattern:

- Select the pattern to print.
- Touch "Copy Window" then press the Start key twice.

### **6.4.3 IPU (IMAGE PROCESSING UNIT)**


The IPU does the following:

- Controls the scanner
- Processes the image signals from the SBU and sends them over the PCI bus to the controller memory
- Receives the image processing signals sent over the PCI bus from the controller memory, processes them, then outputs them to the VGAVD.
- Outputs the control signals for the ARDF
- Controls the relay of power and signals

Image processing, ADS correction, and line width correction are done on the BICU board for all the digital data sent from the SBU. Finally, the processed data is sent to the printer as digital signals (4 bits/pixel).

## 6.5 LASER EXPOSURE

### 6.5.1 OVERVIEW

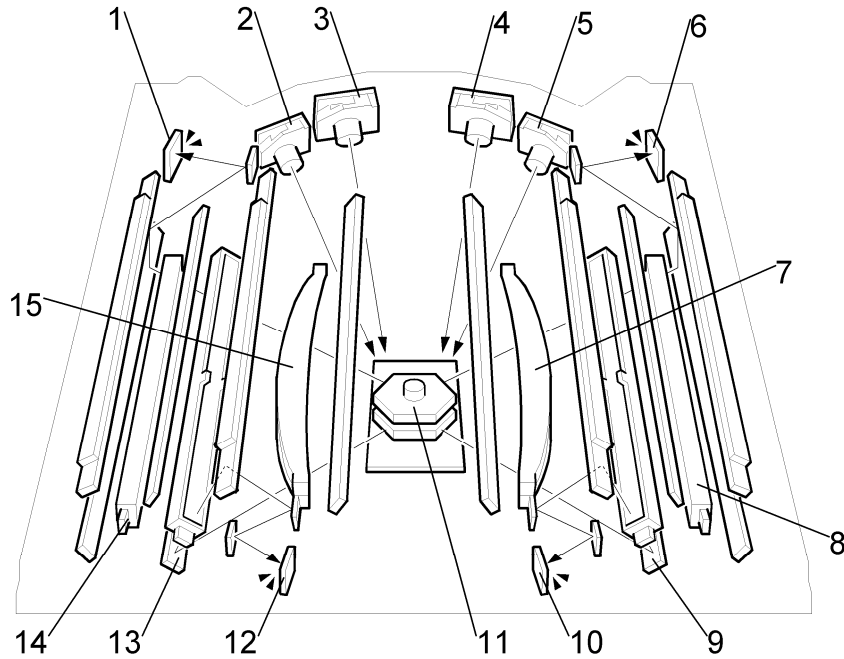


|   |  |
|---|--|
| 1. Synchronizing detector board: Y/C-E  | 9. WTL-M                                 |
| 2. LD unit-Y                            | 10. Synchronizing detector board: Bk/M-E |
| 3. LD unit-C                            | 11. Polygon mirror motor                 |
| 4. LD unit-Bk                           | 12. Synchronizing detector board: Y/C-S  |
| 5. LD unit-M                            | 13. WTL-C                                |
| 6. Synchronizing detector board: Bk/M-S | 14. WTL-Y                                |
| 7. F-theta lens-Bk/M                    | 15. F-theta lens-Y/C                     |
| 8. WTL-Bk                               |  |

This machine uses four LD units and one polygon mirror motor to produce latent images on four OPC drums (one drum for each color toner).

There are two hexagonal mirrors. Each mirror reflects beams from two LD units.

Laser exposure for black and magenta starts from the rear side of the drum. But for yellow and cyan it starts from the front side of the drum. This is because the units for black and magenta are on the other side of the polygon mirror from the units for yellow and cyan.

## 6.5.2 OPTICAL PATH

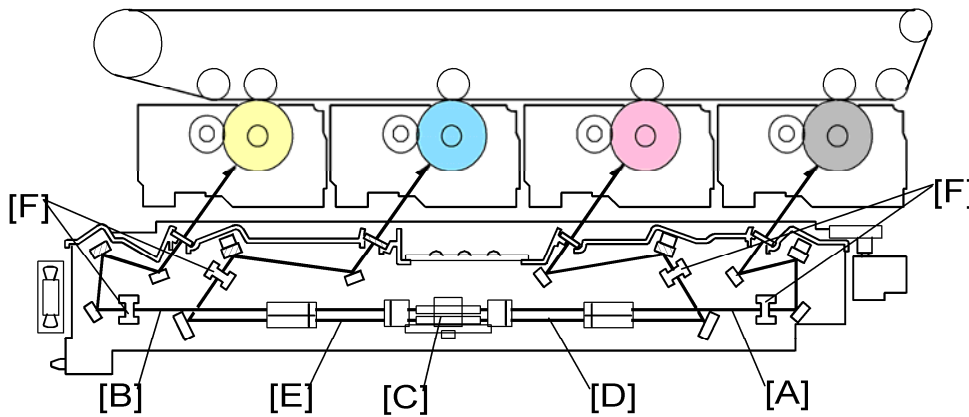


The laser beams for black [A] and yellow [B] are directed to the upper part of the polygon mirror [C]. Laser beams for magenta [E] and black [D] are directed to the lower part of the polygon mirror. The LD mirrors (see the previous page) deflect the laser beams for magenta and black towards the lower polygon mirror.

The WTL [F] corrects the main scan line. Without this component, the line bends out towards the middle of the main scan. The central bend of the WTL is adjusted in the factory.

The speed of the polygon mirror depends on the selected mode and model (see below).

| Mode                | Polygon motor speed (rpm) | Process line speed (mm/s) | Print speed (ppm)  |
|---------------------|---------------------------|---------------------------|--------------------|
| Plain /Middle Thick | 32,598                    | 138 mm/s                  | C1a: 25<br>C1b: 30 |
| OHP/Thick           | 36,378                    | 77 mm/s                   | 16                 |

### 6.5.3 LASER SYNCHRONIZING DETECTORS

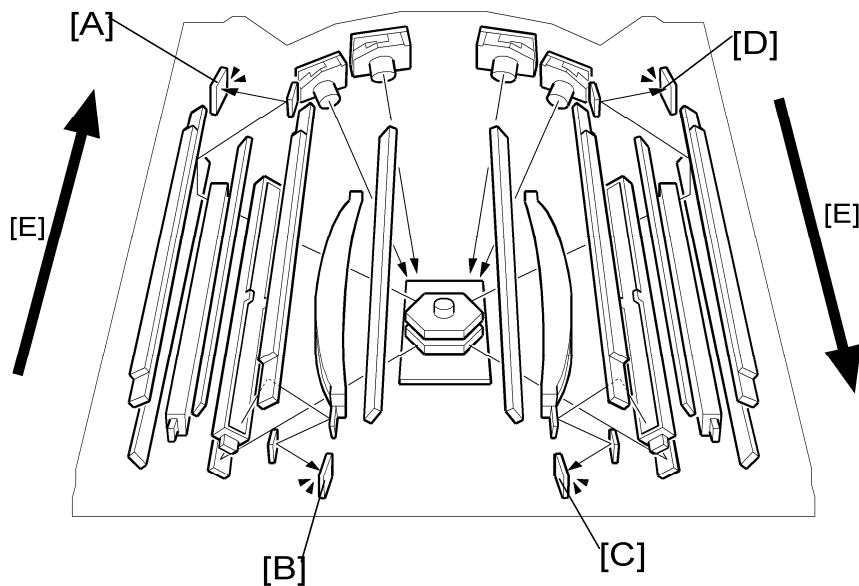

#### Overview

The machine has four laser synchronizing detector boards (LSD). There is one at each corner of the laser optics-housing unit.

The four LSD boards detect the following:

- [A]: Scanning end position for yellow and cyan
- [B]: Scanning start position for yellow and cyan
- [C]: Scanning end position for magenta and black
- [D]: Scanning start position for magenta and black.

The machine recognizes each color from the time that they are detected.

#### Main Scan Start Detection


For magenta and black, the LSD at the rear detects the start of the main scan. For yellow and cyan, the LSD at the front detects the start of the main scan. The arrow [E] indicates the scanning direction.

#### Clock Frequency Adjustment

Each LSD ensures that the number of laser clock pulses in the main scan is constant. If the count for one particular beam varies from normal, the LD clock frequency for that beam is adjusted.

If the board at the end position is defective, the clock frequency cannot be adjusted. At this time, you must disable the detection feature with SP2-186-1.

## 6.5.4 LD SAFETY SWITCH

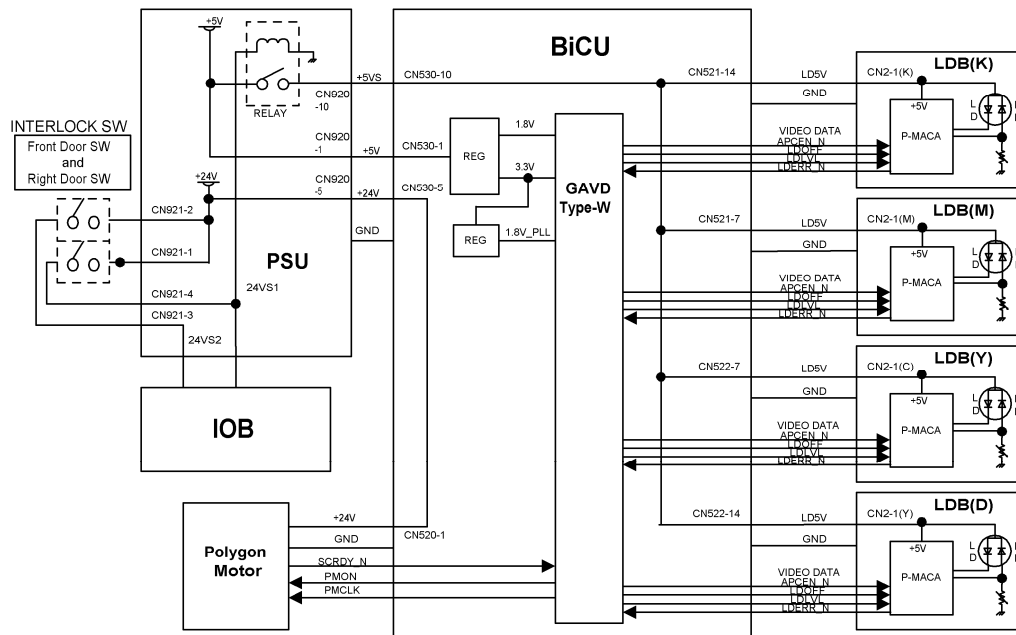

A relay on the PSU ensures technician and user safety. It also prevents the laser beam from turning on during servicing. This relay turns off when the front cover, upper left cover, or right door is opened. At this time it cuts the power (+5V) supplied to the LD board for each color through the BICU.

Two safety switches are used to turn the relay off. One switch is used for the front door. Another safety switch is used for the right door.

- PMAC: Precise Pulse Modulation ASIC on C-MOS technology
- LDB: LD Drive Board (included in the LD Unit)

### Error Messages


Along with other switches, the LD safety switches help show error messages related to external covers. When one or more covers are open, the messages, "Cover is open." and "Close the indicated cover," show with a diagram. The diagram shows which cover is open.

## 6.5.5 AUTOMATIC LINE POSITION ADJUSTMENT

### Overview

CC, KK, YY, MM: Spaces between two lines of the same color

KC, KY, KM: Spaces between a black line and a color line

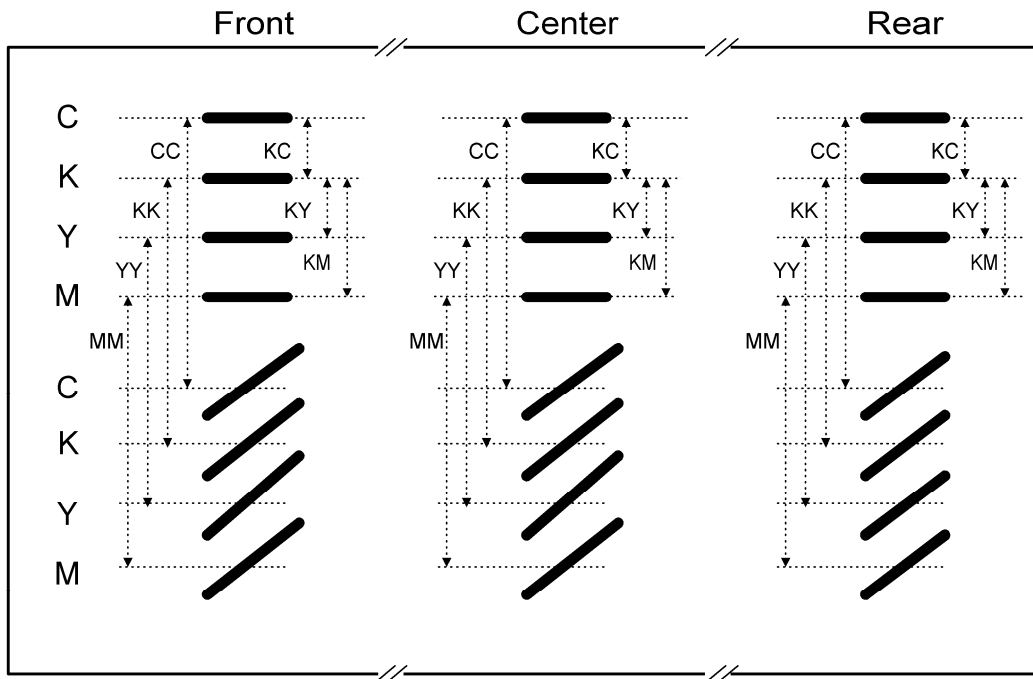

During automatic line position adjustment, the line patterns above are created eight times on the transfer belt. The spaces between the lines (CC, KK, YY, MM, KC, KY, KM) are measured by the front, center, and rear ID sensors. The controller takes the average of the spaces. Then it adjusts the following positions and magnification:

- Sub scan line position for CMY
- Main scan line position for CMY
- Magnification ratio for CKMY
- Skew for CMY

The transfer belt-cleaning unit cleans the transfer belt after the patterns are measured.

SC285 shows if an error is detected four times consecutively.

### Summary of Each Adjustment

#### Sub scan line position for YCM

The adjustment of the sub-scan line position for YCM is based on the line position for K (color registration). The machine measures the gaps between the lines of each color in the pattern on the transfer belt. If the gaps for a color are not correct, the machine moves the image of the color up or down the sub scan axis. To do this, it changes the laser write

timing for that color.

### **Main scan line position for YCM**

If the machine detects that the image is out of position in the main scan direction, it changes the laser write start timing for each scan line.

### **Magnification adjustment for KYCM**

If the machine detects that magnification adjustment is necessary, it changes the LD clock frequency for the required color.

### **Skew for YCM**

The adjustment of the skew for YCM is based on the line position for K.

## ***Adjustment Conditions***

Line position adjustment can be turned on or off with SP2-193-001. However, it is normally recommended to turn on this function.

Line position adjustment timing depends on several SP mode settings. These are described below.

$\Delta t$  = Time since the previous line position adjustment

$\Delta T$  = Temperature change between the temperature of the previous line position adjustment and the current temperature

### **Forced (SP2-111-001 to -003):**

This activates the line position adjustment manually. There are three types of line position adjustment mode. See the SP table for details.

#### **Initial:**

This starts automatically when the power is turned on, or when the machine recovers from the energy saver mode.

Line position adjustment is automatically done **twice** if one of these conditions occurs:

1.  $\Delta t >$  Time threshold (SP2-193-012: [default: 600 minutes])
2.  $\Delta T >$  Temperature threshold (SP2-193-011: [default: 10°C])

Line position adjustment is automatically done **once** if one of these conditions occurs:

1.  $\Delta t >$  Time threshold (SP2-193-009: [default: 300 minutes])
2.  $\Delta T >$  Temperature threshold (SP2-193-008: [default: 5°C])

#### **Interval: During job:**

This interrupts printing and then starts automatically if one of these conditions occurs when the machine checks at the sheet interval specified with SP3-512-001 (default: 30 page).

Line position adjustment is automatically done **once** if one of these conditions occurs:

1.  $\Delta t >$  Time threshold (SP2-193-009: [default: 300 minutes])
2.  $\Delta T >$  Temperature threshold (SP2-193-008: [default: 5°C])
3. B/W counter (SP3-510-005) + Color counter (SP3-510-006) > Output threshold for all

outputs (SP2-193-004: [default: 200 pages])

4. Color counter > Output threshold for color outputs (SP2-193-005: [default: 200 pages])

**Interval: Job end:**

This starts automatically at the end of a print job.

Line position adjustment is automatically done **once** if one of these conditions occurs:

1.  $\Delta t$  > Time threshold (SP2-193-009: [default: 300 minutes])
2.  $\Delta T$  > Temperature threshold (SP2-193-008: [default: 5°C])
3. B/W counter (SP3-510-005) + Color counter (SP3-510-006) > Output threshold for all outputs (SP2-193-002: [default: 500 pages])
4. Color counter > Output threshold for color outputs (SP2-193-003: [default: 200 pages])

**Front door open/close:**

This starts automatically when the front door is opened/closed.

Line position adjustment is automatically done **once** if one of these conditions occurs:

1.  $\Delta t$  > Time threshold (SP2-193-009: [default: 300 minutes])
2.  $\Delta T$  > Temperature threshold (SP2-193-008: [default: 5°C])

**In stand-by mode:**

This is automatically done **once** if both conditions occur at the same time. However, it is not done if the machine is in the energy saver mode.

1.  $\Delta t$  > Time threshold (SP2-193-009: [default: 300 minutes]) or  $\Delta T$  > Temperature threshold (SP2-193-008: [default: 5°C])
2. B/W counter (SP3-510-005) > Output threshold for B/W outputs (SP2-193-002: [default: 500 pages]) or Color counter > Output threshold for color outputs (SP2-193-003: [default: 200 pages])

**After new PCU or Image Transfer Belt Unit detection**

When the machine detects a new unit (one of the PCUs or the Image Transfer Belt Unit), line position adjustment is automatically done **twice**.


**If the main scan magnification changes**

This is detected by the main scan synchronization detectors at each end of the scan line for each color.

If the magnification changes by more than 1% (threshold adjustable SP2-193-010), line position adjustment is done again.




## Main Scan Skew Adjustment

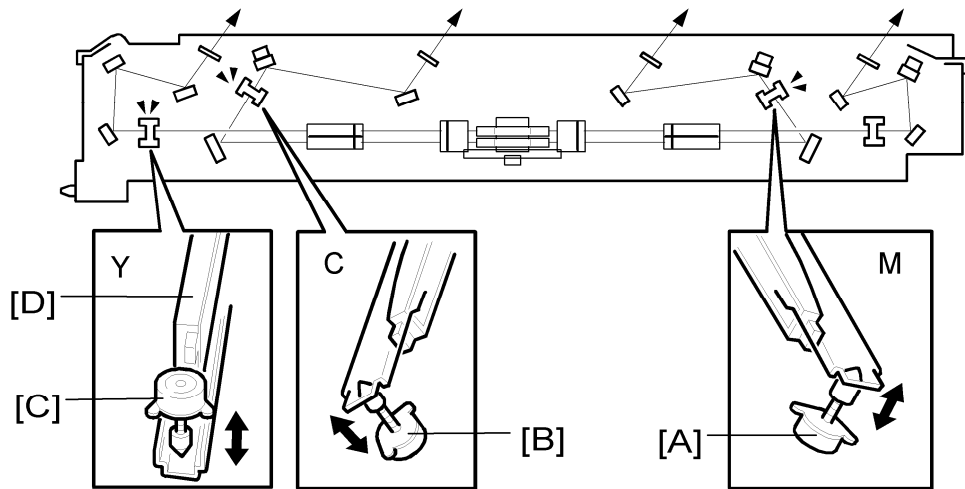

The WTL positioning motors for magenta [A], cyan [B], and yellow [C] adjust the angle of the WTL [D] respectively, based on the WTL position for black. This mechanism corrects main scan skew.


## ID Sensors

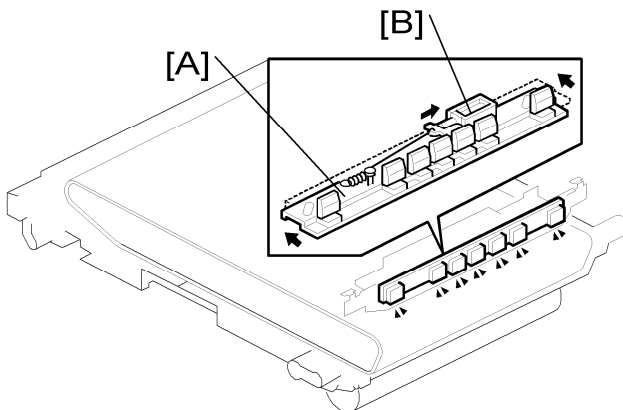

There are seven ID sensors. Three of them are for the line position adjustment. Four of them are for process control. The ID sensor shutter [A] covers the sensors when the machine is idle.

When the ID sensor shutter solenoid [B] is activated, ID sensor shutter [A] slides to the left. This mechanism prevents the ID sensors from becoming dirty with toner or dust.

## Shutter Mechanism

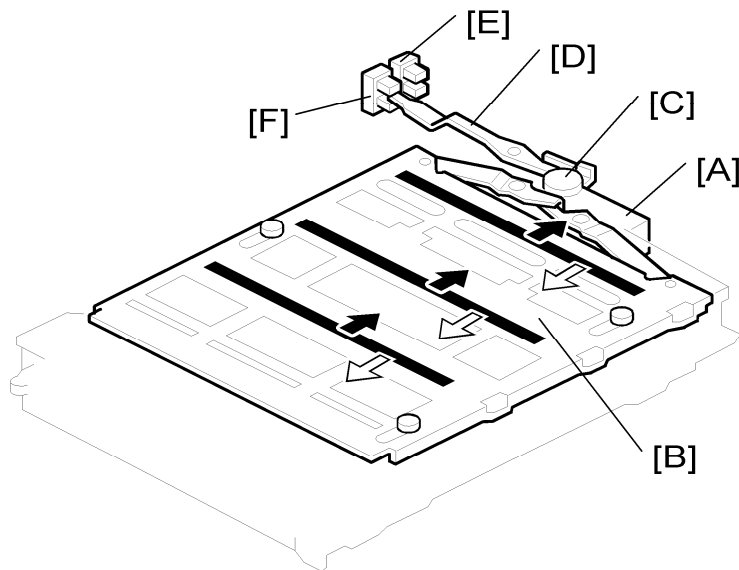

The laser optics housing unit has a shutter. As a result, toner and other dust do not fall on the glass of the laser optics housing. The shutter motor [A] moves the shutter [B] in the direction of the arrow with the cam [C] (to open: black arrow direction, to close: white arrow direction).


First, the actuator [D] stays at the shutter closed sensor [E]. The shutter motor opens the shutter and the actuator moves to the shutter open sensor position [F] after the polygon motor has turned on.

Finally, the shutter motor closes the shutter and the actuator moves back to the shutter closed sensor position [E] after the polygon motor has turned off.

⇒ One of SC290 to 296 occurs if the output of the shutter open [F] or closed sensor [E] does not change after the shutter motor turned on.

## 6.6 PCU (PHOTO CONDUCTOR UNIT)

### 6.6.1 OVERVIEW

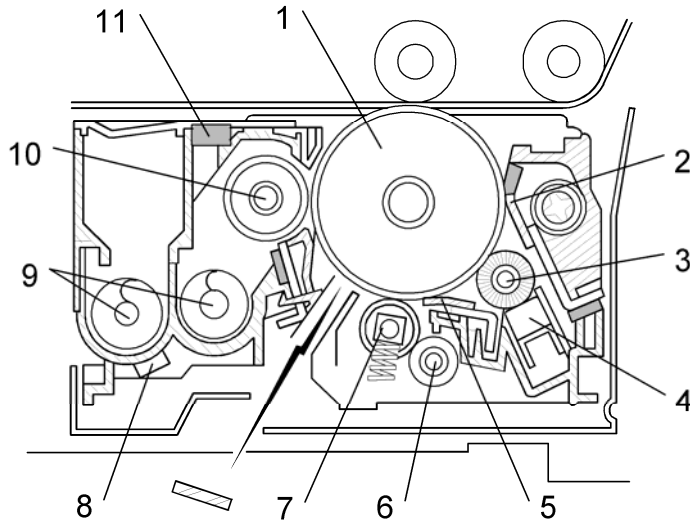

|                                    |                                      |
|------------------------------------|--------------------------------------|
| 1. OPC drum                        | 7. Charge roller (non-contact)       |
| 2. Cleaning blade                  | 8. TD sensor/ID chip                 |
| 3. Brush roller                    | 9. Mixing auger                      |
| 4. Lubricant bar                   | 10. Development roller               |
| 5. Lubricant application blade     | 11. Inner pressure adjustment filter |
| 6. Cleaning roller (charge roller) |                                      |

This machine has four tandem PCUs. Therefore, four color developments are possible during one paper path. This improves the productivity of outputs in color printing mode. Each PCU contains identical components (drum unit, development unit and so on), but the PCUs are not interchangeable.


The diameter of the drum is 40 mm (circumference: about 125.7 mm).

The photoconductor gap between a drum and the corresponding development roller is not possible to adjust because these are assembled as a PCU at the factory.

The ID chip is part of the TD sensor assembly. The ID chip contains counters and other data about the PCU, drum unit, and development unit. If you replace the development unit with a new one, the counter information for the drum unit is not kept on the new ID chip.

## 6.6.2 AROUND THE DRUM

### *Drum Drive*

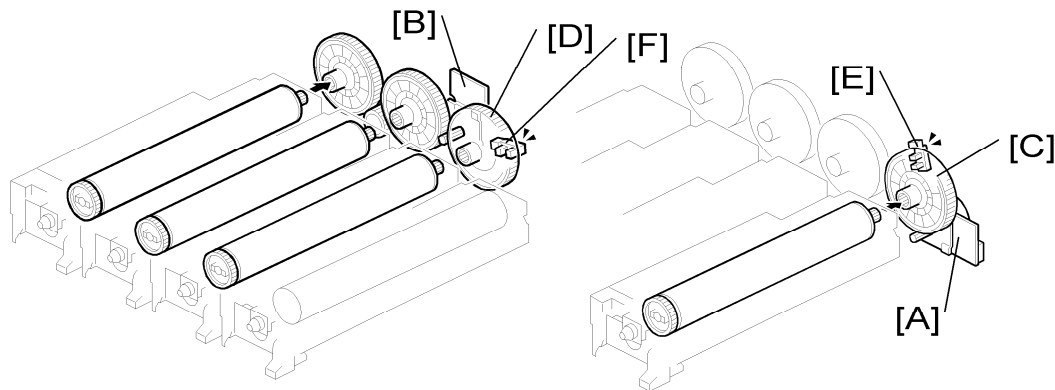

The drum/development drive motor-K [A] drives the drum unit for black.

The drum drive motor-CMY [B] drives the drum units for magenta, cyan, and yellow. Using one motor to drive these three drums reduces CMY color misalignment.

Both motors are brush-less DC motors. This helps to reduce the drive noise.

### ***Phase Control Mechanism***

The machine uses the drum gear position sensors to detect if the drum motors rotate.


SC380 shows when it detects that the drum motor is not moving. These sensors also help the machine to initialize the relative positions of the gears when the main switch is turned on, and during initializing. This prevents phase fluctuation between printouts that is caused by incorrect gear meshing at the start of the job.

There is an interrupter on each of the black [C] and magenta [D] drum gears. The drum gear position sensors [E][F] detect the positions of these interrupters. This mechanism makes sure that output quality does not vary. The cyan and yellow drum gears operate with the magenta drum gear because these three drum gears are linked through other gears.

In the ready status, if the gears are not in the correct position, the machine adjusts the position of the black drum gear.

The relative positions of the gears are adjusted every 30 jobs.

## Drum Charge and Quenching

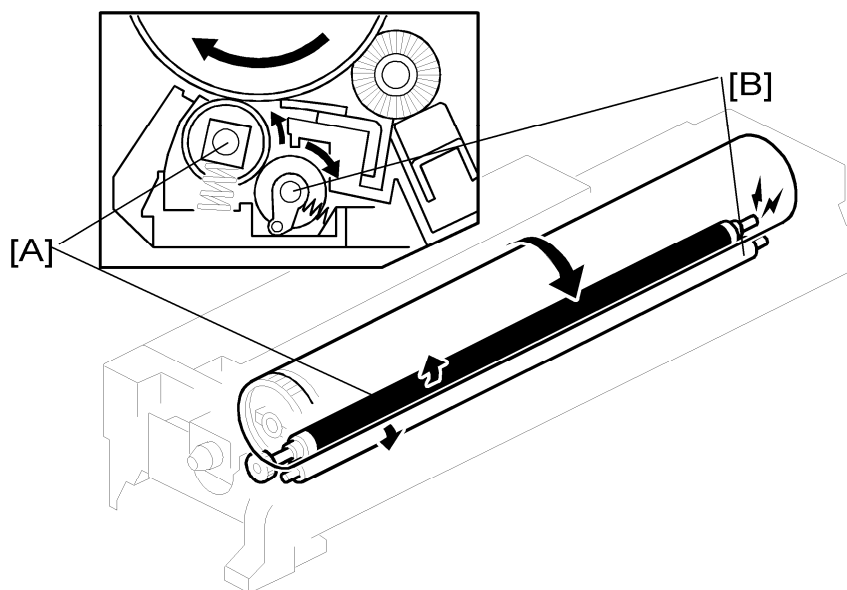


This machine uses a non-contact charge roller [A] to reduce ozone. The non-contact charge roller gives the drum surface a negative charge. The high voltage supply board – C.B, which is located at the rear of the machine, applies a dc and ac voltage (at a constant current) to the roller. The ac voltage helps to ensure that the charge given to the drum is as uniform as possible.

The machine automatically controls the charge roller voltage if automatic process control is enabled (i.e., if SP3-041-1 is set to "CONTROL"). However, if process control is switched off, (i.e., if SP3-041-1 is set to "FIXED"), the dc voltage is the value stored in SP2-001-1 to -12 (do not adjust in the field unless advised to do so).

The diameter of the charge roller is 12.5 mm (circumference about 39.3 mm). The gap between a drum and the corresponding charge roller is about 50  $\mu\text{m}$ .

The cleaning roller [B], which always contacts the charge roller, cleans the charge roller. Quenching is done by illuminating the whole area of the drum with the laser at the end of every job.

## Drum Cleaning

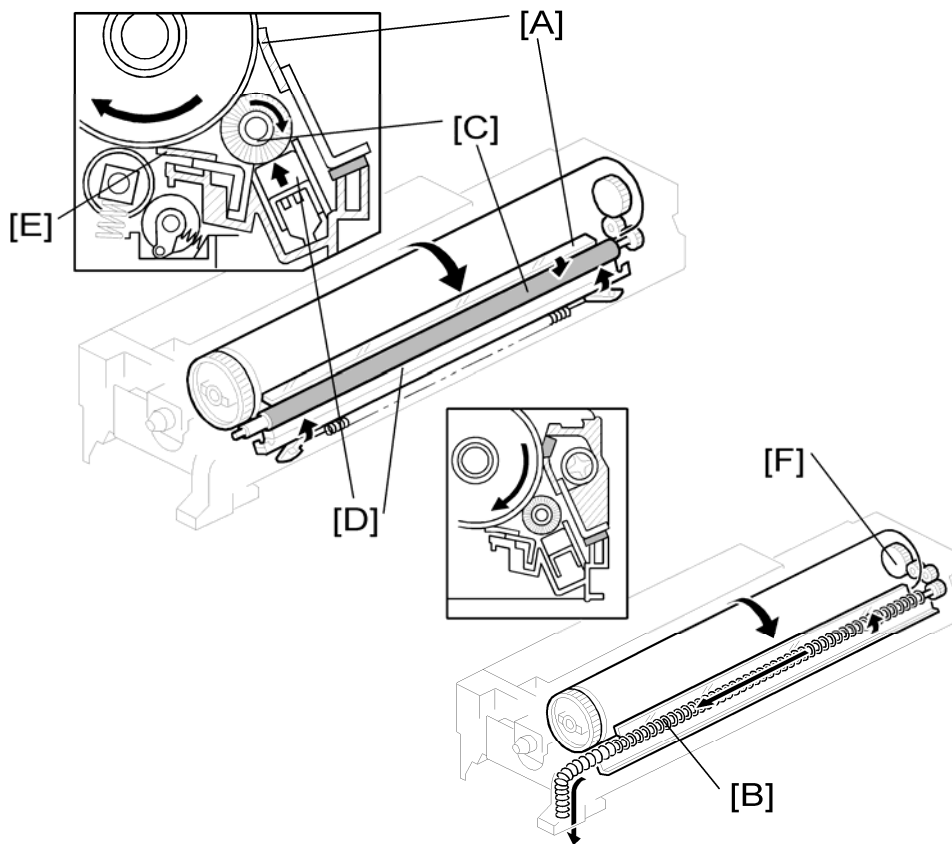

The cleaning blade [A] scrapes off the used toner that stays on the drum. The toner collection auger [B] transports the used toner towards the toner collection duct. Then it goes to the toner collection duct. The brush roller [C] put lubricant on the drum to make toner removal easy the next time the drum rotates past the cleaning blade.

If the temperature is above the value of SP 3517, the drum reverses briefly at the end of the job to prevent the blade from flipping over.

The brush roller rubs against the lubricant bar [D] and lubricates the drum surface.


Lubricant is uniformly applied on the surface of the drum by the lubricant application blade [E].

The toner collection auger [B] in each PCU is driven by gears [F] at the end of the drum.

This toner then goes to the toner collection bottle (see section "Toner Collection Path and Drive" in this section).

## 6.6.3 DEVELOPMENT

### *Development Operation*

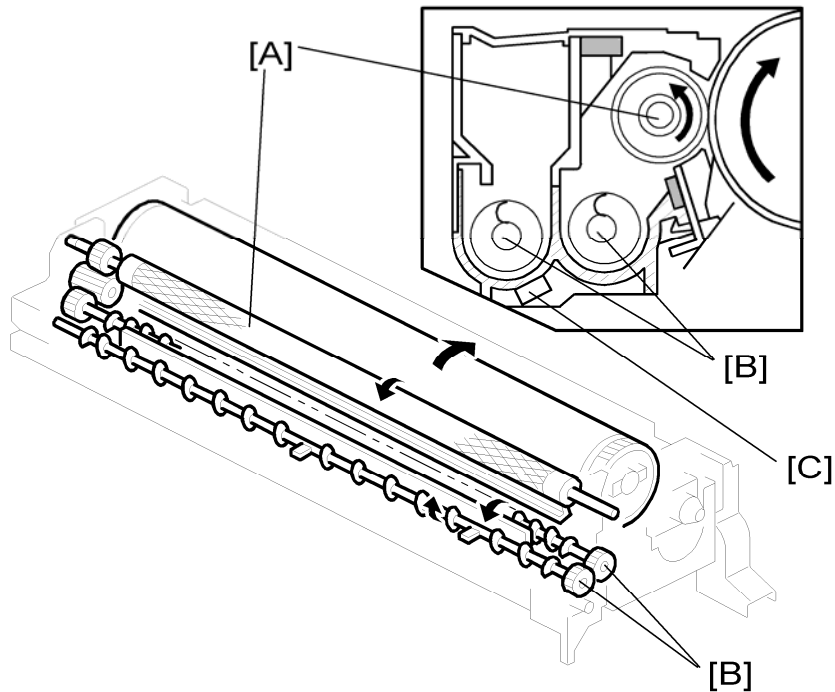


This machine uses a dual-component development system and has four development units (which are included in the drum units), one for each color. Each contains 225 g of developer when it is new. The developer in each unit is supplied to the development roller [A] by the two mixing augers [B] and attracted onto the surface of its roller.

The TD sensor [C] in the development unit and four ID sensors above the ITB control toner density. Each development unit has a TD sensor. The TD sensor contains an ID chip in which some information about the development unit is stored.

The diameter of the development roller is 18 mm (circumference about 56.5 mm).


## Drive

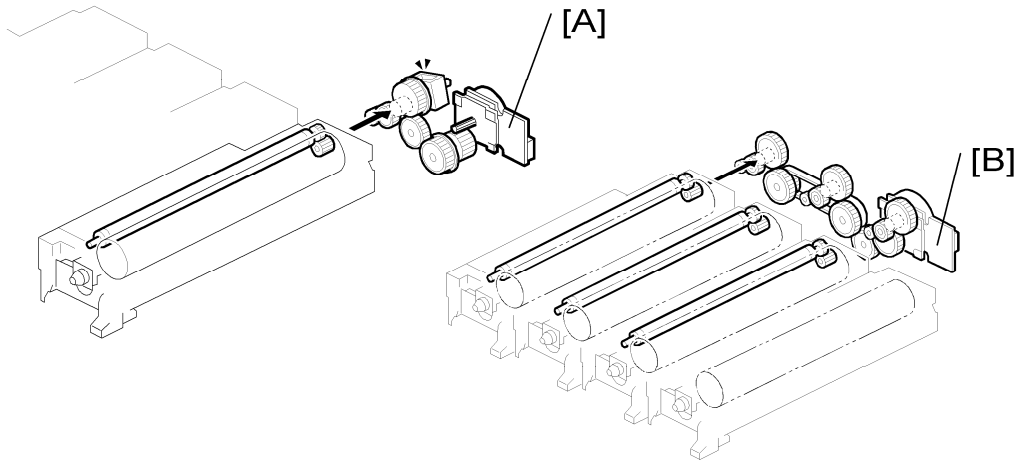

The drum/development drive motor-K [A] drives the development roller for black through gears and a clutch. The gear trains are shown in the diagram.

The development drive motor-CMY [B] drives the development unit for magenta, cyan, and yellow through gears.

## Developer Agitation

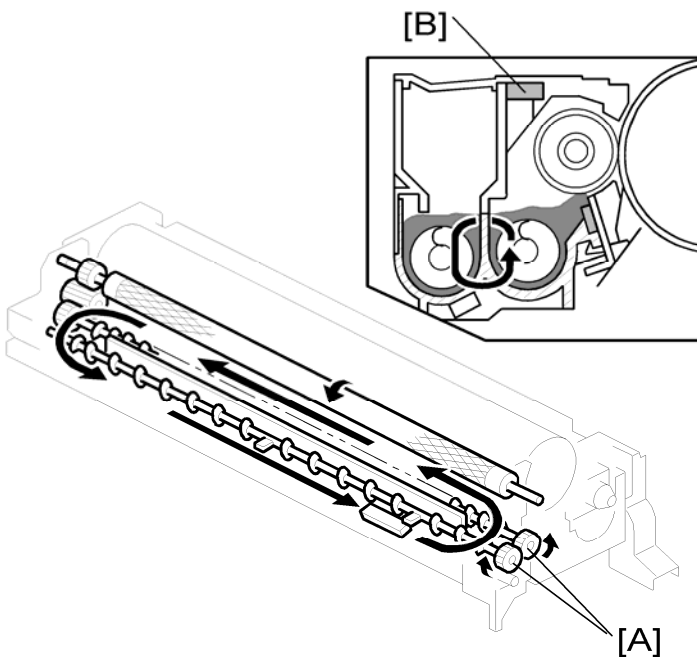

Two mixing augers [A] circulate the developer forward and backward to agitate the developer.

This happens at the following times:

- During process control self check
- During toner supply



- During development.

Filters [B] on the top of the developer hopper make sure that the internal pressure does not become too high. These ducts are sealed not to let the toner solidify before installing.

This development unit does not operate well if it placed in a condition of over 50°C during transportation. The toner inside the development unit can become solid at temperatures higher than this value. A developer initialization error shows if the toner does become solid.

At this time, you must do the following procedure:

**Note**

- You should also do this procedure when you install a new development unit.
1. Remove the (old) development unit.
  2. Keep the (new) development unit level and shake it several times from side to side.
  3. Install it in the machine.


### **Development Bias**

The PSU supplies development bias to the development roller via the receptacle at the rear of each development unit.

There is a dc bias voltage.

The machine automatically controls the dc bias if the automatic process control is enabled (i.e., if SP3-041-001 is set to "1: ON"). However, if process control is switched off, (i.e., if SP3-041-001 is set to "0: OFF"), the dc bias is the value stored in SP3-621-001 to -012 (do not adjust in the field unless advised to do so).

### **New Unit Detection**

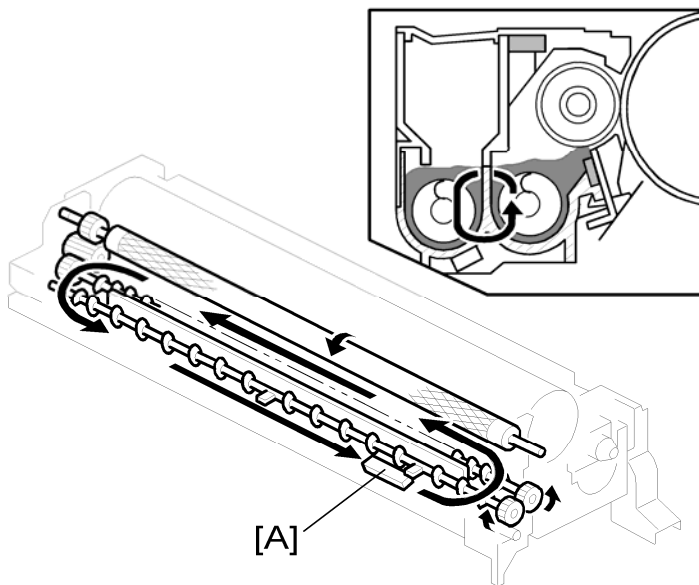

The TD sensor [A] in the development unit has an ID chip that contains the new unit detection flag. The machine detects that a PCU is new if the flag in the ID chip is activated.

The machine automatically does the following adjustments when detecting the new unit detection flag.


- PM counter clear for items related to the PCU
- Developer initialization
- Charge roller voltage control
- Process control
- Line position adjustment

If the PM counter clear fails, clear the following SPs manually.

- SP3-902-1 to -4
- SP3-902-5 to -8
- SP3-902-9 to -12

## 6.7 TONER SUPPLY

### 6.7.1 OVERVIEW

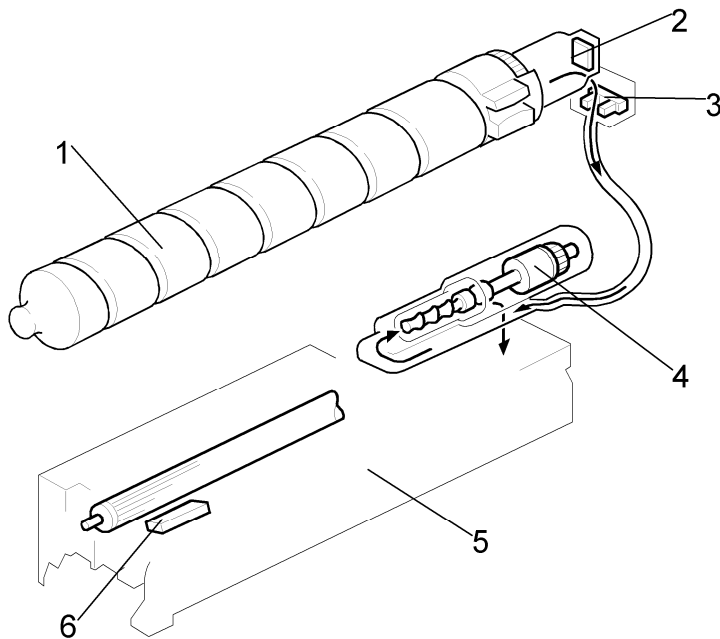

1. Toner bottle (each color)

2. Memory chip (each color)

3. Toner end sensor (each color)

4. Toner attraction pump (each color)

5. Development unit (each color)

6. TD sensor (each color)


This machine uses four toner bottles. Each bottle has a spiral groove in it and its groove moves toner to the toner attraction pump. And the toner attraction pump transports the

toner to the development unit.

The toner end sensor is attached to the toner supply tube. The toner end sensor and the output from the process control define when the machine detects toner end.

## 6.7.2 TONER SUPPLY MECHANISM

### *Toner supply from toner bottle to toner attraction pump*

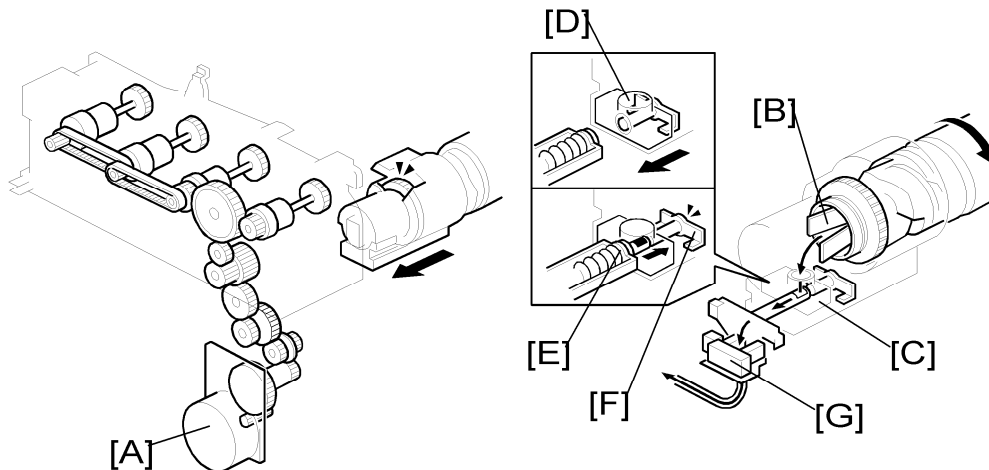

The toner transport motor [A] rotates the toner bottle-Bk via gears and a clutch. It also rotates the toner bottle-Y, -C, -M via gears, clutches and timing belts.


Each bottle has a spiral groove, and this groove moves toner to the mouth [B] of the bottle. Here, toner spills into a hopper [C]. The opening [D] of the toner hopper is normally closed if the toner bottle is not installed in the machine. When the toner bottle is installed in the machine, the transport tube [E] pushes the toner hopper shutter [F] and then the opening of the toner hopper is open.

The toner passes part of the way along the transport tube towards the toner attraction pump. The toner goes through the toner end sensor [G].

### ***Toner Near End Detection***

The toner end sensors [G] detect toner near end conditions (☛ "Toner Near End/Toner End Detection" in this section).

## ***Toner supply from toner attraction pump to development unit***

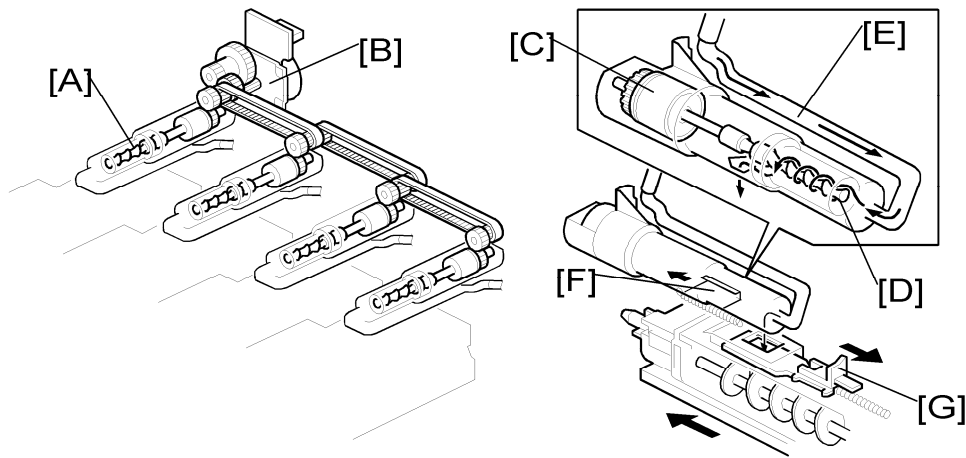

Each toner attraction pump [A] is driven by the toner transport motor [B]. Each toner attraction pump has the same mechanism. The pump (toner attraction pump) has the following components:

- Toner supply clutch [C]
- Rubber tube
- Rotor [D]

The above components attract the toner in the toner transport tube [E] toward the development unit.

The toner supply clutch controls the rotor, which draws the toner in from the cartridge and passes it to the development unit. When supplying toner, the clutch turns on and off as many times as necessary to supply the necessary amount of toner. The amount of toner depends on the results of toner supply control.


### **Shutter Mechanism**

The development unit and toner attraction pump each have a shutter mechanism. The shutter [F] on the pump opens when the development unit is placed in the machine. At the same time, the pump opens the shutter [G] in the development unit. When both shutters are open, toner can enter the development unit from the toner attraction pump.

The shutter springs pull and close the shutter when the development unit is removed.

## 6.7.3 TONER CARTRIDGE

### *RFID (Radio Frequency ID)*

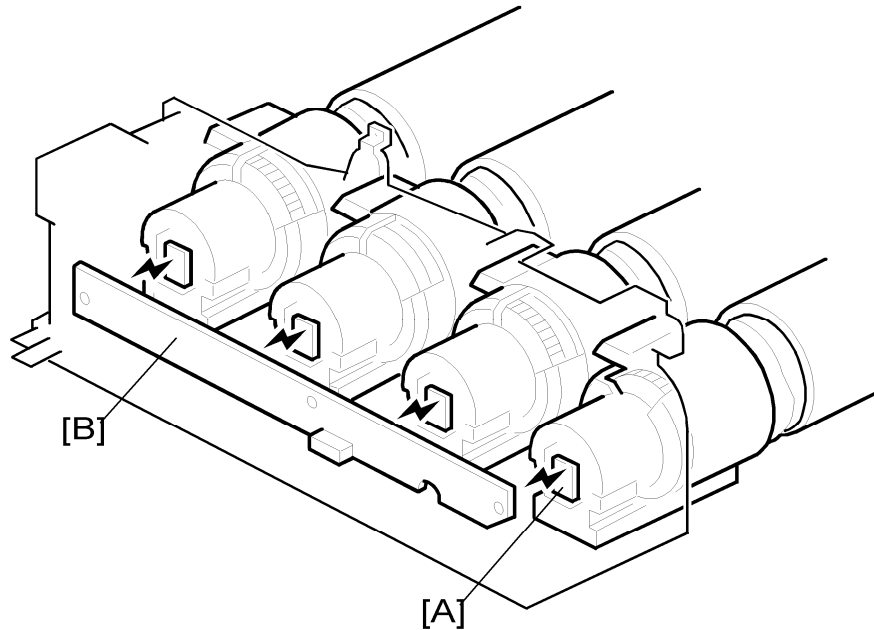


Each toner cartridge of this machine has a RFID chip [A]. This stores the total “on” time of the toner supply clutch. This is used to calculate the amount of toner remaining in the toner cartridge. The chip is also used to detect whether the cartridge is installed (if the cartridge is not installed, the machine does not detect a signal from the memory chip).

The RFID transmits its data to the RFID antenna board [B] without any contact.

## 6.8 WASTE TONER COLLECTION


### 6.8.1 TONER COLLECTION PATH AND DRIVE

*From PCU*

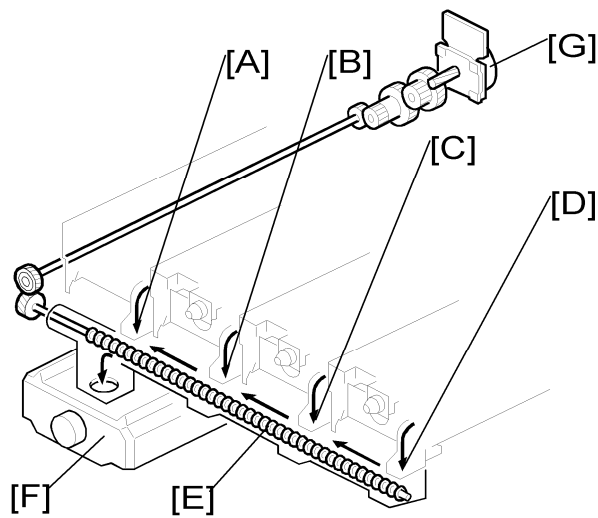


The used toner from the collection augers in the four PCUs drops into the toner collection duct from the four openings [A][B][C][D] at the front of the PCUs. The toner collection auger [E] in the duct transports this used toner towards the toner collection bottle [F]. The coil [E] is driven by the toner transport motor [G]. The openings and PCUs correspond as follows: Yellow → [A], Cyan → [B], Magenta → [C], Black → [D].

### ***From Image Transfer Belt Unit***

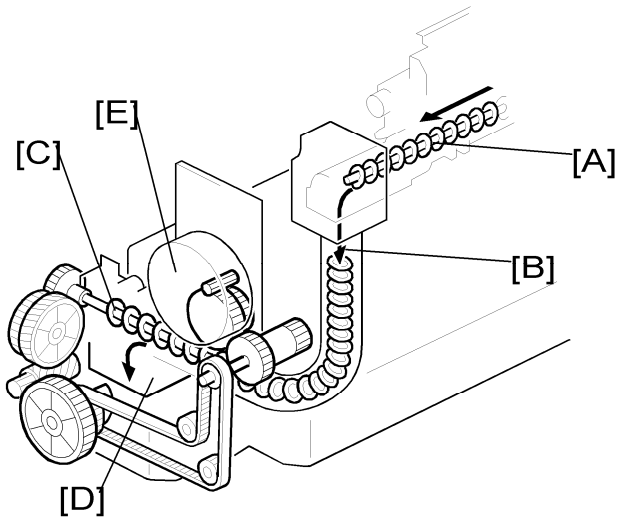

The toner collection auger [A] moves the used toner from the image transfer belt and the used toner drops into the toner collection duct [B]. The toner collection coil [C] moves the used toner to the opening [D] at the rear of the toner collection bottle. The toner transport motor [E] drives the toner collection coil.


### ***Used Toner Distribution Mechanism***

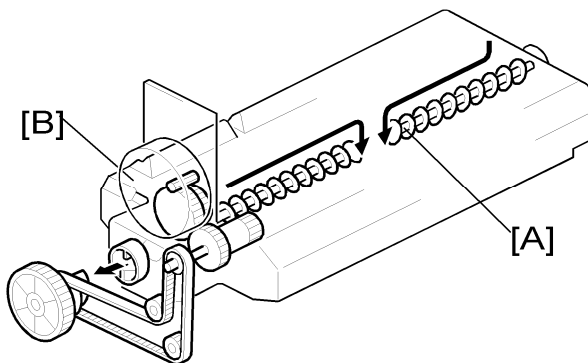

The toner collection bottle has two openings (front and rear). The opening at the front is for the toner from the PCUs, and the opening at the rear is for the toner from the image transfer belt.

To distribute the toner inside the bottle evenly, the auger [A] moves the toner to the center area. The mixing auger has two spirals in different directions. As a result, it is possible to gather the toner in the center area of the toner collection bottle even if the mixing auger always rotates in the same direction. The toner transport motor [B] drives the mixing auger via a timing belt and gears.

## 6.8.2 TONER COLLECTION BOTTLE SET/ NEAR-FULL/ FULL DETECTION

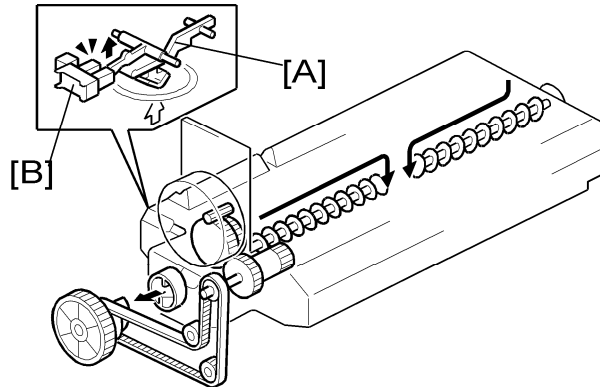

The toner collection bottle has a projection at its rear side. When the toner collection bottle is set, this projection pushes the waste toner bottle set switch at the rear of the machine. As a result, the machine detects that the toner collection bottle is installed.

The bottle near-full/full detection mechanism is above the bottle. When the used toner pushes up the used toner feeler [A], the waste toner sensor [B] turns off

At this time, the machine detects that the toner collection bottle is almost full, and displays a message.


After this, when 500 sheets of paper have been copied, the machine detects that the toner collection bottle is full, and the machine stops.



## 6.9 IMAGE TRANSFER AND PAPER SEPARATION

### 6.9.1 IMAGE TRANSFER

#### Overview

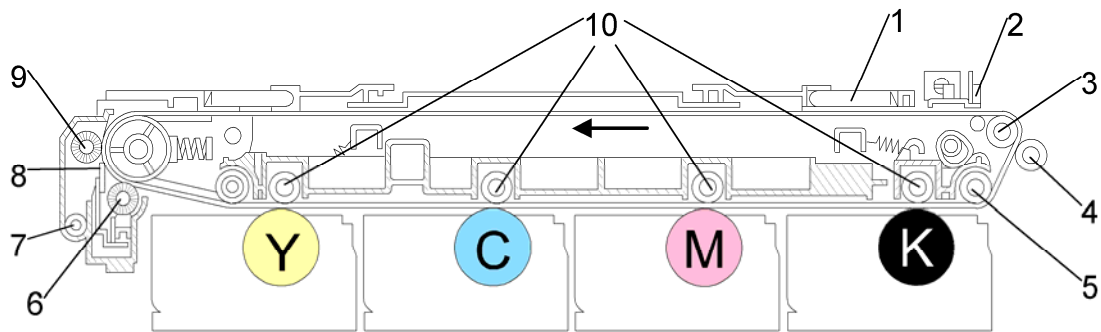

|                              |                                 |
|------------------------------|---------------------------------|
| 1. Image transfer belt (ITB) | 6. Lubricant application roller |
| 2. ID sensor                 | 7. Toner collection auger       |
| 3. ITB drive roller          | 8. Cleaning blade               |
| 4. Paper transfer roller     | 9. Cleaning roller              |
| 5. Rotation encoder          | 10. Image transfer roller       |

The toner is moved from the four drums to the ITB by the four image transfer rollers. This is done with one rotation of the ITB (four toner images are super-imposed onto the belt). The arrow above the C and M drums on the diagram shows the direction of ITB rotation.

The ITB drive roller then moves the four-color toner image from the transfer belt to the paper. The paper transfer roller is an idle roller.


The cleaning unit in the transfer unit cleans the belt surface with the cleaning blade and roller. The used toner collected from the belt is transported to the toner collection bottle.

There are seven ID sensors. Three of them are for the line position adjustment. Four of them are for process control.

Detailed Descriptions


## **ITB (Image Transfer Belt) Drive**

### **Drive Motor**

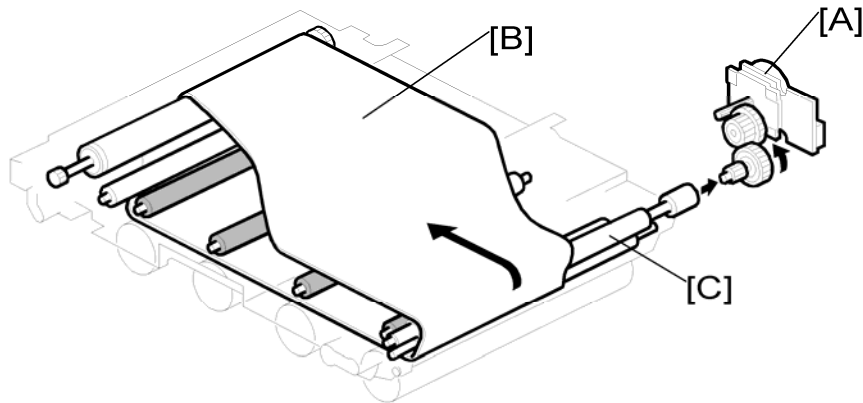

The ITB drive motor [A] drives the image transfer belt [B] and the cleaning unit via gears and the ITB drive roller [C]. The speed of ITB drive depends on the process line speed (see 'Laser Exposure – Optical Path').


### **Transfer belt speed control**

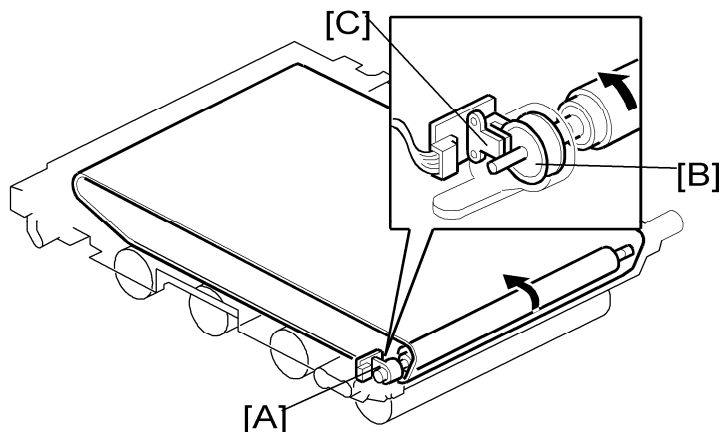

This machine uses the rotation encoder to control the transfer belt speed.

The encoder [A] is on one of the rollers. This encoder checks the rotation speed of the image transfer belt. The controller analyzes the signals from the encoder. Then it adjusts the rotation speed of the image transfer belt.

The encoder contains a disk that has 300 notches on its surface [B]. These notches are read by the sensor [C]. The controller counts the number of notches that the sensor has read in the unit of time. If the sensor has read an unusually large number of notches or an unusually small number of notches, the controller ignores such unusual signals. Therefore, incorrect reading does not affect the rotation speed.

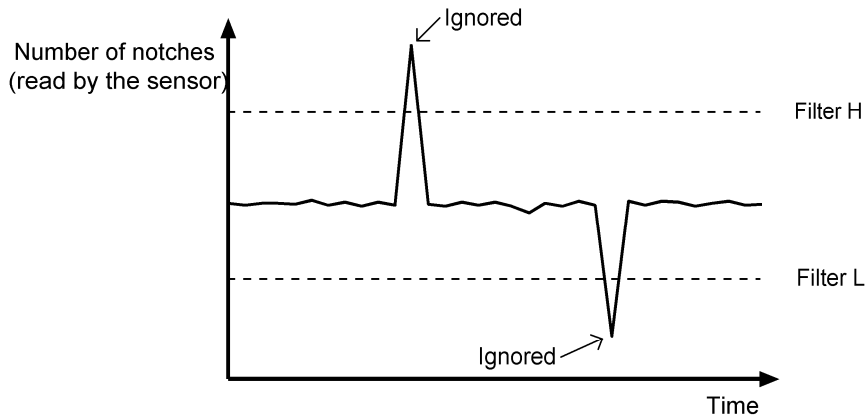


**Filter H:**

The number of notches read by the sensor when the rotation speed of the transfer belt is at its highest possible value.

**Filter L:**

The number of notches read by the sensor when the rotation speed of the transfer belt is at its lowest possible value.

***ITB Current***

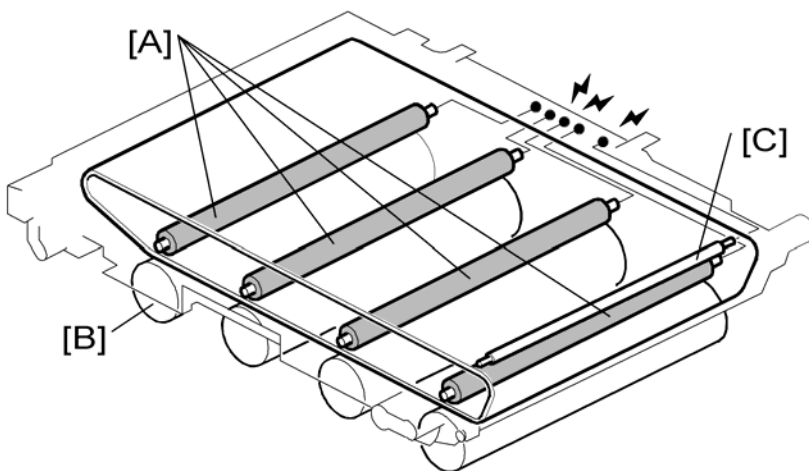


Each image transfer roller [A] applies current to the image transfer belt to attract the toner from each drum [B]. The high voltage supply board supplies current to the image transfer rollers and grounds the belt at roller [C].

The bias that is applied to the image transfer belt is automatically corrected for paper size, temperature (measured by the temperature/humidity sensor at the rear lower right side of the machine).

The other rollers are grounded to neutralize the belt surface.

## Transfer belt cleaning

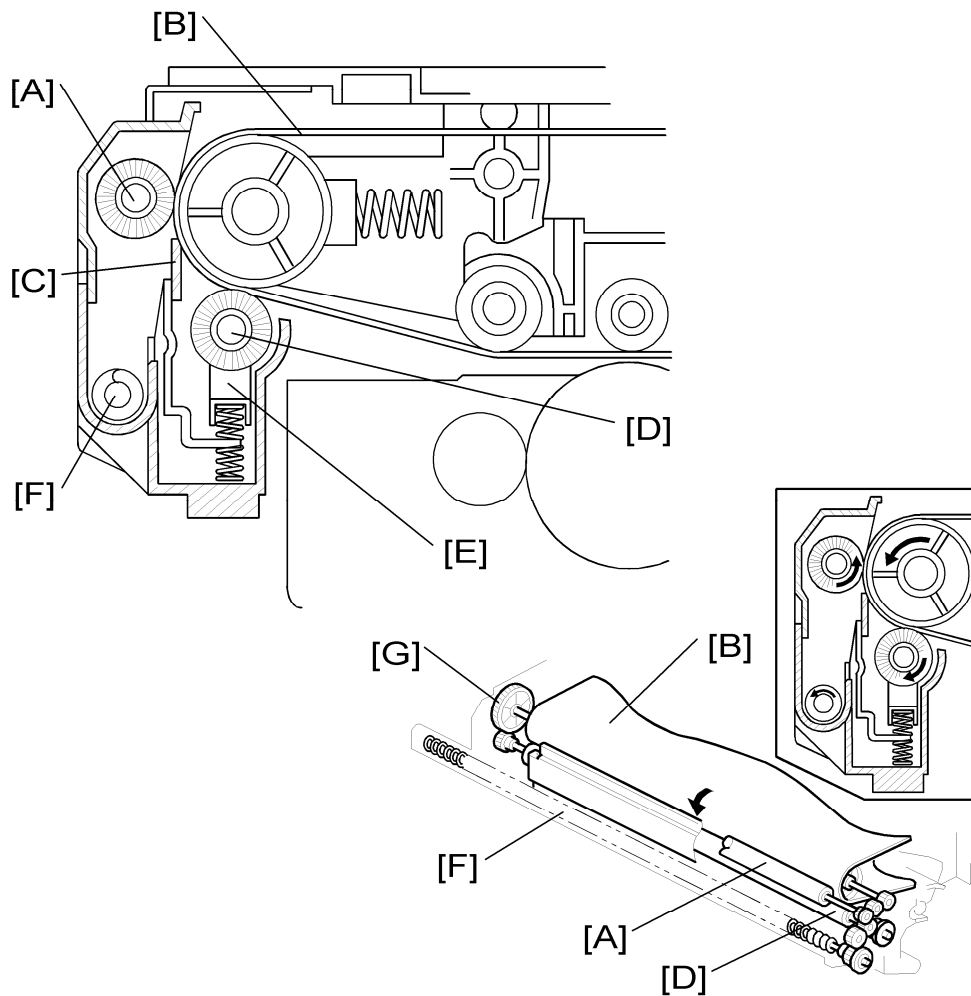


The ITB-cleaning unit removes toner (during printing) and the ID sensor patterns (during process control or automatic line position adjustment) on the belt. Belt cleaning is completed while the image transfer belt makes one rotation. The ITB drive motor drives the ITB-cleaning unit.

The cleaning brush [A] always contacts the image transfer belt [B], and removes used toner from the belt. The cleaning blade [C] in the cleaning unit scrapes the toner off the image transfer belt. Then the toner collection auger [F] transports the toner towards the toner collection duct.

The lubricant application roller [D] applies lubricant [E] to the image transfer belt to make toner removal easy.

To drive the cleaning unit, the transfer belt rotates gear [G], and gears at the front of the transfer unit drive the auger [F] and the rollers [A, D] in the cleaning unit.

## ITB (Image Transfer Belt) Contact

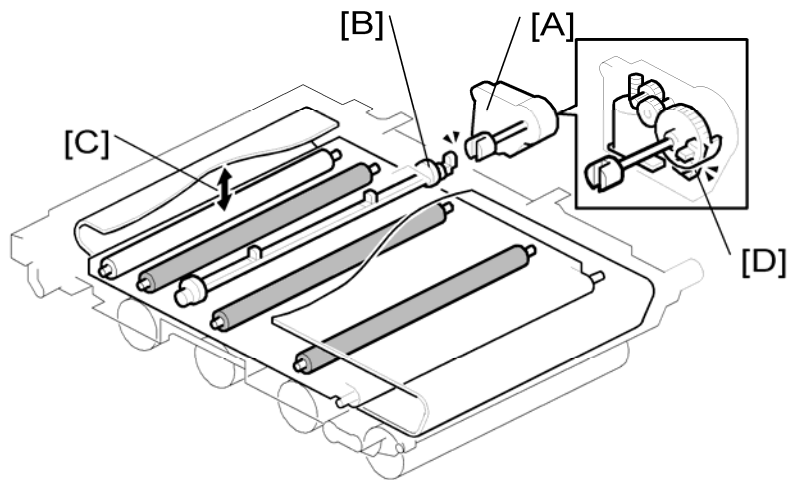

### Mechanism

The ITB contact and release mechanism increases the lifetime of the image transfer belt and drums. The drum for black always contacts the belt. But the image transfer belt moves away from the other drums during monochrome printing. In the standby mode, the image transfer belt contacts only the black drum. It moves away from the black drum when you turn the release lever counterclockwise.

When the machine prints a color page, the machine waits until the previous page has gone through the paper transfer unit. Then the ITB contact motor [A] turns on and a cam [B] moves the left side [C] of the image transfer belt downward, so that it contacts the other three drums.

The machine does not release the image transfer belt from the color drums during the job, even if a monochrome page comes again. This is because the total printing speed reduces

⇒ if the ITB changes position. But, if you change SP 2907 001 away from the default setting of zero, the image transfer belt will move away from the color drums if the number of


⇒ consecutive black-and-white prints reaches the value of SP 2907 001. The belt moves away from the color drums if the job is interrupted by any error except a power failure.


The image transfer belt contact sensor [D] detects if the image transfer belt contacts the color PCUs.


#### ↓ Note

- If a power failure occurs when the image transfer belt is in contact with the drums, the belt stays in this position. If you want to remove the image transfer belt unit while the power is still off, you must release the belt. To do this, swing out the controller box and perform the following procedure:



1. Remove the Image Transfer Belt Contact Motor [A] (see sec. 3.10.8).
2. Using needle nose pliers, turn the Transfer Belt Contact Motor Shaft [B] until the flat surface of the shaft is facing up .

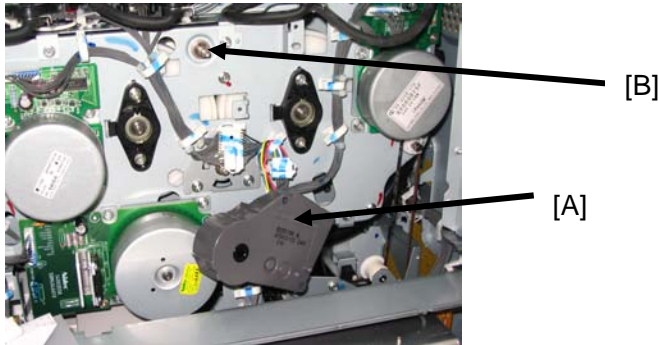

3. Open the front cover of the machine and ensure the Transfer Belt is away from the OPC units before removing.
4. To reinstall the Transfer Belt Contact Motor, first turn the shaft [B] until the flat surface is facing down .
5. Reinstall the Transfer Belt Contact Motor.

### ***Transfer Belt Sensor***

The ITB contact sensor [D] operates as the detection sensor during machine initialization, and also as the position sensor during machine operations.

Before machine initialization, the left side of the image transfer belt is in the home position. When initialization starts, the ITB contact motor lowers the left side until the actuator has passed the sensor. Then ITB contact motor lifts up the left side to its home position. This action actuates the sensor in a certain pattern.

The table lists the sensor actuation patterns.


| Machine status |                   | Sensor pattern           |
|----------------|-------------------|--------------------------|
| Initialization |                   | On → Off → On → Off → On |
| Operation      | Standby (Default) | On                       |
|                | B/W printing      | On                       |
|                | Color Printing    | Off                      |

On: The actuator is out of the sensor.

Off: The actuator is interrupting the sensor.

## 6.9.2 PAPER TRANSFER AND SEPARATION


### Overview

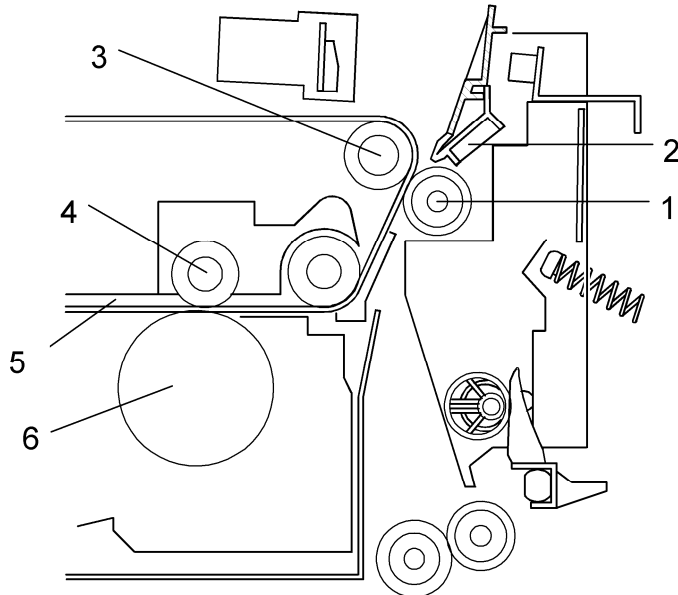

|                          |                          |
|--------------------------|--------------------------|
| 1. Paper transfer roller | 4. Image transfer roller |
| 2. Discharge plate       | 5. Image transfer belt   |
| 3. ITB drive roller      | 6. OPC drum              |

The paper transfer unit consists of the paper transfer roller and discharge plate. This unit completes the toner transfer to the paper.

### ***PTR (Paper Transfer Roller) Drive***

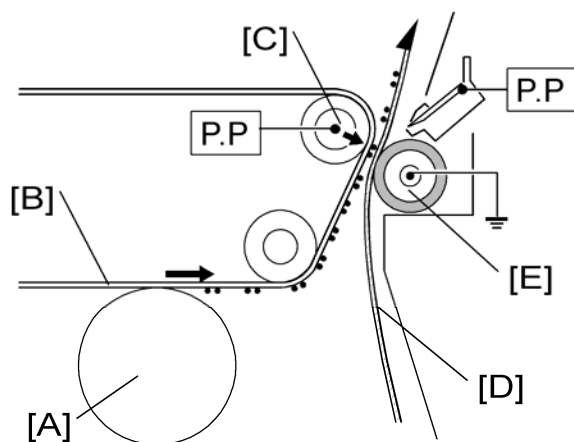


#### ↓ Note

- P.P.: Power Pack


The toner is moved from the OPC [A] onto the surface of the image transfer belt [B] by a positive charge from the image transfer roller (immediately above the drum, not shown here). The ITB drive roller [C], which is given a negative charge, pushes the toner to the paper [D].

The paper transfer roller [E] presses the paper against the image transfer belt [B] (with a spring that is under tension from the paper transfer roller contact motor), and grounds the charge from the ITB drive roller [C]. (The paper transfer roller does not have a drive mechanism. This roller is driven by the image transfer belt.)

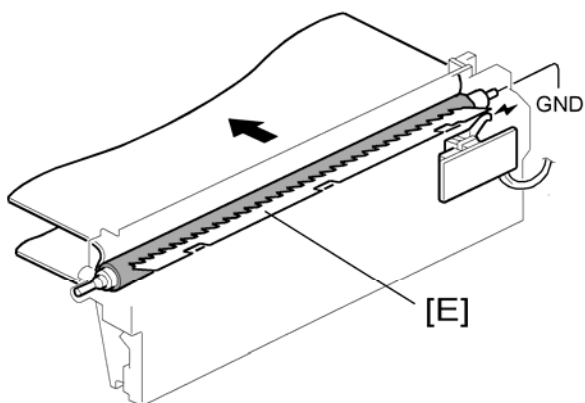

Finally, the discharge plate [E], which is given an AC charge, discharges the paper. The discharge plate receives its charge from a different high voltage power supply board than the ITB drive roller.

### ***PTR (Paper Transfer Roller) Contact and Separation***

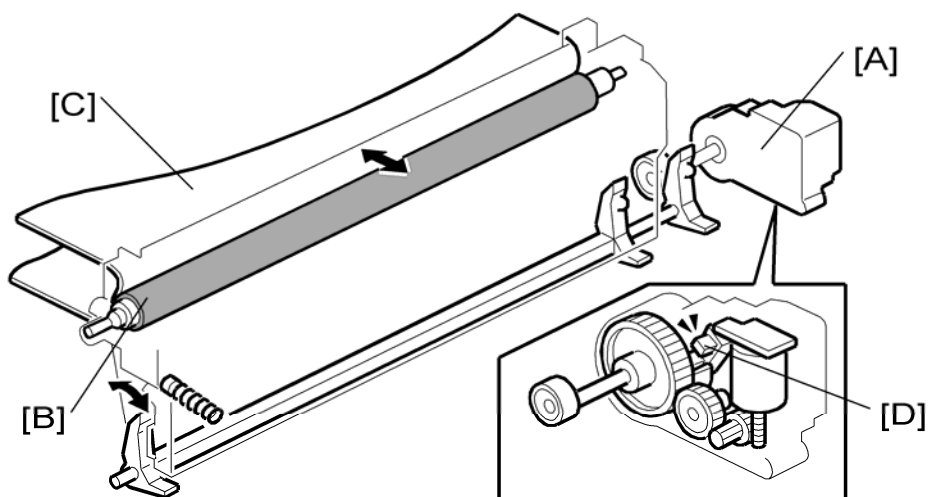


The paper transfer contact motor [A] keeps the paper transfer roller [B] in contact with the image transfer belt [C]. This motor has the paper transfer HP sensor [D] inside. The paper transfer HP sensor detects if the paper transfer roller is in contact with the image transfer belt. Only when the machine executes the line position adjustment or process control, the



paper transfer unit keeps away from the image transfer belt.

## 6.10 PAPER FEED

### 6.10.1 OVERVIEW

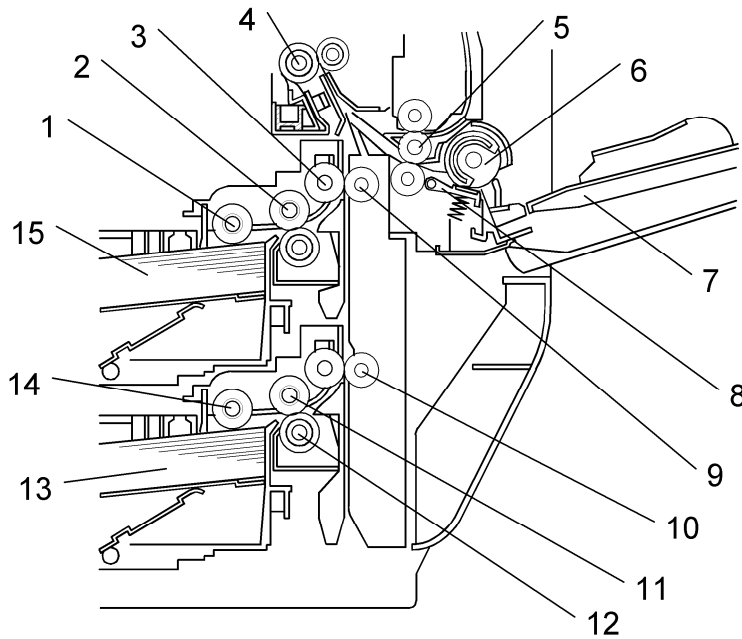


|                                    |                                 |
|------------------------------------|---------------------------------|
| 1. Pick-up roller - tray 1         | 8. Friction pad - By-pass feed  |
| 2. Separation roller - tray 1      | 9. Vertical transport roller 1  |
| 3. Feed roller - tray 1            | 10. Vertical transport roller 2 |
| 4. Registration roller             | 11. Feed roller - tray 2        |
| 5. Transport roller - By-pass feed | 12. Separation roller - tray 2  |
| 6. Feed roller - By-pass feed      | 13. Paper tray 2                |
| 7. By-pass feed table              | 14. Pick-up roller - tray 2     |
|                                    | 15. Paper tray 1                |

There are two paper trays (500 sheets each), and a by-pass feed table (100 sheets).

The paper feed mechanism uses an FRR system for tray 1 and 2, and uses a friction pad system for the by-pass tray.

Tray 1 can hold A4 or letter paper only. Tray 2 can hold a range of sizes.

## 6.10.2 DRIVE – TRAY 1, TRAY 2, AND BY-PASS TRAY

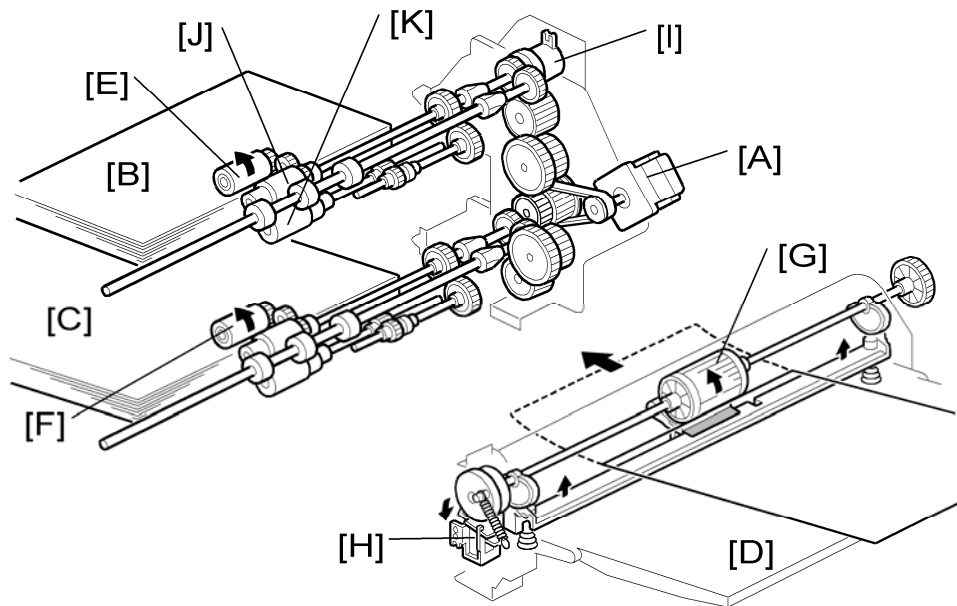


The paper feed motor [A] drives the pick-up and feed mechanisms in tray 1 [B], tray 2 [C]. It uses clutches and complex trains of gears to do this.

When tray 1 and tray 2 are inside the machine, their pick-up rollers [E][F] are always in contact with each top sheet of the paper stack (see section ). However, the feed roller [G] of the by-pass tray [D] stays away until the by-pass pick-up solenoid [H] turns on (see section ). When the paper feed clutch [I] for tray 1 turns on, the pick-up, feed [J] and separation [K] rollers start rotating to feed the paper. The paper from tray 2 is also fed in the same way.

For the paper from the by-pass tray [D], the duplex/by-pass motor drives the feed roller to feed the paper.

The paper feed clutch stays on until shortly after the registration sensor activates.

### 6.10.3 PAPER LIFT – TRAYS 1 & 2

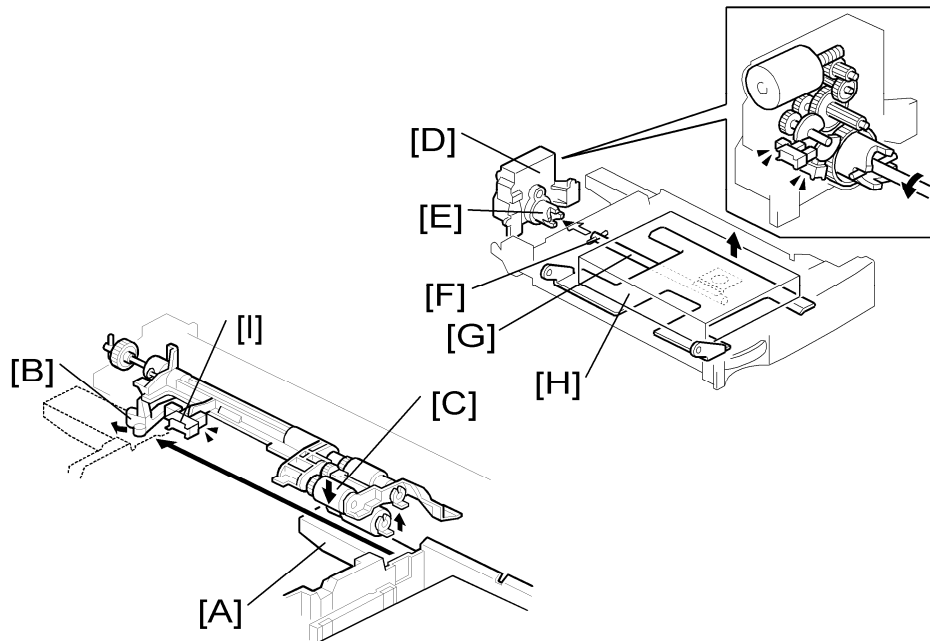


When the tray is installed in the machine, the tray bar [A] pushes the lever [B], and this lever pushes down the pick-up roller [C] onto the paper.

Also, the rear end of the paper tray pushes the tray set switch; see section (for tray 2, this is the paper size switch). As a result, the machine detects that the paper tray is installed.

When the machine detects that a tray has been placed in the machine, the tray lift motor [D] rotates and the coupling gear [E] on the tray lift motor engages the pin [F] on the lift arm shaft [G]. Then the tray lift arm lifts the tray bottom plate [H] until the paper lift sensor [I] for the tray detects that the top of the stack is at the paper feed position.

When the tray is removed from the machine, the connection between the coupling gear and lift arm shaft is disengaged, and the tray bottom plate lowers.

## 6.10.4 PAPER SIZE DETECTION – TRAYS 1 & 2

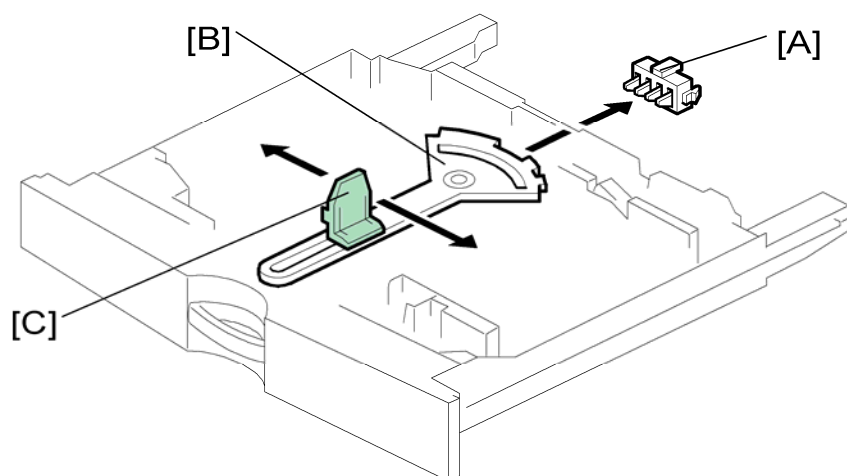

There is no size switch for tray 1. The paper size is fixed at either A4 or LT (LEF for both sizes). You can change the size setting with SP5-181-1.

For tray 2, there are four paper size switches [A] working in combination. Switch 1 (right end) is for tray set detection. The other three switches detect the paper size as shown in the table below. The actuator [B] is moved by the end plate [C].

0: Not pushed, 1: Pushed

| Models         |                | Switch Location |     |     |
|----------------|----------------|-----------------|-----|-----|
| North America  | Europe/Asia    | SW4             | SW3 | SW2 |
| DLT (A3) SEF*1 | A3 (DLT) SEF*1 | 1               | 1   | 0   |
| LG (B4) SEF*2  | B4 (LG) SEF*2  | 1               | 1   | 1   |
| A4 SEF         | A4 SEF         | 0               | 0   | 1   |
| B5 SEF         | B5 SEF         | 0               | 0   | 0   |
| LT (A4) LEF*3  | A4 (LT) LEF*3  | 0               | 1   | 1   |
| B5 (Exe) LEF*4 | B5 (Exe) LEF*4 | 1               | 0   | 1   |
| A5 LEF         | A5 LEF         | 0               | 1   | 0   |

### ↓ Note


- \*1: The machine detects either DLT SEF or A3 SEF, depending on the setting of SP5-181-3.

- \*2: The machine detects either LG SEF or B4 SEF, depending on the setting of SP5-181-4.
- \*3: The machine detects either LT LEF or A4 LEF, depending on the setting of SP5-181-2.
- \*4: The machine detects either Exe LEF or B5 LEF, depending on the setting of SP5-181-5
- SP 5-181-6 to –13 does similar functions for the optional paper trays.

The machine disables paper feed from a tray if the paper size cannot be detected (if the paper size actuator is broken or no tray is installed).

For non-standard paper sizes, if they are not visible on the user tool screen for selecting paper sizes, then set SP 5112 to 1. If the user selects one of these sizes, auto paper size selection is disabled.

### 6.10.5 PAPER HEIGHT DETECTION – TRAYS 1 & 2

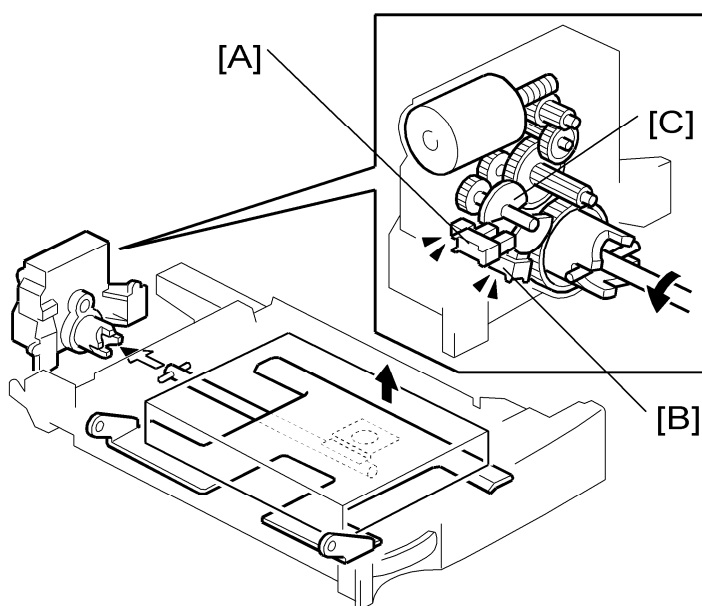

Two paper height sensors [A] [B] and actuator [C] are built into the paper tray lift motor. The paper height sensors, detect the amount of paper in the tray.

The actuator [C] has two semicircles, and it is engaged with the lift arm shaft via gears. The paper height sensors detect the paper size depending on the position of the two semicircles. The list shown below shows the detection combination of the two sensors.


The paper remaining status bar is displayed in the tray selection icon on the LCD.

| Remaining paper | Paper height sensor 1 [A] | Paper height sensor 2 [B] |
|-----------------|---------------------------|---------------------------|
|-----------------|---------------------------|---------------------------|

|                          |     |     |
|--------------------------|-----|-----|
| 100%<br>(Status bar x 4) | OFF | OFF |
| 70%<br>(Status bar x 3)  | ON  | OFF |
| 30%<br>(Status bar x 2)  | ON  | ON  |
| 10%<br>(Status bar x 1)  | OFF | ON  |

OFF: No actuator


### 6.10.6 PAPER END DETECTION – TRAYS 1 & 2

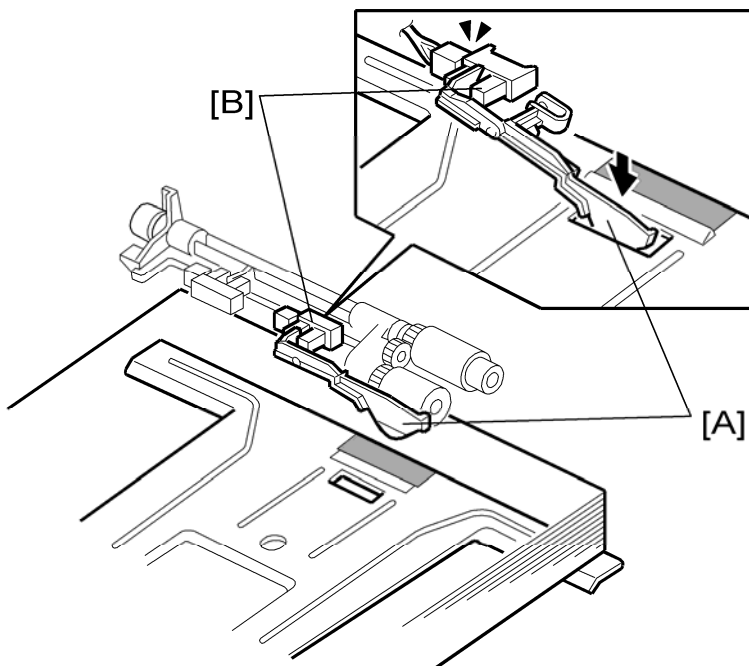

The paper stack raises the paper end feeler [A] and the paper end sensor [B] deactivates if there is some paper in the paper tray.

When the paper tray runs out of paper, the paper end feeler [A] drops into the cutout in the tray bottom plate. At this time the paper end sensor [B] activates.

## 6.10.7 REGISTRATION

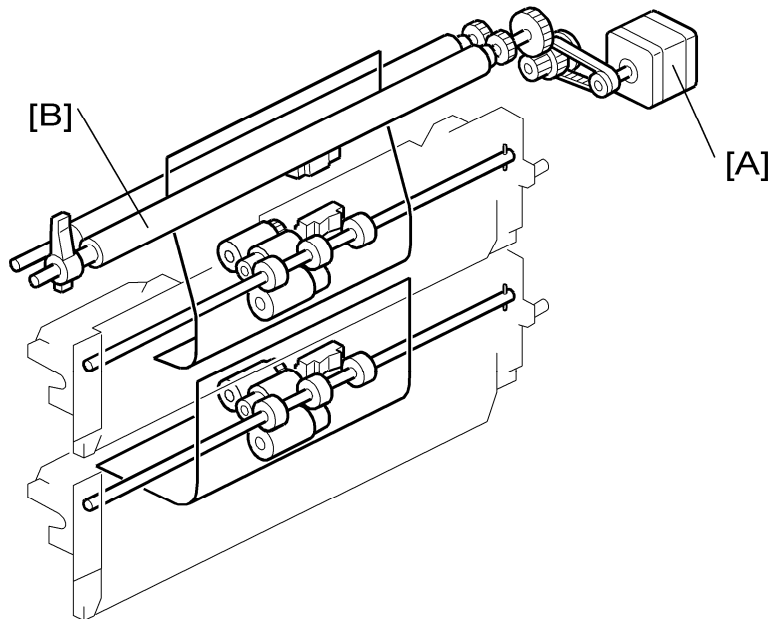

The registration motor [A] drives the registration roller [B] with a complex train of gears. The machine makes a paper buckle at the registration roller to correct paper skew. You can adjust the paper buckle with SP1-003.

## 6.10.8 PAPER FEED LINE SPEED

This machine has two process line speeds (for feed from registration roller to fusing unit). The line speeds depend on the selected mode.


| Mode                   | Line speed (mm/s) | Print speed (ppm)  |
|------------------------|-------------------|--------------------|
| Plain/<br>Middle Thick | 138               | C1a: 25<br>C1b: 30 |
| OHP/Thick              | 77                | 16                 |



## 6.10.9 TRAY LOCK MECHANISM


This machine has two types of tray lock mechanism.

### *Tray Lock at the Front*

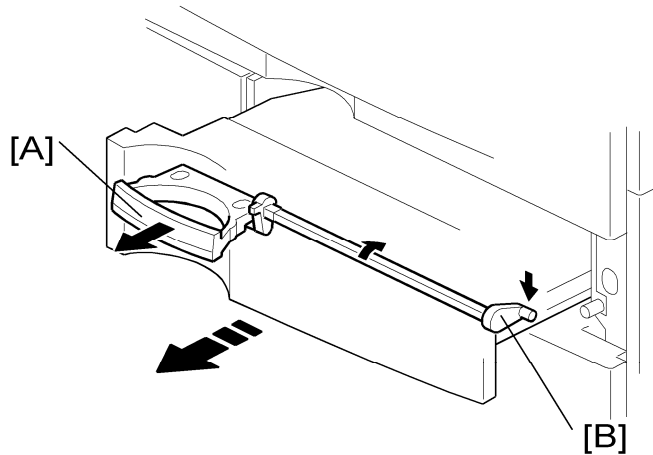

The lock at the front prevents the tray from coming out of the machine during transporting or shipping. When you pull the handle [A], the lock lever [B] is lowered. As a result, you can pull out the tray.

### *Tray Lock at the Rear*

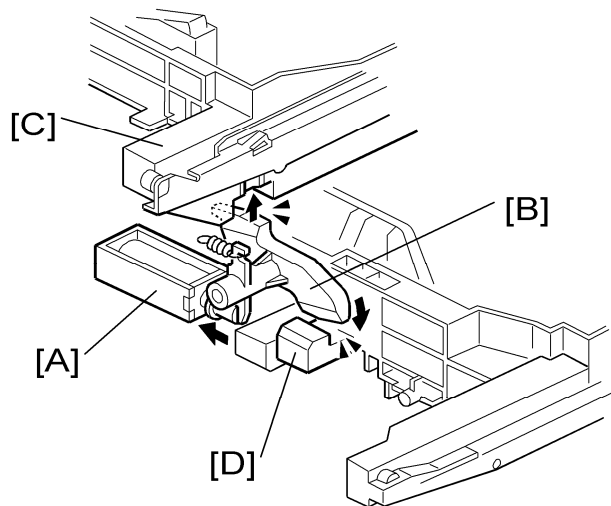


This mechanism is only activated when the machine detects a paper jam. The lock at the rear prevents the tray from coming out from the machine when the paper is jammed. If the tray is removed while the paper is jammed, the paper may be split in two pieces. This makes it difficult to remove the jammed paper.

If the paper is jammed, the tray lock solenoid [A] turns on and activates the lock lever [B].


The lock lever [B] locks tray 1 [C] and tray 2 [D].

### 6.10.10 PAPER DUST COLLECTION

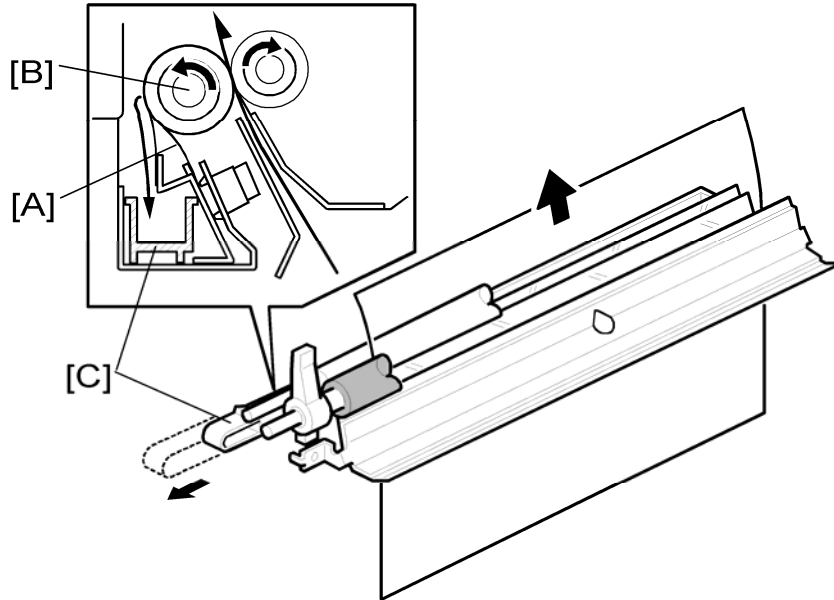

The two mylars [A] scrape the paper dust from the registration idle roller [B]. The paper dust falls down into the paper dust container [C].

### 6.10.11 BY-PASS PAPER SEPARATION

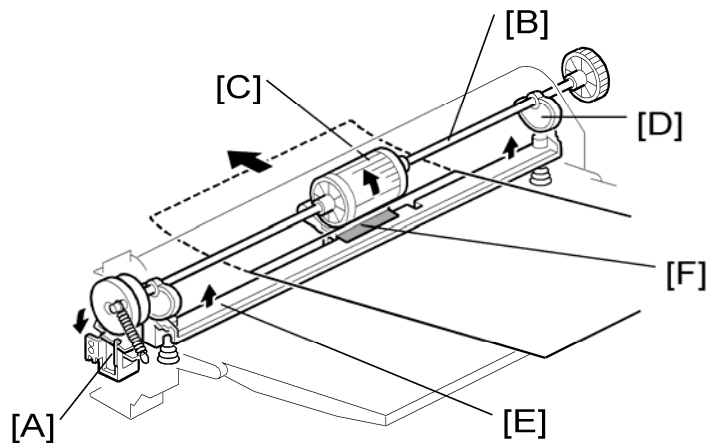


When the paper set sensor detects paper and the machine gets a by-pass printing job, the by-pass solenoid [A] unlocks the feed shaft stopper at the front end of the by-pass feed shaft [B].

The by-pass feed shaft has the by-pass feed roller [C] and two cams [D]. These cams move the paper lift plate [E] up and down. This pushes the paper against the feed roller. To feed the paper, the by pass feed roller makes one turn. After this, the rollers inside the machine can feed the paper, and the solenoid locks the shaft again.

The by-pass tray has the separation pad system. The by-pass feed roller and separation pad [F] feed the top sheet of paper stack.


### 6.10.12 BY-PASS PAPER SIZE DETECTION

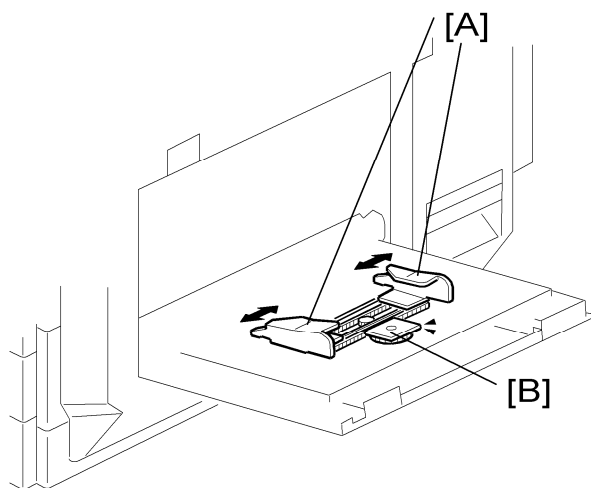

There are two paper side plates [A] on the by-pass tray. These connect with the paper size sensor [B] through a rack-and-pinion mechanism.

## 6.11 FUSING

### 6.11.1 OVERVIEW

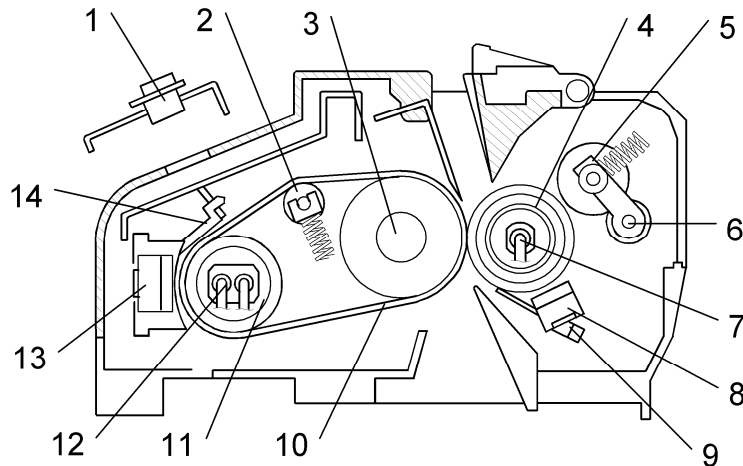


|                                |                                 |
|--------------------------------|---------------------------------|
| 1. Thermopile                  | 8. Pressure roller thermostat   |
| 2. Tension roller              | 9. Pressure roller thermistor   |
| 3. Fusing roller               | 10. Fusing belt                 |
| 4. Pressure roller             | 11. Heating roller              |
| 5. Lubricant roller            | 12. Heating roller fusing lamps |
| 6. Cleaning roller             | 13. Heating roller thermostats  |
| 7. Pressure roller fusing lamp | 14. Heating roller thermistor   |

- A belt fusing system is used. This has a faster warm-up time than a conventional fusing and pressure roller system.
- The heating roller is made of aluminum to increase the temperature of the fusing belt quickly.
- The fusing roller is made of sponge, which flattens slightly, also increasing the fusing nip. This roller does not contain a fusing lamp.
- The heating roller has two fusing lamps (one lamp heats the center and the other lamp heats the ends), and the pressure roller has one fusing lamp.
- The heating roller thermistor, pressure roller thermistor and thermopile control the temperature of these lamps. The thermopile is a non-contact sensor. The thermopile detects the temperature at the center of the fusing unit, and the thermistor detects the temperature at the end.

- Temperature is normally controlled by turning the fusing lamps on and off.
- The lubricant roller supplies a small amount of oil to the pressure roller through the cleaning roller. An oil supply unit is not necessary because the amount of oil supplied to the pressure roller is small.

### 6.11.2 FUSING UNIT DRIVE

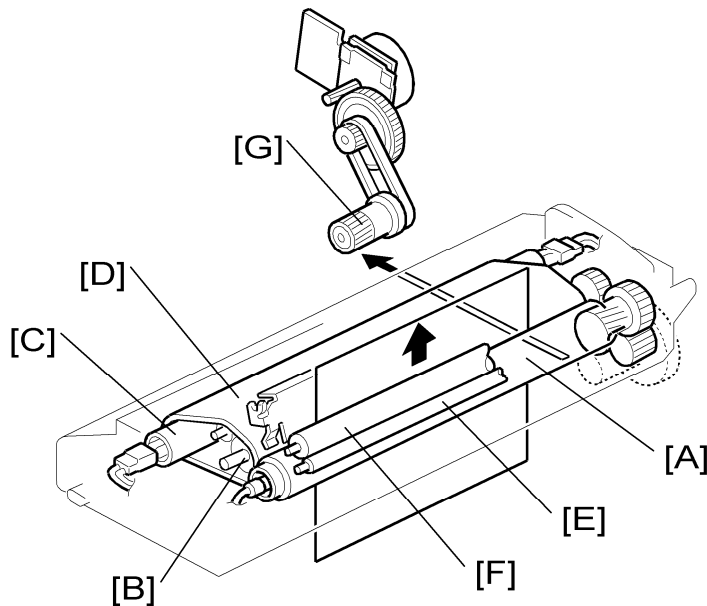

#### ***Belt and Rollers***

The fusing/paper exit motor drives the pressure roller [A] and the fusing roller [B] through the gear train, timing belt and clutch. The heating roller [C] is driven by the pressure with the fusing belt [D]. The cleaning roller [E] and lubricant roller [F] are driven by the friction with the pressure roller.

#### ***Fusing Clutch***

The fusing clutch [G] turns off and cuts the drive power when the fusing unit does not operate. This mechanism prevents wear on the belt and rollers.

#### **Note**


- The fusing clutch turns off when images and patterns are created on the transfer belt during process control and line position adjustment.

#### ***Lubricant Mechanism***

The lubricant roller [F] contains silicone oil in its material. The lubricant roller applies small amount of silicone oil to the pressure roller to reduce the friction between the pressure roller and thermistor.

The cleaning roller [E] cleans the lubricant roller to remove the residual toner stuck to the lubricant roller.


### 6.11.3 PRESSURE RELEASE MECHANISM

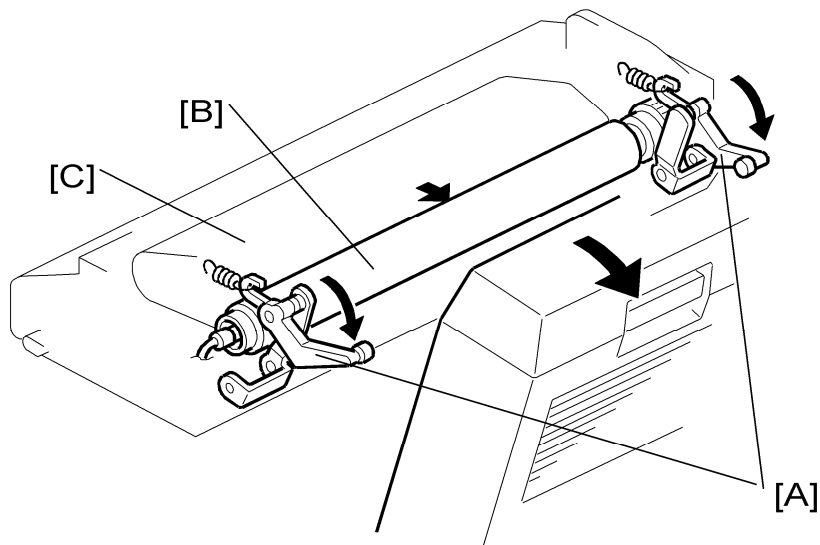

The pressure levers [A] put the proper pressure to the nip between the pressure roller [B] and fusing belt [C]. When releasing these levers, the pressure roller moves away from the fusing belt. If a paper jam occurs in the fusing unit, releasing these levers make jammed paper easily removed.

### 6.11.4 FUSING TEMPERATURE CONTROL

#### *Components*

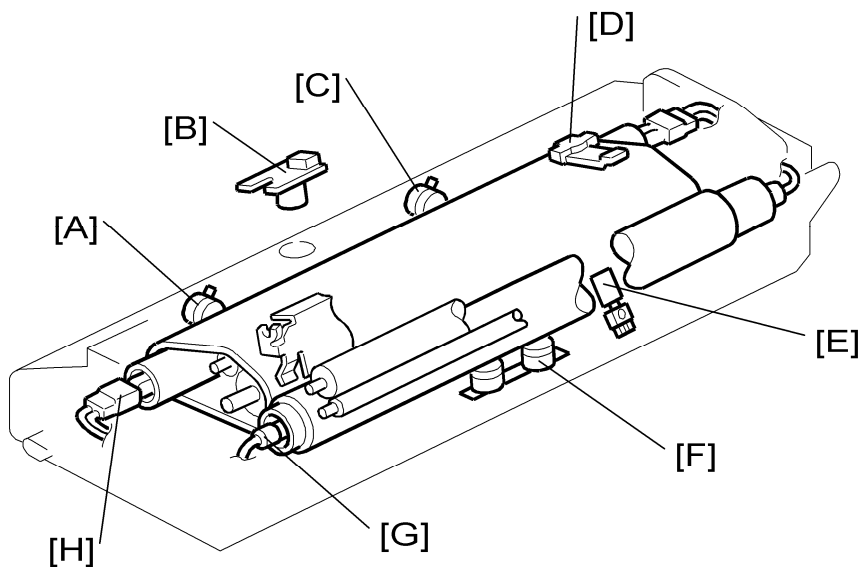

[A]: Thermostat

[B]: Thermopile

[C]: Thermostat

[D]: Thermistor (non-contact)

[E]: Thermistor (contact)

[F]: Thermostat

[G]: Pressure roller fusing lamp

[H]: Heating roller fusing lamps

### ***Fusing Temperatures***

When the main switch turns on, the CPU turns on the fusing lamp. The lamp stays on until the thermistor detects the standby temperature. Then the CPU raises the temperature to the printing temperature.

The fusing temperature for each mode is as follows. These are set by SP 1105.

| <b>Mode</b>                    | <b>Temperature of Heating Roller (°C)</b> | <b>Temperature of Pressure Roller (°C)</b> |
|--------------------------------|---|--|
| Machine ready                  | 170 (SP1105-001)                          | 50 (SP1105-007)                            |
| Paper feed ready               | Machine ready - 10 (SP1105-085)           | --   |
| Print ready                    | Machine ready - 10 (SP1105-002)           | -  |
| Standby mode                   | 165 (SP1105-010, -011)                    | 150 (SP1105-012)                           |
| Energy saver (panel off) mode  | 140 (SP1105-013, -014)                    | 150 (SP1105-015)                           |
| Low power mode                 | 40 (SP1105-016, -017)                     | 100 (SP1105-018)                           |
| Off mode                       | Lamps off (SP1105-019, -020)              | Lamps off (SP1105-021)                     |
| Plain paper                    | 160 (SP1105-030 to -036)                  | --   |
| Thin paper                     | 155 (SP1105-038 to -044)                  | --   |
| Middle thick paper             | 170 (SP1105-109 to -112)                  | --   |
| Thick 1 paper (one-sided)      | 165 (SP1105-046, -050)                    | --   |
| Thick 1 paper (duplex, side 2) | 170 (SP1105-048, -052)                    | --   |

| Mode                            | Temperature of Heating Roller (°C) | Temperature of Pressure Roller (°C) |
|---------------------------------|------------------------------------|-------------------------------------|
| Thick 2 paper                   | 175 (SP1105-054, -055)             | --                                  |
| Thick 3 paper (full color)      | 180 (SP1105-089)                   | --                                  |
| Thick 3 paper (black-and-white) | 170 (SP1105-090)                   | --                                  |
| OHP (full color)                | 175 (SP1105-056)                   | --                                  |
| OHP (black-and-white)           | 165 (SP1105-057)                   | --                                  |
| Special paper                   | 165 (SP1105-058 to -080)           | --                                  |

**- Paper Weights -**

- Thin paper: Below 60 g/m<sup>2</sup> (16 lb)
- Normal plain paper: 60 – 81 g/m<sup>2</sup> (16 – 22 lb.)
- Middle Thick: 82 – 105 g/m<sup>2</sup> (22 – 28 lb.)
- Thick 1: 106 – 169 g/m<sup>2</sup> (28.5 – 44.9 lb.)
- Thick 2: 170 – 219 g/m<sup>2</sup> (45 – 58 lb.)
- Thick 3: 220 – 253 g/m<sup>2</sup> (58.5 – 67 lb.)

***Temperature Corrections***

**- Corrections for ambient temperature (SP 1112) -**

- If the room temperature is below 17°C, the heating roller temperature is increased by 5°C.
- If the room temperature is above 30°C, the heating roller temperature is decreased by 5°C.

**- First print of a job (SP 1114) -**

- The heating roller temperature is increased by 10°C for the first 2 seconds of the job.

**- Corrections during the job (SP 1116) -**

- The fusing temperature can be reduced two times during the job. There are adjustments for the temperature at the center and at the ends. There are also adjustments for paper wider than 226 mm, and less than 226 mm.
- With the default settings, fusing temperature at the center for paper widths less than



226 mm is reduced by 5°C after 30 seconds, and again reduced by 5°C after 60 seconds.

### ***Overheat Protection***

The CPU cuts power to the fusing lamp at the following times:

- The heating roller or pressure roller temperature becomes higher than 230°C for one second or more  
SC 543 and SC 553 for the heating roller or SC 563 for the pressure roller show for this condition.
- The heating roller or pressure roller temperature reaches 250°C.  
SC 544 and SC 554 for the heating roller or SC 564 for the pressure roller show for this condition.

The following components are used if thermistor or thermopile overheat protection fails.

- Two thermostats for the heating roller and two thermofuses for the pressure roller in series with the common ground line of the fusing lamp.
  - If one of the thermostat temperatures becomes higher than 234°C, it opens and cuts power to the fusing lamp.  
If the other thermostat temperature becomes higher than 235°C, it also opens and cuts power to the fusing lamp.
  - If either of the two thermofuse temperatures becomes higher than 154°C, the thermofuse opens and cuts power to the fusing lamp.




- These thermofuses make a series circuit.

In either case, the machine stops operation.

## 6.11.5 ENERGY SAVER MODES

### Overview

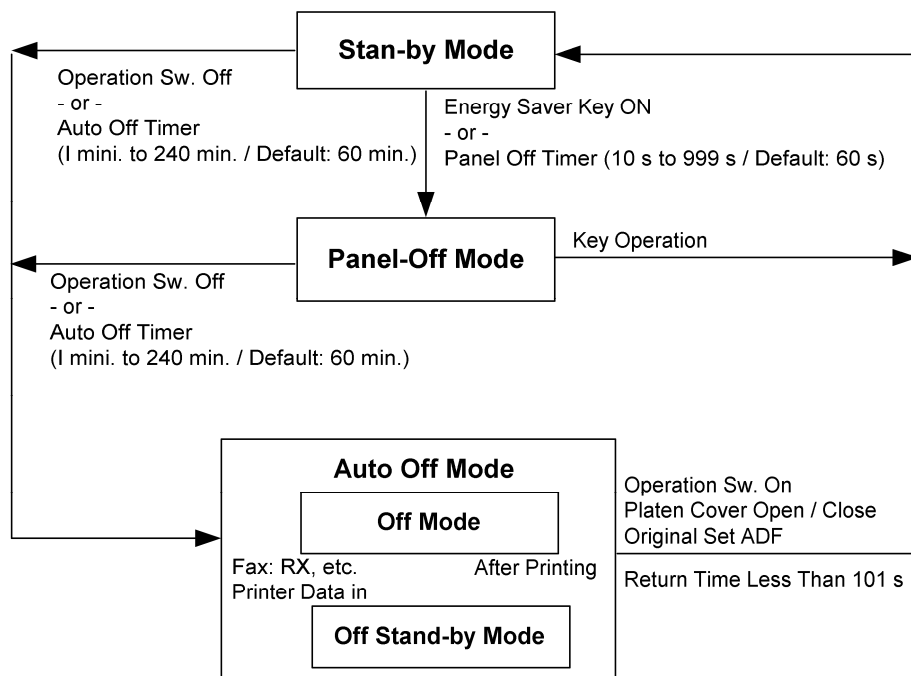

When the machine is not being used, the energy saver function reduces power consumption by decreasing the fusing temperature.

This machine has the following two types of energy saver modes:

1. Panel-off mode
2. Auto Off mode

These modes are controlled by the following UP and SP modes:

- Panel off timer: User Tools – System Settings – Timer Setting – Panel Off Timer
- Auto off timer: User Tools – System Settings – Timer Setting – Auto Off Timer

### **Panel Off Mode**

#### **Entering the panel off mode**

The machine enters the panel off mode when one of the following is done:

- The panel off timer runs out.
- The Clear Mode/Energy Saver Key is held down for one second.

If the value in the panel off timer is larger than that in the auto off timer, the machine goes into the auto off mode. At this time it does not go into the panel off mode. To make the panel off mode effective, specify a value smaller than the values in the auto off timer.

#### **What happens in panel off mode**

When the machine is in the panel off mode, each of the fusing lamps are kept at the

temperatures indicated in the table at the bottom of the page. The operation panel indicators are turned off except for the Energy Saver LED and the Power LED.

If the controller receives an image print out command from an application program (e.g. to print incoming fax data or to print data from a PC), the temperature of each fusing lamp rises to print the data.

### Return to stand-by mode

The machine returns to stand-by mode if one of the following is done:

- The Clear Mode/Energy Saver Mode key is pressed
- Any key on the operation panel or touch panel screen is pressed
- An original is placed in the ADF
- The ADF is lifted
- A sheet of paper is placed in the by-pass feed table

The return time from the panel off mode is less than 30 seconds.

| Mode      | Operation Switch | Energy Saver LED | Fusing Temperature                              | +24V | System +5V |
|-----------|------------------|------------------|---|------|------------|
| Panel off | On               | On               | Heating roller: 100°C<br>Pressure roller: 130°C | On   | On         |

### Auto Off Mode

There are two Auto Off modes: Off Stand-by mode and Off mode. The difference between Off Stand-by mode and Off mode is the machine's condition when it enters the Auto Off mode.

#### Entering off stand-by and off modes

The machine enters the Off Stand-by mode or Off Mode when one of the following is done.

- The auto off timer runs out.
- The operation switch is pressed to turn the power off.

If one or more of the following conditions exists, the machine enters Off Stand-by mode. If none of these conditions exist, the machine enters the Off Mode.

- Error or SC condition
- Image data is stored in the memory
- During memory TX or polling RX
- The handset is off hook
- An original is in the ARDF

- The ARDF is open

### **Off Stand-by mode**

The system +5V is still supplied to all components. When the machine detects a ringing signal or receives a stream of data for a print job, the +24V supply is activated. At this time the machine automatically prints the incoming message or executes the print job.

### **Off Mode**

The system +5V supply also turns off. However, +5VE (+5V for energy saver mode) is still activated. When the machine detects a ringing signal, off-hook signal, or receives a print job, the machine returns to the Off Stand-by mode and the system +5V and +24V supplies are activated.

### **Returning to stand-by mode**

The machine returns to stand-by mode when the operation switch is pressed. The return time is less than 45 seconds.

| <b>Mode</b>  | <b>Operation Switch</b> | <b>Energy Saver LED</b> | <b>Fusing Lamp</b>     | <b>+24V</b> | <b>System +5V</b> | <b>Note</b>      |
|--------------|-------------------------|-------------------------|------------------------|-------------|-------------------|------------------|
| Off Stand-by | Off                     | Off                     | Off (On when printing) | On          | On                |                  |
| Off          | Off                     | Off                     | Off                    | Off         | Off               | +5VE is supplied |

## **6.11.6 NEW UNIT DETECTION**

### ***Fusing Unit, Image Transfer Belt Unit***


The fusing unit and image transfer belt unit each have a fuse. When the machine detects that the fuse is intact, the machine determines that a new unit is installed. Then a short time later, the fuse blows.

### ***PCU, Development Unit***

The development unit (as part of the PCU, or as a separate development unit) contains an ID chip. The ID chip contains information that tells the machine that the unit is new.

## 6.12 PAPER EXIT

### 6.12.1 OVERVIEW

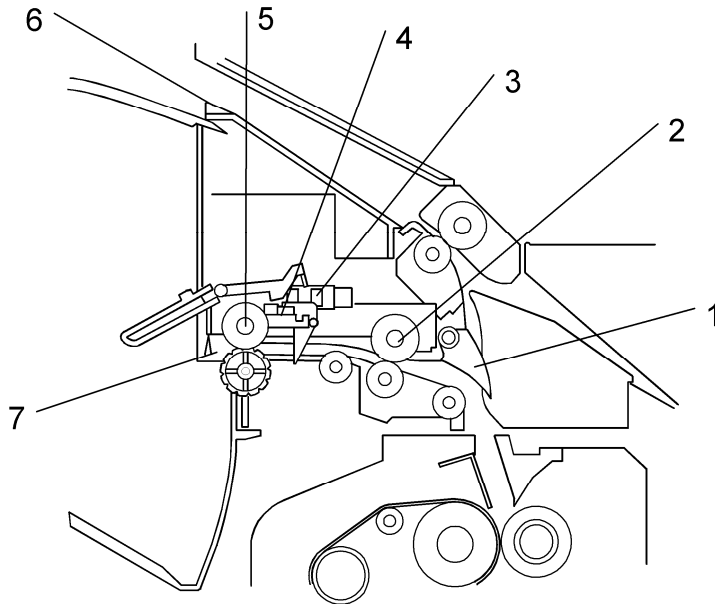

|  |  |
|--|--|
| 1. Junction gate<br>2. Paper exit roller 1<br>3. Paper overflow sensor<br>4. Paper exit sensor | 5. Paper exit roller 2<br>6. To the inverter tray<br>7. To the standard tray |
|--|--|

After fusing, the junction gate feeds paper to the standard paper tray or the inverter tray.


The junction gate solenoid controls the junction gate as follows:

- To the standard paper tray: The junction gate solenoid is off (default)
- To the inverter tray: The junction gate solenoid is on.

The fusing/paper exit motor drives the paper exit rollers.

## 6.12.2 JUNCTION GATE MECHANISM

### *To the Standard Tray*

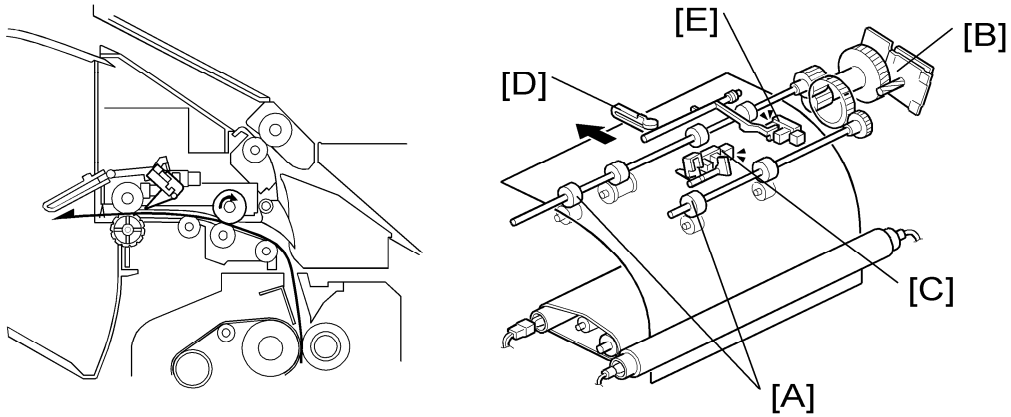


The paper exit rollers [A] feed paper to the standard tray. These rollers are driven by the fusing/paper exit motor [B].

When a sheet of paper stays in the paper exit unit, the paper exit sensor [C] detects the paper jam and "xxxxx" is displayed.

When outputs push up the tray full actuator [D], the paper overflow sensor [E] detects that standard trays is full of outputs and "xxxx" is displayed after a job end.

### *To the Inverter Tray*


---

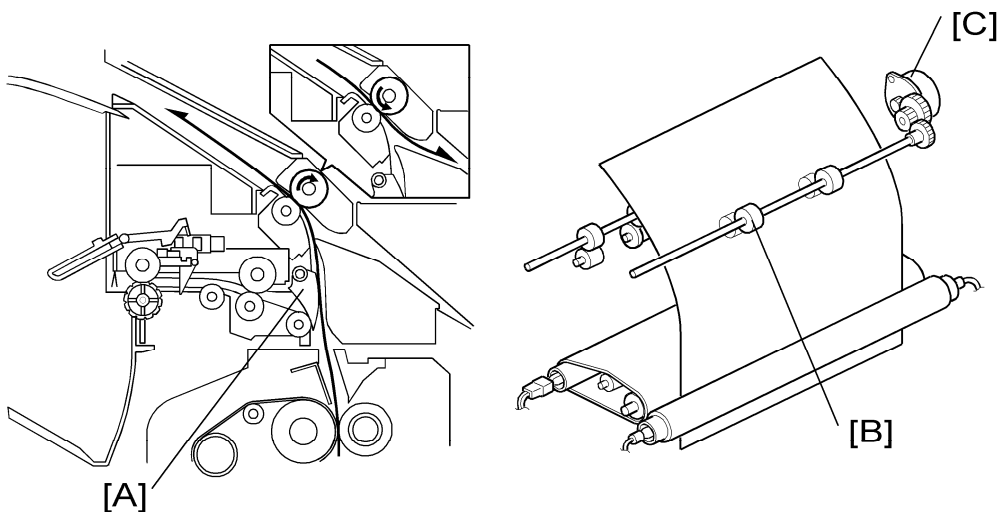

When paper is fed to the inverter tray, the junction gate [A] closes the paper path to the standard tray. And then, the inverter roller [B] feeds paper to the inverter tray. This roller is driven by the duplex inverter motor [C].

## 6.13 DUPLEX UNIT


### 6.13.1 OVERVIEW

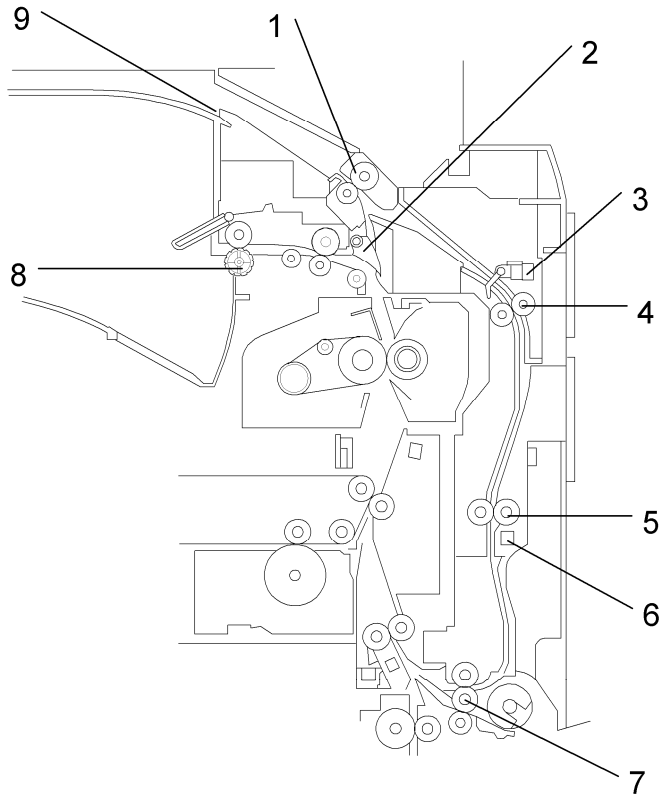

|                              |                              |
|------------------------------|------------------------------|
| 1. Duplex inverter roller    | 6. Duplex exit sensor        |
| 2. Junction gate             | 7. Duplex transport roller 3 |
| 3. Duplex entrance sensor    | 8. Standard tray             |
| 4. Duplex transport roller 1 | 9. Inverter tray             |
| 5. Duplex transport roller 2 |                              |

- To print on the second side, the duplex inverter roller inverts the paper from the fusing unit and feeds it to the duplex unit.
- The duplex unit feeds the inverted paper back to the paper feed section.
- When both sides have been printed, the duplex inverter unit feeds the paper out to the standard tray.

## 6.13.2 DUPLEX DRIVE

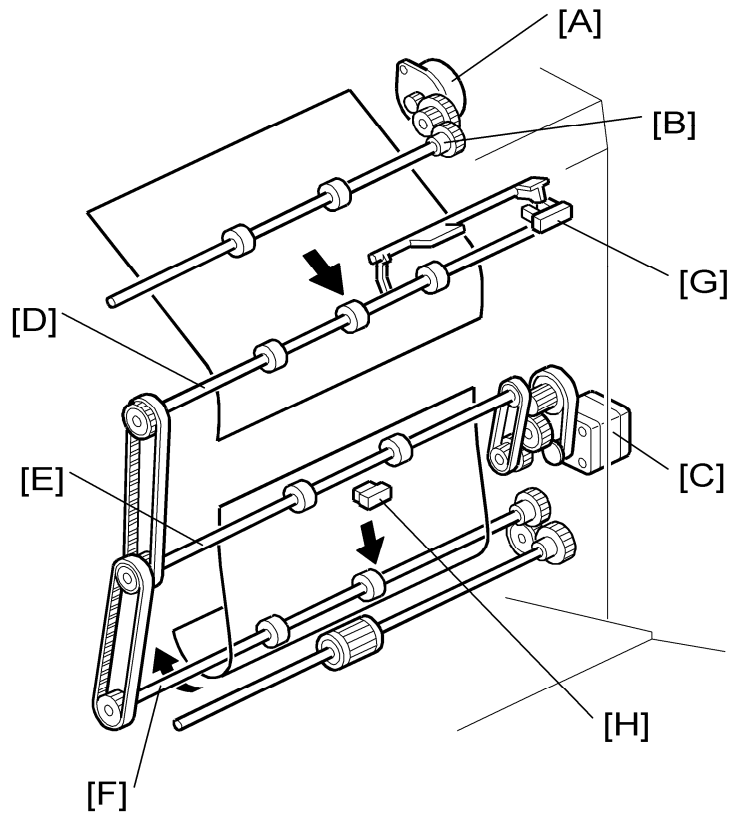

The duplex inverter motor [A] drives the following:

- Duplex inverter roller [B]


The duplex/bypass motor [C] drives the following:

- Duplex transport roller 1 [D]
- Duplex transport roller 1 [E]
- Duplex transport roller 1 [F]

The duplex entrance sensor [G] and duplex exit sensor [H] control the interleave movement and detect paper jams.




### 6.13.3 INVERTER MECHANISM

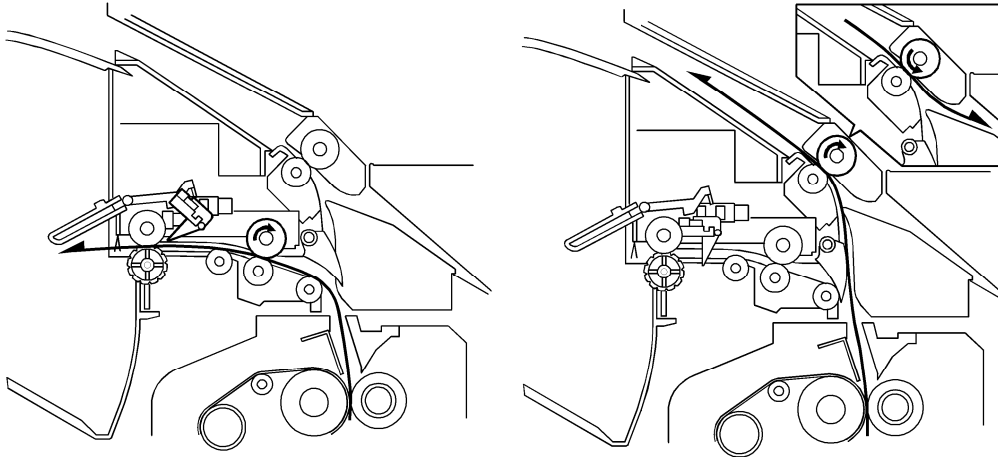

This machine uses the above switch back system for duplex printing. The drawing above right shows the paper feed for duplex printing.


## 6.13.4 DUPLEX OPERATION

Up to A4/LT (8½" x 11") LEF

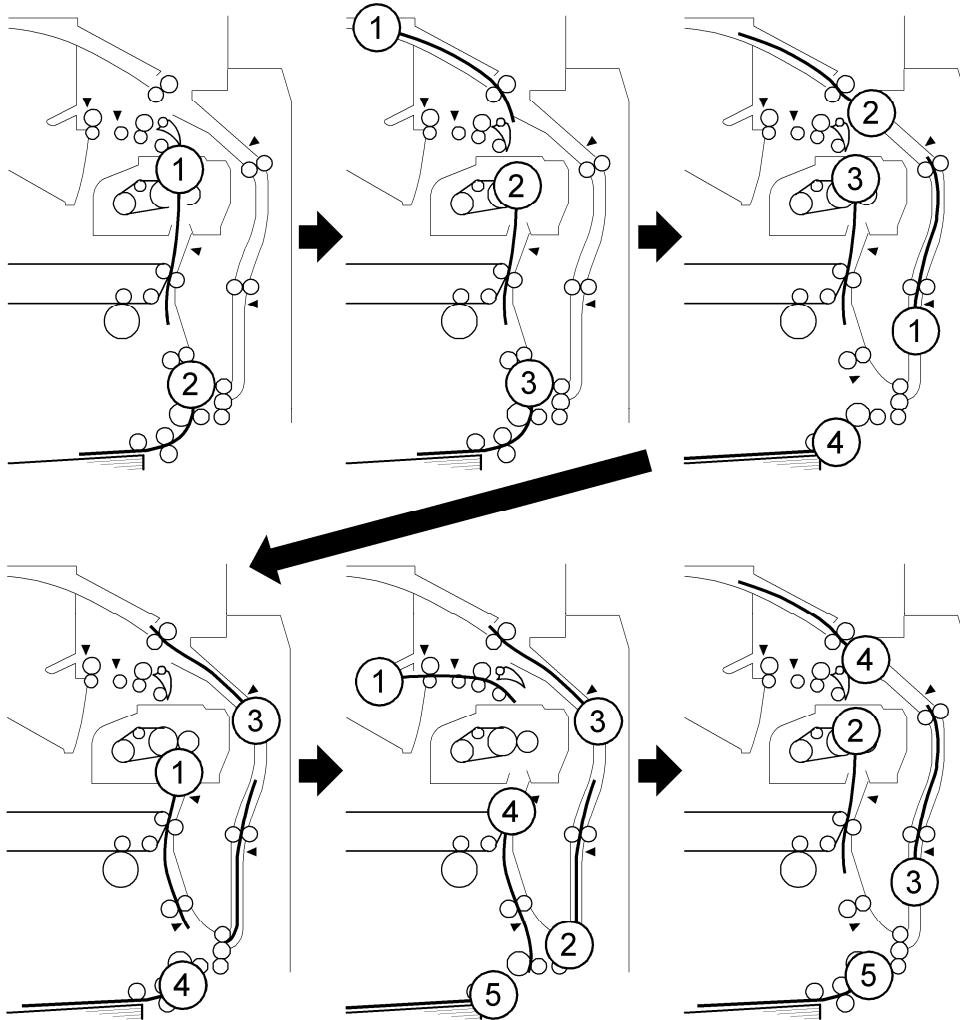


There are three sheets of paper in the paper feed path at the same time. The interleave method is used.

The drawing above shows the paper movement with the interleave method for three sheets of paper. The printing is done as follows:

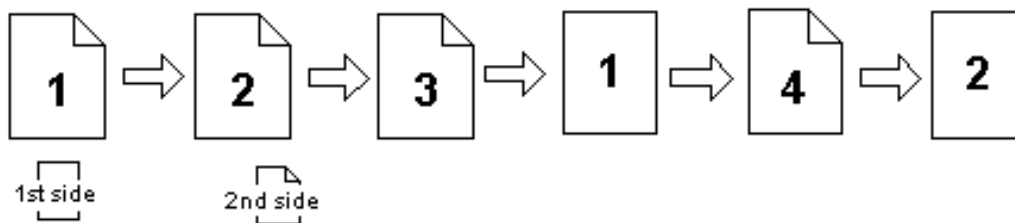


**From A4/LT (8<sup>1</sup>/<sub>2</sub>" x 11") LEF to 400mm length**

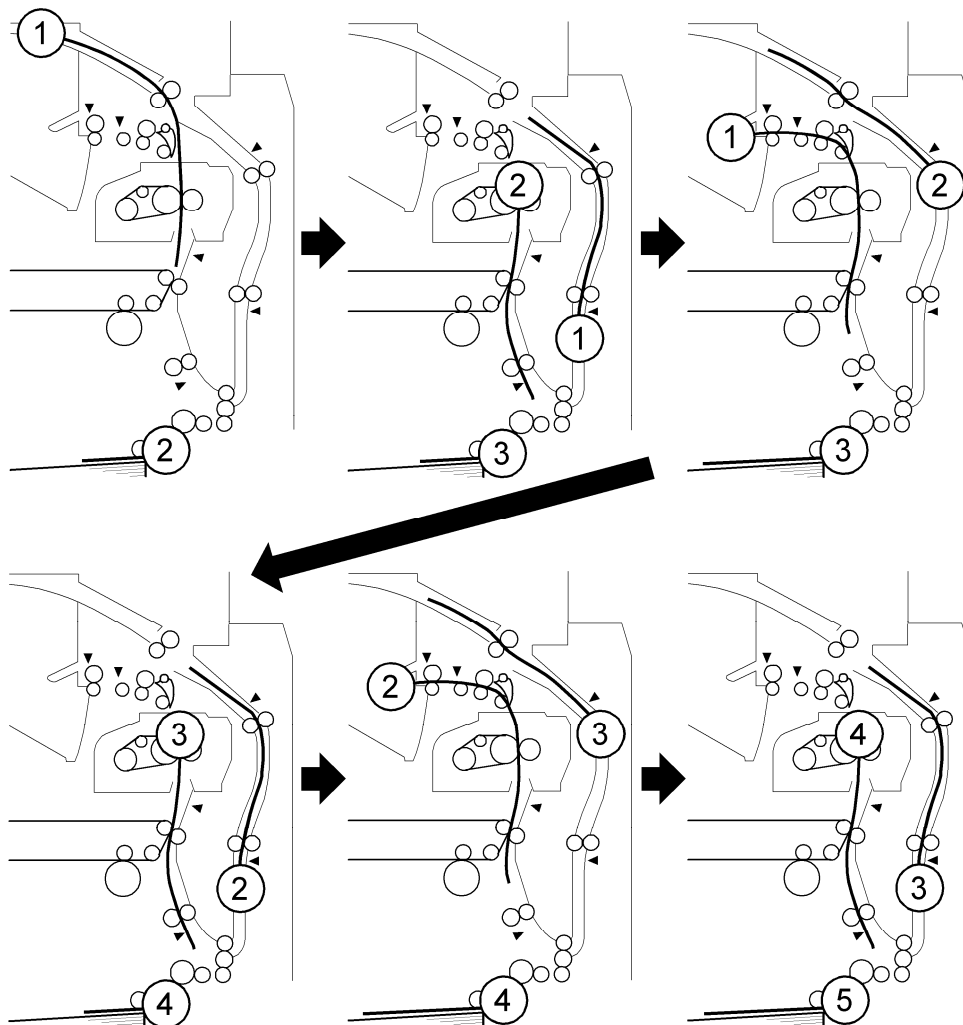

There are two sheets of paper in the paper feed path at the same time. The interleave method is used. For sheets longer than 400 mm, there is no interleaving.


The drawing above shows the paper movement with the interleave method for two sheets of paper. The printing is done as follows:

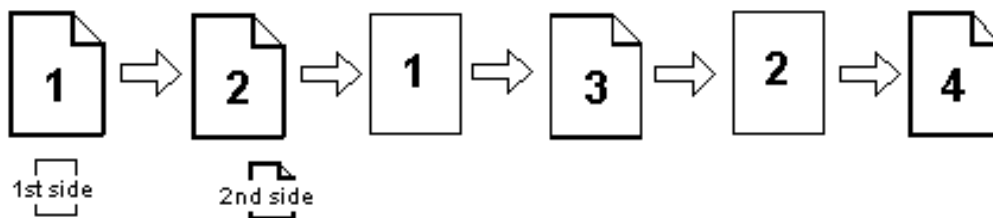

Detailed Descriptions

## 6.14 PRINTER FUNCTIONS

### 6.14.1 OVERVIEW

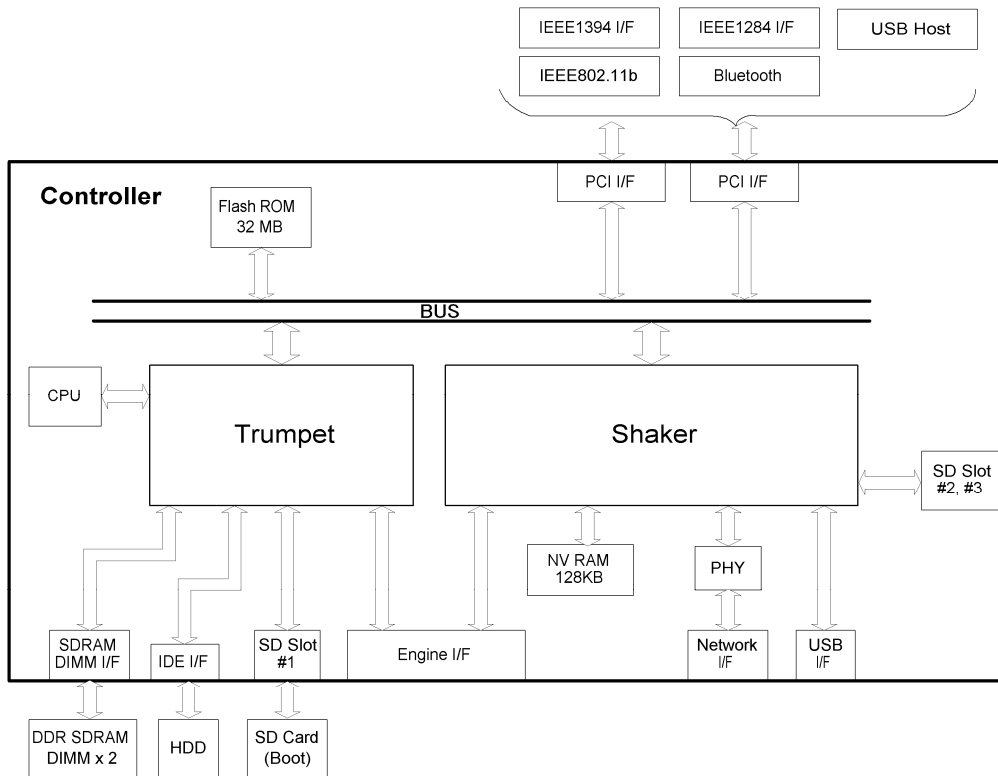

The controller is based on the GW architecture.

**CPU:** RM7035C-600 MHz

**ASIC:**

This is one of the GW-architecture ASICs. : GW architecture ASIC. It controls the interface with the CPU and controls these functions: memory, local bus interrupts, PCI bus, video data, HDD, SD card for booting and image processing.

**SHAKER:**

IO control ASIC. It controls the network, operation panel, USB port, SD cards.

**SDRAM DIMM (2 slots):**

The controller has 1024-MB resident SDRAM.

**Flash ROM:**

32 MB flash ROM programmed for the boot system.

**SD card (Boot):**

The 32 MB SD card installed in the SD card slot #1 includes the program for system, network application, printer, PCL5c, PS3 and RPCS applications and internal printer fonts.

**NVRAM:**

128 KB for the machine parameters, logged data and a record of the number of pages printed for each “User Code”.

**Network Interface:**

100BASE-TX/10BASE-T

**USB Interface:**

USB2.0

**IEEE 1394 Interface (option):**

Supports a data transfer speed of up to 400 Mbps.

**IEEE 1284 Interface (option):**

This is a parallel printer port.

**IEEE 802.11b (option):**

This lets you connect the machine to a wireless network.

**Bluetooth (option):**

This lets you connect the machine to a Bluetooth network.

**USB Host (option):**

This is for the connection of an external device (digital camera etc.).

| I/F Slot | Item                                   |
|----------|--|
| Slot A   | IEEE 1394 or USB Host                  |
| Slot B   | IEEE 1284 or IEEE 802.11b or Bluetooth |
| Slot C   | File format converter                  |

**HDD:**

3.5" HDD (40 GB) can be connected using the IDE interface.

**SD Card slots:**

- Slot 1: Boot SD card (standard printer/scanner application SD card)
- Slot 2: Optional application (for PostScript 3, Data Overwrite Security Unit or PictBridge)
- Slot 3: Firmware upgrade or Browser Unit (RDS – Ricoh Document Server)

## 6.14.2 HARD DISK

### Overview

The capacity of the hard disk is 40 GB. The controller partitions it into several drives and allocates them for different functions. You can initialize these partitions as necessary (see SP5-832). The table lists the contents of the hard disk.

| Contents         | Capacity (MB) | Volatile/<br>Nonvolatile | Initialization<br>(SP5-832) |
|------------------|---------------|--------------------------|-----------------------------|
| Images (IMH)     | 18,340        | Nonvolatile              | 002                         |
|                  | 12,844        | Volatile                 |                             |
| Thumbnails       | 2400          | Nonvolatile              | 003                         |
| Job Logs         | 200           | Nonvolatile              | 004                         |
| Printer fonts    | 500           | Nonvolatile              | 005                         |
| User information | 300           | Nonvolatile              | 006                         |
| Mail RX data     | 200           | Nonvolatile              | 007                         |
| Mail TX data     | 1,000         | Nonvolatile              | 008                         |
| Designer data    | 512           | Nonvolatile              | 009                         |
| Logs             | 150           | Nonvolatile              | -                           |
| Net interfaces   | 500           | Nonvolatile              | 011                         |

Volatile: The data is lost when you turn the main switch off.

Nonvolatile: The data is not lost when you turn the main switch off.

## 6.14.3 CONTROLLER FUNCTIONS

### Sample Print

This feature was formerly known as “Proof Print.” This function gives users a chance to check the print results before starting a multiple-set print run.

- The size of the hard disk partition for the sample print feature is 16.8 GB. This partition is also used by the collation and locked print features.
- The partition can hold up to 100 files, including files stored using locked print.
- The partition can hold a log containing up to 30 errors, excluding jobs stored using

locked print.

- The maximum number of pages is 2,000, including jobs using locked print and collation.

### ***Locked Print***

Using this feature, the print job is stored in the machine but will not be printed until the user inputs an ID and a password at the machine's operation panel. These ID and password must match the ID and password that has been input with the printer driver.

- Stored data is automatically deleted after it is printed.
- Stored data can be manually deleted at the operation panel.
- The partition can hold up to 100 files, including files stored using sample print.
- The partition can hold a log containing up to 30 errors, excluding logs stored using locked print.
- The maximum number of pages is 2,000, including jobs using sample print and collation.
- Locked print uses the same hard disk partition (16.8 GB) as sample print and collation.

### ***Hold Print***

Using this feature, the print job is stored in the machine but will not be printed until the user inputs an ID at the machine's operation panel. This ID must match the ID that has been input with the printer driver.

- Stored data is automatically deleted after it is printed.

### ***Stored Print/ Store and Print***

Using this feature, stored files can be printed repeatedly without PC operation. Stored files can also be printed while the controller is receiving files, even if the file data has not been completely received.

## **6.14.4 JOB SPOOLING**

Print data can be spooled (stored) in the machine's HDD, and the machine starts to print when data transfer is complete. Since the machine stores all data first before printing, the host computer is freed up more quickly.

#### Note


- The supported print protocols are IPP and LPR.
- The default setting for this feature is "off". The user must switch it on using UP mode to enable this feature.
- The size of the HDD partition for job spooling is 1 GB.
- The partition can hold up to 150 jobs.

## Related SP Modes

Job spooling can be turned on and off using the SP mode (SP5-828-069) for each protocol. The machine does not spool jobs when job spooling is switched off with the SP mode, even when the customer switches it on with the user mode.


## Paper Source Selection

### Tray Priority (Auto Tray Select)

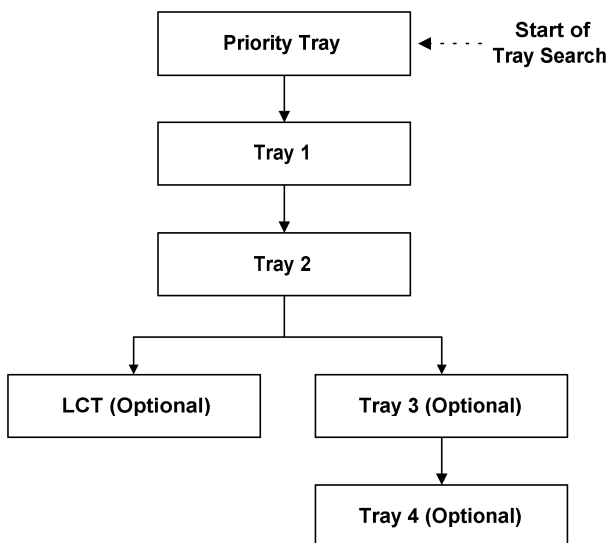

The "Tray Priority" setting determines the start of the tray search when the user selects "Auto Tray Select" with the driver. The machine searches paper trays for the specified paper size and type.

When no tray contains paper that matches the paper size and type specified by the driver, the controller stops printing until the user loads the correct paper.


The "Tray Priority" setting can be specified in the following menu:  > System Settings > Tray Paper Settings > Paper Tray Priority: Printer.

#### Note

- The by-pass feed table is not part of the tray search.

### Tray Locking

If "Tray Locking" is enabled for a tray, the controller skips the "locked" tray in the tray search process.

The "Tray Locking" setting can be specified in the following menu:  > System Settings > Tray Paper Settings > Paper Type: Tray # > Apply Auto Paper Select (where the "#" indicates the tray number).

The by-pass feed table cannot be unlocked (Tray Locking is always enabled).

### Manual Tray Select

If the selected tray does not have the paper size and type specified by the driver, the




controller stops printing until the user loads the correct paper.

## Auto Continue

### Overview

When this function is enabled, the machine waits for a specified period (0, 1, 5, 10, 15 minutes) for the correct paper size and type to be set in the tray. If the timer runs out, the machine starts printing, even if there is no paper tray which matches the paper size and paper type specified by the driver.


The machine searches for a paper tray in the following way:

- The interval can be set with the following menu:  > Printer Features > System > Auto Continue.

#### Note

- The default setting for this feature is “Off.”

### Auto Tray Select

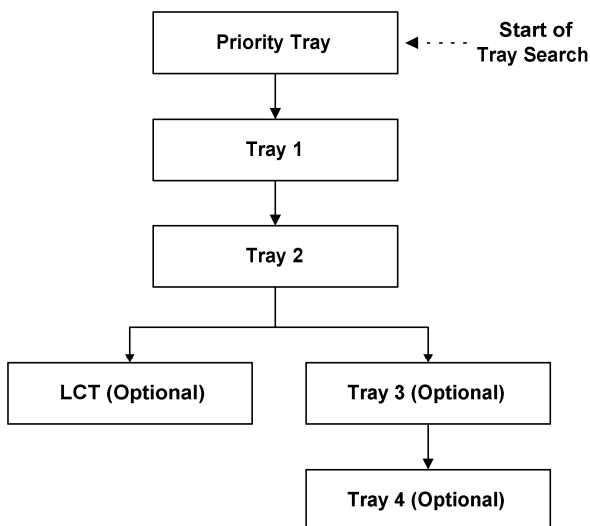

When there is no paper tray that matches the paper size and type specified by the driver, the machine searches for any tray that has paper, and prints from the first tray it finds. The start of the tray search is the tray selected as the priority tray.

### Manual Tray Select

The machine prints from the selected tray even if the paper size and type do not match the setting specified from the driver.

If “Auto Continue” is disabled, the machine waits until the user loads the correct paper in the tray.

## 6.15 PICTBRIDGE

### 6.15.1 GENERAL FUNCTION

The PictBridge function can make a PictBridge-standard DSC (Digital Still Camera) connect with the machine using a USB cable. As a result, photographs in the DSC can be printed directly with a machine that has the PictBridge application.

#### *Photo image format*

- Exif/JPEG
- JFIF
- TIFF/MMR (Ricoh cameras only)

#### Note

- It is possible to connect more than one DSC at the same time, but it is only possible to print from one DSC. If more than one DSC is connected, you can only print from the first DSC that was connected.

### 6.15.2 PRINTING FUNCTION LIST

| Name                        | Requirement for PictBridge Standard | AT-C1         |
|-----------------------------|-------------------------------------|---------------|
| Single image printing       | Must                                | Available     |
| Selected image printing     | Must                                | Available     |
| DPOF printing               | Recommended                         | Not available |
| All image printing          | Must                                | Available     |
| Index printing              | Recommended                         | Available     |
| Trimming                    | Recommended                         | Available     |
| Multiple number printing    | Must                                | Available     |
| Date and file name printing | Recommended                         | Available     |
| Paper size                  | Must                                | Available     |
| Image print size            | Recommended                         | Available     |
| Multi-Image-Layout (N-up)   | Recommended                         | Available     |


|                                  |             |               |
|----------------------------------|-------------|---------------|
| Edge-to-edge borderless printing | Recommended | Not available |
| Printing quality                 | Optional    | Available     |
| Color matching                   | Optional    | Available     |
| Paper type specification         | Optional    | Available     |
| Form printing                    | Ricoh       | Available     |
| Camera memo printing             | Ricoh       | Available     |

### 6.15.3 PRINTING FUNCTION DESCRIPTION


#### ***Single image printing***

This function can print an image displayed on the DSC. The image is enlarged and rotated to match the paper, but the image aspect ratio is not changed.

#### **Landscape**

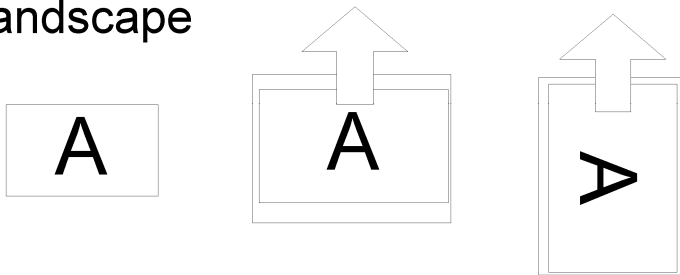

#### **Portrait**

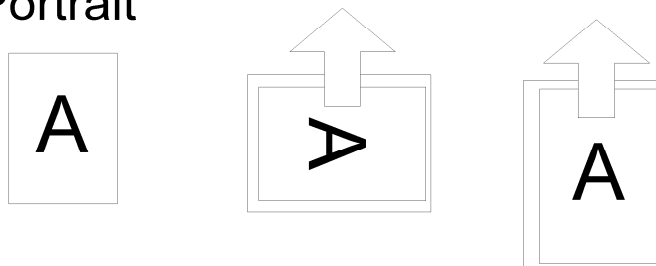

#### ***Selected image printing***

This function can print two or more images selected from the display on the DSC. If landscape and portrait images are mixed in one job, the paper feed direction is fixed following the first image direction.

#### ***DPOF (Digital Print Order Format) printing***

This function is not available in this machine.

#### ***All image printing***

This function can print all images in the DSC.

## ***Index printing***

This function can print all images as thumbnail photos with index format. The size of the photos is fixed at 20 mm x 20 mm.

| <b>Paper Size</b> | <b>Number of Photos</b> |         |
|-------------------|-------------------------|---------|
| A3                | 192                     | 16 x 12 |
| A4                | 96                      | 12 x 8  |
| A5                | 40                      | 8 x 5   |
| Letter            | 80                      | 10 x 8  |
| B4                | 140                     | 14 x 10 |

### **↓ Note**

- Some digital cameras have a limitation on the maximum number of photos in a print job. If the number of photos in a page is more than the maximum photo number in a job, a form feed may be inserted between the thumbnail photos.

## ***Trimming***

This function can print a part of an image by specifying a clip area.

## ***Multiple number printing***


This function can print multiple images from the same image according to ordered number and layout. If the photos are printed with a multiple number printing function, and there are an odd number of photos in a page, the photo will not be printed.

### **↓ Note**

- If a layout is not selected (like 2 up or 4 up for example), each image will be printed on one page.


**Example 1:** Photo A: 2, Photo B: 3 with 4-up printing

In this case, Page 2 will not be printed.

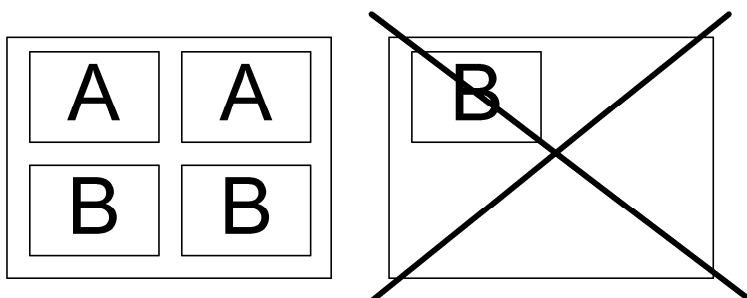

**Example 2:** Photo A: 2, Photo B: 4 with 2-up printing

In this case, all photos will be printed.

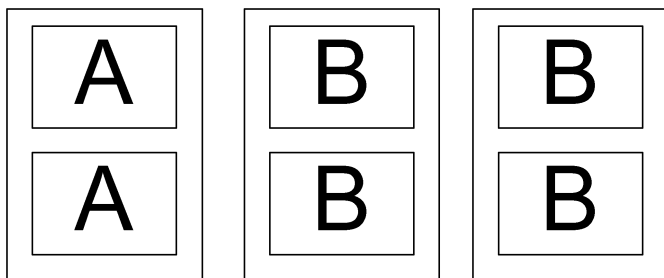


### ***Date and file name printing***

This function can impose a date stamp and file name under each image. A data stamp and file name are imposed in the following style:

- Position: It is centered under each image.
- Font color: Black
- Font type: Arial
- Font size: 6 pt to 16 pt depending on printing size

### **Image print size (Fixed size printing)**

---

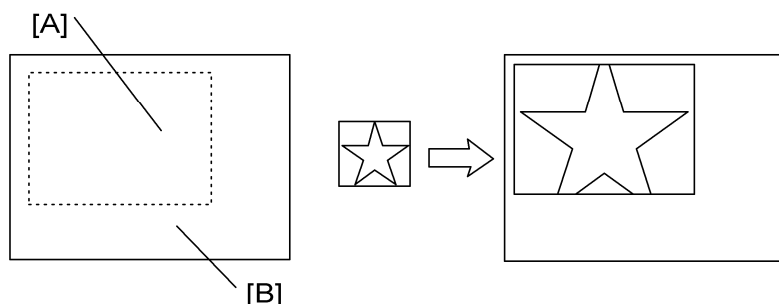

[A]: Specified printing size, [B]: Paper

This function can print images with the size specified on the camera.

- The image is enlarged to match the specified size.
- The image is not rotated.
- The image aspect ratio is not changed.
- If the specified aspect ratio is different from the image aspect ratio, the image aspect ratio is automatically adjusted to the specified aspect ratio even this deletes part of the image.


#### **↓ Note**

- If the new ratios of height and width magnification are different, the larger magnification ratio is used to adjust the image to the specified printing size.
- An error occurs if the specified size is larger than the actual paper size.

|               |             |
|---------------|-------------|
| 3.25" x 2.5"  | 8cm x 6cm   |
| 5" x 2.5"     | 10cm x 7cm  |
| 6" x 4"       | 13cm x 9cm  |
| 7" x 5"       | 15cm x 10cm |
| 10" x 8"      | 18cm x 13cm |
| 254mm x 178mm | 21cm x 15cm |
| 110mm x 74mm  | 24cm x 18   |
| 89mm x 55mm   |             |
| 148mm x 100mm |             |

### ***Multi-Image-Layout (N-up)***

This function can print multiple images on the specified paper.

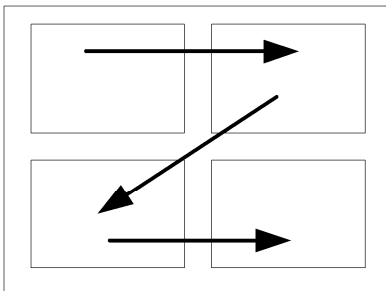

**4-up**

The number and arrangement of images can be specified as shown in the following list.

| <b>Number of images</b> | <b>Vertical x Horizontal images</b> | <b>Paper direction</b> |
|-------------------------|-------------------------------------|------------------------|
| 2                       | 2 x 1                               | Portrait               |
| 4                       | 2 x 2                               | Landscape              |
| 8                       | 4 x 2                               | Portrait               |
| 9                       | 3 x 3                               | Landscape              |

|    |       |           |
|----|-------|-----------|
| 16 | 4 x 4 | Landscape |
| 25 | 5 x 5 | Landscape |
| 32 | 8 x 4 | Portrait  |
| 36 | 6 x 6 | Landscape |
| 49 | 7 x 7 | Landscape |
| 64 | 8 x 8 | Landscape |

The number of images printed on a page can be as shown in the following list.

| Paper size    | Number of images               |
|---------------|--------------------------------|
| 2L (5" x 7")  | 2, 4, 8, 9                     |
| Postcard      | 2, 4                           |
| 100mm x 150mm | 2, 4                           |
| 4" x 6"       | 2, 4, 8, 9                     |
| 8" x 10"      | 2, 4, 8, 9, 16, 25, 32         |
| Letter        | 2, 4, 8, 9, 16, 25, 32         |
| 11" x 17"     | 2, 4, 8, 9, 16, 25, 32, 49, 64 |
| A3            | 2, 4, 8, 9, 16, 25, 32, 49, 64 |
| A4            | 2, 4, 8, 9, 16, 25, 32         |
| A5            | 2, 4, 8, 9, 16                 |
| A6            | 2, 4, 8                        |
| B4            | 2, 4, 8, 9, 16, 25, 32, 49     |
| B5            | 2, 4, 8, 9, 16, 25             |
| B6            | 2, 4, 8, 9                     |

 Note

- A form feed may be inserted between images depending on the DSC in use. Also,

printing in the specified way may not be possible depending on the specification for the number of images to be printed.

### ***Edge-to-edge borderless printing***

This function is not available in this machine.

### ***Printing quality***

This function can print images in the selected printing quality.

|                          |                        |
|--------------------------|------------------------|
| <b>Normal or Default</b> | 600dpi x 600dpi (2bit) |
| <b>Fine</b>              | 600dpi x 600dpi (4bit) |

### ***Color matching***

This function can optimize colors when printing images.

|                       |            |
|-----------------------|------------|
| <b>OFF or Default</b> | Gradation  |
| <b>ON</b>             | Saturation |

### ***Paper type specification***


This function can match the paper type names between the machine and DSC. When this function sends the machine's paper type information to the DSC, the names of paper types displayed on the DSC's screen are different from the names displayed on the machine. So, it is possible to match the paper type names with this function.

|                    |                         |
|--------------------|-------------------------|
| <b>Default</b>     | Auto tray selection     |
| <b>Plain paper</b> | Plain or recycled paper |



## **Form printing**

This function can print images in a predetermined layout format.

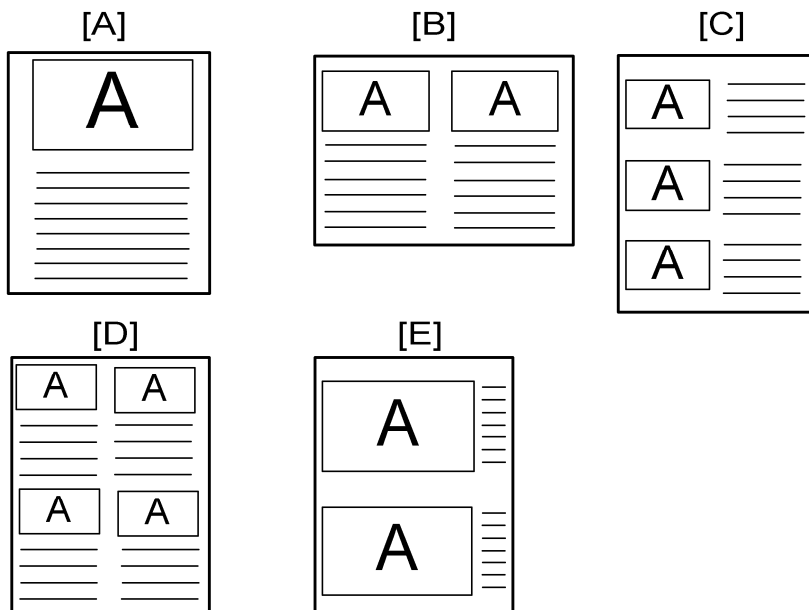

[A]: Image size A4: 170mm x 128mm LT: 174.5mm x 120mm

[B]: Image size A4: 120mm x 90mm LT: 112.5mm x 92mm

[C]: Image size A4: 86mm x 65mm LT: 88mm x 61mm

[D]: Image size A4: 86mm x 65mm LT: 88mm x 61mm

[E]: Image size A4: 152.4mm x 108mm LT: 156.7mm x 102.6mm

## **Camera memo printing**

This function can print text data with an image if it is attached to the image.

## 6.16 COPY DATA SECURITY UNIT

### 6.16.1 GENERAL FUNCTION

This function can prevent unauthorized copying by making a special masking pattern with an embedded message when an original is printed. This enables the machine to make grayed-out output when it is copied.


Confidential documents can never be duplicated on a machine that has the optional Copy Data Security Unit.

The embedded messages appear when a confidential document is copied on a machine without an optional Copy Data Security Unit.


However, some MFP functions are disabled if this function is enabled.

- Reduction less than 50% is disabled.
- Scanner/Fax application is disabled.

#### ***When copying on a machine with an optional Copy Data Security Unit***

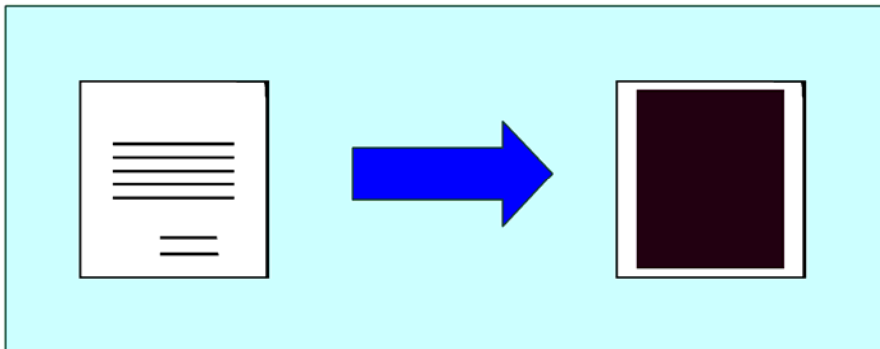

#### ***When copying on a machine without an optional Copy Data Security Unit***

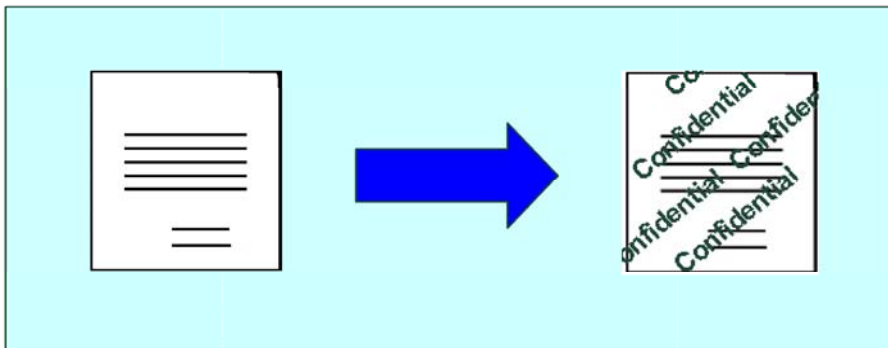

#### ***Setting***

This function can be turned on or off with a user tool (User Tools < System Settings

<Administrator Tool) or SP5-178-001 (0: Disabled, 1: Enabled).


### **Related SC**

If the "Copy Data Security Unit" is removed when the Copy Data Security Setting is On (SP5-178-001:"1"), SC165 occurs. This SC prevents someone from removing the Copy Data Security Unit "illegally".

## **6.16.2 MASK TYPE FOR COPYING**

This function can prevent unauthorized copying by making masking patterns with an embedded message when making an original print. Masking patterns are good for printing documents that must not be copied. The embedded messages appear when the document is copied.

Five print densities (level 1 to 5) can be selected for the masking patterns. (Default: level 3) and 10 masking patterns can be selected from the RPCS driver.

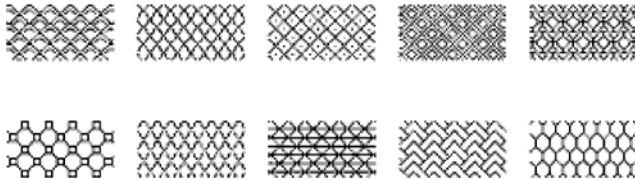

#### **Note**

- Some digital MFPs might not be able to detect the masking patterns. If the density of masking patterns on the output print is too light due to the settings of the machine or a mechanical problem, the pattern might not be detected.

## **6.17 FILE FORMAT CONVERTER (MLB)**

In this machine, this conversion is hardware-based, using the optional File Format Converter. Without the File Format Converter, copy and print jobs cannot be downloaded to a PC (or e-Cabinet) from the document server.

Two common target formats are provided for conversion to files that can be selected by the SP modes: These are JPEG and TIFF.

In scanner mode, users can select file format from TIFF, JPEG, or PDF. The time to create TIFF and JPEG files is shortened with the File Format Converter, especially for high scanning resolution and large image size. When the customer selects PDF, the machine creates a TIFF or JPEG file from the scanned image first. Then it converts it to PDF. Therefore, the total time to create a PDF is also shortened with the File Format Converter.

## 6.18 DATA OVERWRITE SECURITY UNIT (B735)

### 6.18.1 AUTO ERASE MEMORY

A document scanned in the copier or scanner mode, or data sent from a printer driver for printing, is stored temporarily on the hard disk of the machine. The document stays in the hard disk as temporary data even after the copy or print job is completed. Auto Erase Memory erases the temporary data on the hard disk by writing over it.

#### ***Types of Data Overwritten and Not Overwritten***

The following table shows the types of data that can or cannot be overwritten by Auto Erase Memory.

|   |  |  |
|---|--|--|
| Data overwritten by Auto Erase Memory     | Copier   | Copy jobs  |
|   | Printer  | 1) Print jobs<br>2) Sample Print/Locked Print jobs(*1)<br>3) Spool Printing jobs   |
|   | Scanner(*2)  | 1) Scanned files sent by e-mail<br>2) Files sent by Scan to Folder<br>3) Documents sent or retrieved by using Web Image Monitor, Desk Top Binder, or Scan Router |
|   | Fax  | PC fax print jobs, Internet fax transmission jobs  |
|   | Document Server  | Temporary data that still remains in the Document Server even after user erases the data in the Document Server.   |
| Data not overwritten by Auto Erase Memory | 1) Documents stored by the user in the Document Server using the Copier, Printer or Scanner functions<br>2) Information registered in the Address Book (*3)<br>3) Counters stored under each user code<br>4) Network setting |  |

#### ↓ Note

- \*1: A Sample Print or Locked Print job can only be overwritten after it has been executed.

- \*2: Temporary data via TWAIN scanner function are not originally stored in HDD. You can use TWAIN scanner functions together with the DOS unit.
- \*3: Data stored in the Address Book can be encrypted for security.

### ***Overwrite timing***

Overwriting starts automatically once a copy, print or scanner job is completed.

Copier, printer and scanner functions take priority over the Data Overwrite function. If a copier, printer or scanner job comes while a previous job is being overwritten, the overwrite process is automatically interrupted until the next job is completed.

# **SPECIFICATIONS**





## 7. SPECIFICATIONS

### 7.1 GENERAL SPECIFICATIONS

#### 7.1.1 MAIN FRAME

|                              |   |
|------------------------------|---|
| Configuration:               | Desktop   |
| Print Process:               | Laser beam scanning & Dry electrostatic transfer system<br>4 drums tandem method  |
| Number of scans:             | 1   |
| Resolution:                  | Scan: 600 dpi<br>Print: 600 dpi   |
| Gradation:                   | Scan: 8 bits/pixel<br>Print: 4 bits/pixel, 2 bits/pixel, 1 bits/pixel   |
| Original type:               | Sheets, book, objects   |
| Maximum original size:       | A3/11" x 17"  |
| Original reference position: | Left rear corner, ad hoc lists  |
| ⇒ Copy speed:                | Normal (ADF 1 to 1, LT/ A4 LEF)<br>B230: 25 cpm (color) or 25 cpm (black & white)<br>B237: 30 cpm (color) or 30 cpm (black & white)<br>OHP/Thick<br>B230: 16 cpm (color/black & white)<br>B237 16 cpm (color/black & white) |
| First copy (normal mode):    | Color: 9.7 seconds or less (A4/LT LEF)<br>Black & white: 6.7 seconds or less (A4/LT LEF)  |
| Warm-up time:                | 45 seconds or less (23°C, 50%)  |

|  |   |                        |
|--|---|------------------------|
| Print Paper Capacity:<br>(80 g/m <sup>2</sup> , 20 lb) | Standard tray: 500 sheets x 2<br>By-pass tray: 100 sheets<br>Optional paper feed tray: 500 sheets x 2<br>LCT: 2000 sheets   |                        |
| Print Paper Size:                                      | (Refer to "Supported Paper Sizes".)   |                        |
| -  | Minimum   | Maximum                |
| Tray 1   | A4/8 1/2" x 11" (LEF)   |                        |
| Tray 2   | A5 (LEF)/<br>8.5" x 11"   | A3/11" x 17"           |
| By-pass  | 90 x 148 mm   | 305 x 458 mm/12" x 18" |
| Optional Tray  | A5 (LEF)/<br>8.5" x 11"   | A3/11" x 17"           |
| LCT  | A4/8.5" x 11" (LEF)   |                        |
| Printing Paper Weight:                                 | Standard tray: 60 to 216 g/m <sup>2</sup> (16 to 57 lb.)<br>Optional paper tray: 60 to 216 g/m <sup>2</sup> (16 to 57 lb.)<br>By-pass tray: 60 to 253 g/m <sup>2</sup> (16 to 67 lb.)<br>Duplex unit: 64 to 169 g/m <sup>2</sup> (17 to 45 lb.)   |                        |
| Output Paper Capacity:                                 | Standard exit tray: 500 sheets (face down)<br>Shift tray: 250 (80 g/m <sup>2</sup> )/125 (B4/8.5" x 14" or more) sheets<br>1-bin Tray: 125 (80 g/m <sup>2</sup> )<br>500-sheet finisher: 500 sheets (80 g/m <sup>2</sup> )<br>1000-sheet finisher 250 + 1000 sheets (80 g/m <sup>2</sup> )<br>1000-sheet booklet finisher: 100 + 1000 sheets (80 g/m <sup>2</sup> ) |                        |
| Continuous copy:                                       | Up to 999 sheets  |                        |
| Zoom:  | Arbitrary: From 25 to 400% (1% step)  |                        |
|  | Fixed:  |                        |
|  | North America   | Europe                 |
|  | 25%   | 25%                    |

|  |  |                |                    |                         |
|--|--|----------------|--------------------|-------------------------|
|  | 50%  | 50%            |                    |                         |
|  | 65%  | 61%            |                    |                         |
|  | 73%  | 71%            |                    |                         |
|  | 78%  | 82%            |                    |                         |
|  | 85%  | 87%            |                    |                         |
|  | 93%  | 93%            |                    |                         |
|  | 100%   | 100%           |                    |                         |
|  | 121%   | 115%           |                    |                         |
|  | 129%   | 122%           |                    |                         |
|  | 155%   | 141%           |                    |                         |
|  | 200%   | 200%           |                    |                         |
|  | 400%   | 400%           |                    |                         |
| Memory:                                | Standard: 1024 MB  |                |                    |                         |
| Power Source:                          | 120 V, 60 Hz: More than 12A (for North America)<br>220 V – 240 V, 50/60 Hz: More than 8A (for Europe/ASIA) |                |                    |                         |
| Power Consumption:                     | 120V   | 220 - 240V     |                    |                         |
| Maximum                                | 1440 W or less   | 1600 W or less |                    |                         |
| Energy Saver                           | 7 W or less  | 10 W or less   |                    |                         |
| Noise Emission:<br>(Sound Power Level) | Model  | State          | Mainframe          | Complete system<br>(*1) |
|  | C1a  | Standby        | 40dB(A)<br>or Less | 44dB(A)<br>or Less      |
|  |  | Operating      | 65dB(A)<br>or Less | 70dB(A)<br>or Less      |
|  | C1b  | Standby        | 40dB(A)            | 44dB(A)                 |

|   |  |  |                    |                    |
|---|--|--|--------------------|--------------------|
|   |  |  | or Less            | or Less            |
|   |  | Operating                                    | 67dB(A)<br>or Less | 70dB(A)<br>or Less |
| <p>(*1) The complete system consists of mainframe, ARDF, finisher, and LCT.<br/>The above measurements were made in accordance with Ricoh standard methodology.</p> |  |  |                    |                    |
| <p>Dimensions (W x D x H):<br/>Copier: 650 x 659 x 740 mm (25.6" x 25.9" x 29.1")<br/>Copier + PFU or LCT: 650 x 659 x 1000 mm (25.6" x 25.9" x 39.4")</p>          |  |  |                    |                    |
| Weight:   |  | Less than 120 kg (265 lb.) [excluding toner] |                    |                    |

## 7.2 PRINTER

|   |  |
|---|--|
| <p>Printer Languages:</p>                           | <p>PCL 6/5c<br/>                     RPCS (Refined Printing Command Stream)<br/>                     Adobe PostScript 3 (optional)<br/>                     PDF Direct (optional)<br/>                     PictBridge (optional)</p>   |
| <p>Resolution and Gradation:</p>                    | <p>PCL 5c:<br/>                     300 x 300 dpi : Available only in B/W mode<br/>                     600 x 600 dpi : Fast (1 bit), Standard (2 bits), Fine (4 bits)<br/>                     PCL 6:<br/>                     600 x 600 dpi : Fast (1 bit), Standard (2 bits), Fine (4 bits)<br/>                     RPCS:<br/>                     300 x 300 dpi, 600 x 600 dpi, 1,800 x 600 dpi*, 2400 dpi x 600 dpi*<br/>                     *1,800 x 600 dpi = 600 x 600 dpi (2 bits)<br/>                     *2400 dpi x 600 dpi* = 600 x 600 dpi (4 bits)<br/>                     PS3:<br/>                     600 x 600 dpi : Fast (1 bit), Standard (2 bits), Fine (4 bits)</p> |
| <p>⇒<br/>                     Printing speed:</p>   | <p>B230:<br/>                     25 ppm in Plain/Middle Thick mode<br/>                     16 ppm in Thick/OHP mode<br/>                     B237:<br/>                     30 ppm in Plain/Middle Thick mode<br/>                     16 ppm in Thick/OHP mode</p>  |
| <p>⇒<br/>                     Max. Paper Length</p> | <p>Bypass 600 mm (23.6"), or 1260 mm (49.6") if SP5-150 is set to 1.<br/> <b>NOTE:</b> PCL is not supported. Also, the printer driver supports up to 600 mm (23.6").</p>   |
| <p>Resident Fonts:</p>                              | <p>PCL 6/5c:<br/>                     48 Intelli fonts<br/>                     10 TrueType fonts<br/>                     1 Bitmap font<br/>                     Adobe PostScript 3:<br/>                     136 fonts (24 Type 2 fonts, 112 Type 14 fonts)</p>  |



|                           |   |
|---------------------------|---|
| <p>Host Interfaces:</p>   | <p>USB 2.0: Standard<br/>         Ethernet (100 Base-TX/10 Base-T): Standard<br/>         IEEE1284 parallel x 1: Optional<br/>         IEEE1394: Optional<br/>         IEEE802.11b (Wireless LAN): Optional<br/>         Bluetooth (Wireless): Optional<br/>         USB Host: Optional</p> |
| <p>Network Protocols:</p> | <p>TCP/IP (IPv4, IPv6), IPX/SPX, AppleTalk (Auto Switching), SMB (NetBEUI, NetBIOS over TCP/IP)</p>   |

## 7.3 SCANNER

|   |   |
|---|---|
| Standard Scanner<br>Resolution:         | Main scan/Sub scan<br>600 dpi   |
| Available scanning<br>Resolution Range: | Twain Mode:<br>100 to 1200 dpi<br>Delivery Mode:<br>100/200/300/400/600 dpi   |
| Grayscales:                             | 1 bit or 8 bits/pixel each for RGB  |
| Scanning<br>Throughput<br>(ARDF mode):  | Scan to E-mail / Folder:<br>BW: 50 ppm (A4LEF / BW Text (Print) / 200dpi / Compression: On (MH))<br>FC: 35 ppm (A4LEF / FC Text / Photo / 200dpi / Compression: Standard) |
| Interface:                              | Ethernet (100 Base-TX/10 Base-T for TCP/IP), IEEE 1394 (IP Over 1394), Wireless LAN   |
| Compression<br>Method:                  | B&W: TIFF (MH, MR, MMR)<br>Gray Scale, Full Color: JPEG   |
| ⇒ Max. Original Length                  | 432 mm (17") (ARDF mode)  |

## 7.4 SUPPORTED PAPER SIZES

### 7.4.1 PAPER FEED

BT: By-pass Tray, T1: Tray 1, T2/3/4: Tray 2/3/4, LCT: Large Capacity Tray,

DT: Duplex Tray

| Paper  | Size (W x L) | North America |    |        |     | Europe/Asia |    |        |     | DT |
|--------|--------------|---------------|----|--------|-----|-------------|----|--------|-----|----|
|        |              | BT            | T1 | T2/3/4 | LCT | BT          | T1 | T2/3/4 | LCT |    |
| A3 W   | 12" x 18"    | M             | -  | -      | -   | M           | -  | -      | -   | -  |
| A3 SEF | 297 x 420mm  | M             | -  | M      | -   | A           | -  | A      | -   | M  |
| A4 SEF | 210 x 297mm  | M             | -  | A/M    | -   | A           | -  | A      | -   | M  |
| A4 LEF | 297 x 210mm  | M             | S  | M      | S   | M           | A  | A      | A   | M  |
| A5 SEF | 148 x 210mm  | M             | S  | -      | -   | A           | -  | -      | -   | -  |
| A5 LEF | 210 x 148mm  | M             | -  | M      | -   | M           | S  | A      | -   | M  |
| A6 SEF | 105 x 148mm  | M             | -  | -      | -   | A           | -  | -      | -   | -  |
| B4 SEF | 257 x 364mm  | M             | -  | M      | -   | M           | -  | A      | -   | M  |
| B5 SEF | 182 x 257mm  | M             | -  | M      | -   | M           | -  | A      | -   | M  |
| B5 LEF | 257 x 182mm  | M             | -  | M      | -   | M           | S  | A      | -   | M  |
| B6 SEF | 128 x 182mm  | M             | S  | -      | -   | M           | -  | -      | -   | -  |



| Paper                | Size (W x L)  | North America |    |        |     | Europe/Asia |    |        |     | DT |
|----------------------|---------------|---------------|----|--------|-----|-------------|----|--------|-----|----|
|                      |               | BT            | T1 | T2/3/4 | LCT | BT          | T1 | T2/3/4 | LCT |    |
| Ledger               | 11" x 17"     | A             | -  | A      | -   | M           | -  | M      | -   | M  |
| Letter SEF           | 8.5" x 11"    | A             | -  | A      | -   | M           | -  | A      | -   | M  |
| Letter LEF           | 11" x 8.5"    | M             | A  | A      | A   | M           | S  | M      | S   | M  |
| Legal SEF            | 8.5" x 14"    | M             | -  | A      | -   | M           | -  | M      | -   | M  |
| Government Legal SEF | 8.25" x 14"   | M             | -  | M      | -   | M           | -  | M      | -   | M  |
| Half Letter SEF      | 5.5" x 8.5"   | A             | -  | -      | -   | M           | -  | -      | -   | -  |
| Executive SEF        | 7.25" x 10.5" | M             | -  | M/A    | -   | M           | -  | M      | -   | M  |
| Executive LEF        | 10.5" x 7.25" | M             | -  | A/M    | -   | M           | -  | M      | -   | M  |
| F SEF                | 8" x 13"      | M             | -  | M      | -   | M           | -  | M      | -   | M  |
| Foolscap SEF         | 8.5" x 13"    | M             | -  | M      | -   | M           | -  | M      | -   | M  |
| Folio SEF            | 8.25" x 13"   | M             | -  | M      | -   | M           | -  | M      | -   | M  |
|                      | 11" x 15"     | M             | -  | M      | -   | M           | -  | M      | -   | M  |
|                      | 10" x 14"     | M             | -  | M      | -   | M           | -  | M      | -   | M  |
|                      | 8" x 10"      | M             | -  | M      | -   | M           | -  | M      | -   | M  |
| 8K                   | 267 x 390mm   | M             | -  | M      | -   | M           | -  | M      | -   | M  |
| 16K SEF              | 195 x 267mm   | M             | -  | M      | -   | M           | -  | M      | -   | M  |
| 16K LEF              | 267 x         | M             | -  | M      | -   | M           | -  | M      | -   | M  |

| Paper        | Size (W x L)  | North America |    |        |     | Europe/Asia |    |        |     | DT |
|--------------|---------------|---------------|----|--------|-----|-------------|----|--------|-----|----|
|              |               | BT            | T1 | T2/3/4 | LCT | BT          | T1 | T2/3/4 | LCT |    |
|              | 195mm         |               |    |        |     |             |    |        |     |    |
| Custom       |               | M             | -  | M      | -   | M           | -  | M      | -   | M  |
| Com10 Env.   | 4.125" x 9.5" | M             | -  | -      | -   | M           | -  | -      | -   | -  |
| Monarch Env. | 3.875" x 7.5" | M             | -  | -      | -   | M           | -  | -      | -   | -  |
| C6 Env.      | 114 x 162mm   | M             | -  | -      | -   | M           | -  | -      | -   | -  |
| C5 Env.      | 162 x 229mm   | M             | -  | -      | -   | M           | -  | -      | -   | -  |
| DL Env.      | 110 x 220mm   | M             | -  | -      | -   | M           | -  | -      | -   | -  |

**Remarks:**

|   |   |
|---|---|
| A | Supported: the sensor detects the paper size. |
| M | Supported: the user specifies the paper size. |
| S | Supported: depends on a technician adjustment |
| - | Not supported                                 |

## 7.4.2 PAPER EXIT

### *1000-Sheet Booklet Finisher*

MF: Main Frame, Prf: Proof, Clr: Clear, Shf: Shift, Stp: Staple, SS: Saddle Stitch, 2/3 P: 2/3 Holes Punch, 4 P: 4 Holes Punch, N4P: North Europe 4 Holes Punch

| Paper | Size (W x L) | MF | 1000-sheet booklet finisher |     |     |     |    |       |     |     |
|-------|--------------|----|-----------------------------|-----|-----|-----|----|-------|-----|-----|
|       |              |    | Prf                         | Clr | Shf | Stp | SS | 2/3 P | 4 P | N4P |
| A3 W  | 12" x 18"    | Y  | Y                           | Y   | -   | -   | -  | Y     | Y   | Y   |

| Paper      | Size (W x L) | MF | 1000-sheet booklet finisher |     |     |     |    |       |     |     |
|------------|--------------|----|-----------------------------|-----|-----|-----|----|-------|-----|-----|
|            |              |    | Prf                         | Clr | Shf | Stp | SS | 2/3 P | 4 P | N4P |
| A3 SEF     | 297 x 420 mm | Y  | Y                           | Y   | Y   | 30  | 30 | Y     | Y   | Y   |
| A4 SEF     | 210 x 297 mm | Y  | Y                           | Y   | Y   | 50  | 50 | -     | -   | Y   |
| A4 LEF     | 297 x 210 mm | Y  | Y                           | Y   | Y   | 50  | 50 | Y     | Y   | Y   |
| A5 SEF     | 148 x 210 mm | Y  | Y                           | Y   | Y   | -   | -  | -     | -   | Y   |
| A5 LEF     | 210 x 148 mm | Y  | Y                           | Y   | Y   | -   | -  | -     | -   | Y   |
| A6 SEF     | 105 x 148 mm | Y  | Y                           | Y   | -   | -   | -  | -     | -   | -   |
| B4 SEF     | 257 x 364 mm | Y  | Y                           | Y   | Y   | 30  | 30 | Y     | Y   | Y   |
| B5 SEF     | 182 x 257 mm | Y  | Y                           | Y   | Y   | 50  | 50 | -     | -   | Y   |
| B5 LEF     | 257 x 182 mm | Y  | Y                           | Y   | Y   | 50  | 50 | Y     | Y   | Y   |
| B6 SEF     | 128 x 182 mm | Y  | Y                           | Y   | -   | -   | -  | -     | -   | Y   |
| Ledger     | 11" x 17"    | Y  | Y                           | Y   | Y   | 30  | 30 | Y     | Y   | Y   |
| Letter SEF | 8.5" x 11"   | Y  | Y                           | Y   | Y   | 50  | 50 | -     | -   | Y   |
| Letter LEF | 11" x 8.5"   | Y  | Y                           | Y   | Y   | 50  | -  | Y     | Y   | Y   |
| Legal SEF  | 8.5" x 14"   | Y  | Y                           | Y   | Y   | 30  | 30 | -     | -   | Y   |
| Government | 8.25" x 14"  | Y  | Y                           | Y   | Y   | 30  | 30 | Y     | Y   | Y   |

| Paper           | Size (W x L)  | MF | 1000-sheet booklet finisher |     |     |     |    |       |     |     |
|-----------------|---------------|----|-----------------------------|-----|-----|-----|----|-------|-----|-----|
|                 |               |    | Prf                         | Clr | Shf | Stp | SS | 2/3 P | 4 P | N4P |
| Legal SEF       |               |    |                             |     |     |     |    |       |     |     |
| Half Letter SEF | 5.5" x 8.5"   | Y  | Y                           | Y   | Y   | -   | -  | -     | -   | Y   |
| Executive SEF   | 7.25" x 10.5" | Y  | Y                           | Y   | Y   | 50  | -  | -     | -   | Y   |
| Executive LEF   | 10.5" x 7.25" | Y  | Y                           | Y   | Y   | 50  | -  | Y     | Y   | Y   |
| F SEF           | 8" x 13"      | Y  | Y                           | Y   | Y   | 30  | -  | -     | -   | Y   |
| Foolscap SEF    | 8.5" x 13"    | Y  | Y                           | Y   | Y   | 30  | -  | -     | -   | Y   |
| Folio SEF       | 8.25" x 13"   | Y  | Y                           | Y   | Y   | 30  | -  | -     | -   | Y   |
|                 | 11" x 15"     | Y  | Y                           | Y   | Y   | 30  | -  | Y     | Y   | Y   |
|                 | 10" x 14"     | Y  | Y                           | Y   | Y   | 30  | -  | Y     | -   | Y   |
|                 | 8" x 10"      | Y  | Y                           | Y   | Y   | 30  | -  | -     | -   | Y   |
| 8K              | 267 x 390 mm  | Y  | Y                           | Y   | Y   | 30  | -  | Y     | Y   | Y   |
| 16K SEF         | 195 x 267 mm  | Y  | Y                           | Y   | Y   | 50  | -  | -     | -   | Y   |
| 16K LEF         | 267 x 195 mm  | Y  | Y                           | Y   | Y   | 50  | -  | Y     | Y   | Y   |
| Custom          |               | Y  | Y                           | Y   | -   | -   | -  | -     | -   | -   |
| Com10 Env.      | 4.125" x 9.5" | Y  | Y                           | -   | -   | -   | -  | -     | -   | -   |
| Monarch         | 3.875" x      | Y  | Y                           | -   | -   | -   | -  | -     | -   | -   |

| Paper   | Size (W x L) | MF | 1000-sheet booklet finisher |     |     |     |    |       |     |     |   |
|---------|--------------|----|-----------------------------|-----|-----|-----|----|-------|-----|-----|---|
|         |              |    | Prf                         | Clr | Shf | Stp | SS | 2/3 P | 4 P | N4P |   |
| Env.    | 7.5"         |    |                             |     |     |     |    |       |     |     |   |
| C6 Env. | 114 x 162 mm | Y  | Y                           | Y   | -   | -   | -  | -     | -   | -   | - |
| C5 Env. | 162 x 229 mm | Y  | Y                           | Y   | -   | -   | -  | -     | -   | -   | - |
| DL Env. | 110 x 220 mm | Y  | Y                           | Y   | -   | -   | -  | -     | -   | -   | - |

**Remarks:**

|    |                        |
|----|------------------------|
| Y  | Supported              |
| 30 | Output up to 30 sheets |
| 50 | Output up to 50 sheets |
| -  | Not supported          |

**1000-Sheet Finisher and 500-Sheet Finisher**

MF: Main Frame, Prf: Proof, Clr: Clear, Shf: Shift, Stp: Staple

| Paper  | Size (W x L) | MF | 1000-sheet finisher |     |     |     | 500-sheet finisher |     |     | 1-Bin | Shift |
|--------|--------------|----|---------------------|-----|-----|-----|--------------------|-----|-----|-------|-------|
|        |              |    | Prf                 | Clr | Shf | Stp | Clr                | Shf | Stp |       |       |
| A3 W   | 12" x 18"    | Y  | Y                   | Y   | -   | -   | -                  | -   | -   | -     | Y     |
| A3 SEF | 297 x 420 mm | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
| A4 SEF | 210 x 297 mm | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |
| A4 LEF | 297 x 210 mm | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |

| Paper                   | Size<br>(W x L)  | MF | 1000-sheet finisher |     |     |     | 500-sheet finisher |     |     | 1-Bin | Shift |
|-------------------------|------------------|----|---------------------|-----|-----|-----|--------------------|-----|-----|-------|-------|
|                         |                  |    | Prf                 | Clr | Shf | Stp | Clr                | Shf | Stp |       |       |
| A5 SEF                  | 148 x 210<br>mm  | Y  | Y                   | Y   | Y   | -   | Y                  | Y   | -   | Y     | Y     |
| A5 LEF                  | 210 x 148<br>mm  | Y  | Y                   | Y   | Y   | -   | Y                  | Y   | -   | Y     | Y     |
| A6 SEF                  | 105 x 148<br>mm  | Y  | -                   | -   | -   | -   | Y                  | -   | -   | Y     | Y     |
| B4 SEF                  | 257 x 364<br>mm  | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
| B5 SEF                  | 182 x 257<br>mm  | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |
| B5 LEF                  | 257 x 182<br>mm  | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |
| B6 SEF                  | 128 x 182<br>mm  | Y  | Y                   | -   | -   | -   | Y                  | -   | -   | Y     | Y     |
| Ledger                  | 11" x 17"        | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
| Letter SEF              | 8.5" x 11"       | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |
| Letter LEF              | 11" x 8.5"       | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |
| Legal SEF               | 8.5" x 14"       | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
| Government<br>Legal SEF | 8.25" x 14"      | Y  | Y                   | Y   | Y   | -   | Y                  | Y   | 30  | Y     | Y     |
| Half Letter<br>SEF      | 5.5" x 8.5"      | Y  | Y                   | Y   | Y   | -   | Y                  | Y   | -   | Y     | Y     |
| Executive<br>SEF        | 7.25" x<br>10.5" | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |

| Paper         | Size<br>(W x L) | MF | 1000-sheet finisher |     |     |     | 500-sheet finisher |     |     | 1-Bin | Shift |
|---------------|-----------------|----|---------------------|-----|-----|-----|--------------------|-----|-----|-------|-------|
|               |                 |    | Prf                 | Clr | Shf | Stp | Clr                | Shf | Stp |       |       |
| Executive LEF | 10.5" x 7.25"   | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |
| F SEF         | 8" x 13"        | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
| Foolscap SEF  | 8.5" x 13"      | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
| Folio SEF     | 8.25" x 13"     | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
|               | 11" x 15"       | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
|               | 10" x 14"       | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
|               | 8" x 10"        | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
| 8K            | 267 x 390 mm    | Y  | Y                   | Y   | Y   | 30  | Y                  | Y   | 30  | Y     | Y     |
| 16K SEF       | 195 x 267 mm    | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |
| 16K LEF       | 267 x 195 mm    | Y  | Y                   | Y   | Y   | 50  | Y                  | Y   | 50  | Y     | Y     |
| Custom        |                 | Y  | Y                   | -   | -   | -   | -                  | -   | -   | -     | Y     |
| Com10 Env.    | 4.125" x 9.5"   | Y  | -                   | -   | -   | -   | Y                  | Y   | -   | Y     | Y     |
| Monarch Env.  | 3.875" x 7.5"   | Y  | -                   | -   | -   | -   | -                  | -   | -   | Y     | Y     |
| C6 Env.       | 114 x 162 mm    | Y  | Y                   | -   | -   | -   | -                  | -   | -   | Y     | Y     |
| C5 Env.       | 162 x 229 mm    | Y  | Y                   | -   | -   | -   | -                  | -   | -   | Y     | Y     |

| Paper   | Size<br>(W x L) | MF | 1000-sheet finisher |     |     |     | 500-sheet finisher |     |     | 1-Bin | Shift |
|---------|-----------------|----|---------------------|-----|-----|-----|--------------------|-----|-----|-------|-------|
|         |                 |    | Prf                 | Clr | Shf | Stp | Clr                | Shf | Stp |       |       |
| DL Env. | 110 x 220<br>mm | Y  | Y                   | -   | -   | -   | -                  | -   | -   | Y     | Y     |

**Remarks:**

|    |                        |
|----|------------------------|
| Y  | Supported              |
| 30 | Output up to 30 sheets |
| 50 | Output up to 50 sheets |
| -  | Not supported          |

### 7.4.3 PLATEN/ARDF ORIGINAL SIZE DETECTION

| Size<br>(width x length) [mm] | Platen | ARDF   | Platen | ARDF   |
|-------------------------------|--------|--------|--------|--------|
|                               | Inches | Inches | Metric | Metric |
| A3 (297 x 420) L              | -      | Y      | Y*3    | Y      |
| B4 (257 x 364) L              | -      | -      | Y*3    | Y      |
| A4 (210 x 297) L              | Y*1    | Y      | Y*3    | Y      |
| A4 (297 x 210) S              | Y*3    | Y      | Y*3    | Y      |
| B5 (182 x 257) L              | -      | -      | Y*3    | Y      |
| B5 (257 x 182) S              | -      | -      | Y*3    | Y      |
| A5 (148 x 210) L              | -      | -      | _*1    | Y      |
| A5 (210 x 148) S              | -      | -      | _*1    | Y      |
| B6 (128 x 182) L              | -      | -      | -      | -      |
| B6 (182 x 128) S              | -      | -      | -      | -      |
| 11" x 17" (DLT)               | Y      | Y*2    | -      | Y*2    |



|                              |     |     |     |     |
|------------------------------|-----|-----|-----|-----|
| 11" x 15"                    | -   | Y*2 | -   | -   |
| 10" x 14"                    | -   | Y   | -   | -   |
| 8.5" x 14" (LG)              | Y   | Y*2 | -   | -   |
| 8.5" x 13" (F4)              | -   | Y*2 | Y*4 | Y*4 |
| 8.25" x 13"                  | -   | -   | Y*4 | Y*4 |
| 8" x 13"(F)                  | -   | -   | Y*4 | Y*4 |
| 8.5" x 11" (LT)              | Y*3 | Y*2 | Y*3 | Y*2 |
| 11" x 8.5" (LT)              | Y*3 | Y*2 | Y*3 | Y*2 |
| 8" x 10"                     | -   | Y*2 | -   | -   |
| 5.5" x 8.5" (HLT)            | _*1 | Y   | -   | -   |
| 8.5" x 5.5" (HLT)            | _*1 | Y   | -   | -   |
| 8K (267 x 390)               | -   | -   | Y*3 | Y*2 |
| 16K L (195 x 267)            | -   | -   | Y*3 | Y*2 |
| 16K S (267 x 195)            | -   | -   | Y*3 | Y*2 |
| 7.25" x 10.5"<br>(Executive) | -   | Y   | -   | -   |
| 10.5" x 7.25"<br>(Executive) | -   | Y*2 | -   | -   |

\*1: Use SP4-303 to detect original sizes as A5 lengthwise/HLT when the message "Can-t detect original size" shows.

\*2: The machine can detect the paper size depending on the setting of SP6-016-1.

\*3: The machine can detect the paper size depending on the setting of SP4-305-1.

\*4: The machine can detect the paper size depending on the setting of SP5-126-1.

## 7.5 SOFTWARE ACCESSORIES

The printer drivers and utility software are provided as following two CD-ROMs

1: Printer Drivers and Utilities CD-ROM

2: Scanner/PostScript® Drivers and Utilities CD-ROM.

An auto-run installer lets you to select the components you want to install.

### 7.5.1 PRINTER DRIVERS

| Printer Language | Windows 95/98/ME | Windows NT4.0 | Windows 2000/XP/2003 | Macintosh |
|------------------|------------------|---------------|----------------------|-----------|
| PCL 5c / PCL6    | Yes              | Yes           | Yes                  | No        |
| PS3 *2)          | Yes              | Yes           | Yes                  | Yes       |
| RPCS             | Yes              | Yes           | Yes                  | No        |

#### ↓ Note

- The PCL5c/6 and RPCS drivers are provided on the printer drivers CD-ROM
- The PS drivers are provided on the Scanner/PostScript® Drivers and Utilities CD-ROM.
- The printer drivers for Windows NT 4.0 are only for the Intel x86 platform. There is no Windows NT 4.0 printer driver for the PowerPC, Alpha, or MIPS platforms.
- The PS3 drivers are all genuine AdobePS drivers, except for Windows 2000/XP/2003. Windows 2000 uses Microsoft PS. A PPD file for each operating system is provided with the driver.
- The PS3 driver for Macintosh supports Mac OS X 10.1 or later versions.

### 7.5.2 SCANNER AND LAN FAX DRIVERS

| Printer Language | Windows 95/98/ME | Windows NT4.0 | Windows 2000/XP/2003 | Macintosh |
|------------------|------------------|---------------|----------------------|-----------|
| Network TWAIN    | Yes              | Yes           | Yes                  | No        |
| LAN-FAX          | Yes              | Yes           | Yes                  | No        |

#### ↓ Note

- The Network TWAIN and LAN FAX drivers are provided on the scanner drivers


CD-ROM.

- This software lets you fax documents directly from your PC. Address Book Editor and Cover Sheet Editor are to be installed as well. (These require the optional fax unit.)

### 7.5.3 UTILITY SOFTWARE


| Software  | Description   |
|---|---|
| Font Manager 2000<br>(Win9x/ME, 2000/XP/2003, NT4)                                | A font management utility with screen fonts for the printer<br>This is provided on the printer drivers CD-ROM   |
| SmartDeviceMonitor for Admin<br>(Win9x/ME, 2000/XP/2003, NT4)                     | A printer management utility for network administrators. NIB setup utilities are also available.<br>This is provided on the printer drivers CD-ROM  |
| DeskTopBinder –<br>SmartDeviceMonitor for Client<br>(Win9x/ME, 2000/XP/2003, NT4) | A printer management utility for client users.<br>A utility for peer-to-peer printing over a NetBEUI or TCP/IP network.<br>A peer-to-peer print utility over a TCP/IP network.<br>This provides the parallel printing and recovery printing features.<br>This is provided on the printer drivers CD-ROM |
| IEEE1394 Utility<br>(Win2000/XP)  | This utility deletes a print port for IEEE1394 in Win2000.<br>This is provided on the printer drivers CD-ROM  |
| Printer Utility for Mac<br>(Mac)  | A utility for peer-to-peer printing over a NetBEUI or TCP This software provides several convenient functions for printing from Macintosh clients.<br>This is provided on the scanner drivers CD-ROM  |
| DeskTopBinder Lite<br>(Win9x/ME, 2000/XP/2003, NT4)                               | DeskTopBinder Lite itself can be used as personal document management software and can manage both image data converted from paper documents and application files saved in each client's PC.<br>This is provided on the scanner drivers CD-ROM   |

## 7.6 MACHINE CONFIGURATION

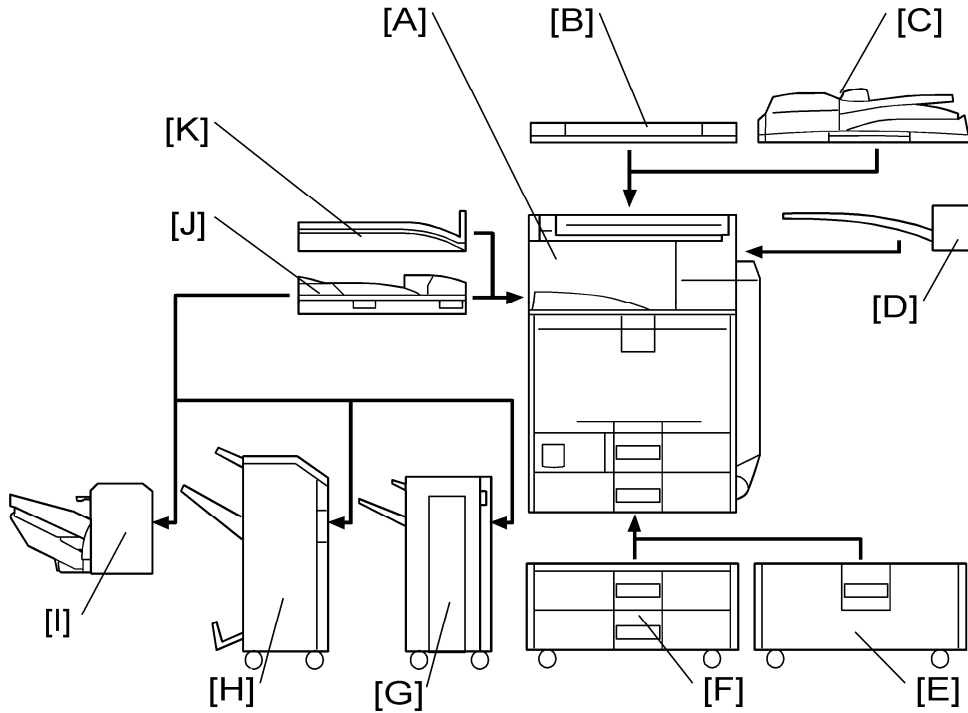

| Item                        | Machine Code | Call out | Remarks   |
|-----------------------------|--------------|----------|---|
| Mainframe                   | B230/B237    | [A]      |   |
| Platen cover                | G329         | [B]      | One from the two  |
| ARDF                        | B789         | [C]      |   |
| 500-sheet finisher          | B792         | [I]      | One from [G], [H], and [I]; Requires [J]                      |
| 1000-sheet booklet finisher | B793         | [H]      | One from [G], [H], and [I]; Requires [J] one from [E] and [F] |
| Punch unit: 3/2 holes       | B803-17      |          | Requires [H]  |
| Punch unit: 4/2 holes       | B803-27      |          | Requires [H]  |
| Punch unit: 4 holes         | B803-30      |          | Requires [H]  |

| Item                     | Machine Code | Call out | Remarks   |
|--------------------------|--------------|----------|---|
| 1000-sheet finisher      | B408         | [G]      | One from [G], [H], and [I]; Requires [J] one from [E] and [F] |
| LCT                      | B801         | [E]      | One from the two  |
| Two-tray paper feed unit | B800         | [F]      |   |
| 1-bin tray               | B790         | [D]      |   |
| Shift tray               | B791         | [K]      | One from the two  |
| Bridge unit              | B227         | [J]      |   |

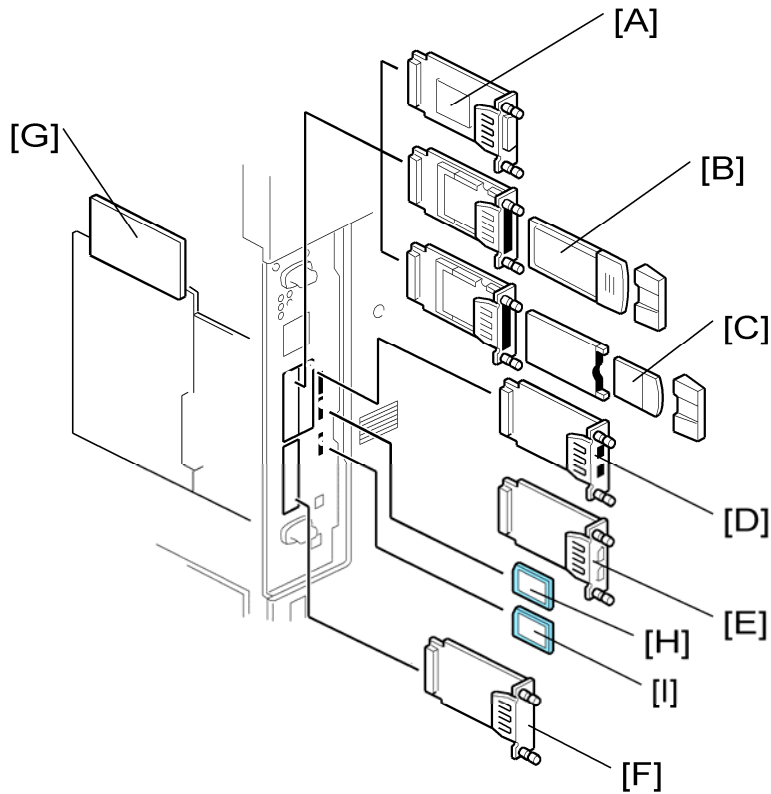

| Item                    | Machine code | Call out | Remark                                       |
|-------------------------|--------------|----------|--|
| USB 2.0:                | —            | -        | Standard                                     |
| Ethernet:               | —            | -        | Standard                                     |
| IEEE 1284               | B679-17      | [A]      | You can only install one of these at a time. |
| Wireless LAN            | G813-04      | [B]      |  |
| Bluetooth               | B826-17      | [C]      |  |
| USB Host                | B825-17      | [D]      | You can only install one of these at a time. |
| IEEE 1394               | B581-41      | [E]      |  |
| ⇒ File Format Converter | B609-04      | [F]      | Fax Unit required. ➡ page 1-67.              |
| Hard Disk Drive         | —            | -        | Standard                                     |
| Copy Data Security Unit | B770-17      | [G]      |  |

|                              |         |     |   |
|------------------------------|---------|-----|---|
| PostScript 3                 | B822-04 | [H] | You can only install one of these in the SD slot 2 at a time. |
| Data Overwrite Security Unit | B735-18 |     |   |
| PictBridge                   | B824-01 |     |   |
| Browser Unit                 | B828-01 | [I] | In SD slot 3  |

## 7.7 OPTIONAL EQUIPMENT

### 7.7.1 ARDF

|                                 |   |   |
|---------------------------------|---|---|
| Paper Size/Weight:              | -   |   |
| Simplex                         | Size  | A3 to A5, DLT to HLT                      |
|                                 | Weight  | 40 to 128 g/m <sup>2</sup> (10 to 34 lb.) |
| Duplex                          | Size  | A3 to A5, DLT to HLT                      |
|                                 | Weight  | 52 to 105 g/m <sup>2</sup> (14 to 28 lb.) |
| Table Capacity:                 | 50 sheets (80 g/m <sup>2</sup> , 20 lb)         |   |
| Original Standard Position:     | Rear left corner                                |   |
| Separation:                     | Feed belt and separation roller                 |   |
| Original Transport:             | Roller transport                                |   |
| Original Feed Order:            | From the top original                           |   |
| Supported Magnification Ratios: | -   |   |
| Copy                            | -   | 32 to 200 %                               |
| Fax                             | Color   | 32.6 to 200 %                             |
|                                 | Black & white                                   | 48.9 to 200 %                             |
| Power Source:                   | DC 24V, 5V from the scanner unit                |   |
| Power Consumption:              | 50 W or less                                    |   |
| Dimensions (W × D × H):         | 550 mm x 491 mm x 120 mm (21.7" x 19.3" x 4.7") |   |
| Weight:                         | 10 kg (22 lb.)                                  |   |



## 7.7.2 PAPER FEED UNIT

|                         |   |
|-------------------------|---|
| Paper Feed System:      | FRR   |
| Paper Height Detection: | 5 steps (100%, 70%, 30%, 10% (Near end), and Empty) |
| Capacity:               | 500 sheets x 2 trays                                |
| Paper Weight:           | 60 to 169 g/m <sup>2</sup> (16 to 45 lb.)           |
| Paper Size:             | A3 SEF to A5, DLT SEF to HLT                        |
| Power Source:           | DC 24V, 5V (from the main frame)                    |
| Power Consumption:      | Less than 50 W (Max.)/ Less than 35 W (Ave.)        |
| Dimensions (W x D x H): | 580 mm x 620 mm x 260 mm (22.8" x 24.4" x 10.2")    |
| Weight:                 | 25 kg (33 lb.)                                      |

## 7.7.3 LARGE CAPACITY TRAY

|                            |  |
|----------------------------|--|
| Paper Size:                | A4 LEF/LT LEF  |
| Paper Weight:              | 60 g/m <sup>2</sup> to 169 g/m <sup>2</sup> , 16 lb. to 45 lb. |
| Tray Capacity:             | 2,000 sheets (80 g/m <sup>2</sup> , 20lb.)                     |
| Remaining Paper Detection: | 5 steps (100%, 67%, 32%, 6%, Empty): Right Tray                |
| Power Source:              | DC 24 V, 5 V (from copier/printer)                             |
| Power Consumption:         | 50 W (Max.)/30 W (Ave.)  |
| Weight:                    | 25 kg (55 lb.)   |
| Size (W x D x H):          | 580 mm x 620 mm x 260 mm (22.8" x 24.4" x 10.2")               |

## 7.7.4 1000-SHEET BOOKLET FINISHER &amp; PUNCH UNIT

|                   |   |  |
|-------------------|---|--|
| Print Paper Size: | <p><b>No punch mode:</b><br/>A3/11" x 17" to A5/8.5" x 5.5" (LEF)</p> <p><b>Punch mode:</b></p> <p><b>2 holes:</b> A3/11" x 17" to B6/5.5" x 8.5" (SEF) or A4/8.5" x 11" to A5/8.5" x 5.5" (LEF)</p> <p><b>3 holes:</b><br/>A3, B4, 11" x 17" (SEF) or A4, B5, 8.5" x 11" (LEF)</p> <p><b>4 holes (Europe):</b><br/>A3, B4, 11" x 17" (SEF) or A4, B5, 8.5" x 11" (LEF)</p> <p><b>4 holes (North Europe):</b><br/>A3/11" x 17" to B6/5.5" x 8.5" (SEF)</p> <p><b>Staple mode:</b><br/>A3/11" x 17" to B5/8.5" x 11"</p> |  |
| Paper Weight:     | <p>No punch mode:</p> <p>52 to 256 g/m<sup>2</sup> (14 to 68 lb.) (Shift tray)</p> <p>52 to 105 g/m<sup>2</sup> (14 to 28 lb.) (Proof tray)</p> <p>Punch mode:</p> <p>52 to 163 g/m<sup>2</sup> (14 to 43 lb.)</p> <p>Staple mode:</p> <p>64 to 90 g/m<sup>2</sup> (17 to 24 lb.)</p> <p>Label/Thick paper/OHP cannot be stapled</p>  |  |
| Tray Capacity:    | <p><b>[Proof Tray]</b></p> <p>100 sheets: A4, 8.5" x 11" or less</p> <p>50 sheets: B4, 8.5" x 14" or more</p> <p><b>[Shift Tray]</b></p> <p>1000 sheets: A4, 8.5" x 11" (LEF) or smaller</p> <p>500 sheets: B4, 8.5" x 14" or larger</p>  | <p><b>[Saddle Stitch Staple Sort]</b></p> <p>20 sets (2-5 sheets/set *)</p> <p>10 sets (6-10 sheets/set *)</p> <p>* All sizes for saddle stitch.</p> <p><b>[Saddle Stitch Staple]</b></p> <p>10 Sheets (80 g/m<sup>2</sup> / 20 lbs)</p> |
| Staple capacity:  | <p>Single size:</p> <p>50 sheets: A4, 8.5" x 11" or smaller</p> <p>30 sheets: B4, 8.5" x 14" or larger</p>  |  |
| Staple position:  | <p>3 positions</p> <p>1-staple: 2 positions (Top Left, Top Right)</p>   |  |



|                         |  |                   |
|-------------------------|--|-------------------|
|                         | 2-staples: 1 positions                           |                   |
| Staple replenishment:   | Cartridge (5000 staples)                         |                   |
| Power consumption:      | 60 W   |                   |
| Dimensions (W x D x H): | 535 mm x 600 mm x 930 mm (21.1" x 23.6" x 36.6") |                   |
| Weight                  | Without punch unit:                              | 48 kg (105.8 lb.) |
|                         | With punch unit:                                 | 50 Kg (110.3 lb.) |

### 7.7.5 1000-SHEET FINISHER

#### *Upper Tray*

|                 |  |
|-----------------|--|
| Paper Size:     | A3 to A6<br>11" x 17" to 5.5" x 8.5"   |
| Paper Weight:   | 60 to 157 g/m <sup>2</sup> (16 to 42 lb.)  |
| Paper Capacity: | 250 sheets (A4 LEF/8.5" x 11" SEF or smaller)<br>50 sheets (A4, 8.5" x 11" or smaller)<br>30 sheets (B4, 8.5" x 14" or larger) |

#### *Lower Tray*

|                   |   |
|-------------------|---|
| Paper Size:       | No staple mode:<br>A3 to B5, DLT to HLT<br>Staple mode:<br>A3, B4, A4, B5, DLT to LT  |
| Paper Weight:     | No staple mode: 60 to 157 g/m <sup>2</sup> (16 to 42 lb)<br>Staple mode: 64 to 90 g/m <sup>2</sup> (17 to 24 lb)  |
| Stapler Capacity: | 30 sheets (A3, B4, DLT, LG)<br>50 sheets (A4, B5 LEF, LT)   |
| Paper Capacity:   | No staple mode:<br>1,000 sheets (A4/LT or smaller: 80 g/m <sup>2</sup> , 20 lb.)<br>500 sheets (A3, B4, DLT, LG: 80 g/m <sup>2</sup> , 20 lb.)<br>Staple mode: (80 g/m <sup>2</sup> , 20 lb., number of sets) |

|                         |   |        |           |           |
|-------------------------|---|--------|-----------|-----------|
|                         | Set Size  | 2 to 9 | 10 to 50  |           |
|                         | Size  |        | 10 to 30  | 31 to 50  |
|                         | A4/LT LEF<br>B5 LEF   | 100    | 100 to 20 | 100 to 20 |
|                         | A4/LT SEF   | 100    | 50 to 10  | 50 to 10  |
|                         | A3, B4, DLT, LG   | 50     | 50 to 10  | —         |
| Staple positions:       | 1 Staple: 2 positions (Front, Rear)<br>2 Staples: 2 positions (Upper, Left) |        |           |           |
| Staple Replenishment:   | Cartridge (5,000 staples/cartridge)   |        |           |           |
| Power Source:           | DC 24 V, 5 V (from the copier/printer)                                      |        |           |           |
| Power Consumption:      | 50 W  |        |           |           |
| Weight:                 | 25 kg (55.2 lbs)  |        |           |           |
| Dimensions (W x D x H): | 527 x 520 x 790 mm (20.8" x 20.5" x 31.1")                                  |        |           |           |

### 7.7.6 500-SHEET FINISHER

|                       |   |
|-----------------------|---|
| Paper Size:           | A3 to B6 (SEF)  |
| Paper Weight:         | 52 to 128 g/m <sup>2</sup> (14 to 34 lb.)   |
| Tray Capacity:        | 500 sheets: A4, LT or smaller<br>250 sheets: B4, LG or larger   |
| Staple capacity:      | 30 sheets (A3, B4, DLT, LG)<br>50 sheets (A4, LT or smaller)  |
| Staple position:      | 3 positions<br>1-staple: 2 positions (Top right-oblique, Top left-oblique)<br>2-staples: 1 positions (Left) |
| Staple replenishment: | Cartridge (5000 staples)  |

### 7.7.7 BRIDGE UNIT

|                         |  |
|-------------------------|--|
| Paper Size:             | Standard sizes<br>A6 SEF to A3, HLT to DLT<br>Non-standard sizes<br>Width: 90 to 305 mm<br>Length: 148 to 600 mm |
| Paper Weight:           | 52 g/m <sup>2</sup> to 253 g/m <sup>2</sup> , 16 lb. to 78 lb.   |
| Power Source:           | DC 24 V, 5 V (form the copier/printer)   |
| Dimensions (W x D x H): | 415 mm x 412 mm x 111 mm (16.3" x 16.2" x 4.4")  |
| Weight                  | 5 kg (11 lb.)  |

### 7.7.8 SHIFT TRAY UNIT

|                    |   |
|--------------------|---|
| Paper Size:        | Paper Width: Less than 305 mm<br>Paper Length: Less than 432 mm   |
| Paper Weight:      | 52 to 253 g/m <sup>2</sup> , 14 to 67 lb.   |
| Tray Capacity:     | 125 sheets (80 g/m <sup>2</sup> , 20 lb.): B4 or larger<br>250 sheets (80 g/m <sup>2</sup> , 20 lb.): A4 or smaller |
| Power Source:      | DC 24 V, 5 V (from the copier)  |
| Power Consumption: | 10 W  |
| Weight:            | 2 kg  |
| Size (W x D x H):  | 421 mm x 457 mm x 116 mm (16.6" x 18.0" x 4.6")   |

### 7.7.9 1-BIN TRAY UNIT

|                |   |
|----------------|---|
| Paper Size:    | Standard Size:<br>A3 /DLT to A6/ HLT SEF      |
| Paper Weight:  | 60 to 169 g/m <sup>2</sup> , 16 to 45 lb.     |
| Tray Capacity: | 125 sheets (80 g/m <sup>2</sup> , 20 lb., A4) |
| Power Source:  | DC 24 V, 5 V (from the copier)                |

|                    |   |
|--------------------|---|
| Power Consumption: | 1 W or less                                     |
| Weight:            | 2 kg  |
| Size (W x D x H):  | 520 mm x 395 mm x 120 mm (20.5" x 15.6" x 4.7") |

**BRIDGE UNIT BU3000**

**B227**





# BRIDGE UNIT BU3000 B227

## TABLE OF CONTENTS

|  |          |
|--|----------|
| <b>1. REPLACEMENT AND ADJUSTMENT .....</b>   | <b>1</b> |
| 1.1 BRIDGE UNIT CONTROL BOARD .....          | 1        |
| 1.2 BRIDGE UNIT DRIVE MOTOR.....             | 2        |
| 1.3 TRAY EXIT SENSOR .....                   | 3        |
| 1.4 RELAY SENSOR .....                       | 4        |
| <b>2. DETAILED SECTION DESCRIPTIONS.....</b> | <b>5</b> |
| 2.1 MECHANICAL COMPONENT LAYOUT .....        | 5        |
| 2.2 DRIVE LAYOUT.....                        | 6        |
| 2.3 ELECTRICAL COMPONENT LAYOUT .....        | 7        |
| 2.4 ELECTRICAL COMPONENT DESCRIPTIONS.....   | 8        |
| 2.5 JUNCTION GATE MECHANISM .....            | 9        |



# Read This First

## Safety and Symbols

### Replacement Procedure Safety


#### **CAUTION**

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

When taking apart the bridge unit, first take the unit out of the copier.

### Symbols Used in this Manual


This manual uses the following symbols.

: See or Refer to

: Screws

: Connector

: Clip ring


: E-ring



---


# 1. REPLACEMENT AND ADJUSTMENT

## 1.1 BRIDGE UNIT CONTROL BOARD

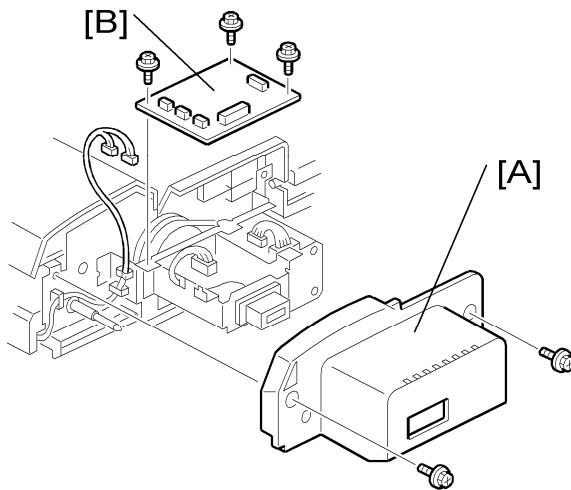


1. Bridge unit (☐ Installation Procedure in the base copier manual)
2. Rear cover [A] (☐ x 2)
3. Bridge unit control board [B] (☐ x 3, ☐ x 4)

## 1.2 BRIDGE UNIT DRIVE MOTOR

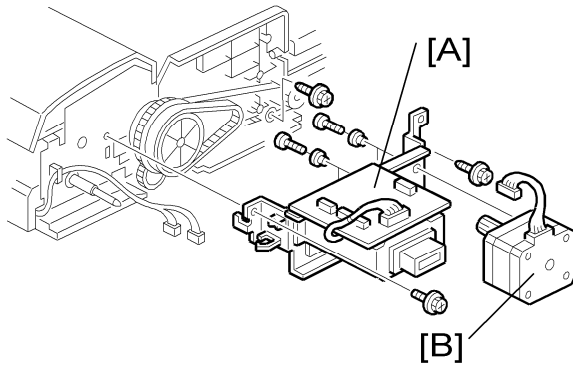


1. Bridge unit (☞ Installation Procedure in the base copier manual)
2. Rear cover
3. Bracket [A] (☞ x 3, ☞ x 2)
4. Bridge unit drive motor [B] (☞ x 4, ☞ x 1)

## 1.3 TRAY EXIT SENSOR

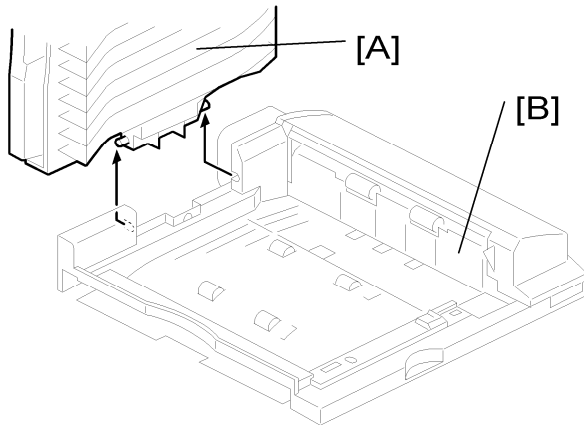


1. Bridge unit (🔧 Installation Procedure in the base copier manual)
2. Rear cover ("Rear Cover")
3. Paper tray [A]
4. Exit guide [B] (🔧 x 1)

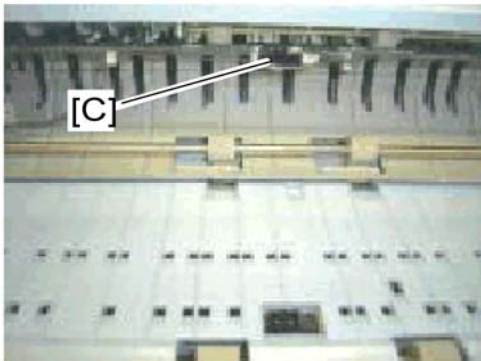

5. Tray exit sensor [C] (🔧 x 1)

## 1.4 RELAY SENSOR

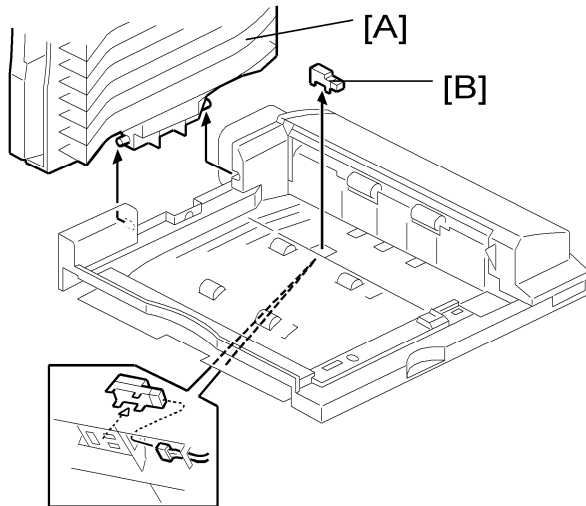


1. Bridge unit (☞ Installation Procedure in the base copier manual)
2. Paper tray [A]
3. Relay sensor [B] (☞ x 1)




## 2. DETAILED SECTION DESCRIPTIONS

### 2.1 MECHANICAL COMPONENT LAYOUT

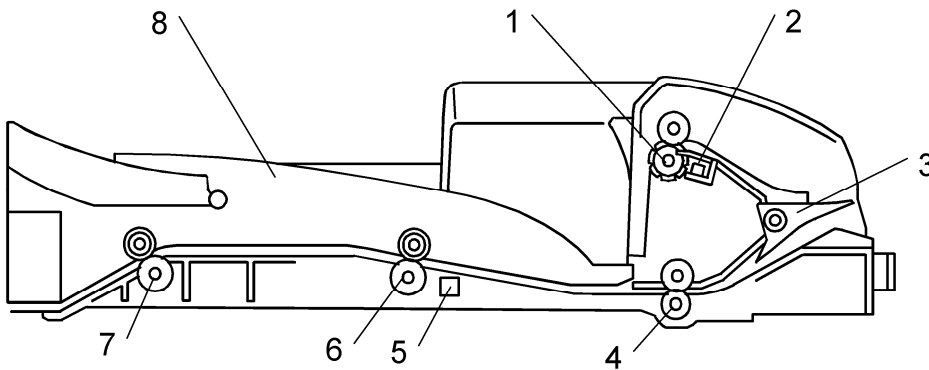


|                         |                         |
|-------------------------|-------------------------|
| 1. Upper Exit Roller    | 5. Relay Sensor         |
| 2. Tray Exit Sensor     | 6. 2nd Transport Roller |
| 3. Junction Gate        | 7. Left Exit Roller     |
| 4. 1st Transport Roller | 8. Paper Tray           |

## 2.2 DRIVE LAYOUT

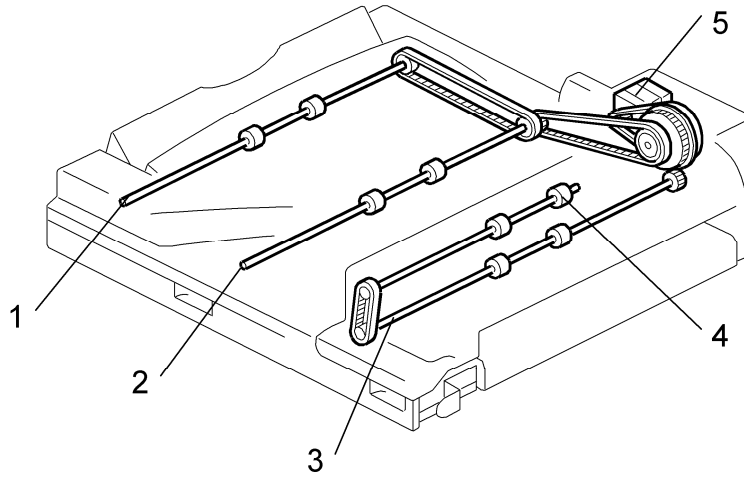

1. Left Exit Roller
2. 2nd Transport Roller
3. 1st Transport Roller
4. Upper Exit Roller
5. Bridge Unit Drive Motor

## 2.3 ELECTRICAL COMPONENT LAYOUT

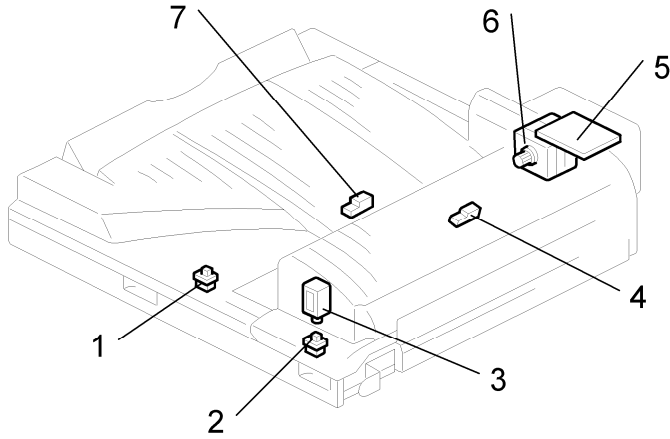


1. Left Guide Switch
2. Right Guide Switch
3. Junction Gate Solenoid
4. Tray Exit Sensor
5. Bridge Unit Control Board
6. Bridge Unit Drive Motor
7. Relay Sensor

## 2.4 ELECTRICAL COMPONENT DESCRIPTIONS

| Symbol           | Name                      | Function  | Index No. |
|------------------|---------------------------|---|-----------|
| <b>Motors</b>    |                           |   |           |
| M1               | Drive Motor               | Drives the bridge unit.   | 6         |
| <b>Sensors</b>   |                           |   |           |
| S1               | Tray Exit                 | Checks for misfeeds.  | 4         |
| S2               | Relay                     | Checks for misfeeds.  | 7         |
| <b>Switches</b>  |                           |   |           |
| SW2              | Right Guide               | Detects when the right guide is opened.   | 2         |
| SW3              | Left Guide                | Detects when the left guide is opened.  | 1         |
| <b>Solenoids</b> |                           |   |           |
| SOL1             | Junction Gate             | Moves the junction gate to direct the paper to the upper tray (on top of the bridge unit) or to the finisher. | 3         |
| <b>PCBs</b>      |                           |   |           |
| PCB1             | Bridge Unit Control Board | Controls the bridge unit.   | 5         |

## 2.5 JUNCTION GATE MECHANISM

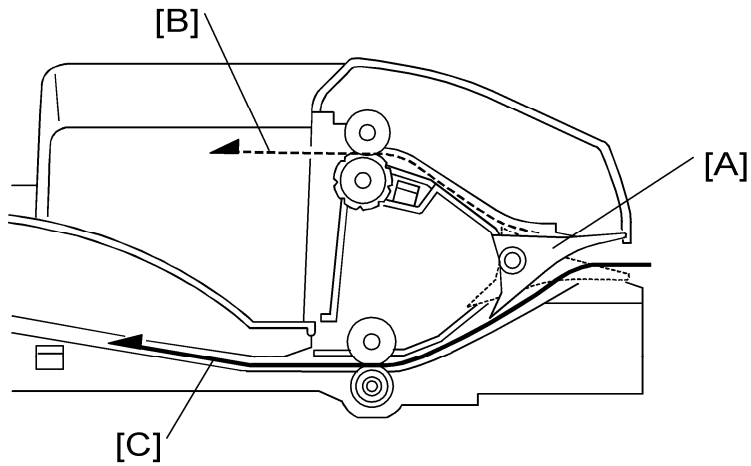

The junction gate [A] directs any paper reaching the bridge unit to either the upper tray (on top of the bridge unit) or to the finisher, depending on which has been selected.

If the junction gate solenoid has been activated, the junction gate [A] points downward and directs the paper to the upper tray [B] (dotted line path in illustration). When the solenoid is off, the junction gate points upward and the paper is fed out to the finisher [C] by the transport and left exit rollers (solid line).



**FAX OPTION**  
**B786**





# FAX OPTION B786

## TABLE OF CONTENTS

|  |           |
|--|-----------|
| <b>1. INSTALLATION .....</b>               | <b>1</b>  |
| 1.1 FAX UNIT (B786) .....                  | 1         |
| 1.1.1 COMPONENT CHECK .....                | 1         |
| 1.1.2 INSTALLATION PROCEDURE .....         | 2         |
| 1.2 G3 INTERFACE UNIT (B787) .....         | 7         |
| 1.2.1 COMPONENT CHECK .....                | 7         |
| 1.2.2 INSTALLATION PROCEDURE .....         | 8         |
| 1.3 FAX UNIT OPTION .....                  | 14        |
| 1.3.1 HANDSET (B433) .....                 | 14        |
| <b>2. REPLACEMENT AND ADJUSTMENT .....</b> | <b>16</b> |
| 2.1 FCU .....                              | 16        |
| <b>3. TROUBLESHOOTING .....</b>            | <b>17</b> |
| 3.1 ERROR CODES .....                      | 17        |
| 3.2 IFAX TROUBLESHOOTING .....             | 32        |
| 3.3 IP-FAX TROUBLESHOOTING .....           | 34        |
| 3.3.1 IP-FAX TRANSMISSION .....            | 34        |
| 3.3.2 IP-FAX RECEPTION .....               | 36        |
| <b>4. SERVICE TABLES .....</b>             | <b>39</b> |
| 4.1 BEFOREHAND .....                       | 39        |
| 4.2 SERVICE TABLES .....                   | 40        |
| 4.2.1 SP1-XXX (BIT SWITCHES) .....         | 40        |
| 4.2.2 SP2-XXX (RAM DATA) .....             | 41        |
| 4.2.3 SP3-XXX (TEL LINE SETTINGS) .....    | 41        |
| 4.2.4 SP4-XXX (ROM VERSIONS) .....         | 43        |
| 4.2.5 SP5-XXX (INITIALIZING) .....         | 43        |
| 4.2.6 SP6-XXX (REPORTS) .....              | 44        |
| 4.2.7 SP7-XXX (TEST MODES) .....           | 46        |
| 4.2.8 SP9-XXX (DESIGN SWITCH MODE) .....   | 47        |
| 4.3 BIT SWITCHES .....                     | 48        |

|  |            |
|--|------------|
| 4.3.1 SYSTEM SWITCHES .....                    | 48         |
| 4.3.2 I-FAX SWITCHES .....                     | 57         |
| 4.3.3 PRINTER SWITCHES .....                   | 62         |
| 4.3.4 COMMUNICATION SWITCHES .....             | 67         |
| 4.3.5 G3 SWITCHES .....                        | 73         |
| 4.3.6 G3-2/3 SWITCHES .....                    | 80         |
| 4.3.7 IP FAX SWITCHES .....                    | 87         |
| 4.4 NCU PARAMETERS .....                       | 93         |
| 4.5 DEDICATED TRANSMISSION PARAMETERS .....    | 105        |
| 4.5.1 PROGRAMMING PROCEDURE .....              | 105        |
| 4.5.2 PARAMETERS .....                         | 105        |
| 4.6 SERVICE RAM ADDRESSES .....                | 112        |
| <b>5. DETAILED SECTION DESCRIPTIONS .....</b>  | <b>122</b> |
| 5.1 OVERVIEW .....                             | 122        |
| 5.2 BOARDS .....                               | 123        |
| 5.2.1 FCU .....                                | 123        |
| 5.2.2 MBU .....                                | 124        |
| 5.2.3 SG3 BOARD .....                          | 125        |
| 5.3 VIDEO DATA PATH .....                      | 127        |
| 5.3.1 TRANSMISSION .....                       | 127        |
| 5.3.2 RECEPTION .....                          | 129        |
| 5.4 FAX COMMUNICATION FEATURES .....           | 130        |
| 5.4.1 MULTI-PORT .....                         | 130        |
| 5.4.2 DOCUMENT SERVER .....                    | 130        |
| 5.4.3 INTERNET MAIL COMMUNICATION .....        | 131        |
| 5.5 IP-FAX .....                               | 140        |
| 5.5.1 WHAT IS IP-FAX? .....                    | 140        |
| <b>6. SPECIFICATIONS .....</b>                 | <b>141</b> |
| 6.1 GENERAL SPECIFICATIONS .....               | 141        |
| 6.1.1 FCU .....                                | 141        |
| 6.1.2 CAPABILITIES OF PROGRAMMABLE ITEMS ..... | 142        |
| 6.2 IFAX SPECIFICATIONS .....                  | 144        |
| 6.3 IP-FAX SPECIFICATIONS .....                | 145        |
| 6.4 FAX UNIT CONFIGURATION .....               | 146        |

# Read This First

## Important Safety Notices

### **WARNING**

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be remote risk of electric shock from lightning.
- Do not use a telephone or cellular phone to report a gas leak in the vicinity of the leak.

### **CAUTION**

- Before installing the fax unit, switch off the main switch, and disconnect the power cord.
- The fax unit contains a lithium battery. The danger of explosion exists if a battery of this type is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer. Discard batteries in accordance with the manufacturer's instructions and local regulations.





### Note

- **Note for Australia:**
- Unit must be connected to Telecommunication Network through a line cord which meets the requirements of ACA Technical Standard TS008.



## Symbols and Abbreviations


### Conventions Used in this Manual

This manual uses several symbols.

| Symbol  | What it means           |
|---|-------------------------|
|  | Refer to section number |
|  | Screw                   |
|  | Connector               |
|  | E-ring                  |

## Fax Unit (B786)

|   |           |
|---|-----------|
|  | Clip ring |
|  | Clamp     |

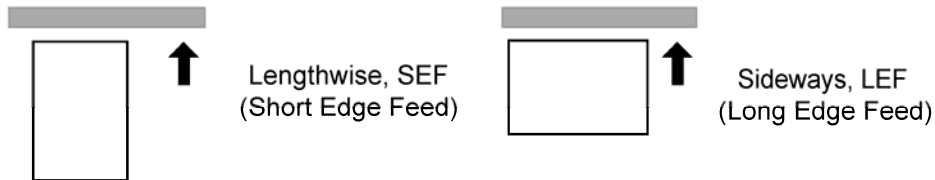

### Cautions, Notes, etc.

The following headings provide special information:

#### **WARNING**

- Failure to obey warning information could result in serious injury or death.

#### **CAUTION**

- Obey these guidelines to ensure safe operation and prevent minor injuries.

#### **Important**

- Obey these guidelines to avoid problems such as misfeeds, damage to originals, loss of valuable data and to prevent damage to the machine.
- Always obey these guidelines to avoid serious problems such as misfeeds, damage to originals, loss of valuable data and to prevent damage to the machine. **bold** is added for emphasis.

#### **Note**

- This information provides tips and advice about how to best service the machine.

# 1. INSTALLATION


## 1.1 FAX UNIT (B786)

### 1.1.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.

| No. | Description               | Q'ty             |
|-----|---------------------------|------------------|
| 1   | FCU                       | 1                |
| 2   | Mother Board              | 1                |
| 3   | Screw                     | 13               |
| 4   | Spacer                    | 2                |
| 5   | G3 Decal                  | 1                |
| 6   | Serial Number Decal       | 1                |
| 7   | FCC Decal (NA only)       | 1                |
| 8   | Fax key                   | 2                |
| 9   | Clamp (NA only)           | 3                |
| 10  | Ferrite Core              | 1 or 2 (NA only) |
| 11  | Telephone Cord (NA only)  | 1                |
| 12  | Speaker                   | 1                |
| 13  | Handset bracket (NA only) | 1                |


## Fax Unit (B786)

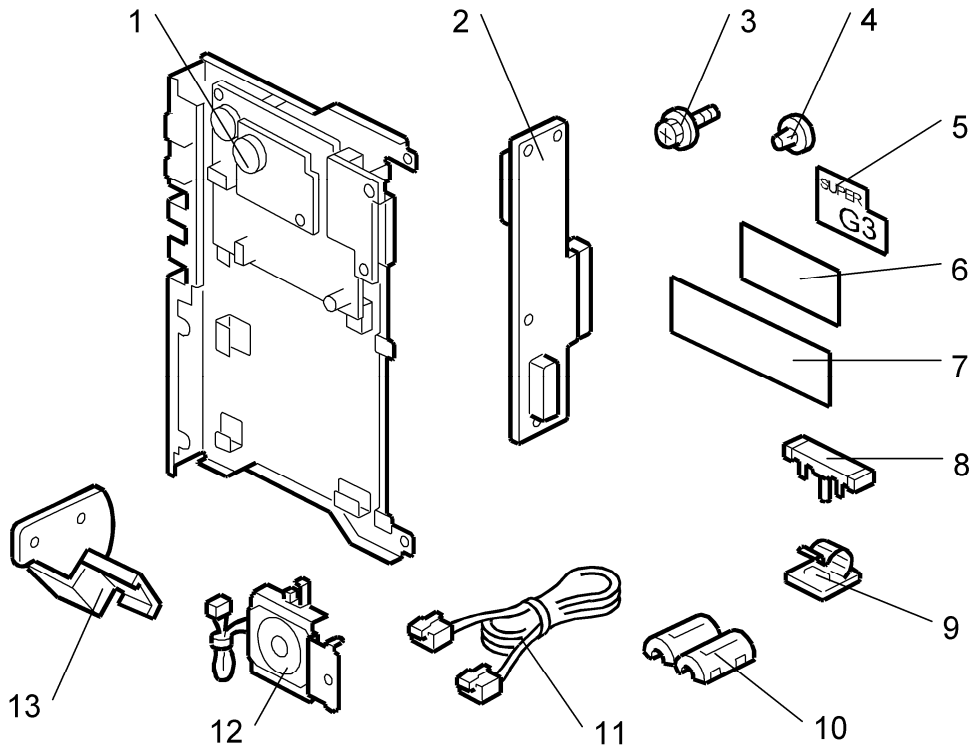

### 1.1.2 INSTALLATION PROCEDURE


#### **⚠ CAUTION**

- Before installing this fax unit,
  - Print out all data in the printer buffer.
  - Turn off the main power switch and disconnect the power cord and the network cable.

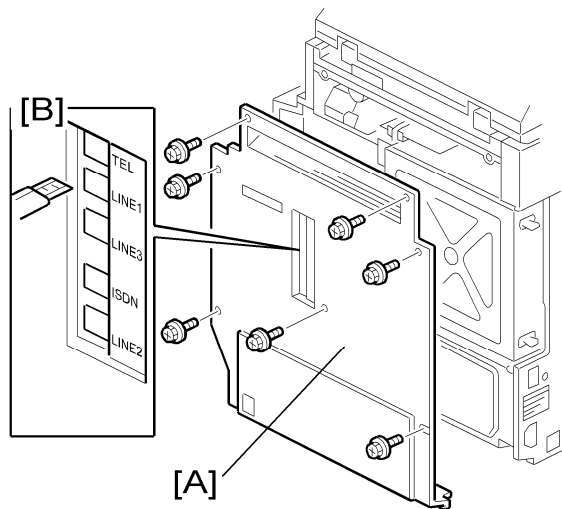


1. Remove the rear cover [A] (⚙ x 7).
2. Cut off the "LINE 1" cover [B].

3. Cut off the "TEL" cover [B] if you install the handset unit.

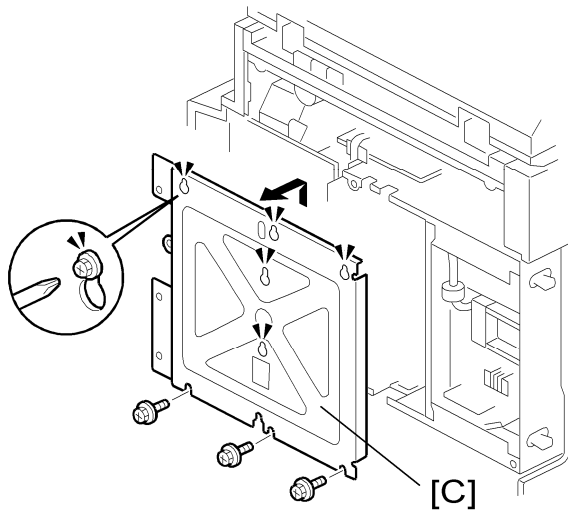

4. Loosen the eight screws (⚙️ x 8).
5. Slide up the controller box cover [C], and then remove it.

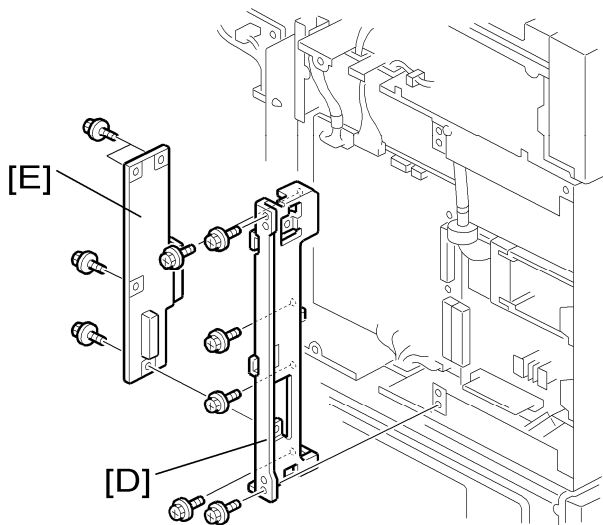


6. Remove the mother board bracket [D] (⚙️ x 6).
7. Attach the mother board [E] to the mother board bracket (⚙️ x 4).
8. Reinstall the mother board with the mother board bracket to the BICU board (⚙️ x 6).

↓ Note

- Make sure that the connection between the mother board connector and BICU connector (CN512) is firm when reinstalling the mother board to the BICU board.


## Fax Unit (B786)

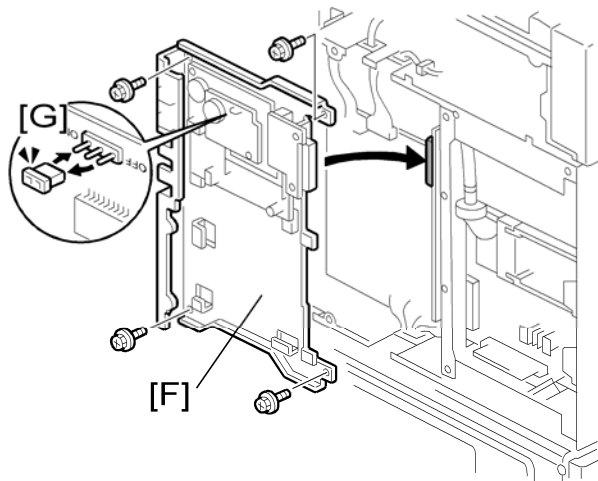

9. Install the fax unit [F] to the mother board (⚙ x 4).
10. Change the MBU battery jumper switch connector [G] from the "OFF" position to the "ON" position.
11. Press down the MBU.


### ↓ Note

- Make sure that the MBU is seated correctly. If not, SC occurs (SC672).

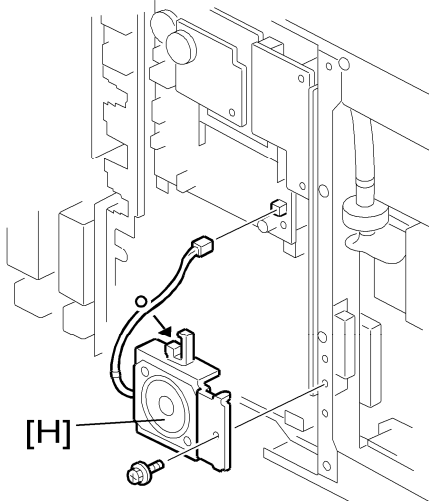

12. Install the speaker [H] to the fax controller board (⚙ x 1, ⚙ x 1, ⚙ x 1).



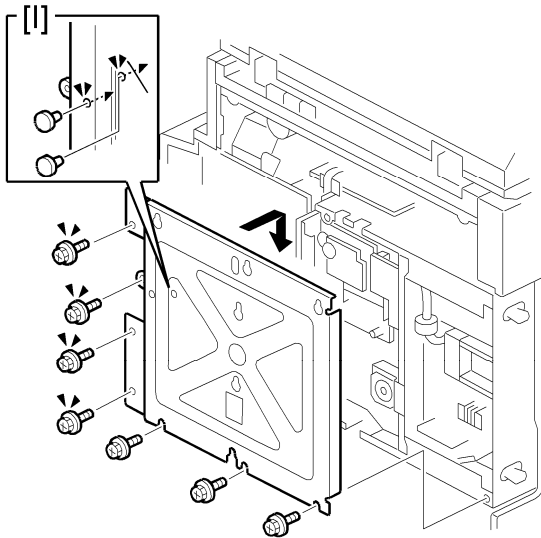



13. Attach the MBU spacers [I] to the controller box cover.

14. Reattach the controller box cover

↓ Note


- In this step, use additional four screws and secure the controller box cover (see the step 4,  x 12).

15. Reattach the rear cover ( x 7).

16. Attach the handset bracket and clamps to the copier, and then connect the handset cord with the ferrite core to the "TEL" jack if you install the handset to the machine.

↓ Note


- For details, refer to the "Installation" in the Service Manual for the Fax Unit (B786).

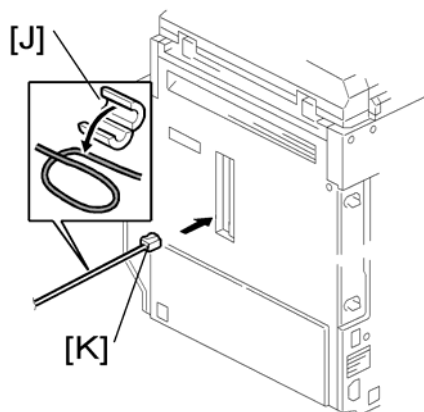


17. Attach the ferrite core [J] to the telephone cord [K].

18. Connect the telephone cord [K] to the "LINE 1" jack.

Fax Unit (B786)

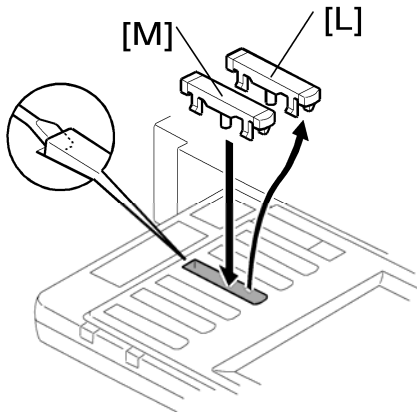

19. Replace the third key-slot cover [L] with the fax key [M].

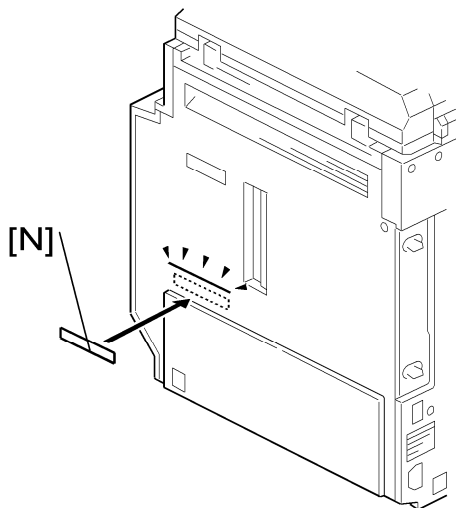

20. Attach the decal (SUPER G3) to the front door.  
21. Attach the FCC decal [N] and serial number decal [N] under the serial number decal.

↓ Note

- The FCC decal is for the U.S. and Canada only.

22. Put the power plug into the outlet and turn on the main power of the machine.

↓ Note

- Make sure that the outlet is grounded.
- "SRAM formatted" shows on the operation panel after you have turned the main switch on. Turn the main switch off and on again for normal use.


23. Make sure that the date and time are correctly set.

# 1.2 G3 INTERFACE UNIT (B787)

## 1.2.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.

| No. | Description              | Q'ty |
|-----|--------------------------|------|
| 1   | SG3 Board                | 1    |
| 2   | Interface Board          | 1    |
| 3   | Harness                  | 1    |
| 4   | Flat Cable               | 1    |
| 5   | Clamp                    | 1    |
| 6   | Screw                    | 7    |
| 7   | Ferrite Core             | 1    |
| 8   | Telephone Cord (NA only) | 1    |
| 9   | Flat Cable Holder        | 1    |

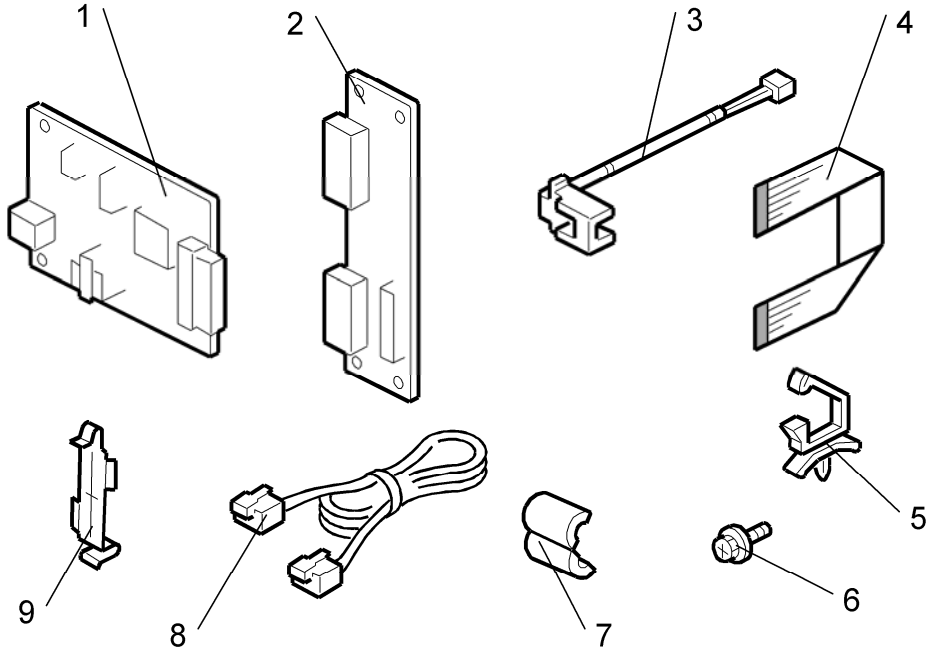



## 1.2.2 INSTALLATION PROCEDURE


### CAUTION



- Before installing this optional unit,
  - Print out all data in the printer buffer.
  - Turn off the main switch and disconnect the power cord and the network cable.

You can add two more G3 boards to this model. Follow the procedures for adding the single G3 board installation or double G3 boards installation as a customer needs.

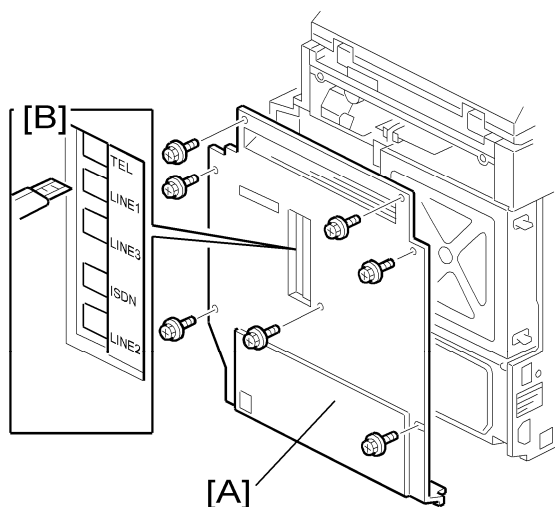


1. Remove the rear cover [A] ( x 7).
2. Cut off the "LINE 2" cover [B] for installing the single G3 board or "LINE 2 and LINE 3" covers for installing the double G3 boards.

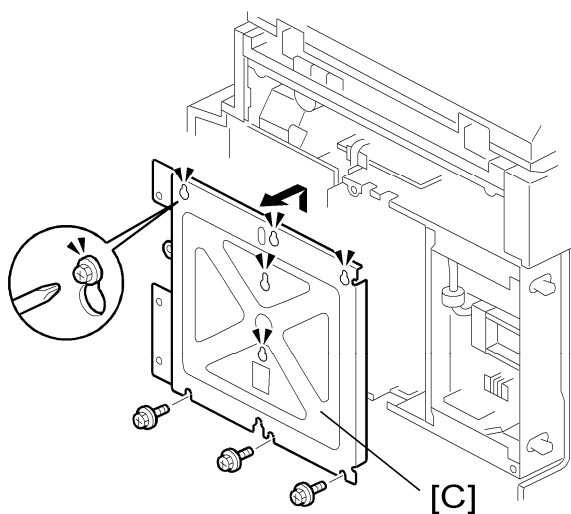

3. Loosen the eight screws ( x 8), and remove the four screws ( x 4) if the fax unit has already been installed.


- Slide up the controller box cover [C], and then remove it.

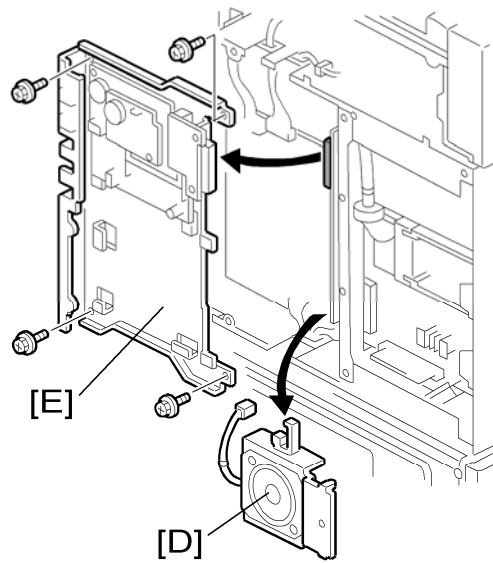


- Remove the speaker [D] (⚙️ x 1, 🔌 x 1)
- Remove the fax unit [E] if the fax unit has already been installed (⚙️ x 4).

G3 Interface Unit (B787)

**For Installing the Single G3 Board**

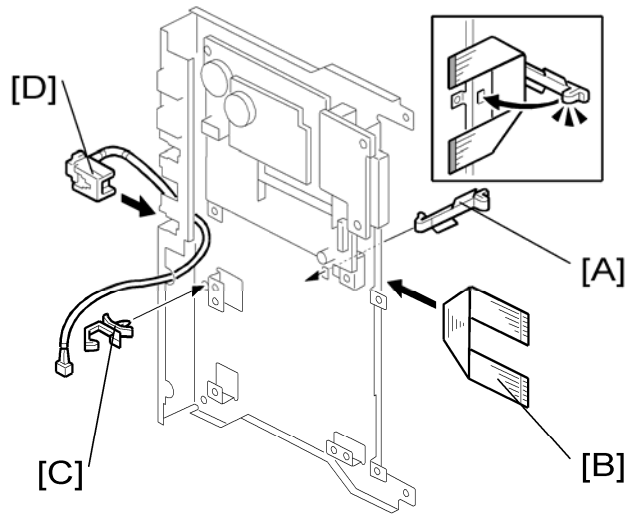


1. Attach the flat cable holder [A], and then hold the flat cable [B] with it as shown.
2. Attach the clamp [C] as shown.
3. Install the telephone jack [D] for G3 board (🔌 x 1).

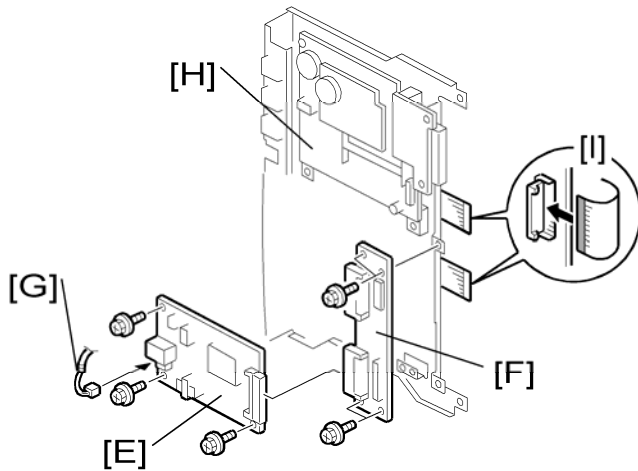


4. Attach the G3 board [E] to the interface board [F], and then attach it to the fax unit (🔌 x 7).
5. Connect the telephone jack connector [G] to the G3 board [E].
6. Connect the interface board [F] to the fax controller board [H] with the flat cable [I].

**For Installing the Double G3 Boards**

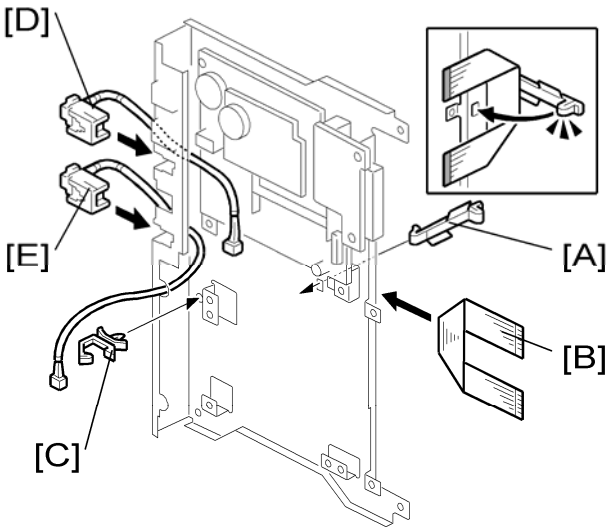

- 1. Attach the flat cable holder [A], and then hold the flat cable [B] with it as shown.
- 2. Attach the clamp [C] as shown.
- 3. Install the telephone jacks [D] and [E] for G3 boards.

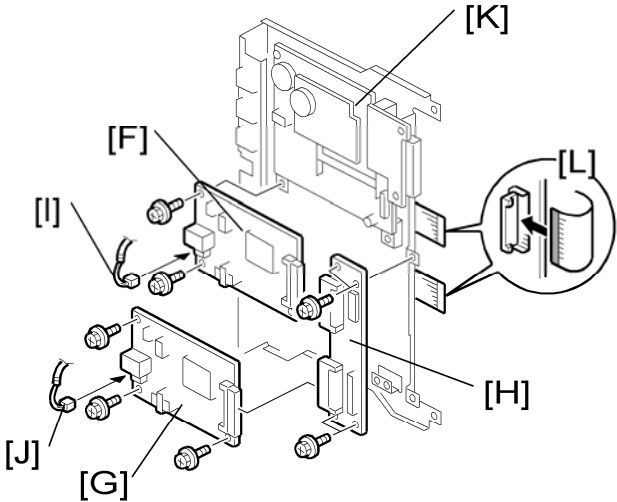

- 4. Attach the G3 boards [F] and [G] to the interface board [H], and then attach it to the fax unit (⌀ x 9).
- 5. Connect the telephone jack connectors [I] and [J] to the G3 board.
- 6. Connect the interface board [G] to the fax controller board [K] with the flat cable [L].


## G3 Interface Unit (B787)



### **For Single G3 Board and Double G3 Boards**


1. Reinstall the fax unit to the controller board (see step 5,  x 4).

 **Note**

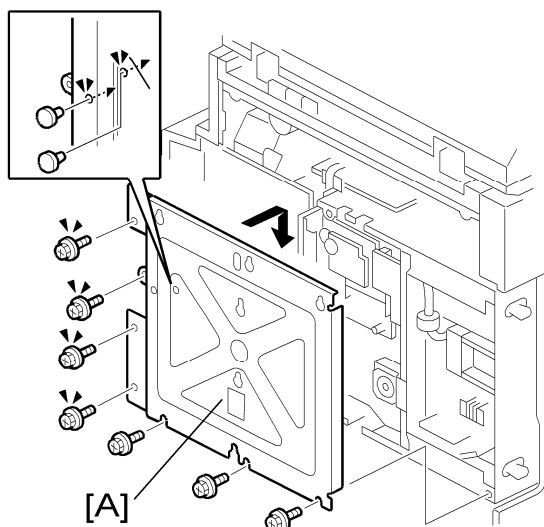- If the fax unit has not been installed, attaching the mother board to the mother board bracket is necessary. For details, refer to the "FAX OPTION TYPE MPC3000 (B786) INSTALLATION PROCEDURE".



2. Attach the controller box cover [A] to the controller box (see step 3 and 4,  x 12).
3. Attach the rear cover to the copier ( x7).

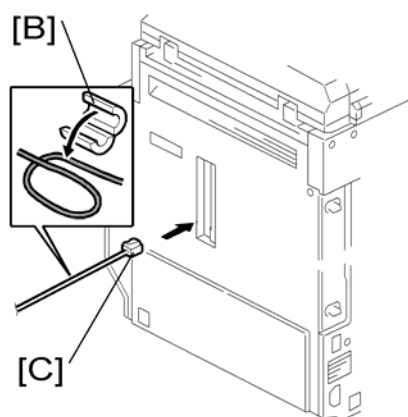

4. Attach the ferrite core [B] to the telephone cord [C].
5. Connect the telephone cord [C] to the "LINE 2" jack.

 **Note**

- Connect the one more telephone cord to the "LINE 3" jack if you have installed two G3 boards. Make sure that each telephone (LINE2 and LINE3) cord has a ferrite core.



## G3 Interface Unit (B787)

6. Put the power plug into the outlet and turn on the main power switch.
7. Enter the service mode. Set bit 1 of communication switch 16 to "1" (SP1-104-023).
8. Set bit 3 of communication switch 16 to "1" (SP1-104-023) if you have installed two G3 boards.
9. Turn the main power switch off and on.
10. Print out the system parameter list. Then check that "G3" shows as an option.
11. Set up and program the items required for PSTN-2 communications.


## 1.3 FAX UNIT OPTION

### 1.3.1 HANDSET (B433)

**Note**


- The optional handset is available for the U.S. version only.

#### ***For the copier without any finisher***

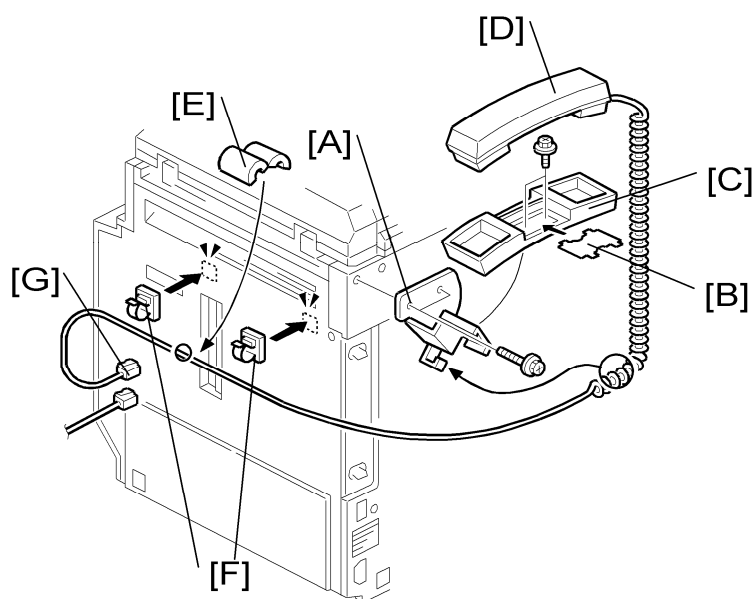

1. Make two holes in the scanner left cover.
2. Attach the bracket [A] enclosed with the fax unit (2) as shown.
3. Remove the label [B] from the handset cradle [C]. Attach the cradle [C] to the bracket [A] (2), and then replace the label [B].
4. Install the handset [D] on the cradle [C].
5. Attach the ferrite core [E] to the cable.
6. Attach the two clamps [F] as shown.
7. Line the cable [G] as shown (2).
8. Connect the cable [G] to the "TEL" jack at the rear of the machine.

***For the copier with any finisher***

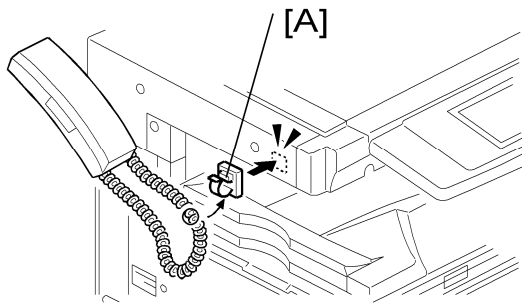

9. Do the hand set installation procedure "for the copier without any finisher".
10. Attach the clamp [A] to the scanner left cover.
11. Clamp the hand set cord with clamp [A].

## 2. REPLACEMENT AND ADJUSTMENT

### 2.1 FCU

1. When you replace the FCU board, remove the MBU board from the old FCU board and install it on the new FCU board.
2. Set the correct date and time with the User Tools: User Tools> System Settings> Timer Setting> Set Date/Time.

 Note

- Do not turn off the battery switch (SW1).
- Do SP6101 to print the system parameters, and check the settings.

## 3. TROUBLESHOOTING

### 3.1 ERROR CODES

If an error code occurs, retry the communication. If the same problem occurs, try to fix the problem as suggested below. Note that some error codes appear only in the error code display and on the service report.

| Code | Meaning   | Suggested Cause/Action  |
|------|---|---|
| 0-00 | DIS/NSF not detected within 40 s of Start being pressed | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ The machine at the other end may be incompatible.</li> <li>▪ Replace the FCU.</li> <li>▪ Check for DIS/NSF with an oscilloscope.</li> <li>▪ If the rx signal is weak, there may be a bad line.</li> </ul>  |
| 0-01 | DCN received unexpectedly                               | <ul style="list-style-type: none"> <li>▪ The other party is out of paper or has a jammed printer.</li> <li>▪ The other party pressed Stop during communication.</li> </ul>  |
| 0-03 | Incompatible modem at the other end                     | The other terminal is incompatible.   |
| 0-04 | CFR or FTT not received after modem training            | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Try changing the tx level and/or cable equalizer settings.</li> <li>▪ Replace the FCU.</li> <li>▪ The other terminal may be faulty; try sending to another machine.</li> <li>▪ If the rx signal is weak or defective, there may be a bad line.</li> </ul> <p><b>Cross reference</b><br/>Tx level - NCU Parameter 01 (PSTN)<br/>Cable equalizer - G3 Switch 07 (PSTN)<br/>Dedicated Tx parameters in Service Program Mode</p> |
| 0-05 | Modem training fails even G3 shifts down to 2400 bps.   | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Try adjusting the tx level and/or cable equalizer.</li> <li>▪ Replace the FCU.</li> <li>▪ Check for line problems.</li> </ul> <p><b>Cross reference</b><br/>See error code 0-04.</p>   |
| 0-06 | The other terminal did not                              | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> </ul>  |

## Error Codes

| Code | Meaning  | Suggested Cause/Action   |
|------|--|--|
|      | reply to DCS   | <ul style="list-style-type: none"> <li>▪ Try adjusting the tx level and/or cable equalizer settings.</li> <li>▪ Replace the FCU.</li> <li>▪ The other end may be defective or incompatible; try sending to another machine.</li> <li>▪ Check for line problems.</li> </ul> <p><b>Cross reference</b><br/>See error code 0-04.</p>  |
| 0-07 | No post-message response from the other end after a page was sent                        | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Replace the FCU.</li> <li>▪ The other end may have jammed or run out of paper.</li> <li>▪ The other end user may have disconnected the call.</li> <li>▪ Check for a bad line.</li> <li>▪ The other end may be defective; try sending to another machine.</li> </ul>   |
| 0-08 | The other end sent RTN or PIN after receiving a page, because there were too many errors | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Replace the FCU.</li> <li>▪ The other end may have jammed, or run out of paper or memory space.</li> <li>▪ Try adjusting the tx level and/or cable equalizer settings.</li> <li>▪ The other end may have a defective modem/FCU; try sending to another machine.</li> <li>▪ Check for line problems and noise.</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>▪ Tx level - NCU Parameter 01 (PSTN)</li> <li>▪ Cable equalizer - G3 Switch 07 (PSTN)</li> <li>▪ Dedicated Tx parameters in Service Program Mode</li> </ul> |
| 0-14 | Non-standard post message response code received   | <ul style="list-style-type: none"> <li>▪ Incompatible or defective remote terminal; try sending to another machine.</li> <li>▪ Noisy line: resend.</li> <li>▪ Try adjusting the tx level and/or cable equalizer settings.</li> <li>▪ Replace the FCU.</li> </ul> <p><b>Cross reference</b><br/>See error code 0-08.</p>  |
| 0-15 | The other terminal is not capable of specific functions.                                 | <p>The other terminal is not capable of accepting the following functions, or the other terminal's memory is full.</p> <ul style="list-style-type: none"> <li>▪ Confidential rx</li> <li>▪ Transfer function</li> <li>▪ SEP/SUB/PWD/SID</li> </ul>   |
| 0-16 | CFR or FTT not detected after modem training in  | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Replace the FCU.</li> </ul>   |

| Code | Meaning  | Suggested Cause/Action  |
|------|--|---|
|      | confidential or transfer mode  | <ul style="list-style-type: none"> <li>▪ Try adjusting the tx level and/or cable equalizer settings.</li> <li>▪ The other end may have disconnected, or it may be defective; try calling another machine.</li> <li>▪ If the rx signal level is too low, there may be a line problem.</li> </ul> <p><b>Cross reference</b><br/>See error code 0-08.</p>  |
| 0-20 | Facsimile data not received within 6 s of retraining   | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Replace the FCU.</li> <li>▪ Check for line problems.</li> <li>▪ Try calling another fax machine.</li> <li>▪ Try adjusting the reconstruction time for the first line and/or rx cable equalizer setting.</li> </ul> <p><b>Cross reference</b><br/>Reconstruction time - G3 Switch 0A, bit 6<br/>Rx cable equalizer - G3 Switch 07 (PSTN)</p>  |
| 0-21 | EOL signal (end-of-line) from the other end not received within 5 s of the previous EOL signal                       | <ul style="list-style-type: none"> <li>▪ Check the connections between the FCU and line.</li> <li>▪ Check for line noise or other line problems.</li> <li>▪ Replace the FCU.</li> <li>▪ The remote machine may be defective or may have disconnected.</li> </ul> <p><b>Cross reference</b><br/>Maximum interval between EOLs and between ECM frames - G3 Bit Switch 0A, bit 4</p>   |
| 0-22 | The signal from the other end was interrupted for more than the acceptable modem carrier drop time (default: 200 ms) | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Replace the FCU.</li> <li>▪ Defective remote terminal.</li> <li>▪ Check for line noise or other line problems.</li> <li>▪ Try adjusting the acceptable modem carrier drop time.</li> </ul> <p><b>Cross reference</b><br/>Acceptable modem carrier drop time - G3 Switch 0A, bits 0 and 1</p>   |
| 0-23 | Too many errors during reception   | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Replace the FCU.</li> <li>▪ Defective remote terminal.</li> <li>▪ Check for line noise or other line problems.</li> <li>▪ Try asking the other end to adjust their tx level.</li> <li>▪ Try adjusting the rx cable equalizer setting and/or rx error criteria.</li> </ul> <p><b>Cross reference</b><br/>Rx cable equalizer - G3 Switch 07 (PSTN)<br/>Rx error criteria - Communication Switch 02, bits 0 and 1</p> |

## Error Codes

| Code | Meaning  | Suggested Cause/Action  |
|------|--|---|
| 0-30 | The other terminal did not reply to NSS(A) in AI short protocol mode   | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Try adjusting the tx level and/or cable equalizer settings.</li> <li>▪ The other terminal may not be compatible.</li> </ul> <p><b>Cross reference</b><br/>Dedicated tx parameters - Section 4</p>                                    |
| 0-32 | The other terminal sent a DCS, which contained functions that the receiving machine cannot handle.                 | <ul style="list-style-type: none"> <li>▪ Check the protocol dump list.</li> <li>▪ Ask the other party to contact the manufacturer.</li> </ul>   |
| 0-33 | The data reception (not ECM) is not completed within 10 minutes.   | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ The other terminal may have a defective modem/FCU.</li> </ul>  |
| 0-52 | Polarity changed during communication  | <ul style="list-style-type: none"> <li>▪ Check the line connection.</li> <li>▪ Retry communication.</li> </ul>  |
| 0-55 | FCU does not detect the SG3.   | <ul style="list-style-type: none"> <li>▪ FCU firmware or board defective.</li> <li>▪ SG3 firmware or board defective.</li> </ul>  |
| 0-56 | The stored message data exceeds the capacity of the mailbox in the SG3.  | <ul style="list-style-type: none"> <li>▪ SG3 firmware or board defective.</li> </ul>  |
| 0-70 | The communication mode specified in CM/JM was not available (V.8 calling and called terminal)                      | <ul style="list-style-type: none"> <li>▪ The other terminal did not have a compatible communication mode (e.g., the other terminal was a V.34 data modem and not a fax modem.)</li> <li>▪ A polling tx file was not ready at the other terminal when polling rx was initiated from the calling terminal.</li> </ul> |
| 0-74 | The calling terminal fell back to T.30 mode, because it could not detect ANSam after sending CI.                   | <ul style="list-style-type: none"> <li>▪ The calling terminal could not detect ANSam due to noise, etc.</li> <li>▪ ANSam was too short to detect.</li> <li>▪ Check the line connection and condition.</li> <li>▪ Try making a call to another V.8/V.34 fax.</li> </ul>  |
| 0-75 | The called terminal fell back to T.30 mode, because it could not detect a CM in response to ANSam (ANSam timeout). | <ul style="list-style-type: none"> <li>▪ The terminal could not detect ANSam.</li> <li>▪ Check the line connection and condition.</li> <li>▪ Try receiving a call from another V.8/V.34 fax.</li> </ul>   |
| 0-76 | The calling terminal fell back to T.30 mode, because it could not detect a JM in response to CM (CM timeout).      | <ul style="list-style-type: none"> <li>▪ The called terminal could not detect a CM due to noise, etc.</li> <li>▪ Check the line connection and condition.</li> <li>▪ Try making a call to another V.8/V.34 fax.</li> </ul>  |
| 0-77 | The called terminal fell   | <ul style="list-style-type: none"> <li>▪ The calling terminal could not detect a JM due</li> </ul>  |



| Code | Meaning  | Suggested Cause/Action  |
|------|--|---|
|      | back to T.30 mode, because it could not detect a CJ in response to JM (JM timeout).  | <ul style="list-style-type: none"> <li>to noise, etc.</li> <li>▪ A network that has narrow bandwidth cannot pass JM to the other end.</li> <li>▪ Check the line connection and condition.</li> <li>▪ Try receiving a call from another V.8/V.34 fax.</li> </ul>   |
| 0-79 | The called terminal detected CI while waiting for a V.21 signal.   | <ul style="list-style-type: none"> <li>▪ Check for line noise or other line problems.</li> <li>▪ If this error occurs, the called terminal falls back to T.30 mode.</li> </ul>  |
| 0-80 | The line was disconnected due to a timeout in V.34 phase 2 – line probing.   | <ul style="list-style-type: none"> <li>▪ The guard timer expired while starting these phases. Serious noise, narrow bandwidth, or low signal level can cause these errors.</li> </ul> <p>If these errors happen at the transmitting terminal:</p> <ul style="list-style-type: none"> <li>▪ Try making a call at a later time.</li> <li>▪ Try using V.17 or a slower modem using dedicated tx parameters.</li> <li>▪ Try increasing the tx level.</li> <li>▪ Try adjusting the tx cable equalizer setting.</li> </ul> <p>If these errors happen at the receiving terminal:</p> <ul style="list-style-type: none"> <li>▪ Try adjusting the rx cable equalizer setting.</li> <li>▪ Try increasing the tx level.</li> <li>▪ Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.</li> </ul> |
| 0-81 | The line was disconnected due to a timeout in V.34 phase 3 – equalizer training.   |   |
| 0-82 | The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.   |   |
| 0-83 | The line was disconnected due to a timeout in the V.34 control channel restart sequence.   |   |
| 0-84 | The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.  |   |
| 0-85 | The line was disconnected due to abnormal signaling in V.34 control channel restart.   | <ul style="list-style-type: none"> <li>▪ The signal did not stop within 10 s.</li> <li>▪ Turn off the machine, then turn it back on.</li> <li>▪ If the same error is frequent, replace the FCU.</li> </ul>  |
| 0-86 | The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate. | <ul style="list-style-type: none"> <li>▪ The other terminal was incompatible.</li> <li>▪ Ask the other party to contact the manufacturer.</li> </ul>  |
| 0-87 | The control channel started after an unsuccessful primary channel.   | <ul style="list-style-type: none"> <li>▪ The receiving terminal restarted the control channel because data reception in the primary channel was not successful.</li> <li>▪ This does not result in an error communication.</li> </ul>   |
| 0-88 | The line was disconnected  | <ul style="list-style-type: none"> <li>▪ Try using a lower data rate at the start.</li> </ul>   |

## Error Codes

| Code | Meaning  | Suggested Cause/Action   |
|------|--|--|
|      | because PPR was transmitted/received 9 (default) times within the same ECM frame.            | <ul style="list-style-type: none"> <li>▪ Try adjusting the cable equalizer setting.</li> </ul>   |
| 2-11 | Only one V.21 connection flag was received   | <ul style="list-style-type: none"> <li>▪ Replace the FCU.</li> </ul>   |
| 2-12 | Modem clock irregularity   | <ul style="list-style-type: none"> <li>▪ Replace the FCU.</li> </ul>   |
| 2-13 | Modem initialization error   | <ul style="list-style-type: none"> <li>▪ Turn off the machine, then turn it back on.</li> <li>▪ Update the modem ROM.</li> <li>▪ Replace the FCU.</li> </ul>                               |
| 2-23 | JBIG compression or reconstruction error   | <ul style="list-style-type: none"> <li>▪ Turn off the machine, then turn it back on.</li> </ul>  |
| 2-24 | JBIG ASIC error  | <ul style="list-style-type: none"> <li>▪ Turn off the machine, then turn it back on.</li> </ul>  |
| 2-25 | JBIG data reconstruction error (BIH error)   | <ul style="list-style-type: none"> <li>▪ JBIG data error</li> <li>▪ Check the sender's JBIG function.</li> <li>▪ Update the MBU ROM.</li> </ul>  |
| 2-26 | JBIG data reconstruction error (Float marker error)  |  |
| 2-27 | JBIG data reconstruction error (End marker error)  |  |
| 2-28 | JBIG data reconstruction error (Timeout)   |  |
| 2-29 | JBIG trailing edge maker error   | <ul style="list-style-type: none"> <li>▪ FCU defective</li> <li>▪ Check the destination device.</li> </ul>   |
| 2-50 | The machine resets itself for a fatal FCU system error                                       | <ul style="list-style-type: none"> <li>▪ If this is frequent, update the ROM, or replace the FCU.</li> </ul>   |
| 2-51 | The machine resets itself because of a fatal communication error                             | <ul style="list-style-type: none"> <li>▪ If this is frequent, update the ROM, or replace the FCU.</li> </ul>   |
| 2-53 | Snd msg() in the manual task is an error because the mailbox for the operation task is full. | <ul style="list-style-type: none"> <li>▪ The user did the same operation many times, and this gave too much load to the machine.</li> </ul>  |
| 4-01 | Line current was cut   | <ul style="list-style-type: none"> <li>▪ Check the line connector.</li> <li>▪ Check for line problems.</li> <li>▪ Replace the FCU.</li> </ul>  |
| 4-10 | Communication failed because of an ID Code mismatch (Closed Network) or Tel. No./CSI         | <ul style="list-style-type: none"> <li>▪ Get the ID Codes the same and/or the CSIs programmed correctly, then resend.</li> <li>▪ The machine at the other end may be defective.</li> </ul> |

| Code | Meaning   | Suggested Cause/Action  |
|------|---|---|
|      | mismatch (Protection against Wrong Connections)   |   |
| 5-10 | DCR timer expired   | <ul style="list-style-type: none"> <li>Replace the FCU.</li> </ul>  |
| 5-20 | Storage impossible because of a lack of memory  | <ul style="list-style-type: none"> <li>Temporary memory shortage.</li> <li>Test the SAF memory.</li> </ul>  |
| 5-21 | Memory overflow   |   |
| 5-23 | Print data error when printing a substitute rx or confidential rx message                 | <ul style="list-style-type: none"> <li>Test the SAF memory.</li> <li>Ask the other end to resend the message.</li> </ul>  |
| 5-25 | SAF file access error   | <ul style="list-style-type: none"> <li>Replace an SD card or HDD.</li> <li>Replace the FCU.</li> </ul>  |
| 6-00 | G3 ECM - T1 time out during reception of facsimile data                                   | <ul style="list-style-type: none"> <li>Try adjusting the rx cable equalizer.</li> <li>Replace the FCU.</li> </ul>   |
| 6-01 | G3 ECM - no V.21 signal was received  |   |
| 6-02 | G3 ECM - EOR was received   |   |
| 6-04 | G3 ECM - RTC not detected   | <ul style="list-style-type: none"> <li>Check the line connection.</li> <li>Check for a bad line or defective remote terminal.</li> <li>Replace the FCU.</li> </ul>  |
| 6-05 | G3 ECM - facsimile data frame not received within 18 s of CFR, but there was no line fail | <ul style="list-style-type: none"> <li>Check the line connection.</li> <li>Check for a bad line or defective remote terminal.</li> <li>Replace the FCU.</li> <li>Try adjusting the rx cable equalizer</li> </ul> <p><b>Cross reference</b></p> <ul style="list-style-type: none"> <li>Rx cable equalizer - G3 Switch 07 (PSTN)</li> </ul> |
| 6-06 | G3 ECM - coding/decoding error  | <ul style="list-style-type: none"> <li>Defective FCU.</li> <li>The other terminal may be defective.</li> </ul>  |
| 6-08 | G3 ECM - PIP/PIN received in reply to PPS.NULL  | <ul style="list-style-type: none"> <li>The other end pressed Stop during communication.</li> <li>The other terminal may be defective.</li> </ul>  |
| 6-09 | G3 ECM - ERR received   | <ul style="list-style-type: none"> <li>Check for a noisy line.</li> <li>Adjust the tx levels of the communicating machines.</li> <li>See code 6-05.</li> </ul>  |

## Error Codes

| Code  | Meaning  | Suggested Cause/Action  |
|-------|--|---|
| 6-10  | G3 ECM - error frames still received at the other end after all communication attempts at 2400 bps | <ul style="list-style-type: none"> <li>▪ Check for line noise.</li> <li>▪ Adjust the tx level (use NCU parameter 01 or the dedicated tx parameter for that address).</li> <li>▪ Check the line connection.</li> <li>▪ Defective remote terminal.</li> </ul>   |
| 6-21  | V.21 flag detected during high speed modem communication   | <ul style="list-style-type: none"> <li>▪ The other terminal may be defective or incompatible.</li> </ul>  |
| 6-22  | The machine resets the sequence because of an abnormal handshake in the V.34 control channel       | <ul style="list-style-type: none"> <li>▪ Check for line noise.</li> <li>▪ If the same error occurs frequently, replace the FCU.</li> <li>▪ Defective remote terminal.</li> </ul>  |
| 6-99  | V.21 signal not stopped within 6 s   | <ul style="list-style-type: none"> <li>▪ Replace the FCU.</li> </ul>  |
| 13-17 | SIP user name registration error   | <ul style="list-style-type: none"> <li>▪ Double registration of the SIP user name.</li> <li>▪ Capacity for user-name registration in the SIP server is not sufficient.</li> </ul>   |
| 13-18 | SIP server access error  | <ul style="list-style-type: none"> <li>▪ Incorrect initial setting for the SIP server.</li> <li>▪ Defective SIP server.</li> </ul>  |
| 14-00 | SMTP Send Error  | <ul style="list-style-type: none"> <li>▪ Error occurred during sending to the SMTP server. Occurs for any error other than 14-01 to 16. For example, the mail address of the system administrator is not registered.</li> </ul>   |
| 14-01 | SMTP Connection Failed   | <ul style="list-style-type: none"> <li>▪ Failed to connect to the SMTP server (timeout) because the server could not be found.</li> <li>▪ The PC is not ready to transfer files.</li> <li>▪ SMTP server not functioning correctly.</li> <li>▪ The DNS IP address is not registered.</li> <li>▪ Network not operating correctly.</li> <li>▪ Destination folder selection not correct.</li> </ul> |
| 14-02 | No Service by SMTP Service (421)   | <ul style="list-style-type: none"> <li>▪ SMTP server operating incorrectly, or the destination for direct SMTP sending is not correct.</li> <li>▪ Contact the system administrator and check that the SMTP server has the correct settings and operates correctly.</li> <li>▪ Contact the system administrator for direct SMTP sending and check the sending destination.</li> </ul>            |
| 14-03 | Access to SMTP Server Denied (450)   | <ul style="list-style-type: none"> <li>▪ Failed to access the SMTP server because the access is denied.</li> <li>▪ SMTP server operating incorrectly. Contact the system administrator to determine if there</li> </ul>   |

| Code  | Meaning                               | Suggested Cause/Action   |
|-------|---------------------------------------|--|
|       |                                       | <p>is a problem with the SMTP server and to check that the SMTP server settings are correct.</p> <ul style="list-style-type: none"> <li>▪ Folder send destination is incorrect. Contact the system administrator to determine that the SMTP server settings and path to the server are correct.</li> <li>▪ Device settings incorrect. Confirm that the user name and password settings are correct.</li> <li>▪ Direct SMTP destination incorrect. Contact the system administrator to determine if there is a problem at the destination at that the settings at the destination are correct.</li> </ul>   |
| 14-04 | Access to SMTP Server Denied (550)    | <ul style="list-style-type: none"> <li>▪ SMTP server operating incorrectly</li> <li>▪ Direct SMTP sending not operating correctly</li> </ul>   |
| 14-05 | SMTP Server HDD Full (452)            | <ul style="list-style-type: none"> <li>▪ Failed to access the SMTP server because the HDD on the server is full.</li> <li>▪ Insufficient free space on the HDD of the SMTP server. Contact the system administrator and check the amount of space remaining on the SMTP server HDD.</li> <li>▪ Insufficient free space on the HDD where the destination folder is located. Contact the system administrator and check the amount of space remaining on the HDD where the target folder is located.</li> <li>▪ Insufficient free space on the HDD at the target destination for SMTP direct sending. Contact the system administrator and check the amount of space remaining on the target HDD.</li> </ul> |
| 14-06 | User Not Found on SMTP Server (551)   | <ul style="list-style-type: none"> <li>▪ The designated user does not exist.</li> <li>▪ The designated user does not exist on the SMTP server.</li> <li>▪ The designated address is not for use with direct SMTP sending.</li> </ul>   |
| 14-07 | Data Send to SMTP Server Failed (4XX) | <ul style="list-style-type: none"> <li>▪ Failed to access the SMTP server because the transmission failed.</li> <li>▪ PC not operating correctly.</li> <li>▪ SMTP server operating incorrectly</li> <li>▪ Network not operating correctly.</li> <li>▪ Destination folder setting incorrect.</li> <li>▪ Direct SMTP sending not operating correctly.</li> </ul>   |
| 14-08 | Data Send to SMTP Server Failed (5XX) | <ul style="list-style-type: none"> <li>▪ Failed to access the SMTP server because the transmission failed.</li> <li>▪ SMTP server operating incorrectly</li> <li>▪ Destination folder setting incorrect.</li> </ul>  |

## Error Codes

| Code  | Meaning   | Suggested Cause/Action   |
|-------|---|--|
|       |   | <ul style="list-style-type: none"> <li>▪ Direct SMTP sending not operating correctly.</li> <li>▪ Software application error.</li> </ul>  |
| 14-09 | Authorization Failed for Sending to SMTP Server | <ul style="list-style-type: none"> <li>▪ POP-Before-SMTP or SMTP authorization failed.</li> <li>▪ Incorrect setting for file transfer</li> </ul>   |
| 14-10 | Addresses Exceeded                              | <ul style="list-style-type: none"> <li>▪ Number of broadcast addresses exceeded the limit for the SMTP server.</li> </ul>  |
| 14-11 | Buffer Full                                     | <ul style="list-style-type: none"> <li>▪ The send buffer is full so the transmission could not be completed. Buffer is full due to using Scan-to-Email while the buffer is being used send mail at the same time.</li> </ul>   |
| 14-12 | Data Size Too Large                             | <ul style="list-style-type: none"> <li>▪ Transmission was cancelled because the detected size of the file was too large.</li> </ul>  |
| 14-13 | Send Cancelled                                  | <ul style="list-style-type: none"> <li>▪ Processing is interrupted because the user pressed Stop.</li> </ul>   |
| 14-14 | Security Locked File Error                      | <ul style="list-style-type: none"> <li>▪ Update the software because of the defective software.</li> </ul>   |
| 14-15 | Mail Data Error                                 | <ul style="list-style-type: none"> <li>▪ The transmitting a mail is interrupted via DCS due to the incorrect data.</li> <li>▪ Update the software because of the defective software.</li> </ul>  |
| 14-16 | Maximum Division Number Error                   | <ul style="list-style-type: none"> <li>▪ When a mail is divided for the mail transmission and the division number of a mail are more than the specified number, the mail transmission is interrupted.</li> <li>▪ Update the software because of the defective software.</li> </ul> |
| 14-17 | Incorrect Ticket                                | <ul style="list-style-type: none"> <li>▪ Update the software because of the defective software.</li> </ul>   |
| 14-18 | Access to MCS File Error                        | <ul style="list-style-type: none"> <li>▪ The access to MCS file is denied due to the no permission of access.</li> <li>▪ Update the software because of the defective software.</li> </ul>   |
| 14-30 | MCS File Creation Failed                        | <p>Failed to create the MCS file because:</p> <ul style="list-style-type: none"> <li>▪ The number of files created with other applications on the Document Server has exceeded the limit.</li> <li>▪ HDD is full or not operating correctly.</li> <li>▪ Software error.</li> </ul> |
| 14-31 | UFS File Creation Failed                        | <p>UFS file could not be created:</p> <ul style="list-style-type: none"> <li>▪ Not enough space in UFS area to handle both Scan-to-Email and IFAX transmission.</li> </ul>   |

| Code  | Meaning  | Suggested Cause/Action   |
|-------|--|--|
|       |  | <ul style="list-style-type: none"> <li>▪ HDD full or not operating correctly.</li> <li>▪ Software error.</li> </ul>  |
| 14-32 | Cancelled the Mail Due to Error Detected by NFAX                 | <ul style="list-style-type: none"> <li>▪ Error detected with NFAX and send was cancelled due to a software error.</li> </ul>   |
| 14-33 | No Mail Address For the Machine                                  | <ul style="list-style-type: none"> <li>▪ Neither the mail address of the machine nor the mail address of the network administrator is registered.</li> </ul>   |
| 14-34 | Address designated in the domain for SMTP sending does not exist | <ul style="list-style-type: none"> <li>▪ Operational error in normal mail sending or direct SMTP sending.</li> <li>▪ Check the address selected in the address book for SMTP sending.</li> <li>▪ Check the domain selection.</li> </ul>                                    |
| 14-50 | Mail Job Task Error  | <p>Due to an FCU mail job task error, the send was cancelled:</p> <ul style="list-style-type: none"> <li>▪ Address book was being edited during creation of the notification mail.</li> <li>▪ Software error.</li> </ul>   |
| 14-51 | UCS Destination Download Error                                   | <p>Not even one return notification can be downloaded:</p> <ul style="list-style-type: none"> <li>▪ The address book was being edited.</li> <li>▪ The number for the specified destination does not exist (it was deleted or edited after the job was created).</li> </ul> |
| 14-60 | Send Cancel Failed   | <ul style="list-style-type: none"> <li>▪ The cancel operation by the user failed to cancel the send operation.</li> </ul>  |
| 14-61 | Notification Mail Send Failed for All Destinations               | <ul style="list-style-type: none"> <li>▪ All addresses for return notification mail failed.</li> </ul>   |
| 14-62 | Transmission Error due to the existence of zero line page        | <ul style="list-style-type: none"> <li>▪ When the 0 line page exists in received pages with G3 communication, the transmission is interrupted.</li> </ul>  |
| 15-01 | POP3/IMAP4 Server Not Registered                                 | <ul style="list-style-type: none"> <li>▪ At startup, the system detected that the IP address of the POP3/IMAP4 server has not been registered in the machine.</li> </ul>   |
| 15-02 | POP3/IMAP4 Mail Account Information Not Registered               | <ul style="list-style-type: none"> <li>▪ The POP3/IMAP4 mail account has not been registered.</li> </ul>   |
| 15-03 | Mail Address Not Registered                                      | <ul style="list-style-type: none"> <li>▪ The mail address has not been registered.</li> </ul>  |
| 15-10 | DCS Mail Receive Error   | <ul style="list-style-type: none"> <li>▪ Error other than 15-11 to 15-18.</li> </ul>   |
| 15-11 | Connection Error   | <p>The DNS or POP3/IMAP4 server could not be found:</p> <ul style="list-style-type: none"> <li>▪ The IP address for DNS or POP3/IMAP4</li> </ul>   |

## Error Codes

| Code  | Meaning   | Suggested Cause/Action  |
|-------|---|---|
|       |   | <p>server is not stored in the machine.</p> <ul style="list-style-type: none"> <li>▪ The DNS IP address is not registered.</li> <li>▪ Network not operating correctly.</li> </ul>   |
| 15-12 | Authorization Error   | <p>POP3/IMAP4 send authorization failed:</p> <ul style="list-style-type: none"> <li>▪ Incorrect IFAX user name or password.</li> <li>▪ Access was attempted by another device, such as the PC.</li> <li>▪ POP3/IMAP4 settings incorrect.</li> </ul> |
| 15-13 | Receive Buffer Full   | <ul style="list-style-type: none"> <li>▪ Occurs only during manual reception. Transmission cannot be received due to insufficient buffer space. The buffer is being used for mail send or Scan-to-Email.</li> </ul>                                 |
| 15-14 | Mail Header Format Error                                      | <ul style="list-style-type: none"> <li>▪ The mail header is not standard format. For example, the Date line description is incorrect.</li> </ul>  |
| 15-15 | Mail Divide Error   | <ul style="list-style-type: none"> <li>▪ The e-mail is not in standard format. There is no boundary between parts of the e-mail, including the header.</li> </ul>   |
| 15-16 | Mail Size Receive Error                                       | <ul style="list-style-type: none"> <li>▪ The mail cannot be received because it is too large.</li> </ul>  |
| 15-17 | Receive Timeout   | <ul style="list-style-type: none"> <li>▪ May occur during manual receiving only because the network is not operating correctly.</li> </ul>  |
| 15-18 | Incomplete Mail Received                                      | <ul style="list-style-type: none"> <li>▪ Only one portion of the mail was received.</li> </ul>  |
| 15-31 | Final Destination for Transfer Request Reception Format Error | <ul style="list-style-type: none"> <li>▪ The format of the final destination for the transfer request was incorrect.</li> </ul>   |
| 15-39 | Send/Delivery Destination Error                               | <p>The transmission cannot be delivered to the final destination:</p> <ul style="list-style-type: none"> <li>▪ Destination file format is incorrect.</li> <li>▪ Could not create the destination for the file transmission.</li> </ul>              |
| 15-41 | SMTP Receive Error  | <ul style="list-style-type: none"> <li>▪ Reception rejected because the transaction exceeded the limit for the "Auth. E-mail RX" setting.</li> </ul>  |
| 15-42 | Off Ramp Gateway Error  | <ul style="list-style-type: none"> <li>▪ The delivery destination address was specified with Off Ramp Gateway OFF.</li> </ul>   |
| 15-43 | Address Format Error  | <ul style="list-style-type: none"> <li>▪ Format error in the address of the Off Ramp Gateway.</li> </ul>  |
| 15-44 | Addresses Over  | <ul style="list-style-type: none"> <li>▪ The number of addresses for the Off Ramp Gateway exceeded the limit of 30.</li> </ul>  |



| Code  | Meaning                                 | Suggested Cause/Action  |
|-------|---|---|
| 15-61 | Attachment File Format Error            | <ul style="list-style-type: none"> <li>▪ The attached file is not TIFF format.</li> </ul>   |
| 15-62 | TIFF File Compatibility Error           | <p>Could not receive transmission due to:</p> <ul style="list-style-type: none"> <li>▪ Resolution error</li> <li>▪ Image of resolution greater than 200 dpi without extended memory.</li> <li>▪ Resolution is not supported.</li> <li>▪ Page size error</li> <li>▪ The page size was larger than A3.</li> <li>▪ Compression error</li> <li>▪ File was compressed with other than MH, MR, or MMR.</li> </ul> |
| 15-63 | TIFF Parameter Error                    | <p>The TIFF file sent as the attachment could not be received because the TIFF header is incorrect:</p> <ul style="list-style-type: none"> <li>▪ The TIFF file attachment is a type not supported.</li> <li>▪ The TIFF file attachment is corrupted.</li> <li>▪ Software error.</li> </ul>  |
| 15-64 | TIFF Decompression Error                | <p>The file received as an attachment caused the TIFF decompression error:</p> <ul style="list-style-type: none"> <li>▪ The TIFF format of the attachment is corrupted.</li> <li>▪ Software error.</li> </ul>   |
| 15-71 | Not Binary Image Data                   | <ul style="list-style-type: none"> <li>▪ The file could not be received because the attachment was not binary image data.</li> </ul>  |
| 15-73 | MDN Status Error                        | <ul style="list-style-type: none"> <li>▪ Could not find the Disposition line in the header of the Return Receipt, or there is a problem with the firmware.</li> </ul>   |
| 15-74 | MDN Message ID Error                    | <ul style="list-style-type: none"> <li>▪ Could not find the Original Message ID line in the header of the Return Receipt, or there is a problem with the firmware.</li> </ul>   |
| 15-80 | Mail Job Task Read Error                | <ul style="list-style-type: none"> <li>▪ Could not receive the transmission because the destination buffer is full and the destination could not be created (this error may occur when receiving a transfer request or a request for notification of reception).</li> </ul>   |
| 15-81 | Repeated Destination Registration Error | <ul style="list-style-type: none"> <li>▪ Could not repeat receive the transmission because the destination buffer is full and the destination could not be created (this error may occur when receiving a transfer request or a request for notification of reception).</li> </ul>  |
| 15-91 | Send Registration Error                 | <p>Could not receive the file for transfer to the final destination:</p> <ul style="list-style-type: none"> <li>▪ The format of the final destination or the</li> </ul>   |

## Error Codes

| Code  | Meaning  | Suggested Cause/Action  |
|-------|--|---|
|       |  | <p>transfer destination is incorrect.</p> <ul style="list-style-type: none"> <li>Destinations are full so the final and transfer destinations could not be created.</li> </ul>  |
| 15-92 | Memory Overflow  | <ul style="list-style-type: none"> <li>Transmission could not be received because memory overflowed during the transaction.</li> </ul>  |
| 15-93 | Memory Access Error  | <ul style="list-style-type: none"> <li>Transaction could not complete due to a malfunction of SAF memory.</li> </ul>  |
| 15-94 | Incorrect ID Code  | <ul style="list-style-type: none"> <li>The machine rejected an incoming e-mail for transfer request, because the ID code in the incoming e-mail did not match the ID code registered in the machine.</li> </ul>   |
| 15-95 | Transfer Station Function  | <ul style="list-style-type: none"> <li>The machine rejected an incoming e-mail for transfer because the transfer function was unavailable.</li> </ul>   |
| 22-00 | Original length exceeded the maximum scan length                             | <ul style="list-style-type: none"> <li>Divide the original into more than one page.</li> <li>Check the resolution used for scanning. Lower the scan resolution if possible.</li> <li>Add optional page memory.</li> </ul>   |
| 22-01 | Memory overflow while receiving  | <ul style="list-style-type: none"> <li>Wait for the files in the queue to be sent.</li> <li>Delete unnecessary files from memory.</li> <li>Transfer the substitute reception files to an another fax machine, if the machine's printer is busy or out of order.</li> <li>Add an optional SAF memory card or hard disk.</li> </ul> |
| 22-02 | Tx or rx job stalled due to line disconnection at the other end              | <ul style="list-style-type: none"> <li>The job started normally but did not finish normally; data may or may not have been received fully.</li> <li>Restart the machine.</li> </ul>   |
| 22-04 | The machine cannot store received data in the SAF                            | <ul style="list-style-type: none"> <li>Update the ROM</li> <li>Replace the FCU.</li> </ul>  |
| 22-05 | No G3 parameter confirmation answer  | <ul style="list-style-type: none"> <li>Defective FCU board or firmware.</li> </ul>  |
| 23-00 | Data read timeout during construction  | <ul style="list-style-type: none"> <li>Restart the machine.</li> <li>Replace the FCU.</li> </ul>  |
| 25-00 | The machine software resets itself after a fatal transmission error occurred | <ul style="list-style-type: none"> <li>Update the ROM</li> <li>Replace the FCU.</li> </ul>  |
| F0-xx | V.34 modem error   | <ul style="list-style-type: none"> <li>Replace the FCU.</li> </ul>  |
| F6-xx | SG3 modem error  | <ul style="list-style-type: none"> <li>Update the SG3 modem ROM.</li> </ul>   |

| Code | Meaning | Suggested Cause/Action  |
|------|---------|---|
|      |         | <ul style="list-style-type: none"><li>▪ Replace the SG3 board.</li><li>▪ Check for line noise or other line problems.</li><li>▪ Try communicating another V.8/V.34 fax.</li></ul> |

### 3.2 IFAX TROUBLESHOOTING

Use the following procedures to determine whether the machine or another part of the network is causing the problem.

| Communication Route               | Item  | Action [Remarks]   |
|-----------------------------------|---|--|
| General LAN                       | 1. Connection with the LAN                    | <ul style="list-style-type: none"> <li>▪ Check that the LAN cable is connected to the machine.</li> <li>▪ Check that the LEDs on the hub are lit.</li> </ul>   |
|                                   | 2. LAN activity                               | Check that other devices connected to the LAN can communicate through the LAN.   |
| Between IFAX and PC               | 1. Network settings on the PC                 | <ul style="list-style-type: none"> <li>▪ Check the network settings on the PC. [Is the IP address registered in the TCP/IP properties in the network setup correct? Check the IP address with the administrator of the network.]</li> </ul>                    |
|                                   | 2. Check that PC can connect with the machine | <ul style="list-style-type: none"> <li>▪ Use the “ping” command on the PC to contact the machine. [At the MS-DOS prompt, type ping then the IP address of the machine, then press Enter.]</li> </ul>   |
|                                   | 3. LAN settings in the machine                | <ul style="list-style-type: none"> <li>▪ Check the LAN parameters</li> <li>▪ Check if there is an IP address conflict with other PCs. [Use the “Network” function in the User Tools. If there is an IP address conflict, inform the administrator.]</li> </ul> |
| Between machine and e-mail server | 1. LAN settings in the machine                | <ul style="list-style-type: none"> <li>▪ Check the LAN parameters</li> <li>▪ Check if there is an IP address conflict with other PCs. [Use the “Network” function in the User Tools. If there is an IP address conflict, inform the administrator.]</li> </ul> |
|                                   | 2. E-mail account on the server               | <ul style="list-style-type: none"> <li>▪ Make sure that the machine can log into the e-mail server.</li> <li>▪ Check that the account and password stored in the server are the same as in the machine. [Ask the administrator to check.]</li> </ul>           |
|                                   | 3. E-mail server                              | <ul style="list-style-type: none"> <li>▪ Make sure that the client devices which have an account in the server can send/receive e-mail.</li> </ul>   |

| Communication Route                | Item  | Action [Remarks]  |
|------------------------------------|---|---|
|                                    |   | [Ask the administrator to check.<br>Send a test e-mail with the machine's own number as the destination. The machine receives the returned e-mail if the communication is performed successfully.]  |
| Between e-mail server and internet | 1. E-mail account on the Server                                 | <ul style="list-style-type: none"> <li>▪ Make sure that the PC can log into the e-mail server.</li> <li>▪ Check that the account and password stored in the server are the same as in the machine.</li> </ul> [Ask the administrator to check.]   |
|                                    | 2. E-mail server  | <ul style="list-style-type: none"> <li>▪ Make sure that the client devices which have an account in the server can send/receive e-mail.</li> </ul> [Ask the administrator to check.<br>Send a test e-mail with the machine's own number as the destination. The machine receives the returned e-mail if the communication is performed successfully.] |
|                                    | 3. Destination e-mail address                                   | <ul style="list-style-type: none"> <li>▪ Make sure that the e-mail address is actually used.</li> <li>▪ Check that the e-mail address contains no incorrect characters such as spaces.</li> </ul>   |
|                                    | 4. Router settings  | <ul style="list-style-type: none"> <li>▪ Use the "ping" command to contact the router.</li> <li>▪ Check that other devices connected to the router can sent data over the router.</li> </ul> [Ask the administrator of the server to check.]  |
|                                    | 5. Error message by e-mail from the network of the destination. | <ul style="list-style-type: none"> <li>▪ Check whether e-mail can be sent to another address on the same network, using the application e-mail software.</li> <li>▪ Check the error e-mail message.</li> </ul> [Inform the administrator of the LAN.]   |

### 3.3 IP-FAX TROUBLESHOOTING

#### 3.3.1 IP-FAX TRANSMISSION

##### ***Cannot send by IP Address/Host Name***

| Check Point |  | Action   |
|-------------|--|--|
| 1           | LAN cable connected?                                 | Check the LAN cable connection.  |
| 2           | Specified IP address/host name correct?              | Check the IP address/host name.  |
| 3           | Firewall/NAT is installed?                           | Cannot breach the firewall. Send by using another method (Fax, Internet Fax) |
| 4           | Transmission sent manually?                          | Manual sending not supported.  |
| 5           | IP address of local machine registered?              | Register the IP address.   |
| 6           | Remote terminal port number setting other than 1720? | Send by specifying the port number.  |
| 7           | Specified port number correct?                       | Confirm the port number of the remote fax.                                   |
| 8           | DNS server registered when host name specified?      | Contact the network administrator.   |
| 9           | Remote fax a T.38 terminal?                          | Check whether the remote fax is a T38 terminal.                              |
| 10          | Remote fax switched off or busy?                     | Check that the remote fax is switched on.                                    |
| 11          | Network bandwidth too narrow?                        | Request the network administrator to increase the bandwidth.                 |
|             |  | Raise the delay level.<br>IPFAX SW 01 Bit 0 to 3                             |
|             |  | IP-Fax bandwidth is the same as the DCS speed. Set IP-Fax SW00 Bit 6 to 1.   |
| 12          | Remote fax cancelled transmission?                   | Check whether the remote fax cancelled the transmission.                     |

##### ***Cannot send via VoIP Gateway***

| Check Point |                             | Action                             |
|-------------|-----------------------------|------------------------------------|
| 1           | LAN cable connected?        | Check the LAN cable connection.    |
| 2           | VoIP Gateway T.38 standard? | Contact the network administrator. |

|    |   |  |
|----|---|--|
| 3  | VoIP Gateway installed correctly?                             | Contact the network administrator.   |
| 4  | VoIP Gateway power switched on?                               | Contact the network administrator.   |
| 5  | Is the IP address/host name of the specified Gateway correct? | Check the IP address/host name.  |
| 6  | Number of the specified fax correct?                          | Check the remote fax number.   |
| 7  | Firewall/NAT is installed?                                    | Cannot breach the firewall. Send by using another method (Fax, Internet Fax) |
| 8  | Transmission sent manually?                                   | Manual sending not supported.  |
| 9  | IP address of local fax registered?                           | Register the IP address.   |
| 10 | DNS registered when host name specified?                      | Contact the network administrator.   |
| 11 | Remote fax a G3 fax?  | Check that the remote fax is a G3 fax.                                       |
| 12 | G3 fax is connected to VoIP gateway?                          | Check that G3 fax is connected.  |
| 13 | Remote G3 fax turned on?                                      | Check that G3 fax is switched on.  |
| 14 | Network bandwidth too narrow?                                 | Request the network administrator to increase the bandwidth.                 |
|    |   | Raise the network delay level.<br>IPFAX SW 01 Bit 0 to 3                     |
|    |   | IP-Fax bandwidth is the same as the DCS speed. Set IP-Fax SW00 Bit 6 to 1.   |

**Cannot send by Alias Fax number.**


| Check Point |   | Action   |
|-------------|---|--|
| 1           | LAN cable connected?                        | Check the LAN cable connection.  |
| 2           | Number of specified Alias fax correct?      | Confirm the Alias of the remote fax.<br>Error Code: 13-14                    |
| 3           | Firewall/NAT installed?                     | Cannot breach the firewall. Send by using another method (Fax, Internet Fax) |
| 4           | Transmission sent manually?                 | Manual sending not supported.  |
| 5           | Gatekeeper installed correctly?             | Contact the network administrator.   |
| 6           | Gatekeeper power switched on?               | Contact the network administrator.   |
| 7           | IP address/host name of Gatekeeper correct? | Check the IP address/host name.  |

## IP-Fax Troubleshooting

|    |  |   |
|----|--|---|
| 8  | DNS server registered when Gatekeeper host name specified? | Contact the network administrator.                          |
| 9  | Enable H.323 SW is set to on?                              | Check the settings.<br>See User Parameter SW 34 Bit 0       |
| 10 | IP address of local fax registered?                        | Register the IP address of the local fax.                   |
| 11 | Alias number of local fax registered?                      | Register the Alias number of the local fax.                 |
| 12 | Remote fax registered in Gatekeeper?                       | Contact the network administrator.                          |
| 13 | Remote fax a T.38 terminal?                                | Check whether the remote fax is a T38 terminal.             |
| 14 | Remote fax switched off or busy?                           | Contact the network administrator.                          |
| 15 | Network bandwidth too narrow?                              | Request the system administrator to increase the bandwidth. |
|    |  | Raise the delay level.<br>IPFAX SW 01 Bit 0 to 3            |
|    |  | Lower the modem transmission baud rate.<br>IPFAX SW 05      |
| 16 | Remote fax cancelled transmission?                         | Check whether the remote fax cancelled the transmission.    |

### 3.3.2 IP-FAX RECEPTION

#### **Cannot receive via IP Address/Host Name.**

| Check Point |  | Action   |
|-------------|--|--|
| 1           | LAN cable connected?   | Check the LAN cable connection.  |
| 2           | Firewall/NAT is installed?                                     | Cannot breach the firewall. Send by using another method (Fax, Internet Fax)   |
| 3           | IP address of local fax registered?                            | Register the IP address.   |
| 4           | Port number specified at remote sender fax (if required)?      | Request the sender to specify the port number.   |
| 5           | Specified port number correct (if required)?                   | Request the sender to check the port number.   |
| 6           | DNS server registered when host name specified on sender side? | <p>Contact the network administrator.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>The sender machine displays this error code if the sender fax is a Ricoh model.</li> </ul> |
| 7           | Network bandwidth too narrow?                                  | Request the system administrator to  |





|   |                                    |  |
|---|------------------------------------|--|
|   |                                    | increase the bandwidth.  |
|   |                                    | Lower the start modem reception baud rate on the receiving side.<br>IPFAX SW06 |
| 8 | Remote fax cancelled transmission? | Check whether the remote fax cancelled the transmission.                       |





**Cannot receive by VoIP Gateway.**

| Check Point |  | Action   |
|-------------|--|--|
| 1           | LAN cable connected?   | Check the LAN cable connection.  |
| 2           | Firewall/NAT is installed?   | Cannot breach the firewall. Request the remote fax to send by using another method (Fax, Internet Fax) |
| 3           | VoIP Gateway installed correctly?  | Contact the network administrator.   |
| 4           | VoIP Gateway power switched on?  | Contact the network administrator.   |
| 5           | IP address/host name of specified VoIP Gateway correct on sender's side? | Request the remote fax to check the IP address/host name.  |
| 6           | DNS server registered when host name specified on sender side?           | Contact the network administrator.   |
| 7           | Network bandwidth too narrow?  | Request the network administrator to increase the bandwidth.   |
| 8           | G3 fax connected?  | Check that G3 fax is connected.  |
| 9           | G3 fax power switched on?  | Check that G3 fax is switched on.  |

**Cannot receive by Alias Fax number.**

| Check Point |                                  | Action   |
|-------------|----------------------------------|--|
| 1           | LAN cable connected?             | Check the LAN cable connection.  |
| 2           | Firewall/NAT is installed?       | Cannot the breach firewall. Request the remote fax to send by using another method (Fax, Internet Fax)   |
| 3           | Gatekeeper installed correctly?  | Contact the network administrator.<br> Note <ul style="list-style-type: none"> <li>The sender machine displays this error code when the sender fax is a Ricoh model.</li> </ul> |
| 4           | Power to Gatekeeper switched on? | Contact the network administrator.<br> Note <ul style="list-style-type: none"> <li>The sender machine displays this error code when the sender fax is a Ricoh model.</li> </ul> |

## IP-Fax Troubleshooting

|    |   |  |
|----|---|--|
| 5  | IP address/host name of Gatekeeper correct on the sender's side?            | Request the sender to check the IP address/host name.<br> <ul style="list-style-type: none"> <li>The sender machine displays this error code when the sender fax is a Ricoh model.</li> </ul> |
| 6  | DNS server registered when Gatekeeper host name specified on sender's side? | Contact the network administrator.<br> <ul style="list-style-type: none"> <li>The sender machine displays this error code when the sender fax is a Ricoh model.</li> </ul>                    |
| 7  | Enable H.323 SW is set to on?   | Request the sender to check the settings. User Parameter SW 34 Bit 0<br> <ul style="list-style-type: none"> <li>Only if the remote sender fax is a Ricoh fax.</li> </ul>                      |
| 8  | Local fax IP address registered?  | Register the IP address.   |
| 9  | Local fax Alias number registered?  | Register the Alias number.   |
| 10 | Network bandwidth too narrow?   | Request the system administrator to increase the bandwidth.  |
|    |   | Lower the start modem reception baud rate on the receiving side. IPFAX SW06  |
| 11 | Remote fax cancelled transmission?  | Check whether the remote fax cancelled the transmission.   |
| 12 | Local fax registered in Gatekeeper?   | Contact the network administrator.<br> <ul style="list-style-type: none"> <li>The sender machine displays this error code when the sender fax is a Ricoh model.</li> </ul>                  |

---


## 4. SERVICE TABLES

### 4.1 BEFOREHAND

#### CAUTION

- Never turn off the main power switch when the power LED is lit or flashing. To avoid damaging the hard disk or memory, press the operation power switch to switch the power off, wait for the power LED to go off, and then switch the main power switch off.








#### Note

- The main power LED () lights or flashes while the platen cover or ARDF is open, while the main machine is communicating with a facsimile or the network server, or while the machine is accessing the hard disk or memory for reading or writing data.

## 4.2 SERVICE TABLES

### 4.2.1 SP1-XXX (BIT SWITCHES)

#### Bit Switches

| 1   | Mode No.             | Function  |
|-----|----------------------|---|
| 101 | System Switch        |   |
|     | 001 – 032            | 00 – 1F<br>Change the bit switches for system settings for the fax option<br> "Bit Switches"               |
| 102 | Ifax Switch          |   |
|     | 001 – 016            | 00 – 0F<br>Change the bit switches for internet fax settings for the fax option<br> "Bit Switches"         |
| 103 | Printer Switch       |   |
|     | 001 – 016            | 00 – 0F<br>Change the bit switches for printer settings for the fax option<br> "Bit Switches"            |
| 104 | Communication Switch |   |
|     | 001 – 032            | 00 – 1F<br>Change the bit switches for communication settings for the fax option<br> "Bit Switches"      |
| 105 | G3-1 Switch          |   |
|     | 001 – 016            | 00 – 0F<br>Change the bit switches for the protocol settings of the standard G3 board<br> "Bit Switches" |
| 106 | G3-2 Switch          |   |
|     | 001 – 016            | 00 – 0F<br>Change the bit switches for the protocol settings of the optional G3 board<br> "Bit Switches" |
| 107 | G3-3 Switch          |   |
|     | 001 – 016            | 00 – 0F<br>Change the bit switches for the protocol settings of the optional G3 board<br> "Bit Switches" |
| 108 | G4 Internal Switch   |   |
|     | 001 – 032            | 00 – 1F<br><b>Not used</b> (Do not change the bit switches)   |
| 109 | G4 Parameter Switch  |   |

|     |               |         |  |
|-----|---------------|---------|--|
|     | 001 – 016     | 00 – 0F | <b>Not used</b> (Do not change the bit switches)                           |
| 111 | IP fax Switch |         |  |
|     | 001 – 016     | 00 – 0F | Change the bit switches for optional IP fax parameters<br>☛ "Bit Switches" |

#### 4.2.2 SP2-XXX (RAM DATA)

| 2   | Mode No.            |                  | Function   |
|-----|---------------------|------------------|--|
| 101 | RAM Read/Write      |                  |  |
|     | 001                 |                  | Change RAM data for the fax board directly.<br>☛ "Service RAM Addresses" |
| 102 | Memory Dump         |                  |  |
|     | 001                 | G3-1 Memory Dump | Print out RAM data for the fax board.<br>☛ "Service RAM Addresses"       |
|     | 002                 | G3-2 Memory Dump | Print out RAM data for the optional SG3 board.                           |
|     | 003                 | G3-3 Memory Dump | Print out RAM data for the optional SG3 board.                           |
|     | 004                 | G4 Memory Dump   | Not used   |
| 103 | G3-1 NCU Parameters |                  |  |
|     | 001 – 023           | CC, 01 – 22      | NCU parameter settings for the standard G3 board. ☛ "NCU Parameters"     |
| 104 | G3-2 NCU Parameters |                  |  |
|     | 001 – 023           | CC, 01 – 22      | NCU parameter settings for the optional G3 board. ☛ "NCU Parameters"     |
| 105 | G3-3 NCU Parameters |                  |  |
|     | 001 – 023           | CC, 01 – 22      | NCU parameter settings for the optional G3 board. ☛ "NCU Parameters"     |

#### 4.2.3 SP3-XXX (TEL LINE SETTINGS)

| 3   | Mode No.        |             | Function                                     |
|-----|-----------------|-------------|--|
| 101 | Service Station |             |  |
|     | 001             | Fax Number  | Enter the fax number of the service station. |
|     | 002             | Select Line | Select the line type.                        |
| 102 | Serial Number   |             |  |

Service Tables

|     |                      |                       |  |
|-----|----------------------|-----------------------|--|
|     | 000                  |                       | Enter the fax unit's serial number.  |
| 103 | PSTN-1 Port Settings |                       |  |
|     | 001                  | Select Line           | Select the line type setting for the G3-1 line. If the machine is installed on a PABX line, select "PABX", "PABX(GND)" or "PABX(FLASH)". |
|     | 002                  | PSTN Access Number    | Enter the PSTN access number for the G3-1 line.  |
|     | 003                  | Memory Lock Disabled  | Not used   |
| 104 | PSTN-2 Port Settings |                       |  |
|     | 001                  | Select Line           | Select the line setting for the G3-2 line. If the machine is installed on a PABX line, select "PABX", "PABX(GND)" or "PABX(FLASH)".      |
|     | 002                  | PSTN Access Number    | Enter the PSTN access number for the G3-2 line.  |
|     | 003                  | Memory Lock Disabled  | Not used   |
|     | 004                  | Transmission Disabled | If you turn this SP on, the machine does not send any fax messages on the G3-2 line.   |
| 105 | PSTN-3 Port Settings |                       |  |
|     | 001                  | Select Line           | Select the line setting for the G3-3 line. If the machine is installed on a PABX line, select "PABX", "PABX(GND)" or "PABX(FLASH)".      |
|     | 002                  | PSTN Access Number    | Enter the PSTN access number for the G3-3 line.  |
|     | 003                  | Memory Lock Disabled  | Not used   |
|     | 004                  | Transmission Disabled | If you turn this SP on, the machine does not send any fax messages on the G3-3 line.   |
| 106 | ISDN Port Settings   |                       |  |
|     | 001                  | Select Line           | <b>Not used</b> (Do not change the settings.)  |
|     | 002                  | PSTN Access Number    |  |
|     | 003                  | Memory Lock Disabled  |  |
| 106 | 004                  | Transmission Disabled |  |

|     |                     |                         |                                  |
|-----|---------------------|-------------------------|----------------------------------|
| 107 | IPFAX Port Settings |                         |                                  |
|     | 001                 | H323 Port               | Sets the H323 port number.       |
|     | 002                 | SIP Port                | Sets the SIP port number.        |
|     | 003                 | RAS Port                | Sets the RAS port number.        |
|     | 004                 | Gatekeeper port         | Sets the Gatekeeper port number. |
|     | 005                 | T.38 Port               | Sets the T.38 port number.       |
|     | 006                 | SIP Server Port         | Sets the SIP port number.        |
|     | 007                 | IPFAX Protocol Priority | Select "H323" or "SIP".          |
| 201 | FAX SW              |                         |                                  |
|     | 001 – 032           | 00 – 1F                 |                                  |

#### 4.2.4 SP4-XXX (ROM VERSIONS)

| 4   | Mode No. |                    | Function                                      |
|-----|----------|--------------------|---|
| 101 | 001      | FCU ROM Version    | Displays the FCU ROM version.                 |
| 102 | 001      | Error Codes        | Displays the latest 64 fax error codes.       |
| 103 | 001      | G3-1 ROM Version   | Displays the G3-1 modem version.              |
| 104 | 001      | G3-2 ROM Version   | Displays the G3-2 modem version.              |
| 105 | 001      | G3-3 ROM Version   | Displays the G3-3 modem version.              |
| 106 | 001      | G4 ROM Version     | <b>Not used</b> (Do not change the settings.) |
| 107 | 001      | Charge ROM Version | <b>Not used</b> (Do not change the settings.) |

#### 4.2.5 SP5-XXX (INITIALIZING)

| 5   | Mode No.           | Function   |
|-----|--------------------|--|
| 101 | Initialize SRAM    |  |
|     | 000                | Initializes the bit switches and user parameters, user data in the SRAM, files in the SAF memory, and clock. |
| 102 | Erase All Files    |  |
|     | 000                | Erases all files stored in the SAF memory.   |
| 103 | Reset Bit Switches |  |
|     | 000                | Resets the bit switches and user parameters.   |
| 104 | Factory setting    |  |

Service Tables

|     |                                  |  |
|-----|----------------------------------|--|
|     | 000                              | Resets the bit switches and user parameters, user data in the SRAM and files in the SAF memory.  |
| 105 | Initialize All Bit Switches      |  |
|     | 000                              | Initializes all the current bit switch settings.   |
| 106 | Initialize Security Bit Switches |  |
|     | 000                              | Initializes only the security bit switches. If you select automatic output/display for the user parameter switches, the security settings are initialized. |

### 4.2.6 SP6-XXX (REPORTS)

| 6   | Mode No.               |                           | Function   |
|-----|------------------------|---------------------------|--|
| 101 | System Parameter List  |                           |  |
|     | 000                    | -                         | Touch the "ON" button to print the system parameter list.                  |
| 102 | Service Monitor Report |                           |  |
|     | 000                    | -                         | Touch the "ON" button to print the service monitor report.                 |
| 103 | G3 Protocol Dump List  |                           |  |
|     | 001                    | G3 All Communications     | Prints the protocol dump list of all communications for all G3 lines.      |
|     | 002                    | G3-1 (All Communications) | Prints the protocol dump list of all communications for the G3-1 line.     |
|     | 003                    | G3-1 (1 Communication)    | Prints the protocol dump list of the last communication for the G3-1 line. |
|     | 004                    | G3-2 (All Communications) | Prints the protocol dump list of all communications for the G3-2 line.     |
|     | 005                    | G3-2 (1 Communication)    | Prints the protocol dump list of the last communication for the G3-2 line. |
|     | 006                    | G3-3 (All Communications) | Prints the protocol dump list of all communications for the G3-3 line.     |
|     | 007                    | G3-3 (1 Communication)    | Prints the protocol dump list of the last communication for the G3-3 line. |
| 104 | G4 Protocol Dump List  |                           |  |
|     | 001                    | Dch + Bch 1               | <b>Not used</b> (Do not change the settings.)                              |
|     | 002                    | Dch                       |  |
|     | 003                    | Bch 1 Link Layer          |  |



|     |                       |                    |   |
|-----|-----------------------|--------------------|---|
|     | 004                   | Dch Link Layer     |   |
|     | 005                   | Dch +Bch 2         |   |
|     | 006                   | Bch 2 Link Layer   |   |
| 105 | All Files print out   |                    |   |
|     | 000                   | -                  | <p>Prints out all the user files in the SAF memory, including confidential messages.</p> <p><a href="#">↓ Note</a></p> <ul style="list-style-type: none"> <li>Do not use this function, unless the customer is having trouble printing confidential messages or recovering files stored using the memory lock feature.</li> </ul> |
| 106 | Journal Print out     |                    |   |
|     | 001                   | All Journals       | The machine prints all the communication records on the report.   |
|     | 002                   | Specified Date     | The machine prints all communication records after the specified date.  |
| 107 | Log List Print out    |                    |   |
|     | 001                   | All log files      | These log print out functions are for designer use only.  |
|     | 002                   | Printer            |   |
|     | 003                   | SC/TRAP Stored     |   |
|     | 004                   | Decompression      |   |
|     | 005                   | Scanner            |   |
|     | 006                   | JOB/SAF            |   |
|     | 007                   | Reconstruction     |   |
|     | 008                   | JBIG               |   |
|     | 009                   | Fax Driver         |   |
|     | 010                   | G3CCU              |   |
|     | 011                   | Fax Job            |   |
|     | 012                   | CCU                |   |
|     | 013                   | Scanner Condition  |   |
| 108 | IP Protocol Dump List |                    |   |
|     | 001                   | All Communications | Prints the protocol dump list of all communications for the IP fax line.  |

Service Tables

|  |     |                 |  |
|--|-----|-----------------|--|
|  | 002 | 1 Communication | Prints the protocol dump list of the last communication for the IP fax line. |
|--|-----|-----------------|--|

### 4.2.7 SP7-XXX (TEST MODES)

These are the test modes for PTT approval.

| 7   | Function                            |
|-----|-------------------------------------|
| 101 | G3-1 Modem Tests                    |
| 102 | G3-1 DTMF Tests                     |
| 103 | Ringer Test                         |
| 104 | G3-1 V34 (S2400baud)                |
| 105 | G3-1 V34 (S2800baud)                |
| 106 | G3-1 V34 (S3000baud)                |
| 107 | G3-1 V34 (S3200baud)                |
| 108 | G3-1 V34 (S3429baud)                |
| 109 | Recorded Message Test               |
| 110 | G3-2 Modem Tests                    |
| 111 | G3-2 DTMF Tests                     |
| 112 | G3-2 V34 (S2400baud)                |
| 113 | G3-2 V34 (S2800baud)                |
| 114 | G3-2 V34 (S3000baud)                |
| 115 | G3-2 V34 (S3200baud)                |
| 116 | G3-2 V34 (S3429baud)                |
| 117 | G3-3 Modem Tests                    |
| 118 | G3-3 DTMF Tests                     |
| 119 | G3-3 V34 (S2400baud)                |
| 120 | G3-3 V34 (S2800baud)                |
| 121 | G3-3 V34 (S3000baud)                |
| 122 | G3-3 V34 (S3200baud)                |
| 123 | G3-3 V34 (S3429baud)                |
| 124 | IG3-1 Modem Tests - <b>Not used</b> |

|     |   |
|-----|---|
| 125 | IG3-1 DTMF Tests - <b>Not used</b>      |
| 126 | IG3-1 V34 (S2400baud) - <b>Not used</b> |
| 127 | IG3-1 V34 (S2800baud) - <b>Not used</b> |
| 128 | IG3-1 V34 (S3000baud) - <b>Not used</b> |
| 129 | IG3-1 V34 (S3200baud) - <b>Not used</b> |
| 130 | IG3-1 V34 (S3429baud) - <b>Not used</b> |
| 131 | IG3-2 Modem Tests - <b>Not used</b>     |
| 132 | IG3-2 DTMF Tests - <b>Not used</b>      |
| 133 | IG3-2 V34 (S2400baud) - <b>Not used</b> |
| 134 | IG3-2 V34 (S2800baud) - <b>Not used</b> |
| 135 | IG3-2 V34 (S3000baud) - <b>Not used</b> |
| 136 | IG3-2 V34 (S3200baud) - <b>Not used</b> |
| 137 | IG3-2 V34 (S3429baud) - <b>Not used</b> |

#### 4.2.8 SP9-XXX (DESIGN SWITCH MODE)

| 9   | Mode No.                 | Function |
|-----|--------------------------|----------|
| 702 | Design Switch <b>DFU</b> |          |

## 4.3 BIT SWITCHES


### **WARNING**

- Do not adjust a bit switch or use a setting that is described as “Not used”, as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

#### Note

- Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

### 4.3.1 SYSTEM SWITCHES

| System Switch 00 [SP No. 1-101-001] |   |  |
|-------------------------------------|---|--|
| No                                  | FUNCTION  | COMMENTS   |
| 0                                   | Dedicated transmission parameter programming<br>0: Disabled, 1: Enabled   | Set this bit to 1 before changing any dedicated transmission parameters.<br>Reset this bit to 0 after programming dedicated transmission parameters.   |
| 1                                   | <b>Not used</b>   | Do not change  |
| 2                                   | Technical data printout on the Journal<br>0: Disabled<br>1: Enabled   | 1: Instead of the personal name, the following data are listed on the Journal for each G3 communication.   |
|                                     | e.g. 0000 (1) // 32 (2) V34 (3) // 288 (4) // 264 (5) // L0100 (6) 03 (7) 04 (8)<br>(1): EQM value (Line quality data). A larger number means more errors.<br>(2): Symbol rate (V.34 only)<br>(3): Final modem type used<br>(4): Starting data rate (for example, 288 means 28.8 kbps)<br>(5): Final data rate<br>(6): Rx revel (refer to the note after this table for how to read the rx level)<br>(7): Total number of error lines that occurred during non-ECM reception.<br>(8): Total number of burst error lines that occurred during non-ECM reception. |  |
|                                     |  Note  | <ul style="list-style-type: none"> <li>EQM and rx level are fixed at “FFFF” in tx mode.</li> <li>The seventh and eighth numbers are fixed at “00” for transmission records and ECM reception records.</li> </ul> |
|                                     | Rx level calculation<br>Example: 0000 // 32 V34 // 288/264 // L 01 00 03 04<br>The four-digit hexadecimal value (N) after “L” indicates the rx level.<br>The high byte is given first, followed by the low byte. Divide the decimal value of N by -16 to get the rx level.<br>In the above example, the decimal value of N (= 0100 [H]) is 256.   |  |

|   |   |  |
|---|---|--|
|   | So, the actual rx level is $256/-16 = -16$ dB                         |  |
| 3 | <b>Not used</b>   | Do not change this setting.  |
| 4 | Line error mark print<br>0: OFF, 1: ON (print)                        | When "1" is selected, a line error mark is printed on the printout if a line error occurs during reception.  |
| 5 | G3/G4 communication parameter display<br>0: Disabled<br>1: Enabled    | This is a fault-finding aid. The LCD shows the key parameters (see below). This is normally disabled because it cancels the CSI display for the user. Be sure to reset this bit to 0 after testing.  |
| 6 | Protocol dump list output after each communication<br>0: Off<br>1: On | This is only used for communication troubleshooting. It shows the content of the transmitted facsimile protocol signals. Always reset this bit to 0 after finishing testing. If system switch 09 bit 6 is at "1", the list is only printed if there was an error during the communication. |
| 7 | <b>Not used</b>   | Do not change the setting.   |

**System Switch 01 - Not used** (Do not change the factory settings.)

**System Switch 02 [SP No. 1-101-003]**

| No  | FUNCTION  | COMMENTS   |
|-----|---|--|
| 0-1 | <b>Not used</b>   | Do not change these settings.  |
| 2   | Force after transmission stall<br>0: Off<br>1: On   | With this setting on, the machine resets itself automatically if a transmission stalls and fails to complete the job.  |
| 3   | <b>Not used</b>   | Do not change these settings.  |
| 4   | File retention time<br>0: Depends on User Parameter 24 [18(H)]<br>1: No limit (until the year 2126)   | 1: A file that had a communication error will not be erased unless the communication is successful.  |
| 5   | <b>Not used</b>   | Do not change this setting.  |
| 6-7 | Memory read/write by RDS<br>Bit 7: 0, Bit 6: 0<br>Always disabled<br>Bit 7: 0, Bit 6: 1<br>User selectable<br>Bit 7: 1, Bit 6: 0<br>User selectable<br>Bit 7: 1, Bit 6: 1 | (0,0): All RDS systems are always locked out.<br>(0,1), (1,0): Normally, RDS systems are locked out, but the user can temporarily switch RDS on to allow RDS operations to take place. RDS will automatically be locked out again after a certain time, which is stored in System Switch 03. Note that if an RDS operation takes place, RDS will not switch off until this time limit has expired. |

Bit Switches

|  |                |   |
|--|----------------|---|
|  | Always enabled | (1,1): At any time, an RDS system can access the machine. |
|--|----------------|---|

| <b>System Switch 03 [SP No. 1-101-004]</b> |   |  |
|--|---|--|
| <b>No</b>                                  | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0-7  | Length of time that RDS is temporarily switched on when bits 6 and 7 of System Switch 02 are set to "User selectable" | 00 - 99 hours (BCD).<br>This setting is only valid if bits 6 and 7 of System Switch 02 are set to "User selectable".<br>The default setting is 24 hours. |

| <b>System Switch 04 [SP No. 1-101-005]</b> |   |  |
|--|---|--|
| <b>No</b>                                  | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0-2  | <b>Not used</b>   | Do not change these settings.  |
| 3  | Printing dedicated tx parameters on Quick/Speed Dial Lists<br>0: Disabled<br>1: Enabled | 1: Each Quick/Speed dial number on the list is printed with the dedicated tx parameters. |
| 4-7  | <b>Not used</b>   | Do not change these settings.  |

|  |
|--|
| <b>System Switch 05 - Not used</b> (Do not change the factory settings.) |
| <b>System Switch 06 - Not used</b> (Do not change the factory settings.) |
| <b>System Switch 07 - Not used</b> (Do not change the factory settings.) |
| <b>System Switch 08 - Not used</b> (Do not change the factory settings.) |

| <b>System Switch 09 [SP No. 1-101-010]</b> |  |   |
|--|--|---|
| <b>No</b>                                  | <b>FUNCTION</b>  | <b>COMMENTS</b>   |
| 0  | Addition of image data from confidential transmissions on the transmission result report<br>0: Disabled 1: Enabled | If this feature is enabled, the top half of the first page of confidential messages will be printed on transmission result reports.   |
| 1  | Inclusion of communications on the Journal when no image data was exchanged.<br>0: Disabled 1: Enabled             | 0: Communications that reached phase C (message tx/rx) of the T.30 protocol are listed on the Journal.<br>1: Communications that reached phase A (call setup) of T.30 protocol are listed on the Journal.<br>This will include telephone calls. |

|   |   |   |
|---|---|---|
| 2 | Automatic error report printout<br>0: Disabled 1: Enabled   | 0: Error reports will not be printed.<br>1: Error reports will be printed automatically after failed communications.  |
| 3 | Printing of the error code on the error report<br>0: No 1: Yes  | 1: Error codes are printed on the error reports.  |
| 4 | <b>Not used</b>   | Do not change this setting.   |
| 5 | Power failure report<br>0: Disabled 1: Enabled  | 1: A power failure report will be automatically printed after the power is switched on if a fax message disappeared from the memory when the power was turned off last.                   |
| 6 | Conditions for printing the protocol dump list<br>0: Print for all communications<br>1: Print only when there is a communication error                            | This switch becomes effective only when system switch 00 bit 6 is set to 1.<br>1: Set this bit to 1 when you wish to print a protocol dump list only for communications with errors.      |
| 7 | Priority given to various types of remote terminal ID when printing reports<br>0: RTI > CSI > Dial label > Tel. Number<br>1: Dial label > Tel. number > RTI > CSI | This bit determines which set of priorities the machine uses when listing remote terminal names on reports.<br>Dial Label: The name stored, by the user, for the Quick/Speed Dial number. |

| <b>System Switch 0A [SP No. 1-101-011]</b> |  |   |
|--|--|---|
| <b>No</b>                                  | <b>FUNCTION</b>  | <b>COMMENTS</b>   |
| 0  | Automatic port selection<br>0: Disabled, 1: Enabled  | When "1" is selected, a suitable port is automatically selected if the selected port is not used.   |
| 1-3  | <b>Not used</b>  | Do not change these settings.   |
| 4  | Dialing on the ten-key pad when the external telephone is off-hook<br>0: Disabled 1: Enabled | 0: Prevents dialing from the ten-key pad while the external telephone is off-hook. Use this setting when the external telephone is not by the machine, or if a wireless telephone is connected as an external telephone.<br>1: The user can dial on the machine's ten-key pad when the handset is off-hook. |
| 5  | On hook dial<br>0: Disabled 1: Enabled   | 0: On hook dial is disabled.  |
| 6-7  | <b>Not used</b>  | Do not change the factory settings  |

**System Switch 0B - Not used** (Do not change the factory settings.)

Bit Switches

|  |
|--|
| <b>System Switch 0C - Not used</b> (Do not change the factory settings.) |
| <b>System Switch 0D - Not used</b> (Do not change the factory settings.) |

| <b>System Switch 0E [SP No. 1-101-015]</b> |   |   |
|--|---|---|
| <b>No</b>                                  | <b>FUNCTION</b>   | <b>COMMENTS</b>   |
| 0-1  | <b>Not used</b>   | Do not change the settings.   |
| 2  | Enable/disable for direct sending selection<br>0: Direct sending off<br>1: Direct sending on  | Direct sending cannot operate when the capture function is on during sending. Setting this switch to "1" enables direct sending without capture. Setting this switch to "0" masks the direct sending function on the operation panel so it cannot be selected.  |
| 3  | Action when the external handset goes off-hook<br>0: Manual tx and rx operation<br>1: Memory tx and rx operation (the display remains the same) | 0: Manual tx and rx are possible while the external handset is off-hook. However, memory tx is not possible.<br>1: The display stays in standby mode even when the external handset is used, so that other people can use the machine for memory tx operation. Note that manual tx and rx are not possible with this setting. |
| 4-7  | <b>Not used</b>   | Do not change these settings.   |

| <b>System Switch 0F [SP No. 1-101-016]</b> |   |  |                  |
|--|---|--|------------------|
| <b>No</b>                                  | <b>FUNCTION</b>                                 | <b>COMMENTS</b>  |                  |
| 0-7  | Country/area code for functional settings (Hex) | This country/area code determines the factory settings of bit switches and RAM addresses. However, it has no effect on the NCU parameter settings and communication parameter RAM addresses.<br><b>Cross reference</b><br>NCU country code:<br>SP No. 2-103-001 for G3-1<br>SP No. 2-104-001 for G3-2<br>SP No. 2-105-001 for G3-3 |                  |
|  | 00: France                                      |  | 11: USA          |
|  | 01: Germany                                     |  | 12: Asia         |
|  | 02: UK  |  | 12: Asia         |
|  | 03: Italy                                       |  | 13: Japan        |
|  | 04: Austria                                     |  | 14: Hong Kong    |
|  | 05: Belgium                                     |  | 15: South Africa |
|  | 06: Denmark                                     |  | 16: Australia    |
|  | 07: Finland                                     |  | 17: New Zealand  |
|  | 08: Ireland                                     |  | 18: Singapore    |
|  | 09: Norway                                      |  | 19: Malaysia     |



|                 |             |  |
|-----------------|-------------|--|
| 0A: Sweden      | 1A: China   |  |
| 0B: Switzerland | 1B: Formosa |  |
| 0C: Portugal    | 1C: Korea   |  |
| 0D: Netherland  | 20: Turkey  |  |
| 0E: Spain       | 21: Greece  |  |
| 0F: Israel      | 22: Hungary |  |
| 10: ---         | 23: Czech   |  |
| 11: USA         | 24: Poland  |  |

**System Switch 10 [SP No. 1-101-017]**

| No  | FUNCTION  | COMMENTS  |
|-----|---|---|
| 0-7 | Threshold memory level for parallel memory transmission | Threshold = N x 128 KB + 256 KB<br>N can be between 00 - FF(H)<br>Default setting: 02(H) = 512 KB |

**System Switch 11 [SP No. 1-101-018]**

| No  | FUNCTION   | COMMENTS   |
|-----|--|--|
| 0   | TTI printing position<br>0: Superimposed on the page data<br>1: Printed before the data leading edge | Change this bit to 1 if the TTI overprints information that the customer considers to be important (G3 transmissions). |
| 1   | <b>Not used</b>  | Japan Only   |
| 2   | <b>Not used</b>  | Do not change the factory settings.  |
| 3   | TTI printing type<br>0: Address unit<br>1: File unit   | TTI printing unit can be selected.   |
| 4-6 | <b>Not used</b>  | Do not change the factory settings.  |
| 7   | <b>Not used</b>  | Japan Only   |

**System Switch 12 [SP No. 1-101-019]**

| No  | FUNCTION   | COMMENTS   |
|-----|--|--|
| 0-7 | TTI printing position in the main scan direction | TTI: 08 to 92 (BCD) mm<br>Input even numbers only.<br>This setting determines the print start position for |

Bit Switches

|  |  |  |
|--|--|--|
|  |  | the TTI from the left edge of the paper. If the TTI is moved too far to the right, it may overwrite the file number which is on the top right of the page. On an A4 page, if the TTI is moved over by more than 50 mm, it may overwrite the page number. |
|--|--|--|

|   |
|---|
| <b>System Switch 13 - Not used</b> (do not change these settings) |
| <b>System Switch 14 - Not used</b> (do not change these settings) |

| <b>System Switch 15 [SP No. 1-101-022]</b> |   |   |
|--|---|---|
| <b>No</b>                                  | <b>FUNCTION</b>   | <b>COMMENTS</b>   |
| 0  | <b>Not used</b>   | Do not change the settings.   |
| 1  | Going into the Energy Saver mode automatically<br>0: Enabled<br>1: Disabled   | 1: The machine will restart from the Energy Saver mode quickly, because the +5V power supply is active even in the Energy Saver mode.   |
| 2-3  | <b>Not used</b>   | Do not change these settings.   |
| 4-5  | Interval for preventing the machine from entering Energy Saver mode if there is a pending transmission file.<br>Bit 5: 0, Bit 4: 0<br>1 min<br>Bit 5: 0, Bit 4: 1<br>30 min<br>Bit 5: 1, Bit 4: 0<br>1 hour<br>Bit 5: 1, Bit 4: 1<br>24 hours | If there is a file waiting for transmission, the machine does not go to Energy Saver mode during the selected period. After transmitting the file, if there is no file waiting for transmission, the machine goes to the Energy Saver mode. |
| 6-7  | <b>Not used</b>   | Do not change   |

| <b>System Switch 16 [SP No. 1-101-023]</b> |   |   |
|--|---|---|
| <b>No</b>                                  | <b>FUNCTION</b>   | <b>COMMENTS</b>   |
| 0  | Parallel Broadcasting<br>0: Disabled<br>1: Enabled                                      | 1: The machine sends messages simultaneously using all available ports during broadcasting.   |
| 1  | Priority setting for the G3 line.<br>0: PSTN-1 > PSTN-2 or 3<br>1: PSTN-2 or 3 > PSTN-1 | This function allows the user to select the default G3 line type. The optional SG3 unit(s) are required to use the PSTN-2 or 3 setting. |
| 2-7  | <b>Not used</b>   | Do not change these settings.   |

|   |
|---|
| <b>System Switch 17 - Not used</b> (do not change these settings) |
| <b>System Switch 18 - Not used</b> (do not change these settings) |

| <b>System Switch 19 [SP No. 1-101-026]</b> |  |  |
|--|--|--|
| <b>No</b>                                  | <b>FUNCTION</b>  | <b>COMMENTS</b>  |
| 0-5  | <b>Not used</b>  | Do not change the settings.  |
| 6  | Extended scanner page memory after memory option is installed<br>0: Disabled<br>1: Enabled | 0: After installing the memory expansion option, the scanner page memory is extended to 4 MB from 2 MB.<br>1: If this bit is set to 1 after installing the memory expansion option, the scanner page memory is extended to 12 MB. But the SAF memory decreases to 18 MB. |
| 7  | Special Original mode<br>0: Disabled<br>1: Enabled   | 1: If the customer frequently wishes to transmit a form or letterhead which has a colored or printed background, change this bit to "1". "Original 1" and "Original 2" can be selected in addition to the "Text", "Text/Photo" and "Photo" modes.                        |

| <b>System Switch 1A [SP No. 1-101-027]</b> |  |   |
|--|--|---|
| <b>No.</b>                                 | <b>FUNCTION</b>                              | <b>COMMENTS</b>   |
| 0-7  | LS RX memory remaining refresh value setting | Sets a value of 4K.<br>If the amount of memory remaining falls below 4K, documents received in memory are printed to create more space in memory.<br>Initial value: 0x80 (512K)<br>00-FF (0-1020 KB: Hex) |

|   |
|---|
| <b>System Switch 1B - Not used</b> (do not change these settings) |
| <b>System Switch 1C - Not used</b> (do not change these settings) |

| <b>System Switch 1D [SP No. 1-101-030]</b> |   |   |
|--|---|---|
| <b>No</b>                                  | <b>FUNCTION</b>                                     | <b>COMMENTS</b>   |
| 0  | RTI/CSI/CPS code display<br>0: Enable<br>1: Disable | 0: RTI, CSI, CPS codes are displayed on the top line of the LCD panel during communication.<br>1: Codes are switched off (no display) |
| 1  | <b>Not used</b>                                     | Do not change this setting.   |

## Bit Switches

|     |  |   |
|-----|--|---|
| 2   | Destination telephone number display limitation<br>0: OFF, 1: ON   | When "1" is selected, the destination telephone number display is limited and redial is disabled.                         |
| 3   | Operation selection without PIN code registered<br>0: Transmission interrupted<br>1: No interrupted transmission | 0: When "0" is selected without PIN code registration, transmission is interrupted and an alert message shows on the LCD. |
| 4-7 | <b>Not used</b>  | Do not change these settings.   |

| <b>System Switch 1E [SP No. 1-101-031]</b> |  |   |
|--|--|---|
| <b>No</b>                                  | <b>FUNCTION</b>  | <b>COMMENTS</b>   |
| 0  | Communication after the Journal data storage area has become full<br>0: Impossible<br>1: Possible  | 0: When this switch is on and the journal history becomes full, the next report prints. If the journal history is not deleted, the next transmission cannot be received. This prevents overwriting communication records before the machine can print them.<br>1: If the buffer memory of the communication records for the Journal is full, fax communications are still possible. But the machine will overwrite the oldest communication records.<br>Note: This setting is effective only when Automatic Journal printout is enabled but the machine cannot print the report (e.g., no paper). |
| 1  | Action when the SAF memory has become full during scanning<br>0: The current page is erased.<br>1: The entire file is erased.                                  | 0: If the SAF memory becomes full during scanning, the successfully scanned pages are transmitted.<br>1: If the SAF memory becomes full during scanning, the file is erased and no pages are transmitted.<br>This bit switch is ignored for parallel memory transmission.   |
| 2  | RTI/CSI display priority<br>0: RTI 1: CSI  | This bit determines which identifier, RTI or CSI, is displayed on the LCD while the machine is communicating in G3 non-standard mode.   |
| 3  | File No. printing<br>0: Enabled<br>1: Disabled   | 1: File numbers are not printed on any reports.   |
| 4  | Action when authorized reception is enabled but authorized RTIs/CSIs are not yet programmed<br>0: All fax reception is disabled<br>1: Faxes can be received if | If authorized reception is enabled but the user has stored no acceptable sender RTIs or CSIs, the machine will not be able to receive any fax messages.<br>If the customer wishes to receive messages from any sender that includes an RTI or CSI, and to   |

|     |                              |   |
|-----|------------------------------|---|
|     | the sender has an RTI or CSI | block messages from senders that do not include an RTI or CSI, change this bit to "1", then enable Authorized Reception. Otherwise, keep this bit at "0 (default setting)". |
| 5-7 | <b>Not used</b>              | Do not change the settings  |

| <b>System Switch 1F [SP No. 1-101-032]</b> |   |  |
|--|---|--|
| <b>No</b>                                  | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0  | <b>Not used</b>   | Do not change the settings.  |
| 1  | Report printout after an original jam during SAF storage or if the SAF memory fills up<br>0: Enabled<br>1: Disabled | 0: When an original jams, or the SAF memory overflows during scanning, a report will be printed. Change this bit to "1" if the customer does not want to have a report in these cases.<br>Memory tx – Memory storage report<br>Parallel memory tx – Transmission result report |
| 2  | <b>Not used</b>   | Do not change the settings.  |
| 3  | Received fax print start timing (G3 reception)<br>0: After receiving each page<br>1: After receiving all pages      | 0: The machine prints each page immediately after the machine receives it.<br>1: The machine prints the complete message after the machine receives all the pages in the memory.   |
| 4-6  | <b>Not used</b>   | Do not change the factory settings.  |
| 7  | Action when a fax SC has occurred<br>0: Automatic reset<br>1: Fax unit stops  | 0: When the fax unit detects a fax SC code other than SC1201 and SC1207, the fax unit automatically resets itself.<br>1: When the fax unit detects any fax SC code, the fax unit stops.<br>Cross Reference<br>Fax SC codes - See "Troubleshooting"                             |

### 4.3.2 I-FAX SWITCHES

| <b>I-fax Switch 00 [SP No. 1-102-001]</b> |                                      |  |
|---|--------------------------------------|--|
| <b>No</b>                                 | <b>FUNCTION</b>                      | <b>COMMENTS</b>  |
|   | Original Width of TX Attachment File | This setting sets the maximum size of the original that the destination can receive. (Bits 3~7 are reserved for future use or not used.)   |
| 0   | A4                                   | 0: Off (not selected), 1: On (selected)<br>If more than one of these three bits is set to "1", the larger size has priority. For example, if both Bit 2 and Bit 1 are set to "1" then the maximum size |
| 1   | B4                                   |  |
| 2   | A3                                   |  |

Bit Switches

|     |                 |  |
|-----|-----------------|--|
| 3-6 | Reserved        | is "A3" (Bit 2).   |
| 7   | <b>Not used</b> | When mail is sent, there is no negotiation with the receiving machine at the destination, so the sending machine cannot make a selection for the receiving capabilities (original width setting) of the receiving machine. The original width selected with this switch is used as the RX machine's original width setting, and the original is reduced to this size before sending. The default is A4. If the width selected with this switch is higher than the receiving machine can accept, the machine detects this and this causes an error. |


| <b>I-fax Switch 01 [SP No. 1-102-002]</b> |  |  |
|---|--|--|
| <b>No</b>                                 | <b>FUNCTION</b>                                | <b>COMMENTS</b>  |
|   | Original Line Resolution of TX Attachment File | These settings set the maximum resolution of the original that the destination can receive.  |
| 0   | 200x100 Standard                               | 0: Not selected<br>1: Selected<br>If more than one of these three bits is set to "1", the higher resolution has priority. For example, if both Bit 0 and Bit 2 are set to "1" then the resolution is set for "Bit 2 200 x 400."  |
| 1   | 200x200 Detail                                 |  |
| 2   | 200x400 Fine                                   |  |
| 3   | 300 x 300 Reserve                              |  |
| 4   | 400 x 400 Super Fine                           |  |
| 5   | 600 x 600 Reserve                              |  |
| 6   | Reserve  |  |
| 7   | mm/inch  | This setting selects mm/inch conversion for mail transmission.<br>0: Off (No conversion), 1: On (Conversion)<br>When on (set to "1"), the machine converts millimeters to inches for sending mail. There is no switch for converting inches to millimeters.<br>Unlike G3 fax transmissions which can negotiate between sender and receiver to determine the setting, mail cannot negotiate between terminals; the mm/inch selection is determined by the sender fax.<br>When this switch is Off (0):<br>Images scanned in inches are sent in inches.<br>Images scanned in mm are sent in mm.<br>Images received in inches are transmitted in inches.<br>Images received in mm are transmitted in mm.<br>When this switch is On (1):<br>Images scanned in inches are sent in inches.<br>Images scanned in mm are converted to inches.<br>Images received in inches are transmitted in inches.<br>Images received in mm are converted to inches. |

| <b>I-fax Switch 02 [SP No. 1-102-003]</b> |  |   |
|---|--|---|
| <b>No</b>                                 | <b>FUNCTION</b>                                  | <b>COMMENTS</b>   |
| 0   | RX Text Mail Header Processing                   |   |
|   |  | This setting determines whether the header information is printed with text e-mails when they are received.<br>0: Prints only text mail.<br>1: Prints mail header information attached to text mail.<br>When a text mail is received with this switch On (1), the "From" address and "Subject" address are printed as header information.<br>When a mail with only binary data is received (a TIFF-F file, for example), this setting is ignored and no header is printed.  |
| 1   | Output from Attached Document at E-mail TX Error |   |
|   |  | This setting determines whether only the first page or all pages of an e-mail attachment are printed at the sending station when a transmission error occurs. This allows the customer to see which documents have not reached their intended destinations if sent to the wrong e-mail addresses, for example.<br>0: Prints 1st page only.<br>1: Prints all pages.  |
| 2-3                                       | Text String for Return Receipt                   |   |
|   |  | This setting determines the text string output for the Return Receipt that confirms the transmission was received normally at the destination.  |
|   |  | 00: "Dispatched"<br>Sends from PC mail a request for a Return Receipt. Receives the Return Receipt with "dispatched" in the 2nd part:<br>Disposition: Automatic-action/MDN-send automatically; dispatched<br>The "dispatched" string is included in the Subject string.<br>01: "Displayed"<br>Sends from PC mail a request for a Return Receipt. Receives the Return Receipt with "displayed" in the 2nd part:<br>Disposition: Automatic-action/MDN-send automatically; displayed<br>The "displayed" string is included in the Subject string.<br>10: Reserved<br>11: Reserved<br>A mail requesting a Return Receipt sent from an IFAX with this switch set to "00" (for "dispatched") received by Microsoft Outlook 2000 may cause an error. If any setting other than "displayed" (01) causes a problem, change the setting to "01" to enable normal sending of the Return Receipt. |
| 4   | Media accept feature                             |   |
|   |  | This setting adds or does not add the media accept feature to the answer mail to confirm a reception.<br>0: Does not add the media accept feature to the answer mail<br>1: Adds the media accept feature to the answer mail.<br>Use this bit switch if a problem occurs when the machine receives an answer mail, which contains the media accept feature field.  |

Bit Switches

|     |   |
|-----|---|
| 5-6 | <b>Not Used</b>   |
| 7   | <p>Image Resolution of RX Text Mail</p> <p>This setting determines the image resolution of the received mail.<br/>           0: 200 x 200<br/>           1: 400 x 400<br/>           The "1" setting requires installation of the Function Upgrade Card in order to have enough SAF (Store and Forward) memory to receive images at 400 x 400 resolution.</p> |

**I-fax Switch 03 - Not used** (do not change the settings) [ SP No. 1-102-004]


| <b>I-fax Switch 04 [SP No. 1-102-005]</b> |   |  |
|---|---|--|
| <b>No</b>                                 | <b>FUNCTION</b>                             | <b>COMMENTS</b>  |
| 0   | Subject for Delivery TX/Memory Transfer     | <p>This setting determines whether the RTI/CSI registered on this machine or the RTI/CSI of the originator is used in the subject lines of transferred documents.<br/>           0: Puts the RTI/CSI of the originator in the Subject line. If this is used, either the RTI or CSI is used. Only one of these can be received for use in the subject line.<br/>           1: Puts the RTI/CSI registered on this machine in the Subject line.<br/>           When this switch is used to transfer and deliver mail to a PC, the information in the Subject line that indicates where the transmission originated can be used to determine automatically the destination folder for each e-mail.</p>  |
| 1   | Subject corresponding to mail post database | <p>0: Standard subject<br/>           1: Mail post database subject<br/>           The standard subject is replaced by the mail post database subject in the following three cases:<br/>           1) When the service technician sets the service (software) switch.<br/>           2) When memory sending, delivery specified by F code or SMTP reception is done.<br/>           3) With relay broadcasting (1st stage without the Schmidt 4 function).</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>This switch does not apply for condition 3) when the RX system is set up for memory sending, delivery by F-code, sending with SMTP RX and when operators are using FOL (to prevent problems when receiving transmissions).</li> </ul> |
| 2-7                                       | <b>Not Used</b>                             |  |

| <b>I-fax Switch 05 [SP No. 1-102-006]</b> |   |                 |
|---|---|-----------------|
| <b>No</b>                                 | <b>FUNCTION</b>                             | <b>COMMENTS</b> |
| 0   | Mail Addresses of SMTP Broadcast Recipients |                 |



|     |  |  |
|-----|--|--|
|     | Determines whether the e-mail addresses of the destinations that receive transmissions broadcasted using SMTP protocol are recorded in the Journal.<br>For example:<br>"1st destination + Total number of destinations: 9" in the Journal indicates a broadcast to 9 destinations.<br>0: Not recorded<br>1: Recorded |  |
| 1   | I-Fax Automatic Re-dial Setting<br>0: OFF<br>1: ON   | Determines whether the I-fax automatically redials when an error occurs. |
| 2-7 | <b>Not Used</b>  |  |

|   |
|---|
| <b>I-fax Switch 06 - Not used</b> (do not change the settings) [SP No. 1-102-007] |
| <b>I-fax Switch 07 - Not used</b> (do not change the settings) [SP No. 1-102-008] |

| <b>I-fax Switch 08 [SP No. 1-102-009]</b> |  |          |
|---|--|----------|
| No  | FUNCTION   | COMMENTS |
| 0-7                                       | Memory Threshold for POP Mail Reception  |          |
|   | This setting determines the amount of SAF (Store and Forward) memory. (SAF stores fax messages to send later for transmission to more than one location, and also holds incoming messages if they cannot be printed.) When the amount of SAF memory available falls below this setting, mail can no longer be received; received mail is then stored on the mail server.<br>00-FF (0 to 1024 KB: HEX)<br> Note<br><ul style="list-style-type: none"> <li>The hexadecimal number you enter is multiplied by 4 KB to determine the amount of memory.</li> </ul> |          |

| <b>I-fax Switch 09 [SP No. 1-102-010]</b> |                     |  |
|---|---------------------|--|
| No  | FUNCTION            | COMMENTS   |
| 0-3                                       | <b>Not used</b>     | Do not change the settings   |
| 4-7                                       | Restrict TX Retries | This setting determines the number of retries when connection and transmission fails due to errors.<br>01-F (1-15 Hex) |


|   |
|---|
| <b>I-fax Switch 0A - Not used</b> (do not change the settings) [SP No. 1-102-011] |
| <b>I-fax Switch 0B - Not used</b> (do not change the settings) [SP No. 1-102-012] |

## Bit Switches

|   |
|---|
| <b>I-fax Switch 0C - Not used</b> (do not change the settings) [SP No. 1-102-013] |
| <b>I-fax Switch 0D - Not used</b> (do not change the settings) [SP No. 1-102-014] |
| <b>I-fax Switch 0E - Not used</b> (do not change the settings) [SP No. 1-102-015] |

| <b>I-fax Switch 0F [SP No. 1-102-016]</b> |   |                 |
|---|---|-----------------|
| <b>No</b>                                 | <b>FUNCTION</b>   | <b>COMMENTS</b> |
| 0   | Delivery Method for SMTP RX Files   |                 |
|   | This setting determines whether files received with SMTP protocol are delivered or output immediately.<br>0: Off. Files received via SMTP are output immediately without delivery.<br>1: On. Files received via SMTP are delivered immediately to their destinations. |                 |
| 1-7                                       | <b>Not used</b>   |                 |

## 4.3.3 PRINTER SWITCHES

| <b>Printer Switch 00 [SP No. 1-103-001]</b> |   |   |
|---|---|---|
| <b>No</b>                                   | <b>FUNCTION</b>   | <b>COMMENTS</b>   |
| 0   | Select page separation marks<br>0: Off<br>1: On   | 0: If a 2 page RX transmission is split, [*] is printed in the bottom right corner of the 1st page and only a [2] is printed in the upper right corner of the 2nd page.<br>1: If a 2 page RX transmission is split into two pages, for example, [*] [2] is printed in the bottom right corner of the 1st page and only a [2] is printed in the upper right corner of the 2nd page.<br> <b>Note</b><br><ul style="list-style-type: none"> <li>This helps the user to identify pages that have been split because the size of the paper is smaller than the size of the document received. (When A5 is used to print an A4 size document, for example.)</li> </ul> |
| 1   | Repetition of data when the received page is longer than the printer paper<br>0: Off<br>1: On | 1: Default. 10 mm of the trailing edge of the previous page are repeated at the top of the next page.<br>0: The next page continues from where the previous page stopped without any repeated text.   |
| 2   | Prints the date and time on received fax messages<br>0: Disabled<br>1: Enabled                | This switch is only effective when user parameter 02 - bit 2 (printing the received date and time on received fax messages) is enabled.<br>1: The machine prints the received and printed date and time at the bottom of each received page.  |

|     |                 |                             |
|-----|-----------------|-----------------------------|
| 3-7 | <b>Not used</b> | Do not change the settings. |
|-----|-----------------|-----------------------------|

| <b>Printer Switch 01 [SP No. 1-103-002]</b> |  |  |
|---|--|--|
| <b>No</b>                                   | <b>FUNCTION</b>  | <b>COMMENTS</b>  |
| 0-2   | <b>Not used</b>  | Do not change the settings.  |
| 3-4   | Maximum print width used in the setup protocol<br>Bit 4: 0, Bit 3: 0 = Not used<br>Bit 4: 0, Bit 3: 1 = A3<br>Bit 4: 1, Bit 3: 0 = B4<br>Bit 4: 1, Bit 3: 1 = A4 | These bits are only effective when bit 7 of printer switch 01 is "1".  |
| 5-6   | <b>Not used</b>  | Do not change the settings.  |
| 7   | Received message width restriction in the protocol signal to the sender<br>0: Disabled<br>1: Enabled   | 0: The machine informs the transmitting machine of the print width depending on the paper size available from the paper feed stations. Refer to the table on the next page for how the machine chooses the paper width used in the setup protocol (NSF/DIS).<br>1: The machine informs the transmitting machine of the fixed paper width which is specified by bits 3 and 4 above. |

| <b>Printer Switch 02 [SP No. 1-103-003]</b> |  |  |
|---|--|--|
| <b>No</b>                                   | <b>FUNCTION</b>  | <b>COMMENTS</b>  |
| 0   | 1st paper feed station usage for fax printing<br>0: Enabled<br>1: Disabled | 0: The paper feed station can be used to print fax messages and reports.<br>1: The specified paper feed station will not be used for printing fax messages and reports.<br>↓ Note<br>▪ Do not disable usage for a paper feed station which has been specified by User Parameter Switch 0F (15), or which is used for the Specified Cassette Selection feature. |
| 1   | 2nd paper feed station usage for fax printing<br>0: Enabled<br>1: Disabled |  |
| 2   | 3rd paper feed station usage for fax printing<br>0: Enabled<br>1: Disabled |  |
| 3   | 4th paper feed station usage for fax printing<br>0: Enabled<br>1: Disabled |  |
| 4   | LCT usage for fax printing<br>0: Enabled                                   |  |

Bit Switches

|     |                 |                             |
|-----|-----------------|-----------------------------|
|     | 1: Disabled     |                             |
| 5-7 | <b>Not used</b> | Do not change the settings. |

| <b>Printer Switch 03 [SP No. 1-103-004]</b> |   |  |
|---|---|--|
| <b>No</b>                                   | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0   | Length reduction of received data<br>0: Disabled<br>1: Enabled  | 0: Incoming pages are printed without length reduction.<br>(Page separation threshold: Printer Switch 03, bits 4 to 7)<br>1: Incoming page length is reduced when printing.<br>(Maximum reducible length: Printer Switches 04, bits 0 to 4)  |
| 1-3   | Not used  | Do not change the settings   |
| 4-7   | Page separation setting when sub scan compression is forbidden<br>00-0F (0-15 mm: Hex)<br>Default: 6 mm | Page separation threshold (with reduction disabled with switch 03-0 above).<br>For example, if this setting is set to "10", and A4 is the selected paper size:<br>If the received document is 10 mm or less longer than A4, then the 10 mm are cut and only 1 page prints.<br>If the received document is 10 mm longer than A4, then the document is split into 2 pages. |

| <b>Printer Switch 04<br/>SP No. 1-103-005</b>   |  |       |       |       |                 |         |
|---|--|-------|-------|-------|-----------------|---------|
| <b>No</b>   | <b>FUNCTION</b>  |       |       |       | <b>COMMENTS</b> |         |
| 0-4   | Maximum reducible length when length reduction is enabled with switch 03-0 above.<br><Maximum reducible length> = <Paper length> + (N x 5mm)<br>"N" is the decimal value of the binary setting of bits 0 to 4. |       |       |       |                 |         |
|   | Bit 4  | Bit 3 | Bit 2 | Bit 1 | Bit 0           | Setting |
|   | 0  | 0     | 0     | 0     | 0               | 0 mm    |
|   | 0  | 0     | 0     | 0     | 1               | 5 mm    |
|   | 0  | 0     | 1     | 0     | 0               | 20 mm   |
|   | 1  | 1     | 1     | 1     | 1               | 155 mm  |
| For A5 sideways and B5 sideways paper<br><Maximum reducible length> = <Paper length> + 0.75 x (N x 5mm) |  |       |       |       |                 |         |
| 5-6   | Length of the duplicated image on the next page, when page separation has taken place.   |       |       |       |                 |         |

|   |   |                            |
|---|---|----------------------------|
|   | Bit 6: 0, Bit 5: 0 = 4 mm<br>Bit 6: 1, Bit 5: 0 = 10 mm<br>Bit 6: 0, Bit 5: 1 = 15 mm<br>Bit 6: 1, Bit 5: 1 = <b>Not used</b> |                            |
| 7 | <b>Not used.</b>  | Do not change the setting. |

**Printer Switch 05 - Not used** (do not change the settings)

| <b>Printer Switch 06 [SP No. 1-103-007]</b> |   |  |
|---|---|--|
| <b>No</b>                                   | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0   | Printing while a paper cassette is pulled out, when the Just Size Printing feature is enabled.<br>0: Printing will not start<br>1: Printing will start if another cassette has a suitable size of paper, based on the paper size selection priority tables. | Cross reference<br>Just size printing on/off – User switch 05, bit 5 |
| 1-7   | <b>Not used.</b>  | Do not change the settings.  |

| <b>Printer Switch 07 [SP No. 1-103-008]</b> |   |  |
|---|---|--|
| <b>No</b>                                   | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0-3   | <b>Not used.</b>  | Do not change the settings.  |
| 4   | List of destinations in the Communication Failure Report for broadcasting<br>0: All destinations<br>1: Only destinations where communication failure occurred | 1: Only destinations where communication failure occurred are printed on the Communication Failure Report. |
| 5-7   | <b>Not used.</b>  | Do not change the settings.  |

**Printer Switch 08 - Not used** (do not change the settings)

**Printer Switch 09 - Not used** (do not change the settings)

**Printer Switch 0A - Not used** (do not change the settings)

**Printer Switch 0B - Not used** (do not change the settings)

Bit Switches

|  |
|--|
| <b>Printer Switch 0C - Not used</b> (do not change the settings) |
| <b>Printer Switch 0D - Not used</b> (do not change the settings) |

| <b>Printer Switch 0E [SP No. 1-103-015]</b> |   |  |
|---|---|--|
| <b>No</b>                                   | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0   | Paper size selection priority<br>0: Width<br>1: Length  | 0: A paper size that has the same width as the received data is selected first.<br>1: A paper size which has enough length to print all the received lines without reduction is selected first.  |
| 1   | Paper size selected for printing A4 width fax data<br>0: 8.5" x 11" size<br>1: A4 size  | This switch determines which paper size is selected for printing A4 width fax data, when the machine has both A4 and 8.5" x 11" size paper.  |
| 2   | Page separation<br>0: Enabled<br>1: Disabled  | 1: If all paper sizes in the machine require page separation to print a received fax message, the machine does not print the message (Substitute Reception is used).<br>After a larger size of paper is set in a cassette, the machine automatically prints the fax message. |
| 3-4   | Printing the sample image on reports<br>Bit 4: 0, Bit 3: 0<br>= The upper half only<br>Bit 4: 0, Bit 3: 1<br>= 50% reduction in sub-scan only<br>Bit 4: 1, Bit 3: 0<br>= Same size<br>Bit 4: 1, Bit 3: 1<br>= <b>Not used</b> | "Same size" means the sample image is printed at 100%, even if page separation occurs.<br>User Parameter Switch 19 (13H) bit 4 must be set to "0" to enable this switch.<br>Refer to Detailed Section Descriptions for more on this feature.                                 |
| 5-6   | <b>Not used</b>   | Do not change the settings.  |
| 7   | Equalizing the reduction ratio among separated pages (Page Separation)<br>0: Enabled<br>1: Disabled   | 0: When page separation has taken place, all the pages are reduced with the same reduction ratio.<br>1: Only the last page is reduced to fit the selected paper size when page separation has taken place. Other pages are printed without reduction.                        |


| <b>Printer Switch 0F [SP No. 1-103-016]</b> |  |  |
|---|--|--|
| <b>No</b>                                   | <b>FUNCTION</b>  | <b>COMMENTS</b>  |
| 0-1   | Smoothing feature<br>Bit 1: 0 Bit 0: 0 = Disabled<br>Bit 1: 0 Bit 0: 1 = Disabled<br>Bit 1: 1 Bit 0: 0 = Enabled | (0, 0) (0, 1): Disable smoothing if the machine receives halftone images from other manufacturers fax machines frequently. |

|     |  |  |
|-----|--|--|
|     | Bit 1: 1 Bit 0: 1 = <b>Not used</b>  |  |
| 2   | Duplex printing<br>0: Disabled<br>1: Enabled                               | 1: The machine always prints received fax messages in duplex printing mode:                          |
| 3   | Binding direction for Duplex printing<br>0: Left binding<br>1: Top binding | 0: Sets the binding for the left edge of the stack.<br>1: Sets the binding for the top of the stack. |
| 4-7 | <b>Not used</b>  | Do not change the settings.  |

#### 4.3.4 COMMUNICATION SWITCHES

| Communication Switch 00 [SP No. 1-104-001] |   |  |
|--|---|--|
| No   | FUNCTION  | COMMENTS   |
| 0-1  | Compression modes available in receive mode<br>Bit 1: 0 Bit 0: 0 = MH only<br>Bit 1: 0 Bit 0: 1 = MH/MR<br>Bit 1: 1 Bit 0: 0 = MH/MR/MMR<br>Bit 1: 1 Bit 0: 1 = MH/MR/MMR/JBIG  | These bits determine the compression capabilities to be declared in phase B (handshaking) of the T.30 protocol.                                    |
| 2-3  | Compression modes available in transmit mode<br>Bit 3: 0 Bit 2: 0 = MH only<br>Bit 3: 0 Bit 2: 1 = MH/MR<br>Bit 3: 1 Bit 2: 0 = MH/MR/MMR<br>Bit 3: 1 Bit 2: 1 = MH/MR/MMR/JBIG | These bits determine the compression capabilities to be used in the transmission and to be declared in phase B (handshaking) of the T.30 protocol. |
| 4  | <b>Not used</b>   | Do not change the settings.  |
| 5  | JBIG compression method: Reception<br>0: Only basic supported<br>1: Basic and optional both supported   | Change the setting when communication problems occur using JBIG compression.   |
| 6  | JBIG compression method: Transmission<br>0: Basic mode priority<br>1: Optional mode priority  | Change the setting when communication problems occur using JBIG compression.   |
| 7  | <b>Not used</b>   | Do not change the settings.  |

Bit Switches

| Communication Switch 01 [SP No. 1-104-002] |  |  |
|--|--|--|
| No   | FUNCTION   | COMMENTS   |
| 0  | ECM<br>0: Off 1: On  | If this bit is set to 0, ECM is switched off for all communications.<br>In addition, V.8 protocol and JBIG compression are switched off automatically.   |
| 1  | <b>Not used</b>  | Do not change the settings.  |
| 2-3  | Wrong connection prevention method<br>Bit 3: 0, Bit 2: 0 = None<br>Bit 3: 0, Bit 2: 1 = 8 digit CSI<br>Bit 3: 1, Bit 2: 0 = 4 digit CSI<br>Bit 3: 1, Bit 2: 1 = CSI/RTI              | (0,1) - The machine will disconnect the line without sending a fax message, if the last 8 digits of the received CSI do not match the last 8 digits of the dialed telephone number. This does not work when manually dialed.<br>(1,0) - The same as above, except that only the last 4 digits are compared.<br>(1,1) - The machine will disconnect the line without sending a fax message, if the other end does not identify itself with an RTI or CSI.<br>(0,0) - Nothing is checked; transmission will always go ahead.<br> Note<br><ul style="list-style-type: none"> <li>This function does not work when dialing is done from the external telephone.</li> </ul> |
| 4-5  | <b>Not used</b>  | Do not change the setting.   |
| 6-7  | Maximum printable page length available<br>Bit 7: 0 Bit 6: 0 = No limit<br>Bit 7: 0 Bit 6: 1 = B4 (364 mm)<br>Bit 7: 1 Bit 6: 0 = A4 (297 mm)<br>Bit 7: 1 Bit 6: 1 = <b>Not used</b> | The setting determined by these bits is informed to the transmitting terminal in the pre-message protocol exchange (in the DIS/NSF frames).  |

| Communication Switch 02 [SP No. 1-104-003] |  |  |
|--|--|--|
| No   | FUNCTION                                   | COMMENTS   |
| 0  | G3 Burst error threshold<br>0: Low 1: High | If there are more consecutive error lines in the received page than the threshold, the machine will send a negative response. The Low and High threshold values depend on the sub-scan resolution, and are as follows. |
|  |  | 100 dpi      6(L) ⇒ 12(H)  |
|  |  | 200 dpi      12(L) ⇒ 24(H)   |
|  |  | 300 dpi      18(L) ⇒ 36(H)   |
|  |  | 400 dpi      24(L) ⇒ 48(H)   |



|     |  |   |
|-----|--|---|
| 1   | Acceptable total error line ratio<br>0: 5% 1: 10%  | If the error line ratio for a page exceeds the acceptable ratio, RTN will be sent to the other end.   |
| 2   | Treatment of pages received with errors during G3 reception<br>0: Deleted from memory without printing<br>1: Printed         | 0: Pages received with errors are not printed.  |
| 3   | Hang-up decision when a negative code (RTN or PIN) is received during G3 immediate transmission<br>0: No hang-up, 1: Hang-up | 0: The next page will be sent even if RTN or PIN is received.<br>1: The machine will send DCN and hang up if it receives RTN or PIN.<br>This bit is ignored for memory transmissions or if ECM is being used. |
| 4-7 | <b>Not used</b>  | Do not change the settings.   |

**Communication Switch 03 [SP No. 1-104-004]**

| No  | FUNCTION   | COMMENTS   |
|-----|--|--|
| 0-7 | Maximum number of page retransmissions in a G3 memory transmission | 00 - FF (Hex) times.<br>This setting is not used if ECM is switched on.<br>Default setting - 03(H) |

**Communication Switch 04 - Not used** (do not change the settings)**Communication Switch 05 - Not used** (do not change the settings)**Communication Switch 06 - Not used** (do not change the settings)**Communication Switch 07 - Not used** (do not change the settings)**Communication Switch 08 - Not used** (do not change the settings)**Communication Switch 09 [SP No. 1-104-010]**

| No  | FUNCTION                     | COMMENTS   |
|-----|------------------------------|--|
| 0-7 | IP-Fax dial interval setting | Adjusts the interval of the I-fax dialing.<br>The interval of I-fax dialing is calculated by following formula.<br>[Interval time = specified value with this switch x 0.2 msec] |

**Communication Switch 0A [SP No. 1-104-011]**

Bit Switches

| No  | FUNCTION  | COMMENTS   |
|-----|---|--|
| 0   | Point of resumption of memory transmission upon redialing<br>0: From the error page<br>1: From page 1 | 0: The transmission begins from the page where transmission failed the previous time.<br>1: Transmission begins from the first page, using normal memory transmission. |
| 1-7 | <b>Not used</b>   | Do not change the settings.  |

**Communication Switch 0B - Not used** (do not change the settings)

**Communication Switch 0C - Not used** (do not change the settings)

**Communication Switch 0D [SP No. 1-104-014]**

| No  | FUNCTION  | COMMENTS   |
|-----|---|--|
| 0-7 | The available memory threshold, below which ringing detection (and therefore reception into memory) is disabled | 00 to FF (Hex), unit = 4 kbytes<br>(e.g., 06(H) = 24 kbytes)<br>One page is about 24 kbytes.<br>The machine refers to this setting before each fax reception. If the amount of remaining memory is below this threshold, the machine cannot receive any fax messages.<br>If this setting is kept at 0, the machine will detect ringing signals and go into receive mode even if there is no memory available. This will result in communication failure. |

**Communication Switch 0E [SP No. 1-104-015]**

| No  | FUNCTION  | COMMENTS  |
|-----|---|---|
| 0-7 | Minimum interval between automatic dialing attempts | 06 to FF (Hex), unit = 2 s<br>(e.g., 06(H) = 12 s)<br>This value is the minimum time that the machine waits before it dials the next destination. |

**Communication Switch 0F – Not used** (do not change the settings.)

**Communication Switch 10 [SP No. 1-104-017]**

| No  | FUNCTION   | COMMENTS            |
|-----|--|---------------------|
| 0-7 | Memory transmission:<br>Maximum number of dialing attempts to the same | 01 – FE (Hex) times |

|  |             |  |
|--|-------------|--|
|  | destination |  |
|--|-------------|--|

**Communication Switch 11 – Not used** (do not change the settings.)

| <b>Communication Switch 12 [SP No. 1-104-019]</b> |  |                       |
|---|--|-----------------------|
| <b>No</b>   | <b>FUNCTION</b>  | <b>COMMENTS</b>       |
| 0-7   | Memory transmission: Interval between dialing attempts to the same destination | 01 – FF (Hex) minutes |

**Communication Switch 13 – Not used** (do not change the settings.)

| <b>Communication Switch 14 [SP No. 1-104-021]</b> |   |   |
|---|---|---|
| <b>No</b>   | <b>FUNCTION</b>   | <b>COMMENTS</b>   |
| 0   | Inch-to-mm conversion during transmission<br>0: Disabled 1: Enabled   | 0: In immediate transmission, data scanned in inch format are transmitted without conversion. In memory transmission, data stored in the SAF memory in mm format are transmitted without conversion.<br>Note: When storing the scanned data into SAF memory, the fax unit always converts the data into mm format.<br>1: The machine converts the scanned data or stored data in the SAF memory to the format which was specified in the set-up protocol (DIS/NSF) before transmission. |
| 1-5   | <b>Not used</b>   | Do not change the factory settings.   |
| 6-7   | Available unit of resolution in which fax messages are received<br>Bit 7: 0, Bit 6: 0 = mm<br>Bit 7: 0, Bit 6: 1 = inch<br>Bit 7: 1, Bit 6: 0 = mm and inch (default)<br>Bit 7: 1, Bit 6: 1 = <b>Not used</b> | For the best performance, do not change the factory settings.<br>The setting determined by these bits is informed to the transmitting terminal in the pre-message protocol exchange (in the DIS/NSF frames).  |

**Communication Switch 15 – Not used** (do not change the settings)

**Communication Switch 16 [SP No. 1-104-023]**

Bit Switches

| No  | FUNCTION                                   | COMMENTS   |
|-----|--|--|
| 0   | <b>Not used</b>                            | Do not change the factory settings.  |
| 1   | Optional G3 unit (G3-2)<br>0: Off<br>1: On | Change this bit to "1" when installing the first optional G3 unit (G3-2).  |
| 2   | <b>Not used</b>                            | Do not change the factory settings.  |
| 3   | Optional G3 unit (G3-3)<br>0: Off<br>1: On | Change this bit to "1" when installing the second optional G3 unit (G3-3). |
| 4-7 | <b>Not used</b>                            | Do not change the factory settings.  |

| Communication Switch 17 [SP No. 1-104-024] |   |  |
|--|---|--|
| No   | FUNCTION  | COMMENTS   |
| 0  | SEP reception<br>0: Disabled<br>1: Enabled  | 0: Polling transmission to another maker's machine using the SEP (Selective Polling) signal is disabled. |
| 1  | SUB reception<br>0: Disabled<br>1: Enabled  | 0: Confidential reception to another maker's machine using the SUB (Sub-address) signal is disabled.     |
| 2  | PWD reception<br>0: Disabled<br>1: Enabled  | 0: Disables features that require PWD (Password) signal reception.                                       |
| 3-6  | <b>Not used</b>   | Do not change the factory settings.  |
| 7  | Action when there is no box with an F-code that matches the received SUB code<br>0: Disconnect the line<br>1: Receive the message (using normal reception mode) | Change this setting when the customer requires.  |

| Communication Switch 18 [SP No. 1-104-025] |   |  |
|--|---|--|
| No   | FUNCTION  | COMMENTS   |
| 0-4  | <b>Not used</b>                                     | Do not change the factory settings.  |
| 5  | IP-Fax dial-in routing selection<br>0: Off<br>1: On | 1: Transfers receiving data to each IP-Fax dial-in number.<br>IP-Fax dial-in number is 4 digit-number. |
| 6-7  | <b>Not used</b>                                     | Do not change the factory settings.  |

|  |
|--|
| <b>Communication Switch 19 - Not used</b> (do not change the settings) |
| <b>Communication Switch 1A - Not used</b> (do not change the settings) |

| <b>Communication Switch 1B [SP No. 1-104-028]</b> |   |   |
|---|---|---|
| <b>No</b>   | <b>FUNCTION</b>   | <b>COMMENTS</b>   |
| 0-7   | Extension access code (0 to 7) to turn V.8 protocol On/Off<br>0: On<br>1: Off | If the PABX does not support V.8/V.34 protocol procedure, set this bit to "1" to disable V.8.<br>Example: If "0" is the PSTN access code, set bit 0 to 1. When the machine detects "0" as the first dialed number, it automatically disables V.8 protocol. (Alternatively, if "3" is the PSTN access code, set bit 3 to 1.) |

| <b>Communication Switch 1C [SP No. 1-104-029]</b> |  |   |
|---|--|---|
| <b>No</b>   | <b>FUNCTION</b>  | <b>COMMENTS</b>   |
| 0-1   | Extension access code (8 and 9) to turn V.8 protocol On/Off<br>0: On<br>1: Off | Refer to communication switch 1B.<br>Example: If "8" is the PSTN access code, set bit 0 to 1. When the machine detects "8" as the first dialed number, it automatically disables V.8 protocol. (If "9" is the PSTN access code, use bit 1.) |
| 2-7   | <b>Not used</b>  | Do not change the settings.   |

|  |
|--|
| <b>Communication Switch 1D - Not used</b> (do not change the settings) |
| <b>Communication Switch 1E - Not used</b> (do not change the settings) |
| <b>Communication Switch 1F - Not used</b> (do not change the settings) |

### 4.3.5 G3 SWITCHES

| <b>G3 Switch 00 [SP No. 1-105-001]</b> |  |  |
|--|--|--|
| <b>No</b>                              | <b>FUNCTION</b>  | <b>COMMENTS</b>  |
| 0<br>1                                 | Monitor speaker during communication (tx and rx)<br>Bit 1: 0, Bit 0: 0 = Disabled<br>Bit 1: 0, Bit 0: 1 = Up to Phase B<br>Bit 1: 1, Bit 0: 0 = All the time<br>Bit 1: 1, Bit 0: 1 = <b>Not used</b> | (0, 0): The monitor speaker is disabled all through the communication.<br>(0, 1): The monitor speaker is on up to phase B in the T.30 protocol.<br>(1, 0): Used for testing. The monitor speaker is on all through the communication. Make sure that you reset these bits after testing. |

Bit Switches

|     |  |   |
|-----|--|---|
| 2   | Monitor speaker during memory transmission<br>0: Disabled 1: Enabled | 1: The monitor speaker is enabled during memory transmission. |
| 3-5 | <b>Not used</b>  | Do not change the settings.                                   |
| 6   | G3 mode selection for direct line<br>0: Off<br>1: On                 | 1: G3 communication through the direct line is enabled.       |
| 7   | <b>Not used</b>  | Do not change the settings.                                   |

| <b>G3 Switch 01 [SP No. 1-105-002]</b> |  |   |
|--|--|---|
| <b>No</b>                              | <b>FUNCTION</b>  | <b>COMMENTS</b>   |
| 0-1                                    | <b>Not used</b>  | Do not change the settings.   |
| 2-3                                    | <b>Not used</b>  | Do not change the settings.   |
| 4                                      | DIS frame length<br>0: 10 bytes 1: 4 bytes                 | 1: The bytes in the DIS frame after the 4th byte will not be transmitted (set to 1 if there are communication problems with PC-based faxes which cannot receive the extended DIS frames). |
| 5                                      | <b>Not used</b>  | Do not change the setting.  |
| 6                                      | Forbid CED/AMsam output<br>0: Off<br>1: On (Forbid output) | Do not change this setting (Default: 0: Off), unless communication problem is caused by a CED or ANSam transmission.  |
| 7                                      | <b>Not used</b>  | Do not change the setting.  |

| <b>G3 Switch 02 [SP No. 1-105-003]</b> |   |   |
|--|---|---|
| <b>No</b>                              | <b>FUNCTION</b>   | <b>COMMENTS</b>   |
| 0                                      | G3 protocol mode used<br>0: Standard and non-standard<br>1: Standard only | Change this bit to 1 only when the other end can only communicate with machines that send T.30-standard frames only.<br>1: Disables NSF/NSS signals (these are used in non-standard mode communication) |
| 1-6                                    | <b>Not used</b>   | Do not change the settings.   |
| 7                                      | Short preamble<br>0: Disabled 1: Enabled                                  | Refer to Appendix B in the Group 3 Facsimile Manual for details about Short Preamble.   |

| <b>G3 Switch 03 [SP No. 1-105-004]</b> |                 |                 |
|--|-----------------|-----------------|
| <b>No</b>                              | <b>FUNCTION</b> | <b>COMMENTS</b> |

|   |  |  |
|---|--|--|
| 0 | DIS detection number<br>(Echo countermeasure)<br>0: 1<br>1: 2  | 0: The machine will hang up if it receives the same DIS frame twice.<br>1: Before sending DCS, the machine will wait for the second DIS which is caused by echo on the line.   |
| 1 | <b>Not Used</b>  | Do not change the settings.  |
| 2 | V.8 protocol<br>0: Disabled<br>1: Enabled  | 0: V.8/V.34 communications will not be possible.<br>Note:<br>Do not set to 0 unless the line condition is always bad enough to slow down the data rate to 14.4 kbps or lower.  |
| 3 | ECM frame size<br>0: 256 bytes<br>1: 64 bytes  | Keep this bit at "0" in most cases.  |
| 4 | CTC transmission conditions<br>0: After one PPR signal received<br>1: After four PPR signals received (ITU-T standard) | 0: When using ECM in non-standard (NSF/NSS) mode, the machine sends a CTC to drop back the modem rate after receiving a PPR, if the following condition is met in communications at 14.4, 12.0, 9.6, and 7.2 kbps.<br>$\sqrt{N_{\text{Transmit}} \leq N_{\text{Resend}}}$<br>NTransmit- Number of transmitted frames<br>NResend- Number of frames to be retransmitted<br>1: When using ECM, the machine sends a CTC to drop back the modem rate after receiving four PPRs.<br>PPR, CTC: These are ECM protocol signals.<br>This bit is not effective in V.34 communications. |
| 5 | Modem rate used for the next page after receiving a negative code (RTN or PIN)<br>0: No change 1: Fallback             | 1: The machine's tx modem rate will fall back before sending the next page if a negative code is received. This bit is ignored if ECM is being used.   |
| 6 | <b>Not Used</b>  | Do not change the settings   |
| 7 | Select detection of reverse polarity in ringing<br>0: Off<br>1: On   | This switch is used to prevent reverse polarity in ringing on the phone line (applied to PSTN-G3 ringing). Do not change this setting<br>0: No detection ⇒ Outside Japan<br>1: Detection ⇒ Inside Japan only   |

| G3 Switch 04 [SP No. 1-105-005] |                                    |  |
|---------------------------------|------------------------------------|--|
| No                              | FUNCTION                           | COMMENTS   |
| 0-3                             | Training error detection threshold | 0 - F (Hex); 0 - 15 bits<br>If the number of error bits in the received TCF is below this threshold, the machine informs the |

Bit Switches

|     |                 |                                     |
|-----|-----------------|-------------------------------------|
|     |                 | sender that training has succeeded. |
| 4-7 | <b>Not used</b> | Do not change the settings.         |

| G3 Switch 05 [SP No. 1-105-006] |   |       |       |       |       |  |
|---------------------------------|---|-------|-------|-------|-------|--|
| No                              | FUNCTION  |       |       |       |       | COMMENTS   |
| 0-3                             | Initial Tx modem rate   |       |       |       |       | <p>These bits set the initial starting modem rate for transmission.</p> <p>Use the dedicated transmission parameters if you need to change this for specific receivers.</p> <p>If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually.</p> <p>Cross reference</p> <p>V.8 protocol on/off - G3 switch 03, bit2</p> |
|                                 | Bit 3   | Bit 2 | Bit 1 | Bit 0 | bps   |  |
|                                 | 0   | 0     | 0     | 1     | 2.4k  |  |
|                                 | 0   | 0     | 1     | 0     | 4.8k  |  |
|                                 | 0   | 0     | 1     | 1     | 7.2k  |  |
|                                 | 0   | 1     | 0     | 0     | 9.6k  |  |
|                                 | 0   | 1     | 0     | 1     | 12.0k |  |
|                                 | 0   | 1     | 1     | 0     | 14.4k |  |
|                                 | 0   | 1     | 1     | 1     | 16.8k |  |
|                                 | 1   | 0     | 0     | 0     | 19.2k |  |
|                                 | 1   | 0     | 0     | 1     | 21.6k |  |
|                                 | 1   | 0     | 1     | 0     | 24.0k |  |
|                                 | 1   | 0     | 1     | 1     | 26.4k |  |
|                                 | 1   | 1     | 0     | 0     | 28.8k |  |
| 1                               | 1   | 0     | 1     | 31.2k |       |  |
| 1                               | 1   | 1     | 0     | 33.6k |       |  |
|                                 | <b>Other settings - Not used</b>  |       |       |       |       |  |
| 4-5                             | <p>Initial modem type for 9.6 k or 7.2 kbps.</p> <p>Bit 5: 0, Bit 4: 0 = V.29</p> <p>Bit 5: 0, Bit 4: 1 = V.17</p> <p>Bit 5: 1, Bit 4: 0 = V.34</p> <p>Bit 5: 1, Bit 4: 1 = <b>Not used</b></p> |       |       |       |       | <p>These bits set the initial modem type for 9.6 and 7.2 kbps, if the initial modem rate is set at these speeds.</p>   |
| 6-7                             | <b>Not used</b>   |       |       |       |       | Do not change the settings.  |



| G3 Switch 06 [SP No. 1-105-007]  |                                     |       |       |                               |  |                          |
|----------------------------------|-------------------------------------|-------|-------|-------------------------------|--|--------------------------|
| No                               | FUNCTION                            |       |       |                               | COMMENTS   |                          |
| 0-3                              | Initial Rx modem rate               |       |       |                               | <ul style="list-style-type: none"> <li>▪ These bits set the initial starting modem rate for reception.</li> <li>▪ Use a lower setting if high speeds pose problems during reception.</li> <li>▪ If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually.</li> </ul> Cross reference:<br>V.8 protocol on/off - G3 switch 03, bit2 |                          |
|                                  | Bit 3                               | Bit 2 | Bit 1 | Bit 0                         |  | bps                      |
|                                  | 0                                   | 0     | 0     | 1                             |  | 2.4k                     |
|                                  | 0                                   | 0     | 1     | 0                             |  | 4.8k                     |
|                                  | 0                                   | 0     | 1     | 1                             |  | 7.2k                     |
|                                  | 0                                   | 1     | 0     | 0                             |  | 9.6k                     |
|                                  | 0                                   | 1     | 0     | 1                             |  | 12.0k                    |
|                                  | 0                                   | 1     | 1     | 0                             |  | 14.4k                    |
|                                  | 0                                   | 1     | 1     | 1                             |  | 16.8k                    |
|                                  | 1                                   | 0     | 0     | 0                             |  | 19.2k                    |
|                                  | 1                                   | 0     | 0     | 1                             |  | 21.6k                    |
|                                  | 1                                   | 0     | 1     | 0                             |  | 24.0k                    |
|                                  | 1                                   | 0     | 1     | 1                             |  | 26.4k                    |
|                                  | 1                                   | 1     | 0     | 0                             |  | 28.8k                    |
|                                  | 1                                   | 1     | 0     | 1                             |  | 31.2k                    |
| 1                                | 1                                   | 1     | 0     | 33.6k                         |  |                          |
| Other settings - <b>Not used</b> |                                     |       |       |                               |  |                          |
| 4-7                              | Modem types available for reception |       |       |                               | <ul style="list-style-type: none"> <li>▪ The setting of these bits is used to inform the transmitting terminal of the available modem type for the machine in receive mode.</li> <li>▪ If V.34 is not selected, V.8 protocol must be disabled manually.</li> </ul> Cross reference:<br>V.8 protocol on/off - G3 switch 03, bit2                                    |                          |
|                                  | Bit 7                               | Bit 6 | Bit 5 | Bit 4                         |  | Setting                  |
|                                  | 0                                   | 0     | 0     | 1                             |  | V.27ter                  |
|                                  | 0                                   | 0     | 1     | 0                             |  | V.27ter,V.29             |
|                                  | 0                                   | 0     | 1     | 1                             |  | V.27ter, V.29, V.33      |
|                                  | 0                                   | 1     | 0     | 0                             |  | V.27ter, V.29, V.17/V.33 |
| 0                                | 1                                   | 0     | 1     | V.27ter, V.29, V.17/V33, V.34 |  |                          |

Bit Switches

|  |                                  |  |
|--|----------------------------------|--|
|  | Other settings - <b>Not used</b> |  |
|--|----------------------------------|--|

| <b>G3 Switch 07 [SP No. 1-105-008]</b> |  |   |
|--|--|---|
| <b>No</b>                              | <b>FUNCTION</b>  | <b>COMMENTS</b>   |
| 0-1                                    | PSTN cable equalizer<br>(tx mode: Internal)<br>Bit 1: 0, Bit 0: 0 = None<br>Bit 1: 0, Bit 0: 1 = Low<br>Bit 1: 1, Bit 0: 0 = Medium<br>Bit 1: 1, Bit 0: 1 = High | Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.<br>Use the dedicated transmission parameters for specific receivers.<br>Also, try using the cable equalizer if one or more of the following symptoms occurs.<br>Communication error<br>Modem rate fallback occurs frequently.<br><a href="#">↓ Note</a><br><ul style="list-style-type: none"> <li>▪ This setting is not effective in V.34 communications.</li> </ul> |
| 2-3                                    | PSTN cable equalizer<br>(rx mode: Internal)<br>Bit 3: 0, Bit 2: 0 = None<br>Bit 3: 0, Bit 2: 1 = Low<br>Bit 3: 1, Bit 2: 0 = Medium<br>Bit 3: 1, Bit 2: 1 = High | Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.<br>Also, try using the cable equalizer if one or more of the following symptoms occurs.<br>Communication error with error codes such as 0-20, 0-23, etc.<br>Modem rate fallback occurs frequently.<br><a href="#">↓ Note</a><br><ul style="list-style-type: none"> <li>▪ This setting is not effective in V.34 communications.</li> </ul>                            |
| 4                                      | PSTN cable equalizer<br>(V.8/V.17 rx mode: External)<br>0: Disabled<br>1: Enabled  | Keep this bit at "1".   |
| 5                                      | <b>Not used</b>  | Do not change the settings.   |
| 6                                      | Parameter selection for dial tone detection<br>0: Normal parameter<br>1: Specific parameter  | 0: This uses the fixed table in the ROM for dial tone detection.<br>1: This uses the specific parameter adjusted with SRAM (69ECBEH - 69ECDEH). Select this if the dial tone cannot be detected when the "Normal parameter: 0" is selected.   |
| 7                                      | <b>Not used</b>  | Do not change the settings.   |

|   |
|---|
| <b>G3 Switch 08 - Not used</b> (do not change the settings) |
| <b>G3 Switch 09 - Not used</b> (do not change the settings) |

| <b>G3 Switch 0A [SP No. 1-105-011]</b> |   |  |
|--|---|--|
| <b>No</b>                              | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0-1                                    | Maximum allowable carrier drop during image data reception<br>Bit 1: 0, Bit 0: 0 = 200 (ms)<br>Bit 1: 0, Bit 0: 1 = 400 (ms)<br>Bit 1: 1, Bit 0: 0 = 800 (ms)<br>Bit 1: 1, Bit 0: 1 = <b>Not used</b> | These bits set the acceptable modem carrier drop time.<br>Try using a longer setting if error code 0-22 is frequent.   |
| 2                                      | Select cancellation of high-speed RX if carrier signal lost while receiving<br>0: Off<br>1: On  | This switch setting determines if high-speed receiving ends if the carrier signal is lost when receiving during non-ECM mode   |
| 3                                      | <b>Not used</b>   | Do not change the settings   |
| 4                                      | Maximum allowable frame interval during image data reception.<br>0: 5 s 1: 13 s   | This bit set the maximum interval between EOL (end-of-line) signals and the maximum interval between ECM frames from the other end.<br>Try using a longer setting if error code 0-21 is frequent.  |
| 5                                      | <b>Not used</b>   | Do not change the settings.  |
| 6                                      | Reconstruction time for the first line in receive mode<br>0: 6 s 1: 12 s  | When the sending terminal is controlled by a computer, there may be a delay in receiving page data after the local machine accepts set-up data and sends CFR. This is outside the T.30 recommendation. But, if this delay occurs, set this bit to 1 to give the sending machine more time to send data.<br>Refer to error code 0-20.<br>ITU-T T.30 recommendation: The first line should come within 5 s of CFR. |
| 7                                      | <b>Not used</b>   | Do not change the settings.  |

**G3 Switch 0B - Not used** (do not change the settings).

**G3 Switch 0C - Not used** (do not change the settings)

**G3 Switch 0D - Not used** (do not change the settings).

| <b>G3 Switch 0E [SP No 1-105-015]</b> |   |
|---------------------------------------|---|
| 0-7                                   | Set CNG send time interval<br>Some machines on the receiving side may not be able to automatically switch the |

## Bit Switches

|                |                        |   |
|----------------|------------------------|---|
|                | 3-second CNG interval. |   |
| High order bit |                        | 3000-2250ms: 3000-50xNms<br>3000 – 50 x Nms 0F (3000 ms) ≤ N ≤ FF (2250 ms)       |
| Low order bit  |                        | 00-0E(3000-3700ms: 3000+50xNms<br>3000 – 50 x Nms 0F (3000 ms) ≤ N ≤ 0F (3700 ms) |

| <b>G3 Switch 0F [SP No. 1-105-016]</b> |   |  |
|--|---|--|
| <b>No</b>                              | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0                                      | Alarm when an error occurred in Phase C or later<br>0: Disabled<br>1: Enabled               | If the customer wants to hear an alarm after each error communication, change this bit to “1”.                             |
| 1                                      | Alarm when the handset is off-hook at the end of communication<br>0: Disabled<br>1: Enabled | If the customer wants to hear an alarm if the handset is off-hook at the end of fax communication, change this bit to “1”. |
| 2                                      | <b>Not used</b>   | Do not change the settings.  |
| 4                                      | Sidaa manual calibration setting<br>0: Off<br>1: On   | 1: manually calibrates for communication with a line, whose current change occurs such as an optical fiber line.           |
| 5-7                                    | <b>Not used</b>   | Do not change the settings.  |

### 4.3.6 G3-2/3 SWITCHES

These switches require an optional G3 interface unit.

G3-3 switches are the same as for G3-2 switches.

| <b>G3-2 Switch 00 [SP No. 1-106-001]</b> |   |  |
|--|---|--|
| <b>No</b>                                | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0-1                                      | Monitor speaker during communication (tx and rx)<br>Bit 1: 0, Bit 0: 0 = Disabled<br>Bit 1: 0, Bit 0: 1 = Up to Phase B<br>Bit 1: 1, Bit 0: 0 = All the time<br>Bit 1: 1, Bit 0: 1 = Not used | (0, 0): The monitor speaker is disabled all through the communication.<br>(0, 1): The monitor speaker is on up to phase B in the T.30 protocol.<br>(1, 0): Used for testing. The monitor speaker is on all through the communication. Make sure that you reset these bits after testing. |
| 2  | Monitor speaker during  | 1: The monitor speaker is enabled during memory  |


|     |   |                             |
|-----|---|-----------------------------|
|     | memory transmission<br>0: Disabled 1: Enabled | transmission.               |
| 3-6 | <b>Not used</b>                               | Do not change the settings. |

| <b>G3-2 Switch 01 [SP No. 1-106-002]</b> |   |   |
|--|---|---|
| <b>No</b>                                | <b>FUNCTION</b>                                     | <b>COMMENTS</b>   |
| 0-3                                      | <b>Not used</b>                                     | Do not change the settings.   |
| 4  | DIS frame length<br>0: 10 bytes, 1: 4 bytes         | 1: The bytes in the DIS frame after the 4th byte will not be transmitted (set to 1 if there are communication problems with PC-based faxes which cannot receive the extended DIS frames). |
| 5  | <b>Not used</b>                                     | Do not change the setting.  |
| 6  | CED/ANSam transmission<br>0: Disabled<br>1: Enabled | Do not change this setting, unless the communication problem is caused by the CED/ANSam transmission.   |
| 7  | <b>Not used</b>                                     | Do not change the setting.  |

| <b>G3-2 Switch 02 [SP No. 1-106-003]</b> |   |  |
|--|---|--|
| <b>No</b>                                | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0  | G3 protocol mode used<br>0: Standard and non-standard<br>1: Standard only                       | Change this bit to 1 only when the other end can only communicate with machines that send T.30-standard frames only.<br>1: Disables NSF/NSS signals (these are used in non-standard mode communication)  |
| 1-4                                      | <b>Not used</b>   | Do not change the settings.  |
| 5  | Use of modem rate history for transmission using Quick/Speed Dials<br>0: Disabled<br>1: Enabled | 0: Communications using Quick/Speed Dials always start from the highest modem rate.<br>1: The machine refers to the modem rate history for communications with the same machine when determining the most suitable rate for the current communication. |
| 6  | <b>Not used</b>   | Do not change the settings.  |
| 7  | Short preamble<br>0: Disabled, 1: Enabled   | Refer to Appendix B in the Group 3 Facsimile Manual for details about Short Preamble.  |

| <b>G3-2 Switch 03 [SP No. 1-106-004]</b> |                 |                 |
|--|-----------------|-----------------|
| <b>No</b>                                | <b>FUNCTION</b> | <b>COMMENTS</b> |

Bit Switches

|   |  |   |
|---|--|---|
| 0 | DIS detection number<br>(Echo countermeasure)<br>0: 1<br>1: 2  | 0: The machine will hang up if it receives the same DIS frame twice.<br>1: Before sending DCS, the machine will wait for the second DIS which is caused by echo on the line.  |
| 1 | <b>Not used</b>  | Do not change the settings.   |
| 2 | V.8 protocol<br>0: Disabled<br>1: Enabled  | 0: V.8/V.34 communications will not be possible.<br> Note<br><ul style="list-style-type: none"> <li>Do not set to 0 unless the line condition is always bad enough to slow down the data rate to 14.4 kbps or lower.</li> </ul>  |
| 3 | ECM frame size<br>0: 256 bytes<br>1: 64 bytes  | Keep this bit at "0" in most cases.   |
| 4 | CTC transmission conditions<br>0: After one PPR signal received<br>1: After four PPR signals received (ITU-T standard) | 0: When using ECM in non-standard (NSF/NSS) mode, the machine sends a CTC to drop back the modem rate after receiving a PPR, if the following condition is met in communications at 14.4, 12.0, 9.6, and 7.2 kbps.<br>$\sqrt{N_{\text{Transmit}} \leq N_{\text{Resend}}}$ <p><math>N_{\text{Transmit}}</math>- Number of transmitted frames<br/> <math>N_{\text{Resend}}</math>- Number of frames to be retransmitted</p> 1: When using ECM, the machine sends a CTC to drop back the modem rate after receiving four PPRs.<br><br>PPR, CTC: These are ECM protocol signals.<br>This bit is not effective in V.34 communications. |
| 5 | Modem rate used for the next page after receiving a negative code (RTN or PIN)<br>0: No change, 1: Fallback            | 1: The machine's tx modem rate will fall back before sending the next page if a negative code is received. This bit is ignored if ECM is being used.  |
| 6 | <b>Not used</b>  | Do not change the settings.   |
| 7 | <b>Not used</b>  | Do not change the settings.   |

| G3-2 Switch 04 [SP No. 1-106-005] |                                    |  |
|-----------------------------------|------------------------------------|--|
| No                                | FUNCTION                           | COMMENTS   |
| 0-3                               | Training error detection threshold | 0 - F (Hex); 0 - 15 bits<br>If the number of error bits in the received TCF is below this threshold, the machine informs the sender that training has succeeded. |
| 4-7                               | <b>Not used</b>                    | Do not change the settings.  |

| G3-2 Switch 05 [SP No. 1-106-006] |   |       |       |       |       |   |
|-----------------------------------|---|-------|-------|-------|-------|---|
| No                                | FUNCTION  |       |       |       |       | COMMENTS  |
| 0-3                               | Initial Tx modem rate   |       |       |       |       | <p>These bits set the initial starting modem rate for transmission.</p> <p>Use the dedicated transmission parameters if you need to change this for specific receivers. If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually.</p> <p><b>Cross reference</b><br/>V.8 protocol on/off - G3 switch 03, bit2</p> |
|                                   | Bit 3   | Bit 2 | Bit 1 | Bit 0 | bps   |   |
|                                   | 0   | 0     | 0     | 1     | 2.4k  |   |
|                                   | 0   | 0     | 1     | 0     | 4.8k  |   |
|                                   | 0   | 0     | 1     | 1     | 7.2k  |   |
|                                   | 0   | 1     | 0     | 0     | 9.6k  |   |
|                                   | 0   | 1     | 0     | 1     | 12.0k |   |
|                                   | 0   | 1     | 1     | 0     | 14.4k |   |
|                                   | 0   | 1     | 1     | 1     | 16.8k |   |
|                                   | 1   | 0     | 0     | 0     | 19.2k |   |
|                                   | 1   | 0     | 0     | 1     | 21.6k |   |
|                                   | 1   | 0     | 1     | 0     | 24.0k |   |
|                                   | 1   | 0     | 1     | 1     | 26.4k |   |
|                                   | 1   | 1     | 0     | 0     | 28.8k |   |
|                                   | 1   | 1     | 0     | 1     | 31.2k |   |
| 1                                 | 1   | 1     | 0     | 33.6k |       |   |
|                                   | Other settings - <b>Not used</b>  |       |       |       |       |   |
| 4-5                               | <p>Initial modem type for 9.6 k or 7.2 kbps.</p> <p>Bit 5: 0, Bit 4: 0 = V.29</p> <p>Bit 5: 0, Bit 4: 1 = V.17</p> <p>Bit 5: 1, Bit 4: 0 = V.34</p> <p>Bit 5: 1, Bit 4: 1 = <b>Not used</b></p> |       |       |       |       | <p>These bits set the initial modem type for 9.6 and 7.2 kbps, if the initial modem rate is set at these speeds.</p>  |
| 6-7                               | <b>Not used</b>   |       |       |       |       | Do not change the settings.   |

Bit Switches

| G3-2 Switch 06 [SP No. 1-106-007] |                                     |       |       |       |   |                               |
|-----------------------------------|-------------------------------------|-------|-------|-------|---|-------------------------------|
| No                                | FUNCTION                            |       |       |       | COMMENTS  |                               |
| 0-3                               | Initial Rx modem rate               |       |       |       | <ul style="list-style-type: none"> <li>▪ These bits set the initial starting modem rate for reception.</li> <li>▪ Use a lower setting if high speeds pose problems during reception.</li> <li>▪ If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually.</li> </ul> <p><b>Cross reference:</b><br/>V.8 protocol on/off - G3 switch 03, bit2</p> |                               |
|                                   | Bit 3                               | Bit 2 | Bit 1 | Bit 0 |   | bps                           |
|                                   | 0                                   | 0     | 0     | 1     |   | 2.4k                          |
|                                   | 0                                   | 0     | 1     | 0     |   | 4.8k                          |
|                                   | 0                                   | 0     | 1     | 1     |   | 7.2k                          |
|                                   | 0                                   | 1     | 0     | 0     |   | 9.6k                          |
|                                   | 0                                   | 1     | 0     | 1     |   | 12.0k                         |
|                                   | 0                                   | 1     | 1     | 0     |   | 14.4k                         |
|                                   | 0                                   | 1     | 1     | 1     |   | 16.8k                         |
|                                   | 1                                   | 0     | 0     | 0     |   | 19.2k                         |
|                                   | 1                                   | 0     | 0     | 1     |   | 21.6k                         |
|                                   | 1                                   | 0     | 1     | 0     |   | 24.0k                         |
|                                   | 1                                   | 0     | 1     | 1     |   | 26.4k                         |
|                                   | 1                                   | 1     | 0     | 0     |   | 28.8k                         |
|                                   | 1                                   | 1     | 0     | 1     |   | 31.2k                         |
| 1                                 | 1                                   | 1     | 0     | 33.6k |   |                               |
| Other settings - <b>Not used</b>  |                                     |       |       |       |   |                               |
| 4-7                               | Modem types available for reception |       |       |       | <ul style="list-style-type: none"> <li>▪ The setting of these bits is used to inform the transmitting terminal of the available modem type for the machine in receive mode.</li> <li>▪ If V.34 is not selected, V.8 protocol must be disabled manually.</li> </ul> <p><b>Cross reference:</b><br/>V.8 protocol on/off - G3 switch 03, bit2</p>                                    |                               |
|                                   | Bit 7                               | Bit 6 | Bit 5 | Bit 4 |   | Setting                       |
|                                   | 0                                   | 0     | 0     | 1     |   | V.27ter                       |
|                                   | 0                                   | 0     | 1     | 0     |   | V.27ter,V.29                  |
|                                   | 0                                   | 0     | 1     | 1     |   | V.27ter, V.29, V.33           |
|                                   | 0                                   | 1     | 0     | 0     |   | V.27ter, V.29, V.17/V.33      |
|                                   | 0                                   | 1     | 0     | 1     |   | V.27ter, V.29, V.17/V33, V.34 |
| Other settings - <b>Not used</b>  |                                     |       |       |       |   |                               |



| G3-2 Switch 07 [SP No. 1-106-008] |  |   |
|-----------------------------------|--|---|
| No                                | FUNCTION   | COMMENTS  |
| 0-1                               | PSTN cable equalizer<br>(tx mode: Internal)<br>Bit 1: 0, Bit 0: 0 = None<br>Bit 1: 0, Bit 0: 1 = Low<br>Bit 1: 1, Bit 0: 0 = Medium<br>Bit 1: 1, Bit 0: 1 = High | Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.<br>Use the dedicated transmission parameters for specific receivers.<br>Also, try using the cable equalizer if one or more of the following symptoms occurs.<br>Communication error<br>Modem rate fallback occurs frequently.<br><a href="#">Note</a><br><ul style="list-style-type: none"> <li>This setting is not effective in V.34 communications.</li> </ul> |
| 2-3                               | PSTN cable equalizer<br>(rx mode: Internal)<br>Bit 3: 0, Bit 2: 0 = None<br>Bit 3: 0, Bit 2: 1 = Low<br>Bit 3: 1, Bit 2: 0 = Medium<br>Bit 3: 1, Bit 2: 1 = High | Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.<br>Also, try using the cable equalizer if one or more of the following symptoms occurs.<br>Communication error with error codes such as 0-20, 0-23, etc.<br>Modem rate fallback occurs frequently.<br><a href="#">Note</a><br><ul style="list-style-type: none"> <li>This setting is not effective in V.34 communications.</li> </ul>                            |
| 4                                 | PSTN cable equalizer<br>(V.8/V.17 rx mode: External)<br>0: Disabled<br>1: Enabled  | Keep this bit at "1".   |
| 5                                 | <b>Not used</b>  | Do not change the settings.   |
| 6                                 | Parameter selection for dial tone detection<br>0: Normal parameter<br>1: Specific parameter  | 0: This uses the fixed table in the ROM for dial tone detection.<br>1: This uses the specific parameter adjusted with SRAM (69ECBEH - 69ECDEH). Select this if the dial tone cannot be detected when the "Normal parameter: 0" is selected.   |
| 7                                 | <b>Not used</b>  | Do not change the settings.   |

**G3-2 Switch 08 - Not used** (do not change the settings)

**G3-2 Switch 09 - Not used** (do not change the settings)

Bit Switches

| <b>G3-2 Switch 0A [SP No. 1-106-011]</b> |   |  |
|--|---|--|
| <b>No</b>                                | <b>FUNCTION</b>   | <b>COMMENTS</b>  |
| 0-1                                      | Maximum allowable carrier drop during image data reception<br>Bit 1: 0, Bit 0: 0 = 200 (ms)<br>Bit 1: 0, Bit 0: 1 = 400 (ms)<br>Bit 1: 1, Bit 0: 0 = 800 (ms)<br>Bit 1: 1, Bit 0: 1 = <b>Not used</b> | These bits set the acceptable modem carrier drop time.<br>Try using a longer setting if error code 0-22 is frequent.   |
| 2  | Select cancellation of high-speed RX if carrier signal lost while receiving<br>0: Off<br>1: On  | This switch setting determines if high-speed receiving ends if the carrier signal is lost when receiving during non-ECM mode   |
| 3  | <b>Not used</b>   | Do not change the settings   |
| 4  | Maximum allowable frame interval during image data reception.<br>0: 5 s 1: 13 s   | This bit set the maximum interval between EOL (end-of-line) signals and the maximum interval between ECM frames from the other end.<br>Try using a longer setting if error code 0-21 is frequent.  |
| 5  | <b>Not used</b>   | Do not change the settings.  |
| 6  | Reconstruction time for the first line in receive mode<br>0: 6 s 1: 12 s  | When the sending terminal is controlled by a computer, there may be a delay in receiving page data after the local machine accepts set-up data and sends CFR. This is outside the T.30 recommendation. But, if this delay occurs, set this bit to 1 to give the sending machine more time to send data.<br>Refer to error code 0-20.<br>ITU-T T.30 recommendation: The first line should come within 5 s of CFR. |
| 7  | <b>Not used</b>   | Do not change the settings.  |

|  |
|--|
| <b>G3-2 Switch 0B - Not used</b> (do not change the settings.) |
| <b>G3-2 Switch 0C - Not used</b> (do not change the settings.) |
| <b>G3-2 Switch 0D - Not used</b> (do not change the settings.) |
| <b>G3-2 Switch 0E - Not used</b> (do not change the settings.) |
| <b>G3-2 Switch 0F - Not used</b> (do not change the settings.) |

## 4.3.7 IP FAX SWITCHES

| IP Fax Switch 00 [SP No. 1-111-001] |  |   |
|-------------------------------------|--|---|
| No.                                 | FUNCTION   | COMMENTS  |
| 0                                   | <b>Not used</b>  | Do not change this setting.   |
| 1                                   | IP Fax Transport<br>0: TCP, 1: UDP   | Selects TCP or UDP protocol for IP-Fax  |
| 2                                   | IP Fax single port selection<br>0: OFF, 1: ON (enable)                               | Selects single data port.   |
| 3                                   | IP Fax double ports (single data port) selection<br>0: OFF, 1: ON (enable)           | Selects whether IP-Fax uses a double port.  |
| 4                                   | IP Fax Gatekeeper<br>0: OFF, 1: ON (enable)  | Enables/disables the communication via the gatekeeper for IP-Fax.   |
| 5                                   | IP Fax T30 bit signal reverse<br>0: LSB first, 1: MSB first                          | Reverses the T30 bit signal.  |
| 6                                   | IP Fax max bit rate setting<br>0: Not affected, 1: Affected                          | When "0" is selected, the max bit rate does not affect the value of the DIS/DCS.<br>When "1" is selected, the max bit rate affects the value of the DIS/DCS.  |
| 7                                   | IP Fax received telephone number confirmation<br>0: No confirmation, 1: Confirmation | When "0" is selected, fax data is received without checking the telephone number.<br>When "1" is selected, fax data is received only when confirming that the telephone number from the sender matches the registered telephone number in this machine. If this confirmation fails, the line is disconnected. |

| IP-Fax Switch 01 |                           |      |      |      |         |   |
|------------------|---------------------------|------|------|------|---------|---|
| No.              | FUNCTION                  |      |      |      |         | COMMENTS  |
| 0-3              | Select IP FAX Delay Level |      |      |      |         | Raise the level by selecting a higher setting if too many transmission errors are occurring on the network.<br>If TCP/UDP is enabled on the network, raise this setting on the T.30 machine. Increasing the delay time allows the recovery of more lost packets.<br>If only UDP is enabled, increase the number of redundant packets.<br>Level 1~2: 3 Redundant packets<br>Level 3: 4 Redundant packets |
|                  | Bit3                      | Bit2 | Bit1 | Bit0 | Setting |   |
|                  | 0                         | 0    | 0    | 0    | Level 0 |   |
|                  | 0                         | 0    | 0    | 1    | Level 1 |   |
|                  | 0                         | 0    | 1    | 0    | Level 2 |   |
|                  | 0                         | 0    | 1    | 1    | Level 3 |   |
|                  |                           |      |      |      |         |   |

## Bit Switches

|     |                                   |   |
|-----|-----------------------------------|---|
| 4-7 | IP Fax preamble wait time setting | <p>Selects the preamble wait time.<br/>[00 to 0f]<br/>There are 16 values in this 4-bit binary switch combination.<br/>Waiting time: set value level x 100 ms<br/>Max: 0f (1500 ms) Min: 00 (No wait time)<br/>The default is "0000" (00H).</p> |
|-----|-----------------------------------|---|

| IP Fax Switch 02 [SP No. 1-111-003] |  |   |
|-------------------------------------|--|---|
| No.                                 | FUNCTION   | COMMENTS  |
| 0                                   | IP Fax bit signal reverse setting<br>0: Maker code setting<br>1: Internal bit switch setting     | When "0" is selected, the bit signal reverse method is decided by the maker code. When "1" is selected, the bit signal reverse method is decided by the internal bit switch. When communicating between IP Fax devices, LSB first is selected.) |
| 1                                   | IP Fax transmission speed setting<br>0: Modem speed<br>1: No limitation                          | Selects the transmit speed for IP Fax communication.  |
| 2                                   | SIP transport setting<br>0: TCP<br>1: UDP  | This bit switch sets the transport that has priority for receiving IP Fax data. This function is activated only when the sender has both TCP and UDP.   |
| 3                                   | CCM connection<br>0: No CCM connection<br>1: CCM connection                                      | When "1" is selected, only the connection call message with H.323 or no tunneled H.245 is transmitted via CCM.  |
| 4                                   | Message reception selection from non-registered SIP server<br>0: Answer<br>1: Not answer         | 0: This answers the INVITE message from the SIP server not registered for the machine.<br>1: This does not receive the INVITE message from the SIP server not registered for the machine and send a refusal message.                            |
| 5                                   | ECM communication setting<br>0: No limit for image compression<br>1: Limit for image compression | 0: This does not limit the type of the image compression with ECM communication.<br>1: When the other end machine is Cisco, this permits the image compression other than JBIG or MMR with ECM communication.                                   |
| 6-7                                 | <b>Not used</b>  | Do not change these settings.   |

| IP Fax Switch 03 [SP No. 1-111-004] |   |  |
|-------------------------------------|---|--|
| No.                                 | FUNCTION  | COMMENTS   |
| 0                                   | Effective field limitation for G3 standard function information<br>0: OFF, 1: 4byte (DIS)       | Limits the effective field for standard G3 function information.   |
| 1                                   | Switching between G3 standard and G3 non standard<br>0: Enable switching<br>1: G3 standard only | Enables/disables switching between G3 standard and G3 non-standard.  |
| 2                                   | Not used.   | Do not change this setting.  |
| 3                                   | ECM frame size selection at transmitting<br>0: 256byte, 1: 64byte                               | Selects the ECM frame size for sending.  |
| 4                                   | DIS detection times for echo prevention<br>0: 1 time, 1: 2 times                                | Sets the number of times for DIS to detect echoes.   |
| 5                                   | CTC transmission selection<br>0: PPRx1<br>1: PPRx4  | When "0" is selected, the transmission condition is decided by error frame numbers. When "1" is selected, the transmission condition is based on the ITU-T method. |
| 6                                   | Shift down setting at receiving negative code<br>0: OFF, 1: ON                                  | Selects whether to shift down when negative codes are received.  |
| 7                                   | <b>Not used</b>   | Do not change this setting.  |

| IP Fax Switch 04 [SP No. 1-111-005] |                     |   |
|-------------------------------------|---------------------|---|
| No.                                 | FUNCTION            | COMMENTS  |
| 0                                   | TCF error threshold | Sets the TCF error threshold level.<br>[00 to 0f]<br>The default is "1111" (0fH). |
| 1                                   |                     |   |
| 2                                   |                     |   |
| 3                                   |                     |   |
| 4-7                                 | <b>Not used</b>     | Do not change these settings.   |

| IP Fax Switch 05 [SP No. 1-111-006] |   |          |
|-------------------------------------|---|----------|
| No.                                 | FUNCTION  | COMMENTS |
| 0-3                                 | Modem bit rate setting for transmission<br>Sets the modem bit rate for transmission. The default is "0110" (14.4K bps). |          |

Bit Switches

|     | Bit 3  | Bit 2 | Bit 1                         | Bit 0 |           |
|-----|--|-------|-------------------------------|-------|-----------|
|     | 0  | 0     | 0                             | 1     | 2400 bps  |
|     | 0  | 0     | 1                             | 1     | 4800 bps  |
|     | 0  | 0     | 1                             | 1     | 7200 bps  |
|     | 0  | 1     | 0                             | 0     | 9600 bps  |
|     | 0  | 1     | 0                             | 1     | 12.0 Kbps |
|     | 0  | 1     | 1                             | 0     | 14.4 Kbps |
|     | 0  | 1     | 1                             | 1     | 16.8 Kbps |
|     | 1  | 0     | 0                             | 0     | 19.2 Kbps |
|     | 1  | 0     | 0                             | 1     | 21.6 Kbps |
|     | 1  | 0     | 1                             | 0     | 24.0 Kbps |
|     | 1  | 0     | 1                             | 1     | 26.4 Kbps |
|     | 1  | 1     | 0                             | 0     | 28.8 Kbps |
|     | 1  | 1     | 0                             | 1     | 31.2 Kbps |
|     | 1  | 1     | 1                             | 0     | 33.6 Kbps |
| 4-5 | Modem setting for transmission<br>Sets the modem for transmission.<br>The default is "00" (V29).<br>Bit 5: 0, Bit 4: 0 = V29<br>Bit 5: 0, Bit 4: 1 = V17<br>Bit 5: 1, Bit 4: 0 = V34*<br>Bit 5: 1, Bit 4: 1 = <b>Not used</b><br>*V34 is not supported for IP-Fax communication. |       |                               |       |           |
| 6-7 | <b>Not used</b>  |       | Do not change these settings. |       |           |

| IP Fax Switch 06 [SP No. 1-111-007] |   |       |       |          |          |
|-------------------------------------|---|-------|-------|----------|----------|
| No.                                 | FUNCTION  |       |       | COMMENTS |          |
| 0-3                                 | Modem bit rate setting for reception<br>Sets the modem bit rate for reception. The default is "0110" (14.4K bps). |       |       |          |          |
|                                     | Bit 3   | Bit 2 | Bit 1 | Bit 0    |          |
|                                     | 0   | 0     | 0     | 1        | 2400 bps |
|                                     | 0   | 0     | 1     | 0        | 4800 bps |
|                                     | 0   | 0     | 1     | 1        | 7200 bps |
|                                     | 0   | 1     | 0     | 0        | 9600 bps |

|   |   |       |       |       |                            |
|---|---|-------|-------|-------|----------------------------|
|   | 0   | 1     | 0     | 1     | 12.0 Kbps                  |
|   | 0   | 1     | 1     | 0     | 14.4 Kbps                  |
|   | 0   | 1     | 1     | 1     | 16.8 Kbps                  |
|   | 1   | 0     | 0     | 0     | 19.2 Kbps                  |
|   | 1   | 0     | 0     | 1     | 21.6 Kbps                  |
|   | 1   | 0     | 1     | 0     | 24.0 Kbps                  |
|   | 1   | 0     | 1     | 1     | 26.4 Kbps                  |
|   | 1   | 1     | 0     | 0     | 28.8 Kbps                  |
|   | 1   | 1     | 0     | 1     | 31.2 Kbps                  |
|   | 1   | 1     | 1     | 0     | 33.6 Kbps                  |
|   |   |       |       |       |                            |
| 4-7   | Modem setting for reception<br>Sets the modem type for reception. The default is "0100" (V27ter, V29, V17). |       |       |       |                            |
|   | Bit 7   | Bit 6 | Bit 5 | Bit 4 |                            |
|   | 0   | 0     | 0     | 1     | V27ter                     |
|   | 0   | 0     | 1     | 0     | V27ter, V29                |
|   | 0   | 0     | 1     | 1     | V27ter, V29, V33 (invalid) |
|   | 0   | 1     | 0     | 0     | V27ter, V29, V17           |
|   | 0   | 1     | 0     | 1     | V27ter, V29, V17, V34*     |
| *V34 is not supported for IP-Fax communication. |   |       |       |       |                            |

| IP Fax Switch 07 [SP No. 1-111-008] |  |   |
|-------------------------------------|--|---|
| No.                                 | FUNCTION   | COMMENTS  |
| 0                                   | TSI information<br>0: Not added, 1: Added                                    | Adds or does not add TSI information to NSS(S).           |
| 1                                   | DCN transmission setting at T1 timeout<br>0: Not transmitted, 1: Transmitted | Transmits or does not transmit DCN at T1 timeout.         |
| 2                                   | <b>Not used</b>  | Do not change this setting.                               |
| 3                                   | Hang up setting at DIS reception disabled<br>0: No hang up                   | Sets whether the machine disconnects after DIS reception. |

Bit Switches

|     |   |  |
|-----|---|--|
|     | 1: Hang up after transmitting DCN   |  |
| 4   | Number of times for training<br>0: 1 time, 1: 2 times                                       | Selects the number of times training is done at the same bit rate.                                     |
| 5   | Space CSI transmission setting at no CSI registration<br>0: Not transmitted, 1: Transmitted | When "0" is selected, frame data is enabled. When "1" is selected, the transmitted data is all spaces. |
| 6-7 | <b>Not used</b>   | Do not change these settings.  |

| IP Fax Switch 08 [SP No. 1-111-009] |   |  |
|-------------------------------------|---|--|
| No.                                 | FUNCTION  | COMMENTS   |
| 0-1                                 | T1 timer adjustment<br>Adjusts the T1 timer.<br>The default is "00" (35 seconds).<br>Bit 1: 0, Bit 0: 0 = 35 sec<br>Bit 1: 0, Bit 0: 1 = 40 sec<br>Bit 1: 1, Bit 0: 0 = 50 sec<br>Bit 1: 1, Bit 0: 1 = 60 sec | -  |
| 2-3                                 | T4 timer adjustment<br>Adjust the T4 timer.<br>The default is "00" (3 seconds).<br>Bit 3: 0, Bit 2: 0 = 3 sec<br>Bit 3: 0, Bit 2: 1 = 3.5 sec<br>Bit 3: 1, Bit 2: 0 = 4 sec<br>Bit 3: 1, Bit 2: 1 = 5 sec     | -  |
| 4-5                                 | T0 timer adjustment<br>Bit 5: 0, Bit 4: 0 = 75 sec<br>Bit 5: 0, Bit 4: 1 = 120 sec<br>Bit 5: 1, Bit 4: 0 = 180 sec<br>Bit 5: 1, Bit 4: 1 = 240 sec  | Adjusts the fail safe timer. This timer sets the interval between "setup" data transmission and T.38 phase decision. If your destination return is late on the network or G3 fax return is late, adjust the longer interval timer. The default is "00" (75 seconds). |
| 6-7                                 | <b>Not used</b>   | Do not change these settings.  |



## 4.4 NCU PARAMETERS

The following tables give the RAM addresses and the parameter calculation units that the machine uses for ringing signal detection and automatic dialing. The factory settings for each country are also given. Most of these must be changed by RAM read/write (SP2-102), but some can be changed using NCU Parameter programming (SP2-103, 104 and 105); if SP2-103, 104 and 105 can be used, this will be indicated in the Remarks column. The RAM is programmed in hex code unless (BCD) is included in the Unit column.

 **Note**

- The following addresses describe settings for the standard NCU.
- Change the fourth digit from “5” to “6” (e.g. 680500 to 680600) for the settings for the first optional G3 interface unit and from “5” to “7” (e.g. 680700) for the settings for the second optional G3 interface unit.

| Address  | Function  |                |            |                      |                |            |
|----------|---|----------------|------------|----------------------|----------------|------------|
| 680500   | Country/Area code for NCU parameters  |                |            |                      |                |            |
|          | Use the Hex value to program the country/area code directly into this address, or use the decimal value to program it using SP2-103-001 |                |            |                      |                |            |
|          | <b>Country /Area</b>  | <b>Decimal</b> | <b>Hex</b> | <b>Country /Area</b> | <b>Decimal</b> | <b>Hex</b> |
|          | France  | 00             | 00         | USA                  | 17             | 11         |
|          | Germany   | 01             | 01         | Asia                 | 18             | 12         |
|          | UK  | 02             | 02         | Hong Kong            | 20             | 14         |
|          | Italy   | 03             | 03         | South Africa         | 21             | 15         |
|          | Austria   | 04             | 04         | Australia            | 22             | 16         |
|          | Belgium   | 05             | 05         | New Zealand          | 26             | 17         |
|          | Denmark   | 06             | 06         | Singapore            | 24             | 18         |
|          | Finland   | 07             | 07         | Malaysia             | 25             | 19         |
|          | Ireland   | 08             | 08         | China                | 26             | 1A         |
|          | Norway  | 09             | 09         | Taiwan               | 27             | 1B         |
|          | Sweden  | 10             | 0A         | Korea                | 28             | 1C         |
|          | Switzerland   | 11             | 0B         | Turkey               | 32             | 20         |
| Portugal | 12  | 0C             | Greece     | 33                   | 21             |            |
| Holland  | 13  | 0D             | Hungary    | 34                   | 22             |            |

NCU Parameters

| Address | Function |    |    |        |    |    |
|---------|----------|----|----|--------|----|----|
|         | Spain    | 14 | 0E | Czech  | 35 | 23 |
|         | Israel   | 15 | 0F | Poland | 36 | 24 |

| Address | Function   | Unit     | Remarks  |
|---------|--|----------|--|
| 680501  | Line current detection time  | 20 ms    | Line current detection is disabled.<br>Line current is not detected if 680501 contains FF.                       |
| 680502  | Line current wait time   |          |  |
| 680503  | Line current drop detect time  |          |  |
| 680504  | PSTN dial tone frequency upper limit (high byte)                           | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.   |
| 680505  | PSTN dial tone frequency upper limit (low byte)                            |          |  |
| 680506  | PSTN dial tone frequency lower limit (high byte)                           | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.   |
| 680507  | PSTN dial tone frequency lower limit (low byte)                            |          |  |
| 680508  | PSTN dial tone detection time  | 20 ms    | If 680508 contains FF(H), the machine pauses for the pause time (address 68050D / 68050E).<br>Italy: See Note 2. |
| 680509  | PSTN dial tone reset time (LOW)  |          |  |
| 68050A  | PSTN dial tone reset time (HIGH)   |          |  |
| 68050B  | PSTN dial tone continuous tone time  |          |  |
| 68050C  | PSTN dial tone permissible drop time                                       |          |  |
| 68050D  | PSTN wait interval (LOW)   |          |  |
| 68050E  | PSTN wait interval (HIGH)  |          |  |
| 68050F  | PSTN ring-back tone detection time   | 20 ms    | Detection is disabled if this contains FF.   |
| 680510  | PSTN ring-back tone off detection time                                     | 20 ms    | -  |
| 680511  | PSTN detection time for silent period after ring-back tone detected (LOW)  | 20 ms    | -  |
| 680512  | PSTN detection time for silent period after ring-back tone detected (HIGH) | 20 ms    | -  |

| Address | Function  | Unit     | Remarks   |
|---------|---|----------|---|
| 680513  | PSTN busy tone frequency upper limit (high byte)                          | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.                    |
| 680514  | PSTN busy tone frequency upper limit (low byte)                           |          |   |
| 680515  | PSTN busy tone frequency lower limit (high byte)                          | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.                    |
| 680516  | PSTN busy tone frequency lower limit (low byte)                           |          |   |
| 680517  | PABX dial tone frequency upper limit (high byte)                          | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.                    |
| 680518  | PABX dial tone frequency upper limit (low byte)                           |          |   |
| 680519  | PABX dial tone frequency lower limit (high byte)                          | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.                    |
| 68051A  | PABX dial tone frequency lower limit (low byte)                           |          |   |
| 68051B  | PABX dial tone detection time   | 20 ms    | If 68051B contains FF, the machine pauses for the pause time (680520 / 680521). |
| 68051C  | PABX dial tone reset time (LOW)   |          |   |
| 68051D  | PABX dial tone reset time (HIGH)  |          |   |
| 68051E  | PABX dial tone continuous tone time                                       |          |   |
| 68051F  | PABX dial tone permissible drop time                                      |          |   |
| 680520  | PABX wait interval (LOW)  |          |   |
| 680521  | PABX wait interval (HIGH)   | -        |   |
| 680522  | PABX ringback tone detection time   | 20 ms    | If both addresses contain FF(H), tone detection is disabled.                    |
| 680523  | PABX ringback tone off detection time                                     | 20 ms    |   |
| 680524  | PABX detection time for silent period after ringback tone detected (LOW)  | 20 ms    | If both addresses contain FF(H), tone detection is disabled.                    |
| 680525  | PABX detection time for silent period after ringback tone detected (HIGH) | 20 ms    |   |
| 680526  | PABX busy tone frequency upper limit (high byte)                          | Hz (BCD) | If both addresses contain FF(H), tone   |

NCU Parameters

| Address | Function   | Unit     | Remarks   |
|---------|--|----------|---|
| 680527  | PABX busy tone frequency upper limit (low byte)  |          | detection is disabled.  |
| 680528  | PABX busy tone frequency lower limit (high byte)   | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.                    |
| 680529  | PABX busy tone frequency lower limit (low byte)  |          |   |
| 68052A  | Busy tone ON time: range 1   | 20 ms    |   |
| 68052B  | Busy tone OFF time: range 1  |          |   |
| 68052C  | Busy tone ON time: range 2   |          |   |
| 68052D  | Busy tone OFF time: range 2  |          |   |
| 68052E  | Busy tone ON time: range 3   | 20 ms    |   |
| 68052F  | Busy tone OFF time: range 3  |          |   |
| 680530  | Busy tone ON time: range 4   |          |   |
| 680531  | Busy tone OFF time: range 4  |          |   |
| 680532  | Busy tone continuous tone detection time   |          |   |
| 680533  | <p>Busy tone signal state time tolerance for all ranges, and number of cycles required for detection (a setting of 4 cycles means that ON-OFF-ON or OFF-ON-OFF must be detected twice).</p> <p>Tolerance (<math>\pm</math>)</p> <p>Bit 1: 0, Bit 0: 0 = 75% Bits 2 and 3 must always be kept at 0.</p> <p>Bit 1: 0, Bit 0: 0 = 50% Bits 2 and 3 must always be kept at 0.</p> <p>Bit 1: 0, Bit 0: 0 = 25%</p> <p>Bit 1: 0, Bit 0: 0 = 12.5%</p> <p>Bits 7, 6, 5, 4 - number of cycles required for cadence detection</p> |          |   |
| 680534  | International dial tone frequency upper limit (high byte)  | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.                    |
| 680535  | International dial tone frequency upper limit (low byte)   |          |   |
| 680536  | International dial tone frequency lower limit (high byte)  | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.                    |
| 680537  | International dial tone frequency lower limit (low byte)   |          |   |
| 680538  | International dial tone detection time   | 20 ms    | If 680538 contains FF, the machine pauses for the pause time (68053D / 68053E). |
| 680539  | International dial tone reset time (LOW)   |          |   |

| Address | Function   | Unit     | Remarks   |
|---------|--|----------|---|
| 68053A  | International dial tone reset time (HIGH)                              |          | Belgium: See Note 2.  |
| 68053B  | International dial tone continuous tone time                           |          |   |
| 68053C  | International dial tone permissible drop time                          |          |   |
| 68053D  | International dial wait interval (LOW)                                 |          |   |
| 68053E  | International dial wait interval (HIGH)                                |          |   |
| 68053F  | Country dial tone upper frequency limit (HIGH)                         | Hz (BCD) | If both addresses contain FF(H), tone detection is disabled.                    |
| 680540  | Country dial tone upper frequency limit (LOW)                          |          |   |
| 680541  | Country dial tone lower frequency limit (HIGH)                         |          |   |
| 680542  | Country dial tone lower frequency limit (LOW)                          |          |   |
| 680543  | Country dial tone detection time                                       | 20 ms    | If 680543 contains FF, the machine pauses for the pause time (680548 / 680549). |
| 680544  | Country dial tone reset time (LOW)                                     |          |   |
| 680545  | Country dial tone reset time (HIGH)                                    |          |   |
| 680546  | Country dial tone continuous tone time                                 | -        | -   |
| 680547  | Country dial tone permissible drop time                                | 20 ms    | -   |
| 680548  | Country dial wait interval (LOW)                                       |          |   |
| 680549  | Country dial wait interval (HIGH)                                      |          |   |
| 68054A  | Time between opening or closing the DO relay and opening the OHD relay | 1 ms     | See Notes 3, 6 and 8. SP2-103-012 (parameter 11).                               |
| 68054B  | Break time for pulse dialing   | 1 ms     | See Note 3. SP2-103-013 (parameter 12).   |
| 68054C  | Make time for pulse dialing  | 1 ms     | See Note 3. SP2-103-014 (parameter 13).   |

NCU Parameters

| Address | Function   | Unit               | Remarks  |
|---------|--|--------------------|--|
| 68054D  | Time between final OHDI relay closure and DO relay opening or closing                                | 1 ms               | See Notes 3, 6 and 8. SP2-103-015 (parameter 14). This parameter is only valid in Europe.  |
| 68054E  | Minimum pause between dialed digits (pulse dial mode)  | 20 ms              | See Note 3 and 8. SP2-103-016 (parameter 15).  |
| 68054F  | Time waited when a pause is entered at the operation panel   |                    | SP2-103-017 (parameter 16). See Note 3.  |
| 680550  | DTMF tone on time  | 1 ms               | SP2-103-018 (parameter 17).  |
| 680551  | DTMF tone off time   |                    | SP2-103-019 (parameter 18).  |
| 680552  | Tone attenuation level of DTMF signals while dialing   | -N x 0.5 – 3.5 dBm | SP2-103-020 (parameter 19). See Note 5.  |
| 680553  | Tone attenuation value difference between high frequency tone and low frequency tone in DTMF signals | -dBm x 0.5         | SP2-103-021 (parameter 20). The setting must be less than -5dBm, and should not exceed the setting at 680552h above. See Note 5. |
| 680554  | PSTN: DTMF tone attenuation level after dialling   | -N x 0.5 – 3.5 dBm | SP2-103-022 (parameter 21). See Note 5.  |
| 680555  | ISDN: DTMF tone attenuation level after dialling   | -dBm x 0.5         | See Note 5   |
| 680556  | Not used   | -                  | Do not change the settings.  |
| 680557  | Time between 68054Dh (NCU parameter 14) and 68054Eh (NCU parameter 15)                               | 1 ms               | This parameter takes effect when the country code is set to France.  |
| 680558  | Not used   | -                  | Do not change the setting.   |
| 680559  | Grounding time (ground start mode)   | 20 ms              | The Gs relay is closed for this interval.  |
| 68055A  | Break time (flash start mode)  | 1 ms               | The OHDI relay is open for this interval.  |

| Address                | Function  | Unit  | Remarks  |
|------------------------|---|---|--|
| 68055B                 | International dial access code (High)                             | BCD   | For a code of 100:<br>68055B - F1<br>68055C - 00   |
| 68055C                 | International dial access code (Low)                              |   |  |
| 68055D                 | PSTN access pause time  | 20 ms   | This time is waited for each pause input after the PSTN access code. If this address contains FF[H], the pause time stored in address 68054F is used. Do not set a number more than 7 in the UK. |
| 68055E                 | Progress tone detection level, and cadence detection enable flags | Bit 7: 0, Bit 6: 0, Bit 5: 0 = -25.0 dBm<br>Bit 7: 0, Bit 6: 0, Bit 5: 1 = -35.0 dBm<br>Bit 7: 0, Bit 6: 1, Bit 5: 0 = -30.0 dBm<br>Bit 7: 1, Bit 6: 0, Bit 5: 0 = -40.0 dBm<br>Bit 7: 1, Bit 6: 1, Bit 5: 0 = -49.0 dBm<br>Bits 2, 0 - See Note 2. |  |
| 68055F<br>To<br>680564 | <b>Not used</b>   | -   | Do not change the settings.  |
| 680565                 | Long distance call prefix (HIGH)                                  | BCD   | For a code of 0:<br>680565 – FF<br>680566 - FF   |
| 680566                 | Long distance call prefix (LOW)                                   | BCD   |  |
| 680567<br>to<br>680571 | <b>Not used</b>   | -   | Do not change the settings.  |
| 680572                 | Acceptable ringing signal frequency: range 1, upper limit         | 1000/ N (Hz).   | SP2-103-003 (parameter 02).  |
| 680573                 | Acceptable ringing signal frequency: range 1, lower limit         |   | SP2-103-004 (parameter 03).  |
| 680574                 | Acceptable ringing signal frequency: range 2, upper limit         |   | SP2-103-005 (parameter 04).  |
| 680575                 | Acceptable ringing signal frequency: range 2, lower limit         |   | SP2-103-006 (parameter 05).  |
| 680576                 | Number of rings until a call is detected                          | 1   | SP2-103-007 (parameter 06). The setting must not be zero.  |
| 680577                 | Minimum required length of the first ring                         | 20 ms   | See Note 4.<br>SP2-103-008   |

NCU Parameters

| Address          | Function   | Unit          | Remarks  |
|------------------|--|---------------|--|
|                  |  |               | (parameter 07).  |
| 680578           | Minimum required length of the second and subsequent rings   | 20 ms         | SP2-103-009 (parameter 08).                                  |
| 680579           | Ringling signal detection reset time (LOW)   | 20 ms         | SP2-103-010 (parameter 09).                                  |
| 68057A           | Ringling signal detection reset time (HIGH)  |               | SP2-103-011 (parameter 10).                                  |
| 68057B to 680580 | <b>Not used</b>  | -             | Do not change the settings.                                  |
| 680581           | Interval between dialing the last digit and switching the Oh relay over to the external telephone when dialing from the operation panel in handset mode.   | 20 ms         | Factory setting: 500 ms                                      |
| 680582           | Bits 0 and 1 - Handset off-hook detection time<br>Bit 1:0, Bit 0: 0 = 200 ms<br>Bit 1:0, Bit 0: 1 = 800 ms<br>Other Not used<br>Bits 2 and 3 - Handset on-hook detection time<br>Bit 3: 0, Bit 2: 0 = 200 ms<br>Bit 3: 0, Bit 2: 1 = 800 ms<br>Other Not used<br>Bits 4 to 7 - <b>Not used</b> |               | -  |
| 680583 To 6805A0 | <b>Not used</b>  | -             | Do not change the settings.                                  |
| 6805A1           | Acceptable CED detection frequency upper limit (high byte)   | BCD (Hz)      | If both addresses contain FF(H), tone detection is disabled. |
| 6805A2           | Acceptable CED detection frequency upper limit (low byte)  |               |  |
| 6805A3           | Acceptable CED detection frequency lower limit (high byte)   | BCD (Hz)      | If both addresses contain FF(H), tone detection is disabled. |
| 6805A4           | Acceptable CED detection frequency lower limit (low byte)  |               |  |
| 6805A5           | CED detection time   | 20 ms ± 20 ms | Factory setting: 200 ms                                      |
| 6805A6           | Acceptable CNG detection frequency upper limit (high byte)   | BCD (Hz)      | If both addresses contain FF(H), tone detection is disabled. |
| 6805A7           | Acceptable CNG detection   |               |  |



| Address | Function  | Unit  | Remarks  |
|---------|---|---|--|
|         | frequency upper limit (low byte)  |   |  |
| 6805A8  | Acceptable CNG detection frequency lower limit (high byte)                            | BCD (Hz)  | If both addresses contain FF(H), tone detection is disabled. |
| 6805A9  | Acceptable CNG detection frequency lower limit (low byte)                             |   |  |
| 6805AA  | <b>Not used</b>   | -   | Do not change the setting.                                   |
| 6805AB  | CNG on time   | 20 ms   | Factory setting: 500 ms                                      |
| 6805AC  | CNG off time  | 20 ms   | Factory setting: 3000 ms                                     |
| 6805AD  | Number of CNG cycles required for detection   | -   | The data is coded in the same way as address 680533.         |
| 6805AE  | <b>Not used</b>   | -   | Do not change the settings.                                  |
| 6805AF  | Acceptable AI short protocol tone (800Hz) detection frequency upper limit (high byte) | Hz (BCD)  | If both addresses contain FF(H), tone detection is disabled. |
| 6805B0  | Acceptable AI short protocol tone (800Hz) detection frequency upper limit (low byte)  |   |  |
| 6805B1  | Acceptable AI short protocol tone (800Hz) detection frequency lower limit (high byte) | Hz(BCD)   | If both addresses contain FF(H), tone detection is disabled. |
| 6805B2  | Acceptable AI short protocol tone (800Hz) detection frequency lower limit (low byte)  |   |  |
| 6805B3  | Detection time for 800 Hz AI short protocol tone                                      | 20 ms   | Factory setting: 360 ms                                      |
| 6805B4  | PSTN: Tx level from the modem   | -N – 3 dBm  | SP2-103-002 (parameter 01).                                  |
| 6805B5  | PSTN: 1100 Hz tone transmission level   | - N 6805B4 - 0.5N 6805B5 –3.5 (dB)<br>See Note 7. |  |
| 6805B6  | PSTN: 2100 Hz tone transmission level   | - N6805B4 - 0.5N 6805B6 –3 (dB)<br>See Note 7.    |  |
| 6805B7  | PABX: Tx level from the modem   | - dBm   |  |
| 6805B8  | PABX: 1100 Hz tone transmission level   | - N 6805B7 - 0.5N 6805B8 (dB)                     |  |

NCU Parameters

| Address          | Function   | Unit                          | Remarks  |                              |           |                 |
|------------------|--|-------------------------------|--|------------------------------|-----------|-----------------|
| 6805B9           | PABX: 2100 Hz tone transmission level  | - N 6805B7 - 0.5N 6805B9 (dB) |  |                              |           |                 |
| 6805BD           | Modem turn-on level (incoming signal detection level)  | -37-0.5N (dBm)                |  |                              |           |                 |
| 6805BE to 6805C6 | <b>Not used</b>  | -                             | Do not change the settings.  |                              |           |                 |
| 6805C7           | Bits 0 to 3 – <b>Not used</b><br>Bit 4 = V.34 protocol dump 0: Simple, 1: Detailed (default)<br>Bits 5 to 7 – <b>Not used.</b> |                               |  |                              |           |                 |
| 6805C8 to 6805D9 | <b>Not used</b>  | -                             | Do not change the settings.  |                              |           |                 |
| 6805DA           | T.30 T1 timer  | 1 s                           |  |                              |           |                 |
| 6805E0 bit 3     | Maximum wait time for post message   | 0: 12 s<br>1: 30 s            | 1: Maximum wait time for post message (EOP/EOM/MPS) can be changed to 30 s. Change this bit to “1” if communication errors occur frequently during V.17 reception. |                              |           |                 |
| 6805E3           | Voltage setting to detect off-hook for voltage/DP detection for an externally connected line.                                  |                               | 0: Auto<br>1: Fixed V  | Do not change these settings |           |                 |
|                  | Here is a summary of the fixed voltage settings (1: Fixed) for an externally connected line.                                   |                               |  |                              |           |                 |
|                  | Bit 7  | Bit 6                         | Bit 5  |                              | Bit 4     | -               |
|                  | 0  | 0                             | 0  |                              | 0         | <b>Not used</b> |
|                  | 0  | 0                             | 0  |                              | 1         | 2.75 V          |
|                  | 0  | 0                             | 1  |                              | 0         | 5.5 V           |
|                  | 1  | 0                             | 0  |                              | 0         | 22 V            |
| 1                | 1  | 1                             | 1  | 41.25 V                      |           |                 |
| 6805E4           | Bit 1 sets the level of the call signal, Bit 3 sets the call signal impedance  | Bit 1                         | 0  | RT=0 (Low)                   | 0 : , 1 : |                 |
|                  |  |                               | 1  | RT=1 (High)                  |           |                 |
|                  |  | Bit 3                         | 0  | RZ=0 (High)                  |           |                 |
|                  |  |                               | 1  | RZ=1                         |           |                 |

| Address | Function   |       |       |         | Unit            | Remarks  |  |  |
|---------|--|-------|-------|---------|-----------------|----------|--|--|
|         |  |       |       |         | (Composite)     |          |  |  |
| 6805E5  | Bit 0 sets the ring detection method, Bit 1 sets the ring detection method when fixed. |       |       | Bit 0   | 0               | Auto     | If any setting is changed, select a setting that is higher than the default setting. |  |
|         |  |       |       |         | 1               | Fixed    |  |  |
|         |  |       |       | Bit 1   | 0               | Use RDTP |  |  |
|         |  |       |       |         | 1               | Use RDTN |  |  |
|         | Here is a summary of the voltages for the detection of off-hook for DP detection.      |       |       |         |                 |          |  |  |
|         | Bit 7  | Bit 6 | Bit 5 | Bit 4   | -               |          |  |  |
|         | 0  | 0     | 0     | 0       | <b>Not used</b> |          |  |  |
|         | 0  | 0     | 0     | 1       | 2.75 V          |          |  |  |
|         | 0  | 0     | 1     | 0       | 5.5 V           |          |  |  |
|         | 1  | 0     | 0     | 0       | 22 V            |          |  |  |
| 1       | 1  | 1     | 1     | 41.25 V |                 |          |  |  |

**NOTES**

- If a setting is not required, store FF in the address.
- Italy and Belgium only  
 RAM address 68055E: the lower four bits have the following meaning.  
 Bit 2 - 1: International dial tone cadence detection enabled (Belgium)  
 Bit 1 - Not used  
 Bit 0 - 1: PSTN dial tone cadence detection enabled (Italy)  
 If bit 0 or bit 2 is set to 1, the functions of the following RAM addresses are changed.  
 680508 (if bit 0 = 1) or 680538 (if bit 2 = 1): tolerance for on or off state duration (%), and number of cycles required for detection, coded as in address 680533.  
 68050B (if bit 0 = 1) or 68053B (if bit 2 = 1): on time, hex code (unit = 20 ms)  
 68050C (if bit 0 = 1) or 68053C (if bit 2 = 1): off time, hex code (unit = 20 ms)
- Pulse dial parameters (addresses 68054A to 68054F) are the values for 10 pps. If 20 pps is used, the machine automatically compensates.
- The first ring may not be detected until 1 to 2.5 wavelengths after the time specified by this parameter.
- The calculated level must be between 0 and 10.  
 The attenuation levels calculated from RAM data are:  
 High frequency tone:

## NCU Parameters

- $-0.5 \times N_{680552/680554} - 3.5$  dBm
- $-0.5 \times N_{680555}$  dBm

Low frequency tone:

- $-0.5 \times (N_{680552/680554} + N_{680553}) - 3.5$  dBm
- $-0.5 \times (N_{680555} + N_{680553})$  dBm

 Note

- $N_{680552}$ , for example, means the value stored in address 680552(H)
6. 68054A: Europe - Between Ds opening and Di opening, France - Between Ds closing and Di opening  
68054D: Europe - Between Ds closing and Di closing, France - Between Ds opening and Di closing
  7. Tone signals which frequency is lower than 1500Hz (e.g., 800Hz tone for AI short protocol) refer to the setting at 6805B5h. Tones which frequency is higher than 1500Hz refer to the setting at 6805B6h.
  8. 68054A, 68054D, 68054E: The actual inter-digit pause (pulse dial mode) is the sum of the period specified by the RAM addresses 68054A, 68054D, and 68054E.

## 4.5 DEDICATED TRANSMISSION PARAMETERS

There are two sets of transmission parameters: Fax and E-mail

Each Quick Dial Key and Speed Dial Code has eight bytes of programmable parameters allocated to it. If transmissions to a particular machine often experience problems, store that terminal's fax number as a Quick Dial or Speed Dial, and adjust the parameters allocated to that number.

The programming procedure will be explained first. Then, the eight bytes will be described.

### 4.5.1 PROGRAMMING PROCEDURE

1. Set the bit 0 of System Bit Switch 00 to 1.
2. Enter Address Book Management mode ([User Tools]> System Settings> Key Operator> Address Book Management).
3. Select the address book that you want to program.
4. For the fax parameter, select "Fax Dest.", for the E-mail parameter, select "E-mail", then press "Start". Make sure that the LED of the Start button lights green.
5. The settings for the switch 00 are now displayed. Press the bit number that you wish to change.
6. To scroll through the parameter switches, either:
7. Select the next switch: press "Next" or Select the previous switch: "Prev." until the correct switch is displayed. Then go back to step 6.
8. After the setting is changed, press "OK".
9. After finishing, reset bit 0 of System Bit Switch 00 to 0.

### 4.5.2 PARAMETERS

#### *Fax Parameters*

The initial settings of the following fax parameters are all FF(H) - all the parameters are disabled.

|  |
|--|
| <b>Switch 00</b>   |
| <b>FUNCTION AND COMMENTS</b>   |
| <p>ITU-T T1 time (for PSTN G3 mode)<br/>         If the connection time to a particular terminal is longer than the NCU parameter setting, adjust this byte. The T1 time is the value stored in this byte (in hex code), multiplied by 1 second.</p> <p><b>Range:</b><br/>         0 to 120 s (00h to 78h)<br/>         FFh - The local NCU parameter factory setting is used.</p> |

Dedicated Transmission Parameters

Do not program a value between 79h and FEh.


| <b>Switch 01</b> |   |      |      |      |      |   |          |
|------------------|---|------|------|------|------|---|----------|
| No               | FUNCTION  |      |      |      |      | COMMENTS  |          |
| 0-4              | Tx level  |      |      |      |      | If communication with a particular remote terminal often contains errors, the signal level may be inappropriate. Adjust the Tx level for communications with that terminal until the results are better.<br>If the setting is "Disabled", the NCU parameter 01 setting is used.<br><span style="background-color: #e0e0ff; padding: 2px;">↓ Note</span><br><ul style="list-style-type: none"> <li>▪ Do not use settings other than listed on the left.</li> </ul>   |          |
|                  | Bit4  | Bit3 | Bit2 | Bit1 | Bit0 |   |          |
|                  | 0   | 0    | 0    | 0    | 0    |   | 0        |
|                  | 0   | 0    | 0    | 0    | 1    |   | -1       |
|                  | 0   | 0    | 0    | 1    | 0    |   | -2       |
|                  | 0   | 0    | 0    | 1    | 1    |   | -3       |
|                  | 0   | 0    | 1    | 0    | 0    |   | -4       |
|                  | ↓   | ↓    | ↓    | ↓    | ↓    |   | ↓        |
|                  | 0   | 1    | 1    | 1    | 1    |   | -15      |
|                  | 1   | 1    | 1    | 1    | 1    |   | Disabled |
| 5-7              | Cable equalizer<br>Bit 7: 0, Bit 6: 0, Bit 5: 0 = None<br>Bit 7: 0, Bit 6: 0, Bit 5: 1 = Low<br>Bit 7: 0, Bit 6: 1, Bit 5: 0 = Medium<br>Bit 7: 0, Bit 6: 1, Bit 5: 1 = High<br>Bit 7: 1, Bit 6: 1, Bit 5: 1 = Disabled |      |      |      |      | Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange when calling the number stored in this Quick/Speed Dial.<br>Also, try using the cable equalizer if one or more of the following symptoms occurs.<br>Communication error with error codes such as 0-20, 0-23, etc.<br>Modem rate fallback occurs frequently.<br><span style="background-color: #e0e0ff; padding: 2px;">↓ Note</span><br><ul style="list-style-type: none"> <li>▪ Do not use settings other than listed on the left.</li> </ul> If the setting is "Disabled", the bit switch setting is used. |          |

| <b>Switch 02</b> |                       |      |      |      |     |  |
|------------------|-----------------------|------|------|------|-----|--|
| No               | FUNCTION              |      |      |      |     | COMMENTS   |
| 0-3              | Initial Tx modem rate |      |      |      |     | If training with a particular remote terminal always takes too long, the initial modem |
|                  | Bit3                  | Bit2 | Bit1 | Bit0 | bps |  |

|     |                                 |   |   |   |          |   |
|-----|---------------------------------|---|---|---|----------|---|
|     | 0                               | 0 | 0 | 0 | Not used | <p>rate may be too high. Reduce the initial Tx modem rate using these bits.<br/>For the settings 14.4 or kbps slower, Switch 04 bit 4 must be changed to 0.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>Do not use settings other than listed on the left. If the setting is "Disabled", the bit switch setting is used.</li> </ul> |
|     | 0                               | 0 | 0 | 1 | 2400     |   |
|     | 0                               | 0 | 1 | 0 | 4800     |   |
|     | 0                               | 0 | 1 | 1 | 7200     |   |
|     | 0                               | 1 | 0 | 0 | 9600     |   |
|     | 0                               | 1 | 0 | 1 | 12000    |   |
|     | 0                               | 1 | 1 | 0 | 14400    |   |
|     | 0                               | 1 | 1 | 1 | 16800    |   |
|     | 1                               | 0 | 0 | 0 | 19200    |   |
|     | 1                               | 0 | 0 | 1 | 21600    |   |
|     | 1                               | 0 | 1 | 0 | 24000    |   |
|     | 1                               | 0 | 1 | 1 | 26400    |   |
|     | 1                               | 1 | 0 | 0 | 28800    |   |
|     | 1                               | 1 | 0 | 1 | 31200    |   |
|     | 1                               | 1 | 1 | 0 | 33600    |   |
|     | 1                               | 1 | 1 | 1 | Disabled |   |
|     | Other settings: <b>Not used</b> |   |   |   |          |   |
| 4-7 | <b>Not used</b>                 |   |   |   |          | Do not change the settings.   |

| Switch 03 |   |  |
|-----------|---|--|
| No        | FUNCTION  | COMMENTS   |
| 0-1       | Inch-mm conversion before tx<br>Bit 1: 0, Bit 0: 0 = Inch-mm conversion available<br>Bit 1: 0, Bit 0: 1 = Inch only<br>Bit 1: 1, Bit 0: 0 = Not used<br>Bit 1: 1, Bit 0: 1 = Disabled | The machine uses inch-based resolutions for scanning. If "inch only" is selected, the printed copy may be slightly distorted at the other end if that machine uses mm-based resolutions.<br>If the setting is "Disabled", the bit switch setting is used.              |
| 2-3       | DIS/NSF detection method<br>Bit 3: 0, Bit 2: 0 = First DIS or NSF<br>Bit 3: 0, Bit 2: 1 = Second DIS or NSF<br>Bit 3: 1, Bit 2: 0 = Not used<br>Bit 3: 1, Bit 2: 1 = Disabled         | (0, 1): Use this setting if echoes on the line are interfering with the set-up protocol at the start of transmission. The machine will then wait for the second DIS or NSF before sending DCS or NSS.<br>If the setting is "Disabled", the bit switch setting is used. |

## Dedicated Transmission Parameters

|     |  |  |
|-----|--|--|
| 4   | V.8 protocol<br>0: Off<br>1: Disabled  | If transmissions to a specific destination always end at a lower modem rate (14,400 bps or lower), disable V.8 protocol so as not to use V.34 protocol.<br>0: V.34 communication will not be possible.<br>If the setting is "Disabled", the bit switch setting is used.  |
| 5   | Compression modes available in transmit mode<br>0: MH only<br>1: Disabled  | This bit determines the capabilities that are informed to the other terminal during transmission.<br>If the setting is "Disabled", the bit switch setting is used.   |
| 6-7 | ECM during transmission<br>Bit 7: 0, Bit 6: 0 = Off<br>Bit 7: 0, Bit 6: 1 = On<br>Bit 7: 1, Bit 6: 0 = Not used<br>Bit 7: 1, Bit 6: 1 = Disabled | For example, if ECM is switched on but is not wanted when sending to a particular terminal, use the (0, 0) setting.<br> Note <ul style="list-style-type: none"> <li>V.8/V.34 protocol and JBIG compression are automatically disabled if ECM is disabled.</li> <li>If the setting is "Disabled", the bit switch setting is used.</li> </ul> |

|  |
|--|
| <b>Switch 04 - Not used</b> (do not change the settings) |
| <b>Switch 05 - Not used</b> (do not change the settings) |
| <b>Switch 06 - Not used</b> (do not change the settings) |
| <b>Switch 07 - Not used</b> (do not change the settings) |
| <b>Switch 08 - Not used</b> (do not change the settings) |
| <b>Switch 09 - Not used</b> (do not change the settings) |

## E-mail Parameters

The initial settings of the following e-mail parameters are all "0" (all parameters disabled).

| Switch 00 |   |   |
|-----------|---|---|
| No        | FUNCTION  | COMMENTS  |
| 0         | MH Compression mode for e-mail attachments<br>0: Off<br>1: On | Switches MH compression on and off for files attached to e-mails for sending. |
| 1         | MR Compression mode for e-mail attachments<br>0: Off          | Switches MR compression on and off for files attached to e-mails for sending. |



|     |  |   |
|-----|--|---|
|     | 1: On  |   |
| 2   | MMR Compression mode for e-mail attachments<br>0: Off<br>1: On   | Switches MMR compression on and off for files attached to e-mails for sending.  |
| 3-6 | <b>Not used</b>  | Do not change these settings.   |
| 7   | Designates the bits to reference for compression method of e-mail attachments<br>0: Registered (Bit 0 to 6)<br>1: No registration. | The "0" selection (default) references the settings for Bits 00, 01, 02 above. The "1" selection ignores the selections of Bits 00, 01, 02. |

| Switch 01 |   |   |
|-----------|---|---|
| No        | FUNCTION  | COMMENTS  |
| 0         | Original width of e-mail attachment: A4<br>0: Off<br>1: On  | Sets the original width of the e-mail attachment as A4.   |
| 1         | Original width of e-mail attachment: B4<br>0: Off<br>1: On  | Sets the original width of the e-mail attachment as B4.   |
| 2         | Original width of e-mail attachment: A3<br>0: Off<br>1: On  | Sets the original width of the e-mail attachment as A3.   |
| 3-6       | <b>Not used</b>   | Do not change these settings.   |
| 7         | Designates the bits to reference for original size of e-mail attachments<br>0: Registered (Bit 0 to 6)<br>1: No registration. | The "0" selection (default) references the settings for Bits 00, 01, 02 above. The "1" selection ignores the selections of Bits 00, 01, 02. |

| Switch 02 |  |  |
|-----------|--|--|
| No        | FUNCTION   | COMMENTS   |
| 0         | Line resolution of e-mail attachment: 200 x 100<br>0: Off<br>1: On | Sets the line resolution of the e-mail attachment as 200 x100. |
| 1         | Line resolution of e-mail  | Sets the line resolution of the e-mail attachment as           |

### Dedicated Transmission Parameters

|     |   |   |
|-----|---|---|
|     | attachment: 200 x 200<br>0: Off<br>1: On  | 200 x 200.  |
| 2   | Line resolution of e-mail attachment: 200 x 400<br>0: Off<br>1: On  | Sets the line resolution of the e-mail attachment as 200 x 400.   |
| 3   | Not used  | Do not change these settings.   |
| 4   | Line resolution of e-mail attachment: 400 x 400<br>0: Off<br>1: On  | Sets the line resolution of the e-mail attachment as 400 x 400.   |
| 5-6 | <b>Not used</b>   | Do not change these settings.   |
| 7   | Designates the bits to reference for original size of e-mail attachments<br>0: Registered (Bit 0 to 6)<br>1: No registration. | The "0" selection (default) references the settings for Bits 00, 01, 02, 04 above. The "1" selection ignores the selections of Bits 00, 01, 02, 04. |

**Switch 03 - Not used** (do not change the settings)

| Switch 04 |  |  |
|-----------|--|--|
| No        | FUNCTION   | COMMENTS   |
| 0         | Full mode address selection<br>0: Full mode address<br>1: No full mode (simple mode) | If the other ends have the addresses, which have the full mode function flag ("0"), this machine determines them as full mode standard machines. <ul style="list-style-type: none"> <li>▪ This machine attaches the "demand of reception confirmation" to a message when transmitting.</li> <li>▪ This machine updates the reception capability to the address book when receiving.</li> </ul> |
| 1-7       | <b>Not used</b>  | Do not change these settings.  |

| Switch 05 |   |  |
|-----------|---|--|
| No        | FUNCTION  | COMMENTS   |
| 0         | Direct transmission selection to SMTP server<br>0: ON<br>1: OFF | Allows or does not allow the direct transmission to SMTP server. |
| 1-7       | Not used  | Do not change these settings.                                    |

Dedicated Transmission Parameters

|  |
|--|
| <b>Switch 06 - Not used</b> (do not change the settings) |
| <b>Switch 07 - Not used</b> (do not change the settings) |
| <b>Switch 08 - Not used</b> (do not change the settings) |
| <b>Switch 09 - Not used</b> (do not change the settings) |

## 4.6 SERVICE RAM ADDRESSES

### CAUTION

- Do not change the settings which are marked as “Not used” or “Read only.”

#### **680001 to 680004(H) - ROM version (Read only)**

680001(H) - Revision number (BCD)

680002(H) - Year (BCD)

680003(H) - Month (BCD)

680004(H) - Day (BCD)

**680006 to 680015(H)** - Machine's serial number (16 digits - ASCII)

**680018(H)** - Total program checksum (low)

**680019(H)** - Total program checksum (high)

**680020 to 68003F(H)** - System bit switches

**680050 to 68005F(H)** - Printer bit switches

**680060 to 68007F(H)** - Communication bit switches

**680080 to 68008F(H)** - G3 bit switches

**680090 to 68009F(H)** - G3-2 bit switches: Not used

**6800A0 to 6800AF(H)** - G3-3 bit switches: Not used

**6800D0(H) - User parameter switch 00 (SWUER\_00)** : Not used

**6800D1(H) - User parameter switch 01 (SWUSR\_01)** : Not used

**6800D2(H) - User parameter switch 02 (SWUSR\_02)**

Bit 0: Forwarding mark printing on forwarded messages 0: Disabled, 1: Enabled

Bit 1: Center mark printing on received copies

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 2: Reception time printing

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 3: TSI print on received messages 0: Disabled, 1: Enabled

Bit 4: Checkered mark printing

(This switch is not printed on the user parameter list.)

0: Disabled, 1: Enabled

Bit 5: Not used

Bit 6: Not used

Bit 7: Not used

**6800D3(H) - User parameter switch 03 (SWUSR\_03: Automatic report printout)**

Bit 0: Transmission result report (memory transmissions) 0: Off, 1: On

Bit 1: Not used

Bit 2: Memory storage report 0: Off, 1: On

Bit 3: Polling reserve report (polling reception) 0: Off, 1: On

Bit 4: Polling result report (polling reception) 0: Off, 1: On

Bit 5: Transmission result report (immediate transmissions) 0: Off, 1: On

Bit 6: Not used

Bit 7: Journal 0: Off, 1: On

#### **6800D4(H) - User parameter switch 04 (SWUSR\_04: Automatic report printout)**

Bit 0: Not used

Bit 1: Automatic communication failure report and transfer result report output 0: Off, 1: On

Bits 2 to 3: Not used

Bit 4: Indicates the parties 0: Not indicated, 1: Indicated

Bit 5: Include sender's name on reports 0: Off, 1: On

Bit 6: Not used

Bit 7: Inclusion of a sample image on reports 0: Off, 1: On

#### **6800D5(H) - User parameter switch 05 (SWUSR\_05)**

Bit 0: Substitute reception when the base copier is in an SC condition

0: Enabled, 1: Disabled

Bits 1 and 2: Condition for substitute rx when the machine cannot print messages (Paper end, toner end, jam, and during night mode)

Bit 2: 0, Bit 1: 0 = The machine receives all the fax messages.

Bit 2: 0, Bit 1: 1 = The machine receives the fax messages with RTI or CSI.

Bit 2: 1, Bit 1: 0 = The machine receives the fax messages with the same ID code.

Bit 2: 1, Bit 1: 1 = The machine does not receive anything.

Bit 3: Not used

Bit 4: Not used

Bit 5: Just size printing 0: Off, 1: On

Bit 6: Not used

Bit 7: Add paper display when a cassette is empty 0: Off, 1: On

**6800D6(H) - User parameter switch 06 (SWUSR\_06):** Not used

#### **6800D7(H) - User parameter switch 07 (SWUSR\_07)**

Bit 0 Ringing 0: Off, 1: On

Bit 1: Automatic answering message 0: Off, 1: On

Bit 2: Parallel memory transmission 0: Off, 1: On

Bits 3 and 4: Not used

## Service RAM Addresses

Bit 5: Remote control 0: Off, 1: On

Bits 6 and 7: Not used

### **6800D8(H) - User parameter switch 08 (SWUSR\_08)**

Bits 0 and 1: Not used.

Bit 2: Authorized reception

0: Only faxes from senders whose RTIs/CSIs are specified for this feature are accepted.

1: Only faxes from senders whose RTIs/CSIs are not specified for this feature are accepted.

Bits 3 to 7: Not used.

**6800D9(H) - User parameter switch 09 (SWUSR\_09):** Not used

### **6800DA(H) - User parameter switch 10 (SWUSR\_0A)**

Bits 0 to 2: Not used

Bit 3: Page reduction 0: Off, 1: On

Bits 4 and 5: Not used

Bit 6: Use both e-mail notification and printed reports to confirm the transmission results 0: Off, 1: On

Bit 7: Not used

### **6800DB(H) - User parameter switch 11 (SWUSR\_0B)**

Bits 0 and 1: Not used

Bit 2: White original detection 0: Off, 1: On (alarm and alert message on the LCD)

Bit 3: Receive rejection for 1300 Hz transmission 0: Off (receive), 1: On (not receive)

Bit 5: Not used

Bit 6: Printout of messages received while acting as a forwarding station 0: Off, 1: On

Bit 7: Not used

**6800DC(H) - User parameter switch 12 (SWUSR\_0C):** Not used

**6800DD(H) - User parameter switch 13 (SWUSR\_0D):** Not used

### **6800DE(H) - User parameter switch 14 (SWUSR\_0E)**

Bit 0: Message printout while the machine is in Night Printing mode 0: On, 1: Off

Bit 1: Maximum document length detection 0: Double letter, 1: Longer than double-letter (well log) – up to 1,200 mm

Bit 2: Not used

Bit 3: Fax mode settings, such as resolution, before a mode key (Copy/Fax/Printer/Scanner) is pressed 0: Not cleared, 1: Cleared

Bits 4 to 6: Not used

Bit 7: Not used

### **6800DF(H) - User parameter switch 15 (SWUSR\_0F)**

(This switch is not printed on the user parameter list.)

Bits 0, 1 and 2: Cassette for fax printout

Bit 2: 0, Bit 1: 0, Bit 0: 1 = 1st paper feed station

Bit 2: 0, Bit 1: 1, Bit 0: 0 = 2nd paper feed station

Bit 2: 0, Bit 1: 1, Bit 0: 1 = 3rd paper feed station

Bit 2: 1, Bit 1: 0, Bit 0: 0 = 4th paper feed station

Bit 2: 1, Bit 1: 0, Bit 0: 1 = LCT

Other settings Not used

Bits 3 and 4: Not used

Bit 5: Using the cassette specified by bits 0, 1 and 2 above only 0: On, 1: Off

Bits 6 and 7: Not used

#### **6800E0(H) – User parameter switch 16 (SWUSR\_10)**

(This switch is not printed on the user parameter list.)

Bits 0 and 1: Not used

Bit 2: Paper size selection priority for an A4 size fax message when A4/LT size paper is not available. 0: A3 has priority, 1: B4 has priority

Bits 3 to 7: Not used

#### **6800E1(H) – User parameter switch 17 (SWUSR\_11)**

Bit 0: Not used

Bit 1: Not used

Bit 2: Inclusion of the “Add” button when a sequence of Quick/Speed dials is selected for broadcasting 0:Not needed, 1: Needed

Bits 3 to 6: Not used

Bit 7: Press “Start” key without an original when using the on hook dial or the external telephone,

0: displays “Cannot detect original size”. 1: Receives fax messages.

#### **6800E2(H) - User parameter switch 18 (SWUSR\_12)**

Bit 0: TTI date 0: Off, 1: On

Bit 1: TTI sender 0: Off, 1: On

Bit 2: TTI file number 0: Off, 1: On

Bit 3: TTI page number 0: Off, 1: On

Bits 4 to 6: Not used

Bit 7: Japan only

#### **6800E3(H) - User parameter switch 19 (SWUSR\_13)**

Bit 0: Not used

Bit 1: Journal format

## Service RAM Addresses

0: The Journal is separated into transmissions and receptions

1: The Journal is separated into G3-1, G3-2, and G3-3 communications

Bit 2: Not used

Bit 3: 90° image rotation during B5 portrait Tx (This switch is not printed on the user parameter list.) 0: Off, 1: On

Bit 4: Reduction of sample images on reports to 50% in the main scan and sub-scan directions. (This switch is not printed on the user parameter list.) 0: Technician adjustment (printer switch 0E bits 3 and 4), 1: 50% reduction

Bit 5: Use of A5 size paper for reports (This switch is not printed on the user parameter list.) 0: Off, 1: On

Bits 6 and 7: Not used

### **6800E4(H) - User parameter switch 20 (SWUSR\_14)**

Bit 0: Automatic printing of the LAN fax result report 0: Off, 1: On

Bit 1: Not used.

Bits 2 to 5: Store documents in memory which could not be printed from PC fax (LAN fax) driver

| Bit 5 | Bit 4 | Bit 3 | Bit 2 | Setting |
|-------|-------|-------|-------|---------|
| 0     | 0     | 0     | 0     | 0 min.  |
| 0     | 0     | 0     | 1     | 1 min.  |
| ↓     | ↓     | ↓     | ↓     | ↓       |
| 1     | 1     | 1     | 0     | 14 min. |
| 1     | 1     | 1     | 1     | 15 min. |

Bits 6 and 7: Not used.

### **6800E5(H) - User parameter switch 21 (SWUSR\_15)**

Bit 0: Print results of sending reception notice request message 0: Disabled (print only when error occurs), 1: Enabled

Bit 1: Respond to e-mail reception acknowledgment request 0: Disabled, 1: Enabled

Bit 2: Not used

Bit 3: File format for forwarded folders 0: TIFF, 1:PDF

Bit 4: Transmit Journal by E-mail 0: Disabled, 1: Enabled

Bit 5: Not used

Bit 6: Network error display 0: Displayed, 1: Not displayed

Bit 7: Transmit error mail notification 0: Enabled, 1: Disabled

### **6800E6(H) - User parameter switch 22 (SWUSR\_16)**

(This switch is not printed on the user parameter list.)



Bit 0: Dial tone detection (PSTN 1) 0: Disabled, 1: Enabled

Bits 1 to 7: Not used

**6800E7(H) – User parameter switch 23 (SWUSR\_17):** Not used

**6800E8(H) - User parameter switch 24 (SWUSR\_18):** Not used

**6800E9(H) - User parameter switch 25 (SWUSR\_19)**

Bit 0: Not used

Bit 1: Reception mode switch timer 0: Off, 1: On (switching Fax or Fax/Tel)

Bit 2: Mode priority switch 0: Fax first, 1: Tel first

Bit 3: Dial in function (Japan Only)

Bit 4: RDS operation 0: Not acceptable, 1: Acceptable for the limit specified by system switch 03



- This bit is only effective when RDS operation can be selected by the user (see system switch 02).

Bits 5 to 7: Not used

**6800EA(H) and 6800EB(H) - User parameter switches 26 and 27 (SWUSR\_1A and 1B):** Not used

**6800EC(H) - User parameter switch 28(SWUSR\_1C)**

**Xxxxx**

**6800ED(H) - User parameter switch 29(SWUSR\_1D)**

**xxxxxx**

**6800EE(H) and 6800EF(H) - User parameter switches 30 and 31 (SWUSR\_1E and 1F):**

Not used

**6800F0(H) - User parameter switch 32 (SWUSR\_20)**

Bit 0: Quotation priority for a destination when there is no destination of the specified type

0: Paper output priority = Priority order: 1. IP-fax destination, 2. Fax Number, 3. E-mail address, 4. Folder

1: Electric putout order = Priority order: 1. E-mail address, 2. Folder, 3. IP-fax destination, 4. Fax number

Bits 1 to 7: Not used

**6800F1(H) - User parameter switch 33 (SWUSR\_21):** Not used

**6800F2(H) - User parameter switch 34 (SWUSR\_22)**

Bit 0: Gatekeeper server used with IP-Fax 0: Disabled, 1: Enabled

Bit 1: SIP server used with IP-Fax 0: Disabled, 1: Enabled

Bits 2 to 7: Not used

**680100 to 68010F(H) - G4 Parameter Switches –** Not used

## Service RAM Addresses

- 680110 to 68012F(H)** - G4 Internal Switches – Not used
- 680130 to 68016F(H)** - Service Switches
- 680170 to 68017F(H)** - IFAX Switches
- 680180 to 68018F(H)** - IP-FAX Switches
- 680190 to 6801AF(H)** - Service station's fax number (SP3-101)
- 6801B0 to 6801B9(H)** - Own fax PABX extension number
- 6801BA to 6801C3(H)** - Own fax number (PSTN) – Not used
- 6801C4 to 6801D7(H)** - Own fax number (ISDN G4) – Not used
- 6801D8 to 6801E3(H)** - The first subscriber number (ISDN G3) – Not used
- 6801E4 to 6801EF(H)** - The second subscriber number (ISDN G3) – Not used
- 6801F0 to 6801FB(H)** - The first subscriber number (ISDN G4) – Not used
- 6801FC to 680207(H)** - The second subscriber number (ISDN G4) – Not used
- 680208 to 68021B(H)** - PSTN-1 RTI (Max. 20 characters - ASCII) - See the following note.
- 68021C to 68022F(H)** - PSTN-2 RTI (Max. 20 characters - ASCII) - Not used
- 680230 to 680246(H)** - PSTN-3 RTI (Max. 20 characters - ASCII) - Not used
- 680247 to 680286(H)** - TTI 1 (Max. 64 characters - ASCII) - See the following note.
- 680287 to 6802C6(H)** - TTI 2 (Max. 64 characters - ASCII) - Not used
- 6802C7 to 680306(H)** - TTI 3 (Max. 64 characters - ASCII) - Not used
- 680307 to 68031A(H)** - PSTN-1 CSI (Max. 20 characters - ASCII)
- 68031B to 68032E(H)** - PSTN-2 CSI (Max.20 characters - ASCII) - Not used
- 68032F to 680342(H)** - PSTN-3 CSI (Max.20 characters - ASCII) - Not used
- 680343(H)** - Number of PSTN-1 CSI characters (Hex)
- 680344(H)** - Number of PSTN-2 CSI characters (Hex) - Not used
- 680345(H)** - Number of PSTN-3 CSI characters (Hex) - Not used

### Note

- If the number of characters is less than the maximum (20 for RTI, 64 for TTI), add a stop code (00[H]) after the last character.

- 680380 to 680387(H)** - Last power off time (Read only)
- 680380(H) - 01(H) - 24-hour clock, 00(H) - 12-hour clock (AM), 02(H) - 12-hour clock (PM)
- 680381(H) - Year (BCD)
- 680382(H) - Month (BCD)
- 680383(H) - Day (BCD)
- 680384(H) – Hour
- 680385(H) – Minute
- 680386(H) – Second
- 680387(H) - 00: Monday, 01: Tuesday, 02: Wednesday, /// , 06: Sunday

**680394(H)** - Optional equipment (Read only – Do not change the settings)

Bit 0: Page Memory 0: Not installed, 1: Installed

Bit 1: SAF Memory 0: Not installed, 1: Installed

Bits 2 to 7; Not used

**680395(H)** - Optional equipment (Read only – Do not change the settings)

Bits 0 to 3: Not used

Bit 4: G3-2 0: Not installed, 1: Installed

Bit 5: G3-3 0: Not installed, 1: Installed

Bit 6 and 7: Not used

**680406 to 68040A** – Option G3 board (G3-2) ROM information (Read only)

680406(H) - Suffix (BCD)

680407(H) - Version (BCD)

680408(H) - Year (BCD)

680409(H) - Month (BCD)

68040A(H) - Day (BCD)

**68040B to 68040F** – Option G3 board (G3-3) ROM information (Read only)

68040B(H) - Suffix (BCD)

68040C(H) - Version (BCD)

68040D(H) - Year (BCD)

68040E(H) - Month (BCD)

68040F(H) - Day (BCD)

**680410(H)** - G3-1 Modem ROM version (Read only)

**680412(H)** - G3-2 Modem ROM version (Read only)

**680414(H)** - G3-3 Modem ROM version (Read only)

**680420(H)** - Number of multiple sets print (Read only)

**680476(H)** - Time for economy transmission (hour in 24h clock format - BCD)

**680477(H)** - Time for economy transmission (minute - BCD)

**680492(H)** - Transmission monitor volume 00 - 07(H)

**680493(H)** - Reception monitor volume 00 - 07(H)

**680494(H)** - On-hook monitor volume 00 - 07(H)

**680495(H)** - Dialing monitor volume 00 - 07(H)

**680496(H)** - Buzzer volume 00 - 07(H)

**680497(H)** - Beeper volume 00 - 07(H)

**6804A8(H)** - Machine code (Check ram 4)

**688E8E to 68918D(H)** - SIP server address (Read only)

688E8E(H) - Proxy server - Main (Max. 128 characters - ASCII)


688F0E(H) - Proxy server - Sub (Max. 128 characters - ASCII)  
688F8E(H) - Redirect server - Main (Max. 128 characters - ASCII)  
68900E(H) - Redirect server - Sub (Max. 128 characters - ASCII)  
68908E(H) - Registrar server - Main (Max. 128 characters - ASCII)  
68910E(H) - Registrar server - Sub (Max. 128 characters - ASCII)  
**68918E(H)** - Gatekeeper server address - Main (Max. 128 characters - ASCII)  
**68920E(H)** - Gatekeeper server address - Sub (Max. 128 characters - ASCII)  
**68928E(H)** - Arias Number (Max. 128 characters - ASCII)  
**68930E(H)** - SIP user name (Max. 128 characters - ASCII)  
**68938E(H)** - **SIP digest authentication password** (Max. 128 characters - ASCII)  
**68940E(H)** - Gateway address information (Max. 7100 characters - ASCII)  
**68AFCA(H)** - Stand-by port number for H.232 connection  
**68AFCCH** - Stand-by port number for SIP connection  
**68AFCE(H)** - RAS port number  
**68AFD0(H)** - Gatekeeper port number  
**68AFD2(H)** - Port number of data waiting for T.38  
**68AFD4(H)** - Port number of SIP server  
**68AFD6(H)** - Priority for SIP and H.323 0: H.323, 1: SIP  
**68AFD7(H)** - SIP function 0: Disabled, 1: Enabled  
**68AFD8(H)** - H.323 function 0: Disabled, 1: Enabled  
**68AFD9(H)** - **SIP digest authentication function** 0: Disabled, 1: Enabled  
**68AFDA(H)** - **IP-Fax backup data** 00 - 600 (H)

- ⇒ **69ECBE(H) - 69ECDE(H) - IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.
- ⇒ **6BEBFE(H) – IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.
- ⇒ **6BEBFF(H) – IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.
- ⇒ **6BEC00(H) – IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.
- ⇒ **6BEC01(H) – IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.
- ⇒ **6BEC02(H) – IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.
- ⇒ **6BEC03 to 6BEC04 – IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.

- ⇒ **6BEC05(H)** – **IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.
- ⇒ **6BEC06(H)** – **IMPORTANT: Do not change the values** of these RAM addresses. They are not for use in the field.

## 5. DETAILED SECTION DESCRIPTIONS

### 5.1 OVERVIEW

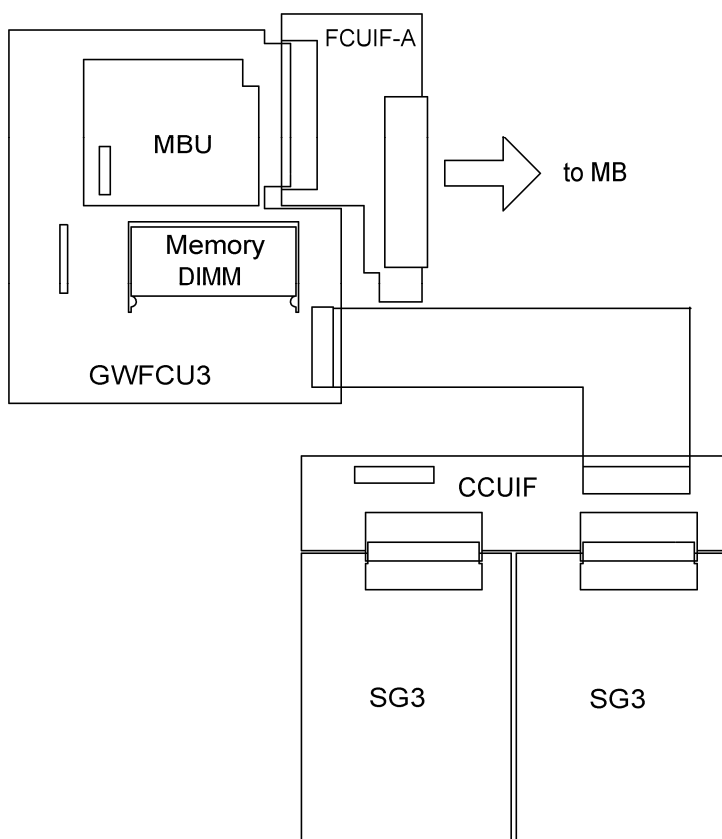

The basic fax unit consists of two PCBs: an FCU and an MBU.


The FCU controls all the fax communications and fax features, in cooperation with the controller board. The MBU contains the ROM and SRAM. Also, the FCU has an NCU circuit.

#### **Fax Options:**

1. Extra G3 Interface option: This provides one more analog line interface. This allows full dual access. Two extra G3 interface options can be installed.
2. Memory Expansion: This expands the SAF memory and the page memory (used for image rotation); without this expansion, the page memory is not big enough for image rotation at 400 dpi, so transmission at 400 dpi is not possible.

## 5.2 BOARDS

### 5.2.1 FCU

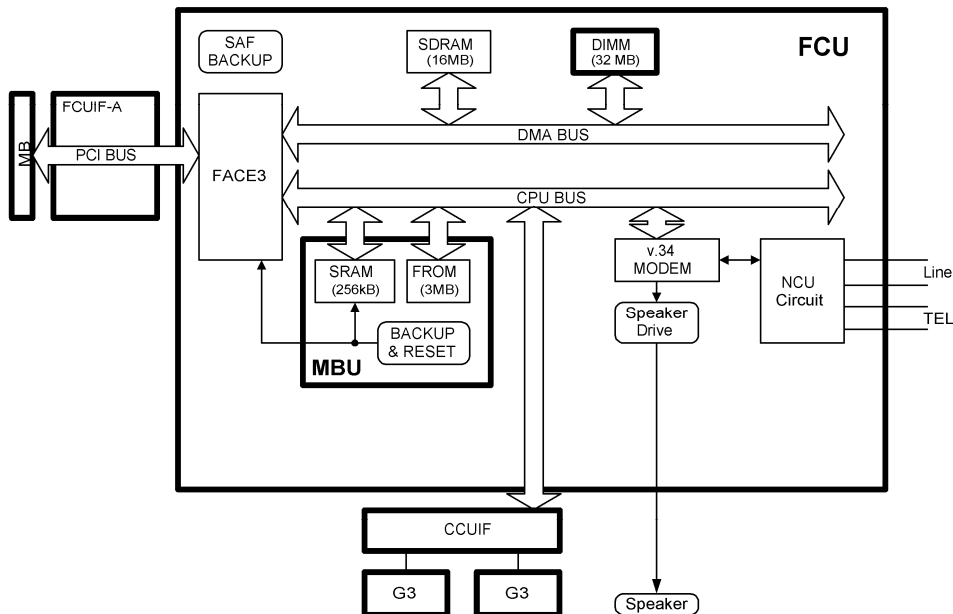

The FCU (Facsimile Control Unit) controls fax communications, the video interface to the base copier's engine, and all the fax options..

#### ***FACE3 (Fax Application Control Engine)***

- CPU
- Data compression and reconstruction (DCR)
- DMA control
- Clock generation
- DRAM backup control

#### ***Modem (FAME)***

- V.34, V33, V17, V.29, V.27ter, V.21, and V.8

#### ***DRAM***

- The 16 MB of DRAM is shared as follows.
  - SAF memory : 4MB
  - Working memory : 8MB
  - Page memory : 4MB
- The SAF memory is backed up by a rechargeable battery.

#### ***Memory Back-up***

- A Rechargeable battery backs up the SAF memory (DRAM) for 1 hour.

Boards

## 5.2.2 MBU

On this board, the flash ROM contains the FCU firmware, and the SRAM contains the system data and user parameters. Even if the FCU is changed, the system data and user parameters are kept on the MBU board.

### **ROM**

- 3MB flash ROMs for system software storage  
2MB (16bit x 1MB) + 1MB (16bit x 512K)

### **SRAM**

- The 256KB SRAM for system and user parameter storage is backed up by a lithium battery.

### **Memory Back-up**


- A lithium battery backs up the system parameters and programmed items in the SRAM, in case the base copier's main switch is turned off.

### **Switches**

| Item | Description                              |
|------|--|
| SW1  | Switches the SRAM backup battery on/off. |



## 5.2.3 SG3 BOARD

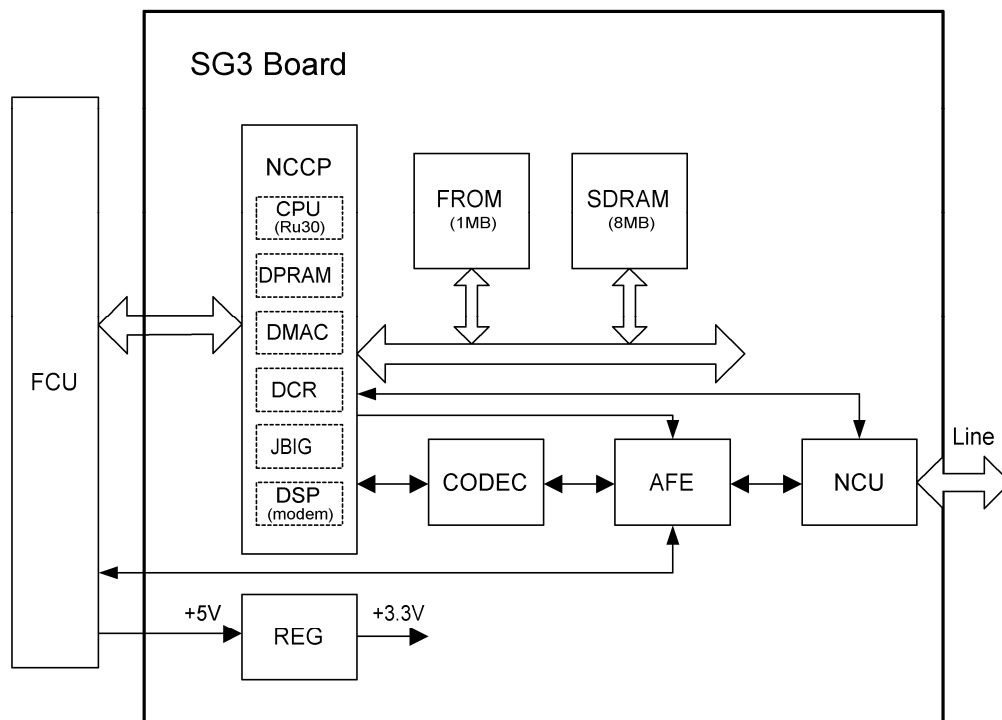

The SG3 board allows up to three simultaneous communications when used in combination with the FCU and optional G3 boards. The NCU is on the same board as the common SG-3 board. This makes the total board structure smaller. But, the specifications of the SG3 board do not change.

### ***NCCP (New Communication Control Processor)***

- Controls the SG3 board.
- CPU (RU30)
- DPRAM (Dual Port RAM): Handshaking with the FCU is done through this block.
- DMA controller
- JBIG
- DSP V34 modem (RL5T892): Includes the DTMF Receiver function
- DCR for MH, MR, MMR, and JBIG compression and decompression

### ***FROM***

- 1Mbyte flash ROM for SG3 software storage and modem software storage

### ***SDRAM***

- 4Mbyte DRAM shared between ECM buffer, line buffer, and working memory

Boards

***AFE (Analog Front End)***

- Analog processing

***CODEC (COder-DECoder)***


- A/D & D/A conversions for modem

***REG***

- Generates +3.3 V from the +5V from the FCU

## 5.3 VIDEO DATA PATH

### 5.3.1 TRANSMISSION

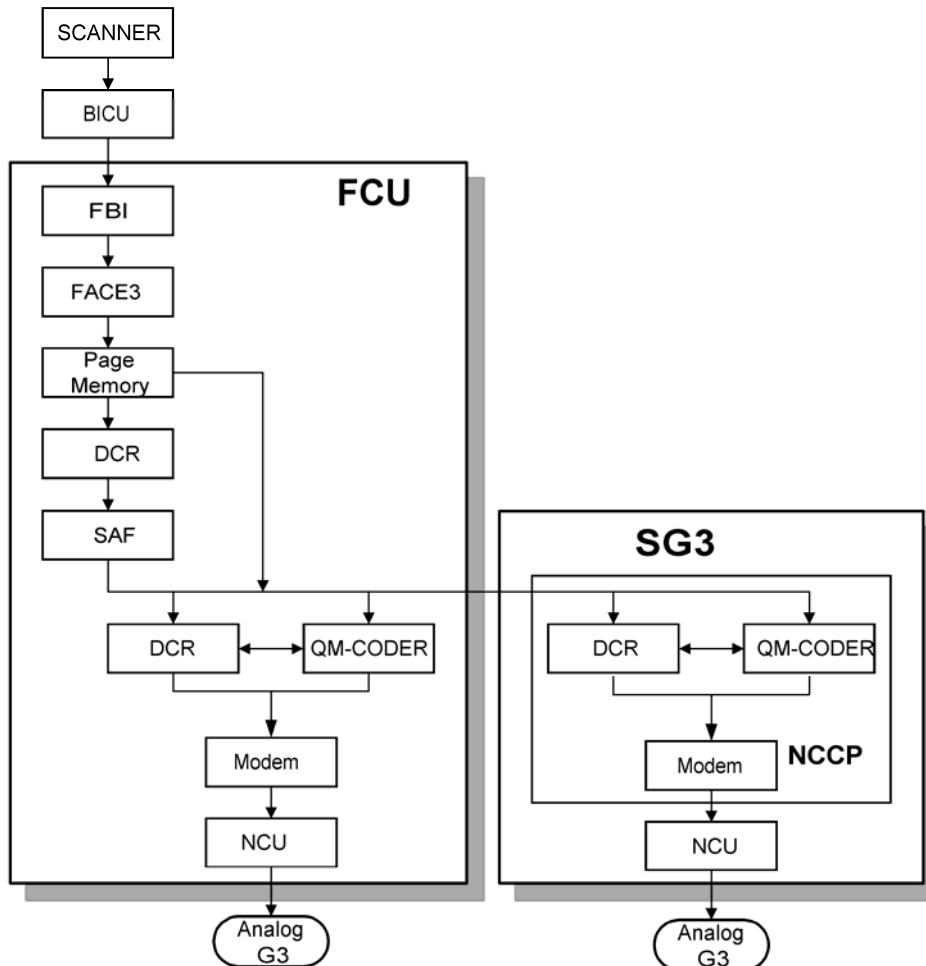

#### ***Memory Transmission and Parallel Memory Transmission***

The base copier's scanner scans the original at the selected resolution in inch format. The BICU processes the data and transfers it to the FCU.

#### **Note**

- When scanning a fax original, the BICU uses the MTF, independent dot erase and thresholding parameter settings programmed in the fax unit's scanner bit switches, not the copier's SP modes.

Then, the FCU converts the data to mm format, and compresses the data in MMR or raw format to store it in the SAF memory. If image rotation will be done, the image is rotated in page memory before compression.

At the time of transmission, the FCU decompresses the stored data, then re-compresses

## Video Data Path

and/or reduces the data if necessary for transmission. The NCU transmits the data to the line.

### ***Immediate Transmission***

The base copier's scanner scans the original at the resolution agreed with the receiving terminal. The BICU video processes the data and transfers it to the FCU.



- When scanning a fax original, the BICU uses the MTF, independent dot erase and thresholding parameter settings programmed in the fax unit's scanner bit switches, not the copier's SP modes.

Then the FCU stores the data in page memory, and compresses the data for transmission. The NCU transmits the data to the line.

### ***JBIG Transmission***


- **Memory transmission:** If the receiver has JBIG compression, the data goes from the DCR to the QM-Coder. Then the NCU transmits the data to the line. When an optional G3 unit (SG3) is installed and PSTN2 is selected as the line type, JBIG compression is available, but only for the PSTN-2 line.
- **Immediate transmission:** If the receiver has JBIG compression, the data goes from the page memory to the QM-Coder. Then the NCU transmits the data to the line. When an optional G3 unit (SG3) is installed and PSTN2 is selected as the line type, JBIG compression is available, but only for the PSTN-2 line.

### ***Adjustments***

Priority for the line used for G3 transmissions (PSTN 1/PSTN 2 or 3): System switch 16 bit

1

### 5.3.2 RECEPTION

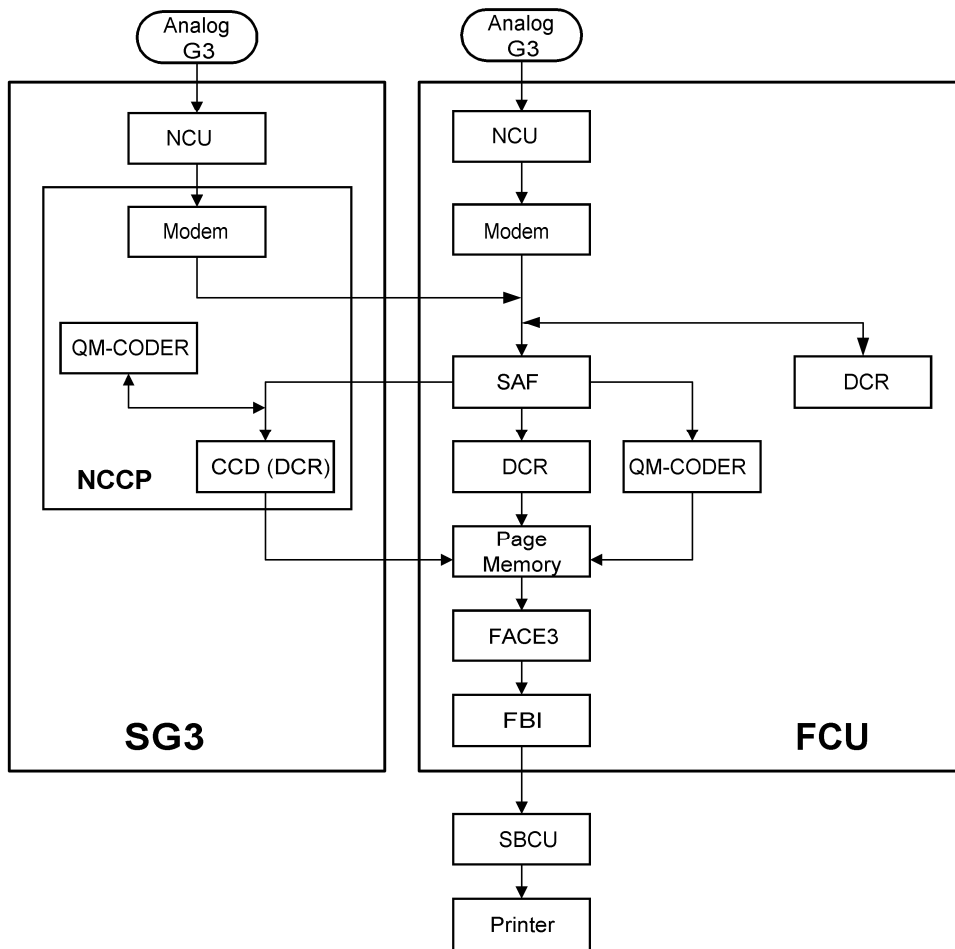

First, the FCU stores the incoming data from either an analog line to the SAF memory. (The data goes to the FACE3 at the same time, and is checked for error lines/frames.) The FCU then decompresses the data and transfers it to page memory. If image rotation will be done, the image is rotated in the page memory. The data is transferred to the BICU. If the optional G3 unit is installed, the line that the message comes in on depends on the telephone number dialled by the other party (the optional G3 unit has a different telephone number from the main fax board).

#### **JBIG Reception**

When data compressed with JBIG comes in on PSTN-1 (the standard analog line), the data is sent to the QM-CODER for decompression. Then the data is stored in the page memory, and transferred to the BICU.

When data compressed with JBIG comes in on PSTN-2 (optional extra analog line), the data is sent to the QM-CODER on the SG3 board for decompression.


## 5.4 FAX COMMUNICATION FEATURES

### 5.4.1 MULTI-PORT

When the optional extra G3 Interface Unit is installed, communication can take place at the same time through the two or three lines at once.

| Option                           | Available Line Type | Available protocol Combinations |
|----------------------------------|---------------------|---------------------------------|
| Standard only                    | PSTN                | G3                              |
| Extra G3 Interface Unit (single) | PSTN + PSTN         | G3 + G3                         |
| Extra G3 Interface Unit (double) | PSTN + PSTN +PSTN   | G3 + G3 +G3                     |

### 5.4.2 DOCUMENT SERVER

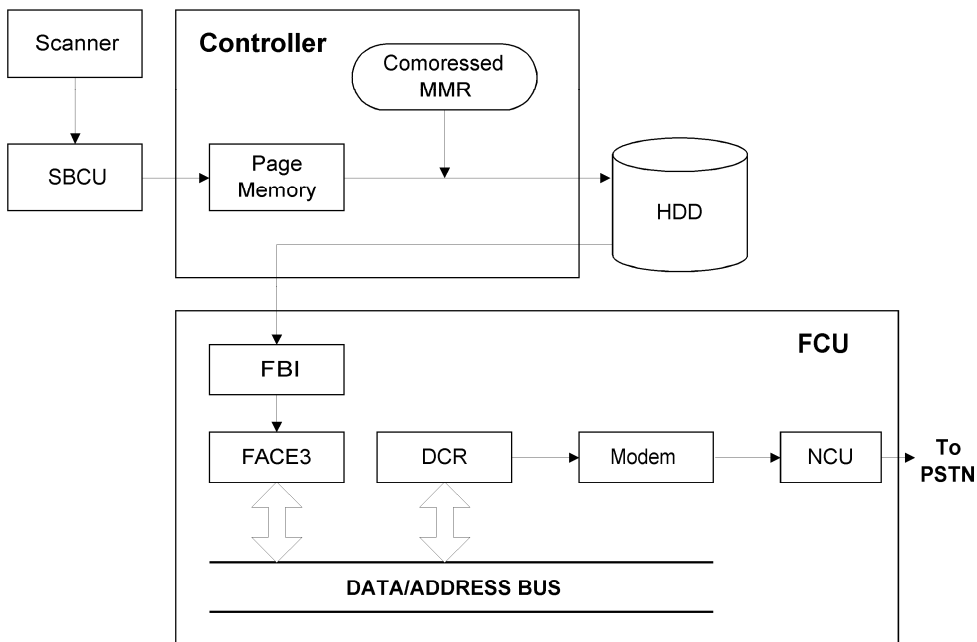

The base copier's scanner scans the original at the selected resolution. The IPU video processes the data and transfers it to the controller board.

Then the controller stores the data in the page memory for the copier function, and compresses the data in MMR (by software) to store it in the HDD. If image rotation will be done, the image is rotated in the page memory before compression.

For transmission, the stored image data is transferred to the FCU. The FCU

decompresses the image data, then recompresses and/or reduces the data if necessary for transmission. the NCU transmits the data to the line.

The documents can be stored in the HDD (Document Server) from the fax application. The stored documents in the document sever can be used for the fax transmission in many times. More than one document and the scanned document can be combined into one file and then the file can be transmitted.

- When using the document server, the SAF memory is not used.
- The document is compressed with MMR and stored.
- Up to 9,000 pages can be stored. (1 file: Up to 1,000 pages) from the fax application.
- Only stored documents from the fax application can be transmitted.
- Scanned documents are given a name automatically, such as "FAX001". But it is possible to change the file name, user name and password.
- Up to 30 files can be selected at once.

 Note

- The compression method of the fax application is different from the copy application. The storing time is longer than the copier storing.
- When selecting "Print 1st page", the stored document will be reduced to A4 size.

### 5.4.3 INTERNET MAIL COMMUNICATION

#### *Mail Transmission*

This machine supports T.37 full mode. (ITU-, RFC232). The difference between T.37 simple mode and full mode is as follows.

| Function                   | T.37 Simple Mode             | T.37 Full Mode  |
|----------------------------|------------------------------|---|
| Resolution                 | 200 x 100<br>200 x 200       | 200 x100<br>200 x 200<br>200 x 400<br>400 x 400 (if available)  |
| RX Paper Width             | A4                           | A4, B4, A3  |
| RX Data Compression Method | MH                           | MH (default), MR, MMR,  |
| Signals                    | Image data transmission only | Image data transmission, exchange of capability information between the two terminals, and acknowledgement of receipt of fax messages |

## Fax Communication Features

### **Data Formats**

The scanned data is converted into a TIFF-F formatted file.

The fields of the e-mail and their contents are as follows:

| <b>Field</b>              | <b>Content</b>   |
|---------------------------|--|
| From                      | Mail address of the sender   |
| Reply To                  | Destination requested for reply  |
| To                        | Mail address of the destination  |
| Bcc                       | Backup mail address  |
| Subject                   | From CSI or RTI (Fax Message No. xxxx)   |
| Content Type              | Multipart/mixed<br>Attached files: image/tiff  |
| Content Transfer Encoding | Base 64, 7-bit, 8-bit, Quoted Printable  |
| Message Body              | MIME-converted TIFF-F (MIME standards specify how files are attached to e-mail messages) |

### **Direct SMTP Transmission**

Internet Fax documents can be sent directly to their destinations without going through the SMTP server. (Internet Faxes normally transmit via the SMTP server.)

For example:

|                      |                 |
|----------------------|-----------------|
| e-mail address:      | gts@ricoh.co.jp |
| SMTP server address: | gts.abcd.com    |

In this case this feature destination e-mail address (gts@ricoh.co.jp) is read as the SMTP server address "gts.abcd.com" and the transmissions bypass the SMTP server.

### **Selectable Options**

These options are available for selection:

- With the default settings, the scan resolution can be either standard or detail. Inch-mm conversion before TX depends on IFAX SW01 Bit 7. Detail resolution will be used if Super Fine resolution is selected, unless Fine resolution is enabled with IFAX SW01.
- The requirements for originals (document size, scan width, and memory capacity) are the same as for G3 fax memory TX.
- The default compression is TIFF-F format.



- IFAX SW00: Acceptable paper widths for sending
- IFAX SW09: Maximum number of attempts to the same destination

### ***Secure Internet Transmission***

- SMTP Authentication: User Tools> System Settings> File Transfer> SMTP Authentication
- POP Before SMTP: User Tools> System Settings> File Transfer> POP Before SMTP

### ***Mail Reception***

This machine supports three types of e-mail reception:

- POP3 (Post Office Protocol Ver. 3.)
- IMAP4 (Internet Messaging Access Protocol)
- SMTP (Simple Mail Transfer Protocol)

For details: Core Technology Manual – Facsimile Processes – Faxing from a PC – Internet/LAN Fax Boards – Mail Reception

### ***POP3/IMAP4 Mail Reception Procedure***

The machine automatically picks up e-mail from the server at an interval which is adjustable in the range 2 to 1440 min. in 1-minute steps: User Tools> System Settings> File Transfer> E-mail Reception Interval

### ***SMTP Reception***

- The IFAX must be registered as an SMTP server in the MX record of the DNS server, and the address of the received mail must specify the IFAX.
- Enable SMTP reception: User Tools> System Settings> File Transfer> Reception Protocol

Even if the MX record on the DNS server includes the IFAX, mail cannot be received with SMTP until SMTP reception is enabled:

However, if SMTP reception is selected and the machine is not registered in the MX record of the DNS server, then either IMAP4 or POP3 is used, depending on the setting: User Tools> System Settings> File Transfer> Reception Protocol

### ***Mail Delivery Conditions: Transferring Mail Received With SMTP***

1. The machine must be set up for SMTP mail delivery: User Tools> Facsimile Features> E-mail Settings> SMTP RX File Delivery Settings
2. If the user wishes to limit this feature so that the machine will only deliver mail from designated senders, the machine's "Auth. E-mail RX" feature must be set (User Tools> Facsimile Features> E-mail Settings> SMTP RX File Delivery Settings).
3. If the "SMTP RX File Delivery Setting" is set to 0 to prohibit SMTP receiving, and if there is mail designated for delivery, then the machine responds with an error. (User

## Fax Communication Features

Tools> Facsimile Features> E-mail Settings> SMTP RX File Delivery Settings)

4. If the quick dial, speed dial, or group dial entry is incorrect, the mail transmission is lost, and the IFAX issues an error to the SMTP server and outputs an error report.

### ***Auth. E-mail RX***

In order to limit access to mail delivery with IFAX, the addresses of senders must be limited using the Access Limit Entry. Only one entry can be registered.

1. Access Limit Entry

For example, to limit access to @IFAX.ricoh.co.jp:

|                      |                                      |
|----------------------|--------------------------------------|
| gts@IFAX.ricoh.co.jp | Matches and is delivered.            |
| gts@IFAX.abcde.co.jp | Does not match and is not delivered. |
| IFAX@ricoh.co.jp     | Does not match and is not delivered. |

2. Conditions

- The length of the Access Limit Entry is limited to 127 characters.
- If the Access Limit Entry address and the mail address of the incoming mail do not match, the incoming mail is discarded and not delivered, and the SMTP server responds with an error. However, in this case an error report is not output.
- If the Access Limit Entry address is not registered, and if the incoming mail specifies a delivery destination, then the mail is delivered unconditionally.

### ***Handling Mail Reception Errors***

#### **Abnormal files**

When an error of this type occurs, the machine stops receiving and commands the server to erase the message. Then the machine prints an error report and sends information about the error by e-mail to the sender address (specified in the "From" or "Reply-to" field of the message). If there is an incomplete received message in the machine memory, it will be erased.

The machine prints an error message when it fails to send the receive error notification after a certain number of attempts.

The following types of files are judged to be abnormal if one or more of the following are detected:

1. Unsupported MIME headers.

Supported types of MIME header

| Header       | Supported Types  |
|--------------|--|
| Content-Type | Multipart/mixed, text/plain, message/rfc822 Image/tiff |

|                           |   |
|---------------------------|---|
| Charset                   | US-ASCII, ISO 8859 X. Other types cannot be handled, and some garbage may appear in the data. |
| Content-Transfer-Encoding | Base 64, 7-bit, 8-bit, Quoted Printable   |

2. MIME decoding errors
3. File format not recognized as TIFF-F format
4. Resolution, document size, or compression type cannot be accepted

**Remaining SAF Capacity Error**

The machine calls the server but does not receive e-mail if the remaining SAF capacity is less than a certain value (the value depends on IFAX Switch 08. The e-mail will be received when the SAF capacity increases (for example, after substitute reception files have been printed). The error handling method for this type of error is the same as for “Abnormal files”.

If the capacity of the SAF memory drops to zero during reception, the machine operates in the same way as when receiving an abnormal file (refer to “Abnormal files” above).

**Secure Internet Reception**

To enable password encryption and higher level security: User Tools> System Settings> File Transfer> POP3/IMAP4 Settings> Encryption (set to “On”)

***Transfer Request: Request By Mail***

For details: Core Technology Manual – Facsimile Processes – Faxing from a PC – Internet/LAN Fax Boards – Transfer Request

The fields of the e-mail and their contents are as follows:

| Field                     | Content  |
|---------------------------|--|
| From                      | E-mail address of the requesting terminal  |
| To                        | Destination address (Transfer Station address)                                   |
| Bcc                       | Blind carbon copy  |
| Subject                   | From TSI (Fax Message No. xxxx)  |
| Content-Type              | Multipart/mixed<br>Text/Plain (for a text part), image/tiff (for attached files) |
| Content-Transfer-Encoding | Base 64, 7-Bit, 8-bit, Quoted Printable  |
| Mail body (text part)     | RELAY-ID-: xxxx (xxxx: 4 digits for an ID code) RELAY:<br>#01#*X#**01....        |
| Message body              | MIME-converted TIFF-F.   |

Fax Communication Features

**E-Mail Options (Sub TX Mode)**

The following features are available as options for mail sending: entering a subject, designating the level of importance, confirming reception of the mail.

**Subject and Level of Importance**

You can enter a subject message with: Sub TX Mode> E-mail Options

The Subject entry for the mail being sent is limited to 64 characters. The subject can also be prefixed with an “Urgent” or “High” notation.

**How the Subject Differs According to Mail Type**

| Mail Type   | ①    | ②   |  | ③  |
|---|------|---|--|--|
| Subject Entry   | ---  | Entry Condition                                   |  | Fax Message No. + File No.   |
| No Subject Entry  |      | 1. “CSI” (“RTI”)                                  |  |  |
|   |      | 2. “RTI”  | CSI not registered                             |  |
|   |      | 3. “CSI”  | RTI not registered                             |  |
|   |      | 4. None   | CSI, RTI not registered                        |  |
| Confirmation of Reception                                   | From | 1. “CSI” (“RTI”)                                  |  | Normal:<br>Return Receipt (dispatched).<br>You can select “displayed” with IFAX SW02 Bits 2 and 3. |
|   |      | 2. “RTI”  | CSI not registered                             |  |
|   |      | 3. “CSI”  | RTI not registered                             | Error:<br>Return Receipt (processed/error)   |
|   |      | 4. None   | CSI, RTI not registered                        |  |
| Mail delivery, memory transfer, SMTP receiving and delivery | From | RTI or CSI of the station designated for delivery | Mail delivery                                  | Fax Message No. + File Number  |
|   |      | RTI or CSI of sender                              | Mail sending from G3 memory                    |  |
|   |      | Mail address of sender                            | Memory sending                                 |  |
|   |      | Mail address of sender                            | SMTP receiving and delivery (Off Ramp Gateway) |  |
| Mail error notification                                     | ---  | Error Message No. xxxx From CSI (RTI)             |  |  |

Items ① ② ③ of the table above are in the Subject.

**Subjects Displayed on the PC**

| Sender       | Date       | Size       | Subject            |
|--------------|------------|------------|--------------------|
| Substation 2 | 04/25/2002 | 1,513      | Parts List         |
| Substation 2 | 04/26/2002 | 1,147      | Specifications     |
| Main Station | 05/09/2002 | 33,551     | [Urgent] Memo 2041 |
|              |            | 21,624,288 |                    |

**E-mail Messages**

After entering the subject, you can enter a message with:

Sub TX Mode> E-mail Options

An e-mail message (up to 5 lines) can be pre-registered with: User Tools> System Settings> File Transfer> Program/Change/Delete E-mail Message

**Limitations on Entries**

| Item            | Maximum       |
|-----------------|---------------|
| Number of Lines | 5 lines       |
| Line Length     | 80 characters |
| Name Length     | 20 characters |

**Message Disposition Notification (MDN)**

For details: Core Technology Manual – Facsimile Processes – Faxing from a PC – Internet/LAN Fax Boards – E-mail Options

The network system administrator can confirm whether a sent mail has been received correctly or not. This function is enabled only when "I-FAX switch 02 Bit 4" is set to "1". This confirmation is done in four steps.

1. Send request for confirmation of mail reception. To enable or disable this request (known as MDN):
2. Sub TX Mode> E-mail Options
3. Mail reception (receive confirmation request)
4. Send confirmation of mail reception
5. Receive confirmation of mail reception

The other party's machine will not respond to the request unless the two conditions below are met:

- The other party's machine must be set up to respond to the confirmation request.
- The other party's machine must support MDN (Message Disposition Notification).

- Setting up the Receiving Party -

## Fax Communication Features

The receiving party will respond to the confirmation request if:

1. The “Disposition Notification To” field is in the received mail header (automatically inserted in the 4th line in the upper table on the previous page, if MDN is enabled), and
2. Sending the disposition notification must be enabled (User Parameter Setting SW21 (15 [H]) Bit 1 for this model). The content of the response is as follows:

|                      |  |
|----------------------|--|
| Normal reception:    | “Return Receipt (dispatched)” in the Subject line      |
| IFAX SW02 (Bit 2, 3) | “Return Receipt (displayed)” in the Subject line       |
| Error:               | “Return Receipt (processed/error)” in the Subject line |

## Handling Reports

1. Sending a Request for a Return Receipt by Mail  
After the mail sender transmits a request for a return receipt, the mail sender’s journal is annotated with two hyphens (--) in the Result column and a “Q” in the Mode column.
2. Mail Receipt (Request for Receipt Confirmation) and Sending Mail Receipt Response  
After the mail receiver sends a response to the request for a return receipt, the mail receiver’s journal is annotated with two hyphens (--) in the Result column and an “A” in the Mode column.
3. Receiving the Return Receipt Mail
  - After the mail sender receives a return receipt, the information in the mail sender’s journal about the receipt request is replaced, i.e. the journal is annotated with “OK” in the Result column.
  - When the return receipt reports an error, the journal is annotated with an “E” in the Result column.
  - The arrival of the return receipt is not recorded in the journal as a separate communication. Its arrival is only reported by the presence of “OK” or “E” in the Result column.
  - If the mail address used by the sender specifies a mailing list (i.e., a Group destination; the machine sends the mail to more than one location. See “How to set up Mail Delivery”), the Result column of the Journal is updated every time a return receipt is received. For example, if the mailing list was to 5 destinations, the Result column indicates the result of the communication with the 5th destination only. The results of the communications to the first 4 destinations are not shown.  
Exceptions: If one of the communications had an error, the Result column will

indicate E, even if subsequent communications were OK.

If two of the communications had an error, the Journal will indicate the destination for the first error only.

**Report Sample**

| DATE   | TIME  | ADDRESS                      | RESULT | MODE     | TIME  | PAGE |
|--------|-------|------------------------------|--------|----------|-------|------|
| MAY. 5 | 10:15 | fuser_01@domlg. ricoh. co.   |        | Mail SM  | 0'09" | 2    |
|        | 10:16 | fuser_01@domlg. ricoh. co.   |        | Mail SMQ | 0'05" | 1    |
|        | 10:17 | s_tadashi@domlg. ricoh. co.  |        | Mail SMQ | 0'09" | 2    |
|        | 10:19 | m_masataka@domlg. ricoh. co. | OK     | Mail SMA | 0'05" | 1    |
|        |       |                              | --     |          |       |      |

IP-Fax

## 5.5 IP-FAX

### 5.5.1 WHAT IS IP-FAX?

For details: Core Technology Manual – Facsimile Processes – Faxing from a PC – Internet/LAN Fax Boards – IP-FAX

T.38 Packet Format

TCP is selected by default for this machine, but you can change this to UDP with IPFAX

SW 00 Bit 1.

UDP Related Switches

| IP-Fax Switch 01 |                           |      |      |      |         |   |
|------------------|---------------------------|------|------|------|---------|---|
| No.              | FUNCTION                  |      |      |      |         | COMMENTS  |
| 0-3              | Select IP FAX Delay Level |      |      |      |         | Raise the level by selecting a higher setting if too many transmission errors are occurring on the network.<br>If TCP/UDP is enabled on the network, raise this setting on the T.30 machine. Increasing the delay time allows the recovery of more lost packets.<br>If only UDP is enabled, increase the number of redundant packets.<br>Level 1~2: 3 Redundant packets<br>Level 3: 4 Redundant packets |
|                  | Bit3                      | Bit2 | Bit1 | Bit0 | Setting |   |
|                  | 0                         | 0    | 0    | 0    | Level 0 |   |
|                  | 0                         | 0    | 0    | 1    | Level 1 |   |
|                  | 0                         | 0    | 1    | 0    | Level 2 |   |
|                  | 0                         | 0    | 1    | 1    | Level 3 |   |

Settings

User parameter switch 34 (22[H]), bit 0

IP-Fax Gate Keeper usage 0: No, 1: Yes


IP Fax Switches: Various IP-FAX settings (see the bit switch table)



## 6. SPECIFICATIONS

### 6.1 GENERAL SPECIFICATIONS

#### 6.1.1 FCU

|                     |   |
|---------------------|---|
| Type:               | Desktop type transceiver  |
| Circuit:            | PSTN (max. 3ch.)<br>PABX  |
| Connection:         | Direct couple   |
| Original Size:      | Book (Face down)<br>Maximum Length: 432 mm [17 ins]<br>Maximum Width: 297 mm [11.7 ins]<br>ARDF (Face up)<br>(Single-sided document)<br>Length: 128 - 1200 mm [5.0 - 47.2 ins]<br>Width: 105 - 297 mm [4.1 - 11.7 inch]<br>(Double-sided document)<br>Length: 128 - 432 mm [5.0 - 17 inch]<br>Width: 105 - 297 mm [4.1 - 11.7 inch]   |
| ⇒ Max. Paper Length | Max. paper length 600 mm (23.6") (default), or 800 (31.5") to 1200 mm (47.2") if SP5-150 is set to 1.<br><b>NOTE:</b> When SP5-150 is set to 1, the actual maximum depends on the width of the Fax received and the page memory size.   |
| Scanning Method:    | Flat bed, with CCD  |
| Resolution:         | G3<br>8 x 3.85 lines/mm (Standard)<br>8 x 7.7 lines/mm (Detail)<br>8 x 15.4 line/mm (Fine) See Note 1<br>16 x 15.4 line/mm (Super Fine) See Note 1<br>200 x 100 dpi (Standard)<br>200 x 200 dpi (Detail)<br>400 x 400 dpi (Super Fine) See Note 1<br> <b>Note</b><br>1. Optional Expansion Memory required |
| Transmission Time:  | G3: 3 s at 28800 bps; Measured with G3 ECM using memory for an ITU-T #1 test document (Slerexe letter) at standard resolution   |
| Data Compression:   | MH, MR, MMR, JBIG   |
| Protocol:           | Group 3 with ECM  |

|                  |   |
|------------------|---|
| Modulation:      | V.34, V.33, V.17 (TCM), V.29 (QAM),<br>V.27ter (PHM), V.8, V.21 (FM)  |
| Data Rate:       | G3: 33600/31200/28800/26400/24000/21600/<br>19200/16800/14400/12000/9600/7200/4800/2400 bps<br>Automatic fallback   |
| I/O Rate:        | With ECM: 0 ms/line<br>Without ECM: 2.5, 5, 10, 20, or 40 ms/line   |
| Memory Capacity: | ECM: 128 KB<br>SAF<br>Standard: 4 MB<br>With optional Expansion Memory: 28 MB (4 MB+ 24 MB)<br>Page Memory<br>Standard: 4 MB (Print: 2 MB + Scanner: 2 MB)<br>With optional Expansion Memory: 12 MB (4 MB + 8 MB)<br>(Print 8 MB + Scanner: 4 MB) |

## 6.1.2 CAPABILITIES OF PROGRAMMABLE ITEMS

The following table shows the capabilities of each programmable items.

| Item   | Standard |
|--|----------|
| Quick Dial   | 2000     |
| Groups   | 100      |
| Destination per Group                                  | 500      |
| Destinations dialed from the ten-key pad overall       | 500      |
| Programs   | 100      |
| Auto Document  | 6        |
| Communication records for Journal stored in the memory | 200      |
| Specific Senders                                       | 30       |

The following table shows how the capabilities of the document memory will change after the Expansion Memory are installed.



|                          | Without the Expansion Memory | With the Expansion Memory |
|--------------------------|------------------------------|---------------------------|
| Memory Transmission file | 400                          | 400                       |

|  |      |      |
|--|------|------|
| Maximum number of page for memory transmission | 1000 | 1000 |
| Memory capacity for memory transmission (Note) | 320  | 2240 |

↓ Note

- Measured using an ITU-T #1 test document (Slerexe letter) at the standard resolution, the auto image density mode and the Text mode.


## 6.2 IFAX SPECIFICATIONS

|                               |  |
|-------------------------------|--|
| <b>Connectivity:</b>          | Local area network<br>Ethernet 100base-Tx/10base-T<br>IEEE1394 (IP over 1394)<br>IEEE802.11b (wireless LAN)  |
| <b>Resolution:</b>            | Main scan: 400 dpi, 200 dpi<br>Sub scan: 400 dpi, 200 dpi, 100 dpi<br> <b>Note</b><br><ul style="list-style-type: none"> <li>▪ To use 400 dpi, IFAX SW01 Bit 4 must be set to “1”.</li> </ul> |
| <b>Transmission Time:</b>     | 1 s (through a LAN to the server)<br>Condition: ITU-T #1 test document (Selerexe Letter)<br>MTF correction: OFF<br>TTI: None<br>Resolution: 200 x 100 dpi<br>Communication speed: 10 Mbps<br>Correspondent device: E-mail server<br>Line conditions: No terminal access        |
| <b>Document Size:</b>         | Maximum message width is A4/LT.<br> <b>Note</b><br><ul style="list-style-type: none"> <li>▪ To use B4 and A3 width, IFAX SW00 Bit 1 (B4) and/or Bit 2 (A3) must be set to “1”.</li> </ul>   |
| <b>E-mail File Format:</b>    | Single/multi-part<br>MIME conversion<br>Image: TIFF-F (MH, MR, MMR)  |
| <b>Protocol:</b>              | <b>Transmission:</b><br>SMTP, TCP/IP<br><b>Reception:</b><br>POP3, SMTP, IMAP4, TCP/IP   |
| <b>Data Rate:</b>             | 100 Mbps(100base-Tx)<br>10 Mbps (10base-T)   |
| <b>Authentication Method:</b> | SMTP-AUTH<br>POP before SMTP<br>A-POP  |
| <b>Remark:</b>                | The machine must be set up as an e-mail client before installation. Any client PCs connected to the machine through a LAN must also be e-mail clients, or some features will not work (e.g. Autorouting).  |

## 6.3 IP-FAX SPECIFICATIONS

|                               |  |
|-------------------------------|--|
| Network:                      | Local Area Network<br>Ethernet/10base-T, 100base-TX<br>IEEE1394 (IP over 1394)<br>IEEE802.11b (wireless LAN)   |
| Scan line density:            | 8 x 3.85 lines/mm, 200x100dpi (standard character),<br>8 x 7.7lines/mm, 200x200dpi (detail character),<br>8 x 15.4lines/mm (fine character: optional expansion memory required),<br>16 x 15.4lines/mm, 400x400dpi (super fine character: optional expansion memory required) |
| Original size:                | Maximum A3 or 11"x 17" (DLT)   |
| Maximum scanning size:        | Standard: A3, 297mm x 432mm<br>Irregular: 297mm x 1200mm   |
| Transmission protocol:        | Recommended: T.38 Annex protocol, TCP, UDP/IP communication  |
| Compatible machines:          | IP-Fax compatible machines   |
| IP-Fax transmission function: | Specify IP address and send fax to an IP-Fax compatible fax through a network.<br>Also capable of sending fax from a G3 fax connected to the public telephone lines via a VoIP gateway.  |
| IP-Fax reception function:    | Receive a fax sent from an IP-Fax compatible fax through a network.<br>Also capable of receiving fax from a G3 fax connected the public telephone lines via a VoIP gateway.  |

## 6.4 FAX UNIT CONFIGURATION

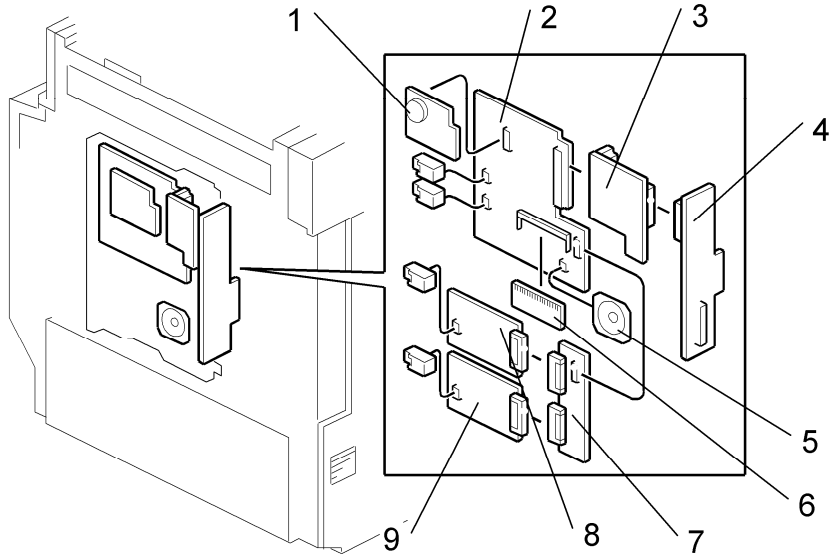

| Component         | Code | No. | Remarks                   |
|-------------------|------|-----|---------------------------|
| MBU               | B786 | 1   | Included with fax unit    |
| FCU               |      | 2   |                           |
| FCU I/F           |      | 3   |                           |
| Mother Board      |      | 4   |                           |
| Speaker           |      | 5   |                           |
| Expansion Memory  | G578 | 6   | Optional                  |
| CCU I/F Board     | B787 | 7   | Optional                  |
| SG3 Board         |      | 8   |                           |
| SG3 Board         | B787 | 9   | Optiona                   |
| Handset Type 1018 | B433 |     | NA only. Common with J-C2 |

**ARDF DF3000**

**B789**





# ARDF DF3000 B789

## TABLE OF CONTENTS

|   |           |
|---|-----------|
| <b>1. REPLACEMENT AND ADJUSTMENT .....</b>                  | <b>1</b>  |
| 1.1 COVERS AND TRAY .....                                   | 1         |
| 1.1.1 REAR COVER .....                                      | 1         |
| 1.1.2 FRONT COVER AND ORIGINAL TRAY.....                    | 1         |
| 1.2 DOCUMENT FEED COMPONENTS .....                          | 2         |
| 1.2.1 ORIGINAL FEED UNIT .....                              | 2         |
| 1.2.2 PICK-UP ROLLER .....                                  | 2         |
| 1.2.3 FEED BELT .....                                       | 3         |
| 1.2.4 SEPARATION ROLLER.....                                | 4         |
| 1.3 ELECTRICAL COMPONENTS .....                             | 5         |
| 1.3.1 ARDF DRIVE BOARD AND DF POSITION SENSOR .....         | 5         |
| 1.3.2 ORIGINAL LENGTH SENSORS AND TRAILING EDGE SENSOR..... | 5         |
| 1.3.3 ORIGINAL SET SENSOR.....                              | 6         |
| 1.3.4 ORIGINAL SIZE SENSORS AND SKEW CORRECTION SENSOR ...  | 6         |
| 1.3.5 STAMP SOLENOID AND ORIGINAL EXIT SENSOR .....         | 7         |
| 1.4 ORIGINAL FEED DRIVE .....                               | 8         |
| 1.4.1 FEED MOTOR .....                                      | 8         |
| 1.4.2 PICK-UP SOLENOID .....                                | 8         |
| 1.4.3 INVERTER SOLENOID .....                               | 9         |
| 1.4.4 FEED CLUTCH.....                                      | 10        |
| 1.4.5 TRANSPORT MOTOR.....                                  | 11        |
| <b>2. DETAILED DESCRIPTIONS.....</b>                        | <b>12</b> |
| 2.1 COMPONENT LAYOUT .....                                  | 12        |
| 2.1.1 MECHANICAL COMPONENT LAYOUT .....                     | 12        |
| 2.1.2 ELECTRICAL COMPONENT LAYOUT .....                     | 13        |
| 2.1.3 DRIVE LAYOUT.....                                     | 16        |
| 2.2 BASIC OPERATION .....                                   | 17        |
| 2.2.1 ORIGINAL SET AND SIZE DETECTION.....                  | 17        |
| 2.2.2 MIXED ORIGINAL SIZE MODE.....                         | 18        |
| 2.2.3 PICK-UP AND SEPARATION.....                           | 20        |

|  |           |
|--|-----------|
| 2.2.4 SKEW CORRECTION .....              | 21        |
| 2.2.5 ORIGINAL TRANSPORT AND EXIT .....  | 22        |
| 2.2.6 CONDITIONS FOR JAM DETECTION ..... | 23        |
| <b>3. SERVICE TABLES.....</b>            | <b>25</b> |
| 3.1 DIP SWITCHES .....                   | 25        |

# Read This First

## Safety and Symbols


### Replacement Procedure Safety

#### **CAUTION**

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

## Symbols Used in this Manual


This manual uses the following symbols.

: See or Refer to

: Screws

: Connector

: Clip ring


: E-ring



# 1. REPLACEMENT AND ADJUSTMENT


## 1.1 COVERS AND TRAY

### 1.1.1 REAR COVER

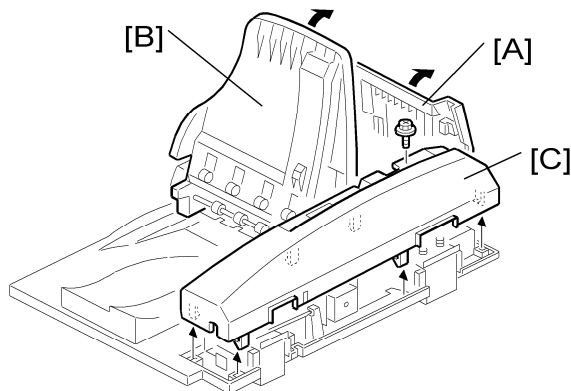

1. Open the left cover [A].
2. Open the original tray [B].
3. Rear cover [C] (⚙️ x 1, hook x 6)

### 1.1.2 FRONT COVER AND ORIGINAL TRAY

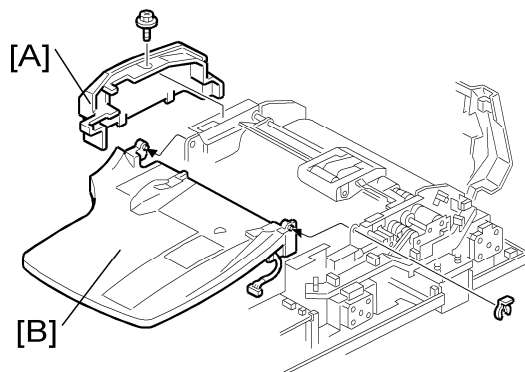


1. Open the left cover.
2. Rear cover (⚙️ "Rear Cover")
3. Front cover [A] (⚙️ x 1)

↓ Note

- Keep the original tray open when you remove the front cover.
4. Original tray [B] (⚙️ x 1, ⚙️ x 1)


## 1.2 DOCUMENT FEED COMPONENTS

### 1.2.1 ORIGINAL FEED UNIT

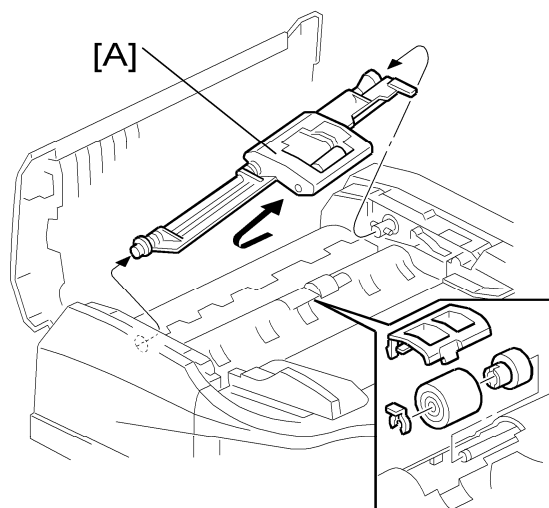


1. Open the left cover.
2. Original feed unit [A].

### 1.2.2 PICK-UP ROLLER

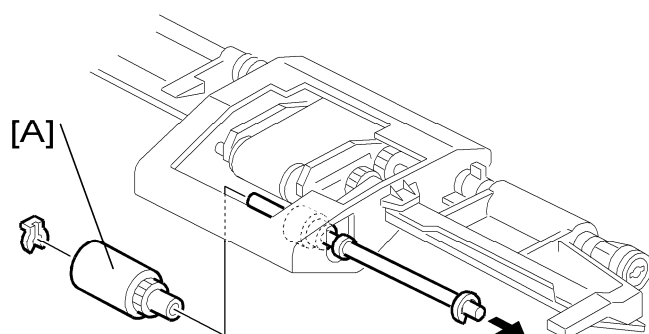

1. Open the left cover.
2. Original feed unit (☐ "Original Feed Unit")
3. Pick-up roller [A] (☐ x 1)


### 1.2.3 FEED BELT

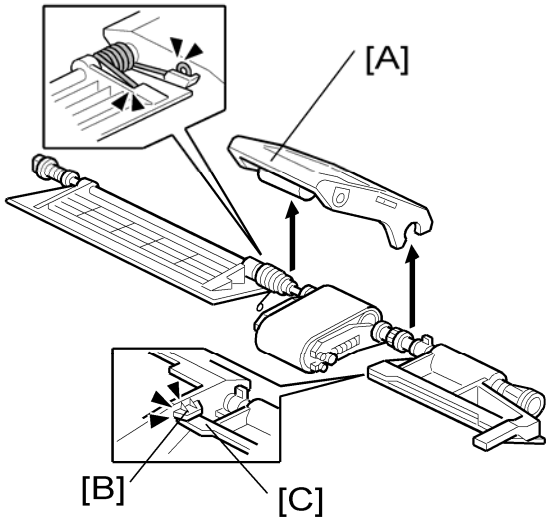

1. Open the left cover.
2. Original feed unit (Original Feed Unit)
3. Feed belt cover [A] (spring x 1)


**Note**

- When reassembling the feed belt cover, make sure that the projection [B] of the feed belt cover is on the guide plate rear [C].

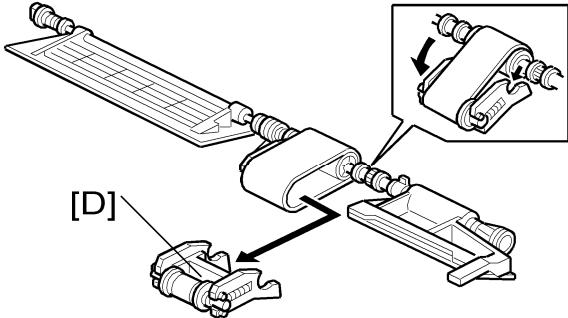


4. Belt tension unit [D]

## Document Feed Components

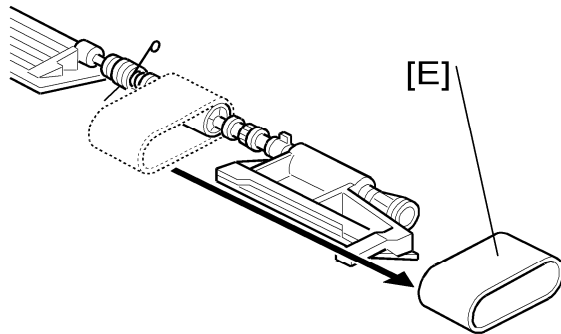

### 5. Feed belt [E]

#### 1.2.4 SEPARATION ROLLER

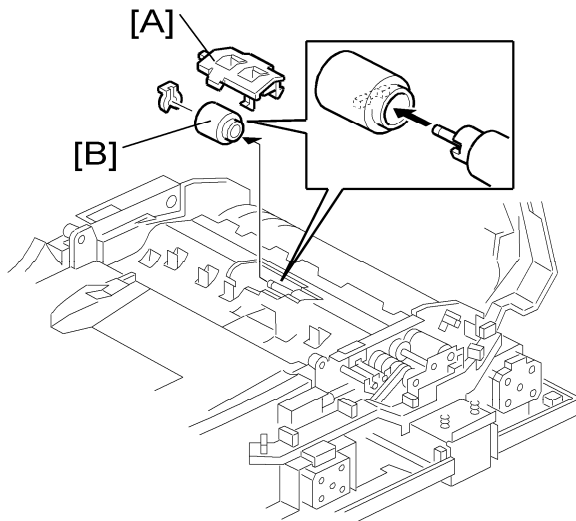


1. Open the left cover.
2. Separation roller cover [A].
3. Separation roller [B] (🔩 x 1)




## 1.3 ELECTRICAL COMPONENTS

### 1.3.1 ARDF DRIVE BOARD AND DF POSITION SENSOR

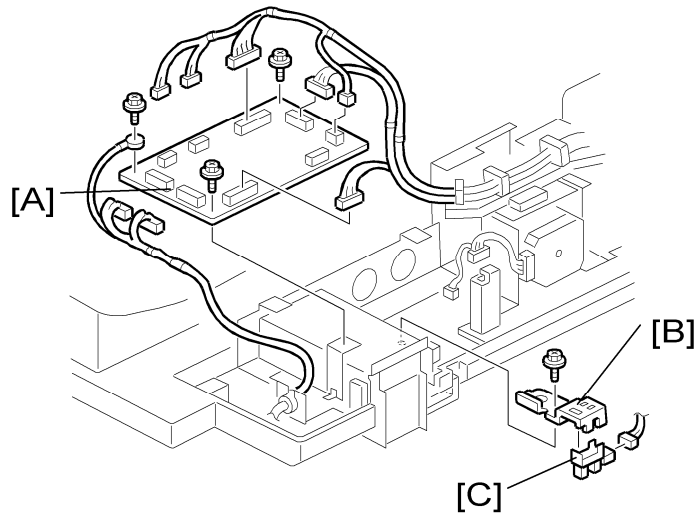

1. Rear cover (see "Rear Cover")
2. ARDF drive board [A] (⚙️ x 3, all 📏s)
3. DF position sensor with bracket [B] (🔧 x 1, 📏 x 1)
4. DF position sensor [C] (hook x 2)

### 1.3.2 ORIGINAL LENGTH SENSORS AND TRAILING EDGE SENSOR

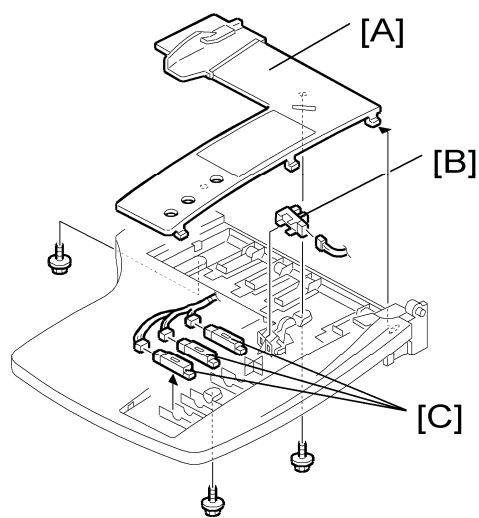


1. Original Tray (see "Front Cover and Original Tray")
2. Tray cover [A] (⚙️ x 3)

## Electrical Components


3. Original trailing edge sensor [B] (🔌 x 1)
4. Original length sensors [C] (🔌 x 1 each)

### 1.3.3 ORIGINAL SET SENSOR

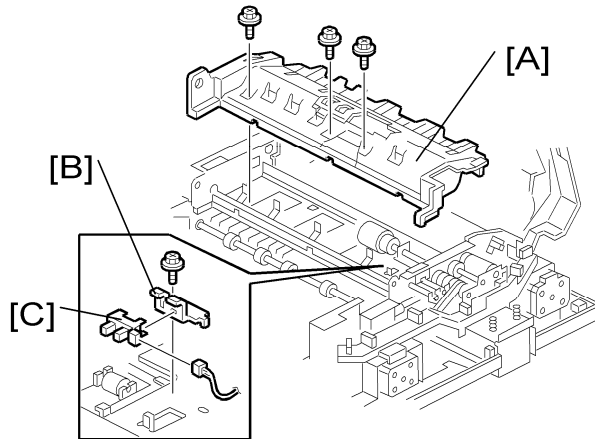


1. Open the left cover.
2. Original feed unit (see the "Original Feed Unit")
3. Original Tray (see the "Original Tray")
4. Original feed-in guide plate [A] (🔌 x 3).
5. Original set sensor bracket [B] (🔌 x 1)
6. Original set sensor [C]

### 1.3.4 ORIGINAL SIZE SENSORS AND SKEW CORRECTION SENSOR

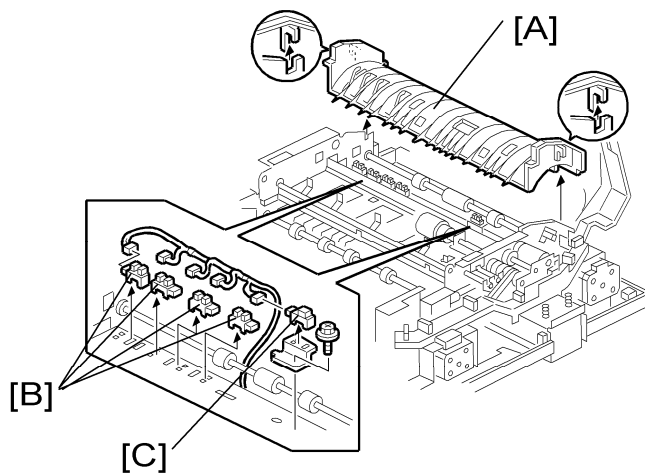

1. Original feed-in guide plate (see "Original Set Sensor")
2. Original turn guide plate [A] (hook x 1).
3. Original width sensors [B] (🔌 x 1 each) and skew correction sensor [C] with **bracket**


(🔧 x 1, 📏 x 1)

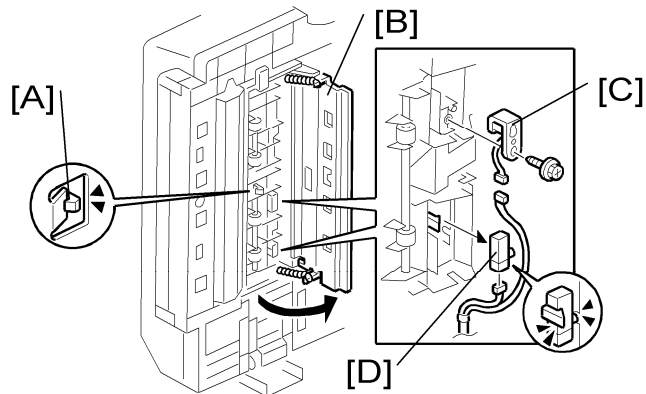**1.3.5 STAMP SOLENOID AND ORIGINAL EXIT SENSOR**

1. Open the ARDF.
2. Remove the left edge of the platen sheet.
3. Release the hook [A].
4. Open the original exit guide plate [B]
5. Stamp solenoid [C] (🔧 x 1, 📏 x 1)
6. Original exit sensor [D] (📏 x 1, hook x 1)


## 1.4 ORIGINAL FEED DRIVE

### 1.4.1 FEED MOTOR

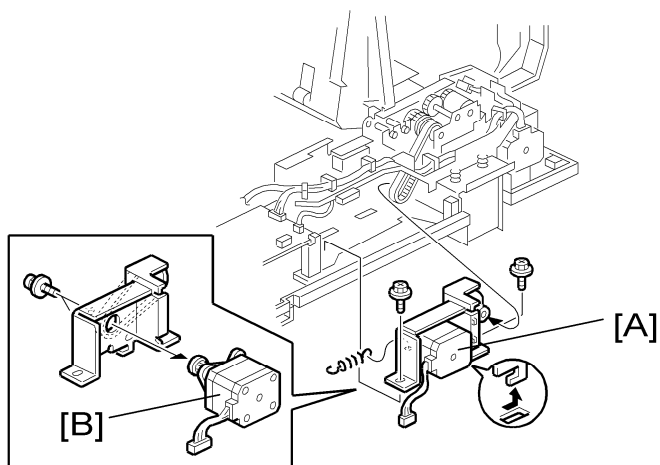


1. Rear cover (see "Rear Cover")
2. Feed motor with bracket [A] (⚙️ x 2, 📏 x 1, spring x 1)
3. Feed motor [B] (⚙️ x 2)

### 1.4.2 PICK-UP SOLENOID

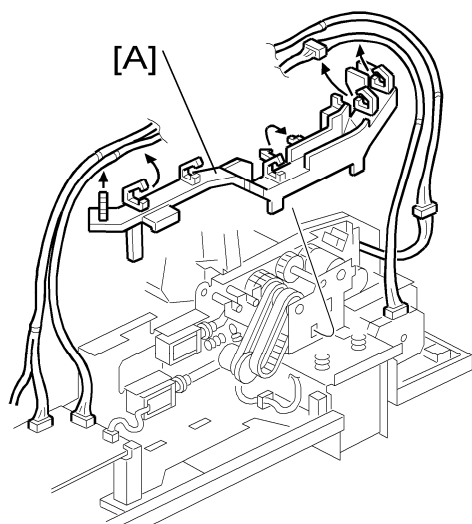


1. Rear cover (see "Rear Cover")
2. Harness guide [A] (all 📏s)

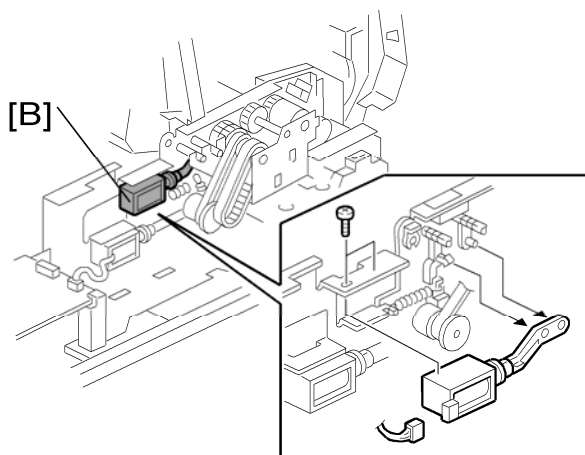

3. Pick-up solenoid [B] (⚙️ x 2, 🛠️ x 1)


### 1.4.3 INVERTER SOLENOID

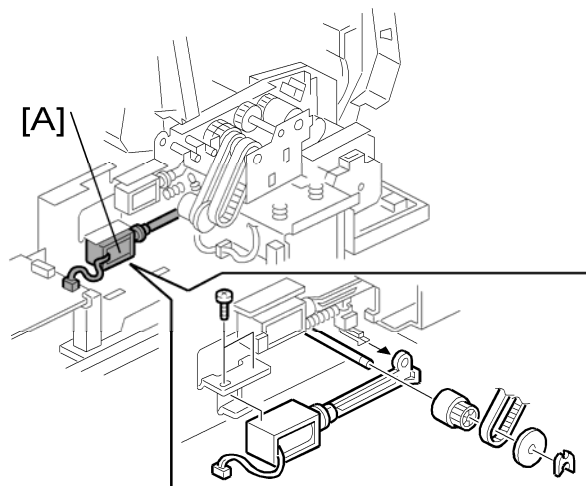


1. Rear cover (see "Rear Cover")
2. Harness guide (see "Pick-up Solenoid")
3. Inverter solenoid [A] (⚙️ x 2, 🛠️ x 1, 🛡️ x 1, gear x 1, gear cover x 1)

## Original Feed Drive

### 1.4.4 FEED CLUTCH

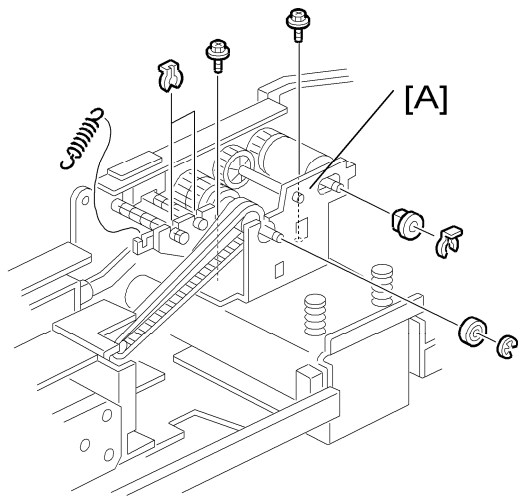


1. Rear cover (see "Rear Cover")
2. Harness guide (see "Pick-up Solenoid")
3. Bracket [A] (⚙️ x 2, ⚙️ x 3, ⚙️ x 1, bushing x 1, spring x 1)

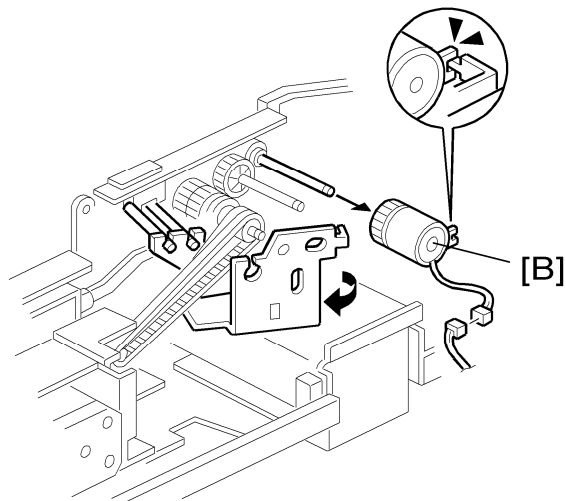

4. Slide the bracket.
5. Feed clutch [B] (⚙️ x 1)

## 1.4.5 TRANSPORT MOTOR

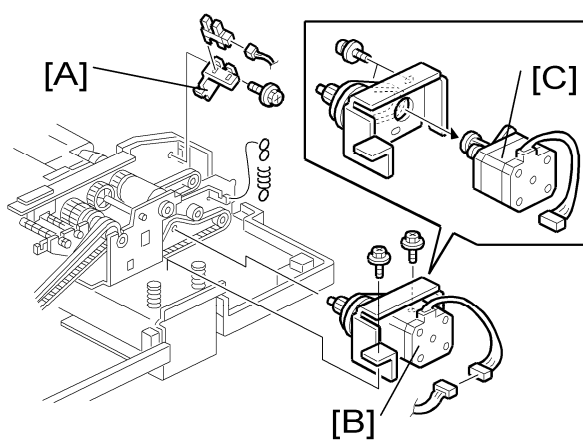


1. Rear cover (see "Rear Cover")
2. Harness guide (see "Pick-up Solenoid")
3. Left cover sensor with bracket [A] (🔩 x 1, 📏 x 1)
4. Transport motor with bracket [B] (🔩 x 2, 📏 x 1, spring x 1)
5. Transport motor [C] (🔩 x 2)

## 2. DETAILED DESCRIPTIONS

### 2.1 COMPONENT LAYOUT

#### 2.1.1 MECHANICAL COMPONENT LAYOUT

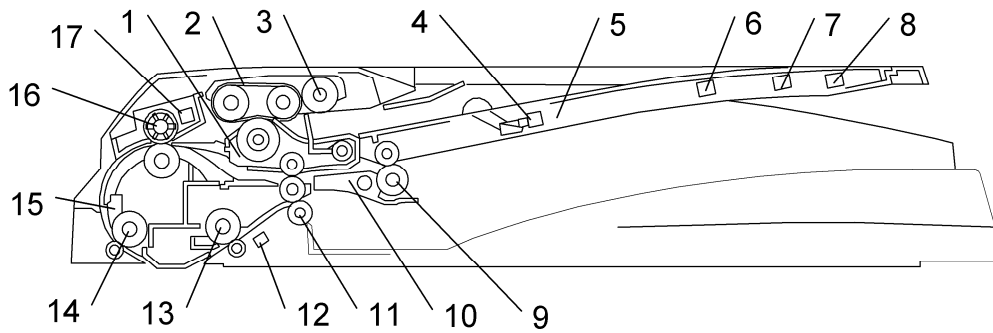


|                                  |                            |
|----------------------------------|----------------------------|
| 1. Separation Roller             | 10. Junction Gate          |
| 2. Paper Feed Belt               | 11. Exit Roller            |
| 3. Pick-up Roller                | 12. Original Exit Sensor   |
| 4. Original Trailing Edge Sensor | 13. Transport Roller       |
| 5. Original Tray                 | 14. Registration Roller    |
| 6. Original Length Sensor 1      | 15. Registration Sensor    |
| 7. Original Length Sensor 2      | 16. Skew Correction Roller |
| 8. Original Length Sensor 3      | 17. Skew Correction Sensor |
| 9. Inverter Roller               |                            |



## 2.1.2 ELECTRICAL COMPONENT LAYOUT


### Sensors

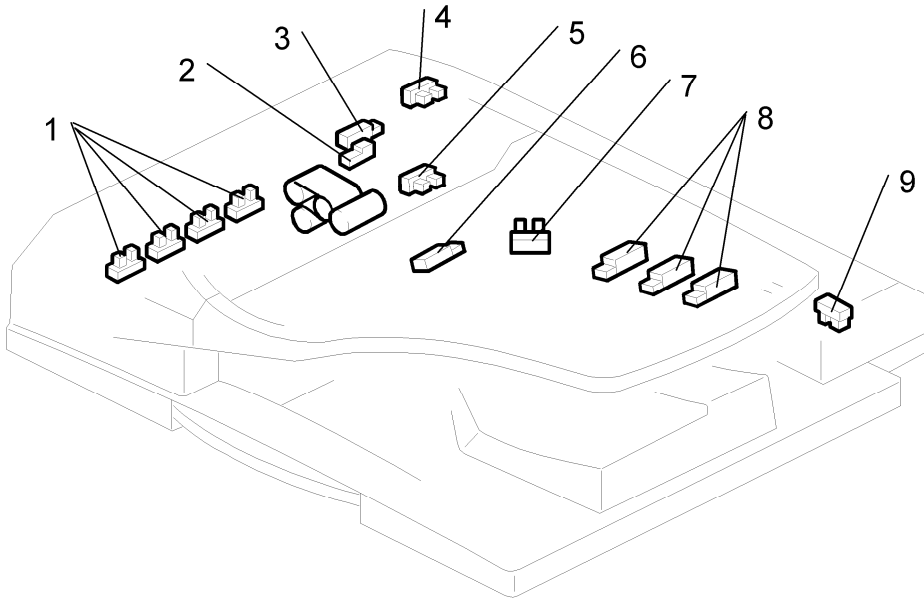

1. Original Width Sensor
2. Skew Correction Sensor
3. Registration Sensor
4. Cover Sensor
5. Original Set Sensor
6. Exit Sensor
7. Original Sensor
8. Original Length Sensor
9. DF Position Sensor

Component Layout

**Drive Components**

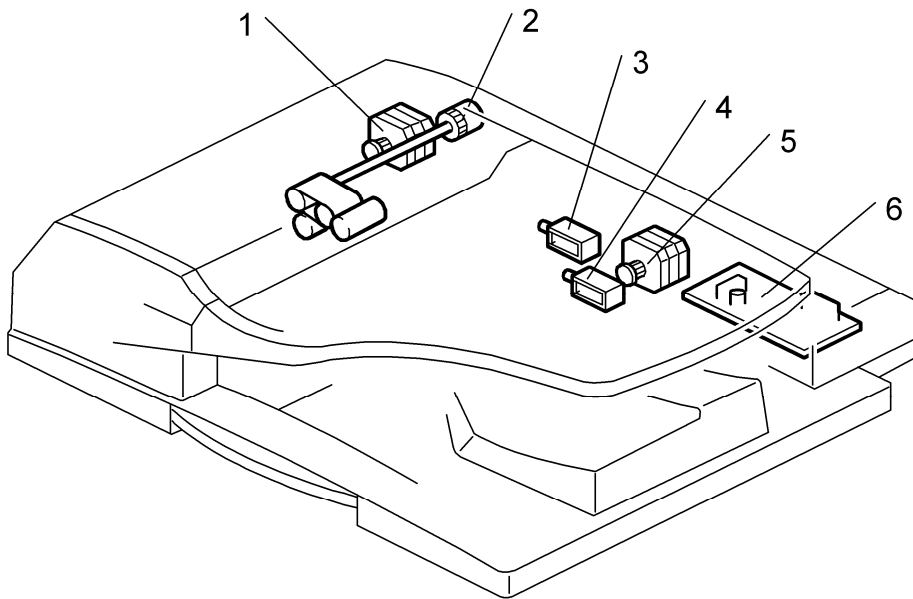

- 1. Transport Motor
- 2. Feed Clutch
- 3. Pick-up Solenoid
- 4. Inverter Solenoid
- 5. Feed Motor
- 6. Main Board

**Electrical Component Descriptions**


| Symbol         | Name            | Function   | Index No. |
|----------------|-----------------|--|-----------|
| <b>Motors</b>  |                 |  |           |
| M1             | Feed            | Drives the feed belt, separation, pick-up, and reverse table rollers.                  | 5         |
| M2             | Transport       | Drives the transport and exit rollers  | 1         |
| <b>Sensors</b> |                 |  |           |
| S9             | DF Position     | Detects whether the DF is lifted or not.   | 9         |
| S5             | Skew Correction | Detects the leading edge of the original to turn off the DF feed and transport motors. | 2         |
| S8             | Registration    | Detects the original exposure timing, and checks for original misfeeds.                | 3         |
| S10            | Cover Sensor    | Detects whether the feed-in cover is opened or not.                                    | 4         |

|                          |                            |   |   |
|--------------------------|----------------------------|---|---|
| S1                       | Original Width Sensor - S  | Detects the original width - S.   | 1 |
| S2                       | Original Width Sensor - M  | Detects the original width - M.   | 1 |
| S3                       | Original Width Sensor - L  | Detects the original width - L.   | 1 |
| S4                       | Original Width Sensor - LL | Detects the original width - LL.  | 1 |
| S14                      | Original Length - S        | Detects the original length - S.  | 8 |
| S13                      | Original Length - M        | Detects the original length - M.  | 8 |
| S12                      | Original Length - L        | Detects the original length - L.  | 8 |
| S7                       | Original Set               | Detects if an original is on the feed table.  | 5 |
| S6                       | Original Exit              | Detects the leading edge of the original to turn on the junction gate solenoid and checks for original misfeeds.<br>Detects the trailing edge of the original to turn off the transport and feed motor and junction gate solenoid.<br>In single-sided mode, used to detect original misfeeds. | 6 |
| S11                      | Original                   | Detects the trailing edge of the last original to stop copy paper feed and to turn off the transport motor, and checks for original misfeeds.   | 7 |
| <b>Solenoids</b>         |                            |   |   |
| SOL1                     | Pick-up                    | Controls the up-down movement of the original table.  | 3 |
| SOL2                     | Stamp                      | Energizes the stamper to mark the original.   |   |
| SOL3                     | Junction Gate              | Opens and closes the junction gate.   | 4 |
| <b>Magnetic Clutches</b> |                            |   |   |
| MC1                      | Feed                       | Drives the feed belt, separation, pick-up, and skew correction rollers  | 5 |
|                          |                            |   |   |

## Component Layout

| PCBs |      |   |   |
|------|------|---|---|
| PCB1 | Main | Interfaces the sensor signals with the copier, and transfers the magnetic clutch, solenoid and motor drive signals from the copier. | 6 |
|      |      |   |   |

### 2.1.3 DRIVE LAYOUT

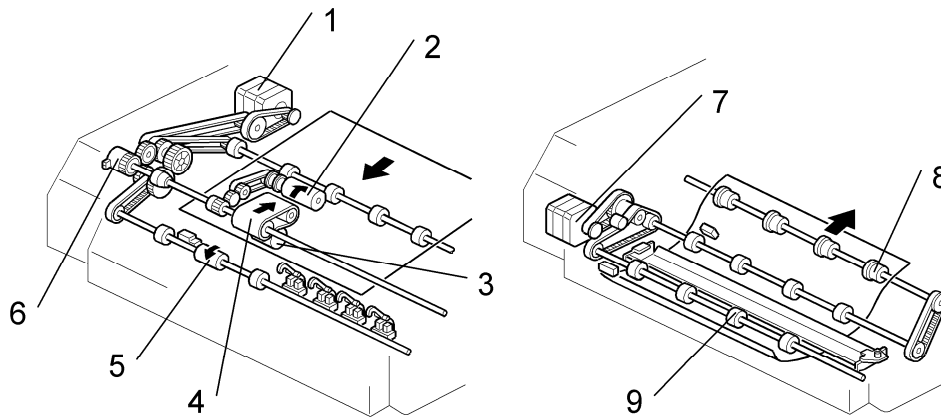


1. Feed Motor
2. Pick-up Roller
3. Separation Roller
4. Feed Belt
5. Skew Correction Roller
6. Feed Clutch
7. Transport Motor
8. Exit Roller
9. Registration Roller

- Feed Motor: Drives the feed belt, separation, pick-up, and skew correction rollers.
- Transport Motor: Drives the registration and exit rollers.

## 2.2 BASIC OPERATION

### 2.2.1 ORIGINAL SET AND SIZE DETECTION

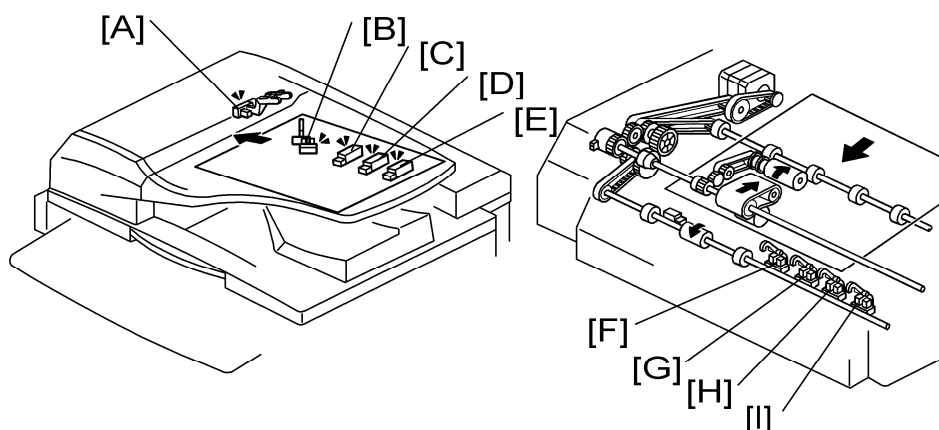

The original set sensor [A] detects if the original is set or not. The original sensor [B] detects if the original is on the original tray or not (this lets the machine know as early as possible, whether there is another original on the tray).

The original size detection mechanism consists of the four original width sensors ([F]: Width Sensor S, [G]: Width Sensor M, [H]: Width Sensor L, [I]: Width Sensor LL) and three original length sensors ([C]: Length Sensor S, [D]: Length Sensor M, [E]: Length Sensor L). Based on the combined output of the length sensors and the width sensors, the machine can detect the size of the original. This integrated detection mechanism is detailed in the table below.

| Size                | Width Sensor |    |    |    | Length Sensor |    |    | Area           |                |
|---------------------|--------------|----|----|----|---------------|----|----|----------------|----------------|
|                     | S            | M  | L  | LL | S             | M  | L  | LT             | A/B            |
| A3/SEF (297 x 420)  | ON           | ON | ON | ON | ON            | ON | ON | O              | O              |
| B4/SEF (257 x 364)  | ON           | ON | -  | -  | ON            | ON | ON | -              | O              |
| A4/SEF (210 x 297)  | ON           | -  | -  | -  | ON            | ON | -  | O              | O              |
| A4/LEF (297 x 210)  | ON           | ON | ON | ON | -             | -  | -  | O              | O              |
| B5/SEF (182 x 257)  | -            | -  | -  | -  | ON            | -  | -  | -              | O              |
| B5/LEF (257 x 182)  | ON           | ON | -  | -  | -             | -  | -  | -              | O              |
| A5/SEF (148 x 210)  | -            | -  | -  | -  | -             | -  | -  | -              | O              |
| A5/LEF (210 x 148)  | ON           | -  | -  | -  | -             | -  | -  | -              | O              |
| 11" x 17"/SEF (DLT) | ON           | ON | ON | -  | ON            | ON | ON | O <sup>1</sup> | O <sup>5</sup> |

## Basic Operation

|                            |    |    |    |   |    |    |    |                |                |
|----------------------------|----|----|----|---|----|----|----|----------------|----------------|
| 11" x 15"/SEF              | ON | ON | ON | - | ON | ON | ON | ● <sup>1</sup> | -              |
| 10" x 14"/SEF              | ON | ON | -  | - | ON | ON | ON | O              | -              |
| 8.5" x 14"/SEF (LG)        | ON | -  | -  | - | ON | ON | ON | O <sup>2</sup> | -              |
| 8.5" x 13"/SEF (F4)        | ON | -  | -  | - | ON | ON | ON | ● <sup>2</sup> | O              |
| 8.25" x 13"/SEF            | ON |    |    |   | ON | ON | ON | -              | -              |
| 8" x 13"/SEF (F)           | ON | -  | -  | - | ON | ON | ON | -              | -              |
| 8.5" x 11"/SEF (LT)        | ON | -  | -  | - | ON | -  | -  | O <sup>3</sup> | O <sup>6</sup> |
| 8.5" x 11"/LEF (LT)        | ON | ON | ON | - | -  | -  | -  | O <sup>4</sup> | O <sup>7</sup> |
| 7.25" x 10.5"/SEF (US EXE) | ON | -  | -  | - | ON | -  | -  | O              | -              |
| 10.5" x 7.25"/SEF (US EXE) | ON | ON | ON | - | -  | -  | -  | ● <sup>4</sup> | -              |
| 10" x 8"/SEF               | ON | -  | -  | - | ON | -  | -  | ● <sup>3</sup> | -              |
| 5.5" x 8.5"/SEF (HLT)      | -  | -  | -  | - | -  | -  | -  | O              | -              |
| 5.5" x 8.5"/LEF (HLT)      | ON | -  | -  | - | -  | -  | -  | O              | -              |
| 267 mm x 390 mm            | ON | ON | ON | - | ON | ON | ON | -              | ● <sup>5</sup> |
| 195 mm x 267 mm            | ON | -  | -  | - | ON | -  | -  | -              | ● <sup>6</sup> |
| 267 mm x 195 mm            | ON | ON | ON | - | -  | -  | -  | -              | ● <sup>7</sup> |

### Symbol

O: Yes (Default), ●: Yes (Can select this with SP mode), ON: Paper present, LT: North America, A/B: Europe, Asia

#### ↓ Note

- For "O/●" mark, which has superscripted number, it is possible to change the original detection size with SP6-016. For example, instead of LT (O<sup>3</sup>), the machine can be set up to detect 10" x 8" (●<sup>3</sup>).
- The F size can be selected with SP5-126. The default is 8.5" x 13"
- The machine cannot detect more than one size of original in the same job.

## 2.2.2 MIXED ORIGINAL SIZE MODE

This section explains what happens when the user selects mixed original size mode.

Because this ARDF is a sheet-through document feeder, the method for original document width detection is the same as when the originals are the same size, but the document length detection method is different. Therefore, the scanning speed is slightly slower.

**Document length detection**

From when the skew correction sensor switches on until it switches off, the CPU counts the transport motor pulses. The number of pulses determines the length of the original.

**Feed-in cycle**

When the original size for the copy modes listed below cannot be determined, the image cannot be correctly scaled (reduced or enlarged) or processed until the original's length has been accurately detected. The length must be determined before the image is scanned.

|                     |
|---------------------|
| Auto Reduce/Enlarge |
| Centering           |
| Erase Center/Border |
| Booklet             |
| Image Repeat        |


The originals follow this path:

1. Length detection → Scanning glass → Inverter table
2. Inverter table → Scanning glass → Inverter table (restores the original order)
3. Inverter table → Scanning glass (image scanned) → Exit tray

**Normal feed-in**

In a copy mode other than those listed above, when the reduction/enlargement ratio has been determined, the originals are scanned normally. In order to store the scanned images, a large area of memory (the detected original width x 432 mm length) is prepared. Next, only the portion of the image up to the detected original length is read from memory and printed.

### 2.2.3 PICK-UP AND SEPARATION

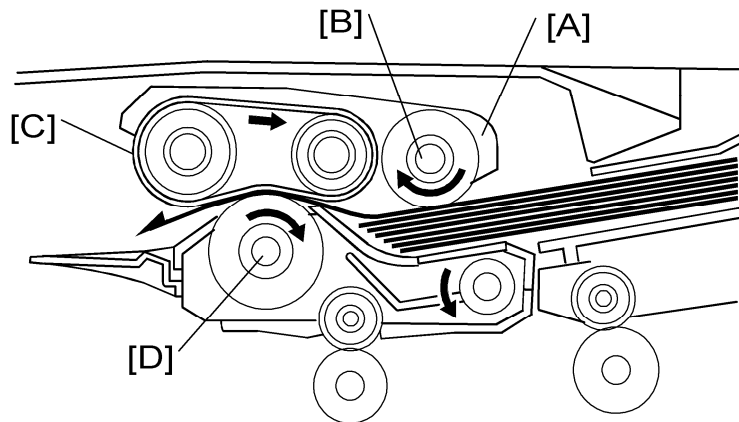

The original is set with the image facing up. The original pushes actuator and the original set sensor is activated.


After pressing the start button, the feed clutch is activated and the original feed unit [A] moves down. At the same time, the pick-up solenoid is activated and the original table lifts until the original comes in contact with the pick-up roller [B]. The pick-up roller then feeds the top sheet of paper.

After being fed from feed belt [C], the topmost sheet is separated from the stack by the separation roller [D] and sent to the skew correction roller.

The mechanism is an FRR system, consisting of the original feed belt [C] and separation roller [D].




## 2.2.4 SKEW CORRECTION

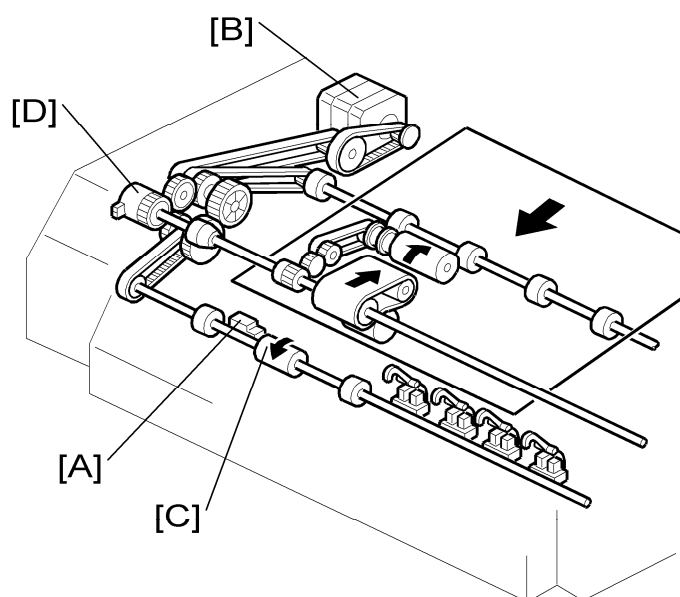

When an original is fed into the feeder, the feed motor [B] rotates forwards. At this time, the feed belt turns but the skew correction roller [C] does not. Because of this, when the leading edge of the paper gets to the skew correction roller, skew in the original is removed. A short time after the leading edge of the original turns on the skew correction sensor [A], the feed motor [B] turns off for 40 ms and rotates in reverse. At this time, the skew correction roller [C] and the feed belt both turn, and original feed continues. The original is fed by the skew correction roller after the feed clutch [D] has turned off.


## 2.2.5 ORIGINAL TRANSPORT AND EXIT

### *Single-Sided Originals*

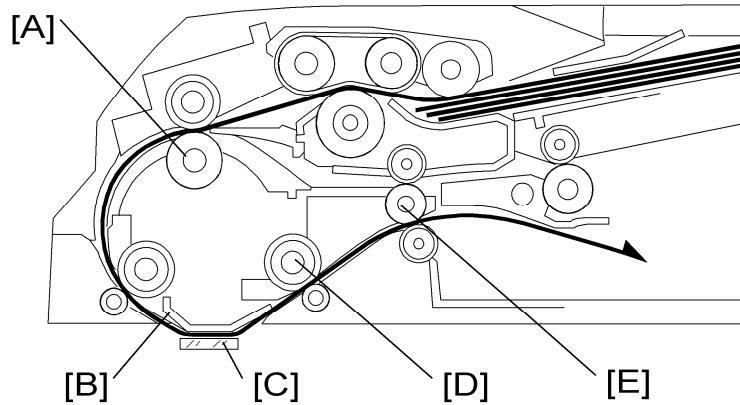

The feed motor feeds the separated original to the skew correction roller [A] at maximum speed. After skew correction, the feed and transport motors feed the original through the scanning area at a lower speed (the scanning area contains the original exposure guide [B] and DF exposure glass [C]). After scanning, the original is fed out by the transport roller [D] and exit roller [E].

### *Double-Sided Originals*

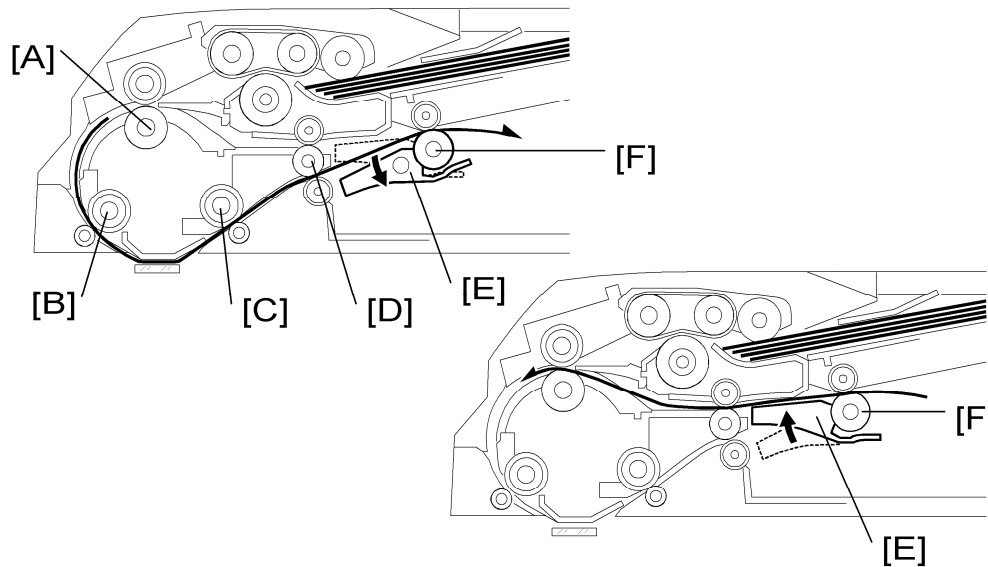


After skew correction, the feed and transport motors drive the skew correction roller [A], registration roller [B], transport roller [C] and the exit roller [D]. The front side of the original is then scanned.

When the original exit sensor detects the leading edge of the original, the junction gate solenoid is activated and the junction gate [E] opens. The original is then transported

towards the inverter table.

Soon after the trailing edge of the original passes the exit sensor, the junction gate solenoid switches off and the junction gate [E] is closed. When the original has been fed onto the inverter table, the feed motor switches on in reverse. The original is then fed by the inverter roller [F], and then by the skew correction roller [A] and registration roller [B] to the scanning area (where the reverse side will be scanned).

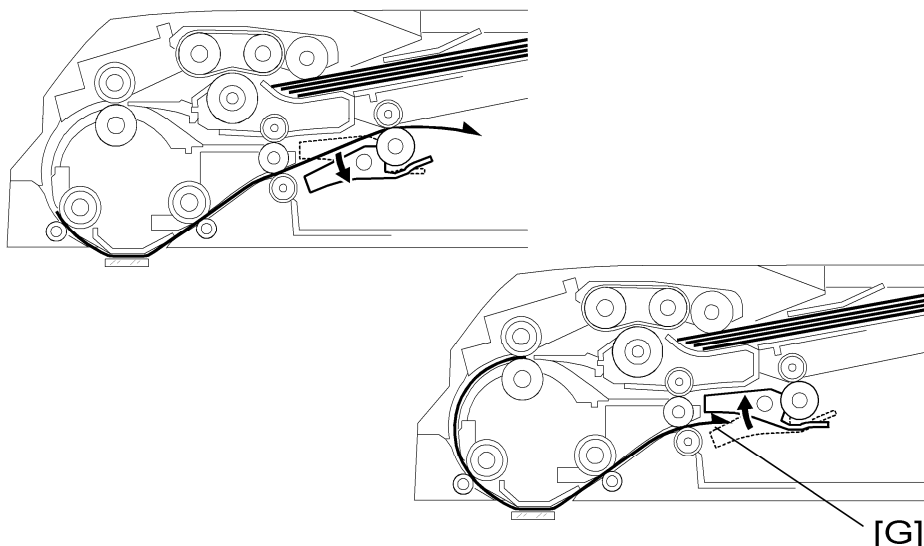

The original is then sent to the inverter table again to be turned over. This is done so that the duplex copies will be properly stacked front side down in the exit tray [G] in the correct order.

### **Original Sensor**

During one-to-one copying, copy paper is fed to the skew correction roller in advance (while the original is still being scanned), to increase the copy speed. The original sensor monitors the stack of originals in the feeder, and detects when the trailing edge of the last page has been fed in. The main CPU then stops the copier from feeding an unwanted extra sheet of copy paper.

## **2.2.6 CONDITIONS FOR JAM DETECTION**

| Jam Mode | Detection Timing   |
|----------|--|
| Initial  | When turning on the machine, the skew correction sensor, registration sensor or exit sensor detects an original.                 |
|          | When the cover is closed or DF is down, the skew correction sensor, registration sensor or exit sensor detects an original.      |
|          | When the cover is opened or DF is lifted up, the skew correction sensor, registration sensor or exit sensor detects an original. |

Basic Operation

|                          |  |
|--------------------------|--|
| Sensor stays on too long | The skew correction sensor does not turn off even if the original was fed by the maximum length of the original + 150 mm after the skew correction sensor turned on. |
|                          | The registration sensor does not turn off even if the original was fed by its length x 1.5 after the registration sensor turned on.                                  |
|                          | The exit sensor does not turn off even if the original was fed by its length x 1.5 after the exit sensor turned on.  |
| Sensor does not come on  | The skew correction sensor does not turn on even if the original was fed by transport path length x 1.5.   |
|                          | The registration sensor does not turn on even if the original was fed by transport path length x 1.5 after the skew correction sensor turned on.                     |
|                          | The exit sensor does not turn on even the original was fed by transport path length x 1.5 after the skew correction sensor turned on.                                |

## 3. SERVICE TABLES

### 3.1 DIP SWITCHES

| DIP-SW |   |   |   | Function  |
|--------|---|---|---|---|
| 1      | 2 | 3 | 4 |   |
| 0      | 0 | 0 | 0 | Normal operating mode (Default)                     |
| 0      | 0 | 0 | 1 | Free run: With original: One-sided mode: 100% speed |
| 0      | 0 | 1 | 0 | Free run: With original: Two-sided mode: 100% speed |
| 0      | 0 | 1 | 1 | Free run: No original: One-sided mode: 100% speed   |
| 0      | 1 | 0 | 0 | Free run: No original: Two-sided mode: 100% speed   |
| 0      | 1 | 0 | 1 | Free run: With original: One-sided mode: 32% speed  |
| 0      | 1 | 1 | 0 | Free run: With original: Two-sided mode: 32% speed  |
| 0      | 1 | 1 | 1 | Free run: With original: One-sided mode: 70% speed  |
| 1      | 0 | 0 | 0 | Free run: With original: Two-sided mode: 70% speed  |
| 1      | 0 | 0 | 1 | Free run: With original: One-sided mode: 200% speed |
| 1      | 0 | 1 | 0 | Free run: With original: Two-sided mode: 200% speed |
| 1      | 0 | 1 | 1 | Transport Motor On                                  |
| 1      | 1 | 0 | 0 | Feed Motor On                                       |
| 1      | 1 | 0 | 1 | Transport Motor On with random mode                 |
| 1      | 1 | 1 | 0 | Feed Motor On with random mode                      |
| 1      | 1 | 1 | 1 |   |



**1 BIN TRAY**  
**B790**





# 1-BIN TRAY B790

## TABLE OF CONTENTS

|   |          |
|---|----------|
| <b>1. REPLACEMENT AND ADJUSTMENT .....</b>            | <b>1</b> |
| 1.1 PAPER SENSOR REMOVAL .....                        | 1        |
| 1.2 1-BIN TRAY EXIT SENSOR AND LED CONTROL BOARD..... | 1        |
| <b>2. DETAILED DESCRIPTIONS.....</b>                  | <b>2</b> |
| 2.1 COMPONENT LAYOUT .....                            | 2        |
| 2.1.1 MECHANICAL COMPONENT LAYOUT .....               | 2        |
| 2.1.2 ELECTRICAL COMPONENT LAYOUT .....               | 2        |
| 2.2 ELECTRICAL COMPONENT DESCRIPTIONS.....            | 3        |
| 2.3 BASIC OPERATION .....                             | 4        |



# Read This First

## Safety and Symbols


### Replacement Procedure Safety

#### **CAUTION**

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

### Symbols Used in this Manual


This manual uses the following symbols.

: See or Refer to

: Screws

: Connector


: Clip ring

: E-ring



# 1. REPLACEMENT AND ADJUSTMENT


## 1.1 PAPER SENSOR REMOVAL

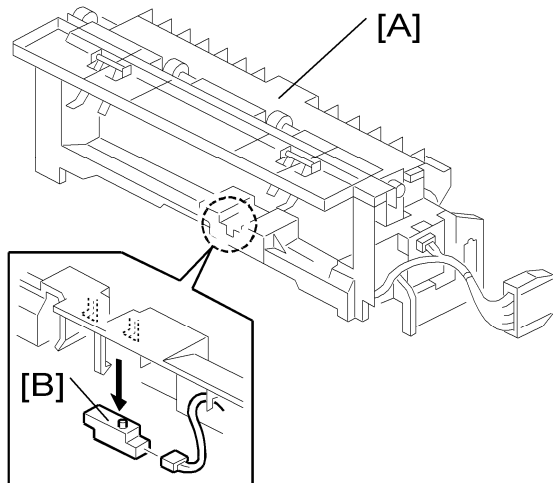

1. 1-bin-tray
2. 1-bin sorter unit [A]
3. Paper sensor [B] (☐ x 1, hook x 3)

## 1.2 1-BIN TRAY EXIT SENSOR AND LED CONTROL

### BOARD

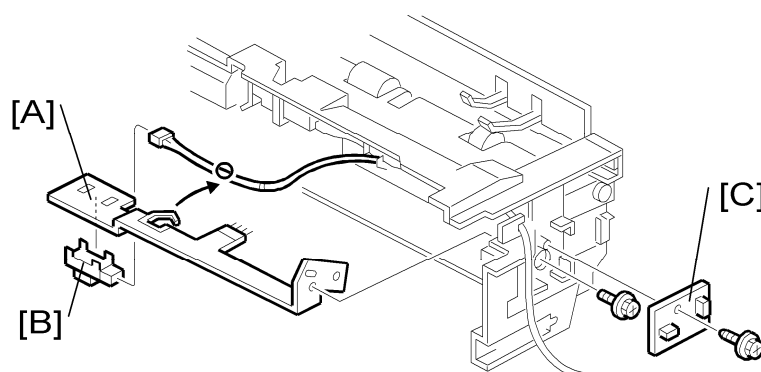


1. 1-bin tray
2. 1-bin sorter unit
3. Sensor bracket [A] (☐ x 1, ☐ x 1).
4. Remove the 1-bin tray exit sensor [B] (☐ x 1, hook x 4)
5. LED control board [C] (☐ x 1, ☐ x 2)

## 2. DETAILED DESCRIPTIONS


### 2.1 COMPONENT LAYOUT

#### 2.1.1 MECHANICAL COMPONENT LAYOUT

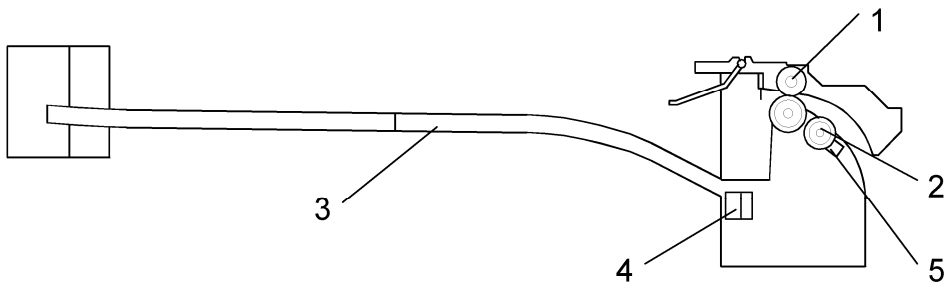

1. Exit Roller
2. Drive Gear
3. Paper Tray
4. Paper Sensor
5. 1-Bin Tray Exit Sensor

#### 2.1.2 ELECTRICAL COMPONENT LAYOUT

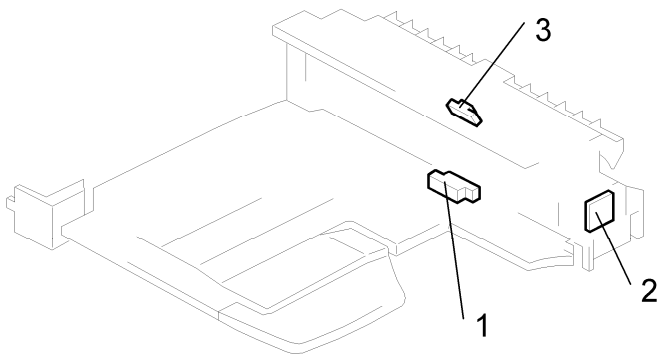

1. Paper Sensor
2. LED Control Board
3. 1-Bin Tray Exit Sensor

## 2.2 ELECTRICAL COMPONENT DESCRIPTIONS

| Symbol         | Name              | Function                                    | Index No. |
|----------------|-------------------|---|-----------|
| <b>Sensors</b> |                   |   |           |
| S1             | Paper             | Detects whether there is paper on the tray. | 1         |
| S2             | 1-Bin Tray Exit   | Detects a paper jam.                        | 3         |
| <b>PCB</b>     |                   |   |           |
| PCB1           | LED Control Board | Indicates when there is paper in the tray.  | 2         |

## **2.3 BASIC OPERATION**

At the appropriate time after the leading edge of the first sheet of copy paper reaches the copier's registration roller, the junction gate solenoid turns on to switch the junction gate to direct the paper to the 1-bin paper tray.

The junction gate solenoid turns off at the appropriate time after the paper is directed to the 1-bin paper tray. The main motor in the copier stops after the final sheet passes the 1-bin tray exit sensor and arrives on the tray.

The paper sensor turns on when there is paper in the tray, and the paper indicator turns on.

The tray can be opened for easier jam removal by swinging the tray to the left.



**INTERNAL SHIFT TRAY**  
**B791**



# INTERNAL SHIFT TRAY B791

## TABLE OF CONTENTS

|  |          |
|--|----------|
| <b>1. REPLACEMENT AND ADJUSTMENT .....</b>     | <b>1</b> |
| 1.1 TRAY COVER.....                            | 1        |
| 1.2 TRAY MOTOR AND HALF TURN SENSOR BOARD..... | 2        |
| <b>2. DETAILED DESCRIPTIONS.....</b>           | <b>3</b> |
| 2.1 COMPONENT LAYOUT .....                     | 3        |
| 2.2 BASIC OPERATION .....                      | 4        |



# Read This First

## Safety and Symbols


### Replacement Procedure Safety

#### **CAUTION**

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

### Symbols Used in this Manual


This manual uses the following symbols.


: See or Refer to

: Screws

: Connector

: Clip ring


: Clamp

: E-ring



# 1. REPLACEMENT AND ADJUSTMENT

## 1.1 TRAY COVER

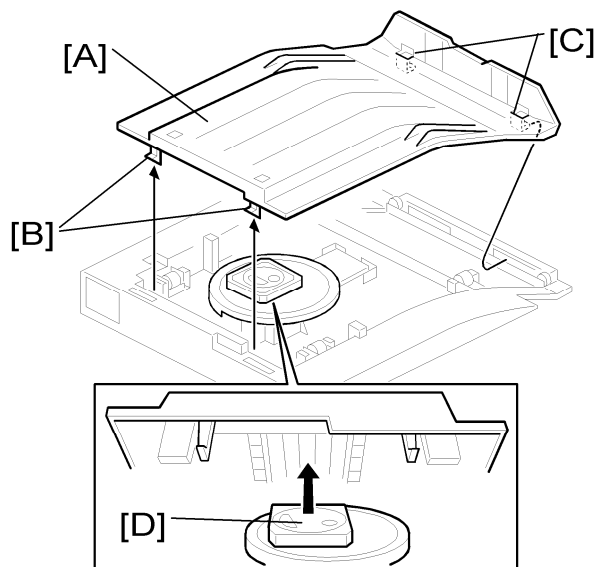


1. Remove the tray cover [A] by pressing on the two pawls [B] on the left side of the cover.

– When Attaching the Tray Cover –



- The right side of the tray cover should be attached first.
1. Fit the pawls [C] on the shift tray.
  2. Align the square [D] so that it fits into the groove in the underside of the tray cover and does not interfere with the attachment of the cover.
  3. Complete the attachment by inserting the left side pawls [B] into place.

## 1.2 TRAY MOTOR AND HALF TURN SENSOR BOARD

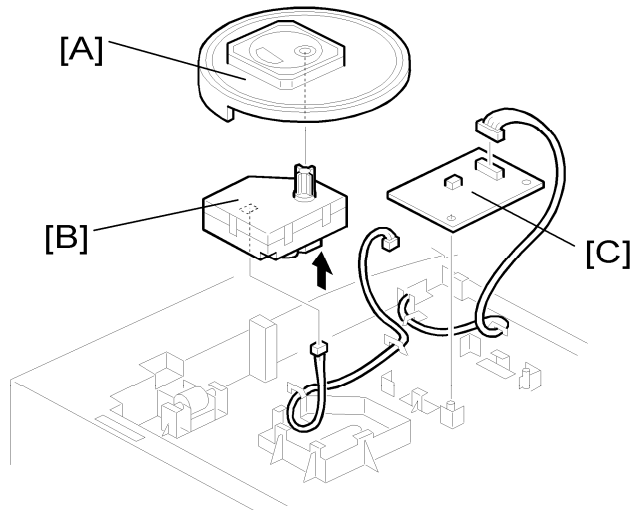


1. Slip disc [A]
2. Tray motor [B] (1 x 1)
3. Half turn sensor board [C] (1 x 1).




## 2. DETAILED DESCRIPTIONS

### 2.1 COMPONENT LAYOUT

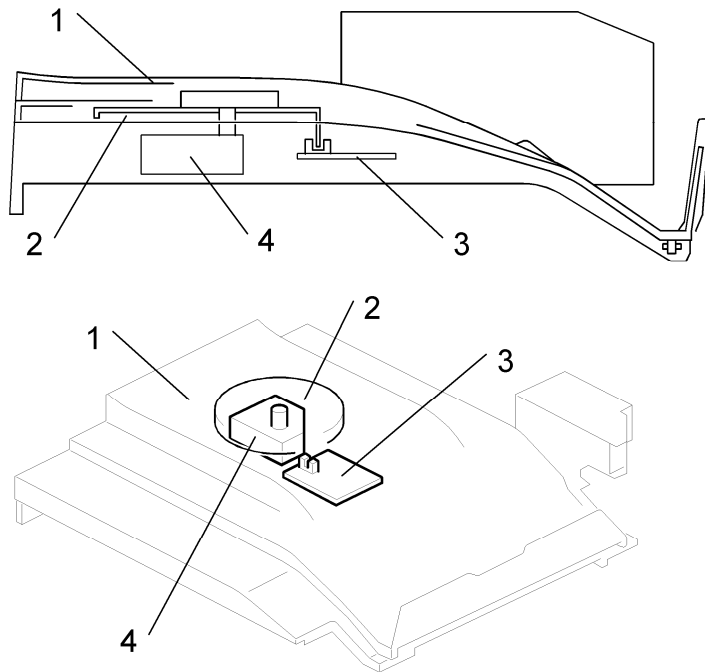

- 1. Tray Cover
- 2. Slip Disc
- 3. Tray Motor
- 4. Half Turn Sensor Board

## 2.2 BASIC OPERATION

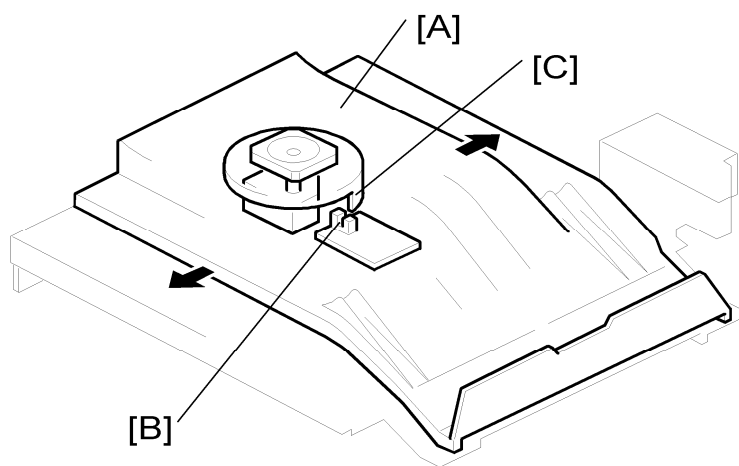

The shift tray allows copies to be sorted into separate piles on one tray.

From the left-right movement of the tray cover [A], the piles of copies are offset into two positions, slightly overlapping one another.

The half turn sensor [B] detects the actuator [C] of the slip disc. As a result, the machine can determine if the tray is at the front side or the rear side.

**FINISHER SR3000**

**B792**



# FINISHER SR3000 B792

## TABLE OF CONTENTS

|  |           |
|--|-----------|
| <b>1. REPLACEMENT AND ADJUSTMENT .....</b>             | <b>1</b>  |
| 1.1 EXTERIOR.....                                      | 1         |
| 1.1.1 MAIN FRAME .....                                 | 1         |
| 1.1.2 FRONT COVER.....                                 | 1         |
| 1.1.3 REAR COVER .....                                 | 2         |
| 1.1.4 TOP COVER.....                                   | 2         |
| 1.1.5 EXIT LOWER GUIDE .....                           | 3         |
| 1.1.6 RIGHT COVER .....                                | 3         |
| 1.2 STAPLER UNIT .....                                 | 4         |
| 1.3 STAPLER UNIT MOVEMENT MOTOR .....                  | 4         |
| 1.4 JOGGER TRAY UNIT .....                             | 5         |
| 1.5 JOGGER MOTORS .....                                | 6         |
| 1.6 PICK-UP ROLLER CONTACT MOTOR.....                  | 7         |
| 1.7 PAPER EXIT SENSOR.....                             | 7         |
| 1.8 CONTROL BOARD.....                                 | 8         |
| 1.9 PAPER TRANSPORT AND PAPER REVERSE/EXIT MOTORS..... | 9         |
| 1.10 OUTPUT TRAY UNIT.....                             | 10        |
| <b>2. DETAILED DESCRIPTIONS.....</b>                   | <b>11</b> |
| 2.1 OVERALL MACHINE INFORMATION.....                   | 11        |
| 2.1.1 COMPONENT LAYOUT .....                           | 11        |
| 2.1.2 ELECTRICAL COMPONENT LAYOUT .....                | 13        |
| 2.2 DETAILED SECTION DESCRIPTIONS.....                 | 15        |
| 2.2.1 OUTPUT TRAY MECHANISM.....                       | 15        |
| 2.2.2 PAPER FEED .....                                 | 17        |
| 2.2.3 JOGGER MOVEMENT .....                            | 18        |
| 2.2.4 STAPLER UNIT MOVEMENT.....                       | 19        |
| 2.2.5 JAM CONDITIONS .....                             | 20        |
| 2.2.6 ERROR DETECTION .....                            | 21        |



# Read This First

## Safety and Symbols


### Replacement Procedure Safety

#### **CAUTION**

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

### Symbols Used in this Manual


This manual uses the following symbols.

: See or Refer to

: Screws

: Connector

: Clip ring

: E-ring






# 1. REPLACEMENT AND ADJUSTMENT


## 1.1 EXTERIOR

### 1.1.1 MAIN FRAME

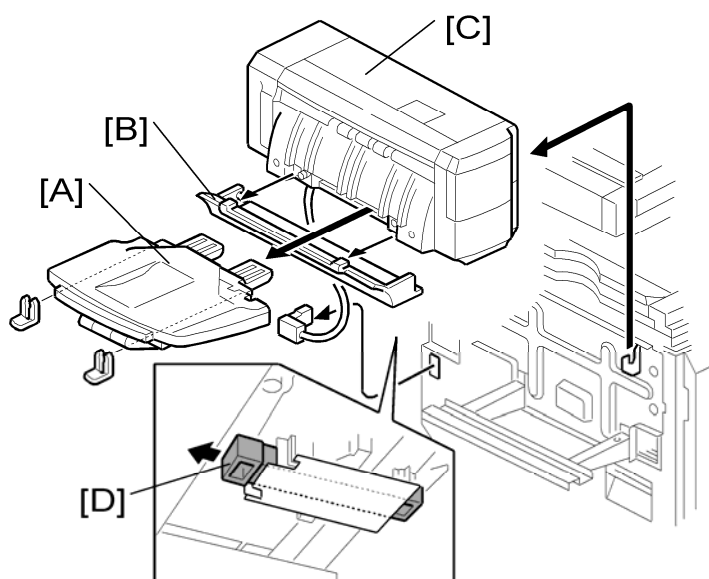


1. Plug out the 500-sheet finisher.
2. Output tray [A] (🔌 x 2)
3. Bracket cover [B]
4. Remove the 500-sheet finisher [C] while pulling the lock lever [D].

### 1.1.2 FRONT COVER

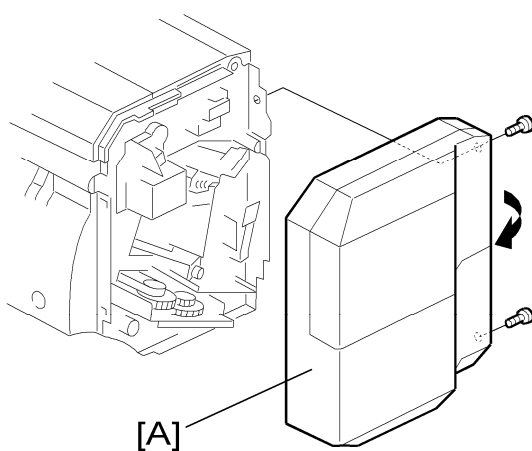


1. Front cover (🔩 x 2)

### 1.1.3 REAR COVER

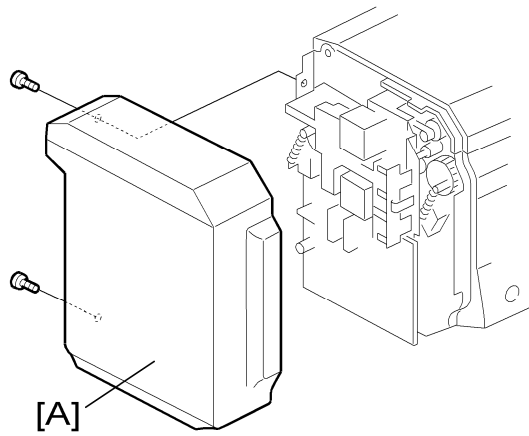


1. Rear cover [A] (🔩 x 2)

### 1.1.4 TOP COVER

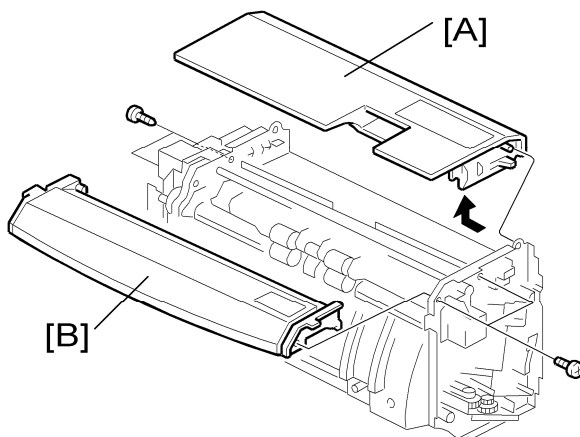


1. Front cover (🔩 "Front Cover")
2. Rear cover (🔩 "Rear Cover")
3. Top cover [A]
4. Top left cover [B] (🔩 x 4)

### 1.1.5 EXIT LOWER GUIDE

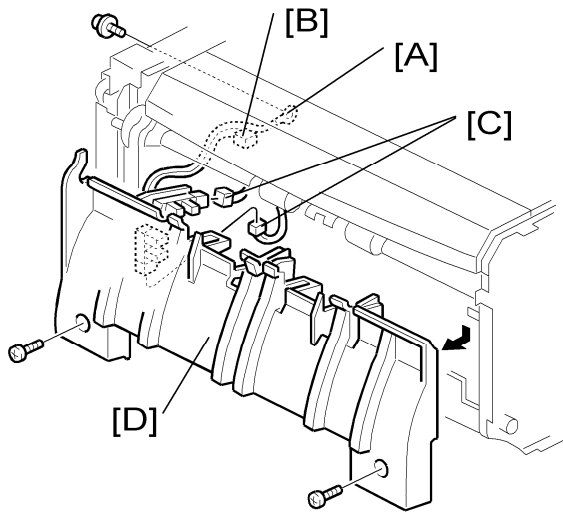


1. Output tray (☛ "Main Frame")
2. Front cover (☛ "Front Cover")
3. Rear cover (☛ "Rear Cover")
4. Right cover (☛ "Right Cover")
5. Remove the ground terminal [A] (🔩 x 1)
6. Disconnect the harness of the stack height lever solenoid [B].
7. Disconnect two sensor cables [C].
8. Exit lower guide [D] (🔩 x 2)

### 1.1.6 RIGHT COVER

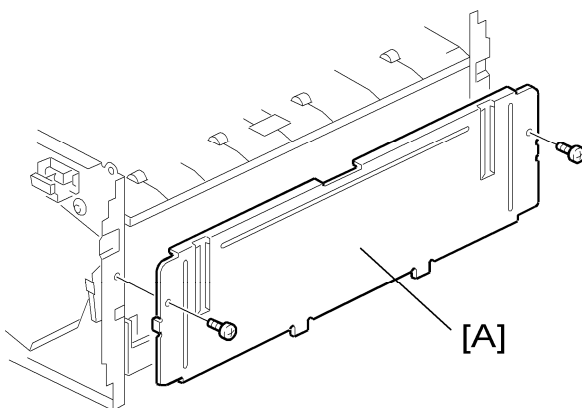


1. Front cover (☛ "Front Cover")
2. Rear cover (☛ "Rear Cover")
3. Right cover [A] (🔩 x 2)

## 1.2 STAPLER UNIT

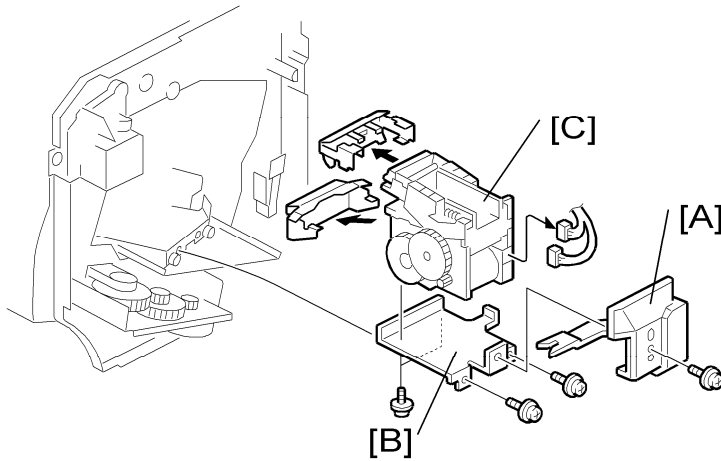


1. Front cover (🔩 "Front Cover")
2. Harness cover [A] (🔩 x 1)
3. Stapler unit bracket [B] (🔩 x 2, 🛠️ x 2)
4. Stapler unit (🔩 x 2)

## 1.3 STAPLER UNIT MOVEMENT MOTOR

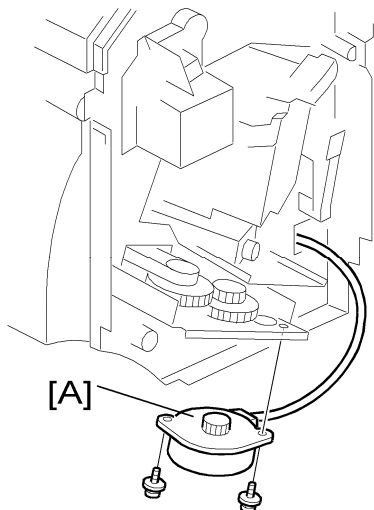


1. Front cover (🔩 "Front Cover")
2. Stapler unit movement motor [A] (🔩 x 2, 🛠️ x 1, 🛠️ x 1)

## 1.4 JOGGER TRAY UNIT

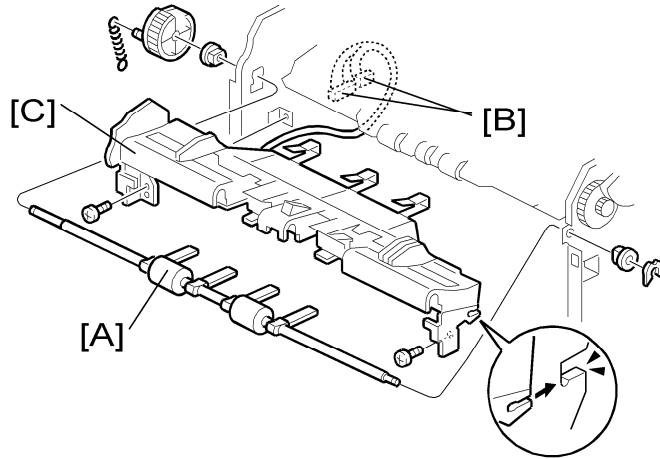


1. Front cover (🔧 "Front Cover")
2. Rear cover (🔧 "Rear Cover")
3. Exit lower guide (🔧 "Exit Lower Guide ")
4. Pick-up roller contact motor bracket (🔧 "Pick-up Roller Contact Motor ")
5. Paddle roller [A] (gear x 1, spring x 1, snap ring x1, bushing x 2)
6. Disconnect the two jogger motor harnesses [B]
7. Jogger tray unit [C] (🔧 x 2)

## 1.5 JOGGER MOTORS

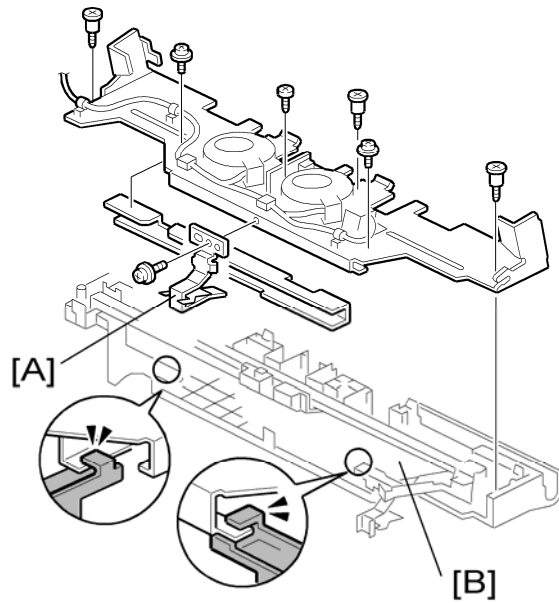


1. Jogger tray unit (🔩 "Jogger Tray Unit")
2. Stack bracket [A] (🔩 x 1)
3. Jogger tray cover [B] (🔩 x 6)

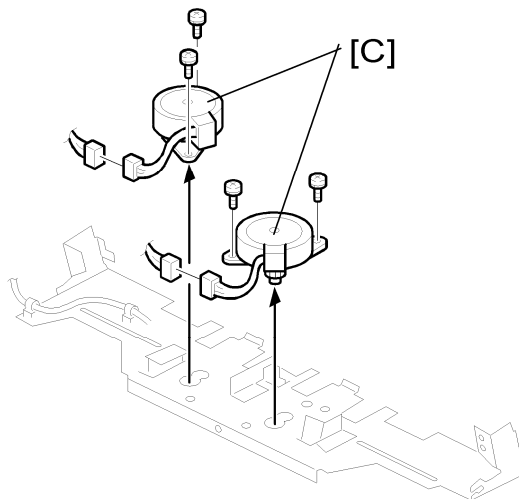

4. Jogger motors [C] (🔩 x 2, 📦 x 1 each)


## 1.6 PICK-UP ROLLER CONTACT MOTOR

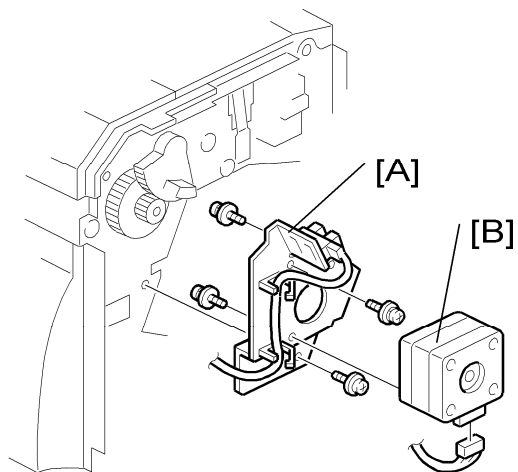

1. Front cover (🔩 "Front Cover")
2. Pick-up roller contact motor bracket [A] (🔩 x 2, 📌 x 1)
3. Pick-up roller contact motor [B] (🔩 x 2)


B792  
Finisher

## 1.7 PAPER EXIT SENSOR

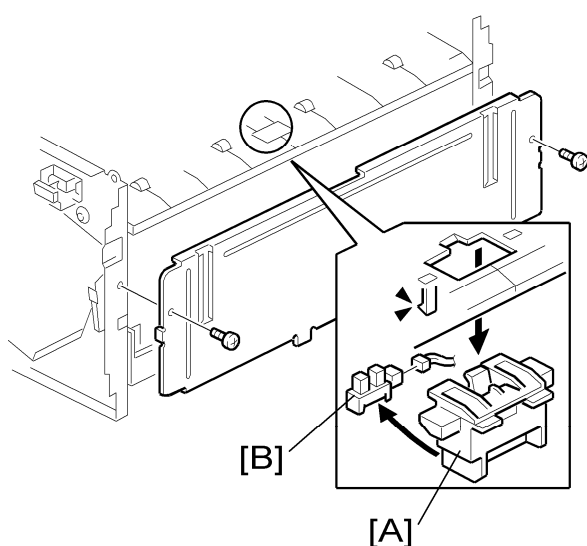

1. Right cover (🔩 "Right Cover")
2. Paper exit sensor holder [A] (hook x 2)
3. Paper exit sensor [B] (📌 x 1)


## 1.8 CONTROL BOARD

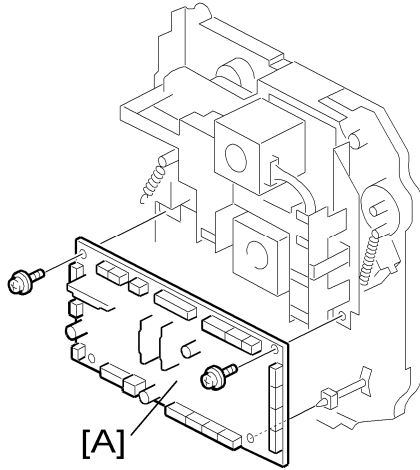


1. Rear cover (🔩 "Rear Cover")
2. Control board [A] (🔩 x 2)



## 1.9 PAPER TRANSPORT AND PAPER REVERSE/EXIT MOTORS

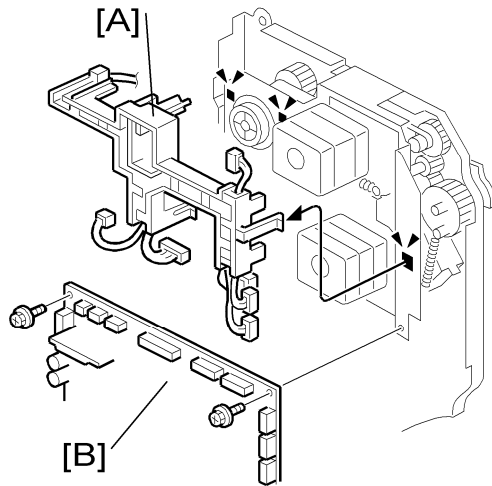


1. Rear cover (Rear Cover)
2. Harness guide [A] (hook x 3)
3. Control board [B] (x 2, All s)

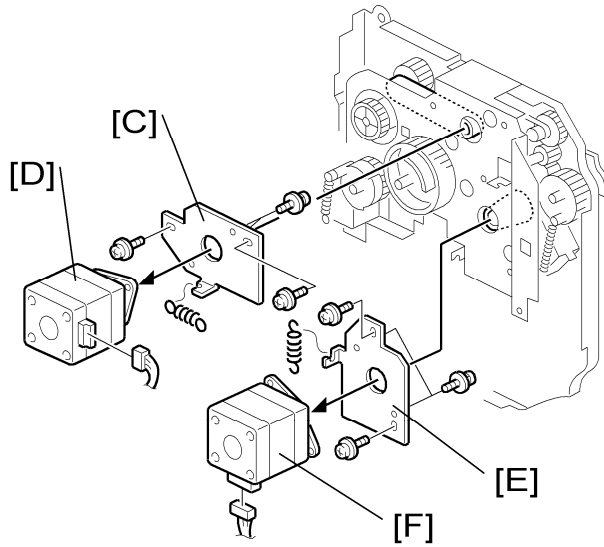


4. Paper transport motor bracket [C] (x 2, spring x 1, x 1)
5. Paper transport motor [D] (x 2)
6. Paper reverse/exit motor bracket [E] (x 2, spring x 1, x 1)
7. Paper reverse/exit motor [F] (x 2)

## 1.10 OUTPUT TRAY UNIT

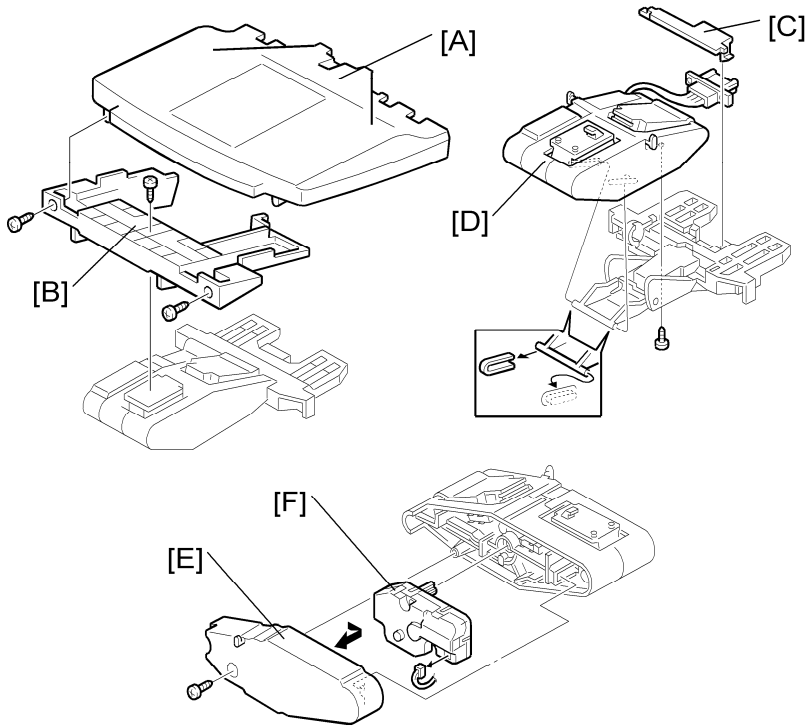

1. Output tray (Main Frame)
2. Output tray cover [A] (x 2)
3. Tray holder [B] (x 1)
4. Connector cover [C]
5. Output tray motor link unit [D] (x 1)
6. Rear cover [E] (x 1)
7. Output tray motor [F] (x 1)

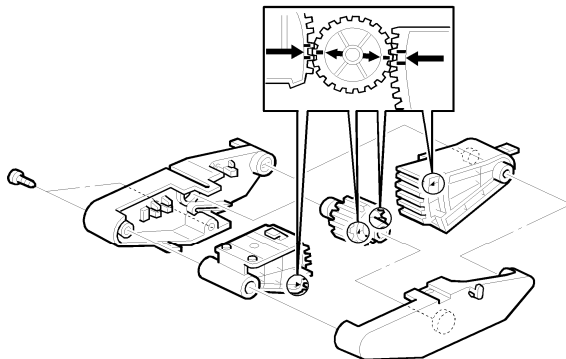

**Note**


- When re-attaching the motor link unit, the arrows on each of the gears need to face each other as shown in the illustration.

## 2.DETAILED DESCRIPTIONS

### 2.1 OVERALL MACHINE INFORMATION

#### 2.1.1 COMPONENT LAYOUT

##### *Mechanical Component Layout*

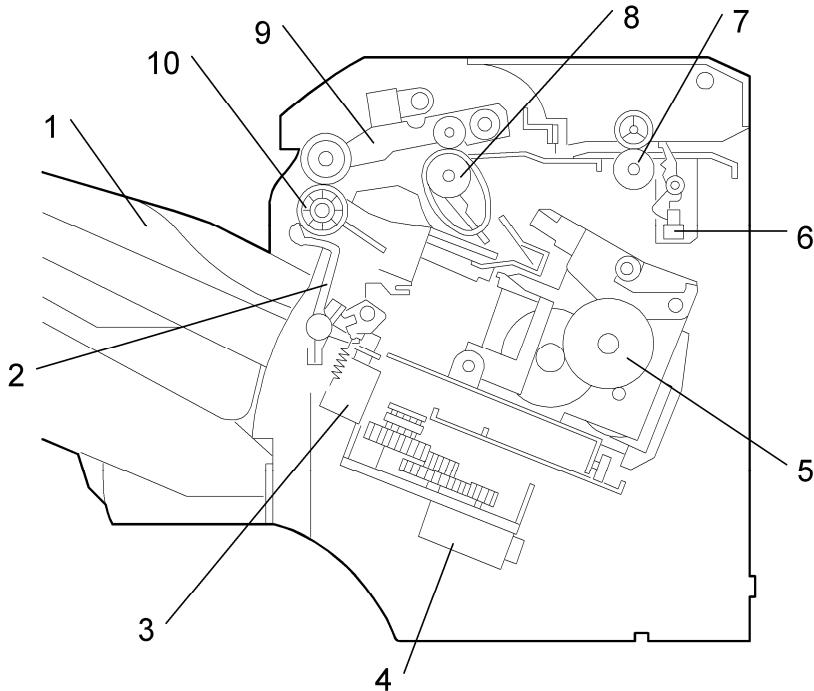


B792  
Finisher

|                                 |                    |
|---------------------------------|--------------------|
| 1. Output tray                  | 6. Entrance sensor |
| 2. Stack height detection lever | 7. Entrance roller |
| 3. Stack height lever solenoid  | 8. Belt unit       |
| 4. Stapler unit movement motor  | 9. Pick-up roller  |
| 5. Stapler unit                 | 10. Paddle roller  |


## Overall Machine Information

### ***Drive Layout***

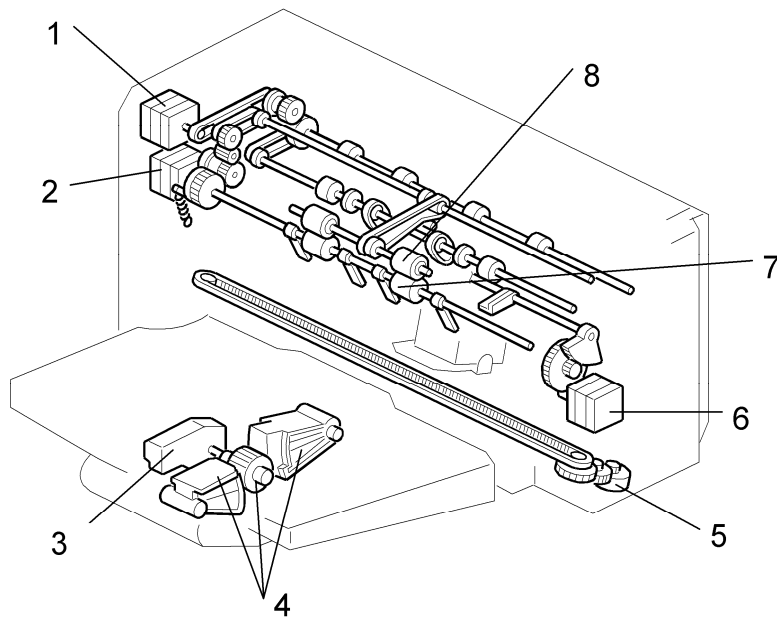

- |                           |                                 |
|---------------------------|---------------------------------|
| 1. Paper transport motor  | 5. Stapler unit movement motor  |
| 2. Pick-up roller motor   | 6. Pick-up roller contact motor |
| 3. Output tray motor      | 7. Paddle roller                |
| 4. Output tray link gears | 8. Pick-up roller               |


### 2.1.2 ELECTRICAL COMPONENT LAYOUT

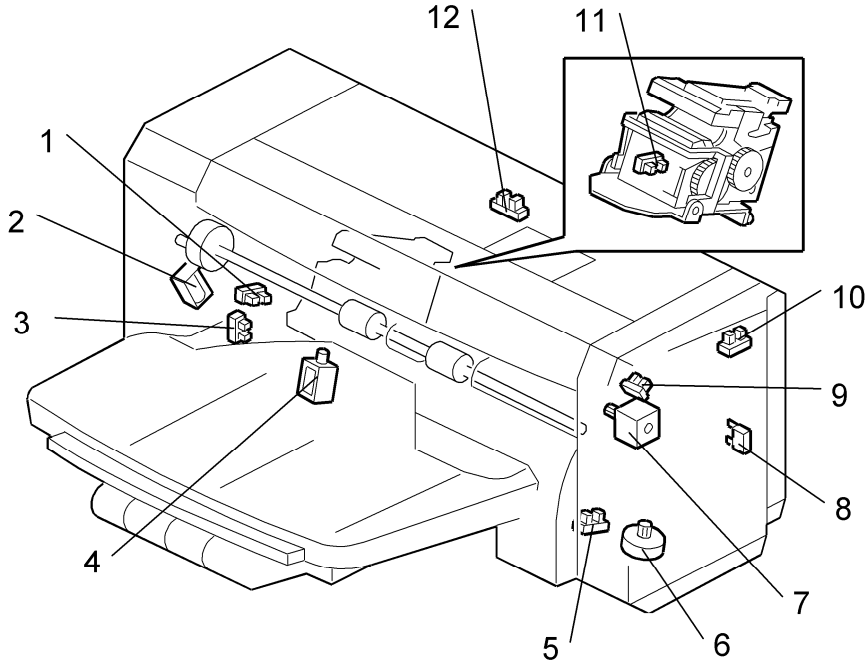

|                                |                                 |
|--------------------------------|---------------------------------|
| 1. Lever Sensor                | 7. Pick-Up Roller Contact Motor |
| 2. Paddle Roller Solenoid      | 8. Cover Switch                 |
| 3. Stack Height Sensor         | 9. Pick-Up Roller HP Sensor     |
| 4. Stack Height Lever Solenoid | 10. Top Cover Sensor            |
| 5. Stapler Unit HP Sensor      | 11. Stapler Safety Sensor       |
| 6. Stapler Unit Movement Motor | 12. Entrance Sensor             |

B792  
Finisher

## Overall Machine Information

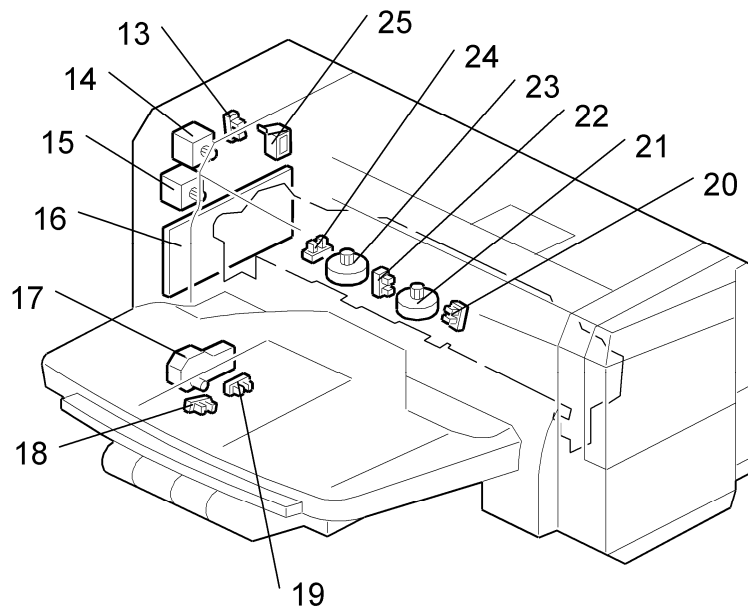


|                             |                                  |
|-----------------------------|----------------------------------|
| 13. Belt Lift Sensor        | 20. Front Jogger Fence HP Sensor |
| 14. Paper Transport Motor   | 21. Front Jogger Motor           |
| 15. Pick-up Roller Motor    | 22. Rear Jogger Fence HP Sensor  |
| 16. Control Board           | 23. Rear Jogger Motor            |
| 17. Output Tray Motor       | 24. Jogger Position Sensor       |
| 18. Stack Near-limit Sensor | 25. Belt Lift Solenoid           |
| 19. Tray Upper Limit Sensor |                                  |

## 2.2 DETAILED SECTION DESCRIPTIONS

### 2.2.1 OUTPUT TRAY MECHANISM

#### *Stack Height Detection*

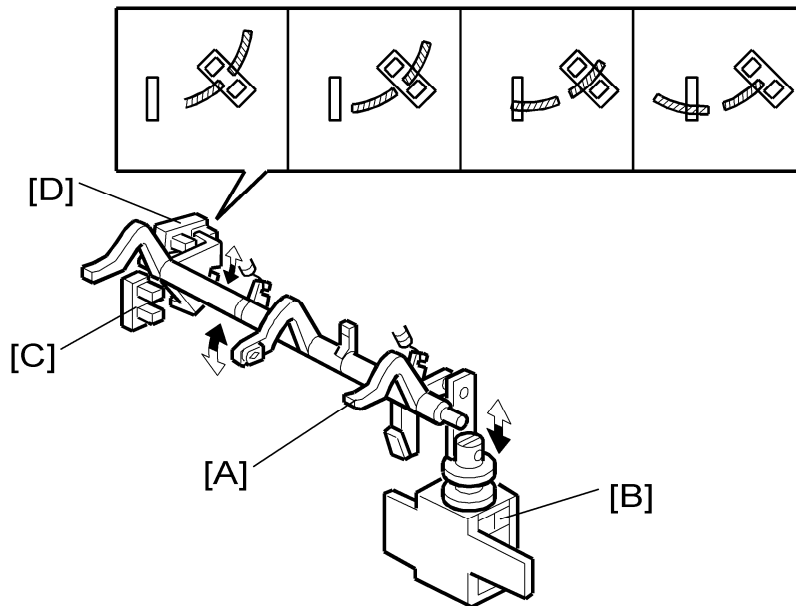

Stack height detection lever [A]: Driven by stack height lever solenoid [B].

Two sensors detect the height of the stack in the output tray: the stack height [C] and lever [D] sensors.


| Stack height sensor | Lever sensor | Status  |
|---------------------|--------------|---|
| Off                 | Off          | The stack height is below the target. The output tray is then lifted to the target position.  |
| Off                 | On           | Target stack height position  |
| On                  | On           | The stack height is above the target. The output tray is then lowered to the target position. |
| On                  | Off          | The stack height detection lever is at home position.   |

Off: Actuator not in sensor

At the start of a print job, the solenoid turns off. The stack height detection lever comes down, to detect the current stack level.

When a sheet of paper is being fed out, the solenoid turns on and the lever goes back up to home position (inside the unit). After paper has been fed out, the solenoid turns on again, and the lever detects the level of the stack.

### ***Output Tray Up/Down Mechanism***

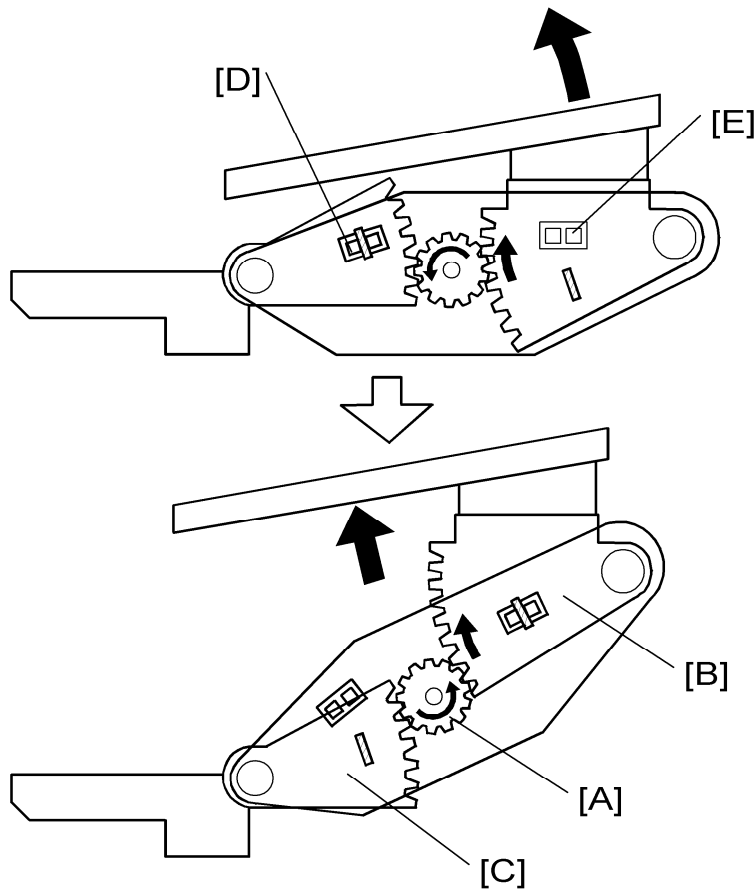

#### **Overview**

The output tray motor gear [A] lifts/lowers the tray if the stack height is not at the target position.

Gears [B] and [C] keep the angle of the tray constant at any tray position.

#### **Output Tray Downward Movement**

The top of the paper stack is checked after every page (or set of pages) has been fed out. If the top of the stack is higher than the target level, the output tray motor moves the tray down.

When the stack near-limit sensor [D] detects the actuator on gear [C], a stack near-limit signal is transferred to the main frame. The tray cannot move any lower. The next time the top of the stack height is above the target level, printing stops.


#### **Output Tray Upward Movement**

If paper is removed from the stack, the top of the stack will be lower than the target level, and the output tray motor moves the tray up.

When the tray upper limit sensor [E] detects the actuator on gear [B], the tray cannot be moved up any more, so the motor stops.



## 2.2.2 PAPER FEED

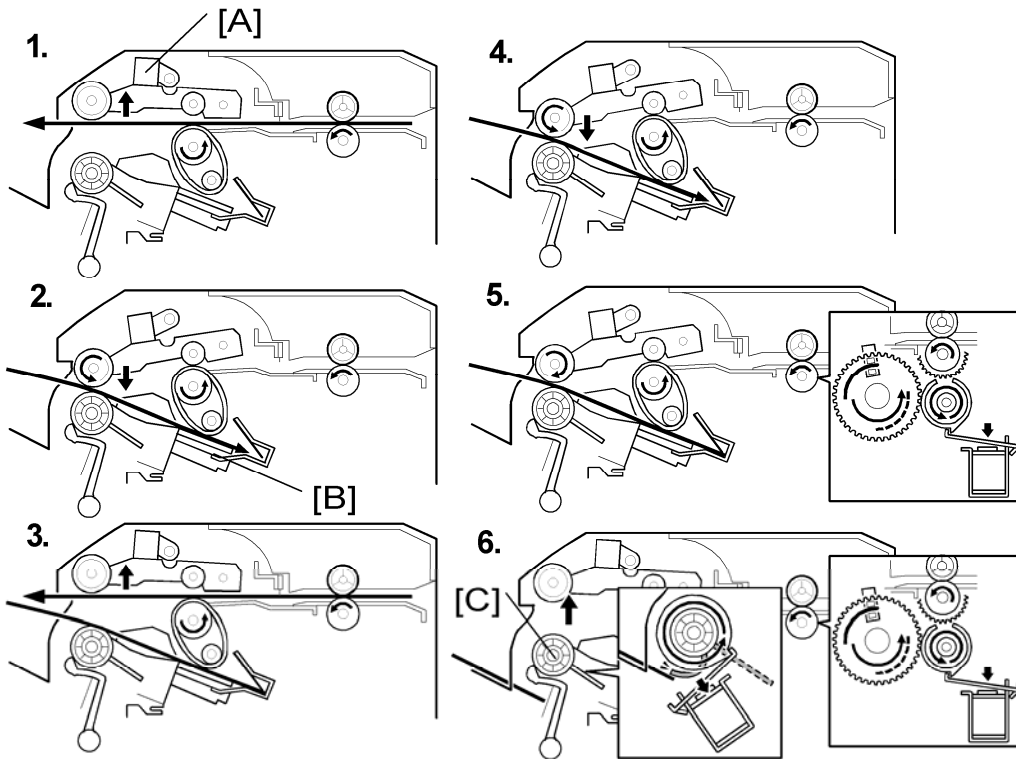

When a sheet of paper is fed, it is transported through the 500-sheet finisher as shown in these drawings.

To feed paper straight through the finisher, the pick-up roller [A] stays up.


To send the paper to the jogger tray [B], when the trailing edge is almost out of the finisher, the pick-up roller moves down until the reverse/exit roller in the pick-up roller pushes the paper against the paddle roller [C]. The reverse/exit roller feeds the paper to the jogger tray.

The pick-up roller is lifted up and down by the pick-up roller contact motor.

The pick-up roller feeds the paper out after stapling, sorting, or stacking.

The reverse/exit motor controls the reverse/exit motor. The other rollers do not change direction, and are controlled by the paper transport motor.

### 2.2.3 JOGGER MOVEMENT

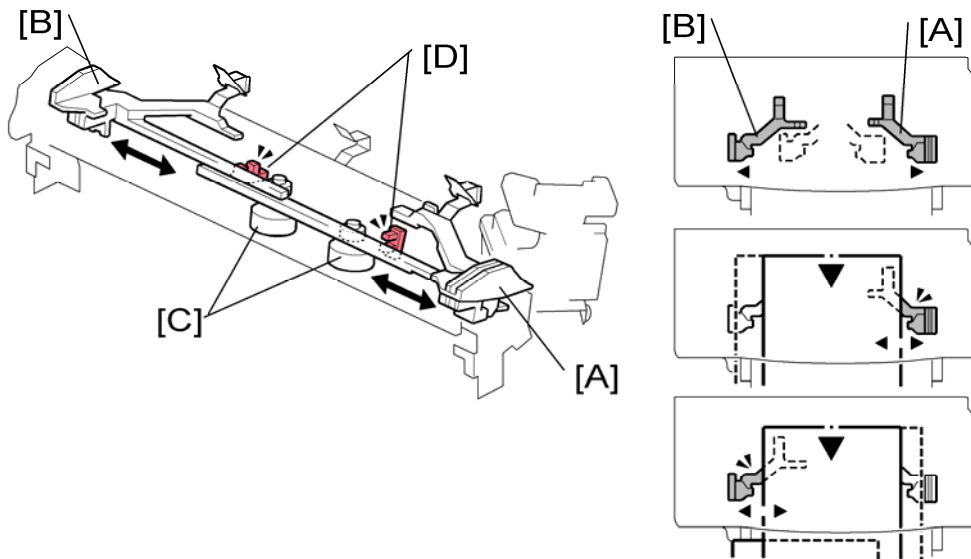

The jogger tray unit consists of the front [A] and rear [B] jogger fences, two jogger motors [C] and two jogger fence HP sensors [D].

**Standby mode:**

The jogger fences are placed at home position.

**Sort mode:**

The joggers move alternate sets to the front and rear, to separate the sets for the users.

At the start of the job, the jogger fences move to the front and rear sides.

When the first set of the job is fed to the jogger tray, the front jogger fence moves towards the rear to stack the paper neatly.

When the second set of the job is fed, the rear jogger fence moves towards the front to stack the paper neatly.


The front and rear fences continue to operate like this for alternate sets, until the end of the job.

**Staple mode:**

Only the front jogger fence moves in staple mode.

## 2.2.4 STAPLER UNIT MOVEMENT


### Overview

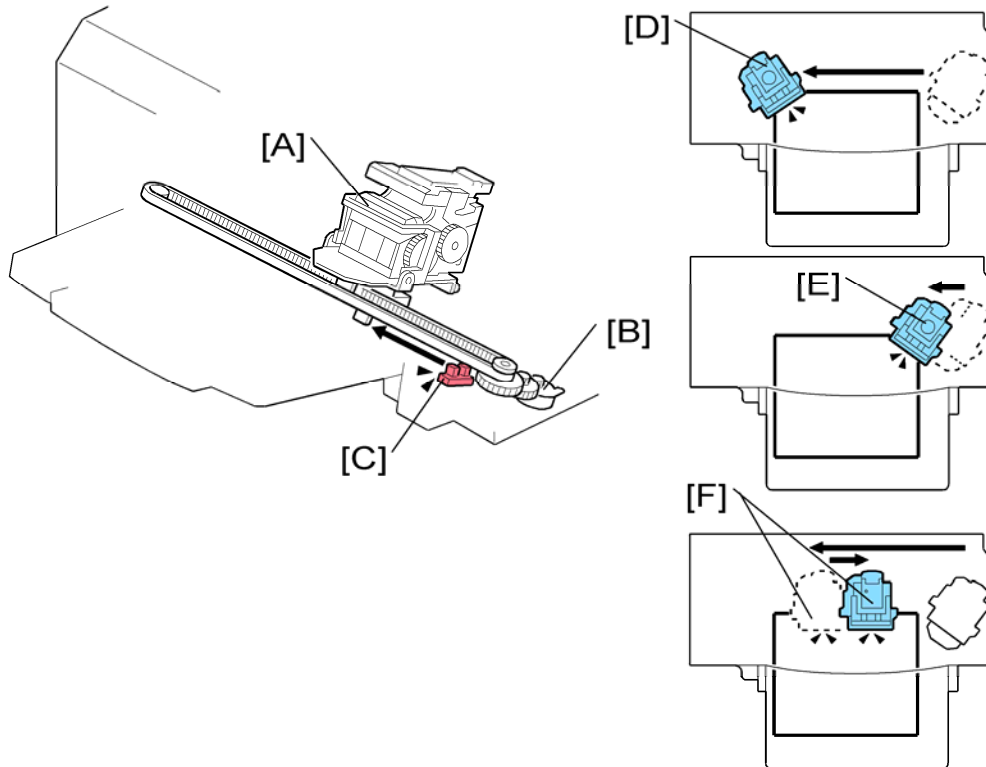

The stapler unit [A] is driven by the stapler unit movement motor [B]. The stapler unit HP sensor [C] detects when the stapler is at home position. The stapler unit stays at its home position in stand-by mode.

This finisher has three types of stapling. The stapler unit moves as shown: one staple at the rear corner [D], one staple at the front corner [E] and two staples [F].

### **Disabling the Stapling Mechanism**

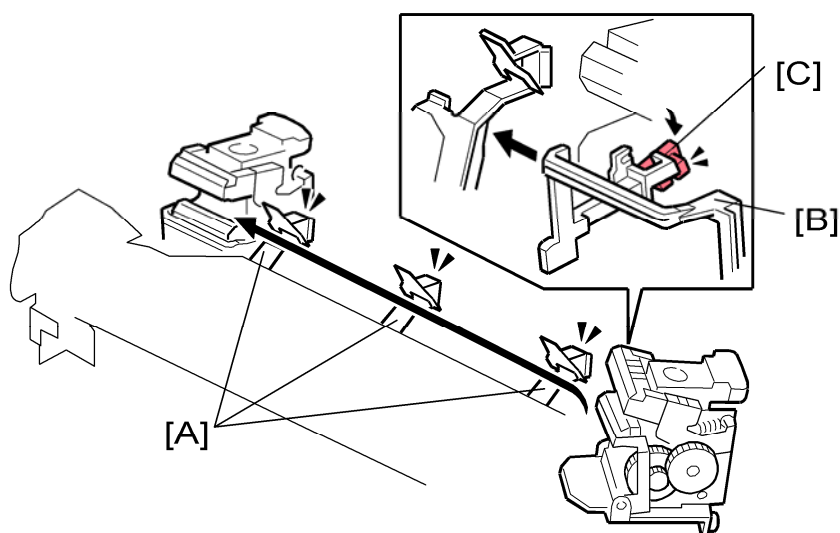

The stapler unit moves from front to rear. But there are three end fences [A] on the jogger tray unit in the stapler unit path. In order not to staple these fences, the stapler unit has the end fence detection sensor [C]. When the stapler unit passes the end fence, the end fence pushes the actuator [B], and then the sensor detects the end fence. While this sensor detects the end fence, stapling is disabled.

### **2.2.5 JAM CONDITIONS**

|   | <b>Sensors</b>   | <b>Conditions</b>   |
|---|------------------|---|
| Remaining paper detection                                 | Entrance<br>Exit | Either the entrance or exit sensor detects paper just after the unit is initialized.                    |
| Non-feed at the entrance                                  | Entrance         | The entrance sensor is not activated within a certain period after the paper exit sensor detects paper. |
| Jamming at the entrance                                   | Entrance         | The entrance sensor is not de-activated after paper is fed 1.3 times the length of the paper.           |
| Non-feed inside the unit<br>(Straight feed out mode only) | Exit             | The exit sensor is not activated within a certain period after the entrance sensor detects paper.       |
| Jamming at the exit                                       | Exit             | The exit sensor is not de-activated after paper is fed for a certain period.                            |
| Jogger tray   | Exit             | The exit sensor is de-activated during paper shifting or stapling.                                      |

## 2.2.6 ERROR DETECTION

|  | Conditions   |
|--|--|
| Jogger motor error                         | The jogger home position sensor does not shut off after the jogger motor starts.                               |
| Jogger motor home position detection error | The jogger home position sensor does not turn on after paper shifting.   |
| Stapler error                              | The stapler home position sensor (inside the stapler unit) does not turn on after stapling.                    |
| Output tray upper limit error              | The tray upper limit sensor is activated.  |
| Output tray motor error                    | The output tray is away from the target position for more than 10 seconds.                                     |
| Stack height detection error               | The stack height detection lever does not return to its home position before going to detect the stack height. |

### ↓ Note

- The above errors are indicated as “Finisher jam” at the first occurrence.
- If the same error happens again in the next job, “finisher error” is indicated.



**BOOKLET FINISHER**

**B793**





# BOOKLET FINISHER B793

## TABLE OF CONTENTS

|  |           |
|--|-----------|
| <b>1. REPLACEMENT AND ADJUSTMENT .....</b>                 | <b>1</b>  |
| 1.1 COVERS .....   | 1         |
| 1.1.1 FRONT/INNER/REAR COVERS .....                        | 1         |
| 1.1.2 UPPER COVERS .....                                   | 2         |
| 1.2 MAIN BODY .....  | 4         |
| 1.2.1 POSITIONING ROLLER .....                             | 4         |
| 1.2.2 SHIFT TRAY POSITION SENSOR, UPPER LIMIT SWITCH ..... | 4         |
| 1.2.3 PROOF TRAY EXIT / FULL SENSOR .....                  | 5         |
| 1.2.4 FINISHER ENTRANCE SENSOR .....                       | 6         |
| 1.2.5 SHIFT TRAY EXIT SENSOR .....                         | 7         |
| 1.2.6 STAPLE TRAY PAPER SENSOR .....                       | 8         |
| 1.2.7 SHIFT TRAY MOTOR .....                               | 8         |
| 1.2.8 ENTRANCE MOTOR .....                                 | 9         |
| 1.2.9 UPPER TRANSPORT MOTOR .....                          | 9         |
| 1.2.10 LOWER TRANSPORT MOTOR .....                         | 10        |
| 1.2.11 SHIFT MOTOR .....                                   | 11        |
| 1.3 FOLDER .....   | 12        |
| 1.3.1 STAPLE FOLDER UNIT .....                             | 12        |
| 1.3.2 FOLDER UNIT .....                                    | 13        |
| 1.3.3 FOLDER UNIT EXIT SENSOR .....                        | 14        |
| 1.3.4 FOLDER UNIT ENTRANCE SENSOR .....                    | 15        |
| 1.3.5 STAPLER UNIT .....                                   | 15        |
| 1.4 OTHERS .....   | 26        |
| 1.4.1 MAIN BOARD .....                                     | 26        |
| 1.5 DIP SWITCHES .....                                     | 27        |
| <b>2. DETAILED SECTION DESCRIPTIONS .....</b>              | <b>28</b> |
| 2.1 COMPONENT LAYOUT .....                                 | 28        |
| 2.1.1 MECHANICAL COMPONENT LAYOUT .....                    | 28        |
| 2.1.2 ELECTRICAL COMPONENT LAYOUT .....                    | 30        |
| 2.2 JUNCTION GATES .....                                   | 39        |

|  |    |
|--|----|
| 2.3 PROOF TRAY .....                               | 40 |
| 2.4 SHIFT TRAY .....                               | 41 |
| 2.4.1 UP/DOWN MOTION .....                         | 41 |
| 2.4.2 SIDE-TO-SIDE MOTION.....                     | 42 |
| 2.5 BOOKLET TRAY .....                             | 43 |
| 2.6 JOGGER UNIT.....                               | 46 |
| 2.7 EXIT GUIDE PLATE, PAPER FEED OUT .....         | 47 |
| 2.8 STAPLER UNIT MOVEMENT.....                     | 48 |
| 2.9 STACKING FOR BOOKLET STAPLING.....             | 49 |
| 2.9.1 OVERVIEW.....                                | 49 |
| 2.9.2 8.5 X 14 (LEGAL) OR SHORTER.....             | 49 |
| 2.9.3 LONGER THAN 8.5 X 14 INCHES .....            | 50 |
| 2.10 MOVING THE STACK TO THE FOLDING POSITION..... | 52 |
| 2.11 FOLDER.....                                   | 53 |
| 2.11.1 OVERVIEW .....                              | 53 |
| 2.11.2 FOLD PLATE .....                            | 53 |
| 2.11.3 FOLD ROLLERS.....                           | 54 |
| 2.12 PUNCH UNIT .....                              | 55 |
| 2.12.1 OVERVIEW OF OPERATION .....                 | 55 |
| 2.12.2 PAPER POSITION DETECTION .....              | 57 |
| 2.12.3 PUNCH UNIT MOVEMENT.....                    | 58 |
| 2.12.4 PUNCH SELECTION AND FIRING.....             | 58 |
| 2.12.5 PUNCH HOPPER MECHANISM.....                 | 59 |

# Read This First

## Safety and Symbols

### Replacement Procedure Safety


#### **CAUTION**

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

When taking apart the bridge unit, first take the unit out of the copier.

### Symbols Used in this Manual


This manual uses the following symbols.

: See or Refer to

: Screws

: Connector

: Clip ring

: E-ring




---

# 1. REPLACEMENT AND ADJUSTMENT

## 1.1 COVERS


### 1.1.1 FRONT/INNER/REAR COVERS

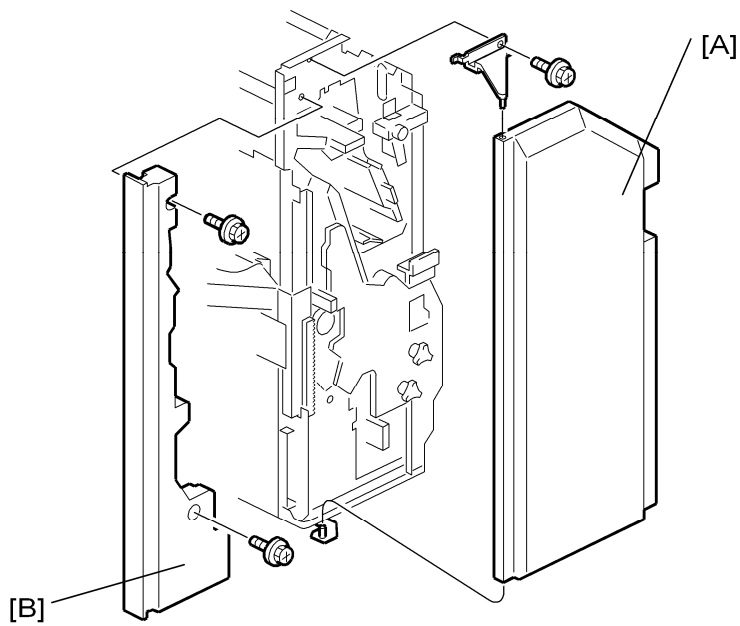

1. Remove the front cover [A] (🔩 x 1).
2. Remove the inner cover [B] (🔩 x 2).


B793  
Booklet  
Finisher

## Covers

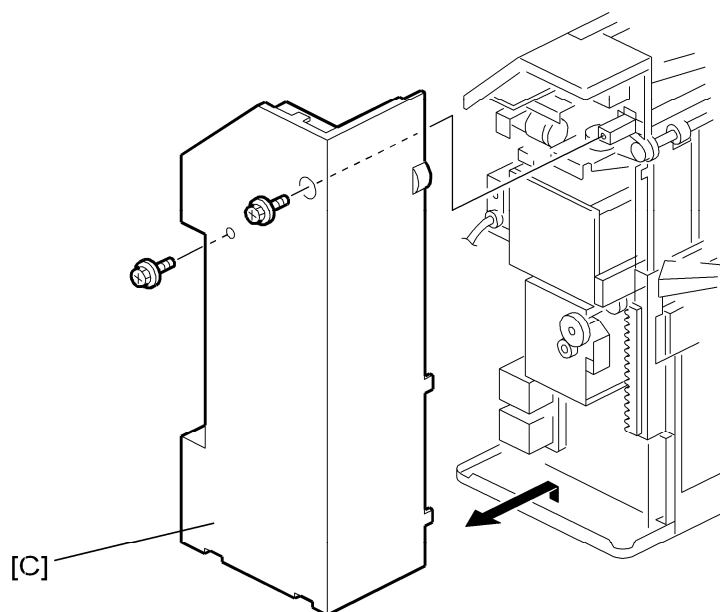


3. Remove the rear cover [C] (⚙️ x 2).

### 1.1.2 UPPER COVERS

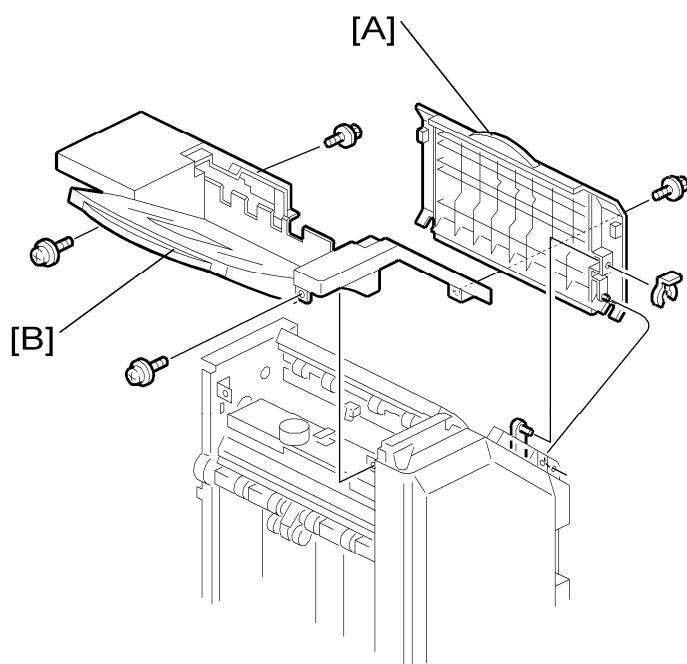

1. Remove the upper cover [A] (⚙️ x 1).
2. Remove the proof tray [B] (⚙️ x 4).

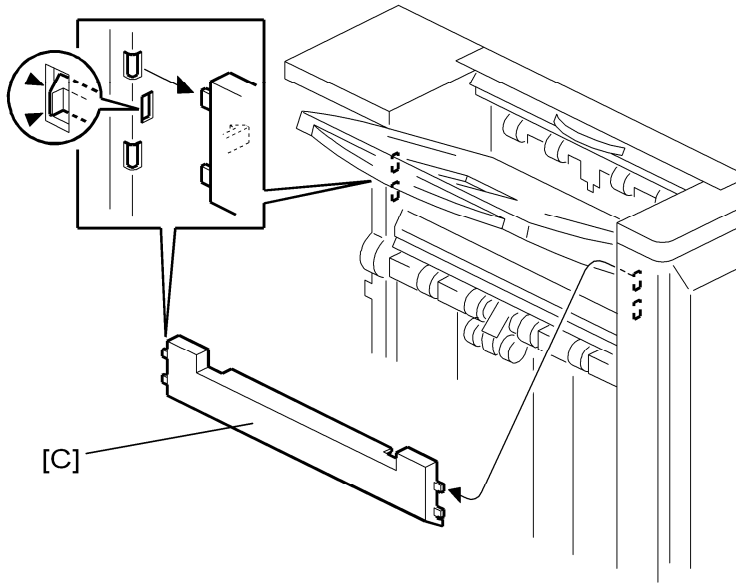


3. Remove the upper left cover [C].

B793  
Booklet  
Finisher

Main Body

## 1.2 MAIN BODY

### 1.2.1 POSITIONING ROLLER

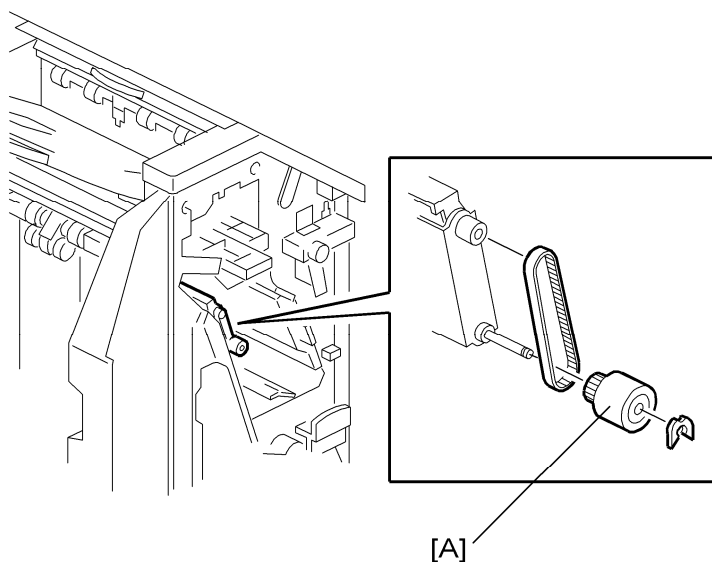


1. Open the front cover.
2. Remove the positioning roller [A] (1 x 1).

### 1.2.2 SHIFT TRAY POSITION SENSOR, UPPER LIMIT SWITCH

1. Remove the following items.
  - Front Cover
  - Inner Cover
  - Rear Cover
  - Proof Tray
  - Upper Left Cover




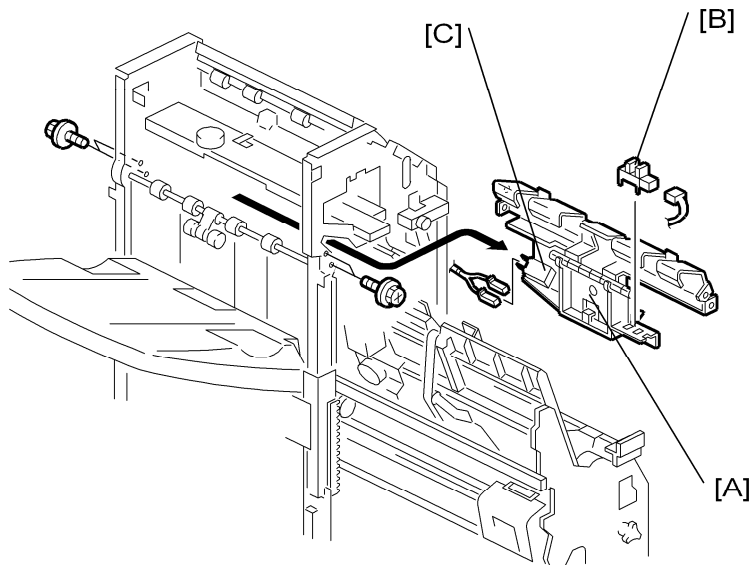

2. Remove the lower guide unit [A] (⚙️ x 4, 📐 x 2).
3. Remove the shift tray position sensor [B] (📐 x 1).
4. Remove the upper limit switch [C] (📐 x 2). (Pull it out from the assembly.)


### 1.2.3 PROOF TRAY EXIT / FULL SENSOR

1. Remove the front cover, rear cover and proof tray.
2. Open the upper cover.

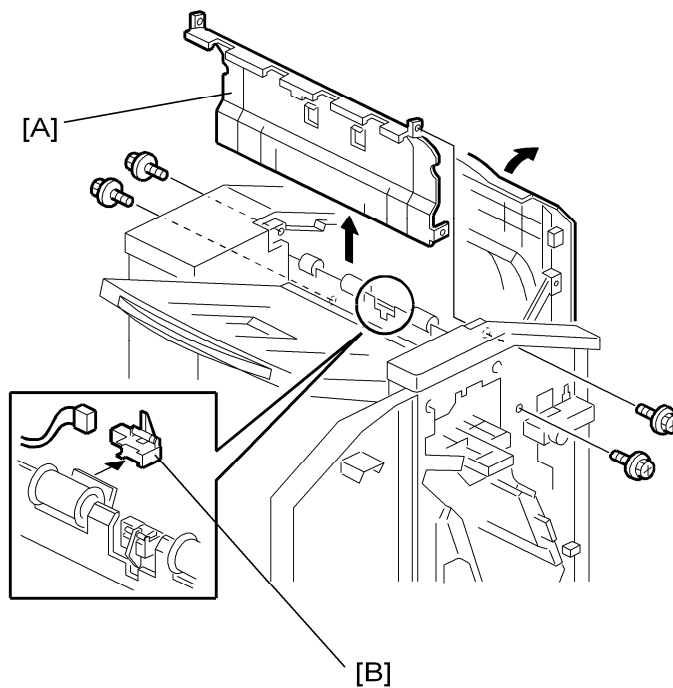


## Main Body

3. Remove the vertical transport guide [A] (🔩 x 4).
4. Remove the exit sensor [B] (🔌 x 1).

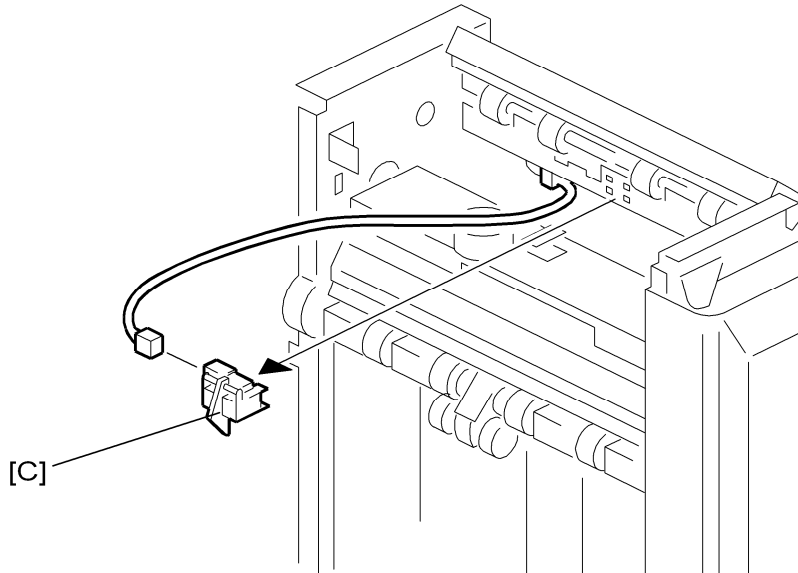


5. Remove the tray full sensor [C] (🔌 x 1).

### 1.2.4 FINISHER ENTRANCE SENSOR

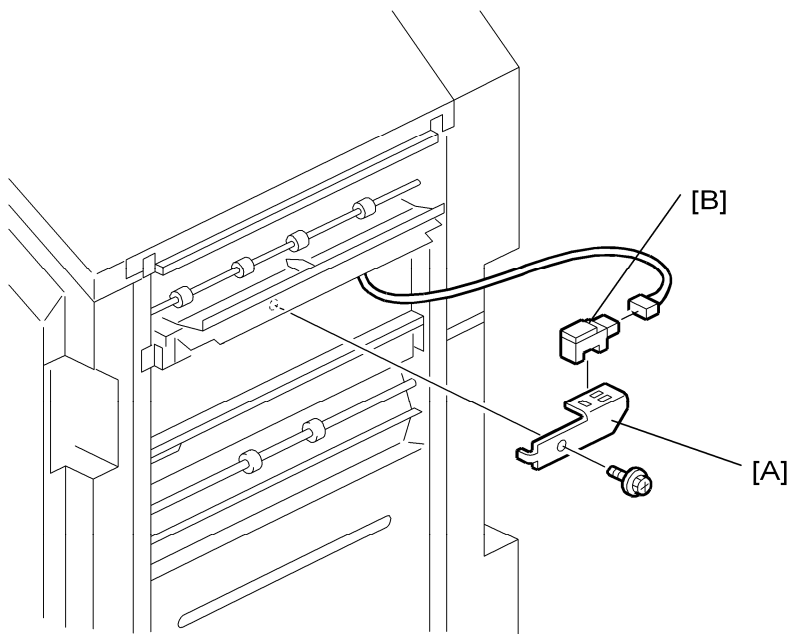


1. Remove the finisher entrance sensor with bracket [A] (🔩 x 1).
2. Remove the finisher entrance sensor [B] (🔌 x 1).

## 1.2.5 SHIFT TRAY EXIT SENSOR

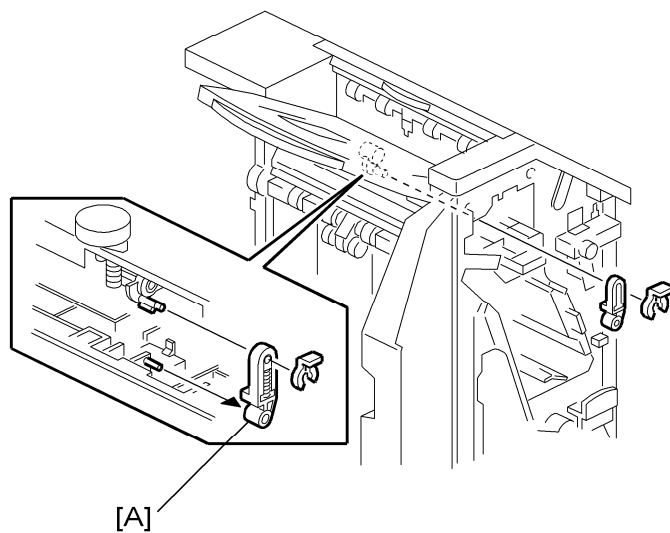


1. Remove the front cover and upper left cover.
2. Remove the link [A] (🔗 x 1).

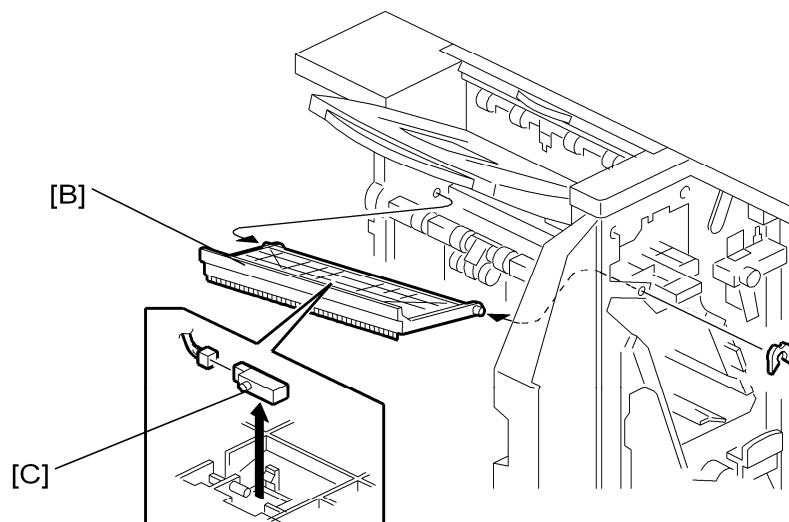


3. Remove the exit guide unit [B].
4. Remove the sensor [C] (🔧 x 1).

## 1.2.6 STAPLE TRAY PAPER SENSOR

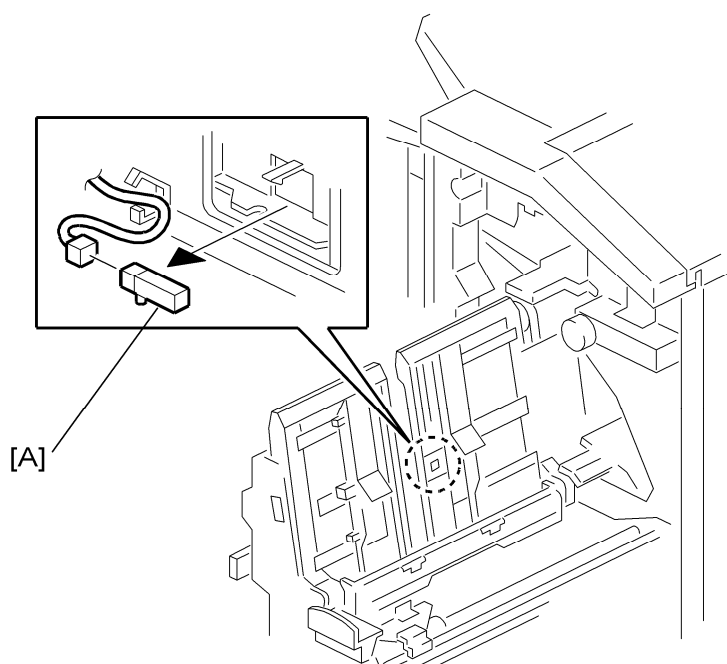

1. Open the front cover.
2. Pull out the staple/fold unit.
3. Remove the staple tray paper sensor [A] (1 x 1).


## 1.2.7 SHIFT TRAY MOTOR

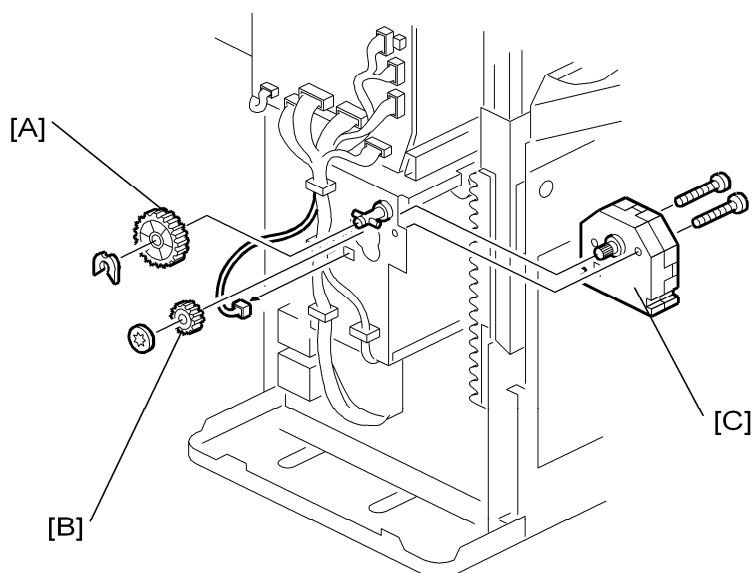

1. Remove the rear cover.
2. Open the front cover, and then pull out the staple/fold unit.


3. Remove the two gears [A], [B].
4. Remove the shift tray motor [C] (⚙️ x 2, 📦 x 1)

### 1.2.8 ENTRANCE MOTOR

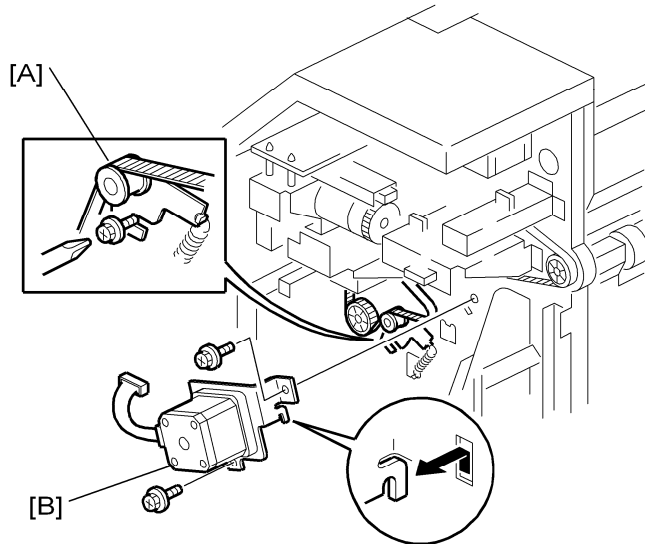

1. Remove the rear cover.
2. Release the belt tension [A].
3. Remove the entrance motor [B] (⚙️ x 2, 📦 x 1).

### 1.2.9 UPPER TRANSPORT MOTOR

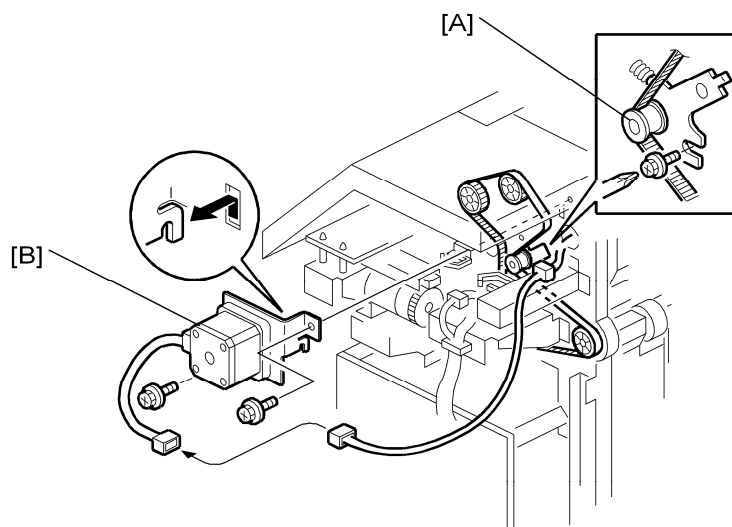


1. Remove the rear cover.

B793  
Booklet  
Finisher

## Main Body


2. Release the belt tension [A].
3. Remove the upper transport motor [B] (🔧 x 2, 📏 x 1).

### 1.2.10 LOWER TRANSPORT MOTOR

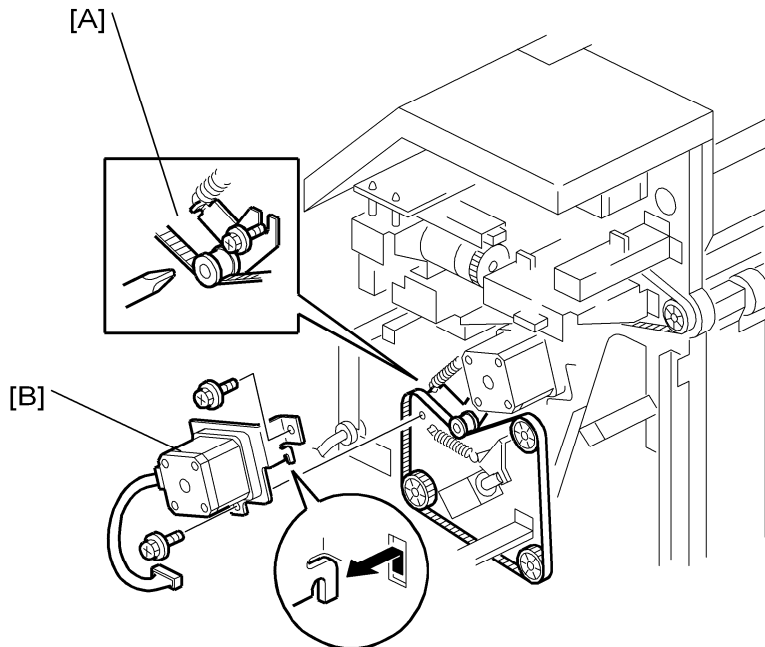

1. Remove the rear cover.
2. Release the belt tension [A].
3. Remove the lower transport motor [B] (🔧 x 2, 📏 x 1).

## 1.2.11 SHIFT MOTOR

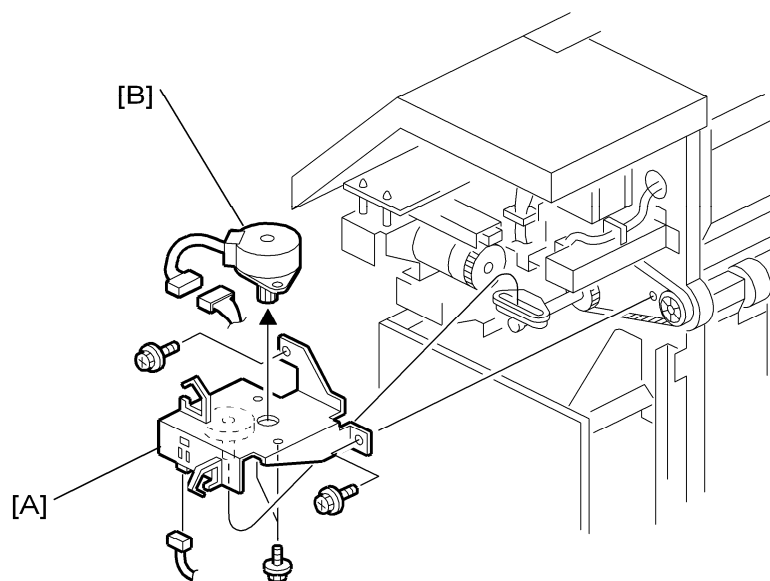


1. Remove the rear cover.
2. Remove the shift motor with bracket [A] (Ⓜ x 1, ⚙ x 4)
3. Remove the shift motor [B] (Ⓜ x 1).


Folder

## 1.3 FOLDER

### 1.3.1 STAPLE FOLDER UNIT

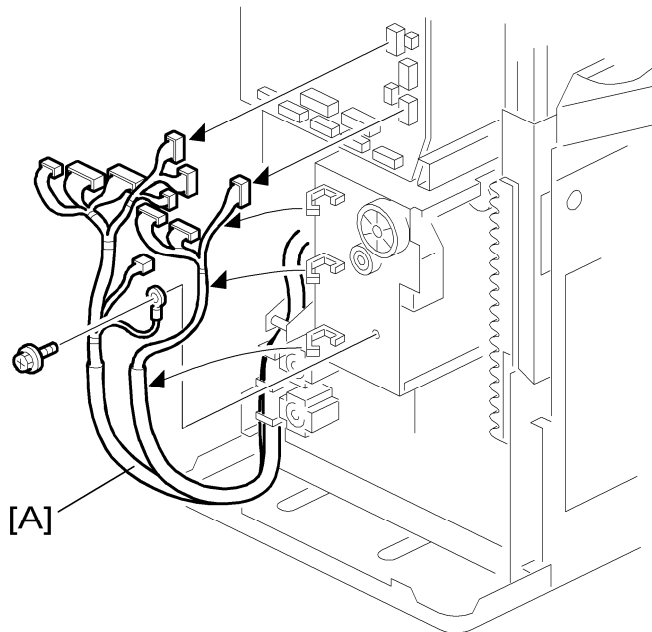

1. Remove the rear cover.
2. Disconnect all connectors and release the harness [A] for the staple folder unit (🔩 x 1, 📡 x 3).
3. Open the front cover.

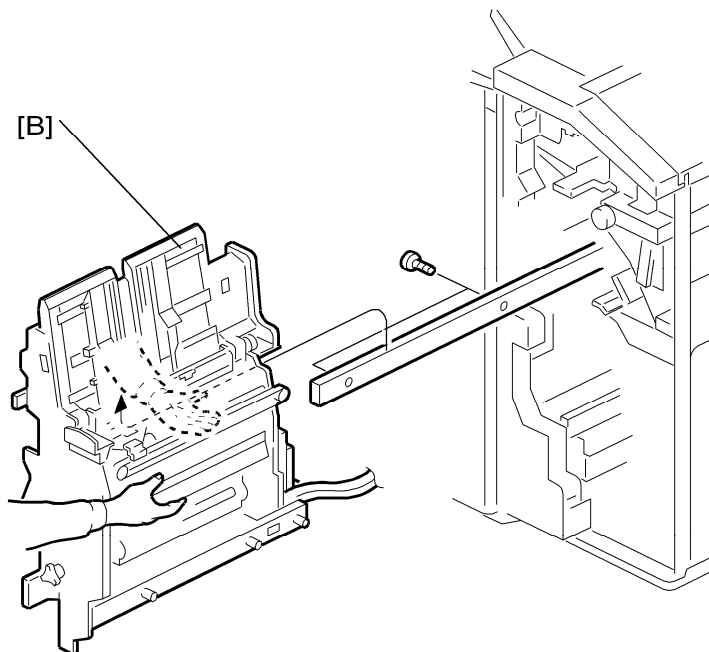




4. Pull out and remove the staple folder unit [B] (⚙️ x 2).

### 1.3.2 FOLDER UNIT

1. Remove the staple folder unit.

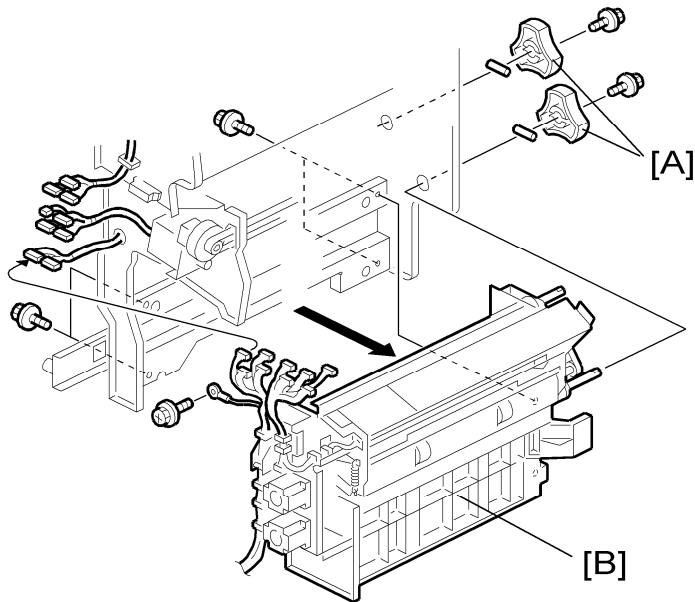


2. Remove the knobs [A] (⚙️ x 1 each).
3. Disconnect the connectors.
4. Remove the folder unit [B] (⚙️ x 4).

B793  
Booklet  
Finisher


Folder

### 1.3.3 FOLDER UNIT EXIT SENSOR

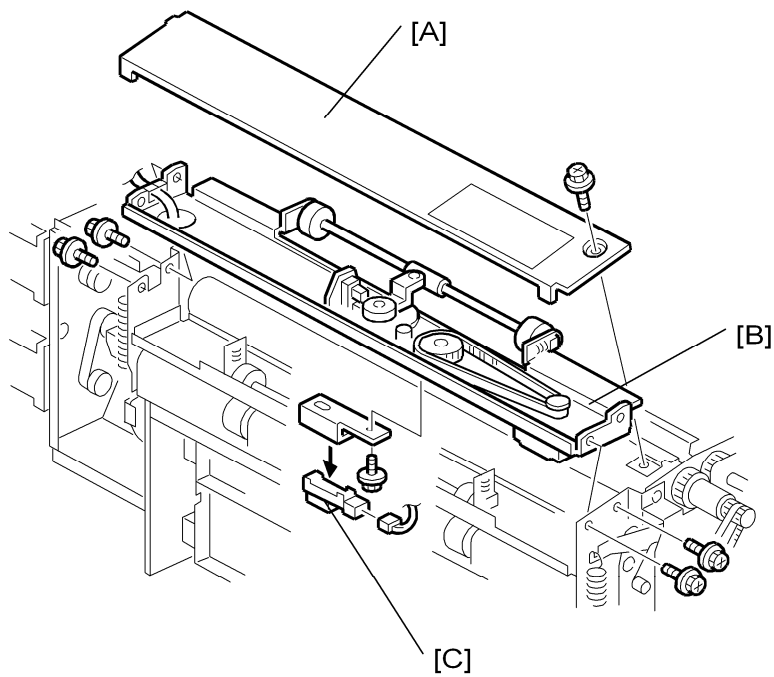

1. Remove the folder unit.
2. Remove the folder unit upper cover [A] (🔩 x 1).
3. Remove the lower clamp roller unit [B] (🔩 x 4).
4. Remove the folder unit exit sensor [C] (🔩 x 1, 📦 x 1).


### 1.3.4 FOLDER UNIT ENTRANCE SENSOR

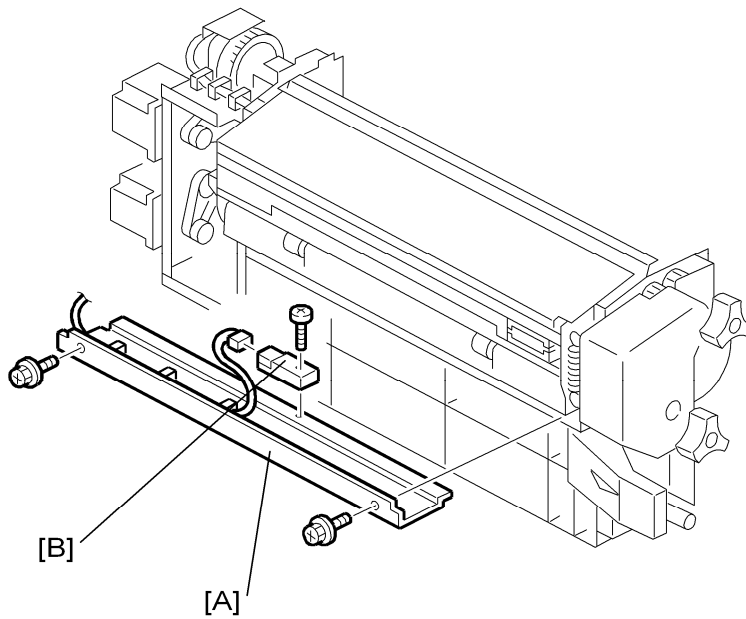

1. Open the front cover.
2. Pull out the staple folder unit.
3. Remove the exit cover [A] (🔩 x 2).
4. Remove the entrance sensor [B] (🔩 x 1, 📡 x 1).

### 1.3.5 STAPLER UNIT


1. Remove the rear cover.

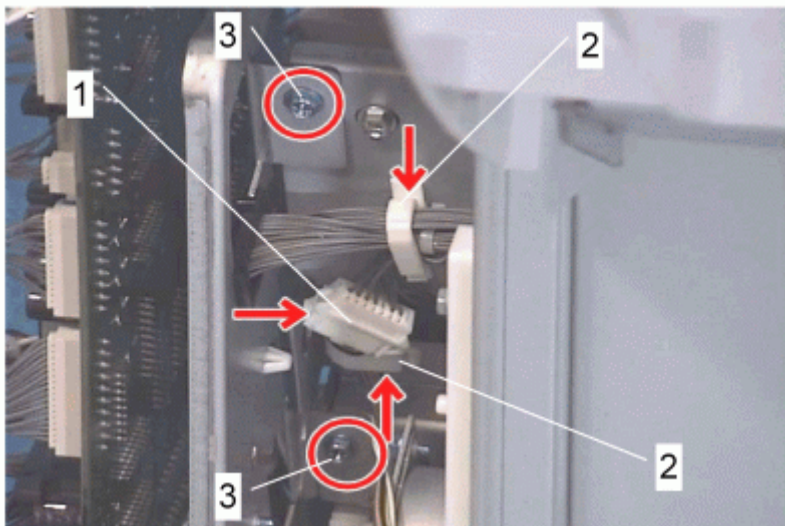


2. Disconnect the connector [1] and release the harness (🔧 x 2 [2]).
3. Remove two screws [3].

B793  
Booklet  
Finisher


## Folder

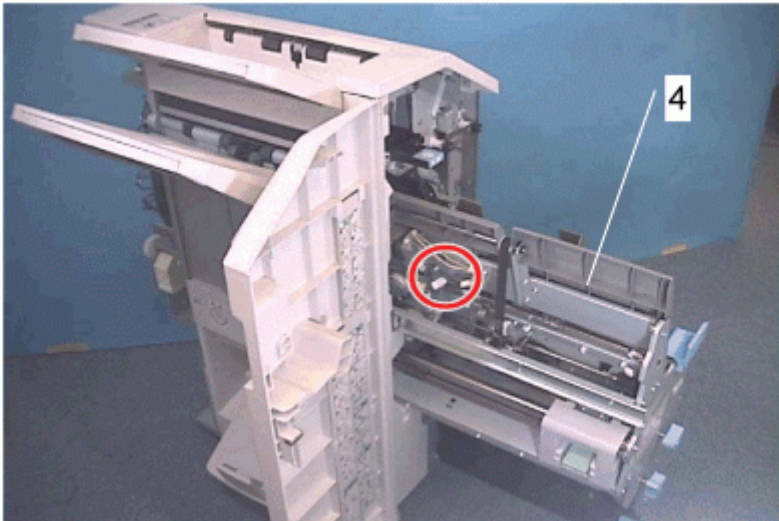


4. Open the front cover and pull out the staple folder unit [4].

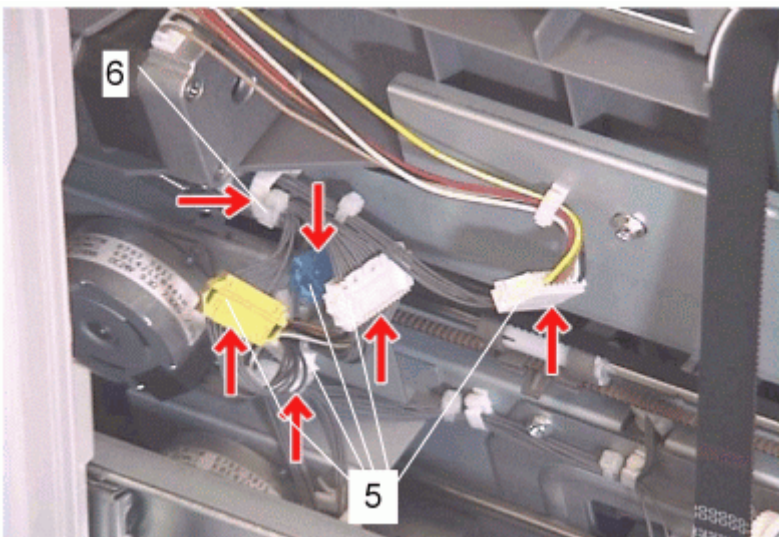

5. Disconnect the connectors and release the harness. (4 connectors [5], 1 clamp [6])

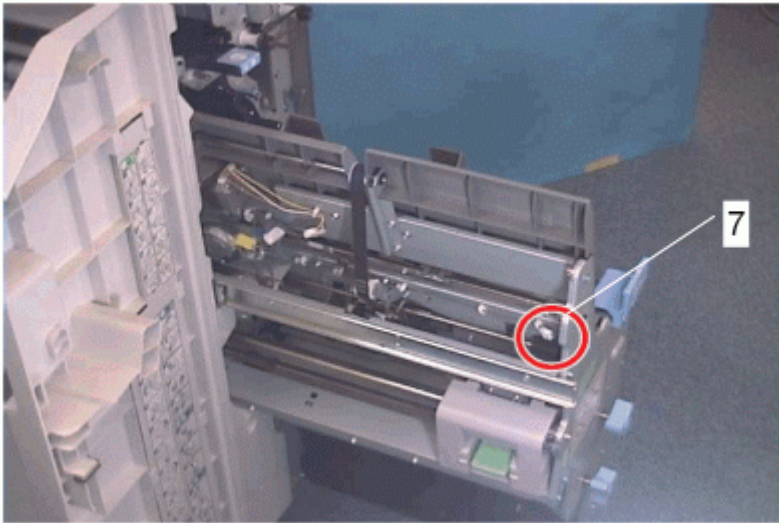


6. Remove a connector [7].

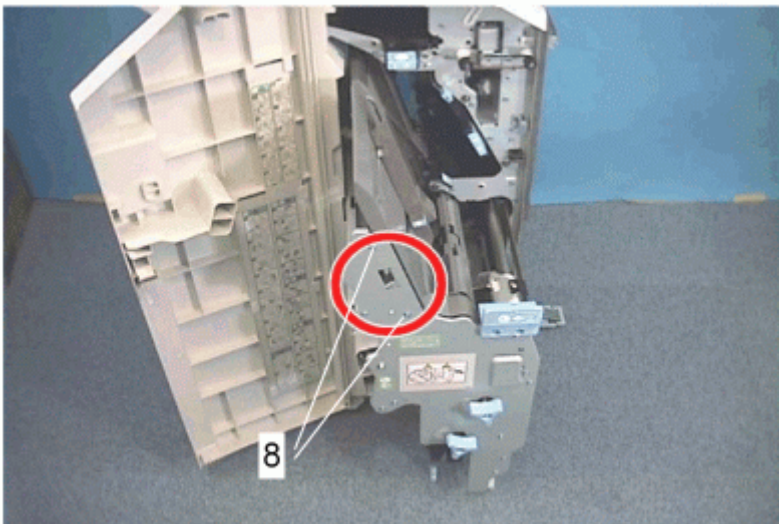


7. Remove 2 screws [8].

B793  
Booklet  
Finisher


## Folder

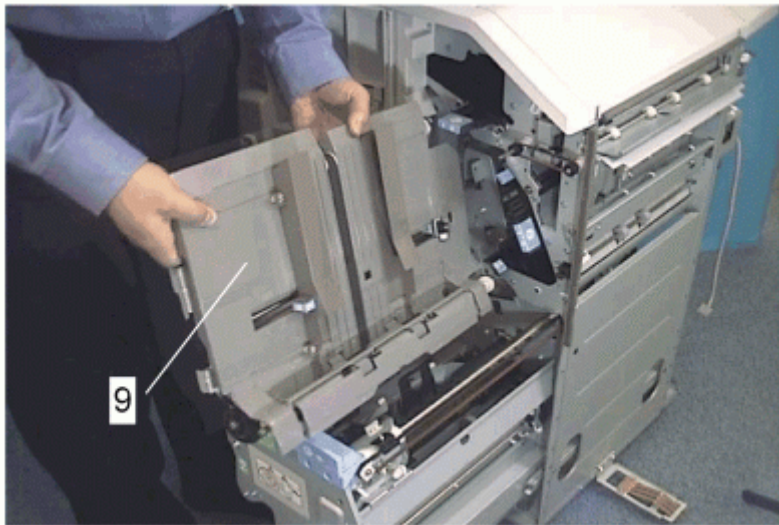


8. Remove the staple tray [9].

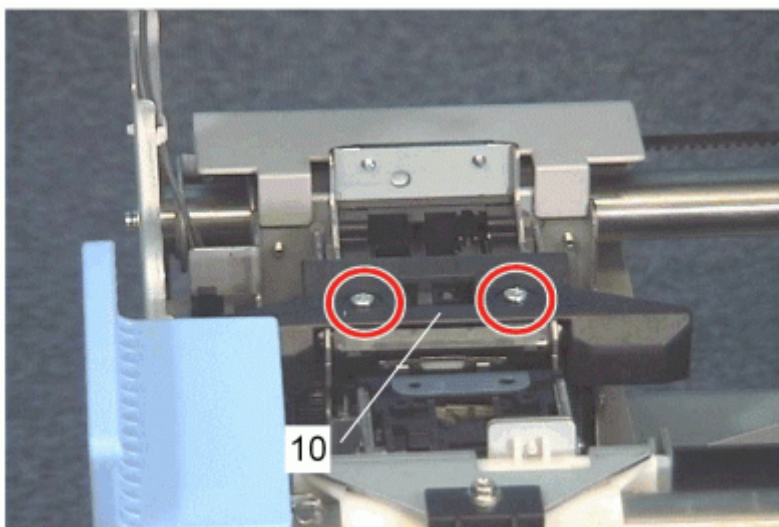

9. Remove the guide [10]. (2 screws)

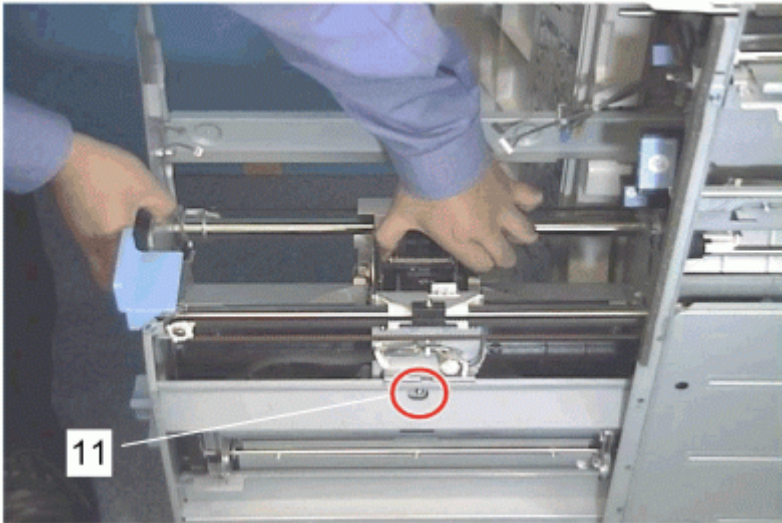


10. Move the stapler unit until its screw come to the hole [11] on the stay.

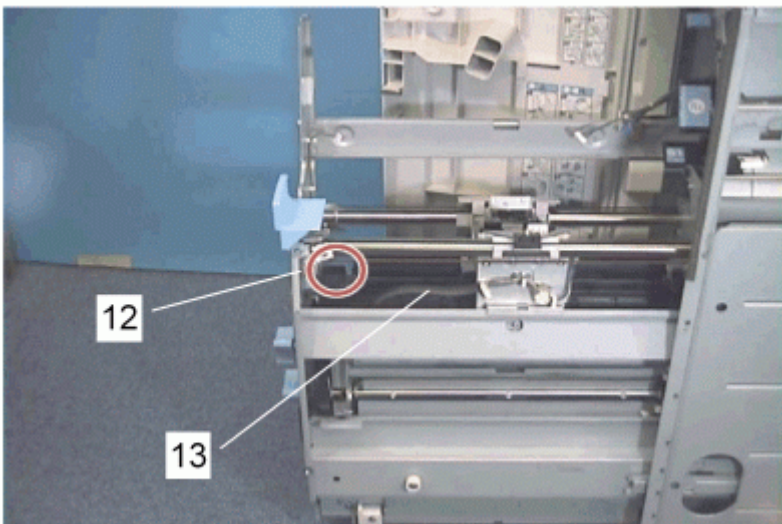

11. Remove the screw [12] that holds the front of the guide plate [13].

B793  
Booklet  
Finisher

## Folder

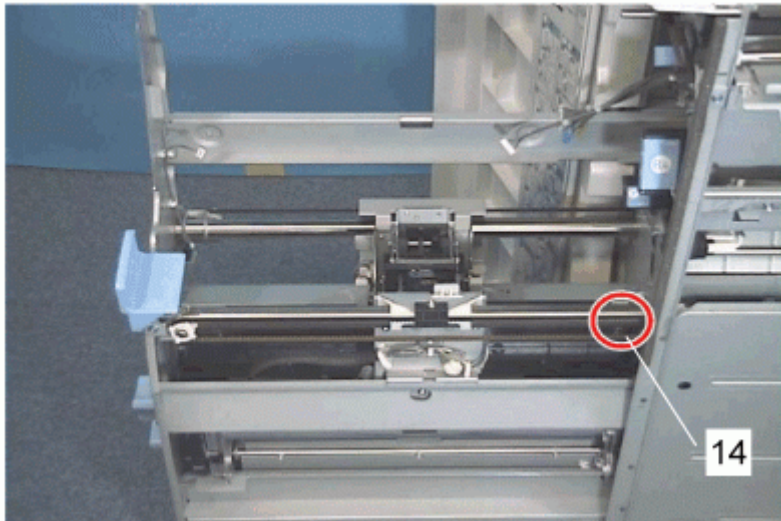


12. Remove the screw [14] that holds the rear of the guide plate.




### ↓ Note

- Remove the rear side screw through the hole in the stay.



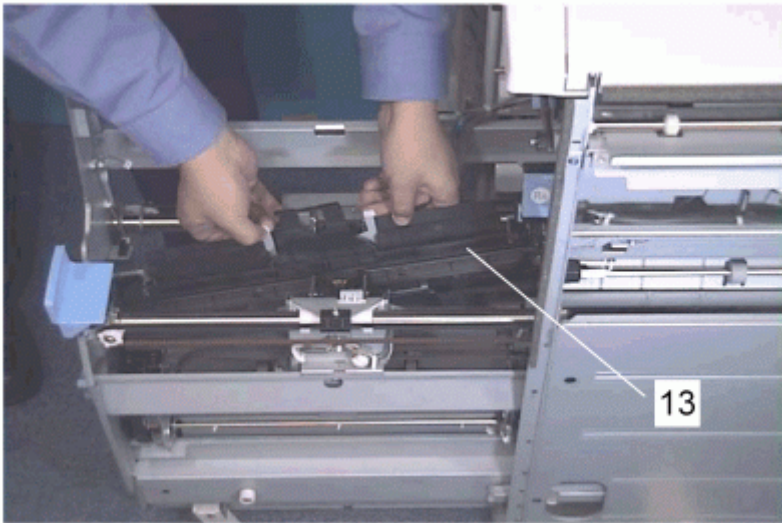


13. Remove the guide plate [13].

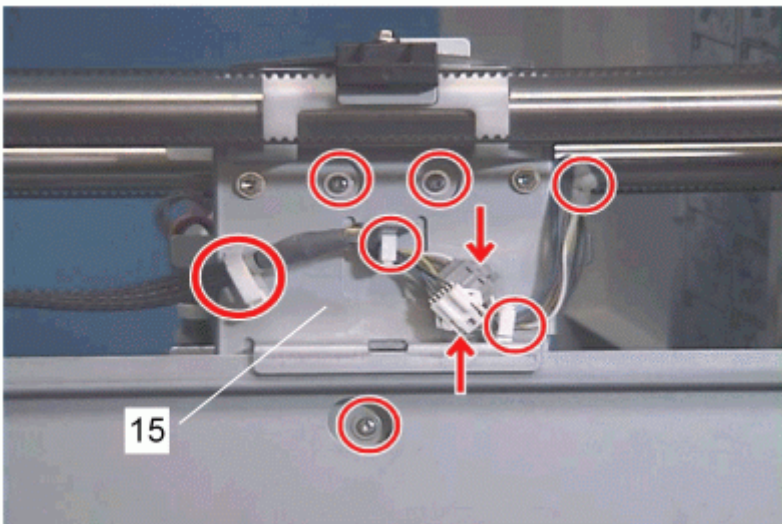


14. Remove the staple folding unit [15] (3 screws, 2 connectors).

B793  
Booklet  
Finisher

Folder

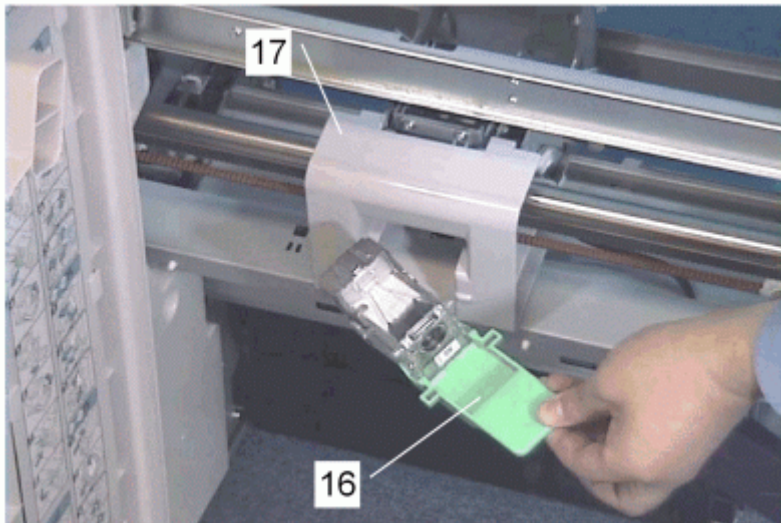


- 15. Remove the staple cartridge [16].
- 16. Remove the stapler unit cover [17].

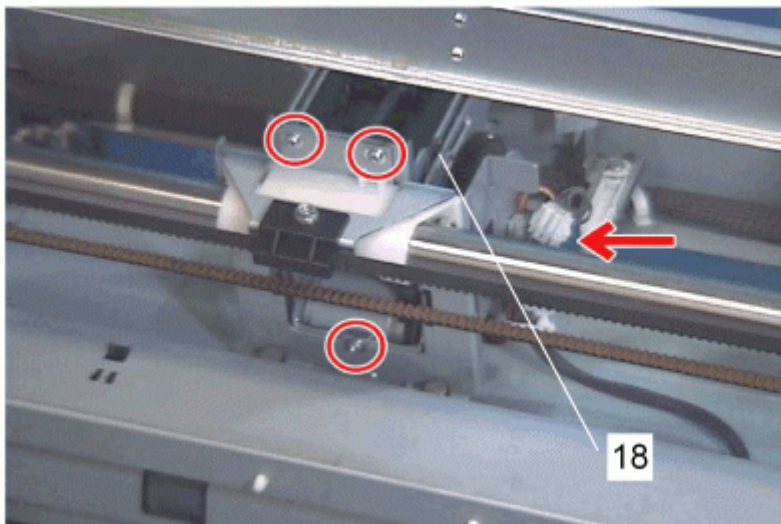


- 17. Remove the stapler drive unit [18].

Reassembly

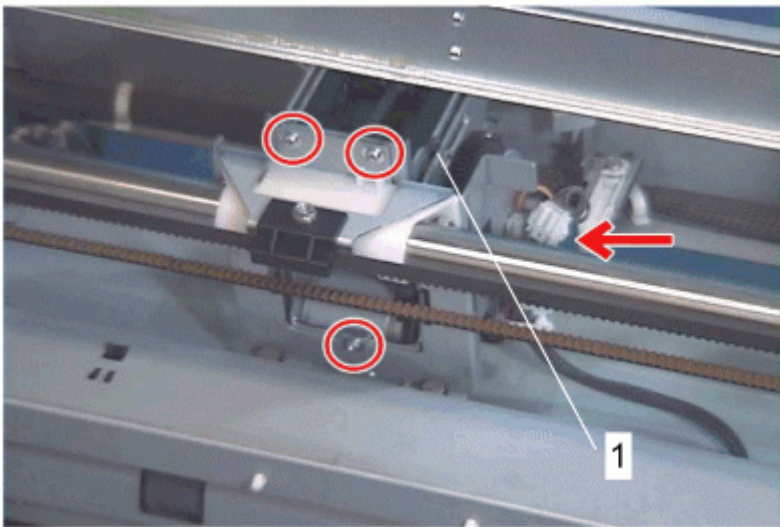


1. Mount the stapler drive unit [1].

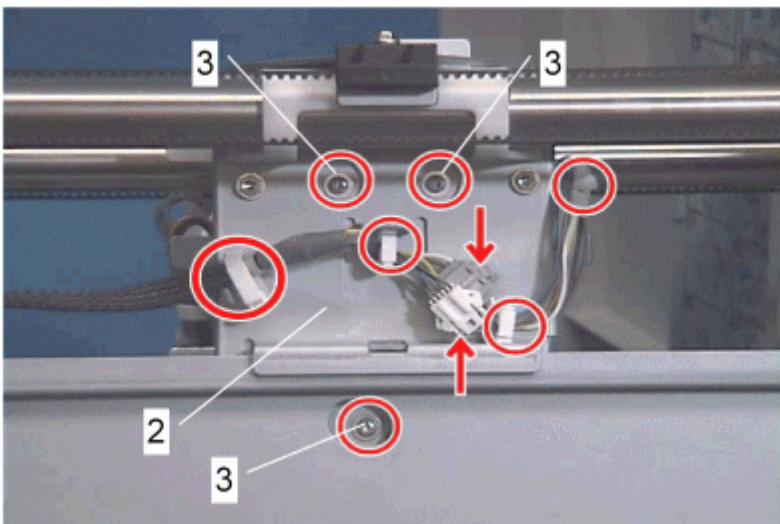


2. Mount the staple folder unit [2]. Do not tighten the screws [3] at this time.

B793  
Booklet  
Finisher


## Folder

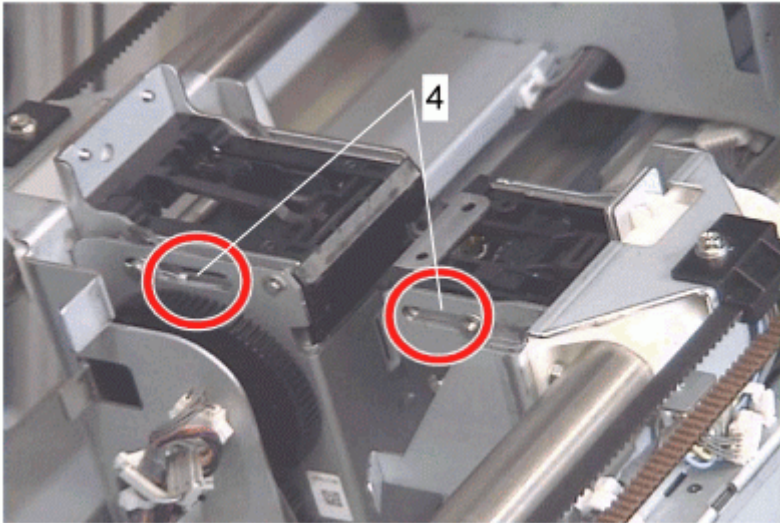

3. Set the special tool in the long hole [4] on both units.

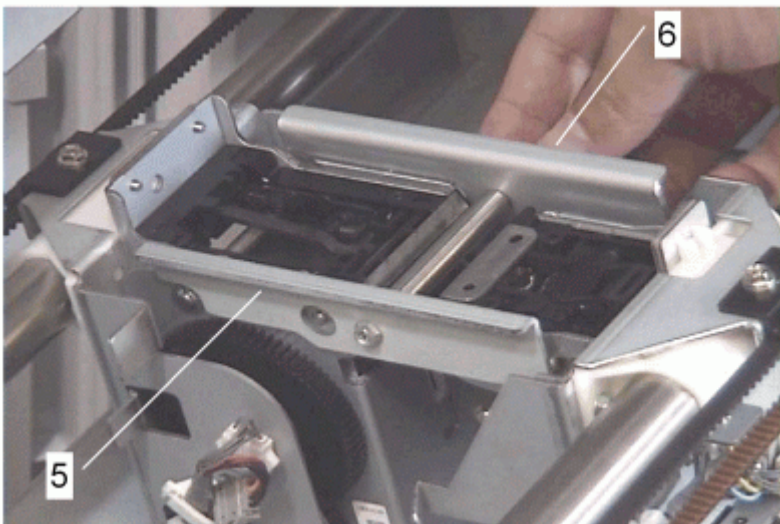

4. Secure the special tool [5] with the knob [6].

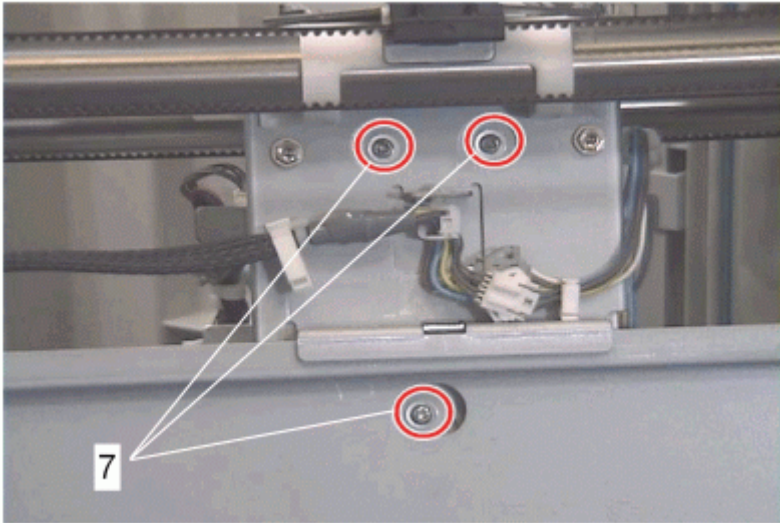


5. Tighten the screws [7] for the stapler folder unit.
6. Reassemble the machine.

B793  
Booklet  
Finisher

Others

## 1.4 OTHERS

### 1.4.1 MAIN BOARD

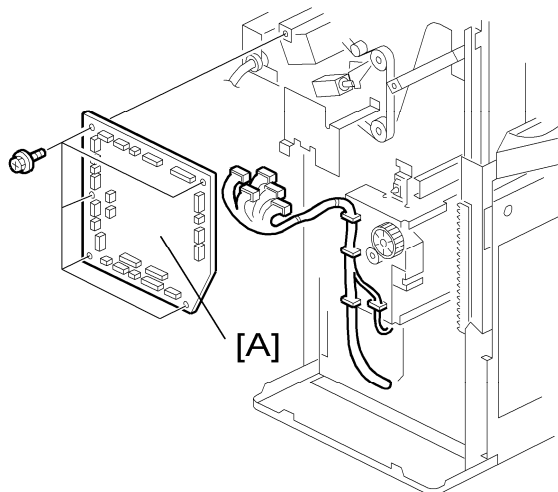

1. Remove the rear cover.
2. Remove the main board [A] (⚙ x 5).

## 1.5 DIP SWITCHES

SW100: Adjust the staple position for booklet mode

| No. | Function  |
|-----|---|
| 1   | ON: 0.3 mm  |
| 2   | ON: 0.6 mm  |
| 3   | ON: 1.2 mm  |
| 4   | Direction<br>OFF: Towards the trailing edge, ON: Towards the leading edge |

SW101: Adjust the fold position

| No. | Function  |
|-----|---|
| 1   | ON: 0.2 mm  |
| 2   | ON: 0.4 mm  |
| 3   | ON: 0.8 mm  |
| 4   | Direction<br>OFF: Towards the trailing edge, ON: Towards the leading edge |

SW102: Move the tray position

| No. | Function  |
|-----|---|
| 1   | OFF → ON → OFF<br>Turn the switch from off to on, then turn it to off again. Then, the tray moves down to the shipping position |
| 2   | Not used  |


 Note

- After you change any of these dip switch settings, open and close the finisher cover to activate the new setting. It is not necessary to turn the main power off/on.

## 2. DETAILED SECTION DESCRIPTIONS

### 2.1 COMPONENT LAYOUT


#### 2.1.1 MECHANICAL COMPONENT LAYOUT

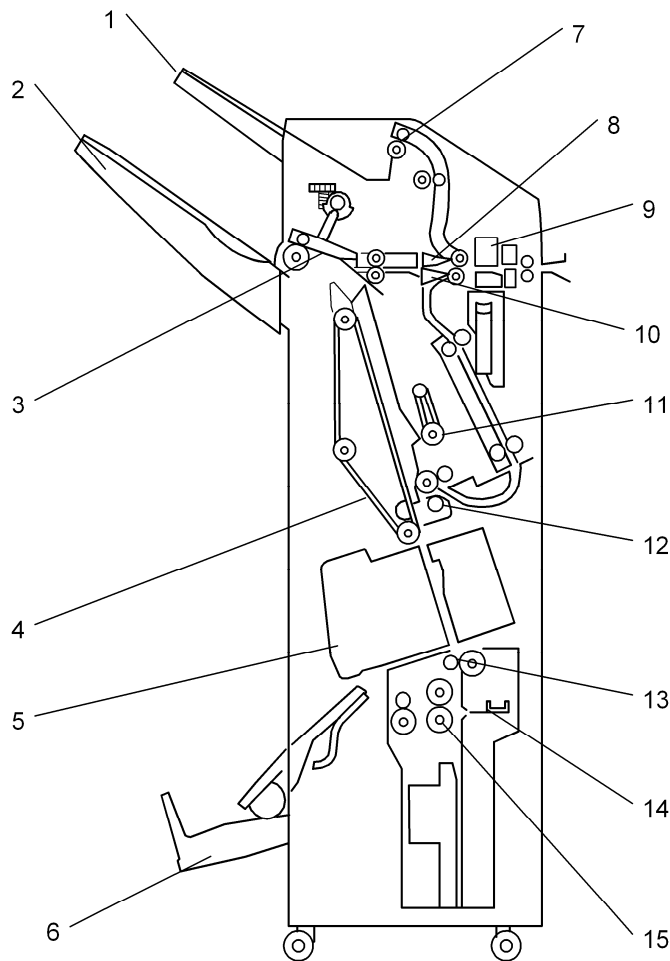

- |                               |                             |                      |
|-------------------------------|-----------------------------|----------------------|
| 1. Proof Tray                 | 2. Shift Tray               | 3. Exit Guide Plate  |
| 4. Stack Feed Out Belt        | 5. Staple Unit              | 6. Booklet Tray      |
| 7. Proof Tray Exit Roller     | 8. Proof Tray Junction Gate | 9. Punch Unit        |
| 10. Staple Tray Junction Gate | 11. Positioning Roller      | 12. 1st Clamp Roller |
| 13. 2nd Clamp Roller          | 14. Folder Plate            | 15. Folder Roller    |




Drive Layout

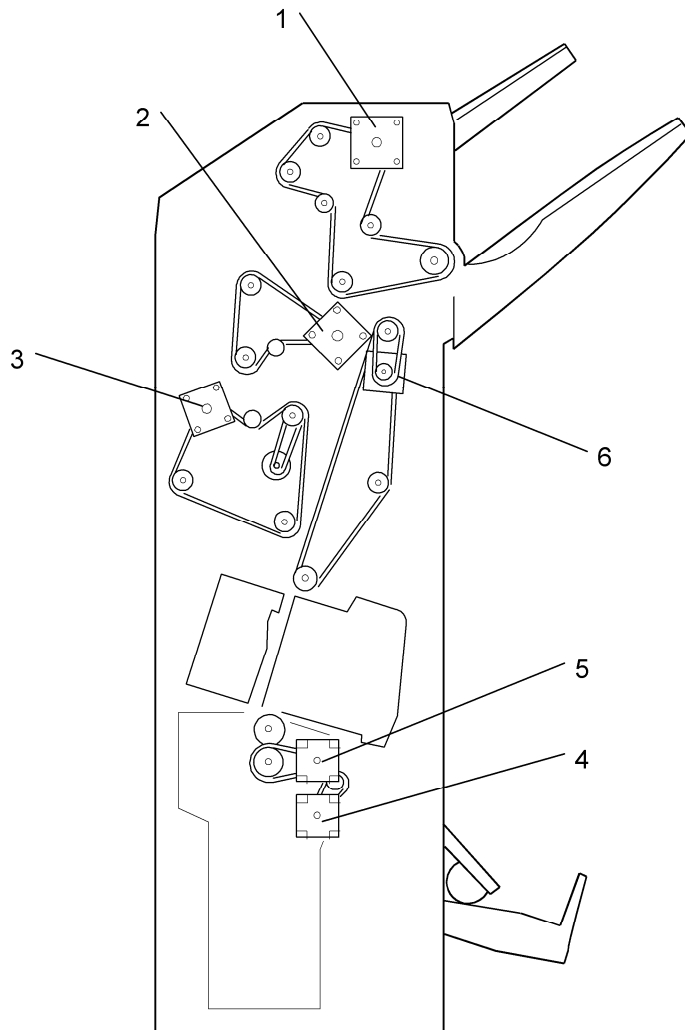

- 1. Upper Transport Motor
- 2. Entrance Motor
- 3. Lower Transport Motor
- 4. Fold Plate Motor
- 5. Fold Roller Motor
- 6. Stack Feed-out Motor


B793  
Booklet  
Finisher

## 2.1.2 ELECTRICAL COMPONENT LAYOUT

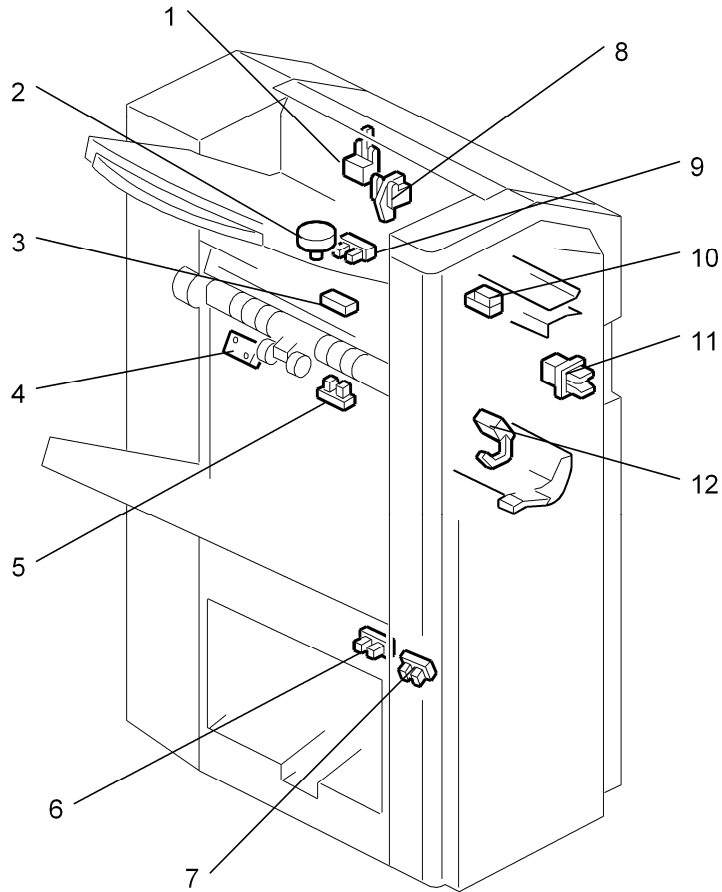

1. Proof Tray Exit Sensor
2. Exit Guide Plate Motor
3. Shift Tray Exit Sensor
4. Upper Limit Switch
5. Shift Tray Position Sensor
6. Rear Booklet Tray Full Sensor
7. Front Booklet Tray Full Sensor
8. Proof Tray Full Sensor
9. Exit Guide Plate HP Sensor
10. Entrance Sensor
11. Front Door Safety Switch
12. Staple Tray Exit Sensor


## Component Layout

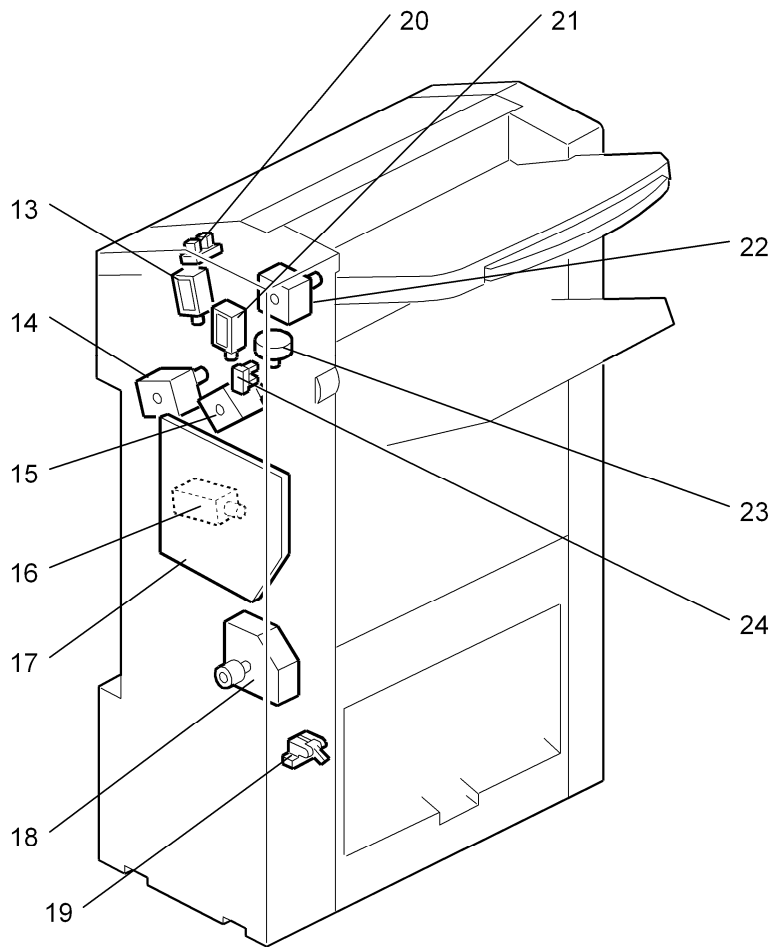

- 13. Proof Tray Gate Solenoid
- 14. Lower Transport Motor
- 15. Entrance Motor
- 16. Positioning Roller Solenoid
- 17. Main Board
- 18. Shift Tray Motor
- 19. Lower Limit Sensor
- 20. Upper Cover Sensor
- 21. Staple Tray Gate Solenoid
- 22. Upper Transport Motor
- 23. Shift Motor
- 24. Shift Motor HP Sensor


B793  
Booklet  
Finisher

## Component Layout

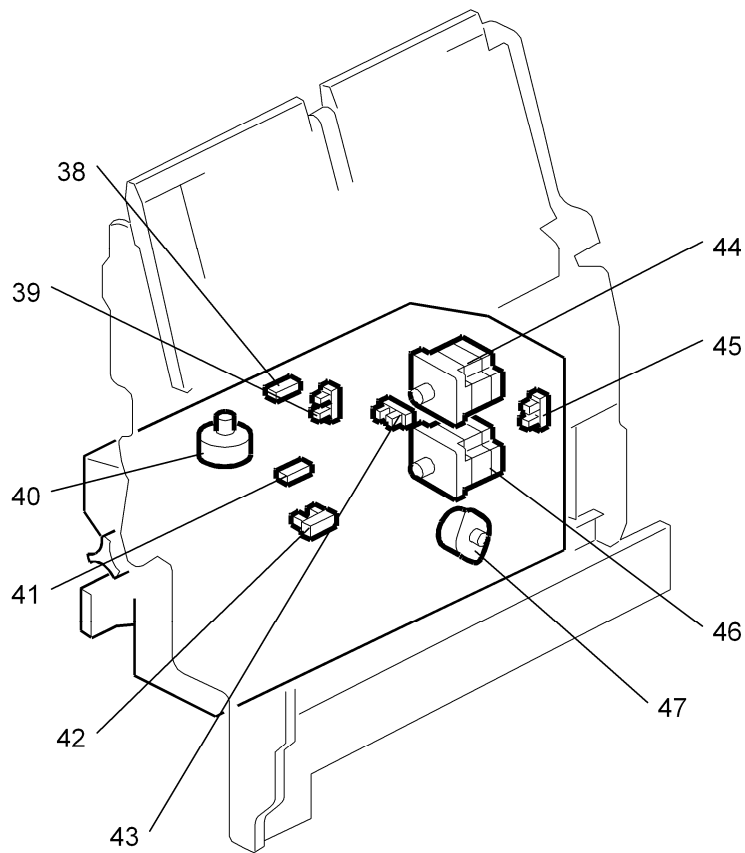

- 38. Fold Unit Exit Sensor
- 39. Lower Clamp Roller HP Sensor
- 40. Lower Retraction Motor
- 41. Fold Unit Entrance Sensor
- 42. Bottom Fence HP Sensor
- 43. Fold Cam HP Sensor
- 44. Fold Roller Motor
- 45. Fold Plate HP Sensor
- 46. Fold Plate Motor
- 47. Bottom Fence Lift Motor

## Component Layout

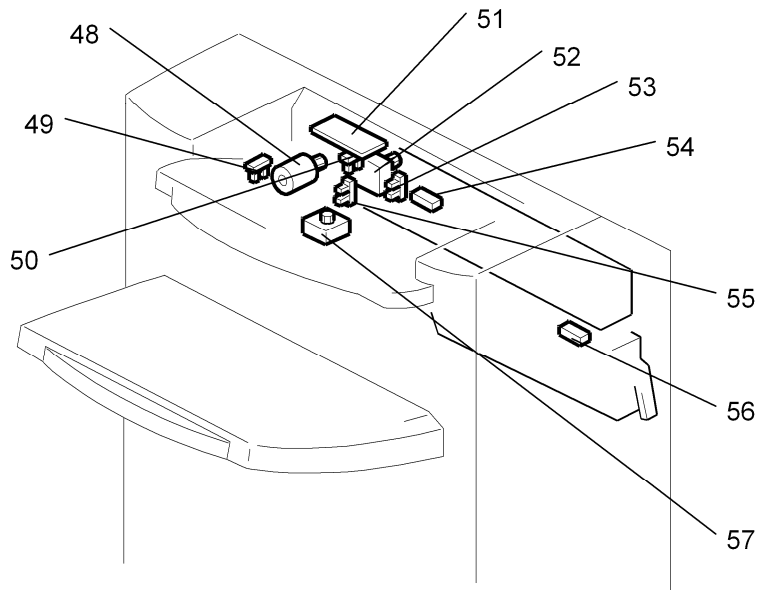

- 48. Punch Motor
- 49. Punch Encoder Sensor
- 50. Punch HP Sensor
- 51. Punch Board
- 52. Paper Position Sensor Slide Motor
- 53. Paper Position Slide HP Sensor
- 54. Paper Position Sensor
- 55. Punch Movement HP Sensor
- 56. Punch Hopper Full Sensor
- 57. Punch Movement Motor

B793  
Booklet  
Finisher

## Component Layout

### Electrical Component Descriptions

#### **Boards**

| Item        | No. | Purpose                  |
|-------------|-----|--------------------------|
| Main Board  | 17  | Controls the finisher.   |
| Punch Board | 51  | Controls the punch unit. |

#### **Sensors**

| Item                           | No. | Purpose   |
|--------------------------------|-----|---|
| Proof Tray Exit Sensor         | 1   | Detects paper when it is fed out to the proof tray.   |
| Shift Tray Exit Sensor         | 3   | Detects paper when it is fed out to the shift tray.   |
| Shift Tray Position Sensor     | 5   | Detects when the shift tray is at the correct height to receive paper.                          |
| Rear Booklet Tray Full Sensor  | 6   | One of two sensors that the machine uses to determine when the booklet tray is full.            |
| Front Booklet Tray Full Sensor | 7   | One of two sensors that the machine uses to determine when the booklet tray is full.            |
| Proof Tray Full Sensor         | 8   | Detects when the proof tray is full.  |
| Exit Guide Plate HP Sensor     | 9   | Detects when the exit guide plate is at home position   |
| Entrance Sensor                | 10  | Detects when paper comes into the finisher  |
| Staple Tray Exit Sensor        | 12  | Detects paper leaving the bottom of the stapler   |
| Lower Limit Sensor             | 19  | Detects when the shift tray has moved to its lowest possible position (the shift tray is full). |
| Upper Cover Sensor             | 20  | Detects when the upper cover is open  |
| Shift Motor HP Sensor          | 24  | Detects when the side-to-side motion of the shift roller is at home position                    |

| Item                         | No. | Purpose  |
|------------------------------|-----|--|
| Stopper S HP Sensor          | 28  | Detects when the 'stopper S' mechanism is at home position.  |
| Stack Feed Out HP Sensor     | 29  | Detects when the stack feed-out belt is at home position   |
| Staple Unit HP Sensor        | 30  | Detects when the side-to-side motion of the stapler unit is at home position   |
| Jogger HP Sensor             | 34  | Detects when the jogger unit is at home position   |
| Staple Tray Paper Sensor     | 35  | Detects when paper is fed into the stapler tray  |
| Stapler Safety Sensor        | 37  | Stops side-to-side movement of the stapler until stopper S and the stack feed-out pawl mechanisms are at home position, to prevent damage to the machine.  |
| Fold Unit Exit Sensor        | 38  | 1) Detects the folded edge of the stack as it feeds out from the nip of the fold rollers so the fold feeds back into the nip, 2) when the folded booklet finally emerges from the nip of the fold rollers, detects the leading and trailing edge of the booklet to make sure that it feeds out correctly.  |
| Lower Clamp Roller HP Sensor | 39  | Detects when the lower clamp roller is at home position  |
| Fold Unit Entrance Sensor    | 41  | Detects 1) the leading edge of the stack during booklet stapling, and 2) also used to signal an alarm if a paper is detected at the entrance of the fold unit when the copier is turned on.  |
| Bottom Fence HP Sensor       | 42  | Detects when the bottom fence of the booklet folding mechanism is at home position   |
| Fold Cam HP Sensor           | 43  | Along with the fold plate HP sensor, this sensor controls the movement of the fold plate. The actuator mounted on the end of the roller that drives the folder plate forward and back makes three full rotations, i.e. the actuator passes the sensor gap twice and stops on the 3rd rotation and reverses. This accounts for the left and right movement of the fold plate. |
| Fold Plate HP Sensor         | 45  | Along with the fold plate HP sensor this sensor controls the movement of the fold plate. The fold plate has arrived at the home position when the edge of the plate enters the gap of this sensor.   |
| Punch Encoder Sensor         | 49  | Controls the timing for activating the punches, to punch holes in the paper at the correct position.   |

## Component Layout

| Item                           | No. | Purpose   |
|--------------------------------|-----|---|
| Punch HP Sensor                | 50  | Detects when the hole-punch firing mechanism is at home position                                  |
| Paper Position Slide HP Sensor | 53  | Detects when the mechanism that measures the paper position in the punch unit is at home position |
| Paper Position Sensor          | 54  | Detects the side edge of the paper, to tell the machine where to put the punch holes.             |
| Punch Movement HP Sensor       | 55  | Detects when the side-to-side motion of the punch unit is at home position.                       |
| Punch Hopper Full Sensor       | 56  | Detects when the punch hopper is full. Also checks if the hopper is installed correctly.          |

## Motors

| Item                   | No. | Purpose  |
|------------------------|-----|--|
| Exit Guide Plate Motor | 2   | Controls the exit guide plate mechanism.   |
| Lower Transport Motor  | 14  | Controls the positioning roller, and other rollers in the finisher (see 'Drive Layout' for details).                                     |
| Entrance Motor         | 15  | Controls the rollers at the entrance of the finisher.  |
| Shift Tray Motor       | 18  | Moves the shift tray up and down.  |
| Upper Transport Motor  | 22  | Controls the rollers that feed paper from the junction gate to the proof tray and to the shift tray (see 'Drive Layout' for details).    |
| Shift Motor            | 23  | Moves the shift tray from side to side.  |
| Stack Feed Out Motor   | 25  | Controls the stack feed-out belt   |
| Jogger Motor           | 26  | Controls the jogger in the stapler tray  |
| Upper Retraction Motor | 27  | Controls the 'stopper S' mechanism. Also moves the upper clamp roller into contact and away from the stack of paper in the stapler tray. |
| Upper                  | 33  | Rotates the upper clamp roller.  |



| Item                              | No. | Purpose   |
|-----------------------------------|-----|---|
| Clamp Roller Motor                |     |   |
| Stapler Unit Motor                | 36  | Moves the stapler from side to side.  |
| Lower Retraction Motor            | 40  | Drives a large cam that alternately clamps and unclamps the lower clamp roller, which is the idle roller of the clamp roller pair. When these rollers are clamped, they are part of the paper feed path and feed the stack toward the bottom fence of the fold unit. When the idle roller is retracted, the stacks falls a very short distance (3 mm) onto the fold unit bottom fence below. These rollers remain unclamped while the bottom fence positions the stack for folding and while the stack is folded by the fold rollers. |
| Fold Roller Motor                 | 44  | Controls the rollers that fold the paper.   |
| Fold Plate Motor                  | 46  | Controls the plate that makes the fold in the paper.  |
| Bottom Fence Lift Motor           | 47  | Raises the bottom fence and stapled stack to the correct fold position for the paper size.  |
| Punch Motor                       | 48  | Punches the holes in the paper.   |
| Paper Position Sensor Slide Motor | 52  | Controls side-to-side movement of the paper position sensor in the punch unit.  |
| Punch Movement Motor              | 57  | Moves the punch from side to side.  |

**Solenoids**

| Item                        | No. | Purpose                                |
|-----------------------------|-----|--|
| Proof Tray Gate Solenoid    | 13  | Controls the proof tray junction gate  |
| Positioning Roller Solenoid | 16  | Controls the positioning roller.       |
| Staple Tray Gate Solenoid   | 21  | Controls the staple tray junction gate |

**Switches**

| Item               | No. | Purpose  |
|--------------------|-----|--|
| Upper Limit Switch | 4   | Detects when the shift tray is at the highest possible position, and cuts power to the shift tray motor. |

### Component Layout

| Item                     | No. | Purpose                                      |
|--------------------------|-----|--|
| Front Door Safety Switch | 11  | Cuts dc power when the front door is opened. |

### **Others**


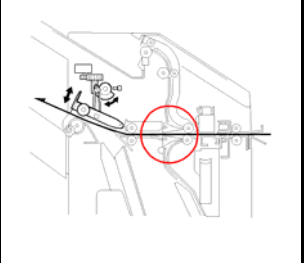
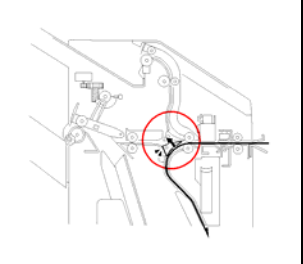
| Item               | No. | Purpose                                      |
|--------------------|-----|--|
| Staple Driver Unit | 31  | Pushes the staples into the paper.           |
| Staple Folder Unit | 32  | Folds the ends of the staples after stapling |

## 2.2 JUNCTION GATES

Two junction gates control the path of paper.


Each junction gate is controlled by a solenoid.

Junction gate operation is summarized in the following table.

| Mode                      | Proof   | Shift  | Staple  |
|---------------------------|---|--|---|
| Paper Path                |  |  |  |
| Proof Tray Gate Solenoid  | ON  | OFF  | OFF   |
| Staple Tray Gate Solenoid | OFF   | OFF  | ON  |

B793  
Booklet  
Finisher

## 2.3 PROOF TRAY

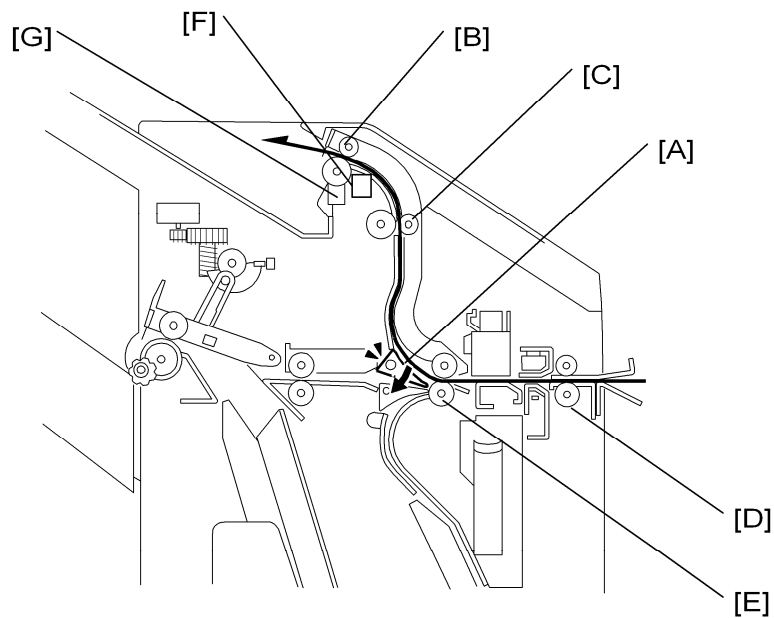

Proof Tray Junction Gate Control [A]: Proof Tray Gate Solenoid

Roller Drive:


- Proof Tray Exit Roller [B], Proof Tray Transport Roller [C]: Controlled by the Upper Transport Motor
- Entrance Roller [D], Transport Roller [E]: Controlled by the Entrance Motor

Jam Detection: Proof Tray Exit Sensor [F]

Tray Full Detection: Proof Tray Full Sensor [G]

## 2.4 SHIFT TRAY

### 2.4.1 UP/DOWN MOTION

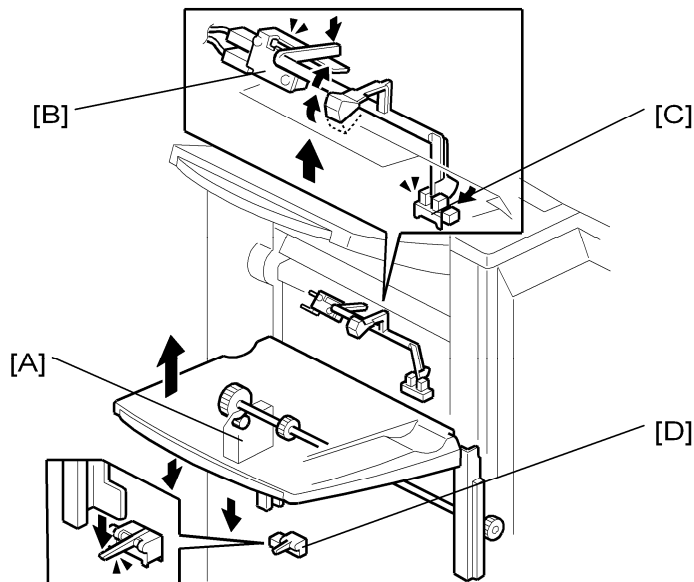

The shift tray motor [A] moves the tray up and down.

The upper limit switch [B] detects when the tray moves up too far, and cuts power to the shift tray motor.


The shift tray position sensor [C] checks when the tray (or the top of the stack) is at the correct height to receive paper.

- Shift Mode: This is checked every 5 sheets
- Staple Mode: This is checked every stack

The lower limit sensor [D] detects when the tray is full. At this point, the tray cannot move down any more.

## Shift Tray

### 2.4.2 SIDE-TO-SIDE MOTION

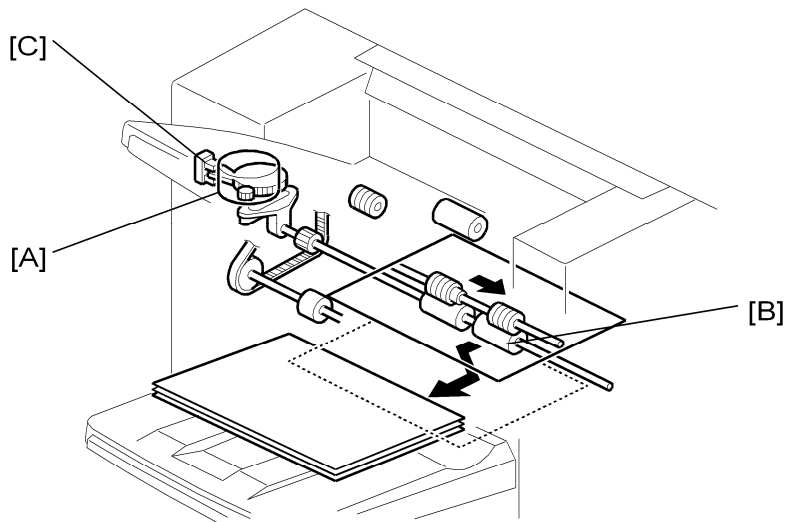


The shift motor [A] moves the shift roller [B] from side to side.

The shift motor HP sensor [C] detects when the mechanism is at home position.

The upper transport motor rotates the shift roller.

When shift mode is used, the shift motor turns on after each page is fed out. Then, for the next set, the shift motor turns the other way. In this way, the user can easily divide the sets.

## 2.5 BOOKLET TRAY

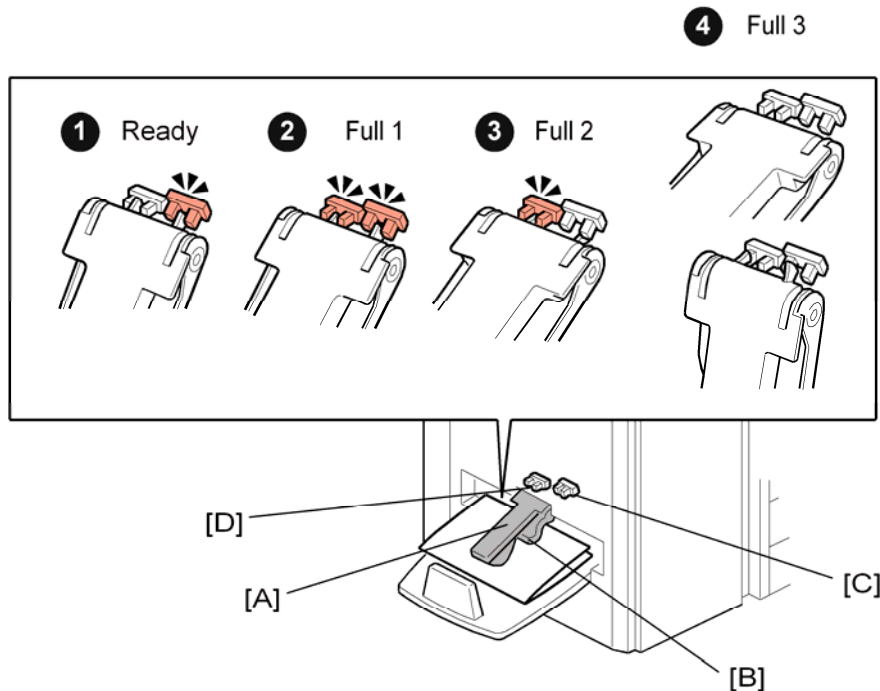

The sensor actuator arm [A] rests on the top of the stack of stapled booklets as they are output to the lower tray. A flap depressor [B] keeps the open ends of the booklets down. The front booklet tray full sensor [C] and rear booklet tray full sensor [D] detect when the tray is full of booklets.

### Note

- The front booklet tray full sensor is mounted higher than the rear booklet tray full sensor.
- The booklet tray is stationary. When it becomes full, the stapling and folding job stops until booklets are removed from the tray.
- If the booklet tray is not installed (this is detected if the front and rear sensors remain OFF), the machine will not operate in the booklet staple and fold mode. When booklet mode is selected, the tray full message appears on the operation panel.

The combinations of the two actuators and two sensors when the actuator arm rises determines the number of booklets that the tray can hold before the job stops.

Tray full detection depends on the size of the paper and the number of sheets in one stapled and folded booklet.

The condition detected by the machine (1 Ready, 2 Full 1, 3 Full 2, 4 Full 3; see the illustration above) depends on the states of the sensors, as shown in the table below.

## Booklet Tray

| Condition                              | Front Sensor | Rear Sensor |
|--|--------------|-------------|
| Ready                                  | ON           | OFF         |
| Full 1                                 | ON           | ON          |
| Full 2                                 | OFF          | ON          |
| Full 3 (or booklet tray not installed) | OFF          | OFF         |

In the tables below:

- "Sht" denotes "sheets in a stack".
- "Cnt" denotes "Count" (see below for an explanation).

After a booklet is feed out, the fold roller motor stops the exit roller. The machine then monitors the tray full sensors every feed-out of a paper stack. The machine checks a certain condition, based on the size of the paper and the number of sheets in the booklet.

Two examples are shown below the table. Tell the operators that the number of sheets that the lower tray can hold will vary greatly.

### - Lower Tray Full Condition Tables -

#### A3 (DLT)

| Sheet  | 1      | 2     | 3      | 4      | 5      | 6     | 7     | 8     | 9     | 10    |
|--------|--------|-------|--------|--------|--------|-------|-------|-------|-------|-------|
| Full 1 | 15 Cnt | -     | -      | -      | -      | -     | -     | -     | -     | -     |
| Full 2 | -      | 3 Cnt | 11 Cnt | -      | -      | -     | -     | -     | -     | -     |
| Full 3 | -      | -     | -      | 16 Cnt | 12 Cnt | 2 Cnt | 3 Cnt | 5 Cnt | 6 Cnt | 7 Cnt |

#### A4 (LT)

| Sheet  | 1      | 2     | 3      | 4      | 5     | 6     | 7     | 8     | 9     | 10    |
|--------|--------|-------|--------|--------|-------|-------|-------|-------|-------|-------|
| Full 1 | 15 Cnt | -     | -      | -      | -     | -     | -     | -     | -     | -     |
| Full 2 | -      | 8 Cnt | 16 Cnt | 19 Cnt | 5 Cnt | 2 Cnt | 2 Cnt | 2 Cnt | 3 Cnt | 4 Cnt |
| Full 3 | -      | -     | -      | -      | -     | -     | -     | -     | -     | -     |




**- Examples -**

After the copier makes a booklet with 1 sheet of 11 x 17 inch paper, the machine checks every feed-out of a paper stack for the 'Full 1' condition. If the Full 1 condition occurs 15 times ('**15 Cnt**' in the table above), the machine detects that the tray is full.

After the copier makes a booklet with 5 sheets of A4/LT paper, the machine checks every feed-out of a paper stack for the 'Full 2' condition. If the Full 3 condition occurs 5 times ('**5 Cnt**' in the table above), the machine detects that the tray is full.



## 2.6 JOGGER UNIT

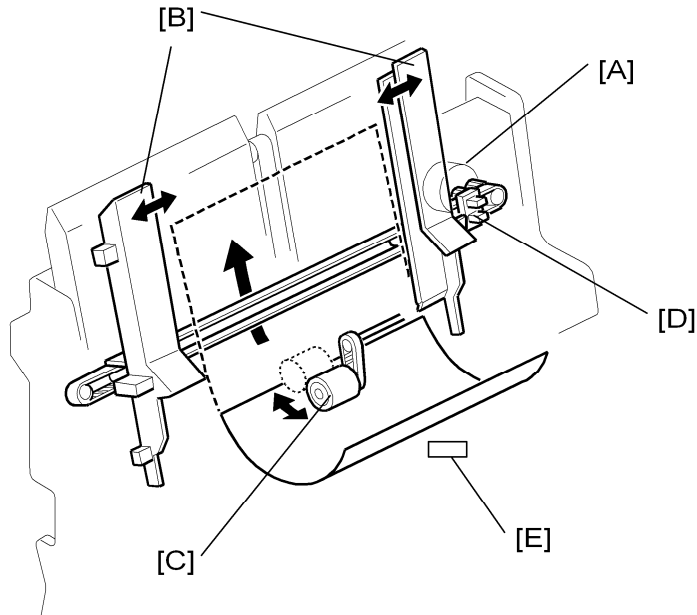

The jogger is used in corner-staple mode and in booklet mode.


For each sheet of paper when it arrives in the staple tray, the following is done.

- The jogger motor [A] drives the jogger fences [B].
- The positioning roller solenoid moves the positioning roller [C] onto the top of the sheet. Then the lower transport motor turns on and the positioning roller rotates to push the sheet of paper against the stopper (there are two stoppers: stopper L or stopper S the one that is used depends on the paper size, as we shall see later.)

The jogger HP sensor [D] detects when the jogger fences are at home position (away from the stack).

The staple tray exit sensor [E] detects if a jam occurs when the machine feeds the stack out at the bottom of the jogger tray.

## 2.7 EXIT GUIDE PLATE, PAPER FEED OUT

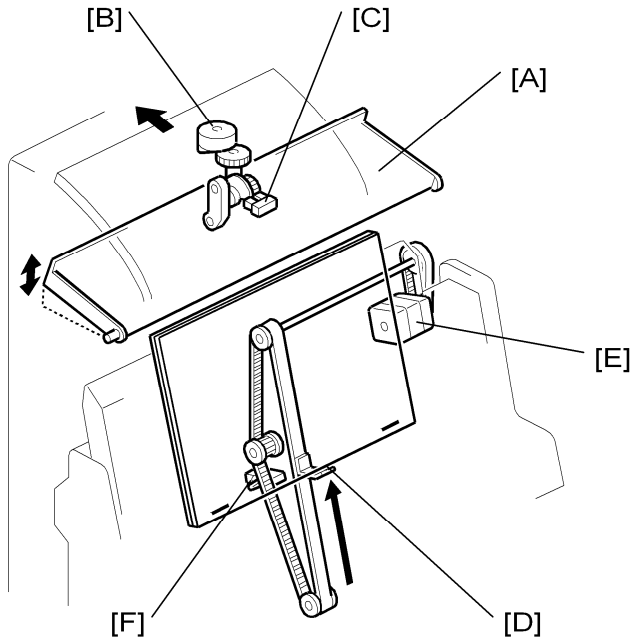

The exit guide plate [A] opens when a stapled stack is fed out.


Also it opens every time a sheet is fed to the staple tray, to prevent the paper running into the exit roller during stacking.

The exit guide plate motor [B] drives the exit guide plate. The exit guide plate HP sensor [C] detects when the guide plate is at home position.

The stack feed-out belt feeds out stapled stacks. The pawl [D] on the belt moves the stack out to the exit.

The stack feed-out motor [E] drives the belt. The stack feed-out HP sensor [F] detects when the belt is at home position.

## 2.8 STAPLER UNIT MOVEMENT

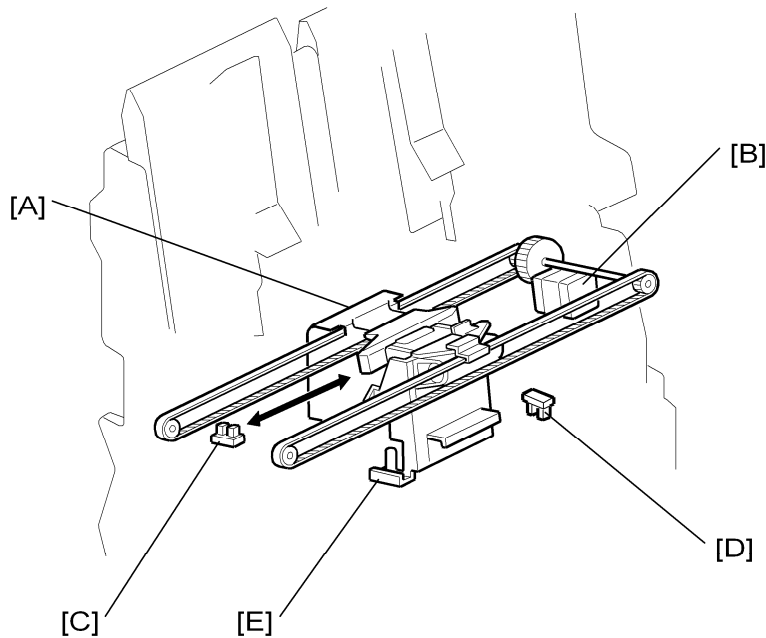

The machine has only one stapler [A]. It does stapling for booklets and for corner stapling. The stapler unit motor [B] moves the stapler from side to side. The stapler unit HP sensor [C] detects when the stapler unit is at home position.

In corner staple mode, at the start of the job, the stapler moves to the position where the stapler will be inserted.

In booklet mode, at the start of a job, the stapler moves to a starting position that depends on the paper size, as follows:

- 8.5 x 14 inches or shorter: Rear side staple position
- Longer than 8.5 x 14 inches: Center position. When the stapler is at the center position, bracket [E] releases 'stopper L', which catches the bottom edge of the paper for booklet stapling with longer paper sizes. This will be described in a later section.

If the stapler safety sensor [D] detects the stapler unit at its initialization, the stapler unit stops moving until the stack feed out belt pawl and stopper S are at home position. If the stapler unit does not stop, it could collide with the pawl and/or the stopper.

## 2.9 STACKING FOR BOOKLET STAPLING

### 2.9.1 OVERVIEW


There are two stoppers near the stapler unit. These stoppers hold the stack of paper in the correct position during stacking.

The stoppers are called 'stopper S' and 'stopper L'. Stopper S is used for legal size paper, or shorter than 8.5 x 14 inches. Stopper L is used for paper that is longer than 8.5 x 14 inches.

#### ↓ Note


- In corner stapling mode, the pawl on the stack feed-out belt holds the stack of paper. For booklet stapling, this pawl stays at home position, which is on the rear side, so it does not interfere with booklet stapling.

### 2.9.2 8.5 X 14 (LEGAL) OR SHORTER

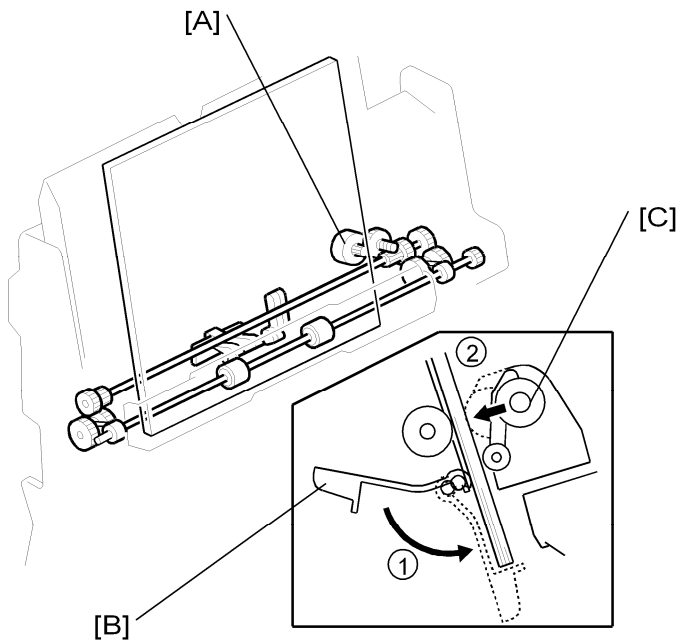


At the start of the set, the upper retraction motor [A] turns on, and stopper S [B] moves down into position to catch the paper ①. The upper retraction motor also moves the upper clamp roller [C] into contact with the stack ②.

## Stacking for Booklet Stapling

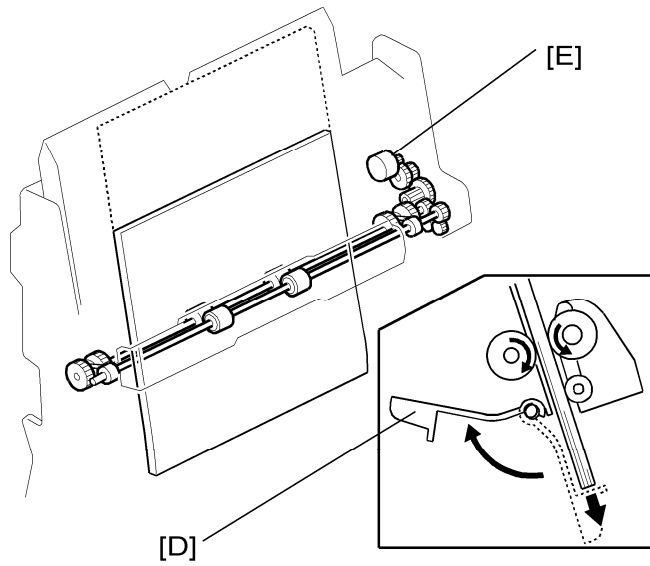

When the stack is complete, stopper S moves away [D], and the machine feeds the stack to the correct position for stapling. To do this, the upper clamp roller motor [E] rotates the upper clamp roller.

### 2.9.3 LONGER THAN 8.5 X 14 INCHES

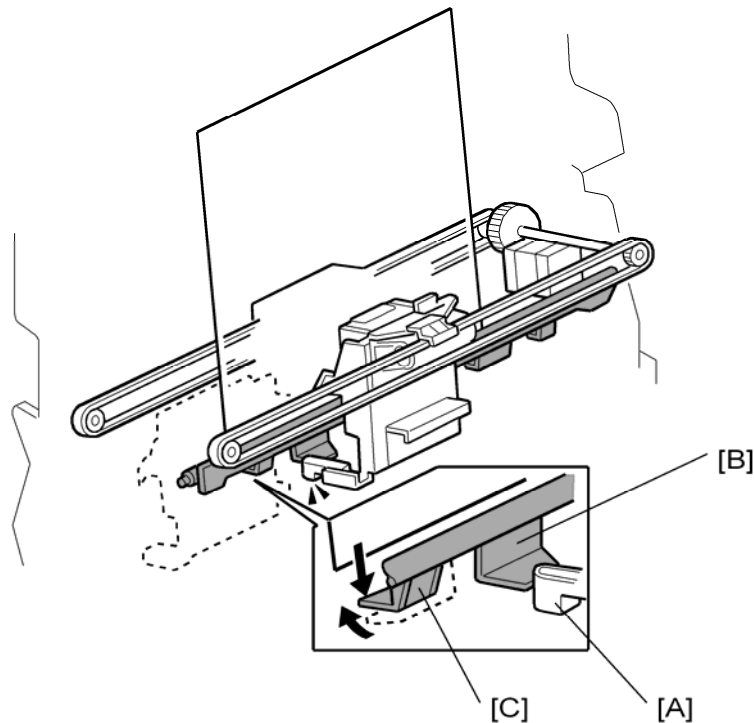


At the start of the set, the stapler moves to the center position. At this position, a bracket [A] on the stapler unit pushes stopper L [B]. The pawl [C] on the stopper L assembly then moves into position to catch the paper. The upper clamp roller holds the stack (see the

previous section).

When the stack is complete, the stapler moves to the rear-side position, and stopper L moves away. The machine feeds the stack to the correct position for stapling.

## 2.10 MOVING THE STACK TO THE FOLDING POSITION

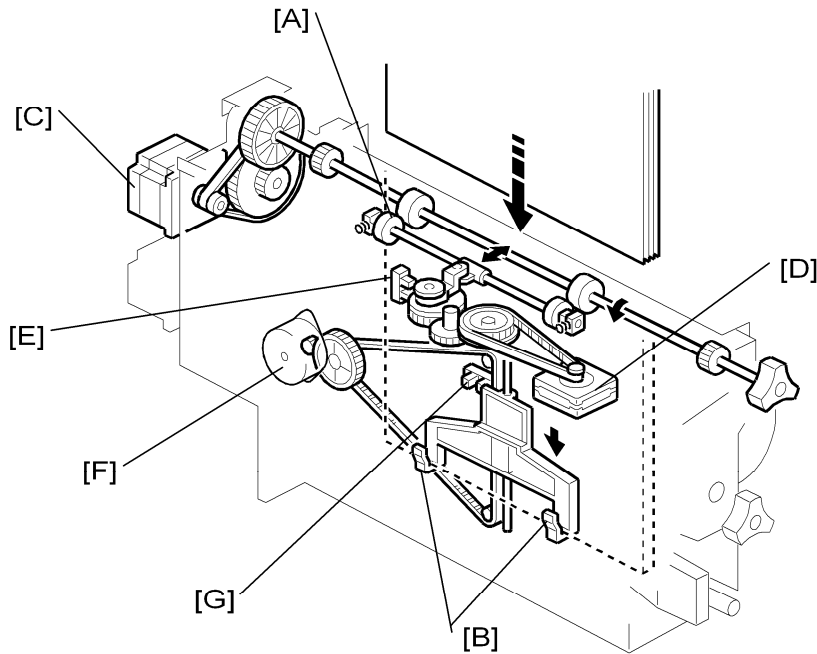

First, the upper clamp roller feeds the stack down after the stack has been stapled. When the lower clamp roller [A] catches the stack, the upper clamp roller stops, and the lower clamp roller feeds the stack down.

The lower clamp roller is released just before the leading edge of the stack reaches the bottom fence [B] (this fence consists of two pawls that catch the paper). The bottom fence moves the stack to the folding position

The fold roller motor [C] turns the lower clamp roller.

The lower retracting motor [D] moves the lower clamp roller against and away from the stack. The lower clamp roller HP sensor [E] detects when the lower clamp roller is moved to the home position.

The bottom fence lift motor [F] moves the bottom fence up and down. The bottom fence HP sensor [G] detects when the bottom fence is at home position.




## 2.11 FOLDER

### 2.11.1 OVERVIEW

The fold plate pushes the stack into the nip between the fold rollers. The fold rollers feed out the stack, then reverse to feed it back in again. Then, the fold rollers feed the stack out of the folder, to the booklet tray.

### 2.11.2 FOLD PLATE

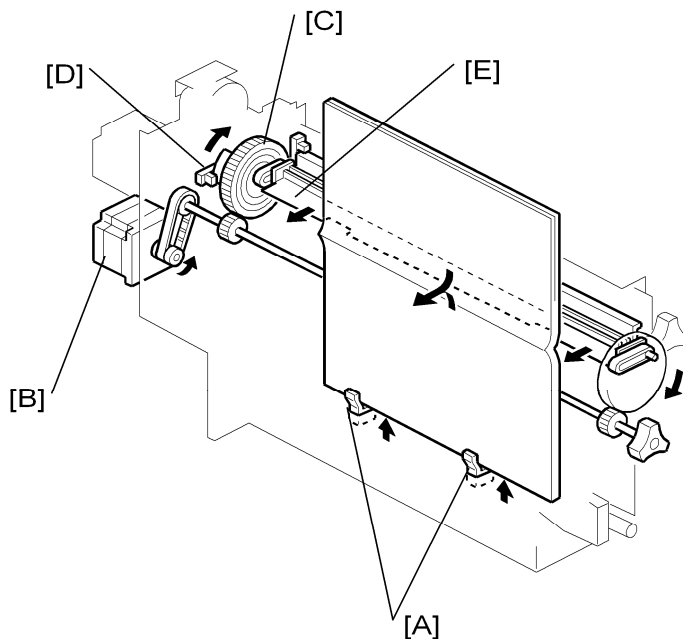

[A]: Bottom Fence Stack Stoppers. Catches the stack after it is released by the clamp rollers.


[B]: Fold Plate Motor. Drives the timing belt and gears that move the fold plate.

[C]: Fold Plate Cam. Controls the movement of the fold plate to the left (into the nip of the fold rollers) and right (toward the fold plate home position).

[D]: Fold Plate HP Sensor. Controls operation of the fold plate motor.

[E]: Fold Plate. Moves left and pushes the stack into the nip of the fold rollers and then moves right to retract.

### 2.11.3 FOLD ROLLERS

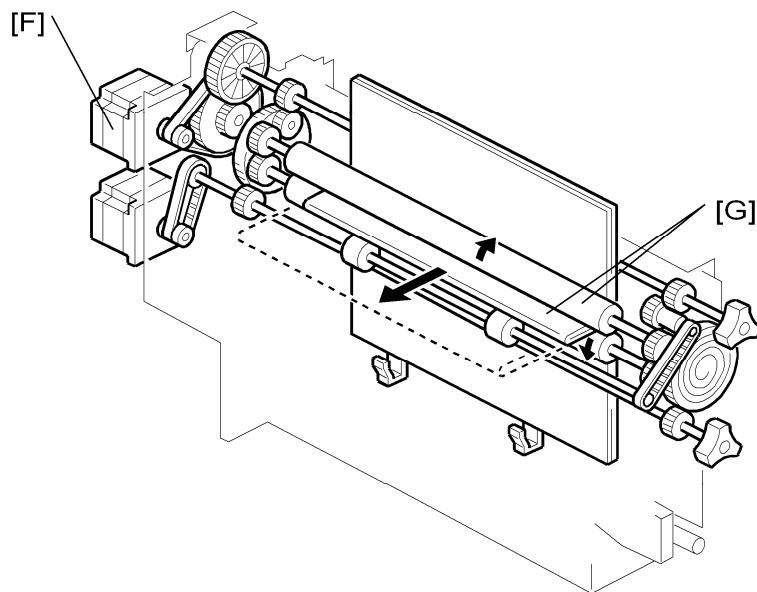

[F]: Fold Roller Motor. Drives forward to feed out the stack at the fold, and then drives forward again to feed out the folded stack.

 Note


- This cycle can be repeated by changing the setting of SP6136.

[G]: Fold Rollers. Driven by the fold roller motor, this roller pair feeds out the stack at its fold, reverses to feed in the stack to, and then feeds forward again (assisted by the fold unit exit rollers – not shown) to feed out the stack to the lower tray.

## 2.12 PUNCH UNIT

### 2.12.1 OVERVIEW OF OPERATION

#### *Skew Correction Before Punching*

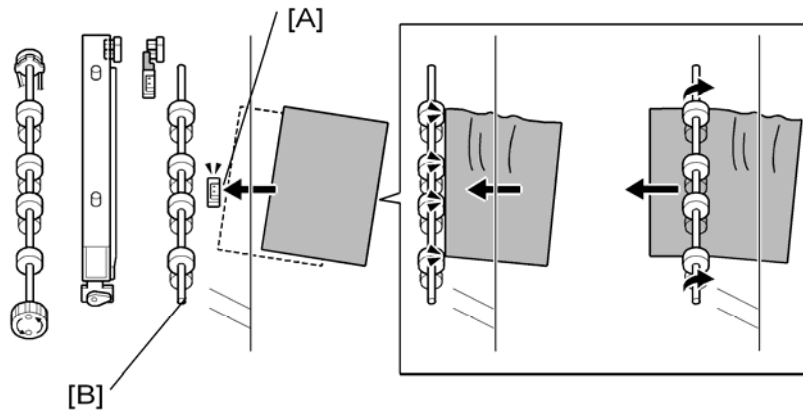

The finisher entrance roller corrects for paper skew and then the punch unit moves across to punch the holes at the correct position. Each sheet is punched one at a time.

Paper feeds out of the copier. The finisher entrance sensor [A] detects the leading edge of the sheet.


The finisher entrance roller [B] stops rotating briefly while the copier exit rollers continue to rotate. This buckles the paper against the finisher entrance roller to correct skew. The finisher entrance roller starts to rotate again and feeds the sheet into the finisher.

These SP codes adjust the skew operation in the punch unit:

- SP6130. This SP corrects the punch hole alignment. To do this, it corrects the skew of each sheet by adjusting the amount of time the finisher entrance roller remains off while the exit roller of the machine remains on. For more, see Section "5. Service Tables".
- SP6131. This SP determines whether the finisher entrance roller stops to correct skew when paper enters the finisher. You can use this SP to disable the skew correction. For more, see Section "5. Service Tables".

## Punch Unit

### **Punch Unit Position Correction**

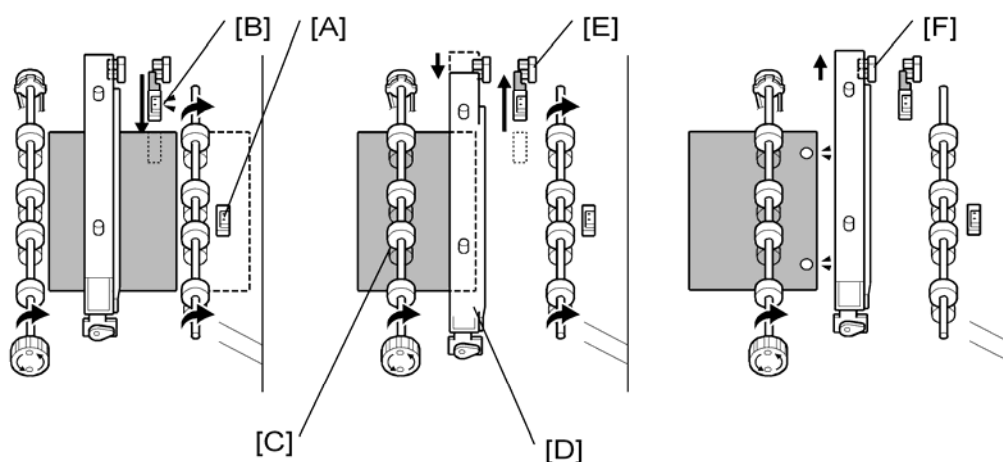

These operations (skew correction before punching, and punch unit position correction) increase the accuracy of the punch alignment.

#### **①**

The trailing edge of the sheet passes the finisher entrance sensor [A].

The paper position slide unit moves the paper position sensor [B] forward to the edge of the paper.

The paper position sensor detects the position of the paper edge and sends this information to the punch unit board. The machine uses the detected position of the paper edge to calculate the correct position for punching.

The upper transport motor switches on and rotates the feed rollers [C] the prescribed distance to put the paper under the punch unit [D].


#### **②**

Using the result of the position calculation, the punch unit control board moves the punch unit [D] to the adjusted punch position.

The paper position slide unit and its paper sensor, move back to the paper position slide home position sensor [E], and the punch unit fires the punches to make the holes.

#### **③**

The feed rollers feed the punched paper out of the punch unit and into the paper path. The punch unit moves back to home position (detected by the home position sensor [F]).

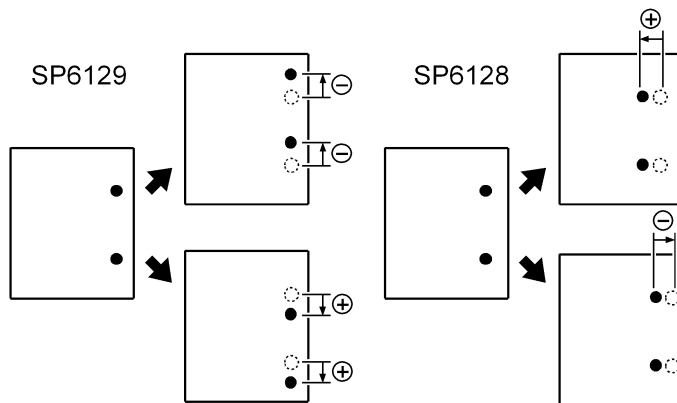


These SP codes adjust the punch hole alignment:

- SP6128 Adjusts the punch positions in the direction of paper feed.
- SP6129 Adjusts the punch position perpendicular to the direction of feed.

For more, see Section "5. Service Tables".

## 2.12.2 PAPER POSITION DETECTION

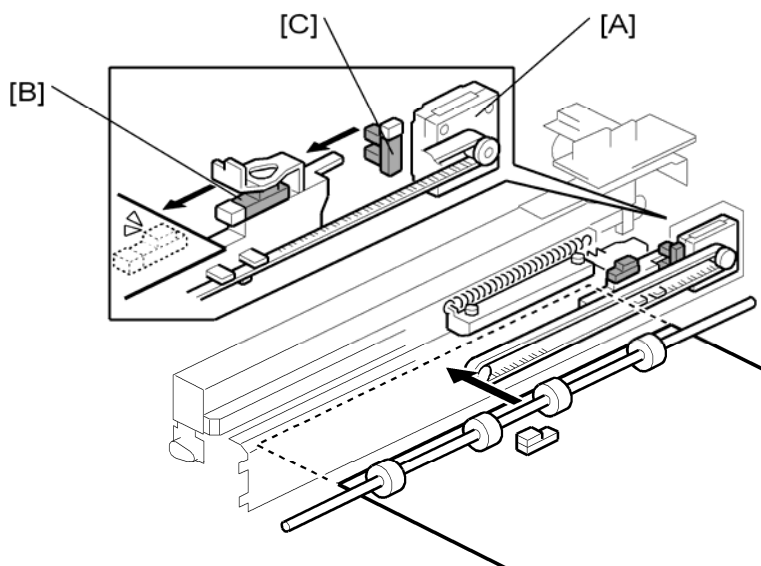


The paper position sensor slide motor [A] extends and retracts the paper position slide that holds the paper position sensor [B].

The paper position sensor detects the position of the paper edge. The detected position of the paper is used to move the punch unit across to the correct position for punching.

When the paper position slide is retracted, the paper position slide HP sensor [C] detects when the slider is at home position and stops paper position slide motor.

## Punch Unit

### 2.12.3 PUNCH UNIT MOVEMENT

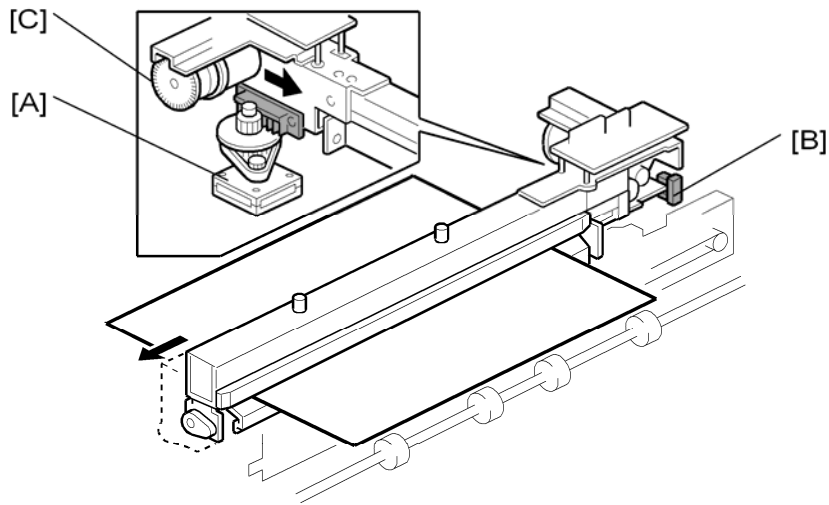


The punch movement motor [A] extends and retracts the punch unit to put it at the correct position for punching.


The punch movement HP sensor [B] detects the position when it retracts, switches off the punch movement motor, and stops the punch unit at its home position.

The punch drive motor [C] fires the punches that punch holes in the paper below.

### 2.12.4 PUNCH SELECTION AND FIRING

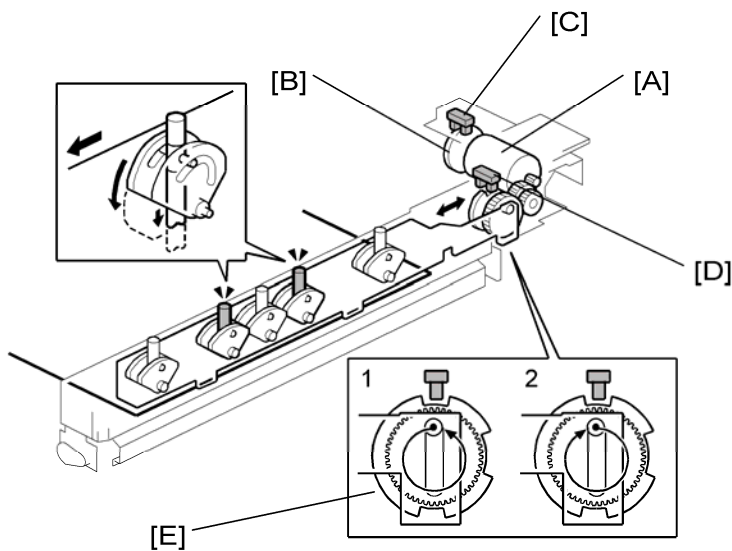

The punch drive motor [A] turns the small, notched encoder wheel [B] through the gap in the punch encoder sensor [C]. The sensor output is used to control the punch timing.

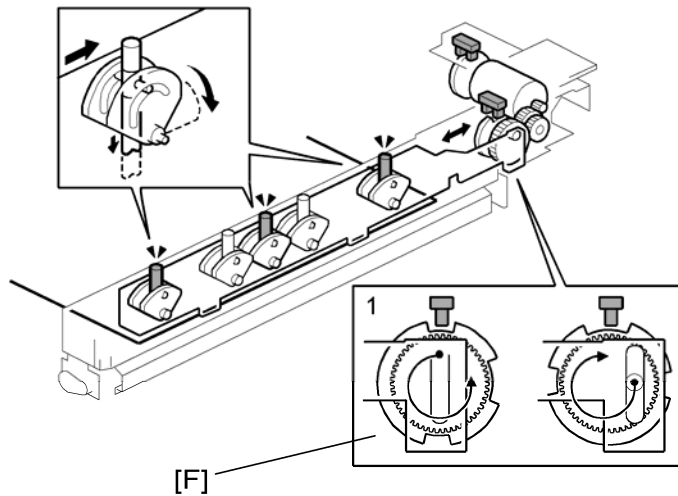

The timing for 2-hole punching [E] is different from 3-hole punching [F].


When the punch unit is at the punching position, the punch motor turns until the encoder detects the starting position for 2-hole or 3-hole punching.

- This is the '1' position in the diagrams (the first diagram is for 2-hole punching, and the second diagram is for 3-hole punching).

Then, the punch drive motor turns counter-clockwise to the '2' position. This movement punches the holes in the paper.

Then, the punch drive motor turns clockwise to the '1' position, to be ready for the next sheet of paper.

### 2.12.5 PUNCH HOPPER MECHANISM

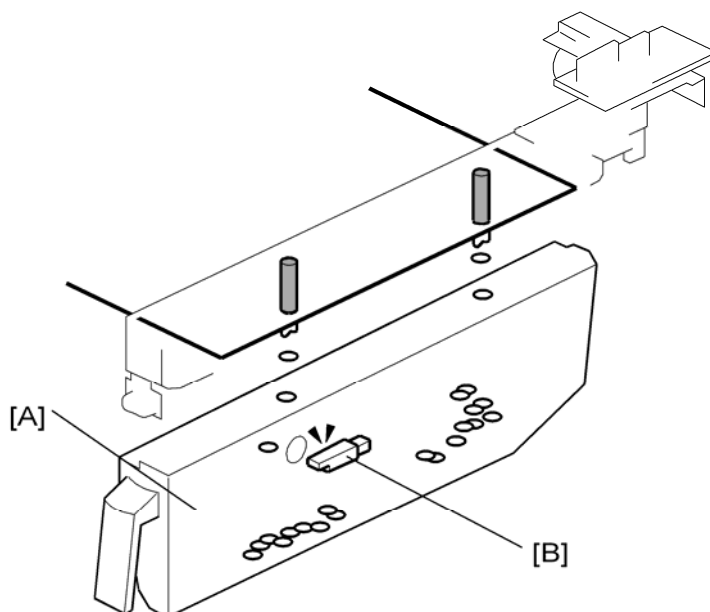

The punchouts fall from the punch unit into the punch hopper [A].

B793  
Booklet  
Finisher

## Punch Unit

The punch hopper full sensor [B] does the following:

- Signals that the hopper is full when it detects the top of the stack of punchouts that have collected in the hopper.
- Detects when the punch hopper is set properly.



**PAPER FEED UNIT**  
**B800**



# PAPER FEED UNIT B800

## TABLE OF CONTENTS

|   |          |
|---|----------|
| <b>1. REPLACEMENT AND ADJUSTMENT .....</b>          | <b>1</b> |
| 1.1 REAR COVER .....                                | 1        |
| 1.2 MOTORS AND CLUTCHES .....                       | 2        |
| 1.2.1 LIFT MOTORS.....                              | 2        |
| 1.2.2 UPPER AND LOWER PAPER FEED CLUTCHES.....      | 2        |
| 1.2.3 PAPER FEED MOTOR.....                         | 3        |
| 1.3 MAIN BOARD .....                                | 4        |
| 1.4 PAPER FEED UNIT .....                           | 5        |
| 1.5 PICK-UP, PAPER FEED AND SEPARATION ROLLERS..... | 6        |
| 1.6 LIFT, PAPER END, AND RELAY SENSORS .....        | 7        |
| <br>  |          |
| <b>2. DETAILED DESCRIPTIONS.....</b>                | <b>8</b> |
| 2.1 COMPONENT LAYOUT .....                          | 8        |
| 2.1.1 MECHANICAL COMPONENT LAYOUT .....             | 8        |
| 2.1.2 ELECTRICAL COMPONENT LAYOUT .....             | 9        |
| 2.2 PAPER FEED .....                                | 10       |
| 2.3 PAPER SIZE DETECTION .....                      | 11       |
| 2.4 REVERSE ROLLER AND PICK-UP ROLLER RELEASE ..... | 12       |
| 2.5 PAPER LIFT .....                                | 13       |
| 2.6 PAPER HEIGHT AND END DETECTION.....             | 14       |
| 2.6.1 PAPER HEIGHT DETECTION.....                   | 14       |
| 2.6.2 PAPER END AND BOTTOM PLATE .....              | 15       |



# Read This First

## Safety and Symbols


### Replacement Procedure Safety

#### **CAUTION**

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

### Symbols Used in this Manual


This manual uses the following symbols.

: See or Refer to

: Screws

: Connector


: Clip ring

: E-ring



# 1.REPLACEMENT AND ADJUSTMENT


## 1.1REAR COVER

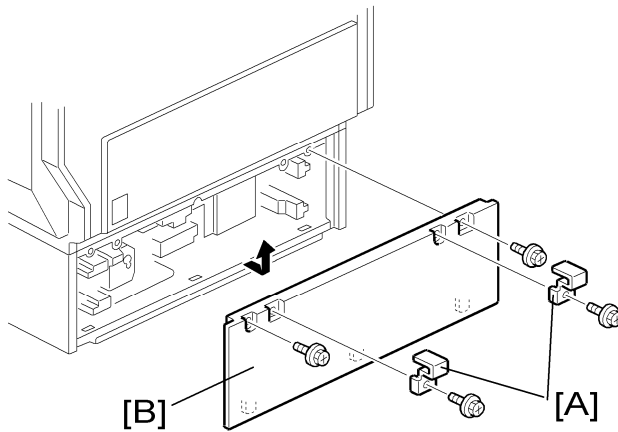

1. Securing brackets [A] (🔩 x 1 each)
2. Rear cover [B] (🔩 x 2)


## 1.2 MOTORS AND CLUTCHES

### 1.2.1 LIFT MOTORS

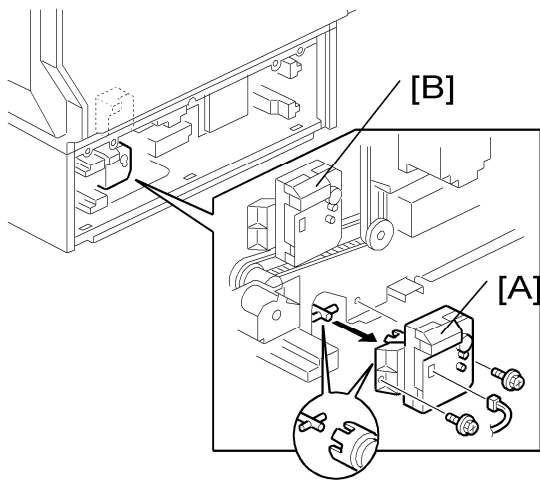


1. Rear cover (🔲 "Rear Cover")
2. Lift motors [A][B] (🔩 x 2, 📦 x 1 each)

### 1.2.2 UPPER AND LOWER PAPER FEED CLUTCHES

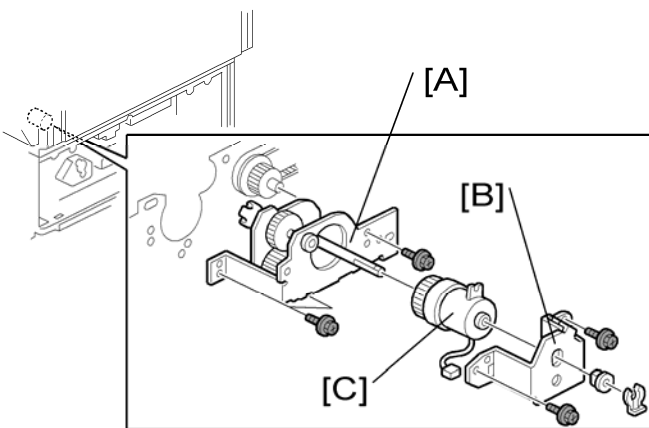


1. Rear cover (🔲 "Rear Cover")
2. Upper paper feed gear unit [A] (🔩 x 3, 📦 x 1)
3. Upper paper feed clutch bracket [B] (🔩 x 1, 📦 x 2, bushing x 1)
4. Upper paper feed clutch [C]



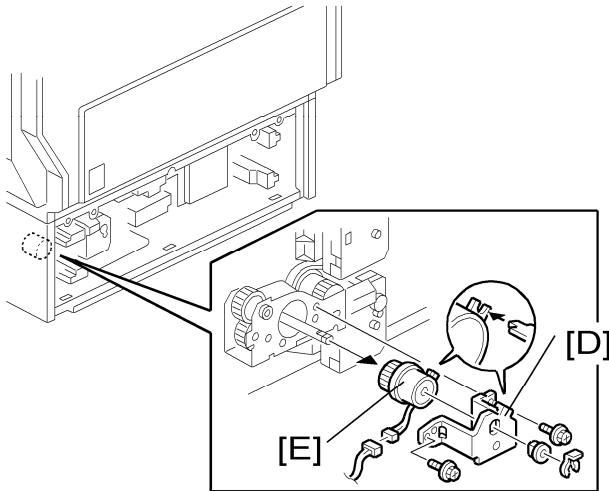

5. Lower paper feed clutch bracket [D] (🔩 x 1, bushing x 1, 🛠️ x 2)
6. Lower paper feed clutch [E] (🛠️ x 1)

### 1.2.3 PAPER FEED MOTOR

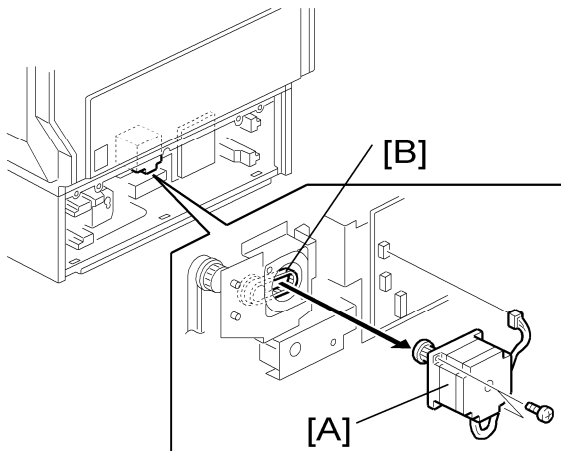


1. Rear cover (🔩 "Rear Cover")
2. Paper feed motor [A] (🛠️ x 1, 🛠️ x 2)

#### ⚠️ Note

- When installing the paper feed motor, make sure that the gear of the paper feed motor holds the timing belt [B].


## Main Board

### 1.3 MAIN BOARD

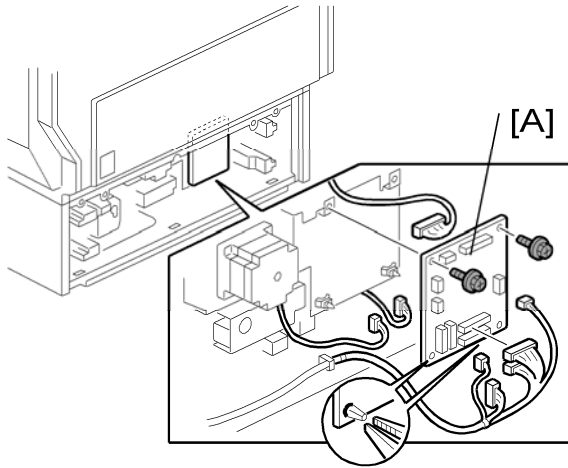


1. Rear cover (1 "Rear Cover")
2. Main board [A] (All screws, snap pin x 2)

## 1.4 PAPER FEED UNIT

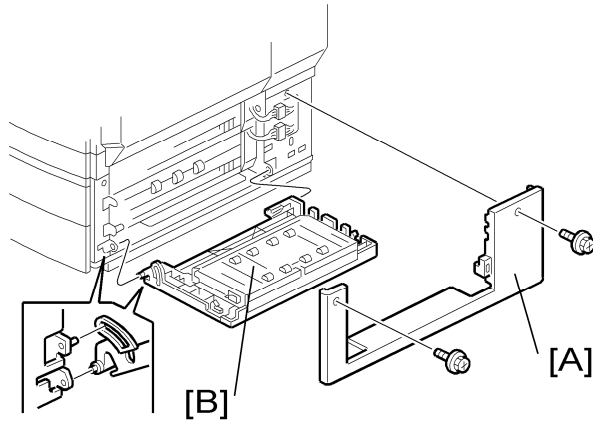


1. Right cover [A] (🔩 x 2)
2. Vertical transport guide [B] of the paper feed unit

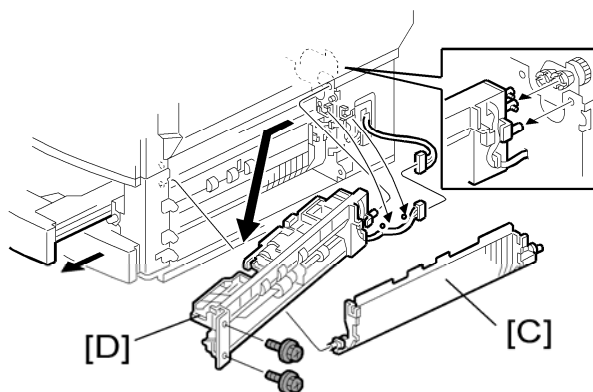

3. Pull the tray 3 (or 4).
4. Paper guide [C]
5. Paper feed unit [D] (🔩 x 2, 📄 x 1, 📄 x 2)


When replacing the paper feed unit of tray 4, do the same.

## 1.5 PICK-UP, PAPER FEED AND SEPARATION ROLLERS

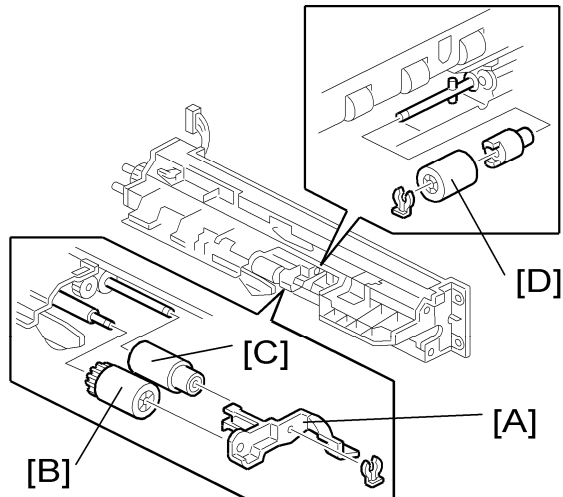

1. Paper feed unit (☐ "Paper Feed Unit)
2. Roller holder [A] (☐x 1)
3. Pick-up roller [B]
4. Paper feed roller [C]
5. Separation roller [D] (☐x 1)

## 1.6 LIFT, PAPER END, AND RELAY SENSORS

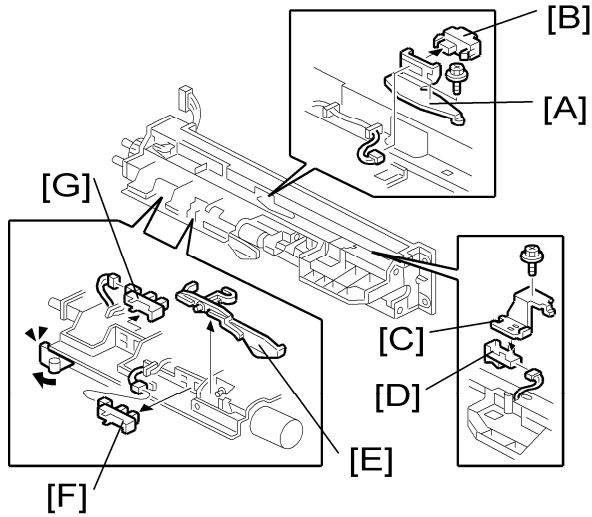


1. Paper feed unit (☛ "Paper Feed Unit")
2. Vertical transport sensor bracket [A] (☛ x 1)
3. Vertical transport sensor [B] (☛ x 1)
4. Paper feed sensor bracket [C] (☛ x 1)
5. Paper feed sensor [D] (☛ x 1)
6. Paper end sensor filler [E]
7. Paper end sensor [F] (☛ x 1)
8. Lift sensor [G] (☛ x 1)

## 2.DETAILED DESCRIPTIONS

### 2.1COMPONENT LAYOUT

#### 2.1.1 MECHANICAL COMPONENT LAYOUT

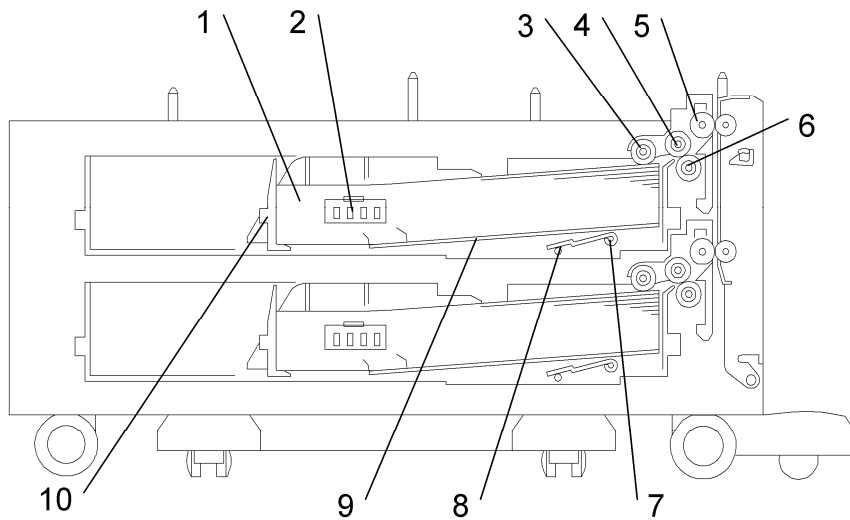


|  |   |
|--|---|
| 1. Upper tray<br>2. Paper size switch: Upper tray<br>3. Pick-up roller: Upper tray<br>4. Paper feed roller<br>5. Vertical transport roller | 6. Separation roller<br>7. Tray lift arm<br>8. Lift arm shaft<br>9. Bottom plate<br>10. End plate |
|--|---|

**Note**

- Listed above are the components of tray 1 (upper tray). Tray 2 (lower tray) has the same components as tray 1.

## 2.1.2 ELECTRICAL COMPONENT LAYOUT

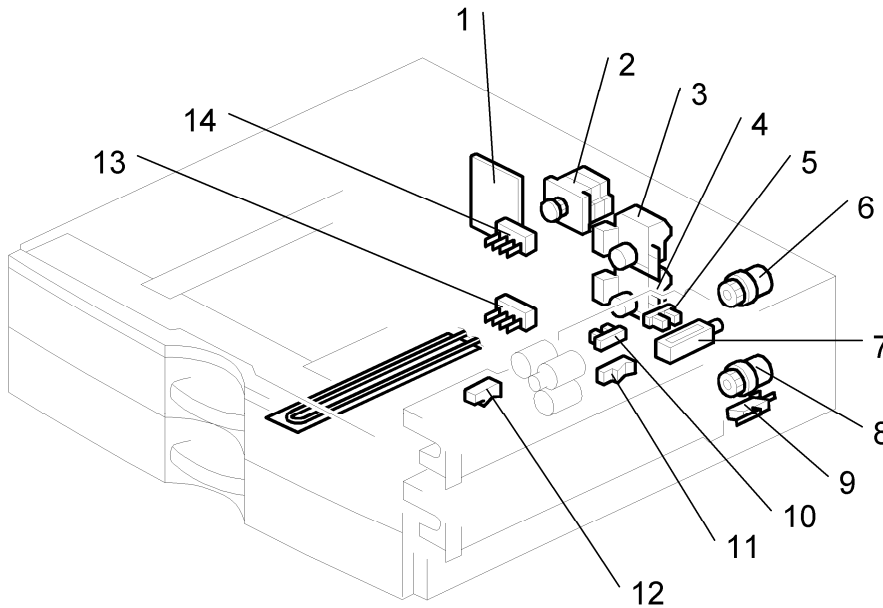


|                            |                                    |
|----------------------------|------------------------------------|
| 1. Main board              | 8. Lower paper feed clutch         |
| 2. Feed motor              | 9. Vertical transport guide switch |
| 3. Upper tray lift motor   | 10. Paper end sensor               |
| 4. Lower tray lift motor   | 11. Vertical transport sensor 1    |
| 5. Upper lift sensor       | 12. Paper feed sensor              |
| 6. Upper paper feed clutch | 13. Paper size switch: Lower tray  |
| 7. Pick-up solenoid        | 14. Paper size switch: Upper tray  |

### ↓ Note

- Listed above are the components of tray 1 (upper tray), except for the right cover switch and anti-condensation heater (there is only one each of these for the entire unit). Tray 2 (lower tray) has the same components as tray 1.

## 2.2 PAPER FEED

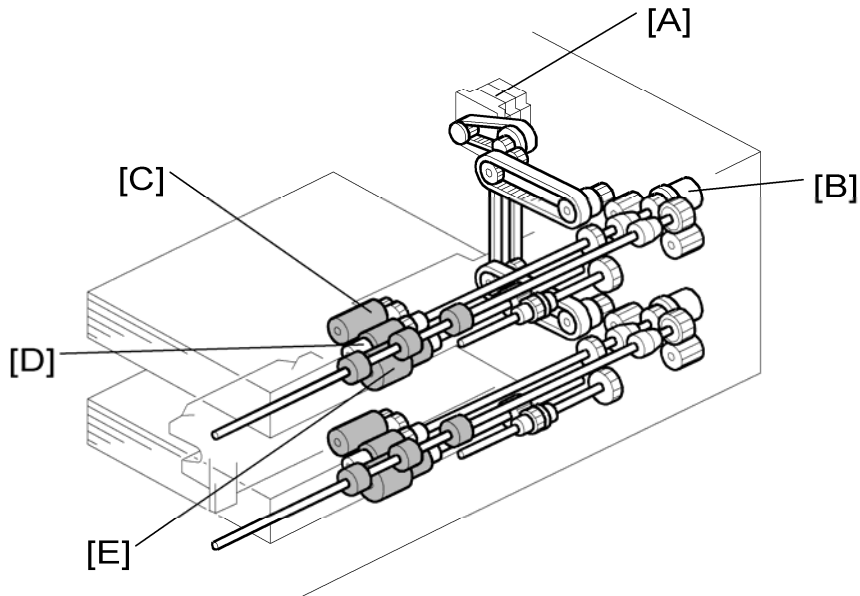

### Paper Feed Mechanism


An FRR (feed and reverse roller) feed mechanism is used (see "Paper Feed Methods" in the Core Technology Manual).

### Drive Path

Tray 3 (upper tray) and tray 4 (lower tray) have identical paper feed systems. The feed motor [A] drives all the rollers in the unit. The paper feed clutch [B] controls the pick-up roller [C], paper feed roller [D], and separation roller [E].



## 2.3 PAPER SIZE DETECTION

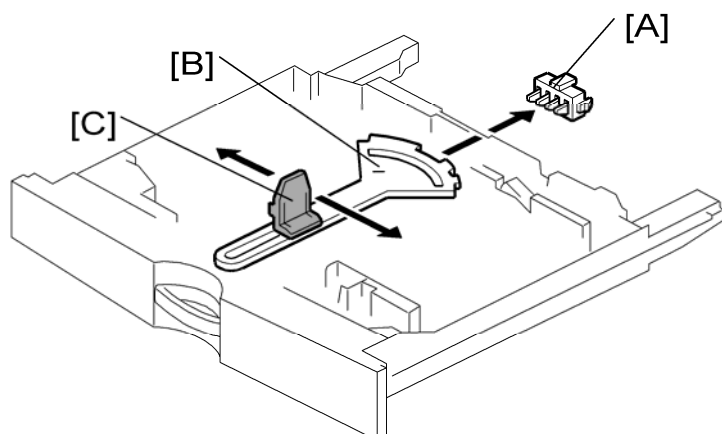

There are four paper size switches [A] working in combination. Switch 1 (right end) is for tray set detection. The other three switches detect the paper size as shown in the table below. The actuator [B] is moved by the end plate [C].

0: Not pushed, 1: Pushed

| Models                     |                            | Switch Location |     |     |
|----------------------------|----------------------------|-----------------|-----|-----|
| North America              | Europe/Asia                | SW4             | SW3 | SW2 |
| DLT (A3) SEF* <sup>1</sup> | A3 (DLT) SEF* <sup>1</sup> | 1               | 1   | 0   |
| LG (B4) SEF* <sup>2</sup>  | B4 (LG) SEF* <sup>2</sup>  | 1               | 1   | 1   |
| A4 SEF                     | A4 SEF                     | 0               | 0   | 1   |
| B5 SEF                     | B5 SEF                     | 0               | 0   | 0   |
| LT (A4) LEF* <sup>3</sup>  | A4 (LT) LEF* <sup>3</sup>  | 0               | 1   | 1   |
| B5 (Exe) LEF* <sup>4</sup> | B5 (Exe) LEF* <sup>4</sup> | 1               | 0   | 1   |
| A5 LEF                     | A5 LEF                     | 0               | 1   | 0   |

### ↓ Note

- \*<sup>1</sup>: Detects either DLT SEF or A3 SEF, depending on the setting of SP5-181-7 or 11.
- \*<sup>2</sup>: Detects either LG SEF or B4 SEF, depending on the setting of SP5-181-8 or 12.
- \*<sup>3</sup>: Detects either LT LEF or A4 LEF, depending on the setting of SP5-181-6 or 10.
- \*<sup>4</sup>: Detects either Exe LEF or B5 LEF, depending on the setting of SP5-181-9 or 13


The machine disables paper feed from a tray if the paper size cannot be detected (if the

## Reverse Roller and Pick-Up Roller Release

paper size actuator is broken or no tray is installed).

For non-standard paper sizes, if they are not visible on the user tool screen for selecting paper sizes, then set SP 5-112 to 1. If the user selects one of these sizes, auto paper size selection is disabled.

## 2.4 REVERSE ROLLER AND PICK-UP ROLLER RELEASE

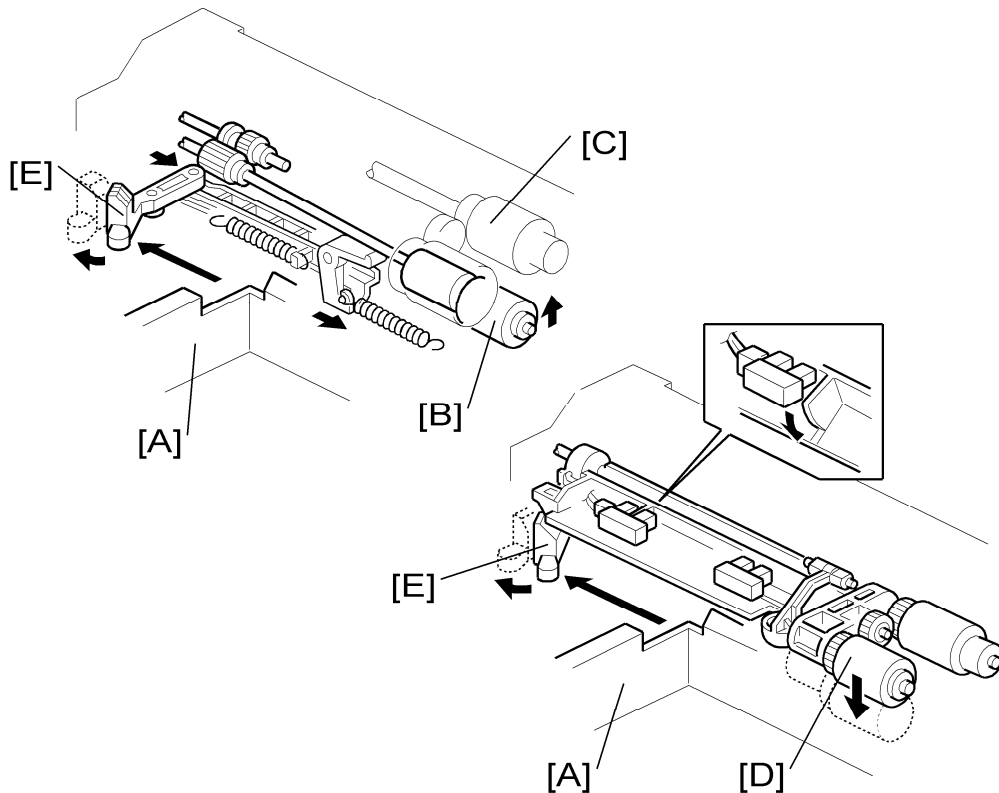


The pick-up roller and separation roller release the paper when it is not being fed. This helps remove jammed paper easily.

When the paper tray [A] is not in the machine, the separation roller [B] is away from the paper feed roller [C] and the pick-up roller stays in its upper position.

When the paper tray is pushed into the machine, it pushes the release lever [E]. This causes the pick-up roller [D] to go down into contact with the top sheet of paper, and causes the reverse roller [B] to move up and contact the paper feed roller.

## 2.5 PAPER LIFT

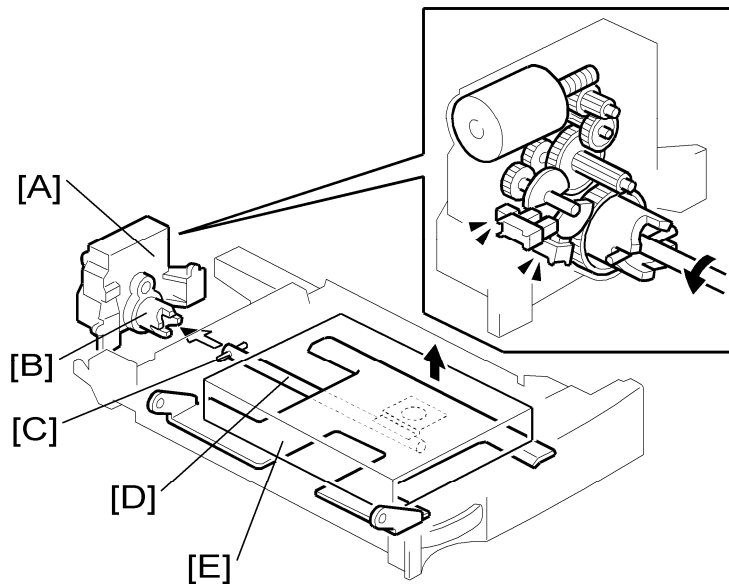


When the machine detects that a tray has been placed in the machine, the tray lift motor [A] rotates and the coupling gear [B] on the tray lift motor engages the pin [C] on the lift arm shaft [D]. Then the tray lift arm lifts the tray bottom plate [E] until the paper lift sensor for the tray detects that the top of the stack is at the paper feed position.

When the tray is removed from the machine, the connection between the coupling gear and lift arm shaft is disengaged, and the tray bottom plate lowers.

## 2.6 PAPER HEIGHT AND END DETECTION

### 2.6.1 PAPER HEIGHT DETECTION

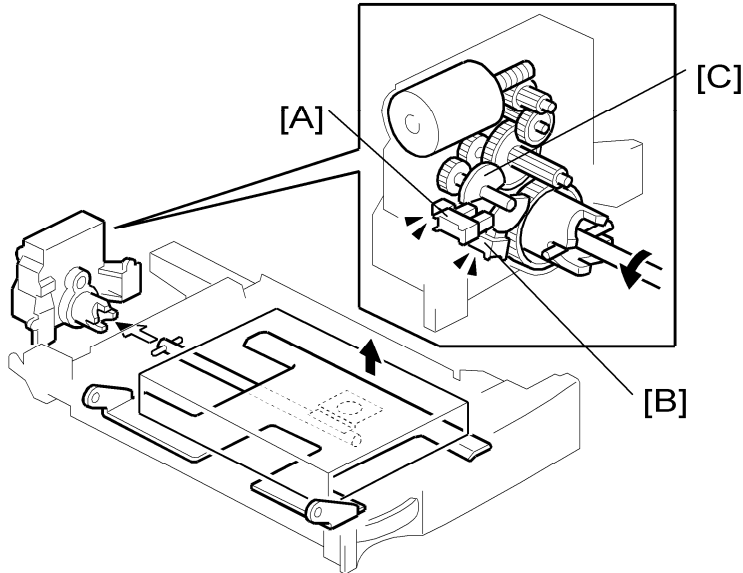


Two paper height sensors [A] [B] and actuator [C] are built into the paper tray lift motor. The paper height sensors, detect the amount of paper in the tray. The actuator [C] has two semicircles, and it is engaged with the lift arm shaft via gears. The paper height sensors detect the paper size depending on the position of the two semicircles. The list shown below shows the detection combination of the two sensors. The paper remaining status bar is displayed in the tray selection icon on the LCD.

| Remaining paper          | Paper height sensor 1 [A] | Paper height sensor 2 [B] |
|--------------------------|---------------------------|---------------------------|
| 100%<br>(Status bar x 4) | OFF                       | OFF                       |
| 70%<br>(Status bar x 3)  | ON                        | OFF                       |
| 30%<br>(Status bar x 2)  | ON                        | ON                        |
| 10%<br>(Status bar x 1)  | OFF                       | ON                        |

OFF: No actuator

## 2.6.2 PAPER END AND BOTTOM PLATE

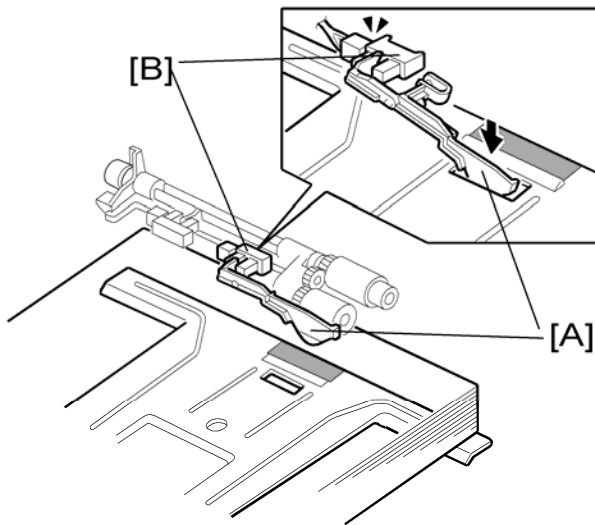

The paper stack raises the paper end feeler [A] and the paper end sensor [B] deactivates if there is some paper in the paper tray.

When the paper tray runs out of paper, the paper end feeler [A] drops into the cutout in the tray bottom plate. At this time the paper end sensor [B] activates



**LCIT**  
**B801**





# LCIT B801

## TABLE OF CONTENTS

|  |           |
|--|-----------|
| <b>1. REPLACEMENT AND ADJUSTMENT .....</b>             | <b>1</b>  |
| 1.1 LEFT AND RIGHT TRAY .....                          | 1         |
| 1.2 SENSORS .....                                      | 2         |
| 1.2.1 PAPER HEIGHT SENSORS ON PAPER STORAGE SIDE.....  | 2         |
| 1.2.2 END FENCE HP SENSOR/PAPER END SENSOR 2 .....     | 2         |
| 1.3 CHANGING THE TRAY SIZE .....                       | 3         |
| 1.4 MOTORS .....                                       | 4         |
| 1.4.1 TRAY LIFT MOTOR.....                             | 4         |
| 1.4.2 TRAY MOTOR .....                                 | 5         |
| 1.5 MAIN BOARD .....                                   | 6         |
| 1.6 CLUTCHES.....                                      | 7         |
| 1.6.1 STACK TRANSPORT CLUTCH .....                     | 7         |
| 1.6.2 PAPER FEED CLUTCH.....                           | 7         |
| 1.7 PAPER FEED UNIT .....                              | 8         |
| 1.8 PICK-UP, FEED AND SEPARATION ROLLERS.....          | 9         |
| 1.9 PAPER FEED, PAPER END, LIFT AND RELAY SENSORS..... | 10        |
| <br>   |           |
| <b>2. DETAILED DESCRIPTIONS.....</b>                   | <b>11</b> |
| 2.1 COMPONENT LAYOUT .....                             | 11        |
| 2.1.1 MECHANICAL COMPONENT LAYOUT .....                | 11        |
| 2.1.2 ELECTRICAL COMPONENT LAYOUT .....                | 12        |
| 2.1.3 ELECTRICAL COMPONENT DESCRIPTIONS.....           | 13        |
| 2.2 PAPER FEED .....                                   | 15        |
| 2.3 SEPARATION ROLLER AND PICK-UP ROLLER RELEASE ..... | 16        |
| 2.4 TRAY LIFT .....                                    | 17        |
| 2.5 PAPER AMOUNT DETECTION.....                        | 18        |
| 2.6 PAPER END DETECTION (PAPER FEED SIDE) .....        | 19        |
| 2.7 PAPER STACK TRANSPORT .....                        | 20        |



# Read This First

## Safety and Symbols


### Replacement Procedure Safety

#### **CAUTION**

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

### Symbols Used in this Manual


This manual uses the following symbols.

: See or Refer to

: Screws

: Connector


: Clip ring

: E-ring



# 1. REPLACEMENT AND ADJUSTMENT

## 1.1 LEFT AND RIGHT TRAY

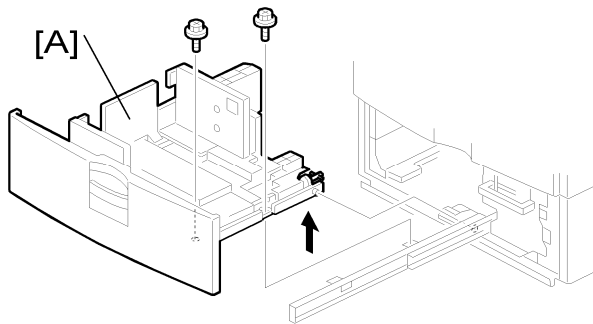


1. Pull the LCT drawer.

↓ Note

- If the right tray comes up with the left tray, push the right tray into the LCT.

2. Left tray [A] (⚙️ x 2)

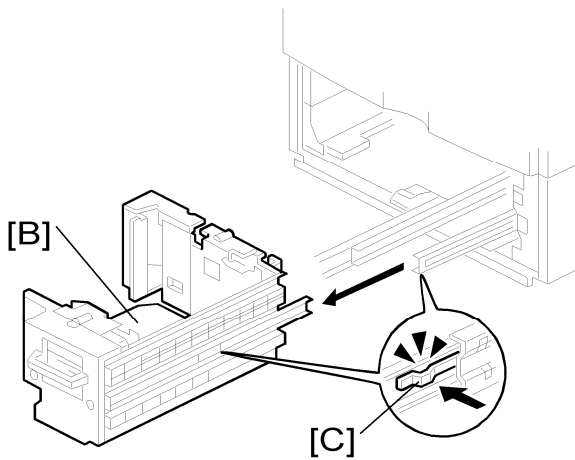


3. Remove the right tray [B] pressing down the stopper [C].

↓ Note

- When reinstalling the tray, set the tray on the guide rail and carefully push the tray in, making sure to keep the tray level.


## 1.2 SENSORS

### 1.2.1 PAPER HEIGHT SENSORS ON PAPER STORAGE SIDE

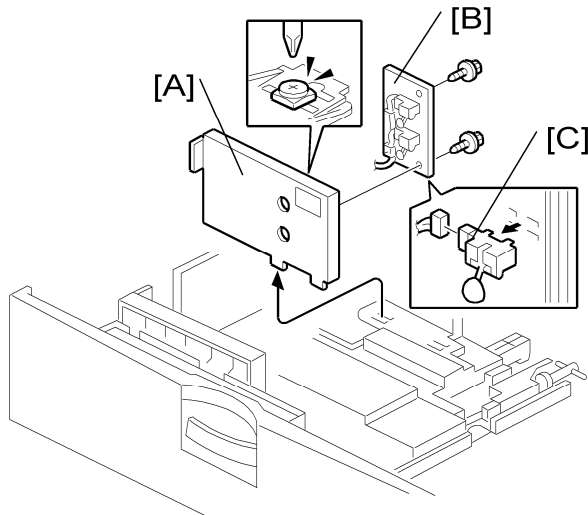


1. Tray (☞ "Left and Right Tray")
2. Rear fence [A] (☞ x 1)
3. Rear fence bracket [B] (☞ x 2)
4. Paper height sensors [C] (☞ x 1 each)

### 1.2.2 END FENCE HP SENSOR/PAPER END SENSOR 2

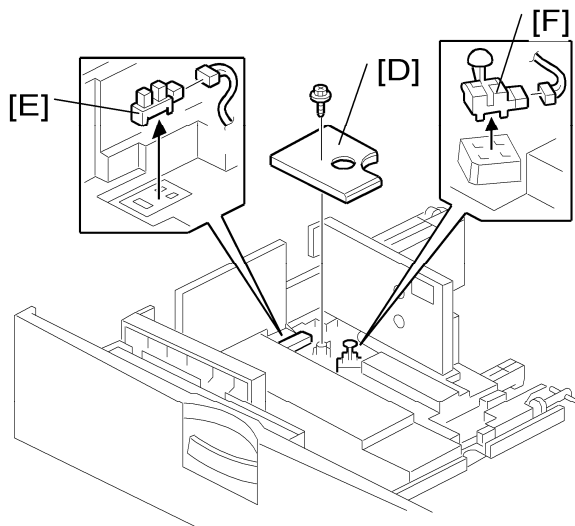

1. Bottom cover [D] (s x 1)
2. End fence HP sensor [E] (h x 1)
3. Paper end sensor 2 (paper storage side) [F] (h x 1)

## 1.3 CHANGING THE TRAY SIZE

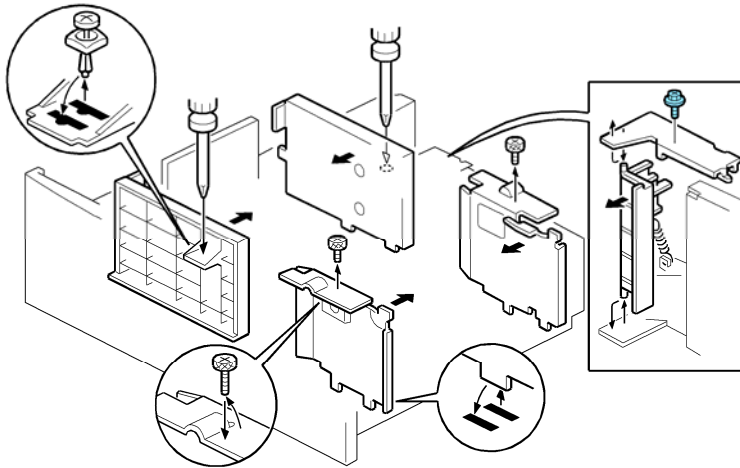


1. Remove the fence screws (🔩 x 5).
2. Change the position of the fences.

↓ Note


- Before fastening the screws, set paper in the tray.

## 1.4 MOTORS

### 1.4.1 TRAY LIFT MOTOR

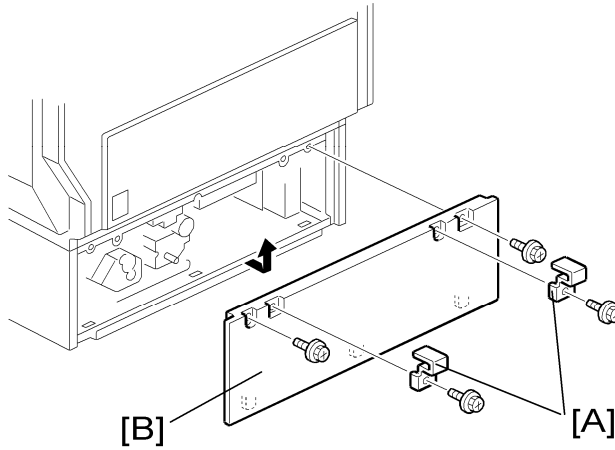


1. Securing brackets [A] (🔩 x 1 each)
2. Rear cover [B] (🔩 x 2)

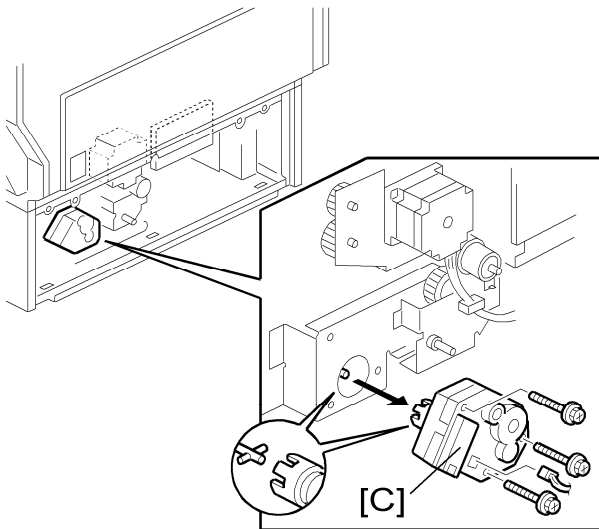

1. Tray lift motor [C] (🔩 x 1, 🛠️ x 3)



## 1.4.2 TRAY MOTOR

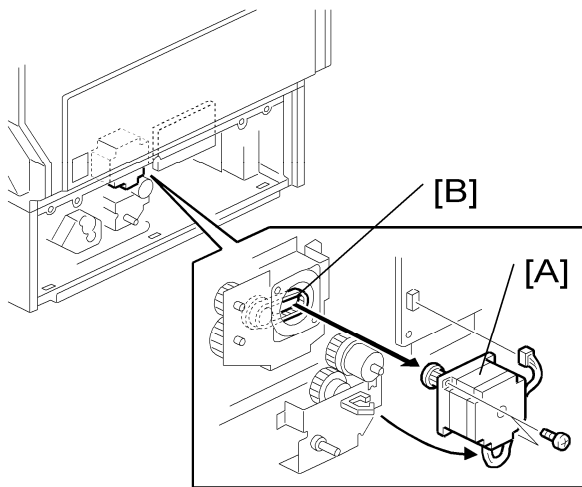


1. Rear cover (🔧 "Tray Lift Motor")
2. Tray motor [A] (🔧 x 1, 🛠️ x 2)

⬇ Note

- When installing the tray motor, make sure that the gear of the tray motor holds the timing belt [B].

Main Board


## 1.5 MAIN BOARD

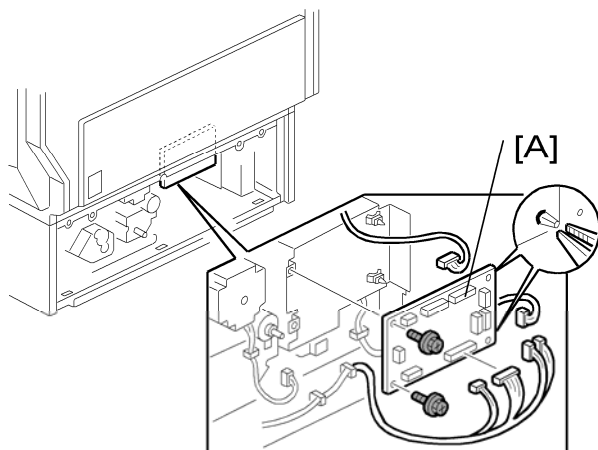

1. Rear cover (🔌 "Tray Lift Motor" )
2. Main board [A] (All 📏s, 🔑 x 2, snap x 2)


## 1.6 CLUTCHES

### 1.6.1 STACK TRANSPORT CLUTCH

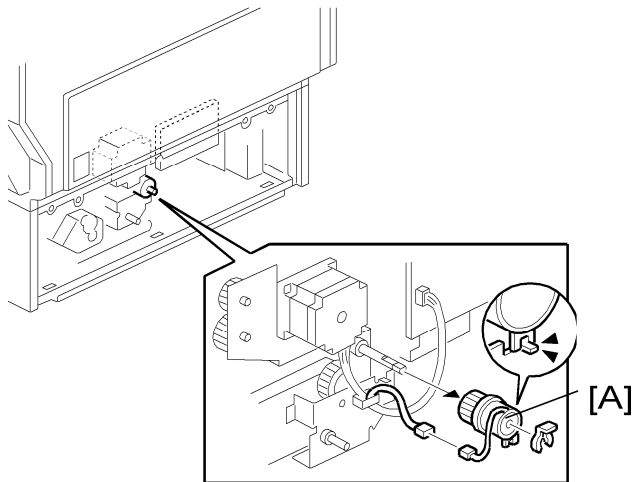


1. Rear cover (⚙️ "Tray Lift Motor")
2. Stack transport clutch [A] (⚙️ x 1, ⚙️ x 1)

### 1.6.2 PAPER FEED CLUTCH

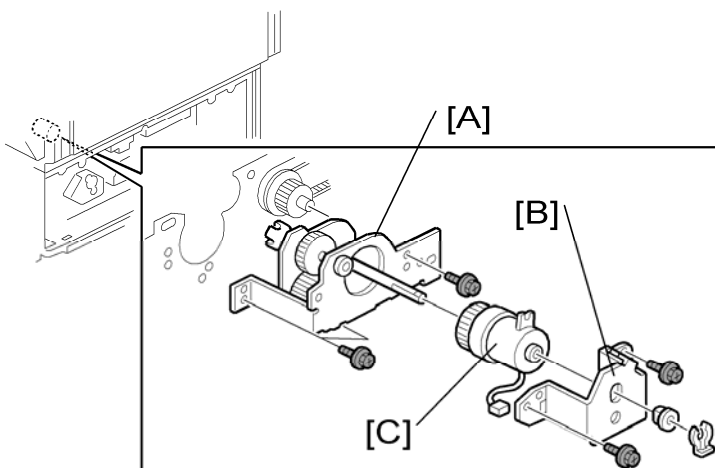


1. Rear cover (⚙️ "Tray Lift Motor")
2. Paper feed gear unit [A] (⚙️ x 3, ⚙️ x 1)
3. Paper feed clutch bracket [B] (⚙️ x 1, ⚙️ x 2, bushing x 1)
4. Paper feed clutch [C]

## 1.7 PAPER FEED UNIT

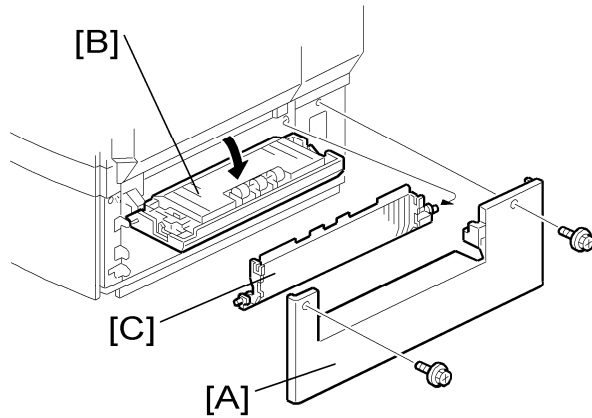


1. Right cover [A]
2. Open the vertical guide plate [B]
3. Guide plate [C]

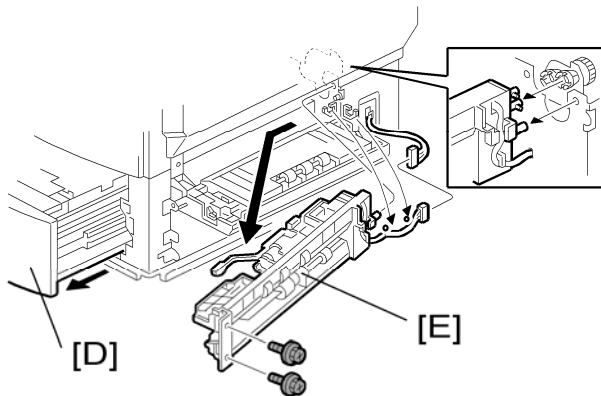

4. Pull the LCT drawer [D].
5. Paper feed unit [E] (🔩 x 2 📦 x 1)


## 1.8 PICK-UP, FEED AND SEPARATION ROLLERS

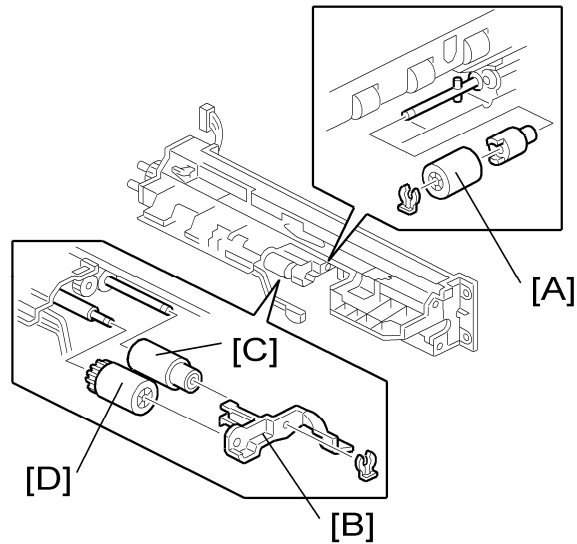

1. Paper feed unit (☛ "Paper Feed Unit")
2. Separation roller [A] (☛ x 1)
3. Roller holder [B] (☛ x 1)
4. Feed roller [C] and pick-up roller [D]

## 1.9 PAPER FEED, PAPER END, LIFT AND RELAY SENSORS

### SENSORS

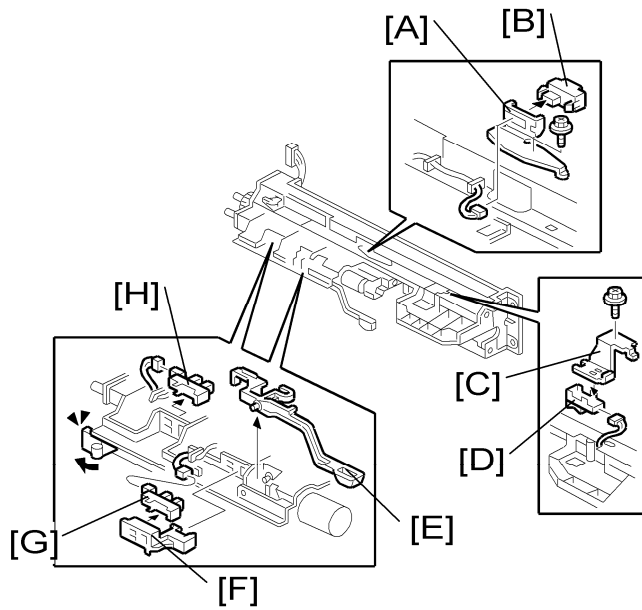


1. Paper feed unit (🖨️ "Paper Feed Unit")
2. Vertical transport sensor bracket [A] (🔧 x 1, 📏 x 1)
3. Relay sensor [B]
4. Paper feed sensor bracket [C]
5. Paper feed sensor [D]
6. Paper end feeler [E]
7. Paper end sensor holder [F] (hook x 3)
8. Paper end sensor [G] (📏 x 1, hook x 3)
9. Lift sensor (📏 x 1, hook x 3)

## 2. DETAILED DESCRIPTIONS

### 2.1 COMPONENT LAYOUT

#### 2.1.1 MECHANICAL COMPONENT LAYOUT

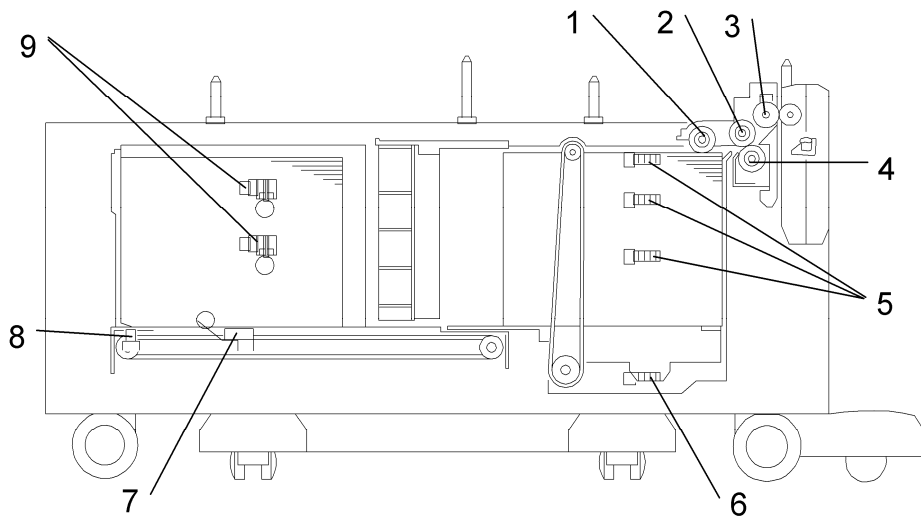


B801  
LCIT

|   |  |
|---|--|
| <ul style="list-style-type: none"> <li>1. Pick-up Roller</li> <li>2. Paper Feed Roller</li> <li>3. Relay Sensor</li> <li>4. Separation Roller</li> <li>5. Paper Height Sensors 1, 2, 3</li> </ul> | <ul style="list-style-type: none"> <li>6. Lower Limit Sensor</li> <li>7. Paper End Sensor 2</li> <li>8. End Fence HP Sensor</li> <li>9. Paper Height Sensors 4, 5</li> </ul> |
|---|--|

Component Layout

**2.1.2 ELECTRICAL COMPONENT LAYOUT**

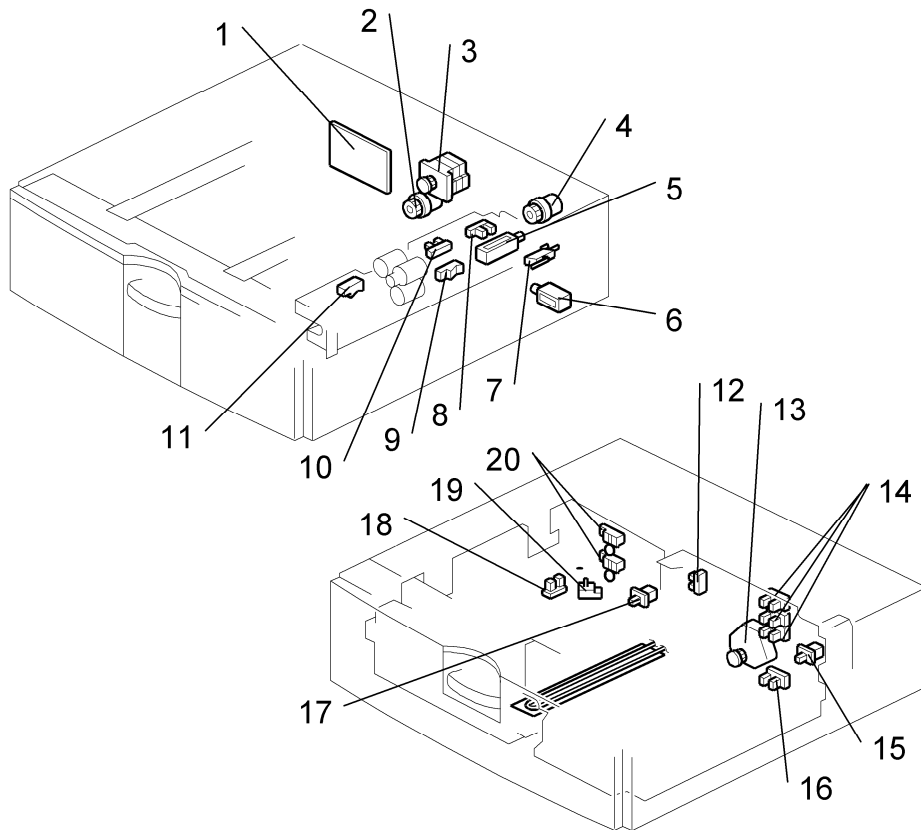

|   |   |
|---|---|
| <p>1. Main board<br/>                 2. Stack transport clutch<br/>                 3. Tray motor<br/>                 4. Paper feed clutch<br/>                 5. Pick-up solenoid<br/>                 6. Right tray lock solenoid<br/>                 7. Vertical guide switch<br/>                 8. Lift sensor<br/>                 9. Relay sensor<br/>                 10. Paper end sensor 1</p> | <p>11. Paper feed sensors<br/>                 12. Side fence sensor<br/>                 13. Tray lift motor<br/>                 14. Paper height sensor 1, 2, 3<br/>                 15. Tray set switch<br/>                 16. Lower limit sensor<br/>                 17. Left tray set switch<br/>                 18. End fence HP sensor<br/>                 19. Paper end sensor 2<br/>                 20. Paper height sensors 4, 5</p> |
|---|---|




### 2.1.3 ELECTRICAL COMPONENT DESCRIPTIONS

| Symbol          | Name                                | Function  | Index No. |
|-----------------|-------------------------------------|---|-----------|
| <b>Motors</b>   |                                     |   |           |
| M1              | Tray                                | Drives all rollers.   | 3         |
| M2              | Tray Lift                           | Drives the paper tray up or down.   | 13        |
| <b>Sensors</b>  |                                     |   |           |
| S1              | Paper Feed Sensor                   | Detects whether the paper is jammed at LCT.   | 11        |
| S2              | Relay                               | Detects the copy paper coming to the relay roller and checks for misfeeds.  | 9         |
| S3              | Paper End 1<br>(paper feed side)    | Informs the copier/printer when the paper in the right side (paper feed side) of the tray has been used up. If there is a paper stack in the left side (paper storage side), this is moved into the paper feed side. If there is no paper stack in the left side, paper end is indicated. | 10        |
| S4              | Lift                                | Detects when the paper is at the correct paper feed height.   | 8         |
| S5-S7           | Paper Height 1, 2, 3                | Detects the amount of paper remaining in the right side of the tray.  | 14        |
| S8              | Lower Limit                         | Detects when the tray is completely lowered, to stop the LCT motor.   | 16        |
| S9              | End Fence HP                        | Detects when the left fence is at its home position   | 18        |
| S10             | Side Fence                          | Detects whether the side fence is open or closed. (The fence opens when the left-tray paper stack is moving to the paper feed side.)  | 12        |
| S11             | Paper End 2<br>(paper storage side) | Informs the copier/printer when there is no paper in the left side (paper storage side) of the tray.  | 19        |
| S12<br>S13      | Paper Height 4, 5                   | Detects the amount of paper remaining in the left side of the tray.   | 20        |
| <b>Switches</b> |                                     |   |           |
| SW1             | Vertical Guide                      | Detects whether the right cover is open.  | 7         |
| SW2             | Tray Set Switch                     | Detects whether the tray is correctly set.  | 15        |

Component Layout

| Symbol                   | Name                 | Function   | Index No. |
|--------------------------|----------------------|--|-----------|
| SW3                      | Left Tray Set Switch | Detects whether the left tray is correctly set.            | 17        |
| <b>Magnetic Clutches</b> |                      |  |           |
| MC1                      | Paper Feed           | Drives the paper feed roller.                              | 4         |
| MC2                      | Stack Transport      | Drives the rear fence of the paper storage side.           | 2         |
| <b>Solenoids</b>         |                      |  |           |
| SOL1                     | Pick-up              | Pushes the pick-up roller up or down.                      | 5         |
| SOL2                     | Tray Lock            | Locks or unlocks the right tray.                           | 6         |
| <b>PCBs</b>              |                      |  |           |
| PCB1                     | Main                 | Controls the LCT and communicates with the copier/printer. | 1         |
|                          |                      |  |           |

## 2.2 PAPER FEED

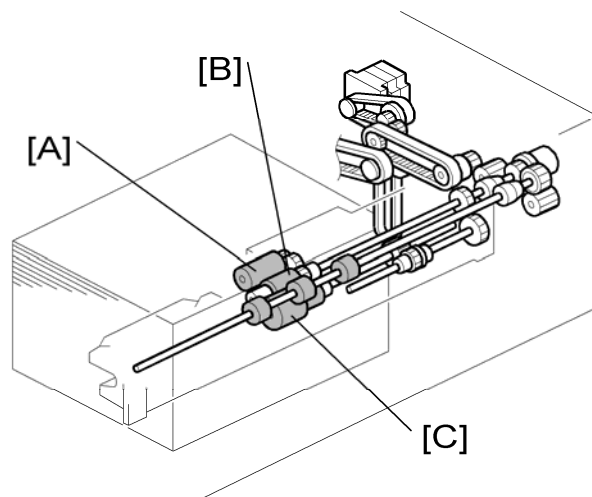


This products uses an FRR type paper feed mechanism.

The paper feed unit consists of the pick-up roller [A], paper feed roller [B], separation roller [C], and relay rollers.

There is a torque limiter in the back of the separation roller (ferrite powder type).

## 2.3 SEPARATION ROLLER AND PICK-UP ROLLER RELEASE

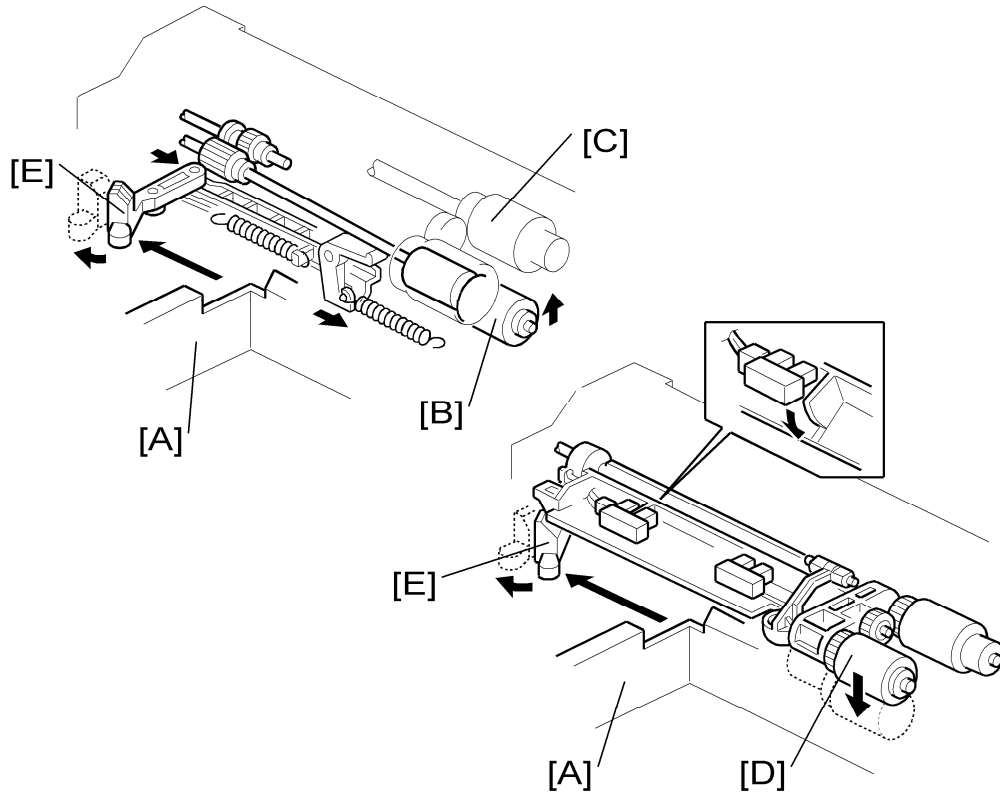


To prevent the paper from being torn when pulling out the paper feed tray, the separation and pick-up rollers release automatically.

When the paper tray [A] is not inside the machine, the separation roller [B] is away from the paper feed roller [C], and the pick-up roller [D] stays in the upper position.

When the paper tray is set into the machine, it pushes the release lever [E]. This causes the pick-up roller [D] to go down into contact with the top sheet of paper and the separation roller [B] to move up and contact the paper feed roller.

## 2.4 TRAY LIFT

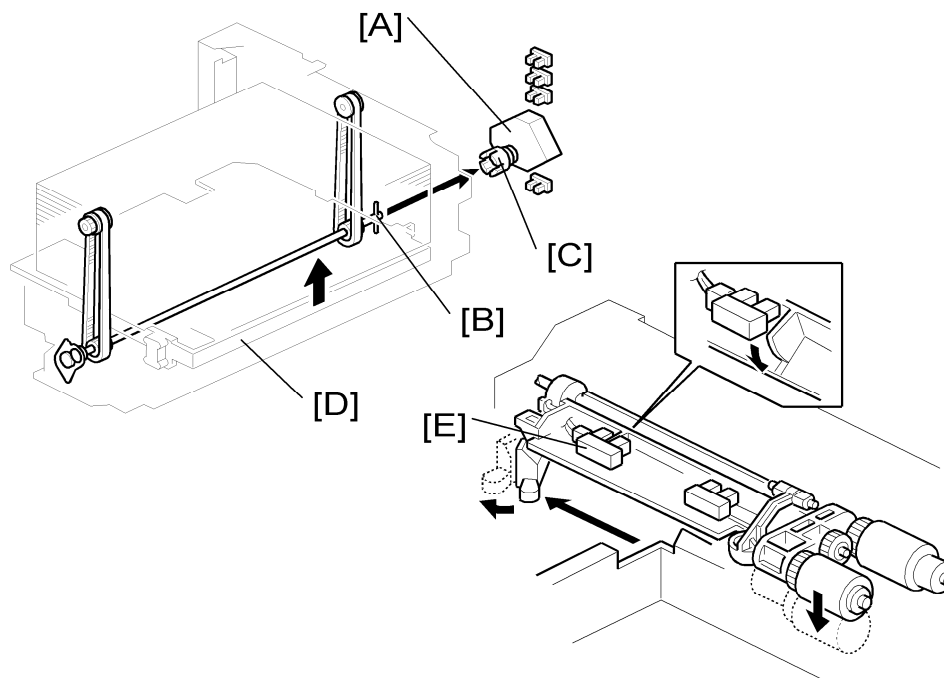

When the paper feed tray is pushed in the machine, the tray switch on the back turns on and the tray lift motor [A] starts. The base plate lift shaft [B] is coupled to the lift motor at the shaft [C], so the base plate [D] of the tray is lifted. After a short while, the top of the paper stack contacts the pick-up roller and lifts it up. Then the motor stops lifting the plate when the upper limit sensor actuator enters the sensor (see "Electrical Component Layout").

When paper in the tray is used up, the pick-up roller is gradually lowered, and the actuator leaves the lift sensor [E]. When this happens, the lift motor begins turning again. The tray will then be lifted until the actuator enters the upper limit sensor again).

When the tray is removed from the copier, the coupling between the lift motor [A] and base plate lift shaft [B] is broken and the base plate goes into a controlled free fall (using a damper to slow the fall and prevent damage).

## 2.5 PAPER AMOUNT DETECTION

The table lists the sensors that are used to detect the amount of remaining paper.

Right Tray (Paper feed side)

- Paper end sensor 1
- Paper height sensor 1 to 3

Left Tray (Paper storage side)

- Paper height sensor 4 and 5
- Paper end sensor 2


### Right Tray

| Amount of paper | Paper Height Sensor |     |     | Paper End Sensor | Display No. of Line |
|-----------------|---------------------|-----|-----|------------------|---------------------|
|                 | 1                   | 2   | 3   |                  |                     |
| 100%            | OFF                 | OFF | OFF | ON               | 4                   |
| 70%             | OFF                 | OFF | ON  | ON               | 3                   |
| 30%             | OFF                 | ON  | -   | ON               | 2                   |
| 10%             | ON                  | -   | -   | ON               | 1                   |
| Paper End       | -                   | -   | -   | OFF              | 0                   |

### Left Tray

| Amount of paper | Paper Height Sensor |     | Paper End Sensor | Display No. of Line |
|-----------------|---------------------|-----|------------------|---------------------|
|                 | 4                   | 5   |                  |                     |
| 100%            | OFF                 | OFF | OFF              | 4                   |
| 70%             | ON                  | OFF | OFF              | 3                   |
| 30%             | ON                  | ON  | OFF              | 2                   |
| Paper End       | ON                  | ON  | ON               | 0                   |


## 2.6 PAPER END DETECTION (PAPER FEED SIDE)

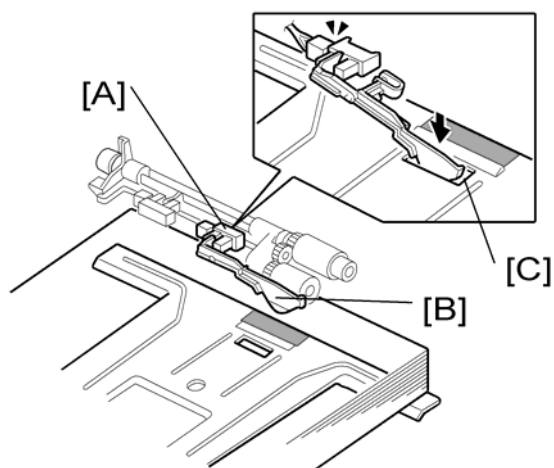

The paper end sensor 1 [A] detects when copy paper in the paper feed side runs out. When there is paper in the tray, the paper pushes up the feeler [B] and the actuator enters the sensor. When paper runs out, the feeler drops in to cutout [C] and the actuator leaves the sensor, and the machine detects that there is no paper in the tray.

B801  
LCIT

## 2.7 PAPER STACK TRANSPORT

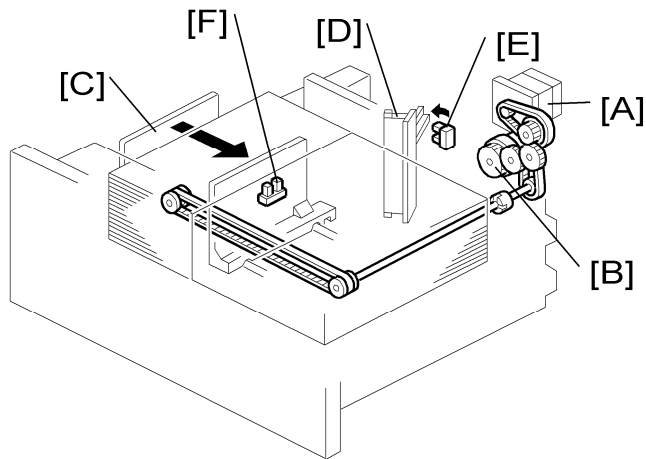

When the paper in the paper feed side is used up, the tray motor [A] and stack transport clutch [B] turn on. Then the end fence [C] moves the stack of paper from the paper storage side to the paper feed side.

 Note

- During paper feed, the stack transport clutch (see "Electrical Component Layout") does not switch on, so drive from the tray motor only transfers to the relay roller and not to the fence mechanism.

While the stack is in motion, it pushes the side fence [D] aside, and the side fence sensor [E] detects that the fence is open.

After the stack has been moved all the way across, a spring in the side fence moves the side fence back, and the side fence sensor detects that the fence is closed. Then, the tray motor reverses until end fence home position sensor [F] is deactivated.