


SHARP SERVICE MANUAL

CODE: 00ZMXB201DS2E

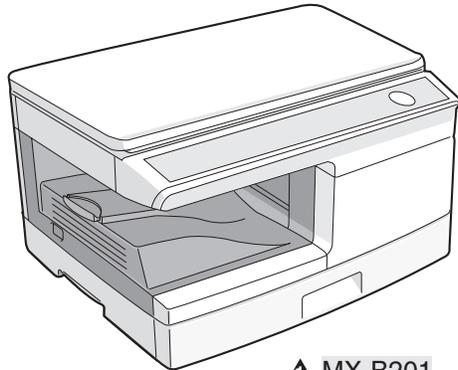

▲ MX-B201
MX-B201D

DIGITAL MULTIFUNCTIONAL SYSTEM

MX-B201

MODEL MX-B201D



CONTENTS

[1] GENERAL	1 - 1
[2] SPECIFICATIONS	2 - 1
[3] CONSUMABLE PARTS	3 - 1
[4] EXTERNAL VIEWS AND INTERNAL STRUCTURES	4 - 1
[5] UNPACKING AND INSTALLATION	5 - 1
[6] COPY PROCESS	6 - 1
[7] OPERATIONAL DESCRIPTIONS	7 - 1
[8] DISASSEMBLY AND ASSEMBLY	8 - 1
[9] ADJUSTMENTS	9 - 1
[10] SIMULATION, TROUBLE CODES	10 - 1
[11] MAINTENANCE	11 - 1
[12] USER PROGRAM	12 - 1
[13] ELECTRICAL SECTION	13 - 1
[14] CIRCUIT DIAGRAM	14 - 1
[15] FLASH ROM VERSION UP PROCEDURE	15 - 1
[16] UPDATING NETWORK BOARD FIRMWARE	16 - 1

Parts marked with “▲” are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

CAUTION


This product is a class 1 laser product that complies with 21CFR 1040 of the CDRH standard and IEC825. This means that this machine does not produce hazardous laser radiation. The use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This laser radiation is not a danger to the skin, but when an exact focusing of the laser beam is achieved on the eye's retina, there is the danger of spot damage to the retina.

The following cautions must be observed to avoid exposure of the laser beam to your eyes at the time of servicing.

- 1) When a problem in the laser optical unit has occurred, the whole optical unit must be exchanged as a unit, not as individual parts.
- 2) Do not look into the machine with the main switch turned on after removing the developer unit, toner cartridge, and drum cartridge.
- 3) Do not look into the laser beam exposure slit of the laser optical unit with the connector connected when removing and installing the optical system.
- 4) The middle frame contains the safety interlock switch.

Do not defeat the safety interlock by inserting wedges or other items into the switch slot.

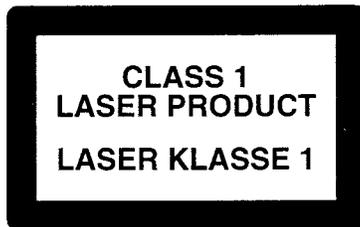

LASER WAVE – LENGTH : 770 – 795nm
Pulse times : 10.24μsec
Out put power : 0.15mW ± 0.01mW

CAUTION

INVISIBLE LASER RADIATION,
WHEN OPEN AND INTERLOCKS DEFEATED.
AVOID EXPOSURE TO BEAM.

VORSICHT

UNSICHTBARE LASERSTRAHLUNG,
WENN ABDECKUNG GEÖFFNET UND
SICHERHEITVERRIEGELUNG ÜBERBRÜCKT.
NICHT DEM STRAHL AUSSETZEN.

VARO !

AVATTAESSA JA SUOJALUKITUS
OHITETTAESSA OLET ALTTIINA
NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE ÄLÄ
KATSO SÄTEESEEN.

ADVARSEL

USYNLIG LASERSTRÅLNING VED ÅBNING, NÅR
SIKKERHEDSBRYDERE ER UDE AF
FUNKTION. UNDGÅ UDSÆTTELSE FOR
STRÅLNING.


VARNING !

OSYNLIG LASERSTRÅLNING NÅR DENNA DEL
ÄR ÖPPNAD OCH SPÅRREN ÄR URKOPPLAD.
BETRAKTA EJ STRÅLEN. – STRÅLEN ÄR
FARLIG.

At the production line, the output power of the scanner unit is adjusted to 0.57 MILLI-WATT PLUS 20 PCTS and is maintained constant by the operation of the Automatic Power Control (APC). Even if the APC circuit fails in operation for some reason, the maximum output power will only be 15 MILLI-WATT 0.1 MICRO-SEC. Giving and accessible emission level of 42 MICRO-WATT which is still-less than the limit of CLASS-1 laser product.

Caution

This product contains a low power laser device. To ensure continued safety do not remove any cover or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

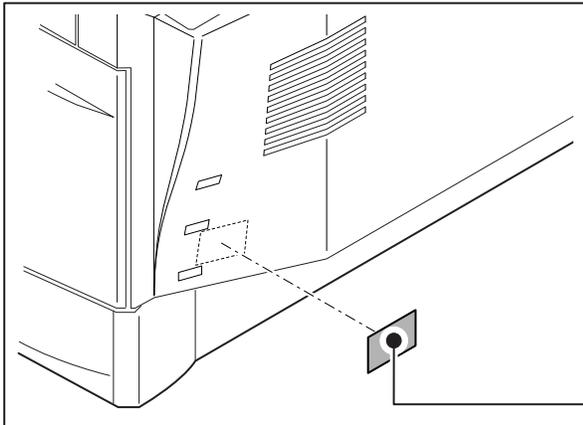

The foregoing is applicable only to the 220V model, 230V model and 240V model.

VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VARNING - OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING, SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.

**CLASS 1
LASER PRODUCT
LASER KLASSE 1**

LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

CONTENTS

[1] GENERAL		[7] OPERATIONAL DESCRIPTIONS	
1. Major functions	1-1	1. Outline of operation	7-1
[2] SPECIFICATIONS		2. Scanner section	7-2
1. Basic Specifications	2-1	A. Scanner unit	7-2
2. Operation specifications	2-1	B. Optical system	7-2
3. Copy performance	2-2	C. Drive system	7-2
4. SPLC printer	2-3	3. Laser unit	7-3
5. Scan function	2-3	A. Basic structure	7-3
6. RSPF	2-3	B. Laser beam path	7-3
[3] CONSUMABLE PARTS		C. Composition	7-3
1. Supply system table	3-1	4. Fuser section	7-3
A. Asia	3-1	A. General description	7-4
B. SMEF/Dealer	3-1	5. Paper feed section and paper transport section	7-4
C. SRH	3-1	A. Paper transport path and general operations	7-4
D. Europe	3-1	6. RSPF section	7-7
E. North America	3-1	A. Outline	7-7
2. Environmental	3-2	B. Document transport path and basic composition	7-7
3. Production control number (lot No.) identification	3-2	C. Operational descriptions	7-7
4. Toner cartridge replacement	3-3	D. RSPF open/close detection (book document detection)	7-8
[4] EXTERNAL VIEWS AND INTERNAL STRUCTURES		7. D-D (Duplex to Duplex) mode paper/document transport (Duplex model)	7-8
1. Appearance	4-1	A. Initial state	7-8
2. Internal	4-1	B. Front copy	7-8
3. Operation panel	4-2	C. Back copy	7-9
4. Motors and solenoids	4-3	8. Shifter	7-9
5. Sensors and switches	4-4	[8] DISASSEMBLY AND ASSEMBLY	
6. PWB unit	4-5	1. High voltage section	8-1
7. Cross sectional view	4-6	A. List	8-1
[5] UNPACKING AND INSTALLATION		B. Disassembly procedure	8-1
1. Copier installation	5-1	C. Assembly procedure	8-1
2. Cautions on handling	5-1	D. Charger wire cleaning	8-1
3. Checking packed components and accessories	5-1	E. Charger wire replacement	8-2
4. Unpacking	5-2	2. Operation panel section	8-2
5. Removing protective packing materials	5-2	A. List	8-2
6. Developer unit installation	5-2	B. Disassembly procedure	8-2
7. Toner cartridge installation	5-3	C. Assembly procedure	8-3
8. Loading paper	5-3	3. Optical section	8-3
9. Software	5-4	A. List	8-3
A. Before installation	5-4	B. Disassembly procedure	8-3
B. Installing the software	5-5	C. Assembly procedure	8-5
C. Setting up Button Manager	5-8	4. Fusing section	8-5
10. Interface	5-9	A. List	8-5
11. Moving	5-9	B. Disassembly procedure	8-5
12. Scanner moisture-proof kit	5-9	C. Assembly procedure	8-8
A. Components	5-9	5. Tray paper feed/transport section	8-8
B. Precautions at installation	5-9	A. List	8-8
C. Attachment method	5-10	B. Disassembly procedure	8-8
C. Attachment method	5-10	C. Assembly procedure	8-13
[6] COPY PROCESS		6. Manual paper feed section	8-14
1. Functional diagram	6-1	A. List	8-14
2. Outline of print process	6-2	B. Disassembly procedure	8-14
3. Actual print process	6-2	C. Assembly procedure	8-15
		D. Pressure plate holder attachment	8-15
		7. Rear frame section	8-16
		A. List	8-16
		B. Disassembly procedure	8-16
		C. Assembly procedure	8-16

- 8. Power section 8-17
 - A. List 8-17
 - B. Disassembly procedure 8-17
 - C. Assembly procedure 8-17
- ⚠ 9. Duplex motor section (MX-B201D only) 8-17
 - A. List 8-17
 - B. Disassembly procedure 8-17
 - C. Assembly procedure 8-17
- ⚠ 10. Reverse roller section (MX-B201D only) 8-17
 - A. List 8-17
 - B. Disassembly procedure 8-17
 - C. Assembly procedure 8-17
- 11. RSPF section 8-18
 - A. Front cabinet, rear cabinet 8-18
 - B. Upper door unit 8-18
 - C. Document tray unit 8-18
 - D. Upper door open/close sensor 8-18
 - E. Reverse clutch, paper exit roller 8-18
 - F. Drive unit 8-19
 - G. Shutter solenoid 8-20
 - H. Pickup roller, take-up roller 8-20
 - I. Paper empty sensor 8-21
 - J. PS roller 8-21
 - K. Upper transport roller 8-22
 - L. Paper sensor 8-22
 - M. Lower transport roller 8-22
 - N. Paper exit sensor 8-23

[9] ADJUSTMENTS

- 1. Optical section 9-1
 - A. Copy magnification ratio adjustment 9-1
 - B. Image position adjustment 9-2
- 2. Copy density adjustment 9-4
 - A. Copy density adjustment timing 9-4
 - B. Note for copy density adjustment 9-4
 - C. Necessary tool for copy density adjustment 9-4
 - D. Features of copy density adjustment 9-4
 - E. Copy density adjustment procedure 9-5
- 3. High voltage adjustment 9-5
 - A. Main charger (Grid bias) 9-5
 - B. DV bias check 9-6
- 4. Duplex adjustment 9-6
 - A. Adjusting the paper reverse position in memory for duplex copying 9-6
 - B. Adjusting trailing edge void in duplex copy mode 9-6
- 5. RSPF scan position automatic adjustment 9-7
- 6. RSPF mode sub scanning direction magnification ratio adjustment 9-8
- 7. Automatic black level correction 9-8

[10] SIMULATION, TROUBLE CODES

- 1. Entering the simulation mode 10-1
- 2. Key rule 10-1
- 3. List of simulations 10-1
- 4. Descriptions of various simulations 10-3
- 5. Trouble codes 10-42
 - A. Trouble codes list 10-42
 - B. Details of trouble codes 10-42

[11] MAINTENANCE

- 1. Maintenance table 11-1
- 2. Maintenance display system 11-1
- 3. Remaining toner indication 11-1

[12] USER PROGRAM

- 1. User programs 12-1
- 2. Selecting a setting for a user program 12-5

[13] ELECTRICAL SECTION

- 1. Block diagram 13-1
 - A. Overall block diagram 13-1
- 2. Actual wiring diagram 13-2
 - A. MCU PWB 13-2
 - B. RSPF unit (MX-B201: Option, MX-B201D: Option or Standard (due to sales area)) 13-3
 - C. 2nd CASSETTE (Option) 13-3
 - D. ANB, FAX (Option) 13-4
- 3. Signal name list 13-5

[14] CIRCUIT DIAGRAM

- 1. MCU PWB 14-1
- 2. OPERATION PWB 14-15

[15] FLASH ROM VERSION UP PROCEDURE

- 1. Preparation 15-1
- 2. Download procedure 15-1
- 3. Installation procedure 15-3
 - A. USB joint maintenance program installation 15-3
 - B. Installation procedure on Windows XP 15-3
 - C. Installation procedure on Windows 2000 15-4

[16] UPDATING NETWORK (FAX) BOARD FIRMWARE

- 1. Preparation 16-1
- 2. Upgrading procedures 16-1

[1] GENERAL

1. Major functions

Configurations

Item Model	CPM (A4)	PPM (A4)	SB/MB	2 Tray	SPF	RSPF	Color Scanner	SPCL printer	PCL printer	E-SORT	Duplex	Shifter	FAX	Sharp desk	USB	Network
▲ MX-B201	20CPM	20PPM	MB	Opt	×	Opt	○	○	Opt	○	×	○	Opt	○	○ (2.0 Hi- speed)	Opt
MX-B201D	20CPM	20PPM	MB	Opt	×	Opt/ ○ *1	○	○	Opt	○	○	○	Opt	○	○ (2.0 Hi- speed)	Opt


▲ *1: Option or standard due to sales area.

Descriptions of items


- CPM: Copy speed (Copies Per Minute)
- PPM: Print speed (Print Per Minute)
- SB/MB: SB = Manual feed single bypass, MB = Manual feed multi-bypass
- 2 Tray: Second cassette unit.
- SPF: Original feed unit
- R-SPF: Duplex original feed unit
- Color Scanner: Color scanner function
- SPCL printer: SPCL printer function with USB
- PCL printer: PCL printer function
- E-SORT: Electronic sort function
- Duplex: Auto duplex copy/print function
- Shifter: Job separator function
- FAX: FAX function.
- Sharpdesk: Scanner utilities
- USB: Interface port (USB)
- Network: Network

Descriptions of table


- : Standard provision
- ×
- Opt: Option

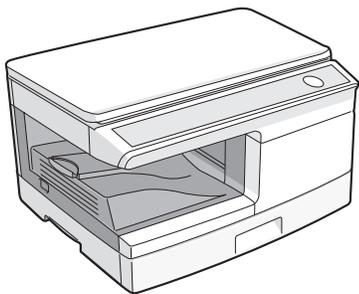


▲ MX-B201/B201D

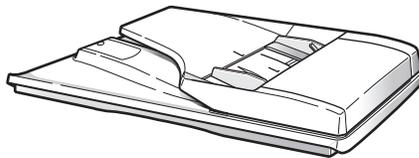


MX-RP13

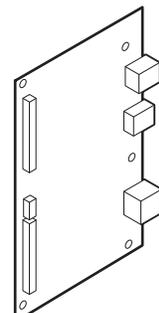

▲ MX-NB11

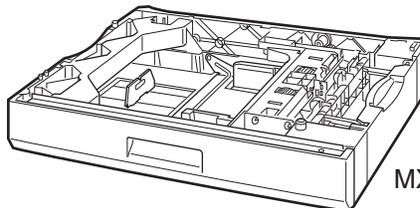

MX-CS10

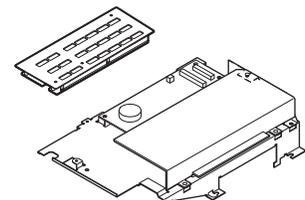

▲ MX-FX12

[2] SPECIFICATIONS

1. Basic Specifications

Item			
Type	Desktop		
Copy system	Dry, electrostatic		
Segment (class)	Digital personal copier		
Copier dimensions	MX-B201	518mm (W) x 460mm (D) x 298mm (H) (20-3/8" (W) x 18-1/8" (D) x 11-3/4"(H))	
	MX-B201D	OC Model	518mm (W) x 460mm (D) x 298mm (H) (20-3/8" (W) x 18-1/8" (D) x 11-3/4"(H))
		RSPF Model	518mm (W) x 460mm (D) x 376mm (H) (20-3/8" (W) x 18-1/8" (D) x 14-3/4"(H))
Weight (Approximately)	MX-B201	16.3kg (35.9 lbs.)	
	MX-B201D	OC Model	16.3kg (35.9 lbs.)
		RSPF Model	18.9kg (41.7lbs.)
		Not including toner cartridges.	

2. Operation specifications

Section, item		Details		
Paper feed section	Paper feed system		1 tray (250 sheet) + multi-bypass (50 sheet)	
	AB system	Tray paper feed section	Paper size	A4, B5, A5 (Landscape)
			Paper weight	56 - 80g/m ² (15 - 21 lbs.)
			Paper feed capacity	250 sheets
			Kinds	Standard paper, specified paper, recycled paper
			Remark	User adjustment of paper guide available
		Multi-bypass paper feed section	Paper size	Max, feedable size: A4 / Min, feedable size: 89 x 140mm
			Paper weight	56 - 128g/m ² (15 - 34.5 lbs.)
			Paper feed capacity	50 sheets (80g/m ²)
			Kinds	Standard paper, specified paper, recycled paper, OHP, Label, (Single copy)
			Remark	User adjustment of paper guide available
	Inch system	Tray paper feed section	Paper size	8-1/2" x 14", 8-1/2" x 13", 8-1/2" x 11", 8-1/2" x 5-1/2" (Landscape)
			Paper weight	15 - 21 lbs.
			Paper feed capacity	250 sheets
			Kinds	Standard paper, specified paper, recycled paper
			Remark	User adjustment of paper guide available
Multi-bypass paper feed section		Paper size	Max, feedable size: 8-1/2" x 14" / Min, feedable size: 3.87" x 5.83"	
		Paper weight	15 - 34.5 lbs.	
		Paper feed capacity	50 sheets (80g/m ²)	
		Kinds	Standard paper, specified paper, recycled paper, OHP, Label, Envelope (Single copy)	
		Remark	User adjustment of paper guide available	
Paper exit section	Exit way		Face down	
	Capacity of output tray		200 sheets	
Originals	Original set		Center Registration (left edge)	
	Max. original size		A4 (8-1/2" x 14")	
	Original kinds		sheet, book	
	Original size detection		None	
Optical section	Scanning section	Scanning system	3 CCDs (RGB) sensor scanning by lighting white lamp	
		CCD sensor	Resolution	600 dpi
		Lighting lamp	Type	CCFL
			Voltage	560Vrms
			Power consumption	2.8W
	Output data		Output: R, G, B 1 or 8 bits/pixel / Input: A/D 16 bits (12 bits actual)	
	Writing section	Writing system		Writing to OPC drum by the semiconductor laser
		Laser unit	Resolution	600 dpi

Section, item		Details	
Image forming	Photoconductor	Type	OPC (30ø)
		Life	25k
	Charger	Charging system	Saw-tooth charging with a grid, / (-) scorotron discharge
		Transfer system	(+) DC corotron system
		Separation system	(-) DC corotron system
	Developing	Developing system	Dry, 2-component magnetic brush development system
Cleaning	Cleaning system	Counter blade system (Counter to rotation)	
Fusing section	Fusing system		Heat roller system
	Upper heat roller	Type	Teflon roller
	Lower heat roller	Type	Silicon rubber roller
	Heater lamp	Type	Halogen lamp
		Voltage	120V / 220 - 240V
Electrical section	Power source	Voltage	120V / 220 - 240V
		Frequency	Common use for 50 and 60Hz
	Power consumption	Max.	Less than 1000W
		Average (during copying)	380Wh/H or less
		Average (stand-by)	80Wh/H or less
		Pre-heat mode	28Wh/H or less

3. Copy performance

Section, item		Details	
Copy ratio	Document glass		Variable: 25% to 400% in 1% increments (total 376 steps) Fixed: AB System: 25%, 50%, 70%, 86%, 100%, 141%, 200%, 400% INCH System: 25%, 50%, 64%, 78%, 100%, 129%, 200%, 400%
	RSPF		Variable: 50% to 200% in 1% increments (total 151 steps) Fixed: 50%, 70%, 86%, 100%, 141%, 200% (50%, 64%, 78%, 100%, 129%, 200%)
Manual steps (Text, Photo)			5 steps
Copy speed (CPM)	First-copy time *1 (Approximately)		8.0 seconds (When user program 24 is set to OFF) 10.7 seconds (paper: A4 (8-1/2" x 11"), exposure mode: AUTO, copy ratio: 100%)
	AB system A4 (Landscape)	Same size	20
	Inch system 8-1/2" x 11" (Landscape)	Same size	20
Max. continuous copy quantity			99
Void	Void area	Leading edge	1 - 4mm
		Trailing edge	4mm or less
		Side edge void area	0.5mm or more (per side) 4.5mm or less (total of both sides)
	Image loss	Leading edge	same size: 3.0mm or less (OC) / 4mm or less (RSPF) Enlarge: 1.5mm or less (OC) / 3mm or less (RSPF) Reduction (50%): 6.0mm or less (OC) / 8mm or less (RSPF)
Warm-up time			- - -

*1: The first-copy time is measured after the power save indicator turns off following power on, using the document glass with the polygon rotating in the copy ready state and "Selection of copy start state" set to ON in the user programs (A4 (8-1/2" x 11"), paper fed from paper tray). The first-copy time may vary depending on machine operating conditions and ambient conditions such as temperature.

4. SPLC printer

Print speed	Max. 20ppm (Paper size: A4/Letter, excluding manual paper feed) * Varies depending on the PC performance.
First print time	8 sec. (without data transfer time)
Duplex	Yes (MX-B201D only)
ROPM	Yes
CPU	None
Memory	64MB
Interface	USB2.0 (Hi Speed)
Network	Option
Emulation	SPLC (JBIG GDI)
MIB support	No
Resolution	600dpi *1
Supported OS	Windows 2000, Windows XP/XPx64, Windows Vista/Vistax64, Windows 7/7x64
WHQL support	Yes *2
Application	Status window

*1: Engine Resolution

*2: Running change

5. Scan function

Type	Flat Bed Color Scanner
Scanning system	Original table/RSPF
Light source	3 CCDs (RGB) sensor scanning by lighting white lamp (1 pcs of CCFL)
Resolution	Optical: 600 x 600dpi Setting range: 50 - 9600dpi (Preview resolution is fixed at 75dpi)
Originals	Sheet type / Book type
Output data	R, G, B 1 or 8 bits/pixel
Scan range	OC / RSPF : 8.5" (H) x 14.0" (V) Original position: Left Center
Scan speed	OC / RSPF : Max. 2.88ms/line
Protocol	TWAIN / WIA (XP, Vista, 7) / STI
Interface	USB 2.0 (Hi speed support)
Scanner utility	Button Manager / Sharpdesk / Composer
Scan key/lamp	Yes
Duplex scan	Yes (MX-B201D only)
Supported OS	Windows 2000 Professional, Windows XP Home Edition/Professional, Windows Vista, Windows 7 *1
Void area	No (User settable by PC)
WHQL supported	Yes *2

▲ *1: 32 bit and 64 bit are supported for Windows Vista, Windows 7, and Windows XP, Server 2003, Server 2008.

*2: By running change

6. RSPF

Original capacity	50 sheets (56 - 90g/m ²) or 6.5mm, 1/4" or less.	
Original size	A4 to A5 / 8-1/2" x 14" to 5-1/2" x 8-1/2" (Landscape)	
Original replacement speed	A4 / 8-1/2" x 11" 13 sheets/min. (600 x 300dpi) 7 sheets/min. (600 x 600dpi)	
Job speed (Tray 1, Landscape)	S to S	17cpm (85% Original conversion rate) (A4/8.5" x 11" 10 originals, 5 copies)
	S to D	12cpm (60% Original conversion rate) (A4/8.5" x 11" 10 originals, 5 copies)
	D to D	8cpm (40% Original conversion rate) (A4/8.5" x 11" 10 originals (20 faces), 5 copies)
Original placement	Face up	
Original weight	56 - 90g/m ² (15 - 23.9lbs.)	
Mixed feeding	No	
Unacceptable originals	Thermal paper, punched paper, folded paper, stapled paper, clipped paper, taped paper, paper with correction fluid, transparent originals such as OHP films, photos, and catalog pages.	

[Conditions] Speed with tray 1, normal size, paper size of A4 (8.5" x 11"), and RSPF.

[3] CONSUMABLE PARTS

1. Supply system table

A. Asia

No.	Name	Content	Life	Product name	Package
1	Toner cartridge (Black)	Toner cartridge x 1 (Black toner: Net 243g) IC-Chip: Yes Stirring function: Yes	8K (A4 6% Document)	MX-B20AT1	10
2	Developer (Black)	Developer x 1 (Black developer: Net 170g)	25K	MX-B20AV1	10
3	Drum	OPC drum x 1 Drum fixing plate x 1	25K	AR-152DR	10

B. SMEF/Dealer

No.	Name	Content	Life	Product name	Package
1	Toner cartridge (Black)	Toner cartridge x 1 (Black toner: Net 243g) IC-Chip: Yes Stirring function: Yes	8K (A4 6% Document)	MX-B20FT1	10
2	Developer (Black)	Developer x 1 (Black developer: Net 170g)	25K	MX-B20AV1	10
3	Drum	OPC drum x 1 Drum fixing plate x 1	25K	AR-152DR	10

C. SRH

No.	Name	Content	Life	Product name	Package
1	Toner cartridge (Black)	Toner cartridge x 1 (Black toner: Net 243g) IC-Chip: Yes Stirring function: Yes	8K (A4 6% Document)	MX-B20AT1	10
2	Developer (Black)	Developer x 1 (Black developer: Net 170g)	25K	MX-20AV1	10
3	Drum	OPC drum x 1 Drum fixing plate x 1	25K	AR-152DR-C	10

D. Europe

No.	Name	Content	Life	Product name	Package
1	Toner cartridge (Black)	Toner cartridge x 1 (Black toner: Net 243g) IC-Chip: Yes Stirring function: Yes	8K (A4 6% Document)	MX-20GT1	10
2	Developer (Black)	Developer x 1 (Black developer: Net 170g)	25K	MX-20GV1	10
3	Drum	OPC drum x 1 Drum fixing plate x 1	25K	AR-152DM	10

E. North America

No.	Name	Content	Life	Product name	Package
1	Toner cartridge (Black)	Toner cartridge x 1 (Black toner: Net 243g) IC-Chip: Yes Stirring function: Yes	8K (A4 6% Document)	MX-B20NT1	10
2	Developer (Black)	Developer x 1 (Black developer: Net 170g)	25K	MX-B20NV1	10
3	Drum	OPC drum x 1 Drum fixing plate x 1	25K	AR-152DR	10



2. Environmental


The environmental conditions for assuring the copy quality and the machine operations are as follows:

(1) Normal operating condition


Temperature: 20°C to 25°C

Humidity: 65 ± 5%RH


(2) Acceptable operating condition

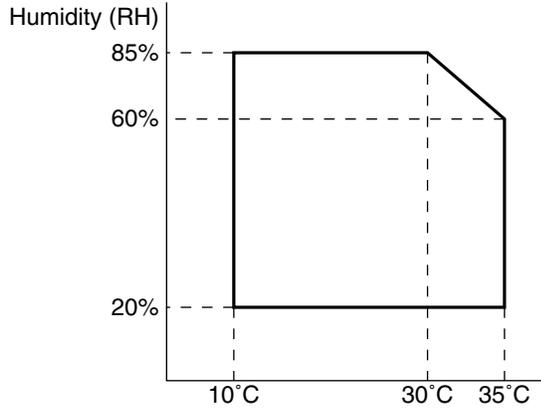

(3) Transportation condition

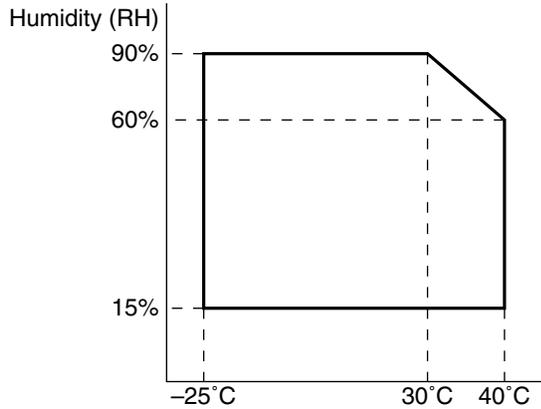


(4) Supply storage condition

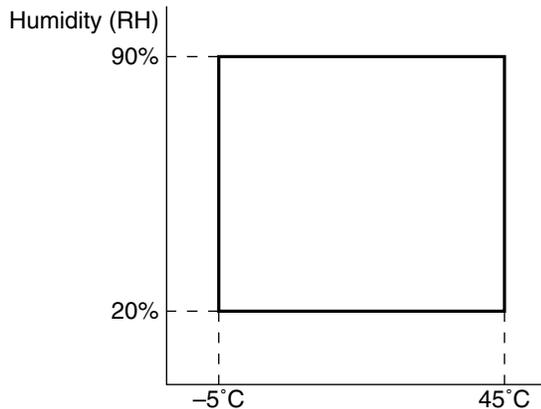


3. Production control number (lot No.) identification



<Toner cartridge>



- : Model name
- ◇ : Color code
- ▲ : Destination
- ◆ : Skating
- : Production place
- : Production date (YYYYMMDD)
- ◎ : Serial number
- △ : Version number

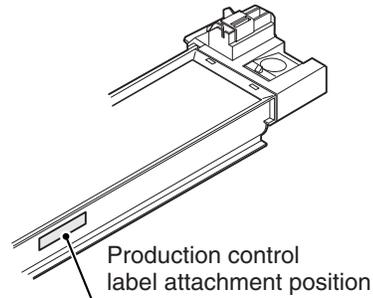

<Drum>

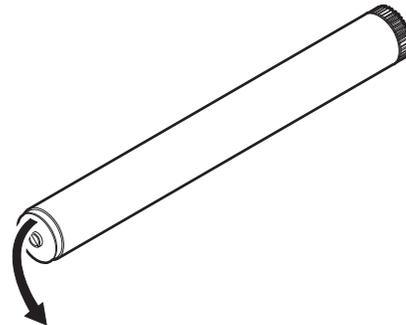


The lot number is of 10 digits. Each digit indicates the content as follows.

The number is printed on the flange on the front side.


- 1: Number
For this model, this digit is 2.
- 2: Alphabet
Indicates the model conformity code.
- 3: Number
Indicates the end digit of the production year.
- 4: Number or X, Y, Z
Indicates the production month.
X stands for October, Y November, and Z December.
- 5/6: Number
Indicates the day of the production date.
- 7: Number
Indicates the day of the month of packing.
X stands for October, Y November, and Z December.
- 8/9: Number
Indicates the day of the packing date.
- 10: Alphabet
Indicates the production factory.

<Developer>

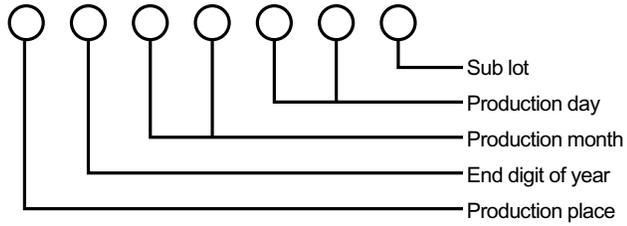


4. Toner cartridge replacement

- 1) Open the front and side cabinets of the copier.
- 2) Keep holding Toner lever, and push down.
- 3) Carefully pull out Toner unit from the copier.

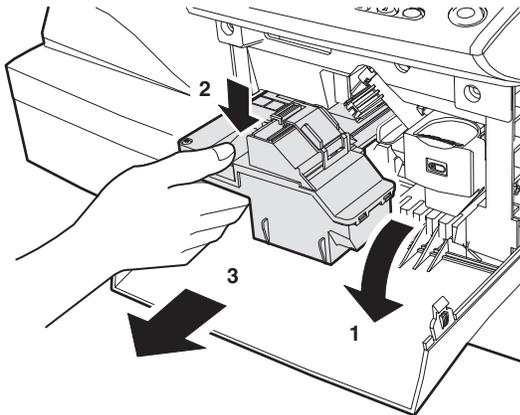


- 4) Put Toner unit in a collection bag immediately after removing it from the copier

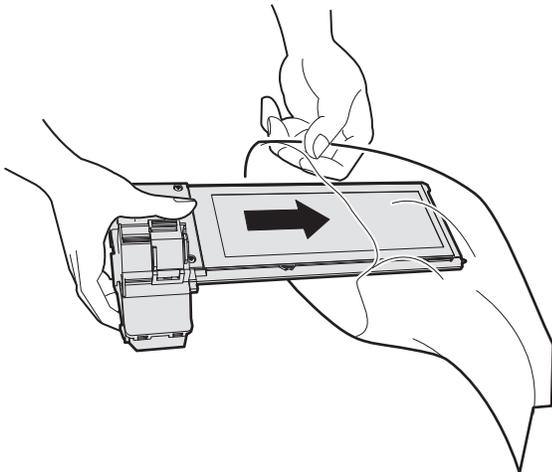

Note: Never carry exposed Toner unit. Be sure to put it in the collection bag.


[4] EXTERNAL VIEWS AND INTERNAL STRUCTURES

1. Appearance

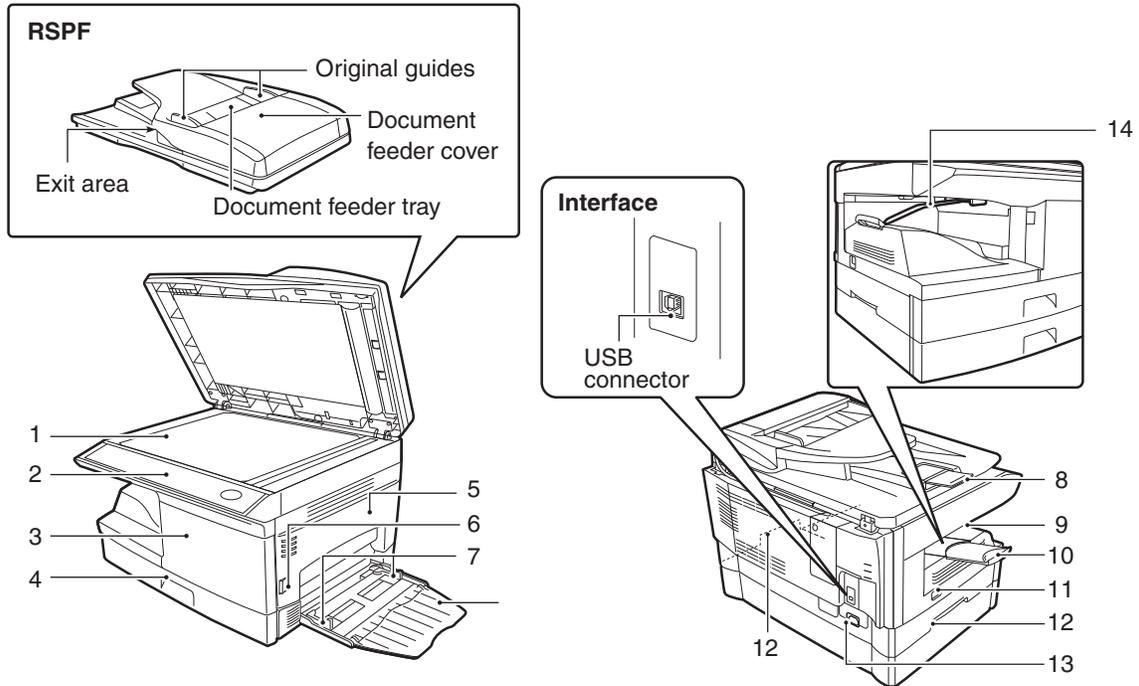



1	Document glass	2	Operation panel	3	Front cover
4	Paper tray	5	Side cover	6	Side cover open button
7	Bypass tray paper guides	8	Original output tray extension	9	Paper output tray
10	Paper output tray extension	11	Power switch	12	Handles
13	Power cord socket	14	Paper holder arm		

2. Internal

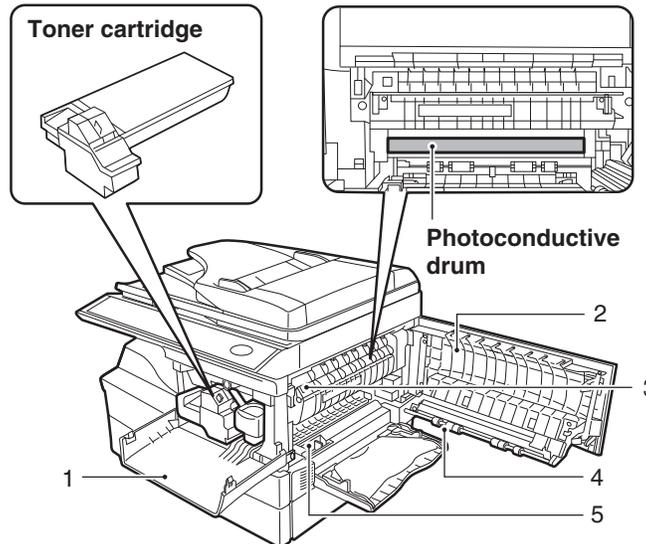


1	Front cover	2	Side cover	3	Fusing unit release lever
4	Transfer charger	5	Charger cleaner		

3. Operation panel

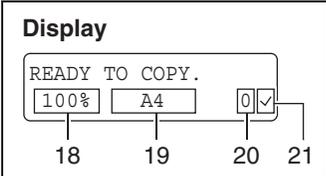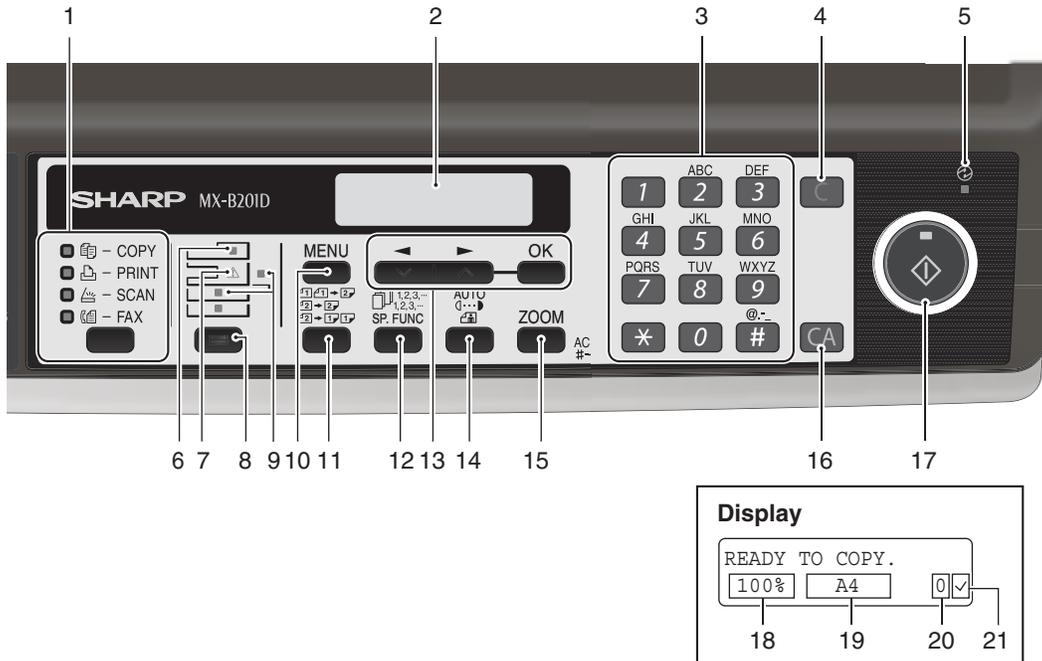


<p>1 [MODE SELECT] key / Mode indicators Press this key to select the mode. The indicator of the selected mode lights (copy, printer, scanner, fax mode indicators).</p>	<p>2 Display This shows messages indicating the machine status and any problems that occur, as well as user programs and function setting menus.</p>
<p>3 Numeric keys Use these to enter the number of copies and other numerical settings. The keys can also be used to select items in function setting menus.</p>	<p>4 [CLEAR] key (C) Use this to clear the set number of copies, as well as cancel a job that is in progress. When a setting menu appears, use this key to move back to the previous menu level.</p>
<p>5 Power save indicator This lights up when the power save function is activated.</p>	<p>6 RSPF indicator This lights up when an original is placed in the RSPF.</p>
<p>7 Error indicator This lights steadily or blinks when a paper misfeed or other error occurs.</p>	<p>8 [TRAY SELECT] key (TRAY) Use to select the paper tray that has the desired paper for copying.</p>
<p>9 Tray location indicator Indicates the selected paper tray. The indicator blinks when the tray is out of paper or is not closed.</p>	<p>10 [MENU] key Press this key to select the paper size for copying, to configure a user program or to display the total count.</p>
<p>▲ ▲ 11 [2-SIDED COPY (2-SIDED COPY)] key (MX-B201D) [2-SIDED SCAN (2-SIDED SCAN)] key (MX-B201) Use to copy both sides of an original.</p>	<p>12 [E-SORT/SP.FUN (E-SORT/SP.FUN)] key Press to select the sort function, 2 IN 1 copy function, ID CARD COPY or margin shift function.</p>
<p>13 [◀] key (◀), [▶] key (▶), [OK] key Press the [◀] key (◀) or [▶] key (▶) to select an item in a function setting menu. Press the [OK] key to enter a selection.</p>	<p>14 [EXPOSURE (EXPOSURE)] key Use to switch from auto exposure adjustment to text mode or photo mode.</p>
<p>15 [ZOOM] key Press to select an enlargement or reduction ratio. To select a preset ratio setting, press the [ZOOM] key and select the desired preset ratio. To select a ratio that is not preset, press the [ZOOM] key, select the preset ratio that is closest to the desired ratio, and then press the [◀] key (◀) or [▶] key (▶) to increase or decrease the ratio in increments of 1%.</p>	<p>16 [CLEAR ALL] key (CA) This returns all functions to the default settings. When pressed in a setting menu, this returns the settings and display to the initial state.</p>
<p>17 [START] key (START) / Ready indicator The ready indicator lights up when copying or scanning is possible. To begin copying, press the [START] key (START). The [START] key (START) is also pressed to return to normal operation from auto power shut-off mode.</p>	<p>18 Shows the current copy ratio.</p>
<p>19 Shows the selected paper size.</p>	<p>20 Shows the number of copies that has been entered with the numeric keys.</p>
<p>21 A checkmark “✓” appears when the exposure has been changed, or when two-sided copying, sort, 2 IN 1, ID CARD COPY or margin shift is selected.</p>	

4. Motors and solenoids

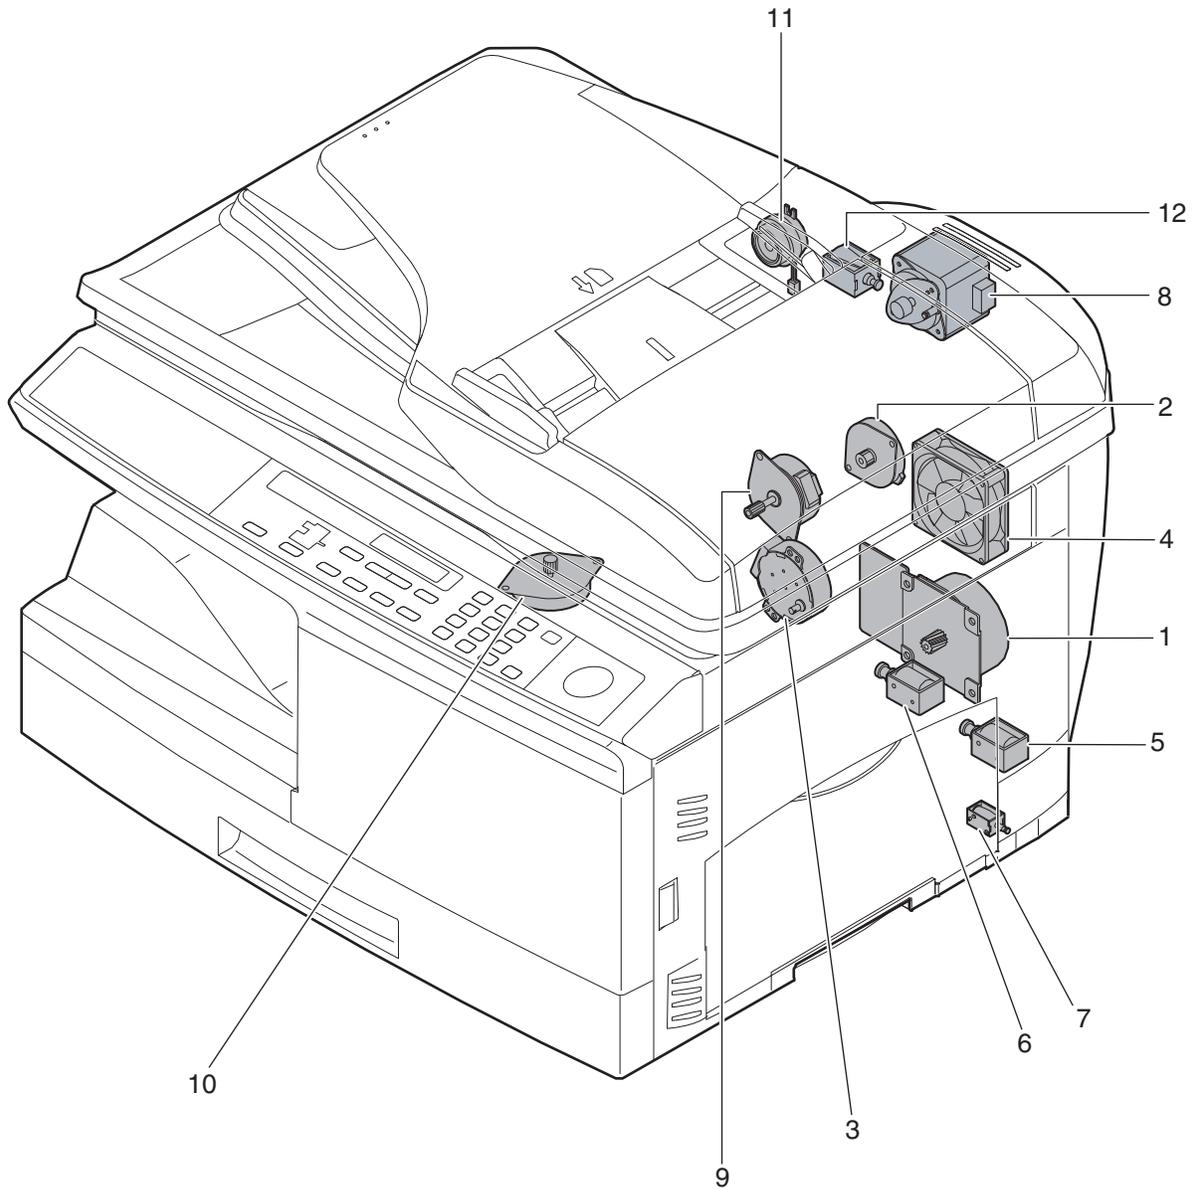


No.	Name	Control signal	Function / Operation
1	Main motor	MM	Drives the copier.
2	Scanner motor	MRMT	Drives the optical mirror base (scanner unit).
3	Toner motor	TM	Supplies toner.
4	Cooling fan motor	VFM	Ventilate the fuser section.
5	Resist roller solenoid	RRS	Resist roller rotation control solenoid
6	Paper feed solenoid	CPFS1	Cassette Paper feed solenoid 1
7	Multi paper feed solenoid	MPFS	Multi manual pages feed solenoid
▲ 9	Duplex motor	DMT	Devices the duplex paper transport section (Duplex model only)
10	Shifter motor	SFTM	Drives the shifter.
11	Reverse clutch	SRVC	Reverses the rotating direction of the roller.
12	Paper feed solenoid (RSPF)	SPUS	Feeds paper.

5. Sensors and switches

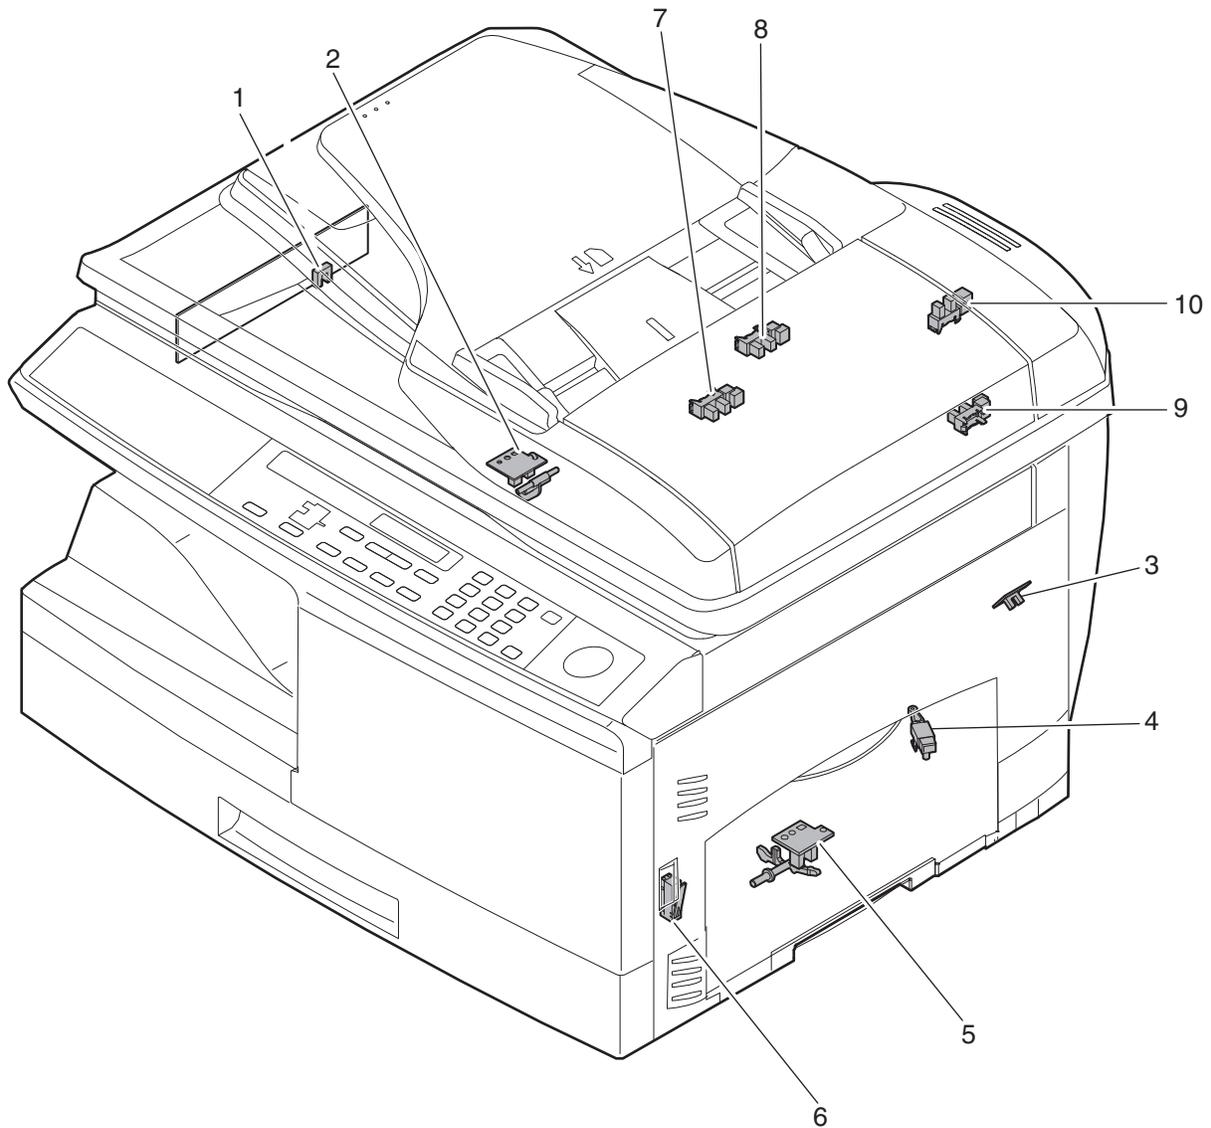


No.	Name	Signal	Type	Function / Operation	Output
1	Scanner unit home position sensor	MHPS	Transmission sensor	Scanner unit home position detection	"H" at home position
2	POD sensor	POD	Transmission sensor	Paper exit detection	"H" at paper pass
3	PPD2 sensor	PPD2	Transmission sensor	Paper transport detection 2	"L" at paper pass
4	Cassette detection switch	CED1	Micro-switch	Cassette installation detection	"H" at cassette insertion
5	PPD1 sensor	PPD1	Transmission sensor	Paper transport detection 1	"L" at paper pass
6	Door switch	DSW	Micro-switch	Door open/close detection (safety switch for 24V)	1 or 0V of 24V at door open
7	Paper empty sensor	SPID	Transmission sensor	Paper entry detection	"H" paper empty
8	Paper exit sensor	SRJD	Transmission sensor	Paper exit detection	"H" paper empty
9	Paper sensor	SPPD	Transmission sensor	Paper transport detection	"H" paper empty
10	Upper door open/close sensor	SCOD	Transmission sensor	Cover open/close detection	"L" open

6. PWB unit

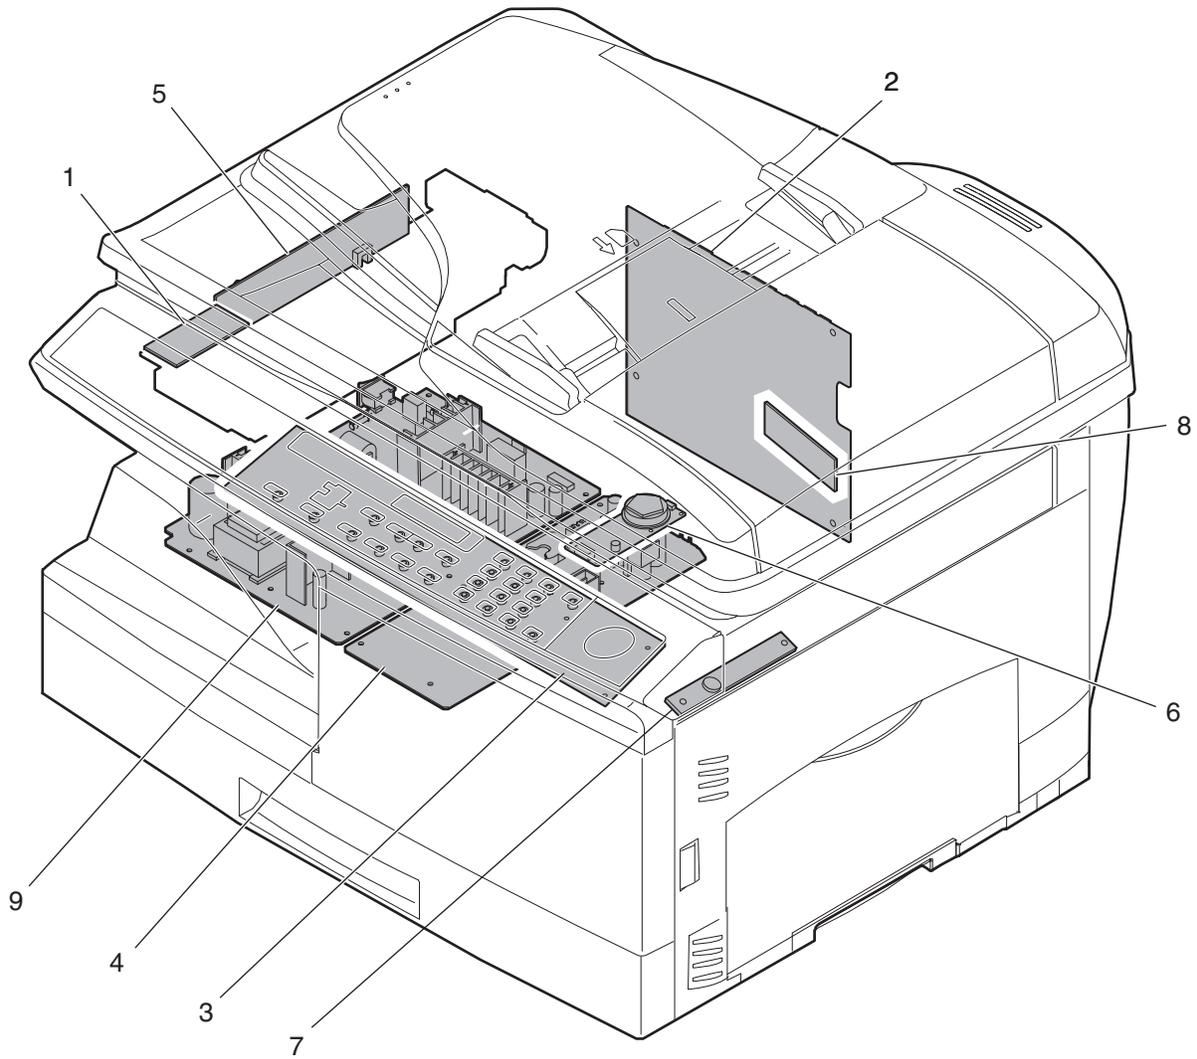

No.	Name	Function / Operation
1	Exposure lamp inverter PWB	Exposure lamp (CCFL) control
2	Main PWB (MCU)	Copier control
3	Operation PWB	Operation input/display
4	High voltage PWB	High voltage control
5	CCD sensor PWB	For image scanning
6	LSU motor PWB	For polygon motor drive
7	TCS PWB	For toner sensor control
8	LSU PWB	For laser control
9	Power PWB	AC power input, DC voltage control

7. Cross sectional view

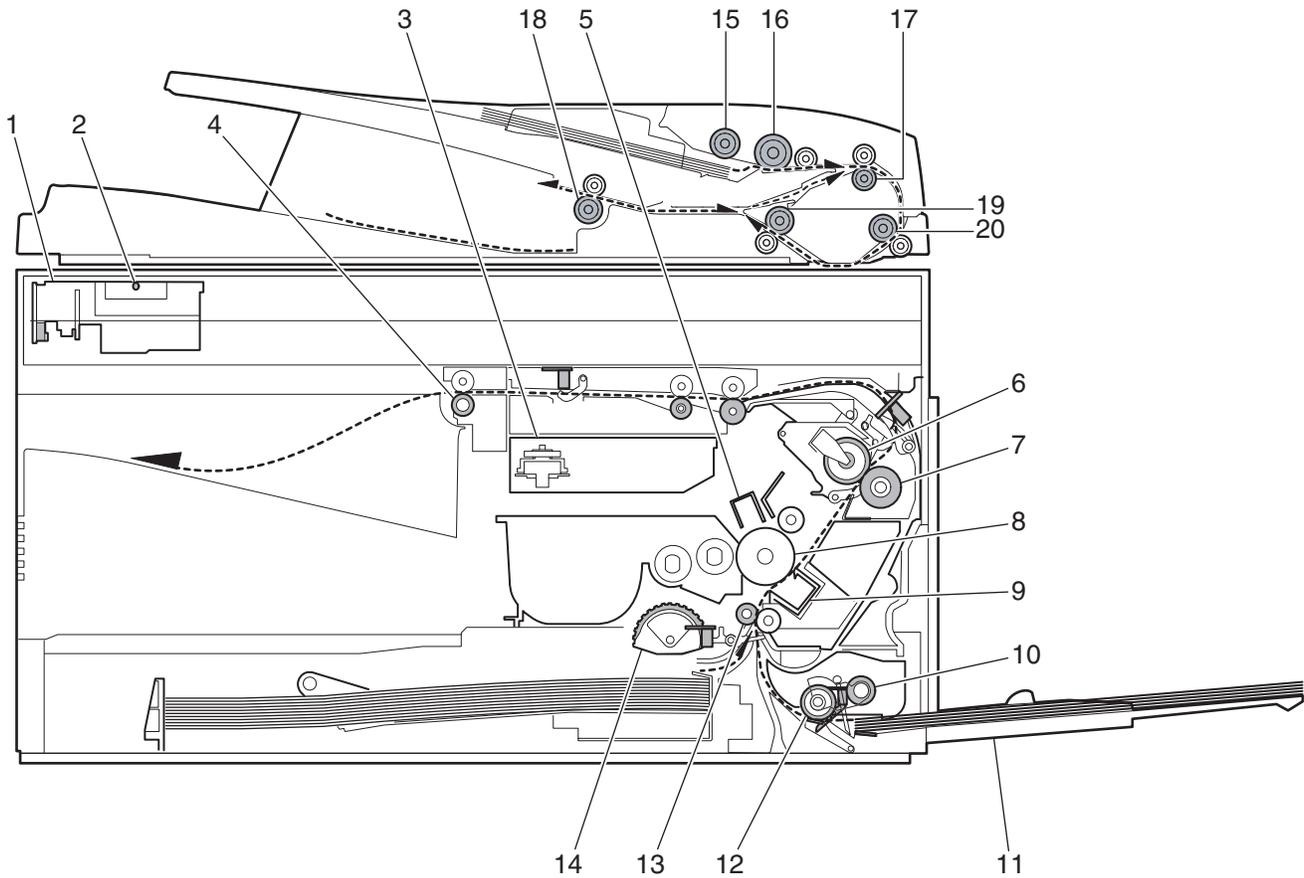

No.	Name	Function / Operation
1	Scanner unit	Illuminates the original with the copy lamp and passes the reflected light to the lens unit (CCD).
2	Exposure lamp	Exposure lamp (CCFL) illuminates original
3	LSU (Laser unit)	Converts the original image signal into laser beams and writes onto the drum.
4	Paper exit roller	Roller for paper exit
5	Main charger	Provides negative charges evenly to the drum surface.
6	Heat roller	Fuses toner on the paper. (Teflon roller)
7	Pressure roller	Fuses toner on the paper. (Silicon rubber roller)
8	Drum	Forms images.
9	Transfer unit	Transfers images onto the drum.
10	Pickup roller	Picks up the manual feed paper. (In multi feed only)
11	Manual paper feed tray	Tray for manual feed paper
12	Manual paper feed roller	Transport the paper from the manual paper feed port.
13	PS roller unit	Takes synchronization between the lead edge and the rear edge of the paper.
14	Paper feed roller	Picks up a sheet of paper from the cassette.
15	Pickup roller	Picks up documents.
16	Separation roller	Separates documents to feed properly.
17	Upper transport roller	Transports of a document.
18	Paper exit roller	Discharges documents.
19	Lower transport roller	Transports of a document.
20	PS roller	Feeds documents to the scanning section.

[5] UNPACKING AND INSTALLATION

1. Copier installation


Improper installation may damage the copier. Please note the following during initial installation and whenever the copier is moved.

Caution: If the copier is moved from a cool place to a warm place, condensation may form inside the copier. Operation in this condition will cause poor copy quality and malfunctions.


Leave the copier at room temperature for at least 2 hours before use.

Do not install your copier in areas that are:


- damp, humid, or very dusty

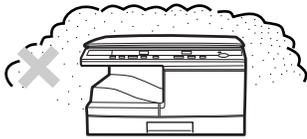


- exposed to direct sunlight

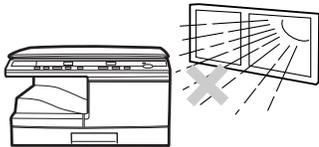

- poorly ventilated

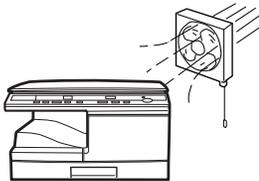

- subject to extreme temperature or humidity changes, e.g., near an air conditioner or heater.

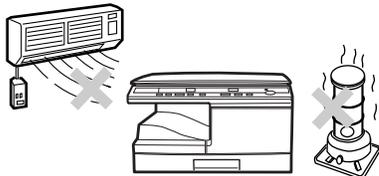


The copier should be installed near an accessible power outlet for easy connection.

Be sure to connect the power cord only to a power outlet that meets the specified voltage and current requirements.

Also make certain the outlet is properly grounded.


Be sure to allow the required space around the machine for servicing and proper ventilation.

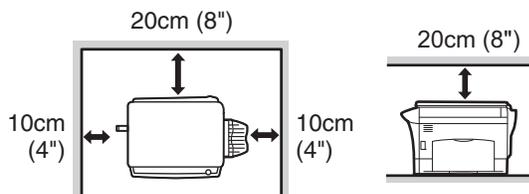

2. Cautions on handling


Be careful in handling the copier as follows to maintain the performance of this copier.

Do not drop the copier, subject it to shock or strike it against any object.

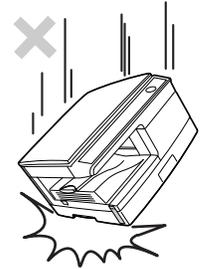

Do not expose the drum cartridge to direct sunlight.

Doing so will damage the surface (green portion) of the drum cartridge, causing poor print quality.

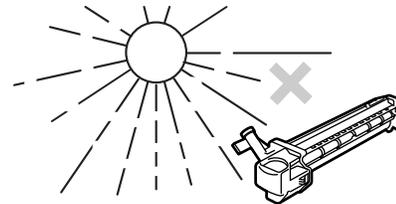

Store spare supplies such as drum cartridges and toner cartridges in a dark place without removing from the package before use. ▲


If they are exposed to direct sunlight, poor print quality may result.

Do not touch the surface (green portion) of the drum cartridge.

Doing so will damage the surface of the cartridge, causing poor print quality.


3. Checking packed components and accessories

Open the carton and check if the following components and accessories are included. ▲

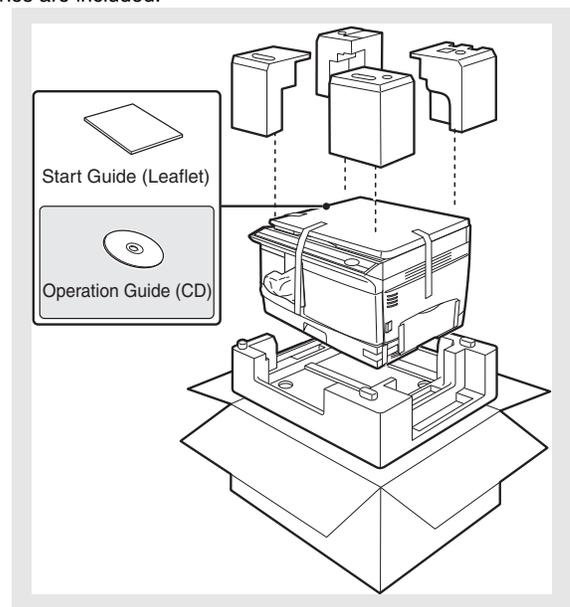


4. Unpacking

Be sure to hold the handles on both sides of the unit to unpack the unit and carry it to the installation location.

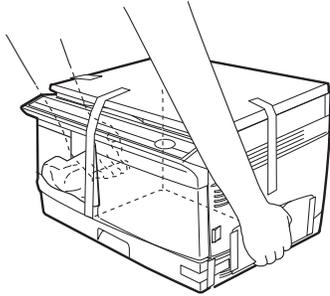


5. Removing protective packing materials

Remove all pieces of tape shown in the illustration below. Then open the SPF and remove protective materials. After that, take out the bag containing the toner cartridge.

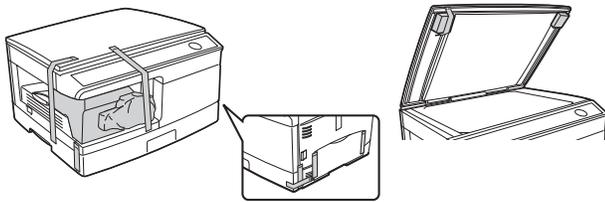


6. Developer unit installation


- 1) 2) 3) Open the side and front cabinets of the copier.
- 4) Remove the locking tape of the developer unit.
- 5) Remove the screw which is fixing the copier and Developer unit.
- 6) Remove Developer unit slowly from the copier.

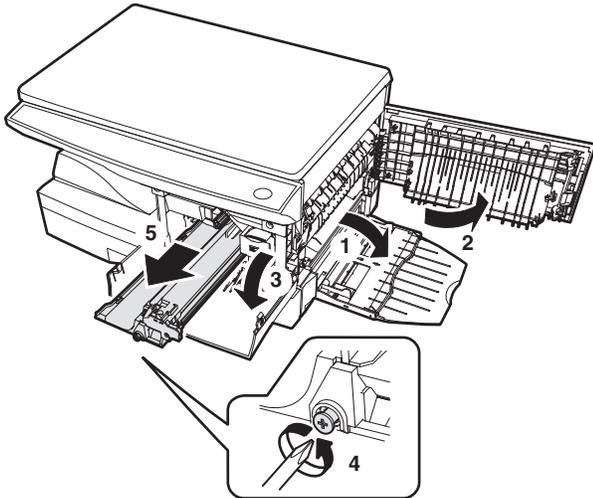

- 7) Remove the screw (1 pc).
- 8) Remove Upper developer unit.

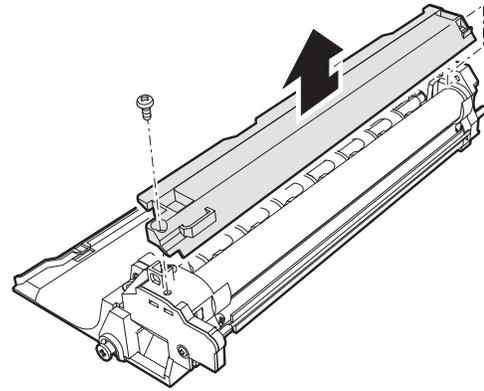


- 9) Shake the aluminum bag to stir developer
- 10) Supply developer from the aluminum bag to the top of the MX roller evenly.

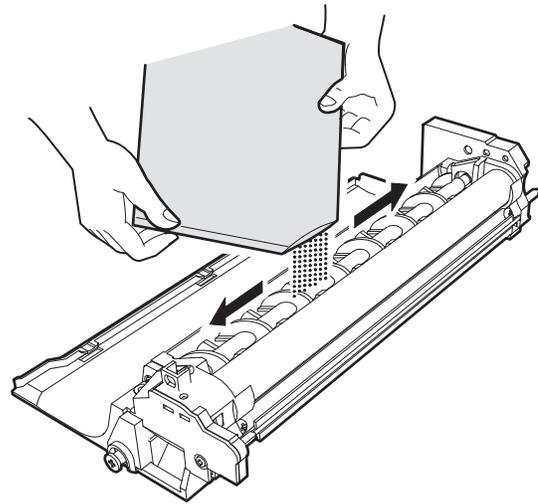


Note: Be careful not to spill developer outside Developer unit.

- 11) Attach Upper developer unit and fix it with a screw.
- 12) Rotate the MG roller gear to distribute developer evenly.

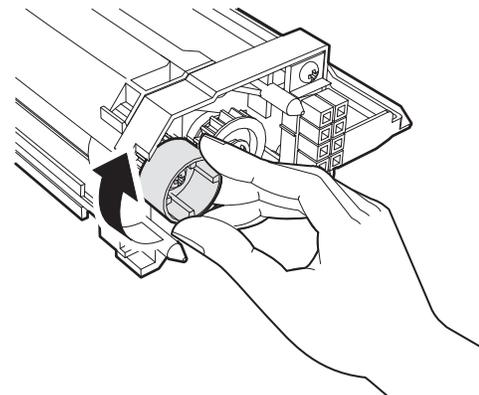

Note: Never rotate the gear in the reverse direction.

Note: When carrying Developer unit, do not tilt it extremely as shown with the arrow in the figure below. (To prevent spilling developer)

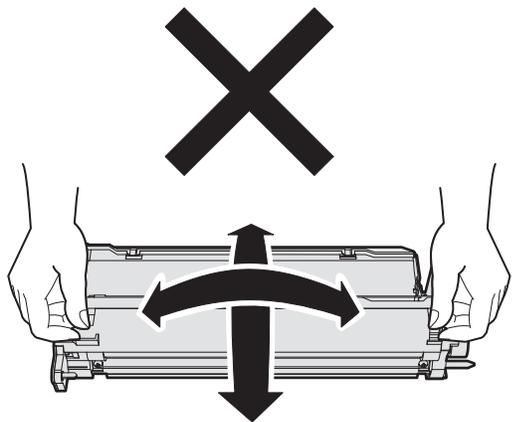

13) Insert Developer unit carefully into the copier.


Note: Quick insertion may result in splash of developer. Be sure to insert carefully.

14) Confirm that Developer unit is completely inserted to the bottom of the machine, fix Developer unit and the machine with a screw.

15) Completion of Developer unit installation


7. Toner cartridge installation

1) To prevent against uneven distribution of toner, hold Toner unit with both hands and shake it several times horizontally.

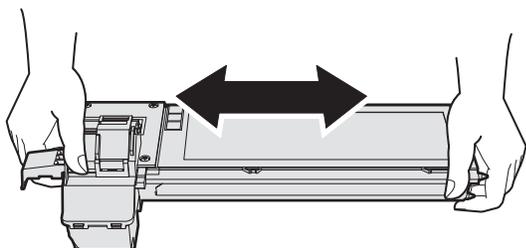


2) Hold the section of Toner unit shown in the figure below, remove the packing tape, and remove the cushion.

3) Pull out the cushion in the arrow direction.

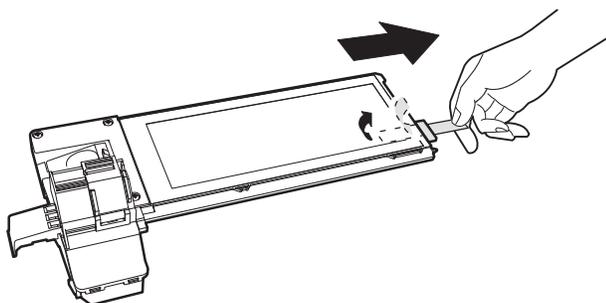


4) Insert Toner unit carefully into the copier.

5) Insert until the hook is engaged with the copier as shown in the figure below.

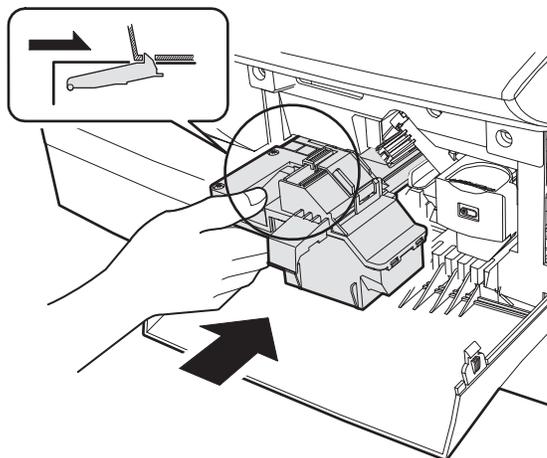

6) Pull out the shutter in the arrow direction.

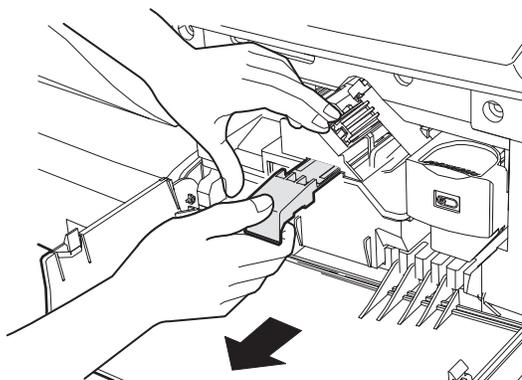


Note: Do not carry the toner unit by the shutter, it may come off and cause the toner unit to be dropped.


7) Completion of Toner unit installation
Close the front and side cabinets.

8. Loading paper

1) Raise the handle of the paper tray and pull the paper tray out until it stops.

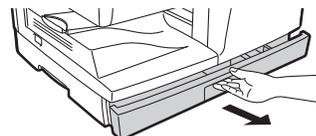


2) Remove the pressure plate lock. Rotate the pressure plate lock in the direction of the arrow to remove it while pressing down the pressure plate of the paper tray.

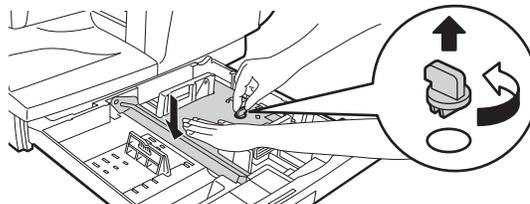


- 3) Store the pressure plate lock which has been removed in step 2). To store the pressure plate lock, rotate the lock to fix it on the relevant location.

Pressure plate lock

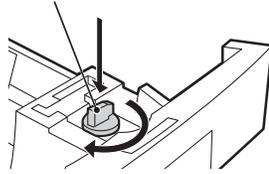


- 4) Adjust the paper guides on the paper tray to the copy paper width and length. Squeeze the lever of paper guide (A) and slide the guide to match with the width of the paper. Move paper guide (B) to the appropriate slot as marked on the tray.

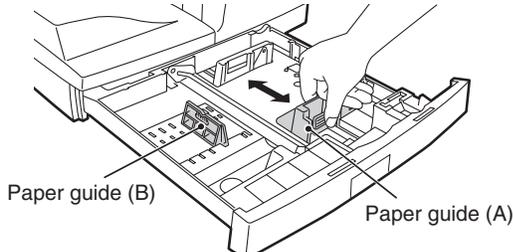

- 5) Fan the paper and insert it into the tray. Make sure the edges go under the corner hooks.

Note: Do not load paper above the maximum height line (▼▼). Exceeding the line will cause a paper misfeed.

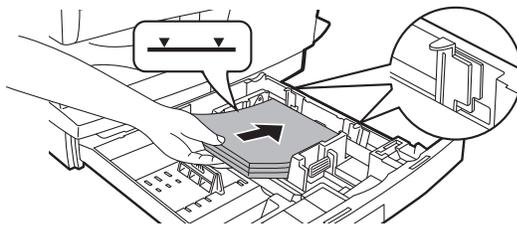

- 6) Gently push the paper tray back into the unit.

9. Software

The CD-ROM that accompanies the machine contains the following software:

MFP driver

Printer driver

The printer driver enables you to use the printer function of the machine.

Scanner driver (USB only)

The scanner driver allows you to use the scanning function of the machine with TWAIN-compliant and WIA-compliant applications.

Button Manager

Button Manager allows you to use the scanner menus on the machine to scan a document.

Sharpdesk

Sharpdesk is an integrated software environment that makes it easy to manage documents and image files, and launch applications.

A. Before installation

(1) Hardware and software requirements

Check the following hardware and software requirements in order to install the software.

Computer type	IBM PC/AT or compatible computer equipped with a USB2.0 *1
Operating system *2 *3 *4	Windows 2000 Professional, Windows XP, Windows Vista, Windows 7
Display	1024 x 768 dots resolution and 16-bit color or higher is recommended.
Hard disk free space	150 MB or more
Other hardware requirements	An environment on which any of the operating systems listed above can fully operate

*1: Compatible with Windows 2000 Professional, Windows XP Professional/Home Edition, Windows Vista or Windows 7 pre-installed model standardly equipped with a USB port.

*2: Printing is not available in MS-DOS mode.

*3: The machine does not support printing from a Macintosh environment.

*4: Administrator's rights are required to install the software using the installer.

(2) Installation environment and usable software

The following table shows the drivers and software that can be installed for each version of Windows and interface connection method.

Cable	Operating System	MFP Driver		Button Manager	Sharpdesk*
		Printer driver	Scanner driver		
USB	Windows 2000/XP/Vista/7	Available			

* Sharpdesk can not be used under Windows 2000 environment.

B. Installing the software

Note:

- The screen images in this manual are mainly for Windows XP. With other versions of Windows, some screen images may be different from those in this manual.
- In the following explanations it is assumed that the mouse is configured for right hand operation.
- The scanner feature only works when using a USB cable.
- If an error message appears, follow the instructions on the screen to solve the problem. After the problem is solved, the installation procedure will continue. Depending on the problem, you may have to click the "Cancel" button to exit the installer. In this case, reinstall the software from the beginning after solving the problem.

(1) Using the machine with a USB connection

- 1) The USB cable must not be connected to the machine. Make sure that the cable is not connected before proceeding. If the cable is connected, a Plug and Play window will appear. If this happens, click the "Cancel" button to close the window and disconnect the cable.

Note: The cable will be connected in step 13).

- 2) Insert the CD-ROM into your computer's CD-ROM drive.
- 3) Click the "start" button, click "My Computer" (), and then double-click the CD-ROM icon ().
 - On Windows Vista/7, click the "Start" button, click "Computer", and then double-click the CD-ROM icon.
 - On Windows 2000, double-click "My Computer", and then double-click the CD-ROM icon.
- 4) Double-click the "setup" icon ().
On Windows Vista/7, if a message screen appears asking you for confirmation, click "Allow".


- 5) The "SOFTWARE LICENSE" window will appear. Make sure that you understand the contents of the software license, and then click the "Yes" button.

Note: You can show the "SOFTWARE LICENSE" in a different language by selecting the desired language from the language menu. To install the software in the selected language, continue the installation with that language selected.

- 6) Read the "Readme First" in the "Welcome" window and then click the "Next" button.

- 7) To install all of the software, click the "Standard" button and go to step 12).


To install particular packages, click the "Custom" button and go to next step.

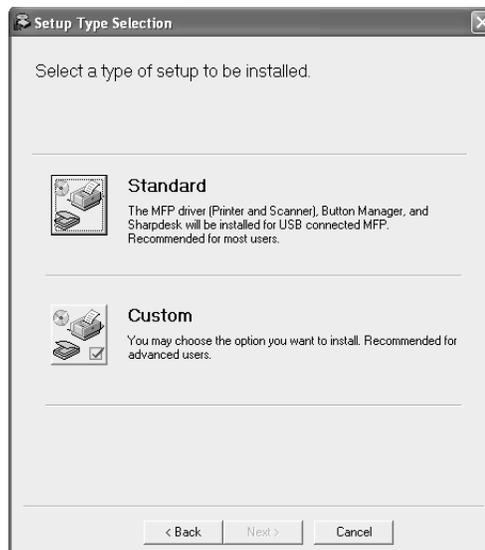

- 8) Click the "MFP Driver" button.
Click the "Display Readme" button to show information on packages that are selected.



- 9) Select "Connected to this computer" and click the "Next" button. Follow the on-screen instructions.

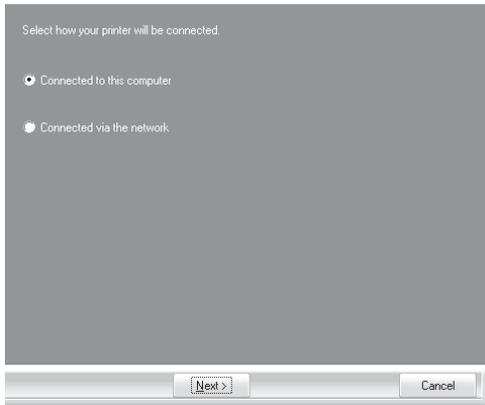

Caution:

- If you are using Windows Vista or 7 and a security warning window appears, be sure to click "Install this driver software anyway".
- If you are running Windows 2000/XP and a warning message appears regarding the Windows logo test or digital signature, be sure to click "Continue Anyway" or "Yes".

- 10) You will return to the window of step 8). If you wish to install Button Manager or Sharpdesk, click the "Utility Software" button. If you do not wish to install the Utility Software, click the "Close" button and go to step 12).

Note: After the installation, a message prompting you to restart your computer may appear. In this case, click the "Yes" button to restart your computer.

Installing the Utility Software

- 11) Click the "Button Manager" or the "Sharpdesk" button. Click the "Display Readme" button to show information on packages that are selected. Follow the on-screen instructions.



- 12) When installing is finished, click the "Close" button.

Caution:

- If you are using Windows Vista or 7 and a security warning window appears, be sure to click "Install this driver software anyway".
- If you are running Windows 2000/XP and a warning message appears regarding the Windows logo test or digital signature, be sure to click "Continue Anyway" or "Yes".

A message will appear instructing you to connect the machine to your computer. Click the "OK" button.

Note: After the installation, a message prompting you to restart your computer may appear. In this case, click the "Yes" button to restart your computer.

- 13) Make sure that the power of the machine is turned on, and then connect the USB cable.

Windows will detect the machine and a Plug and Play screen will appear.

- 14) Follow the instructions in the plug and play window to install the driver.

Follow the on-screen instructions.

Caution:

- If you are using Windows Vista or 7 and a security warning window appears, be sure to click "Install this driver software anyway".
- If you are running Windows 2000/XP and a warning message appears regarding the Windows logo test or digital signature, be sure to click "Continue Anyway" or "Yes".

This completes the installation of the software.

- If you installed Button Manager, set up Button Manager as explained in "SETTING UP BUTTON MANAGER".
- If you installed Sharpdesk, the Sharpdesk setup screen will appear. Follow the instructions in the screen to set up Sharpdesk.

(2) Connecting a USB cable

Follow the procedure below to connect the machine to your computer. A USB cable for connecting the machine to your computer is not included with the machine. Please purchase the appropriate cable for your computer.


Caution:

- USB is available with a PC/AT compatible computer that was originally equipped with USB and had Windows 2000 Professional, Windows XP, Windows Vista or Windows 7 preinstalled.
- Do not connect the USB cable before installing the printer driver. The USB cable should be connected during installation of the printer driver.

Note:

- If the machine will be connected using a USB 2.0 port of your computer, please purchase a USB cable that supports USB 2.0.
- Use the machine's "HI-SPEED" mode only when using a computer that is running Windows 2000/XP/Vista or 7.
- Even when the Microsoft USB 2.0 driver is used, it may not be possible to obtain full USB 2.0 speed if a PC card supporting USB 2.0 is used. To obtain the latest driver (which may enable a higher speed), contact the manufacturer of your PC card.

- 1) Insert the cable into the USB connector on the machine.

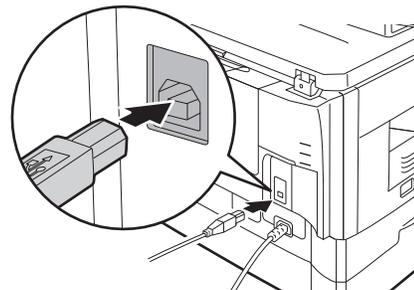


- 2) Insert the other end of the cable into your computer's USB port.

(3) Using the machine as a shared printer

If the machine will be used as a shared printer on a network, follow these steps to install the printer driver in the client computer.

Note: To configure the appropriate settings in the print server, see the operation manual or help file of your operating system.


- 1) Perform steps 2) through 6) in "Installing the software".
- 2) Click the "Custom" button.

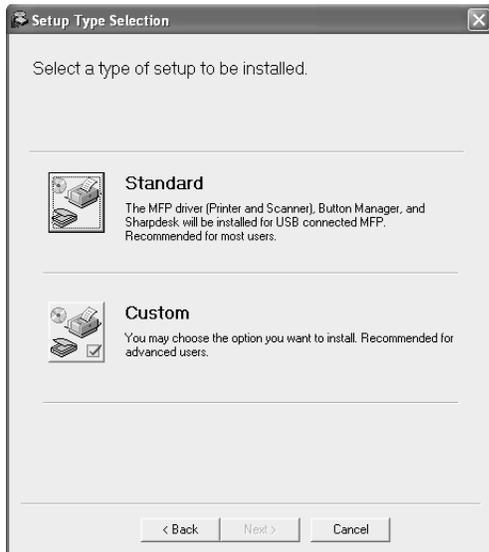


- 3) Click the "MFP Driver" button. Click the "Display Readme" button to show information on packages that are selected.



- 4) Select "Connected via the network" and click the "Next" button.

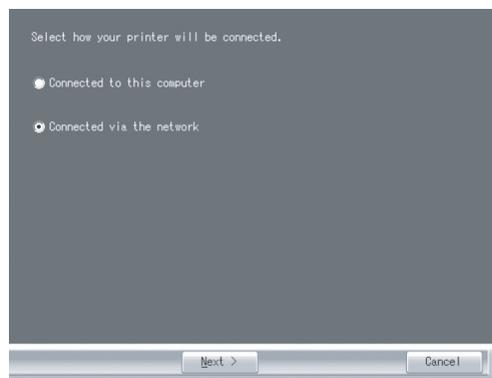

- 5) Click the "Add Network Port" button. In Windows Vista/7, the "Add Network Port" button does not appear.

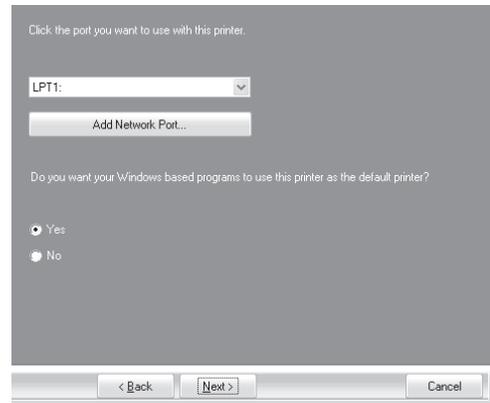

- 6) Select the network printer that is shared and click the "OK" button. Ask your network administrator for the server name and printer name of the machine on the network.



- 7) In the printer port selection window, verify the network printer that is shared and whether the machine is to be used as the default printer, make the selections and click the "Next" button. Follow the on-screen instructions.

Caution:

- If you are using Windows Vista/7 and a security warning window appears, be sure to click "Install this driver software anyway".
- If you are running Windows 2000/XP and a warning message appears regarding the Windows logo test or digital signature, be sure to click "Continue Anyway" or "Yes".

- 8) You will return to the window of step 3). Click the "Close" button.

Note: After the installation, a message prompting you to restart your computer may appear. In this case, click the "Yes" button to restart your computer.

This completes the installation of the software.


C. Setting up Button Manager

Button Manager is a software program that works with the scanner driver to enable scanning from the machine.


To scan using the machine, Button Manager must be linked with the scan menu on the machine. Follow the steps below to link Button Manager to scanner events.

(1) Windows XP/Vista/7

- 1) Click the "Start" button, click "Control Panel", click "Printers and Other Hardware", and then click "Scanners and Cameras".
 - In Windows Vista/7, click the "start" button, select "Control Panel" and click "Printers and Other Hardware", and then click "Scanners and Cameras".
- 2) Click the "SHARP MX-xxxx" icon and select "Properties" from the "File" menu.
 - On Windows Vista/7, select "Properties" from the "Organize" menu.
- 3) In the "Properties" screen, click the "Events" tab.
- 4) Select "SC1:" from the "Select an event" pull-down menu.

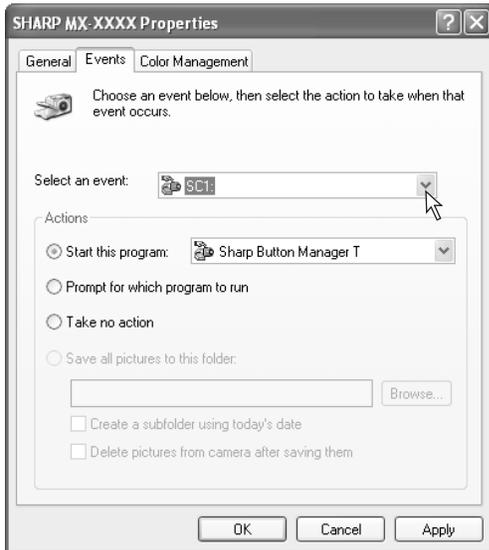

- 5) Select "Start this program" and then select "Sharp Button Manager Y" from the pull-down menu.

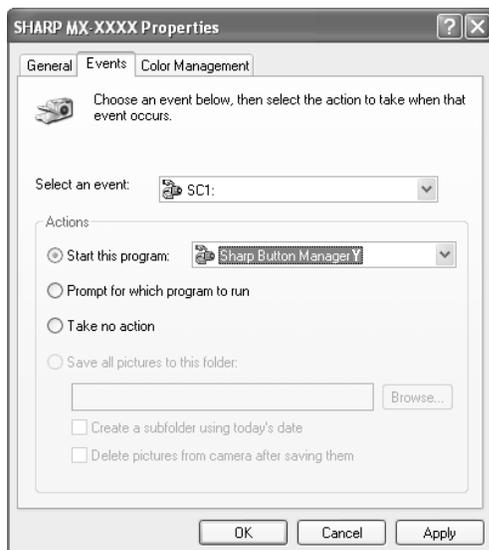

- 6) Click the "Apply" button.


- 7) Repeat Steps 4) through 6) to link Button Manager to "SC2:" through "SC6:". Select "SC2:" from the "Select an event" pull-down menu. Select "Start this program", select "Sharp Button Manager T" from the pull-down menu, and then click the "Apply" button. Do the same for each ScanMenu through "SC6:". When the settings have been completed, click the "OK" button to close the screen.

Button Manager is now linked to the scan menu (1 through 6). The scan settings for each of scan menu 1 through 6 can be changed with the setting window of Button Manager.


For the factory default settings of the scan menu and the procedures for configuring Button Manager settings, see "Button Manager Settings" in the Online Manual.

(2) Windows 2000

- 1) Click the "Start" button, select "Settings", and then click "Control Panel".
- 2) Double-click the "Scanners and Cameras" icon.
- 3) Select "SHARP MX-xxxx" and click the "Properties" button.
- 4) In the "Properties" screen, click the "Events" tab.
- 5) Select "SC1:" from the "Scanner events" pull-down menu.

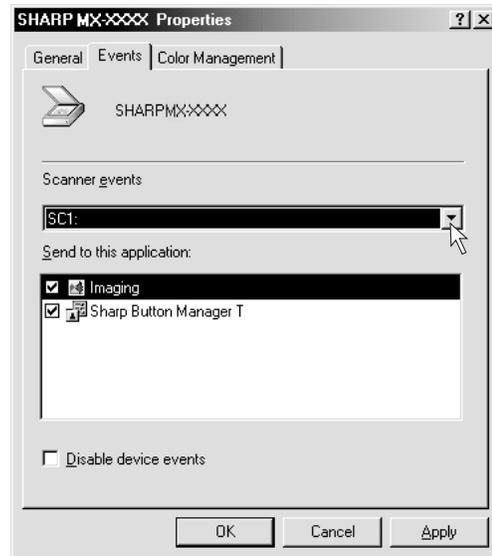

- 6) Select "Sharp Button Manager Y" in "Send to this application".
Note: If other applications are shown, deselect the checkboxes for the other applications and leave only the Button Manager checkbox selected.

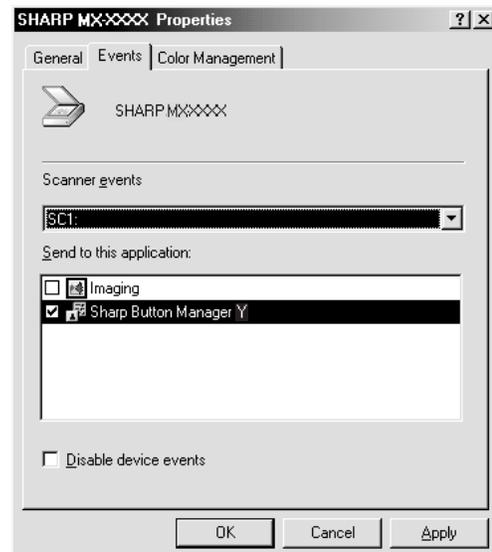

- 7) Click the "Apply" button.

- 8) Repeat Steps 5) through 7) to link Button Manager to "SC2:" through "SC6:".
 Select "SC2:" from the "Scanner events" pull-down menu. Select "Sharp Button Manager Y" in "Send to this application" and click the "Apply" button.
 Do the same for each ScanMenu through "SC6:". When the settings have been completed, click the "OK" button to close the screen.
 Button Manager is now linked to the scan menu (1 through 6). The scan settings for each of scan menu 1 through 6 can be changed with the setting window of Button Manager.
 For the factory default settings of the scan menu and the procedures for configuring Button Manager settings, see "Button Manager settings".

10. Interface

Connector

Type-B connector


Cable

Shielded twisted pair cable

(2 m (6 feet) Max.: high-speed transmission equivalent)

Pin configuration

The pin numbers and signal names are listed in the following table.

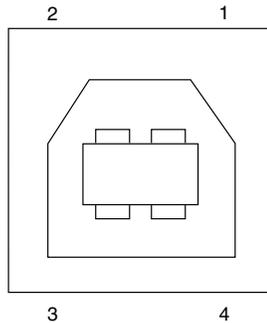

Pin No.	Signal name
1	+5V
2	-DATA
3	+DATA
4	GND

11. Moving

Moving instructions

When moving the unit, follow the procedure below.

Note: When moving this unit, be sure to remove the toner cartridge and developer unit in advance. ▲

- 1) Turn the power switch off and remove the power cord from the outlet.
- 2) Open the side cover and front cover, in that order. Remove the toner cartridge and developer unit and close the front cover and side cover, in that order. ▲

To open and close the side cover and front cover, and to remove the toner cartridge and developer unit. ▲

- 3) Raise the handle of the paper tray and pull the paper tray out until it stops.
- 4) Push the center of the pressure plate down until it locks in place and lock the plate using the pressure plate lock which has been stored in the front of the paper tray.
- 5) Push the paper tray back into the unit.
- 6) Lock the scan head locking switch.

Note: When shipping the unit, the scan head locking switch must be locked to prevent shipping damage.

- 7) Close the multi-bypass tray and the paper output tray extension, and attach the packing materials and tape which were removed during installation of the unit.
- 8) Pack the unit into the carton.

12. Scanner moisture-proof kit

If the machine is installed in a highly humid environment, you can alleviate dew condensation inside the scanner by installing the scanner moisture-proof kit described below.

A. Components

Scanner moisture-proof kit (DKIT-0016QSZZ)

	Name	Part code	Qty
1	Scanner condensation prevention mylar	PSHEZ0493QSZZ	3
2	Optical right hole mylar B	PSHEZ0469QSZZ	2
3	Scanner motor metal plate cushion	PMLT-0106QSZZ	2
4	Scanner upper surface cushion	PMLT-0105QSZZ	1
5	Scanner motor lower mylar	PSHEP0600QSZZ	1
6	Scanner UPG mylar J3	PSHEP0599QSZZ	1
7	Fan housing cushion	PMLT-0108QSZ1	1


B. Precautions at installation

Clean the position where each cushion/mylar is attached with industrial alcohol before the work.


C. Attachment method

Turn the main switch to the "OFF" position and remove the power plug from the outlet.


- 1) Remove original cover.

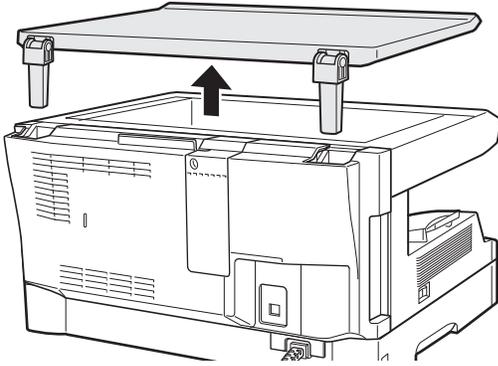

- 2) Remove the rear cabinet.
Remove the three screws and then remove the rear cabinet.

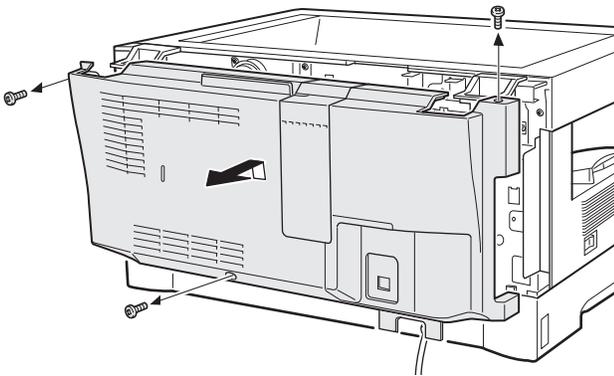


- 3) Remove the rear cover for the document glass.
<1> Remove the two screws and then remove the right glass holder.
<2> Slide the rear cover for the document glass to remove it.
<3> Remove the table glass.

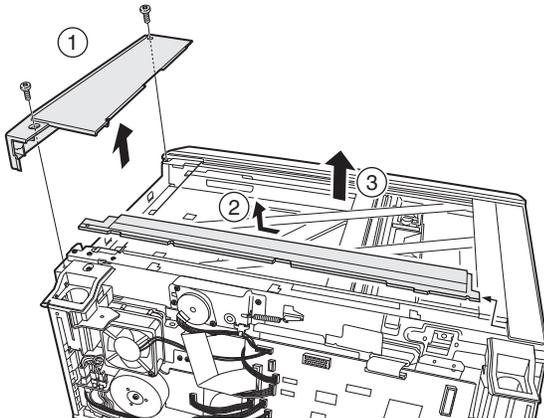


- 4) Attach the Scanner condensation prevention mylar at the 3 positions on the rear side of the main unit as described below.

Note: The hole should be covered with the mylar.


Align the edge of the mylar to the R part (the yellow line in the diagram below) so that the hole of the metal plate is covered as much as possible.

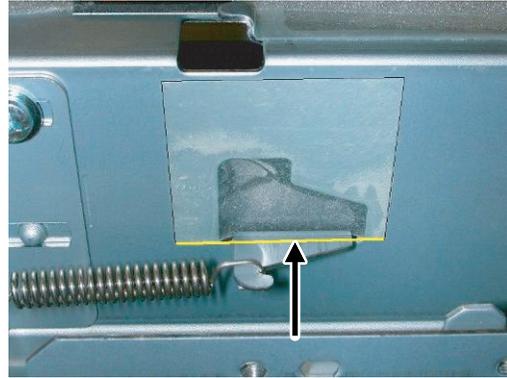

Align the edge of the mylar to the R part (the yellow line in the diagram below) so that the hole of the metal plate is covered as much as possible.

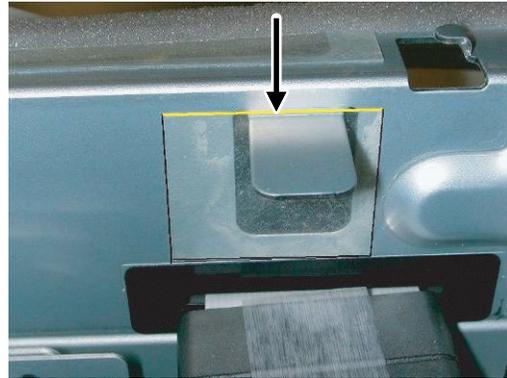

Attach along the edge of the projection (the yellow line in the diagram below).

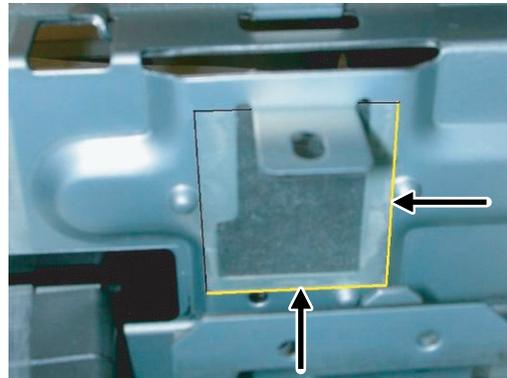


- 5) Attach the Optical right hole mylar B at the 2 positions shown in the diagrams below which are at the top of the rear side of the main unit.

Note: The holes should be covered with the mylar.

Attach along the edge of the cushion (the yellow line in the diagram below).


Align with the inside line of the bent part (the yellow line in the diagram below).

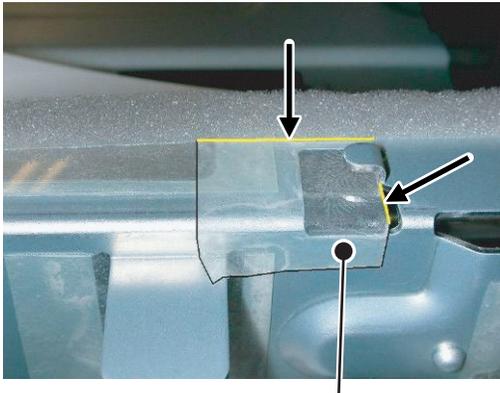

Stick the excessive part on the side.

Align with the raised part (the yellow line in the diagram below).

Match the center of the mylar (in the horizontal direction) to the center of the raised part.

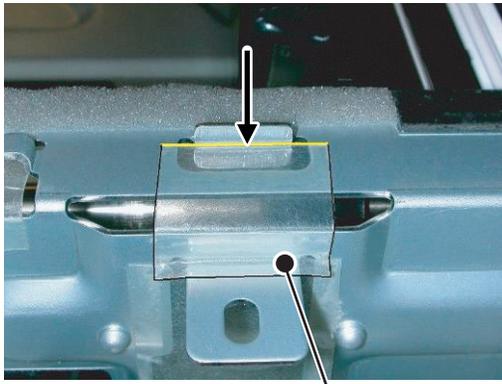


Stick the excessive part on the side.

- 6) Attach the Scanner motor metal plate cushion at 1 position on the attachment plate of the motor on the rear side of the main unit.

Note: The hole on the top of the motor unit should be covered with the mylar.

Align the edge of the metal plate and the edge of the cushion (the yellow line in the diagram below).


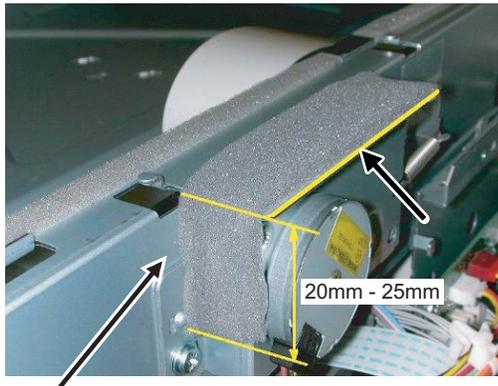


Press and attach the cushion aligning it to the metal plate so that there will be no gap between them.



- 7) Attach the Scanner upper surface cushion on the top and the rear side at the rear side of the main unit.

Align the cushion with the side of the raised part (the yellow line in the diagram below).

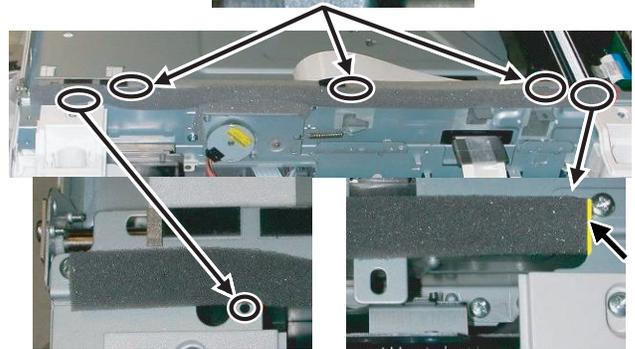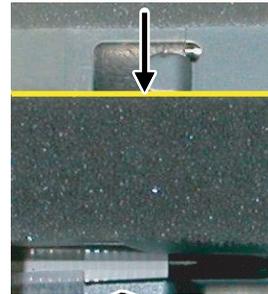

Do not cover this hole.

Align the edge of the cushion with the edge of the metal plate.



Bend the part which is sticking out to the rear side of the scanner and attach to the surface.




Press the cushion at the steps shown in the diagram so that there will be no gap.

Press the cushion to make sure all the holes are covered.

- 8) Bend the edge of the Scanner motor lower mylar and stick together.

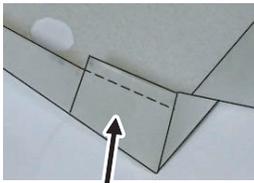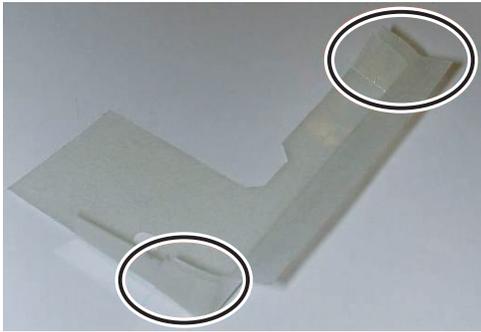



Stick together.

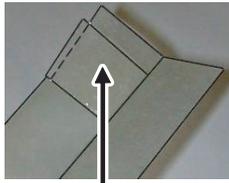

Stick together.

- 9) Attach the Scanner motor lower mylar at 1 position under the motor attachment plate on the rear side of the main unit.


Note: The mylar should cover the hole under the motor unit. Attach matching the hole (the yellow mark in the diagram) and along with the side edge (the yellow arrow in the diagram). Disconnect the motor harness from the connector and take off the snap band from the hole.

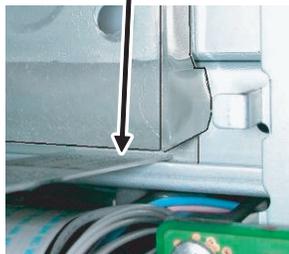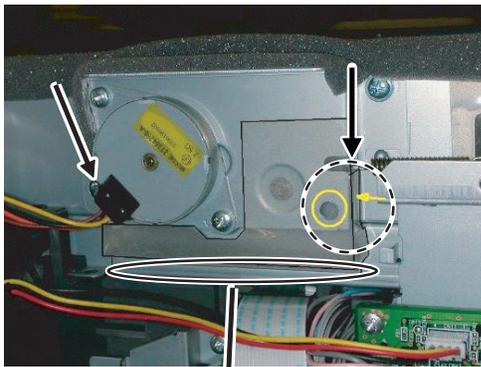

Press the mylar with a sharp-pointed stick or something so that it is stuck correctly.

- 10) Attach the Scanner motor metal plate cushion covering the bottom part of the Scanner motor lower mylar.



Note: The hole under the motor unit should be covered. Attach the cushion to cover the gap between the mylar and the metal plate (the yellow mark).

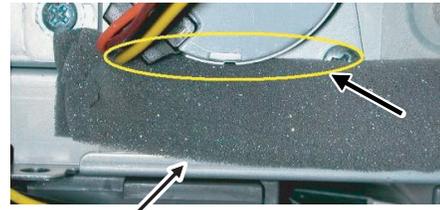


Stick the lower part of the cushion to the mylar, too.



Press the cushion with a sharp-pointed stick or something to fill the gap between the mylar and the metal plate.

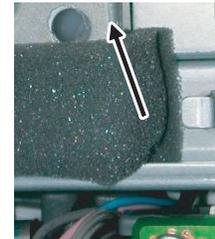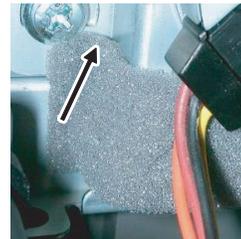


- 11) Attach the motor connector and the snap band to the original position.

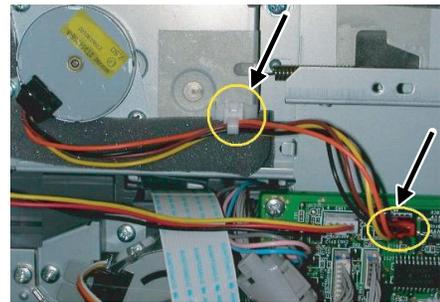

- 12) Attach the Scanner UPG mylar J3 to cover the hole on the right side of inside of the scanner.

Note: The mylar should cover the hole shown by the arrow in the diagram.



Attach along with the bent part of the metal plate and align the edge of the mylar with the line shown in the diagram (the yellow line in the diagram).

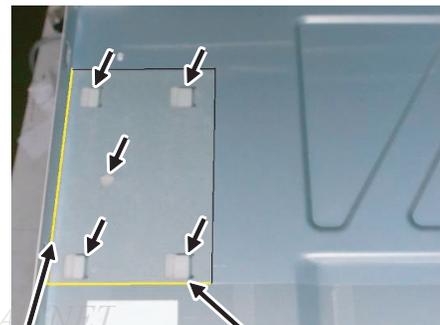

- 13) Attach the Fan housing cushion to the cooling fan at the position shown in the diagram below.

Cover the top and the right side of the fan housing when you see the fan housing from the backside of the machine.

Note: Please make sure the double-sided tape is not exposed where the cushion is sticking out from the edge of the fan housing.

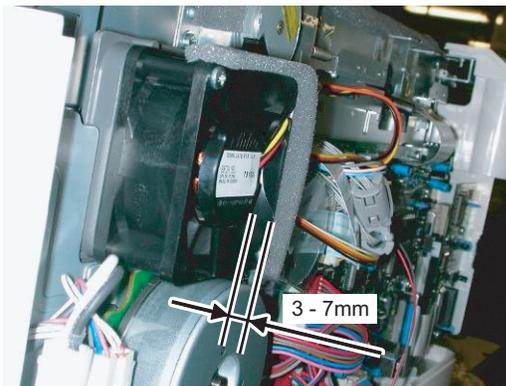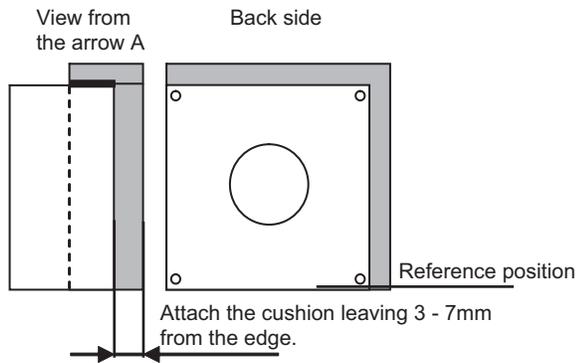

Attach the cushion leaving 3 - 7mm from the edge so that the gap between the Fan housing cushion and the filter of the rear cabinet is filled for sure.

- 14) Attach the parts removed in the items 1), 2), and 3).

2. Outline of print process

This printer is a non-impact printer that uses a semiconductor laser and electrostatic print process. This printer uses an OPC (Organic Photo Conductor) for its photoconductive material.

First, voltage from the main corona unit charges the drum surface and a latent image is formed on the drum surface using a laser beam. This latent image forms a visible image on the drum surface when toner is applied. The toner image is then transferred onto the print paper by the transfer corona and fused on the print paper in the fusing section with a combination of heat and pressure.

Step-1: Charge

Step-2: Exposure

* Latent image is formed on the drum.

Step-3: Developing

Latent image formed on the drum is then changed into visible image with toner.

Step-4: Transfer

The visible image (toner image) on the drum is transferred onto the print paper.

Step-5: Cleaning

Residual toner on the drum surface is removed and collected by the cleaning blade.

Step-6: Optical discharge


Residual charge on the drum surface is removed, by semiconductor laser beam.

3. Actual print process

Step-1: DC charge


A uniform negative charge is applied over the OPC drum surface by the main charging unit. Stable potential is maintained by means of the Scorotron charger.

Positive charges are generated in the aluminum layer.

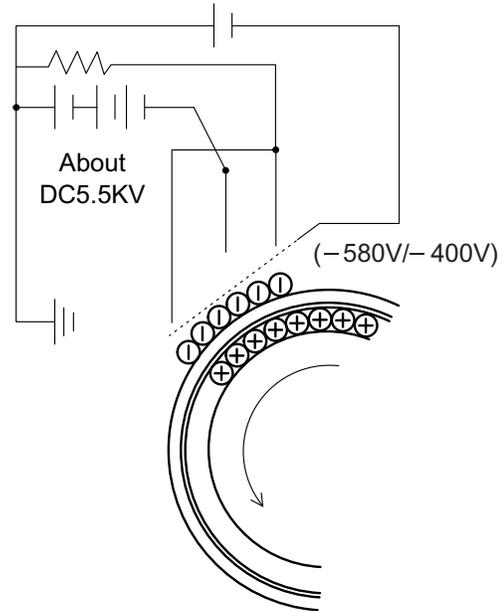

Step-2: Exposure (laser beam, lens)

A Laser beam is generated from the semiconductor laser and controlled by the print pattern signal. The laser writes onto the OPC drum surface through the polygon mirrors and lens. The resistance of the OPC layer decreases for an area exposed by the laser beam (corresponding to the print pattern signal). The beam neutralizes the negative charge. An electrostatic latent image is formed on the drum surface.


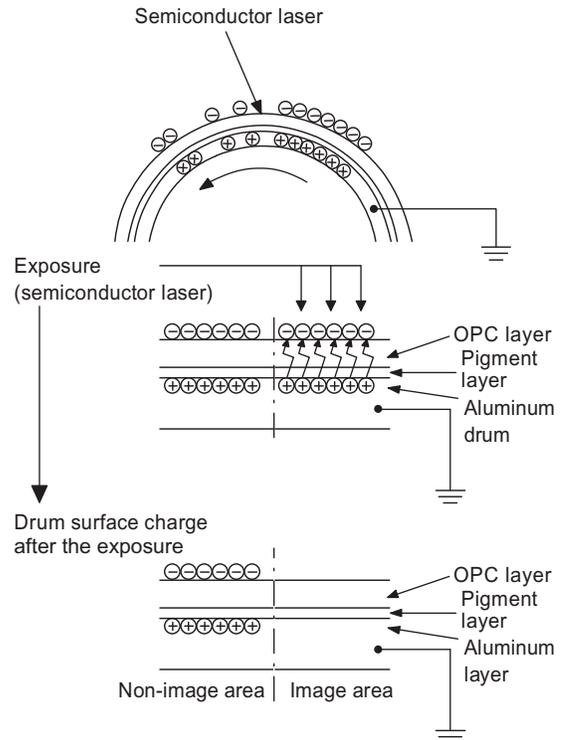


Step-3: Developing (DC bias)

A bias potential is applied to the MG roller in the two component magnetic brush developing method, and the toner is charged negative through friction with the carrier.

Non-image area of the drum surface charged with negative potential repel the toner, whereas the laser exposed portions where no negative charges exist, attract the toner. As a result, a visible image appears on the drum surface.


- ⊕ :Carrier (Magnetized particle)
- :Toner (Charge negative by friction)
- (N) (S) Permanent magnet (provided in three locations)

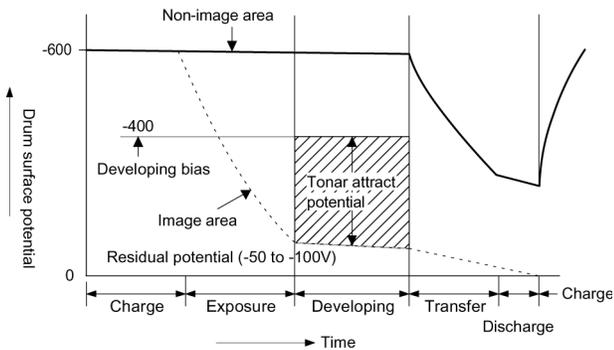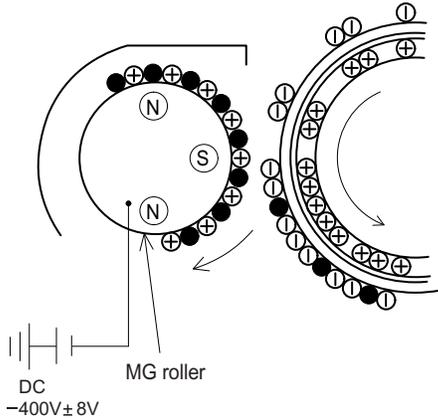

Toner is attracted over the shadowed area because of the developing bias.

Step-4: Transfer

The visible image on the drum surface is transferred onto the print paper by applying a positive charge from the transfer corona to the backside of the print paper.

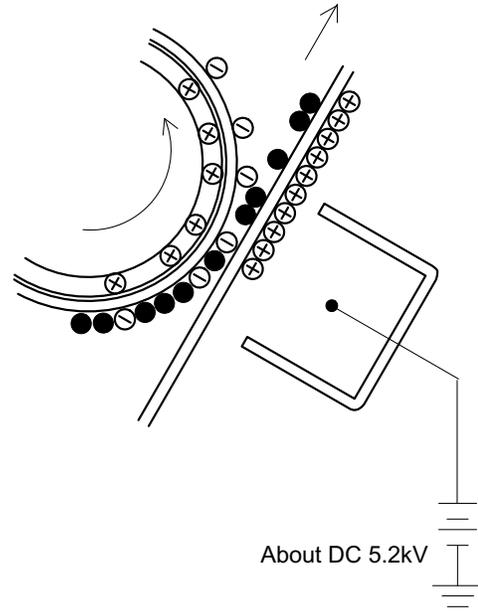


Step-5: Separation

Since the print paper is charged positively by the transfer corona, it is discharged by the separation corona. The separation corona is connected to ground.

Step-6: Cleaning


Toner remaining on the drum is removed and collected by the cleaning blade. It is transported to the waste toner collecting section in the cleaning unit by the waste toner transport roller.

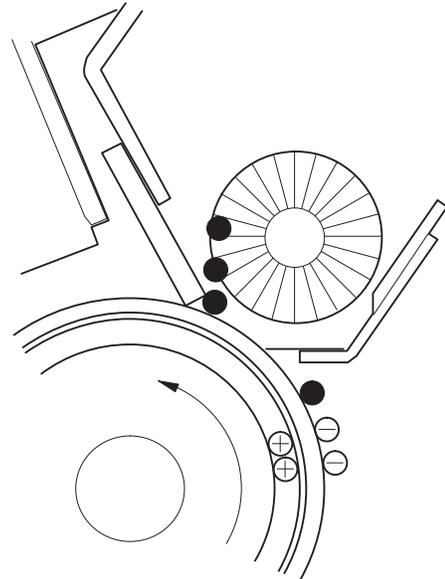

Step-7: Optical discharge (Semiconductor laser)

Before the drum rotation is stopped, the semiconductor laser is radiated onto the drum to reduce the electrical resistance in the OPC layer and eliminate residual charge, providing a uniform state to the drum surface for the next page to be printed.

When the electrical resistance is reduced, positive charges on the aluminum layer are moved and neutralized with negative charges on the OPC layer.

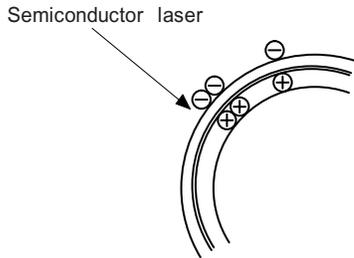

Charge by the Scorotron charger

Function

The Scorotron charger functions to maintain uniform surface potential on the drum at all times, It controls the surface potential regardless of the charge characteristics of the photoconductor.

Basic function

A screen grid is placed between the saw tooth and the photoconductor. A stable voltage is added to the screen grid to maintain the corona current on the photoconductor.

As the photoconductor is charged by the saw tooth from the main corona unit, the surface potential increases. This increases the current flowing through the screen grid. When the photoconductor potential nears the grid potential, the current turns to flow to the grid so that the photoconductor potential can be maintained at a stable level.

Process controlling


Function

The print pattern signal is converted into an invisible image by the semiconductor laser using negative to positive (reversible) developing method. Therefore, if the developing bias is added before the drum is charged, toner is attracted onto the drum. If the developing bias is not added when the drum is charged, the carrier is attracted to the drum because of the strong electrostatic force of the drum.

To avoid this, the process is controlled by adjusting the drum potential and the grid potential of the Scorotron charger.

Basic function

Voltage added to the screen grid can be selected, high and low. To make it easily understood, the figure below shows voltage transition at the developer unit.

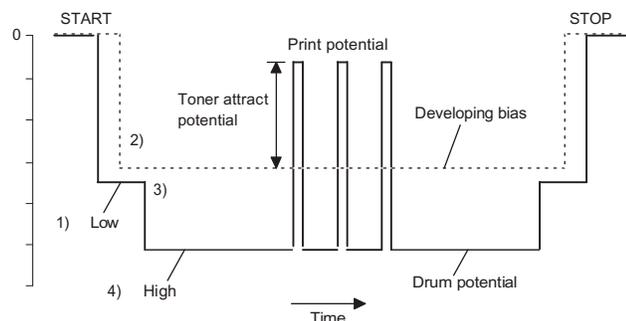

Start

- 1) Because the grid potential is at a low level, the drum potential is at about -400V. (Carrier may not be attracted though the carrier is pulled towards the drum by the electrostatic force of -400V.
- 2) Developing bias (-400V) is applied when the photoconductor potential is switched from LOW to HIGH.
- 3) Once developing bias (-400V) is applied and the photoconductor potential rises to HIGH, toner will not be attracted to the drum.

Stop

The reverse sequence takes place.

Retaining developing bias at an abnormal occurrence

Function

The developing bias will be lost if the power supply was removed during print process. In this event, the drum potential slightly abates and the carrier makes deposits on the drum because of strong static power. To prevent this, the machine incorporates a function to retain the developing bias for a certain period and decrease the voltage gradually against possible power loss.

Basic function


Normally, the developing bias voltage is retained for a certain time before the drum comes to a complete stop if the machine should stop before completing the normal print cycle. The developing bias can be added before resuming the operation after an abnormal interruption. Therefore, carrier will not make a deposit on the drum surface.

[7] OPERATIONAL DESCRIPTIONS

1. Outline of operation

The outline of operation is described referring to the basic configuration.

(Basic configuration)

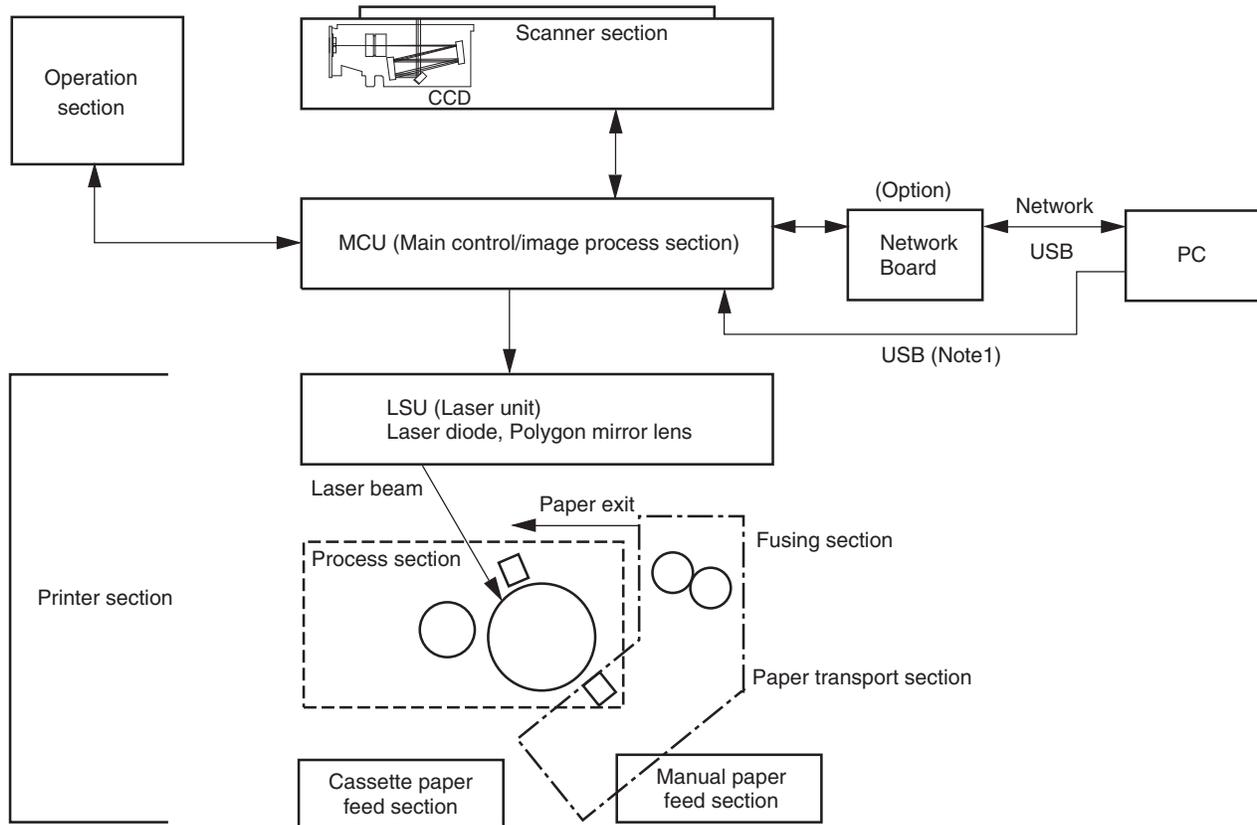

(Outline of copy operation)

Setting conditions

- 1) Set copy conditions such as the copy quantity and the copy density with the operation section, and press the Start key. The information on copy conditions is sent to the MCU.

Image scanning

- 2) When the Start key is pressed, the scanner section starts scanning of images. The light from the copy lamp is reflected by the document and passed through the lens to the CCD.

Photo signal/Electric signal conversion

- 3) The image is converted into electrical signals by the CCD circuit and passed to the MCU.

Image process

- 4) The document image signal sent from the CCD circuit is processed under the revised conditions and sent to the LSU (laser unit) as print data.

Electric signal/Photo signal (laser beam) conversion

- 5) The LSU emits laser beams according to the print data. (Electrical signals are converted into photo signals.)
- 6) The laser beams are radiated through the polygon mirror and various lenses to the OPC drum.

Printing

- 7) Electrostatic latent images are formed on the OPC drum according to the laser beams, and the latent images are developed to be visible images (toner images).
- 8) Meanwhile the paper is fed to the image transfer section in synchronization with the image lead edge.
- 9) After the transfer of toner images onto the paper, the toner images are fused to the paper by the fusing section. The copied paper is discharged onto the exit tray.

(Outline of printer operation)

The print data sent from the PC are passed through the network or USB connector and the MCU to the LSU. The procedures after that are the same as above 5) and later.

(Outline of scanner operation)

The scan data are passed through the MCU to the PC according to the conditions requested by the operations with the operation panel.

Note1:

The USB port for the MCU can not be used when the option, Network Board, is installed on the machine.

2. Scanner section

A. Scanner unit

The scanner unit in the digital copier scans images.

It is composed of the optical unit and the drive unit. The optical unit performs scanning in the main scan direction with the light receiving elements (color CCD). The drive unit performs scanning in the sub scanning direction by moving the optical unit.

B. Optical system

Two white lamps are used as the light source.


Light radiated from the light source is applied to the document on the document table. The reflected light from the document is reflected 4 times by No. 1 - No. 3 mirrors and passed through the reduction lens to form images on the light-receiving surface of 3-line CCD.

The light-receiving surface of the color CCD is provided with 3 line scanning sections for RGB. Separate images scanned in each color section are overlapped to complete color scanning. (When PC scanning)


The resolution is 600dpi.

When copying, only the green component is used to print with the printer.


The color component for printing can be switched to red or blue by the service simulation.

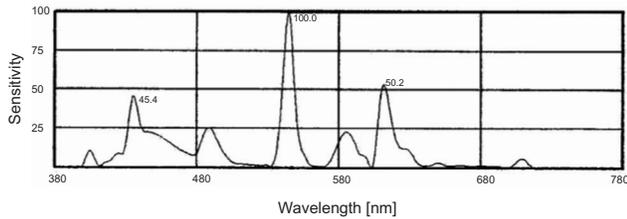

(Spectrum characteristics of the lamp)

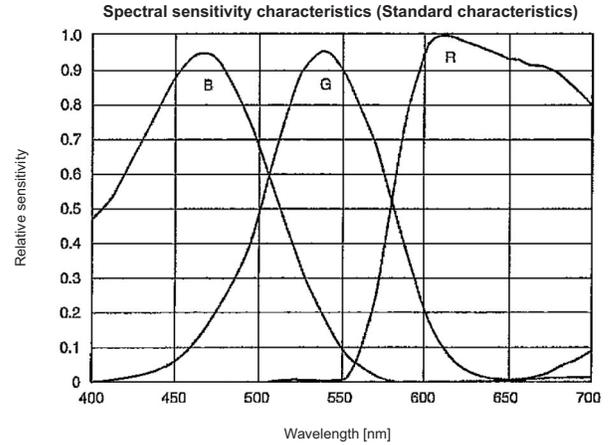

(Spectrum characteristics of the color CCD)

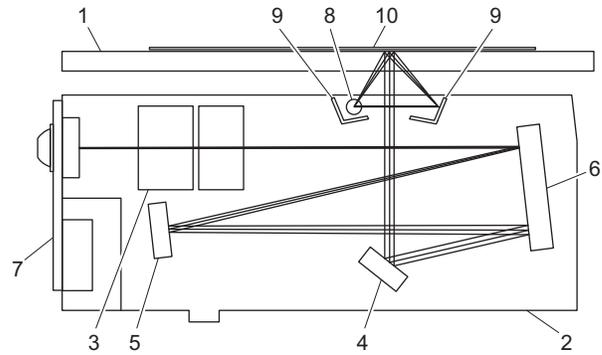


(Optical unit)

1	Table glass	2	Optical unit	3	Lens
4	Mirror 1	5	Mirror 2	6	Mirror 3
7	CCD PWB	8	Lamp	9	Reflector
10	Original				

C. Drive system

The drive system is composed of the scanner motor, the pulley gear, the idle pulley, the idle gear, the belt 473, the belt 190, and the shaft.

The motor rotation is converted into reciprocated movements of the belt 473 through the idle gear, the pulley gear, the belt 190, and the idle pulley to drive the optical unit.

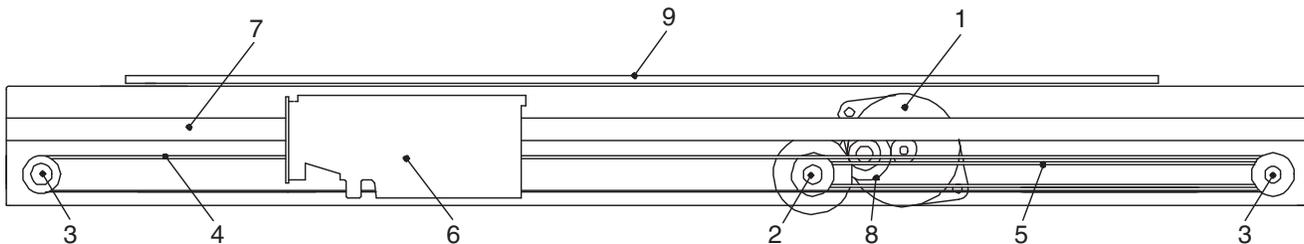


1	Scanner motor	2	Pulley gear	3	Idle pulley
4	Belt 473	5	Belt 190	6	Optical unit
7	Shaft	8	Idle gear	9	Table glass

3. Laser unit

The image data sent from the MCU (image process circuit) is sent to the LSU (laser unit), where it is converted into laser beams.


A. Basic structure

The LSU unit is the writing section of the digital optical system. The semiconductor laser is used as the light source, and images are formed on the OPC drum by the polygon mirror and fθ lens, etc. The laser beams are passed through the collimator lens, the cylindrical lens, the polygon mirror, the fθ lens, and the mirror to form images on the OPC drum in the main scanning direction. The laser emitting PWB is provided with the APC (auto power control) in order to eliminate fluctuations in the laser power. The BD PWB works for measurement of the laser writing start point.

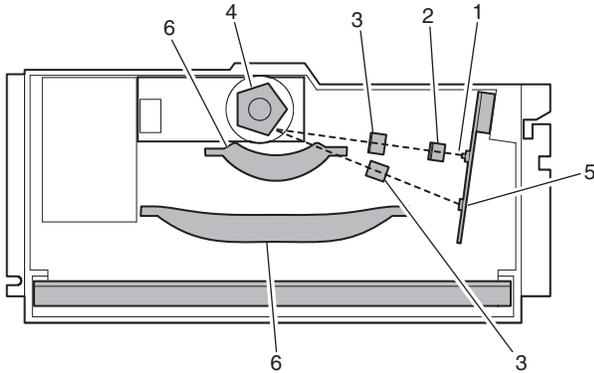


No	Component	Function
1	Semiconductor laser	Generates laser beams.
2	Collimator lens	Converges laser beams in parallel.
3	Cylinder lens	Takes the focus.
4	Polygon mirror, polygon motor	Reflects laser beams at a constant rpm.
5	BD (Lens, PWB)	Detects start timing of laser scanning.
6	fθ lens	Converges laser beams at a spot on the drum. Makes the laser scanning speeds at both ends of the drum same as each other. (Refer to the figure below.)

Makes the laser scanning speeds at both ends of the drum same as each other.

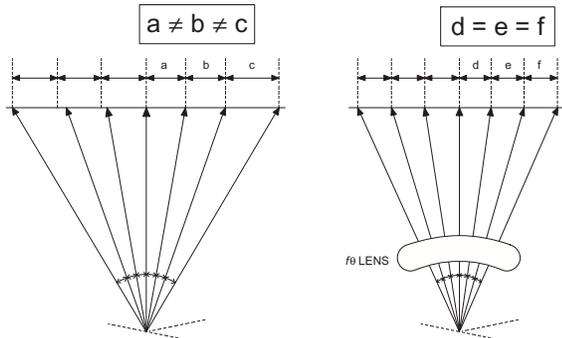


B. Laser beam path

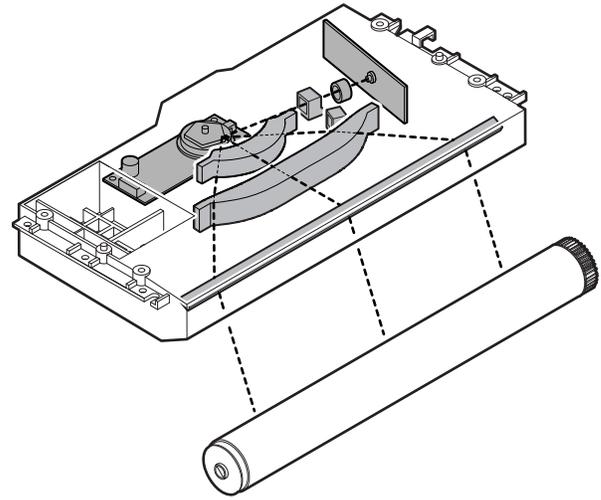

C. Composition


- Effective scanning width: 216mm (max.)
- Resolution: 600dpi
- Beam diameter: 75um in the main scanning direction, 85um in the sub scanning direction
- Image surface power: 0.16 ± 0.01mW (Laser wavelength 770 - 795nm)
- Polygon motor section: Brushless motor 35433rpm
- No. of mirror surfaces: 5 surfaces

4. Fuser section

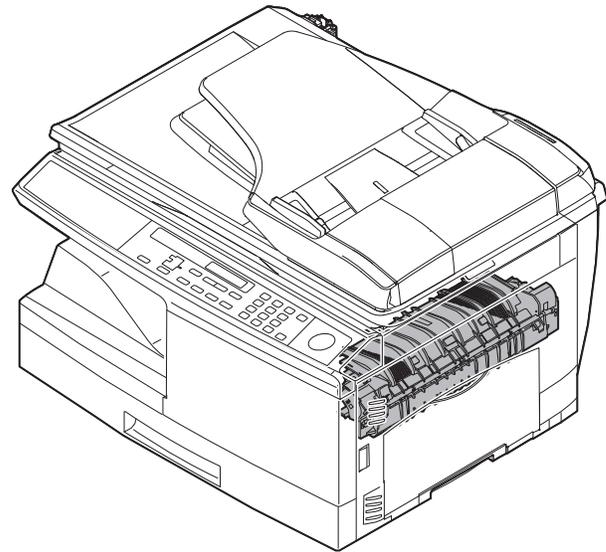


A. General description

General block diagram (cross section)

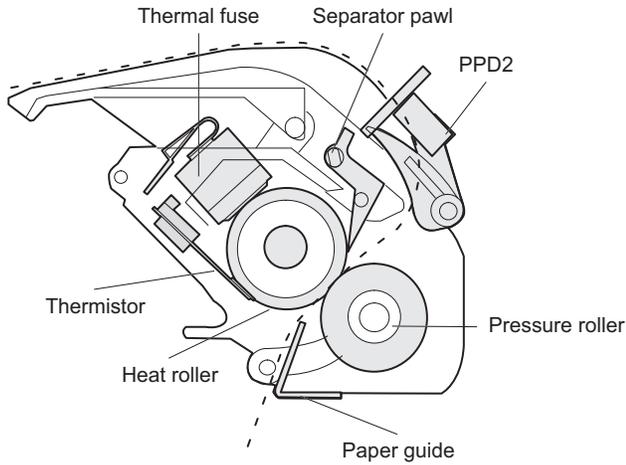

Top view

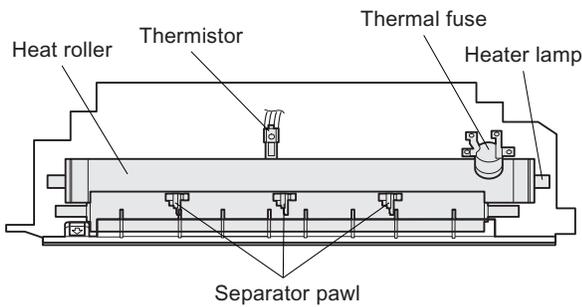

(1) Heat roller

A Teflon roller is used for the heat roller and a silicone rubber roller is used for the lower heat roller for better toner fusing performance and paper separation.


(2) Separator pawl

Three separator pawls are used on the upper heat roller. The separator pawls are Teflon coated to reduce friction with the roller and prevent a smear on the paper caused by the separator pawl.

(3) Thermal control

1) The heater lamp, thermistor, main PWB, DC power supply PWB, and triac within the power supply unit are used to control the temperature in the fuser unit.

To prevent against abnormally high temperature in the fuser unit, a thermal breaker and thermal fuse are used for safety purposes.

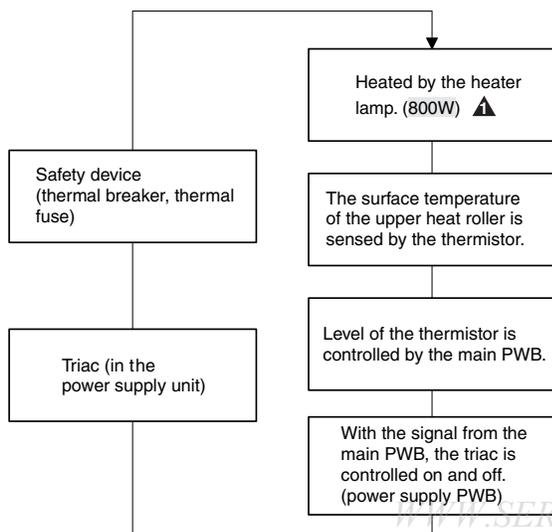

- 2) The surface temperature of the upper heat roller is set to 160 - 200°C. The surface temperature during the power save mode is set to 100°C.
- 3) The self-check function comes active when one of the following malfunctions occurs, and an "H" is displayed on the multicopy window.
 - a. When the heat roller surface temperature rises above 240°C.
 - b. When the heat roller surface temperature drops below 100°C during the copy cycle.
 - c. Open thermistor
 - d. Open thermal fuse
 - e. When the heat roller temperature does not reach 190°C within 27 second after supplying the power.


(4) Fusing resistor

This model is provided with a fusing resistor in the fusing section to improve transfer efficiency.

Since the upper heat roller is conductive, when using copy paper that contains moisture and the distance between the transfer unit and the fusing unit is short, the transfer current may find a path to ground via the copy paper, the upper heat roller and the discharging brush.

5. Paper feed section and paper transport section

A. Paper transport path and general operations

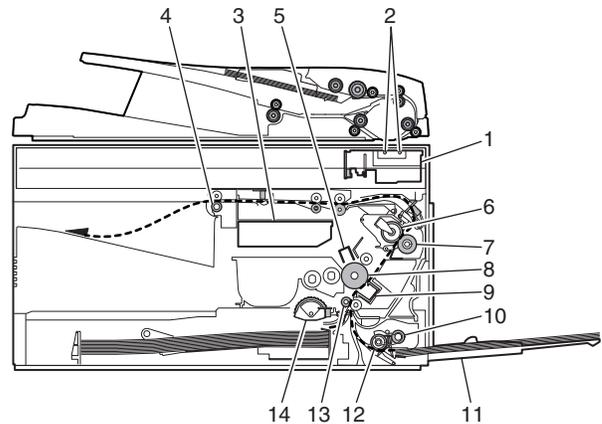

1	Scanner unit	8	Drum
2	Copy lamp	9	Transfer unit
3	LSU (Laser unit)	10	Pickup roller
4	Paper exit roller	11	Manual paper feed tray
5	Main charger	12	Manual paper feed roller
6	Heat roller	13	PS roller unit
7	Pressure roller	14	Paper feed roller


Paper feed is made in two ways; the tray paper feed and the manual paper feed. The tray is of universal-type, and has the capacity of 250 sheets.

The front loading system allows you to install or remove the tray from the front cabinet.


The general descriptions on the tray paper feed and the manual paper feed operation are given below.

(1) Cassette paper feed operation



- 1) The figure below shows the positions of the pick-up roller, the paper feed clutch sleeve, and the paper feed latch in the initial state without pressing the Start key after lighting the ready lamp.
The paper feed latch is in contact with the projection of the clutch sleeve.

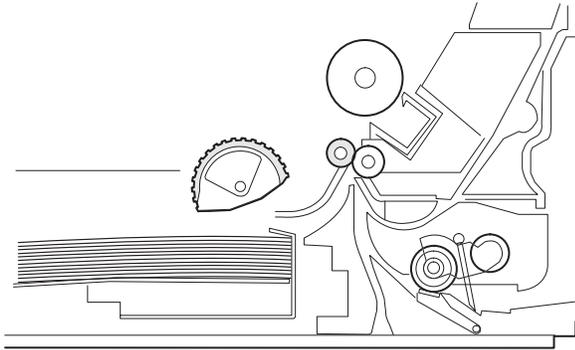

- 2) When the Start key is pressed, the main drive motor starts rotating to drive each drive gear.
The pick-up drive gear also is driven at that time. Since, however, the paper feed latch is in contact with the projection of the clutch sleeve, rotation of the drive gear is not transmitted to the pick-up roller, which does not rotate therefore.


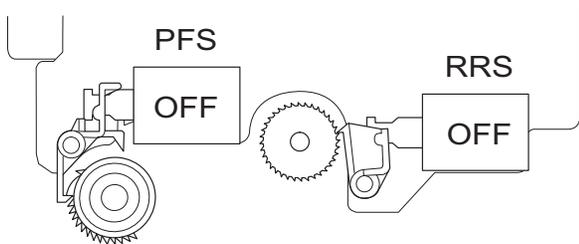


- 3) After about 0.1 sec from when the main motor start rotating, the tray paper feed solenoid (PFS) turns on for a moment.
This disengages the paper feed latch from the projection of the clutch sleeve, transmitting rotation of the pick-up drive gear to the paper feed roller shaft, rotating the pick-up roller to feed the paper.

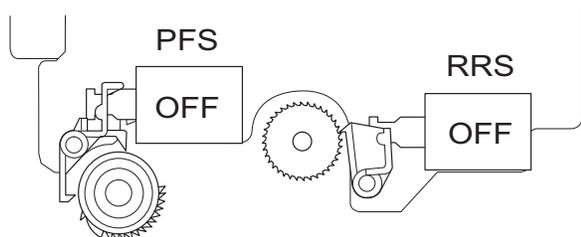
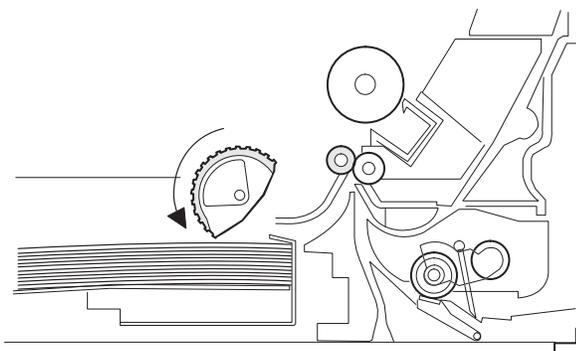


- 4) After more than half rotation of the pick-up roller, the paper feed latch is brought in contact with a notch on the clutch sleeve, stopping rotation of the pick-up roller.

- 5) At this time, the paper is fed passed the paper entry detection switch (PPD1), and detected by it. After about 0.15 sec from detection of paper by PPD1, the tray paper feed solenoid (PFS) turns on so that the clutch sleeve projection comes into contact with the paper feed latch to stop the pick-up roller. Then the pick-up roller rotates for about 0.15 sec so that the lead edge of the paper is evenly pressed on the resist roller, preventing against skew feeding.

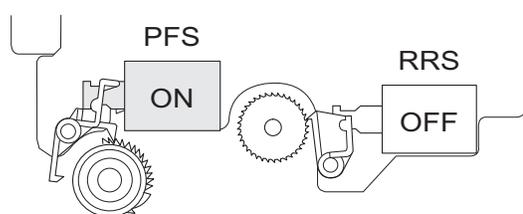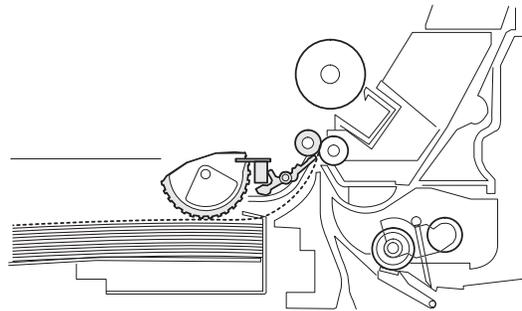



- 6) To release the resist roller, the tray paper feed solenoid and the resist solenoid are turned on by the paper start signal to disengage the resist start latch from the clutch sleeve, transmitting rotation of the resist drive gear to the resist roller shaft. Thus the paper is transported by the resist roller.
- 7) After the resist roller starts rotating, the paper is passed through the pre-transfer guide to the transfer section. Images are transferred on the paper, which is separated from the OPC drum by the drum curve and the separation section.

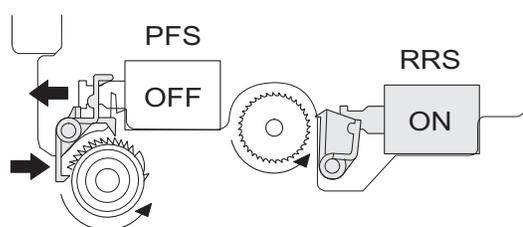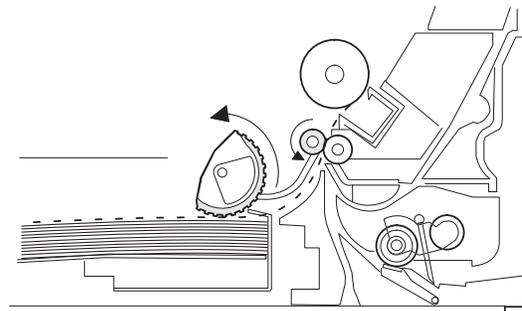



- 8) The paper separated from the drum is passed through the fusing paper guide, the heat roller (fusing section), POD (paper out detector) to the copy tray.

(2) Manual multi paper feed operation



1) Before paper feed operation, the manual paper feed solenoid (MPFS) is turned OFF as shown in the figure below.

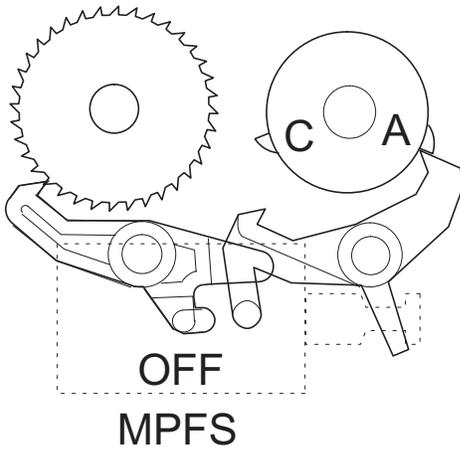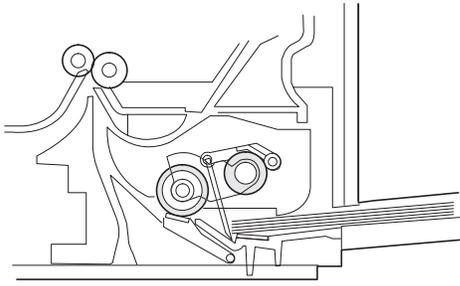

3) When pawl C of the manual paper feed clutch sleeve is engaged with the manual feed latch, the manual feed stopper falls and the manual take-up roller rises. At that time, the manual paper feed roller is rotating.

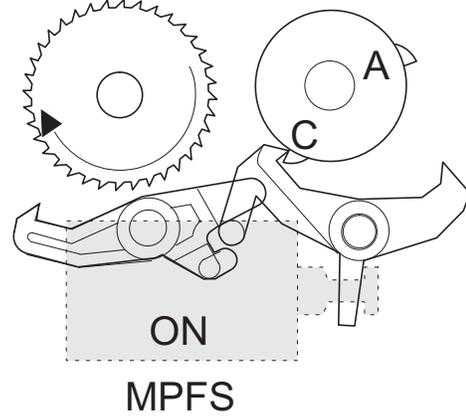
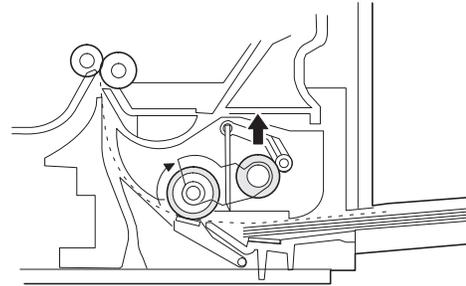


2) When the Start key is pressed, the manual paper feed solenoid (MPFS) turns on to disengage the manual paper feed latch. A from the manual paper feed clutch sleeve A, rotating the manual paper feed roller and the manual take-up roller. At the same time, the manual paper feed stopper opens and the manual take-up roller is pressed to the surface of the paper to start paper feeding.

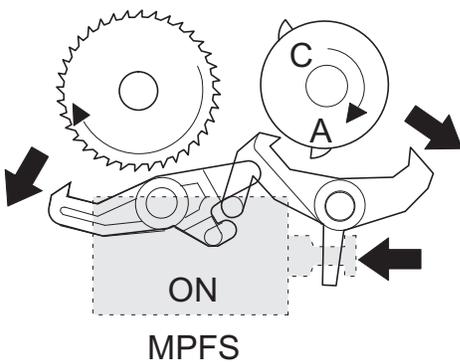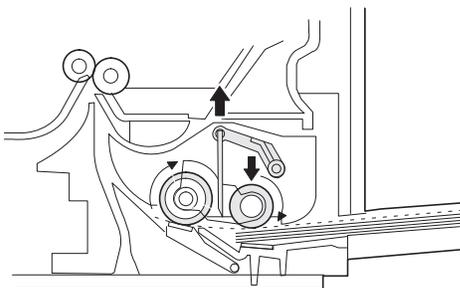

4) The lead edge of the transported paper is pressed on the resist roller by the transport roller. Then the paper is stopped temporarily to allow synchronization with the lead edge of the image on the OPC drum. From this point, the operation is the same as the paper feed operation from the tray. (Refer to 7-5 - 8.)

5) The solenoid turns off to close the gate and return to the initial state.

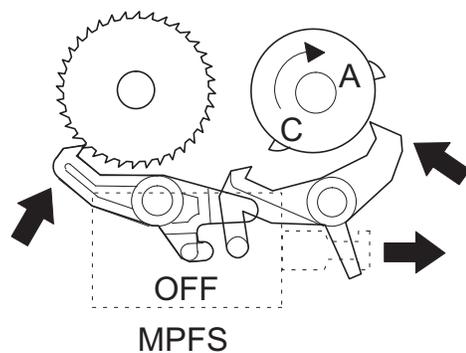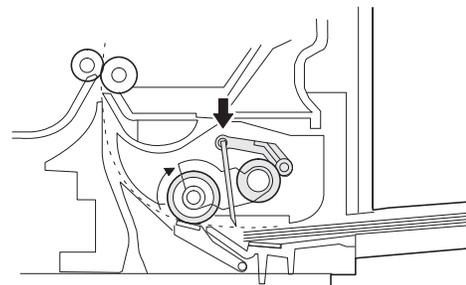

(3) Conditions of occurrence of paper misfeed

a. When the power is turned on:
PPD or POD is ON when the power is turned on.

b. Copy operation

a	PPD1 jam	PPD1 does not turn off within 4 sec after turning on the resist roller.
b	PPD2 jam	PPD2 is off immediately after turning on the resist roller.
		PPD2 does not turn off within 1.2 sec after turning off the resist roller.
c	POD jam	POD does not turn on within 2.9 sec after turning on the resist roller.
		POD does not turn off within 1.5 sec - 2.7 sec after turning off PPD2.


6. RSPF section

A. Outline

▲ The RSPF is installed as a standard provision for MX-B201D, Optional provision for MX-B201.


It automatically copies up to 50 sheets of documents of a same size. (Only one set of copies)

B. Document transport path and basic composition

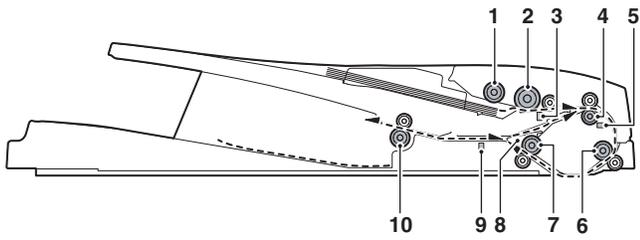


1	Pickup roller	2	Separation roller
3	Paper empty sensor	4	Upper transport roller
5	Paper sensor	6	PS roller
7	Lower transport roller	8	Reverse self-weight gate
9	Paper exit sensor	10	Paper exit roller

C. Operational descriptions

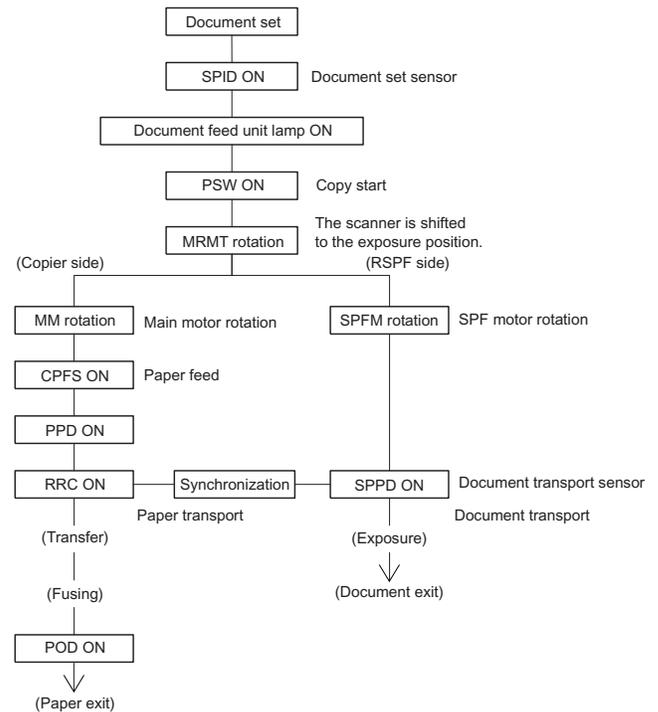

In the zooming mode, the magnification ratio in the sub scanning direction (paper transport direction) is adjusted by changing the document transport speed.

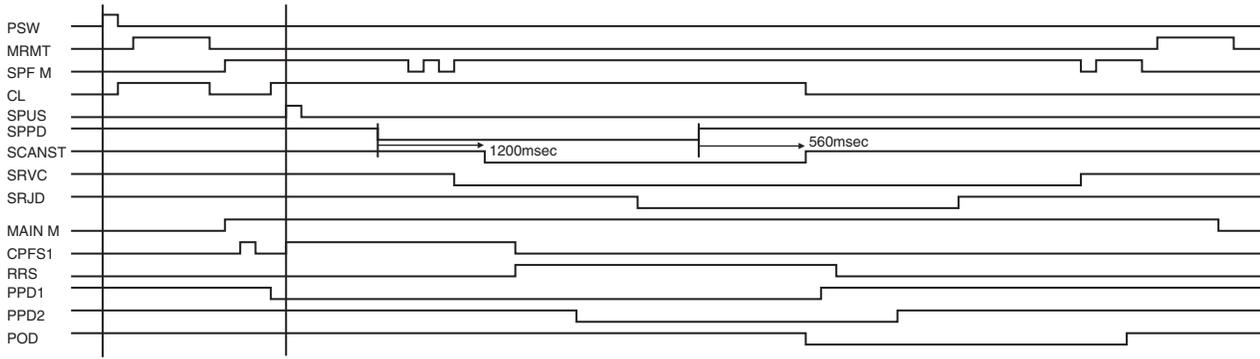


RSPF JAM generation condition

- 1) The SPPD is ON when turning ON the power.
- 2) The SPPD does not turn ON for 4.0sec from starting document feed. (in 100% copy)
- 3) The SPPD does not turn OFF for 4.7sec after detecting turning ON of the SPPD. (100% copy)
- 4) The RSPF cover or the OC cover is opened during document transportation.
- 5) The SRJD is ON when the power is turned ON.
- 6) The SRJD is not turned ON for 2.4sec from release of PS in paper feed from the document set position. (100% copy)
- 7) The SRJD is not turned OFF for 1.6sec from completion of document scan in the case of complete document exit. (100% copy)

D. RSPF open/close detection (book document detection)

RSPF open/close detection (book document) detection is performed by detecting the interval between the reference lines on the white Mylar attached to the paper exit guide (document scanning section) by the scanner (CCD) and detecting the varied quantity.

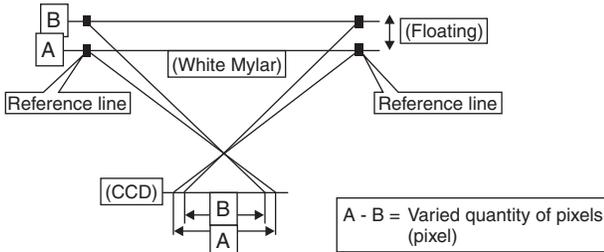

Note: When replacing the carriage unit, be sure to execute SIM41-06.
 If SIM41-06 is not executed, the carriage unit may not read the reference line on the white Mylar, preventing the document from being fed.

7. D-D (Duplex to Duplex) mode paper/document transport (Duplex model)

A. Initial state

Set duplex documents on the document tray.
 Set paper on the cassette. (In the duplex mode, the manual feed tray cannot be selected.)

B. Front copy



Document transport:

- The document feed roller feeds the document from the paper feed roller to the PS roller.
- The document is exposed in the exposure section, and transported to the document exit section by the lower transport roller and the paper exit roller.
 - The document is transported to the paper exit tray. (However, it is not discharged completely.)
 - The document is stopped once, and then switchback operation is performed. (To the back copy)

Paper transport:

The paper is passed through the paper feed roller and the PS roller, and the images on the front surface are transferred.

- The paper is passed through the fusing section and the lower side of the gate section to the paper exit tray side. (However, it is not discharged completely.)
- The paper is stopped once, and switchback operation is performed. (To the back copy)

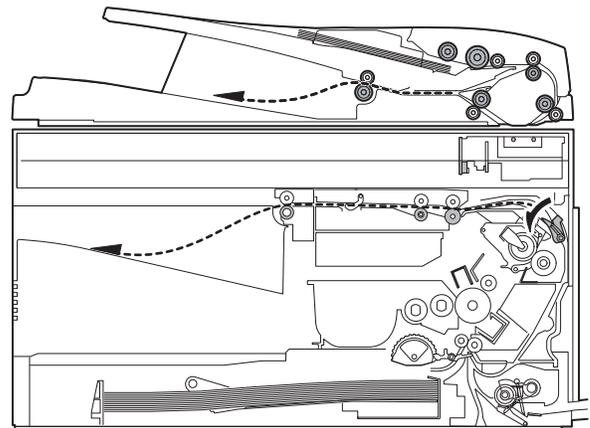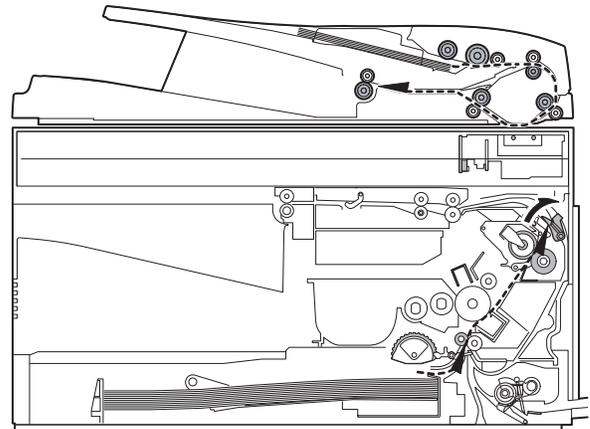

C. Back copy

Document transport:



By switchback operation, the document is sent through the upper transport roller and the PS roller to the exposure section, where the back surface of the document is exposed.

- The document is sent to the document exit section by the lower transport roller and the paper exit roller.
- The document is sent to the intermediate tray. (However, it is not discharged completely.)
- The document is stopped once, and switchback operation is performed.
- The document is sent through the upper transport roller and the PS roller and the exposure section (without being exposed) to the document exit section.
- The document is discharged to the document exit tray.

Paper transport:

Switchback operation is performed.

- The paper is sent through the upper side of the gate section and the duplex transport section and the PS roller, and the images on the back surface are transferred.
- The paper is sent through the fusing section and discharged to the paper exit tray.

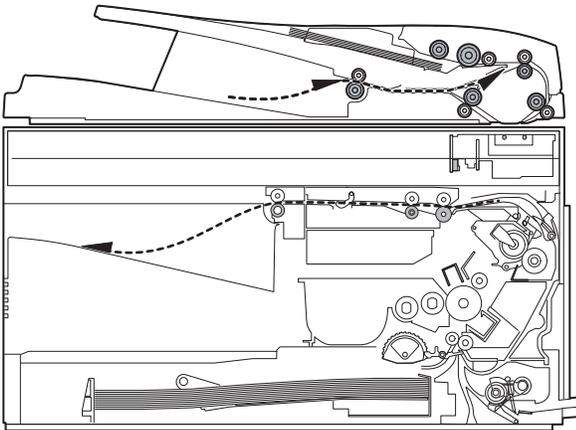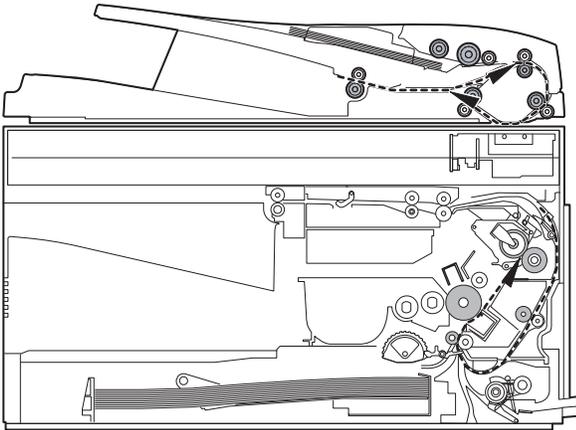


Rotation copy mode:

The front and the back are in upside down each other.

Copy mode without rotation:

The front and the back are not in upside down.

8. Shifter

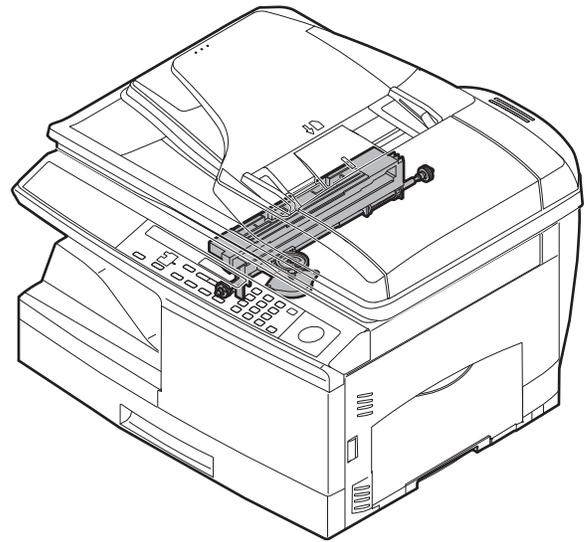

Shift width: 2.5cm

The offset function by the shifter is turned ON/OFF by the user program.

According to the setting, offset operation is performed for every job. (Default: ON)

[8] DISASSEMBLY AND ASSEMBLY

Before disassembly, be sure to disconnect the power cord for safety.

1. Do not disconnect or connect any connector or harness while the machine is plugged in. Especially be careful not to disconnect or connect the harness between the MCU PWB and the LSU (MCU PWB: CN5) when the machine is plugged in. (If it is disconnected or connected while the machine is powered, the IC inside the LSU will be destroyed.)
2. To disconnect the harness after turning on the power, be sure to turn off the power and wait for at least 10 sec before disconnection. (Note that a voltage still remains immediately after turning off the power.)

The disassembly and assembly procedures are described for the following sections:

1. High voltage section
2. Operation panel section
3. Optical section
4. Fusing section
5. Tray paper feed/transport section
6. Manual paper feed section
7. Rear frame section
8. Power section
9. Duplex motor section (MX-B201D only)
10. Reverse roller section (MX-B201D only)
11. RSPF section




1. High voltage section

A. List


No.	Part name	Ref.
1	Transfer charger unit	
2	Charger wire	

B. Disassembly procedure

- 1) Press the side cover open/close button and open the side cover.

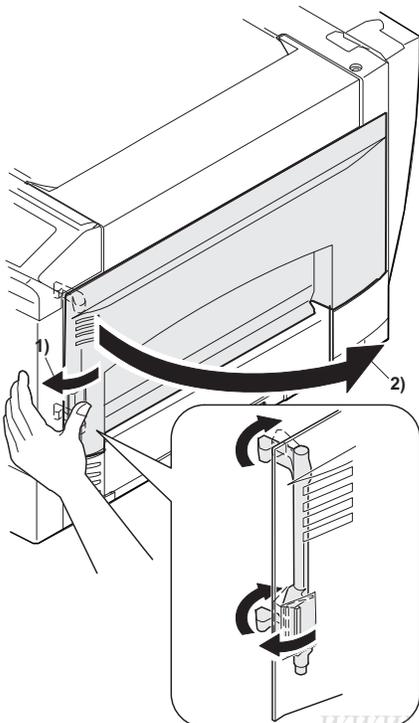

- 2) Push up the lock pawls (2 positions) of the side cover, and remove the transfer charger.

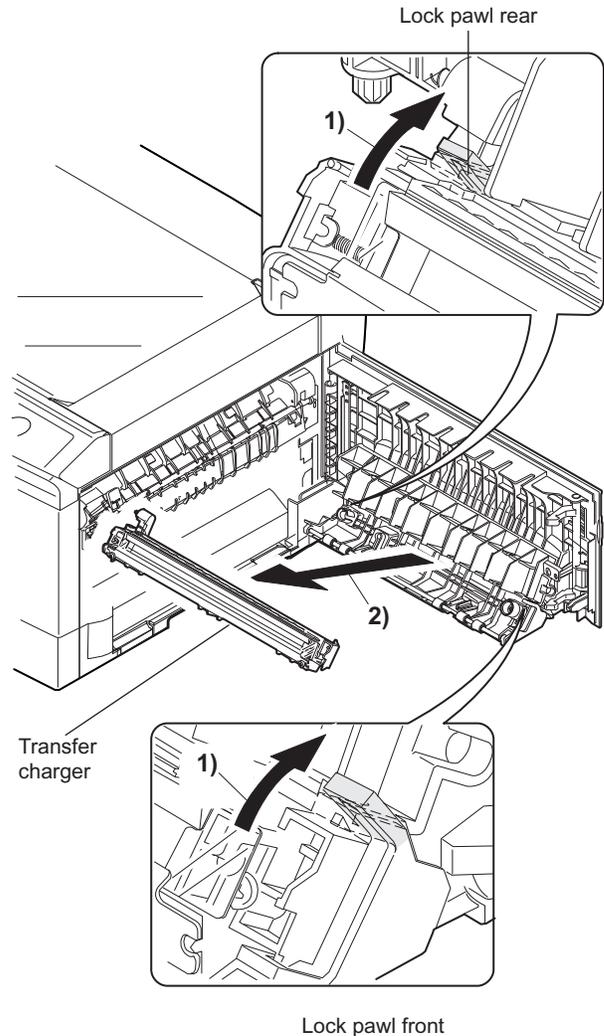


C. Assembly procedure


For assembly, reverse the disassembly procedure.

D. Charger wire cleaning

- 1) Remove the charger cleaner from the manual paper feed unit.

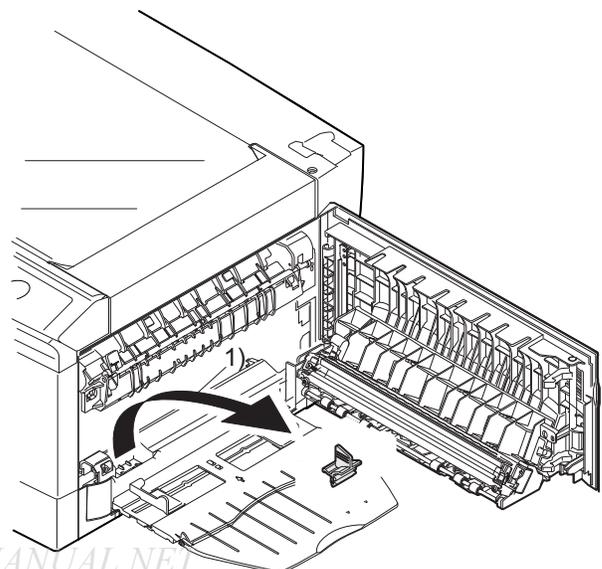

2) Clean the TC front guide and the TC holder with alcohol.

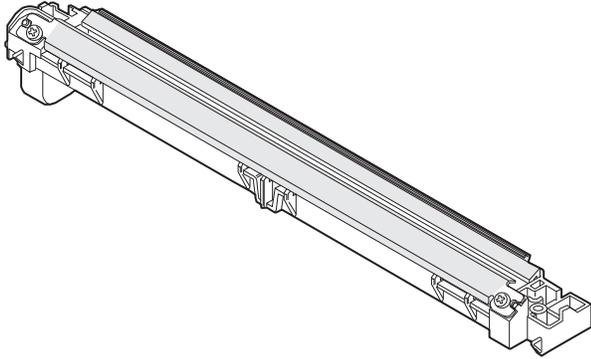

3) Insert the charger cleaner into the transfer unit, and move it a few times in the direction of the arrow shown in the figure below.

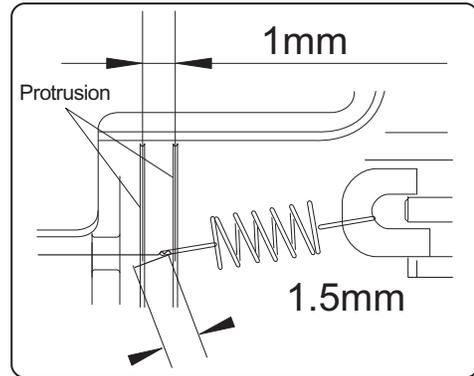
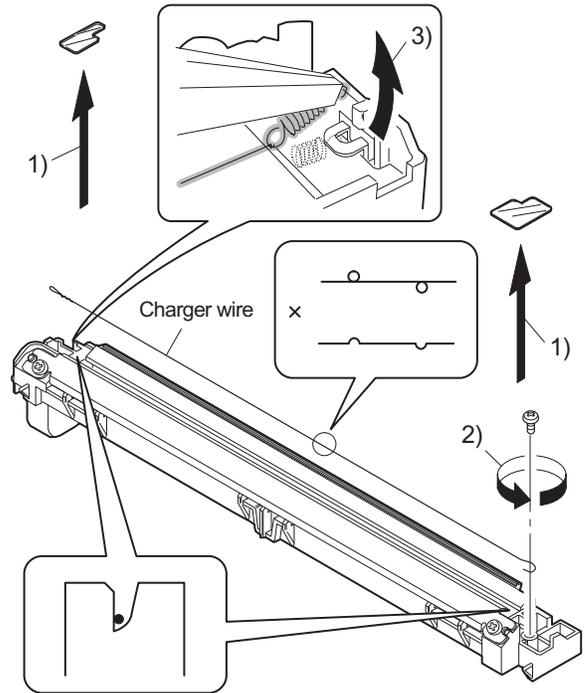
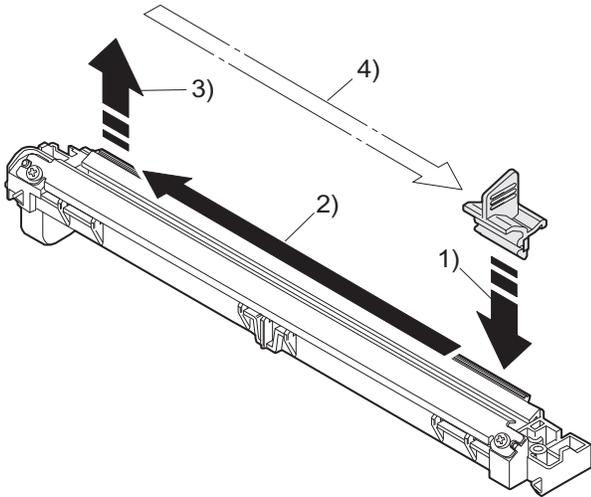


Fig.1

E. Charger wire replacement

- 1) Remove the TC cover and remove the screw.
- 2) Remove the spring and remove the charger wire.
- 3) Install a new charger wire by reversing the procedures (1) and (2).

At that time, be careful of the following items.

- The rest of the charger wire must be within 1.5mm. Refer to Fig.1
- The spring hook section (charger wire winding section) must be in the range of the projection section.
- Be careful not to twist the charger wire.


2. Operation panel section

A. List


No.	Part name	Ref.
1	Operation panel unit	
2	Operation PWB	

B. Disassembly procedure


- 1) Open the side door, and Open the front cover.

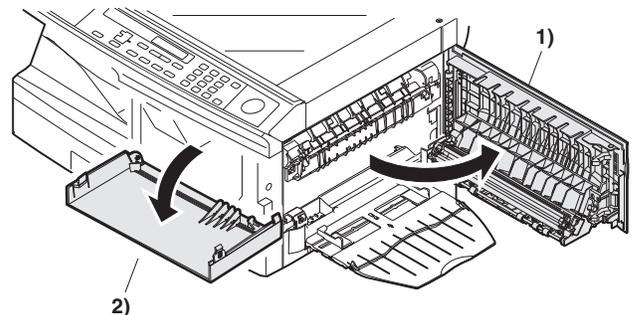

- Remove the screws (4 pcs.), the harness, and the operation panel unit.

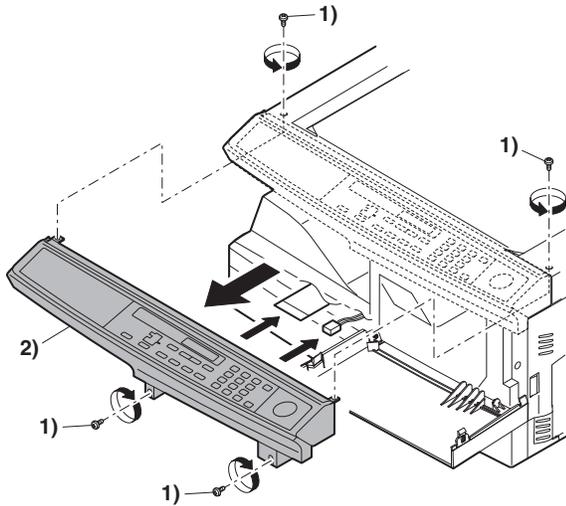

- Remove four screws, and remove the operation cabinet.
- Remove eight screws, and remove the operation PWB.

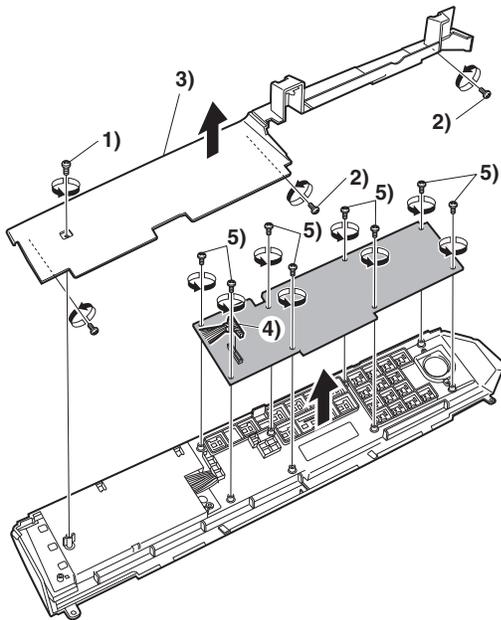

C. Assembly procedure

For assembly, reverse the disassembly procedure


3. Optical section

A. List


NO.	Part name	Ref.
1	Copy lamp unit	
2	Copy lamp	
3	Lens unit	

B. Disassembly procedure


- Remove four screws, and remove the rear cabinet and the rear cabinet cover.

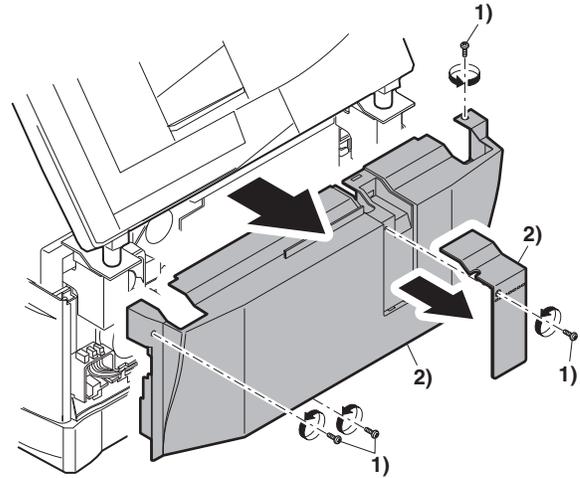


- Remove two screws, and remove the earth wire.
- Disconnect the connector.
- Remove the RSPF unit.

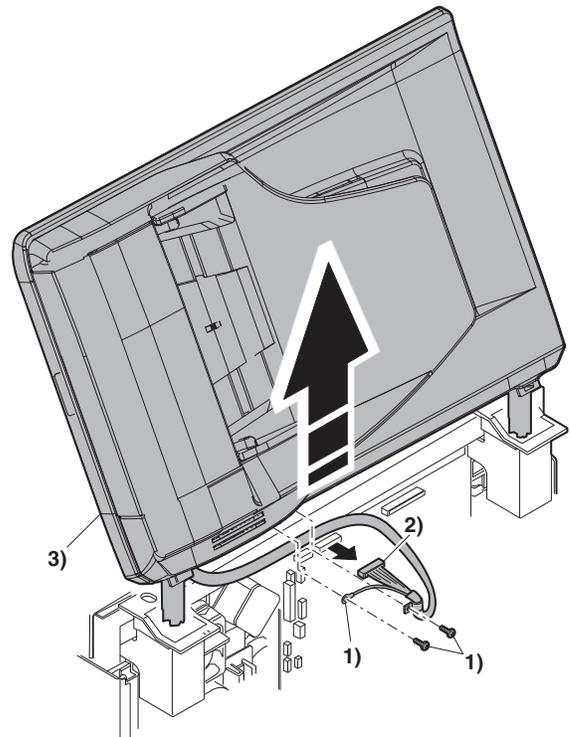


- 5) Remove five screws. Remove the operation unit, and disconnect the connector.
- 6) Remove the right cabinet.
- 7) Remove the left cabinet.
- 8) Remove the screw, and remove the rear cover.
- 9) Remove the table glass.

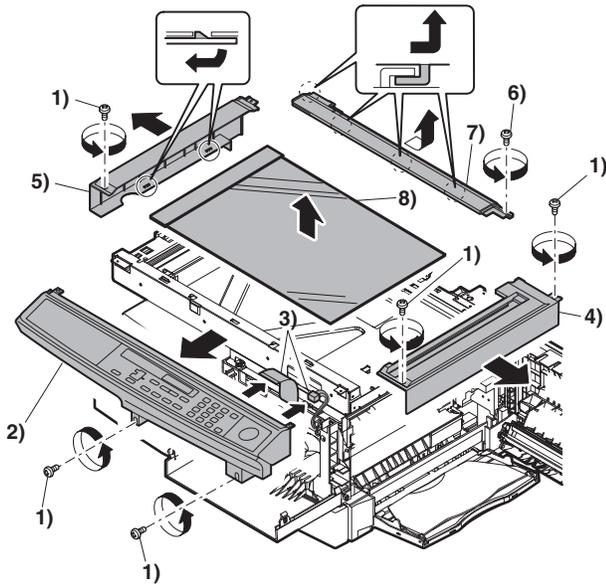


- 10) Move the carriage to the position indicated on the figure.
- 11) Loosen the screw which is fixing the tension plate.
- 12) Move the tension plate in the arrow direction to release the tension, and remove the belt.

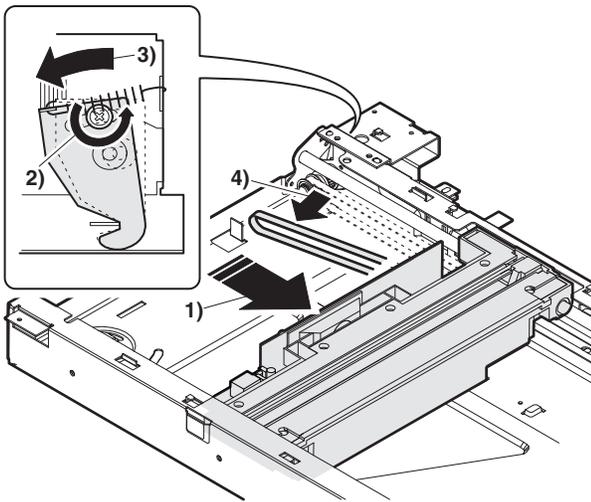

- 13) Remove the screw, and remove the rod stopper.
- 14) Remove the rod.

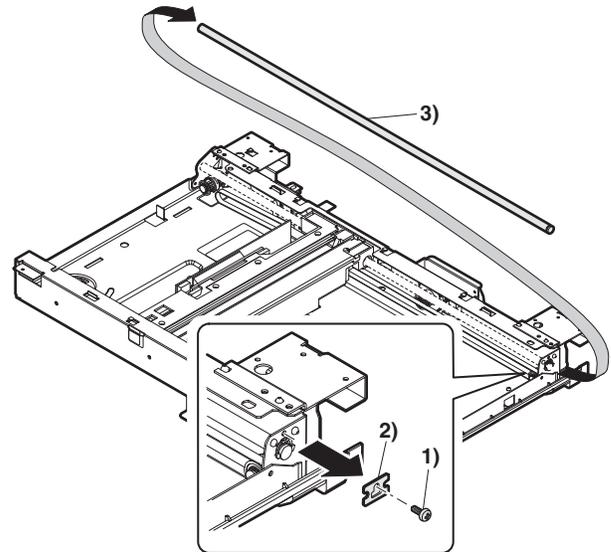

- 15) Lift the rear side of the carriage, remove the belt and the connector, and remove the carriage.

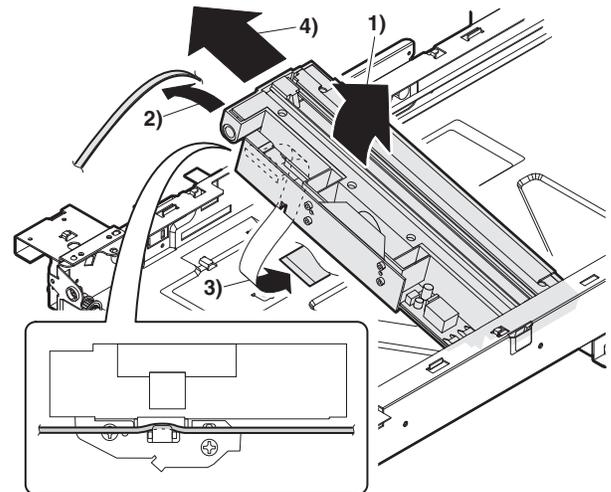


C. Assembly procedure


CCD core

- 1) Insert the CCD-MCU harness into the CCD PWB of the carriage unit.
- 2) Attach the CCD-MCU harness to the duplex tape on the back surface of the carriage unit. Clean and remove oil and dirt from the attachment surface.
- 3) Pass the CCD-MCU harness through the square hole in the base plate.
- 4) Attach the CCD-MCU harness to the base plate with duplex tape.
- 5) Attach two cable fixing sheets to fix the CCD-MCU harness to the base plate.
- 6) Pass the core through the CCD-MCU harness and fix the core.
- 7) Insert the CCD-MCU harness into the MCU PWB.

Note: Attach the FCC to the base plate securely with duplex tape to prevent against coming loose.

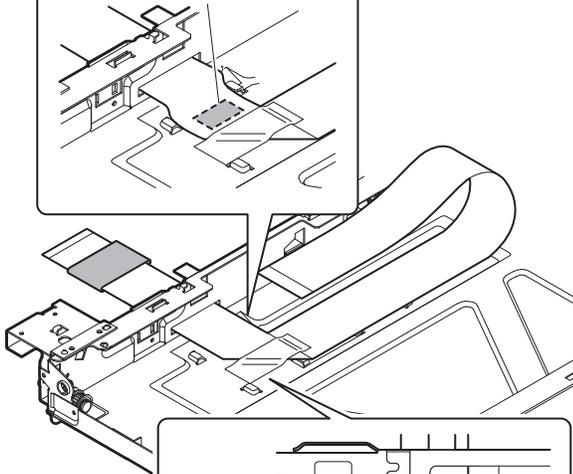

Note: Attach the FCC to fit with the marking line. Marking line.

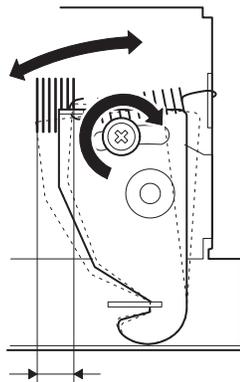



4. Fusing section

A. List


No.	Part name	Ref.
1	Thermistor	
2	PPD2 sensor	
3	Heater lamp	
4	Pressure roller	
5	Heat roller	

B. Disassembly procedure


- 1) Remove the connectors (3 pcs.) of the rear cabinet.
- 2) Open the side cover, remove two screws, and remove the fusing unit.

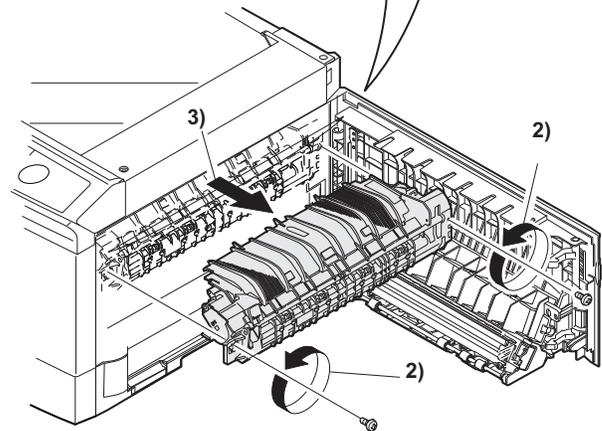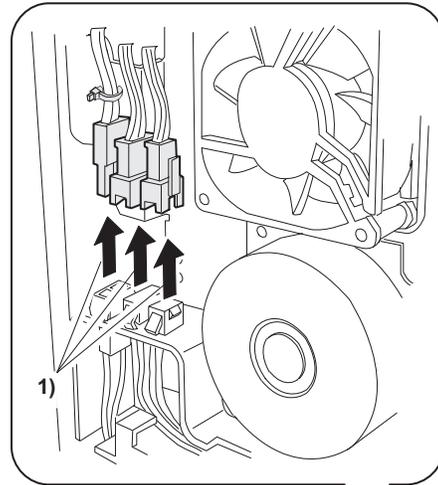

- 3) Cut the binding band, remove the screw, and remove the thermistor.

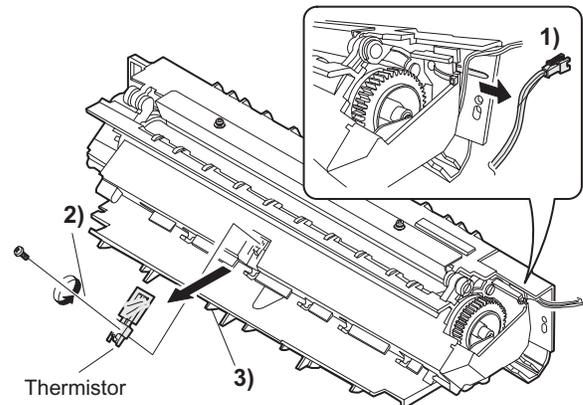


- Remove the screw and remove the resistor.
Remove the screw and remove the U-turn guide.

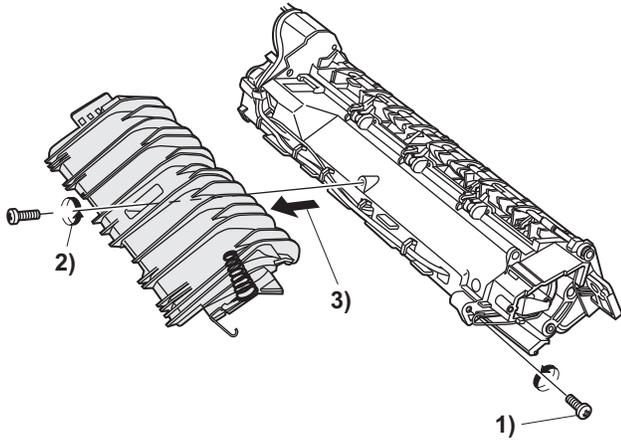


Note: When installing the resistor, check to confirm that the discharge brush section (A) is in contact with the upper heat roller.

Also check to confirm that the fusing lower earth spring (B) does not extend over the fusing bearing (C) after tightening the screw.

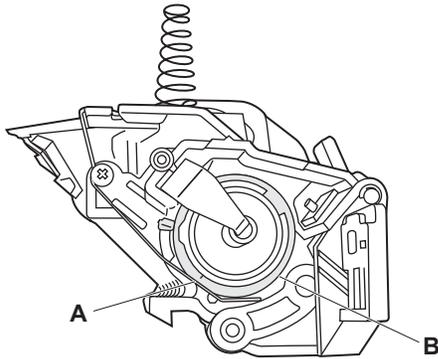


Pressure roller section disassembly


- Remove the three screws, remove the fusing cover lower on the right side, and open the heat roller section.

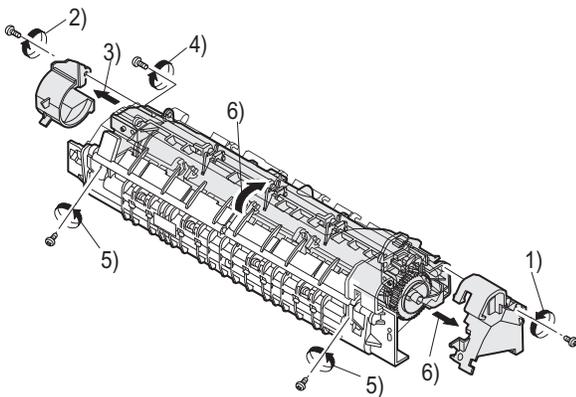

- Remove the screw and remove the PPD2 sensor.

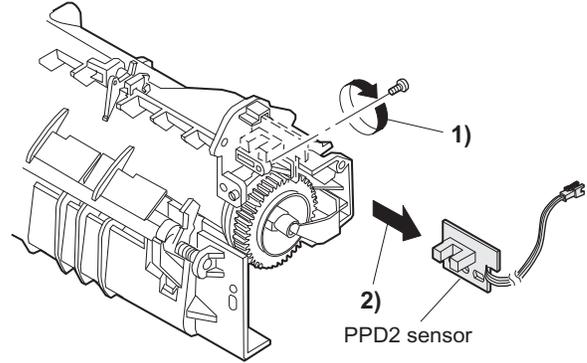


- Remove the plate spring on the right and remove the heater lamp.

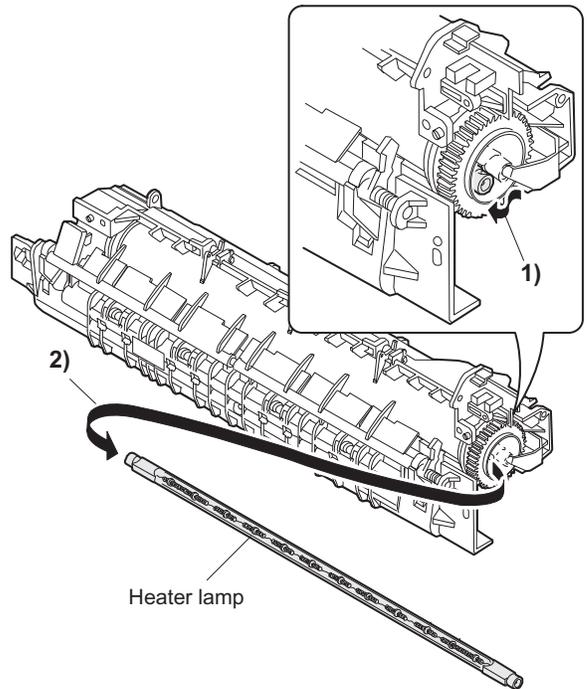


- When opening the fusing unit, slide the fusing lower earth spring in the arrow direction, and open the unit.

If the fusing unit is opened without sliding the fusing lower earth spring, the fusing lower earth spring is deformed.


If the fusing lower earth spring is once deformed, the earth function may not work properly. Replace the deformed spring with a new one.

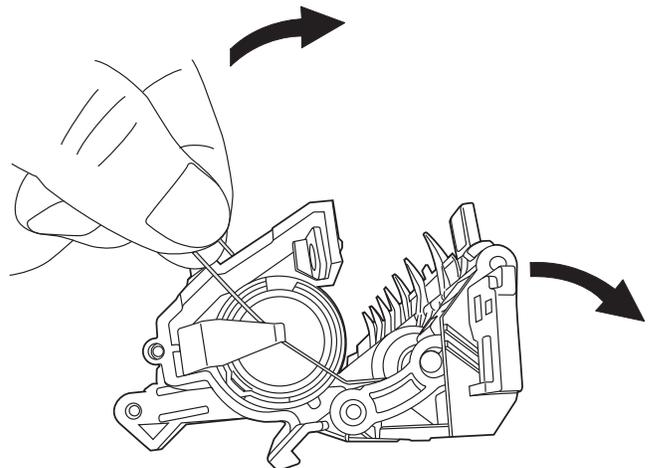


- 9) Remove the spring, and remove the upper separation pawls (3 pcs.).

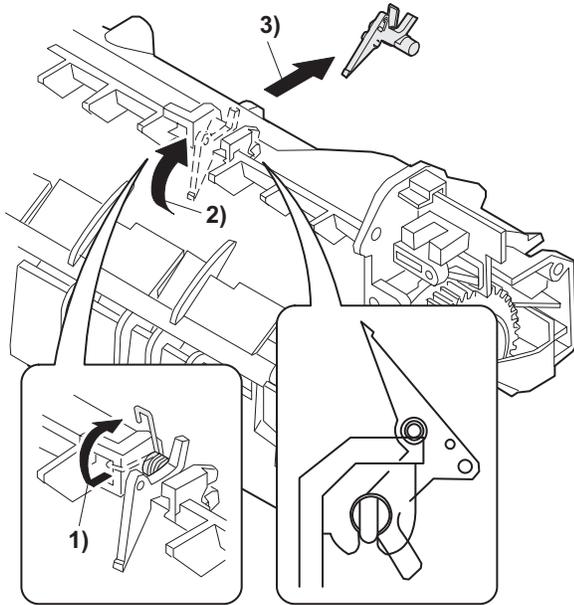

- 10) Remove the E-ring and remove the reverse gate.

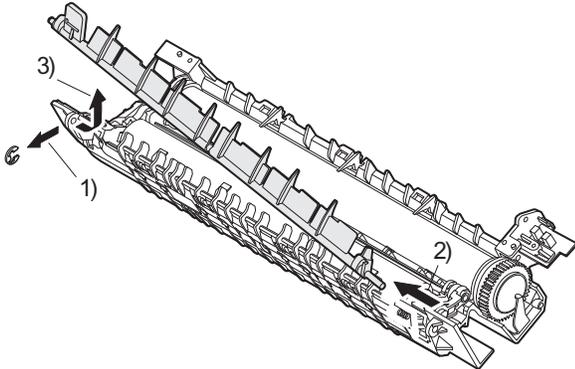


- 11) Remove the pressure release levers on the right and the left sides.

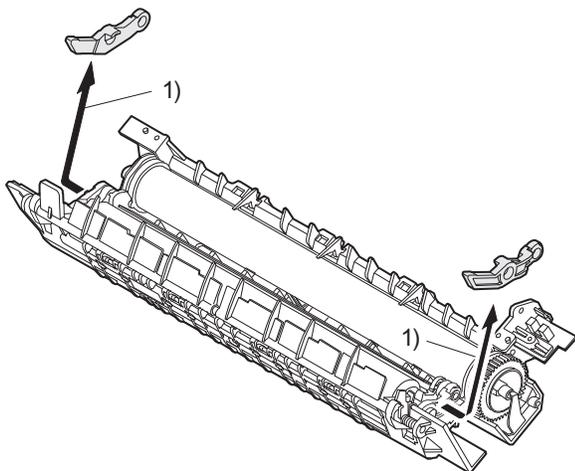

- 12) Remove the pressure roller, and the spring.

Note: Apply grease to the sections specified with an asterisk (*).
Grease: "JFE552" UKOG-0235FCZZ

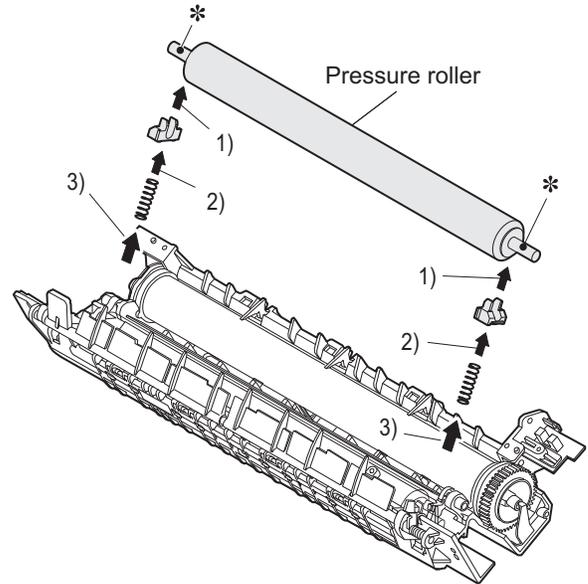


Heat roller disassembly


(Continued from procedure 4.)

- 5) Remove screws, remove the fusing cover, and open the heat roller section.

Note: When opening the fusing unit, be careful not to deform the fusing lower earth spring as described in the item 8) of "Pressure roller section disassembly."

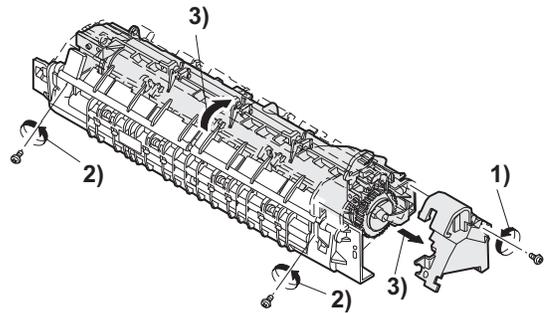


- 6) Remove the C-ring and shift the heat roller in the arrow direction.

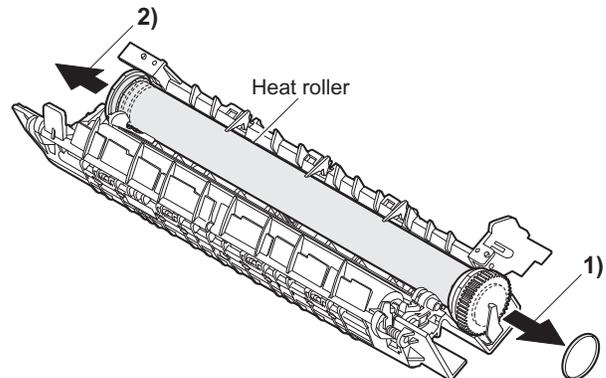


- Remove the heat roller gear and the fusing bearing, and lift and remove heat roller.

Note: Apply grease to the sections specified with *1.
Grease: "JFE552" UKOG-0235FCZZ

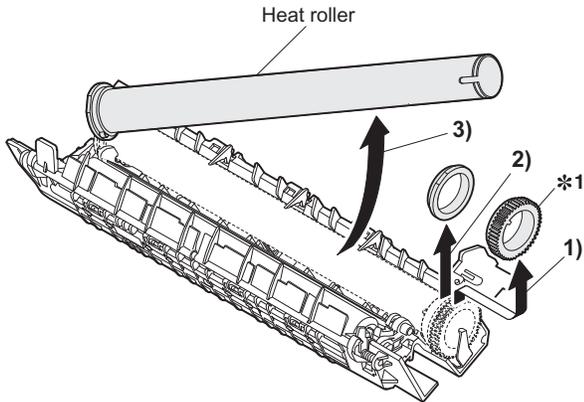

- Remove the parts from the heat roller.


Note: Apply grease to the sections specified with *1.
Grease: "JFE552" UKOG-0235FCZZ

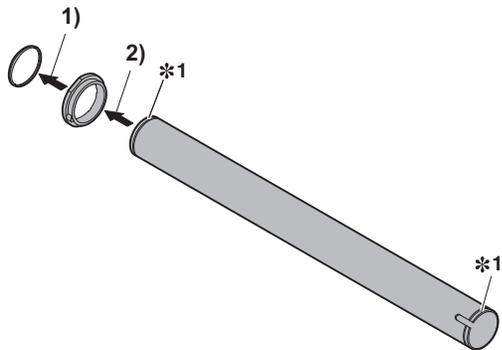

- Remove two screws and remove the thermo unit.

Note: The set temperature of the thermostat differs from that of the current model.

	Temperature
MX-B201/B201D	230°C

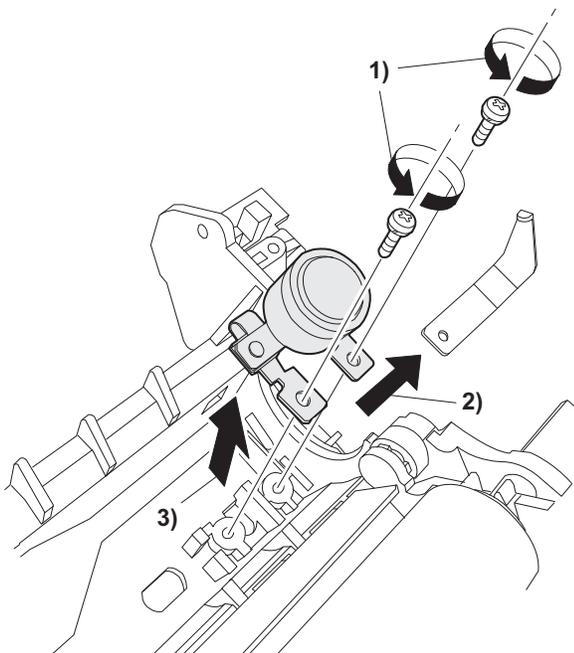

5. Tray paper feed/transport section


A. List

No.	Part name	Ref.
1	PPD1 sensor PWB	
2	POD sensor PWB	
3	LSU unit	
4	Intermediate frame unit	
5	Paper feed roller	


B. Disassembly procedure

- Remove the paper holding arm.

Remove the arm holder from the main unit, and remove the holder from the arm.

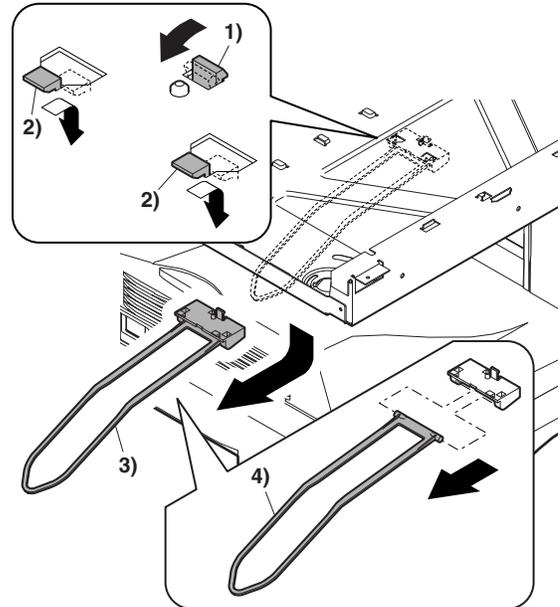


- Remove two screws, and remove the hinge guide R.
- Disconnect the connector. (2 positions)
- Remove five screws, and remove the scanner unit.
- Remove the fan duct.

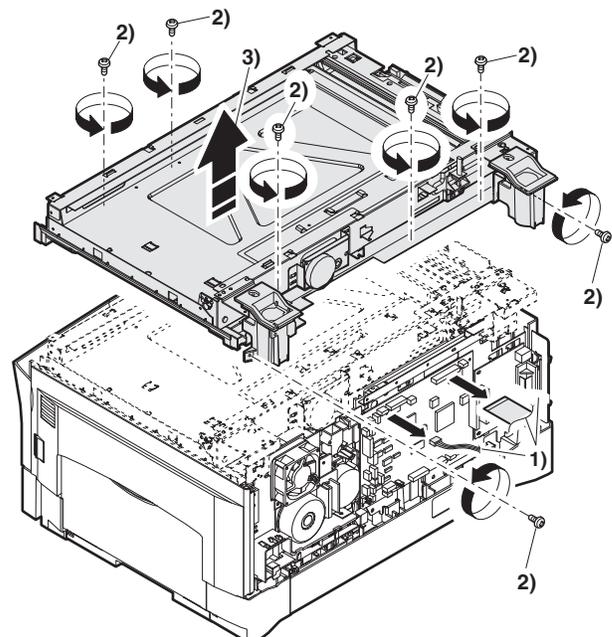


C. Assembly procedure

For assembly, reverse the disassembly procedure.


- 6) Remove each connector and four screws, and remove the MCU PWB and network PWB. (The shape of the MCU PWB differs depending on the model.)

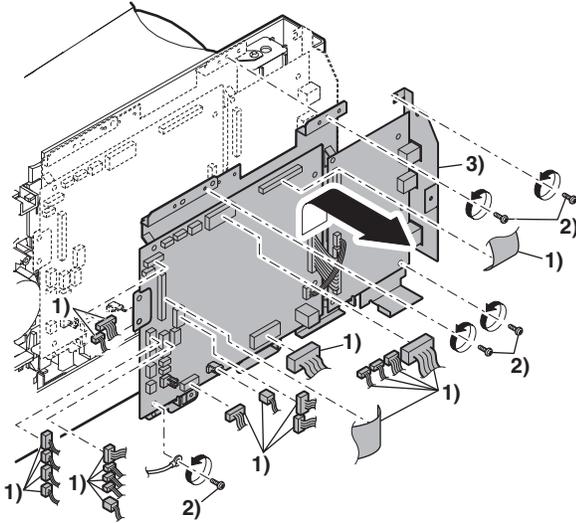


- 7) Remove the PWB insulation mylar and remove the paper transport detection sensor (POD).

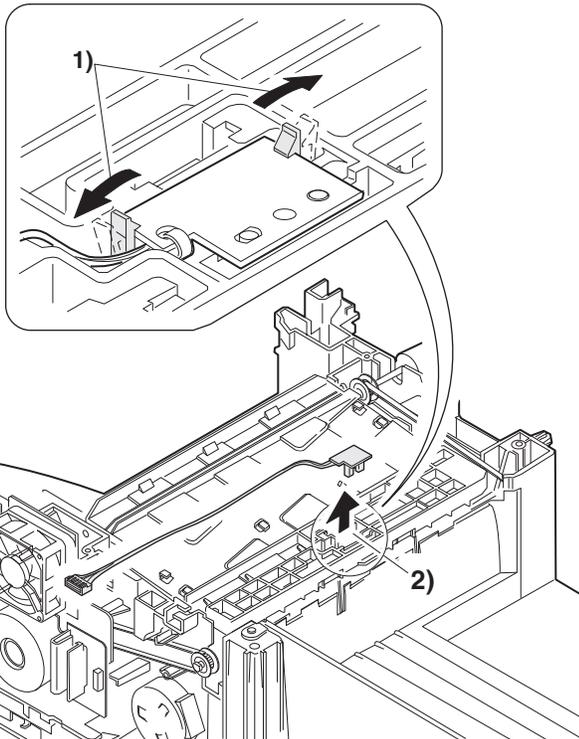

- 8) Remove the screw, and open the upper paper guide.

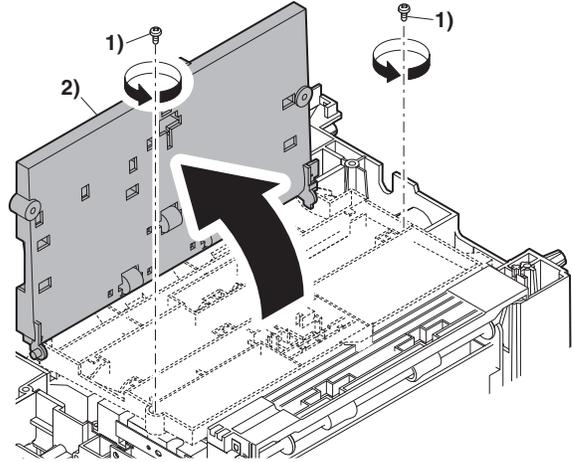


- 9) Remove the roller, and remove the belt.

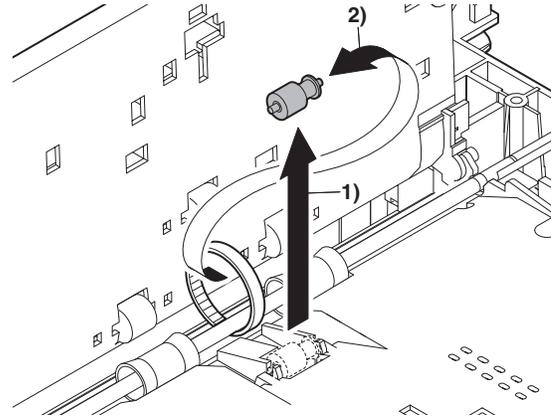


- 10) Disengage the pawl, and remove the roller knob.


- 11) Disengage the pawl, and shift the pulley and the bearing.

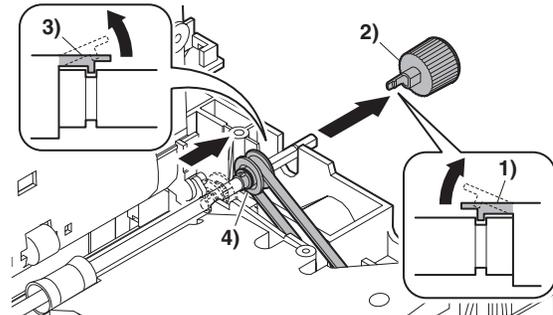


- 12) Remove the paper exit roller, and remove the belt, the pulley, and the bearing.

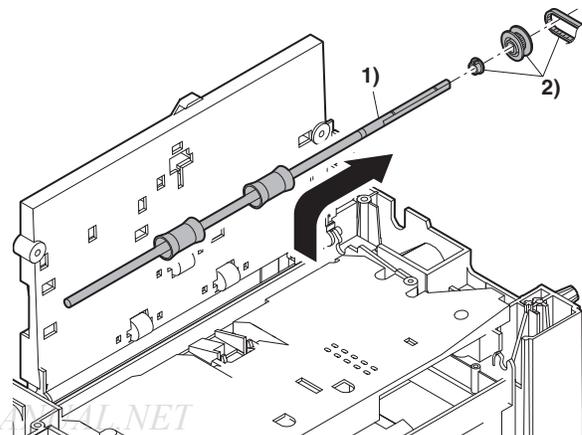


13) Remove the harness guide.

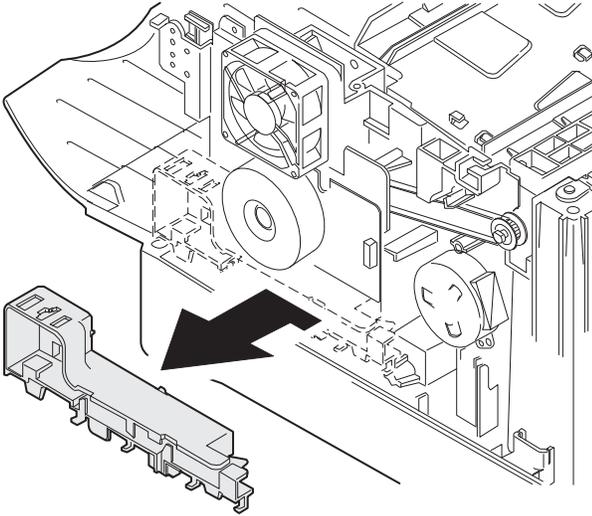


14) Remove two screws and remove the toner motor.

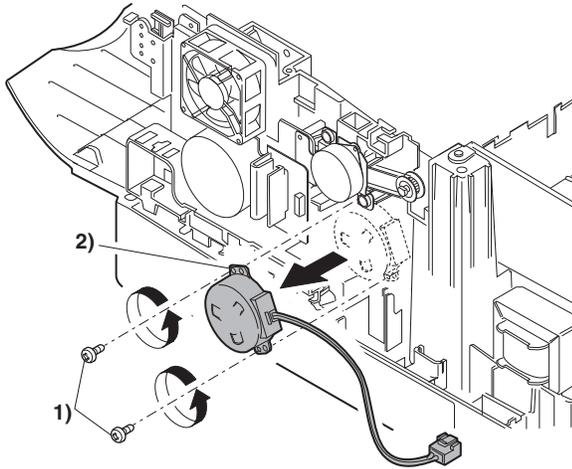


15) Remove three screws, and remove the DUP motor unit and the belt.

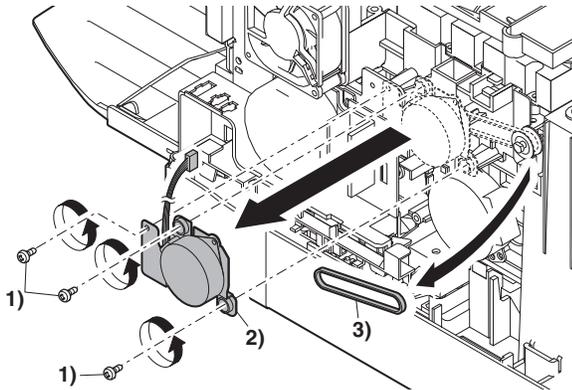

16) Remove five screws and the grounding wire, and remove the main drive unit.

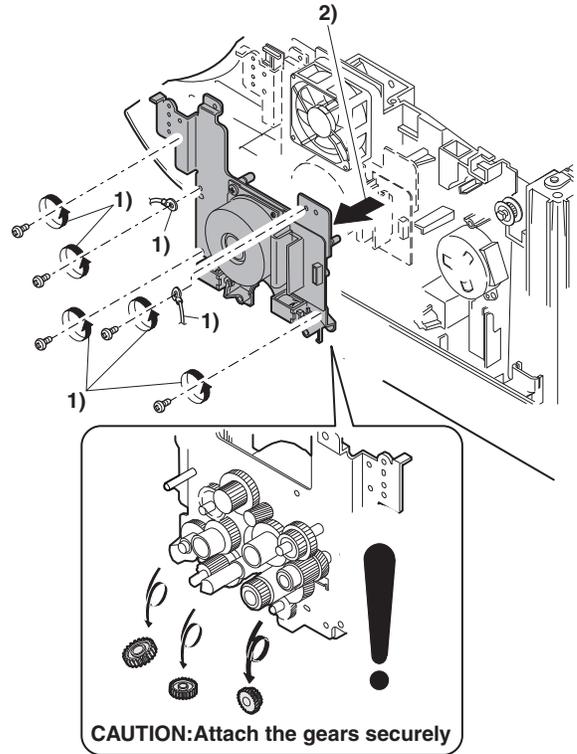


17) Remove the parts as shown below, and remove the pressure release solenoid and the paper feed solenoid.

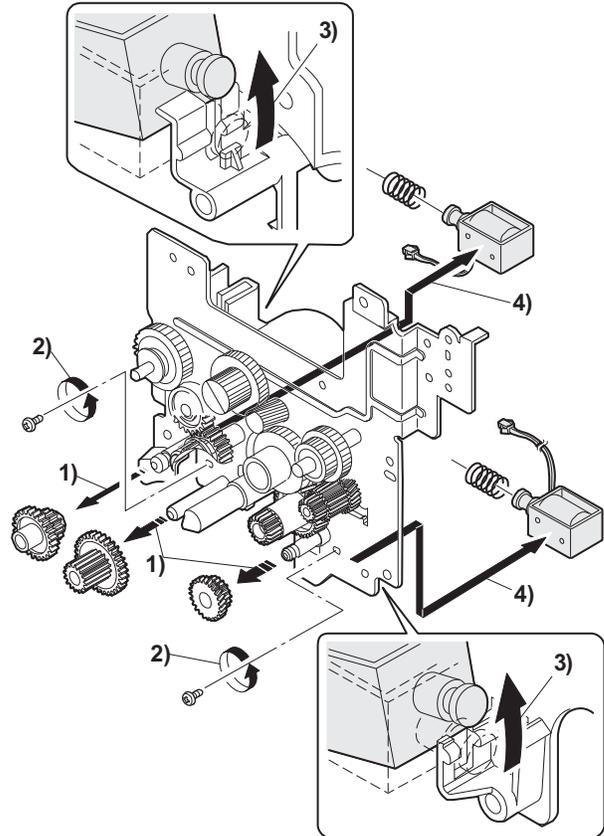


18) Remove four screws, and remove the lower paper guide unit.

[Note for installation]

Fit the lower paper guide hole (a) with the shifter gear hole (b) so that the black resin (c) of the shifter unit can be checked.

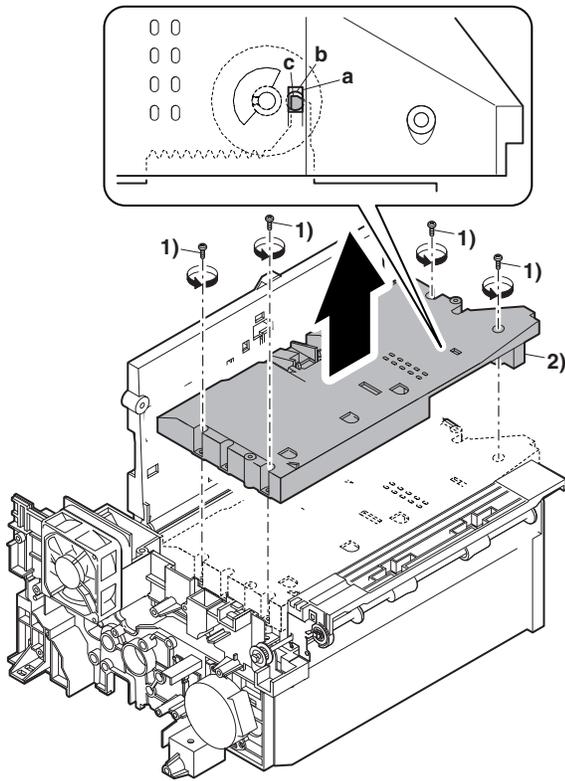


19) Put the lower paper guide unit upside down, remove two screws, and remove the shifter motor.

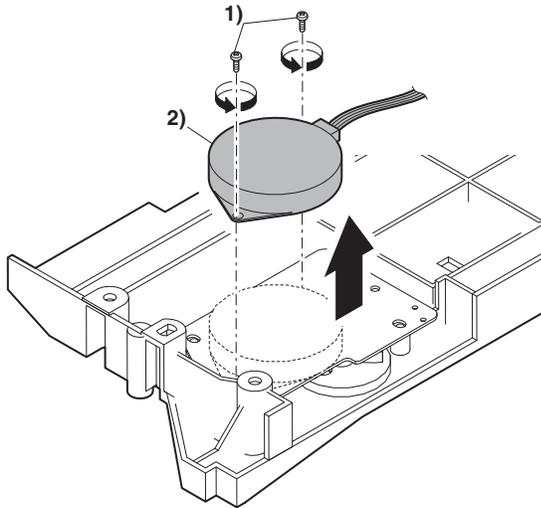


20) Remove the screw, and remove the grounding plate and the gear.

21) Remove the E-ring, the gear, and the bearing, and remove the shifter roller.

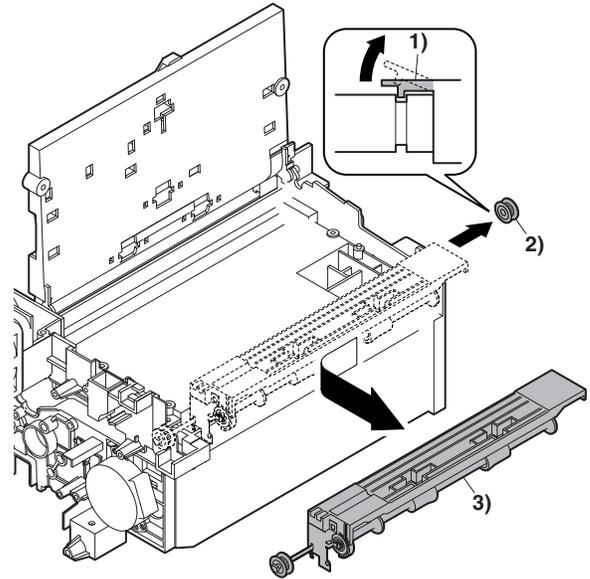


22) Disengage the pawl, and remove the pulley.

23) Shift and remove the shifter unit.

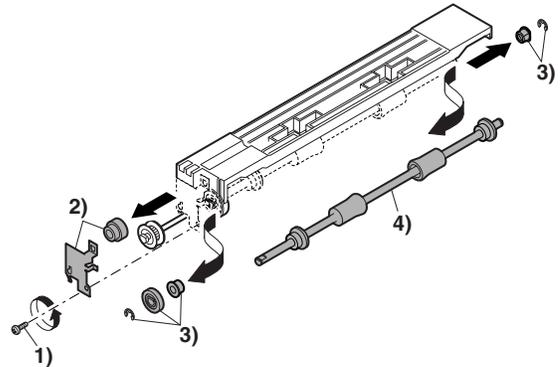


24) Remove four screws, and remove the LSU unit.

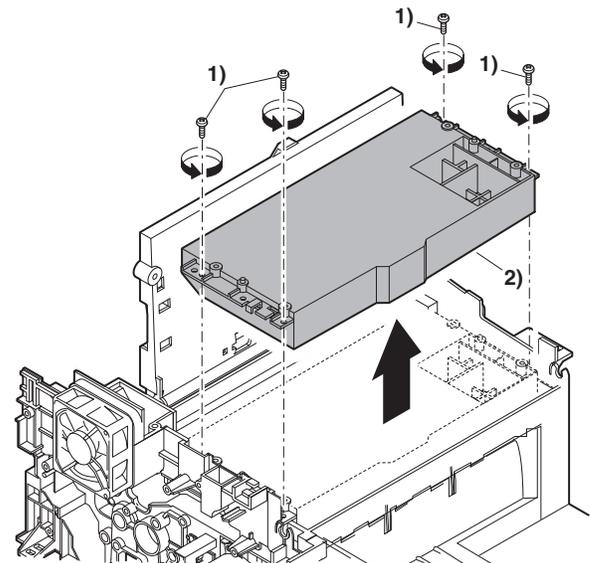


[Note for assembling the LSU]

When installing the LSU, turn the LSU clockwise and fix with screws in order to provide an attachment backlash in the proper direction.


Observe the following sequence of fixing screws.

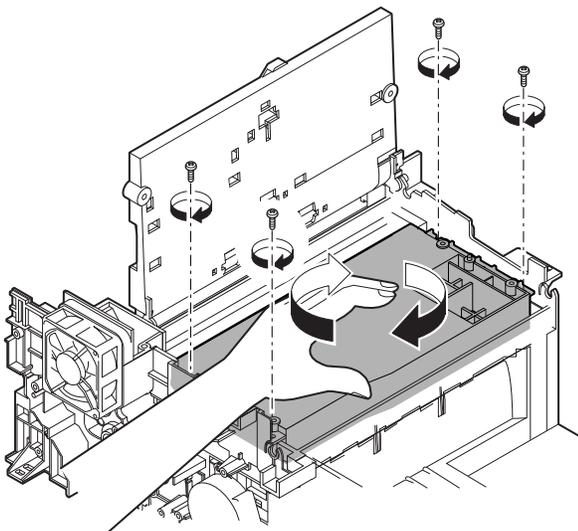


- 25) Remove the screw, slide the left cabinet to the left to detach it. Remove each pawl, and remove the paper exit tray.

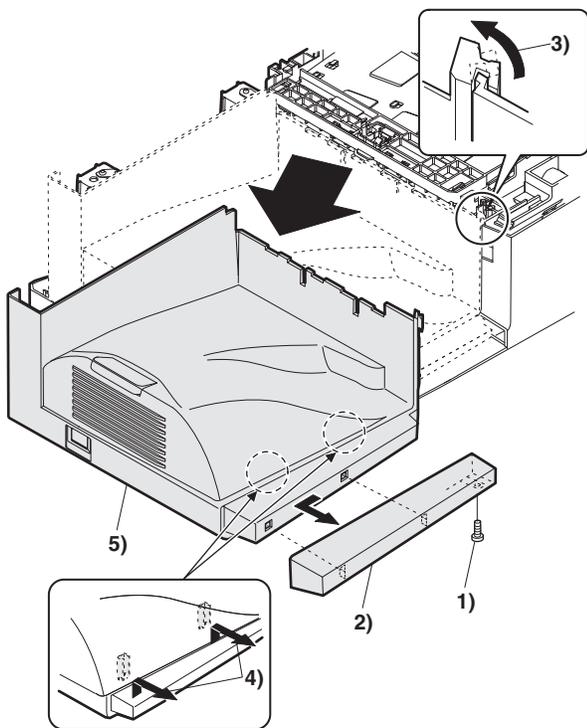


- 26) Remove two screws and remove the fusing connector.
27) Remove five screws and the connector, and lift the intermediate frame unit to remove.

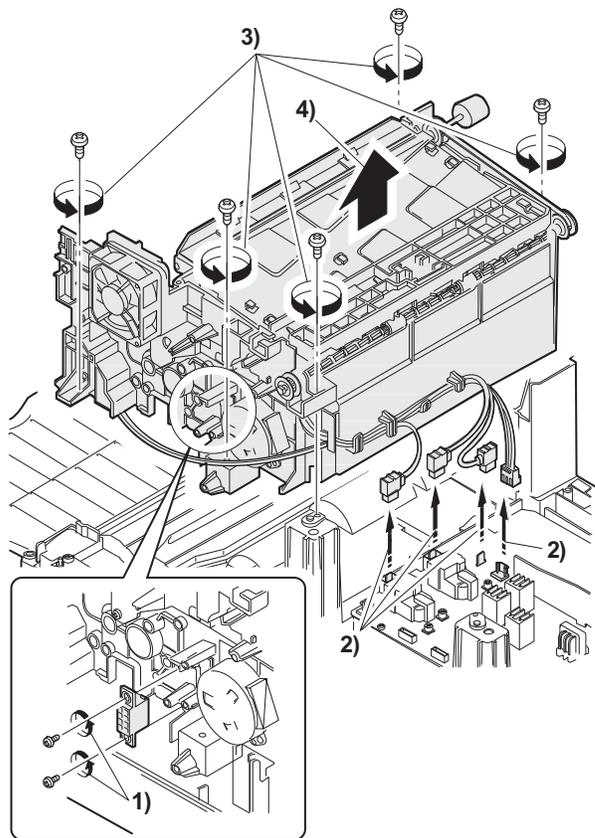


- 28) Remove the screw and the E-ring, and remove the PS semi-circular earth plate and the PS roller unit.
29) Remove the E-ring and remove the spring clutch from the PS roller unit.

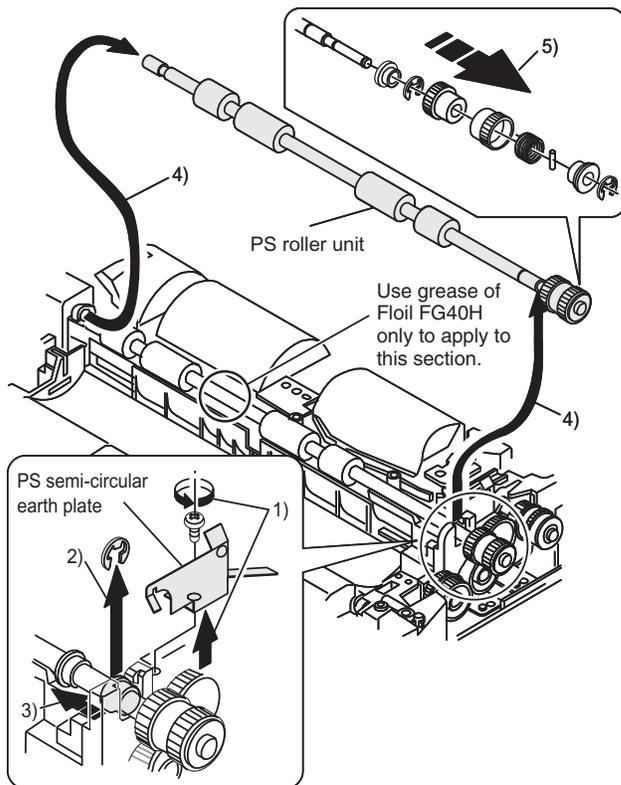

30) Remove three screws and remove the TC front paper guide.

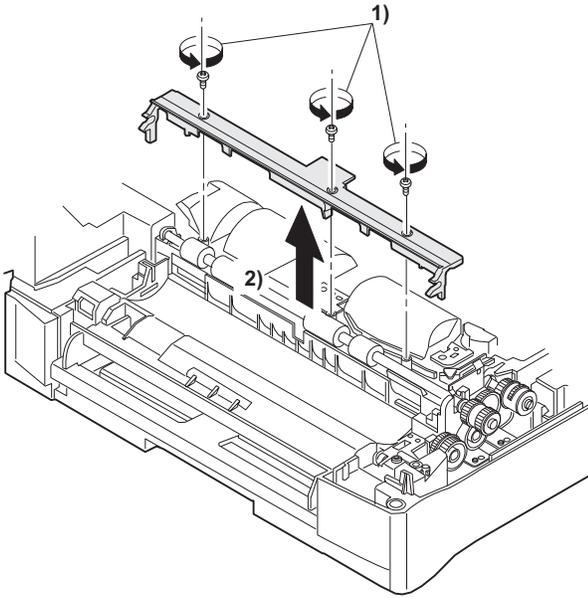


31) Remove the screw and the connector, and remove the PPD1 sensor PWB.

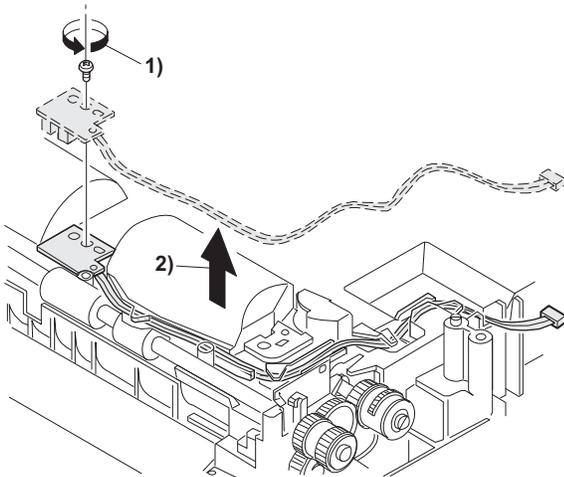

32) Remove two E-rings and remove the paper feed roller.

33) Remove three E-rings and remove the clutch unit.

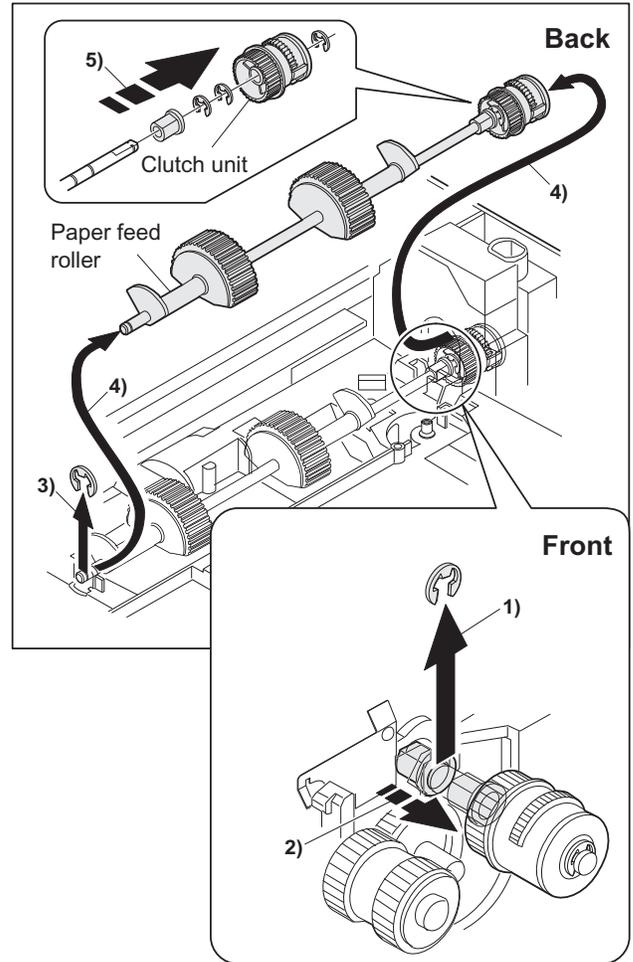

C. Assembly procedure

For assembly, reverse the disassembly procedure.

6. Manual paper feed section


A. List

No.	Part name	Ref.
1	Manual transport roller	
2	Cassette detection switch	
3	Side door detection unit	



B. Disassembly procedure

Multi unit


- 1) Remove the screw and remove the multi upper cover.

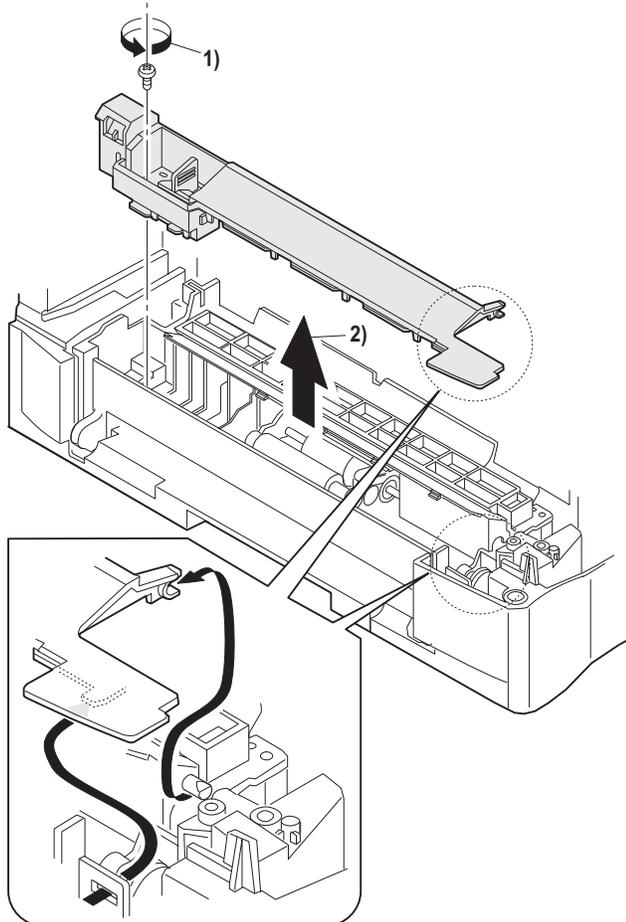


- 2) Remove the screw and remove the side door detection unit.

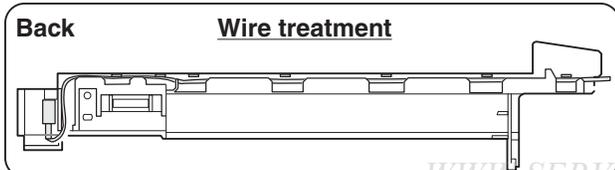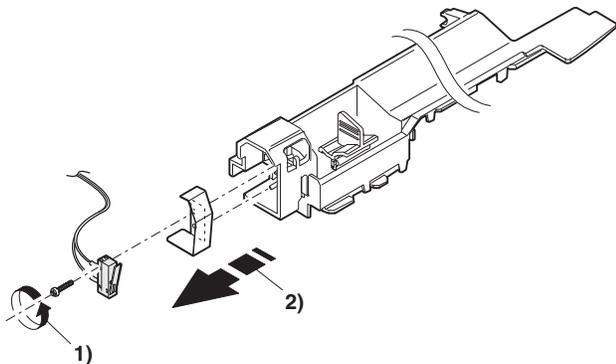


- 3) Remove three screws and remove the multi paper feed upper frame.

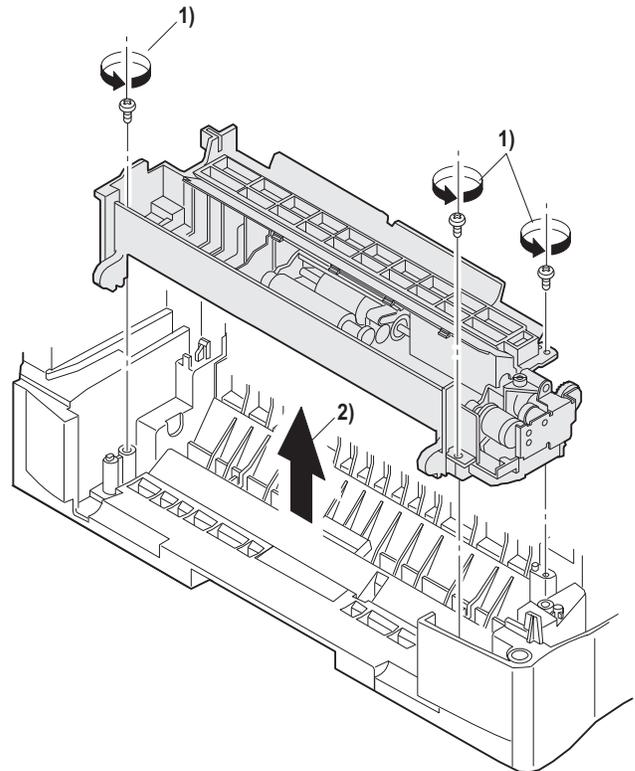


- 4) Remove two screws and remove the multi feed bracket unit from the multi paper feed upper frame.

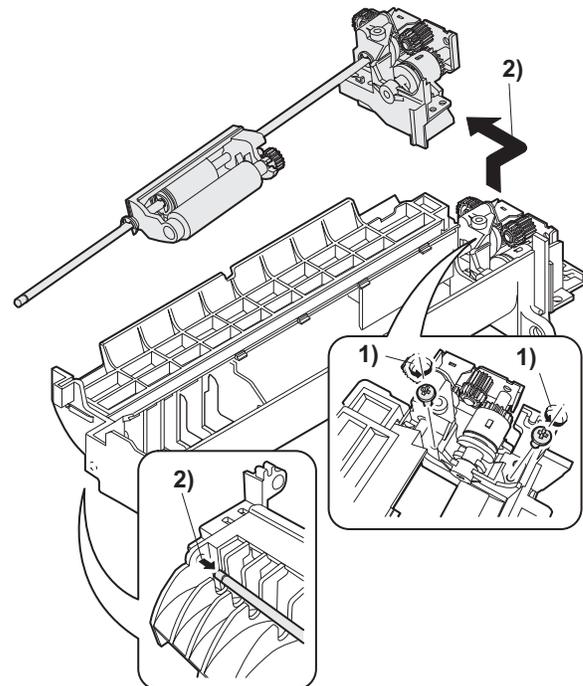


5) Remove three E-rings and remove the manual paper feed roller B9.

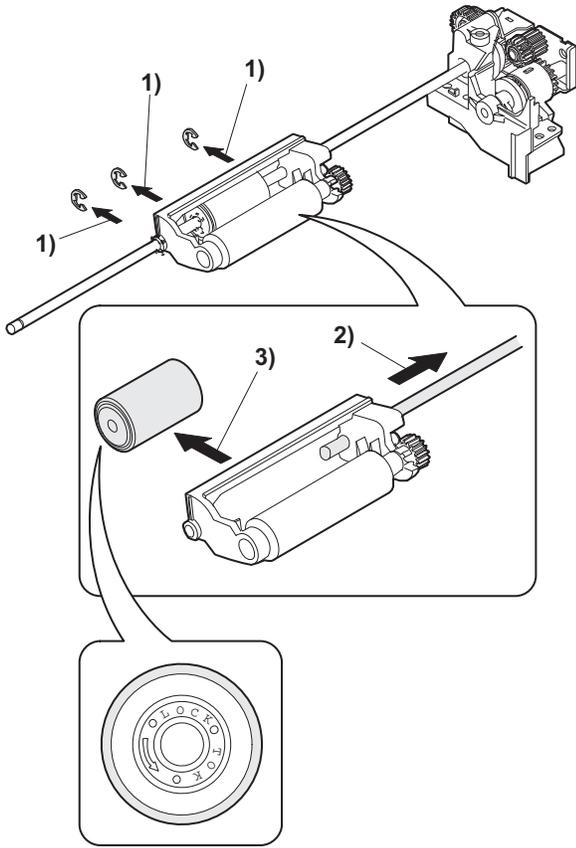

6) Remove the pick-up roller.

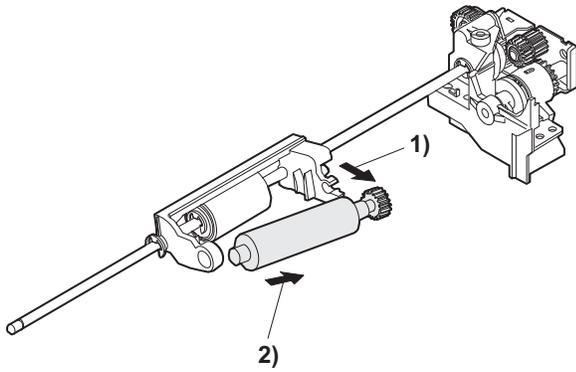

7) Cut the binding band and remove the multi paper feed solenoid.


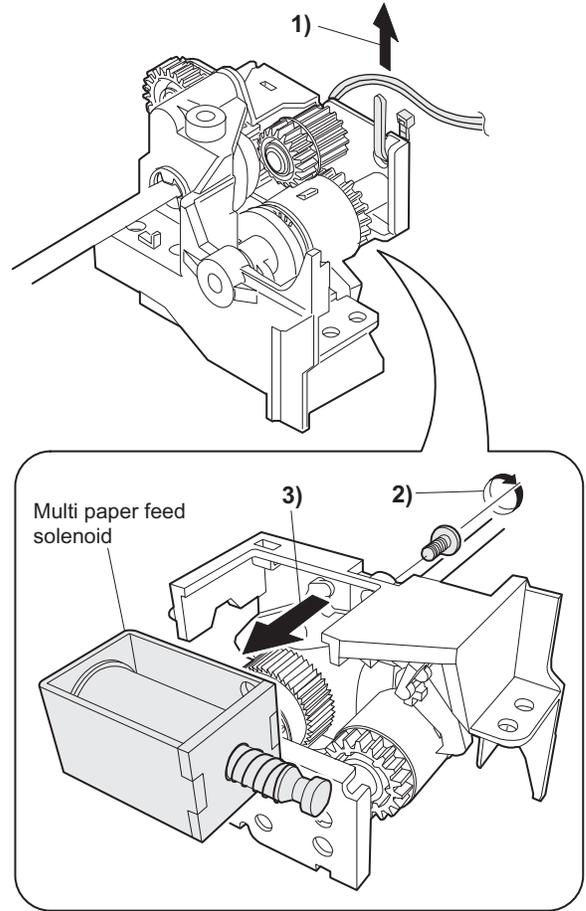


C. Assembly procedure

For assembly, reverse the disassembly procedure.

D. Pressure plate holder attachment

1) Attach the pressure plate holder so that the resin section is not covered with the seal M1-N.

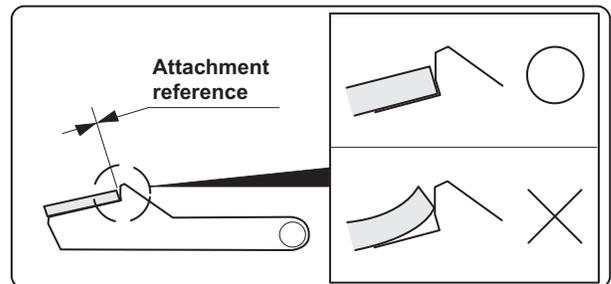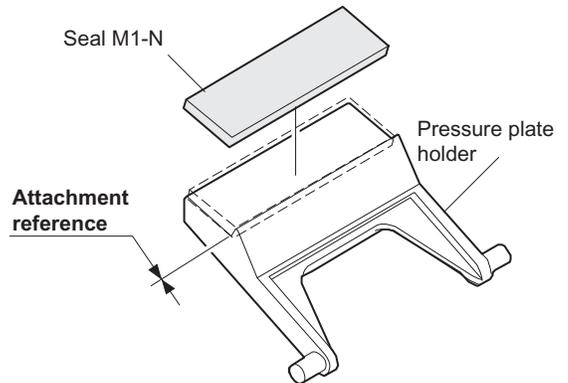


7. Rear frame section

A. List


No.	Part name Ref.
1	Scanner motor
2	Main motor
3	Exhaust fan motor
4	MCU PWB

B. Disassembly procedure


- 1) Remove four screws, and remove the rear cabinet and the rear cabinet cover.

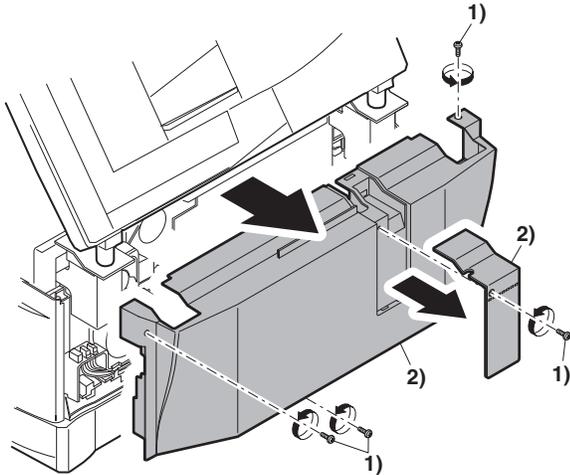


- 2) Disconnect the connector.
- 3) Remove two screws, and remove the scanner motor.

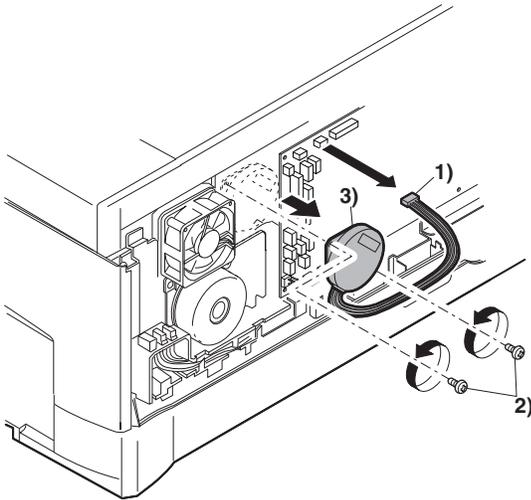


- 4) Remove two screws and one harness, and remove the main motor.

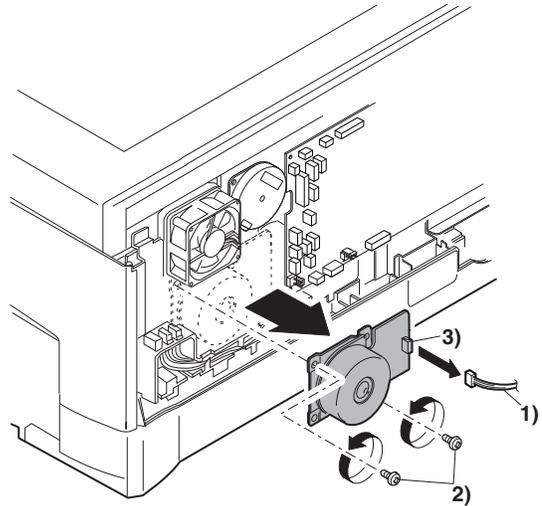

- 5) Remove two screws and one connector, and remove the exhaust fan motor.

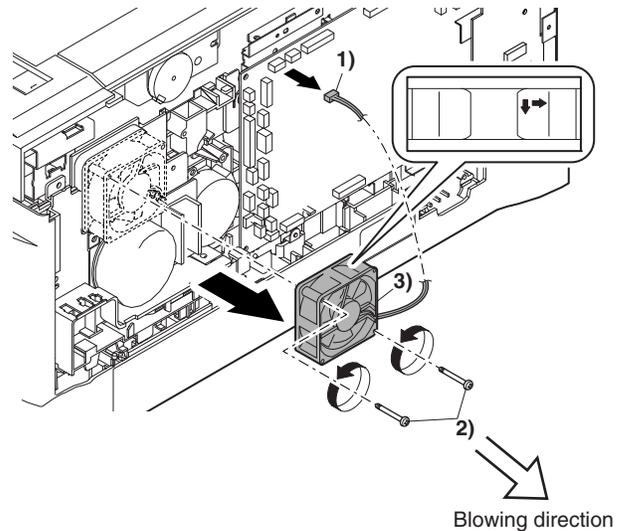

- 6) Disconnect the connectors.
- 7) Remove the five screws, and remove the MCU PWB. (The shape of the MCU PWB differs depending on the model.)

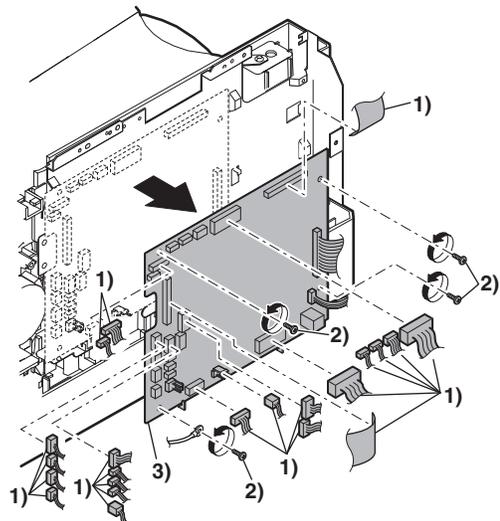

C. Assembly procedure

For assembly, reverse the disassembly procedure.


8. Power section

A. List

No.	Part name Ref.
1	Power PWB

B. Disassembly procedure

- 1) Disconnect each connector.
- 2) Remove the screw, and remove the earth line.
- 3) Remove two screws, and remove the power PWB unit.

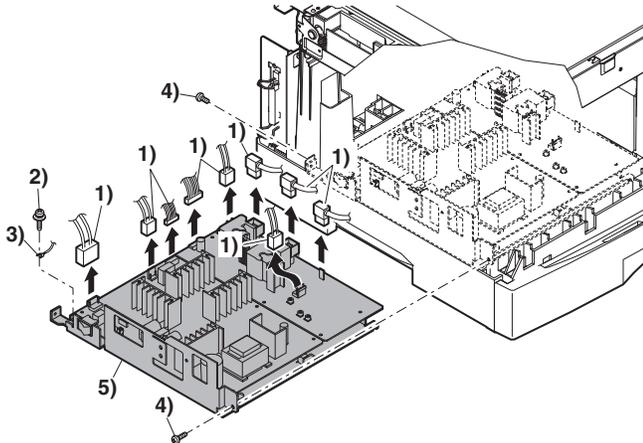

C. Assembly procedure

For assembly, reverse the disassembly procedure.


9. Duplex motor section (MX-B201D only)

A. List

No.	Part name Ref.
1	Duplex motor

B. Disassembly procedure

- 1) Remove the rear cabinet.
- 2) Remove two screws.
- 3) Remove the Duplex motor cover.
- 4) Remove the Duplex motor.

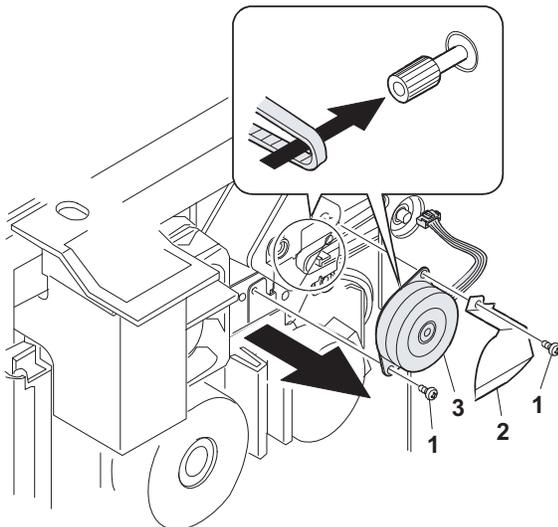

Note: When reassembling, be sure to engage the Duplex motor gear with the belt on the main body side.

C. Assembly procedure

For assembly, reverse the disassembly procedure.


10. Reverse roller section (MX-B201D only)

A. List


No.	Part name Ref.
1	Reverse roller

B. Disassembly procedure

- 1) Remove four screws.
- 2) Remove the spring, and the earth wire.
- 3) Remove the reverse unit.

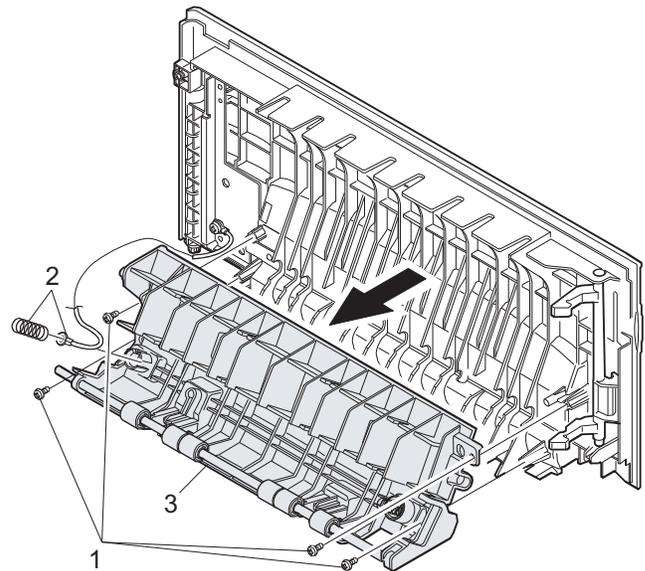

- 4) Bend the reverse roller and remove it.

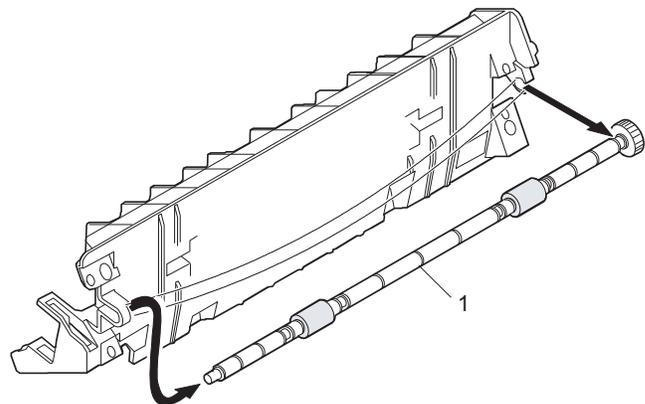


C. Assembly procedure

For assembly, reverse the disassembly procedure.

11. RSPF section


A. Front cabinet, rear cabinet

- (1) Open the upper door unit.

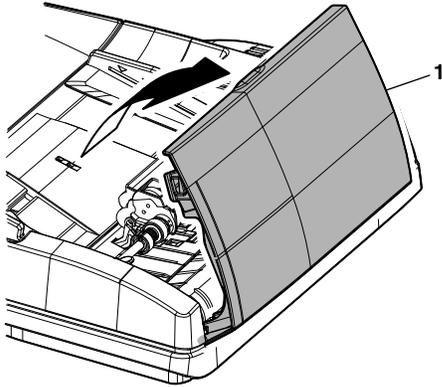


(2) Front cabinet and rear cabinet removal

- 1) Remove two screws.
- 2) Disengage the five pawls.
- 3) Remove the front cabinet and the rear cabinet.

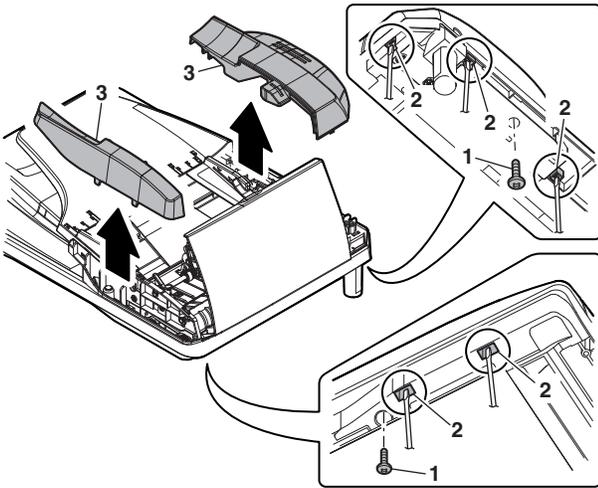


B. Upper door unit

- 1) Release the shaft on the front side.
- 2) Remove the upper door unit.

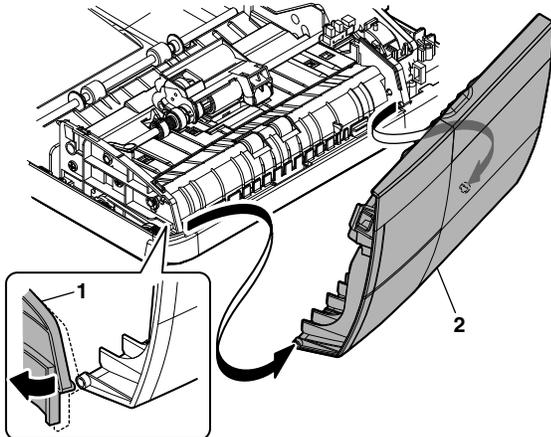

C. Document tray unit

- 1) Release the shaft on the front side.
- 2) Remove the tray unit.

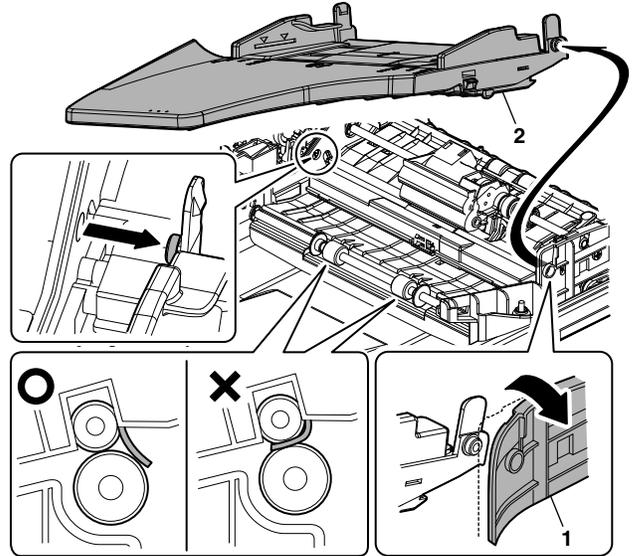


■ Note for reassembly

Use care so that the paper exit Mylar is not pinched between the paper exit roller and the follower roller.

D. Upper door open/close sensor


- 1) Disconnect one connector.
- 2) Remove the upper door open/close sensor.

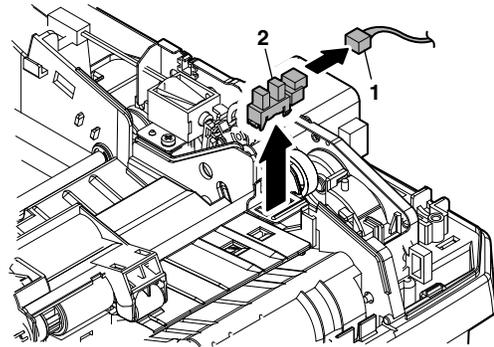

E. Reverse clutch, paper exit roller

(1) Reverse clutch removal

- 1) Disconnect one connector.
- 2) Remove the resin E-ring.
- 3) Remove the reverse clutch.

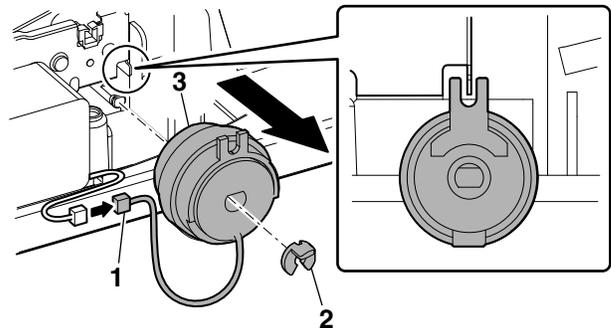


■ Note for reassembly

Attach the stopper of the reverse clutch along with the rib on the motor mounting plate.

(2) Paper exit roller removal


- 1) Remove the E-ring.
- 2) Slide the bearing.
- 3) Remove the paper exit roller.
- 4) Remove the E-ring.
- 5) Remove the bearing.

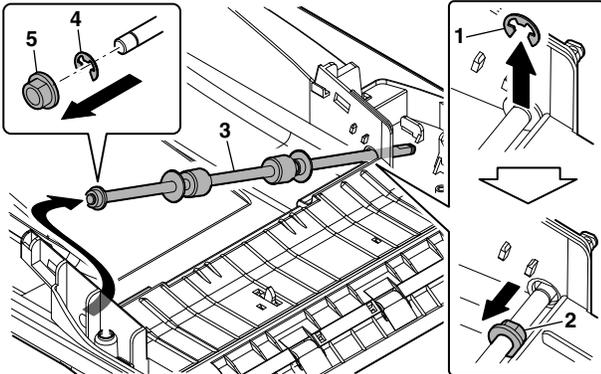


F. Drive unit

(1) Transport unit removal

- 1) Disconnect four connectors.
- 2) Remove the harness from the clamp.
- 3) Remove the snap band.
- 4) Remove one screw.
- 5) Remove the earth wire.
- 6) Remove one screw.
- 7) Disconnect the RSPF harness.

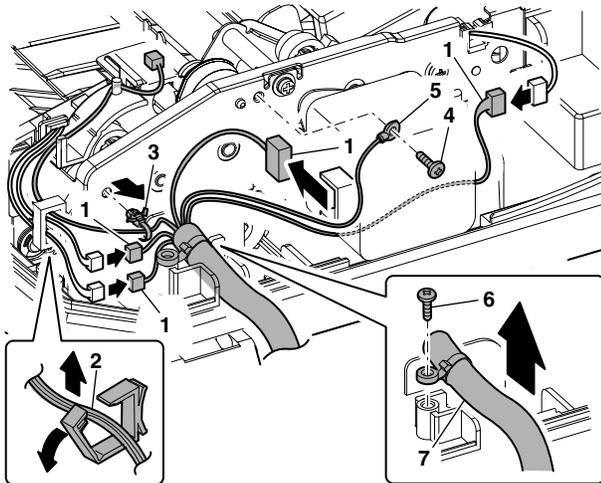

- 8) Remove four screws.
- 9) Remove the transport unit.

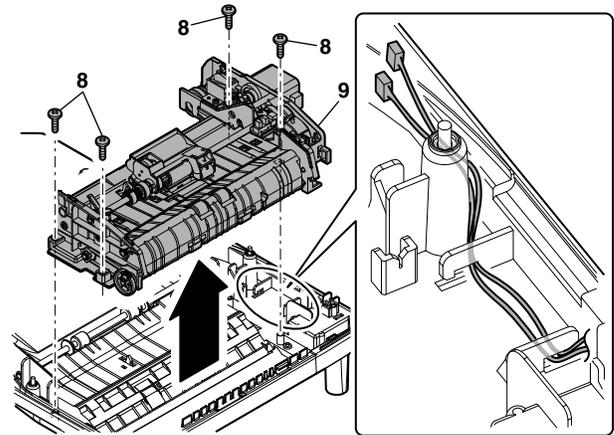


■ Note for reassembly

Before assembly, be sure to check that the harness is passed through the rib.

Arrange the RSPF harness to the outside of the base tray so that it is not pinched before assembly.


(2) Drive unit removal

- 1) Remove three screws.
- 2) Remove the drive unit.

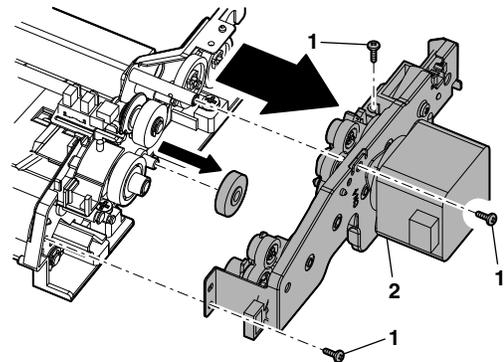

(3) Drive motor removal

- 1) Remove the gear.
- 2) Remove two screws.
- 3) Remove the drive motor.

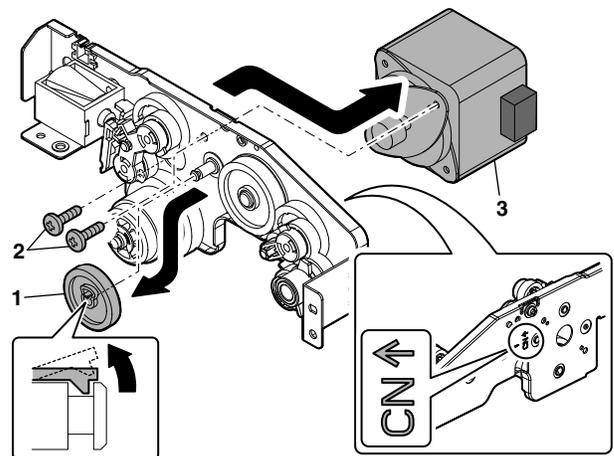


■ Note for reassembly

Connect the connectors according to the arrow indication marked on the motor mounting plate.

G. Shutter solenoid

(1) Shutter solenoid unit removal

- 1) Remove the harness from the edge saddle.
- 2) Remove one screw.
- 3) Remove the shutter solenoid unit.

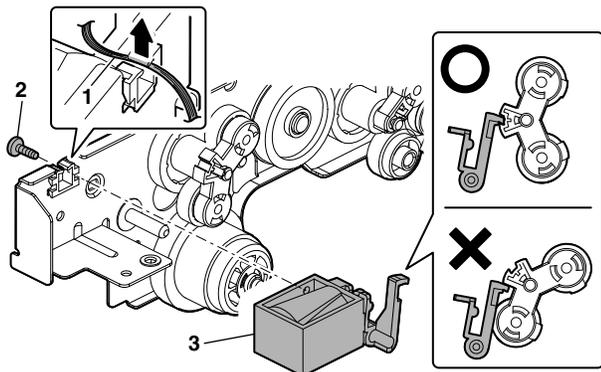


■ Note for reassembly

Install the paper feed solenoid under the state where the projection of the paper feed planet arm is lower than the paper feed solenoid lever.

(2) Shutter solenoid removal

- 1) Remove the paper feed solenoid spring from the shutter solenoid.
- 2) Remove the paper feed solenoid lever.

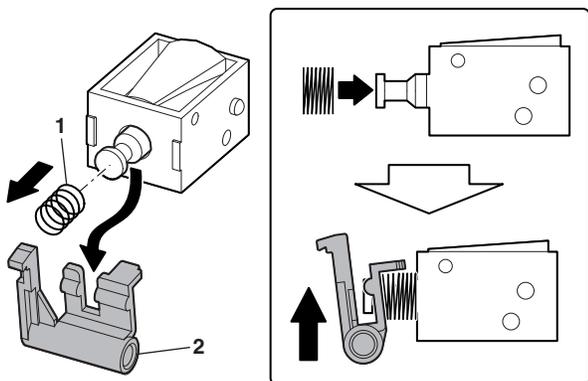


■ Note for reassembly

When assembling, use care so that the paper feed solenoid spring does not extend out of the paper feed solenoid lever.

H. Pickup roller, take-up roller


(1) Paper feed unit removal

- 1) Remove the E-ring.
- 2) Slide the bearing.
- 3) Remove the stopper arm.
- 4) Release the paper feed shaft pressure release spring.
- 5) Remove the paper feed unit.
- 6) Remove the paper feed shaft release arm.

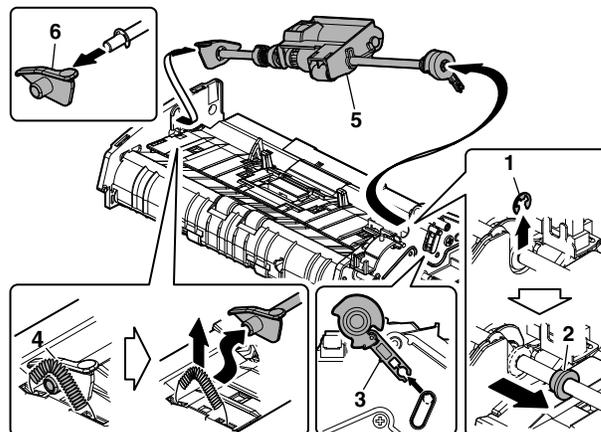


(2) Parts removal

- 1) Remove the E-ring.
- 2) Remove the resin E-ring.
- 3) Slide the shaft.
- 4) Remove the spring pin.

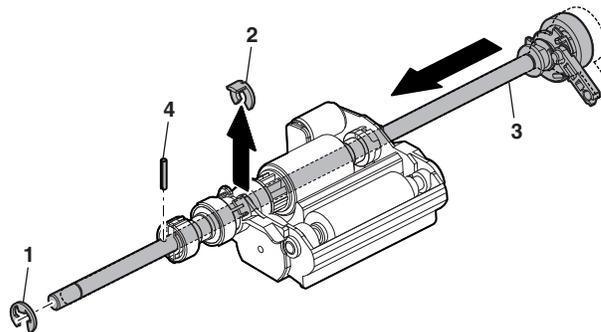


(3) Paper feed roller removal

- 1) Pull out the shaft.
- 2) Remove the clutch boss and the clutch spring from the pickup roller.

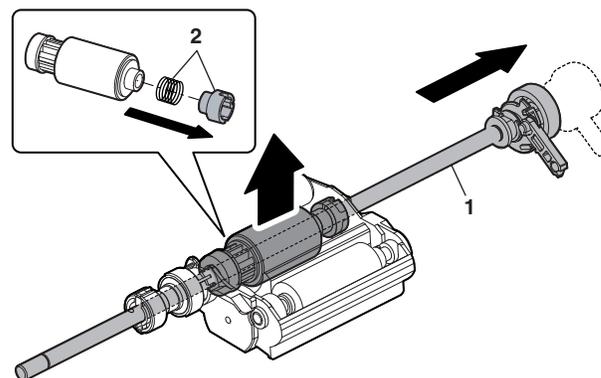


(4) Pickup roller removal

- 1) Disengage one pawl.
- 2) Remove the pickup drive gear from the pickup roller.

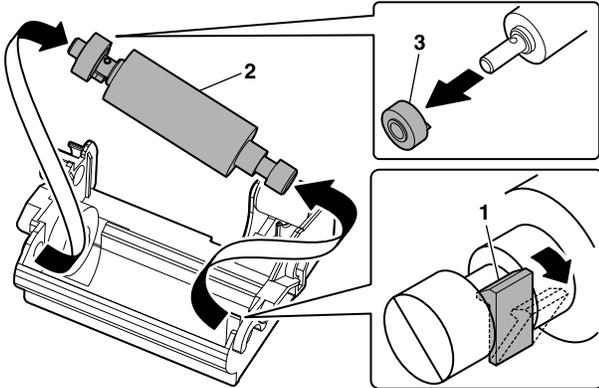

(3) Paper empty sensor removal


- 1) Disconnect one connector.
- 2) Remove the paper empty sensor.

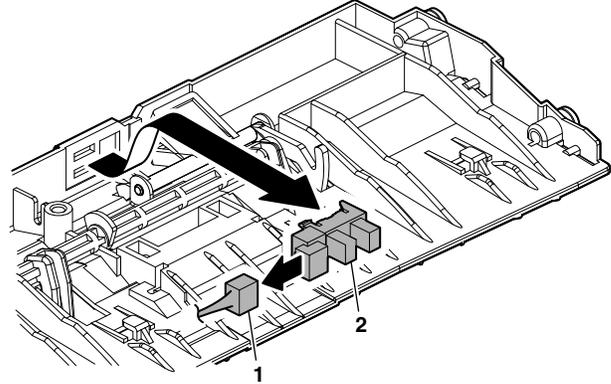

I. Paper empty sensor


(1) Paper feed PG unit removal

- 1) Remove the harness.
- 2) Remove three screws.
- 3) Lift the front side, and remove the paper feed PG unit.

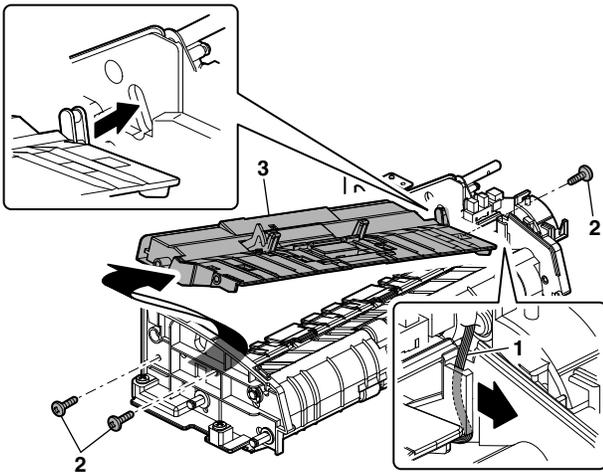

(2) Paper feed PG support plate removal


- 1) Remove one screw.
- 2) Slide and remove the paper feed PG support plate.

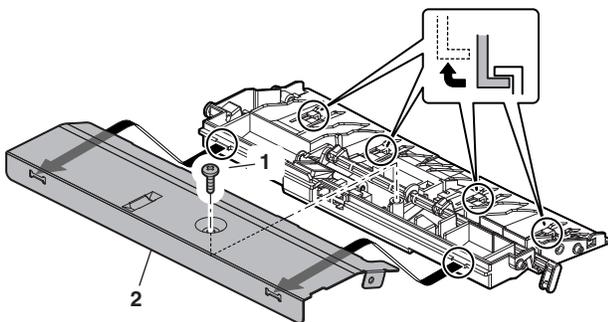

J. PS roller


(1) Parts removal

- 1) Remove the gear.
- 2) Remove the pulley.
- 3) Remove the belt.

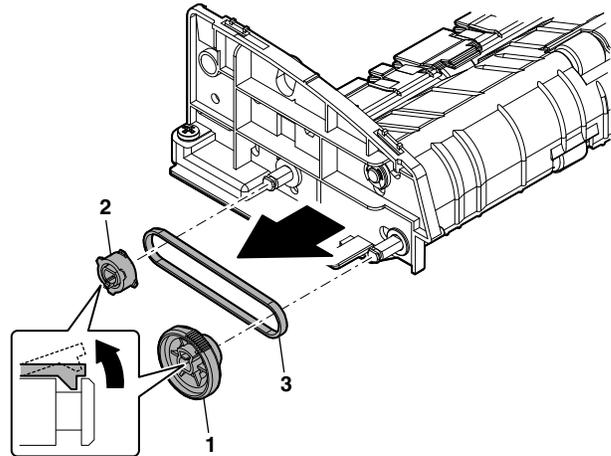

(2) Parts removal

- 1) Remove one screw.
- 2) Remove the earth wire.
- 3) Remove the E-ring.
- 4) Remove the bearing.
- 5) Open the scan plate.

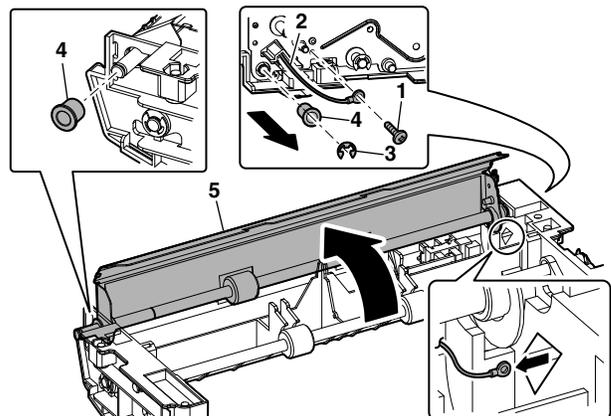


■ Note for reassembly

Pass the earth wire through the hole to the outside of the frame, then install parts.


(3) Scan plate removal

- 1) Remove the scan plate.

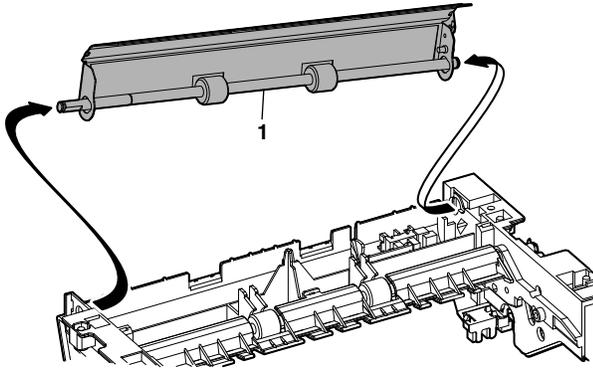

(4) PS roller removal


- 1) Remove the PS roller.

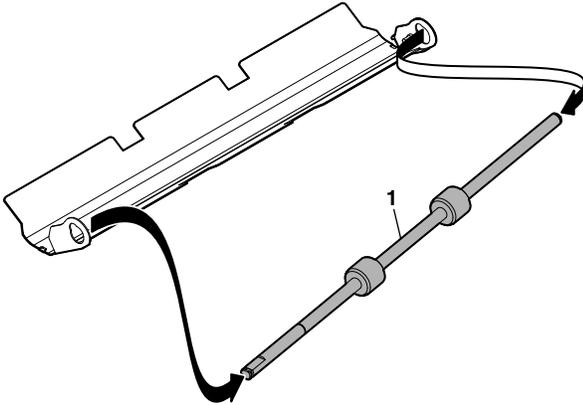

K. Upper transport roller

(1) Parts removal

- 1) Remove the gear.
- 2) Remove the upper transport release arm.
- 3) Remove the bearing.
- 4) Remove the E-ring.
- 5) Remove the bearing.

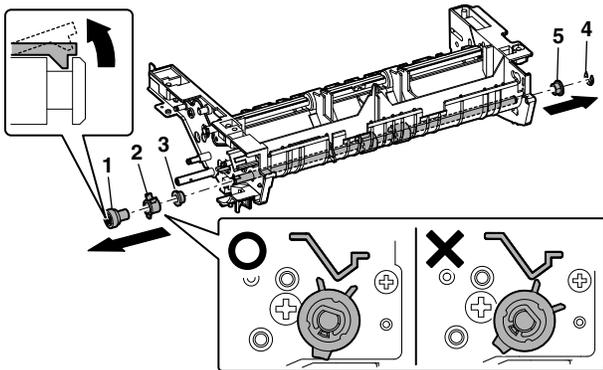


■ Note for reassembly

Use care so that the rib on the upper transport release arm catches the guide.


(2) Upper transport roller removal

- 1) Remove the upper transport roller.

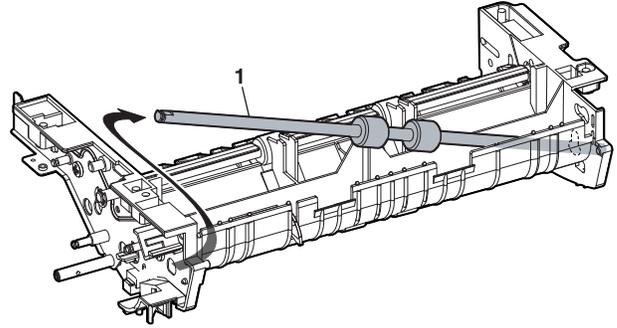

L. Paper sensor


- 1) Disconnect one connector.
- 2) Remove the paper sensor.

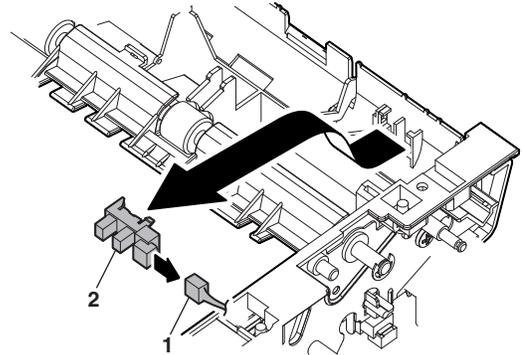

M. Lower transport roller


(1) Reverse self-weight gate removal

- 1) Remove the reverse self-weight gate.

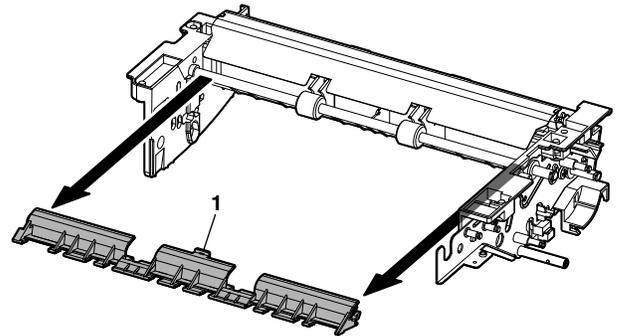

(2) Lower transport roller removal


- 1) Remove the E-ring.
- 2) Remove the gear.
- 3) Remove the bearing.
- 4) Remove the lower transport roller.

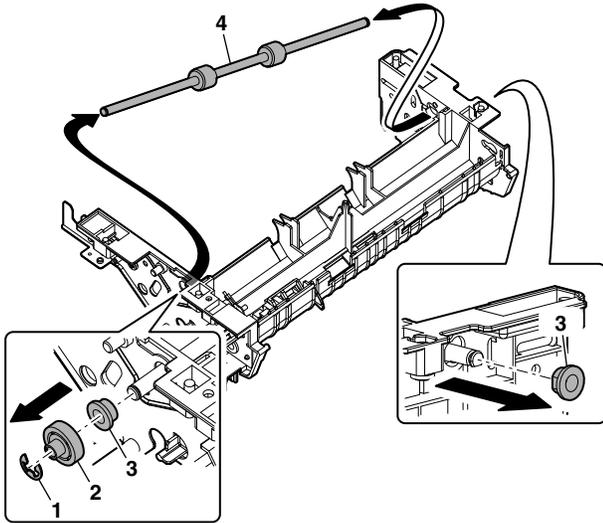

N. Paper exit sensor


(1) OC mat removal

- 1) Remove the OC mat.

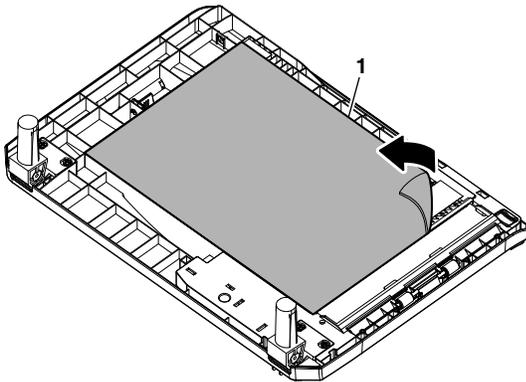

(2) Paper exit sensor removal

- 1) Disconnect one connector.
- 2) Remove the paper exit sensor.

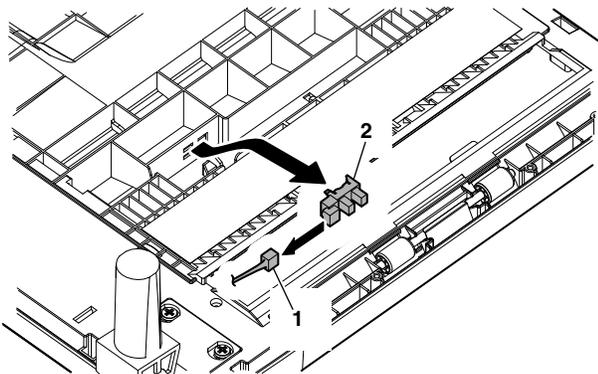

[9] ADJUSTMENTS

1. Optical section

A. Copy magnification ratio adjustment

The copy magnification ratio must be adjusted in the main scanning direction and in the sub scanning direction. To adjust, use SIM 48-1.

(1) Outline

The main scanning (front/rear) direction magnification ratio adjustment is made automatically or manually.

Automatic adjustment: The width of the reference line marked on the shading correction plate is scanned to perform the main scanning (front/rear) direction magnification ratio adjustment automatically.

Manual adjustment: The adjustment is made by [Numeric] keys operations. (In either of the automatic and manual adjustments, the zoom data register set value is changed for adjustment.)

The magnification ratio in the sub scanning direction is adjusted by changing the carriage (scanner) scanning speed.

(2) Main scanning direction magnification ratio adjustment

a. Cases when the adjustment is required


- 1) When the main PWB is replaced.
- 2) When the EEPROM in the main PWB is replaced.
- 3) When "U2" trouble occurs.
- 4) When repairing or replacing the optical section.

b. Necessary tools

- Screwdriver (+)
- Scale

c. Adjustment procedure

- 1) Set the scale vertically on the document table. (Use a long scale for precise adjustment.)

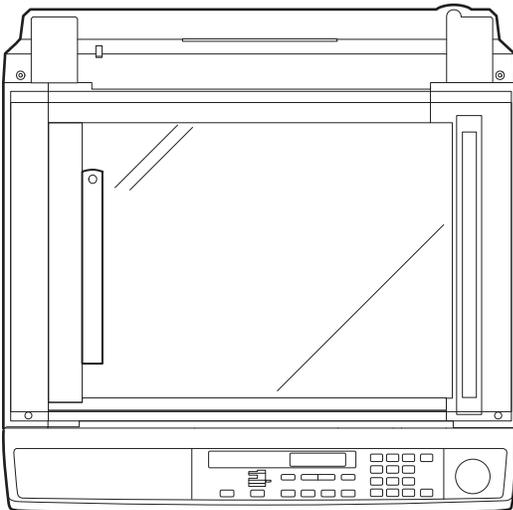


- 2) Set the copy magnification ratio to 100%.
- 3) Make a copy on A4 or 8 1/2" x 11" paper.
- 4) Measure the length of the copied scale image.

- 5) Calculate the main scanning direction magnification ratio.

Main scanning direction magnification ratio

$$= \frac{\text{Copy image dimensions}}{\text{Original dimension}} \times 100 (\%)$$

(When a 100mm scale is used as the original.)

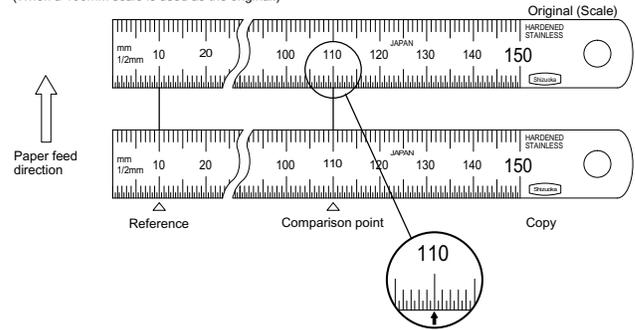

- 6) Check that the copy magnification ratio is within the specified range. If it is not within the specified range, perform the following procedures.

- 7) Execute SIM 48-1 to select the main scanning direction copy magnification ratio adjustment mode.

To select the adjustment mode, use the [◀] [▶] key.

In the case of the automatic adjustment, when the START switch is pressed, the mirror base unit moves to the white plate for shading to scan the width of the reference line, calculating the correction value and displaying and storing this value.

After execution of the automatic adjustment, go out from the simulation mode and make a copy to check the magnification ratio.

If the magnification ratio is not in the specified range (100 ± 1.0%), manually adjust as follows.

Adjustment mode	Display item	LED	Default
Main scan direction magnification ratio	F-R	PRINT mode lamp	50
OC mode sub scan direction magnification ratio	SCAN	SCAN mode lamp	50

- 8) Enter the new set value of main scanning direction copy magnification ratio with the [Numeric] key and press the [START] key.

- 9) Change the set value and repeat the adjustment until the ratio is within the specified range.

When the set value is changed by 1, the magnification ratio is changed by 0.1%.

(3) Sub scanning direction copy magnification ratio

a. Cases when the adjustment is required


- 1) When the scanner unit drive section is disassembled or the part is replaced.
- 2) When the main PWB is replaced.
- 3) When the EEPROM in the main PWB is replaced.
- 4) When "U2" trouble occurs.

b. Necessary tools

- Scale


c. Adjustment procedure

- 1) Set the scale on the document table as shown below. (Use a long scale for precise adjustment.)

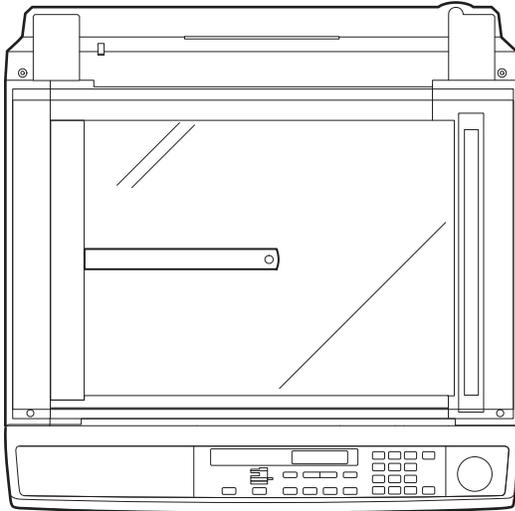

- 2) Set the copy magnification ratio to 100%.
- 3) Make a copy on A4 or 8 1/2" x 11" paper.
- 4) Measure the length of the copied scale image.
- 5) Calculate the sub scanning direction copy magnification ratio using the formula below.

$$= \frac{\text{Copy image dimensions}}{\text{Original dimension}} \times 100 (\%)$$

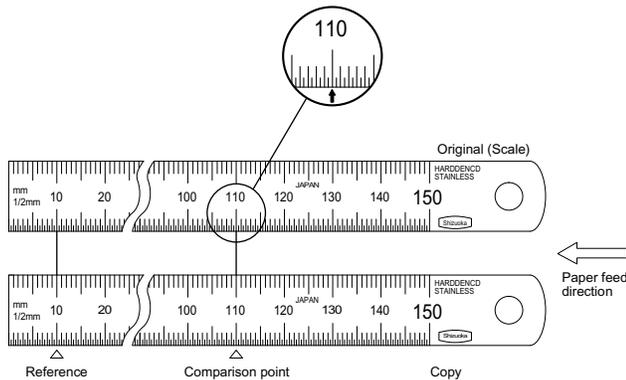

- 6) Check that the actual copy magnification ratio is within the specified range. (100 ± 1.0%).
If it is not within the specified range, perform the following procedures.
- 7) Execute SIM 48-1 to select the sub scanning direction copy magnification ratio adjustment mode.
To select the adjustment mode, use the [◀] [▶] key. SCAN mode lamp ON.
- 8) Enter the new set value of sub scanning direction copy magnification ratio with the [Numeric] keys and press the [START] key.

Repeat procedures 1) - 8) until the sub scanning direction actual copy magnification ratio in 100% copying is within the specified range.

When the set value is changed by 1, the magnification ration is changed by 0.1%.

B. Image position adjustment

There are following eleven kinds of image position adjustments, which are made by laser control except for the image scan start position adjustment. For the adjustments, SIM 50-01 and 50-10 are used.

No.	Mode	SIM	Remarks
1	Print start position (Main cassette paper feed)	50-01	
2	Print start position (Manual paper feed)	50-01	
3	Image lead edge void amount	50-01	
4	Image scan start position	50-01	
5	Image rear edge void amount (Cassette paper feed)	50-01	
6	Image rear edge void amount (Manual paper feed)	50-01	
7	Print center offset (Main cassette paper feed)	50-10	
8	Print center offset (Manual paper feed)	50-10	

To select the adjustment mode with SIM 50-01, use the [◀] [▶] key.

The relationship between the adjustment modes and the lighting lamps are as shown in the table below.

Adjustment mode	Display item	Lamp ON
Print start position (Main cassette paper feed)	TRAY1	COPY mode lamp Main cassette lamp
Print start position (Manual paper feed)	MFT	COPY mode lamp Manual paper feed lamp
Image lead edge void amount	DEN-A	PRINT mode lamp Main cassette lamp
Image scan start position	RRC-A	SCAN mode lamp Main cassette lamp
Image rear edge void amount (Cassette paper feed)	DEN-B	COPY mode lamp PRINT mode lamp SCAN mode lamp Main cassette lamp
Image rear edge void amount (Manual paper feed)	RRC-B	COPY mode lamp PRINT mode lamp Manual paper feed lamp


To select the adjustment mode with SIM 50-10, use the [◀] [▶] key.

The relationship between the adjustment modes and the lighting lamps are as shown in the table below.

Adjustment mode	Display item	Lamp ON
Print center offset (Main cassette paper feed)	TRAY1	COPY mode lamp Main cassette lamp
Print center offset (Manual paper feed)	MFT	COPY mode lamp Manual paper feed lamp
2nd print center offset (Main cassette paper feed)	SIDE2	PRINT mode lamp Main cassette lamp


(1) Lead edge adjustment

- 1) Set a scale to the center of the paper lead edge guide as shown below, and cover it with B4 or 8 1/2" x 14" paper.

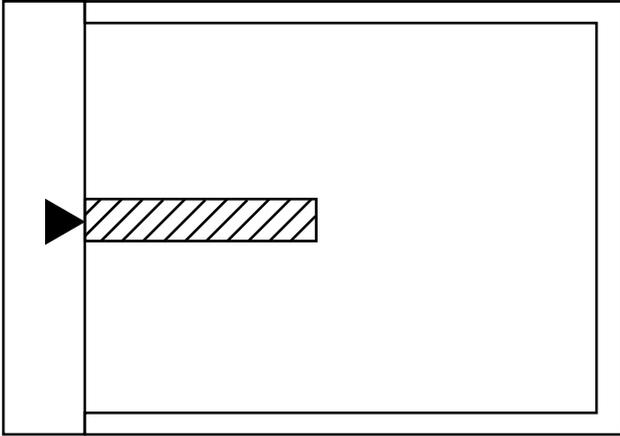


- 2) Execute SIM 50-01
 - 3) Set the print start position (AE mode lamp/COPY mode lamp ON) (A), the lead edge void amount (TEXT mode lamp/PRINT mode lamp ON) (B), and the scan start position (PHOTO mode lamp/SCAN mode lamp ON) (C) to 0, and make a copy of a scale at 100%.
 - 4) Measure the image loss (Rmm) of the scale.
Set $C = 10 \times R$ (mm). (Example: Set to 40.)
When the value of C is increased by 10, the image loss is decreased by 1mm. (Default: 50)
 - 5) Measure the distance (Hmm) from the paper lead edge to the image print start position.
Set $A = 10 \times H$ (mm). (Example: Set to 50.)
When the value of A is increased by 10, the image lead edge is moved to the paper lead edge by 1mm. (Default: 50).
 - 6) Set the lead edge void amount to $B = 50$ (2.5mm). (Default: 50)
When the value of B is increased by 10, the void is extended by about 0.1mm. (For 25 or less, however, the void amount is regarded as 0.)
- * The RSPF adjustment is made by adjusting the RSPF image scan start position after OC adjustment.

(Example)

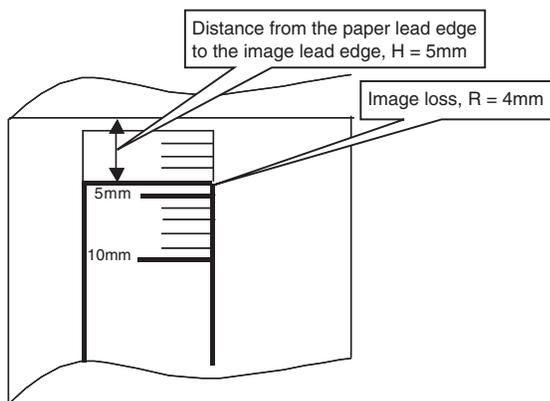


(2) Image rear edge void amount adjustment

- 1) Set a scale to the rear edge section of A4 or 11" x 8 1/2" paper size as shown in the figure below, and cover it with B4 or 8 1/2" x 14" paper.

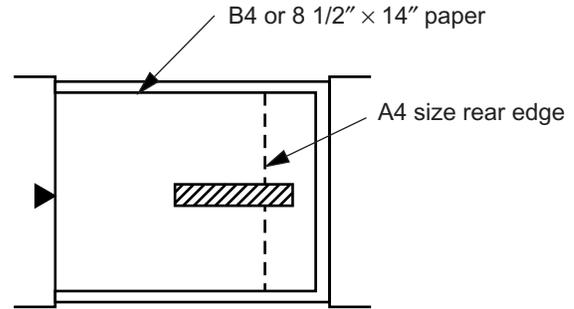

- 2) Execute SIM 50-01 to select the image rear edge void amount adjustment mode.
The set adjustment value is displayed on the copy quantity display.
- 3) Make a copy and measure the void amount of image rear edge.

Void amount (Standard value: 2 - 3mm)

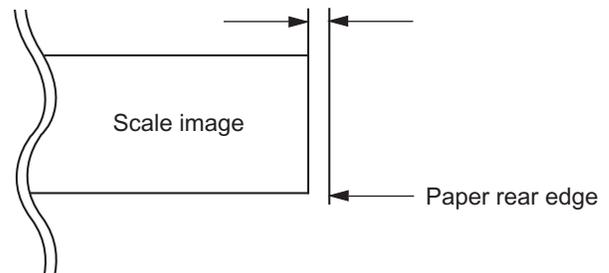


- 4) If the measurement value is out of the specified range, change the set value and repeat the adjustment procedure.
The default value is 50.


Note: The rear edge void cannot be checked with the first sheet after entering the simulation mode, the first sheet after turning off/on the power, or the first sheet after inserting the cassette. Use the second or later sheet to check the rear edge void.

(3) Center offset adjustment

- 1) Set the self-made test chart for the center position adjustment so that its center line is aligned with the center mark of the document guide.
- Test chart for the center position adjustment.
Draw a line at the center of A4 or 8 1/2" x 11" paper in the paper transport direction.

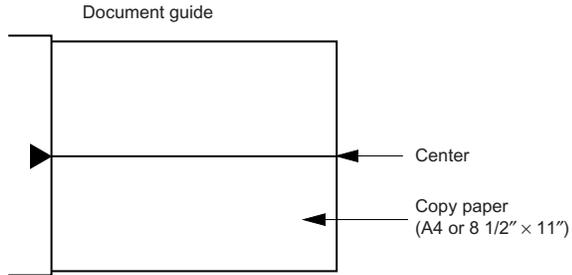

- 2) Execute SIM 50-10 to select the print center offset (cassette paper feed) adjustment mode.
The set adjustment value is displayed on the copy quantity display.
- 3) Make a copy and check that the copied center line is properly positioned.
The standard value is $0 \pm 2\text{mm}$ from the paper center.

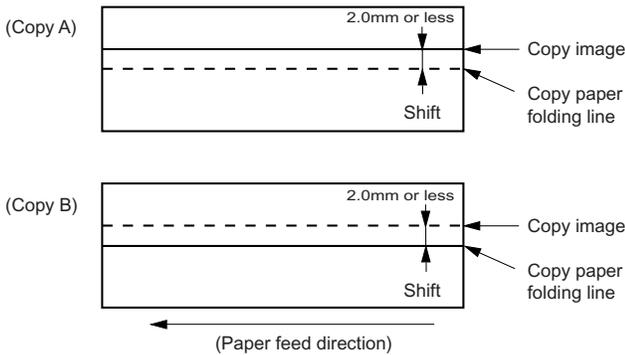

- 4) If the measured value is out of the specified range, change the set value and repeat the adjustment procedure.
When the set value is increased by 1, the copy image is shifted by 0.1mm toward the rear frame.
- For the manual paper feed, change the manual paper feed adjustment mode and perform the similar procedures.
- Since the document center offset is automatically adjusted by the CCD which scan the reference lines (F/R) on the back of document guide, there is no need to adjust manually.

2. Copy density adjustment

A. Copy density adjustment timing

The copy density adjustment must be performed in the following cases:


- When maintenance is performed.
- When the developing bias/grid bias voltage is adjusted.
- When the optical section is cleaned.
- When a part in the optical section is replaced.
- When the optical section is disassembled.
- When the OPC drum is replaced.
- When the main control PWB is replaced.
- When the EEPROM on the main control PWB is replaced.
- When the memory trouble (U2) occurs.

B. Note for copy density adjustment

- 1) Arrangement before execution of the copy density adjustment
 - Clean the optical section.
 - Clean or replace the charger wire.
 - Check that the voltage at the high voltage section and the developing bias voltage are in the specified range.

C. Necessary tool for copy density adjustment

- One of the following test charts:
UKOG-0162FCZZ, UKOG-0089CSZZ, KODAK GRAY SCALE
- B4 (14" x 8 1/2") white paper
- The user program AE setting should be "3."



Test chart comparison table

UKOG-0162FCZZ DENSITY No.	1	2	3	4	5	6	7	8	9	10	W
UKOG-0089CSZZ DENSITY No.	0.1	0.2	0.3						0.5	1.9	0
KODAK GRAY SCALE		1	2			3		4		19	A

D. Features of copy density adjustment

For the copy density adjustment, the image data shift function provided in the image process LSI is used.

List of the adjustment modes

Auto mode	Brightness 1 step only
Manual mode	Brightness 5 steps. Adjustment of only the center brightness is made.
Photo mode	Brightness 5 steps. Adjustment of only the center brightness is made.
Manual T/S mode	Brightness 5 steps. Adjustment of only the center brightness is made.
T/S Auto mode	Brightness 1 step only

E. Copy density adjustment procedure

Use SIM 46-1 to set the copy density for each copy mode.

For selection of modes, use the [◀] [▶] key.


(1) Test chart (UKOG-0162FCZZ) setting

- Place the test chart so that its edge is aligned with the A4 (Letter) reference line on the document table. Then place a A4 (14" x 8 1/2") white paper on the test chart and close the document cover.



(2) Perform the adjustment in each mode.

- Execute SIM 46-01 (300dpi). To adjust in 600dpi, execute SIM 46-02.
- Select the mode to be adjusted with the [AUTO] key. Set the exposure level to 3 (center) for all adjustment. (Except for the auto mode.)

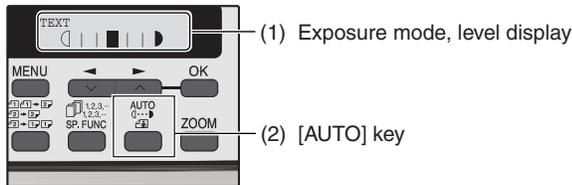

Adjustment mode	Display item	LED	Sharp gray chart adjustment level
Auto mode	AE	COPY mode lamp	"3" is slightly copied.
Text mode	TEXT	PRINT mode lamp	"3" is slightly copied.
Photo mode	PHOTO	SCAN mode lamp	"3" is slightly copied.
Text T/S mode	TSTXT	PRINT mode lamp SCAN mode lamp	"3" is slightly copied.
Auto T/S mode	TSAE	COPY mode lamp SCAN mode lamp	"3" is slightly copied.

- Make a copy.
Check the adjustment level (shown in the above table) of the exposure test chart (Sharp Gray Scale).

Sharp Gray Scale adjustment level	
Non toner save mode	
Toner save mode	

(When too bright): Decrease the value displayed on the copy quantity display.

(When too dark): Increase the value displayed on the copy quantity display.

* The value can be set in the range of 1 - 99.

3. High voltage adjustment


A. Main charger (Grid bias)

Note:

- Use a digital multi meter with internal resistance of 10MΩ or more measurement.
- After adjusting the grid LOW output, adjust the HIGH output. Do not reverse the sequence.

Procedures

- Set the digital multi meter range to DC700V.
- Set the positive side of the test rod to the connector CN11-3 (GRID) of high voltage section of the power PWB and set the negative side to the frame ground (power frame).
- Execute SIM 8-2. (The main charger output is supplied for 30 sec in the grid voltage HIGH output mode.)
- Adjust the control volume (VRG1) so that the output voltage is 580 ± 12V.

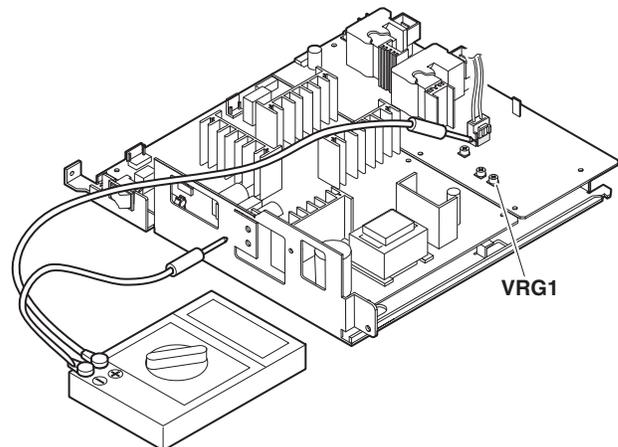


B. DV bias check

- Note:
- A digital multi meter with internal resistance of $1G\Omega$ must be use for correct check.
 - The adjustment volume is locked, and no adjustment can be made.

Procedures

- 1) Set the digital multi meter range to DC500V.
- 2) Set the positive side of the test rod to the connector CN-10-1 (DV BIAS) and set the negative side to the frame ground (power frame).
- 3) Execute SIM 8-1 to output the developing bias for 30sec, and check that the output is $-400 \pm 8V$.

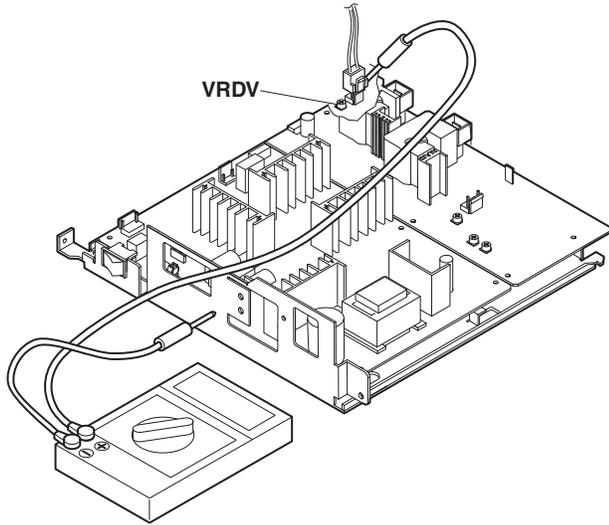

4. Duplex adjustment

A. Adjusting the paper reverse position in memory for duplex copying

This step adjusts the front surface printing (odd-number pages of a document set) in the S-D mode copying and the leading edge position of an image on even-number pages in the D-S mode.

That is, it covers the adjustment of the second surface printing mode (image loss at the front edge of an image) in which image data is once stored in memory.

The image data is read, starting from its front end in the document delivery direction (Reference direction of document setting in the OC mode) and stored in memory.

This stored image data is printed starting at the printing start position, in the order of last-stored data to the first-stored data.


In other words, the front edge image loss of the image can be adjusted by changing the document read end position.

(Adjustment procedure)

- 1) Preparing test chart (Draw a scale at the rear end of one side of a sheet of A4 white paper or letter paper)



- 2) Set the test chart so that the scale is positioned as shown below, in the S-D mode and the D-S mode.

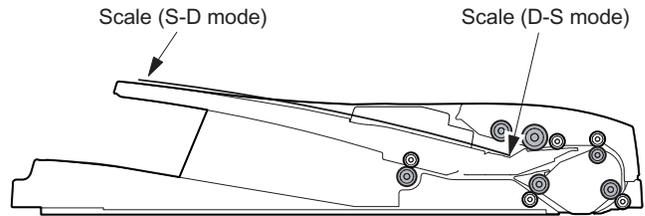



- 3) Execute simulation 50-18.

Mode	Display item	Default
OC memory reverse output position	OC	50
RSPF memory reverse output position	RSPF	50

Select the RSPF memory reverse output position, and press [START] key to make a copy.

Adjust the setting so that the front edge image loss is less than 4.0 mm in the RSPF mode.

An increase of 1 in setting represents an increase of 0.1 mm in image loss.

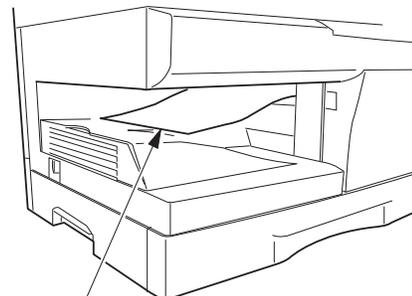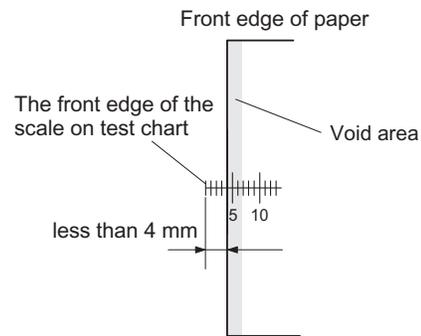

2nd printing surface where scale is printed (lower side)

B. Adjusting trailing edge void in duplex copy mode

This is the adjustment of the first surface printing mode (rear end void) in duplex copying.

In a duplex copying operation, the paper is delivered starting from the rear end of the first printing surface. It is therefore necessary to make a void area at the rear end on the first printing surface to prevent paper jam at the fusing part.

There are two adjustment modes:

- 1) Paper trailing edge void quantity 50-19 (TEXT)
This adjustment is made when the cassette paper size is recognized. The trailing edge void quantity can be adjusted by changing the trailing edge image laser OFF timing.

- 2) Print start position (Duplex back surface) (RSPF) 50-19 (PHOTO)


The size (length) of a document read from the RSPF is detected, the image at the trailing edge of the first printing surface is cut to make a void area. (The adjustment of void quantity at the time when the cassette paper size is not recognized.)

The paper void quantity should be first adjusted before the image cut trailing edge void quantity (RSPF) is adjusted.


(Adjustment procedure)

(1) Paper trailing edge void quantity

- 1) Preparing test chart (Draw a scale at the rear end of one side of a sheet of A/4 white paper or letter paper)
- 2) Set the test chart on the document glass as shown below.

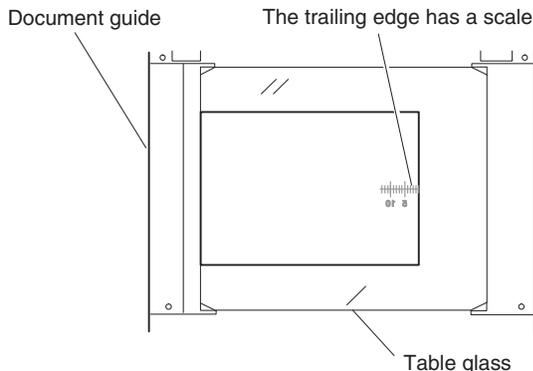

- 3) Using the user simulation [18], set the paper size of the first cassette.
 - Letter paper: 4
 - A4 paper: 3
- 4) Execute SIM 50-19 to turn on the PRINT mode lamp and make the printing mode in OC-D mode. Make a copy of the test chart to check the void area of the scale on the image.

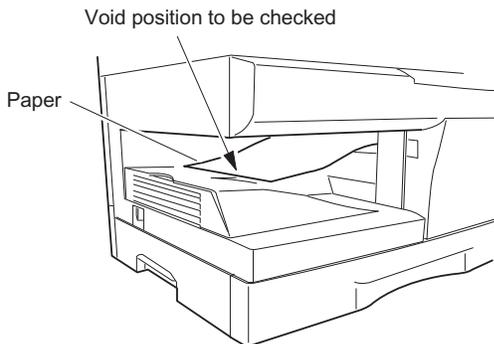


The trailing edge void on the first printing surface is shown above.

Adjust the setting so that the void area is 4 - 5 mm. An increase in 1 of setting represents 0.1 mm in void area.

(2) Print start position (Duplex back surface)

- 1) Set the test chart so that the scale is positioned as shown below.

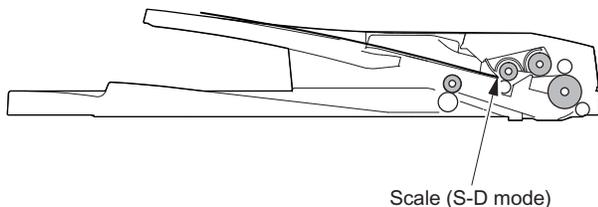

- 2) Execute SIM 50-19 to turn on the SCAN mode lamp and make the printing mode in the S-D mode.
- 3) Remove and reinsert the cassette.

Note: Make sure to carry out this step before making a copy during this adjustment.

- 4) Make a copy and check the void area of the scale on the image. Adjust the setting so that the void area is 2 - 4 mm. An increase of 1 in setting represents an increase of 0.1 mm in void area. Void position to be checked

5. RSPF scan position automatic adjustment

Place a A4 paper (white chart) so that it covers the RSPF scan glass and the OC glass together, and close the RSPF.

When simulation 53-08 is executed, the current adjustment value is displayed as the initial display.

* Default is 1. Adjustment range is 1 - 99. Adjustment unit 1 = about 0.127mm

* If the values are kept as the default values, RSPF scan is not performed properly. The front area of the proper scan position may be scanned.

In case of AUTO, press [START] key, and the mirror unit scans from the home position to the RSPF scan position with the adjustment value displayed. The SPF glass cover edge position is calculated from the difference between the SPF glass cover edge and the OC side document glass CCD output level. If the adjustment is normal, the adjusted value is displayed. If abnormal, the error LED lights up with the current set value displayed.

During the error LED is lighted, when [START] key is pressed again, execution is performed again.

Mode	Display item	Default	LED
RSPF scan position auto adjustment	AUTO	1	COPY mode lamp
RSPF scan position manual adjustment	MANU	1	PRINT mode lamp

Operation


The operation is similar to simulation 46-01. (In MANUAL) OK/ERR display in AUTO.

<When OK>

```
53-08 SPF AUTO
AUTO 100% ** OK
```

<When ERR>


```
53-08 SPF AUTO
AUTO 100% ** ERR
```

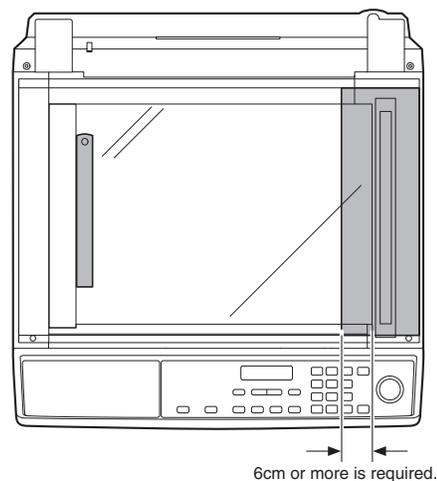

6. RSPF mode sub scanning direction magnification ratio adjustment

Note: Before performing this adjustment, be sure to check that the OC mode adjustment in copying has been completed.

- Put a scale on the original table as shown below, and make a normal copy (100%) on the front and the back surfaces to make a test chart.

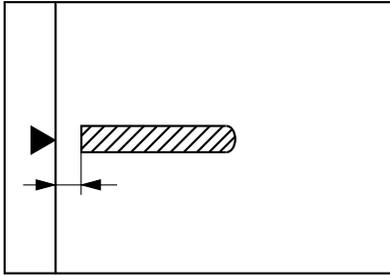

Note: Since the printed copy is used as a test chart, put the scale in parallel with the edge lines.

- Set the test chart on the RSPF and make a duplex copy (D-D or D-S) in the normal ratio (100%).
- Compare the scale image and the actual image. If necessary, perform the following adjustment procedures.
- Execute SIM 48-05.
- The current sub scanning direction magnification ratio correction value is displayed in two digits on the display section.
- Enter the set value and press the [START] key.

When adjusting the RSPF, use [2-SIDED COPY] key to select single/duplex after entering the one page print mode, performing 2-page single copy.

Mode	Display item	Default
Sub scan magnification ratio adjustment on the surface of RSPF document	SIDE1	50
Sub scan magnification ratio adjustment on the surface of RSPF document	SIDE2	50

* When there is no document in RSPF, copy is inhibited.

<Adjustment specification>

Adjustment mode	Spec value	SIM	Set value	Setting range
Sub scanning direction magnification ratio (RSPF mode)	At normal: $\pm 1.0\%$	48-5	Add 1: 0.1% increase Reduce 1: 0.1% decrease	1 - 99

7. Automatic black level correction

a. Cases when the adjustment is required


- When the main PWB is replaced.
- When the EEPROM in the main PWB is replaced.
- When "U2" trouble occurs.
- When repairing or replacing the optical section.

b. Adjustment procedure

Used to acquire the black level target value used for the black level adjustment of white balance.

When SIM 63-02 is executed, the current correction value is displayed in 3 digits of 12bit hexadecimal number.

Place the gray gradation chart (UKOG-0162FCZZ) used as the correction document so that the density 10 (black side) comes on the left side and that the chart is upside down at the center of the plate left center.

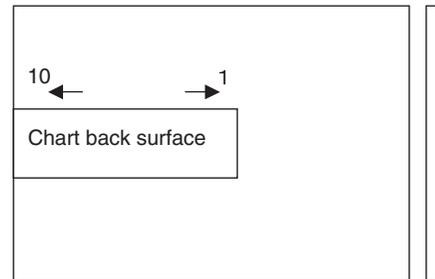

When START key is pressed, the mirror base unit scans the chart and calculates the correction value.

After completion of correction, the corrected value is displayed on the display section.

* Default: 0

* If the value is set to the default, operation is made with 0x60.

c. Operation

- Initial display

```
63-02 BLACK LEVEL
      0
```

- [ENTER]/[START] key: Correction start

```
63-02 BLACK LEVEL
EXECUTING...
```

<During canceling - When [Clear]/[Clear All] key is pressed->

After canceling, the machine goes into the sub code entry standby mode.

```
THE JOB IS BEING
CANCELED.
```

- After execution

```
63-02 BLACK LEVEL
      *** OK
```

- In case of an error

```
63-02 BLACK LEVEL
      *** ERR
```

[10] SIMULATION, TROUBLE CODES

1. Entering the simulation mode

To enter the serviceman simulation mode, press the keys as follows:

[#] key → [*] key → [Clear] key → [*] key

To cancel the simulation mode, press the [Clear All] key.

2. Key rule

- [Numeric] key: Entry of MAIN CODE/SUB CODE
Selection of an item
Setup of an adjustment value in case of simulations for adjustment
- [◀] [▶] key: Selection of MAIN CODE/SUB CODE
Selection of an item
- [ENTER]/[START] key: Settlement
<In case of simulations for print>
[ENTER] key: Settlement (Without print)
[START] key: Settlement / Print
- [Clear] key: (Interrupting operation check) Returns to the upper hierarchy.
In case of simulation of operation check, terminates the operations.
- [Clear All] key: Exits from the simulation mode.
For a simulation of adjustment, the display returns to the initial display (00-00).

3. List of simulations

Sim No.	Sub code	Operation
01	01	Mirror scan operation
	02	Mirror home position sensor (MHPS) status display
	06	Aging of mirror scanning
02	01	RSPF aging operation
	02	RSPF sensor status display
	03	RSPF Motor ON
	08	RSPF paper feed solenoid operation check
	09	RSPF reverse solenoid operation check
03	03	Shifter operation check
05	01	Operation panel display check
	02	Fusing lamp, cooling fan operation check
	03	Copy lamp ON
06	01	Paper feed solenoid ON
	02	Resist solenoid ON
07	01	Warm-up display and aging with jam
	06	Intermittent aging
	08	Shift to copy with the warm-up display
08	01	Developing bias
	02	Main charger (Grid high)
	03	Grid voltage (Low)
	06	Transfer charger
09	01	Duplex motor normal rotation operation check (MX-B201D only)
	02	Duplex motor reverse operation check (MX-B201D only)
	04	Duplex motor rotation speed adjustment (MX-B201D only)
10		Toner motor aging
14		Cancel of troubles other than U2
16		Cancel of U2 trouble
20	01	Maintenance counter clear
21	01	Maintenance cycle setting

Sim No.	Sub code	Operation	
22	01	Maintenance counter display	
	02	Maintenance preset display	
	04	JAM total counter display	
	05	Total counter display	
	06	Developer counter display	
	08	RSPF counter display	
	11	FAX-related counter display	
	12	Drum counter display	
	13	CRUM type display	
	14	ROM version display	
	16	Duplex counter display (MX-B201D only)	
	17	Copy counter display	
	18	Printer counter display	
	19	Scanner mode counter display	
	20	Password display	
24	01	JAM total counter clear	
	04	RSPF counter clear	
	05	Duplex counter clear (MX-B201D only)	
	06	Developer counter clear	
	07	Drum counter clear	
	08	Copy counter clear	
	09	Printer counter clear	
	10	FAX counter clear (When MX-FX12 is installed)	
	13	Scanner counter clear	
	14	RSPF JAM total counter clear	
	15	Scanner mode counter clear	
	25	01	Main motor operation check (Cooling fan motor rotation check)
		10	Polygon motor ON
	26	02	RSPF setup
		03	2ND TRAY setup
04		Machine duplex setup (DPLX)	
06		Destination setup	
07		Machine conditions check	
20		Rear edge void setup	
30		CE mark support control ON/OFF	
37		Cancel of stop at developer life over	
39		Memory capacity check	
40		Polygon motor OFF time setup (Time required for turning OFF after completion of printing)	
42		Transfer ON timing control setup	
43		Side void setup	
54		γ life correction setting	
62		Energy-save mode copy lamp setup	
69	Use to set the operation conditions for toner near end		
30	01	Paper sensor status display	
41	06	OC cover float detection level adjustment (Only when RSPF installed)	
	07	OC cover float detection margin setting (Only when RSPF installed)	
43	01	Fusing temperature setting (Normal copy)	
	04	Fusing temperature setting in multi copy	
	05	Fusing temperature setup in duplex copy (MX-B201D only)	
	14	Fusing start temperature setting	

Sim No.	Sub code	Operation	
▲	46	01	Copy density adjustment (300dpi)
		02	Copy density adjustment (600dpi)
		12	Density adjustment in the FAX mode (Collective adjustment) (When MX-FX12 is installed)
		13	Density adjustment in the FAX mode (Normal text) (When MX-FX12 is installed)
		14	Density adjustment in the FAX mode (Fine text) (When MX-FX12 is installed)
		15	Density adjustment in the FAX mode (Super fine) (When MX-FX12 is installed)
		18	Image contrast adjustment (300dpi)
		19	Exposure mode setup
		20	RSPF exposure correction
		29	Image contrast adjustment (600dpi)
		30	AE limit adjustment
		31	Image sharpness adjustment
		32	Copier color reproduction setup
		39	FAX mode sharpness adjustment (When MX-FX12 is installed)
▲	48	01	Front/rear (main scanning) direction and scan (sub scanning) direction magnification ratio adjustment
		05	RSPF mode sub scan direction magnification ratio in copying
▲	49	01	MCU Download mode
		02	ANB Download mode
▲	50	01	Lead edge image position
		06	Copy lead edge position adjustment (RSPF)
		10	Center offset adjustment
		12	Document off-center adjustment
		18	Memory reverse position adjustment in duplex copy
		19	Duplex copy rear edge void adjustment (MX-B201D only)
	27	OC rear read edge position adjustment (REAR READ AREA)	
	51	02	Resist quantity adjustment
	53	08	RSPF scan position automatic adjustment
	61	03	Polygon motor check (HSYNC output check)
▲	63	01	Shading check
		02	Black level automatic correction
		12	Light quantity stabilization wait time setting
		13	Light quantity stabilization band setting
	64	01	Self print
▲	66	01	FAX soft SW setting (When MX-FX12 is installed)
		02	FAX soft SW initializing (excluding the adjustment values) (When MX-FX12 is installed)
		03	FAX PWB memory check (When MX-FX12 is installed)
		04	Signal send mode (Max. value) (When MX-FX12 is installed)
		05	Signal send mode (Soft SW set value) (When MX-FX12 is installed)
		10	Image memory content clear (When MX-FX12 is installed)
		13	Dial test (When MX-FX12 is installed)
		17	DTMF signal send (Max. value) (When MX-FX12 is installed)
		18	DTMF signal send (Soft SW set value) (When MX-FX12 is installed)
		21	FAX information print (When MX-FX12 is installed)

4. Descriptions of various simulations

Main code	Sub code	Contents	Details of function/operation										
1	01	Mirror scan operation	<p>[Function] When [ENTER]/[START] key is pressed, the home position is checked and the mirror base performs full scan at the speed of the set magnification ratio. During operation, the set magnification ratio is displayed. The mirror home position sensor status is displayed with the "Copy mode lamp". (When the mirror is in the home position, the lamp lights up.) During operation, the copy lamp lights up. When [Clear] key is pressed, if the operation is on the way, it is terminated and the machine goes to the sub code entry standby mode.</p> <p>[Operation] 1) Initial display <div style="border: 1px solid black; padding: 2px; display: inline-block;">01-01 SCAN CHK - 100% +</div></p> <p>2) [ZOOM] key <div style="border: 1px solid black; padding: 2px; display: inline-block;">01-01 SCAN CHK - 78% +</div></p> <p>3) [ENTER]/[START] key <div style="border: 1px solid black; padding: 2px; display: inline-block;">01-01 SCAN CHK EXECUTING... - 78% +</div></p> <p>2) [◀] key <div style="border: 1px solid black; padding: 2px; display: inline-block;">01-01 SCAN CHK - 99% +</div></p> <p>2) [▶] key <div style="border: 1px solid black; padding: 2px; display: inline-block;">01-01 SCAN CHK - 101% +</div></p>										
	02	Mirror home position sensor (MHPS) status display	<p>[Function] Monitors the mirror home position sensor, and makes the "Copy mode lamp". Turn on during the sensor ON status.</p> <p>[Operation] 1) Initial display <div style="border: 1px solid black; padding: 2px; display: inline-block;">01-02 MHP-SENSOR EXECUTING...</div></p>										
	06	Aging of mirror scanning	<p>[Function] When [ENTER]/[START] key is pressed, the mirror base performs full scan at the speed of the set magnification ratio. During operation, the set magnification ratio is displayed. After 3sec, the mirror base performs full scan again.</p> <p>[Operation] The operation is similar to simulation 1-01.</p>										
2	01	RSPF aging operation	<p>[Function] When [ENTER]/[START] key is pressed, the set magnification ratio is obtained. For the SPF, the single-face document transport is performed. For the RSPF, the duplex document transport is performed. However, the operating conditions don't matter and the operation is not stopped even in case of a jam. Also the magnification ratio is displayed on the LCD/display.</p> <p>[Operation] The operation is similar to simulation 1-01.</p>										
	02	RSPF sensor status display	<p>[Function] The ON/OFF status of the RSPF sensors can be checked with the LCD. When a sensor is ON, the sensor name is displayed on the LCD.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Sensor</th> <th>Display item</th> </tr> </thead> <tbody> <tr> <td>Document set sensor</td> <td>SPID</td> </tr> <tr> <td>RSPF document transport sensor</td> <td>SPPD</td> </tr> <tr> <td>RSPF paper feed cover open/close sensor</td> <td>SDSW</td> </tr> <tr> <td>RSPF paper exit sensor</td> <td>SPOD</td> </tr> </tbody> </table> <p>[Operation] 1) Initial display <div style="border: 1px solid black; padding: 2px; display: inline-block;">02-02 SPF SENSOR</div></p> <p>2) When the sensor is ON: <div style="border: 1px solid black; padding: 2px; display: inline-block;">02-02 SPF SENSOR SPID SPPD SDSW SPOD</div></p>	Sensor	Display item	Document set sensor	SPID	RSPF document transport sensor	SPPD	RSPF paper feed cover open/close sensor	SDSW	RSPF paper exit sensor	SPOD
	Sensor	Display item											
Document set sensor	SPID												
RSPF document transport sensor	SPPD												
RSPF paper feed cover open/close sensor	SDSW												
RSPF paper exit sensor	SPOD												
03	RSPF Motor ON	<p>[Function] When [ENTER]/[START] key is pressed, the motor rotates for 10sec at the speed corresponding to the set magnification ratio.</p> <p>[Operation] The operation is similar to simulation 1-01.</p>											

Main code	Sub code	Contents	Details of function/operation												
5	02	Fusing lamp, cooling fan operation check	<p>[Function] When [ENTER]/[START] key is pressed, the fusing lamp repeats ON for 500ms and OFF for 500ms 5 times. During this period, the cooling fan motor rotates.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">05-02 HT LAMP CHK EXECUTING...</div>												
	03	Copy lamp ON	<p>[Function] When [ENTER]/[START] key is pressed, the copy lamp turns ON for 5sec.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">05-03 C-LAMP CHK EXECUTING...</div>												
6	01	Paper feed solenoid ON	<p>[Function] When [ENTER]/[START] key is pressed, the selected paper feed solenoid repeats ON for 500ms and OF for 500ms 20times. When tray select key (or [Numeric] key or [◀] [▶] key for the LCD model) is pressed, the paper feed solenoid setting is switched.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>CPFS1</td> <td></td> </tr> <tr> <td>1</td> <td>CPFS2</td> <td>Operation is possible only when No. 2 cassette is installed.</td> </tr> <tr> <td>2</td> <td>MPFS</td> <td></td> </tr> </tbody> </table> <p>[Operation] 1) Initial display 2) [Numeric] key or [▶] key 3) [ENTER]/[START] key</p> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px; width: 30%;">06-01 PSOL CHK 0:CPFS1</div> <div style="border: 1px solid black; padding: 2px; width: 30%;">06-01 PSOL CHK 1:CPFS2</div> <div style="border: 1px solid black; padding: 2px; width: 30%;">06-01 PSOL CHK EXECUTING...</div> </div> <p>2) [Numeric] key or [◀] key 4) Returns to the initial display.</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">06-01 PSOL CHK 2:MPFS</div>	Code number	Setting	Remark	0	CPFS1		1	CPFS2	Operation is possible only when No. 2 cassette is installed.	2	MPFS	
	Code number	Setting	Remark												
0	CPFS1														
1	CPFS2	Operation is possible only when No. 2 cassette is installed.													
2	MPFS														
02	Resist solenoid ON	<p>[Function] When [ENTER]/[START] key is pressed, the resist solenoid repeats ON for 500ms and OFF for 500ms 20 times.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">06-02 RES.R SOL CHK EXECUTING...</div>													
7	01	Warm-up display and aging with jam	<p>[Function] Copying is repeated to make the set quantity of copies. When the simulation is executed, warm-up is started and warm-up time is added for every second from 0 and displayed. When warm-up is completed, addition is stopped. When [Clear All] key is pressed, the ready lamp lights up. After that, enter the copy quantity with [Numeric] key and press [ENTER]/[START] key to repeat copying of the set quantity (interval 0sec). To cancel the simulation, turn off the power or execute a simulation which causes hardware reset.</p> <p>[Operation] 1) Initial display 2) After 10sec</p> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px; width: 45%;">07-01 W-UP/AGING 0</div> <div style="border: 1px solid black; padding: 2px; width: 45%;">07-01 W-UP/AGING 10</div> </div>												

Main code	Sub code	Contents	Details of function/operation
▲	9	01	<p>Duplex motor normal rotation operation check (MX-B201D only)</p> <p>[Function] Use the duplex motor Bios to drive the duplex motor in the normal direction (paper exit direction) for 30sec. After completion of this process, the machine goes into the sub code entry standby mode.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">09-01 DPLX ROT. EXECUTING...</div>
		02	<p>Duplex motor reverse operation check (MX-B201D only)</p> <p>[Function] Use the duplex motor Bios to drive the duplex motor in the reverse direction for 30sec. After completion of this process, the machine goes into the sub code entry standby mode.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">09-02 DPLX ROT.REV. EXECUTING...</div>
		04	<p>Duplex motor rotation speed adjustment (MX-B201D only)</p> <p>[Function] When this simulation is executed, the currently set value is displayed. Enter the adjustment value with [Numeric] key and press [ENTER]/[START] key. The entered value is stored and the machine goes into the sub code entry standby mode. The greater the set value is, the higher the speed is. The smaller the set value is, the lower the speed is. (Setting range: 1 - 13, Default: 6)</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">09-04 DPLX ROT.SPEED 6 (1-13)</div> <p>2) [Numeric] key</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">09-04 DPLX ROT.SPEED 5 (1-13)</div> <p>3) [ENTER]/[START] key</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">09-04 DPLX ROT.SPEED 5 (1-13)</div>
	10	Toner motor aging	<p>[Function] When [ENTER]/[START] key is pressed, the toner motor is rotated for 30sec. After completion of this process, the machine goes into the main code entry standby mode.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">10-00 TONER MOTOR EXECUTING...</div>
	14	Cancel of troubles other than U2	<p>[Function] Used to cancel troubles other than U2. * Cancel troubles such as H trouble which writes data into EEPROM, and perform hardware reset.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">14-00 TRBL CANC. CLEARED</div>
	16	Cancel of U2 trouble	<p>[Function] Used to cancel U2 trouble. When [ENTER]/[START] key is pressed, check sum of the total counter in the EEPROM is rewritten and hardware reset is made.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">16-00 U2 TRBL CANC. CLEARED</div>

Main code	Sub code	Contents	Details of function/operation																					
20	01	Maintenance counter clear	<p>[Function] When [OK]/[ENTER]/[START] key is pressed, the maintenance count value is cleared and "000,000" is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;"> 20-01 M-CNT CLR. CLEARED 000,000 </div> <div style="text-align: right;"> <Display example: 012,345> 012 → Blank → 345 → Blank → 012 0.7s 0.3s 0.7s 1.0s 0.7s </div> </div>																					
21	01	Maintenance cycle setting	<p>[Function] The currently set code of the maintenance cycle is displayed, and the newly set data are saved. Enter the code number with [Numeric] key or [◀] [▶] key and press [START] key. The entered value is saved and the display returns to the sub code input standby state.</p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>3,000 sheets</td> <td></td> </tr> <tr> <td>1</td> <td>6,000 sheets</td> <td></td> </tr> <tr> <td>2</td> <td>9,000 sheets</td> <td></td> </tr> <tr> <td>3</td> <td>13,000 sheets</td> <td></td> </tr> <tr> <td>4</td> <td>25,000 sheets</td> <td>Default</td> </tr> <tr> <td>5</td> <td>Free (999,999 sheets)</td> <td></td> </tr> </tbody> </table> <p>[Operation] 1) The current set value is displayed.</p> <div style="display: flex; justify-content: space-between;"> <div style="border: 1px solid black; padding: 2px;"> 21-01 M-CYCLE 4:25,000 (0-5) </div> <div style="border: 1px solid black; padding: 2px;"> 21-01 M-CYCLE 5:FREE (0-5) </div> <div style="border: 1px solid black; padding: 2px;"> 21-01 M-CYCLE 5:FREE (0-5) </div> </div> <p>2) [▶] key or [Numeric] key</p> <p>3) [OK]/[ENTER]/[START] key</p> <p>2) [◀] key or [Numeric] key</p> <div style="border: 1px solid black; padding: 2px; margin-left: auto;"> 21-01 M-CYCLE 3:13,000 (0-5) </div>	Code number	Setting	Remark	0	3,000 sheets		1	6,000 sheets		2	9,000 sheets		3	13,000 sheets		4	25,000 sheets	Default	5	Free (999,999 sheets)	
Code number	Setting	Remark																						
0	3,000 sheets																							
1	6,000 sheets																							
2	9,000 sheets																							
3	13,000 sheets																							
4	25,000 sheets	Default																						
5	Free (999,999 sheets)																							
22	01	Maintenance counter display	<p>[Function] When [OK]/[ENTER]/[START] key is pressed, the maintenance counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; text-align: center;"> 22-01 M-CNT ***,*** </div>																					
	02	Maintenance preset display	<p>[Function] When [OK]/[ENTER]/[START] key is pressed, the preset value (25,000 sheets, etc.) corresponding to the code set with simulation 21-01 is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; text-align: center;"> 22-02 M-CNT PRESET ***,*** </div>																					
	04	JAM total counter display	<p>[Function] The JAM total counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; text-align: center;"> 22-04 JAM TTL CNT ***,*** </div>																					
	05	Total counter display	<p>[Function] The total counter value is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; text-align: center;"> 22-05 TTL CNT ***,*** </div>																					

Main code	Sub code	Contents	Details of function/operation																		
22	06	Developer counter display	<p>[Function] When [OK]/[ENTER]/[START] key is pressed, the developer counter value is obtained and displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 22-06 DVLP CNT *** , *** </div>																		
	08	RSPF counter display	<p>[Function] The RSPF counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 22-08 SPF CNT *** , *** </div>																		
	11	FAX-related counter display	<p>[Function] The FAX-related counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> SELECT COUNTER 1 : PAGE 2 : TIME </div> <p>* [Clear] key: FAX control is terminated.</p> <p>2) Select 1</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> SEND PAGE : xxx , xxx RECV PAGE : xxx , xxx </div> <p>("xxx,xxx" is the current value.)</p> <p>* [Clear] key: Returns to "1) Initial display".</p> <p>2) Select 2</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> TX TIME : xxxx : xx . xx RX TIME : xxxx : xx . xx </div> <p>("xxxx: xxx. xx" is the current value.)</p> <p>* [Clear] key: Returns to "1) Initial display".</p>																		
	12	Drum counter display	<p>[Function] The drum counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 22-12 DRUM CNT *** , *** </div>																		
	13	CRUM type display	<p>[Function] When [ENTER]/[START] key is pressed, the CRUM type which is written in the CRUM chip is displayed.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Code number</th> <th>CRUM type</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Unsetting</td> <td></td> </tr> <tr> <td>01</td> <td>MX-I/AL-I</td> <td></td> </tr> <tr> <td>02</td> <td>MX-II /AL-II</td> <td>AR model</td> </tr> <tr> <td>03</td> <td>MX-III /AL-III</td> <td>FO model</td> </tr> <tr> <td>99</td> <td>Conversion</td> <td></td> </tr> </tbody> </table> <p>[Operation] 1) CRUM type display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 22-13 CRUM TYPE 01: </div>	Code number	CRUM type	Remark	00	Unsetting		01	MX-I/AL-I		02	MX-II /AL-II	AR model	03	MX-III /AL-III	FO model	99	Conversion	
Code number	CRUM type	Remark																			
00	Unsetting																				
01	MX-I/AL-I																				
02	MX-II /AL-II	AR model																			
03	MX-III /AL-III	FO model																			
99	Conversion																				

Main code	Sub code	Contents	Details of function/operation															
22	14	ROM version display	<p>[Function] The P-ROM version is displayed. Press [Numeric] key or [◀] [▶] key to switch the display version.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Version</th> <th>Display item</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Main unit Program</td> <td>MAIN PROG.</td> </tr> <tr> <td>1</td> <td>ANB Program</td> <td>ANB PROG.</td> </tr> <tr> <td>2</td> <td>AFAX Program</td> <td>AFAX PROG.</td> </tr> <tr> <td>3</td> <td>LCD DATA</td> <td>LCD DATA</td> </tr> </tbody> </table> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-14 ROM VER. MAIN PROG. 00.00</div> <p>2) [Numeric] key or [▶] key</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-14 ROM VER. ANB PROG. 00.00</div> <p>2) [Numeric] key or [◀] key</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-14 ROM VER. LCD DATA 00.00</div>	Code number	Version	Display item	0	Main unit Program	MAIN PROG.	1	ANB Program	ANB PROG.	2	AFAX Program	AFAX PROG.	3	LCD DATA	LCD DATA
Code number	Version	Display item																
0	Main unit Program	MAIN PROG.																
1	ANB Program	ANB PROG.																
2	AFAX Program	AFAX PROG.																
3	LCD DATA	LCD DATA																
16		Duplex counter display (MX-B201D only)	<p>[Function] The duplex counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-16 DPLX CNT ***,***</div>															
17		Copy counter display	<p>[Function] The copy counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-17 COPIES CNT ***,***</div>															
18		Printer counter display	<p>[Function] The printer counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-18 PRT.CNT ***,***</div>															
19		Scanner mode counter display	<p>[Function] The scanner mode counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-19 S-MODE CNT ***,***</div>															
20		Password display	<p>[Function] Password (personal identification number to be managed by the department) is to be displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-20 PASSWORD *****</div>															
21		Scanner counter display	<p>[Function] The scanner counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">22-21 SCAN CNT ***,***</div>															



Main code	Sub code	Contents	Details of function/operation
22	22	RSPF JAM counter display	<p>[Function] The RSPF JAM counter is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 22-22 S JAM CNT *** , *** </div>
24	01	JAM total counter clear	<p>[Function] When [ENTER]/[START] key is pressed, the JAM total counter is cleared to 0 and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-01 JAM TTL CLR. CLEARED 000,000 </div>
	04	RSPF counter clear	<p>[Function] When [ENTER]/[START] key is pressed, the RSPF counter value is cleared to 0 and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-04 SPF CLR. CLEARED 000,000 </div>
	05	Duplex counter clear (MX-B201D only)	<p>[Function] When [ENTER]/[START] key is pressed, the duplex counter value is cleared to 0, and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-05 DPLX CLR. CLEARED 000,000 </div>
	06	Developer counter clear	<p>[Function] When [OK]/[ENTER]/[START] key is pressed, the developer counter value is cleared to 0, and "000,000" is displayed.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-06 DVL P CLR. CLEARED 000,000 </div>
	07	Drum counter clear	<p>[Function] When [ENTER]/[START] key is pressed, the drum counter value is cleared to 0, and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-07 DRUM CLR. CLEARED 000,000 </div>
	08	Copy counter clear	<p>[Function] When [ENTER]/[START] key is pressed, the copy counter value is cleared to 0, and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-08 COPIES CLR. CLEARED 000,000 </div>
	09	Printer counter clear	<p>[Function] When [ENTER]/[START] key is pressed, the printer counter value is cleared to 0, and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-09 PRT.CLR. CLEARED 000,000 </div>





Main code	Sub code	Contents	Details of function/operation
24	10	FAX counter clear (When MX-FX12 is installed)	<p>[Function] When [ENTER]/[START] key is pressed, the FAX count value is set to 0 and "(000,000)" is displayed on the LCD.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-10 FAX CLR. CLEARED 000,000 </div>
	13	Scanner counter clear	<p>[Function] When [ENTER]/[START] key is pressed, the scanner counter value is cleared to 0, and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-13 SCAN CLR. CLEARED 000,000 </div>
	14	RSPF JAM total counter clear	<p>[Function] When [ENTER]/[START] key is pressed, the RSPF JAM total counter value is cleared to 0, and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-14 S JAM TTL CLR. CLEARED 000,000 </div>
	15	Scanner mode counter clear	<p>[Function] When [ENTER]/[START] key is pressed, the scanner mode counter value is cleared to 0, and "000,000" is displayed on the LCD/display.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 24-15 S-MODE CLR. CLEARED 000,000 </div>
	25	01	Main motor operation check (Cooling fan motor rotation check)
10		Polygon motor ON	<p>[Function] When [ENTER]/[START] key is pressed, the Bios is called to rotate the polygon motor for 30sec. After completion of 30sec operation, the operation is turned off with the Bios and the machine goes into the sub code entry standby mode.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> 25-10 LSU CHK EXECUTING... </div>

Main code	Sub code	Contents	Details of function/operation															
26	02	RSPF setup	<p>[Function] When this simulation is executed, the current set SPF/RSPF is displayed. Enter the code number corresponding to the desired SPF/RSPF and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>SPF/RSPF</th> <th>Display item</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>SPF NO</td> <td>SPF OFF</td> </tr> <tr> <td>1</td> <td>SPF YES</td> <td>SPF ON</td> </tr> <tr> <td>2</td> <td>RSPF YES</td> <td>RSPF ON</td> </tr> </tbody> </table> <p>[Operation] 1) The current set value is displayed. <div style="border: 1px solid black; padding: 2px; display: inline-block;">26-02 SPF/RSPF 1:SPF ON (0- 2)</div> 2) [Numeric] key or [◀] key <div style="border: 1px solid black; padding: 2px; display: inline-block;">26-02 SPF/RSPF 2:RSPF ON (0- 2)</div> 3) [ENTER]/[START] key <div style="border: 1px solid black; padding: 2px; display: inline-block;">26-02 SPF/RSPF 2:RSPF ON (0- 2)</div> 2) [Numeric] key or [▶] key <div style="border: 1px solid black; padding: 2px; display: inline-block;">26-02 SPF/RSPF 0:SPF OFF (0- 2)</div></p>	Code number	SPF/RSPF	Display item	0	SPF NO	SPF OFF	1	SPF YES	SPF ON	2	RSPF YES	RSPF ON			
Code number	SPF/RSPF	Display item																
0	SPF NO	SPF OFF																
1	SPF YES	SPF ON																
2	RSPF YES	RSPF ON																
03	2ND TRAY setup		<p>[Function] When this simulation is executed, the current set 2ND TRAY is displayed. Enter the code number corresponding to the desired 2ND TRAY and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>2ND TRAY</th> <th>Display item</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>2ND TRAY NO</td> <td>OFF</td> </tr> <tr> <td>1</td> <td>2ND TRAY YES</td> <td>ON</td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	2ND TRAY	Display item	0	2ND TRAY NO	OFF	1	2ND TRAY YES	ON						
Code number	2ND TRAY	Display item																
0	2ND TRAY NO	OFF																
1	2ND TRAY YES	ON																
04	Machine duplex setup (DPLX)		<p>[Function] When this simulation is executed, the current set duplex is displayed. Enter the code number corresponding to the desired duplex and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Duplex</th> <th>Display item</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Duplex NO</td> <td>OFF</td> </tr> <tr> <td>1</td> <td>Duplex YES</td> <td>ON</td> </tr> </tbody> </table> <p>MX-B201 cannot be executed.</p> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	Duplex	Display item	0	Duplex NO	OFF	1	Duplex YES	ON						
Code number	Duplex	Display item																
0	Duplex NO	OFF																
1	Duplex YES	ON																
06	Destination setup		<p>[Function] When this simulation is executed, the current set destination is displayed. Enter the code number corresponding to the desired destination and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Destination</th> <th>Display item</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Inch series</td> <td>INCH</td> </tr> <tr> <td>1</td> <td>EX Japan AB series</td> <td>AB</td> </tr> <tr> <td>2</td> <td>Japan AB series</td> <td>JAPAN</td> </tr> <tr> <td>3</td> <td>China</td> <td>CHINA</td> </tr> </tbody> </table> <p>* Code numbers 2 and 3 cannot be selected for the MX-B201 and MX-B201D.</p> <p>Note 1: With a change of the setting, the counter for 'AE limit setting' is to be cleared to zero (SIM46-30). The setting of the tray, if the paper size for it is set to the size of inch series, is to be changed to the tray for the "Letter". However, the setting of the tray, if the size of the paper for it is set to any other size, is to be changed to the "A4".</p> <p>Note 2: For any other models than those for Japan, the mark "-" is to be displayed, if the code 2 is selected.</p> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	Destination	Display item	0	Inch series	INCH	1	EX Japan AB series	AB	2	Japan AB series	JAPAN	3	China	CHINA
Code number	Destination	Display item																
0	Inch series	INCH																
1	EX Japan AB series	AB																
2	Japan AB series	JAPAN																
3	China	CHINA																

Main code	Sub code	Contents	Details of function/operation																			
26	07	Machine conditions check	<p>[Function] When this simulation is executed, the current machine setting is displayed.</p> <table border="1"> <thead> <tr> <th>CPM</th> <th>Copy quantity</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>20 CPM</td> <td>20</td> <td></td> </tr> </tbody> </table> <p>[Operation] 1) The machine setting is displayed.</p> <table border="1"> <tbody> <tr> <td>26-07 CPM</td> </tr> <tr> <td>20 CPM</td> </tr> </tbody> </table>	CPM	Copy quantity	Remark	20 CPM	20		26-07 CPM	20 CPM											
CPM	Copy quantity	Remark																				
20 CPM	20																					
26-07 CPM																						
20 CPM																						
20	Rear edge void setup	<p>[Function] When this simulation is executed, the current set rear edge void is displayed. Enter the code number corresponding to the desired rear edge void and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Display item</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Rear edge void NO</td> <td>OFF</td> <td></td> </tr> <tr> <td>1</td> <td>Rear edge void YES</td> <td>ON</td> <td>Default</td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	Setting	Display item	Remark	0	Rear edge void NO	OFF		1	Rear edge void YES	ON	Default								
Code number	Setting	Display item	Remark																			
0	Rear edge void NO	OFF																				
1	Rear edge void YES	ON	Default																			
30	CE mark support control ON/OFF	<p>[Function] When this simulation is executed, the current set CE mark support control is displayed. Enter the code number corresponding to the desired CE mark support control and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Display item</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>CE mark support control OFF</td> <td>OFF</td> <td>Default (100V series)</td> </tr> <tr> <td>1</td> <td>CE mark support control ON</td> <td>ON</td> <td></td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	Setting	Display item	Remark	0	CE mark support control OFF	OFF	Default (100V series)	1	CE mark support control ON	ON									
Code number	Setting	Display item	Remark																			
0	CE mark support control OFF	OFF	Default (100V series)																			
1	CE mark support control ON	ON																				
37	Cancel of stop at developer life over	<p>[Function] When this simulation is executed, the current setting is displayed. When the code number is entered and [START] key is pressed, the setting is changed.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Stop at developer life over</td> <td></td> </tr> <tr> <td>1</td> <td>Cancel of stop at developer life over</td> <td>Default</td> </tr> </tbody> </table>	Code number	Setting	Remark	0	Stop at developer life over		1	Cancel of stop at developer life over	Default											
Code number	Setting	Remark																				
0	Stop at developer life over																					
1	Cancel of stop at developer life over	Default																				
39	Memory capacity check	<p>[Function] When the simulation is executed, the currently installed SDRAM of the main unit is displayed.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>32</td> <td>32 MBYTE</td> <td></td> </tr> <tr> <td>64</td> <td>64 MBYTE</td> <td></td> </tr> </tbody> </table> <p>[Operation] 1) Memory capacity display</p> <table border="1"> <tbody> <tr> <td>26-39 MEM.CHK</td> </tr> <tr> <td>32 MBYTE</td> </tr> </tbody> </table>	Code number	Setting	Remark	32	32 MBYTE		64	64 MBYTE		26-39 MEM.CHK	32 MBYTE									
Code number	Setting	Remark																				
32	32 MBYTE																					
64	64 MBYTE																					
26-39 MEM.CHK																						
32 MBYTE																						
40	Polygon motor OFF time setup (Time required for turning OFF after completion of printing)	<p>[Function] When this simulation is executed, the current setting is displayed. Enter the code number corresponding to the desired setting and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Display item</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0sec</td> <td>0 SEC.</td> <td></td> </tr> <tr> <td>1</td> <td>30sec</td> <td>30 SEC.</td> <td>Default</td> </tr> <tr> <td>2</td> <td>60sec</td> <td>60 SEC.</td> <td></td> </tr> <tr> <td>3</td> <td>90sec</td> <td>90 SEC.</td> <td></td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	Setting	Display item	Remark	0	0sec	0 SEC.		1	30sec	30 SEC.	Default	2	60sec	60 SEC.		3	90sec	90 SEC.	
Code number	Setting	Display item	Remark																			
0	0sec	0 SEC.																				
1	30sec	30 SEC.	Default																			
2	60sec	60 SEC.																				
3	90sec	90 SEC.																				



Main code	Sub code	Contents	Details of function/operation																																																																										
26	42	Transfer ON timing control setup	<p>[Function]</p> <p>When this simulation is executed, the currently set code number is displayed. Enter the code number and press the [START] key, and the setting will be changed. (For any number different from the following ones, the default time is automatically set.) The adjustment can be made individually for each of the following modes.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>Default</th> <th>Setting range</th> </tr> </thead> <tbody> <tr> <td>Front surface paper lead edge</td> <td>F-REAR</td> <td>11</td> <td>0 - 21</td> </tr> <tr> <td>Front surface paper rear edge</td> <td>F-END</td> <td>50</td> <td>1 - 99</td> </tr> <tr> <td>Back surface paper lead edge</td> <td>B-REAR</td> <td>11</td> <td>0 - 21</td> </tr> <tr> <td>Back surface paper rear edge</td> <td>B-END</td> <td>50</td> <td>1 - 99</td> </tr> </tbody> </table> <p><Paper lead edge adjustment table></p> <table border="1"> <thead> <tr> <th>Code</th> <th>Setting</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0 msec</td> <td></td> </tr> <tr> <td>1</td> <td>-20 msec</td> <td></td> </tr> <tr> <td>...</td> <td>...</td> <td></td> </tr> <tr> <td>10</td> <td>-2 msec</td> <td></td> </tr> <tr> <td>11</td> <td>0 msec</td> <td>Default</td> </tr> <tr> <td>12</td> <td>2 msec</td> <td></td> </tr> <tr> <td>...</td> <td>...</td> <td></td> </tr> <tr> <td>21</td> <td>20 msec</td> <td></td> </tr> </tbody> </table> <p>Note 1: The default code '11' for the transfer ON timing indicates a lapse of 236ms from PS release.</p> <p>Note 2: If the code "0" is selected, the setting is the same as the default setting '11'.</p> <p>Note 3: The transfer ON timing can be adjusted in increments/decrements of 2ms within the range of 236ms±20ms.</p> <p><Front/back surface of paper rear edge adjustment table></p> <table border="1"> <thead> <tr> <th>Code</th> <th>Setting</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>-98 msec</td> <td></td> </tr> <tr> <td>...</td> <td>...</td> <td></td> </tr> <tr> <td>49</td> <td>-2 msec</td> <td></td> </tr> <tr> <td>50</td> <td>0 msec</td> <td>Default</td> </tr> <tr> <td>51</td> <td>+2 msec</td> <td></td> </tr> <tr> <td>...</td> <td>...</td> <td></td> </tr> <tr> <td>99</td> <td>+98 msec</td> <td></td> </tr> </tbody> </table> <p>* The default "50" of the transfer OFF timing indicates "210msec passed from PPD1OFF." * The transfer OFF timing can be adjusted to 210msec ± 2ms.</p> <p>[Operation]</p> <p>1) Initial display <Front surface lead edge setting></p> <table border="1"> <tr> <td>26-42 TC ON TIMING F-REAR 11 (0-21)</td> </tr> </table> <p>2) [◀][▶] key: Mode selection</p> <table border="1"> <tr> <td>26-42 TC ON TIMING F-END 50 (1-99)</td> </tr> </table> <p>3) [Numeric] key: Value entry</p> <table border="1"> <tr> <td>26-42 TC ON TIMING F-END 51 (1-99)</td> </tr> </table> <p>4) [ENTER]/[START] key: Settles the entered value. The display is shifted to the sub code input standby menu.</p>	Mode	Display item	Default	Setting range	Front surface paper lead edge	F-REAR	11	0 - 21	Front surface paper rear edge	F-END	50	1 - 99	Back surface paper lead edge	B-REAR	11	0 - 21	Back surface paper rear edge	B-END	50	1 - 99	Code	Setting	Remark	0	0 msec		1	-20 msec			10	-2 msec		11	0 msec	Default	12	2 msec			21	20 msec		Code	Setting	Remark	1	-98 msec			49	-2 msec		50	0 msec	Default	51	+2 msec			99	+98 msec		26-42 TC ON TIMING F-REAR 11 (0-21)	26-42 TC ON TIMING F-END 50 (1-99)	26-42 TC ON TIMING F-END 51 (1-99)
Mode	Display item	Default	Setting range																																																																										
Front surface paper lead edge	F-REAR	11	0 - 21																																																																										
Front surface paper rear edge	F-END	50	1 - 99																																																																										
Back surface paper lead edge	B-REAR	11	0 - 21																																																																										
Back surface paper rear edge	B-END	50	1 - 99																																																																										
Code	Setting	Remark																																																																											
0	0 msec																																																																												
1	-20 msec																																																																												
...	...																																																																												
10	-2 msec																																																																												
11	0 msec	Default																																																																											
12	2 msec																																																																												
...	...																																																																												
21	20 msec																																																																												
Code	Setting	Remark																																																																											
1	-98 msec																																																																												
...	...																																																																												
49	-2 msec																																																																												
50	0 msec	Default																																																																											
51	+2 msec																																																																												
...	...																																																																												
99	+98 msec																																																																												
26-42 TC ON TIMING F-REAR 11 (0-21)																																																																													
26-42 TC ON TIMING F-END 50 (1-99)																																																																													
26-42 TC ON TIMING F-END 51 (1-99)																																																																													

Main code	Sub code	Contents	Details of function/operation																																				
26	43	Side void setup	<p>[Function] When this simulation is executed, the currently set code of the side void quantity is displayed (initial display), and the set data are saved. (Setting range: 0 – 10, Default: 4 (= One side 2.0mm))</p> <table border="1"> <thead> <tr> <th>Code</th> <th>Setting</th> <th>Remark</th> </tr> </thead> <tbody> <tr><td>0</td><td>0 mm</td><td></td></tr> <tr><td>1</td><td>0.5 mm</td><td></td></tr> <tr><td>2</td><td>1.0 mm</td><td></td></tr> <tr><td>3</td><td>1.5 mm</td><td></td></tr> <tr><td>4</td><td>2.0 mm</td><td>Default</td></tr> <tr><td>5</td><td>2.5 mm</td><td></td></tr> <tr><td>6</td><td>3.0 mm</td><td></td></tr> <tr><td>7</td><td>3.5 mm</td><td></td></tr> <tr><td>8</td><td>4.0 mm</td><td></td></tr> <tr><td>9</td><td>4.5 mm</td><td></td></tr> <tr><td>10</td><td>5.0 mm</td><td></td></tr> </tbody> </table> <p>* When the adjustment value is increased by 1, the side void is changed as follows: Side void adjustment: The side void is increased by 0.5mm. (The side void of "Set value x 0.5mm" is made.)</p> <p>[Operation] The operation is similar to simulation 09-04.</p>	Code	Setting	Remark	0	0 mm		1	0.5 mm		2	1.0 mm		3	1.5 mm		4	2.0 mm	Default	5	2.5 mm		6	3.0 mm		7	3.5 mm		8	4.0 mm		9	4.5 mm		10	5.0 mm	
Code	Setting	Remark																																					
0	0 mm																																						
1	0.5 mm																																						
2	1.0 mm																																						
3	1.5 mm																																						
4	2.0 mm	Default																																					
5	2.5 mm																																						
6	3.0 mm																																						
7	3.5 mm																																						
8	4.0 mm																																						
9	4.5 mm																																						
10	5.0 mm																																						
54	γ life correction setting		<p>[Function] Used to set the γ life correction. When this simulation is executed, the current set code number is displayed. Enter the desired code number and press [ENTER]/[START] key to save the setting. (Setting range: 0 – 1, default: 1)</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Display item</th> <th>Remark</th> </tr> </thead> <tbody> <tr><td>0</td><td>OFF</td><td>OFF</td><td></td></tr> <tr><td>1</td><td>ON</td><td>ON</td><td>Default</td></tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	Setting	Display item	Remark	0	OFF	OFF		1	ON	ON	Default																								
Code number	Setting	Display item	Remark																																				
0	OFF	OFF																																					
1	ON	ON	Default																																				
62	Energy-save mode copy lamp setup		<p>[Function] Used to set half-ON /OFF of the copy lamp in the pre-heat mode. When this simulation is executed, the current set code number is displayed. Enter the desired code number and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting</th> <th>Display item</th> <th>Remark</th> </tr> </thead> <tbody> <tr><td>0</td><td>Copy lamp OFF</td><td>OFF</td><td></td></tr> <tr><td>1</td><td>Copy lamp half-ON</td><td>ON</td><td>Default</td></tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	Setting	Display item	Remark	0	Copy lamp OFF	OFF		1	Copy lamp half-ON	ON	Default																								
Code number	Setting	Display item	Remark																																				
0	Copy lamp OFF	OFF																																					
1	Copy lamp half-ON	ON	Default																																				
69	Use to set the operation conditions for toner near end		<p>[Function] This simulation is used to set the operating conditions for toner near end. <Toner near end display/No display></p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting contents</th> </tr> </thead> <tbody> <tr><td>0</td><td>Toner near end is displayed</td></tr> <tr><td>1</td><td>Toner near end is not displayed</td></tr> </tbody> </table> <p><Setting of operations at toner end></p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting contents</th> </tr> </thead> <tbody> <tr><td>1</td><td>Operation setting 1</td></tr> <tr><td>2</td><td>Operation setting 2</td></tr> <tr><td>3</td><td>Operation setting 3</td></tr> </tbody> </table> <p>For except Japan, China performs operation of set value "3" regardless of the setting value.</p>	Code number	Setting contents	0	Toner near end is displayed	1	Toner near end is not displayed	Code number	Setting contents	1	Operation setting 1	2	Operation setting 2	3	Operation setting 3																						
Code number	Setting contents																																						
0	Toner near end is displayed																																						
1	Toner near end is not displayed																																						
Code number	Setting contents																																						
1	Operation setting 1																																						
2	Operation setting 2																																						
3	Operation setting 3																																						

Main code	Sub code	Contents	Details of function/operation																																													
43	01	Fusing temperature setting (Normal copy)	<p>[Function] Used to set the fusing temperature of 3rd or later sheet. (For 1st and 2nd sheets, SIM 43-14 is used.) When this simulation is executed, the current set code number is displayed. Press [Numeric] key to change the setting and press [ENTER]/[START] key to save the setting into the EER-POM. The machine goes into the sub code entry standby mode. The [◀] [▶] key is used to select the mode.</p> <table border="1"> <thead> <tr> <th>Code</th> <th>Set temperature (°C)</th> <th>Remark</th> </tr> </thead> <tbody> <tr><td>0</td><td>170</td><td></td></tr> <tr><td>1</td><td>175</td><td></td></tr> <tr><td>2</td><td>180</td><td></td></tr> <tr><td>3</td><td>185</td><td></td></tr> <tr><td>4</td><td>190</td><td></td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Code</th> <th>Set temperature (°C)</th> <th>Remark</th> </tr> </thead> <tbody> <tr><td>5</td><td>195</td><td>Default</td></tr> <tr><td>6</td><td>200</td><td></td></tr> <tr><td>7</td><td>205</td><td></td></tr> <tr><td>8</td><td>210</td><td></td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> </tr> </thead> <tbody> <tr> <td>Main cassette paper feed</td> <td>TRAY1</td> </tr> <tr> <td>Manual paper feed</td> <td>MFT</td> </tr> </tbody> </table> <p>* The cassette feed and the manual feed are controlled similarly.</p> <p>[Operation] 1) Initial display <Main cassette paper feed setting> <table border="1"> <tr><td>43-01 FU TEMP</td></tr> <tr><td>TRAY1 6 (0-8)</td></tr> </table> 2) [◀] [▶] key: Mode selection <table border="1"> <tr><td>43-01 FU TEMP</td></tr> <tr><td>MFT 6 (0-8)</td></tr> </table> 3) [Numeric] key: Value entry <table border="1"> <tr><td>43-01 FU TEMP</td></tr> <tr><td>MFT 6 (0-8)</td></tr> </table> 4) [ENTER]/[START] key Settles the entered value. The display is shifted to the sub code input standby menu.</p>	Code	Set temperature (°C)	Remark	0	170		1	175		2	180		3	185		4	190		Code	Set temperature (°C)	Remark	5	195	Default	6	200		7	205		8	210		Mode	Display item	Main cassette paper feed	TRAY1	Manual paper feed	MFT	43-01 FU TEMP	TRAY1 6 (0-8)	43-01 FU TEMP	MFT 6 (0-8)	43-01 FU TEMP	MFT 6 (0-8)
Code	Set temperature (°C)	Remark																																														
0	170																																															
1	175																																															
2	180																																															
3	185																																															
4	190																																															
Code	Set temperature (°C)	Remark																																														
5	195	Default																																														
6	200																																															
7	205																																															
8	210																																															
Mode	Display item																																															
Main cassette paper feed	TRAY1																																															
Manual paper feed	MFT																																															
43-01 FU TEMP																																																
TRAY1 6 (0-8)																																																
43-01 FU TEMP																																																
MFT 6 (0-8)																																																
43-01 FU TEMP																																																
MFT 6 (0-8)																																																
04		Fusing temperature setting in multi copy	<p>[Function] For 20th sheet or later in multi copy, the fusing temperature is automatically changed from the temperature set with simulation 43-01 to the temperature set with this simulation. When this simulation is executed, the current set code number is displayed. Enter the code number and press [ENTER]/[START] key to change the setting.</p> <table border="1"> <thead> <tr> <th>Code</th> <th>Set temperature (°C)</th> <th>Remark</th> </tr> </thead> <tbody> <tr><td>0</td><td>165</td><td></td></tr> <tr><td>1</td><td>170</td><td></td></tr> <tr><td>2</td><td>175</td><td></td></tr> <tr><td>3</td><td>180</td><td></td></tr> <tr><td>4</td><td>185</td><td></td></tr> <tr><td>5</td><td>190</td><td></td></tr> <tr><td>6</td><td>195</td><td></td></tr> <tr><td>7</td><td>200</td><td></td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Main cassette paper feed</td> <td>TRAY1</td> <td>3</td> </tr> <tr> <td>Manual paper feed</td> <td>MFT</td> <td>3</td> </tr> <tr> <td>Main cassette paper feed (small-size)</td> <td>TRAY1 SH</td> <td>1</td> </tr> <tr> <td>Manual paper feed (small-size)</td> <td>MFT SH</td> <td>1</td> </tr> </tbody> </table> <p>* The cassette feed and the manual feed are controlled similarly.</p> <p>[Operation] The operation is similar to simulation 43-01.</p>	Code	Set temperature (°C)	Remark	0	165		1	170		2	175		3	180		4	185		5	190		6	195		7	200		Mode	Display item	Default	Main cassette paper feed	TRAY1	3	Manual paper feed	MFT	3	Main cassette paper feed (small-size)	TRAY1 SH	1	Manual paper feed (small-size)	MFT SH	1			
Code	Set temperature (°C)	Remark																																														
0	165																																															
1	170																																															
2	175																																															
3	180																																															
4	185																																															
5	190																																															
6	195																																															
7	200																																															
Mode	Display item	Default																																														
Main cassette paper feed	TRAY1	3																																														
Manual paper feed	MFT	3																																														
Main cassette paper feed (small-size)	TRAY1 SH	1																																														
Manual paper feed (small-size)	MFT SH	1																																														



Main code	Sub code	Contents	Details of function/operation																																				
43	05	Fusing temperature setup in duplex copy (MX-B201D only)	<p>[Function] In the case of duplex copy, the shift temperature set with this simulation is applied to the fusing temperature. When this simulation is executed, the current set code number is displayed. Enter the desired code number and press [ENTER]/[START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code</th> <th>Shift temperature (°C)</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>±0</td> <td>Default</td> </tr> <tr> <td>1</td> <td>-8</td> <td></td> </tr> <tr> <td>2</td> <td>-6</td> <td></td> </tr> <tr> <td>3</td> <td>-4</td> <td></td> </tr> <tr> <td>4</td> <td>-2</td> <td></td> </tr> <tr> <td>5</td> <td>±0</td> <td></td> </tr> <tr> <td>6</td> <td>+2</td> <td></td> </tr> <tr> <td>7</td> <td>+4</td> <td></td> </tr> <tr> <td>8</td> <td>+6</td> <td></td> </tr> <tr> <td>9</td> <td>+8</td> <td></td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code	Shift temperature (°C)	Remark	0	±0	Default	1	-8		2	-6		3	-4		4	-2		5	±0		6	+2		7	+4		8	+6		9	+8				
	Code	Shift temperature (°C)	Remark																																				
0	±0	Default																																					
1	-8																																						
2	-6																																						
3	-4																																						
4	-2																																						
5	±0																																						
6	+2																																						
7	+4																																						
8	+6																																						
9	+8																																						
14		Fusing start temperature setting	<p>[Function] When this simulation is started, the currently set code number is displayed. Press [Numeric] key or [◀] [▶] key to switch the setting, and press [ENTER]/[START] key to save it to the EEPROM. The machine goes to the sub code entry standby mode.</p> <table border="1"> <thead> <tr> <th>Code</th> <th>Set temperature (°C)</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>160</td> <td></td> </tr> <tr> <td>1</td> <td>165</td> <td></td> </tr> <tr> <td>2</td> <td>170</td> <td></td> </tr> <tr> <td>3</td> <td>175</td> <td></td> </tr> <tr> <td>4</td> <td>180</td> <td></td> </tr> <tr> <td>5</td> <td>185</td> <td></td> </tr> <tr> <td>6</td> <td>190</td> <td></td> </tr> <tr> <td>7</td> <td>195</td> <td>Default</td> </tr> <tr> <td>8</td> <td>200</td> <td></td> </tr> <tr> <td>9</td> <td>205</td> <td></td> </tr> <tr> <td>10</td> <td>210</td> <td></td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 43-01.</p>	Code	Set temperature (°C)	Remark	0	160		1	165		2	170		3	175		4	180		5	185		6	190		7	195	Default	8	200		9	205		10	210	
Code	Set temperature (°C)	Remark																																					
0	160																																						
1	165																																						
2	170																																						
3	175																																						
4	180																																						
5	185																																						
6	190																																						
7	195	Default																																					
8	200																																						
9	205																																						
10	210																																						

Main code	Sub code	Contents	Details of function/operation																												
46	01	Copy density adjustment (300dpi)	<p>[Function] Copy density is set for each mode. When this simulation is executed, the current set value is displayed in 2 digits (Default: 50). Change the set value and press [START] key to make a copy under the set value. When the set value is increased, the copy becomes darker. When the set value is decreased, the copy becomes lighter. In this case, only Exp.3 copy is made. When, however, the setting is made to make darker copy, Exp.1 and Exp.5 copies also become darker. When made to lighter copy, Exp.1. and Exp.5 copies become lighter, too. Press [◀] [▶] key to switch the mode. The set value of the selected mode is displayed on the LCD/display. (Adjustment value: 1 – 99) The setting procedure of the magnification ratio is the same as that to copy operation.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>AE mode (300dpi)</td> <td>AE</td> <td>COPY mode lamp</td> <td>50</td> </tr> <tr> <td>TEXT mode (300dpi)</td> <td>TEXT</td> <td>PRINT mode lamp</td> <td>50</td> </tr> <tr> <td>PHOTO mode</td> <td>PHOTO</td> <td>SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>TS mode (TEXT) (300dpi)</td> <td>TSTXT</td> <td>PRINT mode lamp SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>TS mode (AE) (300dpi)</td> <td>TSAE</td> <td>COPY mode lamp SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>Dither mode</td> <td>D_PHO</td> <td>COPY mode lamp PRINT mode lamp SCAN mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>[Operation] 1) Initial display <div style="border: 1px solid black; padding: 2px; width: fit-content;">46-01 EXP.LEVEL 300 AE 100% 50(1-99)</div> 2) [◀] key: Mode selection <div style="border: 1px solid black; padding: 2px; width: fit-content;">46-01 EXP.LEVEL 300 TSAE 100% 50(1-99)</div> 2) [▶] key: Mode selection <div style="border: 1px solid black; padding: 2px; width: fit-content;">46-01 EXP.LEVEL 300 TEXT 100% 50(1-99)</div> 3) [Numeric] key: Value entry <div style="border: 1px solid black; padding: 2px; width: fit-content;">46-01 EXP.LEVEL 300 AE 100% 62(1-99)</div> 4) [START] key: Fixing and printing value (No change on the LCD) * Print is started in the set mode. <div style="border: 1px solid black; padding: 2px; width: fit-content;">46-01 EXP.LEVEL 300 AE 100% 62(1-99)</div> 4) To fix the set value without printing, press [ENTER] key. <div style="border: 1px solid black; padding: 2px; width: fit-content;">46-01 EXP.LEVEL 300 AE 100% 62(1-99)</div> * To cancel manual feed paper empty MSG, press any key. * When performing the AE mode exposure adjustment, place the test chart on the document table so that the center area of 10cm is not covered.</p>	Mode	Display item	LED	Default	AE mode (300dpi)	AE	COPY mode lamp	50	TEXT mode (300dpi)	TEXT	PRINT mode lamp	50	PHOTO mode	PHOTO	SCAN mode lamp	50	TS mode (TEXT) (300dpi)	TSTXT	PRINT mode lamp SCAN mode lamp	50	TS mode (AE) (300dpi)	TSAE	COPY mode lamp SCAN mode lamp	50	Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	50
Mode	Display item	LED	Default																												
AE mode (300dpi)	AE	COPY mode lamp	50																												
TEXT mode (300dpi)	TEXT	PRINT mode lamp	50																												
PHOTO mode	PHOTO	SCAN mode lamp	50																												
TS mode (TEXT) (300dpi)	TSTXT	PRINT mode lamp SCAN mode lamp	50																												
TS mode (AE) (300dpi)	TSAE	COPY mode lamp SCAN mode lamp	50																												
Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	50																												

Main code	Sub code	Contents	Details of function/operation																												
46	02	Copy density adjustment (600dpi)	<p>[Function] Copy density is set for each mode. When this simulation is executed, the current set value is displayed in 2 digits (Default: 50). Change the set value and press [START] key to make a copy under the set value. When the set value is increased, the copy becomes darker. When the set value is decreased, the copy becomes lighter. In this case, only Exp.3 copy is made. When, however, the setting is made to make darker copy, Exp.1 and Exp.5 copies also become darker. When made to lighter copy, Exp1. and Exp.5 copies become lighter, too. Press [◀] [▶] key to switch the mode. The set value of the selected mode is displayed on the LCD/display. (Adjustment value: 1 – 99)</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>AE mode (600dpi)</td> <td>AE</td> <td>COPY mode lamp</td> <td>50</td> </tr> <tr> <td>TEXT mode (600dpi)</td> <td>TEXT</td> <td>PRINT mode lamp</td> <td>50</td> </tr> <tr> <td>PHOTO mode</td> <td>PHOTO</td> <td>SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>TS mode (TEXT) (600dpi)</td> <td>TSTXT</td> <td>PRINT mode lamp SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>TS mode (AE) (600dpi)</td> <td>TSAE</td> <td>COPY mode lamp SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>Dither mode</td> <td>D_PHO</td> <td>COPY mode lamp PRINT mode lamp SCAN mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Display item	LED	Default	AE mode (600dpi)	AE	COPY mode lamp	50	TEXT mode (600dpi)	TEXT	PRINT mode lamp	50	PHOTO mode	PHOTO	SCAN mode lamp	50	TS mode (TEXT) (600dpi)	TSTXT	PRINT mode lamp SCAN mode lamp	50	TS mode (AE) (600dpi)	TSAE	COPY mode lamp SCAN mode lamp	50	Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	50
Mode	Display item	LED	Default																												
AE mode (600dpi)	AE	COPY mode lamp	50																												
TEXT mode (600dpi)	TEXT	PRINT mode lamp	50																												
PHOTO mode	PHOTO	SCAN mode lamp	50																												
TS mode (TEXT) (600dpi)	TSTXT	PRINT mode lamp SCAN mode lamp	50																												
TS mode (AE) (600dpi)	TSAE	COPY mode lamp SCAN mode lamp	50																												
Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	50																												
	12	Density adjustment in the FAX mode (Collective adjustment) (When MX-FX12 is installed)	<p>[Function] When [START] key is pressed, scan is executed with the entered exposure adjustment value and the data stored on the FAX side is rewritten into the entered value. All data of the exposure adjustment values are rewritten into the same value. For the density adjustment table data, refer to SIM46-13 (density adjustment (Normal text) in the FAX mode).</p> <p>[Operation]</p> <p>1) Initial display</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>AUTO</td> </tr> <tr> <td></td> <td></td> <td>XX</td> </tr> </table> <p>("XX" is the exposure adjustment value of normal text stored on the FAX side.)</p> <p>2) Enter a 2-digit value as the exposure adjustment value with [Numeric] key.</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>AUTO</td> </tr> <tr> <td></td> <td></td> <td>YY</td> </tr> </table> <p>("YY" is the entered exposure adjustment value.)</p> <p>3) Scan is started (self print), and the LED of [START] key is turned off.</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>AUTO</td> </tr> <tr> <td>SCAN</td> <td></td> <td>YY</td> </tr> </table> <p>4) Print is started (self print).</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>AUTO</td> </tr> <tr> <td>PRINT</td> <td></td> <td>YY</td> </tr> </table> <p>After completion of printing, returns to "2)" display.</p>	ADJUST	EXP.	AUTO			XX	ADJUST	EXP.	AUTO			YY	ADJUST	EXP.	AUTO	SCAN		YY	ADJUST	EXP.	AUTO	PRINT		YY				
ADJUST	EXP.	AUTO																													
		XX																													
ADJUST	EXP.	AUTO																													
		YY																													
ADJUST	EXP.	AUTO																													
SCAN		YY																													
ADJUST	EXP.	AUTO																													
PRINT		YY																													



Main code	Sub code	Contents	Details of function/operation																																								
46	13	Density adjustment in the FAX mode (Normal text) (When MX-FX12 is installed)	<p>[Function] Scan is started with the exposure adjustment value entered with [START] key, and the stored data of the selected mode on the FAX side is rewritten into the input value.</p> <p>Density adjustment value data table</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Photo</th> <th>Exposure adjustment value</th> </tr> </thead> <tbody> <tr> <td>STD (Normal text)</td> <td>off</td> <td></td> </tr> <tr> <td rowspan="2">Fine (Fine text)</td> <td>on</td> <td></td> </tr> <tr> <td>off</td> <td></td> </tr> <tr> <td rowspan="2">Sfine (Super fine)</td> <td>on</td> <td></td> </tr> <tr> <td>off</td> <td></td> </tr> </tbody> </table> <p>When initializing each data: 50</p> <p>[Operation]</p> <p>1) Initial display</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>STD</td> </tr> <tr> <td></td> <td></td> <td>XX</td> </tr> </table> <p>("XX" is the corresponding exposure adjustment value of normal text mode stored on the FAX side.)</p> <p>2) Enter a 2-digit value as the exposure adjustment value with [Numeric] key.</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>STD</td> </tr> <tr> <td></td> <td></td> <td>YY</td> </tr> </table> <p>("YY" is the entered exposure adjustment value.)</p> <p>3) Scan is started (self print), and the LED of [START] key is turned off.</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>STD</td> </tr> <tr> <td>SCAN</td> <td></td> <td>YY</td> </tr> </table> <p>4) Print is started (self print).</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>STD</td> </tr> <tr> <td>PRINT</td> <td></td> <td>YY</td> </tr> </table> <p>After completion of printing, returns to "2)" display.</p>	Mode	Photo	Exposure adjustment value	STD (Normal text)	off		Fine (Fine text)	on		off		Sfine (Super fine)	on		off		ADJUST	EXP.	STD			XX	ADJUST	EXP.	STD			YY	ADJUST	EXP.	STD	SCAN		YY	ADJUST	EXP.	STD	PRINT		YY
Mode	Photo	Exposure adjustment value																																									
STD (Normal text)	off																																										
Fine (Fine text)	on																																										
	off																																										
Sfine (Super fine)	on																																										
	off																																										
ADJUST	EXP.	STD																																									
		XX																																									
ADJUST	EXP.	STD																																									
		YY																																									
ADJUST	EXP.	STD																																									
SCAN		YY																																									
ADJUST	EXP.	STD																																									
PRINT		YY																																									
14		Density adjustment in the FAX mode (Fine text) (When MX-FX12 is installed)	<p>[Function] When [START] key is pressed, scan is started with the entered exposure adjustment value and the data of the selected mode on the FAX side is changed to the entered value. For the density adjustment value table data, refer to SIM46-13 (FAX mode density adjustment (Normal text).)</p> <p>[Operation]</p> <p>1) Initial display</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>FINE</td> </tr> <tr> <td></td> <td></td> <td>XX</td> </tr> </table> <p>("XX" is the corresponding exposure adjustment value of the fine text mode stored on the FAX side.)</p> <p>2) Enter a 2-digit value as the exposure adjustment value with [Numeric] key.</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>FINE</td> </tr> <tr> <td></td> <td></td> <td>YY</td> </tr> </table> <p>("YY" is the entered exposure adjustment value.)</p> <p>3) Scan start (self print)</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>FINE</td> </tr> <tr> <td>SCAN</td> <td></td> <td>YY</td> </tr> </table> <p>4) Print start (self print)</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>AUTO</td> </tr> <tr> <td>PRINT</td> <td></td> <td>YY</td> </tr> </table> <p>After completion of printing, returns to "2)" display.</p>	ADJUST	EXP.	FINE			XX	ADJUST	EXP.	FINE			YY	ADJUST	EXP.	FINE	SCAN		YY	ADJUST	EXP.	AUTO	PRINT		YY																
ADJUST	EXP.	FINE																																									
		XX																																									
ADJUST	EXP.	FINE																																									
		YY																																									
ADJUST	EXP.	FINE																																									
SCAN		YY																																									
ADJUST	EXP.	AUTO																																									
PRINT		YY																																									
15		Density adjustment in the FAX mode (Super fine) (When MX-FX12 is installed)	<p>[Function] When [START] key is pressed, scan is started with the entered exposure adjustment value and the data of the selected mode on the FAX side is changed to the entered value. For the density adjustment value table data, refer to SIM46-13 (FAX mode density adjustment (Normal text).)</p> <p>[Operation]</p> <p>1) Initial display</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>S-FINE</td> </tr> <tr> <td></td> <td></td> <td>XX</td> </tr> </table> <p>("XX" is the corresponding exposure adjustment value of the super fine mode stored on the FAX side.)</p> <p>2) Enter a 2-digit value as the exposure adjustment value with [Numeric] key.</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>S-FINE</td> </tr> <tr> <td></td> <td></td> <td>YY</td> </tr> </table> <p>("YY" is the entered exposure adjustment value.)</p> <p>3) Scan start (self print)</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>S-FINE</td> </tr> <tr> <td>SCAN</td> <td></td> <td>YY</td> </tr> </table> <p>4) Print start (self print)</p> <table border="1"> <tr> <td>ADJUST</td> <td>EXP.</td> <td>S-FINE</td> </tr> <tr> <td>PRINT</td> <td></td> <td>YY</td> </tr> </table> <p>After completion of printing, returns to "2)" display.</p>	ADJUST	EXP.	S-FINE			XX	ADJUST	EXP.	S-FINE			YY	ADJUST	EXP.	S-FINE	SCAN		YY	ADJUST	EXP.	S-FINE	PRINT		YY																
ADJUST	EXP.	S-FINE																																									
		XX																																									
ADJUST	EXP.	S-FINE																																									
		YY																																									
ADJUST	EXP.	S-FINE																																									
SCAN		YY																																									
ADJUST	EXP.	S-FINE																																									
PRINT		YY																																									

Main code	Sub code	Contents	Details of function/operation																													
46	18	Image contrast adjustment (300dpi)	<p>[Function] Contrast is set for each mode. When this simulation is executed, the current set value is displayed in 2 digits (Default: 50). Change the set value and press [START] key to make a copy under the set value. When the set value is increased, the contrast becomes higher. When the set value is decreased, the contrast becomes lower. In this case, only Exp.3 copy is made. When, however, the setting is made to make higher contrast, Exp.1 and Exp.5 copies also become in higher contrast. When made to a lower contrast, Exp1. and Exp.5 copies become lower contrast, too. Press [◀] [▶] key to switch the mode. The set value of the selected mode is displayed on the LCD/display. (Adjustment value: 1 – 99)</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>AE mode (300dpi)</td> <td>AE</td> <td>COPY mode lamp</td> <td>50</td> </tr> <tr> <td>TEXT mode (300dpi)</td> <td>TEXT</td> <td>PRINT mode lamp</td> <td>50</td> </tr> <tr> <td>PHOTO mode</td> <td>PHOTO</td> <td>SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>TS mode (TEXT) (300dpi)</td> <td>TSTXT</td> <td>PRINT mode lamp SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>TS mode (AE) (300dpi)</td> <td>TSAE</td> <td>COPY mode lamp SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>Dither mode</td> <td>D_PHO</td> <td>COPY mode lamp PRINT mode lamp SCAN mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>* No density display on LCD/display.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Display item	LED	Default	AE mode (300dpi)	AE	COPY mode lamp	50	TEXT mode (300dpi)	TEXT	PRINT mode lamp	50	PHOTO mode	PHOTO	SCAN mode lamp	50	TS mode (TEXT) (300dpi)	TSTXT	PRINT mode lamp SCAN mode lamp	50	TS mode (AE) (300dpi)	TSAE	COPY mode lamp SCAN mode lamp	50	Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	50	
Mode	Display item	LED	Default																													
AE mode (300dpi)	AE	COPY mode lamp	50																													
TEXT mode (300dpi)	TEXT	PRINT mode lamp	50																													
PHOTO mode	PHOTO	SCAN mode lamp	50																													
TS mode (TEXT) (300dpi)	TSTXT	PRINT mode lamp SCAN mode lamp	50																													
TS mode (AE) (300dpi)	TSAE	COPY mode lamp SCAN mode lamp	50																													
Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	50																													
19		Exposure mode setup	<p>[Function] <γ table setting> When this simulation is executed, the code number of the current set gamma table is displayed. (Default: 2) Enter the code number corresponding to the desired gamma table, and press [◀] [▶] key to change the mode and write into the EEPROM.</p> <p><AE operation mode> When setting the γ table, press [▶] key to change to the AE operation mode, and the current set code number of the AE operation mode is displayed. (Default: 0) Enter the code number corresponding to the desired AE operation mode and press [◀] [▶] key to change the mode and write into the EEPROM.</p> <p><PHOTO image process setting> When [▶] key is pressed in AE operation mode setting, the mode is changed to the PHOTO image process setting and the code number of the current set PHOTO image process setting is displayed. (Default: 1) Enter the code number corresponding to the desired PHOTO image process setting and press [◀] [▶] key to change the mode and write into the EEPROM.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>Code number</th> <th>Setting content</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td rowspan="2">γ</td> <td rowspan="2">GAMMA</td> <td>1</td> <td>Image quality priority mode</td> <td></td> </tr> <tr> <td>2</td> <td>Toner consumption priority mode</td> <td>Default</td> </tr> <tr> <td rowspan="2">AE</td> <td rowspan="2">AE</td> <td>0</td> <td>Lead edge stop</td> <td>Default</td> </tr> <tr> <td>1</td> <td>Real time process</td> <td></td> </tr> <tr> <td rowspan="2">PHOTO</td> <td rowspan="2">PHOTO</td> <td>1</td> <td>Error diffusion process</td> <td>Default</td> </tr> <tr> <td>2</td> <td>Dither process</td> <td></td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 43-01.</p>	Mode	Display item	Code number	Setting content	Remark	γ	GAMMA	1	Image quality priority mode		2	Toner consumption priority mode	Default	AE	AE	0	Lead edge stop	Default	1	Real time process		PHOTO	PHOTO	1	Error diffusion process	Default	2	Dither process	
Mode	Display item	Code number	Setting content	Remark																												
γ	GAMMA	1	Image quality priority mode																													
		2	Toner consumption priority mode	Default																												
AE	AE	0	Lead edge stop	Default																												
		1	Real time process																													
PHOTO	PHOTO	1	Error diffusion process	Default																												
		2	Dither process																													

Main code	Sub code	Contents	Details of function/operation																												
46	20	RSPF exposure correction	<p>[Function] Used to adjust the exposure correction amount in the RSPF mode. The adjustment is made by adjusting Vref voltage variation for the OC mode. When this simulation is executed, the current set value is displayed in 2 digits (Default: 50). Change the set value and press [START] key to save the setting and make a copy. When the set value is increased, copy becomes darker. When the set value is decreased, copy becomes lighter. (Adjustment range: 1 – 99)</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>Default</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>RSPF</td> <td>SPF</td> <td>50</td> <td></td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Display item	Default	Remark	RSPF	SPF	50																					
Mode	Display item	Default	Remark																												
RSPF	SPF	50																													
	29	Image contrast adjustment (600dpi)	<p>[Function] Contrast is set for each mode. When this simulation is executed, the current set value is displayed in 2 digits (Default: 50). Change the set value and press [START] key to make a copy under the set value. When the set value is increased, the contrast becomes higher. When the set value is decreased, the contrast becomes lower. In this case, only Exp.3 copy is made. When, however, the setting is made to make higher contrast, Exp.1 and Exp.5 copies also become in higher contrast. When made to a lower contrast, Exp1. and Exp.5 copies become lower contrast, too. Press [◀] [▶] key to switch the mode. The set value of the selected mode is displayed on the LCD/display. (Adjustment value: 1 – 99)</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>AE mode (600dpi)</td> <td>AE</td> <td>COPY mode lamp</td> <td>50</td> </tr> <tr> <td>TEXT mode (600dpi)</td> <td>TEXT</td> <td>PRINT mode lamp</td> <td>50</td> </tr> <tr> <td>PHOTO mode</td> <td>PHOTO</td> <td>SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>TS mode (TEXT) (600dpi)</td> <td>TSTXT</td> <td>PRINT mode lamp SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>TS mode (AE) (600dpi)</td> <td>TSAE</td> <td>COPY mode lamp SCAN mode lamp</td> <td>50</td> </tr> <tr> <td>Dither mode</td> <td>D_PHO</td> <td>COPY mode lamp PRINT mode lamp SCAN mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>* No density display on LCD/display.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Display item	LED	Default	AE mode (600dpi)	AE	COPY mode lamp	50	TEXT mode (600dpi)	TEXT	PRINT mode lamp	50	PHOTO mode	PHOTO	SCAN mode lamp	50	TS mode (TEXT) (600dpi)	TSTXT	PRINT mode lamp SCAN mode lamp	50	TS mode (AE) (600dpi)	TSAE	COPY mode lamp SCAN mode lamp	50	Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	50
Mode	Display item	LED	Default																												
AE mode (600dpi)	AE	COPY mode lamp	50																												
TEXT mode (600dpi)	TEXT	PRINT mode lamp	50																												
PHOTO mode	PHOTO	SCAN mode lamp	50																												
TS mode (TEXT) (600dpi)	TSTXT	PRINT mode lamp SCAN mode lamp	50																												
TS mode (AE) (600dpi)	TSAE	COPY mode lamp SCAN mode lamp	50																												
Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	50																												
	30	AE limit adjustment	<p>[Function] Used to set the limit value in AE and AE (toner save). Change the setting and press [ENTER]/[START] key to write the setting into the EEPROM. The machine goes into the sub code entry standby mode. By pressing [◀] [▶] key, setting is changed. (Setting range: 0 - 255, Default 196)</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>Limit value for AE</td> <td>AE</td> <td></td> </tr> <tr> <td>Limit value for AE (Toner save)</td> <td>TSAE</td> <td></td> </tr> <tr> <td>Limit value for AE (SPF)</td> <td>AESPF</td> <td></td> </tr> <tr> <td>Limit value for AE (Toner save), (SPF)</td> <td>TAESPF</td> <td></td> </tr> </tbody> </table> <p><Remark> When simulation 26-06 (Destination setting) or simulation 46-19 Auto Exposure mode is changed, the setting of this simulation is also changed to the default in connection.</p> <p>[Operation] The operation is similar to simulation 46-19.</p>	Mode	Display item	Remark	Limit value for AE	AE		Limit value for AE (Toner save)	TSAE		Limit value for AE (SPF)	AESPF		Limit value for AE (Toner save), (SPF)	TAESPF														
Mode	Display item	Remark																													
Limit value for AE	AE																														
Limit value for AE (Toner save)	TSAE																														
Limit value for AE (SPF)	AESPF																														
Limit value for AE (Toner save), (SPF)	TAESPF																														

Main code	Sub code	Contents	Details of function/operation																																								
46	31	Image sharpness adjustment	<p>[Function] Used to adjust sharpening/blurring of image in each mode.</p> <table border="1"> <thead> <tr> <th>Image quality</th> <th>Setting No</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>Blurring</td> <td>0</td> <td></td> </tr> <tr> <td>Standard</td> <td>1</td> <td>Default</td> </tr> <tr> <td>Sharpening</td> <td>2</td> <td></td> </tr> </tbody> </table> <p>When this simulation is executed, warm-up and shading are performed and the current set value is displayed. (Default: 1) Change the set value and press [START] key to make a copy under the set conditions. To change the mode, press [◀] [▶] key. The code number of the selected mode is displayed on the LCD/display.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>AE mode</td> <td>AE</td> <td>COPY mode lamp</td> <td>1</td> </tr> <tr> <td>TEXT mode</td> <td>TEXT</td> <td>PRINT mode lamp</td> <td>1</td> </tr> <tr> <td>PHOTO mode</td> <td>PHOTO</td> <td>SCAN mode lamp</td> <td>1</td> </tr> <tr> <td>TS mode (TEXT)</td> <td>TSTXT</td> <td>PRINT mode lamp SCAN mode lamp</td> <td>1</td> </tr> <tr> <td>TS mode (AE)</td> <td>TSAE</td> <td>COPY mode lamp SCAN mode lamp</td> <td>1</td> </tr> <tr> <td>Dither mode</td> <td>D_PHO</td> <td>COPY mode lamp PRINT mode lamp SCAN mode lamp</td> <td>1</td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 46-01.</p>	Image quality	Setting No	Remark	Blurring	0		Standard	1	Default	Sharpening	2		Mode	Display item	LED	Default	AE mode	AE	COPY mode lamp	1	TEXT mode	TEXT	PRINT mode lamp	1	PHOTO mode	PHOTO	SCAN mode lamp	1	TS mode (TEXT)	TSTXT	PRINT mode lamp SCAN mode lamp	1	TS mode (AE)	TSAE	COPY mode lamp SCAN mode lamp	1	Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	1
	Image quality	Setting No	Remark																																								
Blurring	0																																										
Standard	1	Default																																									
Sharpening	2																																										
Mode	Display item	LED	Default																																								
AE mode	AE	COPY mode lamp	1																																								
TEXT mode	TEXT	PRINT mode lamp	1																																								
PHOTO mode	PHOTO	SCAN mode lamp	1																																								
TS mode (TEXT)	TSTXT	PRINT mode lamp SCAN mode lamp	1																																								
TS mode (AE)	TSAE	COPY mode lamp SCAN mode lamp	1																																								
Dither mode	D_PHO	COPY mode lamp PRINT mode lamp SCAN mode lamp	1																																								
32	Copier color reproduction setup	<p>[Function] Used to set color reproduction in each mode. Colors easy to be copied and colors difficult to be copied can be switched.</p> <table border="1"> <thead> <tr> <th>Set value</th> <th>Colors easy to be copied</th> <th>Colors difficult to be copied</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Purple, Blue, Red</td> <td>Yellow, Green, Water blue</td> </tr> <tr> <td>1</td> <td>Water blue, Green, Blue</td> <td>Purple, Red, Yellow</td> </tr> <tr> <td>2</td> <td>Yellow, Red, Green</td> <td>Blue, Water blue, Purple</td> </tr> </tbody> </table> <p>* This setting has virtually no effect on black-and-white documents. When this simulation is executed, warm-up and shading are performed and the current set value is displayed. (Default: 0) Press [START] key to make a copy under the set conditions . At that time, color components are changed for used in copying. To change the mode, press [◀] [▶] key. The code number of the selected mode is displayed on the LCD/display.</p> <table border="1"> <thead> <tr> <th>Specification component</th> <th>Setting No</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>Green</td> <td>0</td> <td>Default</td> </tr> <tr> <td>Red</td> <td>1</td> <td></td> </tr> <tr> <td>Blue</td> <td>2</td> <td></td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>AE mode (including TS)</td> <td>AE</td> <td>COPY mode lamp</td> <td>0</td> </tr> <tr> <td>TEXT mode (including TS)</td> <td>TEXT</td> <td>PRINT mode lamp</td> <td>0</td> </tr> <tr> <td>PHOTO mode</td> <td>PHOTO</td> <td>SCAN mode lamp</td> <td>0</td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 46-01.</p>	Set value	Colors easy to be copied	Colors difficult to be copied	0	Purple, Blue, Red	Yellow, Green, Water blue	1	Water blue, Green, Blue	Purple, Red, Yellow	2	Yellow, Red, Green	Blue, Water blue, Purple	Specification component	Setting No	Remark	Green	0	Default	Red	1		Blue	2		Mode	Display item	LED	Default	AE mode (including TS)	AE	COPY mode lamp	0	TEXT mode (including TS)	TEXT	PRINT mode lamp	0	PHOTO mode	PHOTO	SCAN mode lamp	0	
Set value	Colors easy to be copied	Colors difficult to be copied																																									
0	Purple, Blue, Red	Yellow, Green, Water blue																																									
1	Water blue, Green, Blue	Purple, Red, Yellow																																									
2	Yellow, Red, Green	Blue, Water blue, Purple																																									
Specification component	Setting No	Remark																																									
Green	0	Default																																									
Red	1																																										
Blue	2																																										
Mode	Display item	LED	Default																																								
AE mode (including TS)	AE	COPY mode lamp	0																																								
TEXT mode (including TS)	TEXT	PRINT mode lamp	0																																								
PHOTO mode	PHOTO	SCAN mode lamp	0																																								



Main code	Sub code	Contents	Details of function/operation												
46	39	FAX mode sharpness adjustment (When MX-FX12 is installed)	<p>[Function] When [START] key is pressed, scan is started with the entered sharpness adjustment value, and the data of the selected mode stored on the FAX side is changed to the entered value.</p> <p>Sharpness adjustment value data table</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Sharpness adjustment value</th> </tr> </thead> <tbody> <tr> <td>1: STD</td> <td></td> </tr> <tr> <td>2: FINE</td> <td></td> </tr> <tr> <td>3: S-FINE</td> <td></td> </tr> <tr> <td>4: FINE/PHOTO</td> <td></td> </tr> <tr> <td>5: S-FINE/PHOTO</td> <td></td> </tr> </tbody> </table> <p>When initializing each data: 1</p> <p>[Operation]</p> <p>1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SHARPNESS SETTING PRESS ←, →</div> <p>2) [◀] [▶] key or after 2sec Every time when [▶] key is pressed, the second line is changed in the sequence of No. 1 → 2 → 3 → 4 → 5 → 1. When [◀] key is pressed, the sequence is reversed.</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SHARPNESS SET (1-5) 1: STD</div> <p>3) Select the arrow key 1-5, and the LED of [START] key is lighted.</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SHARPNESS SETTING ZZZZ (0-2) X</div> <p>("ZZZZ" is the mode selected among STD, FINE, S-FINE, FINE/PHOTO, and S-FINE/PHOTO.) ("X" is the corresponding sharpness adjustment value of the selected mode stored on the FAX side.) * [Clear] key: Returns to "2" display.</p> <p>4) Enter a one-digit value (0-2) as the sharpness adjustment value with [Numeric] key.</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SHARPNESS SETTING ZZZZ (0-2) Y</div> <p>("Y" is the entered sharpness adjustment value.) * [Clear] key: Returns to "2" display.</p> <p>5) Scan start (self print)</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SHARPNESS SETTING SCAN Y</div> <p>6) Print start (self print)</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SHARPNESS SETTING PRINT Y</div> <p>After completion of printing, returns to "4" display.</p>	Mode	Sharpness adjustment value	1: STD		2: FINE		3: S-FINE		4: FINE/PHOTO		5: S-FINE/PHOTO	
Mode	Sharpness adjustment value														
1: STD															
2: FINE															
3: S-FINE															
4: FINE/PHOTO															
5: S-FINE/PHOTO															

Main code	Sub code	Contents	Details of function/operation														
48	01	Front/rear (main scanning) direction and scan (sub scanning) direction magnification ratio adjustment	<p>[Function] Used to adjust the magnification ratio in the main scan (front/rear) direction and sub scan direction.</p> <p>Enter the adjustment value with [Numeric] key. Press [START] key to save the set value and make a copy. (When the adjustment value is increased by 1, the magnification ratio is increased by 0.1%.)</p> <p>The adjustment mode can be changed by pressing [◀] [▶] key. (Adjustment range: 1 – 99, Default: 50)</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Main scan direction magnification ratio</td> <td>F-R</td> <td>PRINT mode lamp</td> <td>50</td> </tr> <tr> <td>OC mode sub scan direction magnification ratio</td> <td>SCAN</td> <td>SCAN mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Display item	LED	Default	Main scan direction magnification ratio	F-R	PRINT mode lamp	50	OC mode sub scan direction magnification ratio	SCAN	SCAN mode lamp	50		
	Mode	Display item	LED	Default													
Main scan direction magnification ratio	F-R	PRINT mode lamp	50														
OC mode sub scan direction magnification ratio	SCAN	SCAN mode lamp	50														
05	RSPF mode sub scan direction magnification ratio in copying	<p>[Function] Used to display the current RSPF mode sub scan direction magnification ratio on the LCD/display.</p> <p>When [START] key is pressed, the entered data is acquired and saved into the EEPROM, and a copy is made. (When the set value is increased by 1, the magnification ratio is increased by 0.1%.)</p> <p>The adjustment mode can be changed by pressing [◀] [▶] key. (Adjustment range: 1 – 99, Default: 50)</p> <p>When adjusting the RSPF, the mode is set to "Duplex → Single," single copies of two sheets are performed.</p> <p>For printing, regardless of the density mode and the density level, Density mode = MANUAL Density level = 3</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Initial value of duplex setting</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Sub scan magnification ratio adjustment on the front surface of RSPF document</td> <td>S-S</td> <td>SIDE1</td> <td>COPY mode lamp</td> <td>50</td> </tr> <tr> <td>Sub scan magnification ratio adjustment on the back surface of RSPF document</td> <td>D-S</td> <td>SIDE2</td> <td>PRINT mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>* When there is no document in RSPF, copy is inhibited.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Initial value of duplex setting	Display item	LED	Default	Sub scan magnification ratio adjustment on the front surface of RSPF document	S-S	SIDE1	COPY mode lamp	50	Sub scan magnification ratio adjustment on the back surface of RSPF document	D-S	SIDE2	PRINT mode lamp	50
Mode	Initial value of duplex setting	Display item	LED	Default													
Sub scan magnification ratio adjustment on the front surface of RSPF document	S-S	SIDE1	COPY mode lamp	50													
Sub scan magnification ratio adjustment on the back surface of RSPF document	D-S	SIDE2	PRINT mode lamp	50													

Main code	Sub code	Contents	Details of function/operation																																																																																
49	01	MCU Download mode	<p>[Function] When this simulation is executed, "DOWNLOAD MODE" is displayed on the LCD, the machine goes into the program writing mode from PC to Flash ROM. Use the writing tool on the PC and write the program. During writing, the display shows as follows: After completion of download, turn OFF/ON the power to reset.</p> <table border="1"> <thead> <tr> <th>Status</th> <th>Display item</th> <th>Remark</th> </tr> </thead> <tbody> <tr><td>Download data receiving</td><td>RECEIVING</td><td></td></tr> <tr><td>Loader function transfer</td><td>LOADER COPYING</td><td></td></tr> <tr><td>Date delete start</td><td>FLASH ERASE</td><td></td></tr> <tr><td>Data write (Boot section)</td><td>BOOT WRITING</td><td></td></tr> <tr><td>Data write (Program section)</td><td>PROGRAM WRITING</td><td></td></tr> <tr><td>Data write (EEPROM)</td><td>E2PROM WRITING</td><td></td></tr> <tr><td>Data write (LCD)</td><td>LCD DATE WRITING</td><td></td></tr> <tr><td>During SUM CHECK</td><td>FLASH ROM SUM CHECK</td><td></td></tr> <tr><td>During BOOT SUM CHECK</td><td>BOOT SUM CHECK</td><td></td></tr> <tr><td>During EEPROM SUM CHECK</td><td>EEPROM SUM CHECK</td><td></td></tr> <tr><td>Download complete</td><td>DOWNLOAD COMPLETE!</td><td></td></tr> </tbody> </table> <p>In case of an error in download, the following message is displayed on the LCD.</p> <table border="1"> <thead> <tr> <th>Error status</th> <th>Display item</th> </tr> </thead> <tbody> <tr><td>PC data receiving</td><td>E-01 PC TRANS</td></tr> <tr><td>Loader function transfer</td><td>E-02 LOADER COPY</td></tr> <tr><td>FLASH ROM delete</td><td>E-03 FLASH ERASE</td></tr> <tr><td>Boot section FLASH ROM write</td><td>E-04 BOOT WRITE</td></tr> <tr><td>Program section FLASH ROM write</td><td>E-05 PROGRAM WRITE</td></tr> <tr><td>Loader section SUM CHECK</td><td>E-06 LOADER SUM</td></tr> <tr><td>Boot section SUM CHECK</td><td>E-07 BOOT SUM</td></tr> <tr><td>Program section SUM CHECK</td><td>E-08 PROGRAM SUM</td></tr> <tr><td>E2PROM SUM CHECK</td><td>E-09 E2PROM SUM</td></tr> <tr><td>E2PROM write</td><td>E-10 E2PROM WRITE</td></tr> <tr><td>E2PROM read Verify</td><td>E-11 E2PROM READ</td></tr> <tr><td>E2PROM collating Verify</td><td>E-12 E2PROM COLLATE</td></tr> <tr><td>Boot section lens check</td><td>E-13 BOOT LENGTH</td></tr> <tr><td>Program section lens check</td><td>E-14 PROGRAM LENGTH</td></tr> <tr><td>E2PROM lens check</td><td>E-15 E2PROM LENGTH</td></tr> <tr><td>Total data size check</td><td>E-16 DATE SIZE</td></tr> <tr><td>Network board communication error</td><td>E-17 ANB TRANS</td></tr> <tr><td>Network board FRASH ROM write</td><td>E-18 ANB FLASH WRITE</td></tr> <tr><td>LCD section lens check</td><td>E-19 LCD DATE LENGTH</td></tr> <tr><td>LCD section FLASH ROM write</td><td>E-20 LCD DATE WRITE</td></tr> <tr><td>LCD section SUM CHECK</td><td>E-21 LCD DATE SUM</td></tr> </tbody> </table> <p>To enter the download mode, there is a method to use key operations as well as to use a simulation. With the power OFF, press and hold [Clear All] key + [◀] key, turn on the power.</p> <p>[Operation] 1) Initial display</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>DOWNLOAD MODE</p> </div>	Status	Display item	Remark	Download data receiving	RECEIVING		Loader function transfer	LOADER COPYING		Date delete start	FLASH ERASE		Data write (Boot section)	BOOT WRITING		Data write (Program section)	PROGRAM WRITING		Data write (EEPROM)	E2PROM WRITING		Data write (LCD)	LCD DATE WRITING		During SUM CHECK	FLASH ROM SUM CHECK		During BOOT SUM CHECK	BOOT SUM CHECK		During EEPROM SUM CHECK	EEPROM SUM CHECK		Download complete	DOWNLOAD COMPLETE!		Error status	Display item	PC data receiving	E-01 PC TRANS	Loader function transfer	E-02 LOADER COPY	FLASH ROM delete	E-03 FLASH ERASE	Boot section FLASH ROM write	E-04 BOOT WRITE	Program section FLASH ROM write	E-05 PROGRAM WRITE	Loader section SUM CHECK	E-06 LOADER SUM	Boot section SUM CHECK	E-07 BOOT SUM	Program section SUM CHECK	E-08 PROGRAM SUM	E2PROM SUM CHECK	E-09 E2PROM SUM	E2PROM write	E-10 E2PROM WRITE	E2PROM read Verify	E-11 E2PROM READ	E2PROM collating Verify	E-12 E2PROM COLLATE	Boot section lens check	E-13 BOOT LENGTH	Program section lens check	E-14 PROGRAM LENGTH	E2PROM lens check	E-15 E2PROM LENGTH	Total data size check	E-16 DATE SIZE	Network board communication error	E-17 ANB TRANS	Network board FRASH ROM write	E-18 ANB FLASH WRITE	LCD section lens check	E-19 LCD DATE LENGTH	LCD section FLASH ROM write	E-20 LCD DATE WRITE	LCD section SUM CHECK	E-21 LCD DATE SUM
Status	Display item	Remark																																																																																	
Download data receiving	RECEIVING																																																																																		
Loader function transfer	LOADER COPYING																																																																																		
Date delete start	FLASH ERASE																																																																																		
Data write (Boot section)	BOOT WRITING																																																																																		
Data write (Program section)	PROGRAM WRITING																																																																																		
Data write (EEPROM)	E2PROM WRITING																																																																																		
Data write (LCD)	LCD DATE WRITING																																																																																		
During SUM CHECK	FLASH ROM SUM CHECK																																																																																		
During BOOT SUM CHECK	BOOT SUM CHECK																																																																																		
During EEPROM SUM CHECK	EEPROM SUM CHECK																																																																																		
Download complete	DOWNLOAD COMPLETE!																																																																																		
Error status	Display item																																																																																		
PC data receiving	E-01 PC TRANS																																																																																		
Loader function transfer	E-02 LOADER COPY																																																																																		
FLASH ROM delete	E-03 FLASH ERASE																																																																																		
Boot section FLASH ROM write	E-04 BOOT WRITE																																																																																		
Program section FLASH ROM write	E-05 PROGRAM WRITE																																																																																		
Loader section SUM CHECK	E-06 LOADER SUM																																																																																		
Boot section SUM CHECK	E-07 BOOT SUM																																																																																		
Program section SUM CHECK	E-08 PROGRAM SUM																																																																																		
E2PROM SUM CHECK	E-09 E2PROM SUM																																																																																		
E2PROM write	E-10 E2PROM WRITE																																																																																		
E2PROM read Verify	E-11 E2PROM READ																																																																																		
E2PROM collating Verify	E-12 E2PROM COLLATE																																																																																		
Boot section lens check	E-13 BOOT LENGTH																																																																																		
Program section lens check	E-14 PROGRAM LENGTH																																																																																		
E2PROM lens check	E-15 E2PROM LENGTH																																																																																		
Total data size check	E-16 DATE SIZE																																																																																		
Network board communication error	E-17 ANB TRANS																																																																																		
Network board FRASH ROM write	E-18 ANB FLASH WRITE																																																																																		
LCD section lens check	E-19 LCD DATE LENGTH																																																																																		
LCD section FLASH ROM write	E-20 LCD DATE WRITE																																																																																		
LCD section SUM CHECK	E-21 LCD DATE SUM																																																																																		

Main code	Sub code	Contents	Details of function/operation																					
49	02	ANB Download mode	<p>[Function] When this simulation is executed, the machine enters the wiring mode of the program from the USB memory. The status display is as shown below. The program is written from the USB memory. During writing, the LED indicates as shown below. After completion of download, turn OFF/ON the power to reset. <LCD panel model></p> <table border="1"> <thead> <tr> <th>Status</th> <th>LCD display</th> </tr> </thead> <tbody> <tr> <td rowspan="5">Start process</td> <td>PREPARE READ SCRIPT</td> </tr> <tr> <td>NO SCRIPT FILE</td> </tr> <tr> <td>BEGIN SPF UPDATE</td> </tr> <tr> <td>BEGIN LOADER UPDATE</td> </tr> <tr> <td>END LOADER UPDATE</td> </tr> <tr> <td>Data write (Firmware)</td> <td>BEGIN FW UPDATE</td> </tr> <tr> <td>Data write end (Firmware)</td> <td>END FW UPDATE</td> </tr> <tr> <td>Data write (WEB)</td> <td>BEGIN WEB UPDATE</td> </tr> <tr> <td>Data write end (WEB)</td> <td>END WEB UPDATE</td> </tr> <tr> <td rowspan="2">End process</td> <td>END SPF UPDATE</td> </tr> <tr> <td>READ SCRIPT FILE END</td> </tr> </tbody> </table> <p>* During execution of this simulation, only ANB downloading can be operated.</p> <p>[Operation] 1) Initial display (The current version is shown in XX:XX:XX.)</p> <table border="1"> <tr> <td>ANB DOWNLOAD MODE ANB PROG:XX:XX:XX</td> </tr> </table> <p>2) Download completion display</p> <table border="1"> <tr> <td>DOWNLOAD MODE DOWNLOAD COMPLETE!</td> </tr> </table>	Status	LCD display	Start process	PREPARE READ SCRIPT	NO SCRIPT FILE	BEGIN SPF UPDATE	BEGIN LOADER UPDATE	END LOADER UPDATE	Data write (Firmware)	BEGIN FW UPDATE	Data write end (Firmware)	END FW UPDATE	Data write (WEB)	BEGIN WEB UPDATE	Data write end (WEB)	END WEB UPDATE	End process	END SPF UPDATE	READ SCRIPT FILE END	ANB DOWNLOAD MODE ANB PROG:XX:XX:XX	DOWNLOAD MODE DOWNLOAD COMPLETE!
Status	LCD display																							
Start process	PREPARE READ SCRIPT																							
	NO SCRIPT FILE																							
	BEGIN SPF UPDATE																							
	BEGIN LOADER UPDATE																							
	END LOADER UPDATE																							
Data write (Firmware)	BEGIN FW UPDATE																							
Data write end (Firmware)	END FW UPDATE																							
Data write (WEB)	BEGIN WEB UPDATE																							
Data write end (WEB)	END WEB UPDATE																							
End process	END SPF UPDATE																							
	READ SCRIPT FILE END																							
ANB DOWNLOAD MODE ANB PROG:XX:XX:XX																								
DOWNLOAD MODE DOWNLOAD COMPLETE!																								

Main code	Sub code	Contents	Details of function/operation																												
50	01	Lead edge image position	<p>[Function] Used to adjust the copy image position and the lead edge void amount on copy paper. The adjustment is made by adjusting the image scan start position at 100% and the print start position (resist roller ON timing). When this simulation is executed, the current set value is displayed in 2 digits. (Center value: 50) When [◀] [▶] key is pressed, the setting mode and the display are changed. Enter the adjustment value and press [START] key to save the set value and make a copy. When the adjustment is made by the main cassette paper feed, the adjustment values of all the paper feed ports become the same. (When the set value is increased by 1, shift is made by 0.1mm.)</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Print start position (Main cassette paper feed)</td> <td>TRAY1</td> <td>COPY mode lamp Main cassette lamp</td> <td>50</td> </tr> <tr> <td>Print start position (Manual paper feed)</td> <td>MFT</td> <td>COPY mode lamp Manual paper feed lamp</td> <td>50</td> </tr> <tr> <td>Image lead edge void amount</td> <td>DEN-A</td> <td>PRINT mode lamp Main cassette lamp</td> <td>50</td> </tr> <tr> <td>Image scan start position</td> <td>RRC-A</td> <td>SCAN mode lamp Main cassette lamp</td> <td>50</td> </tr> <tr> <td>Image rear edge void amount (Cassette paper feed)</td> <td>DEN-B</td> <td>COPY mode lamp PRINT mode lamp SCAN mode lamp Main cassette lamp</td> <td>50</td> </tr> <tr> <td>Image rear edge void amount (Manual paper feed)</td> <td>RRC-B</td> <td>COPY mode lamp PRINT mode lamp Manual paper feed lamp</td> <td>50</td> </tr> </tbody> </table> <p>* When printing with the manual paper feed tray, use paper of the letter size. * When paper is discharged, the shifter is operated.</p> <p>[Adjustment procedure] 1) Set the print start position (AE mode lamp/COPY mode lamp ON) (A), the lead edge void amount (TEXT mode lamp/PRINT mode lamp ON) (B), and the scan start position (PHOTO mode lamp/SCAN mode lamp ON) (C) to 0, and make a copy of a scale at 100%. 2) Measure the image loss (Rmm) of the scale. Set $C = 10 \times R$ (mm). (Example: Set to 40.) When the value of C is increased by 10, the image loss is decreased by 1mm. (Default: 50) 3) Measure the distance (Hmm) from the paper lead edge to the image print start position. Set $A = 10 \times H$ (mm). (Example: Set to 50.) When the value of A is increased by 10, the image lead edge is moved to the paper lead edge by 1mm. (Default: 50). 4) Set the lead edge void amount to $B = 50$ (2.5mm). (Default: 50) When the value of B is increased by 10, the void is extended by about 0.1mm. (For 25 or less, however, the void amount is regarded as 0.)</p> <p>* The RSPF adjustment is made by adjusting the RSPF image scan start position after OC adjustment.</p> <p>[Operation] The operation is similar to simulation 46-01.</p> <div style="text-align: right;"> <p>(Example)</p> </div>	Mode	Display item	LED	Default	Print start position (Main cassette paper feed)	TRAY1	COPY mode lamp Main cassette lamp	50	Print start position (Manual paper feed)	MFT	COPY mode lamp Manual paper feed lamp	50	Image lead edge void amount	DEN-A	PRINT mode lamp Main cassette lamp	50	Image scan start position	RRC-A	SCAN mode lamp Main cassette lamp	50	Image rear edge void amount (Cassette paper feed)	DEN-B	COPY mode lamp PRINT mode lamp SCAN mode lamp Main cassette lamp	50	Image rear edge void amount (Manual paper feed)	RRC-B	COPY mode lamp PRINT mode lamp Manual paper feed lamp	50
Mode	Display item	LED	Default																												
Print start position (Main cassette paper feed)	TRAY1	COPY mode lamp Main cassette lamp	50																												
Print start position (Manual paper feed)	MFT	COPY mode lamp Manual paper feed lamp	50																												
Image lead edge void amount	DEN-A	PRINT mode lamp Main cassette lamp	50																												
Image scan start position	RRC-A	SCAN mode lamp Main cassette lamp	50																												
Image rear edge void amount (Cassette paper feed)	DEN-B	COPY mode lamp PRINT mode lamp SCAN mode lamp Main cassette lamp	50																												
Image rear edge void amount (Manual paper feed)	RRC-B	COPY mode lamp PRINT mode lamp Manual paper feed lamp	50																												


Main code	Sub code	Contents	Details of function/operation																				
50	06	Copy lead edge position adjustment (RSPF)	<p>[Function] Used to adjust the RSPF copy lead edge. When the adjustment value of the document scan position adjustment is increased by 1, the scan start timing is advanced by 0.1mm. The print result is shifted to the opposite direction of the scan start position. The adjustment mode can be changed by pressing [◀] [▶] key. (Adjustment range: 1 – 99, Default: 50) When scanning a back surface of document, the mode must be changed to operate the RSPF by pressing [2-SIDED COPY] key.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Initial value of duplex setting</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Front surface document scan position adjustment</td> <td>S-S</td> <td>SIDE1</td> <td>COPY mode lamp</td> <td>50</td> </tr> <tr> <td>Back surface document scan position adjustment</td> <td>D-S</td> <td>SIDE2</td> <td>PRINT mode lamp</td> <td>50</td> </tr> <tr> <td>Rear edge void adjustment (RSPF)</td> <td>S-S</td> <td>END</td> <td>SCAN mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>* When there is no document in the RSPF, copy is inhibited. * When paper is discharged, the shifter is operated.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Initial value of duplex setting	Display item	LED	Default	Front surface document scan position adjustment	S-S	SIDE1	COPY mode lamp	50	Back surface document scan position adjustment	D-S	SIDE2	PRINT mode lamp	50	Rear edge void adjustment (RSPF)	S-S	END	SCAN mode lamp	50
	Mode	Initial value of duplex setting	Display item	LED	Default																		
Front surface document scan position adjustment	S-S	SIDE1	COPY mode lamp	50																			
Back surface document scan position adjustment	D-S	SIDE2	PRINT mode lamp	50																			
Rear edge void adjustment (RSPF)	S-S	END	SCAN mode lamp	50																			
10	Center offset adjustment	<p>[Function] Used to adjust the center offset position of copy images on copy paper and that in scanning document. When this simulation is executed, the current set value is displayed. Enter the adjustment value and press [START] key to save the setting and make a copy. (When the set value is changed by 1, the center is shifted by 0.1mm.) When the adjustment value is increased, the center is shifted to right. When decreased, the center is shifted to left. The modes can be selected by pressing [◀] [▶] key. When the set value is changed largely, the area outside the shading area may be scanned to cause black streaks on the edges. When the RSPF is used, select the mode for use of the SPF/RSPF by [2-SIDED COPY] key.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Print center offset (Main cassette paper feed)</td> <td>TRAY1</td> <td>COPY mode lamp Main cassette lamp</td> <td>50</td> </tr> <tr> <td>Print center offset (Manual paper feed)</td> <td>MFT</td> <td>COPY mode lamp Manual paper feed lamp</td> <td>50</td> </tr> <tr> <td>(*) 2nd print center offset (Main cassette paper feed)</td> <td>SIDE2</td> <td>PRINT mode lamp Main cassette lamp</td> <td>50</td> </tr> </tbody> </table> <p>(*): For Simplex models, skip. * When printing with the manual paper feed tray, use paper of the letter size. * In the 2nd print center offset adjustment, print is made forcibly as 1to2/Short Edge from OC regardless of duplex setting. * When paper is discharged, the shifter is operated.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Display item	LED	Default	Print center offset (Main cassette paper feed)	TRAY1	COPY mode lamp Main cassette lamp	50	Print center offset (Manual paper feed)	MFT	COPY mode lamp Manual paper feed lamp	50	(*) 2nd print center offset (Main cassette paper feed)	SIDE2	PRINT mode lamp Main cassette lamp	50					
Mode	Display item	LED	Default																				
Print center offset (Main cassette paper feed)	TRAY1	COPY mode lamp Main cassette lamp	50																				
Print center offset (Manual paper feed)	MFT	COPY mode lamp Manual paper feed lamp	50																				
(*) 2nd print center offset (Main cassette paper feed)	SIDE2	PRINT mode lamp Main cassette lamp	50																				

Main code	Sub code	Contents	Details of function/operation																				
50	12	Document off-center adjustment	<p>[Function] Used to adjust document scan off-center adjustment. The adjustment modes can be selected by pressing [◀] [▶] key. (Adjustment range: 1 – 99, Default: 50) When the adjustment value is increased, the print result is shifted to left.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Initial value of duplex setting</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Platen document scan</td> <td>S-S</td> <td>OC</td> <td>COPY mode lamp</td> <td>50</td> </tr> <tr> <td>SPF document front scan</td> <td>S-S</td> <td>SPF</td> <td>PRINT mode lamp</td> <td>50</td> </tr> <tr> <td>RSPF document back scan</td> <td>D-S</td> <td>RSPF</td> <td>SCAN mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>* When paper is discharged, the shifter is operated.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Initial value of duplex setting	Display item	LED	Default	Platen document scan	S-S	OC	COPY mode lamp	50	SPF document front scan	S-S	SPF	PRINT mode lamp	50	RSPF document back scan	D-S	RSPF	SCAN mode lamp	50
	Mode	Initial value of duplex setting	Display item	LED	Default																		
Platen document scan	S-S	OC	COPY mode lamp	50																			
SPF document front scan	S-S	SPF	PRINT mode lamp	50																			
RSPF document back scan	D-S	RSPF	SCAN mode lamp	50																			
18		Memory reverse position adjustment in duplex copy	<p>[Function] When this simulation is executed, the current set correction value is displayed. Enter the correction value and press [START] key to save the entered correction value. (Correction value range; 1 – 99, Default: 50) For S-D mode front surface print and print of even paged in D-S mode, reverse memory copy operation is performed from the rear edge of documents. When, therefore, the print position adjustment of output images is required, adjust as follows: In the reverse memory copying, when the document scan is made in the arrow direction, the output image is printed from the rear edge of scan image. When, therefore, the print lead edge is shifted, set the reference chart so that the reference position is on the rear edge, and use this simulation to adjust the set value so that the print lead edge is matched. Since printing is made from the image data most lately stored in memory to the lead edge data from the print start position, the image lead edge adjustment is made by changing the end data position stored in memory by the set value of this simulation. Since it is performed by changing the scan end position, the image position adjustment is made by changing the scan end position and the end data stored in memory. The adjustment modes can be selected by pressing [◀] [▶] key.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Initial value of duplex setting</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>OC memory reverse output position (MX-B201D only)</td> <td>S-D</td> <td>OC</td> <td>COPY mode lamp</td> <td>50</td> </tr> <tr> <td>RSPF memory reverse output position</td> <td>D-S</td> <td>SPF</td> <td>PRINT mode lamp</td> <td>50</td> </tr> </tbody> </table> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;"> <p>Document transport direction ↑</p> </div> <div style="text-align: center;"> <p>Document transport direction ↑</p> </div> </div> <p>* The initial value of duplex setting is "1to2/Long Edge" for the duplex model, or "2to1" for the simplex model. * When paper is discharged, the shifter is operated.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Initial value of duplex setting	Display item	LED	Default	OC memory reverse output position (MX-B201D only)	S-D	OC	COPY mode lamp	50	RSPF memory reverse output position	D-S	SPF	PRINT mode lamp	50					
Mode	Initial value of duplex setting	Display item	LED	Default																			
OC memory reverse output position (MX-B201D only)	S-D	OC	COPY mode lamp	50																			
RSPF memory reverse output position	D-S	SPF	PRINT mode lamp	50																			





Main code	Sub code	Contents	Details of function/operation																								
50	19	Duplex copy rear edge void adjustment (MX-B201D only)	<p>[Function] Used to adjust the rear edge void amount in duplex copy. When this simulation is executed, the current set value is displayed in 2 digits. (Center value: 50.) The adjustment modes can be selected by pressing [◀] [▶] key. (Adjustment range: 1 – 99) Enter the adjustment value and press [START] key to save the set value and make a copy. (The paper information is cleared for every copy.) When the set value is increased by 1, the void amount is increased by about 0.1mm.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Paper rear edge void amount</td> <td>DEN-B</td> <td>PRINT mode lamp</td> <td>50</td> </tr> <tr> <td>Print start position (Duplex back surface)</td> <td>RRC-D</td> <td>SCAN mode lamp</td> <td>50</td> </tr> </tbody> </table> <p>* The initial value for duplex setting is "1to2/Short Edge" for the OC setting, or "2to2" for the RSPF setting. * When paper is discharged, the shifter is operated.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Display item	LED	Default	Paper rear edge void amount	DEN-B	PRINT mode lamp	50	Print start position (Duplex back surface)	RRC-D	SCAN mode lamp	50												
	Mode	Display item	LED	Default																							
Paper rear edge void amount	DEN-B	PRINT mode lamp	50																								
Print start position (Duplex back surface)	RRC-D	SCAN mode lamp	50																								
27	OC rear read edge position adjustment (REAR READ AREA)	<p>[Function] Used to adjust the rear edge position when reading OC. When this simulation is executed, the current set value is displayed in 2 digits. Enter the adjustment value with 10 key (adjustment range: 1 - 99, default: 50), and press [START] key, and the set value is saved and a copy is made. (The copy information is cleared for every copying.) When the set value is increased by 1, the rear read edge position is shifted about 0.1mm to increase the read area.</p> <p>[Operation] The operation is similar to simulation 46-01.</p>																									
51	02	Resist quantity adjustment	<p>[Function] Used to adjust the contact pressure of the main unit resist roller and the RSPF resist roller onto paper. When this simulation is executed, the current set value is displayed. The adjustment modes can be selected by pressing [◀] [▶] key. Enter the adjustment value with [Numeric] key and press [START] key to save the set value and make a copy.</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Display item</th> <th>LED</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td>Main cassette paper feed</td> <td>TRAY1</td> <td>COPY mode lamp Main cassette lamp</td> <td>50</td> </tr> <tr> <td>Manual paper feed</td> <td>MFT</td> <td>COPY mode lamp Manual paper feed lamp</td> <td>50</td> </tr> <tr> <td>RSPF document paper feed (Front surface)</td> <td>SIDE1</td> <td>COPY mode lamp PRINT mode lamp SCAN mode lamp Main cassette lamp</td> <td>50</td> </tr> <tr> <td>RSPF document paper feed (Back surface)</td> <td>SIDE2</td> <td>COPY mode lamp PRINT mode lamp Main cassette lamp</td> <td>50</td> </tr> <tr> <td>Duplex back surface</td> <td>DUP-2</td> <td>PRINT mode lamp SCAN mode lamp Main cassette lamp</td> <td>50</td> </tr> </tbody> </table> <p>[Operation] The operation is similar to simulation 46-01.</p>	Mode	Display item	LED	Default	Main cassette paper feed	TRAY1	COPY mode lamp Main cassette lamp	50	Manual paper feed	MFT	COPY mode lamp Manual paper feed lamp	50	RSPF document paper feed (Front surface)	SIDE1	COPY mode lamp PRINT mode lamp SCAN mode lamp Main cassette lamp	50	RSPF document paper feed (Back surface)	SIDE2	COPY mode lamp PRINT mode lamp Main cassette lamp	50	Duplex back surface	DUP-2	PRINT mode lamp SCAN mode lamp Main cassette lamp	50
Mode	Display item	LED	Default																								
Main cassette paper feed	TRAY1	COPY mode lamp Main cassette lamp	50																								
Manual paper feed	MFT	COPY mode lamp Manual paper feed lamp	50																								
RSPF document paper feed (Front surface)	SIDE1	COPY mode lamp PRINT mode lamp SCAN mode lamp Main cassette lamp	50																								
RSPF document paper feed (Back surface)	SIDE2	COPY mode lamp PRINT mode lamp Main cassette lamp	50																								
Duplex back surface	DUP-2	PRINT mode lamp SCAN mode lamp Main cassette lamp	50																								

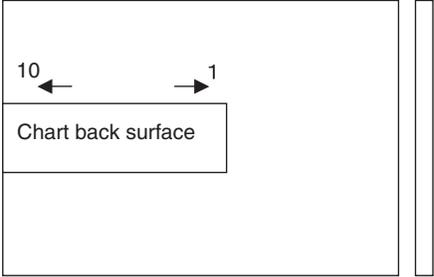Main code	Sub code	Contents	Details of function/operation
63	02	Black level automatic correction	<p>[Function] Used to acquire the black level target value used for the black level adjustment of white balance. When this simulation is executed, the current correction value is displayed in 3 digits of 12bit hexadecimal number.</p> <p>Place the gray gradation chart (UKOG-0162FCZZ) used as the correction document so that the density 10 (black side) comes on the left side and that the chart is upside down at the center of the plate left center.</p>  <p>When [ENTER]/[START] key is pressed, the mirror base unit scans the chart and calculates the correction value.</p> <p>After completion of correction, the corrected value is displayed on the LCD/display.</p> <ul style="list-style-type: none"> * Default: 0 * If the value is set to the default, operation is made with 0x60. * When error is occur JAM lamp is ON. <p>[Operation]</p> <p>1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-bottom: 5px;">63-02 BLACK LEVEL 000</div> <p>2) [ENTER]/[START] key: Correction start</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-bottom: 5px;">63-02 BLACK LEVEL EXECUTING...</div> <p style="margin-left: 200px;"><During canceling - When [Clear]/[Clear All] key is pressed-></p> <p style="margin-left: 200px;">After canceling, the machine goes into the sub code entry standby mode.</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-left: 200px; margin-bottom: 5px;">THE JOB IS BEING CANCELED.</div> <p>3) After execution</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-left: 200px; margin-bottom: 5px;">63-02 BLACK LEVEL *** OK</div> <p>3) In case of an error</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-left: 200px; margin-bottom: 5px;">63-02 BLACK LEVEL *** ERR</div>
12		Light quantity stabilization wait time setting	<p>[Function] Used to set the wait time before entering the light quantity level stable evaluation process in the light quantity stable process of white balance. (Note: The light quantity stable level in the previous light quantity stable state is used as the target. When the light quantity level reaches the target during the wait time, the set time of this simulation is ignored and the operation enters the stable evaluation process.)</p> <p>When this simulation is executed, the currently set value is displayed.</p> <p>Enter the adjustment value with [Numeric] key and press [START] key. The entered value is stored and the machine goes into the sub code entry standby mode.</p> <p>Setting range: 0 – 99 (Complying with the light quantity stable wait time of 0 – 99sec.)</p> <p>Default: 15 (15sec)</p> <p>[Operation] The operation is similar to simulation 9-04.</p>
13		Light quantity stabilization band setting	<p>[Function] When the difference between the maximum and the minimum values of the light quantity level sampled for 3.2sec in the cycle of 100msec in the white balance light quantity stable process is within the range set with this simulation, it is judged as the light quantity is stable. (Note: The magnification ratio of the AFE gain setting is automatically reflected on the stable width.)</p> <p>When this simulation is executed, the currently set value is displayed.</p> <p>Enter the adjustment value with [Numeric] key and press [START] key. The entered value is stored and the machine goes into the sub code entry standby mode.</p> <p>Setting range: 1 – 99 (Light quantity stable width: Complying with 1 – 99 in 4095 gradations.)</p> <p>Default: 16</p> <p>[Operation] The operation is similar to simulation 9-04.</p>

Main code	Sub code	Contents	Details of function/operation															
64	01	Self print	<p>[Function] The status of the optical section is ignored and printing of one page is made. Also when the print command is received from the host, printing is made.</p> <p>When this simulation is executed, warm-up is performed and the ready lamp is lighted. (Since, however, the scanner is disabled, initializing is not made.)</p> <p>Enter the code number and press [ENTER/[START] key to start paper feed from the selected cassette and print in the selected pattern.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Pattern</th> <th>Display item</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>1by2</td> <td>1 BY 2</td> </tr> <tr> <td>1</td> <td>Grid pattern</td> <td>CHECK</td> </tr> <tr> <td>2</td> <td>White paper</td> <td>WHITE</td> </tr> <tr> <td>3</td> <td>Black background</td> <td>BLACK</td> </tr> </tbody> </table> <p>* For 4 – 99, flip.</p> <p>[Operation] The operation is similar to simulation 26-02.</p>	Code number	Pattern	Display item	0	1by2	1 BY 2	1	Grid pattern	CHECK	2	White paper	WHITE	3	Black background	BLACK
Code number	Pattern	Display item																
0	1by2	1 BY 2																
1	Grid pattern	CHECK																
2	White paper	WHITE																
3	Black background	BLACK																
66	01	FAX soft SW setting (When MX-FX12 is installed)	<p>[Function] Use to check the FAX soft SW setting. Every time when the key is pressed, the bit on the first line is switched 0 and 1.</p> <p>[Operation]</p> <p>1) Initial display</p> <table border="1"> <tr> <td>ENTER FAX SOFT SW. # (3 DIGITS) SW. ____</td> <td>3) Select 1</td> </tr> <tr> <td></td> <td>No. ### xxxxxxxx USE # KEY 12345678</td> </tr> </table> <p>* [Clear] key: FAX control is terminated.</p> <p>2) Enter a 3-digit value of soft SW No. (To enter the fourth digit, shift to the left.), and the press [OK] key.</p> <table border="1"> <tr> <td>No. ### xxxxxxxx CHANGE? 1: YES 2: NO</td> <td>4) Change with 1-8 of [Numeric] key and the press [OK] key.</td> </tr> <tr> <td></td> <td>No. ### xxxxxxxx STORED? 1: YES 2: NO</td> </tr> </table> <p>"xxxxxxx" is the set content.</p> <p>* Select 2: Returns to the soft SW No. entry display.</p> <p>5) Select 1</p> <table border="1"> <tr> <td>STORED</td> </tr> </table> <p>After 2sec, returns to "1) Initial display".</p>	ENTER FAX SOFT SW. # (3 DIGITS) SW. ____	3) Select 1		No. ### xxxxxxxx USE # KEY 12345678	No. ### xxxxxxxx CHANGE? 1: YES 2: NO	4) Change with 1-8 of [Numeric] key and the press [OK] key.		No. ### xxxxxxxx STORED? 1: YES 2: NO	STORED						
	ENTER FAX SOFT SW. # (3 DIGITS) SW. ____	3) Select 1																
	No. ### xxxxxxxx USE # KEY 12345678																	
No. ### xxxxxxxx CHANGE? 1: YES 2: NO	4) Change with 1-8 of [Numeric] key and the press [OK] key.																	
	No. ### xxxxxxxx STORED? 1: YES 2: NO																	
STORED																		
02	FAX soft SW initializing (excluding the adjustment values) (When MX-FX12 is installed)	<p>[Function] Use to initializing FAX soft SW.</p> <p>[Operation]</p> <p>1) Initial display</p> <table border="1"> <tr> <td>INITIALIZED</td> </tr> </table> <p>After 2sec, FAX control is terminated.</p>	INITIALIZED															
INITIALIZED																		



Main code	Sub code	Contents	Details of function/operation
66	03	FAX PWB memory check (When MX-FX12 is installed)	<p>[Function] Use to check the FAX PWB memory.</p> <p>[Operation]</p> <p>1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SELECT CHECK MEMORY PRESS ←, →</div> <p>2) [◀] or [▶] key or 2sec. Every time when [▶] key is pressed, the second line is changed in the sequence of No. 1 → 2 → 1. When [◀] key is pressed, the sequence is reversed.</p> <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px; width: 45%;">SELECT MEMORY (1-2) 1:MODEM</div> <div style="border: 1px solid black; padding: 2px; width: 45%;">SELECT MEMORY (1-2) 2:FLASH</div> </div> <p>* [Clear] key: SIM menu</p> <p>3) [OK] key</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">CHECKING MEMORY</div> <p>4) After completion of check In case of 1: MODEM</p> <ul style="list-style-type: none"> When the result is OK <div style="border: 1px solid black; padding: 2px; width: fit-content;">MEMORY CHECK RESULT MODEM OK</div> <ul style="list-style-type: none"> When the result is NG <div style="border: 1px solid black; padding: 2px; width: fit-content;">MEMORY CHECK RESULT MODEM NG</div> <p style="text-align: right;">In case of 2: FLASH</p> <ul style="list-style-type: none"> When the result is OK <div style="border: 1px solid black; padding: 2px; width: fit-content;">MEMORY CHECK RESULT FLASH OK</div> <ul style="list-style-type: none"> When the result is NG No File system/Access Error/File system Error <div style="border: 1px solid black; padding: 2px; width: fit-content;">MEMORY CHECK RESULT FLASH SYSTEM NG</div> <p style="text-align: right;">I/O error</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">MEMORY CHECK RESULT FLASH HARDWARE NG</div>



Main code	Sub code	Contents	Details of function/operation																																																																											
66	04	Signal send mode (Max. value) (When MX-FX12 is installed)	<p>[Function] Use to set the signal send mode (Max. value). Facsimile simulation design specifications.</p> <table border="1"> <tr><td>1</td><td>NO SIGNAL</td><td>13</td><td>7200bps(V34)</td><td>25</td><td>2400bps(V27ter)</td></tr> <tr><td>2</td><td>33600bps(V34)</td><td>14</td><td>4800bps(V34)</td><td>26</td><td>300bps(FLAG)</td></tr> <tr><td>3</td><td>31200bps(V34)</td><td>15</td><td>2400bps(V34)</td><td>27</td><td>2100Hz(CED)</td></tr> <tr><td>4</td><td>28800bps(V34)</td><td>16</td><td>14400bps(V33)</td><td>28</td><td>1100Hz(CNG)</td></tr> <tr><td>5</td><td>26400bps(V34)</td><td>17</td><td>12000bps(V33)</td><td>29</td><td>300bps(V21)</td></tr> <tr><td>6</td><td>24000bps(V34)</td><td>18</td><td>14400bps(V17)</td><td>30</td><td>2100Hz(ANSam)</td></tr> <tr><td>7</td><td>21600bps(V34)</td><td>19</td><td>12000bps(V17)</td><td>31</td><td>DUMMY RING</td></tr> <tr><td>8</td><td>19200bps(V34)</td><td>20</td><td>9600bps(V17)</td><td>32</td><td>NO VOICE ANSWER</td></tr> <tr><td>9</td><td>16800bps(V34)</td><td>21</td><td>7200bps(V17)</td><td>33</td><td>NO RING BACK TONE</td></tr> <tr><td>10</td><td>14400bps(V34)</td><td>22</td><td>9600bps(V29)</td><td>34</td><td>LINE OFF HOOK</td></tr> <tr><td>11</td><td>12000bps(V34)</td><td>23</td><td>7200bps(V29)</td><td>35</td><td>LINE ON HOOK</td></tr> <tr><td>12</td><td>9600bps(V34)</td><td>24</td><td>4800bps(V27ter)</td><td></td><td></td></tr> </table> <p>[Operation] 1) Initial display <div style="border: 1px solid black; padding: 2px; width: fit-content;">SELECT OUTPUT SIGNAL (2 DIGITS) No. ____</div> 2) 2-digit (1-35) with [Numeric] key / [◀] [▶] key / 2sec after Pressing [▶] key or [◀] key reverses the sequence. <div style="display: flex; justify-content: space-between; align-items: center;"> <div style="border: 1px solid black; padding: 2px;">No. (1-35) 1:NO SIGNAL</div> <div style="font-size: 2em;">.....</div> <div style="border: 1px solid black; padding: 2px;">No. (1-35) 35:LINE ON HOOK</div> </div> * [Clear] key: FAX control is terminated. 3) [OK] key Send after setting <div style="border: 1px solid black; padding: 2px; width: fit-content;">OUTPUTING SIGNAL MAX PRESS CLEAR TO STOP</div> * [Clear] key: Returns to "1) Initial display".</p>				1	NO SIGNAL	13	7200bps(V34)	25	2400bps(V27ter)	2	33600bps(V34)	14	4800bps(V34)	26	300bps(FLAG)	3	31200bps(V34)	15	2400bps(V34)	27	2100Hz(CED)	4	28800bps(V34)	16	14400bps(V33)	28	1100Hz(CNG)	5	26400bps(V34)	17	12000bps(V33)	29	300bps(V21)	6	24000bps(V34)	18	14400bps(V17)	30	2100Hz(ANSam)	7	21600bps(V34)	19	12000bps(V17)	31	DUMMY RING	8	19200bps(V34)	20	9600bps(V17)	32	NO VOICE ANSWER	9	16800bps(V34)	21	7200bps(V17)	33	NO RING BACK TONE	10	14400bps(V34)	22	9600bps(V29)	34	LINE OFF HOOK	11	12000bps(V34)	23	7200bps(V29)	35	LINE ON HOOK	12	9600bps(V34)	24	4800bps(V27ter)		
1	NO SIGNAL	13	7200bps(V34)	25	2400bps(V27ter)																																																																									
2	33600bps(V34)	14	4800bps(V34)	26	300bps(FLAG)																																																																									
3	31200bps(V34)	15	2400bps(V34)	27	2100Hz(CED)																																																																									
4	28800bps(V34)	16	14400bps(V33)	28	1100Hz(CNG)																																																																									
5	26400bps(V34)	17	12000bps(V33)	29	300bps(V21)																																																																									
6	24000bps(V34)	18	14400bps(V17)	30	2100Hz(ANSam)																																																																									
7	21600bps(V34)	19	12000bps(V17)	31	DUMMY RING																																																																									
8	19200bps(V34)	20	9600bps(V17)	32	NO VOICE ANSWER																																																																									
9	16800bps(V34)	21	7200bps(V17)	33	NO RING BACK TONE																																																																									
10	14400bps(V34)	22	9600bps(V29)	34	LINE OFF HOOK																																																																									
11	12000bps(V34)	23	7200bps(V29)	35	LINE ON HOOK																																																																									
12	9600bps(V34)	24	4800bps(V27ter)																																																																											



Main code	Sub code	Contents	Details of function/operation																																																																								
66	05	Signal send mode (Soft SW set value) (When MX-FX12 is installed)	<p>[Function] Use to set the signal send mode (Soft SW set value). Facsimile simulation design specifications.</p> <table border="1"> <tr><td>1</td><td>NO SIGNAL</td><td>13</td><td>7200bps(V34)</td><td>25</td><td>2400bps(V27ter)</td></tr> <tr><td>2</td><td>33600bps(V34)</td><td>14</td><td>4800bps(V34)</td><td>26</td><td>300bps(FLAG)</td></tr> <tr><td>3</td><td>31200bps(V34)</td><td>15</td><td>2400bps(V34)</td><td>27</td><td>2100Hz(CED)</td></tr> <tr><td>4</td><td>28800bps(V34)</td><td>16</td><td>14400bps(V33)</td><td>28</td><td>1100Hz(CNG)</td></tr> <tr><td>5</td><td>26400bps(V34)</td><td>17</td><td>12000bps(V33)</td><td>29</td><td>300bps(V21)</td></tr> <tr><td>6</td><td>24000bps(V34)</td><td>18</td><td>14400bps(V17)</td><td>30</td><td>2100Hz(ANSam)</td></tr> <tr><td>7</td><td>21600bps(V34)</td><td>19</td><td>12000bps(V17)</td><td>31</td><td>DUMMY RING</td></tr> <tr><td>8</td><td>19200bps(V34)</td><td>20</td><td>9600bps(V17)</td><td>32</td><td>NO VOICE ANSWER</td></tr> <tr><td>9</td><td>16800bps(V34)</td><td>21</td><td>7200bps(V17)</td><td>33</td><td>NO RING BACK TONE</td></tr> <tr><td>10</td><td>14400bps(V34)</td><td>22</td><td>9600bps(V29)</td><td>34</td><td>LINE OFF HOOK</td></tr> <tr><td>11</td><td>12000bps(V34)</td><td>23</td><td>7200bps(V29)</td><td>35</td><td>LINE ON HOOK</td></tr> <tr><td>12</td><td>9600bps(V34)</td><td>24</td><td>4800bps(V27ter)</td><td></td><td></td></tr> </table> <p>[Operation] 1) Initial display <div style="border: 1px solid black; padding: 2px; width: fit-content;">SELECT OUTPUT SIGNAL (2 DIGITS) No. ____</div> 2) 2-digit (1-35) with [Numeric] key / [◀] [▶] key / 2sec after Pressing [▶] key or [◀] key reverses the sequence. <div style="display: flex; justify-content: space-between; align-items: center;"> <div style="border: 1px solid black; padding: 2px;">No. (1-35) 1:NO SIGNAL</div> <div>.....</div> <div style="border: 1px solid black; padding: 2px;">No. (1-35) 35:LINE ON HOOK</div> </div> * [Clear] key: FAX control is terminated. 3) [OK] key Send after setting <div style="border: 1px solid black; padding: 2px; width: fit-content;">OUTPUTING SIGNAL SSW PRESS CLEAR TO STOP</div> * [Clear] key: Returns to "1) Initial display".</p>	1	NO SIGNAL	13	7200bps(V34)	25	2400bps(V27ter)	2	33600bps(V34)	14	4800bps(V34)	26	300bps(FLAG)	3	31200bps(V34)	15	2400bps(V34)	27	2100Hz(CED)	4	28800bps(V34)	16	14400bps(V33)	28	1100Hz(CNG)	5	26400bps(V34)	17	12000bps(V33)	29	300bps(V21)	6	24000bps(V34)	18	14400bps(V17)	30	2100Hz(ANSam)	7	21600bps(V34)	19	12000bps(V17)	31	DUMMY RING	8	19200bps(V34)	20	9600bps(V17)	32	NO VOICE ANSWER	9	16800bps(V34)	21	7200bps(V17)	33	NO RING BACK TONE	10	14400bps(V34)	22	9600bps(V29)	34	LINE OFF HOOK	11	12000bps(V34)	23	7200bps(V29)	35	LINE ON HOOK	12	9600bps(V34)	24	4800bps(V27ter)		
1	NO SIGNAL	13	7200bps(V34)	25	2400bps(V27ter)																																																																						
2	33600bps(V34)	14	4800bps(V34)	26	300bps(FLAG)																																																																						
3	31200bps(V34)	15	2400bps(V34)	27	2100Hz(CED)																																																																						
4	28800bps(V34)	16	14400bps(V33)	28	1100Hz(CNG)																																																																						
5	26400bps(V34)	17	12000bps(V33)	29	300bps(V21)																																																																						
6	24000bps(V34)	18	14400bps(V17)	30	2100Hz(ANSam)																																																																						
7	21600bps(V34)	19	12000bps(V17)	31	DUMMY RING																																																																						
8	19200bps(V34)	20	9600bps(V17)	32	NO VOICE ANSWER																																																																						
9	16800bps(V34)	21	7200bps(V17)	33	NO RING BACK TONE																																																																						
10	14400bps(V34)	22	9600bps(V29)	34	LINE OFF HOOK																																																																						
11	12000bps(V34)	23	7200bps(V29)	35	LINE ON HOOK																																																																						
12	9600bps(V34)	24	4800bps(V27ter)																																																																								
	10	Image memory content clear (When MX-FX12 is installed)	<p>[Function] Use to clear the image memory content.</p> <p>[Operation]</p> <ul style="list-style-type: none"> When there are some print data <div style="border: 1px solid black; padding: 2px; width: fit-content;">CLEAR IMAGE MEMORY</div> After completion of memory clear, the buzzer sounds. <div style="border: 1px solid black; padding: 2px; width: fit-content;">CLEARED PLEASE POWER OFF</div> Remains unchanged until the power is turned off. When there are no print data <div style="border: 1px solid black; padding: 2px; width: fit-content;">CLEAR IMAGE MEMORY</div> After completion of memory clear <div style="border: 1px solid black; padding: 2px; width: fit-content;">CLEARED</div> After 2sec, FAX control is terminated. 																																																																								



Main code	Sub code	Contents	Details of function/operation
66	13	Dial test (When MX-FX12 is installed)	<p>[Function] Use to the dial test.</p> <p>[Operation]</p> <p>■ Dial test (PULSE)</p> <p>1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SELECT SIGNAL 1:PULSE 2:DTMF</div> <p>* [Clear] key: FAX control is terminated.</p> <p>2) Select 1</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">INPUT MAKE TIME (0-15) —</div> <p>3) Enter the make time in 2 digits.</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">INPUT DIAL #</div> <p>* After deleting with [Clear] key, input can be made.</p> <p>4) [OK] key</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SEND yyPPS xxms 1:YES 2:NO</div> <p>"yy" is the selected pulse 10 or 20. "xx" is the input value.</p> <p>* Select 2: Returns to "2)" display.</p> <p>5) Select 1 Switched to 10/20PPS set with pulse selection inside.</p> <p>6) After setting</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SENDING yyPPS xxms</div> <p>7) After completion of sending</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">TERMINATE ? 1:YES 2:NO</div> <p>* Select 2: Returns to "4)" display.</p> <p>8) Select 1</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">TERMINATED</div> <p>After 2sec, returns to "1) Initial display".</p> <p>■ Dial test (DTMF)</p> <p>1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SELECT SIGNAL 1:PULSE 2:DTMF</div> <p>* [Clear] key: FAX control is terminated.</p> <p>2) Select 2</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SELECT HIGH LEVEL 1:DEFAULT 2:SOFT SW.</div> <p style="text-align: right;">↓ Select 2</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-left: 100px;">INPUT VALUE (0-15) —</div> <p style="text-align: center;">↓</p> <p>3) Select 1</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SELECT LOW LEVEL 1:DEFAULT 2:SOFT SW.</div> <p style="text-align: right;">↓ Select 2</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-left: 100px;">INPUT VALUE (0-15) —</div> <p style="text-align: center;">↓</p> <p>4) Select 1</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">INPUT DIAL #</div> <p>* After deleting with [Clear] key, input can be made.</p> <p>4) [OK] key</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">H:xx L:yy 1:YES 2:NO</div> <p>"xx" indicates HI, and "yy" indicates Low Soft SW.</p> <p>* Select 2: Returns to "4)" display.</p> <p>5) Select 1 HI/LO is selected with the signal level inside.</p> <p>6) After setting the signal send level</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SENDING DTMF</div> <p>7) After completion of sending</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">TERMINATE ? 1:YES 2:NO</div> <p>* Select 2: Returns to "4)" display.</p> <p>8) Select 1</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">TERMINATED</div> <p>After 2sec, returns to "1) Initial display".</p>
	17	DTMF signal send (Max. value) (When MX-FX12 is installed)	<p>[Function] Use to set the DTMF signal send (Max. value).</p> <p>[Operation]</p> <p>1) Initial display</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">INPUT DIAL #</div> <p>* [Clear] key: FAX control is terminated.</p> <p>2) [Numeric] key: Input The content selected with signal send level selection is set inside.</p> <p>3) Communication is started after setting the signal send level.</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;">SENDING SIGNAL MAX PRESS CLEAR TO STOP</div> <p>* [Clear] key: Returns to "1) Initial display".</p>



Main code	Sub code	Contents	Details of function/operation
66	18	DTMF signal send (Soft SW set value) (When MX-FX12 is installed)	<p>[Function] Use to set the DTMF signal send (Soft SW set value).</p> <p>[Operation]</p> <p>1) Initial display <div style="border: 1px solid black; padding: 2px; width: fit-content;">INPUT DIAL #</div></p> <p>* [Clear] key: FAX control is terminated.</p> <p>2) [Numeric] key: Input The content selected with signal send level selection is set inside.</p> <p>3) Communication is started after setting the signal send level. <div style="border: 1px solid black; padding: 2px; width: fit-content;">SENDING SIGNAL SSW PRESS CLEAR TO STOP</div></p> <p>* [Clear] key: Returns to "1) Initial display".</p>
	21	FAX information print (When MX-FX12 is installed)	<p>[Function] Use to print the FAX information.</p> <p>[Operation]</p> <p>1) Initial display <div style="border: 1px solid black; padding: 2px; width: fit-content;">SELECT REPORT (1-3) PRESS ←, →</div></p> <p>2) [◀][▶] key or after 2sec Every time when [▶] key is pressed, the second line is changed in the sequence of 1 → 2 → 3 → 1. When [◀] key is pressed, the sequence is reversed.</p> <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px; width: 30%;">SELECT REPORT (1-3) 1:USER SW. LIST</div> <div style="border: 1px solid black; padding: 2px; width: 30%;">SELECT REPORT (1-3) 2:SOFT SW. LIST</div> <div style="border: 1px solid black; padding: 2px; width: 30%;">SELECT REPORT (1-3) 3:PROTOCOL</div> </div> <p>* [Clear] key: FAX control is terminated.</p> <p>3) [OK] key</p> <ul style="list-style-type: none"> • When print is allowed <div style="border: 1px solid black; padding: 2px; width: fit-content;">PRINT STORED</div> • When print is inhibited <div style="border: 1px solid black; padding: 2px; width: fit-content;">CAN NOT PRINT</div> <p>After completion of printing, FAX control is terminated. After 2sec, FAX control is terminated.</p>

5. Trouble codes

A. Trouble codes list

Main code	Sub code	Details of trouble
A0	30	Machine configuration error
E1	00	Network board communication trouble
	01	Network board command time out error
	80	Network board communication interface error (Break in)
	81	Network board communication interface error (Parity)
	82	Network board communication interface error (Overrun)
	84	Network board communication interface error (Framing)
E7	01	Image data error
	06	Image data decode error
	10	Shading trouble (Black correction)
	11	Shading trouble (White correction)
	16	Abnormal laser output
	20	LSU trouble
F2	64	Toner supply abnormality
	70	Improper cartridge
	74	Toner cartridge CRUM error
F5	02	Copy lamp lighting abnormality
F6	60	AFAX plug detect error
	90	AFAX USB communicate error
	92	ANB flash error
	94	AFAX register error
H2	00	Thermistor open
H3	00	Heat roller high temperature detection
H4	00	Heat roller low temperature detection
L1	00	Feeding is not completed within the specified time after starting feeding. (The scan head locking switch is locked)
L3	00	Scanner return trouble
L4	01	Main motor lock detection
	31	Fan motor lock detection trouble
L6	10	Polygon motor lock detection
U1	03	Network board battery error
U2	00	EEPROM read/write error (Serial communication error)
	11	Counter check sum error (EEPROM)
U9	99	Panel language error

B. Details of trouble codes

Main code	Sub code	Details of trouble		
A0	30	Content	Machine configuration error	
		Detail	Discrepancy in the machine composition	
		Cause	Discrepancy with the machine configurations. (ANB/AFAX) EEPROM data error	
		Check and remedy	Check to confirm that the machine configurations are compatible with the product specifications. Replace the EEPROM.	
E1	00	Content	Network board communication trouble	
		Detail	An abnormality occurs in communication between the MCU and the network board.	
		Cause	Improper connection of the network board cable Improper firmware Network board abnormality MCU abnormality	
		Check and remedy	Check connection of the network board cable. Update firmware. Replace the MCU and network board with new one.	
		01	Content	Network board command time out error
			Detail	MCU cannot receive response from the network board while 30sec.
	Cause		Improper connection of the network board cable Improper firmware Network board abnormality MCU abnormality	
	Check and remedy		Check connection of the network board cable. Update firmware. Replace the MCU and network board with new one.	
	80		Content	Network board communication interface error (Break in)
			Detail	A break in error occurs in communication between the CPU and the network board.
		Cause	Improper connection of the network board cable Improper firmware Network board abnormality MCU abnormality	
		Check and remedy	Check connection of the network board cable. Update firmware. Replace the MCU and network board with new one.	
81	Content	Network board communication interface error (Parity)		
	Detail	A parity error occurs in communication between the MCU and the network board.		
	Cause	Improper connection of the network board cable Improper firmware Network board abnormality MCU abnormality		
	Check and remedy	Check connection of the network board cable. Update firmware. Replace the MCU and network board with new one.		

Main code	Sub code	Details of trouble	
E1	82	Content	Network board communication interface error (Overrun)
		Detail	An overrun error occurs in communication between the MCU and the network board.
		Cause	Improper connection of the network board cable Improper firmware Network board abnormality MCU abnormality
		Check and remedy	Check connection of the network board cable. Update firmware. Replace the MCU and network board with new one.
	84	Content	Network board communication interface error (Framing)
		Detail	A framing error occurs in communication between the MCU and the network board.
		Cause	Improper connection of the network board cable Improper firmware Network board abnormality MCU abnormality
		Check and remedy	Check connection of the network board cable. Update firmware. Replace the MCU and network board with new one.
E7	01	Content	Image data error
		Detail	1) The memory capacity for the duplex model machine is improper. Insufficient memory capacity 2) Duplex setting for the single-surface model.
		Cause	1) The memory capacity on the MCU PWB is improper. 2) Wrong setting for the single-surface model.
		Check and remedy	1) Use SIM26-39 to check to confirm that the memory capacity is 64MB. If it is not 64MB, replace the MCU PWB. 2) If SIM26-04 is set to 1, set it to 0. If the setting is 0, replace the MCU PWB.
	06	Content	Image data decode error
		Detail	Image expansion error
		Cause	MCU PWB error USB cable trouble
	Check and remedy	Replace the MCU PWB. Replace the USB cable.	
10	Content	Shading trouble (Black correction)	
	Detail	The CCD black scan level is abnormal when the shading.	
	Cause	Improper connection of the CCD unit flat cable CCD unit abnormality MCU PWB abnormality	
	Check and remedy	Check connection of the CCD unit flat cable. Check the CCD unit.	

Main code	Sub code	Details of trouble		
E7	11	Content	Shading trouble (White correction)	
		Detail	The CCD white scan level is abnormal when the shading.	
		Cause	Improper connection of the CCD unit flat cable Dirt on the mirror, the lens, and the reference white plate Copy lamp lighting abnormality CCD unit abnormality MCU PWB abnormality (When occurred in the SPF/RSPF scan position.) Improper installation of the mirror unit	
		Check and remedy	Clean the mirror, lens, and the reference white plate. Check the light quantity and lighting status of the copy lamp (SIM 05-03). Check the MCU PWB.	
		16	Content	Abnormal laser output
			Detail	When the laser output is stopped, HSYNC is detected.
	Cause	Laser abnormality MCU PWB abnormality.		
	Check and remedy	Check the laser emitting diode operation. Replace the MCU PWB.		
	20	Content	LSU trouble	
		Detail	The BD signal from the LSU cannot be detected in a certain cycle. (Always OFF or always ON)	
		Cause	LSU connector or LSU harness defect or disconnection Polygon motor rotation abnormality Laser beams are not generated. MCU PWB abnormality.	
		Check and remedy	Check connection of the LSU connector. Execute SIM 61-03 to check the LSU operations. Check that the polygon motor rotates normally. Check that the laser emitting diode generates laser beams. Replace the LSU unit. Replace the MCU PWB.	
F2	64	Content	Toner supply abnormality	
		Detail	The maximum toner supply time is greatly exceeded.	
		Cause	CRUM chip trouble Improper developing unit	
	Check and remedy	Replace the CRUM chip. Replace the developing unit.		
	70	Content	Improper cartridge	
		Detail	The destination of the main unit differs from that of the CRUM. When the life cycle information is other than Not Used (FFh).	
Cause		CRUM chip trouble Improper developing unit		
Check and remedy	Replace the CRUM chip. Replace the developing unit.			

Main code	Sub code	Details of trouble		
F2	74	Content	Toner cartridge CRUM error	
		Detail	MCU	
		Cause	Toner cartridge (CRUM) trouble. MCU PWB trouble. Connector/harness trouble.	
		Check and remedy	Replace the toner cartridge. Replace the MCU PWB. Connector and harness check.	
F5	02	Content	Copy lamp lighting abnormality	
		Detail	The copy lamp does not turn on.	
		Cause	Copy lamp abnormality Copy lamp harness abnormality CCD PWB harness abnormality.	
		Check and remedy	Use SIM 5-3 to check the copy lamp operations. When the copy lamp lights up. Check the harness and the connector between the CCD unit and the MCU PWB. When the copy lamp does not light up. Check the harness and the connector between the copy lamp unit and the MCU PWB. Replace the copy lamp unit. Replace the MCU PWB.	
F6	60	Content	AFAX plug detect error	
		Detail	For USB connection with AFAX, ANB cannot detect the connection with AFAX.	
		Cause	USB connected error between ANB and AFAX	
			Check and remedy	Replace the ANB PWB or AFAX PWB.
	90	Content	AFAX USB communicate error	
		Detail	For interface, ANB cannot be communicated with AFAX.	
		Cause	Interface error between ANB and AFAX	
			Check and remedy	Check the connection between ANB and AFAX. Replace the ANB PWB or AFAX PWB.
	92	Content	ANB flash error	
		Detail	Can not read /write to Flash ROM on the ANB PWB.	
		Cause	Access error to Flash ROM.	
			Check and remedy	Replace the ANB PWB.
94	Content	AFAX register error		
	Detail	Can not access to MODEM on the AFAX PWB.		
	Cause	Access error to MODEM		
		Check and remedy	Replace AFAX PWB.	
H2	00	Content	Thermistor open	
		Detail	The thermistor is open. The fusing unit is not installed.	
		Cause	Thermistor abnormality Control PWB abnormality Fusing section connector disconnection The fusing unit is not installed.	
		Check and remedy	Check the harness and the connector between the thermistor and the PWB. Use SIM 14 to clear the self diagnostic display.	

Main code	Sub code	Details of trouble	
H3	00	Content	Heat roller high temperature detection
		Detail	The fusing temperature exceeds 240°C.
		Cause	Thermistor abnormality Control PWB abnormality Fusing section connector disconnection.
		Check and remedy	Use SIM 5-02 to check the heater lamp blinking operation. When the lamp blinks normally. Check the thermistor and its harness. Check the thermistor input circuit on the control PWB. When the lamp keeps ON. Check the power PWB and the lamp control circuit on the MCU PWB. Use SIM 14 to clear the self diagnostic display.
H4	00	Content	Heat roller low temperature detection
		Detail	1) When the target temperature (165°C) is not reached in 55 sec after starting warming-up. 2) When the temperature below 100°C is detected for 300ms under the ready print state. * "Starting warming-up" means not only that in power supply but also reset that in reset from shut-off and in side door close. (The timing of generating H4 is not limited to that in power supply.)
		Cause	Thermistor abnormality Heater lamp abnormality Thermostat abnormality Control PWB abnormality
		Check and remedy	Use SIM 5-02 to check the heater lamp blinking operation. When the lamp blinks normally. Check the thermistor and its harness. Check the thermistor input circuit on the control PWB. When the lamp does not light up. Check for disconnection of the heater lamp and the thermostat. Check the interlock switch. Check the power PWB and the lamp control circuit on the MCU PWB. Use SIM 14 to clear the self diagnostic display.

Main code	Sub code	Details of trouble	
L1	00	Content	Feeding is not completed within the specified time after starting feeding. (The scan head locking switch is locked)
		Detail	The white area and the black marking on the shading plate are used to obtain the difference in the CCD level values for judgment of lock. When the difference in the levels of which and black is small, it is judged that the black mark could not be scanned by lock and the trouble code "L1" is displayed.
		Cause	The scan head is locked by the lock switch. Mirror unit abnormality The scanner wire is disconnected. The origin detection sensor abnormality Mirror motor harness abnormality
		Check and remedy	Check to confirm that the scan head lock switch is released. Use SIM 1-1 to check the mirror reciprocating operations. When the mirror does not feed. Check for disconnection of the scanner wire. Check the harness and the connector between the mirror motor and the MCU PWB. Replace the mirror unit. Replace the MCU PWB. When the mirror does feed. Use SIM 1-2 to check the mirror home position sensor.
L3	00	Content	Scanner return trouble
		Detail	When the mirror base is returned for the specified time (6 sec) in mirror initializing after turning on the power, the mirror home position sensor (MHPS) does not turn ON. Or when the mirror base is returned for the specified time (about 6 sec) after start of copy return, the mirror home position sensor (MHPS) does not turn ON.
		Cause	Mirror unit abnormality Scanner wire disconnection Origin detection sensor abnormality Mirror motor harness abnormality
		Check and remedy	Use SIM 1-1 to check the mirror reciprocating operations. When the mirror does not return. Check for disconnection of the scanner wire. Check the harness and the connector between the mirror motor and the MCU PWB. Replace the mirror unit. Replace the MCU PWB. When the mirror does feed. Use SIM 1-2 to check the mirror home position sensor.
L4	01	Content	Main motor lock detection
		Detail	When the main motor encoder pulse is not detected for 100 msec.
		Cause	Main motor unit abnormality Improper connection or disconnection the main motor and the harness. MCU PWB abnormality
		Check and remedy	Use SIM 25-01 to check the main motor operations. Check connection of the main motor harness/connector. Replace the main motor. Replace the MCU PWB.

Main code	Sub code	Details of trouble	
L4	31	Content	Fan motor lock detection trouble
		Detail	The fan does not rotate. When sampling is made in an interval of 50msec, the normal signals are not detected 5 times continuously in 1 sec.
		Cause	FAN trouble or harness contact trouble and disconnection.
		Check and remedy	Check connection of the FAN harness and connector. Replace the FAN. Replace the MCU PWB.
L6	10	Content	Polygon motor lock detection
		Detail	The lock signal (specified rpm signal) does not return within a certain time (about 20 sec) from starting the polygon motor rotation.
		Cause	Polygon motor unit abnormality Improper connection or disconnection of the polygon motor and the harness. MCU PWB abnormality
		Check and remedy	Use SIM 61-1 to check the polygon motor operations. Check connection of the polygon motor harness/connector. Replace the polygon motor. Replace the MCU PWB.
U1	03	Content	Network board battery error
		Details	The RTC backup battery voltage on network PWB falls.
		Cause	The RTC backup battery voltage on network PWB falls.
		Check and remedy	Check voltage of the RTC back up battery. Replace the battery.
		U2	00
Detail	EEPROM access process error		
Cause	EEPROM abnormality		
Check and remedy	Check that the EEPROM is properly set. Use SIM 16 to cancel the trouble. Replace the MCU PWB.		
11	Content		
	Detail	Check sum error of the counter area in the EEPROM	
	Cause	EEPROM abnormality	
		Check and remedy	Check that the EEPROM is properly set. Use SIM 16 to cancel the trouble. Replace the MCU PWB.
		U9	99
Detail	Improper language data		
Cause	A improper language data was downloaded.		
Check and remedy	Update LCD data.		



[11] MAINTENANCE

1. Maintenance table

× : Check (Clean, adjust, or replace when required.) ○ : Clean ▲ : Replace △ : Adjust ☆ : Lubricate


Section	Parts	25K	50K	75K	100K	125K	Remark
Developing	Developer	▲	▲	▲	▲	▲	
	DV blade	○	▲	○	▲	○	
	DV side seal (F/R)	○	▲	○	▲	○	
	DV doctor	×	×	×	×	×	White streaks are made on the image.
Process peripheral	Drum	▲	▲	▲	▲	▲	

2. Maintenance display system

Toner	Life	8K	
	Remaining quantity	NEAR EMPTY About 12.5%	EMPTY
	LED	ON	Flash
	Machine	Operation allowed	Stop
Developer	Life	25K	
	LED	ON at 25K of the developer count.	
	Machine	Selection is available between Not Stop and Stop by Service Simulation (SIM 26-37) Setup. (If Stop is selected, the LED will flash and stop at 25K.) * Default: Not Stop * Clear: SIM 24-06	
Maintenance	LED	Selection is available among 25K, 13K, 9K, 6K, 3K, and free (no lighting) with SIM 21-1. * Default: 25K * Clear: SIM 20-1	
	Machine	Not stop.	

Note: When developer is replaced, be sure to execute simulation No. 24-06 to reset the counter.

3. Remaining toner indication

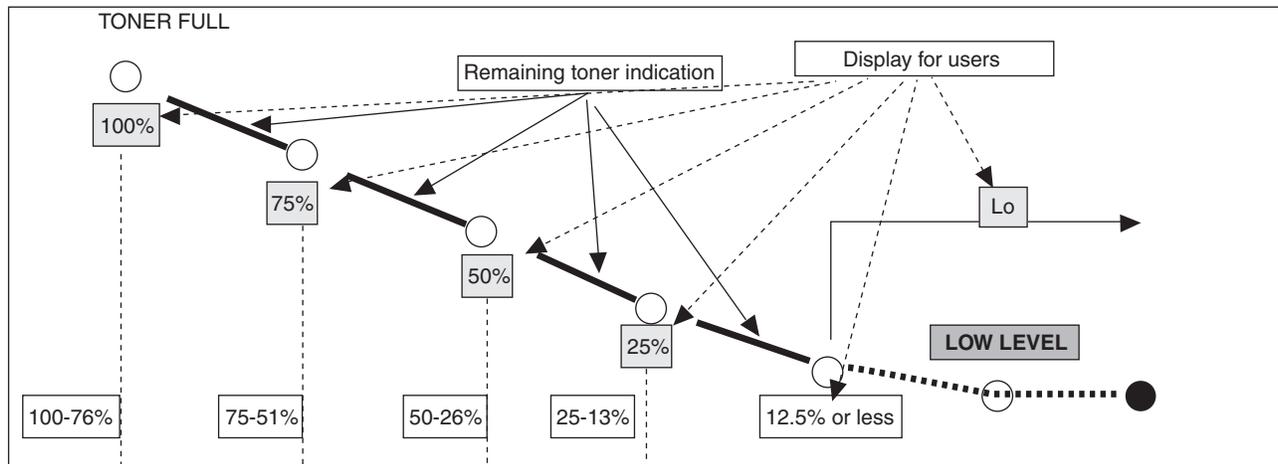

- The remaining toner indication is based on the number of revolutions of the toner motor.
- The toner END indication appears when the END is detected by the toner sensor.
- The remaining toner indication is a rough indication of the remaining toner quantity.

[12] USER PROGRAM

The user settings allow you to customize machine settings to better meet your needs.

1. User programs

The user settings consist of the following items.

To change the user program settings as explained in "SELECTING A SETTING FOR A USER PROGRAM".

Copy mode

Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
1	AUTO CLEAR	1: 10 SEC. 2: 30 SEC. 3: 60 SEC. 4: 90 SEC. 5: 120 SEC. 6: OFF	<ul style="list-style-type: none"> Auto clear time automatically returns the copy settings to the initial settings if no keys are pressed for a preset period of time following the end of a copy job. This program is used to select the period of time. Auto clear time can also be disabled.
2	PREHEAT MODE	1: 30 SEC. 2: 1 MIN. 3: 5 MIN. 4: 30 MIN. 5: 60 MIN. 6: 120 MIN. 7: 240 MIN.	<ul style="list-style-type: none"> This function automatically switches the machine to a low power consumption state if the set duration of time elapses without the machine being used when the power is on. The power save indicator lights up, however, the keys on the operation panel can be used. Normal operation automatically resumes when a key on the operation panel is pressed, an original is placed, a print job is received.
3	AUTO SHUT-OFF	1: ON 2: OFF	<ul style="list-style-type: none"> Use this setting to enable or disable auto power shut-off mode.
4	AUTO SHUT-OFF TIME	1: 5 MIN. 2: 30 MIN. 3: 60 MIN. 4: 120 MIN. 5: 240 MIN.	<ul style="list-style-type: none"> This function automatically switches the machine to a state that consumes even less power than preheat mode if the set duration of time elapses without the machine being used when the power is on. All lights except the power save indicator go off. To resume normal operation, press the [START] key (). Normal operation also resumes automatically when a print job is received or scanning is begun from a computer. While in auto power shut-off mode, no keys (except the [START] key ()) can be used.
7	LAYOUT IN 2IN1	1: PATTERN 1 2: PATTERN 2	<ul style="list-style-type: none"> Use this setting to select the layout pattern when two original pages are copied onto a single sheet of paper.
8	OFFSET FUNCTION	1: ON 2: OFF	<ul style="list-style-type: none"> When enabled, this function offsets the position in the paper output tray of sets of copies during copy job, and print jobs when using the printer function.
9	ROTATE ORIG.IMAGE	1: ON 2: OFF	<ul style="list-style-type: none"> When two-sided copying is performed, this function rotates the image on the back of the original. This is convenient when binding the copies at the top (tablet binding).
10	AE/TEXT RESOLUTION	1: 300dpi 2: 600dpi	<ul style="list-style-type: none"> This setting is used to change the copy resolution in AUTO and TEXT mode from 600 x 300 dpi to 600 x 600 dpi (highquality mode). Scanning is slower when high-quality mode is used.
11	2-SIDED COPY MODE	1: HI-SPEED 2: NORMAL	<ul style="list-style-type: none"> If the memory fills up when two-sided copying is performed, "NORMAL" can be selected to make copying possible. However, "NORMAL" results in a slower copying speed. Normally "HISPEED" is selected to enable fast two-sided copying.
12	MARGIN WIDTH	1: 5 mm 2: 10 mm 3: 15 mm 4: 20 mm	<ul style="list-style-type: none"> Use this setting to set the margin width.
13	MEM. FOR PRINTER	1: 30% 2: 40% 3: 50% 4: 60% 5: 70%	<ul style="list-style-type: none"> Use this to change the proportion of machine memory used for printer mode.
14	AUTO KEY REPEAT	1: ON 2: OFF	<ul style="list-style-type: none"> Use this setting to select whether or not holding down a key causes repeated input of the key. For keys that normally cause a set value to increase when held down (for example, holding down the [] key () or [] key ()), this program can be used to have the set value not change when the key is held down.
15	KEY PRESS TIME	1: NORMAL 2: 0.5 SEC. 3: 1.0 SEC. 4: 1.5 SEC. 5: 2.0 SEC.	<ul style="list-style-type: none"> Use this setting to select how long a key must be pressed for the input to be accepted. By selecting a longer time, you can prevent settings from being changed by the accidental pressing of a key.

Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
16	KEY TOUCH SOUND	1: LOW 2: HIGH 3: OFF	<ul style="list-style-type: none"> This sets the volume of beep signals.
17	SOUND AT DEFAULT	1: ON 2: OFF	<ul style="list-style-type: none"> Use this to sound a beep when a base setting is selected.
18	TONER SAVE MODE	1: ON 2: OFF	<ul style="list-style-type: none"> This mode reduces toner usage by about 10% when copying. Toner save mode is effective when the exposure mode is AUTO or TEXT.
19	AE LEVEL ADJUST	1: SPF/RSPF (Adjustment to 5 levels is possible) 2: DOCUMENT GLASS (Adjustment to 5 levels is possible)	<ul style="list-style-type: none"> This is used to adjust the exposure level. The automatic exposure level can be adjusted separately for the document glass and the RSPF. The factory default setting for the exposure level is "center".
20	LANGUAGE	1: AMERICAN ENGLISH 2: ENGLISH 3: FRENCH 4: SPANISH 5: GERMAN 6: ----- : 18: Brazilian portuguese	This is used to set the language used in the display. 18 Languages can be selected.
21	RESET FACTORY	1: Yes 2: No	This is used to return all settings to the factory default settings.
22	SORT AUTO SELECT	1: ON 2: OFF	Use this setting to enable or disable sort auto select mode.
24	<ul style="list-style-type: none"> CHECK OC OPEN CHECK RSPF OPEN (When an RSPF is installed) 	1: ON 2: OFF	<ul style="list-style-type: none"> You can set the operation that takes place if the [START] key () is pressed when the original cover/RSPF is not completely closed.
25	VALID COPY WIDTH	1: LARGE (LETTER/A4 WIDTH) 2: SMALL (INVOICE/B5R WIDTH)	<ul style="list-style-type: none"> Set the allowed paper sizes for copying from the bypass tray. When "SMALL" is selected, a copy of an A4 (letter) size original will only be printed up to B5R (invoice) size.
28	LSU SETTING	1: ON 2: OFF	<ul style="list-style-type: none"> Select whether copying is only allowed when the polygon motor is rotating, or also when the polygon motor is stopped.
29	PAPER TYPE	1: PLAIN PAPER 2: HEAVY PAPER	<ul style="list-style-type: none"> Set the temperature of the fusing unit when the bypass tray is used. Normally "PLAIN PAPER" should be selected.
30	DISPLAY CONTRAST	1: LIGHTER 2: LIGHT 3: NORMAL 4: DARK 5: DARKER	<ul style="list-style-type: none"> Set the contrast of the display.
31	Date&Time Set		<ul style="list-style-type: none"> This function is enabled when MX-NB11(Network Expansion Kit) is installed.
32	Date&Time Format	1: Time Format (selectable in 2 kinds) 2: Date Format (selectable in 3 kinds)	<ul style="list-style-type: none"> This function is enabled when MX-NB11(Network Expansion Kit) is installed.

Print mode

Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
1	FORCED OUTPUT	1: ON 2: OFF	When this function is enabled, printing in printer mode will automatically continue using a different size of paper if the specified size of paper runs out in all trays. This feature does not function in copy mode.
2	USB 2.0 MODE SWITCH *1	1: FULL-SPEED 2: HI-SPEED	This sets the USB 2.0 data transfer speed. To obtain the fastest speed when using the USB 2.0 connector, first verify that your computer meets the system requirements (operating system and driver), and then use this program to change the USB 2.0 mode to "Hi-Speed". Note that the setting should not be changed while running a TWAIN driver.
3	AUTO TRAY SWITCH*2	1: ON 2: OFF	This is selectable when the optional paper tray is installed. (This is not shown when the optional tray is not installed.)
4	ENABLE TCP/IP *3	1: ON 2: OFF	This is to select whether or not to make the network connection by TCP/IP protocol effective.
5	ENABLE DHCP *3	1: ON 2: OFF	This is to select whether or not to apply to DHCP network connection.
6	IP ADDRESS SETTING *3	1: IP ADDRESS 2: SUBNETMASK 3: DEFAULT GATEWAY	This is to set IP address, Subnetmask and Default Gateway from the machine. This can also be used to check the machine's IP ADDRESS when "IP ADDRESS" is selected. When the program number 4 "ENABLE DHCP" is "ON" and the machine is under DHCP environment, the IP address on the display is shown with "✓" at the tail end.

*1: The scanning speed increases when the USB 2.0 mode is set to "HI-SPEED", however, the printing speed does not increase considerably.

*2: When the 250-sheet paper feed unit is installed.

*3: When the Network expansion kit is installed.

Fax mode


Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
1	DOC. GLASS SIZE	1: 8.5x11 2: 8.5x14 3: A4	• Set the size of an original faxed from the document glass.
2	FIXED DOC. SIZE	1: 8.5x11 2: 8.5x14 3: A4	• Set the default size of originals faxed from the document glass.
3	RESO. PRIORITY	1: STANDARD 2: FINE 3: SUPER FINE	• Set the default resolution for fax transmission.
4	# OF RINGS (AUTO)	0 - 9 (2)	• Set the number of rings on which the machine answers calls in automatic reception mode.
5	# OF RINGS (MANUAL)	0 - 9 (0)	• Set the number of rings on which the machine answers calls in manual reception mode.
6	AUTO LISTING	1: ON 2: OFF	• Enable automatic printing of the Activity Report when information on a total of 50 fax transmissions/receptions accumulates.
7	PRINT SELECTION	(1) TRANSMISSION 1: ALWAYS PRINTS 2: ERROR ONLY 3: NEVER PRINTS	• Select the condition for printing reports on fax transmissions.
		(2) BROADCAST 1: ALWAYS PRINTS 2: ERROR ONLY 3: NEVER PRINTS	• Select the condition for printing reports on broadcast transmissions.
		(3) RECEPTION 1: ALWAYS PRINTS 2: ERROR ONLY 3: NEVER PRINTS	• Select the condition for printing reports on received faxes.
		(4) IMAGE MEM. PRINT 1: ALWAYS PRINTS 2: ERROR ONLY 3: NEVER PRINTS	• Enable printing of the original image on transaction reports.
8	RECALL TIMES BUSY	00 - 14 (02)	• Set the number of recall attempts that are made when the line is busy.
9	RECALL TIMES ERR	0 - 1 (1)	• Set the number of recall attempts that are made when a communication error occurs.
10	RECALL INT. BUSY	01 - 15 min. (03 min.)	• Set the interval between recall attempts when the line is busy. 1 to 15 minutes can be selected.




Program number	Program name	Setting codes (factory default setting appears in bold)	Explanation
11	RECALL INT. ERR	00 - 15 min. (01 min.)	<ul style="list-style-type: none"> Set the interval between recall attempts when a communication error occurs. 0 to 15 minutes can be selected.
12	SECURITY SELECT	1: ON 2: OFF	<ul style="list-style-type: none"> Enable the polling security function.
13	FAX REMOTE NUMBER	0 - 9 (5)	<ul style="list-style-type: none"> Set the 1-digit number used to activate remote fax reception.
14	REMOTE RECEPTION	1: ON 2: OFF	<ul style="list-style-type: none"> Enable the remote reception function.
15	FAX SIGNAL RCV	1: ON 2: OFF	<ul style="list-style-type: none"> Enable automatic fax reception when a fax tone is heard after answering a call on an extension phone.
16	RCV REDUCE	1: ON 2: OFF	<ul style="list-style-type: none"> When a fax is received that is larger than the printing paper, enable reduction of the fax to the size of the paper to avoid the fax being cut off.
17	BEEP LENGTH	1: 3 SEC 2: 1 SEC 3: NO BEEP	<ul style="list-style-type: none"> Set the length of the beep that sounds when fax transmission or reception ends.
18	RINGER VOLUME	1: OFF 2: LOW 3: MIDDLE 4: HIGH	<ul style="list-style-type: none"> Set the volume of the ringer.
19	BEEPER VOLUME	1: OFF 2: LOW 3: MIDDLE 4: HIGH	<ul style="list-style-type: none"> Set the volume of the beep that sounds when a key is pressed.
20	DIAL MODE	1: TONE 2: PULSE	<ul style="list-style-type: none"> Set the dial mode for the type of line you are on.
21	DISTINCTIVE RING	1: OFF 2: STANDARD 3: PATTERN 1 4: PATTERN 2 5: PATTERN 3 6: PATTERN 4 7: PATTERN 5	<ul style="list-style-type: none"> Set the ring pattern for distinctive ring.
22	INDEX PRINT	1: ON 2: OFF	<ul style="list-style-type: none"> Enable printing of a black mark (index) at the top of each received fax page.
23	2-SIDED RX	1: ON 2: OFF	<ul style="list-style-type: none"> Print on both sides of the paper when a multi-page fax is received.
24	TRAY SELECTION	1: AUTO 2: TRAY 1 3: TRAY 2	<ul style="list-style-type: none"> Set the tray for printing received faxes.

2. Selecting a setting for a user program

- 1) Press the [MENU] key and then press the [OK] key.
In printer mode, the user programs are accessed by simply pressing the [MENU] key.

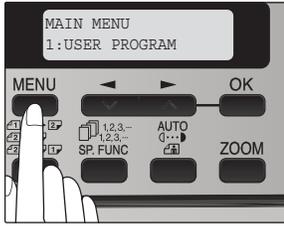


- 2) Press the [◀] key (▼) or [▶] key (▲) to select the item that you wish to configure in the USER PROGRAM items, and then press the [OK] key.
 - See "USER PROGRAM" for the program name and program code.
 - You can also select a program by directly entering the program number with the numeric keys.

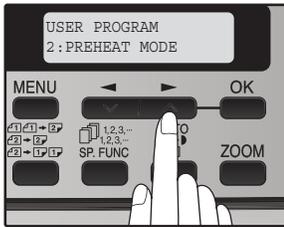

- 3) Press the [◀] key (▼) or [▶] key (▲) to change the setting of the selected item.
See "USER PROGRAM" for the program code.

Note:

- If you mistakenly select the wrong item, press the [CLEAR] key (C) and repeat the procedure from step 2.
- To cancel a setting for a user program, press the [MENU] key.

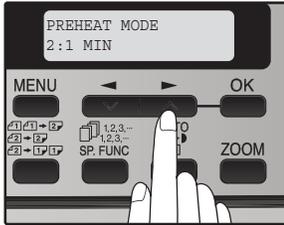

- 4) Press the [OK] key.
Your selection appears briefly and then the previous screen appears.

Note: When "AE LEVEL ADJUST" is selected in the user programs and the [OK] key is pressed, the automatic exposure adjustment screen appears. Adjust the exposure and press the [OK] key.

Audible signals (key entry beep, invalid key beep, base setting beep)

The machine sounds three different types of beep signals: a key entry beep that sounds when a valid key is pressed, an invalid key beep that sounds when an invalid key is pressed, and a base setting beep that sounds when a setting is the same as the base setting (base settings are explained below). The base setting beep is initially disabled.

The beep patterns of each type of beep signal are as follows:

Key entry beep: One beep

Invalid key beep: Two beeps

Base setting beep: Three beeps

Base settings

The base settings are preset standard selections for each copy setting. The base settings are as follows:

Copy ratio: 100%


Light and Dark level: Center

Paper feed location: Paper tray


AUTO/TEXT/PHOTO: AUTO

2. Actual wiring diagram


A. MCU PWB

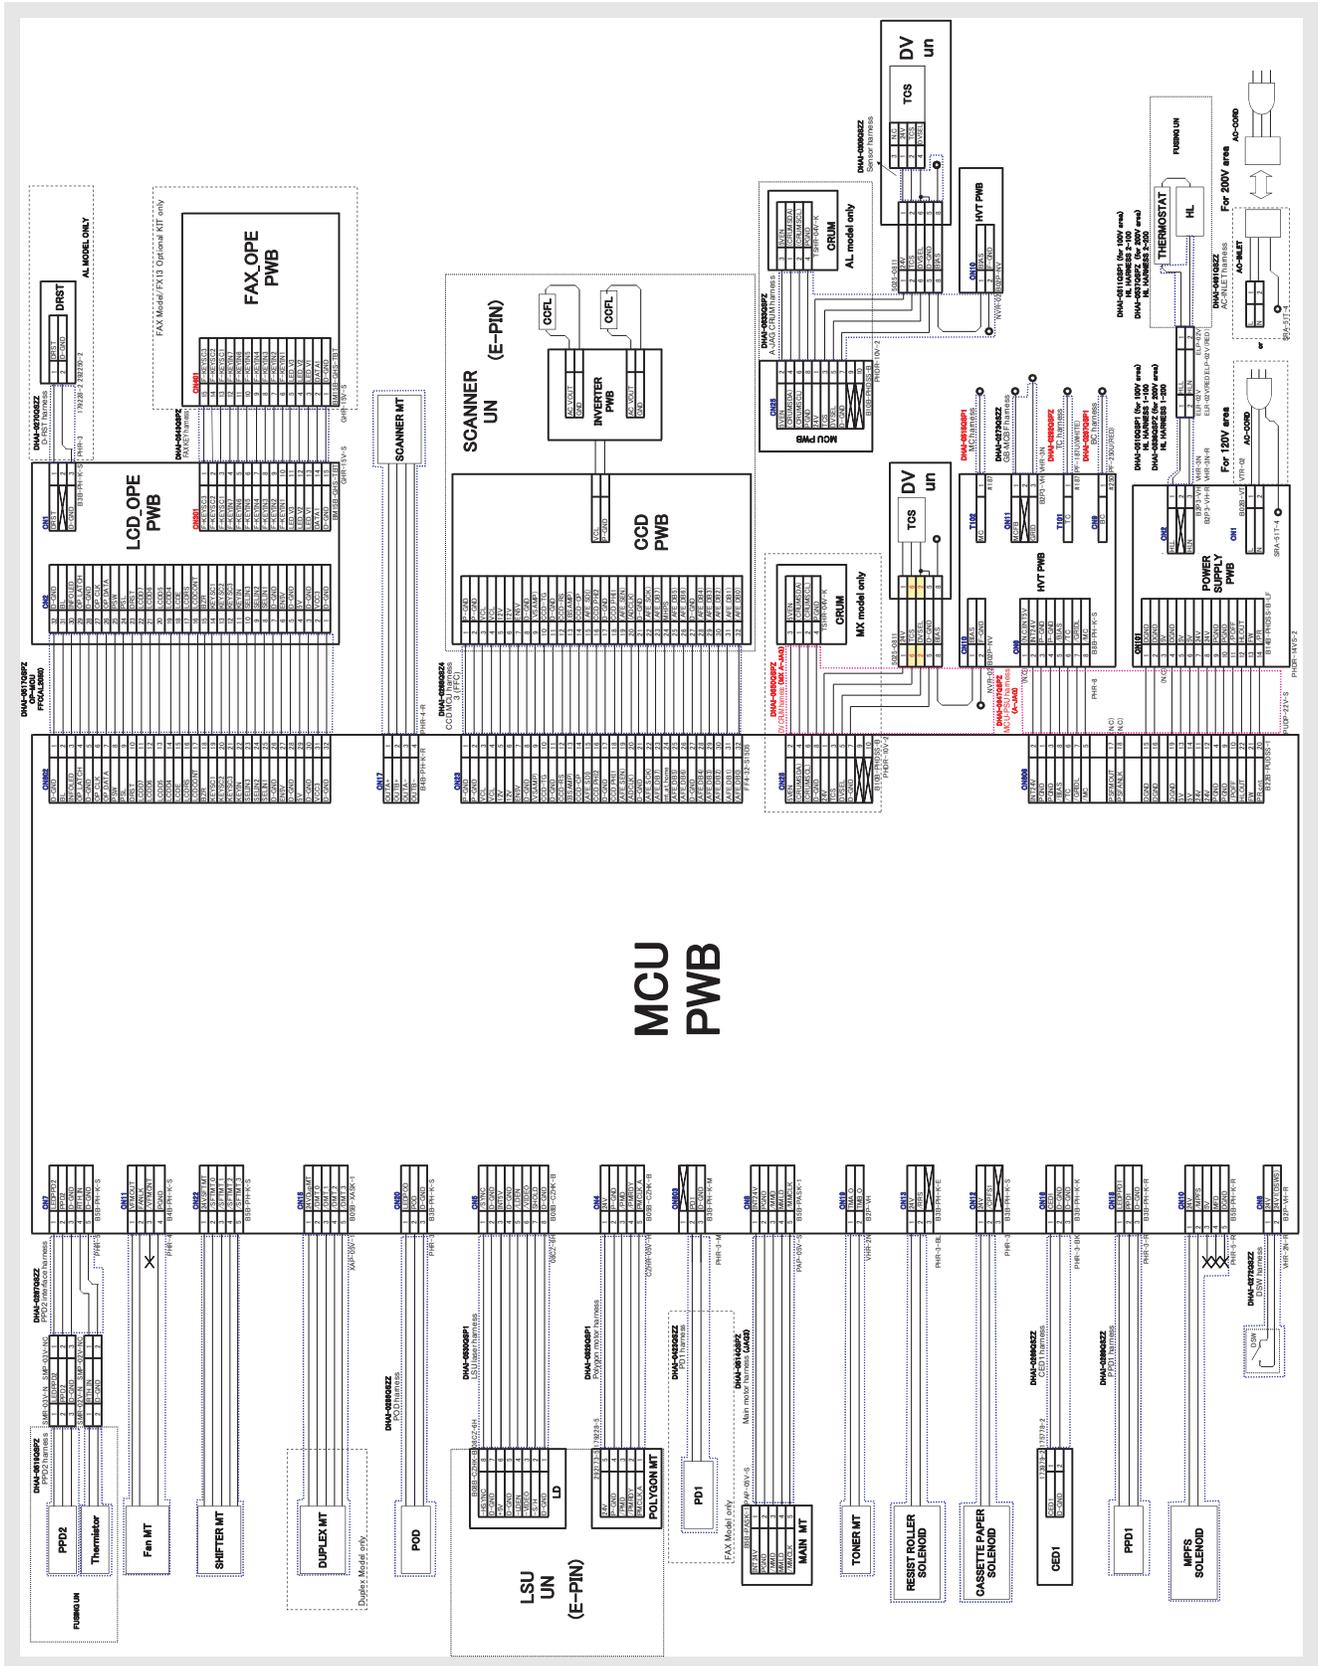

▲ **B. RSPF unit (MX-B201: Option, MX-B201D: Option or Standard (due to sales area))**

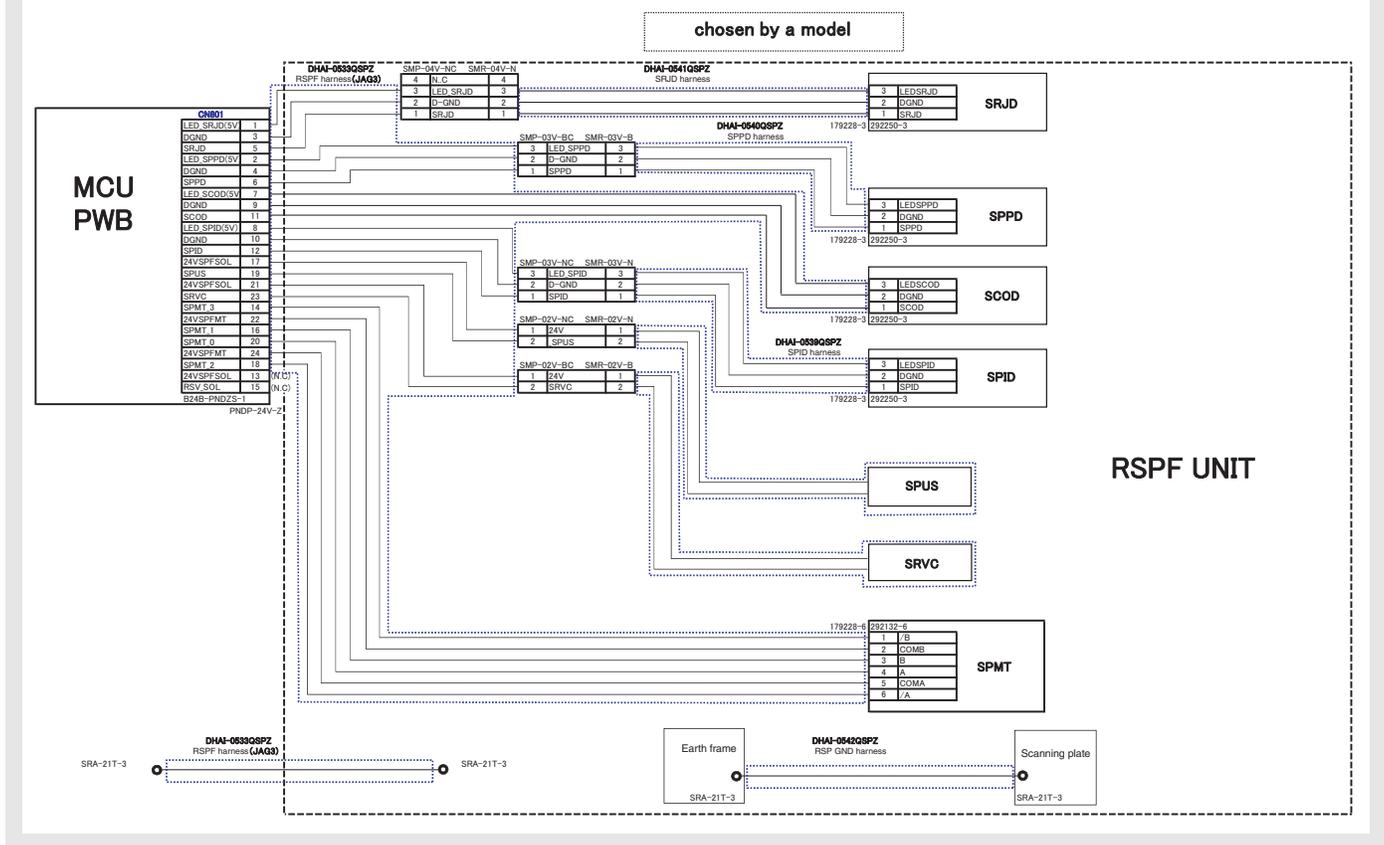

▲ **C. 2nd CASSETTE (Option)**

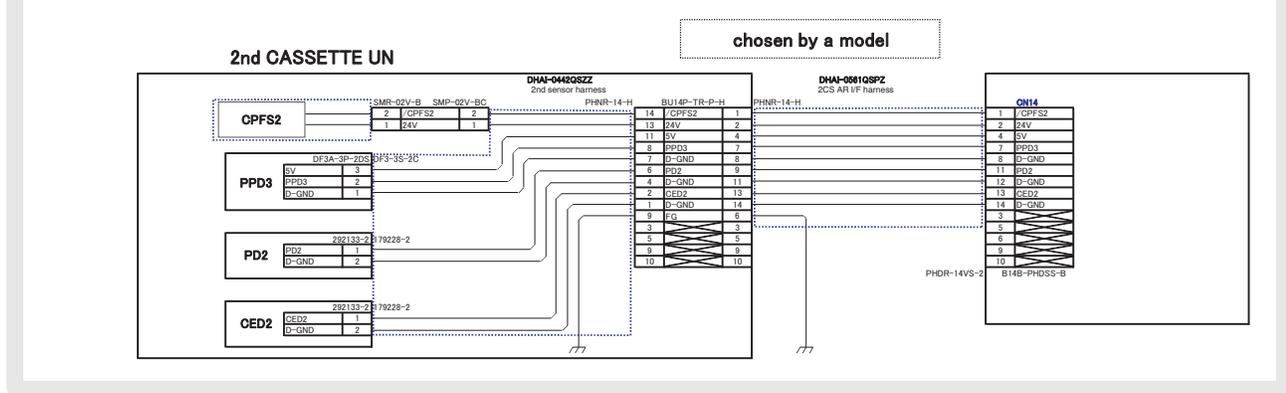


3. Signal name list

Signal name	Name	Function/Operation	Section
(ADCLK)	AFE	AFE control signal	Scanner unit section
(AFE_DB0)	AFE	Image scan data	Scanner unit section
(AFE_DB1)	AFE	Image scan data	Scanner unit section
(AFE_DB2)	AFE	Image scan data	Scanner unit section
(AFE_DB3)	AFE	Image scan data	Scanner unit section
(AFE_DB4)	AFE	Image scan data	Scanner unit section
(AFE_DB5)	AFE	Image scan data	Scanner unit section
(AFE_DB6)	AFE	Image scan data	Scanner unit section
(AFE_DB7)	AFE	Image scan data	Scanner unit section
(AFE_SCK)	AFE	AFE control signal	Scanner unit section
(AFE_SDI)	AFE	AFE serial data	Scanner unit section
(AFE_SEN)	AFE	AFE control signal	Scanner unit section
/BIAS	HV bias signal	HV bias drive	Process section
(BSAMP)	AFE	AFE control signal	Scanner unit section
BZR	Buzzer signal	Buzzer	Operation section
CCD_PHI1	CCD	CCD control signal	Scanner unit section
CCD_PHI2	CCD	CCD control signal	Scanner unit section
CCD-CP	CCD	CCD control signal	Scanner unit section
CCD-RS	CCD	CCD control signal	Scanner unit section
CCD-TG	CCD	CCD control signal	Scanner unit section
CED1	Machine cassette detection		Paper transport section
/CPFS1	1st CS pickup solenoid		Paper transport section
/DMT_0	DUP motor	DUP motor phase control	Duplex drive section
/DMT_1	DUP motor	DUP motor phase control	Duplex drive section
/DMT_2	DUP motor	DUP motor phase control	Duplex drive section
/DMT_3	DUP motor	DUP motor phase control	Duplex drive section
DVSEL	Developing tank detection		Developing section
FANLK	Fusing fan	Fan lock detection signal	Optical section
FW	Low voltage power	Zero cross detection	Power section
/GRIDL	HV grid signal	Main charger grid control	Process section
HLOUT	Heater lamp	Heater lamp control	Power section
KEYIN	Key scan input	Key detection control	Operation section
KEYIN1#	Key scan input	Key detection control	Operation section
KEYIN2#	Key scan input	Key detection control	Operation section
KEYSC1	Key scan output	Key scan output	Operation section
KEYSC2	Key scan output	Key scan output	Operation section
KEYSC3	Key scan output	Key scan output	Operation section
LCDCON	LCD control signal	Signal for LCD	Operation section
LCDDB4	LCD data signal	Signal for LCD	Operation section
LCDDB5	LCD data signal	Signal for LCD	Operation section
LCDDB6	LCD data signal	Signal for LCD	Operation section
LCDDB7	LCD data signal	Signal for LCD	Operation section
LCDE	LCD control signal	Signal for LCD	Operation section
LCDRS	LCD control signal	Signal for LCD	Operation section
/LDEN	Laser	Laser circuit control signal	LSU
LEDPOD	POD sensor power		Paper exit section
LEDPPD1	PPD sensor power		Paper transport section
LEDPPD2	PPD2 sensor power		Fusing section
LEDSCOD	SCOD sensor power		RSPF section
LEDSPID	SPID sensor power		RSPF section
LEDSPPD	SPPD sensor power		RSPF section
LEDJRJD	SRJD sensor power		RSPF section
/MC	HV MC signal	Main charger control	Process section
MHPS	MHPS sensor	Carriage HP detection	Optical section
/MMCLK	Main motor	Clock signal to the polygon motor	Main drive section
/MMD	Main motor	Polygon motor drive signal	Main drive section
MMLD	Main motor	Polygon motor ON/OFF detection signal	Main drive section
/MPFS	Multi bypass solenoid		Optical section
nCNCT_NB	Network Board	Connect signal	Network section
nPOF_NB	Network Board	Power Off signal	Network section
nWAKEUP	Network Board	WAKE UP signal	Network section
ONL	Online LED		Operation section
OP-CLK	LED driver control		Operation section

Signal name	Name	Function/Operation	Section
OP-DATA	LED driver control		Operation section
OP-LATCH	LED driver control		Operation section
OUTA-	Scanner motor	Scanner motor phase control	Optical drive section
OUTA+	Scanner motor	Scanner motor phase control	Optical drive section
OUTB-	Scanner motor	Scanner motor phase control	Optical drive section
OUTB+	Scanner motor	Scanner motor phase control	Optical drive section
PD1	PD SW sensor	1st CS paper width sensor	Not used
PMCLK_A	Polygon motor	Clock signal to the polygon motor	LSU
/PMD	Polygon motor	Polygon motor drive signal	LSU
/PMRDY	Polygon motor	Polygon motor ON/OFF detection signal	LSU
POD	POD sensor	Paper transport detection	Paper exit section
/POFF	Low voltage power	Output power control	Power section
PPD1	PPD sensor	Paper transport detection	Paper transport section
PPD2	PPD2 sensor	Paper transport detection	Fusing section
/PR	Heater lamp	Power relay control	Power section
PSL	Power save LED		Operation section
PSW	Start button control		Operation section
RESET_NB	Network Board	RESET signal	Network section
/RRS	1st transport solenoid		Paper transport section
/RSV_SOL	Reverse solenoid		RSPF section
RTH_IN	Thermistor	Fusing section thermistor temperature detection	Fusing section
SCOD	SCOD sensor	RSPF cover open sensor	RSPF section
SELIN1	Select signal 1	HC151 select signal	Operation section
SELIN2	Select signal 2	HC151 select signal	Operation section
SELIN3	Select signal 3	HC151 select signal	Operation section
/SFTMT0	Shifter motor	Shifter motor phase control	Shifter motor section
/SFTMT1	Shifter motor	Shifter motor phase control	Shifter motor section
/SFTMT2	Shifter motor	Shifter motor phase control	Shifter motor section
/SFTMT3	Shifter motor	Shifter motor phase control	Shifter motor section
/SHOLD	Laser	Laser APC signal	LSU
SPID	SPID sensor	RSPF UN paper entry sensor	RSPF section
SPMT_0	RSPF motor	RSPF motor phase control	RSPF section
SPMT_1	RSPF motor	RSPF motor phase control	RSPF section
SPMT_2	RSPF motor	RSPF motor phase control	RSPF section
SPMT_3	RSPF motor	RSPF motor phase control	RSPF section
SPPD	SPPD sensor	RSPF transport detection	RSPF section
/SPUS	Paper feed solenoid		RSPF section
SRJD	SRJD sensor	RSPF paper exit sensor	RSPF section
/SRVC	Reverse clutch		RSPF section
STROBE	LED driver control		Operation section
/SYNC	Laser	Horizontal sync signal from the LSU	LSU
/TC	HV TC signal	Transfer charger grid control	Process section
TCS	Toner sensor	Toner quantity detection	Developing section
TMA_O	Toner motor	Toner motor phase control	Toner motor drive section
TMB_O	Toner motor	Toner motor phase control	Toner motor drive section
▲ UAT_CTS_NB	Network Board	MCU-ANB communication signal	Network section
▲ UAT_RTS_NB	Network Board	MCU-ANB communication signal	Network section
▲ UAT_RxD_NB	Network Board	MCU-ANB communication signal	Network section
▲ UAT_TxD_NB	Network Board	MCU-ANB communication signal	Network section
▲ USB_NB_D-	Network Board	MCU-ANB communication signal	Network section
▲ USB_NB_D+	Network Board	MCU-ANB communication signal	Network section
VCL	Copy lamp	Copy lamp control	Scanner unit section
/VFCNT	Fan speed signal	Fan rotation speed control	Optical section
VFMCNT	Fusing fan	Fan drive signal	Optical section
/VIDEO	Laser	Laser drive signal	LSU
(VSAMP)	AFE	AFE control signal	Scanner unit section


Memory section

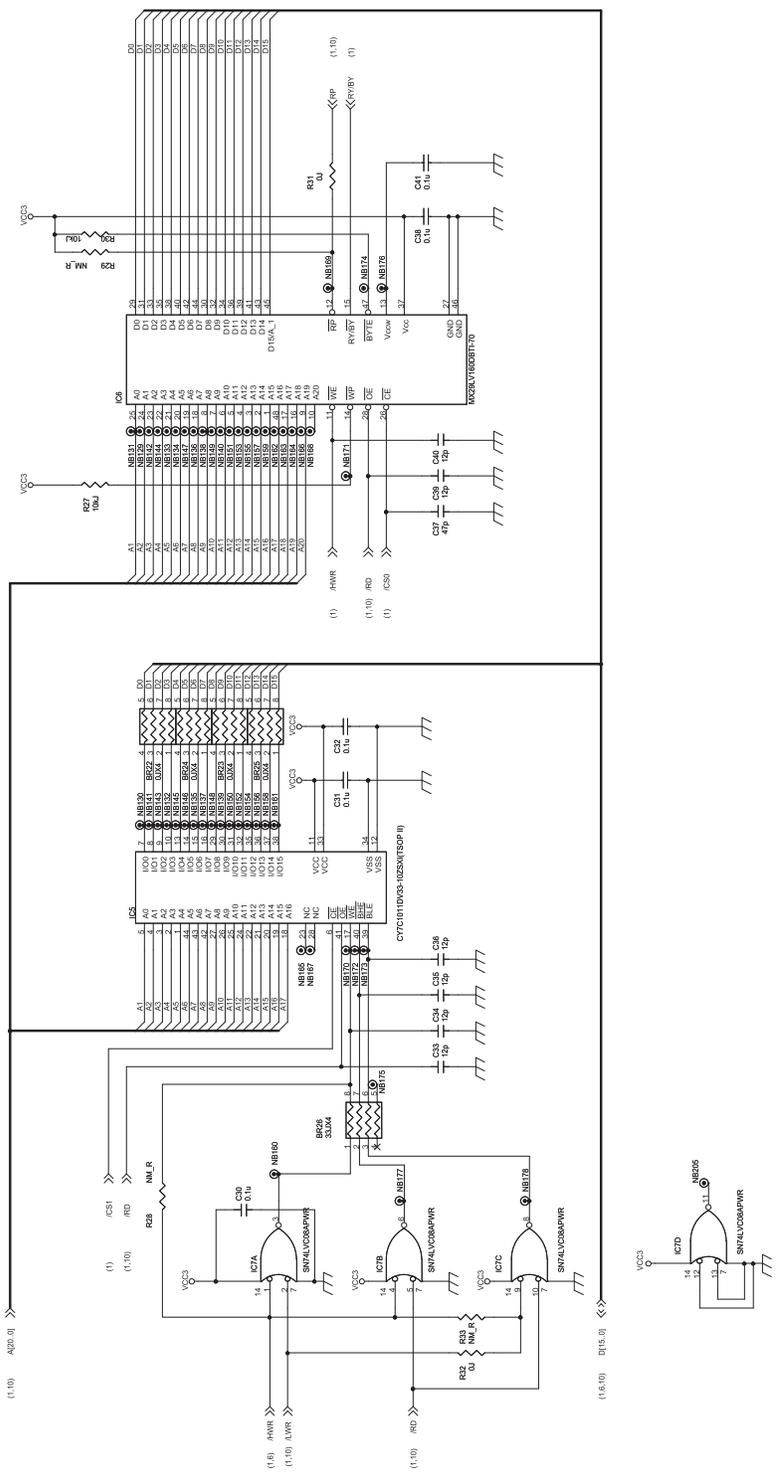


Buffer section

3/14


MIR/SPF Selector

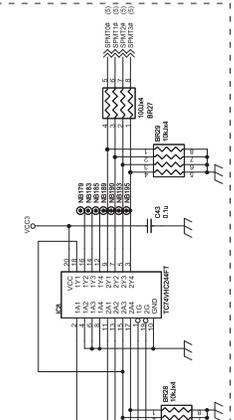












3V-5V level conversion

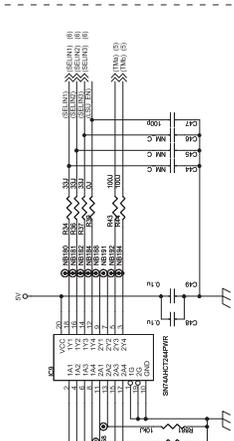

LOPE IF circuit

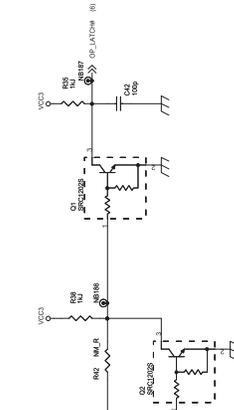


5V-3V level conversion/3V series Buffer

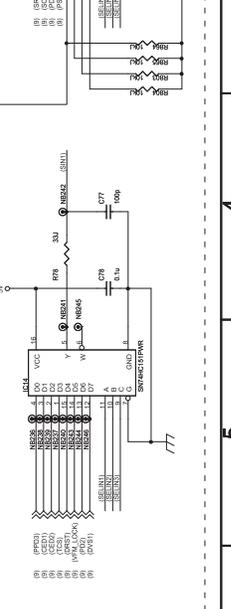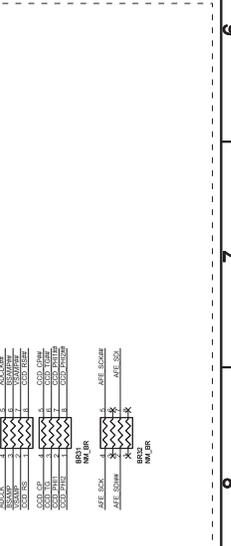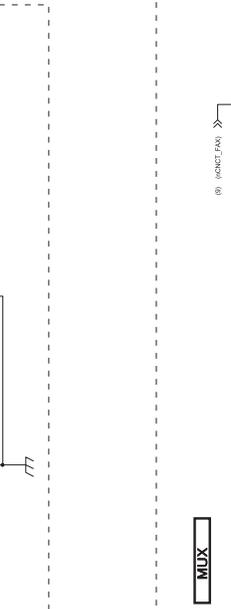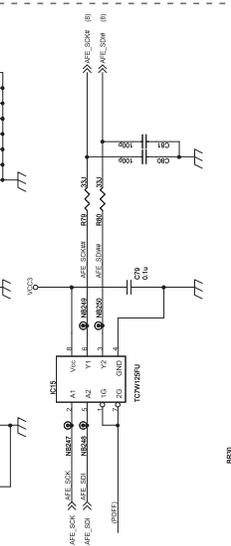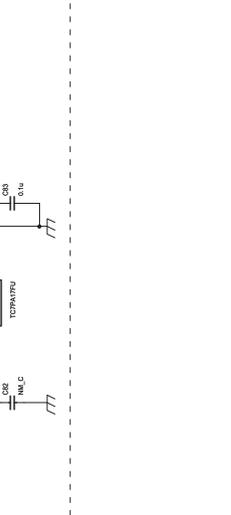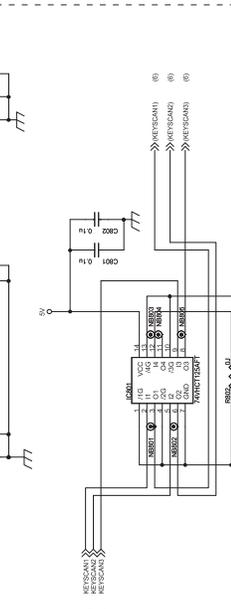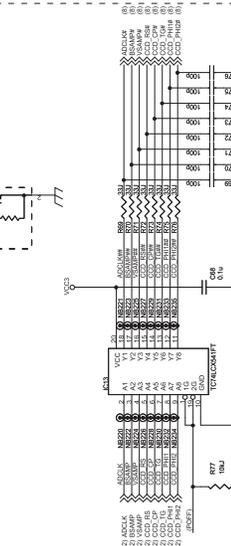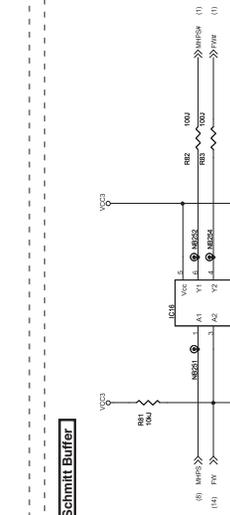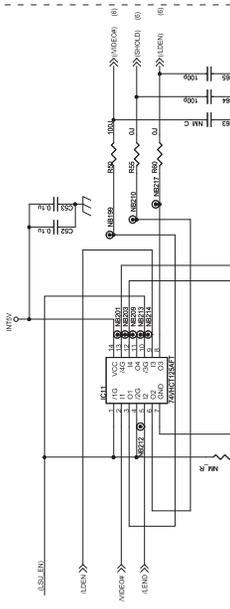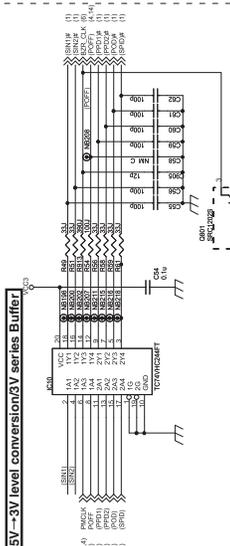


Driver section 2


Motor Power Source

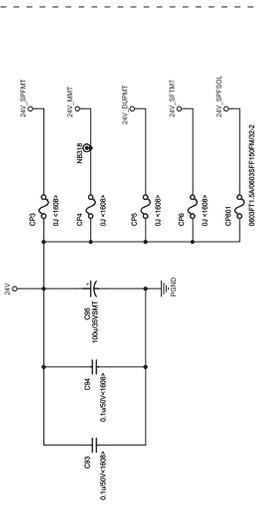

InterLock 5V

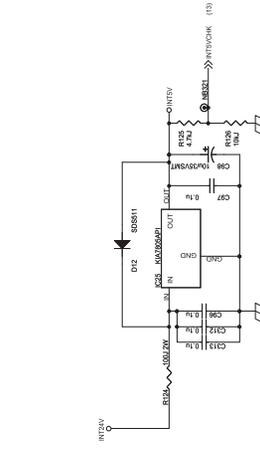


Duplex Motor Driver

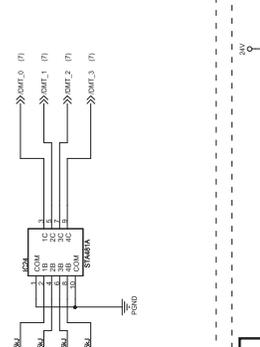


5/14


Shifter Motor Driver

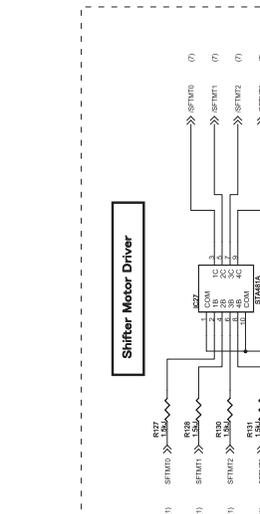


SPF Motor Driver

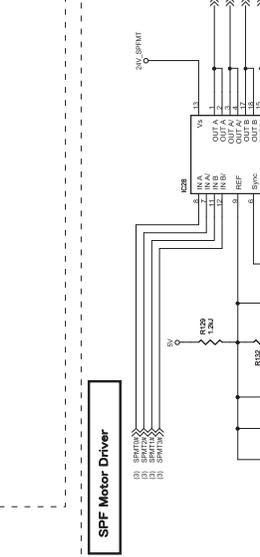


Toner Motor Driver

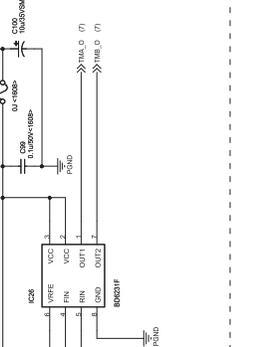

Mirror Motor Driver

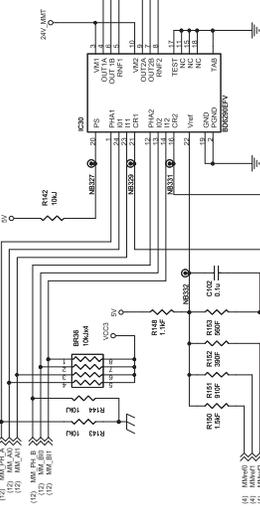


InterLock Power Source

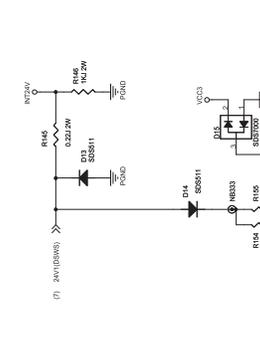



Connector section 2

7/14

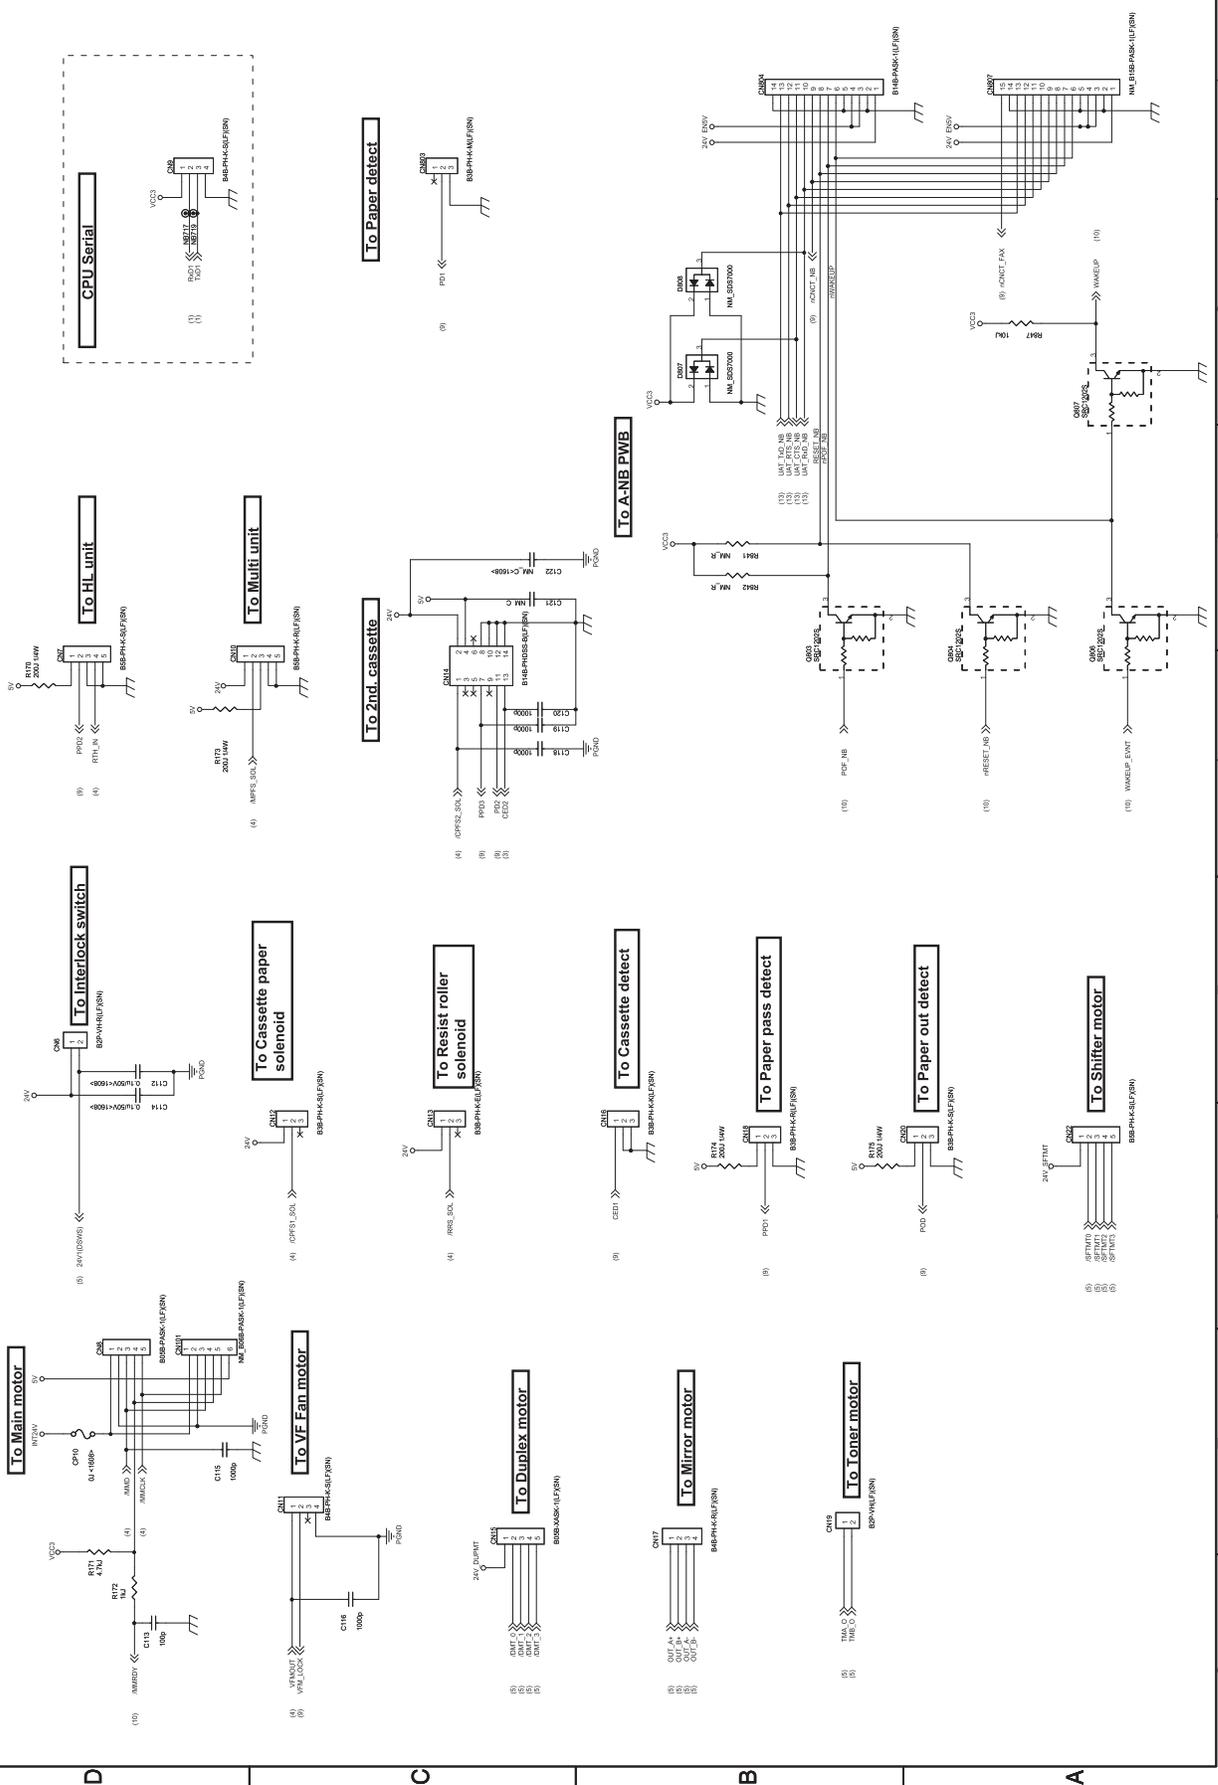


Connector section 3


8/14

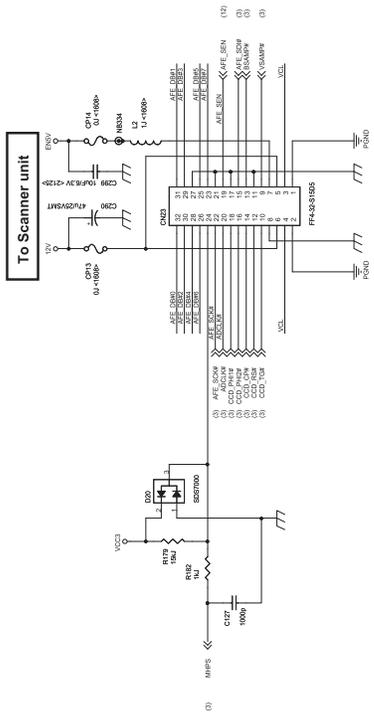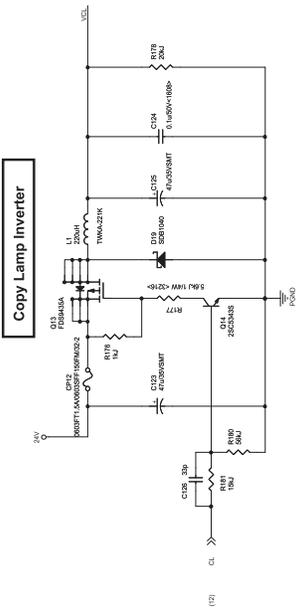


To DV Unit (To Analog Tonner Sensor)

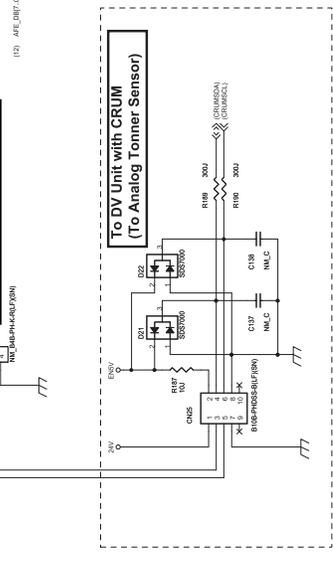





CRUM Control

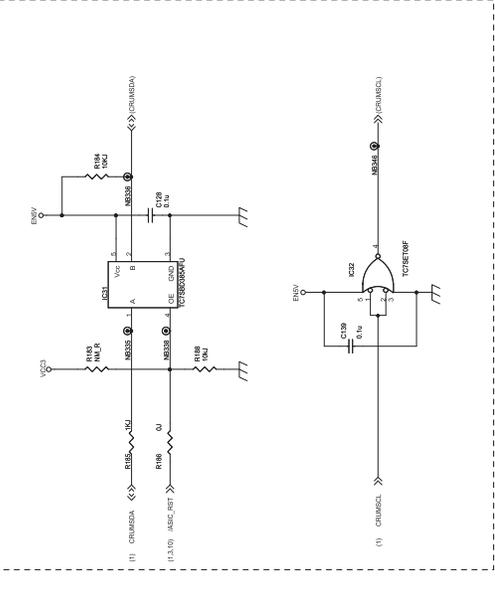

Circuit for through hall reliability check


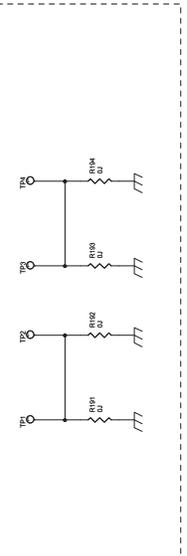



Pull Up/Down section

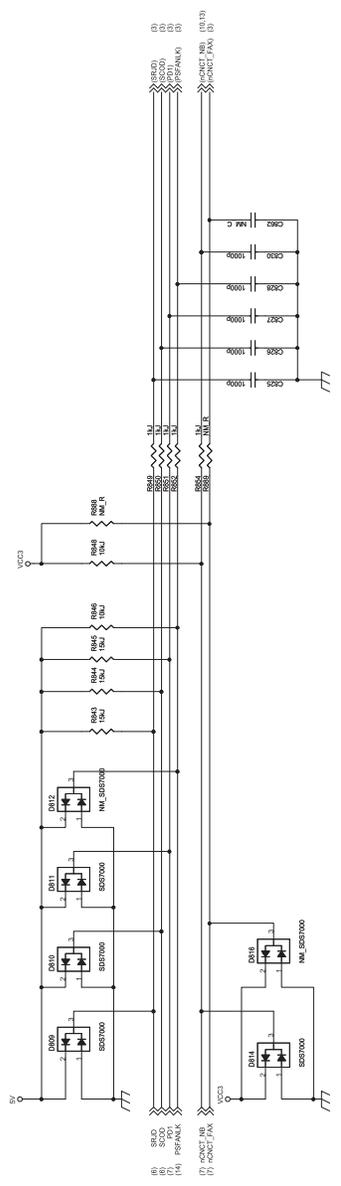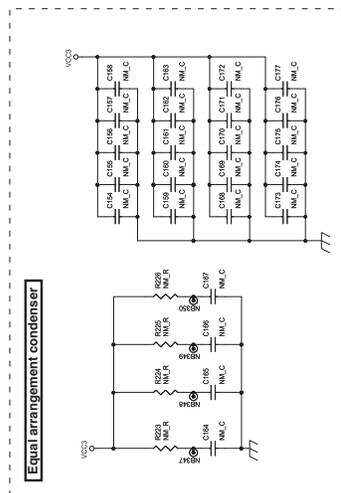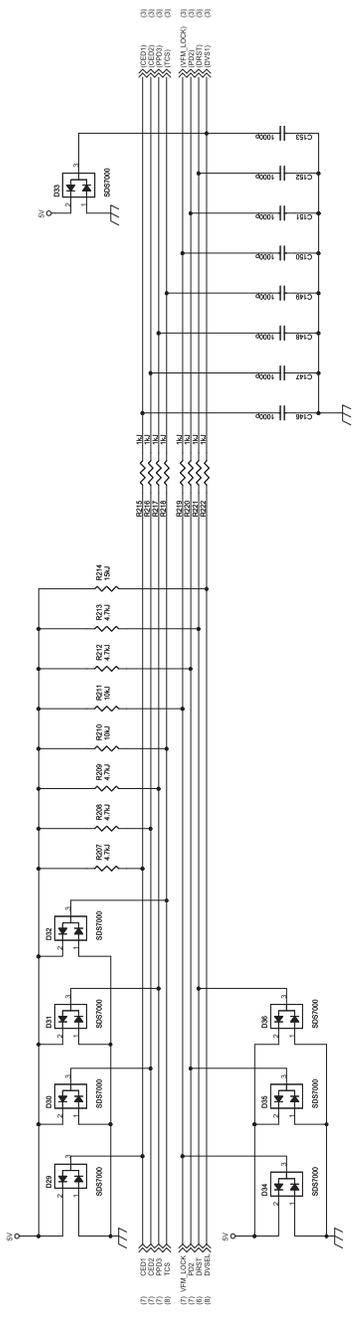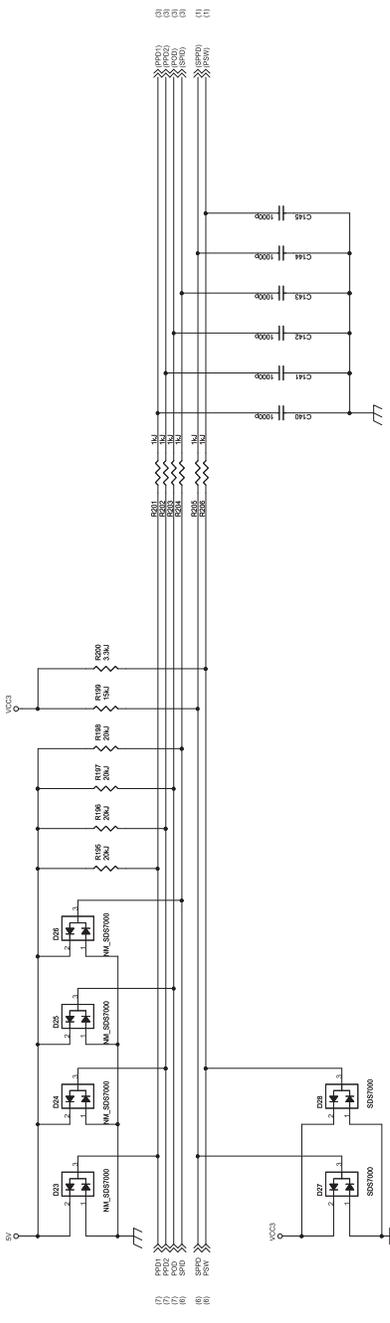

KronosII LocalBus section


10/14

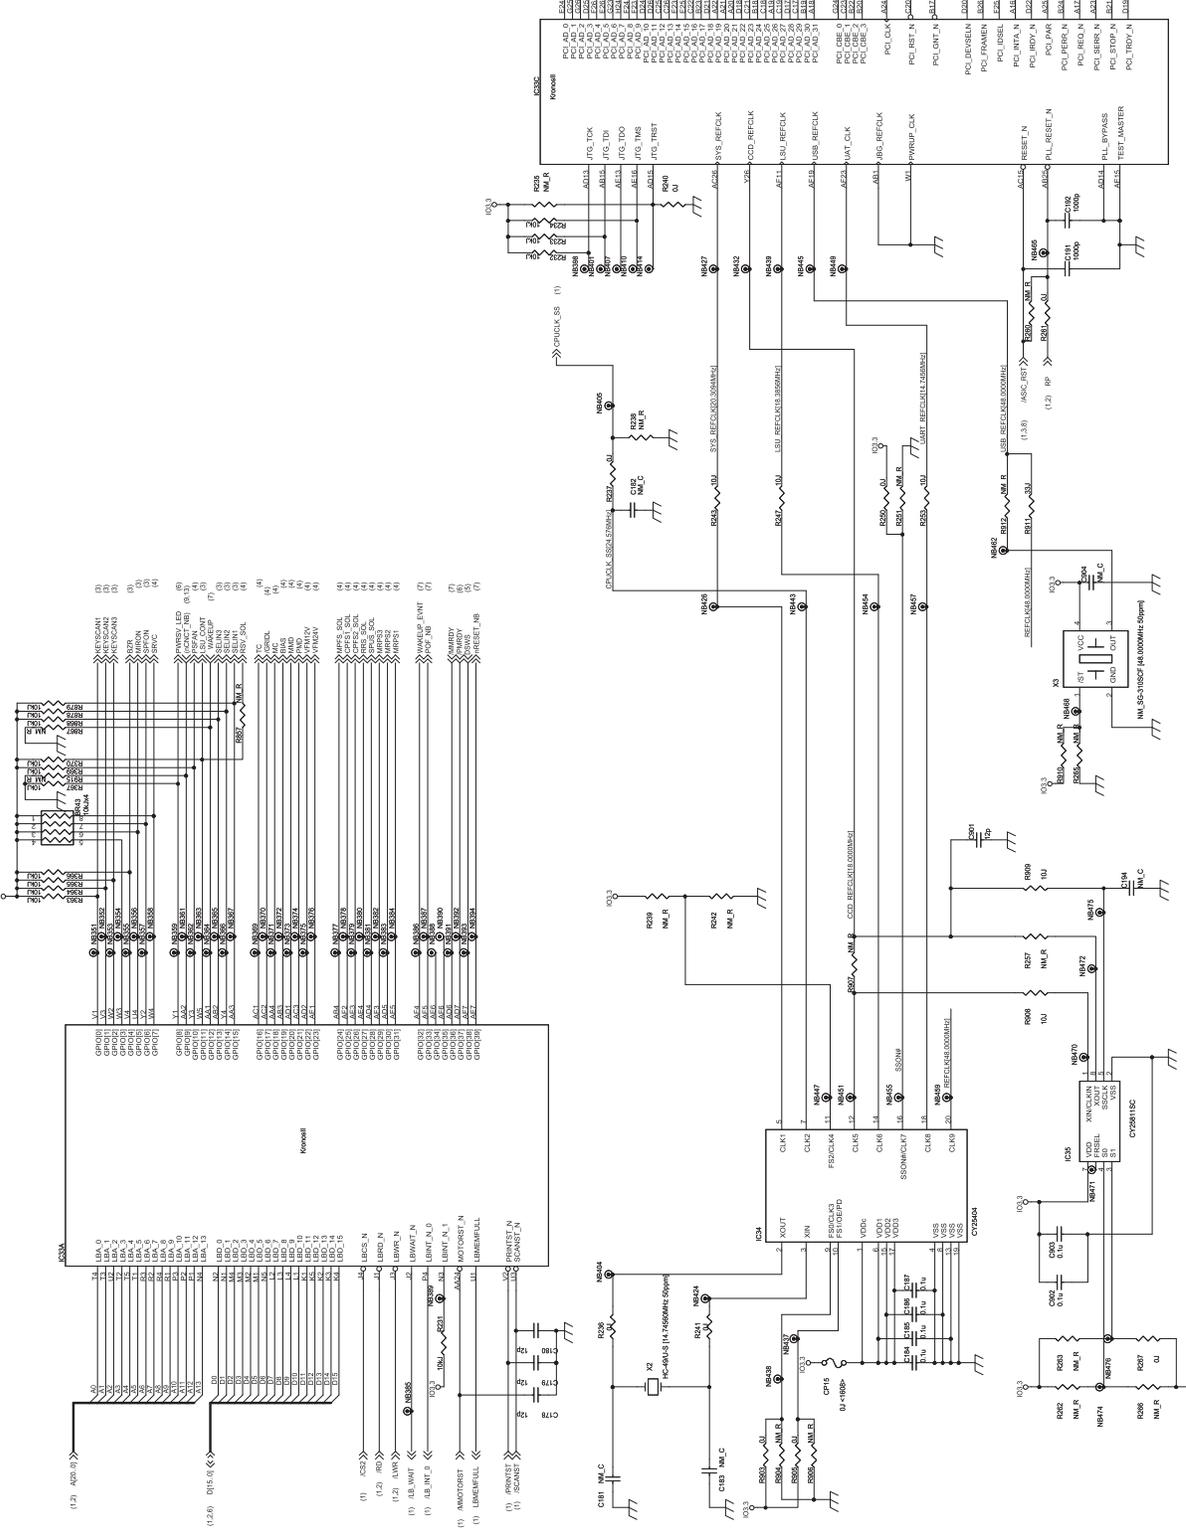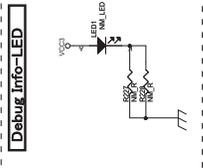

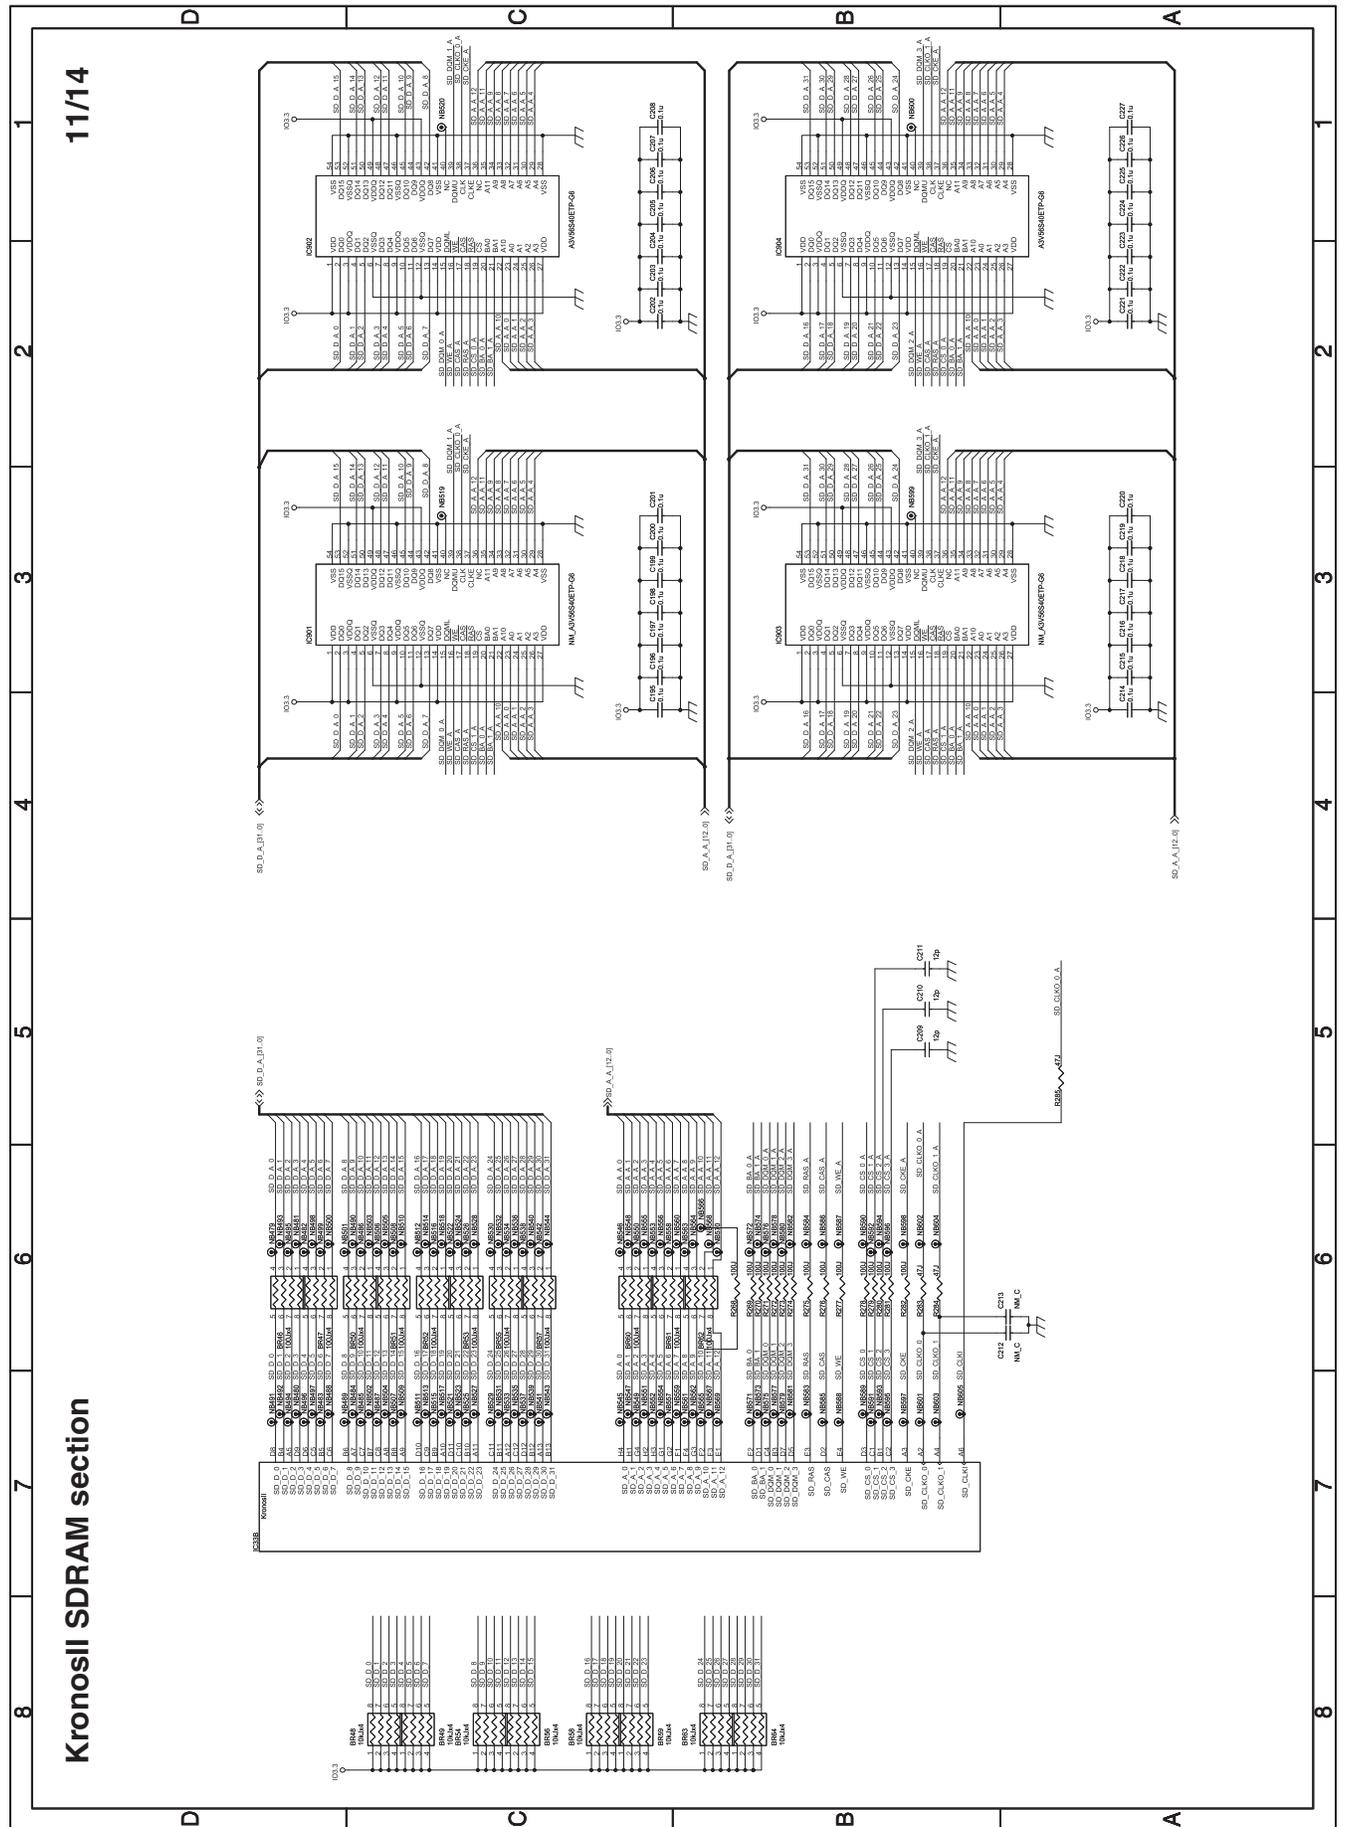



KronosII Scan/Power section

12/14

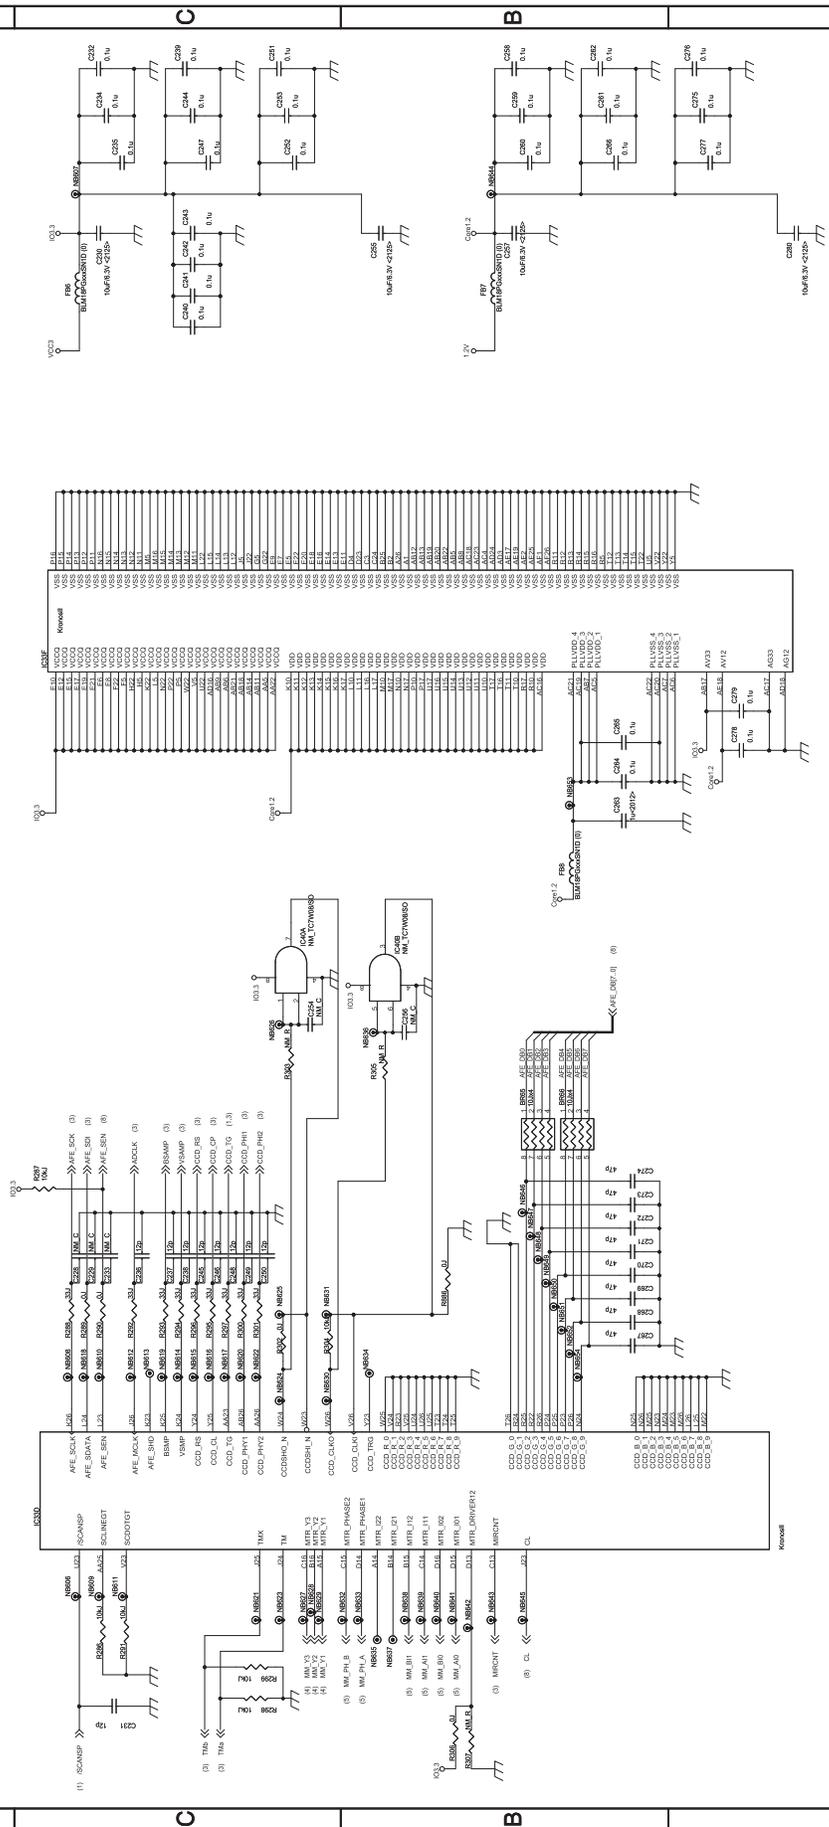

KEY / Buzzer section

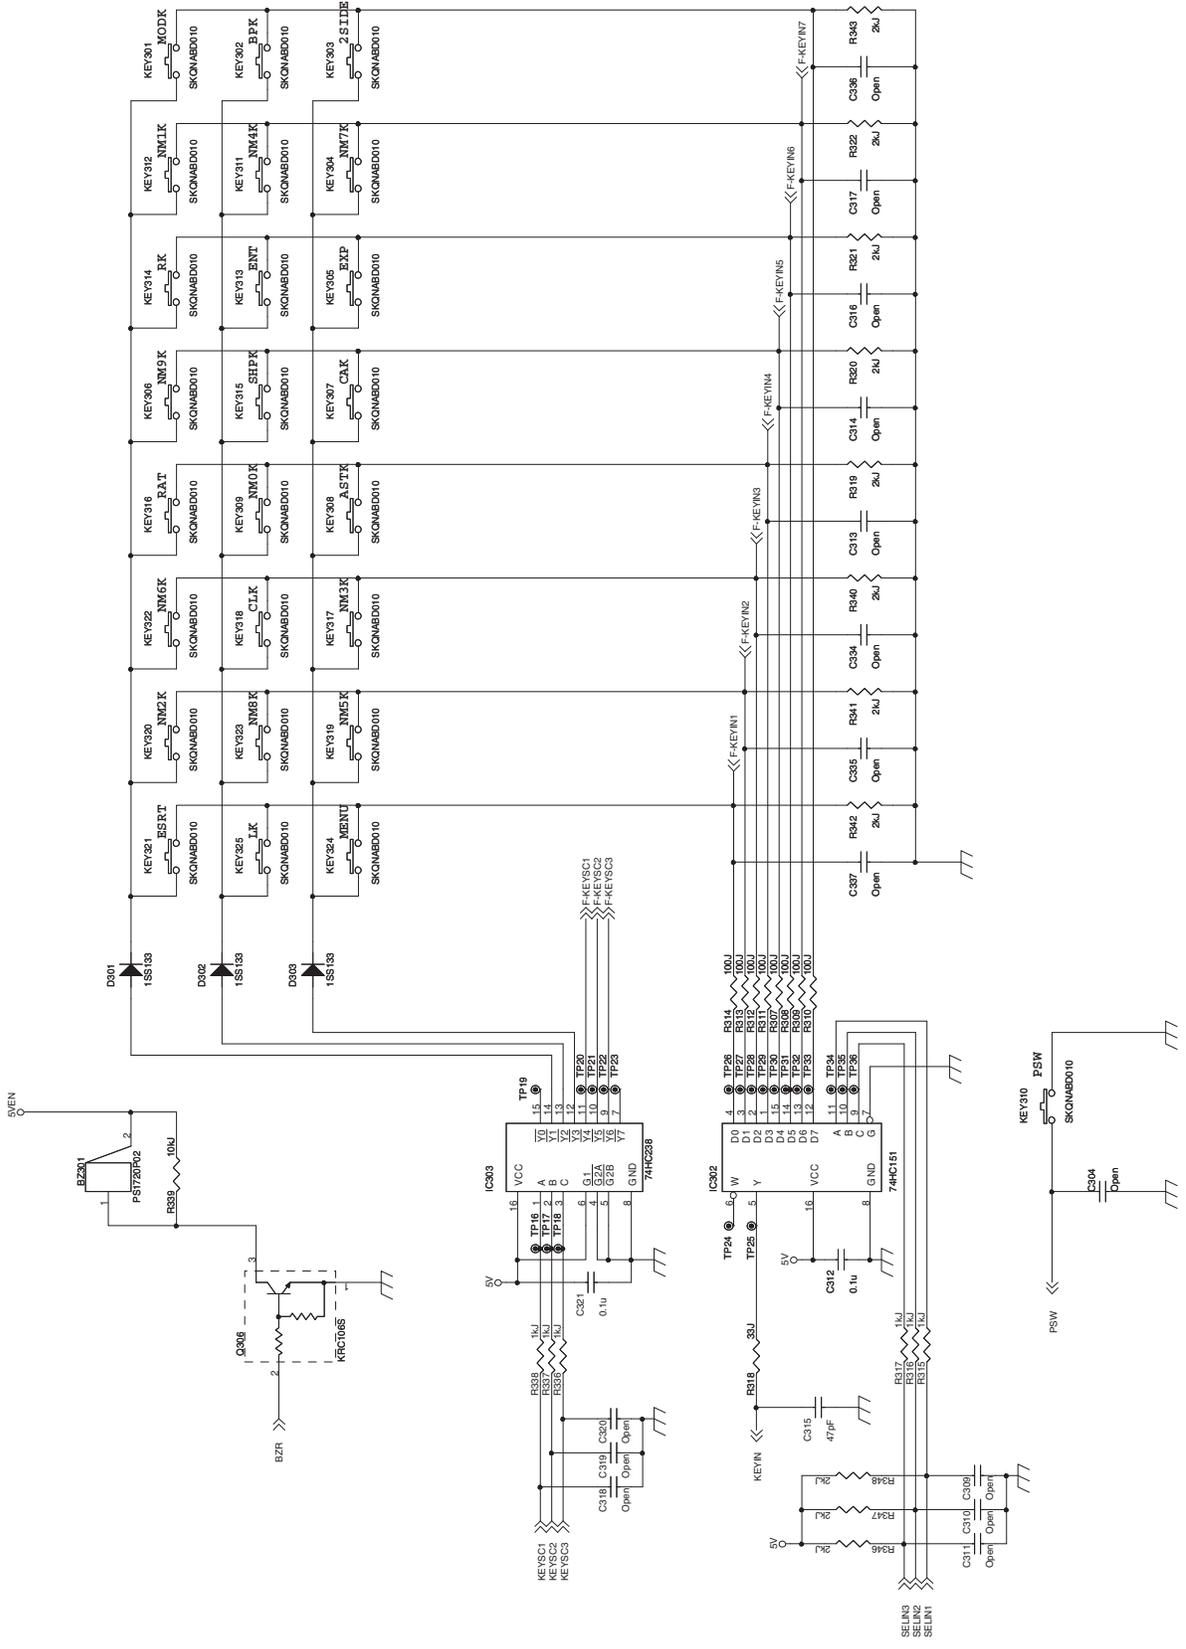

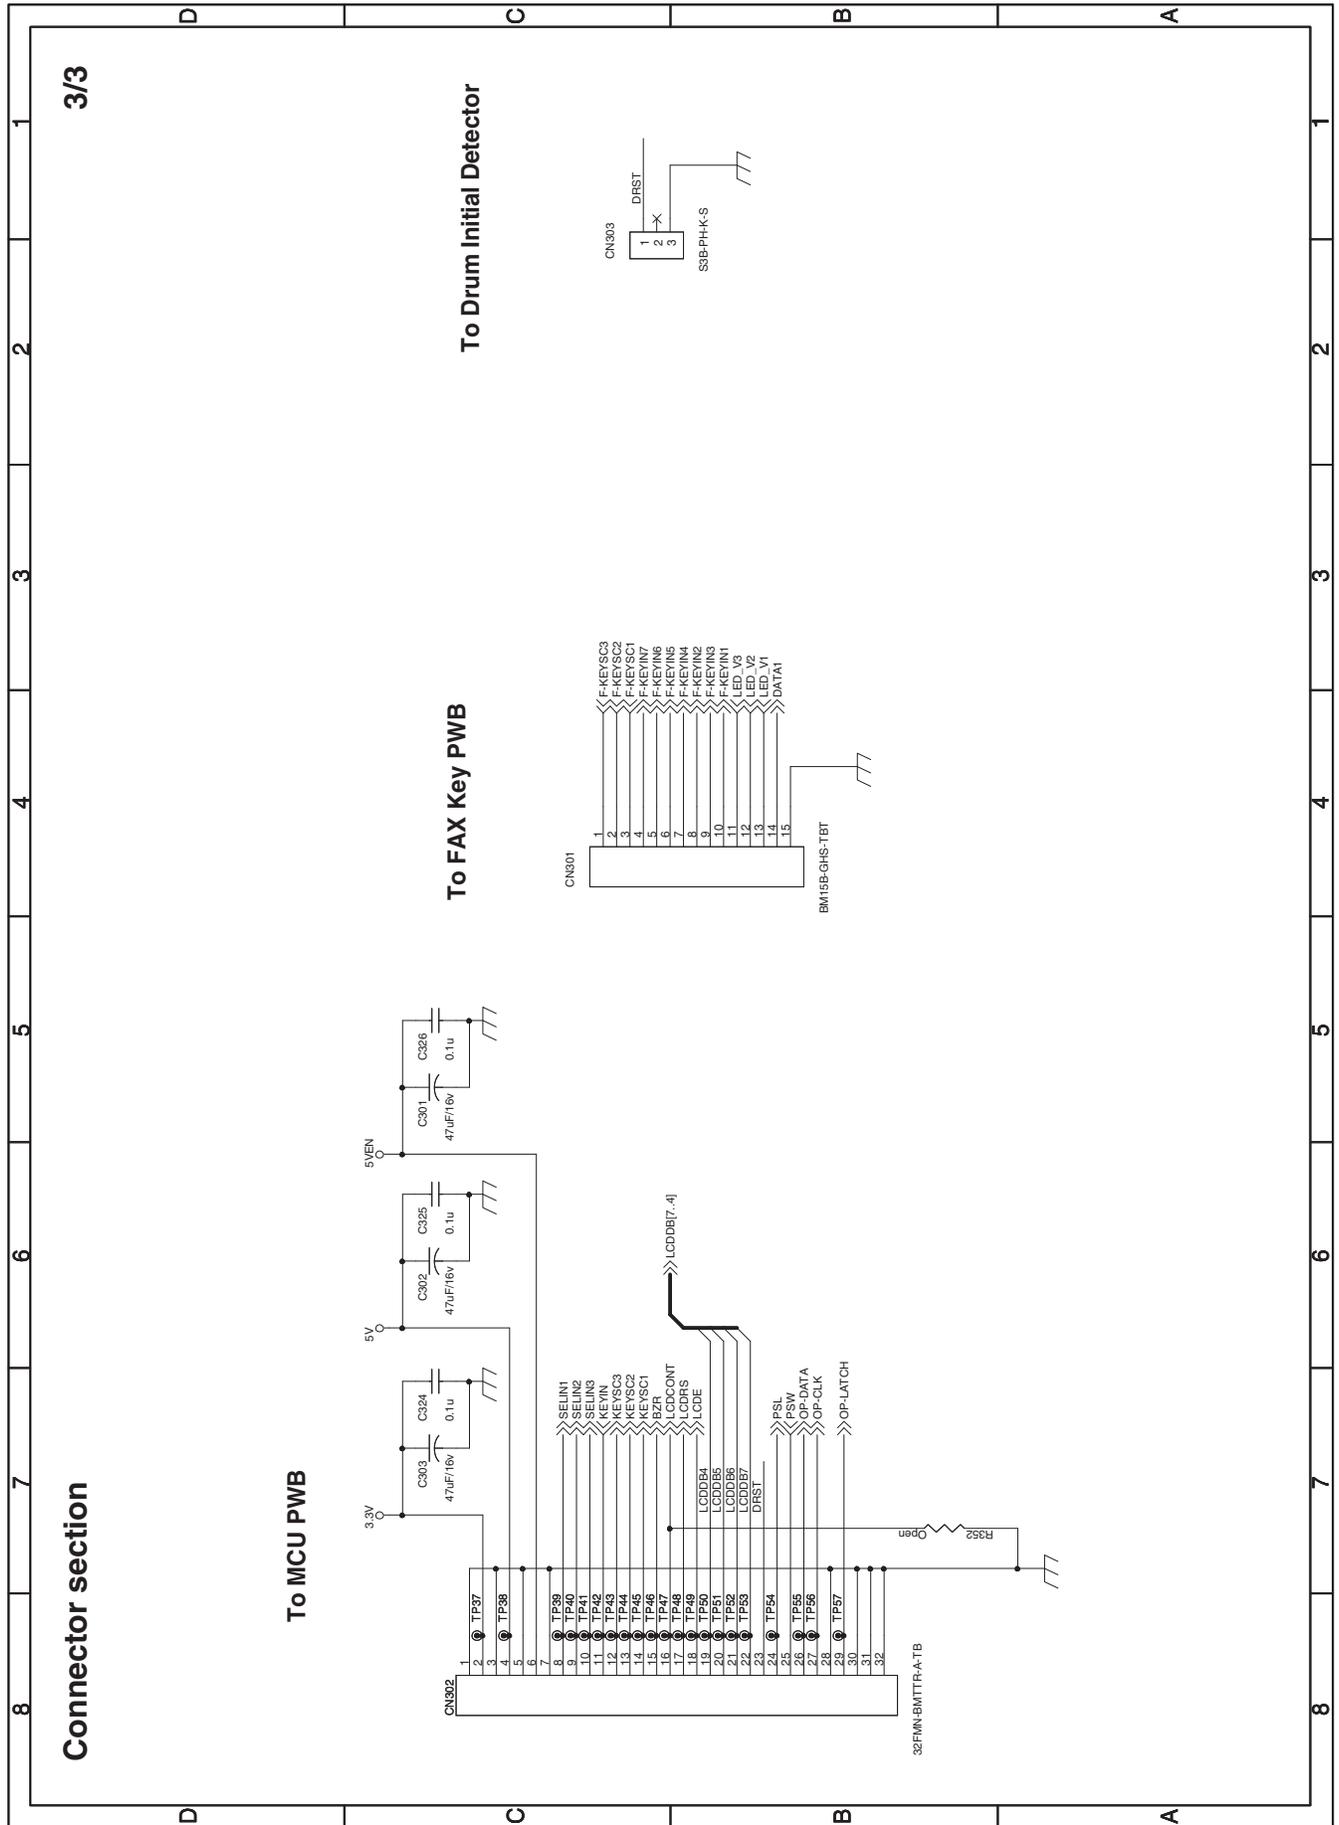

[15] FLASH ROM VERSION UP PROCEDURE

1. Preparation

Write the download data (the file with the extension dwl) to the main body.

Necessary files for download

- Maintenance.exe (Maintenance software)
- ▲ ProcModelH_AJLCD.mdl
- ▲ ProcModelH_AJLCD.ini
- ▲ ProcModelH_AJLCD.fmt
- Mainte.inf
- Usbscan.sys
- Download file:***.dwl

Note:

- The Download file(***.dwl) and the like that are to be downloaded should be copied, in advance, into folders that have a maintenance program.
- When creating a folder for a maintenance tool in the PC, be sure that no lengthy folder name is included in the path.


Example:

Incorrect c:\Maintenance Download Tool


Correct c:\Maintenance\Downtool

2. Download procedure

- 1) Main body side:
Executable by performing the Service Simulation No. 49-01 (Flash Rom program-writing mode). (The letter "DOWNLOAD MODE" appears on the operation panel to denote the download mode status.)
- 2) Connect the PC and the main body with the download cable (USB cable).

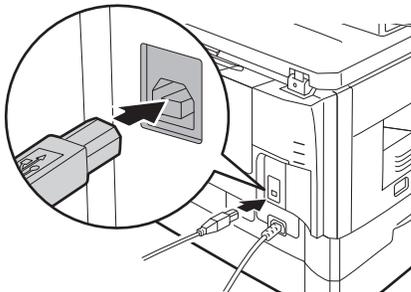


- 3) PC side:
Boot the maintenance program. Select the model icon.

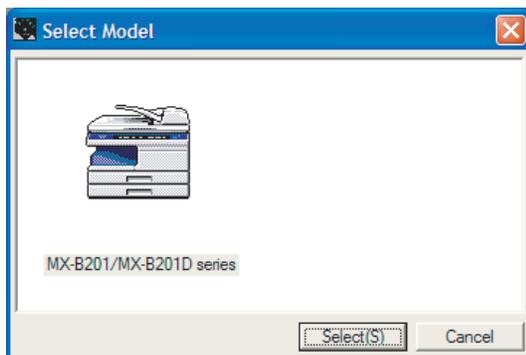


<Sample display>


- 4) PC side:
Confirm that the "Simulation Command List" tree is displayed on the maintenance program.
- 5) PC side:
When the message "The copier is off" is displayed on the lowest area of the figure below after the "maintenance program" is started up, select "File" and then "Reconnect" in the menu bar.

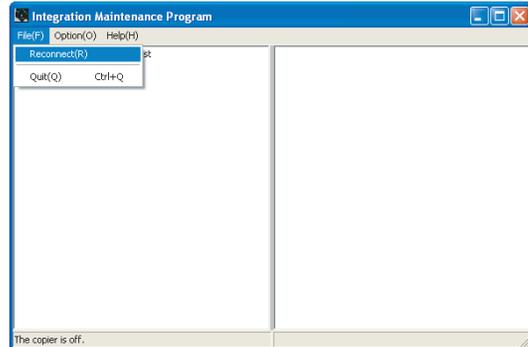


- 6) PC side:
Confirm a tree is displayed under the "Special (MCU)" on the maintenance program". (If no tree is displayed, confirm that the USB is connected and select the "Reconnect" (the above 5) again.)

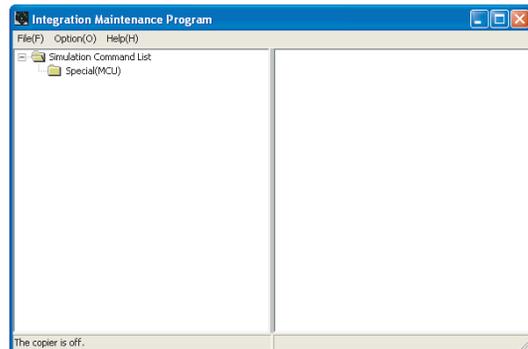

- 7) PC side:
Double click "Special (MCU)" in the main tree item to develop the sub tree items, and double click "DWL Download" in the sub tree items.

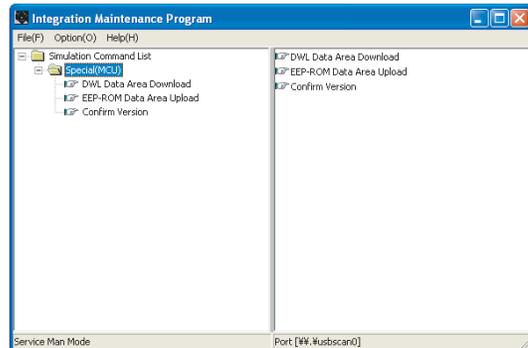

- 8) PC side:
Specify the download file (*.dwl).

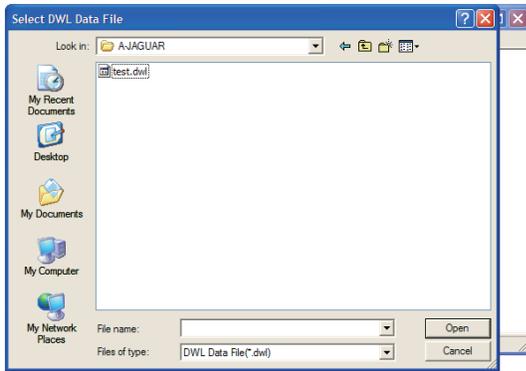


- 9) PC side:
The download file is specified, download is automatically performed.



- 10) PC side:
When the message below is displayed, download is completed.
Completion message:



DOWNLOAD MODE/DOWNLOAD COMPLETE !

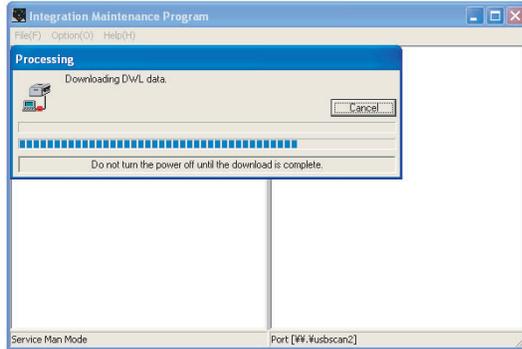

NOTE (Important):



- Be sure that the power is not turned off and the USB cable is not removed until the message "DOWNLOAD MODE/DOWNLOAD COMPLETE !" appears.

- 11) Main body side:



Wait until the message "DOWNLOAD MODE/DOWNLOAD COMPLETE !" appears on the operation panel.



The appearance of "DOWNLOAD MODE/DOWNLOAD COMPLETE !" indicates the completion of the download (writing into ROM).


Turn the power off.

- 12) After-process: Terminate the maintenance program, and turn on the power of the main body.

After the download (data transmission) has been completed, exit the software program. The USB cable can be removed at this point.

NOTE:

- For making a second connection with another machine, select the "File" and "Reconnect" in the menu bar on the maintenance program at the time of the USB being re-connected. Repeat the previous procedures from the above 5).

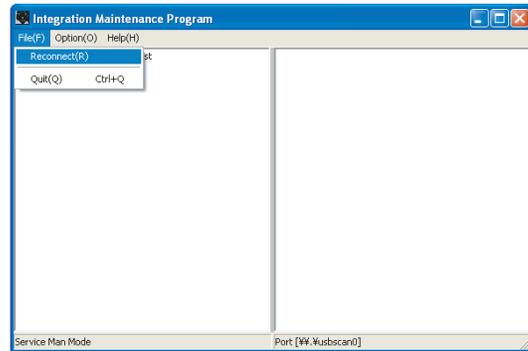

*** Forbidden actions while downloading (Important)**

Failure in the download concerned may not allow you to conduct the subsequent download procedures. Added care should be taken to avoid having the situation below arise while downloading.

- Switching off the main body.
- Disconnecting the download cable (USB cable).

*** If the above inhibit item occurs during downloading:**

Turn OFF and ON the power.

- If "DOWNLOAD MODE" (which means downloading) is displayed on the operation panel LCD of the machine, perform downloading again.
- If "DOWNLOAD MODE" (which means downloading) is not displayed on the operation panel LCD of the machine, turn OFF the power, and press and hold [Clear All] key + [◀] key, turn on the power. If, then, "DOWNLOAD MODE" (which means downloading) is displayed on the operation panel LCD of the machine, perform downloading again.
If "DOWNLOAD MODE" is still not displayed, the MCU must be replaced.

3. Installation procedure

A. USB joint maintenance program installation

The driver is installed by plug and play.

B. Installation procedure on Windows XP


- 1) Machine side:
Executable by performing the Service Simulation No. 49-01 (Flash Rom program-writing mode).
(A word "DOWNLOAD MODE" appears on the operation panel to denote the download mode status.)
- 2) Connect the machine and the PC with a USB cable.
- 3) Check that the following display is shown.
Select "Install from a list or the specific location" and press the NEXT button.




- 4) Select "Include this location in the search". If the retrieval area does not include the folder which includes the maintenance tool driver (Mainte.inf), select "Browse"
If the folder path is properly shown, press the NEXT button to go to procedure 7).



- 5) Select the folder which includes the maintenance tool driver (Mainte.inf), and press the OK button.
(When the driver is included in the "C:\" folder:)

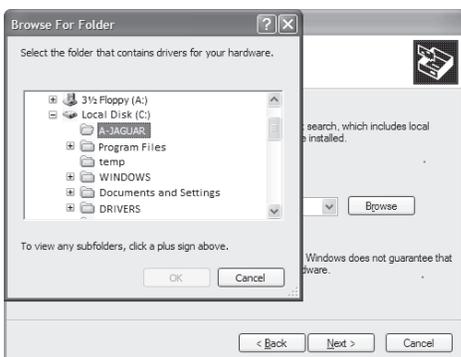

- 6) Check that the path to the folder which includes the maintenance tool driver (Mainte.inf) is shown, and press the NEXT button.

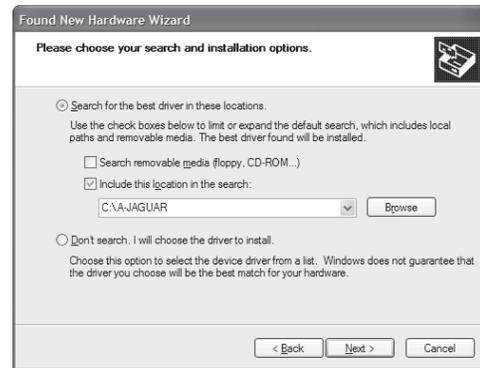

- 7) If the Windows testing message is shown. Press the Continue Anyway button.



- 8) When installation is completed, the following display is shown.
Press the Finish button.



The installation procedure (on Windows XP) is completed with the above operation.

C. Installation procedure on Windows 2000

- Machine side:
Executable by performing the Service Simulation No. 49-01 (Flash Rom program-writing mode).
(A word "DOWNLOAD MODE" appears on the operation panel to denote the download mode status.)
- Connect the machine and the PC with a USB cable.
- Check that the new hardware search wizard is shown. Press the NEXT button.



- Select "Search for a suitable driver for my device" and press the NEXT button.




- Select "Specify a location" and press the NEXT button.



- Press the "Browse" button. Specify the folder which includes the maintenance tool driver (Mainte.inf)



- Specify the folder which includes the maintenance tool driver (Mainte.inf), and press the OPEN button.
Check that the path to the folder which includes the maintenance tool driver (Mainte.inf) is properly displayed, and press the OK button.
(When the maintenance tool driver is included in the folder of "C:\A-Jaguar")

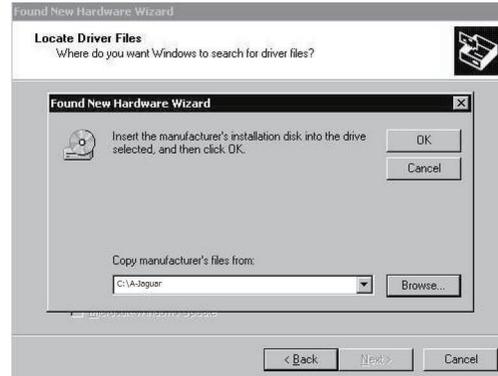

- Press the NEXT button, and installation is started.



- When installation is completed, the following display is shown. Press the Finish button.



The installation procedure of the joint maintenance program on Windows 2000 is completed with the above operation.

▲ [16] UPDATING NETWORK (FAX) BOARD FIRMWARE

1. Preparation

▲ Write the FAX firmware (MX-FX12) according to the same procedure as MX-NB11.

Write the firmware (file with extension of spf) into the MX-NB11.

Necessary items for updating

- A-Jaguar.spf (Firmware)
- USB memory

Caution:

- ▲ Only file name "A-Jaguar.spf" is recognized.
- ▲ Rename the provided file to file name "A-Jaguar.spf".
- The firmware (A-Jaguar.spf) must be copied to the root directory in the USB memory in advance.
- To avoid troubles, the content of the USB memory must be the firmware only.

IMPORTANT NOTE

- ① Never insert the prepared USB memory to the machine which is ON except Procedure 2) in "2. Upgrading procedures" below.
- ② Never supply power of the machine with the prepared USB memory inserted to the machine.

2. Upgrading procedures


- 1) Machine side
Execute the service simulation No. 49-02 (Network board firmware download mode).
(Check to confirm that the display below is indicated on the screen.)

```
ANB DOWNLOAD MODE
ANB PROG : XX : XX : XX
```

"XX.XX.XX" on the display varies depending on the version.

During execution of the simulation, do not perform a key operation of the operation panel.

- 2) Insert the USB memory into the machine.
- * Once the USB memory is inserted, never remove it until the procedure is completed.

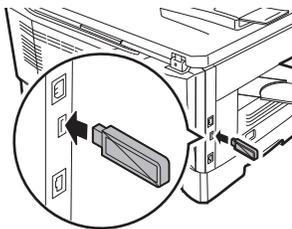

When the USB memory is inserted into the memory, upgrading is automatically performed.

During upgrading, the display of the machine varies as shown below.

Check to confirm that the display of "2. Upgrading procedures - 1)" is changed to that of ① as shown below.

```
①
PREPARE READ SCRIPT
NO_SCRIPT_FILE

②
BEGIN SPF UPDATE
BEGIN LOADER UPDATE

③
READ SCRIPT FILE END
```

In the display ②, the lower line is changed over in the sequence below:

```
BEGIN LOADER UPDATE
END LOADER UPDATE
BEGIN FW UPDATE
END FW UPDATE
BEGIN WEB UPDATE
END WEB UPDATE
END SPF UPDATE
```



When FAX board firmware is included, the below is added.

```
BEGIN AFAX UPDATE
END AFAX UPDATE
```

Some contents in the SPF file may not be displayed.

- 3) Machine side
About 2 minutes 30 seconds later from inserting the USB memory, check to confirm that the display of the machine is changed over as shown below.

```
DOWNLOAD MODE
DOWNLOAD COMPLETE!
```

If the display of the machine is not changed over as shown above even 5 minutes later, turn OFF the power of the machine and remove the USB memory. Then perform "2. Upgrading procedures" again.

- 4) Turn OFF the power of the machine.
- 5) Check to confirm that the machine is turned OFF, and remove the USB memory from the machine.
Upgrading is completed with the above operation.

[IMPORTANT] Never execute the following procedures

If upgrading is once failed, further upgrading may be impossible. Use, therefore, great care not to execute the following procedures.

- ① Never turn OFF the machine during upgrading.
- ② Never remove the USB memory except when in "2. Upgrading procedures - 5)."
- ③ Never insert the USB memory except when in "Upgrading procedures - 2)."
- ④ Never turn ON the power with the USB memory inserted into the machine which is OFF.

* Countermeasures when one of the above inhibited operations is erroneously made


①	Remove the USB memory, and turn ON the power. Enter the Print Mode or the Scan Mode. When the machine enters the Ready state, execute "2. Upgrading procedures" again.
②	Turn OFF the power, and turn ON the power. Enter the Print Mode or the Scan Mode. When the machine enters the Ready state, execute "2. Upgrading procedures" again.
③	Leave the machine with the USB memory inserted, and turn
④	OFF the power. Then execute "2. Upgrading procedures."

If "Please Wait" remains for more than 1 minute after entering the Print Mode or the Scan Mode in ① - ④, the Network Board must be replaced.

LEAD-FREE SOLDER

The PWB's of this model employs lead-free solder. The "LF" marks indicated on the PWB's and the Service Manual mean "Lead-Free" solder. The alphabet following the LF mark shows the kind of lead-free solder.

Example:

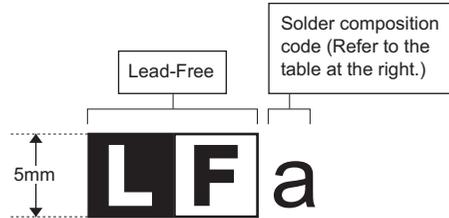

<Solder composition code of lead-free solder>

Solder composition	Solder composition code
Sn-Ag-Cu	a
Sn-Ag-Bi Sn-Ag-Bi-Cu	b
Sn-Zn-Bi	z
Sn-In-Ag-Bi	i
Sn-Cu-Ni	n
Sn-Ag-Sb	s
Bi-Sn-Ag-P Bi-Sn-Ag	p

(1) NOTE FOR THE USE OF LEAD-FREE SOLDER THREAD

When repairing a lead-free solder PWB, use lead-free solder thread.

Never use conventional lead solder thread, which may cause a breakdown or an accident.

Since the melting-point of lead-free solder thread is about 40°C higher than that of conventional lead solder thread, the use of the exclusive-use soldering iron is recommended.

(2) NOTE FOR SOLDERING WORK

Since the melting-point of lead-free solder is about 220°C, which is about 40°C higher than that of conventional lead solder, and its soldering capacity is inferior to conventional one, it is apt to keep the soldering iron in contact with the PWB for longer time. This may cause land separation or may exceed the heat-resistive temperature of components. Use enough care to separate the soldering iron from the PWB when completion of soldering is confirmed.

Since lead-free solder includes a greater quantity of tin, the iron tip may corrode easily. Turn ON/OFF the soldering iron power frequently.

If different-kind solder remains on the soldering iron tip, it is melted together with lead-free solder. To avoid this, clean the soldering iron tip after completion of soldering work.

If the soldering iron tip is discolored black during soldering work, clean and file the tip with steel wool or a fine filer.

CAUTION FOR BATTERY REPLACEMENT

(Danish) ADVARSEL !
Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri
af samme fabrikat og type.

Levér det brugte batteri tilbage til leverandoren.

(English) Caution !
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type
recommended by the manufacturer.

Dispose of used batteries according to manufacturer's instructions.

(Finnish) VAROITUS
Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan
tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden
mukaisesti.

(French) ATTENTION
Il y a danger d'explosion s' il y a remplacement incorrect
de la batterie. Remplacer uniquement avec une batterie du
même type ou d'un type équivalent recommandé par
le constructeur.

Mettre au rebut les batteries usagées conformément aux
instructions du fabricant.

(Swedish) VARNING
Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent
typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens
instruktion.

(German) Achtung
Explosionsgefahr bei Verwendung inkorrekt er Batterien.
Als Ersatzbatterien dürfen nur Batterien vom gleichen Typ oder
vom Hersteller empfohlene Batterien verwendet werden.
Entsorgung der gebrauchten Batterien nur nach den vom
Hersteller angegebenen Anweisungen.

CAUTION FOR BATTERY DISPOSAL

(For USA, CANADA)

"BATTERY DISPOSAL"

THIS PRODUCT CONTAINS A LITHIUM PRIMARY
(MANGANESE DIOXIDE) MEMORY BACK-UP BATTERY
THAT MUST BE DISPOSED OF PROPERLY. REMOVE THE
BATTERY FROM THE PRODUCT AND CONTACT YOUR
LOCAL ENVIRONMENTAL AGENCIES FOR INFORMATION
ON RECYCLING AND DISPOSAL OPTIONS.

"TRAITEMENT DES PILES USAGÉES"

CE PRODUIT CONTIENT UNE PILE DE SAUVEGARDE DE
MÉMOIRE LITHIUM PRIMAIRE (DIOXYDE DE MANGANÈSE)
QUI DOIT ÊTRE TRAITÉE CORRECTEMENT. ENLEVEZ LA
PILE DU PRODUIT ET PRENEZ CONTACT AVEC VOTRE
AGENCE ENVIRONNEMENTALE LOCALE POUR DES
INFORMATIONS SUR LES MÉTHODES DE RECYCLAGE ET
DE TRAITEMENT.

SHARP

COPYRIGHT © 2011 BY SHARP CORPORATION

All rights reserved.

Produced in Japan for electronic Distribution

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted,

in any form or by any means,

electronic; mechanical; photocopying; recording or otherwise
without prior written permission of the publisher.

Trademark acknowledgements

- Microsoft®, Windows®, Windows® 98, Windows® Me, Windows NT® 4.0, Windows® 2000, Windows® XP, Windows® Vista, Windows® 7, Windows® Server 2003, Windows® Server 2008 and Internet Explorer® are registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and other countries.
- PostScript is a registered trademark of Adobe Systems Incorporated.
- Macintosh, Mac OS, AppleTalk, EtherTalk, Laser Writer, and Safari are registered trademarks or trademarks of Apple Inc.
- IBM, PC/AT, and Power PC are trademarks of International Business Machines Corporation.
- Acrobat® Reader Copyright® Adobe Systems Incorporated. All rights reserved. Adobe, the Adobe logo, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated.
- PCL is a registered trademark of the Hewlett-Packard Company.
- Sharpdesk is a trademark of Sharp Corporation.
- All other trademarks and copyrights are the property of their respective owners.

SHARP CORPORATION

Document Solutions Group

CS Promotion Center

Yamatokoriyama, Nara 639-1186, Japan

WWW.SERVICE-MANUAL.NET

2011 October Produced in Japan for electronic Distribution (t)